


Motion Controller

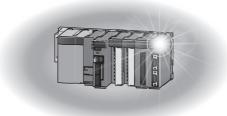

Q173D(S)CPU/Q172D(S)CPU Motion Controller Programming Manual (COMMON)

- -Q172DCPU
- -Q173DCPU
- -Q172DCPU-S1
- -Q173DCPU-S1
- -Q172DSCPU
- -Q173DSCPU





(Please read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

These precautions apply only to this product. Refer to the Q173D(S)CPU/Q172D(S)CPU Users manual for a description of the Motion controller safety precautions.

In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on circumstances, procedures indicated by CAUTION may also be linked to serious results.

In any case, it is important to follow the directions for usage.

Please save this manual to make it accessible when required and always forward it to the end user.

For Safe Operations

1. Prevention of electric shocks

⚠ DANGER

- Never open the front case or terminal covers while the power is ON or the unit is running, as this may lead to electric shocks.
- Never run the unit with the front case or terminal cover removed. The high voltage terminal and charged sections will be exposed and may lead to electric shocks.
- Never open the front case or terminal cover at times other than wiring work or periodic inspections even if the power is OFF. The insides of the Motion controller and servo amplifier are charged and may lead to electric shocks.
- Completely turn off the externally supplied power used in the system before mounting or removing the module, performing wiring work, or inspections. Failing to do so may lead to electric shocks.
- When performing wiring work or inspections, turn the power OFF, wait at least ten minutes, and then check the voltage with a tester, etc. Failing to do so may lead to electric shocks.
- Be sure to ground the Motion controller, servo amplifier and servo motor. (Ground resistance:
 100 Ω or less) Do not ground commonly with other devices.
- The wiring work and inspections must be done by a qualified technician.
- Wire the units after installing the Motion controller, servo amplifier and servo motor. Failing to do so may lead to electric shocks or damage.
- Never operate the switches with wet hands, as this may lead to electric shocks.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this may lead to electric shocks.
- Do not touch the Motion controller, servo amplifier or servo motor terminal blocks while the power is ON, as this may lead to electric shocks.
- Do not touch the built-in power supply, built-in grounding or signal wires of the Motion controller and servo amplifier, as this may lead to electric shocks.

2. For fire prevention

∆CAUTION

- Install the Motion controller, servo amplifier, servo motor and regenerative resistor on incombustible. Installing them directly or close to combustibles will lead to fire.
- If a fault occurs in the Motion controller or servo amplifier, shut the power OFF at the servo amplifier's power source. If a large current continues to flow, fire may occur.
- When using a regenerative resistor, shut the power OFF with an error signal. The regenerative resistor may abnormally overheat due to a fault in the regenerative transistor, etc., and may lead to fire
- Always take heat measures such as flame proofing for the inside of the control panel where the servo amplifier or regenerative resistor is installed and for the wires used. Failing to do so may lead to fire.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this
 may lead to fire.

3. For injury prevention

∆ CAUTION

- Do not apply a voltage other than that specified in the instruction manual on any terminal.
 Doing so may lead to destruction or damage.
- Do not mistake the terminal connections, as this may lead to destruction or damage.
- Do not mistake the polarity (+ /), as this may lead to destruction or damage.
- Do not touch the heat radiating fins of controller or servo amplifier, regenerative resistor and servo motor, etc., while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.
- Always turn the power OFF before touching the servo motor shaft or coupled machines, as these parts may lead to injuries.
- Do not go near the machine during test operations or during operations such as teaching.
 Doing so may lead to injuries.

4. Various precautions

Strictly observe the following precautions.

Mistaken handling of the unit may lead to faults, injuries or electric shocks.

(1) System structure

⚠CAUTION

- Always install a leakage breaker on the Motion controller and servo amplifier power source.
- If installation of an electromagnetic contactor for power shut off during an error, etc., is specified in the instruction manual for the servo amplifier, etc., always install the electromagnetic contactor.
- Install the emergency stop circuit externally so that the operation can be stopped immediately and the power shut off.
- Use the Motion controller, servo amplifier, servo motor and regenerative resistor with the correct combinations listed in the instruction manual. Other combinations may lead to fire or faults.
- Use the Motion controller, base unit and motion module with the correct combinations listed in the instruction manual. Other combinations may lead to faults.
- If safety standards (ex., robot safety rules, etc.,) apply to the system using the Motion controller, servo amplifier and servo motor, make sure that the safety standards are satisfied.
- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- In systems where coasting of the servo motor will be a problem during the forced stop, emergency stop, servo OFF or power supply OFF, use dynamic brakes.
- Make sure that the system considers the coasting amount even when using dynamic brakes.
- In systems where perpendicular shaft dropping may be a problem during the forced stop, emergency stop, servo OFF or power supply OFF, use both dynamic brakes and electromagnetic brakes.

∆CAUTION

- The dynamic brakes must be used only on errors that cause the forced stop, emergency stop, or servo OFF. These brakes must not be used for normal braking.
- The brakes (electromagnetic brakes) assembled into the servo motor are for holding applications, and must not be used for normal braking.
- The system must have a mechanical allowance so that the machine itself can stop even if the stroke limits switch is passed through at the max. speed.
- Use wires and cables that have a wire diameter, heat resistance and bending resistance compatible with the system.
- Use wires and cables within the length of the range described in the instruction manual.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Install a cover on the shaft so that the rotary parts of the servo motor are not touched during operation.
- There may be some cases where holding by the electromagnetic brakes is not possible due to the life or mechanical structure (when the ball screw and servo motor are connected with a timing belt, etc.). Install a stopping device to ensure safety on the machine side.

(2) Security

⚠CAUTION

To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from external devices via the network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

(3) Parameter settings and programming

▲CAUTION

- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servo motor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.
- The regenerative resistor model and capacity parameters must be set to values that conform to the operation mode, servo amplifier and servo power supply module. The protective functions may not function if the settings are incorrect.
- Set the mechanical brake output and dynamic brake output validity parameters to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Set the stroke limit input validity parameter to a value that is compatible with the system application. The protective functions may not function if the setting is incorrect.

∆CAUTION

- Set the servo motor encoder type (increment, absolute position type, etc.) parameter to a value that is compatible with the system application. The protective functions may not function if the setting is incorrect.
- Set the servo motor capacity and type (standard, low-inertia, flat, etc.) parameter to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Set the servo amplifier capacity and type parameters to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Use the program commands for the program with the conditions specified in the instruction manual.
- Set the sequence function program capacity setting, device capacity, latch validity range, I/O assignment setting, and validity of continuous operation during error detection to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Some devices used in the program have fixed applications, so use these with the conditions specified in the instruction manual.
- The input devices and data registers assigned to the link will hold the data previous to when communication is terminated by an error, etc. Thus, an error correspondence interlock program specified in the instruction manual must be used.
- Use the interlock program specified in the intelligent function module's instruction manual for the program corresponding to the intelligent function module.

(4) Transportation and installation

∆ CAUTION

- Transport the product with the correct method according to the mass.
- Use the servo motor suspension bolts only for the transportation of the servo motor. Do not transport the servo motor with machine installed on it.
- Do not stack products past the limit.
- When transporting the Motion controller or servo amplifier, never hold the connected wires or cables.
- When transporting the servo motor, never hold the cables, shaft or detector.
- When transporting the Motion controller or servo amplifier, never hold the front case as it may fall off.
- When transporting, installing or removing the Motion controller or servo amplifier, never hold the edges.
- Install the unit according to the instruction manual in a place where the mass can be withstood.
- Do not get on or place heavy objects on the product.
- Always observe the installation direction.
- Keep the designated clearance between the Motion controller or servo amplifier and control panel inner surface or the Motion controller and servo amplifier, Motion controller or servo amplifier and other devices.

⚠ CAUTION

- Do not install or operate Motion controller, servo amplifiers or servo motors that are damaged or that have missing parts.
- Do not block the intake/outtake ports of the Motion controller, servo amplifier and servo motor with cooling fan.
- Do not allow conductive matter such as screw or cutting chips or combustible matter such as oil enter the Motion controller, servo amplifier or servo motor.
- The Motion controller, servo amplifier and servo motor are precision machines, so do not drop or apply strong impacts on them.
- Securely fix the Motion controller, servo amplifier and servo motor to the machine according to the instruction manual. If the fixing is insufficient, these may come off during operation.
- Always install the servo motor with reduction gears in the designated direction. Failing to do so may lead to oil leaks.


Store and use the unit in the following environmental conditions.

	Conditions		
Environment	Motion controller/Servo amplifier	Servo motor	
Ambient temperature	According to each instruction manual.	0°C to +40°C (With no freezing) (32°F to +104°F)	
Ambient humidity	According to each instruction manual.	80% RH or less (With no dew condensation)	
Storage temperature	According to each instruction manual.	-20°C to +65°C (-4°F to +149°F)	
Atmosphere	Indoors (where not subject to direct sunlight). No corrosive gases, flammable gases, oil mist or dust must exist		
Altitude	According to each instruction manual		
Vibration	According to each instruction manual		

- When coupling with the synchronous encoder or servo motor shaft end, do not apply impact such as by hitting with a hammer. Doing so may lead to detector damage.
- Do not apply a load larger than the tolerable load onto the synchronous encoder and servo motor shaft. Doing so may lead to shaft breakage.
- When not using the module for a long time, disconnect the power line from the Motion controller or servo amplifier.
- Place the Motion controller and servo amplifier in static electricity preventing vinyl bags and store.
- When storing for a long time, please contact with our sales representative. Also, execute a trial operation.
- When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products.
 - Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.

⚠ CAUTION

- Correctly and securely wire the wires. Reconfirm the connections for mistakes and the terminal screws for tightness after wiring. Failing to do so may lead to run away of the servo motor.
- After wiring, install the protective covers such as the terminal covers to the original positions.
- Do not install a phase advancing capacitor, surge absorber or radio noise filter (option FR-BIF) on the output side of the servo amplifier.
- Correctly connect the output side (terminal U, V, W) and ground. Incorrect connections will lead
 the servo motor to operate abnormally.
- Do not connect a commercial power supply to the servo motor, as this may lead to trouble.
- Do not mistake the direction of the surge absorbing diode installed on the DC relay for the control signal output of brake signals, etc. Incorrect installation may lead to signals not being output when trouble occurs or the protective functions not functioning.

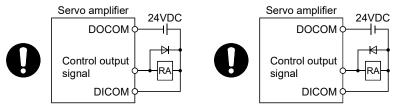

For the sink output interface

For the source output interface

- Do not connect or disconnect the connection cables between each unit, the encoder cable or PLC expansion cable while the power is ON.
- Securely tighten the cable connector fixing screws and fixing mechanisms. Insufficient fixing may lead to the cables coming off during operation.
- Do not bundle the power line or cables.

(6) Trial operation and adjustment

∆ CAUTION

- Confirm and adjust the program and each parameter before operation. Unpredictable movements may occur depending on the machine.
- Extreme adjustments and changes may lead to unstable operation, so never make them.
- When using the absolute position system function, on starting up, and when the Motion controller or absolute position motor has been replaced, always perform a home position return.
- Before starting test operation, set the parameter speed limit value to the slowest value, and make sure that operation can be stopped immediately by the forced stop, etc. if a hazardous state occurs.

(7) Usage methods

⚠ CAUTION


- Immediately turn OFF the power if smoke, abnormal sounds or odors are emitted from the Motion controller, servo amplifier or servo motor.
- Always execute a test operation before starting actual operations after the program or parameters have been changed or after maintenance and inspection.
- Do not attempt to disassemble and repair the units excluding a qualified technician whom our company recognized.
- Do not make any modifications to the unit.
- Keep the effect or electromagnetic obstacles to a minimum by installing a noise filter or by using wire shields, etc. Electromagnetic obstacles may affect the electronic devices used near the Motion controller or servo amplifier.
- When using the CE Mark-compliant equipment, refer to the User's manual for the Motion controllers and refer to the corresponding EMC guideline information for the servo amplifiers, inverters and other equipment.
- Use the units with the following conditions.

Item	Conditions
Input power	According to each instruction manual.
Input frequency	According to each instruction manual.
Tolerable momentary power failure	According to each instruction manual.

(8) Corrective actions for errors

∆CAUTION

- If an error occurs in the self diagnosis of the Motion controller or servo amplifier, confirm the check details according to the instruction manual, and restore the operation.
- If a dangerous state is predicted in case of a power failure or product failure, use a servo motor with electromagnetic brakes or install a brake mechanism externally.
- Use a double circuit construction so that the electromagnetic brake operation circuit can be operated by emergency stop signals set externally.

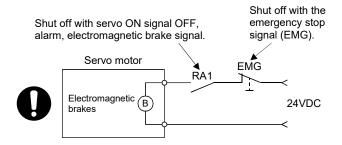

- If an error occurs, remove the cause, secure the safety and then resume operation after alarm release.
- The unit may suddenly resume operation after a power failure is restored, so do not go near the machine. (Design the machine so that personal safety can be ensured even if the machine restarts suddenly.)

⚠ CAUTION

- Perform the daily and periodic inspections according to the instruction manual.
- Perform maintenance and inspection after backing up the program and parameters for the Motion controller and servo amplifier.
- Do not place fingers or hands in the clearance when opening or closing any opening.
- Periodically replace consumable parts such as batteries according to the instruction manual.
- Do not touch the lead sections such as ICs or the connector contacts.
- Before touching the module, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.
- Do not directly touch the module's conductive parts and electronic components.
 Touching them could cause an operation failure or give damage to the module.
- Do not place the Motion controller or servo amplifier on metal that may cause a power leakage or wood, plastic or vinyl that may cause static electricity buildup.
- Do not perform a megger test (insulation resistance measurement) during inspection.
- When replacing the Motion controller or servo amplifier, always set the new module settings correctly.
- When the Motion controller or absolute value motor has been replaced, carry out a home position return operation using one of the following methods, otherwise position displacement could occur.
 - 1) After writing the servo data to the Motion controller using programming software, switch on the power again, then perform a home position return operation.
 - 2) Using the backup function of the programming software, load the data backed up before replacement.
- After maintenance and inspections are completed, confirm that the position detection of the absolute position detector function is correct.
- Do not drop or impact the battery installed to the module.
 Doing so may damage the battery, causing battery liquid to leak in the battery. Do not use the dropped or impacted battery, but dispose of it.
- Do not short circuit, charge, overheat, incinerate or disassemble the batteries.
- The electrolytic capacitor will generate gas during a fault, so do not place your face near the Motion controller or servo amplifier.
- ◆ The electrolytic capacitor and fan will deteriorate. Periodically replace these to prevent secondary damage from faults. Replacements can be made by our sales representative.
- Lock the control panel and prevent access to those who are not certified to handle or install electric equipment.
- Do not burn or break a module and servo amplifier. Doing so may cause a toxic gas.

(10) About processing of waste

When you discard Motion controller, servo amplifier, a battery (primary battery) and other option articles, please follow the law of each country (area).

⚠CAUTION

- This product is not designed or manufactured to be used in equipment or systems in situations that can affect or endanger human life.
- When considering this product for operation in special applications such as machinery or systems used in passenger transportation, medical, aerospace, atomic power, electric power, or submarine repeating applications, please contact your nearest Mitsubishi Electric sales representative.
- Although this product was manufactured under conditions of strict quality control, you are strongly advised to install safety devices to forestall serious accidents when it is used in facilities where a breakdown in the product is likely to cause a serious accident.

(11) General cautions

• All drawings provided in the instruction manual show the state with the covers and safety partitions removed to explain detailed sections. When operating the product, always return the covers and partitions to the designated positions, and operate according to the instruction manual.

REVISIONS

* The manual number is given on the bottom left of the back cover.

		* The manual number is given on the bottom left of the back cover.
Print Date	* Manual Number	Revision
Sep., 2007	IB(NA)-0300134-A	First edition
Sep., 2010	IB(NA)-0300134-B	[Additional model/function] Software for SV43, Amplifier-less operation function, Q10UD(E)HCPU, Q13UD(E)HCPU, Q20UD(E)HCPU, Q26UD(E)HCPU, QX40H, QX70H, QH80H, QX90H, MR-J3-□BS [Additional correction/partial correction]
		Safety precautions, About Manuals, Restrictions by the software's version, Checking serial number and operating system software version, Servo parameters, Warranty
Sep., 2011	IB(NA)-0300134-C	[Additional model] Q173DCPU-S1, Q172DCPU-S1, Q50UDEHCPU, Q100UDEHCPU, GX Works2, MR Configurator2 [Additional function] External input signal (DOG) of servo amplifier, Communication via PERIPHERAL I/F [Additional correction/partial correction]
		Safety precautions, About Manuals, Restrictions by the software's version
Mar., 2012	IB(NA)-0300134-D	[Additional model] Q173DSCPU, Q172DSCPU, MR-J4-□B, MR-J4W-□B, [Additional function] Servo external signal parameters, Software security key, Mark detection function
		[Additional correction/partial correction] About Manuals, Manual Page Organization, Restrictions by the software's version, Programming software version, Individual parameters, Servo parameter change function, Optional data monitor function, Special relays/Special registers list, System setting errors, Differences between Motion CPU
Sep., 2012	IB(NA)-0300134-E	[Additional function] Advanced synchronous control, High-speed input request signal setting [Additional correction/partial correction] About Manuals, Restrictions by the software's version, Programming software version, Individual parameters, Limit switch output function, Protection by password, Mark detection function, Special relays/ Special registers list, Self-diagnosis error, Differences between Motion CPU
Apr., 2013	IB(NA)-0300134-F	[Additional model] LJ72MS15, Intelligent function module [Additional function] Driver communication function, Connection of SSCNETI/H head module [Additional correction/partial correction] About Manuals, Restrictions by the software's version, System data setting list, Individual parameters, Special relays/Special registers list, System setting error, Self-diagnosis error, Differences between Motion CPU
Nov., 2013	IB(NA)-0300134-G	[Additional correction/partial correction] Safety precautions, Restrictions by the software's version, System data setting list, Optional data monitor function, Driver communication function (SSCNETI/H), Special registers list, System setting error, Self-diagnosis error, Differences between Motion CPU

Print Date	* Manual Number	Revision
Dec., 2015	IB(NA)-0300134-H	[Additional correction/partial correction]
DCC., 2013	10(14/1)-0000104-11	Other restrictions, Restrictions by the software's version, System data
		setting list, Limit output setting data, Optional data monitor function,
		Connect/disconnect function of SSCNET communication,
		Communication function via PERIPHERAL I/F, Mark detection setting,
		Special registers, Self-diagnosis error, Differences between
		Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/
		Q173HCPU/Q172HCPU, Warranty
Mar., 2017	IB(NA)-0300134-J	[Additional correction/partial correction]
, _0	.=(,	Safety precautions, Other restrictions, Restrictions by the software's
		version, System data setting list, Optional data monitor function, MC
		protocol communication, Mark detection function, Special registers,
		System setting errors, Differences between Motion CPU, Warranty
Dec., 2019	IB(NA)-0300134-K	
,	(,	Equipment configuration in system
Apr., 2022	IB(NA)-0300134-L	[Additional model]
, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	.= () 55551512	MR-J5-□B, MR-J5W-□B
		[Additional correction/partial correction]
		Safety precautions, About Manuals, Equipment configuration in system,
		System overall configuration, Other restrictions, Restrictions by the
		software's version, System data setting list, Individual parameters,
		Servo parameter read/change function, Optional data monitor function,
		Special registers list, System setting error, Motion CPU self error,
		Differences between Motion CPU, Warranty
Dec., 2023	IB(NA)-0300134-M	[Additional model]
		MR-JE-□B
		[Additional function]
		Hot line forced stop function
		[Additional correction/partial correction]
		About Manuals, Equipment configuration in system,
		Q173DSCPU/Q172DSCPU system overall configuration, Restrictions
		on motion systems, Restrictions by the software's version, System
		data setting list, Servo parameter read/change function, Optional data
		monitor function, Amplifier-less operation function, Driver
		communication function, Special register list, System setting errors,
		Motion CPU-specific errors
Sep., 2024	IB(NA)-0300134-N	[Additional correction/partial correction]
		Restrictions by the software's version, Mark detection setting, Fixed
		cycle system processing time monitor, Special relays/Special registers
		list, System setting errors

Japanese Manual Number IB(NA)-0300126

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

INTRODUCTION

Thank you for choosing the Mitsubishi Electric Motion controller Q173D(S)CPU/Q172D(S)CPU. Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Motion controller you have purchased, so as to ensure correct use.

CONTENTS

Safety Precautions	A- 1
Revisions	A-11
Contents	A-13
About Manuals	A-16
Manual Page Organization	A-19
1. OVERVIEW	1- 1 to 1-36
1.1 Overview	1- 1
1.2 Features	1- 3
1.2.1 Features of Motion CPU	1- 3
1.2.2 Basic specifications of Q173D(S)CPU/Q172D(S)CPU	1- 5
1.3 Hardware Configuration	
1.3.1 Motion system configuration	1-11
1.3.2 Q173DSCPU/Q172DSCPU System overall configuration	1-14
1.3.3 Q173DCPU(-S1)/Q172DCPU(-S1) System overall configuration	1-16
1.3.4 Software packages	1-18
1.3.5 Restrictions on motion systems	1-20
1.4 Checking Serial Number and Operating System Software Version	1-25
1.4.1 Checking serial number	1-25
1.4.2 Checking operating system software version	1-28
1.5 Restrictions by the Software's Version	1-30
1.6 Programming Software Version	1-36
2. MULTIPLE CPU SYSTEM	2- 1 to 2-36
O.A.M. ICAL ODILIO A tare	0 1
2.1 Multiple CPU System	
2.1.1 Overview	
2.1.2 Installation position of CPU module	
2.1.3 Precautions for using I/O modules and intelligent function modules	
2.1.4 Modules subject to installation restrictions	
2.1.5 How to reset the Multiple CPU system	
2.1.6 Operation for CPU module stop error	
Starting Up the Multiple CPU System	
· · · · · · · · · · · · · · · · · · ·	
2.3 Communication Between the PLC CPU and the Motion CPU in the Multiple CPU System	
2.3.1 CPU shared memory 2.3.2 Multiple CPU high speed transmission	
2.3.3 Multiple CPU high speed refresh function	
2.3.4 Clock synchronization between Multiple CPU	
2.3.5 Multiple CPU synchronous startup	2-35 2-36

3. COMMON PARAMETERS	3- 1 to 3-30
0.4.0 4 0.45	
3.1 System Settings	
3.1.1 System data settings	
3.1.2 Common system parameters	
3.1.3 Individual parameters	
3.2 I/O Number Assignment.	
3.2.1 I/O number assignment of each module	
3.2.2 I/O number of each CPU module	
3.2.3 I/O number setting	
3.3 Servo Parameters	
3.4 Servo External Signal Parameters	3-27
4. AUXILIARY AND APPLIED FUNCTIONS	4- 1 to 4-124
4.1 Limit Switch Output Function	<i>A</i> ₋ 1
4.1.1 Operations	
4.1.2 Limit output setting data	
4.1.3 Operations (SV22 advanced synchronous control only)	
4.1.4 Limit output setting data (SV22 advanced synchronous control only)	
4.2 Absolute Position System	
4.2.1 Current value control	
4.3 High-Speed Reading of Specified Data	
4.4 ROM Operation Function	
4.4.1 Specifications of 7-segment LED/switches	
4.4.2 Outline of ROM operation	
4.4.3 Operating procedure of the ROM operation function	
4.5 Security Function	
4.5.1 Protection by password	
4.5.2 Protection by software security key	
4.6 All Clear Function	
4.7 Communication Via Network	
4.7.1 Specifications of the communications via network	
4.8 Monitor Function of the Main Cycle	
4.9 Servo Parameter Read/Change Function	
4.10 Optional Data Monitor Function	
4.11 SSCNET Control Function	
4.11.1 Connect/disconnect function of SSCNET communication	
4.11.2 Amplifier-less operation function	
4.12 Remote Operation	
4.12.1 Remote RUN/STOP	
4.12.2 Remote latch clear	
4.13 Communication Function via PERIPHERAL I/F	
4.13.1 Direct connection.	
4.13.2 Connection via HUB.	
4.13.3 MC protocol communication	
4.14 Mark Detection Function	
4.14.1 Operations	
4 14 2 Mark detection setting	4-84

4.15 High-speed Input Request Signal Setting (SV22 advanced synchronous control only)	4-96
4.16 Driver Communication Function	4-99
4.16.1 Control details	4-100
4.16.2 Precautions during control	4-101
4.16.3 Servo parameter	4-105
4.17 Intelligent Function Modules Controlled by Motion CPU	4-106
4.18 Connection of SSCNET I /H Head Module	4-109
4.18.1 System configuration	4-109
4.18.2 SSCNET Ⅲ /H head module parameters	4-110
4.18.3 Data operation of intelligent function module by Motion SFC program	
4.18.4 Data of refresh device	4-118
4.18.5 Precautions when using SSCNET Ⅲ /H head module	4-118
4.19 Fixed Cycle System Processing Time Monitor	4-119
4.19.1 Fixed cycle system processing time	4-119
4.19.2 Maximum fixed cycle system processing time	
4.20 Hot Line Forced Stop Function	4-121
4.20.1 Control details.	4-122
4.20.2 Precautions	4-123
APPENDICES AP	P- 1 to APP-51
ADDENDIV 4.0 - in D. Inne (On the D. Inne	ADD 4
APPENDIX 1 Special Relays/Special Registers	
APPENDIX 1.1 Special relays	
APPENDIX 1.2 Special registers	
APPENDIX 3. Systems Setting Foreign	
APPENDIX 2 System Setting Errors	
APPENDIX 3 Self-diagnosis Error	
APPENDIX 4 Differences Between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCP	, ,
Q173HCPU/Q172HCPU	
APPENDIX 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172EQ173HCPU/Q172HCPU	` ,
APPENDIX 4.2 Comparison of devices	
APPENDIX 4.3 Differences of the operating system software	APP-49

About Manuals

The following manuals are also related to this product.

When necessary, order them by quoting the details in the tables below.

Related Manuals

(1) Motion controller

Manual Name	Manual Number (Model Code)
Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual This manual explains specifications of the Motion CPU modules, Q172DLX Servo external signal interface module, Q172DEX Synchronous encoder interface module, Q173DPX Manual pulse generator interface module, Power supply modules, Servo amplifiers, SSCNETII cables and Synchronous encoder, and the maintenance/inspection for the system, trouble shooting and others.	IB-0300133 (1XB927)
Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) This manual explains the Multiple CPU system configuration, performance specifications, common parameters, auxiliary/applied functions, error lists and others.	IB-0300134 (1XB928)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC) This manual explains the functions, programming, debugging, error lists for Motion SFC and others.	IB-0300135 (1XB929)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE) This manual explains the servo parameters, positioning instructions, device lists, error lists and others.	IB-0300136 (1XB930)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE) This manual explains the dedicated instructions to use the synchronous control by virtual main shaft, mechanical system program create mechanical module, servo parameters, positioning instructions, device lists, error lists and others.	IB-0300137 (1XB931)
Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control) This manual explains the dedicated instructions to use the synchronous control by synchronous control parameters, device lists, error lists and others.	IB-0300198 (1XB953)
Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation) This manual explains the details, safety parameters, safety sequence program instructions, device lists and error lists and others for safety observation function by Motion controller.	IB-0300183 (1XB945)
Motion controller Setup Guidance (MT Developer2 Version1) This manual explains the items related to the setup of the Motion controller programming software MT Developer2.	IB-0300142 (—)

(2) PLC

Manual Name	Manual Number (Model Code)
QCPU User's Manual (Hardware Design, Maintenance and Inspection) This manual explains the specifications of the QCPU modules, power supply modules, base units, extension cables, memory card battery, and the maintenance/inspection for the system, trouble shooting, error codes and others.	SH-080483ENG (13JR73)
QnUCPU User's Manual (Function Explanation, Program Fundamentals) This manual explains the functions, programming methods and devices and others to create programs with the QCPU.	SH-080807ENG (13JZ27)
QCPU User's Manual (Multiple CPU System) This manual explains the Multiple CPU system overview, system configuration, I/O modules, communication between CPU modules and communication with the I/O modules or intelligent function modules.	SH-080485ENG (13JR75)
QnUCPU User's Manual (Communication via Built-in Ethernet Port) This manual explains functions for the communication via built-in Ethernet port of the CPU module.	SH-080811ENG (13JZ29)
MELSEC-Q/L Programming Manual (Common Instruction) This manual explains how to use the sequence instructions, basic instructions, application instructions and micro computer program.	SH-080809ENG (13JW10)
MELSEC-Q/L/QnA Programming Manual (PID Control Instructions) This manual explains the dedicated instructions used to exercise PID control.	SH-080040 (13JF59)
MELSEC-Q/L/QnA Programming Manual (SFC) This manual explains the system configuration, performance specifications, functions, programming, debugging, error codes and others of MELSAP3.	SH-080041 (13JF60)
I/O Module Type Building Block User's Manual This manual explains the specifications of the I/O modules, connector, connector/terminal block conversion modules and others.	SH-080042 (13JL99)
MELSEC-L SSCNETII/H Head Module User's Manual This manual explains specifications of the head module, procedures before operation, system configuration, installation, wiring, settings, and troubleshooting.	SH-081152ENG (13JZ78)

(3) Servo amplifier

Manual Name	Manual Number (Model Code)
MR-J5-B/MR-J5W-B User's Manual (Introduction) This manual explains the specifications, functions, start-up procedure and others for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	IB-0300578ENG (—)
MR-J5 User's Manual (Hardware) This manual explains the installation, wiring, use option and others for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030298ENG (—)
MR-J5 User's Manual (Function) This manual explains how to use each function required to operate the AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030300ENG (—)
MR-J5 User's Manual (Adjustment) This manual explains the operation status adjustment procedure, adjustment method and others for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030306ENG (—)
MR-J5 User's Manual (Troubleshooting) This manual explains the causes of alarms, and warnings, etc. for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030312ENG (—)
MR-J5-B/MR-J5W-B User's Manual (Parameters) This manual explains the parameters for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	IB-0300581ENG (—)
SSCNETII/H Interface AC Servo MR-J4B_(-RJ) Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for AC Servo MR-J4B_(-RJ) Servo amplifier.	SH-030106 (1CW805)
SSCNETII/H Interface Multi-axis AC Servo MR-J4W2B/MR-J4W3B/MR-J4W2-0303B6 Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Multi-axis AC Servo MR-J4W2B/MR-J4W3B/MR-J4W2-0303B6 Servo amplifier.	SH-030105 (1CW806)
SSCNETII interface MR-J3-□B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-J3-□B Servo amplifier.	SH-030051 (1CW202)
SSCNETII interface 2-axis AC Servo Amplifier MR-J3W-0303BN6/MR-J3W-□B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for 2-axis AC Servo Amplifier MR-J3W-0303BN6/MR-J3W-□B Servo amplifier.	SH-030073 (1CW604)
SSCNETII Compatible Linear Servo MR-J3-□B-RJ004U□ Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Linear Servo MR-J3-□B-RJ004U□ Servo amplifier.	SH-030054 (1CW943)
SSCNETII Compatible Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier.	SH-030056 (1CW304)
SSCNETII Interface Direct Drive Servo MR-J3-□B-RJ080W Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Direct Drive Servo MR-J3-□B-RJ080W Servo amplifier.	SH-030079 (1CW601)

Manual Name	Manual Number (Model Code)
SSCNETII interface Drive Safety integrated MR-J3-□B Safety Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for safety integrated MR-J3-□B Safety Servo amplifier.	SH-030084 (1CW205)
SSCNETⅢ/H interface AC Servo MR-JEB Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-JE-□B Servo amplifier.	SH-030152ENG (—)
SSCNETII/H interface AC Servo With functional safety MR-JEBF Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-JE-□BF Servo amplifier.	SH-030258ENG (—)

Manual Page Organization

The symbols used in this manual are shown below.

Symbol	Description
QDS(Symbol that indicates correspondence to only Q173DSCPU/Q172DSCPU.
QD	Symbol that indicates correspondence to only Q173DCPU(-S1)/Q172DCPU(-S1).

MEMO			

1. OVERVIEW

1.1 Overview

This programming manual describes the common items of each operating system software, such as the Multiple CPU system of the operating system software packages "SW7DNC-SVQQ" and "SW8DNC-SVQQ" for Motion CPU module (Q173D(S)CPU/Q172D(S)CPU).

In this manual, the following abbreviations are used.

Generic term/Abbreviation	Description			
Q173D(S)CPU/Q172D(S)CPU or	Q173DSCPU/Q172DSCPU/Q173DCPU/Q172DCPU/Q173DCPU-S1/			
Motion CPU (module)	Q172DCPU-S1 Motion CPU module			
	Q172DLX Servo external signals interface module/			
Q172DLX/Q172DEX/Q173DPX/	Q172DEX Synchronous encoder interface module ^(Note-1) /			
Q173DSXY or Motion module	Q173DPX Manual pulse generator interface module/			
	Q173DSXY Safety signal module			
MR-J5(W)-□B	Servo amplifier model MR-J5-□B/MR-J5W-□B			
MR-J4(W)-□B	Servo amplifier model MR-J4-□B/MR-J4W-□B			
MR-J3(W)-□B	Servo amplifier model MR-J3-□B/MR-J3W-□B			
MR-JE-□B	Servo amplifier model MR-JE-□B/MR-JE-□BF			
	General name for "Servo amplifier model MR-J5-□B/MR-J5W-□B/MR-J4-□B/			
AMP or Servo amplifier	MR-J4W-□B/MR-J3-□B/MR-J3W-□B/MR-JE-□B/MR-JE-□BF"			
QCPU, PLC CPU or PLC CPU module	QnUD(E)(H)CPU/QnUDVCPU			
Multiple CPU system or Motion system	Abbreviation for "Multiple PLC system of the Q series"			
	Abbreviation for "CPU No.n (n= 1 to 4) of the CPU module for the Multiple CPU			
CPUn	system"			
Operating system software	General name for "SW7DNC-SV□Q□/SW8DNC-SV□Q□"			
0.440	Operating system software for conveyor assembly use (Motion SFC) :			
SV13	SW8DNC-SV13Q□			
6) (00	Operating system software for automatic machinery use (Motion SFC) :			
SV22	SW8DNC-SV22Q□			
01/40	Operating system software for machine tool peripheral use :			
SV43	SW7DNC-SV43Q□			
Programming software package	General name for MT Developer2/GX Works2/GX Developer/MR Configurator□			
MTW 1.0	Abbreviation for "Motion controller engineering environment MELSOFT			
MT Works2	MT Works2"			
NAT D (Note-2)	Abbreviation for "Motion controller programming software MT Developer2			
MT Developer2 ^(Note-2)	(Version 1.00A or later)"			
07/11/10	Abbreviation for "Programmable controller engineering software			
GX Works2	MELSOFT GX Works2 (Version 1.15R or later)"			
0/5	Abbreviation for "MELSEC PLC programming software package			
GX Developer	GX Developer (Version 8.48A or later)"			
MR Configurator□ ^(Note-2)	General name for "MR Configurator/MR Configurator2"			
	Abbreviation for "Servo setup software package			
MR Configurator	MR Configurator (Version C0 or later)"			
MP Configurator?	Abbreviation for "Servo setup software package			
MR Configurator2	MR Configurator2 (Version 1.01B or later)"			
Manual pulse generator or MR-HDP01	Abbreviation for "Manual pulse generator (MR-HDP01)"			

Generic term/Abbreviation	Description
Serial absolute synchronous encoder or Q171ENC-W8/Q170ENC	Abbreviation for "Serial absolute synchronous encoder (Q171ENC-W8/Q170ENC)"
SSCNETII/H ^(Note-3) SSCNETIII ^(Note-3)	High speed synchronous network between Motion controller and servo amplifier
SSCNETII(/H)(Note-3)	General name for SSCNETⅢ/H, SSCNETⅢ
Absolute position system	General name for "system using the servo motor and servo amplifier for absolute position"
Battery holder unit	Battery holder unit (Q170DBATC)
Intelligent function module	General name for module that has a function other than input or output such as A/D converter module and D/A converter module.
SSCNETⅢ/H head module	Abbreviation for "MELSEC-L series SSCNETⅢ/H head module (LJ72MS15)"
Optical hub unit or MR-MV200	Abbreviation for "SSCNETII/H compatible optical hub unit (MR-MV200)"

(Note-1): Q172DEX can be used in SV22.

(Note-2): This software is included in Motion controller engineering environment "MELSOFT MT Works2".

(Note-3): SSCNET: Servo System Controller NETwork

REMARK

For information about each module, design method for program and parameter, refer to the following manuals relevant to each module.

	Item	Reference Manual
Motion CPU module/Motion unit		Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual
PLC CPU, peripheral devices for sequence program design, I/O modules and intelligent function module		Manual relevant to each module
Operation meth	od for MT Developer2	Help of each software
	 Design method for Motion SFC program Design method for Motion SFC parameter Motion dedicated PLC instruction 	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)
SV13/SV22	 Design method for positioning control program in the real mode Design method for positioning control parameter 	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)
	 Design method for safety observation parameter Design method for user made safety sequence program 	Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)
SV22 (Virtual mode)	Design method for mechanical system program	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)
SV22	F53-5	
(Advanced • Design method for synchronous control parameter control)		Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

1.2 Features

The Motion CPU and Multiple CPU system have the following features.

1.2.1 Features of Motion CPU

(1) Q series PLC Multiple CPU system

- (a) Load distribution of processing can be performed by controlling the complicated servo control with Motion CPU and the machine control or information control with PLC CPU. Therefore, the flexible system configuration can be realized.
- (b) The Motion CPU and PLC CPU are selected flexibly, and the Multiple CPU system up to 4 CPU modules can be realized.

The Motion CPU module for the number of axis to be used can be selected.

Q173DSCPU: Up to 32 axes Q172DSCPU: Up to 16 axes Q173DCPU(-S1): Up to 32 axes Q172DCPU(-S1): Up to 8 axes

The PLC CPU module for the program capacity to be used can be selected. (One or more PLC CPU is necessary with the Multiple CPU system.)

(c) The device data access of the Motion CPU and the Motion SFC program (SV13/SV22)/Motion program (SV43) start can be executed from PLC CPU by the Motion dedicated PLC instruction.

(2) High speed operation processing

- (a) The minimum operation cycle of the Motion CPU is made 0.22[ms] (Q173DSCPU/Q172DSCPU use), and it correspond with high frequency operation.
- (b) High speed PLC control is possible by the universal model QCPU.
- (3) Connection between the Motion controller and servo amplifier with high speed synchronous network by SSCNETⅢ(/H)
 - (a) High speed synchronous network by SSCNETI(/H) connect between the Motion controller and servo amplifier, and batch control the charge of servo parameter, servo monitor and test operation, etc. It is also realised reduce the number of wires.
 - (b) The maximum distance between the Motion CPU and servo amplifier, servo amplifier and servo amplifier of the SSCNETII cable on the same bus was set to 100(328.08)[m(ft.)] for SSCNETII/H, 50(164.04)[m(ft.)] for SSCNETII, and the flexibility improved at the Motion system design.

- (4) The operating system software package for your application needs By installing the operating system software for applications in the internal flash memory of the Motion CPU, the Motion controller suitable for the machine can be realized. And, it also can correspond with the function improvement of the software package.
 - (a) Conveyor assembly use (SV13) Offer linear interpolation, circular interpolation, helical interpolation, constant-speed control, speed control, fixed-pitch feed and etc. by the dedicated servo instruction. Ideal for use in conveyors and assembly machines.
 - (b) Automatic machinery use (SV22) In addition to the functions (real mode) equivalent to the software package for conveyor assembly use (SV13), provides synchronous control and offers electronic cam control. Ideal for use in automatic machinery.
 - Q173DSCPU/Q172DSCPU
 Select the operation method from the following methods when installing the operating system software.

The operation method can be switched by using MT Developer2.

- Virtual mode switching method:
 By using the common device (real mode/virtual mode switching request flag), switching between the positioning control in the real mode and the synchronous control, electronic cam control by mechanical support language (virtual mode) is enabled.
- Advanced synchronous control method:
 In addition to the positioning control in the real mode, provides synchronous control by setting the synchronous control parameter (advanced synchronous control) by using the synchronous control start signal for each axis.
- Q173DCPU(-S1)/Q172DCPU(-S1)
 By using the common device (real mode/virtual mode switching request flag), switching between the positioning control in the real mode and the synchronous control, electronic cam control by mechanical support language (virtual mode) is enabled.
- (c) Machine tool peripheral use (SV43) Offer linear interpolation, circular interpolation, helical interpolation, constant speed positioning and etc. by the EIA language (G-code). Ideal for use in machine tool peripheral.

1.2.2 Basic specifications of Q173D(S)CPU/Q172D(S)CPU

(1) Module specifications

Item	Q173DSCPU	Q172DSCPU	Q173DCPU	Q173DCPU-S1	Q172DCPU	Q172DCPU-S1
Internal current consumption (5VDC) [A]	1.75 ^(Note-1)	1.44 ^(Note-1)	1.25	1.30	1.25	1.30
Mass [kg]	0.38		0.33			
Exterior dimensions [mm(inch)]	120.5 (4.74)(H) × 27.4 (1.08)(W) × 120.3 (4.74)(D)		98 (3.85)(H) × 27.4 (1.08)(W) × 119.3 (4.70)(D)			.70)(D)

(Note-1): The current consumption (0.2[A]) of manual pulse generator/incremental synchronous encoder connected to the internal I/F connector is not included.

(2) SV13/SV22 Motion control specifications/performance specifications

(a) Motion control specifications

Item		Q173DSCPU	Q172DSCPU	O172DCDLI/ S1)	O172DCDLI/ S4)	
Number of control axes				Q173DCPU(-S1)	Q172DCPU(-S1)	
	SV13	Up to 32 axes 0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 24 axes	Up to 16 axes 0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 16 axes	Up to 32 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 18 axes 1.77ms/19 to 32 axes	Up to 8 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 8 axes	
Operation cycle (default)	Operation cycle (default)	1.77ms/25 to 32 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes 1.77ms/17 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 12 axes 1.77ms/13 to 28 axes 3.55ms/29 to 32 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 8 axes	
Interpolation function	ons	Linear interpolation (Up to 4 axes), Circular inte	rpolation (2 axes), Helical	interpolation (3 axes)	
Control modes		Speed-position switching Constant speed control, I Speed control with Speed switch High-speed ose Speed-torce Synchronous control	Position follow-up control, fixed position stop, thing control, cillation control, que control, (SV22 (Virtual mode ced synchronous control)	PTP(Point to Point) control, Speed control, Speed-position switching control, Fixed-pitch fe Constant speed control, Position follow-up cont Speed control with fixed position stop, Speed switching control, High-speed oscillation control, Synchronous control (SV22)		
Acceleration/ deceleration contro	ol .	Trapezoid		eration/deceleration, S-curve acceleration/deceleration, /anced S-curve acceleration/deceleration		
Compensation			n (SV22)			
Programming language		Motion SFC, Dedicated instruction, Mechanical support language (SV22) (Note-1)		Motion SFC, Dedicated instruction, Mechanical support language (SV22)		
Servo program capacity				steps		
Number of position		32	00 points (Positioning data	can be designated indirec	tly)	
Peripheral I/F			net (Via PLC CPU) /F (Motion CPU)	USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU) (Note-2)		

Motion control specifications (continued)

11		-	0472000001	,	047000011/ 04\
<u>Ite</u>	m	Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)
		Proximity dog method (2 types),			
		Count method (3 types),		Proximity dog method (2 types),	
		Data set method (2 types), Dog cradle method,		Count method (3 types),	
		Stopper met	nod (2 types),	Data set method (2 types), Dog cradle method	
Home position re	turn function		mbined method,		nod (2 types),
		Scale home position s	gnal detection method,	Limit switch cor	mbined method,
		Dogless home position	signal reference method,	Scale home position s	ignal detection method
		Driver home posi	ion return method		
		Home position	return re-try function provi	ded, home position shift fu	nction provided
JOG operation fu	ınction		Prov	rided	
Manual pulsa gay	norotor	Possible to connect 3 n	nodules (Q173DPX use)		
Manual pulse ger		Possible to co	nnect 1 module	Possible to connect 3 m	nodules (Q173DPX use)
operation function	n	(Built-in interface in M	otion CPU use) (Note-3)		
		Possible to connect 1	2 modules (SV22 use)		
			X + Built-in interface in	Possible to connect 12	Possible to connect 8
Synchronous end	coder operation	Motion CPU + V	ia device (Note-5)	modules (SV22 use)	modules (SV22 use)
function (Note-4)			ote-5), (Note-6) + Multiple	(Q172DEX + Q173DPX)	(Q172DEX + Q173DPX)
			is control (Note-5)		
M-code function		·	put function provided, M-c	ode completion wait function	on provided
5545 (4) (545)		111 3540 04		t points 32 points	
	SV13		Watch data: Motion co	•	
		Virtual mode switching m		The state of the s	
Limit switch outp	ut	Virtual mode switching method: Number of output points 32 points			
function		Advanced synchronous of		Number of output points 32 points Watch data: Motion control data/Word device	
Turiotion	SV22	•	nts 64 points × 2 settings		
		Output timing compe			
		· · · · · · · · · · · · · · · · · · ·			
ROM operation for	unction	Watch data: Motion contr	Prov	idad	
Multiple CPU syr			1100	lucu	
control (Note-5)	iorii oriodo	Prov	rided	No	one
		Q172DLX, External inpu	signals (FLS/RLS/DOG)	047001.V	
External input sig	ınal	of servo	amplifier,	Q172DLX or External input signals	
		Built-in interface in Mot	on CPU (DI), Bit device	(FLS/RLS/DOG) of servo amplifier	
			rided	_	
High-speed read	ing function		ce in Motion CPU,		vided
(Note-7)	5	,	module,	, ,	e, Via tracking of
			72DEX/Q173DPX)	Q172DEX/	(Q173DPX)
			on controller forced stop (E	MI connector System set	ting).
Forced Stop				al of servo amplifier	<i></i>
		Total 25	i6 points		
Number of I/O po	oints		on CPU (Input 4 points) +		66 points
Trained of 1/0 points		·	ent function module)	(I/O m	odule)
			etection mode,		
	Mark detection		of detection mode,		
n	mode setting	· · · · · · · · · · · · · · · · · · ·	fer mode		
Mark detection	Mark detection		otion CPU (4 points),	Ne	one
function	signal		IGE signal of Q172DLX	INC	
	Mark detection	Dit device, DOG/CITAL	IOL SIGNAL OF QTZDLA		
	setting	32 se	ettings		
Clock function	seung		Prov	ided	
CIOCK IUIICUOII		Drov	rided		vided
Security function			rided security key or password)		
,		T (Flotection by software s	became key or password)	(Protection by password)	

Motion control specifications (continued)

Ite	em	Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)	
All clear function	า		Pro	vided		
Remote operation	on	Remote RUN/STOP, Remote latch clear				
Optional data	SSCNETII/H	'	Up to 6 data/axis (Communication data: Up to 6 points/axis)		ne	
monitor function	SSCNETIII		Up to 3	data/axis a: Up to 3 points/axis)		
Digital oscillosco	ope function	(Real-time wavefor	ering method m can be displayed) ord 16CH, Bit 16CH	Motion buffe (Real-time waveforr Sampling data: W	n can be displayed)	
Absolute positio	n system	Made compatible by setting battery to servo amplifier. (No battery required when a servo motor with a batteryless absolute position encoder is used (Possible to select the absolute data method or incremental method for each axis)			ion encoder is used)	
SSCNET	Communication type	SSCNETII/I	SSCNETII/H, SSCNETII		NETII	
communication (Note-8)	Number of lines	2 lines (Note-9)	1 line (Note-9)	2 lines	1 line	
Driver communication function (Note-10)		Provided		None		
	Q172DLX	4 modules usable	2 modules usable	4 modules usable	1 module usable	
Number of	Q172DEX		6 modules usable		4 modules usable	
Motion related modules	Q173DPX	4 modules usable ^{(Note-11})	3 modules usable (Note-11)	
Number of SSCNETII/H head Up to 8 stations usable up to 4 stations/line) Up to 4 stations/line)		Up to 4 stations usable	Unus	able		
Number of optic	al hub unit	Up to 32 units usable (Up to 16 units/line) Up to 16 units usable Up to 16 units usable Unusable		able		

- (Note-1): SV22 virtual mode only
- (Note-2): Q173DCPU-S1/Q172DCPU-S1 only
- (Note-3): When the manual pulse generator is used via the built-in interface in Motion CPU, the Q173DPX cannot be used.
- (Note-4): Any incremental synchronous encoder connected to the built-in interface in Motion CPU will automatically be assigned an Axis No. one integer greater than the number of encoders connected to any Q172DEX modules and Q173DPX modules.
- (Note-5): SV22 advanced synchronous control only
- (Note-6): Servo amplifier (MR-J5(W)- \square B/MR-J4(W)- \square B) only.
 - Refer to "Q173DSCPU/Q172DSCPU Motion controller Programming Manual (Advanced Synchronous Control)" for details on devices that can be used as a synchronous encoder axis.
- (Note-7): This cannot be used in SV22 advanced synchronous control.
- (Note-8): The servo amplifiers for SSCNET cannot be used.
- (Note-9): SSCNETⅢ and SSCNETⅢ/H cannot be combined in the same line.
 - For Q173DSCPU, SSCNETIII or SSCNETIII/H can be set every line.
- (Note-10): Servo amplifier (MR-J5-□B/MR-J4-□B/MR-J3-□B) only.
- (Note-11): When using the incremental synchronous encoder (SV22 use), you can use above number of modules. When connecting the manual pulse generator, you can use only 1 module.

(b) Motion SFC Performance Specifications

		Item		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	
Motion SFC	Code total	(Motion SFC o	hart +	9591.1		
program	Operation	control + Trans	sition)	652k bytes	543k bytes	
capacity	Text total	(Operation con	trol + Transition)	668k bytes	484k bytes	
	Number of	f Motion SFC p	rograms	256 (No.	0 to 255)	
	Motion SF	C chart size/pr	ogram	Up to 64k bytes (Included Motion SFC chart comments)		
Motion SFC	Number o	f Motion SFC	steps/program	Up to 40	94 steps	
program	Number of	f selective bran	ches/branch	25	55	
	Number of	f parallel branc	nes/branch	25	55	
	Parallel br	anch nesting		Up to 4	1 levels	
	Number o	f operation con	trol programs		d FS(Scan execution type) combined. F/FS4095)	
	Number of	f transition prog	ırams	4096(G0	to G4095)	
Operation	Code size	/program		Up to approx. 64k l	oytes (32766 steps)	
control	Number of	f blocks(line)/pr	ogram	Up to 8192 blocks (in the c	ase of 4 steps(min)/blocks)	
program (F/FS)	Number of	f characters/blo	ock	Up to 128 (com	nment included)	
/	Number o	f operand/block	(Up to 64 (operand: constan	ts, word device, bit devices)	
Transition	() nesting	/block		Up to 3	2 levels	
program				Calculation expression,	Calculation expression,	
(G)	Descriptiv	Operation of	control program	bit conditional expression,	bit conditional expression	
,	expression			branch/repetition processing	bit conditional expression	
	СХРГСООЮ	Transition	orogram	Calculation expression/bit conditional expression/		
		Transition		comparison conditional expression		
	Number of	f multi execute	programs	Up to 256		
	Number of	f multi active st	eps	Up to 256 steps/all programs		
		Normal task		Execute in main cycle of Motion CPU		
				Execute in fixed cycle	Execute in fixed cycle	
Execute		Event task	Fixed cycle	(0.22ms, 0.44ms, 0.88ms, 1.77ms,	(0.44ms, 0.88ms, 1.77ms, 3.55ms,	
specification	Executed	(Execution		3.55ms, 7.11ms, 14.2ms)	7.11ms, 14.2ms)	
·	task	can be	External		event task factor in the input module	
		masked.)	interrupt		CPU (16 points) turns ON.	
			PLC interrupt	Execute with interrupt instruction (D(P).GINT) from PLC CPU.		
		NMI task		Executes when the input set to the NMI task factor in the input module		
					CPU (16 points) turns ON.	
Number of I/O	points (X/Y)				points 	
				256 points	050 mainte	
Number of rea	l I/O points (PX/PY)		(Built-in interface in Motion CPU (Input	256 points	
				4 points) + I/O module + Intelligent function module)	(I/O module)	
	Intorr	nal relave (MA)				
Internal relays (M) Link relays (B)		12288 points				
Number of dev				8192 points 2048 points		
(Device In the		Special relays (SM)		2048 points 2256 points		
Motion CPU of				8192 points (Note-1)	8192 points	
(Included the	• •	Link registers (W)		·	•	
positioning	1	Special registers (SD)		8192 points 2256 points		
dedicated devi	—	on registers (#)	-,		points	
	, ,,,,,,,,,	ting timers (FT)		(888µs)	
				·	, , ,	
Multiple CPU area devices (U□\G)			200	Up to 14336 points usable (Note-2)		

(Note-1): 19824 points can be used for SV22 advanced synchronous control. (Note-2): Usable number of points changes according to the system settings.

(3) SV43 Motion control specifications/performance specifications (a) Motion control specifications

lt ₄	em	Q173DCPU(-S1)	Q172DCPU(-S1)			
Number of contro		Up to 32 axes	Up to 8 axes			
Number of contro	axes	0.44ms/ 1 to 4 axes	υρ το σ axes			
Operation cycle		0.88ms/ 5 to 12 axes	0.44ms/ 1 to 4 axes			
(default)		1.77ms/13 to 28 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 8 axes			
(delauit)		3.55ms/29 to 32 axes	0.00ms/ 3 to 6 axes			
Interpolation funct	tions	Linear interpolation (Up to 4 axes), Circular inte	rpolation (2 axes) Helical interpolation (3 axes)			
Control modes		PTP (Point to Point) control, Constant spee				
Acceleration/dece	eleration control	Trapezoidal acceleration/deceleration, S-curve acceleration/deceleration				
Compensation		Backlash compensa	•			
Programming lang	quade	Dedicated instructi				
Motion program c		504k	, , ,			
Number of progra	•	10				
Number of simulta		Axis designation program : 32	Axis designation program : 8			
programs	aneous start	Control program : 16	Control program : 16			
Number of positio	ning points	Approx. 10600 points (Positioning	· · · · · · · · · · · · · · · · · · ·			
140111DEL OL POSITIO	amig politio	USB/RS-232/Ethen				
Peripheral I/F		PERIPHERAL I/F (N				
		Proximity dog method (2 types), Count method (3 types), Data set method (2 types), Dog cradle method, Stopper method (2 types), Limit switch combined method,				
Home position ret	turn function	Scale home position signal detection method				
		Home position return re-try function provided, home position shift function provided				
JOG operation fur	nction	Prov				
Manual pulse generator operation						
function		Possible to connect 3 m	nodules (Q173DPX use)			
M-code function		M-code output function provided, M-code completion wait function provided				
Lineik errikele errker	.4 €4:	Number of output points 32 points				
Limit switch outpu	it function	Watch data: Motion control data/Word device				
Skip function		Prov	rided			
Override ratio set	ting function	Override ratio setting : -100 to 100[%]				
ROM operation fu	ınction	Provided				
External input sign	nal	Q172DLX or External input signals (FLS/RLS/DOG) of servo amplifier				
High-speed readir	ng function	Provided (Via input module, Via tracking of Q173DPX)				
Forced stop		Motion controller forced stop (EMI connector, System setting),				
Forced Stop		Forced stop terminal of servo amplifier				
Number of I/O poi	ints	Total 256 point	ts (I/O module)			
Clock function		Provided				
Security function		Provided (Protect	tion by password)			
All clear function						
Remote operation						
Digital oscilloscop	pe function	Provided				
Absolute position system		Made compatible by setting battery to servo amplifier.				
		(Possible to select the absolute data method or incremental method for each axis)				
SSCNET	Communication	SSCNETII				
communication (Note-2)	type	0.15	A P			
<u> </u>	Number of lines	2 lines	1 line			
Number of	Q172DLX	4 modules usable	1 module usable			
Motion related modules	Q173DPX	1 module	e usable			

(Note-1): Q173DCPU-S1/Q172DCPU-S1 only (Note-2): The servo amplifiers for SSCNET cannot be used.

(b) Motion program performance specifications

	Item	Q173DCPU(-S1)/Q172DCPU(-S1)		
D	Total of program files	504k bytes		
Program capacity	Number of programs	Up to 1024 (No. 1 to 1024)		
	Arithmetic operation	Unary operation, Addition and subtraction operation, Multiplication and division operation, Remainder operation		
Operation controls	Comparison operation	Equal to, Not equal to		
	Logical operation	Logical shift operation, Logical negation, Logical AND, Logical OR, Exclusive OR		
G-codes	Positioning command	G00, G01, G02, G03, G04, G09, G12, G13, G23, G24, G25, G26, G28, G30, G32, G43, G44, G49, G53, G54, G55, G56, G57, G58, G59, G61, G64, G90, G91, G92, G98, G99, G100, G101		
M-codes	Output command to data register	M****		
Special M-codes	Program control command	M00, M01, M02, M30, M98, M99, M100		
Variable	Device variable	X, Y, M, B, F, D, W, #, U□\G		
C ati a a	Trigonometric function	SIN, COS, TAN, ASIN, ACOS, ATAN		
Functions	Numerical function	ABS, SQR, BIN, LN, EXP, BCD, RND, FIX, FUP, INT, FLT, DFLT, SFLT		
	Start/end	CALL, CLEAR		
	Home position return	CHGA		
	Speed/torque setting	CHGV, CHGT, TL		
	Motion control	WAITON, WAITOFF, EXEON, EXEOFF		
Instructions		CALL, GOSUB, GOSUBE, IFGOTO,		
	Jump/repetition processing	IFTHENELSE IFELSEEND,		
		WHILEDOBREAKCONTINUEEND		
	Data operation	BMOV, BDMOV, FMOV, BSET, BRST, SET, RST, MULTW, MULTR, TO, FROM, ON, OFF, IFTHENSET/RST/OUT, PB		
Nhh	Program calls (GOSUB/GOSUBE)	Up to 8		
Number of controls	Program calls (M98)	Up to 8		
	Internal relays (M)	8192 points		
	Link relays (B)	8192 points		
Number of devices	Annunciators (F)	2048 points		
(Device In the Motion	Special relays (SM)	2256 points		
CPU only)	Data registers (D)	8192 points		
(Included the	Link registers (W)	8192 points		
positioning dedicated	Special registers (SD)	2256 points		
device)	Motion registers (#)	8736 points		
	Coasting timers (FT)	1 point (888µs)		
	Multiple CPU area devices (U□\G)	Up to 14336 points usable (Note)		

(Note): Usable number of points changes according to the system settings.


1.3 Hardware Configuration

This section describes the Motion controller system configuration, precautions on use of system, and configured equipments.

1.3.1 Motion system configuration

(1) Equipment configuration in system

(a) Q173DSCPU/Q172DSCPU

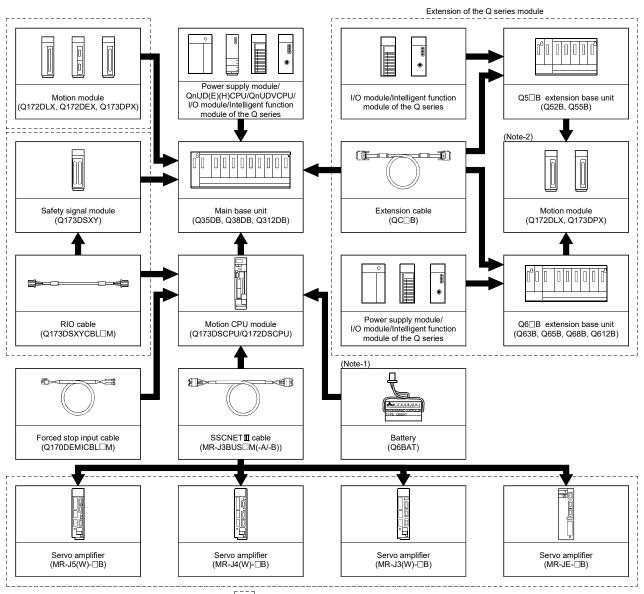


It is possible to select the best according to the system.

⁽Note-1): Be sure to install the Battery (Q6BAT).

It is packed together with Q173DSCPU/Q172DSCPU.
(Note-2): Q172DEX cannot be used in the extension base unit.

Install it to the main base unit.

(b) Q173DCPU(-S1)/Q172DCPU(-S1)

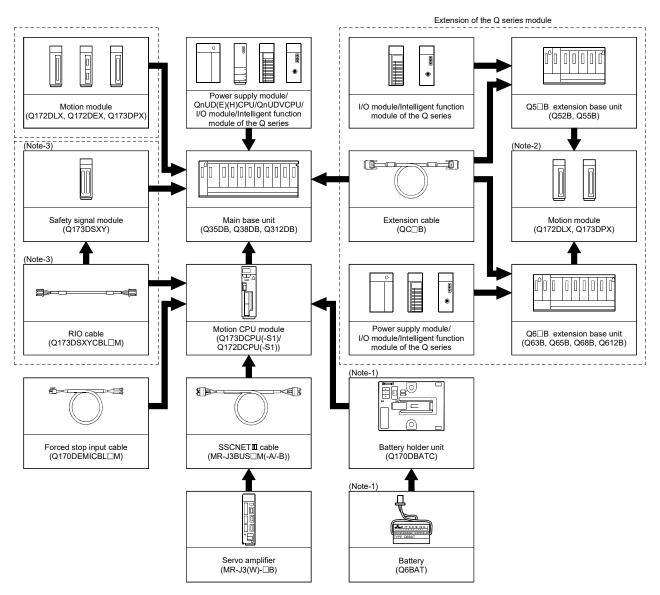

It is possible to select the best according to the system.


(Note-1): Be sure to install the Battery (Q6BAT) to the Battery holder unit (Q170DBATC). It is packed together with Q173DCPU(-S1)/Q172DCPU(-S1). (Note-2): Q172DEX cannot be used in the extension base unit.

Install it to the main base unit.

(Note-3): Q173DCPU-S1/Q172DCPU-S1 only.

(2) Peripheral device configuration for the Q173D(S)CPU/Q172D(S)CPU

The following (a)(b)(c) can be used.

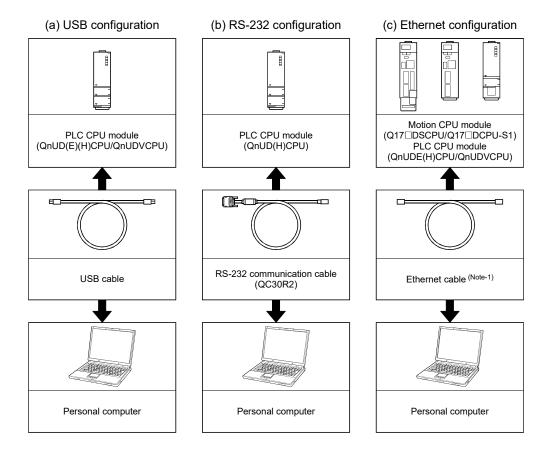

(Note-1): Corresponding Ethernet cables

1) Connecting to Motion CPU module

Part name	Connection type	Cable type	Ethernet standard	Specification	
0		Otro-i olet e elele	10BASE-T		
	Connection with HUB	Straight cable	100BASE-TX	Compliant with Ethernet standards, category 5 or higher.	
Ethernet cable	B:		10BASE-T	Shielded twisted pair cable (STP cable)	
	Direct connection	Crossover cable	100BASE-TX		

[Selection criterion of cable]


Category : 5 or higherDiameter of lead : AWG26 or higher

• Shield : Copper braid shield and drain wire

Copper braid shield and aluminium layered type shield

Connecting to PLC CPU module Refer to the "QnUCPU User's Manual (Communication via Built-in Ethernet Port)".


1.3.2 Q173DSCPU/Q172DSCPU System overall configuration

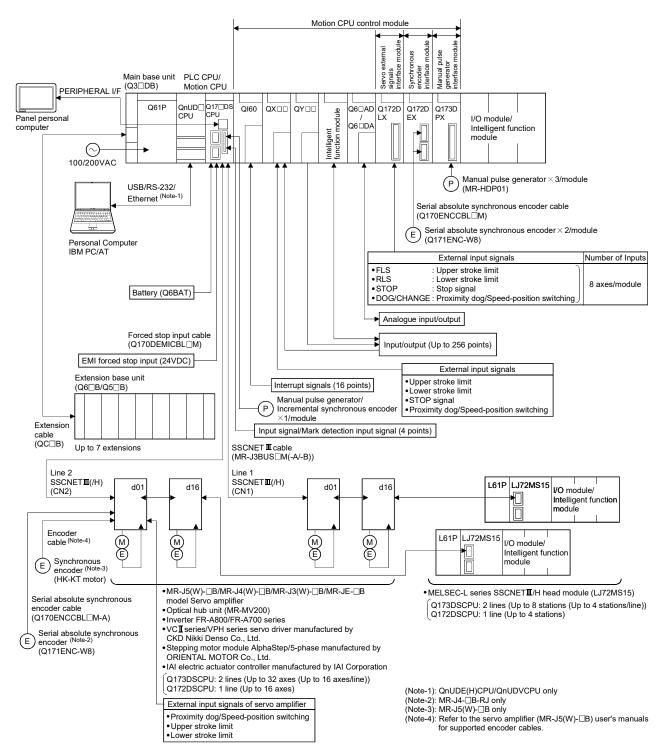

∆ CAUTION

- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servo motor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.

1.3.3 Q173DCPU(-S1)/Q172DCPU(-S1) System overall configuration

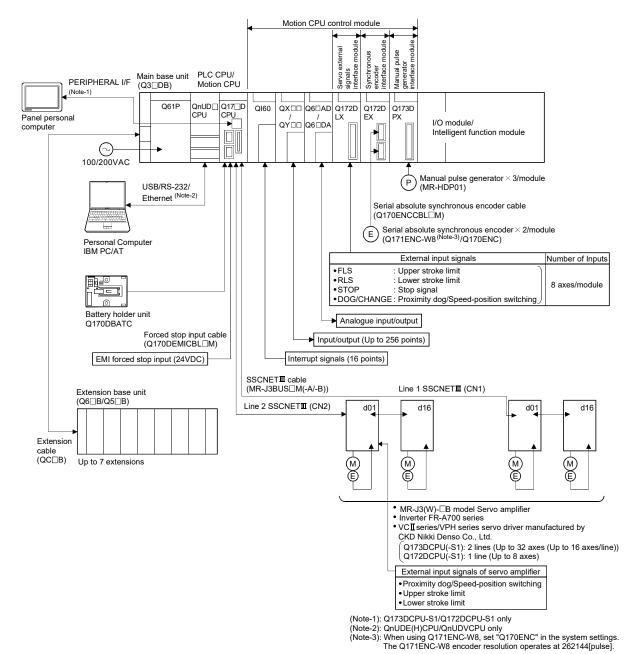

∆CAUTION

- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servo motor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.

1.3.4 Software packages


(1) Operating system software

	Software package				
Application	Q173DSCPU (Note-1)	Q172DSCPU (Note-1)	Q173DCPU(-S1)	Q172DCPU(-S1)	
Conveyor assembly use SV13	SW8DNC-SV13QJ	SW8DNC-SV13QL	SW8DNC-SV13QB	SW8DNC-SV13QD	
Automatic machinery use SV22	SW8DNC-SV22QJ	SW8DNC-SV22QL	SW8DNC-SV22QA	SW8DNC-SV22QC	
Machine tool peripheral use SV43	_	_	SW7DNC-SV43QA	SW7DNC-SV43QC	

(Note-1): The operating system software (SV22 (Virtual mode switching method)) is installed at the time of product purchases.

(2) Operating system software type/version

(a) Confirmation method in the operating system (CD)

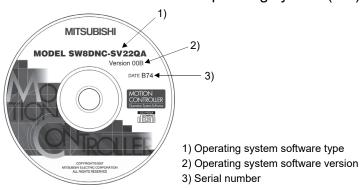


Example) When using Q173DCPU, SV22 and version 00B.

- 1) SW8DNC-SV22QA
- 2) 00B

(b) Confirmation method in MT Developer2

The operating system software type and version of connected CPU can be confirmed on the following screens.

- 1) Installation screen
- 2) CPU information screen displayed by menu bar [Help] \rightarrow [CPU Information]

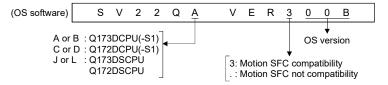

(3) Programming software packages

(a) Motion controller engineering environment

Part name	Model name
MELSOFT MT Works2 (MT Developer2 (Note-1))	SW1DND-MTW2-E

(Note-1): This software is included in Motion controller engineering environment "MELSOFT MT Works2".

(4) Related software packages

(a) PLC software package

Model name	Software package
GX Works2	SW1DND-GXW2-E
GX Developer	SW8D5C-GPPW-E

(b) Servo set up software package

Model name	Software package
MR Configurator2	SW1DNC-MRC2-E
MR Configurator (Note-1)	MRZJW3-SETUP221E

(Note-1): Q173DSCPU/Q172DSCPU is not supported.

POINTS

When the operation of Windows[®] is unclear in the operation of this software, refer to the manual of Windows[®] or guide-book from the other supplier.

1.3.5 Restrictions on motion systems

(1) Combination of Multiple CPU system

- (a) Motion CPU module cannot be used as standalone module. Be sure to install the universal model PLC CPU module to CPU No.1. For Universal model PLC CPU module, "Multiple CPU high speed transmission function" must be set in the Multiple CPU settings.
- (b) Only Multiple CPU high speed main base unit (Q35DB/Q38DB/Q312DB) can be used.
- (c) The combination of Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/ Q172DCPU(-S1) and Q173HCPU(-T)/Q172HCPU(-T)/Q173CPUN(-T)/ Q172CPUN(-T) cannot be used. The combination of Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/ Q172DCPU(-S1) can be used.
- (d) Up to four modules of universal model PLC CPU modules/Motion CPU modules can be installed from the CPU slot (the slot on the right side of power supply module) to slot 2 of the main base unit. CPU modules called as CPU No.1 to CPU No.4 from the left sequentially.
 There is no restriction on the installation order of CPU No.2 to No.4.
 For CPU module except CPU No.1, an empty slot can be reserved for addition of CPU module. An empty slot can be set between CPU modules. However, the installation condition when combining with the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is different depending on the specification of CPU modules, refer to the Manuals of each CPU modules.
- (e) It takes about 10 seconds to startup (state that can be controlled) of Motion CPU. Make a Multiple CPU synchronous startup setting suitable for the system.
- (f) Execute the automatic refresh of the Motion CPU modules and universal model PLC CPU modules by using the automatic refresh of Multiple CPU high speed transmission area setting. When the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is installed in the combination of Multiple CPU system, the Motion CPU module cannot execute the automatic refresh with these modules.
- (g) Use the Motion dedicated PLC instructions that starts by "D(P).". The Motion dedicated PLC instructions that starts by "S(P)." cannot be used. When the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is installed in the combination of Multiple CPU system, the Motion dedicated PLC instruction from these modules cannot be executed.

(2) Motion modules

- Installation position of Q172DEX^(Note-1) and Q173DSXY is only the main base unit.
 - It cannot be used on the extension base unit.
- (b) Q172DLX/Q173DPX can be installed on any of the main base unit/ extension base unit.
- (c) Q172DLX/Q172DEX^(Note-1)/Q173DPX cannot be installed in CPU slot and I/O slot 0 to 2 of the main base unit. Wrong installation might damage the main base unit.
- (d) Q173DSXY cannot be used in Q173DCPU/Q172DCPU.
- (e) Q172EX(-S1/-S2/-S3)/Q172LX/Q173PX(-S1) for Q173HCPU(-T)/Q172CPUN(-T)/Q173CPU/Q172CPU cannot be used.
- (f) Be sure to use the Motion CPU as the control CPU of Motion modules (Q172DLX, Q172DEX^(Note-1), Q173DPX, etc.) for Motion CPU. They will not operate correctly if PLC CPU is set and installed as the control CPU by mistake. Motion CPU is treated as a 32-point intelligent module by PLC CPU of other CPU.
- (g) Q173DSXY is managed with PLC CPU. The Motion CPU to connect Q173DSXY is only CPU No.2 in the Multiple CPU system. Q173DSXY cannot be used for the CPU No. 3 or 4.

(Note-1): Q172DEX can be used in SV22. It cannot be used in SV13/SV43.

(3) Other restrictions

- (a) Motion CPU module cannot be set as the control CPU of intelligent function module (excluding some modules) or Graphic Operation Terminal(GOT).
- (b) Be sure to use the battery.
- (c) There are following methods to execute the forced stop input.
 - Use a EMI connector of Motion CPU module
 - Use a device set in the forced stop input setting of system setting
- (d) Forced stop input for EMI connector of Motion CPU module cannot be invalidated by the parameter. When the device set in the forced stop input setting is used without use of EMI connector of Motion CPU module, apply 24VDC voltage on EMI connector and invalidate the forced stop input of EMI connector.
- (e) Be sure to use the cable for forced stop input (sold separately). The forced stop cannot be released without using it.

(f) Set "SSCNETII/H" or "SSCNETII" for every line in the SSCNET setting of system setting to communicate with the servo amplifiers and SSCNETII(/H) compatible equipment.

The following shows the servo amplifiers and SSCNETII(/H) compatible equipment that can be used when "SSCNETII/H" and "SSCNETIII" are set.

Comes condition/CCCNICTIII/// I) accoratible assuingment		SSCNET setting		
Servo amplifier/SSCNET I (/H) compatible equipment	SSCNET I /H QDS	SSCNET II	
	MR-J5(W)-□B QDS (Ver.)	0	×	
	MR-J4(W)-□B QDS (0	O (Note-1)	
Servo amplifier	MR-J3(W)-□B	×	0	
	MR-JE-□B QDS(Ver.)	0	×	
	FR-A800 series QDS (Ver.)	0	0	
Inverter	FR-A700 series Ver.	×	0	
SSCNET Ⅲ /H head module	LJ72MS15 QDS(Ver.)	0	×	
Servo driver manufactured by	VCII series Ver.	0	0	
CKD Nikki Denso Co., Ltd	VPH series QDS (Ver.)	0	0	
Stepping motor module Alphas			×	
by ORIENTAL MOTOR Co., L	td. QDS (Ver.)	O	^	
IAI electric actuator controller manufactured by IAI			×	
Corporation QDS (Ver.)		O		

○: Usable ×: Unusable

(Note-1): Operated in J3 compatibility mode

POINTS

It is possible to use different servo amplifiers on the same SSCNET**I**/H line, but when high accuracy synchronization on the load side is needed for multiple axes such as for interpolation control or synchronous control, build a system using servo amplifiers of the same servo series.

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(g) The following are restrictions for the communication type depending on the operation cycle.

Operation	Operation cycle.	oction type
Operation		cation type I
cycle	SSCNET II /H Q DS 《	SSCNET II
0.22ms QDS (MR-J4W3-□B (software version A2 or earlier) cannot be used. (Note-1) One SSCNET	The maximum number of control axes per line is four axes. Set the axis select rotary switch of the servo amplifier to "0 to 3". If the axis select rotary switch of servo amplifier is set to "4 to F", the servo amplifiers are not recognized. MR-J4W3-□B (software version A2 or earlier) cannot be used. (Note-1) MR-J3W-□B cannot be used. FR-A700 series, VCII series, and VPH series cannot be used. (Note-4)
0.44ms	 Two SSCNET II/H head modules per line can be set. Up to 4 axes per IAI electric actuator controller can be set. (Note-5) 	 The maximum number of control axes per line is eight axes. Set the axis select rotary switch of the servo amplifier to "0 to 7". If the axis select rotary switch of servo amplifier is set to "8 to F", the servo amplifiers are not recognized.
0.88ms or more	_	_

-: No restriction

- (Note-1): MR-J4W3-□B (Software version A3 or later) supports operation cycle 0.22ms. However, when using operation cycle 0.22ms, some functions are restricted. Refer to the servo amplifier instruction manual for details.
- (Note-2): When MR-JE-□B is connected, a major error (error code: 1350) occurs.
- (Note-3): When AlphaStep/5-phase is set in system settings, operation is carried out with operation cycle at 0.44ms.
- (Note-4): When FR-A700 series, VCII series, or VPH series is set in system settings, operation is carried out with operation cycle at 0.44ms.
- (Note-5): When the setting exceeds the number of control axes per controller, a major error (error code: 1350) occurs. Set the operation cycle as follows according to the number of control axes per controller.

Number of control axes per controller	Operation cycle
1 to 2 axes	0.22ms or more
3 to 4 axes	0.44ms or more
5 axes or more	0.88ms or more

(h) If there is an axis which is not set at least 1 axis by system setting in applicable servo amplifier at MR-J5W-□B or MR-J4W-□B use, all axes connected to applicable servo amplifier and subsequent servo amplifiers cannot be connected. Set "Not used" to the applicable axis with a dip switch for the axis which is not used by MR-J5W-□B or MR-J4W-□B.

- (i) It is impossible to mount the main base unit by DIN rail when using the Motion CPU module.
 - Doing so could result in vibration that may cause erroneous operation.
- (j) The module name displayed by "System monitor" "Product information list" of GX Works2/GX Developer is different depending on the function version of Motion modules (Q172DLX, Q172DEX, Q173DPX).

(Note): Even if the function version "C" is displayed, it does not correspond to the online module change.

I					
	Model display				
Module name	Function version "B"	Function version "C"			
Q172DLX	Q172LX	Q172DLX			
Q172DEX	MOTION-UNIT	Q172DEX			
Q173DPX	MOTION-UNIT	Q173DPX			

(k) Use the Graphic Operation Terminal (GOT) that supports Motion CPU (Q173D(S)CPU/Q172D(S)CPU).

1.4 Checking Serial Number and Operating System Software Version

Checking for the serial number of Motion CPU module and Motion module, and the operating system software version is described below.


1.4.1 Checking serial number

(1) Motion CPU module (Q173DSCPU/Q172DSCPU)

(a) Rating plate

The rating plate is situated on the side face of the Motion CPU module. The SERIAL line displays the Motion CPU module serial No.

(b) Front of Motion CPU module The serial number is displayed on the battery cover situated on the lower front side of the Motion CPU module.

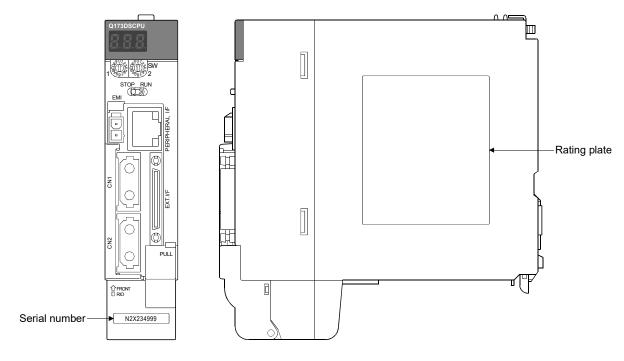


 (c) System monitor (product information list)
 The serial number can be checked on the system monitor screen in GX Works2/GX Developer. (Refer to Section 1.4.2.)

(2) Motion CPU module (Q173DCPU(-S1)/Q172DCPU(-S1))

(a) Rating plate

The rating plate is situated on the side face of the Motion CPU module. The SERIAL line displays the Motion CPU module serial No.

(b) Front of Motion CPU module The serial number is displayed on the protruding portion situated on the lower front side of the Motion CPU module.

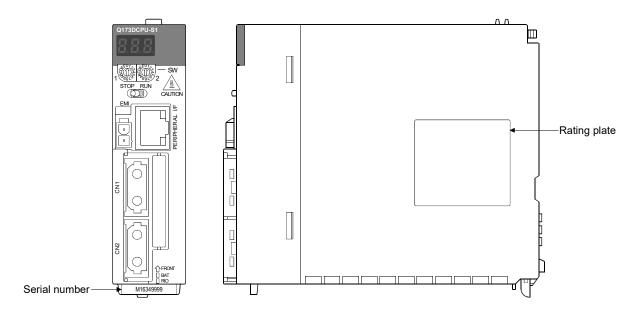

 (c) System monitor (product information list)
 The serial number can be checked on the system monitor screen in GX Works2/GX Developer. (Refer to Section 1.4.2.)

REMARK

The serial number display was corresponded from the Motion CPU modules manufactured in early October 2007.


(3) Motion module (Q172DLX/Q172DEX/Q173DPX/Q173DSXY)

(a) Rating plate

The rating plate is situated on the side face of the Motion module. The SERIAL line displays the Motion CPU module serial No.

(b) Front of Motion module

The serial No. is displayed on the protruding portion situated on the lower front side of the Motion module.

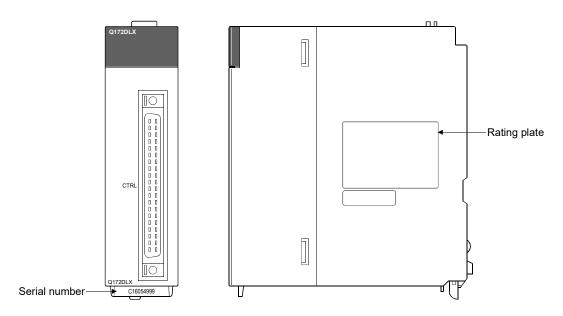


REMARK

The serial number display was corresponded from the Motion modules manufactured in early April 2008.

1.4.2 Checking operating system software version

The operating system software version can be checked on the system monitor screen in GX Works2/GX Developer.

Select [Product Information List] button on the system monitor screen displayed on [Diagnostics] – [System monitor] of GX Works2/GX Developer to check on the product information list.

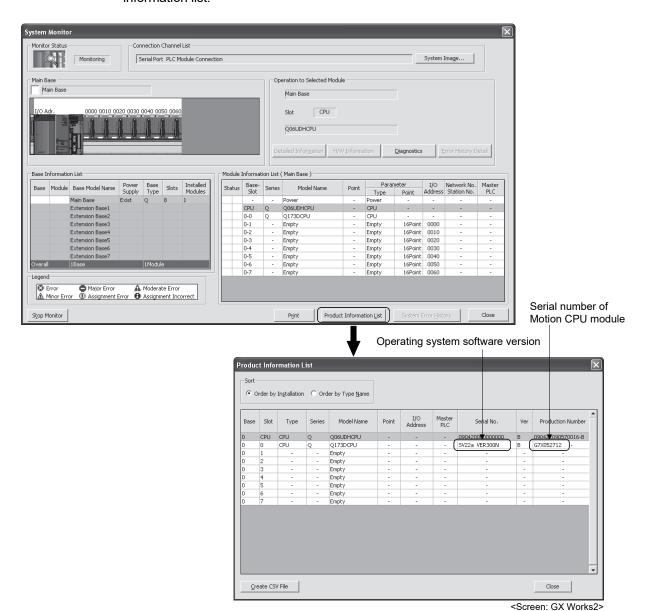

Ver.!: Refer to Section 1.5 for the software version that supports this function.

REMARK

- (1) "Serial number of Motion CPU module" and "Operating system software version" on the system monitor (Product Information List) screen of GX Works2/GX Developer was corresponded from the Motion CPU modules manufactured in early October 2007.
- (2) The operating system software version can also be checked on the system monitor screen in CD-ROM of operating system software or MT Developer2. (Refer to Section 1.3.4.)

1.5 Restrictions by the Software's Version

There are restrictions in the function that can be used by the version of the operating system software and programming software.

The combination of each version and a function is shown in Table1.1.

Table 1.1 Restrictions by the Software's Version

	Operating system softw			
Function	Q173DSCPU/Q172DSCPU		/Q172DCPU(-S1)	
	SV13/SV22	SV13/SV22	SV43	
Checking Motion controller's serial number and operating		00D		
system software version in GX Developer	_	טטט	_	
Advanced S-curve acceleration/deceleration				
(Except constant-speed control (CPSTART) of servo	_	00H		
program.)				
Direct drive servo		00H	00B	
MR-J3-□B-RJ080W	_	ООП	ООВ	
Servo amplifier display servo error code (#8008+20n)	_	00H	00B	
0.44ms fixed-cycle event task	_	00H		
444µs coasting timer (SD720, SD721)	_	00H	00B	
Synchronous encoder current value monitor in real mode	_	00H		
Display of the past ten times history in current value history		0011	000	
monitor	_	00H	00C	
Amplifier-less operation	_	00H		
Servo instruction (Home position return (ZERO), high speed				
oscillation (OSC)) and manual pulse generator operation in	_	00H		
mixed function of virtual mode/real mode				
Advanced S-curve acceleration/deceleration in constant-		001/		
speed control (CPSTART) of servo program.	_	00K		
External input signal (DOG) of servo amplifier in home				
position return of count method and speed-position switching	_	00G	00B	
control				
Communication via PERIPHERAL I/F	_	00H	00C	
Motion SFC operation control instruction		001		
Type conversion (DFLT, SFLT)	_	00L	_	
Vision system dedicated function (MVOPEN, MVLOAD,		001		
MVTRG, MVPST, MVIN, MVFIN, MVCLOSE, MVCOM)	_	00L		
Home position return of scale home position signal detection		001	000	
method		00L	00C	
Real time display function in digital oscilloscope function	_	00N	Not support	
Rapid stop deceleration time setting error invalid function	_	00S		

	Programming	g software version			
MELSOFT MT Wo	SOFT MT Works2 (MT Developer2)				Section of reference
Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)	/Q172DCPU(-S1)	MR Configurator2	MR Configurator	Section of reference
SV13/SV22	SV13/SV22	SV43			
_	_	_	_		Section 1.4
1.39R	1.06G			_	(Note-4)
1.39R	1.06G	1.06G	1.01B	C2	
_	_	_	_	_	(Note-4), (Note-5)
1.39R	1.06G		_	_	(Note-3)
_	_	_	_		APPENDIX 1.2
<u> </u>	_				(Note-5)
1.39R	1.06G	1.39R	_	_	Section 4.2
_	_		_	_	Section 4.11
1.39R	1.09K		_	_	(Note-5)
1.39R	1.09K		_	_	(Note-4)
1.39R	1.15R	Not support		_	
1.39R	1.15R	1.39R	_	_	Section 4.13
1.39R	1.15R	_	-	-	(Note-3)
1.39R	1.15R		_	_	(Note-3)
1.39R	1.15R	1.39R		_	(Note-4)
 1.39R	1.17T	1.39R			
_	_		_	_	(Note-4)

—: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or GX Works2/GX Developer. (Refer to Section 1.3, 1.4.)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-7): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

Table 1.1 Restrictions by the Software's Version (continued)

		•	•		
		Operating system soft	ware version (Note-1), (N	Note-2)	<u> </u>
Function		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/	Q172DCPU(-S1)	
	-	SV13/SV22	SV13/SV22	SV43	
Vision system dedicated function (MVOUT)		_	00S		
Motion SFC operation control instruction					
Program control (IF - ELSE - IEND, SELECT -CASE - SEND,			00R		
FOR -NEXT, BREAK)					1
Display format depending on the error setting data			00S		1
information of motion error history device (#8	640 to #8735)	_	005		
Product information list device (#8736 to #875	51)	_	00S		
Safety observation function		<u> </u>	00S		1
Feed current value update command (M3212	+20n) valid in	00B	Not ourport		
speed control (I)		ООВ	Not support		
External forced stop input ON latch (SM506)		00B	00S		
Operation method (SD560)		00B	Not support		1
Advanced synchronous control		00B	Not support		
Limit switch output function expansion		00B	Not support		
Driver communication function (SSCNETIII)		00C	Not support		
Intelligent function module support		00C	Not support		
SSCNETIII/H head module connection		00C	Not support		
Cam auto-generation (CAMMK) easy stroke	ratio cam	00C	Not support		
Acceleration/deceleration time change function		00C	Not support		
Home position return of dogless home position					
reference method		00C	Not support		
Setting range expansion of backlash compens	ation amount	00C	Not support		
Multiple CPU synchronous control		00C	Not support		
Cam axis length per cycle change during syn	chronous control	00C	Not support		
Servo driver VCII series manufactured by	SSCNETIII	_	00L		
CKD Nikki Denso Co., Ltd.	SSCNETII/H	00D	Not support		
Inverter FR-A700 series		_	_		
Synchronous encoder via servo amplifier		00D	Not support		
Driver communication function (SSCNETII/H)	00D	Not support		
Optical hub unit connection		00F	Not support		
Home position return of driver home position return method		00H	Not support		
Stepping motor module AlphaStep/5-phase manufactured by					
ORIENTAL MOTOR Co., Ltd.		00H	Not support		
Servo driver VPH series manufactured by CKD Nikki Denso		0011			
Co., Ltd.		00H	Not support		
IAI electric actuator controller manufactured by	IAI Corporation	00H	Not support		
Inverter FR-A800 series		00J	Not support		
Weller 1 17 7 6000 Series					

—: There is no restriction by the version.

(Note-4)

(Note-4)

(Note-1): SV13/SV22 is the completely same version.

1.118Y

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or GX Works2/GX Developer. (Refer to Section 1.3, 1.4.)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

Not support

(Note-7): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

Table 1.1 Restrictions by the Software's Version (continued)

	Operating system soft			
Function	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/	/Q172DCPU(-S1)	
	SV13/SV22	SV13/SV22	SV43	
Improvement of absolute positioning operation for servo driver VCII/VPH series manufactured by CKD Nikki Denso Co., Ltd., and stepping motor module AlphaStep/5-phase manufactured by ORIENTAL MOTOR Co., Ltd.	00L	Not support		
Servo amplifier MR-J5(W)-□B support	00Y	Not support		
DOG/CHANGE signal input method support	00Y	Not support		
Servo amplifier MR-JE-□B support	0AA	Not support		
Mark detection signal input method support	0AB	Not support		
Fixed cycle system processing time monitor	0AB	Not support		

MELSOFT MT Work						
Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)	/Q172DCPU(-S1)	MR Configurator2	MR Configurator	Section of reference	
SV13/SV22	SV13/SV22	SV43				
_	_		_	_	(Note-4)	
1.170C	Not support		1.130L	Not support		
1.170C	Not support		_	_	Section 3.1.3	
1.187V	Not support		1.145B	Not support		
1.190Y	Not support		_	_	Section 4.14.2	
_	Not support		_	_	Section 4.19	

—: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or GX Works2/GX Developer. (Refer to Section 1.3, 1.4.)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-7): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

1.6 Programming Software Version

The programming software versions that support Motion CPU are shown below.

M.C. OPH	MELSOFT MT Wor	ks2 (MT Developer2)	MD O f	MD 0 5 4	
Motion CPU	SV13/SV22 SV43		MR Configurator2	MR Configurator	
Q173DSCPU	1.39R (Note-1)		1.10L	Not support	
Q172DSCPU	1.39R (Note-1)		1.10L	Not support	
Q173DCPU-S1	1.00A (Note-2)	1.03D (Note-3)	1.00A	C0 (Note-4)	
Q172DCPU-S1	1.00A (Note-2)	1.03D ^(Note-3)	1.00A	C0 (Note-4)	
Q173DCPU	1.00A	1.03D	1.00A	C0 (Note-4)	
Q172DCPU	1.00A	1.03D	1.00A	C0 (Note-4)	

(Note-1): Use version 1.47Z or later to use advanced synchronous control method.

(Note-2): Use version 1.12N or later to communicate via PERIPHERAL I/F.

(Note-3): Use version 1.23Z or later to communicate via PERIPHERAL I/F.

(Note-4): Use version C1 or later to use MR Configurator combination with MT Developer2.

2. MULTIPLE CPU SYSTEM

2.1 Multiple CPU System

2.1.1 Overview

(1) What is Multiple CPU system?

A Multiple CPU system is a system in which more than one PLC CPU module and Motion CPU module (up to 4 modules) are mounted on several main base unit in order to control the I/O modules and intelligent function modules. Each Motion CPU controls the servo amplifiers connected by SSCNETII cable.

(2) System configuration based on load distribution

- (a) By distributing such tasks as servo control, machine control and information control among multiple processors, the flexible system configuration can be realized.
- You can increase the number of control axes by using a multiple Motion CPU modules.
 It is possible to control up to 96 axes by using the three CPU modules (Q173DSCPU/Q173DCPU(-S1)).
- (c) By distributing the high-load processing performed on a single PLC CPU over several CPU modules, it is possible to reduce the overall system PLC scan time.

(3) Communication between CPUs in the Multiple CPU system

- (a) Since device data of other CPUs can be automatically read by the automatic refresh function, the self CPU can also use them as those of self CPU. (Note): When the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is mounted in the combination of Multiple CPU system, the Motion dedicated PLC instruction from these modules cannot be executed.
- (b) Motion dedicated PLC instructions can be used to access device data from the PLC CPU to Motion CPU and start Motion SFC program (SV13/SV22)/ Motion program (SV43).

2.1.2 Installation position of CPU module

Up to four PLC CPUs and Motion CPUs can be installed from the CPU slot (the right side slot of the power supply module) to slots 2 of the main base unit.

The Motion CPU module cannot be installed in the CPU slot.

The PLC CPU module must be installed in the CPU slot (CPU No.1) in the Multiple CPU system.

There is no restriction on the installation order for CPU modules (CPU No.2 to 4). The combination of Q173DSCPU/Q172DSCPU and Q173DCPU(-S1)/Q172DCPU(-S1) can be used.


(Note): Refer to the manual for each CPU module when the High performance PLC CPU module, Process CPU module, PC CPU module and C controller module is mounted in the combination of Multiple CPU.


Number Installation position of CPU module of CPUs CPU 2 QnUD□ Q17 D(S) CPU supply 2 CPU No.1 CPU No.4 CPU CPU Power OnUD[OnUD□ Q17 D(S) Q17 D(S) Q17 D(S) QnUD_□ Power CPU 3 CPU 0 CPU, Q17 D(S) Q17 D(S) Q17 D(S) Power QnUD□ Q17 D(S) QnUD[Power QnUD[217□D(S) Q17 D(S QnUD□ Power QnUD□ CPU empt supply 4 CPU No.1 CPU No.2 CPU CPU CPU No.3


Table 2.1 Example for CPU module installation

An empty slot can be reserved for future addition of a CPU module. Set the number of CPU modules including empty slots in the Multiple CPU setting, and

set the type of the slots to be emptied to "PLC (Empty)" in the CPU setting.

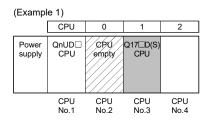

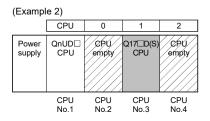

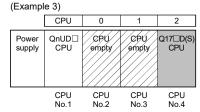

0

1

2 : Slot number

2.1.3 Precautions for using I/O modules and intelligent function modules

(1) Modules controllable by the Motion CPU

Modules controllable by the Motion CPU are shown below.

- Motion modules (Q172DLX, Q172DEX, Q173DPX)
- I/O modules $(QX\square, QX\square-\square, QY\square, QY\square-\square, QH\square, QX\squareY\square)$
- Intelligent function module (Note-1)
- Interrupt module (QI60)

(Note-1): Refer to Section 4.17 for corresponding intelligent function module.

(2) Compatibility with the Multiple CPU system

The intelligent function modules of function version "B" or later support the Multiple CPU system. Be sure to use the PLC CPU as a control CPU for the intelligent function modules (network modules etc.) that cannot be controlled by the Motion CPU.

(3) Access range from non-controlled CPU

- (a) The Motion CPU can access only the modules controlled by the self CPU. It cannot access the modules controlled by other CPUs.
- (b) Access range from non-controlled PLC CPU for the modules controlled by the Motion CPU are shown below.

Table 2.2 Access range to non-controlled module

Access target		I/O setting outside of the group (Set by PLC CPU)			
Acces	ss larger	Disabled (Not checked)	Enabled (Checked)		
Motion module			\		
(Q172DLX, Q17	2DEX, Q173DPX)	X	×		
Input (X)		×	0		
Output (Y)		×	X		
Buffer memory	Read	×	×		
Buller Memory	Write	×	X		

○ : Accessible × : Inaccessible

REMARK

- The function version of an intelligent function module can be checked on the rated plate of the intelligent function module or in the GX Works2/GX Developer system monitor product information list.
- Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for the model name which can be controlled by the Motion CPU.

2.1.4 Modules subject to installation restrictions

(1) Modules subject to install restrictions for the Motion CPU are shown below. Use within the restrictions listed below.

(a) SV13/SV22

Description		Model name		Maximum installable modules per CPU			
				Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)
Servo externinterface mo	-	Q172DLX		4 modules	2 modules	4 modules	1 module
Serial absolution	ute synchronous odule	Q172DEX (N	Note-2)	6 modules			4 modules
Manual pulse generator		Q173DPX (Note-1)	Incremental serial encoder use (Note-2)			3 modules	
interface mo	odule	(Note 1)	Manual pulse generator only use	1 module			
Input modul	е	QX□ QX□-□					
Output mod	ule	QY					
Input/output	composite	QH□				T	
module		QX□Y□		Total 256 points (Note-5)			6 points
14 - 11:4	Analogue input	Q6□AD□]			
Intelligent	module	Q6□AD-□					
function module (Note-3)	Analogue	Q6□DA□					
	output module	Q6□DA-□ (Note-4)					
	General					_	_
Interrupt module		QI60		1 module			

(Note-1): When the Manual pulse generator and the serial encoder are used at the same time with the SV22, the Q173DPX installed in the slot of the smallest number is used for manual pulse generator input.

(Note-2): SV22 only.

(Note-3): A maximum of 4 intelligent function modules can be used.

(Note-4): Refer to Section 4.17 for corresponding intelligent function module.

(Note-5): Number of I/O points is total of "Built-in interface in Motion CPU (Input 4 points) + I/O module + intelligent function module".

(b) SV43

Description		M	odel name	Maximum installable modules per CPU		
				Q173DCPU(-S1)	Q172DCPU(-S1)	
Servo external signals interface module		Q172DLX		4 modules	1 module	
Manual puls interface mo	=	Q173DPX	Manual pulse generator only use	1 module	1 module	
Input module		QX□ QX□-□				
Output mode	ule	QY□ QY□-□		Total 256 points		
Input/output		QH□				
composite n	nodule	QX□Y□				
Intelligent	Intelligent Analogue input					
function module		Q6□AD-□				
module	Analogue	Q6□DA□				
(Note-1)	output module	Q6□DA-□				

(Note-1): A maximum of 4 intelligent function modules can be used.

(2) A total of eight base units including one main base unit and seven extension base units can be used. However, the usable slots (number of modules) are limited to 64 per system including empty slots. If a module is installed in slot 65 or subsequent slot, an error (SP. UNIT LAY ERROR) will occur. Make sure all modules are installed in slots 1 to 64. (Even when the total number of slots provided by the main base unit and extension base units exceeds 65 (such as when six 12-slot base units are used), an error does not occur as long as the modules are installed within slots 1 to 64.)

POINT

- (1) Q172DLX/Q172DEX/Q173DPX cannot be installed in CPU slot and I/O slot 0 to 2 of the main base unit. Wrong installation might damage the main base unit.
- (2) Q172DEX can be installed in the main base unit only. It cannot be used in the extension base unit.

2.1.5 How to reset the Multiple CPU system

The entire Multiple CPU system can be reset by resetting CPU No.1.

The CPU modules of No.2 to No.4, I/O modules and intelligent function modules will be reset when PLC CPU No.1 is reset.

If a stop error occurs in any of the CPUs on the Multiple CPU system, either reset CPU No.1 or restart the Multiple CPU system (power supply $ON \rightarrow OFF \rightarrow ON$) for recovery. (Recovery is not allowed by resetting the error-stopped CPU modules other than CPU No.1.)

POINT

- (1) It is not possible to reset the CPU modules of No.2 to No.4 individually in the Multiple CPU system.
 - If an attempt to reset any of those PLC CPU modules during operation of the Multiple CPU system, a "MULTI CPU DOWN (error code: 7000)" error will occur for the other CPUs, and the entire Multiple CPU system will be halted. However, depending on the timing in which any of PLC CPU modules other than No.1 has been reset, an error other than the "MULTI CPU DOWN" may halt the other PLC CPUs/Motion CPUs.
- (2) A "MULTI CPU DOWN (error code: 7000)" error will occur regardless of the operation mode (All stop by stop error of CPU "n"/continue) set at the "Multiple CPU setting" screen when any of PLC CPU modules of No.2 to No.4 is reset. (Refer to Section 2.1.6.)

2.1.6 Operation for CPU module stop error

The entire system will behaves differently depending whether a stop error occurs in CPU No.1 or any of CPU No.2 to No.4 in the Multiple CPU system.

(1) When a stop error occurs at CPU No.1

- (a) A "MULTI CPU DOWN (error code: 7000)" error occurs at the other CPUs and the Multiple CPU system will be halted when a stop error occurs at the PLC CPU No.1. (Note-1)
- (b) The following procedure to restore the system is shown below.
 - Confirm the error cause with the PLC diagnostics on GX Works2/ GX Developer.
 - 2) Remove the error cause.
 - Either reset the PLC CPU No.1 or restart the power to the Multiple CPU system (power ON → OFF → ON).


All CPUs on the entire Multiple CPU system will be reset and the system will be restored when PLC CPU No. 1 is reset or the Multiple CPU system is reapplied.

(2) When a stop error occurs at CPU other than No.1

Whether the entire system is halted or not is determined by the Multiple CPU setting's "Operating Mode" setting when a stop error occurs in a PLC CPU module/Motion CPU module other than CPU No.1.

The default is set for all CPUs to be stopped with a stop error.

When you do not want to stop all CPUs at occurrence of a stop error in a PLC CPU module/Motion CPU module, remove the check mark that corresponds to the CPU No. so that its error will not stop all CPUs. (See arrow A.)

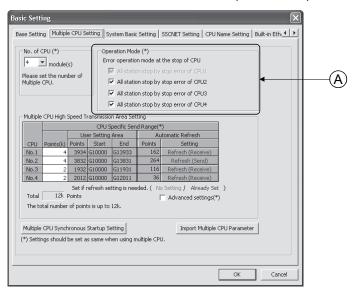

(a) When a stop error occurs in the CPU module for which "All station stop by stop error of CPU 'n' " has been set, a "MULTI CPU DOWN (error code: 7000)" error occurs for the other PLC CPU module/Motion CPU modules and the Multiple CPU system will be halted. (Note-1) (b) When a stop error occurs in the CPU module for which " All station stop by stop error of CPU 'n' " has not been set, a "MULTI EXE. ERROR (error code: 7020)" error occurs in all other CPUs but operations will continue.

POINT

(Note-1): When a stop error occurs, a "MULTI CPU DOWN (error code : 7000)" will occur at the CPU on which the error was detected.


Depending on the timing of error detection, a "MULTI CPU DOWN" error may be detected in a CPU of "MULTI CPU DOWN" status, not the first CPU on which a stop error occurs.

Because of this, CPU No. different from the one of initial error CPU may be stored in the error data's common information category.

To restore the system, remove the error cause on the CPU that is stopped by an error other than "MULTI CPU DOWN".

In the screen below, the cause of the CPU No.2 error that did not cause the "MULTI CPU DOWN" error is to be removed.

The stop error can be checked on the PLC diagnostics screen in GX Works2/GX Developer.

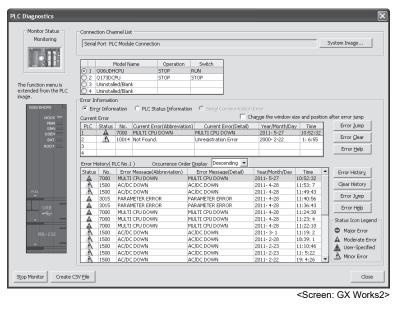

- (c) Observe the following procedures to restore the system.
 - Confirm the error-detected CPU No. and error cause with the PLC diagnostics on GX Works2/GX Developer.
 - 2) If the error code occurred in Motion CPU 10000 to 10999, confirm the error cause with monitor of MT Developer2.
 - 3) Remove the error cause.
 - 4) Either reset the PLC CPU No.1 or restart the power to the Multiple CPU system (power ON \rightarrow OFF \rightarrow ON).

All CPUs on the entire Multiple CPU system will be reset and the system will be restored when PLC CPU No.1 is reset or the power to the Multiple CPU system is reapplied.

(3) Operation at a Motion CPU error

Operations at a Motion CPU error are shown below.

Category	Type of error	Operation	Remark	
	System setting error	Does not operate from the beginning (does not run).	All actual output PY points turn OFF. No effect on other CPUs.	
	WDT error	Varies depending on the error.	All actual output PY points turn OFF.	
Operation	Self-diagnosis error	Stops at a CPU DOWN error.	Other CPUs may also stop depending on the parameter setting.	
disable errors	Other CPU DOWN error	Operation corresponding to STOP (M2000 OFF). Depends on the "Operation mode upon CPU stop error" setting.	All actual output PY points turn OFF.	
	Self-diagnosis error	Operation continues when the continuous error occurred.		
	Motion SFC error (Note-1)			
0	Minor error			
Operation continuous	Major error	Processing stops for each	Only the applicable program stops (the	
enable errors	Servo error	program or axis instead of the	program may continue depending on the type of error).	
enable entits	Servo program setting error (Note-1)/	Motion CPU stopping all the processing.	Actual output PY retains output. No effect on other CPUs.	
	Motion program setting error (Note-2)		THO CHOCK OFF OUT OF US.	


(Note-1): SV13/SV22 use.


(Note-2): SV43 use.

2.2 Starting Up the Multiple CPU System

This section describes a standard procedure to start up the Multiple CPU system.

2.2.1 Startup Flow of the Multiple CPU system

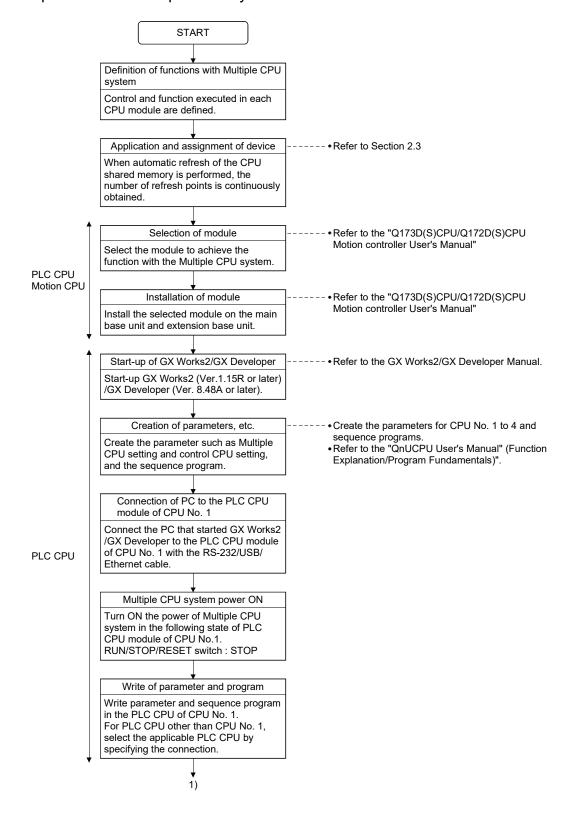

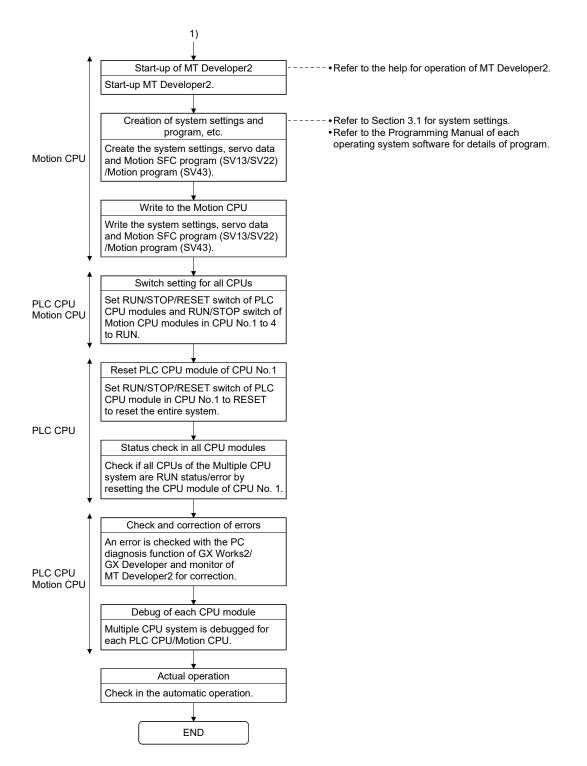

(Note): Installation of the operating system software is required to the Motion CPU module before start of the Multiple CPU system.

Refer to Chapter 5 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for installation of the Motion CPU operating system software.

2.3 Communication Between the PLC CPU and the Motion CPU in the Multiple CPU System

2.3.1 CPU shared memory

(1) Structure of CPU shared memory

The CPU shared memory is memory provided for each CPU module and by which data are written or read between CPU modules of the Multiple CPU system.

The CPU shared memory consists of four areas.

- · Self CPU operation information area
- · System area
- · User setting area
- Multiple CPU high speed transmission area

The CPU shared memory configuration and the availability of the communication from the self CPU using the CPU shared memory by program are shown below.

			Self CPU		Other CPU		
CPU shared memory			Write	Read	Write	Read	
(0H) to (1FFH)	0 to 511	Self CPU operation information area		×	(Note-2)	X	(Note-2)
(200H) 512 to to (7FFH) 2047	System area		X	×	X	(Note-2)	
(800H) to (FFFH)	to to User setting area	User setting area		(Note-1)	(Note-2)	×	(Note-2)
to to (270FH) 9999 (2710H) 10000 to to up to			X	X	X	×	
		Multiple CPU high speed bus	(Note-3)	(Note-3)	×	(Note-3)	

: Communication allowed : Communication not allowed

REMARK

- (Note-1): Use the MULTW instruction to write to the user setting area of the self CPU in the Motion CPU.
 - Use the S.TO instruction to write to the user setting area of the self CPU in the PLC CPU.
- (Note-2): Use the MULTR instruction to read the shared memory of self CPU and other CPU in the Motion CPU.
 - Use the FROM instruction/Multiple CPU area device (U \square \G \square) to read the shared memory of the Motion CPU from the PLC CPU.
- (Note-3): Refer to Section 2.3.2(1) for the access method of Multiple CPU high speed transmission area.

- (a) Self CPU operation information area (0H to 1FFH)
 - The following information of self CPU is stored as the Multiple CPU system

Table 2.3 Table of self CPU operation information areas

CPU shared memory address	Name	Detail	Description ^(Note)	Corresponding special register
0Н	Information availability	Information availability flag	The area to confirm if information is stored in the self CPU's operation information area (1H to 1FH) or not. O: Information not stored in the self CPU's operation information area. 1: Information stored in the self CPU's operation information area.	_
1H	Diagnostic error	Diagnostic error number	An error No. identified during diagnosis is stored in BIN.	SD0
2H	Time the diagnostic error		The year and month that the error number was stored in the CPU shared memory's 1H address is stored with two digits of the BCD code.	SD1
3H		Time the diagnostic error occurred	The date and time that the error number was stored in the CPU shared memory's 1H address is stored with two digits of the BCD code.	SD2
4H			The minutes and seconds that the error number was stored in the CPU shared memory's 1H address is stored with two digits of the BCD code.	SD3
5H	Error information identification code	Error information identification code	Stores an identification code to determine what error information has been stored in the common error information and individual error information.	SD4
6H to 10H	Common error information	Common error information	The common information corresponding to the error number identified during diagnosis is stored.	SD5 to SD15
11H to 1BH	Individual error information	Individual error information	The individual information corresponding to the error number identified during diagnostic is stored.	SD16 to SD26
1CH	Empty		Cannot be used	
1DH	Switch status	CPU switch status	Stores the CPU module switch status.	SD200
1EH	Empty	_	Cannot be used	_
1FH	CPU operation status	CPU operation status	Stores the CPU module's operation status.	SD203

(Note): Refer to the corresponding special register for details.

- 2) The self CPU operation information area is refreshed every time the applicable register has been changed in the main cycle.
- Other PLC CPU can use FROM instruction to read data from the self CPU operation information area.
 However, because there is a delay in data updating, use the read data for monitoring purposes only.
- (b) System area

The area used by the operating systems (OS) of the PLC CPU/Motion CPU.

(c) User setting area

The area for communication between CPU modules in the Multiple CPU system by MULTR/MULTW instruction of Motion CPU.

(PLC CPU use FROM/S.TO instruction or Multiple CPU area devices to communicate between CPU modules.)


Refer to the Programming Manual of operating system software for MULTR/MULTW instruction.

(d) Multiple CPU high speed transmission area

The area corresponding to the Multiple CPU high speed main base unit (Q3□DB) and Multiple CPU high speed transmission that uses the drive system controllers including PLC CPU and Motion CPU.

The image chart of Multiple CPU high speed transmission area is shown below.

Refer to Section 2.3.2(1) for access to the Multiple CPU high speed transmission area of self CPU and other CPU.

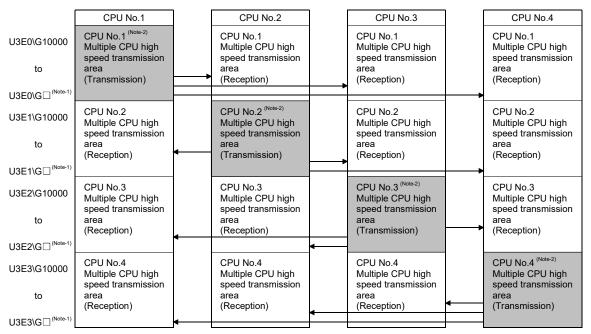

(Note-1) : The final device is "10000+(A \times 1024-B-1)".

- A : Data transmission size of each CPU (1k words in unit)
- B: Size used in the automatic refresh of each CPU.
 Refer to Section "2.3.2 Multiple CPU high speed transmission" for the size setting of A and B.

(Note-2): Transmission area to write/read in the self CPU.
Reception area from the other CPU can be read only.
It is updated every 0.88ms.

2.3.2 Multiple CPU high speed transmission

(1) Multiple CPU high speed transmission

Multiple CPU high speed transmission is a function for fixed cycle data transmission between Multiple CPUs (Multiple CPU high speed transmission cycle is 0.88[ms].).


Secure data transmission is possible without effecting the PLC CPU scan time or Motion CPU main cycle because the data transmission and execution of sequence program and Motion SFC program/Motion program can be executed with parallel processing.

High speed response between multiple CPUs is realized by synchronizing the Multiple CPU high speed transmission cycle with Motion CPU operation cycle.

The following methods of data transmission exist between Multiple CPUs for Multiple CPU high speed transmission.

- Use the Multiple CPU area device
 Set the Multiple CPU high speed transmission area by setting the Multiple CPU area device (U□\G□) in the program.
- Automatic refresh method
 Refresh the internal devices of each CPU by automatic refresh via "Multiple
 CPU high speed transmission area".


(a) Multiple CPU area device method

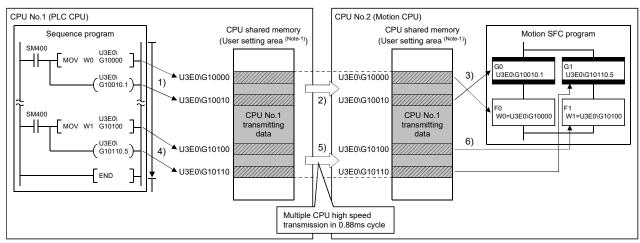

- 1), 4): Write data in the user setting area (Note-1) by the instruction that uses the Multiple CPU area device.
- 6): Read data from the user setting area (Note-1) by the instruction that uses the Multiple CPU area device.
 5): Transmit the contents of user setting area (Note-1) to the other CPU with by Multiple CPU high speed transmission in 0.88ms cycle.
 Note-1: The area composed in the Multiple CPU high speed transmission area.

(Refer to Section "(3) Memory configuration of Multiple CPU high speed transmission area".)

- 1) Access to Multiple CPU high speed transmission area
 - a) SV13/SV22
 - · Description of Multiple CPU area device

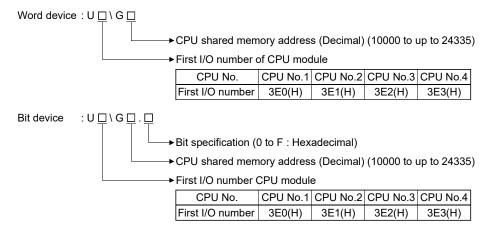

(Example)

 Multiple CPU high speed transmission memory address of CPU No.2: 10002

U3E1\G10002

 Bit 14 of CPU No.3 Multiple CPU high speed transmission memory address 10200 U3E2\G10200.E

- Example of access in the program
 - <Motion SFC program>
- Store K12345678 to the Multiple CPU high speed transmission memory 10200,10201 of self CPU (CPU No.2).

U3E1\G10200L = K12345678

 Turn on bit 12 of the Multiple CPU high speed transmission memory 10301 of self CPU (CPU No.3) SET U3E2\G10301.C


<Servo program>


 Program which executes the positioning for Axis 1 to position set in the Multiple CPU high speed transmission memory 10400, 10401 of CPU No.1 at the speed set in the 10402, 10403 of CPU No.1, and uses bit 1 of CPU No.1 Multiple CPU high speed transmission memory 10404 of CPU No.1 as a cancel signal.

ABS-1		
Axis	1,	U3E0\G10400
Speed		U3E0\G10402
Cancel		U3E0\G10404.1

b) SV43

Description of Multiple CPU area device

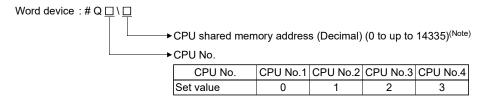

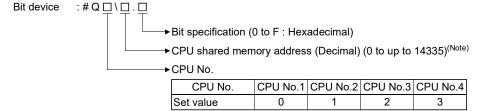

(Note): Write the value that attracted 10000 from specified CPU shared memory address.

(Accessible memory address: 10000 to 24335)

(Example)

 Multiple CPU high speed transmission memory address of CPU No.2: 10002

#Q1\2

 Bit 14 of CPU No.3 Multiple CPU high speed transmission memory address 10200 #Q2\200.E

- Example of access in the program
 - <Motion program>
- Store K12345678 to the Multiple CPU high speed transmission memory 10200,10201 of self CPU (CPU No.2).

#Q1\200:L = K12345678;

- Turn on bit 12 of the Multiple CPU high speed transmission memory 10301 of self CPU (CPU No.3)
 SET #Q2\301.C;
- Program which executes the positioning for Axis X to position set in the Multiple CPU high speed transmission memory 10400, 10401 of CPU No.1 at the speed set in the 10402, 10403 of CPU No.1, and uses bit 1 of CPU No.1 Multiple CPU high speed transmission memory 10404 of CPU No.1 as a skip signal. G32 X#Q0\400:L F#Q0\402:L SKIP #Q\404.1;

POINT

This method can be used to access only the Multiple CPU high speed transmission area of CPU shared memory. It cannot be used to access the CPU shared memory (0 to 4095).

CPU No.1 (PLC CPU) CPU No.2 (Motion CPU) CPU shared memory (Automatic refresh area (Note-1)) CPU shared memory Sequence program (Automatic refresh area (Note-1)) Device memory Device memory SM400 INC D0 1) DΩ 3) 2) Refresh at the CPU No.1 CPU No.1 timing of END D2000 transmitting transmitting processing data data Refresh at the INC D1 timing of Motion CPU main cycle Multiple CPU high speed transmission in 0.88ms cycle CPU No.1 to CPU No.2 CPU No.1 to CPU No.2 Transmit D0 Receive D2000

(b) Example of using automatic refresh method

- 1) Transmit the content of D0 to the automatic refresh area (Note-1) at the time of END processing by parameter setting.
 2) Transmit the content of automatic refresh area (Note-1) to the other CPU by Multiple CPU high speed transmission at 0.88ms cycle.
 3) Read the content of automatic refresh area (Note-1) at the time of Motion CPU main cycle and transmit it to D2000 by parameter setting.
- Note-1: The area composed in the Multiple CPU high speed transmission area.

 (Refer to Section "(3) Memory configuration of Multiple CPU high speed transmission area".)

(2) System configuration

Multiple CPU high speed transmission can be used only between CPU modules for the Multiple CPU high speed transmission installed in the Multiple CPU high speed main base unit (Q3□DB).

The system configuration specification is shown in Table 2.4.


Table 2.4 System configuration to use Multiple CPU high speed transmission

Object	Restrictions
Base unit	Multiple CPU high speed main base unit (Q3□DB) is used.
	QnUD(E)(H)CPU/QnUDVCPU is used for CPU No.1.
CPU module	Q173D(S)CPU/Q172D(S)CPU and QnUD(E) (H)CPU/QnUDVCPU are
	used for CPU No.2 to CPU No.4

"MULTI EXE. ERROR (error code: 7011) will occur if the power supply of Multiple CPU system is turned on without matching the system configuration shown in Table 2.4.

(3) Memory configuration of Multiple CPU high speed transmission area

Memory configuration of Multiple CPU high speed transmission area is shown below.

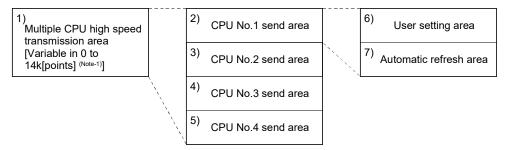

(Note-1): Multiple CPU high speed transmission area;

14k[points]: Maximum value when constituted with two CPUs 13k[points]: Maximum value when constituted with three CPUs 12k[points]: Maximum value when constituted with four CPUs

Table 2.5 Description of area

			Si	ze
No.	Name	Description	Setting range	Setting unit
1)	Multiple CPU high speed transmission area	 Area for data transmission between each CPU module in the Multiple CPU system. The area up to 14k [points] is divided between each CPU module that constitutes the Multiple CPU system. 	0 to 14k	1k
2) 3) 4) 5)	CPU No. n send area (n=1 to 4)	 Area to store the send data of each CPU module. Sends the data stored in the send area of self CPU to the other CPUs. Other CPU send area stores the data received from the other CPUs. 	0 to 14k	1k
6)	User setting area	 Area for data communication with other CPUs using the Multiple CPU area device. Can be accessed by the user program using the Multiple CPU area device. Refer to Section 2.3.2 (1) for details of this area. 	0 to 14k	2
7)	Automatic refresh area	 Area for communicating device data with other CPUs by the communication using the automatic refresh. Access by user program is disabled. Refer to Section "(4)(b) Automatic refresh setting" for details of this area. 	0 to 14k	2

(4) Parameter setting

The parameter setting list for use with the Multiple CPU high speed transmission is shown in Table 2.6.

Table 2.6 Multiple CPU high speed transmission parameter list

Name	Description	Target CPU
Multiple CPU high	Set the size of the Multiple CPU high speed	
speed transmission	transmission area allocated in each CPU module	
area setting	which composes the Multiple CPU system.	All CDLIe
A	Set the range to execute the data transmission by	All CPUs
Automatic refresh	the automatic refresh function among the user area	
setting	in the Multiple CPU high speed transmission area.	

(a) Multiple CPU high speed transmission area setting Multiple CPU high speed transmission area setting screen and setting range are shown below.

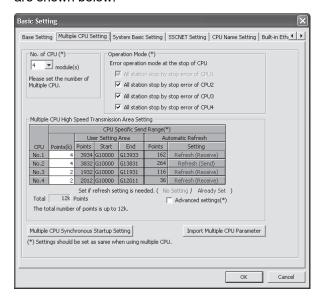



Table 2.7 Parameter setting items of Multiple CPU high speed transmission area setting

Item			Setting	descripti	on		Setting/display value	Restriction	Consistency check
CPU	С	PU No. corres	ponding	to displa	ayed pa	rameters.	CPU No.1 to No.4	_	_
	Set the number of points of data that each CPU module sends. Default value assigned to each CPU is shown below.							Set the total of all CPUs to be the following points or lower.	
CPU specific send range		Number of CPUs		end rang CPU No.2			Range: 0 to 14k [points] Unit: 1k [point] (Points: Word in units)	When constituted with two CPUs: 14k [points] When constituted with three	Provided
		2 3 4	7k 7k 7k 3k	7k 3k 3k	3k 3k	— — 3k		CPUs: 13k [points] When constituted with four CPUs: 12k [points]	
Automatic refresh	Used when communicating with the other CPU tic using the automatic refresh. Number of points that is set by the "automatic refresh setting" is displayed.				Range: 0 to 14336 [points] Unit: 2 [points]	Do not exceed the number of points of the CPU specific send range.	_		
User setting area	Used when communicating with the other CPU using the program. The value where the "number of points set in the					et in the	Range: 0 to 14336 [points] Unit: 2 [points]	_	

POINT

Selecting "Advanced setting" enables the ability to change the number of points from 1k to 2k in the system area used for Motion dedicated PLC instructions. Changing the number of points in the system area to 2k increases the number of Motion dedicated PLC instructions that can be executed concurrently in a scan. The screen where "Advanced setting" is selected is shown below.

Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)" for the Motion dedicated PLC instruction.

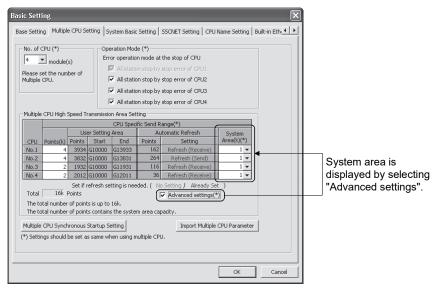

Item	Setting description	Setting/display value (Points: Word in units)	Restriction	Data size consistency check
CPU specific send range	Set the number of points of data that each CPU module sends.	Range: 0 to 14k [points] Unit: 1k [points]	Set the total of all CPUs to be the following points or lower. When constituted with two CPUs: 14k [points] When constituted with three CPUs: 13k [points] When constituted with four CPUs: 12k [points]	Provided
System area	Set the number of points for a system area to be assigned for each CPU module. (Default value of system area size is 1k [point].)	Range: 1k/2k [points]	_	Provided
Total	Display the total of number of points of the self CPU send area and the system area that are assigned to the each CPU module.	Range: 1 to 16k [points] Unit: 1k [points]	Set the total of all CPUs to 16.0k points or lower.	_

(b) Automatic refresh setting

Setting for use of the automatic refresh function in the Multiple CPU high speed transmission area.

Up to 32 setting ranges can be set for each CPU module.

Automatic refresh setting screen and setting range are shown below.

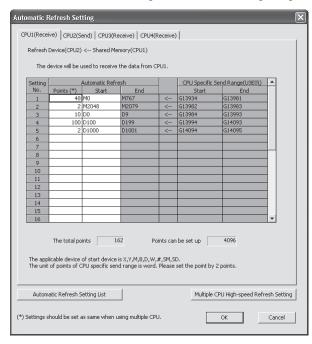


Table 2.8 Parameter setting items of automatic refresh setting


Item	Setting description	Setting range	Restriction	Data size consistency check
CPU selection	Select the CPU module for editing of the CPU specific send range setting.	CPU No.1 to No.4	CPU No. which exceeds the number of CPU modules cannot be selected.	_
Setting No.	The setting No. for transmission of each CPU module is displayed. Automatic refresh is executed between devices set to the same setting No. for all CPUs that constitute the Multiple CPU system.	1 to 32	_	_
Points	Set the number of points for data communication.	Range: 2 to 14336 [points] Unit: 2 [points]	Setting which exceeds the number of points of the self CPU send area allocated to each CPU module (CPU specific send range) cannot be set. Bit device can be specified in units of 32 points (2 words) only.	Provided
Start	Specifies the device which performs the data communication (automatic refresh). Specifies the device sent by the self CPU when the "Send source CPU selection" is the self CPU, and specifies the device received by the self CPU when the CPU specific send range setting is the other CPU.	Usable device (X, Y, M, B, D, W, #, SM, SD) Note) Set "blank" when automatic refresh is not executed.	Bit device can be specified in units of 16 points (1 word) only. Device number cannot be duplicated.	None

POINT

The processing performance of automatic refresh improves when devices are transmitted in 2 word sets. Therefore, it is recommended to set the start device as 2 word unit by inputting an even device number.


- 1) Operation example of automatic refresh
 - a) 2 CPU modules (1 PLC CPU, 1 Motion CPU) use
 - · Parameter setting

The setting example of automatic refresh is shown below.

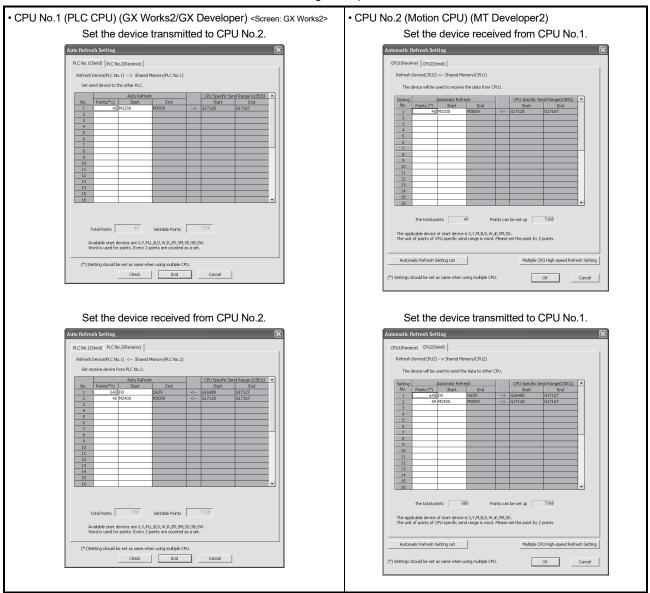

(Note): The operation example of automatic refresh is shown on the next page.


Operation example The example of operating automatic refresh is shown below.

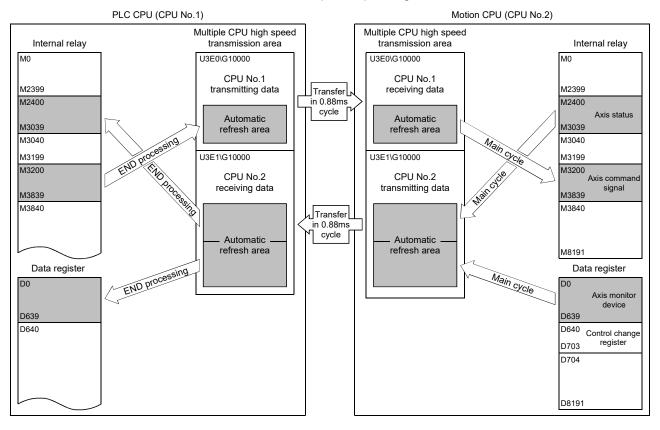


- b) 3 CPU modules (1 PLC CPU, 2 Motion CPUs) use
 - · Parameter setting

The setting example of automatic refresh is shown below.


CPU No.1 (PLC CPU) (GX Works2/GX Developer) <Screen: GX Works2>
 Set the device transmitted to CPU No.2 and No.3.

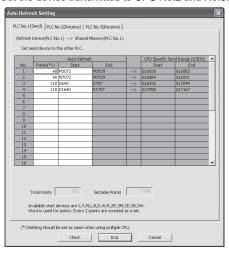

Set the device received from CPU No.2.

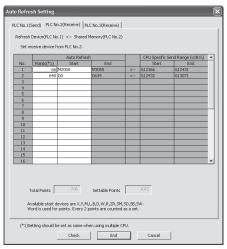


Set the device received from CPU No.3.

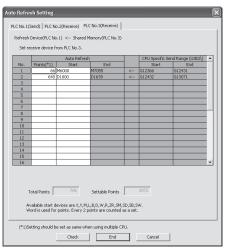


CPU No.2 (Motion CPU) (MT Developer2)


Set the device received from CPU No.1.

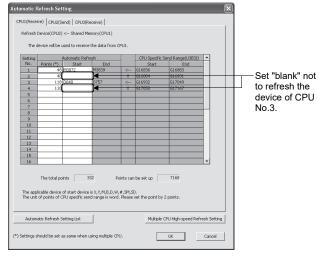


Set the device transmitted to CPU No.1 and No.3.

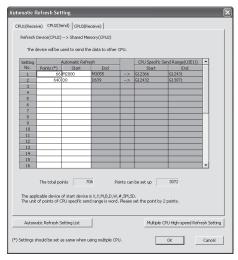


Set the device received from CPU No.3.

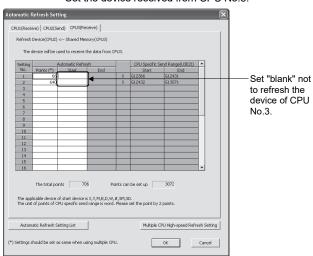


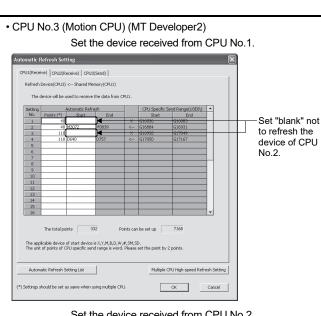

Set the device received from CPU No.2.

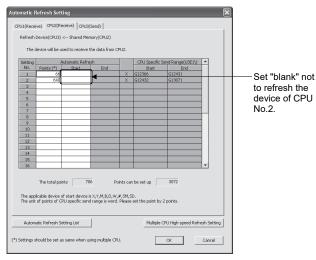


Set the device transmitted to CPU No.1 and No.2.

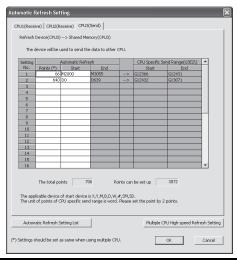

(Note): The operation example of automatic refresh is shown on the next page.


Operation example The example of operating automatic refresh is shown below.

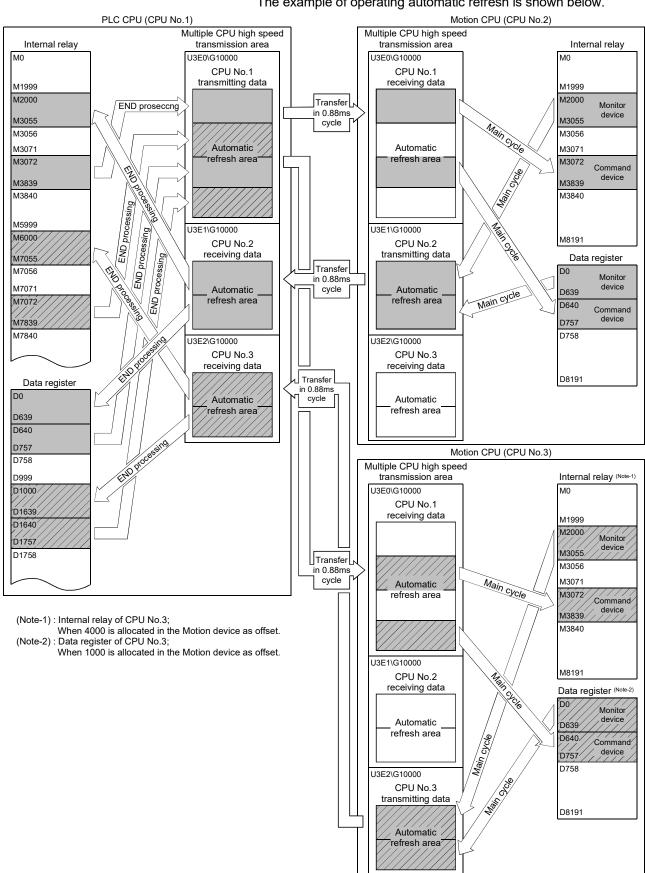



Set the following operation for automatic refresh setting using GX Works2/GX Developer.

- 1) Select tab "Multiple CPU high speed transmission area setting".
- 2) Set "Use Multiple CPU high speed transmission".

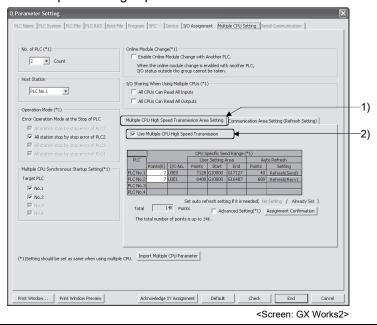

(c) Data size consistency check

Whether the Multiple CPU setting parameters are the same for all CPUs or not is automatically checked. A "PARAMETER ERROR (error code: 3012, 3015)" will occur if they do not match.

(5) Precautions

(a) Assurance of data sent between CPUs

Due to the timing of data sent from the self CPU and automatic refresh in any of the other CPUs, old data and new data may become mixed (data separation).

The following shows the methods for avoiding data separation at communications by automatic refresh.

1) Data consistency for 32 bit data

Transfer data with automatic refresh method is in units of 32 bits. Since automatic refresh is set in units of 32 bits, 32-bit data does not separate.

- For word data
 - 2 words data can be prevented from separating by using an even number to set the first number of each device in automatic refresh setting.
- 2) Data consistency for data exceeding 32 bits

In automatic refresh method, data is read in descending order of the setting number in automatic refresh setting parameter.


Transfer data separation can be avoided by using a transfer number lower than the transfer data as an interlock device.

2.3.3 Multiple CPU high speed refresh function

This function is used to update the data between internal devices of Motion CPU and the Multiple CPU high speed transmission area. This occurs every operation cycle as defined in the device setting of automatic refresh in the self CPU.

Classification	Item	Description	Setting/display value	Restriction
	Setting No.	Setting No. which executes high speed refresh is displayed.	1 to 128 (Up to 128)	
Display	CPU	CPU No. set in the automatic refresh setting is automatically displayed by setting devices. Self CPU: Refresh from the internal device of Motion CPU to Multiple CPU high speed transmission area. Other CPU: Refresh form the Multiple CPU high speed transmission area to internal device of Motion CPU.	CPU No. 1 to No.4	
	Device setting	Set the device No. of Motion CPU to execute the high speed refreshes.	Usable device : D, W, #, SD, M, X, Y, B, SM	 The start device number must be a multiple of 16 for the bit device. Do not set a device not setting also set in the automatic refresh. No. of "start device + number of points" cannot exceed setting range of each setting No. in automatic refresh setting. Do not overlap the device No. between setting No
	Points	Set the number of points to refresh data of each data in word unit. (Note) Refresh is not executed when not set.	Range: 2 to 256 [points] Unit: 2 points ^(Note-1)	Sets the total of all CPUs to 256 points or lower.
	Refresh cycle	Operation cycle (fixed)	_	When the operation cycle is smaller than 0.88ms, the operation cycle is 0.88ms.

(Note-1): Point in word unit.

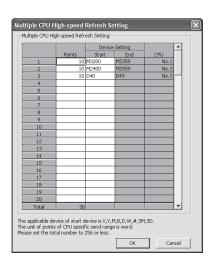


- (1) Application example of Multiple CPU high speed refresh function Multiple CPU high speed refresh function is used as in the following applications.
 - Read the data such as the real current value and synchronous encoder current value with PLC CPU at high speed.
 - 2) Exchange the FIN waiting signal at high speed.


(2) Operation example of Multiple CPU high speed refresh function

(a) Parameter setting

The automatic refresh setting of Multiple CPU high speed refresh is shown below.

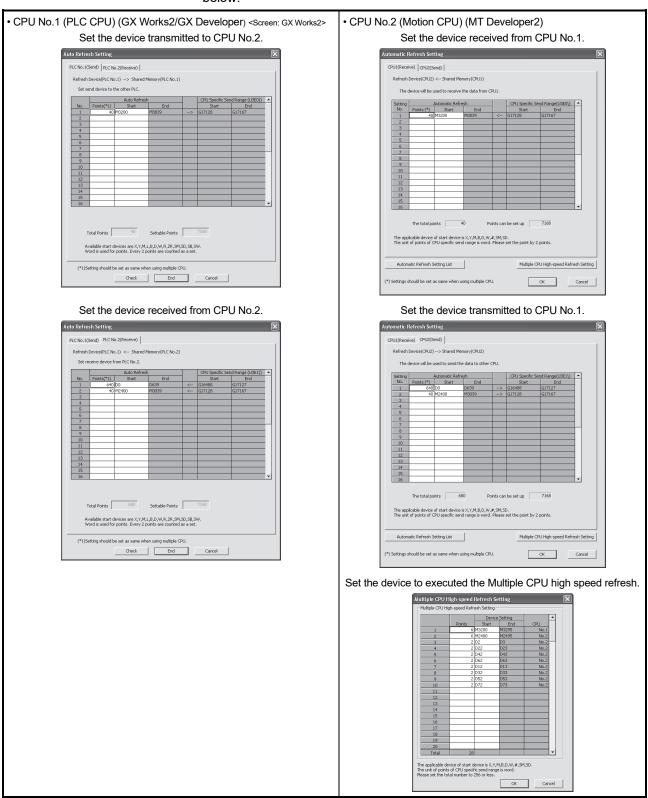


(Note): The operating example of Multiple CPU high speed refresh function is shown in "(b) Operation example".

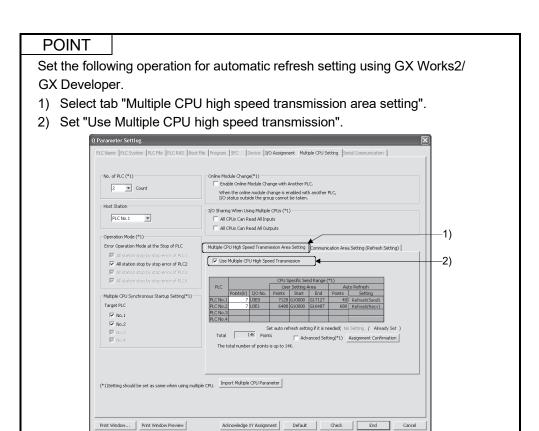

<Screen: GX Works2>

(b) Operation example The example of operating Multiple CPU high speed refresh function is shown below.

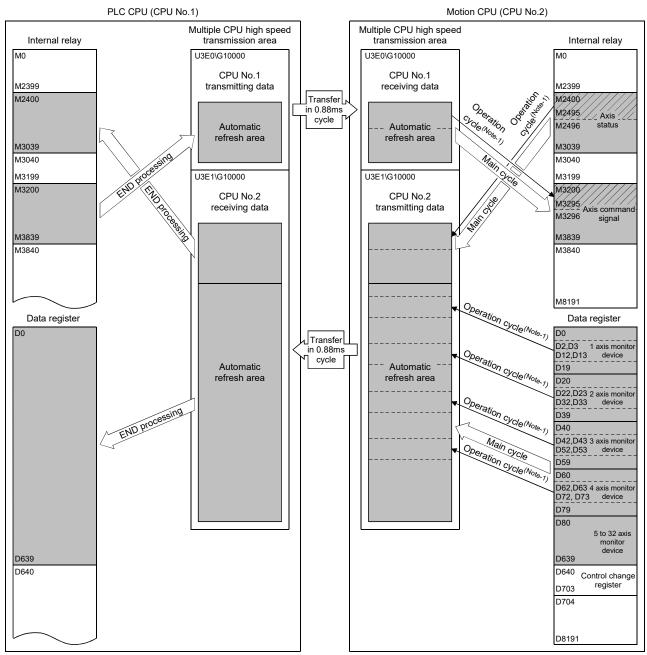

(Note-1): When the operation cycle is smaller than 0.88ms, the operation cycle is 0.88ms.

- The statuses of M2400 to M2495 for axis 1 to axis 4 in axis status M2400 to M3039 which is being automatically refreshed are updated to the Multiple CPU high speed transmission area every operation cycle.
- The command signals of M3200 to M3295 for axis 1 to axis 4 in axis command signal M3200 to M3839 which is being automatically refreshed are updated from the Multiple CPU high speed transmission area to Motion CPU positioning dedicated devices every operation cycle.

 The real current value for axis 1 to axis 4 and M-code in axis monitor device D0 to D639 which is being automatically refreshed are updated to the Multiple CPU high speed transmission area every operation cycle.

2.3.4 Clock synchronization between Multiple CPU

The clock of each CPU is synchronized with the clock of CPU No. 1. The clock data used for synchronization in a Multiple CPU system can be edited.

(1) Setting of clock data

Set the clock of CPU No.1. The Motion CPU module operates automatically by the clock of CPU No.1.

POINT

The clock data of CPU No.1 is automatically set even if the clocks of CPU No. 2 to 4 are set independently.

(2) Synchronization of clock data

All clocks are synchronized with CPU No.1 immediately after turning ON/resetting power and every 1-second interval thereafter.

(3) Information of clock

The clock data that CPU No. 1 transmits is year, month, day, day of week, hour, minute and second.

(4) Error

Since CPU No.1 sets the clock data at 1-second intervals, an error of up to 1 second may occur to the clock of CPU No.2 to 4.

2.3.5 Multiple CPU synchronous startup

Multiple CPU synchronous startup function synchronizes the startups of CPU No.1 to CPU No.4. (It takes about ten seconds to startup for Motion CPU.)

Since this function monitors the startup of each CPU module, when other CPU is accessed by a user program, an interlock program which checks the CPU module startup is unnecessary.

With the Multiple CPU synchronous startup function, the startup is synchronized with the slowest CPU module to startup; therefore, the system startup may be slow.

POINT


Multiple CPU synchronous startup function is for accessing each CPU module in a Multiple CPU system without needing an interlock.

This function is not for starting an operation simultaneously among CPU modules after startup.

(1) Multiple CPU synchronous startup setting

To use the Multiple CPU synchronous startup function, check No.1 to No.4 of target CPU in Multiple CPU settings in system setting of MT Developer2. (Set it in the Multiple CPU setting of PLC parameter setting of GX Works2/GX Developer for PLC CPU.)

"Set Sync. startup setting of CPU□" is set for No.1 to 4 at default.

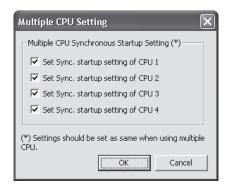

Set the same Multiple CPU synchronous startup for all CPUs that constitute the Multiple CPU system.

The self-diagnosis error "PARAMETER ERROR (error code: 3015)" will occur if all CPU modules that constitute the Multiple CPU system do not have the same setting.

When this function is not used (each CPU startup without synchronization), startup of each CPU module can be confirmed by using special relays SM220 to SM223 (CPU No.1 to 4 READY complete flag).

2.3.6 Control instruction from PLC CPU to Motion CPU


Control can be instructed from the PLC CPU to the Motion CPU using the Motion dedicated PLC instructions listed in the table below.

Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)" for the details of each instruction. (Control may not be instructed from one Motion CPU to another Motion CPU.)

	Desc	Description				
Instruction name	SV13/SV22	SV43				
D(P).SFCS	Start request of the Motion SFC program (Program No. may be specified.)	Start request of the Motion program (Control program)				
D(P).SVST	Start request of the specified servo program	Start request of the specified Motion program (Axis designation program)				
D(P).CHGA	Current value change request of the specified axis	Home position return request of the specified axis				
D(P).CHGAS	Current value change request of the specified command generation axis	Unusable				
D(P).CHGV	Speed change request of the specifie	d axis				
D(P).CHGVS	Speed change request of the specified command generation axis	Unusable				
D(P).CHGT	Torque control value change request of the specified axis					
D(P).CHGT2	Torque control value individual change request of the specified axis	Unusable				
D(P).GINT	Execute request of an event task to the other CPU (Motion CPU)	Unusable				
D(P).DDWR	Writes device data of the self CPU (PLC CPU) to the device of other CPU (Motion CPU)					
D(P).DDRD	Reads device data of other CPU (Mot (PLC CPU)	ion CPU) to the device of self CPU				

For example, by using the D(P).SFCS instruction of Motion dedicated PLC instruction, the Motion SFC of the Motion CPU can be started from the PLC CPU.

<Example>

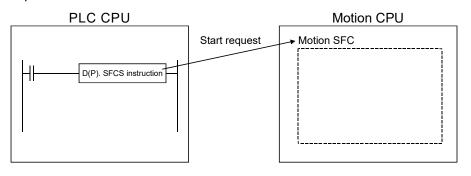

Ver.!: Refer to Section 1.5 for the software version that supports this function.

3. COMMON PARAMETERS

3.1 System Settings

In the Multiple CPU system, the common system parameters and individual parameters are set for each CPU and written to each CPU.

- (1) The base settings, Multiple CPU settings and Motion slot settings are set in the common system parameter setting.
- (2) The following are set in the individual parameter setting.
 - System basic setting
 - SSCNET setting QDS
 - CPU name setting
 - Built-in Ethernet port setting
 - CPU setting
 - Manual pulse generator/synchronous encoder setting QDS
 - · Servo amplifier setting
 - · High-speed read setting
 - · Optional data monitor setting
 - Mark detection setting QDS
- (3) The data setting and correction can be performed in dialog form using MT Developer2.

3.1.1 System data settings

Table 3.1 lists the system data items to be set.

Table 3.1 System data setting list

		Item		Setting range	Initial value	Remark	
		Main base		5/8/12 slots	Main base: 8 slots	Set the number of slots in the	
	Base setting	Extension base		Stage 1 to 7: Nothing/2/3/5/8/10/12 slots	Stage 1 to 7:Nothing	main base or extension base.	
,		No. of CPU		2/3/4 modules	2 modules	Set the total number of Multiple CPUs including PLC CPU(s).	
ers		Error operati stop of CPU	ion mode at the	Stop/do not stop all CPUs upon an error in CPU No. 1 to 4. (The setting range varies depending on the number of Multiple CPUs.)	Stop all CPUs upon error in CPU Nos. 1 to 4	Set whether or not to stop the entire system when a CPU stop error occurs in each CPU.	
aramet	Multiple CPU	Multiple CPU	CPU specific send range	0 to 14k points	Varies depending on the number of CPUs.		
μ	setting	high speed transmission	System area	1 to 2k points	1	Refer to Section 2.3.2.	
syster		area setting	Automatic refresh setting	Point: 2 to 14336 points Start: Set target device for automatic refresh.	None		
Common system parameters		Multiple CPU startup settir	J synchronous ng	Set/do not set CPU No. 1 to 4 as the synchronized startup. (The setting range varies depending on the number of Multiple CPUs.)	Set CPU No. 1 to 4 as the synchronized startup.	Refer to Section 2.3.5.	
	Motion slot	Module arra	ngement	Within the main base and extension base slots	None	Install the modules controlled by the self CPU in the main base and/or extension base(s).	
	setting	Individual module		Varies depending on the module.	Varies depending on the module.	Set detailed items for each module controlled by the self CPU.	
		Operation cycle		0.2ms@st/0.4ms/0.8ms/1.7ms/3.5ms/7.1ms/ 14.2ms@st/Default setting	Default setting	Set the operation cycle of motion control.	
		Operation at STOP to RUN		M2000 is turned on by switching from STOP to RUN./M2000 is turned on by switching from STOP to RUN and setting 1 in the set register.	M2000 is turned on by switching from STOP to RUN.	Set the condition in which the PLC ready flag (M2000) turns on.	
		Error setting on servo warning		Output error/Not output error	Output error	Set whether or not to output error to motion error history or self-diagnosis error on servo warning.	
	System basic setting	Error check CDSK		Perform battery check/Not perform battery check	Perform battery check	Set whether or not to check the battery of Motion CPU.	
parameters	setung	Forced stop (Note-1)		Nothing/X (PX) (0 to 1FFF)/M (0 to 8191)	Nothing	Set the bit device to use forced stop in the program. However, the forced stop input by EMI terminal of Motion CPU module cannot be invalidated using parameter setting.	
Individual		Latch range		M (0 to 8191)/B (0 to 1FFF)/F (0 to 2047)/ D (0 to 8191)/W (0 to 1FFF)	None	Set the latch range of device memory.	
Jul		DOG/CHANGE signal input method QDS(Response time priority method/Fixed cycle input method/Operation cycle input method	Fixed cycle input method	Sets the input method when an input device (PX) is set to a DOG/CHANGE signal.	
	SSCNET setting QDS(Communication type		SSCNETII/H/SSCNETII	SSCNETII/H	Set the communication type for every line.	
	CPU name	Label		Up to 10 characters	None	Set the label (name application)	
] .	setting	Comment		Up to 64 characters	None	and comment of Motion CPU.	
			nput format P address	Decimal/Hexadecimal Decimal : 0.0.0.1 to 223.255.255.254 Hexadecimal : 00.00.00.01 to DF.FF.FF.FE	Decimal 192.168.3.39		
	Built-in Ethernet port	address	Subnet mask pattern	Decimal : 192.0.0.0 to 255.255.255.252 Hexadecimal : C0.00.00.01 to FF.FF.FF.FC	None	Refer to Section 4.13.	
	setting		Default router IP address	Decimal : 0.0.0.1 to 223.255.255.254 Hexadecimal : 00.00.00.01 to DF.FF.FF.FE	None		
		Communica	tion data code	Binary code/ASCII code	Binary code		

Table 3.1 System data setting list (Continued)

		Item		Setting range	Initial value	Remark	
	Built-in	Enable online	e change	Setting range	ITIItiai vaide	Remark	
	Ethernet port	(MC protocol	•	Enable online change/Disable online change	Disable online change	Refer to Section 4.13.	
	setting	Open setting		_	None		
•	3		tallation position	Set self CPU/other CPU/CPU (empty) for slots 0/1/2. (The setting range varies depending on the number of Multiple CPUs installed.)	None	Set the installation position of the self CPU in the main base.	
		Input setting	QDS(Used/Unused	Unused		
		First input		0000 to 0FF0 (in units 16 points)	0000		
		High-spee (Note-2)	d read setting	Used/Unused	Unused	Set the input signal of built-in interface in Motion CPU	
	CPU setting	Input signal d	letection direction	Valid on leading edge (Normal open contact)/ Valid on trailing edge (Normal closed contact)	Valid on leading edge (Normal open)	(DI)/mark detection input signal.	
		Multiple CPU control setting	synchronous g ^(Note-3)	Independent CPU/master CPU/slave CPU for self CPU.	Independent CPU		
		Status dev	vice setting	Set device to "Synchronous controlling", "Status for each CPU", and "Error status for each CPU and axis". Bit device : X, Y, M, B, F Word device : D, W, #, U□\G	None	Set the Multiple CPU synchronous control setting in each CPU.	
•	Manual pulse generator/incremental	generator/inc	Manual pulse remental encoder (INC)	Used/Not used	Not used	Set the manual pulse generator/	
	synchronous encoder setting QDS (Input type setting		Differential output type/ Voltage output/open collector type	Differential output type	synchronous encoder of built-in interface in Motion CPU.	
Individual parameters		Amplifier information	Amplifier model (Communication type "SSCNETII/H" use)	MR-J5(W)-B(-RJ)/MR-J4(W)-B(-RJ)/ MR-JE-B(F)/FR-A800-1/FR-A800-2/ VCII(CKD Nikki Denso)/ VPH (CKD Nikki Denso)/ AlphaStep AZ (ORIENTAL MOTOR)/ 5-phase ST (ORIENTAL MOTOR)/ IAI Driver for Electric Actuator (IAI)	MR-J5(W)-B(-RJ)		
4			Amplifier model (Communication type "SSCNETII" use)	MR-J3(W)-B/MR-J3-B(S) Fully closed/ MR-J3(W)-B Linear/MR-J3(W)-B DD motor/ FR-A700/VCII (CKD Nikki Denso)/ VPH (CKD Nikki Denso)	MR-J3(W)-B		
			Amplifier operation mode (Note-3)	<"MR-J5(W)-B(-RJ), MR-J4(W)-B(-RJ)" use> Standard/Fully closed/Linear/DD motor <"MR-JE-B(F)" use> Standard	Standard		
			Amplifier	Setting for 67108864-pulse encoder	Setting for 67108864-		
	Amplifier		electronic gear	resolution ([Pr.PA06]/[Pr.PA07] = 16/1)/	pulse encoder resolution	Set the model name, axis No.	
	setting		setting (Note-4) ver	Setting for other encoders ([Pr.PA06]/[Pr.PA07] = 1/1)	([Pr.PA06]/[Pr.PA07] = 16/1)	and other details for the servo	
	QDS(Axis	Axis No.	Q173DSCPU: Up to 2 lines, 32 axes	None	amplifiers.	
		information	Avis Jahol	Q172DSCPU: Up to 1 line, 16 axes	None	+	
		External sync	Axis label chronous encoder (Note-6) Ver	Up to 32 characters Invalid/ABS/INC	None Invalid		
		Input filter setting (Note-3) (Communication type "SSCNETII/H" use) Input filter setting (Note-7) (Communication type		<pre><"MR-J5(W)-B(-RJ)" use> Nothing/0.5ms/1.0ms/1.5ms/2.0ms/2.5ms/ 3.0ms/3.5ms/4.0ms/4.5ms/5.0ms/5.5ms <"MR-J4(W)-B(-RJ), MR-JE-B(F)" use> Nothing/0.8ms/1.7ms/2.6ms/3.5ms</pre> Nothing/0.8ms/1.7ms/2.6ms/3.5ms	3.5ms		
		Off (Note-8)	vel during Power-	0 to 8191 revolution	10		
		ABS/INC sett	ing (Note-9) Ver.	INC/ABS	INC		

Table 3.1 System data setting list (Continued)

		Item	Setting range	Initial value	Remark	
		Amplifier model	MR-J3(W)-B/MR-J3-B(S) Fully closed/ MR-J3(W)-B Linear/MR-J3(W)-B DD motor/ FR-A700/VCII (CKD Nikki Denso)	MR-J3(W)-B		
		Axis No.	Q173DCPU(-S1): Up to 2 lines, 32 axes Q172DCPU(-S1): Up to 1 line, 8 axes	None		
	Amplifier setting	Axis name (SV43)	Q173DCPU(-S1): X/Y/Z/U/V/W/A/B/CX/CY/ CZ/CU/CV/CW/CA/CB/DX/ DY/DZ/DU/DV/DW/DA/DB/ EX/EY/EZ/EU/EV/EW/EA/ EB Q172DCPU(-S1): X/Y/Z/U/V/W/A/B/C	None	Set the model name, axis No. and other details for the servo amplifiers.	
ì		External signal input setting	Amplifier input invalid/Amplifier input valid	Amplifier input invalid		
		Input filter setting (Note-7)	Nothing/0.8ms/1.7ms/2.6ms/3.5ms	3.5ms		
		Allowable travel during Power-Off (Note-8)	0 to 8191 revolution	10		
l		ABS/INC setting (Note-9)	INC/ABS	INC]	
parameters		Pulse/synchronous encoder I/F module	Either of Q172DEX and Q173DPX. Q172DEX: Up to 2 points Q173DPX: Up to 3 points			
Individual par	High-speed reading data (Note-2)	PLC input module	Either of one input module and built-in interface in Motion CPU Input module: Up to 8 points Built-in interface in Motion CPU (DI): Up to 4 points	None	Refer to Section 4.3.	
	Optional data n	nonitor setting	<communication "sscnetii="" h"="" type="" use=""> Set 1 to 6 for each axis. <communication "sscnetii"="" type="" use=""> Set 1 to 3 for each axis. Q173DSCPU: Up to 32 axes Q172DSCPU: Up to 16 axes</communication></communication>	None	Refer to Section 4.10.	
	Optional data monitor setting		Set 1 to 3 for each axis. Q173DCPU(-S1): Up to 32 axes Q172DCPU(-S1): Up to 8 axes	None	Refer to Section 4.10.	
	Mark detection		Set 1 to 32.	None	Refer to Section 4.14.	
	High-speed inp	ut request signal ^(Note-6)	Set 1 to 32.	None	Refer to Section 4.15.	
	Head module		Set module 1 to 4 for each line. Q173DSCPU: 2 lines (Up to 8 modules) Q172DSCPU: 1 line (Up to 4 modules)	None	Refer to Section 4.18	

⁽Note-1): The forced stop can also be executed by the EMI forced stop terminal of Motion CPU module or forced stop terminal of servo amplifier besides the forced stop input setting.

Ver.!): Refer to Section 1.5 for the software version that supports this function.

⁽Note-2): This cannot be set in SV22 advanced synchronous control.

⁽Note-3): This can only be set when "MR-J5(W)-B(-RJ)", "MR-J4(W)-B(-RJ)", or "MR-JE-B(F)" is selected for the amplifier model.

⁽Note-4): This can only be set when "MR-J5(W)-B(-RJ)" is selected for the amplifier model.

⁽Note-5): This can only be set when "MR-J5(W)-B(-RJ)" or "MR-J4(W)-B(-RJ)" is selected for the amplifier model.

⁽Note-6): This can only be set in SV22 advanced synchronous control.

 $⁽Note-7): This \ can \ only \ be \ set \ when \ "MR-J3(W)-B", \ "MR-J3-B(S) \ Fully \ closed", \ "MR-J3(W)-B \ Linear", \ "MR-J3(W)-B \ DD \ motor", \ or \ Additional \ and \ Additional \ Additional\ Additional \ Additional \ Additional \ Additional \ Additional$ "MR-MT1200" is selected for the amplifier model.


⁽Note-8): This can only be set when "MR-J3(W)-B" or "MR-J3-B(S) Fully closed" is selected for the amplifier model.

⁽Note-9): This can only be set when "VCII (CKD Nikki Denso)" is selected for the amplifier model.

3.1.2 Common system parameters

(1) Parameters for operating the Multiple CPU system

In the Multiple CPU system, the common system parameters and individual parameter for each CPU are set and written into each CPU. Regarding the Motion CPU, the items in System Settings related to the entire Multiple CPU system must be identical to the parameter settings in the PLC CPU.

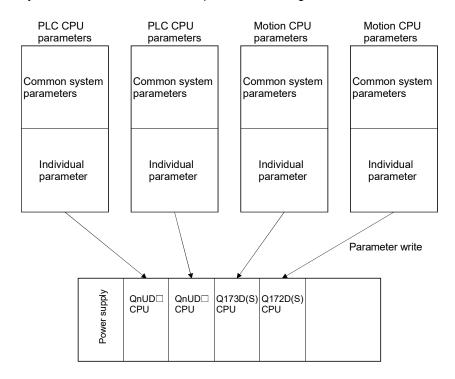

(2) Parameters common throughout the Multiple CPU system
In the Motion CPU, during initialization the parameters in the table below are
verified against the parameters in the PLC CPU of CPU No. 1. Unmatched
parameters generate a PARAMETER ERROR (error code: 3012, 3015), so the
parameters show below must be set identically between Motion CPUs and the
PLC CPU of CPU No.1. (If the system settings are changed in a Motion CPU, it is
necessary to reset. Therefore, the parameters are checked only during
initialization.)

The parameter No. of unmatched parameter is set in the error individual information (SD16) by this error occurrence.

The parameters of the other CPUs via "Multiple CPU parameter utilization" can be used in MT Developer2/GX Works2/GX Developer. The common parameters must be set for each Motion CPU.

Table of Parameters cross-Multiple CPU system


Type of parameter					Verification item		Parameter	Remark	
Name in Motion CPU			Name in PLC CPU			verification item		number	Remark
Multiple CPU setting	No. of CPU			No. of PLC		Numb	er of CPUs	0E00H	
	Operating mode			Operating mode		Operation mode for CPU stop error		0E01H	
	Multiple CPU high speed transmission area setting	CPU specific send range	Multiple CPU settings	Multiple CPU high speed transmission area setting	CPU specific send range	Points send r	of CPU specific ange	E008H	Refer to Section 2.3.2.
		System area			System area	Syster	n area size	E008H	Refer to Section 2.3.2. This parameter can be set when "Advanced setting" is selected.
		Automatic refresh setting			Automatic refresh setting	Points of automatic refresh		E009H	Refer to Section 2.3.2. (Automatic refresh using Multiple CPU high speed transmission area)
	Multiple CPU synchronous startup setting			Multiple CPU synchronous startup setting		Synchronize Multiple CPU startup or not		E00BH	Refer to Section 2.3.5.
Motion slot setting				Detailed settings	Control PLC	Control CPU No.		0406H	Verify module only set in the system settings in the Motion CPU side.
Base setting			Basic setting	Basic setting	Slots	Total r	Base No. Number of base slots	0401H	Not verified if base settings are omitted in the PLC CPU side.

(a) Multiple CPU settings

Set the following items identically in Multiple CPU Settings (Motion CPU) in MT Developer2 and in Multiple CPU Settings (PLC CPU) in GX Works2/GX Developer.


- Number of CPU modules (Included CPU empty slots)
- Operation mode when a CPU stop error occurred
- Multiple CPU high speed transmission area setting (Must be set the same for all CPUs)
- · Multiple CPU synchronous startup setting



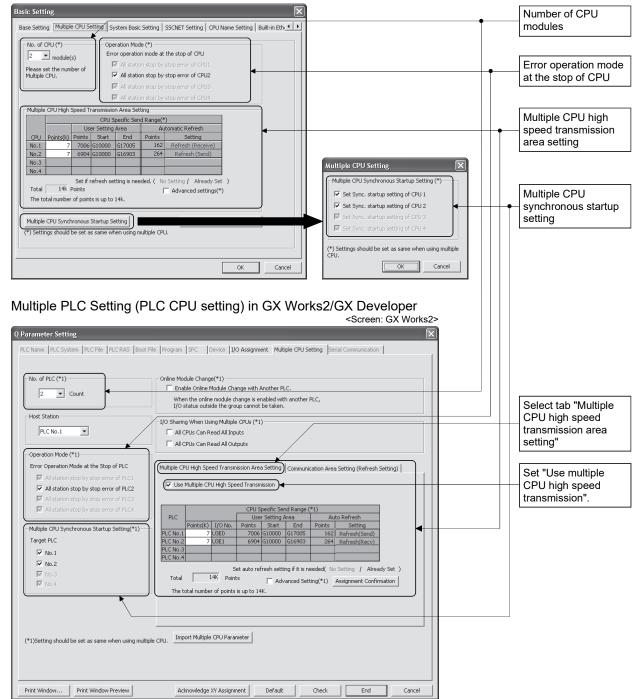

(b) Motion slot settings Set the modules controlled by the self CPU by the Motion Slot Settings (Motion CPU) in MT Developer2. In GX Works2/GX Developer, set the slot for Motion CPU control as the CPU number of Motion CPU in I/O Assignment Settings (PLC CPU).

Motion Slot Setting (Motion CPU) in MT Developer2

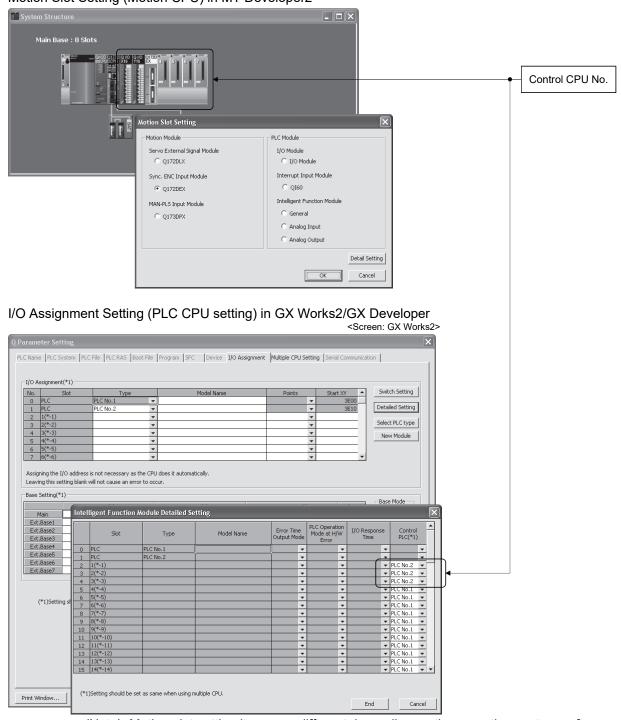


(Note): Motion slot setting items are different depending on the operating system software.

(c) Base settings

Set the total number of bases and number of slots in each base identically between Base Settings (Motion CPU) in MT Developer2 and I/O Assignment Settings (PLC CPU) in GX Works2/GX Developer. In GX Works2/GX Developer, the detailed settings may be omitted by setting the base mode "Auto".

Base Settings (Motion CPU) in MT Developer2

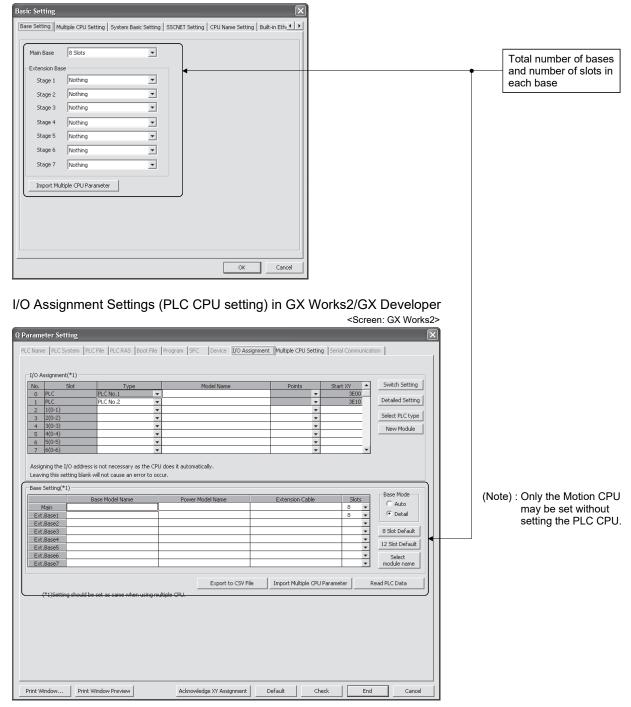


POINT

GOT is recognized as an intelligent function modules "16 points \times 10 slots" on the base (number of extension bases and slot No. are set in the GOT parameter.) for bus connection with GOT.

Set the one extension base (16 points×10 slots) for connection with GOT, then set "10 slots" as number of extension bases for connection with GOT in the Basic Setting (base setting) of MT Developer2.

<Example>


When the "2nd stage" of extension base is set as connection with GOT. (Set "10 Slots/GOT(Bus connection)" as "2nd stage" of extension base in the base setting.)

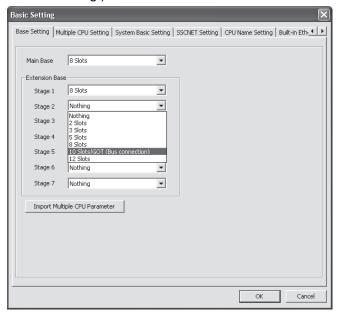

3.1.3 Individual parameters

(1) System basic setting

The following explains each item to be set in system basic setting.

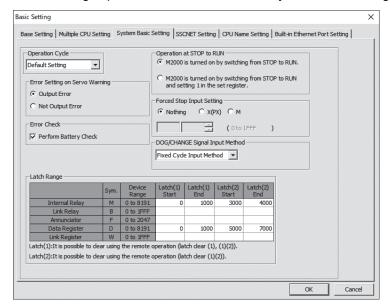

(a) Operation cycle

- 1) Set the of motion operation cycle (cycles at which a position command is computed and sent to the servo amplifier).
 - The setting range is 0.2ms (0.4ms/0.8ms/1.7ms/3.5ms/7.1ms/14.2ms (0.4ms/Default setting.
- 2) The default value is "Default Setting". When "Default Setting" is selected, the operation cycle is set according to the table below based on the number of axes for servo amplifier set in the System Settings.

O	Number	of axes	Oti		
Operating system	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	Operation cycle setting	Actual operation cycle	
	1 to 4 axes	_	0.2 ms	0.222ms	
0) (4.0	5 to 10 axes	1 to 6 axes	0.4 ms	0.444ms	
SV13	11 to 24 axes	7 to 18 axes	0.8 ms	0.888ms	
	25 to 32 axes	19 to 32 axes	1.7 ms	1.777ms	
	1 to 6 axes	1 to 4 axes	0.4 ms	0.444ms	
SV22	7 to 16 axes	5 to 12 axes	0.8 ms	0.888ms	
SV22	17 to 32 axes	13 to 28 axes	1.7 ms	1.777ms	
		29 to 32 axes	3.5 ms	3.555ms	
		1 to 4 axes	0.4 ms	0.444ms	
0) (40		5 to 12 axes	0.8 ms	0.888ms	
SV43	<u> </u>	13 to 28 axes	1.7 ms	1.777ms	
	_	29 to 32 axes	3.5 ms	3.555ms	

3) If the duration of motion operation has exceeded the operation cycle, the operation cycle over flag (M2054) turns ON. Even when "Automatic setting" is selected, the duration of motion operation may exceed the operation cycle depending on the control conditions. The actual duration of motion operation (unit: μs) is stored in Motion operation cycle (SD522), and the current setting of operation cycle (unit: μs) is stored in operation cycle of Motion CPU setting (SD523). Monitor these special registers and adjust the set value of operation cycle so that the actual duration of motion operation will not exceed the set operation cycle. (A WDT or other error may occur in the Motion CPU.)

(b) Operation at STOP to RUN

Set the condition in which the PLC ready flag (M2000) turns ON. Select the following either.

- M2000 turns ON by switching from STOP to RUN. (Default) Condition in which the M2000 turns from OFF to ON.
 - Move the RUN/STOP switch from STOP to RUN.
 - Turn ON the Multiple CPU system's power supply with the RUN/STOP switch set to RUN.

Condition in which the M2000 turns from ON to OFF

- Move the RUN/STOP switch from RUN to STOP.
- 2) M2000 turns ON by switching from STOP to RUN and by setting "1" in the setting register.

Condition in which the M2000 turns from OFF to ON

 Set "1" in the setting register (D704) of the PLC ready flag or turn ON the PLC ready flag (M3072) with the RUN/STOP switch set to RUN. (The Motion CPU detects the change from "0" to "1" in the lowest bit of D704.)

Condition in which the M2000 turns from ON to OFF

- Set "0" in the setting register (D704) of the PLC ready flag or turn OFF the PLC ready flag (M3072) with the RUN/STOP switch set to RUN.
 (The Motion CPU detects the change from "1" to "0" in the lowest bit of D704.)
- Move the RUN/STOP switch from RUN to STOP.

(c) Forced stop

Set the bit device used for executing a forced stop in which all servoamplifier axes are stopped immediately in the program.

Either X (PX) or M can be specified. No default value has been set. The set bit device is designated as contact B and performs the following control in response to ON/OFF of the device.

- Bit device is turned OFF ...Forced stop input is ON (forced stop)
- Bit device is turned ONForced stop input is OFF (forced stop is released.)

The forced stop input by EMI terminal of Motion CPU module cannot be invalidated using parameter setting.

(d) Error setting on servo warning Set whether or not to output error on servo warning.

5 . 11	Olima I mana		Error setting on servo warning		
Device No.		Signal name	Output error	Not output error	
M2039	Motion error detection flag		0	×	
D8+20n (Note-1)	Servo err	or code	0	×	
#8008+20n (Note-1)	Servo an	nplifier display servo error code	0	0	
#8640+12n (Note-2)		Error Motion SFC program No.	0	×	
#8641+12n (Note-2)		Error type	0	×	
#8642+12n (Note-2)		Error program No.	0	×	
#8643+12n (Note-2)		Error block No./Motion SFC list/ Line No./Axis No.	0	×	
#8644+12n (Note-2)	Ī	Error code	0	×	
#8645+12n (Note-2)	Motion error history	Error occurrence time (Year/month)	0	×	
#8646+12n ^(Note-2)		Error occurrence time (Day/hour)	0	×	
#8647+12n (Note-2)		Error occurrence time (Minute/second)	0	×	
#8648+12n (Note-2)	Ī	Error setting data information	0	×	
#8650+12n (Note-2) #8651+12n (Note-2)		Error setting data	0	×	
SM0	Diagnost	ic error	0	×	
SM1	Self-diag	nostic error	0	×	
SD0	Diagnost	ic errors	0	×	
SD1	Clock time for diagnostic error occurrence		0	×	
SD2			0	×	
SD3			0	×	
SD4	Error information categories		0	×	
SD5 to SD15			0	×	
SD16 to SD26	SD16 to SD26 Error individual information			×	

^{○:} Device is updated on servo warning.

(e) Error check QDS

Set whether or not to check the battery of Motion CPU. The default value is set to "Perform battery check". If "Perform battery check" is not set, a self-diagnosis error (error code: 1600) will not occur and the 7-segment LED "BT1" or "BT2" is not also displayed. And, a detection of motion error detection flag (M2039) and update of motion error history are restricted. However, the devices (SM51, SM52, SM58, SM59) for detection of battery level turn ON/OFF.

^{×:} Device is not updated on servo warning.

⁽Note-1): "n" in the device No. indicates the numerical value (axis No.1 to 32 : n= 0 to 31) which correspond to axis No.

⁽Note-2): "n" in the device No. indicates the numerical value (n=0 to 7) which correspond to motion error history.

POINT

- (1) Use this setting to restrict the output of battery error in the incremental system configuration using ROM operation.
- (2) The battery is necessary to use the absolute position system or latch data. Be sure to set "Perform battery check".
 - (f) Latch range

Set the following latching ranges for M, B, F, D and W, respectively.

- Latch (1): It is possible clear using the remote operation (Latch clear(1), Latch clear (1)(2).
- Latch (2): It is possible clear using the remote operation (Latch clear (1)(2)).
- (g) DOG/CHANGE signal input method QDS(Ver.)

Set the method for inputting the DOG/CHANGE signals when "4: Bit device" is set to the DOG/CHANGE signals of the servo external signal parameters and the input device (PX) assigned to the input module is set.

Response time priority method: Inputs the most recent signal status.

· Fixed cycle input method : Inputs the signal status every 0.44ms by

> fixed cycle processing. (When the operation cycle is 0.22ms, the signal status will be input every 0.22ms.)

 Operation cycle input method : Inputs the signal status every operation

cycle.


POINT

- (1) When setting the DOG/CHANGE signal input method to "response time priority method", the accuracy of the count method home position return and speedposition switching control will improve, but the processing time will lengthen due to the increase in the number of communication attempts with the input module. When this happens, setting the input method to "fixed cycle input method" may lead to improved processing time with no significant drop in accuracy.
- (2) When there is a large amount of data communication between modules, such as when a large number of modules are connected to each other, this causes an increase in the DOG/CHANGE signal input processing time. When this happens, setting the signal to "operation cycle input method" may lead to improved processing time.
- (3) Changing the DOG/CHANGE signal input method setting will not affect operation in the following circumstances.
 - When a setting other than "4: Bit device" is set to the DOG/CHANGE signals of the servo external signal parameters.
 - When a device not assigned to an input module is set.

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(2) SSCNET setting QDS(

The following explains item to be set in SSCNET setting.

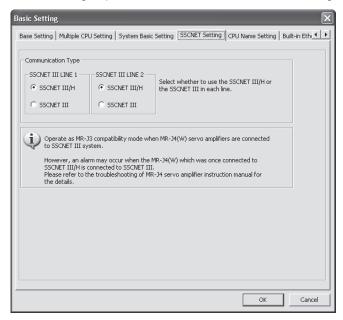

(a) Communication type

Set the communication type to communicate with the servo amplifier for every line.

• SSCNET \mathbf{II} /H : MR-J5(W)- \square B, MR-J4(W)- \square B, MR-JE- \square B


• SSCNET**Ⅲ** : MR-J3(W)-□B


(3) CPU setting

The following explains item to be set in CPU setting.

SV22 advanced synchronous control use



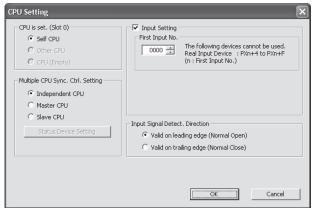

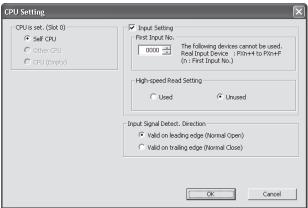

(a) Self CPU installation position setting

Set the installation position of the self CPU installed to the main base.

Self CPU : Set the self CPU.
Other CPU : Set the other CPU.
CPU (Empty): Set as empty slot.

(b) Input setting QDS(

Set to use the input signal.

There are two kinds of applications of the input and mark detection for the Built-in interface in Motion CPU (DI).

The same signal can be used simultaneously by the input and mark detection.

Input setting	Input signal	Mark detection
Used	Usable as the real input device	Usable as the real input device (PX) or
Oseu	(PX)	mark detection signal (DI)
Unused	Unusable	Usable as the mark detection signal (DI)

1) First input No.

Set the first input No. of real input device (PX).

The case of "real input device (PX): units of 16 points" is as follows.

- Real input (PX): 4 points + Dummy (Unusable: Fixed at 0) 12 points (Example) When the first input No. is set to 0(H).
 - PX0 to PX3 (Real input), PX4 to PXF (Unusable: Fixed at 0)
- 2) High-speed read setting

Set to use the built-in interface in Motion CPU as input signal in the highspeed reading function.

- Used : Use built-in interface in Motion CPU (DI).
- Unused: Not use built-in interface in Motion CPU (DI).

Refer to Section 4.3 for the High-speed reading function.

(Note): This cannot be set in SV22 advanced synchronous control.

QDS(

(c) Input signal detection direction QDS

Set the detection direction of mark detection signal when the built-in interface in Motion CPU (DI) is used in the mark detection function.

· Valid on leading edge: Mark detection is executed by turning OFF to ON

the mark detection signal.

· Valid on trailing edge: Mark detection is executed by turning ON to OFF

the mark detection signal.

Refer to Section 4.14 for the mark detection function.

(d) Multiple CPU synchronous control setting QDS(Ver.)

When setting self CPU, set the master CPU and slave CPU that constitute the multiple CPU synchronous control system.

(Note): This can only be set in SV22 advanced synchronous control.

• Independent CPU: Operate as independent CPU

 Master CPU : Operate as master CPU Slave CPU : Operate as slave CPU

1) Status device setting

When setting the master CPU and slave CPU, set the status devices to monitor the information of other CPUs. The following items are set with word device (D, W, #, U \square \G), or bit device (X, Y, M, B, F).

Ite	em	Multiple CPU synchronous control setting		
		Master CPU	Slave CPU	
Synchronous controlling		0	0	
Status for each CPU		0	0	
Error status for each CPU and axis		0	0	
Markan ODU in makania	Transfer information	×	0	
Master CPU input axis	Error information	×	0	

○: Settable X: Unsettable

Refer to "Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)" for Multiple CPU synchronous control.

Ver.!): Refer to Section 1.5 for the software version that supports this function.

(4) Individual module settings

The setting items for each module are shown below.

(a) Setting items for each Motion module

Module	Itom	Sotting range	Initial value	Number of usable modules				
name	Item	Setting range	IIIIIai vaiue	Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)	
047001 V	DOG signal contact	Normal open/Normal close (Set the DOG signal for 8 points.)	Normal open					
Q172DLX Servo external	External signal setting	Set the number of axes for which the 8 axes input is used.	Unused	4	2	4	1	
signals module (Note-1)	DOG signal detection direction	Valid on leading edge/ Valid on trailing edge	Valid on leading edge					
(**************************************	I/O response time setting	0.4/0.6/1 ms (DOG/CHANGE response time)	0.4 ms					
	Synchronous encoder setting	Used/Unused	Unused					
0.450554	Synchronous encoder selection (Note-2)	Q171ENC-W8 (4194304 [pulse])/Q171ENC-W8 (262144[pulse])/ MR-HENC (16384[pulse])	Q171ENC-W8 (4194304 [pulse])					
Q172DEX Synchronous	Synchronous encoder selection (Note-3)	Q170ENC/MR-HENC	Q170ENC	6 (SV22) 4 (SV2			4 (SV22)	
encoder input module	TREN signal contact (Note-4) QDS(Normal open/Normal close (Set the TREN signal for 2 points.)	Normal open			1		
	I/O response time setting	0.4/0.6/1 ms (TREN response time)	0.4 ms					
	High-speed read setting (Note-5)	Used/Unused	Unused					
	Manual pulse generator setting (SV13/SV43)	Used only	Used					
Q173DPX Manual pulse generator	Manual pulse generator/ Synchronous encoder setting (SV22)	Used/Unused	P□ Used	1 (SV13) 4 (SV22) 1 (SV13/SV43) 4 (SV22)		1 (SV13/SV43) 3 (SV22)		
input module	I/O response time setting	0.4/0.6/1 ms (TREN response time)	0.4 ms					
	High-speed read setting (Note-4)	Used/Unused	Unused					

(Note-1): Set the external signals used in each axis in the servo external signal parameter of servo data setting when using Q173DSCPU/Q172DSCPU. (Refer to Section 3.4.)

(Note-2): Select the encoder resolution of Q171ENC-W8 from 4194304[pulse] or 262144[pulse] depending on the synchronous encoder selection setting.

(Note-3): Use the "Q170ENC" setting when using Q171ENC-W8 with Q173DCPU(-S1)/Q172DCPU(-S1).

The Q171ENC-W8 encoder resolution operates at 262144[pulse]. QD

(Note-4): This can only be set in SV22 advanced synchronous control.

(Note-5): This cannot be set in SV22 advanced synchronous control.

(b) Setting items for each PLC module

					Number of us	able modules		
Mod	ule name	Item	Setting range	Initial value	Q173DSCPU/	Q173DCPU(-S1)/		
					Q172DSCPU	Q172DCPU(-S1)		
		First I/O No.	0000 to 0FF0 (in units of 16 points)	0000				
		Point	16/32/48/64/128/256	16				
	Input module QX□/	High-speed read setting (Note-4)	Used/Unused	Unused				
	QX□-□	I/O response time setting (setting for high-speed input module in parentheses)	1/5/10/20/70 ms (0.1/0.2/0.4/0.6/1 ms)	10 ms (0.2 ms)				
I/O module	Output module	First I/O No.	0000 to 0FF0 (in units of 16 points)	0000				
	QY□/ QY□-□	Point	16/32/48/64/128/256	16				
	Input/Output composite module QH□/	First I/O No.	0000 to 0FF0 (in units of 16 points)	0000				
		Point	16/32/48/64/128/256	16				
		I/O response time setting	1/5/10/20/70 ms	10 ms				
	QX□Y□	High-speed read setting (Note-4)	Used/Unused	Unused	Total 256 points or less (Note-3)	Total 256 points or less		
		First I/O No.	0000 to 0FF0 (in units of 16 points)	0000				
	Analogue input module	Input range	4 to 20mA/0 to 20mA/1 to 5V/ 0 to 5V/-10 to 10V/0 to 10V/ User range	4 to 20mA				
	Q6□AD□/ Q6□AD-□	Temperature drift compensation	Used/None	Used				
		Resolution mode	Normal/High	Normal				
Intelligent function		Operation mode	Normal (A/D conversion)/ Offset gain setting	Normal (A/D conversion)				
module (Note-1)	module	First I/O No.	0000 to 0FF0 (in units of 16 points)	0000				
	Analogue	Output range	4 to 20mA/0 to 20mA/1 to 5V/ 0 to 5V/-10 to 10V/User range	4 to 20mA				
	output module	HOLD/CLEAR function	CLEAR only	CLEAR				
	Q6□DA□/ Q6□DA-□	Output mode	Normal (Asynchronous)/ Synchronous output	Normal (Asynchronous)				
	QULDA-LI	Resolution mode	Normal/High	Normal				
		Operation mode	Normal (D/A conversion)/ Offset gain setting	Normal (D/A conversion)				

Setting items for each PLC module (Continues)

					Number of usable modules		
Mod	ule name	Item		Setting range	Initial value	Q173DSCPU/	Q173DCPU(-S1)/
						Q172DSCPU	Q172DCPU(-S1)
		First I/O N	lo.	0000 to 0FF0 (in units of 16 points)	0000		
Intelligent General (Note-2)	General	Points		16 points/32 points/48 points/ 64 points/128 points/256 points	16 points	Total 256 points or less ^(Note-3)	_
(Note 1)		Switch	Input format	Binary/Decimal/Hexadecimal	Hexadecimal	or less (***********************************	
		setting	Switch 1 to 5	0000 to FFFF	0000		
		Error time output mode		Clear/Maintain	Clear		
Interrupt module I/O response time QI60 setting		0.1/0.2/0.4/0.6/1 ms	0.2 ms	1 (SV1:	3/SV22)		

(Note-1): A maximum of 4 intelligent function modules can be used.

(Note-2): Refer to Section 4.17 for corresponding intelligent function module.

(Note-3): Number of I/O points is total of "Built-in interface in Motion CPU (Input 4 points) + I/O module + intelligent function module" QDS(

(Note-4): This cannot be set in SV22 advanced synchronous control. QDS(

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(5) External signal input

Servo external signal (Upper stroke limit/Lower stroke limit/Stop signal/Proximity dog) can be selected for every axis from the following methods.

- (a) Q172DLX Servo external signals interface module use
 - Q173DSCPU/Q172DSCPU
 Select "Q172DLX signal" for every axis with signal type in the servo
 external signal parameter of servo data setting, and set the module No.
 and signal No.
 - Q173DCPU(-S1)/Q172DSCPU(-S1)
 Set the servo external signals interface module (Q172DLX) in the Motion
 Slot Setting of the System Setting, and then set axis No. in the External signal setting of the Detailed Setting.
- (b) Servo amplifier input device use (Servo amplifier use only)
 - Q173DSCPU/Q172DSCPU
 Set "Amplifier input" for every axis with signal type in the servo external signal parameter of servo data setting.
 - Q173DCPU(-S1)/Q172DSCPU(-S1)
 Set "Amplifier input valid" as the external signal input setting in the "Amplifier setting" of system setting.
 - 1) There are following restrictions to use.
 - · Stop signal (STOP) cannot be used.
 - When the Q173DCPU(-S1)/Q172DSCPU(-S1) is used, count method home position return or speed-position switching control cannot be used depending on the operating system software's version. (Refer to Section 1.5 for the software version that supports this function.)
 - The variation for ON/OFF timing of the external input signal (DOG) of servo amplifier may occur according to the input filter setting value of external signal input setting.
 - 2) The correspondence of external signal and input device is shown below.

External signals	Input device (CN3) (Note)
Upper stroke limit (FLS)	DI1
Lower stroke limit (RLS)	DI2
Proximity dog (DOG)	DI3

(Note): Refer to the "Servo Amplifier Instruction Manual" for pin configurations.

3) Set the external signal setting in the "Input Filter Setting".

(Note): The setting value set by "Input Filter Setting" of system setting is valid even if the input filter setting is set by servo parameter "Input filter setting (PD11)".

(c) Input device use QDS(

Select "Bit device" for every axis with signal type in the servo external signal parameter of servo data setting, and set the device No.

3.2 I/O Number Assignment

In the Multiple CPU system, I/O numbers are used for interactive transmission between the Motion CPU and I/O modules and intelligent function modules, or between PLC CPU and Motion CPU.

3.2.1 I/O number assignment of each module

The Multiple CPU system is different from the Single CPU system in the position (slot) of I/O number "0H" for PLC CPU.

However, I/O number of control module can be assigned independently for each CPU for Motion CPU.

(1) Position of I/O number "0H"

- (a) The number of slots set with the Multiple CPU settings are occupied by the PLC CPU/Motion CPU on the Multiple CPU system.
- (b) I/O modules and intelligent function modules are installed from the right of the slots occupied by PLC CPU/Motion CPU.
- (c) I/O number of Motion CPU control module can be assigned independently for each CPU.


The I/O number of PLC CPU control module for an I/O module or intelligent function module mounted to the next slot to those occupied by CPU modules is set as "0H" and consecutive numbers are then allocated sequentially to the right.

- (d) Notation of I/O number
 - Receiving of ON/OFF data by Motion CPU is deemed input (PX), while outputting of ON/OFF data from Motion CPU is deemed output (PY).
 - I/O number is expressed in hexadecimal.

REMARK

- If the number of CPU modules installed on the main base unit is less than the number set at the "Multiple CPU setting", set the open slot(s) to "PLC (Empty)".
 Refer to Section 2.1.2 for the "PLC (Empty)" setting.
- 2) The I/O numbers for the Multiple CPU system can be confirmed with the system monitor of GX Works2/GX Developer.

(2) I/O number assignment of Motion CPU control module Mitsubishi Electric recommends that I/O No. assignment be set as consecutive No. that are common throughout all CPUs. However, the I/O number of input modules, output modules, input/output composite modules, and intelligent function modules controlled with the Motion CPU can also be set with no relation to the I/O number of PLC CPU. (I/O number of the Motion CPU control modules is indicated as PX/PY.) I/O number of the Motion CPU control modules cannot be assigned by I/O

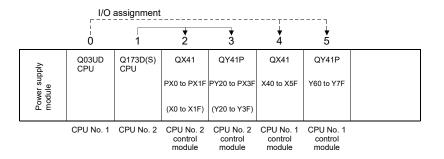

assignment settings of PLC CPU.

(3) Setting of the Motion CPU control modules by the PLC CPU Follow the table below when Motion CPU control modules are set in I/O Assignment Settings of the PLC CPU. (The PLC CPU handles the Q172DLX, Q172DEX and Q173DPX as intelligent function modules having 32 occupied points.) Type and number of points may be left unset.

Module name		Туре	Number of points	Remarks
Input modu	ıle	Input		
Q)	(□-S1	Hi, input		
Q>	(□H	Hi, input/Interrupt		
Output mo	dule	Output		
Input/Outpo	ut composite	I/O Mix	Selected according to the module.	For the control CPU, set the CPU that
Intelligent	Analogue input module		to the module.	corresponds to the Motion CPU (required).
function module (Note-1)	Analogue output module	Intelligent		Type and number of points may be left
,	General			unset.
Interrupt module (QI60)		Interrupt	16 points	
Q172DLX				
Q172DEX		Intelligent	32 points	
Q173DPX				

(Note-1): Refer to Section 4.17 for corresponding intelligent function module.

POINT

- (1) Set the I/O device of the Motion CPU within the range from PX/PY000 to PX/PYFFF. Set the number of real I/O points within 256 points. (I/O No. may not be consecutive.)
- (2) As for the Motion CPU, the Q172DLX, Q172DEX, Q173DPX and Ql60 are not included in the number of real I/O points.

3.2.2 I/O number of each CPU module

In the Multiple CPU system, I/O numbers are assigned to each CPU module to specify installed CPU modules.

The I/O number for each CPU module is fixed to the corresponding slot and cannot be changed.

The I/O number allocated to each CPU module in the Multiple CPU system is shown below.

CPU module installation position	CPU slot	Slot 0	Slot 1	Slot 2
First I/O number	3E00H	3E10H	3E20H	3E30H

The I/O number of PLC CPU/Motion CPU are used in the following cases.

- When writing data to the CPU shared memory of self CPU using the S.TO instruction.
- When reading data from the CPU shared memory of other CPU using the FROM instruction.
- When reading data from the CPU shared memory of other CPU using an intelligent function module device (U□\G□)
- When reading device data directly from the Motion CPU from the PLC CPU using the "D(P).DDRD" instruction.
- When writing device data directly to the Motion CPU from the PLC CPU using the "D(P).DDWR" instruction.

Refer to Section 2.3.6 or the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)" for the Motion dedicated PLC instruction.

3.2.3 I/O number setting

Set the modules installed in each slot of the main base or extension base and assign the control CPU of applicable slot as the self CPU in the Motion Slot setting of the system setting for Motion CPU.

Set the I/O No. of modules controlled with the Motion CPU module.


The following modules must be set the I/O No.

- · Input module
- Output module
- Input/Output composite module
- Intelligent function module (Note-1)

(Note-1): Refer to Section 4.17 for corresponding intelligent function module.

Select the applicable module in the Motion slot setting, and set I/O No. in "First I/O No." of the Detail setting.

Refer to the help of MT Developer2 for details.

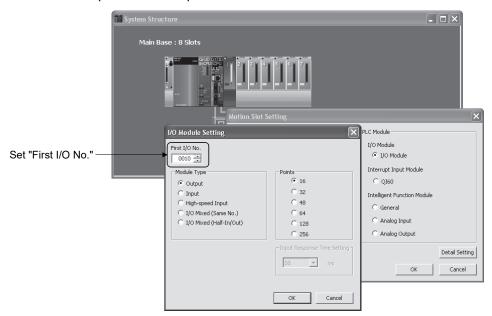

POINT

I/O No.s cannot be assigned automatically, unlike a PLC CPU for which I/O No. are assigned automatically if such setting is omitted in the Motion CPU. In the Motion CPU, be sure to set the first I/O No. in System Settings for each module used.

3.3 Servo Parameters

The servo parameters control the data fixed by the specifications of the servo amplifier and servo motor controlled in the parameter set for each axis and the control of the servo motor.

The servo parameters are set by the Setup software (MR Configurator□).

Refer to the "Servo amplifier Instruction Manual" for details of the servo parameters. Refer to the help for handling of MR Configurator□.

Servo amplifier Instruction Manual list is shown below.

Servo amplifier type	Instruction manual name			
MR-J5-□B	MD IF DIM D IF M D II and Manual (Dansardown) (ID 0000504FNO)			
MR-J5W-□B	MR-J5-B/MR-J5W-B User's Manual (Parameters) (IB-0300581ENG)			
MR-J4-□B	SSCNETII/H Interface AC Servo MR-J4B_(-RJ) Servo amplifier Instruction Manual (SH-030106)			
MR-J4W-□B	SSCNETII/H interface Multi-axis AC Servo MR-J4W2B/MR-J4W3B/MR-J4W2- 0303B6 Servo amplifier Instruction Manual (SH-030105)			
MR-J3-□B	SSCNETⅢ interface MR-J3-□B Servo amplifier Instruction Manual (SH-030051)			
MR-J3W-□B	SSCNETⅢ interface 2-axis AC Servo Amplifier MR-J3W-0303BN6/MR-J3W-□B Servo amplifier Instruction Manual (SH-030073)			
MR-J3-□B-RJ004	SSCNETⅢ Compatible Linear Servo MR-J3-□B-RJ004U□ Instruction Manual (SH-030054)			
MR-J3-□B-RJ006	SSCNETⅢ Compatible Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier Instruction Manual (SH-030056)			
MR-J3-□B-RJ080W	SSCNETⅢ interface Direct Drive Servo MR-J3-□B-RJ080W Instruction Manual (SH-030079)			
MR-J3-□B Safety	SSCNETⅢ interface Drive Safety integrated MR-J3-□B Safety Servo amplifier Instruction Manual (SH-030084)			
MR-JE-□B	SSCNETII/H interface AC Servo MR-JEB Servo Amplifier Instruction Manual (SH-030152ENG)			
MR-JE-□BF	SSCNETII/H interface AC Servo With Functional Safety MR-JEBF Servo Amplifier Instruction Manual (SH-030258ENG)			

POINTS

When the parameter that should turn on servo amplifier power supply again is changed, make the Multiple CPU system reset or power supply OFF to ON. And, once turn OFF the servo amplifier's power supply and then turn ON it again. After changing the amplifier model in amplifier setting of system setting and writing the servo parameters to the Motion CPU, be sure to turn ON the power supply of the Multiple CPU system again, or reset. If the servo amplifier is connected with the Multiple CPU system power supply turned ON, a parameter error may occur.

3.4 Servo External Signal Parameters QDS

This parameter is used to the servo external signal (Upper stroke limit (FLS), Lower stroke limit (RLS), Stop signal (STOP), Proximity dog/Speed-position switching (DOG/CHANGE)) used for each axis.

The setting items for servo external signal are shown below.

Servo external signal parameter list

	léana			Setting range			Default	
	Item	Invalid	Q172DLX signal	Amplifier input	DI signal	Bit device	value	
	Signal type	0: Invalid	1: Q172DLX signal	2: Amplifier input		4: Bit device	0: Invalid	
	Q172DLX module No.		1 to 4	_		_	_	
FLS	Q172DLX signal No.		1 to 8	_		_		
signal	Device	_	_	_	_	Bit device	_	
	Contact		0: Normal open 1: Normal close	0: Normal open 1: Normal close		0: Normal open 1: Normal close	_	
	Signal type	0: Invalid	1: Q172DLX signal	2: Amplifier input		4: Bit device	0: Invalid	
	Q172DLX module No.		1 to 4	_		_		
RLS	Q172DLX signal No.		1 to 8	_		_		
signal	Device	_	_	_		Bit device	_	
	Comtont		0: Normal open	0: Normal open		0: Normal open		
	Contact		1: Normal close	1: Normal close		1: Normal close	_	
	Signal type	0: Invalid	1: Q172DLX signal			4: Bit device	0: Invalid	
	Q172DLX module No.		1 to 4				_	
STOP	Q172DLX signal No.		1 to 8				_	
signal	Device		_	_	_	Bit device	_	
	Contact	_	0: Normal open 1: Normal close				0: Normal open 1: Normal close	_
	Signal type	0: Invalid	1: Q172DLX signal	2: Amplifier input	3: DI signal	4: Bit device (Note-3)	0: Invalid	
DOG	Q172DLX module No./ DI signal name		1 to 4	_	1 to 4	_	_	
signal	Q172DLX signal No.		1 to 8	_	_	_	_	
	Device	_	_	_	_	Bit device (Note-3)		
	Contact	_	(Note-1)	0: Normal open 1: Normal close	(Note-2)	0: Normal open 1: Normal close	_	

(Note-1): Select "Q172DLX" in the motion slot setting of system setting, and set the contact in the detail setting.

(Note-3): When setting "4: Bit device" and "PX" to the device, set the "DOG/CHANGE signal input method" in system basic setting of system setting.

(1) Signal type

Set the signal type to use as the servo external signal.

(a) Invalid

The servo external signal is invalid.

(b) Q172DLX signal

The signal (FLS/RLS/STOP/DOG) of Q172DLX is used as the external signal.

⁽Note-2): Set the contact in the "CPU setting" of system setting.

(c) Amplifier input

The input signal of servo amplifier is used as the following servo external signals.

Input signal	Servo external signal
DI1	Upper stroke limit (FLS)
DI2	Lower stroke limit (RLS)
DI3	Proximity dog (DOG)

(d) DI signal

The built-in interface in Motion CPU (DI1 to DI4) is used as the proximity dog/speed-position switching (DOG/CHANGE). Set the DOG signal only.

(e) Bit device

The optional bit device is used as the servo external signal.

(2) Q172DLX module No.

Set the module No. of Q172DLX.

From the Q172DLX installed in the smallest number is set to No.1 to 4. Set this item when only "Q172DLX signal" is selected with the signal type.

Module No. setting range
1 to 4

(3) Q172DLX signal No.

Set the signal No. of servo external signal.

Set this item when only "Q172DLX signal" is selected with the signal type.

Signal No. setting range	
	_
1 to 8	

(4) Device

Usable devices are shown below.

Item	Device No. setting range
Input relay	X0 to X1FFF (Note-1)
Output relay	Y0 to Y1FFF
Internal relay	M0 to M8191
Link relay	B0 to B1FFF
Annunciator	F0 to F2047
Special relay	SM0 to SM1999
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F ^(Note-2)

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

Refer to Chapter 2 for the user setting area points of the Multiple CPU high speed transmission area.

(5) Contact

Set the signal contact used as the servo external signal.

For Q172DLX signal, select "Q172DLX" in the motion slot setting of system setting, and set this item in the details setting.

For DI signal, set this item in the "CPU setting" of system setting

(a) Normal open

• FLS signal ON : The upper stroke limit is detected, and "operation of

direction that the feed current value increase" cannot

be executed.

• RLS signal ON : The lower stroke limit is detected, and "operation of

direction that the feed current value decrease" cannot

be executed.

• STOP signal ON : The stop signal is detected, and an operation stops.

• DOG signal ON : The proximity dog/speed-position switching signal is

detected, and the home position return operation and

speed-position switching control is executed.

(b) Normal close

• FLS signal OFF : The upper stroke limit is detected, and "operation of

direction that the feed current value increase" cannot

be executed.

• RLS signal OFF : The lower stroke limit is detected, and "operation of

direction that the feed current value decrease" cannot

be executed.

• STOP signal OFF: The stop signal is detected, and an operation stops.

• DOG signal OFF : The proximity dog/speed-position switching signal is

detected, and the home position return operation and speed-position switching control is executed.

MEMO		

4. AUXILIARY AND APPLIED FUNCTIONS

4.1 Limit Switch Output Function

This function is used to output the ON/OFF signal corresponding to the data range of the watch data set per output device.

Motion control data or optional word data can be used as watch data. (Refer to Section 4.1.2 for details.) A maximum output device for 32 points can be set regardless of the number of axes.

POINT


For SV22 advanced synchronous control, specifications are different from those of the conventional limit switch output function and a maximum output device of 64 points can be set. (Refer to Section 4.1.3 and Section 4.1.4 for details.)

4.1.1 Operations

- (1) ON output to an output device is made while the watch data value is in the ON output region set with (ON Value) and (OFF Value) in the limit switch output function.
 - (a) (ON Value), (OFF Value) and watch data value are handled as signed data. ON output region where an ON output is made to the output device is governed by the magnitude relationship between (ON Value) and (OFF Value) as indicated below.


Relationship between (ON Value) and (OFF Value)	ON output region
(ON Value) < (OFF Value)	(ON Value) ≤ (watch data value) < (OFF Value)
(ON Value) > (OFF Value)	(ON Value) ≤ (watch data value) (Watch data value) < (OFF Value)
(ON Value) = (OFF Value)	Output OFF in whole region

1) (ON Value) < (OFF Value)

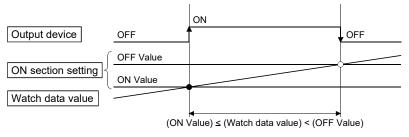


2) (ON Value) > (OFF Value) ON Output device ON Value OFF Value Watch data value

(ON Value) ≤ (Watch data value)

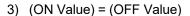

(Watch data value) < (OFF Value)

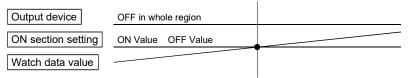


(b) The limit switch outputs are controlled based on each watch data during the PCPU READY complete status (SM500: ON) by the PLC ready flag (M2000) from OFF to ON.

When the PCPU READY complete flag (SM500) turns OFF by turning the PLC ready flag (M2000) from ON to OFF, all points turn OFF. When (ON Value) and (OFF Value) are specified with word devices, the word device contents are input to the internal area when the PLC ready flag (M2000) turns from OFF to ON.

After that, the word device contents are input per motion operation cycle, and limit switch outputs are controlled.

(c) Multiple outputs (Up to 32 points) can be also set to one watch data. In each setting, the output device may be the same.If multiple ON section settings have been made to the same output device,

the logical add of the output results in the regions is output.

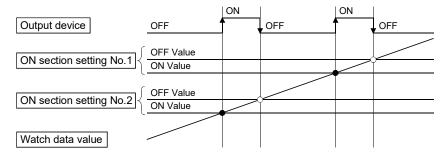

(2) Output enable/disable bit can be set and executed enable/disable of the limit switch outputs point-by-point.

Limit switch output control is executed when the output enable/disable bit is ON, and the output is OFF when it is OFF.


If there is no setting, the outputs are always enabled.

(3) Forced output bit can be set and turned the forcibly output of the limit switch outputs point-by-point ON.

The output is ON when the forced output bit is ON. Priority is given to control of this setting over off (disable) of the "output enable/disable bit".

If there is no setting, no forced outputs are not always made.

(4) When the multiple watch data, ON region, output enable/disable bit and forced output bit are set to the same output device, the logical add of output results of the settings is output.

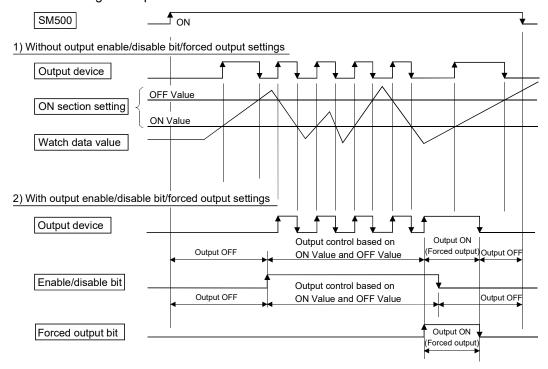

4.1.2 Limit output setting data

Limit output data list are shown below.

Up to 32 points of output devices can be set.

(The following items of No.1 to No.5 are set together as one point.)

No.	Item		Item		Setting range	Fetch cycle	Refresh cycle	Remarks
1	Output device	ce	Bit device (X, Y, M, B, U□\G)	_	Operation cycle			
		Watch data setting	Motion control data/word device data					
		Axis (Note-1)	1 to 32					
2	Watch	Name (Note-1)	Refer to (2) of this section			_		
	data	Device (Note-2)	Word device (D, W, #, U□\G)					
	Data type (Note-2)		16-bit integer type/32-bit integer type/64-bit floating- point type					
	ON section	ON Value	Wand daying (D. W. W. H. D. O.V. and short (K. H.)					
3	setting	OFF Value	Word device (D, W, #, U□\G)/constant (K, H)					
	Output	Output enable/ disable bit	Invalid (default)/Valid	Operation cycle	_	ON : Enable		
4	enable/ disable bit setting	Output enable/ disable bit device	Bit device (X, Y, M, B, F, SM, U□\G)			OFF : Disable Invalid: Always enable		
	Forced	Forced output bit	Invalid (default)/Valid			Invalid: No forced outputs are		
5	output bit setting	Forced output bit device	Bit device (X, Y, M, B, F, SM, U□\G)			always made (OFF status)		

(Note-1): When Motion control data is selected (Note-2): When word device data is selected

(1) Output device

- (a) Set the bit device which outputs the ON/OFF signal toward the preset watch data.
- (b) As the output device, the following bit devices are used.

Item	Device No. setting range
Input relay (Note-1)	X0 to X1FFF ^(Note-4)
Output relay (Note-2)	Y0 to Y1FFF
Internal relay (Note-3)	M0 to M8191
Link relay	B0 to B1FFF
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F (Note-5), (Note-6)

- (Note-1): PX is write-disabled and it cannot be used as the output device. For X, only the free No. of the input card non-loading can be used.
- (Note-2): The real output device range (PY) is also included.
- (Note-3): M2001 to M2032 cannot be used to the output device.

 Be careful because it affect a positioning operation, when the positioning dedicated devices are set.
- (Note-4): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)
- (Note-5): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.
- (Note-6): Only device of the self CPU can be used.

(2) Watch data

This data is used to perform the limit switch output function. This data is comparison data to output the ON/OFF signal. The output device is ON/OFF-controlled according to the ON section setting.

As the watch data, motion control data or optional word device data can be used.

(a) Motion control data

Watch data that can be set is shown in the table below.

1) SV13/SV22

Mana	1.124	Data tau	Axis No. setting range			Demonder	
Name	Unit	Data type	Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)	Remarks
Feed current value	Position	00 1 ''					
Actual current value	command	32-bit					
Deviation counter value	pulse	integer type					
Motor current value	0.1%	16-bit integer type					_
Motor speed (Note-1)	0.1r/min		1 to 32	1 to 16	1 to 32		
Cam axis current value within one-revolution			1 10 32	1 10 16	1 10 32	1 to 8	
Virtual servo motor feed current value		32-bit integer type				1 10 6	Valid in SV22
Virtual current value after differential gear	pulse in						virtual mode only
Encoder current value after differential gear							
Synchronous encoder current value				1 to 12			Valid in SV22 only

(Note-1): The motor speed (\times 0.1[mm/s]) is stored at linear servo use.

2) SV43

Nama	1.1	Data tura	Axis No. se	etting range	Damanisa
Name	Unit	Data type	Q173DCPU(-S1)	Q172DCPU(-S1)	Remarks
Machine value	Position	00 1:4			
Real machine value	command	32-bit			
Deviation counter value	pulse	integer type			
Motor current value	0.1%	16-bit integer type	1 to 32	1 to 8	_
Motor speed (Note-1)	0.1r/min	00 1:4			
Current value	Position command	32-bit integer type			

(Note-1): The motor speed (\times 0.1[mm/s]) is stored at linear servo use.

(b) Word device data

1) Device

Use word device as watch data.

Item	Device No. setting range
Data register	D0 to D8191
Link register	W0 to W1FFF
Motion register	#0 to #9215
Multiple CPU area device	U□\G10000 to U□\G (10000+p-1) ^(Note-1)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

2) Data type

The following data type is set as the data type to be compared.

Data type	Remarks			
16-bit integer type	_			
32-bit integer type				
64-bit floating-point type	Set the device No. as an even No.			

(3) ON section setting

- (a) The data range which makes the output device turn ON/OFF toward the watch data.
- (b) The following word devices, and constant (Hn/Kn) can be used as the ON Value and OFF Value of the data range.

The data type of device/constant to be set is the same as the type of watch data.

Item	Device No. setting range
Data register	D0 to D8191
Link register	W0 to W1FFF
Motion register	#0 to #9215
Multiple CPU area device	U□\G10000 to U□\G (10000+p-1) ^(Note-1)
Constant	Hn/Kn

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(4) Output enable/disable bit setting

(a) Set the status of output enable/disable bit when the limit switch output is forbidden during operation.

The following control is exercised.

Output enable/disable bit		Control description
Invalid (alway	ys enable)	Limit switch output is turned ON/OFF based on the
	ON (enable)	ON section setting (ON Value, OFF Value).
Valid	OFF (disable)	Limit switch output is turned OFF.

(b) Usable devices

Item	Device No. setting range		
Input relay (Note-1)	X0 to X1FFF ^(Note-2)		
Output relay (Note-3)	Y0 to Y1FFF		
Internal relay	M0 to M8191		
Link relay	B0 to B1FFF		
Annunciator	F0 to F2047		
Special relay	SM0 to SM1999		
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F ^(Note-4)		

(Note-1): The real input range(PX) is included.

(Note-2): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-3): The real input range(PY) is included.

(Note-4): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(5) Forced output bit

(a) Set the "forced output bit" when you want to forcibly provide the limit switch outputs during operation.

The following control is exercised.

Output enable/disable bit		Control description		
Invalid		Limit switch outputs are turned ON/OFF on the basis		
055	055	of the "output enable/disable bit" and ON section		
Valid	Valid OFF	setting (ON Value, OFF Value).		
ON		Limit switch outputs are turned ON.		

(b) Usable devices

Item	Device No. setting range		
Input relay	X0 to X1FFF ^(Note-1)		
Output relay	Y0 to Y1FFF		
Internal relay	M0 to M8191		
Link relay	B0 to B1FFF		
Annunciator	F0 to F2047		
Special relay	SM0 to SM1999		
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F ^(Note-2)		

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

POINT

Refer to Chapter 2 for the user setting area points of the Multiple CPU high speed transmission area.

4.1.3 Operations (SV22 advanced synchronous control only) QDS(Ver.)

(1) ON output to an output device is made while the watch data value is in the ON region set with lower limit value and upper limit value in the limit switch output function.


Up to two ON regions can be set for each limit output setting data.

(a) Lower limit value, upper limit value and watch data value are handled as signed data.


ON output region where an ON output is made to the output device is governed by the magnitude relationship between lower limit value and upper limit value as indicated below.

Relationship between lower limit value and upper limit value	ON output region
Lower limit value < Upper limit value	Lower limit value ≤ (watch data value) < Upper limit value
Lower limit value > Upper limit value	Lower limit value ≤ (watch data value) (Watch data value) < Upper limit value
Lower limit value = Upper limit value	Output OFF in whole region


1) Lower limit value < Upper limit value

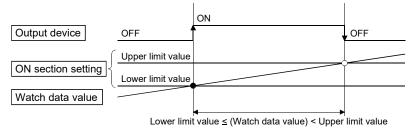

2) Lower limit value > Upper limit value

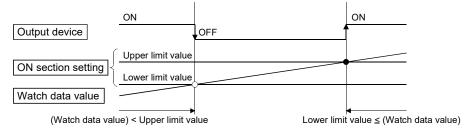

3) Lower limit value = Upper limit value

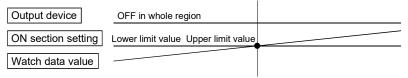

Ver.!): Refer to Section 1.5 for the software version that supports this function.

(b) The limit switch outputs are controlled based on each watch data during the READY complete status (SM500: ON) by the PLC ready flag (M2000) from OFF to ON.

With the setting of "M2000 keep the output device when turns OFF" invalid, when the READY complete flag (SM500) turns OFF by turning the PLC ready flag (M2000) from ON to OFF, all points turn OFF.

With the setting of "M2000 keep the output device when turns OFF" valid for output devices other than Y devices, the output devices do not turn OFF even when the PLC ready flag (M2000) turns from ON to OFF. The setting is valid for all the output devices.


Y devices always turn OFF when the PLC ready flag (M2000) turns from ON to OFF.

When lower limit value and upper limit value are specified with word devices, the word device contents are input to the internal area when the PLC ready flag (M2000) turns from OFF to ON.

After that, the word device contents are input per motion operation cycle, and limit switch outputs are controlled.

(c) Multiple outputs (Up to 64 points) can be also set to one watch data. In each setting, the output device may be the same.

If both of the two regions of the ON section setting are used or if the same output device is designated by multiple output settings (regardless of whether or not the watch data is the same), the logical add of the output results in the regions is output.

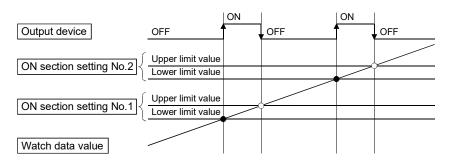

(2) Forced OFF bit can be set to forcibly turn off the output of the output device pointby-point.

When the forced OFF bit is ON, the output is OFF.

(3) Forced ON bit can be set to forcibly turn on the output of the output device pointby-point.

When the forced ON bit is ON, the output is ON.

Priority is given to control of this setting over ON of the "forced OFF bit" (forced output OFF).

4.1.4 Limit output setting data (SV22 advanced synchronous control only)



Limit output data list are shown below.

Up to 64 points of output devices can be set.

(The following items of No.2 to No.7 are set together as one point.)

No.	Item			Setting range	Fetch cycle	Refresh cycle	Remarks
1	M2000 keep when turns (eep the output device ns OFF		Invalid (default)/Valid		_	
2	Output	Output device		Bit device (X, Y, M, B, U□\G)	_	Operation cycle	
	device	16 point output s	unit batch etting	Invalid (default)/Valid			
3	Limit output	compens	sation time	-5000000 to 5000000[µs] Word device (D, W, #, U□\G)			
		Watch o	data setting	Motion control data/word device data/word device data (ring counter)			
		Axis (No		1 to 32	Operation		
		Name (Note-1)	Refer to (4) of this section	cycle		
4	Watch data	Device (Note-3)	(Note-2),	Word device (D, W, #, U□\G)			
		Data type (Note-2), (Note-3)		16-bit integer type/32-bit integer type			
		Ring counter value (Note-3)		16-bit integer type: K1 to K32767, H0001 to H7FFF 32-bit integer type: K1 to K2147483647, H00000001 to H7FFFFFFF	_	_	_
		ON	Upper limit value				
5	ON section	section 1	Lower limit value	Mand device (D. W. # UD\C)(acceptant (K. I))			
5	setting	ON	Upper limit value	Word device (D, W, #, U□\G)/constant (K, H)			
		Section Lower limit value		Operation cycle			
		Forced OFF bit		Invalid (default)/Valid			
6	Forced OFF bit	rced OFF bit		Bit device (X, Y, M, B, F, SM, U□\G)			
		Forced	ON bit	Invalid (default)/Valid			
7	Forced ON bit device			Bit device (X, Y, M, B, F, SM, U□\G)			

(Note-1): When Motion control data is selected

(Note-2): When word device data is selected

(Note-3): When word device data (ring counter) is selected

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(1) M2000 keep the output device when turns OFF

With this setting valid for output devices other than Y devices, the output devices do not turn OFF even when the PLC ready flag (M2000) turns from ON to OFF. The setting is valid for all the output devices. Y devices always turn OFF when the PLC ready flag (M2000) turns from ON to OFF.

(2) Output device

- (a) Set the bit device which outputs the ON/OFF signal toward the preset watch data.
- (b) As the output device, the following bit devices are used.

Item	Device No. setting range		
Input relay (Note-1)	X0 to X1FFF ^(Note-4)		
Output relay ^(Note-2)	Y0 to Y1FFF		
Internal relay (Note-3)	M0 to M8191		
Link relay	B0 to B1FFF		
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F (Note-5), (Note-6)		

- (Note-1): PX is write-disabled and it cannot be used as the output device. For X, only the free No. of the input card non-loading can be used.
- (Note-2): The real output device range (PY) is also included.
- (Note-3): Be careful because it affect a positioning operation, when the positioning dedicated devices are set.
- (Note-4): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)
- (Note-5): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.
- (Note-6): Only device of the self CPU can be used.
- (c) When the 16 point unit batch output setting is valid, the batch output of the sequential 16 point unit devices has less effect on the operation cycle as compared with the output of each output device point-by-point. When the 16 point unit batch output setting is valid, it is recommended to set multiple output devices as sequential 16 point unit output devices.

The sequential devices to be output in a 16 point unit batch is counted as one set and up to 4 sets can be set.

When the 16 point unit batch output setting is valid, among the 16 point unit devices, the devices that are not used as the output devices are always OFF.

16 point unit batch output setting	Control description
Invalid	The output device is output point-by-point.
Valid	The sequential 16-point output devices are output in a batch.

(3) Limit output compensation time

Compensate the output timing of the output device.

Set it to compensate for output signal delays. (Set a positive value to compensate for a delay.)

The timing is compensated as "-5000000" when the compensation time is set to less than -5000000, and it is compensated as "5000000" when it is set to more than 5000000.

(a) Direct designation

Setting range
-5000000 to 5000000[µs]

(b) Indirect designation

Item	Device No. setting range (Note-1)			
Data register	D0 to D8191			
Link register	W0 to W1FFF			
Motion register	#0 to #9215			
Multiple CPU area device	U□\G10000 to U□\G (10000+p-1) ^(Note-2)			

(Note-1): Set an even number as the first device.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(4) Watch data

This data is used to perform the limit switch output function. This data is comparison data to output the ON/OFF signal. The output device is ON/OFF-controlled according to the ON section setting.

As the watch data, motion control data, word device data or word device data (ring counter) can be used.

(a) Motion control data

Settable watch data is shown in the following table.

	l limit	Data tau	Axis No. setting range		
Name	Unit	Data type	Q173DSCPU	Q172DSCPU	Remarks
Feed current value					
Actual current value	Control unit				
Motor actual current value		32-bit			
Servo command value		integer type			
Position feedback (Note-1)	pulse				
Absolute encoder one-revolution position (Note-1)					
Absolute encoder multiple revolution position	_	16-bit integer type	44.00	4.1.40	_
Deviation counter value	pulse	2011	1 to 32	1 to 16	
Servo command speed	pulse/s	32-bit			
Motor speed	0.01r/min	integer type			
Motor current value	0.1%	16-bit integer type			
Command generation axis feed current value					
Command generation axis cumulative current value	Control unit				
Command generation axis current value per cycle		00 1:4			Valid in
Synchronous encoder axis current value	Encoder axis	32-bit	1 to 12		synchronous
Synchronous encoder axis current value per cycle	unit	integer type	1 10) 12	control
Cam axis current value per cycle	Cam axis		1 to 32	1 to 16	
Cam axis current value per cycle (Actual)	cycle unit		1 10 32	1 10 16	

(Note-1): For MR-J5(W)-□B, the value displayed is the value (command unit) multiplied by the reciprocal of the electronic gear ratio of the servo amplifier.

By configuring the electronic gear settings to the servo amplifier's "Electronic gear numerator (PA06)" and "Electronic gear denominator (PA07)" servo parameters, the data becomes the same watch data as for MR-J4(W)- \square B.

(b) Word device data/word device data (ring counter)

1) Device

Use word device as watch data.

Item	Device No. setting range			
Data register	D0 to D19823			
Link register	W0 to W1FFF			
Motion register	#0 to #9215			
Multiple CPU area device	U□\G10000 to U□\G (10000+p-1) (Note-1)			

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

2) Data type


The following data type is set as the data type to be compared.

Data type	Remarks
16-bit integer type	_
32-bit integer type	Set the device No. as an even No.

3) Ring counter value

When the watch data is the word device data (ring counter), the ring counter value is set.

Data type	Remarks		
16-bit integer type	H0001 to H7FFF		
32-bit integer type	K1 to K2147483647, H00000001 to H7FFFFFF		

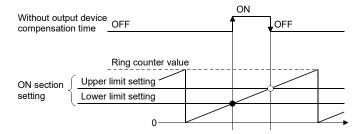

POINT

For the word device data updated as ring counter, when the output timing is compensated without setting the correct ring counter value or when the output timing is compensated by setting the ring counter for the word device data that is not updated as ring counter, the output device may not be output at the correct timing.

(5) ON section setting

- (a) The data range which makes the output device turn ON/OFF toward the watch data.
 - Up to two ON regions can be set for each limit output setting data.
- (b) The following word devices, and constant (Hn/Kn) can be used as the lower limit value and upper limit value of the data range.

The data type of device/constant to be set is the same as the type of watch data.

Item	Device No. setting range		
Data register	D0 to D8191		
Link register	W0 to W1FFF		
Motion register	#0 to #9215		
Multiple CPU area device	U□\G10000 to U□\G (10000+p-1) ^(Note-1)		
Constant	Hn/Kn		

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(6) Forced OFF bit

(a) Set the "forced OFF bit" when forced OFF of the output device is desired during operation.

The following control is exercised.

Force	d OFF bit	Control description	
Invalid		Output device is turned ON/OFF based on the ON	
Valid OFF ON	OFF	section setting.	
	ON	Output device is turned OFF.	

(b) Usable devices

Item	Device No. setting range		
Input relay (Note-1)	X0 to X1FFF ^(Note-2)		
Output relay (Note-3)	Y0 to Y1FFF		
Internal relay	M0 to M12287		
Link relay	B0 to B1FFF		
Annunciator	F0 to F2047		
Special relay	SM0 to SM1999		
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F ^(Note-4)		

(Note-1): The real input range(PX) is included.

(Note-2): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-3): The real input range(PY) is included.

(Note-4): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(7) Forced ON bit

(a) Set the "forced ON bit" when forced ON of the output device is desired during operation.

The following control is exercised.

Forced ON bit		Control description	
Invalid		Output device is turned ON/OFF based on the ON	
OFF		section setting .	
Valid O	ON	Output device is turned ON.	

(b) Usable devices

Item	Device No. setting range		
Input relay	X0 to X1FFF (Note-1)		
Output relay	Y0 to Y1FFF		
Internal relay	M0 to M8191		
Link relay	B0 to B1FFF		
Annunciator	F0 to F2047		
Special relay	SM0 to SM1999		
Multiple CPU area device	U□\G10000.0 to U□\G (10000+p-1).F ^(Note-2)		

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

POINT

Refer to Chapter 2 for the user setting area points of the Multiple CPU high speed transmission area.

4.2 Absolute Position System

The positioning control for absolute position system can be performed using the absolute-position-compatible servo motors and servo amplifiers.

If the machine position is set at the system starting, home position return is not necessary because the absolute position is detected at the power on.

The machine position is set with the home position return using the Motion SFC program (SV13/SV22)/Motion program (SV43) or MT Developer2.

- Conditions of the absolute position system start
 Perform a home position return after machine adjustment at the absolute position system start.
- (2) In the absolute positioning system, the absolute position may be lost in the following cases:

Set the absolute position with a home position return.

- (a) The battery unit is removed or replaced. (Note-1)
- (b) The battery error of the servo amplifier occurs. (Note-1) (It is detected at the servo amplifier power on).
- (c) The machine is disrupted by a shock.
- (d) The cable between servo amplifier and encoder is removed, or the servo amplifier or encoder is replaced.

(Note-1): Only when using MR-J4(W)-□B or MR-J3(W)-□B.

(3) The current value history can be monitored using of the "System setting allowable travel during power off" or "Monitor" using MT Developer2. (Refer to the help of MT Developer2 for details.) (4) If a major error (error code: 1202, 12020) occurs because of a communication error between the servo amplifier and encoder, home position return request (M2409+20n) turns ON, and absolute position data is erased. However, the erasing of the absolute position data can be avoided with the following combinations.

Operating system software		Servo amplifier		Operation of home position
Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	Model name	Software version	return request (M2409+20n) when error occurs
		MR-J5-□B		
00Y or later	Not support	MR-J5-□B-RJ		
		MR-J5W-□B		
	MR-J4-□B	_		
		MR-J4-□B-RJ		Home position return request (M2409+20n: OFF) does not turn ON. (Note-1)
		MR-J4W-□B		
		MR-J3-□B	C3 or later	
00B or later	00S or later	MR-J3-□B-RJ006		
		MR-J3-□B Safety		
		MR-J3-□B-RJ004	05	
	MR-J3-□B-RJ080W	C5 or later		
	MR-J3W-□B	B1 or later		
			Home position return request	
Others				(M2409+20n: ON) turns ON.
				(absolute position data is lost)

—: There is no restriction by the version.

(Note-1): The history for the number of times a major error (error code: 1202, 12020) occurred is not displayed in the current value history for MT Developer2 that does not support the display of the current value history of the past 10 times. Use a version of MT Developer2 that supports the display of the current value history of the past 10 times. (Refer to Section 1.5.)

⚠ CAUTION

- After removing or replacing the battery unit, correctly install the new unit and set the absolute position.
- After a servo amplifier battery error occurs, eliminate the cause of the error and ensure operation is safe before setting the absolute position.
- After the machine is disrupted by a shock, make the necessary checks and repairs, and ensure operation is safe before setting the absolute position.

POINT

- (1) The address setting range of absolute position system is -2147483648 to 2147483647. It is not possible to restore position commands that exceed this limit, or current values after a power interruption. For an infinite feed operation, configure the [degree] setting.
- (2) Even when the current value address is changed by a current value change instruction, the restored data for the current value after a power interruption is the value based on the status prior to execution of the current value change instruction.
- (3) When home position return has not been completed (home position return request is ON), restoration of the current value after a power interruption is not possible.

4.2.1 Current value control

The current value when using the ABS encoder is controlled by the following functions.

- (1) The validity of encoder data during operation is checked.
 - (a) Checks that the amount of change of the encoder in a 3.5[ms] interval is within 180 degrees at the motor axis. (An error is displayed when abnormal.)
 - (b) Checks the consistency of the encoder data and feedback positions controlled with the servo amplifier. (An error is displayed when abnormal.)
- (2) The following values can be monitored by the current value history monitor of MT Developer2.

Monitor conditions	Monitor value
Multiple CPU system power ON/OFF	Encoder current value, Servo command value,
Home position return completion	Monitor current value

(a) Current value history monitor

Month/day/hour/minute

The time at the completion of home position return and servo amplifier power supply ON/OFF is indicated.

(b) Encoder current value

When using the servo amplifier, the multiple revolution data and within-onerevolution data read from the encoder is indicated.

(Note): For MR-J5(W)-□B, the value displayed is the value (command unit) multiplied by the reciprocal of the electronic gear ratio of the servo amplifier.

(c) Servo command value

The command value issued to the servo amplifier is indicated.

(d) Monitor current value

The current value controlled in the Motion CPU is indicated.

(Note): A value near the feed current value is indicated. However, because the monitor current value and feed current value are different data, it is not abnormal even if a different value is indicated.

(e) Alarms

When an error for current value restoration occurs at the servo amplifier power on, an error code is indicated.

- (3) By setting of the "Allowable travel during power off", if the encoder data changes exceeding the setting range during power-off, it checks at servo amplifier poweron. (An error is displayed at the abnormal.)
 - "Allowable travel during power off" cannot be set when using the linear servo motor and direct drive motor.
- (4) The current value history of the past 10 times is indicated at the servo amplifier's power ON/OFF.

Ver.!: Refer to Section 1.5 for the software version that supports this function.

4.3 High-Speed Reading of Specified Data

This function is used to store the specified positioning data in the specified device (D, W, $U\square\backslash G$). The signal from input module controlled in the Motion CPU is used as a trigger.

It can be set in the system setting of MT Developer2.

POINT

High-speed reading function cannot be used in the SV22 advanced synchronous control. QDS

(1) Positioning data that can be set

(a) SV13/SV22

Setting data	Word No.	Unit	Remarks
Feed current value	2	10 ⁻¹ [µm], 10 ⁻⁵ [inch], 10 ⁻⁵ [degree], [pulse]	
Real current value	2	10 ⁻¹ [µm], 10 ⁻⁵ [inch], 10 ⁻⁵ [degree], [pulse]	
Deviation counter value	2	[pulse]	
M-code	1	_	
Torque limit value	1	[%]	
Motor current value	1	[%]	
Motor speed (Note-1)	2	[r/min]	
Servo command value	2	[pulse]	
Feed current value (Virtual)	2	[pulse]	
Encoder current value (Note-2)	2	[pulse]	
M-code (Virtual)	1	_	
Current value after differential gear (Virtual)	2	[pulse]	Valid in SV22
Encoder current value after differential gear	2	[pulse]	virtual mode only
Cam axis 1 revolution current value	2	[pulse]	
Execute cam No.	1	_	
Execute stroke amount	2	10 ⁻¹ [µm], 10 ⁻⁵ [inch], [pulse]	
Optional address (Fixed to 4 bytes)	2	_	

⁽Note-1): The motor speed (unit [mm/s]) is stored at linear servo use.

⁽Note-2): It is also valid in real mode for the version (Refer to Section 1.5) that supports "synchronous encoder current value in real mode".

(b) SV43

Setting data	Word No.	Unit	Remarks
Machine value	2	10 ⁻⁴ [mm], 10 ⁻⁵ [inch], 10 ⁻⁵ [degree]	
Real machine value	2	10 ⁻⁴ [mm], 10 ⁻⁵ [inch], 10 ⁻⁵ [degree]	
Deviation counter value	2	[pulse]	
M-code	1		
Torque limit value	1	[%]	
Motor current value	1	[%]	
Motor speed (Note-1)	2	[r/min]	
Servo command value	2	[pulse]	
Optional address (Fixed to 4 bytes)	2		

(Note-1): The motor speed (unit [mm/s]) is stored at linear servo use.

POINT

If the wrong address is set in the absolute address, the WDT error will occur. Explain to our sales representative before setting the absolute address.

(2) Modules and signals to be used

Input module	Signal	Read timing	Number of settable points
Q172DEX	TDEN		2
Q173DPX	TREN		3
Built-in interface in Motion CPU	PX device (Note-2)	0.8[ms]	4
PLC input module (Note-1)			8

(Note-1): Only one PLC input module can be used.

(Note-2): Either the input signal of the built-in interface in Motion CPU (DI) or the PLC input module can be used.

(3) Usable devices

Word devices	Usable devices
D	0 to 8191
W	0 to 1FFF
U□\G	10000 to (10000 + p-1) (Note-1), (Note-2)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.


(Note-2): Only device of the self CPU can be used.

- (1) Set an even numbered device No. in the two word data.
- (2) Refer to Chapter 2 for the user setting area points of the Multiple CPU high speed transmission area.

4.4 ROM Operation Function

This function is used to operate based on the data in the FLASH ROM built-in Motion CPU module that the user programs and parameters have been stored.

4.4.1 Specifications of 7-segment LED/switches

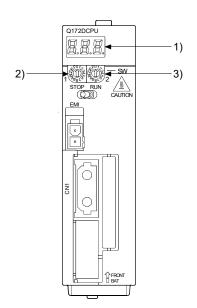

No.	Items	Functions
1)	7-segment LED	Indicate the operation state and error information.
2)	Rotary switch 1 (SW1)	Set the operation mode (Normal mode, Installation
3)	Rotary switch 2 (SW2)	mode and mode operated by ROM, etc.) • Each switch setting is 0 to F.

(1) Operation mode

"Operation mode" of the Motion CPU is set by the rotary switch setting of Motion CPU module at the power supply ON of the Multiple CPU system.

The rotary switch setting, operation mode and operation mode overview are shown below.

(a) Rotary switch setting and operation mode

Rotary switch setting ^(Note-1)		0 "
SW1	SW2	Operation mode
А	Any setting (Except C)	Installation mode
0	0	Mode operated by RAM
0	6	Mode operated by ROM
0	8	Ethernet IP address display mode
Any setting	С	SRAM clear ^(Note-2)

(Note-1): Do not set other than the above setting.

(Note-2): The programs, parameters, motion devices (#), devices of latch data and absolute position data of SRAM built-in Motion CPU module are cleared.

(b) Operation mode overview

Operation mode	7-segment LED	Operation overview
Mode operated by RAM	8.8.8	 " . " remains flashing in the first digit of 7-segment LED. It operates based on the user programs and parameters stored in the SRAM built-in Motion CPU module. The user programs and parameters for the ROM operation can be written to the FLASH ROM built-in Motion CPU module.
Mode operated by ROM	8.8. 8 *	 " "remains flashing in the first digit and steady" "" display in the second digit of 7-segment LED. Operation starts after the user programs and parameters stored in the FLASH ROM built-in Motion CPU module are read to the SRAM built-in Motion CPU module at power supply on or reset of the Multiple CPU system. If the ROM writing is not executed, even if the user programs and parameters are changed using the MT Developer2 during mode operated by ROM, operation starts with the contents of the FLASH ROM built-in Motion CPU module at next power supply on or reset. Also, If the ROM writing is not executed, even if the auto tuning data are reflected on the servo parameter of Motion CPU by operation in the autotuning setting, operation starts with the contents of the FLASH ROM built-in Motion CPU module at next power supply on or reset.

- (1) Be sure to turn OFF the Multiple system's power supply before the rotary switch setting change.
- (2) It is recommended to shift to the mode operated by ROM after the programs and parameters are fixed. The erasing of the programs and parameters can be avoided even if the battery decrease. (The ROM writing cannot be executed for the current position of the servo motor in the absolute position system, home position and latch device. Back up them beforehand using MT Developer2.)

4.4.2 Outline of ROM operation

When the ROM writing is requested to the Motion CPU module using the MT Developer2, the programs and parameters stored in the SRAM built-in Motion CPU module are batch-written to the FLASH ROM, after the data of FLASH ROM built-in Motion CPU are erased.

When the Motion CPU starts in the "Mode operated by ROM", a normal operation starts, after the data written in the FLASH ROM is read to the SRAM.

The programs and parameters created by the MT Developer2 must be written beforehand to the FLASH ROM built-in Motion CPU module at the ROM operation. The following methods for ROM writing are shown below.

- Write the programs and parameters written in the SRAM built-in Motion CPU module to the FLASH ROM built-in Motion CPU module.
- Write the programs and parameters of the MT Developer2 to the SRAM built-in Motion CPU module, and then write them to the FLASH ROM built-in Motion CPU module.

The data batch written to the FLASH ROM built-in Motion CPU module by ROM writing are shown below. Backup data except the following (current position of servo motor in absolute position system, home position and latch device.) cannot be written to the FLASH ROM.


SV13	SV22	SV43
Each parameter for servo control		
Servo p	_	
Motion SFC parameter		Motion parameter
Motion SFC program		Motion program
_	Mechanical system program	
_	Cam data	_

- (1) "Backup load" operation of the MT Developer2 targets the SRAM built-in Motion CPU module. (The FLASH ROM built-in Motion CPU module is not targeted.)
 - Set to "Mode operated by ROM" after ROM writing to execute the ROM operation after "Backup load" operation at the Motion CPU module exchange.
- (2) The FLASH ROM built-in Motion CPU module serves as a life in 100000 times writing. Make the ROM writing within 100000 times. If it passes over a life, "writing error" will occur, replace the Motion CPU module.
- (3) The online change of Motion SFC program executes the Motion SFC program performed the online change from the next scanning at the mode operated by ROM. Operation starts with the contents of the Motion SFC program written in the FLASH ROM built-in Motion CPU module at next power supply on or reset.
- (4) It needs to meet the following conditions for the ROM writing.
 - (a) PLC ready flag (M2000) OFF
 - (b) Not installation mode

(1) Write the programs and parameters written in the SRAM built-in Motion CPU module to the FLASH ROM built-in Motion CPU module for the ROM operation.

<ROM writing>


• Mode operated by RAM/Mode operated by ROM

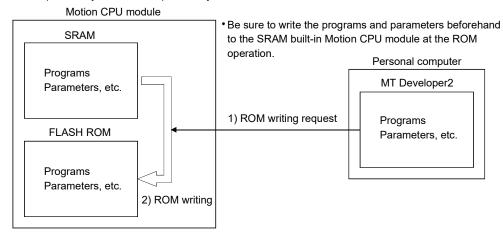

<ROM operation>


Mode operated by ROM

Motion CPU module

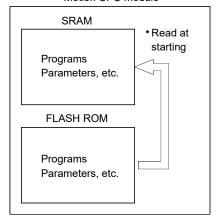

(a) Writing procedure for the data of SRAM built-in Motion CPU module to the ROM.

Execute the ROM writing to the FLASH ROM built-in Motion CPU module by selecting the [Execute] button on the Export to ROM Format screen displayed by the menu bar [Online] - [Export to ROM Format].

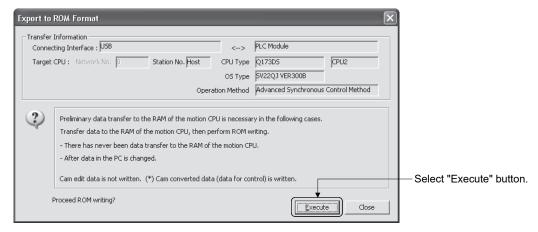


Refer to the help of MT Developer2 for details of the operation procedures.

POINT


Be sure to write the all data beforehand to SRAM built-in Motion CPU module at the ROM writing.

- (2) Write the programs and parameters of the MT Developer2 to the SRAM built-in Motion CPU module, and then write them to the FLASH ROM built-in Motion CPU module for the ROM operation.
 - <Data writing + ROM writing>
 - Mode operated by RAM/Mode operated by ROM

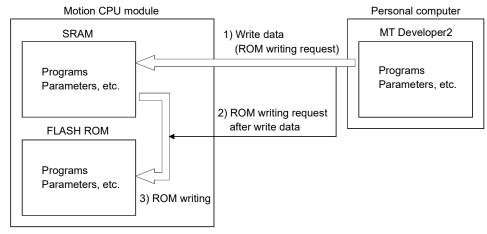


- <ROM operation>
- Mode operated by ROM

Motion CPU module

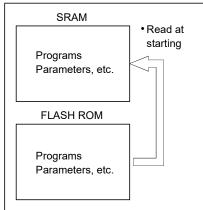

(a) Writing procedure for the data of MT Developer2 to the ROM.
 Check the data written in the Motion CPU by selecting the [Program memory + CPU ROM] of target memory on the Write to CPU screen displayed by the menu bar [Online] - [Write to CPU].

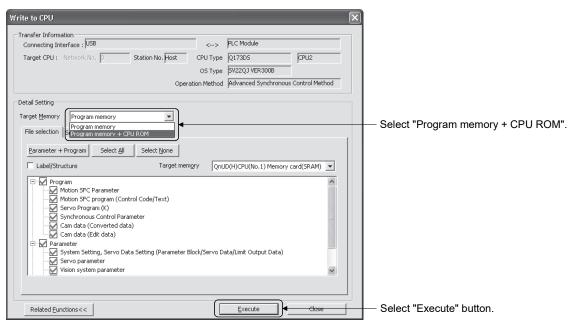

(Note): The display of selectable data are different depending on the operating software.

Refer to the help of MT Developer2 for details of the operation procedures.


POINT

Be sure to write the all data beforehand to SRAM built-in Motion CPU module at the ROM writing.


4.4.3 Operating procedure of the ROM operation function

(1) ROM operation procedure

The ROM operation procedure is shown below.

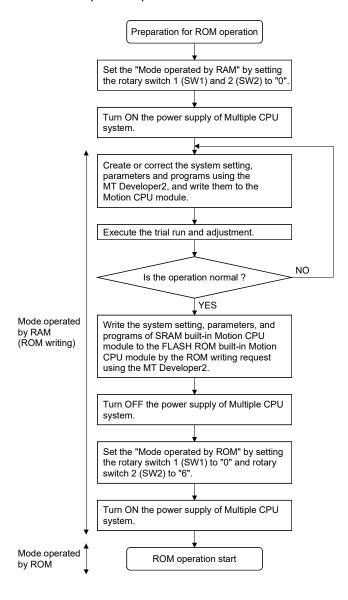

(2) Operation at the "Mode operated by ROM"

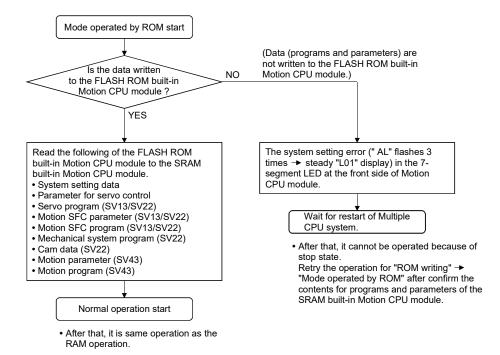

- (1) Change the operation mode using the rotary switch of Motion CPU module.
- (2) Confirm the operation mode by the 7-segment LED of Motion CPU module.


4.5 Security Function

4.5.1 Protection by password


This function is used to protect the user data of Motion CPU by registering a password. The illegal reading or writing of the user data are prevented by setting a password. Registered password can be changed and deleted.

- (1) Operating procedure password

 [Register/Change Password] or [Delete Password] screen is used to
 register/change/delete a password. Select from a menu bar or each screen of MT
 Developer2 to display these screen.
 - Select from a menu bar

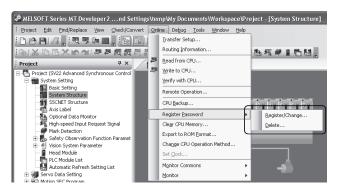

• Select from each screen of Write to CPU/Read from CPU/Verify with CPU

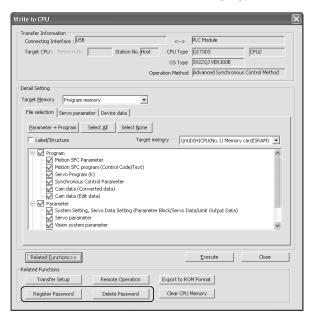

(2) User data protected by password

The user data protected in this function are shown below. "Write Protection" or "Read/Write Protection" can be set every user data.

Operating system software	User data	Protected contents
	Motion SFC program	Motion SFC programs (Control code, text) and motion SFC parameters
SV13/SV22	Servo program	Servo programs and program allocation
	Safety observation function parameter (Note-1)	Safety signal comparison parameter and speed monitoring parameter
	Mechanical system program (Note-2)	Mechanical system programs
SV22	Synchronous control parameter (Note-3) QDS(Ver.)	Input axis parameter and synchronous parameter
	Cam data	Cam data (Converted data, edit data (Note-4))
SV43	Motion program	Motion programs and motion parameters

 $(Note-1): Q173DSCPU/Q172DSCPU/Q173DCPU-S1/Q172DCPU-S1\ only.$

(Note-2): Virtual mode only.

(Note-3): Advanced synchronous control only.

(Note-4): Cam edit data "Read from CPU/Write to CPU/Verity with CPU" is possible for the MT Developer2 version "1.09k or later".


Ver.!: Refer to Section 1.5 for the software version that supports this function.

(3) Password registration/change


Execute the password registration/change on the "Register/Change password" screen of MT Developer2.

Refer to the help of MT Developer2 for details of the operation procedures.

<SV13/SV22 use>

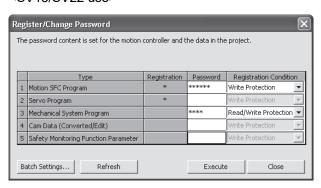

<SV43 use>

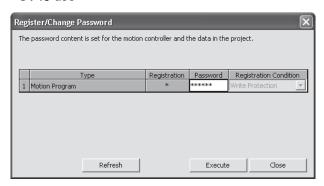

Items	Details
Туре	Type of user data
Registration	"*" is displayed when a password is registered in the Motion CPU.
	Enter initial registration/change password.
	Alphanumeric character (ASCII) of 6 or less
Password	Match case (Not full-size character)
	(Note-1): Make the item an empty column when a password is not
	registered.
	A registration condition set in the Motion CPU is displayed.
Registration condition	Write Protection
	Read/Write Protection
	New registration condition can be selected by password input.

- (1) Be sure to register/change password when the Motion CPU is in STOP state. Registering/changing password when in RUN state may cause the Motion SFC program to operate incorrectly.
- (2) If a user has forgotten a registration password, clear a password of Motion CPU by the all clear function. However, the all password data and user data are cleared by the all clear function. Re-write the user data to the Motion CPU. (Refer to Section 4.6 for details.)
- (3) ROM operation can be executed by user data registered a password.


 The password setting is also included in the ROM writing/reading data.
- (4) The password data is not saved in a project without project save. Be sure to save project.
- (5) If an operation stops by reset or power OFF of the Multiple CPU system while a password registration/change, the user data may not be registered. Register/change a password again to restore the user data.

(4) Password delete


Execute the password delete on the "Delete password" screen of MT Developer2.

Refer to the help of MT Developer2 for details of the operation procedures.

<SV13/SV22 use>

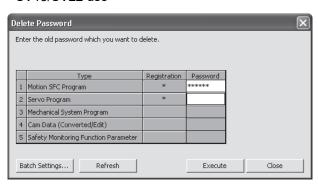

<SV43 use>

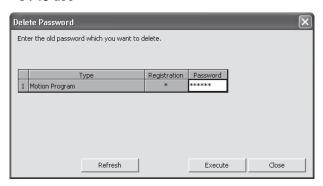

Items	Details
Туре	Type of user data
Registration	"*" is displayed when a password is registered in the Motion CPU.
	Enter old password.
Password	(Note-1): Make the item an empty column when a password is not
	registered.

- Be sure to delete password when the Motion CPU is in STOP state.
 Deleting password when in RUN state may cause the Motion SFC program to operate incorrectly.
- (2) The password data is not saved in a project without project save. Be sure to save project.
- (3) If an operation stops by reset or power OFF of the Multiple CPU system while delete of password, the data may not be deleted. Delete a password again to restore the user data.


(5) Password check

When operating the user data that sets password, the check password screen is displayed automatically.


Protection by the password temporarily released by success of password check. A password is memorized until MT Developer2 ends. (Since protection by password is automatically released temporarily at the user data operation, a check password screen is not displayed.)

Refer to the help of MT Developer2 for details of the operation procedure.

<SV13/SV22 use>

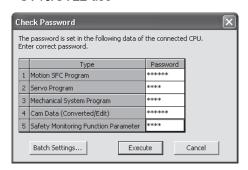

<SV43 use>

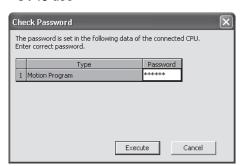

Items	Details
Туре	Type of user data
Password	Enter old password.

(6) Password save

Registered/changed/deleted password or password read with user data from "Read from CPU" screen displayed by reading operation of the data can be saved in a project data.

A password saved in a project data can be registered with user data, when the user data are written in the Motion CPU that does not set password from "Write to CPU" screen displayed by menu [Online] \rightarrow [Write to CPU].

Select menu [Project] \rightarrow [Save] to save the updated password data in a project.

(a) Status of password data for each operation

Operation	Status of password data
Read	When a password is set in the call source Motion CPU, the password contents are called and the password data in a project are updated.
Write	When a password data is set in a project, if a password is not set in the write designation Motion CPU, the password contents are also written.
Verification	Password data in a project are not updated.
ROM writing	Password contents registered in the write designation Motion CPU are written in ROM.
Online change (SV13/SV22)	Password contents of write designation Motion CPU are not updated.
Backup	It is saved in backup data including also the password contents registered in the call source Motion CPU. The password data in a project is not updated.
Load	Password contents in backup data are written in the write designation Motion CPU.
Register/change password	New password contents are written in the write designation Motion CPU. Password data in a project is also updated to new password contents.
Delete password	A password is deleted from the write designation Motion CPU. A password is deleted also from the password data in a project.
Project diversion	The password data in diverting source project is not diverted.

- (1) The password data is not saved in a project without project save.
- (2) Save a project after delete of password to delete the password data in a project. Or, create a project without password data by creating new project and diverting user data from a project with password data.


4.5.2 Protection by software security key QDS(

This function is used to protect the user data by setting the software security key to the project, operating system software, and MT Developer2 to limit the computer which operates the project and Motion CPU which runs the project.

The software security key is created in MT Developer2 and registered to the operating system software when the operating system software is installed to Motion CPU. It is also registered to the user program when the project is created.

The software security key verify is executed between MT Developer2 and Motion CPU during communication of the computer and Motion CPU. If the keys are not matched, the communication is not possible.

Only the enabled computer can communicate with Motion CPU. When the user data are leaked, copying and analyzing the data are prevented.

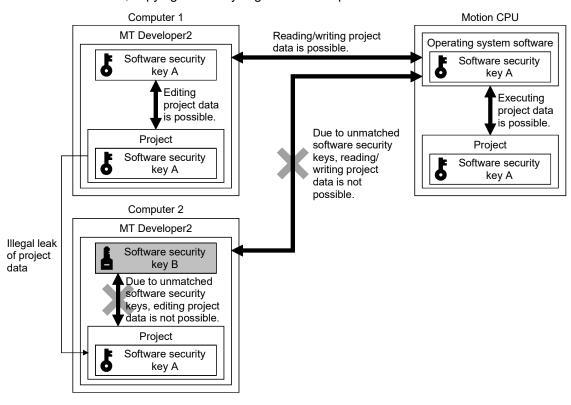

POINT

Even when the communication between MT Developer2 and Motion CPU is not possible due to the unmatched software security keys, monitoring and servo parameter reading/writing are possible in MR Configurator□.

⚠ CAUTION

• If the software security key set in the project data or operating system software cannot be imported to MT Developer2, the software security key cannot be released even in repair or maintenance, and the project data cannot be referred to permanently. Mitsubishi Electric Corporation cannot be held responsible for any damage which may occur as a result of not being able to refer to the project data for our customers or other individuals and organizations. Please be aware of this when using the software security key.

(1) Overview of software security key

The software security key is controlled with the software security key name. Eight software security key names can be registered to MT Developer2.

Key function level (Administrator/Developer/User) is set in the software security key, and some operations are restricted depending on the key function level.

The software security key can be exported/imported and used in computers other than the computer where it is created.

Key expiration date can be set when exporting the key. When the expiration date is expired, re-export/import the key since the communication with Motion CPU is not possible. (Even when the expiration date is expired, the operation of Motion CPU continues.)

The exported software security key cannot be imported and re-exported. When replacing computers, delete the software security key from the project and Motion CPU and create the software security key again in the new computer.

The details of key function level are shown below.


Items	Details				
Software security key name	• Set when creating the software security key. • Alphanumeric character of 16 or less (symbols such as "!" ' #\$%&()+,- /:;<=>?@[\]^_`{ }~" and space can be also used.) • The characters are case-sensitive.				
	Any of "Administrator", "Developer" or "User" Set when exporting the software security key. The level of newly created software security key is "Administrator". Prohibited operation function>				
Key function level	Key function level				
	User • Exporting cam data • Copying and exporting device comments • Exporting the servo program list • Printing project data • Saving sampling data of the digital oscilloscope (Note-1)				
Key expiration date	"Not Specified" or the period from the date when the key is exported to the expiration date (1 to 365 days) Set when exporting the software security key.				

(Note-1): Enabled/disabled can be set for saving sampling data of the digital oscilloscope.

(2) Start-up procedure of software security key

The operation of software security key function is executed on the software security key management screen of MT Developer2.

Select the menu bar [Tools]-[Software Security Key Management]. Refer to the help of MT Developer2 for details of the operation procedures.

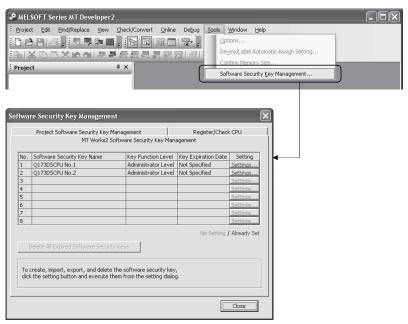


Operation details of software security key function are shown below

Items	Details
Software security key creation	Create the software security key in MT Developer2.
Software security key export	Write the software security key that can be used in MT Developer2 of other computers to the file.
Software security key import	Register the exported software security key to MT Developer2.
Software security key embedding (Installation of operating system software)	Embed the software security key to Motion CPU at installation of the operating system software.
Software security key embedding (Project)	Embed the software security key to the project.
Software security key delete (Delete from the project)	Delete the software security key from the project.
Software security key delete (Delete from MT Developer2)	Delete the software security key from MT Developer2.
Software security key information confirmation	Confirm the software security key information registered to the operating system software.


(3) Operating procedure of software security key function

(a) Using procedure of software security key

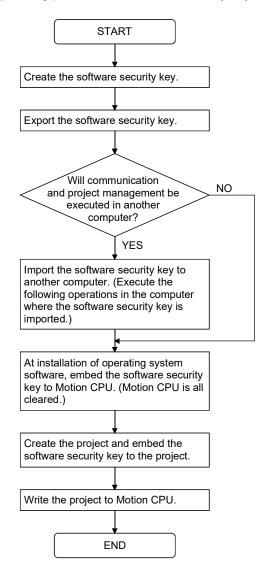

- (1) Backup the exported data after exporting the software security key. Be sure to store the data in a safe place.
- (2) If the software security key of the operating system software already installed in Motion CPU is different from that embedded to the operating system software to be installed, "Clear all" is executed at installation. It is recommended to backup the data in advance using MT Developer2. If the software security keys are matched, the programs, parameters and absolute position data that are written to Motion CPU are not re-written.

(b) Delete procedure of software security key

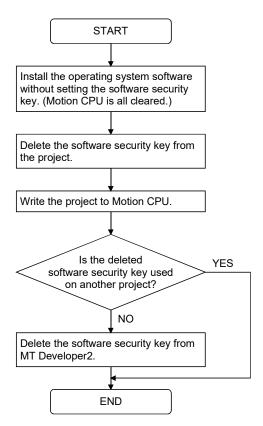


4.6 All Clear Function

This function is used to clear the all user data, password setting, device memory, backup area and user data area of FLASH ROM in the Motion CPU module.

(1) Procedure for clear all

- (a) Set the Motion CPU module to installation mode (Set a rotary switch 1 (SW1) to "A".)
- (b) Execute the all clear.Select the menu bar [Online]-[Clear CPU Memory].

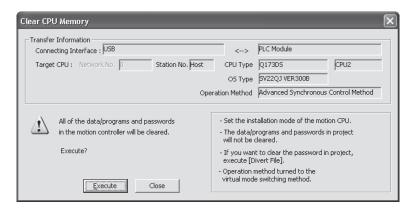

Refer to the help of MT Developer2 for details of the operation procedure.

- (1) Set the Motion CPU module to installation mode to clear all. Be sure to set a rotary switch after power supply OFF.
- (2) The user data area of FLASH ROM built-in Motion CPU module is also cleared.
- (3) All user data and password setting are cleared at the "Clear all". It is recommended to be backup them in advance using MT Developer2.
- (4) When all clear is executed for user data created by the operating system software type "SV22" of Q173DSCPU/Q172DSCPU, the operation method becomes "virtual mode switching method".

4.7 Communication Via Network


The communication between the personal computer and the Motion CPU is possible via Q series Network module (CC-LinkIE, CC-Link, MELSECNET/10(H), Ethernet and etc.) in the Motion CPU module.

Refer to the PLC manuals for the specifications of each network modules of CC-LinklE, CC-Link, MELSECNET/10(H), Ethernet and Serial communication, the handling method.

4.7.1 Specifications of the communications via network

- (1) Communications via network enables using MT Developer2 in the Motion CPU.
- (2) Access range of the communications via network of the Motion CPU is an access range equivalent to connection PLC CPU using GX Works2/GX Developer.

 Refer to the operating manual of GX Works2/GX Developer for details.
- (3) By setting the routing parameter to the control CPU of the network module and the CPU which connected the peripheral devices in the network by MELSECNET/10(H) and Ethernet, it is possible to relay to 8 network points and communicate.
- (4) Because the Motion CPU cannot become the control CPU of the network module, there is not setting item of the network module and network parameter. However, when connecting with the CPU on the other network from the peripheral device which connected the Motion CPU, it needs to the setting of the routing parameter.
- (5) It can operate by remote control the monitor or program editing of the Motion CPU via the intranet using the Ethernet module.

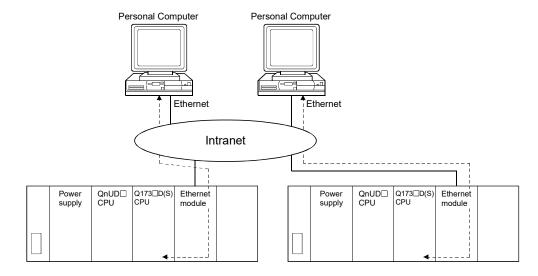

4.8 Monitor Function of the Main Cycle

- (1) Information for main cycle of the Motion CPU (process cycle executed at free time except for motion control) is stored to the special register.
- (2) Since the automatic refresh of CPU shared memory, normal task of Motion SFC program (SV13/SV22) and Motion program (SV43) are executed in the main cycle, make it reference for process time, etc. to program.
- (3) There are following methods to shorten a main cycle.
 - (a) Lengthen an operation cycle setting.
 - (b) Reduce the number of event task programs to execute in the Motion SFC program. (SV13/SV22)
 - (c) Reduce the number of normal task programs to execute simultaneously in the Motion SFC program. (SV13/SV22)
 - (d) Reduce the number of automatic refresh points of CPU shared memory.
 - (e) Reduce the number of Motion programs to execute simultaneously. (SV43)
- (4) When a main cycle is lengthened (more than 1.0[s]), a WDT error may occur in the Motion CPU.
- (5) Details of main cycle monitor register is shown below.

No.	Name	Meaning	Details
SD520	Scan time	Current scan time (1ms units)	Current scan time is stored in the unit 1[ms]. Range (0 to 65535[ms])
SD521	Maximum scan time	Maximum scan time (1ms units)	Maximum main cycle is stored in the unit 1[ms]. Range (0 to 65535[ms])

4.9 Servo Parameter Read/Change Function

- (1) When the servo parameters are changed, the Motion CPU will be automatically read the servo parameters and reflected them to the servo parameter storage area in the Motion CPU. Therefore, an operation to read servo parameters is unnecessary in the following cases.
 - (a) The parameters are changed by auto tuning.
 - (b) The parameters are changed by connecting directly MR Configurator to the servo amplifier.

POINT

If the power supply of Multiple CPU system is turned off/reset or the power supply of servo amplifier is turned off immediately after change, it may not be reflected.

- (2) After executing the servo parameter reading function, when it needs to reflect the servo parameters changed to the MT Developer2, read the servo parameters from the Motion CPU and save data.
- (3) The servo parameters of the axis specified from the Motion CPU can be changed or displayed individually.

 QDS(

Use the following special registers to change or display the servo parameter.

(a) "Servo parameter write/read request" device

No.	Name	Meaning	Details	Set by
SD552		Servo parameter read value	The read value of servo parameter which executed "2: 1 word read request" in SD804 is stored. (For MR-J5(W)-□B, the read value (low 1 word) of servo parameter is stored.) The read value (low 1 word) of servo parameter which executed "4: 2 word read request" in SD804 is stored.	System (At read request)
SD553	Servo		The read value (high 1 word) of servo parameter which executed "4: 2 word read request" in SD804 is stored.	
SD804 (Note-1)	parameter write/read request	Servo parameter write/read request flag	The "write/read request" is executed after setting of the axis No. and servo parameter No. 1: 1 word write request 2: 1 word read request 3: 2 word write request (Note-2) 4: 2 word read request (Note-2) "0" is automatically set by Motion CPU after completion of servo parameter write/read request. ("-1" is stored by Motion CPU at write/read error.)	User/ System
SD805		Axis No.	The axis No. to write/read servo parameter is stored. Q173DSCPU: 1 to 32 Q172DSCPU: 1 to 16	User

No.	Name	Meaning	Details	Set by
SD806	Servo parameter write/read	Servo parameter No.	The servo parameter No. to be written/read is stored in hexadecimal. H □ □ □ □ □ Parameter No. Parameter No. Parameter group No. 0: PA	User
SD807	request	Servo parameter setting value	The setting value of servo parameter to be written is stored when "1: 1 word write request" is set in SD804. (For MR-J5(W)-□B, the setting value (low 1 word) of servo parameter to be written is stored.)	
SD808		Servo parameter setting	The setting value of servo parameter to be written is stored when "3: 2 word write request" is set in	
SD809		value (2 word)	SD804.	

(Note-1): Do not execute the automatic refresh. (Note-2): This can be set only in MR-J5(W)- \square B.

- (b) Procedure for servo parameter write
 - 1) 1 word write procedure
 - 1. Set the axis No., servo parameter No. and servo parameter setting value in SD805 to SD807.
 - 2. Set "1: 1 word write request" in SD804.

Charly that "O" is set in CDO

Check that "0" is set in SD804. (Completion of write)

- 2) 2 word write procedure
 - 1. Set the axis No., servo parameter No. and servo parameter setting value in SD805, SD806, SD808, and SD809.

2. Set "3: 2 word write request" in SD804.

 Check that "0" is set in SD804. (Completion of write)

- (c) Procedure for servo parameter read
 - 1) 1 word read procedure
 - 1. Set the axis No. and servo parameter No. in SD805 and SD806.

2. Set "2: 1 word read request" in SD804.

3. Check that "0" is set in SD804. (Completion of read)

4. Stores the read value in SD552

4 - 49

 \downarrow

- 2) 2 word read procedure
 - 1. Set the axis No. and servo parameter No. in SD805 and SD806.
 - 2. Set "4: 2 word read request" in SD804.
 - 3. Check that "0" is set in SD804. (Completion of read)
 - 4. Stores the read value in SD552 (low 1 word) and SD553 (high 1 word).

- (1) New servo parameter is reflected to Motion CPU, therefore, the servo parameter of Motion CPU side does not need to change.
- (2) When the axis No., servo parameter No. or servo parameter setting value is outside the setting range, "-1: write/read error" is stored in the servo parameter write/read request flag. The setting value of servo parameter is reflected to Motion CPU even when the write error occurred. Be sure to set within the setting range.

4.10 Optional Data Monitor Function

The optional data monitor function stores the data in the servo amplifier in specified word devices and monitors the data.

(1) Optional data monitor setting

Set the data of MR-J5(W)- \square B, MR-J4(W)- \square B, and MR-JE- \square B (setting 1 to 6 per axis), and MR-J3(W)- \square B (setting 1 to 3 per axis).

It can be set by the system setting of MT Developer2.

N	lo.	I	tem	Setting range
-	1	0 111 0	Data type	Refer to (a) of this section
2	2	Setting 1 to 6	Storage device No.	Word device (D, W, #, U□\G)

(a) Data type

1) Q173DSCPU/Q172DSCPU use

Set the total of number of communication data points per 1 axis as shown below.

MR-J5(W)- \square B, MR-J4(W)- \square B, and MR-JE- \square B: Up to 6 points MR-J3(W)- \square B: Up to 3 points

When setting an axis of servo amplifier (MR-J4-□B-RJ) selected as "101: Synchronous encoder via servo amplifier" by [Pr.320]

Synchronous encoder axis type, set the number of communication data points so that the total comes to 2 points or less per axis.

		Number	Number of		Servo amplifier			
Data type	Unit	of words	communication data points	MR-J5(W)-□B	MR-J4(W)-□B	MR-J3(W)-□B	MR-JE-□B	Remark
Effective load ratio	[%]	1	1	0	0	0	0	
Regenerative load ratio	[%]	1	1	0	0	0	0	
Peak load ratio	[%]	1	1	0	0	0	0	
Position F/B	[pulse]	2	0	○ (Note-3)	0	0	0	
Encoder position within 1 revolution	[pulse]	2	0	○ (Note-3)	0	0	0	
Encoder multi- revolution counter	[rev]	1	0	0	0	0	0	
Load inertia moment ratio		4	4			0	0	
Load mass ratio	[× 0.1]	1	1	0	0	0	×	Linear servo motor use
Model loop gain	[rad/s]	1	1	0	0	0	0	
Bus voltage	[V]	1	1	0	0	0	0	
Cumulative current value	[Position command] (Note-1)	2	0	0	0	0	0	
Servo motor speed	[r/min]						0	
Servo motor speed	[mm/s]	1	1	0	0	0	×	Linear servo motor use
Selected droop pulse	[pulse]	2	2	(Note-3)	0	0	0	
Unit power consumption (Note-2)	[W]	1	1	0	0	×	0	

		Number	Number of		Servo ar	nplifier		
Data type	Unit	of words	communication data points	MR-J5(W)-□B	MR-J4(W)-□B		MR-JE-□B	Remark
Unit total power consumption (Note-2)	[Wh]	2	2	0	0	×	0	
Instantaneous torque							0	
Instantaneous thrust	[0.1%]	1	1	0	0	×	×	Linear servo motor use
Load side encoder information1	[pulse]	2	2	0	0	0	×	Fully closed control or
Load side encoder information2	-	2	2	0	0	0	×	synchronou s encoder via servo amplifier use
Z-phase counter	[pulse]	2	2	0	0	×	×	Linear servo motor use
Servo motor thermistor temperature	[°C]	1	1	0	0	0	×	
Torque equivalent to disturbance Thrust equivalent to disturbance	[0.1%]	1	1	0	0	×	O ×	Linear servo
Overload alarm margin	[0.1%]	1	1	0	0	×	0	motor use
Excessive error alarm margin	[16pulse]	1	1	(Note-3)	0	×	0	
Settling time	[ms]	1	1	0	0	×	0	
Overshoot amount	[pulse]	1	1	(Note-3)	0	×	0	
Servo motor/Load side position deviation	[pulse]	2	2	(Note-3)	0	×	×	Fully closed
Servo motor/Load side speed deviation	[0.01r/min]	2	2	0	0	×	×	control use
External encoder counter value	[pulse]	2	2	×	×	×	×	Stepping driver use
Internal temperature of encoder	[°C]	1	1	0	0	×	0	Software version C4 or later of MR-J4(W)- □B

○: Settable ×: Unsettable

⁽Note-1): The position command is command unit set in the servo data setting.

⁽Note-2): In the servo amplifier for multiple axes, the measured value of whole unit is monitored. When these values set to each axis of multi-axis servo amplifier, the same value can be monitored in each axis. Use the monitored value of not each axis but each module to calculate the module power consumption power consumption and unit integral power consumption of multiple modules.

⁽Note-3): For MR-J5(W)- \square B, the value displayed is the value (command unit) multiplied by the reciprocal of the electronic gear ratio of the servo amplifier. By configuring the electronic gear settings to the servo amplifier's "Electronic gear numerator (PA06)" and "Electronic gear denominator (PA07)" servo parameters, the data becomes the same data as for MR-J4(W)- \square B.

2) Q173DCPU(-S1)/Q172DCPU(-S1) use

Data type	Unit	Number of words	Servo amplifier MR-J3(W)-□B	Remark
Effective load ratio	[%]	1	0	
Regenerative load ratio	[%]	1	0	
Peak load ratio	[%]	1	0	
Position F/B	[pulse]	2	0	
Encoder position within 1 revolution	[pulse]	2	0	
Load inertia moment ratio	F > 0.41	,	0	
Load mass ratio	[× 0.1]	1	0	Linear servo motor use
Model loop gain	[rad/s]	1	0	_
Bus voltage	[V]	1	0	

○: Settable ×: Unsettable

(b) Storage device No.

Specify the word data to store monitor data.

Word device	Device that can be set
D	0 to 8191
W	0 to 1FFF
#	0 to 7999
U□\G	10000 to (10000+p-1) (Note-1), (Note-2)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-2): Only device of the self CPU can be used.

- (1) The updating cycle of data is every operation cycle.
- (2) Set an even numbered device No. in the two word data.
- (3) Refer to Chapter 2 for the user setting area points of the Multiple CPU high speed transmission area.

4.11 SSCNET Control Function

The following controls are possible in the SSCNET control function.

Function	Application
Connect/disconnect of SSCNET communication	Temporarily connect/disconnect of SSCNET communication is executed during Multiple CPU system's power supply ON. This function is used to exchange the servo amplifiers or SSCNETII cables.
Start/release of amplifier-less	Start/release of amplifier-less operation is requested.
operation	This function is used to confirm the operation without connection of the servo amplifier.

(1) Device list

Set the request in SSCNET control (command) (SD803), and the process status is stored in SSCNET control (status) (SD508).

(a) SSCNET control (status) devices

Device No.	Overview				
SD508	The execute status (Note) of the SSCNET control is stored.				
	Monitoring value	Status	tatus Contents		
	0	Command accept waiting	Connect/disconnect command of SSCNET communication or start/release command of amplifier-less operation can be accepted.		
	-1 Execute waiting -2 Executing		Waiting for connect/disconnect execute command after accepting the connect/disconnect command of SSCNET communication or start/release command of amplifier-less operation.		
			Connect/disconnect command of SSCNET communication or start/release command of amplifier-less operation is being executed.		

(Note): The status for amplifier-less operation status is set in the amplifier-less operation status flag (SM508). (Refer to Section 4.11.2.)

(b) SSCNET control (command) devices

Device No.	Overview						
SD803	Set the SSCNET control command.						
	Setting value	Command	Contents	Connect/ disconnect	Amplifier- less operation	User	
		No command	Set "0" if there is no command.	0	0		
	1 to 32	Disconnect command of SSCNET communication	Set axis No. "1 to 32" to be disconnected.	0			
	-10	Connect command of SSCNET communication	Set "-10" to connect axis while disconnecting.	0			
	-20	Start command 1 of amplifier-less operation (EMI invalid)	Set "-20" to change from the normal operation to amplifier-less operation. EMI signal is invalid during amplifier-less operation, and the wiring of EMI signal is not necessary.		0		
	-21	Start command 2 of amplifier-less operation (EMI valid)	Set "-21" to change from the normal operation to amplifier-less operation. EMI signal is valid during amplifier-less operation, and the wiring of EMI signal is necessary.		0		
	-25	Release command of amplifier-less operation	Set "-25" to change from the amplifier-less operation to normal operation.		0		
	-2	Execute command	Set "-2" to execute the processing when the SSCNET control (status) (SD508) is execute waiting after setting the value of each command	0	0		

4.11.1 Connect/disconnect function of SSCNET communication


Temporarily connect/disconnect of SSCNET communication is executed during Multiple CPU system's power supply ON.

This function is used to exchange the servo amplifiers or SSCNET cables. Set the request for the connect/disconnect of SSCNET communication in SSCNET control (command) (SD803), and the status for the command accept waiting or execute waiting is stored in SSCNET control (status) (SD508).


Use this device to connect the servo amplifiers disconnected by this function. When the power supply module of head axis of each SSCNET line (servo amplifier connected directly to the Motion CPU module) turns OFF/ON, this function is not necessary.

- (1) Servo amplifiers connected after the axis specified for SSCNET communication disconnect processing are also disconnected. Confirm the LED display of the servo amplifier for "AA" after completion of SSCNET communication disconnect processing. And then, turn OFF the servo amplifier's power supply.
- (2) The SSCNET control (status) (SD508) only changes into the execute waiting status (-1) even if the disconnect command of SSCNET communication (1 to 32) or connect command of SSCNET communication (-10) is set in SSCNET control (command) (SD803). The actual processing is not executed. Set the execute command (-2) in SSCNET control (command) (SD803) to execute.
- (3) When the disconnect command of SSCNET communication (1 to 32) is set to axis not disconnect, the SSCNET control (status) (SD508) returns the command accept waiting status (0) without entering the execute waiting status (-1).
- (4) Operation failure may occur in some axes if the servo amplifier's power supply is turned OFF without using the disconnect function. Be sure to turn OFF the servo amplifier's power supply by the disconnect function.
- (5) When the connect/disconnect command is executed to the axis allocated to B-axis and C-axis of MR-J5W-□B and MR-J4W-□B, or B-axis of MR-J3W-□B, it can be disconnected, however it cannot be reconnected. Execute the connect/disconnect command to the A-axis.
- (6) Only the release command of amplifier-less operation can be accepted during amplifier-less operation. The connect/disconnect command cannot be accepted.
- (7) If using the connect/disconnect function of SSCNET communication in a line used to perform driver communication, connection/disconnection is only possible at the first axis (the servo amplifier directly connected to Motion CPU). Refer to Section 4.16 for details.

- (1) Procedure to connect/disconnect of SSCNET communication Procedure to connect/disconnect at the exchange of servo amplifiers or SSCNETII cables is shown below.
 - (a) Procedure to disconnect
 - 1) Set the axis No. to disconnect in SD803. (Setting value: 1 to 32)
 - 2) Check that "-1: Execute waiting" is set in SD508. (Disconnect execute waiting)
 - 3) Set "-2: Execute command" in SD803.
 - Check that "0: Command accept waiting" is set in SD508.
 (Completion of disconnection)
 - 5) Turn OFF the servo amplifier's power supply after checking the LED display "AA" of servo amplifier to be disconnected.

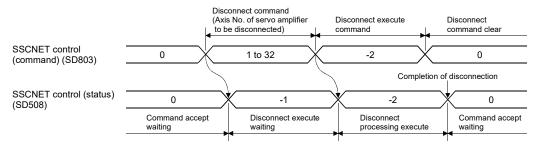

- (b) Procedure to connect
 - 1) Turn ON the servo amplifier's power supply.
 - 2) Set "-10: Connect command of SSCNET communication" in SD803.
 - 3) Check that "-1: Execute waiting" is set in SD508. (Connect execute waiting)
 - 4) Set "-2: Execute command" in SD803.
 - 5) Check that "0: Command accept waiting" is set in SD508. (Completion of connection)
 - 6) Resume operation of servo amplifier after checking the servo ready (M2415+20n) ON.

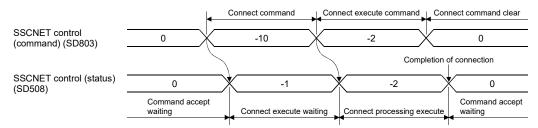

(2) Program

(a) Program to connect/disconnect the servo amplifiers after Axis 5 of self CPU


Disconnect procedure : Turn OFF the servo amplifier's control circuit power

supply after checking the LED display "AA" of servo

amplifier.

Connect procedure : Resume operation of servo amplifier after checking

the servo ready (M2415+20n) ON.

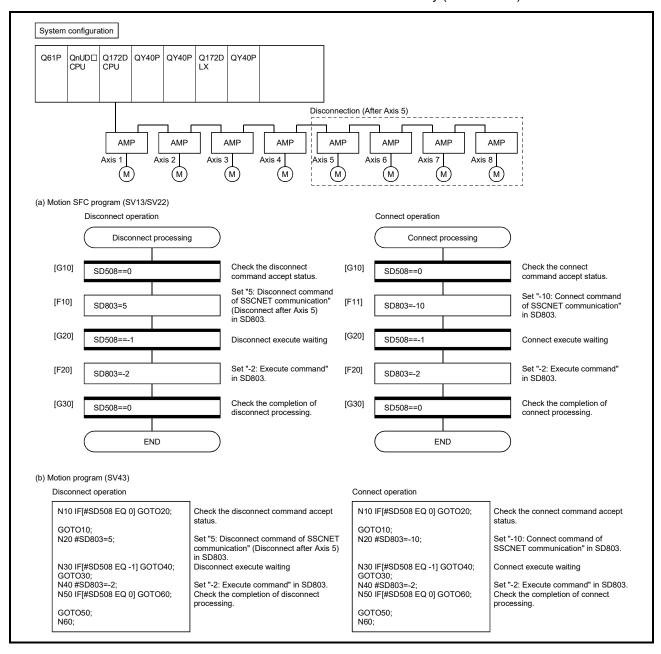

(b) Program to connect/disconnect the servo amplifiers after Axis 5 connected to the Motion CPU (CPU No.2) by the PLC CPU (CPU No.1).

Disconnect procedure: Turn OFF the servo amplifier's control circuit power


supply after checking the LED display "AA" of servo

amplifier by turning X0 from OFF to ON.

Connect procedure : Resume operation of servo amplifier after checking

the servo ready (M2415+20n) of servo amplifier by

turning X1 from OFF to ON.

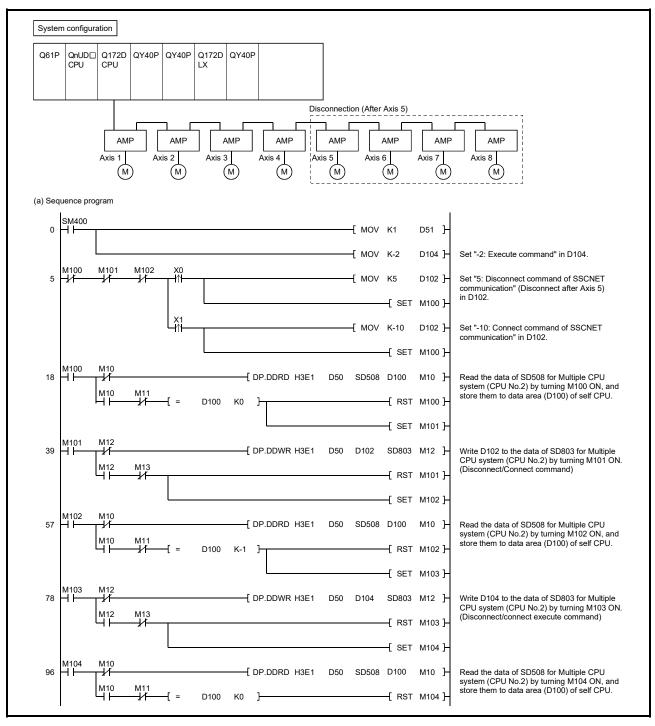

4.11.2 Amplifier-less operation function Ver.

This function is used to confirm for the operation without connecting the servo amplifiers at the starting or debugging.

The start/release request of amplifier-less operation is set in SSCNET control (command) (SD803), and status of the command accepting waiting or execute waiting is stored in SSCNET control (status) (SD508).

Confirm the amplifier-less operation status by the amplifier-less operation status (SM508).

POINT

- (1) The SSCNET control (status) (SD508) only changes into the execute waiting status (-1) even if the start command of amplifier-less operation 1/2 (-20/-21) or release command of amplifier-less operation (-25) in SSCNET control (command) (SD803). The actual processing is not executed. Set the execute command (-2) in SSCNET control (command) (SD803) to executed.
- (2) Only the release command of amplifier-less operation can be accepted during amplifier-less operation. The start command for the other amplifier-less operation cannot be accepted.
- (3) The operation of servo motor or the timing of operation cycle, etc. at the amplifier-less operation is different from the case where the servo amplifiers are connected. Confirm the operation finally with a real machine.
- (4) The amplifier-less operation becomes invalid immediately after the Multiple CPU system's power supply ON or reset.

(1) Amplifier-less operation status flag

Device No.	Signal name	Overview	Set by
SM508	Amplifier-less operation status flag	The amplifier-less operation status is stored. OFF: During normal operation ON: During amplifier-less operation	System

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(2) Control details

Operation during amplifier-less operation is shown below.


Item	Operation				
	Depending on the details of the system settings, the following types can be connected.				
	(1) Q173DSCPU/Q172DSCPU use				
	(a) For communication type "SSCNETⅢ/H"				
	1) When setting MR-J5-□B				
	Servo amplifier : MR-J5-10B				
	• Servo motor : HK-KT053 (Note-1)				
	2) When setting MR-JE-□B				
	Servo amplifier : MR-JE-10B				
Come amplifier time	• Servo motor : HG-KN053				
Servo amplifier type	3) When setting anything other than MR-J5-□B and MR-JE-□B				
	Servo amplifier : MR-J4-10B				
	• Servo motor : HG-KR053				
	(b) For communication type "SSCNETIII"				
	Servo amplifier : MR-J3-10B				
	Servo motor : HF-KP053				
	(2) Q173DCPU(-S1)/Q172DCPU(-S1) use				
	Servo amplifier : MR-J3-10B Servo markets				
	Servo motor : HF-KP053 Deviction counter value : Always 0.				
	Deviation counter value : Always 0 Motor speed : Motor speed for the command				
	Motor current value : At the amplifier-less operation start: "0"				
	(The motor current value can be simulated during amplifier-less operation by changing				
	the motor current value (#8001+20n) using the user program.)				
	• Servo ready signal : This signal changes depending on the status of all axes servo ON command (M2042)				
Servo amplifier status	or servo OFF command (M3215+20n).				
l con round ampinion oracido	Torque limiting signal : This signal turns ON by the following condition.				
	Motor current value ≥ Torque limit value				
	(Note): When the positive direction and negative direction of torque limit value is set				
	individually using CHGT2 instruction is as follows. ODS				
	Motor current value ≥ Positive direction torque limit or Negative direction torque limit value				
	Zero pass signal : Always ON				
	Each signals is shown below at the amplifier-less operation start.				
	(1) Q173DSCPU/Q172DSCPU use				
	• FLS signal (M2411+20n) : Normal open: OFF/Normal close: ON				
0	• RLS signal (M2412+20n) : Normal open: OFF/Normal close: ON				
Servo amplifier	DOG/CHANGE signal (M2414+20n) : Normal open: OFF/Normal close: ON				
external signal	(2) Q173DCPU(-S1)/Q172DCPU(-S1) use				
(At the setting valid)	• FLS signal (M2411+20n) : ON • RLS signal (M2412+20n) : ON				
	DOG/CHANGE signal (M2414+20n) : OFF				
	The servo amplifier external signals can be operated during amplifier-less operation by turning ON/OFF the FLS				
	signal (M2411+20n), RLS signal (M2412+20n) or DOG/CHANGE signal (M2414+20n) using the user program.				
Home position return	All home position return methods can be used.				
poolion rotuin	The absolute position is controlled as the normal servo amplifier connection.				
	(1) At the amplifier-less operation start				
	The absolute position is restored by the saved absolute position data. The absolute position is restored as the				
	travel value "0" during the servo amplifier's power supply OFF.				
	(2) During amplifier-less operation				
Absolute position	Suppose the servo motor operated during amplifier-less operation, and the absolute position data is				
Absolute position	refreshed.				
system	(3) The servo amplifiers are connected after amplifier-less operation				
	The absolute position is restored by the refreshed absolute position data during amplifier-less operation.				
	When the distance between the motor position of saved absolute position data and actual motor position is				
	the allowable travel during Power-Off or more away, the minor error (Error code: 901 (real mode)/9010 (virtual				
	mode)) will occur. If the distance is "±2147483648[pulse]" or more away, the absolute position is restored				
	normally.				

Item	Operation
Operation using	Online operation and monitor of the servo amplifiers cannot be executed.
MR Configurator □	Offiline operation and monitor of the servo amplifiers cannot be executed.
Optional data monitor	Only "position F/B" and "encoder position within 1 revolution" are possible. The other monitor values are "0".
Driver communication	Cannot change to amplifier-less operation when connected and not connected servo amplifier axes are mixed. Change to amplifier-less operation when all axes are connected, or disconnect all axes of the servo amplifier.
SSCNETII/H head module	The module is disconnected during amplifier-less operation.

(Note-1): The servo motor encoder resolution operates at 4194304[pulse/rev].

(3) Procedure to start/release of amplifier-less operation


- (a) Procedure to start
 - 1) Set "-20: Start command 1 of amplifier-less operation (EMI invalid)" in SD803.
 - 2) Check that "-1: Execute waiting" is set in SD508.(Start processing execute waiting of amplifier-less operation)
 - 3) Set "-2: Execute command" in SD803.
 - 4) Check that "0: Command accept waiting" is set in SD508. (Start processing completion of amplifier-less operation)
 - Check that "ON: During amplifier-less operation" is set in SM508.
 Resume operation of servo amplifier after checking the servo ready (M2415+20n) ON.

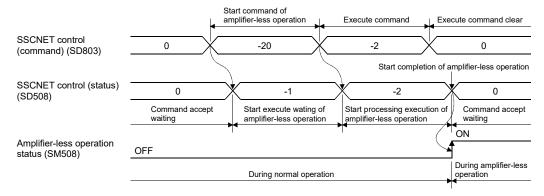

4 - 61


(b) Procedure to release

- 1) Set "-25: Release command of amplifier-less operation" in SD803.
- 2) Check that "-1: Execute waiting" is set in SD508.(Release processing execute waiting of amplifier-less operation)
- 3) Set "-2: Execute command" in SD803.
- 4) Check that "0: Command accept waiting" is set in SD508.
- 5) Check that "OFF: During normal operation" is set in SM508. (Release processing completion of amplifier-less operation. When the servo amplifiers are connected, they are automatically reconnected.)

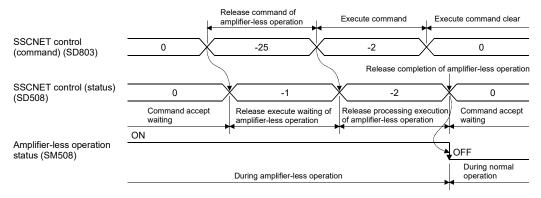

(4) Program

Program to start/release of amplifier-less operation for the self CPU

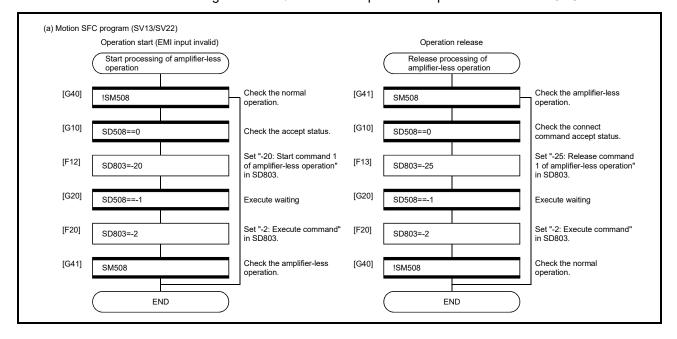

4.12 Remote Operation

This function is used to control the following operation of Motion CPU using MT Developer2.

- Remote RUN/STOP
- · Remote latch clear

POINT


Latch clear can be executed only using the remote control of MT Developer2.

4.12.1 Remote RUN/STOP

The PLC ready flag (M2000) is turned ON/OFF using MT Developer2 with RUN/STOP switch of Motion CPU module set to RUN.

(1) Operation procedure

Select [RUN] or [STOP] on "CPU remote operation" screen displayed by menu [Online] – [Remote Operation], and click [Execute] button.

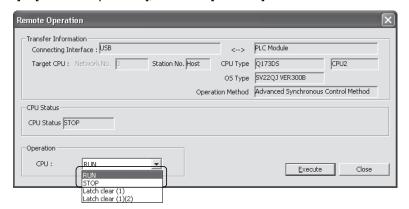

Refer to the help of MT Developer2 for details of the operation procedure.

POINT

(1) Remote RUN cannot be executed if RUN/STOP switch sets to STOP.

Operation after remote operation by RUN/STOP switch is shown below.

	_	Position of RUN/STOP switch		
		RUN	STOP	
	Execute remote RUN	RUN	STOP	
Remote operation	Execute remote STOP	STOP	STOP	

- (2) The following parameters are read by turning on the PLC ready flag (M2000).
 - Fixed parameter
 - · Home position return data
 - JOG operation data
 - Parameter block
 - Work coordinate data (SV43)
 - Servo parameter
 - Mechanical system program (SV22 virtual mode)
 - Motion SFC parameter (SV13/SV22)
 - Motion parameter (SV43)
 - · Limit switch output data
 - Cam data (SV22 advanced synchronous control)

REMARK

The PLC ready flag (M2000) can also be turned ON/OFF (PCPU READY complete flag (SM500) ON/OFF) in the following methods.


- RUN/STOP switch change
- PLC ready flag (M2000) ON/OFF

4.12.2 Remote latch clear

Device data of Motion CPU that latched are cleared by MT Developer2 at PLC ready flag (M2000) OFF (PCPU READY complete flag (SM500) OFF). Operation for remote latch clear is combined with remote RUN/STOP.

(1) Operation procedure

- (a) Turn OFF the PLC ready flag (M2000) (PCPU READY complete flag (SM500) OFF) by remote STOP.
- (b) Select [Latch clear (1)] or [Latch clear (1)(2)] on "CPU remote operation" screen displayed by menu [Online] – [Remote Operation], and click [Execute] button.

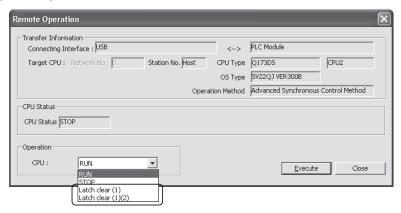

(Note): Execute remote RUN to turn ON the PLC ready flag (M2000) after remote latch clear.

Refer to the help of MT Developer2 for details of the operation procedure.

POINT

- (1) Remote latch clear cannot be operated while the PLC ready flag (M2000) is ON (PCPU READY complete flag (SM500) is ON) or test mode.
- (2) The following latch area are cleared in the remote latch clear operation.
 - Latch clear (1) : Clear the range set in latch area (1)
 - Latch clear (1)(2): Clear the range set in latch area (1) and (2)
- (3) The user area (#0 to #7999) of motion device are also cleared by executing remote latch clear.
- (4) All of the user device not latched are cleared by the remote latch clear operation of latch area (1) and (2).
- (5) Set the range of latch area (1) and (2) in the system basic setting of system setting. (Refer to Section 3.1.3.)

4.13 Communication Function via PERIPHERAL I/F Ver.

The built-in Ethernet Motion CPU (Q173DSCPU /Q172DSCPU/Q173DCPU-S1/ Q172DCPU-S1) can communicate data by connecting built-in PERIPHERAL I/F of the Motion CPU with personal computers and/or display devices, etc. using an Ethernet

There are following three ways to communicate between the Motion CPU and MT Developer2.

- "Direct connection" connected with the Ethernet cable
- "Connection via HUB" connected via HUB
- MC protocol communication


POINT

- (1) When using PERIPHERAL I/F for connecting and communication with the Motion CPU cannot be established, perform SRAM clear with the rotary switch. When SRAM clear is performed with the rotary switch, all user data is erased therefore backup data with MT Developer2 as necessary. Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for details of SRAM clear.
- (2) The Motion CPU does not support SLMP. PERIPHERAL I/F cannot be used for SLMP communication.

4.13.1 Direct connection


Between the Motion CPU and MT Developer2 can be connected using one Ethernet cable without HUB.

The direct connection enables communication with only specifying connection target. IP address setting is not required.

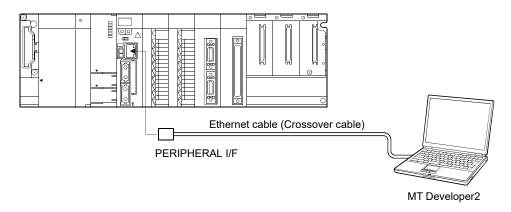


Ver.!: Refer to Section 1.5 for the software version that supports this function.

Communication setting in MT Developer2 side
 Set the items on the Transfer Setup screen in MT Developer2 as shown below.

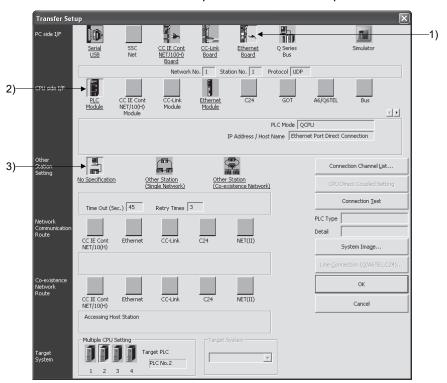

- 1) Select [Ethernet Board] for PC side I/F.
- Select [PLC Module] for CPU side I/F.
 Select the "Ethernet Port Direct Connection" on the CPU side I/F Detailed Setting of PLC Module screen.

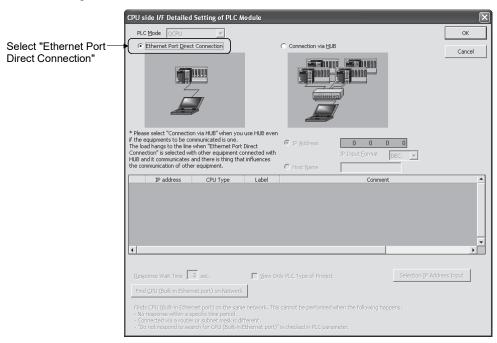


Make the setting for Other Station Setting.
 Select it according to the operating environment.

(2) Precautions

Precautions for direct connection are shown below.

- (a) Connection to LAN line
 - When the Motion CPU is connected to LAN line, do not perform communication using direct connection. If performed, the communication may put a load to LAN line and adversely affect communications of other devices.
- (b) Connection not connected directly
 - The system configuration that connects a Motion CPU with an external device using a hub as shown below is not regarded as direct connection.

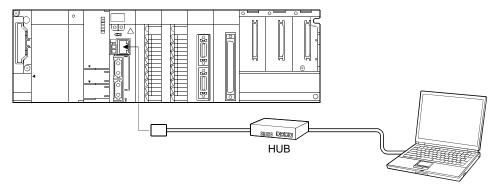

- When two or more Ethernet ports are enables in the network connections setting on the personal computer, communication by direct connection is not possible. In the setting, leave only one Ethernet port enabled for direct connection and disable the other Ethernet ports.
- (c) Condition in which direct connection communication may not be available Under the following conditions, direct connection communication may not be available. In that case, check the setting of the Motion CPU and/or personal computer.
 - In the Motion CPU IP address, bits corresponding to "0" in the personal computer subnet mask are all ON or all OFF.

(Example) Motion CPU IP address : 64. 64. 255. 255

Personal computer IP address : 64. 64. 1. 1 Personal computer subnet mask : 255.255. 0. 0


• In the Motion CPU IP address, bits corresponding to the host address for each class in the personal computer IP address are all ON or all OFF.

(Example) Motion CPU IP address : 64. 64. 255. 255

Personal computer IP address : 192.168. 0. 1 Personal computer subnet mask : 255. 0. 0. 0


4.13.2 Connection via HUB

Between the Motion CPU and MT Developer2 can be connected via HUB.

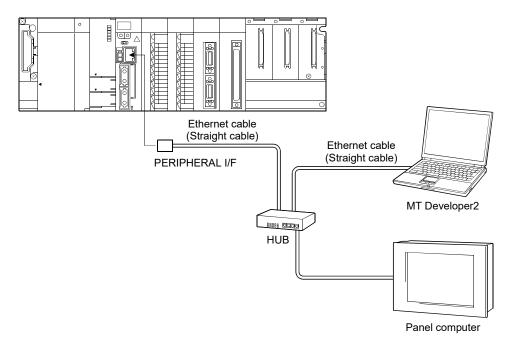

(1) Setting in Motion CPU side

Set the items on the Built-in Ethernet Port Setting in Basic Setting as shown below.

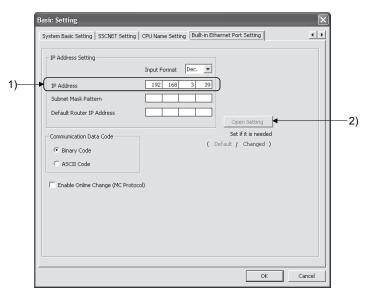


1) Set the Motion CPU IP address.

(Default IP address: 192.168.3.39)

Change the IP address if required.

No need to set "Subnet Mask Pattern" and "Default Router IP Address".


 Select the protocol ("TCP" or "UDP") to be used, in accordance with the external device on the Built-in Ethernet Port Open Setting screen.
 Select "TCP" to emphasize communication reliability.

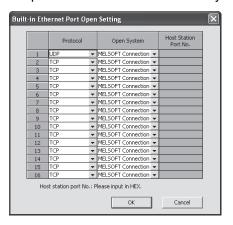


Enabling the parameters of Motion CPU
 Using Ethernet direct connection or USB/RS-232 connection, write the settings in parameter to the Motion CPU by selecting [Online] - [Write to CPU] in MT Developer2. After writing the parameter settings, power the Multiple CPU system OFF to ON or reset using the RUN/STOP/RESET switch so that the parameters become valid.

Connect directly with an Ethernet cable (crossover cable) between the personal computer and Motion CPU to write the parameters using the Ethernet cable. Refer to Section 4.13.1 for details.

(2) Communication setting in MT Developer2 side
Set the items on the Transfer Setup screen in MT Developer2 as shown below.

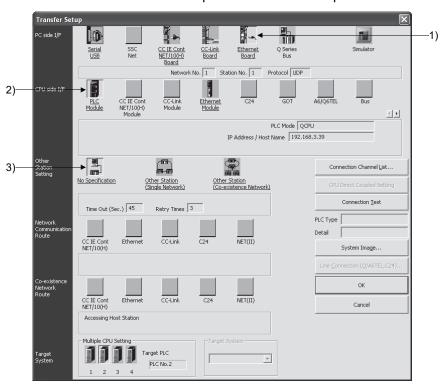

- 1) Select [Ethernet Board] for PC side I/F.
- Select [PLC Module] for CPU side I/F.
 Select the "Connection via HUB" on the CPU side I/F Detailed Setting of PLC Module screen, and set the Motion CPU IP address.

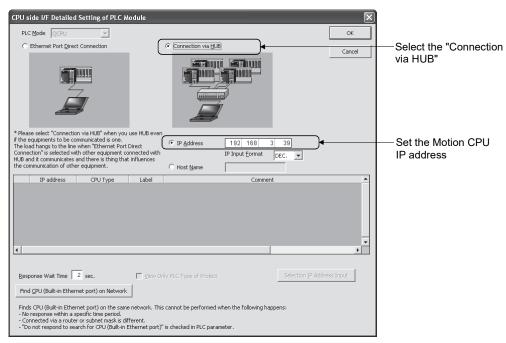


Make the setting for Other Station Setting.
 Select it according to the operating environment.


POINT

The Find CPU function can be used for specifying the IP address for Motion CPU side in the connection via HUB.

This function can be activated in [Find CPU (Built-in Ethernet port) on Network] of CPU side I/F Detailed Setting of PLC Module screen, finds the Motion CPU connected to the same HUB as MT Developer2, and displays a list. Select the connecting Motion CPU and click [Select IP Address Input] button to set the IP address for Motion CPU side.

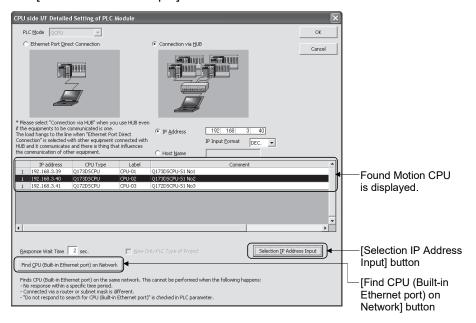

Set the label and comment of the Motion CPU in [CPU Name Setting] of Basic Setting.
 The label and comment set in [CPU Name Setting] are displayed on the CPU side I/F Detailed Setting of PLC Module screen.

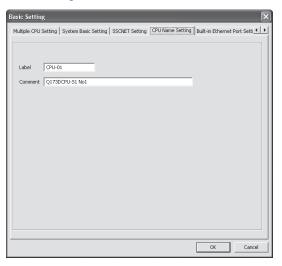


Item	Description	Setting range
Label	Enter a label (name and/or purpose) of the Motion CPU.	Up to 10 characters
Comment	Enter comments regarding the Motion CPU.	Up to 64 characters


(3) Precautions


Precautions for connection via HUB are shown below.

(a) When the personal computer that can connect to LAN line is used, set the same value for Motion CPU IP address as the following personal computer IP address.

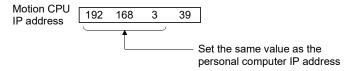

(Example) Personal computer IP address: "192.168.3.1"

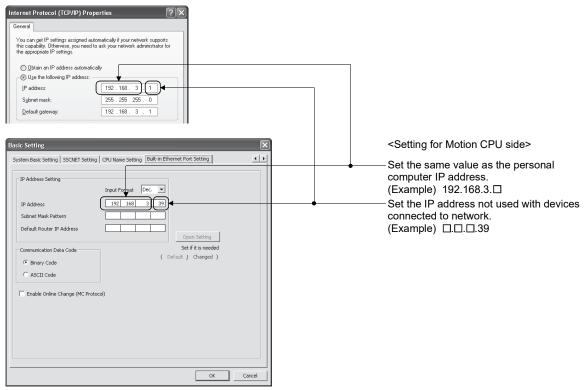

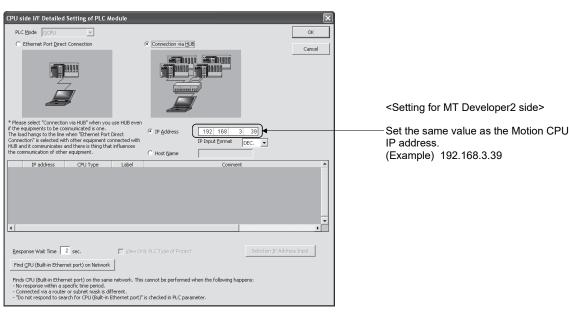

- (b) The maximum number of devices that can access to one Motion CPU simultaneously is 16.
- (c) Hubs with 10BASE-T or 100BASE-TX ports can be used. (The ports must comply with the IEEE802.3 100BASE-TX or IEEE802.3 10BASE-T standards.)
- (d) The Ethernet cables must to be installed away from power cabling/lines.
- (e) The module operation is not guaranteed if any of the following connection is used. Check the module operation on the user side.
 - Connections using the Internet (general public line)
 - Connections using devices in which a firewall is installed
 - · Connections using broadband routers
 - · Connections using wireless LAN
- (f) When multiple Motion CPUs are connected to MT Developer2, beware of the below cautions:
 - IP addresses must be different for each Motion CPU.
 - Different projects must be used for each Motion CPUs on MT Developer2.

4.13.3 MC protocol communication

PERIPHERAL I/F of the Motion CPU enables communication using the MC protocol ^(Note-1).

External devices such as personal computers and display devices read/write device data from/to the Motion CPU using the MC protocol.

External devices monitor the operation of the Motion CPU, analyze data, and manage production by reading/writing device data.

REMARK

(Note-1): The MC protocol is an abbreviation for the MELSEC communication protocol.

The MELSEC communication protocol is a name of the communication method used to access CPU modules from external devices in accordance with the communication procedure of Q-series programmable controllers (such as serial communication modules, Ethernet modules).

For details on the MC protocol, refer to the "MELSEC-Q/L Communication Protocol Reference Manual".


POINT

Only the Motion CPU, and other CPUs in a Multiple CPU system can be communicated with from external devices such as personal computers and display devices by using the PERIPHERAL I/F for MC protocol communication.

Accessing CPU modules on other stations with CC-Link via the Motion CPU is not possible.

(1) Setting for MC protocol communication

Setting for communication using the MC protocol is described below. Set the items of following (a) to (c) in the Built-in Ethernet Port Setting of the Basic Setting of MT Developer2.

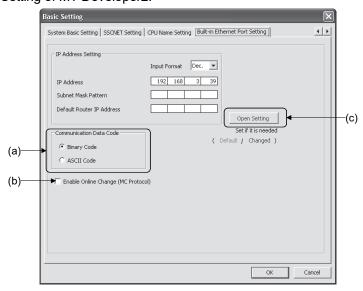

(a) Communication data code Select a communication data code used for the MC protocol, "Binary code" or "ASCII code".

(b) Enable online change (MC protocol)

Check the checkbox to enable online change when writing data to the Motion CPU from the external device that communicates using the MC protocol.

For details on the available functions with this setting, refer to this section (2).

(c) Open Setting

Set the following items.

1) Protocol


Select a connection used as MC protocol. (Up to 16 CPU modules can be connected.)

Open System Select "MC protocol".

3) Host Station Port No. (Required)

Set the host station port number (in hexadecimal).

• Setting range: 0401H to 1387H, 1392H to FFFEH

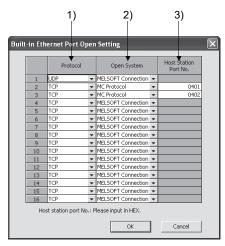

POINT

When the "Enable online change (MC protocol)" box is unchecked, if a data write request is sent from an external device to the Motion CPU which is in the RUN status, data will not be written to the Motion CPU and the module returns the NAK message.

(2) Command list

When the PERIPHERAL I/F of the Motion CPU communicates using the MC protocol, commands listed in table below can be executed.

			Command	Command		Statu	s of Motion	n CPU
Function		(Subcommand)	Description	Number of]	RI	JN	
		(Note-1)	Description	processed points	STOP	Write	Write	
							enabled	disabled
		In units	0401	Reads bit devices in units of one point.	ASCII: 3584 points			
		of bits	(0001)	BIN	BIN: 7168 points			
	Batch read	l	0401	D 11711	960 words	0	0	0
		In units of words	(0000)	Reads bit devices in units of 16 points.	(15360 points)			
		oi words	(0000)	Reads word devices in units of one point.	960 points			
		In units	1401	W 2 12 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	ASCII: 3584 points			
		of bits	(0001)	Writes bit devices in units of one point.	BIN : 7168 points			
	Batch write		4404	Maite hit de de de contra esta esta esta esta esta esta esta est	960 words	0	0	×
		In units	1401	Writes bit devices in units of 16 points.	(15360 points)			
		of words	(0000)	Writes word devices in units of one point.	960 points			
	Random read			Reads bit devices in units of 16 or 32 points			0	0
		read In units of words		by randomly specifying a device or device		0		
			0403	number.	400 ! t			
	(Note-2)		of words (0000)	Reads word devices in units of one or two	192 points			
Device				points by randomly specifying a device or				
				device number.				
memory		In units	1402	Sets/resets bit devices in units of one point by				
			(0001)	randomly specifying a device or device	188 points			
		OI DILS	(0001)	number.				
	Test			Sets/resets bit devices in units of 16 or 32				
	(Random write)	In units		points by randomly specifying a device or		0	0	×
	of words	1402	device number.	(Note-5)	(Note-5)			
		(Note-2)	(0000)	Writes word devices in units of one or two				
				points by randomly specifying a device or				
				device number.				
	Monitor	egistration In units 0801 of words (0000)		Registers bit devices to be monitored in units				
	registration		of 16 or 32 points.	192 points	0	0	0	
	(Note-2), (Note-3), (Note-4), (Note-6)		(0000)	Registers word devices to be monitored in	.02 po			O
	(INOIE-4), (INOIE-0)			units of one or two points.				
	Monitor (Note-6)	In units of words	s 0802	Monitors devices registered.	Number of	0	0	0
	IVIORIILO		(0000)	Monitors devices registered.	registered points)

○: Available, ×: Not available

For the monitor registration, an error (4032H) occurs during the monitor operation.

(Number of word access points) \times 12 + (Number of double-word access points) \times 14 \leq 1920

- Bit devices are regarded as 16 bits during word access and 32 bits during double-word access.
- Word devices are regarded as 1 word during word access and 2 words during double-word access.

(Note-6): Only Motion CPU module connected by Ethernet can be used.

⁽Note-1): Subcommand is for the QnA-compatible 3E frame.

⁽Note-2): Devices such as TS, TC, SS, SC, CS, and CC cannot be specified in units of words.

⁽Note-3): During monitor registration, monitor condition cannot be set.

⁽Note-4): Do not execute monitor registration from multiple external devices. If executed, the last monitor registration becomes valid.

⁽Note-5): Set the number of processed points so that the following condition is satisfied.

(3) Available devices

The devices available in commands used in the MC protocol communication function is shown below.

(a) PLC CPU

			Device	e code			
Classification	Dev	vice	ASCII code (Note-1)	Binary code	Device number range	(Default)	Remarks
Internal system	Special relay		SM	91h	000000 to 002047	Decimal	
device	Special register		SD	A9h	000000 to 002047	Decimal	
	Input		X *	9Ch	000000 to 001FFF	Hexadecimal	_
	Output		Y *	9Dh	000000 to 001FFF	Hexadecimal	
	Internal rela	V	M *	90h	000000 to 008191	Decimal	
	Latch relay		L*	92h	000000 to 008191	Decimal	
	Annunciato		F*	93h	000000 to 002047	Decimal	
	Edge relay		V *	94h	000000 to 002047	Decimal	
	Link relay		В*	A0h	000000 to 001FFF	Hexadecimal	
	Data registe	er	D*	A8h	000000 to 012287	Decimal	
	Link registe			B4h	000000 to 001FFF	Hexadecimal	
		Contact	TS	C1h	000000 10 00 11 1 1	. ioxaaooiiiiai	
		Coil	TC	C0h			
	Timer	Current value	TN	C2h	000000 to 002047	Decimal	When the device number range is changed, access is possible up to
Internal user		Contact	SS	C7h			the largest device number after the
device	Retentive	Coil	SC	C6h			change. • Local devices cannot be accessed.
	timer	Current value	SN	C8h	000000 to 002047	Decimal	• Local devices carriot be accessed.
	Counter	Contact	CS	C4h			
		Coil	СС	C3h	1		
		Current value	CN	C5h	000000 to 001023	Decimal	
	Link special relay		SB	A1h	000000 to 0007FF	Hexadecimal	
	Link special register		SW	B5h	000000 to 0007FF	Hexadecimal	
	Step relay		s*	98h	000000 to 008191	Decimal	
	Direct input		DX	A2h	000000 to 000FFF	Hexadecimal	Devices of DX/DY1000 or later are not
	Direct Output		DY	A3h	000000 to 000FFF	Hexadecimal	available. Use X/Y devices to access devices of DX/DY1000 or later.
Index register	Index regist	er	Ζ×	CCh	000000 to 000019	Decimal	
Fil	Fil		R*	AFh	000000 to 032767	Decimal	_
File register	File register		ZR	B0h	000000 to 3FD7FF	Hexadecimal	
Extended data register	Extended data register		D*	A8h	Binary: 000000 to 4184063 (4086k points maximum) ASCII: 000000 to 999999 (976.6k points maximum)	Decimal	If the number of points is set on the PLC file tab of PLC parameter, access is possible up to the largest device number after the setting. However, in the ASCII code communication, the number of points described on the left is the access limit.
Extended link register	Extended link register		W*	B4h	000000 to 3FD7FF (4086k points maximum)	Hexadecimal	If the number of points is set on the PLC file tab of PLC parameter, access is possible up to the largest device number after the setting.

(Note-1): When data is communicated in ASCII code, the second character " * " can be designated a blank space (code: 20H).

(b) Motion CPU

		Device	e code			
Classification	Device	ASCII code (Note-1)	Binary code	Device number range	(Default)	Remarks
Internal system	Special relay	SM	91h	000000 to 002255	Decimal	
device	Special register	SD	A9h	000000 to 002255	Decimal	_
	Input	X *	9Ch	000000 to 001FFF	Hexadecimal	Including actual input device PX.
	Output	Y *	9Dh	000000 to 001FFF	Hexadecimal	Including actual input device PY.
	Internal relay	M *	90h	000000 to 012287	Decimal	
Internal user	Annunciator	F*	93h	000000 to 002047	Decimal	
device	Link relay	В*	A0h	000000 to 001FFF	Hexadecimal	
	Data register	D*	A8h	000000 to 008191 (Note-2)	Decimal	_
	Link register	W *	B4h	000000 to 001FFF	Hexadecimal	
	Motion register	#*	E0h	000000 to 012287	Decimal	

(Note-1): When data is communicated in ASCII code, the second character " * " can be designated a blank space (code: 20H). (Note-2): The range of 000000 to 019823 is valid in the SV22 advanced synchronous control.

(4) Precautions

(a) Number of connected modules

In the connection with external devices using the MC protocol, the number of Motion CPUs set as "MELSOFT Connection" in the Open Setting on Built-in Ethernet Port Setting of Basic Setting can be connected simultaneously.

(b) Data communication frame

Table below shows the frames available in the communication function using the MC protocol with PERIPHERAL I/F.


Communication frame	Communication function using the MC protocol with PERIPHERAL I/F
4E frame	×
QnA-compatible 3E frame	0
A-compatible 1E frame	×

O: Available, x: Not available

(c) Access range

- Only Motion CPU connected by Ethernet can be accessed.
 Accessing a Motion CPU not connected by Ethernet results in an error.
- Accessing a Motion CPU on another station in CC-Link IE controller network, MELSECNET/H, Ethernet or CC-Link via a connected Motion CPU is not possible.
- (d) Precautions when UDP protocol is selected
 - 1) If a new request message is sent to the same UDP port while the port waits for a response message, the new request message is discarded.
 - Setting same host station port number to multiple UDP ports is regarded as one setting. When communicating with multiple external devices using the same host station port number, select TCP protocol.

(e) Response message receive processing Figure below shows an example of the response message receive processing on the external device side.

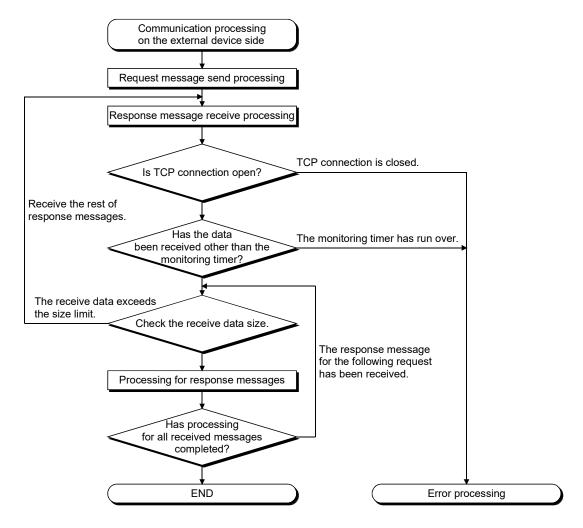

REMARK

Personal computers use the TCP socket functions internally for Ethernet communication.

These functions do not have boundary concept. Therefore, when data is sent by executing the "send" function once, the "recv" function needs to be executed once or more to receive the same data. (One execution of the "send" function does not correspond to one execution of the "recv" function.)

For this reason, receive processing described above is required on the external device side. If the "recv" function is used in blocking mode, data may be read by executing the function once.

(5) Error codes for communication using MC protocol

Table below shows the error codes, error descriptions, and corrective actions that will be sent from the Motion CPU to an external device when an error occurs during communication using the MC protocol.

No.	Error code (Hexadecimal)	Description	Corrective action
1	4000H to 4FFFH	Motion CPU detected error (Error that occurred in other than communication using the MC protocol)	Refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection) and take corrective action.
2	0055H	When the setting for online change is disabled on the Built-in Ethernet Port Setting of Basic Setting in MT Developer2, an external device requested online change to the Motion CPU.	When enabling online change, write data. Change the status of the Motion CPU to STOP and write data.
3	C050H	When the communication data code setting is set to ASCII code in the Built-in Ethernet Port Setting, ASCII code data that cannot be converted to binary code was received.	Set the communication data code to binary code and restart the Motion CPU for communication. Correct the send data on the external device side and resend the data.
4	C051H to C054H	The number of device points for reading/writing is outside the allowable range.	Correct the number of device points for reading/writing and resend the data to the Motion CPU.
5	C056H	The read/write request data exceeds the allowable address range.	Correct the start address or the number of device points for reading/writing, and resend the data to the Motion CPU. (Do not exceed the allowable address range.)
6	C058H	The request data length after the ASCII to binary conversion does not match the data size of the character area (a part of text data).	Correct the text data or the request data length of the header data, and resend the data to the Motion CPU.
7	C059H	 The command and/or subcommand are specified incorrectly. The command and/or subcommand not supported in the Motion CPU are specified. 	Check the request data. Use commands and/or subcommands supported in the Motion CPU.
8	C05BH	The Motion CPU cannot read/write data from/to the specified device.	Check the device for reading/writing data.
9	C05CH	The request data is incorrect. (ex. specifying data in units of bits for reading/writing of word devices)	Correct the request data (such as subcommand correction) and resend the data to the Motion CPU.
10	C05DH	Monitor registration is not performed.	Perform the monitor registration before monitor operation.
11	C05FH	The external device sent a request that cannot be executed in the Motion CPU.	Correct the network number, PC number, request destination module I/O number, and request destination module station number. Correct the read/write request data.
12	C060H	The request data is incorrect. (ex. incorrect specification of data for bit devices)	Correct the request data and resend the data to the Motion CPU. (ex. data correction)
13	C061H	The request data length does not match the data size of the character area (a part of text data)	Correct the text data or the request data length of the header data, and resend the data to the Motion CPU.
14	C070H	The device memory extension cannot be specified for the target station.	Read/Write data to the device memory without specifying the extension.
15	C0B5H	Data that cannot communicate in the Motion CPU is specified.	Check the request data. Stop the current request.

4.14 Mark Detection Function QDS


Any motion control data and all device data can be latched at the input timing of the mark detection signal. Also, data within a specific range can be latched by specifying the data detection range.

The following three modes are available for execution of mark detection.

(1) Continuous Detection mode

The latched data is always stored at mark detection.


Operation is the same as the high-speed reading function.

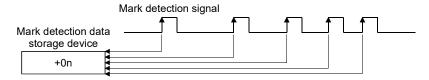

(2) Specified Number of Detection mode

The latched data from a specified number of detections is stored.


Example) Number of detections: 3

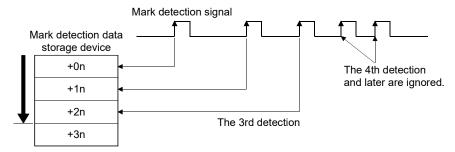

(3) Ring Buffer mode

The latched data is stored in a ring buffer for a specified number of detections. The latched data is always stored at mark detection.

Example) Number of detections: 4

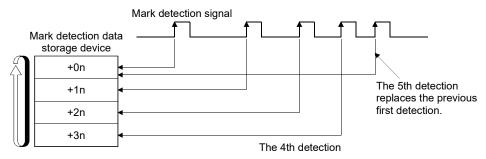

(Note): "n" in above figure is different depending on the data type storage device.

16-bit integer type : 132-bit integer type : 264-bit floating-point type: 4


4.14.1 Operations

Operations done at mark detection are shown below.


- Calculations for the mark detection data are estimated at leading edge/trailing edge
 of the mark detection signal.
 - However, when the Specified Number of Detection mode is set, the current mark detection is checked against the counter value for number of mark detections and then it is determined whether or not to latch the current detection data.
- When a mark detection data range is set, it is first confirmed whether the mark detection data is within the range or not. Data outside the range are not detected.
- The mark detection data is stored in the first device of the mark detection data storage area according to the mark detection mode, and then the number of mark detections counter is updated.

Operation examples for each mode are shown in the table below.

(1) Continuous Detection mode

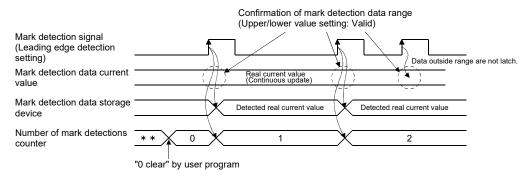

(2) Specified Number of Detection mode (Number of detections: 2)

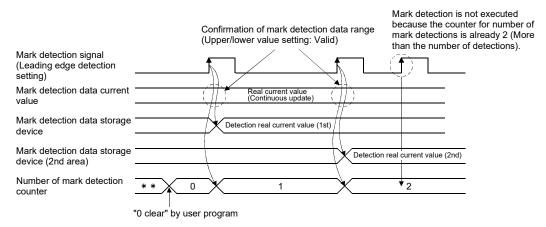

4.14.2 Mark detection setting

This section describes the mark detection setting items. Up to 32 mark detection settings can be registered.

No.		Item	Setting range	
1	Mark detection signa	input method (Note-1) Ver.	Response time priority method/Fixed cycle input method	
		Mark detection signal	Built-in interface in Motion CPU (DI1 to DI4)/Q172DLX (DOG)/Device	
		Device (Note-2)	Bit device (X, Y, M, B, SM, U□\G)	
2	Mark detection signal	Mark signal detection direction (Note-3)	Valid on leading edge/Valid on trailing edge	
		Q172DLX module No. (Note-4)	1 to 4	
		Q172DLX signal No. (Note-4)	1 to 8	
3	Mark detection signa	compensation time (Note-5)	-5000000 to 5000000[μs]/Word device (D, W, #, U□\G)	
		Mark detection data	Motion control data/Device	
		Axis No. (Note-6)	1 to 32	
		Set data (Note-6)	Refer to (3) of this section	
		Device (Note-2)	Word device (D, W, #, SD, U□\G)	
4	4 Mark detection data	Data type (Note-2)	16-bit integer type/32-bit integer type/64-bit floating-point type	
		Estimate calculation (Note-2)	Valid (Normal data)/Valid (Ring counter)/Invalid	
		41.4.0	16-bit integer type : K1 to K32767, H001 to H7FFF	
		Ring counter value (Note-2)	32-bit integer type : K1 to K2147483647, H00000001 to H7FFFFFF	
			64-bit floating-point type: K2.23E-308 to K1.79E+308	
5	Mark detection data	storage device	Word device (D, W, #, U□\G)	
		Upper value	Direct designation (K, H)/Word device (D, W, #, U□\G) 16-bit integer type : K-32768 to K32767, H0000 to HFFFF 32-bit integer type : K-2147483648 to K2147483647,	
6	Mark data range		H00000000 to HFFFFFFF	
		Lower value	64-bit floating-point type: K-1.79E+308 to K-2.23E-308, K0,	
			K2.23E-308 to K1.79E+308	
	7 Mark detection mode setting	Mark detection mode setting	Continuous detection mode/Specified No. of detection mode/Ring buffer mode/Device (Note-7)	
7		Number of detections	1 to 8192 (Specified number of detection mode/Ring buffer mode)	
		Device (Note-2)	Word device (D, W, #, U□\G)	
		Mark detection times counter	— ^(Note-8) (Continuous detection mode)/Word device (D, W, #, U□\G)	
8	Mark detection curre	nt value monitor device	— ^(Note-8) /Word device (D, W, #, U□\G)	
9	Mark detection signa	l status	— ^(Note-8) /Bit device (X, Y, M, B, U□\G)	

- (Note-1): Set only for setting 1. The mark detection signal input method set to the setting 1 is enabled with the mark detection setting of setting 2 to 32.
- (Note-2): When device is selected.
- (Note-3): Set the input signal detection direction of built-in interface in Motion CPU (DI) in the "CPU Setting" of system setting. For the input signal detection direction of Q172DLX (DOG/CHANGE), select "Q172DLX" of "Motion slot setting" and set the direction with detail setting.
- (Note-4): When Q172DLX (DOG) is selected.
- (Note-5): The mark detection signal compensation time cannot be set if "Invalid" is selected in the estimate calculation. (0[µs] is set.)
- (Note-6): When Motion control data is selected.
- (Note-7): When the setting value is outside the range of "-8192 to 8192", the mark detection is invalid.
- (Note-8): This setting can be omitted.

Ver.!): Refer to Section 1.5 for the software version that supports this function.

(1) Mark detection signal input method Ver.

Set the mark detection signal input method when "Device" is selected to the mark detection signal and the device (PX device) assigned to the input module is set. Set only for setting 1. The mark detection signal input method set to the setting 1 is enabled with the mark detection setting of setting 2 to 32.

Setting value	Description
Response time priority method (Note-1)	Inputs the most recent signal status.
Fixed cycle input method (Note-2)	Inputs the signal status every 0.444ms by fixed cycle processing. (When the operation cycle is 0.222ms, the signal status will be input every 0.222ms.)

(Note-1): The accuracy of the mark detection will improve, but the processing time will lengthen due to the increase in the number of communication attempts with the input module.

(Note-2): This may lead to improved processing time with no significant drop in accuracy.

POINT

Changing this setting will not affect operation when a setting other than "Device" is set to the mark detection signal or a device not assigned to an input module is set.

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(2) Mark detection signal

Set the input signal for mark detection.

- (a) Module input signal
 - 1) Built-in interface in Motion CPU

lament man de la		Module No.		Ciava al Nia	Detection	Signal detection direction
Input module	t module Signal		Q172DSCPU	Signal No.	accuracy [µs]	(Leading edge/Trailing edge)
Built-in interface in Motion CPU	DI	_		1 to 4	30	Set direction in the "CPU Setting" of system settings.

2) Q172DLX

- Install the Q172DLX to the main base to use Q172DLX (DOG/CHANGE). If the Q172DLX is installed to the extension base, the mark detection function cannot be used.
- The mark detection operation is executed at the DOG/CHANGE signal input with the count method home position return or speed-position switching control.
 - Set the device in the "mark detection mode setting" and setting value outside "-8192 to 8192" to disable mark detection.
- The signal that does not set the axis No. in the system setting can be also used as the mark detection signal.

Input	0:	Modu	le No.	O: I N -	Detection or compare [co.]	Signal detection direction
module	Signal	Q173DSCPU	Q172DSCPU	Signal No.	Detection accuracy [µs]	(Leading edge/Trailing edge)
Q172DLX	DOG/CHANGE	1 to 4	1 to 2	1 to 8	• I/O response time 0.4[ms]: 69 • I/O response time 0.6[ms]: 133 • I/O response time 1.0[ms]: 261	Select "Q172DLX" of "Motion slot setting" in the system setting and set the direction with detail setting.

(b) Bit device

Bit device	Setting range	Detection accuracy [µs]	Signal detection direction (Leading edge/Trailing edge)
X(PX)	0 to 1FFF (Note-1)		
Y(PY)	0 to 1FFF		
М	0 to 8191 ^(Note-2)	Operation cycle 222[µs]: 222	Set direction in the mark detection signal detection
В	0 to 1FFF	• Operation cycle 444[µs] or more : 444	direction.
SM	0 to 1999		
U□\G	10000.0 to (10000+p-1).F (Note-3)		

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): The range of M0 to M12287 is valid in the SV22 advanced synchronous control.

(Note-3): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(c) Mark detection signal detection direction

Set whether to execute the mark detection to enable on leading edge (OFF to ON) or enable on trailing edge (ON to OFF) of input signal.

Set the input signal detection direction in the System Settings as shown below.

- For built-in interface in Motion CPU (DI)
 Set direction in the "CPU Setting" of system settings.
- For Q172DLX (DOG/CHANGE)
 Select "Q172DLX" of "Motion slot setting" in the system setting and set the direction with detail setting.

Input signal detection direction	Remarks
Valid on loading adge	The mark detection is executed when the mark
Valid on leading edge	detection signal transitions from OFF to ON.
Valid on trailing adda	The mark detection is executed when the mark
Valid on trailing edge	detection signal transitions from ON to OFF.

(3) Mark detection signal compensation time

Compensate the output timing of the mark detection signal.

Set it to compensate for sensor input delays, etc. (Set a positive value to compensate for a delay.)

However, the mark detection signal compensation time cannot be set if "Invalid" is selected in the estimate calculation. (0[µs] is set.)

The timing is compensated as "-5000000" when the compensation time is set to less than -5000000, and it is compensated as "5000000" when it is set to more than 5000000.

(a) Direct designation

Setting range
-5000000 to 5000000 [µs]

(b) Indirect designation

	a	
Word device	Setting range ^(Note-1)	Remarks
D	0 to 8191 ^(Note-2)	
W	0 to 1FFF	The setting value is input for
#	0 to 9215	every operation cycle.
U□\G	10000 to (10000+p-1) (Note-3)	

(Note-1): Set an even number as the first device.

(Note-2): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.

(Note-3): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

When using the "real current value" in mark detection data, set the mark detection signal compensation time referring to the following chart.

Operation cycle setting [ms]	Mark detection signal compensation time [µs]
0.22	-222+α
0.44	-444+α
0.88	-888+α
1.77	-1777+α
3.55	-3555+α
7.11	-7111+α

 $[\]alpha\text{:}$ Sensor input delay time.

(4) Mark detection data

Set the data to latch at mark detection.

(a) Motion control data

Settable Motion control data is shown in the table below.

Itam	Unit	Data tuna	Axis No. se	etting range	Remarks
Item	Unit	Data type	Q173DSCPU	Q172DSCPU	Remarks
Feed current value	10 ⁻¹ [μm],				
Actual current value	10 ⁻⁵ [inch],				
Motor actual current value	10 ⁻⁵ [degree], [pulse]	32-bit integer type			
Servo command value					
Position feedback (Note-1)	[pulse]		1 to 32	1 to 16	_
Absolute encoder one-revolution position (Note-1)					
Absolute encoder multiple revolution position		16-bit integer type			
Deviation counter value	[pulse]				
Servo command speed	[pulse/s]	32-bit integer type			
Motor speed	0.01[r/min]				
Motor current value	0.1[%]	16-bit integer type			
Synchronous encoder current value			1 to 12	(Note-2)	Valid in SV22 only
Feed current value (V)					
Cam axis current value within one-revolution	[pulse]				Valid in SV22
Cam axis current value within one-revolution (Actual) (Note-3)			1 to 32	1 to 16	virtual mode only
Command generation axis feed current value		32-bit integer type			
Command generation axis cumulative current value	Control unit				Valid in SV22
Command generation axis current value per cycle					advanced
Synchronous encoder axis current value	Encoder axis		1 to 12 ^(Note-4)		synchronous
Synchronous encoder axis current value per cycle	unit		1 to 12	(control only
Cam axis current value per cycle	Cam axis		4.4- 22	1 1- 10	Ver.!
Cam axis current value per cycle (Actual) (Note-5)	cycle unit		1 to 32	1 to 16	

(Note-1): For MR-J5(W)-□B, the value displayed is the value (command unit) multiplied by the reciprocal of the electronic gear ratio of the servo amplifier. By configuring the electronic gear settings to the servo amplifier's "Electronic gear numerator (PA06)" and "Electronic gear denominator (PA07)" servo parameters, the data becomes the same data as for MR-J4(W)-□B.

(Note-2): Set the synchronous encoder No. (P1 to 12) allocated in the system setting.

(Note-3): Current value within one cam shaft revolution takes into consideration the delay of the servo amplifier.

(Note-4): Set the axis No. (axis 1 to 12) of the synchronous encoder axis parameter set in the synchronous control parameter.

(Note-5): Current value per cycle takes into consideration the delay of the servo amplifier.

Ver.!: Refer to Section 1.5 for the software version that supports this function.

Since the delay time inherent to the system exists in the current value data of the synchronous encoder axis, there may be a difference between the actual current value and the current value of mark detection. When the "synchronous encoder current value", "synchronous encoder axis current value" or "synchronous encoder axis current value per cycle" is used in the mark detection data, the mark detection signal compensation time shown below can be set to compensate the delay. However, when the "phase compensation advance time" is set in the synchronous control parameter to compensate the delay of the synchronous encoder, setting of the mark detection signal compensation time is not necessary.

Synchronous encoder type	Mark detection signal compensation time [µs]
Built-in interface in Motion CPU	0
Incremental synchronous encoder	0
MR-HENC	-232
Q171ENC-W8	-276

(b) Device

1) Word device data

Set word device as mark detection data.

Word device	Setting range	Remarks
D	0 to 8191 ^(Note-1)	
W	0 to 1FFF	
#	0 to 9215	_
SD	0 to 1999	
U□\G	10000 to (10000+p-1) (Note-2)	

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-2): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.

2) Data type

Set the data type in word device data setting.

Data type	Remarks	
16-bit integer type	_	
32-bit integer type		
64-bit floating-point type	Set the device No. as an even No.	

3) Estimate calculation


Set the estimate calculation to "Valid/Invalid" in the word device data setting.

Estimate calculation		Ring counter value		
Normal data				
		16-bit integer type	K1 to K32767, H0001 to H7FFF	
Valid	Valid Ring counter	g counter 32-bit integer type	K1 to K2147483647,	
			H00000001 to H7FFFFFF	
		64-bit floating-point type	K2.23E-308 to K1.79E+308	
Invalid			_	


a) Estimate calculation: Valid

Calculation for word device data in the operation cycle is estimated. The latch data is the value estimated at the timing in which the mark detection signal is input. The value is calculated as shown in the figure below whether the word device data is normal data or a ring counter. Set the ring counter value for the ring counter.

· Valid (Normal data)

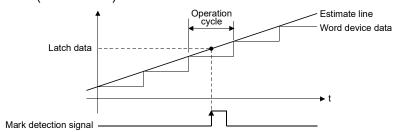

· Valid (Ring counter)

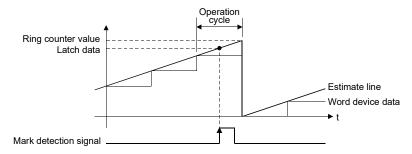


POINT

If "Valid (Normal data)" is selected for word device data updated as a ring counter, the latch data may not be estimated correctly.

b) Estimate calculation: Invalid

Calculation for word device data in operation cycle is not estimated. The latch data is the word device data at the timing in which the mark detection signal is input. The detection accuracy is the operation cycle regardless of the mark detection signal type.

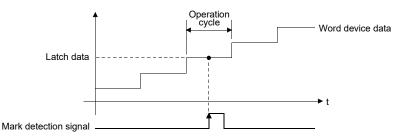

(5) Mark detection data storage device

Set the mark detection data storage device (first device to use in the "Specified Number of Detections mode" or "Ring Buffer mode").

When using the "Specified Number of Detections mode" or "Ring Buffer mode", reserve the device area to accommodate the number of detections.

Word device	Setting range (Note-1)	Remarks
D	0 to 8191 ^(Note-2)	
W	0 to 1FFF	
#	0 to 9215 ^(Note-3)	_
U□\G	10000 to (10000+p-1) (Note-4)	

(Note-1): Set an even numbered device in the 32-bit integer type/64-bit floating-point type.

(Note-2): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.


(Note-3): The data can be stored in #9216 to #12287 in the "Specified Number of Detections mode" or "Ring Buffer mode".

(Note-4): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(6) Mark detection data range


When the data at mark detection is within the range, they are stored in the mark detection data storage device and the number of mark detections counter is incremented by 1. When outside of range, mark detection is not processed.

Upper limit value > Lower limit value
 The mark detection is executed when the mark detection data is "greater or equal to the lower limit value and less than or equal to the upper limit value".

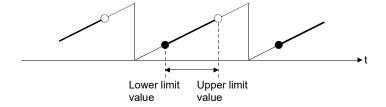

• Upper limit value < Lower limit value

The mark detection is executed when the mark detection data is "greater or equal to the lower limit value or less than or equal to the upper limit value".

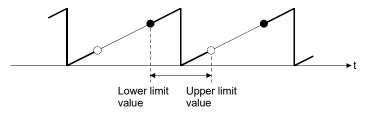

Upper limit value = Lower limit value

The mark detection range is not checked. The mark detection is always executed.

(a) Direct designation

Data type	Setting range	
16-bit integer type	K-32768 to K32767, H0000 to HFFFF	
32-bit integer type	K-2147483648 to K2147483647, H00000000 to HFFFFFFF	
64-bit floating-point type	K-1.79E+308 to K-2.23E-308, K0, K2.23E-308 to K1.79E+308	

(b) Indirect designation

Word device	Setting range (Note-1)	Remarks
D	0 to 8191 ^(Note-2)	
W	0 to 1FFF	The setting value is input for every
#	0 to 9215	operation cycle.
U□\G	10000 to (10000+p-1) (Note-3)	

(Note-1): Set an even numbered device in the 32-bit integer type/64-bit floating-point type.

(Note-2): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.

(Note-3): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(7) Mark detection mode setting

Set the data storage method of mark detection.

(a) Direct designation

Mode	Number of detections	Operation for mark detection	Mark detection data storage method
Continuous detection mode	_	Always	The data is updated in the mark detection data storage device.
Specified number of detection mode	1 to 8192	Number of detections (If the number of mark detections counter is the number of detections or more, the mark detection is not executed.)	The data is stored in the following device area.
Ring buffer mode	1 to 8192	Always (The mark detection data storage device is used as a ring buffer for the number of detections.)	"Mark detection data storage device + Number of mark detections counter × Mark detection data size"

(b) Indirect designation

Word device	Setting range	Remarks
D	0 to 8191 ^(Note-1)	Used as 1 word device.
W	0 to 1FFF	Set the mark detection mode using the following setting values.
#	0 to 9215	0 : Continuous detection mode
U□\G	10000 to (10000+p-1) ^(Note-2)	1 to 8192 : Specified number of detection mode (Set the number of detections.) -8192 to -1 : Ring buffer mode (Set the value that make the number of buffers into negative value.) Others : Mark detection : Invalid • The setting value is input for every operation cycle.

(Note-1): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(8) Number of mark detections counter

The counter value is incremented by 1 at mark detection. Preset the initial value (0, etc.) in the user program to execute the mark detection in "Specified Number of Detections mode" or "Ring Buffer mode".

This setting can be omitted when the continuous detection mode is selected.

Word device	Setting range	Remarks
D	0 to 8191 ^(Note-1)	Used as 1 word device.
W	0 to 1FFF	• The counter is updated as follows after the mark detection data storage.
#	0 to 9215	Continuous detection mode: 0 to 65535
		The counter value is incremented by 1.
	10000 to (10000+p-1) ^(Note-2)	It returns to 0 when the counter value exceeds 65535.
		Specified number of detection mode: 0 to (number of detections)
11=10		The counter value is incremented by 1.
U□\G		Ring buffer mode: 0 to (number of buffers -1)
		The counter value is incremented by 1.
		It returns to 0 when the counter value reaches the set number of
		buffers or more.

(Note-1): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(9) Mark detection current value monitor device

The current value of mark detection data can be monitored.

This setting can be omitted.

Word device	Setting range (Note-1)	Remarks
D	0 to 8191 ^(Note-2)	
W	0 to 1FFF	The monitor value is updated for
#	0 to 9215	every operation cycle.
U□\G	10000 to (10000+p-1) (Note-3)	

⁽Note-1): Set an even number as device in the 32-bit integer type/64-bit floating-point type.

(10) Mark detection signal status

The ON/OFF status of mark detection signal can be monitored. This setting can be omitted.

Bit device	Setting range	Remarks
Х	0 to 1FFF (Note-1)	
Υ	0 to 1FFF	
М	0 to 8191	The ON/OFF status is reflected for
В	0 to 1FFF	every operation cycle.
U□\G	10000.0 to (10000+p-1).F (Note-2)	

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

 $(Note-2): Set \ an \ even \ number \ as \ device \ in \ the \ 32-bit \ integer \ type/64-bit \ floating-point \ type.$

⁽Note-2): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.


⁽Note-3): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

4.15 High-speed Input Request Signal Setting (SV22 advanced synchronous control only)

Set the high-speed input request signal assignment.

The high-speed input request signal is the signal to execute the high-accuracy control of the clutch ON/OFF operation of synchronous control or the counter enable/counter disable/current value change operation of the synchronous encoder axis.

The example of current value change of the synchronous encoder axis using Q173DPX (TREN1) as the high-speed input request signal is shown below.

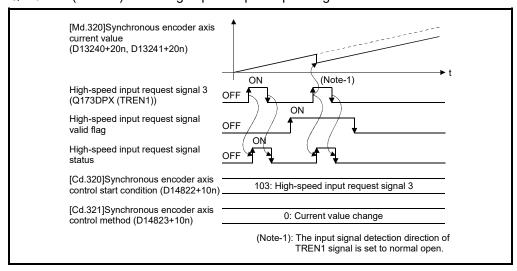

(1) High-speed input request signal setting

The High-speed input request signal setting data are shown below. Up to 32 signals can be registered.

No.	Item	Setting range		
1	High-speed input request signal (Note-1)	Built-in interface in Motion CPU (DI)/Q172DLX (DOG/CHANGE)/Q172DEX (TREN)/Q173DPX (TREN)		
2	High-speed input request signal compensation time	-5000000 to 5000000[μs]/Word device (D, W, #, U□\G)		
3	High-speed input request signal valid flag	— ^(Note-2) /Bit device (X, Y, M, B, U□\G)		
4	High-speed input request signal status	— ^(Note-2) /Bit device (X, Y, M, B, U□\G)		

(Note-1): Set the input signal detection direction of built-in interface in Motion CPU (DI) in the "CPU Setting" of system setting.

For the input signal detection direction of Q172DLX (DOG/CHANGE), select "Q172DLX" of "Motion slot setting" and set the direction with detail setting.

For the input signal detection direction of Q172DEX (TREN), select "Q172DEX" of "Motion slot setting" and set the direction with detail setting.

For the input signal detection direction of Q172DPX (TREN), set the direction with dip switch of Q173DPX.

(Note-2): This setting can be omitted.

Ver.!): Refer to Section 1.5 for the software version that supports this function.

(a) High-speed input request signalSet the input signal for high-speed input request signal.

1) Built-in interface in Motion CPU

la mada a a dada	0:	Module No.		O:	Detection	Signal detection direction
Input module	Signal	Q173DSCPU	Q172DSCPU	Signal No.	accuracy [µs]	(Leading edge/Trailing edge)
Built-in interface in Motion CPU	DI	_		1 to 4	30	Set direction in the "CPU Setting" of system settings.

2) Q172DLX/Q172DEX/Q173DPX

Install the Q172DLX to the main base to use Q172DLX (DOG/CHANGE)/Q172DEX (TREN)/Q173DPX (TREN). If the Q172DLX/Q172DEX/Q173DPX is installed to the extension base, the high-speed input request signal cannot be used.

Input	Signal	Module No.		Signal No.	Detection accuracy [µs]	Signal detection direction
module	Signal	Q173DSCPU	Q172DSCPU	Signal No.	Detection accuracy [µs]	(Leading edge/Trailing edge)
Q172DLX	DOG/CHANGE	1 to 4	1 to 2	1 to 8		Select "Q172DLX" of "Motion slot setting" in the system setting and set the direction with detail setting.
Q172DEX	TREN	1 to 6		1 to 2	I/O response time 0.4[ms]: 69I/O response time 0.6[ms]: 133I/O response time 1.0[ms]: 261	Select "Q172DEX" of "Motion slot setting" in the system setting and set the direction with detail setting.
Q173DPX	TREN	1 to 4		1 to 3		Set the direction with dip switch of Q173DPX.

(b) High-speed input request signal compensation time

Compensate the input timing of the high-speed input request signal. Set it to compensate for sensor input delays, etc. Set a positive value to compensate for a delay, and set a negative value to compensate for an advance.

However, high-speed input request status outputs the status of the signal with no relation to the set value.

The timing is compensated as "-5000000" when the compensation time is set to less than -5000000, and it is compensated as "5000000" when it is set to more than 5000000.

1) Direct designation

Setting range
-5000000 to 5000000 [µs]

2) Indirect designation

Word device	Setting range (Note-1)	Remarks
D	0 to 8191	
W	0 to 1FFF	The setting value is input for
#	0 to 9215	every operation cycle.
U□\G	10000 to (10000+p-1) (Note-2)	

(Note-1): Set an even number as the first device.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(c) High-speed input request signal valid flag

The high-speed input request signal is valid only when the flag is ON.

The high-speed input request signal is invalid when the flag is OFF.

This setting can be omitted.

When the setting is omitted, the high-speed input request signal is valid at all times.

Bit device	Setting range	Remarks
Х	0 to 1FFF (Note-1)	
Υ	0 to 1FFF	ON/OFF command is input when the
М	0 to 8191	high-speed input request signal is
В	0 to 1FFF	detected.
U□\G	10000.0 to (10000+p-1).F (Note-2)	

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(d) High-speed input request signal status

The ON/OFF status of high-speed input request signal can be monitored. ON/OFF status can be monitored regardless of the status of the high-speed input request signal valid flag.

This setting can be omitted.

Bit device	Setting range	Remarks
Х	0 to 1FFF (Note-1)	
Υ	0 to 1FFF	TI 01/0FF 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
М	0 to 8191	The ON/OFF status is reflected for
В	0 to 1FFF	every operation cycle.
U□\G	10000.0 to (10000+p-1).F (Note-2)	

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

POINT

When signal is inputted in a state where the detection of high-speed input request signal is unnecessary ([St.380] Synchronous control (M10880+n) is turned OFF, or [Rq.320] Synchronous encoder axis control request (M11601+4n) is turned OFF), the high-speed input request signal valid flag turns OFF. Turn ON when the detection of high-speed input request signal is necessary.

4.16 Driver Communication Function QDS (Ver.)

This function uses the "Master-slave operation function" of servo amplifier. The Motion CPU controls the master axis and the slave axis is controlled by data communication (driver communication) between servo amplifiers without going through the Motion CPU.

This function is used for the case such as to operate the ball screw controlled by multiple axes via the belt.

There are restrictions in the function that can be used by the version of the servo amplifier.

Refer to the "Servo amplifier Instruction Manual" for details.

The following shows the number of settable axes for the master axis and slave axis.

	Number of	Number of	Combination	of number of settable a	xes	
Model name	SSCNETII(/H)	control	Maste	er axis		Remark
	lines	axes	SSCNETIII (Note-1)	SSCNETII/H (Note-2)	Slave axis	
Q173DSCPU	2 lines	32 axes	1 axis to 8 axes	1 axis to 16 axes		The axes other than the master
Q172DSCPU	1 line	16 axes	1 axis to 4 axes	1 axis to 8 axes	_	axis and slave axis can be used as normal axis.

-: No restriction

(Note-1): Up to 4 axes per line are settable in the master axis. (Note-2): Up to 8 axes per line are settable in the master axis.

POINT

Driver communication function is only valid in MR-J5-□B, MR-J4-□B, and MR-J3-□B. Multi-axis servo amplifiers (MR-J5W-□B, MR-J4W-□B, and MR-J3W-□B), MR-J4-□B used in MR-J3-□B compatibility mode, MR-J4-□B-LL, and MR-JE-□B cannot be used.

In addition, when using MR-J5-□B, make sure that the master axes and the slave axes used are both MR-J5
B. Using different servo amplifier series together will cause a major error (error code: 1366) to occur.


Ver.!: Refer to Section 1.5 for the software version that supports this function.

4.16.1 Control details

Set the master axis and slave axis in the servo parameter.

Execute each control of Motion CPU in the master axis. (However, be sure to execute the servo ON/OFF of slave axis, and error reset at servo error occurrence in the slave axis.) The servo amplifier set as master axis receives command (positioning command, speed command, torque command) from the Motion CPU, and sends the control data to the servo amplifier set as slave axis by driver communication between servo amplifiers.

The servo amplifier set as the slave axis is controlled by the control data transmitted from the master axis by driver communication between servo amplifiers.

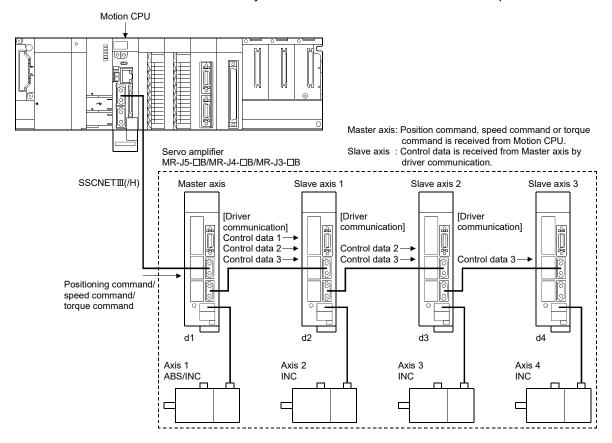

POINT

When a servo amplifier fails due to a SSCNETII(/H) communication failure, communication with the axes after the failed axis cannot be executed. For this reason, be sure to connect the master axis to the position closest to the Motion CPU.

4.16.2 Precautions during control

∴ CAUTION

 During operation by driver communication function, the positioning control or JOG operation, etc. by servo program is not interrupted even if a servo error occurs in the slave axis. Be sure to stop the master axis by user program.

(1) Servo amplifier

- (a) For the axes where driver communication is executed, be sure to use a servo amplifier that supports driver communication.
- (b) Driver communication function is only valid in MR-J5-□B, MR-J4-□B, and MR-J3-□B. Multi-axis servo amplifiers (MR-J5W-□B, MR-J4W-□B, and MR-J3W-□B), MR-J4-□B used in MR-J3-□B compatibility mode, MR-J4-□B-LL, and MR-JE-□B cannot be used. In addition, when using MR-J5-□B, make sure that the master axes and the slave axes used are both MR-J5-□B. Using different servo amplifier series together will cause a major error (error code: 1366) to occur.
- (c) Be sure to connect the master CPU and slave CPU in the same SSCNET**I**(/H) line.
- (d) The master CPU and slave CPU combination is set in the servo parameters. After writing the servo parameters, turn ON again or reset the Multiple CPU system power supply so that the parameters become valid.
- (e) The differences between SSCNET**I** and SSCNET**I**/H communication type in driver communication function are shown below.

	Communic	cation type
	SSCNETⅢ	SSCNETII/H
Communication with servo amplifiers after Multiple CPU system power supply ON.	Servo amplifiers cannot be operated until connection with all axes set by system setting is confirmed.	Servo amplifier cannot be operated until connection with all axes set to driver communication is confirmed. Normal axes (axes not set to driver communication) can also be connected after the network is established.
Connect/disconnect with servo amplifier	Only the first axis of the SSCNET line (servo amplifier connected directly to the Motion CPU) can connect/disconnect. Servo amplifiers other than the first axis can be disconnected but cannot be connected.	Only the first axis of the SSCNET line (servo amplifier connected directly to the Motion CPU) can connect/disconnect. Only normal axes (axes not set to driver communication) other than the first axis can be connected when they are disconnected. However, when axes set to driver communication are disconnected, they cannot communicate with servo amplifiers that were connected after disconnecting. (The servo amplifier's LED display remains "AA")

(f) If all axes set to driver communication are not detected at the start of communication with the servo amplifier, all axes connected to that line, including normal axes cannot be operated. (The servo amplifier's LED display remains "Ab").

Check with the following SSCNET**I** searching flags (SM532, SM533) if a SSCNET line can be operated.

When all normal axes and axes set to driver communication are connected, the SSCNETII searching flags (SM532, SM533) turn OFF.

Device No.	Name	Details	Set by
SM532	SSCNETII searching flag (Line 1)	Turns ON when searching axes that have been set by system setting in line 1 or line 2. Turns OFF when all axes that have	ø
SM533	SSCNETII searching flag (Line 2)	been set by system setting in line 1 or line 2 have been searched. OFF: Search complete ON: Searching	(Change status)

(2) Positioning dedicated device used for positioning control of slave axis

In the slave axis, only the following positioning dedicated devices are valid. Do not use devices other than the following.

- (a) Axis status
 - Zero pass (M2406+20n) (Note-1)
 - Servo error detection (M2408+20n)
 - Servo ready (M2415+20n)

(Note-1): Because the slave axis cannot execute home position return, it does not use this in control.

- (b) Axis command signal
 - Servo error reset command (M3208+20n)
 - · Servo OFF command (M3215+20n)
- (c) Axis monitor device
 - Servo error code (D8+20n)
 - Torque limit value (D14+20n)
- (d) Control change register

JOG speed setting register (D640+2n, D641+2n) that apply to the slave axis become invalid.

JOG speed setting register (D640+2n, D641+2n) in virtual mode become valid for the virtual servo.

(e) Common device

The following common devices that apply to the slave axis cannot be used. Do not use an interlock.

- Start accept flag (M2001 to M2032)
- Speed change accepting flag (M2061 to M2092)
- Automatic decelerating flag (M2128 to M2159)
- Speed change "0" accepting flag (M2240 to M2271)
- Control loop monitor status (M2272 to M2303)

(3) Current position management

- (a) Set "0: Used in incremental system" in " Absolute position detection system (PA03)" of servo parameter for slave axis.
- (b) Because the slave axis is in torque control and operates by input from the master axis, current feed value and deviation counter are not updated. However, the real current value is updated with a value within motor shaft 32 bit operation range (pulse unit). (During servo ON, the current feed value is not a value that reflects the motor movement amount. If servo is turned OFF, the current feed value is a value that reflects the motor movement amount. The deviation counter is always 0.)
- (c) The home position return request (M2409+20n) of slave axis is always ON but has no influence on the control of slave axis.
- (d) During slave operation, the following slave axis external signals, and parameters are invalid.
 - Upper stroke limit signal (FLS)
 - Lower stroke limit signal (RLS)
 - Stop signal (STOP)
 - Upper/lower stroke limit value of fixed parameter
- (e) Do not operate the slave axis by a method other than driver communication with the master axis. If operated by a method other than driver communication, commands to the servo amplifier become invalid and current feed value and other current position management cannot be guaranteed.

(4) Servo program

Do not set the slave axis to the start axis of the servo program.

When slave axis is started, the position commands to the servo amplifier become invalid.

(5) Mechanical system program

- (a) Do not set the slave axis to the output modules of the mechanical system program or the real mode axis. When the slave axis is set to output modules of the mechanical system program or the real mode axis, the position commands to the servo amplifier become invalid.
- (b) If a servo error occurs in the slave axis during operation by driver communication function, the "Error time operation mode" which was set in the mechanical system program does not apply. Measures at an error occurrence should be executed in the user program.

(6) Advanced synchronous control

- (a) The master axis can be set to the servo input axis, or the output axis.
- (b) When the slave axis is set to the servo input axis, set [Pr.300] Servo input axis type to "2: Real current value", or "4: Feedback value".
 When set to anything else, the slave axis does not operate as input axis.
- (c) Do not set the slave axis to output axis. When the slave axis is set to output axis, the position commands to the servo amplifier become invalid.

(7) Motion dedicated PLC instruction

Do not execute the following Motion dedicated PLC instructions for slave axis. When executed they become invalid.

- D(P).SVST (Start request of the specified servo program)
- D(P).CHGV (Speed change request of the specified axis)

(8) Motion SFC program

Do not execute the following instructions for slave axis. When executed they become invalid.

- CHGV (Speed change request)
- CHGP (Target position change request)

(9) Control mode of master axis

The control mode of the master axis can switch between position control mode, speed control mode, and torque control mode. For the master axis, when a switch to continuous operation to torque control mode is executed, there is a minor error (error code: 155), and the control mode does not switch.

(10) Control mode of slave axis

- (a) Because the slave axis is always controlled by torque mode, the control mode (b2, b3) of servo status1 (#8010+20n) is in torque control mode ([0, 1]).
- (b) Do not operate slave axis by speed-torque control. For the slave axis, when a control mode switch is executed, or is operated by speed-torque control, the speed-torque control commands become invalid.

4.16.3 Servo parameter

Set the following parameters for the axes that execute the master-slave operation. (Refer to the "Servo amplifier Instruction Manual" for details.)

No. Item		Setting details	Setting range			
NO.	пеш	Setting details	MR-J5-□B	MR-J4-□B	MR-J3-□B	
PA04	Function selection A-1	Set the forced stop input and forced stop deceleration function. (Note): Set "0: Forced stop deceleration function disabled" for forced stop deceleration function selection.	00000000h to 00002100h	0000h to 2100h	0000h to 2100h	
PD15	Driver communication setting	Set the master axis and slave axis.	00000000h to 00000011h	0000h to 0011h	0000h to 0011h	
PD16	Driver communication setting Master transmit data selection 1	Set the transmitted data at	00000000h to 0000FFFFh	0000h to FFFFh	0000h to FFFFh	
PD17	Driver communication setting Master transmit data selection 2	master axis setting.	00000000h to 0000FFFFh	0000h to FFFFh	0000h to FFFFh	
PD20	Driver communication setting Master axis No. selection 1 for slave	Set the axis No. (d1 to d16) of master axis at slave axis setting.	0 to 32	0 to 32	0 to 16	
PD30	Master-slave operation - Torque command coefficient on slave	Set the coefficient to reflect the internal torque command with the torque command value from the master axis.	0 to 500	0 to 500	0000h to 01FFh	
PD31	Master-slave operation - Speed limit coefficient on slave	Set the coefficient to reflect the internal speed limit command with the speed limit command value from the master axis.	0 to 500	0 to 500	0000h to 01FFh	
PD32	Master-slave operation - Speed limit adjusted value on slave	Set the lowest value of the internal speed limit.	0 to 32767	0 to 32767	0000h to 7FFFh	

POINT

After writing the servo parameters to the Motion CPU, turn ON again or reset the Multiple CPU system power supply so that the parameters become valid.

4.17 Intelligent Function Modules Controlled by Motion CPU

The Motion CPU can be used as the control CPU of intelligent function modules (excluding some modules).

Up to 4 intelligent function modules in total can be used.

The intelligent function modules that can be controlled by the Motion CPU are shown in Table 4.1.

Table 4.1 Intelligent function modules controlled by Motion CPU list

		Ni. walaan af	Number of us	able modules	
Module name	Model name	Number of points	Q173DSCPU/	Q173DCPU(-S1)/	Remark
		poirits	Q172DSCPU	Q172DCPU(-S1)	
	Q68ADV				
	Q62AD-DGH				
Analogue input	Q66AD-DG				
module	Q68ADI				
module	Q64AD				
	Q64AD-GH			Total 4 modules	
	Q68AD-G			(256 points or less)	
	Q68DAVN			(200 points of less)	
	Q68DAIN	16 points			
Analogue output	Q62DAN	,			
module	Q62DA-FG	,			
	Q64DAN				
	Q66DA-G				
Analogue input/output module	Q64AD2DA				
	QD62D		Total 4 modules		Cannot use coincidence detection interrupt function.
High-speed counter module 🚾	QD65PD2		(256 points or less (Note-1))		Cannot use coincidence detection interrupt function and periodic interrupt function.
	QD75P1				
	QD75P2				
	QD75P4				
	QD75D1	,			
Positioning module	QD75D2			_	
Ver.	QD75D4	20			
	QD75MH1	32 points			
	QD75MH2				
	QD75MH4				
Simple Motion module	QD77MS2				
	QD77MS4				
	QD77MS16	1			
Control unit of	UQ1-01				Manufactured by Optex FA Co., LTD.
displacement sensor	UQ1-02				Cannot use dedicated setting software.


(Note-1): Number of I/O points is total of "Built-in interface in Motion CPU (Input 4 points) + I/O module + intelligent function module".

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(1) Setting method

Select "General", "Analog input", or "Analog output" in the Motion slot setting of intelligent function module and set the detail setting.

Refer to the help of MT Developer2 for details of the operation procedures.

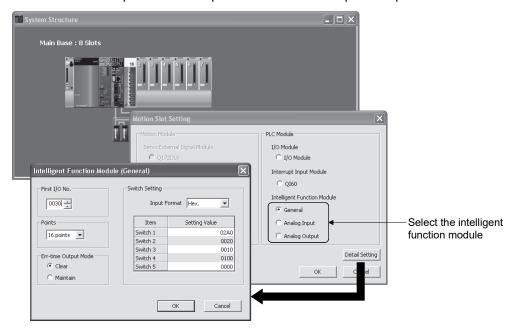

POINT

- (1) Modules that can be used as a Motion CPU (Q172DLX, Q173DPX, Q172DEX, Q160 etc.) cannot be set as an intelligent function module. When these are set as intelligent function module, there is a system setting error.
- (2) The valid/invalid of "Error time output mode" settings differ for each intelligent function module. Refer to the manual of each intelligent function module for details.

(2) Access to the intelligent function module

Use the TO and FROM instructions from Motion SFC programs to access the buffer memory of the intelligent function modules.

Also, you can access the I/O signal of the intelligent function module in the first I/O No. set in the system setting.

POINT

When reading or writing 2 words of data or more using the FROM instruction or TO instruction, if the start address of the buffer memory is set to an even number, data will be read/written in units of 2 words.

(3) Usage example

An example using Q64AD2DA is shown below.

(a) Detail setting

Setting item		Setting details
First I/O No.		0030
Points		16 points
	Input format	Hexadecimal
	Switch 1	02A0H (CH1 to CH4: Input range setting)
Consider to a setting of	Switch 2	0020H (CH5, CH6: Output range setting)
Switch setting	Switch 3	0010H (CH5, CH6: Analog output HOLD/CLEAR function)
	Switch 4	0100H (High resolution mode setting)
	Switch 5	0000H (Fixed at 0)
Error time output mode		Clear

(b) Motion SFC program

PX30*!PY39*PX39 //Unit ready and operating condition setting request OFF, and operating condition setting complete ON?

//Initial setting program TO H30,0,#0,1 //Enables A/D conversion of CH1 (Write to buffer memory 0) TO H30,200,#0,1 //Enables A/D conversion of CH2 (Write to buffer memory 200) #0=2 //Sets average processing of CH2 #1=50 //Sets average processing of CH2 TO H30,201,#0,2 //Write to buffer memory 201 to 202 #0=2 #1=50 #0=0 //Sets A/D conversion scaling function of CH2 #1=1000 //Sets A/D conversion scaling function of CH2 #2=5000 //Sets A/D conversion scaling function of CH2 TO H30,210,#0,3 //Write to buffer memory 210 to212 #0=0 #1=3 //Enables A/D conversion of CH3 //Sets average processing of CH3 #2=10 //Sets average processing of CH3
TO H30,400,#0,3 //Write to buffer memory 400 to 402 //Defaults input signal error detection of CH3 #1=100 //Defaults input signal error detection of CH3 TO H30,420,#0,2 //Write to buffer memory 420 to 421 #0=0 TO H30,800,#0,1 //Enables D/A conversion of CH5 (Write to buffer memory 800)
TO H30,1000,#0,1 //Enables D/A conversion of CH6 (Write to buffer memory 1000) #0=0 //Sets D/A conversion scaling function of CH6 #1=1000 //Sets D/A conversion scaling function of CH6 #2=5000 //Sets D/A conversion scaling function of CH6 TO H30,1010,#0,3 //Write to buffer memory 1010 to 1012 SET PY39 //Turns ON operating condition setting request

!PX39 //Operating condition setting complete OFF?


RST PY39 //Turns OFF operating condition setting request

4.18 Connection of SSCNETⅢ/H Head Module QDS(Ver.)

The MELSEC-L series SSCNET**I**/H head module (LJ72MS15) can be connected to Q173DSCPU/Q172DSCPU (SV13/SV22).

4.18.1 System configuration

A system configuration that uses SSCNETII/H head modules is shown below.

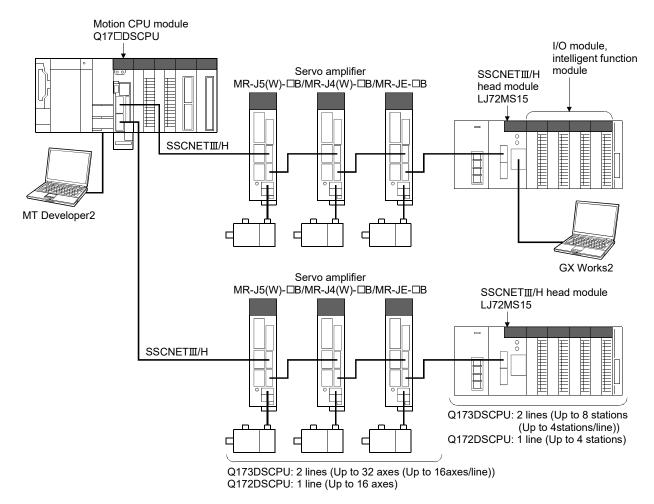

POINT

The parameters of the SSCNETIM/H head module and modules mounted to the SSCNETIM/H head module are set using GX Works2.

Refer to the "MELSEC-L SSCNETII/H Head Module User's Manual" for details of the SSCNETII/H head module.

Ver.!: Refer to Section 1.5 for the software version that supports this function.

4.18.2 SSCNETⅢ/H head module parameters

(1) Parameter setting

Set the parameters to use the SSCNET**I**I/H head module.

The parameters are set using MT Developer2.

The setting items for parameters are shown in table 4.2.

Table 4.2 SSCNETⅢ/H head module parameter list

No.	o. Item		Setting range	Default value
1	Valid setting		0: Invalid/1: Valid	0: Invalid
2	Station number	station number 1 to 64		
3	Axis No.		0 to 8	
		Device name	Bit device : X, Y, M, B Word device : D, W, #, U□\G	_
4	Refresh device setting (CPU side)	Points	Bit device : 16 to 512 Word device : 1 to 32	_
	(Input: RX, RWr/ Output: RY, RWw)	Start	X0 to X1FFF/Y0 to Y1FFF/M0 to M8191/B0 to B1FFF/ D0 to D8191 ^(Note-1) /#0 to #9215/W0 to W1FFF/ U□\G10000 to (U□\G10000+p-1) ^(Note-2)	_
5	Status device		M0 to M8176/B0 to B1FFF/ D0 to D8191/#0 to #9215/W0 to W1FFF/ U□\G10000 to (U□\G10000+p-1) ^(Note-2)	_
6	Monitor device		D0 to D8191/#0 to #9215/W0 to W1FFF/ U□\G10000 to (U□\G10000+p-1) ^(Note-2)	_
7	Command device		M0 to M8176/B0 to B1FFF/ D0 to D8191/#0 to #9215/W0 to W1FFF/ U□\G10000 to (U□\G10000+p-1) ^(Note-2)	_

(Note-1): Range of D0 to D19823 is valid for SV22 advanced synchronous control.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

POINT

(1) The number of SSCNETII/H head module stations that can be connected to a SSCNETII/H line according to operation cycle settings, are as follows.

Operation cycle [ms]	Stations connected
0.88	Up to 4 stations
0.44	Up to 2 stations
0.22	Up to 1 station

(a) Valid setting

Set valid/invalid of SSCNET**I**/H head module

- 0: InvalidNot using SSCNETII/H head module
- 1: ValidUsing SSCNET**I**/H head module

(b) Station number

Set the station number of SSCNETIM/H head module.

The same station number can be used for line 1 and line 2.

Cannot use the same station number as the axis No. of the servo amplifier.

(Example) When using servo amplifier setting "d01", cannot set station number to "1".

Setting range
1 to 64

(c) Axis No.

Set the axis No. of SSCNET**I**/H head module.

(For Motion SFC programs, this number is used for specifying).

Cannot use the same axis No. for line 1 and line 2.

The same Motion axis No. and axis No. can be used.

Communication is not executed with a station that has axis No. set to "0".

(Use as a reserved axis.)

There can be duplicate axis No. 0.

Setting range	
0 to 8	

(d) Refresh device setting (CPU side)

Set the device (Input: RX, RWr/Output: RY, RWw) for storage of link data. Motion CPU device is set using automatic refresh by cyclic transmission of the SSCNETII/H head module.

Link devices (RX, RWr, RY, RWw) of the Motion CPU are automatically assigned in MT Developer2.

POINT

Link devices (RX, RWr, RY, RWw) of the Motion CPU are used only for internal processing. These cannot be used in user data such as Motion SFC programs etc.

1) Device name

Set the device name that stores link data.

• Bit device : X, Y, M, B

• Word device : D, W, #, U□\G

2) Points

Set the points of the device that stores link data. Set the points of the device in units of words.

The total points for input (RX+RWr), and output (RY+RWw) must be 64 bytes or less.

Device	Setting range
Bit device (X, Y, M, B) (Note-1)	16 to 512
Word device (D, W, #, U□\G)	1 to 32

(Note-1): Set in units of 16 points (1 word).

3) Start

Set the start device number that stores link data.

For bit devices, set a multiple of 16.

• Bit device

Bit device	Setting range
Х	0 to 1FFF
Υ	0 to 1FFF
М	0 to 8191
В	0 to 1FFF

Word device

Word device	Setting range
D	0 to 8191 ^(Note-1)
W	0 to 1FFF
#	0 to 9215
U□\G	10000 to (10000+p-1) (Note-2), (Note-3)

(Note-1): The range of D0 to D19823 is valid in the SV22 advanced synchronous control.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-3): Only device of the self CPU can be used.

(e) Status device

Set the device for storage of the status of the SSCNET**I**/H head module.

- 1) Usable devices are shown below.
 - Bit device

Bit device	e Setting range (Note-1)		
М	0 to 8191		
В	0 to 1FFF		

(Note-1): Set the start device as a unit of 16 points.

Word device

Word device	Setting range
D	0 to 8191
W	0 to 1FFF
#	0 to 9215
U□\G	10000 to (10000+p-1) (Note-1), (Note-2)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-2): Only device of the self CPU can be used.

2) The device uses 16 points (1 point if a word device) from the specified device number.

The details stored in the status device are shown below.

Off set	Signal name	Refresh cycle
+0		
+1		
+2		
+3	Unusable	_
+4		
+5		
+6		
+7	During stop error	Operation cycle
+8		
+9		
+10		
+11	Unusable	_
+12		
+13		
+14		
+15	During continue error	Operation cycle

a) During stop error

Can be used to judge whether there is an error or not by the signal turning ON when a stop error is detected in the SSCNETI/H head module.

The applicable error code is stored in the error code signal of the monitor device set in (f) of this section.

If error is reset by turning ON the error reset command, or turning ON the SSCNETII/H head module power supply again, the signal turns OFF.

b) During continue error

Can be used to judge whether there is an error or not by the signal turning ON when a continue error is detected in the SSCNETII/H head module.

The applicable error code is stored in the error code signal of the monitor device set in (f) of this section.

If error is reset by turning ON the error reset command, or turning ON the SSCNETII/H head module power supply again, the signal turns OFF.

(f) Monitor device

Set the devices for monitoring the status of SSCNETII/H head module.

- 1) Usable devices are shown below.
 - Word device

Word device	Setting range
D	0 to 8191
W	0 to 1FFF
#	0 to 9215
U□\G	10000 to (10000+p-1) (Note-1), (Note-2)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-2): Only device of the self CPU can be used.

The device uses 10 points per word from the specified device number.
 The details stored in the status device are shown below.

Off set	Signal name	Refresh cycle		
+0	Module operating status	O		
+1	Error code	Operation cycle		
+2	Accumulative count for communication retry	At a communication		
+3	Maximum continuous times for			
+4				
+5				
+6	Harrishla			
+7	Unusable	_		
+8				
+9				

a) Module operating status

Stores the operating status of SSCNETII/H head module.

- 0: No communication
- 1: STOP status
- 2: RUN status
- 3: ERROR status
- b) Error code

Stores the error code when an error is detected in the SSCNET**II**/H head module. (Continue error and stop error)

If error is reset by turning ON the error reset command, or the SSCNETIM/H head module power supply is turned ON again, this device is also cleared.

- c) Accumulative count for communication retry
 Holds the accumulative count for communication retry with the
 SSCNETII/H head module.
- d) Maximum continuous times for communication retry

 Counts each time a communication retry with the SSCNETII/H head

 module occurs. When communication is successful, the count is "0".

(g) Command device

Set the device for commands to SSCNETII/H head module.

- 1) Usable devices are shown below.
 - Bit device

Bit device	Setting range ^(Note-1)
М	0 to 8191
В	0 to 1FFF

(Note-1): Set the start device as a unit of 16 points.

• Word device

Word device	Setting range
D	0 to 8191
W	0 to 1FFF
#	0 to 9215
U□\G	10000 to (10000+p-1) (Note-1)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

2) The device uses 16 points (1 point if a word device) from the specified device number.

The details stored in the command device are shown below.

Off set	Signal name	Refresh cycle		
+0				
+1				
+2				
+3	Unusable	_		
+4				
+5				
+6				
+7	Error reset command	Main cycle		
+8				
+9				
+10				
+11	I lava alda			
+12	Unusable	_		
+13				
+14				
+15				

a) Error reset command

Clears the error code storage device and resets the error code detection signal of the SSCNETIM/H head module. At an error reset command, turn this signal OFF after confirming the error detection signal of the SSCNETIM/H head module is turned OFF. However, depending on the error of the SSCNETIM/H head module, an error reset may not be executed, or conditions may apply to the error reset. In this case, the error code storage device is not cleared and the error code detection signal is not reset, even if an alarm reset is executed. Refer to the manual of the SSCNETIM/H head module for details.


(2) Operation example of parameter

- (a) When setting 2 SSCNET**I**/H head modules (station 17, station 18) to SSCNET line 1.
 - Parameter setting
 The setting example of parameter is shown below.

Station Axis	s Input/	Link device (Note-1)			Refresh device (CPU side)		Status	Monitor	Command												
number	No.	Output	Device name	Points	Start	End		Points	Start	End	device	device	device								
			RX	128	0000	007F	\rightarrow	128	M112	M239	- M0	M0 D2000	M16								
47	17 1 Input Output	Input	RWr	24	0000	0017	\rightarrow	24	W0000	W0017											
17		O. 14 14	RY	128	0000	007F	←	128	M240	M367											
		Output	RWw	24	0000	0017	←	24	W0018	W002F											
		lana sat	RX	0			\rightarrow	0													
40	18 2									Input	RWr	32	0018	0037	\rightarrow	32	D2020	D2051	Maa	D0040	N440
18		044	RY	0			Ţ	0			M32	D2010	M48								
		Output	RWw	32	0018	0037	←	32	D2052	D2083											

(Note-1): Used only for internal processing of Motion CPU. The number of points set in the refresh device (CPU side) is automatically assigned in MT Developer2.

Operation example The example of operating parameter is shown below.

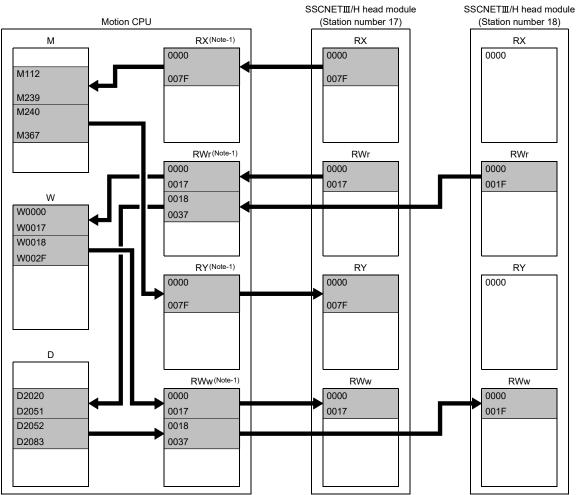

(Note-1): Used only for internal processing of Motion CPU. The number of points set in the refresh device (CPU side) is automatically assigned in MT Developer2.

4.18.3 Data operation of intelligent function module by Motion SFC program

In addition to refresh of data by device, data read/write operations to the buffer memory of intelligent function modules on the SSCNETII/H head module can be executed by the RTO and RFROM instructions of Motion SFC programs.

Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)" for details.

Classification	Symbol	Instruction	Description		
Others	RTO	Write buffer memory data to head module	Writes word device data to the buffer memory of the intelligent function module mounted to the SSCNETII/H head module.		
	RFROM	Read buffer memory data from head module	Reads data from the buffer memory of the intelligent function module mounted to the SSCNETII/H head module, to the word device.		

4.18.4 Data of refresh device

The refresh of data by device, for the status of Motion CPU, or when there is a communication failure with the head module are as follows.

	Refresh of data					
	Bit o	levice	Word device			
	Input(RX)	Output(RY)	Input(RWr)	Output(RWw)		
At communication failure	C	loor				
occurrence	Clear		Maintain			
At STOP of Motion CPU	Maintain Clear					
At Motion CPU operation stop error						
occurrence						

4.18.5 Precautions when using SSCNETⅢ/H head module

(1) Disconnect/reconnect function cannot be used for SSCNET**I**/H head module. If executed it is ignored.

4.19 Fixed Cycle System Processing Time Monitor



4.19.1 Fixed cycle system processing time

Fixed cycle system processing time monitors processing time of the executed fixed cycle system processing every 0.222/0.444ms.

(1) Special registers

Device No.	Signal name	Details	Set by
SD581	Fixed cycle system processing time	Stores the fixed cycle system processing time in a unit of [µs] every 0.444ms. (When the operation cycle is 0.222ms, it stores every 0.222ms.)	System (444µs)

4.19.2 Maximum fixed cycle system processing time

Maximum fixed cycle system processing time monitors the maximum value of the fixed cycle system processing time (SD581).

(1) Special registers

Device No.	Signal name	Details	Set by
SD537	Maximum fixed cycle system processing time	Stores the maximum value of the fixed cycle system processing time (SD581) in a unit of [µs] every 0.444ms. (When the operation cycle is 0.222ms, it stores every 0.222ms.)	System (444µs)

(2) Special relays

Device No.	Signal name	Details	Set by
SM534	Maximum fixed cycle system processing time over flag	Turns ON when the maximum fixed cycle system processing time exceeds 0.444ms. (When the operation cycle is 0.222ms, the time is 0.222ms.) OFF: Not detected ON: Detected	System (444µs)
SM577	Maximum fixed cycle system processing time initialized flag	Turns ON to initialize the maximum fixed cycle system processing time. Turns OFF this relay after ON as it updates in the fixed cycle system processing time every 0.444ms during ON. (When the operation cycle is 0.222ms, it updates every 0.222ms.) The maximum fixed cycle system processing time over flag is also turned OFF by turning ON this relay. OFF: Initialization disabled ON: Initialization enabled	User

Ver.!: Refer to Section 1.5 for the software version that supports this function.

(3) Precautions

When the value of the maximum fixed cycle system processing time (SD537) exceeds 0.444ms ^(Note-1), the maximum fixed cycle system processing time over flag (SM534) is turned ON.

When the maximum fixed cycle system processing time over flag (SM534) is turned ON, review the settings of the DOG/CHANGE signal and the mark detection setting so that the maximum fixed cycle system processing time (SD537) is less than 0.444ms (Note-1).

(Note-1): When the set operation cycle is 0.222ms, it operates every 0.222ms.

(a) DOG/CHANGE signal


- When the PX device is set to the DOG signal of the servo external signal parameter, set "DOG/CHANGE signal input method" to "Fixed cycle input method" or "Operation cycle input method" in the system basic setting of the system setting.
- 2) Set the following signal types to the DOG signal of the servo external signal parameter.
 - Q172DLX signal
 - Amplifier input
 - DI signal
- 3) Reduce the setting number of the DOG signal of the servo external signal parameter.

(b) Mark detection setting

- 1) When the PX device is set to the mark detection signal, set the mark detection signal input method to "Fixed cycle input method".
- 2) Set the followings to the mark detection signal.
 - Q172DLX (DOG)
 - DI1 to DI4
- 3) Reduce the setting number of the mark detection setting.

4.20 Hot Line Forced Stop Function QDS (Ver.)

This function is used to execute deceleration stop safely for other axes when the servo alarm occurs in the servo amplifier (MR-JE-□B).

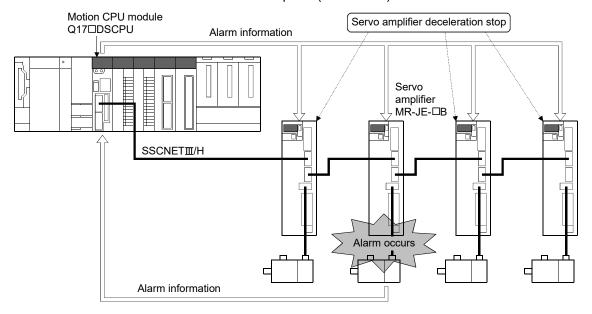

Use the software version that supports the hot line forced stop function for the servo amplifier to use the hot line forced stop function.

The servo amplifier software versions that support hot line forced stop function are shown below.

Servo amplifier model	Software version
MR-J4(W)-□B	B7 or later
MR-JE-□B	B6 or later

Ver.! : Refer to Section 1.5 for the software version that supports this function.

4.20.1 Control details

Set the hot line forced stop in the servo parameter. Using this function enables connected axes on all lines to decelerate to a stop with a servo alarm axis notification and without Motion CPU control intervention. For MR-JE- \square B, this function is set to "Enabled" when using factory settings. To set this function to "Disabled", set "Hot line forced stop function selection" of "Hot line forced stop function (PA27)" to "1: Disabled". When using MR-JE- \square B with MR-J4(W)- \square B, this function can decelerate the MR-J4(W)- \square B axes to a stop when an alarm occurs in MR-JE- \square B. To decelerate an MR-J4(W)- \square B axis to a stop, set "2: Enabled" to the following MR-J4(W)- \square B servo parameter. (When using factory settings, "0: Disabled" is set.)

• MR-J4(W)-□B: "Deceleration to stop selection" of Hot line forced stop function (PA27)

Refer to "SSCNETII/H interface AC Servo MR-JE-□B Servo amplifier Instruction Manual" for details on the hot line forced stop function.

(1) Servo parameter settings

The setting values of the servo parameter "Hot line forced stop function (PA27)" and the servo amplifier operations are shown below.

(a) MR-JE-□B servo parameter "Hot line forced stop function (PA27)"

Setting value of "Hot line	Servo amplifier operation		
forced stop function selection"	Output hot line	Deceleration stop when receiving the hot line signal	
0: Enabled	0	0	
1: Disabled	×	×	

○: Available, ×: Not available

(b) MR-J4(W)-□B servo parameter "Hot line forced stop function (PA27)"


Setting value of	Servo amplifier operation		
"Deceleration to stop selection"	Output hot line	Deceleration stop when receiving the hot line signal	
0: Disabled	×	×	
2: Enabled	×	0	

 \bigcirc : Available, imes: Not available

4.20.2 Precautions

- Axes that have decelerated to a stop will cause a servo error (error code: 2147) to occur.
- (2) To cancel servo errors (error code: 2147) that have occurred using the hot line forced stop function, turn ON servo error reset command (M3208+20n) of each axis after removing the cause of the alarm. If the cause is not removed, servo error (error code: 2147) will not be canceled even when servo error reset command (M3208+20n) is turned ON.
- (3) Timing when a servo alarm occurs

 The timing chart for when a servo alarm occurs is shown below.

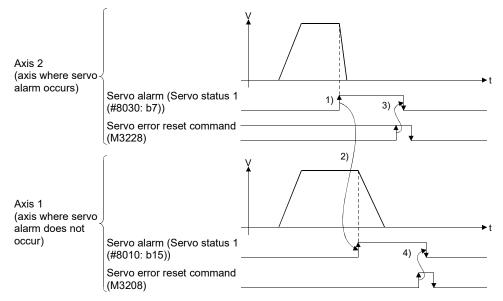

- 1) A servo error occurs in axis 2, which then stops with dynamic brake.
- 2) Axis 1 receives a notification about the axis (axis 2) where the servo alarm occurred, "Servo warning (b15)" of servo status 1 (#8010) turns ON, and decelerates to a stop following the settings of the servo parameter "Deceleration time constant at forced stop (PC24)".
- 3) After removing the servo alarm cause of axis 2, "Servo alarm (b7)" of servo status 1 (#8030) is turned OFF by servo error reset command (M3228) of axis 2
- 4) "Servo warning (b15)" of servo status 1 (#8010) is turned OFF by servo error reset command (M3208) of axis 1.

MEMO		

APP.

APPENDICES

APPENDIX 1 Special Relays/Special Registers

APPENDIX 1.1 Special relays

Special relays are internal relays whose applications are fixed in the Motion CPU. For this reason, they cannot be used in the same way as the normal internal relays by the Motion SFC programs (SV13/SV22)/Motion programs (SV43).

However, they can be turned ON/OFF as needed in order to control the Motion CPU.

The headings in the table that follows have the following meanings.

Item	Explanation		
No.	Indicates the device No. of the special relay.		
Name	Indicates the name of the special relay.		
Meaning	Indicates the nature of the special relay.		
Details	Indicates detailed information about the nature of the special relay.		
Set by (When set)	 Indicates whether the relay is set by the system or user, and, if it is set by system, when setting is performed. <set by=""></set> S: Set by system (Motion CPU) U: Set by user (Motion SFC program/Motion program or test operation using MT Developer2) S/U: Set by both system (Motion CPU) and user <when set=""> Indicated only if setting is done by system (Motion CPU).</when> Main process: Set during each main processing (free time processing of the CPU) Initial process: Set only during initial processing (when power supply is turned ON, or when executed the reset) Status change: Set only when there is a change in status Error: Set when error is occurred. Request: Set only when there is a user request (Special relay, etc.) Operation cycle: Set during each operation cycle of the Motion CPU. 		

Table 1.1 Special relay list

No.	Name	Meaning	Details	Set by (When set)
SM0	Diagnostic error	OFF: No error ON: Error	Turn ON if an error occurs as a result of diagnosis. Remains ON even if the condition is restored to normal thereafter. Turn ON by ON to OFF of the Motion error detection flag (M2039) for except the stop error after confirming the error content.	
SM1	Self-diagnostic error	OFF: No self-diagnostic error ON: Self-diagnostic error	Turn ON if an error occurs as a result of self-diagnosis. Remains ON even if the condition is restored to normal thereafter. Turn ON by ON to OFF of the Motion error detection flag (M2039) for except the stop error after confirming the error content.	
SM51	Battery low latch	OFF : Normal ON : Battery low	Turn ON if the voltage of battery reduces to less than 2.5[V]. Remains ON even if the condition is restored to normal thereafter.	
SM52	Battery low	OFF : Normal ON : Battery low	Turn on when the voltage of the battery reduces to less than 2.5[V]. Turn OFF when the voltage of external battery returns to normal.	
SM53	AC/DC DOWN detection	OFF: AC/DC DOWN not detected ON: AC/DC DOWN detected	Turn ON if an instantaneous power failure of within 20[ms] occurs during use of the AC power supply module. Reset when the power supply is switched OFF, then ON. Turn ON if an instantaneous power failure of within 10[ms] occurs during use of the AC power supply module. Reset when the power supply is switched OFF, then ON.	S (Occur an error)
SM58	Battery low warning	OFF: Normal ON: Battery low	• Turn ON if the voltage of battery reduces to less than 2.7[V].	
SM59	latch Battery low warning	OFF: Normal ON: Battery low	 Remains ON even if the condition is restored to normal thereafter. Turn on when the voltage of the battery reduces to less than 2.7[V]. Turn OFF when the voltage of external battery returns to normal. 	
SM60	Fuse blown detection	OFF : Normal ON : Module with blown fuse	Turn ON if there is at least one output module whose fuse has blown. Remains ON even if the condition is restored to normal thereafter.	
SM211	Clock data error	OFF : No error ON : Error	Turn ON if an error occurs in clock data (SD210 to SD213) value, and turn OFF if no error is detected.	S (Request)
SM220 (Note-1)	CPU No.1 READY complete	OFF: CPU No.1 READY incompletion ON: CPU No.1 READY completion	Turn ON if CPU No. 1 which uses Multiple CPU high speed bus can be operated between Multiple CPU.	
SM221 (Note-1)	CPU No.2 READY complete	OFF: CPU No.2 READY incompletion ON: CPU No.2 READY completion	Turn ON if CPU No. 2 which uses Multiple CPU high speed bus can be operated between Multiple CPU.	
SM222 (Note-1)	CPU No.3 READY complete	OFF: CPU No.3 READY incompletion ON: CPU No.3 READY completion	Turn ON if CPU No. 3 which uses Multiple CPU high speed bus can be operated between Multiple CPU.	
SM223 (Note-1)	CPU No.4 READY complete	OFF: CPU No.4 READY incompletion ON: CPU No.4 READY completion	Turn ON if CPU No. 4 which uses Multiple CPU high speed bus can be operated between Multiple CPU.	S (Change status)
SM240	No.1 CPU resetting	OFF: CPU No.1 reset cancel ON: CPU No.1 resetting	Goes OFF when reset of the No.1 CPU is cancelled. Comes ON when the No.1 CPU is resetting (including the case where the CPU module is removed from the base). The other CPUs are also put in reset status.	
SM241	No.2 CPU resetting	OFF: CPU No.2 reset cancel ON: CPU No.2 resetting	Goes OFF when reset of the No.2 CPU is cancelled. Comes ON when the No.2 CPU is resetting (including the case where the CPU module is removed from the base). The other CPUs result in "MULTI CPU DOWN" (error code: 7000).	
SM242	No.3 CPU resetting	OFF: CPU No.3 reset cancel ON: CPU No.3 resetting	Goes OFF when reset of the No.3 CPU is cancelled. Comes ON when the No.3 CPU is resetting (including the case where the CPU module is removed from the base). The other CPUs result in "MULTI CPU DOWN" (error code: 7000).	

Table 1.1 Special relay list (Continued)

No.	Name	Meaning	Details	Set by (When set)
SM243	No.4 CPU resetting	OFF: CPU No.4 reset cancel ON: CPU No.4 resetting	Goes OFF when reset of the No.4 CPU is cancelled. Comes ON when the No.4 CPU is resetting (including the case where the CPU module is removed from the base). The other CPUs result in "MULTI CPU DOWN" (error code: 7000).	
SM244	No.1 CPU error	OFF: CPU No.1 normal ON: CPU No.1 during stop error	Goes OFF when the CPU No.1 is normal. (Including a continuation error) Comes ON when the CPU No.1 is during stop error. (Note-2)	
SM245	No.2 CPU error	OFF: CPU No.2 normal ON: CPU No.2 during stop error	Goes OFF when the CPU No.2 is normal. (Including a continuation error) Comes ON when the CPU No.2 is during stop error. (Note-2)	S (Change status)
SM246	No.3 CPU error	OFF: CPU No.3 normal ON: CPU No.4 during stop error	Goes OFF when the CPU No.3 is normal. (Including a continuation error) Comes ON when the CPU No.3 is during stop error. (Note-2)	
SM247	No.4 CPU error	OFF: CPU No.4 normal ON: CPU No.4 during stop error	Goes OFF when the CPU No.4 is normal. (Including a continuation error) Comes ON when the CPU No.4 is during stop error. (Note-2)	
SM400	Always ON	ON ——— OFF	Normally is ON.	
SM401	Always OFF	ON OFF ———	Normally is OFF.	S (Main processing)
SM500	PCPU READY complete	ON : PCPU READY completion OFF : PCPU READY incompletion	When the PLC ready flag (M2000) turn OFF to ON, the fixed parameters, servo parameters and limit switch output data, etc., are checked, and if no error is detected, this flag turns ON. Turn OFF with PLC ready flag (M2000) OFF.	
SM501	Test mode ON	ON : TEST mode ON OFF : Except TEST mode	Judge whether TEST mode ON or not using MT Developer2. If the TEST mode is not established by TEST mode request using MT Developer2, the TEST mode request error (SM510) turns ON.	S (Request)
SM502	External forced stop input	ON : Forced stop OFF OFF : Forced stop ON	Confirm forced stop ON/OFF.	S (Operation cycle)
SM503	Digital oscilloscope executing	ON : Digital oscilloscope is stop OFF: Digital oscilloscope is executing	Confirm the execution of digital oscilloscope using MT Developer2.	
SM505	Cam data writing flag	OFF: Cam data not writing ON: Cam data writing	Turn ON during cam data writing by executing the cam data write (CAMWR)/cam data write (cam open area: CAMWR2)/ cam auto-generation (CAMMK).	S (Change status)
SM506	External forced stop input ON latch	ON: External forced stop input is detected OFF: External forced stop input is not detected	Turn ON when an external forced stop input is detected. Remains ON even if the condition is cancelled to thereafter.	
SM508	Amplifier-less operation status	ON : During amplifier-less operation OFF : During normal operation	Confirm the amplifier-less operation status.	S (Main processing)
SM510	TEST mode request error	ON : Abnormal OFF : Normal	Turn ON if the TEST mode is not established by TEST mode request using MT Developer2. When this relay is ON, the error content is stored in the TEST mode request error register (SD510, SD511).	
SM512	Motion CPU WDT error	ON : Abnormal OFF : Normal	Turn ON when a "watchdog timer error" is detected by the Motion CPU self-diagnosis function. When the Motion CPU detects a WDT error, it executes an immediate stop without deceleration of the operating axes. The error cause is stored in the "Motion CPU WDT error cause (SD512)".	S (Occur an error)

Ver.!: Refer to Section 1.5 for the software version that supports this function.

Table 1.1 Special relay list (Continued)

No.	Name	Meaning	Details	Set by (When set)
SM513	Manual pulse generator axis setting error	ON: At least one D714 to D719 setting is abnormal. OFF: All D714 to D719 settings are normal.	 Judge whether normal/abnormal of the register for manual pulse generator axis setting register (D714 to D719). When this relay is ON, the error content is stored in the manual pulse generator axis setting error register (SD513 to SD515). 	
SM516	Servo program setting error (SV13/SV22)/ Motion program setting error (SV43)	ON : Abnormal OFF : Normal	 Judge whether normal/abnormal of the positioning data of servo program(K) (SV13/SV22)/Motion program(SV43) specified with the Motion SFC program, and if error is detected this flag turns ON. The content of an error is stored at SD516, SD517. 	S (Occur an error)
SM526	Over heat warning latch	OFF : Normal ON : Abnormal	Turn ON when the temperature of Motion CPU module becomes specified value 85[°C] (185[°F]) or more. Remains ON even if normal status is restored.	
SM527	Over heat warning	OFF : Normal ON : Abnormal	Turn ON when the temperature of Motion CPU module becomes specified value 85[°C] (185[°F]) or more. Turn OFF when the temperature of Motion CPU module returns to normal.	
SM528	No.1 CPU MULTR complete	OFF to ON : CPU No.1 read completion	Turn ON when the data read from CPU No.1 is normal by MULTR instruction.	
SM529	No.2 CPU MULTR complete	OFF to ON : CPU No.2 read completion	Turn ON when the data read from CPU No.2 is normal by MULTR instruction.	S (Read completion)
SM530	No.3 CPU MULTR complete	OFF to ON : CPU No.3 read completion	Turn ON when the data read from CPU No.3 is normal by MULTR instruction.	o (read completion)
SM531	No.4 CPU MULTR complete	OFF to ON : CPU No.4 read completion	Turn ON when the data read from CPU No.4 is normal by MULTR instruction.	
SM532	SSCNETII searching flag (Line 1)	OFF: Search complete ON: Searching	 Turns ON when searching axes that have been set to line 1 by system setting. Turns OFF when all axes that have been set to line 1 by system setting have been searched. 	
SM533	SSCNETIII searching flag (Line 2)	OFF: Search complete ON: Searching	Turns ON when searching axes that have been set to line 2 by system setting. Turns OFF when all axes that have been set to line 2 by system setting have been searched.	S (Change status)
SM534	Maximum fixed cycle system processing time over flag	OFF: Not detected ON: Detected	Turns ON when the maximum fixed cycle system processing time exceeds 0.444ms. (When the operation cycle is 0.222ms, the time is 0.222ms.)	S (444µs)
SM561	Multiple CPU synchronous control initial complete flag	OFF: Multiple CPU synchronous initial incomplete. ON: Multiple CPU synchronous initial complete.	Turns ON when the initial processing of Multiple CPU synchronous control is completed.	S (Initial processing)
SM577	Maximum fixed cycle system processing time initialized flag	OFF: Initialization disabled ON: Initialization enabled	Turns ON to initialize the maximum fixed cycle system processing time. Turns OFF this relay after ON as it updates in the fixed cycle system processing time every 0.444ms during ON. (When the operation cycle is 0.222ms, it updates every 0.222ms.) The maximum fixed cycle system processing time over flag is also turned OFF by turning ON this relay.	U

Ver.! : Refer to Section 1.5 for the software version that supports this function.

Table 1.1 Special relay list (Continued)

No.	Name	Meaning	Details	Set by (When set)
SM801	Clock data read request	OFF : Ignored ON : Read request	When this relay is ON, clock data is read to SD210 to SD213 as BCD values.	
SM805		OFF: Setting error valid ON: Setting error invalid	When this relay is ON, the large value than deceleration time can be set as rapid stop deceleration time. (The servo program setting error (error code: 51) will not occur.)	U

(Note-1): It is used for interlock condition of Multiple CPU high speed bus dedicated instruction when a synchronous system set in Multiple CPU synchronous startup setting of system setting.

(Note-2): The CPU No.1 is reset after the factor of the stop error is removed to cancel a stop error \rightarrow Resetting is cancelled.



Ver.!: Refer to Section 1.5 for the software version that supports this function.

APPENDIX 1.2 Special registers

Special registers are internal registers whose applications are fixed in the Motion CPU. For this reason, it is not possible to use these registers in Motion SFC programs (SV13/SV22)/Motion programs (SV43) in the same way that normal registers are used.

However, data can be written as needed in order to control the Motion CPU. Data stored in the special registers are stored as BIN values if no special designation has been made to the contrary.

The headings in the table that follows have the following meanings.

Item	Explanation							
Number	Indicates the No. of the special register.							
Name	Indicates the name of the special register.							
Meaning	Indicates the nature of the special register.							
Details	Indicates detailed information about the nature of the special register.							
Set by (When set)	 Indicates whether the register is set by the system or user, and, if it is set by system, when setting is performed. <set by=""></set> S: Set by system (Motion CPU) U: Set by user (Motion SFC program/Motion program or test operation using MT Developer2) S/U: Set by both system (Motion CPU) and user <when set=""> Indicated only if setting is done by system (Motion CPU).</when> Main process: Set during each main processing (free time processing of the CPU) Initial process: Set only during initial processing (when power supply is turned ON, or when executed the reset) Status change: Set only when there is a change in status Error: Set when error is occurred. Request: Set only when there is a user request (Special relay, etc.) Operation cycle: Set during each operation cycle of the Motion CPU. 							

Table 1.2 Special register list

No.	Name	Meaning	Details	Set by (When set)
SD0	Diagnostic errors	Diagnostic error code	Error codes for errors found by diagnosis are stored as BIN data. Refer to "APPENDIX 3" for details of the error code. After confirm the error content, except the stop error, it is possible to clear by ON to OFF of the Motion error detection flag (M2039). Clear SD0 to SD26 by ON to OFF of the Motion error detection flag (M2039) for except the stop error after confirming the error content.	
SD1			The year (last two digits) and month that SD0 data was updated is stored as BCD 2-digit code. B15 to B8 B7 to B0 Example: January 2006 Year(0 to 99) Month(1 to 12)	
SD2	Clock time for diagnostic error occurrence	Clock time for diagnostic error occurrence	The day and hour that SD0 data was updated is stored as BCD 2-digit code. B15 to B8 B7 to B0 Example : 25th, 10 a.m Day(1 to 31) Hour(0 to 23) H2510	
SD3			The minute and second that SD0 data was updated is stored as BCD 2-digit code. B15 to B8 B7 to B0 Example: 35min., 48 sec. Minute(0 to 59) Second(0 to 59) H3548	
SD4	Error information categories	Error information category code	Category codes which help indicate what type of information is being stored in the error common information areas (SD5 to SD15) and error individual information areas (SD16 to SD26) are stored. The category code for judging the error information type is stored. B15 to B8 B7 to B0 Individual information category codes Common information category codes The common information category codes store the following codes. No error Module No./CPU No./Base No. The individual information category codes store the following codes. No error Real Parameter No. The individual information category codes store the following codes. No error Parameter No./CPU No.	S (Occur an error)
SD5 SD6 SD7 SD8 SD9 SD10 SD11 SD12 SD13 SD14	Error common information	Error common information	Common information corresponding to the diagnostic error (SD0) is stored. The error common information type can be judged by SD4 (common information category code). Module No./CPU No./Base No. For the Multiple CPU system, Module No. or CPU No. is stored depending on the error that occurred. (Refer to corresponding error code for which No. has been stored.) CPU No.1: 1, CPU No.2: 2, CPU No.3: 3, CPU No.4: 4 No. Meaning SD5 Module No./CPU No./Base No. SD6 J/O No. SD7 to Empty SD15	

Table 1.2 Special register list (Continued)

SD16 SD17 SD18 SD19 SD20 SD21 SD22 SD23 SD24 SD25 SD25 SD26 SD16 • Individual information corresponding to the diagnostic error (SD0) is stored. • The error individual information type can be judged by SD4 (individual information type can be jud	
No. Meaning	
SD21 SD16 Parameter No. SD22 SD17 SD23 to Empty SD24 SD26 SD25 0401H : Base setting 0406H : Motion slot setting	
SD22 SD17 SD23 to Empty SD24 SD26 SD25 0401H : Base setting 0406H : Motion slot setting	
SD23 to Empty SD24 SD26 O401H : Base setting 0406H : Motion slot setting	
SD24 SD26 SD25 0401H : Base setting 0406H : Motion slot setting	
0406H : Motion slot setting	
0406H : Motion slot setting	
Error individual information Error individual information OE01H : Multiple CPU setting (Operation mode/Multiple CPU synchronous startup) E008H : Multiple CPU high speed transmission area setting(CPU)	PU PU
specific send range setting/ (System area))	S (Occur an error)
E009H/E00AH: Multiple CPU high speed transmission area setting	o (occur arrefror)
(Automatic refresh setting) E00BH : Synchronous setting	
SD26	
13: Parameter No./CPU No.	
No. Meaning	
SD16 Parameter No.	
SD17 CPU No.(1 to 4) SD18	
to Empty SD26	
AC/DC DOWN Number of times for • Every time the input voltage fails to or below (85[%] AC power/65[%] DC	power)
SD53 counter No. AC/DC DOWN the rating during calculation of the Motion CPU module, the value is incre	emented
by 1 and stored in BIN code.	
SD60 Fuse blown No. Module No. with blown fuse • The lowest station I/O No. of the module with the blown fuse is stored.	
The CPU switch status is stored in the following format.	
B15 B12B11 B8 B7 B4 B3 B0	
SD200 Status of switch Status of CPU switch Not used 1)	
1) CPU switch status 0: RUN	
1: STOP	
• The CPU operating status is stored as indicated in the following figure. B15 B12B11 B8 B7 B4 B3 B0 CPC 20 Operating status Operating status Operating status	S (Main processing)
of CPU of CPU 1) Operating status of CPU 0: RUN	
2: STOP	
2) STOP cause 0: RUN/STOP switch	
4: Error	

Table 1.2 Special register list (Continued)

No.	Name	Meaning	Details	Set by (When set)
SD210		Clock data (Year, Month)	The year (last two digits) and month are stored as BCD code. B15 Io B12 B11 Io B8 B7 Io B4 B3 Io B0 Example : July, 2006 H0607 Year Month Month	
SD211		Clock data (Day, Hour)	The day and hour are stored as BCD code. B15 to B12B11 to B8 B7 to B4 B3 to B0 Example : 31st, 10 a.m.	
SD212	Clock data	Clock data (Minute, Second)	The minutes and seconds are stored as BCD code. B15 to B12 B11 to B8 B7 to B4 B3 to B0 Example : 35 min., 48 sec. H3548	S/U (Request)
SD213		Clock data (Day of week)	The day of week is stored as BCD code. B15 to B12B11 to B8 B7 to B4 B3 to B0 Example : Friday H0005 Always set to "0". Day of week O Sunday 1 Monday 2 Tuesday 3 Wednesday 4 Thursday 5 Friday 6 Saturday	
SD290		Number of points assigned for X	Stores the number of points currently set for X devices.	
SD291		Number of points assigned for Y	Stores the number of points currently set for Y devices.	
SD292		Number of points assigned for M	Stores the number of points currently set for M devices.	
SD293		Number of points assigned for L	Stores the number of points currently set for L devices.	
SD294		Number of points assigned for B	Stores the number of points currently set for B devices.	
SD295		Number of points	Stores the number of points currently set for F devices.	
SD296		assigned for F Number of points assigned for SB	Stores the number of points currently set for SB devices.	
SD297	Device assignment	Number of points assigned for V	Stores the number of points currently set for V devices.	S (Initial processing)
SD298	assignment	Number of points assigned for S	Stores the number of points currently set for S devices.	o (mindai processing)
SD299		Number of points	Stores the number of points currently set for T devices.	7
SD300		assigned for T Number of points	Stores the number of points currently set for ST devices.	-
SD301		assigned for ST Number of points	Stores the number of points currently set for C devices.	1
SD302		assigned for C Number of points	Stores the number of points currently set for D devices.	-
SD303		assigned for D Number of points	Stores the number of points currently set for W devices.	+
SD303		assigned for W Number of points	Stores the number of points currently set for SW devices. Stores the number of points currently set for SW devices.	-
SD304	Multiple CPU No.	assigned for SW Multiple CPU No.	CPU No. of the self CPU is stored.	

Table 1.2 Special register list (Continued)

No.	Name	Meaning	Details	Set by (When set)
SD500 SD501	Real mode axis information register	Real mode axis information register	The information (Except real mode axis: 0/Real mode axis: 1) used as a real mode axis at the time of switching from real mode to virtual mode is stored. SD500: b0 to b15 (Axis 1 to 16) SD501: b0 to b15 (Axis 17 to 32) The real mode axis information does not change at the time of switching from virtual mode to real mode	S (At virtual mode transition)
SD502 SD503	Servo amplifier loading information	Servo amplifier loading information	 The loading status (loading: 1/non-loading: 0) of the servo amplifier checked, and stored as the bit data. SD502: b0 to b15 (Axis 1 to 16) SD503: b0 to b15 (Axis 17 to 32) The mounting status of changed axis after the power supply on is stored. 	S (Operation cycle)
SD504 SD505 SD506	Real mode/virtual mode switching error information	Real mode /virtual mode switching error code	 When a mode switching error occurs in real-to-virtual or virtual-to-real mode switching, or a mode continuation error occurs in the virtual mode, its error information is stored. 	S (Occur an error)
SD508	SSCNET control (Status)	Connect/ disconnect of SSCNET communication Start/release of amplifier-less operation	SD508 stores the executing state for connect/disconnect of SSCNET communication and start/release of amplifier-less operation. 0 : Command accept waiting -1 : Execute waiting -2 : Executing	S (Main processing)
SD510 SD511	Test mode request error information	It is operating in requirement error occurrence of the test mode, axis information	• Each axis is stopping: 0/Operating: 1, information is stored as a bit data. SD510: b0 to b15 (Axis 1 to Axis 16) SD511: b0 to b15 (Axis 17 to Axis 32)	
SD512	Motion CPU WDT error cause	Error meaning of WDT error occurs	 The following error codes are stored in SD512. 1: S/W fault 1 2: Operation cycle over 4: WDT error 300: S/W fault 3 303: S/W fault 4 304: RIO WDT error 	
SD513 SD514 SD515	Manual pulse generator axis setting error	Manual pulse generator axis setting error information	Contents of the manual pulse generator axis setting error is stored when the manual pulse generator axis setting error (SM513) turn on. (Normal: 0/Setting error: 1) SD513: The manual pulse generator axis setting error is stored in b0 to b2 (P1 to P3). The smoothing magnification setting is stored in b3 to b5 (P1 to P3). SD514: One pulse input magnification setting error is stored in b0 to b15 (axis 1 to axis 16). SD515: One pulse input magnification setting error is stored in b0 to b15 (axis 17 to axis 32).	S (Occur an error)
SD516	Error program No.	Error program No. of servo program (SV13/SV22)/ motion program (SV43)	When the servo program setting error (SV13/SV22)/motion program setting error (SV43) (SM516) turns on, the erroneous servo program No. (SV13/SV22)/motion program No. (SV43) will be stored.	
SD517	Error item information	Error code of servo program (SV13/SV22)/ motion program (SV43)	When the servo program setting error (SV13/SV22)/motion program setting error (SV43) (SM516) turns on, the error code corresponding to the erroneous setting item will be stored.	
SD520	Scan time	Scan time (1ms units)	Main cycle is stored in the unit 1ms. Setting range (0 to 65535[ms])	S (Main processing)
SD521	Maximum scan time	Maximum scan time (1ms units)	The maximum value of the main cycle is stored in the unit 1ms. Setting range (0 to 65535[ms])	_ (a processing)
SD522	Motion operation cycle Operation cycle of	Motion operation cycle Operation cycle	• The time required for motion operation cycle is stored in the [µs] unit.	S (Operation cycle)
SD523	the Motion CPU setting	of the Motion CPU setting	• The setting operation cycle is stored in the [µs] unit.	S (Initial processing)

Table 1.2 Special register list (Continued)

No.	Name	Meaning		Details		Set by (When set)				
SD524	Maximum Motion operation cycle	Maximum Motion operation cycle	• The maximum time for m [µs] unit.	otion operation is stored every motion operation	cycle in	S (Operation cycle)				
SD537	Maximum fixed cycle system processing time	Maximum fixed cycle system processing time		Stores the maximum value of the fixed cycle system processing time (SD581) in a unit of [µs] every 0.444ms. (When the operation cycle is 0.222ms, it stores every 0.222ms.)						
SD550	System setting	Error code	The error code indicating	the details of system setting error is stored.						
SD551	error information	Error individual information	The individual information		S (Occur an error)					
SD552	Servo parameter write/read request	Servo parameter read value	SD804 is stored. (For MF parameter is stored.)	The read value (low 1 word) of servo parameter which executed "4: 2 word read						
SD553			The read value (high 1 w request" in SD804 is stor	ord) of servo parameter which executed "4: 2 wo	ord read					
SD560	Operation method	Operation method	When the operating systestored. Use trivial mode switching	When the operating system software is SV22, the operation method information is						
SD561	Multiple CPU synchronous control setting status	Multiple CPU synchronous control setting status	The CPU setting status of the CPU setting status of the CPU state of the CPU setting status of the	The CPU setting status of Multiple CPU synchronous control is stored. D: Independent CPU 1: Master CPU						
SD581	Fixed cycle system processing time QDS(Ver.)	Fixed cycle system processing time	l	Stores the fixed cycle system processing time in a unit of [µs] every 0.444ms. (When the operation cycle is 0.222ms, it stores every 0.222ms.)						
SD700		Number of points assigned for #	Stores the number of poi	nts for device # used in the Motion CPU.						
SD701		Number of points assigned for CPU No.1 Multiple CPU area devices	Stores the number of poi							
SD702	Device assignment	Number of points assigned for CPU No.2 Multiple CPU area devices	Stores the number of poi	nts currently set for CPU No.2 Multiple CPU area	a devices.	S (Initial processing)				
SD703		Number of points assigned for CPU No.3 Multiple CPU area devices	Stores the number of poi	Stores the number of points currently set for CPU No.3 Multiple CPU area devices.						
SD704		Number of points assigned for CPU No.4 Multiple CPU area devices	Stores the number of poi	a devices.						
			Current value (SD720, Sinead SD720 device in 2 ltern	D721) is incremented by 1 per 444µs. word unit. Specification						
			Data size	2 word (-2147483648 to 2147483647)						
SD720	444µs coasting	444µs coasting timer		Cleared to zero at power-on or reset, a count		S (444µs)				
SD721	timer	TTTPS COASING WITE	Latch	rise is continued from now on.		Ο (141 μ5)				
			Usable tasks	Normal, event, NMI						
			Access	Read only enabled						
			Timer specifications	444µs timer	I					

Ver.!: Refer to Section 1.5 for the software version that supports this function.

Table 1.2 Special register list (Continued)

No.	Name	Meaning	Details	Set by (When set)
SD722 SD723	222µs coasting timer COS	222μs coasting timer	Current value (SD722, SD723) is incremented by 1 per 222µs. Read SD722 device in 2 word unit. This register is not updated when the operation cycle is set to other than 0.2ms. Item Specification Data size 2 word (-2147483648 to 2147483647) Latch Cleared to zero at power-on or reset, a count rise is continued from now on. Usable tasks Normal, event, NMI Access Read only enabled Timer specifications 222µs timer	S (222µs)
SD724	SSCNETII/H compatible optical hub unit loading information (Line 1)	SSCNETII/H compatible optical hub unit loading information (Line 1)	• Checks the connection status (Installed: 1/Not installed: 0) of the optical hub unit and stores as bit data. SD724: b0 to b15 (Optical hub unit No. 1 to No. 16 on line 1) SD725: b0 to b15 (Optical hub unit No. 1 to No. 16 on line 2) (Note): No. 1 to No. 16 is the connection order from the Motion CPU	
SD725	SSCNETIM/H compatible optical hub unit loading information (Line 2)	SSCNETIM/H compatible optical hub unit loading information (Line 2)	 "1" is stored to the installation status of an optical hub unit with a servo amplifier connected. "0" is stored to the installation status when an optical hub unit is not connected after an optical hub unit that is not connected to a servo amplifier, or when the optical hub unit connected after an optical hub unit is not connected to a servo amplifier either. For optical hub units connected before an optical hub unit connected to a servo amplifier, "1" is stored to the installation status, regardless of whether there is a servo amplifier connection or not. 	S (Operation cycle)
SD726	SSCNETIL/H compatible optical hub unit communication error information (Line 1) QDSK (@P)	SSCNETII/H compatible optical hub unit communication error information (Line 1)	• Checks the communication status (Communication error detected: 1/No communication error detected: 0) of the optical hub unit and stores as bit data. SD726: b0 to b15 (Optical hub unit No. 1 to No. 16 on line 1) SD727: b0 to b15 (Optical hub unit No. 1 to No. 16 on line 2)	
SD727	SSCNETII/H compatible optical hub unit communication error information (Line 2) QDSK (@P)	SSCNETII/H compatible optical hub unit communication error information (Line 2)	(Note): No. 1 to No. 16 is the connection order from the Motion CPU The device contents are not reset by turning power supply of optical hub unit OFF/reset, or by disconnecting/reconnecting communication with the Motion CPU. Reset the device contents manually.	S (Occur an error)
SD803	SSCNET control (Command)	Connect/ disconnect of SSCNET communication Start/release of amplifier-less operation	SD803 is required for connect/disconnect of SSCNET communication and start/release of amplifier-less operation. 0: No command 1 to 32: Disconnect command of SSCNET communication -10: Connect command of SSCNET communication -20: Start command 1 of amplifier-less operation (EMI invalid) -21: Start command 2 of amplifier-less operation (EMI valid) -25: Release command of amplifier-less operation -2: Execute command	U

Ver.!: Refer to Section 1.5 for the software version that supports this function.

Table 1.2 Special register list (Continued)

No.	Name	Meaning	Details	Set by
		g	The Marie for all and a sure of the said No.	(When set)
SD804 (Note-1)		Servo parameter write/read request flag	 The "write/read request" is executed after setting of the axis No. and servo parameter No. 1: 1 word write request 2: 1 word read request 3: 2 word write request (Note-2) 4: 2 word read request (Note-2) "0" is automatically set by Motion CPU after completion of servo parameter write/read request. ("-1" is stored by Motion CPU at write/read error.) 	S/U
SD805		Axis No.	The axis No. to write/read servo parameter is stored. Q173DSCPU: 1 to 32 Q172DSCPU: 1 to 16	
SD806	Servo parameter write/read request	Servo parameter No.	The servo parameter No. to be written/read is stored in hexadecimal. H □ □ □ □ → Parameter No. → Parameter group No. → 0: PA → 9: PO → 1: PB → A: PS → 2: PC → B: PL (MR-J5(W)-□B, and → 4: PE → MR-JE-□B only) → 5: PF → C: PT (MR-J4(W)-□B and MR-JE-□B only) → Fixed at 0 *VCII series/VPH series use H □ □ □ □ → Parameter No. → Parameter group No. → 0: Group 0 → 5: Group 5 → 1: Group 1 → 6: Group 6 → 2: Group 2 → 7: Group 7 → 3: Group 3 → 8: Group 8 → 4: Group 4 → 9: Group 9 *AlphaStep/5-phase use H □ □ □ □ → Parameter ID (Note) (Note): Refer to AlphaStep/5-phase instruction manual for details. *IAI electric actuator controller use H □ □ □ □ → Parameter No. ID (Note) (Note): Refer to IAI electric actuator controller instruction manual for details.	U
SD807		Servo parameter setting value	The setting value of servo parameter to be written is stored when "1: 1 word write request" is set in SD804. (For MR-J5(W)-□B, the setting value (low 1 word) of servo parameter to be written is stored.)	
SD808 SD809		Servo parameter setting value (2 word)	The setting value of servo parameter to be written is stored when "3: 2 word write request" is set in SD804.	

(Note-1): Do not execute the automatic refresh.

(Note-2): This can be set only in MR-J5(W)-□B, VCII series/VPH series, and IAI electric actuator controller.

APPENDIX 1.3 Replacement of special relays/special registers

When a project of Q17□HCPU(-T)/Q17□CPUN(-T)/Q17□CPU is converted into a project of Q17□D(S)CPU by "File diversion" in MT Developer2, they are automatically allocated to "Automatically converted to special relays (SM2000 to SM2255), special registers (SD2000 to SD2255)". (Refer to table 1.3 and table 1.4.)

"Automatically converted to special relays (SM2000 to SM2255), special registers (SD2000 to SD2255)" output the same statuses and data as the "Special relay, special register of Q17 \square D(S)CPU".

When replacing "automatically converted to special relays (SM2000 to SM2255), special registers (SD2000 to SD2255)" into "Special relay, special register of Q17 \square D(S)CPU", confirm the device usage condition by "List of used device" of MT Developer2. (Refer to table 1.3 and table 1.4.)

Refer to the help of MT Developer2 for operation procedure of the list of used device.

POINT

When a project of Q17□HCPU(-T)/Q17□CPUN(-T)/Q17□CPU are copied from other project by program editor in MT Developer2, they are not replaced to "automatically converted to special relays (SM2000 to SM2255), special registers (SD2000 to SD2255)".

REMARK

Confirm the device usage condition by "List of used device" of MT Developer2" to change the device number used in a project of Q17 \square HCPU(-T)/Q17 \square CPUN(-T)/Q17 \square CPU except the special relays or special registers to the device number of Q17 \square D(S)CPU. (Refer to "APPENDIX 4.2 Comparison of devices".)

Table 1.3 Replacement of special relays

	Devic	e No	-		
	-11/G1/1 GPU 1 - 1		Q17□D(S)CPU	Name	Remark
Special relays	Special relay allocated device	converted to special relays	Special relays		
M9000	M2320	SM2000	SM60	Fuse blown detection	
M9005	M2321	SM2005	SM53	AC/DC DOWN detection	
M9006	M2322	SM2006	SM52	Battery low	
M9007	M2323	SM2007	SM51	Battery low latch	
M9008	M2324	SM2008	SM1	Self-diagnostic error	
M9010	M2325	SM2010	SM0	Diagnostic error	
M9025	M3136	_	_	Clock data set request	It operates by the clock data of CPU No.1
M9026	M2328	SM2026	SM211	Clock data error	
M9028	M3137	SM2028	SM801	Clock data read request	
M9036	M2326	SM2036	SM400	Always ON	
M9037	M2327	SM2037	SM401	Always OFF	
M9060	M3138	SM2060	_	Diagnostic error reset	Use M2039 for error reset operation.
M9073	M2329	SM2073	SM512	Motion CPU WDT error	
M9074	M2330	SM2074	SM500	PCPU READY complete	
M9075	M2331	SM2075	SM501	Test mode ON	
M9076	M2332	SM2076	SM502	External forced stop input	
M9077	M2333	SM2077	SM513	Manual pulse generator axis setting error	
M9078	M2334	SM2078	SM510	TEST mode request error	
M9079	M2335	SM2079	SM516	Servo program setting error (SV13/SV22)/ Motion program setting error (SV43)	
M9216	M2345	SM2216	SM528	No.1 CPU MULTR complete	
M9217	M2346	SM2217	SM529	No.2 CPU MULTR complete	
M9218	M2347	SM2218	SM530	No.3 CPU MULTR complete	
M9219	M2348	SM2219	SM531	No.4 CPU MULTR complete	
M9240	M2336	SM2240	SM240	No.1 CPU resetting	
M9241	M2337	SM2241	SM241	No.2 CPU resetting	
M9242	M2338	SM2242	SM242	No.3 CPU resetting	
M9243	M2339	SM2243	SM243	No.4 CPU resetting	
M9244	M2340	SM2244	SM244	No.1 CPU error	
M9245	M2341	SM2245	SM245	No.2 CPU error	
M9246	M2342	SM2246	SM246	No.3 CPU error	
M9247	M2343	SM2247	SM247	No.4 CPU error	

POINT

- (1) The special relay allocated devices (M2320 to M2399, M3136 to M3199) of Q17□HCPU(-T)/Q17□CPUN(-T)/Q17□CPU are not allocated to "Automatically converted to special relays". Confirm the device usage condition by "List of used device" of MT Developer2 to change them. (Refer to table 1.3.)
- (2) "Automatically converted to special relays SM2028 (Clock data set request)" is shown below.
 - Device OFF to ON : "Special relay of Q17□D(S)CPU" ON
 - Device ON to OFF : "Special relay of Q17□D(S)CPU" OFF

Table 1.4 Replacement of special registers

Dev	rice No.	-		
Q17□HCPU(-T)/	Automatically			
Q17□CPUN(-T)/Q17□CPU	converted to	Q17□D(S)CPU	Name	Remark
Special registers	special registers	Special registers		
D9000	SD2000	SD60	Fuse blown No.	
D9005	SD2005	SD53	AC/DC DOWN counter No.	
D9008	SD2008	SD0	Diagnostic errors	
D0040	000040	CD4	Clock time for diagnostic error occurrence	
D9010	SD2010	SD1	(Year, month)	
D9011	SD2011	SD2	Clock time for diagnostic error occurrence (Day, hour)	
D0040	CD2042	CD2	Clock time for diagnostic error occurrence	
D9012	SD2012	SD3	(Minute, second)	
D9013	SD2013	SD4	Error information categories	
D9014	SD2014	SD5	Error common information	
D9015	SD2015	SD203	Operating status of CPU	
D9017	SD2017	SD520	Scan time	
D9019	SD2019	SD521	Maximum scan time	
D9025	SD2025	SD210	Clock data (Year, month)	
D9026	SD2026	SD211	Clock data (Day, hour)	
D9027	SD2027	SD212	Clock data (Minute, second)	
D9028	SD2028	SD213	Clock data (Day of week)	
D9060	SD2060	_	Diagnostic error reset error No.	Use M2039 for error reset operation.
D9061	SD2061	SD395	Multiple CPU No.	•
D0440		SD508	SSCNET control (Status)	
D9112	SD2112	SD803	SSCNET control (Command)	
D9182	SD2182	SD510		
D9183	SD2183	SD511	Test mode request error	
D9184	SD2184	SD512	Motion CPU WDT error cause	
D9185	SD2185	SD513		
D9186	SD2186	SD514	Manual pulse generator axis setting error	
D9187	SD2187	SD515		
D9188	SD2188	SD522	Motion operation cycle	
D9189	SD2189	SD516	Error program No.	
D9190	SD2190	SD517	Error item information	
D9191	SD2191	SD502	Servo amplifier loading information	
D9192	SD2192	SD503		
D9193	SD2193	SD504	Real mode/virtual mode switching error	
D9194	SD2194	SD505	information	
D9195	SD2195	SD506	momadon	
D9196	SD2196	_	PC link communication error codes	Q173D(S)CPU/ Q172D(S)CPU does not support PC link communication.
D9197	SD2197	SD523	Operation cycle of the Motion CPU setting	
D9200	SD2200	SD200	State of switch	
D9201	SD2201	_	State of LED	Use 7-segment LED in Q173D(S)CPU/Q172D(S)CPU.

POINT

"Automatically converted to special registers SD2112 (SSCNET control)" are reflected to the Q17 \square D(S)CPU special registers by setting the data to devices.

APPENDIX 2 System Setting Errors

Motion CPUs generate a system configuration error under the following conditions.

Table 2.1 System Setting Errors

Custom	atting array						
	setting error						
Inionna			7-segment	Error			Operation at
Error	Error	Error name QD	LED	code	Error cause	Check timing	error
code	individual		(Note-1)	(Note-2)			occurrence
(SD550)	information						
	(SD551)	LAVEDDOD					
2	Base No.,	LAY ERROR (SL * *) (Note-4)			The slot set in system settings is vacant or a		
	Slot No.	(SL * *) (**** /			different module is installed.	-	
					• The axis No. setting overlaps in the system settings.		
					• The axis No. (function select switch) setting of servo		
					amplifier overlaps in the same SSCNETII line.		
					• When MR-J5W-□B, MR-J4W-□B, or MR-JE-□B		
	Avia Na of				are used, the axis setting equal to the number of	Multiple CPU	
3	Axis No. of servo	AXIS NO.		10014	used axes set in the servo amplifier is not set in the	system's power	
3	amplifier	MULTIDEF		(Note-3)	system setting.The load of the fixed cycle system processing is	supply ON/	
	ampiniei				high, and communication has become unstable.	Reset	
					(Refer to Section 4.19 for details.)		
					• The SSCNETII cable is disconnected, or there is a		
					bad connection due to improper insertion in the		
					SSCNETII cable connector.		Cannot be
		(0) AMP NO SETTING			The servo amplifier is not set even by one axis in	1	started.
4	None (0)				the system settings.		(Motion CPU
	Base No.,	SL * * UNIT		10016	The module installed in the slot of the motion CPU		system
6	Slot No.	ERROR (Note-4)		(Note-5)	control is abnormal.	Always	setting error)
						Multiple CPU system's power supply ON/	
					The setting which cannot use the driver		
8	Axis No.	_	"AL" flashes		communication is carried out with the motion	At start of	
			3- times		controller and the servo amplifier corresponding to	communication	
			\downarrow		the driver communication.	with servo	
			"L01" display			amplifier	
40		LIO DOINTO OVED			The number of actual I/O points set in system		
10		I/O POINTS OVER			settings exceeds 256.	Multiple CPU	
11	None (0)	AXIS NO. ERROR			System setting data is not written.	system's power	
	INOTIC (U)	SYS.SET DATA			System setting data is not written.	supply ON/	
13		ERR			System setting data is written without relative check.	Reset	
		LIMA	ļ		Or it is written at the state of error occurrence.		
				10014	The servo amplifier that cannot be used for the		The servo
		AMP TYPE		(Note-3)	operating system software is set in the system	Servo	amplifier for
		ERROR * *			settings.	amplifier's	target axis
14	Axis No.	(* * : Axis No.1 to			The servo amplifier series set in the system setting	power supply	does not
		32)			and installed servo amplifier series is different.	ON	operate, the
					An operation cycle that the servo amplifier does not		axis does not
					support has been set		start.
15		ROM ERROR1			Type of the operating system software of data written to BOM is different.		
40		DOM EDDOSS			written to ROM is different.	1	Cannot be
16		ROM ERROR2			Data is not written to ROM.	Multiple CPU	started.
	None (0)				• Data size of ROM is abnormal.	system's power	(Motion CPU
	(0)	ROM ERROR3			• Execute the ROM writing again.	supply ON/	system
17		(* *)			Check the adjustment for the version of	Reset	setting error)
		,			Motion CPU, MT Developer2 and operating		3 /
					system software.		

Table 2.1 System Setting Errors (Continued)

informa	setting error		7-segment	Error			Operation at						
Error code (SD550)	individual information (SD551)	Error name QD	LED (Note-1)	code (Note-2)	Error cause	Check timing	error occurrence						
18	None (0)	ROM ERROR4 (**)			Data of ROM is abnormal. Execute the ROM writing again. Check the adjustment for the version of Motion CPU, MT Developer2 and operating system software.								
20	Base No., Slot No.	CAN'T USE SL (**) (Note-4)			The motion modules that cannot be used are installed. Use the Motion modules (Q172DLX, Q173DPX, Q172DEX).								
21	Base No., Slot No.	UNIT SET ERR (**) (Note-4)			The system setting data that set the motion modules that cannot be used are written. Use the MT Developer2 of version corresponding to the Motion modules (Q172DLX, Q173DPX, Q172DEX).								
22	None (0)	SAFERY SYS.ERR.			 The safety function parameters are set to the motion CPU that does not support the safety observation function. The safety signal monitor parameter is set to other than CPU No.2. 	Multiple CPU system's power supply ON/ Reset/							
24		Fixed parameter			The fixed parameter is not written.	M2000 ON							
25	†	unregistered error Parameter block	"AL" flashes 3- times 100 (Not "L01" display		The parameter block is not written.								
		unregistered error		"AL" flashes 3- times		The servo parameter of the system setting axis is		Cannot be started.					
26	Axis No.	Servo parameter unregistered error			↓	\downarrow	↓	↓ (No	(Note-3)	not written. • A servo amplifier model that the motion controller operating system software does not support is set in the system setting. (When using MR-J5(W)-□B)		(Motion CPU system setting error)	
27	None (0)	Software security key error				The software security keys of the motion controller OS and the user project do not match. The software security key is embedded only in either of the motion controller OS or the user project.							
28	None (0)	_			The number of SSCNETII/H head module stations exceeds the number of maximum stations which can be used at operation cycle.								
29	Multiple	_			The user setting area of Multiple CPU high speed transmission area is setting to less than 512 points in system of Multiple CPU synchronous control.	AAAL - ii W							
30	CPU No. (2 to 4)	_				The operating cycle is not same setting for master CPU and slave CPU or is setting to less than 0.88ms in system of Multiple CPU synchronous control.	At the initial process complete of Multiple CPU						
31		_			Setting multiple master CPU in system of Multiple CPU synchronous control.	synchronous control after							
	†		•		Master CPU is not setting in system of Multiple CPU	power ON of Multiple CPU							
32	None (0)	_									synchronous control. Master CPU cannot be detected in system of Multiple CPU synchronous control, since each CPU startup timing is different.	system.	

Table 2.1 System Setting Errors (Continued)

	setting error		7-segment	Error			
Error code (SD550)	Error individual information (SD551)	Error name QD		code (Note-2)	Error cause	Check timing	Operation at error occurrence
33	None (0)	I	"AL" flashes 3- times ↓ "L01" display	10014 (Note-3)	Slave CPU is not setting in system of Multiple CPU synchronous control. Slave CPU cannot be detected in system of Multiple CPU synchronous control, since each CPU startup timing is different.	At the initial process complete of Multiple CPU synchronous control after power ON of Multiple CPU system.	Cannot be started. (Motion CPU system setting error)

(Note-1): ""AL" flashes 3-times \rightarrow "L01" display" (Repetition) Error code is not displayed.

(Note-3): When the error code 10014 occurs, the system setting error flag (M2041) turns ON and the error name of table 2.1 is displayed on the error list monitor of MT Developer2.

(Note-4): " \ast * " part is indicated the following contents.

(Example) For LAY ERROR (SL * *)

LAY ERROR(SL * *)

Slot No.

Base No.

(Note-5): When the error code 10016 occurs, the motion slot fault detection flag (M2047) turns ON and the error name of table 2.1 is displayed on the error list monitor of MT Developer2.

⁽Note-2): Error code stored in diagnostic error (SD0)


APPENDIX 3 Self-diagnosis Error

Multiple CPU related errors are stored in the CPU shared memory "self CPU operation information area (1H to 1CH)" of each module and self diagnostic error information (SD0 to SD26) of the special register (SD) as the self diagnostic errors.


Error codes (1000 to 9999) of Multiple CPU related errors are common to each CPU module.

The error code (10000 to 10999) is stored as required at Motion CPU-specific error occurrence.

Confirm the error codes and contents by "Motion error history" on Motion CPU error batch monitor of MT Developer2 and remove the error cause if an error occurs.

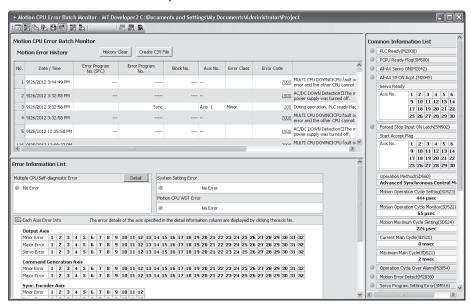

Confirm operation status and error occurrence of each CPU used in the Multiple CPU system by PLC diagnosis of GX Works2/GX Developer.

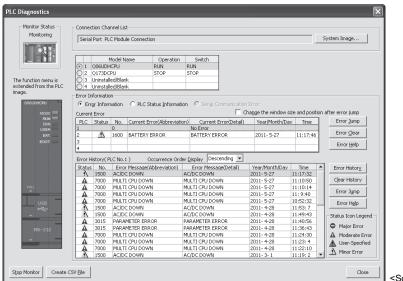

<Screen: GX Works2>

MEMO		

(1) Multiple CPU related errors which occurs in Motion CPU Each digit of error code has been described as follows.

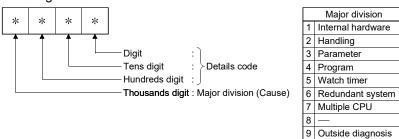


Table 3.1 Multiple CPU related errors which occurs in Motion CPU (1000 to 9999)

					·			
Item	Error code (SD0)	Error message	Common information (SD5 to SD15)	Individual Information (SD16 to SD26)	7-segment LED display	CPU operation status	Diagnostic timing	
	1000							
	1001							
	1002							
	1003							
	1004							
	1004	MAIN CPU DOWN	_	_		Stop	Always	
	1005							
CPU hard								
error	1007							
	1008							
	1009							
	1105						At power ON/	
	1150	RAM ERROR	_	_	"AL" flashes 3 times	Stop	At reset	
					AL liasiles 5 tilles			
_	1300	FUSE BREAK OFF	Module No.	_	Steady "A1" display	Stop	Always	
Module hard error	1401	SP. UNIT DOWN	Module No.	_	4 digits error code is displayed in two flashes of 2 digits each.	Stop	At power ON/ At reset	
	1403						Always	
	1413		_					
Module hard error	1414		Module No.				Always	
Base	1415	CONTROL-BUS. ERR.	Base No. (Note-2)	_		Stop	_	
	1416		CPU No. (Note-1)				At power ON/ At reset	

⁽Note-1): CPU No. is stored in slot No. of common information classification.

⁽Note-2): Base No. stored in "common information classification code" of "error information classification code" \rightarrow "0 : Main base, 1 to 7 : Number of extension bases.

	Error code	Error contents and cause	Corrective action		
	` ′				
Error code (SD0) 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1105 1150 1300 1401					
		Runaway or failure of CPU module.	40-1		
		(1) Malfunctioning due to noise or other reason	(1) Take noise reduction measures.		
		(2) Hardware fault	(2) Reset the CPU module and RUN it again. If the same error is displayed again, this suggests a CPU module hardware fault.		
			Explain the error symptom and get advice from our sales		
			representative.		
			, ,		
		The CPU shared memory in the CPU module is faulty.			
	1150	The memory of the CPU module in the Multiple CPU high speed transmission area is faulty.			
	1300	There is an output module with a blown fuse.	Check FUSE. LED of the output modules and replace the module whose LED is lit.		
	1401	(1) There was no response from the Motion module/intelligent function module in the initial processing. (2) The size of the buffer memory of the Motion module/intelligent function module is invalid. (3) The unsupported module is mounted.	(1) Set the Motion module/intelligent function module used in the Motion CPU in the system setting. (2) When the unsupported module is mounted, remove it. When the corresponding module is supported, this suggests the Motion module, intelligent function module, CPU module and/or base unit is expecting a hardware fault. Explain the error symptom and get advice from our sales representative.		
	1403	(1) An error is detected at the intelligent function module. (2) The I/O module (including intelligent function module) is nearly removed or completely removed/mounted during running.	The CPU module, base unit and/or the intelligent function module that was accessed is experiencing a hardware fault. Explain the error symptom and get advice from our sales representative.		
	1413	An array is detected on the greaten bus			
	1414	An error is detected on the system bus.	Reset the CPU module and RUN it again. If the same error is displayed		
	1415	Fault of the main or extension base unit was detected.	again, the intelligent function module, CPU module or base unit is faulty.		
	1416	System bus fault was detected at power-on or reset.	Explain the error symptom and get advice from our sales representative.		

Table 3.1 Multiple CPU related errors which occurs in Motion CPU (1000 to 9999) (Continued)

Item	Error code (SD0)	Error message	Common information (SD5 to SD15)	Individual Information (SD16 to SD26)	7-segment LED display	CPU operation status	Diagnostic timing	
	1430		_					
Multiple CPU high speed bus Power supply Battery Handling the intelligent	1431			_	"AL" flashes 3 times	Stop	At power ON/ At reset	
	1432	MULTI-C.BUS ERR.	CPU No.	_	4 digits error code is displayed in two flashes of 2 digits each.	Зюр		
	1433							
	1434						Always	
	1435							
Power supply	1500	AC/DC DOWN	_	_	None	Continue	Always	
Battery	1600	BATTERY ERROR	Drive name	_	Steady "BT1"	Continue	Always	
	1000	DATTERT ERROR	Drive name		Steady "BT2"	Continue	7 iway3	
	2100		Module No.					
	2107							
	2124	SP. UNIT LAY ERR.	_		"AL" flashes 3 times			
intelligent function module/ Multiple CPU	2125			_	Steady "A1" display 4 digits error code is	Stop	At power ON/ At reset	
module	2140		Module No.		displayed in two flashes of 2 digits each.			
	2150	SP. UNIT VER. ERR.						

Error code (SD0)	Error contents and cause	Corrective action
1430	The error of self CPU is detected in the Multiple CPU high speed bus.	Reset the CPU module and RUN it again. If the same error is displayed again, this suggests a CPU module hardware fault. Explain the error symptom and get advice from our sales representative.
1431	The communication error with other CPU is detected in the Multiple CPU high speed bus.	 (1) Take noise reduction measures. (2) Check the main base unit mounting status of the CPU module. (3) Reset the CPU module and RUN it again. If the same error is displayed again, this suggests a CPU module or base unit hardware fault. Explain the error symptom and get advice from our sales representative.
1432	The communication time out with other CPU is detected in the Multiple CPU high speed bus.	Reset the CPU module and RUN it again. If the same error is displayed again, this suggests a CPU module hardware fault. Explain the error symptom and get advice from our sales representative.
1433	The communication error with other CPU is detected in the Multiple	(1) Take noise reduction measures. (2) Check the main base unit mounting status of the CPU module. (3) Reset the CPU module and RUN it again. If the same error is displayed.
1434	CPU high speed bus.	again, this suggests a CPU module or base unit hardware fault. Explain the error symptom and get advice from our sales
1500	A momentary power supply interruption has occurred. The power supply went off.	representative. Check the power supply.
1600	(1) The battery voltage in the CPU module has dropped below stipulated level.(2) The battery holder unit that install the battery is not mounted to the CPU module.	(1) Change the battery. (2) Mount the battery holder unit that installs the battery.
2100	In the I/O assignment setting of PLC CPU, the intelligent function module was allocated to an I/O module or vice versa.	Make the PLC parameter's I/O assignment setting again so it is consistent with the actual status of the intelligent function module and the CPU module.
2107	The first I/O No. set in the system settings is overlapped with the one for another module.	Make the I/O No. setting again so it is consistent with the actual status of the modules.
2124	(1) A module is mounted on the 65th or higher slot.(2) The extension base unit set to "None" is mounted.	(1) Remove the module mounted on the 65th or later slot. (2) Remove the extension base unit set to "None".
2125	A module which the CPU cannot recognize has been mounted. There was no response form the intelligent function module.	(1) Install an usable module. (2) The intelligent function module is experiencing a hardware fault. Explain the error symptom and get advice from our sales representative.
2140	The motion modules (Q172DLX, Q172DEX, Q173DPX, Q172LX, Q172EX (-S1/-S2/-S3), Q173PX (-S1)) are installed in CPU slot or I/O 0 to 2 slot.	Remove the Motion modules installed CPU slot or I/O 0 to 2 slot.
2150	In a Multiple CPU system, the control CPU of intelligent function module incompatible with the Multiple CPU system is set to other than CPU No.1.	(1) Change to the intelligent function module (function version B or later) compatible with the Multiple CPU system. (2) Change the control CPU of intelligent function module incompatible with the Multiple CPU system to CPU No.1.

Table 3.1 Multiple CPU related errors which occurs in Motion CPU (1000 to 9999) (Continued)

		ontinaca)						
Item	Error code (SD0)	Error message	Common information (SD5 to SD15)	Individual Information (SD16 to SD26)	7-segment LED display	CPU operation status	Diagnostic timing	
	3001			Parameter No.			At power ON/ At reset/ STOP → RUN	
Parameter	3013	PARAMETER ERROR	_			Stop	At power ON/ At reset	
	3015			Parameter No./ CPU No.				
			ODIAN-		"AL" flashes 3 times		Always	
	7000	MULTI CPU DOWN	CPU No. (Note-1) (Note-3)	_	Steady "A1" display 4 digits error code is	Stop	At power supply ON/	
	7002		CPU No. (Note-1)		displayed in two flashes of 2 digits each.		at reset	
	7010		CPU No. (Note-1)					
Multiple CPU	7011	MULTI EXE. ERROR	_	_		Stop	At power supply ON/ at reset	
	7013		CPU No.					
	7020	MULTI CPU ERROR	CPU No. (Note-1)	_		Continue	Always	
	7030	COLLLAY EDGGS	CPU No.			Otes	At power	
	7031	CPU LAY. ERROR		_		Stop	supply ON/ at reset	
	7035	†	Module No.					


(Note-1): CPU No. is stored in slot No. of common information classification.

(Note-3): Because a stop error or CPU No. except CPU No. that it was reset becomes MULTI CPU DOWN simultaneously, a stop error or CPU No. except CPU No. that it was reset may store in the classification of common error information depending on timing.

	Error code (SD0)	Error contents and cause	Corrective action
	3001	The parameter settings are corrupted.	 (1) Check the parameter item corresponding the numerical value (parameter No.), and correct it. (2) Rewrite corrected parameters to the CPU module, reload or reset the Multiple CPU system power supply. (3) If the same error occurs, it is thought to be a hardware error. Explain the error symptom and get advice from our sales representative.
	3012	Multiple CPU setting of Multiple CPU setting parameter or control CPU setting of system setting differs from that of the reference CPU settings.	Match the Multiple CPU setting of Multiple CPU setting parameter or control CPU setting of system setting with that of the reference CPU (CPU No.1) settings.
		Multiple CPU automatic refresh setting is any of the following. (1) When a bit device is specified as a refresh device, a number other than a multiple of 16 is specified for the refresh start device. (2) The device specified is other than the one that may be specified. (3) The number of send points is an odd number. (4) The total number of send points is greater than the maximum number of refresh points.	 Check the following in the Multiple CPU automatic refresh setting and make correction. (1) When specifying the bit device, specify a multiple of 16 for the refresh start device. (2) Specify the device that may be specified for the refresh device. (3) Set the number of send points to an even number. (4) Set the total number of send points is within the range of the maximum number of refresh points.
	3015	(1) "Use multiple CPU high speed transmission" is not set in the Multiple CPU setting of Universal model QCPU. (2) In a Multiple CPU system, the CPU verified is different from the one set in the parameter setting.	(1) Set "Use multiple CPU high speed transmission" in the Universal model QCPU. (2) Check the parameter item corresponding to the numerical value (parameter No./CPU No.) and parameter of target CPU, and correct them.
	7000	In the operating mode of a Multiple CPU system, a CPU error occurred at the CPU where "All station stop by stop error of CPU" was selected. In a Multiple CPU system, CPU No.1 resulted in stop error at poweron and the other CPU cannot start. (This error occurred at CPU No.2 to 4)	Check the error of the CPU resulting in CPU module fault, and remove the errors.
_	7002	There is no response from the target CPU module in a Multiple CPU system during initial communication.	Reset the CPU module and RUN it again. If the same error is displayed again, this suggests the hardware fault of any of the CPU modules. Explain the error symptom and get advice from our sales representative.
	7010	In a Multiple CPU system, a faulty CPU module was mounted.	Replace the faulty CPU module.
	7011	Either of the following settings was made in a Multiple CPU system. (1) Multiple CPU automatic refresh setting was made for the inapplicable CPU module. (2) "I/O sharing when using multiple CPUs" setting was made for the inapplicable CPU module.	(1) Correct the Multiple CPU automatic refresh setting. (2) Correct the "I/O sharing when using multiple CPUs" setting.
		The system configuration for using the Multiple CPU high speed transmission function is not met. (1) The QnUD□CPU is not used for the CPU No.1. (2) The Multiple CPU high speed main base unit (Q3□DB) is not used.	Change to the system configuration to meet the conditions for using the Multiple CPU high speed transmission function.
	7013	(1) CPU module which cannot be mounted in QnUD□CPU is mounted. (The module may break down.)(2) Q173HCPU, Q172HCPU, Q173CPUN, Q172CPUN is mounted.	Remove Q173HCPU, Q172HCPU, Q173CPUN, Q172CPUN.
		In the operating mode of a Multiple CPU system, an error occurred in the CPU where "system stop" was not selected. (The CPU module where no error occurred was used to detect an error.)	Check the error of the CPU resulting in CPU module fault, and remove the error.
	7030	An assignment error occurred in the CPU-mountable slot (CPU slot, I/O slot 0 to 2) in excess of the number of CPU slot (with in the range of CPU number setting parameter).	(1) Set the same value to the number of CPU modules specified in the Multiple CPU setting of the PLC parameter and the number of mounted CPU modules (including CPU (empty)).
	7031	An assignment error occurred in the CPU slot (within the range of the CPU number setting parameter).	(2) Make the same as the state of the installation of CPU module set in the system setting.
	7035	The CPU module has been mounted on the inapplicable slot.	Mount the CPU module on the applicable slot.

(2) Motion CPU-specific errors

Each digit of error code has been described as follows. Refer to programming manuals for error details.

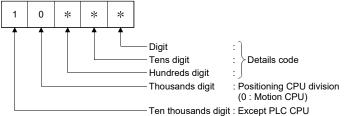

	Details code
002	Minor/major error (Command generation axis)(SV22)
003	Minor/major error
004	Minor/major error (Virtual servo motor axis)(SV22)
005	Minor/major error (Synchronous encoder axis)(SV22)
006	Servo error (MR-J3-□B, MR-J3-□B compatibility mode)
007	Servo program setting error (SV13/SV22)/
007	Motion program setting error (SV43)
800	Mode switching error (SV22)
009	Manual pulse generator axis setting error
010	TEST mode request error
011	WDT error
014	System setting error
015	Servo error (MR-J4-□B/MR-JE-□B)
016	Motion slot fault
017	Servo error (MR-J5-□B)
020	Motion SFC control error (F/FS)
021	Motion SFC control error (G)
022	Motion SFC control error (K or others (Not F/FS, G))
023	Motion SFC control error (Motion SFC chart)
030	Motion CPU internal bus error
040	Inverter error
041	Servo driver error (CKD Nikki Denso)
042	SSCNETⅢ/H head module error
043	Stepping driver error
044	Stepping driver operation error
050	Safety observation error (Alarm)
051	Safety observation error (Warning)
060	Optical hub unit connection error
061	Optical hub unit communication error

Table 3.2 Motion CPU-specific errors (10000 to 10999)

Error code (SD0)	Error messages	Common information (SD5 to SD15)	Individual information (SD16 to SD26)	7-segment LED display	CPU operation status	
10002						
10003				N.		
10004				None		
10005						
10006				"AL" flashes 3 times		
10000				Steady "S01" display		
10007	MC.UNIT ERROR	_	_		Continue	
10008				None		
10009						
10010						
10011				Steady " " display	Stop	

Error code (SD0)	Error contents and cause	Corrective action
10002	Minor/major errors had occurred in command generation axis. (SV22)	Check the Motion error history of MT Developer2 and the minor/major error
10003	Minor/major errors had occurred.	codes of minor/major error code of minor/major error code storage device,
10004	Minor/major errors had occurred in virtual servo motor axis. (SV22)	and remove the error cause.
10005	Minor/major errors had occurred in synchronous encoder axis. (SV22)	Refer to the error codes for error details.
10006	The servo errors had occurred in the servo amplifier (MR-J3-□B, MR-J3-□B compatibility mode) connected to the Motion CPU.	Check the Motion error history of MT Developer2 and the servo error codes of servo error code storage device, and remove the error cause of servo amplifier. Refer to the servo error code for details.
10007	Servo program setting (SV13/SV22)/Motion program setting error (SV43) error occurred.	Check the Motion error history of MT Developer2 and the servo program setting error (SV13/SV22)/Motion program setting error (SV43) storage device (error program No., error item information), and remove the error cause. Refer to the error codes for details.
10008	Real mode/virtual mode switching error occurred. (SV22)	Check the Motion error history of MT Developer2 and the real mode/virtual mode switching error storage device, and remove the error cause. Refer to the real mode/virtual mode switching error codes for details.
10009	Manual pulse generator axis setting error occurred.	Check the Motion error history of MT Developer2 and the manual pulse generator axis setting error storage device, and remove the error cause. Refer to the manual pulse generator axis setting error codes for details.
10010	Lest mode request error occurred	Check the Motion error history of MT Developer2 and the test mode request error storage device, and remove the error cause.
10011	WDT error occurred at Motion CPU	Check the Motion error history of MT Developer2 and the Motion CPU WDT error factors, and remove the error cause.

Table 3.2 Motion CPU-specific errors (10000 to 10999) (Continued)

Error code (SD0)	Error messages	Common information (SD5 to SD15)	Individual information (SD16 to SD26)	7-segment LED display	CPU operation status	
10014				"AL" flashes 3 times ↓ Steady "L01" display	Stop	
10015				"AL" flashes 3 times ↓ Steady "S01" display	Continue	
10016				"AL" flashes 3 times ↓ Steady "L01" display	Stop	
10017				"AL" flashes 3 times ↓ Steady "S01" display	Continue	
10020 10021 10022 10023				None	Continue	
10023					Stop	
10040	MC.UNIT ERROR	_	_			
10041						
10042				"AL" flashes 3 times ↓ Steady "S01" display		
10043					Continue	
10044						
10050						
10051						
10060				None		
10061						

	Error code (SD0)	Error contents and cause	Corrective action		
	10014	System setting error occurred at Motion CPU.	Check the error message on error monitor screen of MT Developer2, and remove the error cause. And then, turn on the power supply again or reset the Multiple CPU system.		
	10015	The servo errors had occurred in the servo amplifier (MR-J4-□B, MR-JE-□B) connected to the Motion CPU.	Check the Motion error history of MT Developer2 and the servo error codes of servo error code storage device, and remove the error cause of servo amplifier. Refer to the servo error code for details.		
	10016	Motion slot fault occurred at Motion CPU.	Check the error message on error monitor screen of MT Developer2, and remove the error cause. And then, turn on the power supply again or reset the Multiple CPU system.		
	10017	The servo errors had occurred in the servo amplifier (MR-J5-□B) connected to the Motion CPU.	Check the Motion error history of MT Developer2 and the servo error codes of servo error code storage device, and remove the error cause of servo amplifier. Refer to the servo error code for details.		
ľ	10020				
Ī	10021		Check the Motion error history of MT Developer2, and remove the error		
	10022	Motion SFC error occurred at Motion SFC program.	cause.		
	10023		Refer to the Motion SFC error code for details.		
	10030	Motion CPU internal bus error occurred.	Motion CPU module hardware fault. Explain the error symptom and get advice from our sales representative.		
	10040	Inverter error occurred in the inverter connected with Motion CPU.	Check the Motion error history of MT Developer2 and the error code of the servo error code storage device. After that, remove the inverter error cause. For the detailed contents of the errors, check the servo error code.		
	10041	An error occurred in servo driver manufactured by CKD Nikki Denso with the Motion CPU connected.	Check the Motion error history of MT Developer2 and the error code of the servo error code storage device. After that, remove the error cause of servo driver manufactured by CKD Nikki Denso. For the detailed contents of the errors, check the servo error code.		
	10042	The errors had occurred in the SSCNETⅢ/H head module connected to the Motion CPU.	Check the Motion error history of MT Developer2 or the error codes of the SSCNETII/H head module error storage device, then release the error cause of the SSCNETII/H head module. For the details of the error definition, check the SSCNETII/H head module error code.		
	10043	Error occurred in the stepping driver connected with Motion CPU.	Check the Motion error history of MT Developer2 and the error code of the		
	10044	Operation error occurred in the stepping driver connected with Motion CPU.	servo error code storage device. After that, remove the stepping driver error cause. For the detailed contents of the errors, check the servo error code.		
	10050	Safety observation error (alarm) occurred.	Check the Motion error history of MT Developer2 or the Safety observation error code storage device, then release the error cause.		
	10051	Safety observation error (warning) occurred.	For the details of the error definition, check the Safety observation error code.		
	10060	The number of the SSCNETⅢ/H compatible Optical Hub units exceeds the limit of connectable units. The SSCNETⅢ/H compatible Optical Hub unit was connected via OUT2 or OUT3.	Reduce the number of the SSCNETⅢ/H compatible Optical Hub units to less than the limit of connectable units. Connect the SSCNETⅢ/H compatible Optical Hub unit via OUT1.		
	10061	An error occurred in the SSCNETⅢ/H compatible Optical Hub unit.	Explain the error symptom and get advice from our sales representative.		

(3) Self-diagnostic error information

No.	Name	Meaning	Details
SD0	Diagnostic errors	Diagnostic error code	Error codes for errors found by diagnosis are stored as BIN data.
SD1			The year (last two digits) and month that SD0 data was updated is stored as BCD 2-digit code. B15 to B8 B7 to B0 Example: January 2006 Year(0 to 99) Month(1 to 12) H0601
SD2	Clock time for diagnostic error occurrence	Clock time for diagnostic error occurrence	The day and hour that SD0 data was updated is stored as BCD 2-digit code. B15 to B8 B7 to B0 Example: 25th, 10am Day(1 to 31) Hour(0 to 23) Hour(0 to 23)
SD3			The minute and second that SD0 data was updated is stored as BCD 2-digit code. B15 to B8 B7 to B0 Example: 35min., 48 sec. Minute(0 to 59) Second(0 to 59) H3548
SD4	Error information categories	Error information category code	Category codes which help indicate what type of information is being stored in the error common information areas (SD5 to SD15) and error individual information areas (SD16 to SD26) are stored. The category code for judging the error information type is stored. B15 to B8 B7 to B0 Individual information category codes Common information category codes The common information category codes store the following codes. No error Module No./CPU No./Base No. The individual information category codes store the following codes. No error Parameter No. 13:Parameter No./CPU No.
SD5 to SD15	Error common information	Error common information	Common information corresponding to the diagnostic error (SD0) is stored. The error common information type can be judged by SD4(common information category code). Module No./CPU No./Base No. No. Meaning SD5 Module No./CPU No./Base No. SD6 I/O No. SD7 to Empty SD15
SD16 to SD26	Error individual information	Error individual information	Individual information corresponding to the diagnostic error (SD0) is stored. The error individual information type can be judged by SD4(individual information category code). No.

(4) Release of Multiple CPU related error

The release operation of errors that continues operation for CPU can be executed.

Release the errors in the following procedure.

- 1) Remove the error cause.
- 2) Turn off the Motion error detection flag (M2039).

The special relays, special registers and 7-segment LED for the errors are returned to the status before error occurs after release of errors. If the same error is displayed again after release of errors, an error is set again, and the Motion error detection flag (M2039) turns on.

(5) Error setting on servo warning QDS(

Setting whether to output error on servo warning to the motion error history or self-diagnosis error of MT Developer2 is possible.

Set this parameter in the system basic setting of system setting. (Refer to Section 3.1.3.)

APPENDIX 4 Differences Between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU

APPENDIX 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU

Common differences to the operating system software are shown in Table 4.1.

Refer to "APPENDIX 4.3 Differences of the operating system software " for characteristic differences to the operating system software. And, refer to "APPENDIX 4.2 Comparison of devices " for detailed differences of devices.

Table 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU

	14	04720000011/04720000011	047300001/ 043/047300001// 043	0470110011/0470110011
<u> </u>	Item	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
Pe	ripheral I/F	USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU)	USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU) ^(Note-1)	USB/SSCNET
Ва	ttery	Den	nand	Add Q6BAT at continuous power failure for 1 month or more.
Fo	rced stop input	Use EMI terminal of Motion CPU r Use device set by forced stop input		Use device set by forced stop input setting in the system setting.
Multiple CPU high speed transmission memory for data transfer between CPU modules		Included		_
	mber of real I/O points K/PY)	256 points (Built-in interface in Motion CPU (Input 4 points) + I/O module + Intelligent function module)	256 points (I/O module)	256 points (I/O module)
	Internal relays (M)	12288 points None (Latch for M is possible by latch setting)		Total 8192 points
	Latch relays (L) Special relays (M)	None (Latch for M is po	ossible by latch setting)	256 points
(I)		2256	points	
Device	Special registers (D)		_	256 points
۵ ا	Special registers (SD)	2256	points	
	Motion registers (#)	12288	points	8192 points
	Multiple CPU area devices (U□\G)	Up to 143	336 points	_

(Note-1): Q173DCPU-S1/Q172DCPU-S1 only

Table 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU (Continued)

	14	m		0172090011/0172090011	•	,
	Item			Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
Motion dedicated PLC instructions		ed	SV13/ SV22	D(P).DDRD, D(P).DDWR, D(P).SFCS, D(P).SVST, D(P).CHGT, D(P).CHGT2, D(P).CHGV, D(P).CHGVS (Note-2), D(P).CHGA, D(P).CHGAS (Note-2), D(P).GINT	D(P).DDRD, D(P).DDWR, D(P).SFCS, D(P).SVST, D(P).CHGT, D(P).CHGV, D(P).CHGA, D(P).GINT	S(P).DDRD, S(P).DDWR, S(P).SFCS, S(P).SVST, S(P).CHGT, S(P).CHGV, S(P).CHGA, S(P).GINT
_			SV43	_	D(P).DDRD, D(P).DDWR, D(P).SFCS, D(P).SVST, D(P).CHGT, D(P).CHGV, D(P).CHGA	S(P).DDRD, S(P).DDWR, S(P).SFCS, S(P).SVST, S(P).CHGT, S(P).CHGV, S(P).CHGA
	Interlock co	onditic	on	Multiple instructions are executable condition by the self CPU high spee CPU□. □:CPU No.		Interlock condition by the to self CPU high speed interrupt accept flag from CPU□ is necessary.
			SV13	Q172DLX, Q173DPX, Q173DSXY	Q172DLX, Q173DPX, Q173DSXY ^(Note-1)	Q172LX, Q173PX
Moti	on module:	s	SV22	Q172DLX, Q172DEX, Q173DPX, Q173DSXY	Q172DLX, Q172DEX, Q173DPX, Q173DSXY ^(Note-1)	Q172LX, Q172EX, Q173PX
			SV43	_	Q172DLX, Q173DPX	Q172LX, Q173PX
Syst	System setting			QnUD(E)(H)CPU/QnUDVCPU is set as CPU No.1. Only Multiple CPU high speed main base unit (Q35DB/Q38DB/Q312DB) can be used as main base unit. Q172DLX, Q172DEX and Q173DPX cannot be installed to I/O 0 to 2 slot.		 • QnUD(H)CPU is set to CPU No.1. • Q3□B can be used as a main base unit. • Q172LX, Q172EX and Q173PX can be mounted to I/O 0 to 2 slot.
Latc	h clear			Remote operation		L.CLR switch
RUN	I/STOP			Remote operation, RUN/STOP switch		RUN/STOP switch
RON	∕l operation	ı		 ROM writing is executed with mode operated by RAM/ mode operated by ROM. ROM writing can be executed for the data of MT Developer2. 		Rom writing is executed with installation mode/ mode written in ROM.
	el of opera	ting	SV13/ SV22	SW8DNC-SV□Q□		SW6RN-SV□Q□
syst	em softwar	е	SV43	_	SW7DNC-SV□Q□	SW5RN-SV□Q□
CPL	J module N	0.1		QnUD(E)(H)CF	PU/QnUDVCPU	Qn(H)CPU
	Installation orders CPU No.2 or later		PU No.2	No restriction		Install Motion CPU module on the right-hand side of PLC CPU module.
Combination of Motion CPU modules		on CPU	Combination with Q173DCPU(-S1)/Q172D(-S1)CPU	Combination with Q173DSCPU/Q172DSCPU	Combination with Q173CPUN(-T).	
CPU empty slot			Settable betwee	n CPU modules	Not settable between CPU modules	
CPL shar	hig J tra	ultiple gh spe nsmis ea	eed	Provided		None
men	Mu	cess l ultiple ared r	,	Pos	sible	Impossible

(Note-1): Q173DCPU-S1/Q172DCPU-S1 only (Note-2): SV22 advanced synchronous control only

Table 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU (Continued)

	Item	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
	Memory	Multiple CPU high speed transmiss	ion area in CPU shared memory	Automatic refresh area in CPU shared memory
Automatic	Automatic refresh setting	32 range	possible	4 range possible
refresh	Multiple CPU high speed refresh function	Prov	vided	None
LED display		7-segment	LED display	Each LED of MODE, RUN, ERR, M.RUN, BAT and BOOT
Latch	Latch (1)	It is possible to clear with latch clea latch clear.	r(1) and latch clear (1)(2) of remote	Range which can be cleared with the latch clear key.
range setting	Latch (2)	It is possible to clear with lath clear	(1)(2) of remote latch clear.	Range which cannot be cleared with the latch clear key.
All clear fur	nction	Execute with in	stallation mode	Turn off the PLC ready flag (M2000) and test mode ON flag (M9075) to execute all clear.
Release of related erro	Multiple CPU or	Turn off	[†] M2039.	Store the error code to be released in the special register D9060 and turn off to on the special relay M9060.
Self-diagnosis error		When the Motion CPU-specific errors occur, "10000 to 10999" is set in diagnostic errors (SD0) depending on the type of error. At this time, the self-diagnostic error flag (SM1) and diagnostic error flag (SM0) also turn ON.		When the Motion CPU-specific errors occur, 10000 is set in diagnostic errors (D9008). At this time, the self-diagnostic error flag (M9008) and diagnostic error flag (M9010) do not turn ON.
Motion erro (M2039)	r detection flag	M2039 turns ON even if any errors occur in the Motion CPU module.		When the Motion CPU-specific errors occur, M2039 turn ON. M2039 does not turn ON at the Multiple CPU related errors (Error code of D9008: less then 10000) occurrence. (SV13/SV22) (Note): Unusable for SV43 use.
Software st	roke limit	Invalid setting (All units) possible	Invalid setting (degre	ee axis only) possible
Battery erro	or check of Motion	Invalid setting possible		ne valid
Error setting	g on servo	Selectable whether or not output error	Anytime o	utput error
Servo exter	rnal signal	Q172DLX signal, Amplifier input, DI signal, Bit device	Q172DLX signa	ıl, Amplifier input
Optional da function	nta monitor	Up to 6 data (Up to 3 data in SSCNETⅢ)	Up to	3 data
Axis label		32 characters	No	one
Mark detection function		Up to 32	No.	one
Speed-torq	ue control function	Provided	No	one
Torque limi		Individual change/monitoring of positive/negative direction torque limit value		/negative direction torque limit value
Acceleratio time change	n/deceleration e function	Provided	No	one

Table 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU (Continued)

_	,						
	Item		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU		
Home position return function		rn function	Proximity dog method (2 types), Count method (3 types), Data set method (2 types), Dog cradle method, Stopper method (2 types), Limit switch combined method, Scale home position signal detection method, Dogless home position signal reference method, Driver home position return method	Proximity dog method (2 types), Count method (3 types), Data set method (2 types), Dog cradle method , Stopper method (2 types), Limit switch combined method, Scale home position signal detection method	Proximity dog method (2 types), Count method (3 types), Data set method (2 types), Dog cradle method, Stopper method (2 types), Limit switch combined method		
PI-	PID switching co	ommand	Provided	No	ne		
	Servo parameter read/change function		Provided	None			
Se	Security function		Protection by software security key or password	Protection by password			
Dig	ital oscilloscope	function	Word 16CH, Bit 16CH Real-time display possible	Word 4CH, Bit 8CH Real-time display possible			
	Communication	n speed		50Mbps			
		Standard cable		Up to 20m (65.62ft.) between stations num overall distance 320m(1049.87ft.) (20m (65.62ft.) ×16 axes)			
	Transmission Long distance		Up to 50m (164.04ft.) between stations Maximum overall distance 800m (2624.67ft.) (50m (164.04ft.) ×16 axes)				
SSCNE	Servo amplifier		MR-J3-□B, MR-J3W-□B, MR-J3-□B-RJ004, MR-J3-□B-RJ080W, MR-J3-□B Safety, FR-A700, VCII (CKD Nikki Denso), VPH (CKD Nikki Denso)	MR-J3-□B, MR-J3W-□B, MR-J3-□B-RJ004, MR-J3-□B-RJ006, MR-J3-□B-RJ080W, MR-J3-□B Safety, FR-A700, VCI (CKD Nikki Denso)	MR-J3-□B, MR-J3W-□B, MR-J3-□B-RJ004, MR-J3-□B-RJ006, MR-J3-□B Safety		

Table 4.1 Differences between Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/Q172DCPU(-S1)/Q173HCPU/Q172HCPU (Continued)

	Item		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
	Communication speed		150Mbps		
	Transmission	Standard cable	Up to 20m (65.62ft.) between stations Maximum overall distance 320m(1049.87ft.) (20m (65.62ft.) ×16 axes)		
CNETII/H	Transmission distance Long distance cable Servo amplifier		Up to 100m (328.08ft.) between stations Maximum overall distance 1600m (5249.34ft.) (100m (328.08ft.) ×16 axes)	Unusable	
SS			MR-J5-□B, MR-J5-□B-RJ, MR-J5W-□B, MR-J4-□B, MR-J4-□B-RJ, MR-J4W-□B, FR-A800, VCII (CKD Nikki Denso), VPH (CKD Nikki Denso), AlphaStep/5-Phase (ORIENTAL MOTOR), IAI electric actuator controller (IAI)	J5-□B-RJ, IR-J4-□B, R-J4W-□B, 0, ti Denso), ti Denso), ti (ORIENTAL R),	
	Driver communication function		Provided	No	ne
	SSCNETII/H head module connection		Can connect	Cannot	connect
	SSCNETII/H compatible optical hub unit connection		Can connect	Cannot	connect
	Itiple CPU syncl itrol	hronous	Provided	None	

APPENDIX 4.2 Comparison of devices

(1) Motion registers

(a) Monitor devices

Table 4.2 Motion registers (Monitor devices) list

	Device No.			
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
#8000 1	to #8019	#8064 to #8067	Axis 1 monitor device	
#8020 1	to #8039	#8068 to #8071	Axis 2 monitor device	
#8040	to #8059	#8072 to #8075	Axis 3 monitor device	
#8060	to #8079	#8076 to #8079	Axis 4 monitor device	
#8080	to #8099	#8080 to #8083	Axis 5 monitor device	
#8100 1	to #8119	#8084 to #8087	Axis 6 monitor device	
#8120 1	to #8139	#8088 to #8091	Axis 7 monitor device	
#8140	to #8159	#8092 to #8095	Axis 8 monitor device	
#8160	to #8179	#8096 to #8099	Axis 9 monitor device	
#8180	to #8199	#8100 to #8103	Axis 10 monitor device	
#8200	to #8219	#8104 to #8107	Axis 11 monitor device	
#8220	to #8239	#8108 to #8111	Axis 12 monitor device	
#8240	to #8259	#8112 to #8115	Axis 13 monitor device	
#8260	to #8279	#8116 to #8119	Axis 14 monitor device	
#8280	to #8299	#8120 to #8123	Axis 15 monitor device	
#8300	to #8319	#8124 to #8127	Axis 16 monitor device	
#8320	to #8339	#8128 to #8131	Axis 17 monitor device	
#8340	to #8359	#8132 to #8135	Axis 18 monitor device	
#8360	to #8379	#8136 to #8139	Axis 19 monitor device	
#8380	to #8399	#8140 to #8143	Axis 20 monitor device	
#8400	to #8419	#8144 to #8147	Axis 21 monitor device	
#8420	to #8439	#8148 to #8151	Axis 22 monitor device	
#8440	to #8459	#8152 to #8155	Axis 23 monitor device	
#8460	to #8479	#8156 to #8159	Axis 24 monitor device	
#8480	to #8499	#8160 to #8163	Axis 25 monitor device	
#8500	#8500 to #8519		Axis 26 monitor device	
#8520	#8520 to #8539		Axis 27 monitor device	
#8540	#8540 to #8559		Axis 28 monitor device	
#8560	#8560 to #8579		Axis 29 monitor device	
#8580	to #8599	#8180 to #8183	Axis 30 monitor device	
#8600	to #8619	#8184 to #8187	Axis 31 monitor device	
#8620	to #8639	#8188 to #8191	Axis 32 monitor device	

Table 4.3 Monitor devices list

	Device No. (Note)			
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
#8000	+ 20n	#8064 + 4n	Servo amplifier type	
#8001	+ 20n	#8065 + 4n	Motor current value	
#8002	+ 20n	#8066 + 4n	Meter and d	
#8003	+ 20n	#8067 + 4n	Motor speed	
#8004	+ 20n		Command annual	
#8005	+ 20n	_	Command speed	Navy day is a
#8006	+ 20n		Home position return re-travel value	New device in Q173DCPU/Q172DCPU
#8007	' + 20n	<u> </u>		Q1/3DCF0/Q1/2DCF0
#8008	+ 20n	<u> </u>	Servo amplifier display servo error code	
#8009 + 20n	_		Parameter error No.	
#8010 + 20n	_	_	Servo status 1	
#8011 + 20n	_	_	Servo status 2	New device in
#8012 + 20n	_	_	Servo status 3	Q173DSCPU/Q172DSCPU
#8014 + 20n —		_	Servo status 5	
#8018 + 20n	_	_	Servo status 7	

(Note): "n" in the device No. indicates the numerical value (axis No.1 to 32: n= 0 to 31) which correspond to axis No.

(b) Motion error history

Table 4.4 Motion registers (Motion error history) list

	Device No.			
Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	Q173HCPU/ Q172HCPU ^(Note)	Name	Remark
#8640 t	#8640 to #8651		Seventh error information in past (Oldest error information)	
#8652 t	o #8663	#8008 to #8015	Sixth error information in past	
#8664 t	o #8675	#8016 to #8023	Fifth error information in past	
#8676 t	o #8687	#8024 to #8031	Fourth error information in past	
#8688 t	#8688 to #8699		Third error information in past	
#8700 t	#8700 to #8711		Second error information in past	
#8712 t	#8712 to #8723		First error information in past	
#8724 t	o #8735	#8056 to #8063	Latest error information	

(Note): Unusable for SV43 use.

Table 4.5 Motion error history list (SV13/SV22)

	Device No. (Note)			
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
#8640) + 12n	#8000 + 8n	Error Motion SFC program No.	
#8641	l + 12n	#8001 + 8n	Error type	
#8642	2 + 12n	#8002 + 8n	Error program No.	
#8643	3 + 12n	#8003 + 8n	Error block No./Motion SFC list/Line No./Axis No.	
#8644	l + 12n	#8004 + 8n	Error code	
#8645	5 + 12n	#8005 + 8n	Error occurrence time (Year/month)	
#8646	6 + 12n	#8006 + 8n	Error occurrence time (Day/hour)	
#8647	7 + 12n	#8007 + 8n	Error occurrence time (Minute/second)	
#8648	3 + 12n	_	Error setting data information	
#8649) + 12n	_	Unusable	New device in
#8650) + 12n		Error setting data	Q173DCPU/Q172DCPU
#8651	l + 12n	_	ETIOI Setting data	

(Note): "n" in the device No. indicates the numerical value (n=0 to 7) which correspond to motion error history.

Table 4.6 Motion error history list (SV43)

Device N	No. (Note)		
Q173DCPU(-S1)/ Q172DCPU(-S1)	Q173HCPU/Q172HCPU	Name	Remark
#8640 + 12n	_	Error type	
#8641 + 12n	_	Axis No.	
#8642 + 12n	_	Error code	
#8643 + 12n	_	Program No.	
#8644 + 12n	_	Sequence No.	
#8645 + 12n	_	Error block No.	New device in
#8646 + 12n	_	Error occurrence time (Year/month)	Q173DCPU/Q172DCPU
#8647 + 12n	_	Error occurrence time (Day/hour)	
#8648 + 12n	_	Error occurrence time (Minute/second)	
#8649 + 12n	_	Error setting data information	
#8650 + 12n		Error cotting data	
#8651 + 12n	_	Error setting data	

(Note): "n" in the device No. indicates the numerical value (n=0 to 7) which correspond to motion error history.

(c) Product information list device

Table 4.7 Motion register (Product information list device) list

Device No. (Note)				
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
#8736 to #8743			Operating system software version	New device in
#8744 to #8751		_	Motion CPU module serial number	Q173D(S)CPU/
				Q172D(S)CPU

(2) Special relays

Table 4.8 Special relay list

		1 4510	· ,	
Device No.				
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
SI	M60	M9000/M2320	Fuse blown detection	
SI	M53	M9005/M2321	AC/DC DOWN detection	
SI	M52	M9006/M2322	Battery low	
SI	M51	M9007/M2323	Battery low latch	
S	M1	M9008/M2324	Self-diagnostic error	
S	iM0	M9010/M2325	Diagnostic error	
		M9025/M3136	Clock data set request	
SN	<i>I</i> /211	M9026/M2338	Clock data error	
SN	<i>I</i> /801	M9028/M3137	Clock data read request	
SN	/400	M9036/M2326	Always ON	
SN	<i>I</i> /401	M9037/M2327	Always OFF	
	_	M9060/M3138	Diagnostic error reset	Use M2039 for error reset operation.
SN	<i>I</i> 1512	M9073/M2329	Motion CPU WDT error	
SN	<i>I</i> 500	M9074/M2330	PCPU READY complete	
SN	<i>I</i> /501	M9075/M2331	Test mode ON	
SN	<i>I</i> 502	M9076/M2332	External forced stop input	
SN	<i>I</i> 1513	M9077/M2333	Manual pulse generator axis setting error	
SN	<i>I</i> 510	M9078/M2334	TEST mode request error	
		M9079/M2335	Servo program setting error (SV13/SV22)/	
SN	<i>M</i> 516		Motion program setting error (SV43)	
SN	<i>I</i> 528	M9216/M2345	No.1 CPU MULTR complete	
SM529		M9217/M2346	No.2 CPU MULTR complete	
	<i>I</i> 530	M9218/M2347	No.3 CPU MULTR complete	
	<i>M</i> 531	M9219/M2348	No.4 CPU MULTR complete	
	Л240	M9240/M2336	No.1 CPU resetting	
SN	Л241	M9241/M2337	No.2 CPU resetting	
	Л242	M9242/M2338	No.3 CPU resetting	
	Л243	M9243/M2339	No.4 CPU resetting	
	Л244	M9244/M2340	No.1 CPU error	
	Л245	M9245/M2341	No.2 CPU error	
	/1246	M9246/M2342	No.3 CPU error	
	л <u>е то</u> Л247	M9247/M2343	No.4 CPU error	
	M58	_	Battery low warning latch	
	M59	_	Battery low warning	
SM220		_	CPU No.1 READY complete	
SM221		_	CPU No.2 READY complete	New device in
	SM222		CPU No.3 READY complete	Q173DCPU/Q172DCPU
	SM223		CPU No.4 READY complete	
SM503		_	Digital oscilloscope executing	
SM505	_	_	Cam data writing	New device in
	1			Q173DSCPU/Q172DSCPU
CI.	<i>I</i> 1506	_	External forced stop input ON latch	New device in Q173D(S)CPU/
51/	/1000	_	External forced stop input ON laten	
]		Q172D(S)CPU

Table 4.8 Special relay list (Continued)

Device No.					
Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	Q173HCPU/ Q172HCPU	Name	Remark	
SM	508		Amplifier-less operation status flag		
SM	526	1	Over heat warning latch	New device in	
SM	527		Over heat warning	Q173DCPU/Q172DCPU	
SM532	_	_	SSCNETⅢ searching flag (Line 1)		
SM533	_	_	SSCNETⅢ searching flag (Line 2)		
SM534	_	ı	Maximum fixed cycle system processing time over flag		
SM561	_	1	Multiple CPU synchronous control initial complete flag	New device in Q173DSCPU/Q172DSCPU	
SM577	_	_	Maximum fixed cycle system processing time initialized flag		
SM805	_	_	Rapid stop deceleration time setting error invalid flag		

(3) Special registers

Table 4.9 Special registers list

	Device No.			
Q173DSCPU/ Q173DCPU(-S1)/		Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
SD60		D9000	Fuse blown No.	
SD53		D9005	AC/DC DOWN counter No.	
S	D0	D9008	Diagnostic errors	
			Clock time for diagnostic error occurrence	
S	D1	D9010	(Year, month)	
	Do	D0044	Clock time for diagnostic error occurrence	
5	D2	D9011	(Day, hour)	
9	D3	D9012	Clock time for diagnostic error occurrence	
3	D3	D9012	(Minute, second)	
S	D4	D9013	Error information categories	
S	D5	D9014		
S	D6	_		
S	D7	_		
S	D8	_		
S	D9	_		
SI	010		Error common information	
SI	D11			
SI	012			
SI	D13			
SI	014			
SI	SD15			Now dovice in
SI	016			New device in Q173DCPU/Q172DCPU
SI	SD17 — — SD18 —			Q173DCP0/Q172DCP0
SI				
SI	D19		Error individual information	
SE	020	<u> </u>		
SI	D21			
SI	022			
SI	023			
SE	024	<u> </u>		
SI	025	_		
SI	026	_		
SD	203	D9015	Operating status of CPU	
SD	520	D9017	Scan time	
	521	D9019	Maximum scan time	
	210	D9025	Clock data (Year, month)	
SD	211	D9026	Clock data (Day, hour)	
SD	212	D9027	Clock data (Minute, second)	
SD	213	D9028	Clock data (Day of week)	
-	_	D9060	Diagnostic error reset error No.	Use M2039 for error reset operation.
SD	395	D9061	Multiple CPU No.	
SD	508	D0440	SSCNET control (Status)	
SD	803	D9112	SSCNET control (Command)	
SD	510	D9182		
	511	D9183	Test mode request error	

Table 4.9 Special registers list (Continued)

	Device No.				
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	- Name	Remark	
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU			
	512	D9184	Motion CPU WDT error cause		
SD513		D9185	meder of War error educe		
	514	D9186	Manual pulse generator axis setting error		
	515	D9187	Maridal palse generator axio setting error		
	522	D9188	Motion operation cycle		
	516	D9189	Error program No.		
	517	D9190	Error item information		
	502	D9191			
	503	D9192	Servo amplifier loading information		
	504	D9193			
	505	D9194	Real mode/virtual mode switching error		
	506	D9195	information		
-	_	D9196	PC link communication error codes	Q173D(S)CPU/ Q172D(S)CPU does not support PC link communication.	
SD	523	D9197	Operation cycle of the Motion CPU setting		
SD	200	D9200	State of switch		
-	_		State of LED	Use 7-segment LED in Q173D(S)CPU/Q172D(S)CPU.	
SD524	_	_	Maximum Motion operation cycle		
SD537	_		Maximum fixed cycle system processing time		
SD550	_		System setting error information		
SD551	_	_	System setting error information	New device in	
SD552	_	_	Servo parameter write/read request	Q173DSCPU/Q172DSCPU	
SD553	_	_	Servo parameter write/read request	Q173D301 0/Q172D301 0	
SD560	_	_	Operation method		
SD561	_	_	Multiple CPU synchronous control setting status		
SD581	_	_	Fixed cycle system processing time		
SD	700	_			
SD	701	_			
SD	702	_	Device assignment	New device in	
SD	703	_		Q173DCPU/Q172DCPU	
SD	704	_		Q170D01 0/Q172D01 0	
SD	720	_	444μs coasting timer		
SD	SD721 — 44		TTTμο Coasting times		
SD722	_	_	☐ 222μs coasting timer		
SD723	_	_	222μο Coasung union		
SD724	_	_	SSCNETm/H compatible optical hub unit loading information (Line 1)		
SD725	_		SSCNETII/H compatible optical hub unit loading information (Line 2)	New device in Q173DSCPU/Q172DSCPU	
SD726	_	_	SSCNETII/H compatible optical hub unit communication error information (Line 1)		
SD727	_	_	SSCNETIT/H compatible optical hub unit communication error information (Line 2)		

Table 4.9 Special registers list (Continued)

Device No.				
Q173DSCPU/	Q173DCPU(-S1)/	Q173HCPU/	Name	Remark
Q172DSCPU	Q172DCPU(-S1)	Q172HCPU		
SD804	_	_		
SD805	_	_	0	
SD806	_	_	Servo parameter write/read request	New device in
SD807	_	_		Q173DSCPU/Q172DSCPU
SD808	_	_	0	
SD809	_	_	Servo parameter write/read request (2 word)	

(4) Other devices

Table 4.10 Other devices list

Item		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
	M2320 to M2399	Unus	sable	Special relay allocated devices (Status)
Internal relays/	M2400 to M3039	Device area of 17 axes or more is usable as user devices in Q172DSCPU.	Device area of 9 axes or more is usable as user devices in Q172DCPU(-S1).	Device area of 9 axes or more is unusable as user devices in Q172HCPU.
Data registers	M3136 to M3199	Unus	sable	Special relay allocated devices (Command signal)
	M3200 to M3839 D0 to D639 D640 to D703	Device area of 17 axes or more is usable as user devices in Q172DSCPU.	Device area of 9 axes or more is usable as user devices in Q172DCPU(-S1).	Device area of 9 axes or more is unusable in Q172HCPU.
	omputer link ation error flag	-	_	M2034
	ging 2 command	M3206+20n (Note-1)	_	_
PI-PID swite	ching command	M3217 + 20n ^(Note-1)	_	_
PCPU REA	ADY complete	SM	500	D759
Home posit travel value	tion return re-	D9 + 20n (Data shortened to 1 word) ^(Note-1) #8006 + 20n, #8007 + 20n (Referring at monitoring) ^(Note-1)		D9 + 20n ^(Note-1)
Travel value change registers		Optional device (Set for D16 + 20n, D17 + 20n are also usable.) (Note-1)		D16 + 20n, D17 + 20n ^(Note-1)
Indirect setting devices (Word devices)		D0 to D8191 W0 to W1FFF #0 to #7999 U□\G10000 to U□\G(10000 + p - 1) ^(Note-3)		D800 to D8191 W0 to W1FFF #0 to #7999 —
Indirect setting devices (Bit devices)		X0 to X1FFF (Note-4) Y0 to Y1FFF Y0 to Y1FFF M0 to M8191 — B0 to B1FFF F0 to F2047 U□\G10000.0 to U□\G(10000 + p − 1).F (Note-3)		X0 to X1FFFF Y0 to Y1FFF M/L0 to M/L8191 M9000 to M9255 B0 to B1FFF F0 to F2047
High-speed reading function settable devices		D0 to D8191 W0 to W1FFF U□\G10000 to U□\G(10000 + p − 1) (Note-3)		D800 to D3069, D3080 to D8191 W0 to W1FFF —
Optional data monitor function settable devices		D0 to D8191 W0 to W1FFF #0 to #7999 U□\G10000 to U□\G(10000 + p − 1) (Note-3)		D0 to D8191 W0 to W1FFF #0 to #7999 —

⁽Note-1): "n" in the above device No. indicates the numerical value (axis No.1 to 32: n= 0 to 31) which correspond to axis No.

⁽Note-2): Servo amplifier MR-J5(W)- \square B only.

⁽Note-3): "p" indicates the user setting area points of Multiple CPU high speed transmission area in each CPU.

⁽Note-4): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

Table 4.10 Other devices list (Continued)

	Item	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
		X0 to X1FFF ^(Note-4)	X0 to X1FFF	X0 to X1FFF
		Y0 to	Y1FFF	Y0 to Y1FFF
	Output device	M0 to	M8191	M0 to M8191
	Output device		_	L0 to L8191
			B1FFF	B0 to B1FFF
		U□\G10000.0 to U□\G	i(10000 + p -1).F ^(Note-3)	<u> </u>
		D0 to	D8191	D0 to D8191
	Watch data	W0 to	W1FFF	W0 to W1FFF
data	VValcii dala		#9215	#0 to #8191
þ		U□\G10000 to U□\G		
Limit switch output	•	D0 to	D0 to D8191	
9		W0 to	W0 to W1FFF	
swit	ON section setting	#0 to	#0 to #8191	
mit		Constant (H	Constant (Hn/Kn) ^(Note-5)	
=		U□\G10000 to U□\G(10000 + p − 1) (Note-3)		<u> </u>
		X0 to X1FFF (Note-4)	X0 to X1FFF	X0 to X1FFF
		Y0 to	Y0 to Y1FFF	
	Outrout anabla/diaabla bit	M0 to	M0 to M8191	
	Output enable/disable bit			L0 to L8191
	Forced output bit	B0 to	B0 to B1FFF	
	1 oroca output bit	F0 to	F0 to F2047	
			SM1999 (10000 + p - 1).F ^(Note-3)	M9000 to M9255
		_		

⁽Note-1): "n" in the above device No. indicates the numerical value (axis No.1 to 32: n= 0 to 31) which correspond to axis No.

POINT

Refer to Chapter 2 for number of user setting area points of Multiple CPU high speed transmission area.

⁽Note-2): Servo amplifier MR-J5(W)-□B only.

⁽Note-3): "p" indicates the user setting area points of Multiple CPU high speed transmission area in each CPU.

⁽Note-4): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

⁽Note-5): Setting range varies depending on the setting units.

APPENDIX 4.3 Differences of the operating system software

(1) Motion SFC (SV13/SV22)

	Item	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
Motion SFC program	Code total (Motion SFC chart + Operation control + Transition)	652k bytes	543k bytes	543k bytes
capacity	Text total (Operation control + Transition)	668k bytes	484k bytes	484k bytes
Motion SF executing	C program flag	X, Y, M,	B, U□\G	
Motion SF task	C program event	Fixed cycle (0.22ms/0.44ms, 0.88ms, 1.77 ms, 3.55 ms, 7.11 ms, 14.2 ms)	Fixed cycle (0.44ms, 0.88ms, 1.77 ms, 3.55 ms, 7.11 ms, 14.2 ms)	Fixed cycle (0.88ms, 1.77 ms, 3.55 ms, 7.11 ms, 14.2 ms)
Task Para Limited co control	meter ount of repeat	Event task	Normal task: 1 to 100000 Event task: 1 to 10000 NMI task: 1 to 10000	
'	control/transition able device rice)	D, W, U□\G, SD, #, FT		D, W, Special D, #, FT
'	control/transition able device	$X, PX, Y, PY, M, U\square \backslash G\square.\square, B, F, SM$		X, PX, Y, PY, M, L, B, F, Special M
	Motion dedicated function	CHGV, CHGVS ^(Note-1) , CHGT, CHGT2, CHGP	CHGV, CHGT	CHGV, CHGT
	Others	EI, DI, NOP, BMOV, FMOV, MULTW, MULTR, TO, FROM, RTO, RFROM, TIME	EI, DI, NOP, BMOV, FMOV, MULTW, MULTR, TO, FROM, TIME	EI, DI, NOP, BMOV, FMOV, MULTW, MULTR, TO, FROM, TIME
Instruction	Vision system dedicated function (Note-2)	MVOPEN, MVLOAD, MVTRG, MVPST, MVIN, MVOUT, MVFIN, MVCLOSE, MVCOM		-
	Data control	SCL, DSCL		
	Program control	IF - ELSE - IEND, SELECT - CAS	SE - SEND, FOR - NEXT, BREAK	
	Synchronous control dedicated function (Note-1)	CAMRD, CAMWR, CAMWR2, CAMMK, CAMPSCL	_	_

(Note-1): SV22 advanced synchronous control only. (Note-2): Unusable in Q173DCPU/Q172DCPU.

(2) Virtual mode (SV22)

	Item	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
Internal relay/ Data register	M4640 to M4687 M5440 to M5487 D1120 to D1239	Unusable as user devices	Device area of 9 axes or more is usable as user devices in the Q172DCPU.	Device area of 9 axes or more is unusable in the Q172HCPU.
Clutch sta	atus		al device 2223 are also usable.)	M2160 to M2223
	s command signals I screw switching d)		al device 5519 are also usable.)	M5488 to M5519
Smoothir signals	ng clutch complete	· ·	al device 5583 are also usable.)	M5520 to M5583
Real mod register	de axis information	SD500,	SD501	D790, D791
Indirect setting devices of mechanical system program (Word device)		D0 to D8191 W0 to W1FFF #0 to #7999 U□\G10000 to U□\G(10000 + p −1) (Note-1)		D800 to D3069, D3080 to D8191 W0 to W1FFF —————————————————————————————————
Indirect setting devices of		X0 to X1FFF (Note-2) X0 to X1FFF Y0 to Y1FFF M0 to M8191		Y0 to Y1FFF M/L0 to M/L8191
mechanical system program (Bit device)		— B0 to B1FFF F0 to F2047 U□\G10000.0 to U□\G(10000 + p −1).F ^(Note-1)		M9000 to M9255 B0 to B1FFF F0 to F2047
Virtual servo motor Command in-position range		1 to 2147483647	1 to 32767	1 to 32767
Cam	Number of pulses per cam shaft revolution	1 to 1073741824[pulse]/ Word device (D, W, #, U□\G)	1 to 1073741824[pulse]	1 to 1073741824[pulse]
	Output unit	mm, inch, pulse, degree	mm, inch, pulse	mm, inch, pulse
Speed change ratio of speed		Upper limit value : 0 to 65535		Upper limit value : 1 to 10000
change gear		Lower limit value : 0 to 65535		Lower limit value : 1 to 10000
Permissible droop pulse value of output module		1 to 1073741824 [pulse]		1 to 65535[×100pulse]

(Note-1): "p" indicates user setting area points of Multiple CPU high speed transmission area in each CPU. (Note-2): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

POINT

Refer to Chapter 2 for number of user setting area points of Multiple CPU high speed transmission area.

(3) Motion program (SV43)

Item		Q173DCPU(-S1)/Q172DCPU(-S1)	Q173HCPU/Q172HCPU
DNC operation		None	Provided
Internal relay/ Data register	M4320 to M4335	Unusable	DNC status
Motion program	capacity	504k bytes	248k bytes
Variable	Device variable	$X, Y, M, B, F, D, W, \#, U \square \backslash G$	X, Y, M, B, F, D, W, #
Instructions	Jump/repetition processing	CALL, GOSUB, GOSUBE, IFGOTO, IFTHENELSE IFELSEEND, WHILEDOBREAKCONTINUEEND	CALL, GOSUB, GOSUBE, IFGOTO, IFTHENELSEEND, WHILEDO END
Instructions sym	nbol	AT (Acceleration): 1 to 65535[×0.001s] BT (Deceleration): 1 to 65535[×0.001s]	_
		AND (Conditional branch using word device)	_
Multiprogramming depth of IF statement/WHILE statement		Up to eight levels including IF statement and While statement	Up to three levels including IF statement and While statement
BSET, BRST		Bit set and reset for word devices is possible.	_
Setting range of M-code		0 to 32767 (32761 except special M-codes)	0 to 9999 (9993 except special M-codes)

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

We will repair any failure or defect hereinafter referred to as "failure" in our FA equipment hereinafter referred to as the "Product" arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit is repaired or replaced.

[Gratis Warranty Term]

The term of warranty for Product is thirty six (36) months after your purchase or delivery of the Product to a place designated by you or forty two (42) months from the date of manufacture whichever comes first "Warranty Period". Warranty period for repaired Product cannot exceed beyond the original warranty period before any repair work.

[Gratis Warranty Range]

- (1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule. It can also be carried out by us or our service company upon your request and the actual cost will be charged. However, it will not be charged if we are responsible for the cause of the failure.
- (2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.
- (3) Even during the term of warranty, the repair cost will be charged on you in the following cases;
 - 1) A failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem
 - 2) A failure caused by any alteration, etc. to the Product made on your side without our approval
 - 3) A failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety device required by applicable laws and has any function or structure considered to be indispensable according to a common sense in the industry
 - 4) A failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
 - 5) Any replacement of consumable parts (battery, fan, etc.)
 - 6) A failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters
 - 7) A failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company
 - 8) Any other failures which we are not responsible for or which you acknowledge we are not responsible for

2. Onerous Repair Term after Discontinuation of Production

(1) We may accept the repair at charge for another seven (7) years after the production of the product is

The announcement of the stop of production for each model can be seen in our Sales and Service, etc.

(2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

3. Service in overseas countries

Our regional FA Center in overseas countries will accept the repair work of the Product; However, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

4. Exclusion of Loss in Opportunity and Secondary Loss from Warranty Liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

6. Precautions for Choosing the Products

- (1) For the use of our Motion controller, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in Motion controller, and a backup or fail-safe function should operate on an external system to Motion controller when any failure or malfunction occurs.
- (2) Our Motion controller is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these applications when used.
 - In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used.
 - We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

INFORMATION AND SERVICES

For further information and services, please contact your local Mitsubishi Electric sales office or representative. Visit our website to find our locations worldwide.

MITSUBISHI ELECTRIC Factory Automation Global Website Locations Worldwide www.MitsubishiElectric.com/fa/about-us/overseas/

TRADEMARKS

Microsoft and Windows are trademarks of the Microsoft group of companies.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as '™, or '®, are not specified in this manual.

<u>IB(NA)-0300134-N(2409)MEE</u> MODEL: Q173D-P-COM-E

MODEL CODE: 1XB928

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.