 


Motion Controller



Q173D(S)CPU/Q172D(S)CPU Motion Controller User's Manual

- -Q172DCPU
- -Q173DCPU
- -Q172DCPU-S1
- -Q173DCPU-S1
- -Q172DSCPU
- -Q173DSCPU





(Please read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

These precautions apply only to this product. Refer to the Q173D(S)CPU/Q172D(S)CPU Users manual for a description of the Motion controller safety precautions.

In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

In any case, it is important to follow the directions for usage.

Please save this manual to make it accessible when required and always forward it to the end user.

For Safe Operations

1. Prevention of electric shocks

∆ DANGER

- Never open the front case or terminal covers while the power is ON or the unit is running, as this may lead to electric shocks.
- Never run the unit with the front case or terminal cover removed. The high voltage terminal and charged sections will be exposed and may lead to electric shocks.
- Never open the front case or terminal cover at times other than wiring work or periodic inspections even if the power is OFF. The insides of the Motion controller and servo amplifier are charged and may lead to electric shocks.
- Completely turn off the externally supplied power used in the system before mounting or removing the module, performing wiring work, or inspections. Failing to do so may lead to electric shocks.
- When performing wiring work or inspections, turn the power OFF, wait at least ten minutes, and then check the voltage with a tester, etc. Failing to do so may lead to electric shocks.
- lacktriangle Be sure to ground the Motion controller, servo amplifier and servo motor. (Ground resistance : 100 Ω or less) Do not ground commonly with other devices.
- The wiring work and inspections must be done by a qualified technician.
- Wire the units after installing the Motion controller, servo amplifier and servo motor. Failing to do so may lead to electric shocks or damage.
- Never operate the switches with wet hands, as this may lead to electric shocks.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this
 may lead to electric shocks.
- Do not touch the Motion controller, servo amplifier or servo motor terminal blocks while the power is ON, as this may lead to electric shocks.
- Do not touch the built-in power supply, built-in grounding or signal wires of the Motion controller and servo amplifier, as this may lead to electric shocks.

2. For fire prevention

∆ CAUTION

- Install the Motion controller, servo amplifier, servo motor and regenerative resistor on incombustible. Installing them directly or close to combustibles will lead to fire.
- If a fault occurs in the Motion controller or servo amplifier, shut the power OFF at the servo amplifier's power source. If a large current continues to flow, fire may occur.
- When using a regenerative resistor, shut the power OFF with an error signal. The regenerative resistor may abnormally overheat due to a fault in the regenerative transistor, etc., and may lead to fire
- Always take heat measures such as flame proofing for the inside of the control panel where the servo amplifier or regenerative resistor is installed and for the wires used. Failing to do so may lead to fire.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this
 may lead to fire.

3. For injury prevention

∆ CAUTION

- Do not apply a voltage other than that specified in the instruction manual on any terminal.
 Doing so may lead to destruction or damage.
- Do not mistake the terminal connections, as this may lead to destruction or damage.
- Do not mistake the polarity (+/-), as this may lead to destruction or damage.
- Do not touch the heat radiating fins of controller or servo amplifier, regenerative resistor and servo motor, etc., while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.
- Always turn the power OFF before touching the servo motor shaft or coupled machines, as these parts may lead to injuries.
- Do not go near the machine during test operations or during operations such as teaching.
 Doing so may lead to injuries.

4. Various precautions

Strictly observe the following precautions.

Mistaken handling of the unit may lead to faults, injuries or electric shocks.

(1) System structure

ACAUTION

- Always install a leakage breaker on the Motion controller and servo amplifier power source.
- If installation of an electromagnetic contactor for power shut off during an error, etc., is specified in the instruction manual for the servo amplifier, etc., always install the electromagnetic contactor.
- Install the emergency stop circuit externally so that the operation can be stopped immediately and the power shut off.
- Use the Motion controller, servo amplifier, servo motor and regenerative resistor with the correct combinations listed in the instruction manual. Other combinations may lead to fire or faults.
- Use the Motion controller, base unit and motion module with the correct combinations listed in the instruction manual. Other combinations may lead to faults.
- If safety standards (ex., robot safety rules, etc.,) apply to the system using the Motion controller, servo amplifier and servo motor, make sure that the safety standards are satisfied.
- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- In systems where coasting of the servo motor will be a problem during the forced stop, emergency stop, servo OFF or power supply OFF, use dynamic brakes.
- Make sure that the system considers the coasting amount even when using dynamic brakes.
- In systems where perpendicular shaft dropping may be a problem during the forced stop, emergency stop, servo OFF or power supply OFF, use both dynamic brakes and electromagnetic brakes.

⚠CAUTION

- The dynamic brakes must be used only on errors that cause the forced stop, emergency stop, or servo OFF. These brakes must not be used for normal braking.
- The brakes (electromagnetic brakes) assembled into the servo motor are for holding applications, and must not be used for normal braking.
- The system must have a mechanical allowance so that the machine itself can stop even if the stroke limits switch is passed through at the max. speed.
- Use wires and cables that have a wire diameter, heat resistance and bending resistance compatible with the system.
- Use wires and cables within the length of the range described in the instruction manual.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Install a cover on the shaft so that the rotary parts of the servo motor are not touched during operation.
- There may be some cases where holding by the electromagnetic brakes is not possible due to the life or mechanical structure (when the ball screw and servo motor are connected with a timing belt, etc.). Install a stopping device to ensure safety on the machine side.

(2) Security

^CAUTION

To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from external devices via the network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

(3) Parameter settings and programming

⚠ CAUTION

- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servo motor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.
- The regenerative resistor model and capacity parameters must be set to values that conform to the operation mode, servo amplifier and servo power supply module. The protective functions may not function if the settings are incorrect.
- Set the mechanical brake output and dynamic brake output validity parameters to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Set the stroke limit input validity parameter to a value that is compatible with the system application. The protective functions may not function if the setting is incorrect.

∆CAUTION

- Set the servo motor encoder type (increment, absolute position type, etc.) parameter to a value that is compatible with the system application. The protective functions may not function if the setting is incorrect.
- Set the servo motor capacity and type (standard, low-inertia, flat, etc.) parameter to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Set the servo amplifier capacity and type parameters to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Use the program commands for the program with the conditions specified in the instruction manual.
- Set the sequence function program capacity setting, device capacity, latch validity range, I/O assignment setting, and validity of continuous operation during error detection to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Some devices used in the program have fixed applications, so use these with the conditions specified in the instruction manual.
- The input devices and data registers assigned to the link will hold the data previous to when communication is terminated by an error, etc. Thus, an error correspondence interlock program specified in the instruction manual must be used.
- Use the interlock program specified in the intelligent function module's instruction manual for the program corresponding to the intelligent function module.

(4) Transportation and installation

∆ CAUTION

- Transport the product with the correct method according to the mass.
- Use the servo motor suspension bolts only for the transportation of the servo motor. Do not transport the servo motor with machine installed on it.
- Do not stack products past the limit.
- When transporting the Motion controller or servo amplifier, never hold the connected wires or cables.
- When transporting the servo motor, never hold the cables, shaft or detector.
- When transporting the Motion controller or servo amplifier, never hold the front case as it may fall off.
- When transporting, installing or removing the Motion controller or servo amplifier, never hold the edges.
- Install the unit according to the instruction manual in a place where the mass can be withstood.
- Do not get on or place heavy objects on the product.
- Always observe the installation direction.
- Keep the designated clearance between the Motion controller or servo amplifier and control panel inner surface or the Motion controller and servo amplifier, Motion controller or servo amplifier and other devices.

⚠ CAUTION

- Do not install or operate Motion controller, servo amplifiers or servo motors that are damaged or that have missing parts.
- Do not block the intake/outtake ports of the Motion controller, servo amplifier and servo motor with cooling fan.
- Do not allow conductive matter such as screw or cutting chips or combustible matter such as oil
 enter the Motion controller, servo amplifier or servo motor.
- The Motion controller, servo amplifier and servo motor are precision machines, so do not drop or apply strong impacts on them.
- Securely fix the Motion controller, servo amplifier and servo motor to the machine according to the instruction manual. If the fixing is insufficient, these may come off during operation.
- Always install the servo motor with reduction gears in the designated direction. Failing to do so may lead to oil leaks.


Store and use the unit in the following environmental conditions.

For insurance 4	Conditions		
Environment	Motion controller/Servo amplifier	Servo motor	
Ambient temperature	According to each instruction manual.	0°C to +40°C (With no freezing) (32°F to +104°F)	
Ambient humidity	According to each instruction manual.	80% RH or less (With no dew condensation)	
Storage temperature	According to each instruction manual.	-20°C to +65°C (-4°F to +149°F)	
Atmosphere	Indoors (where not subject to direct sunlight). No corrosive gases, flammable gases, oil mist or dust must exist		
Altitude	According to each instruction manual		
Vibration	According to each instruction manual		

- When coupling with the synchronous encoder or servo motor shaft end, do not apply impact such as by hitting with a hammer. Doing so may lead to detector damage.
- Do not apply a load larger than the tolerable load onto the synchronous encoder and servo motor shaft. Doing so may lead to shaft breakage.
- When not using the module for a long time, disconnect the power line from the Motion controller or servo amplifier.
- Place the Motion controller and servo amplifier in static electricity preventing vinyl bags and store.
- When storing for a long time, please contact with our sales representative.
 Also, execute a trial operation.
- When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products.
 - Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.

⚠ CAUTION

- Correctly and securely wire the wires. Reconfirm the connections for mistakes and the terminal screws for tightness after wiring. Failing to do so may lead to run away of the servo motor.
- After wiring, install the protective covers such as the terminal covers to the original positions.
- Do not install a phase advancing capacitor, surge absorber or radio noise filter (option FR-BIF) on the output side of the servo amplifier.
- Correctly connect the output side (terminal U, V, W) and ground. Incorrect connections will lead the servo motor to operate abnormally.
- Do not connect a commercial power supply to the servo motor, as this may lead to trouble.
- Do not mistake the direction of the surge absorbing diode installed on the DC relay for the control signal output of brake signals, etc. Incorrect installation may lead to signals not being output when trouble occurs or the protective functions not functioning.

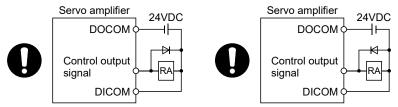

For the sink output interface

For the source output interface

- Do not connect or disconnect the connection cables between each unit, the encoder cable or PLC expansion cable while the power is ON.
- Securely tighten the cable connector fixing screws and fixing mechanisms. Insufficient fixing may lead to the cables coming off during operation.
- Do not bundle the power line or cables.

(6) Trial operation and adjustment

∆ CAUTION

- Confirm and adjust the program and each parameter before operation. Unpredictable movements may occur depending on the machine.
- Extreme adjustments and changes may lead to unstable operation, so never make them.
- When using the absolute position system function, on starting up, and when the Motion controller or absolute position motor has been replaced, always perform a home position return.
- Before starting test operation, set the parameter speed limit value to the slowest value, and make sure that operation can be stopped immediately by the forced stop, etc. if a hazardous state occurs.

(7) Usage methods

⚠CAUTION


- Immediately turn OFF the power if smoke, abnormal sounds or odors are emitted from the Motion controller, servo amplifier or servo motor.
- Always execute a test operation before starting actual operations after the program or parameters have been changed or after maintenance and inspection.
- Do not attempt to disassemble and repair the units excluding a qualified technician whom our company recognized.
- Do not make any modifications to the unit.
- Keep the effect or electromagnetic obstacles to a minimum by installing a noise filter or by using wire shields, etc. Electromagnetic obstacles may affect the electronic devices used near the Motion controller or servo amplifier.
- When using the CE Mark-compliant equipment, refer to the User's manual for the Motion controllers and refer to the corresponding EMC guideline information for the servo amplifiers, inverters and other equipment.
- Use the units with the following conditions.

Item	Conditions
Input power	According to each instruction manual.
Input frequency	According to each instruction manual.
Tolerable momentary power failure	According to each instruction manual.

(8) Corrective actions for errors

∆CAUTION

- If an error occurs in the self diagnosis of the Motion controller or servo amplifier, confirm the check details according to the instruction manual, and restore the operation.
- If a dangerous state is predicted in case of a power failure or product failure, use a servo motor with electromagnetic brakes or install a brake mechanism externally.
- Use a double circuit construction so that the electromagnetic brake operation circuit can be operated by emergency stop signals set externally.

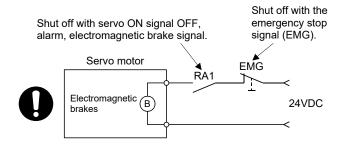

- If an error occurs, remove the cause, secure the safety and then resume operation after alarm release.
- The unit may suddenly resume operation after a power failure is restored, so do not go near the machine. (Design the machine so that personal safety can be ensured even if the machine restarts suddenly.)

⚠ CAUTION

- Perform the daily and periodic inspections according to the instruction manual.
- Perform maintenance and inspection after backing up the program and parameters for the Motion controller and servo amplifier.
- Do not place fingers or hands in the clearance when opening or closing any opening.
- Periodically replace consumable parts such as batteries according to the instruction manual.
- Do not touch the lead sections such as ICs or the connector contacts.
- Before touching the module, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.
- Do not directly touch the module's conductive parts and electronic components.
 Touching them could cause an operation failure or give damage to the module.
- Do not place the Motion controller or servo amplifier on metal that may cause a power leakage or wood, plastic or vinyl that may cause static electricity buildup.
- Do not perform a megger test (insulation resistance measurement) during inspection.
- When replacing the Motion controller or servo amplifier, always set the new module settings correctly.
- When the Motion controller or absolute value motor has been replaced, carry out a home position return operation using one of the following methods, otherwise position displacement could occur.
 - 1) After writing the servo data to the Motion controller using programming software, switch on the power again, then perform a home position return operation.
 - 2) Using the backup function of the programming software, load the data backed up before replacement.
- After maintenance and inspections are completed, confirm that the position detection of the absolute position detector function is correct.
- Do not drop or impact the battery installed to the module.
 Doing so may damage the battery, causing battery liquid to leak in the battery. Do not use the dropped or impacted battery, but dispose of it.
- Do not short circuit, charge, overheat, incinerate or disassemble the batteries.
- The electrolytic capacitor will generate gas during a fault, so do not place your face near the Motion controller or servo amplifier.
- The electrolytic capacitor and fan will deteriorate. Periodically replace these to prevent secondary damage from faults. Replacements can be made by our sales representative.
- Lock the control panel and prevent access to those who are not certified to handle or install electric equipment.
- Do not burn or break a module and servo amplifier. Doing so may cause a toxic gas.

(10) About processing of waste

When you discard Motion controller, servo amplifier, a battery (primary battery) and other option articles, please follow the law of each country (area).

⚠CAUTION

- This product is not designed or manufactured to be used in equipment or systems in situations that can affect or endanger human life.
- When considering this product for operation in special applications such as machinery or systems used in passenger transportation, medical, aerospace, atomic power, electric power, or submarine repeating applications, please contact your nearest Mitsubishi Electric sales representative.
- Although this product was manufactured under conditions of strict quality control, you are strongly advised to install safety devices to forestall serious accidents when it is used in facilities where a breakdown in the product is likely to cause a serious accident.

(11) General cautions

• All drawings provided in the instruction manual show the state with the covers and safety partitions removed to explain detailed sections. When operating the product, always return the covers and partitions to the designated positions, and operate according to the instruction manual.

REVISIONS

* The manual number is given on the bottom left of the back cover.

D. L. D. L	ala B.A	* The manual number is given on the bottom left of the back cover.
Print Date	* Manual Number	Revision
Jan., 2008	IB(NA)-0300133-A	
Feb., 2009	IB(NA)-0300133-B	[Additional model] MELSOFT MT Works2, MT Developer2, Software for SV43, Q10UDH/ Q13UDH/Q20UDH/Q26UDH/Q03UDE/Q04UDEH/Q06UDEH/ Q10UDEH/Q13UDEH/Q20UDEH/Q26UDEH, Q17DCCPU-V, QX40-S1/QX41-S1/QX42-S1/QX82-S1, MR-J3-□-RJ004, MR-J3-□-RJ080, MR-J3W-B [Additional correction/partial correction] Safety precautions, About Manuals, Checking serial number and
		operating system software version, Connector for forced stop input cable Q170DEMICOM, Exterior dimensions (Motion CPU module, Motion module), Warranty
Sep., 2010	IB(NA)-0300133-C	[Additional model] QX40H, QX70H, QH80H, QX90H, MR-J3-□BS [Additional correction/partial correction] Safety precautions, About Manuals, Restrictions by the software's version, Battery transportation, Symbol for the new EU battery directive, EMC directive
Sep., 2011	IB(NA)-0300133-D	[Additional model] Q173DCPU-S1, Q172DCPU-S1, Q35DB, Q64PN, Q50UDEHCPU, Q100UDEHCPU, GX Works2, MR Configurator2 [Additional correction/partial correction] Safety precautions, About Manuals, Restrictions by the software's version, Sample system circuit design for motion control
Dec., 2011	IB(NA)-0300133-E	[Partial correction] Section 4.2.1 Partial change of sentence
Mar., 2012	IB(NA)-0300133-F	[Additional model] Q173DSCPU, Q172DSCPU, Q173DSXY, Q171ENC-W8, MR-J4-□B, MR-J4W-□B [Additional correction/partial correction] About Manuals, Manual Page Organization, Restrictions by the software's version, Programming software version, Internal I/F connector set Q170DSIOCON, Internal I/F connector specifications, RIO cable Q173DSXYCBL□M, General specifications, Sample system circuit design for Motion control, Mounting of battery, Battery replacement procedure, Internal input circuit troubleshooting, Exterior dimensions (Serial absolute synchronous encoder)
Sep., 2012	IB(NA)-0300133-G	[Additional correction/partial correction] About Manuals, Restrictions by the software's version, Programming software version, Start-up adjustment procedure, Operating system software installation procedure
Apr., 2013	IB(NA)-0300133-H	[Additional model] Q03UDVCPU, Q04UDVCPU, Q06UDVCPU, Q13UDVCPU, Q26UDVCPU, Q24DHCCPU-V, MR-J4-□B-RJ, LJ72MS15 [Additional correction/partial correction] Safety precautions, About Manuals, Restrictions by the software's version, PLC module which can be controlled by Motion CPU, Start-up adjustment procedure, Electronic circuit symbols changed (compliant with new JIS symbols)

Print Date	* Manual Number	Revision
Nov., 2013	IB(NA)-0300133-J	[Additional model]
		Q24DHCCPU-LS
		[Additional correction/partial correction]
		Safety precautions, Restrictions by the software's version, Serial
		absolute synchronous encoder cable Q170ENCCBL□M-A, Serial
	15/114) 0000400 16	absolute synchronous encoder cable connector set MR-J3CN2
Dec., 2015	IB(NA)-0300133-K	[Additional model]
		MR-MV200
		[Additional correction/partial correction]
		Restrictions by the software's version, Other restrictions, General
		specifications, Specifications of manual pulse generator/incremental
		synchronous encoder, Connection examples of manual pulse
		generator/incremental synchronous encoder, Transportation
		precaution for customers, Safety circuit design, Start-up adjustment
		procedure, Resuming operation after storing the Motion controller, Battery replacement procedure, Warranty
Mar., 2017	IB(NA)-0300133-L	[Additional correction/partial correction]
IVIGI., 2017	.=(, 55551651	Safety precautions, Restrictions by the software's version, Other
		restrictions, SSCNET I (/H) compatible equipment, 7-segment LED
		display, Troubleshooting, Internal I/F connector cable, Warranty
Dec., 2019	IB(NA)-0300133-M	[Additional model]
, -	,	Q26DHCCPU-LS, Q61P-D, Q52B, Q55B
		[Additional correction/partial correction]
		Discontinued models, Equipment configuration in system, PLC module
		which can be controlled by Motion CPU, Q173DSXY performance
		specifications, Battery specifications
Apr., 2022	IB(NA)-0300133-N	[Additional model]
		MR-J5-□B, MR-J5W-□B
		[Additional correction/partial correction]
		Safety precautions, About Manuals, Discontinued Models, Restrictions
		by the software's version, Equipment configuration in system, System
		overall configuration, Other restrictions, SSCNET I (/H) compatible
Dec., 2023	IB(NA)-0300133-P	equipment, Internal I/F connector, Warranty [Additional model]
Dec., 2023	1D(1NA)-U3UU 133-P	MR-JE-□B
		[Additional correction/partial correction]
		About Manuals, PERIPHERAL I/F connector LED display, Select to
		number of the synchronous encoder modules, A6CON1 type soldering
		type connector
Sep., 2024	IB(NA)-0300133-Q	[Additional correction/partial correction]
		Restrictions by the software's version

Japanese Manual Number IB(NA)-0300125

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

INTRODUCTION

Thank you for choosing the Mitsubishi Electric Motion controller Q173D(S)CPU/Q172D(S)CPU. Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Motion controller you have purchased, so as to ensure correct use.

CONTENTS

Safety Precautions	A- 1
Revisions	A-11
Contents	A-13
About Manuals	A-16
Manual Page Organization	A-19
Discontinued Models	A-20
1. OVERVIEW	1- 1 to 1-12
1.1 Overview	1- 1
1.2 Differences between Q173D(S)CPU/Q172D(S)CPU and Q173HCPU/Q172HCPU	1- 4
1.3 Restrictions by the Software's Version	
1.4 Programming Software Version	1-12
2. SYSTEM CONFIGURATION	2- 1 to 2-104
2.1 Motion System Configuration	2- 1
2.1.1 Q173DSCPU/Q172DSCPU System overall configuration	
2.1.2 Q173DCPU(-S1)/Q172DCPU(-S1) System overall configuration	
2.1.3 Function explanation of the Motion CPU modules	
2.1.4 Restrictions on Motion systems	2- 8
2.2 Checking Serial Number and Operating System Software Version	2-13
2.2.1 Checking serial number	2-13
2.2.2 Checking operating system software version	2-16
2.3 System Configuration Equipment	2-18
2.4 General Specifications	2-26
2.5 Specifications of Equipment and Settings	2-27
2.5.1 Name of parts for CPU module	2-27
2.5.2 Power supply module	2-47
2.5.3 Base unit and extension cable	2-55
2.5.4 Q172DLX Servo external signals interface module	2-59
2.5.5 Q172DEX Synchronous encoder interface module	2-64
2.5.6 Q173DPX Manual pulse generator interface module	2-73
2.5.7 Q173DSXY Safety signal module	
2.5.8 Manual pulse generator/Serial absolute synchronous encoder	
2.5.9 SSCNET Ⅲ cables	
2.5.10 Battery	
2.5.11 Forced stop input terminal	2-103

3. DESIGN	3- 1 to 3-16
2.4 Contain Decimina December	2.4
3.1 System Designing Procedure	
3.2 External Circuit Design	
3.2.1 Power supply circuit design	
3.2.2 Safety circuit design	
3.3 Layout Design within the Control Panel	
3.3.1 Mounting environment	
3.3.2 Calculating heat generation by Motion controller	
3.4 Design Checklist	3-13
4. INSTALLATION AND WIRING	4- 1 to 4-28
4.1 Module Installation	4- 1
4.1.1 Instructions for handling	
4.1.2 Instructions for mounting the base unit	
4.1.3 Installation and removal of module	
4.1.4 Instructions for mounting of the battery holder unit	
4.2 Connection and Disconnection of Cable	
4.2.1 SSCNETII cable	
4.2.2 Battery cable	
4.2.3 Forced stop input cable	
4.2.4 Internal I/F connector cable	
4.3 Mounting of Battery	
4.4 Mounting of Serial Absolute Synchronous Encoder	
4.5 Wiring	
4.5.1 Instructions for wiring	
4.5.2 Connecting to the power supply module	
4.5.2 Confidenting to the power supply module	4-21
5. START-UP PROCEDURES	5- 1 to 5-10
5.1 Check Items Before Start-up	5 1
5.2 Start-up Adjustment Procedure	
5.3 Operating System Software Installation Procedure	
5.4 Trial Operation and Adjustment Checklist	
5.4 That Operation and Adjustment Checklist	5- 9
6. INSPECTION AND MAINTENANCE	6- 1 to 6-32
6.1 Maintenance Works	6- 2
6.1.1 Instruction of inspection works	
6.2 Daily Inspection	
6.3 Periodic Inspection	
6.4 Life	
6.5 Battery	
6.5.1 Battery life	
6.5.2 Battery replacement procedure	
6.5.3 Resuming operation after storing the Motion controller	
6.5.4 Symbol for the new FLI hattery directive	

6.6 Troubleshooting	6-15
6.6.1 Troubleshooting basics	6-15
6.6.2 Troubleshooting of Motion CPU module	6-16
6.6.3 Confirming error code	6-29
6.6.4 Internal input circuit troubleshooting	6-30
7. EMC DIRECTIVES	7- 1 to 7-10
7.1 Requirements for Compliance with the EMC Directive	7- 1
7.1.1 Standards relevant to the EMC directive	7- 2
7.1.2 Installation instructions for EMC directive	7- 3
7.1.3 Parts of measure against noise	7- 6
7.1.4 Example of measure against noise	
APPENDICES	App- 1 to App-31
APPENDIX 1 Cables	App- 1
APPENDIX 1.1 SSCNET II cables	App- 1
APPENDIX 1.2 Serial absolute synchronous encoder cable	App- 4
APPENDIX 1.3 Battery cable	App- 7
APPENDIX 1.4 Forced stop input cable	App- 8
APPENDIX 1.5 Internal I/F connector cable	App- 9
APPENDIX 1.6 RIO cable	App-14
APPENDIX 1.7 SSCNET Ⅲ cables (SC-J3BUS□M-C) manufactured by Mitsubishi Ele	ctric
System & Service Co., Ltd	App-15
APPENDIX 2 Exterior Dimensions	App-16
APPENDIX 2.1 Motion CPU module	App-16
APPENDIX 2.2 Servo external signals interface module (Q172DLX)	App-19
APPENDIX 2.3 Synchronous encoder interface module (Q172DEX)	App-19
APPENDIX 2.4 Manual pulse generator interface module (Q173DPX)	App-20
APPENDIX 2.5 Safety signal module (Q173DSXY)	App-20
APPENDIX 2.6 Power supply module	App-21
APPENDIX 2.7 Battery holder unit (Q170DBATC)	App-23
APPENDIX 2.8 Connector	App-24
APPENDIX 2.9 Manual pulse generator (MR-HDP01)	App-29
APPENDIX 2.10 Serial absolute synchronous encoder	Ann 30

About Manuals

The following manuals are also related to this product.

When necessary, order them by quoting the details in the tables below.

Related Manuals

(1) Motion controller

Manual Name	Manual Number (Model Code)
Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual	
This manual explains specifications of the Motion CPU modules, Q172DLX Servo external signal interface	IB-0300133
module, Q172DEX Synchronous encoder interface module, Q173DPX Manual pulse generator interface	(1XB927)
module, Power supply modules, Servo amplifiers, SSCNETⅢ cables and Synchronous encoder, and the	
maintenance/inspection for the system, trouble shooting and others.	
Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)	ID 0200424
This manual explains the Multiple CPU system configuration, performance specifications, common	IB-0300134 (1XB928)
parameters, auxiliary/applied functions, error lists and others.	(17.2020)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)	IB-0300135 (1XB929)
This manual explains the functions, programming, debugging, error lists for Motion SFC and others.	(17,0323)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)	IB-0300136 (1XB930)
This manual explains the servo parameters, positioning instructions, device lists, error lists and others.	(17,000)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)	
This manual explains the dedicated instructions to use the synchronous control by virtual main shaft,	IB-0300137 (1XB931)
mechanical system program create mechanical module, servo parameters, positioning instructions, device	(17,0901)
lists, error lists and others.	
Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)	IB-0300198
This manual explains the dedicated instructions to use the synchronous control by synchronous control	(1XB953)
parameters, device lists, error lists and others.	
Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)	
This manual explains the details, safety parameters, safety sequence program instructions, device lists	IB-0300183 (1XB945)
and error lists and others for safety observation function by Motion controller.	(17.50-10)
Motion controller Setup Guidance (MT Developer2 Version1)	
This manual explains the items related to the setup of the Motion controller programming software MT Developer2.	IB-0300142 (—)

(2) PLC

Manual Name	Manual Number (Model Code)
QCPU User's Manual (Hardware Design, Maintenance and Inspection) This manual explains the specifications of the QCPU modules, power supply modules, base units, extension cables, memory card battery, and the maintenance/inspection for the system, trouble shooting, error codes and others.	SH-080483ENG (13JR73)
QnUCPU User's Manual (Function Explanation, Program Fundamentals) This manual explains the functions, programming methods and devices and others to create programs with the QCPU.	SH-080807ENG (13JZ27)
QCPU User's Manual (Multiple CPU System) This manual explains the Multiple CPU system overview, system configuration, I/O modules, communication between CPU modules and communication with the I/O modules or intelligent function modules.	SH-080485ENG (13JR75)
QnUCPU User's Manual (Communication via Built-in Ethernet Port) This manual explains functions for the communication via built-in Ethernet port of the CPU module.	SH-080811ENG (13JZ29)
MELSEC-Q/L Programming Manual (Common Instruction) This manual explains how to use the sequence instructions, basic instructions, application instructions and micro computer program.	SH-080809ENG (13JW10)
MELSEC-Q/L/QnA Programming Manual (PID Control Instructions) This manual explains the dedicated instructions used to exercise PID control.	SH-080040 (13JF59)
MELSEC-Q/L/QnA Programming Manual (SFC) This manual explains the system configuration, performance specifications, functions, programming, debugging, error codes and others of MELSAP3.	SH-080041 (13JF60)
I/O Module Type Building Block User's Manual This manual explains the specifications of the I/O modules, connector, connector/terminal block conversion modules and others.	SH-080042 (13JL99)
MELSEC-L SSCNETII/H Head Module User's Manual This manual explains specifications of the head module, procedures before operation, system configuration, installation, wiring, settings, and troubleshooting.	SH-081152ENG (13JZ78)

(3) Servo amplifier

Manual Name	Manual Number (Model Code)
MR-J5-B/MR-J5W-B User's Manual (Introduction) This manual explains the specifications, functions, start-up procedure and others for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	IB-0300578ENG (—)
MR-J5 User's Manual (Hardware) This manual explains the installation, wiring, use option and others for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030298ENG (—)
MR-J5 User's Manual (Function) This manual explains how to use each function required to operate the AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030300ENG (—)
MR-J5 User's Manual (Adjustment) This manual explains the operation status adjustment procedure, adjustment method and others for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030306ENG (—)
MR-J5 User's Manual (Troubleshooting) This manual explains the causes of alarms, and warnings, etc. for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	SH-030312ENG (—)
MR-J5-B/MR-J5W-B User's Manual (Parameters) This manual explains the parameters for AC Servo MR-J5-B/MR-J5W-B Servo amplifier.	IB-0300581ENG (—)
SSCNETII/H Interface AC Servo MR-J4B_(-RJ) Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for AC Servo MR-J4B_(-RJ) Servo amplifier.	SH-030106 (1CW805)
SSCNETII/H Interface Multi-axis AC Servo MR-J4W2B/MR-J4W3B/MR-J4W2-0303B6 Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Multi-axis AC Servo MR-J4W2B/MR-J4W3B/MR-J4W2-0303B6 Servo amplifier.	SH-030105 (1CW806)
SSCNETII interface MR-J3-□B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-J3-□B Servo amplifier.	SH-030051 (1CW202)
SSCNETII interface 2-axis AC Servo Amplifier MR-J3W-0303BN6/MR-J3W-□B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for 2-axis AC Servo Amplifier MR-J3W-0303BN6/MR-J3W-□B Servo amplifier.	SH-030073 (1CW604)
SSCNETII Compatible Linear Servo MR-J3-□B-RJ004U□ Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Linear Servo MR-J3-□B-RJ004U□ Servo amplifier.	SH-030054 (1CW943)
SSCNETII Compatible Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier.	SH-030056 (1CW304)
SSCNETII Interface Direct Drive Servo MR-J3-□B-RJ080W Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Direct Drive Servo MR-J3-□B-RJ080W Servo amplifier.	SH-030079 (1CW601)

Manual Name	Manual Number (Model Code)
SSCNETII interface Drive Safety integrated MR-J3-□B Safety Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for safety	SH-030084 (1CW205)
integrated MR-J3-□B Safety Servo amplifier. SSCNETⅢ/H interface AC Servo MR-JEB Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-JE-□B Servo amplifier.	SH-030152ENG (—)
SSCNETII/H interface AC Servo With functional safety MR-JEBF Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-JE-□BF Servo amplifier.	SH-030258ENG (—)

Manual Page Organization

The symbols used in this manual are shown below.

Symbol	Description
QDS(Symbol that indicates correspondence to only Q173DSCPU/Q172DSCPU.
QD	Symbol that indicates correspondence to only Q173DCPU(-S1)/Q172DCPU(-S1).

Discontinued Models

The following models are described in this manual, but are no longer produced.

For the onerous repair term after discontinuation of production, refer to "WARRANTY".

Model	Production discontinuation
Q61P-A1	March 2009
Q61P-A2	March 2009
Q64P	February 2010
SW6RNC-GSVPRO	September 2014
QD75MH1	September 2018
QD75MH2	September 2018
QD75MH4	September 2018
MR-J3-□B	May 2019
MR-J3W-□B	May 2019
MR-J3-□B-RJ006	May 2019
MR-J3-□B-RJ004	May 2019
MR-J3-□B-RJ080W	May 2019
MR-J3-□BS	May 2019
Q170ENC	June 2021
QD75P1	September 2021
QD75P2	September 2021
QD75P4	September 2021
QD75D1	September 2021
QD75D2	September 2021
QD75D4	September 2021

1. OVERVIEW

1.1 Overview

This User's Manual describes the hardware specifications and handling methods of the Motion Controller for the Q series PLC Multiple CPU system.

The Manual also describes those items related to the specifications of the option module for the Motion controller, Manual pulse generator, Synchronous encoder and cables.

In this manual, the following abbreviations are used.

Generic term/Abbreviation	Description
Q173D(S)CPU/Q172D(S)CPU or	Q173DSCPU/Q172DSCPU/Q173DCPU/Q172DCPU/Q173DCPU-S1/
Motion CPU (module)	Q172DCPU-S1 Motion CPU module
	Q172DLX Servo external signals interface module/
Q172DLX/Q172DEX/Q173DPX/	Q172DEX Synchronous encoder interface module ^(Note-1) /
Q173DSXY or Motion module	Q173DPX Manual pulse generator interface module/
	Q173DSXY Safety signal module
MR-J5(W)-□B	Servo amplifier model MR-J5-□B/MR-J5W-□B
MR-J4(W)-□B	Servo amplifier model MR-J4-□B/MR-J4W-□B
MR-J3(W)-□B	Servo amplifier model MR-J3-□B/MR-J3W-□B
MR-JE-□B	Servo amplifier model MR-JE-□B/MR-JE-□BF
AMP or Servo amplifier	General name for "Servo amplifier model MR-J5-□B/MR-J5W-□B/MR-J4-□B/MR-J4-□B/MR-J4-□B/MR-JE-□B/MR-JE-□B/MR-JE-□BF"
QCPU, PLC CPU or PLC CPU module	QnUD(E)(H)CPU/QnUDVCPU
Multiple CPU system or Motion system	Abbreviation for "Multiple PLC system of the Q series"
CPUn	Abbreviation for "CPU No.n (n= 1 to 4) of the CPU module for the Multiple CPU system"
Operating system software	General name for "SW7DNC-SV□Q□/SW8DNC-SV□Q□"
SV13	Operating system software for conveyor assembly use (Motion SFC) : SW8DNC-SV13Q□
SV22	Operating system software for automatic machinery use (Motion SFC) : SW8DNC-SV22Q□
SV43	Operating system software for machine tool peripheral use : SW7DNC-SV43Q□
Programming software package	General name for MT Developer2/GX Works2/GX Developer/MR Configurator□
MT Works2	Abbreviation for "Motion controller engineering environment MELSOFT MT Works2"
MT Developer2 ^(Note-2)	Abbreviation for "Motion controller programming software MT Developer2 (Version 1.00A or later)"
GX Works2	Abbreviation for "Programmable controller engineering software MELSOFT GX Works2 (Version 1.15R or later)"
GX Developer	Abbreviation for "MELSEC PLC programming software package GX Developer (Version 8.48A or later)"
MR Configurator□ ^(Note-2)	General name for "MR Configurator/MR Configurator2"
	Abbreviation for "Servo setup software package
MR Configurator	MR Configurator (Version C0 or later)"
MR Configurator2	Abbreviation for "Servo setup software package MR Configurator2 (Version 1.01B or later)"
Manual pulse generator or MR-HDP01	Abbreviation for "Manual pulse generator (MR-HDP01)"

Generic term/Abbreviation	Description		
Serial absolute synchronous encoder	Abbreviation for "Serial absolute synchronous encoder (Q171ENC-W8/		
or Q171ENC-W8/Q170ENC	Q170ENC)"		
SSCNETIII/H(Note-3)			
SSCNETIII ^(Note-3)	High speed synchronous network between Motion controller and servo amplifier		
SSCNETII(/H)(Note-3)	General name for SSCNETⅢ/H, SSCNETⅢ		
Absolute position quatem	General name for "system using the servo motor and servo amplifier for absolute		
Absolute position system	position"		
Battery holder unit	Battery holder unit (Q170DBATC)		
Intelligent function module	General name for module that has a function other than input or output such as		
Intelligent function module	A/D converter module and D/A converter module.		
SSCNETⅢ/H head module	Abbreviation for "MELSEC-L series SSCNETⅢ/H head module (LJ72MS15)"		
Optical hub unit or MR-MV200	Abbreviation for "SSCNETII/H compatible optical hub unit (MR-MV200)"		

(Note-1): Q172DEX can be used in SV22.

(Note-2): This software is included in Motion controller engineering environment "MELSOFT MT Works2".

(Note-3): SSCNET: Servo System Controller NETwork

REMARK

For information about each module, design method for program and parameter, refer to the following manuals relevant to each module.

	Item	Reference Manual
	oheral devices for sequence program design, d intelligent function module	Manual relevant to each module
Operation meth	nod for MT Developer2	Help of each software
SV13/SV22/ SV43	 Multiple CPU system configuration Performance specification Design method for common parameter Auxiliary and applied functions (common) 	Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)
	 Design method for Motion SFC program Design method for Motion SFC parameter Motion dedicated PLC instruction 	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)
SV13/SV22	 Design method for positioning control program in the real mode Design method for positioning control parameter 	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)
	 Design method for safety observation parameter Design method for user made safety sequence program 	Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)
SV22 (Virtual mode)	Design method for mechanical system program	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)
SV22	p 3. s	
(Advanced synchronous control)	Design method for synchronous control parameter	Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

MEMO	

1.2 Differences between Q173D(S)CPU/Q172D(S)CPU and Q173HCPU/Q172HCPU

		T				ı
Item		Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)	
Operation cycle	SV13	0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/11 to 24 axes 1.77ms/25 to 32 axes	0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/11 to 16 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 18 axes 1.77ms/19 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 8 axes	
(default)	SV22 SV43	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes 1.77ms/17 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 12 axes 1.77ms/13 to 28 axes 3.55ms/29 to 32 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 8 axes	
Model name of ope		_	_	3.55ms/29 to 32 axes		
system software	eraurig		SW□DNC	C-SV□Q□		
,		USB/RS-232/Ethe	rnet (via PLC CPU)	USB/RS-232/Fthe	rnet (via PLC CPU)	
Peripheral I/F			/F (Motion CPU)		Motion CPU) (Note-1)	
Main base unit			le CPU high speed main ba			
Color of base	cover		Gı	ay		
Mounting on p	anel		Be sure to mount the u	nit by unit fixing screws.		
DIN rail			Unus	sable		
CPU module No.1		Universal model (QnUD(E)(H)CPU/QnUDVCPU)				
Installation orders or later	CPU No.2	No restriction				
CPU empty slot	empty slot Settable between CPU modules					
PLC CPU module			Universal model (QnUD	(E)(H)CPU/QnUDVCPU)		
Motion CPU modu	le	Q173DSCPU	/Q172DSCPU	Q173DCPU(-S1)	/Q172DCPU(-S1)	
Combination o CPU modules	f Motion	Combination with Q173D0	CPU(-S1)/Q172DCPU(-S1)	Combination with Q17	BDSCPU/Q172DSCPU	
Installation on unit	main base	Вє	e sure to install Motion CPU	modules by unit fixing scre	ws.	
Function selec	t switch		Rotary switch 1,	Rotary switch 2		
RESET/L.CLR	switch		No	ne		
LED indication	l		7-segment	LED display		
Battery			Den	nand		
Battery holder	unit		_	Q170E	DBATC	
Forced stop input		Use EMI connector of Motion CPU module Use device set by forced stop input setting in the system setting.				
Cable for forced st	op input	Demand				
Motion module		Q172DLX/Q172DEX/	Q173DPX/Q173DSXY	Q172DLX/Q172DEX/Q17	3DPX/Q173DSXY (Note-1)	
Installation on unit	main base	Q172DLX/Q172DEX/Q173DPX: Impossible to install on I/O slots of 0 to 2				
Multiple CPU high	speed					
transmission mem	-		Incli	ıded		
transfer between C	PU		Included			
modules	modules					

Q173HCPU	Q172HCPU			
0.44ms/ 1 to 3 axes				
0.88ms/ 4 to 10 axes	0.44ms/ 1 to 3 axes			
1.77ms/11 to 20 axes	0.88ms/ 4 to 8 axes			
3.55ms/21 to 32 axes				
0.88ms/ 1 to 5 axes				
1.77ms/ 6 to 14 axes	0.88ms/ 1 to 5 axes			
3.55ms/15 to 28 axes	1.77ms/ 6 to 8 axes			
7.11ms/29 to 32 axes				
SW□RN-	SV□Q□			
USB/S	SCNET			
Main ba	ase unit			
 (Q33B/Q35B/	Q38B/Q312B)			
 Cle	ear			
Mount the unit by unit fix	xing screws when using			
system in a place where	the vibration or impact is			
larç	ge			
Usa	able			
High performance i	model (Qn(H)CPU)			
Install Motion CPU module	s on the right-hand side of			
PLC CPU	J module.			
Not settable between CPU modules				
High performance i	model (Qn(H)CPU)			
Q173HCPU(-T)	(Q172HCPU(-T)			
Combination with Q1730	CPUN(T)/Q172CPUN(-T)			
Install Motion CPU modu	ules by unit fixing screws			
when using them in a pla	ce where the vibration or			
impact i	s large.			
Dip swite	ch 1 to 5			
Prov	ided			
Each LED of MODE, RUN	I, ERR, M.RUN, BAT and			
ВО				
 Add Q6BAT at continuous	power failure for 1 month			
or m	nore			
Q170F	IBATC			
Use device set by forced	stop input setting in the			
system setting.				
_	_			
Q172LX/Q17	2EX/Q173PX			
No res	triction			
_	-			

(Note-1): Q173DCPU-S1/Q172DCPU-S1 only

1.3 Restrictions by the Software's Version

There are restrictions in the function that can be used by the version of the operating system software and programming software.

The combination of each version and a function is shown in Table1.1.

Table 1.1 Restrictions by the Software's Version

	Operating system softw	vare version (Note-1),	(Note-2)	
Function	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1))/Q172DCPU(-S1)	
	SV13/SV22	SV13/SV22	SV43	
Checking Motion controller's serial number and operating	_	00D	_	
system software version in GX Developer		000		
Advanced S-curve acceleration/deceleration				
(Except constant-speed control (CPSTART) of servo	_	00H		
program.)				
Direct drive servo		00H	00B	
MR-J3-□B-RJ080W	_	UUH	006	
Servo amplifier display servo error code (#8008+20n)		00H	00B	
0.44ms fixed-cycle event task		00H		
444µs coasting timer (SD720, SD721)		00H	00B	
Synchronous encoder current value monitor in real mode	_	00H		
Display of the past ten times history in current value history		0011	000	
monitor	_	00H	00C	
Amplifier-less operation	_	00H		
Servo instruction (Home position return (ZERO), high speed				
oscillation (OSC)) and manual pulse generator operation in	_	00H		
mixed function of virtual mode/real mode				
Advanced S-curve acceleration/deceleration in constant-		0016		
speed control (CPSTART) of servo program.		00K		
External input signal (DOG) of servo amplifier in home position		222	00B	
return of count method and speed-position switching control		00G	008	
Communication via PERIPHERAL I/F		00H	00C	
Motion SFC operation control instruction		001		
Type conversion (DFLT, SFLT)		00L	_	
Vision system dedicated function (MVOPEN, MVLOAD,		001		
MVTRG, MVPST, MVIN, MVFIN, MVCLOSE, MVCOM)		00L		
Home position return of scale home position signal detection		001	00C	
method		00L	UUC	
Real time display function in digital oscilloscope function		00N	Not support	
Rapid stop deceleration time setting error invalid function		00S		

MELSOFT MT Wor	ks2 (MT Developer	2)			Section of reference	
Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)	/Q172DCPU(-S1)	MR Configurator2	MR Configurator	Coulding the letter for	
SV13/SV22	SV13/SV22	SV43				
_	_	_	_	_	Section 2.2	
1.39R	1.06G		_	_	(Note-5)	
1.39R	1.06G	1.06G	1.01B	C2		
_	_	_	_	_	(Note-5), (Note-6)	
1.39R	1.06G		_	_	(Note-4)	
_	_	_	_		(Note-3)	
_	_		_	_	(Note-6)	
1.39R	1.06G	1.39R	_	_	(Note-3)	
_	_		_	_	(Note-3)	
1.39R	1.09K		_	_	(Note-6)	
1.39R	1.09K		_	_	(Note-5)	
1.39R	1.15R	Not support	_	-		
1.39R	1.15R	1.39R	_		(Note-3)	
1.39R	1.15R	_	_	_	(Note-4)	
1.39R	1.15R		_	_	(Note-4)	
1.39R	1.15R	1.39R	_	_	(Note-5)	
1.39R	1.17T	1.39R	_	_		
_	_		_	_	(Note-5)	

—: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or GX Works2/GX Developer. (Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) Section 1.3, 1.4".)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-7): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-8): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

Table 1.1 Restrictions by the Software's Version (continued)

		Operating system softv	vare version (Note-1), (N	Note-2)	
Function		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/	Q172DCPU(-S1)	
		SV13/SV22	SV13/SV22	SV43	
Vision system dedicated function (MVOUT)		_	00S		
Motion SFC operation control instruction					
Program control (IF - ELSE - IEND, SELECT - (FOR -NEXT, BREAK)	CASE - SEND,	_	00R		
Display format depending on the error setting d	ata information		000		
of motion error history device (#8640 to #8735)		-	00S		
Product information list device (#8736 to #8751)	_	00S		
Safety observation function		_	00S		
Feed current value update command (M3212+: speed control (I)	20n) valid in	00B	Not support		
External forced stop input ON latch (SM506)		00B	00S		
Operation method (SD560)		00B	Not support		
Advanced synchronous control		00B	Not support		
Limit switch output function expansion		00B	Not support		
Driver communication function (SSCNETⅢ)		00C	Not support		
Intelligent function module support		00C	Not support		
SSCNETII/H head module connection		00C	Not support		
Cam auto-generation (CAMMK) easy stroke ra	io cam	00C	Not support		
Acceleration/deceleration time change function		00C	Not support		
Home position return of dogless home position	signal				
reference method		00C	Not support		
Setting range expansion of backlash compensat	on amount	00C	Not support		
Multiple CPU synchronous control		00C	Not support		
Cam axis length per cycle change during synch	ronous control	00C	Not support		
	SSCNETII	_	00L		
	SSCNETII/H	00D	Not support		
Inverter FR-A700 series		_			
Synchronous encoder via servo amplifier		00D	Not support		
Driver communication function (SSCNETⅢ/H)		00D	Not support		
Optical hub unit connection		00F	Not support		
Home position return of driver home position return method		00H	Not support		
Stepping motor module AlphaStep/5-phase manufactured by ORIENTAL MOTOR Co., Ltd.		00H	Not support		
Servo driver VPH series manufactured by CKD Nikki Denso Co., Ltd.		00H	Not support		
IAI electric actuator controller manufactured by	IAI Corporation	00H	Not support		
Inverter FR-A800 series	,	00J	Not support		

	Programming software version					
	rks2 (MT Developer	•			Section of reference	
Q173DSCPU/Q172DSCPU		/Q172DCPU(-S1)	MR Configurator2	MR Configurator		
SV13/SV22	SV13/SV22	SV43				
1.39R	1.39R		_	_	(Note-4)	
1.39R	1.39R		_	I	(Note-4)	
_	_		_	_	(Note-4)	
_	_		_		(Note-5), (Note-6)	
1.39R	1.39R		_		(Note-7)	
_	Not support		_	_	(Note-5)	
_	_		_	_	(Note-3)	
_	Not support		_		(Note-3)	
1.47Z	Not support		_		(Note-8)	
1.47Z	Not support		_		(Note-3)	
_	Not support		_		(Note-3)	
1.56J	Not support		_		(Note-3)	
1.56J	Not support		_		(Note-3)	
1.56J	Not support		_		(Note-4)	
1.56J	Not support		_		(Note-5)	
1.56J	Not support		_	_	(Note-5)	
1.56J	Not support		_		(Note-5)	
1.56J	Not support		_		(Note-8)	
1.56J	Not support		_	_	(Note-8)	
1.34L	1.15R		_		(Note-5)	
1.56J	Not support		_		(Note-5)	
1.34L	1.15R		_		(Note-5)	
1.68W	Not support		1.23Z	Not support	(Note-8)	
1.68W	Not support		1.23Z	Not support	(Note-3)	
_	Not support		_	_	(Note-5)	
1.118Y	Not support		_	_	(Note-5)	
1.118Y	Not support		_	-	(Note-5)	
1.118Y	Not support		_	_	(Note-5)	
1. 118Y	Not support		_	_	(Note-5)	
1.120A	Not support		_	_	(Note-5)	

—: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or GX Works2/GX Developer. (Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) Section 1.3, 1.4".)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-7): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-8): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

Table 1.1 Restrictions by the Software's Version (continued)

	Operating system softw			
Function	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)	/Q172DCPU(-S1)	
	SV13/SV22	SV13/SV22	SV43	
Improvement of absolute positioning operation for servo driver VCII/VPH series manufactured by CKD Nikki Denso Co., Ltd., and stepping motor module AlphaStep/5-phase manufactured by ORIENTAL MOTOR Co., Ltd.	00L	Not support		
Servo amplifier MR-J5(W)-□B support	00Y	Not support		
DOG/CHANGE signal input method support	00Y	Not support		
Servo amplifier MR-JE-□B support	0AA	Not support		
Mark detection signal input method support	0AB	Not support		
Fixed cycle system processing time monitor	0AB	Not support		

Programming software version						
MELSOFT MT Works2 (MT Developer2)					0 " ((
Q173DSCPU/Q172DSCPU	PU Q173DCPU(-S1)/Q172DCPU(-S1)		MR Configurator2	MR Configurator	Section of reference	
SV13/SV22	SV13/SV22	SV43				
_	_		_	_	(Note-5)	
1.170C	Not support		1.130L	Not support		
1.170C	Not support		_	_	(Note-3)	
1.187V	Not support		1.145B	Not support		
1.190Y	Not support		_	_	(Note-3)	
_	Not support		_	_	(Note-3)	

—: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or GX Works2/GX Developer. (Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) Section 1.3, 1.4".)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-7): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-8): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

1.4 Programming Software Version

The programming software versions that support Motion CPU are shown below.

Maties ODLI	MELSOFT MT Wor	ks2 (MT Developer2)	140.0 5 4 0	MD 0 5 1
Motion CPU	SV13/SV22 SV43		MR Configurator2	MR Configurator
Q173DSCPU	1.39R ^(Note-1)		1.10L	Not support
Q172DSCPU	1.39R (Note-1)		1.10L	Not support
Q173DCPU-S1	1.00A (Note-2)	1.03D (Note-3)	1.00A	C0 (Note-4)
Q172DCPU-S1	1.00A (Note-2)	1.03D (Note-3)	1.00A	C0 (Note-4)
Q173DCPU	1.00A	1.03D	1.00A	C0 (Note-4)
Q172DCPU	1.00A	1.03D	1.00A	C0 (Note-4)

(Note-1): Use version 1.47Z or later to use advanced synchronous control method.

(Note-2): Use version 1.12N or later to communicate via PERIPHERAL I/F.

(Note-3): Use version 1.23Z or later to communicate via PERIPHERAL I/F.

(Note-4): Use version C1 or later to use MR Configurator combination with MT Developer2.


2. SYSTEM CONFIGURATION

This section describes the Motion controller system configuration, precautions on use of system and configured equipment.

2.1 Motion System Configuration

(1) Equipment configuration in system

(a) Q173DSCPU/Q172DSCPU

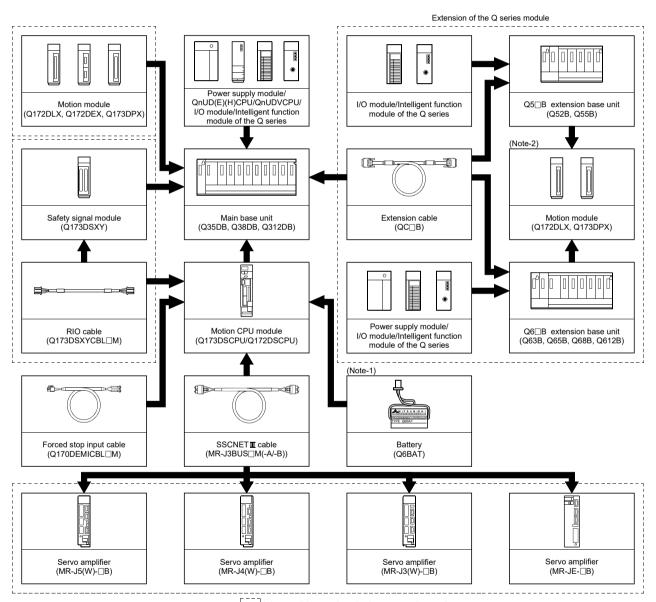

It is possible to select the best according to the system.

(Note-1): Be sure to install the Battery (Q6BAT).

It is packed together with Q173DSCPU/Q172DSCPU. (Note-2): Q172DEX cannot be used in the extension base unit. Install it to the main base unit.

Extension of the Q series module Power supply module/ QnUD(E)(H)CPU/QnUDVCPU/ I/O module/Intelligent function I/O module/Intelligent function (Q172DLX, Q172DEX, Q173DPX) module of the Q series (Q52B, Q55B) module of the Q series (Note-3) (Note-2) Safety signal module (Q173DSXY) Main base unit (Q35DB, Q38DB, Q312DB) Extension cable Motion module (QC□B) (Q172DLX, Q173DPX) (Note-3) Motion CPU module Power supply module/ I/O module/Intelligent function module of the Q series RIO cable (Q173DSXYCBL□M) Q6□B extension base unit (Q63B, Q65B, Q68B, Q612B) (Q173DCPU(-S1)/ Q172DCPU(-S1)) (Note-1) = Forced stop input cable (Q170DEMICBL□M) SSCNET**Ⅲ** cable (MR-J3BUS□M(-A/-B)) Battery holder unit (Q170DBATC)

(b) Q173DCPU(-S1)/Q172DCPU(-S1)

It is possible to select the best according to the system.

(Note-1)

(Note-1): Be sure to install the Battery (Q6BAT) to the Battery holder unit (Q170DBATC). It is packed together with Q173DCPU(-S1)/Q172DCPU(-S1). (Note-2): Q172DEX cannot be used in the extension base unit.

Battery (Q6BAT)


Install it to the main base unit.

(Note-3): Q173DCPU-S1/Q172DCPU-S1 only.

Servo amplifier (MR-J3(W)-□B)

(2) Peripheral device configuration for the Q173D(S)CPU/Q172D(S)CPU

The following (a)(b)(c) can be used.

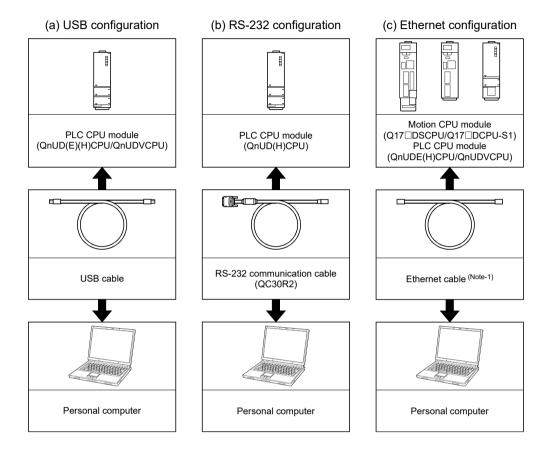

(Note-1): Corresponding Ethernet cables

1) Connecting to Motion CPU module

Part name	Connection type	Cable type	Ethernet standard	Specification	
		Straight cable	10BASE-T		
E41			100BASE-TX	Compliant with Ethernet standards, category 5 or higher.	
Ethernet cable	Direct connection	Crossover cable	10BASE-T	Shielded twisted pair cable (STP cable)	
			100BASE-TX		

[Selection criterion of cable]


Category : 5 or higherDiameter of lead : AWG26 or higher

• Shield : Copper braid shield and drain wire

Copper braid shield and aluminium layered type shield

Connecting to PLC CPU module Refer to the "QnUCPU User's Manual (Communication via Built-in Ethernet Port)".


2.1.1 Q173DSCPU/Q172DSCPU System overall configuration

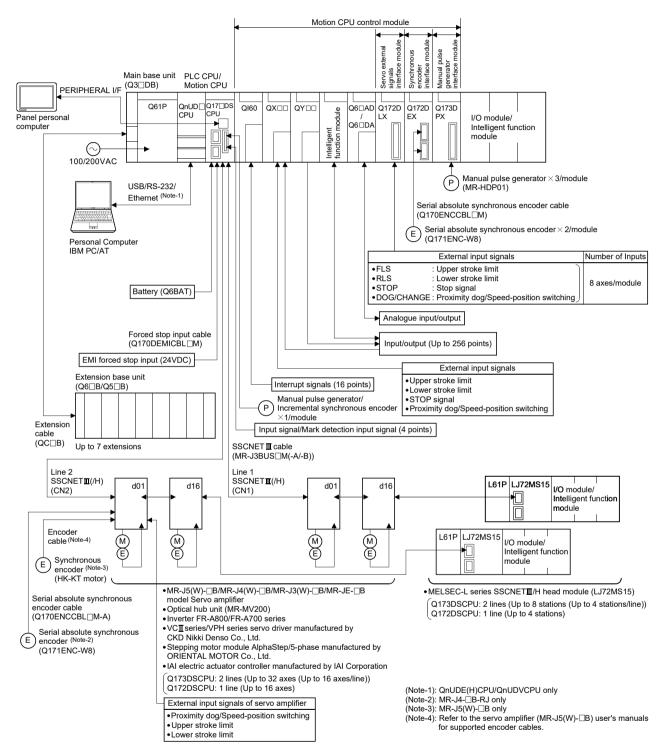

∆CAUTION

- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servo motor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.

2.1.2 Q173DCPU(-S1)/Q172DCPU(-S1) System overall configuration

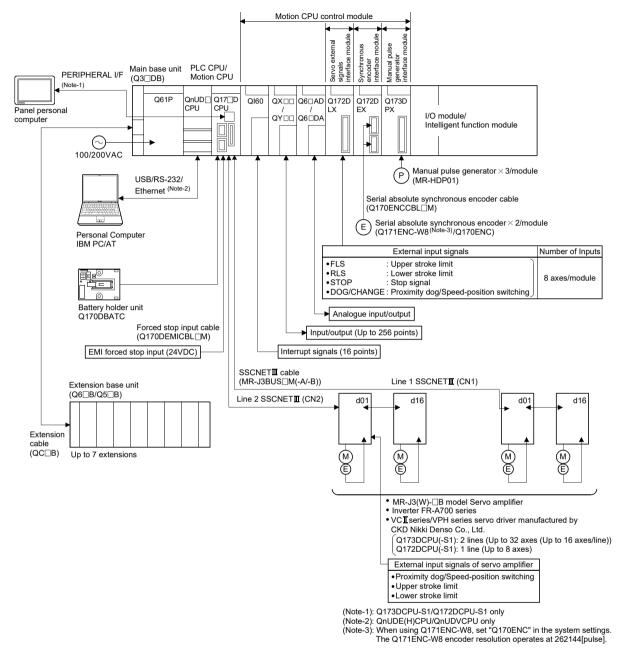

⚠CAUTION

- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servo motor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.

2.1.3 Function explanation of the Motion CPU modules

(1) The following servo amplifiers can be controlled in Motion CPU module.

• Q173DSCPU/Q173DCPU(-S1): Up to 32 axes per 2 lines (up to 16 axes per 1

line)

Q172DSCPU : Up to 16 axes per 1 lineQ172DCPU(-S1) : Up to 8 axes per 1 line

- (2) It is possible to set the program which synchronized with the motion operation cycle and executed at fixed cycle (Min. 0.22ms: Q173DSCPU/Q172DSCPU use).
- (3) It is possible to execute a download of servo parameters to servo amplifier, servo ON/OFF to servo amplifier and position commands, etc. by connecting between the Motion CPU module and servo amplifier with SSCNETII cable.
- (4) It is possible to select the servo control functions/programming languages by installing the corresponding operating system software in the Motion CPU module.
- (5) Motion modules (Q172DLX/Q172DEX/Q173DPX) are controlled with the Motion CPU module, and the signals such as stroke limit signals connected to Motion modules and synchronous encoder can be used as motion control.
- (6) I/O modules and intelligent function modules (excluding some modules) can be controlled with the Motion CPU module. (Refer to Section 2.3 (2) for modules that can be controlled with Motion CPU module.)
- (7) Data exchange between CPU modules is possible by Multiple CPU high speed transmission memory or automatic refresh in the Multiple CPU system.
- (8) Wiring is reduced by issuing the external signal (upper/lower stroke limit signal, proximity dog signal) via the servo amplifier.

2.1.4 Restrictions on Motion systems

- (1) Combination of Multiple CPU system
 - (a) Motion CPU module cannot be used as standalone module. Be sure to install the universal model PLC CPU module to CPU No.1. For Universal model PLC CPU module, "Multiple CPU high speed transmission function" must be set in the Multiple CPU settings.
 - (b) Only Multiple CPU high speed main base unit (Q35DB/Q38DB/Q312DB) can be used.
 - (c) The combination of Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/ Q172DCPU(-S1) and Q173HCPU(-T)/Q172HCPU(-T)/Q173CPUN(-T)/ Q172CPUN(-T) cannot be used. The combination of Q173DSCPU/Q172DSCPU/Q173DCPU(-S1)/ Q172DCPU(-S1) can be used.
 - (d) Up to four modules of universal model PLC CPU modules/Motion CPU modules can be installed from the CPU slot (the slot on the right side of power supply module) to slot 2 of the main base unit. CPU modules called as CPU No.1 to CPU No.4 from the left sequentially.
 There is no restriction on the installation order of CPU No.2 to No.4.
 For CPU module except CPU No.1, an empty slot can be reserved for addition of CPU module. An empty slot can be set between CPU modules. However, the installation condition when combining with the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is different depending on the specification of CPU modules, refer to the Manuals of each CPU modules.
 - (e) It takes about 10 seconds to startup (state that can be controlled) of Motion CPU. Make a Multiple CPU synchronous startup setting suitable for the system.
 - (f) Execute the automatic refresh of the Motion CPU modules and universal model PLC CPU modules by using the automatic refresh of Multiple CPU high speed transmission area setting. When the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is installed in the combination of Multiple CPU system, the Motion CPU module cannot execute the automatic refresh with these modules.
 - (g) Use the Motion dedicated PLC instructions that starts by "D(P).". The Motion dedicated PLC instructions that starts by "S(P)." cannot be used. When the High performance PLC CPU module/Process CPU module/PC CPU module/C controller module is installed in the combination of Multiple CPU system, the Motion dedicated PLC instruction from these modules cannot be executed.

(2) Motion modules

- (a) Installation position of Q172DEX^(Note-1) and Q173DSXY is only the main base unit.
 - It cannot be used on the extension base unit.
- (b) Q172DLX/Q173DPX can be installed on any of the main base unit/ extension base unit.
- (c) Q172DLX/Q172DEX^(Note-1)/Q173DPX cannot be installed in CPU slot and I/O slot 0 to 2 of the main base unit. Wrong installation might damage the main base unit.
- (d) Q173DSXY cannot be used in Q173DCPU/Q172DCPU.
- (e) Q172EX(-S1/-S2/-S3)/Q172LX/Q173PX(-S1) for Q173HCPU(-T)/ Q172HCPU(-T)/Q173CPUN(-T)/Q172CPUN(-T)/Q173CPU/Q172CPU cannot be used.
- (f) Be sure to use the Motion CPU as the control CPU of Motion modules (Q172DLX, Q172DEX^(Note-1), Q173DPX, etc.) for Motion CPU. They will not operate correctly if PLC CPU is set and installed as the control CPU by mistake. Motion CPU is treated as a 32-point intelligent module by PLC CPU of other CPU.
- (g) Q173DSXY is managed with PLC CPU. The Motion CPU to connect Q173DSXY is only CPU No.2 in the Multiple CPU system. Q173DSXY cannot be used for the CPU No. 3 or 4.

(Note-1): Q172DEX can be used in SV22. It cannot be used in SV13/SV43.

(3) Other restrictions

- (a) Motion CPU module cannot be set as the control CPU of intelligent function module (excluding some modules) or Graphic Operation Terminal(GOT).
- (b) Be sure to use the battery.
- (c) There are following methods to execute the forced stop input.
 - Use an EMI connector of Motion CPU module
 - Use a device set in the forced stop input setting of system setting
- (d) Forced stop input for EMI connector of Motion CPU module cannot be invalidated by the parameter. When the device set in the forced stop input setting is used without use of EMI connector of Motion CPU module, apply 24VDC voltage on EMI connector and invalidate the forced stop input of EMI connector.
- (e) Be sure to use the cable for forced stop input (sold separately). The forced stop cannot be released without using it.

(f) Set "SSCNET II/H" or "SSCNET III" for every line in the SSCNET setting of system setting to communicate with the servo amplifiers and SSCNETI/(H) compatible equipment.

The following shows the servo amplifiers and SSCNETII/(H) compatible equipment that can be used when "SSCNETII/H" and "SSCNETII" are set.

	4.5	SSCNET setting		
Servo amplifier/SSCNET Ⅲ /	(H) compatible equipment	SSCNETI/H QDS	SSCNET II	
	MR-J5(W)-□B QDS (Ver.)	0	×	
0 1:5	MR-J4(W)-□B QDS	0	O (Note-1)	
Servo amplifier	MR-J3(W)-□B	×	0	
	MR-JE-□B QDS (Ver.)	0	×	
	FR-A800 series QDS (Ver.)	0	0	
Inverter	FR-A700 series Ver.	×	0	
SSCNET Ⅲ /H head module	LJ72MS15 QDS(Ver.)	0	×	
Servo driver manufactured by	VCI series Ver.	0	0	
CKD Nikki Denso Co., Ltd	VPH series QDS(Ver.)	0	0	
Stepping motor module Alphas	Step/5-phase manufactured	_		
by ORIENTAL MOTOR Co., Lt	d. QDS(Ver.)	0	X	
IAI electric actuator controller r	nanufactured by IAI			
Corporation QDS(Ver.)		O	×	

O: Usable

×: Unusable

(Note-1): Operated in J3 compatibility mode

POINTS

It is possible to use different servo amplifiers on the same SSCNETII/H line, but when high accuracy synchronization on the load side is needed for multiple axes such as for interpolation control or synchronous control, build a system using servo amplifiers of the same servo series.

Ver.!): Refer to Section 1.3 for the software version that supports this function.

(g) The following are restrictions for the communication type depending on the operation cycle.

	operation cycle.			
Operation	Communication type			
cycle	SSCNET Ⅲ /H QDS(SSCNET II		
0.22ms (adds)	MR-J4W3-□B (software version A2 or earlier) cannot be used. (Note-1) One SSCNET II/H head module per line can be set. MR-JE-□B cannot be used. (Note-2) AlphaStep/5-phase cannot be used. (Note-3) Up to 2 axes per IAI electric actuator controller can be set. (Note-5)	 The maximum number of control axes per line is four axes. Set the axis select rotary switch of the servo amplifier to "0 to 3". If the axis select rotary switch of servo amplifier is set to "4 to F", the servo amplifiers are not recognized. MR-J4W3-□B (software version A2 or earlier) cannot be used. (Note-1) MR-J3W-□B cannot be used. FR-A700 series, VCI series, and VPH series cannot be used. (Note-4) 		
0.44ms	 Two SSCNETIM/H head modules per line can be set. Up to 4 axes per IAI electric actuator controller can be set. (Note-5) 	 The maximum number of control axes per line is eight axes. Set the axis select rotary switch of the servo amplifier to "0 to 7". If the axis select rotary switch of servo amplifier is set to "8 to F", the servo amplifiers are not recognized. 		
0.88ms or more	_	_		

—: No restriction

- (Note-1): MR-J4W3-□B (Software version A3 or later) supports operation cycle 0.22ms. However, when using operation cycle 0.22ms, some functions are restricted. Refer to the servo amplifier instruction manual for details.
- (Note-2): When MR-JE-□B is connected, a major error (error code: 1350) occurs.
- (Note-3): When AlphaStep/5-phase is set in system settings, operation is carried out with operation cycle at 0.44ms.
- (Note-4): When FR-A700 series, VCII series, or VPH series is set in system settings, operation is carried out with operation cycle at 0.44ms.
- (Note-5): When the setting exceeds the number of control axes per controller, a major error (error code: 1350) occurs. Set the operation cycle as follows according to the number of control axes per controller.

Number of control axes per controller	Operation cycle
1 to 2 axes	0.22ms or more
3 to 4 axes	0.44ms or more
5 axes or more	0.88ms or more

(h) If there is an axis which is not set at least 1 axis by system setting in applicable servo amplifier at MR-J5W-□B or MR-J4W-□B use, all axes connected to applicable servo amplifier and subsequent servo amplifiers cannot be connected. Set "Not used" to the applicable axis with a dip switch for the axis which is not used by MR-J5W-□B or MR-J4W-□B.

- (i) When a Multiple CPU system is configured, make sure to configure the modules so that the total current consumption of individual modules on the main base does not exceed the 5VDC output capacity of power supply module.
 - (Refer to Section 2.5.2 (3) "Selection of the power supply module".)
- (j) It is impossible to mount the main base unit by DIN rail when using the Motion CPU module.
 - Doing so could result in vibration that may cause erroneous operation.
- (k) The module name displayed by "System monitor" "Product information list" of GX Works2/GX Developer is different depending on the function version of Motion modules (Q172DLX, Q172DEX, Q173DPX).

(Note): Even if the function version "C" is displayed, it does not correspond to the online module change.

	Model	display
Module name	Function version "B"	Function version "C"
Q172DLX	Q172LX	Q172DLX
Q172DEX	MOTION-UNIT	Q172DEX
Q173DPX	MOTION-UNIT	Q173DPX

(I) Use the Graphic Operation Terminal (GOT) that supports Motion CPU (Q173D(S)CPU/Q172D(S)CPU).


2.2 Checking Serial Number and Operating System Software Version

Checking for the serial number of Motion CPU module and Motion module, and the operating system software version is described below.

2.2.1 Checking serial number

(1) Motion CPU module (Q173DSCPU/Q172DSCPU)

- (a) Rating plate
 - The rating plate is situated on the side face of the Motion CPU module. The SERIAL line displays the Motion CPU module serial No.
- (b) Front of Motion CPU module The serial number is displayed on the battery cover situated on the lower front side of the Motion CPU module.

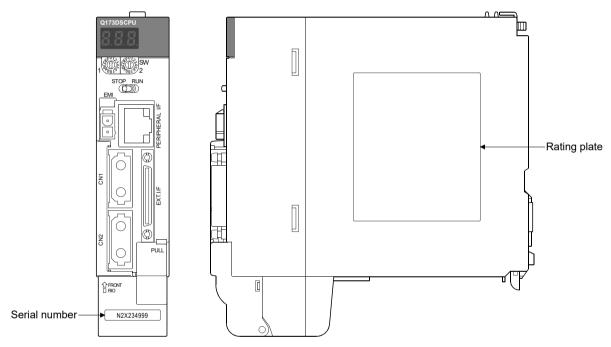


 (c) System monitor (product information list)
 The serial number can be checked on the system monitor screen in GX Works2/GX Developer. (Refer to Section 2.2.2.)

(2) Motion CPU module (Q173DCPU(-S1)/Q172DCPU(-S1))

(a) Rating plate

The rating plate is situated on the side face of the Motion CPU module. The SERIAL line displays the Motion CPU module serial No.

(b) Front of Motion CPU module The serial number is displayed on the protruding portion situated on the lower front side of the Motion CPU module.

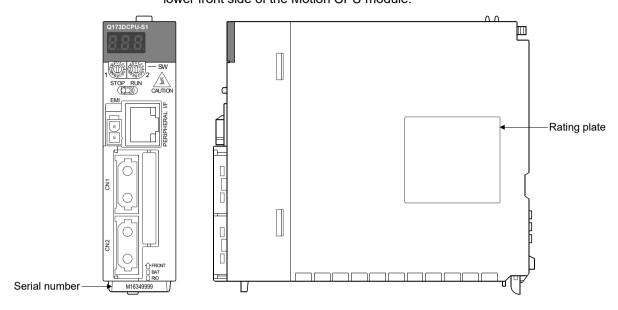

 (c) System monitor (product information list)
 The serial number can be checked on the system monitor screen in GX Works2/GX Developer. (Refer to Section 2.2.2.)

REMARK

The serial number display was corresponded from the Motion CPU modules manufactured in early October 2007.


(3) Motion module (Q172DLX/Q172DEX/Q173DPX/Q173DSXY)

(a) Rating plate

The rating plate is situated on the side face of the Motion module. The SERIAL line displays the Motion CPU module serial No.

(b) Front of Motion module

The serial No. is displayed on the protruding portion situated on the lower front side of the Motion module.

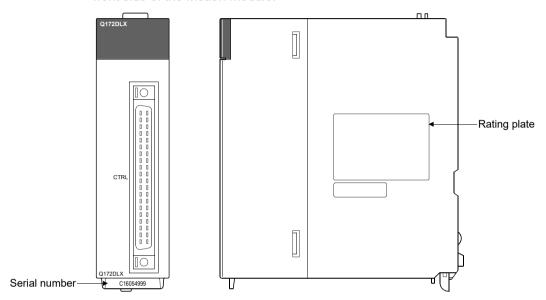


REMARK

The serial number display was corresponded from the Motion modules manufactured in early April 2008.

2.2.2 Checking operating system software version

The operating system software version can be checked on the system monitor screen in GX Works2/GX Developer.

Select [Product Information List] button on the system monitor screen displayed on [Diagnostics] – [System monitor] of GX Works2/GX Developer to check on the product information list.

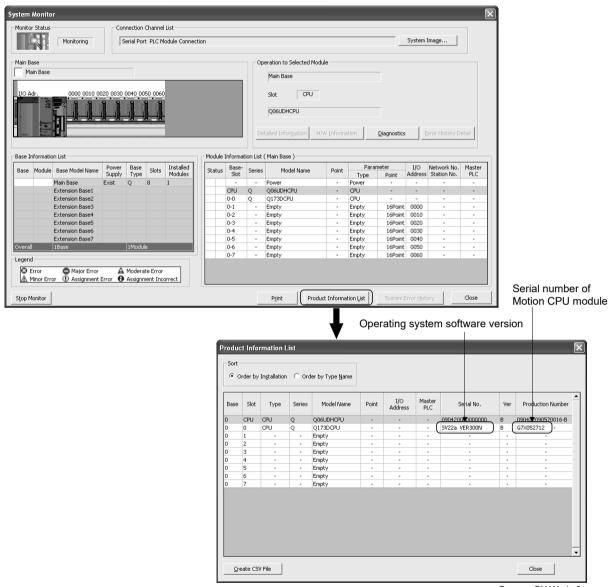

<Screen: GX Works2>

Ver.!: Refer to Section 1.3 for the software version that supports this function.

REMARK

- (1) "Serial number of Motion CPU module" and "Operating system software version" on the system monitor (Product Information List) screen of GX Works2/GX Developer was corresponded from the Motion CPU modules manufactured in early October 2007.
- (2) The operating system software version can also be checked on the system monitor screen in CD-ROM of operating system software or MT Developer2. Refer to Section 1.3.4 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details.

2.3 System Configuration Equipment

(1) Motion controller related module

	. ,		Current	
Part name	Model name (Note-1)	Description	consumption	Remark
		He to 20 years control Occapition and C COmment of The Till	5VDC[A]	
		Up to 32 axes control, Operation cycle 0.22ms or more, Built-in Ethernet, Built-in interface in Motion CPU (Incremental synchronous encoder		
	Q173DSCPU	interface 1ch, Input signal/Mark detection input signal 4 points)	1.75 ^(Note-2)	
		(Attachment battery (Q6BAT))		
		Up to 16 axes control, Operation cycle 0.22ms or more, Built-in Ethernet,		1
		Built-in interface in Motion CPU (Incremental synchronous encoder	1.44 ^(Note-2)	
	Q172DSCPU	interface 1ch, Input signal/Mark detection input signal 4 points)	1.44 (Note-2)	
Motion CPU		(Attachment battery (Q6BAT))		
module	O172DCDU	Up to 32 axes control, Operation cycle 0.44ms or more	1.05	
	Q173DCPU	(Attachment battery holder unit and battery (Q6BAT))	1.25	
	Q173DCPU-S1	Up to 32 axes control, Operation cycle 0.44ms or more, Built-in Ethernet	1.30	
	Q173DCF0-31	(Attachment battery holder unit and battery (Q6BAT))	1.50	
	Q172DCPU	Up to 8 axes control, Operation cycle 0.44ms or more	1.25	
	4.725010	(Attachment battery holder unit and battery (Q6BAT))	1.20	
	Q172DCPU-S1	Up to 8 axes control, Operation cycle 0.44ms or more, Built-in Ethernet	1.30	
_		(Attachment battery holder unit and battery (Q6BAT))		
Servo external		Servo external signal input 8 axes		
signals interface	Q172DLX	(FLS, RLS, STOP, DOG/CHANGE ×8)	0.06	
module				
Synchronous encoder	Q172DEX	Serial absolute synchronous encoder Q171ENC-W8/Q170ENC	0.19	
interface module		interface ×2, Tracking input 2 points, with A6BAT	0.19	
Manual pulse				
generator	Q173DPX	Manual pulse generator MR-HDP01/Incremental synchronous encoder	0.38	
interface module		interface ×3, Tracking input 3 points		
Safety signal	Q173DSXY	Input 20 points (2 paths), Output 12 points (2 paths)	0.20	
module	Q173D3X1	imput 20 points (2 patris), Output 12 points (2 patris)	0.20	
	Q03UDCPU	Program capacity 30k steps, LD instruction processing speed 0.02μs	0.33	
	Q04UDHCPU	Program capacity 40k steps, LD instruction processing speed 0.0095µs	0.39	
	Q06UDHCPU	Program capacity 60k steps, LD instruction processing speed 0.0095µs	0.39	
	Q10UDHCPU	Program capacity 100k steps, LD instruction processing speed 0.0095µs	0.39	
	Q13UDHCPU	Program capacity 130k steps, LD instruction processing speed 0.0095µs	0.39	
	Q20UDHCPU	Program capacity 200k steps, LD instruction processing speed 0.0095µs	0.39	1
	Q26UDHCPU	Program capacity 260k steps, LD instruction processing speed 0.0095µs	0.39	-
	Q03UDECPU	Program capacity 30k steps, LD instruction processing speed 0.02µs,	0.46	
		Built-in Ethernet port		1
PLC CPU	Q04UDEHCPU	Program capacity 40k steps, LD instruction processing speed 0.0095µs,	0.49	
module ^(Note-3)		Built-in Ethernet port		
	Q06UDEHCPU	Program capacity 60k steps, LD instruction processing speed 0.0095µs,	0.49	
		Built-in Ethernet port Program capacity 100k steps, LD instruction processing speed 0.0095µs,		1
	Q10UDEHCPU	Built-in Ethernet port	0.49	
		Program capacity 130k steps, LD instruction processing speed 0.0095µs,		1
	Q13UDEHCPU	Built-in Ethernet port	0.49	
		Program capacity 200k steps, LD instruction processing speed 0.0095µs,		
	Q20UDEHCPU	Built-in Ethernet port	0.49	
	OOGLIDELIOSU	Program capacity 260k steps, LD instruction processing speed 0.0095µs,	0.40	
	Q26UDEHCPU	Built-in Ethernet port	0.49	

Motion controller related module (continued)

Module (Note-3) Q04UDVCPU				1	
QS0UDEHCPU	Part name	Model name (Note-1)	Description	consumption	Remark
A		Q50UDEHCPU			
PLC CPU High-speed type 0.58		Q100UDEHCPU		0.50	
Module (Note-3) Q04UDVCPU		Q03UDVCPU		0.58	
High-speed type	PLC CPU module ^(Note-3)	Q04UDVCPU		0.58	
High-speed type		Q06UDVCPU		0.58	
C20UUCPU		Q13UDVCPU		0.58	
C Controller module (Note-3) C Controller module (Note-3) Q24DHCCPU-LS Q24DHCCPU-LS Q24DHCCPU-LS Q26DHCCPU-LS Q26DHCCPU-LS		Q26UDVCPU		0.58	
C Controller module (Note-3) Q24DHCCPU-LS Q26DHCCPU-LS Q20D to 240VAC input, 5VDC 6A output Q26DHC Q26D		Q12DCCPU-V	CPU: SH4A, Endian format: Little endian, OS: VxWorks [®] 6.4	0.97	
C Controller module (Note-3) Q24DHCCPU-LS Q26DHCCPU-LS Q20D to 240VAC input, 5VDC 6A output Q26DHC Q26D			CPU: SH4A, Endian format: Little endian, OS: VxWorks®6.8.1	2.80	
Q24DHCCPU-LS QS: No pre-installed operating system (Operating system installed by user) Q26DHCCPU-LS CPU: SH4A, Endian format: Little endian, Q3: No pre-installed operating system (Operating system installed by user) Q36DHCCPU-LS Q61P-A1 100 to 120VAC input, 5VDC 6A output Q61P-A2 Q00 to 240VAC input, 5VDC 6A output Q61P-D 100 to 240VAC input, 5VDC 6A output Q61P-D 100 to 240VAC input, 5VDC 6A output Q62P 100 to 240VAC input, 5VDC 6A output Q63P 24VDC input, 5VDC 6A output Q63P 24VDC input, 5VDC 6A output Q63P 24VDC input, 5VDC 6A output Q64PN 100 to 120VAC/200 to 240VAC input, 5VDC 8.5A output Q64PN 100 to 240VAC input, 5VDC 8.5A output Q64PN Q64PN 100 to 240VAC input, 5VDC 8.5A output Q35DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 8 slots 0.23 Q31DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 8 slots 0.23 Q31DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 0.11 Q65B Number of I/O modules installed 3 slots, requires a power supply module 0.11 Q65B Number of I/O modules installed 5 slots, requires a power supply module 0.12 Q612B Number of I/O modules installed 2 slots, does not require a power supply module 0.5BB Number of I/O modules installed 2 slots, does not require a power supply module 0.15 Q05B Length 0.6m(1.97ft.) Q05B Length 0.6m(1.97ft.) Q030B Length 0.6m(1.97ft.) Q030B Length 3.2m(9.84ft.) Q030B Length 1.2m(9.84ft.) Q030B Length 1.2m(9.84ft.) Q030B Length 1.2m(9.84ft.) Q030B Length 1.2m(9.84ft.) Q030B Length 5m(16.40ft.)	C Controller				1
Q26DHCCPU-LS		Q24DHCCPU-LS		2.80	
Q61P-A1		Q26DHCCPU-LS	CPU: SH4A, Endian format: Little endian,	2.80	
Description		0040 44			
Q61P			• • •		
Power supply module (Note-4) Q62P 100 to 240VAC input, 5VDC 6A output, life detection power supply Q62P 100 to 240VAC input, 5VDC 3A/24VDC 0.6A output Q63P 24VDC input, 5VDC 6A output Q64P 100 to 120VAC/200 to 240VAC input, 5VDC 8.5A output Q64PN 100 to 240VAC input, 5VDC 8.5A output Q35DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 5 slots Q38DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 12 slots Q312DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 12 slots Q63B Number of I/O modules installed 3 slots, requires a power supply module Q65B Number of I/O modules installed 5 slots, requires a power supply module Q612B Number of I/O modules installed 12 slots, requires a power supply module Q52B Number of I/O modules installed 2 slots, does not require a power supply module Q55B Number of I/O modules installed 2 slots, does not require a power supply module Q65B Number of I/O modules installed 2 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module Q65B Number of I/O modules installed 5 slots, does not require a power supply module			• • •		
Main base unit (Note-3) Q62P 100 to 240VAC input, 5VDC 3A/24VDC 0.6A output Q64P 100 to 120VAC/200 to 240VAC input, 5VDC 8.5A output Q64PN 100 to 240VAC input, 5VDC 8.5A output Q64PN 100 to 240VAC input, 5VDC 8.5A output Q35DB Multiple CPU high speed bus (4 slots), Number of I/O modules: 5 slots Q33DB Multiple CPU high speed bus (4 slots), Number of I/O modules: 8 slots Q312DB Multiple CPU high speed bus (4 slots), Number of I/O modules: 12 slots Q312DB Multiple CPU high speed bus (4 slots), Number of I/O modules: 12 slots Q312DB Q63B Number of I/O modules installed 3 slots, requires a power supply module Q65B Number of I/O modules installed 5 slots, requires a power supply module Q65B Number of I/O modules installed 12 slots, requires a power supply module Q612B Number of I/O modules installed 12 slots, requires a power supply module Q612B Number of I/O modules installed 2 slots, does not require a power supply module Q55B Number of I/O modules installed 5 slots, does not require a power supply module Q55B Number of I/O modules installed 5 slots, does not require a power supply module Q612B Length 0.45m(1.48ft.) QC06B Length 0.6m(1.97ft.) QC12B Length 1.2m(3.94ft.) QC30B Length 3m(9.84ft.) QC50B Length 5m(16.40ft.)			• • •		
Q63P 24VDC input, 5VDC 6A output					
Q64P	module (********)		•		
Q64PN 100 to 240VAC input, 5VDC 8.5A output Q35DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 5 slots 0.23 Q38DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 8 slots 0.23 Q312DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 12 slots 0.24 Q63B Number of I/O modules installed 3 slots, requires a power supply module 0.11 Q65B Number of I/O modules installed 5 slots, requires a power supply module 0.11 Q68B Number of I/O modules installed 4 slots, requires a power supply module 0.12 Q612B Number of I/O modules installed 12 slots, requires a power supply module 0.13 Q52B Number of I/O modules installed 12 slots, does not require a power supply module 0.08 Q55B Number of I/O modules installed 2 slots, does not require a power supply module 0.10 0.08 Q55B Number of I/O modules installed 5 slots, does not require a power supply module 0.10 0.			• • •		
Main base unit (Note-3) Multiple CPU high speed bus (4 slots), Number of I/O modules: 5 slots 0.23			• • • • • • • • • • • • • • • • • • • •		
Main base unit (Note-3) Q38DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 8 slots Q312DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 12 slots Q312DB Number of I/O modules installed 3 slots, requires a power supply module Q63B Number of I/O modules installed 5 slots, requires a power supply module Q65B Number of I/O modules installed 8 slots, requires a power supply module Q68B Number of I/O modules installed 12 slots, requires a power supply module Q612B Number of I/O modules installed 12 slots, requires a power supply module Q52B Number of I/O modules installed 2 slots, does not require a power supply module Q55B Number of I/O modules installed 5 slots, does not require a power supply module Q55B Length 0.45m(1.48ft.) QC06B Length 0.6m(1.97ft.) QC12B Length 1.2m(3.94ft.) QC30B Length 5m(16.40ft.)					
Q38DB Multiple CPU high speed bus (4 slots), Number of I/O modules : 8 slots 0.23	Main base unit		· · · · · · · · · · · · · · · · · · ·		4
Q63B Number of I/O modules installed 3 slots, requires a power supply module 0.11					4
Extension base unit (Note-3) Extension base unit (Sobre 2) Extension cable Extension cable Extension base unit (Sobre 2) Extension cable			· · · · · · · · · · · · · · · · · · ·		
Extension base unit (Note-3) Q68B Number of I/O modules installed 8 slots, requires a power supply module Q612B Number of I/O modules installed 12 slots, requires a power supply module Q52B Number of I/O modules installed 2 slots, does not require a power supply module Q55B Number of I/O modules installed 5 slots, does not require a power supply module Q55B Number of I/O modules installed 5 slots, does not require a power supply module Q55B Length 0.45m(1.48ft.) QC06B Length 0.6m(1.97ft.) QC12B Length 1.2m(3.94ft.) QC30B Length 3m(9.84ft.) QC50B Length 5m(16.40ft.)					4
Extension base unit (Note-3) Q612B Number of I/O modules installed 12 slots, requires a power supply module 0.13 Q52B Number of I/O modules installed 2 slots, does not require a power supply module 0.08 Q55B Number of I/O modules installed 5 slots, does not require a power supply module 0.10 QC05B Length 0.45m(1.48ft.) 0.10 QC06B Length 0.6m(1.97ft.) 0.10 QC12B Length 1.2m(3.94ft.) 0.20 QC30B Length 3m(9.84ft.) 0.250B Length 5m(16.40ft.) 0.250B 0.250B			Number of I/O modules installed 5 slots, requires a power supply module	0.11	4
Unit (Note-3) Q52B Number of I/O modules installed 2 slots, does not require a power supply module 0.08 Q55B Number of I/O modules installed 5 slots, does not require a power supply module 0.10 QC05B Length 0.45m(1.48ft.)		Q68B	Number of I/O modules installed 8 slots, requires a power supply module	0.12	4
Q52B module Q55B Number of I/O modules installed 5 slots, does not require a power supply module Q.10		Q612B	Number of I/O modules installed 12 slots, requires a power supply module	0.13	1
QC05B	unit ^(Note-3)	Q52B		0.08	
QC06B Length 0.6m(1.97ft.) QC12B Length 1.2m(3.94ft.) QC30B Length 3m(9.84ft.) QC50B Length 5m(16.40ft.)		Q55B		0.10	
QC06B Length 0.6m(1.97ft.) QC12B Length 1.2m(3.94ft.) QC30B Length 3m(9.84ft.) QC50B Length 5m(16.40ft.)		QC05B	Length 0.45m(1.48ft.)		
QC12B Length 1.2m(3.94ft.) QC30B Length 3m(9.84ft.) QC50B Length 5m(16.40ft.)		QC06B			
QC30B Length 3m(9.84ft.) QC50B Length 5m(16.40ft.)			, , , , , , , , , , , , , , , , , , ,		
QC50B Length 5m(16.40ft.)	Extension cable				
ICACTOOD ILENGII TOTIIGZ.OTIL.)		QC100B	Length 10m(32.81ft.)		

Motion controller related module (continued)

l e	IVIOLIOI	, , , , , , , , , , , , , , , , , , ,		1
	Madal (Note 1)	5	Current	
Part name	Model name (Note-1)	Description	consumption	Remark
			5VDC[A]	
ĺ	0.4745140 ****	Resolution: 4194304pulse/rev	0.0-	
Serial absolute	Q171ENC-W8	Permitted axial loads Radial load: Up to 19.6N, Thrust load: Up to 9.8N	0.25	
synchronous		Permitted speed: 3600r/min		
encoder		Resolution: 262144pulse/rev		
	Q170ENC	Permitted axial loads Radial load: Up to 19.6N, Thrust load: Up to 9.8N	0.20	
		Permitted speed: 3600r/min		
		Serial absolute synchronous encoder Q171ENC-W8/Q170ENC ↔ Q172DEX		
Serial absolute	Q170ENCCBL□M	2m(6.56ft.), 5m(16.40ft.), 10m(32.81ft.), 20m(65.62ft.), 30m(98.43ft.),		
synchronous		50m(164.04ft.)		
encoder cable		Serial absolute synchronous encoder Q171ENC-W8 ↔ MR-J4-□B-RJ		
	Q170ENCCBL□M-A	2m(6.56ft.), 5m(16.40ft.), 10m(32.81ft.), 20m(65.62ft.), 30m(98.43ft.),		
		50m(164.04ft.)		
		Q172DEX side connector		
		Connector :10120-3000PE		
	Q170ENCCNS	Connector case : 10320-52F0-008		
Connector set		Q171ENC-W8/Q170ENC side connector		
for serial		Plug : D/MS3106B22-14S		
absolute		Cable clamp : D/MS3057-12A		
synchronous		MR-J4-□B-RJ side connector		
encoder cable		Plug : 36210-0100PL		
	MR-J3CN2	Shell : 36310-3200-008		
		Q171ENC-W8 side connector		
		Plug : D/MS3106B22-14S		
		Cable clamp : D/MS3057-12A		
Internal I/F	Q170DSIOCON	Incremental synchronous encoder/Mark detection signal interface connector		
connector set		With ferrite core		
Manual pulse	MR-HDP01	Pulse resolution: 25pulse/rev(100pulse/rev after magnification by 4)	0.00	
generator		Permitted axial loads Radial load: Up to 19.6N, Thrust load: Up to 9.8N	0.06	
D - # - - - - -		Permitted speed: 200r/min(Normal rotation), Voltage-output		
Battery holder unit ^(Note-5)	Q170DBATC	Battery holder for Q6BAT (Attachment battery cable)		
		For data backup of SRAM built-in Motion CPU		
Rattony	Q6BAT	(Programs, Parameters, Motion devices(#), Devices of latch range,		
Battery		Absolute position data)		
	A6BAT	For data backup of Q171ENC-W8/Q170ENC		
Cable for forced	Q170DEMICBL□M	Length 0.5m(1.64ft), 1m(3.28ft), 3m(9.84ft), 5m(16.40ft), 10m(32.81ft),	_	
stop input ^(Note-6)	Q I / UDEIVIICDL□IVI	15m(49.21ft), 20m(65.62ft), 25m(82.02ft), 30m(98.43ft)		
Connector for				
forced stop input	Q170DEMICON	Connector for forced stop input cable production		
cable				
Connector!	A6TBXY36	For positive common sink type input module, sink type output module	_	
Connector/	V0 1 DV 1 90	(standard type)		
terminal block conversion	A6TBXY54	For positive common sink type input module, sink type output module	_	
module (Note-7)	70 I DV I 94	(2-wire type)		
module · /	A6TBX70	For positive common sink type input module (3-wire type)		
Cable for	AC05TB	Length 0.5m (1.64ft.)		
connector/	AC10TB	Length 1m (3.28ft.)		
terminal block	AC20TB	Length 2m (6.56ft.)		
conversion	AC30TB	Length 3m (9.84ft.)		
module	AC50TB	Length 5m (16.40ft.)		1
	, .50015	1=0.13a. 0 (10.101a)		l

Motion controller related module (continued)

Part name	Model name (Note-1)	Description	Current consumption 5VDC[A]	Remark
Cable for connector/	AC80TB	Length 8m (26.25ft.)	_	
conversion module	AC100TB	Length 10m (32.81ft.)		
	MR-J3BUS□M	 Q173DSCPU/Q172DSCPU ↔ MR-J5(W)-□B, MR-J5(W)-□B ↔ MR-J5(W)-□B, MR-J5(W)-□B ↔ LJ72MS15 Q173DSCPU/Q172DSCPU ↔ MR-J4(W)-□B, MR-J4(W)-□B ↔ MR-J4(W)-□B, MR-J4(W)-□B ↔ LJ72MS15 Q173D(S)CPU/Q172D(S)CPU ↔ MR-J3(W)-□B, MR-J3(W)-□B ↔ MR-J3(W)-□B Q173DSCPU/Q172DSCPU ↔ MR-JE-□B, MR-JE-□B, MR-JE-□B, MR-JE-□B ↔ LJ72MS15 Standard cord for inside panel 0.15m(0.49ft.), 0.3m(0.98ft.), 0.5m(1.64ft.), 1m(3.28ft.), 3m(9.84ft.) 	_	
SSCNETⅢ cable	MR-J3BUS□M-A	• Q173DSCPU/Q172DSCPU ↔ MR-J5(W)-□B, MR-J5(W)-□B ↔ MR-J5(W)-□B, MR-J5(W)-□B, Q173DSCPU/Q172DSCPU ↔ MR-J4(W)-□B, MR-J4(W)-□B ↔ MR-J4(W)-□B, MR-J4(W)-□B ↔ LJ72MS15 • Q173D(S)CPU/Q172D(S)CPU ↔ MR-J3(W)-□B, MR-J3(W)-□B ↔ MR-J3(W)-□B • Q173DSCPU/Q172DSCPU ↔ MR-JE-□B, MR-JE-□B ↔ MR-JE-□B, MR-JE-□B ↔ LJ72MS15 • Standard cable for outside panel 5m(16.40ft.), 10m(32.81ft.), 20m(65.62ft.)		
	MR-J3BUS□M-B (Note-8)	• Q173DSCPU/Q172DSCPU ↔ MR-J5(W)-□B, MR-J5(W)-□B ↔ MR-J5(W)-□B, MR-J5(W)-□B, C173DSCPU/Q172DSCPU ↔ MR-J4(W)-□B, MR-J4(W)-□B ↔ MR-J4(W)-□B, MR-J4(W)-□B ↔ MR-J4(W)-□B, MR-J3(W)-□B ↔ MR-J3(W)-□B, MR-J3(W)-□B ↔ MR-J3(W)-□B, MR-J3(W)-□B ↔ MR-J3(W)-□B • Q173DSCPU/Q172DSCPU ↔ MR-JE-□B, MR-JE-□B ↔ MR-JE-□B	_	
RIO cable	Q173DSXYCBL01M			
TAO Cable	Q173DSXYCBL05M	Length 0.5m (1.64ft.)		

- $(Note-1): \ \Box = Cable \ length \ (015: 0.15m(0.49ft.), \ 03: 0.3m(0.98ft.), \ 05: 0.5m(1.64ft.), \ 1: \ 1m(3.28ft.), \ 2: \ 2m(6.56ft.), \ 3: \ 3m(9.84ft.), \\ 5: \ 5m(16.40ft.), \ 10: \ 10m(32.81ft.), \ 20: \ 20m(65.62ft.), \ 25: \ 25m(82.02ft.), \ 30: \ 30m(98.43ft.), \ 40: \ 40m(131.23ft.), \\ 50: \ 50m(164.04ft))$
- (Note-2): The manual pulse generator or incremental synchronous encoder that consumes less than 0.2[A] of current can be connected to the internal I/F connector.
- (Note-3): 5VDC internal current consumption of shared equipment with PLC might be changed. Be sure to refer to the MELSEC-Q series PLC Manuals.
- (Note-4): Be sure to use the power supply module within the range of power supply capacity.
- (Note-5): Battery Q6BAT is not attached to Battery holder unit Q170DBATC. Please purchase it separately.
- (Note-6): Be sure to use the cable for forced stop input (sold separately). The forced stop cannot be released without using it. Cable for forced stop input is not attached to the Motion CPU module. Please purchase the cable for length according to system separately.
- (Note-7): These modules can be used in Q172DLX. It cannot be controlled using Q173DPX.
- (Note-8): Please contact your nearest Mitsubishi Electric sales representative for the cable of less than 30m(98.43ft.).

(2) PLC module which can be controlled by Motion CPU

	Part name		Model name	Current consumption 5VDC[A] (Note-1)	Remark
			QX10	0.05 (TYP, All points ON)	
	AC		QX10-TS	0.05 (TYP, All points ON)	
			QX28	0.05 (TYP, All points ON)	
			QX40	0.05 (TYP, All points ON)	
			QX40-TS	0.05 (TYP, All points ON)	
			QX40-S1	0.06 (TYP, All points ON)	
			QX40H	0.08 (TYP, All points ON)	
	DC (Positiv	re common)	QX41	0.075 (TYP, All points ON)	
			QX41-S1	0.075 (TYP, All points ON)	
			QX41-S2	0.075 (TYP, All points ON)	
			QX42	0.09 (TYP, All points ON)	
			QX42-S1	0.09 (TYP, All points ON)	
Input module	DC/AC		QX50	0.05 (TYP, All points ON)	
			QX70	0.055 (TYP, All points ON)	
	DC concer		QX70H	0.08 (TYP, All points ON)	
	DC sensor		QX71	0.07 (TYP, All points ON)	
			QX72	0.085 (TYP, All points ON)	
			QX80	0.05 (TYP, All points ON)	
			QX80-TS	0.05 (TYP, All points ON)	
			QX80H	0.08 (TYP, All points ON)	
	DC (Nameti		QX81	0.075 (TYP, All points ON)	
	DC (Negative common)		QX81-S2	0.075 (TYP, All points ON)	
			QX82	0.09 (TYP, All points ON)	Refer to the MELSEC-Q series PLC
			QX82-S1	0.09 (TYP, All points ON)	Manuals.
			QX90H	0.08 (TYP, All points ON)	
			QY10	0.43 (TYP, All points ON)	
	Relay		QY10-TS	0.43 (TYP, All points ON)	
			QY18A	0.24 (TYP, All points ON)	
	Triac		QY22	0.25 (TYP, All points ON)	
			QY40P	0.065 (TYP, All points ON)	
			QY40P-TS	0.065 (TYP, All points ON)	
		Ciple Tupo	QY41P	0.105 (TYP, All points ON)	
		Sink Type	QY41H	0.37 (TYP, All points ON)	
Output module			QY42P	0.15 (TYP, All points ON)	
	Transistor		QY50	0.08 (TYP, All points ON)	
		Independent	QY68A	0.11 (TYP, All points ON)	
			QY80	0.08 (TYP, All points ON)	
		Course Ture	QY80-TS	0.08 (TYP, All points ON)	
		Source Type	QY81P	0.095 (TYP, All points ON)	
			QY82P	0.16 (TYP, All points ON)	
	TTL	(Sink)	QY70	0.095 (TYP, All points ON)]
	TTL•CMOS	o (OIIIK)	QY71	0.15 (TYP, All points ON)]
Input/Output	DC 1		QH42P	0.13 (TYP, All points ON)]
composite	DC Input/		QX48Y57	0.08 (TYP, All points ON)]
module	Transistor of	υαιραι	QX41Y41P	0.13 (TYP, All points ON)	
Interrupt module			QI60	0.06 (TYP, All points ON)	

PLC module which can be controlled by Motion CPU (continued)

	Part name	Model name	Current consumption 5VDC[A] (Note-1)	Remark
	Voltage input	Q68ADV	0.64	
		Q62AD-DGH	0.33	
	Current input	Q66AD-DG	0.42	
Analogue input		Q68ADI	0.64	
module		Q64AD	0.63	
	Voltage/current input	Q64AD-GH	0.89	
		Q68AD-G	0.46	
	Voltage output	Q68DAVN	0.38	
	Current output	Q68DAIN	0.38	
Analogue output		Q62DAN	0.33	
module	Malta and for amount and and	Q62DA-FG	0.37	Defeate the MELOFO Occasion DLO
	Voltage/current output	Q64DAN	0.34	Refer to the MELSEC-Q series PLC Manuals.
		Q66DA-G	0.62	Manuals.
Analogue input/output module		Q64AD2DA	0.17	
I Bada and and	Differential input	QD62D	0.38	
High-speed counter module	5/12/24VDC input/ Differential input	QD65PD2	0.23	
		QD75P1	0.40	
	Open collector output	QD75P2	0.46	
		QD75P4	0.58	
.		QD75D1	0.52	
Positioning	Differential output	QD75D2	0.56	
module		QD75D4	0.82	
		QD75MH1	0.15	Refer to the MELSEC-Q QD75MH
	SSCNETⅢ compatible	QD75MH2	0.15	Positioning Module User's Manual
		QD75MH4	0.16	(Details).
		QD77MS2	0.60	Refer to the MELSEC-Q QD77MS
Simple Motion module	SSCNETⅢ/H compatible	QD77MS4	0.60	Simple Motion Module User's Manual
		QD77MS16	0.75	(Positioning Control).
Comband white of the		UQ1-01	0.50	Refer to the manual of OPTEX FA
Control unit of displacement sensor		UQ1-02	0.50	CO., LTD.

(Note-1): 5VDC internal current consumption of shared equipment with PLC might be changed. Be sure to refer to the manuals for each module.

(3) SSCNETⅢ(/H) compatible equipment

(a) SSCNETII/H compatible equipment

Part name	Model name	Description	Remarks
	MR-J5-□B		
MR-J5 series servo	MR-J5-□B-RJ		Refer to the servo amplifier
amplifier	MR-J5W2-□B	For 2-axis type	(MR-J5(W)-□B) user's
	MR-J5W3-□B	For 3-axis type	manuals.
	MR-J4-□B		B 6 4 41 115
MR-J4 series servo	MR-J4-□B-RJ		Refer to the servo amplifier
amplifier	MR-J4W2-□B	For 2-axis type	(MR-J4(W)-□B) instruction
	MR-J4W3-□B	For 3-axis type	manuals.
MR-JE series servo	MR-JE-□B		Refer to the servo amplifier
amplifier	MR-JE-□BF		(MR-JE-□B) instruction manuals.
SSCNETⅢ/H head	L IZOMO45	Maximum link points: Input 64 bytes, Output 64 bytes	Refer to the MELSEC-L
module	LJ72MS15	Transmission cycle: 0.222ms, 0.444ms, 0.888ms	series PLC manuals.
Optical hub unit	MR-MV200	3 branches, 1 unit, 24VDC power supply connector is attached	

(b) SSCNET**I** compatible equipment

Part name	Model name	Description	Remarks
	MR-J3-□B		
	MR-J3W-□B	For 2-axis type	
MR-J3 series servo	MR-J3-□B-RJ006	For fully closed control	Refer to the servo amplifier
amplifier	MR-J3-□B-RJ004	For linear servo motor	(MR-J3(W)-□B) instruction
	MR-J3-□B-RJ080W	For direct drive motor	manuals.
	MR-J3-□B Safety	For drive safety servo	

(4) Operating system software

A 15 15	Software package				
Application	Q173DSCPU (Note-1)	Q172DSCPU (Note-1)	Q173DCPU(-S1)	Q172DCPU(-S1)	
Conveyor assembly use SV13	SW8DNC-SV13QJ	SW8DNC-SV13QL	SW8DNC-SV13QB	SW8DNC-SV13QD	
Automatic machinery use SV22	SW8DNC-SV22QJ	SW8DNC-SV22QL	SW8DNC-SV22QA	SW8DNC-SV22QC	
Machine tool peripheral use SV43	_	_	SW7DNC-SV43QA	SW7DNC-SV43QC	

(Note-1): The operating system software (SV22 (Virtual mode switching method)) is installed at the time of product purchases.

(5) Programming software packages

(a) Motion controller engineering environment

Part name	Model name
MELSOFT MT Works2 (MT Developer2 (Note-1))	SW1DND-MTW2-E

(Note-1): This software is included in Motion controller engineering environment "MELSOFT MT Works2".

(6) Related software packages

(a) PLC software package

Model name	Software package
GX Works2	SW1DND-GXW2-E
GX Developer	SW8D5C-GPPW-E

(b) Servo set up software package

Model name	Software package
MR Configurator2	SW1DNC-MRC2-E
MR Configurator (Note-1)	MRZJW3-SETUP221E

(Note-1): Q173DSCPU/Q172DSCPU is not supported.

POINTS

When the operation of Windows[®] is unclear in the operation of this software, refer to the official Windows[®] manual or a guidebook from another supplier.

2.4 General Specifications

General specifications of the Motion controller are shown below.

Item	Specification					
Operating ambient temperature		0 to 55°C (32 to 131°F)				
Storage ambient temperature			-25 to 75°	°C (-13 to 167°F)		
Operating ambient humidity			5 to 95% R	H, non-condensing	3	
Storage ambient humidity			5 to 95% R	H, non-condensing]	
			Frequency	Constant acceleration	Half amplitude	Sweep count
Note that the second second	Compliant with	Under intermittent	5 to 8.4Hz		3.5mm (0.14inch)	10 times each in
Vibration resistance	JIS B 3502 and IEC 61131-2	vibration	8.4 to 150Hz	9.8m/s ²		X, Y, Z directions
	IEC 61131-2	Under continuous	5 to 8.4Hz		1.75mm (0.07inch)	
		vibration	8.4 to 150Hz	4.9m/s ²		
Shock resistance	Compliant v	Compliant with JIS B 3502 and IEC 61131-2 (147m/s ² , 3 times in each of 3 directions X, Y, Z)				ections X, Y, Z)
Operating ambience		No corrosive gases				
Operating altitude (Note-1)	2000m(6561.68ft.) or less					
Mounting location	Inside control panel					
Overvoltage category (Note-2)	II or less					
Pollution level (Note-3)			2	2 or less		

- (Note-1): Do not use or store the Motion controller under pressure higher than the atmospheric pressure of altitude 0m. Doing so can cause an operation failure. When using the Motion controller under pressure, please contact with our sales representative.
- (Note-2): This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises.
 - Category I applies to equipment for which electrical power is supplied from fixed facilities.
 - The surge voltage withstand level for up to the rated voltage of 300V is 2500V.
- (Note-3): This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.

Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.

▲CAUTION

- The Motion controller must be stored and used under the conditions listed in the table of specifications above.
- When not using the module for a long time, disconnect the power line from the Motion controller or servo amplifier.
- Place the Motion controller and servo amplifier in static electricity preventing vinyl bags and store.
- When storing for a long time, please contact with our sales representative.
 Also, execute a trial operation.


2.5 Specifications of Equipment and Settings

2.5.1 Name of parts for CPU module

This section explains the names and setting of the module.


(1) Name of parts

(a) Q173DSCPU/Q172DSCPU

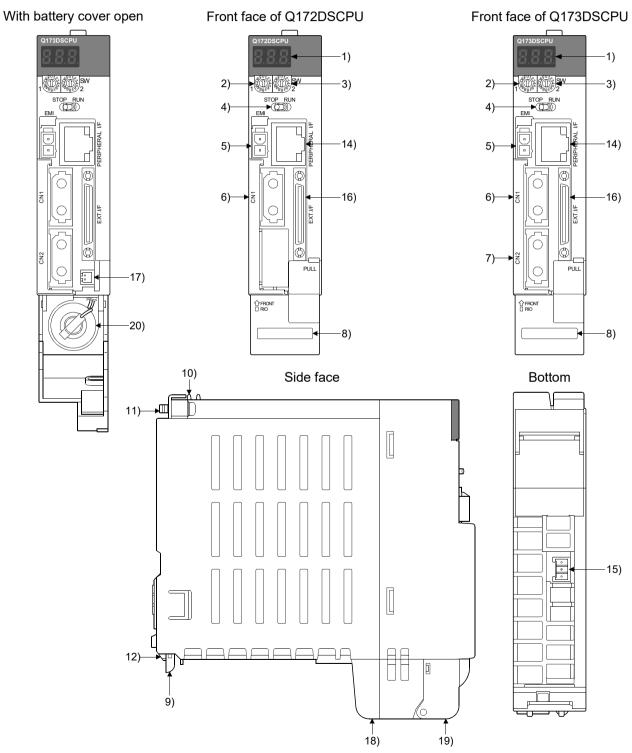


(b) Q173DCPU(-S1)/Q172DCPU(-S1)


Front face of Q172DCPU(-S1)

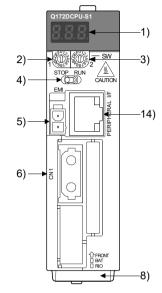


Front face of Q173DCPU(-S1)

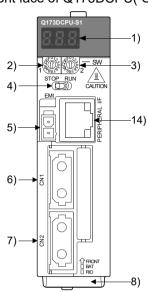

Side face

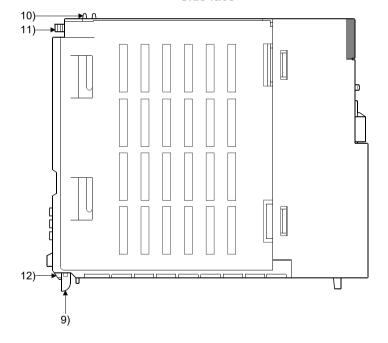

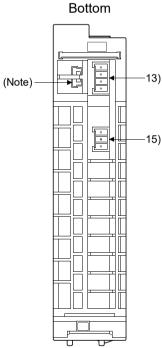

(Note): Unusable (Under manufacturer test)

No.	Name	Application			
1)	7-segment LED	Indicates the operating status and error information.			
2)	Rotary function select 1 switch (SW1)	Set the operation mode. (Normal operation mode, Installation mode, Mode operated by ROM, etc)			
3)	Rotary function select 2 switch (SW2)	 Each switch setting is 0 to F. (Note): Switch setting of factory default Q173DSCPU/Q172DSCPU : SW1 "0", SW2 "0" position Q173DCPU(-S1)/Q172DCPU(-S1): SW1 "A", SW2 "0" position 			
4)	RUN/STOP switch	Move RUN/STOP to change the operating state of the Motion CPU module. RUN: Motion SFC program (SV13/SV22)/Motion program (SV43) is started. STOP: Motion SFC program (SV13/SV22)/Motion program (SV43) is stopped.			
5)	Forced stop input connector (EMI) (Note-1) EMI EMI EMI EMI	Input to stop all axes of servo amplifier in a lump. EMI ON (opened) : Forced stop EMI OFF (24VDC input) : Forced stop release			
6)	SSCNETII CN1 connector (Note-2)	Connector to connect the servo amplifier of line 1 (up to 16 axes).			
7)	SSCNETII CN2 connector (Note-2), (Note-3)	Connector to connect the servo amplifier of line 2 (up to 16 axes).			
8)	Serial number display	Displays the serial number described on the rating plate.			
9)	Module mounting lever	Used to install the module to the base unit.			
10)	Module fixing hook (Note-4)	Hook used to fix the module to the base unit. (Auxiliary use for installation)			
11)	Module fixing screw	Screw used to fix to the base unit. (M3×13)			
12)	Module fixing projection	Hook used to fix to the base unit.			
13)	Battery connector (BAT) (Note-5)	Connector to connect the battery holder unit Q170DBATC.			
14)	PERIPHERAL I/F connector (Note-6)	For communication I/F with peripheral devices. • Lower LED Remains flashing: It communicates with the peripheral devices. OFF: It does not communicate with the peripheral devices. • Upper LED Data transmission speed ON: 100Mbps OFF: 10Mbps Item Specification			
		Transmission beed 100Mbps/10Mbps Communication mode Full-duplex/Half-duplex Transmission method Base band Cable length [m(ft.)] Up to 30 (98.43)			
15)	RIO connector (Note-6)	Connector to connect the safety signal module (Q173DSXY).			
16)	Internal I/F connector	Connector to connect the manual pulse generator/incremental synchronous encoder, or to input the input signal/mark detection input signal. (Voltage-output/open-collector type, Differential-output type)			
17)	Battery connector	Connector to connect the battery (Q6BAT).			

No.	Name	Application		
18)	Battery holder	Holder to support the battery (Q6BAT).		
19)	Battery cover	Cover for battery (Q6BAT).		
20)	Battery (Note-9)	Battery for backup of program, parameters, motion devices (#), devices of latch data and absolute position data.		

- (Note-1): Be sure to use the cable for forced stop input (sold separately). The forced stop cannot be released without using it. If the cable for forced stop input is fabricated on the customer side, make it within 30m(98.43ft.).
- (Note-2): Put the SSCNET cable in the duct or fix the cable at the closest part to the Motion CPU module with bundle material in order to prevent SSCNET cable from putting its own weight on SSCNET connector.
- (Note-3): Q173DSCPU/Q173DCPU(-S1) only
- (Note-4): This screw is auxiliary use for module installation to the main base unit. Be sure to fix modules to the main base unit using supplied fixing screws.
- (Note-5): Be sure to use the battery. The programs, parameters, motion devices(#), devices of latch data and absolute position data of SRAM built-in Motion CPU module are not backed up if the battery is not set correctly.
- (Note-6): Q173DSCPU/Q172DSCPU/Q173DCPU-S1/Q172DCPU-S1 only

POINTS

Only a LAN connection is available for PERIPHERAL I/F connector. Connection via the Internet is not possible.

(2) 7-segment LED display

The LED displays/flashes in the combination with errors.

	Item	7-segment LED		Remark
Start			Initializing	It takes about 10 seconds to initialize (RUN/STOP display). Execute the power cycle of the Multiple CPU system if the operation stops at initializing for several minutes. It may be Motion controller's hardware fault when it is not improved. Explain the error symptom (LED display) and get advice from our sales representative for the modules with failure.
		5. 8. 8. 5. 8. 8.	Initializing (Safety observation function use)	Initialization and self-diagnosis of safety observation function is executed at power supply ON. It takes about 15 seconds to execute initialization and self-diagnosis of safety observation function.
		8.8.8.	"E□□" display	Hardware error or software error during initializing. indicates the error code. Explain the error symptom (LED display) and get advice from our sales representative for the modules with failure.
Normal		3. 3. 3 *	" 米" remains flashing	Normal operation.
Installation	mode	8.8.5.	Steady "INS" display, " ※" remains flashing	Mode to install the operating system software via personal computer.
Operation mode	Mode operated by RAM	8.8.8.	" * remains flashing	Mode to operate based on the user programs and parameters stored in the SRAM built-in Motion CPU module.

	Item	7-segm	ent LED	Remark
Operation mode	Mode operated by ROM	8. 8. E _*	Steady " . " display, " ※" remains flashing	Mode to operate after the user programs and parameters stored in the FLASH ROM built-in Motion CPU are read to the SRAM built-in Motion CPU.
STOP		8.8.8.	Steady "STP" display	Stopped the Motion SFC program (SV13/SV22)/ Motion program (SV43) with the PLC READY flag (M2000) OFF.
RUN		8.8.8.	Steady "RUN" display	Executed the Motion SFC program (SV13/SV22)/ Motion program (SV43) with the PLC READY flag (M2000) ON.
Battery	Early stage warning (2.7V or less)	8.8.8.	Steady "BT1" display	Displayed at battery voltage 2.7V or less. Refer to Section "6.5 Battery".
error	Final stage warning (2.5V or less)	8.8.8.	Steady "BT2" display	Displayed at battery voltage 2.5V or less. Refer to Section "6.5 Battery".
Operating s	system software d		"A00" remains flashing	It becomes the status of installation mode when the operating system software is not installed.
System set	iting error		" AL" flashes 3 times ↓ Steady " L01" display	System setting error of the Motion CPU Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details.
Servo error			" AL" flashes 3 times ↓ Steady " S01" display	Servo error of the Motion CPU Refer to the Programming Manual of the operating system software used for details.
WDT error		8.8.8.	Steady "" display	Hardware fault or software fault Refer to the Programming Manual of the operating system software used for details.
Self-diagno (Error relate	ostic error ed for Multiple CPU)		" AL" flashes 3 times Steady " A1" display (Self-diagnosis error) 4-digits error code is displayed in two sequential flashes of 2-digits each. (ex. error code [3012])	Setting error of the Multiple CPU system Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details.

POINTS

- (1) An error is displayed at the 7-segment LED, confirm the error code etc. using MT Developer2.
- (2) Refer to the Motion CPU error batch monitor of MT Developer2 or error list of Programming Manual for error details.

(3) Rotary switch assignment

(a) Rotary function select 1 switch (SW1)

Rotary switch	Setting (Note)	Mode	Description
	0	Normal mode	Normal operation mode
VF 0 7,3 4 5 8 L 8 8 L 8	А	Installation mode	Installed the operating system software using MT Developer2

(Note): Do not set other than the above setting.

(b) Rotary function select 2 switch (SW2)

Rotary switch	Setting (Note)	Mode	Description
0 Mode operated by RAM		Mode operated by RAM	Normal operation mode (Operation by the setting data and parameters stored in the SRAM built-in Motion CPU module.)
0703450 0846810	6	Mode operated by ROM	Mode to operate based on the setting data and parameters wrote to the FLASH ROM built-in Motion CPU module.
	8	Ethernet IP address display mode	Mode to display the Ethernet IP address.
	С	SRAM clear	SRAM "0" clear

(Note): Do not set other than the above setting.

∆CAUTION

■ Be sure to turn OFF the Multiple system power supply before the rotary switch setting change.

(4) Operation mode

(a) Rotary switch setting and operation mode

Rotary switch	setting (Note-1)	
SW1	SW2	Operation mode
Α	Any setting (Except C)	Installation mode
0	0	Mode operated by RAM
0	6	Mode operated by ROM
0	8	Ethernet IP address display mode
Any setting	С	SRAM clear (Note-2)

(Note-1): Do not set other than the above setting.

(Note-2): The programs, parameters, motion devices(#), devices of latch data and absolute position data of SRAM built-in Motion CPU module are cleared.


(b) Operation mode overview

Operation mode	7-segment LED	Operation overview
Installation mode	8.8.8.	 Steady "INS" display at the 7-segment LED. Operating system software can be installed. It is STOP status regardless of the RUN/STOP switch position at the front side of Motion CPU module. The stop error "MULTI CPU DOWN (error code: 7000)" will occur at the other CPU.
Mode operated by RAM	8.8.8 *	" . " remains flashing in the first digit of 7-segment LED. It operates based on the user programs and parameters stored in the SRAM built-in Motion CPU module. The user programs and parameters for the ROM operation can be written to the FLASH ROM built-in Motion CPU.
Mode operated by ROM	5. 5. 5 *	 " . " remains flashing in the first digit and steady " . " display in the second digit of 7-segment LED. Operation starts after the user programs and parameters stored in the FLASH ROM built-in Motion CPU module are read to the SRAM built-in Motion CPU module at power supply on or reset of the Multiple CPU system. If the ROM writing is not executed, even if the user programs and parameters are changed using the MT Developer2 during mode operated by ROM, operation starts with the contents of the FLASH ROM built-in Motion CPU module at next power supply on or reset. Also, If the ROM writing is not executed, even if the auto tuning data are reflected on the servo parameter of Motion CPU by operation in the auto-tuning setting, operation starts with the contents of the FLASH ROM built-in Motion CPU module at next power supply on or reset.
Ethernet IP address display mode	Refer to next page (c)	 Refer to next page "(c) Ethernet IP address display mode overview". It is STOP status regardless of the RUN/STOP switch position on the front side of Motion CPU module. The stop error "MULTI CPU DOWN (error code: 7000)" will occur at the other CPU.
SRAM clear	8.8.8	 " . " remains flashing in the first digit of 7-segment LED. The programs, parameters, motion devices(#), devices of latch data and absolute position data of SRAM built-in Motion CPU module are cleared by turning ON the Multiple CPU system's power supply after the rotary switch 2 is set to "C".

POINTS

- (1) Be sure to turn OFF the Multiple CPU system's power supply before the rotary switch setting change.
- (2) It is recommended to shift to the mode operated by ROM after the programs and parameters are fixed. The erasing of the programs and parameters can be avoided even if the battery decrease. (The ROM writing cannot be executed for the current position of the servo motor in the absolute position system, home position and latch device. Back up them beforehand using MT Developer2.)

Refer to Section 4.4 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details of the ROM operation.

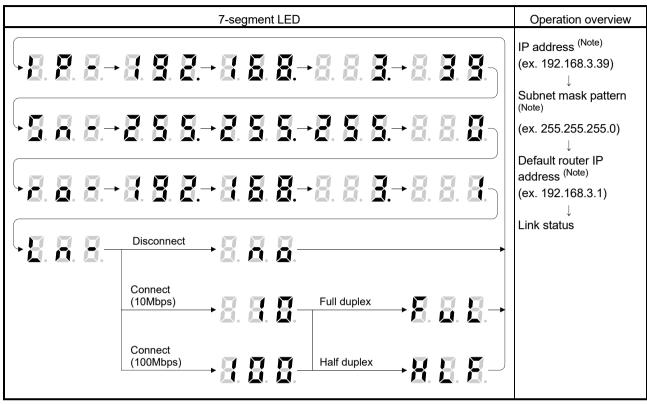

(c) Ethernet IP address display mode overview

(Note): When the Ethernet parameters are not written in the Motion CPU, the addresses are displayed as follows.

IP address : 192.168.3.39
 Subnet mask pattern : 255.255.255.0
 Default router IP address : 192.168.3.1

(5) Basic specifications of Q173D(S)CPU/Q172D(S)CPU

(a) Module specifications

Item	Q173DSCPU	Q172DSCPU	Q173DCPU	Q173DCPU-S1	Q172DCPU	Q172DCPU-S1
Internal current consumption (5VDC) [A]	1.75 ^(Note-1)	1.44 ^(Note-1)	1.25	1.30	1.25	1.30
Mass [kg]	0.38		0.33			
Exterior dimensions [mm(inch)]	120.5 (4.74)(H) × 27.4 (1.08)(W) × 120.3 (4.74)(D)		98 (3.85)(H) × 27.4 (1.08)(W) × 119.3 (4.70)(D)			

(Note-1): The current consumption (0.2[A]) of manual pulse generator/incremental synchronous encoder connected to the internal I/F connector is not included.

(6) SV13/SV22 Motion control specifications/performance specifications

(a) Motion control specifications

Itom		Q173DSCPU	•	O173DCDI / S1)	O172DCDLI(\$1)		
Number of central even			Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)		
Number of control axe Operation cycle	SV13	Up to 32 axes 0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 24 axes 1.77ms/25 to 32 axes	Up to 16 axes 0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 16 axes	Up to 32 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 18 axes 1.77ms/19 to 32 axes	Up to 8 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 8 axes		
(default)	SV22	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes 1.77ms/17 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 12 axes 1.77ms/13 to 28 axes 3.55ms/29 to 32 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 8 axes		
Interpolation functions	S	Linear interpolation (Up to 4 axes), Circular interpolation (2 axes), Helical interpolation (3 a			interpolation (3 axes)		
Control modes		PTP(Point to Point) control, Speed control, Speed-position switching control, Fixed-pitch feed, Constant speed control, Position follow-up control, Speed control with fixed position stop, Speed switching control, High-speed oscillation control, Speed-torque control, Synchronous control (SV22 (Virtual mode switching method/Advanced synchronous control method))		PTP(Point to Point) control, Speed control, Speed-position switching control, Fixed-pitch feed, Constant speed control, Position follow-up control, Speed control with fixed position stop, Speed switching control, High-speed oscillation control, Synchronous control (SV22)			
Acceleration/		Trapezoidal acceleration/deceleration, S-curve acceleration/deceleration,					
deceleration control		Advanced S-curve acceleration/deceleration					
Compensation		Backlash compensation, Electronic gear, Phase compensation (SV22)					
Programming language		Motion SFC, Dedicated instruction, Mechanical support language (SV22) (Note-1)		Motion SFC, Dedicated instruction, Mechanical support language (SV22)			
Servo program capacity		16k steps					
Number of positioning	g points	3200 points (Positioning data can be designated indirectly)					
Peripheral I/F		USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU)		USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU) (Note-2)			
Home position return function			od (3 types), es), Dog cradle method, nod (2 types), nbined method, gnal detection method, signal reference method, ion return method	Proximity dog method (2 types), Count method (3 types), Data set method (2 types), Dog cradle method Stopper method (2 types), Limit switch combined method, Scale home position signal detection method			
JOG operation function		Home position return re-try function provided, home position shift function provided Provided					
		Possible to connect 3 modules (Q173DPX use) Possible to connect 1 module (Built-in interface in Motion CPU use) (Note-3) Provided Possible to connect 3 modules (Q173DPX use)		nodules (Q173DPX use)			
Synchronous encoder operation function (Note-4)		(Q172DEX + Q173DP Motion CPU + V	2 modules (SV22 use) X + Built-in interface in ia device (Note-5) lote-5), (Note-6) + Multiple as control (Note-5))	Possible to connect 12 modules (SV22 use) (Q172DEX + Q173DPX)	Possible to connect 8 modules (SV22 use) (Q172DEX + Q173DPX)		
M-code function		M-code out	put function provided, M-c	ovided, M-code completion wait function provided			

Motion control specifications (continued)

Item		Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)	
SV13			Number of outpu	t points 32 points		
3713		Watch data: Motion control data/Word device				
Limit switch outp	SV22	Virtual mode switching method: Number of output points 32 points Advanced synchronous control method: Number of output points 64 points × 2 settings Output timing compensation Watch data: Motion control data/Word device		Number of output points 32 points Watch data: Motion control data/Word device		
ROM operation	function		Prov	rided		
Multiple CPU sy control (Note-5)	nchronous	Prov	rided	None		
External input si	gnal	of servo	signals (FLS/RLS/DOG) amplifier, on CPU (DI), Bit device	Q172DLX or External input signals (FLS/RLS/DOG) of servo amplifier		
High-speed read (Note-7)	ling function	(Via built-in interfa	Provided Provided Provided erface in Motion CPU, (Via input module, Via tracking of nput module, Via tracking of O172DEX/O173DEX)		le, Via tracking of	
Forced stop		Moti	on controller forced stop (E Forced stop termina	•	ting),	
Number of I/O points		Total 25 (Built-in interface in Motion I/O module + Intellig	on CPU (Input 4 points) +	Total 256 points (I/O module)		
Mark detection	Mark detection mode setting	Continuous de Specified number Ring buf	of detection mode,			
function	Mark detection signal	Built-in interface in Motion CPU (4 points), Bit device, DOG/CHANGE signal of Q172DLX				
	Mark detection setting	32 se	ttings			
Clock function		Provided Provided				
Security function	1	Provided Provided (Protection by software security key or password) (Protection by password)				
All clear function	1	Provided				
Remote operation		Remote RUN/STOP, Remote latch clear				
Optional data	SSCNETII/H	Up to 6 data/axis (Communication data: Up to 6 points/axis)		None		
monitor function	SSCNETI	Up to 3 data/axis (Communication data: Up to 3 points/axis)				
Digital oscilloscope function		Motion buffering method (Real-time waveform can be displayed) Sampling data: Word 16CH, Bit 16CH		Motion buffering method (Real-time waveform can be displayed) Sampling data: Word 4CH, Bit 8CH		
Absolute position system		Made compatible by setting battery to servo amplifier. (No battery required when a servo motor with a batteryless absolute position encoder is used) (Possible to select the absolute data method or incremental method for each axis)				
SSCNET communication	Communication type	SSCNETII/H, SSCNETII		SSCNETIII		
(Note-8)	Number of lines	2 lines (Note-9)	1 line (Note-9)	2 lines	1 line	
Driver communio (Note-10)	cation function	Provided		None		

Motion control specifications (continued)

Item		Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)
	Q172DLX	4 modules usable	2 modules usable	4 modules usable	1 module usable
Number of Motion related	Q172DEX		4 modules usable		
modules	Q173DPX	4 modules usable ^(Note-11)			3 modules usable (Note-11)
Number of SSCNETⅢ/H head module connection stations		Up to 8 stations usable (Up to 4 stations/line)	Up to 4 stations usable	Unus	sable
Number of optical hub unit connections		Up to 32 units usable (Up to 16 units/line)	Up to 16 units usable	Unus	sable

- (Note-1): SV22 virtual mode only
- (Note-2): Q173DCPU-S1/Q172DCPU-S1 only
- (Note-3): When the manual pulse generator is used via the built-in interface in Motion CPU, the Q173DPX cannot be used.
- (Note-4): Any incremental synchronous encoder connected to the built-in interface in Motion CPU will automatically be assigned an Axis No. one integer greater than the number of encoders connected to any Q172DEX modules and Q173DPX modules.
- (Note-5): SV22 advanced synchronous control only
- (Note-6): Servo amplifier (MR-J5(W)-□B/MR-J4(W)-□B) only.
 - Refer to "Q173DSCPU/Q172DSCPU Motion controller Programming Manual (Advanced Synchronous Control)" for details on encoders that can be used as a synchronous encoder axis.
- (Note-7): This cannot be used in SV22 advanced synchronous control.
- (Note-8): The servo amplifiers for SSCNET cannot be used.
- (Note-9): SSCNETⅢ and SSCNETⅢ/H cannot be combined in the same line.
 - For Q173DSCPU, SSCNETⅢ or SSCNETⅢ/H can be set every line.
- (Note-10): Servo amplifier (MR-J5-□B/MR-J4-□B/MR-J3-□B) only.
- (Note-11): When using the incremental synchronous encoder (SV22 use), you can use above number of modules. When connecting the manual pulse generator, you can use only 1 module.

(b) Motion SFC performance specifications

Item				Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	
Motion SFC	Code total (N	Code total (Motion SFC chart +		652k bytes	543k bytes	
program	Operation co	peration control + Transition)		002K Bytes	540K Bytes	
capacity	Text total (O	peration cont	rol + Transition)	668k bytes	484k bytes	
	Number of M	lumber of Motion SFC programs		256 (No.	0 to 255)	
	Motion SFC	C chart size/program		Up to 64k bytes (Included Motion SFC chart comments)		
Motion SFC	Number of M	Notion SFC s	teps/program	Up to 40	94 steps	
program	Number of se	elective bran	ches/branch	25	55	
	Number of pa	parallel branches/branch		255		
	Parallel bran	ch nesting		Up to 4		
	Number of operation control programs			4096 with F(Once execution type) and (F/FS0 to I		
	Number of tra	ansition prog	rams	4096(G0 t	to G4095)	
Operation	Code size/pr	ogram		Up to approx. 64k b	oytes (32766 steps)	
control	Number of bl	ocks(line)/pr	ogram	Up to 8192 blocks (in the ca	ase of 4 steps(min)/blocks)	
program (F/FS)	Number of ch	naracters/blo	ck	Up to 128 (comment included)		
(F/F3) /	Number of o	Number of operand/block		Up to 64 (operand: constants, word device, bit devices)		
, Transition	() nesting/block			Up to 33	2 levels	
program (G)	Descriptive	Operation control program		Calculation expression, bit conditional expression, branch/repetition processing	Calculation expression, bit conditional expression	
	expression	Transition program		Calculation expression/bit conditional expression/		
				comparison conditional expression		
	Number of m	ulti execute	programs	Up to 256		
	Number of m	ulti active ste	eps	Up to 256 steps/all programs		
		Normal tasl	Κ.	Execute in main cycle of Motion CPU		
				Execute in fixed cycle	Execute in fixed cycle	
 	(Execution	Fixed cycle	(0.22ms, 0.44ms, 0.88ms, 1.77ms,	(0.44ms, 0.88ms, 1.77ms, 3.55ms,		
Execute		(Execution	-	3.55ms, 7.11ms, 14.2ms)	7.11ms, 14.2ms)	
specification	Executed	can be	External	Executes when the input set to the	event task factor in the input module	
	task	1 ' 1	interrupt	controlled by the Motion C	CPU (16 points) turns ON.	
			PLC interrupt	Execute with interrupt instruction	on (D(P).GINT) from PLC CPU.	
				Executes when the input set to the NMI task factor in the input module		
	NMI task			controlled by the Motion CPU (16 points) turns ON.		
Number of I/O	Number of I/O points (X/Y)			8192 points		
				256 points		
Number of res	I/O points /DV	(/DV)		(Built-in interface in Motion CPU (Input	256 points	
ivuiliber of rea	Number of real I/O points (PX/PY)			4 points) + I/O module + Intelligent	(I/O module)	
				function module)		

(7) SV43 Motion control specifications/performance specifications (a) Motion control specifications

xes	Q173DCPU(-S1) Up to 32 axes	Q172DCPU(-S1)		
xes	Up to 32 axes			
	,	Up to 8 axes		
	0.44ms/ 1 to 4 axes			
	0.88ms/ 5 to 12 axes	0.44ms/ 1 to 4 axes		
		0.88ms/ 5 to 8 axes		
ns				
ration control				
		· · · · · · · · · · · · · · · · · · ·		
S				
eous start		Axis designation program: 8		
		Control program : 16		
ng points	Approx. 10600 points (Positioning			
	Proximity dog method (2 types), Count me	thod (3 types), Data set method (2 types),		
	Dog cradle method, Stopper method (2	types), Limit switch combined method,		
n function	Scale home position signal detection method			
	Home position return re-try function provided, home position shift function provided			
tion	Provided			
ator operation	Describle to compact 2 modules (O472DDV use)			
•	Possible to connect 3 modules (Q173DPX use)			
	M-code output function provided, M-co	ode completion wait function provided		
unction	Number of output points 32 points			
unction	Watch data: Motion co	ntrol data/Word device		
	Prov	ided		
g function	Override ratio settir	ng: -100 to 100[%]		
ction	Prov	ided		
I	Q172DLX or External input signals (FLS/RLS/DOG) of servo amplifier			
function	Provided (Via input module, Via tracking of Q173DPX)			
	Motion controller forced stop (EMI connector, System setting),			
	Forced stop terminal of servo amplifier			
S	Total 256 points (I/O module)			
	Provided			
	Provided (Protection by password)			
	Provided			
	Remote RUN/STOP, Remote latch clear			
function	Provided			
rstem	Made compatible by setting battery to servo amplifier. (Possible to select the absolute data method or incremental method for each axis)			
Communication				
уре	SSCN	IC 1 III		
Number of lines	2 lines	1 line		
Q172DLX	4 modules usable	1 module usable		
Q173DPX	1 module	s usable		
	eous start Ing points In function Ion Interior Interio	1.77ms/13 to 28 axes 3.55ms/29 to 32 axes Ins		

(Note-1): Q173DCPU-S1/Q172DCPU-S1 only (Note-2): The servo amplifiers for SSCNET cannot be used.

(b) Motion program performance specifications

	Item	Q173DCPU(-S1)/Q172DCPU(-S1)
Dun aurana ann an ita	Total of program files	504k bytes
Program capacity	Number of programs	Up to 1024 (No. 1 to 1024)
	Arithmetic operation	Unary operation, Addition and subtraction operation, Multiplication and division operation, Remainder operation
Operation controls	Comparison operation	Equal to, Not equal to
	Logical operation	Logical shift operation, Logical negation, Logical AND, Logical OR, Exclusive OR
G-codes	Positioning command	G00, G01, G02, G03, G04, G09, G12, G13, G23, G24, G25, G26, G28, G30, G32, G43, G44, G49, G53, G54, G55, G56, G57, G58, G59, G61, G64, G90, G91, G92, G98, G99, G100, G101
M-codes	Output command to data register	M****
Special M-codes	Program control command	M00, M01, M02, M30, M98, M99, M100
Variable	Device variable	X, Y, M, B, F, D, W, #, U□\G
Franckis a	Trigonometric function	SIN, COS, TAN, ASIN, ACOS, ATAN
Functions	Numerical function	ABS, SQR, BIN, LN, EXP, BCD, RND, FIX, FUP, INT, FLT, DFLT, SFLT
	Start/end	CALL, CLEAR
	Home position return	CHGA
	Speed/torque setting	CHGV, CHGT, TL
	Motion control	WAITON, WAITOFF, EXEON, EXEOFF
Instructions		CALL, GOSUB, GOSUBE, IFGOTO,
	Jump/repetition processing	IFTHENELSE IFELSEEND,
		WHILEDOBREAKCONTINUEEND
	Data appretion	BMOV, BDMOV, FMOV, BSET, BRST, SET, RST, MULTW, MULTR,
	Data operation	TO, FROM, ON, OFF, IFTHENSET/RST/OUT, PB
Number of centrals	Program calls (GOSUB/GOSUBE)	Up to 8
Number of controls	Program calls (M98)	Up to 8

(8) Selection of Q172DEX, Q173DPX

160.00	Synchrono	us encoder	Manual pulse generator	
Item	Serial absolute	Incremental		
Q173DSCPU				
Q172DSCPU	12 mc	odules		
Q173DCPU(-S1)			3 modules	
Q172DCPU(-S1)	8 modules			
Module selection	Q172DEX	Q173DPX		

(9) Internal I/F connector QDS(

(a) The pin layout of the internal I/F connector

manual pulse signals and incremental synchronous encoder signals. The following is the pin layout of the internal I/F connector as viewed from the front.

Use the internal I/F connector on the front of the Motion CPU to connect to

	Internal I/F connector							
				Pin No.	Signal Name	Pin No.	Signal Name	
		1	(Note-3)	1	COM	26	No connect	
	A		(14016-3)	2	COM	27	No connect	
				3	DI4	28	No connect	
				4	DI3	29	No connect	
1		26		5	DI2	30	No connect	
				6	DI1	31	No connect	(Note-4)
				7	No connect	32	No connect	(14010-4)
				8	No connect	33	No connect	
			(Note-4)	9	No connect	34	No connect	
			(14010 4)	10	No connect	35	No connect	
				11	No connect	36	No connect	
				12	No connect	37	No connect	Ţ
			_	13	SG	38	5V	(Note-5)
	1			14	No connect	39	5V) (11010 0)
25		50	(Note-4)≺	15	No connect	40	SG	
			(Note-4)≺	16	No connect	41	SG	
				17	No connect	42	No connect	
			(Note-2)	18	HAH	43	No connect	
		•	(Note-1)	19	HA	44	No connect	
			(Note-2)	20	HAL	45	No connect	
			(Note-4)		No connect	46	No connect	(Note-4)
			(Note-2)		HBH	47	No connect	
			(Note-1)	23	HB	48	No connect	
			(Note-2)	24	HBL	49	No connect	
			(Note-4)	25	No connect	50	No connect	J

Applicable connector model name

HDR type connector (HONDA TSUSHIN KOGYO CO., LTD.)

HDR-É50MSG1+ connector

HDR-E50LPHP+ connector case

(Note-1): Voltage-output/open-collector type

Connect the A-phase signal to HA, and the B-phase signal to HB.

(Note-2): Differential-output type

Connect the A-phase signal to HAH, and the A-phase inverse signal to HAL. Connect the B-phase signal to HBH, and the B-phase inverse signal to HBL.

(Note-3): "COM" is the common terminal of DI1, DI2, DI3 and DI4.

(Note-4): Do not connect to any of the terminal is explained as "No connect".

(Note-5): Do not use the 5V terminals for applications other than power supply for manual pulse generator/incremental synchronous encoder.

(b) Input signal/Mark detection

1) Specifications of input signal/mark detection input signal

Iter	n	Specifications
Number of input poir	nts	4 points
Input method		Positive common/Negative common shared
Common terminal ar	rangement	4 points/common (Common contact: COM)
Isolation method		Photocoupler
Rated input voltage		24VDC
Rated input current (lin)	Approx. 5mA
Operating voltage ra	nge	21.6 to 26.4VDC (24VDC ±10%, ripple ratio 5% or less)
ON voltage/current		17.5VDC or more/3.5mA or more
OFF voltage/current		5VDC or less/0.9mA or less
Input resistance		Approx. 5.6kΩ
D	OFF to ON	1
Response time	ON to OFF	- 1ms

2) Interface between input signal/mark detection input signal

Input or	0:	Signal name			Pin No.		Wiring	l-4	December
output	Signal name		1	2	3	4	example	Internal circuit	Description
		DI□ ^(Note-1)	6	5	4	3		→	Signal input,
Input Mark detection signal input	СОМ		1 2			24VDC (Note-2)		Mark detection signal input	


(Note-1): □=1 to 4

(Note-2): As for the 24VDC sign, both "+" and "-" are possible.

- (c) Manual pulse generator/Incremental synchronous encoder input
 - 1) Specifications of manual pulse generator/incremental synchronous encoder

	Item	Specifications		
Signal input form		Phase A/Phase B		
	Maximum input pulse frequency (Note-1)	1Mpps (After magnification by 4, up to 4Mpps)		
	Pulse width	1µs or more		
	Leading edge/trailing edge time	0.25µs or less		
	Phase difference	0.25µs or more		
	High-voltage	2.0 to 5.25VDC		
	Low-voltage	0 to 0.8VDC		
	Differential voltage	±0.2V		
Differential-output type	Cable length	Up to 30m (98.43ft.)		
(26LS31 or equivalent)	Example of waveform (For 1Mpps)	Phase A O.25μs or more O.25μs or more O.25μs or more O.25μs or less O.25μs or less O.25μs or less O.25μs or less		
	Maximum input pulse frequency (Note-1)	200kpps (After magnification by 4, up to 800kpps)		
	Pulse width	5µs or more		
	Leading edge/trailing edge time	1.2µs or less		
	Phase difference	1.2µs or more		
	High-voltage	3.0 to 5.25 VDC		
	Low-voltage	0 to 1.0VDC		
Voltage-output/	Cable length	Up to 10m (32.81ft.)		
Open-collector type	Example of waveform (For 200kpps)	Phase A 1.2 \(\mu \) s or more 1.2 \(\mu \) s or more 1.2 \(\mu \) s or less (Note): Duty ratio 50%		

 (Note-1): The maximum input pulse frequency is influenced by the leading/trailing edge time of the input waveform. Countable frequencies are shown below.




Maximum input pulse frequency	Up to 1Mpps	Up to 500kpps	Up to 200kpps	Up to 100kpps
Leading/trailing edge time (t)				
(A-phase, B-phase input	0.25µs or less	0.5µs or less	1.25µs or less	2.5µs or less
common shared)				

POINT


Use a manual pulse generator or an incremental synchronous encoder that consumes less than 0.2[A] of current.

2) Interface between manual pulse generator (differential-output type)/ incremental synchronous encoder

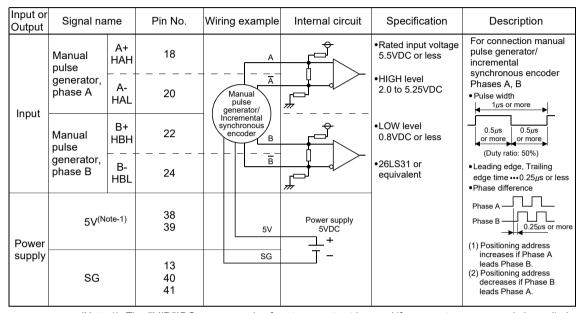

(Note-1): The 5V(P5)DC power supply of system must not be used if a separate power supply is applied to the manual pulse generator/incremental synchronous encoder. If a separate power supply is used, be sure it is 5V voltage. Anything else may cause a failure.


3) Interface between manual pulse generator (voltage-output/opencollector type)/incremental synchronous encoder

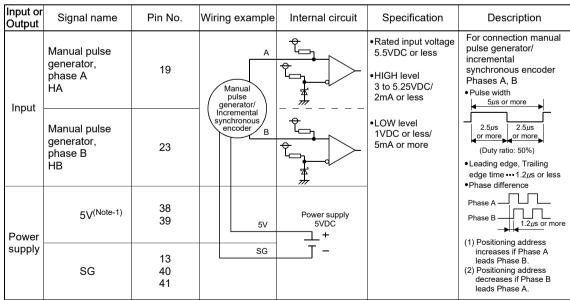


(Note-1): The 5V(P5)DC power supply of system must not be used if a separate power supply is applied to the manual pulse generator/incremental synchronous encoder.

If a separate power supply is used, be sure it is 5V voltage.

 
Anything else may cause a failure.




• Differential-output type

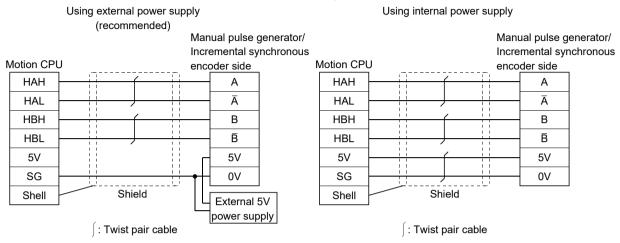

 · Voltage-output type/open-collector type



Using internal power supply

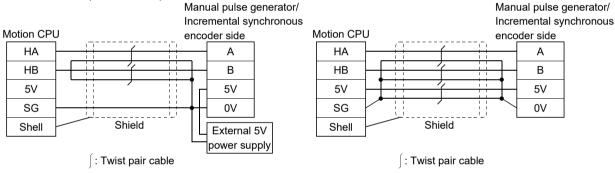

∆CAUTION


- If a separate power supply is applied to the manual pulse generator/incremental synchronous encoder, be sure it is 5V voltage. Anything else may cause a failure.
- Always wire the cables when power is off. Not doing so may damage the circuit of modules.
- Wire the cable correctly. Wrong wiring may damage the internal circuit.
- 5V terminal is the power supply for the manual pulse generator/incremental synchronous encoder. Do not apply a voltage and do not use it for other purposes.
 - (d) Connection of manual pulse generator/incremental synchronous encoder Manual pulse generators/incremental synchronous encoders of the voltageoutput/open-collector type and differential-output type can be connected. Both connection methods are different. (Refer to this section (9)(a).)

Motion CPU module	Connectable manual pulse generator/ incremental synchronous encoder
Q173DSCPU (Built-in interface in Motion CPU)	Up to 1 module
Q172DSCPU (Built-in interface in Motion CPU)	op to i modulo

- (e) Axis No. of manual pulse generator/synchronous encoder The axis No. of synchronous encoder built-in interface in Motion CPU is set depending on the axis No. assigned to Q172DEX and Q173DPX.
 - Any built-in interface in Motion CPU will automatically be assigned an axis No. one integer greater than the number of encoders connected to any Q172DEX and Q173DPX.
 - 2) Motion module installed to the smallest slot number of the Main base unit is the 1st.
 - 3) Axis No. P1 to P12 of the synchronous encoder can be used.
 - 4) Axis No. P1 to P3 of the manual pulse generator can be used. When the manual pulse generator is used with the built-in interface in Motion CPU, Q173DPX cannot be used.

The setting example for the axis No. of manual pulse generator/synchronous encoder is shown below.

(Example) Q173DSCPU use (Q172DEX: 2 modules, Q173DPX: 2 modules)

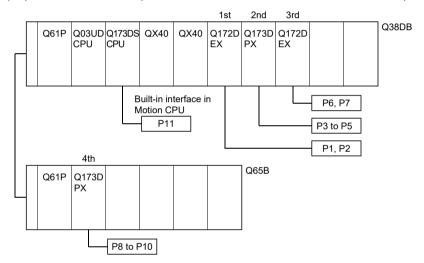

POINTS

For advanced synchronous control method, set the axis No. of synchronous encoder in the synchronous encoder axis parameter.

Refer to the "Q173DSCPU/Q172DSCPU Motion controller Programming Manual (Advanced Synchronous Control)" for details.

2.5.2 Power supply module

(1) Power supply module specifications

Power supply modules specifications (Q61P-A1, Q61P-A2, Q61P, Q62P)

	Item		Q61P-A1	Q61P-A2	Q61P	Q62P	
Base load	ing position		Q series power supply module loading slot				
Applicable	base unit		Q35DB, Q38DB, Q312DB, Q63B, Q65B, Q68B, Q612B				
Input power supply		100 to 120VAC 200 to 240VAC 100 to 240VAC (+10%/-15%) (+10%/-15%) (85 to 132VAC) (170 to 264VAC) (85 to 264VAC)					
Input frequ	lency			50/60H	Hz ±5%		
Input volta	ge distortion fa	actor		5% o	rless		
Max. input	apparent pow	er	105	5VA	130VA	105VA	
Inrush cur	rent	1		20A 8ms or	less (Note-4)		
Rated out	out current	5VDC		6A		3A	
Trated out	out ourrorn	24VDC				0.6A	
External o	utput voltage	1				24VDC±10%	
Overcurre	nt protection	5VDC		6.6A or more		3.3A or more	
(Note-1)		24VDC				0.66A or more	
Overvoltaç (Note-2)	ge protection	5VDC		5.5 to	6.5V		
Efficiency				70% or more		65% or more	
Allowable time (Note-	momentary po 3)	wer failure	20ms or less				
Dielectric	withstand volta	ige	2300VAC per minute (Altitude 0 to 2000m (0 to 6561.68ft.)) Across inputs/LG and outputs/FG				
Insulation resistance			Across inputs/LG and outputs/FG, across inputs and LG, across outputs and FG 10MΩ or more by insulation resistance tester (500VDC)				
			By noise simulator of 1500Vp-p noise voltage, 1µs noise width and 25 to 60Hz noise frequency				
Noise dura	ability		• Noise voltage IEC 61000-4-4, 2kV				
Operation	indication		LED indication (Normal : ON (Green), Error : OFF)				
Fuse			Built-in (Unchangeable by user)				
	Application		ERR. contact				
	Rated switch	_	24VDC, 0.5A				
Contact	Minimum sw			5VDC	C, 1mA		
output	Response ti	me		OFF to ON: 10ms or less,	ON to OFF: 12ms or less	;	
section	Life time		Mechanical : 20 million times or more				
			Electrical: 100 thousand times or more at rated switching voltage/current				
	Surge suppressor		None				
Fuse Terminal screw size		None M3.5 screw					
Applicable			0.75 to 2mm ²				
	solderless ter	minal	RAV1.25 to 3.5, RAV2 to 3.5, thickness of 0.8mm or less. Two solderless terminals can be connected to one terminal.				
Applicable	tightoning ton	7110	Two			ırıaı.	
	tightening tord mensions[mm	•	00		0.89 N•m .86(H) × 2.17(W) × 3.54(D))	
Mass [kg]	mensons[mm	(111011)]		31	0.40	0.39	
viass [ng]			1 0.		0.40	0.03	

Power supply modules specifications (Q63P, Q64P, Q64PN, Q61P-D)

	Item		Q63P	Q64P	Q64PN	Q61P-D
Base loadi				Q series power suppl	y module loading slot	
Applicable			Q	35DB, Q38DB, Q312DB, 0		2B
.,				100 to 120VAC/200 to		
lament a source			24VDC (+30%/-35%)	6) 240VAC (+10%/-15%) 100 to 240V/		C (+10%/-15%)
input powe	Input power supply		(15.6 to 31.2VDC)	(85 to 132VAC/170 to	(85 to 2	64VAC)
				264VAC)		
Input frequ	ency				50/60Hz ±5%	
Input voltage	ge distortion fa	ctor			5% or less	
Max. input	apparent power	er	45W	160	IVA	130VA
Inrush curr	rent		100A 1ms or less (at 24VDC input)		20A 8ms or less (Note-4)	
Data d auto		5VDC	6A	8.8	5A	6A
Rated outp	out current	24VDC				
Overcurrer	nt protection	5VDC	6.6A or more	9.9A o	r more	6.6A or more
(Note-1)		24VDC			<u> </u>	
Overvoltag	e protection	5VDC		5.5 to	6.5V	
(Note-2)		24VDC		_	_	
Efficiency				70% o	r more	
Allowable time (Note-3	momentary pov 3)	wer failure	10ms or less (at 24VDC input)		20ms or less	
Dielectric withstand voltage			510VAC per minute across inputs/LG and outputs/FG (Altitude 0 to 2000m (0 to 6561.68ft.))	Across inputs/LG and outputs/FG 2300VAC per minute (Altitude 0 to 2000m (0 to 6561.68ft.))		
Insulation i	resistance		10MΩ or more by insulation resistance tester	Across inputs and outputs, across inputs and LG, across outputs and FG $10M\Omega$ or more by insulation resistance tester (500VDC)		
Noise dura	bility		By noise simulator of 500Vp-p noise voltage, 1µs noise width and 25 to 60Hz noise frequency	 By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency Noise voltage IEC61000-4-4, 2kV 		
Operation	indication		LED indication (Normal: ON (Green), Error: OFF)	LED indication (Normal: ON (Green), Error: OFF) (Note-5)	LED indication (Normal: ON (Green), Error: OFF)	LED indication (POWER LED, LIFE LED) (Note-6)
Fuse			Elloi. Ol 1)	Built-in (Unchan		LLD) (-7
1 400	Application		ERR. contact			ERR. contact, LIFE OUT contact
	Rated switch voltage/curre	-		24VDC	C, 0.5A	
Contact output	Contact Minimum switching			5VDC	, 1mA	
section Response time		OFF to ON: 10ms or less. ON to OFF: 12ms or less				
	Life time		Mechanical: 20 million times or more Electrical: 100 thousand times or more at rated switching voltage/current			
	Surge suppre	essor	None			
	Fuse		None			
Terminal s	· I		M3.5 screw			
Applicable				0.75 to		
			•			

Power supply modules specifications (Q63P, Q64P, Q64PN, Q61P-D) (continued)

Item	Q63P	Q64P	Q64PN	Q61P-D	
Applicable solderless terminal	RAV1.25 to 3.5, RAV2 to 3.5, thickness 0.8mm or less. Two solderless terminals can be connected to one terminal.				
Applicable tightening torque		0.66 to 0.89 N•m			
Exterior dimensions[mm(inch)]	98(H) × 55.2(W) × 90(D) (3.86(H) × 2.17(W) × 3.54(D))		(W) × 115(D) 7(W) × 4.53(D))	98(H) × 55.2(W) × 90(D) (3.86(H) × 2.17(W) × 4.53(D))	
Mass [kg]	0.33	0.40	0.47	0.45	

POINTS

(Note-1): Overcurrent protection

The overcurrent protection device shuts off the 5V, 24VDC circuit and stops the system if the current flowing in the circuit exceeds the specified value.

The LED of the power supply module is turned off or lights up in dim green when voltage is lowered. If this device is activated, switch the input power supply off and eliminate the cause such as insufficient current capacity or short. Then, a few minutes later, switch it on to restart the system.

The initial start for the system takes place when the current value becomes normal.

(Note-2): Overvoltage protection

The overvoltage protection device shuts off the 5VDC circuit and stops the system if a voltage of 5.5VDC or more is applied to the circuit. When this device is activated, the power supply module LED is switched OFF.

If this happens, switch the input power OFF, then a few minutes later ON. This causes the initial start for the system to take place. The power supply module must be changed if the system is not booted and the LED remains OFF.

POINTS

(Note-3): Allowable momentary power failure time

- (1) For AC input power supply
 - If the momentary power failure time is within 20ms, the system detects an AC down and suspends the operation processing.
 However, the system continues operations after the power comes back.
 - If the momentary power failure time exceeds 20ms, the system either continues or initially starts the operations depending on the power supply load. In case that the operation processing is continued, the system operates the same as when the momentary power failure time is within 20ms.
 - When the AC supply of the AC input module is the same as that of
 the power supply module, the connected sensor is prevented from
 turning OFF due to the momentary power failure.
 However, if only the power supply module and an AC input module
 are connected on the AC line, detection of the AC down for the
 power supply module may be delayed by the internal capacitor of
 the AC input module. To prevent the detection of the AC down from
 being delayed, connect a load of approx. 30mA per AC input
 module on the AC line.
- (2) For DC input power supply
 - If the momentary power failure is within 10ms^(Note), the system detects a 24VDC down and suspends the operation processing. However, the system continues operations after the power comes back
 - If the momentary power failure time exceeds 10ms^(Note), the system either continues or initially starts the operations depending on the power supply load. In case that the operation processing is continued, the system operates the same as when the momentary power failure time is within 10ms.
 - (Note): This is for a 24VDC input. If the input is 24VDC or less, the time will be 10ms or less.

(Note-4): Inrush current

When power is switched on again immediately (within 5 seconds) after power-off, an inrush current of more than the specified value (2ms or less) may flow. Reapply power 5 seconds after power-off.

When selecting a fuse and breaker in the external circuit, take account of the blow out, detection characteristics and above matters.

(Note-5): During the operation, do not allow the input voltage to change from 200VAC level (170 to 264VAC) to 100VAC level (85 to 132VAC).


If changed, the POWER LED turns OFF and the system operation stops.

(Note-6): Refer to "QCPU User's Manual (Hardware Design, Maintenance and Inspection)" for details of the Q61P-D display status.


(2) Names of Parts and Setting

This section describes the names of the parts of each power module.

- Q61P-A1 (100 to 120VAC input, 5VDC 6A output)
 Q61P-A2 (200 to 240VAC input, 5VDC 6A output)
- Q61P (100 to 240VAC input, 5VDC 6A output)
- Q62P (100 to 240VAC input, 5VDC 3A/24VDC 0.6A output)
- Q63P (24VDC input, 5VDC 6A output)
- Q64P (100 to 120VAC/200 to 240VAC input, 5VDC 8.5A output)
- Q64PN (100 to 240VAC input, 5VDC 8.5A output)

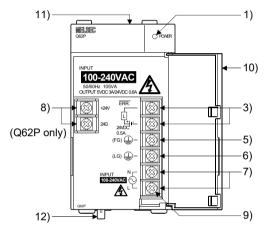

• Q61P-D (100 to 240VAC input, 5VDC 6A output)

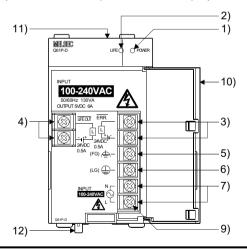

No.	o. Name		Application			
1	1) POWER LED DC	AC input power supply (Note-1)	ON (green): Normal (5VDC output, momentary power failure within 20ms) OFF: AC power supply is ON, however, the power supply module is out of order. (5VDC error, overload, internal circuit failure, blown fuse) • AC power supply is not ON • Power failure (including a momentary power failure of more than 20ms)			
1)		DC input power supply	ON (green): Normal (5VDC output, momentary power failure within 10ms) OFF: DC power supply is ON, however, the power supply module is out of order. (5VDC error, overload, internal circuit failure, blown fuse) DC power supply is not ON Power failure (including a momentary power failure of more than 10ms)			
2)	LIFE LED		ON (green) : When operation has started ON (orange) : Remaining life of the module approx. 50% FLASH (orange): • ON for 5 seconds and OFF for 1 second: Remaining life of the module is approx. 1 year • At intervals of 0.5 seconds: Remaining life of the module is approx. 6 months OFF : • Module life expired • Ambient temperature is out of range (The ambient temperature of the module is exceeding the specification and the life detection function has stopped.) ON (red) : Ambient temperature is out of range (The ambient temperature of the module is exceeding the specification.) FLASH (red) : Function failure (at intervals of 1 second)			
3)	3) ERR. terminal		 Turned ON when the whole system operates normally. This terminal turns OFF (opens) when the power is not input, a stop error (including a reset) occurs in the CPU module, or the fuse is blown. In a Multiple CPU system configuration, turned OFF (opens) when a stop error occurs in any of the CPU modules. Normally OFF when loaded in an extension base unit. 			
4)	4) LIFE OUT terminal		 The output signal of the terminal turns off (opens) when the end of the life is detected. (Applicable only when the remaining life is 1 year or less). Flicker-OFF (opens) when the life diagnostics error (including detection error) is detected. (Note-2) Flicker-OFF (opens) when the ambient temperature is detected to be out of range. The output signal of the terminal turns OFF (opens) when the watchdog timer error is detected in the module. The 4 operations listed above are also available when the terminal is mounted on an extension base unit. 			
5)	FG termin	al	Ground terminal connected to the shield pattern of the printed circuit board.			
6)	LG termin	al	Grounding for the power supply filter. The potential of Q61P-A1, Q61P-A2, Q61P, Q61P-D, Q62P, Q64P and Q64PN terminal is 1/2 of the input voltage.			

No.	Name	Application
		Power input terminals connected to a power supply of 100VAC. (Q61P-A1)
		Power input terminals connected to a power supply of 200VAC. (Q61P-A2)
7\	Power input terminals	Power input terminals connected to a power supply of 100VAC to 200VAC.
7)		(Q61P, Q61P-D, Q62P, Q64PN)
		Power input terminals connected to a power supply of 24VDC. (Q63P)
		Power input terminals connected to a power supply of 100VAC/200VAC. (Q64P)
٥,	+24V, 24G terminals	Head to summly 24)/DC may and inside the summy medule (value external viriae)
8)	(Q62P only)	Used to supply 24VDC power to inside the output module. (using external wiring)
9)	Terminal screw	M3.5×7 screw
10)	Terminal cover	Protective cover of the terminal block
		Used to fix the module to the base unit.
11)	Module fixing screw hole	M3×12 screw (user-prepared) (Tightening torque: 0.36 to 0.48 N•m)
12)	Module mounting lever	Used to load the module into the base unit.

- (Note-1): When using the Q61P-D in a system configured with an extension base unit, the POWER LED of the Q61P-D on the extension base unit may turn a dull red color when the power is turned OFF. Note that this does not indicate an error.
- (Note-2): Flicker-OFF indicates that the output signal of the terminal turns OFF and ON three times at intervals of one second before turning OFF (opens).

POINTS

(1) The Q61P-A1 is dedicated for inputting a voltage of 100VAC.

Do not input a voltage of 200VAC into it or trouble may occur on the Q61P-A1.

Power	Supply power voltage			
module type	100VAC	200VAC		
Q61P-A1	Operates normally.	Power supply module causes trouble.		
Q61P-A2	Power supply module does not cause trouble. CPU module cannot be operated.	Operates normally.		


- (2) The Q63P is dedicated for inputting a voltage of 24VDC.
 Do not input a voltage of except 24VDC into it or trouble may occur on the Q63P.
- (3) Q64P automatically switches the input range 100/200VAC. Therefore, it is not compatible with the intermediate voltage (133 to 169VAC). The CPU module may not operate normally if the above intermediate voltage is applied.
- (4) Ensure that the earth terminals LG and FG are grounded. (Ground resistance : 100 Ω or less) Since the LG terminal has a half of the input voltage, touching this terminal may result in an electric shock.
- (5) When the Q61P-A1, Q61P-A2, Q61P, Q61P-D, Q62P, Q63P, Q64P or Q64PN is loaded on the extension base unit, a system error cannot be detected by the ERR. terminal. (The ERR. terminal is always OFF.)
- (6) Cables for the ERR. contact and the LIFE OUT contact must be 30m or less and installed in the control panel.

(3) Selection of the power supply module

The power supply module is selected according to the total of current consumption of the modules, and peripheral devices supplied by its power module.

5VDC internal current consumption of shared equipment with PLC might be changed. Be sure to refer to the MELSEC-Q series PLC Manuals.

(a) Calculation example of power supply selection <System configuration (Q173DSCPU use)>

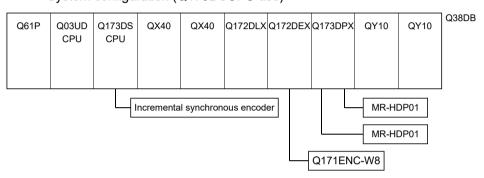

• 5VDC current consumption of each module

Q03UDCPU : 0.33 [A] Q171ENC-W8: 0.25 [A] Q173DSCPU : 1.75 [A] Q173DPX : 0.38 [A] Incremental synchronous encoder: 0.20 [A] MR-HDP01 : 0.06 [A] QX40 : 0.05 [A] QY10 : 0.43 [A] Q172DLX : 0.06 [A] Q38DB : 0.23 [A] Q172DEX : 0.19 [A]

• Power consumption of overall modules

Isv = 0.33 + 1.75 + 0.20 + 0.05
$$\times$$
 2 + 0.06 + 0.19 + 0.25 + 0.38 + 0.06 \times 2 + 0.43 \times 2 + 0.23 = 4.47[A]

Select of the power supply module (Q61P (100/240VAC) 6A) according to this internal current consumption 4.47[A].

POINT

Configure the system in such a way that the total current consumption at 5VDC of all the modules is the allowable value or less.

(4) Life detection power supply module

The Life detection power supply module (Q61P-D) estimates its remaining life internally and displays the service life.

The remaining life of the module can be checked with the LIFE LED located on the front of the module and ON/OFF of the LIFE OUT terminals.

Refer to "QCPU User's Manual (Hardware Design, Maintenance and Repair)" for details of the life detection power supply module.

2.5.3 Base unit and extension cable

This section describes the specifications of the extension cables for the base units (Main base unit or extension base unit), and the specification standards of the extension base unit.

5VDC internal current consumption of base unit might be changed. Be sure to refer to the MELSEC-Q series PLC Manuals.

(1) Base unit specifications

(a) Main base unit specifications

Type	Q35DB	Q38DB	Q312DB			
Number of I/O modules	5	8	12			
Possibility of extension		Extendable				
Applicable module		Q series modules				
5VDC internal current consumption [A]	0.23	0.23	0.24			
Fixing hole size	M4 screw hole or ϕ 4.5 hole (for M4 screw)					
Exterior dimensions [mm(inch)]	245(W)×98(H)×44.1(D) (9.65(W)×3.86(H)×1.74(D))	328(W)×98(H)×44.1(D) (12.91(W)×3.86(H)×1.74(D))	439(W)×98(H)×44.1(D) (17.28(W)×3.86(H)×1.74(D))			
Mass [kg]	0.32	0.41	0.54			
Attachment	Fixing screw M4×14 4 pieces	Fixing screw M4×14 5 pieces				

(Note): It is impossible to mount the main base unit by DIN rail when using the Motion CPU module.

Doing so could result in vibration that may cause erroneous operation.

(b) Extension base unit specifications

1) Type requiring power supply module

Type	Q63B	Q65B	Q68B	Q612B		
Number of I/O modules	3	5	8	12		
Possibility of extension		Exter	ıdable			
Applicable module		Q series	modules			
5VDC internal current consumption [A]	0.11	0.11	0.12	0.13		
Fixing hole size	M4 screw hole or ϕ 4.5 hole (for M4 screw)					
	189(W)×98(H)×	245(W)×98(H)×	328(W)×98(H)×	439(W)×98(H)×		
Exterior dimensions	44.1(D)	44.1(D)	44.1(D)	44.1(D)		
[mm(inch)]	(7.44(W)×3.86(H)×	(9.65(W)×3.86(H)×	(12.91(W)×3.86(H)×	(17.28(W)×3.86(H)×		
	1.74(D))	1.74(D))	1.74(D))	1.74(D))		
Mass [kg]	0.23	0.28	0.38	0.48		
Attachment		Fixing screw M4×	(14 4 pieces (Note)			

(Note): The 5 base mounting screws are included with the Q68B and Q612B that have 5 base mounting holes.

2) Type not requiring power supply module

Type	Q52B	Q55B	
Number of I/O modules	2	5	
Possibility of extension	Exter	ndable	
Applicable module	Q series	modules	
5VDC internal current consumption [A]	0.08	0.10	
Fixing hole size	M4 screw hole or ϕ 4.5 hole (for M4 screw)		
Exterior dimensions [mm(inch)]	106(W)×98(H)×44.1(D) (4.17(W)×3.86(H)×1.74(D))	189(W)×98(H)×44.1(D) (7.44(W)×3.86(H)×1.74(D))	
Mass [kg]	0.14	0.23	
Attachment	Fixing screw M4×14 4 pieces		

(2) Extension cable specifications

The list below describes the specifications of the extension cables which can be used.


Type Item	QC05B	QC06B	QC12B	QC30B	QC50B	QC100B
Cable length[m(ft.)]	0.45(1.48)	0.6(1.97)	1.2(3.94)	3.0(9.84)	5.0(16.40)	10.0(32.81)
Application	Connection between the main base unit and extension base unit, or connection between the extension base units.					
Mass [kg]	0.15	0.16	0.22	0.40	0.60	1.11

POINT

When the extension cables are used in combination, limit the overall length of the combined cable to 13.2m (43.31ft.).

- (3) Names of parts of the base unit

 Names of parts of the base unit are described below.
 - (a) Main base unit (Q35DB, Q38DB, Q312DB)

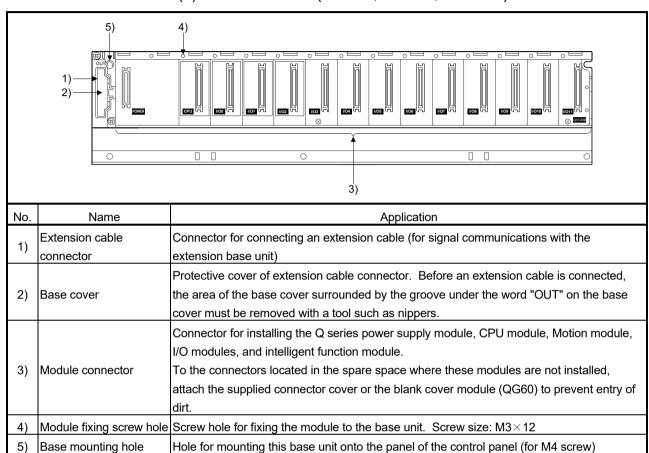


(Note): It is impossible to mount the main base unit by DIN rail when using the Motion CPU module. Doing so could result in vibration that may cause erroneous operation.

(4) I/O allocations

It is possible to allocate unique I/O No.s for each Motion CPU independently of the PLC's I/O No.s. (I/O No.s are unique between the Q series PLC CPU within a given system, but the I/O No.s of the Motion CPU are unique for each Motion CPU.)

ON/OFF data input to the Motion CPU is handled via input devices PX□□, while ON/OFF data output from the Motion CPU is handled via output devices PY□□. It is not mandatory to match the I/O device PX/PY No.s used in the Motion program with the PLC I/O No.s; but it is recommended to make them match as much as possible.

The following figure shows an example of I/O allocation.

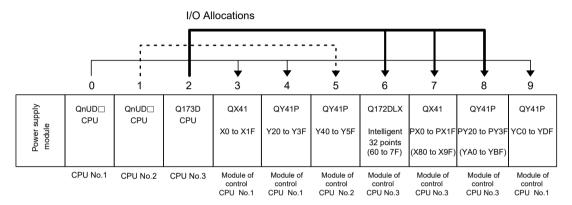

(Note-1): When the number of modules to be installed is 32 points. (Note-2): When the PX/PY No. does not match the PLC I/O No.

Refer to the Q173D(S)CPU/Q172D(S)CPU Motion Controller Programming Manual (COMMON) about the I/O allocation setting method, and refer to the "QnUCPU User's Manual (Function Explanation, Program Fundamentals)" about the I/O allocation setting method of the PLC CPU.


POINT

 
I/O device of the Motion CPU can be set in the range PX/PY000 to PX/PYFFF. The real I/O points must be 256 points or less. (As for the I/O No., it is possible not to continue.)

2.5.4 Q172DLX Servo external signals interface module

Q172DLX receives external signals (servo external signals) required for positioning control.

(1) Q172DLX name of parts

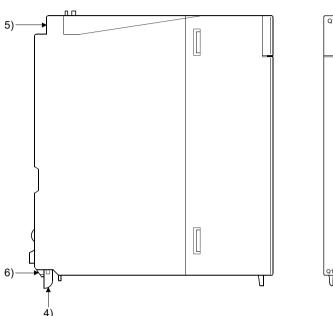



No.	Name		Application		
1)	Module fixing hook	1	Hook used to fix the module to the base unit. (Single-motion installation)		
			Display the servo external input status from the external equipment.		
			LED	Details	
2)	2) Input indicator LED		0 to 1F	Display for servo external signal input status of each axis.	
		C	•	ty dog/speed-position switching signal (DOG/ does not turn ON without setting Q172DLX in the ing.	
3)	CTRL connector	Т	he servo e	external signal input connector of each axis.	
4)	Module mounting lever	ι	Used to install the module to the base unit.		
5)	Module fixing screw hole	Hole for the screw used to fix to the base unit. (M3×12 screw : Purchase from the other supplier)			
6)	Module fixing projection	F	Projection used to fix to the base unit.		
7)	Serial number display	Г	Display the serial number described on the rating plate.		

POINT

Input indicator LED of the proximity dog/speed-position switching signal (DOG/CHANGE) turns ON at the following conditions.

- Q172DLX is set on the system setting of MT Developer2.
- The proximity dog/speed-position switching signal (DOG/CHANGE) is input.

(2) Performance specifications (a) Module specifications

Item	Specifications		
Number of I/O occupying points	32 points(I/O allocation: Intelligent, 32 points)		
Internal current consumption(5VDC) [A]	0.06		
Estada dina anaiana (mah)	98(H)× 27.4(W)×90(D)		
Exterior dimensions [mm(inch)]	(3.86(H)×1.08(W)×3.54(D))		
Mass [kg]	0.15		

(b) Input

Item		Specifications	
Number of input points		Servo external signals : 32 points (Upper stroke limit, Lower stroke limit, Stop input, Proximity dog/Speed-position switching signal) (4 points \times 8 axes)	
Input method		Sink/Source type	
Common terminal arrangeme	nt	32 points/common (common terminal: B1, B2)	
Isolation method		Photocoupler	
Rated input voltage		12/24VDC	
Rated input current		12VDC 2mA/24VDC 4mA	
Operating voltage range		10.2 to 26.4VDC (12/24VDC +10/ -15%, ripple ratio 5% or less)	
ON voltage/current		10VDC or more/2.0mA or more	
OFF voltage/current		1.8VDC or less/0.18mA or less	
Input resistance		Approx. 5.6kΩ	
Response time of the Upper/Lower stroke limit and STOP signal	OFF to ON ON to OFF	1ms	
Response time of the proximity dog, Speed-position switching signal	OFF to ON ON to OFF	0.4ms/0.6ms/1ms (CPU parameter setting, Default 0.4ms)	
Operation indicator		ON indication (LED)	
External connector type		40 pin connector	
Applicable wire size		0.3mm ²	
Applicable connector for the ϵ connection	external	A6CON1 (Attachment), A6CON2, A6CON3, A6CON4 (Optional)	
Applicable connector/ Terminal block converter mod	lule	A6TBXY36, A6TBXY54, A6TBX70 (Optional)	

(3) Connection of servo external signals interface module

(a) Servo external signals

There are the following servo external signals.

(Upper stroke limit is limit value of address increase direction/lower stroke limit is limit value of an address decrease direction.)


The Q172DLX is assigned a set of input No.s per axis. Make the system setting of MT Developer2 to determine the I/O No.s corresponding to the axis No.s.

Servo external signal	Application	Number of points on one Q172DLX
Upper stroke limit input (FLS)	For detection of upper and lower stroke limits.	
Lower stroke limit input (RLS)	To detection of upper and lower stroke limits.	
Stop signal input (STOP)	For stopping under speed or positioning control.	32 points
Proximity dog/	For detection of proximity dog at proximity dog or count	(4 points/8 axes)
Speed-position switching input	method home position return or for switching from speed	
(DOG/CHANGE)	to position switching control.	

(b) The pin layout of the CTRL connector

Use the CTRL connector on the front of the Q172DLX module to connect to servo external signals.

The following is the pin layout of the Q172DLX CTRL connector as viewed from the front.

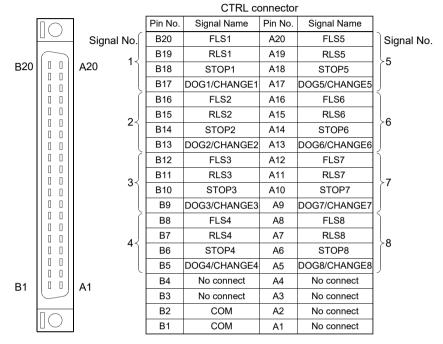

Applicable connector model name

A6CON1 type soldering type connector
N361J040AU connector (OTAX Corporation)
N360C040B connector cover

A6CON2 type Crimp-contact type connector
A6CON3 type Pressure-displacement type connector
A6CON4 type soldering type connector

Auctoria type soldering type connector	J
DOG/CHANGE, STOP, RLS, FLS functions of each axis(1 to 8)	For information about
DOG/CHANGE Proximity dog/Speed-position switching signal STOP Stop signal RLS Lower stroke limit FLS Upper stroke limit	signal details, refer to the programming manual.

(Note): Connector/terminal block conversion modules and cables can be used at the wiring of CTRL connector.

A6TBXY36/A6TBXY54/A6TBX70 : Connector/terminal block


converter module

AC□TB (□:Length [m]) : Connector/terminal block

converter module cable

POINT

Signal No. 1 to 8 can be assigned to the specified axis. Make the assignment in the system settings of MT Developer2.

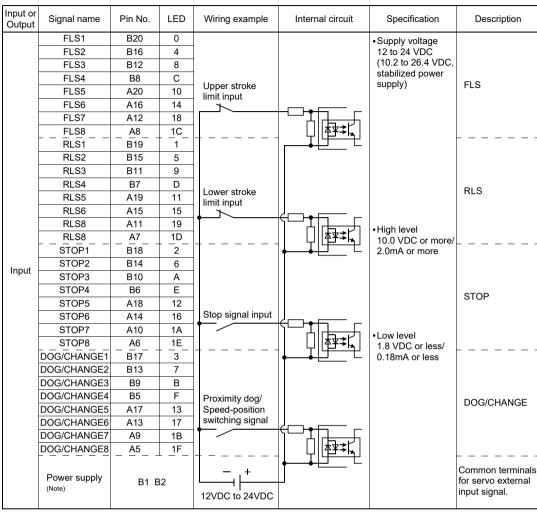

(4) Interface between CTRL connector and servo external signal

(Note): As for the connection to power line (B1, B2), both "+" and "-" are possible.


⚠ CAUTION


- Always use a shield cable for connection of the CTRL connector and external equipment, and avoid running it close to or bundling it with the power and main circuit cables to minimize the influence of electromagnetic interface. (Separate them more than 200mm (0.66ft.) away.)
- Connect the shield wire of the connection cable to the FG terminal of the external equipment.
- Make parameter setting correctly. Incorrect setting may disable the protective functions such as stroke limit protection.
- Always wire the cables when power is off. Not doing so may damage the circuit of modules.
- Wire the cable correctly. Wrong wiring may damage the internal circuit.

2.5.5 Q172DEX Synchronous encoder interface module

Q172DEX receive external signals required for serial absolute synchronous encoder. The installation position of Q172DEX is only main base.

(1) Q172DEX name of parts

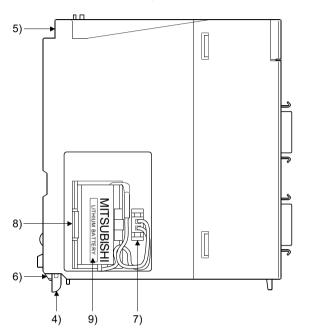

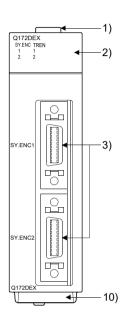

No.	Name	Application			
1)	Module fixing hook	Hook used to fix the module to the base unit. (Single-motion installation)			
		Display the input status from the external equipment.			
		LED Details			
2)	Input indicator LED	SY.ENC Display for signal input status of each serial absolute synchronous encoder. 1, 2 (LED turns ON at the normal connection (first switching to virtual mode).)			
		TREN 1, 2 Display for signal status of tracking enable.			
		The tracking enable signal does not turn ON without			
		setting Q172DEX in the system setting.			
3)	SY. ENC connector	Input connector of the serial absolute synchronous encoder.			
4)	Module mounting lever	Used to install the module to the base unit.			
5)	Module fixing screw hole	Hole for the screw used to fix to the base unit (M3×12 screw : Purchase from the other supplier)			
6)	Module fixing projection	Projection used to fix to the base unit.			
7)	Battery connector	For connection of battery lead wire.			
8)	Battery holder	Used to the set the Battery (A6BAT/MR-BAT) to the holder.			
9)	Battery (A6BAT/MR-BAT)	For Serial absolute synchronous encoder battery backup.			
10)	Serial number display	Display the serial number described on the rating plate.			

POINT

- (1) Input indicator LED of the serial absolute synchronous encoder signal turns ON at the normal connection (first switching to virtual mode).
- (2) Input indicator LED of the tracking enable signal turns ON at the following conditions.
 - Q172DEX is set in the system setting of MT Developer2.
 - The tracking enable signal is input.

(2) Performance specifications

(a) Module specifications

Item	Specifications
Number of I/O occupying points	32 points(I/O allocation: Intelligent, 32 points)
Internal current consumption(5VDC)[A]	0.19
Exterior dimensions [mm(inch)]	98(H)×27.4(W)×90(D)
	(3.86(H)×1.08(W)×3.54(D))
Mass [kg]	0.15

(b) Tracking enable signal input

Item		Specifications
Number of input points		Tracking enable signal : 2 points
Input method		Sink/Source type
Common termina	al arrangement	1 point/common (Common terminal: TREN.COM)
Isolation method		Photocoupler
Rated input voltage		12/24VDC
Rated input current		12VDC 2mA/24VDC 4mA
		10.2 to 26.4VDC
Operating voltage	e range	(12/24VDC +10/ -15%, ripple ratio 5% or less)
ON voltage/curre	nt	10VDC or more/2.0mA or more
OFF voltage/curr	ent	1.8VDC or less/0.18mA or less
Input resistance		Approx. 5.6kΩ
Response time	OFF to ON	0.4ms/0.6ms/1ms
	ON to OFF	(CPU parameter setting, Default 0.4ms)
Operation indicator		ON indication (LED)

(c) Serial absolute synchronous encoder input

Item	Specifi	cations			
Applicable types	Q171ENC-W8	Q170ENC			
Applicable signal types	Differential-output type: (S	SN75C1168 or equivalent)			
Transmission method	Serial comr	nunications			
Synchronous method	Counter-clock-wise (vie	ewed from end of shaft)			
Communication speed	2.5M	1bps			
Position detection method	Absolute (A	BS) method			
Resolution	4194304pulse/rev (22bit)	262144pulse/rev (18bit)			
Number of modules	2/mc	odule			
External connector type	20 pin co	onnector			
Applicable connector for	O470ENICONIC (Ontional)				
the external connection	Q170ENCCNS (Optional)				
Applicable wire	MB14B00	23 12Pair			
	Q170EN0	CCBL□M			
Connecting cable	(□=cable length 2m(6.56ft.), 5m(16.40ft.), 10m(32.81ft.), 20m(65.62ft.),				
	30m(98.43ft.), 50m(164.04ft.)) (Note	ş-1)			
Cable length	Up to 50m	(164.04ft.)			
Back up the absolute position.	Depends on A6	BBAT/MR-BAT.			
Battery service life time	12000[h], (Examp	le of encoders×2)			
(value in actual)	24000[h], (Examp	le of encoders×1)			

(Note-1): You can use these cables when the tracking enable signal is not used.

When the tracking enable signal is used, fabricate the cable on the customer side.

(3) Select to number of the synchronous encoder modules Synchronous encoders are available in voltage-output type (incremental), differential-output type (incremental) and serial absolute output type. Q172DEX can be connected to only serial absolute output type. When using the incremental synchronous encoder of voltage-output type or differential-output type, must be used Q173DPX or built-in interface in Motion CPU of Q173DSCPU/Q172DSCPU. (The synchronous encoders are used in the SV22 virtual mode or SV22 advanced synchronous control.) In addition, the usable numbers of synchronous encoders differ depending on the modules.

The following number of serial absolute synchronous encoders and incremental synchronous encoders combined can be used.

Motion CPU module	Applicable types	Connectable synchronous encoder		
Q173DSCPU	0474FN0 W0			
Q172DSCPU	Q171ENC-W8	Up to 12 modules (Q172DEX: Up to 6		
Q173DCPU(-S1)	Q171ENC-W8 ^(Note-1) ,	modules)		
Q172DCPU(-S1)	Q171ENC-W8 , Q170ENC	Up to 8 modules (Q172DEX: Up to 4		
Q1102110		modules)		

(Note-1): Connection with Q171ENC-W8 is not possible with operating system software (SV13/SV22) version of "00R" or earlier or any operating system software other than operating system software (SV13/SV22). If you are replacing Q170ENC with Q171ENC-W8 and are using any of these operating system software, please contact with our sales representative.

Tracking enable signal

Tracking enable signal of Q172DEX is used in high-speed reading function or high-speed input request signal.

The external input signal of the synchronous encoder is indicated below.

External input signal of the synchronous encoder	Item	Number of points on one Q172DEX	
Tracking enable signal input	High-speed reading function	2 points	
Tracking enable signal input	High-speed input request signal	Z points	

(4) Connection of synchronous encoder interface module.

(a) Connection with serial absolute synchronous encoder Use the SY.ENC connector on the front of the Q172DEX module to connect to serial absolute synchronous encoder.

When tracking enable signal is not used, use the Q170ENCCBL□M encoder cable between the serial absolute synchronous encoder and SY.ENC connector.

The following is the pin layout of the Q172DEX SY.ENC connector as viewed from the front.

SY.ENC connector

1 10	11

Pin No.	Signal name	Pin No.	Signal name
1	LG	11	LG
2	LG	12	LG
3	LG	13	No connect
4	TREN	14	TREN.COM
5	No connect	15	No connect
6	MD	16	MDR
7	MR	17	MRR
8	No connect	18	P5
9	BAT	19	P5
10	P5	20	P5


Applicable connector model names 10120-3000PE connector 10320-52F0-008 connector case (3M Japan Limited make)


(b) Interface with external equipment

The interface between the SY.ENC connector and external equipment is described below.

1) Wiring precautions

Ensure the connector lock after connecting the connector.

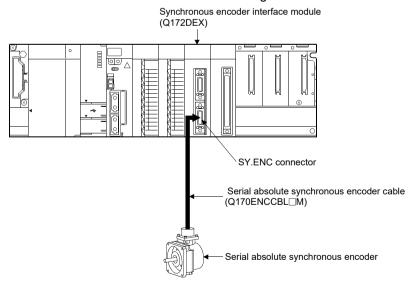

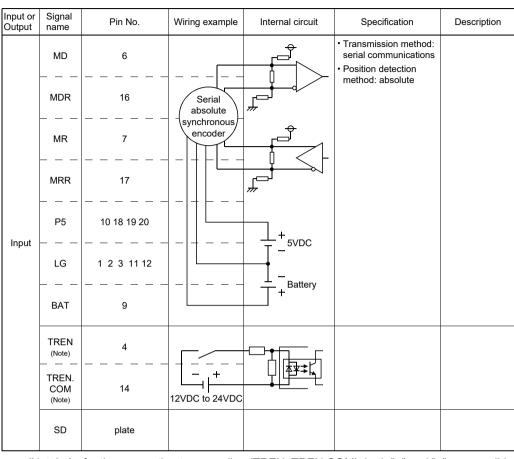

(5) Interface between SY.ENC connector and external equipment


(Note): As for the connection to power line (TREN, TREN.COM), both "+" and "-" are possible.

▲CAUTION

- Always use a shield cable for connection of the SY.ENC connector and external equipment, and avoid running it close to or bundling it with the power and main circuit cables to minimize the influence of electromagnetic interface. (Separate them more than 200mm (0.66 ft.) away.)
- Connect the shield wire of the connection cable to the FG terminal of the external equipment.
- When increasing the cable length, use the cable 50m(164.04ft.) or less. Note that the cable should be run in the shortest possible distance to avoid induced noise.
- Always wire the cables when power is off. Not doing so may damage the circuit of modules.
- Wire the cable correctly. Wrong wiring may damage the internal circuit.

(6) Details of encoder cable connections


(a) When not using tracking enable signal (Note-1)

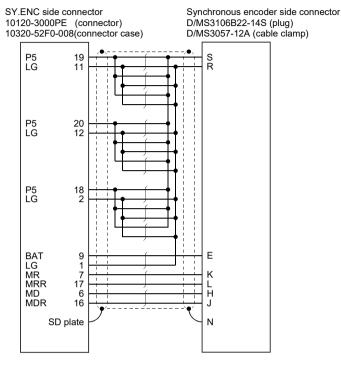

:Twisted pair cable

Q170ENCCBL2M to Q170ENCCBL50M(50m (164.04ft.) or less)

(b) When using tracking enable signal (Note-1), (Note-2)

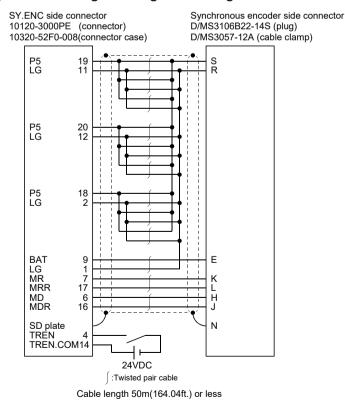

(Note-1): Be sure to use a wire model name AWG24.

(Note-2): When using tracking enable signal, fabricate the encoder cable by customer side.

(7) Connection of the battery

This section describes the battery specifications, handling precautions and installation of the Q172DEX.

(a) Specifications

The specifications of the battery for memory back-up are shown in the table below.

Battery Specifications

Model name	A6BAT/MR-BAT
Classification	Thionyl chloride lithium primary battery
Normal voltage [V]	3.6
Nominal current [mAh]	1700
Storage life	5 years
Lithium content [g]	0.48
Applications	For backup absolute positioning data of the serial absolute synchronous encoder
Exterior dimensions [mm(inch)] ϕ 16(0.63) × 30(1.18)	


Transport guidelines

Products are packed in compliance with the transportation regulations prior to shipment. When repacking any of the unpacked products for transportation, make sure to observe the IATA Dangerous Goods Regulations, IMDG (International Maritime Dangerous Goods) Code, and other local transportation regulations.

For details, please consult the shipping carrier used.

(b) Battery replacement

For Battery replacement procedure, refer to section 6.5.2.

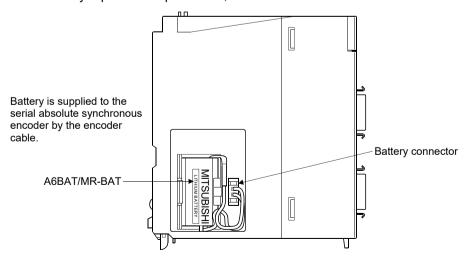

(c) Battery life

	Module type Battery type			Battery life (Total power failure time) [h] (Note-1)					
Module type			Power-on time ratio (Note-2)	Guaranteed value ^(Note-3) (MIN) (75°C (167°F))	Guaranteed value (Note-4) (TYP) (40°C (104°F))	Actual service value (Note-5) (Reference value) (TYP) (25°C (77°F))	Backup time after alarm		
		pattery A6BAT/	0%	3000	8000	24000	40 (After Error code 1152 occurrence)		
			30%	4000	11000	34000			
			50%	6000	16000	43800			
	Internal		70%	10000	26000	43800			
0470DEV	battery		100%	43800	43800	43800			
Q172DEX	(A6BAT/		0%	1500	4000	12000			
	MR-BAT)		30%	2000	5500	17000			
			50%	3000	8000	21900			
			70%	5000	13000	21900			
			100%	43800	43800	43800			

- (Note-1): The actual service value indicates the average value, and the guaranteed time indicates the minimum time.
- (Note-2): The power-on time ratio indicates the ratio of Multiple CPU system power-on time to one day (24 hours). (When the total power-on time is 17 hours and the total power-off time is 7 hours, the power-on time ratio is 70%.)
- (Note-3): The guaranteed value (MIN); equivalent to the total power failure time that is calculated based on the characteristics value of the memory (SRAM) supplied by the manufacturer and under the storage ambient temperature range of -25°C to 75°C (-13 to 167°F) (operating ambient temperature of 0°C to 55°C (32 to 131°F)).
- (Note-4): The guaranteed value (TYP); equivalent to the total power failure time that is calculated based on the normal air-conditioned environment (40°C (104°F)).
- (Note-5): The actual service value (Reference value); equivalent to the total power failure time that is calculated based on the measured value and under the storage ambient temperature of 25°C (77°F). This value is intended for reference only, as it varies with characteristics of the memory.

POINTS

The self-discharge influences the life of battery without the connection to Q172DEX. The external battery should be exchanged approximately every 4 or 5 years. Exchange the battery with a new one in 4 to 5 years even if a total power failure time is guaranteed value or less.


∆CAUTION


- Do not short a battery.
- Do not charge a battery.
- Do not disassemble a battery.
- Do not burn a battery.
- Do not overheat a battery.
- Do not solder the battery terminals.
- Before touching the battery, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.
- Do not directly touch the module's conductive parts and electronic components. Touching them could cause an operation failure or damage the module.

2.5.6 Q173DPX Manual pulse generator interface module

Q173DPX receives signals required for Manual pulse and Incremental synchronous encoder (Voltage-output/Open-collector type/Differential-output type) input.

(1) Q173DPX name of parts

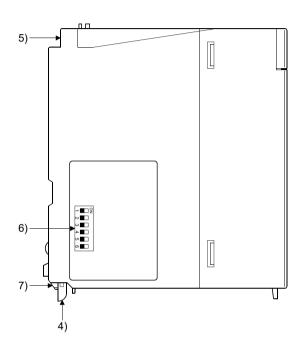

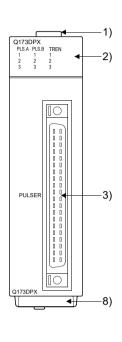

No.	Name		Application			
1)	Module fixing hook	-	Hook used to fix the module to the base unit. (Single-motion installation)			
		D	isplay the input	status from the external equipment.		
			LED	Details		
2)	2) Input indicator LED		PLS.A 1 to 3 PLS.B 1 to 3	Display for input signal status of manual pulse generator/incremental synchronous encoder phases A, B		
			TREN 1 to 3	Display for signal status of tracking enable.		
		The manual pulse generator/incremental synchronous				
			encoder phases A, B and tracking enable signal does not			
			turn ON withou	t setting Q173DPX in the system setting.		
3)	PULSER connector	Input connector of the Manual pulse generator/Incremental synchronous encoder.				
4)	Module mounting lever	Used to install the module to the base unit.				
5)	Module fixing screw hole	-	Hole for the screw used to fix to the base unit (M3×12 screw : Purchase from the other supplier)			

No.	Name	Application				
			Detection setting of TREN1 signal			
		Dip switch 1	SW1	SW2		
			OFF	OFF	TREN is detected at leading	
			ON	ON	edge of TREN signal.	
		Dip switch 2	ON	OFF	Cage of TALIN Signal.	
	Dip switches (Note-1)		OFF	ON	TREN is detected at trailing edge of TREN signal.	
	→ ■□0		Detec	tion set	ting of TREN2 signal	
	N ■ □Z	Dip switch 3	SW3	SW4		
	ω∎□		OFF	OFF	TDEN is detected at leading	
6)	■4		ON	ON	TREN is detected at leading edge of TREN signal.	
	5 ■	Dip switch 4	ON	OFF	g edge of TREIV signal.	
	(Factory default in OFF		OFF	ON	TREN is detected at trailing edge of TREN signal.	
	position)		Detec	tion set	ting of TREN3 signal	
	position)	Dip switch 5	SW5	SW6		
			OFF	OFF	TDEN is detected at leading	
			ON	ON	TREN is detected at leading edge of TREN signal.	
		Dip switch 6	ON	OFF	g cage of Tricin signal.	
		Dip omion o	OFF	ON	TREN is detected at trailing edge of TREN signal.	
7)	Module fixing projection	Projection used to fix to the base unit.		pase unit.		
8)	Serial number display	Display the se	rial nur	nber de	escribed on the rating plate.	

(Note-1): The function is different depending on the operating system software installed.

▲CAUTION

- Before touching the DIP switches, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.
- Do not directly touch the module's conductive parts and electronic components. Touching them could cause an operation failure or damage the module.

POINTS

Input indicator LED of the manual pulse generator/incremental synchronous encoder phases A, B and tracking enable signal turns ON at the following conditions.

- (1) PLS.A 1 to 3, PLS.B 1 to 3
 - Q173DPX is set in the system setting of MT Developer2.
 - All axes servo ON command (M2042) turned on.
 - Manual pulse generator enable flag (M2051, M2052, M2053) turned on.
 - Manual pulse generator signal is input.
- (2) TREN 1 to 3
 - Q173DPX is set in the system setting of MT Developer2.
 - The tracking enable signal is input.

(2) Performance specifications (a) Module specifications

Item Specifications Occupying points 32 points (I/O allocation: Intelligent 3

Number of I/O occupying points 32 points (I/O allocation: Intelligent, 32 points) Internal current consumption(5VDC)[A] 0.38 Exterior dimensions [mm(inch)] $98(H) \times 27.4(W) \times 90(D)$ (3.86(H) $\times 1.08(W) \times 3.54(D)$) Mass [kg] 0.15

(b) Tracking enable signal input

Item		Specifications		
Number of input points		Tracking enable signal: 3 points		
Input method		Sink/Source type		
Common terminal arrar	gement	1 point/common (Common contact: TREN.COM)		
Isolation method		Photocoupler		
Rated input voltage		12/24VDC		
Rated input current		12VDC 2mA/24VDC 4mA		
		10.2 to 26.4VDC		
Operating voltage range		(12/24VDC +10/ -15%, ripple ratio 5% or less)		
ON voltage/current		10VDC or more/2.0mA or more		
OFF voltage/current		1.8VDC or less/0.18mA or less		
Input resistance		Approx. 5.6kΩ		
D	OFF to ON	0.4ms/0.6ms/1ms		
Response time	ON to OFF	(CPU parameter setting, Default 0.4ms)		
Operation indicator		ON indication (LED)		

(Note): Functions are different depending on the operating system software installed.

(c) Manual pulse generator/Incremental synchronous encoder input

ltem			Specifications
Number of modules			3/module
Voltage-output/		High-voltage	3.0 to 5.25VDC
Open-collector	type	Low-voltage	0 to 1.0VDC
Differential-outp	out type	High-voltage	2.0 to 5.25VDC
(26LS31 or equ	ıivalent)	Low-voltage	0 to 0.8VDC
Input frequency			Up to 200kpps (After magnification by 4)
Applicable types			Voltage-output type/Open-collector type (5VDC), Recommended product: MR-HDP01
			Differential-output type (26LS31 or equivalent)
External connector type Applicable wire size			40 pin connector 0.3mm ²
Applicable connector for the external connection			A6CON1 (Attachment) A6CON2, A6CON3, A6CON4 (Optional)
Cable length	Voltage-output/ Open-collector type Differential-output type		30m (98.43ft.) (Open-collector type: 10m (32.81ft.))

(3) Connection of manual pulse generator

Manual pulse generators of the voltage-output/open-collector type and differential-output type can be connected. Both connection methods are different. (Refer to this section (5).)

When the manual pulse generator is connected to the Q173DPX, it cannot be connected to the built-in interface in Motion CPU.

Motion CPU module	Connectable manual pulse generator
Q173DSCPU	
Q172DSCPU	Up to 3 modules
Q173DCPU(-S1)	(Q173DPX: Up to 1 module)
Q172DCPU(-S1)	

(4) Connection of incremental synchronous encoder

Incremental synchronous encoders of the voltage-output/Open-collector type and differential-output type can be connected. Both connection methods are different. (Refer to this section (5).)

Serial absolute synchronous encoder not connected to Q173DPX. Then connect to Q172DEX.

In addition, the usable numbers of synchronous encoders differ depending on the modules.

The following number of serial absolute synchronous encoders and incremental synchronous encoders combined can be used.

Motion CPU module	Connectable synchronous encoder	
Q173DSCPU		
Q172DSCPU	Up to 12 modules	
Q173DCPU(-S1)	(Q173DPX: Up to 4 modules)	
047000011/ 04)	Up to 8 modules	
Q172DCPU(-S1)	(Q173DPX: Up to 3 modules)	

Tracking enable signal

Tracking enable signal of Q173DPX is used to start the input from incremental synchronous encoders in the external input mode for the clutch.

The external input signal of the incremental synchronous encoder is indicated below.

This signal is used as the input start signal, high-speed reading function or high-speed input request signal from incremental synchronous encoder.

External input signal of the	Application	Number of points on
incremental synchronous encoder	Application	one Q173DPX
Tracking enable signal input	Input start function from incremental	Each 1 point
Tracking enable signal input	synchronous encoder	(Total 3 points)

(5) Connection of manual pulse generator interface module

(a) The pin layout of the PULSER connector

Use the PULSER connector on the front of the Q173DPX module to connect to manual pulse signals and incremental synchronous encoder signals.

The following is the pin layout of the Q173DPX PULSER connector as viewed from the front.

	PULSER connector							
	ПО	1		Pin No.	Signal Name	Pin No.	Signal Name	1
		-	2)	B20	HB1	A20	HA1	2)
				B19	SG	A19	SG	
B20		A20		B18	5V	A18	HPSEL1	1)
			21	B17	HA1N	A17	HA1P]]
			3)≺	B16	HB1N	A16	HB1P	→3)
			2)	B15	HB2	A15	HA2	2)
				B14	SG	A14	SG	
	0 0			B13	5V	A13	HPSEL2	1)
	0 0		21	B12	HA2N	A12	HA2P]] 21
			3)≺	B11	HB2N	A11	HB2P	3)
			2)	B10	HB3	A10	HA3	2)
				B9	SG	A9	SG	
				B8	5V	A8	HPSEL3	1)
			3)√	B7	HA3N	A7	HA3P	3)
	0 0		3)	B6	HB3N	A6	HB3P] ʃ ³)
				B5	No connect	A5	No connect	
B1		A1		B4	TREN1-	A4	TREN1+	
וט				B3	TREN2-	A3	TREN2+	
	П	1		B2	TREN3-	A2	TREN3+	
]	4)	B1	FG	A1	FG	4)

Applicable connector model name

A6CON1 type soldering type connector
N361J040AU connector (OTAX Corporation)
N360C040B connector cover

A6CON2 type Crimp-contact type connector
A6CON3 type Pressure-displacement type connector
A6CON4 type soldering type connector

 Input type from manual pulse generator/incremental synchronous encoder switched by HPSEL□.

Not connected: Voltage-output/open-collector type HPSEL_-SG connection: Differential-output type (Switching is possible for each input 1 to 3)

2): Voltage-output/open-collector type

Connect the A-phase signal to HA1/HA2/HA3, and the B-phase signal to HB1/HB2/HB3.


3): Differential-output type

Connect the A-phase signal to HA1P/HA2P/HA3P, and the A-phase inverse signal to HA1N/HA2N/HA3N.

Connect the B-phase signal to HB1P/HB2P/HB3P, and the B-phase inverse signal to HB1N/HB2N/HB3N.

- 4): Connect the shield cable between manual pulse generator/incremental synchronous encoder and Q173DPX at the FG signal.
- 5): Connector/terminal block conversion modules cannot be used.

(b) Interface between PULSER connector and manual pulse generator (Differential-output type)/Incremental synchronous encoder

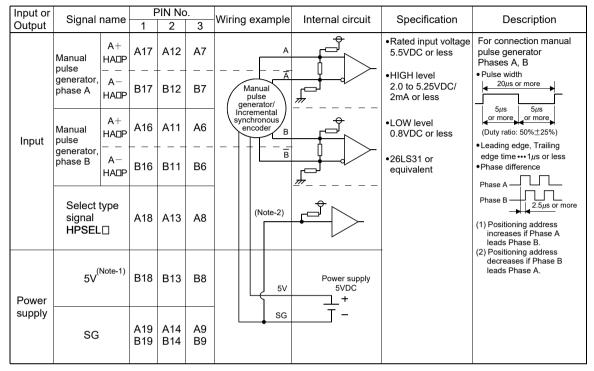


(Note-1): The 5V(P5)DC power supply from the Q173DPX must not be used if a separate power supply is applied to the Manual pulse generator/Incremental synchronous encoder.

If a separate power supply is used, be sure it is 5V voltage. Anything else may cause a failure.

(Note-2): Connect HPSEL□ to the SG terminal if the manual pulse generator (differential-output type) /incremental synchronous encoder is used.

(c) Interface between PULSER connector and manual pulse generator (Voltage-output/Open-collector type)/ Incremental synchronous encoder.

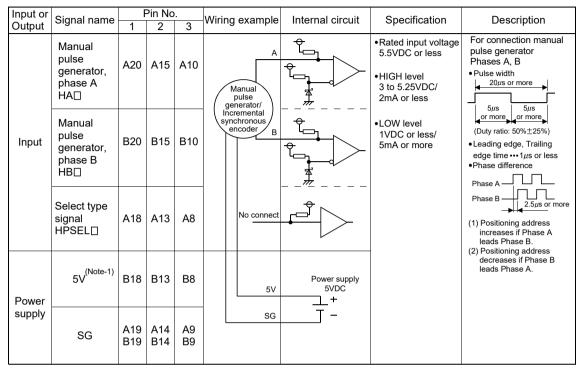

(Note-1): The 5V(P5)DC power supply from the Q173DPX must not be used if a separate power supply is applied to the Manual pulse generator/Incremental synchronous encoder.

If a separate power supply is used, be sure it is 5V voltage. Anything else may cause a failure.


(d) Interface between PULSER connector and tracking enable signal

Input or	Signa	ıl name	Pin No.			Wiring example	Internal circuit	Specification	Description
Output	3		1	2	3	3 1		•	•
lanut	Tracking	TREN□+	A4	А3	A2				Tracking enable signal input.
Input	enable	TREN□-	В4	ВЗ	B2	+ - 12V to 24VDC			

(Note): As for the connection to tracking enable (TREN \square +, TREN \square -), both "+" and " \square " are possible.


(6) Connection examples of manual pulse generator

(a) Differential-output type

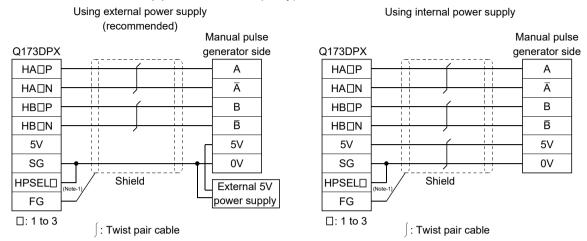

(Note-1): Connect HPSEL□ to the SG terminal if the manual pulse generator (differential-output type)/incremental synchronous encoder is used.

(b) Voltage-output type/open-collector type

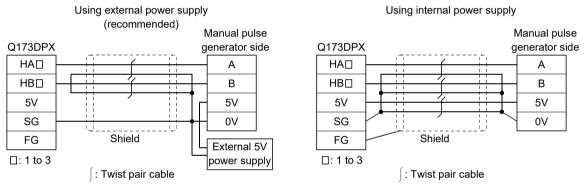


∆CAUTION

- If a separate power supply is applied to the manual pulse generator/incremental synchronous encoder, be sure it is 5V voltage. Anything else may cause a failure.
- Always wire the cables when power is off. Not doing so may damage the circuit of modules.
- Wire the cable correctly. Wrong wiring may damage the internal circuit.
- P5 terminal is the power supply for the manual pulse generator. Do not apply a voltage and do not use it for other purposes.

2.5.7 Q173DSXY Safety signal module

Q173DSXY is used to input/output the safety signal.

(1) Q173DSXY name of parts

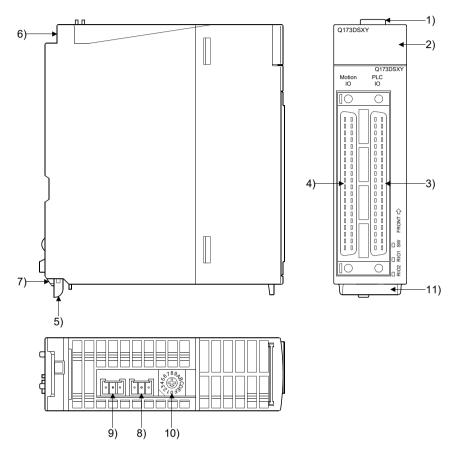

No.	Name	Application			
1)	Module fixing hook	Hook used to fix the module to the base unit. (Single-motion installation)			
		Display the input status from the external equipment.			
		LED Details			
2)	Input indicator LED	0 to 1F Display for I/O signal status of PLC CPU side.			
3)	PLC IO connector	Input/output connector of the PLC CPU.			
4)	Motion IO connector	Input/output connector of the Motion CPU.			
5)	Module mounting lever	Used to install the module to the base unit.			
٥)		Hole for the screw used to fix to the base unit			
6)	Module fixing screw hole	(M3×12 screw: Purchase from the other supplier)			
7)	Module fixing projection	Projection used to fix to the base unit.			
8)	RIO1 connector	RIO communication to Motion CPU (For connection to Motion CPU or Q173DSXY installed on the left)			

No.	Name	Application			
9)	RIO2 connector	RIO communication for Motion CPU (For connection to Q173DSXY installed on the right)			
	Rotary switch for station	Set station number of safety signal module.			
	number setting	Setting (Note) Station number			
10)		0 Station number 1 (Module 1)			
10)	07-7-345 00-0-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-	1 Station number 2 (Module 2)			
		2 Station number 3 (Module 3)			
		(Note): Do not set other than the above setting.			
11)	Serial number display	Display the serial number described on the rating plate.			

(2) Performance specifications (a) Module specifications


ltem	Specifications		
Number of I/O occupying points	32 points (I/O allocation: I/O mix, 32 points)		
Internal current consumption(5VDC)[A]	0.2 (TYP. All points ON)		
Exterior dimensions [mm(inch)]	98(H)×27.4(W)×90(D) (3.86(H)×1.08(W)×3.54(D))		
Mass [kg]	0.15		

(b) Input/output

Item	Specifications		
	32 points × 2 lines		
	(PLC CPU control 32 points + Motion CPU control 32 points,		
Number of input points	Safety input 20 points $ imes$ 2 lines,		
	Feedback input for output 12 points $ imes$ 2 lines)		
Input isolation method	Photocoupler		
Rated input voltage	24VDC (±10%, ripple rate within 5%)		
Rated input current	Approx. 4mA		
Input resistance	Approx. 8.2kΩ		
ON voltage/ON current	20V or more/3.0mA or more		
OFF voltage/OFF current	5V or less/1.7mA or less		
land the same time a	PLC CPU control I/O :10ms (initial value of digital filter)		
Input response time	Motion CPU control I/O: 15ms (CR filter)		
Input common method	32 points/common		
Input common method	(PLC I/O and Motion I/O are separated.)		
Input type	Type 1, Current sinking		
Number of output points	12 points $ imes$ 2 lines		
Number of output points	(PLC CPU control 12 points + Motion CPU control 12 points)		
Output isolation method	Photocoupler		
Rated load voltage	24VDC (±10%)		
Maximum load current	(0.1A \times 8 points, 0.2A \times 4 points) \times 2 lines		
Waximum load current	Common current: 1.6A or less for each connector		
Maximum inrush current	0.7A 10ms or less (0.2A output pin: 1.4A 10ms or less)		
Output response time	1ms or less		
Output common method	12 points/common (PLC I/O and Motion I/O are separated.)		
Output type	Current sourcing		
External power supply	24VDC (±10%, ripple rate within 5%)		
Operation indicator (input/output)	ON indication (LED) (indicates PLC CPU's 32 points)		
Communication with PLC CPU	Parallel bus communication (Via main base unit)		
Communication with Motion CPU	Serial communication (RS-485), Q173DSXYCBL□M cable use		
Applicable wire size	0.3mm ²		
Applicable connector for the	A6CON1 (Attachment), A6CON2, A6CON3, A6CON4 (Optional)		
external connection	ACCONT (Attachment), ACCONZ, ACCONS, ACCONT (Optional)		
Connector/terminal block	A6TBXY36 (Optional),		
conversion module	FA-LTB40P (Optional: Mitsubishi Electric Engineering Co., Ltd. make)		
Cable for connector/terminal block	AC50TB (included with A6TBXY36),		
conversion module	FA-CBL□FMV-M (included with FA-LTB40P)		
Number of modules	Up to 3 modules		

(c) The pin layout of the Motion IO connector/PLC IO connector Use the Motion IO connector and PLC IO connector on the front of the Q173DSXY module to connect to I/O signals.

The following is the pin layout of the Q173DSXY Motion IO connector and PLC IO connector as viewed from the front.

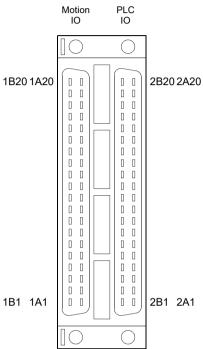

٠								
	Motion IO connector				PLC IO connector			
	Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
	1B20	MC-X00	1A20	MC-X10	2B20	PLC-X00	2A20	PLC-X10
	1B19	MC-X01	1A19	MC-X11	2B19	PLC-X01	2A19	PLC-X11
	1B18	MC-X02	1A18	MC-X12	2B18	PLC-X02	2A18	PLC-X12
)	1B17	MC-X03	1A17	MC-X13	2B17	PLC-X03	2A17	PLC-X13
	1B16	MC-X04	1A16	MC-X14	2B16	PLC-X04	2A16	PLC-X14
	1B15	MC-X05	1A15	MC-X15	2B15	PLC-X05	2A15	PLC-X15
	1B14	MC-X06	1A14	MC-X16	2B14	PLC-X06	2A14	PLC-X16
	1B13	MC-X07	1A13	MC-X17	2B13	PLC-X07	2A13	PLC-X17
	1B12	MC-X08	1A12	MC-X18	2B12	PLC-X08	2A12	PLC-X18
	1B11	MC-X09	1A11	MC-X19	2B11	PLC-X09	2A11	PLC-X19
	1B10 (Note-1), (Note-2)	MC-Y0A/X0A	1A10 (Note-1)	MC-Y1A/X1A	2B10 (Note-1), (Note-2)	PLC-Y0A/X0A	2A10 (Note-1)	PLC-Y1A/X1A
	1B9 (Note-1)	MC-Y0B/X0B	1A9 (Note-18)	MC-Y1B/X1B	2B9 (Note-1)	PLC-Y0B/X0B	2A9 (Note-1)	PLC-Y1B/X1B
	1B8	MC-Y0C/X0C	1A8	MC-Y1C/X1C	2B8	PLC-Y0C/X0C	2A8	PLC-Y1C/X1C
	1B7	MC-Y0D/X0D	1A7	MC-Y1D/X1D	2B7	PLC-Y0D/X0D	2A7	PLC-Y1D/X1D
	1B6	MC-Y0E/X0E	1A6	MC-Y1E/X1E	2B6	PLC-Y0E/X0E	2A6	PLC-Y1E/X1E
	1B5	MC-Y0F/X0F	1A5	MC-Y1F/X1F	2B5	PLC-Y0F/X0F	2A5	PLC-Y1F/X1F
	1B4	Not connect	1A4	Not connect	2B4	Not connect	2A4	Not connect
	1B3	Not connect	1A3	Not connect	2B3	Not connect	2A3	Not connect
	1B2	24VDC(COM1)	1A2	0V(COM2)	2B2	24VDC(COM1)	2A2	0V(COM2)
	1B1	24VDC(COM1)	1A1	0V(COM2)	2B1	24VDC(COM1)	2A1	0V(COM2)

(Note-1): 0.2[A] output is possible. (The others are 0.1[A] output.)

(Note-2): Controlled by system as shut-off signal. (Safety observation function normally is ON, abnormally is OFF.)

Applicable connector model name


A6CON1 type soldering type connector
N361J040AU connector (OTAX Corporation)
N360C040B connector cover

A6CON2 type Crimp-contact type connector
A6CON3 type Pressure-displacement type connector
A6CON4 type soldering type connector

(Note): Connector/terminal block conversion modules and cables can be used at the wiring of connector.

A6TBXY36 : Connector/terminal block converter module AC□TB (□:Length [m]): Connector/terminal block converter module cable


(3) Interface between Motion IO connector/PLC IO connector and servo external signal

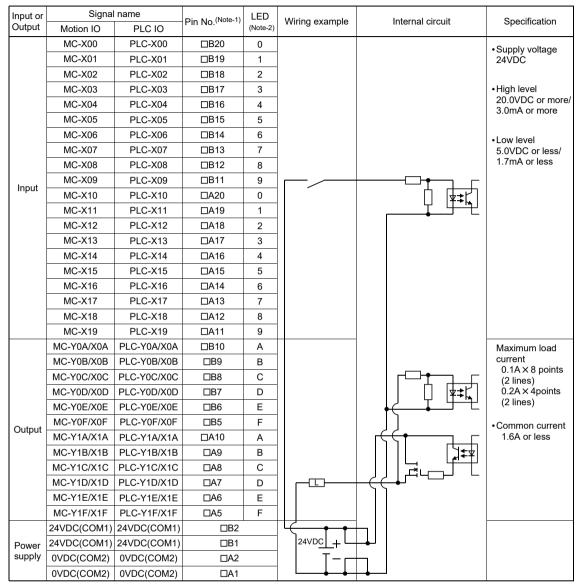

(Note-1): □ = 1: Motion IO, 2: PLC IO (Note-2): PLC CPU side only

POINTS

- (1) Wire the I/O power supply input (24VDC, 0V common) supplied to Q173DSXY to two pins of each conversion modules.
- (2) Separate all external wirings into 2 lines to configure the safety circuit. Do not wire between the two terminal block conversion modules for I/O power supply supplied to Q173DSXY (24VDC, 0V common). Be sure to separately wire the modules. If one break affects both wiring of Motion CPU side and PLC CPU side, the safety system may not execute properly.

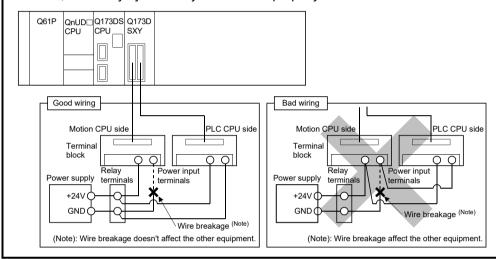


∆ CAUTION

- Measure the input voltage to Q173DSXY with the input connector part. Be sure to select DC power supply within the range of 21.6VDC to 26.4VDC included ripple voltage and spike voltage and wire.
- When wiring in the Q173DSXY, be sure that it is done correctly by checking the product's rated voltage and the terminal layout. Connecting a power supply that is different from the rating or incorrectly wiring the product could result in fire or damage.
 - Wire the cable correctly. Wrong wiring may damage the internal circuit.
- ◆ Always use a shield cable for connection of the connector and external equipment, and avoid running it close to or bundling it with the power and main circuit cables to minimize the influence of electromagnetic interface. (Separate them more than 100mm(0.33ft.) away.)
- Connect the shield wire of the connection cable to the FG terminal of the external equipment.
- Make parameter setting correctly. Incorrect setting may disable the protective functions such as safety functions.
- Always wire the cables when power is off. Not doing so may damage the circuit of modules.
- Do not touch the case of Q173DSXY while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.

(4) Wiring example for the safety signal module

- (a) Wiring example for door signal to safety signal module and AC contactor. Wiring example to shut off contactor by the following methods are shown in the diagram below.
 - Shut-off signal from the Motion CPU side of safety signal module
 - Shut-off signal from the PLC CPU side of safety signal module
 - Contactor shut-off output MC1 and MC2 of servo amplifier Input the output signal of auxiliary normally closed contact into the safety signal module to detect the weld of contactor.

Door sensor used as a safety signal should have two outputs and is wired to both Motion CPU side and PLC CPU side. Sensor and switch used as safety signal should be the ones for weak signal use (e.g. twin contact) to prevent contact failure.

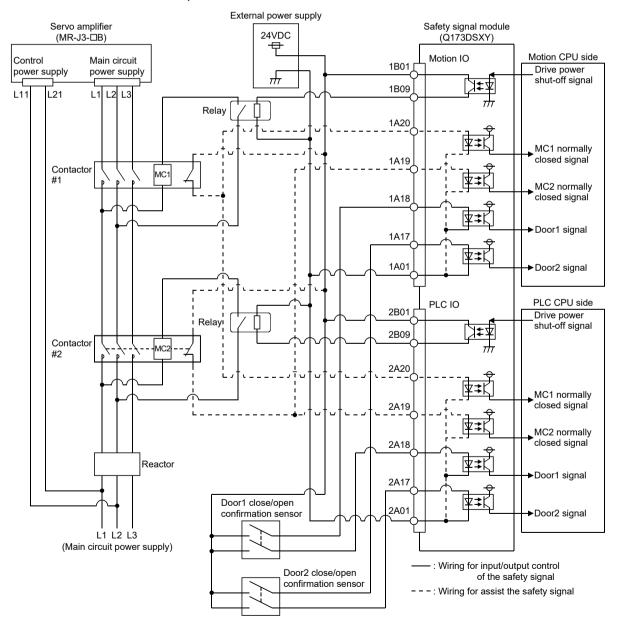


- (b) Wiring example for door signal to safety signal module and STO terminal. Wiring example to wire the following methods are shown in the diagram below.
 - Shut-off signal from the Motion CPU side of safety signal module
 - Shut-off signal from the PLC CPU side of safety signal module
 - · STO terminal of servo amplifier

Door sensor used as a safety signal should have two outputs and is wired to both Motion CPU side and PLC CPU side. Sensor and switch used as safety signal should be the ones for weak signal use (e.g. twin contact) to prevent contact failure.


POINTS

Servo amplifier (MR-J5(W)-□B) does not support safety communication.

1) MR-J4-□B use

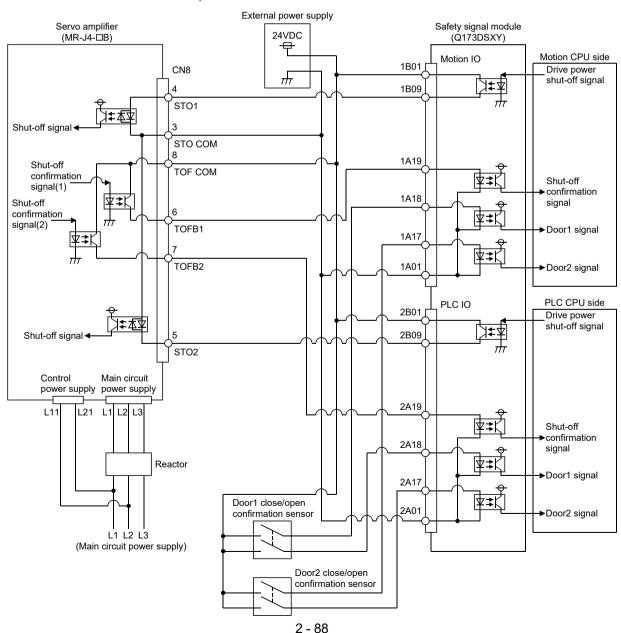


2) MR-J3-□BS use

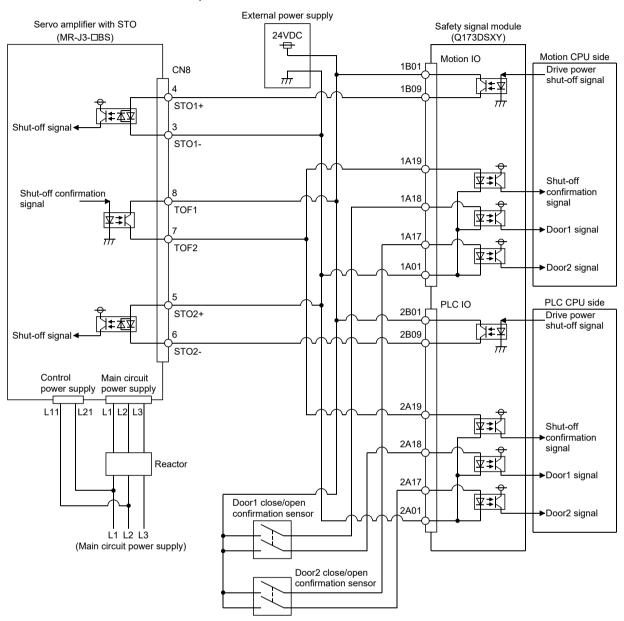

(c) Wiring example for external pulse input to safety signal module. The wiring diagram for external pulse input signal and safety signal module shows below.

Safety module performs the safety diagnostics of external pulse generator, therefore you need to wire them so that external pulse generator is supplied power by the safety signal module, and the generated pulse becomes input signal of safety signal module.

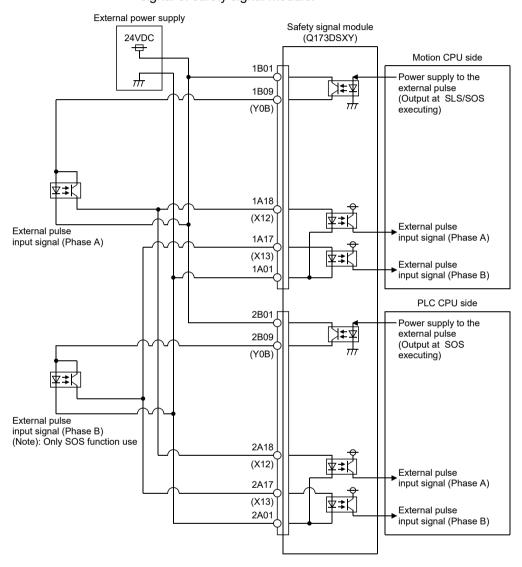

2.5.8 Manual pulse generator/Serial absolute synchronous encoder

(1) Manual pulse generator specifications

Item	Specifications		
Model name	MR-HDP01 (Note-1)		
Ambient temperature	-10 to 60°C (14 to 140°F)		
Pulse resolution	25pulse/rev(100 pulse/rev after magnification by 4)		
Output method	Voltage-output/Output current: Up to 20mA		
Power supply voltage	4.5 to 13.2VDC		
Current consumption [mA]	60		
	"H" level: Power supply voltage (Note-2) -1V or more (with no load)		
Output level	"L" level: 0.5V or less (with maximum leading-in)		
Life time	1,000,000 revolutions or more (at 200r/min)		
Permitted axial loads	Radial load: Up to 19.6N, Thrust load: Up to 9.8N		
Mass [kg]	0.4		
Number of max. revolution	Instantaneous Up to 600r/min. normal 200r/min		
Pulse signal status	2 signals: A phase, B: phase, 90° phase difference		
Start friction torque	0.06N•m (20°C (68°F))		

(Note-1): Use MR-HDP01 by connecting with Q173DPX or built-in interface in Motion CPU. (Note-2): If a separate power supply is used, be sure it is 5VDC \pm 0.25V voltage.

(2) Serial absolute synchronous encoder specifications

Item	Specifications		
Model name	Q171ENC-W8 (Note-1), (Note-2)	Q170ENC (Note-1), (Note-2)	
Ambient temperature	-5 to 55°C (23 to 131°F)		
Resolution	4194304pulse/rev	262144pulse/rev	
Transmission method	Serial communications (0	Connected to Q172DEX)	
Direction of increasing addresses	CCW (viewed fro	om end of shaft)	
	Dustproof/Waterproof	Dustproof/Waterproof	
Protective construction	(IP67: Except for the	(IP65: Except for the	
	shaft-through portion.)	shaft-through portion.)	
Permitted speed at power ON	3600	r/min	
Permitted speed at power OFF (Note-3)	500r/min		
Permitted axial loads	Radial load : Up to 19.6N	, Thrust load : Up to 9.8N	
Runout at input shaft tip	0.02mm(0.00079 inch) or les	s (15mm(0.59 inch) from tip)	
Start friction torque	0.04N•m (20°C (68°F))	0.02N•m (20°C (68°F))	
Recommended coupling	Bellows	coupling	
Permitted angular acceleration	40000	rad/s ²	
Vibration resistance	5G (50 to	200Hz)	
Shock resistance	50G (11m	s or less)	
Internal current consumption [A]	0.2	25	
Mass [kg]	0.	6	
	Q170ENCCBL□M(-A)		
Connecting cable [m(ft.)]	(□=Cable length : 2(6.56), 5 (16.40), 10 (32.81),		
	20 (65.62), 30 (98.43), 50 (164.04))		
Communications method	Differential driver/receiver		
Transmission distance	Up to 50m	(164.04ft.)	

⁽Note-1): Use by connecting with Q172DEX.

⁽Note-2): When "o-ring" is required, please purchase separately by customers.

⁽Note-3): If it exceeds a permitted speed at power OFF, a position displacement is generated.


2.5.9 SSCNETⅢ cables

Between the Motion CPU module and servo amplifiers, or servo amplifier and servo amplifier connected by SSCNETII cable. When using the Q172D(S)CPU, SSCNETII cable for connection to servo amplifier can be used for only 1 line. (Connect to CN1.) When using the Q173D(S)CPU, SSCNETII cables for connection to servo amplifier can be used for up to 2 lines. (Connect to CN1 and CN2.) Up to 16 servo amplifiers can be connected to SSCNETII(/H) per 1 line. (However, when using the Q172DCPU(-S1), up to 8 servo amplifiers can be connected.)

(1) SSCNETⅢ cable specifications


Model name		Cable length [m(ft.)]	Description	
	MR-J3BUS015M	0.15 (0.49)		
MR-J3BUS□M	MR-J3BUS03M	0.3 (0.98)		
(Standard cord for	MR-J3BUS05M	0.5 (1.64)		
inside panel)	MR-J3BUS1M	1 (3.28)		
	MR-J3BUS3M	3 (9.84)	Maties ODII () Oamas amalifian	
MR-J3BUS□M-A	MR-J3BUS5M-A	5 (16.40)	Motion CPU	
(Standard cable for	MR-J3BUS10M-A	10 (32.81)	Servo amplifier	
outside panel)	MR-J3BUS20M-A	20 (65.62)		
MR-J3BUS□M-B	MR-J3BUS30M-B	30 (98.43)		
	MR-J3BUS40M-B	40 (131.23)		
(Long distance cable)	MR-J3BUS50M-B	50 (164.04)		

(2) Connection between the Q173D(S)CPU and servo amplifiers Connect the SSCNETII cables to the following connectors. Refer to Section 4.2.1 for the connection and disconnection of SSCNETIII cable.

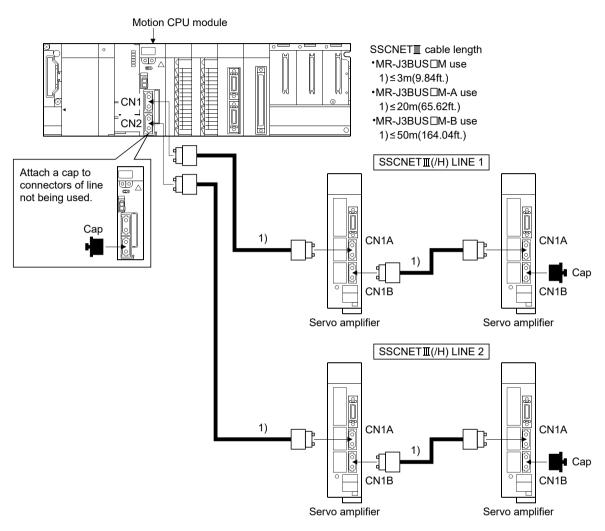

(Note): It cannot communicate if the connection of CN1A and CN1B is mistaken.

(3) Connection between the Q172D(S)CPU and servo amplifiers Connect the SSCNETII cables to the following connectors. Refer to Section 4.2.1 for the connection and disconnection of SSCNETIII cable.

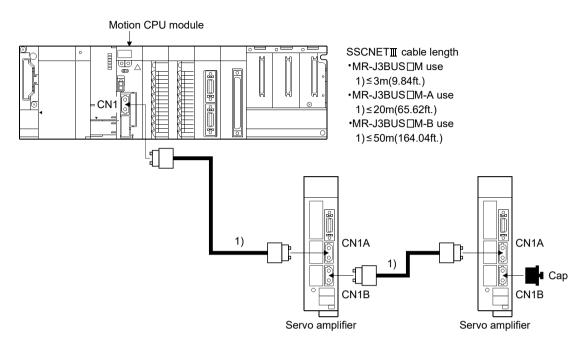

(Note): It cannot communicate if the connection of CN1A and CN1B is mistaken.

(4) Setting of the axis No. and axis select rotary switch of servo amplifier

Axis No. is used to set the axis numbers of servo amplifiers connected to SSCNETII connector($CN\Box$) in the program.


The following range can be set in the Motion CPU module.

Axis No. is set for each SSCNETII(/H) line in the system setting of MT Developer2. Axis No. is allocated and set for the setting axis number (d01 to d16) of servo amplifier.


	Axis No. setting range		
Q173DSCPU	44.00		
Q173DCPU(-S1)	1 to 32		
Q172DSCPU	1 to 16		
Q172DCPU(-S1)	1 to 8		

Since the axis number (d01 to d16) of a servo amplifier on the system setting screen corresponds to the rotary switches (SW1/SW2) (0 to F)/axis select rotary switch (0 to F) of a servo amplifier, set the rotary switches (SW1/SW2)/axis select rotary switch referring to Table 2.1 in (a) or Table 2.2 in (b) below.

• Setting display of axis No.

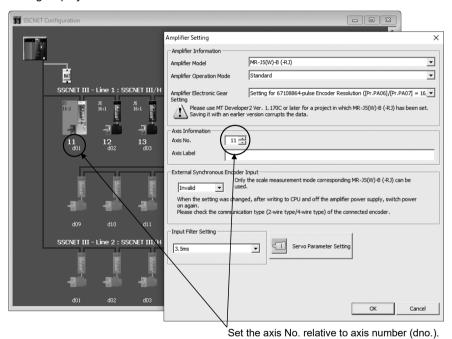

 Rotary switch (SW1/SW2) / Axis select rotary switch (Servo amplifier)

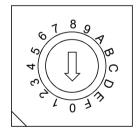

(a) When using MR-J5(W)-□B

Correspondence between the dno. and the rotary switches (SW1/SW2) is shown in Table 2.1.

Table 2.1 Correspondence between dno.s and rotary switches (SW1/SW2) of servo amplifier

dno. ^(Note1)	CCCNETT!//UNline	Rotary switch	
uno.	SSCNETⅢ(/H) line	SW1	SW2
d01	1	"0"	"0"
d02	1	"0"	"1"
d03	1	"0"	"2"
d04	1	"0"	"3"
d05	1	"0"	"4"
d06	1	"0"	"5"
d07	1	"0"	"6"
d08	1	"0"	"7"
d09	1	"0"	"8"
d10	1	"0"	"9"
d11	1	"0"	"A"
d12	1	"0"	"B"
d13	1	"0"	"C"
d14	1	"0"	"D"
d15	1	"0"	"E"
d16	1	"0"	"F"

dno. (Note1)	CCCNETT // IN line	Rotary switch		
uno. V	SSCNETⅢ(/H) line	SW1	SW2	
d01	2	"0"	"0"	
d02	2	"0"	"1"	
d03	2	"0"	"2"	
d04	2	"0"	"3"	
d05	2	"0"	"4"	
d06	2	"0"	"5"	
d07	2	"0"	"6"	
d08	2	"0"	"7"	
d09	2	"0"	"8"	
d10	2	"0"	"9"	
d11	2	"0"	"A"	
d12	2	"0"	"B"	
d13	2	"0"	"C"	
d14	2	"0"	"D"	
d15	2	"0"	"E"	
d16	2	"0"	"F"	

(Note1): The dno. is number of servo amplifier axis displayed with the system setting of MT Developer2.

Axis No. is set relative to dno. in the system settings.

(Note2): Set rotary switch (SW1) to "0". Rotary switch (SW1) cannot be set to any value other than "0" (1 to F).

(b) When using MR-J4(W)-□B/MR-J3(W)-□B/MR-JE-□B

Correspondence between the dno. and the axis select rotary switch of the servo amplifier is shown in Table 2.2.

Table 2.2 Correspondence between dno.s and axis select rotary switches of servo amplifier

dno. ^(Note)	SSCNETⅢ(/H) line	Axis select rotary switch	
d01	1	"0"	
d02	1	"1"	
d03	1	"2"	
d04	1	"3"	
d05	1	"4"	
d06	1	"5"	
d07	1	"6"	
d08	1	"7"	
d09	1	"8"	
d10	1	"9"	
d11	1	"A"	
d12	1	"B"	
d13	1	"C"	
d14	1	"D"	
d15	1	"E"	
d16	1	"F"	

dno. (Note)	SSCNETⅢ(/H) line	Axis select rotary switch	
d01	2	"0"	
d02	2	"1"	
d03	2	"2"	
d04	2	"3"	
d05	2	"4"	
d06	2	"5"	
d07	2	"6"	
d08	2	"7"	
d09	2	"8"	
d10	2	"9"	
d11	2	"A"	
d12	2	"B"	
d13	2	"C"	
d14	2	"D"	
d15	2	"E"	
d16	2	"F"	

(Note1): The dno. is number of servo amplifier axis displayed with the system setting of MT Developer2. Axis No. is set relative to dno. in the system settings.

(c) Connector No. of Motion CPU module Correspondence between SSCNETII(/H) line and connector No. of Motion CPU module is shown in Table 2.2.

Table 2.3 Correspondence between SSCNETⅢ(/H) line No. and connector No. of Motion CPU module

SSCNETⅢ(/H) line No.	Connector No. of Motion CPU module	
1	CN1	
2	CN2	

(Note): Number of SSCNET**I**(/H) lines: Q173D(S)CPU: 2 lines/Q172D(S)CPU: 1 line

POINTS

The setting of axis select rotary switch is different depending on the servo amplifier. Refer to the "Servo amplifier Instruction Manual" for details.

2.5.10 Battery

This section describes the battery specifications and handling precautions used in the Motion CPU.

(1) Battery specifications

Model name	Q6BAT		
Classification	Manganese dioxide lithium primary battery		
Initial voltage [V]	3.0		
Nominal current [mAh]	1800		
Storage life	Actually 5 years (Room temperature)		
Lithium content [g]	0.57		
Applications	For memory data backup of SRAM built-in Motion CPU		
Exterior dimensions [mm(inch)]	φ 16(0.63) x 32(1.26)		

Transport guidelines

Products are packed in compliance with the transportation regulations prior to shipment. When repacking any of the unpacked products for transportation, make sure to observe the IATA Dangerous Goods Regulations, IMDG (International Maritime Dangerous Goods) Code, and other local transportation regulations.

For details, please consult the shipping carrier used.

- (2) Data back-up of Motion CPU module by the battery
 - Be sure to use the battery.
 For Q173DSCPU/Q172DSCPU
 - Set the battery (Q6BAT) to battery holder.
 - For Q173DCPU(-S1)/Q172DCPU(-S1)
 Set the battery (Q6BAT) to battery holder unit (Q170DBATC).

The programs, parameters, motion devices(#), latch range devices and absolute position data of SRAM built-in Motion CPU module are not backed up without using the battery.

In the following status, the backup time after power OFF is 3 minutes.

- The battery connector/Q6BAT lead connector is disconnected.
- The battery cable/lead wire of Q6BAT is broken.

		Battery life (Total power failure time) [h] ^(Note-1)				
Module type	Battery type	Power-on time ratio (Note-2)	Guaranteed value ^(Note-3) (MIN) (75°C (167°F))	Guaranteed value (Note-4) (TYP) (40°C (104°F))	Actual service value (Note-5) (Reference value) (TYP) (25°C (77°F))	Backup time after alarm
		0%	20000			0.0
Q173D(S)CPU/ Q172D(S)CPU	Battery (Q6BAT)	30%	27000	43800 438	43800	90
		50%	31000			(After
		70%	36000			SM51/SM52 ON)
		100%	43800			ON)

- (Note-1): The actual service value indicates the average value, and the guaranteed value indicates the minimum value.
- (Note-2): The power-on time ratio indicates the ratio of Multiple CPU system power-on time to one day (24 hours). (When the total power-on time is 17 hours and the total power-off time is 7 hours, the power-on time ratio is 70%.)
- (Note-3): The guaranteed value (MIN); equivalent to the total power failure time that is calculated based on the characteristics value of the memory (SRAM) supplied by the manufacturer and under the storage ambient temperature range of -25°C to 75°C (-13 to 167°F) (operating ambient temperature of 0°C to 55°C (32 to 131°F)).
- (Note-4): The guaranteed value (TYP); equivalent to the total power failure time that is calculated based on the normal air-conditioned environment (40°C (104°F)).
- (Note-5): The actual service value (Reference value); equivalent to the total power failure time that is calculated based on the measured value and under the storage ambient temperature of 25°C (77°F). This value is intended for reference only, as it varies with characteristics of the memory.

POINTS

The self-discharge influences the life of battery without the connection to Motion CPU module. The external battery should be exchanged approximately every 4 or 5 years.


Exchange the battery with a new one in 4 to 5 years even if a total power failure time is guaranteed value or less.

∆ CAUTION


- Do not short a battery.
- Do not charge a battery.
- Do not disassemble a battery.
- Do not burn a battery.
- Do not overheat a battery.
- Do not solder the battery terminal.
- The programs, parameters, motion devices(#), latch range devices and absolute position data of SRAM built-in Motion CPU module are not backed up without using the battery.

(3) Connection procedure with Motion CPU module

- (a) Q173DSCPU/Q172DSCPU
 - 1) Open the battery cover.
 - 2) Set Q6BAT to battery holder.
 - 3) Connect the lead connector of Q6BAT to the battery connector.
 - 4) Close the battery cover.

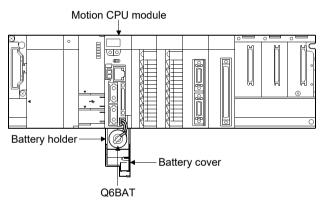

- (b) Q173DCPU(-S1)/Q172DCPU(-S1)
 - 1) Set Q6BAT to Battery holder unit(Q170DBATC).
 - 2) Connect the lead connector of Q6BAT to the connector (BATTERY) of Q170DBATC.
 - 3) Connect between the connector (BAT) of Motion CPU module and connector (CPU) of Q170DBATC.

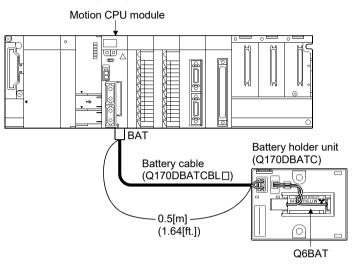

2.5.11 Forced stop input terminal

(1) Table of the forced stop input terminal specifications

Item		Specifications		
Number of input points		Forced stop signal : 1 point		
Input method		Sink/Source type		
Rated input curre	ent	2.4mA		
Isolation method		Photocoupler		
Operating voltage range		20.4 to 26.4VDC (+10/ -15%, ripple ratio 5% or less)		
ON voltage/current		17.5VDC or more/2.0mA or more		
OFF voltage/curr	voltage/current 1.8VDC or less/0.18mA or less			
Input resistance	put resistance Approx. 10kΩ			
	OFF to ON	4		
Response time	ON to OFF	1ms or less		
External connector type		2 pin connector		
Recommended wire size		0.3mm ² (AWG22)		

MEMO		

3

3. DESIGN

3.1 System Designing Procedure

System designing procedure is shown below.

Motion control system design

Select the Motion CPU module according to number of control axes

Select the motion functions to be installed according to the machinery and equipment to be controlled (selection of the programming software packages according to the operating system software).

Select the number of Q172DLX's and design according to each axis control system and whether servo external signals are required or not.

When there is mechanical home position and home position return is made: Proximity dog required

For speed control: Speed-position switching control signal required

When overrun prevention is necessary: Stroke limit required When each axis stop is necessary: STOP signal required

Select Q173DPX, Q172DEX and design according to whether manual pulse generators and synchronous encoders are required or not.

Select interrupt module QI60 according to whether interrupt input are required or not.

Select I/O modules/intelligent function modules according to the specifications of the external equipment to be controlled.

Select the main base unit, extension base units, extension power supply module and extension cables, and make I/O assignment according to necessary number of Q172DLXs, Q172DEXs, Q173DPXs, I/O modules, intelligent function modules.

Select the servo amplifier and servo motor according to the motor capacity and number of revolution from the machine mechanism to be controlled each axis.

Set the servo amplifier connection by SSCNETII(/H) and axis numbers (dno.) and axis No..

Select SSCNETII/H head module and I/O modules/intelligent function modules according to the specifications of the external equipment to be controlled.

Select the head module connection by SSCNETⅢ/H, station number and axis No.

Refer to section 2.5.4

Refer to section 2.5.5 Refer to section 2.5.6


Refer to MELSEC-Q series manual.

Refer to section 2.5.4 Refer to section 2.5.5 Refer to section 2.5.6 Refer to MELSEC-Q series manual.

Refer to the servo amplifier manual.

Refer to section 2.5.9

Refer to MELSEC-L series SSCNETⅢ/H head module manual.

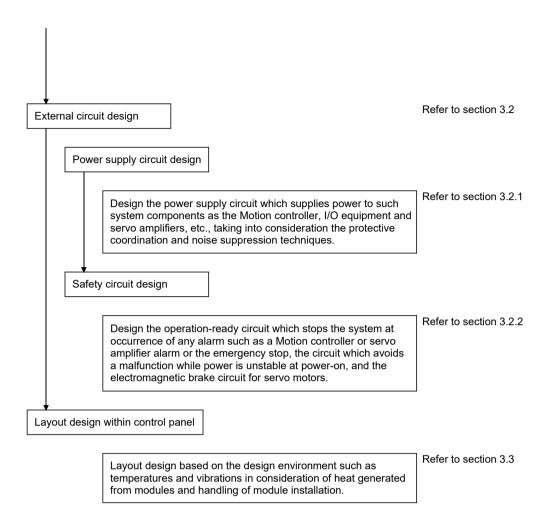

⚠CAUTION

- Provide appropriate circuits external to the Motion controller to prevent cases where danger may result from abnormal operation of the overall system in the event of an external power supply fault or Motion controller failure.
- Mount the Motion controller, servo amplifier, servo motor and regenerative resistor on incombustible. Mounting them directly or close to combustibles will lead to fire.
- If a fault occurs in the Motion controller or servo amplifier, shut the power OFF at the servo amplifier's power source. If a large current continues to flow, fire may occur.
- When using a regenerative resistor, shut the power OFF with an error signal. The regenerative resistor may abnormally overheat due to a fault in the regenerative transistor, etc., and may lead to fire.
- Always take heat measures such as flame proofing for the inside of the control panel where the servo amplifier or regenerative resistor is mounted and for the wires used. Failing to do so may lead to fire.
- Do not apply a voltage other than that specified in the instruction manual on any terminal. Doing so may lead to destruction or damage.
- Do not mistake the polarity (+/-), as this may lead to destruction or damage.


∴ CAUTION

- Do not touch the heat radiating fins of controller or servo amplifier, regenerative resistor and servo motor, etc. while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.
- Always turn the power OFF before touching the servo motor shaft or coupled machines, as these parts may lead to injuries.
- Do not go near the machine during test operations or during operations such as teaching.
 Doing so may lead to injuries.
- Always mount a leakage breaker on the Motion controller and servo amplifier power source.
- If mounting of an electromagnetic contactor for power shut off during an error, etc., is specified in the instruction manual for the servo amplifier, etc., always mount the electromagnetic contactor.
- Mount an emergency stop circuit externally so that the operation can be stopped immediately and the power shut off.
- Use the Motion controller, servo amplifier, servo motor and regenerative resistor with the correct combinations listed in the instruction manual. Other combinations may lead to fire or faults.
- If safety standards (ex., robot safety rules, etc.,) apply to the system using the Motion controller, servo amplifier and servo motor, make sure that the safety standards are satisfied.
- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- In systems where coasting of the servo motor will be a problem during the forced stop, the emergency stop, servo OFF or when the power is shut OFF, use dynamic brakes.
- Make sure that the system considers the coasting amount even when using dynamic brakes.
- In systems where perpendicular shaft dropping may be a problem during the forced stop, the emergency stop, servo OFF or when the power is shut OFF, use both dynamic brakes and electromagnetic brakes.
- The dynamic brakes must be used only during the forced stop, the emergency stop and errors where servo OFF occurs. These brakes must not be used for normal braking.
- The brakes (electromagnetic brakes) assembled into the servo motor are for holding applications, and must not be used for normal braking.
- The system must have a mechanical allowance so that the machine itself can stop even if the stroke limits switch is passed through at the max. speed.
- Use wires and cables that have a wire diameter, heat resistance and bending resistance compatible with the system.
- Use wires and cables within the length of the range described in the instruction manual.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier, servo motor) used in a system must be compatible with the Motion controller, servo amplifier and servo motor.
- Install a cover on the shaft so that the rotary parts of the servo motor are not touched during operation.
- There may be some cases where holding by the electromagnetic brakes is not possible due to the life or mechanical structure (when the ball screw and servo motor are connected with a timing belt, etc.). Mount a stopping device to ensure safety on the machine side.

3.2 External Circuit Design


As to the ways to design the external circuits of the Motion system, this section describes the method and instructions for designing the power supply circuits and safety circuits, etc. (Example: Q173DSCPU/Q172DSCPU and MR-J4-\B use)


(1) Sample system circuit design for motion control

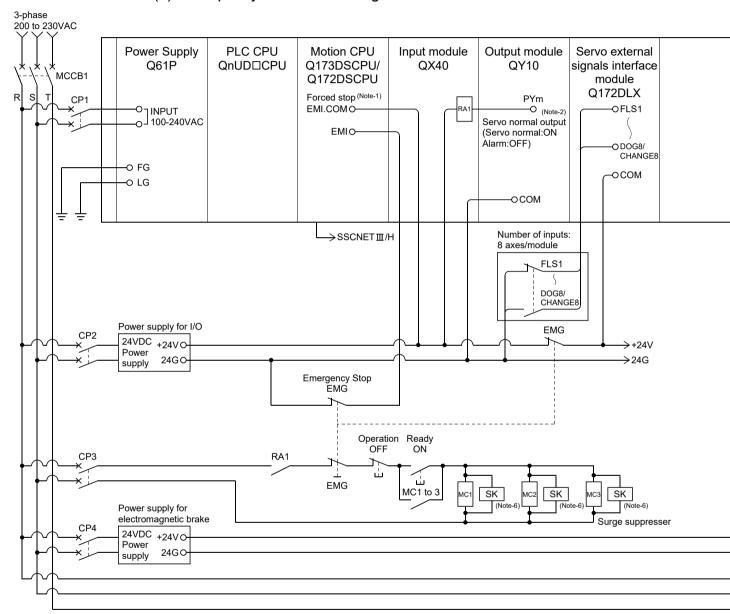

POINT

- (1) (Note-1): Make the forced stop input cable within 30m(98.43ft.). The forced stop by the forced stop terminal of input module is also possible.
- (2) (Note-2): Motion SFC program example is shown in the right record.
- (3) (Note-3): It is also possible to use a full wave rectified power supply as the power supply for the electromagnetic brake.
- (4) (Note-4): It is also possible to use forced stop signal of the servo amplifier.
- (5) (Note-5): Refer to the servo amplifier instruction manuals for selection of the circuit breaker and electromagnetic contactor.
- (6) (Note-6): The surge suppressor is recommended to be used for an AC relay or electromagnetic contactor (MC) near the servo amplifier. Refer to the servo amplifier instruction manual for selection of the surge suppressor.

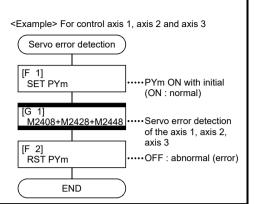

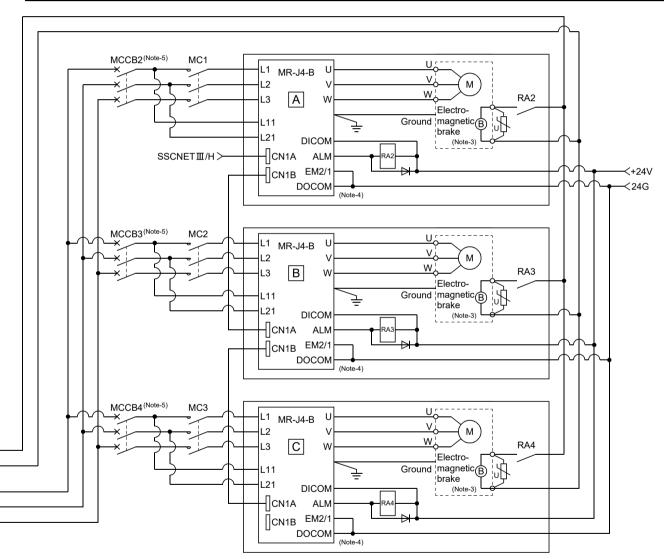


(Note-1): When the control power supply of servo amplifier is shut off, it is not possible to communicate with the servo amplifier after that. Example) When the control power supply L11/L21 of servo amplifier in figure \Box above is shut off, it is also not possible to communicate with the servo amplifier \Box .

If only a specific servo amplifier main circuit power supply is shut off, be sure to shut off the main circuit power supply L1/L2/L3, and do not shut off the control power supply L11/L21.

(Note-2): Be sure to shut off the both of main circuit power supply L1/L2/L3 and control power supply L11/L21 after disconnection of SSCNET communication by the connect/disconnect function of SSCNET communication at the time of exchange of servo amplifier. At this time, it is not possible to communicate between the servo amplifier and Motion controller. Therefore, be sure to exchange the servo amplifier after stopping the operating of machine beforehand.

(2) System design circuit example of the PLC I/O

 (a) System design circuit example(when not using ERR terminal of power supply module)

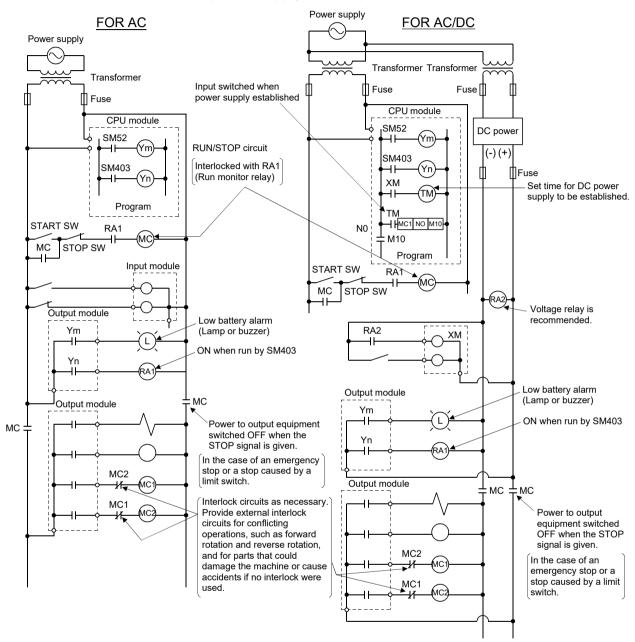

The power-ON procedure is as follows:

For AC

- 1) Switch power ON.
- 2) Set CPU to RUN.
- 3) Turn ON the start switch.
- 4) When the magnetic contactor (MC) comes on, the output equipment is powered and may be driven by the program.

For AC/DC

- 1) Switch power ON.
- 2) Set CPU to RUN.
- 3) When DC power is established, RA2 goes ON.
- 4) Timer (TM) times out after the DC power reaches 100[%]. (The TM set value should be the period of time from when RA2 goes ON to the establishment of 100[%] DC voltage. Set this value to approximately 0.5 seconds.)
- 5) Turn ON the start switch.
- 6) When the electromagnetic contactor (MC) comes on, the output equipment is powered and may be driven by the program. (If a voltage relay is used at RA2, no timer (TM) is required in the program.)

Power supply FOR AC/DC Transformer Transformer Input switched when Fuse | power supply established CPU module SM52 DC power RUN/STOP circuit (-) (+)SM403 interlocked with RA1 (Yn) Fuse (run monitor relay) XMSet time for DC power supply to be established. HMC1 NO M10 M10 START SW RA1 RA3 STOP SW RA2 Voltage relay is recommended. RA2 Output module Ym Low battery alarm (Lamp or buzzer) Υn (RA1) OFF at ERR contact OFF ERR (stop error occurrence) Output module мс ‡мс Interlock circuits as Output by ERR contact OFF necessary. Provide Power OFF of equipment external interlock circuits for conflicting In the case of an operations, such as MC2 forward rotation and emergency stop or a stop caused by a limit reverse rotation, and for parts that could switch. MC1 damage the machine or cause accident if no

(b) System design circuit example(when using ERR terminal of power supply module)

The power-ON procedure is as follows:

interlock were used.

For AC/DC

- 1) Switch power ON.
- 2) Set CPU to RUN.
- 3) When DC power is established, RA2 goes ON.
- 4) Timer (TM) times out after the DC power reaches 100[%]. (The TM set value should be the period of time from when RA2 goes ON to the establishment of 100[%] DC voltage. Set this value to approximately 0.5 seconds.)
- 5) Turn ON the start switch.
- 6) When the magnetic contactor (MC) comes on, the output equipment is powered and may be driven by the program. (If a voltage relay is used at RA2, no timer (TM) is required in the program.)


3.2.1 Power supply circuit design

This section describes the protective coordination and noise suppression techniques of the power supply circuit.

(1) Separation and protective coordination (leakage current protection, over current protection) of power supply lines


Separate the lines for Multiple CPU system power supplies from the lines for I/O devices and servo amplifiers as shown below.

When there is much noise, connect an insulation transformer.

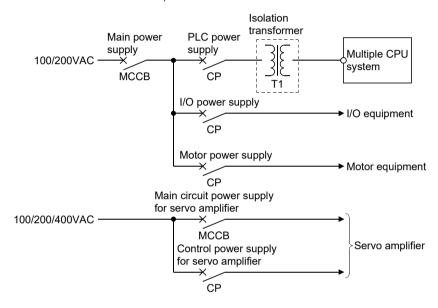

(2) Grounding

The Motion system may malfunction as it is affected by various noises such as electric path noises from the power supply lines, radiated and induced noises from other equipment, servo amplifiers and their cables, and electromagnetic noises from contactors. To avoid such troubles, connect the earthing ground of each equipment and the shield grounds of the shielded cables to the earth. For grounding, use the exclusive ground terminal wire of each equipment or a single-point earth method to avoid grounding by common wiring, where possible, since noises may sneak from other equipment due to common impedances.

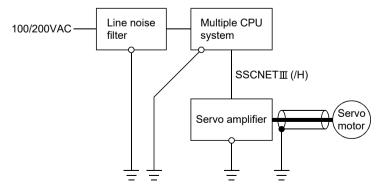

(Note): Be sure to ground the line noise filter, Multiple CPU system, servo amplifier and servo motor. (Ground resistance: 100Ω or less)

3.2.2 Safety circuit design

(1) Concept of safety circuits

When the Multiple CPU system is powered on and off, normal control output may not be done momentarily due to a delay or a startup time difference between the Multiple CPU system power supply and the external power supply (DC in particular) for the control target.

Also, an abnormal operation may be performed if an external power supply fault or Motion controller failure takes place.

To prevent any of these abnormal operations from leading to the abnormal operation of the whole system and in a fail-safe viewpoint, areas which can result in machine breakdown and accidents due to abnormal operations (e.g. emergency stop, protective and interlock circuits) should be constructed outside the Multiple CPU system.

(2) Emergency stop circuit

The circuit should be constructed outside of the Multiple CPU system or servo amplifier. Shut off the power supply to the external servo amplifier by this circuit, make the electromagnetic brakes of the servo motor operated.


(3) Forced stop circuit


(a) The forced stop of all servo amplifiers is possible in a lump by using the forced stop input of Motion CPU modules. After forced stop, the forced stop factor is removed and the forced stop canceled.

(The servo error detection signal does not turn on with the forced stop.) The forced stop input cannot be invalidated in the parameter setting of system setting.

Make the forced stop input cable within 30[m] (98.43[ft.]).

The wiring example for the forced stop input of Motion CPU module is shown below.

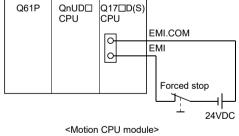

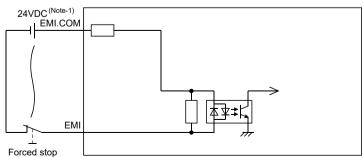


(Note): The forced stop input can not be invalidated in the system settings.

(Note-1): As for the connection, both "+" and "-" are possible

(b) The forced stop of all servo amplifiers is possible in a lump by using the forced stop input of input modules. After forced stop, the forced stop factor is removed and the forced stop canceled.

(The servo error detection signal does not turn on with the forced stop.) The forced stop input can be set by allocation of the device number in the parameter setting of system setting. When the device is used, apply 24VDC voltage on EMI connector and invalidate the forced stop input of EMI connector.

The wiring example that uses the forced stop input of input module (QX10) is shown below.

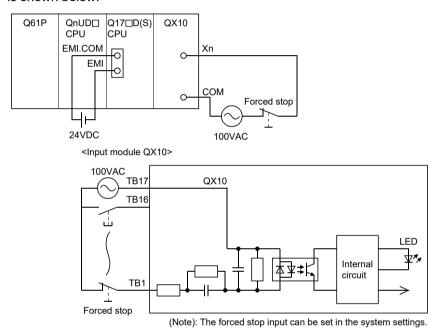

(c) It is also possible to use the forced stop signal of the servo amplifier.

Operation status of the emergency stop, servo amplifier forced stop, and the Motion controller forced stop are as follows.

Refer to manual of the servo amplifier about servo motor capacity.

Item	Operation of the signal ON	Remark
Emergency stop		The power supply of the servo amplifier is shut off by external circuit, and the servo motor stops.
Servo amplifier forced stop	Servo OFF	A stop command from the external circuit to the servo amplifier is output, and the servo amplifier stops the servo motor.
Motion controller forced stop		A stop command from the Motion controller to the servo amplifier is output, and the servo amplifier stops the servo motor.

3.3 Layout Design within the Control Panel

3.3.1 Mounting environment

Mount the Motion controller system in the following environment conditions.

- (1) Ambient temperature is within the range of 0 to $55[^{\circ}C]$ (32 to $131[^{\circ}F]$).
- (2) Ambient humidity is within the range of 5 to 95[%]RH.
- (3) No condensing from sudden temperature changes
- (4) No corrosive or inflammable gas
- (5) There must not be a lot of conductible dust, iron filings, oil mist, or salt, organic solvents.
- (6) No direct sunlight
- (7) No strong electrical or magnetic fields
- (8) No direct vibrations or shocks on the Motion controller

3.3.2 Calculating heat generation by Motion controller

The ambient temperature inside the panel storing the Motion controller must be suppressed to an ambient temperature of 55°C(131°F) or less, which is specified for the Motion controller.

For the design of a heat releasing panel, it is necessary to know the average power consumption (heating value) of the devices and instruments stored inside.

Here the method of obtaining the average power consumption of system is described. From the power consumption, calculate a rise in ambient temperature inside the control panel.

How to calculate average power consumption

The power consuming parts of the Motion controller are roughly classified into six blocks as shown below.

(1) Power consumption of power supply module

The power conversion efficiency of the power supply module is approx. 70[%], while 30 [%] of the output power is consumed as heat. As a result, 3/7 of the output power is the power consumption.

Therefore the calculation formula is as follows.

WPW =
$$\frac{3}{7}$$
 × (I5V × 5) [W]

15V: Current consumption of 5VDC logic circuit of each module

(2) Total power consumption for 5VDC logic circuits of all modules (including CPU module)

The power consumption of the 5VDC output circuit section of the power supply module is the power consumption of each module (including the current consumption of the base unit).

$$W_{5V} = I_{5V} \times 5 [W]$$

(3) A total of 24VDC average power consumption of the output module The average power of the external 24VDC power is the total power consumption of each module.

W₂₄V = $I_{24}V \times 24 \times Simultaneous ON rate [W]$

I24V: Average current consumption of 24VDC power supply for internal consumption of the output module [A]

(Power consumption for simultaneous ON points)

(4) Average power consumption due to voltage drop in the output section of the output module

(Power consumption for simultaneous ON points)

Wout = Iout \times Vdrop \times Number of outputs \times Simultaneous ON rate [W]

IOUT : Output current (Current in actual use) [A] Vdrop : Voltage drop in each output module [V]

(5) Average power consumption of the input section of the input module (Power consumption for simultaneous ON points)

WIN = IIN \times E \times Number of input points \times Simultaneous ON rate [W]

IIN : Input current (Effective value for AC) [A]
E : Input voltage (Voltage in actual use) [V]

(6) Power consumption of the external power supply section of the intelligent function module

Ws =
$$15V \times 5 + 124V \times 24 + 1100V \times 100$$
 [W]

The total of the power consumption values calculated for each block is the power consumption of the overall Motion system

W = WPW + W5V + W24V + WOUT + WIN + WS [W]

From this overall power consumption [W], calculate the heating value and a rise in ambient temperature inside the panel.

The outline of the calculation formula for a rise in ambient temperature inside the panel is shown below.

$$T = \frac{W}{UA} [^{\circ}C]$$

W: Power consumption of overall Motion system (value obtained above)

A : Surface area inside the panel [m²]

POINT

If the temperature inside the panel has exceeded the specified range, it is recommended to mount a heat exchanger to the panel to lower the temperature. If a normal ventilating fan is used, dust will be sucked into the Motion controller together with the external air, and it may affect the performance of the Motion controller.

- (7) Example of average power consumption calculation (Q173DCPU use)
 - (a) System configuration

Q61P	Q03UD CPU	Q173D CPU	QX40	QX40	Q172D LX	Q172D EX	Q173D PX	QY10	QY10	Q38DB

(b) 5VDC current consumption of each module

Q03UDCPU (Note) : 0.33 [A]
Q173DCPU : 1.25 [A]
QX40 (Note) : 0.05 [A]
Q172DLX : 0.06 [A]
Q172DEX : 0.19 [A]

Q173DPX : 0.38 [A] (Note) : 5VDC internal current consumption of shared equipments with PLC might be changed. Be sure to refer to the MELSEC-Q series PLC Manuals.

(c) Power consumption of power module

WPW =
$$3/7 \times (0.33 + 1.25 + 0.05 + 0.05 + 0.06 + 0.19 + 0.38 + 0.43 + 0.43 + 0.23) \times 5 = 7.29$$
 [W]

(d) Total power consumption for 5VDC logic circuits of all modules $W_{5V} = (0.33 + 1.25 + 0.05 + 0.05 + 0.06 + 0.19 + 0.38 + 0.43 + 0.43 + 0.23) \times 5 = 17$ [W]

- (e) A total of 24VDC average power consumption of the output module $W_{24V} = 0$ [W]
- (f) Average power consumption due to voltage drop in the output section of the output module WOUT = 0 [W]
- (g) Average power consumption of the input section of the input module WIN = $0.004 \times 24 \times 32 \times 1 = 3.07$ [W]
- (h) Power consumption of the power supply section of the intelligent function module.

$$Ws = 0 [W]$$

(i) Power consumption of overall system

$$W = 7.29 + 17 + 0 + 0 + 3.07 + 0 = 27.36$$
 [W]

3.4 Design Checklist

At the worksite, copy the following table for use as a check sheet.

Item	Sub Item	Design confirmation		
		Number of axes	axes	
	M (° ODII II	Motion CPU module selection		
	Motion CPU module	Manual pulse generator	pcs.	
	selection	Incremental synchronous encoder	pcs.	
		Number of I/O points	points	
	PLC CPU module Number of I/O points		points	
	selection	PLC CPU module selection		
		Manual pulse generator	pcs.	
		Synchronous encoder	pcs.	
		Upper limit point	points	
		Lower limit point	points	
		STOP input point	points	
	Motion module	Proximity dog input point	points	
Module	selection	Speed switching input point	points	
selection		Tracking enable signal point	points	
		Q172DLX		
		Q172DEX	modules	
		Q173DPX	modules	
	Main base unit selection	Motion CPU module	modules	
		I/O module/intelligent function module installed to		
		main base unit	modules	
		Main base unit selection		
		Number of I/O modules/intelligent function	madulaa	
	Extension bear unit	modules installed to extension base unit	modules	
	Extension base unit and extension cable selection	Distance between Main base unit and extension	mm	
		base unit	(inch)	
	Selection	Extension base unit selection		
		Extension cable selection		
External	Fail-safe circuit design	Avoidance of operation failure at power-on		
circuit design	T all-sale circuit design	Avoidance of hazard at Motion controller failure		
		Conformance with general specifications such as ambient		
		temperature, humidity, dust, etc.		
		Total power consumption of base unit	r consumption of base unit	
Layout design	Module layout design	(Calculate the heating value)		
		Layout in consideration of clearances between enclosure's inside		
		walls, other structures and modules and heats generated by		
		modules within the control panel.		

MEMO		

4. INSTALLATION AND WIRING

4.1 Module Installation

4.1.1 Instructions for handling

∆ CAUTION

- Use the Motion controller in an environment that meets the general specifications contained in this manual. Using this Motion controller in an environment outside the range of the general specifications could result in electric shock, fire, operation failure, and damage to or deterioration of the product.
- While pressing the installation lever located at the bottom of module, insert the module fixing projection into the fixing hole in the base unit until it stops. Then, securely install the module with the fixing hole as a supporting point. Incorrect installation of the module can cause an operation failure, damage or drop.
 - When using the Motion controller in the environment of much vibration, tighten the module with a screw. Tighten the screw in the specified torque range. Under tightening may cause a drop, short circuit or operation failure. Over tightening may cause a drop, short circuit or operation failure due to damage to the screw or module.
- Be sure to connect the extension cable to connectors of the base unit correctly. After connecting, check them for looseness. Poor connections could cause an input or output failure.
- Completely turn off the externally supplied power used in the system before installation or removing the module. Not doing so could result in electric shock or damage to the product.
- Do not install/remove the module onto/from base unit or terminal block more than 50 times, after the first use of the product. Doing so may cause the module to malfunction due to poor contact of connector.
- Do not directly touch the module's conductive parts and electronic components. Doing so may cause an operation failure or damage the module.
- Lock the control panel and prevent access to those who are not certified to handle or install electric equipment.
- Do not touch the heat radiating fins of the Motion CPU module while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns. Remove the modules while paying attention.

This section describes instructions for handling the CPU, Motion, I/O, intelligent function and power supply modules, base units and so on.

- (1) Module, terminal block connectors and pin connectors are made of resin; do not drop them or subject them to strong impact.
- (2) Do not remove modules' printed circuit boards from the enclosure in order to avoid changes in operation.

(3) Tighten the module fixing screws and terminal block screws within the tightening torque range specified below.

Location of screw	Tightening torque range [N•m]
Motion CPU module fixing screw (M3 $ imes$ 13 screw)	0.36 to 0.48
Module fixing screw (M3 $ imes$ 12 screw)	0.36 to 0.48
I/O module terminal block screw (M3 screw)	0.42 to 0.58
I/O module terminal block fixing screw (M3.5 screw)	0.68 to 0.92
Power supply module terminal screw (M3.5 screw)	0.68 to 0.92


- (4) Be sure to install a power supply module on the main base unit and extension base unit. Even if the power supply module is not installed, when the I/O modules and intelligent function module installed on the base units are light load type, the modules may be operated. In this case, because a voltage becomes unstable, we cannot guarantee the operation.
- (5) When using an extension cable, keep it away from the main circuit cable (high voltage and large current).
 Keep a distance of 100mm (3.94inch) or more from the main circuit.
- (6) Be sure to fix a main base unit to the panel using mounting screws. Not doing so could result in vibration that may cause erroneous operation.

Mount a main base unit in the following procedure.


(a) Fit the two base unit top mounting screws into the enclosure.



(b) Place the right-hand side notch of the base unit onto the right-hand side screw.

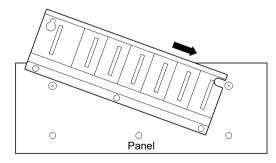

 (c) Place the left-hand side pear-shaped hole of the base unit onto the left-hand side screw.



- (d) Fit the mounting screws into the holes at the bottom of the base unit, and then retighten the all mounting screws.
- (Note): Mount a main base unit to a panel, with no module installed in the rightend slot.


Remove the base unit after removing the module from the right-end slot.

4.1.2 Instructions for mounting the base unit

When mounting the Motion controller to an enclosure or similar, fully consider its operability, maintainability and environmental resistance.

(1) Fitting dimensions

Fitting dimensions of each base unit are as follows:

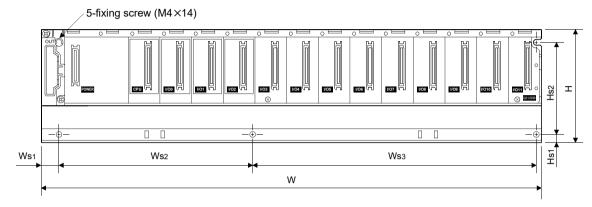


	Q35DB	Q38DB	Q312DB	Q63B	Q65B	Q68B	Q612B	Q52B	Q55B
W	245	328 (12.91)	439 (17.28)	189 (7.44)	245 (9.65)	328 (12.91)	439 (17.28)	106 (4.17)	189 (7.44)
Ws1					15.5 (0.61)				
Ws2 Ws3	224.5 ± 0.3 (8.84 ± 0.01) (Ws2 + Ws3)	170 ± 0.3 (6.69 ± 0.01) 138 ± 0.3 (5.43 ± 0.01)	170 ± 0.3 (6.69 ± 0.01) 249 ± 0.3 (9.80 ± 0.01)	167 ± 0.3 (6.57 ± 0.01) (Ws2 + Ws3)	222.5 ± 0.3 (8.76 ± 0.01) (Ws2 + Ws3)	190 ± 0.3 (7.48 ± 0.01) 116 ± 0.3 (4.57 ± 0.01)	190 ± 0.3 (7.48 ± 0.01) 227 ± 0.3 (8.93 ± 0.01)	83.5 ± 0.3 (3.29 ± 0.01) (Ws2 + Ws3)	167 ± 0.3 (6.57 ± 0.01) (Ws2 + Ws3)
Н	98 (3.86)								
Hs1	7 (0.28)								
Hs2	80 ± 0.3 (3.15 ± 0.01)								

[Unit: mm (inch)]

(2) Module mounting position

Keep the clearances shown below between the top/bottom faces of the module and other structures or parts to ensure good ventilation and facilitate module replacement.


(Note): It is impossible to mount the main base unit by DIN rail.

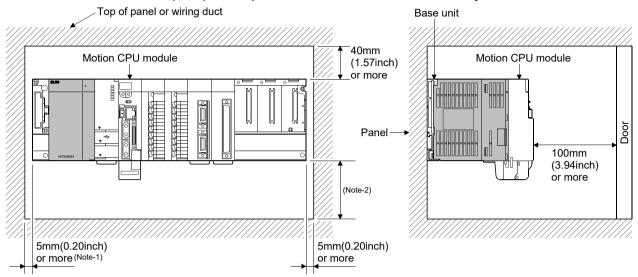


(Note-1): 20mm (0.79inch) or more when the adjacent module is not removed and the extension cable is connected. (Note-2): Q173DSCPU/Q172DSCPU use-----70mm (2.76inch) or more Q173DCPU(-S1)/Q172DCPU(-S1) use ----100mm (3.94inch) or more

(3) Module mounting orientation

(a) Mount the Motion controller in the orientation shown below to ensure good ventilation for heat release.

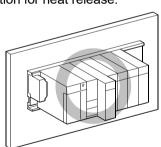

(b) Do not use it in either of the orientations shown below.

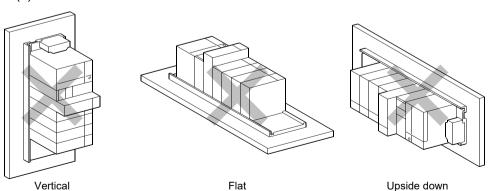

(4) Mounting surface

Mount the base unit on a flat surface. If the mounting surface is not even, this may strain the printed circuit boards and cause malfunctions.


(5) Mounting of unit in an area where the other devices are mounted Avoid mounting base unit in proximity to vibration sources such as large magnetic contractors and no-fuse circuit breakers; mount those on a separate panel or at a distance).


(6) Distances from the other devices

In order to avoid the effects of radiated noise and heat, provide the clearances indicated below between the Motion controller and devices that generate noise or heat (contactors and relays, etc.).

• In front of Motion controller : 100mm (3.94inch) or more

• On the right and left of Motion controller: 50mm (1.97inch) or more

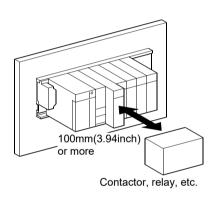

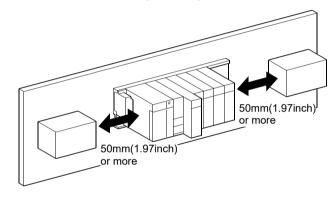


4.1.3 Installation and removal of module

This section describes how to install and remove a power supply module, PLC CPU module, Motion CPU module, Motion module, I/O module, intelligent function module or another module to and from the base unit.

(1) Installation and removal of the module from base unit

(a) Installation

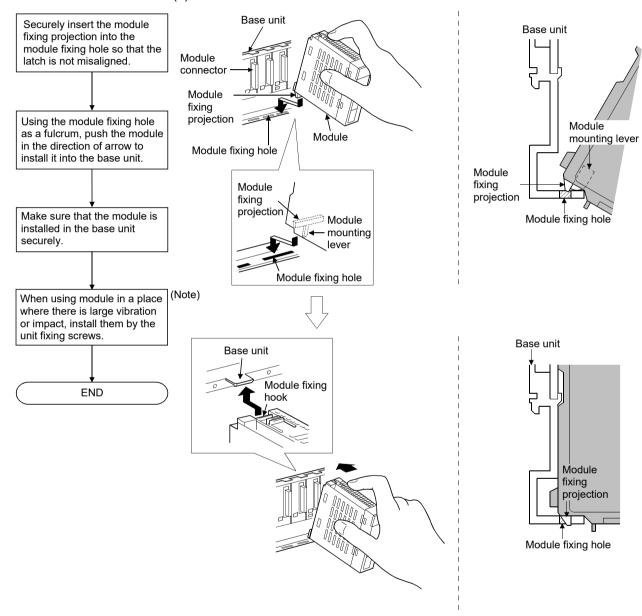

(Note): Screw the Motion CPU module to the main base unit.


POINTS

- (1) When installing the module, always insert the module fixing projection into the module fixing hole of the base unit.
 - At that time, securely insert the module fixing projection so that it does not come off from the module fixing hole.
 - If the module is forcibly installed without the latch being inserted, the module connector and module will be damaged.
- (2) When using the modules in a place where there is large vibration or impact, screw the module to the base unit.
 - Module fixing screw: M3×12 (user-prepared)
 - Screw the Motion CPU module to the main base unit using supplied fixing screws ($M3 \times 13$).
- (3) Do not install/remove the module onto/from base unit or terminal block more than 50 times, after the first use of the product. Doing so may cause the module to malfunction due to poor contact of connector.

▲CAUTION

- While pressing the installation lever located at the bottom of module, insert the module fixing projection into the fixing hole in the base unit until it stops. Then, securely install the module with the fixing hole as a supporting point. Incorrect installation of the module can cause an operation failure, damage or drop.
 - When using the Motion controller in the environment of much vibration, tighten the module with a screw.
 - Tighten the screw in the specified torque range. Under tightening may cause a drop, short circuit or operation failure. Over tightening may cause a drop, short circuit or operation failure due to damage to the screw or module.

(b) Removal

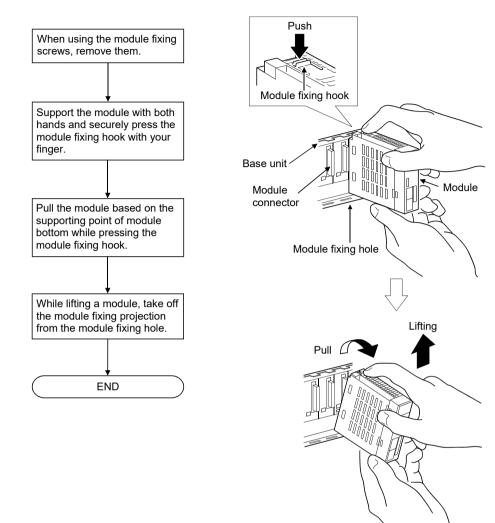

POINT

When the module fixing screw is used, always remove the module by removing the module fixing screw and then taking the module fixing projection off the module fixing hole of the base unit.

Attempting to remove the module by force may damage the module fixing projection.

∆CAUTION

Do not touch the heat radiating fins of the Motion CPU module while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.

Remove the modules while paying attention.

4.1.4 Instructions for mounting of the battery holder unit

When mounting the battery holder unit (Q170DBATC) to an enclosure or similar, fully consider its mounting position and orientation.

(1) Module mounting position


Mount the battery holder unit within 50cm(1.64ft.) or less (Battery cable length: 50cm(1.64ft.)) from the Motion controller.

(2) Mounting surface

Mount the battery holder unit on a flat surface.

(3) Module mounting orientation

Do not mount the battery holder unit downward. Doing so may lead to battery liquid to leak at damage to the battery.

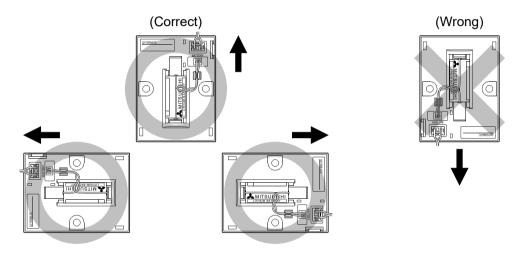


4.2 Connection and Disconnection of Cable

4.2.1 SSCNETⅢ cable

(1) Precautions for handling the SSCNETⅢ cable

 - Do not stamp the SSCNET**Ⅲ** cable.
- When laying the SSCNETI cable, be sure to secure the minimum cable bend radius or more. If the bend radius is less than the minimum cable bend radius, it may cause malfunctions due to characteristic deterioration, wire breakage, etc.
- For connection and disconnection of SSCNETI cable, hold surely a tab of cable connector.



(2) Connection of SSCNETⅢ cable

- For connection of SSCNETI cable to the Motion CPU module, connect it to the SSCNETI connector CN1 or CN2 of Motion CPU module while holding a tab of SSCNETI cable connector. Be sure to insert it until it clicks.
- If the cord tip for the SSCNET acable is dirty, optical transmission is interrupted and it may cause malfunctions. If it becomes dirty, wipe with a bonded textile, etc. Do not use solvent such as alcohol.

(3) Disconnection of SSCNETⅢ cable

- For disconnection of SSCNETII cable, pull out it while holding a tab of SSCNETII cable connector or the connector.
- After disconnection of SSCNETI cable, be sure to put a cap (attached to Motion CPU module or servo amplifier) to the Motion CPU module and servo amplifier.
- For SSCNET**Ⅲ** cable, attach the tube for protection optical cord's end face on the end of connector.

(4) Precautions of SSCNETⅢ cable wiring

SSCNETIII cable is made from optical fiber. If optical fiber is added a power such as a major shock, lateral pressure, haul, sudden bending or twist, its inside distorts or breaks, and optical transmission will not be available. Especially, as optical fiber for MR-J3BUS M and MR-J3BUS M-A is made of synthetic resin, it melts down if being left near the fire or high temperature. Therefore, do not make it touched the part, which becomes high temperature, such as radiator or regenerative option of servo amplifier, or servo motor.

Be sure to use optical fiber within the range of operating temperature described in this manual.

Read described item of this section carefully and handle it with caution.

(a) Minimum bend radius

Make sure to lay the cable with greater radius than the minimum bend radius. Do not press the cable to edges of equipment or others. For SSCNETIII cable, the appropriate length should be selected with due consideration for the dimensions and arrangement of Motion controller and servo amplifier. When closing the door of control panel, pay careful attention for avoiding the case that SSCNETIII cable is hold down by the door and the cable bend becomes smaller than the minimum bend radius.

Model name of SSCNETⅢ cable	Minimum bend radius[mm(inch)]
MR-J3BUS□M	25(0.98)
MD IODIIOEM A	Enforced covering cord : 50 (1.97)
MR-J3BUS□M-A	Cord : 25 (0.98)
MD IODIIOEM D	Enforced covering cord : 50 (1.97)
MR-J3BUS□M-B	Cord : 30 (1.18)

(b) Tension

If tension is added on the SSCNETII cable, the increase of transmission loss occurs because of external force which concentrates on the fixing part of SSCNETII cable or the connecting part of SSCNETII connector. At worst, the breakage of SSCNETII cable or damage of SSCNETII connector may occur. For cable laying, handle without putting forced tension.

Model name of SSCNETⅢ cable		Tension strength[N]
MD IODUOEM	□=015	70
MR-J3BUS□M	□=03 to 3	140
MR-J3BUS□M-A		420 (Enforced covering cord)
MR-J3BUS□M-B		980 (Enforced covering cord)

(c) Lateral pressure

If lateral pressure is added on the SSCNETII cable, the cable itself distorts, internal optical fiber gets stressed, and then transmission loss will increase. At worst, the breakage of SSCNETII cable may occur. As the same condition also occurs at cable laying, do not tighten up SSCNETII cable with a thing such as nylon band (TY-RAP). Do not trample it down or tuck it down with the door of control panel or

(d) Twisting

others.

If SSCNETII cable is twisted, it will become the same stress added condition as when local lateral pressure or bend is added. Consequently, transmission loss increases, and the breakage of SSCNETII cable may occur at worst.


(e) Disposal

When incinerating optical cable (cord) used for SSCNETII cable, hydrogen fluoride gas or hydrogen chloride gas which is corrosive and harmful may be generated. For disposal of SSCNETII cable, request for specialized industrial waste disposal services who has incineration facility for disposing hydrogen fluoride gas or hydrogen chloride gas.

(f) Wiring process of SSCNETⅢ cable

Put the SSCNETI cable in the duct or fix the cable at the closest part to the Motion CPU module with bundle material in order to prevent SSCNETI cable from putting its own weight on SSCNETI connector. Leave the following space for wiring.

Putting in the duct

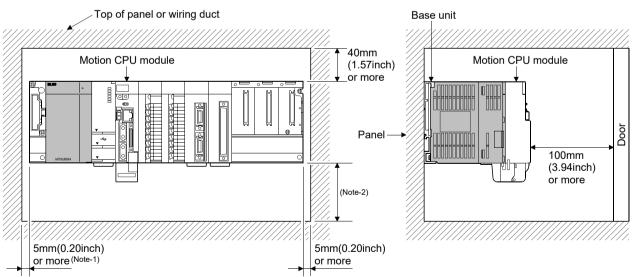


(Note-1): 20mm (0.79inch) or more when the adjacent module is not removed and the extension cable is connected. (Note-2): Q173DSCPU/Q172DSCPU use-----70mm (2.76inch) or more Q173DCPU(-S1)/Q172DCPU(-S1) use ----100mm (3.94inch) or more

• Bundle fixing

Optical cord should be given loose slack to avoid from becoming smaller than the minimum bend radius, and it should not be twisted. When bundling the cable, fix and hold it in position by using cushioning such as sponge or rubber which does not contain migratable plasticizing.

If using adhesive tape for bundling the cable, fire resistant acetate cloth adhesive tape 570F (Teraoka Seisakusho Co., Ltd) is recommended.

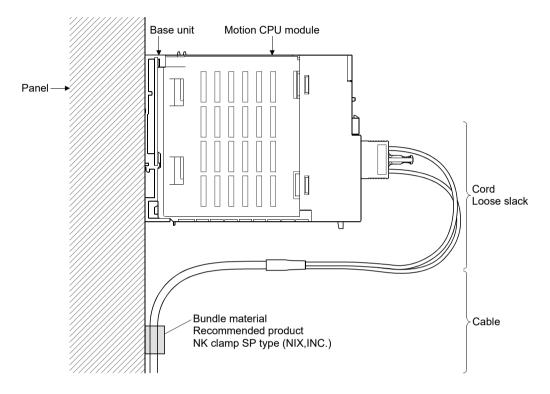

POINTS

 
- (1) Be sure to connect SSCNETIII cable with the above connector. If the connection is mistaken, between the Motion CPU module and servo amplifier cannot be communicated.
- (2) Forced removal of the SSCNETIII cable from the Motion CPU module will damage the Motion CPU modules and SSCNETIII cables.
- (3) After removal of the SSCNETIII cable, be sure to put a cap on the SSCNETIII connector. Otherwise, adhesion of dirt deteriorates in characteristic and it may cause malfunctions.
- (4) Do not remove the SSCNETIII cable while turning on the power supply of Multiple CPU system and servo amplifier.

 Do not see directly the light generated from SSCNETIII connector of Motion CPU module or servo amplifier and the end of SSCNETIII cable. When the light gets into eye, may feel something is wrong for eye. (The light source of SSCNETIII cable complies with class1 defined in JISC6802 or IEC60825-1.)
- (5) If the SSCNETIII cable is added a power such as a major shock, lateral pressure, haul, sudden bending or twist, its inside distorts or brakes, and optical transmission will not be available.
 Be sure to take care enough so that the short SSCNETIII cable is added a twist easily.
- (6) Be sure to use the SSCNETⅢ cable within the range of operating temperature described in this manual. Especially, as optical fiber for MR-J3BUS□M and MR-J3BUS□M-A are made of synthetic resin, it melts down if being left near the fire or high temperature. Therefore, do not make it touched the part which becomes high temperature, such as radiator or regenerative option of servo amplifier, or servo motor.
- (7) When laying the SSCNETIII cable, be sure to secure the minimum cable bend radius or more.
- (8) Put the SSCNETIII cable in the duct or fix the cable at the closest part to the Motion CPU module with bundle material in order to prevent SSCNETIII cable from putting its own weight on SSCNETIII connector.

 When laying cable, the optical cord should be given loose slack to avoid from becoming smaller than the minimum bend radius, and it should not be twisted. When bundling the cable, fix and hold it in position by using cushioning such as sponge or rubber which does not contain migratable plasticizing. If using adhesive tape for bundling the cable, fire resistant acetate cloth adhesive tape 570F (Teraoka Seisakusho Co., Ltd) is recommended.

POINTS

(9) Migrating plasticizer is used for vinyl tape. Keep the MR-J3BUS□M, and MR-J3BUS□M-A cables away from vinyl tape because the optical characteristic may be affected.



SSCNETⅢ cable	Cord	Cable
MR-J3BUS□M	Δ	
MR-J3BUS□M-A	Δ	Δ
MR-J3BUS□M-B	0	0

- O: Normally, cable is not affected by plasticizer.
- △: Phthalate ester plasticizer such as DBP and DOP may affect optical characteristic of cable.


Generally, soft polyvinyl chloride (PVC), polyethylene resin (PE) and fluorine resin contain non-migrating plasticizer and they do not affect the optical characteristic of SSCNETⅢ cable. However, some wire sheaths and cable ties, which contain migrating plasticizer (phthalate ester), may affect MR-J3BUS□M and MR-J3BUS□M-A cables (made of plastic). In addition, MR-J3BUS□M-B cable (made of quartz glass) is not affected by plasticizer.

- (10) If the adhesion of solvent and oil to the cord part of SSCNETIII cable may lower the optical characteristic and machine characteristic. If it is used such an environment, be sure to do the protection measures to the cord part.
- (11) When keeping the Motion CPU or servo amplifier, be sure to put on a cap to connector part so that a dirt should not adhere to the end of SSCNETIII connector.
- (12) SSCNETⅢ connector to connect the SSCNETⅢ cable is put a cap to protect light device inside connector from dust. For this reason, do not remove a cap until just before connecting SSCNETⅢ cable. Then, when removing SSCNETⅢ cable, make sure to put a cap.
- (13) Keep the cap and the tube for protecting light cord end of SSCNETII cable in a plastic bag with a zipper of SSCNETII cable to prevent them from becoming dirty.
- (14) When exchanging the Motion controller or servo amplifier, make sure to put a cap on SSCNETIII connector. When asking repair of Motion controller or servo amplifier for some troubles, make also sure to put a cap on SSCNETIII connector. When the connector is not put a cap, the light device may be damaged at the transit. In this case, exchange and repair of light device is required.

4.2.2 Battery cable QD

(1) Handling the battery cable

- (a) Precautions for handling the battery cable
 - For connection or removal of the battery cable, do it surely while holding a connector.

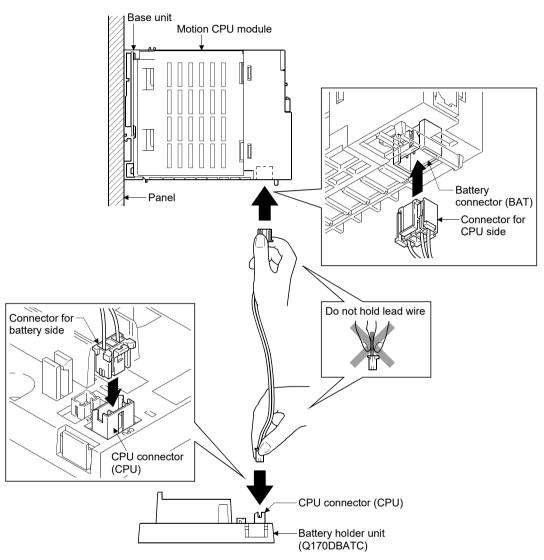

(b) Connection of the battery cable

- For connection of a connector to the Motion CPU module, connect it surely to the battery connector (BAT) of Motion CPU module while holding a connector. Be sure to insert it until it clicks.
- For connection of a connector to the battery holder unit, connect it surely to the CPU connector (CPU) of battery holder while holding a connector. Be sure to insert it until it clicks

(c) Removal of the battery cable

• For removal of the battery cable, pull out it while holding a connector.

 
POINT

- (1) Forcibly removal the battery cable from the battery holder unit will damage the battery holder unit, battery cable.
- (2) As for the battery cable, the shape of connector is different on Motion CPU side and battery holder side. Be sure to connect after confirming shape.
- (3) The programs, parameters, motion devices (#), latch range devices and absolute position data of SRAM built-in Motion CPU module are not backed up if the battery connector is not connect correctly.

4.2.3 Forced stop input cable

(1) Precautions for handling the forced stop input cable

• For connection or removal of the forced stop input cable, do it surely while holding a forced stop input connector.



(2) Connection of the forced stop input cable

• For connection of a forced stop input cable to the Motion CPU module, connect it surely to a forced stop input connector of Motion CPU module while holding a connector. Be sure to insert it until it clicks.

(3) Removal of the forced stop input cable

• For removal of the forced stop input cable, push a tab and pull out the cable while holding a connector.

POINTS

The following handling will damage the Motion CPU module or forced stop input cable


- Forced removal of the forced stop input cable from the CPU module.
- The forced stop input cable is twined other cables.
- · Excessive power is applied at cable laying.

Wire the cable correctly.

4.2.4 Internal I/F connector cable QDS(

(1) Precautions on use of Internal I/F connector cable


When using the modules in a place where there is large vibration or impact, fix
the internal I/F connector cable to the control panel.

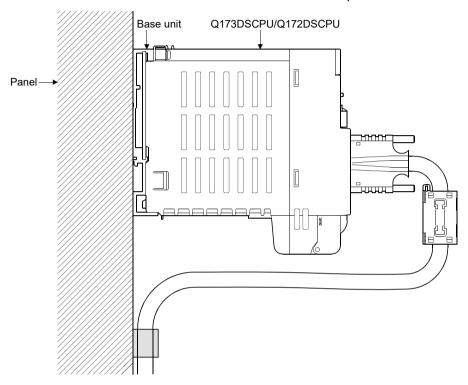

4.3 Mounting of Battery

(1) Handling the battery lead wire


- (a) Q173DSCPU/Q172DSCPU
 - 1) Precautions for mounting the battery
 - Set the battery to the battery holder correctly after confirming "+" side and "-" side for the battery.
 - 2) Precautions for handling the battery lead wire
 - For connection or removal of the battery lead wire, do it surely while holding a battery lead connector.

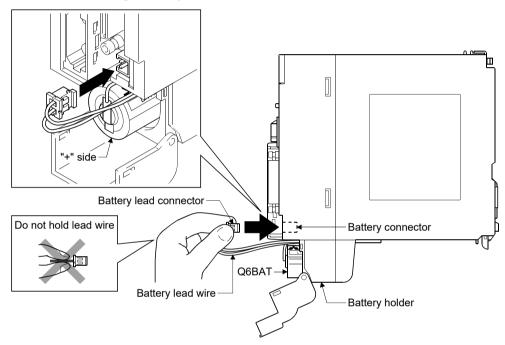

- 3) Connection of the battery lead wire
 - For connection of a battery (Q6BAT), connect it surely to a battery connector while holding a battery lead connector. Be sure to insert it until it clicks.
- 4) Removal of the battery lead wire
 - For removal of the battery lead wire, pull out it while holding a battery lead connector.

(b) Q173DCPU(-S1)/Q172DCPU(-S1)

- 1) Precautions for handling the battery lead wire
 - For connection or removal of the battery lead wire, do it surely while holding a battery lead connector.

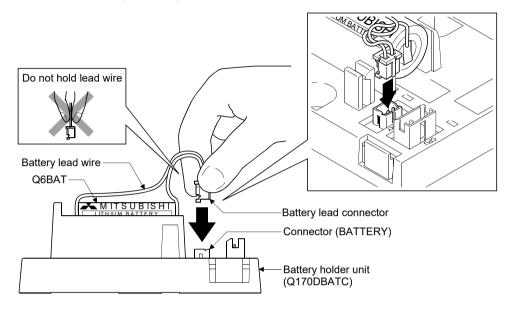

- 2) Connection of the battery lead wire
 - For connection of a battery (Q6BAT) to the battery holder unit, connect it surely to a connector (BATTERY) of battery holder unit while holding a battery lead connector. Be sure to insert it until it clicks.
- 3) Removal of the battery lead wire
 - For removal of the battery lead wire, pull out it while holding a battery lead connector.

POINT

- (1) Forced removal the battery lead wire will damage the battery connector, battery lead wire.
- (2) The programs, parameters, motion devices (#), latch range devices and absolute position data of SRAM built-in Motion CPU module are not backed up if the battery connector is not connect correctly.

4.4 Mounting of Serial Absolute Synchronous Encoder

This section describes precautions for handling the serial absolute synchronous encoder.


(1) If the serial absolute synchronous encoder is linked to a chain, timing belt, or gears, the machine rotating shaft should be supported by a separate bearing and connected to serial absolute synchronous encoder through a coupling. Ensure that excessive force (greater than the permitted shaft load) is not applied to the shaft of serial absolute synchronous encoder.

Table 4.1 Permitted Shaft Loads Radial direction

Up to 19.6MN

Thrust direction

Up to 9.8N

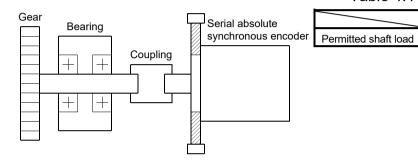

(2) Excessive load is applied to the shaft of serial absolute synchronous encoder by the large mounting errors in eccentricity and angle of deviation. As a result, it might damage the machine or shorten extremely the life. Minimize loads applied to the shaft such that they make within the permitted shaft load range.

▲CAUTION

- The serial absolute synchronous encoder contains a glass disk and precision mechanism. Take care when handling it. The encoder performance may deteriorate if it is dropped or subjected to shocks or vibration exceeding the prescribed limits.
- Do not connect the shaft of serial absolute synchronous encoder directly to machine side rotary shaft. Always after connecting the shaft of serial absolute synchronous encoder to another bearing once, connect the shaft through a flexible coupling.
- Never hit the end of the serial absolute synchronous encoder coupling shaft with a hammer when connecting the coupling to it. The large loads applied to serial absolute synchronous encoder will damage it.
- The serial absolute synchronous encoder uses optical parts. Mount it in an atmosphere where there are extremely few water drops and little oil and dust.
- When installing a serial absolute synchronous encoder in any place where it is exposed to water and/or oil, provide protection from oil and water, e.g. mount a cover. In addition, run the cable downward to prevent oil and/or water from travelling on the cable into the serial absolute synchronous encoder. When it is necessary to mount the serial absolute synchronous encoder vertically or obliquely, set up a trap on the cable.
- Use the serial absolute synchronous encoder within the specified temperature range (-5 to 55°C (23 to 131°F)).

4.5 Wiring

4.5.1 Instructions for wiring

⚠DANGER

- Completely turn off the externally supplied power used in the system before installation or placing wiring. Not doing so could result in electric shock or damage to the product.
- When turning on the power supply or operating the module after wiring, be sure that the module's terminal covers are correctly attached. Not attaching the terminal cover could result in electric shock.

∆ CAUTION

- Be sure to ground of the earth terminal FG and LG. Not doing so could result in electric shock or operation failure. (Ground resistance: 100Ω or less)
- When wiring in the Motion controller, be sure that it is done correctly by checking the product's rated voltage and the terminal layout. Connecting a power supply that is different from the rating or incorrectly wiring the product could result in fire or damage.
- External connections shall be crimped or pressure welded with the specified tools, or correctly soldered. Imperfect connections could result in short circuit, fire, or operation failure.
- Tighten the terminal screws within the specified torque range. If the terminal screws are loose, it could result in short circuit, fire, or operation failure. Tightening the terminal screws too far may cause damages to the screws and/or the module, resulting in drop, short circuit, or operation failure.
- Be sure there are no foreign matters such as sawdust or wiring debris inside the module. Such debris could cause fire, damage, or operation failure.
- The module has an ingress prevention label on its top to prevent foreign matter, such as wiring debris, from entering the module during wiring.

Do not remove this label during wiring.

Before starting system operation, be sure to remove this label because of heat dissipation.

This section describes instructions for the wiring of the power supply.

Refer to the "7 EMC directives" for grounding method and measure against noise.

(1) Power supply wiring

(a) 100VAC, 200VAC and 24VDC wires should be twisted as dense as possible respectively. Connect the modules with the shortest distance.

Also, to reduce the voltage drop to the minimum, use the thickest wires (Up to 2.0mm²) possible.

Use the wires of the following core size for wiring.

Application	Recommended core size	AWG ^(Note-1)
100VAC, 200VAC, 24VDC wires	2.0mm ² or more	AWG14 or less
I/O equipment	0.3 to 0.75mm ² (Outside diameter 2.8mm (0.11inch) or less)	AWG18 to AWG22
Ground wire	2.0mm ² or more	AWG14 or less

(Note-1): AWG stands for "American Wire Gauge". AWG is a unit of the thickness of conducting wire.


(b) Do not bundle the 100VAC and 24VDC wires with, or run them close to, the main circuit (high voltage, large current) and I/O signal lines (including common line).

Reserve a distance of at least 100mm (3.94inch) from adjacent wires.

(c) Momentary power failure may be detected or the Multiple CPU system may be reset due to surge caused by lightning.

As measures against surge caused by lightning, connect a surge absorber for lightning as shown below.

Using the surge absorber for lightning can reduce the influence of lightning.

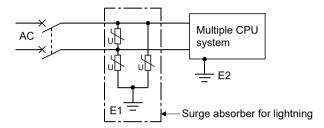


POINTS

- Separate the ground of the surge absorber for lightning (E1) from that of the Multiple CPU system (E2).
- (2) Select a surge absorber for lightning whose power supply voltage does not exceed the maximum allowable circuit voltage even at the time of maximum power supply voltage elevation.

(2) Wiring of I/O equipment

 - (a) Insulation-sleeved crimping terminals cannot be used with the terminal block. It is recommended to cover the wire connections of the crimping terminals with mark or insulation tubes.
- (b) The wires used for connection to the terminal block should be 0.3 to 0.75mm² in core and 2.8mm (0.11inch) or less in outside diameter.
- (c) Run the input and output lines away from each other.
- (d) When the wiring cannot be run away from the main circuit and power lines, use a batch-shielded cable and ground it on the Motion controller side. In some cases, ground it on the opposite side.



- (e) Where wiring runs through piping, ground the piping without fail.
- (f) Run the 24VDC input line away from the 100VAC and 200VAC lines.


- (g) Wiring of 200m (656.17ft.) or longer distance will give rise to leakage currents due to the line capacity, resulting in a fault. Refer to the troubleshooting chapter of the I/O Module User's Manual.
- (h) As a countermeasure against the power surge due to lightning, separate the AC wiring and DC wiring and connect a surge absorber for lightning (Refer to Section 4.5.1(1)).

Failure to do so increases the risk of I/O device failure due to lightning.

(3) Grounding

For grounding, follow the steps (a) to (c) shown below.


- (a) Use a dedicated grounding wire as far as possible. (Ground resistance: 100Ω or less)
- (b) When a dedicated grounding cannot be performed, use (2) Common Grounding shown below.

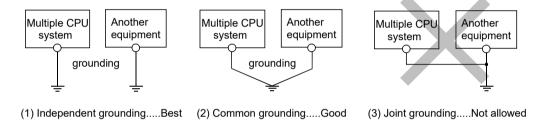

(c) For grounding a cable, use the cable of 2mm² or more.
Position the ground-contact point as nearly to the Multiple CPU system as possible, and reduce the length of the grounding cable as much as possible.

4.5.2 Connecting to the power supply module

The following diagram shows the wiring example of power lines, grounding lines, etc. to the main and extension base units.

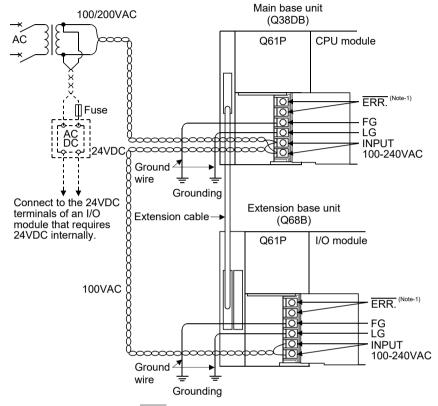


(Note-1): The operation of the $\overline{\mathsf{ERR}}$ terminal is as follows.

- <When the power supply module is installed on the main base unit>
 The terminal turns OFF (opens) when the AC power is not input, a CPU module
- The terminal turns OFF (opens) when the AC power is not input, a CPU module stop error (including a reset) occurs, or the fuse of the power supply module is blown.
- <When the power supply module is installed on the extension base unit> The terminal is always OFF(open).

POINT

(1) Use the thickest possible (up to 2mm²) wires for the 100/200VAC and 24VDC power cables. Be sure to twist these wires starting at the connection terminals. For wiring a terminal block, be sure to use a solderless terminal. To prevent a short circuit should any screws loosen, use solderless terminals with insulation sleeves of 0.8mm (0.03inch) or less.

 Also, only two solderless terminals can be connected per terminal block.



(2) Ensure that the earth terminals LG and FG are grounded.

(Ground resistance : 100Ω or less)

If not, the programmable controller may become susceptible to noise. Since the LG terminal has a half of the input voltage, touching this terminal may result in an electric shock.

(3) No system error can be detected by the ERR. terminal of an extension base unit. (The ERR. terminal is always set off.)

5. START-UP PROCEDURES


5.1 Check Items Before Start-up


Table 5.1 Check items before start-up


Part name	Confirmation Items	Check	Reference
	(1) Check that the main base unit is Q35DB, Q38DB or Q312DB.		2.5.3
	(2) Check that the model name of module is correct.		2.3
	(3) Check that the installation order is correct.		2.1.4
	(4) Check that the damage for installed modules.		
	(5) Check that the modules are installed correctly.		4.1.3
Main base unit/	(6) Check for looseness, rattling or distorted installation.		4.4.4
Extension base unit	(7) Check that the module fixing screw tightening torque is as specified.		4.1.1
	(8) Check that the total I/O points of I/O modules and intelligent function modules do not exceed the I/O points of the CPU module.		Refer to the "Q173D(S)CPU/ Q172D(S)CPU Motion controller Programming Manual(COMMON)"
	(1) Check that the model name of power supply modules is correct.		2.5.2
	(2) Check that the wire sizes of cables are correct.		4.5.1
	(3) Check that the power line is wired correctly.		4.5.1
	(4) Check that FG and LG are wired correctly.		4.5.2
	(5) Check that the terminal screws are tightened correctly.		
Power supply module	(6) Check that the terminal screws are tightening torque is as specified.		4.1.1
	(7) Check that the 100VAC, 200VAC and 24VDC wires are twisted as		4.5.1
	closely as possible respectively and run in the shortest distance.		
	(8) Check that cables are not binded with 100VAC, 200VAC and		4.5.1
	24VDC wires or run close to the power wires.		
	(9) Check the grounding of the earth terminal FG and LG.		4.5.2
DLO ODLI was dala	(1) Check that the model name of PLC CPU modules is correct.		2.1.4 2.3
PLC CPU module	(2) Check that the modules are installed to CPU slot or I/O slot 0 to 2 of		2.1.4
	the main base unit.		
	(1) Check that the Q173HCPU(-T)/Q172HCPU(-T)/Q173CPUN(-T)/Q173CPUN(-T)/Q173CPUN(-T)/Q173CPU/Q172CPU is not used.		
	(2) Check that the modules are installed to I/O slot 0 to 2 of the main base unit.		2.1.4
	(3) Check that the module fixing screws are tightened correctly.	П	4.1.1
Q173D(S)CPU/	(4) Check that the forced stop input is wired correctly.		3.2
Q172D(S)CPU	(5) Check that the battery is installed.		5.2
Motion CPU module	(6) Check that the battery cables are connected correctly.		4.2.2
	(7) Check that the battery lead connector is connected correctly.		4.3
	(8) Check that the built-in interface in Motion CPU is wired correctly.		
	(9) Check that the manual pulse generator/incremental synchronous encoder is wired correctly.		2.5.1


Part name	Confirmation Items	Check	Reference	
	(1) Check that the Q172DEX is installed to I/O slot 3 to 11 of the main base unit.		2.1.4	
	(2) Check that the Q172DLX/Q173DPX is installed to I/O slot 3 to 11 when installation to the main base unit.		2.1.4	
Q172DLX Servo external signals interface module/ Q172DEX synchronous	(3) Check that the installation position of modules correspond to the		Refer to the "Q173D(S)CPU/ Q172D(S)CPU Motion	
encoder interface module/ Q173DPX Manual pulse	system setting.		controller Programming Manual (COMMON)".	
generator interface module	(4) Check that the connection with external equipments is correct.		2.5.4 2.5.5 2.5.6	
	(5) Check that the battery is connected to connector of Q172DEX correctly.		6.5.2	
	(1) Check that the wire size of cable is correct.			
	(2) Check that the terminal block screws are tightened correctly.		Defer to the I/O Medule	
	(3) Check that the cables connected to each terminal of terminal block correspond to the signal names.		Refer to the I/O Module Type Building Block User's Manual	
I/O module	(4) Check that the external power supply are connected correctly. (24VDC, 5VDC)		Osci s Maridai	
	(5) Check that the 100VAC, 200VAC and 24VDC wires are twisted as closely as possible respectively and run in the shortest distance.			
	(6) Check that the 100VAC, 200VAC and 24VDC wires are not bind the cable together with and run close to the I/O wires.		4.5.1	
	(7) Check that the I/O wires are wired correctly.			
	(1) Check that the model name of SSCNETⅢ cables is correct. (2) Check that the connecting position for connector of SSCNETⅢ		2.5.9	
	cables are correct. (3) Check that the SSCNETII cables are connected correctly.			
SSCNETⅢ cable	(4) Check for looseness, rattling or distorted connection.			
	(5) Check that the minimum bend radius or more secured.		4.2.1	
	(6) Check that the MR-J3BUS□M or MR-J3BUS□M-A do not come in contact with wires/cables that use materials where the plasticizing material is contained.		4.2.1	
	(1) Check that the lead connector of Q6BAT is connected to the connector (BATTERY) correctly.		4.3	
Battery holder unit (Q170DBATC)	(2) Check that the mounting orientation is correct. (Do not mount it downward.)		4.1.4	
QD	(3) Check that the battery cable is connected correctly.		4.2.2	
	(4) Check for looseness, rattling or distorted mounting.		444	
	(5) Check that the module fixing screw tightening torque is as specified.		4.1.1	
Serial absolute	(1) Check that the amplitude, eccentricity and axial displacement relative to the machine side rotary shaft are within the permissible values.		4.4	
synchronous encoder (Q171ENC-W8/Q170ENC)	(2) Check that a flexible coupling is used for coupling with the machine side rotary shaft.			
	(3) Check that the damage for units.			
	(4) Check that the forcible impact is given on modules.		4.4	

5.2 Start-up Adjustment Procedure

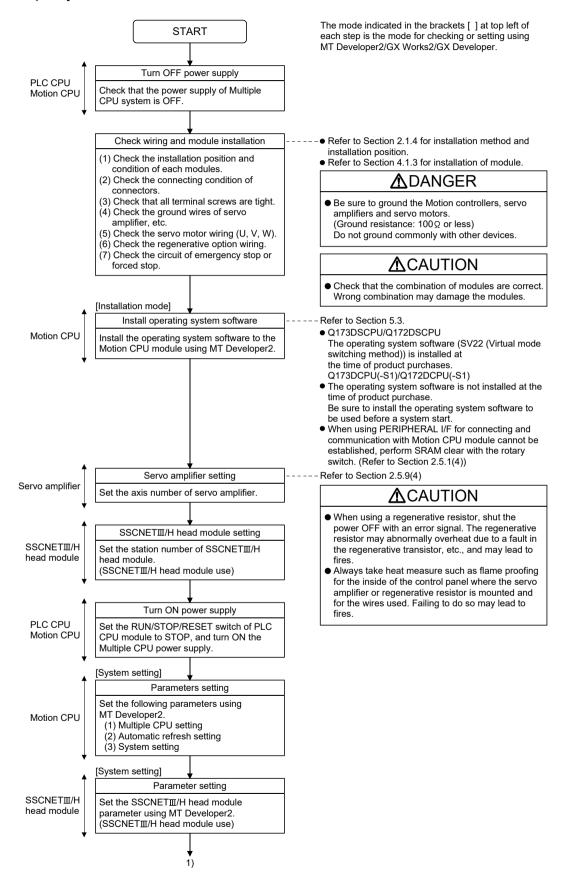

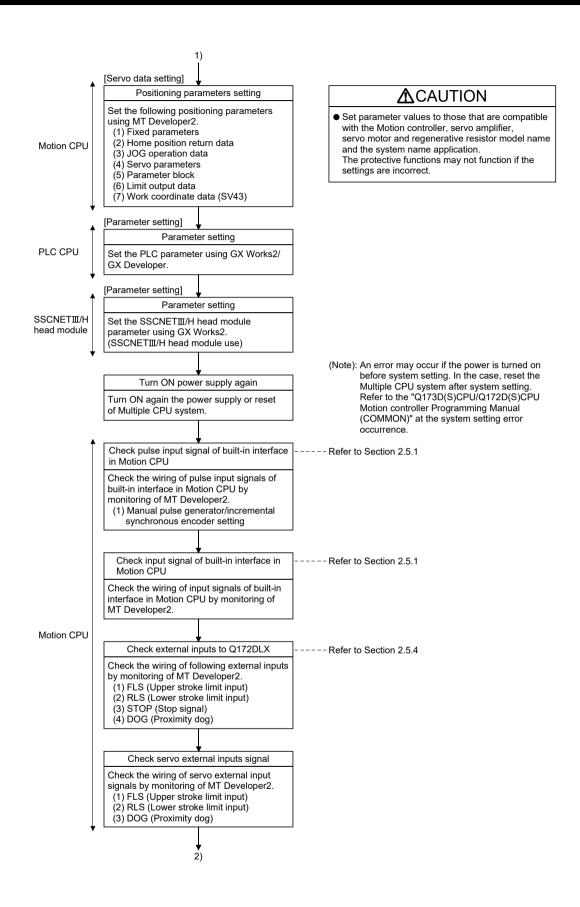

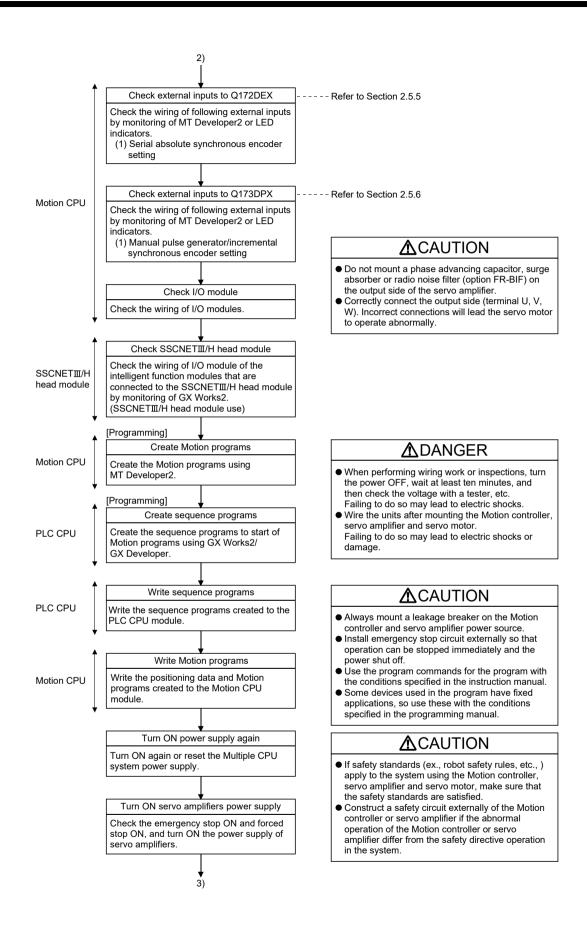

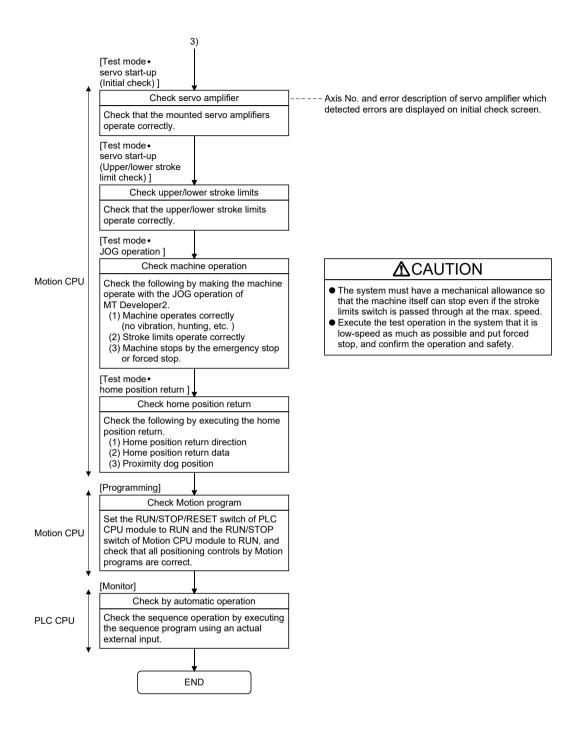


POINTS

- (1) Make note of servo motor module names before the servo motor is mounted on a machine. The servo motor rating plate may not be visible after the servo motor is mounted.
- (2) When the servo amplifier, servo motor is first turned on, check the operation before the servo motor is mounted on a machine to avoid an unexpected accidents such as machine breakage.

5.3 Operating System Software Installation Procedure

The operating system software must be installed to the Motion CPU module by using the MT Developer2.

The installation procedure is shown below.

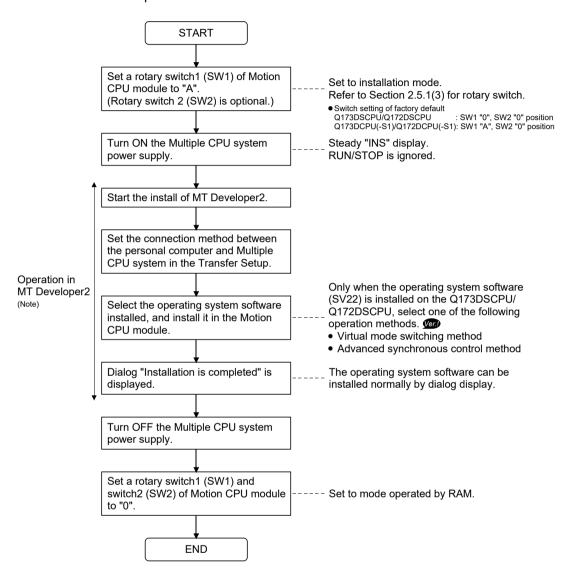

(Note): Install the operating system software by screen of MT Developer2. Refer to help of MT Developer2 for details.

Ver.!: Refer to Section 1.3 for the software version that supports this function.

POINTS

- (1) When the software security key function is used in Q173DSCPU/Q172DSCPU, if the software security key of the operating system software already installed in Motion CPU is different from that embedded to the operating system software to be installed, "Clear all" is executed at installation. It is recommended to backup the data in advance using MT Developer2.
- (2) State of the Motion CPU module at the time of product purchase is shown
 - Q173DSCPU/Q172DSCPU

The operating system software (SV22 (Virtual mode switching method)) is installed at the time of product purchase.

Q173DCPU(-S1)/Q172DCPU(-S1)

The operating system software is not installed at the time of product

Be sure to install the operating system software to be used before a system

- (3) Be sure to turn power supply OFF before changing rotary switch setting.
- (4) Even if the operating system software is installed, the programs, parameters and absolute position data written in the Motion CPU module not rewritten.
- (5) Do not do any of the following while installing operation system software. Doing so could result damage the Motion CPU module.
 - Turn OFF the power supply of Multiple CPU system.
 - Change the RUN/STOP/RESET switch of PLC CPU module to RESET.
 - Turn OFF the power supply of the personal computer.
 - Pull out the personal computer's communication cable.
- (6) When installing the operating system software to several Motion CPU modules on the same base unit, be sure to set all Motion CPU module s that have not been installed to installation mode (set rotary switch1 (SW1) to "A" position.). (Note): If the power supply is turned ON without setting all Motion CPU modules that have not been installed to installation mode, it does not operate normally.

Be sure to install the operating system software before system start.

(7) Only when the operating system software (SV22) is installed on the Q173DSCPU/Q172DSCPU, select one of the following operation methods.



- Virtual mode switching method
- · Advanced synchronous control method

To change the operation method after the operating system software is installed, install the operating system software (SV22) again, or change the operation method in "Change CPU operation method" of MT Developer2. Refer to help of MT Developer2 for details.

Ver.!: Refer to Section 1.3 for the software version that supports this function.

5.4 Trial Operation and Adjustment Checklist

At the worksite, copy the following table for use as a check sheet.

Work Step	Item	Check Items	Check	
		Check that each module is installed correctly.		
		Check that each connector is connected correctly.		
		Check each terminal screw for looseness.		
Before power supply	Installation of	Check that the earth wires of power supply module or servo amplifiers, etc. are correct.		
ON	unit/module	Check that the servo motor wiring is correct.		
	and basic wiring	Check that the regenerative option wiring is correct.		
		Check that the circuit of emergency stop and forced stop are correct.		
		Check that the wiring of each power supply and I/O are correct.		
		Check that the rotary switch setting is correct.		
	Installation of OS	Check that the operating system software is compatible.		
	System setting	Check that the system setting is correct.		
Power supply ON/	Q172DLX/Servo	Check that the upper/lower stroke limit inputs are correct.		
	amplifier external	Check that the STOP signal input is correct. (Q172DLX only)		
Motion CPU module	signal	Check that the proximity dog and speed/position switching signal input are correct.		
in STOP status/	Program/	Check that the Motion program, sequence program and positioning data are stored		
	positioning data	in the PLC/Motion CPU module correctly.		
PLC CPU module in	pooliioriing data	Check the communications with servo amplifiers.		
STOP status		Check that the rotation direction for JOG operation is correct.		
		Check that the upper/lower limit switches operate correctly.		
	Basic axis operations (Check each axis)	Check that the rotation at maximum command speed is motor rating or less.		
Motion CPU module		Check that the machine operates correctly by the JOG operation.		
in RUN status/		Check that the machine operates correctly by the 300 operation. Check that the machine stops by the upper/lower stroke limit.		
		Check that the machine stops by the emergency stop or forced stop.		
PLC CPU module in		Check that the home position return is executed correctly.		
STOP status		·		
		Check that each positioning control of Motion program is operates correctly. Check each operation in manual operation mode of system during Motion program execution.		
		Check that the machine operation stops immediately by the emergency stop or forced stop.		
	Manual operation	Check the operation of each actuator and confirmation limit switch.		
	iviariuai operation	Check that the emergency stop, forced stop and equipment alarm signals are correct.		
		Checks in compliance with control specifications specific to system and equipment.		
Motion CPU module in RUN status/		Check each operation in automatic operation mode of system during Motion program execution.		
		Check that the automatic operation motions.		
PLC CPU module in		Check that the machine operation stops immediately by the emergency stop or		
RUN status	Automatic	forced stop.		
	operation	Check that the module or equipment alarm causes an immediate stop or cycle stop.		
		Check that the restoring operation can be performed after an alarm stop.		
		Make other checks in compliance with control specifications specific to system and		
	Torque check	equipment.	 	
		Check that the acceleration/deceleration torque is maximum torque or less.		
		Check that the continuous effective load torque is rated torque or less.		

MEMO		

6. INSPECTION AND MAINTENANCE

∆ DANGER

- Do not touch the terminals while power is on. Doing so could cause electric shock.
- Correctly connect the battery. Also, do not charge, disassemble, heat, place in fire, short circuit, or solder the battery.
 - Mishandling of a battery may cause overheating, cracks or ignition which could result in injury and fire.
- Switch off all phases of the externally supplied power used in the system when cleaning the module or retightening the terminal or module mounting screws.
 - Not doing so could result in electric shock.
 - Under tightening of terminal screws can cause a short circuit or malfunction.
 - Over tightening of screws can cause damages to the screws and/or the module, resulting in fallout, short circuits, or malfunction.
- The capacitor is mounted to the modules. Do not incinerate the modules so that the incineration of capacitor may cause burst.
 - For disposal of the modules, request for specialized industrial waste disposal services who has incineration facility.

⚠CAUTION

- Read the manual carefully and pay careful attention to safety for the on-line operation (especially program change, forced stop or operation change) performed by connecting peripheral devices to the Motion controller during operation.
 - Erroneous operation may cause machine breakage or accident.
- Never try to disassemble or modify module. It may cause product failure, operation failure, injury or fire.
- Use any radio communication device such as a cellular phone or a PHS phone more than 25cm (9.84 inch) away in all directions of the Motion controller.
 - Failure to do so may cause a malfunction.
- Completely turn off the externally supplied power used in the system before installation or removing the module. Not doing so could result in electric shock, damage to the module or operation failure.
- Do not install/remove the module on to/from base unit or terminal block more than 50 times, after the first use of the product. Doing so may cause the module to malfunction due to poor contact of connector.
- Do not drop or impact the battery installed to the module. Doing so may damage the battery, causing battery liquid to leak in the battery.
 - Do not use the dropped or impacted battery, but dispose of it.
- Before touching the module, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.
- Do not directly touch the module's conductive parts and electronic components. Touching them could cause an operation failure or damage the module.

In order that you can use the Motion controller in normal and optimal condition at all times, this section describes those items that must be maintained or inspected daily or at regular intervals.

6.1 Maintenance Works

6.1.1 Instruction of inspection works

In order that can use the Motion controller in safety and normal, those items that must be inspected list below.

MDANGER


- Never open the front case or terminal covers while the power is ON or the unit is running, as this may lead to electric shocks.
- Never run the unit with the front case or terminal cover removed. The high voltage terminal and charged sections will be exposed and may lead to electric shocks.
- Never remove the front case or terminal cover at times other than wiring work or periodic inspections even if the power is OFF. The insides of the Motion controller and servo amplifier are charged and may lead to electric shocks.
- When performing wiring work or inspections, turn the power OFF, wait at least ten minutes, and then check the voltage with a tester, etc. Failing to do so may lead to electric shocks.
- Never operate the switches with wet hands, as this may lead to electric shocks.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this may lead to electric shocks or fire.
- Do not touch the Motion controller, servo amplifier or servo motor terminal blocks while the power is ON, as this may lead to electric shocks or fire.
- Do not touch the built-in power supply, built-in grounding or signal wires of the Motion controller and servo amplifier, as this may lead to electric shocks.

▲CAUTION

- lacktriangle Be sure to ground the Motion controller, servo amplifier and servo motor. Do not ground commonly with other devices. (Ground resistance : 100 Ω or less)
- The wiring work and inspections must be done by a qualified technician.
- Wire the units after mounting the Motion controller, servo amplifier and servo motor. Failing to do so may lead to electric shocks or damage.
- Perform the daily and periodic inspections according to the instruction manual.
- Perform maintenance and inspection after backing up the program and parameters for the Motion controller and servo amplifier.
- Do not place fingers or hands in the clearance when opening or closing any opening.
- Periodically replace consumable parts such as batteries according to the instruction manual.
- Do not touch the lead sections such as ICs or the connector contacts.
- Do not place the Motion controller or servo amplifier on metal that may cause a power leakage or wood, plastic or vinyl that may cause static electricity buildup.
- Do not perform a megger test (insulation resistance measurement) during inspection.
- When replacing the Motion controller or servo amplifier, always set the new unit settings correctly.

∴ CAUTION

- After maintenance and inspections are completed, confirm that the position detection of the absolute position detector function is correct.
- Do not short circuit, charge, overheat, incinerate or disassemble the batteries.
- The electrolytic capacitor will generate gas during a fault, so do not place your face near the Motion controller or servo amplifier.
- The electrolytic capacitor and fan will deteriorate. Periodically change these to prevent secondary damage from faults. Replacements can be made by our sales representative.
- If an error occurs in the self diagnosis of the Motion controller or servo amplifier, confirm the check details according to the instruction manual, and restore the operation.
- If a dangerous state is predicted in case of a power failure or product failure, in order to prevent that state, use a servo motor with electromagnetic brakes for maintenance or mount a brake mechanism externally.
- Use a double circuit construction so that the electromagnetic brake operation circuit can be operated by emergency stop signals set externally.

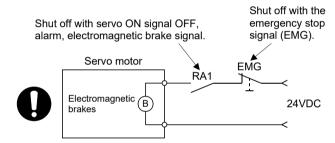

- If an error occurs, remove the cause, secure the safety and then resume operation after alarm release.
- The unit may suddenly restart after a power failure is restored, so do not go near the machine. (Design the machine so that personal safety can be ensured even if the machine restarts suddenly.)
- Confirm and adjust the program and each parameter before operation. Unpredictable movements may
 occur depending on the machine.
- Extreme adjustments and changes may lead to unstable operation, so never make them.
- Do not apply a voltage other than that specified in the instruction manual on any terminal.
 Doing so may lead to destruction or damage.
- Do not mistake the terminal connections, as this may lead to destruction or damage.
- Do not mistake the polarity (+/-), as this may lead to destruction or damage.
- Do not touch the heat radiating fins of controller or servo amplifier, regenerative resistor and servo motor, etc., while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.
- Always turn the power OFF before touching the servo motor shaft or coupled machines, as these parts may lead to injuries.
- Do not go near the machine during test operations or during operations such as teaching. Doing so may lead to injuries.
- Do not bunch the control wires or communication cables with the main circuit or power wires, or lay them closely. They should be installed 100mm (3.94inch) or more from each other. Trying to bunch or install could result in noise that would cause operation failure.

6.2 Daily Inspection

The items that must be inspected daily are shown below.

Table 6.1 Daily Inspection

Item	n Inspection item		ection item	Inspection	Criterion	Action													
1	Mounting of base unit		g of base unit	Check that the fixing screws are not loose and the cover is not dislocated.	The screws and cover must be mounted securely.	Retighten the screws.													
2	Installation of Motion modules and I/O modules		s and I/O	Check that the module is not dislocated and the unit fixing hook is engaged securely.	The module fixing hook must be engaged and installed correctly.	Securely engaged the module fixing hook.													
	3 Connecting conditions			Check for loose terminal screws.	Screws should not be loose.	Retighten the terminal screws.													
3			ting conditions		The proper clearance should be provided between solderless terminals.	Correct.													
				Check the connector part of the cable.	Connections should not be loose.	Retighten the connector fixing screws.													
		Power supply module	[POWER] LED	Check that the LED is ON.	The LED must be ON (green). (Abnormal if the LED is OFF or ON (red)).	Refer to "QnUCPU User's Manual (Function													
		ale	[MODE] LED	Check that the LED is ON.	The LED must be ON (green). (Abnormal if the LED is OFF or flickering.)	Explanation, Program Funda-													
		J mod	[RUN] LED	Check that the LED is ON in RUN status.	The LED must be ON. (Abnormal if the LED is OFF.)	mentals)".													
		CCPI	[ERR.] LED	Check that the LED is OFF.	The LED must be OFF. (Abnormal if the LED is ON or flickering.)														
		Пd	[BAT.] LED	Check that the LED is OFF.	The LED must be OFF. (Abnormal if the LED is ON.)														
		U module	Normal	8.8.8.	Steady "RUN" display. (Abnormal if "RUN" does not display or incorrect display.)	Refer to Section													
4			Motion CF	_ 유	module Motion CF	_ 유	- -	ᄓ		5.8.8.	Steady "STP" display. (Abnormal if "STP" does not display or incorrect display.)	2.5.1							
									Battery error warning (2.7V or less)	8.8.8.	"BT1" does not display. (Abnormal if steady "BT1" display.)	Refer to Section							
		- 5							ᄓ	_ 님	Motion CF	Motion CF	Motion	Motion		Battery error warning (2.5V or less)	8.8.8.	"BT2" does not display. (Abnormal if steady "BT2" display.)	6.5
															WDT error	8.8.8.	" " does not display. (Abnormal if steady "" display.)	Refer to Section	
									Others		" AL" does not flash. (Abnormal if "" flashes.)	2.5.1							
						Input LED	Check that the LED is ON/OFF.	The LED must be ON when the input power is turned ON. The LED must be OFF when the input power is turned OFF. (Abnormal if the LED does not turn ON or turn OFF as indicated above.)	Refer to "I/O Module Type										
						bom O/I	bom O/I	bom O/I	bom O/I	bom O/I	bom O/I	2	2	9	2	2	2	2	Output LED

6.3 Periodic Inspection

The items that must be inspected one or two times every 6 months to 1 year are listed below. When the equipment is moved or modified, or layout of the wiring is changed, also implement this inspection.

Table 6.2 Periodic Inspection

Item		Inspection item	Inspection	Criterion	Action	
1	environment	Ambient temperature		0 to 55 °C (32 to 131 °F)	When the controller is used in	
	ıt enviro	Ambient humidity	Measure with a thermometer and a hygrometer. Measure corrosive gas.	5 to 95 % RH	the board, the ambient temperature in the board becomes the ambient	
	Ambient	Atmosphere	ivieasure corrosive gas.	No corrosive gases	temperature.	
			Measure a voltage across the	85 to 132VAC		
2	Po	wer voltage	terminals of 100/200VAC and	170 to 264VAC	Change the power supply.	
			24VDC.	15.6 to 31.2VDC		
3	nstallation	Looseness, rattling	Move the module to check for looseness and rattling.	The module must be installed solidly.	Retighten the screws. If the CPU modules, Motion modules, I/O modules, or power supply modules are loose, fix it with screws.	
	_	Adhesion of dirt and foreign matter	Check visually.	Dirt and foreign matter must not be present.	Remove and clean.	
	nc	Looseness of terminal screws	Try to further tighten screws with a screwdriver.	Screws must not be loose.	Retighten the terminal screws.	
4	Connection	Proximity of solderless terminals to each other	Check visually.	Solderless terminals must be positioned at proper intervals.	Correct.	
	ŏ	Looseness of connectors	Check visually.	Connectors must not be loose.	Retighten the connector fixing screws.	
			Check the 7-segment LED at the front side of CPU module.	Must be turned OFF "BT1" or "BT2" display.	Even if the lowering of a battery capacity is not shown,	
5 B	Ba	ttery	Check the length of term after purchasing the battery	Must not be used more than 5 years.	replace the battery with a new one if a service life time of the battery is exceeded.	
			Check that SM51 or SM58 is turned OFF using MT Developer2 in monitor.	Must be turned OFF.	Replace the battery with a new one when SM51 or SM58 is ON.	

6.4 Life

The following parts must be changed periodically as listed below.

However, if any part is found faulty, it must be changed immediately even when it has not yet reached the end of its life, which depends on the operating method and environmental conditions.

For parts replacement, please contact your sales representative.

Table 6.3 Life

Module name	Part name	Life guideline	Remark	
Motion CPU module			Life guideline is reference time.	
Motion module	Electrolytic capacitor		If faulty, it must be changed	
Synchronous	Capacitor	20,000 to 30,000	immediately even when it has not yet reached the life	
encoder	Bearings	l hours	guideline.	

(1) Capacitor

The life of the capacitor greatly depends on ambient temperature and operating conditions. The capacitor will reach the end of its in 10 years of continuous operation in normal air-conditioned environment.

(2) Bearing

Change the bearings in 20,000 to 30,000 hours as a guideline under rated speed. This differs on the operating conditions, The bearings must also be changed if unusual noise or vibration is found during inspection.

6.5 Battery

The battery installed in the Motion CPU module is used for data retention during the power failure of the program memory and latch device. Special relays (SM51, SM52, SM58 or SM59) turn on due to the decrease of battery voltage. Even if the special relays turn on, the program and retained data are not erased immediately. However, if these relays are overlooked, the contents may be erased. After relay SM51 or SM58 turns on, replace the battery quickly within the data retention time for power failure (3 minutes).

POINT

- (1) SM51 or SM58 turns on when the battery voltage falls below the specified value, and remains ON even after the battery voltage is recovered to the normal value. SM51 or SM58 turns off by power supply on again or reset.
- (2) After SM51, SM52, SM58 or SM59 turns on, replace the battery quickly.
 - SM51 or SM52 turns on at the battery voltage 2.5V or less.
 - SM58 or SM59 turns on at the battery voltage 2.7V or less.
- (3) If SM51 turns on, the details for the programs, parameters, motion device(#), latch range device and absolute position data of SRAM built-in Motion CPU module cannot be guaranteed.
 It is recommended to back-up the data periodically.
- (4) For Q173DSCPU/Q172DSCPU, whether or not to check the battery of Motion CPU can be set in the system basic setting of system setting. If "Perform battery check" is not set, a self-diagnosis error will not occur and the 7segment LED "BT1" or "BT2" is not displayed. Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details.

6.5.1 Battery life

The battery life is shown below.

	Battery type		Battery life (Total power failure time) [h] (Note-1)					
Module type			Power-on time ratio (Note-2)	Guaranteed value ^(Note-3) (MIN) (75°C (167°F))	Guaranteed value (Note-4) (TYP) (40°C (104°F))	Actual service value (Note-5) (Reference value) (TYP) (25°C (77°F))	Backup time after alarm (Note-6)	
			0%	20000			00	
Q173D(S)CPU/			30%	27000	43800	43800	90 (After	
Q172D(S)CPU	Battery (Q6	BAT)	50%	31000			(After SM51/SM52	
(Note-7)			70%	36000			ON)	
			100%	43800			ON)	
	Internal battery		0%	3000	8000	24000		
			30%	4000	11000	34000		
			50%	6000	16000	43800	. 40 (After Error	
			70%	10000	26000	43800		
0.4707537			100%	43800	43800	43800		
Q172DEX	(A6BAT/	(A6BAT/	0%	1500	4000	12000	code 1152	
	MR-BAT)		30%	2000	5500	17000	occurrence)	
			50%	3000	8000	21900		
			70%	5000	13000	21900		
			100%	43800	43800	43800		

- (Note-1): The actual service value indicates the average value, and the guaranteed value indicates the minimum value.
- (Note-2): The power-on time ratio indicates the ratio of Multiple CPU system power-on time to one day (24 hours). (When the total power-on time is 17 hours and the total power-off time is 7 hours, the power-on time ratio is 70%.)
- (Note-3): The guaranteed value (MIN); equivalent to the total power failure time that is calculated based on the characteristics value of the memory (SRAM) supplied by the manufacturer and under the storage ambient temperature range of -25°C to 75°C (-13 to 167°F) (operating ambient temperature of 0°C to 55°C (32 to 131°F)).
- (Note-4): The guaranteed value (TYP); equivalent to the total power failure time that is calculated based on the normal air-conditioned environment (40°C (104°F)).
- (Note-5): The actual service value (Reference value); equivalent to the total power failure time that is calculated based on the measured value and under the storage ambient temperature of 25°C (77°F). This value is intended for reference only, as it varies with characteristics of the memory.
- (Note-6): In the following status, the backup time after power OFF is 3 minutes.
 - The battery connector/Q6BAT lead connector is disconnected.
 - The battery cable/lead wire of Q6BAT is broken.
- (Note-7): Set the battery (Q6BAT) to battery holder unit (Q170DBATC) when using the Q173DCPU(-S1)/Q172DCPU(-S1).

POINT

- (1) Do not use the battery exceeding its guaranteed life.
- (2) When the battery hours (total power failure time) may exceed its guaranteed value, take the following measure.
 - Perform ROM operation to protect a program even if the battery dies at the Multiple CPU system power-OFF.
 - If SM51 turns on, the contents for programs, parameters, motion device(#), latch range device and absolute position data cannot be guaranteed. It is recommended to back-up the data periodically.
- (3) When the total power failure time exceeds its guaranteed value, and SM51, SM52, SM58 and SM59 turns on, immediately change the battery. Even if the alarm has not yet occurred, it is recommended to replace the battery periodically according to the operating condition
- (4) The self-discharge influences the life of battery without the connection to Q173D(S)CPU/Q172D(S)CPU/Q172DEX. The external battery should be exchanged approximately every 4 or 5 years. And, exchange the battery with a new one in 4 to 5 years even if a total power failure time is guaranteed value or less.
- (5) It is recommended to shift to the mode operated by ROM after the programs and parameters are fixed. The erasing of the programs and parameters can be avoided even if the battery decrease. (The ROM writing cannot be executed for the current position of the servo motor in the absolute position system, home position and latch device. Back up them beforehand using MT Developer2.)
 - Refer to Section 4.4 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details of the ROM operation.

6.5.2 Battery replacement procedure

(1) Battery replacement procedure of the Motion CPU module When the battery has been exhausted, replace the battery with a new one in accordance with the procedure shown below.

POINTS


When replacing the battery, pay attention to the following.

- (1) The Multiple CPU power supply must be on for 10 minutes or longer before dismounting the battery.
- (2) Back up the data using MT Developer2 before starting replacement.
- (3) Firstly back up the data stored in the Motion CPU to the personal computer which is installed MT Developer2 then replace the battery with a new one. After setting the battery, verify the backing up the data to the personal computer which is installed MT Developer2 and the data in the Motion CPU module, confirm the data is not changing.


In the following status, the backup time after power OFF is 3 minutes.

- The battery connector/Q6BAT lead connector is disconnected.
- The battery cable/lead wire of Q6BAT is broken.

(a) Q173DSCPU/Q172DSCPU battery replacement procedure

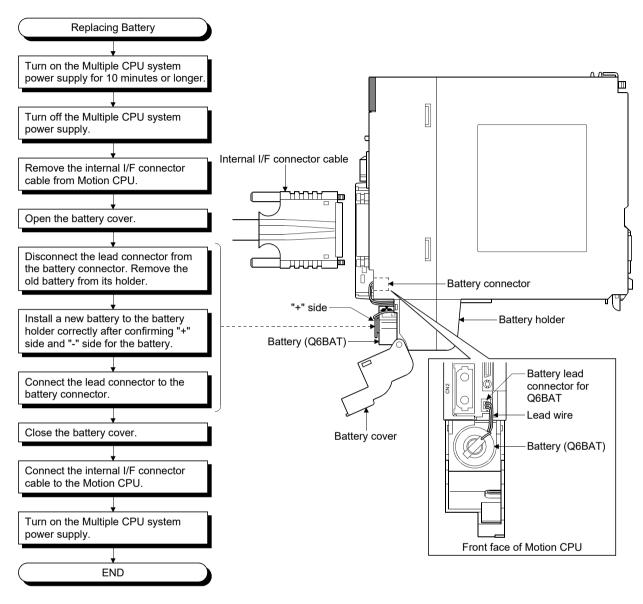

(b) Q173DCPU(-S1)/Q172DCPU(-S1) battery replacement procedure

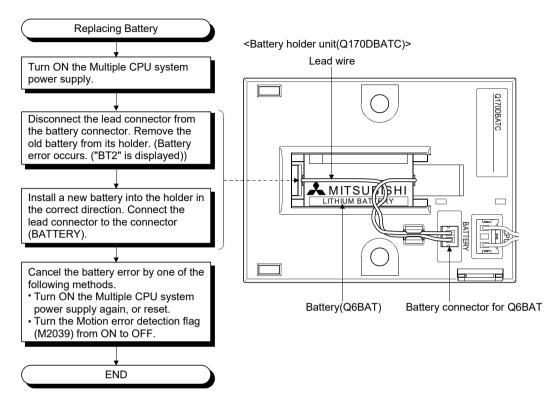


(2) Q172DEX module battery replacement procedure
When the battery has been exhausted, replace the battery with a new one in accordance with the procedure shown below.

POINT

When replacing the battery, pay attention to the following.

- (1) The Multiple CPU power supply must be on for 10 minutes or longer before dismounting the battery.
- (2) Encoder data in the memory are backed up for a while by a capacitor even after the battery is removed. However, since data in the memory may be erased if the time for replacement exceeds the backup time shown the following guaranteed value, replace the battery guickly.
 - · Backup time by capacitor: 3 minutes

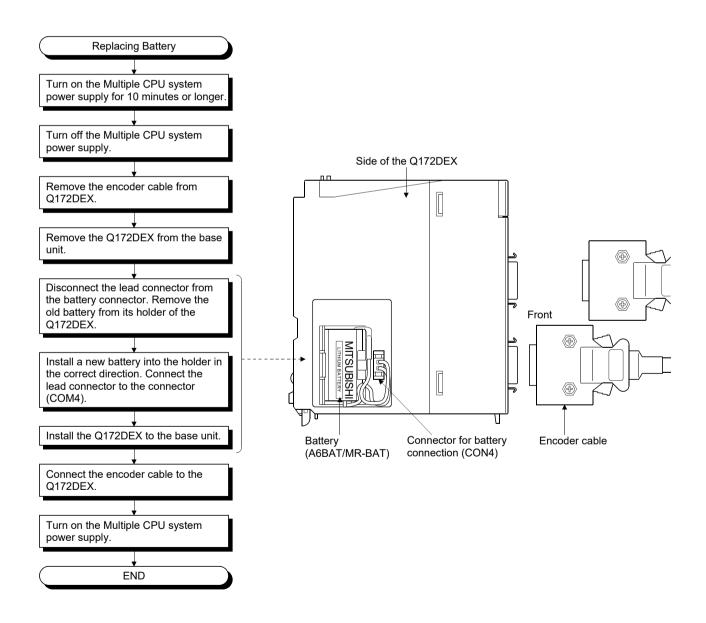

6.5.3 Resuming operation after storing the Motion controller

When the operation is to be resumed after being stored with the battery removed or the battery has gone flat during storage, the contents of programs, parameters, motion device(#), latch range device and absolute position data cannot be guaranteed. Before resuming operation, write the contents of programs, parameters, motion device(#), latch range device and absolute position data backed up prior to storage to SRAM built-in Motion CPU module.

POINT

- (1) Before storing the Motion controller, always back up the contents of programs, parameters, motion device(#), latch range device and absolute position data to SRAM built-in Motion CPU module.
- (2) When using PERIPHERAL I/F for connecting and communication with Motion controller cannot be established, perform SRAM clear with the rotary switch. (Refer to Section 2.5.1(4))

6.5.4 Symbol for the new EU battery directive

This section describes a symbol for the new EU Battery Directive (2006/66/EC) that is labeled batteries.



Note: This symbol mark is for EU countries only.

This symbol mark is according to the directive 2006/66/EC Article 20 Information for end-users and Annex II.

Your MITSUBISHI ELECTRIC product is designed and manufactured with high quality materials and components which can be recycled and/or reused.

This symbol means that batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

If a chemical symbol is printed beneath the symbol shown above, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows:

Hg: mercury (0.0005%), Cd: cadmium (0.002%), Pb: lead (0.004%)

In the European Union there are separate collection systems for used batteries and accumulators.

Please, dispose of batteries and accumulators correctly at your local community waste collection/recycling centre.

Please, help us to conserve the environment we live in!

6.6 Troubleshooting

This section describes the various types of trouble that occur when the system is operated, and causes and corrective actions of these troubles.

6.6.1 Troubleshooting basics

The basic three points that must be followed in the troubleshooting are as follows.

(1) Visual inspection

Visually check the following.

- (a) Movement of machine (stopped condition, operating condition)
- (b) Power supply on/off
- (c) Status of input/output devices
- (d) Installation condition of the Power supply module, Motion CPU module, PLC CPU module, I/O module, Motion module, intelligent function module, SSCNETII cable, Synchronous encoder cable.
- (e) State of wiring (I/O cables, cables)
- (f) Display states of various types of indicators

PLC CPU module : MODE LED, RUN LED, ERR. LED, BAT LED, I/O

LED, etc.

Motion CPU module: 7-segment LED (Installation mode, Operation mode,

Battery error, STOP/RUN, etc.)

(g) Status of setting of various types of switches (Setting of No. of stages of extension base, power interrupt hold-on status).

After checking (a) to (g), monitor the operating conditions of servo motors and error code using MT Developer2 and GX Works2/GX Developer.

(2) Check of trouble

Check to see how the operating condition varies while the Motion controller is operated as follows.

- (a) Set the RUN/STOP switch of Motion CPU module to STOP.
- (b) Reset the trouble with the RUN/STOP/RESET switch of PLC CPU module.
- (c) Turn ON and OFF the Multiple CPU system power supply.

(3) Narrowing down the range of trouble occurrence causes

Estimate the troubled part in accordance with items (1) and (2) above.

- (a) Multiple CPU system or external devices
- (b) Motion CPU or PLC CPU
- (c) I/O module or others
- (d) Servo program or Motion SFC program/Motion program
- (e) Sequence program

6.6.2 Troubleshooting of Motion CPU module

This section describes the contents of troubles for the error codes and corrective actions of the troubles.

As for troubleshooting of PLC CPU, refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection) of their respective modules.


As for troubleshooting of I/O modules, refer to the "I/O Module Type Building Block User's Manual" of their respective modules.

POINT

Check that the operating system software is installed before starting the Motion CPU module.


(1) Troubleshooting flowchart


The following show the contents of the troubles classified into a variety of groups according to the types of events.

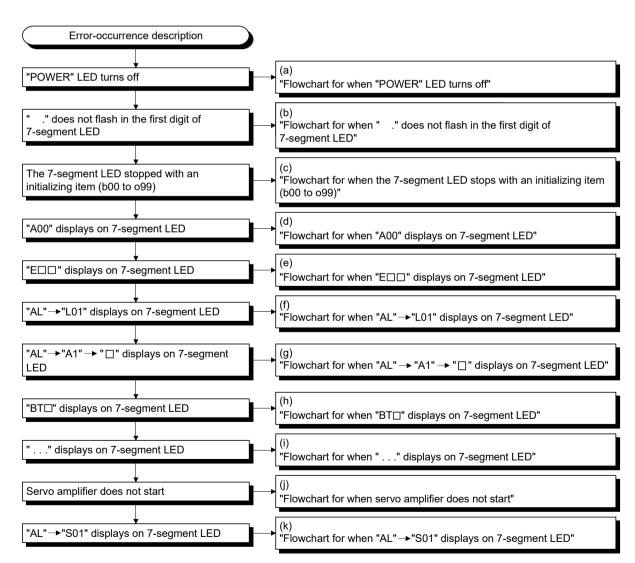

(a) Flowchart for when "POWER" LED turns off


The following shows the flowchart for when "POWER" LED of the power supply module turns off at the power supply ON or during operation.

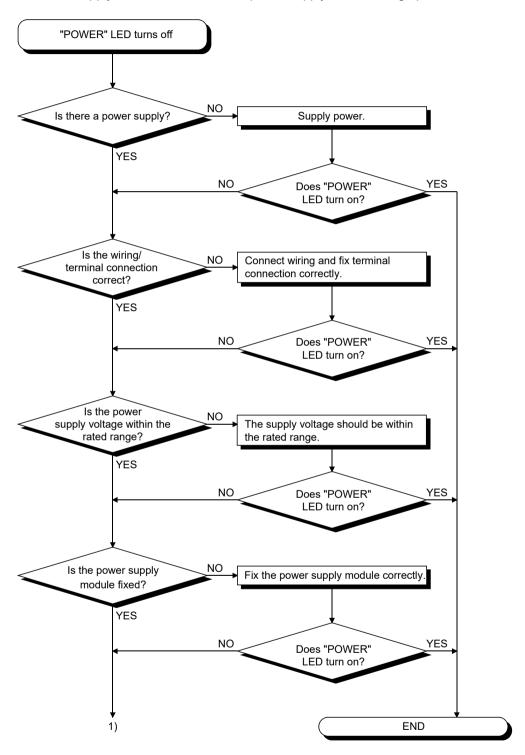

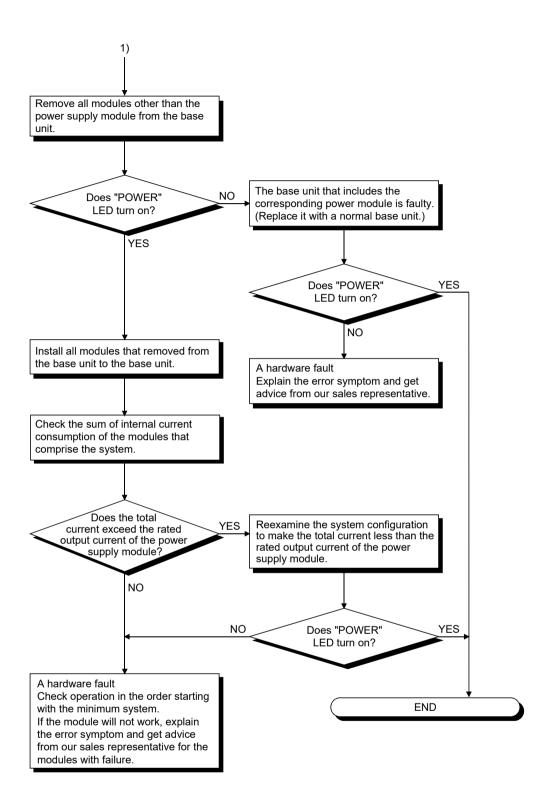


(b) Flowchart for when " ." does not flash in the first digit of 7-segment LED


The following shows the flowchart for when " ." does not flash in the first digit of 7-segment LED.

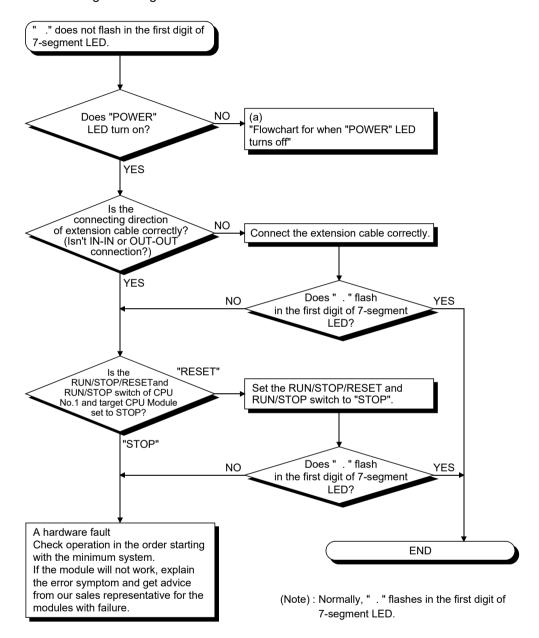

(c) Flowchart for when the 7-segment LED stops with an initializing item (b00 to o99)


The following shows the flowchart for when the 7-segment LED stops with an initializing item (b00 to o99).

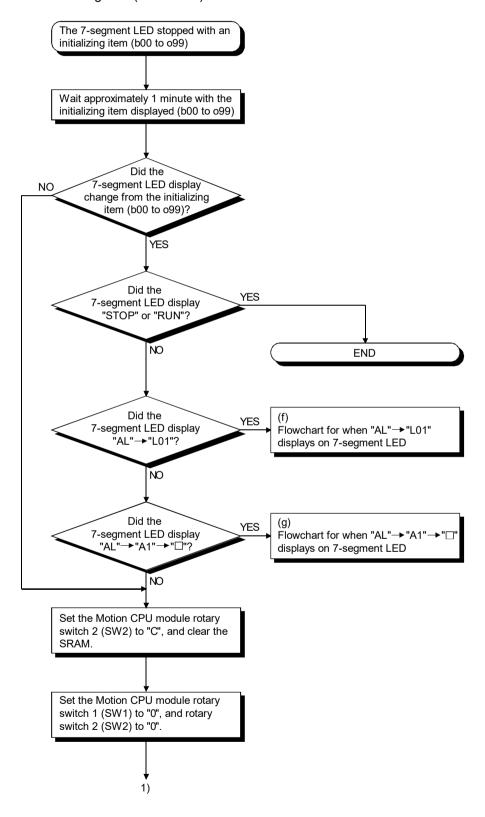

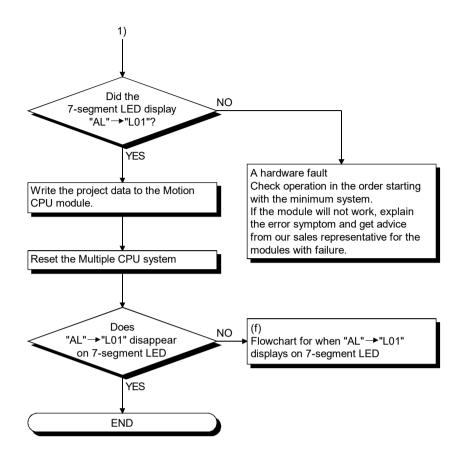

(d) Flowchart for when "A00" displays on 7-segment LED

"A00" displays when the operating system software is not installed. The following shows the flowchart for when "A00" displays on 7-segment LED at the power supply ON or operation start.

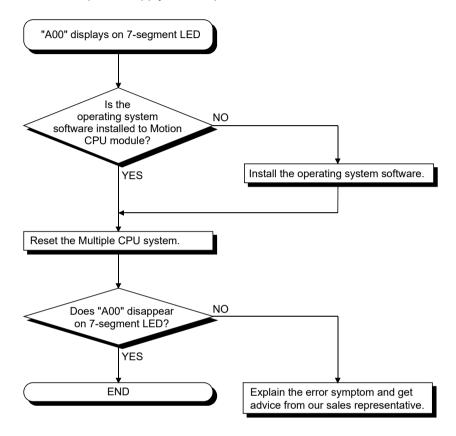


(e) Flowchart for when "E□□" displays on 7-segment LED

"EDD" displays when a hardware fault or software fault occurs.

The following shows the flowchart for when " $E\square\square$ " displays on 7-segment LED at the power supply ON or operation start.


"□" indicates the error code.

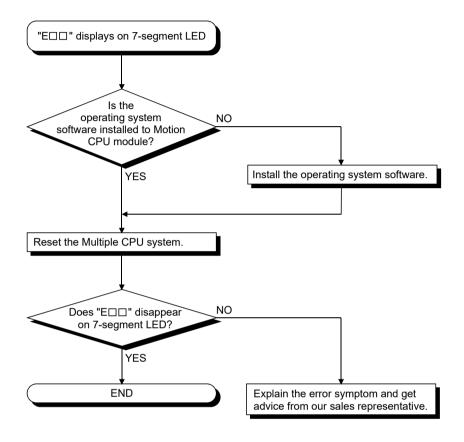

(f) Flowchart for when "AL" → "L01" displays on 7-segment LED

""AL" (flashes 3 times) \rightarrow Steady "L01" display" displays at the system setting error occurrence.

The following shows the flowchart for when ""AL" (flashes 3 times) → Steady "L01" display" displays during operation.

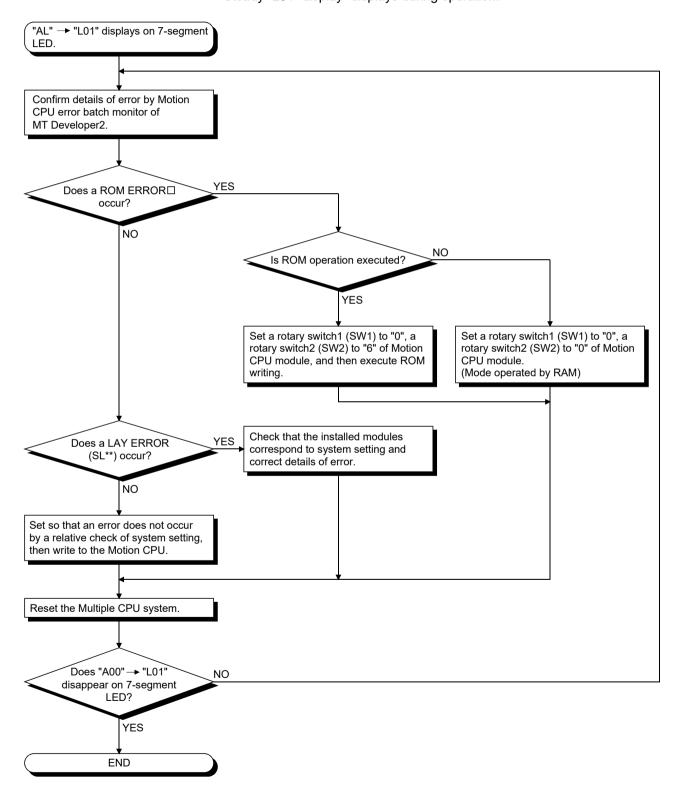


(g) Flowchart for when "AL" \rightarrow "A1" \rightarrow " \square " displays on 7-segment LED.

""AL" (flashes 3 times) \rightarrow Steady "A1" display \rightarrow " \square "" displays at the self-diagnosis error occurrence.

The following shows the flowchart for when ""AL" (flashes 3 times) \rightarrow Steady "A1" display \rightarrow " \square "" displays during operation.

☐: 4-digits error code is displayed in two sequential flashes of 2-digits each.

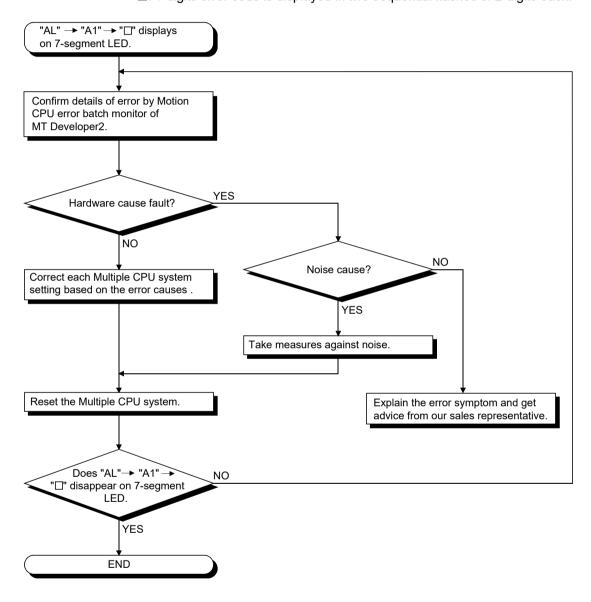


(h) Flowchart for when "BT□" displays on 7-segment LED

"BT1" or "BT2" displays when the battery voltage is lowered.

"BT1" or "BT2" displays at the following cases.

- BT1: Battery voltage 2.7V or less
- BT2: Battery voltage 2.5V or less

The following shows the flowchart for when "BT1" or "BT2" displays on 7-segment LED.

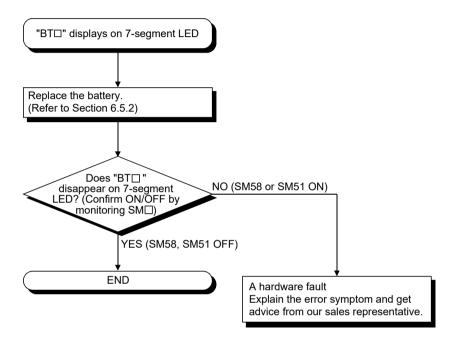

REMARK


If SM51, SM58 turns on, the contents of the programs, parameters, motion device(#), latch range device and absolute position data cannot be guaranteed.

It is recommended to back-up the data periodically.

(i) Flowchart for when "..." displays on 7-segment LED


" . . . " displays at the WDT error occurrence.

The following shows the flowchart for when " . . . " displays on 7-segment LED during operation.

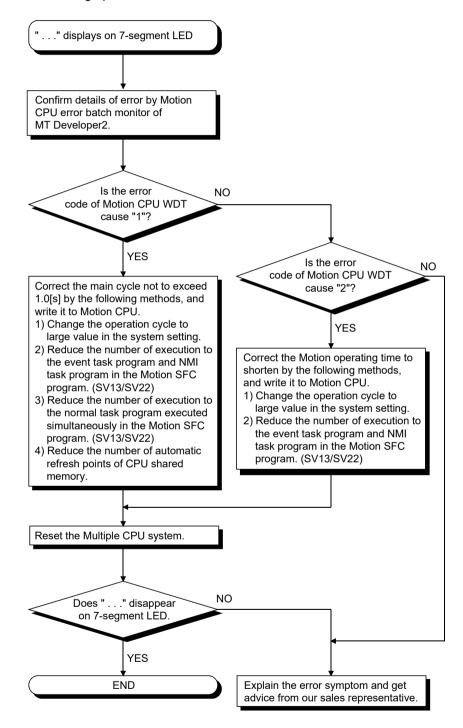

(j) Flowchart for when servo amplifier does not start


The following shows the flowchart for when servo amplifier does not start.

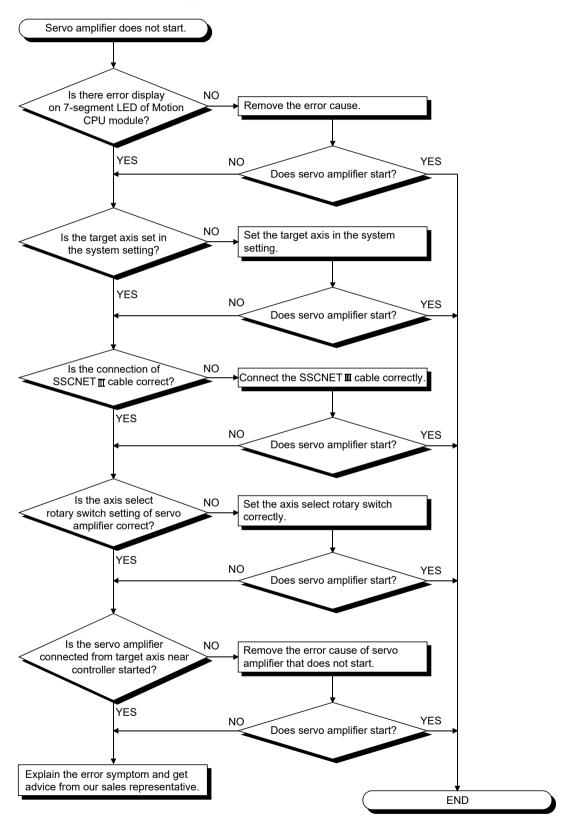

(k) Flowchart for when "AL" \rightarrow "S01" displays on 7-segment LED

""AL" (flashes 3 times) $\stackrel{\longrightarrow}{}$ Steady "S01" display" displays at the servo error occurrence.

The following shows the flowchart for when ""AL" (flashes 3 times) \rightarrow Steady "S01" display" displays on 7-segment LED during operation.

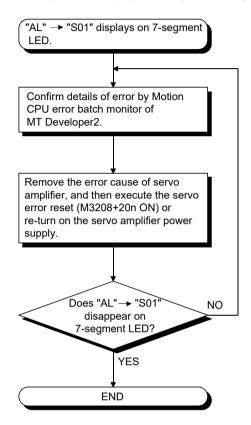

6.6.3 Confirming error code

The error codes and error contents can be read using MT Developer2. Refer to help of MT Developer2 for details of operating method.

6.6.4 Internal input circuit troubleshooting QDS(

This section describes possible problems with internal input circuits and their corrective actions.

(1) Internal input circuit troubleshooting


The following describes possible problems with internal input circuits and their corrective actions.

Table 6.4 Internal Input Circuit Troubleshooting and Corrective Action


	Condition	Cause	Corrective action		
Example 1	Internal input signal is not turned OFF.	Drive by switch with LED indicator. DC input (plus common) Leakage current Motion CPU	Connect an appropriate resistor so that the current across the Motion CPU becomes lower than the off current. DC input (plus common) Resistor Motion CPU (Note): A calculation example of the resistance to be		
Example 2	Internal input signal is not turned OFF.	• Sneak path due to the use of two power supplies. DC input Motion CPU	connected is shown below. • Use only one power supply. • Connect a sneak path prevention diode. (Figure below) DC input Motion CPU		

<Calculation example of Example 1>

 If a switch with LED display is connected to Motion CPU, and current of 4 [mA] is leaked.



 (a) Because the condition for OFF voltage (0.9[mA]) of Motion CPU is not satisfied. Connect a resistor as shown below.



(b) Calculate the connecting resistor value R as indicated below. To satisfy the 0.9 [mA] OFF current of the Motion CPU, the resistor R to be connected may be the one where 3.1 [mA] or more will flow.

$$R \le \frac{Iz}{IR} \times Z(Input \text{ impedance}) = \frac{0.9}{3.1} \times 5.6 \times 10^3 = 1625[\Omega]$$

$$R < 1625 [\Omega]$$

Assuming that resistor R is 1500 [Ω], the power capacity W of resistor R is:

W =
$$(Input \ voltage)^2 \div R = 26.4^2 \div 1500 = 0.464 \ [W]$$

(c) The power capacity of the resistor selected is 3 to 5 times greater than the actual current consumption. 1.5k $[\Omega]$, 2 to 3 [W] resistor may therefore be connected to the terminal in question.

MEMO		

7. EMC DIRECTIVES

Compliance to the EMC Directive, which is one of the EU Directives, has been a legal obligation for the products sold in European countries since 1996 as well as the Low Voltage Directive since 1997.

Manufacturers who recognize their products are compliant to the EMC and Low Voltage Directives are required to declare that and print a "CE mark" on their products.

(1) Authorized representative in Europe

Authorized representative in Europe is shown below.

Name : Mitsubishi Electric Europe B.V.

Address: Gothaer strase 8, 40880 Ratingen, Germany

7.1 Requirements for Compliance with the EMC Directive

The EMC Directive specifies that products placed on the market must be so constructed that they "do not cause excessive electromagnetic interference (emissions)" and "are not unduly affected by electromagnetic interference (immunity)". Section 7.1.1 through Section 7.1.4 summarize the precautions on compliance with the EMC Directive of the machinery constructed with the Motion controllers.

These precautions are based on the requirements and the standards of the regulation, however, it does not guarantee that the entire machinery constructed according to the descriptions will comply with above-mentioned directive. The method and judgement for complying with the EMC Directive must be determined by the person who constructs the entire machinery.

7.1.1 Standards relevant to the EMC directive

The standards relevant to the EMC Directive are listed in table below.

Certification	Test item	Test details	Standard value		
			30M-230MHz QP ^(Note-2) : 40dBµV/m		
	EN55011:2007/A2:2007	Radio waves from the product are	(10m (32.81ft.) in measurement range)		
	Radiated emission ^(Note-1)	measured.	230M-1000MHz QP: 47dBµV/m		
			(10m (32.81ft.) in measurement range)		
			AC power line		
			0.15M-0.5MHz QP : 79dBµV		
EN61000-6-4:2007	ENIFECATA 0007/A0 0007(Note-3)		AV ^(Note-5) : 66dBµV		
EN61131-2:2007	EN55011:2007/A2:2007 ^(Note-3)	National finance Along to the A	0.5M-30MHz QP: 73dBμV		
	(Power line) EN55022:2006/A1:2007 ^(Note-4)	Noise from the product to the power	AV: 60dBμV		
	(Electrical communication port)	line and electrical communication port is measured.	Electrical communication port		
	Conducted emission	is measured.	0.15M-0.5MHz QP, AV: Logarithmic		
	Conducted emission		decrease		
			0.5M-30MHz QP: 87dBμV		
			AV: 74dBμV		
	EN61000-4-2:1995		8kV: 10 times at 1 second interval,		
	+A1:1998+A2:2001	Immunity test in which electrostatic	Air discharge		
	Electrostatic discharge	discharge is applied to the product.	4kV: 10 times at 1 second interval,		
	immunity		Contact discharge		
	EN61000-4-3:2006 Radiated immunity ^(Note-1)		80-1000MHz 10V/m,		
		Immunity test in which electric fields	1400M-2000MHz 3V/m,		
		are radiated to the product.	2000M-2700MHz 1V/m,		
			80%AM modulation @1kHz		
	EN61000-4-4:2004	Immunity test in which burst noise is	AC power line : ±2kV/5kHz		
	Electrical fast transient/	applied to the power cable and signal	DC power line : ±2kV/5kHz		
	burst (EFT/B) immunity	line.	I/O, communication line: ±1kV/5kHz		
			AC power line		
EN61000-6-2:2005			Common mode: ±2.5kV		
EN61131-2:2007			Differential mode: ±1.5kV		
	EN61000-4-5:2006	Immunity test in which surge is applied	DC power line		
	Surge immunity	to the power line and signal line.	Common mode: ±0.5kV		
			Differential mode: ±0.5kV		
			I/O, communication line Common mode: ±1kV		
	EN61000-4-6:2007	Immunity to at in which high fraguency	Continon mode. ± 1kV		
	+A:2001	Immunity test in which high frequency noise is applied to the power line and	0.15-80MHz,		
	Conducted immunity	signal line.	80%AM modulation @1kHz, 10Vrms		
	EN61000-4-11:2004 ^(Note-3)	Immunity test in which power supply			
	Short interruptions immunity	has short interruptions.	0% of rated voltage, 250cycle		
	EN61000-4-11:2004 ^(Note-3)	Test in which voltage dip is applied to	40% of rated voltage, 10cycle		
	Voltage dip	the power supply.	70% of rated voltage, 10cycle		
	EN61131-2:2007 ^(Note-3)	Immunity test in which voltage dip is	7070 Of Tatod Voltage, 200yole		
EN61131-2:2007	Voltage dip immunity	applied to the power supply.	0% of rated voltage, 0.5cycle 20 times		
	tis on open type device (a device	ement) and must be installed inside a			

(Note-1): This product is an open type device (a device designed to be housed inside other equipment) and must be installed inside a conductive control panel.

The corresponding test has been done with the programmable controller installed inside a control panel.

(Note-2): QP : Quasi-peak value

(Note-3): For the AC power supply line.

(Note-4): For the electrical communication port.

(Note-5): AV: Average value

7.1.2 Installation instructions for EMC directive

(1) Installation

Motion controller is an open type device and must be installed inside a control panel for use.

This not only ensures safety but also ensures effective shielding of Motion controller-generated electromagnetic noise.

(a) Control panel

- 1) Use a conductive control panel.
- 2) When attaching the control panel's top plate or base plate, expose bare metal surface and weld so that good surface contact can be made between the panel and plate.
- 3) To ensure good electrical contact with the control panel, mask the paint on the installation bolts of the inner plate in the control panel so that contact between surfaces can be ensured over the widest possible area.
- 4) Ground the control panel with a thick wire so that a low impedance connection to ground can be ensured even at high frequencies.
- 5) Holes made in the control panel must be 10cm (3.94inch) diameter or less. If the holes are 10cm (3.94 inch) or larger, radio frequency noise may be emitted.

In addition, because radio waves leak through a clearance between the control panel door and the main unit, reduce the clearance as much as practicable.

The leakage of radio waves can be suppressed by the direct application of an EMI gasket on the paint surface.

(2) Connection of power line and ground wire

It is necessary to use the Motion controller grounding terminal only when it is in the grounded condition. Be sure to ground the grounding for the safety reasons and EMC Directives.

Ground wire and power supply cable for the Motion controller system must be connected as described below.

(a) Provide a grounding point near the FG terminals. Ground the FG terminals (FG: Frame Ground) with the thickest and shortest wire possible. (The wire length must be 30cm (11.81inch) or shorter.) The FG terminals function is to pass the noise generated in the Motion controller system to the ground, so wire the ground wire as short as possible to ensure a low impedance. The wire itself carries a large noise content and thus short wiring means that the wire is prevented from acting (noise emission) as an antenna.

(3) Cables

The cables extracted from the control panel contain a high frequency noise component. On the outside of the control panel, therefore, they serve as antennas to emit noise. To prevent noise emission, use shielded cables for the cables which are connected to the I/O modules and intelligent function modules and may be extracted to the outside of the control panel.

The use of a shielded cable also increases noise resistance.

The signal lines (including common line) of the programmable controller, which are connected to I/O modules, intelligent function modules and/or extension cables, have noise durability in the condition of grounding their shields by using the shielded cables. If a shielded cable is not used or not grounded correctly, the noise resistance will not meet the specified requirements.

(a) Grounding of shield section of shield cable

- Ground the exposed shield section of the shielded cable close to the module. When the grounded cables and the not yet grounded cables are bundled, the cables might be induced to electromagnetic.
- 2) Ground the exposed shield section to spacious area on the control panel. A clamp can be used as shown in Figure 7.2. In this case, mask the inner wall surface when coating the control panel, and contact the exposed shield section with the clamp at the exposed bare metal surface.

 


Figure 7.1 Part to be exposed

Figure 7.2 Shield grounding (Correct example)

Note) The method of grounding with a vinyl-coated wire soldered onto the shielded section of the shielded cable as in shown Figure 7.3 is not recommended. Doing so will raise the high-frequency impedance, resulting in loss of the shielding effect.

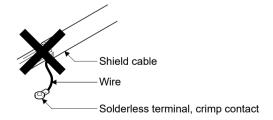


Figure 7.3 Shield grounding (Incorrect example)

(4) Precautions relevant to the electrostatic discharge

There is a weak part to electrostatic discharge in the surface of the module. Before touching the module, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.

Do not directly touch the module's conductive parts and electronic components. Touching them could cause an operation failure or damage the module.

7.1.3 Parts of measure against noise

(1) Ferrite core

A ferrite core has the effect of reducing noise in the 30MHz to 100MHz band. It is not required to fit ferrite cores to cables, but it is recommended to fit ferrite cores if shield cables pulled out of the enclosure do not provide sufficient shielding effects.

Note that the ferrite cores must be fitted to the cables in the position immediately before they are pulled out of the enclosure. If the fitting position is improper, the ferrite will not produce any effect.

• Ferrite core (Recommended product)

Manufacturer	Model name
TDK	ZCAT3035-1330

(2) Noise filter (power supply line filter)

A noise filter is a component which has an effect on conducted noise. The attachment of the noise filter to the power supply line of the servo amplifier and Multiple CPU system's power supply is effective for the reducing noise. (The noise filter has the effect of reducing conducted noise of 10 MHz or less.)

Noise ferrite (Recommended product)

Manufacturer	Model name
Mitsubishi Electric	FR-BLF
Soshin Electric	HF3010A-UN

The precautions required when installing a noise filter are described below.

(a) Do not bundle the wires on the input side and output side of the noise filter. When bundled, the output side noise will be induced into the input side wires from which the noise was filtered.

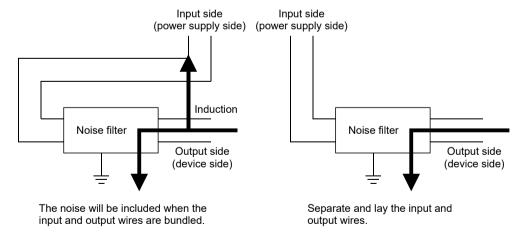



Figure 7.4 Precautions on noise filter

(b) Ground the noise filter grounding terminal to the control cabinet with the shortest wire possible (approx. 10cm (3.94 inch)).

(3) Cable clamp

It is also possible to ground the exposed shielded part of the cable to the panel with the cable clamp.

- Ground the shield at a position 20 to 30cm (7.87 to 11.81 inch) away from the module.
- When the cables pulled out from the control panel, ground the cables at a position 5 to 10cm (1.97 to 3.94inch) away from the input/output hole of the control panel with the cable clamp (AD75CK), etc.

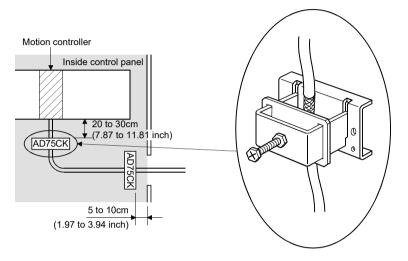


• Cable clamp (Recommended product)

Manufacturer	Model name
	AERSBAN-DSET
Mitsubishi Electric	AERSBAN-ESET
	AD75CK

▲CAUTION

Do not ground the cable clamp to the top of control panel. Doing so may lead to damage by drop of screws, etc. during installation or removing the cable clamp.

7.1.4 Example of measure against noise

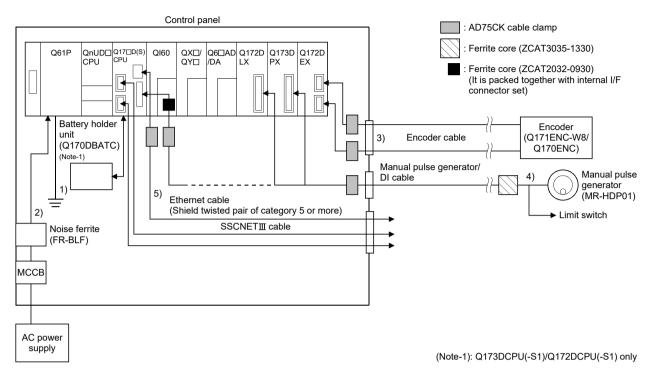

- 1) Ground the FG terminal of the Motion controller and 24VDC power supply module to the control panel.
- 2) Measure against noise of the power supply cable
 - Wire the power supply cable as short as possible using the twisted cable.
 - Set a line filter (FR-BLF) near the exit/entrance of control panel and in secondary side of MCCB. (Approx. 4 turn)
- 3) Measure against noise of the encoder cable
 - When the cables are extracted from the control panel, ground the cables at a position 5 to 10cm (1.97 to 3.94inch) away from the exit/entrance of the control panel with the cable clamp, etc.
 - Refer to the Section 2.5.5 and Appendix 1.2 for encoder cable.

 Use shielded twisted pair cable.
- 4) Measure against noise of the manual pulse generator/external signal input cable
 - When the cables are extracted from the control panel, ground the cables at a position 5 to 10cm (1.97 to 3.94inch) away from the exit/entrance of the control panel with the cable clamp, etc.
 - Refer to the Section 2.5.6 for manual pulse generator.
 Use shielded twisted pair cable.
 - Refer to the Section 2.5.4 for external signal input.
 - Use shielded twisted pair cable between the external signal and $\mathop{\rm COM}\nolimits$ signal.
 - When the cables are connected to internal I/F connector of Q173DSCPU/Q172DSCPU and extracted from the control panel, ground the cables at a position 20 to 30cm (1.97 to 3.94inch) away from the module with the cable clamp, etc. Use a shielded cable.
 - Refer to the Section 2.5.1and Appendix 1.5 for internal I/F connector cable.
- 5) Measure against noise of the internal I/F cable
 - When the cables are extracted from the control panel, ground the cables at a position 20 to 30cm (1.97 to 3.94inch) away from the module with the cable clamp, etc. Use a shielded cable.
 - (1) Refer to Section 2 for the following cables.
 - · Ethernet cable
 - USB cable

 - · Battery cable
 - · Forced stop input cable

(2) In wiring inside the panel, the power line connected to the power or servo amplifier and the communication cable such as bus connection cable or network cable must not be mixed. If the cables are installed closely with each other for wiring reasons, using a separator (made of metal) can make the cables less influenced by noise.

Mixing the power line and communication cable may cause malfunction due to noise.

MEMO		

APPENDICES

APPENDIX 1 Cables

In this cable connection diagram, maker names of connectors are omitted. Refer to "APPENDIX 2.8 Connector" for maker names of connectors.

APPENDIX 1.1 SSCNETⅢ cables

In general, use the SSCNETII cables available as our products. Refer to APPENDIX 1.7 for long distance cables exceeding 50(164.04)[m(ft.)] and ultra-long bending life cables.

(1) Model explanation

Numeral in the column of cable length on the table is a symbol put in the "□" part of cable model. Cables of which symbol exists are available.

	Cable length [m(ft.)]									Application/			
Cable model	0.15 (0.49)	0.3 (0.98)	0.5 (1.64)	1 (3.28)	3 (9.84)	5 (16.40)	10 (32.81)	20 (65.62)	30 (98.43)	40 (131.23)	50 (164.04)	Bending life	remark
MR-J3BUS□M	015	03	05	1	3							Standard	Standard cord for inside panel
MR-J3BUS□M-A						5	10	20				I Standard	Standard cable for outside panel
MR-J3BUS□M-B (Note-1)									30	40	50		Long distance cable

 $(Note-1): For the cable of less than \ 30 [m] (98.43 [ft.]), contact your nearest \ Mitsubishi \ Electric sales \ representative.$

(2) Specifications

SSCNET Ⅲ ca	ble model	MR-J3E	BUS□M	MR-J3BUS□M-A	MR-J3BUS□M-B	
SSCNET Ⅲ ca	ble length [m(ft.)]	0.15 (0.49)	0.3 to 3 (0.98 to 9.84)	5 to 20 (16.40 to 65.62)	30 to 50 (98.43 to 164.04)	
	Minimum bend radius [mm(inch)]	25(0	0.98)	Enforced covering cord: 50 (1.97) Cord: 25 (0.98)	Enforced covering cord: 50 (1.97) Cord: 30(1.18)	
	Tension strength [N]	70	140	420 (Enforced covering cord)	980 (Enforced covering cord)	
	Temperature range for use [°C(°F)] (Note-1)		-20 to 70 (-4 to 158)			
	Ambient					
Optical cable (Cord)	External appearance [mm(inch)]	2.2±0.07 (0.09±0.003) 10.16 ^(Note-2) (0.40)	(0.17±0.004)	4.4±0.1 (0.17±0.004) (0.17±0.004) (0.00000000000000000000000000000000000	7.6±0.5 (0.30±0.02)	

(Note-1): This temperature range for use is the value for optical cable (cord) only.

(Note-2): Dimension of connector fiber insert location. The distance of two cords is changed by how to bend it.

POINTS

- (1) If the end face of cord tip for the SSCNETII cable is dirty, optical transmission is interrupted and it may cause malfunctions. If it becomes dirty, wipe with a bonded textile, etc. Do not use solvent such as alcohol.
- (2) Do not add impossible power to the connector of the SSCNETⅢ cable.
- (3) When incinerating the SSCNET acable (optical fiber), hydrogen fluoride gas or hydrogen chloride gas which is corrosive and harmful may be generated. For disposal of the SSCNET cable (optical fiber), request for specialized industrial waste disposal services who has incineration facility for disposing hydrogen fluoride gas or hydrogen chloride gas.

(a) MR-J3BUS□M

1) Model explanation


Type: MR-J3BUS	<u>]</u> M-	*	
		Symbol	Cable type
		None	Standard cord for inside panel
		Α	Standard cable for outside panel
		В	Long distance cable

Symbol	Cable length [m(ft.)]
015	0.15(0.49)
03	0.3(0.98)
05	0.5(1.64)
1	1(3.28)
3	3(9.84)
5	5(16.40)
10	10(32.81)
20	20(65.62)
30	30(98.43)
40	40(131.23)
50	50(164.04)

2) Exterior dimensions

• MR-J3BUS015M


[Unit: mm(inch)]

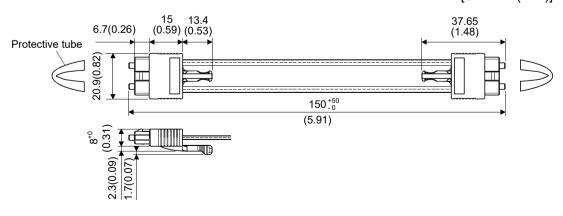

• MR-J3BUS03M to MR-J3BUS3M

Refer to the table of this section (1) for cable length (L).

 [Unit: mm(inch)]




(Note): Dimension of connector part is the same as that of MR-J3BUS015M.

• MR-J3BUS5M-A to MR-J3BUS20M-A, MR-J3BUS30M-B to MR-J3BUS50M-B

Refer to the table of this section (1) for cable length (L).

000015777	Variation [mm(inch)]			
SSCNETⅢ cable	Α	В		
MR-J3BUS5M-A to MR-J3BUS20M-A	100(3.94)	30(1.18)		
MR-J3BUS30M-B to MR-J3BUS50M-B	150(5.91)	50(1.97)		

 [Unit: mm(inch)]



(Note): Dimension of connector part is the same as that of MR-J3BUS015M.

POINTS

Keep the cap and the tube for protecting light cord end of SSCNET**I** cable in a plastic bag with a zipper of SSCNET**I** cable to prevent them from becoming dirty.

APPENDIX 1.2 Serial absolute synchronous encoder cable

Generally use the serial absolute synchronous encoder cables available as our products. If the required length is not found in our products, fabricate the cable on the customer side.

(1) Selection

The following table indicates the serial absolute synchronous encoder cables used with the serial absolute synchronous encoder.

Connector sets are also available for your fabrication.

Table 1.1 Encoder cable models

Туре	Length [m(ft.)]	Remark	
Q170ENCCBL□M	2(6.56), 5(16.40), 10(32.81),	Q171ENC-W8/Q170ENC ↔ Q172DEX	
Q170ENCCBL□M-A	20(65.62), 30(98.43), 50(164.04)	Q171ENC-W8 ↔ MR-J4-□B-RJ	

Use the following or equivalent twisted pair cables as the serial absolute synchronous encoder cables.


Table 1.2 Connector sets

Connector sets type	Description	Remark	
Q170ENCCNS • Connector shell kits • Plug cable clamp		Q171ENC-W8/Q170ENC ↔ Q172DEX	
MR-J3CN2	Servo amplifier connector	Q171ENC-W8 ↔ MR-J4-□B-RJ	

Table 1.3 Wire specifications

		Characteristics of one core				
Core size [mm ²]	Number of cores	Structure [Number of wires/mm]	Conductor resistance [Ω/km]	Insulating sheath OD d[mm (inch)] (Note-1)	Finished OD [mm (inch)] (Note-2)	Remark
0.0	04 (40)	10/0.00	405	0.00 (0.005)	11.0 (0.43)	Q171ENC-W8/Q170ENC ↔ Q172DEX
0.2 24 (12 pair)	40/0.08 105 or less	105 or less	0.88 (0.035)	9.0 (0.35)	Q171ENC-W8 ↔ MR-J4-□B-RJ	

 (Note-1): "d" is as shown below.



(Note-2): Standard OD (Outside Diameter). Maximum OD is about 10% larger.

∆ CAUTION

When fabricating the encoder cable, do not make incorrect connection. Wrong connection will cause runaway or explosion.


(2) Q170ENCCBL□M(a) Model explanation

Type: Q170ENCCBL<u></u>M

Cable length [m(ft.)]	
2(6.56)	
5(16.40)	
10(32.81)	
20(65.62)	
30(98.43)	
50(164.04)	

(b) Connection diagram

When fabricating a cable, use the recommended wire and connector set (Q170ENCCNS) for encoder cable given on this section (1), and make the cable as shown in the following connection diagram. Maximum cable length is 50m(164.04ft.).

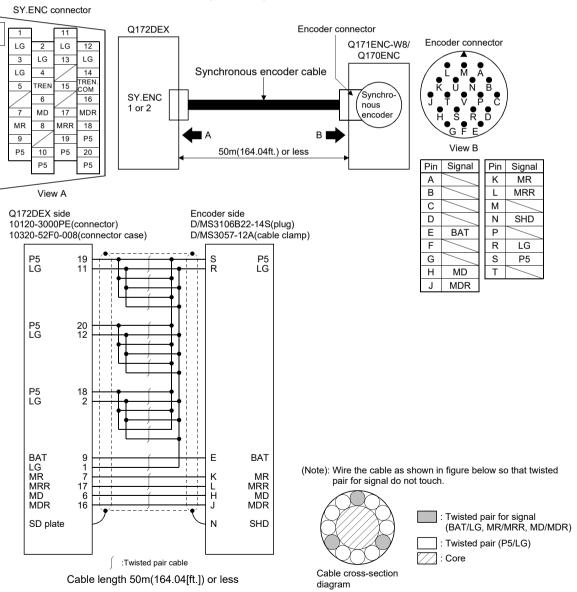

(3) Q170ENCCBL□M-A


(a) Model explanation

Type: Q170ENCCBL☐M-A

Symbol		Cable length [m(ft.)]	
	2	2(6.56)	
	5	5(16.40)	
-	10	10(32.81)	
2	20	20(65.62)	
3	30	30(98.43)	
į	50 50(164.04)		

(b) Connection diagram

When fabricating a cable, use the recommended wire and connector set (MR-J3CN2) for encoder cable given on this section (1), and make the cable as shown in the following connection diagram. Maximum cable length is 50m(164.04ft.).

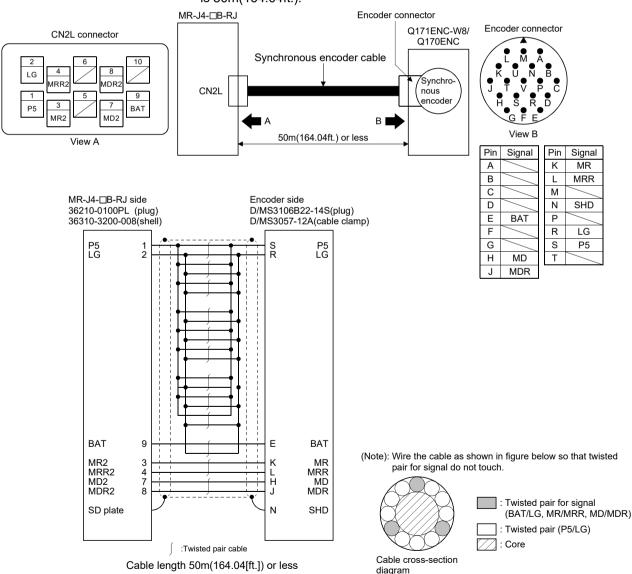


APPENDIX 1.3 Battery cable


Generally use the battery cable available as our products. If the required length is not found in our products, fabricate the cable on the customer side. Make the battery cable within 0.5m(1.64ft.).

(1) Q170DBATCBL□M

 (a) Model explanation



(b) Connection diagram

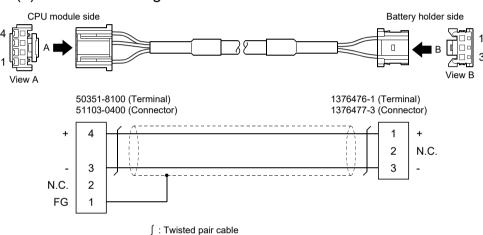

(Note): Use a cable of wire size AWG24.

APPENDIX 1.4 Forced stop input cable

Generally use the forced stop input cable available as our products. If the required length is not found in our products, fabricate the cable on the customer side. Make the forced stop input cable within 30m(98.43ft.).


(1) Q170DEMICBL□M


(a) Model explanation

Type : Q170DEMICBL $\underline{\square}$ M

Symbol	Cable length [m(ft.)]	
05	0.5(1.64)	
1	1(3.28)	
3	3(9.84)	
5	5(16.40)	
10	10(32.81)	
15	15(49.21)	
20	20(65.62)	
25	25(82.02)	
30	30(98.43)	

  (b) Connection diagram





(Note): Use a cable of wire size AWG22.

APPENDIX 1.5 Internal I/F connector cable

Fabricate the internal I/F connector cable on the customer side.

▲CAUTION

- When fabricating the internal I/F connector cable, do not make incorrect connection. Doing so may cause an operation failure or damage the module.
- When fabricating the internal I/F connector cable, be sure to attach a ferrite core (ZCAT2030-0930).

Not doing so may cause an operation failure or damage the module with noise.


(1) Differential-output type

(a) Connection diagram

Make the cable within 30m(98.43ft.).

Attach a ferrite core included with the internal I/F connector set within 1 to 5(0.39 to 1.97)[cm(inch)] from the Motion CPU module.

1) When using an external power supply

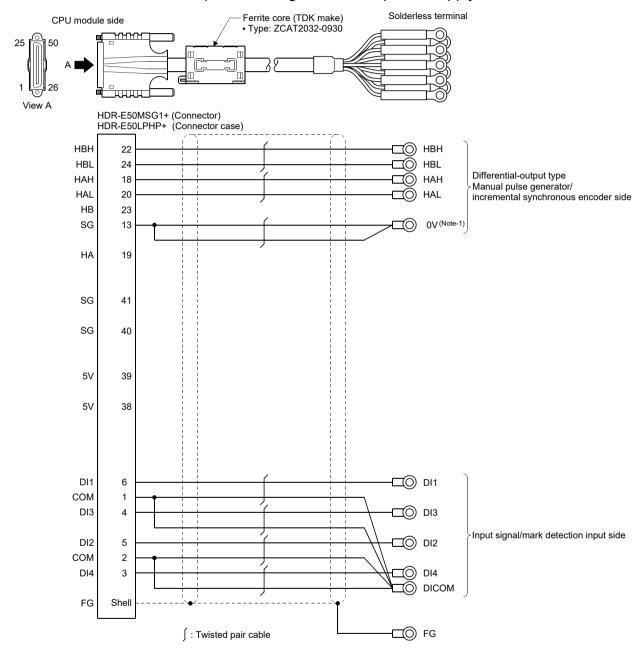

(Note-1): When using external power supply, connect SG to 0V of a separate power supply.

2) When using an internal power supply Ferrite core (TDK make) • Type: ZCAT2032-0930 Solderless terminal CPU module side 25 View A HDR-E50MSG1+ (Connector) HDR-E50LPHP+ (Connector case) □○ нвн HBH HBL 24 HBL 18 HAH HAH HAL 20 ΗВ 23 SG 13 Differential-output type НА 19 Manual pulse generator/ incremental synchronous encoder side SG 41 SG 40 5V 39 5V 5V 38 DI1 6 -**□**○ DI1 СОМ 1 4 -___ DI3 DI3 Input signal/mark detection input side DI2 5 **□** Dl2 2 COM 3 DI4 DICOM FG Shell □ □ □ FG : Twisted pair cable


(2) Voltage-output/Open-collector type

(a) Connection diagram

Make the cable within 10m(32.81ft.).

Attach a ferrite core included with the internal I/F connector set within 1 to 5(0.39 to 1.97)[cm(inch)] from the Motion CPU module.

1) When using an external power supply

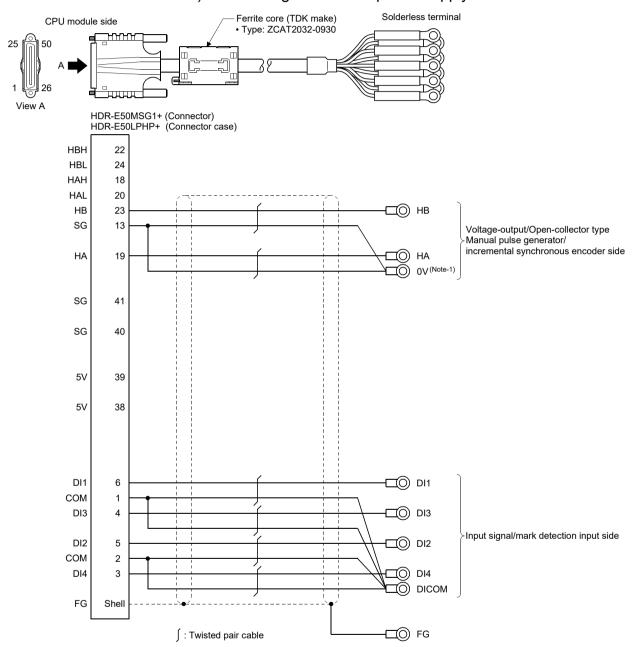


(Note-1): When using external power supply, connect SG to 0V of a separate power supply.


2) When using an internal power supply Ferrite core (TDK make) • Type: ZCAT2032-0930 Solderless terminal CPU module side 25 View A HDR-E50MSG1+ (Connector) HDR-E50LPHP+ (Connector case) НВН 24 HBL HAH 18 20 HAL 23 -□○ нв ΗВ SG 13 НΑ 19 **□** на Voltage-output/Open-collector type Manual pulse generator/ SG 41 \bigcirc 0V incremental synchronous encoder side SG 40 5V 39 5V 5V 38 DI1 -**□**○ DI1 6 COM 1 DI3 4 -□O DI3 Input signal/mark detection input side **□** Dl2 DI2 5 2 COM 3 DI4 □ D14 □O DICOM Shell -____ FG ∫ : Twisted pair cable

APPENDIX 1.6 RIO cable

Generally use the RIO cable available as our products. If the required length is not found in our products, fabricate the cable on the customer side. Make the RIO cable within 0.5m(1.64ft.).

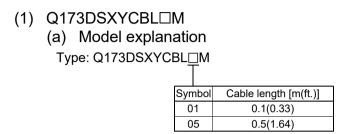

(b) Connection diagram

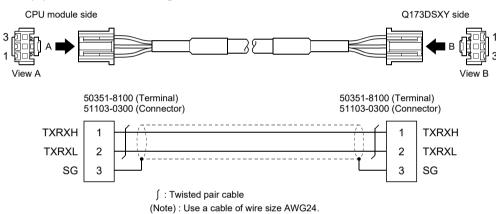

APPENDIX 1.7 SSCNETⅢ cables (SC-J3BUS□M-C) manufactured by Mitsubishi Electric System & Service Co., Ltd.

POINTS

- For the details of the SSCNET**II** cables, contact your local sales office.
- Do not look directly at the light generated from CN1A/CN1B connector of servo amplifier or the end of SSCNETI cable. The light can be a discomfort when it enters the eye.


The cable is available per 1[m] up to 100[m]. The number of the length (1 to 100) will be in the \square part in the cable model.

Oabla madal	Cable length [m(ft.)]	D and the solite	A E C / 1	
Cable model	1 to 100 (3.28 to 328.08)	Bending life	Application/remark	
SC-J3BUS□M-C	1 to 100	Ultra-long bending life	Long distance cable	


APPENDIX 2 Exterior Dimensions

APPENDIX 2.1 Motion CPU module


(1) Q172DSCPU

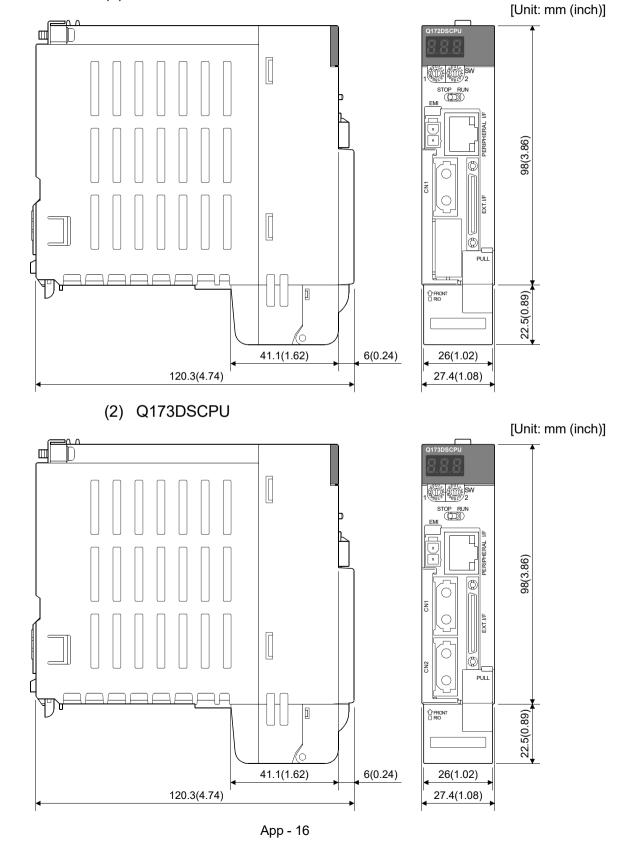


(3) Q172DCPU

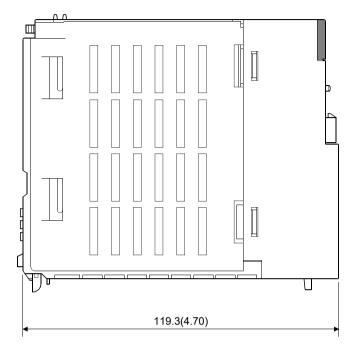


[Unit: mm (inch)]

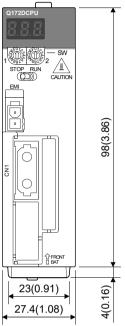


(4) Q173DCPU

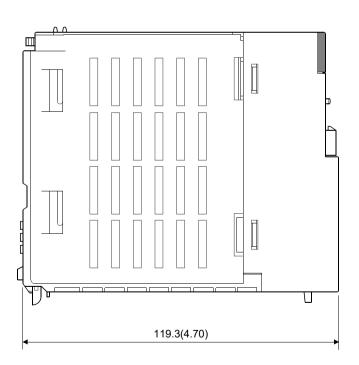

[Unit: mm (inch)]

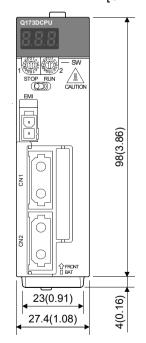

(5) Q172DCPU-S1

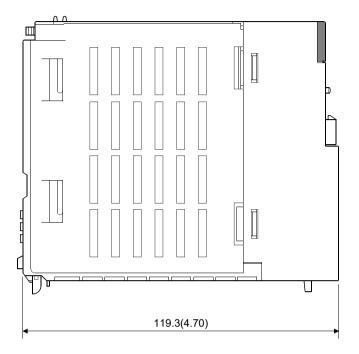

O172DCPU-S1

OTHERY

O


23(0.91)


27.4(1.08)

4(0.16)


[Unit: mm (inch)]

(6) Q173DCPU-S1

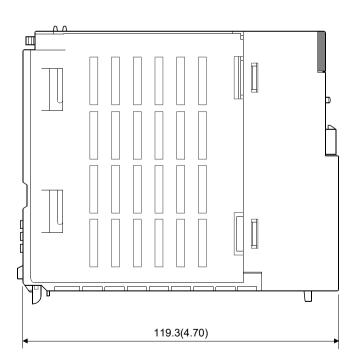


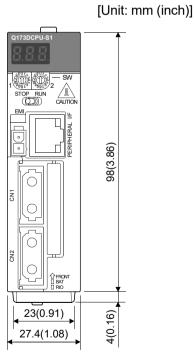


APPENDIX 2.2 Servo external signals interface module (Q172DLX)

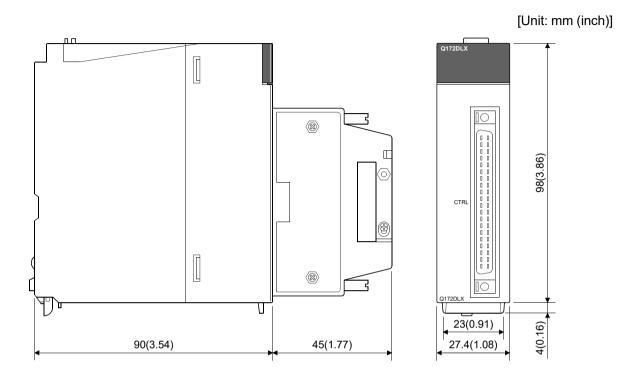


APPENDIX 2.3 Synchronous encoder interface module (Q172DEX)

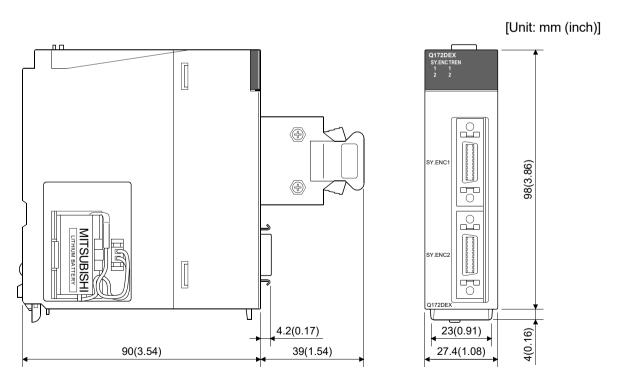

APPENDIX 2.4 Manual pulse generator interface module (Q173DPX)

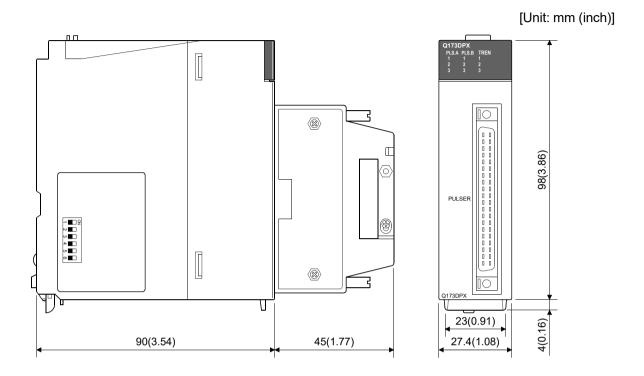



APPENDIX 2.5 Safety signal module (Q173DSXY)

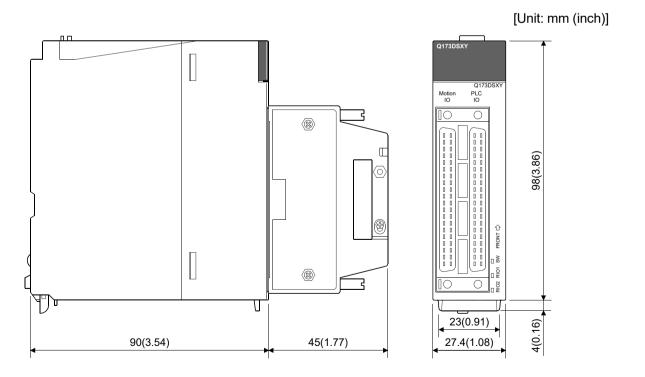


APPENDIX 2.6 Power supply module

 (1) Q61P-A1, Q61P-A2, Q61P, Q61P-D, Q62P, Q63P




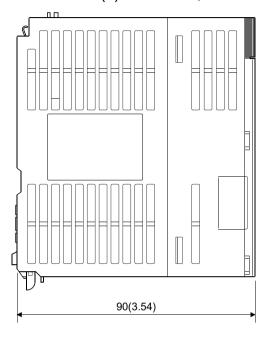


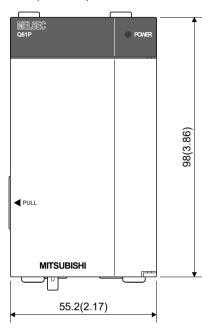


(2) Q64P


[Unit: mm (inch)]

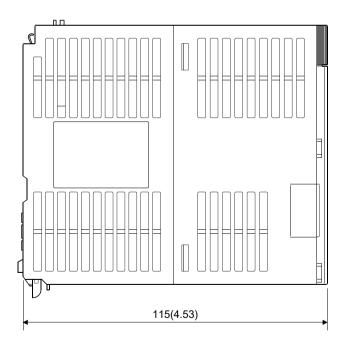

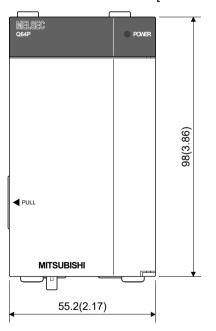


(3) Q64PN

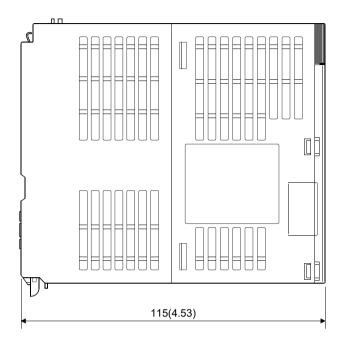

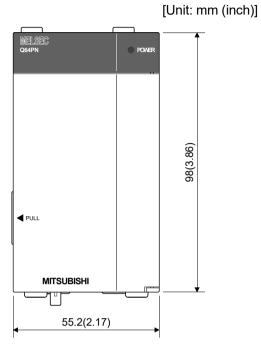

APPENDIX 2.7 Battery holder unit (Q170DBATC)

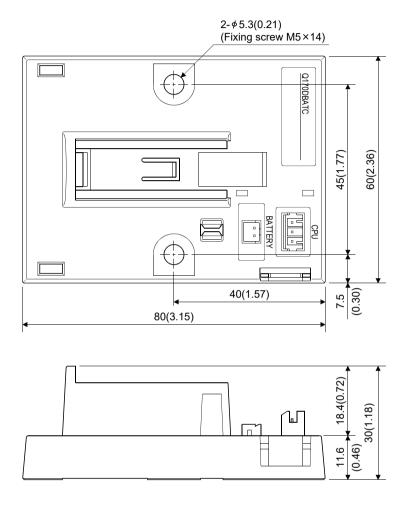

APPENDIX 2.8 Connector

(1) Cable connector for serial absolute synchronous encoder (3M Japan Limited make (MDR type))


Number of pins	Туре	Model	
		Connector	Connector case
20	Solder connection type (Quick release metal latch type)	10120-3000PE	10320-52F0-008
	Solder connection type (Threaded type)	10120-3000PE	10320-52A0-008
	Insulation displacement type (Quick release metal latch type)	10120-6000EL ^(Note)	10320-3210-000 ^(Note)

(Note): These connectors are not options. Please purchase them by customer.

(a) Solder connection type (Quick release metal latch type)


Type Connector : 10120-3000PE Connector case : 10320-52F0-008

[Unit: mm (inch)]

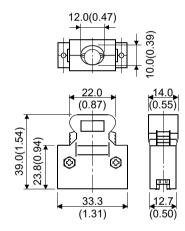

(b) Solder connection type (Threaded type)


Type Connector : 10120-3000PE Connector case : 10320-52A0-008

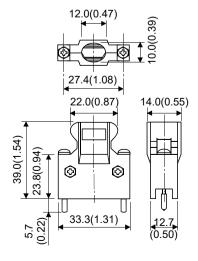

(c) Insulation displacement type (Quick release metal latch type)


Type Connector : 10120-6000EL Connector case : 10320-3210-000

[Unit: mm (inch)]

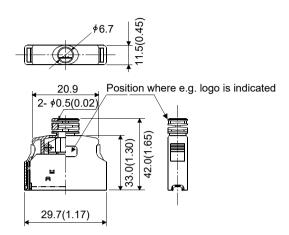


(2) Cable connector for serial absolute synchronous encoder (3M Japan Limited make (SCR type))

Type Plug: 36210-0100PL Shell: 36310-3200-008

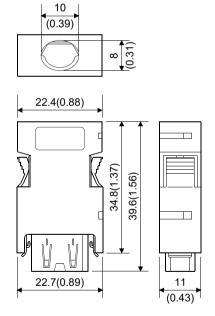

(3) SSCNETIII cable connector

[Unit: mm (inch)]

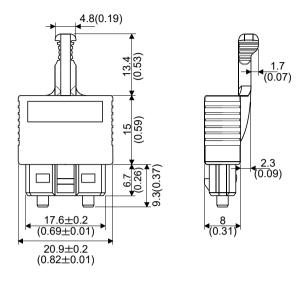



- (4) Battery cable connector
 - (a) Battery holder side (Tyco Electronics Japan G.K. make)

Type Connector: 1376477-3 Terminal: 1376476-1

  [Unit: mm (inch)]









9.5 (0.37)

(b) CPU module side (Molex, LLC make)

  Type Connector : 51103-0400 Terminal : 50351-8100






App - 26

(5) Forced stop input connector (Molex, LLC make)

Type Connector: 5557-02R-210
Terminal: 5556PBTL

[Unit: mm (inch)]

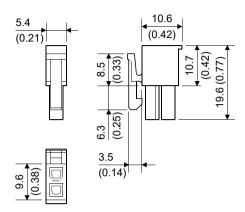


(6) Internal I/F connector (HONDA TSUSHIN KOGYO CO., LTD. make)

Type Connector : HDR-E50MSG1+ (Soldering type)

HDR-E50MAG1+ (AWG30) (Pressure-displacement type)


HDR-E50MG1+ (AWG28) (Pressure-displacement type)

Connector case: HDR-E50LPHP+

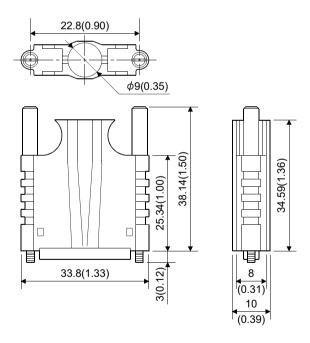


(7) RIO connector (Molex, LLC make)

Type Connector: 55103-300 Terminal: 50351-8100

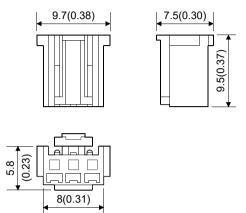


APPENDIX 2.9 Manual pulse generator (MR-HDP01)

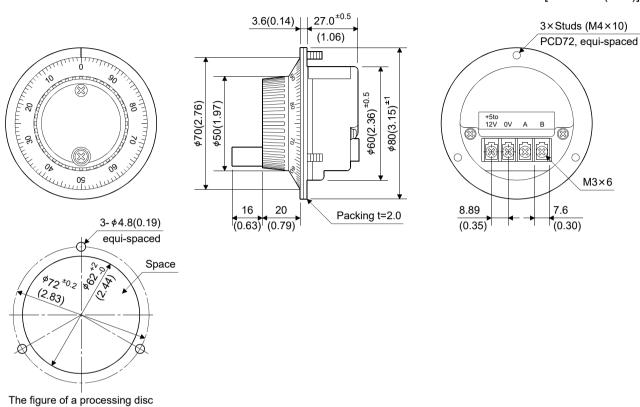


APPENDIX 2.10 Serial absolute synchronous encoder

(1) Q171ENC-W8

[Unit: mm (inch)]

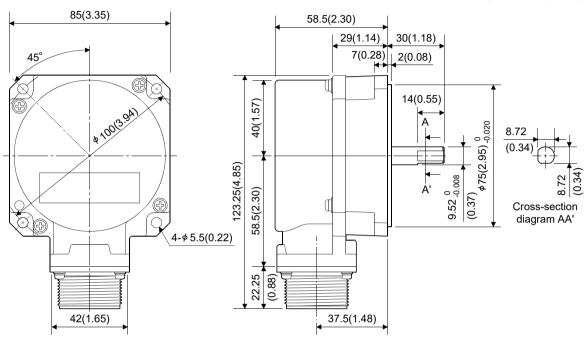

(2) Q170ENC

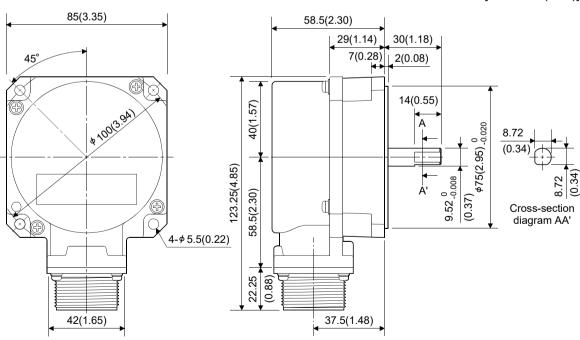

MEMO	

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

We will repair any failure or defect hereinafter referred to as "failure" in our FA equipment hereinafter referred to as the "Product" arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit is repaired or replaced.

[Gratis Warranty Term]

The term of warranty for Product is thirty six (36) months after your purchase or delivery of the Product to a place designated by you or forty two (42) months from the date of manufacture whichever comes first "Warranty Period". Warranty period for repaired Product cannot exceed beyond the original warranty period before any repair work.

[Gratis Warranty Range]

- (1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule. It can also be carried out by us or our service company upon your request and the actual cost will be charged. However, it will not be charged if we are responsible for the cause of the failure.
- (2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.
- (3) Even during the term of warranty, the repair cost will be charged on you in the following cases;
 - 1) A failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem
 - 2) A failure caused by any alteration, etc. to the Product made on your side without our approval
 - 3) A failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety device required by applicable laws and has any function or structure considered to be indispensable according to a common sense in the industry
 - 4) A failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
 - 5) Any replacement of consumable parts (battery, fan, etc.)
 - 6) A failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters
 - 7) A failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company
 - 8) Any other failures which we are not responsible for or which you acknowledge we are not responsible for

2. Onerous Repair Term after Discontinuation of Production

(1) We may accept the repair at charge for another seven (7) years after the production of the product is

The announcement of the stop of production for each model can be seen in our Sales and Service, etc.

(2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

3. Service in overseas countries

Our regional FA Center in overseas countries will accept the repair work of the Product; However, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

4. Exclusion of Loss in Opportunity and Secondary Loss from Warranty Liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

6. Precautions for Choosing the Products

- (1) For the use of our Motion controller, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in Motion controller, and a backup or fail-safe function should operate on an external system to Motion controller when any failure or malfunction occurs.
- (2) Our Motion controller is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these applications when used.
 - In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used.
 - We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

INFORMATION AND SERVICES

For further information and services, please contact your local Mitsubishi Electric sales office or representative. Visit our website to find our locations worldwide.

MITSUBISHI ELECTRIC Factory Automation Global Website Locations Worldwide www.MitsubishiElectric.com/fa/about-us/overseas/

TRADEMARKS

Microsoft and Windows are trademarks of the Microsoft group of companies.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as '™, or '®, are not specified in this manual.

IB(NA)-0300133-Q(2409)MEE MODEL: Q173D-U-E MODEL CODE: 1XB927

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.