


Programmable Controller

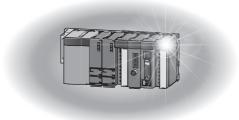

Type QD75P/QD75D Positioning Module User's Manual

- -QD75P1N
- -QD75P2N
- -QD75P4N
- -QD75D1N
- -QD75D2N
- -QD75D4N
- -QD75P1
- -QD75P2
- -QD75P4
- -QD75D1 -QD75D2
- -QD75D4




SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product only. For the safety precautions of the programmable controller system, refer to the user's manual for the CPU module used. In this manual, the safety precautions are classified into two levels: "AWARNING" and "ACAUTION".

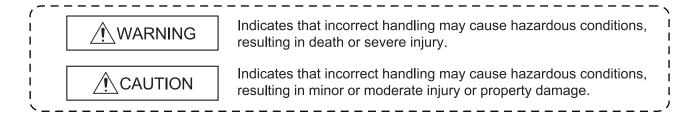

Under some circumstances, failure to observe the precautions given under "ACAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

⚠ WARNING

Provide a safety circuit outside the programmable controller so that the entire system will
operate safely even when an external power supply error or programmable controller fault
occurs.

Failure to observe this could lead to accidents for incorrect outputs or malfunctioning.

- (1) Configure an emergency stop circuit and interlock circuit such as a positioning upper limit/lower limit to prevent mechanical damage outside the programmable controller.
- (2) The machine OPR operation is controlled by the OPR direction and OPR speed data. Deceleration starts when the near-point dog turns ON. Thus, if the OPR direction is incorrectly set, deceleration will not start and the machine will continue to travel. Configure an interlock circuit to prevent mechanical damage outside the programmable controller.
- (3) When the module detects an error, normally deceleration stop or sudden stop will take place according to the parameter stop group settings. Set the parameters to the positioning system specifications. Make sure that the OPR parameter and positioning data are within the parameter setting values.

[Design Precautions]

↑ CAUTION

• Do not bundle or adjacently lay the connection cable connected to the module external I/O signals or drive unit with the main circuit line, power line, or the load line other than that for the programmable controller. Separate these by 100mm as a guide. Failure to observe this could lead to malfunctioning caused by noise, surge, or induction.

[Security Precautions]

↑ WARNING

 To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from external devices via the network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.

[Mounting Precautions]

⚠ CAUTION

- Use the programmable controller in an environment that meets the general specifications
 contained in QCPU User's Manual(Hardware Design, Maintenance and Inspection) to use.
 Using this programmable controller in an environment outside the range of the general
 specifications may cause electric shock, fire, malfunction, and damage to or deterioration of the
 product.
- While pressing the installation lever located at the bottom of module, insert the module fixing
 tab into the fixing hole in the base unit until it stops. Then, securely mount the module with the
 fixing hole as a supporting point.

Incorrect loading of the module can cause a malfunction, failure or drop.

When using the programmable controller in the environment of much vibration, tighten the module with a screw.

Tighten the screw in the specified torque range.

Undertightening can cause a drop, short circuit or malfunction.

Overtightening can cause a drop, short circuit or malfunction due to damage to the screw or module.

• Completely turn off the externally supplied power used in the system before mounting or removing the module.

Not doing so may damage the product.

[Wiring Precautions]

⚠ WARNING

• Always confirm the terminal layout before connecting the wires to the module.

[Wiring Precautions]

∴ CAUTION

- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Tighten the connector screws within the specified torque range.
 Undertightening can cause short circuit, fire, or malfunction.
 Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
- Connectors for external devices must be crimped with the tool specified by the manufacturer, or must be correctly soldered. Incomplete connections may cause short circuit, fire, or malfunction.
- When disconnecting the cable from the module, do not pull the cable by the cable part.
 For the cable with connector, hold the connector part of the cable.
 Pulling the cable connected to the module may result in malfunction or damage to the module or cable.
- Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
- A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring. Do not remove the film during wiring. Remove it for heat dissipation before system operation.

[Startup/Maintenance Precautions]

⚠ WARNING

• Completely turn off the externally supplied power used in the system before cleaning or tightening the screws.

Failure to turn all phases OFF could lead to electric shocks.

[Startup/Maintenance Precautions]

↑ CAUTION

- Never disassemble or modify the module.
 Failure to observe this could lead to trouble, malfunctioning, injuries or fires.
- Completely turn off the externally supplied power used in the system before installing or removing the module.
 - Failure to turn all phases OFF could lead to module trouble or malfunctioning.
- Do not install/remove the module to/from the base unit, or the terminal block to/from the module more than 50 times after the first use of the product. (IEC 61131-2 compliant)
 Failure to do so may cause malfunction.
- Before starting test operation, set the parameter speed limit value to the slowest value, and make sure that operation can be stopped immediately if a hazardous state occurs.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the module.
 - Failure to do so may cause a failure or malfunctions of the module.

[Precautions for use]

↑ CAUTION

• Note that when the reference axis speed is designated for interpolation operation, the speed of the partner axis (2nd axis, 3rd axis and 4th axis) may be larger than the set speed (larger than the speed limit value).

[Disposal Precautions]

↑ CAUTION

· When disposing of the product, handle it as industrial waste.

• CONDITIONS OF USE FOR THE PRODUCT •

- (1) MELSEC programmable controller ("the PRODUCT") shall be used in conditions;
 - i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

 MITSUBISHI ELECTRIC SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI ELECTRIC USER'S, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT. ("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.
- Notwithstanding the above restrictions, Mitsubishi Electric may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi Electric and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTs are required. For details, please contact the Mitsubishi Electric representative in your region.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

 $*$ The manual number is given on the bottom left of the back cover.

ackage,
duct names
tions,
on 3.2.4,
ction 5.1.3,
Section 6.2
ection 8.2.5,
2.3,
1.1,
ection 13.4,
ection 15.4,
- 0.4
า 3.1,
ction 6.5.4,
7,
1.1,
7.3,
,
on 2.4,
,
1,
7.10,
on 8.2.6,
3.7,

* The manual number is given on the bottom left of the back cover.

		* The manual number is given on the bottom left of the back cover.
Print Date	* Manual Number	Revision
Nov., 2004	SH (NA)-080058-G	Partial corrections and additions SAFETY INSTRUCTIONS, Section 1.4, Section 2.3, Section 2.4, Section 4.2.1, Section 4.3.1, Section 4.5.1, Section 5.1.7, Section 5.2.1, Section 5.2.6, Section 5.6.2, Section 6.1, Section 9.2.19, Section 12.2.1, Section 12.4.4, Section 12.7.4, Appendix 1.1, Appendix 9.1
Jun., 2005	SH (NA)-080058-H	Partial corrections and additions Section 5.1.2, Section 9.1.2, Section 9.2.10, Section 9.2.21, Section 10.3.8, Section 11.4.1, Section 12.5.2, Section 12.7.1, Section 12.7.6, Section 15.1, Section 15.2
Aug., 2006	SH (NA)-080058-I	Partial corrections and additions Section 3.4.4, Section 5.2.1, Section 14.5 to 14.7, Appendix 6.1, INDEX
Jul., 2008	SH (NA)-080058-J	Partial corrections and additions SAFETY INSTRUCTIONS, ABOUT MANUALS, Compliance with the EMC and Low Voltage Directives, Section 1.3, Section 2.3, 2.4, Section 3.1, 3.4.1, Section 4.1.2, 4.2.1, 4.3.1, Section 5.1.2, 5.2.1, 5.2.4, 5.2.5, Section 6.2, Section 6.4, Section 9.2.16, 9.2.17, Section 12.6, Section 12.7.2, Section 14.3 to 14.7, Appendix 12,13
Oct., 2010	SH (NA)-080058-K	Full revision
Apr., 2011	SH (NA)-080058-L	Partial corrections and additions Section 3.4.1, Section 4.3.1, 4.3.2, Section 5.6.1, 5.7.2, Section 6.2, 6.4, Section 7.2, Section 8.2.7, 8.2.8, Section 9.2.3, 9.2.16, 9.2.18, Section 10.5, Section 11.2.1, Section 12.4.2, 12.6, 12.7.4, Section 13.2, 13.3, 13.5, Section 14.3, Appendix 3, Appendix 9.2, Appendix 10, 10.2, 10.3 Additions Appendix 10.4 Changed item numbers Appendix 10.4 to 10.12 → Appendix 10.5 to 10.13
Sep., 2011	SH (NA)-080058-M	Partial corrections and additions Generic Terms and Abbreviations, Component List, Section 1.1.1, 1.2.1, Section 2.2, 2.3, 2.4, Section 3.1, 3.4.1 to 3.4.4, Section 4.1.2, 4.3.2, Section 5.1.1, 5.1.7, 5.2.1 to 5.2.4, 5.3, 5.4, 5.6.1, 5.6.2, 5.7.1, 5.7.2, Section 6.1, 6.4, 6.5.3, Section 7.1.1, 7.1.2, Section 8.2.2, 8.2.5, 8.3.1, Section 9.1.2, 9.1.4, 9.2.9, 9.2.16 to 9.2.18, Section 11.1.1, 11.2.1, 11.3.1, 11.3.4, 11.4.1, 11.4.4, Section 12.3.2, 12.7.5, 12.7.7, Section 13.5, Section 14.3, 14.6, Section 15.3, 15.4, Appendix 1.1, Appendix 2.2, Appendix 10.1 to 10.13, Appendix 12 to 14 Additions Appendix 1.2 Addition model QD75P1N, QD75P2N, QD75P4N, QD75D1N, QD75D2N, QD75D4N

* The manual number is given on the bottom left of the back cover.

<u> </u>	<u> </u>	* The manual number is given on the bottom left of the back cover.
Print Date	* Manual Number	Revision
Dec., 2011	SH (NA)-080058-N	Partial corrections and additions COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES, Section 2.4, Section 3.4.2, Section 9.1.2, Appendix 2.2
Mar., 2012	SH (NA)-080058-O	Partial corrections and additions Section 3.2.1, Section 3.2.3, Section 3.2.4, Section 5.7.1, Section 9.1.2, Chapter 12, Section 12.1.1, Section 12.3, Appendix 1.1, Appendix 13 Additions Section 12.3.4
Jan., 2013	SH (NA)-080058-P	Partial corrections and additions Section 1.1.1, Section 1.2.3, Section 2.3, Section 3.4.1, Section 3.4.4, Section 5.2.1, Section 15.3, Appendix 3, Appendix 9.2, Appendix 10.14, Appendix 13
Jun., 2013	SH (NA)-080058-Q	Partial corrections and additions Section 2.3, Section 12.3.2
Jul., 2014	SH (NA)-080058-R	Partial corrections and additions Section 1.3, Section 5.6.2, Section 9.2.19, Section 9.2.21, Section 12.3.1
Feb., 2016	SH (NA)-080058-S	Partial corrections and additions Section 1.1.1, Section 1.3, Section 3.1, Section 3.2.1, Section 3.2.2, Section 3.2.4, Section 5.1.1, Section 5.1.2, Section 5.1.4, Section 5.2.3, Section 5.3, Section 5.6.2, Section 7.1.1, Section 7.2, Section 9.1, Section 9.1.1, Section 9.1.5, Section 9.1.6, Section 9.2.1, Section 12.4.1 to 12.4.3, Section 12.7.1, Section 13.2, Section 13.3, Section 15.3, Appendix 1.1, Appendix 2.2, Appendix 3, Appendix 10.9, Appendix 13 Additions Section 9.2.12, Section 9.2.13 Changed item numbers Section 9.2.12 to Section 9.2.23 → Section 9.2.14 to Section 9.2.25 Deletions Appendix 2.3
Jul., 2017	SH (NA)-080058-T	Partial corrections and additions Section 3.2.3, Section 4.3.1, Section 10.3.4, Section 12.1.1, Section 12.6, Section 14.3, Appendix 7.1, Appendix 12
Dec., 2019	SH (NA)-080058-U	Partial corrections and additions Appendix 9.2
May, 2024	SH (NA)-080058-V	Additions LIST OF DISCONTINUED MODELS Partial corrections and additions Section 2.2, Section 12.4.3

Japanese Manual Version SH-080047-AB

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

INTRODUCTION

Thank you for purchasing the Mitsubishi Electric general-purpose programmable controller MELSEC-Q Series. Always read through this manual, and fully comprehend the functions and performance of the Q Series programmable controller before starting use to ensure correct usage of this product.

When applying the program examples provided in this manual to an actual system, ensure the applicability and confirm that it will not cause system control problems.

Please make sure that the end users read this manual.

CONTENTS

SAFETY PRECAUTIONS CONDITIONS OF USE FOR THE PRODUCT REVISIONS INTRODUCTION CONTENTS ABOUT MANUALS USING THIS MANUAL COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES	AAAAAA-	5 6 9 9 17
GENERIC TERMS AND ABBREVIATIONS		
LIST OF DISCONTINUED MODELS		
COMPONENT LIST	A-	19
PART 1 PRODUCT SPECIFICATIONS AND HANDLING		
•		
1. PRODUCT OUTLINE	1- 1 to 1-	24
1.1 Positioning control		
1.1.1 Features of QD75		
1.1.2 Purpose and applications of positioning control		
1.1.3 Mechanism of positioning control		
1.1.4 Outline design of positioning system		
1.1.5 Communicating signals between QD75 and each module		
1.2 Flow of system operation		
1.2.1 Flow of all processes		
1.2.2 Outline of starting		
1.2.3 Outline of stopping		
1.2.4 Outline of restarting		
1.3 Restrictions on using a stepping motor		
1.4 Function additions/modifications according to function version B	1-	23
2. SYSTEM CONFIGURATION	2- 1 to 2-	10
2.1 General image of system	2	2
2.2 Configuration list		
2.3 Applicable system		
2.4 How to check the function version and SERIAL No.		
2.4 HOW to differ the function version and SENIAL NO.	2-	O

3. SPECIFICATIONS AND FUNCTIONS	3- 1 to 3-30
3.1 Performance specifications	
3.2 List of functions	
3.2.1 QD75 control functions	
3.2.2 QD75 main functions	
3.2.3 QD75 sub functions and common functions	3- 10
3.2.4 Combination of QD75 main functions and sub functions	3- 14
3.3 Specifications of input/output signals with CPU module	3- 16
3.3.1 List of input/output signals with CPU module	3- 16
3.3.2 Details of input signals (QD75 \rightarrow CPU module)	3- 17
3.3.3 Details of output signals (CPU module $ ightarrow$ QD75)	3- 18
3.4 Specifications of input/output interfaces with external devices	3- 19
3.4.1 Electrical specifications of input/output signals	3- 19
3.4.2 Signal layout for external device connection connector	3- 25
3.4.3 List of input/output signal details	3- 26
3.4.4 Input/output interface internal circuit	
4. INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT	4- 1 to 4- 16
4.1 Outline of installation, wiring and maintenance	
4.1.1 Installation, wiring and maintenance procedures	
4.1.2 Names of each part	
4.1.3 Handling precautions	
4.2 Installation	
4.2.1 Installation precautions	
4.3 Wiring	4- 8
4.3.1 Wiring precautions	4- 8
4.3.2 Wiring of the differential driver common terminal	4- 14
4.4 Checking installation and wiring	4- 15
4.4.1 Items to check when installation and wiring are completed	4- 15
4.5 Maintenance	4- 16
4.5.1 Maintenance precautions	4- 16
4.5.2 Disposal precautions	4- 16
5. DATA USED FOR POSITIONING CONTROL	5- 1 to 5-134
5.1 Types of data	
5.1.1 Parameters and data required for control	
5.1.2 Setting items for positioning parameters	
5.1.3 Setting items for OPR parameters	
5.1.4 Setting items for positioning data	
5.1.5 Setting items for block start data	
5.1.6 Setting items for condition data	
5.1.7 Types and roles of monitor data	
5.1.8 Types and roles of control data	5- 15

5.2 List of parameters	5- 18
5.2.1 Basic parameters 1	5- 18
5.2.2 Basic parameters 2	5- 24
5.2.3 Detailed parameters 1	5- 26
5.2.4 Detailed parameters 2	5- 36
5.2.5 OPR basic parameters	5- 45
5.2.6 OPR detailed parameters	5- 52
5.3 List of positioning data	5- 56
5.4 List of block start data	5- 74
5.5 List of condition data	5- 80
5.6 List of monitor data	5- 86
5.6.1 System monitor data	5- 86
5.6.2 Axis monitor data	5- 96
5.7 List of control data	5-110
5.7.1 System control data	5-110
5.7.2 Axis control data	5-114
SEQUENCE PROGRAM USED FOR POSITIONING CONTROL	6 1 1 5 6 16
6. SEQUENCE PROGRAM USED FOR POSITIONING CONTROL	6- 1 to 6-46
6.1 Precautions for creating program	6- 2
6.2 List of devices used	
6.3 Creating a program	
6.3.1 General configuration of program	
6.3.2 Positioning control operation program	
6.4 Positioning program examples	
6.5 Program details	
6.5.1 Initialization program	
6.5.2 Start details setting program	
6.5.3 Start program	
6.5.4 Continuous operation interrupt program	
6.5.5 Restart program	
6.5.6 Stop program	
7. MEMORY CONFIGURATION AND DATA PROCESS	7- 1 to 7- 12
7.1 Configuration and roles of QD75 memory	
7.1.1 Configuration and roles of QD75 memory	7- 2
/ 1 / PUTTOR MOMORY GROS CONTIGUISTION	
7.1.2 Buffer memory area configuration	

PART 2 CONTROL DETAILS AND SETTING

8. OPRICONTROL	8-	1 to 8-	- 24
8.1 Outline of OPR control			2
8.1.1 Two types of OPR control			
8.2.1 Outline of the machine OPR operation			
·			
8.2.2 Machine OPR method			
· · · · · ·			
8.2.4 OPR method (2): Stopper method 1)			
8.2.5 OPR method (3): Stopper method 2)			
8.2.6 OPR method (4): Stopper method 3)			
8.2.7 OPR method (5): Count method 1)			
8.2.8 OPR method (6): Count method 2)			
8.3 Fast OPR			
8.3.1 Outline of the fast OPR operation		8-	- 23
9. MAJOR POSITIONING CONTROL	9-	1 to 9-	140
9.1 Outline of major positioning controls			
9.1.1 Data required for major positioning control			
9.1.2 Operation patterns of major positioning controls			
9.1.3 Designating the positioning address			
9.1.4 Confirming the current value			
9.1.5 Control unit "degree" handling			
9.1.6 Interpolation control			
9.2 Setting the positioning data		9-	- 29
9.2.1 Relation between each control and positioning data		9-	- 29
9.2.2 1-axis linear control		9-	- 31
9.2.3 2-axis linear interpolation control		9-	- 33
9.2.4 3-axis linear interpolation control		9-	- 37
9.2.5 4-axis linear interpolation control		9	-43
9.2.6 1-axis fixed-feed control		9-	- 47
9.2.7 2-axis fixed-feed control (interpolation)		9-	- 49
9.2.8 3-axis fixed-feed control (interpolation)		9-	- 52
9.2.9 4-axis fixed-feed control (interpolation)		9-	- 57
9.2.10 2-axis circular interpolation control with sub point designation		9-	- 60
9.2.11 2-axis circular interpolation control with center point designation		9-	- 66
9.2.12 3-axis helical interpolation control with sub point designation		9-	- 74
9.2.13 3-axis helical interpolation control with center point designation			
9.2.14 1-axis speed control			
9.2.15 2-axis speed control			
9.2.16 3-axis speed control			
9.2.17 4-axis speed control			
9.2.18 Speed-position switching control (INC mode)			
9.2.19 Speed-position switching control (ABS mode)			

9.2.20 Position-speed switching control	9-123
9.2.21 Current value changing	9-130
9.2.22 NOP instruction	9-135
9.2.23 JUMP instruction	9-136
9.2.24 LOOP	9-138
9.2.25 LEND	9-139
10. HIGH-LEVEL POSITIONING CONTROL	10- 1 to 10-28
10.1 Outline of high-level positioning control	10- 2
10.1.1 Data required for high-level positioning control	
10.1.2 "Block start data" and "condition data" configuration	
10.2 High-level positioning control execution procedure	
10.3 Setting the block start data	10- 7
10.3.1 Relation between various controls and block start data	10- 7
10.3.2 Block start (normal start)	10- 8
10.3.3 Condition start	
10.3.4 Wait start	10- 11
10.3.5 Simultaneous start	10- 12
10.3.6 Repeated start (FOR loop)	10- 14
10.3.7 Repeated start (FOR condition)	10- 15
10.3.8 Restrictions when using the NEXT start	
10.4 Setting the condition data	
10.4.1 Relation between various controls and the condition data	10- 17
10.4.2 Condition data setting examples	10- 20
10.5 Multiple axes simultaneous start control	10- 21
10.6 Start program for high-level positioning control	10- 24
10.6.1 Starting high-level positioning control	10- 24
10.6.2 Example of a start program for high-level positioning control	10- 25
11. MANUAL CONTROL	11- 1 to 11- 34
11.1 Outline of manual control	11- 2
11.1.1 Three manual control methods	11- 2
11.2 JOG operation	11- 4
11.2.1 Outline of JOG operation	
11.2.2 JOG operation execution procedure	11- 7
11.2.3 Setting the required parameters for JOG operation	11- 8
11.2.4 Creating start programs for JOG operation	11- 10
11.2.5 JOG operation example	11- 13
11.3 Inching operation	11- 16
11.3.1 Outline of inching operation	
11.3.2 Inching operation execution procedure	
11.3.3 Setting the required parameters for inching operation	11- 20
11.3.4 Creating a program to enable/disable the inching operation	11- 21
11.3.5 Inching operation example	11- 24
11.4 Manual pulse generator operation	44 00
11.4.1 Outline of manual pulse generator operation	

11.4.2 Manual pulse generator operation execution procedure			11-	30
11.4.3 Setting the required parameters for manual pulse generator operation			11-	31
11.4.4 Creating a program to enable/disable the manual pulse generator operation			11-	32
12. CONTROL SUB FUNCTIONS	12-	1 to	12-1	10
12.1 Outline of sub functions			12	2
12.1.1 Outline of sub functions				
12.2 Sub functions specifically for machine OPR				
12.2.1 OPR retry function				
12.2.2 OP shift function				
12.3 Functions for compensating the control				
12.3.1 Backlash compensation function				
12.3.2 Electronic gear function				
12.3.3 Near pass function				
12.3.4 Output timing selection of near pass control				
12.4 Functions to limit the control				
12.4.1 Speed limit function				
12.4.2 Torque limit function				
12.4.3 Software stroke limit function				
12.4.4 Hardware stroke limit function			12-	39
12.5 Functions to change the control details				
12.5.1 Speed change function			12-	41
12.5.2 Override function			12-	48
12.5.3 Acceleration/deceleration time change function			12-	51
12.5.4 Torque change function			12-	56
12.5.5 Target position change function			12-	58
12.6 Absolute position restoration function			12-	62
12.7 Other functions			12-	73
12.7.1 Step function			12-	73
12.7.2 Skip function				
12.7.3 M code output function			12-	81
12.7.4 Teaching function				
12.7.5 Command in-position function				
12.7.6 Acceleration/deceleration processing function				
12.7.7 Pre-reading start function				
12.7.8 Deceleration start flag function				
12.7.9 Stop command processing for deceleration stop function				
12.7.5 Stop command processing for deceleration stop function			12-1	00
13. COMMON FUNCTIONS	13-	1 to	o 13-	8
40.4.0.4%	_	_	40	^
13.1 Outline of common functions				
13.2 Parameter initialization function				
13.3 Execution data backup function				
13.4 External I/O signal logic switching function				
13.5 External I/O signal monitor function			13-	8

14. DEDICATED INSTRUCTIONS	14- 1 to 14- 24
14.1 List of dedicated instructions	14 2
14.2 Interlock during dedicated instruction is executed	
14.3 Z.ABRST1, Z.ABRST2, Z.ABRST3, Z.ABRST4	
14.4 ZP.PSTRT1, ZP.PSTRT2, ZP.PSTRT3, ZP.PSTRT4	
14.5 ZP.TEACH1, ZP.TEACH2, ZP.TEACH3, ZP.TEACH4	
14.6 ZP.PFWRT	
14.7 ZP.PINIT	14- 20
15. TROUBLESHOOTING	15- 1 to 15- 50
15.1 Troubleshooting	15_ 2
15.2 Error and warning details	
-	
15.3 List of errors	
15.4 List of warnings	15- 42
APPENDICES Appendix	- 1 to Appendix-164
Appendix 1 Version up of the functions	• •
Appendix 1.1 Comparison of functions according to function versions	
Appendix 1.2 Precautions for the replacement of QD75P□/QD75D□ with QD75P□	
A	• •
Appendix 2 Format sheets	• •
Appendix 2.1 Positioning Module operation chart	• •
Appendix 2.2 Parameter setting value entry table	• • • • • • • • • • • • • • • • • • • •
Appendix 3 Positioning data (No. 1 to 600) List of buffer memory addresses	• • •
Appendix 4 Connection examples with servo amplifiers manufactured by MITSUBISHI	•
	• • •
Appendix 4.1 Connection example of QD75D□N and MR-J3- □ A (Differential drive	
Appendix 4.2 Connection example of QD75D□N and MR-H □ A (Differential driver)	• •
Appendix 4.3 Connection example of QD75D□N and MR-J2/J2S- □ A (Differential	,
Appendix 4.4 Connection example of QD75D□N and MR-C □ A (Differential driver)	• • •
Appendix 5 Connection examples with stepping motors manufactured by ORIENTALM	OTOR Co., Ltd.
	Appendix- 52
Appendix 5.1 Connection example of QD75P□N and VEXTA UPD (Open collector).	Appendix- 52
Appendix 6 Connection examples with servo amplifiers manufactured by Panasonic Co	•
Appendix 6.1 Connection example of QD75D N and MINAS-A series (Differential d	
	, , ,
Appendix 7 Connection examples with servo amplifiers manufactured by SANYO DENI	
Appendix 7.1 Connection example of OD75DDN and DVO series (Differential driver)	
Appendix 7.1 Connection example of QD75D and PYO series (Differential driver)	• • •
Appendix 8 Connection examples with servo amplifiers manufactured by YASKAWA El	•
Appendix 8.1 Connection example of QD75D⊡N and Σ-II series (Differential driver).	• • • • • • • • • • • • • • • • • • • •
	• • •
Appendix 9 Comparisons with conventional positioning modules	• •
Appendix 9.1 Comparisons with A1SD71S2 model	Appendix- 56

Appendix 9.2 Comparisons with A1SD75P1-S3/A1SD75P2-S3/ A1SD75P3-S3 m	odelsAppendix- 57
Appendix 10 When using GX Works2	Appendix- 80
Appendix 10.1 Adding a module	Appendix- 81
Appendix 10.2 Setting parameters	Appendix- 82
Appendix 10.3 Setting auto refresh	Appendix- 87
Appendix 10.4 Positioning monitor	Appendix- 88
Appendix 10.5 Positioning test	Appendix- 98
Appendix 10.6 Wave trace	Appendix-106
Appendix 10.7 Location trace	Appendix-109
Appendix 10.8 Parameter initialization function	Appendix-112
Appendix 10.9 Execution data backup function	Appendix-114
Appendix 10.10 External I/O signal logic switching function	Appendix-116
Appendix 10.11 External I/O signal monitor function	Appendix-117
Appendix 10.12 History monitor function	Appendix-118
Appendix 10.13 Checking errors	Appendix-120
Appendix 11 MELSEC Explanation of positioning terms	Appendix-124
Appendix 12 Positioning control troubleshooting	Appendix-144
Appendix 13 List of buffer memory addresses	Appendix-150
Appendix 14 External dimension drawing	Appendix-159
NDEX	Index- 1 to Index- 12

ABOUT MANUALS

The following manuals are also related to this product. In necessary, order them by quoting the details in the tables below.

Related Manuals

Manual Name	Manual Number (Model Code)
GX Configurator-QP Version 2 Operating Manual Data creation (such as parameters and positioning data) and operations of transferring data to modules, positioning monitor, and tests using GX Configurator-QP (sold separately) ^{*1}	SH-080172 (13JU19)
GX Developer Version 8 Operating Manual Operating methods of GX Developer, such as programming, printing, monitoring, and debugging (sold separately)	SH-080373E (13JU41)
GX Works2 Version1 Operating Manual (Common) System configuration, parameter settings, and online operations (common to Simple project and Structured project) of GX Works2	SH-080779ENG (13JU63)
GX Works2 Version1 Operating Manual (Intelligent Function Module) Parameter settings, monitoring, and operations of the pre-defined protocol support function of intelligent function modules, using GX Works2	SH-080921ENG (13JU69)

^{*1:} The manual is included in the CD-ROM of the software package in a PDF-format file.

For users interested in buying the manual separately, a printed version is available. Please contact us with the manual number (model code) in the list above.

USING THIS MANUAL

■ The symbols used in this manual are shown below.

Symbol indicating positioning parameter and OPR parameter item.
Symbol indicating positioning data, block start data and condition
data item.
Symbol indicating monitor data item.
Symbol indicating control data item.

(A serial No. is inserted in the * mark.)

- Representation of numerical values used in this manual.
 - Buffer memory addresses, error codes and warning codes are represented in decimal.
 - X/Y devices are represented in hexadecimal.
 - Setting data and monitor data are represented in decimal or hexadecimal.
 Data ended by "H" are represented in hexadecimal.

COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES

(1) Method of ensuring compliance

To ensure that Mitsubishi Electric programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

- QCPU User's Manual (Hardware Design, Maintenance and Inspection)
- Safety Guidelines (this manual is included with the CPU module or base unit)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

(2) Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to Section 4.3.1.

GENERIC TERMS AND ABBREVIATIONS

Unless specially noted, the following generic terms and abbreviations are used in this manual.

Generic term/abbreviation	Details of generic term/abbreviation
CPU module	Generic term for CPU module on which QD75 can be mounted.
QD75	Generic term for positioning module QD75P1N, QD75P2N, QD75P4N, QD75D1N, QD75D2N,
	QD75D4N, QD75P1, QD75P2, QD75P4, QD75D1, QD75D2, and QD75D4.
	The module type is described to indicate a specific module.
QD75P□N	Generic term for positioning module QD75P1N, QD75P2N, QD75P4N.
QD75D□N	Generic term for positioning module QD75D1N, QD75D2N, QD75D4N.
QD75P□	Generic term for positioning module QD75P1, QD75P2, QD75P4.
QD75D□	Generic term for positioning module QD75D1, QD75D2, QD75D4.
Peripheral device	Generic term for DOS/V personal computer that can run the following "GX Developer" and "GX Configurator-QP".
GX Configurator-QP	Abbreviation for GX Configurator-QP (SW2D5C-QD75P-E or later).
GX Developer	Abbreviation for GX Developer (SW4D5C-GPPW-E or later).
GX Works2	Product name of the software package for the MELSEC programmable controllers.
Drive unit (servo amplifier)	Abbreviation for pulse input compatible drive unit (servo amplifier).
Manual pulse generator	Abbreviation for manual pulse generator (prepared by user).
DOS/V personal computer	IBM PC/AT [®] and compatible DOS/V compliant personal computer.
Personal computer	Generic term for personal computer which supports Windows [®] .
Workpiece	Generic term for moving body such as workpiece and tool, and for various control targets.
Axis 1, axis 2, axis 3, axis 4	Indicates each axis connected to QD75.
1-axis, 2-axis, 3-axis, 4-axis	Indicates the number of axes. (Example: 2-axis = Indicates two axes such as axis 1 and axis
	2, axis 2 and axis 3, and axis 3 and axis 1.)

LIST OF DISCONTINUED MODELS

The following table lists discontinued models described in this manual. For onerous repair term after discontinuation of production, refer to WARRANTY in this manual.

Model	Production discontinuation
QD75P1	September 2021
QD75P2	September 2021
QD75P4	September 2021
QD75D1	September 2021
QD75D2	September 2021
QD75D4	September 2021

COMPONENT LIST

The table below shows the component included in respective positioning modules:

Module name	Description	Quantity
QD75P1N	QD75P1N Positioning Module(1-axis open collector output system)	1
QD75P2N	QD75P2N Positioning Module(2-axes open collector output system)	1
QD75P4N	QD75P4N Positioning Module(4-axes open collector output system)	1
ODZEDANI	QD75D1N Positioning Module(1-axis differential driver output system)	1
QD75D1N	Differential driver common terminal	1
ODZEDONI	QD75D2N Positioning Module(2-axes differential driver output system)	1
QD75D2N	Differential driver common terminal	1
00750411	QD75D4N Positioning Module(4-axes differential driver output system)	1
QD75D4N	Differential driver common terminal	1
QD75P1	QD75P1 Positioning Module(1-axis open collector output system)	1
QD75P2	QD75P2 Positioning Module(2-axes open collector output system)	1
QD75P4	QD75P4 Positioning Module(4-axes open collector output system)	1
OD75D4	QD75D1 Positioning Module(1-axis differential driver output system)	1
QD75D1	Differential driver common terminal	1
007500	QD75D2 Positioning Module(2-axes differential driver output system)	1
QD75D2	Differential driver common terminal	1
QD75D4	QD75D4 Positioning Module(4-axes differential driver output system)	1
	Differential driver common terminal	1

MEMO			

PART 1 PRODUCT SPECIFICATIONS AND HANDLING

PART 1 is configured for the following purposes (1) to (5).

- (1) To understand the outline of positioning control, and the QD75 specifications and functions
- (2) To carry out actual work such as installation and wiring
- (3) To set parameters and data required for positioning control
- (4) To create a sequence program required for positioning control
- (5) To understand the memory configuration and data transmission process

Read PART 2 for details on each control.

CHAPTER 1	PRODUCT OUTLINE	1- 1 to 1-	24
CHAPTER 2	SYSTEM CONFIGURATION	2- 1 to 2-	10
CHAPTER 3	SPECIFICATIONS AND FUNCTIONS	3- 1 to 3-	30
CHAPTER 4	INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT	4- 1 to 4-	16
CHAPTER 5	DATA USED FOR POSITIONING CONTROL	5- 1 to 5-1	34
CHAPTER 6	SEQUENCE PROGRAM USED FOR POSITIONING CONTROL	6- 1 to 6-	46
CHAPTER 7	MEMORY CONFIGURATION AND DATA PROCESS	7- 1 to 7-	12

MEMO

CHAPTER 1 PRODUCT OUTLINE

The purpose and outline of positioning control using QD75 are explained in this chapter. Reading this chapter will help you understand what can be done using the positioning system and which procedure to use for a specific purpose.

By understanding "What can be done", and "Which procedure to use" beforehand, the positioning system can be structured smoothly.

1.1	Positio	ning control	1- 2	2
	1.1.1	Features of QD75	1- 2	2
	1.1.2	Purpose and applications of positioning control	1- ;	5
	1.1.3	Mechanism of positioning control	1-	7
	1.1.4	Outline design of positioning system	1- 9	9
	1.1.5	Communicating signals between QD75 and each module	1- 12	2
1.2	Flow of	system operation	1- 1	5
	1.2.1	Flow of all processes	1- 1	5
	1.2.2	Outline of starting	1- 18	3
		Outline of stopping		
	1.2.4	Outline of restarting	1- 22	2
1.3		tions on using a stepping motor		
1.4	Function	on additions/modifications according to function version B	1- 23	3

1.1 Positioning control

1

1.1.1 Features of QD75

The features of the QD75 are shown below.

- (1) Availability of one, two, and four axis modules
 - (a) The pulse output types of the available modules are either the open collector output system or the differential driver output system. A module can be selected from the following depending on the drive unit type and the number of axes. (Refer to Section 2.2.)
 - Open collector output system: QD75P1N/QD75P2N/QD75P4N (QD75P1/QD75P2/QD75P4)
 - Differential driver output system: QD75D1N/QD75D2N/QD75D4N (QD75D1/QD75D2/QD75D4)
 - (b) For connecting any of the QD75 modules to the base unit, a single slot and 32 dedicated I/O channels are required.
 Within the limit imposed by the maximum number of inputs and outputs supported by the CPU module, up to 64 modules can be used. (Refer to Section 3.1.)

(2) Wide variety of positioning control functions

- (a) A wide variety of positioning control functions essential to any positioning system are supported: positioning to an arbitrary position, fixed-feed control, equal-speed control, and so on. (Refer to Section 5.3 and 9.2.)
 - Up to 600 positioning data items, including such information as positioning addresses, control systems, and operation patterns, can be prepared for each axis.
 - Using the prepared positioning data, the positioning control is performed independently for each axis. (In addition, such controls as interpolation involving two to four axes and simultaneous startup of multiple axes are possible.)
 - 2) Independent control of each axis can be achieved in linear control mode (executable simultaneously over four axes). Such control can either be the independent positioning control using a single positioning data or the continuous positioning control enabled by the continuous processing of multiple positioning data.
 - 3) Coordinated control over multiple axes can take the form of either the linear interpolation through the speed or position control of two to four axes or the circular interpolation involving two axes. Such control can either be the independent positioning control using a single positioning data or the continuous positioning control enabled by the continuous processing of multiple positioning data.
- (b) For each positioning data, the user can specify any of the following control systems: position control, speed control, speed-position switching control, position-speed switching control, and so on. (Refer to Section 5.3 and 9.2.)

- (c) Continuous positioning control using multiple positioning data can be executed in accordance with the operation patterns the user assigned to the positioning data. (Refer to Section 5.3 and 9.1.2) Continuous positioning control can be executed over multiple blocks, where each block consists of multiple positioning data. (Refer to Section 10.3.2.)
- (d) OPR control is given additional features (Refer to Section 8.2.)
 - 1) Six different machine OPR methods are provided: near point dog method (one method), stopper methods (three methods), and count methods (two methods).
 - 2) OPR retry function facilitates the machine OPR control from an arbitrary position.

(The machine OP a premier reference position for positioning control. The machine is set to the machine OP through one of the machine OPR methods mentioned in 1) above.)

(e) Two acceleration/deceleration control methods are provided: trapezoidal acceleration/deceleration and S-curve acceleration/deceleration. (Refer to Section 12.7.6.) (Note that there is a restriction on executing the S-curve

acceleration/deceleration for the system using stepping motors. Refer to Section 1.3.)

(3) Quick startup (Refer to Section 3.1.)

The processing time to start the positioning operation is shortened. When operation using simultaneous start function or interpolation operation is executed, the axes start without delay.

Axis 1 and Axis 3 are started by the : No delay in Axis 1 and (Example) simultaneous start function Axis 3 start Axis 2 and Axis 4 are started by the : No delay in Axis 2 and

Axis 4 start

interpolation operation

(4) Faster pulse output and allowance of longer distance to drive unit (Refer to Section 3.1.)

The modules with a differential driver (QD75D□N (QD75D□)) incorporate the improvements in pulse output speed and maximum distance to the drive unit.

- QD75D□N: 4Mpulse/s, 10m max. (QD75D□: 1Mpulse/s, 10m max.)
- QD75P

 N: 200kpulse/s, 2m max. (QD75P

 : 200kpulse/s, 2m max.)

(5) Easy maintenance

Each QD75 positioning module incorporates the following improvements in maintainability:

- (a) Data such as the positioning data and parameters can be stored on a flash ROM inside the QD75, eliminating the need of a battery for retaining data. (Refer to Section 7.1.1.)
- (b) Error messages are classified in more detail to facilitate the initial troubleshooting procedure. (Refer to Section 15.1.)
- The module retains 16 error messages and 16 warning messages recently output, offering more complete error and warning histories. (Refer to Section 5.6.1.)

1


- (6) Support of intelligent function module dedicated instructions
 Dedicated instructions such as the absolute position restoration instruction,
 positioning start instruction, and teaching instruction are provided.
 The use of such dedicated instruction simplifies sequence programs. (Refer to
 CHAPTER 14.)
- (7) Setups, monitoring, and testing through GX Configurator-QP Using GX Configurator-QP, the user can control the QD75 parameters and positioning data without having to be conscious of the buffer memory addresses. Moreover, GX Configurator-QP has a test function which allows the user to check the wiring before creating a sequence program for positioning control, or test operation the QD75 using created parameters and positioning data for checking their integrity.

The control monitor function of GX Configurator-QP allows the user to debug programs efficiently.


1

1.1.2 Purpose and applications of positioning control


"Positioning" refers to moving a moving body, such as a workpiece or tool (hereinafter, generically called "workpiece") at a designated speed, and accurately stopping it at the target position. The main application examples are shown below.

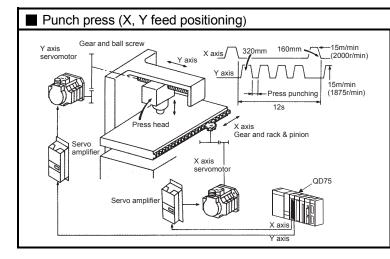

- To punch insulation material or leather, etc., as the same shape at a high yield, positioning is carried out with the X axis and Y axis servos.
- After positioning the table with the X axis servo, the press head is positioned with the Y axis servo, and is then punched with the press.
- When the material type or shape changes, the press head die is changed, and the positioning pattern is changed.

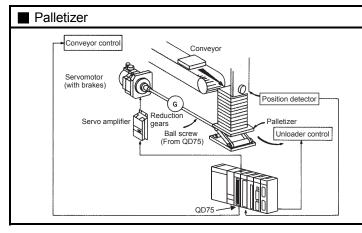


- Using the servo for one axis, the palletizer is positioned at a high accuracy.
- The amount to lower the palletizer according to the material thickness is saved.

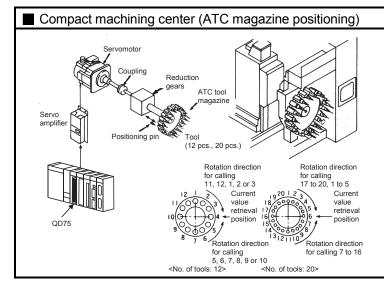


- The ATC tool magazine for a compact machining center is positioned.
- The relation of the magazine's current value and target value is calculated, and positioning is carried out with forward run or reverse run to achieve the shortest access time.

Index table

1

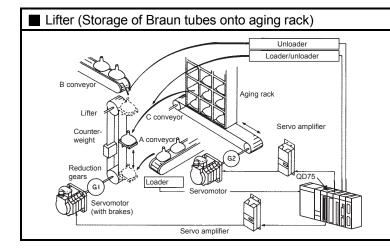


- During the aging process of braun tubes, storage onto the rack is carried out by positioning with the AC servo.
- The up/down positioning of the lifter is carried out with the 1-axis servo, and the horizontal position of the aging rack is positioned with the 2-axis servo.

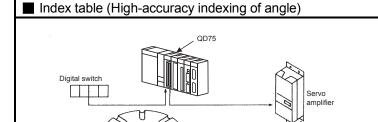

Detector


The index table is positioned at a high accuracy using the 1-axis servo.

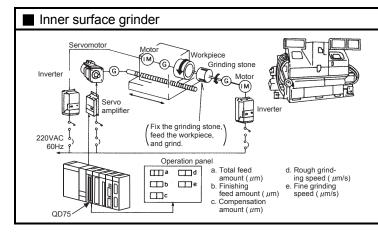

- The grinding of the workpiece's inner surface is controlled with the servo and inverter.
- The rotation of the workpiece is controlled with the 1-axis inverter, and the rotation of the grinding stone is controlled with the 2-axis inverter. The workpiece is fed and ground with the 3-axis servo.

1.1.3 Mechanism of positioning control

Positioning control using the QD75 is carried out with "pulse signals". (The QD75 is a module that generates pulses). In the positioning system using the QD75, various software and devices are used for the following roles. The QD75 realizes complicated positioning control when it reads in various signals, parameters and data and is controlled with the CPU module.

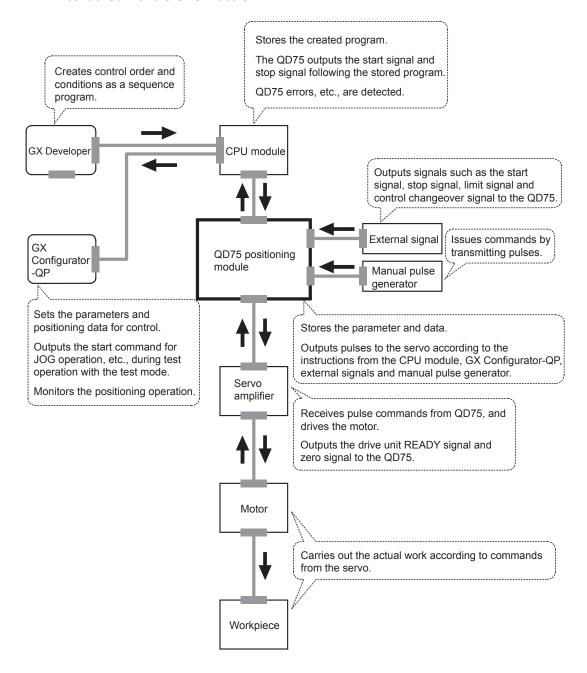

The principle of "position control" and "speed control" operation is shown below.

Position control

The total No. of pulses required to move the designated distance is obtained in the following manner.


*The No. of pulses required for the motor to rotate once is the "encoder resolution" described in the motor catalog specification list.

When this total No. of pulses is issued from the QD75 to the servo amplifier, control to move the designated distance can be executed.

The machine side movement amount when one pulse is issued to the servo amplifier is called the "movement amount per pulse". This value is the min. value for the workpiece to move, and is also the electrical positioning precision.

Speed control

The "Total No. of pulses" mentioned above is invariably required for controlling the distance. For positioning or speed control, the speed must be controlled as well. The speed is determined by the frequency of pulses sent from the QD75 to the drive unit.

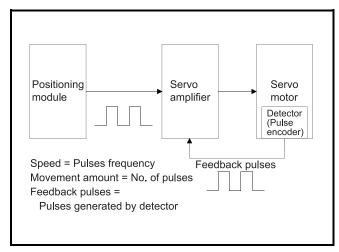

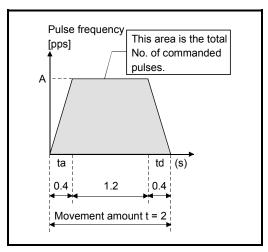


Fig. 1.1 Relationship between position control and speed control

POINT

The QD75 controls the position with the "total No. of pulses", and the speed with the "pulse frequency".

1

1.1.4 Outline design of positioning system

The outline of the positioning system operation and design, using the QD75, is shown below.

(1) Positioning system using QD75

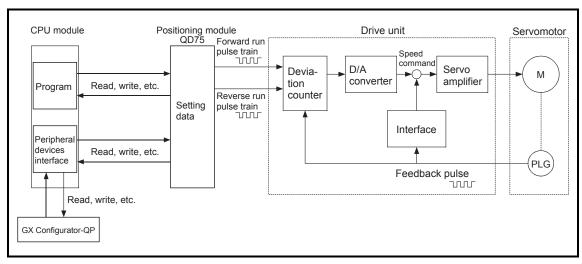


Fig. 1.2 Outline of the operation of positioning system using QD75

(a) Positioning operation by the QD75

1) The QD75 output is a pulse train.

The pulse train output by the QD75 is counted by and stored in the deviation counter in the drive unit.

The D/A converter outputs an analog DC current proportionate to the count maintained by the deviation counter (called "pulse droop"). The analog DC current serves as the servomotor speed control signal.

2) The motor rotation is controlled by the speed control signal from the drive unit.

As the motor rotates, the pulse encoder (PLG) attached to the motor generates feedback pulses, the frequency of which is proportionate to the rotation speed.

The feedback pulses are fed back to the drive unit and decrements the pulse droop, the pulse count maintained by the deviation counter. The motor keeps on rotating as the pulse droop is maintained at a certain level.

 When the QD75 terminates the output of a pulse train, the motor decelerates as the pulse droop decreases and stops when the count drops to zero.

Thus, the motor rotation speed is proportionate to the pulse frequency, while the overall motor rotation angle is proportionate to the total number of pulses output by the QD75.

Therefore, when a movement amount per pulse is given, the overall movement amount can be determined by the number of pulses in the pulse train.

The pulse frequency, on the other hand, determines the motor rotation speed (feed speed).

(b) Pulse train output from the QD75

- As shown in Fig. 1.3, the pulse frequency increases as the motor accelerates. The pulses are sparse when the motor starts and more frequent when the motor speed comes close to the target speed.
- 2) The pulse frequency stabilizes when the motor speed equals the target speed.
- 3) The QD75 decreases the pulse frequency (sparser pulses) to decelerate the motor before it finally stops the output. There will be a little difference in timing between the decrease in the pulse frequency and the actual deceleration and stopping of the motor. This difference, called "the stop settling time", is required for gaining a stopping accuracy.

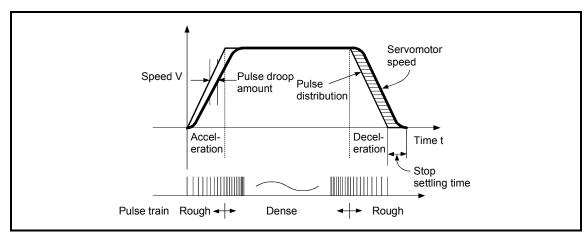


Fig. 1.3 QD75 output pulses

(2) Movement amount and speed in a system using worm gears

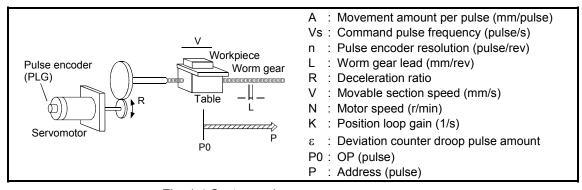


Fig. 1.4 System using worm gears

1

- (a) In the system shown in Fig. 1.4, the movement amount per pulse, command pulse frequency, and the deviation counter droop pulse amount are determined as follows:
 - 1) Movement amount per pulse

The movement amount per pulse is determined by the worm gear lead, deceleration ratio, and the pulse encoder resolution.

The movement amount, therefore, is given as follows: (Number of pulses output) × (Movement amount per pulse).

$$A = \frac{L}{R \times n} \text{ [mm/pulse]}$$

2) Command pulse frequency

The command pulse frequency is determined by the speed of the moving part and movement amount per pulse:

$$Vs = \frac{V}{A}$$
 [pulse/s]

3) Deviation counter droop pulse amount.

The deviation counter droop pulse amount is determined by the command pulse frequency and position loop gain.

$$\varepsilon = \frac{Vs}{K}$$
 [pulse]

(b) The QD75 allows the user to select from the following four units as the unit used by positioning commands to any of the axes (1 to 4, if the module supports four axes): mm, inch, degree, and pulse.

The unit selected for one axis may differ from the unit selected for another axis.


When such data as the acceleration/deceleration time, positioning speed, and positioning address are correctly set in consideration of the chosen unit, the QD75 can calculate the number of pulses required for a movement amount to the target positioning address and execute the positioning by outputting a pulse train that includes the calculated number of pulses.

1

1.1.5 Communicating signals between QD75 and each module

The outline of the signal communication between the QD75 and CPU module, peripheral device and drive unit, etc., is shown below.

(A peripheral device communicates with the QD75 via the CPU module to which it is connected)

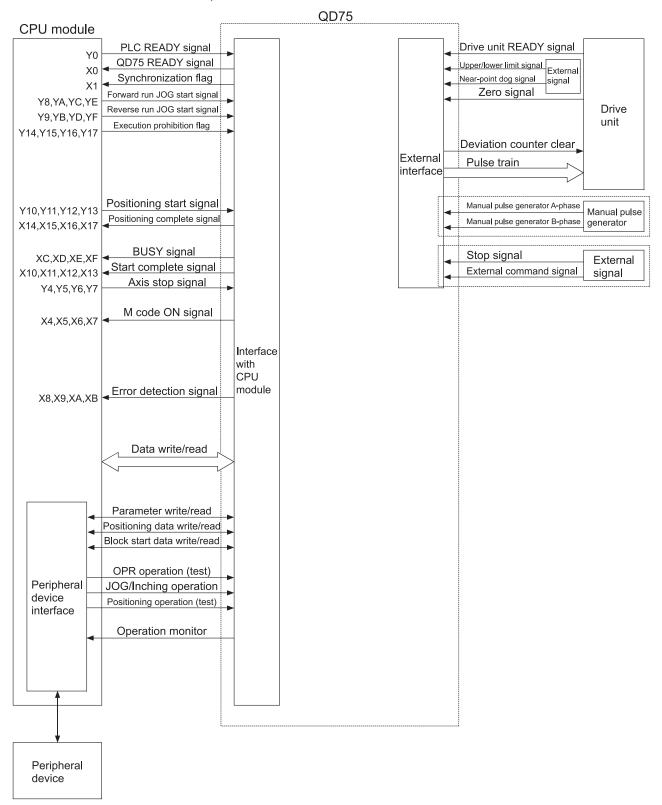

■ QD75 CPU module

The QD75 and CPU module communicate the following data via the base unit.

Direction Communication	QD75 → CPU module	CPU module → QD75
Control signal *	Signal indicating QD75 state, such as QD75 READY signal, BUSY signal.	Signal related to commands such as PLC READY signal, various start signals, stop signals
Data (read/write)	I• Positioning data	Parameter Positioning data Block start data Control data

^{*} Refer to Section 3.3 "Specifications of input/output signals with CPU module " for details.

■ QD75 ↔ Peripheral device

The QD75 and peripheral device communicate the following data via the CPU module:

Direction Communication	QD75 → Peripheral device	Peripheral device → QD75	
Data (read/write)	ParameterPositioning dataBlock start data	ParameterPositioning dataBlock start data	
Test operation	_	 OPR control start command Positioning control start command JOG/Inching operation start command Teaching start command Manual pulse generator operation enable/disable command 	
Operation monitor	Monitor data	-	

■ QD75 ↔ Drive unit

The QD75 and drive unit communicate the following data via the external device connection connector.

Direction Communication	QD75 → Drive unit	Drive unit $ ightarrow$ QD75
		Signals indicating drive unit state such as drive unit READY signal
Pulse train	Pulse train output	_

■ QD75 Manual pulse generator

The QD75 and manual pulse generator communicate the following data via the external device connection connector.

(The manual pulse generator should be connected to an external device connection connector for axis 1 or for axes 1 and 2.)

Direction Communication	QD75 $ ightarrow$ Manual pulse generator	Manual pulse generator → QD75
Pulse signal	_	Manual pulse generator A-phase, manual pulse generator B-phase

■ QD75 ↔ External signal


The QD75 and external signal communicate the following data via the external device connection connector.

Direction Communication	QD75 → External signal	External signal → QD75
Control signal	_	 Signals from detector such as near-point dog signal, upper/lower limit signal, zero signal
Ţ.		 Control signals from external device such as stop signal, external command signal

1.2 Flow of system operation

1.2.1 Flow of all processes

The positioning control processes, using the QD75, are shown below.

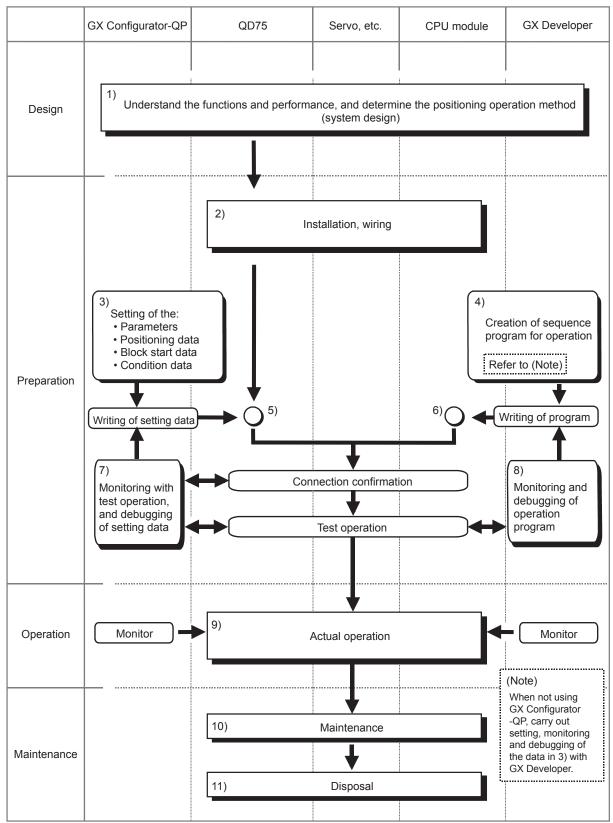

The following work is carried out with the processes shown on the previous page.


	Details	Reference
1)	Understand the product functions and usage methods, the configuration devices and specifications required for positioning control, and design the system.	CHAPTER 1CHAPTER 2CHAPTER 3CHAPTER 8 to CHAPTER 13
2)	Install the QD75 onto the base unit, wire the QD75 and external connection devices (drive unit, etc.).	CHAPTER 4
3)	Using GX Configurator-QP, set the parameters, positioning data, block start data and condition data required for the positioning control to be executed. *1	CHAPTER 5CHAPTER 8 to CHAPTER 13GX Configurator-QP Operating Manual
4)	Using GX Developer, create the sequence program required for positioning operation. (When not using GX Configurator-QP, also create the sequence program for setting data.)	CHAPTER 6GX Developer Operating Manual
5)	Write the parameters and positioning data, etc., created with GX Configurator-QP into the QD75.	CHAPTER 7GX Configurator-QP Operating Manual
6)	Using GX Developer, write the created sequence program into the CPU module. (When not using GX Configurator-QP, also write in the sequence program for setting data.)	CHAPTER 7 GX Developer Operating Manual
7)	Carry out test operation and adjustments in the test mode to check the connection with the QD75 and external connection device, and to confirm that the designated positioning operation is executed correctly. (Debug the set "parameters" and "positioning data", etc.)	 GX Configurator-QP Operating Manual CHAPTER 13 GX Developer Operating Manual
8)	Carry out test operation and adjustment to confirm that the designated positioning operation is executed correctly. (Debug the created sequence program. When not using GX Configurator-QP, also debug the set data.)	GX Developer Operating Manual
9)	Actually operate the positioning operation. At this time, monitor the operation state as required. If an error or warning occurs, remedy.	 CHAPTER 5 CHAPTER 15 GX Configurator-QP Operating Manual GX Developer Operating Manual
10)	Service the QD75 as required.	CHAPTER 4
11)	Dispose of the QD75.	CHAPTER 4

^{*1:} When setting the QD75P \(\text{N/QD75D} \(\text{N} \) using GX Configurator-QP, there are restrictions on the setting ranges of some items. (Refer to Appendix 1.2.)


1.2.2 Outline of starting

The outline for starting each control is shown with the following flowchart.

*It is assumed that each module is installed, and the required system configuration, etc., has been prepared.

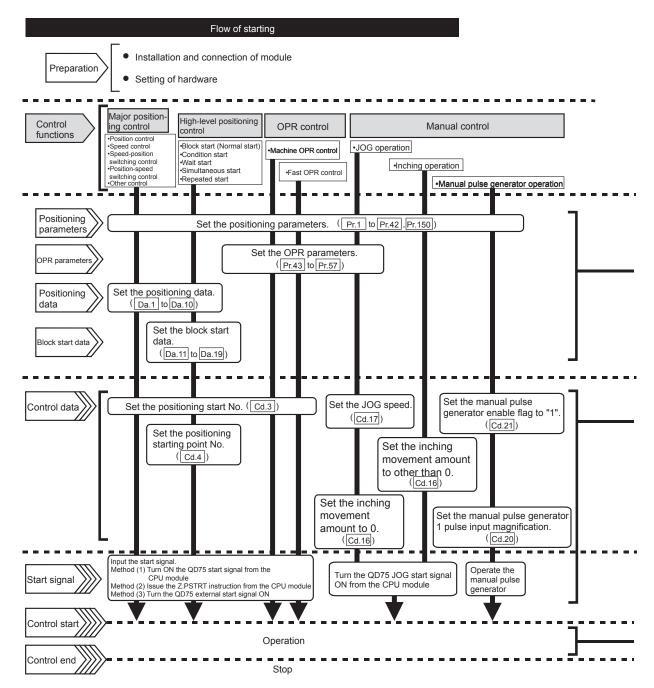

Setting method

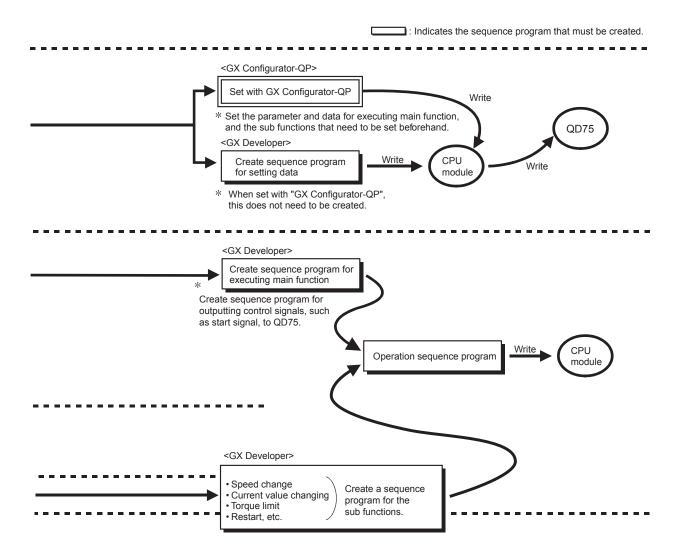

1.2.3 Outline of stopping

Each control is stopped in the following cases.

- (1) When each control is completed normally.
- (2) When the drive unit READY signal is turned OFF.
- (3) When a CPU module error occurs
- (4) When the PLC READY signal is turned OFF.
- (5) When an error occurs in the QD75.
- (6) When control is intentionally stopped (Stop signal from CPU module turned ON, stop signal from an external device, etc.)

The outline for the stopping process in these cases is shown below. (Excluding (1) for normal stopping.)

1			iopping.)	1	1					i			
				Axis		Stop process							
Stop cause		Otana N		operation	OPR c	ontrol			Manu	ial control			
		Stop axis	ON signal after stop		Machine OPR control	Fast OPR control	Major positioning control	High-level positioning control	JOG/ Inching operation	Manual pulse generator operation			
Forced stop	Drive unit READY signal OFF	Each axis	No change	Error	Imme	Immediate stop				Deceleration stop			
Fatal stop (Stop group 1)	Hardware stroke limit upper/lower limit error occurrence	Each axis	No change	Error	(Sele	Deceleration stop/sudden stop (Select with " Pr.37 Stop group 1 sudden stop selection")			sudden	Deceleration stop			
Emergency	CPU module error occurrence		No change		Deceleration stop/sudden stop								
stop (Stop group 2)	PLC READY signal OFF	All axes	Turns OFF	Error	(Select with " Pr.38 Stop group 2 sudden stop selection")				Deceleration stop				
	Error in test mode		No change										
Relatively safe stop (Stop group 3)	Axis error detection (Error other than stop group 1 or 2) *1	Each axis	No change	Error									
	"Stop signal" ON from external source				(Select with " Pr.39 Stop gr		Deceleration stop/sudden stop (Select with " Pr.39 Stop group 3 sud	sudden	Deceleration stop				
Intentional stop (Stop group 3)	"Axis stop signal" ON from CPU module	Each axis	No change	Stopped (Standby)							stop selection")		·
	"Stop signal" input from peripheral device * 2												

- *1: When multiple positioning data is executed by the continuous positioning control and there is invalid setting value in a positioning data, an error occurs and deceleration is performed at the previous positioning data. In this case, sudden stop is not performed even when it is set for the stop group 3. If any of the following error occurs, the operation is immediately stopped after executing up to previous positioning data of the positioning data where an error occurred.
 - No command speed (error code: 503)
 - Outside linear movement amount range (error code: 504)
 - Large arc error deviation (error code: 506)
 - Software stroke limit + (error code: 507)
 - Software stroke limit (error code: 508)
 - Sub point setting error (error code: 525)
 - End point setting error (error code: 526)
 - Center point setting error (error code: 527)
 - Outside radius range (error code: 544)
 - Illegal setting of ABS direction in unit of degree (error code: 546)
- *2: This means the stop using a stop button on the test dialog box when using the positioning test function of GX Works2 or test function of GX Configurator-QP.

1.2.4 Outline of restarting

When a stop cause has occurred during operation with position control causing the axis to stop, positioning to the end point of the positioning data can be restarted from the stopped position by using the " Cd.6 Restart command".


If issued during a continuous positioning or continuous path control operation, the restart command will cause the positioning to be re-executed using the current position (pointed by the positioning data No. associated with the moment when the movement was interrupted) as the start point.

■ When " Cd.6 Restart command" is ON

- (1) If the " Md.26 Axis operation status" is "Stopped", positioning to the end point of the positioning data will be restarted from the stopped position regardless of the absolute system or incremental system.
- (2) When " Md.26 Axis operation status" is not "Stopped", the warning "Restart not possible" (warning code: 104) will be applied, and the restart command will be ignored.

[Example for incremental system]

(a) The restart operation when the axis 1 movement amount is 300, and the axis 2 movement amount is 600 is shown below.

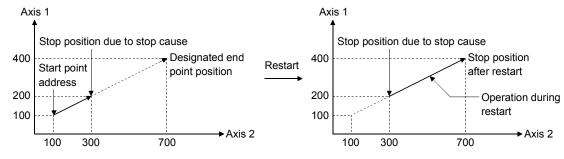


Reference

If the positioning start signal [Y10 to Y13]/external command signal * is turned ON while the " Md.26 Axis operation status" is "Standby" or "Stopped", positioning will be restarted from the start of the positioning start data regardless of the absolute system or incremental system. (*: When the external command signal is set to "External positioning start") (Same as normal positioning.)

[Example for incremental system]

(a) The positioning start operation when the axis 1 movement amount is 300 and the axis 2 movement amount is 600 is shown below.

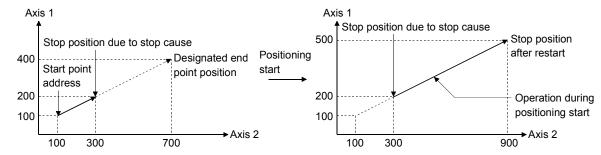

1.3 Restrictions on using a stepping motor

Note the following restrictions on using a stepping motor:

- For an axis where a stepping motor is connected, executing the S-curve acceleration/deceleration may cause step-out.
 Before using the S-curve acceleration/deceleration, confirm that step-out does not occur.
- (2) The circular interpolation control and 3-axis helical interpolation control cannot be used for an axis where a stepping motor is connected. Although setting the bias speed at start is required by the characteristics of the stepping motor, the setting of the bias speed at start is disabled for circular interpolation control. Ensure to use a servomotor for all axes where interpolation controls are carried out when the circular interpolation control or 3-axis helical interpolation control is carried out.
- (3) The backlash compensation function cannot be used for an axis where a stepping motor is connected. If the function is used, the motor may lose steps.

1.4 Function additions/modifications according to function version B

POINT

When it is desired to check the following items, refer to the corresponding explanation sections.

How to check the function version and SERIAL No. (Refer to Section 2.4)

The following function additions/modifications according to the function version B of the QD75:

Function	Outline	Reference
Multiple CPU compatible function	Refer to QCPU User's Manual (Multiple CPU System).	
Speed-position switching control (ABS mode)	Function which starts the axis under speed control, switches to position control at the external command signal input, then positions the axis to a stop at the designated address.	Section 9.2.19
Pre-reading start function	Function which shortens virtual start time.	Section 12.7.7
External I/O signal monitor function	Function which monitors the external I/O signal monitor information in the module's detailed information which can be displayed on the system monitor of GX Developer *1.	Section 13.5
Deceleration start flag function *2	Function that turns ON the flag when the constant speed status or acceleration status switches to the deceleration status during position control whose operation pattern is "Positioning complete".	Section 12.7.8
Stop command processing for deceleration stop function *3	Function that selects a deceleration curve when a stop cause occurs during deceleration stop processing to speed 0.	Section 12.7.9

^{*1:} For the QD75P QD75D, this function is available in GX Developer (SW6D5C-GPPW-E or later). For details, refer to GX Developer Operating Manual.

For the QD75P N/QD75D N, external I/O signals cannot be monitored on GX Developer. Use the system monitor of GX Works2. For details on the system monitor of GX Works2, refer to GX Works2 Version 1 Operating Manual (Common).

^{*2:} For the QD75P QD75D, this function is available for modules whose serial No. (first five digits) is "03042" or later.

^{*3:} For the QD75P QD75D, this function is available for modules whose serial No. (first five digits) is "05072" or later.

CHAPTER 2 SYSTEM CONFIGURATION

In this chapter, the general image of the system configuration of the positioning control using QD75, the configuration devices, applicable CPU and the precautions of configuring the system are explained.


Prepare the required configuration devices to match the positioning control system.

2.1	General image of system	2-	2
2.2	Configuration list	2-	4
2.3	Applicable system	2-	6
2.4	How to check the function version and SERIAL No.	2-	8


2.1 General image of system


The general image of the system, including the QD75, CPU module and peripheral devices is shown below.

(The Nos. in the illustration refer to the "No." in Section 2.2 "Component list".

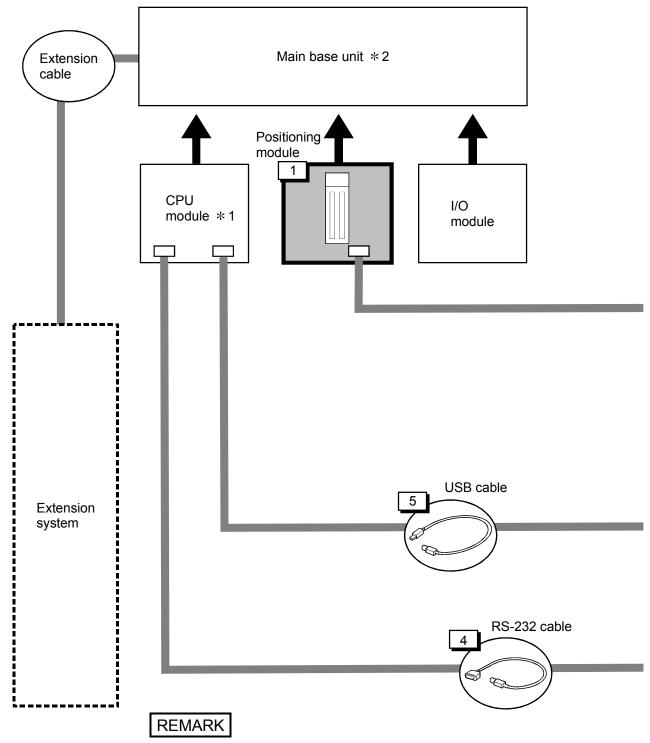

- *1 Refer to Section 2.3 "Applicable system" for the CPU modules that can be used.
- *2 Refer to the CPU module User's Manual for the base units that can be used.

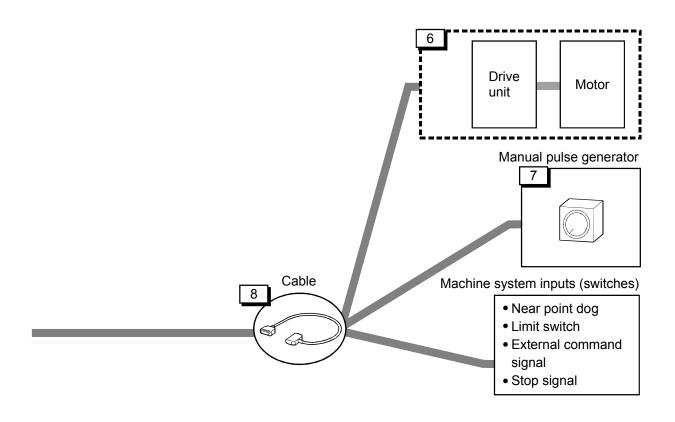

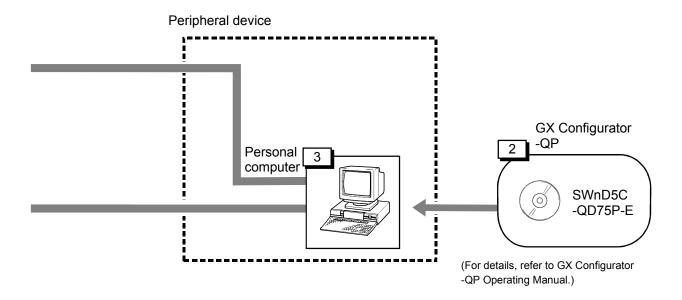

2.2 Configuration list

The positioning system using the QD75 is configured of the following devices.

No.	Part name	Туре	Remarks
1	Positioning module	QD75P1N QD75P2N QD75P4N QD75D1N QD75D2N QD75D4N QD75P1 QD75P2 QD75P4 QD75D1 QD75D2 QD75D2	QD75 \\ \text{QD75} \\ \text{No. of control axes} \\ \text{\$\circ} \text
2	GX Configurator-QP	SW:::D5C- QD75P-E	Refer to GX Configurator-QP Operating Manual for details.
3	Personal computer	Personal computer which supports Windows [®] .	(Prepared by user) Refer to GX Configurator-QP Operating Manual for details.
4	RS-232 cable	QC30R2	(Prepared by user) An RS-232 cable is needed for connecting the CPU module with a personal computer. For details, refer to GX Configurator-QP Operating Manual.
5	USB cable	-	(Prepared by user) A USB cable is needed for connecting the CPU module with a personal computer. For details, refer to GX Configurator-QP Operating Manual.
6	Drive unit	_	(Prepared by user)
7	Manual pulse generator	-	(Prepared by user) Recommended: MR-HDP01 (Mitsubishi Electric)
8	Connection cable (For connecting between the QD75 and the drive unit)	_	(Prepared by user) Cables are needed to connect the QD75 with the drive unit, manual pulse generator, and input devices in the machine system. (Prepare them referring to the manuals for the connected devices and information given in 3.4.2 of this manual.)

■ Specifications of recommended manual pulse generator

Item	Specifications
Model name	MR-HDP01
Pulse resolution	25pulse/rev (100 pulse/rev after magnification by 4)
Output method	Voltage-output (power supply voltage -1V or more), Output current = Max. 20mA
Power supply voltage	4.5 to 13.2VDC*1
Current consumption	60mA
Output level	"H" level: power supply voltage ^{*1} -1V or more (in no-load) "L" level: 0.5V or less (with maximum leading-in)
Life time	100 revolutions (at 200r/min)
Downitted evial lands	Radial load: Max. 19.6N
Permitted axial loads	Thrust load: Max. 9.8N
Operation temperature	-10 to 60°C (14 to 140°F)
Weight	0.4 (0.88) [kg(lb)]
Number of max. revolution	Instantaneous Max. 600r/min. normal 200r/min
Pulse signal status	2 signals: A phase, B phase, 90° phase difference
Start friction torque	0.06N·m (at 20°C (68°F))

^{*1:} Use the stabilized power supply of 4.5 to 6.1 VDC for the power supply of the manual pulse generator.

2.3 Applicable system

The QD75 can be used in the following system.

- (1) Applicable modules and base units, and No. of modules
 - (a) When mounted with a CPU module

For the CPU modules, the number of modules, and base units applicable to the QD75, refer to the user's manual for the CPU modules used.

Check the following when the QD75 is mounted with the CPU module.

- Depending on the combination with other modules or the number of mounted modules, power supply capacity may be insufficient. Pay attention to the power supply capacity before mounting modules, and if the power supply capacity is insufficient, change the combination of the modules
- Mount a module within the number of I/O points for the CPU module.
 If the number of slots is within the available range, the module can be mounted on any slot.

REMARK

To use a C Controller module with the QD75, refer to C Controller Module User's Manual.

- (b) Mounting to a MELSECNET/H remote I/O station For the MELSECNET/H remote I/O station, the number of modules, and base units applicable to the QD75, refer to the Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network).
- (2) Compatibility with multiple CPU system
 When using the QD75 in a multiple CPU system, refer to the QCPU User's
 Manual (Multiple CPU System).

(3) Supported software packages

The following table lists the compatibility between the systems using the QD75 and the software packages. GX Developer or GX Works2 is required for use of the QD75.

			Software version		
		GX Developer	GX Configurator-QP*1	GX Works2	
Q00J/Q00/Q01CPU	Single CPU system	Version 7 or later	Version 2.10L or later		
Q003/Q00/Q01CP0	Multiple CPU system	Version 8 or later	version 2. Tot or later		
Q02/Q02H/Q06H/	Single CPU system	Version 4 or later	Version 2.00A or later		
Q12H/Q25HCPU	Multiple CPU system	Version 6 or later	Version 2.00A or later		
Q02PH/Q06PHCPU	Single CPU system	Version 8.68W or	Version 2.29F or later		
QU2FH/QU0FHCFU	Multiple CPU system	later	Version 2.29F or later		
Q12PH/Q25PHCPU	Single CPU system	Version 7.10L or	Version 2.13P or later	/ersion 7.10L or	
Q12FH/Q25FHCFU	Multiple CPU system	later		Refer to GX Works2 Version 1 Operating	
Q02U/Q03UD/ Q04UDH/	Single CPU system	Version 8.48A or	Manual (Con	Manual (Common).	
Q040DH/ Q06UDHCPU	Multiple CPU system	later	Version 2.25B or later		
Q13UDH/Q26UDH/ Q03UDE/Q04UDEH/	Single CPU system	Version 8.68W or	Version 2.29F or later		
Q06UDEH/Q13UDEH/ Q26UDEHCPU	Multiple CPU system	later	Version 2.29F or later		
Q00U/Q00UJ/Q01U/Q 10UDH/Q20UDH/	Single CPU system	Version 8.76E or	Version 2.22 Ler leter		
Q10UDEH/ Q20UDEHCPU	Multiple CPU system	later	Version 2.32J or later		
CPU modules other than above		Not supported	Not supported		
For use on MELSECNET/H remote I/O station		Version 6 or later	Version 2.00A or later		


^{*1:} To use the QD75P\(\to\)N/QD75D\(\to\)N with GX Configurator-QP, select the QD75P\(\to\)/QD75D\(\to\) as the model name. The QD75P\(\to\)N/QD75D\(\to\)N can be used in the same manner as the QD75P\(\to\)/QD75D\(\to\); the setting ranges are the same. Therefore, a speed exceeding 1000000pulse/s cannot be set in some items. (Refer to Appendix 1.2)

POINT

When using GX Works2, refer to the following:


- GX Works2 Version 1 Operating Manual (Common)
- GX Works2 Version 1 Operating Manual (Intelligent Function Module)

- 2.4 How to check the function version and SERIAL No.
 - (1) Confirming the serial number on the rating plate The rating plate is situated on the side face of the QD75.

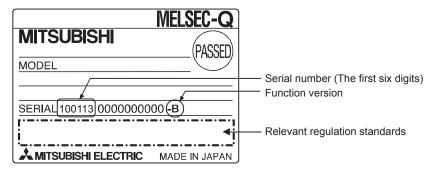

(2) Checking on the front of the module


The serial No. on the rating plate is also indicated on the front of the module (lower part).

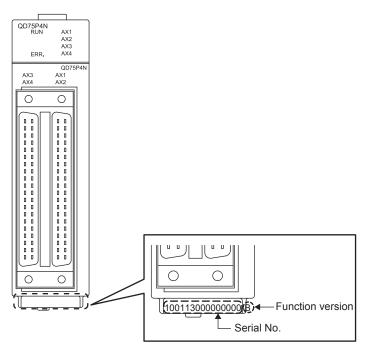

Check the function version and SERIAL No. in "Product information" displayed on System monitor "Module's Detailed Information" of GX Developer or on "OS information" of GX Configurator-QP $^{\star 1}$

(a) Checking on the System monitor (Product Information List) screen
To open the screen, select [Diagnostics] → [System monitor] and click
the Product Information List button in GX Developer.

<GX Developer display screen>

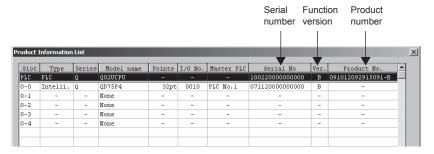


[Production No. display] Since the QD75 does not support the production number display, "-" is displayed.

POINT

The serial No. on the rating plate may be different from the serial No. displayed on the product information screen of GX Developer.

- The serial No. on the rating plate indicates the management information of the product.
- The serial No. displayed on the product information screen of GX Developer indicates the function information of the product. The function information of the product is updated when a new function is added.
 - (b) Checking with GX Configurator-QP <GX Configurator-QP display screen>

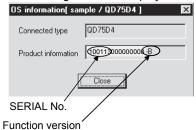

*1: For details, refer to GX Configurator-QP Operating Manual.

CHAPTER 3 SPECIFICATIONS AND FUNCTIONS

The various specifications of the QD75 are explained in this chapter.

The "Performance specifications", "List of functions", "Specifications of input/output signals with CPU module", and the "Specifications of input/output interfaces with external devices", etc., are described as information required when designing the positioning system.

Confirm each specification before designing the positioning system.

3.1	Perforr	mance specifications	3-	2
3.2	List of	functions	3-	6
	3.2.1	QD75 control functions	3-	6
	3.2.2	QD75 main functions	3-	8
	3.2.3	QD75 sub functions and common functions	3-	10
	3.2.4	Combination of QD75 main functions and sub functions	3-	14
3.3	Specifi	cations of input/output signals with CPU module	3-	16
	3.3.1	List of input/output signals with CPU module	3-	16
	3.3.2	Details of input signals (QD75 → CPU module)	3-	17
	3.3.3	Details of output signals (CPU module → QD75)	3-	18
3.4	Specifi	cations of input/output interfaces with external devices	3-	19
	3.4.1	Electrical specifications of input/output signals	3-	19
	3.4.2	Signal layout for external device connection connector	3-	25
	3.4.3	List of input/output signal details	3-	26
	3.4.4	Input/output interface internal circuit	3-	28

3.1 Performance specifications

■ QD75P□N/QD75D□N

	Model		QD75P2N *1	QD75P4N *1
Item		QD75D1N	QD75D2N	QD75D4N
No. of control axes		1 axis	2 axes	4 axes
Interpolation function		None	2-axis linear interpolation 2-axis circular interpolation	2-, 3-, or 4-axis linear interpolation 2-axis circular interpolation 3-axis helical interpolation
Control syste	em		n control (all of linear, circular, and control, position-speed switching	
Control unit		mm, inch, degree, pulse		
Positioning d	ata	600 data /axis (Can be set with peripheral device	e or sequence program.)	
Backup		Parameters, positioning data, and (battery-less backup)	d block start data can be saved on	flash ROM
	Positioning system	PTP control: Speed-position switching control: Position-speed switching control: Path control:		/stem + 2
Positioning	Positioning range	• 0 to 214748364.7 (µm) • 0 to 21474.83647 (inch) • 0 to 21474.83647 (degree) • 0 to 2147483647 (pulse) In speed-position switching con • 0 to 359.99999 (degree)	7 (inch) (pulse) 7 (µm) 7 (inch) 7 (degree) (pulse) htrol (INC mode) / position-speed s	switching control
	Speed command	0.01 to 20000000.00 (mm/min) 0.001 to 2000000.000 (inch/min) 0.001 to 2000000.000 (degree/mi 1 to 4000000 (pulse/s)	in)	
	Acceleration/ deceleration process	Trapezoidal acceleration/decelera	ation, S-curve acceleration/decele	ration
	Acceleration/ deceleration time	1 to 8388608 (ms) Four patterns can be set for each	of acceleration time and decelera	ation time
	Sudden stop deceleration time	1 to 8388608 (ms)	2.2.2.3.3.3.3.3.3.3.3.3.3.3.3.3.3.3.3.3	

 $[\]pm$ 1: QD75P \square N represents the open collector output system, and QD75D \square N represents the differential driver output system.

^{*2:} In speed-position switching control (ABS mode), the control unit available is "degree" only. (For details, refer to Section 9.2.19 "Speed-position switching control (ABS mode)".)

Model	QD75P1N *1	QD75P2N *	1	QD75P4N * 1		
Item	QD75D1N	QD75D2N	T	QD75D4N		
	1-axis linear control		1.5ms			
	1-axis speed control		1.5ms	Factors in starting time extensio		
	2-axis linear interpolation conti		1.5ms	The following times will be adde		
	2-axis linear interpolation conti speed)	rol (Reference axis	1.5ms	the starting time in the describe conditions:	ribed	
	2-axis circular interpolation cor	ntrol	2.0ms	S-curve acceleration/		
Otantin a time a 10	2-axis speed control		1.5ms	deceleration is selected:	0.1ms	
Starting time *3	3-axis linear interpolation conti	rol (Composite speed)	1.7ms	 Other axis is in 		
	3-axis linear interpolation contrapped)		1.7ms	operation: • During continuous	0.5ms	
	3-axis helical interpolation con	trol	2.6ms	positioning control:	0.3ms	
	3-axis speed control		1.7ms	During continuous path		
	4-axis linear interpolation control 1.8ms		1.8ms	control:	0.3ms	
	4-axis speed control 1.8ms					
External wiring connection system	40-pin connector					
Applicable wire size	0.3mm ² (22AWG) (for A6CON1 or A6CON4),					
Applicable wire size	0.088 to 0.24mm ² (28 to 24AWG) (for A6CON2)					
Applicable connector for external device	A6CON1, A6CON2, A6CON4	(sold separately)				
Max. output pulse	QD75P1N, QD75P2N, QD75P4N: 200kpps					
' '	QD75D1N, QD75D2N, QD75D4N: 4Mpps					
	QD75P1N, QD75P2N, QD75P4N: 2m					
servos	QD75D1N, QD75D2N, QD75D4N: 10m					
Internal current consumption	QD75P1N: 0.29A QD75D1N: 0.43A	QD75P2N: 0.30A QD75D2N: 0.45A		QD75P4N: 0.36A QD75D4N: 0.66A		
(5VDC)	QD75D1N. 0.45A	QD75D2N. 0.45A		QD73D4N. 0.00A		
Flash ROM write count		Max. 100000 ti	mes			
No. of occupied I/O points	32 points (I/O assignment: intelligent 32 points)					
Outline dimensions	98 (H) × 27.4 (W) × 90 (D) n	nm	_	<u> </u>	_	
Weight	QD75P1N: 0.14kg	QD75P2N: 0.14kg		QD75P4N: 0.16kg		
Ŭ	QD75D1N: 0.15kg	QD75D2N: 0.15kg		QD75D4N: 0.16kg		

^{*}1: QD75P \square N represents the open collector output system, and QD75D \square N represents the differential driver output system.

^{*3:} Using the "Pre-reading start function", the virtual start time can be shortened. (For details, refer to Section 12.7.7 "Pre-reading start function".

■ QD75P□/QD75D□

	Model		QD75P2 *1	QD75P4 *1
Item		QD75D1	QD75D2	QD75D4
No. of control axes		1 axis	2 axes	4 axes
Interpolation	function	None	2-axis linear interpolation 2-axis circular interpolation	2-, 3-, or 4-axis linear interpolation 2-axis circular interpolation
Control syste	em	PTP (Point To Point) control, path position switching control, position	n control (both linear and arc can b n-speed switching control	pe set), speed control, speed-
Control unit		mm, inch, degree, pulse	are opened outlooming control	
	lata	600 data /axis		
Positioning d	ata 	(Can be set with peripheral device		
Backup		Parameters, positioning data, and (battery-less backup)	d block start data can be saved on	flash ROM
	Positioning system	PTP control: Speed-position switching control: Position-speed switching control: Path control:		vstem + 2
Positioning	Positioning range	• 0 to 214748364.7 (µm) • 0 to 21474.83647 (inch) • 0 to 21474.83647 (degree) • 0 to 2147483647 (pulse) In speed-position switching con • 0 to 359.99999 (degree)	7 (inch) (pulse) 7 (µm) 7 (inch) 7 (inch) 7 (degree) (pulse) htrol (INC mode) / position-speed s	switching control
	Speed command	0.01 to 20000000.00 (mm/min) 0.001 to 2000000.000 (inch/min) 0.001 to 2000000.000 (degree/min) 1 to 1000000 (pulse/s)	in)	
	Acceleration/ deceleration process	Trapezoidal acceleration/decelera	ation, S-curve acceleration/decele	ration
	Acceleration/ deceleration time	1 to 8388608 (ms) Four patterns can be set for each	of acceleration time and decelera	tion time
	Sudden stop deceleration time	1 to 8388608 (ms)	ar assistation time and decelere	

^{*1:} QD75P ☐ represents the open collector output system, and QD75D ☐ represents the differential driver output system.

^{*2:} In speed-position switching control (ABS mode), the control unit available is "degree" only. (For details, refer to Section 9.2.19 "Speed-position switching control (ABS mode)".)

Model	QD75P1 *1	QD75P2 *1		QD75P4 *1			
Item	QD75D1	QD75D2		QD75D4			
	1-axis linear control		6ms	Factors in starting time exten-			
	1-axis speed control		6ms	The following times will be a			
	2-axis linear interpolation cont	rol (Composite speed)	7ms	the starting time in the described			
	2-axis linear interpolation cont	rol (Reference axis speed)	7ms	conditions:			
	2-axis circular interpolation con	ntrol	7ms	S-curve acceleration/	0.5		
Starting time *3	2-axis speed control		6ms	deceleration is selected: • Other axis is in	0.5ms		
_	3-axis linear interpolation cont	rol (Composite speed)	7ms	operation:	1.5ms		
	3-axis linear interpolation cont	rol (Reference axis speed)	7ms	During continuous	1.51115		
	3-axis speed control		6ms	positioning control:	0.2ms		
	4-axis linear interpolation cont	rol	7ms	During continuous path	0.20		
	4-axis speed control 7m			control:	1.0ms		
External wiring connection system	40-pin connector						
Applicable wire size	0.3mm² (22AWG) (for A6CON1 or A6CON4),						
Applicable wife 3ize	0.088 to 0.24mm ² (28 to 24AWG) (for A6CON2)						
Applicable connector for external device	A6CON1, A6CON2, A6CON4	(sold separately)					
Max. output pulse	QD75P1, QD75P2, QD75P4: 200kpps						
	, , , , , , , , , , , , , , , , , , , ,	QD75D1, QD75D2, QD75D4: 1Mpps					
Max. connection distance between							
servos	QD75D1, QD75D2, QD75D4 :			<u></u>			
Internal current consumption	QD75P1:0.40A	QD75P2 : 0.46A		QD75P4 : 0.58A			
(5VDC)	QD75D1 : 0.52A	QD75D1 : 0.52A QD75D2 : 0.56A		QD75D4 : 0.82A			
Flash ROM write count	Max. 100000 times						
No. of occupied I/O points	32 points (I/O assignment: intelligent 32 points)						
Outline dimensions	98 (H) \times 27.4 (W) \times 90 (D) r	nm					
Weight	0.15 kg	0.15 kg		0.16 kg			

^{*}1: QD75P \square represents the open collector output system, and QD75D \square represents the differential driver output system.

■ Differential driver common terminal specifications(QD75D□N/QD75D□ only)

Applicable wire size	0.24 to 2.5mm ² (24 to 12AWG)
Applicable sizes of two	Solid wire: 0.2 to 0.8mm $^2 \times 2$ pcs.
wires inserted into same spot of terminal	Stranded wire: 0.2 to 0.8mm $^2 imes 2$ pcs.
Screw tightening torque	0.5 to 0.6N • m



Fig. 3.1 Two wires inserted into same spot of terminal

^{*3:} Using the "Pre-reading start function", the virtual start time can be shortened. (For details, refer to Section 12.7.7 "Pre-reading start function".

3.2 List of functions

3

3.2.1 QD75 control functions

The QD75 has several functions. In this manual, the QD75 functions are categorized and explained as follows.

Main functions

(1) OPR control

"OPR control" is a function that established the start point for carrying out positioning control, and carries out positioning toward that start point. This is used to return a workpiece, located at a position other than the OP when the power is turned ON or after positioning stop, to the OP. The "OPR control" is preregistered in the QD75 as the "Positioning start data No. 9001 (Machine OPR)", and "Positioning start data No. 9002 (Fast OPR). (Refer to CHAPTER 8 "OPR CONTROL".)

(2) Major positioning control

This control is carried out using the "Positioning data" stored in the QD75. Positioning control, such as position control and speed control, is executed by setting the required items in this "positioning data" and starting that positioning data. An "operation pattern" can be set in this "positioning data", and with this whether to carry out control with continuous positioning data (ex.: positioning data No. 1, No. 2, No. 3, ...) can be set. (Refer to CHAPTER 9 "MAJOR POSITIONING CONTROL".)

(3) High-level positioning control

This control executes the "positioning data" stored in the QD75 using the "block start data". The following types of applied positioning control can be carried out.

- Random blocks, handling several continuing positioning data items as "blocks", can be executed in the designated order.
- "Condition judgment" can be added to position control and speed control.
- The operation of the designated positioning data No. that is set for multiple axes can be started simultaneously. (Pulses are output simultaneously to multiple servos.)
- The designated positioning data can be executed repeatedly, etc., (Refer to CHAPTER 10 "HIGH-LEVEL POSITIONING CONTROL".)

(4) Manual control


By inputting a signal into the QD75 from an external source, the QD75 will output a random pulse train and carry out control. Use this manual control to move the workpiece to a random position (JOG operation), and to finely adjust the positioning (inching operation, manual pulse generator operation), etc. (Refer to CHAPTER 11 "MANUAL CONTROL".)

Sub functions

When executing the main functions, control compensation, limits and functions can be added. (Refer to CHAPTER 12 "CONTROL SUB FUNCTIONS".)

Common functions

Common control using the QD75 for "parameter initialization" or "backup of execution data" can be carried out. (Refer to CHAPTER 13 "COMMON FUNCTIONS".)

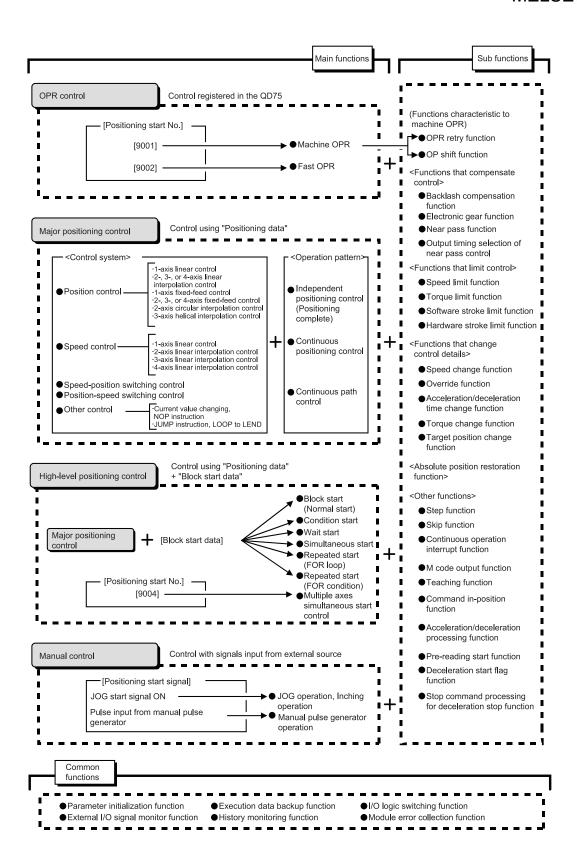

3.2.2 QD75 main functions

3

The outline of the main functions for positioning control with the QD75 is described below. (Refer to PART 2 for details on each function.)

	Main functions		Details	Reference section
ntrol	Machine	OPR control	Mechanically establishes the positioning start point using a near-point dog or stopper. (Positioning start No. 9001)	8.2
OPR control	Fast OPI	R control	Positions a target to the OP address (Md.21 Machine feed value) stored in the QD75 using machine OPR. (Positioning start No. 9002)	8.3
		Linear control (1-axis linear control) (2-axis linear interpolation control) (3-axis linear interpolation control) (4-axis linear interpolation control)	Positions a target using a linear path to the address set in the positioning data or to the position designated with the movement amount.	9.2.2 9.2.3 9.2.4 9.2.5
	Position control	Fixed-feed control (1-axis fixed-feed control) (2-axis fixed-feed control) (3-axis fixed-feed control) (4-axis fixed-feed control)	Positions a target by the movement amount designated with the amount set in the positioning data. (With fixed-feed control, the " Md.20 Current feed value" is set to "0" when the control is started. With 2-, 3-, or 4-axis fixed-feed control, the fixed-feed is fed along a linear path obtained by interpolation.)	9.2.6 9.2.7 9.2.8 9.2.9
		2-axis circular interpolation control	Positions a target using an arc path to the address set in the positioning data, or to the position designated with the movement amount, sub point or center point.	9.2.10 9.2.11
		3-axis helical interpolation control	Positions a target using a helical path to a position specified with the address, movement amount, sub point, or center point set in the positioning data.	9.2.12 9.2.13
ng control	Speed control	Linear control (1-axis speed control) (2-axis speed control) (3-axis speed control) (4-axis speed control)	Continuously outputs the pulses corresponding to the command speed set in the positioning data.	9.2.14 9.2.15 9.2.16 9.2.17
Major positioning control	Speed-position switching control		First, carries out speed control, and then carries out position control (positioning with designated address or movement amount) by turning the "speed-position switching signal" ON.	9.2.18 9.2.19
M	Position-speed switching control		First, carries out position control, and then carries out speed control (continuous output of the pulses corresponding to the designated command speed) by turning the "position-speed switching signal" ON.	9.2.20
	Other control	Current value changing	Changes the Current feed value (Md.20) to the address set in the positioning data. The following two methods can be used. (The machine feed value cannot be changed.) • Current value changing using positioning data • Current value changing using current value changing start No. (No. 9003)	9.2.21
		NOP instruction	No execution control system. When NOP instruction is set, this instruction is not executed and the operation of the next data is started.	9.2.22
		JUMP instruction	Unconditionally or conditionally jumps to designated positioning data No.	9.2.23
		LOOP	Carries out loop control with repeated LOOP to LEND.	9.2.24
		LEND	Returns to the beginning of the loop control with repeated LOOP to LEND.	9.2.25

	Main functions	Details	Reference section
	Block start (Normal start)	With one start, executes the positioning data in a random block with the set order.	10.3.2
	Condition start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "block start data".	10.3.3
	Condition start	When the condition is established, the "block start data" is executed. When not established, that "block start data" is ignored, and the next point's "block start data" is executed.	10.0.0
control	Mait start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "block start data".	10.3.4
High-level positioning control	Wait start	When the condition is established, the "block start data" is executed. When not established, stops the control until the condition is established. (Waits.)	10.3.4
	Simultaneous start	Simultaneously executes the positioning data having the No. for the axis designated with the "condition data". (Outputs pulses at the same timing.)	10.3.5
High	Repeated start (FOR loop)	Repeats the program from the block start data set with the "FOR loop" to the block start data set in "NEXT" for the designated No. of times.	10.3.6
	Repeated start (FOR condition)	Repeats the program from the block start data set with the "FOR condition" to the block start data set in "NEXT" until the conditions set in the "condition data" are established.	10.3.7
	Multiple axes simultaneous start control	Starts the operation of multiple axes simultaneously according to the pulse output level. (Positioning start No. 9004, same as the "simultaneous start" above)	10.5
_	JOG operation	Outputs a pulse to drive unit while the JOG start signal is ON.	11.2
Manual control	Inching operation	Outputs pulses corresponding to minute movement amount by manual operation to drive unit. (Performs fine adjustment with the JOG start signal.)	11.3
Man	Manual pulse generator operation	Outputs pulses commanded with the manual pulse generator to drive unit. (Carry out fine adjustment, etc., at the pulse level.)	11.4

With the "major positioning control" ("high-level positioning control"), whether or not to continuously execute the positioning data can be set with the "operation pattern". Outlines of the "operation patterns" are given below.

Da.1 Operation pattern	Details	Reference section
Independent positioning control (Positioning complete)	When "independent positioning control" is set for the operation pattern of the started positioning data, only the designated positioning data will be executed, and then the positioning will end.	
Continuous positioning control	When "continuous positioning control" is set for the operation pattern of the started positioning data, after the designated positioning data is executed, the program will stop once, and then the next following positioning data will be executed.	9.1.2
Continuous path control	When "continuous path control" is set for the operation pattern of the started positioning data, the designated positioning data will be executed, and then without decelerating, the next following positioning data will be executed.	

3.2.3 QD75 sub functions and common functions

Sub functions

The functions that assist positioning control using the QD75 are described below. (Refer to PART 2 for details on each function.

	Sub function	Details	Reference section
Functions characteristic to machine	OPR retry function	This function retries the machine OPR with the upper/lower limit switches during machine OPR. This allows machine OPR to be carried out even if the axis is not returned to before the near-point dog with JOG operation, etc.	12.2.1
OPR	OP shift function	After returning to the machine OP, this function compensates the position by the designated distance from the machine OP position and sets that position as the OP address.	12.2.2
	Backlash compensation function	This function compensates the mechanical backlash. Feed pulses equivalent to the set backlash amount are output each time the movement direction changes.	12.3.1
Functions that	Electronic gear function	By setting the movement amount per pulse, this function can freely change the machine movement amount per commanded pulse. A flexible positioning system that matches the machine system can be structured with this function.	12.3.2
compensate control	Near pass function *1	This function suppresses the machine vibration when the positioning data is switched during continuous path control in the interpolation control.	12.3.3
	Output timing selection of near pass control	This function allows the user to select the timing to output the difference (\triangle ℓ) between the actual and the set positioning end addresses in continuous path control, in which the difference (\triangle ℓ) is output during the execution of the next positioning data.	12.3.4
	Speed limit function	If the command speed exceeds " Pr.8 Speed limit value" during control, this function limits the commanded speed to within the " Pr.8 Speed limit value" setting range.	12.4.1
Functions that limit control	Torque limit function *2	If the torque generated by the servomotor exceeds " Pr.17 Torque limit setting value" during control, this function limits the generated torque to within the " Pr.17 Torque limit setting value" setting range.	12.4.2
	Software stroke limit function	If a command outside of the upper/lower limit stroke limit setting range, set in the parameters, is issued, this function will not execute positioning for that command.	12.4.3
	Hardware stroke limit function	This function carries out deceleration stop with the limit switch connected to the QD75 external device connector.	12.4.4
	Speed change function	This function changes the speed during positioning. Set the new speed in the speed change buffer memory (Cd.14 New speed value), and change the speed with the Speed change request (Cd.15).	12.5.1
Functions that change control	Override function	This function changes the speed within a percentage of 1 to 300% during positioning. This is executed using " Cd.13 Positioning operation speed override".	12.5.2
details	Acceleration/deceleration time change function	This function changes the acceleration/deceleration time during speed change. (Functions added to the speed change function and override function)	12.5.3
	Torque change function	This function changes the "torque limit value" during control.	12.5.4
	Target position change function	This function changes the target position during positioning. Position and speed can be changed simultaneously.	12.5.5

- *1: The near pass function is featured as standard and is valid only for position control. It cannot be set to be invalid with parameters.
- *2: Using "Torque limit function" requires a "D/A conversion module" and a "drive unit capable of torque limit command with analog voltage".

Sub function	Details	Reference section
IARCHITE RESIDENT RESIDENTIAN TURCTION X 3	This function restores the absolute position of designated axis. By this function, the OPR after power ON from OFF is not required once the OPR is executed when the system operation is started.	12.6

^{*3:} To execute the "absolute position restoration function", the following are required: "16-point input module"; "16-point output module"; and "drive unit capable of configuring an absolute position detection system, which is a Mitsubishi Electric General-Purpose AC Servo having an absolute position detection function (absolute position data transference protocol) equivalent to that of MR-J3-\(\triangle A'\).

	Sub function	Details	Reference section
	Step function	This function temporarily stops the operation to confirm the positioning operation during debugging, etc. The operation can be stopped at each "automatic deceleration" or "positioning data".	12.7.1
	Skip function	This function stops (decelerates to a stop) the positioning being executed when the skip signal is input, and carries out the next positioning.	12.7.2
	M code output function	This function issues a command for a sub work (clamp or drill stop, tool change, etc.) corresponding to the M code No. (0 to 65535) that can be set for each positioning data.	12.7.3
	Teaching function	This function stores the address positioned with manual control into the positioning address having the designated positioning data No. (Cd.39).	12.7.4
Other functions	Command in-position function	At each automatic deceleration, this function calculates the remaining distance for the QD75 to reach the positioning stop position. When the value is less than the set value, the "command in-position flag" is set to "1". When using another auxiliary work before ending the control, use this function as a trigger for the sub work.	12.7.5
	Acceleration/deceleration process function	This function adjusts the control acceleration/deceleration. (acceleration/deceleration time and curve).	12.7.6
	Continuous operation interrupt function	This function interrupts continuous operation. When this request is accepted, the operation stops when the execution of the current positioning data is completed.	6.5.4
	Pre-reading start function	This function shortens the virtual start time.	12.7.7
	Deceleration start flag function	Function that turns ON the flag when the constant speed status or acceleration status switches to the deceleration status during position control, whose operation pattern is "Positioning complete", to make the stop timing known.	12.7.8
	Stop command processing for deceleration stop function	Function that selects a deceleration curve when a stop cause occurs during deceleration stop processing to speed 0.	12.7.9

■ Common functions

The outline of the functions executed as necessary are described below. (Refer to PART 2 for details on each function.)

Common functions	Details	Reference section
Parameter initialization function	This function returns the "parameters" stored in the QD75 buffer memory and flash ROM to the default values. The following two methods can be used. 1) Method using sequence program 2) Method using GX Configurator-QP	13.2
Execution data backup function	This functions stores the "setting data", currently being executed, into the flash ROM. 1) Method using sequence program 2) Method using GX Configurator-QP	13.3
External I/O signal logic switching function	This function switches I/O signal logic according to externally connected devices. This function enables the use of the system that does not use b (N.C.)-contact signals, such as Drive unit READY or Upper/lower limit signal, by setting parameters to positive logic.	13.4
External I/O signal monitor function	This function monitors the external I/O signal monitor information in the module's detailed information which can be displayed on the system monitor of GX Developer*4.	13.5

^{*4:} For the QD75P QD75D, this function is available in GX Developer (SW6D5C-GPPW-E or later).

For the QD75P N/QD75D, external I/O signals cannot be monitored on GX Developer. Use the system monitor of GX Works2.

3.2.4 Combination of QD75 main functions and sub functions

With positioning control using the QD75, the main functions and sub functions can be combined and used as necessary. A list of the main function and sub function combinations is given below.

Sub functions				Functions characteristic to machine OPR		
				OPR retry function	OP shift function	
Main functions			Combination with operation pattern. *1	OPF	Q	
OPR control Machine OPR control		ntrol	×	0	0	
OPR CONTION	Fast OPR control		×	×	×	
Major positioning control	Position control	1-axis linear control	0	×	×	
		2-, 3-, or 4-axis linear interpolation control	0	×	×	
		1-axis fixed-feed control	\triangle (Continuous path control cannot be set)	×	×	
		2-, 3-, or 4-axis fixed-feed control (interpolation)	riangle (Continuous path control cannot be set)	×	×	
		2-axis circular interpolation control	0	×	×	
		3-axis helical interpolation control	0	×	×	
	Speed control (1- to 4-axis)		\triangle (Only independent positioning control can be set)	×	×	
	Speed-position switching control		\triangle (Continuous path control cannot be set)		×	
	Position-speed switching control		\triangle (Only independent positioning control can be set)	×		
	NOP instruction	Current value changing	\triangle (Continuous path control cannot be set)			
		NOP instruction	×	×	×	
		JUMP instruction	×	×	×	
		LOOP to LEND				
Manual control	JOG operation, inching operation		×	×	×	
	Manual pulse generator operation		×	×	×	

 $[\]odot$: Always combine, \odot : Combination possible, \triangle : Combination limited, \times : Combination not possible

^{*1} The operation pattern is one of the "positioning data" setting items.

^{*2} The near pass function is featured as standard and is valid only for setting continuous path control for position control.

^{*3} Invalid during creep speed.

^{*4} Invalid during continuous path control.

^{*5} Combination with the inching operation is not available. (Inching operation does not perform acceleration/deceleration processing.)

^{*6} Valid for the reference axis only.

^{*7} Valid for only the case where a deceleration start is made during position control.

^{*8} Valid when using the positioning data but invalid when using the positioning start No. 9003.

	unctio			Fu		ons that control	t limit	Func	tions th	at chanç letails	ge co	ontrol				C	Other fu	unctions	i		
Backlash compensation function	Electronic gear function	Near pass function	Output timing selection of near pass control	Speed limit function	Torque limit function	Software stroke limit function	Hardware stroke limit function	Speed change function	Override function	Acceleration/ deceleration time change function	Torque change function	Target position change function	Step function	Skip function	M code output function	Teaching function	Command in-position function	Acceleration/deceleration process function	Pre-reading start function	Deceleration start flag function	Stop command processing for deceleration stop function
0	0		×	0	0	X	0	△*3	△*3	△*3	0	×	X	×	×	X	×	0	X	×	0
 0	0		×	0	0	×	<u></u>	0	0	0	0	×	×	X	×	X	×	0	X	×	0
 0	0		0	0	0	0	0	0	0	0	0	△*4	0	0	0	×	0	0	0	0	0
 0	0		0	0	0	0	0	0	0	0	0	×	0	0	0	×	0	0	0	△*6	0
0	0		×	0	0	0	0	0	0	0	0	×	0	0	0	×	0	0	0	0	0
0	0		×	0	0	0	0	0	0	0	0	×	0	0	0	×	0	0	0	△*6	0
0	0		0	0	0	0	0	0	0	0	0	×	0	0	0	×	0	0	0	×	0
0	0	*2	0	0	0	0	0	0	0	0	0	×	0	0	0	×	0	0	0	×	0
0	0		×	0	0	0	0	0	0	0	0	×	×	×	0	×	×	0	0	×	0
0	0		×	0	0	0	0	0	0	0	0	×	0	О ×	0	×	0	0	0	△*7	0
×	×		×	×	×	×	0	×	×	×	×	×	О ×	×	△*8 ×	×	×	×	×	×	×
×	×		×	×	×	×	0	×	×	×	×	×	×	×	×	×	×	×	×	×	×
0	0		×	0	0	0	0	△*5	△*5	△*5	0	×	×	×	×	0	×	△*5	×	×	×
0	0		×	X	0	0	0	×	×	×	0	×	X	×	×	0	×	×	×	×	×

3.3 Specifications of input/output signals with CPU module

3.3.1 List of input/output signals with CPU module

The QD75 uses 32 input points and 32 output points for exchanging data with the CPU module

The input/output signals when the QD75 is mounted in slot No. 0 of the main base unit are shown below.

Device X refers to the signals input from the QD75 to the CPU module, and device Y refers to the signals output from the CPU module to the QD75.

		$\mathbb{Q} D75 \to CPU \; module$	1		CPU module → QD75	
Device No.		Signal name	Device No.		Signal name	
X0		QD75 READY	Y0		PLC READY	
X1	S	ynchronization flag	Y1			
X2			Y2		Use prohibited	
X3		Use prohibited	Y3			
X4	Axis 1		Y4	Axis 1		
X5	Axis 2	March ON	Y5	Axis 2	A ** . .	
X6	Axis 3	M code ON	Y6	Axis 3	Axis stop	
X7	Axis 4		Y7	Axis 4]	
X8	Axis 1		Y8	Axis 1	Forward run JOG start	
X9	Axis 2		Y9	Axis 1	Reverse run JOG start	
XA	Axis 3	Error detection	YA	Axis 2	Forward run JOG start	
XB	Axis 4		YB	Axis 2	Reverse run JOG start	
XC	Axis 1		YC	Axis 3	Forward run JOG start	
XD	Axis 2	DUCV	YD	Axis 3	Reverse run JOG start	
XE	Axis 3	BUSY	YE	Axis 4	Forward run JOG start	
XF	Axis 4		YF	Axis 4	Reverse run JOG start	
X10	Axis 1		Y10	Axis 1		
X11	Axis 2	Ctart complete	Y11	Axis 2	Desitioning start	
X12	Axis 3	Start complete	Y12	Axis 3	Positioning start	
X13	Axis 4		Y13	Axis 4		
X14	Axis 1		Y14	Axis 1		
X15	Axis 2	Positioning complete	Y15	Axis 2	Execution prohibition flag	
X16	Axis 3		Y16	Axis 3	Lxecution prombition hag	
X17	Axis 4		Y17	Axis 4		
X18			Y18			
X19			Y19			
X1A			Y1A			
X1B		Use prohibited	Y1B		Use prohibited	
X1C		Ose brouinited	Y1C		Osc prombited	
X1D			Y1D			
X1E			Y1E			
X1F			Y1F			

Important

[Y1 to Y3], [Y18 to Y1F], [X2, X3], and [X18 to X1F] are used by the system, and cannot be used by the user.

If these devices are used, the operation of the QD75 will not be guaranteed.

3.3.2 Details of input signals (QD75 \rightarrow CPU module)

The ON/OFF timing and conditions of the input signals are shown below.

Device No.		Signal	name		Details
X0	QD75	READY		READY Not READY/ Watch dog timer error	When the PLC READY signal [Y0] turns from OFF to ON, the parameter setting range is checked. If no error is found, this signal turns ON. When the PLC READY signal [Y0] turns OFF, this signal turns OFF. When watch dog timer error occurs, this signal turns OFF. This signal is used for interlock in a sequence program, etc. ON PLC READY signal [Y0] OFF ON QD75 READY signal [X0] OFF
X1	Synchi flag	ronization		Module access disabled Module access enabled	 After the programmable controller is turned ON or the CPU module is reset, this signal turns ON if the access from the CPU module to the QD75 is possible. When "Asynchronous" is selected in the module synchronization setting of the CPU module, this signal can be used as interlock for the access from a sequence program to the QD75.
X4 X5 X6 X7	Axis 1 Axis 2 Axis 3 Axis 4	M code ON		M code is not set M code is set	 In the WITH mode, this signal turns ON when the positioning data operation is started. In the AFTER mode, this signal turns ON when the positioning data operation is completed. This signal turns OFF with the " Cd.7 M code OFF request". When M code is not designated (when " Da.10 M code" is "0"), this signal will remain OFF. With using continuous path control for the positioning operation, the positioning will continue even when this signal does not turn OFF. However, the warning "M CODE ON SIGNAL START" (warning code: 503) will occur. When the PLC READY signal [Y0] turns OFF, the M code ON signal will also turn OFF. If the operation is started while the M code is ON, the error "M CODE ON SIGNAL START" (error code: 536) will occur.
X8 X9 XA XB	Axis 1 Axis 2 Axis 3 Axis 4	Error detection		No error Error occurrence	This signal turns ON when an error listed in Section 15.2 occurs, and turns OFF when the error is reset on " Cd.5 Axis error rest".
XC XD XE XF	Axis 1 Axis 2 Axis 3 Axis 4	BUSY *1	ON:	Not BUSY BUSY	 This signal turns ON at the start of positioning, OPR or JOG operation. It turns OFF when the "Da.9 Dwell time" has passed after positioning stops. (This signal remains ON during positioning.) This signal turns OFF when the positioning is stopped with step operation. During manual pulse generator operation, this signal turns ON while the "Cd.21 Manual pulse generator enable flag" is ON. This signal turns OFF at error completion or positioning stop.
X10 X11 X12 X13	Axis 1 Axis 2 Axis 3 Axis 4	Start complete		Start incomplete Start complete	This signal turns ON when the positioning start signal turns ON and the QD75 starts the positioning process. (The start complete signal also turns ON during OPR control.) ON Positioning start signal [Y10] OFF ON Start complete signal [X10] OFF
X14 X15 X16 X17		Positioning complete *2		Positioning incomplete Positioning complete	 This signal turns ON for the time set in "Pr.40 Positioning complete signal output time" from the instant when the positioning control for each positioning data No. is completed. For the interpolation control, the positioning completed signal of interpolation axis turns ON during the time set to the reference axis. (It does not turn ON when "Pr.40 Positioning complete signal output time" is "0".) If positioning (including OPR), JOG/Inching operation, or manual pulse generator operation is started while this signal is ON, the signal will turn OFF. This signal will not turn ON when speed control or positioning is canceled midway.

Important

- *1: The BUSY signal turns ON even when position control of movement amount 0 is executed. However, since the ON time is short, the ON status may not be detected in the sequence program.
- *2: "Positioning complete" of the QD75 refers to the point when the pulse output from QD75 is completed.
 - Thus, even if the QD75's positioning complete signal turns ON, the system may continue operation.

3.3.3 Detail of output signals (CPU module → QD75)

The ON/OFF timing and conditions of the output signals are shown below.

Device No.		Signal na	me	Details
YO	PLC RE	EADY	OFF: PLC READY OFF ON: PLC READY ON	 (a) This signal notifies the QD75 that the CPU module is normal. It is turned ON/OFF with the sequence program. The PLC READY signal is turned ON during positioning control, OPR control, JOG operation, inching operation, and manual pulse generator operation, unless the system is in the peripheral device test mode. (b) When parameters are changed, the PLC READY signal is turned OFF depending on the parameter (Refer to CHAPTER 7.). (c) The following processes are carried out when the PLC READY signal turns from OFF to ON. The parameter setting range is checked. The QD75 READY signal [X0] turns ON. (d) The following processes are carried out when the PLC READY signal turns from ON to OFF. In these cases, the OFF time should be set to 100ms or more. The QD75 READY signal [X0] turns OFF. The operating axis stops. The M code ON signal [X4 to X7] for each axis turns OFF, and "0" is stored in " Md.25] Valid M code". (e) When parameters or positioning data (No. 1 to 600) are written from the peripheral device or CPU module to the flash ROM, the PLC READY signal will turn OFF.
Y4 Y5 Y6 Y7	Axis 1 Axis 2 Axis 3 Axis 4	Axis stop	OFF: Axis stop not requested ON: Axis stop requested	 When the axis stop signal turns ON, the OPR control, positioning control, JOG operation, inching operation and manual pulse generator operation will stop. By turning the axis stop signal ON during positioning operation, the positioning operation will be "stopped". Whether to decelerate or suddenly stop can be selected with "Pr.39 Stop group 3 sudden stop selection". During interpolation control of the positioning operation, if the axis stop signal of any axis turns ON, all axes in the interpolation control will decelerate and stop.
Y8 Y9 YA YB YC YD YE YF	Axis 1 Axis 2 Axis 2 Axis 3 Axis 3 Axis 4 Axis 4	Forward run JOG start Reverse run JOG start Forward run JOG start Reverse run JOG start Forward run JOG start Reverse run JOG start Forward run JOG start Reverse run JOG start	JOG not started ON: JOG started	When the JOG start signal is ON, JOG operation will be carried out at the "Cd.17 JOG speed". When the JOG start signal turns OFF, the operation will decelerate and stop. When inching movement amount is set, the designated movement amount is output for one control cycle and then the operation stops.
Y10 Y11 Y12 Y13	Axis 1 Axis 2 Axis 3 Axis 4	Positioning start	OFF: Positioning start not requested ON: Positioning start requested	 OPR operation or positioning operation is started. The positioning start signal is valid at the rising edge, and the operation is started. When the positioning start signal turns ON during BUSY, the warning "Start during operation" (warning code: 100) will occur.
Y14 Y15 Y16 Y17		Execution prohibition flag	OFF: Not during execution prohibition ON: During execution prohibition	If the execution prohibition flag is ON when the positioning start signal turns ON, positioning control does not start until the execution prohibition flag turns OFF. (Pulse output not provided) Used with the "Pre-reading start function". (Refer to Section 12.7.7)

3

- 3.4 Specifications of input/output interfaces with external devices
- 3.4.1 Electrical specifications of input/output signals

■ QD75P□N/QD75D□N

(1) Input specifications

Signal name	Rated input voltage/current	Working voltage range	ON voltage/current	OFF voltage/current	Input resistance	Response time
Drive unit READY (READY) Stop signal (STOP) Upper limit signal (FLS) Lower limit signal	24VDC/5mA	19.2 to 26.4VDC	17.5VDC or more/ 3.5mA or more	7VDC or less/ 1.7mA or less	Approx. 4.7kΩ	4ms or less
(RLS)	5VDC/5mA	4.5 to 6.1VDC	2VDC or more/ 2mA or more	0.5VDC or less/ 0.5mA or less	Approx. 620Ω	1ms or less
	24VDC/5mA	12 to 26.4VDC	10VDC or more/ 3mA or more	3VDC or less/ 0.2mA or less	Approx. 4.7kΩ	1ms or less
Zero signal (PG05/PG024)		ON 3µ OFF	us or less → / 1ms	or more →	or less	
	Differential recei (ON/OFF level		or more, OFF: 0.6\	/ or less)		
	5VDC/5mA	4.5 to 6.1VDC	2.5VDC or more/ 2mA or more	1VDC or less/ 0.1mA or less	Approx. 1.1kΩ	1ms or less
Manual pulse generator A phase (PULSE GENERATOR A) Manual pulse generator B phase (PULSE GENERATOR B)	① Pulse width — ② Phase differed A ph B ph	(Duty ratio:	or more 50%)	hen the A phase sitioning address		
Near-point dog signal (DOG)	24VDC/5mA	19.2 to 26.4VDC	17.5VDC or more/ 3.5mA or more	7VDC or less/ 1.7mA or less	Approx. 4.3kΩ	1ms or less
External command signal (CHG)	24VDC/5mA	19.2 to 26.4VDC	19VDC or more/ 2.7mA or more	7VDC or less/ 0.8mA or less	Approx. 7.7kΩ	1ms or less

(2) Output specifications

Signal name	Rated load voltage	Operating load voltage range	Max. load current/inrush current	Max. voltage drop at ON	Leakage current at OFF	Response time
Deviation counter clear (CLEAR)	5 to 24VDC	4.75 to 30VDC	0.1A/1 point/0.4A 10ms or less	1VDC (TYP) 2.5VDC (MAX)	0.1mA or less	2ms or less (resistance load)
QD75P_N Pulse output F (PULSE F) Pulse output R (PULSE R)	5 to 24VDC	4.75 to 30VDC	50mA/1 point/ 200mA 10ms or less	0.5VDC (TYP)	0.1mA or less	1
QD75D_N Pulse output F (+/-) (PULSE F+/-) Pulse output R (+/-) (PULSE R+/-)	Differential dr	river equivalent to A	AM26C31			

- Select the PULSE/SIGN type, CW/CCW type, and A phase/B phase type using the parameter (Pr.5 Pulse output mode) according to the drive unit specifications.
- The relation of the pulse output with the " | Pr.5 | Pulse output mode" and " | Pr.23 | Output signal logic selection" is shown below:

	Terminal			nal logic selection (bit)	•
output mode*1	name	Positive Forward run	Reverse run	Forward run	ve logic Reverse run
Onen collector con	 inection (QD75P□	L L	Neverse run	1 Olward Tull	Neverse run
•	•	e PULSE COM terminal	as a reference is sh	own (Refer to Section 3	(44 (2))
•	•	F to High and ON to Low		(, (=,-,-
PULSE	PULSE F	High Low		High	
SIGN	PULSE R	High ————————————————————————————————————		High Low	
CW	PULSE F	High Low		High —	
CCW	PULSE R	High Low —		High ————————————————————————————————————	
A phase	PULSE F	High Low		High Low	
B phase	PULSE R	High		High Low	
Differential driver of	onnection (QD75I	D□N)		•	
The voltage of a	terminal having the	e differential driver comr	non terminal as a ret	ference is shown (Refe	
	•		non tenninai as a rei	icicioc io oriowii. (i telei	to Section 3.4.4, (3)
For the differenti	•	erminal, refer to "Section		differential driver comm	• •
	al driver common t	High Low		e differential driver comm	• • •
For the differenti PULSE	al driver common t	High Low High Low		e differential driver comm	• •
PULSE	al driver common t	High Low High Low Low Low Low		e differential driver comm	• • •
	al driver common t PULSE F+ PULSE F-	High Low High Low High		e differential driver comm	• •
PULSE	PULSE F+ PULSE F- PULSE R+ PULSE R-	High Low High Low High Low High Low High		e differential driver comm High Low High Low High Low High Low High	• • •
PULSE	al driver common t PULSE F+ PULSE F- PULSE R+	High Low		e differential driver comm High Low High Low High Low High Low High Low High	• •
PULSE	PULSE F+ PULSE R+ PULSE R- PULSE F+ PULSE R-	High Low High		e differential driver comm High Low High	• •
PULSE SIGN CW	PULSE F+ PULSE R+ PULSE R- PULSE F+	High Low High		e differential driver community of the driver communi	• • •
PULSE SIGN CW	PULSE F+ PULSE R+ PULSE R- PULSE F+ PULSE F- PULSE F+ PULSE F- PULSE R+ PULSE R+ PULSE R-	High Low Hig		e differential driver comm High Low High	• •
PULSE SIGN CW	PULSE F+ PULSE R+ PULSE R- PULSE F+ PULSE F+ PULSE F- PULSE F- PULSE R+ PULSE R+ PULSE R+ PULSE R-	High Low High		e differential driver comm High Low High	• •
PULSE SIGN CW	PULSE F+ PULSE R+ PULSE R- PULSE F+ PULSE F- PULSE F+ PULSE F- PULSE R+ PULSE R+ PULSE R-	High Low Hig		e differential driver comm High Low	• •
PULSE	PULSE F+ PULSE R+ PULSE F- PULSE R- PULSE F+ PULSE F- PULSE F- PULSE R- PULSE R+ PULSE R- PULSE R+ PULSE R-	High Low High		e differential driver comm High Low High	• •

POINT


3

Set the parameters, " Pr.5 Pulse output mode" and " Pr.23 Output signal logic selection", in accordance with the specifications of a connected servo amplifier. If not, the motor may rotate in the opposite direction or may not rotate at all.

Connection examples with a MELSERVO-J3 series servo amplifier are shown below.


Open collector connection (QD75P\(\subseteq N \)

Pr.5 Pulse output mode	QD75P N (Pr.23 Output signal logic selection (bit0))	Logic of MR-J3-—A servo amplifier
CIALICCIAL	Negative logic	Negative logic
CW/CCW	Positive logic	Positive logic
DUI OF/OLON	Negative logic	Negative logic
PULSE/SIGN	Positive logic	Positive logic
	Negative logic	Negative logic
A phase/	Negative logic	Positive logic
B phase	Positive logic	Negative logic
	Positive logic	Positive logic

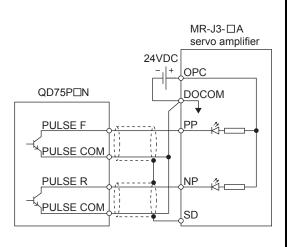

Differential driver connection (QD75D\(\text{D}\)N)

Pr.5 Pulse output mode	QD75D N (Pr.23 Output signal logic selection (bit0))	Logic of MR-J3-□A servo amplifier
014//0014/	Negative logic	Positive logic
CW/CCW	Positive logic	Negative logic
DUI OF OLON	Negative logic	Positive logic
PULSE/SIGN	Positive logic	Negative logic
	Negative logic	Negative logic
A phase/	Negative logic	Positive logic
B phase	Positive logic	Negative logic
	Positive logic	Positive logic

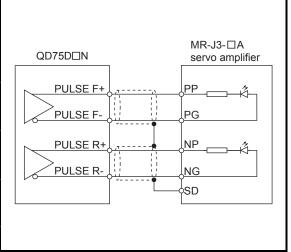

3

■ QD75P□/QD75D□

(1) Input specifications

Signal name	Rated input voltage/current	Working voltage range	ON voltage/current	OFF voltage/current	Input resistance	Response time
Drive unit READY (READY) Stop signal (STOP) Upper limit signal (FLS) Lower limit signal (RLS)	24VDC/5mA	19.2 to 26.4VDC	17.5VDC or more/ 3.5mA or more	7VDC or less/ 1.7mA or less	Approx. 4.7kΩ	4ms or less
	5VDC/5mA	4.5 to 6.1VDC	2VDC or more/ 2mA or more	0.5VDC or less/ 0.5mA or less	Approx. 0.3kΩ	1ms or less
	24VDC/5mA	12 to 26.4VDC	10VDC or more/ 3mA or more	3VDC or less/ 0.2mA or less	Approx. 4.7kΩ	1ms or less
Zero signal (PG05/PG024)		ON 3µ	us or less → /← 1ms	or more →	or less	
	Differential recei (ON/OFF level		o AM26LS32 or more, OFF: 0.6\	/ or less)		
Manual pulse generator A phase (PULSE GENERATOR A) Manual pulse generator B phase (PULSE GENERATOR B)	5VDC/5mA ① Pulse width — ② Phase differed A ph B ph	(Duty ratio:		1VDC or less/ 0.1mA or less 0.1mA or less hen the A phase sitioning address		
Near-point dog signal (DOG) External command signal (CHG)	24VDC/5mA	19.2 to 26.4VDC	17.5VDC or more/ 3.5mA or more	7VDC or less/ 1.7mA or less	Approx. 4.3kΩ	1ms or less

(2) Output specifications

(-/		o con road or ro				
Signal name	Rated load voltage	Operating load voltage range	Max. load current/inrush current	Max. voltage drop at ON	Leakage current at OFF	Response time
Deviation counter clear (CLEAR)	5 to 24VDC	4.75 to 30VDC	0.1A/1 point/0.4A 10ms or less	1VDC (TYP) 2.5VDC (MAX)	0.1mA or less	2ms or less (resistance load)
QD75P Pulse output F (PULSE F) Pulse output R (PULSE R)	5 to 24VDC	4.75 to 30VDC	50mA/1 point/ 200mA 10ms or less	0.5VDC (TYP)	0.1mA or less	1
QD75D Pulse output F (+/-) (PULSE F+/-) Pulse output R (+/-) (PULSE R+/-)	Differential dr	iver equivalent to	AM26C31			

- Select the PULSE/SIGN type, CW/CCW type, and A phase/B phase type using the parameter (Pr.5 Pulse output mode) according to the drive unit specifications.
- The relation of the pulse output with the "Pr.5 Pulse output mode" and "Pr.23 Output signal logic selection" is shown below:

Pr.5 Pulse	Terminal	Pr.23 Outp	out signal logic selection (bit0) Negative logic
output mode ^{*1}	name	Forward run Reverse	
The voltage of a	_)	ce is shown. (Refer to Section 3.4.4, (2).)
PULSE	PULSE F	High Low	High Low
SIGN	PULSE R	High Low	High Low
CW	PULSE F	High	High Low
CCW	PULSE R	High Low	High Low
A phase	PULSE F	High	High
B phase	PULSE R	High	High Low
 The voltage of a 	_	differential driver common terminal	as a reference is shown. (Refer to Section 3.4.4, (3). g of the differential driver common terminal".
PULSE	PULSE F+	High Low	High Low High
	PULSE F-	High Low	Low
SIGN			
SIGN	PULSE F- PULSE R+	High Low High	Low Low High
	PULSE F+ PULSE R+ PULSE R-	Low High Low High Low High Low	Low High Low High High High Low High Lo
cw	PULSE F- PULSE R- PULSE F+ PULSE F- PULSE R-	Low High Low Low Low High Low	High Low Hig


POINT

Set the parameters, " Pr.5 Pulse output mode" and " Pr.23 Output signal logic selection", in accordance with the specifications of a connected servo amplifier. If not, the motor may rotate in the opposite direction or may not rotate at all.

Connection examples with a MELSERVO-J3 series servo amplifier are shown below.


Open collector connection (QD75P_)

Pr.5 Pulse output mode	QD75P Output Signal logic selection (bit0))	Logic of MR-J3-□A servo amplifier	
CIALICCIAL	Negative logic	Negative logic	
CW/CCW	Positive logic	Positive logic	
	Negative logic	Negative logic	
PULSE/SIGN	Positive logic	Positive logic	
	Negative logic	Negative logic	
A phase/ B phase	Negative logic	Positive logic	
	Positive logic	Negative logic	
	Positive logic	Positive logic	

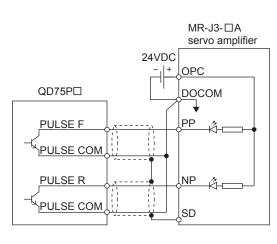

Differential driver connection (QD75D_)

Pr.5 Pulse output mode	QD75D Output Signal logic selection (bit0))	Logic of MR-J3-∐A servo amplifier
CW/CCW	Negative logic	Positive logic
CVV/CCVV	Positive logic	Negative logic
	Negative logic	Positive logic
PULSE/SIGN	Positive logic	Negative logic
	Negative logic	Negative logic
A phase/	Negative logic	Positive logic
B phase	Positive logic	Negative logic
	Positive logic	Positive logic

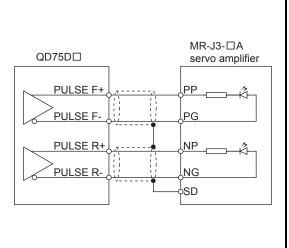


3

3.4.2 Signal layout for external device connection connector

The specifications of the connector section, which is the input/output interface for the QD75 and external device, are shown below.

The signal layout for the QD75 external device connection connector is shown.

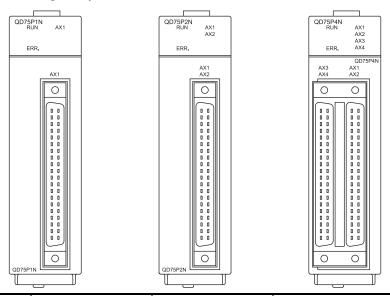

		Axis 4(AX4)		Ax	Axis 3(AX3)		Axis 2(AX2)		Axis 1(AX1)	
Pin layout			Pin No.	Signal name	Pin No.	Signal name	Pin No. *2	Signal name	Pin No.	Signal name
		1	2B20	Vacant	2A20	Vacant	1B20	PULSER B-	1A20	PULSER B+
DOO	0 0	400	2B19	Vacant	2A19	Vacant	1B19	PULSER A-	1A19	PULSER A+
B20		A20	2B18	PULSE COM	2A18	PULSE COM	1B18	PULSE COM	1A18	PULSE COM
B19		A19	*3	PULSE R-	*3	PULSE R-	*3	PULSE R-	*3	PULSE R-
B18	0 0	A18	2B17	PULSE R	2A17	PULSE R	1B17	PULSE R	1A17	PULSE R
B17	0 0	A17	*3	PULSE R+	*3	PULSE R+	*3	PULSE R+	*3	PULSE R+
B16	0 0	A16	2B16	PULSE COM	2A16	PULSE COM	1B16	PULSE COM	1A16	PULSE COM
B15		A15	*3	PULSE F-	*3	PULSE F-	*3	PULSE F-	*3	PULSE F-
1			2B15	PULSE F	2A15	PULSE F	1B15	PULSE F	1A15	PULSE F
B14		A14	*3	PULSE F+	*3	PULSE F+	*3	PULSE F+	*3	PULSE F+
B13	0 0	A13	2B14	CLRCOM	2A14	CLRCOM	1B14	CLRCOM	1A14	CLRCOM
B12	00	A12	2B13	CLEAR	2A13	CLEAR	1B13	CLEAR	1A13	CLEAR
B11	0 0	A11	2B12	RDYCOM	2A12	RDYCOM	1B12	RDYCOM	1A12	RDYCOM
B10	0 0	A10	2B11	READY	2A11	READY	1B11	READY	1A11	READY
B9		A9	2B10	PG0COM	2A10	PG0COM	1B10	PG0COM	1A10	PG0COM
1		l	2B9	PG05	2A9	PG05	1B9	PG05	1A9	PG05
B8		A8	2B8	PG024	2A8	PG024	1B8	PG024	1A8	PG024
B7	0 0	A7	2B7	COM	2A7	COM	1B7	COM	1A7	COM
В6	0 0	A6	2B6	COM	2A6	COM	1B6	COM	1A6	COM
B5	0 0	A5	2B5	CHG	2A5	CHG	1B5	CHG	1A5	CHG
B4	0 0	A4	2B4	STOP	2A4	STOP	1B4	STOP	1A4	STOP
B3		A3	2B3	DOG	2A3	DOG	1B3	DOG	1A3	DOG
		l	2B2	RLS	2A2	RLS	1B2	RLS	1A2	RLS
B2		A2								
B1	0 0	A1								
			2B1	FLS	2A1	FLS	1B1	FLS	1A1	FLS
Fro	Front view of			. 20		0	.5.	. 20		. 20
	modul									
inc	modul	<u> </u>								

^{*} 1: Pin No. "1 \square \square " indicates the pin No. for the right connector. Pin No. "2 \square \square " indicates the pin No. for the left connector.

^{*2:} When a 1-axis module is used, pin Nos. 1B1 to 1B18 are "vacant".

^{*3:} The upper line indicates the signal name for the QD75P_N/QD75P_, and the lower line indicates the signal name for the QD75D_N/QD75D_.

3.4.3 List of input/output signal details

3

The details of each QD75 external device connection connector are shown below:


	Pin No.				Signal details			
Signal name	AX1 AX2 AX3 AX4		AX4	(Negative logic is selected by external I/O signal logic selection)				
Manual pulse generator A phase (PULSER A+) Manual pulse generator B phase (PULSER B+)		.19 .20	-	_	 Input the pulse signal from the manual pulse generator A phase and B phase. If the A phase leads the B phase, the positioning address will increase at the rising and falling edges of each phase. If the B phase leads the A phase, the positioning address will decrease at the rising and falling edges of each phase. 			
Manual pulse generator A common (PULSER A-) Manual pulse generator B common (PULSER B-)	1B19 1B20		-		319		[When increased] A phase B phase Positioning address +1+1+1+1+1+1+1+1 address -1-1-1-1-1-1	
Zero signal (+24V) (PG024)	1A8	1B8	2A8	2B8	 Input the zero signal for machine OPR. Use the pulse encoder's zero signal and so on. Also use this signal when the machine OPR method is the stopper method 			
Zero signal (+5V) (PG05)	1A9	1B9	2A9	2B9	and the OPR complete is input from an external source. The zero signal is detected at turning from OFF to ON.			
Zero signal common (PG0COM)	1A10	1B10	2A10	2B10	Common for zero signal (+5V) and zero signal (+24V).			
Pulse output F (+) (PULSE F+) Pulse output F (–) (PULSE F-) Pulse output R (+) (PULSE R+)	1A16	1B15 1B16 1B17	2A16	2B16	Output the positioning pulses and pulse sign for the differential driver output system compatible drive unit. (QD75D_N/QD75D_ only)			
Pulse output R (–) (PULSE R-)		1B18						
Pulse output F (PULSE F) Pulse output F common (PULSE COM)		1B15 1B16			Output the positioning pulses and pulse sign for the open collector output			
Pulse output R (PULSE R) Pulse output R common		1B17			system compatible drive unit. (QD75P_N/QD75P_ only)			
(PULSE COM)		5						
Upper limit signal (FLS)	1A1	1B1	2A1	2B1	 This signal is input from the limit switch installed at the upper limit position of the stroke. Positioning will stop when this signal turns OFF. When OPR retry function is valid, this will be the upper limit for finding the near-point dog signal. 			
Lower limit signal (RLS)	1A2	1B2	2A2	2B2	This signal is input from the limit switch installed at the lower limit position of the stroke.			

Oi mara di un anno a	Pin No.				Signal details				
Signal name	AX1	AX2	AX3	AX4	(Negative logic is selected by external I/O signal logic selection)				
Near-point dog signal (DOG)	1A3	1B3	2A3	2B3	 This signal is used for detecting the near-point dog during OPR. The near-point dog signal is detected at turning from OFF to ON. 				
Stop signal (STOP)	1A4	1B4	2A4	2B4	Input this signal to stop positioning. When this signal turns ON, the QD75 will stop the positioning being executed. After that, even if this signal is turned from ON to OFF, the system will not start.				
External command signal (CHG)	1A5	1B5	2A5	2B5	 Input a control switching signal during speed-position or position-speed switching control. Use this signal as the input signal of positioning start, speed change request, and skip request from an external source. Set the function to use this signal in " Pr.42 External command function selection". 				
Common (COM)	1A6 1A7	1B6 1B7	2A6 2A7	2B6 2B7	Common for upper/lower limit, near-point dog, stop, and external command signals.				
Drive unit READY (READY)	1A11	1B11	2A11	2B11	 This signal turns ON when the drive unit is normal and can accept the feed pulse. The QD75 checks the drive unit READY signal, and outputs the OPR request if the system is not in the READY state. When the drive unit is inoperable, such as if an error occurs in the drive unit's control power supply, this signal will turn OFF. If this signal is turned OFF during positioning, the system will stop. The system will not start even if this signal is turned ON again. When this signal turns OFF, the OPR complete signal will also turn OFF. 				
Drive unit READY common (RDYCOM)	1A12	1B12	2A12	2B12	Common for drive unit READY signal.				
Deviation counter clear (CLEAR)	1A13	1B13	2A13	2B13	This signal is output during machine OPR. (Note that it is not output during the count method ②.) (Example) When machine OPR is carried out in the stopper ② method. Speed Pr.46 OPR speed Pr.47 Creep speed Stopper Time Near-point dog Zero signal OFF ON Clear signal output time CLEAR After feed pulse output stops The output time of the deviation counter clear signal is set in " Pr.55 Deviation counter clear signal output time". Use the drive unit that can reset the droop pulse amount in the internal deviation counter when the QD75 turns this signal ON. (Note) The deviation counter clear is a signal output by the QD75 during				
Deviation counter clear common (CLRCOM)	1A14	1B14	2A14	2B14	machine OPR. It cannot be output randomly by the user. Common for deviation counter clear signal				

3.4.4 Input/output interface internal circuit

The outline diagrams of the internal circuits for the QD75P1N/QD75D1N/QD75D1QD75D1 external device connection interface are shown below.

(1) Input (Common to QD75P1N, QD75D1N, QD75P1, and QD75D1)

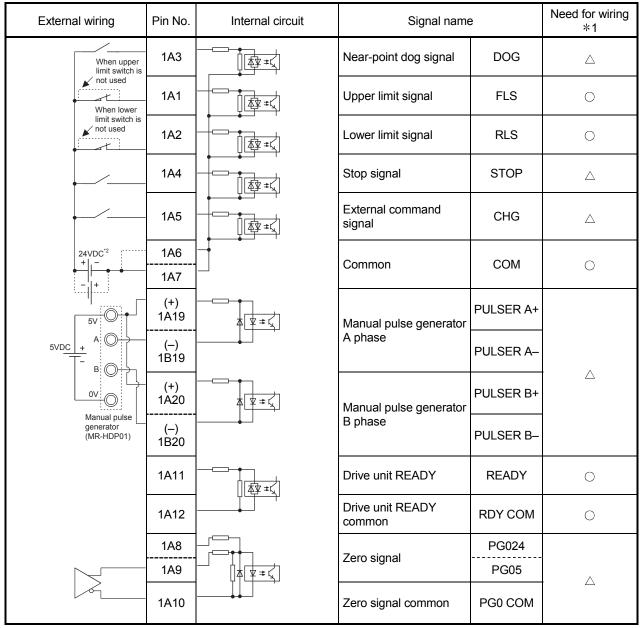

- *1: The symbols in Need for wiring column indicate the following meanings:
 - O: Wiring is necessary for positioning.
 - \triangle : Wiring is necessary depending on the situation.
- *2: Either polarity can be connected to the common (COM).

(a) Input signal ON/OFF status

The input signal ON/OFF status is defied by the external wiring and logic setting.

This is explained below with the example of near-point dog signal (DOG). (The other input signals also perform the same operations as the near-point dog signal (DOG).)

Logic setting *3, *4	External wiring *4	ON/OFF status of near-point dog signal (DOG) as seen from QD75
Negative logic (Initial value)	(Voltage not applied) DOG 24VDC + - COM	OFF
	(Voltage applied) DOG 24VDC + - COM	ON
Positive logic	(Voltage not applied) DOG 24VDC + - COM	ON
	(Voltage applied) DOG 24VDC + COM	OFF

- *3: Set the logic setting using " Pr.22 Input signal logic selection". For details of the settings, refer to "Section 5.2.3 Detailed parameters 1" and "Section 13.4 External I/O signal logic switching function".
- *4: When using the upper limit signal (FLS) or lower limit signal (RLS), always wire it as a "b" (normally closed) contact in the negative logic setting. The signal will turn OFF to stop positioning.

(b) About logic setting and internal circuit

In the QD75, the case where the internal circuit (photocoupler) is OFF in the negative logic setting is defined as "input signal OFF". Reversely, the case where the internal circuit (photocoupler) is OFF in the positive logic setting is defined as "input signal ON".

<Photocoupler ON/OFF status>

When voltage is not applied: Photocoupler OFF When voltage is applied: Photocoupler ON

(2) Output (For QD75P1N and QD75P1)

External wiring	Pin No.	Internal circuit Sig		name	Need for wiring*1
5 to 24VDC	1A13	** ¥	Deviation counter clear	CLEAR	Δ
5 10 24 4 DC	1A14		Common	CLEAR COM	
Load	1A15		CW A phase	PULSE F	
	1A16	≠	PULSE	PULSE COM	0
Load 5 to 24VDC	1A17	 	CCW	PULSE R	J
+ -	1A18		B phase SIGN	PULSE COM	

(3) Output (For QD75D1N and QD75D1)

External wiring	Pin No.	Internal circuit	Signal name		Need for wiring*1
Load 5 to 24VDC	1A13	= V	Deviation counter clear	CLEAR	Δ
+ -	1A14		Common	CLEAR COM	
1	1A15	 	CW	PULSE F+	
	1A16		A phase PULSE	PULSE F-	0
	1A17	 	CCW	PULSE R+	
	1A18		B phase SIGN	PULSE R-	
<i>h</i>	*2	m	Differential driver common terminal	PULSE COM	Δ

- *1: The symbols in Need for wiring column indicate the following meanings:
 - \bullet \bigcirc : Wiring is necessary for positioning.
 - \triangle : Wiring is necessary depending on the situation.
- *2: A terminal block at the bottom of the module. (Refer to Section 4.1.2)

CHAPTER 4 INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT

The installation, wiring and maintenance of the QD75 are explained in this chapter.


Important information such as precautions to prevent malfunctioning of the QD75, accidents and injuries as well as the proper work methods are described. Read this chapter thoroughly before starting installation, wiring or maintenance, and always following the precautions.

4.1	Outline	of installation, wiring and maintenance	4-	2
	4.1.1	Installation, wiring and maintenance procedures	4-	2
	4.1.2	Names of each part	4-	3
	4.1.3	Handling precautions	4-	5
4.2	Installa	tion	4-	7
	4.2.1	Installation precautions	4-	7
4.3	Wiring	·		
	4.3.1	Wiring precautions	4-	8
	4.3.2	Wiring of the differential driver common terminal	4-	14
4.4	Checkir	ng the installation and wiring	4-	15
	4.4.1	Items to check when installation and wiring are completed	4-	15
4.5	Mainter	nance	4-	16
	4.5.1	Maintenance precautions	4-	16
		Disposal precautions		
		·		

4.1 Outline of installation, wiring and maintenance


4.1.1 Installation, wiring and maintenance procedures

The outline and procedures for QD75 installation, wiring and maintenance are shown below.

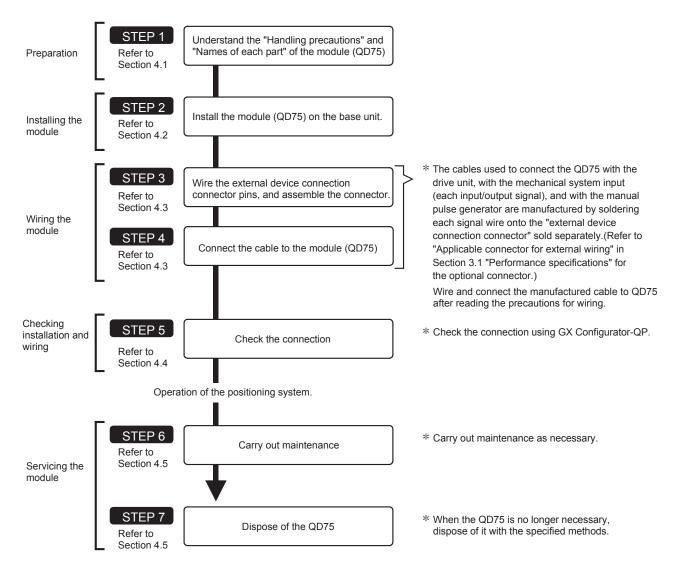


4.1.2 Names of each part

(1) The part names of the QD75 are described with the QD75P□N/QD75D□N as an example. The QD75P□N/QD75D□N and QD75P□/QD75D□ are different in the indication of their model names and serial numbers

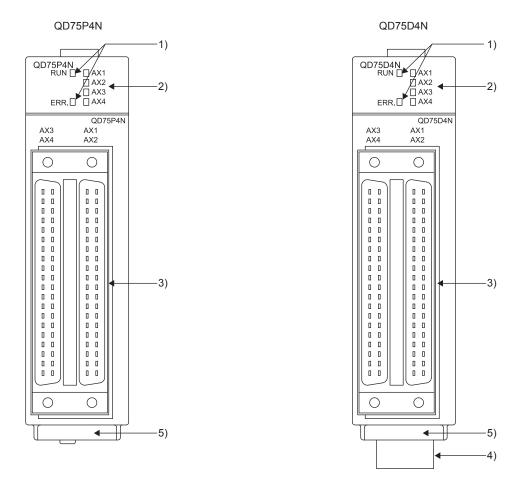

No.	Name	Details
1)	RUN indicator LED, ERR indicator LED	Defeate the most news
2)	Axis display LED (AX1 to AX4)	Refer to the next page.
3)	External device connector	Connector for connection with the drive unit, mechanical system input or manual pulse generator. (40-pin connector) AX1: Axis 1, AX2: Axis 2, AX3: Axis 3, AX4: Axis 4 For details, refer to Section 3.4.2 "Signal layout for external device connection connector".
4)		Terminal connected to the differential receiver common of the drive unit. For details, refer to Section 4.3.2 "Wiring of the differential driver common terminal".
5)	Serial number plate	Indicates the serial number of the QD75

(2) The LED display indicates the following operation statuses of the QD75 and axes.

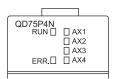

Display		Attention point	Description	Disp	olay	Attention point	Description
	□ AX1 □ AX2 □ AX3 □ AX4	RUN is OFF.	Hardware failure, watch dog timer error	RUN ■ ERR □	■ AX1 □ AX2 □ AX3 □ AX4	AX1 (or other axis) illuminates.	The corresponding axis is in operation.
	_ : : : : : : : : : : : : : : : : : : :	RUN illuminates. ERR is OFF.	The module operates normally.	RUN ■ ERR ◆	♠ AX1□ AX2□ AX3□ AX4	ERR flashes. AX1 (or other axis) flashes.	An error occurs on the corresponding axis.
	□ AX1 □ AX2 □ AX3 □ AX4	ERR illuminates.	System error	RUN ■ ERR ■	■ AX1 ■ AX2 ■ AX3 ■ AX4	All LEDs illuminate.	Hardware failure
		AX1 to AX4 are OFF.	The axes are stopped or on standby.				

The symbols in the Display column indicate the following statuses:

□: Turns OFF. ■: Illuminates. ◆: Flashes.

(3) The interface of each QD75 is as shown below.

QD75P1N QD75P2N QD75P4N QD75D1N QD75D2N QD75D4N QD75D4

4.1.3 Handling precautions

Handle the QD75 and cable while observing the following precautions.

[1] Handling precautions

↑ CAUTION

- Use the programmable controller in an environment that meets the general specifications
 contained in QCPU User's Manual(Hardware Design, Maintenance and Inspection) to use.
 Using this programmable controller in an environment outside the range of the general
 specifications may cause electric shock, fire, malfunction, and damage to or deterioration of the
 product.
- Do not directly touch the conductive section and electronic parts of the module. Failure to observe this could lead to module malfunctioning or trouble.
- Make sure that foreign matter, such as cutting chips or wire scraps, do not enter the module. Failure to observe this could lead to fires, trouble or malfunctioning.
- Never disassemble or modify the module.
 Failure to observe this could lead to trouble, malfunctioning, injuries or fires.

[2] Other precautions

(1) Main body

- The main body case is made of plastic. Take care not to drop or apply strong impacts onto the case.
- Do not remove the QD75 PCB from the case. Failure to observe this could lead to faults.

(2) Cable

- · Do not press on the cable with a sharp object.
- Do not twist the cable with force.
- · Do not forcibly pull on the cable.
- · Do not step on the cable.
- · Do not place objects on the cable.
- · Do not damage the cable sheath.

(3) Installation environment

Do not install the module in the following type of environment.

- Where the ambient temperature exceeds the 0 to 55°C range.
- Where the ambient humidity exceeds the 5 to 95%RH range.
- Where there is sudden temperature changes, or where dew condenses.
- · Where there is corrosive gas or flammable gas.
- Where there are high levels of dust, conductive powder, such as iron chips, oil mist, salt or organic solvents.
- Where the module will be subject to direct sunlight.
- Where there are strong electric fields or magnetic fields.
- Where vibration or impact could be directly applied onto the main body.

4.2 Installation

4.2.1 Installation precautions

The precautions for installing the QD75 are given below. Refer to this section as well as "4.1.3 Handling precautions" when carrying out the work.

Installation precautions

⚠ WARNING

 Completely turn off the externally supplied power used in the system before cleaning or tightening the screws.

Failure to turn all phases OFF could lead to electric shocks.

↑ CAUTION

- Never disassemble or modify the module.
 Failure to observe this could lead to trouble, malfunctioning, injuries or fires.
- Completely turn off the externally supplied power used in the system before installing or removing the module.
 - Failure to turn all phases OFF could lead to module trouble or malfunctioning.
- Do not install/remove the module to/from the base unit, or the terminal block to/from the module more than 50 times after the first use of the product (IEC 61131-2 compliant). Failure to do so may cause the module to malfunction due to poor contact of connector.
- Use the programmable controller in an environment that meets the general specifications
 contained in QCPU User's Manual(Hardware Design, Maintenance and Inspection) to use.
 Using this programmable controller in an environment outside the range of the general
 specifications may cause electric shock, fire, malfunction, and damage to or deterioration of the
 product.
- Hold down the module mounting lever at the bottom of the module and securely insert the
 module fixing projection into the fixing holes of the base module. Improper mounting of the
 module may lead to malfunctioning, faults, or dropping.

When using the module in the environment subject to much vibration, secure the module with a screw.

Tighten the screw within the range of the specified tightening torque.

Insufficient tightening may lead to dropping, short-circuit, or malfunctioning.

Excessive tightening may damage the screw or module, leading to dropping, short-circuit, or malfunctioning.

4.3 Wiring

The precautions for wiring the QD75 are given below. Refer to this section as well as "4.1.3 Handling precautions" when carrying out the work.

4.3.1 Wiring precautions

- Always confirm the terminal layout before connecting the wires to the QD75.
 (For the terminal layout, refer to Section 3.4.2 "Signal layout for external device connection connector".)
- (2) Correctly solder the external wiring connector. An incomplete soldering could lead to malfunctioning.
- (3) Make sure that foreign matter such as cutting chips and wire scraps does not enter the QD75. Failure to observe this could lead to fires, faults or malfunctioning.
- (4) A protective label is attached on the top of the QD75 to avoid foreign matter such as wire scraps from entering inside during wiring process. Do not remove the label until the wiring is completed. Before starting the system, however, be sure to remove the label to ensure heat radiation.
- (5) Tighten the connector screws within the specified torque range. Undertightening can cause short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
- (6) When disconnecting the cable from the QD75 or the drive unit, do not pull the cable by the cable part. Hold the connector part of the cable. Pulling the cable connected to the QD75 or the drive unit may result in malfunction or damage to the module, drive unit, or cable.
- (7) Do not bundle or adjacently lay the connection cable connected to the QD75 external I/O signals or drive unit with the main circuit line, power line, or the load line other than that for the programmable controller. Separate these by 100mm as a guide. Failure to observe this could lead to malfunctioning caused by noise, surge, or induction.
- (8) The shielded cable for connecting QD75 can be secured in place. If the shielded cable is not secured, unevenness or movement of the shielded cable or careless pulling on it could result in damage to the QD75 or drive unit or shielded cable or defective cable connections could cause mis-operation of the unit.
- (9) If the cable connected to the QD75 and the power line must be adjacently laid (less than 100mm), use a shielded cable. Ground the shield of the cable securely to the control panel on the QD75 side. (A wiring example is given on the next page.)


[Applicable connectors]

The table below shows applicable connectors for external devices. When wiring, use applicable wires and an appropriate tightening torque.

Mitsubishi Electr	ic 40-pin connector		Wire		
Model	Tightening torque	Diameter	Туре	Material	Temperature rating
A6CON1		0.3mm ² (22AWG)			
A6CON2	0.20 to 0.29N • m	0.088 to 0.24mm ² (28 to 24AWG)	Stranded	Copper	75°C or more
A6CON4		0.3mm ² (22AWG)			

[Wiring example of shielded cable]


The following shows a wiring example for noise reduction in the case where the connector A6CON1 is used.

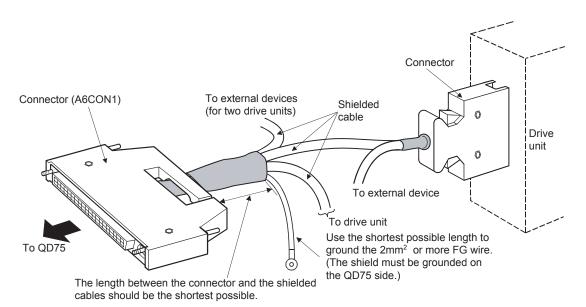


[Processing example of shielded cables]

Connect a cable with the FG wire and bind all shielded cables as shown below.

Remove the covering from all shielded cables and bind the appeared shield with a conductive tape.

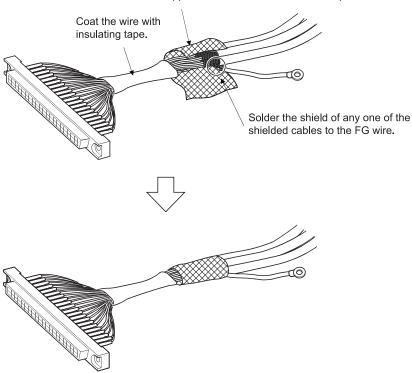

Assembling of connector (A6CON1)

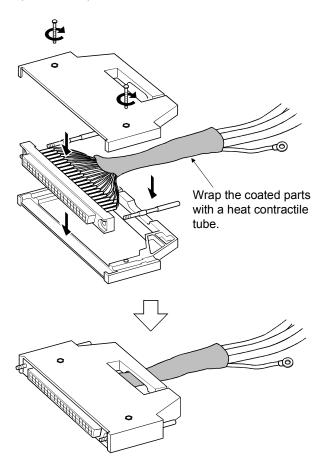


- (10) For compliance with the EMC and Low Voltage Directives, satisfy the following requirements.
 - The cable connecting the drive unit and the QD75 must be the length below.

QD75P\(\text{\tinx{\text{\tinx{\text{\ti}\text{\texi\text{\tin}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\tin}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\te\


- The cables connected to the external device for the QD75 must be 30m or shorter. (except the one for pulse output)
 - Use shielded twisted pair cables and an AD75CK type cable clamp (manufactured by Mitsubishi Electric) to ground the cables to the control box.

Even when compliance with the EMC Directive is not required, attaching an AD75CK type cable clamp to the cable connected to the QD75 may reduce the influence of external noise.

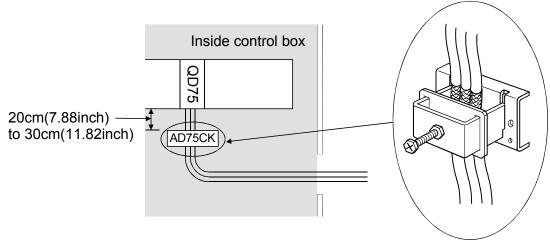

For details on AD75CK, refer to the following. AD75CK-type Cable Clamping Instruction Manual

[Wiring examples using duct (incorrect example and corrected example)]

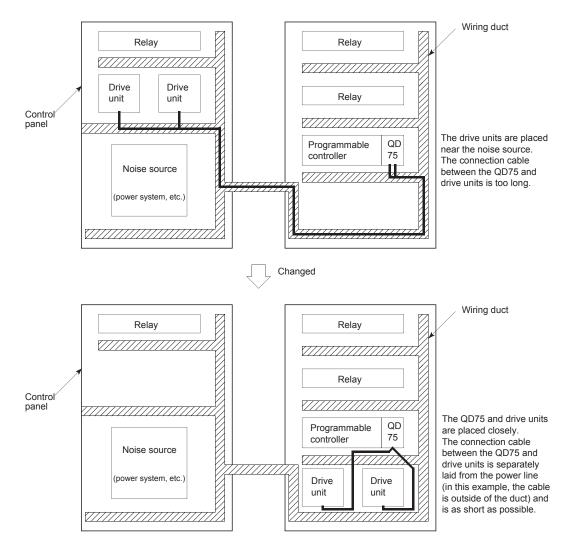

(11) The influence of noise may be reduced by installing ferrite cores to the cable connected to the QD75 as a noise reduction technique.
For the noise reduction techniques related to connection with the servo amplifier, also refer to the instruction manual of the servo amplifier.

4.3.2 Wiring of the differential driver common terminal

When the differential driver output system (QD75D \square N/QD75D \square) is used, a potential difference between commons may occur between the differential driver common terminal and the differential receiver common terminal of the drive unit. To remove the potential difference between commons, connect the differential driver common terminal of the QD75D \square N/QD75D \square and the differential receiver common terminal of the drive unit.

When the common terminal of the drive unit is photocoupler-connected, the wiring to the differential driver common terminal of the QD75D \square N/QD75D \square is not needed since a potential difference between commons does not exist.

(For the drive unit specifications, refer to the manual of the used drive unit.)

Applicable connectors


To wire the differential driver common terminal, use the wire applied to the following table.

	Wire diameter	Туре	Material	Temperature rating
0.24 to 2.5mm ² (24 to 12AWG)		Stranded wire/single wire	Copper	75°C or more

Wiring example

The following shows an example of wiring to the differential driver common terminal of the QD75D \square N/QD75D \square .

Up to two cables can be connected to one differential driver common terminal. (For details, refer to Section 3.1 "Performance specifications".

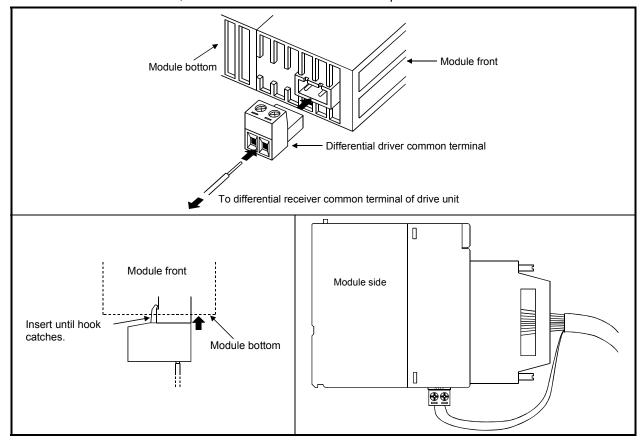

4.4 Checking installation and wiring

4.4.1 Items to check when installation and wiring are completed

Check the following points when completed with the QD75 installation and wiring.

- Is the module correctly wired? ... "Connection confirmation"
 With "connection confirmation", the following three points are confirmed using GX Configurator-QP's connection confirmation function. (GX Configurator-QP is required for this "connection confirmation".)
 - Are the QD75 and servo amplifier correctly connected?
 - Are the servo amplifier and servomotor correctly connected?
 - Are the QD75 and external device (input/output signal) correctly connected?

With this "connection confirmation", "whether the direction that the QD75 recognizes as forward run matches the address increment direction in the actual positioning work", and "whether the QD75 recognizes the external input/output signals such as the near-point dog signal and stop signal" can be checked.

Refer to GX Configurator-QP Operating Manual for details on "Connection confirmation".

Note that GX Developer (SW6D5C-GPPW-E or later) *1 may also be used to "confirm the connection between the QD75 and external device (I/O signals). For details, refer to Section 13.5 "External I/O signal monitor function" and GX Developer Operating Manual.

*1: For the QD75P\(\top\)N/QD75D\(\top\)N, external I/O signals cannot be monitored on GX Developer. Use the system monitor of GX Works2. For details on the system monitor of GX Works2, refer to GX Works2 Version 1 Operating Manual (Common).

Important

If the QD75 is faulty, or when the required signals such as the near-point dog signal and stop signal are not recognized, unexpected accidents such as "not decelerating at the near-point dog during machine OPR and colliding with the stopper", or "not being able to stop with the stop signal" may occur. The "connection confirmation" must be carried out not only when structuring the positioning system, but also when the system has been changed with module replacement or rewiring, etc.

4.5 Maintenance

4.5.1 Maintenance precautions

The precautions for servicing the QD75 are given below. Refer to this section as well as "4.1.3 Handling precautions" when carrying out the work.

↑ WARNING

 Always turn all phases of the power supply OFF externally before cleaning or tightening the screws.

Failure to turn all phases OFF could lead to electric shocks.

↑ CAUTION

- Never disassemble or modify the module.
 Failure to observe this could lead to trouble, malfunctioning, injuries or fires.
- Completely turn off the externally supplied power used in the system before installing or removing the module.

Failure to turn all phases OFF could lead to module trouble or malfunctioning.

4.5.2 Disposal precautions

⚠ CAUTION

When disposing of the product, handle it as industrial waste.

CHAPTER 5 DATA USED FOR POSITIONING CONTROL

The parameters and data used to carry out positioning control with the QD75 are explained in this chapter.

With the positioning system using the QD75, the various parameters and data explained in this chapter are used for control. The parameters and data include parameters set according to the device configuration, such as the system configuration, and parameters and data set according to each control. Read this chapter thoroughly and make settings according to each control or application.


* Read PART 2 for details on each control.

5.1	Types o	if data	5-	2
	5.1.1	Parameters and data required for control	5-	2
	5.1.2	Setting items for positioning parameters	5-	5
	5.1.3	Setting items for OPR parameters	5-	7
	5.1.4	Setting items for positioning data	5-	8
	5.1.5	Setting items for block start data	.5-	10
	5.1.6	Setting items for condition data		
	5.1.7	Types and roles of monitor data		
	5.1.8	Types and roles of control data		
5.2	List of parameters			
	5.2.1	Basic parameters 1		
	5.2.2	Basic parameters 2		
	5.2.3	Detailed parameters 1	.5-	26
	5.2.4	Detailed parameters 2		
	5.2.5	OPR basic parameters		
	5.2.6	OPR detailed parameters		
5.3	List of p	ositioning data	.5-	56
5.4		lock start data		
		ondition data		
5.6	List of n	nonitor data		
	5.6.1	System monitor data		
		Axis monitor data		
5.7	List of c	ontrol data		
	5.7.1	System control data		
	5.7.2	Axis control data	5-1	14

5.1 Types of data

5.1.1 Parameters and data required for control

The parameters and data required to carry out control with the QD75 include the "setting data", "monitor data" and "control data" shown below.

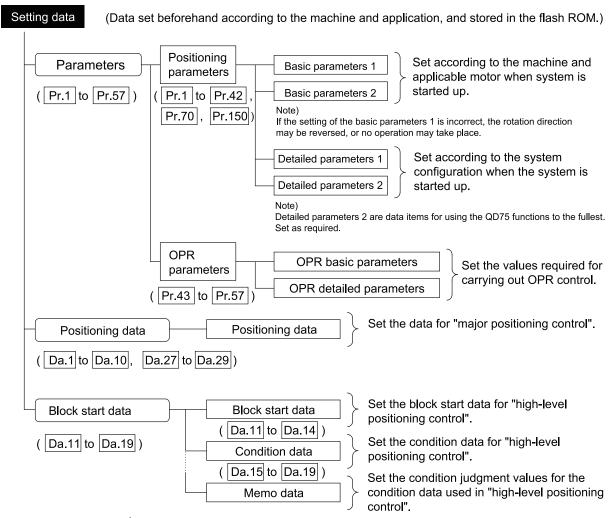


- The data is set with the sequence program or peripheral device. In this chapter, the method using the peripheral device will be explained. (Refer to "Point" on the next page.)
- The basic parameters 1, detailed parameters 1, and OPR parameters become valid when the PLC READY signal [Y0] turns from OFF to ON. Note, however, that the only valid value of the " Pr.5 Pulse output mode" is the value at the moment when the PLC READY signal [Y0] turns from OFF to ON for the first time after the power is switched ON or the CPU module is reset. Once the PLC READY signal [Y0] has been turned ON, the value will not be reset even if another value is set to the parameter and the PLC READY signal [Y0] is turned from OFF to ON.


The only valid data assigned to basic parameters 2, detailed parameters 2, positioning data, or block start data are the data read at the moment when a positioning or JOG operation is started. Once the operation has started, any modification to the data is ignored.

Exceptionally, however, modifications to the following are valid even when they are made during a positioning operation: acceleration time 0 to 3, deceleration time 0 to 3, and external start command.

- Acceleration time 0 to 3 and deceleration time 0 to 3:
 - Positioning data are pre-read and pre-analyzed. Modifications to the data four or more steps after the current step are valid.
- External command function selection: The value at the time of detection is valid.

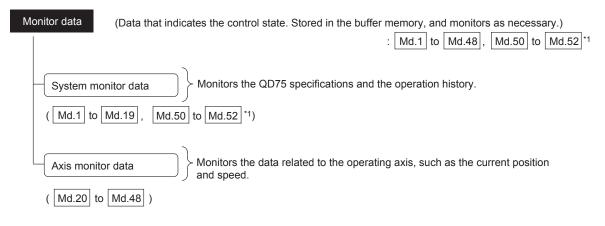

- *1: Md.50 to Md.52 are only for the QD75P\(\sigma\)NQD75D\(\sigma\)N.
 - ♦ The data is monitored with the sequence program or peripheral device. In this chapter, the method using the peripheral device will be explained.

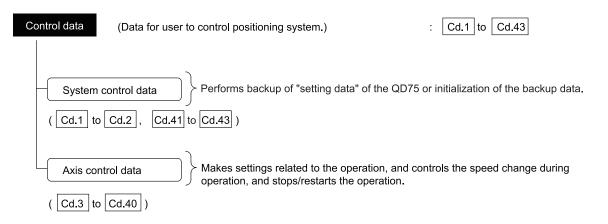

- Control using the control data is carried out with the sequence program.
 - " Cd.41 Deceleration start flag valid" is valid for only the value at the time when the PLC READY signal [Y0] turns from OFF to ON.

POINT

- (1) The "setting data" is created for each axis.
- (2) The "setting data" parameters have determined default values, and are set to the default values before shipment from the factory. (Parameters related to axes that are not used are left at the default value.)
- (3) The "setting data" can be initialized with GX Configurator-QP or the sequence program.
- (4) It is recommended to set the "setting data" with GX Configurator-QP. When executed with the sequence program, many sequence programs and devices must be used. This will not only complicate the program, but will also increase the scan time.

5.1.2 Setting items for positioning parameters

The table below lists items set to the positioning parameters. Setting of positioning parameters is similarly done for individual axes for all controls achieved by the QD75. For details of controls, refer to PART 2. For details of setting items, refer to Section 5.2 "List of parameters".

		Control				Major p	ositionin	g control			Manua	l control	
\				Po	sition co	ntrol			Other	control			
Positic	Positioning parameter				1-axis fixed-feed control 2/3/4-axis fixed-feed control	2-axis circular interpolation control 3-axis helical interpolation control	1 to 4 axis speed control	Speed-position or position-speed control	Current value changing	JUMP instruction, NOP instruction, LOOP to LEND	Manual pulse generator operation	JOG operation Inching operation	Related sub function
	Pr.1	Unit setting	0	0	0	Δ	0	0	0	0	0	0	-
s 1	Pr.2	No. of pulses per rotation (Ap) (Unit: pulse)	0	0	0	0	0	0	0	0	0	0	
neter	Pr.3	Movement amount per rotation (AI)	0	0	0	0	0	0	0	0	0	0	12.3.2
oarar	Pr.4	Unit magnification (Am)	0	0	0	0	0	0	0	0	0	0	
Basic parameters 1	Pr.5	Pulse output mode	0	0	0	0	0	0	0	0	0	0	-
Ř	Pr.6	Rotation direction setting	0	0	0	0	0	0	0	0	0	0	-
	Pr.7	Bias speed at start	0	0	0	0	0	0	_	-	-	0	-
rs 2	Pr.8	Speed limit value	0	0	0	0	0	0	-	_	-	0	12.4.1
Basic parameters	Pr.9	Acceleration time 0	0	0	0	0	0	0	-	_	-	0	12.7.6
pan	Pr.10	Deceleration time 0	0	0	0	0	0	0	-	_	-	(12.7.0
	Pr.11	Backlash compensation amount	0	0	0	0	0	0	-	_	0	0	12.3.1
	Pr.12	Software stroke limit upper limit value	ı	0	0	0	0	0	-	_	0	0	
	Pr.13	Software stroke limit lower limit value	ı	0	0	0	0	0	-	-	0	0	12.4.3
	Pr.14	Software stroke limit selection	ı	0	0	0	0	0	-	-	0	0	12.4.3
	Pr.15	Software stroke limit valid/invalid setting	-	-	-	_	-	_	0	0	0	0	
-	Pr.16	Command in-position width	-	0	0	0	-	0	-	-	-	-	12.7.5
tailed parameters 1	Pr.17	Torque limit setting value	\triangle	0	0	0	0	0	-	-	Δ	Δ	12.4.2
aran	Pr.18	M code ON signal output timing	-	0	0	0	0	0	0	-	-	-	12.7.3
led p	Pr.19	Speed switching mode	-	0	0	0	-	-	-	_	-	-	-
Detail	Pr.20	Interpolation speed designation method	-	Δ	Δ	Δ	Δ	-	_	_	-	-	-
	Pr.21	Current feed value during speed control	-	-	-	_	0	0	_	_	_	-	-
	Pr.22	Input signal logic selection	0	0	0	0	0	0	0	0	0	0	-
	Pr.23	Output signal logic selection	0	0	0	0	0	0	0	0	0	0	-
	Pr.24	Manual pulse generator input selection	-	-	-	-	-	-	_	_	0	-	-
	Pr.150	Speed-position function selection	-	-	-	-	-	0	-	_	-	-	-
	Pr.70	Positioning option valid/invalid setting	-	0	0	0	0	0	0	_	-	-	-

 $[\]odot$: Always set, \odot : Set as required, \times : Setting not possible, \triangle : Setting restricted

^{-:} Setting not required (This is an irrelevant item, so the set value will be ignored. If the value is the default value or within the setting range, there is no problem.)

		Control			N	lajor posi	tioning c	ontrol			Manua	l control	
`					Position contro	ol I			Other	control			
Positioning parameter			OPR control	1-axis linear control 2/3/4-axis linear interpolation control	1-axis fixed-feed control 2/3/4-axis fixed-feed control	2-axis circular interpolation control 3-axis helical interpolation control	1 to 4 axis speed control	Speed-position or position-speed control	Current value changing	JUMP instruction, NOP instruction, LOOP to LEND	Manual pulse generator operation	JOG operation Inching operation	Related sub function
	Pr.25	Acceleration time 1	0	0	0	0	0	0	-	_	-	0	
	Pr.26	Acceleration time 2	0	0	0	0	0	0	-	_	-	0	
	Pr.27	Acceleration time 3	0	0	0	0	0	0	-	-	-	0	12.7.6
	Pr.28	Deceleration time 1	0	0	0	0	0	0	-	-	-	0	12.7.0
	Pr.29	Deceleration time 2	0	0	0	0	0	0	-	-	-	0	
	Pr.30	Deceleration time 3	0	0	0	0	\circ	0	-	-	_	0	
7	Pr.31	JOG speed limit value	-	-	-	-	-	-	-	-	_	0	12.4.1
ers 2	Pr.32	JOG operation acceleration time selection	-	-	-	-	-	-	-	-	-	0	_
amet	Pr.33	JOG operation deceleration time selection	ı	-	ı	-	-	-	ı	_	_	0	-
Detailed parameters	Pr.34	Acceleration/deceleration process selection	0	0	0	0	0	0	Í	-	-	0	
staile	Pr.35	S-curve ratio	0	0	0	0	0	0	-	_	_	0	12.7.6
ă	Pr.36	Sudden stop deceleration time	0	0	0	0	0	0	ı	_	_	0	
	Pr.37	Stop group 1 sudden stop selection	0	0	0	0	0	0	ı	_	_	0	_
	Pr.38	Stop group 2 sudden stop selection	0	0	0	0	0	0	ı	_	_	0	_
	Pr.39	Stop group 3 sudden stop selection	0	0	0	0	0	0	_	_	_	0	_
	Pr.40	Positioning complete signal output time	ı	0	0	0	0	0	0	_	-	_	_
	Pr.41	Allowable circular interpolation error width	ı	_	1	0	-	_	ı	_		_	
	Pr.42	External command function selection	0	0	0	0	0	0	0	_	-	0	12.5.1 12.7.2

: Always set

: Set as required

- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

Checking the positioning parameters

Pr.1 to Pr.42 are checked with the following timing.

- (1) When the "PLC READY signal [Y0]" output from the CPU module to the QD75 changes from OFF to ON
- (2) When the test operation button is turned ON in the test mode using GX Configurator-QP
- (3) When an error check is carried out with GX Configurator-QP

REMARK

• "High-level positioning control" is carried out in combination with the "major positioning control".

Refer to the "major positioning control" parameter settings for details on the parameters required for "high-level positioning control".

5.1.3 Setting items for OPR parameters

When carrying out "OPR control", the "OPR parameters" must be set. The setting items for the "OPR parameters" are shown below.

The "OPR parameters" are set commonly for each axis.

Refer to CHAPTER 8 "OPR CONTROL" for details on the "OPR control", and to Section 5.2 "List of parameters" for details on each setting item.

OPR pa	arameters	OPR control		М	achine O	PR contr	ol		Fast OPR control
OPR basic parameters	Pr.43	OPR method	Near-point dog method	Stopper method 1)	Stopper method 2)	Stopper method 3)	Count method 1)	Count method 2)	
c par	Pr.44	OPR direction	0	0	0	0	0	0	
basi	Pr.45	OP address	0	0	0	0	0	0	
OPR	Pr.46	OPR speed	0	0	0	0	0	0	
	Pr.47	Creep speed	0	0	0	0	0	0	
	Pr.48	OPR retry	R	R	R	1	R	R	
	Pr.49	OPR dwell time	ı	0	-	ı	ı	ı	0
,,	Pr.50	Setting for the movement amount after near-point dog ON	ı	1	-	-	0	0	
neters	Pr.51	OPR acceleration time selection	0	0	0	0	0	0	
Jaran	Pr.52	OPR deceleration time selection	0	0	0	0	0	0	
detailed parameters	Pr.53	OP shift amount	S	8	S	S	S	S	
deta	Pr.54	OPR torque limit value	1	0	0	0	1	1	
OPR	Pr.55	Deviation counter clear signal output time	С	С	С	С	С	1	
	Pr.56	Speed designation during OP shift	S	S	S	S	S	S	
	Pr.57	Dwell time during OPR retry	R	R	R	ı	R	R	

- : Always set
- : Preset parameters are used for machine OPR control.
- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)
- R: Set when using the "12.2.1 OPR retry function".
- S: Set when using the "12.2.2 OP shift function".
- C: Set the deviation counter clear signal output time.

Checking the OPR parameters.

Pr.43 to Pr.57 are checked with the following timing.

- (1) When the "PLC READY signal [Y0]" output from the CPU module to the QD75 changes from OFF to ON
- (2) When the test operation button is turned ON in the test mode using GX Configurator-QP
- (3) When an error check is carried out with GX Configurator-QP

5.1.4 Setting items for positioning data

Positioning data must be set for carrying out any "major positioning control". The table below lists the items to be set for producing the positioning data.

One to 600 positioning data items can be set for each axis.

For details of the major positioning controls, refer to CHAPTER 9 "MAJOR POSITIONING CONTROL". For details of the individual setting items, refer to Section 5.3 "List of positioning data".

	Major posit	ioning control		Positio	n control						0	ther control		
Positioni	ing data		1-axis linear control 2/3/4-axis linear interpolation control	1-axis fixed-feed control 2/3/4-axis fixed-feed control	2-axis circular interpolation control	3-axis helical interpolation control	1 to 4 axis speed control	Speed-position switching control	Position-speed switching control	NOP instruction	Current value changing	JUMP instruction	d007	LEND
r coluent	ng data	Independent positioning	0	(i)	©	0	©	0	0		0	_	_	_
<u> </u>	Operation	control Continuous							0					
Da.1	pattern	positioning control	©	0	©	©	×	0	×	-	©	-	_	-
		Continuous path control	0	×	0	0	×	×	×	-	×	_	-	-
Da.2	Control sys	stem	Linear 1 Linear 2 Linear 3 Linear 4 * 1	Fixed- feed 1 Fixed- feed 2 Fixed- feed 3 Fixed- feed 4	Circular sub Circular right Circular left * 1	Helical sub Helical right Helical left * 1	Forward run speed 1 Reverse run speed 1 Forward run speed 2 Reverse run speed 3 Reverse run speed 3 Reverse run speed 4 Reverse run speed 4 Reverse run speed 4	Forward run speed/ position Reverse run speed/ position	Forward run position/speed Reverse run position/speed	NOP instruction	Current value changing	JUMP instruction	LOOP	LEND
Da.3	Acceleratio	on time No.	0	0	0	0	0	0	0	ı	ı		-	-
Da.4	Deceleration	on time No.	0	0	0	0	0	0	0	1	-	-	-	_
Da.5		nterpolated	: 2-axis interpolation control, 3-axis helical interpolation control :: 1-axis control, 3-axis interpolation control, 4-axis interpolation control					_	-	-	-	_	-	-
Da.6	Positioning movement		0	0	0	0	ı	0	0		New address	-	-	-
Da.7	Arc addres	s	-	-	0	0	-	-	-	-	-	-	-	-
Da.8	Command	speed	0	0	0	0	0	0	0	-	-	-	-	-
Da.9	Dwell time		0	0	0	0	0	0	0	-	-	JUMP destination positioning data No.	-	-
Da.10	M code		0	0	0	○ *2	0	0	0	_	0	JUMP condition data No.	No. of repetitions	_
Da.27	M code ON output timir		0	0	0	0	0	0	0	ı	0	-	-	-
Da.28	ABS directi degrees	ion in	0	0	0	0	0	0	0	-	-	-	-	_
Da.29	Interpolation designation		○: interp	2-axis ir	: 1-axis on terpolation control, 4 contro	on contr -axis int	ol, 3-axis erpolation	-	-	-	-	-	-	-

Checking the positioning data

The items Da.1 to Da.10 are checked at the following timings:

- (1) Startup of a positioning operation
- (2) Error check performed by GX Configurator-QP

 $[\]odot$: Always set, \odot : Set as required, \times : Setting not possible

^{-:} Setting not required (This is an irrelevant item, so the set value will be ignored. If the value is the default value or within the setting range, there is no problem.)

 $[\]star$ 1: Two control systems are available: the absolute (ABS) system and incremental (INC) system.

^{* 2:} Set the M code for the reference axis and the number of pitch for the linear interpolation axis.

5.1.5 Setting items for block start data

The "block start data" must be set when carrying out "high-level positioning control". The setting items for the "block start data" are shown below.

Up to 50 points of "block start data" can be set for each axis.

Refer to CHAPTER 10 "HIGH-LEVEL POSITIONING CONTROL" for details on the "high-level positioning control", and to Section 5.4 "List of block start data" for details on each setting item.

Block sta	High-level positioning control		Condition start	Wait start	Simultaneous start	Repeated start (FOR loop)	Repeated start (FOR condition)
Da.11	Shape (end/continue)	0	0	0	0	0	0
Da.12	Start data No.	0	0	0	0	0	0
Da.13	Special start instruction	_	0	0	0	0	0
Da.14	Parameter	_	0	0	0	0	0

^{○ :} Set as required

■ Checking the block start data

Da.11 to Da.14 are checked with the following timing.

- (1) When the "Block start data" starts
- (2) When an error check is carried out with GX Configurator-QP

^{- :} Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

5.1.6 Setting items for condition data

When carrying out "high-level positioning control" or using the JUMP instruction in the "major positioning control", the "condition data" must be set as required. The setting items for the "condition data" are shown below.

Up to 10 "condition data" items can be set for each axis.

For the "high-level positioning control", JUMP instruction, and setting items, refer to the following.

 "High-level positioning control" Refer to CHAPTER 10 "HIGH-LEVEL POSITIONING CONTROL"

• JUMP instruction......Refer to Section 9.2.23 "JUMP instruction".

Setting itemsRefer to Section 5.5 "List of condition data".

	Control		Major positioning control		High-level positioning control								
Conditio	on data	Other than JUMP instruction	JUMP instruction	Block start (Normal start)	Condition start	Wait start	Simul- taneous start	Repeated start (FOR loop)	Repeated start (FOR condition)				
Da.15	Condition target	_	0	-	0	0	0	_	0				
Da.16	Condition operator	_	0	-	0	0	0	_	0				
Da.17	Address	_	Δ	-	Δ	Δ	-	_	Δ				
Da.18	Parameter 1	_	0	_	0	0	Δ	_	0				
Da.19	Parameter 2	-	Δ	-	Δ	Δ	Δ	_	Δ				

○ : Set as required

 \triangle : Setting limited

Checking the condition data

Da.15 to Da.19 are checked with the following timing.

- (1) When the "Block start data" starts
- (2) When "JUMP instruction" starts
- (3) When an error check is carried out with GX Configurator-QP

^{- :} Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

5.1.7 Types and roles of monitor data

The monitor data area in the buffer memory stores data relating to the operating state of the positioning system, which are monitored as required while the positioning system is operating.

The following data are available for monitoring.

· System monitoring:

Monitoring of the QD75 configuration and operation history (through the system monitor data $\boxed{\text{Md.1}}$ through, $\boxed{\text{Md.19}}$ $\boxed{\text{Md.50}}$ through $\boxed{\text{Md.52}}$ *1) *1: $\boxed{\text{Md.50}}$ through $\boxed{\text{Md.52}}$ are for the QD75P $\boxed{\text{N/QD75D}}$ N only.

· Axis operation monitoring:

Monitoring of the current position and speed, and other data related to the movements of axes (through the axis monitor data $\boxed{\text{Md.20}}$ through $\boxed{\text{Md.48}}$ *2)

- *2: The axis monitor data are refreshed every 0.9ms (QD75P\(\text{N/QD75D}\(\text{N}\)) or 1.8ms (QD75P\(\text{VQD75D}\(\text{)}\)). Note that "\(\text{Md.21}\) Machine feed value", "\(\text{Md.22}\) Feedrate", "\(\text{Md.28}\) Axis feedrate" and "\(\text{Md.30}\) External input/output signal" of QD75P\(\text{VQD75D}\) are refreshed every 56.8ms. Also, "\(\text{Md.23}\) Valid M code", is updated when the "M code ON signal [X4, X5, X6, X7]" turns ON.
- [1] Monitoring the system

■ Monitoring the positioning system operation history

	Monitoring de	etails	Corresponding item				
Whether the system is in	n the test mode	e or not	Md.1 In test mode flag				
	Start inforr	nation	Md.3 Start information				
	Start No.		Md.4 Start No.				
		Year:month (QD75P□N/QD75D□N	Md.50 Start (Year:month)				
History of data that started an operation	Start	Day:hour (QD75P□N/QD75D□N Hour (QD75P□/QD75D□)	Md.5 Start (Day:hour)				
		Minute:second	Md.6 Start (Minute:second)				
	Error upon	starting	Md.7 Error judgment				
		next to the pointer No. latest history is stored	Md.8 Start history pointer				
	Axis in whi	ch the error occurred	Md.9 Axis in which the error occurred				
	Axis error	No.	Md.10 Axis error No.				
		Year:month (QD75P⊡N/QD75D⊡N	Md.51 Axis error occurrence (Year:month)				
History of all errors	Axis error occurrence	Day:hour (QD75P\(\text{QD75D}\text{N}\) Hour (QD75P\(\text{QD75D}\text{\text{Q}}\)	Md.11 Axis error occurrence (Day:hour)				
		Minute:second	Md.12 Axis error occurrence (Minute:second				
		next to the pointer No. latest history is stored	Md.13 Error history pointer				

power is switched ON

Mo	onitoring detai	ls	Corresponding item				
	Axis in which	the warning occurred	Md.14 Axis in which the warning occurred				
	Axis warning	No.	Md.15 Axis warning No.				
		Year:month (QD75P□N/QD75D□N	Md.52 Axis warning occurrence (Year:month)				
History of all warnings	Axis warning occurrence	Day:hour (QD75P⊡N/QD75D⊡N	Md 16 Avia warning accurrance (Daythour)				
		Hour (QD75P□/QD75D□)	Md.16 Axis warning occurrence (Day:hour)				
		Minute:second	Md.17 Axis warning occurrence (Minute:second)				
Number of write accesses of the flash ROM after the where the latest history is stored		Md.18 Warning history pointer					

Number of write accesses to flash ROM Md.19 No. of write accesses to flash ROM

[2] Monitoring the axis operation state

Monitoring the position

Monitor details	Corresponding item
Monitor the current machine feed value	Md.21 Machine feed value
Monitor the current "current feed value"	Md.20 Current feed value
Monitor the current target value	Md.32 Target value

■ Monitoring the speed

	N	Monitor details		Corresponding item
Monitor the current speed	During ind	ependent axis control	Indicates the speed of each axis	
	During interpola- tion control		Indicates the composite speed	Md.22 Feedrate
		When "1: Reference axis speed" is set for " Pr.20 Interpolation speed designation method"	Indicates the reference axis speed	
	Constantly	indicates the speed of	each axis	Md.28 Axis feedrate
Monitor the curre	ent target sp	peed		Md.33 Target speed

■ Monitoring the state

Monitor details	Corresponding item
Monitor the axis operation state	Md.26 Axis operation status
Monitor the latest error code that occurred with the axis	Md.23 Axis error No.
Monitor the latest warning code that occurred with the axis	Md.24 Axis warning No.
Monitor the external input/output signal and flag	Md.30 External input/output signal Md.31 Status
Monitor the valid M codes	Md.25 Valid M code
Monitor whether the speed is being limited	Md.39 In speed limit flag
Monitor whether the speed is being changed	Md.40 In speed change processing flag
Monitor the "start data" point currently being executed	Md.43 Start data pointer being executed
Monitor the "positioning data No." currently being executed	Md.44 Positioning data No. being executed
Monitor the remaining No. of repetitions (special start)	Md.41 Special start repetition counter
Monitor the remaining No. of repetitions (control system)	Md.42 Control system repetition counter
Monitor the block No.	Md.45 Block No. being executed
Monitor the current torque limit value	Md.35 Torque limit stored value
Monitor the "instruction code" of the special start data when using special start	Md.36 Special start data instruction code setting value
Monitor the "instruction parameter" of the special start data when using special start	Md.37 Special start data instruction parameter setting value
Monitor the "start data No." of the special start data when using special start	Md.38 Start positioning data No. setting value
Monitor the "positioning data No." executed last	Md.46 Last executed positioning data No.
Monitor the positioning data currently being executed	Md.47 Positioning data being executed
Monitor the movement amount after the current position control switching when using "speed-position switching control (INC mode)"	Md.29 Speed-position switching control positioning amount
Monitor switching from the constant speed status or acceleration status to the deceleration status during position control whose operation pattern is "Positioning complete"	Md.48 Deceleration start flag

5.1.8 Types and roles of control data

Operation of the positioning system is achieved through the execution of necessary controls. (Data required for controls are given through the default values when the power is switched ON, which can be modified as required by the sequence program.) Controls are performed over system data or machine operation.

• Controlling the system data :

Performs write/initialization, etc. of the QD75 "setting data". (the system control data $\boxed{\text{Cd.1}}$ and $\boxed{\text{Cd.2}}$)

• Controlling the operation :

Setting operation parameters, changing speed during operation, interrupting or restarting operation (the system control data Cd.41 and Cd.42, and the axis control data Cd.3 to Cd.40)

[1] Controlling the system data

Setting and resetting the setting data

Control details	Controlled data item			
Write setting data from buffer memory to flash ROM	Cd.1 Flash ROM write request			
Reset (initialize) parameters	Cd.2 Parameter initialization request			

[2] Controlling the operation

■ Controlling the operation

Control details	Corresponding item
Set which positioning to execute (start No.)	Cd.3 Positioning start No.
Clear (reset) the axis error (Md.23) and warning (Md.24)	Cd.5 Axis error reset
Issue instruction to restart (When axis operation is stopped)	Cd.6 Restart command
End current positioning (deceleration stop), and start next positioning	Cd.37 Skip command
Set start point No. for executing block start	Cd.4 Positioning starting point No.
Stop continuous control	Cd.18 Continuous operation interrupt request
	Cd.30 Simultaneous starting axis start data No. (axis 1 start data No.)
Set start data Nee, for eyes that start up simultaneously	Cd.31 Simultaneous starting axis start data No. (axis 2 start data No.)
Set start data Nos. for axes that start up simultaneously	Cd.32 Simultaneous starting axis start data No. (axis 3 start data No.)
	Cd.33 Simultaneous starting axis start data No. (axis 4 start data No.)
Specify write destination for teaching results	Cd.38 Teaching data selection
Specify data to be taught	Cd.39 Teaching positioning data No.

■ Controlling operation per step

Control details	Corresponding item				
Stop positioning operation after each operation	Cd.35 Step valid flag				
Set unit to carry out step	Cd.34 Step mode				
Issue instruction to continue operation after a step is finished	Cd.36 Step start information				

■ Controlling the speed

Control details	Corresponding item
Set new speed when changing speed during operation	Cd.14 New speed value
Issue instruction to change speed in operation to Cd.14 value (Only during positioning operation and JOG operation)	Cd.15 Speed change request
Change positioning operation speed between 1 and 300% range	Cd.13 Positioning operation speed override
Set inching movement amount	Cd.16 Inching movement amount
Set JOG speed	Cd.17 JOG speed
When changing acceleration time during speed change, set new acceleration time	Cd.10 New acceleration time value
When changing deceleration time during speed change, set new deceleration time	Cd.11 New deceleration time value
Set acceleration/deceleration time validity during speed change	Acceleration/deceleration time change Cd.12 during speed change, enable/disable selection

■ Making settings related to operation

Control details	Corresponding item
Turn M code ON signal OFF	Cd.7 M code OFF request
Set new value when changing current value	Cd.9 New current value
Validate speed-position switching signal from external source	Cd.24 Speed-position switching enable flag
Change movement amount for position control during speed-position switching control (INC mode)	Cd.23 Speed-position switching control movement amount change register
Validate external position-speed switching signal	Cd.26 Position-speed switching enable flag
Change speed for speed control during position-speed switching control	Cd.25 Position-speed switching control speed change register
Set up a flag when target position is changed during positioning	Cd.29 Target position change request flag
Set new positioning address when changing target position during positioning	Cd.27 Target position change value(new address)
Set new speed when changing target position during positioning	Cd.28 Target position change value(new speed)
Set absolute (ABS) moving direction in degrees	Cd.40 ABS direction in degrees
Set manual pulse generator operation validity	Cd.21 Manual pulse generator enable flag
Set scale per pulse of No. of input pulses from manual pulse generator	Cd.20 Manual pulse generator 1 pulse input magnification
Change OPR request flag from "ON to OFF"	Cd.19 OPR request flag OFF request
Validate external command signal	Cd.8 External command valid
Change " Md.35 Torque limit stored value"	Cd.22 New torque value
Set whether " Md.48 Deceleration start flag" is valid or invalid	Cd.41 Deceleration start flag valid
Set the stop command processing for deceleration stop function (deceleration curve re-processing/deceleration curve continuation)	Cd.42 Stop command processing for deceleration stop selection

5.2 List of parameters

5.2.1 Basic parameters 1

Item		Setting value,	Setting value, setting range		Setting value buffer memory address			
	item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
		0 : mm	0					
	Pr.1 Unit setting	1 : inch	1	3	0	150	300	450
	TT.T Offic setting	2 : degree	2		0	130	300	430
		3 : pulse	3					
er pulse	Pr.2 No. of pulses per rotation (Ap) (Unit : pulse)	1 to 65535	1 to 65535 1 to 32767 :Set as a decimal 32768 to 65535 :Convert into hexadecimal and set	20000	1	151	301	451
Movement amount per pulse	Pr.3 Movement amount per rotation (AI)	The setting value range differs according to the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page		20000	2	152	302	452
M	Pr.4 Unit magnification (Am)	1 : 1-fold 10 : 10-fold 100 : 100-fold 1000 : 1000-fold	1 10 100 1000	1	3	153	303	453

Pr.1 Unit setting

Set the unit used for defining positioning operations. Choose from the following units depending on the type of the control target: mm, inch, degree, or pulse. Different units can be defined for different axes (axis 1 to 4).

(Example) Different units (mm, inch, degree, and pulse) are applicable to different systems:

mm or inch.....X-Y table, conveyor (Select mm or inch depending on the machine specifications.)

* When you change the unit, note that the values of other parameters and data will not be changed automatically.

After changing the unit, check if the parameter and data values are within the allowable range.

Set "degree" to exercise speed-position switching control (ABS mode).

Pr.2 to Pr.4 Movement amount per pulse

These parameters define the amount of movement achieved by each single pulse within a pulse train output by the QD75.

The following paragraphs explain how to set the individual parameters Pr.2, Pr.3, and Pr.4 assuming that the unit "mm" is selected with Pr.1.

The movement amount per pulse is given by the following expression:

Movement amount per rotation (AI) Movement amount per pulse = -No. of pulses per rotation (Ap)

* Due to the mechanical tolerance, the actual movement amount may differ slightly from the instructed movement amount. The error can be compensated by adjusting the movement amount per pulse defined here. (Refer to Section 12.3.2 "Electronic gear function".)

POINT

If the movement amount per pulse is less than 1, command frequency variations will occur. Smaller setting will increase variations and may cause machine vibration. If the movement amount per pulse becomes less than 1, also use the electronic gear function of the drive unit and make setting so that the movement amount per pulse is 1 or greater.

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit) *
0 : mm	0.1 to 6553.5 (μm)	1 to 65535 (×10 ⁻¹ μm)
1 : inch	0.00001 to 0.65535 (inch)	1 to 65535 (×10 ⁻⁵ inch)
2 : degree	0.00001 to 0.65535 (degree)	1 to 65535 (×10 ⁻⁵ degree)
3 : pulse	1 to 65535 (pulse)	1 to 65535 (pulse)

* 1 to 32767 : Set as a decimal

32768 to 65535: Convert into hexadecimal and set

Pr.2 No. of pulses per rotation (Ap)

Set the number of pulses required for a complete rotation of the motor shaft. If you are using the Mitsubishi servo amplifier, set the value given as the "resolution per servomotor rotation" in the speed/position detector specifications.

No. of pulses per rotation (Ap) = Resolution per servomotor rotation

* When the "Resolution per servomotor revolution" of Mitsubishi servo amplifier exceeds 65535 pulses, make setting after referring to the Servo Amplifier Instruction Manual.

Pr.3 | Movement amount per rotation (AI), | Pr.4 | Unit magnification (Am)

The amount how the workpiece moves with one motor rotation is determined by the mechanical structure.

If the worm gear lead (mm/rev) is PB and the deceleration rate is 1/n, then

Movement amount per rotation (AL) = PB \times 1/n

However, the maximum value that can be set for this "movement amount per rotation (AI)" parameter is $6553.5\mu m$ (approx. 6.5mm). Set the "movement amount per rotation (AI)" as shown below so that the "movement amount per rotation (AL)" does not exceed this maximum value.

Movement amount per rotation (AL)

- $= PB \times 1/n$
- = Movement amount per rotation (AI) × Unit magnification (Am)
- Note) The unit magnification (Am) is a value of 1, 10, 100 or 1000. If the "PB \times 1/n" value exceeds 6553.5 μ m, adjust with the unit magnification so that the "movement amount per rotation (Al) " does not exceed 6553.5 μ m.

Example 1)

When movement amount per rotation (AL) = PB \times 1/n = 6000.0 μ m (= 6mm)

Movement amount per rotation (AL)

= Movement amount per rotation (AI) × Unit magnification (Am)

= $6000.0 \mu \text{m} \times 1 \text{ time}$


Example 2)

When movement amount per rotation (AL) = PB \times 1/n = 60000.0 μ m (= 60mm)

Movement amount per rotation (AL)

= Movement amount per rotation (AI) × Unit magnification (Am)

 $6000.0 \mu m \times 10 \text{ times}$

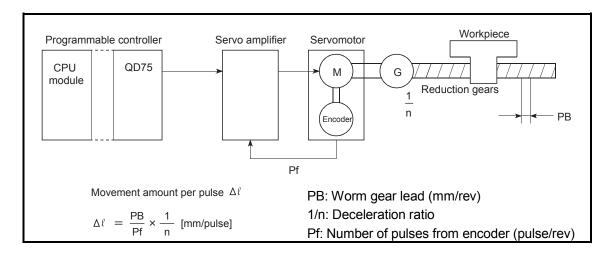

lkovo	Setting value, setting range		Default	Setting value buffer memory address			
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
	0 : PULSE/SIGN mode	0			154	304	
	1 : CW/CCW mode	1		4			
Pr.5 Pulse output mode	2 : A phase/B phase (multiple of 4)	2	1				454
	3 : A phase/B phase (multiple of 1)	3					
Pr.6	0 : Current value increment with forward run pulse output	0	0	5	155	305	455
Rotation direction setting	Current value increment with reverse run pulse output	1		5	100	305	400

Pr.5 Pulse output mode

Set the pulse output mode to match the servo amplifier being used.


IMPORTANT

The only valid value of the "Pr.5 Pulse output mode" is the value at the moment when the PLC READY signal [Y0] turns from OFF to ON for the first time after the power is switched ON or the CPU module is reset. Once the PLC READY signal [Y0] has been turned ON, the value will not be reset even if another value is set to the parameter and the PLC READY signal [Y0] is turned from OFF to ON.

Use " Pr.23 Output signal logic selection" to choose between the positive logic (pulse rising edge detection) and negative logic (pulse falling edge detection). For the output specifications of each pulse output mode, refer to Section 3.4.1, (2) "Output specifications".


An example of the pulse output mode for positive and negative logic is shown below.

(1) PULSE/SIGN mode

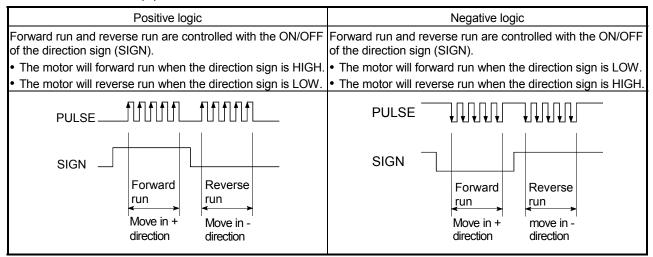

(2) CW/CCW mode

During forward run, the forward run feed pulse (PULSE F) will be output. During reverse run, the reverse run feed pulse (PULSE R) will be output.

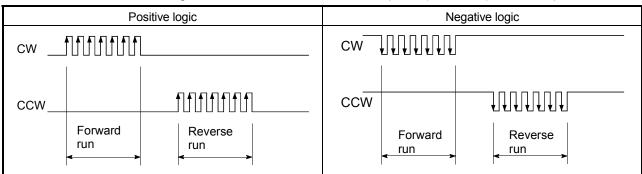


(3) A phase/B phase mode

Forward run and reverse run are controlled with the phase difference of the A phase (A \varnothing) and B phase (B \varnothing).


- When the B phase is 90° behind the A phase, the motor will forward run.
- When the B phase is 90° ahead of the A phase, the motor will reverse run.

1) For multiple of 1 setting

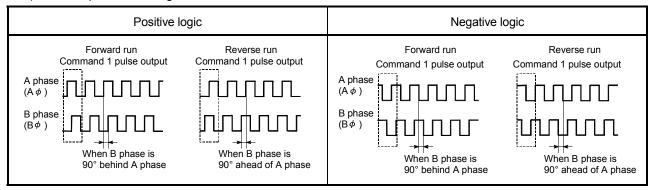

Example) When the command 1 pulse output is 1 pulse/s, the pulse rises and falls by four times per second.


2) For multiple of 4 setting

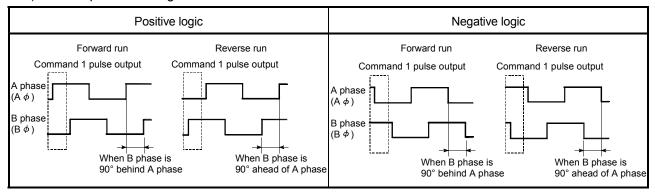

Example) When the command 1 pulse output is 1 pulse/s, the pulse rises and falls by one times per second.

Pr.6 Rotation direction setting

Set the relation of the positioning direction (Md.20 Current feed value increment direction/decrement direction) and the pulse output. For the relation of "Forward run pulse output, Reverse run pulse output" and "CW/A phase/PULSE signal, CCW/B phase/SIGN signal", refer to Pr.5 Pulse output mode".

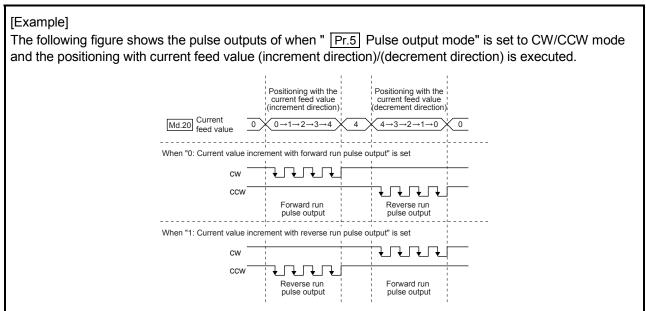

POINT

When Pr.6 has been changed from "0" to "1", check that the upper and lower limit switches operate properly by JOG operation.

If any malfunction is identified, check and correct the wiring.

Setting value, setting range		Default	Setting value buffer memory address				
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
The setting range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set.				6	156	306	456
Bias speed at start	(F) [Ta	ble 1] on next page	0		157	307	457

Pr.7 Bias speed at start

Set the bias speed (minimum speed) upon starting. The bias speed has to be defined to allow the motor to start smoothly especially when a stepping motor is used. (A stepping motor will not start smoothly if a low rotation speed is instructed at the beginning.)

The specified "bias speed at start" will be valid during the following operations:

- Positioning operation
- OPR operation
- JOG operation

Note that the bias speed should not exceed " Pr.8 Speed limit value".

■ Precautions for using a stepping motor

- For the system that uses a stepping motor, executing the S-curve acceleration/deceleration may cause step-out.
 Before using the S-curve acceleration/deceleration, confirm that step-out does not occur.
- (2) In the system that uses a stepping motor, the circular interpolation control cannot be carried out.

Although setting the bias speed at start is required by the characteristics of the stepping motor, the setting of the bias speed at start is disabled for circular interpolation control.

Ensure to use a servomotor for both 2 axes when the circular interpolation control is carried out.

5.2.2 Basic parameters 2

Itom	Setting value, setting range		Default	Setting value buffer memory address			
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Pr.8 Speed limit value	The setting range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 2] range is set. [Table 2] on next page		200000	10 11	160 161	310 311	460 461
Pr.9 Acceleration time 0	1 to 8388608 (ms)	1 to 8388608 (ms)	1000	12 13	162 163	312 313	462 463
Pr.10 Deceleration time 0	1 to 8388608 (ms)	1 to 8388608 (ms)	1000	14 15	164 165	314 315	464 465

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)			
0 : mm	0 to 20000000.00 (mm/min)	0 to 2000000000 (×10-2mm/min)			
1 : inch	1 : inch 0 to 2000000.000 (inch/min) 0 to 2000000000 (×10-3inch/min)				
2 : degree	0 to 2000000.000 (degree/min)	0 to 2000000000 (×10-3degree/min)			
3 : pulse	0 to 1000000 (pulse/s) *1	[QD75P□N/QD75D□N] 0 to 4000000 (pulse/s) [QD75P□/QD75D□] 0 to 1000000 (pulse/s)			

[Table 2]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 20000000.00 (mm/min)	1 to 2000000000 (×10-2mm/min)
1 : inch	0.001 to 2000000.000 (inch/min)	1 to 2000000000 (×10 ⁻³ inch/min)
2 : degree	0.001 to 2000000.000 (degree/min)	1 to 2000000000 (×10 ⁻³ degree/min)
3 : pulse	[Select type * 2 is QD75P□] 1 to 200000 (pulse/s) * 1 [Select type * 2 is QD75D□] 1 to 1000000 (pulse/s) * 1	[QD75P□N/QD75D□N] 1 to 4000000 (pulse/s) [QD75P□/QD75D□] 1 to 1000000 (pulse/s)

^{* 1:} In GX Configurator-QP, the QD75P N/QD75D N are recognized as the QD75P QD75D. Therefore, the setting ranges are the same as those of the QD75P QD75D. To set a value outside a setting range in GX Configurator-QP, set it through a sequence program or GX Works2. The setting ranges in GX Works2 are the same as those in sequence programs. (Refer to Appendix 1.2)

* 2: For Select type, refer to GX Configurator-QP Operating Manual.

Pr.8 | Speed limit value

Set the maximum speed during positioning and OPR operations. If the specified speed exceeds speed limit value, positioning will be limited at the speed limit value. Set the speed limit value within the range of the following formula. If the speed limit value exceeds the range, the error "Out of speed limit value range" (error code: 910) will occur.


The command pulse frequency

converted from the speed limit value ≤ Max. output pulse * 1

* 1: QD75P N/QD75P : 200kpulse/s QD75D N: 4Mpulse/s QD75D : 1Mpulse/s

Pr.9 Acceleration time 0, Pr.10 Deceleration time 0

- Pr.9 Acceleration time 0" specifies the time for the speed to increase from zero to " Pr.8 Speed limit value" (or " Pr.31 JOG speed limit value" during JOG operation).
- " | Pr.10 | Deceleration time 0" specifies the time for the speed to decrease from
- " Pr.8 Speed limit value" (or " Pr.31 JOG speed limit value" during JOG operation) to zero.

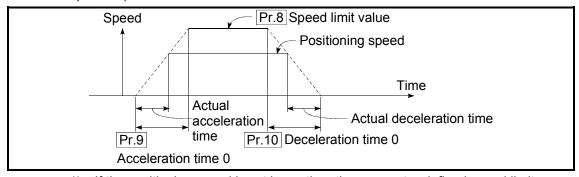

- If the positioning speed is set lower than the parameter-defined speed limit value, the actual acceleration/deceleration time will be relatively short. Thus, set the maximum positioning speed equal to or only a little lower than the parameter-defined speed limit value.
- These settings are valid for OPR, positioning and JOG operations.
- When the positioning involves interpolation, the acceleration/deceleration time defined for the reference axis is valid.


5.2.3 Detailed parameters 1

lkovo	Setting value, setting range		Defection	Setting value buffer memory address				
Item	Value set with peripheral device	Value set with sequence program	Default value	Axis 1	Axis 2	Axis 3	Axis 4	
Pr.11 Backlash compensation amount	The setting value range differs according to the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page		0	17	167	317	467	
Pr.12 Software stroke limit upper limit value	The setting value range differs according to the Pr.1 Unit setting. Here, the value within the [Table 2] range is set.		2147483647	18 19	168 169	318 319	468 469	
Pr.13 Software stroke limit lower limit value	[Table 2]	on next page	-2147483648	20 21	170 171	320 321	470 471	
Pr.14 Software stroke limit selection	Apply software stroke limit on current feed value Apply software stroke limit on machine feed value	1	0	22	172	322	472	
Pr.15 Software stroke limit valid/invalid setting	Software stroke limit valid during JOG operation, inching operation and manual pulse generator operation Software stroke limit invalid during JOG operation ,inching operation and	0	0	23	173	323	473	
	manual pulse generator operation							

Pr.11 Backlash compensation amount

The error that occurs due to backlash when moving the machine via gears can be compensated.

When the backlash compensation amount is set, pulses equivalent to the compensation amount will be output each time the direction changes during positioning.

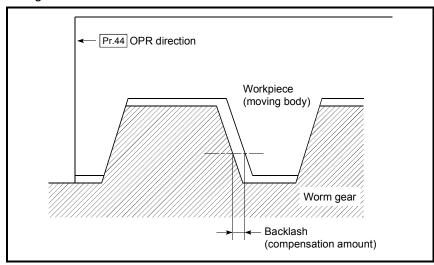

- 1) The backlash compensation is valid after machine OPR. Thus, if the backlash compensation amount is set or changed, always carry out machine OPR once.
- 2) The backlash compensation amount setting range is 0 to 65535, but it should be set to 255 or less by using the following expression.

$$0 \le \frac{\text{Backlash compensation amount}}{\text{Movement amount per pulse}} \le 255$$

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit) *
0 : mm	0 to 6553.5 (μm)	0 to 65535 (×10 ⁻¹ μm)
1 : inch	0 to 0.65535 (inch)	0 to 65535 (×10 ⁻⁵ inch)
2 : degree	0 to 0.65535 (degree)	0 to 65535 (×10 ⁻⁵ degree)
3 : pulse	0 to 65535 (pulse)	0 to 65535 (pulse)

* 1 to 32767 : Set as a decimal

32768 to 65535: Convert into hexadecimal and set

[Table 2]


Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	-214748364.8 to 214748364.7 (µm)	-2147483648 to 2147483647 (×10 ⁻¹ μm)
1 : inch	-21474.83648 to 21474.83647(inch)	-2147483648 to 2147483647 (×10 ⁻⁵ inch)
2 : degree	0 to 359.99999 (degree)	0 to 35999999 (×10 ⁻⁵ degree)
3 : pulse	-2147483648 to 2147483647(pulse)	-2147483648 to 2147483647 (pulse)

Pr.12 Software stroke limit upper limit value

Set the upper limit for the machine's movement range during positioning control.

Pr.13 | Software stroke limit lower limit value

Set the lower limit for the machine's movement range during positioning control.

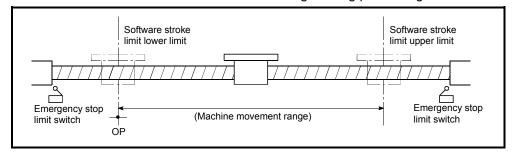

- 1) Generally, the OP is set at the lower limit or upper limit of the stroke limit.
- 2) By setting the upper limit value or lower limit value of the software stroke limit, overrun can be prevented in the software. However, an emergency stop limit switch must be installed nearby outside the range.
- 3) To invalidate the software stroke limit, set the setting value to "upper limit value = lower limit value". (The setting value can be anything in the setting range.)
- 4) When the unit is "degree", the software stroke limit check is invalid during speed control (including speed-position switching control, position-speed switching control) or during manual control.

Pr.14 Software stroke limit selection

Set whether to apply the software stroke limit on the "current feed value" or the "machine feed value". The software stroke limit will be validated according to the set value.


Pr.15 Software stroke limit valid/invalid setting

Set whether to validate the software stroke limit during JOG/Inching operation and manual pulse generator operation.

Item	Setting value,	Setting value, setting range		Setting value buffer memory address			
nem	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Pr.16 Command in-position width	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page		100	24 25	174 175	324 325	474 475
Pr.17 Torque limit setting value	1 to 500 (%)	1 to 500 (%)	300	26	176	326	476
Pr.18 M code ON signal output	0 : WITH mode	0	0	27	177	327	477
timing	1 : AFTER mode	1	J		177	521	711

Pr.16 Command in-position width

Set the remaining distance that turns the command in-position ON. The command in-position signal is used as a front-loading signal of the positioning complete signal. When positioning control is started, the "command in-position flag" (3rd flag from right) in " Md.31 Status" turns OFF, and the "command in-position flag" turns ON at the set position of the command in-position signal.

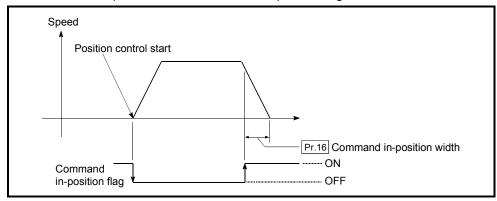

Pr.17 Torque limit setting value

Set the maximum value of the torque generated by the servomotor as a percentage between 1 and 500%.

* The torque limit function limits the torque generated by the servomotor within the set range.

If the torque required for control exceeds the torque limit value, it is controlled with the set torque limit value.

Usage conditions

Limits for pulse train output type


- (a) A drive unit that can issue a torque limit command with the analog voltage is required.
- (b) The D/A conversion module and the D/A conversion module and drive unit must be wired.
- (c) The set " Pr.17 Torque limit setting value" is set in the buffer memory " Md.35 Torque limit stored value", so transmit that " Md.35 Torque limit stored value" to the D/A conversion module with the sequence program.

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.1 to 214748364.7 (µm)	1 to 2147483647 (×10 ⁻¹ µm)
1 : inch	0.00001 to 21474.83647 (inch)	1 to 2147483647 (×10 ⁻⁵ inch)
2 : degree	0.00001 to 21474.83647 (degree)	1 to 2147483647 (×10 ⁻⁵ degree)
3 : pulse	1 to 2147483647 (pulse)	1 to 2147483647 (pulse)

Pr.18 M code ON signal output timing

This parameter sets the M code ON signal output timing.
Choose either WITH mode or AFTER mode as the M code ON signal output timing.

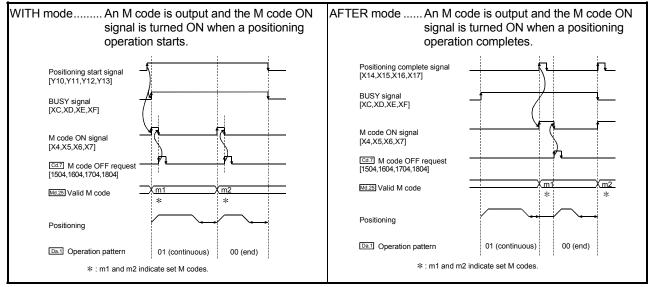

Note: If AFTER mode is used with speed control, an M code will not be output and the M code ON signal will not be turned ON.

An M code (Da.10) is a number between 0 and 65535 that can be assigned to each positioning data.

The sequence program can be coded to read an M code from the buffer memory address specified by " Md.25 Valid M code" whenever the M code ON signal [X4, X5, X6, X7] turns ON so that a command for the sub work (e.g. clamping, drilling, tool change) associated with the M code can be issued.


The M code ON signal output timing can be set for each positioning data with the positioning option ("Da.27" M code ON signal output timing") of the positioning data.

Item	Setting value, set	tting range	Default	Setting		buffer m	nemory
item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Pr.19 Speed switching mode	Standard speed switching mode Front-loading speed switching mode	1	. 0	28	178	328	478
Pr.20 Interpolation speed	0 : Composite speed	0	. 0	29	179	329	479
designation method	1 : Reference axis speed	1					
Pr.21	0 : Do not update current feed value	0					
Current feed value during speed control	1 : Update current feed value	1	. 0	30	180	330	480
opoda domadi	2 : Clear current feed value to zero	2					
Pr.22 Input signal logic selection	b0 Lower limit b1 Upper limit b2 Drive unit READY b3 Stop signal b4 External command b5 Zero signal b6 Near-point dog signal b7 Not used b8 Manual pulse generator input b9 to Not used b15 Command	15:4131211109 8 7 6 5 4 3 2 1 b0 Always "0" is set to the part not used.	0	31	181	331	481
Pr.23 Output signal logic selection	b1 Not used b2 Not used b3 Not used b4 Deviation counter clear b5 to Not used b15 Not used b2 Not used b3 Not used b4 Counter clear b5 to Not used b15	1514131211109 8 7 6 5 4 3 2 1 b0 Always "0" is set to the part not used.	0	32	182	332	482
Pr.24 Manual pulse generator input selection	O: A-phase/B-phase multiplied by 4 1: A-phase/B-phase multiplied by 2 2: A-phase/B-phase multiplied by 1 3: PULSE/SIGN	0 1 2 3	0	33	_	_	-
Pr.150 Speed-position function selection	Speed-position switching control (INC mode) Speed-position switching control (ABS mode)	0	. 0	34	184	334	484
Pr.70 Positioning option valid/invalid setting	0: Invalid 1: Valid	1	. 0	140	_	_	-

Pr.19 | Speed switching mode

Set whether to switch the speed switching mode with the standard switching or front-loading switching mode.

- 0 : Standard switching...... Switch the speed when executing the next positioning data.
- 1 : Front-loading switching The speed switches at the end of the positioning data currently being executed.

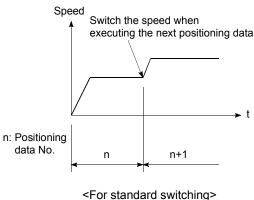

Speed The next positioning data starts positioning at the designated speed n n+1


<For front-loading switching>


Pr.20 Interpolation speed designation method

When carrying out linear interpolation/circular interpolation, set whether to designate the composite speed or reference axis speed.

0: Composite speed The movement speed for the control target is designated, and the speed for each axis is calculated by the QD75.

1: Reference axis speed The axis speed set for the reference axis is designated, and the speed for the other axis carrying out interpolation is calculated by the

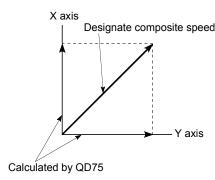

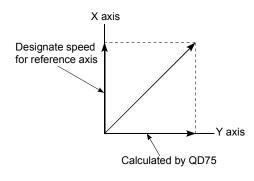

<When composite speed is designated>

<When reference axis speed is designated>

Note: Always specify the reference axis speed if the 4-axis linear interpolation or 2 to 4 axis speed control has to be performed.

If you specify the composite speed for a positioning operation that involves the 4-axis linear interpolation or 2 to 4 axis speed control, the error "Interpolation mode error" (error code 523) will be output when the positioning operation is attempted.

For a positioning operation that involves the circular interpolation or 3-axis helical interpolation control, specify the composite speed.

The interpolation speed designation method can be set for each positioning data with the positioning option ("Da.29 Interpolation speed designation method") of the positioning data.

Pr.21 Current feed value during speed control

Specify whether you wish to enable or disable the update of " Md.20 Current feed value" while operations are performed under the speed control (including the speed-position and position-speed switching control).

0: The update of the current feed value is disabled

The current feed value will not change. (The value at the beginning of the speed control will be kept.)

1: The update of the current feed value is enabled

The current feed value will be updated. (The current feed value will change from the initial.)

2: The current feed value is cleared to zero

The current feed will be set initially to zero and change from zero while the speed control is in effect.

Note1: When the speed control is performed over two to four axes, the choice between enabling and disabling the update of " Md.20 Current feed value" depends on how the reference axis is set.

Note2: Set "1" to exercise speed-position switching control (ABS mode).

Pr.22 Input signal logic selection, Pr.23 Output signal logic selection Set the I/O signal logic that matches the signaling specification of the connected external device.

Note1: A mismatch in the signal logic will disable normal operation. Be careful of this when you change from the default value.

Note2: Set the manual pulse generator input logic selection (b8) to axis 1. (Setting of any of axes 2 to 4 is invalid.)

Pr.24 | Manual pulse generator input selection

Set the manual pulse generator input pulse mode. (Only the value specified against the axis 1 is valid.)

- 0: A-phase/B-phase; multiplied by 4
- 1: A-phase/B-phase; multiplied by 2
- 2: A-phase/B-phase; multiplied by 1
- 3: PULSE/SIGN

Pr.150 | Speed-position function selection

Select the mode of speed-position switching control.

- 0: INC mode
- 2: ABS mode

Note1: If the setting is other than 0 and 2, operation is performed in the INC mode with the setting regarded as 0.

Pr.70 Positioning option valid/invalid setting

Enable or disable the data set in the positioning option ("Da.27 M code ON signal output timing", "Da.28 ABS direction in degrees", and "Da.29 Interpolation speed designation method") of the positioning data. Setting this parameter to "1: Valid" carries out a positioning control according to the data set in the positioning option.

0: Invalid

1: Valid

- Note 1: If a value other than 0 and 1 is set, the set value is regarded as 0 and the data is disabled.
- Note 2: If "0: Invalid" is set, the setting is ignored even though the positioning option of the positioning data is set.
- Note 3: Pr.70 Positioning option valid/invalid setting can be set only with GX Works2 (Version 1.540N or later) or sequence programs.

5.2.4 Detailed parameters 2

	Setting value, setti	ing range Default		Setting value buffer address			nemory
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2		Axis 4
Pr.25 Acceleration time 1		F 33		36 37	186 187	336 337	486 487
Pr.26 Acceleration time 2				38	188	338	488
, , <u>.</u>				39 40	189 190	339 340	489 490
Pr.27 Acceleration time 3				41	191	341	491
Pr.28 Deceleration time 1	1 to 8388608 (ms)	1 to 8388608 (ms)	1000	42 43	192 193	342 343	492 493
				44	193	344	493
Pr.29 Deceleration time 2				45	195	345	495
Pr.30 Deceleration time 3				46 47	196 197	346 347	496 497
Pr.31 JOG speed limit value	The setting range differs depending or Here, the value within the [Table 1] rar		20000	48 49	198 199	348 349	498 499
	0: Pr.9 Acceleration time 0	0					
Pr.32 JOG operation acceleration	1: Pr.25 Acceleration time 1	1	0	50	200	350	500
time selection	2: Pr.26 Acceleration time 2	2					300
	3: Pr.27 Acceleration time 3	3					
	0: Pr.10 Deceleration time 0	0	0 51				
Pr.33	1: Pr.28 Deceleration time 1	1		5 1	201	351	501
JOG operation deceleration time selection	2: Pr.29 Deceleration time 2	2		31	201	351	301
	3: Pr.30 Deceleration time 3	3					

Pr.25 Acceleration time 1 to Pr.27 Acceleration time 3

These parameters set the time for the speed to increase from zero to

Pr.28 Deceleration time 1 to Pr.30 Deceleration time 3

These parameters set the time for the speed to decrease from " Pr.8 Speed limit value" (or " Pr.31 JOG speed limit value" during JOG operation) to zero during a positioning operation.

[&]quot; Pr.8 Speed limit value" (or " Pr.31 JOG speed limit value" during JOG operation) during a positioning operation.

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 20000000.00 (mm/min)	1 to 2000000000 (×10 ⁻² mm/min)
1 : inch	0.001 to 2000000.000 (inch/min)	1 to 2000000000 (×10 ⁻³ inch/min)
2 : degree	0.001 to 2000000.000 (degree/min)	1 to 2000000000 (×10 ⁻³ degree/min)
3 : pulse	[Select type * 1 is QD75P□] 1 to 200000 (pulse/s) * 2 [Select type * 1 is QD75D□] 1 to 1000000 (pulse/s) * 2	[QD75P\(\text{N}\)\(\text{QD75D\(\text{N}\)}\) 1 to 4000000 (pulse/s) [QD75P\(\text{QD75D\(\text{D}\)}\) 1 to 1000000 (pulse/s)

^{* 1:} For Select type, refer to GX Configurator-QP Operating Manual.

Pr.31 JOG speed limit value

Set the maximum speed for JOG operation.

Note) • Set the "JOG speed limit value" to less than " Pr.8 Speed limit value". If the "speed limit value" is exceeded, the error "JOG speed limit value error" (error code: 956) will occur.

Pr.32 JOG operation acceleration time selection

Set which of "acceleration time 0 to 3" to use for the acceleration time during JOG operation.

- 0 : Use value set in " Pr.9 Acceleration time 0".
- 1 : Use value set in " Pr.25 Acceleration time 1".
- 2 : Use value set in " Pr.26 Acceleration time 2".
- 3 : Use value set in " Pr.27 Acceleration time 3".

Pr.33 JOG operation deceleration time selection

Set which of "deceleration time 0 to 3" to use for the deceleration time during JOG operation.

- 0 : Use value set in " | Pr.10 | Deceleration time 0".
- 1 : Use value set in " | Pr.28 | Deceleration time 1".
- 2 : Use value set in " Pr.29 Deceleration time 2".
- 3 : Use value set in " Pr.30 Deceleration time 3".


^{*2:} In GX Configurator-QP, the QD75P N/QD75D N are recognized as the QD75P QD75D. Therefore, the setting ranges are the same as those of the QD75P QD75D. To set a value outside a setting range in GX Configurator-QP, set it through a sequence program or GX Works2. The setting ranges in GX Works2 are the same as those in sequence programs. (Refer to Appendix 1.2)


Item	Setting value, setting range		Default	Setting value buffer memory address			
item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Pr.34 Acceleration/deceleration	0 : Trapezoid acceleration/deceleration process 1 : S-curve	0	0	52	202	352	502
process selection	acceleration/deceleration process	1					
Pr.35 S-curve ratio	1 to 100 (%)	1 to 100 (%)	100	53	203	353	503
Pr.36 Sudden stop deceleration time	1 to 8388608 (ms)	1 to 8388608 (ms)	1000	54 55	204 205	354 355	504 505
Pr.37 Stop group 1 sudden stop selection	0 : Normal deceleration stop	0		56	206	356	506
Pr.38 Stop group 2 sudden stop selection			0	57	207	357	507
Pr.39 Stop group 3 sudden stop selection	1 : Sudden stop	1		58	208	358	508

Pr.34 Acceleration/deceleration process selection

Set whether to use trapezoid acceleration/deceleration or S-curve acceleration/deceleration for the acceleration/deceleration process.

Note) Refer to Section 12.7.6 "Acceleration/deceleration process function" for details.

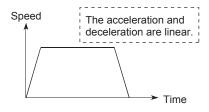

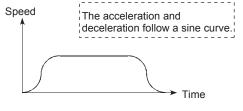

<Trapezoid acceleration/deceleration>

<S-curve acceleration/deceleration>


For the system that uses a stepping motor, executing the S-curve acceleration/deceleration may cause step-out.

Before using the S-curve acceleration/deceleration, confirm that step-out does not occur.

Pr.35 S-curve ratio


Set the S-curve ratio (1 to 100%) for carrying out the S-curve acceleration/deceleration process.

The S-curve ratio indicates where to draw the acceleration/deceleration curve using the sine curve as shown below.

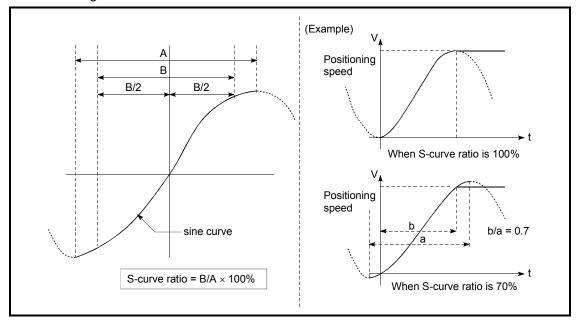

Pr.36 Sudden stop deceleration time

Set the time to reach speed 0 from " Pr.8 Speed limit value" (or " Pr.31 JOG speed limit value" during JOG operation) during the sudden stop. The illustration below shows the relationships with other parameters.

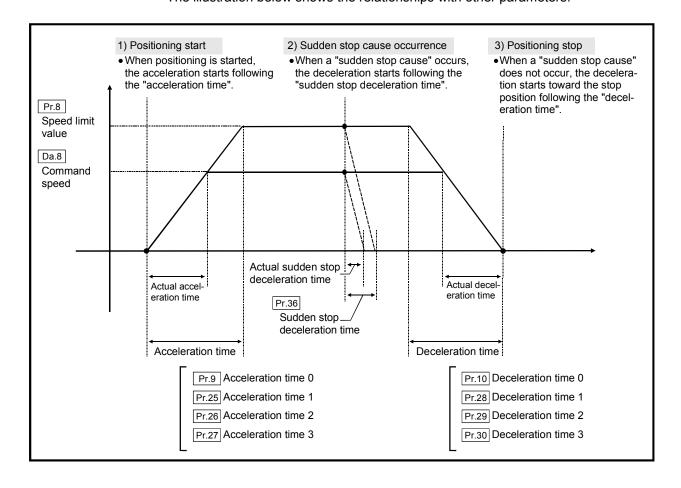

5

Pr.37 Stop group 1 sudden stop selection to Pr.39 Stop group 3 sudden stop selection

Set the method to stop when the stop causes in the following stop groups occur.

- Stop group 1 Stop with hardware stroke limit
- Stop group 2 CPU module error occurrence, PLC READY signal [Y0]

OFF, Fault in test mode

• Stop group 3 External stop signal

Stop signal from CPU module Stop signal from peripheral device

Error occurrence (excludes errors in stop groups 1 and 2: includes only the software stroke limit errors during JOG operation, speed control, speed-position switching control, and position-speed switching control)

The methods of stopping include "0: Normal deceleration stop" and "1: Sudden stop".

If "1: Sudden stop" is selected, the axis will suddenly decelerate to a stop when the stop cause occurs.


14	Setting value, setting range		Default	Setting value buffer memory address				
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4	
Pr.40 Positioning complete signal output time	0 to 65535 (ms)	0 to 65535 (ms) 0 to 32767: Set as a decimal 32768 to 65535: Convert into hexadecimal and set	300	59	209	359	509	
Pr.41 Allowable circular interpolation error width	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page			60 61	210 211	360 361	510 511	
Pr.42 External command function	External positioning start External speed change request	1	0	62	212	362	512	
selection	Speed-position, position- speed switching request Skip request	3	0 62		L 1 L	302	312	

Pr.40 Positioning complete signal output time

Set the output time of the positioning complete signal [X14, X15, X16, X17] output from the QD75.

A positioning completes when the specified dwell time has passed after the QD75 had terminated the output.

For the interpolation control, the positioning completed signal of interpolation axis is output only during the time set to the reference axis.

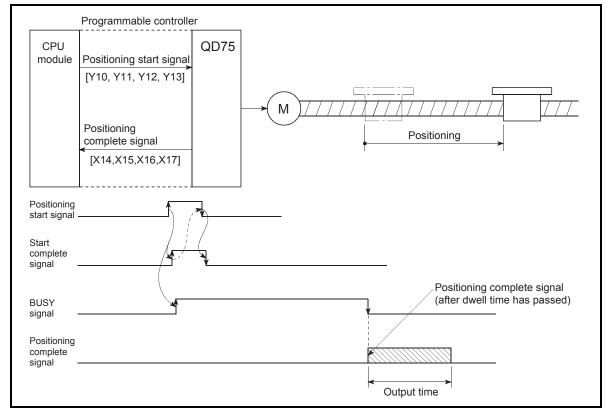

Positioning complete signal output time

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0 to 10000.0 (μm)	0 to 100000 (×10 ⁻¹ μm)
1 : inch	0 to 1.00000 (inch)	0 to 100000 (×10 ⁻⁵ inch)
2 : degree	0 to 1.00000 (degree)	0 to 100000 (×10 ⁻⁵ degree)
3 : pulse	0 to 100000 (pulse)	0 to 100000 (pulse)


Pr.41 Allowable circular interpolation error width

With the "allowable circular interpolation error width", the allowable error range of the calculated arc path and end point address is set. *1

If the error of the calculated arc path and end point address is within the set range, circular interpolation will be carried out to the set end point address while compensating the error with spiral interpolation.

The allowable circular interpolation error width is set in the following axis buffer memory addresses.

- If axis 1 is the reference axis, set in the axis 1 buffer memory address [60, 61].
- If axis 2 is the reference axis, set in the axis 2 buffer memory address [210, 211].
- If axis 3 is the reference axis, set in the axis 3 buffer memory address [360, 361].
- If axis 4 is the reference axis, set in the axis 4 buffer memory address [510, 511].

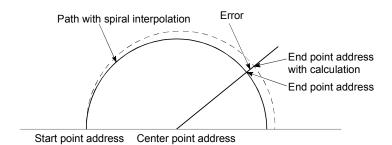

*1: With circular interpolation control using the center point designation, the arc path calculated with the start point address and center point address and the end point address may deviate.

Pr.42 External command function selection

Select a command with which the external command signal should be associated.

0: External positioning start

The external command signal input is used to start a positioning operation.

1: External speed change request

The external command signal input is used to change the speed in the current positioning operation. The new speed should be set in the " Cd.14 New speed value"

2: Speed-position, position-speed switching request

The external command signal input is used to switch from the speed control to the position control while in the speed-position switching control mode, or from the position control to the speed control while in the position-speed switching control mode.

To enable the speed-position switching control, set the

" Cd.24 Speed-position switching enable flag" to "1".

To enable the position-speed switching control, set the

" Cd.26 Position-speed switching enable flag" to "1".

3: Skip request

The external command signal input is used skip the current positioning operation.

POINT

To enable the external command signal, set the " Cd.8 External command enable" to "1".

5.2.5 OPR basic parameters

Item	Setting value, setting range		Default	Setting value buffer memor address				
nem	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4	
	0 : Near-point dog method	0		70		370		
OPR method	1 : Stopper method 1)	1						
	2 : Stopper method 2)	2	0		220		520	
	3 : Stopper method 3)	3	U	70	220	370	520	
	4 : Count method 1)	4						
	5 : Count method 2)	5						

Pr.43 OPR method

Set the "OPR method" for carrying out machine OPR.

0 : Near-point dog method After decelerating at the near-point dog ON, stop at the zero signal and complete the machine OPR.

1 : Stopper method 1) After decelerating at the near-point dog ON, stop with the stopper, and complete the machine OPR after the dwell time has passed.

2 : Stopper method 2) After decelerating at the near-point dog ON, stop with the stopper, and complete the machine OPR with the zero signal.

3 : Stopper method 3) After starting with the creep speed, stop with the stopper, and complete the machine OPR with the zero signal.

4 : Count method 1) After decelerating at the near-point dog ON, move the designated distance, and complete the

machine OPR with the zero signal.
5 : Count method 2) After decelerating at the near-point dog ON, move

the designated distance, and complete the machine OPR.

Note) Refer to Section 8.2.2 "Machine OPR method" for details on the OPR methods.


OPR method

0: Near-point dog method

(1) Start machine OPR.

(Start movement at the " Pr.46 OPR speed" in the " Pr.44 OPR direction".)


- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to " Pr.47 Creep speed", and move with the creep speed. (At this time, the near-point dog must be ON. If the nearpoint dog is OFF, the axis will decelerate to a stop.)
- (4) At the first zero signal (one pulse output at one motor revolution) after the near-point dog OFF, the pulse output from the QD75 stops, and the machine OPR is completed.

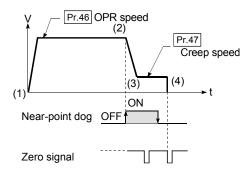

1: Stopper method 1)

- (1) Start machine OPR.


 (Start movement at the " Pr.46 OPR speed" in the " Pr.44 OPR direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to " Pr.47 Creep speed", and move with the creep speed.
 (At this time " Pr.54 OPR torque limit value" is required. If the torque is not limited, the servomotor could be damaged in step (4).)
- (4) The axis contacts against the stopper at " Pr.47 Creep speed", and then stops.
- (5) When the near-point dog turns ON and the " Pr.49 OPR dwell time" is passed, the pulse output from the QD75 stops, and the machine OPR is completed.

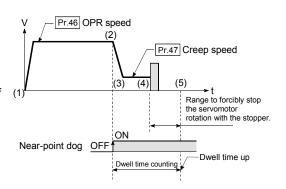

2: Stopper method 2)


- (1) Start machine OPR.

 (Start movement at the " Pr.46 OPR speed" in the " Pr.44 OPR direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to " Pr.47 Creep speed", and move with the creep speed.
 (At this time " Pr.54 OPR torque limit value" is required. If the torque is not limited, the servomotor could be damaged in step (4).)
- (4) The axis contacts against the stopper at " Pr.47 Creep speed", and then stops.
- (5) After stopping, the pulse output from the QD75 stops with the zero signal (signal that is output on detection of contact with the stopper. Input externally), and the machine OPR is completed.

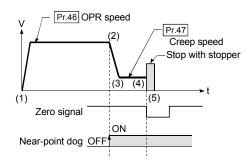

3: Stopper method 3)


- (1) Start machine OPR.
 - (Start movement at the " Pr.47 Creep speed" in the " Pr.44 OPR direction". At this time " Pr.54 OPR torque limit value" is required. If the torque is not limited, the servomotor could be damaged in step (2).)
- (2) The axis contacts against the stopper at " Pr.47 Creep speed", and then stops.
- (3) After stopping, the pulse output from the QD75 stops with the zero signal (signal that is output on detection of contact with the stopper. Input externally), and the machine OPR is completed.

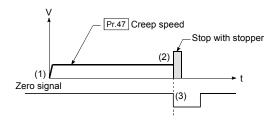

4: Count method 1)

- (1) Start machine OPR.


 (Start movement at the " Pr.46 OPR speed" in the " Pr.44 OPR direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to " Pr.47 Creep speed", and move with the creep speed.
- (4) After the near-point dog turns ON and the movement amount set in " Pr.50 Setting for the movement amount after near-point dog ON" has passed, the pulse output from the QD75 stops with the first zero signal (one pulse output at one motor revolution), and the machine OPR is completed.

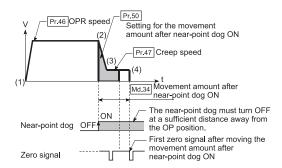

5 : Count method 2)

- (1) Start machine OPR.

 (Start movement at the " Pr.46 OPR speed" in the " Pr.44 OPR direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to " Pr.47 Creep speed", and move with the creep speed.
- (4) After the near-point dog turns ON and the movement amount set in " Pr.50 Setting for the movement amount after near-point dog ON" has passed, the pulse output from the QD75 stops with the first zero signal, and the machine OPR is completed.

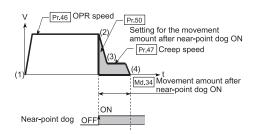

Item	Setting value, setting range		Default	Setting value buffer memory address				
item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4	
0 : Positive direction (address increment direction)			0	71	221	271	521	
OPR direction	Negative direction (address decrement direction)	1	U	71	221	371	521	
The setting value range differs depending on the " Pr.1 Unit setting". Pr.45 OP address [Table 1] on next page			0	72 73	222 223	372 373	522 523	
Pr.46 OPR speed	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 2] range is set. [Table 2] on next page			74 75	224 225	374 375	524 525	

Pr.44 OPR direction


Set the direction to start movement when starting machine OPR.

- 0: Positive direction (address increment direction)

 Moves in the direction that the address increments. (Arrow 2))
- 1: Negative direction (address decrement direction)

 Moves in the direction that the address decrements. (Arrow 1))

Normally, the OP is set near the lower limit or the upper limit, so " Pr.44 OPR direction" is set as shown below.

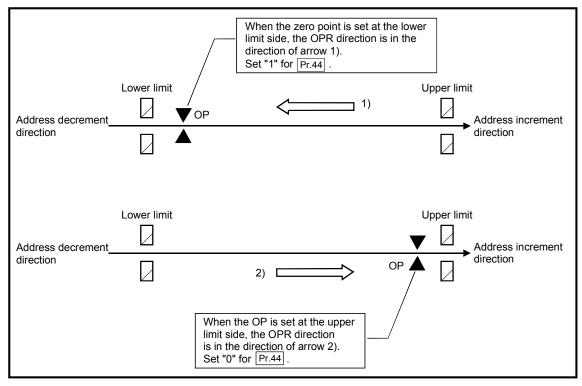

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program(unit)
0 : mm	-214748364.8 to 214748364.7 (μm)	-2147483648 to 2147483647 (×10 ⁻¹ μm)
1 : inch	-21474.83648 to 21474.83647 (inch)	-2147483648 to 2147483647 (×10-5inch)
2 : degree	0 to 359.99999 (degree)	0 to 35999999 (×10 ⁻⁵ degree)
3 : pulse	-2147483648 to 2147483647 (pulse)	-2147483648 to 2147483647 (pulse)

[Table 2]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 20000000.00 (mm/min)	1 to 2000000000 (×10-2mm/min)
1 : inch	0.001 to 2000000.000 (inch/min)	1 to 2000000000 (×10-3inch/min)
2 : degree	0.001 to 2000000.000 (degree/min)	1 to 2000000000 (×10-3degree/min)
3 : pulse	1 to 1000000 (pulse/s) *1	[QD75P_N/QD75D_N] 1 to 4000000 (pulse/s) [QD75P_/QD75D_] 1 to 1000000 (pulse/s)

^{*1:} In GX Configurator-QP, the QD75P\(\text{\text{\text{N}}QD75D\(\text{

5

Pr.45 OP address

Set the address used as the reference point for positioning control (ABS system). (When the machine OPR is completed, the stop position address is changed to the address set in " $\boxed{\text{Pr.45}}$ OP address". At the same time, the " $\boxed{\text{Pr.45}}$ OP address" is stored in " $\boxed{\text{Md.20}}$ Current feed value" and " $\boxed{\text{Md.21}}$ Machine feed value".)

Pr.46 OPR speed

Set the speed for OPR.

Note) Set the "OPR speed" to less than " Pr.8 Speed limit value". If the "speed limit value" is exceeded, the error "Out of speed limit value range" (error code: 910) occurs and OPR is not performed.

The "OPR speed" should be equal to or faster than the " Pr.7 Bias speed at start" and " Pr.47 Creep speed".

Value set with peripheral device Value set with sequence program The setting value range differs depending on the "Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page O: Do not retry OPR with limit	Item	Setting value,	Setting value, setting range		Setting value buffer memory address			
setting". Here, the value within the [Table 1] range is set. 1 76 226 376 77 227 377 [Table 1] on next page 0: Do not retry OPR with limit	nem	Value set with peripheral device	•	value	Axis 1	Axis 2	Axis 3	Axis 4
		setting". Here, the value within the [Table 1] range is set.		1		_		526 527
OPR retry switch 0 78 228 378 1 : Retry OPR with limit switch 1		switch	0	0	78	228	378	528


Pr.47 Creep speed

Set the creep speed after near-point dog ON (the low speed just before stopping after decelerating from the OPR speed).

The creep speed is set within the following range.

(Pr.46 OPR speed) ≥ (Pr.47 Creep speed) ≥ (Pr.7 Bias speed at start)

Note) The creep speed is related to the detection error when using the OPR method with zero signal, and the size of the collision if a collision occurs during OPR method using the stopper method.

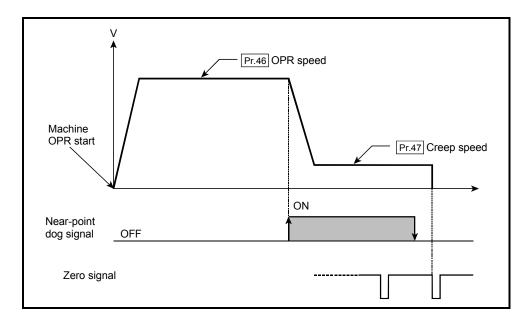

[Table 1]


Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 20000000.00 (mm/min)	1 to 2000000000 (×10 ⁻² mm/min)
1 : inch	0.001 to 2000000.000 (inch/min)	1 to 2000000000 (×10 ⁻³ inch/min)
2 : degree	0.001 to 2000000.000 (degree/min)	1 to 2000000000 (×10 ⁻³ degree/min)
3 : pulse	1 to 1000000 (pulse/s) *1	[QD75P\(\text{N}\)QD75D\(\text{N}\)] 1 to 4000000 (pulse/s) [QD75P\(\text{V}\)QD75D\(\text{D}\)] 1 to 1000000 (pulse/s)

^{*1:} In GX Configurator-QP, the QD75P\(\text{\text{\text{N/QD75D}\(\text{\text{\text{N}}}\) are recognized as the QD75P\(\text{\text{\text{\text{\text{\text{QD75D}\(\text{\tex

Pr.48 OPR retry

Set whether to carry out OPR retry.

When the OPR retry function is validated and the machine OPR is started, first the axis will move in the OPR direction (1)). If the upper/lower limit signal turns OFF before the near-point dog signal ON is detected (2)), the axis will decelerate to a stop, and then will move in the direction opposite to the specified OPR direction (3)). If the falling edge of the near-point dog signal is detected during movement in the opposite direction, the axis will decelerate to a stop (4)), and will carry out machine OPR again (5)), (6)).

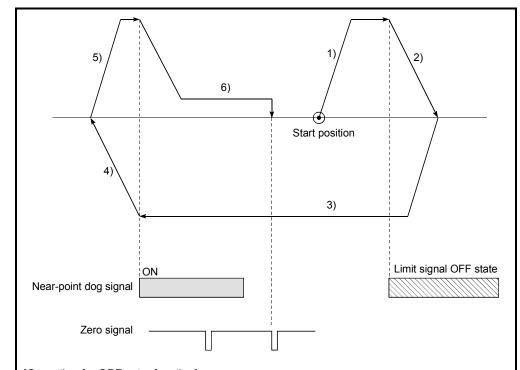

[Operation for OPR retry function]

- 1) Movement in the OPR direction starts with the machine OPR start.
- 2) The axis decelerates when the limit signal OFF is detected.
- 3) After stopping at detection of the limit switch signal OFF, the axis moves at the OPR speed in the direction opposite to the specified OPR direction.
- 4) The axis decelerates when the near-point dog signal turns OFF.
- 5) After stopping with the near-point dog signal OFF, start machine OPR in the OPR direction.
- 6) The machine begins decelerating when the near-point dog ON is detected and completes machine ORR.

5.2.6 OPR detailed parameters

Setting value, setting range			Default	Setting value buffer memory address				
item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4	
Pr.49 OPR dwell time	0 to 65535 (ms) 0 to 32767: Set as a decimal 32768 to 65535: Convert into hexadecimal and set		0	79	229	379	529	
Pr.50 Setting for the movement amount after near-point dog ON	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page		0	80 81	230 231	380 381	530 531	
Pr.51 OPR acceleration time selection	0 : Pr.9 Acceleration time 0 1 : Pr.25 Acceleration time 1 2 : Pr.26 Acceleration time 2 3 : Pr.27 Acceleration time 3	0 1 2 3	0	82	232	382	532	
Pr.52 OPR deceleration time selection	0: Pr.10 Deceleration time 0 1: Pr.28 Deceleration time 1 2: Pr.29 Deceleration time 2 3: Pr.30 Deceleration time 3	0 1 2 3	0	83	233	383	533	

Pr.49 OPR dwell time

When stopper method 1) is set for " Pr.43 OPR method", set the time for the machine OPR to complete after the near-point dog signal turns ON.

The setting value must be longer than the movement time from the near-point dog signal ON to stopping with the stopper.

(If the OPR method is not "stopper method 1)", the " Pr.49 OPR dwell time" value is irrelevant.)


Pr.50 Setting for the movement amount after near-point dog ON

When using the count method 1) or 2), set the movement amount to the OP after the near-point dog signal turns ON.

(The movement amount after near-point dog ON should be equal to or greater than the sum of the "distance covered by the deceleration from the OPR speed to the creep speed" and "distance of movement in 10ms at the OPR speed".)

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0 to 214748364.7 (μm)	0 to 2147483647 (×10 ⁻¹ μm)
1 : inch	0 to 21474.83647 (inch)	0 to 2147483647 (×10 ⁻⁵ inch)
2 : degree	0 to 21474.83647 (degree)	0 to 2147483647 (×10 ⁻⁵ degree)
3 : pulse	0 to 2147483647 (pulse)	0 to 2147483647 (pulse)

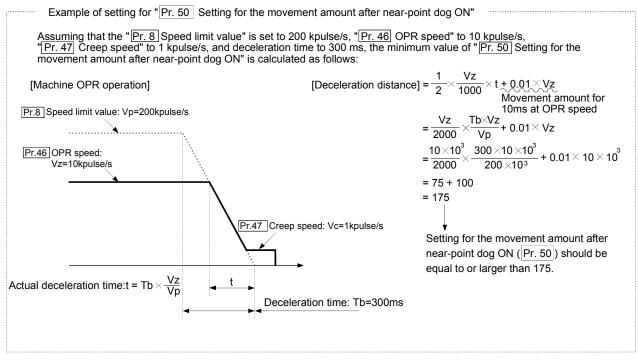

Pr.51 OPR acceleration time selection

Set which of "acceleration time 0 to 3" to use for the acceleration time during OPR.

- 0 : Use the value set in " Pr.9 Acceleration time 0".
- 1 : Use the value set in " Pr.25 Acceleration time 1".
- 2 : Use the value set in " Pr.26 Acceleration time 2".
- 3 : Use the value set in " Pr.27 Acceleration time 3".

Pr.52 OPR deceleration time selection

Set which of "deceleration time 0 to 3" to use for the deceleration time during OPR.

- 0 : Use the value set in " | Pr.10 | Deceleration time 0".
- 1 : Use the value set in " Pr.28 Deceleration time 1".
- 2 : Use the value set in " Pr.29 Deceleration time 2".
- 3 : Use the value set in " Pr.30 Deceleration time 3".


lt	Setting value, setting range		Default	Setting value buffer memory address				
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4	
Pr.53 OP shift amount	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. [Table 1] on next page		0	84 85	234 235	384 385	534 535	
Pr.54 OPR torque limit value	1 to 300 (%)	1 to 300 (%)	300	86	236	386	536	
Pr.55 Deviation counter clear signal output time	1 to 65535 (ms)	1 to 65535 (ms) (1 to 32767: Set the decimal value as it is. 32768 to 65535: Convert into hexadecimal and set.	11	87	237	387	537	
Pr.56 Speed designation	0 : OPR speed	0	0	88	238	388	538	
during OP shift	1 : Creep speed	1		00	200	300	330	
Pr.57 Dwell time during OPR retry	0 to 65535 (ms)	0 to 65535 (ms) 0 to 32767 : Set as a decimal 32768 to 65535 : Convert into hexadecimal and set	0	89	239	389	539	

Pr.53 OP shift amount

Set the amount to shift (move) from the position stopped at with machine OPR.

* The OP shift function is used to compensate the OP position stopped at with machine OPR.

If there is a physical limit to the OP position, due to the relation of the near-point dog installation position, use this function to compensate the OP to an optimum position.

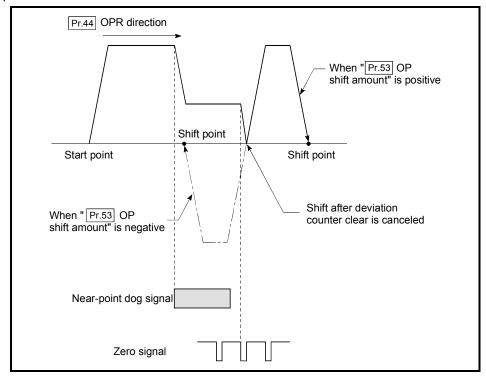

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	-214748364.8 to 214748364.7 (μm)	-2147483648 to 2147483647 (×10 ⁻¹ μm)
1 : inch	-21474.83648 to 21474.83647 (inch)	-2147483648 to 2147483647 (×10 ⁻⁵ inch)
2 : degree	-21474.83648 to 21474.83647 (degree)	-2147483648 to 2147483647 (×10 ⁻⁵ degree)
3 : pulse	-2147483648 to 2147483647 (pulse)	-2147483648 to 2147483647 (pulse)

Pr.54 OPR torque limit value

Set the value to limit the servomotor torque after reaching the creep speed during machine OPR.

Refer to Section 12.4.2 "Torque limit function" for details on the torque limits.

Pr.55 Deviation counter clear signal output time

Set the duration of the deviation counter clear signal output during a machine OPR operation using any of the following methods: the near-point dog method, stopper methods 1) to 3), and count method 1). (For details, refer to your drive unit manual.)

Pr.56 | Speed designation during OP shift


Set the operation speed for when a value other than "0" is set for " Pr.53 OP shift amount". Select the setting from " Pr.46 OPR speed" or " Pr.47 Creep speed".

0 : Designate " Pr.46 OPR speed" as the setting value.

1 : Designate " Pr.47 Creep speed" as the setting value.

Pr.57 Dwell time during OPR retry

When OPR retry is validated (when "1" is set for Pr.48), set the stop time after decelerating in 2) and 4) in the following drawing.

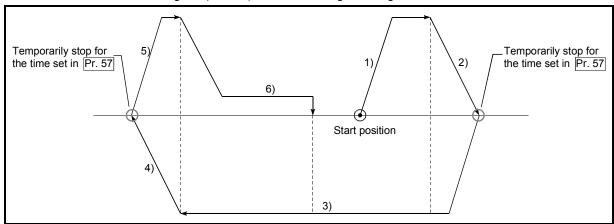


5.3 List of positioning data

Before explaining the positioning data setting items Da.1 to Da.10, the configuration of the positioning data will be shown below.


Before the explanation on the positioning data setting


items Da.1 to Da.10 and Da.27 to Da.29, the configuration of the positioning data will be shown below.


The positioning data stored in the QD75 buffer memory has the following type of configuration.

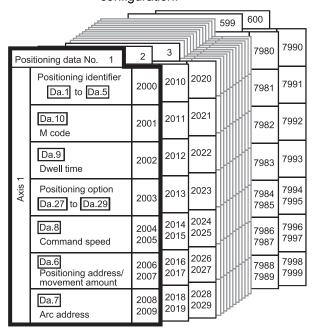

- Up to 600 positioning data for each axis can be set (stored) in the buffer memory addresses shown on the left. These data are controlled as positioning data No.1 to No.600 for each axis.
- One positioning data is configured of the items shown in the bold box.

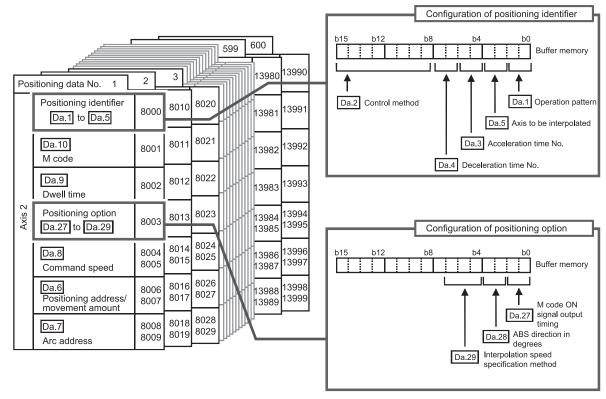

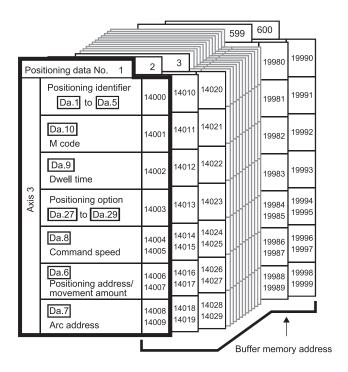

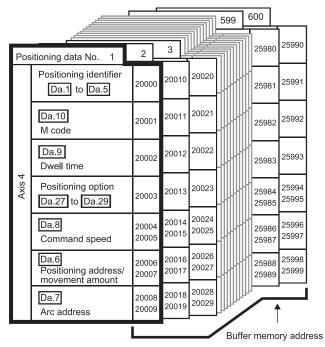

The descriptions that follow relate to the positioning data set items (Da.1) to Da.10, Da.27 to Da.29).

(The buffer memory addresses shown are those of the "positioning data No. 1" for the axes 1 to 4.)

Positioning identifier configuration

The positioning identifier consists of "Da.1 Operation pattern" to "Da.5 Axis to be interpolated". The set values of those data are stored in one buffer memory address. Consider the positioning identifier configuration in the figure below when setting "Da.1 Operation pattern" to "Da.5 Axis to be interpolated".

Positioning identifier configuration		Assignment
	(1)	Da.1 Operation pattern
b15 b14 b13 b12 b11 b10 b9 b8 b7 b6 b5 b4 b3 b2 b1 b0	(2)	Da.5 Axis to be interpolated
	(3)	Da.3 Acceleration time No.
(5) (4) (3) (2) (1)	(4)	Da.4 Deceleration time No.
	(5)	Da.2 Control system

5


The following table lists the setting range and default value of each buffer memory area of the positioning identifier.

	Setting value			Settina v	alue buffe	r memor	/ addres
Item	Value set with peripheral device	Value set with sequence program	Default value	Axis 1	Axis 2	Axis 3	Axis 4
D-41	00:Positioning complete	00					
Da.1 Operation	01:Continuous positioning control	01	1				
pattern	11:Continuous path control	11	•				
	·	01н					
	ABS1 :1-axis linear control (ABS)						
	INC1 :1-axis linear control (INC)	02н					
	FEED1: 1-axis fixed-feed control	03н					
	VF1 :1-axis speed control (forward run)	04н					
	VR1 :1-axis speed control (reverse run)	05н					
	VPF : Speed-position switching control (forward run)	06н					
	VPR : Speed-position switching control (reverse run)	07н					
	PVF : Position-speed switching control (forward run)	08н					
	PVR : Position-speed switching control (reverse run)	09н					
	ABS2 :2-axis linear interpolation control (ABS)	0Ан					
	INC2 : 2-axis linear interpolation control (INC)	0Вн	1				
	FEED2: Fixed-feed control by 2-axis linear interpolation	0Сн	1				
	ABS ^:Circular interpolation control with sub point specified (ABS)	0Dн	1				
	INC ^: Circular interpolation control with sub point specified (INC)	0Ен	1				
	ABS . : Circular interpolation control with center point specified (ABS, CW)	0F _H					
	ABS . : Circular interpolation control with center point specified (ABS, CCW)	10н	•				
	INC . : Circular interpolation control with center point specified (INC, CW)	11н					
	INC . : Circular interpolation control with center point specified (INC, CCW)	12H					
	VF2 :2-axis speed control (forward run)	13н					
	VR2 :2-axis speed control (reverse run)	14н					
Da.2 Control	ABS3 :3-axis linear interpolation control (ABS)	15н					
system	INC3 : 3-axis linear interpolation control (INC)	16н					
•	FEED3: Fixed-feed control by 3-axis linear interpolation control	17н					
	VF3 : 3-axis speed control (forward run)	18н					
	VR3 : 3-axis speed control (reverse run)	19н]				
	ABSH ^: Helical interpolation control with sub point designation (ABS)	20н					
	INCH : Helical interpolation control with sub point designation (INC)	21н	0000н	2000	8000	14000	200
	ABSH .: Helical interpolation control with center point designation (ABS, CW)	22н					
	ABSH .: Helical interpolation control with center point designation (ABS, CCW)	23н					
	INCH .: Helical interpolation control with center point designation (INC, CW)	24н					
	INCH .: Helical interpolation control with center point designation (INC, CCW)	25H					
	ABS4 :4-axis linear interpolation control (ABS)	1AH					
	INC4 :4-axis linear interpolation control (INC)	1Вн					
	FEED4: Fixed-feed control by 4-axis linear interpolation control	1Сн					
	VF4 :4-axis speed control (forward run)	1DH					
	VR4 : 4-axis speed control (reverse run)	1Ен					
	NOP : NOP instruction	80н					
	POS : Current value changing	81н					
	JUMP :JUMP instruction	82н]				
	LOOP : Declares the beginning of LOOP to LEND section	83н]				
	LEND : Declares the end of LOOP to LEND section	84н	1				
	0: Pr.9 Acceleration time 0	00	1				
Da.3			1				
Acceleration	1: Pr.25 Acceleration time 1 2: Pr.26 Acceleration time 2	01 10					
time No.	3: Pr.27 Acceleration time 3	11					
			-				
IDo 41	0: Pr.10 Deceleration time 0	00					
Da.4 Deceleration	1: Pr.28 Deceleration time 1	01					
time No.	2: Pr.29 Deceleration time 2	10					
	3: Pr.30 Deceleration time 3	11					
IDa ET	0: Axis 1	00					
Da.5 Axis to be	1: Axis 2	01					
interpolated	2: Axis 3	10					
	3: Axis 4	11		i	i	1	1

Da.1 Operation pattern

The operation pattern designates whether positioning of a certain data No. is to be ended with just that data, or whether the positioning for the next data No. is to be carried out in succession.

[Operation pattern]

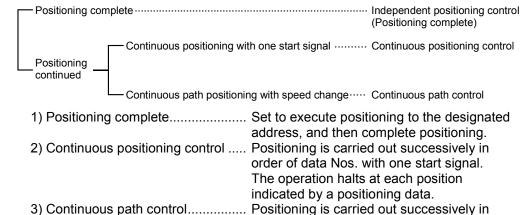

Da.2 Control system

Set the "control system" for carrying out positioning control.

Note

• When "JUMP instruction" is set for the control system, the " Da.9 Dwell time" and " Da.10 M code" setting details will differ.

positioning data.

order of data Nos. with one start signal. The operation does not stop at each

- In case you selected "LOOP" as the control system, the " Da.10 M code" should be set differently from other cases.
- Refer to CHAPTER 9 "MAJOR POSITIONING CONTROL" for details on the control systems.
- If "degree" is set for "Pr.1 Unit setting", circular interpolation control or 3-axis helical interpolation control cannot be carried out. The error "Circular interpolation not possible" (error code: 535) will occur when executed.
- The 3-axis helical interpolation control can be set only for the QD75N with a serial number (first five digits) of "17102" or later. If the 3-axis helical interpolation control is set for the QD75N with a serial number (first five digits) earlier than "17102", the error "Control system setting error" (error code: 524) will occur.

Da.3 Acceleration time No.

Set which of "acceleration time 0 to 3" to use for the acceleration time during positioning.

- 0 : Use the value set in " Pr.9 Acceleration time 0".
- 1 : Use the value set in " Pr.25 Acceleration time 1".
- 2 : Use the value set in " Pr.26 Acceleration time 2".
- 3 : Use the value set in " Pr.27 Acceleration time 3".

Da.4 Deceleration time No.

Set which of "deceleration time 0 to 3" to use for the deceleration time during positioning.

- 0 : Use the value set in " Pr.10 Deceleration time 0".
- 1 : Use the value set in " Pr.28 Deceleration time 1".
- 2 : Use the value set in " Pr.29 Deceleration time 2".
- 3: Use the value set in " | Pr.30 | Deceleration time 3".

Da.5 Axis to be interpolated

Set the target axis (partner axis) for operations under the 2-axis interpolation control, and the circular interpolation axis for operations under the 3-axis helical interpolation control.

- 0 : Selects the axis 1 as the target axis (partner axis).
- 1 : Selects the axis 2 as the target axis (partner axis).
- 2 : Selects the axis 3 as the target axis (partner axis).
- 3 : Selects the axis 4 as the target axis (partner axis).
- Do not specify the own axis number or any number except the above.
 (If you do, the error "Illegal interpolation description command" (error code: 521) will occur during the program execution.)
 - For 3-axis interpolation other than 3-axis helical interpolation control or 4-axis interpolation, this item does not need to be set.
 - The following table lists the target axes for the 3-axis helical interpolation control.

Reference axis	Circular interpolation axis	Linear interpolation axis
Axis 1	Axis 2	Axis 3
AXIS I	Axis 3	Axis 2
Axis 2	Axis 3	Axis 4
AXIS 2	Axis 4	Axis 3
Axis 3	Axis 4	Axis 1
AXIS 3	Axis 1	Axis 4
Axis 4	Axis 1	Axis 2
AXIS 4	Axis 2	Axis 1


Itom	Setting value, setting range		Default	Setting value buffer memory address			
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Da.6 Positioning address/ movement amount	The setting value range differs acc system". Here, the value within the following		0	2006 2007	8006 8007		20006 20007

Da.6 Positioning address/movement amount

Set the address to be used as the target value for positioning control. The setting value range differs according to the " Da.2 Control system". ((1) to (4))

(1) Absolute (ABS) system, current value changing

 The setting value (positioning address) for the ABS system and current value changing is set with an absolute address (address from OP).

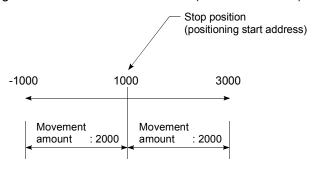


(2) Incremental (INC) system, fixed-feed 1, fixed-feed 2, fixed-feed 3, fixed-feed 4

 The setting value (movement amount) for the INC system is set as a movement amount with sign.

When movement amount is positive: Moves in the positive direction (address increment direction)

When movement amount is negative: Moves in the negative direction (address decrement direction)

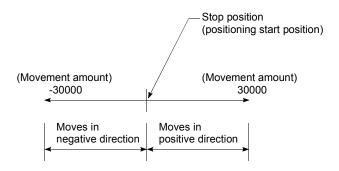

[Table 1]

■ When " Pr.1 Unit Setting" is "mm"

Da.2 setting value	Value set with peripheral device (μm)	Value set with sequence program *1 (×10 ⁻¹ μm)
ABS Linear 1 : 01H ABS Linear 2 : 0AH ABS Linear 3 : 15H ABS Linear 4 : 1AH Current value changing : 81H	♦ Set the address -214748364.8 to 214748364.7	♦ Set the address -2147483648 to 2147483647
INC Linear 1 : 02H INC Linear 2 : 0BH INC Linear 3 : 16H INC Linear 4 : 1BH Fixed-feed 1 : 03H Fixed-feed 2 : 0CH Fixed-feed 3 : 17H Fixed-feed 4 : 1CH	 ♦ Set the movement amount -214748364.8 to 214748364.7 	 ♦ Set the movement amount -2147483648 to 2147483647
Forward run speed/position: 06H Reverse run speed/position: 07H Forward run position/speed: 08H Reverse run position/speed: 09H	Set the movement amount 0 to 214748364.7	Set the movement amount 0 to 2147483647
ABS circular sub : 0DH ABS circular right : 0FH ABS circular left : 10H	♦ Set the address -214748364.8 to 214748364.7	♦ Set the address -2147483648 to 2147483647
INC circular sub : 0EH INC circular right : 11H INC circular left : 12H	♦ Set the movement amount -214748364.8 to 214748364.7	♦ Set the movement amount -2147483648 to 2147483647
ABS helical sub : 20H ABS helical right : 22H ABS helical left : 23H	♦ Set the address -214748364.8 to 214748364.7	♦ Set the address -2147483648 to 2147483647
INC helical sub : 21H INC helical right : 24H INC helical left : 25H	♦ Set the movement amount -214748364.8 to 214748364.7	♦ Set the movement amount -2147483648 to 2147483647

^{* 1:} Set an integer because the sequence program cannot handle fractions. (The value will be converted properly within the system.)


(3) Speed-position switching control

INC mode:

Set the amount of movement after the switching from speed control to position control.

· ABS mode:

Set the absolute address which will be the target value after speed control is switched to position control. (The unit is "degree" only)

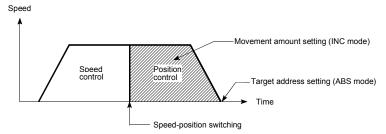

(4) Position-speed switching control

 Set the amount of movement before the switching from position control to speed control.

■ When " Pr.1 Unit Setting" is "degree"

Da.2 setting va	lue	Value set with peripheral device (degree)	Value set with sequence program *1 (×10 ⁻⁵ degree)
ABS Linear 1 ABS Linear 2 ABS Linear 3 ABS Linear 4 Current value changing	: 01н : 0Ан : 15н : 1Ан : 81н	♦ Set the address 0 to 359.99999	♦ Set the address 0 to 35999999
INC Linear 1 INC Linear 2 INC Linear 3 INC Linear 4 Fixed-feed 1 Fixed-feed 2 Fixed-feed 3 Fixed-feed 4	: 02H : 0BH : 16H : 1BH : 03H : 0CH : 17H : 1CH	 ♦ Set the movement amount -21474.83648 to 21474.83647 	 ♦ Set the movement amount -2147483648 to 2147483647
ABS helical sub ABS helical right ABS helical left	: 20н * 2 : 22н * 2 : 23н * 2	♦ Set the address0 to 359.99999	♦ Set the address 0 to 35999999
INC helical sub INC helical right INC helical left	: 21н*2 : 24н*2 : 25н*2	♦ Set the movement amount -21474.83648 to 21474.83647	♦ Set the movement amount -2147483648 to 2147483647
Forward run speed/posit Reverse run speed/posit		In INC mode ♦ Set the movement amount 0 to 21474.83647 In ABS mode ♦ Set the address 0 to 359.99999	In INC mode ♦ Set the movement amount 0 to 2147483647 In ABS mode ♦ Set the address 0 to 35999999
Forward run position/spe Reverse run position/spe		Set the movement amount 0 to 21474.83647	Set the movement amount 0 to 2147483647

^{* 1:} Set an integer because the sequence program cannot handle fractions. (The value will be converted properly within the system.)

^{*2:} In the 3-axis helical interpolation control, "degree" can be set only for the linear interpolation axis.

■ When " Pr.1 Unit Setting" is "pulse"

Da.2 setting value	Value set with peripheral device (pulse)	Value set with sequence program *1 (pulse)
ABS Linear 1 : 01H ABS Linear 2 : 0AH ABS Linear 3 : 15H ABS Linear 4 : 1AH Current value changing : 81H	♦ Set the address -2147483648 to 2147483647	♦ Set the address -2147483648 to 2147483647
INC Linear 1 : 02H INC Linear 2 : 0BH INC Linear 3 : 16H INC Linear 4 : 1BH Fixed-feed 1 : 03H Fixed-feed 2 : 0CH Fixed-feed 3 : 17H Fixed-feed 4 : 1CH	 ♦ Set the movement amount -2147483648 to 2147483647 	 ♦ Set the movement amount -2147483648 to 2147483647
Forward run speed/position: 06H Reverse run speed/position: 07H Forward run position/speed: 08H Reverse run position/speed: 09H	♦ Set the movement amount 0 to 2147483647	♦ Set the movement amount 0 to 2147483647
ABS circular sub : 0DH ABS circular right : 0FH ABS circular left : 10H	♦ Set the address -2147483648 to 2147483647	♦ Set the address -2147483648 to 2147483647
INC circular sub : 0EH INC circular right : 11H INC circular left : 12H	♦ Set the movement amount -2147483648 to 2147483647	♦ Set the movement amount -2147483648 to 2147483647
ABS helical sub : 20H ABS helical right : 22H ABS helical left : 23H	♦ Set the address -2147483648 to 2147483647	♦ Set the address -2147483648 to 2147483647
INC helical sub : 21H INC helical right : 24H INC helical left : 25H	♦ Set the movement amount -2147483648 to 2147483647	♦ Set the movement amount -2147483648 to 2147483647

■ When " Pr.1 Unit Setting" is "inch"

Da.2 setting value	Value set with peripheral device (inch)	Value set with sequence program *1 (×10 ⁻⁵ inch)
ABS Linear 1 : 01H ABS Linear 2 : 0AH ABS Linear 3 : 15H ABS Linear 4 : 1AH Current value changing : 81H	♦ Set the address -21474.83648 to 21474.83647	♦ Set the address -2147483648 to 2147483647
INC Linear 1 : 02H INC Linear 2 : 0BH INC Linear 3 : 16H INC Linear 4 : 1BH Fixed-feed 1 : 03H Fixed-feed 2 : 0CH Fixed-feed 3 : 17H Fixed-feed 4 : 1CH	 ♦ Set the movement amount -21474.83648 to 21474.83647 	 ♦ Set the movement amount -2147483648 to 2147483647
Forward run speed/position: 06H Reverse run speed/position: 07H Forward run position/speed: 08H Reverse run position/speed: 09H	Set the movement amount 0 to 21474.83647	♦ Set the movement amount 0 to 2147483647
ABS circular sub : 0DH ABS circular right : 0FH ABS circular left : 10H	♦ Set the address -21474.83647	♦ Set the address -2147483648 to 2147483647
INC circular sub : 0EH INC circular right : 11H INC circular left : 12H	♦ Set the movement amount -21474.83648 to 21474.83647	♦ Set the movement amount -2147483648 to 2147483647
ABS helical sub : 20H ABS helical right : 22H ABS helical left : 23H	♦ Set the address -21474.83648 to 21474.83647	♦ Set the address -2147483648 to 2147483647
INC helical sub : 21H INC helical right : 24H INC helical left : 25H	♦ Set the movement amount -21474.83648 to 21474.83647	♦ Set the movement amount -2147483648 to 2147483647


st 1: Set an integer because the sequence program cannot handle fractions. (The value will be converted properly within the system.)

Itom	Setting value, setting range		Default	Setting value buffer memory address			
Item	Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Da.7 Arc address	The setting value range differs accessive system. Here, the value within the [Table 1]	1 0 1	2008 2009	8008 8009		20008 20009	

Da.7 Arc address

The arc address is data required only when the circular interpolation control or 3axis helical interpolation control is carried out.

- (1) When carrying out circular interpolation with sub point designation, set the sub point (passing point) address as the arc address.
- (2) When carrying out circular interpolation with center point designation, set the center point address of the arc as the arc address.

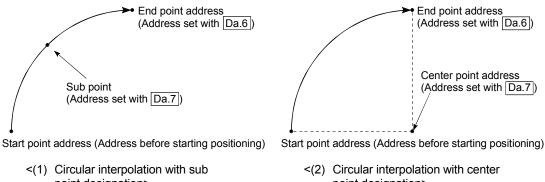

point designation>

point designation>

When the circular interpolation control or 3-axis helical interpolation control is not carried out, the value set in "Da.7 Arc address" will be invalid.

[Table 1]

■ When " Pr.1 Unit Setting" is "mm"

The table below lists the control systems that require the setting of the arc address and shows the setting range.

(With any control system excluded from the table below, the arc address does not need to be set.)

Da.2 setting value		Value set with peripheral device (μm)	Value set with sequence program +1 (×10 ⁻¹ μm)
ABS circular right :	0Dн 0Fн 10н	♦ Set the address -214748364.8 to 214748364.7	♦ Set the address -2147483648 to 2147483647
INC circular right :	0Ен 11н 12н	♦ Set the movement amount -214748364.8 to 214748364.7	♦ Set the movement amount -2147483648 to 2147483647
ABS helical right :	20н 22н 23н	♦ Set the address -214748364.8 to 214748364.7	♦ Set the address -2147483648 to 2147483647
INC helical right :	21н 24н 25н	♦ Set the movement amount -214748364.8 to 214748364.7 * 2	♦ Set the movement amount -2147483648 to 2147483647 * 2

- * 1: Set an integer because the sequence program cannot handle fractions. (The value will be converted properly within the system.)
- * 2: Note that the maximum radius that circular interpolation control is possible is 536870912, although the setting value can be input within the range shown in the above table, as an arc address.
 - When " Pr.1 Unit Setting" is "degree"

 No control system requires the setting of the arc address by "degree".
 - When " Pr.1 Unit Setting" is "pulse"
 The table below lists the control systems that require the setting of the arc address and shows the setting range.
 (With any control system excluded from the table below, the arc address does not need to be set.)

Da.2 setting value		Value set with peripheral device (pulse)	Value set with sequence program (pulse)	
ABS circular right	: 0Dн : 0Fн : 10н	♦ Set the address -2147483648 to 2147483647	♦ Set the address -2147483648 to 2147483647	
INC circular right	: 0Ен : 11н : 12н	♦ Set the movement amount -2147483648 to 2147483647 * 1	♦ Set the movement amount -2147483648 to 2147483647 * 1	
ABS helical right	: 20н : 22н : 23н	♦ Set the address -2147483648 to 2147483647	♦ Set the address -2147483648 to 2147483647	
INC helical right	: 21н : 24н : 25н	♦ Set the movement amount -2147483648 to 2147483647 * 1	♦ Set the movement amount -2147483648 to 2147483647 * 1	

^{* 1:} Note that the maximum radius that circular interpolation control is possible is 536870912, although the setting value can be input within the range shown in the above table, as an arc address.

5

■ When " Pr.1 Unit Setting" is "inch"

The table below lists the control systems that require the setting of the arc address and shows the setting range.

(With any control system excluded from the table below, the arc address does not need to be set.)

Da.2 setting value		Value set with peripheral device (inch)	Value set with sequence program *1 (×10 ⁻⁵ inch)	
ABS circular right	: 0Dн : 0Fн : 10н	♦ Set the address -21474.83648 to 21474.83647	♦ Set the address -2147483648 to 2147483647	
INC circular right	: 0Ен : 11н : 12н	♦ Set the movement amount -21474.83648 to 21474.83647	♦ Set the movement amount -2147483648 to 2147483647	
ABS helical right	: 20н : 22н : 23н	♦ Set the address -21474.83648 to 21474.83647	♦ Set the address -2147483648 to 2147483647	
INC helical right	: 21н : 24н : 25н	♦ Set the movement amount -21474.83648 to 21474.83647 * 2	♦ Set the movement amount -2147483648 to 2147483647 * 2	

^{* 1:} Set an integer because the sequence program cannot handle fractions. (The value will be converted properly within the system.)

^{*2:} Note that the maximum radius that circular interpolation control is possible is 536870912, although the setting value can be input within the range shown in the above table, as an arc address.

ltem		Setting value,	setting range	Default	Setting value buffer memory address			
		Value set with peripheral device	Value set with sequence program	value	Axis 1	Axis 2	Axis 3	Axis 4
Da.8 Command speed		The setting value range differs dependence of the setting. Here, the value within the [Table 1] -1: Current speed (Speed set for previous positioning data No.)		0	2004 2005	8004 8005		20004 20005
Da.9 Dwell time	JUMP destination positioning data No.	The setting value range differs acc system". Here, the value within the [Table 2	,	0	2002	8002	14002	20002
Da.10 M code	M code Condition data No. No. of LOOP to LEND repetitions	The setting value range differs according to the " Da.2 Control system". Here, the value within the [Table 3] range is set. [Table 3] on next page		0	2001	8001	14001	20001

Da.8 Command speed

Set the command speed for positioning.

- (1) If the set command speed exceeds " Pr.8 Speed limit value", positioning will be carried out at the speed limit value.
- (2) If "-1" is set for the command speed, the current speed (speed set for previous positioning data No.) will be used for positioning control. Use the current speed for uniform speed control, etc. If "-1" is set for continuing positioning data, and the speed is changed, the following speed will also change.

(Note that when starting positioning, if the "-1" speed is set for the positioning data that carries out positioning control first, the error "No command speed" (error code: 503) will occur, and the positioning will not start. Refer to Section 15.3 "List of errors" for details on the errors.)

Da.10 M code (or condition data No./No. of LOOP to LEND repetitions)

Set an "M code", a "condition data No. ", or the "number of LOOP to LEND repetitions" depending on how the " Da.2 Control system" is set.

- If a method other than "JUMP instruction" and "LOOP" is selected as the
 Da.2 Control system"
 - Set an "M code".

If no "M code" needs to be output, set "0" (default value).

- If "3-axis helical interpolation control" is selected as the "Da.2 Control system": Set the number of pitch for the linear interpolation axis. Set the rotation speed of the circular interpolation as the number of pitch.
- If "JUMP instruction" is selected as the " Da.2 Control system"
 Set the "condition data No." for JUMP.
 - 0 : Unconditional JUMP to the positioning data specified by Da.9.
 - 1 to 10 : JUMP performed according to the condition data No. specified (a number between 1 and 10).
- If "LOOP" is selected as the " Da.2 Control system"
 - Set the number of LOOP to LEND repetitions by a number other than "0".

The error "Control system LOOP setting error" (error code: 545) will occur if you specify "0".

* The condition data specifies the condition for the JUMP instruction to be executed.

(A JUMP will take place when the condition is satisfied.)

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 20000000.00 (mm/min)	1 to 2000000000 (×10 ⁻² mm/min)
1 : inch	0.001 to 2000000.000 (inch/min)	1 to 2000000000 (×10 ⁻³ inch/min)
2 : degree	0.001 to 2000000.000 (degree/min)	1 to 2000000000 (×10 ⁻³ degree/min)
3 : pulse	1 to 1000000 (pulse/s) *1	[QD75P□N/QD75D□N] 1 to 4000000 (pulse/s) [QD75P□/QD75D□] 1 to 1000000 (pulse/s)

^{* 1:} In GX Configurator-QP, the QD75P N/QD75D N are recognized as the QD75P /QD75D . Therefore, the setting ranges are the same as those of the QD75P QD75D . To set a value outside a setting range in GX Configurator-QP, set it through a sequence program or GX Works2. The setting ranges in GX Works2 are the same as those in sequence programs. (Refer to Appendix 1.2)

[Table 2]

Da.2 setting value	Setting item	Value set with peripheral device	Value set with sequence program	
JUMP instruction: 82н	Positioning data No.	1 to 600	1 to 600	
Other than JUMP instruction	Dwell time	0 to 65535 (ms)	0 to 65535 (ms)	

[Table 3]


Da.2 setting value	Setting item	Value set with peripheral device	Value set with sequence program
JUMP instruction: 82н	Condition data No.	0 to 10	0 to 10
LOOP: 83H	Repetition count	1 to 65535	1 to 65535
Helical interpolation: 20н to 25н	Number of pitch	0 to 999	0 to 999
Other than the above	M code	0 to 65535	0 to 65535

Da.9 Dwell time (JUMP designation positioning data No.)

Set the "dwell time" or "positioning data No." corresponding to the " Da.2 Control system".

- When a method other than "JUMP instruction " is set for " Da.2 Control system"
 - Set the "dwell time".
- When "JUMP instruction " is set for " Da.2 Control system"
 - Set the "positioning data No." for the JUMP destination.

When the "dwell time" is set, the setting details of the "dwell time" will be as follows according to " Da.1 Operation pattern".

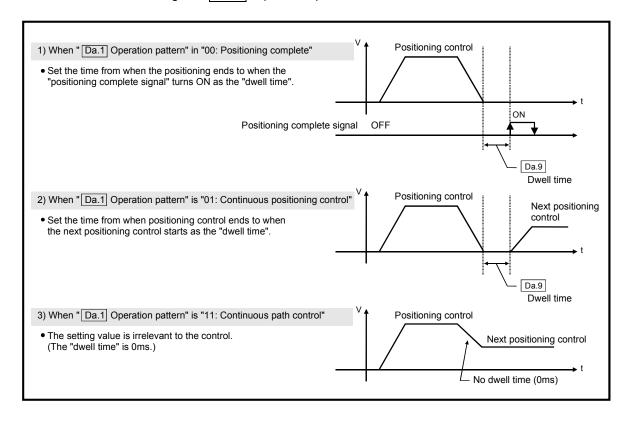

		Setting value, setti	ng range	Defeut	Setting value buffer memory address			
	Item	Value set with peripheral	Value set with sequence program	Default value	Axis 1	Axis 2	Axis 3	Axis 4
	Da.27 M code ON	0: Use the set value in "Pr.18 M code ON signal output timing".	0					
	signal output	1: WITH mode	1	0				
	timing	2: AFTER mode	2					
otion	Da.28 Da.28 ABS direction in degrees	0: Use the set value in "Cd.40 ABS direction in degrees".	0	0 2002			20003	
go bi		1: ABS clockwise	1		8003	14003		
tionir		2: ABS counterclockwise	2	2003 8				
Posi		Takes a shortcut. (direction setting ignored)	3					
	Da.29 Interpolation speed designation method	0: Use the set value in "Pr.20 Interpolation speed designation method".	0					
		1: Composite speed	1					
		2: Reference axis speed	2					

Positioning option configuration

The positioning option consists of "Da.27 M code ON signal output timing" to "Da.29 Interpolation speed designation method". The set values of those data are stored in one buffer memory address. Consider the positioning option configuration in the figure below when setting "Da.27 M code ON signal output timing" to "Da.29 Interpolation speed designation method".

Positioning option configuration	Assignment
	(1) Da.27 M code ON signal output timing
b15 b14 b13 b12 b11 b10 b9 b8 b7 b6 b5 b4 b3 b2 b1 b0	(2) Da.28 ABS direction in degrees
(4) (3) (2) (1)	(3) Da.29 Interpolation speed designation method
	(4) Use prohibited (fixed to 0)

Da.27 M code ON signal output timing

Set the M code ON signal output timing for each positioning data.

Da.28 ABS direction in degrees

Set the ABS moving direction when "degree" is selected as the unit for each positioning data.

Da.29 Interpolation speed designation method


Set the interpolation speed designation method for each positioning data.

POINTS


- (1) To use the positioning option, set "1: Valid" in Pr.70 Positioning option valid/invalid setting.
- (2) The positioning option can be set only with GX Works2 (Version 1.540N or later) or sequence programs.
- (3) The positioning option can be set only for the QD75N with a serial number (first five digits) of "17102" or later. If a value is set for the positioning option of the QD75N with a serial number (first five digits) earlier than "17102" and a positioning control is started, the value set in the positioning option is ignored.


5.4 List of block start data

The illustrations below show the organization of the block start data stored in the QD75 buffer memory. The block start data setting items Da.11 to Da.14 are explained in the pages that follow.

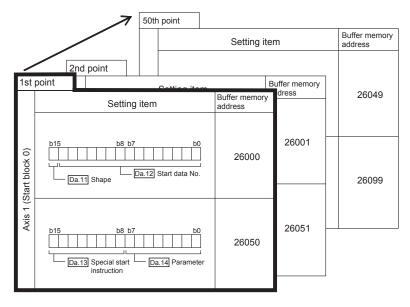

- Up to 50 block start data points can be set (stored) for each axis in the buffer memory addresses shown on the left.
- Items in a single unit of block start data are shown included in a bold frame.
- Each axis has five start blocks (block Nos. 0 to 4).
- * For information on the organization of the buffer memory addresses assigned to the start blocks 1 to 4, refer to Appendix 13 "List of buffer memory addresses".

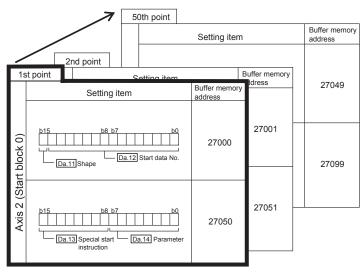

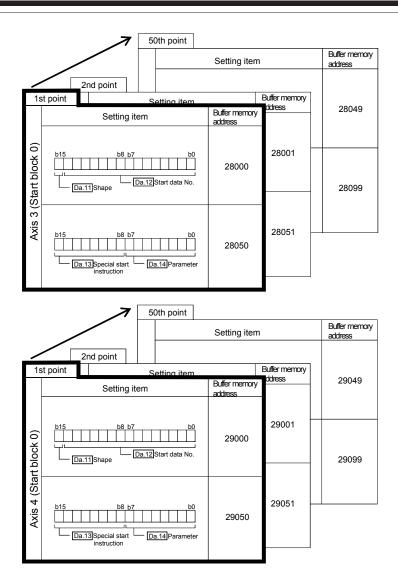

The pages that follow explain the block start data setting items (Da.11 to Da.14). (The buffer memory addresses shown are those of the "1st point block start data (block No. 7000)" for the axes 1 to 4.)

REMARK

To perform an high-level positioning control using block start data, set a number between 7000 and 7004 to the " Cd.3 Positioning start No." and use the

" Cd.4 Positioning starting point No." to specify a point number between 1 and 50, a position counted from the beginning of the block.

The number between 7000 and 7004 specified here is called the "block No.". With the QD75, up to 50 "block start data" points and up to 10 "condition data" items can be assigned to each "block No.".

Block No. *	Axis	Block start data	Condition	Buffer memory	GX Configurator- QP
	Axis 1		Condition data (1 to 10)		
7000	Axis 2	Start block 0	Condition data (1 to 10)		
7000	Axis 3	Start block o	Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7001	Axis 2	Start block 1	Condition data (1 to 10)		Supports the settings
7001	Axis 3	Start block 1	Condition data (1 to 10)	Supports the settings	
	Axis 4		Condition data (1 to 10)		
	Axis 1	Start block 2	Condition data (1 to 10)		
7002	Axis 2		Condition data (1 to 10)		
7002	Axis 3		Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7003	Axis 2	Start block 3	Condition data (1 to 10)		
7003	Axis 3	Start block 3	Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7004	Axis 2	Ctart blook 4	Condition data (1 to 10)		
7004	Axis 3	Start block 4	Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		

^{*:} Setting cannot be made when the "Pre-reading start function" is used. If you set any of Nos. 7000 to 7004 and perform the Pre-reading start function, the error "Outside start No. range" (error code: 543) will occur.

(For details, refer to Section 12.7.7 "Pre-reading start function".)

		Setting	value	Setting value buffer m Default address		nemory		
Item	Value set with peripheral device	Value set with sequence program		value	Axis 1			Axis 4
Da.11 Shape	0 : End	0						
	1 : Continue	1	b15 b11 b7 b3 b0 0000	0000н	26000	27000	28000	29000
Da.12 Start data No.	Positioning data No.: 1 to 600 (01 _H to 258 _H)	01 _н to 258 _н	● Start data No.					
	0 : Block start (normal start)	00н						
	1 : Condition start	01 _H						
	2 : Wait start	02 _H	b15 b11 b7 b3 b0					
Da.13 Special start instruction	3 : Simultaneous start	03н						
	4 : FOR loop	04н		0000н	26050	27050	28050	29050
	5 : FOR condition	05 _H	Special start instruction					
	6 : NEXT start	06н	I I Struction					
Da.14 Parameter	Condition data No.: 1 to 10 (01 _H to 0A _H) No. of repetitions: 0 to 255 (00 _H to FF _H)	00 _н to FF _н	Parameter					

Da.11 Shape

Set whether to carry out only the local "block start data" and then end control, or to execute the "block start data" set in the next point.

Setting value	Setting details
0 : End	Execute the designated point's "block start data", and then complete the control.
	Execute the designated point's "block start data", and after completing control, execute the next point's "block start data".

Da.12 Start data No.

Set the "positioning data No." designated with the "block start data".

Da.13 Special start instruction

Set the "special start instruction " for using "high-level positioning control". (Set how to start the positioning data set in " Da.12 Start data No.".)

Setting value	Setting details
00н : Block start (Normal start)	Execute the random block positioning data in the set order with one start.
01н : Condition start	Carry out the condition judgment set in "condition data" for the designated positioning data, and when the conditions are established, execute the "block start data". If not established, ignore that "block start data", and then execute the next point's "block start data".
02н : Wait start	Carry out the condition judgment set in "condition data" for the designated positioning data, and when the conditions are established, execute the "block start data". If not established, stop the control (wait) until the conditions are established.
03н : Simultaneous start	Simultaneous execute (output pulses at same timing) the positioning data with the No. designated for the axis designated in the "condition data". Up to four axes can start simultaneously.
04н: Repeated start (FOR loop)	Repeat the program from the block start data with the "FOR loop" to the block start data with "NEXT" for the designated No. of times.
05н : Repeated start (FOR condition)	Repeat the program from the block start data with the "FOR condition" to the block start data with "NEXT" until the conditions set in the "condition data" are established.
06н : NEXT start	Set the end of the repetition when "05н: Repetition start (FOR loop)" or "06н: Repetition start (FOR condition)" is set.

Refer to CHAPTER 10 "HIGH-LEVEL POSITIONING CONTROL" for details on the control.


Da.14 Parameter

Set the value as required for " Da.13 Special start instruction ".


Da.13 Special start instruction	Setting value	Setting details
Block start (Normal start)	_	Not used. (There is no need to set.)
Condition start		Set the condition data No. (No. of "condition data" set to perform
Wait start	1 to 10	condition judgment)
Simultaneous start		(For details of the condition data, refer to Section 5.5.)
Repeated start (FOR loop)	0 to 255	Set the No. of repetitions.
Repeated start (FOR condition)	1 to 10	Set the condition data No. (No. of "condition data" set to perform condition judgment)
		(For details of the condition data, refer to Section 5.5.)


5.5 List of condition data


The illustrations below show the organization of the condition data stored in the QD75 buffer memory. The condition data setting items Da.15 to Da.19 are explained in the pages that follow.

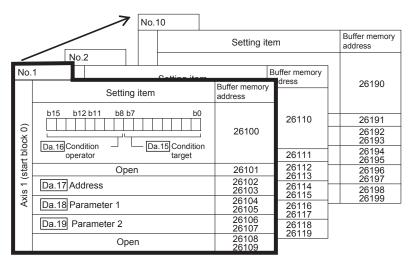

- Up to 10 block start data points can be set (stored) for each block No. in the buffer memory addresses shown on the left.
- Items in a single unit of condition data are shown included in a bold frame.
- Each axis has five start blocks (block Nos. 0 to 4).
- * For information on the organization of the buffer memory addresses assigned to the start blocks 1 to 4, refer to Appendix 13 "List of buffer memory addresses".

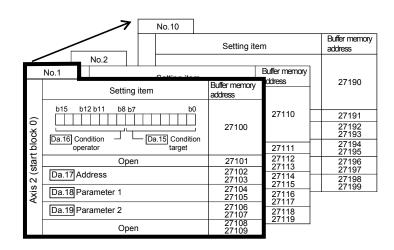

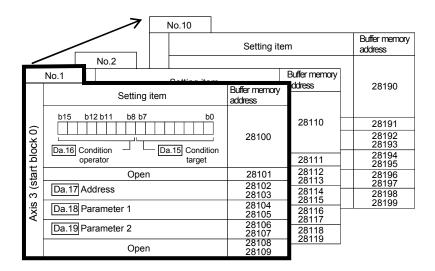

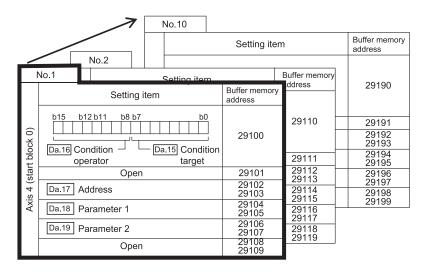

The pages that follow explain the condition data setting items (Da.15 to Da.19). (The buffer memory addresses shown are those of the "condition data No. 1 (block No. 7000)" for the axes 1 to 4.)

REMARK

To perform an high-level positioning control using block start data, set a number between 7000 and 7004 to the " Cd.3 Positioning start No." and use the

" Cd.4 Positioning starting point No." to specify a point number between 1 and 50, a position counted from the beginning of the block.

The number between 7000 and 7004 specified here is called the "block No.". With the QD75, up to 50 "block start data" points and up to 10 "condition data" items can be assigned to each "block No.".

Block No. *	Axis	Block start data	Condition	Buffer memory	GX Configurator- QP
	Axis 1		Condition data (1 to 10)		
7000	Axis 2	Start block 0	Condition data (1 to 10)		
7000	Axis 3	Start block o	Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7001	Axis 2	Start block 1	Condition data (1 to 10)		
7001	Axis 3	Start block 1	Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7002	Axis 2	Start block 2	Condition data (1 to 10) Supports the	Supports the	Supports the settings
7002	Axis 3		Condition data (1 to 10)	settings	
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7003	Axis 2	Start block 3	Condition data (1 to 10)		
7003	Axis 3	Start block 3	Condition data (1 to 10)		
	Axis 4		Condition data (1 to 10)		
	Axis 1		Condition data (1 to 10)		
7004	Axis 2	Ctart blook 4	Condition data (1 to 10)		
7004	Axis 3	Start block 4	Condition data (1 to 10)		l
	Axis 4		Condition data (1 to 10)		

^{*:} Setting cannot be made when the "Pre-reading start function" is used. If you set any of Nos. 7000 to 7004 and perform the Pre-reading start function, the error "Outside start No. range" (error code: 543) will occur.

(For details, refer to Section 12.7.7 "Pre-reading start function".)

	Item		Setting value	Default value	aggress			
	itom	Value set with peripheral device	e Value set with sequence program		Axis 1	Axis 2		Axis 4
	Da.15 Condition target	01: Device X 02: Device Y 03: Buffer memory (1-word) 04: Buffer memory (2-word) 05: Positioning data No.	01H 02H 03H 04H 05H					
Condition identifier	Da.16 Condition operator	01: **=P1 02: **≠P1 03: **≠P1 04: **≥P1 05: P1≤**≤ P2 06: **≤P1, P2≤** 07: DEV=ON 08: DEV=OFF 10: Axis 1 selected 20: Axis 2 selected 40: Axis 3 selected 40: Axis 3 selected 50: Axes 1 and 2 selected 60: Axes 2 and 3 selected 70: Axes 1, 2, and 3 selected 80: Axis 4 selected 90: Axes 1 and 4 selected A0: Axes 2 and 4 selected B0: Axes 1, 2, and 4 selected C0: Axes 3 and 4 selected D0: Axes 1, 3, and 4 selected D0: Axes 1, 3, and 4 selected D0: Axes 2, 3, and 4 selected	01H 02H 03H 04H 05H 06H 07H 08H 10H 20H 30H 40H 50H 60H 70H 80H 90H A0H B0H COH D0H E0H	0000н	26100	27100	28100	29100
	.17 dress	Buffer memory address	Example) 26103 26102 b31 (High-order) b16b15 (Low-order) b0 Buffer memory address		26102 26103	27102 27103	28102 28103	29102 29103
Da Pa	.18 rameter 1			0000н	26104 26105	27104 27105	28104 28105	29104 29105
Da.19 Parameter 2 Value		Value	Example) 26107 26106 b31 (High-order) b16b15 (Low-order) b0 Value	0000н		27106 27107		

Da.15 Condition target

Set the condition target as required for each control.

Setting value	Setting details
01н : Device X	Set the input/output signal ON/OFF of the QD75 as the
02н : Device Y	conditions.
03н : Buffer memory (1-word)	Set the value stored in the buffer memory as the condition.
04н : Buffer memory (2-word)	03н: The target buffer memory is "1-word (16 bits)" 04н: The target buffer memory is "2-word (32 bits)"
05н : Positioning data No.	Select only for "simultaneous start".

Da.16 Condition operator

Set the condition operator as required for the " Da.15 Condition target".

Da.15 Condition target	Setting value	Setting details		
01н: Device X	07н : DEV=ON	The state (ON/OFF) of an I/O signal is defined as the		
02н: Device Y	08н : DEV=OFF	condition. Select ON or OFF as the trigger.		
	01н : **=P1			
	02 _H : **≠P1			
03н: Buffer memory (1-word)	03 _H : **≤P1	Select how to use the value (**) in the buffer memory		
04н: Buffer memory (2-word)	04 _H : **≥P1	as a part of the condition.		
	05н : Р1≤**≤Р2			
	06н : **≤P1, P2≤** 10н : Axis 1 selected			
	10н : Axis 1 selected			
	20н : Axis 2 selected			
	30н : Axes 1 and 2 selected			
	40н : Axis 3 selected			
	50н : Axes 1 and 3 selected			
	60н : Axes 2 and 3 selected			
05н: Positioning data No.	70н : Axes 1, 2, and 3 selected	If "simultaneous start" is specified, select the axis		
OSH. I OSITIONING GATA NO.	80н : Axis 4 selected	(or axes) that should start simultaneously.		
	90н : Axes 1 and 4 selected			
	A0н :Axes 2 and 4 selected			
	B0н: Axes 1, 2, and 4 selected			
	C0н: Axes 3 and 4 selected			
	D0н: Axes 1, 3, and 4 selected	_		
	E0н :Axes 2, 3, and 4 selected			

Da.17 Address

Set the address as required for the " Da.15 Condition target".

Da.15 Condition target	Setting value	Setting details
01н : Device X		Not used. (There is no need to set.)
02н : Device Y	•	Not used. (There is no need to set.)
03н : Buffer memory (1-word)		Set the target "buffer memory address".
04н : Buffer memory (2-word)	(Ruffer memory address)	(For 2 word, set the low-order buffer memory address.)
05н : Positioning data No.	1	Not used. (There is no need to set.)

Da.18 Parameter 1

Set the parameters as required for the " Da.16 Condition operator".

Da.16 Condition operator	Setting value	Setting details		
01н : **=P1				
02н : * ≠ P1		The value of P1 should be equal to or smaller than the value of		
03н : **≤Р1	Value	P2. (P1≤P2)		
04н : **≥Р1	Value	If P1 is greater than P2 (P1>P2), the error "Condition data error"		
05н : P1≤**≤P2		(error code 533) will occur.		
06н : **≤Р1, Р2≤**				
07н : DEV=ON	Value	Set the device bit No.		
08н : DEV=OFF	(bit No.)	X: 0н to 1н, 4н to 17н Y: 0, 4н to 17н		
10н : Axis 1 selected		Set the positioning data No. for starting axis 1 and/or axis 2.		
↓	Value (positioning data No.)	· Avis 1 positioning data No. 1 to 600 (01µ to 258µ)		
E0н : Axes 2, 3, and 4 selected		: Axis 2 positioning data No. 1 to 600 (01н to 258н)		

Da.19 Parameter 2

Set the parameters as required for the " Da.16 Condition operator".

Da.16 Condition operator	Setting value	Setting details		
01н : **=P1				
02H:∗≠P1		Netword (Newsord to be ent.)		
03H:**≤P1	_	Not used. (No need to be set.)		
04H:**≥P1				
05н : P1≤**≤P2		The value of P2 should be equal to or greater than the value of		
06н∶ **≤Р1, Р2≤**	Value	P1. (P1≤P2) If P1 is greater than P2 (P1>P2), the error "Condition data error" (error code 533) will occur.		
07н : DEV=ON				
08н : DEV=OFF				
10н : Axis 1 selected	_	Not used. (No need to be set.)		
20н: Axis 2 selected				
30н : Axes 1 and 2 selected				
40н: Axis 3 selected				
50н: Axes 1 and 3 selected				
60н: Axes 2 and 3 selected				
70н: Axes 1, 2, and 3 selected		Set the positioning data No. for starting axis 3 and/or axis 4.		
80н: Axis 4 selected	Value	Low-order 16-bit		
90н : Axes 1 and 4 selected	(positioning data No.)	: Axis 3 positioning data No. 1 to 600 (01н to 258н)		
A0н : Axes 2 and 4 selected	(pooliioning data 140.)	High-order 16-bit		
B0н: Axes 1, 2, and 4 selected		: Axis 4 positioning data No. 1 to 600 (01н to 258н)		
C0н: Axes 3 and 4 selected				
D0н: Axes 1, 3, and 4 selected				
E0н: Axes 2, 3, and 4 selected				


5.6 List of monitor data

5.6.1 System monitor data

Storage item	Storage details	
Md.1 In test mode flag	Whether the mode is the test mode from the peripheral device or not is stored. • When not in test mode : OFF • When in test mode : ON	

Reading the monitor value	Default value	Storage buffer memory address (common for axis 1 to axis 4)
Monitoring is carried out with a decimal. Monitor value Storage value 0: Not in test mode 1: In test mode	0	1200


(Unless noted in particular, the monitor value is saved as binary data.)

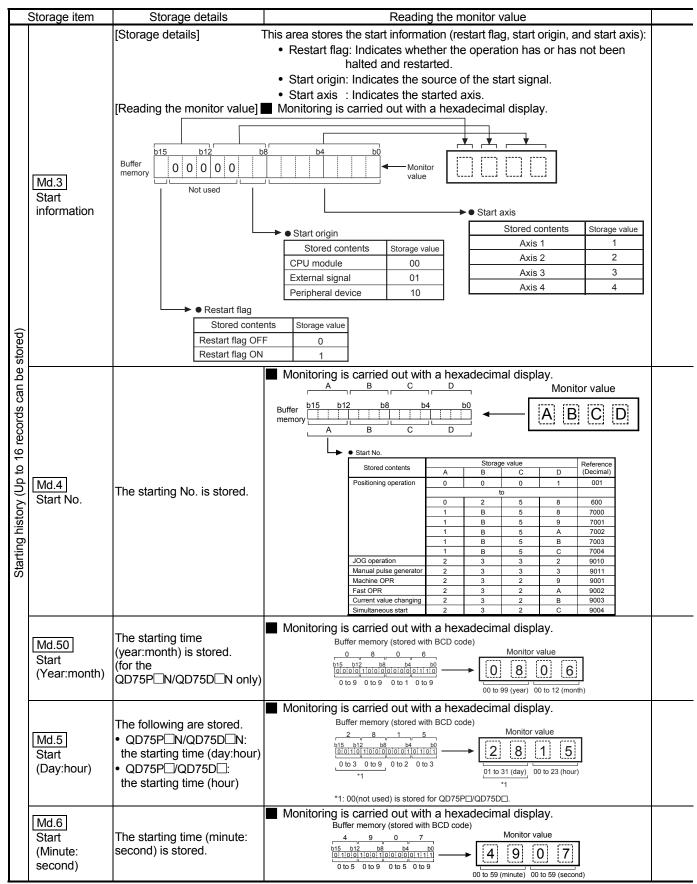

Note: If a start signal is issued against an operating axis, a record relating to this event may be output before a record relating to an earlier start signal is output.

Г	Storage item Storage details		Reading the monitor value
Starting history (Up to 16 records can be stored)		[Storage details] [Reading the monitor value] Buffer b15 b12 b15 b12 a memory a Em Em Em Em Em Em Em Em Em E	This area stores the following results of the error judgment performed upon starting: • BUSY start warning flag • Error Ro. ■ Monitoring is carried out with a hexadecimal display. ■ Monitor value ■ B C D Monitor value ■ B C D Monitor value ■ A B C D Monitor value
	Md.8 Start history pointer	Indicates a pointer No. that is next to the Pointer No. assigned to the latest of the existing starting history records.	Monitoring is carried out with a decimal display. Monitor value Storage value (Pointer number) 0 to 15

	Storage item	Storage details	Reading the monitor value
	Md.14 Axis in which	Stores a number (Axis No.) that indicates the axis that encountered a warning.	Monitoring is carried out with a decimal display. Monitor value Storage value 1: Axis 1 2: Axis 2 3: Axis 3 4: Axis 4
stored)	Md.15 Axis warning No.	Stores an axis warning No.	Monitoring is carried out with a decimal display. Monitor value • Warning No. For details of warning Nos. (warning codes), refer to Section 15.4 "List of warnings".
16 records can be	Md.52 Axis warning occurrence (Year:month)	Stores the time (year:month) at which an axis warning was detected. (for the QD75P□N/QD75D□N only)	Monitoring is carried out with a hexadecimal display. Buffer memory (stored with BCD code) 0 8 0 6 0 10101011010101010101010101011110 0 to 9 0 to 9 0 to 1 0 to 9 0 to 9 0 (year) 00 to 12 (month)
Warning history (Up to 16 re	Axis warning occurrence (Day:hour)	The following are stored. QD75P\(\subseteq \text{N/QD75D}\(\subseteq \text{N}:\) the time (day:hour) at which an axis warning was detected QD75P\(\subseteq \text{VQD75D}\(\subseteq \text{:}\) the time (hour) at which an axis warning was detected	Monitoring is carried out with a hexadecimal display. Buffer memory (stored with BCD code) 2 8 1 5 bits bits bits bits bits bits bits bits
	occurrence	Stores the time (minute: second) at which an axis warning was detected.	Monitoring is carried out with a hexadecimal display. Buffer memory (stored with BCD code) 4 9 0 7 b15 b12 b8 b4 b0 [01101011010101010101010101111] 0 to 5 0 to 9 0 to 5 0 to 9 00 to 59 (minute) 00 to 59 (second)
	Md.18 Warning history pointer	Indicates a pointer No. that is next to the Pointer No. assigned to the latest of the existing records.	Monitoring is carried out with a decimal display. Monitor value Monitor value (Pointer number) 0 to 15
No ac	d.19 o. of write cesses to flash DM	Stores the number of write accesses to the flash ROM after the power is switched ON. The count is cleared to "0" when the number of write accesses reach 26 and an error reset operation is performed.	Monitoring is carried out with a decimal display. Monitor value Monitor value

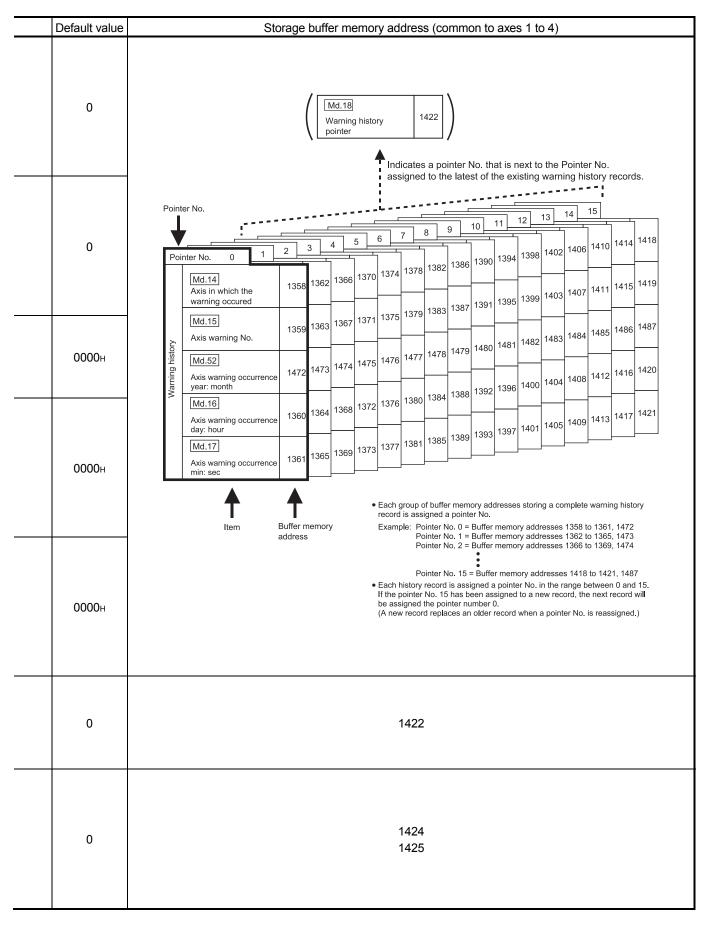


5.6.2 Axis monitor data

Storage item	Storage details	
Md.20 Current feed value	The currently commanded address is stored. (Different from the actual motor position during operation) The current position address is stored. If "degree" is selected as the unit, the addresses will have a ring structure for values between 0 and 359.99999 degrees. • Update timing: 0.9ms (QD75P_N/QD75D_N), 1.8ms (QD75P_/QD75D_) • The OP address is stored when the machine OPR is completed. • When the current value is changed with the current value changing function, the changed value is stored.	
Md.21 Machine feed value	The address of the current position according to the machine coordinates will be stored. (Different from the actual motor position during operation) Note that the current value changing function will not change the machine feed value. Under the speed control mode, the machine feed value is constantly updated always, irrespective of the parameter setting. The value will not be cleared to "0" at the beginning of fixed-feed control. Even if "degree" is selected as the unit, the addresses will not have a ring structure for values between 0 and 359.99999 degrees. • Machine coordinates: Characteristic coordinates determined with machine • Update timing: 0.9ms (QD75P\(\text{D}\)\(\text{N}\)\(\text{QD75D}\(\text{D}\)\(\text{N}\)\), 56.8ms (QD75P\(\text{D}\)\(\text{QD75D}\(\text{D}\)\)	
Md.22 Feedrate	The command output speed of the operating workpiece is stored. (May be different from the actual motor speed during operation) • During interpolation operation, the speed is stored in the following manner. Reference axis : Composite speed or reference axis speed (Set with Pr.20) Interpolation axis : 0 • Update timing: 0.9ms (QD75P\(\text{N}\)\(\text{QD75D}\(\text{D}\)\(\text{N}\)), 56.8ms (QD75P\(\text{QD75D}\(\text{D}\)\(\text{D}\)	
Md.23 Axis error No.	When an axis error is detected, the error code corresponding to the error details is stored. • The latest error code is always stored. (When a new axis error occurs, the error code is overwritten.) • When " Cd.5 Axis error reset" (axis control data) turns ON, the axis error No. is cleared (set to 0).	

Storage item	Storage details	
Md.24 Axis warning No.	Whenever an axis warning is reported, a related warning code is stored. • This area stores the latest warning code always. (Whenever an axis warning is reported, a new warning code replaces the stored warning code.) • When the " Cd.5 Axis error reset" (axis control data) is set to ON, the axis warning No. is cleared to "0".	
Md.25 Valid M code	This area stores an M code that is currently active (i.e. set to the positioning data relating to the current operation). • Update timing : turning ON of the M code ON signal When the PLC READY signal (Y0) goes OFF, the value is set to "0".	
Md.26 Axis operation status	This area stores the axis operation status.	
Md.27 Current speed	 Da.8 Command speed" of the positioning data currently in execution is stored. If Da.8 Command speed" is set to "-1", this area stores the command speed set by the positioning data used one step earlier. If Da.8 Command speed" is set to a value other than "-1", this area stores the command speed set by the current positioning data. If the speed change function is executed, "Cd.14 New speed value" is stored. (For details of the speed change function, refer to Section 12.5.1.) 	

Storage item	Storage details	
Md.28 Axis feedrate	The speed which is actually output as a command at that time in each axis is stored. (May be different from the actual motor speed) "0" is stored when the axis is at a stop. Update timing: 0.9ms (QD75P□N/QD75D□N), 56.8ms (QD75P□/QD75D□)	
Md.29 Speed-position switching control positioning amount	The movement amount for the position control to end after changing to position control with the speed-position switching control (INC mode) is stored. When the control method is "Reverse run: position/speed", the negative value is stored.	
Md.30 External input/output signal	The ON/OFF state of the external input/output signal is stored. The following items are stored. • Upper limit signal • Lower limit signal • Drive unit READY signal • Stop signal • External command signal • Zero signal • Near-point dog signal • Near-point counter clear signal Update timing: 0.9ms (QD75P□N/QD75D□N), 56.8ms (QD75P□/QD75D□)	

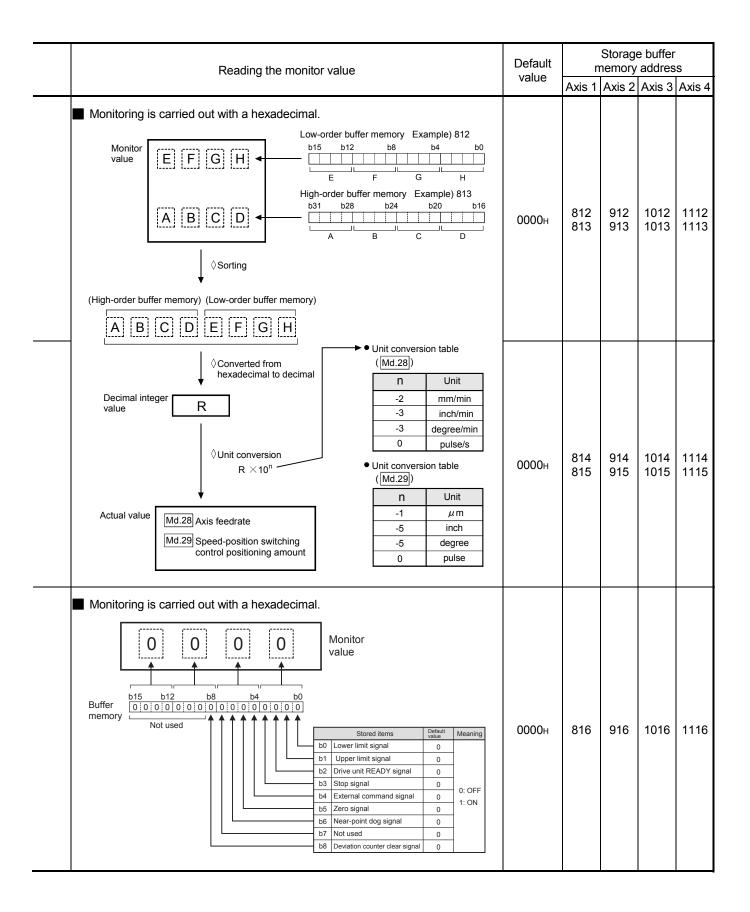

Storage item	Storage details
Storage item	Storage details
Md.31 Status	This area stores the states (ON/OFF) of various flags. Information on the following flags is stored. In speed control flag: This signal that comes ON under the speed control can be used to judge whether the operation is performed under the speed control or position control. The signal goes OFF when the power is switched ON, under the position control, and during JOG operation or manual pulse generator operation. During the speed-position or position-speed switching control, this signal comes ON only when the speed control is in effect. During the speed-position switching over from speed control to position control. During the position-speed switching over from speed control to position control. During the position-speed switching control, this signal comes ON when the position-speed switching signal executes a switching over from position control to speed control. Speed-position switching latch flag: This signal is used during the speed-position switching control, this signal comes ON when position control takes over. This signal goes OFF when the next positioning data is processed, and during JOG operation or manual pulse generator operation. Command in-position flag: This signal is on when the remaining distance is equal to or less than the command inposition range (set by a detailed parameter). This signal remains OFF with data that specify the continuous path control (P11) as the operation pattern. The state of this signal is monitored every 0.9ms (QD75P□NQD75D□N) or 1.8ms (QD75P□QD75D□N) except when the monitoring is canceled under the speed control or while the speed control is in effect during the speed-position or position-speed switching control. While poperations are performed with interpolation, this signal comes ON when a machine OPR operation completes. OPR cemplete flag: This signal comes ON when the power is switched ON, when the drive unit READY signal goes OFF when the OPR operation starts. This signal goes OFF when a machine OPR operation completes normally. This signal goes OFF when
Md.32 Target value	This area stores the target value (Da.6) Positioning address/movement amount) for a positioning operation. • At the beginning of positioning control and current value changing : Stores the value of "Da.6 Positioning address/movement amount". • At the OP shift operation of OPR control : Stores the value of OP shift amount. • At other times : Stores "0".

Reading the monitor value	Default	Storage buffer memory address			
3	value			Axis 3	
Monitoring is carried out with a hexadecimal display. Buffer memory Not used Not us	0008н	817	917	1017	1117
Monitoring is carried out with a decimal display. Monitor R Decimal integer value Unit conversion table (Md.32) n Unit -1 µm -5 inch -5 degree 0 pulse	0	818 819	918 919	1018 1019	1118 1119

Storage item	Storage details	
Md.33 Target speed	 During operation with positioning data The actual target speed, considering the override and speed limit value, etc., is stored. "0" is stored when positioning is completed. During interpolation of position control The composite speed or reference axis speed is stored in the reference axis address, and "0" is stored in the interpolation axis address. During interpolation of speed control The target speeds of each axis are stored in the monitor of the reference axis and interpolation axis. 	
	 During JOG operation The actual target speed, considering the JOG speed limit value for the JOG speed, is stored. During manual pulse generator operation: "0" is stored. 	
Md.34 Movement amount after near-point dog ON	 "0" is stored when machine OPR starts. After machine OPR starts, the movement amount from the near-point dog ON to the machine OPR completion is stored. (Movement amount: Movement amount to machine OPR completion using near-point dog ON as "0".) "0" is always stored when using the stopper method 1), 2), or 3). 	
Md.35 Torque limit stored value	The " Pr.17 Torque limit setting value" or " Cd.22 New torque value" is stored. • During positioning start, JOG operation start, manual pulse generator operationThe " Pr.17 Torque limit setting value" is stored. • When value other than 0 is set to " Cd.22 New torque value"The " Cd.22 New torque value" is stored.	

Storage item	Storage details	
Md.36 Special start data instruction code setting value	The " instruction code" used with special start and indicated by the start data pointer currently being executed is stored.	
Md.37 Special start data instruction parameter setting value	The " instruction parameter" used with special start and indicated by the start data pointer currently being executed is stored. The stored value differs according to the value set for Md.36.	
Md.38 Start positioning data No. setting value	The "positioning data No." indicated by the start data pointer currently being executed is stored.	
Md.39 In speed limit flag	 If the speed exceeds the " Pr.8 Speed limit value" due to a speed change or override, the speed limit functions, and the in speed limit flag turns ON. When the speed drops to less than " Pr.8 Speed limit value", or when the axis stops, the in speed limit flag turns OFF. 	
Md.40 In speed change processing flag	 The speed change process flag turns ON when the speed is changed during positioning control. After the speed change process is completed or when deceleration starts with the stop signal during the speed change process, the in speed change process flag turns OFF. 	

Storage item	Storage details	
Md.41 Special start repetition counter	 This area stores the remaining number of repetitions during "repetitions" specific to special starting. The count is decremented by one (-1) at the loop end. The control comes out of the loop when the count reaches "0". This area stores "0" within an infinite loop. 	
Md.42 Control system repetition counter	 This area stores the remaining number of repetitions during "repetitions" specific to control system. The count is decremented by one (-1) at the loop start. The loop is terminated with the positioning data of control method "LEND" after the counter becomes "0". 	
Md.43 Start data pointer being executed	 This area stores a point No. (1 to 50) attached to the start data currently being executed. This area stores "0" after completion of a positioning operation. 	
Md.44 Positioning data No. being executed	 This area stores a positioning data No. attached to the positioning data currently being executed. This area stores "0" after completion of a positioning operation. This area stores "0" when the JOG/inching operation is executed. 	
Md.45 Block No. being executed	 When the operation is controlled by "block start data", this area stores a block number (7000 to 7004) attached to the block currently being executed. At other times, this area stores "0". This area stores "0" after completion of a positioning operation. 	
Md.46 Last executed positioning data No.	 This area stores the positioning data No. attached to the positioning data that was executed last time. The value is retained until a new positioning operation is executed. This area stores "0" when the JOG/inching operation is executed. 	
Md.47 Positioning data being executed	The addresses shown to the right store details of the positioning data currently being executed (positioning data No. given by Md.44).	
Md.48 Deceleration start flag	 "1" is stored when the constant speed status or acceleration status switches to the deceleration status during position control whose operation pattern is "Positioning complete". "0" is stored at the next operation start or manual pulse generator operation enable. 	

Reading the monitor value							Default value	n	memory address				
							value	Axis 1	Axis 2	Axis 3	Axis 4		
Monitoring is carried out with a decimal display. Monitor value Monitor value O to 255								832	932	1032	1132		
I	Monitor	ing is ca	arried ou	ıt with a	hexadecimal display.								
		Monit	or value			Storage value 0 to FFFF	0000н	833	933	1033	1133		
-	Monitor	ing is ca	arried ou Monitor	T _e	decimal display. Storage 1 to 8		0	834	934	1034	1134		
-		nitor	arried ou	it with a	decimal display.	Storage value 1 to 600, 9001 to 9003	0	835	935	1035	1135		
I	Monitor	M	arried ou Ionitor	it with a		orage value 00 to 7004	0	836	936	1036	1136		
· ·		nitor	arried ou	it with a	decimal display.	●Storage value 1 to 600, 9001 to 9003	0	837	937	1037	1137		
			ed in the address Axis3		ng addresses: Stored item	Reference							
	838	938	1038	1138	Positioning identifier	Da.1 to Da.5							
	839	939	1039	1139	M code	Da.10							
	840	940	1040	1140	Dwell time	Da.9							
	841	941	1041	1141	Positioning option *1	Da.27 to Da.29		838	938	1038	1138		
	842	942	1042	1142	Command speed	Da.8	0	to 847	to 947	to 1047	to 1147		
	843	943	1043	1143									
	844 845	944 945	1044 1045	1144 1145	Positioning address	Da.6							
	846	945	1045	1146									
	847	947	1047	1147	T Arc address Da./	Da.7							
*1: If "0: Invalid" is set in "Pr.70 Positioning option valid/invalid setting", 0 is always stored.													
Monitoring is carried out with a decimal display. Storage value 0: Status other than below 1: Status from deceleration start to next operation start or manual pulse generator operation enable						leration ation ulse	0	899	999	1099	1199		

5.7 List of control data

5.7.1 System control data

Setting item	Setting details
Cd.1 Flash ROM write request	Requests writing of data (parameters, positioning data, and block start data) from the buffer memory to the flash ROM.
Cd.2 Parameter initialization request	Requests initialization of setting data. Initialization: Resetting of setting data to default values Note: After completing the initialization of setting data, reset the CPU module or reboot the programmable controller power. Initialized setting data Parameters (Pr.1 to Pr.57, Pr.150) Positioning data (No. 1 to No. 600) Block start data (No. 7000 to 7004)
Cd.41 Deceleration start flag valid	Set whether " Md.48 Deceleration start flag" is made valid or invalid.
Cd.42 Stop command processing for deceleration stop selection	Set the stop command processing for deceleration stop function (deceleration curve re-processing/deceleration curve continuation).

Setting item	Setting details	
Cd.43 Output timing selection of near pass control	• Select the timing to output the difference (\triangle ℓ) between the actual and the set positioning end addresses in continuous path control, in which the difference (\triangle ℓ) is output during the execution of the next positioning data.	

	Setting value	Default value	Storage buffer memory address (common to axes 1 to 4)
Set with a decimal. Setting value	 Output timing selection of near pass control O: At constant speed 1: At deceleration 	0	1934

5.7.2 Axis control data

Setting item	Setting details	
Cd.3 Positioning start No.	Set the positioning start No. (Only 1 to 600 for the Pre-reading start function. For details, refer to Section 12.7.7 "Pre-reading start function".)	
Cd.4 Positioning starting point No.	Set a " starting point No." (1 to 50) if block start data is used for positioning. (Handled as "1" if the value of other than 1 to 50 is set.)	
Cd.5 Axis error reset	 Clears the axis error detection, axis error No., axis warning detection and axis warning No. When the QD75 axis operation state is "Error", the error is cleared and the QD75 is returned to the "Standing" state. 	
Cd.6 Restart command	When positioning is stopped for any reason (when axis operation state is "Stopped"), set "1" in Cd.6. Positioning will be carried out again from the stopped position to the end point of the stopped positioning data.	
Cd.7 M code OFF request	The M code ON signal turns OFF.	

5

Setting item		Setting details					
Cd.8 External command valid	• Validates or in	Validates or in validates external command signals.					
	When changing item to specify Set a value with	a new feed valu	e.	the start No. "90	03", use this data		
Cd.9 New current value	Pr.1 Unit setting	mm (×10 ⁻¹ μm)	inch (×10 ⁻⁵ inch)	degree (×10 ⁻⁵ degree)	pulse (pulse)		
	Setting range	-2147483648 to +2147483647	-2147483648 to +2147483647	0 to 35999999	-2147483648 to +2147483647		

Setting value	Default		Storage nemory		
	value	Axis 1	Axis 2	Axis 3	Axis 4
Set with a decimal.					
Setting value External command valid 0: Invalidates an external command. 1: Validates an external command.	0	1505	1605	1705	1805
Set with a decimal. Actual value Cd.9 New current value					
Setting value (Decimal) Conversion into an integer value Unit conversion table (Cd.9) n Unit -1 -1 -5 inch -5 degree 0 pulse	0	1506 1507	1606 1607	1706 1707	1806 1807

Setting item	Setting details
Cd.10 New acceleration time value	When changing the acceleration time during a speed change, use this data item to specify a new acceleration time. Cd.10 setting range (unit) 0 to 8388608 (ms)
Cd.11 New deceleration time value	When changing the deceleration time during a speed change, use this data item to specify a new deceleration time. Cd.11 setting range (unit) 0 to 8388608 (ms)
Cd.12 Acceleration/deceleration time change during speed change, enable/disable selection	Enables or disables modifications to the acceleration/deceleration time during a speed change.

Storage buffer

memory address

Axis 1 Axis 2 Axis 3 Axis 4

1708

1709

1710

1711

1712

1808

1809

1810

1811

1812

1608

1609

1610

1611

1612

Default

value

0

0

0

1508

1509

1510

1511

1512

: Enables modifications to acceleration/deceleration time

acceleration/deceleration time

Other than 1: Disables modifications to

Setting item	Setting details				
Cd.13 Positioning operation speed override	Fo use the positioning operation speed override function, use this data item to specify an "override" value. * For details of the override function, refer to Section 12.5.2" Override function". If the speed becomes lower than the minimum unit due to override 1% or others, it is raised to the minimum unit. At this time, the warning "Less than minimum speed" (warning code: 110) will occur.				
Cd.14 New speed value	When changing the speed, use this data item to specify a new speed. The operation halts if you specify "0". Pr.1 mm inch degree pulse (pulse/s) Unit setting (×10 ⁻² mm/min) (×10 ⁻³ inch/min) (×10 ⁻³ degree/min) Setting 0 to 0 to 0 to 0 to 4000000 [QD75P□N/QD75D□N] range 2000000000 2000000000 [QD75P□/QD75D□] 0 to 10000000				
Cd.15 Speed change request	After setting the " Cd.14 New speed value", set this data item to "1" to execute the speed change (through validating the new speed value).				

Setting item	Setting details
Cd.16 Inching movement amount	Use this data item to set the amount of movement by inching. The machine performs a JOG operation if "0" is set. Set a value within the following range: Pr.1 mm inch degree pulse (x10 ⁻¹ µm) (x10 ⁻⁵ inch) (x10 ⁻⁵ degree) (pulse) Setting range 0 to 65535 0 to 65535 0 to 65535
Cd.17 JOG speed	Use this data item to set the JOG speed. Set a value within the following range: Pr.1
Cd.18 Continuous operation interrupt request	To interrupt a continuous operation, set "1" to this data item. After processing the interruption request ("1"), the QD75 automatically resets the value to "0".

Setting item	Setting details	
Cd.19 OPR request flag OFF request	The sequence program can use this data item to forcibly turn the OPR request flag from ON to OFF.	
Cd.20 Manual pulse generator 1 pulse input magnification	This data item determines the factor by which the number of pulses from the manual pulse generator is magnified. Value "1001" or higher: read as "1000". (QD75P□N/QD75D□N) Value "101" or higher: read as "100". (QD75P□/QD75D□)	
Cd.21 Manual pulse generator enable flag	This data item enables or disables operations using a manual pulse generator.	
Cd.22 New torque value	 When changing the " Md.35 Torque limit stored value", use this data item to specify a new torque limit stored value. Set a value within the allowable range of the " Pr.17 Torque limit setting value". 	

Setting value	Default	Storage buffer memory address			
<u> </u>	value	Axis 1	Axis 2	Axis 3	Axis 4
Set with a decimal. Setting value OPR request flag OFF request 1: Turns the "OPR request flag" from ON to OFF. The QD75 resets the value to "0" automatically when the OPR request flag is turned OFF. (This indicates the completion of OPR request flag OFF request.)	0	1521	1621	1721	1821
Setting value K Manual pulse generator 1 pulse input magnification 1 to 1000 (QD75P□N/QD75D□N) 1 to 100 (QD75P□/QD75D)	1	1522 1523	1622 1623	1722 1723	1822 1823
Set with a decimal. Setting value Manual pulse generator enable flag 0: Disable manual pulse generator operation. 1: Enable manual pulse generator operation.	0	1524	1624	1724	1824
Set with a decimal. Setting value K New torque value 1 to Pr.17: Torque limit setting value 0 : Torque value is not changed	0	1525	1625	1725	1825

Setting item	Setting details
Cd.23 Speed-position switching control movement amount change register	 During the speed control stage of the speed-position switching control (INC mode), it is possible to change the specification of the movement amount during the position control stage. For that, use this data item to specify a new movement amount. The new movement amount has to be set during the speed control stage of the speed-position switching control (INC mode). The value is reset to "0" when the next operation starts. Set a value within the following range: Pr.1 mm inch degree pulse (x10⁻⁵ inch) (x10⁻⁵ degree) (pulse) Setting range 0 to 0 to 0 to 0 to 0 to 2147483647 2147483647 2147483647
Cd.24 Speed-position switching enable flag	Set whether the external control signal (external command signal [CHG]: "speed-position, position-speed switching request" is selected) is enabled or not.
Cd.25 Position-speed switching control speed change register	During the position control stage of the position-speed switching control, it is possible to change the specification of the speed during the speed control stage. For that, use this data item to specify a new speed. The new speed has to be set during the position control stage of the position-speed switching control. The value is reset to "0" when the next operation starts. Set a value within the following range: Pr.1 mm inch degree pulse (v10-3 inch/min) (v10-3 degree/min) (pulse/s) Setting 0 to 0 to 0 to 0 to 40000000 range 20000000000 20000000000 [QD75P□N/QD75D□N] 0 to 10000000

Setting item		Setting details						
Cd.26 Position-speed switching enable flag		let whether the external control signal (external command signal [CHG]: "speedosition, position-speed switching request" is selected) is enabled or not.						
 When changing the target position during a positioning operation, use this data item to specify a new positioning address. Set a value within the following range: 					on, use this data			
	Pr.1	mn (×10 ⁻¹		inch ×10 ⁻⁵ inch)	degree (×10 ⁻⁵ degree	pulse (pulse)		
Cd.27 Target position change value (New address)	ABS	-214748 to +21474	33648 -2	2147483648 to -2147483647	0 to 3599999	-2147483648		
	INC	-214748 to +21474	5	2147483648 to -2147483647	-2147483648 to +214748364	to		
	item to speci • The speed w	When changing the target position during a positioning operation, use this data item to specify a new speed. The speed will not change if "0" is set. Set a value within the following range:						
Cd.28 Target position change value (New speed)	Pr.1 Unit setting (×1			nch degree inch/min) (×10 ⁻³ degree/min)		pulse (pulse/s)		
(New opeca)	Setting	0 to	0 to 20000000	0	[QD	75P□N/QD75D□N] 0 to 4000000 D75P□/QD75D□] 0 to 1000000		
Cd.29 Target position change request flag	• Requests the							

Setting item	Setting details
Cd.30 Simultaneous starting axis start data No. (axis 1 start data No.)	
Cd.31 Simultaneous starting axis start data No. (axis 2 start data No.)	Use these data items to specify a start data No. for each axis that has to start simultaneously.
Cd.32 Simultaneous starting axis start data No. (axis 3 start data No.)	Set "0" to any axis that should not start simultaneously.
Cd.33 Simultaneous starting axis start data No. (axis 4 start data No.)	
Cd.34 Step mode	To perform a step operation, use this data item to specify the units by which the stepping should be performed.
Cd.35 Step valid flag	This data item validates or invalidates step operations.

Setting value	Default	Storage buffer memory address				
•	value	Axis 1	Axis 2	Axis 3	Axis 4	
	0	1540	1640	1740	1840	
Set with a decimal. Setting value	0	1541	1641	1741	1841	
Cd.30 to Cd.33 Simultaneous starting axis start data No.: 1 to 600	0	1542	1642	1742	1842	
	0	1543	1643	1743	1843	
Set with a decimal.						
Setting value K Step mode 0: Stepping by deceleration units 1: Stepping by data No. units	0	1544	1644	1744	1844	
Set with a decimal.						
Setting value Step valid flag 0: Invalidates step operations 1: Validates step operations	0	1545	1645	1745	1845	

Setting item	Setting details	
Cd.36 Step start information	To continue the step operation when the step function is used, set "1" in this data item.	
Cd.37 Skip command	To skip the current positioning operation, set "1" in this data item.	
Cd.38 Teaching data selection	 This data item specifies the teaching result write destination. Data are cleared to "0" when the teaching ends. 	
Cd.39 Teaching positioning data No.	 This data item specifies data to be produced by teaching. If a value between 1 and 600 is set, a teaching operation is done. The value is cleared to "0" when the QD75 is initialized, when a teaching operation completes, and when an illegal value (601 or higher) is entered. 	
Cd.40 ABS direction in degrees	This data item specifies the ABS moving direction carrying out the position control when "degree" is selected as the unit.	

Setting value	Default	Storage buffer memory address			
	value	Axis 1	Axis 2	Axis 3	Axis 4
Setting value Step start information 1: Continues step operation The QD75 resets the value to "0" automatically when processing of the step start request completes.	0	1546	1646	1746	1846
Setting value Skip request 1: Issues a skip request to have the machine decelerate, stop, and then start the next positioning operation. The QD75 resets the value to "0" automatically when processing of the skip request completes.	0	1547	1647	1747	1847
Set with a decimal. Setting value Teaching data selection 0: Takes the current feed value as a positioning address. 1: Takes the current feed value as an arc data.	0	1548	1648	1748	1848
Set with a decimal. Setting value K Teaching positioning data No. 1 to 600	0	1549	1649	1749	1849
Set with a decimal. Setting value ABS direction in degrees 0: Shortcut (direction setting ignored) 1: ABS clockwise 2: ABS counterclockwise	0	1550	1650	1750	1850

CHAPTER 6 SEQUENCE PROGRAM USED FOR POSITIONING CONTROL

The programs required to carry out positioning control with the QD75 are explained in this chapter.

The program required for control is created allowing for the "start conditions", "start time chart", "device settings" and general control configuration.

(The parameters, positioning data, block start data and condition data, etc., must be set in the QD75 according to the control to be executed, and program for setting the control data or a program for starting the various control must be created.)

The first half of this chapter explains the program configuration of general control, and the latter half explains the program details. Create the required program while referring to the various control details explained in PART 2, and to CHAPTER 5 "DATA USED FOR POSITIONING CONTROL".

6.1	Precau	tions for creating program	6- 2						
6.2	List of devices used								
6.3	Creatin	g a program	6- 11						
		General configuration of program							
		Positioning control operation program							
6.4		ning program examples							
		n details							
	_	Initialization program							
	6.5.2	Start details setting program	. 6- 26						
	6.5.3	Start program							
	6.5.4	Continuous operation interrupt program	. 6- 38						
	6.5.5	Restart program							
	6.5.6	Stop program	. 6- 44						

6.1 Precautions for creating program

The common precautions to be taken when writing data from the CPU module to the QD75 buffer memory are described below.

When diverting any of the program examples introduced in this manual to the actual system, fully verify that there are no problems in the controllability of the target system.

(1) Reading/writing the data

Setting the data explained in this chapter (various parameters, positioning data, block start data) should be set using GX Configurator-QP.

When set with the sequence program, many sequence programs and devices must be used. This will not only complicate the program, but will also increase the scan time.

When rewriting the positioning data during continuous path control or continuous positioning control, rewrite the data four positioning data items before the actual execution. If the positioning data is not rewritten before the positioning data four items earlier is executed, the process will be carried out as if the data was not rewritten.

(2) Restrictions to speed change execution interval

Provide an interval of 100ms or more when changing the speed or performing override function with the QD75.

(3) Process during overrun

Overrun is prevented by the setting of the upper and lower stroke limits with the detail parameter 1.


However, this applies only when the QD75 is operating correctly.

It is recommended to create an external circuit including a boundary limit switch to ensure the whole system safety as follows: the external circuit powers OFF the motor when the boundary limit switch operates.

(4) System configuration

Unless particularly designated, the sequence program for the following system is shown in this chapter and subsequent. In the program, the unit of "0 (mm)" is set for the basic parameter 1.

Refer to Section 6.2 for the application of the devices to be used.

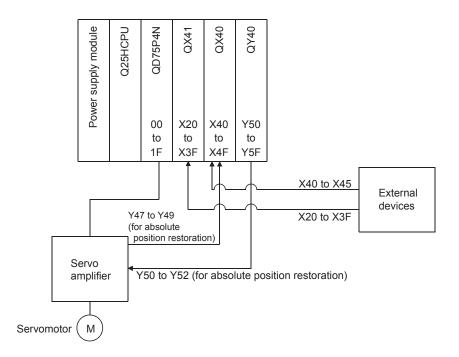


(5) Communication with QD75

There are two methods for communication with QD75 using the sequence program: a method using an "intelligent function device" and a method using a FROM/TO instruction.


In the sequence program in this chapter and subsequent, the program example using the "intelligent function device" is shown without using a FROM/TO instruction for communication with QD75.

When using the FROM/TO instruction for communication with QD75, change the circuit incorporating the "intelligent function device" as follows.


(a) When the circuit uses the "intelligent function device" on the destination (D) side of a MOV instruction, change the instruction to a TO instruction.

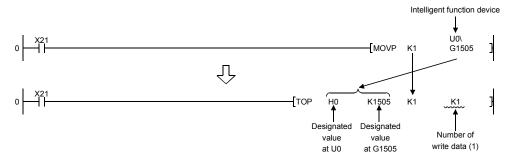


(b) When the circuit uses the "intelligent function device" on the source(s) side and the destination (D) side of a MOV instruction, change the instruction to a FROM instruction and a TO instruction.

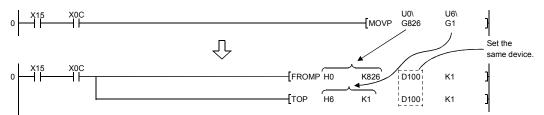

(c) When the circuit uses the "intelligent function device" for a COMPARISON instruction, change the instruction to a FROM instruction and a COMPARISON instruction.

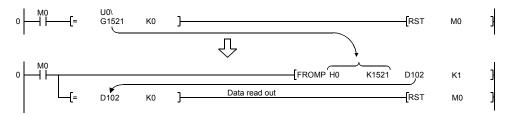

(d) When the circuit uses the "intelligent function device" for a WAND instruction, change the instruction to a FROM instruction and a WAND instruction.

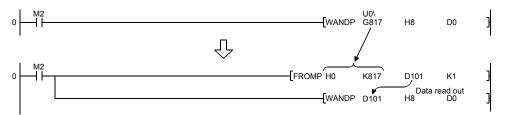

REMARK

Refer to QCPU (Q mode) User's Manual (Functions and Programs Basic Part) for the intelligent function devices.

Refer to QCPU (Q mode) Programming Manual (Common Commands Part) for detail commands used in those programs shown in this chapter and subsequent.

6.2 List of devices used

In the sequence programs shown in this chapter and subsequent, the application of the devices used are as follows.

The I/O numbers for QD75 indicate those when QD75 is mounted in the 0-slot of the main base.

If it is mounted in the slot other than the 0-slot of the main base, change the I/O number to that for the position where QD75 was installed.

In addition, change the external inputs, external outputs, internal relays, data resisters, and timers according to the system used.

Inputs/outputs, external inputs/external outputs, and internal relays of QD75

Device Device													
Dev nar		Δyis 1	Axis 2		Ayis 4	Application	Details when ON						
		7000 1	7 0.10 Z		7000 1	QD75 READY signal	Preparation completed						
			X			Synchronization flag	QD75 buffer memory accessible						
		X4	X5	X6	X7	M code ON signal	M code outputting						
	Input	X8	X9 XA 2		XB	Error detection signal	Error detected						
	·	XC			XF	BUSY signal	BUSY (operating)						
Inputs/ outputs		X10	X11	X12	X13	Start complete signal	Start completed						
of		X14	X15	X16	X17	Positioning complete signal	Positioning completed						
QD75			Y	0		PLC READY signal	CPU module preparation completed						
		Y4	Y5	Y6	Y7	Axis stop signal	Requesting stop						
	Out- put	Y8	YA	YC	YE	Forward run JOG start signal	Starting forward run JOG						
	put	Y9	YB	YD	YF	Reverse run JOG start signal	Starting reverse run JOG						
		Y10	Y11 Y12 Y13			Positioning start signal	Requesting start						
		X20				OPR request OFF command	Commanding OPR request OFF						
		X21				External command valid command	Commanding external command valid setting						
		X22					External command invalid command invalid		Commanding external command invalid				
		X23			Machine OPR command Comma		Commanding machine OPR						
		X24		Fas		Fast OPR command	Commanding fast OPR						
		X25	– .			Positioning start command	Commanding positioning start						
Exte inp		X26				_			_			Speed-position switching operation command	Commanding speed-position switching operation
(comn		X27							Speed-position switching enable command	Commanding speed-position switching enable command			
		X28				Speed-position switching prohibit command	Commanding speed-position switching prohibit						
		X29				Movement amount change command	Commanding movement amount change						
		X2A				High-level positioning control start command	Commanding high-level positioning control start						
		X2B				Positioning start command (dedicated instruction)	Commanding positioning start						

Device		Dev	/ice		Application	Deteile when ON									
name	Axis 1	Axis 2	Axis 3	Axis 4	Application	Details when ON									
	X2C				M code OFF command	Commanding M code OFF									
	X2D										JOG operation command			JOG operation speed setting command	Commanding JOG operation speed setting
	X2E				Forward run JOG/inching command	Commanding forward run JOG/inching operation									
	X2F				Reverse run JOG/inching command	Commanding reverse run JOG/inching operation									
	X30				Manual pulse generator operation enable command	Commanding manual pulse generator operation enable									
	X31				Manual pulse generator operation disable command	Commanding manual pulse generator operation disable									
	X32				Speed change command	Commanding speed change									
	X33				Override command	Commanding override									
	X34				Acceleration/deceleration time change command	Commanding acceleration/deceleration time change									
	X35				Acceleration/deceleration time change disable command	Commanding acceleration/deceleration time change disable									
	X37				Step operation command	Commanding step operation									
	X38	Skip operation command (Commanding skip operation									
External	X39	_						Teaching command	Commanding teaching						
input (command)	ХЗА				Continuous operation interrupt command	Commanding continuous operation interrupt command									
	X3B				Restart command	Commanding restart									
		X3	BC		Parameter initialization command	Commanding parameter initialization									
		X3	BD .		Flash ROM write command	Commanding flash ROM write									
	X3E				Error reset command	Commanding error reset									
	X3F				Stop command	Commanding stop									
	X40							Position-speed switching operation command	Commanding position-speed switching operation						
	X41				Position-speed switching enable command	Commanding position-speed switching enable									
	X42	_	_			Position-speed switching prohibit command	Commanding position-speed switching prohibit								
	X43				Speed change command	Commanding speed change									
	X44				Inching movement amount setting command	Commanding inching movement amount setting									
	X45				Target position change command	Commanding target position change									
	X4D				Speed-position switching control (ABS mode) setting command	Commanding speed-position switching control (ABS mode) setting									
	X4E				Positioning start command (Y start)	Positioning start command being given									
External input	X47				ABS data bit 0	_									
(absolute	X48		_		ABS data bit 1	_									
position restoration)	X49				Transmission data READY flag	_									
External	Y50				Servo ON signal	_									
output (absolute position	Y51 — ABS transmission mode				_										
restoration)	Y52	52			ABS request mode	_									

Device		Dev	vice			5					
name	Axis 1		Axis 3	Axis 4	Application	Details when ON					
	M0				OPR request OFF command	Commanding OPR request OFF					
	M1]			OPR request OFF command pulse	OPR request OFF commanded					
	M2				OPR request OFF command storage	OPR request OFF command held					
	М3				Fast OPR command	Commanding fast OPR					
	M4				Fast OPR command storage	Fast OPR command held					
	M5				Positioning start command pulse	Positioning start commanded					
	M6				Positioning start command storage	Positioning start command held					
	M7				In-JOG/Inching operation flag	Operating JOG/Inching					
	M8				Manual pulse generator operation enable command	Commanding manual pulse generator operation enable					
	M9				Manual pulse generator operating flag	Operating manual pulse generator					
	M10				Manual pulse generator operation disable command	Commanding manual pulse generator operation disable					
	M11		_		Speed change command pulse	Speed change commanded					
	M12				Speed change command storage	Speed change command held					
	M13				Override command	Requesting override					
	M14				Acceleration/deceleration time change command Step operation command pulse Skip command pulse Skip command storage Teaching command pulse Teaching command storage Continuous operation interrupt command				Requesting acceleration/deceleration time change		
	M16							Step operation command pulse	Step operation commanded		
	M17							Skip command pulse	Skip commanded		
lesta en al mala.	M18			Skip command storage				Skip command held			
Internal relay	M19							Teaching command pulse	Teaching commanded		
	M20							Teaching command storage	Teaching command held		
	M21							I	Requesting continuous operation interrupt		
	M22				Restart command	Requesting restart					
	M23				Restart command storage	Restart command held					
		M24			Parameter initialization command pulse	Parameter initialization commanded					
		M	25		Parameter initialization command storage	Parameter initialization command held					
		M	26		Flash ROM write command pulse	Flash ROM write commanded					
		M	27		Flash ROM write command storage	Flash ROM write command held					
	M28				Error reset	Error reset completed					
	M29				Stop command pulse	Stop commanded					
	M30		Target position chang		Target position change command pulse	Target position change commanded					
	M31		_		Target position change command storage	Target position change command held					
	M32	2			ZP.PSTRT1 instruction complete device	ZP.PSTRT1 instruction completed					
	M33				ZP.PSTRT1 instruction error failure device	ZP.PSTRT1 instruction failed					

Device		Dev	vice		Amplication	Dataile when ON		
name	Axis 1	Axis 2 Axis 3 Axis 4			Application	Details when ON		
	M34				ZP.TEACH1 instruction complete device	ZP.TEACH1 instruction completed		
	M35				ZP.TEACH1 instruction failure device	ZP.TEACH1 instruction failed		
	M36				ZP.PINIT instruction complete device	ZP.PINIT instruction completed		
	M37				ZP.PINIT instruction failure device	ZP.PINIT instruction failed		
	M38				ZP.PFWRT instruction complete device	ZP.PFWRT instruction completed		
	M39			_	ZP.PFWRT instruction failure device	ZP.PFWRT instruction failed		
Internal relay	M40		_		Absolute position restoration instruction pulse	Absolute position restoration commanded		
	M41				Absolute position restoration instruction storage	Absolute position restoration instruction held		
	M42				Z.ABRST instruction complete device	Z.ABRST instruction completed		
	M43				Z.ABRST instruction failure device	Z.ABRST instruction failed		
	M50				Basic parameter 1 setting completed			
	M51				OPR basic parameter setting complete device	OPR basic parameter setting completed		

(2) Data resisters and timers

Device		Dev	/ice		Application		Dataila of starons	
name	Axis 1	Axis 2	Axis 3	Axis 4	Application		Details of storage	
	D0				OPR request flag	(Md.31	Status (bit 3))	
	D1				Speed (low-order 16 bits)	(Cd.25	Position-speed switching	
	D2				Speed (high-order 16 bits)	control s	peed change resister)	
	D3				Movement amount (low-order 16 bits)		Speed-position switching	
	D4				Movement amount (high-order 16 bits)	control m resister)	novement amount change	
	D5				Inching movement amount	(Cd.16	Inching movement amount)	
	D6				JOG operation speed (low-order 16 bits)			
	D7	_	_		JOG operation speed (high-order 16 bits)	(Cd.17	JOG operation speed)	
Data register	D8			Manual pulse generator 1 pulse input magnification (low-order)	(Cd.20 Manual pulse generator			
	D9					Manual pulse generator 1 pulse input magnification (high-order)	pulse input magnification)	
	D10				Manual pulse generator operation enable	(Cd.21 enable fl	. •	
	D11				Speed change value (low-order 16 bits)	(Cd 14	New speed value)	
	D12				Speed change value (high-order 16 bits)	(Cu. 14	New speed value)	
	D13				Speed change request	(Cd.15	Speed change request)	
	D14				Override value	(Cd.13) speed ov	Positioning operation verride)	

Device		Dev	vice			5.11.6.
name	Axis 1	Axis 2	Axis 3	Axis 4	Application	Details of storage
	D15				Acceleration time setting (low-order 16 bits)	(Cd 40) Now accoloration time
	D46				Acceleration time setting	(Cd.10 New acceleration time value)
	D16				(high-order 16 bits)	,
	D17				Deceleration time setting (low-order 16 bits)	(Cd.11 New deceleration time
	D18				Deceleration time setting	value)
					(high-order 16 bits)	(Cd.12 Acceleration/deceleration
	D19				Acceleration/deceleration time change enable	time change during speed change,
						enable/disable selection)
	D20				Step mode	(Cd.34 Step mode)
	D21				Step valid flag	(Cd.35 Step valid flag)
	D22				Unused	
	D23				Target position (low-order 16 bits)	(Cd.27 Target position change value (new address))
	D24				Target position (high-order 16 bits)	
	D25 D26				Target speed (low-order 16 bits) Target speed (high-order 16 bits)	(Cd.28 Target position change value (new speed))
					, , , , , , , , , , , , , , , , , , , ,	(Cd.29 Target position change
	D27				Target position change request	request flag)
	D28				Unused	_
	D29				Unused	_
	D30				ZP.PSTRT1 instruction control data	_
	D31				Completion status	_
Data register	D32		_		Start number	_
	D33				ZP.TEACH1 instruction control data	_
	D34				Completion status	_
	D35				Teaching data	_
	D36				Positioning data No.	_
	D37				ZP.PINIT instruction control data	_
	D38				Completion status	_
	D39				ZP.PFWRT instruction control data	_
	D40				Completion status	_
	D41				Z.ABRST1 control data	_
	D42 D43				Completion status	_
					Signals received from servo	_
	D44 D45				Signals transmitted to servo Status	_
	D45				System area	_
	D47				System area	_
	D48				System area	_
	D49				Error code	Error code at absolute position restoration
	D79	1			Error code	(Md.23 Axis error No.)
	D50				Unit setting	(Pr.1 Unit setting)
	D51				No. of pulses per rotation	(Pr.2 No. of pulses per rotation)
	וכם				140. Of pulses per rotation	([1 1.2] No. or puises per rotation)


Device name	Axis 1	Device Axis 2 Axis 3 Axis 4		Applio	cation		Details of storage
	D52		Мо	vement amount p	er rotation	(Pr.3 rotation	Movement amount per
	D53		Uni	t magnification		(Pr.4	Unit magnification)
	D54		Pul	se output mode		(Pr.5	Pulse output mode)
	D55		Ro	ation direction se	tting	(Pr.6	Rotation direction setting)
	D56		Bia	s speed at start (I	ow-order 16 bits)	(D-7)	Discounded at atom)
	D57		Bia	s speed at start (h	nigh-order 16 bits)	(Pr.7	Bias speed at start)
	D200		OP	R method		(Pr.43	· · · · · · · · · · · · · · · · · · ·
	D201			R direction		(Pr.44	OPR direction)
	D202 D203			address (low-ord		(Pr.45	OP address)
	D203			address (high-ord	•		
	D205			R speed (high-ord	•	(Pr.46	OPR speed)
	D206			ep speed (low-or	·	(Pr.47	Croop apood)
	D207		Cre	ep speed (high-o	rder 16 bits)	(F1.47	Creep speed)
	D208		OP	R retry		(Pr.48	• • • • • • • • • • • • • • • • • • • •
						(Da.1	Operation pattern)
	D58			Positioning identifier		(Da.2) (Da.3)	Control system) Acceleration time No.)
						(Da.4	Deceleration time No.)
		_					Axis to be interpolated)
Data register	D59			M code		(Da.10	M code)
	D60		10.1	Dwell time		(Da.9	Dwell time)
			Positioning data No.1	Positioning option		(Da.27 timing)	M code ON signal output
	D61		b gc				ABS direction in degrees)
			ionii				Interpolation speed
	D62		Posi	Command anges	I (low-order 16 bits)	designa	ation method)
	D63		_	·	I (high-order 16 bits)	(Da.8	Command speed)
	D64			Positioning	(low-order 16 bits)		
	D65			address/ movement	(high-order 16 bits)		Positioning s/movement amount)
				amount	,	aaa.oo	
	D66 D67			Arc address	(low-order 16 bits) (high-order 16 bits)	(Da.7	Arc address)
	D68			Point 1 (shape, s			
	D69		(0	Point 2 (shape, s			
	D70		(Block (Point 3 (shape, s			
	D71	- - -		Point 4 (shape, s	•		Shape)
	D72		data	Point 5 (shape, s	·	(Da.12	=
	D73 D74		Point 5 (shape, start No.) Point 1 (special start instruction) Point 2 (special start instruction)		(Da.13 (Da.14	S Special start instruction) Parameter)	
	D75	_		Point 3 (special s		(LDa. 14	
	D76		Block	Point 4 (special start instruction)			
	D77			Point 5 (special s			
Timer	T0 T1	_		C READY signal (PLC RI	EADY signal OFF
	1.1		LT.	C READY signal (OLL COUIILIUGIIOU		-

6.3 Creating a program

The "positioning control operation program" actually used is explained in this chapter. The functions and programs explained in PART 2 are assembled into the "positioning control operation program" explained here. (To monitor the control, add the required monitor program that matches the system. Refer to Section 5.6 "List of monitor data" for details on the monitor items.)


6.3.1 General configuration of program


The general configuration of the "positioning control operation program" is shown below.

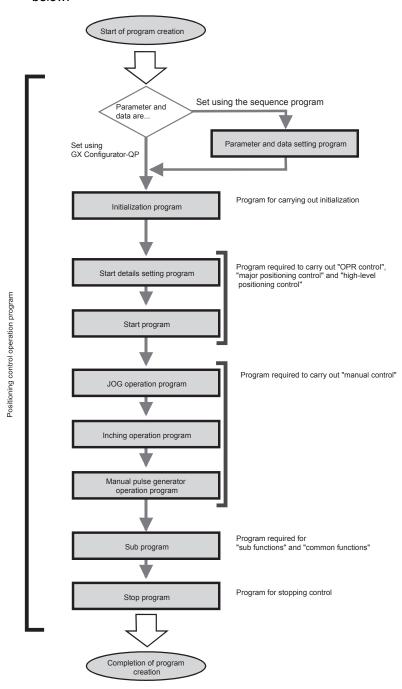


6.3.2 Positioning control operation program

The various programs that configure the "positioning control operation program" are shown below. When creating the program, refer to the explanation of each program and Section 6.4 "Positioning program examples", and create an operation program that matches the positioning system. (Numbers are assigned to the following programs. Configuring the program in the order of these numbers is recommended.)

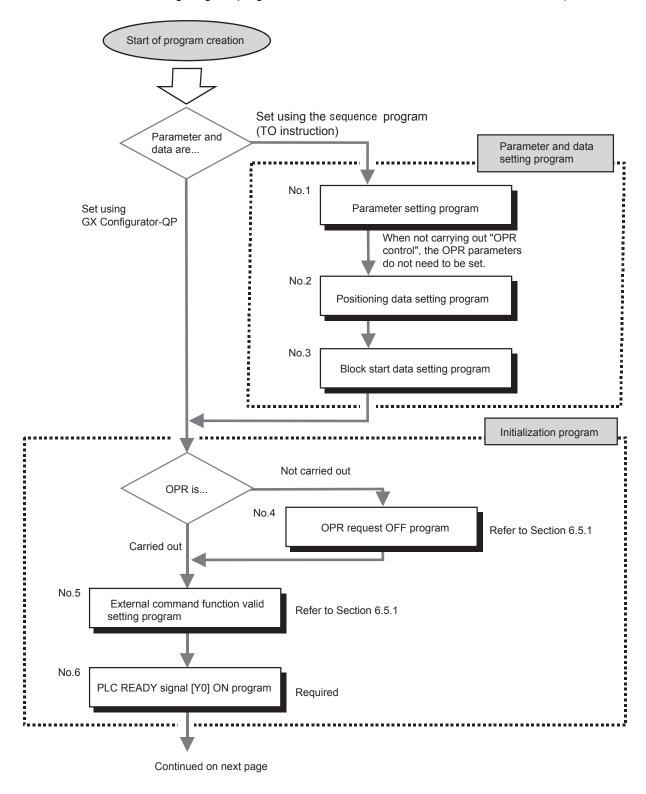

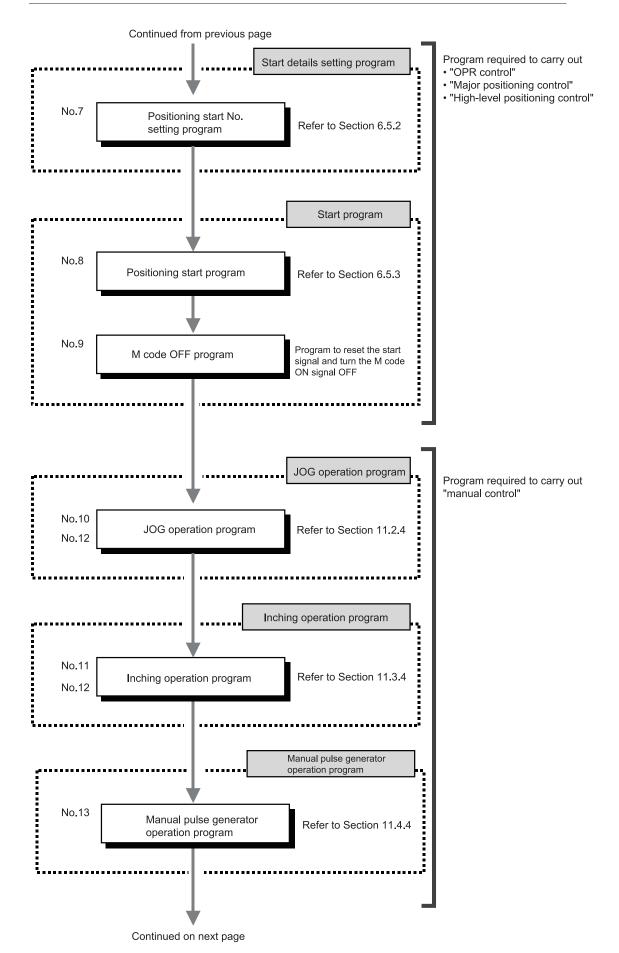


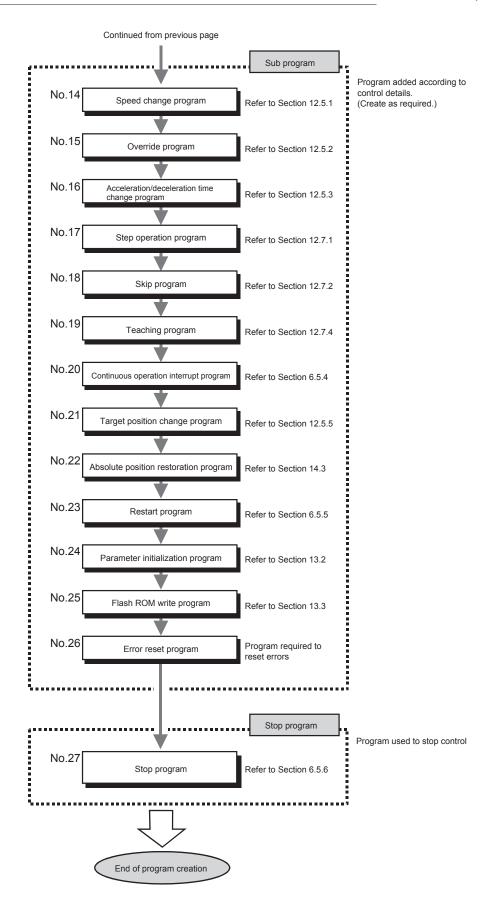



6.4 Positioning program examples

An example of the "Axis 1" positioning program is given in this section.


- ---- [No. 1] to [No. 3] parameter and data setting program
- * When setting the parameters or data with the sequence program, set them in the QD75 using the TO instruction from the CPU module. (Carry out the settings while the PLC READY signal [Y0] is OFF.)
- * When setting the parameters or data with GX Configurator-QP, the [No. 1] to [No. 3] program is not necessary.

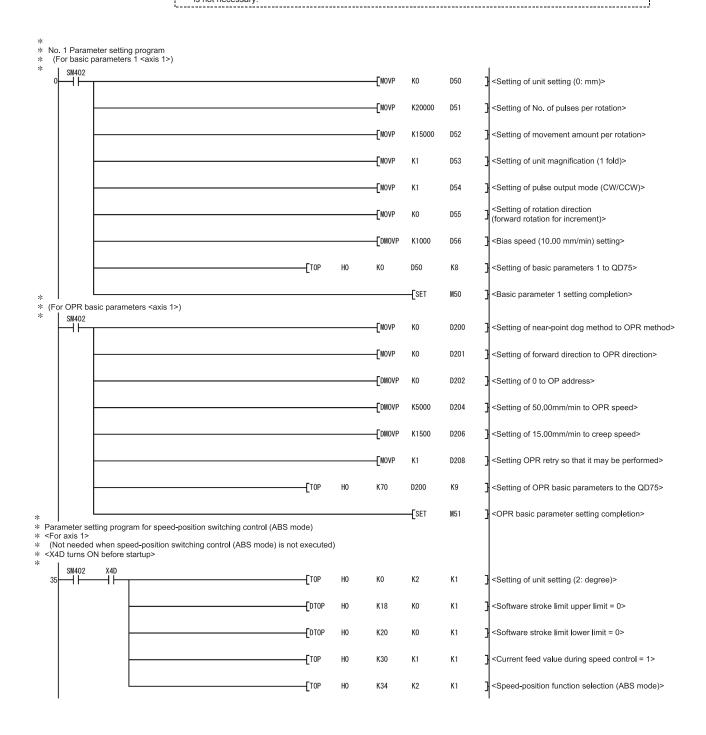


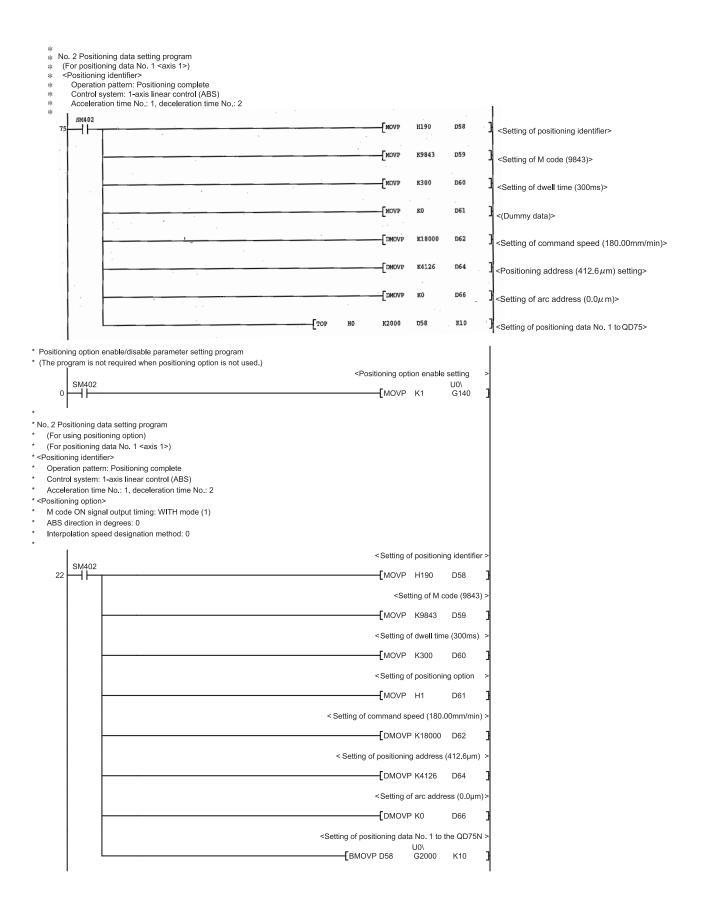


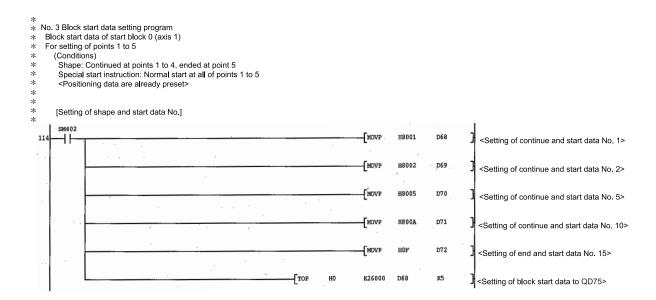



* [Setting of special start instruction to normal start]

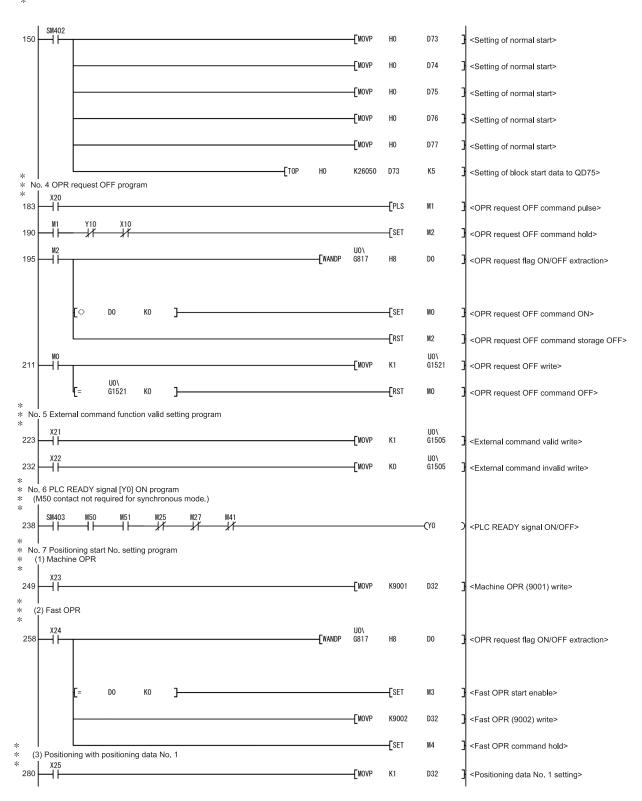

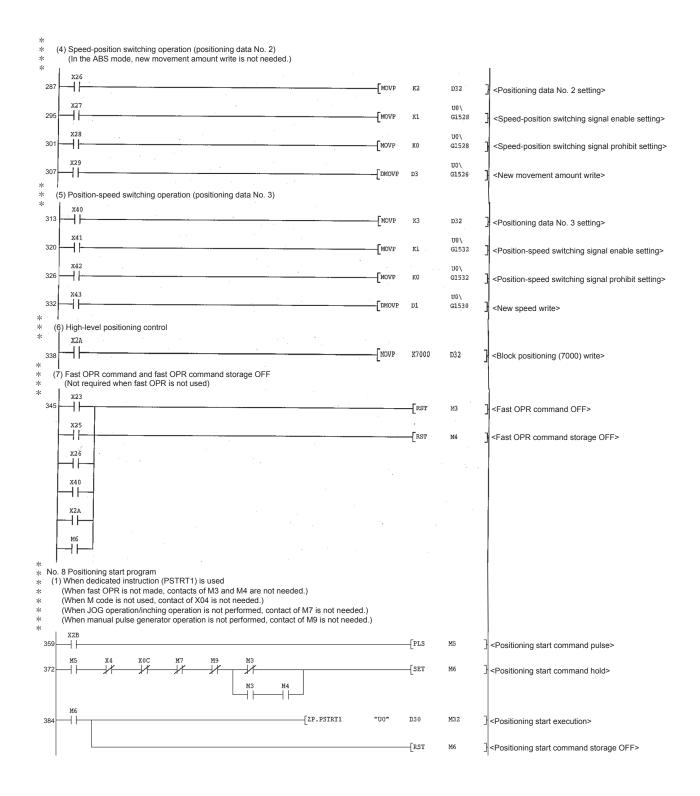

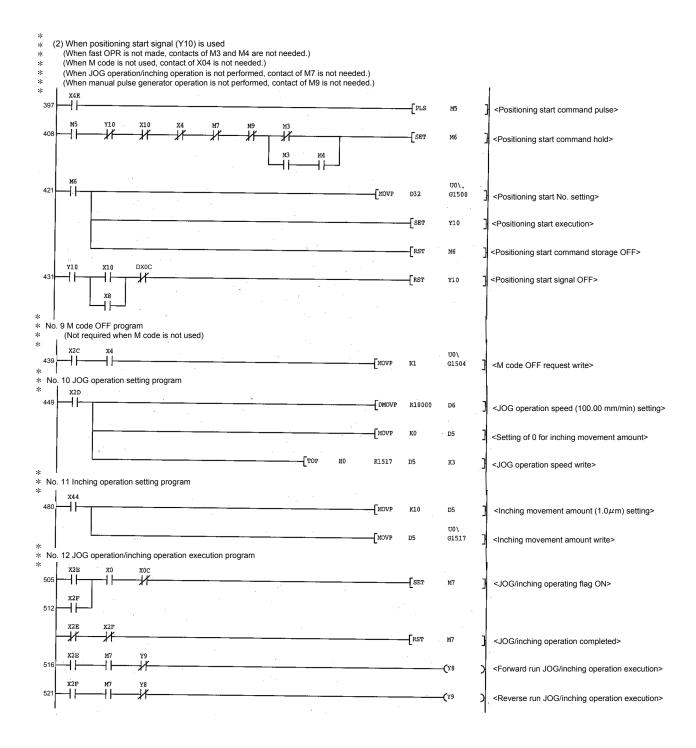

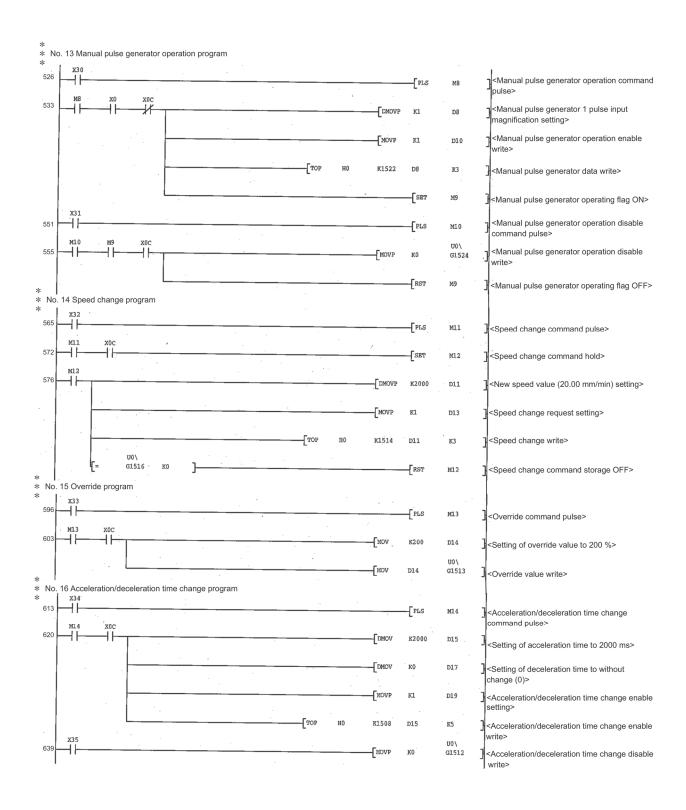

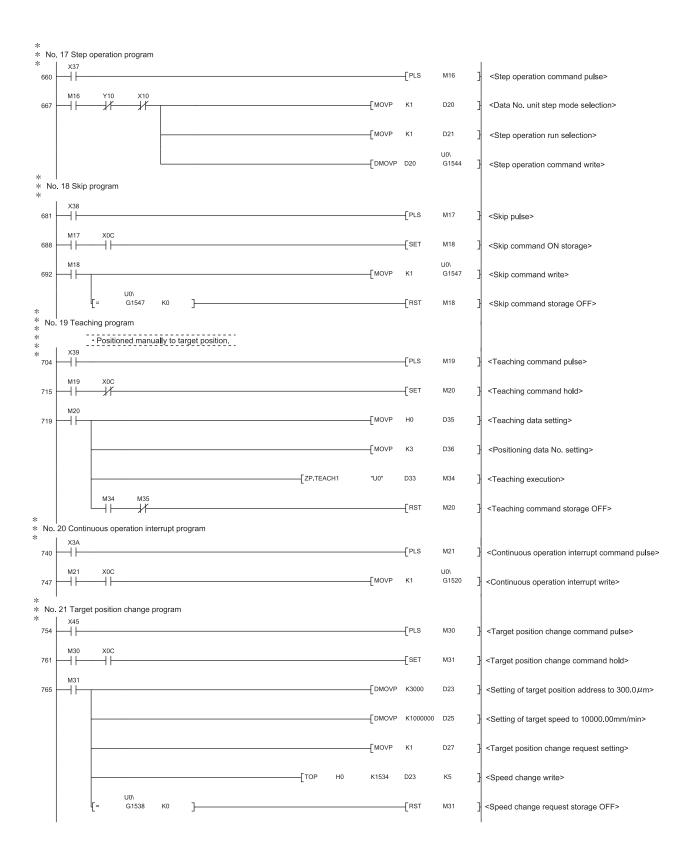

ZP.PINIT

"U0"

D37

-FRST

M36

M25

<Parameter initialization execution>

<Parameter initialization command storage OFF>

896

M37

6.5 Program details

6.5.1 Initialization program

[1] OPR request OFF program

This program forcibly turns OFF the "OPR request flag" (Md.31 Status : b3) which is ON.

When using a system that does not require OPR, assemble the program to cancel the "OPR request" made by the QD75 when the power is turned ON, etc.

■ Data requiring setting

Set the following data to use the OPR request flag OFF request.

Setting item		Setting	. Setting details		Buffer memory address				
		value			Axis 2	Axis 3	Axis 4		
II Ca. 191	OPR request flag OFF request	1	Set to "1: Turn OPR request flag OFF".	1521	1621	1721	1821		

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

■ Time chart for OPR request OFF

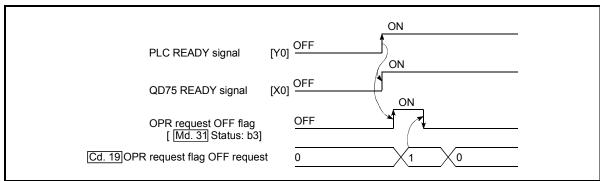


Fig. 6.1 Time chart for OPR request OFF

[2] External command function valid setting program

This program is used to validate the "external command signal" beforehand when using the external command functions (external start, speed change, speed-position switching, position-speed switching, skip). (Set which function to use beforehand in " Pr.42 External command function selection".)

Set the following data to validate the "external command signal".

Setting item	Setting	Cotting dataile	Buffer memory address			
	value Setting details	Axis 1	Axis 2	Axis 3	Axis 4	
Cd.8 External command valid	1	Set to "1: Validate external command".	1505	1605	1705	1805

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

6.5.2 Start details setting program

This program sets which control, out of "OPR", "major positioning control" or "high-level positioning control" to execute. For "high-level positioning control", "fast OPR", "speed-position switching control" and "position-speed switching control", add the respectively required sequence program.

(Refer to CHAPTER 10 for details on starting the "high-level positioning control.)

Procedures for setting the starting details

(1) Set the "positioning start No." corresponding to the control to be started in "Cd.3 Positioning start No.".

Sotting item	Setting		Setting details	Buffer memory address				
Setting item	value Setting details		Setting details	Axis 1	Axis 2	Axis 3	Axis 4	
Cd.3 Positioning start No.		1 to 600 9001 9002 9003 9004 7000 to 7004	 : Positioning data No. : Machine OPR : Fast OPR : Current value changing : Simultaneous start : Block No. (For "high-level positioning control") 	1500	1600	1700	1800	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

(2) For "high-level positioning control", set the "positioning start point No." of the block to be started in " Cd.4 Positioning starting point No.".

Setting item	Setting	Cotting details		Buffer memory address			
	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4	
Cd.4 Positioning starting point No.	\rightarrow	1 to 50 : Point No. of block start data	1501	1601	1701	1801	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

(3) Set the following control data for "speed-position switching control (INC mode)".

(Set " Cd.23 Speed-position switching control movement amount change register as required". Setting is not required in the ABS mode.)

Setting item		Setting	Catting dataile	Buffer memory address				
		value Setting details		Axis 1	Axis 2	Axis 3	Axis 4	
Cd.23	Speed-position switching control movement amount change register	\rightarrow	Set the new value when the position control's movement amount is to be changed during speed control.	1526 1527	1626 1627	1726 1727	1826 1827	
	Speed-position switching enable flag		When "1" is set, the speed-position switching signal will be validated.	1528	1628	1728	1828	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

(4) For "position-speed switching control", set the control data shown below. (As required, set the " Cd.25 Position-speed switching control speed change resister".)

	Satting itom		Cotting details	Buffer memory address				
Setting item		Selling details		Axis 1	Axis 2	Axis 3	Axis 4	
Cd.25	Position-speed switching control speed change resister	\rightarrow	Used to set a new value when speed is changed during positioning control.	1530 1531	1630 1631	1730 1731	1830 1831	
	Position-speed switching enable flag	1	To validate position-speed switching signal, this is set to 1.	1532	1632	1732	1832	

st Refer to Section 5.7 "List of control data" for details on the setting details.

6.5.3 Start program

This program is used to start the control with start commands.

The control can be started with the following two methods.

- [1] Starting by inputting positioning start signal [Y10, Y11, Y12, Y13]
- [2] Starting by inputting external command signal

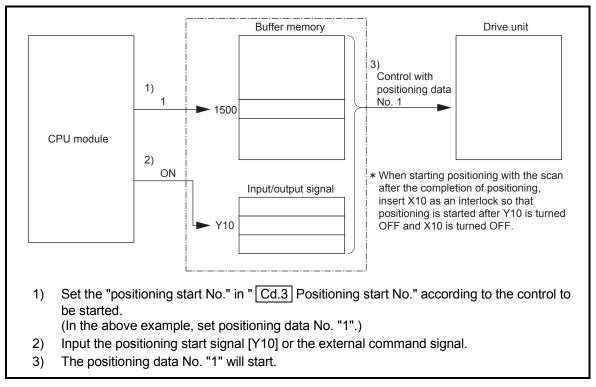


Fig. 6.2 Procedures for starting control (for axis 1)

Starting conditions

To start the control, the following conditions must be satisfied.

The necessary start conditions must be incorporated in the sequence program so that the control is not started when the conditions are not satisfied.

				Dovice				
	Signal name		Signal state	Device				
	olgilai Hamo		2.9		Axis 2	Axis 3	Axis 4	
	PLC READY signal	ON	CPU module preparation completed	Y0				
	QD75 READY signal	ON	QD75 preparation completed	X0				
Interface signal	Synchronization flag *	ON	QD75 buffer memory Accessible	X1				
	Axis stop signal	OFF	Axis stop signal is OFF.	Y4	Y5	Y6	Y7	
	M code ON signal	OFF	F M code ON signal is OFF.		X5	X6	X7	
	Error detection signal	OFF	No error is present.	X8	X9	XA	XB	
	BUSY signal	OFF	BUSY signal is OFF.	XC	XD	XE	XF	
	Start complete signal	OFF	Start complete signal is OFF.	X10	X11	X12	X13	
	Drive unit READY signal	ON	Drive unit preparation completed		-	-		
External	Stop signal	OFF	Stop signal is OFF.		-	-		
signal	Upper limit (FLS)	ON	Within limit range		-			
	Lower limit (RLS)	ON	Within limit range	_				

^{*:} When the synchronous setting of the CPU module is made in the nonsynchronous mode, this must be provided as an interlock.

When it is made in the synchronous mode, no interlock must be provided in the program because the flag is turned ON when calculation is run on the CPU module.

[1] Starting by inputting positioning start signal

Operation when starting

- (1) When the positioning start signal turns ON, the start complete signal and BUSY signal turn ON, and the positioning operation starts. It can be seen that the axis is operating when the BUSY signal is ON.
- (2) When the positioning start signal turns OFF, the start complete signal also turns OFF.
 - If the positioning start signal is ON even after positioning is completed, the start complete signal will remain ON.
- (3) If the positioning start signal turns ON again while the BUSY signal is ON, the warning "Start during operation" (warning code: 100) will occur.
- (4) The process taken when positioning is completed will differ according to case (a) and (b) below.
 - (a) When next positioning is not to be carried out
 - If a dwell time is set, the system will wait for the set time to pass, and then
 positioning will be completed.
 - When positioning is completed, the BUSY signal will turn OFF and the
 positioning complete signal will turn ON. However, when using speed
 control or when the positioning complete signal ON time is "0", the signal
 will not turn ON.
 - When the positioning complete signal ON time is passed, the positioning complete signal will turn OFF.
 - (b) When next positioning is to be carried out
 - If a dwell time is set, the system will wait for the set time to pass.
 - · When the set dwell time is passed, the next positioning will start.

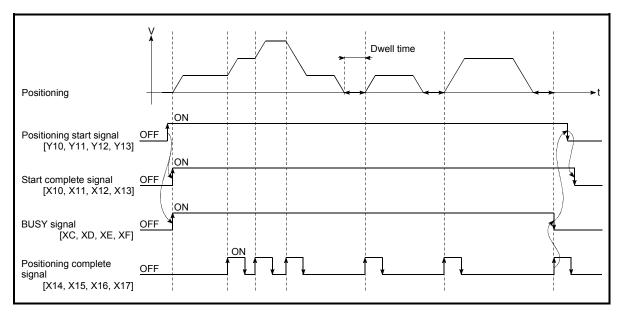


Fig. 6.3 ON/OFF timing of each signal at start of positioning

POINTS

The BUSY signal [XC, XD, XE, XF] turns ON even when position control of movement amount 0 is executed. However, since the ON time is short, the ON status may not be detected in the sequence program.

(The ON status of the start complete signal [X10, X11, X12, X13], positioning complete signal [X14, X15, X16, X17] and M code ON signal [X4, X5, X6, X7] can be detected in the sequence program.)

■ Starting time chart

The time chart for starting each control is shown below.

(1) Time chart for starting "machine OPR"

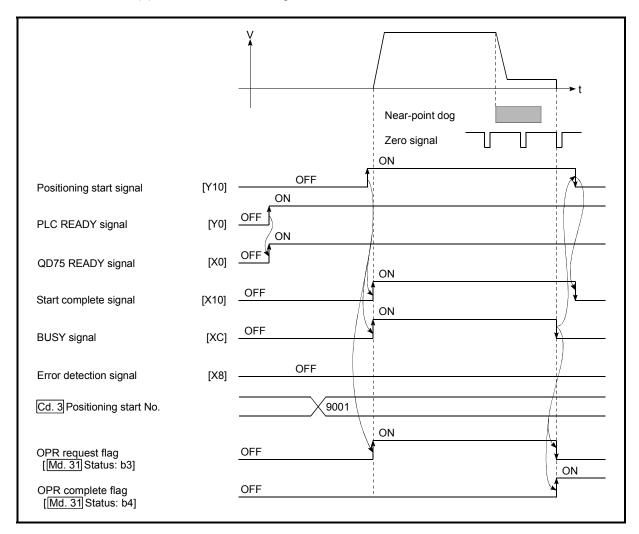


Fig. 6.4 Time chart for starting "machine OPR"

(2) Time chart for starting "fast OPR"

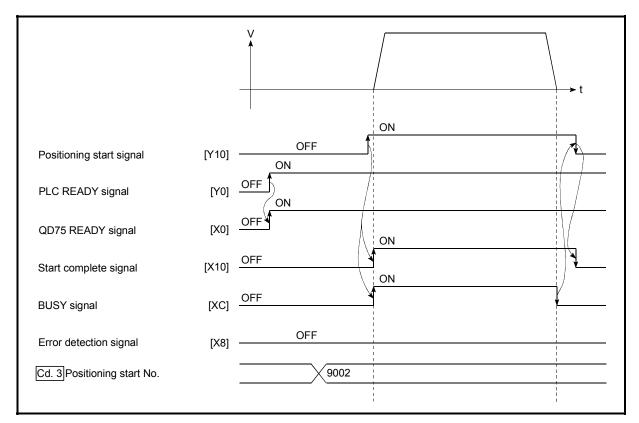


Fig. 6.5 Time chart for starting "fast OPR"

(3) Time chart for starting "major positioning control"

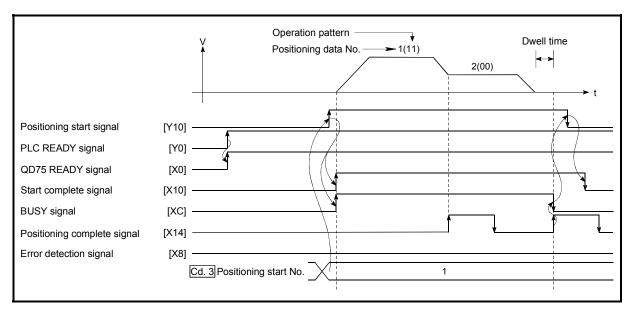


Fig. 6.6 Time chart for starting "major positioning control"

(4) Time chart for starting "speed-position switching control"

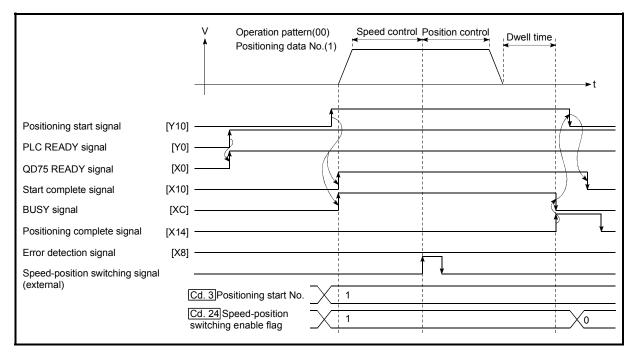


Fig. 6.7 Time chart for starting "speed-position switching control"

(5) Time chart for starting "position-speed switching control"

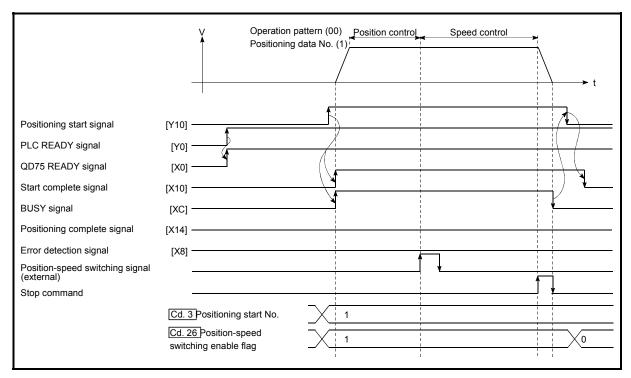


Fig. 6.8 Time chart for starting "position-speed switching control"

■ Machine OPR operation timing and process time

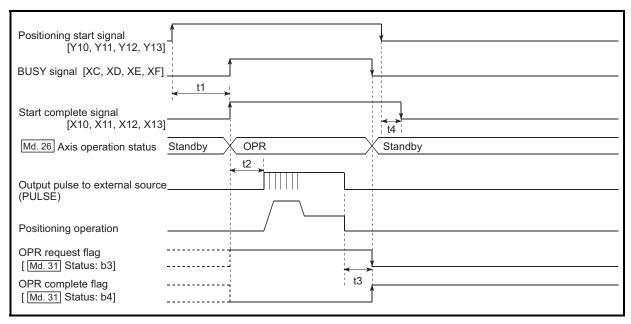


Fig. 6.9 Machine OPR operation timing and process time

Normal timing time

Model	t1	t2	t3	t4
QD75P□N/QD75D□N	0.2 to 1.1ms	0.4 to 1.3ms	0 to 0.9ms	0 to 0.9ms
QD75P□/QD75D□	1.0 to 1.4ms	2.7 to 4.4ms	0 to 1.8ms	0 to 1.8ms

• The t1 timing time could be delayed depending on the operating conditions of the other axis.

Positioning start signal [Y10, Y11, Y12, Y13] BUSY signal [XC, XD, XE, XF] t1 M code ON signal (WITH mode) [X4, X5, X6, X7] t2 Cd. 7 M code OFF request Start complete signal [X10, X11, X12, X13] t3 Standby Position control Standby Md. 26 Axis operation status t4 Output pulse to external source (PULSE) Positioning operation t5 Positioning complete signal * [X14, X15, X16, X17] t6 M code ON signal (AFTER mode) [X4, X5, X6, X7] t2 Cd. 7 M code OFF request OPR complete flag * [Md. 31] Status: b4]

Position control operation timing and process time

Fig. 6.10 Position control operation timing and process time

 When the positioning start signal turns ON, if all signals marked with an asterisk (*) are already ON, the signals marked with an asterisk (*) will turn OFF when the positioning start signal turns ON.

Norma	timing	time
-------	--------	------

Model	t1	t2	t3	t4	t5	t6
QD75P□N/QD75D□N	0.2 to 1.1ms	0 to 0.9ms	0 to 0.9ms	0.4 to 1.3ms	0 to 0.9ms	Follows
QD75P□/QD75D□	1.2 to 2.3ms	0 to 1.8ms	0 to 1.8ms	2.7 to 4.4ms	0 to 1.8ms	parameters

 The t1 timing time could be delayed depending on the operating conditions of the other axis.

[2] Starting by inputting external command signal

When starting positioning control by inputting the external command signal, the start command can be directly input into the QD75. This allows the variation time equivalent to one scan time of the CPU module to be eliminated. This is an effective procedure when operation is to be started as quickly as possible with the start command or when the starting variation time is to be suppressed. To start positioning control by inputting the external command signal, set the "data required to be set" and then turn ON the external command signal.

Restrictions

When starting by inputting the external command signal, the start complete signal [X10, X11, X12, X13] will not turn ON.

Data required to be set

To execute positioning start with the external command signal, set parameter (Pr.42) beforehand, and validate the "external command signal" with the "External command function valid setting program (program No. 5)".

Setting item	Setting	Setting value Setting details		Buffer memory address				
Setting item	value			Axis 2	Axis 3	Axis 4		
Pr.42 External command function selection	0	Set to "0: External positioning start".	62	212	362	512		
Cd.8 External command	valid 1	Set to "1: Validate external command".	1505	1605	1705	1805		

^{*} Refer to CHAPTER 5 "DATA USED FOR POSITIONING CONTROL" for details on the setting details.

Starting time chart

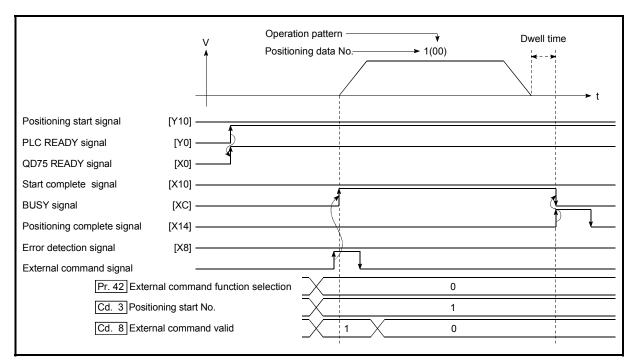


Fig. 6.11 Time chart for starting with external start signal

6

6.5.4 Continuous operation interrupt program

During positioning control, the control can be interrupted during continuous positioning control and continuous path control (continuous operation interrupt function). When "continuous operation interruption" is execution, the control will stop when the operation of the positioning data being executed ends. To execute continuous operation interruption, set "1: Continuous operation interrupt request" for "Cd.18 Continuous operation interrupt request".

[1] Operation during continuous operation interruption

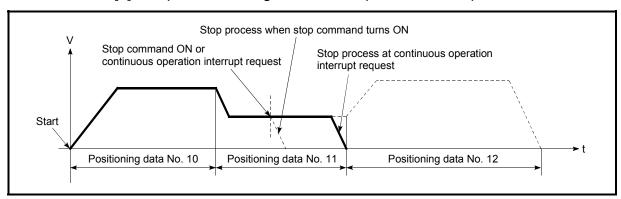


Fig. 6.12 Operation during continuous operation interruption

[2] Restrictions


(1) When the "continuous operation interrupt request" is executed, the positioning will end.

Thus, after stopping, the operation cannot be "restarted".

When " Cd.6 Restart command" is issued, a warning "Restart not possible" (warning code: 104) will occur.


(2) Even if the stop command is turned ON after executing the "continuous operation interrupt request", the "continuous operation interrupt request" cannot be canceled.

Thus, if "restart" is executed after stopping by turning the stop command ON, the operation will stop when the positioning data No. where "continuous operation interrupt request" was executed is completed.

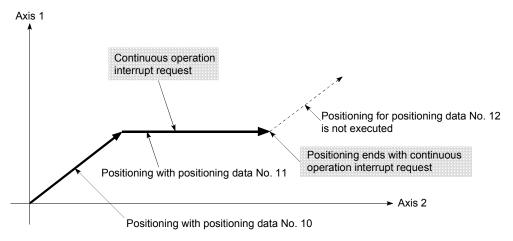

- (3) If the operation cannot be decelerated to a stop because the remaining distance is insufficient when "continuous operation interrupt request" is executed with continuous path control, the interruption of the continuous operation will be postponed until the positioning data shown below.
 - · Positioning data No. have sufficient remaining distance
 - Positioning data No. for positioning complete (pattern: 00)
 - Positioning data No. for continuous positioning control (pattern: 01)

Even when the continuous operation interrupt is requested, the remaining distance is insufficient, and thus, the operation cannot stop at the positioning No. being executed.

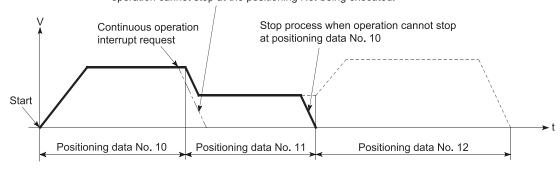

(4) When operation is not performed (BUSY signal [XC, XD, XE, XF] is OFF), the interrupt request during continuous operation is not accepted. It is cleared to 0 at a start or restart.

[3] Control data requiring settings Set the following data to interrupt continuous operation.

Setting item	Setting value	Setting details		er mem Axis 2		
	value		AXIS I	AXIS Z	AXIS 3	AXIS 4
Cd.18 Continuous operation interrupt request	1	Set "1: Continuous operation interrupt request".	1520	1620	1720	1820

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

6.5.5 Restart program

When a stop factor occurs during position control and the operation stops, the positioning can be restarted from the stopped position to the position control end point by using the "restart command" (Cd.6) Restart command).

("Restarting" is not possible when "continuous operation is interrupted.")
This instruction is efficient when performing the remaining positioning from the stopped position during position control of incremental system such as the INC Linear 1.
(Calculation of remaining distance is not required.)

[1] Restart operation

After a deceleration stop by the stop command is completed, write "1" to the "Cd.6 Restart command" with "Md.26 Axis operation status" is "Stopped" and the positioning restarts.

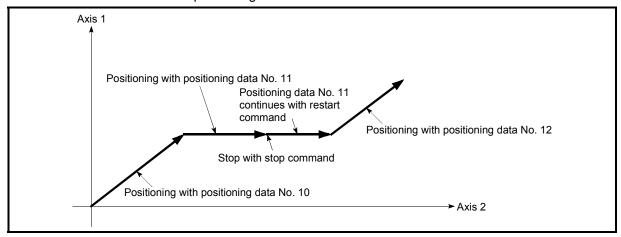


Fig. 6.13 Restart operation

[2] Restrictions

- (1) Restarting can be executed only when the " Md.26 Axis operation status" is "Stopped (the deceleration stop by stop command is completed)". If the axis operation is not "stopped", restarting is not possible. In this case, a warning "Restart not possible" (warning code: 104) will occur, and the process at that time will be continued.
- (2) Restarting can be executed even while the positioning start signal is ON. However, make sure that the positioning start signal does not change from OFF to ON while " Md.26 Axis operation status" is "Stopped". If the signal is changed from OFF to ON while " Md.26 Axis operation status" is "Stopped", the normal positioning (the positioning data set in " Cd.3 Positioning start signal") is started.
- (3) If the PLC READY signal is turned ON from OFF while " Md.26 Axis operation status" is "Stopped", the positioning cannot be restarted. If restart is requested, a warning "Restart not possible" (warning code: 104) will occur.

will occur.

6

- (4) Do not execute restart while the stop command is ON.
 If restart is executed while stopped, an error "Stop signal ON at start" (error code: 106) will occur, and the "Md.26 Axis operation status" will change to "Error".
 - Thus, even if the error is reset, the operation cannot be restarted.
- (5) If positioning is ended with the continuous operation interrupt request, the operation cannot be restarted.

 If restart is requested, a warning "Restart not possible" (warning code: 104)
- (6) When stopped with interpolation operation, write "1: Restarts" into " Cd.6 Restart command" for the reference axis, and then restart.
- (7) If any of reference partner axes executes the positioning operation once, a warning "Restart not possible" (warning code: 104) will occur, and the positioning cannot restarts.
- (8) When the machine OPR and fast OPR is stopped, an error "OPR restart not possible" (error code: 209) will occur and the positioning cannot restarts.

6

[3] Control data requiring setting Set the following data to execute restart.

Catting item	Setting	Cotting details	Buffe	Buffer memory address			
Setting item	value	Setting details		Axis 2	Axis 3	Axis 4	
Cd.6 Restart command	1	Set "1: Restarts".	1503	1603	1703	1803	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

[4] Starting conditions

The following conditions must be satisfied when restarting. (Assemble the required conditions into the sequence program as an interlock.)

- (1) Operation state
 - " Md.26 Axis operation status" is "1: Stopped"
- (2) Signal state

0:			O's substate	Device					
Signal name			Signal state	Axis 1	Axis 2	Axis 3	Axis 4		
Interface signal	PLC READY signal	ON	CPU module preparation completed	Y0					
	QD75 READY signal	ON	QD75 preparation completed		X0				
	Synchronization flag *	ON	QD75 buffer memory Accessible	X1					
	Axis stop signal	OFF	Axis stop signal is OFF	Y4	Y5	Y6	Y7		
	M code ON signal	OFF	M code ON signal is OFF	X4	X5	X6	X7		
	Error detection signal	OFF	No error is present	X8	X9	XA	XB		
	BUSY signal	OFF	BUSY signal is OFF	XC	XD	XE	XF		
	Start complete signal	OFF	Start complete signal is OFF	X10	X11	X12	X13		
External signal	Drive unit READY signal	signal ON Drive unit preparation completed							
	Stop signal	OFF	FF Stop signal is OFF		_				
	Upper limit (FLS)	ON	Within limit range	_					
	Lower limit (RLS) Of		Within limit range	_					

^{*:} When the synchronous setting of the CPU module is made in the nonsynchronous mode, this must be provided as an interlock.

When it is made in the synchronous mode, no interlock must be provided in the program because the flag is turned ON when calculation is run on the CPU module.

(5) Time chart for restarting

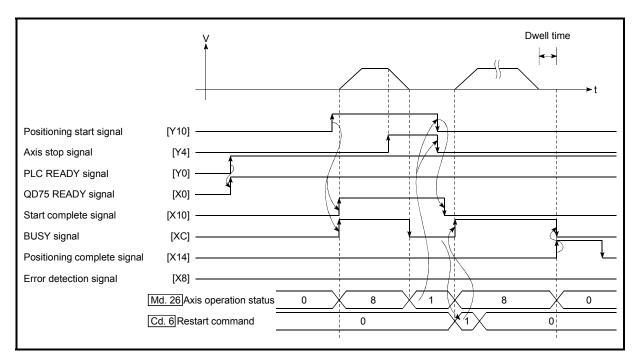


Fig. 6.14 Time chart for restarting

6.5.6 Stop program

The axis stop signal [Y4, Y5, Y6, Y7] or a stop signal from an external source is used to stop the control.

Create a program to turn ON the axis stop signal [Y4, Y5, Y6, Y7] as the stop program.

The process for stopping control is explained below.

Each control is stopped in the following cases.

- (1) When each control is completed normally.
- (2) When the drive unit READY signal is turned OFF.
- (3) When a CPU module error occurs
- (4) When the PLC READY signal is turned OFF.
- (5) When an error occurs in QD75.
- (6) When control is intentionally stopped(Stop signal from CPU module turned ON, stop signal from peripheral devices)

The stop process for the above cases is shown below. (Excluding item (1) above "When each control is completed normally".)

[1] Stop process

			Axis	Stop process							
Stop cause			M code	operation	OPR control				Manu	ual control	
		Stop axis	ON signal after stop	status (Md.26) after stopping	Machine OPR control	Fast OPR control	Major positioning control	High-level positioning control	JOG/ Inching operation	Manual pulse generator operation	
Forced stop	Drive unit READY signal OFF	Each axis	No change	Error	Immediate	Immediate stop					
Fatal stop (Stop group 1)	Hardware stroke limit upper/lower limit error occurrence	Each axis	No change	Error		Deceleration stop/sudden stop (Select with " Pr.37 Stop group 1 sudden stop selection".					
Emergency stop (Stop group 2)	CPU module error occurrence PLC READY signal OFF Error in test mode	All axes	No change Turns OFF No change	Error	Delegation (Select with selection".	Deceleration stop					
Relatively safe stop (Stop group 3)	Axis error detection (Error other than stop group 1 or 2) "Stop" input from peripheral device	Each axis	No change	Error	Deceleration stop/sudden stop (Select with " Pr.39 Stop group 3 sudden stop					Deceleration	
Intentional stop (Stop group 3)	"Stop signal" ON from external source "Axis stop signal" ON from CPU module	Each axis	No change	Stopped (Standby)	selection".	stop					

[2] Types of stop processes

The operation can be stopped with deceleration stop, sudden stop or immediate stop.

(1) Deceleration stop *1

The operation stops with "deceleration time 0 to 3" (Pr.10 Pr.28 Pr.29 Pr.30).

Which time from "deceleration time 0 to 3" to use for control is set in positioning data (Da.4).

(2) Sudden stop

The operation stops with " Pr.36 Sudden stop deceleration time".

(3) Immediate stop

The operation does not decelerate.

The QD75 immediately stops the pulse output, but the operation will coast for the droop pulses accumulated in the drive unit's deviation counter.

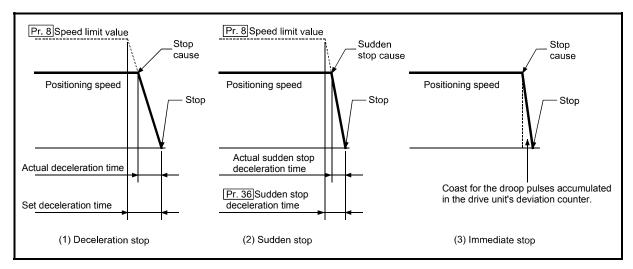


Fig. 6.15 Types of stop processes

REMARK

*1 "Deceleration stop" and "sudden stop" are selected with the details parameter 2 "stop group 1 to 3 sudden stop selection". (The default setting is "deceleration stop".)


[3] Order of priority for stop process

The order of priority for the QD75 stop process is as follows.

Deceleration stop < Sudden stop < Immediate stop

- (1) If the deceleration stop command ON (stop signal ON) or deceleration stop cause occurs during deceleration to speed 0 (including automatic deceleration), operation changes depending on the setting of " Cd.42 Stop command processing for deceleration stop selection".
 - (a) Manual control Independently of the Cd.42 setting, a deceleration curve is re-processed from the speed at stop cause occurrence.
 - (b) OPR control, positioning control
 - When Cd.42 = 0 (deceleration curve re-processing):
 A deceleration curve is re-processed from the speed at stop cause occurrence.
 - When Cd.42 = 1 (deceleration curve continuation):
 The current deceleration curve is continued after stop cause occurrence.

 (For details, refer to "Section 12.7.9 Stop command processing for deceleration stop function".)
- (2) If the stop signal ON or stop cause specified for a sudden stop occurs during deceleration, sudden stop process will start at that point. However, if the sudden stop deceleration time is longer than the deceleration time, the deceleration stop process will be continued even if a sudden stop cause occurs during the deceleration stop process.

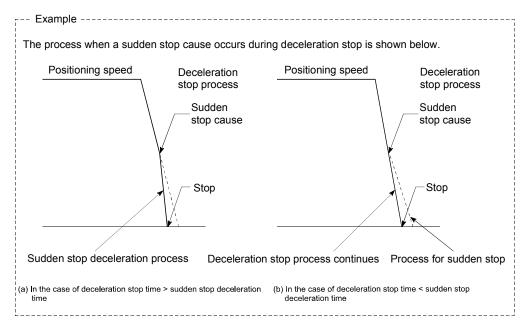

(3) Operation will stop immediately if the target reaches the positioning address specified in the currently executed positioning data during deceleration of position control.

CHAPTER 7 MEMORY CONFIGURATION AND DATA PROCESS

The QD75 memory configuration and data transmission are explained in this chapter.

The QD75 is configured of two memories. By understanding the configuration and roles of two memories, the QD75 internal data transmission process, such as "when the power is turned ON" or "when the PLC READY signal changes from OFF to ON" can be easily understood. This also allows the transmission process to be carried out correctly when saving or changing the data.

7.1	Configu	ration and roles of QD75 memory	.7-	2
		Configuration and roles of QD75 memory		
		Buffer memory area configuration		
			7-	

7.1 Configuration and roles of QD75 memory

7.1.1 Configuration and roles of QD75 memory

The QD75 is configured of the following two memories.

Memory configuration	Role	Parameter area	Monitor data area	Control data area	Positioning data area (No. 1 to 600)	Block start data area (No.7000 to 7004)	PLC CPU memo area	Backup
Buffer memory	Area that can be directly accessed with sequence program from CPU module.	0	0	0	0	0	0	Not possible
	Area for backing up data required for positioning.	0	ı	ı	0	0	ı	Possible

O: Setting and storage area provided, Not possible: Data is lost when power is turned OFF

^{- :} Setting and storage area not provided, Possible: Data is held even when power is turned OFF

Details of areas

· Parameter area

Area where parameters, such as positioning parameters and OPR parameters, required for positioning control are set and stored. (Set the items indicated with Pr.1 to Pr.57, Pr.70, and Pr.150 for each axis.)

· Monitor data area

Area where positioning system or QD75 operation state is stored. (Set the items indicated with Md.1 to Md.48, Md.50 to Md.52 *1.) *1: Md.50 to Md.52 are for the QD75P\\[Omega\]NQD75D\\[Omega\]N only.

· Control data area

Area where data for operating and controlling positioning system is set and stored. (Set the items indicated with $\boxed{\text{Cd.1}}$ to $\boxed{\text{Cd.42}}$.)

Positioning data area (No.1 to 600)


Area where positioning data No.1 to 600 is set and stored. (Set the items indicated with $\boxed{\text{Da.1}}$ to $\boxed{\text{Da.10}}$ and $\boxed{\text{Da.27}}$ to $\boxed{\text{Da.29}}$ for each positioning data.)

• Block start data area (No.7000 to 7004)

Area where information required only when carrying out block No. 7000 to 7004 high-level positioning is set and stored. (Set the items indicated with $\boxed{\text{Da.11}}$ to $\boxed{\text{Da.19}}$.)

· PLC CPU memo area

Area where condition judgment values required for special positioning, etc., are set and stored.

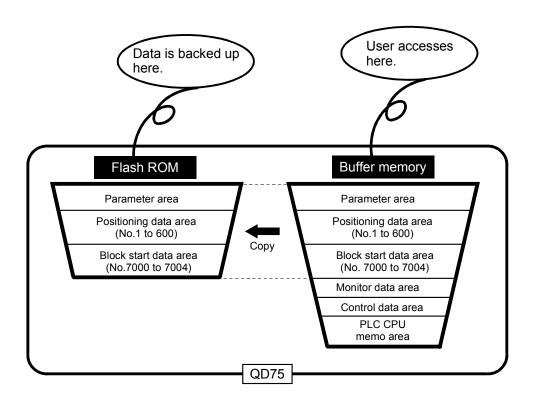

7.1.2 Buffer memory area configuration

The QD75 buffer memory is configured of the following types of areas.

D.#		Buffer memory address ⊀1				Writing	
Buffer memory area configuration		Axis 1	Axis 2	Axis 3	Axis 4	possibility	
	Basic parameter area	0 to 15	150 to 165	300 to 315	450 to 465		
		17 to 62	167 to 212	317 to 362	467 to 512	1	
D	Detailed parameter area		140*2				
Parameter area	OPR basic parameter area	70 to 78	220 to 228	370 to 378	520 to 528	Possible	
	OPR detailed parameter	70 to 00	000 +- 000	270 4- 200	500 to 500		
	area	79 to 89	229 to 239	379 to 389	529 to 539		
	System monitor area	System monitor area 1200 to 1425, 144		440 to 1487*2		<u> </u>	
Monitor data area	Axis monitor area	800 to 847,	900 to 947,	1000 to	1100 to	Not possible	
	7 talo monitor di ca	899	999	1047, 1099	1147, 1199		
Control data area	System control data area			1905, 1907	I	Possible	
Control data area	Axis control data area	1500 to 1550		1700 to 1750	1800 to 1850	1 0001010	
Positioning data area (No.1	Positioning data area	2000 to 7999	8000 to	14000 to	20000 to		
to 600)			13999	19999	25999	<u> </u>	
		26000 to	27000 to	28000 to	29000 to		
	Block start data area	26049	27049	28049	29049	<u> </u>	
Block start data area		26050 to	27050 to	28050 to	29050 to		
(No.7000)		26099	27099	28099	29099	<u> </u>	
	Condition data area	26100 to	27100 to	28100 to	29100 to		
		26199	27199	28199	29199	+	
	Block start data area	26200 to	27200 to	28200 to 28249	29200 to	_	
Block start data area		26249 26250 to	27249 27250 to	28250 to	29249 29250 to		
(No.7001)		26299	27299	28299	29299		
(140.7001)		26300 to	27300 to	28300 to	29300 to		
	Condition data area	26399	27399	28399	29399		
		26400 to	27400 to	28400 to	29400 to	†	
		26449	27449	28449	29449	Possible	
Block start data area	Block start data area	26450 to	27450 to	28450 to	29450 to		
(No.7002)		26499	27499	28499	29499		
	0 1111 1 1	26500 to	27500 to	28500 to	29500 to	Ī	
	Condition data area	26599	27599	28599	29599		
		26600 to	27600 to	28600 to	29600 to		
	Plack start data area	26649	27649	28649	29649	-	
Block start data area	Block start data area	26650 to	27650 to	28650 to	29650 to		
(No.7003)		26699	27699	28699	29699	<u> </u>	
	Condition data area	26700 to	27700 to	28700 to	29700 to		
	Condition data area	26799	27799	28799	29799		
		26800 to	27800 to	28800 to	29800 to		
	Block start data area	26849	27849	28849	29849	-	
Block start data area	DIOUN Start data area	26850 to	27850 to	28850 to	29850 to		
(No.7004)		26899	27899	28899	29899		
	Condition data area	26900 to 26999	27900 to 27999	28900 to 28999	29900 to 29999		
PLC CPLI memo area	PLC CPU memo area	20000			20000	Possible	
PLC CPU memo area	PLC CPU memo area		30000 t	o 30099		Possible	


^{*1:} Use of address Nos. skipped above is prohibited. If used, the system may not operate correctly.

^{*2:} These addresses are not used for the QD75P\(\to\)/QD75D\(\to\).

7.2 Data transmission process

The data is transmitted between the QD75 memories with steps (1) to (8) shown below.

*The data transmission patterns numbered (1) to (8) on the right page correspond to the numbers (1) to (8) on the left page.

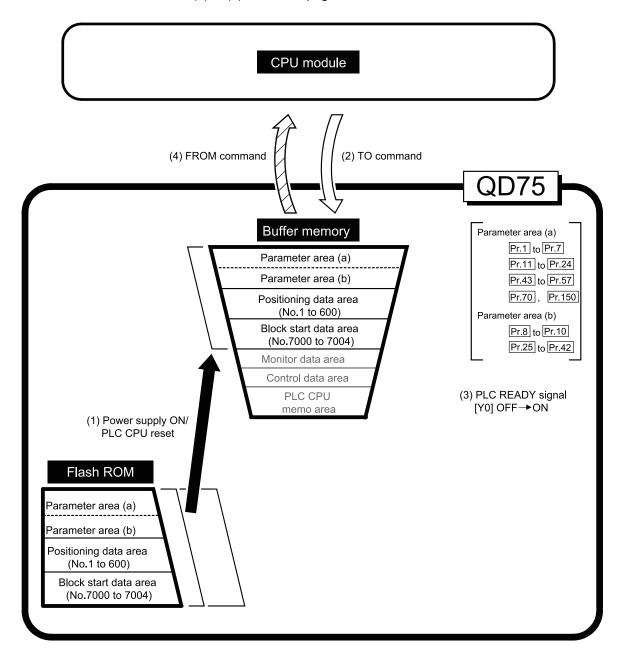

(1) Transmitting data when power is turned ON or CPU module is reset ()

When the power is turned ON or the CPU module is reset, the "parameters", "positioning data" and "block start data" stored (backed up) in the flash ROM is transmitted to the buffer memory.

(2) Transmitting data with TO instruction from CPU module (

The parameters or data is written from the CPU module to the buffer memory using the TO instruction. At this time, when the "parameter area (b) *1", "positioning data (No. 1 to 600)", "block start data (No. 7000 to 7004)", "control data" and "PLC CPU memo area" are written into the buffer memory with the TO instruction, it is simultaneously valid.

*1 Parameter area (b) Parameters validated with the next each positioning control is started.

(Pr.8 to Pr.10, Pr.25 to Pr.42)

(3) Validate parameters when PLC READY signal [Y0] changes from OFF to ON

When the PLC READY signal [Y0] changes from OFF to ON, the data stored in the buffer memory's "parameter area (a) *2" is validated.

For Pr.5, however, only the data obtained first after the PLC READY signal [Y0] changes from OFF to ON when the power is turned ON or CPU module is reset becomes validate.

(Refer to Section 5.2 "List of parameters" for details.)

*2: Parameter area (a) Parameters validated when PLC READY signal [Y0] changes from OFF to ON.

(Pr.1 to Pr.7 , Pr.11 to Pr.24 , Pr.43 to Pr.57 , Pr.70 , Pr.150)


POINT

The setting values of the parameters that correspond to parameter area (b) are valid when written into the buffer memory with the TO instruction.

However, the setting values of the parameters that correspond to parameter area (a) are not validated until the PLC READY signal [Y0] changes from OFF to ON.

(4) Accessing with FROM instruction from CPU module ()

The data is read from the buffer memory to the CPU module using the FROM instruction.

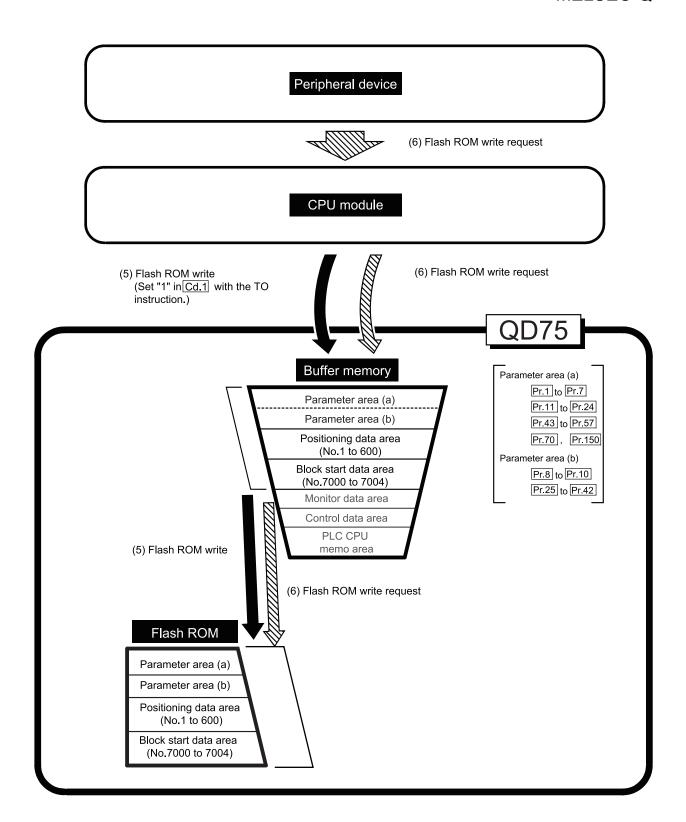

(5) Flash ROM write (

The following transmission process is carried out by setting "1" in " Cd.1 Flash ROM write request" (buffer memory [1900]).

The "parameters", "positioning data (No. 1 to 600)" and "block start data (No. 7000 to 7004)" in the buffer memory area are transmitted to the flash ROM.
 The writing to the flash ROM may also be carried out using a dedicated instruction "ZP.PFWRT". (Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details.)

(6) Flash ROM request (writing) (

The following transmission processes are carried out with the [flash ROM request] (write) from the peripheral device.

1) The "parameters", "positioning data (No. 1 to 600)" and "block start data (No. 7000 to 7004)" in the buffer memory area are transmitted to the flash ROM.


Note) This transmission process is the same as (5) above.

IMPORTANT

- (1) Do not turn the power OFF or reset the CPU module while writing to the flash ROM. If the power is turned OFF or the CPU module is reset to forcibly end the process, the data backed up in the flash ROM will be lost.
- (2) Do not write the data to the buffer memory before writing to the flash ROM is completed.
- (3) The number of writes to the flash ROM with the programmable controller program is 25 max. while the power is turned ON.

Writing to the flash ROM beyond 25 times will cause the error "Flash ROM write number error" (error code: 805).

Refer to Section 15.3 "List of errors" for details.

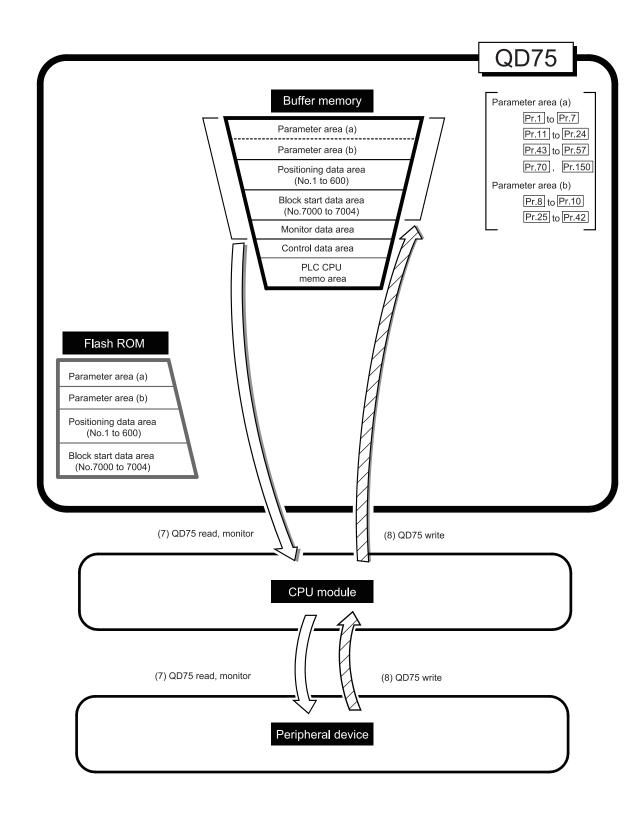

(7) Reading data from buffer memory to peripheral device ([

The following transmission processes are carried out with the [Read from module] from the peripheral device.

1) The "parameters", "positioning data (No. 1 to 600)" and "block start data (No. 7000 to 7004)" in the buffer memory area are transmitted to the peripheral device via the CPU module.

The following transmission processes are carried out with the [monitor] from the peripheral device.

2) The "monitor data" in the buffer memory area is transmitted to the peripheral device via the CPU module.

(8) Writing data from peripheral device to buffer memory ()



The following transmission processes are carried out with the [Write to module] from the peripheral device.

1) The "parameters", "positioning data (No. 1 to 600)" and "block start data (No. 7000 to 7004)" in the peripheral device area transmitted to the buffer memory via the CPU module.


At this time, when [Flash ROM write] is set with the peripheral device, the transmission processes indicated with the following are carried out.

(5) Flash ROM write

The data transmission is carried out as shown in the previous pages, but the main method of using this data process is shown below.

(Ex.) Setting the positioning data

The following methods can be used to set the positioning data.

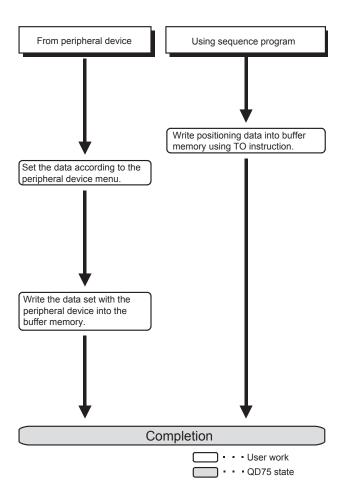

PART 2 CONTROL DETAILS AND SETTING

PART 2 is configured for the following purposes (1) to (3).

- (1) To understand the operation and restrictions of each control.
- (2) To carry out the required settings in each control.
- (3) To deal with errors.

The required settings in each control include parameter setting, positioning data setting, control data setting by a sequence program, etc.

Carry out these settings while referring to CHAPTER 5 "DATA USED FOR POSITIONING CONTROL".

Also refer to CHAPTER 6 "SEQUENCE PROGRAMS USED FOR POSITIONING CONTROL" when creating the programs required in each control, and consider the entire control program configuration when creating each program.

CHAPTER 8	OPR CONTROL	8-	1 to 8- 24
CHAPTER 9	MAJOR POSITIONING CONTROL	9-	1 to 9-140
CHAPTER 10	HIGH-LEVEL POSITIONING CONTROL	10-	1 to 10- 28
CHAPTER 11	MANUAL CONTROL	11-	1 to 11- 34
CHAPTER 12	CONTROL SUB FUNCTIONS	12-	1 to 12-110
CHAPTER 13	COMMON FUNCTIONS	13-	1 to 13- 8
CHAPTER 14	DEDICATED INSTRUCTIONS	14-	1 to 14- 24
CHAPTER 15	TROUBLESHOOTING	15-	1 to 15- 50

MEMO

CHAPTER 8 OPR CONTROL

The details and usage of "OPR control" are explained in this chapter.

OPR control includes "machine OPR" that establish a machine OP without using address data, and "fast OPR" that store the coordinates established by the machine OPR, and carry out positioning to that position.

OPR carried out by sequence programs from the CPU module are explained in this chapter.

Refer to GX Configurator-QP Operating Manual for details on OPR using the peripheral device.

8.1	Outline	of OPR control	8-	2
	8.1.1	Two types of OPR control	8-	2
8.2	Machine	e OPR	8-	4
	8.2.1	Outline of the machine OPR operation	8-	4
	8.2.2	Machine OPR method	8-	5
	8.2.3	OPR method (1): Near-point dog method	8-	7
	8.2.4	OPR method (2): Stopper method 1)	8-	9
	8.2.5	OPR method (3): Stopper method 2)	8-	12
	8.2.6	OPR method (4): Stopper method 3)	8-	15
	8.2.7	OPR method (5): Count method 1)	8-	17
	8.2.8	OPR method (6): Count method 2)	8-	20
8.3	Fast OF	PR	8-	23
	8.3.1	Outline of the fast OPR operation	8-	23

8.1 Outline of OPR control

8.1.1 Two types of OPR control

In "OPR control" a position is established as the starting point (or "OP") when carrying out positioning control, and positioning is carried out toward that starting point.

It is used to return a machine system at any position other than the OP to the OP when the QD75 issues a "OPR request"* with the power turned ON or others, or after a positioning stop.

In the QD75, the two types of controls shown below are defined as "OPR control", following the flow of the OPR work.

These two types of OPR control can be executed by setting the "OPR parameters", setting "Positioning start No. 9001" and "Positioning start No. 9002" prepared beforehand in the QD75 to "Cd.3 Positioning start No.", and turning ON the positioning start signal.

The ZP.PSTRT ☐ start numbers of the dedicated instruction can also be set to 9001 or 9002 to execute the OPR control. (For details, refer to CHAPTER 14 "DEDICATED INSTRUCTIONS".)

- (1) Establish a positioning control OP
 - "Machine OPR" (positioning start No. 9001)
- (2) Carry out positioning toward the OP
 - "Fast OPR" (positioning start No. 9002).
- * The "machine OPR" in (1) above must always be carried out before executing the "fast OPR" in (2).

REMARK

OPR request *

The "OPR request flag" (Md.31 Status: b3) must be turned ON in the QD75, and a machine OPR must be executed in the following cases.

- When the power is turned ON
- At the ON → OFF of the drive unit READY signal (Md.30 External input/output signal: b2).
- At the OFF → ON of the PLC READY signal [Y0]

The address information stored in the QD75 cannot be guaranteed while the "OPR request flag" is ON.

The "OPR request flag" turns OFF and the "OPR complete flag" (Md.31 Status: b4) turns ON if the machine OPR is executed and is completed normally.

OPR sub functions

Refer to Section 3.2.4 "Combination of QD75 main functions and sub functions" for details on "sub functions" that can be combined with OPR control. Also refer to CHAPTER 12 "CONTROL SUB FUNCTIONS" for details on each sub function.

[Remarks]

The following two sub functions are only related to machine OPR.

Sub function name	Machine OPR	Fast OPR	Reference
OPR retry function	Δ	×	Section 12.2.1
OP shift function	0	×	Section 12.2.2

^{○ :} Combination possible, △: Restricted, ×: Combination not possible

■ When an OPR is not required

Control can be carried out ignoring the "OPR request flag" (Md.31 Status: b3) in systems that do not require an OPR.

In this case, the "OPR parameters (Pr.43 to Pr.57)" must all be set to their initial values or a value at which an error does not occur.

OPR from peripheral devices

"Machine OPR" and "fast OPR" can be executed from the test mode of the peripheral device.

Refer to GX Configurator-QP Operating Manual for details on OPR from the peripheral device.

8.2 Machine OPR

8.2.1 Outline of the machine OPR operation

Important

Use the OPR retry function when the OP position is not always in the same direction from the workpiece operation area (when the OP is not set near the upper or lower limit of the machine).

*The machine OPR may not complete unless the OPR retry function is used.

■ Machine OPR operation

In a machine OPR, a machine OP is established.

None of the address information stored in the QD75, CPU module, or servo is used at this time. The position mechanically established after the machine OPR is regarded as the "OP" to be the starting point for positioning control.

The method for establishing an "OP" by a machine OPR differs according to the method set in "Pr.43 OPR method".

The following shows the operation when starting a machine OPR.

1)	The machine OPR is started.
2)	The operation starts according to the speed and direction set in the OPR parameters (Pr.43 to Pr.57).
3)	The "OP" is established by the method set in " Pr.43 OPR method", and the machine stops. (Refer to Sections 8.2.2 to 8.2.8)
4)	If "a" is set as " Pr.45 OP address", "a" will be stored as the current position in the " Md.20 Current feed value" and " Md.21 Machine feed value" which are monitoring the position.
5)	The machine OPR is completed.

* The " Pr.45 OP address" is a fixed value set by the user.

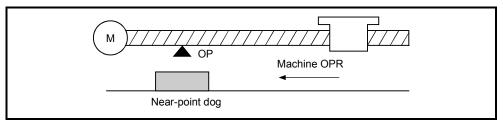


Fig. 8.1 Example of a machine OPR

8.2.2 Machine OPR method

The method by which the machine OP is established (method for judging the OP position and machine OPR completion) is designated in the machine OPR according to the configuration and application of the positioning method.

The following table shows the six methods that can be used for this OPR method. (The OPR method is one of the items set in the OPR parameters. It is set in "Pr.43 OPR method" of the basic parameters for OPR.)

Pr.43 OPR method	Operation details
Near-point dog method	Deceleration starts by the OFF \rightarrow ON of the near-point dog. (Speed is reduced to " $\boxed{\text{Pr.47}}$ Creep speed".) The operation stops at the first zero signal $*$ after the near-point dog turns from ON \rightarrow OFF. When a "deviation counter clear output" is completed, the machine OPR is completed.
Stopper method 1)	The stopper position is regarded as the OP. After the deceleration starts by the OFF \rightarrow ON of the near-point dog, the machine presses against the stopper at the " $\boxed{\text{Pr.47}}$ Creep speed" and stops. The machine OPR is regarded as completed on completion of the deviation counter clear output provided after " $\boxed{\text{Pr.49}}$ OPR dwell time" passed after stoppage.
Stopper method 2)	The stopper position is regarded as the OP. After the deceleration starts by the OFF \rightarrow ON of the near-point dog, the machine presses against the stopper at the " $\boxed{\text{Pr.47}}$ Creep speed" and stops. The machine OPR is regarded as completed on completion of the deviation counter clear output provided after the zero signal $^*\!$
Stopper method 3)	The stopper position is regarded as the OP. The machine starts at the " Pr.47 Creep speed" from the beginning, then presses against the stopper at the " Pr.47 Creep speed" and stops. The machine OPR is regarded as completed on completion of the deviation counter clear output provided after the zero signal * is detected after stoppage.
Count method 1)	The deceleration starts by the OFF \rightarrow ON of the near-point dog, and the machine moves at the " $\boxed{Pr.47}$ Creep speed". The machine stops at the zero signal $*$ after moving the distance set in the " $\boxed{Pr.50}$ Setting for the movement amount after near-point dog ON" from the near point dog OFF \rightarrow ON position. When a "deviation counter clear signal output" is completed, the machine OPR is regarded as completed.
Count method 2)	The deceleration starts by the OFF \rightarrow ON of the near-point dog, and the machine moves at the " $\boxed{\text{Pr.47}}$ Creep speed". The machine moves the distance set in the " $\boxed{\text{Pr.50}}$ Setting for the movement amount after near-point dog ON" from the near point dog OFF \rightarrow ON position, and stops at that position. The machine OPR is then regarded as completed.

^{*:} The following are the signals input as the zero signals of the QD75 in the corresponding OPR methods.

Near-point dog method, count method 1): Signal that is output as a single pulse at one motor revolution (e.g. Z-phase signal output from the drive unit)

Stopper method 2), 3) : Signal that is output on detection of contact with the stopper. (Input externally)

The following shows the external I/O signals used for machine OPR.

	Signal required for control					
Pr.43 OPR method	Near-point dog	Zero signal	Upper/lower limit switches	Deviation counter clear output	Torque limit	
Near-point dog method	0	0	0	0	-	
Stopper method 1)	0	ı	0	©	0	
Stopper method 2)	0	0	0	©	©	
Stopper method 3)	1	0	0	0	0	
Count method 1)	0	0	0	0	-	
Count method 2)	0	-	0	_	-	

^{⊚:} Necessary ⊃: Necessary as required -: Unnecessary

REMARK

Creep speed

The stopping accuracy is poor when the machine suddenly stops from fast speeds. To improve the machine's stopping accuracy, its must change over to a slow speed before stopping. This speed is set in the "Pr.47 Creep speed".

8.2.3 OPR method (1): Near-point dog method

The following shows an operation outline of the "near-point dog method" OPR method.

Operation chart

1)	The machine OPR is started. (The machine begins the acceleration designated in " Pr.51 OPR acceleration time selection", in the direction designated in " Pr.44 OPR direction". It then moves at the " Pr.46 OPR speed" when the acceleration is completed.)
2)	The machine begins decelerating when the near-point dog ON is detected.
3)	The machine decelerates to the "Pr.47 Creep speed", and subsequently moves at that speed. (At this time, the near-point dog must be ON. The workpiece will continue decelerating and stop if the near-point dog is OFF.)
4)	After the near-point dog turns OFF, the pulse output from the QD75 will stop at the first zero signal, outputting a "deviation counter clear signal" to the drive unit. (The "deviation counter clear signal output time" is set in Pr.55.)
5)	After a "deviation counter clear signal" is output to the drive unit, the OPR complete flag (Md.31 Status: b4) turns from OFF to ON and the OPR request flag (Md.31 Status: b3) turns from ON to OFF.

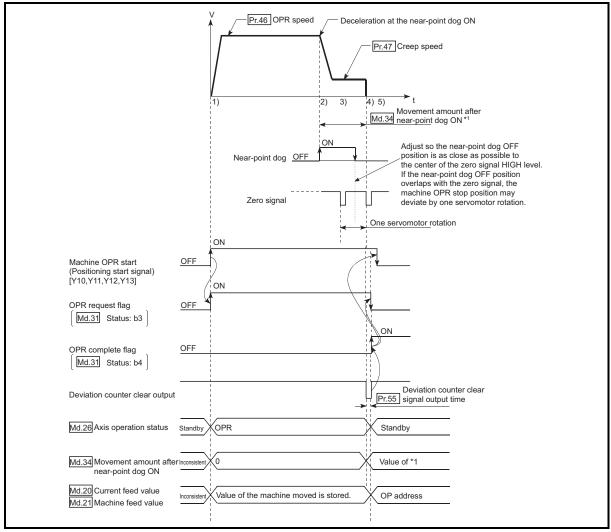


Fig. 8.2 Near-point dog method machine OPR

Restrictions

A pulse generator with a zero signal is required.

When using a pulse generator without a zero signal, generate a zero signal using an external signal.

Precautions during operation

- (1) An error "Start at OP (error code: 201)" will occur if another machine OPR is attempted after a machine OPR completion when the OPR retry function is not set ("0" is set in " Pr.48 OPR retry").
- (2) Machine OPR carried out from the near-point dog ON position will start at the "Pr.47 Creep speed".
- (3) The near-point dog must be ON during deceleration from the OPR speed "Pr.47 Creep speed".
- * The workpiece will continue decelerating and stop if the near-point dog is turned OFF before it has decelerated to the creep speed, thus causing an error "Dog detection timing fault" (error code: 203).

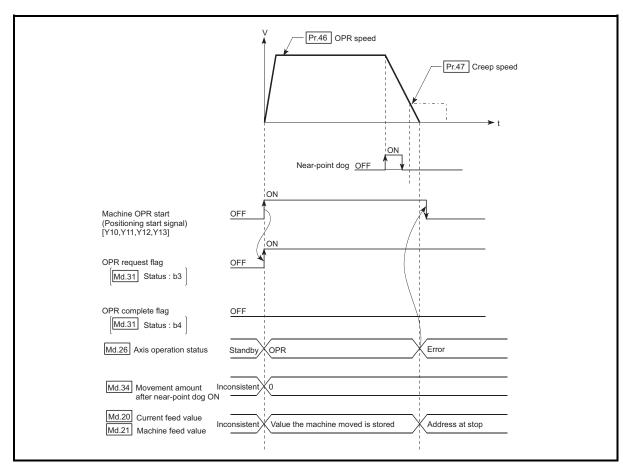


Fig. 8.3 Operation when the near-point dog is turned OFF before the creep speed is reached

(4) When a machine OPR is stopped with the stop signal, perform a machine OPR again. If the restart command is turned ON after a stop with the stop signal, an error "OPR restart not possible" (error code: 209) occurs.

8.2.4 OPR method (2): Stopper method 1)

The following shows an operation outline of the "stopper method 1)" OPR method.

Operation chart

	— -
1)	The machine OPR is started. (The machine begins the acceleration designated in " Pr.51 OPR acceleration time selection", in the direction designated in " Pr.44 OPR direction". It then moves at the " Pr.46 OPR speed" when the acceleration is completed.)
2)	The machine begins decelerating when the near-point dog ON is detected.
3)	The machine decelerates to the "Pr.47 Creep speed", and subsequently moves at that speed. (Torque limiting is required at this time. If the torque is not limited, the servomotor may fail in step 4).)
4)	The machine presses against the stopper at the creep speed and stops.
5)	The pulse output from the QD75 will stop when the "Pr.49 OPR dwell time" has elapsed after the near-point dog turns ON, outputting the "deviation counter clear output" to the drive unit. (A "deviation counter clear signal output time" is set in the Pr.55.)
6)	After a "deviation counter clear output" is output to the drive unit, the OPR complete flag (Md.31 Status: b4) turns from OFF to ON, and the OPR request flag (Md.31 Status: b3) turns from ON to OFF.

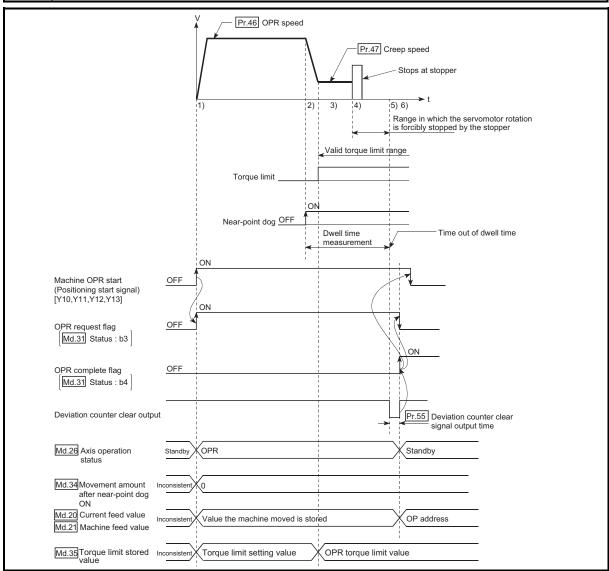


Fig. 8.4 Stopper method 1) machine OPR

Restrictions

Always limit the servomotor torque after the "Pr.47 Creep speed" is reached. If the torque is not limited, the servomotor may fail when the machine presses against the stopper. (Refer to Section 12.4.2 "Torque limit function".)

Precautions during operation

- (1) Set a value in the "Pr.49 OPR dwell time" that is equal to or higher than the movement time from the near-point dog ON to the time the machine presses against the stopper.
- (2) The workpiece will continue decelerating and stop if the "Pr.49 OPR dwell time" elapses during deceleration from the "Pr.46 OPR speed", thus causing an error "Dwell time fault" (error code: 205).

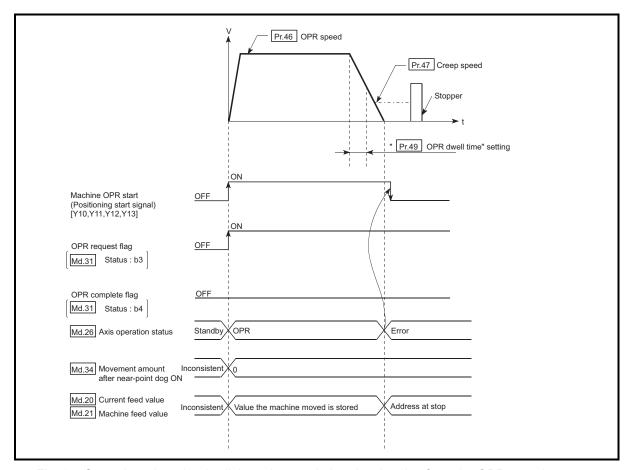


Fig. 8.5 Operation when the dwell time elapses during deceleration from the OPR speed

(3) If the "Pr.49 OPR dwell time" elapses before the stop at the stopper, the workpiece will stop at that position, and that position will be regarded as the OP. At this time, an error will not occur.

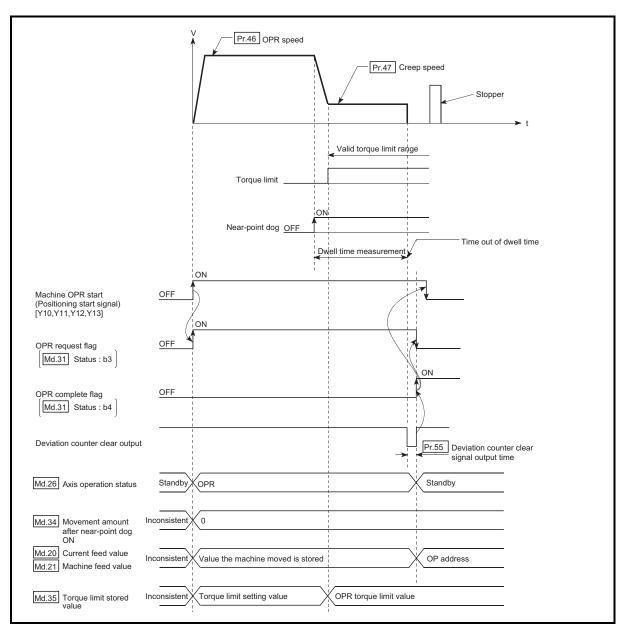


Fig. 8.6 Operation when the dwell time elapses before the stop at the stopper

- (4) The near-point dog must be turned ON until it presses against the stopper. If any range that the near-point is turned OFF exists until it presses against the stopper, executing the machine OPR from the area leads it to be pressed against the stopper at OPR speed.
- (5) Machine OPR started while the near-point dog is ON will start at the "Pr.47 Creep speed".
- (6) When a machine OPR is stopped with the stop signal, perform a machine OPR again. If the restart command is turned ON after a stop with the stop signal, an error "OPR restart not possible" (error code: 209) occurs.

8.2.5 OPR method (3): Stopper method 2)

The following shows an operation outline of the "stopper method 2)" OPR method.

Operation chart

1)	The machine OPR is started. (The machine begins the acceleration designated in " Pr.51 OPR acceleration time selection", in the direction designated in " Pr.44 OPR direction". It then moves at the " Pr.46 OPR speed" when the acceleration is completed.)
2)	The machine begins decelerating when the near-point dog ON is detected.
3)	The machine decelerates to the "Pr.47 Creep speed", and subsequently moves at that speed. (Torque limiting is required at this time. If the torque is not limited, the servomotor may fail in step 4).)
4)	The machine presses against the stopper at the creep speed and stops.
5)	The pulse output from the QD75 will stop at the zero signal after the machine stops, outputting the "deviation counter clear output" to the drive unit. (A "deviation counter clear signal output time" is set in the Pr.55.)
6)	After a "deviation counter clear output" is output to the drive unit, the OPR complete flag (Md.31) Status: b4) turns from OFF to ON, and the OPR request flag (Md.31) Status: b3) turns from ON to OFF.

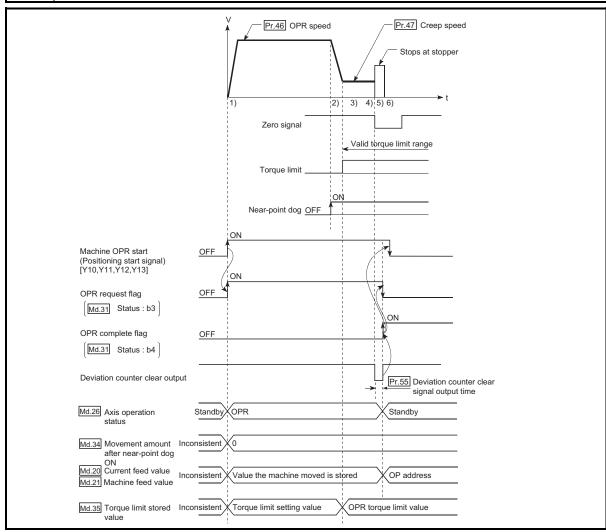


Fig. 8.7 Stopper method 2) machine OPR

Restrictions

- (1) Always limit the servomotor torque after the "Pr.47 Creep speed" is reached. If the torque is not limited, the servomotor may fail when the machine presses against the stopper. (Refer to Section 12.4.2 "Torque limit function".)
- (2) Use an external input signal as the zero signal.

Precautions during operation

(1) Input a zero signal from an external source after the machine presses against the stopper.

The workpiece will continue decelerating and stop if a zero signal is input before deceleration to the "Pr.47 Creep speed". An error "OP detection timing fault" (error code: 204) will occur after the machine stops.

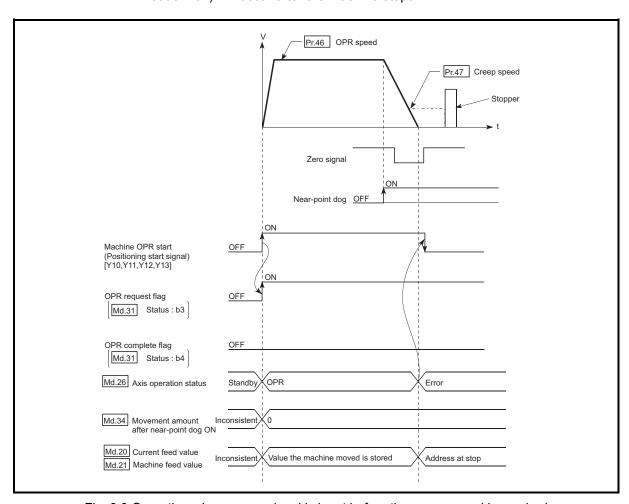


Fig. 8.8 Operation when a zero signal is input before the creep speed is reached

(2) If the zero signal is input before the workpiece stops at the stopper, the workpiece will stop at that position, and that position will be regarded as the OP.

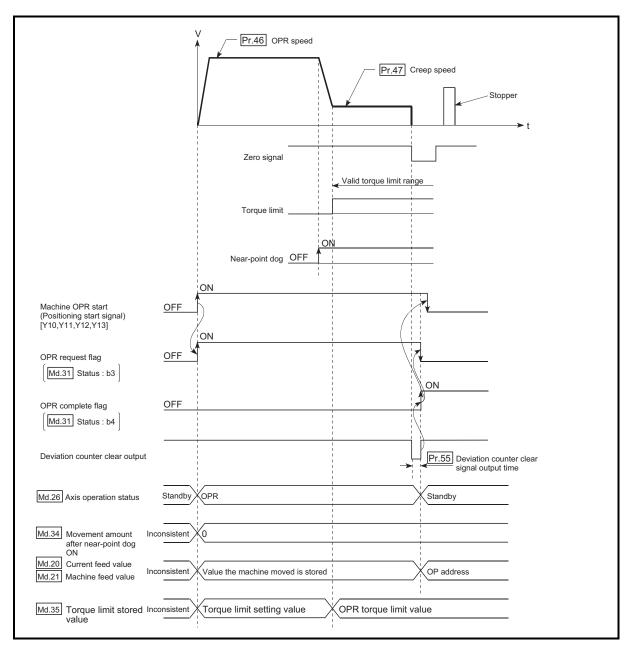


Fig. 8.9 Operation when the zero signal is input before the stop at the stopper

- (3) The near-point dog must be turned ON until it presses against the stopper. If any range that the near-point is turned OFF exists until it presses against the stopper, executing the machine OPR from the area leads it to be pressed against the stopper at ORR speed.
- (4) Machine OPR started while the near-point dog is ON will start at the "Pr.47 Creep speed".
- (5) When a machine OPR is stopped with the stop signal, perform a machine OPR again. If the restart command is turned ON after a stop with the stop signal, an error "OPR restart not possible" (error code: 209) occurs.

8.2.6 OPR method (4): Stopper method 3)

The following shows an operation outline of the "stopper method 3)" OPR method. The "stopper method 3)" method is effective when a near-point dog has not been installed. (Note that the operation is carried out from the start at the "Pr.47 Creep speed", so it will take some time until the machine OPR completion.)

Operation chart

1)	The machine OPR is started. (The machine moves at the "Pr.47 Creep speed", in the direction designated in "Pr.44 OPR direction". Torque limiting is required at this time. If the torque is not limited, the servomotor may fail when the machine presses against the stopper in step 2.)
2)	The machine presses against the stopper at the " Pr.47 Creep speed" and stops.
3)	The pulse output from the QD75 will stop at the zero signal after the machine stops, outputting the "deviation counter clear output" to the drive unit. (A "deviation counter clear signal output time" is set in the Pr.55.
4)	After a "deviation counter clear output" is output to the drive unit, the OPR complete flag (Md.31 Status: b4) turns from OFF to ON, and the OPR request flag (Md.31 Status: b3) turns from ON to OFF.

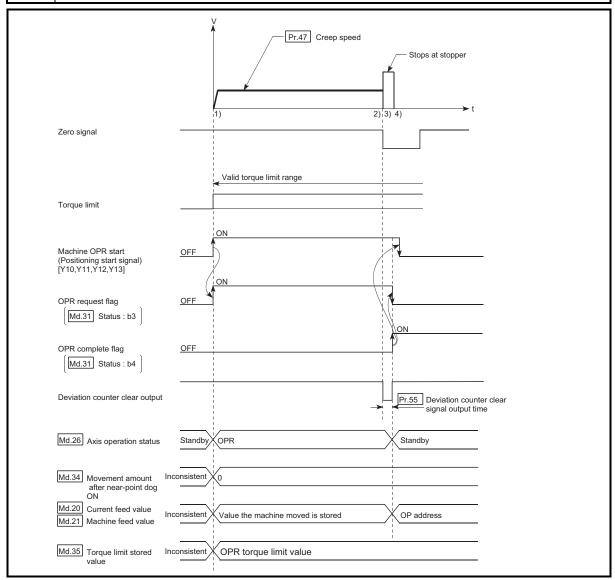


Fig. 8.10 Stopper method 3) machine OPR

Restrictions

- (1) Always limit the servomotor torque after the "Pr.47 Creep speed" is reached. If the torque is not limited, the servomotor may fail when the machine presses against the stopper. (Refer to Section 12.4.2 "Torque limit function".)
- (2) Use an external input signal as the zero signal.
- (3) The OPR retry function cannot be used in "stopper stop method 3)".

Precautions during operation

 If the zero signal is input before the workpiece stops at the stopper, the workpiece will stop at that position, and that position will become the OP. At this time an error will not occur.

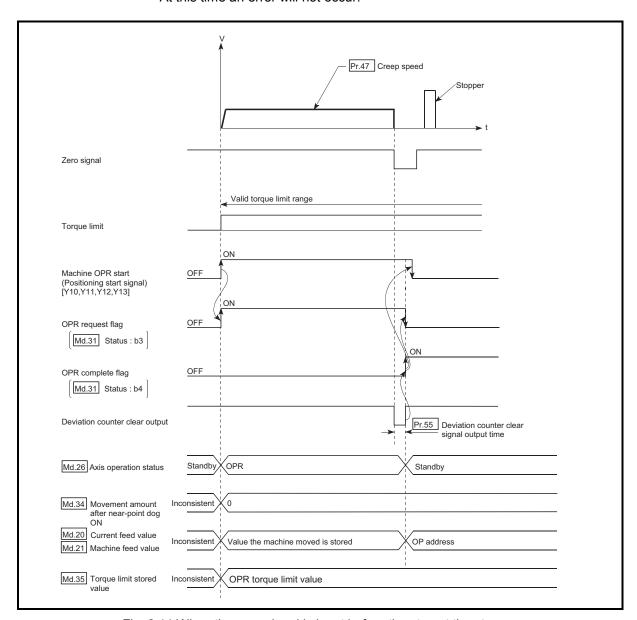


Fig. 8.11 When the zero signal is input before the stop at the stopper

(2) When a machine OPR is stopped with the stop signal, perform a machine OPR again. If the restart command is turned ON after a stop with the stop signal, an error "OPR restart not possible" (error code: 209) occurs.

8.2.7 OPR method (5): Count method1)

The following shows an operation outline of the "count method 1)" OPR method. In the "count method 1)", machine OPR can be performed even in the following situations:

- · when near-point dog is ON
- · after completion of a machine OPR

Operation chart

1)	The machine OPR is started. (The machine begins the acceleration designated in " Pr.51 OPR acceleration time selection", in the direction designated in " Pr.44 OPR direction". It then moves at the " Pr.46 OPR speed" when the acceleration is completed.)
2)	The machine begins decelerating when the near-point dog ON is detected.
3)	The machine decelerates to the " Pr.47 Creep speed", and subsequently moves at that speed.
4)	On detection of the first zero signal after the axis has traveled the movement amount set in " Pr.50 Setting for the movement amount after near-point dog ON" after near-point dog ON, the pulse output from the QD75 stops and the "deviation counter clear output" is output to the drive unit. (A "deviation counter clear signal output time" is set in Pr.55.)
5)	After a "deviation counter clear output" is output to the drive unit, the OPR complete flag Md.31 Status: b4) turns from OFF to ON, and the OPR request flag Md.31 Status: b3) turns from ON to OFF.

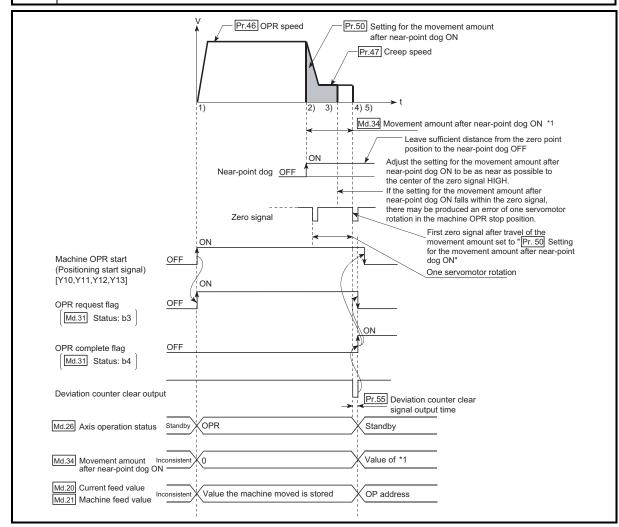


Fig. 8.12 Count method1) machine OPR

Restrictions

A pulse generator with a zero signal is required. When using a pulse generator without a zero signal, generate a zero signal using an external signal.

Precautions during operation

- (1) An error "Count method movement amount fault" (error code: 206) will occur and the operation will not start if the " Pr.50 Setting for the movement amount after near-point dog ON" is smaller than the deceleration distance from the " Pr.46 OPR speed" to " Pr.47 Creep speed".
- (2) If the speed is changed to a speed faster than " Pr.46 OPR speed" by the speed change function (refer to "12.5.1 Speed change function".) during a machine OPR, the distance to decelerate to " Pr.47 Creep speed" may not be ensured, depending on the setting value of " Pr.50 Setting for the movement amount after near-point dog ON". In this case, the error "Count method movement amount fault" (error code: 206) occurs and the Machine OPR is stopped.
- (3) The following shows the operation when a machine OPR is started while the near-point dog is ON.

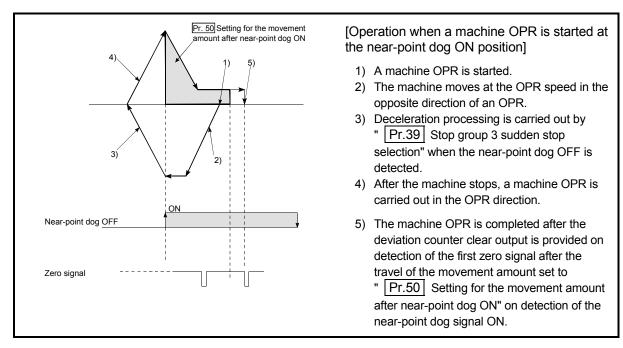


Fig. 8.13 Count method 1) machine OPR on the near-point dog ON position

8

- (4) Turn OFF the near-point dog at a sufficient distance from the OP. Although there is no harm in operation if the near-point dog is turned OFF during a machine OPR, it is recommended to leave a sufficient distance from the OP when the near-point dog is turned OFF for the following reason. If machine OPRs are performed consecutively after the near-point dog is turned OFF at the time of machine OPR completion, operation will be performed at the OPR speed until the hardware stroke limit (upper/lower limit) is reached.
 - If a sufficient distance cannot be kept, consider the use of the OPR retry function.
- (5) When a machine OPR is stopped with the stop signal, perform a machine OPR again.
 - If the restart command is turned ON after a stop with the stop signal, an error "OPR restart not possible" (error code: 209) occurs.

8.2.8 OPR method (6): Count method 2)


The following shows an operation outline of the "method 2)" OPR method.

The "count method 2)" method is effective when a "zero signal" cannot be received. (Note that compared to the "count method 1)" method, using this method will result in more deviation in the stop position during machine OPR.)

In the "count method 2)", as well as in the "count method 1)", machine OPR can be performed even in the following situations:

- · when near-point dog is ON
- · after completion of a machine OPR

Operation chart

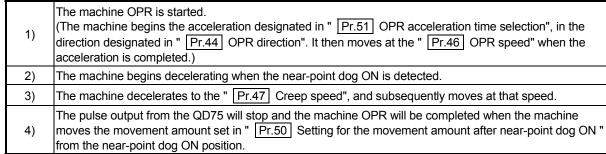

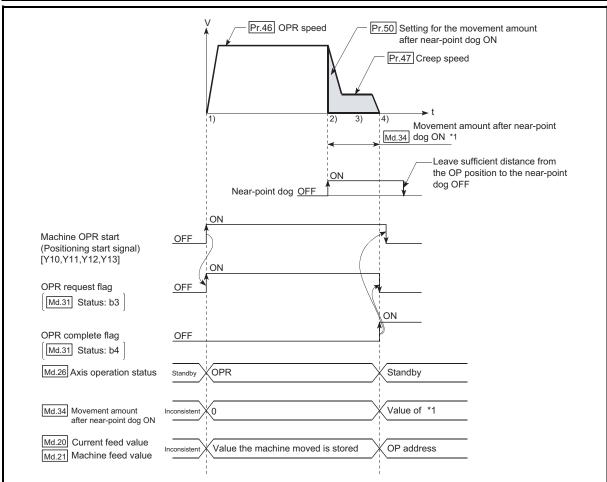



Fig. 8.14 Count method 2) machine OPR

Restrictions

When this method is used, a deviation will occur in the stop position (OP) compared to other OPR methods because an error of about 1ms occurs in taking in the near-point dog ON.

Precautions during operation

- (1) An error "Count method movement amount fault" (error code: 206) will occur and the operation will not start if the " Pr.50 Setting for the movement amount after near-point dog ON" is smaller than the deceleration distance from the " Pr.46 OPR speed" to " Pr.47 Creep speed".
- (2) If the speed is changed to a speed faster than " Pr.46 OPR speed" by the speed change function (refer to Section 12.5.1 "Speed change function".) during a machine OPR, the distance to decelerate to " Pr.47 Creep speed" may not be ensured, depending on the setting value of " Pr.50 Setting for the movement amount after near-point dog ON". In this case, the error "Count method movement amount fault" (error code: 206) occurs and the Machine OPR is stopped.
- (3) The following shows the operation when a machine OPR is started while the near-point dog is ON.

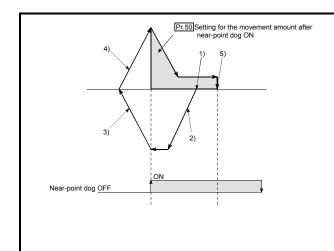

[Operation when a machine OPR is started at the near-point dog ON position]

- 1) A machine OPR is started.
- 2) The machine moves at the OPR speed in the opposite direction of an OPR.
- Deceleration processing is carried out by "Pr.39 Stop group 3 sudden stop selection" when the near-point dog OFF is detected.
- 4) After the machine stops, a machine OPR is carried out in the OPR direction.
- 5) The machine OPR is completed after moving the movement amount set in the " Pr.50 Setting for the movement amount after near-point dog ON".

Fig. 8.15 Count method 2) machine OPR on the near-point dog ON position

(4) Turn OFF the near-point dog at a sufficient distance from the OP. Although there is no harm in operation if the near-point dog is turned OFF during a machine OPR, it is recommended to leave a sufficient distance from the OP when the near-point dog is turned OFF for the following reason.

If machine OPRs are performed consecutively after the near-point dog is turned OFF at the time of machine OPR completion, operation will be performed at the OPR speed until the hardware stroke limit (upper/lower limit) is reached.

If a sufficient distance cannot be kept, consider the use of the OPR retry function.

(5) When a machine OPR is stopped with the stop signal, perform a machine OPR again.

If the restart command is turned ON after a stop with the stop signal, an error "OPR restart not possible" (error code: 209) occurs.

8.3 Fast OPR

8.3.1 Outline of the fast OPR operation

■ Fast OPR operation

After establishing OP position by a machine OPR, positioning control to the OP position is executed without using a near-point dog or a zero signal. The following shows the operation during a fast OPR start.

- 1) The fast OPR is started.
- 2) Positioning control to the OP position established by a machine OPR begins at the speed set in the OPR parameters (Pr.43 to Pr.57).
- 3) The fast OPR is completed.

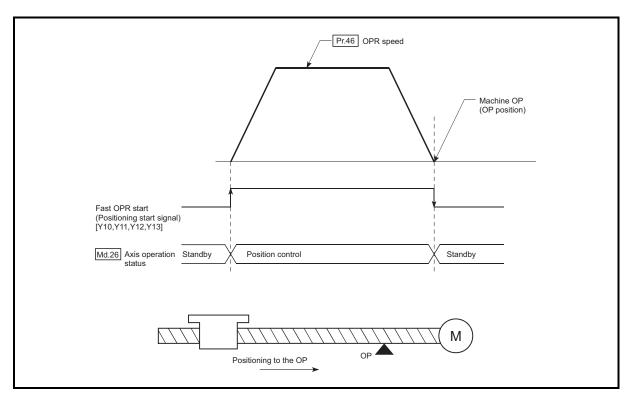


Fig. 8.16 Fast OPR

Operation timing and processing time of fast OPR

The following shows details about the operation timing and time during fast OPR.

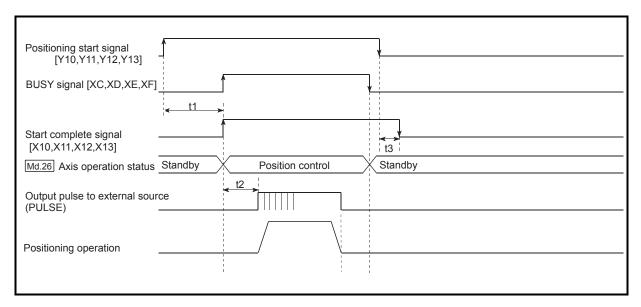


Fig. 8.17 Operation timing and processing time of fast OPR

Normal timing time

Model	t1	t2	t3
QD75P□N/QD75D□N	0.2 to 1.1ms	0.4 to 1.3ms	0 to 0.9ms
QD75P□/QD75D□	1.0 to 1.3ms	2.7 to 4.4ms	0 to 1.8ms

[•]The t1 timing time could be delayed by the operation state of other axes.

Operating restrictions

- (1) The fast OPR can only be executed after the OP position is established by executing the Machine OPR.
 - If not, the error "OPR request ON" (error code: 207) will occur. (OPR request flag (Md.31) Status: b3) must be turned OFF.)
- (2) If the fraction pulse is cleared to zero using current value changing or fixed-feed control, execute the fast OPR and an error will occur by a cleared amount.
- (3) When unlimited length feed is executed by speed control and the current machine feed value overflows or underflows once, the fast OPR cannot be executed normally.
- (4) The OPR complete flag (Md.31 Status: b4) is not turned ON.
- (5) The axis operation status during fast OPR is "Position control".

CHAPTER 9 MAJOR POSITIONING CONTROL

The details and usage of the major positioning controls (control functions using the "positioning data") are explained in this chapter.

The major positioning controls include such controls as "positioning control" in which positioning is carried out to a designated position using the address information, "speed control" in which a rotating object is controlled at a constant speed, "speed-position switching control" in which the operation is shifted from "speed control" to "position control" and "position-speed switching control" in which the operation is shifted from "position control" to "speed control".

Carry out the required settings to match each control.

9.1	Outline of major positioning controls			2
	9.1.1	Data required for major positioning control		
	9.1.2	Operation patterns of major positioning controls	9-	- 5
	9.1.3	Designating the positioning address	9	- 16
	9.1.4	Confirming the current value		
	9.1.5	Control unit "degree" handling	9	- 19
	9.1.6	Interpolation control	9	- 23
9.2	Setting	the positioning data	9	- 29
	9.2.1	Relation between each control and positioning data	9	- 29
	9.2.2	1-axis linear control	9	- 31
	9.2.3	2-axis linear interpolation control	9	- 33
	9.2.4	3-axis linear interpolation control	9	- 37
	9.2.5	4-axis linear interpolation control	9	-43
	9.2.6	1-axis fixed-feed control	9	- 47
	9.2.7	2-axis fixed-feed control (interpolation)	9	- 49
	9.2.8	3-axis fixed-feed control (interpolation)		
	9.2.9	4-axis fixed-feed control (interpolation)	9	- 57
	9.2.10	2-axis circular interpolation control with sub point designation	9.	- 60
	9.2.11	2-axis circular interpolation control with center point designation	9.	- 66
	9.2.12	3-axis helical interpolation control with sub point designation	9.	- 74
	9.2.13	3-axis helical interpolation control with center point designation	9.	- 82
	9.2.14	1-axis speed control	9.	- 91
	9.2.15	2-axis speed control	9.	- 94
	9.2.16	3-axis speed control	9.	- 97
	9.2.17	4-axis speed control	9-	101
	9.2.18	Speed-position switching control (INC mode)	9-	106
	9.2.19	Speed-position switching control (ABS mode)	9-	115
	9.2.20	Position-speed switching control	9-	123
	9.2.21	Current value changing	9-	130
	9.2.22	NOP instruction	9-	135
	9.2.23	JUMP instruction	9-	136
	9.2.24	LOOP	9-	138
	9.2.25	LEND	9-	139

9

9.1 Outline of major positioning controls

"Major positioning controls" are carried out using the "positioning data" stored in the QD75.

The basic controls such as position control and speed control are executed by setting the required items in this "positioning data", and then starting that positioning data.

The control system for the "major positioning controls" is set in setting item

" Da.2 Control system" of the positioning data.

Control defined as a "major positioning control" carries out the following types of control according to the " Da.2 Control system" setting.

	Major positioning control		De 2 Control our	Details	
Position o	Linear control	1-axis linear	ABS Linear 1	Positioning of a designated 1 axis is carried out from the start address (current stop position) to the designated	
		2-axis linear interpolation control *	ABS Linear 2 INC Linear 2	position. Using a designated 2 axes, linear interpolation control is carried out from the start address (current stop position) to the designated position.	
		3-axis linear interpolation control *	ABS Linear 3 INC Linear 3	Using a designated 3 axes, linear interpolation control is carried out from the start address (current stop position) to the designated position.	
		4-axis linear interpolation control *	ABS Linear 4 INC Linear 4	Using a designated 4 axes, linear interpolation control is carried out from the start address (current stop position) to the designated position.	
	Fixed-feed control	1-axis fixed- feed control	Fixed-feed 1	Positioning of a designated 1 axis is carried out from the start address (current stop position). (The " Md.20 Current feed value" is set to "0" at the start.)	
		2-axis fixed- feed control *	Fixed-feed 2	Using a designated 2 axes, linear interpolation control is carried out from the start address (current stop position). (The " Md.20 Current feed value" is set to "0" at the start.)	
		3-axis fixed- feed control	Fixed-feed 3	Using a designated 3 axes, linear interpolation control is carried out from the start address (current stop position). (The " Md.20 Current feed value" is set to "0" at the start.)	
		4-axis fixed- feed control	Fixed-feed 4	Using a designated 4 axes, linear interpolation control is carried out from the start address (current stop position). (The " Md.20 Current feed value" is set to "0" at the start.)	
	2-axis circular interpolation	Sub point designation	ABS Circular sub INC Circular sub	Positioning is carried out in an are noth to a nosition	
		Center point designation	ABS Circular right ABS Circular left INC Circular right INC Circular left	Positioning is carried out in an arc path to a position designated from the start point address (current stop position), using the designated 2 axes.	
	3-axis helical interpolation control *	Sub point designation	ABS helical sub INC helical sub	Circular interpolation control is carried out with two of the three axes. The other axis tracks the movement of the circular interpolation control to carry out the positioning in helical or tangential/normal control.	
		Center point designation	ABS helical right ABS helical left INC helical right INC helical left		

Major position	ing control	Da.2 Control system	Details
	1-axis speed control	Forward run speed 1 Reverse run speed 1	The speed control of the designated 1 axis is carried out.
Chood control &	2-axis speed control *	Forward run speed 2 Reverse run speed 2	The speed control of the designated 2 axes is carried out.
Speed control *	3-axis speed control *	Forward run speed 3 Reverse run speed 3	The speed control of the designated 3 axes is carried out.
	4-axis speed control *	Forward run speed 4 Reverse run speed 4	The speed control of the 4 axes is carried out.
Speed-position swi	tching control	Forward run speed/position Reverse run speed/position	The control is continued as position control (positioning for the designated address or movement amount) by turning ON the "speed-position switching signal" after first carrying out speed control.
Position-speed swi	tching control	Forward run position/speed Reverse run position/speed	The control is continued as speed control by turning ON the "position-speed switching signal" after first carrying out position control.
	NOP instruction	NOP instruction	A nonexecutable control system. When this instruction is set, the operation is transferred to the next data operation, and the instruction is not executed.
Other control	Current value changing	Current value changing	The current feed value (Md.20) is changed to an address set in the positioning data. This can be carried out by either of the following 2 methods. (The machine feed value cannot be changed.) • Current value changing using the control system • Current value changing using the current value changing start No. (No. 9003).
	JUMP instruction	JUMP instruction	An unconditional or conditional JUMP is carried out to a designated positioning data No.
	LOOP	LOOP	A repeat control is carried out by repeat LOOP to LEND.
	LEND	LEND	Control is returned to the top of the repeat control by repeat LOOP to LEND. After the repeat operation is completed specified times, the next positioning data is run.

^{*} In "2-axis linear interpolation control", "3-axis linear interpolation control", "4-axis linear interpolation control", "2-axis fixed-feed control", "3-axis fixed-feed control", "4-axis fixed-feed control", "2-axis circular interpolation control", "3-axis helical interpolation control", "2-axis speed control", 3-axis speed control", and "4-axis speed control", control is carried out so that linear and arc paths are drawn using a motor set in two or more axis directions. This kind of control is called "interpolation control". (Refer to Section 9.1.6 "Interpolation control" for details.)

9.1.1 Data required for major positioning control

The following table shows an outline of the "positioning data" configuration and setting details required to carry out the "major positioning controls".

	Setting item		Setting details		
	Da.1	Operation pattern	Set the method by which the continuous positioning data (Ex: positioning data No. 1, No. 2, No. 3) will be controlled. (Refer to Section 9.1.2.)		
	Da.2	Control system	Set the control system defined as a "major positioning control". (Refer to Section 9.1.)		
	Da.3	Acceleration time No.	Select and set the acceleration time at control start. (Select one of the four values set in Pr.9, Pr.25, Pr.26, and Pr.27 for the acceleration time.)		
	Da.4	Deceleration time No.	Select and set the deceleration time at control stop. (Select one of the four values set in Pr.10, Pr.28, Pr.29, and Pr.30 for the deceleration time.)		
0.1	Da.5	Axis to be interpolated	Set an axis to be interpolated (partner axis) during the 2-axis interpolation operation and a circular interpolation axis during the 3-axis helical interpolation control. (Refer to Section 9.1.6.)		
Positioning data No.	Da.6	Positioning address/ movement amount	Set the target value during position control. (Refer to Section 9.1.3.)		
ng c	Da.7	Arc address	Set the sub point or center point address during circular interpolation control.		
tioni	Da.8	Command speed	Set the speed during the control execution.		
Posi	Da.9	Dwell time	The time between the command pulse output is completed to the positioning completed signal is turned ON. Set it for absorbing the delay of the mechanical system to the instruction, such as the delay of the servo system (deviation).		
	Da.10	M code	Set this item when carrying out sub work (clamp and drill stops, tool replacement, etc.) corresponding to the code No. related to the positioning data execution.		
	Da.27	M code ON signal output timing	Set the M code ON signal output timing for each positioning data.		
	Da.28	ABS direction in degrees	Set the ABS direction in degrees for each positioning data.		
	Da.29	Interpolation speed designation method	Set the interpolation speed designation method for each positioning data.		

^{*} The settings and setting requirement for the setting details of Da.1 to Da.10 and Da.27 to Da.29 differ according to the Da.2 Control system. (Refer to Section 9.2 Setting the positioning data.)

Major positioning control sub functions

Refer to Section 3.2.4 "Combination of QD75 major functions and sub functions" for details on "sub functions" that can be combined with the major positioning control.

Also refer to CHAPTER 12 "CONTROL SUB FUNCTIONS" for details on each sub function.

Major positioning control from peripheral devices

"Major positioning control" can be executed from the peripheral device test mode. Refer to GX Configurator-QP Operating Manual for details on carrying out major positioning control from the peripheral device.

REMARK

• 600 positioning data (positioning data No. 1 to 600) items can be set per axis.

9.1.2 Operation patterns of major positioning controls


In "major positioning control" (high-level positioning control), " Da.1 Operation pattern" can be set to designate whether to continue executing positioning data after the started positioning data. The "operation pattern" includes the following 3 types.


Positioning complete (1) Independent positioning control (operation pattern: 00)
 Positioning continue (2) Continuous positioning control (operation pattern: 01)
 (3) Continuous path control

The following shows examples of operation patterns when "1-axis linear control (ABS linear 1)" is set in positioning data No. 1 to No. 6 of axis 1. Details of each operation pattern are shown on the following pages.

(operation pattern: 11)

< Operation example when "1-axis linear positioning" is set in the positioning data of axis 1 >

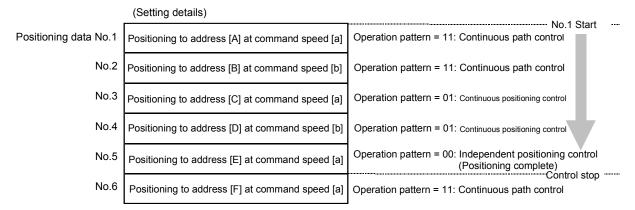

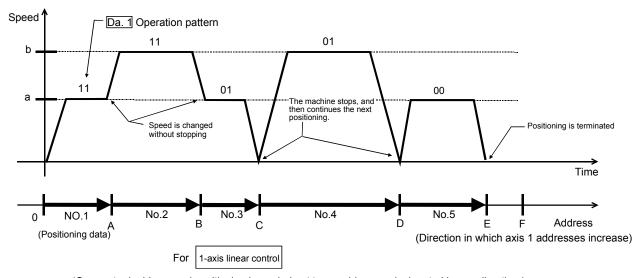

(One motor is driven, and positioning is carried out to an addresses designated in one direction.)

POINT

The BUSY signal [XC, XD, XE, XF] turns ON even when position control of movement amount 0 is executed. However, since the ON time is short, the ON status may not be detected in the sequence program.

[1] Independent positioning control (Positioning complete)

This control is set when executing only one designated data item of positioning. If a dwell time is designated, the positioning will complete after the designated time elapses.

This data (operation pattern [00] data) becomes the end of block data when carrying out block positioning. (The positioning stops after this data is executed.)

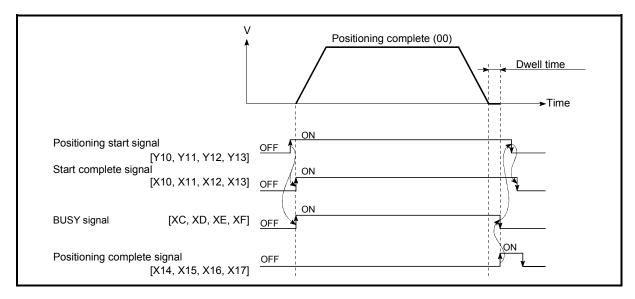


Fig. 9.1 Operation during independent positioning control

[2] Continuous positioning control

- (1) The machine always automatically decelerates each time the positioning is completed. Acceleration is then carried out after the QD75 command speed reaches 0 to carry out the next positioning data operation. If a dwell time is designated, the acceleration is carried out after the designated time elapses.
- (2) In operation by continuous positioning control (operation pattern "01"), the next positioning No. is automatically executed. Always set operation pattern "00" in the last positioning data to complete the positioning. If the operation pattern is set to positioning continue ("01" or "11"), the operation will continue until operation pattern "00" is found. If the operation pattern "00" cannot be found, the operation may be carried out until the positioning data No. 600. If the operation pattern of the positioning data No. 600 is not completed, the operation will be started again from the positioning data No. 1.

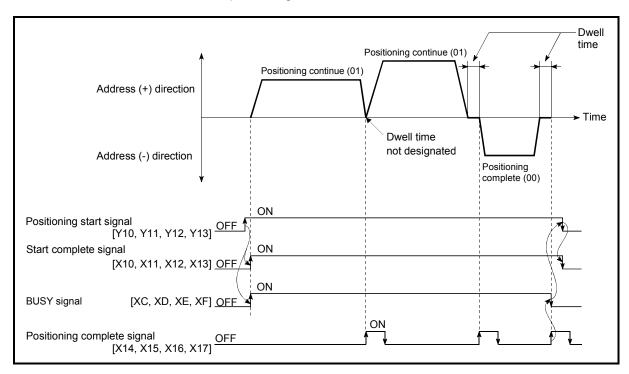


Fig. 9.2 Operation during continuous positioning control

[3] Continuous path control

(1) Continuous path control

(a) The speed is changed without deceleration stop between the command speed of the running positioning data and the command speed of the positioning data that will run next. The speed is not changed if the current speed and the next speed are equal.

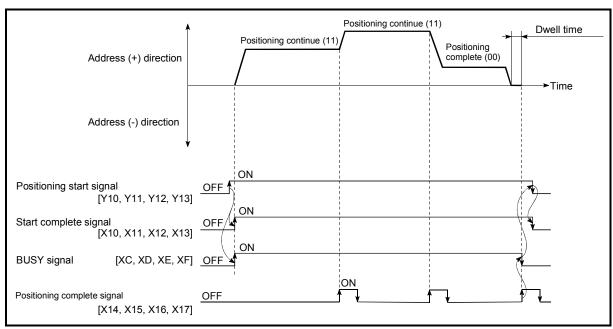


Fig. 9.3 Operation during continuous path control (Standard speed switching mode)


- (b) The speed will become the speed used in the previous positioning operation if the command speed is set to "-1".
- (c) Dwell time will be ignored, even if set.
- (d) The next positioning No. is executed automatically in operations by continuous path control (operation pattern "11"). Always complete the positioning by setting operation pattern "00" in the last positioning data. If the operation pattern is set to positioning continue ("01" or "11"), the operation will continue until operation pattern "00" is found. If the operation pattern "00" cannot be found, the operation may be carried out until the positioning data No. 600. If the operation pattern of the positioning data No. 600 is not completed, the operation will be started again from the positioning data No. 1.
- (e) The speed switching patterns include the "front-loading speed switching pattern" in which the speed is changed at the end of the current positioning side, and the "standard speed switching pattern" in which the speed is at the start of the next positioning side. (Refer to "Pr.19 Speed switching mode".)


Continuous path control — Standard speed switching mode Front-loading speed switching mode

The value of the distance $\triangle \ell$ is as follows:

- QD75P□N/QD75D□N:
- $0 \le \triangle \ell$ < (Moving distance in 0.9ms at the command speed)
- QD75P□/QD75D□:
 - $0 \leq \triangle \ell$ < (Moving distance in 1.8ms at the command speed)

[Acceleration/deceleration (setting)]

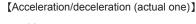

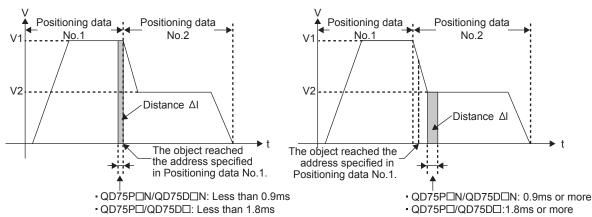

The distance $\triangle \ell$ is output when the next positioning data is running at the specified speed.

Therefore, the execution time of the next positioning data may be longer than the set execution time.*1

If this causes a control problem, take one of the following measures.

- Use the function "output timing selection of near pass control".
 By selecting "At deceleration" as an output timing, the positioning execution time of the next positioning data remains the same as it was set. (Refer to Section 12.3.4 "Output timing selection of near pass control".)
- Use the "speed change function".
 Change speed using the speed change function instead of continuous path control. (Refer to Section 12.5.1 "Speed change function".)


*1: When the command speed V1 of a positioning data and the command speed V2 of the next positioning data is different significantly, and V1 > V2

For positioning data in which automatic deceleration is set, the positioning is completed at the set address. Therefore, in continuous path control, the address where a positioning is completed may be different from the set address. However, the address will be the specified one on completion of automatic deceleration for continuous positioning control (01) or positioning complete (00).

POINT

In the continuous path control, a speed variation will not occur using the near-pass function when the positioning data No. is switched (Refer to Section 12.3.3 "Near-pass function").

- (2) Deceleration stop conditions during continuous path control Deceleration stops are basically not carried out in continuous path control, but the machine will carry out a deceleration stop to speed "0" in the following cases (a) to (c).
 - (a) When the operation pattern of the positioning data currently being executed is "continuous path control: 11", and the movement direction of the positioning data currently being executed differs from that of the next positioning data. (Only for 1-axis positioning control (Refer to the "Point" in the next page.))

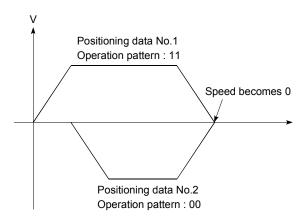


- (b) During operation by step operation.(Refer to Section 12.7.1 "Step function".)
- (c) When there is an error in the positioning data to carry out the next operation.


POINTS

(1) The movement direction is not checked during interpolation operations. Thus, automatic deceleration to a stop will not be carried out even if the movement direction is changed (See the figures below). Because of this, the interpolation axis may suddenly reverse direction.

To avoid this sudden direction reversal in the interpolation axis, set the pass point to continuous positioning control "01" instead of setting it to continuous path control "11".

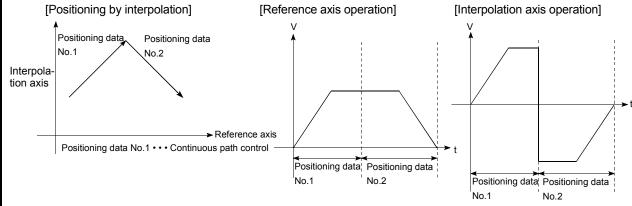

(2) When the interpolation axis reveres direction suddenly, the command pulses from QD75 are output as shown in the figure below.

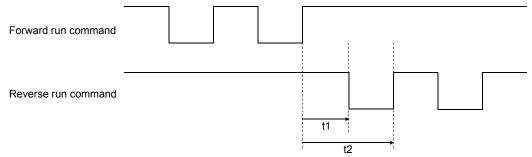

The t1 and t2 are calculated using the following expressions, where a command frequency is f (pps). t1 = 1/2 f(s) t2 = 1/f(s)

A time of t1 must be maintained by the drive unit for a specified period T (s).

(T depends on the drive unit specifications.)

If t1 cannot be maintained for T or longer, lower the " Da.8 Command speed" of the positioning data.

(3) When a "0" is set in the " Da.6 Positioning address/movement amount" of the continuous path control positioning data, the command speed of about 0.9ms (QD75P\D\QD75D\D\)) or 2ms (QD75P\D\QD75D\D\)) is reduced to 0. When a "0" is set in the " Da.6 Positioning address/movement amount" to increase the number of speed change points in the future, change the " Da.2 Control system" to the "NOP instruction" to make the control nonexecutable.


(Refer to Section 9.2.20 "NOP instruction".)


(4) In the continuous path control positioning data, assure a movement distance so that the execution time with that data is 100ms or longer, or lower the command speed.

(3) Speed handling

- (a) Continuous path control command speeds are set with each positioning data.
 - The QD75 then carries out the positioning at the speed designated with each positioning data.
- (b) The command speed can be set to "-1" in continuous path control. The control will be carried out at the speed used in the previous positioning data No. if the command speed is set to "-1". (The "current speed" will be displayed in the command speed when the positioning data is set with a peripheral device. The current speed is the speed of the positioning control being executed currently.)
 - The speed does not need to be set in each positioning data when carrying out uniform speed control if "-1" is set beforehand in the command speed.
 - 2) If the speed is changed or the override function is executed in the previous positioning data when "-1" is set in the command speed, the operation can be continued at the new speed.
 - 3) An error "No command speed" (error code: 503) occurs and positioning cannot be started if "-1" is set in the command speed of the first positioning data at start.

[Relation between the command speed and current speed]

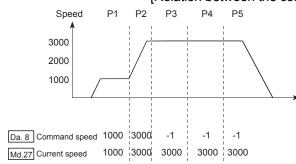

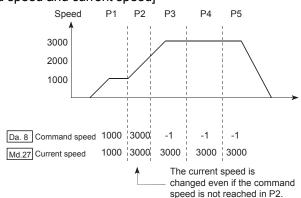

POINTS

- (1) In the continuous path control, a speed variation will not occur using the near-pass function when the positioning data is switched (Refer to Section 12.3.3 "Near-pass function").
- (2) The QD75 holds the command speed set with the positioning data, and the latest value of the speed set with the speed change request as the " Md.27 Current speed". It controls the operation at the "current speed" when "-1" is set in the command speed.
 - (Depending on the relation between the movement amount and the speed, the feedrate may not reach the command speed value, but even then the current speed will be updated.)
- (3) When the address for speed change is identified beforehand, generate and execute the positioning data for speed change by the continuous path control to carry out the speed change without requesting the speed change with a sequence program.

(4) Speed switching (Refer to " Pr.19 Speed switching mode".)

The two modes for changing the speed are shown below.

- Standard switching......Switch the speed when executing the next positioning data.
- Front-loading switching.....The speed switches at the end of the positioning data currently being executed.

(a) Standard speed switching mode

- 1) If the respective command speeds differ in the "positioning data currently being executed" and the "positioning data to carry out the next operation", the machine will accelerate or decelerate after reaching the positioning point set in the "positioning data currently being executed" and the speed will change over to the speed set in the "positioning data to carry out the next operation".
- 2) The parameters used in acceleration/deceleration to the command speed set in the "positioning data to carry out the next operation" are those of the positioning data to carry out acceleration/deceleration.

Speed switching will not be carried out if the command speeds are the same.

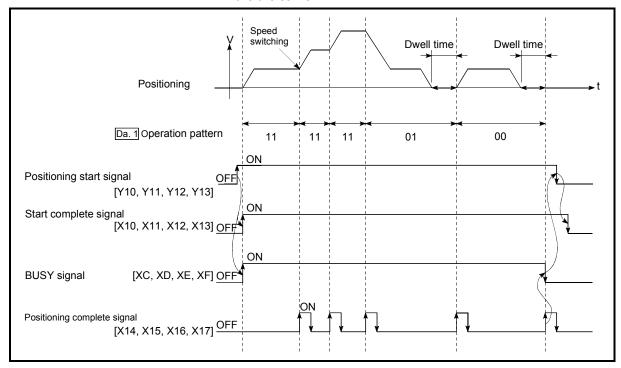



Fig. 9.4 Operation for the standard speed switching mode


3) Speed switching condition

If the movement amount is small in regard to the target speed, the current speed may not reach the target speed even if acceleration/deceleration is carried out. In this case, the machine is accelerated/decelerated so that it nears the target speed. If the movement amount will be exceeded when automatic deceleration is required (Ex. Operation patterns "00", "01"), the machine will immediately stop at the designated positioning address, and a warning "Insufficient movement distance" (warning code: 513) will occur.

[When the speed cannot change over in P2] When the relation of the speeds is P1 = P4, P2 = P3, P1 < P2. [When the movement amount is small during automatic deceleration]

The movement amount required to carry out the automatic deceleration cannot be secured, so the machine immediately stops in a speed $\neq 0$ status.

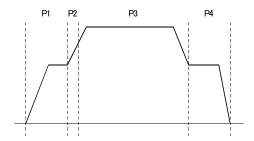

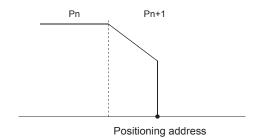

- (b) Front-loading speed switching mode
 - 1) If the respective command speeds differ in the "positioning data currently being executed" and the "positioning data to carry out the next operation", the speed will change over to the speed set in the "positioning data to carry out the next operation" at the end of the "positioning data currently being executed".
 - 2) The parameters used in acceleration/deceleration to the command speed set in the "positioning data to carry out the next operation" are those of the positioning data to carry out acceleration/deceleration. Speed switching will not be carried out if the command speeds are the same.

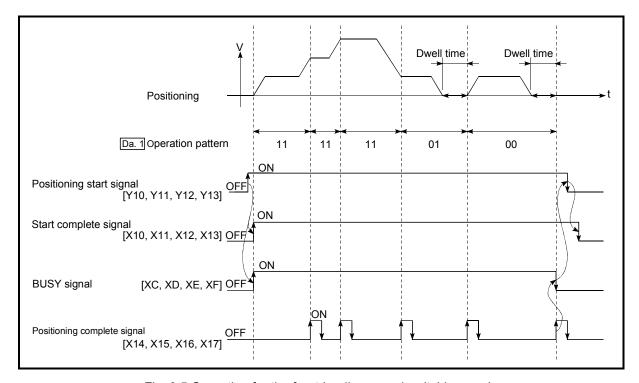


Fig. 9.5 Operation for the front-loading speed switching mode

3) Speed switching condition

If the movement amount is small in regard to the target speed, the current speed may not reach the target speed even if acceleration/deceleration is carried out. In this case, the machine is accelerated/decelerated so that it nears the target speed. If the movement amount will be exceeded when automatic deceleration is required (Ex. Operation patterns "00", "01"), the machine will immediately stop at the designated positioning address, and a warning "Insufficient movement distance" (warning code: 513) will occur.


[When the speed cannot change over to the P2 speed in P1]

When the relation of the speeds is P1 = P4, P2 = P3, P1 < P2.

P1 P2 P3 P4

[When the movement amount is small during automatic deceleration]

The movement amount required to carry out the automatic deceleration cannot be secured, so the machine immediately stops in a speed $\neq 0$ status.

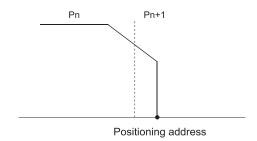

9.1.3 Designating the positioning address

The following shows the two methods for commanding the position in control using positioning data.

Absolute system

Positioning is carried out to a designated position (absolute address) having the OP as a reference. This address is regarded as the positioning address. (The start point can be anywhere.)

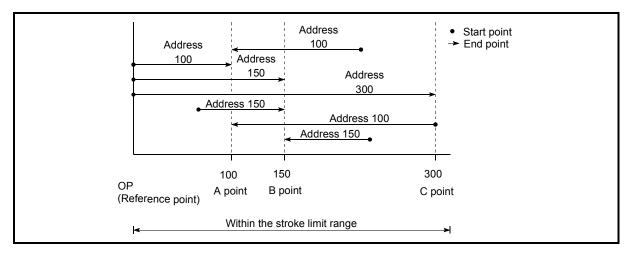


Fig. 9.6 Absolute system positioning

Incremental system

The position where the machine is currently stopped is regarded as the start point, and positioning is carried out for a designated movement amount in a designated movement direction.

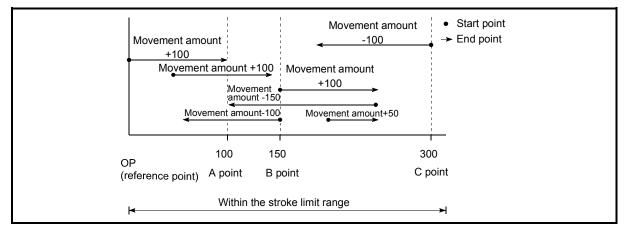


Fig. 9.7 Incremental system positioning

9.1.4 Confirming the current value

Values showing the current value

The following two types of addresses are used as values to show the position in the QD75.

These addresses ("current feed value" and "machine feed value") are stored in the monitor data area, and used in monitoring the current value display, etc.

Current feed value	 This is the value stored in " Md.20 Current feed value". This value has an address established with a "machine OPR" as a reference, but the address can be changed by changing the current value to a new value. This value is updated every 0.9ms (QD75P\(\text{\tex
Machine feed value	 This is the value stored in " Md.21 Machine feed value". This value always has an address established with a "machine OPR" as a reference. The address cannot be changed, even if the current value is changed to a new value. This value is updated every 0.9ms (QD75P\(\text{QD75D}\(\text{N}\))QD75D\(\text{D}\)) or 56.8ms (QD75P\(\text{QD75D}\(\text{QD75D}\(\text{D}\)).

The "current feed value" and "machine feed value" are used in monitoring the current value display, etc.

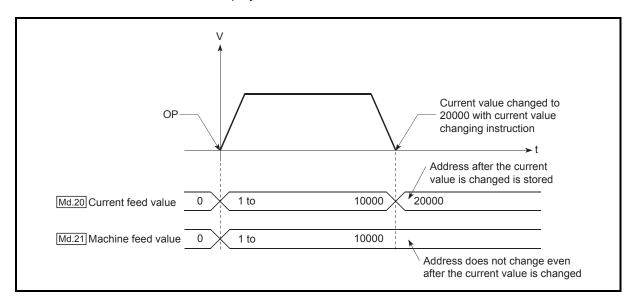


Fig. 9.8 Current feed value and machine feed value

Restrictions

A 0.9ms (QD75P \square N /QD75D \square N) or 1.8ms (QD75P \square /QD75D \square) error will occur in the current value update timing when the stored "current feed value" is used in the control.


A 0.9ms (QD75P \square N /QD75D \square N) or 56.8ms (QD75P \square /QD75D \square) error will occur in the current value update timing when the stored "machine feed value" is used in the control.

Monitoring the current value

The "current feed value" and "machine feed value" are stored in the following buffer memory addresses, and can be read using a "DFRO (P) instruction" or "DMOV (P) instruction" from the CPU module.

	Buffer memory addresses						
	Axis 1 Axis 2 Axis 3 Axis 4						
Md.20 Current feed value	800, 801	900, 901	1000, 1001	1100, 1101			
Md.21 Machine feed value	802, 803	902, 903	1002, 1003	1102, 1103			

- (1) The following shows the examples of programs to read out the current feed value of the axis 1 to D104 and D105 when X40 is turned ON.
 - (a) For the DFRO(P) instruction

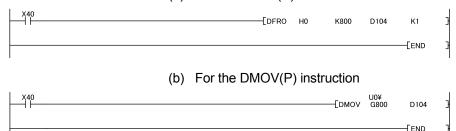


9.1.5 Control unit "degree" handling

When the control unit is set to "degree", the following items differ from when other control units are set.

[1] Current feed value and machine feed value addresses

The address of " Md.20 Current feed value" becomes a ring address from 0 to 359.99999°.

But the address of " Md.21 Machine feed value" doesn't become a ring address.

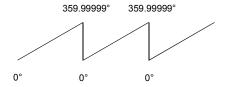


[2] Software stroke limit valid/invalid setting

With the control unit set to "degree", the software stroke limit upper and lower limit values are 0 to 359.99999.

(a) Setting to validate software stroke limit

To validate the software stroke limit, set the software stroke limit lower limit value and the upper limit value in a clockwise direction.

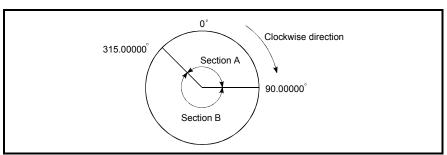

1) To set the movement range A, set as follows.

- Software stroke limit lower limit value......315.00000°
- Software stroke limit upper limit value90.00000°

2) To set the movement range B, set as follows.

- Software stroke limit lower limit value......90.00000°
- Software stroke limit upper limit value315.00000°

(b) Setting to invalidate software stroke limit


To invalidate the software stroke limit, set the software stroke limit lower limit value equal to the software stroke limit upper limit value.

The control can be carried out irrespective of the setting of the software stroke limit.

- [3] Positioning control method when the control unit is set to "degree"
 - 1) Absolute system
 - (a) When the software stroke limit is invalid

Positioning is carried out in the nearest direction to the designated address, using the current value as a reference.

(This is called "shortcut control".)

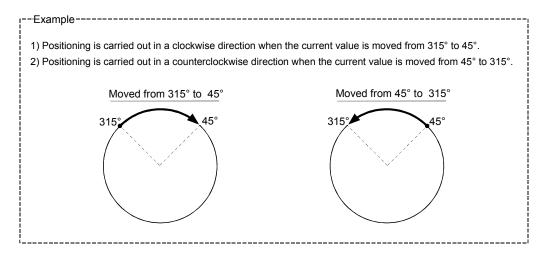

[To specify the positioning direction (not carrying out the shortcut control)]

Use "Cd.40 ABS direction in degrees" or "Da.28 ABS direction in degrees" to specify the positioning direction.

This function can be performed when the software stroke limit is invalid. When the software stroke limit is valid, an error "Illegal setting of ABS direction in unit of degree" (error code: 546) occurs and positioning is not started.

In "Cd.40 ABS direction in degrees" or "Da.28 ABS direction in degrees", the set value for the reference axis is applied to both the reference axis and interpolation axis. Even if a unit other than degree is set for the reference axis, the setting of the reference axis is applied to the interpolation axis as shown below (for 3-axis linear interpolation control (ABS3)).

Axis	Unit setting	"Cd.40 ABS direction in degrees"	Rotation direction of the axis with degree setting
Reference axis	pulse	1: ABS clockwise	0
Sub axis 1	degree	-	1: ABS clockwise
Sub axis 2	degree	-	1: ABS clockwise

[To specify the rotation direction in degrees for each positioning data]

To specify the rotation direction for each positioning data in a control executing multiple positioning data sets within one positioning operation continuously, such as continuous positioning control and continuous path control, use "Da.28 ABS"

direction in degrees".

[To set the same rotation direction for all positioning data]

Setting "Cd.40 ABS direction in degrees" enables batch specification of the rotation direction for each positioning data. To use "Cd.40 ABS direction in degrees", set "0" in "Da.28 ABS direction in degrees". When a value other than "0" is set, the setting of "Da.28 ABS direction in degrees" becomes valid. The set value in "Cd.40 ABS direction in degrees" becomes valid only when the positioning control is started. In the continuous positioning control or continuous path control, the operation is continued with the setting made at a start if the setting is changed during the operation.

Nama	Function	Bu	ıffer mem	ory addre	ess	Initial
Name	Function	Axis 1	Axis 2	Axis 3	Axis 4	value
Cd.40 ABS direction in degrees	This data item specifies the ABS moving direction in which the position control carries out when "degree" is selected as the unit. 0: Takes a shortcut. (direction setting ignored) 1: ABS clockwise 2: ABS counterclockwise	1550	1650	1750	1850	0
Da.28 ABS direction in degrees	"Cd.40 ABS direction in degrees" is set for each positioning data. 0: Use the set value in "Cd.40 ABS direction in degrees". 1: ABS clockwise 2: ABS counterclockwise 3: Takes a shortcut. (direction setting ignored)	2003 +N* (b2 to b3)	8003 +N* (b2 to b3)	14003 +N* (b2 to b3)	20003 +N* (b2 to b3)	0

^{*:} N indicates the offset address of each positioning data.

 $N = ((Positioning data No.) - 1) \times 10$


C

(b) When the software stroke limit is valid

The positioning is carried out in a clockwise/counterclockwise direction depending on the software stroke limit range setting method. Because of this, positioning with "shortcut control" may not be possible.

-Example

When the current value is moved from 0° to 315°, positioning is carried out in the clockwise direction if the software stroke limit lower limit value is 0° and the upper limit value is 345°.

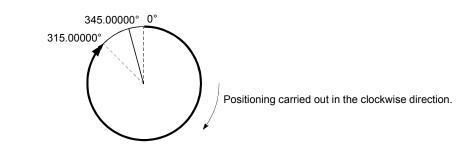

POINT

Positioning addresses are within a range of 0° to 359.99999°.

Use the incremental system to carry out positioning of one rotation or more.

2) Incremental system

Positioning is carried out for a designated movement amount in a designated movement direction when in the incremental system of positioning.

The movement direction is determined by the sign (+, –) of the movement amount.

- For a positive (+) movement direction Clockwise
- For a negative (–) movement direction ... Counterclockwise

POINT

Positioning of 360° or more can be carried out with the incremental system.

At this time, set as shown below to invalidate the software stroke limit. (Set the value with in the setting range $(0^{\circ}$ to $359.99999^{\circ})$.)

[Software stroke limit upper limit value = Software stroke limit lower limit value]

9.1.6 Interpolation control

9

■ Meaning of interpolation control

In "2-axis linear interpolation control", "3-axis linear interpolation control", "4-axis linear interpolation control", "2-axis fixed-feed control", "3-axis fixed-feed control", "4-axis fixed-feed control", "2-axis speed control", "3-axis speed control", "4-axis speed control", "2-axis circular interpolation control", and "3-axis helical interpolation control", control is carried out so that a specified path is drawn using a motor set in two to four axis directions.

This kind of control is called "interpolation control".

In interpolation control, the axis in which the control system is set is defined as the "reference axis", and the other axis is defined as the "interpolation axis".

The QD75 controls the "reference axis" following the positioning data set in the "reference axis", and controls the "interpolation axis" corresponding to the reference axis control so that a linear or arc path is drawn.

The following table shows the reference axis and interpolation axis combinations.

Axis definition Axis set to interpolation control in " Da.2 Control system"	Reference axis	Interpolation axis
2-axis linear interpolation control, "2-axis fixed-feed control, 2-axis circular interpolation control, 2-axis speed control	Any of axes 1, 2, 3, and 4	"Axes to be interpolated" set in reference axis
	Axis 1	Axis 2, Axis 3
3-axis linear interpolation control, "3-axis fixed-feed	Axis 2	Axis 3, Axis 4
control, 3-axis speed control	Axis 3	Axis 4, Axis 1
	Axis 4	Axis 1, Axis 2
	Axis 1	Axis 2, Axis 3, Axis 4
4-axis linear interpolation control, "4-axis fixed-feed	Axis 2	Axis 3, Axis 4, Axis 1
control, 4-axis speed control	Axis 3	Axis 4, Axis 1, Axis 2
	Axis 4	Axis 1, Axis 2, Axis 3

The available axis combinations in the 3-axis helical interpolation control are the same as the ones in the "3-axis linear interpolation control", "3-axis fixed-feed control", and "3-axis speed control". However, the circular interpolation axis can be specified with " Da.5 Axis to be interpolated" of the reference axis. The following table lists the combinations of the reference axis, circular interpolation axis, and linear interpolation axis for the 3-axis helical interpolation control.

Axis definition Axis set to interpolation control in " Da.2 Control system"	Reference axis	Circular interpolation axis *1	Linear interpolation axis *2	
	Axis 1	Axis 2	Axis 3	
	AXIS I	Axis 3	Axis 2	
	Axis 2	Axis 3	Axis 4	
2 avia balical interpolation central	AXIS Z	Axis 4	Axis 3	
3-axis helical interpolation control	Axis 3	Axis 4	Axis 1	
	AXIS 3	Axis 1	Axis 4	
	Axis 4	Axis 1	Axis 2	
	AXIS 4	Axis 2	Axis 1	

^{*1:} Specify with " Da.5 Axis to be interpolated" of the reference axis.

^{*2:} An axis which is not specified with " Da.5 Axis to be interpolated" of the reference axis is automatically assigned.

■ Setting the positioning data during interpolation control

When carrying out interpolation control, the same positioning data Nos. are set for the "reference axis" and the "interpolation axis".

The following table shows the "positioning data" setting items for the reference axis and interpolation axis.

C-#:	ita	Axis	Reference axis setting item	Interpolation axis setting item
Setti	ng item Da.1	Operation pattern		
	Da.2	Control system	Linear 2, 3, 4, Fixed-feed 2, 3, 4, Circular sub, Circular right, Circular left Helical sub, Helical right, Helical left Forward run speed 2, 3, 4 Reverse run speed 2, 3, 4	-
	Da.3	Acceleration time No.	©	-
	Da.4	Deceleration time No.	©	ŀ
	Da.5	Axis to be interpolated.	O *	-
g data Nos	Da.6	Positioning address/ movement amount	$\hfill \triangle$ Forward run speed 2, 3, and 4. Reverse run speed 2, 3, and 4 not required.	$\hfill \triangle$ Forward run speed 2, 3, and 4. Reverse run speed 2, 3, and 4 not required.
Same positioning data Nos	Da.7	Arc address	△ (Only for circular sub, circular right, circular left, helical sub, helical right, and helical left)	\triangle (Only for circular sub, circular right, circular left, helical sub, helical right, and helical left)
San	Da.8	Command speed	©	\triangle Only during forward run speed 2, 3, 4 and reverse run speed 2, 3, 4.
	Da.9	Dwell time	0	1
	Da.10	M code	0	△ Only for helical sub, helical right, and helical left, set the number of pitch for the linear interpolation axis.
	Da.27	M code ON signal output timing	0	-
	Da.28	ABS direction in degrees	0	-
	Da.29	Interpolation speed designation method	0	-

Setting always required

Set according to requirements

 \triangle : Setting restrictions exist

 Setting not required (Unrelated setting item, so any setting value will be ignored. Use the initial value or a value within the setting range.)

* : For 2-axis interpolation, set the partner axis. If the self-axis is set, the error "Illegal interpolation description command" (error code: 521) will occur. For 3-axis interpolation other than 3-axis helical interpolation or 4-axis interpolation, this item does not need to be set. For 3-axis helical interpolation, refer to the previous page for the reference axis and interpolation axis combinations. If axes are set in a combination other than the ones in the previous page, the error "Illegal interpolation description command" (error code: 521) will occur.

Refer to Section 5.3 "List of positioning data" for information on the setting details.

Q

Starting the interpolation control

The positioning data Nos. of the reference axis (axis in which interpolation control was set in " Da.2 Control system") are started when starting the interpolation control. (Starting of the interpolation axis is not required.)

The following errors or warnings will occur and the positioning will not start if both reference axis and the interpolation axis are started.

• Reference axis : The error "Interpolation while interpolation axis BUSY"

(error code: 519)

• Interpolation axis : The error "Control system setting error" (error code: 524),

The warning "Start during operation" (warning code: 100)

Interpolation control continuous positioning

When carrying out interpolation control in which "continuous positioning control" and "continuous path control" are designated in the operation pattern, the positioning method for all positioning data from the started positioning data to the positioning data in which "positioning complete" is set must be set to interpolation control.

The number of the interpolation axes and axes to be interpolated cannot be changed from the intermediate positioning data. An error "Control system setting error" (error code: 524) will occur and the positioning will stop if setting, which changes the number of the interpolation axes and axes to be interpolated, is carried out.

Speed during interpolation control

Either the "composite speed" or "reference axis speed" can be designated as the speed during interpolation control.

(| Pr.20 | Interpolation speed designation method)

Only the "Reference axis speed" can be designated in the following interpolation control.

When a "composite speed" is set and positioning is started, the error "Interpolation mode error" (error code: 523) occurs, and the system will not start.

- · 4-axis linear interpolation
- · 2-axis speed control
- 3-axis speed control
- · 4-axis speed control

■ Cautions in interpolation control

- (1) If a stepping motor is used, the circular interpolation control or 3-axis helical interpolation control cannot be carried out.
 - Make sure to use a servomotor when the circular interpolation control or 3-axis helical interpolation control is carried out.
- (2) If either of the axes exceeds the " Pr.8 Speed limit value" in the 2 to 4 axes speed control, the axis which exceeded the speed limit value is controlled by the speed limit value.
 - For the other axes which perform interpolation, the speed can be suppressed by the ratio of a command speed.
- (3) If any axis exceeds "Pr.8 Speed limit value" in any of the following control, the axis in excess of the speed limit value is controlled at the speed limit value. For the other axes performing interpolation, the speed can be suppressed by the ratio of a movement distance.
 - 2- to 4-axis linear interpolation control^{*1}
 - 2- to 4-axis fixed-feed control
 - 2-axis circular interpolation control
 - 3-axis helical interpolation control^{*2}
- *1: The speed limit value for the interpolation axis may not function under the following condition: "Reference axis speed" is set in in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method", the reference axis is the minor axis, and the interpolation axis is the major axis.
- *2: In 3-axis helical interpolation control, control the composite speed of the circular interpolation or the speed of the linear interpolation axis so that the speeds do not exceed "Pr.8 Speed limit value".
- (4) In 2-axis interpolation, you cannot change the combination of interpolated axes midway through operation.

POINT


• When the "reference axis speed" is set during interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "Pr.8 Speed limit value".

Interpolation speed designation method


To perform interpolation control, set the composite speed or reference axis speed in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method" of the reference axis.

0: Composite speed The movement speed for the control target is specified, and the speed for each axis is calculated by the QD75.

1: Reference axis speed The axis speed set for the reference axis is specified, and the speed for the other axis carrying out interpolation is calculated by the QD75.

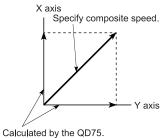

<When the composite speed is designated>

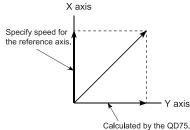

<When the reference axis speed is designated>

[To specify the interpolation speed for each positioning data]

To specify interpolation speed for each positioning data, use "Da.29 Interpolation

speed designation method".

[To set the same interpolation speed for all positioning data]

Setting <u>Pr.20</u> Interpolation speed designation method enables batch specification of the interpolation speed designation method for each positioning data.

To use "Pr.20 Interpolation speed designation method", set "0" in "Da.29 Interpolation speed designation method". When a value other than 0 is set, "Da.29 Interpolation speed designation method" will be valid.

Name	Function	Buffer memory address				Initial
Name	Function	Axis 1	Axis 2	Axis 3	Axis 4	value
Pr.20 Interpolation speed designation method	When carrying out linear interpolation/circular interpolation, set whether to specify the composite speed or reference axis speed. 0: Composite speed 1: Reference axis speed	29	179	329	479	0
Da.29 Interpolation speed designation method	Set the interpolation speed designation method for each positioning data. 0: Use the set value in "Pr.20 Interpolation speed designation method". 1: Composite speed 2: Reference axis speed	2003 +N* (b4 to b6)	8003 +N* (b4 to b6)	14003 +N* (b4 to b6)	20003 +N* (b4 to b6)	0

N indicates the offset address of each positioning data.
 N = ((Positioning data No.) - 1) × 10

Limits to interpolation control

There are limits to the interpolation control that can be executed and speed (Pr.20 Interpolation speed designation method) that can be set, depending on the "Pr.1 Unit setting" of the reference axis and interpolation axis. (For example, circular interpolation control cannot be executed if the reference axis and interpolation axis units differ.)

The following table shows the interpolation control and speed designation limits.

	Pr.20 Interpolation speed		ng *1	
" Da.2 Control system" interpolation control	designation method or Da.29 Interpolation speed designation method *5 Composite speed Composi	Reference axis and interpolation axis units differ *3		
Linear 2 (ABS, INC)	Composite speed	0	×	
Fixed-feed 2	Reference axis speed	0	0	
Circular sub (ABS, INC) Circular right (ABS, INC)	Composite speed	○ *2	×	
Circular right (ABS, INC) Circular left (ABS, INC)	Reference axis speed	×	×	
Helical sub (ABS, INC) Helical right (ABS, INC)	Composite speed	○ *2	O *4	
Helical left (ABS, INC)	Reference axis speed	×	×	
Linear 3 (ABS, INC)	Composite speed	0	×	
Fixed-feed 3	Reference axis speed	0	0	
Linear 4 (ABS, INC)	Composite speed	×	×	
Fixed-feed 4	Reference axis speed	0	0	

 $[\]bigcirc$: Setting possible, \times : Setting not possible.

- A "composite speed" is set for the 2-axis speed control, 3-axis speed control, or 4-axis linear interpolation control.
- A "reference axis speed" is set for the circular interpolation control or 3-axis helical interpolation control.

Axis operation status during interpolation control

"Interpolation" will be stored in the " Md.26 Axis operation status" during interpolation control. "Standby" will be stored when the interpolation operation is terminated. Both the reference axis and interpolation axis will carry out a deceleration stop if an error occurs during control, and "error occurring" will be stored in the operation status.

^{*1 &}quot;mm" and "inch" unit mix possible.

^{*2} The error "Circular interpolation not possible" (error code: 535) will occur and the positioning cannot be started if circular interpolation control or 3-axis helical interpolation control is set when the unit is "degree". The machine will immediately stop if "degree" is set during positioning control.

^{*3} The unit set in the reference axis will be used for the speed unit during control if the units differ or if "mm" and "inch" are combined.

^{*4} Only for the linear interpolation axis, a unit different from the one set for the reference axis can be used.

^{*5} When positioning is started with the following setting, the error "Interpolation mode error" (error code: 523) will

9.2 Setting the positioning data

9.2.1 Relation between each control and positioning data

The setting requirements and details for the setting items of the positioning data to be set differ according to the " Da.2 Control system".

The following table shows the positioning data setting items corresponding to the

The following table shows the positioning data setting items corresponding to the different types of control. Details and settings for the operation of each control are shown in Section 9.2.2 and subsequent sections.

(In this section, GX Configurator-QP or GX Works2 is used for setting positioning data.)

	N	Major positioning control	Position control Speed con				Speed control	
Positioning data setting items			1-axis linear control 2-axis linear interpolation control 3-axis linear interpolation control 4-axis linear interpolation control control 4-axis linear interpolation control	1-axis fixed-feed control 2-axis fixed-feed control 3-axis fixed-feed control 4-axis fixed-feed control		3-axis helical interpolation control	1-axis, 2-axis, 3-axis, 4-axis Speed control	Speed- position switching control
	On anation	Independent positioning control (Positioning complete)	©	©	©	©	©	©
Da.1	Operation pattern	Continuous positioning control	0	0	0	0	×	©
		Continuous path control	0	×	0	©	×	×
Da.2			Linear 1 Linear 2 Linear 3 Linear 4 *1	Fixed-feed 1 Fixed-feed 2 Fixed-feed 3 Fixed-feed 4	Circular sub Circular right Circular left *1	Helical sub Helical right Helical left *1	Forward run speed 1 Reverse run speed 1 Forward run speed 2 Reverse run speed 2 Forward run speed 3 Reverse run speed 3 Forward run speed 4 Reverse run speed 4	Forward run speed/position Reverse run speed/position *1
Da.3	Acceleration	on time No.	0	0	0	0	0	0
Da.4	Deceleration	on time No.	0	0	0	0	0	0
Da.5	Axis to be i	nterpolated		⊚: 2	2-axis —: 1, 3,	4-axis	ı	-
Da.6	Positioning amount	address/movement	©	©	©	©	-	0
Da.7	Arc addres	s	-	_	0	0	-	-
Da.8	Command	speed	©	0	0	0	0	©
Da.9	Dwell time		0	0	0	0	-	0
Da.10	M code		0	0	0	○*2	0	0
Da.27	M code ON	I signal output timing	0	0	0	0	0	0
Da.28		ion in degrees	0	0	0	0	0	0
Da.29	Interpolation method	n speed designation	–: 1-axis	control, O: 2-ax		control, 3-axis i ion control	nterpolation cor	trol, 4-axis

Major positioning control				Other control						
Positioning data setting items			Position-speed switching control	NOP instruction	Current value changing	JUMP instruction	LOOP instruction	LEND instruction		
	Operation	Independent positioning control (Positioning complete)	©	ı	0	-	_	_		
Da.1	pattern	Continuous positioning control	×	-	0	-	_	_		
		Continuous path control	×	-	×	ı	_	_		
Da.2	Da.2 Control system		Forward run position/speed Reverse run position/speed	NOP instruction	Current value changing	JUMP instruction	LOOP instruction	LEND instruction		
Da.3	Da.3 Acceleration time No.		©	-	-	-	-	_		
Da.4	Da.4 Deceleration time No.		0	-	_	1	_	_		
Da.5	Da.5 Axis to be interpolated		-	1	-	ı	_	_		
Da.6	Da.6 Positioning address/movement amount		©	-	Change destination address	-	-	_		
Da.7	a.7 Arc address		-	1	_	1	_	_		
Da.8	Command speed		0	_	_	_	-	_		
Da.9	Dwell time		0	-	_	JUMP destination- positioning data No.	_	_		
Da.10	0 M code		0	-	0	Condition data No. at JUMP	No. of repetition	_		
Da.27	7 M code ON signal output timing		0	-	0	-	_	_		
Da.28	ABS direction in degrees		0	-	-	-	_	_		
Da.29	a.29 Interpolation speed designation method		-	-	-	-	-	_		

^{○ :} Always set
○ : Set as required

REMARK

It is recommended that the "positioning data" be set whenever possible with GX Configurator-QP or GX Works2. Execution by sequence program uses many sequence programs and devices.

The execution becomes complicated, and the scan times will increase.

^{×:} Setting not possible (If the setting is made, the error "Continuous path control not possible" (error code: 516) or "New current value not possible" (error code: 515) will occur at a start.)

^{- :} Setting not required (Setting value is invalid. Use the initial values or setting values within a range where no error occurs.)

^{*1:} The "ABS (absolute) system" or "INC (incremental) system" can be used for the control system.

^{*2:} Set the M code for the reference axis and the number of pitch for the linear interpolation axis.


9.2.2 1-axis linear control

In "1-axis linear control" (" Da.2 Control system" = ABS linear 1, INC linear 1), one motor is used to carry out position control in a set axis direction.

[1] 1-axis linear control (ABS linear 1)

Operation chart

In absolute system 1-axis linear control, positioning is carried out from the current stop position (start point address) to the address (end point address) set in " Da.6 Positioning address/movement amount".

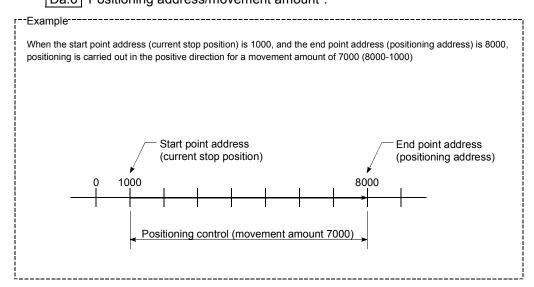

Positioning data setting example

The following table shows setting examples when "1-axis linear control (ABS linear 1)" is set in positioning data No. 1 of axis 1.


	S	etting item	Setting example	Setting details		
	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed.		
	Da.2	Control system	ABS linear 1	Set absolute system 1-axis linear control.		
No. 1	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.		
data N	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.		
Positioning	Da.5	Axis to be interpolated	ı	Setting not required (setting value will be ignored).		
Posit	Da.6	Positioning address/ movement amount	8000.0μm	Set the positioning address. (Assuming "mm" is set in " Pr.1 Unit setting".)		
-	Da.7	Arc address	ı	Setting not required (setting value will be ignored).		
Axis	Da.8	Command speed	6000.00mm/min	Set the speed during movement to the positioning address.		
	Da.9	Dwell time	500ms	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.		
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.		

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

[2] 1-axis linear control (INC linear 1)

Operation chart

In incremental system 1-axis linear control, positioning of movement amount set in " Da.6 Positioning address/movement amount" is carried out from the current stop position (start point address). The movement direction is determined by the sign of the movement amount.

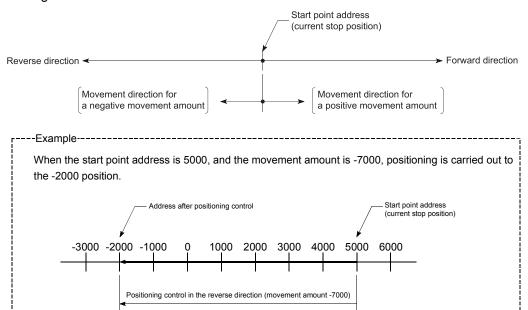

Positioning data setting example

The following table shows setting examples when "1-axis linear control (INC linear 1)" is set in positioning data No. 1 of axis 1.

	Setting item		Setting example	Setting details			
	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed.			
	Da.2	Control system	INC linear 1	Set incremental system 1-axis linear control.			
No. 1	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.			
data N	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.			
Positioning	Da.5	Axis to be interpolated	_	Setting not required (setting value will be ignored).			
Posit	Da.6	Positioning address/ movement amount	-7000.0µm	Set the movement amount. (Assuming "mm" is set in " Pr.1 Unit setting".)			
1	Da.7	Arc address	_	Setting not required (setting value will be ignored).			
Axis	Da.8	Command speed	6000.00mm/min	Set the speed during movement.			
	Da.9	Dwell time	500ms	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.			
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.			

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.


9.2.3 2-axis linear interpolation control


In "2-axis linear interpolation control" (" Da.2 Control system" = ABS linear 2, INC linear 2), two motors are used to carry out position control in a linear path while carrying out interpolation for the axis directions set in each axis. (Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

[1] 2-axis linear interpolation control (ABS linear 2)

Operation chart

In absolute system 2-axis linear interpolation control, specified two axes are used to perform linear interpolation positioning from the current stop position (start point address) to the address set in the " Da.6 Positioning address/movement amount" (end point address).

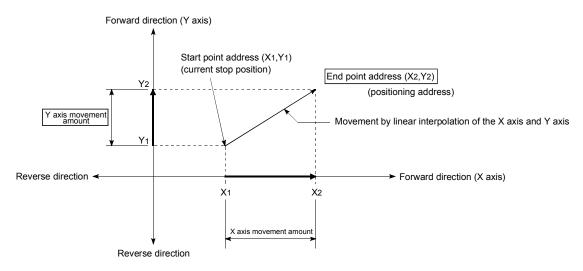

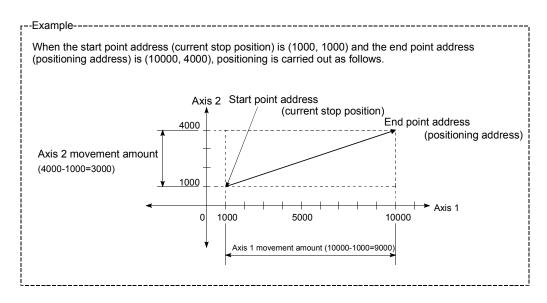

Restrictions

An error will occur and the positioning will not start in the following cases. The machine will immediately stop if the error is detected during a positioning control.

If the movement amount of each axis exceeds "1073741824 (=2³⁰)" when "0: Composite speed" is set in " Pr.20 Interpolation speed designation method" ... The error "Outside linear movement amount range" (error code: 504) occurs at a positioning start.

(The maximum movement amount that can be set in " Da.6 Positioning address/movement amount" is "1073741824 (=2³⁰)".)

Positioning data setting example

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis linear interpolation control (ABS linear 2)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setti	ing item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details	
	Da.1	Operation pattern	Positioning complete	-	Set "Positioning complete" assuming the next positioning data will not be executed.	
	Da.2	Control system	ABS linear 2	-	Set absolute system 2-axis linear interpolation control.	
1	Da.3	Acceleration time No.	1	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.	
data No.	Da.4	Deceleration time No.	0	-	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.	
	11)a 51	Axis to be interpolated	Axis 2	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.	
Positioning	Da.6	Positioning address/ movement amount	10000.0μm	4000.0μm	Set the end point address. (Assuming "mm" is set in "Pr.1 Unit setting".)	
	Da.7	Arc address	_	-	Setting not required (setting value will be ignored).	
Axis 1	Da.8	Command speed	6000.00 mm/min	-	Set the speed during movement to the end point address.	
	Da.9	Dwell time	500ms	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.	
	Da.10	M code	10	_	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.	

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT

• When the "reference axis speed" is set during 2-axis linear interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the " Pr.8 Speed limit value".

[2]


_ _


Operation chart

In incremental system 2-axis linear interpolation control, designated 2 axes are used. Linear interpolation positioning of movement amount set in

2-axis linear interpolation control (INC linear 2)

" Da.6 Positioning address/movement amount" is carried out from the current stop position (start point address). The movement direction is determined by the sign of the movement amount.

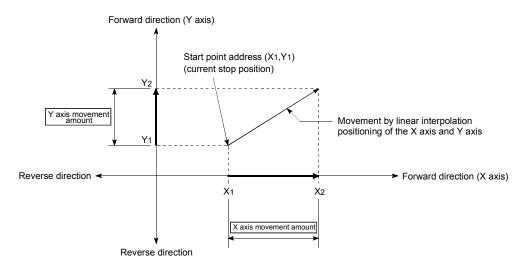

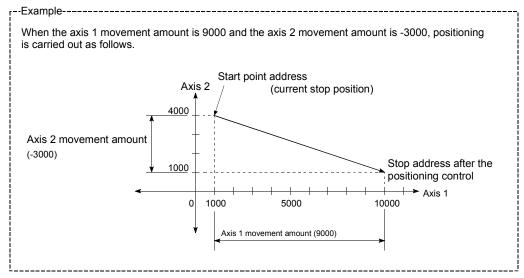

Restrictions

An error will occur and the positioning will not start in the following cases. The machine will immediately stop if the error is detected during a positioning operation.

If the movement amount of each axis exceeds "1073741824 (=2³⁰)" when "0: Composite speed" is set in " Pr.20 Interpolation speed designation method" ... The error "Outside linear movement amount range" (error code: 504) occurs at a positioning start.

(The maximum movement amount that can be set in " Da.6 Positioning address/movement amount" is "1073741824 (=2³⁰)".)

■ Positioning data setting example

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis linear interpolation control (INC linear 2)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Axis Setting item			Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details	
	Da.1	Operation pattern	Positioning complete	_	Set "Positioning complete" assuming the next positioning data will not be executed.	
	Da.2	Control system	INC linear 2	_	Set incremental system 2-axis linear interpolation control.	
_	Da.3	Acceleration time No.	1	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.	
ıta No.	Da.4	Deceleration time No.	0	ı	Designate the value set in " Pr.10 Deceleration time 0" the deceleration time at deceleration.	
Positioning data No	Da.5	Axis to be interpolated	Axis 2	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.	
Position	Da.6	Positioning address/ movement amount	9000.0μm	-3000.0µm	Set the movement amount. (Assuming "mm" is set in "Pr.1 Unit setting".)	
	Da.7	Arc address	1	ı	Setting not required (setting value will be ignored).	
Axis 1	Da.8	Command speed	6000.00 mm/min	1	Set the speed during movement.	
	Da.9	Dwell time	500ms	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.	
	Da.10	M code	10	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.	

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT

• When the "reference axis speed" is set during 2-axis linear interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "Pr.8 Speed limit value".

9.2.4 3-axis linear interpolation control


9


In "3-axis linear interpolation control" (" Da.2 Control system" = ABS linear 3, INC linear 3), three motors are used to carry out position control in a linear path while carrying out interpolation for the axis directions set in each axis. (Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

[1] 3-axis linear interpolation control (ABS linear 3)

Operation chart

In absolute system 3-axis linear interpolation control, 3 axes are used. Linear interpolation positioning is carried out from the current stop position (start point address) to the address (end point address) set in " Da.6 Positioning address/movement amount".

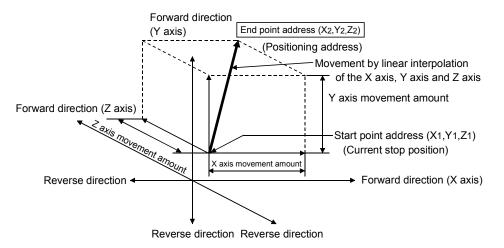

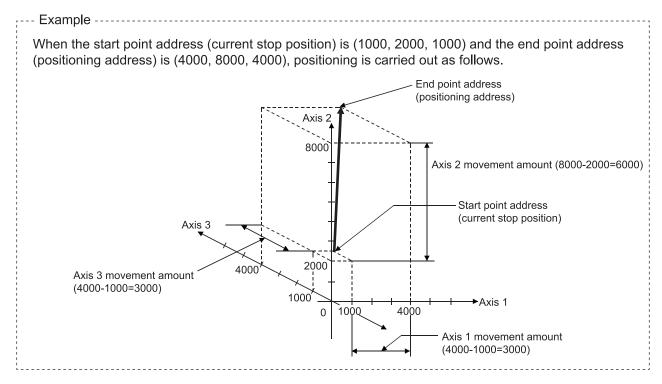

Restrictions

An error will occur and the positioning will not start in the following cases. The machine will immediately stop if the error is detected during a positioning control.

If the movement amount of each axis exceeds "1073741824 (=2³⁰)" when "0: Composite speed" is set in " Pr.20 Interpolation speed designation method" ... The error "Outside linear movement amount range" (error code: 504) occurs at a positioning start.

(The maximum movement amount that can be set in " Da.6 Positioning address/movement amount" is "1073741824 (=2³⁰)".)

Positioning data setting example

[Reference axis is designated as axis 1.]

The following table shows setting examples when "3-axis linear interpolation control (ABS linear 3)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

Axis Setting item			Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	_	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	ABS linear 3	-	-	Set absolute system 3-axis linear interpolation control.
	Da.3	Acceleration time No.	1	I	_	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
4 No. 1	Da.4	Deceleration time No.	0	-	_	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data	Da.5	Axis to be interpolated	-	ŀ	-	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2 and 3.
	Da.6	Positioning address/ movement amount	4000.0μm	8000.0µm	4000.0μm	Set the end point address. (Assuming "mm" is set in " Pr.1 Unit setting".)
Axis 1	Da.7	Arc address	_	-	_	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	-	-	Set the speed during movement to the end point address.
	Da.9	Dwell time	500ms	-	_	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	_	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS

- When the "reference axis speed" is set during 3-axis linear interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the " Pr.8 Speed limit value".
- Refer to Section 9.1.6 "Interpolation control" for the reference axis and interpolation axis combinations.


c


[2] 3-axis linear interpolation control (INC linear 3)

Operation chart

In incremental system 3-axis linear interpolation control, designated 3 axes are used. Linear interpolation positioning of movement amount set in

" Da.6 Positioning address/movement amount" is carried out from the current stop position (start point address). The movement direction is determined by the sign of the movement amount.

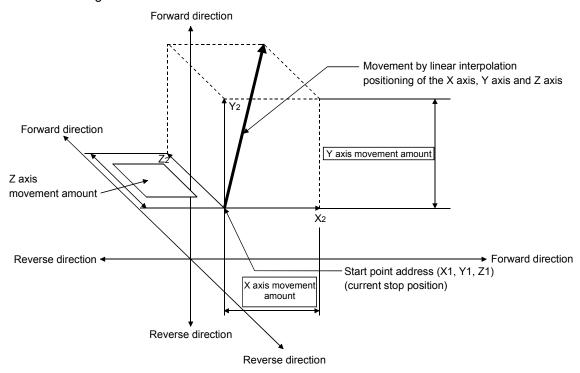

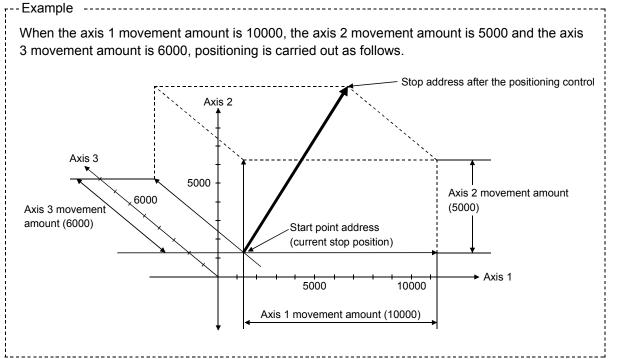

Restrictions

An error will occur and the positioning will not start in the following cases. The machine will immediately stop if the error is detected during a positioning operation.

If the movement amount of each axis exceeds "1073741824 (=2³⁰)" when "0: Composite speed" is set in " Pr.20 Interpolation speed designation method" ... The error "Outside linear movement amount range" (error code: 504) occurs at a positioning start.

(The maximum movement amount that can be set in " Da.6 Positioning address/movement amount" is "1073741824 (=2³⁰)".)

■ Positioning data setting example

[Reference axis is designated as axis 1.]

The following table shows setting examples when "3-axis linear interpolation control (INC linear 3)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

Setti	ing item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	ı	ı	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	INC linear 3	ı	ı	Set incremental system 3-axis linear interpolation control.
	Da.3	Acceleration time No.	1	-	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
a No. 1	Da.4	Deceleration time No.	0	-	-	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No.	Da.5	Axis to be interpolated	ŀ	ľ	ŀ	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2 and 3.
	Da.6	Positioning address/ movement amount	10000.0μm	5000.0μm	6000.0µm	Set the movement amount. (Assuming "mm" is set in " Pr.1 Unit setting".)
Axis 1	Da.7	Arc address	-	-	ı	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	-	_	Set the speed during movement.
	Da.9	Dwell time	500ms	-	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	_	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS

- (1) When the "reference axis speed" is set during 3-axis linear interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "Pr.8 Speed limit value".
- (2) Refer to Section 9.1.6 "Interpolation control" for the reference axis and interpolation axis combinations.

9.2.5 4-axis linear interpolation control

In "4-axis linear interpolation control" (" Da.2 Control system" = ABS linear 4, INC linear 4), four motors are used to carry out position control in a linear path while carrying out interpolation for the axis directions set in each axis. (Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

[1] 4-axis linear interpolation control (ABS linear 4)
In absolute system 4-axis linear interpolation control, 4 axes are used. Linear interpolation positioning is carried out from the current stop position (start point address) to the address (end point address) set in " Da.6 Positioning address/movement amount".

Positioning data setting example

[Reference axis is designated as axis 1.]

The following table shows setting examples when "4-axis linear interpolation control (ABS linear 4)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2, axis 3 and axis 4.)

Setti	ing item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Axis 4 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	-	-	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	ABS linear 4	-	-	_	Set absolute system 4-axis linear interpolation control.
	Da.3	Acceleration time No.	1	ı	ı	_	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
0. 1	Da.4	Deceleration time No.	0	-	-	_	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No.	Da.5	Axis to be interpolated	-	-	-	-	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2, 3 and 4.
_	Da.6	Positioning address/ movement amount	4000.0μm	8000.0µm	4000.0µm	3000.0µm	Set the end point address. (Assuming "mm" is set in " Pr.1 Unit setting".)
Axis	Da.7	Arc address	-	-	-	_	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	ı	ı	-	Set the speed during movement to the end point address.
	Da.9	Dwell time	500ms	-	-	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	-	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS

- (1) When the "reference axis speed" is set during 4-axis linear interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "Pr.8 Speed limit value".
- (2) Refer to Section 9.1.6 "Interpolation control" for the reference axis and interpolation axis combinations.

- [2] 4-axis linear interpolation control (INC linear 4)
- Operation chart

In incremental system 4-axis linear interpolation control, designated 4 axes are used. Linear interpolation positioning of movement amount set in

" Da.6 Positioning address/movement amount" is carried out from the current stop position (start point address). The movement direction is determined by the sign of the movement amount.

Positioning data setting example

[Reference axis is designated as axis 1.]

The following table shows setting examples when "4-axis linear interpolation control (INC linear 4)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2, axis 3 and axis 4.)

Set	ting item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Axis 4 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	-	-	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	INC linear 4	-	ı	ı	Set incremental system 4-axis linear interpolation control.
	Da.3	Acceleration time No.	1	-	I	I	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
lo. 1	Da.4	Deceleration time No.	0	-	I	ŀ	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No.	Da.5	Axis to be interpolated	I	-	1	ŀ	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2, 3 and 4.
Axis 1	Da.6	Positioning address/ movement amount	4000.0μm	8000.0µm	4000.0μm	3000.0μm	Set the movement amount. (Assuming "mm" is set in " Pr.1 Unit setting".)
	Da.7	Arc address	ı	_	ı	ı	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	-	-	ı	Set the speed during movement.
	Da.9	Dwell time	500ms	-	-	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	_	_	_	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS

- (1) When the "reference axis speed" is set during 4-axis linear interpolation control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the
 - " Pr.8 Speed limit value".
- (2) Refer to Section 9.1.6 "Interpolation control" for the reference axis and interpolation axis combinations.

9.2.6 1-axis fixed-feed control

9


In "1-axis fixed-feed control" (" Da.2 Control system" = fixed-feed 1), one motor is used to carry out fixed-feed control in a set axis direction.

In fixed-feed control, any remainder of the movement amount designated in the positioning data is rounded down if less than that required for control accuracy to output the same amount of pulses.

Operation chart

In 1-axis fixed-feed control, the address (Md.20 Current feed value) of the current stop position (start point address) is set to "0". Positioning is then carried out to a position at the end of the movement amount set in Da.6 Positioning address/movement amount".

The movement direction is determined by the movement amount sign.

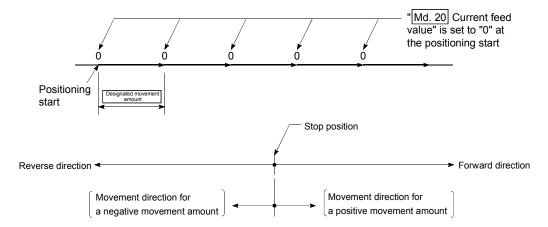

Restrictions

- (1) An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous path control" is set in " Da.1 Operation pattern". ("Continuous path control" cannot be set in fixed-feed control.)
- (2) "Fixed-feed" cannot be set in " Da.2 Control system" in the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", fixed-feed control cannot be set in positioning data No. 2.) An axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.

POINT


• When the movement amount is converted to the actual number of output pulses, a fraction appears after the decimal point, according to the movement amount per pulse. This fraction is normally retained in the QD75 and reflected at the next positioning.

For the fixed-feed control, since the movement distance is maintained constant (= the output number of pulses is maintained constant), the control is carried out after the fractional pulse is cleared to zero at start.

[Accumulation/cutoff for fractional pulses]

When movement amount per pulse is 1.0μ m and movement for 2.5μ m is executed two times;

⇒ Conversion to output pulses: $2.5[\mu \,\mathrm{m}] \div 1.0 = 2.5$ pulses

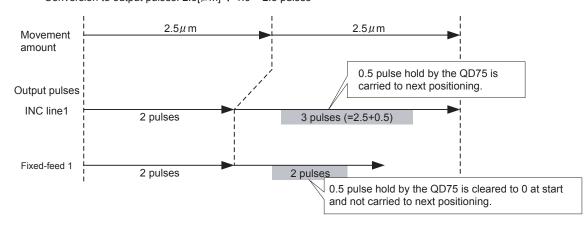

Positioning data setting example

The following table shows setting examples when "1-axis fixed-feed control (fixed-feed 1)" is set in positioning data No. 1 of axis 1.

	S	etting item	Setting example	Setting details
	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	Fixed-feed 1	Set 1-axis fixed-feed control.
No. 1	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
data N	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning	Da.5	Axis to be interpolated	_	Setting not required (setting value will be ignored).
Posit	Da.6	Positioning address/ movement amount	8000.0µm	Set the positioning address. (Assuming "mm" is set in " Pr.1 Unit setting".)
1	Da.7	Arc address	_	Setting not required (setting value will be ignored).
Axis	Da.8	Command speed	6000.00mm/min	Set the speed during movement to the positioning address.
	Da.9	Dwell time	500ms	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.7 2-axis fixed-feed control (interpolation)


In "2-axis fixed-feed control" (" Da.2 Control system" = fixed-feed 2), two motors are used to carry out fixed-feed control in a linear path while carrying out interpolation for the axis directions set in each axis.

In fixed-feed control, any remainder of the movement amount designated in the positioning data is rounded down if less than that required for control accuracy to output the same amount of pulses.

(Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

Operation chart

In incremental system 2-axis fixed-feed control, the addresses (Md.20 Current feed value) of the current stop position (start addresses) of both axes are set to "0". Linear interpolation positioning is then carried out from that position to a position at the end of the movement amount set in " Da.6 Positioning address/movement amount". The movement direction is determined by the sign of the movement amount.

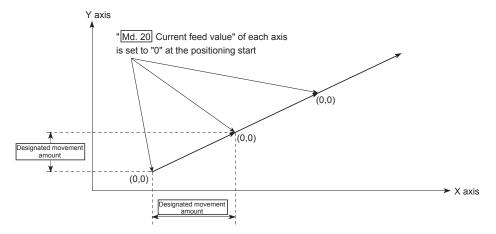

Restrictions

- (1) An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous path control" is set in " Da.1 Operation pattern". ("Continuous path control" cannot be set in fixed-feed control.)
- (2) If the movement amount of each axis exceeds "1073741824 (=2³⁰)" when "0: Composite speed" is set in " Pr.20 Interpolation speed designation method", the error "Outside linear movement amount range" (error code: 504) occurs at a positioning start and positioning cannot be started. (The maximum movement amount that can be set in " Da.6 Positioning address/movement amount" is "1073741824 (= 2³⁰)".
- (3) "Fixed-feed" cannot be set in " Da.2 Control system" in the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", fixed-feed control cannot be set in positioning data No. 2.) An axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.

■ Positioning data setting example

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis fixed-dimension feed control (fixed-feed 2)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setti	ing item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	1	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	Fixed-feed 2	-	Set 2-axis fixed-feed control.
	Da.3	Acceleration time No.	1	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
No. 1	Da.4	Deceleration time No.	0	ı	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
data	Da.5	Axis to be interpolated	Axis 2	1	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning	Da.6	Positioning address/ movement amount	8000.0µm	6000.0µm	Set the positioning address. (Assuming "mm" is set in " Pr.1 Unit setting".)
	Da.7	Arc address	-	1	Setting not required (setting value will be ignored).
Axis 1	Da.8	Command speed	6000.00 mm/min	1	Set the speed during movement. (Designate the composite speed of reference axis speed in " Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS

9


(1) When the movement amount is converted to the actual number of output pulses, a fraction appears after the decimal point, according to the movement amount per pulse. This fraction is normally retained in the QD75 and reflected at the next positioning.

For the fixed-feed control, since the movement distance is maintained constant (= the output number of pulses is maintained constant), the control is carried out after the fractional pulse is cleared to zero at start.

[Accumulation/cutoff for fractional pulses]

When movement amount per pulse is 1.0μ m and movement for 2.5μ m is executed two times;

 \Rightarrow Conversion to output pulses: 2.5[μ m] \div 1.0 = 2.5 pulses

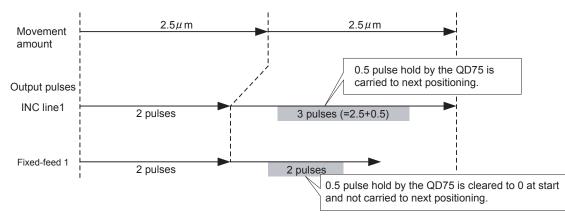

(2) When the "reference axis speed" is set during 2-axis fixed-feed control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the " Pr.8 Speed limit value".

9.2.8 3-axis fixed-feed control (interpolation)


In "3-axis fixed-feed control" (" Da.2 Control system" = fixed-feed 3), three motors are used to carry out fixed-feed control in a linear path while carrying out interpolation for the axis directions set in each axis.

In fixed-feed control, any remainder of the movement amount designated in the positioning data is rounded down if less than that required for control accuracy to output the same amount of pulses.

(Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

Operation chart

In incremental system 3-axis fixed-feed control, the addresses (Md.20) Current feed value) of the current stop position (start addresses) of every axes are set to "0". Linear interpolation positioning is then carried out from that position to a position at the end of the movement amount set in " Da.6 Positioning address/movement amount". The movement direction is determined by the sign of the movement amount.

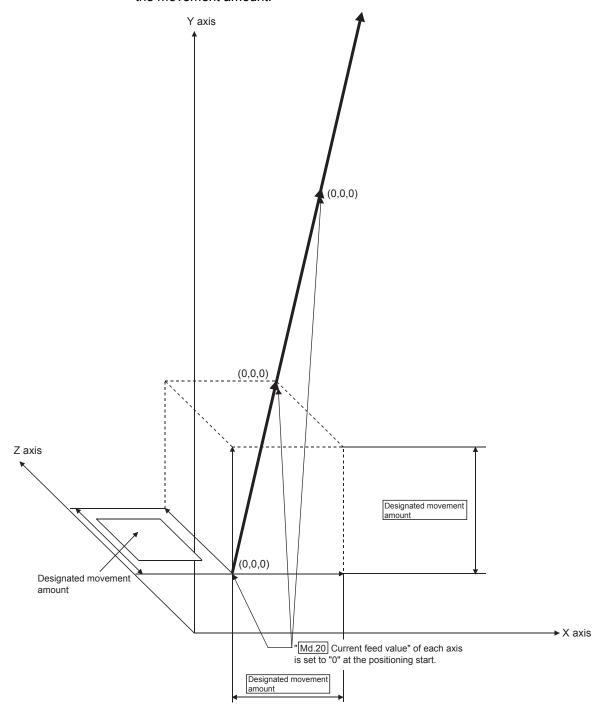

Restrictions

- (1) An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous path control" is set in " Da.1 Operation pattern". ("Continuous path control" cannot be set in fixed-feed control.)
- (2) If the movement amount of each axis exceeds "1073741824 (=2³⁰)" when "0: Composite speed" is set in " Pr.20 Interpolation speed designation method", the error "Outside linear movement amount range" (error code: 504) occurs at a positioning start and positioning cannot be started. (The maximum movement amount that can be set in " Da.6 Positioning address/movement amount" is "1073741824 (= 2³⁰)".
- (3) "Fixed-feed" cannot be set in " Da.2 Control system" in the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", fixed-feed control cannot be set in positioning data No. 2.) An axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.

Positioning data setting example

[Reference axis is designated as axis 1.]

The following table shows setting examples when "3-axis fixed-feed control (fixed-feed 3)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

Sett	Axis Setting item		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	ı	-	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	Fixed-feed 3	ı	Ι	Set 3-axis fixed-feed control.
	Da.3	Acceleration time No.	1	I	I	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
No. 1	Da.4	Deceleration time No.	0	I	I	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data	Da.5	Axis to be interpolated	ŀ	ŀ	ľ	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2 and 3.
Posi	Da.6	Positioning address/ movement amount	10000.0μm	5000.0μm	6000.0μm	Set the positioning address. (Assuming "mm" is set in " Pr.1 Unit setting".)
Axis 1	Da.7	Arc address	-	-	-	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	-	-	Set the speed during movement.
	Da.9	Dwell time	500ms	-	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

st Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS


(1) When the movement amount is converted to the actual number of output pulses, a fraction appears after the decimal point, according to the movement amount per pulse. This fraction is normally retained in the QD75 and reflected at the next positioning.

For the fixed-feed control, since the movement distance is maintained constant (= the output number of pulses is maintained constant), the control is carried out after the fractional pulse is cleared to zero at start.

[Accumulation/cutoff for fractional pulses]

When movement amount per pulse is 1.0μ m and movement for 2.5μ m is executed two times;

 \Rightarrow Conversion to output pulses: 2.5[μ m] \div 1.0 = 2.5 pulses

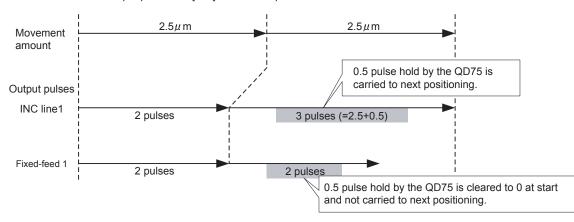

- (2) When the "reference axis speed" is set during 3-axis fixed-feed control, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "Pr.8 Speed limit value".
- (3) Refer to Section 9.1.6 "Interpolation control" for the reference axis and interpolation axis combinations.

9.2.9 4-axis fixed-feed control (interpolation)

In "4-axis fixed-feed control" (" Da.2 Control system" = fixed-feed 4), four motors are used to carry out fixed-feed control in a linear path while carrying out interpolation for the axis directions set in each axis.

In fixed-feed control, any remainder of the movement amount designated in the positioning data is rounded down if less than that required for control accuracy to output the same amount of pulses.

(Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

Operation chart

In incremental system 4-axis fixed-feed control, the addresses (Md.20 Current feed value) of the current stop position (start addresses) of every axes are set to "0". Linear interpolation positioning is then carried out from that position to a position at the end of the movement amount set in " Da.6 Positioning address/movement amount". The movement direction is determined by the sign of the movement amount.

Restrictions

- (1) An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous path control" is set in " Da.1 Operation pattern". ("Continuous path control" cannot be set in fixed-feed control.)
- (2) For 4-axis fixed-feed control, set "1: Reference axis speed" in "Pr.20 Interpolation speed designation method". An error "Interpolation mode error" (error code: 523) will occur and the operation cannot start If "0: Composite speed" is set.
- (3) "Fixed-feed" cannot be set in " Da.2 Control system" in the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", fixed-feed control cannot be set in positioning data No. 2.) An axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.

■ Positioning data setting example

[Reference axis is designated as axis 1.]

The following table shows setting examples when "4-axis fixed-feed control (fixed-feed 4)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2, axis 3 and axis 4.)

Set	Axis Setting item		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Axis 4 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	-	-	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	Fixed-feed 4	-	_	-	Set 4-axis fixed-feed control.
	Da.3	Acceleration time No.	1	ŀ	-	ŀ	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
lo. 1	Da.4	Deceleration time No.	0	ŀ	-	ŀ	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No.	Da.5	Axis to be interpolated	-	-	-	-	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2, 3 and 4.
_	Da.6	Positioning address/ movement amount	4000.0μm	8000.0μm	4000.0μm	3000.0μm	Set the positioning address. (Assuming "mm" is set in " Pr.1 Unit setting".)
Axis	Da.7	Arc address	ı	ı	_	ı	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	ı	_	ı	Set the speed during movement.
	Da.9	Dwell time	500ms	-	-	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	_	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

 $^{\,\}ast\,$ Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINTS


(1) When the movement amount is converted to the actual number of output pulses, a fraction appears after the decimal point, according to the movement amount per pulse. This fraction is normally retained in the QD75 and reflected at the next positioning.

For the fixed-feed control, since the movement distance is maintained constant (= the output number of pulses is maintained constant), the control is carried out after the fractional pulse is cleared to zero at start.

[Accumulation/cutoff for fractional pulses]

When movement amount per pulse is 1.0μ m and movement for 2.5μ m is executed two times;

 \Rightarrow Conversion to output pulses: 2.5[μ m] \div 1.0 = 2.5 pulses

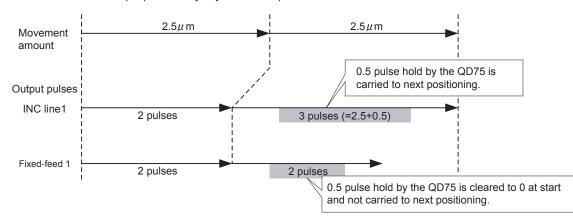

- (2) For 4-axis fixed-feed control, set the "reference axis speed" and make setting so that the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "Pr.8 Speed limit value".
- (3) Refer to Section 9.1.6 "Interpolation control" for the reference axis and interpolation axis combinations.

9.2.10 2-axis circular interpolation control with sub point designation

In "2-axis circular interpolation control" (" Da.2 Control system" = ABS circular sub, INC circular sub), two motors are used to carry out position control in an arc path passing through designated sub points, while carrying out interpolation for the axis directions set in each axis.


(Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

[1] 2-axis circular interpolation control with sub point designation (ABS circular sub)

Operation chart

In the absolute system, 2-axis circular interpolation control with sub point designation, positioning is carried out from the current stop position (start point address) to the address (end point address) set in " Da.6 Positioning address/movement amount", in an arc path that passes through the sub point address set in " Da.7 Arc address".

The resulting control path is an arc having as its center the intersection point of perpendicular bisectors of a straight line between the start point address (current stop position) and sub point address (arc address), and a straight line between the sub point address (arc address) and end point address (positioning address).

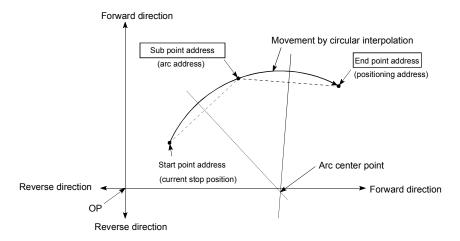

Restrictions

9

- (1) 2-axis circular interpolation control cannot be set in the following cases.
 - When "degree" is set in " Pr.1 Unit setting"
 - When the units set in " Pr.1 Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
 - When "reference axis speed" is set in " Pr.20 Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 (=2²⁹)". (The maximum radius for which circular interpolation control is possible is "536870912 (=2²⁹)"
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - When the center point address is outside the range of "-2147483648 (-2³¹) to 2147483647 (2³¹-1)"
 - ... An error "Sub point setting error" (error code: 525) will occur at positioning start.
 - When the start point address is the same as the end point address
 - ... An error "End point setting error" (error code: 526) will occur.
 - When the start point address is the same as the sub point address
 ... An error "Sub point setting error" (error code: 525) will occur.
 - When the end point address is the same as the sub point address
 - ... An error "Sub point setting error" (error code: 525) will occur.
 - When the start point address, sub point address, and end point address are in a straight line
 - ... An error "Sub point setting error" (error code: 525) will occur.

■ Positioning data setting example

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis circular interpolation control with sub point designation (ABS circular sub)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Set	Axis Setting item		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	1	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	ABS circular sub	ı	Set absolute system, 2-axis circular interpolation control with sub point designation.
	11)a 31	Acceleration time No.	1	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
No. 1	Da.4	Deceleration time No.	0	_	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data	11)a 51	Axis to be interpolated	Axis 2	_	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
sitionir	Da.6	Positioning address/ movement amount	8000.0μm	6000.0μm	Set the positioning address. (Assuming "mm" is set in " Pr.1 Unit setting".)
1 Po	Da.7	Arc address	4000.0μm	3000.0μm	Set the sub point address. (Assuming that the " Pr.1 Unit setting" is set to "mm".)
Axis	Da.8	Command speed	6000.00 mm/min	I	Set the speed when moving to the end point address. (Designate the composite speed in " Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	_	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT Set a value in " Da.8 Command speed" so that the speed of each axis does not exceed the " Pr.8 Speed limit value". (The speed limit does not function for the

9 - 62

speed calculated by the QD75 during interpolation control.)


[2] 2-axis circular interpolation control with sub point designation (INC circular sub)

Operation chart

In the incremental system, 2-axis circular interpolation control with sub point designation, positioning is carried out from the current stop position (start point address) to a position at the end of the movement amount set in

" Da.6 Positioning address/movement amount" in an arc path that passes through the sub point address set in " Da.7 Arc address". The movement direction depends on the sign (+ or -) of the movement amount.

The resulting control path is an arc having as its center the intersection point of perpendicular bisectors of the straight line between the start point address (current stop position) and sub point address (arc address) calculated from the movement amount to the sub point, and a straight line between the sub point address (arc address) and end point address (positioning address) calculated from the movement amount to the end point.

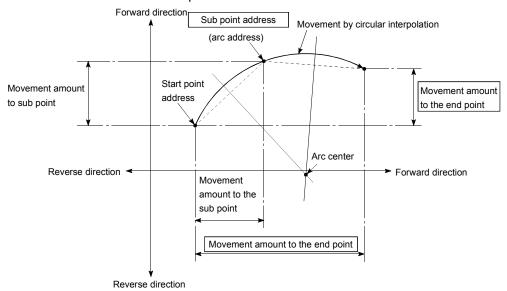

Restrictions

- (1) 2-axis circular interpolation control cannot be set in the following cases.
 - When "degree" is set in " Pr.1 Unit setting"
 - When the units set in " Pr.1 Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
 - When "reference axis speed" is set in " Pr.20 Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 (=2²⁹)". (The maximum radius for which circular interpolation control is possible is "536870912 (=2²⁹)"
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - When the auxiliary point address is outside the range of -2147483648 (-2^{31}) to 2147483647 $(2^{31}-1)$.
 - ... An error "Sub point setting error" (error code: 525) will occur.
 - When the end point address is outside the range of -2147483648 (-2^{31}) to 2147483647 $(2^{31}-1)$.
 - ... An error "End point setting error" (error code: 526) will occur.
 - When the auxiliary point address, center point address is outside the range of $-2147483648 (-2^{31})$ to $2147483647 (2^{31}-1)$ "
 - ... An error "Sub point setting error" (error code: 525) will occur at positioning start.
 - When the start point address is the same as the end point address ... An error "End point setting error" (error code: 526) will occur.
 - When the start point address is the same as the sub point address
 - ... An error "Sub point setting error" (error code: 525) will occur.

 When the end point address is the same as the sub point address
 - ... An error "Sub point address is the same as the sub point address ... An error "Sub point setting error" (error code: 525) will occur.
 - When the start point address, sub point address, and end point address are in a straight line
 - ... An error "Sub point setting error" (error code: 525) will occur.

■ Positioning data setting example

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis circular interpolation control with sub point designation (INC circular sub)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Set	ting item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	1	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	INC circular sub	ı	Set incremental system, 2-axis circular interpolation control with sub point designation.
	Da.3	Acceleration time No.	1	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
No. 1	Da.4	Deceleration time No.	0	-	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
ng data	Da.5	Axis to be interpolated	Axis 2	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning	Da.6	Positioning address/ movement amount	8000.0μm	6000.0µm	Set the movement amount. (Assuming that the " Pr.1 Unit setting" is set to "mm".)
1 Pc	Da.7	Arc address	4000.0μm	-3000.0μm	Set the sub point address. (Assuming that the " Pr.1 Unit setting" is set to "mm".)
Axis	Da.8	Command speed	6000.00 mm/min	I	Set the speed during movement. (Designate the composite speed in " Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT

Set a value in " Da.8 Command speed" so that the speed of each axis does not exceed the " Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75 during interpolation control.)

9.2.11 2-axis circular interpolation control with center point designation

In "2-axis circular interpolation control" (" Da.2 Control system" = ABS circular right, INC circular right, ABS circular left, INC circular left), two motors are used to carry out position control in an arc path having an arc address as a center point, while carrying out interpolation for the axis directions set in each axis.

(Refer to Section 9.1.6 "Interpolation control" for details on interpolation control.)

The following table shows the rotation directions, arc center angles that can be controlled, and positioning paths for the different control systems.


Control system	Rotation direction	Arc center angle that can be controlled	Positioning path
ABS circular right			Positioning path
INC circular right	Clockwise	0° < θ ≤ 360°	Start point (current stop position) $0^{\circ} < \theta \le 360^{\circ}$ (positioning address) Center point
ABS circular left	Counterclockwise	0 < 9 ≤ 360	Center point 0°< θ≤ 360°
INC circular left	Counterclockwise		Start point (current stop position) Positioning path End point (positioning address)

Circular interpolation error compensation

In circular interpolation control with center point designation, the arc path calculated from the start point address and center point address may deviate from the position of the end point address set in " Da.6 Positioning address/movement amount".

(Refer to " Pr.41 Allowable circular interpolation error width".)

(1) Calculated error \leq " Pr.41 Allowable circular interpolation error width" Circular interpolation control to the set end point address is carried out while the error compensation is carried out. (This is called "spiral interpolation".)

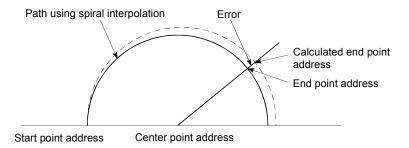

In circular interpolation control with center point designation, an angular velocity is calculated on the assumption that operation is carried out at a command speed on the arc using the radius calculated from the start point address and center point address, and the radius is compensated in proportion to the angular velocity deviated from that at the start point.

Thus, when there is a difference (error) between a radius calculated from the start point address and center point address (start point radius) and a radius calculated from the end point address and center point address (end point radius), the composite speed differs from the command speed as follows.


- * Start point radius > End point radius: As compared with the speed without error, the speed becomes slower as end point address is reached.
- * Start point radius < End point radius: As compared with the speed without error, the speed becomes faster as end point address is reached.
- (2) Calculated error > " Pr.41 Allowable circular interpolation error width"
 At the positioning start, an error "Large arc error deviation" (error code: 506)
 will occur and the control will not start. The machine will immediately stop if the
 error is detected during positioning control.

(


[1] 2-axis circular interpolation control with center point designation (ABS circular right, ABS circular left)

Operation chart

In the absolute system, 2-axis circular interpolation control with center point designation, positioning is carried out from the current stop position (start point address) to the address (end point address) set in " Da.6 Positioning address/movement amount" in an arc path having as its center the address (arc address) of the center point set in " Da.7 Arc address".

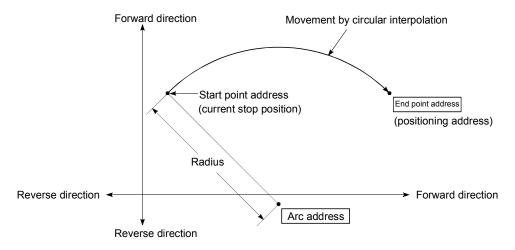

Positioning of a complete round with a radius from the start point address to the arc center point can be carried out by setting the end point address (positioning address) to the same address as the start point address.

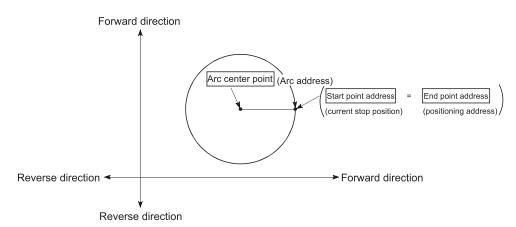

In circular interpolation control with center point designation, an angular velocity is calculated on the assumption that operation is carried out at a command speed on the arc using the radius calculated from the start point address and center point address, and the radius is compensated in proportion to the angular velocity deviated from that at the start point.

Thus, when there is a difference (error) between a radius calculated from the start point address and center point address (start point radius) and a radius calculated from the end point address and center point address (end point radius), the composite speed differs from the command speed as follows.

- * Start point radius > End point radius: As compared with the speed without error, the speed becomes slower as end point address is reached.
- * Start point radius < End point radius: As compared with the speed without error, the speed becomes faster as end point address is reached.

Restrictions

- (1) 2-axis circular interpolation control cannot be set in the following cases.
 - When "degree" is set in " Pr.1 Unit setting"
 - When the units set in " Pr.1 Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
 - When "reference axis speed" is set in " Pr.20 Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 (=2²⁹)". (The maximum radius for which circular interpolation control is possible is "536870912 (=2²⁹)"
 - ... An error "Outside radius range " (error code: 544) will occur at positioning start.
 - When the start point address is the same as the center point address ... An error "Center point setting error" (error code: 527) will occur.
 - When the end point address is the same as the center point address ... An error "Center point setting error" (error code: 527) will occur.
 - When the center point address is outside the range of -2147483648(-2³¹) to 2147483647(2³¹-1)
 - ... An error "Center point setting error" (error code: 527) will occur.

■ Positioning data setting examples

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis circular interpolation control with center point designation (ABS right arc, ABS left arc)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Set	ting item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	ABS circular right ABS circular left	I	Set absolute system, 2-axis circular interpolation control with center point designation. (Select clockwise or counterclockwise according to the control.)
_	II)a 3 I	Acceleration time No.	1	I	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
ata No.	II)a 4 I	Deceleration time No.	0	I	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No	Da.5	Axis to be interpolated	Axis 2	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positic	Da.6	Positioning address/ movement amount	8000.0µm	6000.0µm	Set the positioning address. (Assuming "mm" is set in "Pr.1" Unit setting".)
Axis 1	Da.7	Arc address	4000.0µm	3000.0μm	Set the arc address. (Assuming that the " Pr.1 Unit setting" is set to "mm".)
Ą	Da.8	Command speed	6000.00 mm/min	I	Set the speed when moving to the end point address. (Designate the composite speed in " Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	_	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT


Set a value in " Da.8 Command speed" so that the speed of each axis does not exceed the " Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75 during interpolation control.)

[2] 2-axis circular interpolation control with center point designation (INC circular right, INC circular left)


Operation chart

In the incremental system, 2-axis circular interpolation control with center point designation, positioning is carried out from the current stop position (start point address) to a position at the end of the movement amount set in

" Da.6 Positioning address/movement amount" in an arc path having as its center the address (arc address) of the center point set in " Da.7 Arc address".

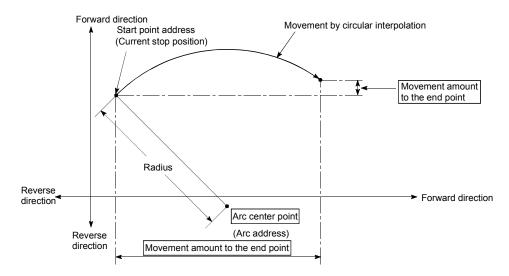

Positioning of a complete round with a radius of the distance from the start point address to the arc center point can be carried out by setting the movement amount to "0".

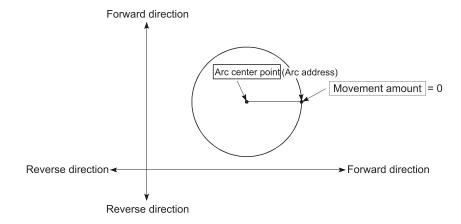

In circular interpolation control with center point designation, an angular velocity is calculated on the assumption that operation is carried out at a command speed on the arc using the radius calculated from the start point address and center point address, and the radius is compensated in proportion to the angular velocity deviated from that at the start point.

Thus, when there is a difference (error) between a radius calculated from the start point address and center point address (start point radius) and a radius calculated from the end point address and center point address (end point radius), the composite speed differs from the command speed as follows.

- * Start point radius > End point radius: As compared with the speed without error, the speed becomes slower as end point address is reached.
- * Start point radius < End point radius: As compared with the speed without error, the speed becomes faster as end point address is reached.

Restrictions

- (1) 2-axis circular interpolation control cannot be set in the following cases.
 - When "degree" is set in " Pr.1 Unit setting"
 - When the units set in " Pr.1 Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
 - When "reference axis speed" is set in " Pr.20 Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 (=2²⁹)". (The maximum radius for which circular interpolation control is possible is "536870912 (=2²⁹)"
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - When the end point address is outside the range of -2147483648(-2³¹) to 2147483647(2³¹-1)
 - ... An error "End point setting error" (error code: 526) will occur.
 - When the start point address is the same as the center point address ... An error "Center point setting error" (error code: 527) will occur.
 - When the end point address is the same as the center point address
 ... An error "Center point setting error" (error code: 527) will occur.
 - When the center point address is outside the range of -2147483648(- 2^{31}) to 2147483647(2^{31} -1)
 - ... An error "Center point setting error" (error code: 527) will occur.

■ Positioning data setting examples

[Reference axis and interpolation axis are designated as axis 1 and axis 2, respectively.]

The following table shows setting examples when "2-axis circular interpolation control with center point designation (INC circular right, INC circular left)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Set	Axis Setting item		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	1	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control system	INC circular right INC circular left	ŀ	Set incremental system, 2-axis circular interpolation control with center point designation. (Select clockwise or counterclockwise according to the control.)
_	Da.3	Acceleration time No.	1	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
data No.	Da.4	Deceleration time No.	0	ı	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
oning d	Da.5	Axis to be interpolated	Axis 2	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning	Da.6	Positioning address/ movement amount	8000.0μm	6000.0μm	Set the movement amount. (Assuming that the Pr.1 Unit setting" is set to "mm".)
Axis 1	Da.7	Arc address	4000.0μm	3000.0µm	Set the center point address. (Assuming that the " Pr.1 Unit setting" is set to "mm".)
Ą	Da.8	Command speed	6000.00 mm/min	ı	Set the speed when moving to the end point address. (Designate the composite speed in " Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	_	Set the time the machine dwells after the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.


^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT

Set a value in " Da.8 Command speed" so that the speed of each axis does not exceed the " Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75 during interpolation control.)

9.2.12 3-axis helical interpolation control with sub point designation


In the 3-axis helical interpolation control, circular interpolation control is carried out with two of the three axes. The other axis tracks the movement of the circular interpolation control to carry out "helical control "or "tangential control". (* Refer to Section 9.1.6 "Interpolation control" for interpolation control.)

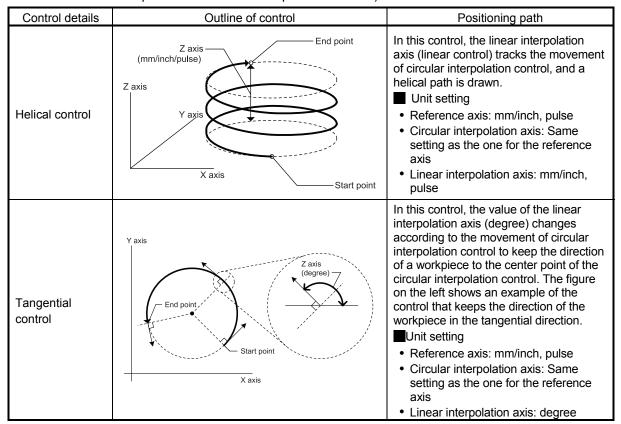

X-axis: Reference axis, Y-axis: Circular interpolation axis, Z-axis: Linear interpolation axis

Helical interpolation control speed

The command speed of the 3-axis helical interpolation control is the same as the speed of circular interpolation control (composite speed of reference axis and circular interpolation axis).

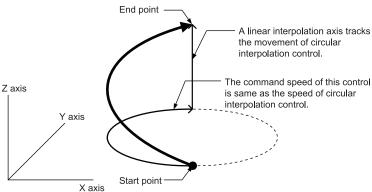


POINT

When "0: Composite speed" is set in "Pr.20 Interpolation speed designation method", the command speed of ABS3/INC3 is the same as the composite speed of the 3 axes (x axis - y axis - z axis). The command speed of 3-axis helical interpolation control is the same as the composite speed of the circular interpolation axis (x axis - y axis). When continuous path control is carried out in ABS3/INC3 and 3-axis helical interpolation control, adjust the command speed to prevent the workpiece from moving unsteadily because the workpiece movement speed may change when positioning data is switched.

■ Rotation angle of the circular interpolation axis (X axis - Y axis)

The following shows the rotation angle of the circular interpolation axis in 3-axis helical interpolation control.

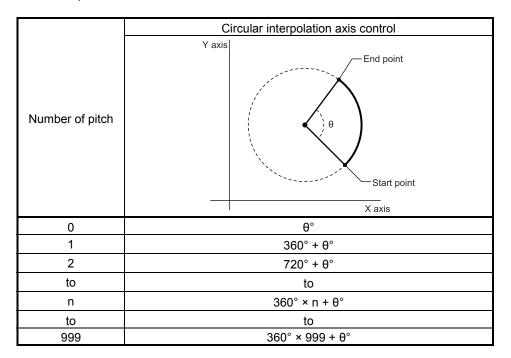

POINT

When "degree" is set for the unit setting in the absolute system, the positioning range is 0 to 359.99999°. When the axis rotates 360° or more in circular interpolation control (x axis - y axis), the tangential/normal control cannot be carried out because a degree of 360° or more cannot be set in linear control (z axis: degree). To carry out tangential/normal control in which the axis rotates 360° or more, use 3-axis helical interpolation control (INC).

Rotation direction when the unit for the linear axis (z axis) is degree


When "Pr.1 Unit setting" for the linear axis is "degree", the rotation direction is
determined according to the axis control data "Cd.40 ABS direction in degrees"
of the reference axis. To set the rotation direction for each positioning data, set the
position data "Da.28 ABS direction in degrees".

[1] 3-axis helical interpolation control with sub point designation (ABS helical sub)

Operation chart

In this control, positioning is carried out from the current stop position (X0, Y0, Z0) to the circular end address (X1, Y1) and linear axis end address (Z1) set in "Da.6 Positioning address/movement amount". Circular interpolation where the arc path passes through the address of the sub point (sub point address) set in "Da.7 Arc address" is carried out. Simultaneously, linear interpolation is carried out with the other linear axis. The control path is helically rotated for the number of pitch set in "Da.10 M code" of the linear axis to complete the positioning to the specified position.

The resulting control path is an arc having its center as the intersection point of perpendicular bisectors of a straight line between the start point address (current stop position) and sub point address (arc address), and a straight line between the sub point address (arc address) and end point address (positioning address).

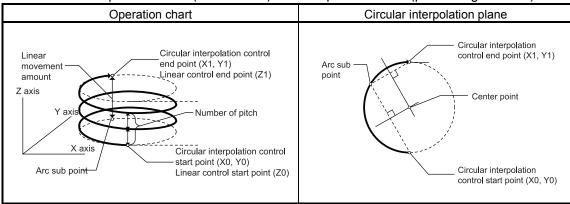

Restrictions

- (1) In the following cases, 3-axis helical interpolation control cannot be set.
 - When "degree" is set in "Pr.1 Unit setting" for the reference axis and circular interpolation axis
 - When the units set in "Pr.1 Unit setting" are different between the reference axis and circular interpolation axis. ("mm" and "inch" combinations are possible.)
 - When a method other than "composite speed" is set in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method"

- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 ($=2^{29}$)" (The maximum radius for which circular interpolation control is possible is "536870912 ($=2^{29}$)".)
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - When the center point address is outside the range of "-2147483648 (-2³¹) to 2147483647 (2³¹-1)"
 - ... An error "Sub point setting error" (error code: 525) will occur at positioning start.
 - Start point address = End point address
 - ... Error "End point setting error" (error code: 526)
 - Start point address = Sub point address
 - ... Error "Sub point setting error" (error code: 525)
 - End point address = Sub point address
 - ... Error "Sub point setting error" (error code: 525)
 - When the start point address, end point address, and sub point address are in a straight line
 - ... Error "Sub point setting error" (error code: 525)

■ Positioning data setting example

[Reference axis, circular interpolation axis, and linear interpolation axis are specified as axis 1, axis 2, and axis 3, respectively.]

The following table shows setting examples when "helical interpolation control with sub point designation (ABS)" is set in positioning data No. 1 of axis 1.

(The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

Item		Axis	Axis 1 (reference axis) setting example	Axis 2 (circular interpolation axis) setting example	Axis 3 (linear interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	-	Set "Positioning complete" assuming that the next positioning data will not be executed.
	Da.2	Control system	ABS helical sub	-	-	Set absolute system, 3-axis helical interpolation control with sub point designation.
	Da.3	Acceleration time No.	1	-	-	Specify the value set in "Pr.25 Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	-	-	Specify the value set in "Pr.10 Deceleration time 0" as the deceleration time at deceleration.
_	Da.5	Axis to be interpolated	Axis 2	-	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
data No.	Da.6	Positioning address/movement amount	8000.0µm	6000.0µm	3000.0µm	Set the end point address. (Assuming "mm" is set in "Pr.1 Unit setting".)
Positioning	Da.7	Arc address	4000.0μm	3000.0μm	-	Set the sub point address. (Assuming "mm" is set in "Pr.1 Unit setting".)
Posit	Da.8	Command speed	6000.00mm/ min	-	1	Set the speed during movement to the end point address. (Set the composite speed in "Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	1	Set the time the machine dwells from the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	50	Set this item when other sub operation commands are issued in combination with the No. 1 positioning data. Set the number of pitch for the linear interpolation axis.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT


Set a value in "Da.8 Command speed" so that the speed of each axis does not exceed the "Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75N during interpolation control.)

[2] 3-axis helical interpolation control with sub point designation (INC helical sub)

Operation chart

In this control, positioning is carried out from the current stop position (X0, Y0, Z0) to the movement amount position (X1, Y1, Z1) set in "Da.6 Positioning address/movement amount". Circular interpolation where the arc path passes through the address of the sub point (sub point address) set in "Da.7 Arc address" is carried out. Simultaneously, linear interpolation is carried out with the other linear axis. The control path is helically rotated for the number of pitch set in "Da.10 M code" of the linear axis to complete the positioning to the specified position. The movement direction is determined by the sign of the movement amount.

The resulting control path is an arc having its center as the intersection point of perpendicular bisectors of the straight line between the start point address (current stop position) and sub point address (arc address) calculated from the movement amount to the sub point, and a straight line between the sub point address (arc address) and end point address (positioning address) calculated from the movement amount to the end point.

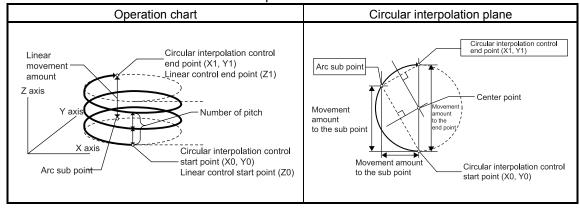

Restrictions

- (1) In the following cases, 3-axis helical interpolation control cannot be set.
 - When "degree" is set in "Pr.1 Unit setting" for the reference axis and circular interpolation axis
 - When the units set in "Pr.1 Unit setting" are different between the reference axis and circular interpolation axis. ("mm" and "inch" combinations are possible.)
 - When a method other than "composite speed" is set in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method"

- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 ($=2^{29}$)" (The maximum radius for which circular interpolation control is possible is "536870912 ($=2^{29}$)".)
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - When the sub point address is outside the range of -2147483648 (-2³¹) to 2147483647 (2³¹-1)
 - ... An error "Sub point setting error" (error code: 525) will occur at positioning start.
 - When the end point address is outside the range of -2147483648 (-2^{31}) to 2147483647 $(2^{31}-1)$
 - ... An error "End point setting error" (error code: 526) will occur at positioning start.
 - When the center point address is outside the range of "-2147483648 (-2³¹) to 2147483647 (2³¹-1)"
 - ... An error "Sub point setting error" (error code: 525) will occur at positioning start.
 - Start point address = End point address
 - ... Error "End point setting error" (error code: 526)
 - Start point address = Sub point address
 - ... Error "Sub point setting error" (error code: 525)
 - •End point address = Sub point address
 - ... Error "Sub point setting error" (error code: 525)
 - When the start point address, end point address, and sub point address are in a straight line
 - ... Error "Sub point setting error" (error code: 525)

Positioning data setting example

[Reference axis, circular interpolation axis, and linear interpolation axis are specified as axis 1, axis 2, and axis 3, respectively.]

The following table shows setting examples when "helical interpolation control with sub point designation (INC)" is set in positioning data No. 1 of axis 1.

(The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

Item		Axis		Axis 2 (circular interpolation axis) setting example	Axis 3 (linear interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	-	Set "Positioning complete" assuming that the next positioning data will not be executed.
	Da.2	Control system	INC helical sub	1	-	Set incremental system, 3-axis helical interpolation control with sub point designation.
	Da.3	Acceleration time No.	1	-	-	Specify the value set in "Pr.25 Acceleration time 1" as the acceleration time at start.
_	Da.4	Deceleration time No.	0	1	-	Specify the value set in "Pr.10 Deceleration time 0" as the deceleration time at deceleration.
ıta No.	Da.5	Axis to be interpolated	Axis 2	-	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning data No. 1	Da.6	Positioning address/move -ment amount	8000.0μm	6000.0μm	3000.0μm	Set the movement amount. (Assuming "mm" is set in "Pr.1 Unit setting".)
Posit	Da.7	Arc address	4000.0μm	-3000.0µm	-	Set the sub point address. (Assuming "mm" is set in "Pr.1 Unit setting".)
	Da.8	Command speed	6000.00mm/ min	1	1	Set the speed during movement. (Set the composite speed in "Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	-	Set the time the machine dwells from the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	50	Set this item when other sub operation commands are issued in combination with the No. 1 positioning data. Set the number of pitch for the linear interpolation axis.


^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT

Set a value in "Da.8 Command speed" so that the speed of each axis does not exceed the "Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75N during interpolation control.)

9.2.13 3-axis helical interpolation control with center point designation


In the 3-axis helical interpolation control, circular interpolation control is carried out with two of the three axes. The other axis tracks the movement of the circular interpolation control to carry out "helical control "or "tangential control". (Refer to Section 9.1.6 "Interpolation control" for interpolation control.)

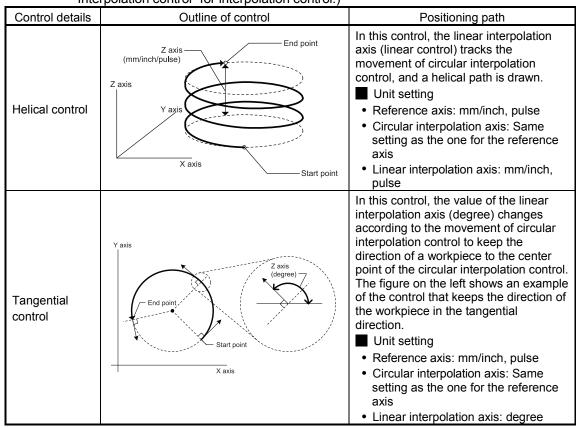

X-axis: Reference axis, Y-axis: Circular interpolation axis, Z-axis: Linear interpolation axis

Helical interpolation control speed


The command speed of the 3-axis helical interpolation control is the same as the speed of circular interpolation control (composite speed of reference axis and circular interpolation axis).

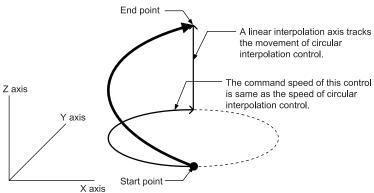

POINT

When "0: Composite speed" is set in "Pr.20 Interpolation speed designation method", the command speed of ABS3/INC3 is the same as the composite speed of the 3 axes (x axis - y axis - z axis). The command speed of 3-axis helical interpolation control is the same as the composite speed of the circular interpolation axis (x axis - y axis). When continuous path control is carried out in ABS3/INC3 and 3-axis helical interpolation control, adjust the command speed to prevent the workpiece from moving unsteadily because the workpiece movement speed may change when positioning data is switched.

■ Rotation angle of the circular interpolation axis (X axis - Y axis)
The following shows the rotation angle of the circular interpolation axis in 3-axis helical interpolation control.

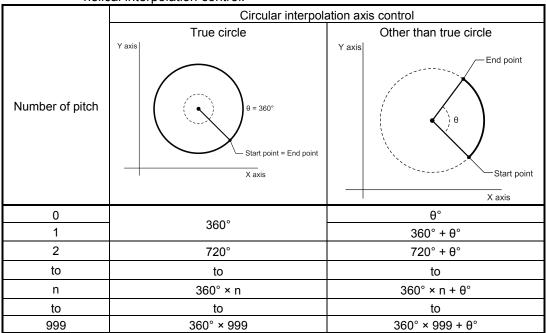


A true circle can be set only when the start point equals to the end point in 3-axis helical interpolation (ABS/INC, center point).

POINT

When "degree" is set for the unit setting in the absolute system, the positioning range is 0 to 359.99999°. When the axis rotates 360° or more in circular interpolation control (x axis - y axis), the tangential/normal control cannot be carried out because a degree of 360° or more cannot be set in linear control (z axis: degree). To carry out tangential/normal control in which the axis rotates 360° or more, use 3-axis helical interpolation control (INC).

■Rotation angle of the circular interpolation axis (X axis - Y axis)

In 3-axis helical interpolation control, "Pr.41 Allowable circular interpolation error width" is made valid as well as in circular interpolation control (2 axes). When a circular interpolation error occurs, the path of the circular interpolation control (x axis - y axis) forms a spiral as shown below.

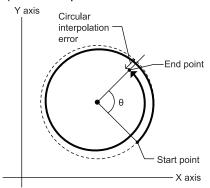


Rotation direction when the unit for the linear axis (z axis) is degree

When "Pr.1 Unit setting" for the linear axis is "degree", the rotation direction is determined according to the axis control data "Cd.40 ABS direction in degrees" of the reference axis. To set the rotation direction for each positioning data, set the position data "Da.28 ABS direction in degrees".


[1] 3-axis helical interpolation control with center point designation (ABS helical right, ABS helical left)

Operation chart

In this control, positioning is carried out from the current stop position (X0, Y0, Z0) to the circular end address (X1, Y1) and linear axis end address (Z1) set in "Da.6 Positioning address/movement amount". Circular interpolation with an arc path having its center as the address of the center point (arc address) set in "Da.7 Arc address" is carried out. Simultaneously, linear interpolation is carried out with the other linear axis. The control path is helically rotated for the number of pitch set in "Da.10 M code" of the linear axis to complete the positioning to the specified position.

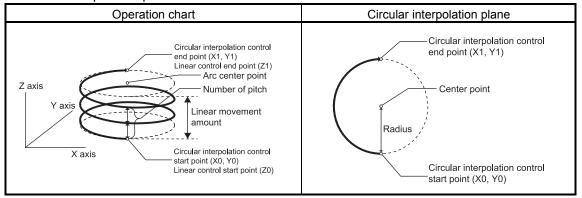

Positioning of a true circle with a radius of the distance from the start point address to the arc center point can be carried out by setting the end point address (positioning address) of the circular interpolation axis to the same address as the start point address.

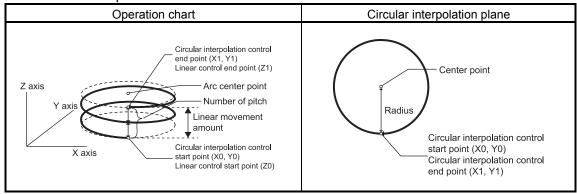

Restrictions

- (1) In the following cases, 3-axis helical interpolation control cannot be set.
 - When "degree" is set in "Pr.1 Unit setting" for the reference axis and circular interpolation axis
 - When the units set in "Pr.1 Unit setting" are different between the reference axis and circular interpolation axis. ("mm" and "inch" combinations are possible.)
 - When the "reference axis speed" is set in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 ($=2^{29}$)" (The maximum radius for which circular interpolation control is possible is "536870912 ($=2^{29}$)".)
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - Start point address = Center point address
 - ... Error "Center point setting error" (error code: 527)
 - End point address = Center point address
 - ... Error "Center point setting error" (error code: 527)
 - \bullet When the center point address is outside the range of "-2147483648 (-2 31) to 2147483647 (2 31 -1)"
 - ... Error "Center point setting error" (error code: 527)

Positioning data setting example

[Reference axis, circular interpolation axis, and linear interpolation axis are specified as axis 1, axis 2, and axis 3, respectively.]

The following table shows setting examples when "helical interpolation control with center point designation (ABS helical right, ABS helical left)" is set in positioning data No. 1 of axis 1.

(The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

Item		Axis	Axis 1 (reference axis) setting example	Axis 2 (circular interpolation axis) setting example	Axis 3 (linear interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	1	Set "Positioning complete" assuming that the next positioning data will not be executed.
	Da.2	Control system	ABS helical right ABS helical left	1	1	Set absolute system, 3-axis helical interpolation control with center point designation. (Select clockwise or counterclockwise according to the control.)
	Da.3	Acceleration time No.	1	-	-	Specify the value set in Pr.25 Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	-	-	Specify the value set in Pr.10 Deceleration time 0 as the deceleration time at deceleration.
No. 1	Da.5	Axis to be interpolated	Axis 2	-	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning data No.	Da.6	Positioning address/move -ment amount	8000.0µm	6000.0µm	3000.0µm	Set the end point address. (Assuming "mm" is set in "Pr.1 Unit setting".)
ositioni	Da.7	Arc address	4000.0μm	3000.0μm	-	Set the arc address. (Assuming "mm" is set in "Pr.1 Unit setting".)
P.	Da.8	Command speed	6000.00mm/ min	1	1	Set the speed during movement to the end point address. (Set the composite speed in "Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	-	Set the time the machine dwells from the positioning stop (pulse output stop) to the output of the positioning complete signal.
-	Da.10	M code	10	-	50	Set this item when other sub operation commands are issued in combination with the No. 1 positioning data. Set the number of pitch for the linear interpolation axis.

st Refer to Section 5.3 "List of positioning data" for information on the setting details.


POINT

Set a value in "Da.8 Command speed" so that the speed of each axis does not exceed the "Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75N during interpolation control.)


[1] 3-axis helical interpolation control with center point designation (INC helical right, INC helical left)

Operation chart

In this control, positioning is carried out from the current stop position (X0, Y0, Z0) to the movement amount position (X1, Y1, Z1) set in "Da.6 Positioning address/movement amount". Circular interpolation with an arc path having its center as the address of the center point (arc address) set in "Da.7 Arc address" is carried out. Simultaneously, linear interpolation is carried out with the other linear axis. The control path is helically rotated for the number of pitch set in "Da.10 M code" of the linear axis to complete the positioning to the specified position.

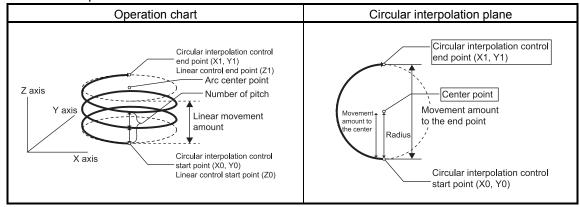

Positioning of a true circle with a radius of the distance from the start point address to the arc center point can be carried out by setting the movement amount of the circular interpolation axis to "0".

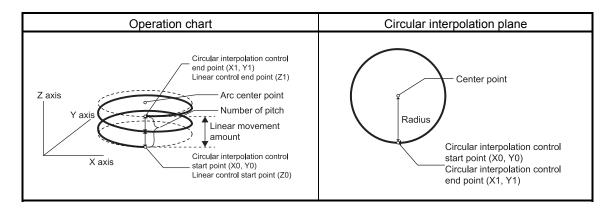

Restrictions

- (1) In the following cases, 3-axis helical interpolation control cannot be set.
 - When "degree" is set in "Pr.1 Unit setting" for the reference axis and circular interpolation axis
 - When the units set in "Pr.1 Unit setting" are different between the reference axis and circular interpolation axis. ("mm" and "inch" combinations are possible.)
 - •When the "reference axis speed" is set in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
 - When the radius exceeds "536870912 (= 2^{29})" (The maximum radius for which circular interpolation control is possible is "536870912 (= 2^{29})".)
 - ... An error "Outside radius range" (error code: 544) will occur at positioning start.
 - When the end point address is outside the range of -2147483648 (-2³¹) to 2147483647 (2³¹-1)
 - ... An error "End point setting error" (error code: 526) will occur at positioning start.
 - Start point address = Center point address
 - ... Error "Center point setting error" (error code: 527)
 - End point address = Center point address
 - ... Error "Center point setting error" (error code: 527)
 - When the center point address is outside the range of "-2147483648 (-2³¹) to 2147483647 (2³¹-1)"
 - ... Error "Center point setting error" (error code: 527)

Positioning data setting example

[Reference axis, circular interpolation axis, and linear interpolation axis are specified as axis 1, axis 2, and axis 3, respectively.]

The following table shows setting examples when "helical interpolation control with center point designation (INC helical right, INC helical left)" is set in positioning data No. 1 of axis 1.

(The required values are also set in positioning data No. 1 of axis 2 and axis 3.)

					•	I III data No. 1 of axis 2 and axis 5.)
Item	Axis		Axis 1 (reference axis) setting example	Axis 2 (circular interpolation axis) setting example	Axis 3 (linear interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	-	Set "Positioning complete" assuming that the next positioning data will not be executed.
	Da.2	Control system	ABS helical right ABS helical left	-	-	Set absolute system, 3-axis helical interpolation control with center point designation. (Select clockwise or counterclockwise according to the control.)
	Da.3	Acceleration time No.	1	-	-	Specify the value set in "Pr.25 Acceleration time 1" as the acceleration time at start.
~	Da.4	Deceleration time No.	0	-	-	Specify the value set in "Pr.10 Deceleration time 0" as the deceleration time at deceleration.
ata No.	Da.5	Axis to be interpolated	Axis 2	-	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning data No.	Da.6	Positioning address/move -ment amount	8000.0μm	6000.0µm	3000.0μm	Set the end point address. (Assuming "mm" is set in "Pr.1 Unit setting".)
Posit	Da.7	Arc address	4000.0μm	3000.0μm	-	Set the arc address. (Assuming "mm" is set in "Pr.1 Unit setting".)
	Da.8	Command speed	6000.00mm/ min	-	-	Set the speed during movement to the end point address. (Set the composite speed in "Pr.20 Interpolation speed designation method".)
	Da.9	Dwell time	500ms	-	-	Set the time the machine dwells from the positioning stop (pulse output stop) to the output of the positioning complete signal.
	Da.10	M code	10	-	50	Set this item when other sub operation commands are issued in combination with the No. 1 positioning data. Set the number of pitch for the linear interpolation axis.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

POINT

Set a value in "Da.8 Command speed" so that the speed of each axis does not exceed the "Pr.8 Speed limit value". (The speed limit does not function for the speed calculated by the QD75N during interpolation control.)

9.2.14 1-axis speed control

In "1-axis speed control" (" Da.2 Control system" = Forward run: speed 1, Reverse run: speed 1), control is carried out in the axis direction in which the positioning data has been set by continuously outputting pulses for the speed set in

" Da.8 Command speed" until the input of a stop command.

The two types of 1-axis speed control are "Forward run: speed 1" in which the control starts in the forward run direction, and "Reverse run: speed 1" in which control starts in the reverse run direction.

Operation chart

The following chart shows the operation timing for 1-axis speed control with axis 1 as the reference axis.

The "in speed control" flag (Md.31 Status: b0) is turned ON during speed control. The "Positioning complete signal" is not turned ON.


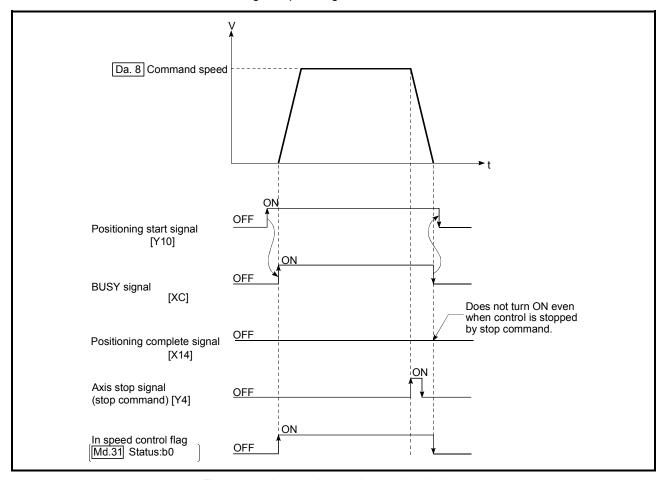


Fig.9.9 1-axis speed control operation timing

■ Current feed value during 1-axis speed control

The following table shows the " Md.20 Current feed value" during 1-axis speed control corresponding to the " Pr.21 Current feed value during speed control" settings.

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value		
0: Do not update current feed value	The current feed value at speed control start is maintained.		
1: Update current feed value	The current feed value is updated.		
2: Zero clear current feed value	The current feed value is fixed at 0.		

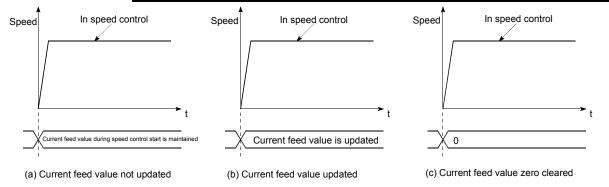

Restrictions

- (1) Set "Positioning complete" in " Da.1 Operation pattern". An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous positioning control" or "continuous path control" is set in " Da.1 Operation pattern".

 ("Continuous positioning control" and "continuous path control" cannot be set in speed control.)
- (2) Set the WITH mode in " Pr.18 M code ON signal output timing" when using an M code. The M code will not be output, and the M code ON signal will not turn ON if the AFTER mode is set.
- (3) An error "No command speed" (error code: 503) will occur if the current speed (-1) is set in " Da.8 Command speed".
- (4) The software stroke limit check will not carried out if the control unit is set to "degree".

■ Positioning data setting examples

The following table shows the setting examples when "1-axis speed control (forward run: speed 1)" is set in the positioning data No. 1 of axis 1.

	S	etting item	Setting example	Setting details
	Da.1	Operation pattern	Positioning complete	Setting other than "Positioning complete" is not possible in speed control.
	Da.2	Control system	Forward run speed 1	Set 1-axis speed control.
0. 1	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
data No.	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning	Da.5	Axis to be interpolated	_	Setting not required (setting value will be ignored).
Posit	Da.6	Positioning address/ movement amount	_	Setting not required (setting value will be ignored).
1	Da.7	Arc address	_	Setting not required (setting value will be ignored).
Axis	Da.8	Command speed	6000.00mm/min	Set the speed to be commanded.
	Da.9	Dwell time	_	Setting not required (setting value will be ignored).
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data. (" Pr.18 M code ON signal output timing" setting only possible in the WITH mode.)

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.15 2-axis speed control

In "2-axis speed control" (" Da.2 Control system" = Forward run: speed 2, Reverse run: speed 2), control is carried out in the 2-axis direction in which the positioning data has been set by continuously outputting pulses for the speed set in " Da.8 Command speed" until the input of a stop command.

The two types of 2-axis speed control are "Forward run: speed 2" in which the control starts in the forward run direction, and "Reverse run: speed 2" in which control starts in the reverse run direction.

(Refer to Section 9.1.6 "Interpolation control" for the combination of the reference axis with the interpolation axis.)

Operation chart

The following chart shows the operation timing for 2-axis (axes 1 and 2) speed control with axis 1 as the reference axis. The "in speed control" flag (Md.31 Status: b0) is turned ON during speed control.

The "positioning complete signal" is not turned ON.


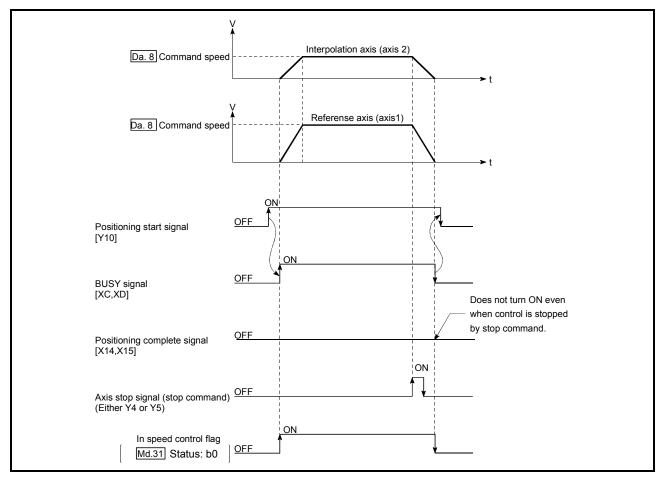


Fig. 9.10 2-axis speed control operation timing

■ Current feed value during 2-axis speed control

The following table shows the " Md.20 Current feed value" during 2-axis speed control corresponding to the " Pr.21 Current feed value during speed control" settings. (Note that the reference axis setting values are used for parameters.)

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value
0: Do not update current feed value	The current feed value at speed control start is maintained.
1: Update current feed value	The current feed value is updated.
2: Zero clear current feed value	The current feed value is fixed at 0.

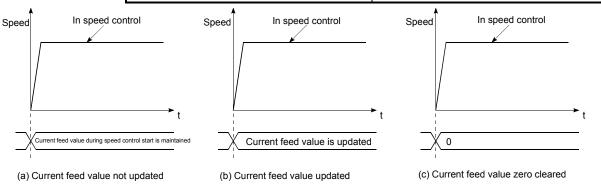

Restrictions

- (1) Set "Positioning complete" in " Da.1 Operation pattern". An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous positioning control" or "continuous path control" is set.
 - ("Continuous positioning control" and "continuous path control" cannot be set in speed control.)
- (2) Set the WITH mode in " Pr.18 M code ON signal output timing" when using an M code. The M code will not be output, and the M code ON signal will not turn ON if the AFTER mode is set.
- (3) Set the "reference axis speed" in " Pr.20 Interpolation speed designation method". An error "Interpolation mode error" (error code: 523) will occur and the operation cannot start if a composite speed is set.
- (4) When either of two axes exceeds the speed limit, that axis is controlled with the speed limit value. The speeds of the other axes are limited at the ratios of " Da.8 Command speed". (Examples)

Setting item	Axis	Axis 1 setting	Axis 2 setting
Pr.8	Speed limit value	4000.00mm/min	5000.00mm/min
Da.8	Command speed	8000.00mm/min	6000.00mm/min

With the settings shown above, the operation speed in speed control is as follows.

Axis 1: 4000.00 mm/min (Speed is limited by Pr.8).

Axis 2: 3000.00 mm/min (Speed is limited at an ratio of an axis 1 command speed to an axis 2 command speed).

Note: Operation runs at speed 1 when a reference axis speed is less than 1 as a result of speed limit.

In addition, when a bias speed is set, it will be the minimum speed.

- (5) An error "No command speed" (error code: 503) occurs if a current speed (-1) is set in " Da.8 Command speed".
- (6) The software stroke limit check is not carried out when the control unit is set to "degree".

Positioning data setting examples

[Setting examples when the reference axis and interpolation axis are designated as axes 1 and 2, respectively.]

The following table shows the setting examples when "2-axis speed control (forward run: speed 2)" is set in the positioning data No. 1 of axis 1 (reference axis).

Sett	ting item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	Setting other than "Positioning complete" is not possible in speed control.
	Da.2	Control system	Forward run speed 2	ı	Set 2-axis speed control.
1	Da.3	Acceleration time No.	1	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
data No.	Da.4	Deceleration time No.	0	ı	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
ning da	Da.5	Axis to be interpolated	Axis 2	-	Set the axis to be interpolated (partner axis). If the self-axis is set, an error will occur.
Positioning	Da.6	Positioning address/ movement amount	-	-	Setting not required (setting value will be ignored).
_	Da.7	Arc address	-	-	Setting not required (setting value will be ignored).
Axis '	Da.8	Command speed	6000.00 mm/min	3000.00 mm/min	Set the speed to be commanded.
	Da.9	Dwell time	_	_	Setting not required (setting value will be ignored).
	Da.10	M code	10	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data. (" Pr.18 M code ON signal output timing" setting only possible in the WITH mode.)

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.16 3-axis speed control

In "3-axis speed control" (" Da.2 Control system" = Forward run: speed 3, Reverse run: speed 3), control is carried out in the 3-axis direction in which the positioning data has been set by continuously outputting pulses for the speed set in

" Da.8 Command speed" until the input of a stop command.

The two types of 3-axis speed control are "Forward run: speed 3" in which the control starts in the forward run direction, and "Reverse run: speed 3" in which control starts in the reverse run direction.

(Refer to Section 9.1.6 "Interpolation control" for the combination of the reference axis with the interpolation axes.)

Operation chart

The following chart shows the operation timing for 3-axis (axes 1, 2, and 3) speed control with axis 1 as the reference axis.

The "in speed control" flag (Md.31 Status: b0) is turned ON during speed control. The "positioning complete signal" is not turned ON.


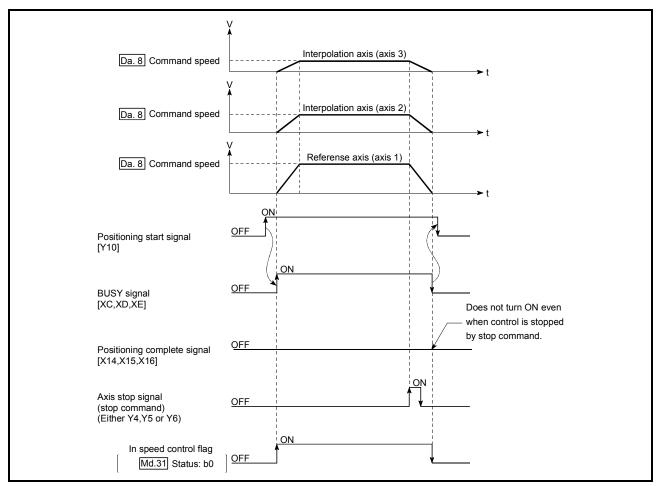


Fig. 9.11 3-axis speed control operation timing

Current feed value during 3-axis speed control

The following table shows the " Md.20 Current feed value" during 3-axis speed control corresponding to the " Pr.21 Current feed value during speed control" settings. (Note that the reference axis setting values are used for parameters.)

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value	
0: Do not update current feed value	The current feed value at speed control start is maintained.	
1: Update current feed value	The current feed value is updated.	
2: Zero clear current feed value	The current feed value is fixed at 0.	

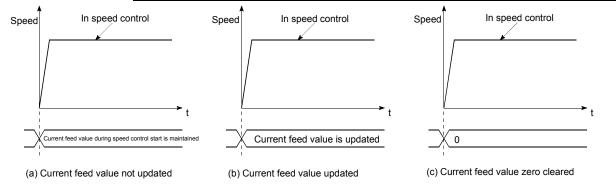

Restrictions

- (1) Set "Positioning complete" in " Da.1 Operation pattern". An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous positioning control" or "continuous path control" is set. ("Continuous positioning control" and "continuous path control" cannot be set in speed control.)
- (2) Set the WITH mode in " Pr.18 M code ON signal output timing" when using an M code. The M code will not be output, and the M code ON signal will not turn ON if the AFTER mode is set.
- (3) Set the "reference axis speed" in " Pr.20 Interpolation speed designation method". An error "Interpolation mode error" (error code: 523) will occur and the operation cannot start if a composite speed is set.

(4) When either of three axes exceeds the speed limit, that axis is controlled with the speed limit value. The speeds of the other axes are limited at the ratios of " Da.8 Command speed". (Examples)

	Axis	Avia 1 potting	Avia 2 aatting	Avia 2 potting
Setting item		Axis 1 setting	Axis 2 setting	Axis 3 setting
Pr.8	Speed limit value	4000.00mm/min	5000.00mm/min	6000.00mm/min
Da.8	Command speed	8000.00mm/min	6000.00mm/min	4000.00mm/min

With the settings shown above, the operation speed in speed control is as follows.

Axis 1: 4000.00 mm/min (Speed is limited by Pr.8).

Axis 2: 3000.00 mm/min (Speed is limited at ratios in axes 1, 2, and 3 command speeds).

Axis 3: 2000.00 mm/min (Speed is limited at ratios in axes 1, 2, and 3 command speeds).

Note: Operation runs at speed 1 when a reference axis speed is less than 1 as a result of speed limit.

In addition, when a bias speed is set, it will be the minimum speed.

- (5) An error "No command speed" (error code: 503) will occur if a current speed (-1) is set in " Da.8 Command speed".
- (6) The software stroke limit check is not carried out when the control unit is set to "degree".

■ Positioning data setting examples

The following table shows the setting examples when "3-axis speed control (forward run: speed 3)" is set in the positioning data No. 1 of axis 1 (reference axis).

Sett	ting item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	_	Setting other than "Positioning complete" is not possible in speed control.
	Da.2	Control system	Forward run speed 3	ı	_	Set 3-axis speed control.
	Da.3	Acceleration time No.	1	ı	_	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
No. 1	Da.4	Deceleration time No.	0	-	_	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No.	Da.5	Axis to be interpolated	-	-	_	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2 and 3.
Posi	Da.6	Positioning address/ movement amount	1	ı	_	Setting not required (setting value will be ignored).
Axis 1	Da.7	Arc address	ı	ı	_	Setting not required (setting value will be ignored).
4	Da.8	Command speed	6000.00 mm/min	3000.00 mm/min	2000.00 mm/min	Set the speed to be commanded.
	Da.9	Dwell time	ı	ı	_	Setting not required (setting value will be ignored).
	Da.10	M code	10	ı	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data. (" Pr.18 M code ON signal output timing" setting only possible in the WITH mode.)

st Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.17 4-axis speed control

In "4-axis speed control" (" Da.2 Control system" = Forward run: speed 4, Reverse run: speed 4), control is carried out in the 4-axis direction in which the positioning data has been set by continuously outputting pulses for the speed set in

" Da.8 Command speed" until the input of a stop command.

The two types of 4-axis speed control are "Forward run: speed 4" in which the control starts in the forward run direction, and "Reverse run: speed 4" in which control starts in the reverse run direction.

(Refer to Section 9.1.6 "Interpolation control" for the combination of the reference axis with the interpolation axes.)

Operation chart

The following chart shows the operation timing for 4-axis speed control with axis 1 as the reference axis.

The "in speed control" flag (Md.31 Status: b0) is turned ON during speed control. The "positioning complete signal" is not turned ON.


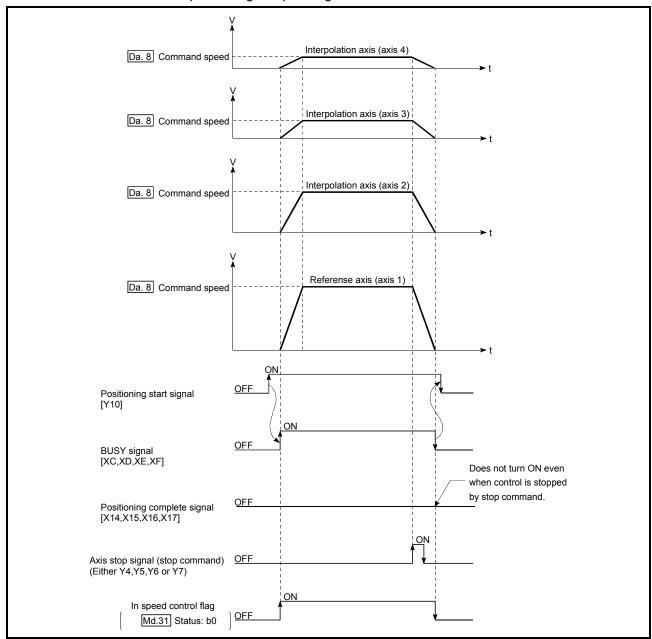


Fig. 9.12 4-axis speed control operation timing

Current feed value during 4-axis speed control

The following table shows the " Md.20 Current feed value" during 4-axis speed control corresponding to the " Pr.21 Current feed value during speed control" settings. (Note that the reference axis setting values are used for parameters.)

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value
0: Do not update current feed value	The current feed value at speed control start is maintained.
1: Update current feed value	The current feed value is updated.
2: Zero clear current feed value	The current feed value is fixed at 0.

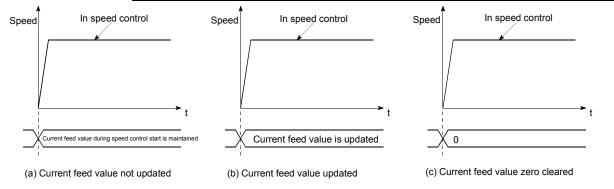

Restrictions

- (1) Set "Positioning complete" in " Da.1 Operation pattern". An axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous positioning control" or "continuous path control" is set. ("Continuous positioning control" and "continuous path control" cannot be set in speed control.)
- (2) Set the WITH mode in " Pr.18 M code ON signal output timing" when using an M code. The M code will not be output, and the M code ON signal will not turn ON if the AFTER mode is set.
- (3) Set the "reference axis speed" in " Pr.20 Interpolation speed designation method". An error "Interpolation mode error" (error code: 523) will occur and the operation cannot start if a composite speed is set.

(4) When either of four axes exceeds the speed limit, that axis is controlled with the speed limit value. The speeds of the other axes are limited at the ratios of " Da.8 Command speed". (Examples)

Setting item	Axis	Axis 1 setting	Axis 2 setting	Axis 3 setting	Axis 4 setting
Pr.8	Speed limit value	4000.00mm/ min	5000.00mm/ min	6000.00mm/ min	8000.00mm/ min
Da.8	Command speed	8000.00mm/ min	6000.00mm/ min	4000.00mm/ min	1500.00mm/ min

With the settings shown above, the operation speed in speed control is as follows.

Axis 1: 4000.00 mm/min (Speed is limited by Pr.8).

Axis 2: 3000.00 mm/min (Speed is limited at ratios in axes 1, 2, 3 and 4 command speeds).

Axis 3: 2000.00 mm/min (Speed is limited at ratios in axes 1, 2, 3 and 4 command speeds).

Axis 4: 750.00 mm/min (Speed is limited at ratios in axes 1, 2, 3 and 4 command speeds).

Note: Operation runs at speed 1 when a reference axis speed is less than 1 as a result of speed limit.

In addition, when a bias speed is set, it will be the minimum speed.

- (5) An error "No command speed" (error code: 503) will occur if a current speed (-1) is set in " Da.8 Command speed".
- (6) The software stroke limit check is not carried out when the control unit is set to "degree".

■ Positioning data setting examples

The following table shows the setting examples when "4-axis speed control (forward run: speed 4)" is set in the positioning data No. 1 of axis 1 (reference axis).

Sett	ing item	Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Axis 3 (interpolation axis) setting example	Axis 4 (interpolation axis) setting example	Setting details
	Da.1	Operation pattern	Positioning complete	-	_	-	Setting other than "Positioning complete" is not possible in speed control.
	Da.2	Control system	Forward run speed 4	_	_	_	Set 4-axis speed control.
	Da.3	Acceleration time No.	1	-	-	-	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
lo. 1	Da.4	Deceleration time No.	0	-	-	-	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
Positioning data No.	Da.5	Axis to be interpolated	-	-	-	-	Setting not required (setting value will be ignored). When axis 1 is used as a reference axis, the interpolation axes are axes 2, 3 and 4.
_	Da.6	Positioning address/ movement amount	-	_	_	_	Setting not required (setting value will be ignored).
Axis	Da.7	Arc address	ı	_	_	_	Setting not required (setting value will be ignored).
	Da.8	Command speed	6000.00 mm/min	3000.00 mm/min	2000.00 mm/min	1000.00 mm/min	Set the speed to be commanded.
	Da.9	Dwell time	-	_	_	_	Setting not required (setting value will be ignored).
	Da.10	M code	10	-	-	-	Set this when other sub operation commands are issued in combination with the No. 1 positioning data. (" Pr.18 M code ON signal output timing" setting only possible in the WITH mode.)

st Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.18 Speed-position switching control (INC mode)

In "speed-position switching control (INC mode)" (" Da.2 Control system" = Forward run: speed/position, Reverse run: speed/position), the pulses of the speed set in " Da.8 Command speed" are kept output on the axial direction set to the positioning data. When the "speed-position switching signal" is input, position control of the movement amount set in " Da.6 Positioning address/movement amount" is exercised.

"Speed-position switching control (INC mode)" is available in two different types: "forward run: speed/position" which starts the axis in the forward run direction and "reverse run: speed/position" which starts the axis in the reverse run direction.

Use the detailed parameter 1 " Pr.150 Speed-position function selection" with regard to the choice for "speed-position switching control (INC mode)".

Setting item Setting		Setting	Catting dataila	Buffer memory address				
	Settin	gitem	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
	Pr.150	Speed- position function selection	0	Speed-position switching control (INC mode)	34	184	334	484

st If the set value is other than 0 and 2, it is regarded as 0 and operation is performed in the INC mode.

For details of the setting, refer to Section 5.2 "List of parameters".

Switching over from speed control to position control

- (1) The control is switched over from speed control to position control by executing the external command signal set in "speed-position switching signal".
- (2) Besides setting the positioning data, the " Cd.24 Speed-position switching enable flag" must also be turned ON to switch over from speed control to position control. (If the " Cd.24 Speed-position switching enable flag" turns ON after the speed-position switching signal turns ON, the control will continue as speed control without switching over to position control. The control will be switched over from speed control to position control when the speed-position switching signal turns from OFF to ON again. Only position control will be carried out when the " Cd.24 Speed-position switching enable flag" and speed-position switching signal are ON at the operation start.)

Setting item Setting		Setting	Setting details	Buffer memory address			
Settin	ig item	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Cd.24	Speed- position switching enable flag	1	Set "1: Switch from speed control to position control when the external command signal [CHG] turns ON.".	1528	1628	1728	1828

■ Speed-position switching signal setting

The following table shows the items that must be set to use the external command signals (CHG) as speed-position switching signals.

Setting item		Setting	Setting details	Buffer memory address			
Settii	ig item	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Pr.42	External command function selection	2	Set the "2: speed-position and position-speed switching requests".	62	212	362	512
Cd.8	External command valid	1	Set "1: Validate external command".	1505	1605	1705	1805

^{*}Refer to Section 5.2 "List of parameters" and Section 5.7 "List of control data" for information on the setting details.

Operation chart

The following chart (Fig.9.13) shows the operation timing for speed-position switching control (INC mode). The "in speed control flag" (Md.31 Status: b0) is turned ON during speed control of speed-position switching control (INC mode).


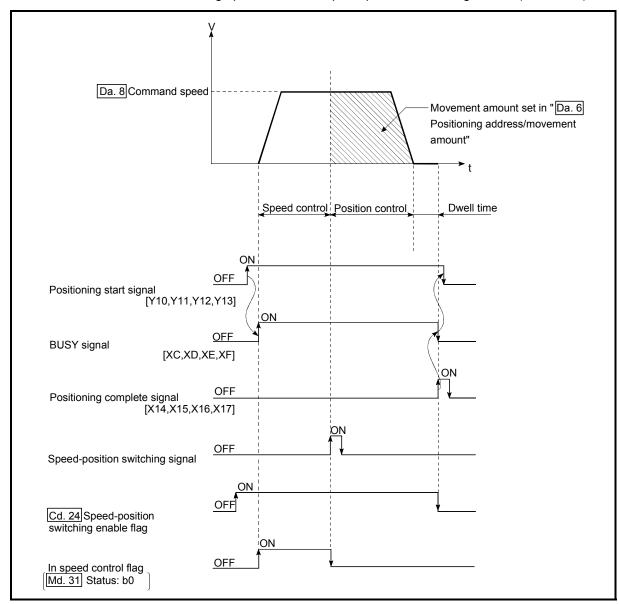


Fig. 9.13 Speed-position switching control (INC mode) operation timing

[Operation example]

The following operation assumes that the speed-position switching signal is input at the position of the current feed value of 90.00000 [degree] during execution of " $\boxed{\text{Da.2}}$ Control system" "Forward run: speed/position" at " $\boxed{\text{Pr.1}}$ Unit setting" of "2: degree" and " $\boxed{\text{Pr.21}}$ Current feed value during speed control" setting of "1: Update current feed value".

(The value set in " Da.6 Positioning address/movement amount" is 270.00000 [degree])

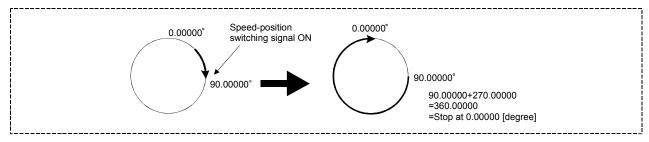

Operation timing and processing time during speed-position switching control (INC mode)

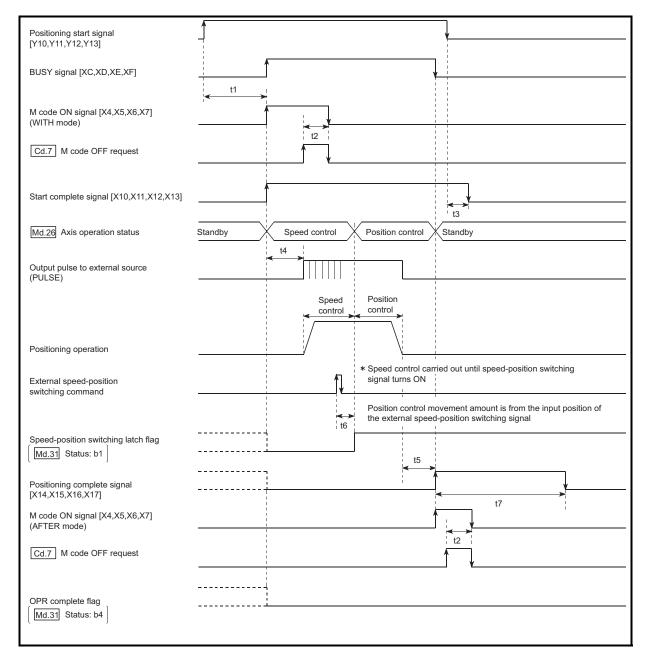


Fig. 9.14 Operation timing and processing time during speed-position switching control (INC mode)

Normal timing time


Model	t1	t2	t3	t4	t5	t6	t7
QD75P□N/QD75D□N	0.2 to 1.1ms	0 to 0.9ms	0 to 0.9ms	0.4 to 1.3ms	0 to 0.9ms	1.0ms	Follows
QD75P□/QD75D□	1.1ms	0 to 1.8ms	0 to 1.8ms	2.7 to 4.4ms	0 to 1.8ms	1.0ms	parameters

• The t1 timing time could be delayed by the operation state of other axes.

■ Current feed value during speed-position switching control (INC mode)


The following table shows the " Md.20 Current feed value" during speedposition switching control (INC mode) corresponding to the " Pr.21 Current feed value during speed control" settings.

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value
0: Do not update current feed value	The current feed value at control start is maintained during speed control, and updated from the switching to position control.
1: Update current feed value	The current feed value is updated during speed control and position control.
2: Zero clear current feed value	The current feed value is cleared (set to "0") at control start, and updated from the switching to position control.

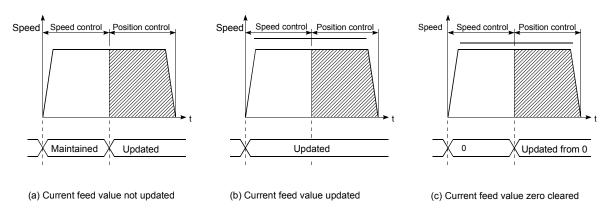

Switching time from speed control to position control

There is 1ms from the time the speed-position switching signal is turned ON to the time the speed-position switching latch flag ($\boxed{\text{Md.31}}$ Status: b1) turns ON.

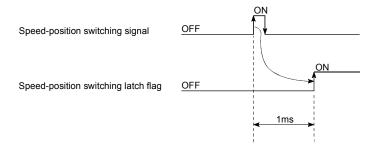

C

- Changing the position control movement amount
 - In "speed-position switching control (INC mode)", the position control movement amount can be changed during the speed control section.
 - (1) The "new movement amount" is stored in " Cd.23 Speed-position switching control movement amount change register" by the sequence program during speed control.
 - When the speed-position switching signal is turned ON, the movement amount for position control is stored in " Cd.23 Speed-position switching control movement amount change register".
 - (2) The movement amount is stored in the " Md.29 Speed-position switching control positioning amount" of the axis monitor area from the point where the control changes to position control by the input of a speed-position switching signal from an external source.

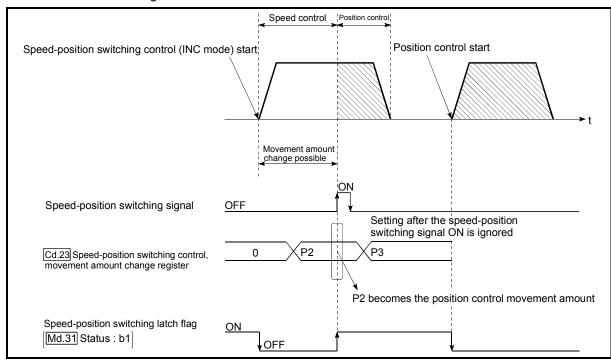


Fig. 9.15 Position control movement amount change timing

POINT

- The machine recognizes the presence of a movement amount change request when the data is
 written to " Cd.23 Speed-position switching control movement amount change register" with the
 sequence program.
- The new movement amount is validated after execution of the speed-position switching control (INC mode), before the input of the speed-position switching signal.
- The movement amount change can be enable/disable with the interlock function in position control using the "speed-position switching latch flag" (Md.31 Status: b1) of the axis monitor area.

Restrictions

- (1) The axis error "Continuous path control not possible" (error code: 516) will occur, and the operation cannot start if "continuous path control" is set in " Da.1 Operation pattern".
- (2) "Speed-position switching control" cannot be set in " Da.2 Control system" of the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", "speed-position switching control" cannot be set in positioning data No. 2.) The axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (3) The error "No command speed" (error code: 503) will occur if "current speed (-1)" is set in " Da.8 Command speed".
- (4) The software stroke limit range check during speed control is made only when the following (a) and (b) are satisfied:
 - (a) When " Pr.21 Current feed value during speed control" is "1: Update current feed value"
 - If the movement amount exceeds the software stroke limit range during speed control in cases of settings other than the one above, the error "Software stroke limit+" (error code: 507) or "Software stroke limit-" (error code: 508) will occur as soon as speed control is changed to position control, and the axis will decelerate to a stop.
 - (b) When " Pr.1 Unit setting" is other than "2: degree" If the unit is "degree", the software stroke limit range check is not performed.
- (5) If the value set in " Da.6 Positioning address/movement amount" is negative, the error "Outside address range" (error code: 530) will occur.
- (6) Deceleration processing is carried out from the point where the speed-position switching signal is input if the position control movement amount set in " Da.6 Positioning address/movement amount" is smaller than the deceleration distance from the " Da.8 Command speed".
- (7) Turn ON the speed-position switching signal in the speed stabilization region (constant speed status). The warning "Speed-position switching (during acceleration) signal ON" (warning code: 508) will occur because of large deviation in the droop pulse amount if the signal is turned ON during acceleration.
 - During use of the servomotor, the actual movement amount after switching of speed control to position control is the "preset movement amount + droop pulse amount". If the signal is turned ON during acceleration/deceleration, the stop position will vary due to large variation of the droop pulse amount. Even though " Md.29 Speed-position switching control positioning amount" is the same, the stop position will change due to a change in droop pulse amount when " Da.8 Command speed" is different.

9

■ Positioning data setting examples

The following table shows setting examples when "speed-position switching control (INC mode) by forward run" is set in positioning data No. 1 of axis 1.

	S	etting item	Setting example	Setting details			
	Da.1 Operation pattern		Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed. ("Continuous path control" cannot be set in "speed-position switching control (INC mode)".)			
	Da.2	Control system	Forward run: speed/position	Set speed-position switching control by forward run.			
<u>-</u>	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.			
data No	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.			
	Da.5	Axis to be interpolated	-	Setting not required. (Setting value is ignored.)			
Positioning	Da.6	Positioning address/ movement amount	10000.0μm	INC mode (Pr.150 = 0) Set the movement amount after the switching to position control. (Assuming that the Pr.1 Unit setting is set to "mm".)			
Axis 1	Da.7	Arc address	_	Setting not required. (Setting value is ignored.)			
1	Da.8	Command speed	6000.00mm/min	Set the speed to be controlled.			
	Da.9	Dwell time	500ms	Set a time from the positioning stop (pulse output stop) by position control until the positioning complete signal is output. When the system is stopped by speed control, ignore the setting value.			
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.			


^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.19 Speed-position switching control (ABS mode)

In case of "speed-position switching control (ABS mode)" (" Da.2 Control system" = Forward run: speed/position, Reverse run: speed/position), the pulses of the speed set in " Da.8 Command speed" are kept output in the axial direction set to the positioning data. When the "speed-position switching signal" is input, position control to the address set in " Da.6 Positioning address/movement amount" is exercised.

"Speed-position switching control (ABS mode)" is available in two different types: "forward run: speed/position" which starts the axis in the forward run direction and "reverse run: speed/position" which starts the axis in the reverse run direction.

"Speed-position switching control (ABS mode)" is valid only when " Pr.1 Unit setting" is "2: degree".

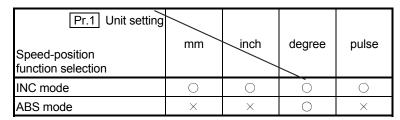

○: Setting allowed,

Use the detailed parameter 1 " Pr.150 Speed-position function selection" to choose "speed-position switching control (ABS mode)".

	Setting item Setting value		Catting dataile	Buffer memory address				
			value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
	Pr.150	Speed- position function selection	2	Speed-position switching control (ABS mode)	34	184	334	484

^{*} If the set value is other than 0 and 2, it is regarded as 0 and operation is performed in the INC mode.

For details of the setting, refer to Section 5.2 "List of parameters".

^{×:} Setting disallowed (If setting is made, the error "Speed-position function selection error" (error code: 935) will occur when the PLC READY (Y0) turns ON.)

- Switching over from speed control to position control
 - (1) The control is switched over from speed control to position control by executing the external command signal set in "speed-position switching signal".
 - (2) Besides setting the positioning data, the " Cd.24 Speed-position switching enable flag" must also be turned ON to switch over from speed control to position control. (If the " Cd.24 Speed-position switching enable flag" turns ON after the speed-position switching signal turns ON, the control will continue as speed control without switching over to position control. The control will be switched over from speed control to position control when the speed-position switching signal turns from OFF to ON again. Only position control will be carried out when the " Cd.24 Speed-position switching enable flag" and speed-position switching signal are ON at the operation start.)

	Setting item Setting		Setting	Setting details	Buffer memory address			
ı	Semi	y item	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
	Cd.24	Speed- position switching enable flag	1	Set "1: Switch from speed control to position control when the external command signal [CHG] turns ON.".	1528	1628	1728	1828

Speed-position switching signal setting

The following table shows the items that must be set to use the external command signals (CHG) as speed-position switching signals.

Sotti	ng item	Setting	Setting details	Buffer memory address				
Settii	ig item	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4	
Pr.42	External command function selection	2	Set the "2: speed-position and position-speed switching requests".	62	212	362	512	
Cd.8	External command valid	1	Set "1: Validate external command".	1505	1605	1705	1805	

^{*} Refer to Section 5.2 "List of parameters" and Section 5.7 "List of control data" for information on the setting details.

Operation chart

The following chart (Fig.9.16) shows the operation timing for speed-position switching control (ABS mode). The "in speed control flag" (Md.31 Status: b0) is turned ON during speed control of speed-position switching control (ABS mode).


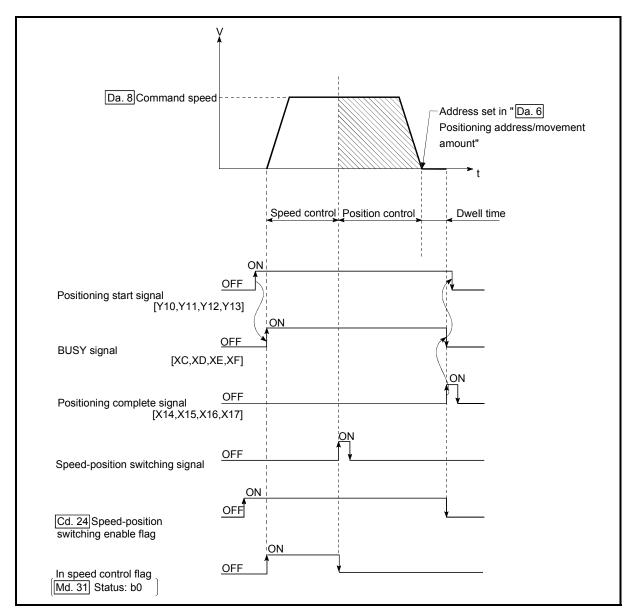


Fig. 9.16 Speed-position switching control (ABS mode) operation timing

[Operation example]

The following operation assumes that the speed-position switching signal is input at the position of the current feed value of 90.00000 [degree] during execution of " $\boxed{\text{Da.2}}$ Control system" "Forward run: speed/position" at " $\boxed{\text{Pr.1}}$ Unit setting" of "2: degree" and " $\boxed{\text{Pr.21}}$ Current feed value during speed control" setting of "1: Update current feed value".

(The value set in " Da.6 Positioning address/movement amount" is 270.00000 [degree])

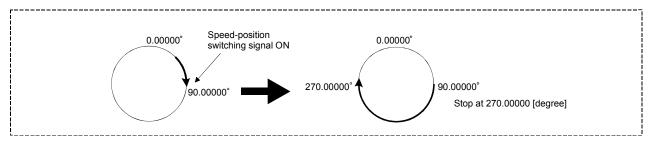

9

Operation timing and processing time during speed-position switching control (ABS mode)

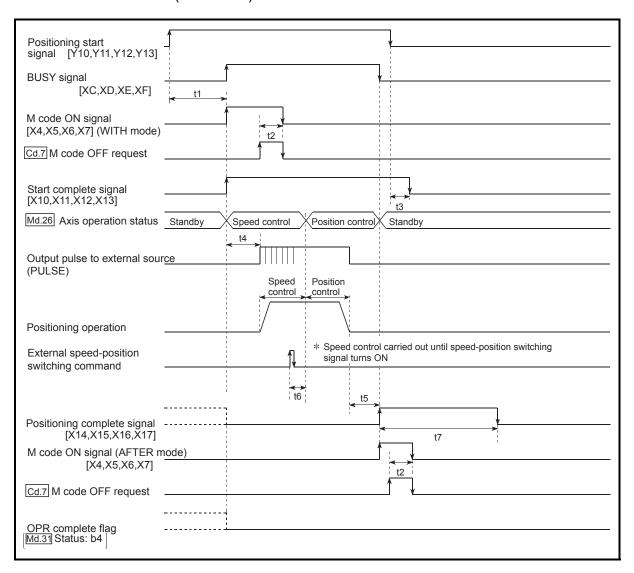


Fig. 9.17 Operation timing and processing time during speed-position switching control (ABS mode)

Normal timing time


Model	t1	t2	t3	t4	t5	t6	t7
QD75P□N/QD75D□N	0.2 to 1.1ms	0 to 0.9ms	0 to 0.9ms	0.4 to 1.3ms	0 to 0.9ms	1.0ms	Follows
QD75P□/QD75D□	1.1ms	0 to 1.8ms	0 to 1.8ms	2.7 to 4.4ms	0 to 1.8ms	1.0ms	parameters

• The t1 timing time could be delayed by the operation state of other axes.

■ Current feed value during speed-position switching control (ABS mode)
The following table shows the " Md.20 Current feed value" during speed-position switching control (ABS mode) corresponding to the " Pr.21 Current feed value during speed control" settings.

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value
11. I ludate citrent teed Maille	The current feed value is updated during speed control and position control.


Only "1: Update current value" is valid for the setting of " Pr.21 Current feed value during speed control" in speed-position switching control (ABS mode). The error "Speed-position function selection error" (error code: 935) will occur if the " Pr.21 Current feed value during speed control" setting is other than 1.

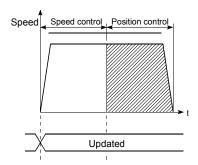

Current feed value updated

Switching time from speed control to position control


There is 1ms from the time the speed-position switching signal is turned ON to the time the speed-position switching latch flag (Md.31 Status: b1) turns ON.

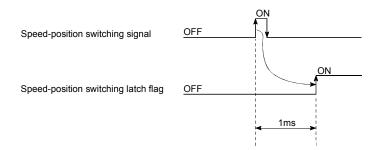

Restrictions

- (1) The axis error "Continuous path control not possible" (error code: 516) will occur, and the operation cannot start if "continuous path control" is set in " Da.1 Operation pattern".
- (2) "Speed-position switching control" cannot be set in " Da.2 Control system" of the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", "speed-position switching control" cannot be set in positioning data No. 2.) The axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (3) The error "No command speed" (error code: 503) will occur if "current speed (-1)" is set in " Da.8 Command speed".
- (4) If the value set in " Da.6 Positioning address/movement amount" is
- negative, the error "Outside address range" (error code: 530) will occur.

 (5) Even though the axis control data " Cd.23 Speed-position switching control movement amount change register" was set in speed-position switching control (ABS mode), it would not function. The set value is ignored.
- (6) To exercise speed-position switching control (ABS mode), the following conditions must be satisfied:
 - (a) " | Pr.1 | Unit setting" is "2: degree"
 - (b) The software stroke limit function is invalid (upper limit value = lower limit
 - (c) " Pr.21 Current feed value during speed control" is "1: Update current feed value"
 - (d) The setting range of " Da.6 Positioning address/movement amount" is within 0 to 359.99999 (degree) (If the value is outside of the range, the error "Outside address range" (error code: 530) will occur at the start.)
 - (e) The "Pr.150 Speed-position function selection" setting is "2: Speedposition switching control (ABS mode)".
- (7) If any of the conditions in (6)(a) to (6)(c) is not satisfied in the case of (6)(e). the error "Speed-position function selection error" (error code: 935) will occur when the PLC READY [Y0] turns from OFF to ON.
- (8) If the axis reaches the positioning address midway through deceleration after automatic deceleration started at the input of the speed-position switching signal, the axis will not stop immediately at the positioning address. The axis will stop at the positioning address after N revolutions so that automatic deceleration can always be made. (N: Natural number) In the following example, since making deceleration in the path of dotted line will cause the axis to exceed the positioning addresses twice, the axis will decelerate to a stop at the third positioning address.

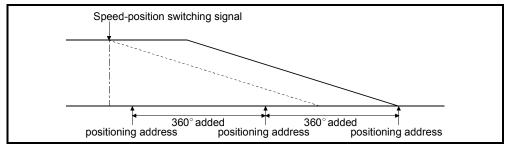

9

■ Positioning data setting examples

The following table shows setting examples when "speed-position switching control (ABS mode) by forward run" is set in positioning data No. 1 of axis 1.

	S	etting item	Setting example	Setting details			
	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed. ("Continuous path control" cannot be set in "speed-position switching control (ABS mode)".)			
	Da.2	Control system	Forward run: speed/position	Set speed-position switching control by forward run.			
_	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.			
Positioning data No	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.			
ning d	าเมล.ธา	Axis to be interpolated	_	Setting not required. (Setting value is ignored.)			
Positic	Da.6	Positioning address/ movement amount	270.00000 degree	ABS mode (Pr.150 = 2) Set the address after the switching to position control. (Assuming that the "Pr.1 Unit setting" is set to "degree".)			
Axis 1	Da.7	Arc address	_	Setting not required. (Setting value is ignored.)			
1	Da.8	Command speed	6000.00mm/min	Set the speed to be controlled.			
	Da.9	Dwell time	500ms	Set a time from the positioning stop (pulse output stop) by position control until the positioning complete signal is output. When the system is stopped by speed control, ignore the setting value.			
	Da.10	M code	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.				

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.20 Position-speed switching control

In "position-speed switching control" (" Da.2 Control system" = Forward run: position/speed, Reverse run: position/speed), before the position-speed switching signal is input, position control is carried out for the movement amount set in " Da.6 Positioning address/movement amount" in the axis direction in which the positioning data has been set. When the position-speed switching signal is input, the position control is carried out by continuously outputting the pulses for the speed set in " Da.8 Command speed" until the input of a stop command.

The two types of position-speed switching control are "Forward run: position/speed" in which the control starts in the forward run direction, and "Reverse run: position/speed" in which control starts in the reverse run direction.

Switching over from position control to speed control

- (1) The control is switched over from position control to speed control by executing the external command signal set in "position-speed switching signal".
- (2) Besides setting the positioning data, the " Cd.26 Position-speed switching enable flag" must also be turned ON to switch over from position control to speed control. (If the " Cd.26 Position-speed switching enable flag" turns ON after the position-speed switching signal turns ON, the control will continue as position control without switching over to speed control. The control will be switched over from position control to speed control when the position-speed switching signal turns from OFF to ON again. Only speed control will be carried out when the " Cd.26 Position-speed switching enable flag" and position-speed switching signal are ON at the operation start.)

Cottin	a itom	Setting	Sotting datails	Bu	ffer mem	ory addre	ess
Settin	g item	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Cd.26	Position- speed switching enable flag	1	Set "1: Switch from position control to speed control when the external command signal [CHG] turns ON".	1532	1632	1732	1832

Position-speed switching signal setting

The following table shows the items that must be set to use the external command signals (CHG) as position-speed switching signals.

6/	Setting item		Sotting details	Bu	ffer mem	ory addre	ess
36	etting item	value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Pr.42	External command function selection	2	Set the "2: speed-position and position-speed switching requests".	62	212	362	512
Cd.8	External command valid	1	Set "1: Validate external command".	1505	1605	1705	1805

^{*} Refer to Section 5.2 "List of parameters" and Section 5.7 "List of control data" for information on the setting details.

Operation chart

The following chart shows the operation timing for position-speed switching control.

The "in speed control" flag (Md.31 Status: b0) is turned ON during speed control of position-speed switching control.

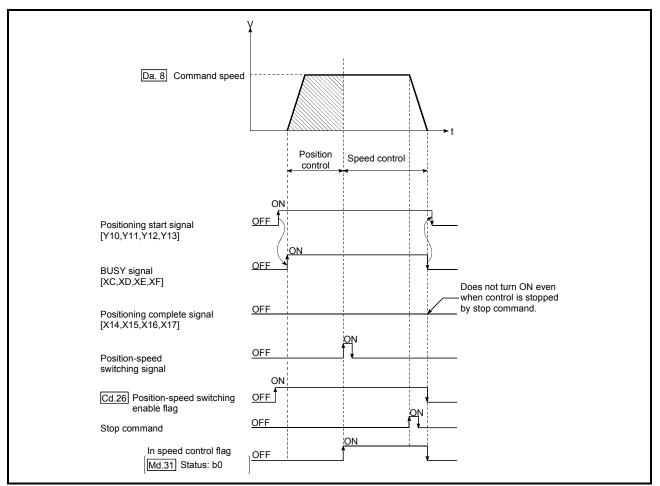


Fig. 9.18 Position-speed switching control operation timing

9

Operation timing and processing time during position-speed switching control

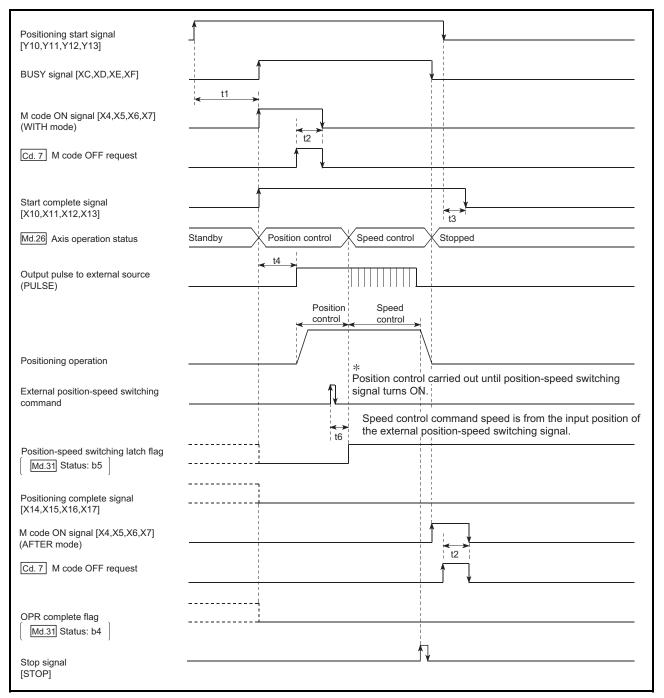


Fig. 9.19 Operation timing and processing time during position-speed switching control

Normal timing time

Model	t1	t2	t3	t4	t5	t6
QD75P□N/QD75D□N	0.2 to 1.1ms	0 to 0.9ms	0 to 0.9ms	0.4 to 1.3ms	-	1.0ms
QD75P□/QD75D□	1.0 to 1.4ms	0 to 1.8ms	0 to 1.8ms	2.7 to 4.4ms	-	1.0ms


• The t1 timing time could be delayed by the operation state of other axes.

9

■ Current feed value during position-speed switching control


The following table shows the " Md.20 Current feed value" during position-speed switching control corresponding to the " Pr.21 Current feed value during speed control" settings.

" Pr.21 Current feed value during speed control" setting	Md.20 Current feed value
0: Do not update current feed value	The current feed value is updated during position control, and the current feed value at the time of switching is maintained as soon as position control is switched to speed control.
1: Update current feed value	The current feed value is updated during position control and speed control.
2: Zero clear current feed value	The current feed value is updated during positioning control, and the current feed value is cleared (to "0") as soon as position control is switched to speed control.

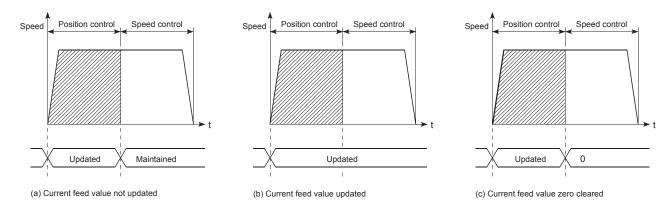

Switching time from position control to speed control

There is 1ms from the time the position-speed switching signal is turned ON to the time the position-speed switching latch flag ($\boxed{\text{Md.31}}$ Status: b5) turns ON.

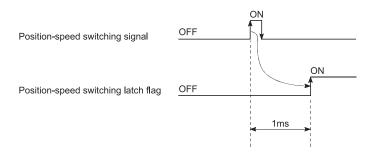

Changing the speed control command speed

In "position-speed switching control", the speed control command speed can be changed during the position control.

- (1) The speed control command speed can be changed during the position control of position-speed switching control.
 - A command speed change request will be ignored unless issued during the position control of the position-speed switching control.
- (2) The "new command speed" is stored in " Cd.25 Position-speed switching control speed change register" by the sequence program during position control.

This value then becomes the speed control command speed when the position-speed switching signal turns ON.

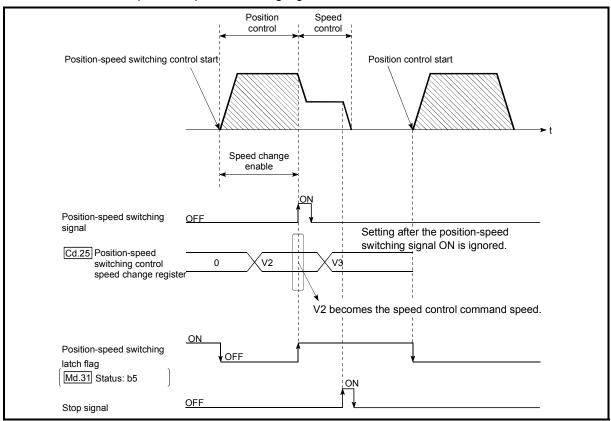


Fig. 9.20 Speed control speed change timing

POINTS

- The machine recognizes the presence of a command speed change request when the data is written to " Cd.25 Position-speed switching control speed change register" with the sequence program.
- The new command speed is validated after execution of the position-speed switching control before the input of the position-speed switching signal.
- The command speed change can be enabled/disabled with the interlock function in speed control using the "position-speed switching latch flag" (Md.31 Status: b5) of the axis monitor area.

Restrictions

- (1) The axis error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous positioning control" or "continuous path control" is set in " Da.1 Operation pattern".
- (2) "Position-speed switching control" cannot be set in " Da.2 Control system" of the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", "position-speed switching control" cannot be set in positioning data No. 2.) The axis error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (3) The software stroke limit range is only checked during speed control if the "1: Update current feed value" is set in " Pr.21 Current feed value during speed control".
 - The software stroke limit range is not checked when the control unit is set to "degree".
- (4) The error "Software stroke limit+" or "Software stroke limit-" (error code: 507 or 508) will occur and the operation cannot start if the start point address or end point address for position control exceeds the software stroke limit range.
- (5) Deceleration stop will be carried out if the position-speed switching signal is not input before the machine is moved by a specified movement amount. When the position-speed switching signal is input during automatic deceleration by positioning control, acceleration is carried out again to the command speed to continue speed control. When the position-speed switching signal is input during deceleration to a stop with the stop signal, the control is switched to the speed control to stop the machine.
 - Restart is carried out by speed control using the restart command.
- (6) The warning "Speed limit value over" (warning code: 501) will occur and control is continued by " Pr.8 Speed limit value" if a new speed exceeds " Pr.8 Speed limit value" at the time of change of the command speed.
- (7) If the value set in " Da.6 Positioning address/movement amount" is negative, the error "Outside address range" (error code: 530) will occur.

■ Positioning data setting examples

The following table shows setting examples when "position-speed switching control (forward run: position/speed)" is set in positioning data No. 1 of axis 1.

	S	etting item	Setting example	Setting details
	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed. ("Continuous positioning control" and "Continuous path control" cannot be set in "position/speed changeover control".)
	Da.2	Control system	Forward run: position/speed	Set position-speed switching control.
_	Da.3	Acceleration time No.	1	Designate the value set in " Pr.25 Acceleration time 1" as the acceleration time at start.
data No.	Da.4	Deceleration time No.	0	Designate the value set in " Pr.10 Deceleration time 0" as the deceleration time at deceleration.
ning da	Da.5	Axis to be interpolated	-	Setting not required. (Setting value is ignored.)
Positioning	Da.6	Positioning address/ movement amount	10000.0µm	Set the movement amount at the time of position control before the switching to speed control. (Assuming that the "Pr.1 Unit setting" is set to "mm".)
is 1	Da.7	Arc address	_	Setting not required. (Setting value is ignored.)
Axis	Da.8	Command speed	6000.00mm/min	Set the speed to be controlled.
	Da.9	Dwell time	500ms	Set the time the machine dwells after the positioning stop (pulse output stop) by position control to the output of the positioning complete signal. If the machine is stopped by speed control, the setting value will be ignored.
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

st Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.21 Current value changing

When the current value is changed to a new value, control is carried out in which the " Md.20 Current feed value" of the stopped axis is changed to a random address set by the user. (The " Md.21 Machine feed value" is not changed when the current value is changed.)

The two methods for changing the current value are shown below.


- [1] Changing to a new current value using the positioning data
- [2] Changing to a new current value using the start No. (No. 9003) for a current value changing

The current value changing using method [1] is used during continuous positioning of multiple blocks, etc.

[1] Changing to a new current value using the positioning data

Operation chart

The following chart shows the operation timing for a current value changing. The " Md.20 Current feed value" is changed to the value set in " Da.6 Positioning address/movement amount" when the positioning start signal turns ON.

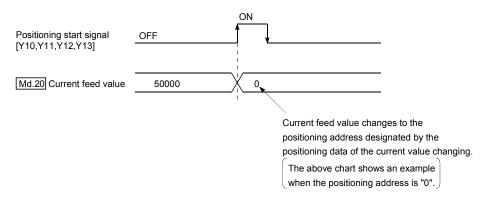

Restrictions

- (1) An axis error "New current value not possible" (error code: 515) will occur and the operation cannot start if "continuous path control" is set in
 " Da.1 Operation pattern". ("Continuous path control" cannot be set in current value changing.)
- (2) "Current value changing" cannot be set in " Da.2 Control system" of the positioning data when "continuous path control" has been set in " Da.1 Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", "current value changing" cannot be set in positioning data No. 2.) An axis error "New current value not possible" (error code: 515) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (3) An axis error "Outside new current value range" (error code: 514) will occur and the operation cannot start if "degree" is set in " Pr.1 Unit setting" and the value set in " Da.6 Positioning address/movement amount" is outside the setting range (0 to 359.99999 [degree]).

(4) If the value set in " Da.6 Positioning address/movement amount" is outside the software stroke limit (Pr.12, Pr.13) setting range, an error "Software stroke limit +" or "Software stroke limit –" (error code: 507 or 508) will occur at the positioning start, and the operation will not start.

Positioning data setting examples

The following table shows the setting examples when "current value changing" is set in the positioning data No. 1 of axis 1.


	Setting item		Setting example	Setting details
	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming that the next positioning data will be executed. ("Continuous path control" cannot be set by current value change.)
	Da.2	Control system	Current value changing	Set the current value changing.
	Da.3	Acceleration time No.	-	Setting not required (Setting value is ignored.)
	Da.4	Deceleration time No.	-	Setting not required (Setting value is ignored.)
Axis 1	Da.5	Axis to be interpolated	-	Setting not required (Setting value is ignored.)
positioning data No. 1	Da.6	Positioning address/ movement amount	10000.0 μm	Set the address to which address change is desired. (Assuming that the " Pr.1 Unit setting" is set to "mm".)
	Da.7	Arc address	-	Setting not required (Setting value is ignored.)
	Da.8	Command speed	-	Setting not required (Setting value is ignored.)
	Da.9	Dwell time	-	Setting not required (Setting value is ignored.)
	Da.10	M code	10	Set this when other sub operation commands are issued in combination with the No. 1 positioning data.

strule Refer to Section 5.3 "List of positioning data" for information on the setting details.

[2] Changing to a new current value using the start No. (No. 9003) for a current value changing

Operation chart

The current value is changed by setting the new current value in the current value changing buffer memory " Cd.9 Current value changing", setting "9003" in the " Cd.3 Positioning start No.", and turning ON the positioning start signal.

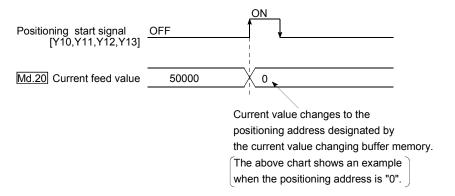


Restrictions

- (1) An axis error "Outside new current value range" (error code: 514) will occur if the designated value is outside the setting range when "degree" is set in "Unit setting".
- (2) An error "Software stroke limit +" or "Software stroke limit –" (error code: 507 or 508) will occur if the designated value is outside the software stroke limit range.
- (3) The current value cannot be changed during stop commands and while the M code ON signal is ON.
- (4) The M code output function is made invalid.

Current value changing procedure

The following shows the procedure for changing the current value to a new value.

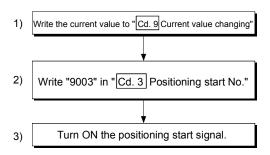

■ Setting method for the current value changing function

The following shows an example of a sequence program and data setting to change the current value to a new value with the positioning start signal. (The Md.20 Current feed value is changed to "5000.0µm" in the example shown.)

(1) Set the following data. (Set with the sequence program shown in (3), while referring to the start time chart shown in (2).)

	0-44	Setting	Setting Catting datails		Buffer memory address			
Setting item		value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4	
Cd.3	Cd.3 Positioning start No.		Set the start No. "9003" for the new current value.	1500	1600	1700	1800	
Cd.9	Current value changing	50000	Set the new " Md.20 Current feed value".	1506	1606	1706	1806	
	Carron raido orianging	22300	outlott look take !	1507	1607	1707	1807	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

(2) The following shows a start time chart.


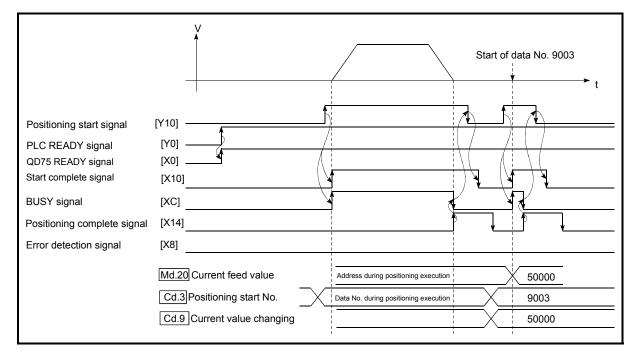


Fig. 9.21 Changing to a new current value using the start No. (No. 9003) for a current value changing

(3) Add the following sequence program to the control program, and write it to the CPU module.

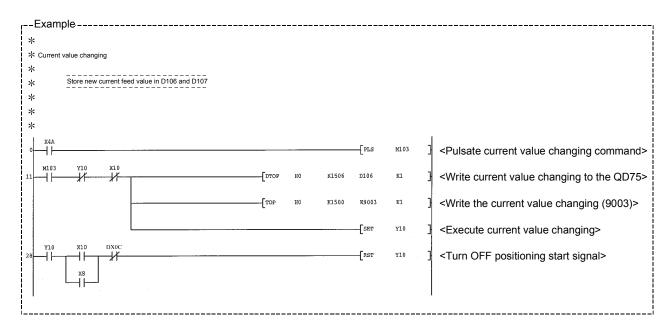

9.2.22 NOP instruction

The NOP instruction is used for the nonexecutable control system.

Operation

The positioning data No. to which the NOP instruction is set transfers, without any processing, to the operation for the next positioning data No.

Positioning data setting examples

The following table shows the setting examples when "NOP instruction" is set in positioning data No. 1 of axis 1.

	Setting ite	em	Setting example	Setting details
	Da.1	Operation pattern	-	Setting not required (Setting value is ignored.)
	Da.2	Control system	NOP instruction	Set the NOP instruction
	Da.3	Acceleration time No.	-	Setting not required (Setting value is ignored.)
	Da.4	Deceleration time No.	-	Setting not required (Setting value is ignored.)
Axis 1	Da.5	Axis to be interpolated	-	Setting not required (Setting value is ignored.)
positioning data No. 1	Da.6	Positioning address/ movement amount	-	Setting not required (Setting value is ignored.)
	Da.7	Arc address	-	Setting not required (Setting value is ignored.)
	Da.8	Command speed	-	Setting not required (Setting value is ignored.)
	Da.9	Dwell time	-	Setting not required (Setting value is ignored.)
	Da.10	M code	-	Setting not required (Setting value is ignored.)

st Refer to Section 5.3 "List of positioning data" for information on the setting details.

Restrictions

An error "Control system setting error" (error code: 524) will occur if the "NOP instruction" is set for the control system of the positioning data No. 600.

POINT

<Use example of NOP instruction>

If there is a possibility of speed switching or temporary stop (automatic deceleration) at a point between two points during positioning, that data can be reserved with the NOP instruction to change the data merely by the replacement of the identifier.

9.2.23 JUMP instruction

The JUMP instruction is used to control the operation so it jumps to a positioning data No. set in the positioning data during "continuous positioning control" or "continuous path control".

JUMP instruction include the following two types of JUMP.

(1) Unconditional JUMP

When no execution conditions are set for the JUMP instruction (When "0" is set as the condition data No.)

(2) Conditional JUMP

When execution conditions are set for the JUMP instruction (The conditions are set in the "condition data" used with "high-level positioning control".)

Using the JUMP instruction enables repeating of the same positioning control, or selection of positioning data by the execution conditions during "continuous positioning control" or "continuous path control".

Operation

(1) Unconditional JUMP

The JUMP instruction is unconditionally executed. The operation jumps to the positioning data No. set in " Da.9 Dwell time".

(2) Conditional JUMP

The block start condition data is used as the JUMP instruction execution conditions.

- When block positioning data No. 7000 to 7004 is started:
 Each block condition data is used.
- When positioning data No. 1 to 600 is started:
 Start block 0 condition data is used.
- When the execution conditions set in " Da.10 M code" of the JUMP instruction have been established:
- the JUMP instruction is executed to jump the operation to the positioning data No. set in " Da.9 Dwell time".
- When the execution conditions set in " Da.10 M code" of the JUMP instruction have not been established:
 the JUMP instruction is ignored, and the next positioning data No.is

Restrictions

executed.

(1) When using a conditional JUMP instruction, establish the JUMP instruction execution conditions by the 4th positioning data No. before the JUMP instruction positioning data No.

If the JUMP instruction execution conditions are not established by the time the 4th positioning control is carried out before the JUMP instruction positioning data No., the operation will be processed as an operation without established JUMP instruction execution conditions.

(During execution of continuous path control/continuous positioning control, the QD75 calculates the positioning data of the positioning data No. four items ahead of the current positioning data.)

(2) Positioning control such as loops cannot be executed by conditional JUMP instructions alone until the conditions have been established. As the target of the JUMP instruction, specify a positioning data that is controlled by other than JUMP and NOP instructions.

■ Positioning data setting example

The following table shows setting examples when "JUMP instruction" is set in positioning data No. 1 of axis 1.

	Setting item		Setting example	Setting details
	Da.1	Operation pattern	_	Setting not required. (Setting value is ignored.)
	Da.2	Control system	JUMP instruction	Set the JUMP instruction.
	Da.3 Acceleration time No.		_	Setting not required. (Setting value is ignored.)
1.0	Da.4	Deceleration time No.	_	Setting not required. (Setting value is ignored.)
data No	Da.5	Axis to be interpolated	-	Setting not required. (Setting value is ignored.)
Positioning c	Da.6	Positioning address/ movement amount	-	Setting not required. (Setting value is ignored.)
ositic	Da.7	Arc address	_	Setting not required. (Setting value is ignored.)
Ь	Da.8	Command speed	_	Setting not required. (Setting value is ignored.)
Axis 1	Da.9	Dwell time	500	Set the positioning data No. 1 to 600 for the JUMP destination. (The positioning data No. of the JUMP instruction cannot be set. Setting its own positioning data No. will result in an error "Illegal data No." (error code: 502).)
	Da.10	M code	1	Set the JUMP instruction execution conditions with the condition data No. 0 : Unconditional JUMP 1 to 10 : Condition data No. ("Simultaneous start" condition data cannot be set.)

st Refer to Section 5.3 "List of positioning data" for information on the setting details.

9.2.24 LOOP

The LOOP is used for loop control by the repetition of LOOP to LEND.

Operation

The LOOP to LEND loop is repeated by set repeat cycles.

Positioning data setting examples

The following table shows the setting examples when "LOOP" is set in positioning data No. 1 of axis 1.

	Setting item		Setting example	Setting details
	Da.1	Operation pattern	_	Setting not required. (Setting value is ignored.)
	Da.2	Control system	LOOP	Set the LOOP.
No. 1	Da.3	Acceleration time No.	_	Setting not required. (Setting value is ignored.)
data	Da.4	Deceleration time No.	_	Setting not required. (Setting value is ignored.)
Positioning	Da.5	Axis to be interpolated	_	Setting not required. (Setting value is ignored.)
Posit	Da.6	Positioning address/ movement amount	_	Setting not required. (Setting value is ignored.)
s 1	Da.7	Arc address	_	Setting not required. (Setting value is ignored.)
Axis	Da.8	Command speed	_	Setting not required. (Setting value is ignored.)
	Da.9	Dwell time	_	Setting not required. (Setting value is ignored.)
	Da.10	M code	5	Set the LOOP to LEND repeat cycles.

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

Restrictions

- (1) An error "Control system LOOP setting error" (error code: 545) will occur if a "0" is set for the repeat cycles.
- (2) Even if LEND is absent after LOOP, no error will occur, but repeat processing will not be carried out.
- (3) Nesting is not allowed between LOOP-LEND's. If such setting is made, only the inner LOOP-LEND is processed repeatedly.

POINT

The setting by this control system is easier than that by the special start "FOR loop" of "High-level Positioning Control" (refer to CHAPTER 10).

- <Setting data>
- For special start: Positioning start data, special start data, condition data, and positioning data
- For control system: Positioning data

For the special start FOR to NEXT, the positioning data is required for each of FOR and NEXT points. For the control system, loop can be executed even only by one data.

Also, nesting is enabled by using the control system LOOP to LEND in combination with the special start FOR to NEXT.

However LOOP to LEND cannot be set across block. Always set LOOP to LEND so that the processing ends within one block.

(For details of the "block", refer to Section 10.1 "Outline of high-level positioning control".)

9.2.25 LEND

The LEND is used to return the operation to the top of the repeat (LOOP to LEND) loop.

Operation

When the repeat cycle designated by the LOOP becomes 0, the loop is terminated, and the next positioning data No. processing is started. (The operation pattern, if set to "Positioning complete", will be ignored.)

When the operation is stopped after the repeat operation is executed by designated cycles, the dummy positioning data (for example, incremental positioning without movement amount) is set next to LEND.

Positioning data No.	Operation pattern	Control system	Conditions	Operation
1	Continuous control	ABS2		Executed in the
2	Positioning complete	LOOP	Number of loop cycles: 2	order of the positioning data
3	Continuous path control	ABS2		No. 1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 5 \rightarrow 2
4	Continuous control	ABS2		\rightarrow 3 \rightarrow 4 \rightarrow 5
5	Positioning complete	LEND		→ 6.(The operation
6	Positioning complete	ABS2		patterns of the positioning data Nos. 2 and 5 are ignored.)

Positioning data setting examples

The following table shows the setting examples when "LEND" is set in positioning data No. 8 of axis 1.

	Setting item		Setting example	Setting details
	Da.1	Operation pattern	_	Setting not required. (Setting value is ignored.)
	Da.2	Control system	LEND	Set the LEND.
No. 8	Da.3	Acceleration time No.	_	Setting not required. (Setting value is ignored.)
data	Da.4	Deceleration time No.	_	Setting not required. (Setting value is ignored.)
Positioning	Da.5 Axis to be interpolated		_	Setting not required. (Setting value is ignored.)
Posit	Da.6	Positioning address/ movement amount	_	Setting not required. (Setting value is ignored.)
s 1	Da.7	Arc address	_	Setting not required. (Setting value is ignored.)
Axis	Da.8	Command speed	_	Setting not required. (Setting value is ignored.)
	Da.9	Dwell time	_	Setting not required. (Setting value is ignored.)
	Da.10	M code	_	Setting not required. (Setting value is ignored.)

^{*} Refer to Section 5.3 "List of positioning data" for information on the setting details.

Restrictions

(1) Ignore the "LEND" before the "LOOP" is executed.

CHAPTER 10 HIGH-LEVEL POSITIONING CONTROL

The details and usage of high-level positioning control (control functions using the "block start data") are explained in this chapter.

High-level positioning control is used to carry out applied control using the "positioning data". Examples of applied control are using conditional judgment to control "positioning data" set with the major positioning control, or simultaneously starting "positioning data" for several different axes.

Read the execution procedures and settings for each control, and set as required.

10.1	Outline of high-level positioning control	10	0-	2
	10.1.1 Data required for high-level positioning control	10	0-	3
	10.1.2 "Block start data" and "condition data" configuration	10	0-	4
10.2	High-level positioning control execution procedure	10	0-	6
10.3	Setting the block start data	10	0-	7
	10.3.1 Relation between various controls and block start data	10	0-	7
	10.3.2 Block start (normal start)	10	0-	8
	10.3.3 Condition start			
	10.3.4 Wait start	1	0- 1	11
	10.3.5 Simultaneous start	1	0- 1	12
	10.3.6 Repeated start (FOR loop)	1	0- 1	14
	10.3.7 Repeated start (FOR condition)	1	0- 1	15
	10.3.8 Restrictions when using the NEXT start	1	0- 1	16
10.4	Setting the condition data	1	0- 1	17
	10.4.1 Relation between various controls and the condition data	1	0- 1	17
	10.4.2 Condition data setting examples	1	0- 2	20
10.5	Multiple axes simultaneous start control	1	0- 2	21
10.6	Start program for high-level positioning control	1	0- 2	24
	10.6.1 Starting high-level positioning control	1	0- 2	24
	10.6.2 Example of a start program for high-level positioning control	1	0- 2	25

10.1 Outline of high-level positioning control

In "high-level positioning control" the execution order and execution conditions of the "positioning data" are set to carry out more applied positioning. (The execution order and execution conditions are set in the "block start data" and "condition data".) The following applied positioning controls can be carried out with "high-level positioning control".

High-level positioning control	Details
Block *1 start (Normal start)	With one start, executes the positioning data in a random block with the set order.
Condition start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "block start data". • When the condition is established, the " block start data" is executed. • When not established, that " block start data" is ignored, and the next point's " block start data" is executed.
Wait start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the " block start data". • When the condition is established, the " block start data" is executed. • When not established, stops the control until the condition is established. (Waits.)
Simultaneous start *2	Simultaneously executes the positioning data having the No. for the axis designated with the "condition data". (Outputs pulses at the same timing.)
Repeated start (FOR loop)	Repeats the program from the "block start data" set with the "FOR loop" to the "block start data" set in "NEXT" for the designated No. of times.
Repeated start (FOR condition)	Repeats the program from the "block start data" set with the "FOR condition" to the "block start data" set in "NEXT" until the conditions set in the "condition data" are established.

High-level positioning control sub functions

"High-level positioning control" uses the "positioning data" set with the "major positioning control". Refer to Section 3.2.4 "Combination of QD75 main functions and sub functions" for details on sub functions that can be combined with the major positioning control.

Note that the sub function Section 12.7.7 "Pre-reading start function" cannot be used together with "high-level positioning control".

High-level positioning control from peripheral devices

"High-level positioning control" (start of the "block start data") can be executed from GX Configurator-QP test mode.

Refer to GX Configurator-QP Operating Manual for details on starting of the "block start data" from GX Configurator-QP.

REMARK

Block *1:

"1 block" is defined as all the data continuing from the positioning data in which "continuous positioning control" or "continuous path control" is set in the operation pattern (Da.1) to the positioning data in which "independent positioning control (Positioning complete)" is set.

Simultaneous start *2:

Besides the simultaneous start of "block start data" system, the "simultaneous starts" include the "multiple axes simultaneous start control" of control system. Refer to Section 10.5 "Multiple axes simultaneous start control" for details.

10

10.1.1 Data required for high-level positioning control

"High-level positioning control" is executed by setting the required items in the "block start data" and "condition data", then starting that "block start data". Judgment about whether execution is possible, etc., is carried out at execution using the "condition data" designated in the "block start data".

"Block start data" can be set for each No. from 7000 to 7004 (called "block Nos."), and up to 50 points can be set for each axis. (This data is controlled with Nos. called "points" to distinguish it from the positioning data. For example, the 1st block start data item is called the "1st point block start data" or "point No. 1 block start data".)

"Condition data" can be set for each No. from 7000 to 7004 (called "block Nos."), and up to 10 data items can be set for each block No.

The "block start data" and "condition data" are set as 1 set for each block No.


The following table shows an outline of the "block start data" and "condition data" stored in the QD75.

	Setting item		Setting details
data	Da.11	Shape	Set whether to end the control after executing only the "block start data" of the shape itself, or continue executing the "block start data" set in the next point.
rt da	Da.12	Start data No.	Set the "positioning data No." to be executed.
Block start	Da.13	Special start instruction	Set the method by which the positioning data set in Da.12 will be started.
Bic	Da.14	Parameter	Set the conditions by which the start will be executed according to the commands set in Da.13. (Designate the "condition data No." and "No. of repetitions".)


	Setting item		Setting details
	Da.15	Condition target	Designate the "device", "buffer memory storage details", and "positioning data No." elements for which the conditions are set.
data	Da.16	Condition operator	Set the judgment method carried out for the target set in Da.15.
Condition o	Da.17	Address	Set the buffer memory address in which condition judgment is carried out (only when the details set in Da.15 are "buffer memory storage details").
0	Da.18	Parameter 1	Set the required conditions according to the details set in Da.15 and Da.16.
	Da.19	Parameter 2	Set the required conditions according to the details set in Da.15 and Da.16.

10.1.2 "Block start data" and "condition data" configuration

The "block start data" and "condition data" corresponding to "block No. 7000" can be stored in the buffer memory. (The following drawing shows an example for axis 1.)

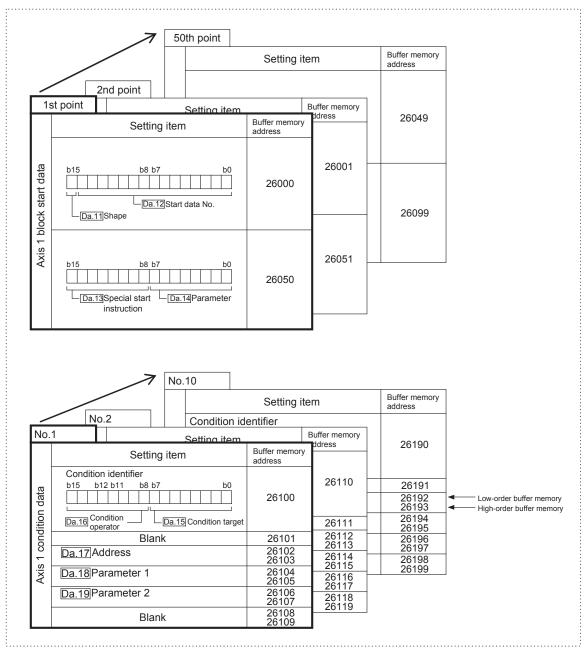


(Same for axis 2, axis 3 and axis 4.)

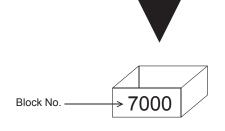


Set in the QD75 with a sequence program or GX Configurator-QP.

Set in QD75 the "block start data" and "condition data" corresponding to the following "block Nos. 7001 to 7004" using GX Configurator-QP or the sequence program. (The following drawing shows an example for axis 1.)

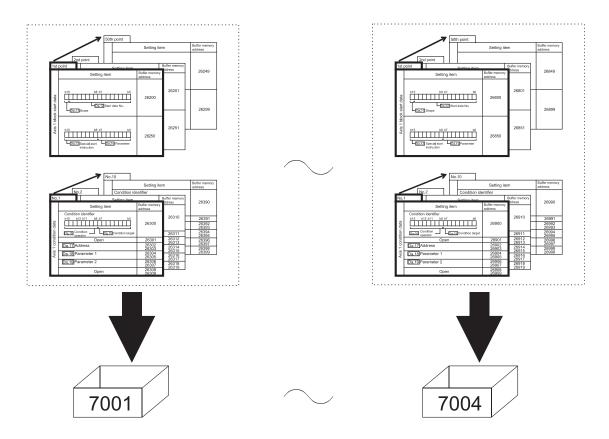

10.2 High-level positioning control execution procedure

High-level positioning control is carried out using the following procedure.

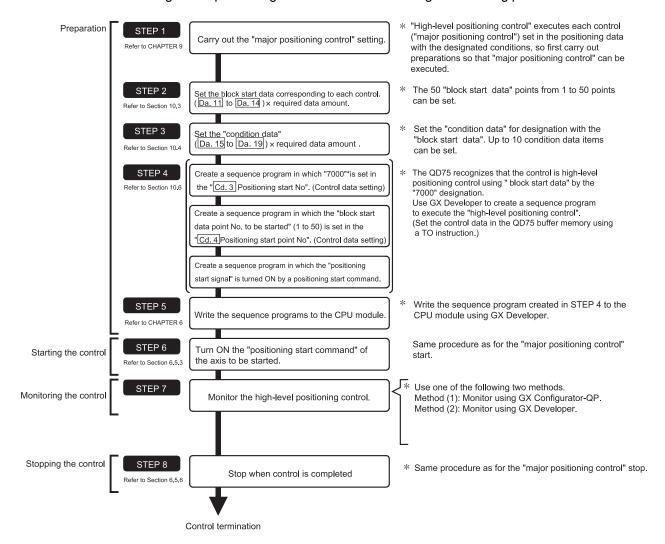

REMARK

- * (1) Five sets of "block start data (50 points)" and "condition data (10 items) corresponding to "7000" to "7004" are set with a sequence program.
 - (2) Five sets of data from "7000" to "7004" can be set when GX Configurator-QP is used. If GX Configurator-QP is used to set the "block start data" and "condition data" corresponding to "7000" to "7004" and write the data to the QD75, "7000" to "7004" can be set in " Cd.3 Positioning start No." in STEP 4

10.3 Setting the block start data

10.3.1 Relation between various controls and block start data

The "block start data" must be set to carry out "high-level positioning control". The setting requirements and details of each "block start data" item to be set differ according to the "Da.13 Special start instruction" setting.

The following shows the "block start data" setting items corresponding to various control systems. The operation details of each control type are explained starting in Section 10.3.2. Also refer to Section 10.4 "Setting the condition data for details on "condition data" with which control execution is judged.

(The "block start data" settings in this chapter are assumed to be carried out using GX Configurator-QP.)

High-level positioning control Block start data setting items		Block start (Normal start)	Condition start	Wait start	Simulta- neous start	Repeated start (FOR loop)	Repeated start (FOR condition)	NEXT start	
Do 11		0 : End	0	0	0	0	×	×	©
Da.11	Shape	1 : Continue	0	0	0	0	0	0	©
Da.12	Da.12 Start data No.					1 to 600			
Da.13	Special start instruction		0	1	2	3	4	5	6
Da.14	Da.14 Parameter		-	Со	ndition data	No.	No. of repetitions	Condition data No.	-

One of the two setting items must be set.

 \bigcirc : Set when required

× : Setting not possible

- : Setting not required (Setting value will be ignored. Use the initial value or a value within the setting range.)

REMARK

It is recommended that the "block start data" be set whenever possible with GX Configurator-QP. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

^{*} The "NEXT start" instruction is used in combination with "repeated start (FOR loop)" and "repeated start (FOR condition)". Control using only the "NEXT start" will not be carried out.

10.3.2 Block start (normal start)

In a "block start (normal start)", the positioning data groups of a block are continuously executed in a set sequence starting from the positioning data set in " Da.12 Start data No." by one start.

Section [2] shows a control example where the "block start data" and "positioning data" are set as shown in section [1].

[1] Setting examples

(1) Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point	1: Continue	1	0: Block start	_
2nd point	1: Continue	2	0: Block start	_
3rd point	1: Continue	5	0: Block start	_
4th point	1: Continue	10	0: Block start	_
5th point	0: End	15	0: Block start	_
•				
•				

(2) Positioning data setting example

Axis 1 position- ing data No.	Da.1 Operation pattern	
1	00: Positioning complete	
2	11: Continuous path control)
3	01: Continuous positioning control	≻1 block ∗
4	00: Positioning complete	J
5	11: Continuous path control	1 block
6	00: Positioning complete	J I BIOOK
•		
10	00: Positioning complete	
•		
15	00: Positioning complete	
•		

REMARK

Block *:

"1 block" is defined as all the data continuing from the positioning data in which "continuous positioning control" or "continuous path control" is set in the operation pattern (Da.1) to the positioning data in which "independent positioning control (Positioning complete)" is set.

[2] Control examples

The following shows the control executed when the "block start data" of the 1st point of axis 1 is set as shown in section [1] and started.

<1> The positioning data is executed in the following order before stopping. Axis 1 positioning data No. 1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 5 \rightarrow 6 \rightarrow 10 \rightarrow 15.

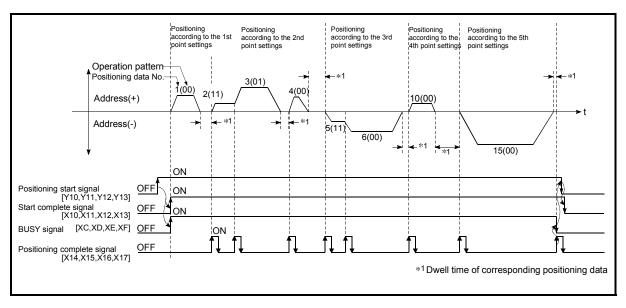


Fig. 10.1 Block start control example

10.3.3 Condition start

In a "condition start", the "condition data" conditional judgment designated in " Da.14 Parameter" is carried out for the positioning data set in " Da.12 Start data No.". If the conditions have been established, the " block start data" set in "1: condition start" is executed. If the conditions have not been established, that " block start data" will be ignored, and the "block start data" of the next point will be executed.

Section [2] shows a control example where the "block start data" and "positioning data" are set as shown in section [1].

[1] Setting examples

Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point	1: Continue	1	1: Condition start	1
2nd point	1: Continue	10	1: Condition start	2
3rd point	0: End	50	0: Block start	_
•				
•				

^{*} The "condition data Nos." have been set in " Da.14 Parameter".

(2) Positioning data setting example

Axis 1 position- ing data No.	Da.1 Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	
50	00: Positioning complete
•	

[2] Control examples

- <1> The conditional judgment set in "condition data No. 1" is carried out before execution of the axis 1 "positioning data No. 1".
 - \rightarrow Conditions established \rightarrow Execute positioning data No. 1, 2, and 3 \rightarrow Go to <2>.
 - \rightarrow Conditions not established \rightarrow Go to <2>.
- <2> The conditional judgment set in "condition data No. 2" is carried out before execution of the axis 1 "positioning data No. 10".
 - → Conditions established → Execute positioning data No. 10, 11, and 12 → Go to <3>.
 - \rightarrow Conditions not established \rightarrow Go to <3>.
- <3> Execute axis 1 "positioning data No. 50" and stop the control.

10.3.4 Wait start

In a "wait start", the "condition data" conditional judgment designated in

" Da.14 Parameter" is carried out for the positioning data set in " Da.12 Start data No.". If the conditions have been established, the " block start data" is executed. If the conditions have not been established, the control stops (waits) until the conditions are established.

Section [2] shows a control example where the "block start data" and "positioning data" are set as shown in section [1].

[1] Setting examples

(1) Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point	1: Continue	1	2: Wait start	3
2nd point	1: Continue	10	0: Block start	_
3rd point	0: End	50	0: Block start	_
•				
•				

^{*} The "condition data Nos." have been set in " Da.14 Parameter".

(2) Positioning data setting example

Axis 1 position- ing data No.	Da.1 Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	
50	00: Positioning complete
•	

[2] Control examples

- <1> The condition judgment set in "condition data No. 3" is performed to "positioning data No. 1" of the axis 1.
 - \rightarrow Conditions established \rightarrow Execute positioning data No. 1, 2, and 3 \rightarrow Go to <2>.
 - \to Conditions not established \to Control stops (waits) until conditions are established \to Go to <1>.
- <2> Execute the axis 1 "positioning data No. 10, 11, 12, and 50" and stop the control.

10.3.5 Simultaneous start

In a "simultaneous start", the positioning data set in the " Da.12 Start data No." and positioning data of other axes set in the "condition data" are simultaneously executed (pulses are output with the same timing).

(The "condition data" is designated with " Da.14 Parameter".)

Section [2] shows a control example where the "block start data" and "positioning data" are set as shown in section [1].

[1] Setting examples

Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point	0: End	1	3: Simultaneous start	4
•				
•				
•				
•				

^{*} It is assumed that the "axis 2 positioning data" for simultaneous starting is set in the "condition data" designated with " Da.14 Parameter".

(2) Positioning data setting example

Axis 1 positioning data No.	Da.1 Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
•	
•	
•	
•	
•	
•	

[2] Control examples

- <1> Check the axis operation status of axis 2 which is regarded as the simultaneously started axis.
 - \rightarrow Axis 2 is standing by \rightarrow Go to <2>.
 - → Axis 2 is carrying out positioning. → An error occurs and simultaneous start will not be carried out.
- <2> Simultaneously start the axis 1 "positioning data No. 1" and axis 2 positioning data set in "condition data No. 4".

[3] Precautions

Positioning data No. executed by simultaneously started axes is set to condition data (" Da.18 Parameter 1"," Da.19 Parameter 2", but the setting value of start axis (the axis which carries out positioning start) should be "0". If the setting value is set to other than "0", the positioning data set in " Da.18 Parameter 1",

- " Da.19 Parameter 2" is given priority to be executed rather than
- " Da.12 Start data No.".

(For details, refer to section 5.5 "List of condition data".)

10.3.6 Repeated start (FOR loop)

10

In a "repeated start (FOR loop)", the data between the "block start data" in which "4: FOR loop" is set in " Da.13 Special start instruction" and the "block start data" in which "6: NEXT start" is set in " Da.13 Special start instruction " is repeatedly executed for the No. of times set in " Da.14 Parameter". An endless loop will result if the No. of repetitions is set to "0".

(The No. of repetitions is set in " Da.14 Parameter" of the " block start data" in which "4: FOR loop" is set in " Da.13 Special start instruction".)

Section [2] shows a control example where the "block start data" and "positioning data" are set as shown in section [1].

[1] Setting examples

Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point	1: Continue	1	4: FOR loop	2
2nd point	1: Continue	10	0: Block start	_
3rd point	0: End	50	6: NEXT start	_
•				
•				

^{*} The "condition data Nos." have been set in " Da.14 Parameter".

(2) Positioning data setting example

Axis 1 position- ing data No.	Da.1 Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	00: Positioning complete
•	
50	01: Continuous positioning control
51	00: Positioning complete
•	

[2] Control examples

- <1> Execute the axis 1 "positioning data No. 1, 2, 3, 10, 11, 50, and 51".
- <2> Return to the axis 1 "1st point block start data". Again execute the axis 1 "positioning data No. 1, 2, 3, 10, 11, 50 and 51", and then stop the control. (Repeat for the No. of times (2 times) set in Da.14.)

10.3.7 Repeated start (FOR condition)

In a "repeated start (FOR condition)", the data between the " block start data" in which "5: FOR condition" is set in " Da.13 Special start instruction" and the " block start data" in which "6: NEXT start" is set in " Da.13 Special start instruction" is repeatedly executed until the establishment of the conditions set in the "condition data". Conditional judgment is carried out as soon as switching to the point of "6: NEXT start" (before positioning of NEXT start point).

(The "condition data" designation is set in " Da.14 Parameter" of the " block start data" in which "5: FOR condition" is set in " Da.13 Special start instruction".)

Section [2] shows a control example where the "block start data" and "positioning data" are set as shown in section [1].

[1] Setting examples

(1) Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point	1: Continue	1	5: FOR condition	5
2nd point	1: Continue	10	0: Block start	_
3rd point	0: End	50	6: NEXT start	_
•				
•				

^{*} The "condition data Nos." have been set in " Da.14 Parameter".

(2) Positioning data setting example

Axis 1 position- ing data No.	Da.1 Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	00: Positioning complete
•	
50	01: Continuous positioning control
51	00: Positioning complete
•	

[2] Control examples

- <1> Execute axis 1 "Positioning data No. 1, 2, 3, 10, 11".
- <2> Execute the conditional judgment set in axis 1 "Condition data No.5". *1
 - $^{\rightarrow}$ Conditions not established $^{\rightarrow}$ Execute "Positioning data No. 50, 51". Go to <1>
 - → Conditions established → Execute "Positioning data No.50, 51" and complete the positioning.
- *1: Conditional judgment is carried out as soon as switching to NEXT start point (before positioning of NEXT start point).

10.3.8 Restrictions when using the NEXT start

The "NEXT start" is a instruction indicating the end of the repetitions when executing Section 10.3.6 "Repeated start (FOR loop)" and Section 10.3.7 "Repeated start (FOR condition)".

The following shows the restrictions when setting "6: NEXT start" in the " block start data".

- (1) The processing when "6: NEXT start" is set before execution of "4: FOR loop" or "5: FOR condition" is the same as that for a "0: block start".
- (2) Repeated processing will not be carried out if there is no "6: NEXT start" instruction after the "4: FOR loop" or "5: FOR condition" instruction. (Note that an "error" will not occur.)
- (3) Nesting is not possible between "4: FOR loop" and "6: NEXT start", or between "5: FOR condition" and "6: NEXT start". A warning "FOR to NEXT nest construction" (warning code: 506) will occur if nesting is attempted.

[Operating examples without nesting structure] [Operating examples with nesting structure]

Start block data	Da.13 Special start instruction
1st point	Normal start
2nd point	FOR ←
3rd point	Normal start
4th point	NEXT
5th point	Normal start
6th point	Normal start
7th point	FOR ←
8th point	Normal start
9th point	NEXT
•	
•	

Start block data	Da.13 Special start instruction	
1st point	Normal start	
2nd point	FOR	
3rd point	Normal start	
4th point	FOR ◆	
5th point	Normal start	
6th point	Normal start	
7th point	NEXT	
8th point	Normal start	
9th point	NEXT	
•		

A warning will occur when starting the 4th point "FOR".

The JUMP destination of the 7th point "NEXT" is the 4th point. The 9th point "NEXT" is processed as normal start.

10.4 Setting the condition data

10.4.1 Relation between various controls and the condition data

"Condition data" is set in the following cases.

- (1) When setting conditions during execution of Section 9.2.23 "JUMP instruction" (major positioning control)
- (2) When setting conditions during execution of "high-level positioning control"

The "condition data" to be set includes the 5 setting items from Da.15 to Da.19, but the setting requirements and details differ according to the control system and setting conditions.

The following shows the "condition data" " Da.15 Condition target" corresponding to the different types of control.

(The "condition data" settings in this chapter are assumed to be carried out using GX Configurator-QP.)

Control type		High-lev	Major positioning control		
Da.15 Setting item	Block start	Wait start	Simultaneous start	Repeated start (For condition)	JUMP instruction
01: Device X*1	0	0	×	0	©
02: Device Y * 1	0	0	×	0	0
03: Buffer memory (1 word)	0	0	×	0	0
04: Buffer memory (2 words)	0	0	×	0	0
05: Positioning data No.	×	×	0	×	×

One of the setting items must be set.

REMARK

It is recommended that the "condition data" be set whenever possible with GX Configurator-QP. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

^{× :} Setting not possible

^{*1:} Refers to buffer memories and devices X/Y which belongs to QD75.

The setting requirements and details of the following "condition data" Da.16 to Da.19 setting items differ according to the "Da.15 Condition target" setting. The following shows the Da.16 to Da.19 setting items corresponding to the "Da.15 Condition target".

Other setting item Da.15 Setting item		Da.17 Address	Da Paran	.18 neter 1		.19 neter 2
01н: Device X	07н : DEV=ON	_		(bit No.)		_
02н: Device Y	08н : DEV=OFF		0 to 1Fн	(bit No.)		
03н: Buffer memory (1 word) *1 04н: Buffer memory (2 words) *1	01 _H : **=P1 02 _H : **≠P1 03 _H : **≤P1 04 _H : **≥P1 05 _H : P1≤**≤P2 06 _H : **≤P1, P2≤**	Buffer memory address	P1 (nume	eric value)	(Set only wh	eric value) en Da.16 is r [06н].)
05н: Positioning data	10H: Axis 1 designation 20H: Axis 2 designation 30H: Axis 1 and axis 2 designation 40H: Axis 3 designation 50H: Axis 1 and axis 3 designation 60H: Axis 2 and axis 3 designation 70H: Axis 1, axis 2 and axis 3 designation 80H: Axis 4 designation	_	Low-order 16 bits	Axis 1 positioning data No. *2	Low-order 16 bits	Axis 3 positioning data No. *2
No.	90H: Axis 1 and axis 4 designation A0H: Axis 2 and axis 4 designation B0H: Axis 1, axis 2 and axis 4 designation C0H: Axis 3 and axis 4 designation D0H: Axis 1, axis 3 and axis 4 designation E0H: Axis 2, axis 3 and axis 4 designation		High-order 16 bits	Axis 2 positioning data No. *2	High-order 16 bits	Axis 4 positioning data No. *2

Setting not required (Setting value will be ignored. Use the initial value or a value within the setting range.)

** : Value stored in buffer memory designated in Da.17.

*1 : Comparison of ≤ and ≥ is judged as signed values. Refer to Section 5.5 "List of condition data" for the setting contents


*2 : The setting value of start axis (the axis which executes positioning start) should be "0". If the setting value is set to other than "0", the positioning data set in Da.18 Parameter 1 and Da.19 Parameter 2 is given priority to be executed rather than Da.12 Start data No.".

Judgment whether the condition operator is "=" or "≠" at the wait start.

Judgment on data is carried out for each control cycle of the QD75. Thus, in the judgment on the data such as current feed value which varies continuously, the operator "=" may not be detected. If this occurs, use a range operator.

REMARK

The "PLC CPU memory area" can be designated as the buffer memory address to be designated in Da.17. (Refer to Section 7.1.1 "Configuration and roles of QD75 memory".)

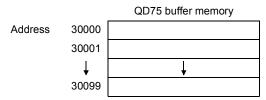

10.4.2 Condition data setting examples

The following shows setting examples for "condition data".

(1) Setting the device ON/OFF as a condition

[Condition] Device "XC" (= Axis 1 Busy signal) is OFF

Da.15 Condition target	Da.16 Condition operator	Da.17 Address	Da.18 Parameter 1	Da.19 Parameter 2
01н: Device X	08н: DEV=OFF	ı	0Сн	_

(2) Setting the numeric value stored in the "buffer memory" as a condition

[Condition]

The value stored in buffer memory addresses "800, 801" (= " $\boxed{\text{Md.20}}$ Current feed value") is "1000" or larger.

Da.15 Condition target	Da.16 Condition operator	Condition Da. 17		Da.19 Parameter 2
04н: Buffer memory (2 words)	04н: * * ≥ P1	800	1000	-

(3) Designating the axis and positioning data No. to be simultaneously started in "simultaneous start"

[Condition]

Simultaneously starting "axis 2 positioning data No.3".

Da.15 Condition target	Da.16 Condition operator	Da.17 Address	Da.18 Parameter 1	Da.19 Parameter 2
05н: Positioning data No.	20н: Axis 2 designation	-	High-order 16 bits "0003 _H " *1	- * 1

 $[\]pm$ 1: The setting value of start axis (the axis which executes positioning start) should be "0000 $_{\rm H}$ ".

10.5 Multiple axes simultaneous start control

The "multiple axes simultaneous start control" starts and controls the multiple axes simultaneously by outputting pulses to the axis to be started at the same timing as the start axis.

The maximum of four axes can be started simultaneously.

[1] Control details


Multiple axes simultaneous start control is executed as follows. Set the start data No. to the buffer memory areas " Cd.30 to Cd.33 Simultaneous starting axis start data No. (axis 1 to 4 start data No.)". Set "9004" to " Cd.3 Positioning start No." of the start axis. Turn ON the positioning start signal.

[2] Restrictions

- (1) The error "Error before simultaneous start" (error code: 501) will occur and all simultaneously started axes will not start if the simultaneously started axis start data No. is not set to the axis control data on the start axis or set outside the setting range.
- (2) The error "Error before simultaneous start" (error code: 501) will occur and all simultaneously started axes will not start if either of the simultaneously started axes is BUSY.
- (3) The error "Error before simultaneous start" (error code: 501) will occur and all simultaneously started axes will not start if an error occurs during the analysis of the positioning data on the simultaneously started axes.
- (4) No error or warning will occur if only the start axis is the simultaneously started axis.
- (5) This function cannot be used with the sub function Section 12.7.7 "Prereading start function".

[3] Multiple axes simultaneous start control procedure

The procedure for multiple axes simultaneous start control is as follows.

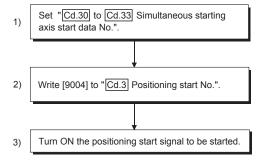

[4] Multiple axes simultaneous start control function setting method
The following shows the setting of the data used to execute the multiple axes
simultaneous start control with positioning start signals (The axis control data on
the start axis is set).

		Cotting	Setting		Buffer memory addres			
S	Setting item		Setting details	Axis 1	Axis 2	Axis 3	Axis 4	
Cd.3	Positioning start No.	9004	Set the multiple axes simultaneous start control start No. "9004".	1500	1600	1700	1800	
Cd.30	Simultaneous starting axis start data No. (Axis 1 start data No.)				1640	1740	1840	
Cd.31	Simultaneous starting axis start data No. (Axis 2 start data No.)		multaneously started axis start data No.		1641	1741	1841	
Cd.32	Simultaneous starting axis start data No. (Axis 3 start data No.)	axes.	Set a "0" for the axis other than the simultaneously started axes.				1842	
Cd.33	Simultaneous starting axis start data No. (Axis 4 start data No.)				1643	1743	1843	

^{*} Refer to Section 5.7 "List of control data" for information on setting details.

[5] Setting examples

The following shows the setting examples in which the axis 1 is used as the start axis and the simultaneously started axes are used as the axes 2 and 4.

Setting item		Setting value	Setting details	Buffer memory address (Axis 1)
Cd.3	Positioning start No.	9004	Set the multiple axes simultaneous start control start No. "9004".	1500
Cd.30	Simultaneous starting axis start data No. (Axis 1 start data No.)	100	The axis 1 starts the positioning data No. 100.	1540
Cd.31	Simultaneous starting axis start data No. (Axis 2 start data No.)	200	Immediately after the start of the axis 1, the axis 2 starts the axis 2 positioning data No. 200.	1541
Cd.32	Simultaneous starting axis start data No. (Axis 3 start data No.)	0	Will not start simultaneously.	1542
Cd.33	Simultaneous starting axis start data No. (Axis 4 start data No.)	300	Immediately after the start of the axis 1, the axis 4 starts the axis 4 positioning data No. 300.	1543

POINTS

- (1) The "multiple axes simultaneous start control" carries out an operation equivalent to the "simultaneous start" using the "block start data".
- (2) The setting of the "multiple axes simultaneous start control" is easier than that of the "simultaneous start" using the "block start data".
 - Setting items for "simultaneous start" using "block start data"

 Positioning start data, block start data, condition data, and positioning data
 - Setting items for "multiple axes simultaneous start control"
 Positioning data and axis control data

10.6 Start program for high-level positioning control

10.6.1 Starting high-level positioning control

To execute high-level positioning control, a sequence program must be created to start the control in the same method as for major positioning control.

The following shows the procedure for starting the "1st point block start data" (regarded as block No. 7000) set in axis 1.

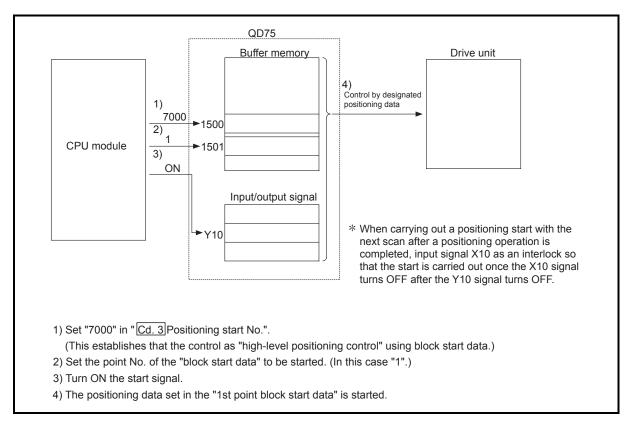


Fig. 10.2 High-level positioning control start procedure

10.6.2 Example of a start program for high-level positioning control

The following shows an example of a start program for high-level positioning control in which the 1st point "block start data" of axis 1 is started. (The block No. is regarded as "7000".)

■ Control data that require setting

The following control data must be set to execute high-level positioning control. The setting is carried out using a sequence program.

			Cotting			Buffer memory address			
		Setting item	Setting value	Setting details		Axis 2	Axis 3	Axis 4	
		Positioning start No.	7000	Set "7000" to indicate control using " block start data".	1500	1600	1700	1800	
		Positioning starting point No.	1	Set the point No. of the " block start data" to be started.	1501	1601	1701	1801	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

Start conditions

The following conditions must be fulfilled when starting the control. The required conditions must also be integrated into the sequence program, and configured so the control does not start unless the conditions are fulfilled.

						Device			
	Signal name		Signal state		Axis 2	Axis 3	Axis 4		
	PLC READY signal	ON CPU module preparation completed			Y0				
	QD75 READY signal	ON	QD75 preparation completed		Х	.0			
Interface	Synchronization flag	ON	QD75 buffer memory The access is possible.	X1					
signal	Axis stop signal	OFF	Axis stop signal is OFF	Y4	Y5	Y6	Y7		
	Start complete signal	OFF	F Start complete signal is OFF		X11	X12	X13		
	BUSY signal	OFF	BUSY signal is OFF	XC	XD	XE	XF		
	Error detection signal	OFF	There is no error	X8	X9	XA	XB		
	M code ON signal	OFF	M code ON signal is OFF	X4	X5	X6	X7		
	Drive unit READY signal	ON	Drive unit preparation completed	_					
External	Stop signal	OFF	Stop signal is OFF	_					
signal	Upper limit (FLS)	ON	Within limit range		-	_	-		
	Lower limit (RLS) ON Within limit		Within limit range						

Start time chart

The following chart shows a time chart in which the positioning data No. 1, 2, 10, 11, and 12 of axis 1 are continuously executed as an example.

(1) Block start data setting example

Axis 1 block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction	Da.14 Parameter
1st point 1: Continue		1	0: Block start	_
2nd point 0: End		10	0: Block start	_
•				
•				

(2) Positioning data setting example

Axis 1 position- ing data No.	Da.1 Operation pattern
1	11: Continuous path control
2	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	

(3) Start time chart


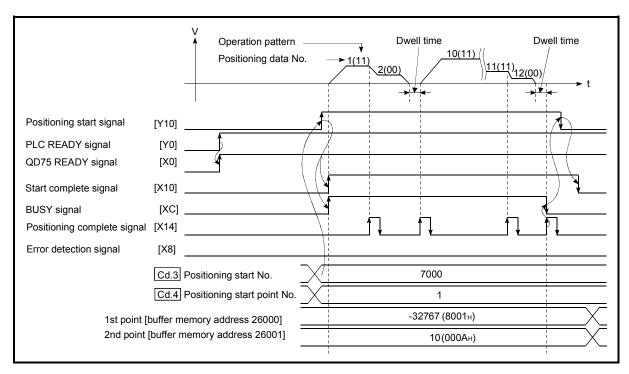


Fig. 10.3 Start time chart for high-level positioning control (block start)

■ Creating the program

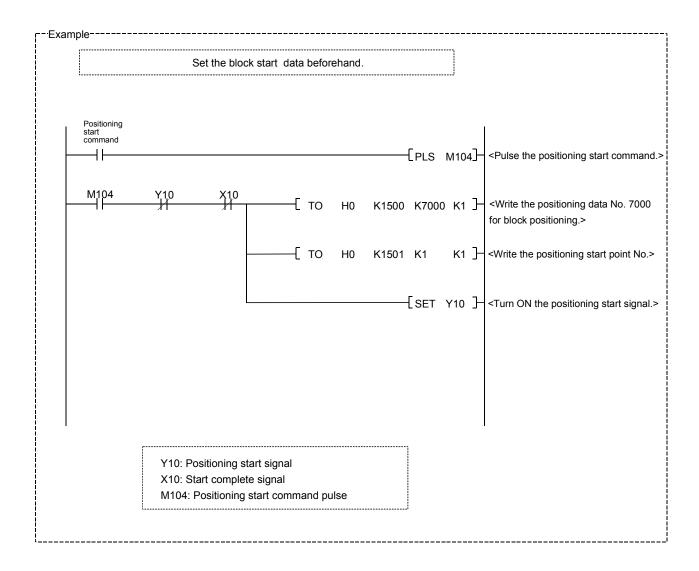

10 HIGH-LEVEL POSITIONING CONTROL	MELSEC-Q
MEMO	

CHAPTER 11 MANUAL CONTROL

The details and usage of manual control are explained in this chapter.

In manual control, pulse output commands are issued during a JOG operation and an inching operation executed by the turning ON of the JOG START signal, or from a manual pulse generator connected to the QD75.

Manual control using a sequence program from the CPU module is explained in this chapter. Refer to GX Configurator-QP Operating Manual for an explanation of manual control (JOG operation, inching operation and manual pulse generator operation) using the peripheral devices.

11.1	Outline	of manual control	11-	2
	11.1.1	Three manual control methods	11-	2
11.2	JOG op	peration	11-	4
		Outline of JOG operation		
	11.2.2	JOG operation execution procedure	11-	7
	11.2.3	Setting the required parameters for JOG operation	11-	8
	11.2.4	Creating start programs for JOG operation	11-	10
	11.2.5	JOG operation example	11-	13
11.3	Inching	operation	11-	16
	11.3.1	Outline of inching operation	11-	16
	11.3.2	Inching operation execution procedure	11-	19
	11.3.3	Setting the required parameters for inching operation	11-	20
	11.3.4	Creating a program to enable/disable the inching operation	11-	21
	11.3.5	Inching operation example	11-	24
11.4	Manual	pulse generator operation	11-	26
	11.4.1	Outline of manual pulse generator operation	11-	26
	11.4.2	Manual pulse generator operation execution procedure	11-	30
	11.4.3	Setting the required parameters for manual pulse generator opera-	ation .11-	31
	11.4.4	Creating a program to enable/disable the manual pulse generator	•	
		operation	11-	32

11.1 Outline of manual control

11.1.1 Three manual control methods

"Manual control" refers to control in which positioning data is not used, and a positioning operation is carried out in response to signal input from an external source. The three types of this "manual control" are explained below.

[1] JOG operation

"JOG operation" is a control method in which the machine is moved by only a movement amount (pulses are continuously outputted while the JOG START signal is ON). This operation is used to move the workpiece in the direction in which the limit signal is ON, when the operation is stopped by turning the limit signal OFF to confirm the positioning system connection and obtain the positioning data address (Refer to Section 12.7.4 "Teaching function").

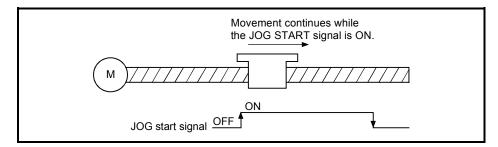


Fig. 11.1 JOG operation

[2] Inching operation

"Inching operation" is a control method in which a minute movement amount of pulses is output manually at 1.8ms.

When the "inching movement amount" of the axis control data is set by JOG operation, the workpiece is moved by a set movement amount. (When the "inching movement amount" is set to "0", the operation is performed as the JOG operation.)

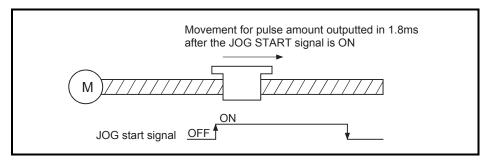


Fig. 11.2 Inching operation

[3] Manual pulse generator operation

"Manual pulse generator operation" is a control method in which positioning is carried out in response to the No. of pulses input from a manual pulse generator (the No. of input pulses is output). This operation is used for manual fine adjustment, etc., when carrying out accurate positioning to obtain the positioning address.

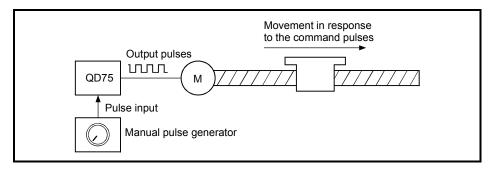


Fig. 11.3 Manual pulse generator control

Manual control sub functions

Refer to Section 3.2.4 "Combination of QD75 major functions and sub functions" for details on "sub functions" that can be combined with manual control. Also refer to CHAPTER 12 "CONTROL SUB FUNCTIONS" for details on each sub function.

Carrying out manual control from peripheral devices

"JOG operation", "Inching operation" and enabling/disabling of the "manual pulse generator operation" can be executed from GX Configurator-QP test mode. Refer to GX Configurator-QP Operating Manual for details on manual control from GX Configurator-QP.

Monitoring manual control

Refer to Section 5.6 "List of monitor data" when directly monitoring the buffer memory using GX Developer.

Also refer to GX Configurator-QP Operating Manual when monitoring with the monitor functions of GX Configurator-QP.

11.2 JOG operation

11.2.1 Outline of JOG operation

Important


Use the hardware stroke limit function when carrying out JOG operation near the upper or lower limits. (Refer to Section 12.4.4).

* If the hardware stroke limit function is not used, the workpiece may exceed the moving range, causing an accident.

JOG operation

In JOG operation, the FORWARD run JOG start signal (Y8, YA, YC, YE) or REVERSE run JOG start signal (Y9, YB, YD, YF) turns ON, causing pulses to be output to the drive unit from the QD75 while the signal is ON. The workpiece is then moved in the designated direction.

The following shows examples of JOG operation.

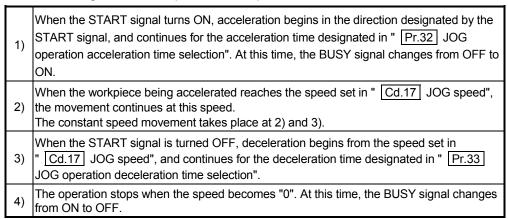

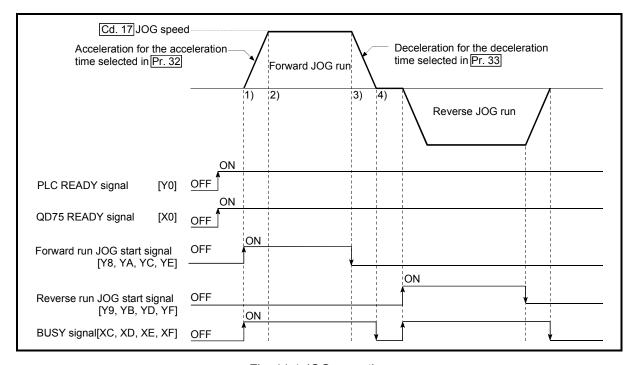


Fig. 11.4 JOG operation


11

Precautions during operation

- (1) For safety, first set " Cd.17 JOG speed" to a smaller value and check the movement. Then gradually increase the value.
- (2) The axis error "Outside JOG speed range" (error code: 300) will occur and the operation will not start if the "JOG speed" is outside the setting range at the JOG start.
- (3) The axis error "JOG speed limit value error" (error code: 956) will occur and the operation will not start if " Pr.31 JOG speed limit value" is set to a value larger than " Pr.8 Speed limit value".
- (4) If " Cd.17 JOG speed" exceeds the speed set in " Pr.31 JOG speed limit value", the workpiece will move at the " Pr.31 JOG speed limit value" and the warning "JOG speed limit value" (warning code: 301) will occur in the QD75.
- (5) The JOG operation can be continued even if an "Axis warning" has occurred.
- (6) Set a "0" in " Cd.16 Inching movement amount". If a value other than "0" is set, the operation will become an inching operation (Refer to Section 11.3 "Inching operation").

Operations when stroke limit error occurs

When the operation is stopped by hardware stroke limit error or software stroke limit error, the JOG operation can execute in an opposite way (direction within normal limits) after an error reset. (An error will occur again if JOG start signal is turned ON in a direction to outside the stroke limit.)

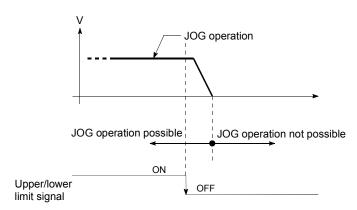

■ JOG operation timing and processing time

The following drawing shows details of the JOG operation timing and processing time.

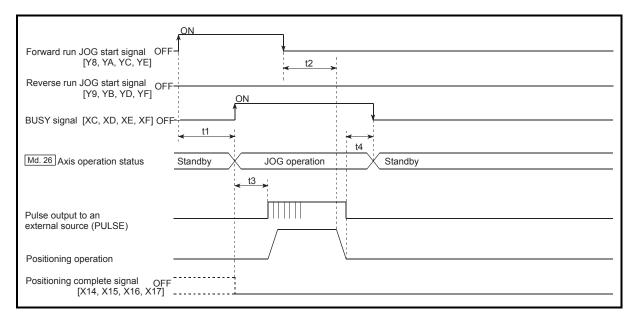



Fig. 11.5 JOG operation timing and processing times


Normal timing times

Model	t1	t2	t3	t4
QD75P□N/QD75D□N	1.0 to 3.0ms	0 to 0.9ms	1.3 to 2.2ms	0 to 0.9ms
QD75P□/QD75D□	1.0 to 3.0ms	0 to 1.8ms	2.7 to 4.4ms	0 to 1.8ms

• Delays may occur in the t1 timing time due to the operation status of other axes.

11.2.2 JOG operation execution procedure

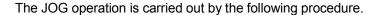

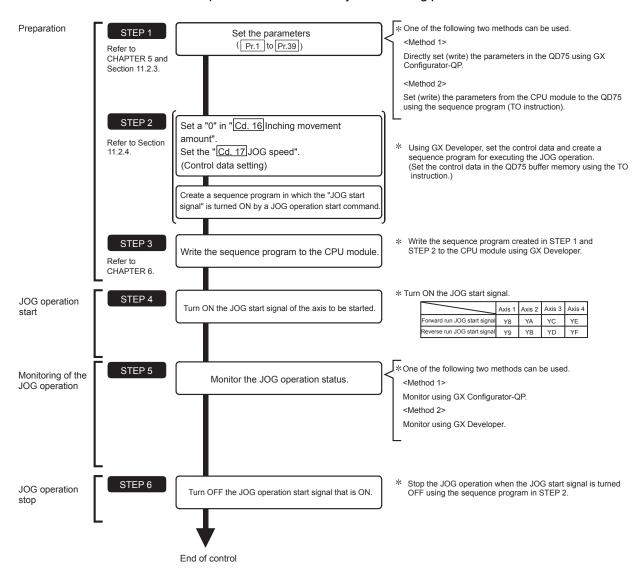

REMARK

- Mechanical elements such as limit switches are considered as already installed.
- Parameter settings work in common for all control using the QD75.

11.2.3 Setting the required parameters for JOG operation

The "Parameters" must be set to carry out JOG operation.

The following table shows the setting items of the required parameters for carrying out JOG operation. When only JOG operation will be carried out, no parameters other than those shown below need to be set. (Use the initial values or setting values within a range where no error occurs for trouble-free operation.)

		Setting item	Setting requirement	Factory-set initial value (setting details)
	Pr.1	Unit setting	©	3 (pulse)
	Pr.2	No. of pulses per rotation (Ap) (Unit: pulse)	©	20000
	Pr.3	Movement amount per rotation (AI) (Unit: pulse)	©	20000
	Pr.4	Unit magnification (Am)	©	1 (1-fold)
	Pr.5	Pulse output mode	©	1 (CW/CCW mode)
	Pr.6	Rotation direction setting	©	0 (current value increases by forward run pulse output)
	Pr.7	Bias speed at start (Unit: pulse/s)	0	0
Parameters	Pr.8	Speed limit value (Unit: pulse/s)	0	200000
ame	Pr.9	Acceleration time 0 (Unit: ms)	©	1000
Par	Pr.10	Deceleration time 0 (Unit: ms)	0	1000
	Pr.11	Backlash compensation amount (Unit: pulse)	0	0
	Pr.12	Software stroke limit upper limit value (Unit: pulse)	0	2147483647
	Pr.13	Software stroke limit lower limit value (Unit: pulse)	0	-2147483648
	Pr.14	Software stroke limit selection	0	0 (current feed value)
	Pr.15	Software stroke limit valid/invalid setting	0	0 (valid)
	Pr.17	Torque limit setting value (Unit: %)	0	300
	Pr.23	Output signal logic selection	0	0 (Pulse output to drive unit is negative logic.)

Setting always required.

Set according to requirements (Leave set to the initial value when not used.)

REMARK

- Parameter settings work in common for all control using the QD75. When carrying
 out other control ("major positioning control", "high-level positioning control", "OPR
 positioning control"), the respective setting items must also be matched and set.
- · Parameters are set for each axis.
- Refer to CHAPTER 5 "DATA USED FOR POSITIONING CONTROL" for setting details.

11

		Setting item	Setting requirement	Factory-set initial value (setting details)		
	Pr.25	Acceleration time 1 (Unit: ms)	0	1000		
	Pr.26	Acceleration time 2 (Unit: ms)	0	1000		
	Pr.27	Acceleration time 3 (Unit: ms)	0	1000		
	Pr.28	Deceleration time 1 (Unit: ms)	0	1000		
	Pr.29	Deceleration time 2 (Unit: ms)	0	1000		
	Pr.30	Deceleration time 3 (Unit: ms)	0	1000		
SIS	Pr.31	JOG speed limit value (Unit: pulse/s)	0	20000		
Parameters	Pr.32	JOG operation acceleration time selection	0	0 (acceleration time 0)		
	Pr.33	JOG operation deceleration time selection	©	0 (deceleration time 0)		
	Pr.34	Acceleration/deceleration process selection	0	0 (trapezoidal acceleration/ deceleration processing)		
	Pr.35	S-curve ratio (Unit: %)	0	100		
	Pr.36	Sudden stop deceleration time (Unit: ms)	0	1000		
	Pr.37	Stop group 1 sudden stop selection	0	0 (deceleration stop)		
	Pr.38	Stop group 2 sudden stop selection	0	0 (deceleration stop)		
	Pr.39	Stop group 3 sudden stop selection	0	0 (deceleration stop)		

Setting always required.Set according to requirements (Leave set to the initial value when not used.)

11.2.4 Creating start programs for JOG operation

A sequence program must be created to execute a JOG operation. Consider the "required control data setting", "start conditions" and "start time chart" when creating the program.

The following shows an example when a JOG operation is started for axis 1. (" Cd.17 JOG speed" is set to "100.00mm/min" in the example shown.)

Required control data setting

The control data shown below must be set to execute a JOG operation. The setting is carried out with the sequence program.

			Cattina	Setting details		Buffer memory address			
	Setting item		Setting value			Axis 2	Axis 3	Axis 4	
	TCa. Ib	Inching movement amount	0	Set "0".	1517	1617	1717	1817	
	Cd.17	JOG speed		Set a value equal to or above the " Pr.7 Bias speed at start" and equal to or below the " Pr.31 JOG speed limit value".				1818 1819	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

Start conditions

The following conditions must be fulfilled when starting. The required conditions must also be assembled in the sequence program, and the sequence program must be configured so the operation will not start if the conditions are not fulfilled.

Signal name			Signal state		Device			
					Axis 2	Axis 3	Axis 4	
	PLC READY signal		CPU module preparation completed		Y0			
	QD75 READY signal	ON	QD75 preparation completed		Х	.0		
Interface	Synchronization flag * O		QD75 buffer memory The access is possible.	X1				
signal	Axis stop signal	OFF	Axis stop signal is OFF	Y4	Y5	Y6	Y7	
	Start complete signal	OFF	Start complete signal is OFF	X10	X11	X12	X13	
	BUSY signal	OFF	QD75 is not operating	XC	XD	XE	XF	
	Error detection signal	OFF	There is no error	X8	X9	XA	XB	
	M code ON signal	OFF	M code ON signal is OFF	X4	X5	X6	X7	
	Drive unit READY signal	ON	Drive unit preparation completed	_				
External	Stop signal OF		Stop signal is OFF	_				
signal	Upper limit (FLS)	ON	Within limit range		_			
	Lower limit (RLS)	ON	Within limit range	_				

^{*} If the CPU module is set to the asynchronous mode in the synchronization setting, this must be inserted in the program for interlocking. If it is set to the synchronous mode, it must not be inserted in the program for interlocking because it is turned ON when the CPU module executes calculation.

Start time chart


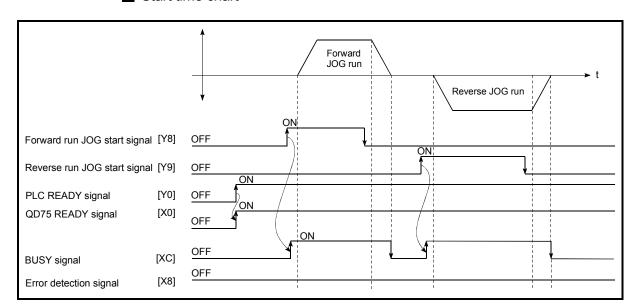


Fig. 11.6 JOG operation start time chart

■ Creating the program

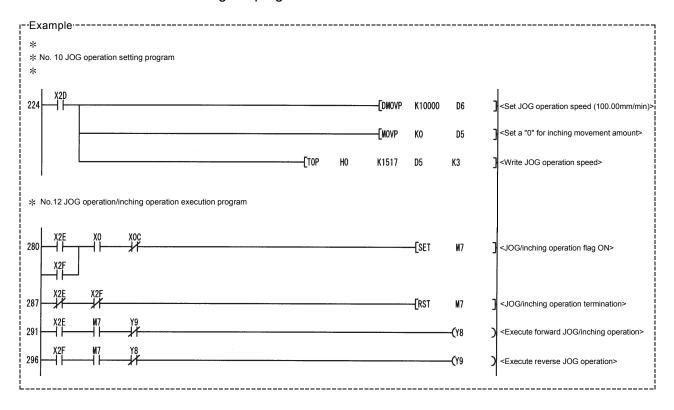

11.2.5 JOG operation example

■ When the "stop signal" is turned ON during JOG operation

When the "stop signal" is turned ON during JOG operation, the JOG operation will stop by the "deceleration stop" method.

An error "Stop signal ON at start" (error code 106) will occur if JOG start signal is turned ON while the stop signal is ON.

The operation can be started by turning the stop signal OFF, and turning the JOG start signal from OFF to ON again.

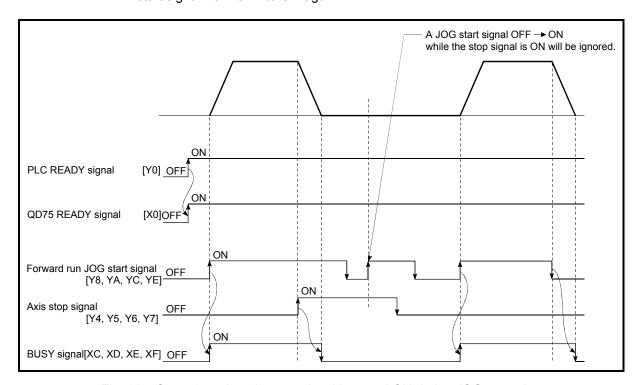


Fig. 11.7 Operation when the stop signal is turned ON during JOG operation

■ When both the "forward run JOG start signal" and "reverse run JOG start signal" are turned ON simultaneously for one axis

When both the "forward run JOG start signal" and "reverse run JOG start signal" are turned ON simultaneously for one axis, the "forward run JOG start signal" is given priority. In this case, the "reverse run JOG start signal" is validated when the QD75 BUSY signal is turned OFF.

If the forward run JOG operation is stopped due to stop or axis error by a stop signal, the reverse run JOG operation will not be executed even if the "reverse run JOG start signal" turns ON.

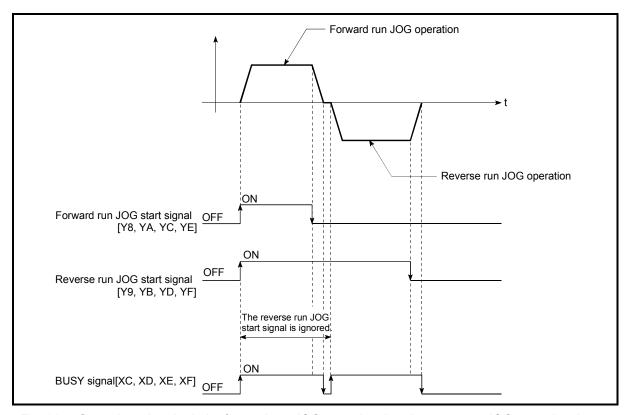


Fig. 11.8 Operation when both the forward run JOG start signal and reverse run JOG start signal are turned ON simultaneously

When the "JOG start signal" is turned ON again during deceleration caused by the ON → OFF of the "JOG start signal"

When the "JOG start signal" is turned ON again during deceleration caused by the ON \rightarrow OFF of the "JOG start signal", the JOG operation will be carried out from the time the "JOG start signal" is turned ON.

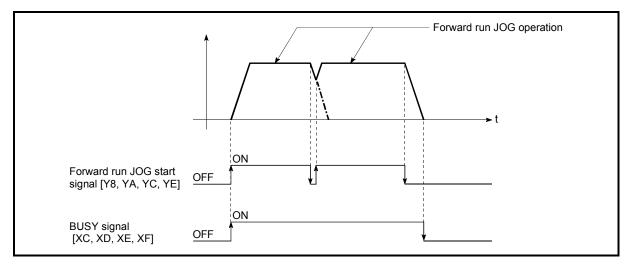


Fig. 11.9 Operation when the JOG start signal is turned ON during deceleration

■ When the "JOG start signal" is turned ON during a peripheral device test mode

When the "JOG start signal" is turned ON during a peripheral device test mode, it will be ignored and the JOG operation will not be carried out.

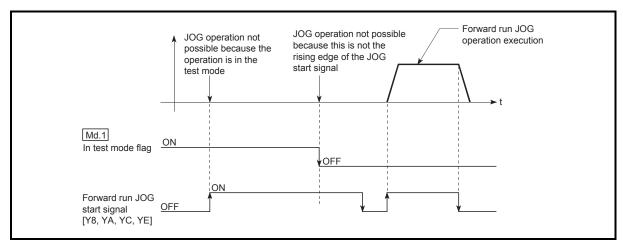


Fig. 11.10 Operation when the JOG start signal is turned ON during a test mode

11.3 Inching operation

11.3.1 Outline of inching operation

Important

When the inching operation is carried out near the upper or lower limit, use the hardware stroke limit function (Refer to Section 12.4.4).

* If the hardware stroke limit function is not used, the workpiece may exceed the movement range, and an accident may result.

Inching operation

In inching operation, pulses are input to the drive unit at 1.8ms to move the workpiece by a designated movement amount after the forward run JOG start signal [Y8, YA, YC, YE] or reverse JOG start signal [Y9, YB, YD, YF] is turned ON. The following shows the example of inching operation.

- When the start signal is turned ON, inching operation is carried out in the direction designated by the start signal. In this case, BUSY signal is turned from OFF to ON.
- 2) The workpiece is moved by a movement amount set in " Cd.16 Inching movement amount".
- The workpiece movement stops when the speed becomes "0". In this case, BUSY signal is turned from ON to OFF. The positioning complete signal is turned from OFF to ON.
- The positioning complete signal is turned from ON to OFF after a time set in Pr.40 Positioning complete signal output time" has been elapsed.

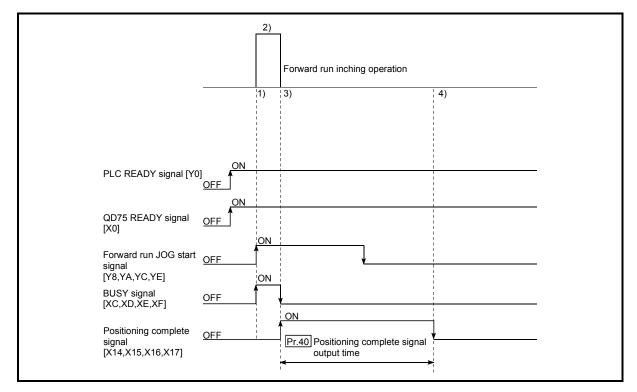


Fig. 11.11 Inching operation

11

Precautions during operation

(1) Acceleration/deceleration processing is not carried out during inching operation. (Pulses corresponding to the designated inching movement amount are output at 1.8ms. The movement direction of inching operation is reversed and, when backlash compensation is carried out, first pulses corresponding to the backlash amount are output at 1.8ms and then pulses corresponding to the designated inching movement amount are output in the next 1.8ms.)

The " Cd.17 JOG speed" is ignored even if it is set. However, the error "Inching movement amount error" (error code: 301) will occur in the following cases:


(Cd.16) Inching movement amount) x (A) > (Pr.31) JOG speed limit value) Where (A) is as follows.

- When the unit is pulse: 562.5
- When the unit is other than pulse: 337.5
- (2) Set a value other than a "0" in " Cd.16 Inching movement amount".

 If a "0" is set, the operation will become JOG operation (Refer to Section 11.2 "JOG operation".

Operations when stroke limit error occurs

When the operation is stopped by hardware stroke limit error or software stroke limit error, the inching operation can be performed in an opposite way (direction within normal limits) after an error reset. (An error will occur again if JOG start signal is turned ON in a direction to outside the stroke limit.)

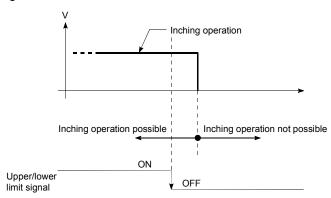

■ Inching operation timing and processing times

The following drawing shows the details of the inching operation timing and processing time.

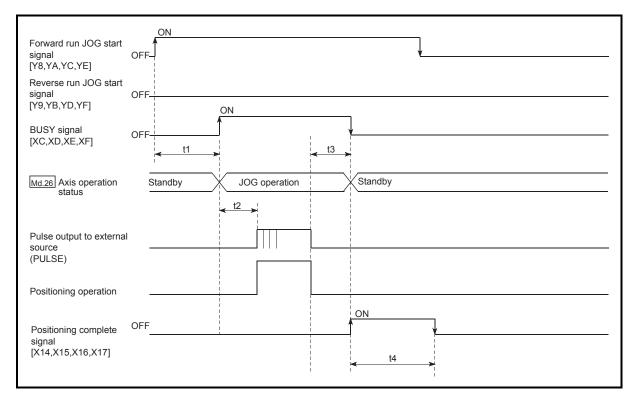



Fig. 11.12 Inching operation timing and processing times


Normal timing times

Model	t1	t2	t3	t4
QD75P□N/QD75D□N	1.0 to 3.0ms	1.3 to 2.2ms	0 to 0.9ms	Depending on
QD75P□/QD75D□	1.0 to 3.0ms	2.7 to 4.4ms	0 to 1.8ms	parameters

• Depending on the operating statuses of the other axes, delay may occur in the t1 timing time.

11.3.2 Inching operation execution procedure

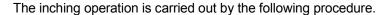

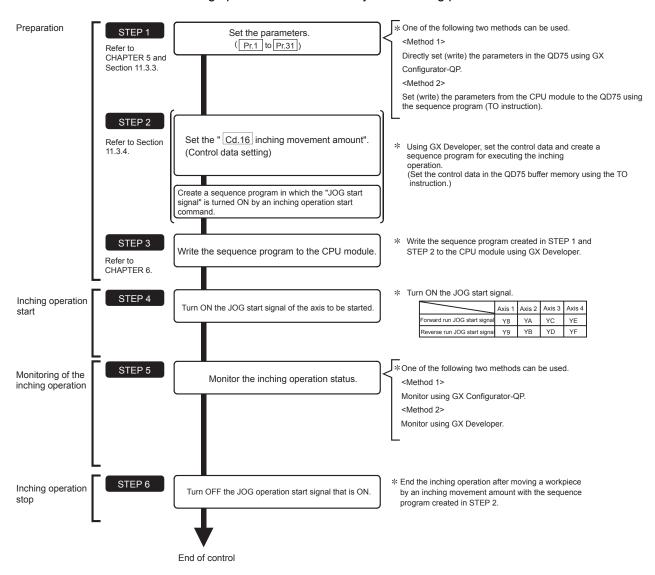

- Mechanical elements such as limit switches are considered as already installed.
- Parameter settings work in common for all control using the QD75.

11.3.3 Setting the required parameters for inching operation

The "Parameters" must be set to carry out inching operation.

The following table shows the setting items of the required parameters for carrying out inching operation. When only inching operation will be carried out, no parameters other than those shown below need to be set. (Use the initial values or setting values within a range where no error occurs for trouble-free operation.)

		Setting item	Setting requirement	Factory-set initial value (setting details)
	Pr.1	Unit setting	©	3 (pulse)
	Pr.2	No. of pulses per rotation (Ap) (Unit: pulse)	©	20000
	Pr.3	Movement amount per rotation (AI) (Unit: pulse)	0	20000
	Pr.4	Unit magnification (Am)	©	1 (1-fold)
	Pr.5	Pulse output mode	©	1 (CW/CCW mode)
હ	Pr.6	Rotation direction setting	©	0 (current value increases by forward run pulse output)
nete	Pr.11	Backlash compensation amount (Unit: pulse)	0	0
arameters	Pr.12	Software stroke limit upper limit value (Unit: pulse)	0	2147483647
۵	Pr.13	Software stroke limit lower limit value (Unit: pulse)	0	-2147483648
	Pr.14	Software stroke limit selection	0	0 (current feed value)
	Pr.15	Software stroke limit valid/invalid setting	0	0 (valid)
	Pr.17	Torque limit setting value (Unit: %)	0	300
	Pr.23	Output signal logic selection	0	0 (Pulse output to the drive unit is negative logic)
	Pr.31	JOG speed limit value (Unit: pulse/s)	©	20000

Setting always required.

Set according to requirements (Leave set to the initial value when not used.)

- Parameter settings work in common for all control using the QD75. When carrying
 out other controls ("major positioning control", "high-level positioning control", and
 "OPR positioning control"), the respective setting items must also be set.
- Parameters are set for each axis.
- Refer to CHAPTER 5 "DATA USED FOR POSITIONING CONTROL" for setting details.

11.3.4 Creating a program to enable/disable the inching operation

A sequence program must be created to execute an inching operation. Consider the "required control data setting", "start conditions", and "start time chart" when creating the program.

The following shows an example when an inching operation is started for axis 1. (The example shows the inching operation when a "10.0 μ m" is set in " Cd.16 Inching movement amount".)

Required control data setting

The control data shown below must be set to execute an inching operation. The setting is carried out with the sequence program.

Ī			Sotting	Softing		Buffer memory address				
	S	Setting item Setting value		Setting details		Axis 2	Axis 3	Axis 4		
	TCa.TbT	Inching movement amount	100	Set the setting value so that the command pulse is not increased larger than the maximum output pulse. (The max. output pulse QD75D\(\subseteq \text{N}\) (4Mpps QD75D\(\subseteq \text{1}\) (1Mpps QD75P\(\subseteq \text{N}\))(QD75P\(\subseteq \text{1}\) (200kpps)	1517	1617	1717	1817		

^{*} Refer to Section 5.7 "List of control data" for information on setting details.

Start conditions

The following conditions must be fulfilled when starting. The required conditions must also be assembled in the sequence program, and the sequence program must be configured so the operation will not start if the conditions are not fulfilled.

					Device			
	Signal name		Signal state	Axis 1	Axis 2	Axis 3	Axis 4	
	PLC READY signal	ON	CPU module preparation completed		Y	0		
	QD75 READY signal	ON	QD75 preparation completed		Х	.0		
	Synchronization flag *	ON	Accessible to QD75 buffer memory	X1				
Interface	Axis stop signal	OFF	Axis stop signal is OFF	Y4	Y5	Y6	Y7	
signal	Start complete signal	OFF	Start complete signal is OFF		X11	X12	X13	
	BUSY signal	OFF	QD75 is not operating	XC	XD	XE	XF	
	Positioning complete signal	OFF	Positioning complete signal is OFF	X14	X15	X16	X17	
	Error detection signal	OFF	There is no error	X8	X9	XA	XB	
	M code ON signal	OFF	M code ON signal is OFF	X4	X5	X6	X7	
	Drive unit READY signal	ON	Drive unit preparation completed		-	-		
External	Stop signal	OFF	Stop signal is OFF		-	-		
signal	Upper limit (FLS)	ON	Within limit range				·	
	Lower limit (RLS)	ON	Within limit range					

^{*} If the CPU module is set to the asynchronous mode in the synchronization setting, this must be inserted in the program for interlocking. If it is set to the synchronous mode, it must not be inserted in the program for interlocking because it is turned ON when the CPU module executes calculation.

■ Start time chart


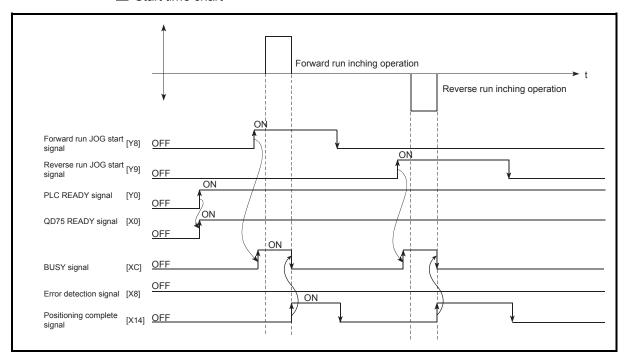


Fig. 11.13 Inching operation start time chart

Creating the program

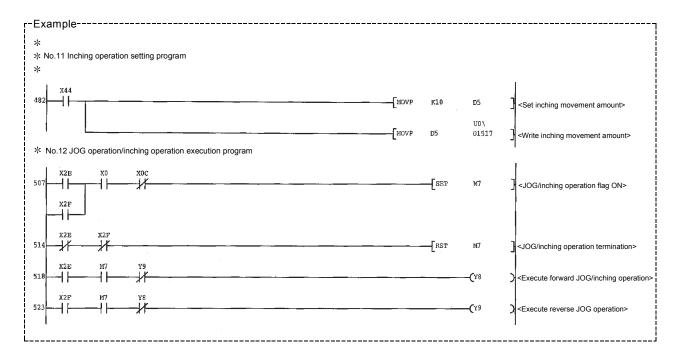

11.3.5 Inching operation example

■ When executing inching operation while stop signal is turned ON:

If the JOG start signal is turned ON while the stop signal is ON, an error "Stop signal ON at start" (error code: 106) will occur.

The inching operation can be re-started when the stop signal is turned OFF and the JOG start signal is turned OFF and then turned ON.

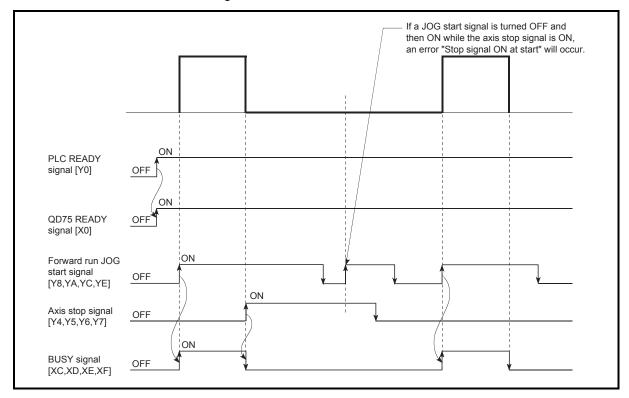


Fig. 11.14 Operation when executing inching operation while stop signal is ON

11

■ When "JOG start signal" is turned ON when peripheral devices are in the test mode:

If "JOG start signal" is turned ON when peripheral devices are in the test mode, the "JOG start signal" will be ignored and inching operation will not be carried out.

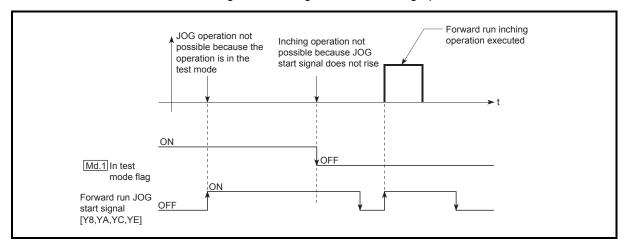


Fig. 11.15 Operation when JOG start signal is turned ON in test mode

11.4 Manual pulse generator operation

11.4.1 Outline of manual pulse generator operation

Important

Create the sequence program so that " Cd.21 Manual pulse generator enable flag" is always set to "0" (disabled) when a manual pulse generator operation is not carried out.

* Mistakenly touching the manual pulse generator when the manual pulse generator enable flag is set to "1" (enable) can cause accidents or incorrect positioning.

Manual pulse generator operation

In manual pulse generator operations, pulses are input to the QD75 from the manual pulse generator. This causes the same No. of input pulses to be output from the QD75 to the servo amplifier, and the workpiece is moved in the designated direction.

The following shows an example of manual pulse generator operation.

When the " Cd.21 Manual pulse generator enable flag" is set to "1", the BUSY signal turns ON and the manual pulse generator operation is enabled.
 The workpiece is moved corresponding to the No. of pulses input from the manual pulse generator.
 The workpiece movement stops when no more pulses are input from the manual pulse generator.
 When the " Cd.21 Manual pulse generator enable flag" is set to "0", the BUSY signal turns OFF and the manual pulse generator operation is disabled.

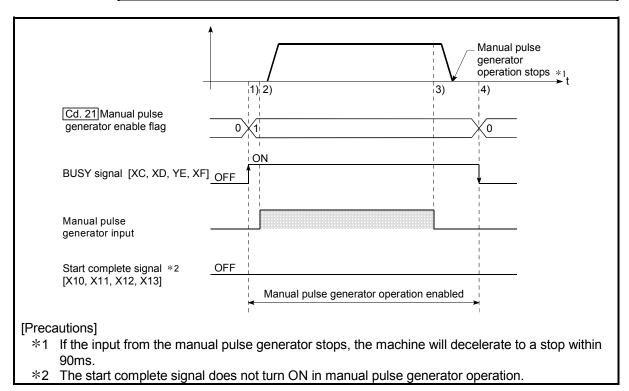


Fig. 11.16 Manual pulse generator operation

11

Restricted items

A manual pulse generator is required to carry out manual pulse generator operation.

Precautions during operation

- (1) The speed during manual pulse generator operation is not limited by the "Pr.8 Speed limit value".
- (2) If the " Cd.21 Manual pulse generator enable flag" is turned ON while the QD75 is BUSY (BUSY signal ON), a warning "Start during operation" (warning code: 100) will occur.
- (3) If a stop factor occurs during manual pulse generator operation, the operation will stop, and the BUSY signal will turn OFF. At this time, the " Cd.21 Manual pulse generator enable flag" will be left ON, but manual pulse generator operation will not be possible. To carry out manual pulse generator operation again, measures must be carried out to eliminate the stop factor. Once eliminated, the operation can be carried out again by turning the " Cd.21 Manual pulse generator enable flag" ON → OFF → ON.
 - (Note that this excludes when hardware/software stroke limit errors occurs.)
- (4) Pulses will not be output if an error occurs when the manual pulse generator operation starts.


- One QD75 module can be connected to one manual pulse generator.
- The QD75 module can simultaneously output pulses to the axis 1 to axis 4 drive units by one manual pulse generator.
 - (1- to 4-axis simultaneous operation is possible.)

Operations when stroke limit error occurs

When the hardware stroke limit error or the software stroke limit error is detected during operation, the operation will decelerate to a stop. However, " Md.26 Axis operation status" will keep the status "Manual pulse generator operation" in that case. *1

After stopping, manual pulse generator input pulses to the outside direction of the limit range are not accepted, but operation can be executed within the range.

*1: Only when the current feed value or the current machine feed value overflows or underflows during deceleration, the manual pulse generator operation will terminate as " Md.26 Axis operation status" is changed to "Error". To carry out manual pulse generator operation again, " Cd.21 Manual pulse generator enable flag" must be turned OFF once and turn ON.

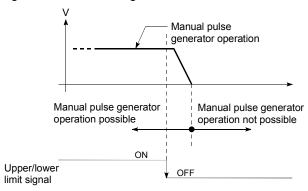

Manual pulse generator operation timing and processing time The following drawing shows details of the manual pulse generator operation timing and processing time.

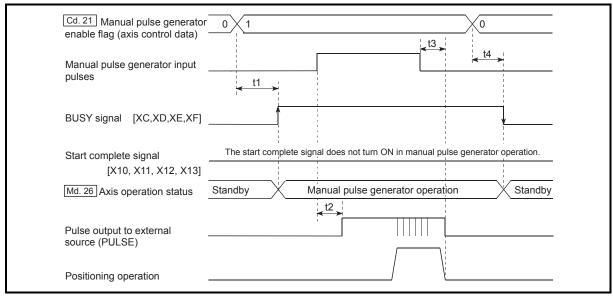


Fig. 11.17 Manual pulse generator operation timing and processing times

Normal timing times

Model	t1	t2	t3	t4
QD75P□N/QD75D□N	0 to 0.9ms	1.7 to 30.2ms	58.6 to 87.6ms	28.4 to 57.2ms
QD75P□/QD75D□	0 to 2.6ms	6.2 to 32ms	60.4 to 90ms	28.4 to 57.6ms

[•] Delays may occur in the t1 timing time due to the operation status of other axes.

■ Position control by manual pulse generator operation

In manual pulse generator operation, the position is moved by a "manual pulse generator 1 pulse movement amount" per pulse.

The current feed value in the positioning control by manual pulse generator operation can be calculated using the expression shown below.

Current feed value = Number of input pulses × Cd.20 Manual pulse generator 1 pulse input magnification × Manual pulse generator 1 pulse movement amount

Pr.1 Unit setting	mm	inch	degree	pulse
Manual pulse generator 1 pulse movement amount	0.1µm	0.00001inch	0.00001degree	1pulse

For example, when " Pr.1 Unit setting" is mm and " Cd.20 Manual pulse generator 1 pulse input magnification" is 2, and 100 pulses are input from the manual pulse generator, the current feed value is as follows.

$$100 \times 2 \times 0.1 = 20 [\mu m]$$

= 200 [Current feed value]

The number of pulses output actually to the drive unit is "Manual pulse generator 1 pulse movement amount/movement amount per pulse *". For example, when " $\boxed{\text{Pr.1}}$ Unit setting" is mm and the movement amount per pulse is 1 μ m, 0.1/1 = 1/10, i.e., the output to the drive unit per pulse from the manual pulse generator is 1/10 pulse. Thus, the QD75 outputs 1 pulse to the drive unit after receiving 10 pulses from the manual pulse generator.


Speed control by manual pulse generation operation

The speed during positioning control by manual pulse generator operation is a speed corresponding to the No. of input pulses per unit time, and can be obtained using the following equation.

Output command frequency = Input frequency × Cd.20 Manual pulse generator 1 pulse input magnification

11.4.2 Manual pulse generator operation execution procedure

The manual pulse generator operation is carried out by the following procedure.

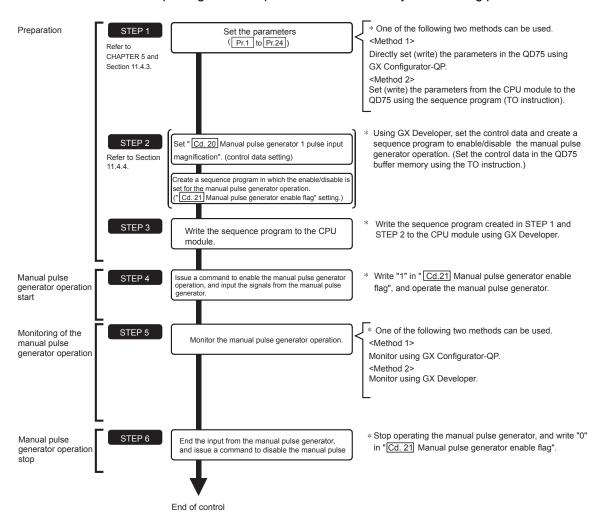

- Mechanical elements such as limit switches are considered as already installed.
- Parameter settings work in common for all control using the QD75.

11.4.3 Setting the required parameters for manual pulse generator operation

The "Parameters" must be set to carry out manual pulse generator operation. The following table shows the setting items of the required parameters for carrying out manual pulse generator operation. When only manual pulse generator operation will be carried out, no parameters other than those shown below need to be set. (Use the initial values or setting values within a range where no error occurs for trouble-free operation.)

		Setting item	Setting requirement	Factory-set initial value (setting details)
	Pr.1	Unit setting	0	3 (pulse)
	Pr.2	No. of pulses per rotation (Ap) (Unit: pulse)	0	20000
	Pr.3	Movement amount per rotation (AI) (Unit: pulse)	©	20000
	Pr.4	Unit magnification (Am)	©	1 (1-fold)
	Pr.5	Pulse output mode	©	1 (CW/CCW mode)
	Pr.6	Rotation direction setting	©	0 (current value increases by forward run pulse output)
ည	Pr.11	Backlash compensation amount (Unit: pulse)	0	0
Parameters	Pr.12	Software stroke limit upper limit value (Unit: pulse)	0	2147483647
aran	Pr.13	Software stroke limit lower limit value (Unit: pulse)	0	-2147483648
۵	Pr.14	Software stroke limit selection	0	0 (current feed value)
	Pr.15	Software stroke limit valid/invalid setting	0	0 (valid)
	Pr.17	Torque limit setting value (Unit: %)	0	300
	Pr.22	Input signal logic selection	0	0 (Manual pulse generator input is negative logic.)
	Pr.23	Output signal logic selection	0	0 (Pulse output to drive unit is negative logic.)
	Pr.24	Manual pulse generator input selection	0	0 (4 times multiplication of A phase/B phase)

Setting always required.

Set according to requirements (Leave set to the initial value when not used.)

REMARK

- Parameter settings work in common for all control using the QD75. When carrying
 out other control ("major positioning control", "high-level positioning control", "OPR
 positioning control"), the respective setting items must also be matched and set.
- Parameters are set for each axis. But Pr.22 Manual pulse generator input logic (b8), Pr.24 is set only for axis 1. (The setting for axes 2,3, and 4 is ignored.)
- Refer to CHAPTER 5 "DATA USED FOR POSITIONING CONTROL" for setting details.

11.4.4 Creating a program to enable/disable the manual pulse generator operation

A sequence program must be created to execute a manual pulse generator operation. Consider the "required control data setting", "start conditions" and "start time chart" when creating the program.

The following shows an example when a manual pulse generator operation is started for axis 1.

Required control data setting

The control data shown below must be set to execute a manual pulse generator operation. The setting is carried out with the sequence program.

	Setting item Setting value		Setting details		Buffer memory address				
S					Axis 2	Axis 3	Axis 4		
Cd.20	Manual pulse generator 1 pulse input magnification	1	Set the manual pulse generator 1 pulse input magnification. (QD75P□N/QD75D□N: 1 to 1000 times QD75P□/QD75D□: 1 to 100 times)	_	_		1822 1823		
Cd.21	Manual pulse generator enable flag	1 (0)	Set "1: Enable manual pulse generator operation". (Set "0: Disable manual pulse generator operation" when finished with the manual pulse generator operation.)	1524	1624	1724	1824		

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

Start conditions

The following conditions must be fulfilled when starting. The required conditions must also be assembled in the sequence program, and the sequence program must be configured so the operation will not start if the conditions are not fulfilled.

					Device			
	Signal name		Signal state	Axis 1	Axis 2	Axis 3	Axis 4	
	PLC READY signal	ON	ON CPU module preparation completed		Y0			
	QD75 READY signal	ON	QD75 preparation completed		Х	.0		
Interface	Synchronization flag *	ON	QD75 buffer memory The access is possible.	X1				
signal	Axis stop signal	OFF	Axis stop signal is OFF		Y5	Y6	Y7	
	Start complete signal	OFF	Start complete signal is OFF	X10	X11	X12	X13	
	BUSY signal	OFF	QD75 is not operating	XC	XD	XE	XF	
	Error detection signal	OFF	There is no error	X8	X9	XA	XB	
	M code ON signal	OFF	M code ON signal is OFF	X4	X5	X6	X7	
	Drive unit READY signal	ON	Drive unit preparation completed		-	-		
External	Stop signal	OFF	Stop signal is OFF		-	-		
signal	Upper limit (FLS)	ON	Within limit range		-	-		
	Lower limit (RLS)	ON	Within limit range	_				

^{*} If the CPU module is set to the asynchronous mode in the synchronization setting, this must be inserted in the program for interlocking. If it is set to the synchronous mode, it must not be inserted in the program for interlocking because it is turned ON when the CPU module executes calculation.

Start time chart


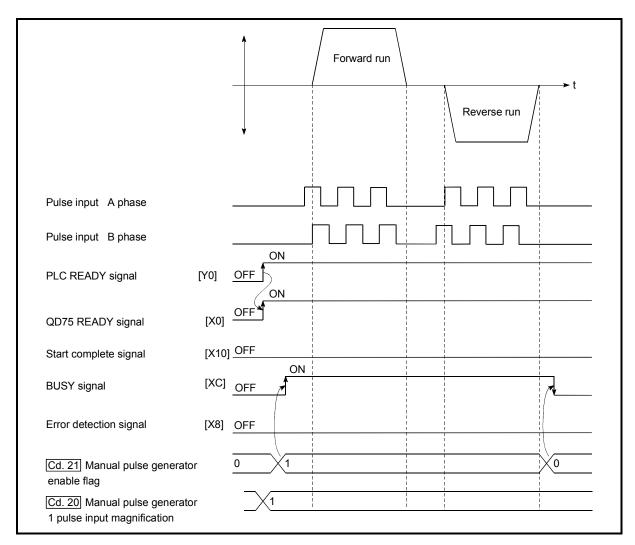


Fig. 11.18 Manual pulse generator operation start time chart

Creating the program

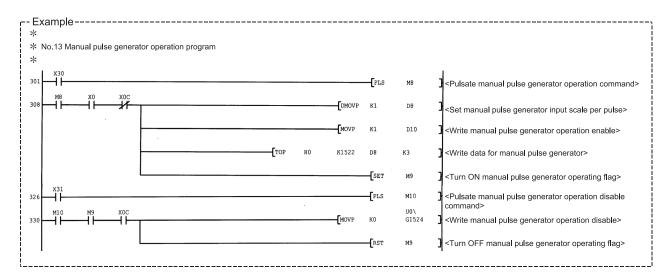

12- 2

CHAPTER 12 CONTROL SUB FUNCTIONS

The details and usage of the "sub functions" added and used in combination with the main functions are explained in this chapter.

A variety of sub functions are available, including functions specifically for machine OPR and generally related functions such as control compensation, etc.

More appropriate, finer control can be carried out by using these sub functions.

Each sub function is used together with a main function by creating matching parameter settings and sequence programs. Read the execution procedures and settings for each sub function, and set as required.

12.1 Outline of sub functions

	12.1.1 Outline of sub functions	
12.2	Sub functions specifically for machine OPR	12- 4
	12.2.1 OPR retry function	12- 4
	12.2.2 OP shift function	
12.3	Functions for compensating the control	12- 12
	12.3.1 Backlash compensation function	12- 12
	12.3.2 Electronic gear function	12- 14
	12.3.3 Near pass function	
	12.3.4 Output timing selection of near pass control	12- 23
12.4	Functions to limit the control	12- 27
	12.4.1 Speed limit function	12- 27
	12.4.2 Torque limit function	
	12.4.3 Software stroke limit function	
	12.4.4 Hardware stroke limit function	12- 39
12.5	Functions to change the control details	12- 41
	12.5.1 Speed change function	
	12.5.2 Override function	12- 48
	12.5.3 Acceleration/deceleration time change function	
	12.5.4 Torque change function	12- 56
	12.5.5 Target position change function	12- 58
12.6	Absolute position restoration function	12- 62
12.7	Other functions	12- 73
	12.7.1 Step function	
	12.7.2 Skip function	12- 78
	12.7.3 M code output function	12- 81
	12.7.4 Teaching function	
	12.7.5 Command in-position function	
	12.7.6 Acceleration/deceleration processing function	
	12.7.7 Pre-reading start function	
	12.7.8 Deceleration start flag function	
	12.7.9 Stop command processing for deceleration stop function	12-108

12.1 Outline of sub functions

"Sub functions" are functions that compensate, limit, add functions, etc., to the control when the main functions are executed. These sub functions are executed by parameter settings, commands from GX Configurator-QP, sub function sequence programs, etc.

12.1.1 Outline of sub functions

The following table shows the types of sub functions available.

	Sub function	Details
Sub functions specifically for	OPR retry function	This function retries the machine OPR with the upper/lower limit switches during machine OPR. This allows machine OPR to be carried out even if the axis is not returned to before the near-point dog with JOG operation, etc.
machine OPR	OP shift function	After returning to the machine OP, this function offsets the position by the designated distance from the machine OP position and sets that position as the OP address.
	Backlash compensation function	This function compensates the mechanical backlash. Feed pulses equivalent to the set backlash amount are output each time the movement direction changes.
Functions for compensating	Electronic gear function	By setting the movement amount per pulse, this function can freely change the machine movement amount per commanded pulse. A flexible positioning system that matches the machine system can be structured with this function.
the control	Near pass function *1	This function suppresses the machine vibration when the positioning data is switched during continuous path control in the interpolation control.
	Output timing selection of near pass control	This function allows the user to select the timing to output the difference (\triangle ℓ) between the actual and the set positioning end addresses in continuous path control, in which the difference (\triangle ℓ) is output during the execution of the next positioning data.
	Speed limit function	If the command speed exceeds " Pr.8 Speed limit value" during control, this function limits the commanded speed to within the " Pr.8 Speed limit value" setting range.
Functions to limit the control	Torque limit function *2	If the torque generated by the servomotor exceeds " Pr.17 Torque limit setting value" during control, this function limits the generated torque to within the " Pr.17 Torque limit setting value" setting range.
	Software stroke limit function	If a command outside of the upper/lower limit stroke limit setting range, set in the parameters, is issued, this function will not execute positioning for that command.
	Hardware stroke limit function	This function carries out deceleration stop with the limit switch connected to the QD75 external device connector.
	Speed change function	This function changes the speed during positioning. Set the changed speed in the speed change buffer memory (Cd.14 New speed value), and change the speed with the speed change request (Cd.15 Speed change request).
Functions to change the control details	Override function	This function changes the speed within a percentage of 1 to 300% during positioning. This is executed using " Cd.13 Positioning operation speed override".
	Acceleration/deceleration time change function	This function changes the acceleration/deceleration time during speed change. (function added to the speed change function and override function)
	Torque change function	This function changes the "torque limit value" during control.
	Target position change function	This function changes the target position during the execution of positioning. At the same time, this also can change the speed.

- * 1 The near pass function is validated only when the machine of the standard specification carries out the position control with the continuous path control mode.

 It cannot be invalidated with parameters.
- *2 To carry out "torque limit", the "D/A conversion module" and a "drive unit capable of the torque limit command with an analog voltage" must be prepared.

	Sub function	Details
Absolute position restoration function *3		This function restores the absolute position of designated axis. By this function, the OPR after power ON from OFF is not required once the OPR is executed when the system operation is started.
	Step function	This function temporarily stops the operation to confirm the positioning operation during debugging, etc. The operation can be stopped at each "automatic deceleration" or "positioning data".
	Skip function	This function stops the positioning being executed (decelerates to a stop) when the skip signal is input, and carries out the next positioning.
	M code output function	This function issues a sub work (clamp or drill stop, tool change, etc.) according to the code No. (0 to 65535) set for each positioning data.
	Teaching function	This function stores the address positioned with manual control into the positioning address (Da.6 Positioning address/movement amount) having the designated positioning data No.
Other functions	Command in-position function	At each automatic deceleration, this function calculates the remaining distance for the QD75 to reach the positioning stop position, and when the value is less than the set value, sets the "command in-position flag" to 1. When using another sub work before ending the control, use this function as a trigger for the sub work.
	Acceleration/deceleration processing function	This function adjusts the control acceleration/deceleration. (acceleration/deceleration time and curve).
	Pre-reading start function	This function shortens the virtual start time.
	Deceleration start flag function	Function that turns ON the flag when the constant speed status or acceleration status switches to the deceleration status during position control, whose operation pattern is "Positioning complete", to make the stop timing known.
	Stop command processing for deceleration stop function	Function that selects a deceleration curve when a stop cause occurs during deceleration stop processing to speed 0.

^{*3} To execute the "absolute position restoration function", the following are required: "16-point input module"; "16-point output module"; and "drive unit capable of configuring an absolute position detection system, which is a Mitsubishi Electric General-Purpose AC Servo having an absolute position detection function (absolute position data transference protocol) equivalent to that of MR-J3-\(\subseteq A\)".

12.2 Sub functions specifically for machine OPR

The sub functions specifically for machine OPR include the "OPR retry function" and "OP shift function". Each function is executed by parameter setting.

12.2.1 OPR retry function

When the workpiece goes past the OP without stopping during positioning control, it may not move back in the direction of the OP although a machine OPR is commanded, depending on the workpiece position. This normally means the workpiece has to be moved to a position before the near-point dog by a JOG operation, etc., to start the machine OPR again. However, by using the OPR retry function, a machine OPR can be carried out regardless of the workpiece position.

The details shown below explain about the "OPR retry function".

- [1] Control details
- [2] Control Precautions
- [3] Setting method

[1] Control details

The following drawing shows the operation of the OPR retry function.

(1) OPR retry point return retry operation when the workpiece is within the range between the upper/lower limits.


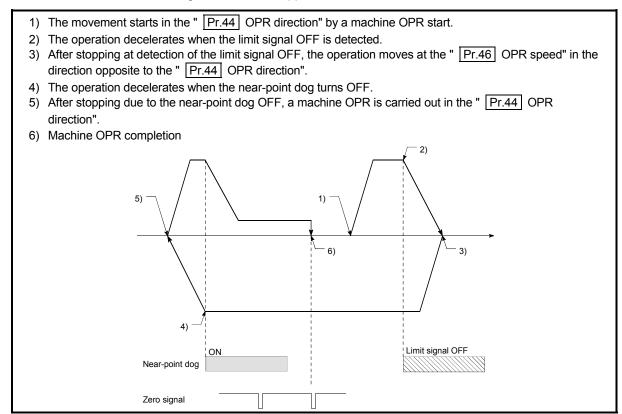


Fig. 12.1 OPR retry operation by limit signal detection

(2) OPR retry operation when the workpiece is outside the range between the upper/lower limits.

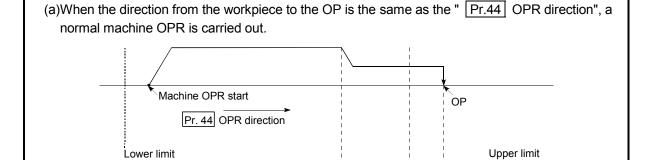


(b) When the direction from the workpiece to the OP is the opposite direction from the

Near-point dog

" | Pr.44 | OPR direction", the operation carries out a deceleration stop when the near-point dog turns OFF, and then carries out a machine OPR in the direction set in " | Pr.44 | OPR direction".

Movement range

Zero signal

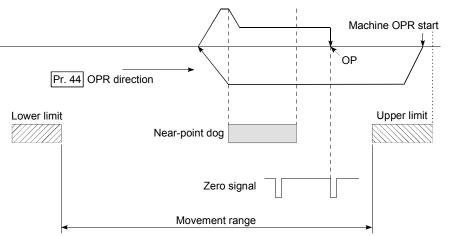

Note) The above figures in (a) and (b) are examples where " Pr.44 OPR direction" is set to "0: Positive direction". When "0: Positive direction" is set in Pr.44, check that the limit switch placed in the OPR direction acts as the upper limit. When "1: Negative direction" is set in Pr.44, check that the limit switch placed in the OPR direction acts as the lower limit. Incorrect wiring of these limit switches may cause improper OPR retry operation. If any malfunction is identified, check and correct " Pr.6 Rotation direction setting" and the wiring.

Fig. 12.2 OPR retry operation from on limit (limit switch OFF)

- (3) Setting the dwell time during an OPR retry
 - The OPR retry function can perform such function as the dwell time using "Pr.57 Dwell time at OPR retry" when the reverse run operation is carried out due to detection by the limit signal for upper/lower limits and when the machine OPR is executed after the near point dog is turned OFF to stop the operation.
 - " Pr.57 Dwell time during OPR" is validated when the operation stops at the "A" and "B" positions in the following drawing. (The dwell time is the same value at both positions "A" and "B".)

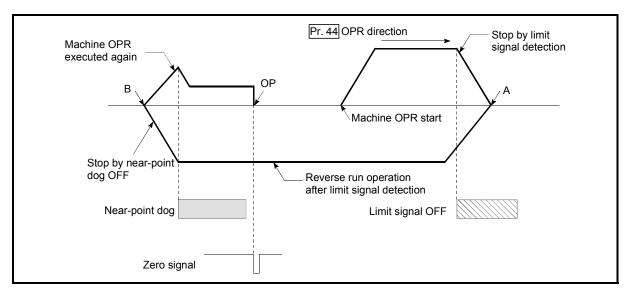


Fig. 12.3 Setting the dwell time during an OPR retry

[2] Control Precautions

(1) The following table shows whether the OPR retry function may be executed by the " Pr.43 OPR method".

Pr.43 OPR method	Execution status of OPR retry function	
Near-point dog method	○ : Execution possible	
Stopper method 1)	○ : Execution possible * 1	
Stopper method 2)	○ : Execution possible * 1	
Stopper method 3)	× : Execution not possible	
Count method 1)	○ : Execution possible	
Count method 2)	○ : Execution possible	

- * 1 Starting can be executed from the position of the limit switch installed in the opposition direction of " Pr.44 OPR direction". (The limit signal is OFF.) However, the retry operation by the limit switch in the OPR direction cannot be executed since a stopper is installed in the OPR direction.
- (2) Always establish upper/lower limit switches at the upper/lower limit positions of the machine, and connect them to the QD75. If the OPR retry function is used without hardware stroke limit switches, the motor will continue rotation until a hardware stroke limit signal is detected.
- (3) Do not configure a system so that the drive unit power turns OFF by the upper/lower limit switches connected to the QD75. If the drive unit power is turned OFF, the OPR retry cannot be carried out.

[3] Setting method

To use the "OPR retry function", set the required details in the parameters shown in the following table, and write them to the QD75.

When the parameters are set, the OPR retry function will be added to the machine OPR control. The set details are validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0). (Set " Pr.57 Dwell time during OPR retry" according to the user's requirements.)

,	Setting item Setting value Setting details		Factory-set initial value	
Pr.48	OPR retry	1	Set "1: Carry out OPR retry by limit switch".	0
		Set the deceleration stop time during OPR retry. (Random value between 0 and 65535 (ms))	0	

^{*} Refer to Section 5.2 "List of parameters" for setting details.

- · Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

12.2.2 OP shift function

When a machine OPR is carried out, the OP is normally established using the nearpoint dog, stopper, and zero signal. However, by using the OP shift function, the machine can be moved a designated movement amount from the position where the zero signal was detected. A mechanically established OP can then be interpreted at that point.

The OP shift function can be used without relation to " Pr.43 OPR method".

The details shown below explain about the "OP shift function".

- [1] Control details
- [2] Setting range for the OP shift amount
- [3] Movement speed during OP shift
- [4] Control Precautions
- [5] Setting method

[1] Control details

The following drawing shows the operation of the OP shift function.

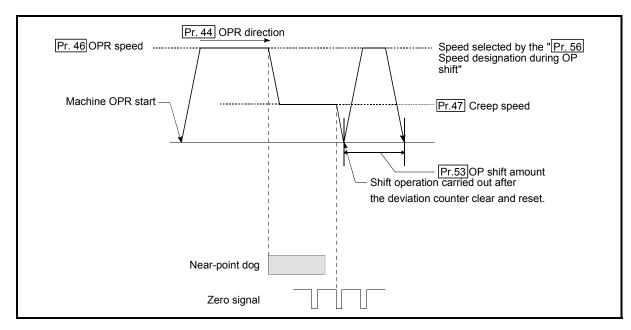


Fig. 12.4 OP shift operation

[2] Setting range for the OP shift amount

Set the OP shift amount within the range from the detected zero signal to the upper/lower limit switches.

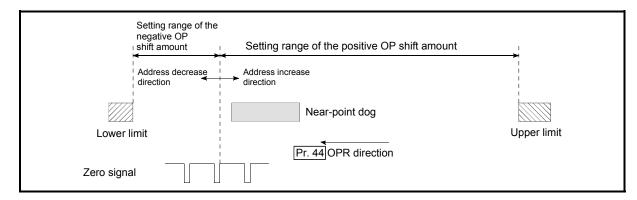


Fig. 12.5 Setting range for the OP shift amount

[3] Movement speed during OP shift

When using the OP shift function, the movement speed during the OP shift is set in " $\boxed{\text{Pr.56}}$ Speed designation during OP shift". The movement speed during the OP shift is selected from either the " $\boxed{\text{Pr.46}}$ OPR speed" or the " $\boxed{\text{Pr.47}}$ Creep speed".

The following drawings show the movement speed during the OP shift when a mechanical OPR is carried out by the near-point dog method.

(1) OP shift operation at the "Pr.46 OPR speed"
(When Pr.56 Speed designation during OP shift is 0)

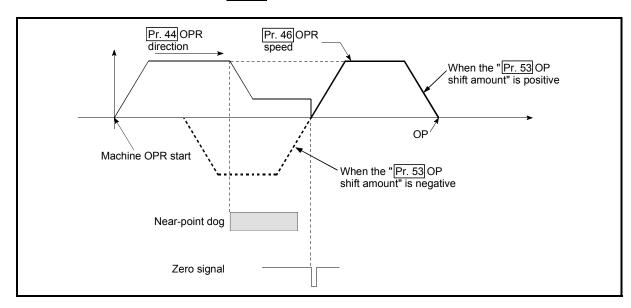


Fig. 12.6 OP shift operation at the OPR speed

(2) OP shift operation at the " Pr.47 Creep speed" (When " Pr.56 Speed designation during OP shift" is 1)

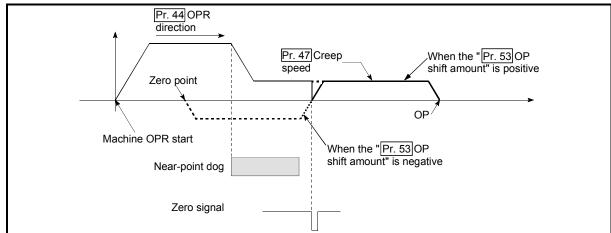


Fig. 12.7 OP shift operation at the creep speed

[4] Control Precautions

- (1) The following data are set after the OP shift amount is complete.
 - OPR complete flag (" Md.31 Status: b4)
 - Md.20 Current feed value
 - Md.21 Machine feed value
 - Md.26 Axis operation status

OPR request flag (Md.31 Status: b3) is reset after completion of the OP shift.

- (2) " Pr.53 OP shift amount" is not added to " Md.34 Movement amount after near-point dog ON". The movement amount immediately before the OP shift operation, considering near-point dog ON as "0", is stored. For the stopper method (1) 2) 3)), the movement amount is not changed from "0".
- (3) When using the OP shift function with the stopper method (1) 2) 3)) selected for the OPR method, configure the OP shift operation in the opposite direction of the OPR direction.

 It cannot shift to the OPR direction due to a mechanical stopper in the OPR

[5] Setting method

direction.

To use the "OP shift function", set the required details in the parameters shown in the following table, and write them to the QD75.

When the parameters are set, the OP shift function will be added to the machine OPR control. The set details are validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0).

5	Setting item	Setting value	Setting details	Factory-set initial value
Pr.53	OP shift amount	\rightarrow	Set the shift amount during the OP shift.	0
	Speed designation during OP shift	\rightarrow	Select the speed during the OP shift 0: Pr.46 OPR speed 1: Pr.47 Creep speed	0

^{*} Refer to Section 5.2 "List of parameters" for setting details.

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX Configurator-QP. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

12.3 Functions for compensating the control

The sub functions for compensating the control include the "backlash compensation function", "electronic gear function", "near pass function", and "output timing selection of near pass control". Each function is executed by parameter setting or sequence program creation and writing.

12.3.1 Backlash compensation function

The "backlash compensation function" compensates the backlash amount in the mechanical system. When the backlash compensation amount is set, an extra amount of pulses equivalent to the set backlash amount is output every time the movement direction changes.

The details shown below explain about the "backlash compensation function".

- [1] Control details
- [2] Control Precautions
- [3] Setting method

[1] Control details

The following drawing shows the operation of the backlash compensation function.

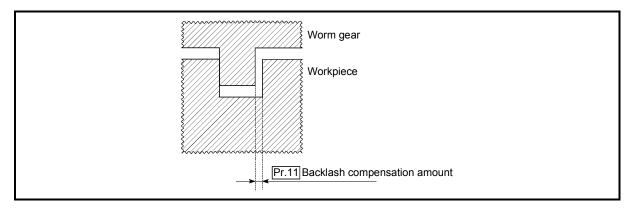


Fig. 12.8 Backlash compensation amount

[2] Control Precautions

- (1) The feed pulses of the backlash compensation amount are not added to the " Md.20 Current feed value" or " Md.21 Machine feed value".
- (2) Always carry out a machine OPR before starting the control when using the backlash compensation function (when " Pr.11 Backlash compensation amount" is set). The backlash in the mechanical system cannot be correctly compensated if a machine OPR is not carried out.
- (3) Set the No. of pulses output in one backlash compensation (value in which the "Pr.11 Backlash compensation amount" is divided by the "movement amount per pulse") to a value of 255 or lower. An error "Backlash compensation amount error" (error code: 920) will occur if a value over 255 is set. (Depending on the connected servo, tracking may not be possible if a large amount of pulses is output at once.)

(Omit values after the decimal point.)

- (4) Backlash compensation, which includes the movement amount and "Pr.11 Backlash compensation amount", is output the moment at the moving direction changes.
- (5) Backlash compensation cannot be made when the stepping motor is used. The backlash compensation function cannot be used for an axis where a stepping motor is connected. Set 0 (initial value) in " Pr.11 Backlash compensation amount".

[3] Setting method

To use the "backlash compensation function", set the "backlash compensation amount" in the parameter shown in the following table, and write it to the QD75. The set details are validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0).

S	Setting item	Setting value	Setting details	Factory-set initial value
Pr.11	Backlash compensation amount	\rightarrow	Set the backlash compensation amount.	0

^{*} Refer to Section 5.2 "List of parameters" for setting details.

- · Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

12.3.2 Electronic gear function

The "electronic gear function" adjusts the pulses calculated and output according to the parameters set in the QD75 with the actual machine movement amount.

The "electronic gear function" has the following four functions.

[A] The function converts the command value (speed, movement amount from the start point to the end point), which is set in mm units, to pulse units, and determines the pulse frequency and pulse number of the command pulse.

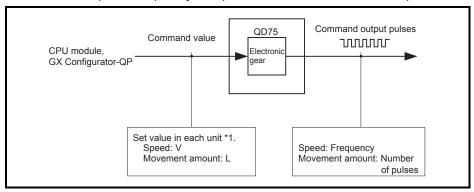


Fig. 12.9 Conversion to pulse units

*1: Unit specified with " Pr.1 Unit setting" (mm, inch, degree, pulse)

- [B] If values less than one pulse are generated by converting the movement amount from the start point to the end point to pulse units, the values are not output and the machine stops at the front side of the positioning direction. The function accumulates values less than one pulse that could not be pulse output in the QD75 and outputs one pulse when the total cumulative value reached one pulse or more.
- [C] When machine OPR is completed, current value changing is completed, speed control is started (except when current feed value change is present), or fixed-feed control is started, the function clears to "0" the cumulative values of less than one pulse which could not be output. (If the cumulative value is cleared, an error will occur by a cleared amount in the feed machine value. Control can be constantly carried out at the same machine movement amount, even when the fixed-feed control is continued.)
- [D] The function compensates the mechanical system error of the command movement amount and actual movement amount by adjusting the "movement amount per pulse".
 (The "movement amount per pulse" value is defined by " Pr.2 No. of pulses per rotation (Ap)", " Pr.3 Movement amount per rotation (Al)", and " Pr.4 Unit magnification (Am)".)

The QD75 automatically carries out the processing for [A] and [C].

The details shown below explain about the "electronic gear function", including the method for compensating the error in [D] above, etc.

- [1] Movement amount per pulse
- [2] Error compensation method
- [3] Control Precautions

[1] Movement amount per pulse

" Pr.2 No. of pulses per rotation (Ap)", " Pr.3 Movement amount per rotation (Al)", and " Pr.4 Unit magnification (Am)" are the items for determining how many rotations (equivalent to how many pulses) a motor should operate to move a machine for movement amount set in a program.

The drive unit controls the motor with the pulse number.

The following shows the details of control of the QD75.

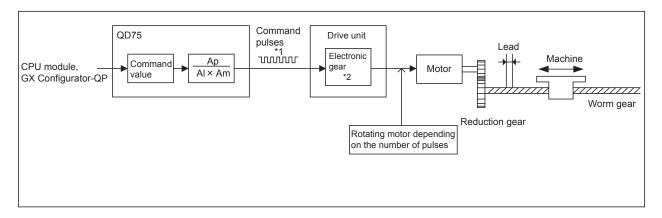


Fig. 12.10 System using a ball screw

*1: The upper limits of the command pulse frequency are as follows

- QD75D□N : 4Mpulse/s
- QD75D□: 1Mpulse/s
- QD75P□N/QD75P□: 200kpulse/s
- *2: For a drive unit without electronic gear function, or when not using electronic gear function, this value is 1 (single).

Consider a system with the motor connected to a ball screw, such as the figure above.

1 is set to the electronic gear of the drive unit.

The movement amount of the machine is in mm or inch unit. Set the command value in mm or inch units to the QD75 for the CPU module program.

The motor is controlled by the drive unit in pulse number units.

Consequently, since the command value in mm or inch units is converted to pulse units, set Ap, Al, and Am so that the following relational expressions are satisfied.

Number of pulses per rotation of motor = ApMovement amount per rotation of motor $= AI \times Am$

In this case, the machine movement amount for the command 1 pulse output from the QD75 is calculated by the following expression.

Movement amount per pulse (A) =
$$\frac{AI \times Am}{Ap}$$

12

POINT

The command frequency from the QD75 is limited by a ceiling. If the command frequency exceeds the upper limit, increase the "Movement amount per pulse (A)" greater (N times) to decrease the command frequency.

In this case, the electronic gear on the drive unit must be increased by N times as well.

The command pulse from the QD75 is changes to 1/N times. Therefore, multiply it by N on the drive unit side to keep the number of motor rotations.

Since the "movement amount per pulse (A)" is increased, the position accuracy (command resolution) for the command 1 pulse from the QD75 decreases. Consider to decrease the command speed when the position accuracy is required.

(1) Setting range of Ap, Al, Am

Determined setting ranges are available for Ap, Al, and Am. The following shows the setting ranges.

	Setting item	Setting range		
Pr.2	Pr.2 No. of pulses per rotation (Ap)		1 to 65535	
Pr.3	Movement amount per rotation (AI)		×10 ⁻¹ µ m	
		1 to 65535	×10 ⁻⁵ inch	
			×10 ⁻⁵ degree	
			pulse	
Pr.4	Pr.4 Unit magnification (Am)		1/10/100/1000	

For details of the setting, refer to Section 5.2 "List of parameters". In addition, use the value set in " Pr.3 Movement amount per rotation (AI)" as movement amount per rotation (AI) to calculate movement amount per pulse (A).

Example: Movement amount per pulse (A) when " Pr.1 Unit setting" is "0: mm"

- " Pr.2 No. of pulses per rotation": 20000
- " | Pr.3 | Movement amount per rotation": 40000
- " | Pr.4 | Unit magnification": 1

Movement amount per pulse (A) =
$$\frac{40000 \times 10^{-1}}{20000} \times 1$$
 = 0.2 μ m

If the value is beyond the setting range, setting values of each parameter can be decreased by canceling the numerator and denominator with the movement amount per pulse (A) kept.

[2] Error compensation method

When position control is carried out by the "movement amount per pulse" set in the QD75 parameters, an error sometimes occurs between the command movement amount (L) and the actual movement amount (L').

That error is compensated in the QD75 by adjusting the values in " Pr.2 No. of pulses per rotation (Ap)", " Pr.3 Movement amount per rotation (Al)", and " Pr.4 Unit magnification (Am)". (When " Pr.1 Unit setting" is "0: mm")

(1) Definition

The "error compensation amount" used to carry out the error compensation is defined as follows.

The QD75 "movement amount per pulse" is calculated with the following equation.

Movement amount per pulse is "A", " Pr.2 No. of pulses per rotation" is (Ap), " Pr.3 Movement amount per rotation" is (Al), and " Pr.4 Unit magnification" is (Am).

$$A = \frac{Al}{Ap} \times Am$$

(2) Procedure

- (a) Set the "command movement amount (L)", and carry out positioning. (Set the "movement amount per pulse (A)" according to Section 5.2 "List of parameters".)
- (b) After positioning, measure the "actual movement amount (L')".
- (c) Calculate the "error compensation amount".

Error compensation amount =
$$\frac{L'}{L}$$

(d) Calculate the post-compensation " Pr.2 No. of pulses per rotation (Ap')", " Pr.3 Movement amount per rotation (Al')", and " Pr.4 Unit magnification (Am')" from the "post-compensation movement amount per pulse (A')".

$$A = A \times \text{Error compensation amount}$$

$$= \frac{Al}{Ap} \times Am \frac{L'}{L}$$

$$= \frac{Al'}{Ap'} \times Am'$$

(Adjust with Am' so that Al' and Ap' do not exceed the setting range.)

12

-- Calculation example ------(Conditions) Movement amount per pulse : 500 (μm/rev) No. of pulses per rotation : 12000 (pulse/rev) Unit magnification (Positioning results) Command movement amount : 100mm Actual movement amount : 101mm (Compensation amount) × 101×10³ 5×10³ Movement amount per pulse : 101 (μm/rev) [Set in Pr.3] No. of pulses per rotation : 240 (pulse/rev) [Set in Pr.2] [Set in Pr.4]

(e) Set the post-compensation " Pr.2 No. of pulses per rotation (Ap')", " Pr.3 Movement amount per rotation (Al')", and " Pr.4 Unit magnification (Am')" in the parameters, and write them to the QD75. The set details are validated at the rising edge (OFF $\,
ightarrow$ ON) of the PLC READY signal (Y0).

: 1

Setting item		Setting value	Setting details	Pre-compensation value
Pr.2	No. of pulses per rotation	Ap'	Set the post-compensation value.	Ар
Pr.3	Movement amount per rotation	Al'	Set the post-compensation value.	Al
Pr.4	Unit magnification	Am'	Set the post-compensation value.	Am

^{*} Refer to Section 5.2 "List of parameters" for setting details.

Unit magnification

12

[3] Control Precautions

If values less than one pulse are generated by converting the movement amount from the start point to the end point to pulse units with the electronic gear function, the values are not output and the machine stops at the front side of the positioning direction. The function accumulates values less than one pulse that could not be pulse output in the QD75 and outputs one pulse when the total cumulative value reached one pulse or more.

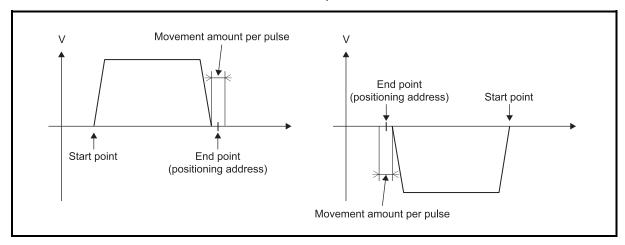


Fig. 12.11 Operation when values less than one pulse are generated

To prevent values less than one pulse from being generated, set the positioning address so that the value, calculated by multiplying the inverse number of movement amount per pulse (A) to the movement amount to the end point, becomes an integer.

It is recommended that the "movement amount per pulse (A)" be set to a value close to "1" for the following reasons. The "movement amount per pulse" of "1" means the minimum value in each " $\boxed{\text{Pr.1}}$ Unit setting". (0.1 [μ m] for the unit [mm])

- (1) When the setting of the movement amount per pulse is decreased, the command frequency may increase. Be careful when changing the setting.
- (2) If the setting of the movement amount per pulse is less than 1, the mechanical system may oscillate. Be sure to use the movement amount per pulse among the range indicated below.

Movement amount per pulse (A) $\geq \frac{1}{500}$

If the mechanical system oscillates, also use the electronic gear function of the drive unit and the movement amount per pulse greater.

(3) Set the movement amount per pulse so that the pulse output frequency for the drive unit becomes a value in the following table.

	QD75P□N/QD75P□	QD75D□N	QD75D□
Pulse output frequency for drive unit	200kpulse/s or less	4Mpulse/s or less	1Mpulse/s or less

If the setting of pulse output frequency for the drive unit exceeds a value in the table, the QD75 may not operate correctly.

REMARK

In the QD75, the general term for the functions in this section is defined as the "electronic gear function". Refer to the User's Manual for the servomotor for the definition of the "electronic gear" on the servomotor side.

12.3.3 Near pass function

When continuous pass control is carried out using interpolation control, the near pass function is carried out.

The "near pass function" is a function to suppress the mechanical vibration occurring at the time of switching the positioning data when continuous pass control is carried out using interpolation control.

[Near pass function]

The extra movement amount occurring at the end of each positioning data unit being continuously executed is carried over to the next positioning data unit. Alignment is not carried out, and thus the output speed drops are eliminated, and the mechanical vibration occurring during speed changes can be suppressed. Because alignment is not carried out, the operation is controlled on a path that passes near the position set in " Da.6 Positioning address/movement amount".

The details shown below explain about the "near pass function".

- [1] Control details
- [2] Control Precautions

[1] Control details

The following drawing shows the path of the continuous path control by the 2-axis linear interpolation control.

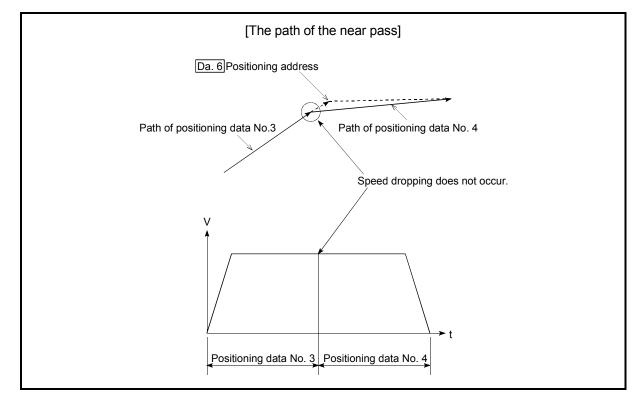


Fig. 12.12 The path of the continuous path control

12

[2] Control Precautions

- (1) If the movement amount designated by the positioning data is small when the continuous path control is executed, the output speed may not reach the designated speed.
- (2) The movement direction is not checked during interpolation operation. Therefore, a deceleration stops are not carried out even the movement direction changes. (See below) For this reason, the output will suddenly reverse when the reference axis movement direction changes. To prevent the sudden output reversal, assign not the continuous path control "11", but the continuous positioning control "01" to the positioning data of the passing point.

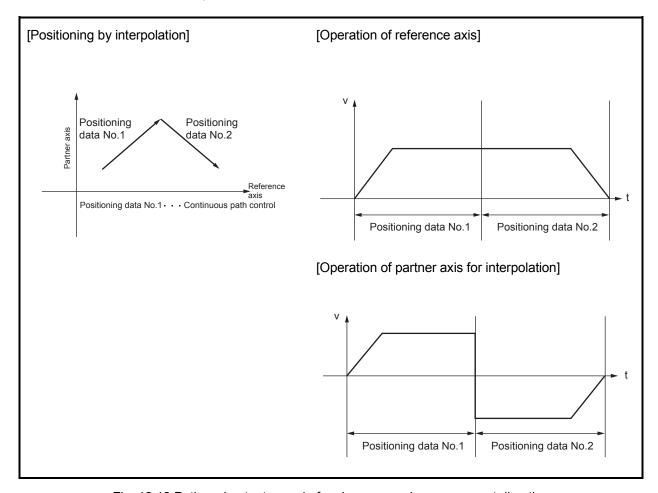


Fig. 12.13 Path and output speed of various axes when movement direction varies during continuous path control

12.3.4 Output timing selection of near pass control

The function "output timing selection of near pass control" allows the user to select the timing to output the difference (\triangle ℓ) between the actual and the set positioning end addresses in continuous path control, in which the difference (\triangle ℓ) is output during the execution of the next positioning data.

The details shown below explain about the function "output timing selection of near pass control".

- [1] Control details
- [2] Control precautions
- [3] Setting method

[1] Control details

There are two options for an output timing of near pass control: "At constant speed" and "At deceleration".

- At constant speed: The distance $\triangle \ell$ is output when the next positioning data is executed in constant speed.
- At deceleration: The distance \triangle ℓ is output when the next positioning speed decelerates from V1 to V2.

When "At constant speed" is selected in a condition where the specified speed of positioning data No.1 and No.2 in the figure 12.14 are "V1 > V2", the distance $\triangle \ell$ is output when the next positioning data is executed in constant speed; therefore, the positioning execution time is extended.

When "At deceleration" is selected, the positioning execution time is not extended and remains the same as it was set.

The following drawing shows the operation of the function "output timing selection of near pass control".

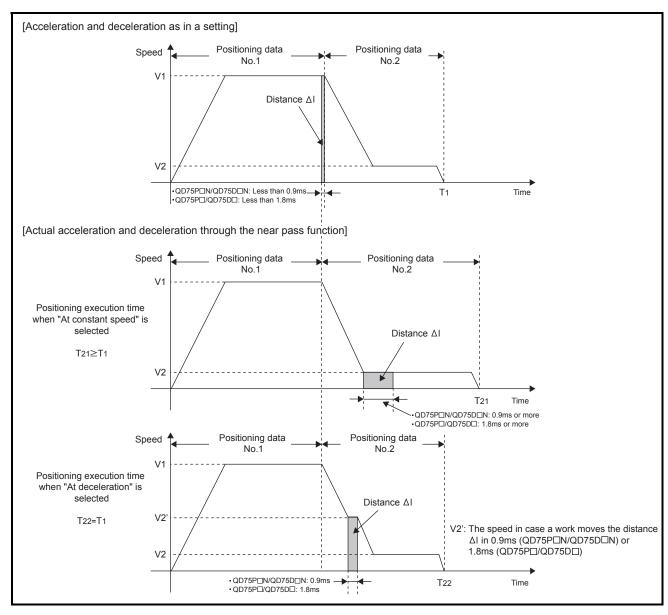


Fig. 12.14 Acceleration and deceleration depending on the output timing selection of near pass control

[2] Control precautions

When command speed V1 and V2 are in the condition 1) or 2) below, the command output is that of "At constant speed" even though "At deceleration" was selected.

- 1) When "V1 \leq V2"
- 2) When "(Speed value converted from distance $\triangle \ell$)*1 \leq V2 < V1"
- *1: The height of the grey area in the graph on the bottom right

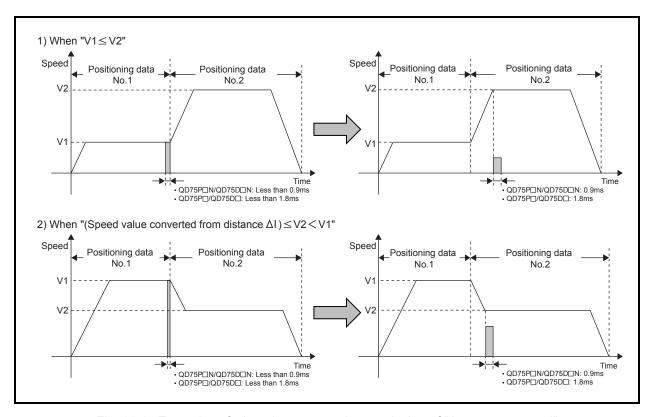


Fig. 12.15 Examples of when the command output is that of "At constant speed" even though "At deceleration was selected"

[3] Setting method

To use the function "output timing selection of near pass control", set the following control data in a sequence program.

The set detail is validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0).

	Setting item	Setting value	Setting details	Buffer memory address
Cd.43	Output timing selection of near pass control	\rightarrow	Select the timing to output the difference (\triangle ℓ) between the actual and the set positioning end addresses in continuous path control, in which the difference (\triangle ℓ) is output during the execution of the next positioning data. 0: At constant speed 1: At deceleration	1934

^{*} Refer to Section 5.7 "List of control data" for setting details.

12.4 Functions to limit the control

Functions to limit the control include the "speed limit function", "torque limit function", "software stroke limit", and "hardware stroke limit". Each function is executed by parameter setting or sequence program creation and writing.

12.4.1 Speed limit function

The "speed limit function" limits the command speed to a value within the "speed limit value" setting range when the command speed during control exceeds the "speed limit value".

The details shown below explain about the "speed limit function".

- [1] Relation between the speed limit function and various controls
- [2] Control precautions
- [3] Setting method
- [1] Relation between the speed limit function and various controls

 The following table shows the relation of the "speed limit function" and various
 controls.

	Со	ntrol type	Speed limit function	Speed limit value	
OPR	Machine	OPR control	0		
control	Fast OPI	R control	0		
		1-axis linear control	0		
		2- to 4-axis linear interpolation control	©		
		1-axis fixed-feed control	0		
	Position control	2- to 4-axis fixed-feed control (interpolation)	0	Pr.8 Speed limit	
Major		2-axis circular interpolation control	©	valdo	
positioning control	ng	3-axis helical interpolation control	0		
	1- to 4-a	xis Speed control	0		
	1	osition switching control, speed switching control	©		
		Current value changing	_		
	Other control	John Haudelon, NO	-	Setting value invalid	
Manual control	JOG ope	eration, Inching operation	0	Pr.31 JOG speed limit value	
COLLIO	Manual p	oulse generator operation		Setting is invalid	

O : Always set

 Setting not required (Setting value is invalid. Use the initial values or setting values within a range where no error occurs.)

[2] Control precautions

- If any axis exceeds "Pr.8 Speed limit value" during 2- to 4-axis speed control, the axis in excess of the speed limit value is controlled at the speed limit value. For the other axes which perform interpolation, the speed can be suppressed by the ratio of a command speed.
- If any axis exceeds "Pr.8 Speed limit value" during 2- to 4-axis linear interpolation control, 2- to 4-axis fixed-feed control, 2-axis circular interpolation control, or 3-axis helical interpolation control, the axis exceeding the speed limit value is controlled at the speed limit value. For the other axes performing interpolation, the speed can be suppressed by the ratio of a movement distance.
- In 2- to 4-axis linear interpolation control or 2- to 4-axis fixed-feed control, the speed limit value for the interpolation axis may not function under the following condition: "1: Reference axis speed" is set in "Pr.20 Interpolation speed designation method" or "Da.29 Interpolation speed designation method", and the reference axis is the minor axis and the interpolation axis is the major axis.
- In 3-axis helical interpolation control, control the composite speed of the circular interpolation axis or the speed of the linear interpolation axis so that the speeds do not exceed "Pr.8 Speed limit value".

[3] Setting method

To use the "speed limit function", set the "speed limit value" in the parameters shown in the following table, and write them to the QD75.

The set details are validated after they are written to the QD75.

Setting item		Setting value	Setting details	Factory-set initial value
Pr.8	Speed limit value	\rightarrow	Set the speed limit value (max. speed during control).	200000
Pr.31	JOG speed limit value	\rightarrow	Set the speed limit value during JOG operation (max. speed during control). (Note that " Pr.31 JOG speed limit value" shall be less than or equal to " Pr.8 Speed limit value".)	20000

^{*} Refer to Section 5.2 "List of parameters" for setting details.

REMARK

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

12.4.2 Torque limit function

The "torque limit function" limits the generated torque to a value within the "torque limit value" setting range when the torque generated in the servomotor exceeds the "torque limit value".

The "torque limit function" protects the deceleration function, limits the power of the operation pressing against the stopper, etc. It controls the operation so that unnecessary force is not applied to the load and machine.

The QD75 does not carry out the torque limit of servo motor directly with this function. The torque limit command to servo amplifier is carried out by the D/A converter module.

The details shown below explain about the "torque limit function".

- [1] System configuration for carrying out the torque limit
- [2] Relation between the torque limit function and various controls
- [3] Control details
- [4] Control precautions
- [5] Setting method

[1] System configuration for carrying out the torque limit Carry out the torque limit in the configuration in the figure below. (The following modules are required.)

- D/A converter module
- Drive unit capable of torque limit control by analog voltage input

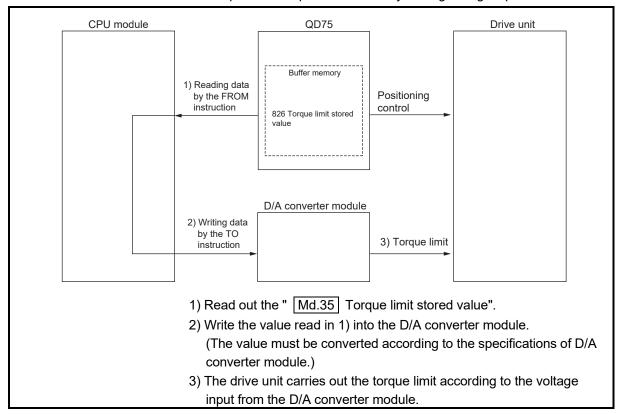


Fig. 12.16 Torque limit to the drive unit (axis 1)

12

$D \cap$	INIT	
Γ	II VIII	

The QD75 monitors the creep speed reach during the OPR control and updates the "Md.35" Torque limit stored value" to the "Pr.54" OPR torque limit value".

Monitoring this value prevents the need to monitor the creep speed reach by the program. If all controls of torque limit value are carried out by the program (1) Reading data by the FROM instruction, this function must not be used.

[2] Relation between the torque limit function and various controls

The following table shows the relation of the "torque limit function" and various
controls.

	Co	ntrol type	Torque limit function	Torque limit value *											
OPR control	Machine	OPR control	0	Pr.17 Torque limit setting value * After the " Pr.47 Creep speed" is reached, this value becomes the " Pr.54 OPR torque limit value".											
	Fast OPF	R control	0												
		1-axis linear control	0												
		2- to 4-axis linear interpolation control	0												
	Position control	1-axis fixed-feed control	0												
		2- to 4-axis fixed-feed control (interpolation)	0	Pr.17 Torque limit setting value											
Major													2-axis circular interpolation control	0	[F1.17] Torque inflit setting value
positioning control		3-axis helical interpolation control	0												
	1- to 4-ax	kis Speed control	0												
		osition switching control speed switching control	0												
		Current value changing	_												
	Other control	JUMP instruction, NOP instruction, LOOP to LEND	-	Setting value is invalid.											
Manual	JOG ope	ration, Inching operation	0	Pr.17 Torque limit setting value											
control	Manual p	oulse generator operation	0	Pr.17 Torque limit setting value											

^{○ :} Set when required

Setting not required (Setting value is invalid. Use the initial values or setting values within a range where no error occurs.)

^{* :} Shows the torque limit value when " | Cd.22 | New torque value" is set to "0".

[3] Control details

The following drawing shows the operation of the torque limit function.

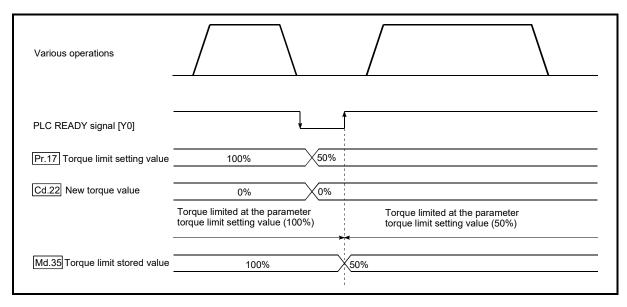


Fig. 12.17 Torque limit function operation

[4] Control precautions

- (1) When limiting the torque at the "Pr.17 Torque limit setting value", confirm that "Cd.22 New torque value" is set to "0". If this parameter is set to a value besides "0", the "Cd.22 New torque value" will be validated, and the torque will be limited at that value. (Refer to Section 12.5.4 "Torque change function" for details about the "new torque value".)
- (2) When " Pr.54 OPR shift amount" exceeds " Pr.17 Torque limit setting value", the error "OPR torque limit value error" (error code: 995) will occur.
- (3) When the operation is stopped by torque limiting, the droop pulse will remain in the deviation counter. If a "deviation counter clear" is carried out by issuing an external signal at this time, positional deviation will occur when the operation is continued. If the load torque is eliminated, operation for the amount of droop pulses will be carried out.

[5] Setting method

(1) To use the "torque limit function", set the "torque limit value" in the parameters shown in the following table, and write them to the QD75. The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y0).

Setting item	Setting value	Setting details	Factory-set initial value
Pr.17 Torque limit setting value	\rightarrow	Set the torque limit value as a percentage.	300
Pr.54 OPR torque lir	nit	Set the torque limit value after the " Pr.47 Creep speed" is reached. Set as a percentage.	300

^{*} Refer to Section 5.2 "List of parameters" for setting details.

The following table shows the " Md.35 Torque limit stored value" of the buffer memory address.

		Monitor		Buffe	r mem	ory ad	ldress
Monitor i	tem	value	Storage details	Axis	Axis	Axis	
					2	3	4
1 I Md 35 I I '	e limit I value	\rightarrow	The "torque limit value" valid at that time is stored. (Pr.17, Pr.54, or Cd.22)	826	926	1026	1126

^{*} Refer to Section 5.6 "List of monitor data" for information on the setting details.

REMARK

- · Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

12.4.3 Software stroke limit function

In the "software stroke limit function" the address established by a machine OPR is used to set the upper/lower limits of the moveable range of the workpiece. Movement commands issued to addresses outside that setting range will not be executed. In the QD75, the "current feed value" and "machine feed value" are used as the addresses indicating the current position. However, in the "software stroke limit function", the address used to carry out the limit check is designated in the "Pr.14 Software stroke limit selection". (Refer to Section 9.1.4 "Confirming the current value" or details on the "current feed value" and "machine feed value".) The upper/lower limits of the moveable range of the workpiece are set in "Pr.12 Software stroke limit upper limit value"/ "Pr.13 Software stroke limit lower limit value".

The details shown below explain about the "software stroke limit function".

- [1] Differences in the moveable range when "current feed value" and "machine feed value" are selected.
- [2] Software stroke limit check details
- [3] Relation between the software stroke limit function and various controls
- [4] Precautions during software stroke limit check
- [5] Setting method
- [6] Invalidating the software stroke limit
- [7] Setting when the control unit is "degree"
- [1] Differences in the moveable range when "current feed value" and "machine feed value" are selected.

The following drawing shows the moveable range of the workpiece when the software stroke limit function is used.

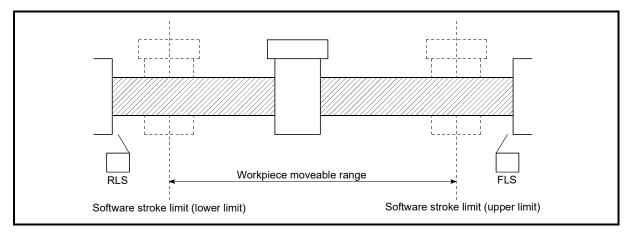


Fig. 12.18 Workpiece moveable range

The following drawing shows the differences in the operation when " Md.20 Current feed value" and " Md.21 Machine feed value" are used in the moveable range limit check.

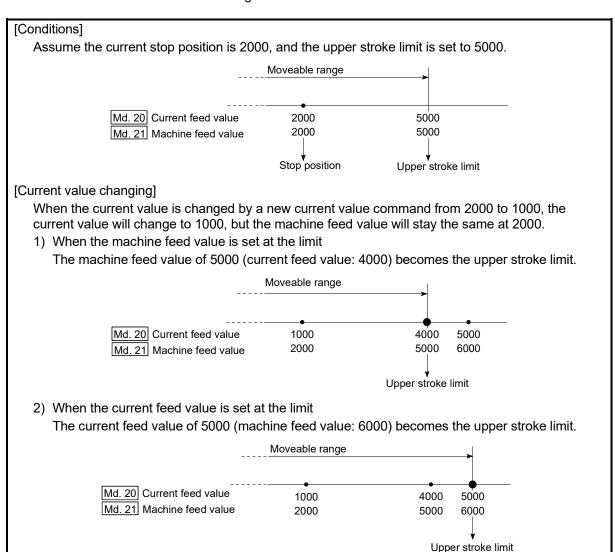


Fig. 12.19 Software stroke limits of the current feed value and machine feed value

POINT

When "machine feed value" is set in " Pr.14 Software stroke limit selection", the moveable range becomes an absolute range referenced on the OP. When "current feed value" is set, the moveable range is the relative range from the "current feed value".

[2] Software stroke limit check details

Check details	Processing when an error occurs
An error shall occur if the current value *1 is outside the software stroke limit range *2. (Check " Md.20 Current feed value" or " Md.21 Machine feed value".)	An error "Software stroke limit +" or "Software stroke limit -" (error
An error shall occur if the command address is outside the software stroke limit range. (Check " Da.6 Positioning address/movement amount".)	code: 507 or 508) will occur.

- *1: Check whether the " Md.20 Current feed value" or " Md.21 Machine feed value" is set in " Pr.14 Software stroke limit selection".
- *2: Moveable range from the " Pr.12 Software stroke limit upper limit value" to the " Pr.13 Software stroke limit lower limit value".

[3] Relation between the software stroke limit function and various controls


	orition .								
	Co	ontrol type	Limit check	Pr	rocessing at check				
OPR control	Machine (OPR control	_	Check not carried ou	.4				
OPR CONTION	Fast OPR	control	_	Check not carried of	IL.				
		1-axis linear control	0						
		2- to 4-axis axis linear interpolation control	0						
		1-axis fixed-feed control	0	Checks 1) and 2) in t	the previous section [2] are carried				
	Position control	2- to 4-axis fixed-feed control (interpolation)	0	out. For speed control:	The axis decelerates to a stop when				
Major		2-axis circular interpolation control	0		it exceeds the software stroke limit range.				
Major positioning control		3-axis helical interpolation control	0	stop when it exceeds the	The axis comes to an immediate stop when it exceeds the software				
CONTROL	1- to 4-axi	s speed control	○ *3, 4		stroke limit range.				
		sition switching control peed switching control	○ *3, 4						
	Other	Current value changing		The current value will not be changed if the new curre value is outside the software stroke limit range.					
	control	JUMP instruction, NOP instruction, LOOP to LEND	-	Check not carried out.					
	JOG opera	ation, Inching operation	△ *5		ious section [2] is carried out.				
Manual control	Manual pu	ulse generator operation	△ *5	software stroke limit falls out of the software	rry out a deceleration stop when the range is exceeded. If the address are stroke limit range, the operation oward the movable range.				

- : Check valid
- Check is not made when the current feed value is not updated (Refer to Pr.21) at the setting of "current feed value" in "Pr.14 Software stroke limit selection" during speed control.
- : Check not carried out (check invalid).
- △ : Valid only when "0:valid" is set in the " Pr.15 Software stroke limit valid/invalid setting".
- *3: The value in " Md.20 Current feed value" will differ according to the " Pr.21 Current feed value during speed control" setting.
- *4: When the unit is "degree", check is not made during speed control.
- *5: When the unit is "degree", check is not carried out.


12

- [4] Precautions during software stroke limit check
 - (1) A machine OPR must be executed beforehand for the "software stroke limit function" to function properly.
 - (2) During interpolation control, a stroke limit check is carried out for the every current value of both the reference axis and the interpolation axis. Every axis will not start if an error occurs, even if it only occurs in one axis.
 - (3) During circular interpolation control, the " Pr.12 Software stroke limit upper limit value"/" Pr.13 Software stroke limit lower limit value" may be exceeded.

In this case, a deceleration stop will not be carried out even if the stroke limit is exceeded. Always install an external limit switch if there is a possibility the stroke limit will be exceeded.

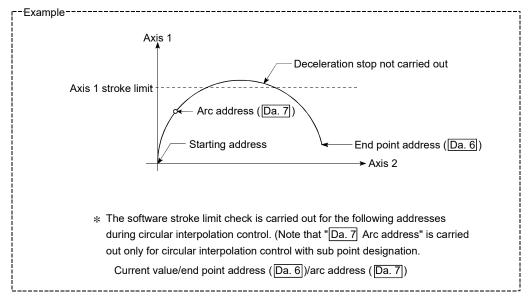

(4) If an error is detected during continuous path control, the axis stops immediately on completion of execution of the positioning data located right before the positioning data in error.

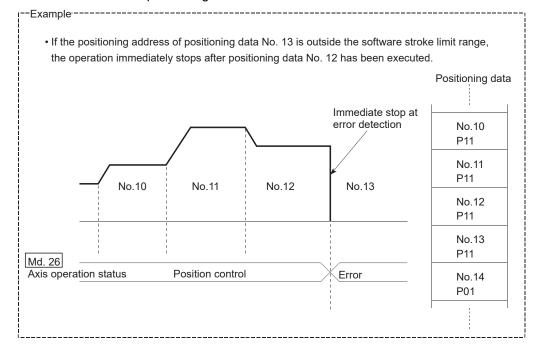

(5) During simultaneous start, a stroke limit check is carried out for the current values of every axis to be started. Every axis will not start if an error occurs, even if it only occurs in one axis.

[5] Setting method

To use the "software stroke limit function", set the required values in the parameters shown in the following table, and write them to the QD75. The set details are validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0).

;	Selling liem		Setting value Setting details	
Pr.12	Software stroke limit upper limit value	\rightarrow	Set the upper limit value of the moveable range.	2147483647
Pr.13	Software stroke limit lower limit value	\rightarrow	Set the lower limit value of the moveable range.	-2147483648
Pr.14	Software stroke limit selection	\rightarrow	Set whether to use the " Md.20 Current feed value" or " Md.21 Machine feed value" as the "current value".	0: Current feed value
Pr.15	Software stroke limit valid/invalid setting	0:Valid	Set whether the software stroke limit is validated or invalidated during manual control (JOG operation, Inching operation, manual pulse generator operation).	0: valid

^{*} Refer to Section 5.2 "List of parameters" for setting details.

[6] Invalidating the software stroke limit

To invalidate the software stroke limit, set the following parameters as shown, and write them to the QD75. (Set the value within the setting range.)

Pr.12 Software stroke limit	1_	Pr 13 Software stroke limit
upper limit value	_	lower limit value

To invalidate only the manual operation, set "1: software stroke limit invalid" in the "Pr.15 Software stroke limit valid/invalid setting".

The set details are validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0).

When the unit is "degree", the software stroke limit check is not performed during speed control (including speed control in speed-position switching control or position-speed switching control) or during manual control, independently of the values set in Pr.12, Pr.13 and Pr.15.

REMARK

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

[7] Setting when the control unit is "degree"

Current value address

The " Md.20 Current feed value" address is a ring address between 0 and 359.99999°.

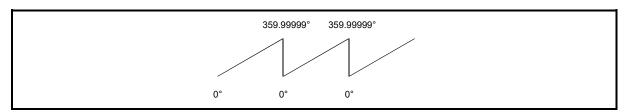


Fig. 12.20 Current value address when the control unit is "degree"

Setting the software stroke limit

The upper limit value/lower limit value of the software stroke limit is a value between 0 and 359.99999° .

(1) Setting when the software stroke limit is to be validated. When the software stroke limit is to be validated, set the upper limit value in a clockwise direction from the lower limit value.

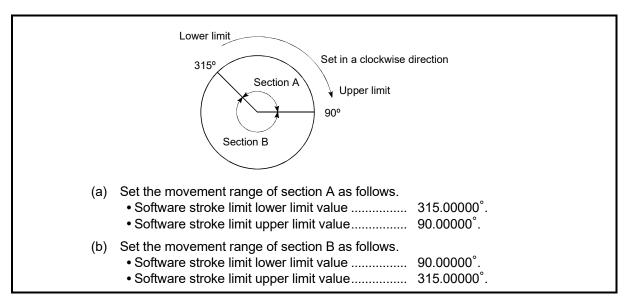


Fig. 12.21 Software stroke limit when the control unit is "degree"

12.4.4 Hardware stroke limit function

When the hardware stroke limit is required to be wired, ensure to wire it in the negative logic using b-contact. If it is set in positive logic using a-contact, a serious accident may occur.

In the "hardware stroke limit function", limit switches are set at the upper/lower limit of the physical moveable range, and the control is stopped (by deceleration stop) by the input of a signal from the limit switch. Damage to the machine can be prevented by stopping the control before the upper/lower limit of the physical moveable range is reached.

Hardware stroke limit switches are normally "installed inside the stroke limit/stroke end on the drive unit side", and the control is stopped before the stroke limit/stoke end on the drive unit side is reached.

The details shown below explain about the "hardware stroke limit function".

- [1] Control details
- [2] Wiring the hardware stroke limit
- [3] Control Precautions
- [4] When the hardware stroke limit is not used

[1] Control details

The following drawing shows the operation of the hardware stroke limit function.

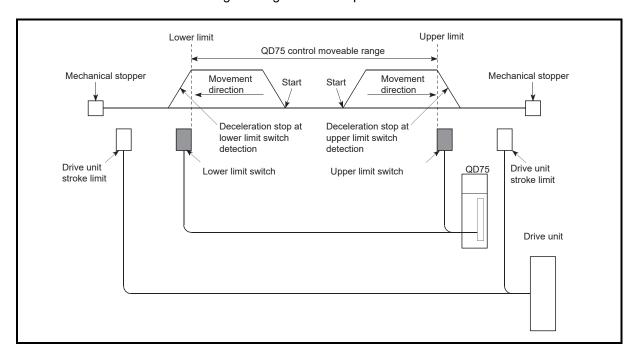



Fig. 12.22 Hardware stroke limit function operation

12

[2] Wiring the hardware stroke limit

When using the hardware stroke limit function, wire the terminals of the QD75 upper/lower limit stroke limit as shown in the following drawing.

(When " Pr.22 Input signal logic selection" is set to the initial value)

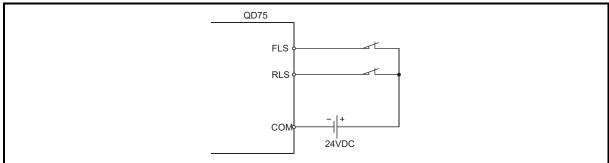

Note) Connect the upper/lower limit switches to the directions of increasing and decreasing current feed values respectively. When these switches are connected in wrong directions, the hardware stroke limit function does not operate properly and the motor does not stop.

For " Pr.6 Rotation direction setting", refer to "5.2.1 Basic parameters 1".

Fig. 12.23 Wiring when using the hardware stroke limit

[3] Control Precautions

- (1) If the machine is stopped outside the QD75 control range (outside the upper/lower limit switches), or if stopped by hardware stroke limit detection, the "OPR control", "major positioning control", and "high-level positioning control" cannot start. To carry out these types of control again, return the workpiece to the QD75 control range by a "JOG operation", "inching operation" or "manual pulse generator operation".
- (2) When " Pr.22 Input signal logic selection" is set to the initial value, the QD75 cannot carry out the positioning control if FLS (upper limit signal) is separated from COM or RLS (lower limit signal) is separated from COM (including when wiring is not carried out).

[4] When the hardware stroke limit function is not used

When not using the hardware stroke limit function, wire the terminals of the QD75 upper/lower limit stroke limit as shown in the following drawing. When the logic of FLS and RLS is set to "positive logic" using " Pr.22 Input signal logic selection", positioning control can be carried out even if FLS and RLS are not wired.

(For details, refer to Section 13.4 "External I/O signal logic switching function".)

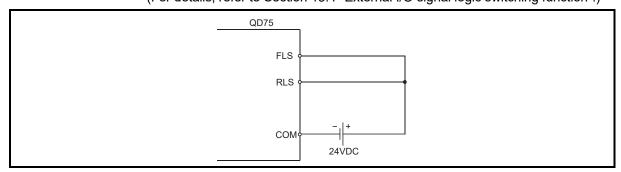


Fig. 12.24 Wiring when not using the hardware stroke limit function (When Pr.22 Input signal logic selection" is the initial value)

12.5 Functions to change the control details

Functions to change the control details include the "speed change function", "override function", "acceleration/deceleration time change function" and "torque change function". Each function is executed by parameter setting or sequence program creation and writing.

Both the "speed change function" or "override function" change the speed, but the differences between the functions are shown below. Use the function that corresponds to the application.

"Speed change function"

- The speed is changed at any time, only in the control being executed.
- The new speed is directly set.

"Override function"

- The speed is changed for all control to be executed. (Note that this excludes manual pulse generator operation.)
- The new speed is set as a percent (%) of the command speed.

12.5.1 Speed change function

The "Speed change function" is used to change the speed during control to a newly designated speed at any time.

The new speed is directly set in the buffer memory, and the speed is changed by a speed change command (Cd.15) Speed change request) or external command signal. During the machine OPR, a speed change to the creep speed cannot be carried out after deceleration start because the near point dog ON is detected.

The details shown below explain about the "speed change function".

- [1] Control details
- [2] Control precautions
- [3] Setting the speed change function from the CPU module
- [4] Setting the speed change function using an external command signal

[1] Control details

The following drawing shows the operation during a speed change.

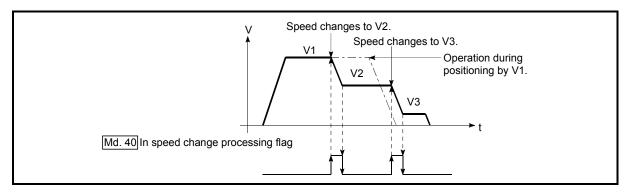


Fig. 12.25 Speed change operation

[2] Control precautions

- (1) Control is carried out as follows at the speed change during continuous path control.
 - a) When no speed designation (current speed) is provided in the next positioning data:
 - → The next positioning data is controlled at the " Cd.14 New speed value".
 - b) When a speed designation is provided in the next positioning data:
 - → The next positioning data is controlled at its command speed (Da.8).

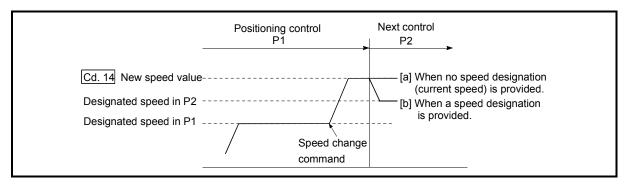


Fig. 12.26 Speed change during continuous path control

- (2) When changing the speed during continuous path control, the speed change will be ignored if there is not enough distance remaining to carry out the change.
- (3) When the stop command was given to make a stop after a speed change that had been made during position control, the restarting speed depends on the function version.

Function version	Restarting speed			
Α	Da.8 Command speed			
B or later	Cd.14 New speed value			

Refer to Section 2.4 for the way to check the function version.

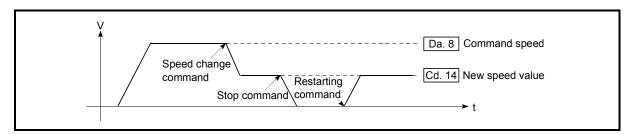


Fig. 12.27 Restarting speed after speed change made during position control (Function version B)

- (4) When the speed is changed by setting " Cd.14 New speed value" to "0", the operation is carried out as follows.
 - When " Cd.15 Speed change request" is turned ON, the speed change 0 flag (Md.31 Status: b10) turns ON.
 (During interpolation control, the speed change 0 flag on the reference axis side turns ON.)
 - The axis stops, but " Md.26 Axis operation status" does not change, and the BUSY signal remains ON. (If a stop signal is input, the BUSY signal will turn OFF, and " Md.26 Axis operation status" will change to "Stopped".)
 - *In this case, setting the " Cd.14 New speed value" to a value besides "0" will turn OFF the speed change 0 flag (Md.31 Status: b10), and enable continued operation.

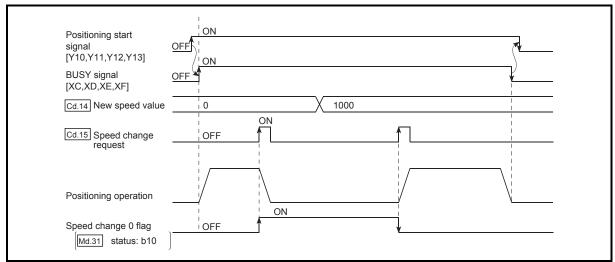


Fig. 12.28 Speed change at new speed value "0"

- (5) A warning "Deceleration/stop speed change" (warning code: 500) occurs and the speed cannot be changed in the following cases.
 - · During deceleration by a stop command
 - · During automatic deceleration during positioning control
- (6) A warning "Speed limit value over" (warning code: 501) occurs and the speed is controlled at the " Pr.8 Speed limit value" when the value set in " Cd.14 New speed value" exceeds the " Pr.8 Speed limit value".
- (7) When the speed is changed during interpolation control, the required speed is set in the reference axis.
- (8) When carrying out consecutive speed changes, be sure there is an interval between the speed changes of 100ms or more. (If the interval between speed changes is short, the QD75 will not be able to track, and it may become impossible to carry out commands correctly.)
- (9) When a speed change is requested simultaneously for multiple axes, change the speed one by one. Therefore, the start timing of speed change is different for each axis.
- (10) The speed cannot be changed to 0 during the machine OPR. The speed change request is ignored.
- (11) When deceleration is started by the speed change function, the deceleration start flag does not turn ON.

- [3] Setting the speed change function from the CPU module

 The following shows the data settings and sequence program example for changing the control speed of axis 1 from the CPU module. (In this example, the control speed is changed to "20.00mm/min".)
 - (1) Set the following data.(Use the start time chart shown in section (2) below as a reference, and set using the sequence program shown in section (3).)

			Setting details	Buffer memory address				
Setting item		Setting value		Axis 1	Axis 2	Axis 3	Axis 4	
Cd.14	New speed value	2000	ISAt the new sneed				1814 1815	
Cd.15	Speed change request	1	Set "1: Change the speed".	1516	1616	1716	1816	

- * Refer to Section 5.7 "List of control data" for details on the setting details.
 - (2) The following shows the speed change time chart.


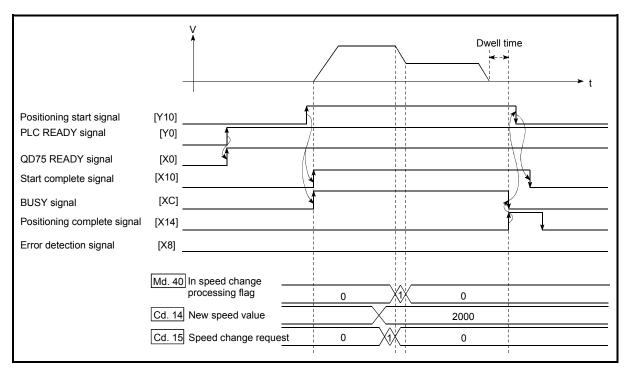


Fig. 12.29 Time chart for changing the speed from the CPU module

(3) Add the following sequence program to the control program, and write it to the CPU module.

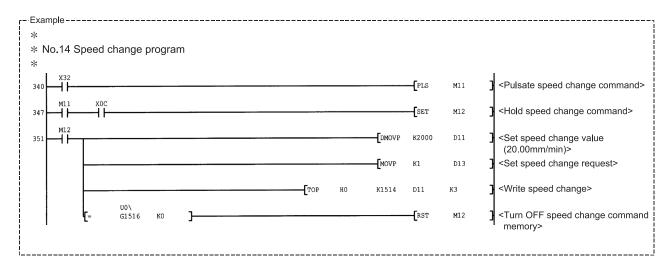

[4] Setting the speed change function using an external command signal

The speed can also be changed using an "external command signal". The following shows the data settings and sequence program example for changing the control speed of axis 1 using an "external command signal". (In this example, the control speed is changed to "10000.00mm/min".)

(1) Set the following data to change the speed using an external command signal.

(Use the start time chart shown in section (2) below as a reference, and set using the sequence program shown in section (3).)

			Setting details	Buffer memory address			
Setting item		Setting value		Axis 1	Axis 2	Axis 3	Axis 4
Pr.42	External command function selection	1	Set "1: External speed change request".	62	212	362	512
Cd.8	External command valid	1	Set "1: Validate the external command".	1505	1605	1705	1805
Cd.14	New speed value	1000000	Set the new speed.	_	-		1814 1815

- * Refer to Section 5.7 "List of control data" for details on the setting details.
 - (2) The following shows the speed change time chart.


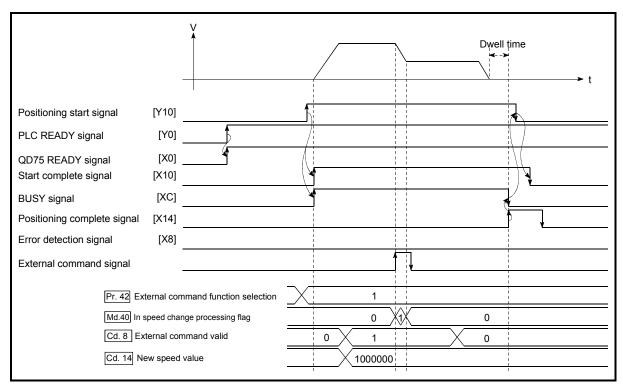


Fig. 12.30 Time chart for changing the speed using an external command signal

(3) Add the following sequence program to the control program, and write it to the CPU module.

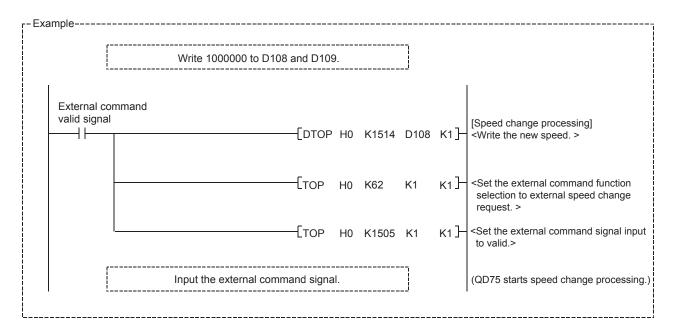

12.5.2 Override function

The "override function" changes the command speed by a designated percentage (1 to 300%) for all control to be executed.

The speed can be changed by setting the percentage (%) by which the speed is changed in " Cd.13 Positioning operation speed override".

- [1] Control details
- [2] Control precautions
- [3] Setting method

[1] Control details

The following shows that operation of the override function.

- 1) A value changed by the override function is monitored by " Md.22 Feedrate". (When Md.22 " becomes "0", the warning "Less than minimum speed" (warning code: 110) is generated and the axis is controlled in the then speed unit of "1".)
- 2) If " Cd.13 Positioning operation speed override" is set to 100%, the speed will not change.
- 3) If " Cd.13 Positioning operation speed override" is set a value 100% or less, the warning "Less than minimum speed" (warning code: 110) is generated, and control will be carried out at speed unit "1" at the time "Feedrate" becomes a value of "1" or less.
- 4) If there is not enough remaining distance to change the speed by the "override function" during the "position control" or position control by the "speed-position switching control" or "position-speed switching control", the operation will be carried out at the possible speed for the distance.
- 5) If the speed changed by the "override function" is greater than the "Pr.8 Speed limit value", a warning "Speed limit value over" (warning code: 501) will occur and the speed will be controlled at the "Pr.8 Speed limit value". The "Md.39 In speed limit flag" will turn ON.

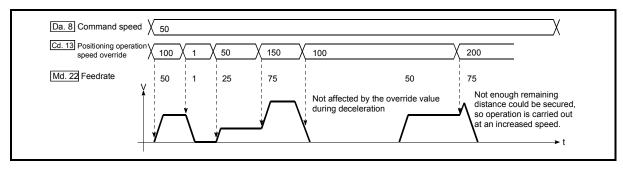


Fig. 12.31 Override function operation

[2] Control precautions

- (1) When changing the speed by the "override function" during continuous path control, the speed change will be ignored if there is not enough distance remaining to carry out the change.
- (2) A warning "Deceleration/stop speed change" (warning code: 500) occurs and the speed cannot be changed by the "override function" in the following cases.

(The value set in " Cd.13 Positioning operation speed override" is validated after a deceleration stop.)

- During deceleration by a stop command
- During automatic deceleration during positioning control
- (3) When the speed is changed by the "override function" during interpolation control, the required speed is set in the reference axis.
- (4) When carrying out consecutive speed changes by the "override function", be sure there is an interval between the speed changes of 100ms or more. (If the interval between speed changes is short, the QD75 will not be able to track, and it may become impossible to carry out commands correctly.)
- (5) When a machine OPR is performed, the speed change by the "override function" cannot be carried out after a deceleration start to the creep speed following the detection of near-point dog ON. In this case, a request for speed change is ignored.
- (6) When deceleration is started by the override function, the deceleration start flag does not turn ON.

[3] Setting method

The following shows the data settings and sequence program example for setting the override value of axis 1 to "200%".

(1) Set the following data. (Use the start time chart shown in section (2) below as a reference, and set using the sequence program shown in section (3).)

	Setting value	Setting details	Buffer memory address			
Setting item			Axis 1	Axis 2	Axis 3	Axis 4
Cd.13 Positioning operation speed override	200	Set the new speed as a percentage (%).	1513	1613	1713	1813

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

(2) The following shows a time chart for changing the speed using the override function.

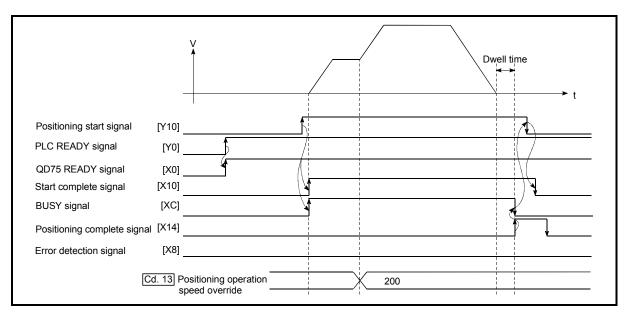


Fig. 12.32 Time chart for changing the speed using the override function

(3) Add the following sequence program to the control program, and write it to the CPU module.

```
* No.15 Override program

* No.15 Override program

* Pulsate override command>

* Set override value (200%)>

[MOV D14 G1513 ] <Write override value>
```

12.5.3 Acceleration/deceleration time change function

The "acceleration/deceleration time change function" is used to change the acceleration/deceleration time during a speed change to a random value when carrying out the speed change by the "speed change function" and "override function". In a normal speed change (when the acceleration/deceleration time is not changed), the acceleration/deceleration time previously set in the parameters (Pr.9, Pr.10, and Pr.25 to Pr.30 values) is set in the positioning parameter data items Da.3 and Da.4, and control is carried out with that acceleration/deceleration time. However, by setting the new acceleration/deceleration time (Cd.10, Cd.11) in the control data, and issuing an acceleration/deceleration time change enable command (Cd.12) Acceleration/deceleration time change during speed change, enable/disable selection) to change the speed when the acceleration/deceleration time change is enabled, the speed will be changed with the new acceleration/deceleration time (Cd.10, Cd.11).

The details shown below explain about the "acceleration/deceleration time change function".

- [1] Control details
- [2] Control precautions
- [3] Setting method

[1] Control details

After setting the following two items, carry out the speed change to change the acceleration/deceleration time during the speed change.

- Set change value of the acceleration/deceleration time (" Cd.10 New acceleration time value", " Cd.11 New deceleration time value")
- Setting acceleration/deceleration time change to enable
 (" Cd.12 Acceleration/deceleration time change during speed change, enable/disable selection")

The following drawing shows the operation during an acceleration/deceleration time change.


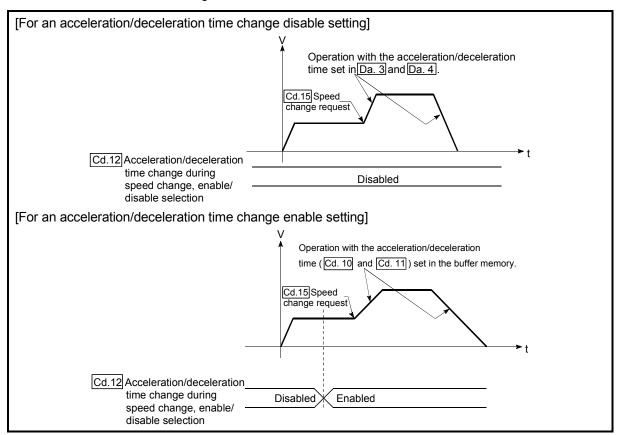



Fig. 12.33 Operation during an acceleration/deceleration time change

[2] Control precautions

- (1) When "0" is set in " Cd.10 New acceleration time value" and " Cd.11 New deceleration time value", the acceleration/deceleration time will not be changed even if the speed is changed. In this case, the operation will be controlled at the acceleration/deceleration time previously set in the parameters.
- (2) The "new acceleration/deceleration time" is valid during execution of the positioning data for which the speed was changed. In continuous positioning control and continuous path control, the speed is changed and control is carried out with the previously set acceleration/deceleration time at the changeover to the next positioning data, even if the acceleration/deceleration time is changed to the "new acceleration/deceleration time (Cd.10, Cd.11)".
- (3) Even if the acceleration/deceleration time change is set to disable after the "new acceleration/deceleration time" is validated, the positioning data for which the "new acceleration/deceleration time" was validated will continue to be controlled with that value. (The next positioning data will be controlled with the previously set acceleration/deceleration time.)

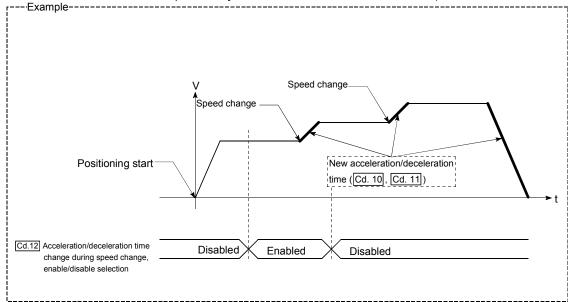

(4) If the "new acceleration/deceleration time" is set to "0" and the speed is changed after the "new acceleration/deceleration time" is validated, the operation will be controlled with the previous "new acceleration/deceleration time".

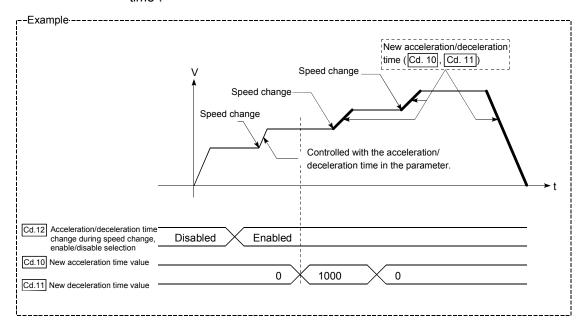

POINT

If the speed is changed when an acceleration/deceleration change is enabled, the "new acceleration/deceleration time" will become the acceleration/deceleration time of the positioning data being executed. The "new acceleration/deceleration time" remains valid until the changeover to the next positioning data. (The automatic deceleration processing at the completion of the positioning will also be controlled by the "new acceleration/deceleration time".)

[3] Setting method

To use the "acceleration/deceleration time change function", write the data shown in the following table to the QD75 using the sequence program. The set details are validated when a speed change is executed after the details are written to the QD75.

	I Setting I		Buffer memory add			dress	
	Setting item	value	Setting details	Axis	Axis	Axis	Axis
		value		1	2	3	4
Cd.10	New acceleration		Set the new acceleration time.	1508	1608	1708	1808
Cu. IC	time value	\rightarrow	set the new acceleration time.	1509	1609	1709	1809
Cd.11	New deceleration		I Set the new deceleration time	1510	1610	1710	1810
Cu. i i	ltime value	\rightarrow		1511	1611	1711	1811
Cd.12	Acceleration/ deceleration time change during speed change, enable/disable selection	1	Set "1: Acceleration/deceleration time change enable".	1512	1612	1712	1812

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

12.5.4 Torque change function

The "torque change function" is used to change the torque limit value during torque limiting.

The torque limit value during torque limiting is normally the value set in the " Pr.17 Torque limit setting value" that was previously set in the parameters. However, by setting the new torque limit value in the axis control data " Cd.22 New torque value", and writing it to the QD75, the torque generated by the servomotor during control can be limited with the new torque value.

(The " Cd.22 New torque value" is validated when written to the QD75.)

The details shown below explain about the "torque change function".

- [1] Control details
- [2] Control precautions
- [3] Setting method

[1] Control details

The torque value of the axis control data can be changed at all times. The torque can be limited with a new torque value from the time the new torque value has been written to the QD75. (a torque change is made only during operation.) The toque limiting is not carried out from the time the power supply is turned ON to the time the PLC READY signal (Y0) is turned ON.

The torque setting range is from 0 to " Pr.17 Torque limit setting value". When the new torque value is 0, a torque change is considered not to be carried out

The torque change range is 1 to " Pr.17 Torque limit setting value".

The following drawing shows the torque change operation.

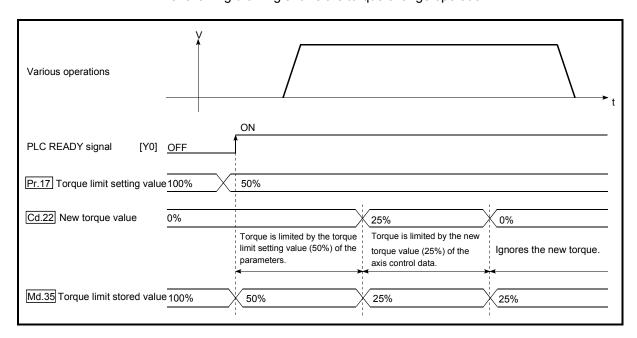


Fig. 12.34 Torque change operation

[2] Control precautions

- (1) If a value besides "0" is set in the " Cd.22 New torque value", the torque generated by the servomotor will be limited by that value. To limit the torque with the value set in " Pr.17 Torque limit setting value", set the " Cd.22 New torque value" to "0".
- (2) The " Cd.22 New torque value" is validated when written to the QD75. (Note that it is not validated from the time the power supply is turned ON to the time the PLC READY signal (Y0) is turned ON.)
- (3) If the setting value is outside the setting range, an axis warning "Outside new torque value range" (warning code: 113) will occur and the torque will not be changed.
- (4) If the time to hold the new torque value is not more than 100ms, a torque change may not be executed.

[3] Setting method

To use the "torque change function", write the data shown in the following table to the QD75 using the sequence program.

The set details are validated when written to the QD75.

	Setting item	Cotting		Buffe	r mem	ory ad	dress
		Setting value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
	Cd.22 New torque value	\rightarrow	Set the new torque limit value.	1525	1625	1725	1825

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

12.5.5 Target position change function

The "target position change function" is a function to change a target position to a newly designated target position at any timing during the position control (1-axis linear control). A command speed can also be changed simultaneously.

The target position and command speed changed are set directly in the buffer memory, and the target position change is executed by turning ON " Cd.29 Target position change request flag".

The following shows the details of the "target position change function".

- [1] Control details
- [2] Control precautions
- [3] Setting method

Control details

The following charts show the details of control of the target position change function.

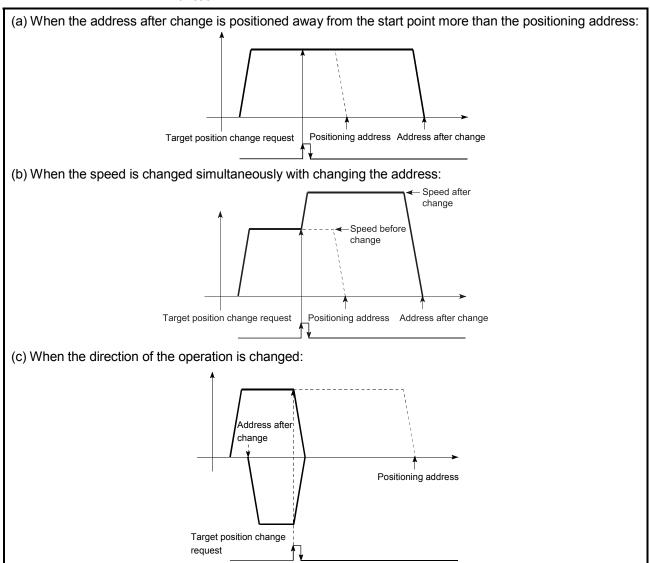


Fig. 12.35 Target position change operation

[2] Control precautions

- (1) If the positioning movement direction from the stop position to a new target position is reversed, stop the operation once and then position to the new target position. (Refer to Fig. 12.35 (c).)
- (2) If a command speed exceeding the speed limit value is set to change the command speed, the warning "Speed limit value over" (warning code: 501) will occur, and the new command speed will be the speed limit value. Also, if the command speed change disables the remaining distance to the target value from being assured, the warning "Insufficient remaining distance" (warning code: 509) will occur.
- (3) In the following cases, the target position change request is ignored, and the warning "Target position change not possible" (warning code: 518) will occur.
 - During interpolation control
 - A new target position value (address) is outside the software stroke limit range.
 - The axis is decelerating to a stop by a stop cause.
 - While the positioning data whose operation pattern is continuous path control is executed.
 - When the speed change 0 flag (Md.31 Status: b10) is ON.
- (4) When a command speed is changed, the current speed is also changed. When the next positioning speed uses the current speed in the continuous positioning, the next positioning operation is carried out at the new speed value. When the speed is set with the next positioning data, that speed becomes the current speed and the operation is carried out at the current speed.
- (5) When a target position change request is given during automatic deceleration in position control, positioning control to a new position is exercised after the axis has stopped once if the moving direction is reversed. If the moving direction is not reversed, the axis is accelerated to the command speed again and positioned to the new position.
- (6) If the constant speed status is regained or the output is reversed by a target position change made while " Md.48 Deceleration start flag" is ON, the deceleration start flag remains ON. (For details, refer to Section 12.7.8.)
- (7) Carrying out the target position change to the ABS linear 1 in degrees may carry out the positioning to the new target position after the operation decelerates to stop once, even the movement direction is not is reversed.

POINT

When carrying out the target position change continuously, take an interval of 100ms or longer between the times of the target position changes.

Also, take an interval of 100ms or longer when the speed change and override is carried out after changing the target position or the target position change is carried out after the speed change and override.

[3] Setting method

The following table and chart show the example of a data setting and program used to change the target position of the axis 1 by the command from CPU module, respectively."

(In this example, the target position and command speed is changed to "300.0 μ m" and "10000.00 mm/min".)

The following data is set. (Referring to the starting time chart shown in item (2) below, carry out the setting with the program shown in item (3).)

		Setting		Buffer memory address				
	Setting item		Setting details		Axis 2	Axis 3	Axis 4	
Cd.27	Target position change value (new address)	3000	Set the new address.			_	1834 1835	
Cd.28	Target position change value (new speed)	1000000	Set the new speed.			1736 1737	1836 1837	
Cd.29	Target position change request flag	1	Set "1: Carry out speed change".	1538	1638	1738	1838	

Refer to Section 5.7 "List of control data" for details on the setting details.

(2) The following shows the time chart for target position change.


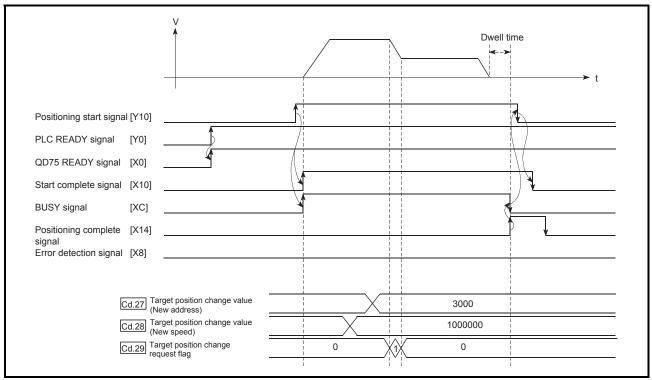


Fig. 12.36 Time chart for target position change from CPU module

(3) The following program is added to the control program, and written to the CPU module.

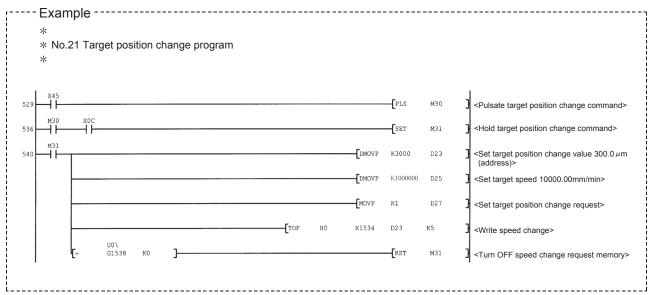

12.6 Absolute position restoration function

↑ CAUTION

An absolute position restoration by the positioning function may turn off the servo-on signal (servo off) for approximately 60ms + scan time, and the motor may run unexpectedly. If this causes a problem, provide an electromagnetic brake to lock the motor during absolute position restoration.

The "absolute position restoration function" is a function to restore the absolute position of the designated axis by the absolute position detection system. By this function, the OPR after power OFF such as instantaneous power interruption and emergency stop is not required, and the restoration operation at site can be carried out easily.

The details of the "absolute position restoration function" are described below.

- [1] Configuration and preparation of absolute position detection system
- [2] Outline of absolute position detection data communication
- [3] Absolute position signal transmission procedure
- [4] Control precautions

[1] Configuration and preparation of absolute position detection system

(1) Configuration

The following drawing shows the configuration of the absolute position detection system.

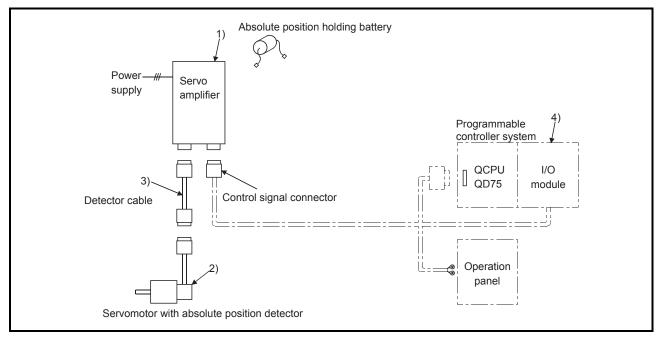


Fig. 12.37 Configuration of absolute position detection system

(2) Preparation

Prepare the absolute position detection system taking care of the following.

Details
 Use a Mitsubishi Electric General-Purpose AC Servo which has an absolute position detection function (absolute position data transference protocol) equivalent to that of MR-J3-□A).
 Install the battery to the servo amplifier.
 Validate the absolute position detection function of the servo amplifier.
Refer to the servo amplifier manual for details.
 Use a servomotor with absolute position detector. Refer to the servomotor manual for details.
 Add a battery power connection cable (BAT/LG signal) for wiring the incremental detector cable. Refer to the cable operation manual for details.
Carry out the transmission and receiving of the absolute position detection data by the I/O modules (input 3 points/output 3 points). As input/output modules, use the "16 point input module".
 As input/output modules, use the "16 point input module" and "16 point output module".
 Place the 3 points of input signals so that the □ □ is the same among the input number □ □0 to □ □F. The same for the 3 points of output signals.

[2] Outline of absolute position detection data communication
As shown in Fig. 12.38 System block diagram, the detector comprises an
encoder for detecting its position in one rotation in addition to the A, B, Z phase
signal for position control in normal operation and a cumulative rotation counter
for detecting the number of rotations.

The absolute position detection system detects the absolute position of the machine constantly and stores it with the backup of the battery irrespective of whether the programmable controller system power is turned ON/OFF. Thus, once the OP initial setting is carried out at the time of installation of the machine, the OPR is not required even when the power is later turned ON. The restoration can be carried out easily when an instantaneous power interruption or emergency stop occurs.

In addition, because the absolute position data is backed up by a super condenser built in the detector, the absolute position data will be stored for a specified time even if the cable is disconnected or broken.

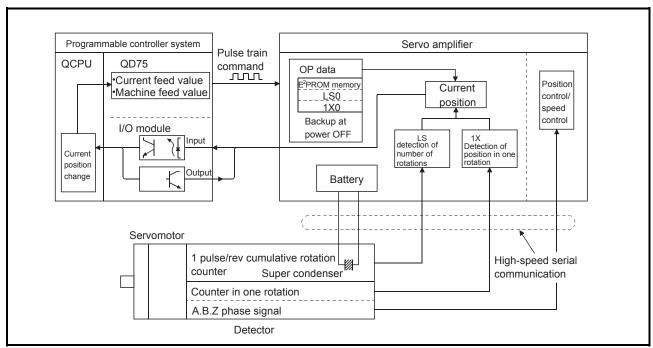


Fig. 12.38 System block diagram

[3] Absolute position signal transmission procedure

- Figure 12.39 shows the outline of the absolute position signal transmission procedure between the servo amplifier and the programmable controller system (CPU module, QD75, I/O module).
 - Refer to the operation manual of the servo amplifier for details on the communication between the servo amplifier and the programmable controller system.
- (2) Errors during communication
 - (a) If the system expires during communication, an error "ABS transmission time" (error code: 213) will occur.
 - (b) If the transmission data causes a sum error, an error "ABS transmission SUM" (error code: 214) will occur.
 - *Refer to Section 15.3 "List of errors" for the remedial method to be taken when an error occurs.


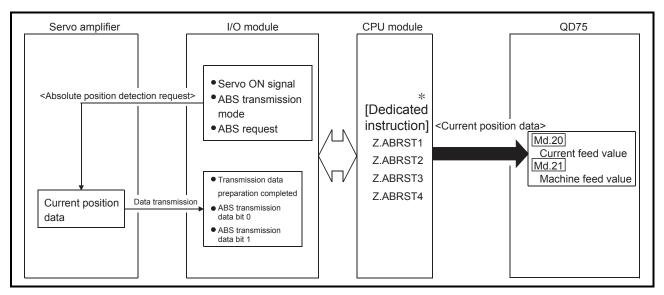


Fig. 12.39 Absolute position signal transmission procedure

* Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details of the dedicated instructions.

(3) Connection example

The following diagram shows the example of connection between the programmable controller system and the Mitsubishi Electric servo amplifier (MR-J3-A).

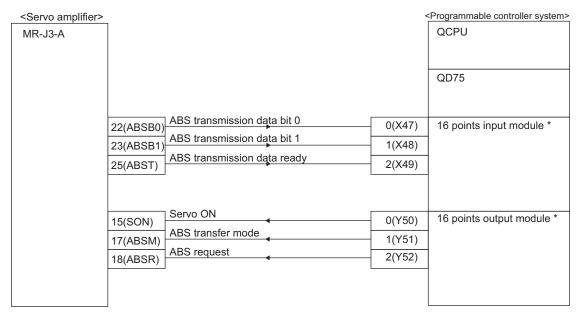

^{*:} The X and Y devices can be set arbitrarily with the program.


Details of servo amplifier connector pins

The following table shows the pins for setting the "absolute position detection system".

Signal name	Abbreviation	Pin No.	Function and application
ABS transfer mode	ABSM	17*	While the ABSM is turned ON, the servo amplifier is in the ABS transfer mode, and the CN1-22 • 23 • 25 functions are as shown in this table.
ABS request	ABSR	18*	The ABSR is turned ON when ABS data is requested in the ABS transfer mode.
ABS transmission data bit 0	ABSB0	22	This indicates the lower order bit among 2 bits of ABS data to be transferred from the servo amplifier to the programmable controller system in the ABS transfer mode. The ABSB0 turns ON when this signal occurs.
ABS transmission data bit 1	ABSB1	23	This indicates the upper order bit among 2 bits of ABS data to be transferred from the servo amplifier to the programmable controller system in the ABS transfer mode. The ABSB1 turns ON when this signal occurs.
ABS Transmission data ready	ABST	25	This indicates the ABS transmission data preparation completed in the ABS transfer mode. When the preparation is completed, the ABST is turned ON.

^{*} When "use in the absolute position detection system" is selected in the parameter No. PA03, the pin 17 is the ABS transfer mode (ABSM), and the pin 18 is the ABS request (ABSR). The signals do not return to the original signal even after the data transfer is completed.

For details on signals of the pin 17 and 18 when the ABS transfer mode is off and I/O interface, refer to the manual of the servo amplifier (MR-J3-A).

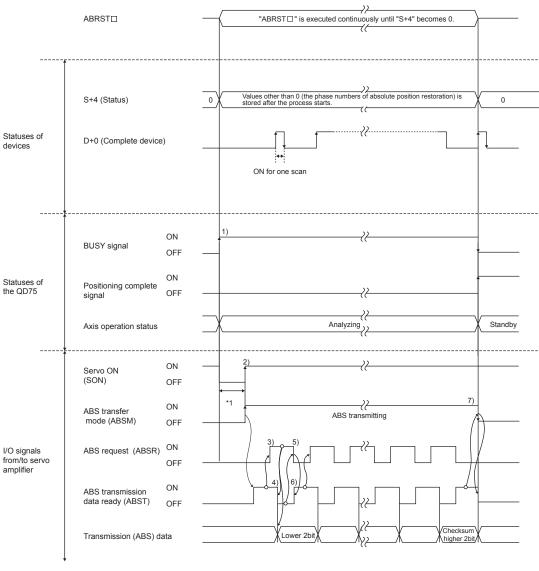

The following drawing shows an operation when data is transferred to the servo amplifier.

*1: Approx. 60ms + scan time

Fig. 12.40 Signal state during the absolute position detection

- The BUSY signal is turned ON and the axis operation status is set to "Analyzing" by the dedicated instruction "ABRST□".
 At this time, the signal is controlled to turn OFF the servo amplifier.
 The servo is powered OFF in 60ms + scan time.
- 2) When the servo is turned ON, the ABS transfer mode is simultaneously turned ON. After receiving the ABS transfer mode, detecting the absolute position and calculating the absolute position, the servo amplifier will turn ON the ABS transmission data ready (ABST) and answer back to QD75 notifying that the send data is ready.
- After recognizing that the ABS transmission data ready (ABST) turned ON, QD75 turns ON the ABS request (ABSR).

- 4) The servo amplifier outputs the ABS lower 2 bits and ABS transmission data ready (ABST) OFF by the ABS request (ABSR).
- 5) After recognizing that the ABS transmission data ready (ABST) turned OFF (the ABS2bit data is output), QD75 reads the lower 2bits of ABS and turns OFF the ABS request (ABSR).
- 6) The servo amplifier turns ON the ABS transmission data ready (ABST) and prepares for the next transmission. After that, procedures 3) to 6) are repeated until the data corresponding to 32bits and the checksum corresponding to 6bits are sent.
- 7) After the sum check, the QD75 turns OFF the ABS transfer mode (ABSM). If the ABS transfer mode (ABSM) is turned OFF during the data transmission, the ABS transfer mode will be interrupted.

[4] Control precautions

- (1) When an absolute position detection system is constructed, absolute position restoration must be made at least once after power supply on or resetting. Also, the servo amplifier does not switch on unless the absolute position restoration is completed.
- (2) For use of positioning in an absolute position detection system, the following controls cannot be carried out:
 - Limitless-feed control which exercises control only in the fixed direction, e.g. turntable
 - Control where the movement amount from the OP address exceeds the range of the following conditions 1 and 2

When performing positioning in an absolute position detection system, use it in the range which satisfies Conditions 1 and 2 given below.

In the range which does not satisfy Conditions 1 and 2, positioning cannot be used in the absolute position detection system since the normal current value cannot be provided during absolute position restoration.

Condition 1. Number of output pulses

a) Indicates the number of pulses that may be output to a servo amplifier when an axis is to be positioned from the OP in an absolute position detection system. In the absolute position detection system, pulses within the range of the following expression can be output to the servo amplifier.

[-32768×(number of feedback pulses)]<[number of output pulses]<[32768×(number of feedback pulses)-1]

b) Pulses are positive in the address increasing direction from the OP, and negative in the address decreasing direction from the OP.

Unit: μm

OP
0 214748364.7

Negative pulse outputs

Positive pulse outputs

- c) The number of output pulses varies with the number of feedback pulses as indicated below:
 - When the number of feedback pulses is 8192 (pulse):
 -268435456 (pulse) to 268435455 (pulse)
 - When the number of feedback pulses is 16384 (pulse): -536870912 (pulse) to 536870911 (pulse)

When the electronic gear of the servo amplifier is used, the electronic gear ratio must be considered. The actual range of the number of output pulses is the value of the range of output pulses above multiplied by the inverse number of the electronic gear ratio.

Condition 2. Positioning address

- a) The following positioning addresses can be specified on the QD75:
 - When the unit is mm: -214748364.8 (μm) to 214748364.7 (μm)
 - When the unit is inch: -21474.83648 (inch) to 21474.83647 (inch)
 - When the unit is pulse: -2147483648 (pulse) to 2147483647 (pulse)
 - When the unit is degree: 0° to 359.99999°

[Calculation of positioning address and concept of absolute position detection system]

Use the following expression to calculate the positioning address.

(Positioning address) = (movement amount per pulse)×(number of output pulses) + (OP address)..... Expression 1

1. Concept for the unit of mm, inch or pulse

The range which satisfies Conditions 1 and 2 can be used as the positioning address of the absolute position detection system.

The range which does not satisfy Conditions 1 and 2 cannot be used as the positioning address of the absolute position detection system.

The concepts of the positioning addresses in mm, inch and pulse are identical, the following examples provide those of the mm unit.

Example 1.

- (1) There are the following conditions to calculate the positioning address:
 - Movement amount per pulse: 0.1 (μm)
 - OP address: 0.0 (μm)
 - Feedback pulses = 8192 (pulse)
- (2) Calculate the upper/lower limit values of the positioning address which can be specified from the output pulse count using range in Condition 1 and the positioning address calculation expression (Expression 1).
 - Lower limit value of positioning address (the number of negative pulses in Condition 1 is used for calculation)


```
(Positioning address) = (Movement amount per pulse)  \times \text{ (number of output pulses) + (OP address)}  = 0.1 \times (-268435456) + 0.0 = -26843545.6(\mu m)
```

 Upper limit value of positioning address (the number of positive pulses in Condition 1 is used for calculation)

```
(Positioning address) = (Movement amount per pulse) \times (number of output pulses) + (OP address) = 0.1 \times (268435456) + 0.0 = 26843545.5 \text{ (}\mu\text{m}\text{)}
```

(3) The upper/lower limit values of the positioning address calculated are within the range of Condition 2.

Hence, the positioning range [-26843545.6 (μ m) to 26843545.5 (μ m)] calculated in Condition 1 can be used in the absolute position detection system. Positioning outside of the range -26843545.6 (μ m) to 26843545.5 (μ m) cannot be used in the absolute position detection system.

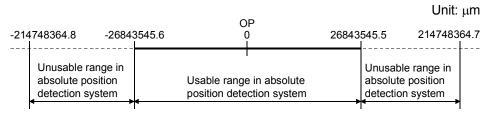


Example 2.

- (1) Using Expression 1, calculate the positioning address which can be specified in the system where the OP address in Example 1 is 214740000.0 (μm).
 - Lower limit value of positioning address (Positioning address) =0.1 \times (-268435456) + 214740000.0 =187896454.4 (μ m)
 - Upper limit value of positioning address
 (Positioning address) =0.1×268435455+ 214740000.0
 =241583545.5 (µm)
- (2) Since the lower limit value of the positioning address calculated is within the range of Condition 2, the calculated address 187896454.4 (μ m) is the lower limit for positioning in the absolute position detection system.

Since the upper limit of the positioning address calculated is outside of the range of Condition 2, the upper limit value 214748364.7 (μ m) is the upper limit for positioning in the absolute position detection system.

In the absolute position detection system, use the positioning address within the range $187896454.4 \, (\mu m)$ to $214748364.7 \, (\mu m)$.

Positioning in excess of 187896454.4 (μm) cannot be used in the absolute position detection system.

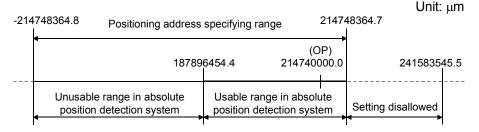

Example 3.

- (1) There are the following conditions to calculate the positioning address:
 - Movement amount per pulse: 0.9 (μm)
 - OP address: 0.0 (μm)
 - Feedback pulses = 8192 (pulse)
- (2) Calculate the positioning address from the output pulse count using range in Condition 1 and the positioning address calculation expression (Expression 1).
 - Lower limit value of positioning address (the number of negative pulses in Condition 1 is used for calculation)

(Positioning address) = (Movement amount per pulse) \times (number of output pulses) + (OP address) = 0.9 \times (-268435456) + 0.0 = -241591910.4 (µm)

 Upper limit value of positioning address (the number of positive pulses in Condition 1 is used for calculation)


(Positioning address) = (Movement amount per pulse)

× (number of output pulses) + (OP address)

 $= 0.9 \times 268435455 + 0.0$


 $= 241591909.5 (\mu m)$

(3) Since the upper/lower limit values of the positioning address calculated are outside of the range of Condition 2, use the positioning address within the positioning range of Condition 2 (-214748364.8(μm) to 214748364.7(μm)).

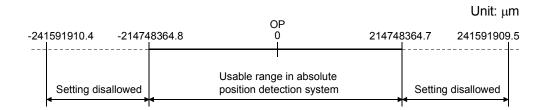

2. Concept for the unit of degree

- The positioning address is within the range 0° to 359.99999° at the position to which a machine OPR was made.
 When the OP position is not 0°, the range is also 0° to 359.99999°.
- For positioning in the same direction, control from maximum to minimum (for address increase: 359.99999° to 0°/for address decrease: 0° to 359.99999°) cannot be exercised. (See below)

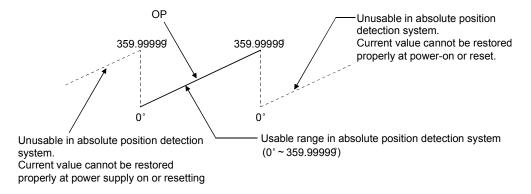

 When positioning is to be used in the absolute position detection system, set the upper/lower limit values of the software stroke limit within the range 0° to 359.99999°.

12.7 Other functions

Other functions include the "step function", "skip function", "M code output function", "teaching function", "command in-position function", "acceleration/deceleration processing function", "pre-reading start function", "deceleration start flag function" and "stop command processing for deceleration stop function". Each function is executed by parameter setting or sequence program creation and writing.

12.7.1 Step function

The "step function" is used to confirm each operation of the positioning control one by one.

It is used in debugging work for major positioning control, etc.

A positioning operation in which a "step function" is used is called a "step operation". In step operations, the timing for stopping the control can be set. (This is called the "step mode".) Control stopped by a step operation can be continued by setting "step continue" (to continue the control)" in the "step start information".

The details shown below explain about the "step function".

- [1] Relation between the step function and various controls
- [2] Step mode
- [3] Step start information
- [4] Using the step operation
- [5] Control details
- [6] Control precautions
- [7] Setting method

[1] Relation between the step function and various controls The following table shows the relation between the "step function" and various controls.

		Control type	Step function	Step applicability
OPR control	Machine	OPR control	×	Stop operation not possible
OPR COILLOI	Fast OP	R control	×	Step operation not possible
		1-axis linear control	0	
		2- to 4-axis linear interpolation control	0	
	Desition	1-axis fixed-feed control	0	
	Position control	2- to 4-axis fixed-feed control (interpolation)	0	Step operation possible
Major		2-axis circular interpolation control	0	
positioning		3-axis helical interpolation control	0	
control	1- to 4-a	xis Speed control	×	Step operation not possible
		osition switching control speed switching control	0	Step operation possible
	Other	Current value changing	0	
	control	JUMP instruction, NOP instruction, LOOP to LEND	×	Step operation not possible
Manual	JOG operation, Inching operation		×	Stop operation not possible
control	Manual	oulse generator operation	×	Step operation not possible

 \bigcirc : Set when required. \times : Setting not possible

[2] Step mode

In step operations, the timing for stopping the control can be set. This is called the "step mode". (The "step mode" is set in the control data " Cd.34 Step mode".)

The following shows the two types of "step mode" functions.

Deceleration unit step

The operation stops at positioning data requiring automatic deceleration. (A normal operation will be carried out until the positioning data requiring automatic deceleration is found. Once found, that positioning data will be executed, and the operation will then automatically decelerate and stop.)

(2) Data No. unit step

The operation automatically decelerates and stops for each positioning data. (Even in continuous path control, an automatic deceleration and stop will be forcibly carried out.)

[3] Step start information


Control stopped by a step operation can be continued by setting "step continue" (to continue the control) in the "step start information". (The "step start information" is set in the control data " Cd.36 Step start information".) The following table shows the results of starts using the "step start information" during step operation.

Stop status in the step operation	Md.26 Axis operation status	Cd.36 Step start information	Step start results		
1 step of positioning stopped normally Step standby		1: Step continue	The next positioning data is executed.		

The warnings "Step not possible" (warning code: 511) will occur and the step operation will not be continued if the " Md.26 Axis operation status" is other than "Step standby" or the step valid flag is OFF when step start information is set.

[4] Using the step operation

The following shows the procedure for checking positioning data using the step operation.

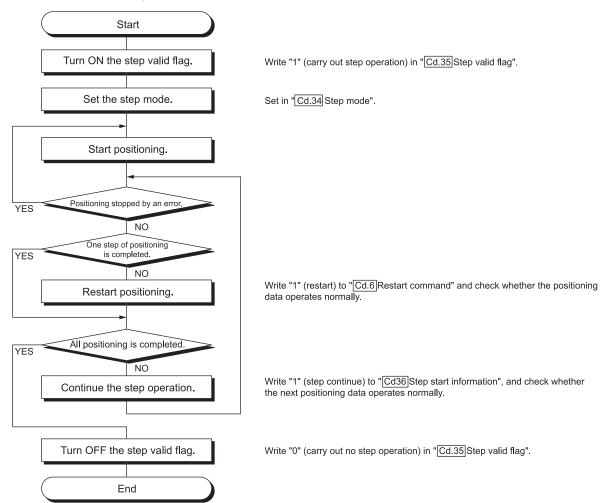

[5] Control details

(1) The following drawing shows a step operation during a "deceleration unit step".

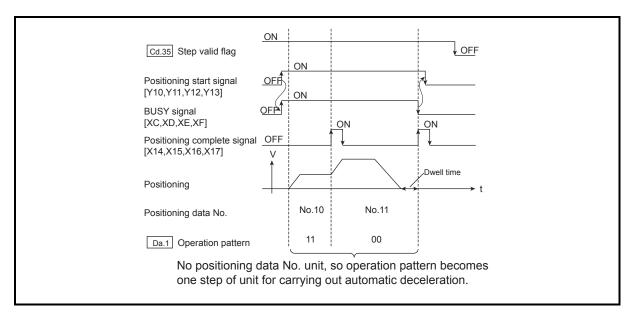


Fig. 12.41 Operation during step execution by deceleration unit step

(2) The following drawing shows a step operation during a "data No. unit step".

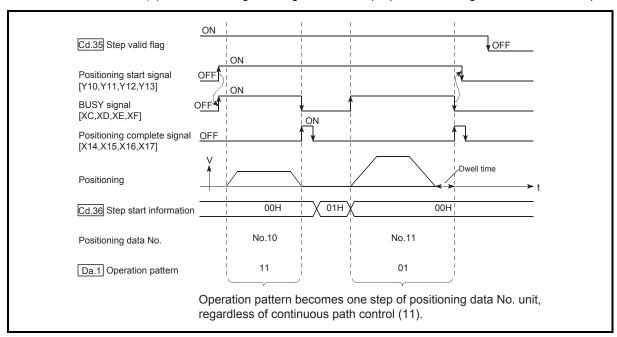


Fig. 12.42 Operation during step execution positioning data No. unit step

[6] Control precautions

- (1) When step operation is carried out using interpolation control positioning data, the step function settings are carried out for the reference axis.
- (2) When the step valid flag is ON, the step operation will start from the beginning if the positioning start signal is turned ON while " Md.26 Axis operation status" is "Step standby". (The step operation will be carried out from the positioning data set in " Cd.3 Positioning start No.".)

[7] Setting method

To use the "step function", write the data shown in the following table to the QD75 using the sequence program. Refer to section [4] "Using the step operation" for the timing of the settings.

The set details are validated when written to the QD75.

		Cotting		Buffe	r mem	ory ad	ldress
Setting item		Setting value	Selling details I As		Axis 2	Axis 3	Axis 4
Cd.34	Step mode	\rightarrow	Set "0: Deceleration unit step" or "1: Data No. unit step".	1544	1644	1744	1844
Cd.35	Step valid flag	1	Set "1: Carry out step operation".	1545	1645	1745	1845
1 (.0.30)	Step start information	\rightarrow	Set "1: Step continue", depending on the stop status.	1546	1646	1746	1846

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

12.7.2 Skip function

The "skip function" is used to stop (deceleration stop) the control of the positioning data being executed at the time of the skip signal input, and execute the next positioning data.

A skip is executed by a skip command (Cd.37 Skip command) or external command signal.

The "skip function" can be used during control in which positioning data is used.

The details shown below explain about the "skip function".

- [1] Control details
- [2] Control precautions
- [3] Setting the skip function from the CPU module
- [4] Setting the skip function using an external command signal

[1] Control details

The following drawing shows the skip function operation.

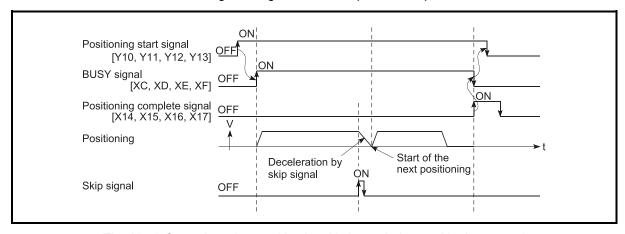


Fig. 12.43 Operation when a skip signal is input during positioning control

[2] Control precautions

- (1) If the skip signal is turned ON at the last of an operation, a deceleration stop will occur and the operation will be terminated.
- (2) When a control is skipped (when the skip signal is turned ON during a control), the positioning complete signals (X14, X15, X16, X17) will not turn ON.
- (3) When the skip signal is turned ON during the dwell time, the remaining dwell time will be ignored, and the next positioning data will be executed.
- (4) When a control is skipped during interpolation control, the reference axis skip signal is turned ON. When the reference axis skip signal is turned ON, a deceleration stop will be carried out for every axis, and the next reference axis positioning data will be executed.
- (5) The M code ON signals (X4, X5, X6, X7) will not turn ON when the M code output is set to the AFTER mode (when "1: AFTER mode" is set in "Pr.18 M code ON signal output timing").
 (In this case, the M code will not be stored in "Md.25 Valid M code".)
- (6) The skip cannot be carried out by the speed control and position-speed switching control.
- (7) If the skip signal is turned ON with the M code signal turned ON, the transition to the next data is not carried out until the M code signal is turned OFF.


[3] Setting the skip function from the CPU module

The following shows the settings and sequence program example for skipping the control being executed in axis 1 with a command from the CPU module.

 Set the following data.
 (The setting is carried out using the sequence program shown below in section (2)).

	Cotting		Buffe	r mem	ory ad	dress
Setting item	Setting value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Cd.37 Skip command	1	Set "1: Skip request".	1547	1647	1747	1847

- * Refer to Section 5.7 "List of control data" for details on the setting details.
 - (2) Add the following sequence program to the control program, and write it to the CPU module.
 - When the "skip command" is input, the value "1" (skip request) set in "Cd.37
 Skip command" is written to the QD75 buffer memory (1547).

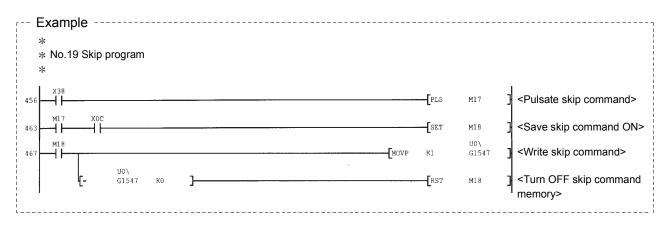


- [4] Setting the skip function using an external command signal

 The skip function can also be executed using an "external command signal".

 The following shows the settings and sequence program example for skipping the control being executed in axis 1 using an "external command signal".
 - Set the following data to execute the skip function using an external command signal.
 (The setting is carried out using the sequence program shown below in section (2)).

	I Setting I	Buffe	r mem	ory ad	ldress		
Setting item		value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Pr 471	External command function selection	3	Set "3: Skip request".	62	212	362	512
ואחנו	External command valid	1	Set "1: Validate external command".	1505	1605	1705	1805

- * Refer to Section 5.7 "List of control data" for details on the setting details.
 - (2) Add the following sequence program to the control program, and write it to the CPU module.

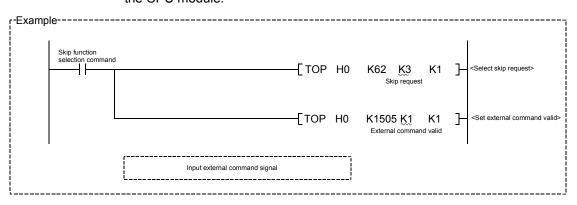

12.7.3 M code output function

The "M code output function" is used to command sub work (clamping, drill rotation, tool replacement, etc.) related to the positioning data being executed.

When the M code ON signal (X4, X5, X6, X7) is turned ON during positioning execution, a No. called the M code is stored in " Md.25 Valid M code".

These " Md.25 Valid M code" are read from the CPU module, and used to command auxiliary work. M codes can be set for each positioning data. (Set in setting item " Da.10 M code" of the positioning data.)

The timing for outputting (storing) the M codes can also be set in the "M code output function".

The details shown below explain about the "M code output function".

- [1] M code ON signal output timing
- [2] M code OFF request
- [3] Control precautions
- [4] Setting method
- [5] Reading M codes

[1] M code ON signal output timing

The timing for outputting (storing) the M codes can be set in the "M code output function". (The M code is stored in " Md.25 Valid M code" when the M code ON signal is turned ON.)

The following shows the two types of timing for outputting M codes: the "WITH" mode and the "AFTER" mode.

(1) WITH mode

The M code ON signal (X4, X5, X6, X7) is turned ON at the positioning start, and the M code is stored in " Md.25 Valid M code".

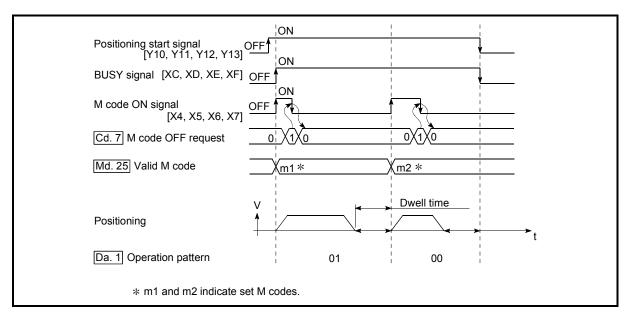


Fig. 12.44 M code ON/OFF timing (WITH mode)

(2) AFTER mode

The M code ON signal (X4, X5, X6, X7) is turned ON at the positioning completion, and the M code is stored in " Md.25 Valid M code".

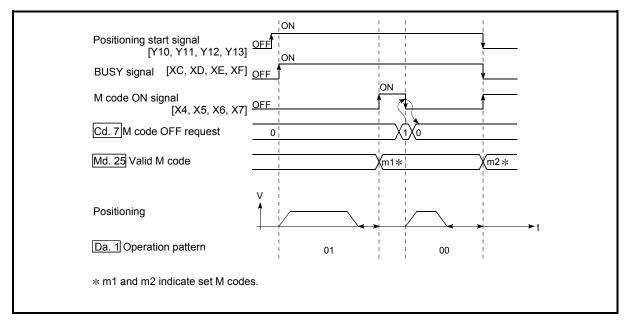


Fig. 12.45 M code ON/OFF timing (AFTER mode)

[2] M code OFF request

When the M code ON signal (X4, X5, X6, X7) is ON, it must be turned OFF by the sequence program.

To turn OFF the M code ON signal, set "1" (turn OFF the M code signal) in " Cd.7 M code OFF request".

		Cotting		Buffe	r mem	ory ad	dress
	Setting item	Setting value	value Setting details A	Axis	Axis	Axis	Axis
		value		1	2	3	4
	Cd.7 M code OFF request	1	Set "1: Turn OFF the M code ON signal".	1504	1604	1704	1804

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

The next positioning data will be processed as follows if the M code ON signal is not turned OFF. (The processing differs according to the " Da.1 Operation pattern".)

		Da.1 Operation pattern	Processing
C			The next positioning data will not be executed until the M code ON
C)1	Continuous positioning control	signal is turned OFF.
1	11		The next positioning data will be executed. If the M code is set to the next positioning data, a warning "M code ON signal ON start" (warning code: 503) will occur. (Refer to Fig. 12.46.)

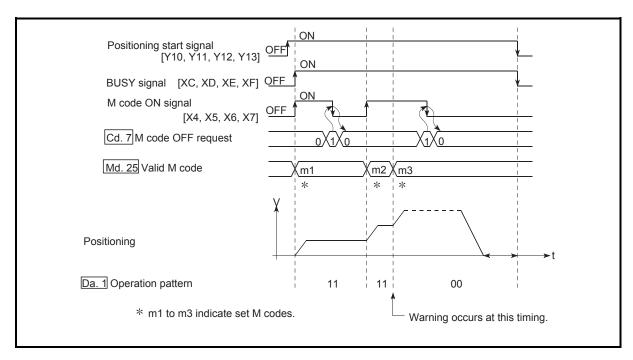


Fig. 12.46 Warning due to an M code ON signal during continuous path control

POINT

If the M code output function is not required, set a "0" in setting item " Da.10 M code" of the positioning data.

[3] Control precautions

- (1) During interpolation control, the reference axis M code ON signal is turned ON.
- (2) The M code ON signal will not turn ON if "0" is set in " Da.10 M code". (The M code will not be output, and the previously output value will be held in " Md.25 Valid M code".)
- (3) If the M code ON signal is ON at the positioning start, an error "M code ON signal start" (error code: 536) will occur, and the positioning will not start.
- (4) If the PLC READY signal (Y0) is turned OFF, the M code ON signal will turn OFF and "0" will be stored in " Md.25 Valid M code".
- (5) If the positioning operation time is short during continuous path control, there will not be enough time to turn OFF the M code ON signal, and a warning "M code ON signal ON" (warning code: 503) may occur. In this case, set a "0" in the " Da.10 M code" of that section's positioning data.
- (6) In the AFTER mode during speed control, the M code is not output and the M code ON signal does not turn ON.
- (7) If current value changing where "9003" has been set to " Cd.3 Positioning start No." is performed, the M code output function is made invalid.

[4] Setting method

timing".

The following shows the settings to use the "M code output function".

(1) To specify the M code ON signal output timing for each positioning data
Use "Da.27 M code ON signal output timing".

The following shows the settings to use "Da.27 M code ON signal output

- Set the M code No. in the positioning data "Da.10 M code".
- Set the timing to output the M code ON signal [X4, X5, X6, X7] in the positioning data "Da.27" M code ON signal output timing".
- (2) To set the same M code ON signal output timing for all positioning data Setting "Pr.18 M code ON signal output timing" enables batch specification of M code ON signal output timing for each positioning data. Set 0 in "Da.27 M code ON signal output timing" when using "Pr.18 M code ON signal output timing". When a value other than 0 is set, "Da.27 M code ON signal output timing" will be valid. (The setting in "Pr.18 M code ON signal output timing" becomes valid on the rising edge (OFF to ON) of the PLC READY signal [Y0].)

The following shows the settings to use "Pr.18 M code ON signal output timing".

- Set the M code No. in the positioning data "Da.10" M code".
- Set "0: Use the set value in "Pr.18 M code ON signal output timing"."
 (initial value) in the positioning data "Da.27 M code ON signal output timing".
- Set the timing to output the M code ON signal [X4, X5, X6, X7] in the detailed parameter "Pr.18 M code ON signal output timing".

Setting item		Setting	Setting details	Buffer memory address				
		value		Axis 1	Axis 2	Axis 3	Axis 4	
Pr.18	M code ON signal output timing		Set the timing to output the M code ON signal. 0: WITH mode 1: AFTER mode	27	177	327	477	
Da.27	M code ON signal output timing		Set the M code ON signal output timing for each positioning data. 0: Use the set value in "Pr.18 M code ON signal output timing". 1: WITH mode 2: AFTER mode	2003 + N*1 (b0 to b1)	8003 + N*1 (b0 to b1)	+ N*1	20003 + N*1 (b0 to b1)	

^{*1} N indicates the offset address of each positioning data.

 $N = ((Positioning data No.) - 1) \times 10$

^{*} Refer to Section 5.2 "List of parameters" for the information on detail settings.

[5] Reading M codes


"M codes" are stored in the following buffer memory when the M code ON signal turns ON.

	Monitor value	Storage details	Buffer memory address				
Monitor item			Axis 1	Axis 2	Axis 3	Axis 4	
Md.25 Valid M code	\rightarrow	The M code No. (Da.10 M code) set in the positioning data is stored.	808	908	1008	1108	

^{*} Refer to Section 5.6 "List of monitor data" for information on the storage details.

The following shows a sequence program example for reading the " Md.25 Valid M code" to the CPU module data register (D110). (The read value is used to command the sub work.)

Read M codes not as "rising edge commands", but as "ON execution commands".

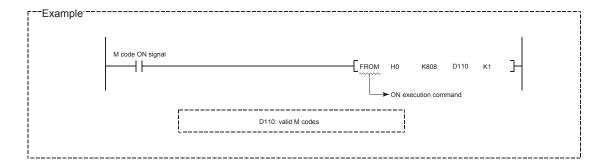

12.7.4 Teaching function

The "teaching function" is used to set addresses aligned using the manual control (JOG operation, inching operation, and manual pulse generator operation) in the positioning data addresses (" Da.6 Positioning address/movement amount", " Da.7 Arc address").

The details shown below explain about the "teaching function".

- [1] Control details
- [2] Control precautions
- [3] Data used in teaching
- [4] Teaching procedure
- [5] Teaching program example


[1] Control details

Teaching timing

Teaching is executed using the sequence program when the BUSY signal (XC, XD, XE, XF) is OFF. (During manual control, teaching can be carried out as long as the axis is not BUSY, even when an error or warning has occurred.)

(2) Addresses for which teaching is possible

The addresses for which teaching is possible are "current feed values" (Md.20 Current feed value) having the OP as a reference. The settings of the "movement amount" used in incremental system positioning cannot be used. In the teaching function, these "current feed values" are set in the "Da.6 Positioning address/movement amount" or "Da.7 Arc address".

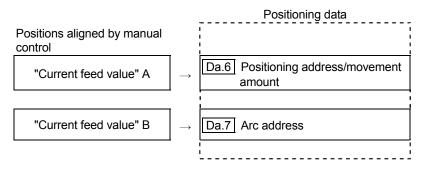

(3) Dedicated instructions "ZP.TEACH 1, ZP.TEACH 2, ZP.TEACH 3, ZP.TEACH 4, ZP.PFWRT"

When the dedicated instructions "ZP.TEACH 1, ZP.TEACH 2, ZP.TEACH 3, ZP.TEACH 4, ZP.PFWRT" are used to execute the teaching function, the programming becomes easier. Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details.

[2] Control precautions

- (1) Before teaching, a "machine OPR" must be carried out to establish the OP. (When a current value changing, etc., is carried out, " Md.20 Current feed value" may not show absolute addresses having the OP as a reference.)
- (2) Teaching cannot be carried out for positions to which movement cannot be executed by manual control (positions to which the workpiece cannot physically move). (During center point designation circular interpolation control, etc., teaching of " Da.7 Arc address" cannot be carried out if the center point of the arc is not within the moveable range of the workpiece.)
- (3) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible (assured value is up to 100,000 times). If the error "Flash ROM write number error" (error code: 805) occurs when writing to the flash ROM has been completed, check whether or not the program is created so as to write continuously to the flash ROM.

[3] Data used in teaching

The following control data is used in teaching.


			Setting details	Buffer memory address				
Setting item		Setting value		Axis 1	Axis 2	Axis 3	Axis 4	
Cd.1	Flash ROM write request	1	Write the set details to the flash ROM (backup the changed data).	1900				
Cd.38	Teaching data selection	\rightarrow	Sets to which "current feed value" is written. 0: Written to " Da.6 Positioning address/movement amount". 1: Written to " Da.7 Arc address".	1548	1648	1748	1848	
Cd.39	Teaching positioning data No.	\rightarrow	Designates the data to be taught. (Teaching is carried out when the setting value is 1 to 600.) When teaching has been completed, this data is cleared to zero.	1549	1649	1749	1849	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.


[4] Teaching procedure


The following shows the procedure for a teaching operation.

(1) When teaching to the " Da.6 Positioning address/movement amount" (Teaching example on axis 1)

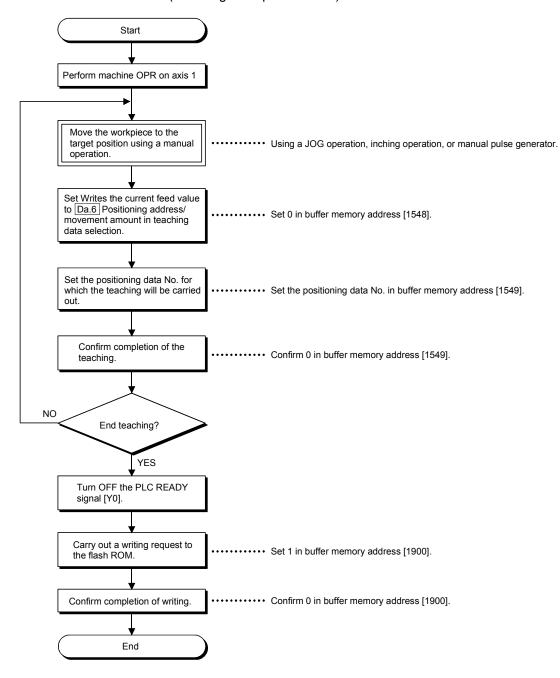


(2) When entering teaching data into " Da.7 Arc address" and then into " Da.6 Positioning address/movement amount" (Teaching example for 2-axis circular interpolation control with sub point designation on axes 1 and 2)

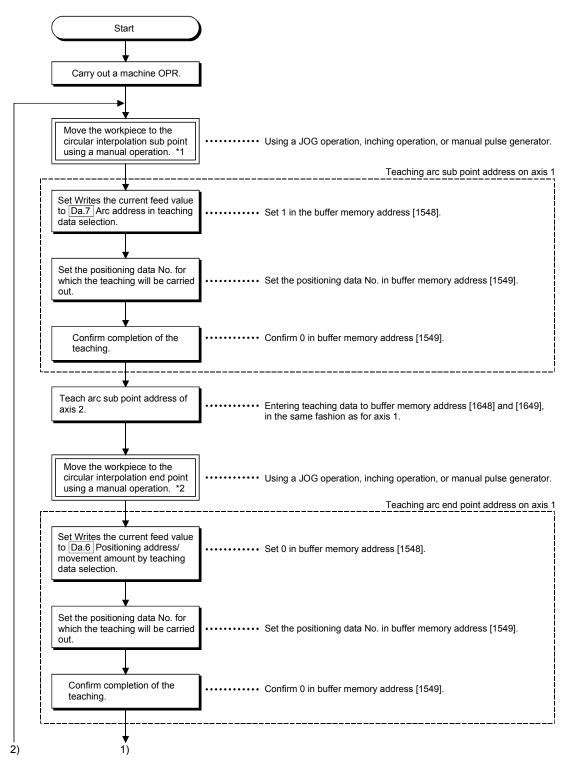

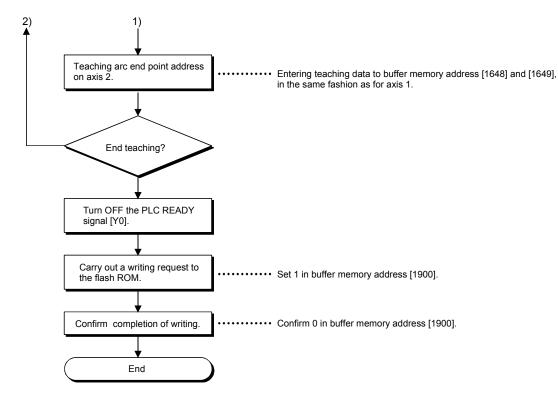

[Motion path]

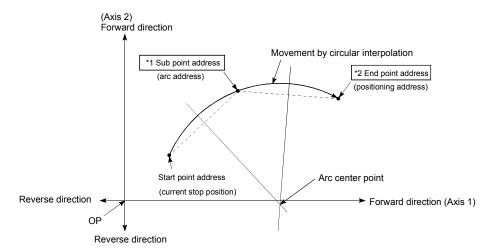

[5] Teaching program example


The following shows a sequence program example for setting (writing) the positioning data obtained with the teaching function to the QD75.

(1) Setting conditions


• When setting the current feed value as the positioning address, write it when the BUSY signal is OFF.

(2) Program example

- The following example shows a program to carry out the teaching of axis 1 by the dedicated instruction "ZP.TEACH 1".
 - 1) Move the workpiece to the target position using a JOG operation (or an inching operation, a manual pulse generator operation).

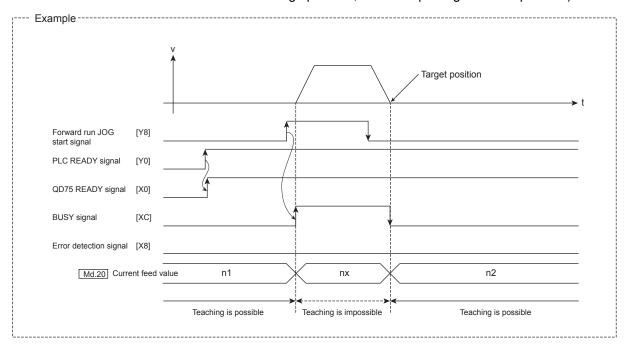

2) Carry out the teaching operation with the following program.

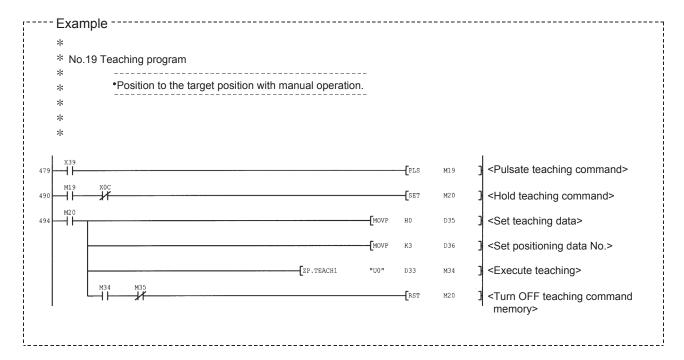

POINT

- (1) Confirm the teaching function and teaching procedure before setting the positioning data.
- (2) The positioning addresses that are written are absolute address (ABS) values.
- (3) If the positioning operation is correctly completed with the written positioning data, it is recommended that the positioning data be registered in the QD75 flash ROM.

12.7.5 Command in-position function

The "command in-position function" checks the remaining distance to the stop position during the automatic deceleration of positioning control, and set a flag to 1. This flag is called the "command in-position flag". The command in-position flag is used as a front-loading signal indicating beforehand the completion of the position control.

The details shown below explain about the "command in-position function".

- [1] Control details
- [2] Control precautions
- [3] Setting method
- [4] Confirming the command in-position flag

[1] Control details

The following shows control details of the command in-position function.

(1) When the remaining distance to the stop position during the automatic deceleration of positioning control becomes equal to or less than the value set in "Pr.16 Command in-position width", "1" is stored in the command in-position flag (Md.31 Status: b2).

(Command in-position width check)

Remaining distance ≤ " Pr.16 Command in-position width" setting value

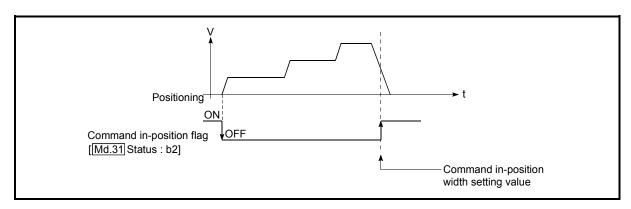


Fig. 12.47 Command in-position operation

(2) A command in-position width check is carried out every 0.9ms (QD75P□N/QD75D□N) or 1.8ms (QD75P□/QD75D□).

[2] Control precautions

- (1) A command in-position width check will not be carried out in the following cases.
 - · During speed control
 - During speed control in speed-position switching control
 - During speed control in position-speed switching control

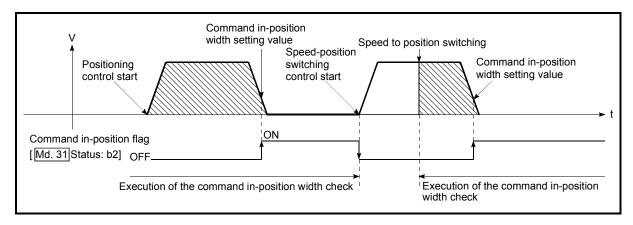


Fig. 12.48 Command in-position width check

- (2) The command in-position flag will be turned OFF in the following cases. ("0" will be stored in " Md.31 Status: b2".)
 - At the positioning control start
 - At the speed control start
 - At the speed-position switching control, position-speed switching control start
 - At the OPR control start
 - · At the JOG operation start
 - · At the inching operation start
 - When the manual pulse generator operation is enabled.
- (3) The " Pr.16 Command in-position width" and command in-position flag (Md.31 Status: b2) of the reference axis are used during interpolation control. When the " Pr.20 Interpolation speed designation method" is "Composite speed", the command in-position width check is carried out in the remaining distance on the composite axis (line/arc connecting the start point address and end point address).

[3] Setting method

To use the "command in-position function", set the required value in the parameter shown in the following table, and write it to the QD75. The set details are validated at the rising edge (OFF \rightarrow ON) of the PLC READY signal (Y0).

Setting item	Setting value	Setting details Factinitia	
Pr.16 Command inposition width		Turn ON the command in-position flag, and set the remaining distance to the stop position of the position control.	100

^{*} Refer to Section 5.2 "List of parameters" for setting details.

[4] Confirming the command in-position flag

The "command in-position flag" is stored in the following buffer memory.

	Monitor	Storage details	Buffer memory address			
Monitor item	value		Axis	Axis	Axis	Axis 4
			'		3	-
Md.31 Status	\rightarrow	The command in-position flag is stored in the "b2" position.	817	917	1017	1117

^{*} Refer to Section 5.6 "List of monitor data" for information on the storage details.

REMARK

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

12.7.6 Acceleration/deceleration processing function

The "acceleration/deceleration processing function" adjusts the acceleration/deceleration of each control to the acceleration/deceleration curve suitable for devices.

Setting the acceleration/deceleration time changes the slope of the acceleration/deceleration curve.

The following two methods can be selected for the acceleration/deceleration curve:

- Trapezoidal acceleration/deceleration
- S-curve acceleration/deceleration

The details shown below explain about the "acceleration/deceleration processing function".

- [1] "Acceleration/deceleration time 0 to 3" control details and setting
- [2] "Acceleration/deceleration method setting" control details and setting
- [1] "Acceleration/deceleration time 0 to 3" control details and setting In the QD75, four types each of acceleration time and deceleration time can be set. By using separate acceleration/deceleration times, control can be carried out with different acceleration/deceleration times for positioning control, JOG operation, OPR, etc.

Set the required values for the acceleration/deceleration time in the parameters shown in the following table, and write them to the QD75.

The set details are validated when written to the QD75.

	Setting item	Setting value	Setting details	Factory-set initial value
Pr.9	Acceleration time 0	\rightarrow		1000
Pr.25	Acceleration time 1	\rightarrow	Set the acceleration time at a value within the range of 1 to 8388608ms.	1000
Pr.26	Acceleration time 2	\rightarrow		1000
Pr.27	Acceleration time 3	\rightarrow		1000
Pr.10	Deceleration time 0	\rightarrow		1000
Pr.28	Deceleration time 1	\rightarrow	Set the deceleration time at a value within the range of 1 to 8388608ms.	1000
Pr.29	Deceleration time 2	\rightarrow		1000
Pr.30	Deceleration time 3	\rightarrow		1000

^{*} Refer to Section 5.2 "List of parameters" for setting details.

[2] "Acceleration/deceleration method setting" control details and setting

In the "acceleration/deceleration method setting", the acceleration/deceleration processing method is selected and set. The set acceleration/deceleration processing is applied to all acceleration/deceleration (except for inching operation and manual pulse generator operation).

The two types of "acceleration/deceleration method setting" are shown below.

(1) Trapezoidal acceleration/deceleration processing method
This is a method in which linear acceleration/deceleration is carried out
based on the acceleration time, deceleration time, and speed limit value set
by the user.

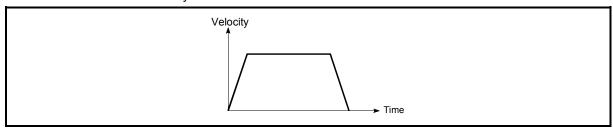


Fig. 12.49 Trapezoidal acceleration/deceleration processing method

(2) S-curve acceleration/deceleration processing method In this method, the motor burden is reduced during starting and stopping. This is a method in which acceleration/deceleration is carried out gradually, based on the acceleration time, deceleration time, speed limit value, and "Pr.35 S-curve ratio" (1 to 100%) set by the user.

When the stepping motor is used, the acceleration around the inflection point on the s shape is faster compared with the trapezoidal acceleration/deceleration. This may cause step-out. *1 In this case, adjust the acceleration/deceleration time to decrease the acceleration around the inflection point, or use a servo motor.

*1: When comparing the trapezoidal acceleration/deceleration and S-curve acceleration/deceleration processing method in the same acceleration/deceleration time.

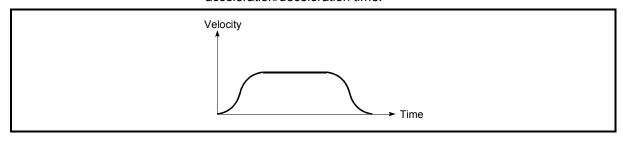


Fig. 12.50 S-curve acceleration/deceleration processing method

When a speed change request or override request is given during S-curve acceleration/deceleration processing, S-curve acceleration/deceleration processing begins at the start of a speed change request or an override request.

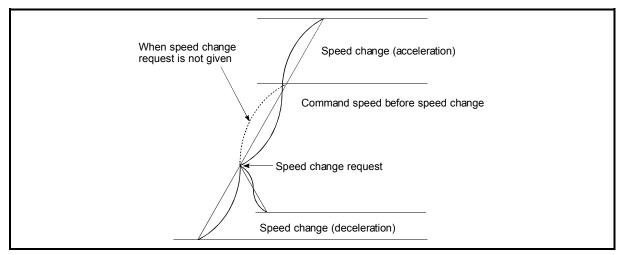


Fig. 12.51 Speed change during S-curve acceleration/deceleration processing

Set the required values for the "acceleration/deceleration method setting" in the parameters shown in the following table, and write them to the QD75. The set details are validated when written to the QD75.

S	Setting item Setting value Setting details		Factory-set initial value	
Pr.34	Acceleration/ deceleration process selection	\rightarrow	Set the acceleration/deceleration method. 0: Trapezoidal acceleration/deceleration processing 1: S-curve acceleration/deceleration processing	0
Pr.35	S-curve ratio	\rightarrow	Set the acceleration/deceleration curve when "1" is set in " Pr.34 Acceleration/deceleration processing selection".	100

^{*} Refer to Section 5.2 "List of parameters" for setting details.

REMARK

- · Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with GX
 Configurator-QP. Execution by sequence program uses many sequence programs
 and devices. The execution becomes complicated, and the scan times will
 increase.

12.7.7 Pre-reading start function

The "pre-reading start function" does not output pulses while the execution prohibition flag is ON if a positioning start request is given with the execution prohibition flag ON, and starts outputting pulses within 1.3ms (QD75P_N/QD75D_N) or 3ms (QD75P_/QD75D_) after OFF of the execution prohibition flag is detected. The positioning start request is given when the axis is in a standby status, and the execution prohibition flag is turned OFF at the axis operating timing. This shortens the virtual start time. The QD75 normally takes 1.5 to 2.0ms (QD75P_N/QD75D_N) or 6 to 7ms (QD75P_/QD75D_) from when it receives a positioning start request until it starts pulse output (start time). Some systems often need the start time to be shortened. This "pre-reading start function" can improve the tact time of the system.

The "pre-reading start function" will be explained below.

- [1] Control details
- [2] Control precautions
- [3] Program examples

[1] Control details

The pre-reading start function is performed by turning ON the positioning start signal [Y10, Y11, Y12, Y13] with the execution prohibition flag [Y14, Y15, Y16, Y17] ON, or by executing the dedicated instruction (ZP.PSTRT1, ZP.PSTRT2, ZP.PSTRT3, ZP.PSTRT4). However, if positioning is started with the execution prohibition flag ON, the positioning data is analyzed but pulse output is not provided. While the execution prohibition flag is ON, " Md.26 Axis operation status" remains unchanged from "5: Analyzing". Pulse output starts within 1.3ms (QD75P\(\text{D}\)\(\text{QD75D}\(\text{D}\)\)) or 3ms (QD75P\(\text{QD75D}\)\) after the execution prohibition flag [Y14, Y15, Y16, Y17] has turned OFF, and " Md.26 Axis operation status" changes to the status (e.g. "Position control", "Speed control") that matches the control system. (Refer to Fig. 12.52)

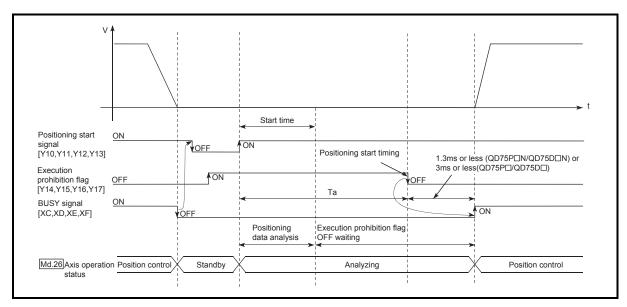


Fig. 12.52 Operations of pre-reading start function

Cutter shaft
Feed shaft
Stock

The pre-reading start function is effective for the system as shown below.

Fig. 12.53 System example using pre-reading start function

Fig. 12.53 shows a system example which repeats:

- 1) Feeding a stock with a feed shaft; and
- 2) Cutting it with a cutter

to cut the stock to fixed size. The operations of the feed shaft and cutter shaft are represented as shown in Fig. 12.54.

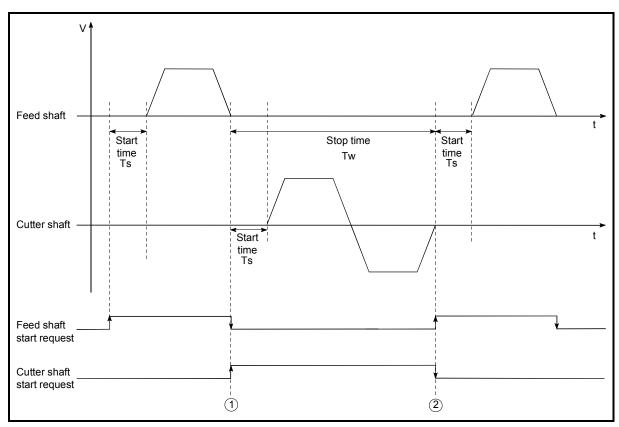


Fig. 12.54 Operation timings of system example


The cutter shaft starts from the moment the feed shaft has completed feeding the stock "①", and the feed shaft starts from the moment the cutter shaft has returned to the standby position "②". Actually, however, there is a delay of start time Ts (1.5 to 2.0ms (QD75P \square N/QD75D \square N) or 6 to 7ms (QD75P \square /QD75D \square)) from when the QD75 receives a start request until it outputs pulses. The system's tact time can be reduced by the shortening of this delay with the Pre-reading start function.

In Fig. 12.54, the feed shaft stands by during the stop time Tw. Hence, pre-reading of the next data starts during the stop time Tw. If Tw is a certain period of time, the analysis of the next data is completed during that period, and the system is placed in an execution prohibition flag OFF waiting status. Therefore, replacing the positioning start timing at ② with the execution prohibition flag OFF allows the time from when the axis operation request turns ON until pulse output starts to be reduced to within 1.3ms (QD75P\(\text{QD75D}\(\text{N}\))QD75D\(\text{N}\)) or 3ms (QD75P\(\text{QD75D}\(\text{D}\)) in the sequence program. (Refer to Fig. 12.52.)

[2] Control precautions

- (1) The time required to analyze the positioning data is up to 7ms.
- (2) After positioning data analysis, the system is put in an execution prohibition flag OFF waiting status. Any change made to the positioning data in the execution prohibition flag OFF waiting status is not reflected on the positioning data. Change the positioning data before turning ON the positioning start signal.
- (3) The pre-reading start function is invalid if the execution prohibition flag is turned OFF between when the positioning start signal has turned ON and when positioning data analysis is completed (Ta<start time, Ta: Refer to Fig. 12.52).
- (4) The data No. which can be executed positioning start using "Cd.3" Positioning start No." with the pre-reading start function are No. 1 to 600 only. Performing the pre-reading start function at the setting of No. 7000 to 7004 or 9001 to 9004 will result in an error "Outside start No. range" (error code: 543).
- (5) Always turn ON the execution prohibition flag at the same time or before turning ON the positioning start signal. Pre-reading may not be started if the execution prohibition flag is turned ON during Ta after the positioning start signal is turned ON. The pre-reading start function is invalid if the execution prohibition flag is turned ON after positioning start (pulse output) with the execution prohibition flag OFF. (It is made valid at the next positioning start.)

[3] Program examples

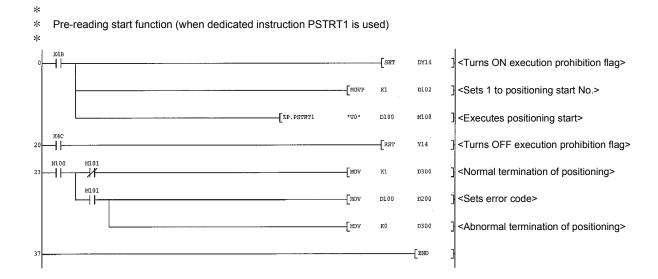

12.7.8 Deceleration start flag function

The "deceleration start flag function" turns ON the flag when the constant speed status or acceleration status switches to the deceleration status during position control whose operation pattern is "Positioning complete". This function can be used as a signal to start the operation to be performed by other equipment at each end of position control or to perform preparatory operation, etc. for the next position control.

For the "deceleration start flag function", the following will be explained.

- [1] Control details
- [2] Control precautions
- [3] Setting method
- [4] Checking of deceleration start flag

[1] Control details

When deceleration for a stop is started in the position control whose operation pattern is "Positioning complete", "1" is stored into " Md.48 Deceleration start flag". When the next operation start is made or the manual pulse generator operation enable status is gained, "0" is stored. (Refer to Fig. 12.55.)

(1) Start made with positioning data No. specified

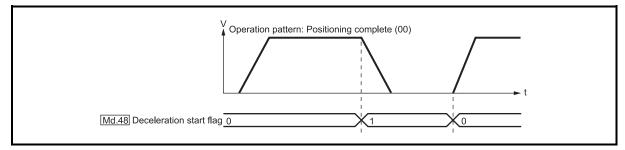


Fig. 12.55 Operation of deceleration start flag

(2) Block start

At a block start, this function is valid for only the position control whose operation pattern is "Positioning complete" at the point whose shape has been set to "End". (Refer to Fig. 12.56.)

The following table indicates the operation of the deceleration start flag in the case of the following block start data and positioning data.

Block start data	Da.11 Shape	Da.12 Start data No.	Da.13 Special start instruction
1st point	1: Continue	1	0: Block start
2nd point	1: Continue	3	0: Block start
3rd point	0: End	4	0: Block start
•			
•			

Positioning Data No.	Da.1 Operation pattern	
1	01: Continuous positioning contro	
2	00: Positioning complete	
3	00: Positioning complete	
4	11: Continuous path control	
5	00: Positioning complete	
•		
•		


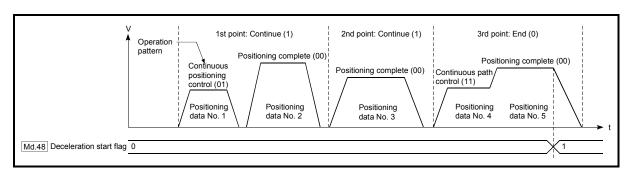



Fig. 12.56 Operation of deceleration start flag at block start

[2] Control precautions

- (1) The deceleration start flag function is valid for the control system of "1-axis linear control", "2-axis linear interpolation control", "3-axis linear interpolation control", "4-axis linear interpolation control", "speed-position switching control" or "position-speed switching control". (In the case of linear interpolation control, the function is valid for only the reference axis.) Refer to Section 3.2.4 "Combination of QD75 main functions and sub functions".
- (2) The deceleration start flag does not turn ON when the operation pattern is "continuous positioning control" or "continuous path control".
- (3) The deceleration start flag function is invalid for an OPR, JOG operation, inching operation, manual pulse generator operation, and deceleration made with a stop signal.
- (4) The deceleration start flag does not turn ON when a speed change or override is used to make deceleration.
- (5) If a target position change is made while the deceleration start flag is ON, the deceleration start flag remains ON.

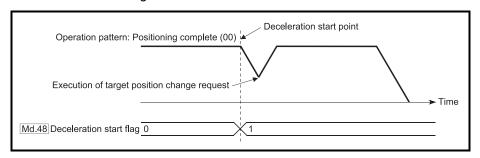

(6) When the movement direction is reversed by a target position change, the deceleration start flag turns ON.

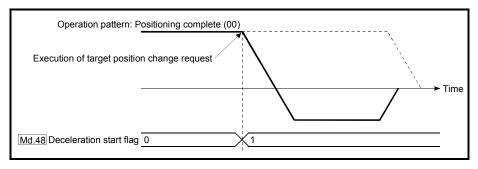

- (7) During position control of position-speed switching control, the deceleration start flag is turned ON by automatic deceleration.
 - The deceleration start flag remains ON if position control is switched to speed control by the position-speed switching signal after the deceleration start flag has turned ON.
- (8) If the condition start of a block start is not made since the condition is not satisfied, the deceleration start flag turns ON when the shape is "End".
- (9) When a continuous operation interrupt request is issued, the deceleration start flag turns ON at a start of deceleration in the positioning data being executed.

[3] Setting method

To use the "deceleration start flag function", set "1" to the following control data using a sequence program.

The set data is made valid on the rising edge (OFF to ON) of the PLC READY signal [Y0].

S	Setting item	Setting value	Setting details	Buffer memory address
(:0.41)	Deceleration start flag valid	\rightarrow	Set whether the deceleration start flag function is made valid or invalid. 0: Deceleration start flag invalid 1: Deceleration start flag valid	1905

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

[4] Checking of deceleration start flag

The "deceleration start flag" is stored into the following buffer memory addresses.

	Monitor		Buffer memory address			
Monitor item	value	Storage details	Axis 1	Axis 2	Axis 3	Axis 4
Md.48 Deceleration star	t	Status other than below Status from deceleration start to next operation start	899	999	1099	1199

st Refer to Section 5.6 "List of monitor data" for information on the storage details.

12.7.9 Stop command processing for deceleration stop function

The "stop command processing for deceleration stop function" is provided to set the deceleration curve if a stop cause occurs during deceleration stop processing (including automatic deceleration).

This function is valid for both trapezoidal and S-curve acceleration/deceleration processing methods.

(For the stop cause, refer to Section 1.2.3 Outline of stopping.)

The "stop command processing for deceleration stop function" performs the following two operations:

(1) Deceleration curve re-processing

Re-processes a deceleration curve starting from the speed at stop cause occurrence to stop, according to the preset deceleration time.

(2) Deceleration curve continuation

Continues the current deceleration curve after a stop cause has occurred.

This section explains the "stop command processing for deceleration stop function" as follows:

- [1] Control details
- [2] Control precautions
- [3] Setting method

[1] Control details

The operation of "stop command processing for deceleration stop function" is explained below.

Deceleration curve re-processing

A deceleration curve is re-processed starting from the speed at stop cause occurrence to stop, according to the preset deceleration time.

If a stop cause occurs during automatic deceleration of position control, the deceleration stop processing stops as soon as the target has reached the positioning address specified in the positioning data that is currently executed.

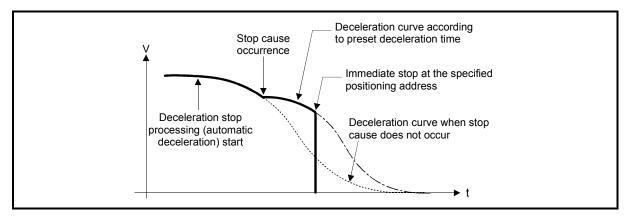


Fig. 12.57 Deceleration curve re-processing operation (for position control or S-curve acceleration/deceleration processing)

(2) Deceleration curve continuation

The current deceleration curve is continued after a stop cause has occurred.

If a stop cause occurs during automatic deceleration of position control, the deceleration stop processing may be complete before the target has reached the positioning address specified in the positioning data that is currently executed.

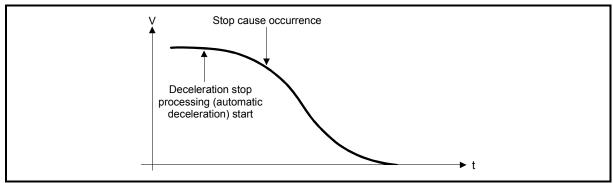


Fig. 12.58 Deceleration curve continuation operation (for position control or S-curve acceleration/deceleration processing)

[2] Control precautions

- (1) In manual control (JOG operation, inching operation, manual pulse generator operation), the stop command processing for deceleration stop function is invalid.
- (2) The stop command processing for deceleration stop function is valid when "0: Normal deceleration stop" is set in " Pr.37 Stop group 1 sudden stop selection" to " Pr.39 Stop group 3 sudden stop selection" as the stopping method for stop cause occurrence.
- (3) The stop command processing for deceleration stop function is invalid when "1: Sudden stop" is set in " Pr.37 Stop group 1 sudden stop selection" to " Pr.39 Stop group 3 sudden stop selection". (A deceleration curve is reprocessed, according to the " Pr.36 Sudden stop deceleration time" (starting from the speed at stop cause occurrence to a stop)) In the position control (including position control of speed/position changeover control or position/speed changeover control) mode, positioning may stop immediately depending on the stop cause occurrence timing and " Pr.36 Sudden stop deceleration time" setting.

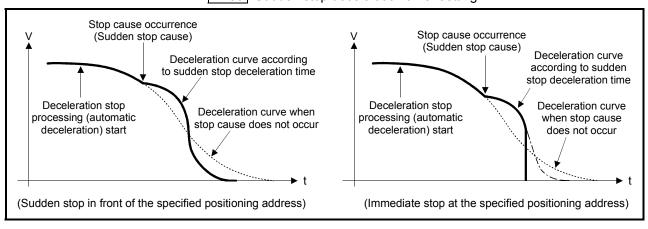


Fig. 12.59 Sudden stop operation (for position control or S-curve acceleration/deceleration processing)

[3] Setting method

To use the "stop command processing for deceleration stop function", set the following control data in a sequence program.

The set data are made valid as soon as they are written to the buffer memory. The PLC READY signal [Y0] is irrelevant.

	Setting item	Setting value	Setting details	Buffer memory address
Cd.42	Stop command processing for deceleration stop selection	\rightarrow	Set the stop command processing for deceleration stop function. 0: Deceleration curve re-processing 1: Deceleration curve continuation	1907

^{*} For details of the setting details, refer to "Section 5.7 Control data list".

CHAPTER 13 COMMON FUNCTIONS

The details and usage of the "common functions" executed according to the user's requirements are explained in this chapter.

Common functions include functions required when using the QD75, such as parameter initialization and execution data backup.

Read the setting and execution procedures for each common function indicated in this chapter thoroughly, and execute the appropriate function where required.

13.1	Outline of common functions	2
13.2	Parameter initialization function	3
13.3	Execution data backup function	5
13.4	External I/O signal logic switching function	7
	External I/O signal monitor function 13-	

13.1 Outline of common functions

"Common functions" are executed according to the user's requirements, regardless of the control system, etc. These common functions are executed by peripheral devices or using sequence programs.

The following table shows the functions included in the "common functions".

		Me	ans
Common function	Details	Sequence program	Peripheral devices
Parameter initialization function	This function returns the parameter stored in the QD75 buffer memory and flash ROM to the factory-set initial value.	0	0
Execution data backup function	This function writes the "execution data", currently being used for control, to the flash ROM.	0	0
External I/O signal logic switching function	This function switches I/O signal logic according to the equipment connected to the QD75. For the system in which drive unit READY with b-contact, upper limit switch, and lower limit switch are not used, the parameter logic setting can be controlled without wiring if it is changed to a "positive logic".	0	0
External I/O signal monitor function	This function monitors the external I/O signal monitor information in the module's detailed information which can be displayed on the system monitor of GX Developer*.	_	

^{*} For the QD75P \square /QD75D \square , this function is available in GX Developer (SW6D5C-GPPW-E or later).

For the QD75P\(\text{\text{\text{QD75D}}\)N, external I/O signals cannot be monitored on GX Developer. Use the system monitor of GX Works2.

13.2 Parameter initialization function

The "parameter initialization function" is used to return the setting data set in the QD75 buffer memory and flash ROM to their factory-set initial values.

The details shown below explain about the "parameter initialization function".

- [1] Parameter initialization means
- [2] Control details
- [3] Control Precautions
- [4] Parameter initialization method

[1] Parameter initialization means

- Initialization is executed with a sequence program.
- · Initialization is executed by peripheral device.

Refer to GX Configurator-QP Operating Manual for the execution method by peripheral device.

[2] Control details

The following table shows the setting data initialized by the "parameter initialization function".

(The data initialized are "buffer memory" and " flash ROM " setting data.)

Setting data
Basic parameters (Pr.1 to Pr.10)
Detailed parameters (Pr.11 to Pr.42, Pr.70 , Pr.150)
OPR basic parameters (Pr.43 to Pr.48)
OPR detailed parameters (Pr.49 to Pr.57)
Positioning data (No.1 to No.600)
Block start data (No.7000 to No.7004)

[3] Control Precautions

- (1) Parameter initialization is only executed when the positioning control is not carried out (when the PLC READY signal (Y0) is OFF). The warning "In PLC READY" (warning code: 111) will occur if executed when the PLC READY [Y0] is ON.
- (2) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible, and the error "Flash ROM write error" (error code: 801) will occur.
- (3) A "CPU module reset" or "CPU module power restart" must be carried out after the parameters are initialized.
- (4) If an error occurs on the parameter set in the QD75 when the PLC READY signal [Y0] is turned ON, the QD75 READY signal [X0] will not be turned ON and the control cannot be carried out.

Important

Parameter initialization takes about 10 seconds. (Up to 30 seconds are sometimes required.)

Do not turn the power ON/OFF; reset the CPU module, etc., during parameter initialization. If the power is turned OFF or the CPU module is reset to forcibly end the process, the data backed up in the flash ROM will be lost.

[4] Parameter initialization method

(1) Parameter initialization is carried out using the dedicated instruction "ZP.PINIT".

(Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details.)

(2) Parameter initialization can also be carried out by the writing of the data shown in the table below to the buffer memory using the TO instruction /intelligent function device.

The initialization of the parameter is executed at the time point the data is written to the QD75 buffer memory.

	Cotti	ina			Buffer memory address				
Setting ite	m .	Setting value	Setting details	Axis	Axis	Axis	Axis		
					2	3	4		
Cd.2 Paramete initialization	r on request 1		Set "1" (parameter initialization request).		19	01			

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

When the initialization is complete, "0" will be set in " Cd.2 Parameter initialization request" by the QD75 automatically.

13.3 Execution data backup function

When the QD75 buffer memory data is rewritten from the CPU module, "the data backed up in the QD75 flash ROM" may differ from "the data (buffer memory data) for which control is being executed".

In cases like these, the data being executed will be lost when the programmable controller power is turned OFF. (Refer to CHAPTER 7 "MEMORY CONFIGURATION AND DATA PROCESS")

In cases like these, the "execution data backup function" backs up the data being executed by writing it to the flash ROM. The data that was backed up is then written to the buffer memory when the power is turned ON next.

The details shown below explain about the "execution data backup function".

- [1] Execution data backup means
- [2] Control details
- [3] Control Precautions
- [4] Execution data backup method

[1] Execution data backup (written to flash ROM) means

- The backup is executed with a sequence program.
- The backup is executed by peripheral device.

Refer to GX Configurator-QP Operating Manual for execution data backup method by peripheral device.

[2] Control details


The following shows the data that can be written to the flash ROM using the "execution data backup function".

Buffer memory

Parameters
(Pr.1 to Pr.57, Pr.70, Pr.150)

Positioning data (No. 1 to No. 600)

Block start data (No. 7000 to 7004)

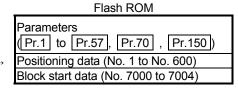

[3] Control Precautions

- (1) Parameter initialization is only executed when the positioning control is not carried out (when the PLC READY signal (Y0) is OFF). The warning "In PLC READY" (warning code: 111) will occur if executed when the PLC READY [Y0] is ON.
- (2) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible, and the error "Flash ROM write error" (error code: 801) will occur.
- (3) After one power ON/CPU module reset operation, writing to the flash ROM using a sequence program is limited to up to 25 times. If the 26th writing is executed, the error "Flash ROM write number error" (error code: 805) will occur. If this error occurs, carry out the power OFF→ON/CPU module reset operation again. Refer to Md.19 of Section 5.1.7 "Types and roles of monitor data" for details.

Important

If the power is turned OFF or the CPU module is reset to forcibly end the process, the data backed up in the flash ROM will be lost.

[4] Execution data backup method

- (1) Execution data backup (writing to the flash ROM) is carried out using the dedicated instruction "PFWRT". (Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details.)
- (2) Refer to Section 7.2 "Data transmission process" for the data transmission processing at the backup of the execution data.
- (3) Execution data backup can also be carried out by the writing of the data shown in the table below to the QD75 buffer memory using the TO instruction /intelligent function device.

The writing to the flash ROM is executed at the time point the data is written to the QD75 buffer memory.

	Sotting		Buffer memory address			
Setting item	Setting value	Setting details	Axis 1	Axis 2	Axis 3	Axis 4
Cd.1 Flash ROM write request	1	Set "1" (flash ROM write request).		19	00	

^{*} Refer to Section 5.7 "List of control data" for details on the setting details.

When the writing to the flash ROM is complete, "0" will be set in " Cd.1 Flash ROM write request" by the QD75 automatically.

13.4 External I/O signal logic switching function

This function switches the signal logic according to the external equipment connected to the QD75.

For the system in which drive unit READY with b-contact, upper limit switch, and lower limit switch are not used, the parameter logic setting can be controlled without wiring if it is changed to a "positive logic".

When the drive unit READY, upper limit switch, and lower limit switch are used, ensure to use them with b-contact.

The details shown below explain about the "external I/O signal logic switching function".

- [1] Parameter setting details
- [2] Precautions on parameter setting

[1] Parameter setting details

To use the "external I/O signal logic switching function", set the parameters shown in the following table.

Satting item			Sotting details			Buf	Buffer memory address			
	Setting item		Setting details				Axis 2	Axis 3	Axis 4	
		Selection of logic of QD75	Selection of logic of signals input from external source to QD75							
		b0	Lower limit				181			
		b1	Upper limit							
	Input signal logic selection	b2	Drive unit READY		0 31	31		331		
		b3	Stop signal	0: Negative logic, 1: Positive logic Set "0".					481	
Pr.22		b4	External command signal							
		b5	Zero signal							
		b6	Near-point dog signal							
		b7	Unused							
		b8	Manual pulse	0: Negative logic,						
			generator input	1: Positive logic						
		b9 to b15	Unused	Set "0".						
	Output signal logic	 Selection of logic of source 	Selection of logic of signals output from QD75 to external source							
Pr.23		b0	Command pulse signal	0: Negative logic, 1: Positive logic	0	32	182	332		
	selection	b1 to b3	Unused	Set "0".					482	
	COLOGIO	511050	Deviation counter							
		b4	clear signal	Negative logic, Positive logic						
		b5 to b15	Unused	Set "0".	1					

^{*} Refer to Section 5.2 "List of parameters" for the information on detail settings.


[2] Precautions on parameter setting

- (1) The external I/O signal logic switching parameters are validated when the PLC READY signal [Y0] is turned OFF to ON. (The logic is negative right after power-on.)
- (2) If each signal logic is set erroneously, the operation may not be carried out correctly.
 - Before setting, check the specifications of the equipment to be used.

13.5 External I/O signal monitor function

The "external I/O signal monitor function" monitors the module's information and external I/O signal monitor information in the module's detailed information which can be displayed on the system monitor of GX Developer*1.

The information that can be monitored are the module's information (same as the QD75 front "RUN", "ERR" LED indicators) and the following external I/O signals. (Set the logic of the external I/O signals in "Pr.22 Input signal logic selection" and "Pr.23 Output signal logic selection".)

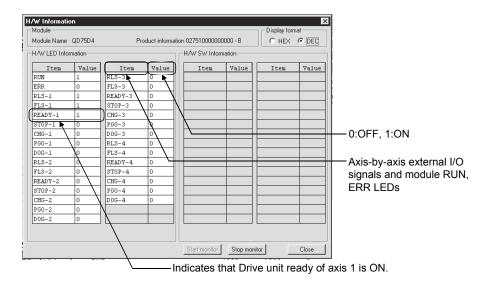

*1: For the QD75P□/QD75D□, this function is available in GX Developer (SW6D5C-GPPW-E or later). For details, refer to GX Developer Operating Manual.

For the QD75P\(\top\N/\text{QD75D}\(\text{N}\), external I/O signals cannot be monitored on GX Developer. Use the system monitor of GX Works2. For details on the system monitor of GX Works2, refer to GX Works2 Version 1 Operating Manual (Common).

CHAPTER 14 DEDICATED INSTRUCTIONS

The QD75 dedicated instructions are explained in this chapter.

These instructions are used to facilitate the programming for the use of the functions of the intelligent function module.

Using the dedicated instructions, the programming can be carried out without being aware of the QD75 buffer memory address and interlock signal.

14.1	List of dedicated instructions	. 14-	2
14.2	Interlock during dedicated instruction is executed	. 14-	2
14.3	Z.ABRST1, Z.ABRST2, Z.ABRST3, Z.ABRST4	. 14-	3
14.4	ZP.PSTRT1, ZP.PSTRT2, ZP.PSTRT3, ZP.PSTRT4	. 14-	8
14.5	ZP.TEACH1, ZP.TEACH2, ZP.TEACH3, ZP.TEACH4	14-	12
14.6	ZP.PFWRT	14-	16
14.7	ZP.PINIT	14-	20

Section 14.7

14.1 List of dedicated instructions

The dedicated instructions explained in this Chapter are listed in Table 14.1.

Dedicated Outline of functions Reference Application instruction Z.ABRST1 Z.ABRST2 This function restores the absolute position of the designated Absolute position restoration Section 14.3 axis of the QD75. Z.ABRST3 Z.ABRST4 ZP.PSTRT1 ZP.PSTRT2 This function starts the positioning control of the designated Section 14.4 Positioning start axis of the QD75. ZP.PSTRT3 ZP.PSTRT4 ZP.TEACH1 ZP.TEACH2 This function carries out teaching the designated axis of the Section 14.5 Teaching QD75. ZP.TEACH3 ZP.TEACH4 This function writes the buffer memory parameters, Writing to flash ROM ZP.PFWRT Section 14.6 positioning data and block start data to the flash ROM. This function initializes the buffer memory and flash ROM ZP.PINIT

Table 14.1 List of dedicated instructions


14.2 Interlock during dedicated instruction is executed

Parameter initialization

The absolute position restoration instruction (Z.ABRST), positioning start instruction (ZP.PSTRT) and teaching instruction (ZP.TEACH) cannot be executed simultaneously in each axis. If they are executed at the same time, the second and later instructions are ignored by an internal interlock (no error will occur).

The timing of the positioning start dedicated instruction (ZP.PSTRT) is as shown below.


setting data to the factory-set data (initial values).

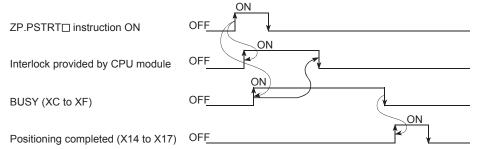

14.3 Z.ABRST1, Z.ABRST2, Z.ABRST3, Z.ABRST4

These dedicated instructions restore the absolute position of the designated axis.

Setting				l	Jsable device)			
	Internal device			Link direct device J□\□		Intelligent	Indov	Constant	
data	Bit	Word	File register	Bit	Word	function module U⊟\G⊟	Index register Zn	K, H	Others
(S)	_	0		_				_	_
(D)	0	0	_		-	-		ı	_

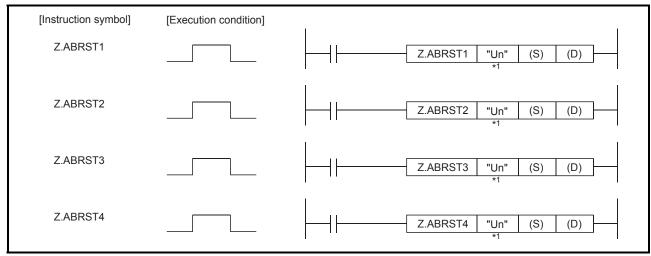

^{*1} If the originating station is a Basic model QCPU (function version B or later), universal model QCPU, or safety CPU, "" (double quotation) of the first argument can be omitted.

When Z.ABRST1, Z.ABRST2, Z.ABRST3, and Z.ABRST4 are common to each other, they are designated as " Z.ABRST□ ".

[Setting data]

Setting data	Setting details	Setting side (*1)	Data type
"I In"	QD75 head I/O number (00 to FE: High-order two digits of I/O number expressed in three digits)	User	BIN 16 bits
(S)	Head number of a device in which control data is stored	1	Device name
` '	Head number of a bit device which turns ON the operation by one scan at the time of completion of the instruction. If the instruction is completed abnormally, ((D) + 1) will also be turned ON.	System	Bit

Note) The file register of each of the local device and the program cannot be used as a device for setting data.

*1: The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.

[Control data]


Device	Item	Setting data	Setting range	Setting side (*1)
(S)+0	System area	_	_	_
(S)+1	Complete status	The state at the time of completion is stored. • 0 :Normal completion • Other than 0:Abnormal completion (error code)(*2)	-	System
(S)+2	Signal received from servo amplifier	The following signal states taken in from the servo amplifier to the input module are written. • b0: ABS data bit 0 • b1: ABS data bit 1 • b2: Transmission data READY flag	b0: 0/1 b1: 0/1 b2: 0/1	User
(S)+3	Signal transmitted to servo amplifier	The ON/OFF states of the following data which are calculated using the dedicated instructions by the "signals received from the servo amplifier" and output to the servo amplifier are stored. • b0: Servo amplifier ON • b1: ABS transfer mode • b2: ABS request flag	-	System
(S)+4	Status	Status of communication with servo amplifier • 0 : Communication completed (Set by user at communication start) • Other than 0: During communication (System stores)	0	User/system
(S)+5 to (S)+7	System area	-	_	_

- *1: The data on the setting side is as follows.
 - User : Data before the execution of dedicated instructions is stored by user.
 - System : Data after the execution of dedicated instruction is stored by CPU module.
- *2: Refer to Section 15.3 for error codes at abnormal completion.

[Functions]

- (1) The positioning data is read from the servo amplifier capable of processing the absolute positions of the axes to be set (See below), and the values converted with respect to a unit are stored in " Md.20 Current feed value" and
 - " Md.21 Machine feed value" area of the QD75.
 - · Z.ABRST1: Axis 1
 - · Z.ABRST2: Axis 2
 - · Z.ABRST3: Axis 3
 - Z.ABRST4: Axis 4

For absolute position detection system, carry out the absolute position restoration operation each time the power is turned ON or CPU module is reset.

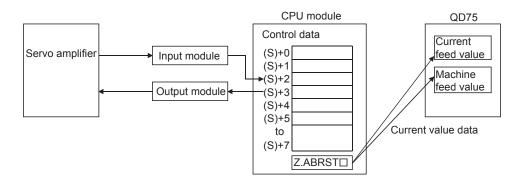

(2) An I/O module is used for communication (data read/write) with the servo amplifier capable of processing the absolute positions.

When using the Z.ABRST□, prepare the input/output with the following number of points, for each axis, for communication with the servo amplifier.

• Input : 3 points · Output: 3 points

Refer to Section 12.6 for wiring of I/O signals.

- (3) The Z.ABRST□ instruction completion can be confirmed using the complete devices ((D)+0) and ((D)+1).
 - (a) Complete device ((D)+0) This device is turned ON by the END processing of the scan for which

Z.ABRST□ instruction is completed, and turned OFF by the next END processing.

(b) Complete state display device ((D)+1)

This device is turned ON and OFF according to the state in which Z.ABRST□ instruction is completed.


· When completed normally

: Kept unchanged at OFF.

 When completed abnormally: This device is turned ON by the END processing of the scan for which

> Z.ABRST instruction is completed, and turned OFF by the next END processing (same ON/OFF operation as complete

device).

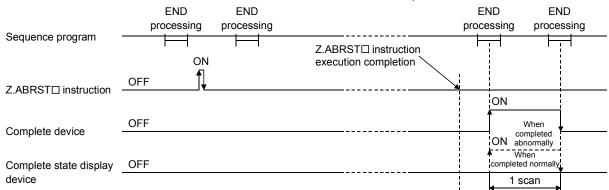

The completion of absolute position restoration can be confirmed using the ((S)+4) "status".

(4) Using the Z.ABRST□ instruction, the absolute position restoration is carried out in the following procedure.

Output the servo ON, ABS transfer mode, and ABS request flag

Set the ABS data bit 0/bit 1 and transmission data READY flag

to the output module using the sequence program.

using the sequence program.

[Errors]

14

(1) When a dedicated instruction is completed abnormally, the error complete signal ((D)+1) is turned ON, and the error code is stored in the complete status ((S)+1). Check and take a measure against the error referring to Section 15.3 "List of error codes".

[Precautions]

- (1) After the absolute position detection system is configured, the absolute position restoration must be carried out at least once after the power is turned ON or reset. Unless the absolute position restoration of the QD75 is completed, the servo amplifier will not be turned ON.
- (2) Execute absolute position restoration when the PLC READY signal [Y0] is OFF.
- (3) The restoration of the absolute position (Z.ABRST□ instruction execution) can also be carried out when the servo amplifier is turned ON. If this is carried out, however, the servo ON signal is turned OFF for approx. 60ms + scan time (servo OFF) and the motor may move.
 - When carrying out the absolute position restoration during servo OFF, install an electromagnetic brake and output the Z.ABRST□ instruction to that brake during the Z.ABRST□ instruction execution.
- (4) The following dedicated instructions cannot be executed simultaneously for the same axis.

(Can be executed simultaneously for different axes.)

- Positioning start instructions (ZP.PSTRT1 to ZP.PSTRT4)
- Absolute position restoration instructions (Z.ABRST1 to Z.ABRST4)
- Teaching instructions (ZP.TEACH1 to ZP.TEACH4)
- (5) When the remote I/O station* (Q Corresponding MELSECNET/H network remote I/O module) is used, the dedicated instruction (Z.ABRST□) is unusable. (For the sequence program example of when the dedicated instruction is not used, refer to the "Absolute Position Detection System" Installation Guide of the Mitsubishi Electric General-Purpose AC Servo.)
 - *: For details of the remote I/O station, refer to Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network).

14

- (6) If the Z.ABRST□ instruction is executed in either of the following cases, an error "Dedicated instruction error" (error code: 804) will occur and absolute position restoration cannot be carried out.
 - Any value other than 0 is set to "Status" (device: (S)+4) of the control data (at communication start with servo amplifier).
 - The instruction for a non-existent axis is specified.
 (Example: The Z.ABRST2 instruction is specified when the QD75P1 is used.)
 - "Status" (device: (S)+4) of the control data is changed during absolute position restoration (during communication with servo amplifier).

[Program examples]

Program to restore the absolute position of axis 1.

The X47 to X49 and Y50 to Y52 are used for communication with the servo amplifier.

X47: ABS data bit 0 X48: ABS data bit 1

X49: Transmission data READY flag


Y50: Servo ON signal Y51: ABS transfer mode Y52: ABS request flag

```
(1) Absolute position restoration command acceptance
      SM400
796
                                                                                                              SET
                                                                                                                         M41
                                                                                        -FMOV
                                                                                                              D42
                                                                                                                                       <D42 to D45 reset>
 (2) Setting of transmit data to servo-amplifier and confirmation of absolute position restoration completion
     ABRST1 instruction completed when M42 is ON and M43 is OFF. Absolute position data restoration completed when status = 0.
802
                                                                                                   Гмоч
                                                                                                              D44
                                                                                                                         K1Y50
                  M43
                                                                                                   Гмоу
                                                                                                              D42
                                                                                                                         D49
                                                                                                                                       <Error code transmission to D49>
                        D45
                                                                                                                         M41
 (3) ABS data setting and ABRST1 instruction execution
                                                                                                                                       <ABS data bit 0 ON/OFF>
                                                                                                                                       <ABS data bit 1 ON/OFF>
                                                                                                                                       <Transmission data preparation complete</p>
                                                                                                                        (D43.2
                                                                                                                                       flag ON/OFF>
                                                                            ___Z.ABRST1
                                                                                                   "U0"
                                                                                                              D41
                                                                                                                         M42
                                                                                                                                      <ABRST1 instruction execution>
```

14.4 ZP.PSTRT1, ZP.PSTRT2, ZP.PSTRT3, ZP.PSTRT4

These dedicated instructions are used to start the positioning of the designated axis.

				l	Usable device					
Setting	Interna	device		Link direct of	device J□\□	Intelligent	Index	Constant		
data	Bit	Word	File register	Bit	Word	function module U⊟\G⊟	register Zn	K, H	Others	
(S)	_	(_	_		_	ı	
(D)	0	0	_					-		

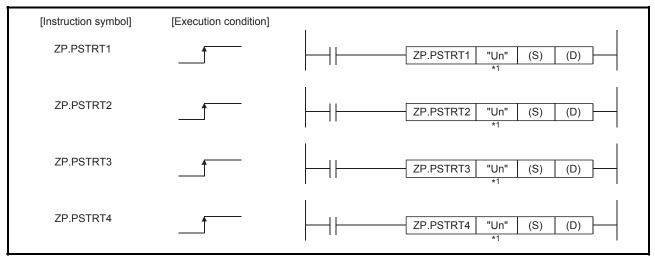

^{*1} If the originating station is a Basic model QCPU (function version B or later), universal model QCPU, or safety CPU, "" (double quotation) of the first argument can be omitted.

When ZP.PSTRT1, ZP.PSTRT2, ZP.PSTRT3, and ZP.PSTRT4 are common to each other, they are designated as "ZP.PSTRTD".

[Setting data]

Setting data	Setting details	Setting side (*1)	Data type
ı "I in"	QD75 head I/O number (00 to FE: High-order two digits of I/O number expressed in three digits)	User	BIN 16 bits
(S)	Head number of a device in which control data is stored	_	Device name
(D)	Head number of a bit device which turns ON the operation by one scan at the time of completion of the instruction. If the instruction is completed abnormally, ((D) + 1) will also be turned ON.	System	Bit

Note) The file register of each of the local device and the program cannot be used as a device for setting data.

*1: The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.

[Control data]

14

Device	Item	Setting data	Setting range	Setting side (*1)
(S)+0	System area	-	_	_
(S)+1	Complete status	The state at the time of completion is stored. • 0 : Normal completion • Other than 0: Abnormal completion (error code)(*2)	-	System
(S)+2	Start No.	The following data Nos. to be started by the ZP.PSTRT□ instruction are designated. • Positioning data No. : 1 to 600 • Block start : 7000 to 7004 • Machine OPR : 9001 • Fast OPR : 9002 • Current value changing : 9003 • Multiple axes simultaneous start: 9004	1 to 600 7000 to 7004 9001 to 9004	User

^{*1:} The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

System : Data after the execution of dedicated instruction is stored by CPU module.

*2: Refer to Section 15.3 for error codes at abnormal completion.

[Functions]

(1) The positioning start of the axes to be processed (See below) is carried out.

ZP.PSTRT1: Axis 1

• ZP.PSTRT2: Axis 2

• ZP.PSTRT3: Axis 3

ZP.PSTRT4: Axis 4

(2) The block start, OPR start, current value changing, and multiple axes simultaneous start can be carried out by the setting of "start number" 7000 to 7004/9001 to 9004 in ((S)+2).

(3) The ZP.PSTRT□ instruction completion can be confirmed using the complete devices ((D)+0) and ((D)+1).

(a) Complete device ((D)+0)

This device is turned ON by the END processing of the scan for which ZP.PSTRT□ instruction is completed, and turned OFF by the next END processing.

(b) Complete state display device ((D)+1)

This device is turned ON and OFF according to the state in which ZP.PSTRT□ instruction is completed.


• When completed normally : Kept unchanged at OFF.

• When completed abnormally : This device is turned ON by the END

processing of the scan for which

ZP.PSTRT□ instruction is completed, and turned OFF by the next END processing (same ON/OFF operation as complete

device).

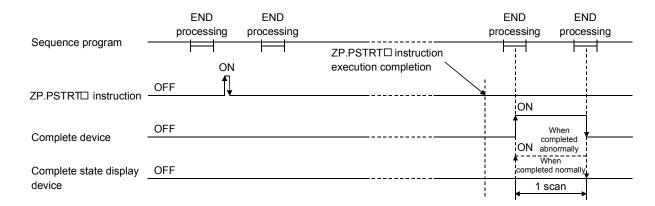

[Errors]

(1) When an ZP.PSTRT□ instruction is completed abnormally, the error complete signal ((D)+1) is turned ON, and the error code is stored in the complete status ((S)+1).

Check and take a measure against the error referring to Section 15.3 "List of error codes".

[Precautions]

- (1) When positioning is started by the ZP.PSTRT□ instruction, the positioning start signals (Y10 to Y13) will not turn ON.
 - Therefore, the start complete signal (X10 to X13) cannot be used for confirming completion of start of positioning.
 - To confirm that positioning control is being executed, use the ZP.PSTRT□ start command or BUSY signals (XC to XF).
- (2) If, after positioning has been started by the ZP.PSTRT□ instruction, a stop command is input before positioning is complete, the complete device (D) turns ON one scan and the execution of the ZP.PSTRT□ instruction is completed.
- (3) The following dedicated instructions cannot be executed simultaneously for the same axis.

(Can be executed simultaneously for different axes.)

- Positioning start instructions (ZP.PSTRT1 to ZP.PSTRT4)
- Absolute position restoration instructions (Z.ABRST1 to Z.ABRST4)
- Teaching instructions (ZP.TEACH1 to ZP.TEACH4)
- (4) The ZP.PSTRT□ instruction can only be executed when the QD75 READY signal (X0) is turned ON.

Even if the ZP.PSTRT□ instruction execution request is given when the QD75 READY signal is turned OFF, the ZP.PSTRT□ instruction will not be executed. (not processed.)

Before executing the ZP.PSTRT□ instruction, turn ON the PLC READY signal (Y0), and turn ON the QD75 READY signal (X0).

- (5) When the remote I/O station ★ (Q Corresponding MELSECNET/H network remote I/O module) is used, the dedicated instruction (ZP.PSTRT□) is unusable.
 - *: For details of the remote I/O station, refer to Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network).
- (6) If the ZP.PSTRT□ instruction is executed in either of the following cases, an error "Dedicated instruction error" (error code: 804) will occur and positioning cannot be started.
 - Any value other than 1 to 600, 7000 to 7004, and 9001 to 9004 is set to "Starting number" (device: (S)+2) of the control data.
 - The instruction for a non-existent axis is specified.


 (Example: The ZP.PSTRT2 instruction is specified when the QD75P1 is used.)
- (7) When the multiple axes simultaneous start is executed by ZP.PSTRT□ instruction, the completion device (D) will turn ON when the positioning of the axes executed by ZP.PSTRT□ instructions is completed. (When the instructions is ZP.PSTRT1, the axis will be axis 1.)

[Program examples]

 The following program executes the positioning start of positioning data No. 1 when X100 turns ON.

Use D30 to D32 as the control data devices of positioning data No. 1, and M32 and M33 as the completion devices.

(1) Positioning start program

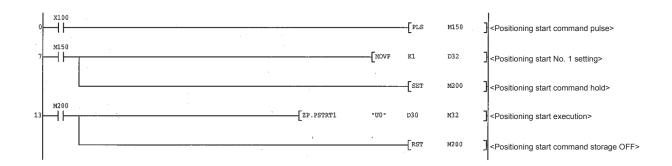

(2) Positioning start program (when the dedicated instruction is not used)

```
X100 Y10 X10 | Positioning start command pulse>


M150 | MOV K1 G1500 | Positioning start No. 1 setting>

Y10 X10 DX0C | RST Y10 | Positioning start signal OFF>
```

14.5 ZP.TEACH1, ZP.TEACH2, ZP.TEACH3, ZP.TEACH4

This dedicated	instruction is	s used to	teach the	designated axis.
i i iio acaidatea		, aoca io	todon the	acoignatea axio.

				Э					
Setting	Interna	l device		Link direct of	device J□\□	Intelligent		Constant	
data	Bit	Word	File register	Bit	Word	function module U⊟\G⊟	Zn	K, H	Others
(S)	_	(_	_		_	_
(D)	0	0	_					_	

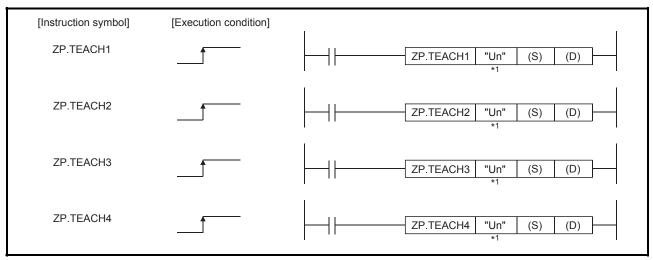

^{*1} If the originating station is a Basic model QCPU (function version B or later), universal model QCPU, or safety CPU, "" (double quotation) of the first argument can be omitted.

When ZP.TEACH1, ZP.TEACH2, ZP.TEACH3, and ZP.TEACH4 are common to each other, they are designated as "ZP.TEACH□".

[Setting data]

Setting data	Setting details	Setting side (*1)	Data type
l "I In"	QD75 head I/O number (00 to FE: High-order two digits of I/O number expressed in three digits)	User	BIN 16 bits
(S)	Head number of a device in which control data is stored	_	Device name
(D)	Head number of a bit device which turns ON the operation by one scan at the time of completion of the instruction. If the instruction is completed abnormally, ((D) + 1) will also be turned ON.	System	Bit

Note) The file register of each of the local device and the program cannot be used as a device for setting data.

*1: The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.

[Control data]

14

Device	Item	Setting data	Setting range	Setting side (*1)
(S)+0	System area	-	-	_
(S)+1	Complete status	The state at the time of completion is stored. 0 : Normal completion Other than 0: Abnormal completion (error code)(*2)	1	System
(S)+2	Teaching data selection	The address (positioning address/arc address) to which the current feed value is written is set. 0: Current feed value is written to positioning address. 1: Current feed value is written to arc address.	0, 1	User
(S)+3	Positioning data No.	The positioning data No. for which teaching is carried out is set.	1 to 600	User

^{*1:} The data on the setting side is as follows.

- User : Data before the execution of dedicated instructions is stored by user.
- System : Data after the execution of dedicated instruction is stored by CPU module.
- *2: Refer to Section 15.3 for error codes at abnormal completion.

[Functions]

(1) The "current feed value" of the axes to be set (See below) is set in the positioning address or arc address.

The positioning data other than the positioning addresses and arc addresses are set by peripheral device or using a sequence program.

- ZP.TEACH1: Axis 1
- ZP.TEACH2: Axis 2
- ZP.TEACH3: Axis 3
- ZP.TEACH4: Axis 4
- (2) Teaching can be carried out for the positioning data No. 1 to 600.
- (3) The movement of the machine to the address (position) set in the positioning address/arc address of the positioning data is carried out by the JOG operation, inching operation, or manual pulse generator operation.
- (4) The ZP.TEACH□ instruction completion can be confirmed using the complete devices ((D)+0) and ((D)+1).
 - (a) Complete device ((D)+0)

This device is turned ON by the END processing of the scan for which ZP.TEACH□ instruction is completed, and turned OFF by the next END processing.

(b) Complete state display device ((D)+1)

This device is turned ON and OFF according to the state in which ZP.TEACH□ instruction is completed.


• When completed normally : Kept unchanged at OFF.

• When completed abnormally : This device is turned ON by the END

processing of the scan for which

ZP.TEACH□ instruction is completed, and turned OFF by the next END processing (same ON/OFF operation as complete

device).

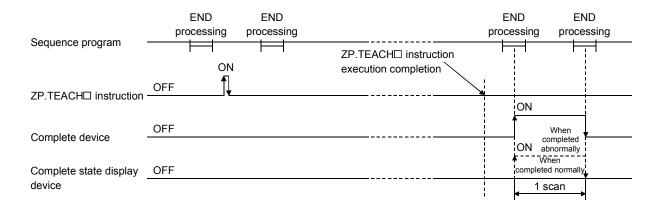

[Errors]

(1) When a ZP.TEACH instruction is completed abnormally, the error complete signal ((D)+1) is turned ON, and the error code is stored in the complete status (S)+1. Check and take a measure against the error referring to Section 15.3 "List of error codes".

[Precautions]

(1) The following dedicated instructions cannot be executed simultaneously for the same axis.

(Can be executed simultaneously for different axes.)

- Positioning start instructions (ZP.PSTRT1 to ZP.PSTRT4)
- Absolute position restoration instructions (Z.ABRST1 to Z.ABRST4)
- Teaching instructions (ZP.TEACH1 to ZP.TEACH4)
- (2) The ZP.TEACH□ instruction can only be executed when the BUSY signal (XC, XD, XE, XF) is turned OFF.

When the BUSY signal is turned ON, the ZP.TEACH□ instruction will not be executed. (not processed.)


Before executing the ZP.TEACH□ instruction, make sure that the BUSY signal for the axis to be processed is turned OFF.

- (3) When the remote I/O station* (Q Corresponding MELSECNET/H network remote I/O module) is used, the dedicated instruction (ZP.TEACH□) is unusable.
 - *: For details of the remote I/O station, refer to Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network).
- (4) If the ZP.TEACH□ instruction is executed in any of the following cases, an error "Dedicated instruction error" (error code: 804) will occur and teaching cannot be performed.
 - Any value other than 0 and 1 is set to "Teaching selection" (device: (S)+2) of the control data.
 - Any value other than 1 to 600 is set to "Positioning No." (device: (S)+3) of the control data.
 - The instruction for a non-existent axis is specified.
 (Example: The ZP.TEACH2 instruction is specified when the QD75P1 is used.)

[Program example]

Program to execute the teaching of the positioning data No. 3 of the axis 1 when X39 is turned ON.

Teaching program
 Positioning is carried out for a target position by manual operation.

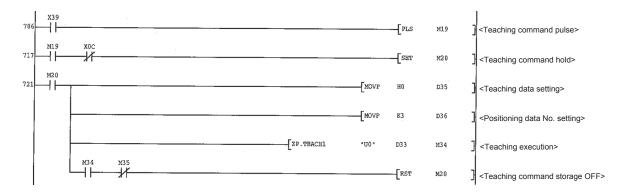


(2) Teaching program (when the dedicated instruction is not used)

Positioning is carried out for a target position by manual operation.

14.6 ZP.PFWRT

These dedicated instructions are used to write the QD75 parameters, positioning data and block start data to the flash ROM.

				l	Jsable device	9			
Setting	Interna	device		Link direct of	device J□\□	Intelligent	Index	Constant	
data	Bit	Word	File register	Bit	Word	function module U⊡\G□	register Zn	K, H	Others
(S)	_	()		_	_		_	-
(D)	0	0	_		-	-		_	_

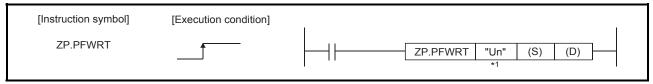

^{*1} If the originating station is a Basic model QCPU (function version B or later), universal model QCPU, or safety CPU, "" (double quotation) of the first argument can be omitted.

[Setting data]

Setting data	Setting details	Setting side (*1)	Data type
I "I In"	QD75 head I/O number (00 to FE: High-order two digits of I/O number expressed in three digits)	User	BIN 16 bits
(S)	Head number of a device in which control data is stored	_	Device name
` '	Head number of a bit device which turns ON the operation by one scan at the time of completion of the instruction. If the instruction is completed abnormally, ((D) + 1) will also be turned ON.	System	Bit

Note) The file register of each of the local device and the program cannot be used as a device for setting data.

*1: The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.

[Control data]

Device	Item	Setting data	Setting Range	Setting side (*1)
(S)+0	System area	-	-	_
(S)+1	Complete status	The state at the time of completion is stored. 0 :Normal completion Other than 0 :Abnormal completion (error code)(*2)	-	System

^{*1:} The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.


*2: Refer to Section 15.3 for error codes at abnormal completion.

[Functions]

- (1) The ZP.PFWRT instruction completion can be confirmed using the complete devices ((D)+0) and ((D)+1).
 - (a) Complete device ((D)+0) This device is turned ON by the END processing of the scan for which ZP.PFWRT instruction is completed, and turned OFF by the next END processing.
 - (b) Complete state display device ((D)+1) This device is turned ON and OFF according to the state in which ZP.PFWRT instruction is completed.
 - When completed normally : Kept unchanged at OFF.
 - \bullet When completed abnormally $% \left(1\right) =\left(1\right) +\left(1\right) =\left(1\right) +\left(1\right) +\left(1\right) =\left(1\right) +\left(1$

processing of the scan for which ZP.PFWRT instruction is completed, and turned OFF by the next END processing (same ON/OFF operation as complete

device).

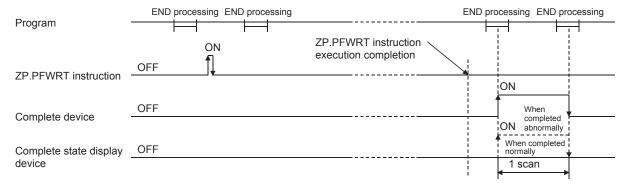

[Errors]

(1) When a dedicated instruction is completed abnormally, the error complete signal ((D)+1) is turned ON, and the error code is stored in the complete status ((S)+1). Check and take measures against the error referring to Section 15.3 "List of error codes".

[Precautions]

14

(1) Do not turn ON the power and reset the CPU module while parameters, positioning data and block start data are written to the flash ROM using the ZP.PFWRT instruction.

A parameter error will occur or normal positioning start will become impossible because the parameters, positioning data and block start data are not written normally to the flash ROM.

If this occurs, restart the operation by the method shown below.

- For GX Configurator-QP or GX Works2, write the parameters, positioning data and block start data again to the flash ROM.
- For a sequence program, write the parameters, positioning data and block start data to the QD75 after initializing the parameters (ZP.PINIT instruction execution and others).


Then execute the ZP.PFWRT instruction again.

- (2) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible.
- (3) After the power ON and CPU module reset operation, writing to the flash ROM using a sequence program is limited to up to 25 times. (Not limited to up to 25 times when writing to the flash ROM is carried out by peripheral device.) If the 26th or more writing is requested after the power ON/CPU module reset operation, an error "flash ROM write number error" (error code: 805) will occur, and the writing will be disabled. If a flash ROM write error occurs by one writing to the flash ROM, check and correct the flash ROM writing program. Then reset the error or turn ON the power and reset the CPU module again.
- (4) The ZP.PFWRT instruction can only be executed when the QD75 READY signal (X0) is turned OFF.
 - When the QD75 READY signal is turned ON, the ZP.PFWRT instruction cannot be executed.
 - Before executing the ZP.PFWRT instruction, turn OFF the PLC READY signal (Y0) and then turn OFF the QD75 READY signal.
- (5) When the remote I/O station* (Q Corresponding MELSECNET/H network remote I/O module) is used, the dedicated instruction (ZP.PFWRT) is unusable.
 - *: For details of the remote I/O station, refer to Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network).

[Program example]


Program used to write the parameters and positioning data stored in the buffer memory to the flash ROM when X3D is turned ON.

(1) Flash ROM write program

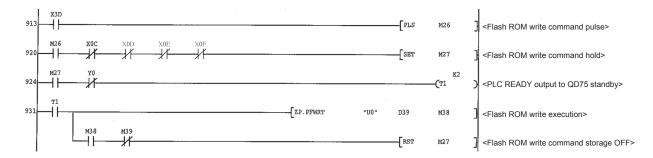

[Program example for use when dedicated instruction is not used]


(2) Flash ROM write program (when the dedicated instruction is not used)

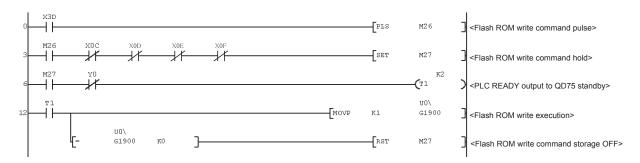

14.7 ZP.PINIT

This dedicated instruction is used to initialize the setting data of the QD75.

				l	Jsable device)			
Setting	Interna	l device	File	Link direct of	device J□\□		Index	Constant	
data	Bit	Word	register	Bit	Word	U□\G□	register Zn	K, H	Others
(S)	_	(_	_		_	1
(D)	0	0	_		_	-		_	-

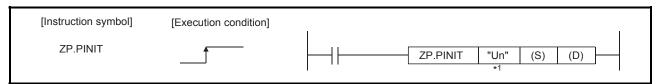

^{*1} If the originating station is a Basic model QCPU (function version B or later), Universal model QCPU, or safety CPU, "" (double quotation) of the first argument can be omitted.

[Setting data]

Setting data	Setting details	Setting side (*1)	Data type
ı "ıın"	QD75 head I/O number (00 to FE: High-order two digits of I/O number expressed in three digits)	User	BIN 16 bits
(S)	Head number of a device in which control data is stored	ı	Device name
(D)	Head number of a bit device which turns ON the operation by one scan at the time of completion of the instruction. If the instruction is completed abnormally, ((D) + 1) will also be turned ON.	System	Bit

Note) The file register of each of the local device and the program cannot be used as a device for setting data.

*1: The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.

[Control data]

Device	Item	Setting data	Setting range	Setting side (*1)
(S)+0	System area	-	_	-
(S)+1	Complete status	The state at the time of completion is stored. 0 : Normal completion Other than 0: Abnormal completion (error code)(*2)	-	System

^{*1:} The data on the setting side is as follows.

• User : Data before the execution of dedicated instructions is stored by user.

• System : Data after the execution of dedicated instruction is stored by CPU module.

*2: Refer to Section 15.3 for error codes at abnormal completion.

[Functions]

(1) This dedicated instruction is used to return the setting data set in the QD75 buffer memory and flash ROM to their factory-set data (initial values).

Initialized setting data

Parameters (Pr.1 to Pr.57, Pr.70, Pr.150)

Positioning data (No. 1 to No. 600)


Block start data (No. 7000 to 7004)

- (2) The ZP.PINIT instruction completion can be confirmed using the complete devices ((D)+0) and ((D)+1).
 - (a) Complete device ((D)+0) This device is turned ON by the END processing of the scan for which ZP.PINIT instruction is completed, and turned OFF by the next END processing.
 - (b) Complete state display device ((D)+1)

 This device is turned ON and OFF according to the state in which ZP.PINIT instruction is completed.
 - When completed normally : Kept unchanged at OFF.
 - · When completed abnormally : This device is turned ON by the END

processing of the scan for which ZP.PINIT instruction is completed, and turned OFF by the next END processing (same

ON/OFF operation as complete device).

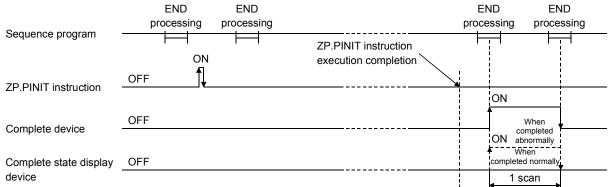

[Errors]

(1) When a dedicated instruction is completed abnormally, the error complete signal ((D)+1) is turned ON, and the error code is stored in the complete status ((S)+1). Check and take measures against the error referring to Section 15.3 "List of error codes".

[Precautions]

- The ZP.PINIT instruction can only be executed when the QD75 READY signal (X0) is turned OFF.
 - When the QD75 READY signal is turned ON, the ZP.PINIT instruction cannot be executed.
 - Before executing the ZP.PINIT instruction, turn OFF the PLC READY signal (Y0) and then turn OFF the QD75 READY signal.
- (2) When the remote I/O station* (Q Corresponding MELSECNET/H network remote I/O module) is used, the dedicated instruction (ZP.PINIT) is unusable.
 - *: For details of the remote I/O station, refer to Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network).


14

- (3) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible.
- (4) After the power ON and CPU module reset operation, writing to the flash ROM using a sequence program is limited to up to 25 times. (Not limited to up to 25 times when writing to the flash ROM is carried out by peripheral device.) If the 26th or more writing is requested after the power ON/CPU module reset operation, an error "flash ROM write number error" (error code: 805) will occur, and the writing will be disabled. If a flash ROM write error occurs by one writing to the flash ROM, check and correct the flash ROM writing program. Then reset the error or turn ON the power and reset the CPU module again.


[Program example]

The following program initializes the parameters in buffer memory and flash ROM when X3C turns ON.

(1) Parameter initialization program

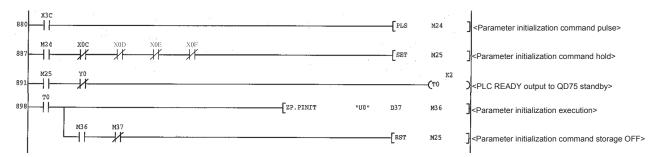

(2) Parameter initialization program (when the dedicated instruction is not used)

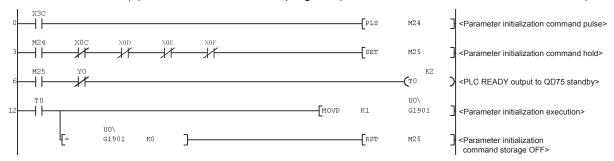

CHAPTER 15 TROUBLESHOOTING

The "errors" and "warnings" detected by the QD75 are explained in this chapter.

Errors can be confirmed with the QD75 LED display and peripheral devices. When an error or warning is detected, confirm the detection details and carry out the required measures.

15.1	Troubleshooting	15- 2
15.2	Error and warning details	15- 6
15.3	List of errors	15- 10
15.4	List of warnings	15- 42

15.1 Troubleshooting

15

(1) Troubleshooting using the LEDs

Check items and corrective actions for troubleshooting using the indicator LEDs of the QD75 are described below.

(a) When the RUN LED turns off

Check item	Action
Is the power supplied?	Check that the voltage supplied to the power supply module is within the rated range.
Is the power supply capacity sufficient?	Calculate the total current consumption of the connected modules (CPU module, I/O modules, and intelligent function modules) and check that the power supply capacity is not insufficient.
Is the module connected correctly?	Check that the module is correctly connected to the base unit.

If there is no problem on the above check items, a watchdog timer error may have occurred. Reset the CPU module and check that the RUN LED turns on.

If not, the possible cause is a hardware failure. Please consult your local Mitsubishi representative.

(b) When the ERR. LED turns on

Check item	Action	
	An error may have occurred in the CPU module. Check the error and take a corrective action.	

(c) When the ERR. LED and axis LED flash

Check item	Action
Is there an axis error?	Check the error code and take the action described in Section 15.3.

(d) When all LEDs turn on

Reset the CPU module and check that the module is in the normal status. If all LEDs still turn on, the possible cause is a hardware failure. Please consult your local Mitsubishi representative.

(2) Troubleshooting when a motor does not rotate

Check items and corrective actions for troubleshooting when a motor does not rotate are described below.

POINT

The following signals must be ON for the QD75 to operate (excluding when the positioning test function of GX Works2 is used).

- QD75 READY signal (X0)
- Drive unit READY signal
- Upper limit signal and Lower limit signal

The status of the drive unit READY signal and upper/lower limit signals can be checked in b0 to b2 of " Md.30 External I/O signal".

Check item	Action	
Are the QD75 READY signal (X0), drive unit READY signal, and upper/lower limit signals ON?	Review and correct the program and wiring so that all the QD75 READY signal (X0), drive unit READY signal, and upper/lower limit signals turn ON.	
Is there an error in the QD75? (ERR. LED is on or flashing)	Check the error code and take a corrective action.	
Is the drive unit powered ON?	Power on the drive unit.	
Is there an error in the drive unit?	Check the error code of the drive unit and take a corrective action.	
Is the wiring between the QD75 and drive unit correct?	Check the wiring between the QD75 and drive unit, and correct it.	
Is the wiring between the drive unit and motor correct?	Check the wiring between the drive unit and motor, and correct it.	
Is the value in " Md.20 Current feed value" changed after positioning control is performed?	Review the start program.	
Is the number of the input pulses for monitoring changed after positioning control is performed? *1	Refer to the drive unit operating manual and check that the function to suppress the motor rotation is not working.	
Isn't the value in " Md.26 Axis operation status" "1: Stopped"?	Review the stop program.Check that the stop signal (STOP) is not input.	
Does the pulse output mode setting meet the specifications of the drive unit?	Set the value in " Pr.5 Pulse output mode" so that it satisfies the specifications of the drive unit.	
Does the output logic setting of the command pulse signal meet the specifications of the drive unit?	Set the value of the logic selection of the command pulse signal (Pr.23 Output signal logic selection: b0) so that it satisfies the specifications of the drive unit.	

^{*1:} This check item applies only for the drive unit having a monitor function for the number of input pulses.

If a motor does not rotate even after the above items are checked, the possible cause is a hardware failure.

Please consult your local Mitsubishi representative.

(3) Troubleshooting when a motor does not rotate as intended.

Check items and corrective actions for troubleshooting when a motor does not rotate as intended are described below.

(a) When a motor rotates only in one direction

Check item	Action
Is the wiring correct?	Check that the signal line of the pulse output (for axis 1, connector pin No. "1A15 to 18") is correctly wired or not disconnected.
Does the pulse output mode setting meet the specifications of the drive unit?	Set the value in " Pr.5 Pulse output mode" so that it satisfies the specifications of the drive unit.

(b) When a motor rotates in the opposite direction

Check item	Action
Is the wiring correct?	Check that the signal line of the pulse output (for axis 1, connector pin No. "1A15 to 18") is wired correctly. (CW and CCW or phase A and phase B should be correctly wired.)
	Check that the values in " Pr.6 Rotation direction setting" and " Pr.23 Output signal logic selection (b0: Command pulse signal)" match the settings of the drive unit.

(c) When a motor does not rotate at the set speed

Check item	Action	
Check item Does the value in " Md.28	Action [When " Md.28 Axis feedrate" indicates the set speed] • Check that the values in " Pr.2 No. of pulses per rotation", " Pr.3 Movement amount per rotation", and " Pr.4 Unit magnification" meet the system. • When the drive unit has the electronic gear function, check that the settings meet the system. [When " Md.28 Axis feedrate" does not indicate the	
Axis feedrate" indicate the set speed?	• Check that the speed is not limited by the value in "Pr.8 Speed limit value". • In the JOG operation, Check that the speed is not limited by the value in "Pr.31 JOG speed limit value". • In the JOG operation, check that Forward/Reverse run JOG start signals (Y8 to YF) do not repeatedly turn ON and OFF.	

(d) When the set position is not reached

Check item	Action	
	[When " Md.20 Current feed value" reaches the set position] • Check that the values in " Pr.2 No. of pulses per rotation", " Pr.3 Movement amount per rotation", and " Pr.4 Unit magnification" meet the system.	
Does the value in " Md.20 Current feed value" indicate the intended position when	When the drive unit has the electronic gear function, check that the settings meet the system.	
the motor stops?	[When " Md.20 Current feed value" does not reaches the set position]	
	• Check that the motor is not stopped by Axis stop signals (Y4 to Y7) or a stop signal (STOP). If a motor is stopped by them, the value "1: Stopped" is stored in " Md.26 Axis operation status".	

15.2 Error and warning details

15

[1] Errors

Types of errors

Errors detected by the QD75 include parameter setting range errors and errors at the operation start or during operation.

(1) Parameter setting range errors

The parameters are checked when the power is turned ON and at the rising edge (OFF \rightarrow ON) of the PLC READY signal [Y0]. An error will occur if there is a mistake in the parameter setting details at that time.

When this kind of error occurs, the QD75 READY signal does not turn ON. To cancel this kind of error, set the correct value in the parameter for which the error occurred, and then turn ON the PLC READY signal [Y0].

(2) Errors at the operation start or during operation

These are errors that occur at the operation start or during operation when the positioning control, JOG operation, or inching operation is used. If an axis error occurs during interpolation operation, the error No. will be stored in both the reference axis and the interpolation axis.

Note that, in the following cases (a) and (b), the axis error No. will be stored only in the reference axis during analysis of the positioning data set in each point of the positioning start data table.

- (a) When the interpolation axis is BUSY.
- (b) When the error occurred in positioning data or parameters unrelated to interpolation control.

If the error occurred at the simultaneous start of a positioning operation, the axis error storage details will differ depending on whether the error occurred before or after the simultaneous start.

- If the error occurred before the simultaneous start (illegal axis No., other axis BUSY, etc.), an error "Error before simultaneous start" (error code: 501) will occur.
- If the error occurred after the simultaneous start (positioning data error, software stroke limit error, etc.), an error code corresponding to the axis in which the error occurred will be stored. Because a simultaneous start cannot be carried out due to this, an error "Simultaneous start not possible" (error code: 532) error code will be stored in all axes in which an error has not occurred.

The axis operation status will be displayed as "error occurring" for axes in which an error occurred.

If an error occurs during operation, any moving axes will deceleration stop, and their operation status will be displayed as "error occurring".

All axes will decelerate to a stop during interpolation operations, even if the error occurs in only one axis.

(3) Types of error codes

Error code	Error type	
001 to 009	Fatal error	
100 to 199	Common error	
200 to 299	Error at OPR or absolute position restoration	
300 to 399	Error during JOG operation or during inching operation	
500 to 599	Error during positioning operation	
800 to 899	I/F (Interface) error	
900 to 999	Error during parameter setting range check	

15

Error storage

When an error occurs, the error detection signal turns ON, and the error code corresponding to the error details is stored in the following buffer memory address (Md.23 Axis error No.) for axis error No. storage.

Axis No.	Error detection signal	Buffer memory address
1	X8	806
2	X9	906
3	XA	1006
4	ХВ	1106

A new error code is stored in the buffer memory address (Md.23 Axis error No.) for axis error storage every time an error occurs.

POINT

When any of the following errors is detected, it is stored in the axis error No. of axis 1. Error code: 001, 002, 107, 800, 801, 802, 805

[2] Warnings

Types of warnings

- (1) Warnings include system warnings and axis warnings.
 - The types of system warnings are shown below.
 - System control data setting warnings An axis warning for axis 1 will occur.
 - Positioning data setting warnings
 An axis warning for each axis will occur.

 Note that a warning will occur for the reference axis when an interpolation designation or axis setting warning occurs.
- (2) Axis warnings occur due to setting warnings from operations such as positioning operations, JOG operations, manual pulse generator operations, or system errors. They can be canceled by turning ON the " Cd.5 Axis error reset".

Note that some warnings cannot be canceled unless the cause of the warning is eliminated.

The axis operation status does not change even if an axis warning occurs.

(3) Types of warning codes

Warning code	Warning type		
100 to 199	Common warning		
300 to 399	Warning during JOG operation		
400 to 499	Warning during manual pulse generator operation		
500 to 599	Warning during positioning operation		

Warning storage

(1) When an axis warning occurs, the warning code corresponding to the warning details is stored in the following buffer memory (Md.24 Axis warning No.) for axis warning No. storage.

Axis No.	Buffer memory address
1	807
2	907
3	1007
4	1107

(2) When an axis warning occurs in a positioning operation, etc., "1" is set in bit 9 (b9) of the following buffer memory (Md.31 Status) for axis status storage.

Axis No.	Buffer memory address
1	817
2	917
3	1017
4	1117

[3] Resetting errors and warnings

Remove the cause of error or warning following the actions described in Section 15.3 and 15.4, before cancel an error or warning state by resetting the error.

How to clear errors or warnings

An error or warning state is canceled after the following processing has been carried out by setting a "1" in the address [1502 (for axis 1)], [1602 (for axis 2)], [1702 (for axis 3)], and [1802 (for axis 4)] of the buffer memory for axis error resetting (Cd.5 Axis error reset).

- · Axis error detection signal turned OFF
- " Md.23 Axis error No." cleared
- " Md.24 Axis warning No." cleared
- Changing of " Md.26 Axis operation status" from "Error" to "Standby".
- Axis warning detection "(Md.31 Status: b9)" turned OFF

[4] Confirming the error and warning definitions

The error and warning definitions can be confirmed with the error and warning codes. Confirming them requires GX Developer or GX Configurator-QP. For details, refer to GX Developer Operating Manual or GX Configurator-QP Operating Manual. (Refer to Section 15.3 and Section 15.4 for details of the error and warning codes.)

MEMO	

15.3 List of errors

The following table shows the error details and remedies to be taken when an error occurs.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
_	000	(Normal status)	_	_
Fatal errors	001	Faults	Hardware in faulty	The evetem stone
	002	Internal circuit fault	Hardware is faulty.	The system stops.
	101	PLC READY OFF during operation	A PLC READY signal (Y0) is turned OFF during operation.	The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 Sudden stop selection (stop group 2). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
			The drive unit READY signal is turned OFF during operation.	The system stops immediately.
	102	Drive unit READY OFF	The start of an operation is requested when the drive unit READY signal is OFF.	The system does not start.
Common	103	Test mode faults during operation	The personal computer cannot communicate with the CPU unit.	The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 Sudden stop selection (stop group 2). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
	104	Hardware stroke	The hardware stroke limit (upper limit signal FLS) is turned OFF during operation.	The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 Sudden stop selection (stop group 1). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
		limit (+)	The start of an operation is requested when the hardware stroke limit (upper limit signal FLS) is OFF.	The system does not start.

Related buffer memory address		address Set range			Remedy
Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,
_	_	_	—		_
_	-	_	_	_	Check that there is no influence from noise.
_	_	_	_	_	Review the sequence program which turns ON/OFF PLC READY signal (Y0).
_	1	_	_	_	Check the power, wiring, and connector connection status of the drive unit.
	ı	_	_	_	 Check the power, wiring, and connector connection status of the drive unit. Check the values in Pr.22 Input signal logic selection. When a drive unit without READY signal output is used, wire the system so that the drive unit READY signal input of the QD75 is always ON.
		_		_	 Check that there is no error on the personal computer side I/F to which a cable is connected. Because communication takes a long time between the personal computer and a CPU module, ensure high-speed communication by setting the transmission speed to high at the transfer setup of GX Configurator-QP or GX Works2, or connecting the personal computer directly to the communication I/F of the CPU module. Reduce the load of communication by stopping the access to a CPU module from GX Developer or GX Works2 (such as monitor function).
_	_	_	_	_	After making an axis error reset (refer to [3] in Section 15.2), perform manual control operation (refer to CHAPTER 11) to move the axis to the other position in order that the upper limit signal (FLS) will not turn OFF.
_	_	_	_	_	Check the wiring of the upper limit signal (FLS). Check if the values in Pr.22 Input signal logic selection meet the specifications of the limit switch. In a system which does not require a hardware stroke limit (limit switch), wire the system so that the upper limit signal (FLS) input of the QD75 is always ON.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	105	Hardware stroke	The hardware stroke limit (lower limit signal RLS) is turned OFF during operation.	The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 Sudden stop selection (stop group 1). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
Common	100	limit (–)	The start of an operation is requested when the hardware stroke limit (lower limit signal RLS) is OFF.	The system does not start.
	106	Stop signal ON at start	Start is requested when a stop signal is turned ON.	The system does not start.
	107	READY OFF → ON during BUSY	The PLC READY signal is turned from OFF to ON when BUSY signal is turned ON.	The QD75 READY signal (X0) is not turned ON.
	201	Start at OP	When the OPR retry invalid is set, the near-point dog machine OPR is started with the OPR complete flag turned ON.	The machine OPR is not started.
	203	Dog detection timing fault	The near-point dog signal is turned OFF during the deceleration from an OPR speed to a creep speed by the near-point dog machine OPR.	The system stops with the setting
	204	OP detection timing fault	The zero signal is turned OFF during the deceleration from an OPR speed to a creep speed by the stopper method 2)-OPR.	(deceleration stop/sudden stop) of the detailed parameter 2 Sudden stop selection (stop group 3). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
OPR	205	Dwell time fault	A dwell time is passed during the deceleration from a creep speed to a OPR speed by the stopper method 1)-OPR.	generator operation.)
	206	Count method movement amount fault	In the count method 1 and 2 machine OPR, a parameter "Setting of movement amount after nearpoint dog ON" is smaller than a distance necessary for deceleration stop from an OPR speed.	The machine OPR is not started.

	Rela	ited buf addi		nory	Set range	Remedy	
	Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,	
	_		_	_	_	After making an axis error reset (refer to [3] in Section 15.2), perform manual control operation (refer to CHAPTER 11) to move the axis to the other position in order that the lower limit signal (RLS) will not turn OFF.	
	_		_	_	_	Check the wiring of the lower limit signal (RLS). Check if the values in Pr.22 Input signal logic selection meet the specifications of the limit switch. In a system which does not require a hardware stroke limit (limit switch), wire the system so that the lower limit signal (RLS) input of the QD75 is always ON.	
	_		_	_	_	The start timing is reviewed so that the operation starts after the stop command is reset. Output signals to QD75 Axis 1: Y4, Axis 2: Y5, Axis 3: Y6, Axis 4: Y7 External input Connectors for external device connection: Stop signals (STOP)	
	_	_	_	_	_	Turn ON the PLC READY signal (Y0) with the BUSY signals of all axes OFF.	
	78	228	378	528	<opr retry=""> 0, 1</opr>	 Validate the OPR retry function (set value: 1). (Refer to Section 12.1.1) Move the workpiece from the current position (on OP) using the manual control operation (refer to CHAPTER 11), then carry out a machine OPR again. 	
	74 75	224 225	374 375	524 525	<pre><opr speed=""> QD75P□N/QD75D□N: 1 to 4000000 [pulse/s] 4 to 200000000000000000000000000000000000</opr></pre>	Lower the OPR speed. Increase the dog signal input time. (Refer to Section 8.2.3)	
	74 75	224 225	374 375	524 525	1 to 2000000000 [×10 ⁻² mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000	Lower the OPR speed. Input external zero signals during the movement at a creep speed. (Refer to Section 8.2.5)	
•	74 75	224 225	374 375	524 525	[×10 ⁻² mm/min or others]	• Lower the OPR speed.	
	79	229	379	529	<opr dwell="" time=""> 0 to 65535</opr>	Increase the OPR dwell time. (Refer to Section 8.2.4)	
	80 81	230 231	380 381	530 531	<movement after<br="" amount="" setting="">near-point dog ON> 0 to 2147483647</movement>	Calculate the movement distance using a speed limit,	
	74 75	224 225	374 375	524 525	<pre><opr speed=""> QD75P□N/QD75D□N: 1 to 4000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others]</opr></pre>	 OPR speed, and deceleration time, and set the movement amount after near-point dog ON so that the distance becomes a deceleration distance or longer. Lower the OPR speed. Adjust the near-point dog position so that the movement amount after near-point dog ON becomes longer. (Refer to Section 8.2.7, 8.2.8) 	

Classification of errors	Error code	Error name	Error	Operation status at error occurrence	
	207	OPR request ON	The OPR request flag is turned ON when a fast-OPR is started (positioning start No. 9002).	The fast OPR is not started.	
OPR	209	OPR restart not possible	The restart command is turned ON after the machine OPR is stopped using a stop signal.	The restart is not carried out.	
OTT	213	ABS transmission time	Communication cannot be carried		
	214	ABS transmission SUM	out with the servo-amplifier using an absolute position restoration instruction.	The absolute position restoration is not carried out.	
	300	Outside JOG speed range	At the time of JOG starting, the JOG speed comes out of a specified range.	The JOG operation is not carried out when the JOG speed is outside the setting range at the time of JOG start.	
JOG inching	301	Inching movement amount error	The inching movement amount does not meet the setting condition. (The setting value is larger.) Setting condition: "Inching movement amount × (A) ≤ JOG speed limit value" (A) When the setting unit is pulse: 562.5 When the setting unit is other than pulse: 337.5	The inching operation is not carried out.	

Related buffer memory address			Set range (Setting with sequence program)	Remedy	
Axis 1	Axis 2	Axis 3	Axis 4	<positioning no.="" start=""> 1 to 600</positioning>	Execute the machine OPR (positioning No. 9001).
1500	1600	1700	1800	7000 to 7004 9001 to 9004	(Refer to Section 8.2)
1500	1600	1700	1800	<positioning no.="" start=""> 1 to 600 7000 to 7004 9001 to 9004</positioning>	Start the machine OPR (positioning start No. 9001) again. (Refer to Section 8.2)
_	_	_	_	_	Review the wiring. (Refer to Section 12.6) Review the sequence program.
_		ĺ		_	Review the wiring. (Refer to Section 12.6) Review the sequence program. Review the dedicated instruction parameters. (Refer to Section 14.3)
1518 1519	1618 1619	1718 1719	1818 1819	<pre><jog speed=""> QD75P□N/QD75D□N: 1 to 4000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others]</jog></pre>	Bring the JOG speed into the setting range. (Refer to Section 11.2)
1517	1617	1717	1817	<inching amount="" movement=""> 0 to 65535</inching>	Reduce the inching movement amount to satisfy setting conditions. (Refer to Section 11.3)

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	500	Illegal condition data No.	The condition data No. is outside the setting range when a block using the condition data is started by a special starting (conditional start, wait start, simultaneous start, FOR (condition)). $(1 \le Condition data No. \le 10)$	The operation is terminated.
Positioning			<when are="" blocks="" started<br="">simultaneously> • The partner axis for simultaneous start is BUSY.</when>	
operation	501	Error before simultaneous start	 <when and="" are="" axes="" controlled="" multiple="" simultaneously="" started=""></when> The partner axis for simultaneous start is BUSY. The "Simultaneous start axis start data No." of the start axis is 0 or is outside the setting range. The "Simultaneous start axis start data No." of those axes other than 	At start: The system will not operate. During operation: The system stops immediately.
			the start axis is outside the setting range.	
Positioning	502	Illegal data No.	 The positioning data No. tried to be executed is outside the ranges of 1 to 600, 7000 to 7004, and 9001 to 9004. The designation of a JUMP destination is executed currently. The designation of a JUMP destination is outside the ranges of 1 to 600. 	The positioning data is not executed.
operation	503	No command speed	 At the start of positioning, a current speed (-1) is set for the command speed of the positioning data to be initially executed. The current speed is set by speed control. The current speed is set for speed-position switching control or position-speed switching control. 	At the start of positioning, operation does not start.

	add	fer mer ress Axis 3		Set rang (Setting with seque		Remedy
Re	fer to S	Section :	5.4	<condition data="" no.=""></condition>		Review the condition data No. (Refer to Section 5.4 Da.14)
Refer to Section 5.5 "List of condition data"				10 20 20 40 50		Normalize the condition operators. (Refer to Section 5.5 Da.16)
1540	1640	1740	1840	Axis 1 start data No.		
1541	1641	1741	1841	Axis 2 start data No.	Simultaneous start axis start data No.	Normalize the simultaneous start axis start data No.
1542	1642	1742	1842	Axis 3 start data No.	0 to 600	(Refer to Section 10.5)
1543	1643	1743	1843	Axis 4 start data No.		
1500	1600	1700	1800	<positioning 1="" 600="" 70="" 7000="" 9001="" 9<="" s="" td="" to=""><td>0, 004,</td><td>Normalize the positioning start No., positioning start</td></positioning>	0, 004,	Normalize the positioning start No., positioning start
						data (in block start), and positioning data (in JUMP instruction).
		Section : tioning (<pre><command 1="" 1000000="" 2000000000="" 4000000="" :="" [puls="" [×10⁻²mm="" c="" c<="" min="" or="" pre="" qd75d□="" qd75d□:="" qd75p□="" qd75p□n="" to=""/></pre>	N: se/s] others] se/s]	Normalize the positioning data.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
Positioning operation	504	Outside linear movement amount range	 When the parameter or positioning data "Interpolation speed designation method" performs a linear interpolation in setting a "composite speed", the axis movement amount for each positioning data exceeds 1073741824(2³⁰). The positioning address is –360.00000 or more using INC instruction, where the control unit is set to "degree" and software stroke limit upper limit is not equal to the software stroke limit lower limit. 	At start: The system will not operate. During operation: The system stops immediately.
	506	Large arc error deviation	When an arc or helical is interpolated with center point designation, a difference between a radius of start point-center point and a radius of end point-center point exceeds the parameter "Allowable circular interpolation error width".	At start: The system will not operate. During operation: The system will stop immediately.

Related buffer memory address Axis 1 Axis 2 Axis 3 Axis 4	Set range (Setting with sequence program)	Remedy
Refer to Section 5.3 "List of positioning data"	<positioning address="" amount="" movement=""> • ABS unit [mm] [pulse] [inch] –2147483648 to 2147483647 Unit [degree] 0 to 35999999 • INC (When software stroke limits are valid) Unit [degree]: –35999999 to 35999999 Unit [mm], [pulse], [inch]: –2147483648 to 2147483647 (When software stroke limits are invalid) –2147483648 to 2147483647 • Speed-position switching INC mode: 0 to 2147483647 ABS mode: 0 to 35999999 • Position-speed switching 0 to 2147483647 <arc address=""> –2147483648 to 2147483647</arc></positioning>	Review the positioning address. • Center point address (arc address) • End address (positioning address) Correct.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
Positioning operation	507	Software stroke limit+	 Positioning is carried out at a position beyond the software stroke limit upper limit. The positioning address and new current value exceed the software stroke limit upper limit. The sub point exceeds the software stroke limit upper limit in the circular interpolation or helical interpolation with sub point designation. 	At start: The system will not operate. In the analysis of new current value: Current value is not changed. During operation: • The system stops immediately when the positioning address during position control (including position control in speed-position switching control or position-speed switching control) is switched to the data outside the software
	508	Software stroke limit–	 Positioning is carried out at a position beyond the software stroke limit lower limit. The positioning address and new current value exceed the software stroke limit lower limit. The sub point exceeds the software stroke limit lower limit in the circular interpolation or helical interpolation with sub point designation. 	stroke limit range. • The system makes a stop at the setting (normal deceleration stop only) of sudden stop selection (stop group 3) in the detailed parameter 2 when the current feed value or machine feed value during speed control (including speed control in speed-position switching control or position-speed switching control) or during manual control falls outside the software stroke limit range.

Related buffer memory address				Set range	Remedy		
Axis 1	1 Axis 2 Axis 3 Axis 4		Axis 4	(Setting with sequence program)	·		
N	ew curr	rent valu	ıe				
1506 1507	1606 1607	1706 1707	1806 1807		At start: Bring the current feed value into the software stroke limit using the manual control operation.		
So		stroke li r limit	mit	-2147483648 to 2147483647 • [degree] 0 to 35999999	(Refer to CHAPTER 11) Correct the positioning address (Also check the arc address in the circular interpolation or helical interpolation with sub point designation.).		
18 19	168 169	318 319	468 469		New current value: Bring the new current value into the softwar stroke limit. (Refer to Section 9.2.21) During operation:		
Software stroke limit lower limit		mit		Correct the positioning address. (For the positioning and arc addresses, refer to Da.6 and Da.7 in Section 5.3.)			
20 21	170 171	320 321	470 471				

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	514	Outside new current value range	The new current address is outside the ranges of 0 to 359.99999, where the control unit is set to "degree".	
	515	New current value not possible	 The operation pattern "continuous path control" is set in the positioning data in which the control system "current value changing" is set. The control system "current value changing" is set in the positioning data following the positioning data in which the operation pattern "continuous path control" is set. 	The current value is not changed.
Positioning operation	516	Continuous path control not possible	The continuous path control is designated using a control system which is not allowed to use for continuous path control such as speed control, speed-position switching control, position-speed switching control, fixed-feed, and current value change. The previous data such as those on speed control, speed-position switching control, position-speed switching control, fixed-feed, and current value change shows a continuous path control. The continuous positioning control is designated for speed control or position-speed switching control.	At start, the system will not operate.
	518	Outside operation pattern range	The operation pattern set value is 2.	At start: The system will not operate. During operation: The system stops with the
	519	Interpolation while interpolation axis BUSY	Interpolation is started during the operation of the interpolation axis.	setting (deceleration stop/sudden stop) of the detailed parameter 2
	520	Unit group unmatched	When the "composite speed" has been set in "Interpolation speed designation method" of the parameter or positioning data, the units of the reference axis and interpolation axis differ.	Sudden stop selection (stop group 3). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
	521	Illegal interpolation description command	The self-axis or a non-existent axis is set as the axis to be interpolated in the 2-axis interpolation or helical interpolation.	

Related buffer memory address			nory	Set range	Remedy
Axis 1 Axis 2 Axis 3 Axis 4		Axis 4	(Setting with sequence program)		
1506 1507	1606 1607	1706 1707	1806 1807	<new current="" value=""> [degree] 0 to 35999999</new>	Bring the new current value into the setting range. (Refer to Section 9.2.21)
				<control system=""> 01н to 1Ен, 80н to 84н • 03н, 0Сн, 17н, 1Сн: 1 to 4 axis fixed-feed control</control>	 Do not designate the "continuous path control" using the "current value changing". Do not designate the "current value changing" using the positioning data following the positioning data that the "continuous path control" is designated. (Refer to Section 9.2.21)
Refer to Section 5.3 "List of positioning data"				 04н, 05н, 13н, 14н, 18н, 19н, 1Dн, 1Ен: 1 to 4 axis speed control 81н: current value changing Speed-position switching control: 06н, 07н Position-speed switching control: 08н, 09н Operation pattern> 00, 01, 11 01: Continuous positioning control 11: Continuous path control 	 Do not designate a speed control, fixed-feed, speed-position switching control, position-speed switching control, and current value change using the positioning data following the continuous path control data. Do not carry out the fixed-feed, speed control, speed-position switching control, position-speed switching control, and current value change using the continuous path control operation pattern. Do not carry out the speed control and position-speed switching control using the continuous path control operation pattern. (Refer to CHAPTER 9)
		Sam	e as er	ror codes 515 to 516	Correct the operation pattern. (Refer to Section 5.3 Da.1) Correct the control system.
					(Refer to Section 5.3 Da.2)
0	150	300	450	<unit setting=""> 0, 1, 2, 3</unit>	Correct the positioning data or change the parameter "Unit setting" of the axis to be interpolated. (Refer to Section 9.1.6)
		Sam	ie as er	ror codes 515 to 516	Correct the control system. (Refer to Section 5.3 Da.2) Correct the axis to be interpolated. (Refer to Section 5.3 Da.5)

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	522	Command speed setting error	The command speed is outside the setting range. Linear interpolation, circular interpolation, helical interpolation: Reference axis is outside the setting range. Speed control interpolation: Either of reference axis and interpolation axis is outside the speed range.	
	523	Interpolation mode error	parameter or positioning data of the reference axis. In the circular interpolation control or helical interpolation control, the system is started while a reference axis speed is set in "Interpolation speed designation method" of the	At start: The system will not operate. During operation: The system stops with the setting (deceleration stop/sudden stop) of the detail parameter 2 Sudden stop selection (stop group 3). (Note that the deceleration stop only occurs during the manual pulse
Positioning operation	524	Control system setting error	 The control system setting value is outside the specified limit. The number of control axes or the axis to be interpolated differs from the previous data when the operation is continuously performed by setting the continuous positioning control or continuous path control. Machine OPR, fast OPR, or speed-position or position-speed switching control was performed in the wiring-less mode. The NOP instruction was set to the control system of positioning data No. 600. Any value other than 0 was set at buffer memory address 1906 (use prohibited area). 	generator operation.)
	525	Sub point setting error	One of the following settings is configured in circular interpolation or helical interpolation with sub point designation. • Start point = sub point • End point = sub point • Start point, end point, and sub point are in line with each other. • Sub point address and center point address are outside the range of —2147483648 to 2147483647.	At start: The system will not operate. During operation: The system stops immediately.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence	
	526	End point setting error	 The start point is equal to the end point in circular interpolation or helical interpolation with sub point designation. The end point address is outside the range of -2147483648 to 2147483647 in circular interpolation or helical interpolation with sub point designation or center point designation. 	At start: The system will not operate. During operation: The system stops immediately.	
	527	Center point setting error	One of the following settings is configured in circular interpolation or helical interpolation with center point designation. • Start point = Center point • End point = Center point • Center point address is outside the range of –2147483648 to 2147483647.	At start: The system will not operate. During operation: The system stops immediately.	
	530	Outside address range	 In the speed-position switching control and the position-speed switching control, the setting value of a positioning address is negative. In the 1-axis linear control (ABS), 2-to 4-axis linear interpolation control (ABS), or helical interpolation control (ABS), the setting value of a positioning address is outside the range of 0 to 359.99999 [degree]. 	selection (stop group 3).	
Positioning operation	532	Simultaneous start not possible	Among the axes to be started simultaneously, there is an axis on which an error other than this error occurs.	(Note that the deceleration stop only occurs during the manual pulse generator operation.)	
	533	Condition data error	 The condition setting values are not set or outside the setting range. The condition operator setting values are not set or outside the setting range. The condition operator is a bit operator, and the parameter 1 is 32 or more. An unusable condition operator is set for the set condition. The conditional operator has been [parameter 1 > parameter 2] with 05H (P1 ≤ ** ≤ P2). The value in 'address' is out of the setting range when the condition target is set to 'Buffer memory (1-word/2-word)'. (1-word: 0 to 32767, 2-word: 0 to 32766) 		
	534	Special start instruction error	No applicable special start instruction is present.		
	535	Circular interpolation not possible	The circular interpolation or helical interpolation is carried out for the axis with the "degree" unit setting.		

Related buffer memory address Axis 1 Axis 2 Axis 3 Axis 4	Set range (Setting with sequence program)	Remedy
	Same as in error codes 525.	Correct the end address (positioning address). (Refer to Section 9.2.10, 9.2.12)
Refer to Section 5.3 "List of positioning data"		Correct the center point address (arc address). (Refer to Section 9.2.11, 9.2.13)
	Same as in error codes 504, 506.	Correct the positioning address. (Refer to Section 9.2.18, 9.2.19, 9.2.20)
Refer to Section 5.3 "List of positioning data" and Section 5.4 "Block start data"	_	In the error history, check the axis where the error other than this error occurred, and remove the error factor. Correct the block start data and positioning data.
Refer to Section 5.4 "Block start data"	_	Normalize the block start data.
	<special instruction="" start=""> 00н to 06н</special>	Correct the special start instruction code. (Refer to Section 5.4 Da.13)
Refer to Section 5.3 "List of positioning data"	_	Correct the control system. (Refer to Section 5.3 Da.2)

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	536	M code ON signal start	The positioning start is carried out when an M code ON signal (X4 to X7) is turned ON.	
	537	PLC READY OFF start	The positioning start is carried out when the PLC READY signal (Y0) is turned OFF.	
	538	READY OFF start	The positioning start is carried out when the QD75 READY signal (X0) is turned OFF.	At start, the system will not operate.
	543	Outside start No. range	 At the start of positioning, the setting value of the "positioning start No." of the axis control data is outside the ranges of 1 to 600, 7000 to 7004, and 9001 to 9004. At a Pre-reading start, the "positioning start No." setting of the axis control data is other than 1 to 600. 	Troidin, and System min more operation.
	544	Outside radius range	The arc radius exceeds 536870912.	At start: The system will not operate. During operation: The system stops immediately.
	545	Control system LOOP setting error	A "0" is set for number of repetitions of the control system "LOOP".	The operation is terminated.
Positioning operation	546	Illegal setting of ABS direction in unit of degree	The setting value of ABS direction in the unit of degree is as follows. • Set outside the setting range. • A figure other than "0" is set when the software stroke limit is valid.	At start: The system will not operate. During operation: The system decelerates to a stop. (Note that, in the continuous positioning control and continuous path control, the system continues operating with the setting set at the time of start even if the setting is changed during the operation.)
	553	M code ON timing error	The setting value of the positioning data "M code ON signal output timing" is outside the range.	At start: The system will not operate. During operation: The system stops with the
	554	Interpolation speed designation method error	The setting value of the positioning data "Interpolation speed designation method" is outside the range.	setting (deceleration stop/sudden stop) of the detailed parameter 2 sudden stop selection (stop group 3).
	555	Outside range of the number of pitches	In the helical interpolation, the number of pitches set in the positioning data "M code" of the linear interpolation axis is outside the range.	

		add	fer mer ress Axis 3		Set range (Setting with sequence program)	Remedy
	1504	1604	1704	1804	<m code="" off="" request=""> 1: M code ON signal is turned OFF</m>	After turning OFF the M code ON signal, start the system. (Refer to Section 12.7.3)
	_	_		_		Check the sequence program which turns ON/OFF the PLC READY signal (Y0), and turn ON the PLC READY signal. Then start the system.
	_	_		_	_	Check the QD75 READY ON signal, and then start the system. (Refer to Section 3.3.2)
	1500	1600	1700	1800	<positioning no.="" start=""> 1 to 600, 7000 to 7004, 9001 to 9004</positioning>	Normalize the positioning start No. (Refer to Section 12.7.7)
			ection (<maximum radius=""> 536870912</maximum>	Correct the positioning data. (Refer to Section 9.2.10, 9.2.11)
					<loop lend="" to=""> 1 to 65535</loop>	Set 1 to 65535 for number of repetitions of the "LOOP". (Refer to Section 9.2.22)
	ABS setting direction in the unit of degree			in the 1850	0: Shortcut 1: ABS clockwise 2: ABS counterclockwise	Set the ABS setting direction in the unit of degree within the setting range. Set "0" when the software stroke limits are valid. (Refer to Section 9.1.5)
	Sof		stroke li r limit	mit		(Neier to Geotion 9.1.3)
	upper limit 18		469 mit 470	• [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	Invalidate the software stroke limit. (To invalidate, set the software stroke limit upper limit value to the software stroke limit lower limit value.) (Refer to Section 9.1.5)	
	Refer to Section 5.3 "List of positioning data"				0: Use the set value in "Pr.18 M code ON signal output timing". 1: WITH mode 2: AFTER mode	Correct the positioning data "M code ON signal output timing" to 0 to 2.
					O: Use the set value in "Pr.20 Interpolation speed designation method". 1: Composite speed 2: Reference axis speed	Correct the positioning data "Interpolation speed designation method" to 0 to 2.
					<number of="" pitch=""> 0 to 999</number>	Correct the number of pitch set in the positioning data "M code" of the linear interpolation axis to 0 to 999.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence	
l/F	800	Hold error	In the CPU module parameter "Output at error stop", the setting for QD75 is "Hold".	At start: The system will not operate. During operation: The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 sudden stop selection (stop group 3). (Note that the deceleration stop only occurs during the manual pulse generator operation.)	
	801	Flash ROM write error	Data is not written to the flash ROM.	-At start: The system will not operate.	
	802	Flash ROM sum check error	While data is written to the flash ROM, the power is turned OFF.		

Related buffer memory address				Set range	Remedy
 Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,
_	_	_		_	Clear the setting of the CPU module parameter "Output at error stop".
_	_	_	_	_	The flash ROM is expected to be at the end of its writable life. Replace the flash ROM with a new one.
1901				<parameter initialization="" request=""> 1: Parameter initialization is requested</parameter>	Return the parameter to that set at the time of delivery from the plant. (Refer to Section 13.2)

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	803	PLC CPU error	The CPU module resulted in an error.	At start: The system will not operate. During operation: The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 sudden stop selection (stop group 2). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
l/F	804 Dedicated instruction		The Z.ABRST☐ instruction is executed with the status set to other than 0 (at the start of communication with the servoamplifier). The status of the Z.ABRST☐ instruction is changed during absolute position restoration (during communication with the servo-amplifier). The ZP.PSTRT☐ instruction is executed with the start No. set to other than 1 to 600, 7000 to 7004 and 9001 to 9004. The ZP.TEACH☐ instruction is executed with the teaching data selection set to other than 0 and 1. The ZP.TEACH☐ instruction is executed with the positioning data No. set to other than 1 to 600. The instruction of a non-existent axis is specified by the Z.ABRST☐, ZP.PSTRT☐ or ZP.TEACH☐ instruction.	The function corresponding to the instruction is not executed.
	805	Flash ROM write number error	Data is written to the flash ROM continuously 25 times or more from the sequence program.	At start: The system will not operate.
	806	Dedicated instruction I/F error	Mismatching occurs between the CPU module and QD75.	

-	ited buf add	ress	_	Set range (Setting with sequence program)	Remedy
Axis 1	Axis 2	Axis 3	Axis 4	—	Check the error code of CPU module and refer to the QCPU User's Manual.
		_	_	<pre><z.abrst□ status=""> 0: Communication complete (received from the servo amplifier) <zp.pstrt□ no.="" start=""> 1 to 600 7000 to 7004 9001 to 9004 <zp.teach□ data="" selection="" teaching=""> 0: The current feed value is written to the positioning address. 1: The current feed value is written to the arc address. <zp.teach□ data="" no.="" positioning=""> 1 to 600</zp.teach□></zp.teach□></zp.pstrt□></z.abrst□></pre>	within the setting range (refer to Section 14.5).
_	_	_	_	_	Review the sequence program so that data is not written continuously to the flash ROM. (Using Md.19 in Section 5.6.1, the number of flash ROM write times can be monitored.) (If this error has occurred in a proper using method, writing is enabled by resetting the error, switching power OFF, then ON, or resetting the CPU module.)
_	_		_		A trouble occurs. Repair.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence		
	900	Outside unit setting range	The set value of the basic parameter 1 "Unit setting" is outside the setting range.			
	901	Outside pulse number per rotation range	The set value of the basic parameter 1 "No. of pulses per rotation" is outside the setting range.			
	902	Outside movement amount per rotation range	The set value of the basic parameter 1 "Movement amount per rotation" is outside the setting range.			
	903	Outside unit magnification range	The set value of the basic parameter 1 "Unit magnification" is outside the setting range.			
	904	Pulse output mode error	The set value of the basic parameter 1 "Pulse output mode" is outside the setting range.	The QD75 READY signal (X0) is not turned ON.		
	905	Rotation direction setting error	The set value of the basic parameter 1 "Rotation direction setting" is outside the setting range.			
Donosto	906	Outside bias speed range	 The set value of the basic parameter 1 "Bias speed at start" is outside the setting range. The bias speed exceeds the speed limit. 			
Parameter .	910	Outside speed limit value range	 The set value of the basic parameter 2 "Speed limit value" is outside the setting range. The value obtained by the conversion of the speed limit value with respect to the frequency exceeds the maximum output frequency of the unit. The speed limit value is smaller than the OPR speed. 			
	911	Outside acceleration time 0 range	The set value of the basic parameter 2 "Acceleration time 0" is outside the setting range.	At start: The system will not operate.		
	912	Outside deceleration time 0 range	The set value of the basic parameter 2 "Deceleration time 0" is outside the setting range.			
	920	Backlash compensation amount error	The value converted into pulse number using the movement amount per pulse is 256 pulses or more.			
	921	Software stroke limit upper limit	 In the unit of degree, the set value of the detailed parameter 1 "Software stroke limit upper limit value" is outside the setting range. In a unit other than degree, the software stroke limit upper limit value 	The QD75 READY signal (X0) is not turned ON.		

Rela	ated buffer memory address		nory	Set range	Remedy
Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,
0	150	300	450	0, 1, 2, 3	
1	151	301	451	1 to 65535	
2	152	302	452	1 to 65535	With the setting brought into the setting range, turn the
3	153	303	453	1, 10, 100, 1000	PLC READY signal [Y0] from OFF to ON.
4	154	304	454	0, 1, 2, 3	
5	155	305	455	0, 1	
6 7	156 157	306 307	456 457	QD75P\(\top\N/\QD75D\(\top\N)\): 0 to 4000000 [pulse/s] 0 to 2000000000 [\times 10^2 mm/min or others] QD75P\(\top\/\QD75D\(\top\): 0 to 1000000 [pulse/s] 0 to 2000000000 [\times 10^2 mm/min or others]	Set the bias speed to not more than the speed limit value. With the setting brought into the setting range, turn the PLC READY signal [Y0] from OFF to ON.
10 11	160 161	310 311	460 461	QD75P_N/QD75D_N: 1 to 4000000 [pulse/s] 1 to 2000000000 [\times 10^2 mm/min or others] QD75P_/QD75D_: 1 to 1000000 [pulse/s] 1 to 2000000000 [\times 10^2 mm/min or others]	The value converted into the frequency should not exceed the maximum output frequency of the module. Set a value which is not less than the OPR speed. With the setting brought into the setting range, turn the PLC READY signal [Y0] from OFF to ON.
12 13	162 163	312 313	462 463	1 to 8388608	With the setting brought into the setting range, turn the
14 15	164 165	314 315	464 465	1 to 8388608	PLC READY signal [Y0] from OFF to ON.
17	167	317	467	0 to 255	Set the value converted into the pulse number using "the movement amount per pulse" to less than 256 pulses. (Refer to Section 12.3.1)
18 19	168 169	318 319	468 469	• [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	Bring the setting into the setting range. In a unit other than degree, set the setting so that the lower limit value is smaller than the upper limit value.

Classification of errors	Error code	Error name	Error	Operation status at error occurrence		
	922	Software stroke limit lower limit	 In the unit of degree, the set value of the detailed parameter 1 "Software stroke limit lower limit value" is outside the setting range. In a unit other than degree, the software stroke limit upper limit value is smaller than the software stroke limit lower limit value. 			
	923	Software stroke limit selection	The set value of the detailed parameter 1 "Software stroke limit selection" is outside the setting range.			
	924	Software stroke limit valid/invalid setting	The set value of the detailed parameter 1 "Software stroke limit valid/invalid setting" is outside the setting range.			
	925	Command in-position width	The set value of the detailed parameter 1 "Command in-position width" is outside the setting range.			
	926	Illegal torque limit setting value	The set value of the detailed parameter 1 "Torque limit setting value" is outside the setting range.			
	927	M code ON timing error	The set value of the detailed parameter 1 "M code ON signal output timing" is outside the setting range.	The QD75 READY signal (X0) is not turned ON.		
	928	Speed changeover mode error	The set value of the detailed parameter 1 "Speed changeover mode" is outside the setting range.			
Parameter	929	Interpolation speed designation method error	designation method 1 "Interpolation speed designation method" is outside the setting range. Current value update 1 "Current feed value during speed			
	930	Current value update request error				
	932	Manual pulse generator input mode error	The set value of the detailed parameter 1 "Manual pulse generator input selection" is outside the setting range.			
	935	Speed-position function selection error	The detailed parameter 1 "speed-position function selection" is preset to 2 and the following three conditions are not satisfied: 1) Unit is "degree". 2) Software stroke limits are invalid. 3) Update current feed value.			
	950	Acceleration time 1 setting error	The set value of the detailed parameter 2 "Acceleration time 1" is outside the setting range.	At start: The system will not operate.		
	951	Acceleration time 2 setting error	The set value of the detailed parameter 2 "Acceleration time 2" is outside the setting range.	During operation: The system stops with the setting (deceleration stop/sudden stop) of the		
	952	Acceleration time 3 setting error	The set value of the detailed parameter 2 "Acceleration time 3" is outside the setting range.	detailed parameter 2 sudden stop selection (stop group 3).		
	953	Deceleration time 1 setting error	The set value of the detailed parameter 2 "Deceleration time 1" is outside the setting range.	(Note that the deceleration stop only occurs during the manual pulse generator operation.)		

Rela	ted buf addr	fer men ess	nory	Set range	Remedy
 Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	·
20 21	170 171	320 321	470 471	• [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	Bring the setting into the setting range. In a unit other than degree, set so that the lower limit value is smaller than the upper limit value.
22	172	322	472	0, 1	
23	173	323	473	0, 1	
24 25	174 175	324 325	474 475	1 to 2147483647	
26	176	326	476	1 to 500	
27	177	327	477	0, 1	With the setting brought into the setting range, turn the PLC READY signal [Y0] from OFF to ON.
28	178	328	478	0, 1	
29	179	329	479	0, 1	
30	180	330	480	0, 1, 2	
33			ĺ	0, 1, 2, 3	
34	184	334	484	0, 2	Speed-position switching control (ABS mode) should satisfy the conditions 1) to 3) given on the left. When speed-position switching control (ABS mode) is not to be exercised, set 0 to speed-position function selection and turn the PLC READY signal (Y0) from OFF to ON.
36 37	186 187	336 337	486 487	1 to 8388608	
38 39	188 189	338 339	488 489	1 to 8388608	With the setting brought into the setting range, turn the
40 41	190 191	340 341	490 491	1 to 8388608	PLC READY signal [Y0] from OFF to ON.
42 43	192 193	342 343	492 493	1 to 8388608	

Classification of errors	Error code	Error name	Error	Operation status at error occurrence
	954	Deceleration time 2 setting error	The set value of the detailed parameter 2 "Deceleration time 2" is outside the setting range.	
	955	Deceleration time 3 setting error	The set value of the detailed parameter 2 "Deceleration time 3" is outside the setting range.	
	956	JOG speed limit value error	 The set value of the detailed parameter 2 "JOG speed limit value" is outside the setting range. The set range of the detailed parameter 2 "JOG speed limit value" exceeds the speed limit. 	
	957	JOG acceleration time selection setting error	The set value of the detailed parameter 2 "JOG acceleration time selection setting" is outside the setting range.	
	958	JOG deceleration time selection setting error	The set value of the detailed parameter 2 "JOG deceleration time selection setting" is outside the setting range.	At start: The system will not
	959	Acceleration/ deceleration process selection setting error	The set value of the detailed parameter 2 "Acceleration/deceleration process selection setting" is outside the setting range.	operate. During operation: The system stops with the setting (deceleration stop/sudden stop) of the detailed parameter 2 Sudden stop selection
Parameter	960	S-curve ratio setting error	The set value of the detailed parameter 2 "S-curve ratio" is outside the setting range.	
rarameter	961	Illegal sudden stop deceleration time	The set value of the detailed parameter 2 "Sudden stop deceleration time" is outside the setting range.	(stop group 3). (Note that the deceleration stop only occurs during the manual pulse generator operation.)
	962	Stop group 1 sudden stop selection error	The set value of the detailed parameter 2 "Stop group 1 sudden stop selection" is outside the setting range.	generator operation.)
	963	Stop group 2 sudden stop selection error	The set value of the detailed parameter 2 "Stop group 2 sudden stop selection" is outside the setting range.	
	964	Stop group 3 sudden stop selection error	The set value of the detailed parameter 2 "Stop group 3 sudden stop selection" is outside the setting range.	
	966	Outside allowance circular interpolation error width	The set value of the detailed parameter 2 "Allowance circular interpolation error width" is outside the setting range.	
	967	External command function selection error	The set value of the detailed parameter 2 "External command function selection" is outside the setting range.	
	980	OPR method error	The set value of the OPR basic parameter "OPR method" is outside the setting range.	The QD75 READY signal (X0) is not turned ON.

	Rela		fer mer ress	nory	Set range	Remedy
	Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	·
	44 45	194 195	344 345	494 495	1 to 8388608	With the setting brought into the setting range, turn the
	46 47	196 197	346 347	496 497	1 to 8388608	PLC READY signal [Y0] from OFF to ON.
	48 49	198 199	348 349	498	QD75P\(\text{\text{\text{N/QD75D}\text{\text{N}}}\): 1 to 4000000 [pulse/s] 1 to 2000000000 [\text{\te\tinte\text{\text{\text{\text{\text{\text{\text{\text{\text{\tex{\tex	With the setting brought into the setting range, turn the PLC READY signal [Y0] from OFF to ON. Bring the setting into the speed limit value or below.
	50	200	350	500	0, 1, 2, 3	
	51	201	351	501	0, 1, 2, 3	
	52	202	352	502	0, 1	
	53	203	353	503	1 to 100	
	54 55	204 205	354 355	504 505	1 to 8388608	
	56	206	356	506	0, 1	With the setting brought into the setting range, turn the
	57	207	357	507	0, 1	PLC READY signal [Y0] from OFF to ON.
	58	208	358	508	0, 1	
	60 61	210 211	360 361	510 511	0 to 10000	
·	62	212	362	512	0, 1, 2, 3	
	70	220	370	520	0, 1, 2, 3, 4, 5	

Classification of errors	Error code	Error name	Error	Operation status at error occurrence	
	981	OPR direction error The set value of the OPR basic parameter "OPR direction" is outside the setting range.			
	982	OP address setting error	The set value of the OPR basic parameter "OP address" is outside the setting range.		
	983	OPR speed error	 The set value of the OPR basic parameter "OPR speed" is outside the setting range. The set value of the OPR basic parameter "OPR speed" is smaller than the bias speed at start. 		
	984	Creep speed error	 The set value of the OPR basic parameter "Creep speed" is outside the setting range. The set value of the OPR basic parameter "Creep speed" is larger than the OPR speed. The set value of the OPR basic parameter "Creep speed" is smaller than the bias speed at start. 		
	985	OPR retry error	The set value of the OPR basic parameter "OPR retry" is outside the setting range.		
Parameter	991	Setting for the movement amount after near-point dog ON error	The set value of the OPR detailed parameter "Setting for the movement amount after near-point dog ON" is outside the setting range.	The QD75 READY signal (X0) is not turned ON.	
	992	OPR acceleration time selection error	The set value of the OPR detailed parameter "OPR acceleration time selection" is outside the setting range.		
	993	OPR deceleration time selection error	The set value of the OPR detailed parameter "OPR deceleration time selection" is outside the setting range.		
	995	OPR torque limit value error	The set value of the OPR detailed parameter "OPR torque limit value" is outside the setting range. The OPR detailed parameter "OPR torque limit value" has exceeded the detailed parameter 1 "Torque limit setting value".		
	996	Deviation counter clear signal output time setting error	The set value of the OPR detailed parameter "Deviation counter clear signal output time" is outside the setting range.		
	997	Speed designation during OP shift error	The set value of the OPR detailed parameter "Speed designation during OP shift" is outside the setting range.		

Rela	ated buf add		nory	Set range (Setting with sequence program)	Remedy
Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	
71	221	371	521	0, 1	With the setting brought into the setting range, turn the
72 73	222 223	372 373	522 523	• [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	PLC READY signal [Y0] from OFF to ON.
74 75	224 225	374 375	524 525	QD75P⊡N/QD75D⊡N: 1 to 4000000 [pulse/s]	 Bring the setting into the setting range. Set the speed to the bias speed at start or higher. (Refer to Section 5.2.5)
76 77	226 227	376 377	526 527	1 to 2000000000 [×10 ⁻² mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10 ⁻² mm/min or others]	 Bring the setting into the setting range. Set the speed to that below the OPR speed. Set the value to the bias speed at start or higher. (Refer to Section 5.2.5)
78	228	378	528	0, 1	
80 81	230 231	380 381	530 531	0 to 2147483647	
82	232	382	532	0, 1, 2, 3	
83	233	383	533	0, 1, 2, 3	With the setting brought into the setting range, turn the
86	236	386	536	1 to 300	PLC READY signal [Y0] from OFF to ON.
87	237	387	537	1 to 65535	
88	238	388	538	0, 1	

15.4 List of warnings

15

The following table shows the warning details and remedies to be taken when a warning occurs.

		warriing occurs.	T	
Classification of warnings	Warning code	Warning name	Warning	Operation status at warning occurrence
_	000	(Normal status)	_	_
	100	Start during operation	The start request is issued while the axis is BUSY.	Continue the operation.
	102	Deviation counter clear request	The deviation counter clear request is issued while the axis is BUSY.	The deviation counter clear request is ignored.
	104	Restart not possible	The restart command is issued when the axis operation status is not "Stopped".	Continue the operation.
	109	Teaching in BUSY	The teaching request is issued while the axis is BUSY.	The warning is issued for the axis designated at the time of the teaching request.
	110	Less than minimum speed	The overridden speed becomes "0".	The system is controlled with the currently executing unit of 1.
	111	In PLC READY	The request for writing to the flash ROM is issued when the PLC READY is turned ON.	The warning for axis 1 is issued.
Common		Illegal override value	A value other than 1 to 300 is set for the override value.	Controlled at a setting value of 0:100. Controlled at a setting value of 301 or over: 300.
	113	Outside new torque value range	The new torque value exceeds the torque limit setting value.	Set a value smaller than the torque limit setting value to the new torque value.
	114	Below bias speed	The command speed is below the bias speed at start.	Operate by the bias speed at start.

	Rela	ited buf add		mory	Set range	Remedy	
	Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,	
	_	_	_		_	_	
	_	1	1	_	_	Normalize the start request ON timing.	
				_	_	Do not carry out the deviation counter clear while the axis is running. (Refer to CHAPTER 8)	
	1503	1603	1703	1803	<restart command=""> 1: Restart</restart>	Normalize the start request ON timing. (Refer to Section 6.5.5) (Do not issue the restart command when the axis operation is not stopped.)	
	1548 1549	1648 1649	1748 1749	1848 1849	<teaching data="" selection=""> 0, 1 <teaching data="" no.="" positioning=""> 1 to 600</teaching></teaching>	Carry out the teaching request when the axis is not BUSY. (Refer to Section 12.7.4)	
	1513	1613	1713	1813	<positioning operation="" override="" speed=""> 1 to 300</positioning>	Prevent the overridden speed from being reduced to 0. (Refer to Section 12.5.2)	
		19 19			<flash request="" rom="" write=""> 1: Flash ROM write request <parameter initialization="" request=""> 1: Parameter initialization request</parameter></flash>	Issue a write request when PLC READY signal (Y0) is OFF.	
	1513	1613	1713	1813	<positioning operation="" override="" speed=""> 1 to 300</positioning>	Set a value within the setting range.	
	1525	1625	1725	1825	<new torque="" value=""> 1 to [Torque limit set value]</new>	Set a value smaller than the torque limit setting value to	
	26	176	326	476	<torque limit="" set="" value=""> 1 to 500</torque>	the new torque value.	
	"List	fer to S of posit comma	ioning	data"	<pre><command speed=""/> QD75P□N/QD75D□N: 1 to 4000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others]</pre>	Re-set the command speed/bias speed at start so that	
•	Bias speed at start			art	<bias at="" speed="" start=""></bias>	the command speed is equal to or larger than the bias speed at start.	
	6 7	156 157	306 307	456 457	QD75P_N/QD75D_N: 0 to 4000000 [pulse/s] 0 to 2000000000 [\times10^2\text{mm/min or others}] QD75P_/QD75D_: 0 to 1000000 [pulse/s] 0 to 2000000000 [\times10^2\text{mm/min or others}]	apood at start.	

Classification of warnings	Warning code	Warning name	Warning	Operation status at warning occurrence
	300	Speed change during deceleration	The speed change request is issued during deceleration stop with JOG start signal OFF.	The speed change is not carried out.
JOG	301	JOG speed limit value	The JOG speed exceeds the JOG speed limit value at the JOG start. The new speed value exceeds the JOG speed limit value when the speed is changed during operation.	When the speed exceeds the JOG speed limit, the JOG operation is carried out with the JOG speed limit value. While the speed is limited by the JOG speed limit value, the "Speed limiting flag" is turned ON.
Manual pulse generator	401	Outside manual pulse generator input magnification range	The manual pulse generator 1 pulse input magnification is set as follows. • 0 or 1001 or higher (QD75P□N/QD75D□N) • 0 or 101 or higher (QD75P□/QD75D□)	When input magnification is set at 1001 or higher: Re-set to 1000. (QD75P□N/QD75D□N) When input magnification is set at 101 or higher: Re-set to 100. (QD75P□/QD75D□) When input magnification is set at 0: Re-set to 1.

	Related buffer memory address			nory	Set range	Remedy	
	Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,	
	1516	1616	1716	1816	<speed change="" request=""> 1: Speed change is requested</speed>	Do not carry out the JOG speed change during deceleration with the JOG start signal OFF.	
	N	ew spe	ed valu	ie	QD75P\(\text{N}\)QD75D\(\text{N}\):		
	1514 1614 1714 1814 1515 1615 1715 1815			0 to 4000000 [pulse/s] 0 to 2000000000 [×10 ⁻² mm/min or others] QD75P□/QD75D□: 0 to 1000000 [pulse/s] 0 to 2000000000 [×10 ⁻² mm/min or others]			
Ī	JOG	Speed	limit va	alue	QD75P□N/QD75D□N:	Bring the set value into the setting range.	
	48 198 348 4		498 499	1 to 4000000 [pulse/s] 1 to 2000000000 [×10 ⁻² mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10 ⁻² mm/min or others]			
	1522 1523	1622 1623	1722 1723	1822 1823	<manual 1="" generator="" input="" magnification="" pulse=""> 1 to 1000 (QD75P□N/QD75D□N) 1 to 100 (QD75P□/QD75D□)</manual>	Set the manual pulse generator 1 pulse input magnification to within the setting range.	

Classification of warnings	Warning code	Warning name	Warning	Operation status at warning occurrence
	500	Deceleration/stop speed change	The speed change request is issued during deceleration stop.	The speed change is not carried out.
	501	Speed limit value over	The new value exceeds the speed limit value when the speed is changed during operation.	The speed is controlled with the speed limit value. The "speed limiting flag" is turned ON.
Positioning	503	M code ON signal ON start	The M code ON signal is turned ON when the positioning data is executed.	Continue executing the positioning data.
operation	505	No operation termination setting	In the positioning by block starting, the 50th point of the positioning start data is set to CONTINUE.	The operation is terminated.
	506	FOR to NEXT nest construction	FOR to NEXT is nested.	
	508	Speed-position switching (during acceleration) signal ON	The switching signal for speed- position switching control (INC mode) is turned ON during acceleration.	The operation is continued.
	509	Insufficient remaining distance	 At a continuous operation interrupt request, the distance required deceleration stop is not long enough. At a speed change request, the remaining distance is shorter than the distance required for speed change. 	When a command speed is changed: Change to a value as near a new speed value as possible. When a target position is changed: Adjust the speed to a value as near the command speed as possible, and then change to a target position. (When the operation pattern is a continuous path control, ignore the operations stated above.)

Rela	ited buf		nory	Set range	Remedy	
Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	·	
1516	1616	1716	1816	<speed change="" request=""> 1: Speed change is requested</speed>	Do not carry out the speed change during deceleration with a stop command, during stoppage, or during automatic deceleration with position control.	
N	lew spe	ed valu	e	QD75P_N/QD75D_N: 0 to 4000000 [pulse/s]		
1514 1515	1614 1615	1714 1715	1814 1815	0 to 20000000000 [×10 ⁻² mm/min or others] QD75P□/QD75D□: 0 to 1000000 [pulse/s] 0 to 2000000000 [×10 ⁻² mm/min or others]	Set the new speed value to a range of 0 to "speed limit	
S	peed lir	mit valu	е	QD75P\(\text{\bar}\)\\QD75D\(\bar\bar\bar\bar\bar\bar\bar\bar\bar\bar	value".	
10 11	160 161	310 311	460 461	1 to 4000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10⁻²mm/min or others]		
1504	1604	1704	1804	<m code="" off="" request=""> 1: M code ON signal is turned OFF</m>	Normalize the ON and OFF timings of the "M code OFF request". (Refer to Section 12.7.3)	
	fer to S of posit			<operation pattern=""> 00: Positioning complete 01: Continuous positioning control 11: Continuous path control</operation>	Set the operation termination to the 50th point. (Refer to CHAPTER 10)	
					Make 1 nest construction for FOR to NEXT. (Refer to Section 10.3.8)	
_	_	_	_	_	Do not turn ON the speed-position switching signal during acceleration. (Refer to Section 9.2.16)	
			_		Give a request at the position where there is an enough remaining distance.	

Classification of warnings	Warning code	Warning name	Warning	Operation status at warning occurrence
	511	Step not possible	Code 1 is set for the step start information when the step is outside standby.	The step will not start.
	512	Illegal external command function	The detailed parameter 2 "External command function selection" setting range is exceeded.	Even if the external command signal is turned ON, the system will not perform anything.
	513	Insufficient movement amount	The movement amount is not large enough for automatic deceleration.	The system stops immediately after it reaches the positioning address.
	514	Outside command speed range	The command speed exceeds the speed limit.	The command speed is controlled at the "speed limit value". The "speed limiting flag" turns ON.
Positioning operation	516	Illegal teaching data No.	The positioning data No. is set outside the setting range.	Teaching is not carried out when the set value is 0 or 601 or more. (A "0" is canceled by the QD75 automatically even when a "0" or "601" or more is set.)
	517	Illegal teaching data selection	The teaching data selection set value is outside the setting range.	Teaching is not carried out.
	518	Target position change not possible	 A target position change request was given for the control system other than ABS1 and INC1. The target position change request is turned ON during continuous path control. A new target position address is outside the software stroke limit range. A target position change request was given during deceleration to a stop. A target position change request is given while the speed change 0 flag (Md.31 Status: b10) is ON. 	The target position change is not carried out.

	Rela	ited buf add		nory	Set range	Remedy	
•	Axis 1	Axis 2	Axis 3	Axis 4	(Setting with sequence program)	,	
	1546	1646	1746	1846	<step information="" start=""> 1: Step is continued 2: Re-start is carried out</step>	Do not set a "1" to the step start information when the step is not in standby state. (Refer to Section 12.7.1)	
	62	212	362	512	<external command="" function<br="">selection> 0, 1, 2, 3</external>	Set the detailed parameter 2 "External command function selection" to within the setting range.	
		fer to S of posit			_	Set a decelerating address or a movement amount to the positioning data.	
	ref "List	comma fer to So of posit	ection 5	5.3 data"	QD75P□N/QD75D□N: 1 to 4000000 [pulse/s]		
	10 11	160 161	310 311	460 461	1 to 2000000000 [×10 ⁻² mm/min or others] QD75P□/QD75D□: 1 to 1000000 [pulse/s] 1 to 2000000000 [×10 ⁻² mm/min or others]	Set the command speed to within the setting range.	
	1549	1649	1749	1849	<teaching data="" no.="" positioning=""> 1 to 600</teaching>	Set the positioning data No. to within the setting range	
	1548	1648 1748 1848 <teaching data="" selection=""> 0, 1</teaching>			Set the teaching data selection set value to within the setting range.		
	1538	1638	1738	1838	<target change="" position="" request<br="">flag> 1: Target position change request</target>	 Do not turn ON the target position change request in the following cases. An operating pattern "continuous path control" is used. A control system other than ABS1, and INC1 is used. During deceleration stop. When the speed change 0 flag (Md.31 Status: b10) is ON. When the target position change address is outside the stroke limit, correct the target position change address. (Refer to Section 12.5.5) 	

MEMO

APPENDICES

Appendix 1 Version up of the functions	Appendix- 2
Appendix 1.1 Comparison of functions according to function versions	
Appendix 1.2 Precautions for the replacement of QD75P□/QD75D□ with	
QD75P□N/QD75D□N	Appendix- 3
Appendix 2 Format sheets	
Appendix 2.1 Positioning Module operation chart	
Appendix 2.2 Parameter setting value entry table	
Appendix 3 Positioning data (No. 1 to 600) List of buffer memory addresses	
Appendix 4 Connection examples with servo amplifiers manufactured by MITSUBISHI	
Electric Corporation	Appendix- 48
Electric Corporation	
(Differential driver)	Appendix- 48
Appendix 4.2 Connection example of QD75D \square N and MR-H \square A	
(Differential driver)	Appendix- 49
Appendix 4.3 Connection example of QD75D□N and MR-J2/J2S-□ A	
(Differential driver)	Appendix- 50
Appendix 4.4 Connection example of QD75D□N and MR-C □ A	
(Differential driver)	Appendix- 51
Appendix 5 Connection examples with stepping motors manufactured by	
ORIENTALMOTOR Co., Ltd	Appendix- 52
Appendix 5.1 Connection example of QD75P□N and VEXTA UPD	
(Open collector)	Appendix- 52
Appendix 6 Connection examples with servo amplifiers manufactured by	
Panasonic Corporation	Appendix- 53
Appendix 6.1 Connection example of QD75D□N and MINAS-A series	п фронал оо
(Differential driver)	Appendix- 53
Appendix 7 Connection examples with servo amplifiers manufactured by	tppoliant oo
SANYO DENKI Co., Ltd.	Appendix- 54
Appendix 7.1 Connection example of QD75D□N and PYO series	
(Differential driver)	Appendix- 54
Appendix 8 Connection examples with servo amplifiers manufactured by	
YASKAWA Electric Corporation.	Appendix- 55
Appendix 8.1 Connection example of QD75D \square N and Σ -II series	
(Differential driver)	Appendix- 55
Appendix 9 Comparisons with conventional positioning modules	
Appendix 9.1 Comparisons with A1SD71S2 model	Appendix- 56
Appendix 9.2 Comparisons with A1SD75P1-S3/A1SD75P2-S3/ A1SD75P3-S3 mo	odels
	Appendix- 57
Appendix 10 When using GX Works2	
Appendix 10.1 Adding a module	
Appendix 10.2 Setting parameters	Appendix- 82
Appendix 10.3 Setting auto refresh	Appendix- 87
Appendix 10.4 Positioning monitor	
Appendix 10.5 Positioning test	
Appendix 10.6 Wave trace	
Appendix 10.7 Location trace	
Appendix 10.8 Parameter initialization function	Appendix-112
Appendix 10.9 Execution data backup function	
Appendix 10.10 External I/O signal logic switching function	
Appendix 10.11 External I/O signal monitor function	Appendix-117
Appendix 10.12 History monitor function	
Appendix 10.13 Checking errors	
Appendix 11 MELSEC Explanation of positioning terms	
Appendix 12 Positioning control troubleshooting	
Appendix 13 List of buffer memory addresses	
Appendix 14 External dimension drawing	

Appendix 1 Version up of the functions

Appendix 1.1 Comparison of functions according to function versions

The following tables list the QD75 functions compared according to function versions and the buffer memory for their additional functions.

(1) Function comparison

	Fur	ction versi	ons	
Item	QD75P□N/ QD75D□N	())/5P /())/5)		Reference
	Α	Α	В	
Speed-position switching control (ABS mode)	0	×	0	Section 9.2.19
Pre-reading start function	0	×	0	Section 12.7.7
External I/O signal monitor function	O * 1	×	O * 2	Section 13.5
Multiple programmable controller compatible function * 3	0	×	0	_
Deceleration start flag function	0	×	O * 4	Section 12.7.8
Stop command processing for deceleration stop function	0	×	O * 5	Section 12.7.9
Output timing selection of near pass control	O * 6	×	O * 7	Section 12.3.4
3-axis helical interpolation control	O * 8	×	×	Section 9.2.12 Section 9.2.13
Positioning option	O * 8	×	×	Section 5.3

○:Available × :Not available

- *1: For the QD75P\(\top\N/\text{QD75D}\(\text{\text{N}}\), external I/O signals can not be monitored on GX Developer. Use the system monitor of GX Works2.
- *2: Usable on GX Developer of SW6D5C-GPPW-E or later.
- *3: Compatible with QCPU of function version B.
- $\ast 4$: Supported by the module whose first five digits of SERIAL No. are "03042" or later.
- *5: Supported by the module whose first five digits of SERIAL No. are "05072" or later.
- *6: Supported by the module whose first five digits of SERIAL No. are "14032" or later.
- *7: Supported by the module whose first five digits of SERIAL No. are "14012" or later.
- *8: Supported by the module whose first five digits of the serial number are "17102" or later. GX Configurator-QP does not support these functions. Only GX Works2 (Version 1.540N or later) supports the functions.

(2) Additional buffer memory

Buff	fer memo	ry addres	ses	Name	Used function			
Axis 1	Axis 2	Axis 3	Axis 4	ivallie	USEG IGNICTION			
34	184	334	484	Speed-position function selection	Speed-position switching control			
	14	40		Positioning option valid/invalid setting	Positioning option			
899	999	1099	1199	Deceleration start flag	Decoloration start floa			
	19	05		Deceleration start flag valid	Deceleration start flag function			
	19	07		Stop command processing for deceleration stop selection	Stop command processing for deceleration stop function			
2002	0000	14003 20003		M code ON signal output timing				
2003 * 1	3 8003 1400 * 1 * 1		20003	ABS direction in degrees	Positioning option			
		*' *'		*' *' *'		Interpolation speed designation method	.	

^{*1:} The listed buffer memory addresses are those of the positioning data No. 1 of each axis. For the buffer memory address of other positioning data No., refer to Appendix 3.

(3) Additional devices

Device No.		Name	Used function
Y14	Axis 1		
Y15	Axis 2		Dra vanding start frantism
Y16	Axis 3	Execution prohibition flag	Pre-reading start function
Y17	Axis 4		

Appendix 1.2 Precautions for the replacement of the QD75P□/QD75D□ with the QD75P□N/QD75D□N

(1) Specification differences between the QD75P□N/QD75D□N and the QD75P□/QD75D□

The following table shows the differences. The specifications not listed below are the same for the both models.

	Item	QD75P□N/QD75D□N	QD75P□/QD75D□
Max. output pulse		4Mpulse/s (QD75D□N)	1Mpulse/s (Q75D□)
Speed command (pu	ulse unit)	1 to 400000pulse/s	1 to 1000000pulse/s
Starting time (1-axis	linear control)	Trapezoidal acceleration/ deceleration: 1.5ms	Trapezoidal acceleration/ deceleration: 6ms
		S-curve acceleration/ deceleration: 1.6ms	S-curve acceleration/ deceleration: 6.5ms
Monitor data	Current feed value	0.9ms	1.8ms
refreshing cycle	Other axis monitors (except external I/O signals)	0.9ms	56.8ms
Manual pulse genera	ator 1 pulse input magnification	1 to 1000	1 to 100
ON voltage/current of external input	External command signal	19VDC or more/2.7mA or more	17.5VDC or more/ 3.5mA or more
OFF voltage/current of external input	External command signal	7VDC or less/ 0.8mA or less	7VDC or less/ 1.7mA or less
Input resistance of	Zero signal (5VDC)	Approx. 620Ω	Approx. 300Ω
external input	Manual pulse generator A/B phase	Approx. 1.1kΩ	Approx. 1.5k $Ω$
	External command signal	Approx. 7.7 kΩ	Approx. 4.3 k $Ω$
Internal current cons	sumption (5VDC)	QD75P1N: 0.29A QD75P2N: 0.30A	QD75P1: 0.40A QD75P2: 0.46A
		QD75P4N: 0.36A	QD75P2: 0.46A QD75P4: 0.58A
		QD75D1N: 0.43A	QD75D1: 0.52A
		QD75D2N: 0.45A	QD75D2: 0.56A
		QD75D4N: 0.66A	QD75D4: 0.82A
Weight		QD75P1N: 0.14kg	QD75P1: 0.15kg
		QD75P2N: 0.14kg	QD75P2: 0.15kg
		QD75P4N: 0.16kg	QD75P4: 0.16kg
		QD75D1N: 0.15kg	QD75D1: 0.15kg
		QD75D2N: 0.15kg	QD75D2: 0.15kg
		QD75D4N: 0.16kg	QD75D4: 0.16kg

(2) Precaution on the use of sequence programs

The QD75P\(\text{\ti}\text{\te

(3) Transferring the set data of the QD75P□/QD75D□ using GX Works2

When GX Works2 is used, the set data of the QD75P\(\to\)/QD75D\(\to\) can be transferred to the QD75P\(\to\)N/QD75D\(\to\)N in the following procedure.

- (a) Saving the set data of the QD75P□/QD75D□ from "Save the Positioning Module Data…"
 - 1) In the project view, select the QD75P□/QD75D□ from where the set data is transferred.
 - 2) Go to [Project] → [Intelligent Function Module]
 → [Save the Positioning Module Data...].
 - 3) Input the file name, and save the set data.
- (b) Reading the set data to the QD75P\(\to\)N/QD75D\(\to\)N from "Read from the Positioning Module Data..."
 - 1) In the project view, select the QD75P\(\subseteq N/QD75D\subseteq N\) to where the saved data is transferred.
 - Go to [Project] → [Intelligent Function Module]
 → [Read from the Positioning Module Data…].
 - 3) Select the name of the file saved in step (a), and open it. The following window opens.



4) Check the data to read and click . The set data is read to the QD75P\(\text{N}\)/QD75D\(\text{N}\).


(4) Precaution on the use of GX Configurator-QP

To use the QD75P\(\text{\Pi}\)N/QD75D\(\text{\Display}\)N with GX Configurator-QP, select the QD75P\(\text{\Display}\)/QD75D\(\text{\Display}\) in "Select module type". The QD75P\(\text{\Display}\)/QD75D\(\text{\Display}\)N can be used in the same manner as the QD75P\(\text{\Display}\)/QD75D\(\text{\Display}\). Note that a speed exceeding 1000000pulse/s cannot be set in the following items when "Pulse" is set in "\(\text{\Pr.1}\) Unit setting"). To set a value outside a setting range in GX Configurator-QP, set it through a sequence program or GX Works2 of the version 1.64S or later.

Setting item	Setting range in GX Configurator-QP	Setting range in GX Works2 and sequence programs		
Pr.7 Bias speed at start	0 to 1000000(pulse/s)	0 to 4000000(pulse/s)		
Pr.8 Speed limit value	[QD75P□N]			
Pr.31 JOG speed limit value	1 to 200000(pulse/s) [QD75D□N] 1 to 1000000(pulse/s)	1 to 4000000(pulse/s)		
Pr.46 OPR speed		1 to 4000000(pulse/s)		
Pr.47 Creep speed	1 to 1000000(pulse/s)			
Da.8 Command speed				


Appendix 2 Format sheets

Appendix 2.1 Positioning Module operation chart

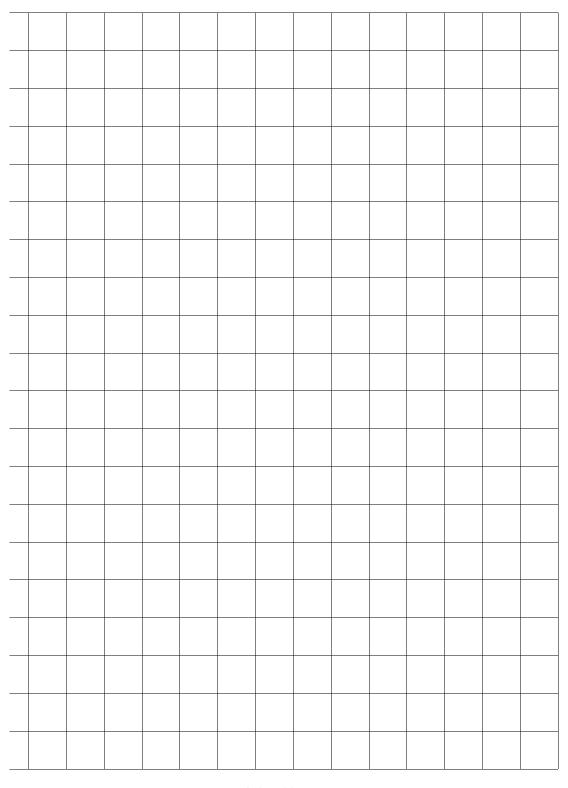

Axis address mm, inch, degree, pulse

Axis address mm, inch, degree, pulse

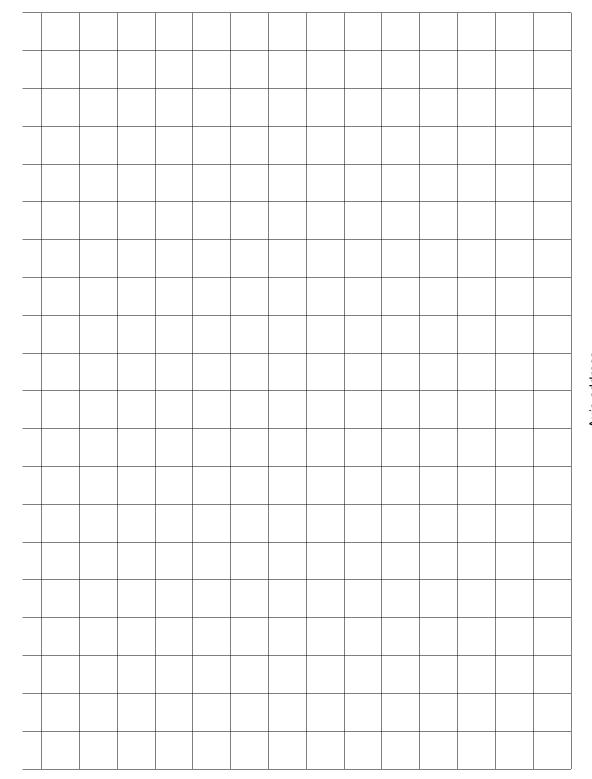

Axis address mm. inch. dearee. pulse

Axis address mm, inch, degree, pulse

APPENDICES	MELSEC-Q
MEMO	
_	
<u> </u>	

APPENDICES

Appendix 2.2 Parameter setting value entry table

		14		Set	ting range						
		ltem	mm	inch	degree	pulse					
	Pr.1	Unit setting	0	1	2	3					
	Pr.2	No. of pulses per rotation (Ap)		1 to 6	65535 pulse						
ırs 1	Pr.3	Movement amount per rotation (AI)	1 to 65535 × 10 ⁻¹ μm	1 to 65535 × 10 ⁻⁵ inch	1 to 65535 × 10 ⁻⁵ degree	1 to 65535 pulse					
amete	Pr.4	Unit magnification (Am)	1: 1-fold, 10: 10-f	old, 100: 100-fold,	1000: 1000-fold						
Basic parameters 1	Pr.5	Pulse output mode		mode, 1: CW/CCV se (multiple of 4),	V mode, 3: A phase/B pha	se (multiple of 1)					
Ba	Pr.6	Rotation direction setting			ward run pulse out erse run pulse out	put					
	Pr.7	Bias speed at start	0 to 2000000000 × 10 ⁻² mm/min			QD75P\(\to \text{4000000}\) pulse/s QD75P\(\to \text{4000000}\) pulse/s QD75P\(\text{JQD75D}\): 0 to 1000000 pulse/s					
Basic parameters 2	Pr.8	Speed limit value	1 to 2000000000 × 10 ⁻² mm/min			QD75P\(\to\) N/QD75D\(\to\) N: 1 to 4000000 pulse/s QD75P\(\to\)/QD75D\(\to\): 1 to 1000000 pulse/s					
ic para	Pr.9	Acceleration time 0	1 to 9399609ms								
Bas	Pr.10	Deceleration time 0	1 to 8388608ms								
	Pr.11	Backlash compensation amount	0 to 65535 × 10 ⁻¹ μm	0 to 65535 × 10 ⁻⁵ inch	0 to 65535 × 10 ⁻⁵ degree	0 to 65535 pulse					
	Pr.12	Software stroke limit upper limit value	-2 147403040 10	-2147483648 to 2147483647	0 to 35999999	-2147483648 to 2147483647					
	Pr.13	Software stroke limit lower limit value	× 10 ⁻¹ μm		× 10 ⁻⁵ degree	pulse					
	Pr.14	Software stroke limit selection	1: Apply software	stroke limit on cu	achine feed value						
Detailed parameters 1	Pr.15	Software stroke limit valid/invalid setting	manual pulse (generator operation	on ng JOG operation,	inching operation, and					
led ba	Pr.16	Command in-position width	1 to 2147483647 × 10 ⁻¹ μm	1 to 2147483647 × 10 ⁻⁵ inch	1 to 2147483647 × 10 ⁻⁵ degree	1 to 2147483647 pulse					
Deta	Pr.17	Torque limit setting value	1 to 500%								
	Pr.18	M code ON signal output timing	ming 0: WITH mode, 1: AFTER mode								
	Pr.19	Speed switching mode	Standard speed switching mode Front-loading speed switching mode								
	Pr.20	Interpolation speed designation method	0: Composite spe	ed, 1: Reference	axis speed						
	Pr.21	Current feed value during speed control	0: Do not update 2: Clear current fe		e, 1: Update currer	nt feed value					

Initial value	Axis 1	Axis 2	Axis 3	Axis 4	Remarks
3					
20000					
20000					
1					
1					
0					
0					
20000					
1000					
1000					
0					
2147483647					
-2147483648					
0					
0					
100					
300					
0					
0					
0					
0					

		14					Setting	range				
		Item		mm		inch		degree	pulse			
			b0	Lower limit	b3	Stop signal	b6	Near-point dog signal				
	Pr.22	Input signal logic selection	b1	Upper limit	b4	External command	b7, b9 to b15	Unused	Setting of each bit value			
-			b2	Drive unit READY	b5	Zero signal	b8	Manual pulse generator input	Negative logic Positive logic			
meters	Pr.23	Output signal logic	b0	Command pulse signal	b2	Unused	b4	Deviation counter clear	("0" is set for unused bit.)			
d para		selection		Unused		Unused	b5 to b15	Unused				
Detailed parameters	Pr.24	Manual pulse generator input selection	1: <i>i</i> 2: <i>i</i>	A phase/B pha A phase/B pha A phase/B pha PULSE/SIGN	ase ase	multiple of 2 multiple of 1						
	Pr.70	Positioning option valid/invalid setting		nvalid ∕alid								
	Pr.150	Speed -position function selection		Speed-position Speed-position		Ū	•	,				
	Pr.25	Acceleration time 1										
	Pr.26	Acceleration time 2		1 to 8388608ms								
	Pr.27	Acceleration time 3	ļ.,									
	Pr.28	Deceleration time 1	1 to									
	Pr.29	Deceleration time 2										
	Pr.30	Deceleration time 3										
2	Pr.31	JOG speed limit value	1 to 200 ×	0 00000000 10 ⁻² mm/min	1 to 200 ×	o 00000000 10 ⁻³ inch/min		000000000 legree/min	QD75P\(\text{\tinx}\text{\ti}\text{\texi\text{\ti}\text{\text{\text{\text{\texi}\text{\text{\text{\text{\text{\text{\te\			
neters	Pr.32	JOG operation acceleration time selection	0 +	. 2								
Detailed paramet	Pr.33	JOG operation deceleration time selection	O to									
etailed	Pr.34	Acceleration/deceleration process selection		Trapezoidal ad S-curve accele								
	Pr.35	S-curve ratio	1 to	100%								
	Pr.36	Sudden stop deceleration time	1 to	8388608ms								
	Pr.37	Stop group 1 sudden stop selection										
	Pr.38	Stop group 2 sudden stop selection		Normal decele Sudden stop	rati	on stop						
	Pr.39	Stop group 3 sudden stop selection										
	Pr.40	Positioning complete signal output time	0 to	65535ms								
	Pr.41	Allowable circular interpolation error width	1 to	ο 100000 × 10 ⁻¹ μm		1 to 10000 × 10	00 I ⁻⁵ inch	1 to 100000 × 10 ⁻⁵ degree	1 to 100000 pulse			

Initial value	Axis 1	Axis 2	Axis 3	Axis 4	Remarks
0					
0					
0					
0					
0					
1000					
1000					
1000					
1000					
1000					
1000					
20000					
0					
0					
0					
100					
1000					
0					
0					
0					
300					
100					

				Set	ting range						
		Item	mm	inch	degree	pulse					
Detailed parameters 2	Pr.42	External command function selection		oning start 1: Exte or position-speed							
ers	Pr.43	OPR method	0: Near-point dog method 1: Stopper method 1) (By dwell time elapse) 2: Stopper method 2) (By OP signal when stopper is hit) 3: Stopper method 3) (Without near-point dog method) 4: Count method 1) (Use zero signal) 5: Count method 2) (Do not use zero signal)								
aramet	Pr.44	OPR direction	O: Positive direction (address increment direction) 1: Negative direction (address decrement direction)								
OPR basic parameters	Pr.45	OP address	-2147483648 to 2147483647 × 10 ⁻¹ μm	-2147483648 to 2147483647 × 10 ⁻⁵ inch	0 to 35999999 × 10 ⁻⁵ degree	-2147483648 to 2147483647 pulse					
О	Pr.46	OPR speed			1 to 2000000000	QD75P□N/QD75D□N: 1 to 4000000 pulse/s					
	Pr.47	Creep speed	× 10 ⁻² mm/min	× 10 ⁻³ inch/min	×10 ⁻³ degree/min	QD75P□/QD75D□: 1 to 1000000 pulse/s					
	Pr.48	OPR retry	-	PR with upper/lown upper/lower limit							
	Pr.49	OPR dwell time	0 to 65535ms								
	Pr.50	Setting for the movement amount after near-point dog ON	0 to 2147483647 × 10 ⁻¹ μm	0 to 2147483647 × 10 ⁻⁵ inch	0 to 2147483647 × 10 ⁻⁵ degree	0 to 2147483647 pulse					
eters	Pr.51	OPR acceleration time selection	10 to 3								
ramei	Pr.52	OPR deceleration time selection									
OPR detailed param	Pr.53	OP shift amount	–2147483648 to 2147483647 × 10 ⁻¹ μm	-2147483648 to 2147483647 × 10 ⁻⁵ inch	-2147483648 to 2147483647 × 10 ⁻⁵ degree	-2147483648 to 2147483647 pulse					
)PR	Pr.54	OPR torque limit value	1 to 300%								
	Pr.55	Deviation counter clear signal output time	1 to 65535ms								
	Pr.56	Speed designation during OP shift	0: OPR speed 1: Creep speed								
	Pr.57	Dwell time during OPR retry	0 to 65535ms								

Initial value	Axis 1	Axis 2	Axis 3	Axis 4	Remarks
0					
0					
0					
0					
1					
1					
0					
0					
0					
0					
0					
0					
300					
11					
0					
0					

Appendix 3 Positioning data (No. 1 to 600) List of buffer memory addresses

Г	Posi-			Comi	mand	Positi	oning		
Data	tioning	М	Dwell	spe		add		Arc	data
No.	identi- fier	code	time	Low- order	High- order	Low- order	High- order	Low- order	High- order
1	2000	2001	2002	2004	2005	2006	2007	2008	2009
2	2010	2011	2002	8014	2005	2016	2007	2018	2009
3	2020	2021	2022	2024	2025	2026	2027	2028	2029
4	2030	2031	2032	2034	2035	2036	2037	2038	2039
5	2040	2041	2042	2044	2045	2046	2047	2048	2049
6	2050	2051	2052	2054	2055	2056	2057	2058	2059
7	2060	2061	2062	2064	2065	2066	2067	2068	2069
8	2070	2071	2072	2074	2075	2076	2077	2078	2079
9	2080	2081	2082	2084	2085	2086	2087	2088	2089
10	2090	2091	2092	2094	2095	2096	2097	2098	2099
11	2100	2101	2102	2104	2105	2106	2107	2108	2109
12	2110	2111	2112	2114	2115	2116	2117	2118	2119
13	2120	2121	2122	2124	2125	2126	2127	2128	2129
14	2130	2131	2132	2134	2135	2136	2137	2138	2139
15	2140	2141	2142	2144	2145	2146	2147	2148	2149
16	2150	2151	2152	2154	2155	2156	2157	2158	2159
17	2160	2161	2162	2164	2165	2166	2167	2168	2169
18	2170	2171	2172	2174	2175	2176	2177	2178	2179
19	2180	2181	2182	2184	2185	2186	2187	2188	2189
20	2190	2191	2192	2194	2195	2196	2197	2198	2199
21	2200	2201	2202	2204	2205	2206	2207	2208	2209
22	2210	2211	2212	2214	2215	2216	2217	2218	2219
23	2220	2221	2222	2224	2225	2226	2227	2228	2229
24	2230	2231	2232	2234	2235	2236	2237	2238	2239
25	2240	2241	2242	2244	2245	2246	2247	2248	2249
26	2250	2251	2252	2254	2255	2256	2257	2258	2259
27	2260	2261	2262	2264	2265	2266	2267	2268	2269
28	2270	2271	2272	2274	2275	2276	2277	2278	2279
29	2280	2281	2282	2284	2285	2286	2287	2288	2289
30	2290	2291	2292	2294	2295	2296	2297	2298	2299
31	2300	2301	2302	2304	2305	2306	2307	2308	2309
32	2310	2311	2312	2314	2315	2316	2317	2318	2319
33	2320	2321	2322	2324	2325	2326	2327	2328	2329
34	2330	2331	2332	2334	2335	2336	2337	2338	2339
35	2340	2341	2342	2344	2345	2346	2347	2348	2349
36	2350	2351	2352	2354	2355	2356	2357	2358	2359
37	2360	2361	2362	2364	2365	2366	2367	2368	2369
38	2370	2371	2372	2374	2375	2376	2377	2378	2379
39	2380	2381	2382	2384	2385	2386	2387	2388	2389
40	2390	2391	2392	2394	2395	2396	2397	2398	2399
41	2400	2401	2402	2404	2405	2406	2407	2408	2409
42	2410	2411	2412	2414	2415	2416	2417	2418	2419
43	2420	2421	2422	2424	2425	2426	2427	2428	2429
44	2430	2431	2432	2434	2435	2436	2437	2438	2439
45	2440	2441	2442	2444	2445	2446	2447	2448	2449
46	2450	2451	2452	2454	2455	2456	2457	2458	2459
47	2460	2461	2462	2464	2465	2466	2467	2468	2469
			2462	2474	2405	2466		2400	
48	2470	2471					2477		2479
49	2480	2481	2482	2484	2485	2486	2487	2488	2489
50	2490	2491	2492	2494	2495	2496	2497	2498	2499

	Dut	Posi-		D . II		mand		oning	Arc	data
filer Corder Order Order Order Order Order Order 51 2500 2501 2501 2502 2504 2505 2506 2507 2508 2509 53 2520 2521 2522 2524 2525 2526 2527 2528 2536 54 2530 2531 2532 2534 2535 2536 2537 2538 2539 55 2540 2561 2562 2564 2565 2566 2567 2568 2569 2568 2567 2588 2569 2560 2567 2588 2589 2591 2572 2574 2575 2576 2577 2578 2589 50 2590 2591 2592 2594 2595 2566 2567 2568 2569 61 2600 2561 2662 2564 2665 2567 2688 2689 62 2610 262	Data No	tioning identi-	M	Dwell time						
52 2510 2511 2512 2514 2516 2516 2517 2518 2529 53 2520 2521 2522 2524 2525 2536 2537 2538 2539 55 2540 2541 2542 2544 2545 2546 2547 2548 2549 56 2550 2551 2552 2554 2555 2566 2567 2568 2569 58 2570 2561 2562 2564 2565 2566 2567 2568 2569 59 2580 2581 2582 2584 2585 2569 2589 2588 2589 60 2590 2591 2592 2594 2586 2587 2588 2589 61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2611 2612 2614 <t>2615 2666 2667 <t< td=""><td>110.</td><td></td><td>oodo</td><td>unio</td><td>-</td><td></td><td></td><td></td><td></td><td></td></t<></t>	110.		oodo	unio	-					
53 2520 2521 2522 2524 2536 2536 2537 2538 2539 55 2540 2541 2542 2544 2545 2556 2557 2568 2557 56 2550 2551 2552 2554 2555 2566 2567 2568 2569 57 2560 2561 2562 2564 2565 2566 2567 2568 2569 58 2570 2571 2572 2574 2575 2576 2577 2578 2589 60 2590 2591 2592 2594 2595 2596 2597 2588 2589 61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2610 2611 2612 2614 2615 2666 2667 2682 2699 64 2630 2631 2632 2634 2635 <	_									
54 2530 2531 2532 2534 2534 2536 2537 2538 2539 55 2540 2541 2542 2544 2545 2546 2567 2568 2569 56 2550 2561 2562 2564 2565 2566 2567 2578 2579 57 2560 2561 2562 2564 2565 2567 2577 2578 2579 58 2580 2581 2582 2584 2585 2586 2587 2588 2589 60 2590 2591 2592 2594 2595 2596 2597 2598 2599 61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2610 2611 2612 2614 2615 2662 2667 2668 2667 2668 2669 64 2660 2661 2662 <			-	-						
55 2540 2541 2542 2544 2545 2546 2547 2548 2559 56 2550 2551 2552 2554 2556 2566 2567 2568 2569 57 2560 2561 2562 2564 2565 2566 2567 2578 2575 58 2570 2571 2572 2574 2575 2577 2578 2579 2588 2589 60 2590 2591 2592 2594 2595 2596 2597 2588 2589 61 2600 2601 2602 2604 2606 2607 2608 2609 62 2610 2611 2612 2614 2615 2616 2619 2629 64 2630 2631 2632 2684 2685 2666 2667 2668 2669 66 2650 2651 2662 <t>2664 2665 2666 <t< td=""><td></td><td></td><td>_</td><td></td><td></td><td></td><td></td><td>-</td><td></td><td></td></t<></t>			_					-		
66 2550 2551 2552 2554 2556 2566 2567 2568 2569 57 2560 2561 2562 2564 2565 2566 2567 2568 2569 58 2570 2571 2572 2574 2575 2576 2577 2578 2579 59 2580 2581 2582 2584 2585 2586 2587 2588 2589 60 2590 2591 2592 2594 2595 2596 2597 2598 2599 61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2610 2611 2612 2614 2615 2616 2617 2618 2619 64 2630 2681 2622 2624 2625 2656 2657 2688 2699 66 2650 2661 2661 2662 2664 <	_									
57 2560 2561 2562 2564 2565 2566 2567 2578 2579 58 2570 2571 2572 2574 2575 2576 2577 2578 2579 59 2580 2581 2582 2584 2585 2586 2587 2588 2589 60 2590 2591 2592 2594 2595 2596 2597 2588 2589 61 2600 2601 2601 2611 2612 2614 2615 2616 2617 2618 2619 62 2610 2611 2612 2624 2625 2626 2627 2638 2639 64 2630 2631 2632 2634 2635 2666 2667 2688 2699 68 2670 2671 2672 2672 2672 2672 2678 2679 2688 2689 68 2670 2691 <										
58 2570 2571 2572 2574 2575 2576 2577 2578 2579 59 2580 2581 2582 2584 2585 2586 2587 2588 2589 60 2590 2591 2592 2594 2595 2596 2597 2598 2599 61 2600 2601 2601 2601 2611 2612 2614 2615 2616 2617 2618 2619 63 2620 2621 2622 2624 2625 2626 2627 2628 2629 64 2630 2631 2632 2634 2635 2636 2637 2638 2639 66 2660 2661 2662 2664 2665 2666 2667 2668 2669 68 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2600 2691 <										
59 2580 2581 2582 2584 2585 2586 2587 2588 2599 60 2590 2591 2592 2594 2595 2596 2597 2598 2599 61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2610 2611 2612 2624 2625 2626 2627 2628 2629 64 2630 2631 2632 2634 2635 2636 2637 2638 2639 65 2640 2641 2642 2644 2645 2665 2667 2668 2669 66 2650 2661 2662 2664 2665 2666 2667 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2678 2679 70 2690 2691 2692 2694 2695 <										
60 2590 2591 2592 2594 2595 2596 2597 2598 2599 61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2610 2611 2612 2614 2615 2616 2617 2618 2619 63 2620 2621 2622 2624 2625 2626 2627 2628 2629 64 2630 2631 2632 2634 2635 2636 2637 2638 2639 66 2650 2661 2662 2664 2665 2667 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2688 2689 70 2680 2681 2682 2684 2685 2686 <			_		_					
61 2600 2601 2602 2604 2605 2606 2607 2608 2609 62 2610 2611 2612 2614 2615 2616 2617 2618 2619 63 2620 2621 2622 2624 2625 2626 2627 2628 2639 65 2640 2641 2642 2644 2645 2646 2647 2648 2649 66 2650 2651 2652 2654 2655 2666 2667 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2678 2679 69 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2690 2691 2692 2694 2695 2697 2698 2699 71 2700 2701 2702 <t>2704 2705 2706 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<></t>										
62 2610 2611 2612 2612 2614 2615 2616 2617 2618 2629 63 2620 2621 2622 2624 2625 2626 2627 2628 2629 64 2630 2631 2632 2634 2635 2636 2637 2638 2639 65 2640 2641 2642 2644 2645 2666 2657 2658 2659 66 2650 2661 2662 2664 2665 2666 2667 2668 2669 68 2670 2671 2672 2674 2675 2668 2687 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2709 71 2700 2711 2712 2714 <										
63 2620 2621 2622 2624 2635 2636 2637 2638 2639 64 2630 2631 2632 2634 2635 2636 2637 2638 2639 65 2640 2641 2642 2644 2645 2646 2647 2648 2649 66 2650 2661 2662 2664 2665 2666 2667 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2678 2679 69 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2799 72 2710 2711 2712 2722 2724 <	_									
64 2630 2631 2632 2634 2635 2636 2637 2638 2639 65 2640 2641 2642 2644 2645 2646 2647 2648 2649 66 2650 2651 2652 2654 2655 2656 2667 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2678 2679 69 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2799 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 <	_		_	-	_			-		
65 2640 2641 2642 2644 2645 2654 2654 2655 2656 2657 2658 2659 66 2650 2661 2662 2664 2665 2666 2667 2668 2669 67 2660 2661 2662 2664 2665 2666 2677 2678 2679 68 2670 2671 2672 2674 2675 2676 2677 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2709 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2731 <			_	-	_			-		
66 2650 2651 2652 2654 2655 2656 2657 2658 2659 67 2660 2661 2662 2664 2665 2666 2667 2668 2669 68 2670 2671 2672 2674 2675 2676 2677 2678 2679 69 2680 2681 2682 2684 2685 2686 2697 2698 2699 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2709 71 2700 2711 2712 2714 2715 2716 2717 2718 2719 73 2710 2711 2712 2714 2715 2716 2717 2718 2719 74 2730 2731 2732 2734 2735 <	_									
67 2660 2661 2662 2664 2665 2666 2667 2668 2679 68 2670 2671 2672 2674 2675 2676 2677 2678 2679 69 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 277 2782 2709 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2711 2742 2744 2745 2746 2747 2748 2749 75 2760 2751 2752 2754 2755 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>										
68 2670 2671 2672 2674 2675 2676 2677 2678 2679 69 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2709 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2766 2767 2768 2759 77 2760 2761 2762 2764 2765 <										
69 2680 2681 2682 2684 2685 2686 2687 2688 2689 70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2709 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 <										
70 2690 2691 2692 2694 2695 2696 2697 2698 2699 71 2700 2701 2702 2704 2705 2706 2707 2708 2709 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2766 2767 2768 2769 77 2760 2761 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 <					_					
71 2700 2701 2702 2704 2705 2706 2707 2708 2709 72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2766 2767 2768 2769 77 2760 2761 2762 2764 2765 2766 2767 2778 2779 79 2780 2781 2782 2784 2785 2796 2797 2778 2779 80 2790 2791 2792 2794 2795 <										
72 2710 2711 2712 2714 2715 2716 2717 2718 2719 73 2720 2721 2722 2724 2725 2726 2727 2728 2729 74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2756 2757 2758 2759 77 2760 2761 2762 2764 2765 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 <										
73 2720 2721 2722 2724 2725 2726 2727 2728 2739 74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2756 2757 2758 2759 77 2760 2761 2762 2764 2765 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 <			_		_					
74 2730 2731 2732 2734 2735 2736 2737 2738 2739 75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2756 2757 2758 2759 77 2760 2761 2762 2764 2765 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 <		2710					_		_	
75 2740 2741 2742 2744 2745 2746 2747 2748 2749 76 2750 2751 2752 2754 2755 2756 2757 2758 2759 77 2760 2761 2762 2764 2765 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 <	73	2720	2721	2722	2724	2725	2726	2727	2728	2729
76 2750 2751 2752 2754 2755 2756 2757 2758 2759 77 2760 2761 2762 2764 2765 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2851 2852 2854 2855 <	74	2730	_	2732	2734	2735		_	2738	2739
77 2760 2761 2762 2764 2765 2766 2767 2768 2769 78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 <	75	2740	2741	2742	2744	2745	2746	2747	2748	2749
78 2770 2771 2772 2774 2775 2776 2777 2778 2779 79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 <	76	2750	2751	2752	2754	2755	2756	2757	2758	2759
79 2780 2781 2782 2784 2785 2786 2787 2788 2789 80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 <	77		2761	2762	2764	2765	2766	2767	2768	2769
80 2790 2791 2792 2794 2795 2796 2797 2798 2799 81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2878 2879 89 2880 2881 2882 2884 2885 <	78	2770	2771	2772	2774	2775	2776	2777	2778	2779
81 2800 2801 2802 2804 2805 2806 2807 2808 2809 82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 90 2890 2891 2892 2894 2895 <	79	2780	2781	2782	2784		2786	2787	2788	2789
82 2810 2811 2812 2814 2815 2816 2817 2818 2819 83 2820 2821 2822 2824 2825 2826 2827 2828 2829 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2988 2899 91 2900 2901 2902	80	2790	2791	2792	2794	2795	2796	2797	2798	2799
83 2820 2821 2822 2824 2825 2826 2827 2828 2839 84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2988 2899 91 2900 2901 2902 2904 2905 <	81	2800	2801	2802	2804	2805	2806	2807	2808	2809
84 2830 2831 2832 2834 2835 2836 2837 2838 2839 85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 <	82	2810	2811	2812	2814	2815	2816	2817	2818	2819
85 2840 2841 2842 2844 2845 2846 2847 2848 2849 86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 <	83	2820	2821	2822	2824	2825	2826	2827	2828	2829
86 2850 2851 2852 2854 2855 2856 2857 2858 2859 87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 <	84	2830	2831	2832	2834	2835	2836	2837	2838	2839
87 2860 2861 2862 2864 2865 2866 2867 2868 2869 88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952	85	2840	2841	2842	2844	2845	2846	2847	2848	2849
88 2870 2871 2872 2874 2875 2876 2877 2878 2879 89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962	86	2850	2851	2852	2854	2855	2856	2857	2858	2859
89 2880 2881 2882 2884 2885 2886 2887 2888 2889 90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972	87	2860	2861	2862	2864	2865	2866	2867	2868	2869
90 2890 2891 2892 2894 2895 2896 2897 2898 2899 91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 <	88	2870	2871	2872	2874	2875	2876	2877	2878	2879
91 2900 2901 2902 2904 2905 2906 2907 2908 2909 92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 <	89	2880	2881	2882	2884	2885	2886	2887	2888	2889
92 2910 2911 2912 2914 2915 2916 2917 2918 2919 93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	90	2890	2891	2892	2894	2895	2896	2897	2898	2899
93 2920 2921 2922 2924 2925 2926 2927 2928 2929 94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	91	2900	2901	2902	2904	2905	2906	2907	2908	2909
94 2930 2931 2932 2934 2935 2936 2937 2938 2939 95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	92	2910	2911	2912	2914	2915	2916	2917	2918	2919
95 2940 2941 2942 2944 2945 2946 2947 2948 2949 96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	93	2920	2921	2922	2924	2925	2926	2927	2928	2929
96 2950 2951 2952 2954 2955 2956 2957 2958 2959 97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	94	2930	2931	2932	2934	2935	2936	2937	2938	2939
97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	95	2940	2941	2942	2944	2945	2946	2947	2948	2949
97 2960 2961 2962 2964 2965 2966 2967 2968 2969 98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989	96	2950	2951	2952	2954	2955	2956	2957	2958	2959
98 2970 2971 2972 2974 2975 2976 2977 2978 2979 99 2980 2981 2982 2984 2985 2986 2987 2988 2989		2960	2961	2962	2964	2965	2966	2967	2968	2969
99 2980 2981 2982 2984 2985 2986 2987 2988 2989										
	100	2990	2991	2992	2994	2995	2996	2997	2998	2999

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
101	3000	3001	3002	3004	3005	3006	3007	3008	3009
102	3010	3011	3012	3014	3015	3016	3017	3018	3019
103	3020	3021	3022	3024	3025	3026	3027	3028	3029
104	3030	3031	3032	3034	3035	3036	3037	3038	3039
105	3040	3041	3042	3044	3045	3046	3047	3048	3049
106	3050	3051	3052	3054	3055	3056	3057	3058	3059
107	3060	3061	3062	3064	3065	3066	3067	3068	3069
108	3070	3071	3072	3074	3075	3076	3077	3078	3079
109	3080	3081	3082	3084	3085	3086	3087	3088	3089
110	3090	3091	3092	3094	3095	3096	3097	3098	3099
111	3100	3101	3102	3104	3105	3106	3107	3108	3109
112	3110	3111	3112	3114	3115	3116	3117	3118	3119
113	3120	3121	3122	3124	3125	3126	3127	3128	3129
114	3130	3131	3132	3134	3135	3136	3137	3138	3139
115	3140	3141	3142	3144	3145	3146	3147	3148	3149
116	3150	3151	3152	3154	3155	3156	3157	3158	3159
117	3160	3161	3162	3164	3165	3166	3167	3168	3169
118	3170	3171	3172	3174	3175	3176	3177	3178	3179
119	3180	3181	3182	3184	3185	3186	3187	3188	3189
120	3190	3191	3192	3194	3195	3196	3197	3198	3199
121	3200	3201	3202	3204	3205	3206	3207	3208	3209
122	3210	3211	3212	3214	3215	3216	3217	3218	3219
123	3220	3221	3222	3224	3225	3226	3227	3228	3229
124	3230	3231	3232	3234	3235	3236	3237	3238	3239
125	3240	3241	3242	3244	3245	3246	3247	3248	3249
126	3250	3251	3252	3254	3255	3256	3257	3258	3259
127	3260	3261	3262	3264	3265	3266	3267	3268	3269
128	3270	3271	3272	3274	3275	3276	3277	3278	3279
129	3280	3281	3282	3284	3285	3286	3287	3288	3289
130	3290	3291	3292	3294	3295	3296	3297	3298	3299
131	3300	3301	3302	3304	3305	3306	3307	3308	3309
132	3310	3311	3312	3314	3315	3316	3317	3318	3319
133	3320	3321	3322	3324	3325	3326	3327	3328	3329
134	3330	3331	3332	3334	3335	3336	3337	3338	3339
				3344					
135	3340	3341	3342		3345	3346	3347	3348	3349
136	3350	3351	3352	3354	3355	3356	3357	3358	3359
137	3360	3361	3362	3364	3365	3366	3367	3368	3369
138	3370	3371	3372	3374	3375	3376	3377	3378	3379
139	3380	3381	3382	3384	3385	3386	3387	3388	3389
140	3390	3391	3392	3394	3395	3396	3397	3398	3399
141	3400	3401	3402	3404	3405	3406	3407	3408	3409
142	3410	3411	3412	3414	3415	3416	3417	3418	3419
143	3420	3421	3422	3424	3425	3426	3427	3428	3429
144	3430	3431	3432	3434	3435	3436	3437	3438	3439
145	3440	3441	3442	3444	3445	3446	3447	3448	3449
146	3450	3451	3452	3454	3455	3456	3457	3458	3459
147	3460	3461	3462	3464	3465	3466	3467	3468	3469
148	3470	3471	3472	3474	3475	3476	3477	3478	3479
149	3480	3481	3482	3484	3485	3486	3487	3488	3489
150	3490	3491	3492	3494	3495	3496	3497	3498	3499

	Posi-		.		mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	spe Low-	eea High-	Low-	ress High-	Low-	High-
	fier			order	order	order	order	order	order
151	3500	3501	3502	3504	3505	3506	3507	3508	3509
152	3510	3511	3512	3514	3515	3516	3517	3518	3519
153	3520	3521	3522	3524	3525	3526	3527	3528	3529
154	3530	3531	3532	3534	3535	3536	3537	3538	3539
155	3540	3541	3542	3544	3545	3546	3547	3548	3549
156	3550	3551	3552	3554	3555	3556	3557	3558	3559
157	3560	3561	3562	3564	3565	3566	3567	3568	3569
158	3570	3571	3572	3574	3575	3576	3577	3578	3579
159	3580	3581	3582	3584	3585	3586	3587	3588	3589
160	3590	3591	3592	3594	3595	3596	3597	3598	3599
161	3600	3601	3602	3604	3605	3606	3607	3608	3609
162	3610	3611	3612	3614	3615	3616	3617	3618	3619
163	3620	3621	3622	3624	3625	3626	3627	3628	3629
164	3630	3631	3632	3634	3635	3636	3637	3638	3639
165	3640	3641	3642	3644	3645	3646	3647	3648	3649
166	3650	3651	3652	3654	3655	3656	3657	3658	3659
167	3660	3661	3662	3664	3665	3666	3667	3668	3669
168	3670	3671	3672	3674	3675	3676	3677	3678	3679
169	3680	3681	3682	3684	3685	3686	3687	3688	3689
170	3690	3691	3692	3694	3695	3696	3697	3698	3699
171	3700	3701	3702	3704	3705	3706	3707	3708	3709
172	3710	3711	3712	3714	3715	3716	3717	3718	3719
173	3720	3721	3722	3724	3725	3726	3727	3728	3729
174	3730	3731	3732	3734	3735	3736	3737	3738	3739
175	3740	3741	3742	3744	3745	3746	3747	3748	3749
176	3750	3751	3752	3754	3755	3756	3757	3758	3759
177	3760	3761	3762	3764	3765	3766	3767	3768	3769
178	3770	3771	3772	3774	3775	3776	3777	3778	3779
179	3780	3781	3782	3784	3785	3786	3787	3788	3789
180	3790	3791	3792	3794	3795	3796	3797	3798	3799
181	3800	3801	3802	3804	3805	3806	3807	3808	3809
182	3810	3811	3812	3814	3815	3816	3817	3818	3819
183	3820	3821	3822	3824	3825	3826	3827	3828	3829
184	3830	3831	3832	3834	3835	3836	3837	3838	3839
185	3840	3841	3842	3844	3845	3846	3847	3848	3849
186	3850	3851	3852	3854	3855	3856	3857	3858	3859
187	3860	3861	3862	3864	3865	3866	3867	3868	3869
188	3870	3871	3872	3874	3875	3876	3877	3878	3879
189	3880	3881	3882	3884	3885	3886	3887	3888	3889
190	3890	3891	3892	3894	3895	3896	3897	3898	3899
191	3900	3901	3902	3904	3905	3906	3907	3908	3909
192	3910	3911	3912	3914	3915	3916	3917	3918	3919
193	3920	3921	3922	3924	3925	3926	3927	3928	3929
194	3930	3931	3932	3934	3935	3936	3937	3938	3939
195	3940	3941	3942	3944	3945	3946	3947	3948	3949
196	3950	3951	3952	3954	3955	3956	3957	3958	3959
197	3960	3961	3962	3964	3965	3966	3967	3968	3969
198	3970	3971	3972	3974	3975	3976	3977	3978	3979
199	3980	3981	3982	3984	3985	3986	3987	3988	3989
200	3990	3991	3992	3994	3995	3996	3997	3998	3999

	Posi-				mand	Positi	oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	Spe Low-	eed High-	Low-	ress High-	Low-	High-
140.	fier	couc	unic	order	order	order	order	order	order
201	4000	4001	4002	4004	4005	4006	4007	4008	4009
202	4010	4011	4012	4014	4015	4016	4017	4018	4019
203	4020	4021	4022	4024	4025	4026	4027	4028	4029
204	4030	4031	4032	4034	4035	4036	4037	4038	4039
205	4040	4041	4042	4044	4045	4046	4047	4048	4049
206	4050	4051	4052	4054	4055	4056	4057	4058	4059
207	4060	4061	4062	4064	4065	4066	4067	4068	4069
208	4070	4071	4072	4074	4075	4076	4077	4078	4079
209	4080	4081	4082	4084	4085	4086	4087	4088	4089
210	4090	4091	4092	4094	4095	4096	4097	4098	4099
211	4100	4101	4102	4104	4105	4106	4107	4108	4109
212	4110	4111	4112	4114	4115	4116	4117	4118	4119
213	4120	4121	4122	4124	4125	4126	4127	4128	4129
214	4130	4131	4132	4134	4135	4136	4137	4138	4139
215	4140	4141	4142	4144	4145	4146	4147	4148	4149
216	4150	4151	4152	4154	4155	4156	4157	4158	4159
217	4160	4161	4162	4164	4165	4166	4167	4168	4169
218	4170	4171	4172	4174	4175	4176	4177	4178	4179
219	4180	4181	4182	4184	4185	4186	4187	4188	4189
220	4190	4191	4192	4194	4195	4196	4197	4198	4199
221	4200	4201	4202	4204	4205	4206	4207	4208	4209
222	4210	4211	4212	4214	4215	4216	4217	4218	4219
223	4220	4221	4222	4224	4225	4226	4227	4228	4229
224	4230	4231	4232	4234	4235	4236	4237	4238	4239
225	4240	4241	4242	4244	4245	4246	4247	4248	4249
226	4250	4251	4252	4254	4255	4256	4257	4258	4259
227	4260	4261	4262	4264	4265	4266	4267	4268	4269
228	4270	4271	4272	4274	4275	4276	4277	4278	4279
229	4280	4281	4282	4284	4285	4286	4287	4288	4289
230	4290	4291	4292	4294	4295	4296	4297	4298	4299
231	4300	4301	4302	4304	4305	4306	4307	4308	4309
232	4310	4311	4312	4314	4315	4316	4317	4318	4319
233	4320	4321	4322	4324	4325	4326	4327	4328	4329
234	4330	4331	4332	4334	4335	4336	4337	4338	4339
235	4340	4341	4342	4344	4345	4346	4347	4348	4349
236	4350	4351	4352	4354	4355	4356	4357	4358	4359
237	4360	4361	4362	4364	4365	4366	4367	4368	4369
238	4370	4371	4372	4374	4375	4376	4377	4378	4379
239	4380	4381	4382	4384	4385	4386	4387	4388	4389
240	4390	4391	4392	4394	4395	4396	4397	4398	4399
241	4400	4401	4402	4404	4405	4406	4407	4408	4409
242	4410	4411	4412	4414	4415	4416	4417	4418	4419
243	4420	4421	4422	4424	4425	4426	4427	4428	4429
244	4430	4431	4432	4434	4435	4436	4437	4438	4439
245	4440	4441	4442	4444	4445	4446	4447	4448	4449
246	4450	4451	4452	4454	4455	4456	4457	4458	4459
247	4460	4461	4462	4464	4465	4466	4467	4468	4469
248	4470	4471	4472	4474	4475	4476	4477	4478	4479
249	4480	4481	4482	4484	4485	4486	4487	4488	4489
250	4490	4491	4492	4494	4495	4496	4497	4498	4499

No. identil-fier code fier Low-order order ord	Data	Posi- tioning	М	Dwell		mand		oning ress	Arc	data
251 4500 4501 4502 4504 4505 4506 4507 4508 4502 252 4510 4511 4512 4514 4515 4516 4517 4518 452 253 4520 4521 4522 4524 4525 4526 4527 4528 452 255 4540 4541 4542 4544 4545 4546 4547 4548 455 256 4550 4551 4552 4554 4556 4567 4568 456 257 4560 4561 4562 4564 4565 4566 4567 4568 456 258 4570 4571 4572 2574 4575 4566 4567 4568 458 259 4580 4581 4582 4584 4585 4586 4587 4588 458 260 4590 4591 4592 4594 4595 4596		identi-			Low-		Low-	High-		High-
252 4510 4511 4512 4514 4515 4526 4527 4528 4526 4527 4528 4526 4527 4528 4526 4527 4528 4526 2524 4520 4524 4526 4526 4527 4528 4526 2555 4540 4541 4542 4544 4545 4546 4547 4548 4552 2556 4550 4551 4552 4554 4556 4566 4567 4568 4561 2528 4570 4571 4572 4574 4575 4576 4577 4578 4552 2589 4580 4581 4582 4584 4585 4586 4587 4588 4582 2620 4600 4601 4602 4694 4695 4696 4697 4608 4601 4602 4604 4604 4607 4608 4607 4608 4602 4604 4604 4604 4604 4604 4604 4604										order
253 4520 4521 4522 4524 4526 4537 4538 4536 4537 4538 4536 4537 4538 4536 255 4540 4541 4542 4544 4545 4546 4547 4548 4556 2556 4550 4551 4552 4556 4556 4567 4568 4567 4568 4562 4566 4566 4567 4568 4562 2554 4556 4566 4567 4568 4568 4567 4568 4562 2564 4565 4566 4567 4568 4562 2569 4580 4581 4582 4584 4585 4586 4587 4588 4582 2569 4590 4591 4592 4594 4595 4596 4597 4598 4598 4598 4598 4598 4598 4598 4598 4598 4598 4598 4598 4598 4598 4598 4599 4598 4598 4										4509
254 4530 4531 4532 4534 4534 4546 4547 4548 4545 255 4540 4541 4542 4544 4545 4546 4547 4548 455 256 4550 4551 4552 4556 4566 4567 4568 456 257 4560 4561 4562 4564 4565 4566 4567 4568 456 259 4580 4581 4582 4584 4585 4586 4587 4588 458 260 4590 4591 4592 4594 4595 4596 4597 4598 459 260 4590 4691 4622 4624 4625 4626 4607 4608 462 261 4600 4601 4622 4624 4625 4626 4627 4628 462 262 4640 4661 4662 4664 4667 4667					_					4519
255 4540 4541 4542 4544 4545 4566 4557 4558 4552 256 4550 4551 4552 4554 4555 4556 4557 4558 4562 257 4560 4561 4562 4564 4565 4566 4567 4568 4562 258 4570 4571 4572 4574 4575 4576 4577 4578 4562 260 4590 4591 4592 4594 4595 4596 4597 4598 459 261 4600 4601 4602 4604 4605 4606 4607 4608 460 262 4610 4611 4612 4614 4615 4616 4617 4618 462 263 4620 4621 4622 4624 4625 4626 4627 4628 462 264 4650 4661 4662 4664 4665										4529
256 4550 4551 4552 4554 4555 4556 4557 4558 4568 4597 4598 4658 4660 4661 4661	_									4539
257 4560 4561 4562 4564 4565 4566 4567 4568 4569 4569 4569 4569 4660 4661 4661 4661 4661 4661 4661 4662 4662 4662 4662 4663 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4662 2666 4667 4668 4662 2666 4667 4668										4549
258 4570 4571 4572 4574 4575 4576 4577 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4578 4588 4586 4587 4588 4586 2687 4588 4586 2687 4588 4586 2687 4588 4586 2687 4588 4586 2687 4588 4586 2687 4588 4586 2687 4680 4601 4601 4602 4604 4605 4606 4607 4608 466 2627 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4628 4686 4667 4668 4667 2668 4670 4671 4672 4674 4675 4676 4677 4678 4672 2										4559
259 4580 4581 4582 4584 4585 4586 4587 4588 458 260 4590 4591 4592 4594 4595 4596 4597 4598 458 261 4600 4601 4602 4604 4605 4606 4607 4608 460 262 4610 4611 4612 4614 4615 4616 4617 4618 466 263 4620 4621 4622 4624 4625 4626 4627 4628 462 264 4630 4631 4632 4634 4635 4636 4637 4638 466 266 4650 4651 4652 4654 4665 4666 4667 4668 4667 268 4670 4671 4672 4674 4675 4676 4677 4678 468 270 4690 4691 4692 4694 4695	_									4569
260 4590 4591 4592 4594 4595 4596 4597 4598 459 261 4600 4601 4602 4604 4605 4606 4607 4608 460 262 4610 4611 4612 4614 4615 4616 4617 4618 462 263 4620 4621 4622 4624 4625 4626 4627 4628 462 264 4630 4631 4632 4634 4635 4636 4637 4638 463 265 4640 4661 4662 4664 4665 4666 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 4668 4667 469					_					4579
261 4600 4601 4602 4604 4605 4606 4607 4608 460 262 4610 4611 4612 4614 4615 4616 4617 4618 46 263 4620 4621 4622 4624 4625 4626 4627 4628 46 264 4630 4631 4632 4634 4635 4636 4637 4638 46 265 4640 4641 4642 4644 4645 4646 4647 4648 46 266 4650 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4676 4677 4678 46 270 4690 4691 4692 4694 4695 4696 4697 4698 46 271 4700 4711 4712 4714 4715 47										4589
262 4610 4611 4612 4614 4615 4626 4627 4628 4626 263 4620 4621 4622 4624 4625 4626 4627 4628 462 264 4630 4631 4632 4634 4635 4636 4637 4638 463 265 4640 4641 4642 4644 4645 4646 4647 4648 466 266 4650 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4666 4667 4688 468 269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4702 4704 4705 4706 4707 4708 470 271 4700 4701 4702 4704 4705	260	4590	4591	4592	4594	4595	4596	4597	4598	4599
263 4620 4621 4622 4624 4625 4626 4627 4628 462 264 4630 4631 4632 4634 4635 4636 4637 4638 463 265 4640 4641 4642 4644 4645 4664 4647 4648 466 266 4650 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4676 4677 4678 466 269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4692 4694 4695 4696 4697 4698 469 271 4700 4701 4702 4704 4705 4706 4707 4708 470 271 470 4721 4722 4724 4725 <	261	4600	4601	4602	4604	4605	4606	4607	4608	4609
264 4630 4631 4632 4634 4635 4636 4637 4638 463 265 4640 4641 4642 4644 4645 4646 4647 4648 463 266 4650 4651 4652 4654 4655 4656 4667 4668 466 267 4660 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4676 4677 4678 463 269 4680 4681 4682 4684 4685 4686 4687 4688 463 270 4690 4691 4692 4694 4695 4696 4697 4698 463 271 4700 4701 4702 4704 4705 4706 4707 4708 470 271 470 4721 4722 4724 4725 <	262	4610	4611	4612	4614	4615	4616	4617	4618	4619
265 4640 4641 4642 4644 4645 4646 4647 4648 4652 266 4650 4651 4652 4654 4655 4656 4657 4658 465 267 4660 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4676 4677 4678 465 269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4692 4694 4695 4696 4697 4698 469 271 4700 4701 4702 4704 4705 4706 4707 4708 470 271 4700 4701 4702 4704 4705 4706 4707 4708 470 271 4700 4721 4722 4724 4725		4620						4627		4629
266 4650 4651 4652 4654 4655 4656 4657 4658 465 267 4660 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4676 4677 4678 463 269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4692 4694 4695 4696 4697 4698 469 271 4700 4701 4702 4704 4705 4706 4707 4708 470 271 4710 4711 4712 4714 4715 4716 4717 4718 471 271 4700 4721 4722 4724 4725 4726 4727 4728 472 271 4730 4731 4732 4734 4735			4631				4636	4637		4639
267 4660 4661 4662 4664 4665 4666 4667 4668 466 268 4670 4671 4672 4674 4675 4676 4677 4678 467 269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4692 4694 4695 4696 4697 4698 468 271 4700 4701 4702 4704 4705 4706 4707 4708 470 272 4710 4711 4712 4714 4715 4716 4717 4718 472 273 4720 4721 4722 4724 4725 4726 4727 4728 472 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4761 4762 4764 4765	265	4640	4641	4642	4644	4645	4646	4647	4648	4649
268 4670 4671 4672 4674 4675 4676 4677 4678 467 269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4692 4694 4695 4696 4697 4698 469 271 4700 4701 4702 4704 4705 4706 4707 4708 470 272 4710 4711 4712 4714 4715 4716 4717 4718 472 273 4720 4721 4722 4724 4725 4726 4727 4728 473 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 473 277 4760 4761 4762 4764 4765	266	4650	4651	4652	4654	4655	4656	4657	4658	4659
269 4680 4681 4682 4684 4685 4686 4687 4688 468 270 4690 4691 4692 4694 4695 4696 4697 4698 468 271 4700 4701 4702 4704 4705 4706 4707 4708 470 272 4710 4711 4712 4714 4715 4716 4717 4718 47 273 4720 4721 4722 4724 4725 4726 4727 4728 47 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 475 276 4750 4751 4752 4754 4755 4756 4757 4758 476 277 4760 4761 4762 4764 4765 <t< td=""><td>267</td><td>4660</td><td>4661</td><td>4662</td><td>4664</td><td>4665</td><td>4666</td><td>4667</td><td>4668</td><td>4669</td></t<>	267	4660	4661	4662	4664	4665	4666	4667	4668	4669
270 4690 4691 4692 4694 4695 4696 4697 4698 4695 271 4700 4701 4702 4704 4705 4706 4707 4708 470 272 4710 4711 4712 4714 4715 4716 4717 4718 472 273 4720 4721 4722 4724 4725 4726 4727 4728 473 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 475 276 4750 4751 4752 4754 4755 4756 4757 4758 475 277 4760 4761 4762 4764 4765 4766 4767 4768 476 279 4780 4781 4782 4784 4785	268	4670	4671	4672	4674	4675	4676	4677	4678	4679
271 4700 4701 4702 4704 4705 4706 4707 4708 470 272 4710 4711 4712 4714 4715 4716 4717 4718 470 273 4720 4721 4722 4724 4725 4726 4727 4728 473 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 474 276 4750 4751 4752 4754 4755 4756 4757 4758 476 277 4760 4761 4762 4764 4765 4766 4767 4768 476 278 4770 4771 4772 4774 4775 4776 4777 4778 478 280 4790 4791 4792 4794 4795	269	4680	4681	4682	4684	4685	4686	4687	4688	4689
272 4710 4711 4712 4714 4715 4716 4717 4718 472 273 4720 4721 4722 4724 4725 4726 4727 4728 472 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 475 276 4750 4751 4752 4754 4755 4756 4757 4758 476 277 4760 4761 4762 4764 4765 4766 4767 4768 477 278 4770 4771 4772 4774 4775 4776 4777 4778 477 279 4780 4781 4782 4784 4785 4786 4787 4788 478 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 481	270	4690	4691	4692	4694	4695	4696	4697	4698	4699
273 4720 4721 4722 4724 4725 4726 4727 4728 473 274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 474 276 4750 4751 4752 4754 4755 4756 4757 4758 475 277 4760 4761 4762 4764 4765 4766 4767 4768 476 278 4770 4771 4772 4774 4775 4776 4777 4778 478 280 4790 4791 4792 4794 4795 4796 4797 4798 479 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 4812 4814 4815	271	4700	4701	4702	4704	4705	4706	4707	4708	4709
274 4730 4731 4732 4734 4735 4736 4737 4738 473 275 4740 4741 4742 4744 4745 4746 4747 4748 473 276 4750 4751 4752 4754 4755 4756 4757 4758 475 277 4760 4761 4762 4764 4765 4766 4767 4768 476 278 4770 4771 4772 4774 4775 4776 4777 4778 477 279 4780 4781 4782 4784 4785 4786 4787 4788 478 280 4790 4791 4792 4794 4795 4796 4797 4788 478 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4821 4822 4824 4825	272	4710	4711	4712	4714	4715	4716	4717	4718	4719
275 4740 4741 4742 4744 4745 4746 4747 4748 474 276 4750 4751 4752 4754 4755 4756 4757 4758 475 277 4760 4761 4762 4764 4765 4766 4767 4768 476 278 4770 4771 4772 4774 4775 4776 4777 4778 475 279 4780 4781 4782 4784 4785 4786 4787 4788 478 280 4790 4791 4792 4794 4795 4796 4797 4798 479 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 4812 4814 4815 4816 4817 4818 48 283 4820 4821 4822 4824 4825 <	273	4720	4721	4722	4724	4725	4726	4727	4728	4729
276 4750 4751 4752 4754 4755 4756 4757 4758 475 277 4760 4761 4762 4764 4765 4766 4767 4768 476 278 4770 4771 4772 4774 4775 4776 4777 4778 47 279 4780 4781 4782 4784 4785 4786 4787 4788 478 280 4790 4791 4792 4794 4795 4796 4797 4798 478 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 4812 4814 4815 4816 4817 4818 483 283 4820 4821 4822 4824 4825 4826 4827 4828 483 284 4830 4831 4832 4834 4835 <	274	4730	4731	4732	4734	4735	4736	4737	4738	4739
277 4760 4761 4762 4764 4765 4766 4767 4768 476 278 4770 4771 4772 4774 4775 4776 4777 4778 476 279 4780 4781 4782 4784 4785 4786 4787 4788 478 280 4790 4791 4792 4794 4795 4796 4797 4798 475 281 4800 4801 4802 4804 4805 4806 4807 4808 486 282 4810 4811 4812 4814 4815 4816 4817 4818 483 283 4820 4821 4822 4824 4825 4826 4827 4828 483 284 4830 4831 4832 4834 4835 4836 4837 4838 483 285 4840 4841 4842 4844 4845	275	4740	4741	4742	4744	4745	4746	4747	4748	4749
278 4770 4771 4772 4774 4775 4776 4777 4778 4772 279 4780 4781 4782 4784 4785 4786 4787 4788 478 280 4790 4791 4792 4794 4795 4796 4797 4798 479 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 4812 4814 4815 4816 4817 4818 483 283 4820 4821 4822 4824 4825 4826 4827 4828 483 284 4830 4831 4832 4834 4835 4836 4837 4838 483 285 4840 4841 4842 4844 4845 4846 4847 4848 486 286 4850 4861 4862 4864 4865	276	4750	4751	4752	4754	4755	4756	4757	4758	4759
279 4780 4781 4782 4784 4785 4786 4787 4788 478 280 4790 4791 4792 4794 4795 4796 4797 4798 478 281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 4812 4814 4815 4816 4817 4818 48 283 4820 4821 4822 4824 4825 4826 4827 4828 483 284 4830 4831 4832 4834 4835 4836 4837 4838 483 285 4840 4841 4842 4844 4845 4846 4847 4848 484 286 4850 4851 4852 4854 4855 4856 4857 4858 486 287 4860 4861 4862 4864 4865 <	277	4760	4761	4762	4764	4765	4766	4767	4768	4769
280 4790 4791 4792 4794 4795 4796 4797 4798 479 281 4800 4801 4802 4804 4805 4806 4807 4808 486 282 4810 4811 4812 4814 4815 4816 4817 4818 483 283 4820 4821 4822 4824 4825 4826 4827 4828 483 284 4830 4831 4832 4834 4835 4836 4837 4838 483 285 4840 4841 4842 4844 4845 4846 4847 4848 484 286 4850 4851 4852 4854 4855 4856 4857 4858 486 287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875	278	4770	4771	4772	4774	4775	4776	4777	4778	4779
281 4800 4801 4802 4804 4805 4806 4807 4808 480 282 4810 4811 4812 4814 4815 4816 4817 4818 48 283 4820 4821 4822 4824 4825 4826 4827 4828 48 284 4830 4831 4832 4834 4835 4836 4837 4838 48 285 4840 4841 4842 4844 4845 4846 4847 4848 48 286 4850 4851 4852 4854 4855 4856 4857 4858 48 287 4860 4861 4862 4864 4865 4866 4867 4868 48 288 4870 4871 4872 4874 4875 4876 4877 4878 48 289 4880 4881 4882 4884 4885 4886 4887 4888 48 290 4890 4891 4892	279	4780	4781	4782	4784	4785	4786	4787	4788	4789
282 4810 4811 4812 4814 4815 4816 4817 4818 482 283 4820 4821 4822 4824 4825 4826 4827 4828 483 284 4830 4831 4832 4834 4835 4836 4837 4838 483 285 4840 4841 4842 4844 4845 4846 4847 4848 486 286 4850 4851 4852 4854 4855 4856 4857 4858 488 287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875 4876 4877 4878 488 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 489	280	4790	4791	4792	4794	4795	4796	4797	4798	4799
283 4820 4821 4822 4824 4825 4826 4827 4828 4828 284 4830 4831 4832 4834 4835 4836 4837 4838 483 285 4840 4841 4842 4844 4845 4846 4847 4848 484 286 4850 4851 4852 4854 4855 4856 4857 4858 485 287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875 4876 4877 4878 488 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	281	4800	4801	4802	4804	4805	4806	4807	4808	4809
284 4830 4831 4832 4834 4835 4836 4837 4838 4835 285 4840 4841 4842 4844 4845 4846 4847 4848 484 286 4850 4851 4852 4854 4855 4856 4857 4858 485 287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875 4876 4877 4878 488 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	282	4810	4811	4812	4814	4815	4816	4817	4818	4819
285 4840 4841 4842 4844 4845 4846 4847 4848 4848 286 4850 4851 4852 4854 4855 4856 4857 4858 485 287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875 4876 4877 4878 487 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	283	4820	4821	4822	4824	4825	4826	4827	4828	4829
286 4850 4851 4852 4854 4855 4856 4857 4858 485 287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875 4876 4877 4878 485 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	284	4830	4831	4832	4834	4835	4836	4837	4838	4839
287 4860 4861 4862 4864 4865 4866 4867 4868 486 288 4870 4871 4872 4874 4875 4876 4877 4878 48 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	285	4840	4841	4842	4844	4845	4846	4847	4848	4849
288 4870 4871 4872 4874 4875 4876 4877 4878 4878 289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	286	4850	4851	4852	4854	4855	4856	4857	4858	4859
289 4880 4881 4882 4884 4885 4886 4887 4888 488 290 4890 4891 4892 4894 4895 4896 4897 4898 488	287	4860	4861	4862	4864	4865	4866	4867	4868	4869
290 4890 4891 4892 4894 4895 4896 4897 4898 489	288	4870	4871	4872	4874	4875	4876	4877	4878	4879
	289	4880	4881	4882	4884	4885	4886	4887	4888	4889
	290	4890	4891	4892	4894	4895	4896	4897	4898	4899
291 4900 4901 4902 4904 4905 4906 4907 4908 490	291	4900	4901	4902	4904	4905	4906	4907	4908	4909
292 4910 4911 4912 4914 4915 4916 4917 4918 49	292	4910	4911	4912	4914	4915	4916	4917	4918	4919
293 4920 4921 4922 4924 4925 4926 4927 4928 492	293	4920	4921	4922	4924	4925	4926	4927	4928	4929
294 4930 4931 4932 4934 4935 4936 4937 4938 493	294	4930	4931	4932	4934	4935	4936	4937	4938	4939
295 4940 4941 4942 4944 4945 4946 4947 4948 494	295	4940	4941	4942	4944	4945	4946	4947	4948	4949
296 4950 4951 4952 4954 4955 4956 4957 4958 495	296	4950	4951	4952	4954	4955	4956	4957	4958	4959
297 4960 4961 4962 4964 4965 4966 4967 4968 496	297	4960	4961	4962	4964	4965	4966	4967	4968	4969
					4974	4975	4976	4977	4978	4979
					4984	4985	4986	4987	4988	4989
										4999

	Posi-			Com	mand		oning	Arc	data
Data	tioning	M code	Dwell		eed		ress		
No.	identi- fier	code	time	Low- order	High- order	Low- order	High- order	Low- order	High- order
301	5000	5001	5002	5004	5005	5006	5007	5008	5009
302	5010	5011	5012	5014	5015	5016	5017	5018	5019
303	5020	5021	5022	5024	5025	5026	5027	5028	5029
304	5030	5031	5032	5034	5035	5036	5037	5038	5039
305	5040	5041	5042	5044	5045	5046	5047	5048	5049
306	5050	5051	5052	5054	5055	5056	5057	5058	5059
307	5060	5061	5062	5064	5065	5066	5067	5068	5069
308	5070	5071	5072	5074	5075	5076	5077	5078	5079
309	5080	5081	5082	5084	5085	5086	5087	5088	5089
310	5090	5091	5092	5094	5095	5096	5097	5098	5099
311	5100	5101	5102	5104	5105	5106	5107	5108	5109
312	5110	5111	5112	5114	5115	5116	5117	5118	5119
313	5120	5121	5122	5124	5125	5126	5127	5128	5129
314	5130	5131	5132	5134	5135	5136	5137	5138	5139
315	5140	5141	5142	5144	5145	5146	5147	5148	5149
	5150	5151			5155				5159
316			5152	5154		5156	5157 5167	5158	5169
317	5160	5161	5162	5164	5165	5166		5168	
318	5170	5171	5172	5174	5175	5176	5177	5178	5179
319	5180	5181	5182	5184	5185	5186	5187	5188	5189
320	5190	5191	5192	5194	5195	5196	5197	5198	5199
321	5200	5201	5202	5204	5205	5206	5207	5208	5209
322	5210	5211	5212	5214	5215	5216	5217	5218	5219
323	5220	5221	5222	5224	5225	5226	5227	5228	5229
324	5230	5231	5232	5234	5235	5236	5237	5238	5239
325	5240	5241	5242	5244	5245	5246	5247	5248	5249
326	5250	5251	5252	5254	5255	5256	5257	5258	5259
327	5260	5261	5262	5264	5265	5266	5267	5268	5269
328	5270	5271	5272	5274	5275	5276	5277	5278	5279
329	5280	5281	5282	5284	5285	5286	5287	5288	5289
330	5290	5291	5292	5294	5295	5296	5297	5298	5299
331	5300	5301	5302	5304	5305	5306	5307	5308	5309
332	5310	5311	5312	5314	5315	5316	5317	5318	5319
333	5320	5321	5322	5324	5325	5326	5327	5328	5329
334	5330	5331	5332	5334	5335	5336	5337	5338	5339
335	5340	5341	5342	5344	5345	5346	5347	5348	5349
336	5350	5351	5352	5354	5355	5356	5357	5358	5359
337	5360	5361	5362	5364	5365	5366	5367	5368	5369
338	5370	5371	5372	5374	5375	5376	5377	5378	5379
339	5380	5381	5382	5384	5385	5386	5387	5388	5389
340	5390	5391	5392	5394	5395	5396	5397	5398	5399
341	5400	5401	5402	5404	5405	5406	5407	5408	5409
342	5410	5411	5412	5414	5415	5416	5417	5418	5419
343	5420	5421	5422	5424	5425	5426	5427	5428	5429
344	5430	5431	5432	5434	5435	5436	5437	5438	5439
345	5440	5441	5442	5444	5445	5446	5447	5448	5449
346	5450	5451	5452	5454	5455	5456	5457	5458	5459
347	5460	5461	5462	5464	5465	5466	5467	5468	5469
348	5470	5471	5472	5474	5475	5476	5477	5478	5479
349	5480	5481	5482	5484	5485	5486	5487	5488	5489
350	5490	5491	5492	5494	5495	5496	5497	5498	5499

Data	Posi-	М	Dwell		mand		oning ress	Arc	data
Data No.	tioning identi-	code	time	spe Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
351	5500	5501	5502	5504	5505	5506	5507	5508	5509
352	5510	5511	5512	5514	5515	5516	5517	5518	5519
353	5520	5521	5522	5524	5525	5526	5527	5528	5529
354	5530	5531	5532	5534	5535	5536	5537	5538	5539
355	5540	5541	5542	5544	5545	5546	5547	5548	5549
356	5550	5551	5552	5554	5555	5556	5557	5558	5559
357	5560	5561	5562	5564	5565	5566	5567	5568	5569
358	5570	5571	5572	5574	5575	5576	5577	5578	5579
359	5580	5581	5582	5584	5585	5586	5587	5588	5589
360	5590	5591	5592	5594	5595	5596	5597	5598	5599
361	5600	5601	5602	5604	5605	5606	5607	5608	5609
362	5610	5611	5612	5614	5615	5616	5617	5618	5619
363	5620	5621	5622	5624	5625	5626	5627	5628	5629
364	5630	5631	5632	5634	5635	5636	5637	5638	5639
365	5640	5641	5642	5644	5645	5646	5647	5648	5649
366	5650	5651	5652	5654	5655	5656	5657	5658	5659
367	5660	5661	5662	5664	5665	5666	5667	5668	5669
368	5670	5671	5672	5674	5675	5676	5677	5678	5679
369	5680	5681	5682	5684	5685	5686	5687	5688	5689
370	5690	5691	5692	5694	5695	5696	5697	5698	5699
371	5700	5701	5702	5704	5705	5706	5707	5708	5709
372	5710	5711	5712	5714	5715	5716	5717	5718	5719
373	5720	5721	5722	5724	5725	5726	5727	5728	5729
374	5730	5731	5732	5734	5735	5736	5737	5738	5739
375	5740	5741	5742	5744	5745	5746	5747	5748	5749
376	5750	5751	5752	5754	5755	5756	5757	5758	5759
377	5760	5761	5762	5764	5765	5766	5767	5768	5769
378	5770	5771	5772	5774	5775	5776	5777	5778	5779
379	5780	5781	5782	5784	5785	5786	5787	5788	5789
380	5790	5791	5792	5794	5795	5796	5797	5798	5799
381	5800	5801	5802	5804	5805	5806	5807	5808	5809
382	5810	5811	5812	5814	5815	5816	5817	5818	5819
383	5820	5821	5822	5824	5825	5826	5827	5828	5829
384	5830	5831	5832	5834	5835	5836	5837	5838	5839
385	5840	5841	5842	5844	5845	5846	5847	5848	5849
386	5850	5851	5852	5854	5855	5856	5857	5858	5859
387	5860	5861	5862	5864	5865	5866	5867	5868	5869
388	5870	5871	5872	5874	5875	5876	5877	5878	5879
389	5880	5881	5882	5884	5885	5886	5887	5888	5889
390	5890	5891	5892	5894	5895	5896	5897	5898	5899
391	5900	5901	5902	5904	5905	5906	5907	5908	5909
392	5910	5911	5912	5914	5915	5916	5917	5918	5919
393	5920	5921	5922	5924	5925	5926	5927	5928	5929
394	5930	5931	5932	5934	5935	5936	5937	5938	5939
395	5940	5941	5942	5944	5945	5946	5947	5948	5949
396	5950	5951	5952	5954	5955	5956	5957	5958	5959
397	5960	5961	5962	5964	5965	5966	5967	5968	5969
398	5970	5971	5972	5974	5975	5976	5977	5978	5979
399	5980	5981	5982	5984	5985	5986	5987	5988	5989
400	5990	5991	5992	5994	5995	5996	5997	5998	5999

Dete	Posi-	M	Durall		mand		ioning	Arc	data
Data No.	tioning identi-	M code	Dwell time	Low-	eed High-	Low-	High-	Low-	High-
	fier	0000		order	order	order	order	order	order
401	6000	6001	6002	6004	6005	6006	6007	6008	6009
402	6010	6011	6012	6014	6015	6016	6017	6018	6019
403	6020	6021	6022	6024	6025	6026	6027	6028	6029
404	6030	6031	6032	6034	6035	6036	6037	6038	6039
405	6040	6041	6042	6044	6045	6046	6047	6048	6049
406	6050	6051	6052	6054	6055	6056	6057	6058	6059
407	6060	6061	6062	6064	6065	6066	6067	6068	6069
408	6070	6071	6072	6074	6075	6076	6077	6078	6079
409	6080	6081	6082	6084	6085	6086	6087	6088	6089
410	6090	6091	6092	6094	6095	6096	6097	6098	6099
411	6100	6101	6102	6104	6105	6106	6107	6108	6109
412	6110	6111	6112	6114	6115	6116	6117	6118	6119
413	6120	6121	6122	6124	6125	6126	6127	6128	6129
414	6130	6131	6132	6134	6135	6136	6137	6138	6139
415	6140	6141	6142	6144	6145	6146	6147	6148	6149
416	6150	6151	6152	6154	6155	6156	6157	6158	6159
417	6160	6161	6162	6164	6165	6166	6167	6168	6169
418	6170	6171	6172	6174	6175	6176	6177	6178	6179
419	6180	6181	6182	6184	6185	6186	6187	6188	6189
420	6190	6191	6192	6194	6195	6196	6197	6198	6199
421	6200	6201	6202	6204	6205	6206	6207	6208	6209
422	6210	6211	6212	6214	6215	6216	6217	6218	6219
423	6220	6221	6222	6224	6225	6226	6227	6228	6229
424	6230	6231	6232	6234	6235	6236	6237	6238	6239
425	6240	6241	6242	6244	6245	6246	6247	6248	6249
426	6250	6251	6252	6254	6255	6256	6257	6258	6259
427	6260	6261	6262	6264	6265	6266	6267	6268	6269
428	6270	6271	6272	6274	6275	6276	6277	6278	6279
429	6280	6281	6282	6284	6285	6286	6287	6288	6289
430	6290	6291	6292	6294	6295	6296	6297	6298	6299
431	6300	6301	6302	6304	6305	6306	6307	6308	6309
432	6310	6311	6312	6314	6315	6316	6317	6318	6319
433	6320	6321	6322	6324	6325	6326	6327	6328	6329
434	6330	6331	6332	6334	6335	6336	6337	6338	6339
435	6340	6341	6342	6344	6345	6346	6347	6348	6349
436	6350	6351	6352	6354	6355	6356	6357	6358	6359
437	6360	6361	6362	6364	6365	6366	6367	6368	6369
438	6370	6371	6372	6374	6375	6376	6377	6378	6379
439	6380	6381	6382	6384	6385	6386	6387	6388	6389
440	6390	6391	6392	6394	6395	6396	6397	6398	6399
441	6400	6401	6402	6404	6405	6406	6407	6408	6409
442	6410	6411	6412	6414	6415	6416	6417	6418	6419
443	6420	6421	6422	6424	6425	6426	6427	6428	6429
444	6430	6431	6432	6434	6435	6436	6437	6438	6439
445	6440	6441	6442	6444	6445	6446	6447	6448	6449
446	6450	6451	6452	6454	6455	6456	6457	6458	6459
447	6460	6461	6462	6464	6465	6466	6467	6468	6469
448	6470	6471	6472	6474	6475	6476	6477	6478	6479
449	6480	6481	6482	6484	6485	6486	6487	6488	6489
450	6490	6491	6492	6494	6495	6496	6497	6498	6499

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
451	6500	6501	6502	6504	6505	6506	6507	6508	6509
452	6510	6511	6512	6514	6515	6516	6517	6518	6519
453	6520	6521	6522	6524	6525	6526	6527	6528	6529
454	6530	6531	6532	6534	6535	6536	6537	6538	6539
455	6540	6541	6542	6544	6545	6546	6547	6548	6549
456	6550	6551	6552	6554	6555	6556	6557	6558	6559
457	6560	6561	6562	6564	6565	6566	6567	6568	6569
458	6570	6571	6572	6574	6575	6576	6577	6578	6579
459	6580	6581	6582	6584	6585	6586	6587	6588	6589
460	6590	6591	6592	6594	6595	6596	6597	6598	6599
461	6600	6601	6602	6604	6605	6606	6607	6608	6609
462	6610	6611	6612	6614	6615	6616	6617	6618	6619
463	6620	6621	6622	6624	6625	6626	6627	6628	6629
464	6630	6631	6632	6634	6635	6636	6637	6638	6639
465	6640	6641	6642	6644	6645	6646	6647	6648	6649
466	6650	6651	6652	6654	6655	6656	6657	6658	6659
467	6660	6661	6662	6664	6665	6666	6667	6668	6669
468	6670	6671	6672	6674	6675	6676	6677	6678	6679
469	6680	6681	6682	6684	6685	6686	6687	6688	6689
470	6690	6691	6692	6694	6695	6696	6697	6698	6699
471	6700	6701	6702	6704	6705	6706	6707	6708	6709
472	6710	6711	6712	6714	6715	6716	6717	6718	6719
473	6720	6721	6722	6724	6725	6726	6727	6728	6729
474	6730	6731	6732	6734	6735	6736	6737	6738	6739
475	6740	6741	6742	6744	6745	6746	6747	6748	6749
476	6750	6751	6752	6754	6755	6756	6757	6758	6759
477	6760	6761	6762	6764	6765	6766	6767	6768	6769
478	6770	6771	6772	6774	6775	6776	6777	6778	6779
479	6780	6781	6782	6784	6785	6786	6787	6788	6789
480	6790	6791	6792	6794	6795	6796	6797	6798	6799
481	6800	6801	6802	6804	6805	6806	6807	6808	6809
482	6810	6811	6812	6814	6815	6816	6817	6818	6819
483	6820	6821	6822	6824	6825	6826	6827	6828	6829
484	6830	6831	6832	6834	6835	6836	6837	6838	6839
485	6840	6841	6842	6844	6845	6846	6847	6848	6849
486	6850	6851	6852	6854	6855	6856	6857	6858	6859
487	6860	6861	6862	6864	6865	6866	6867	6868	6869
488	6870	6871	6872	6874	6875	6876	6877	6878	6879
489	6880	6881	6882	6884	6885	6886	6887	6888	6889
490	6890	6891	6892	6894	6895	6896	6897	6898	6899
491	6900	6901	6902	6904	6905	6906	6907	6908	6909
492	6910	6911	6912	6914	6915	6916	6917	6918	6919
493	6920	6921	6922	6924	6925	6926	6927	6928	6929
494	6930	6931	6932	6934	6935	6936	6937	6938	6939
495	6940	6941	6942	6944	6945	6946	6947	6948	6949
496	6950	6951	6952	6954	6955	6956	6957	6958	6959
497	6960	6961	6962	6964	6965	6966	6967	6968	6969
498	6970	6971	6972	6974	6975	6976	6977	6978	6979
499	6980	6981	6982	6984	6985	6986	6987	6988	6989
500	6990	6991	6992	6994	6995	6996	6997	6998	6999

Data	Posi-	М	Dwell		mand eed		oning ress	Arc	data
No.	tioning identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
501	7000	7001	7002	7004	7005	7006	7007	7008	7009
502	7010	7011	7012	7014	7015	7016	7017	7018	7019
503	7020	7021	7022	7024	7025	7026	7027	7028	7029
504	7030	7031	7032	7034	7035	7036	7037	7038	7039
505	7040	7041	7042	7044	7045	7046	7047	7048	7049
506	7050	7051	7052	7054	7055	7056	7057	7058	7059
507	7060	7061	7062	7064	7065	7066	7067	7068	7069
508	7070	7071	7072	7074	7075	7076	7077	7078	7079
509	7080	7081	7082	7084	7085	7086	7087	7088	7089
510	7090	7091	7092	7094	7095	7096	7097	7098	7099
511	7100	7101	7102	7104	7105	7106	7107	7108	7109
512	7110	7111	7112	7114	7115	7116	7117	7118	7119
513	7120	7121	7122	7124	7125	7126	7127	7128	7129
514	7130	7131	7132	7134	7135	7136	7137	7138	7139
515	7140	7141	7142	7144	7145	7146	7147	7148	7149
516	7150	7151	7152	7154	7155	7156	7157	7158	7159
517	7160	7161	7162	7164	7165	7166	7167	7168	7169
518	7170	7171	7172	7174	7175	7176	7177	7178	7179
519	7180	7181	7182	7184	7185	7186	7187	7188	7189
520	7190	7191	7192	7194	7195	7196	7197	7198	7199
521	7200	7201	7202	7204	7205	7206	7207	7208	7209
522	7210	7211	7212	7214	7215	7216	7217	7218	7219
523	7220	7221	7222	7224	7225	7226	7227	7228	7229
524	7230	7231	7232	7234	7235	7236	7237	7238	7239
525	7240	7241	7242	7244	7245	7246	7247	7248	7249
526	7250	7251	7252	7254	7255	7256	7257	7258	7259
527	7260	7261	7262	7264	7265	7266	7267	7268	7269
528	7270	7271	7272	7274	7275	7276	7277	7278	7279
529	7280	7281	7282	7284	7285	7286	7287	7288	7289
530	7290	7291	7292	7294	7295	7296	7297	7298	7299
531	7300	7301	7302	7304	7305	7306	7307	7308	7309
532	7310	7311	7312	7314	7315	7316	7317	7318	7319
533	7320	7321	7322	7324	7325	7326	7327	7328	7329
534	7330	7331	7332	7334	7335	7336	7337	7338	7339
535	7340	7341	7342	7344	7345	7346	7347	7348	7349
536	7350	7351	7352	7354	7355	7356	7357	7358	7359
537	7360	7361	7362	7364	7365	7366	7367	7368	7369
538	7370	7371	7372	7374	7375	7376	7377	7378	7379
539	7380	7381	7382	7384	7385	7386	7387	7388	7389
540	7390	7391	7392	7394	7395	7396	7397	7398	7399
541	7400	7401	7402	7404	7405	7406	7407	7408	7409
542	7410	7411	7412	7414	7415	7416	7417	7418	7419
543	7420	7421	7422	7424	7425	7426	7427	7428	7429
544	7430	7431	7432	7434	7435	7436	7437	7438	7439
545	7440	7441	7442	7444	7445	7446	7447	7448	7449
546	7450	7451	7452	7454	7455	7456	7457	7458	7459
547	7460	7461	7462	7464	7465	7466	7467	7468	7469
548	7470	7471	7472	7474	7475	7476	7477	7478	7479
549	7480	7481	7482	7484	7485	7486	7487	7488	7489
550	7490	7491	7492	7494	7495	7496	7497	7498	7499

Data	Posi- tioning	М	Dwell	Com	mand		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
551	7500	7501	7502	7504	7505	7506	7507	7508	7509
552	7510	7511	7512	7514	7515	7516	7517	7518	7519
553	7520	7521	7522	7524	7525	7526	7527	7528	7529
554	7530	7531	7532	7534	7535	7536	7537	7538	7539
555	7540	7541	7542	7544	7545	7546	7547	7548	7549
556	7550	7551	7552	7554	7555	7556	7557	7558	7559
557	7560	7561	7562	7564	7565	7566	7567	7568	7569
558	7570	7571	7572	7574	7575	7576	7577	7578	7579
559	7580	7581	7582	7584	7585	7586	7587	7588	7589
560	7590	7591	7592	7594	7595	7596	7597	7598	7599
561	7600	7601	7602	7604	7605	7606	7607	7608	7609
562	7610	7611	7612	7614	7615	7616	7617	7618	7619
563	7620	7621	7622	7624	7625	7626	7627	7628	7629
564	7630	7631	7632	7634	7635	7636	7637	7638	7639
565	7640	7641	7642	7644	7645	7646	7647	7648	7649
566	7650	7651	7652	7654	7655	7656	7657	7658	7659
567	7660	7661	7662	7664	7665	7666	7667	7668	7669
568	7670	7671	7672	7674	7675	7676	7677	7678	7679
569	7680	7681	7682	7684	7685	7686	7687	7688	7689
570	7690	7691	7692	7694	7695	7696	7697	7698	7699
571	7700	7701	7702	7704	7705	7706	7707	7708	7709
572	7710	7711	7712	7714	7715	7716	7717	7718	7719
573	7720	7721	7722	7724	7725	7726	7727	7728	7729
574	7730	7731	7732	7734	7735	7736	7737	7738	7739
575	7740	7741	7742	7744	7745	7746	7747	7748	7749
576	7750	7751	7752	7754	7755	7756	7757	7758	7759
577	7760	7761	7762	7764	7765	7766	7767	7768	7769
578	7770	7771	7772	7774	7775	7776	7777	7778	7779
579	7780	7781	7782	7784	7785	7786	7787	7788	7789
580	7790	7791	7792	7794	7795	7796	7797	7798	7799
581	7800	7801	7802	7804	7805	7806	7807	7808	7809
582	7810	7811	7812	7814	7815	7816	7817	7818	7819
583	7820	7821	7822	7824	7825	7826	7827	7828	7829
584	7830	7831	7832	7834	7835	7836	7837	7838	7839
585	7840	7841	7842	7844	7845	7846	7847	7848	7849
586	7850	7851	7852	7854	7855	7856	7857	7858	7859
587	7860	7861	7862	7864	7865	7866	7867	7868	7869
588	7870	7871	7872	7874	7875	7876	7877	7878	7879
589	7880	7881	7882	7884	7885	7886	7887	7888	7889
590	7890	7891	7892	7894	7895	7896	7897	7898	7899
591	7900	7901	7902	7904	7905	7906	7907	7908	7909
592	7910	7911	7912	7914	7915	7916	7917	7918	7919
593	7920	7921	7922	7924	7925	7926	7927	7928	7929
594	7930	7931	7932	7934	7935	7936	7937	7938	7939
595	7940	7941	7942	7944	7945	7946	7947	7948	7949
596	7950	7951	7952	7954	7955	7956	7957	7958	7959
597	7960	7961	7962	7964	7965	7966	7967	7968	7969
598	7970	7971	7972	7974	7975	7976	7977	7978	7979
599	7980	7981	7982	7984	7985	7986	7987	7988	7989
600	7990	7991	7992	7994	7995	7996	7997	7998	7999

(1) For axis 1 (positioning option)

Death Death Death Death Positioning Death Death							1					
2 2013 52 2513 102 3013 152 3513 202 4013 252 4513 3 2023 53 2523 103 3023 153 3523 203 4023 253 4523 4 2033 54 2533 104 3033 154 3533 204 4033 254 4533 5 2043 56 2553 106 3053 156 3553 206 4053 255 4643 6 2053 56 2583 100 3053 157 3563 207 4063 257 4563 8 2073 58 2573 108 3073 158 3573 208 4073 258 4563 10 2063 51 2603 111 3103 160 3983 209 4083 259 4563 11 2103 61 2803 111 <td< td=""><td></td><td>-</td><td></td><td>-</td><td></td><td></td><td></td><td>•</td><td></td><td>•</td><td></td><td>•</td></td<>		-		-				•		•		•
2 2013 52 2513 102 3013 152 3513 202 4013 252 4513 3 2023 53 2523 103 3023 153 3523 203 4023 253 4523 4 2033 54 2533 104 3033 154 3533 204 4033 254 4533 5 2043 56 2553 106 3053 156 3553 206 4053 255 4643 6 2053 56 2583 100 3053 157 3563 207 4063 257 4563 8 2073 58 2573 108 3073 158 3573 208 4073 258 4563 10 2063 51 2603 111 3103 160 3983 209 4083 259 4563 11 2103 61 2803 111 <td< td=""><td></td><td>2002</td><td>E1</td><td>2502</td><td>101</td><td>2002</td><td>151</td><td>2502</td><td>201</td><td>4002</td><td>251</td><td>4502</td></td<>		2002	E1	2502	101	2002	151	2502	201	4002	251	4502
3 2023 53 2533 103 3023 153 3523 203 4023 253 254 4533 5 2043 55 2543 105 3043 155 3543 205 4043 255 4543 6 2053 56 2553 106 3053 156 3553 206 4063 256 4553 7 2063 67 2563 107 3063 156 3553 206 4063 257 4663 8 2073 58 2573 108 3073 158 3573 208 4073 258 4573 9 2083 59 2583 109 3083 159 3583 208 4073 258 4573 10 2093 60 2593 110 3093 160 3593 210 4093 260 4593 111 2103 363 212 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>												
4 2033 654 2533 104 3033 154 3533 204 4033 256 4533 6 2053 56 2553 106 3063 166 3553 206 4063 256 4553 7 2063 57 2563 107 3063 157 3663 207 4063 256 4553 9 2063 59 2563 109 3083 159 3563 209 4063 256 4563 10 2093 59 2563 110 3093 160 3563 209 4083 256 4563 11 2103 61 2563 111 313 161 3603 211 4103 261 4603 12 2113 62 2613 112 3113 162 3613 212 4113 262 4613 13 21233 66 2653 113												
6 2043 55 2643 105 3043 155 3543 205 4043 256 4543 6 2053 56 2553 100 3063 156 3553 206 4053 256 4563 7 2063 57 2563 107 3063 157 3563 207 4063 257 4563 8 2073 58 2573 108 3073 158 3573 208 4073 258 4573 10 2093 60 2593 110 3093 160 3583 209 4083 259 4583 11 2103 61 2603 111 3103 161 3603 211 4103 260 4693 11 2113 62 2613 112 3113 3123 162 3613 212 4113 263 4623 15 2143 65 2643												
6 2053 56 2553 106 3053 156 3553 206 4053 256 4553 7 2063 57 2563 107 3063 157 3663 207 4063 257 4663 4653 9 4663 2573 108 3073 168 3573 208 4073 256 4573 9 2083 59 2583 109 3083 169 3593 210 4093 259 4683 4583 11 2103 61 2603 111 3103 161 3603 211 4103 261 4603 11 4103 261 4603 4613 412 2113 62 2613 112 3113 3122 4113 262 4613 414 2133 64 2633 114 3133 163 3623 213 4143 263 4623 4613 4615 34142 256 4653 4673												
7 2063 57 2563 107 3063 157 3563 207 4063 257 4563 8 2073 56 2573 108 3073 156 3573 208 4073 256 4573 9 2083 59 2583 109 3083 159 3583 209 4083 259 4583 10 2093 60 2593 110 3093 160 3593 210 4093 260 4593 11 2103 61 2603 111 3113 162 3613 212 4113 262 4603 13 2123 63 2623 113 3123 163 3623 214 41133 264 4663 14 2133 64 2633 111 3133 166 3633 214 4183 265 4663 16 2163 66 2653 116	1											
8 2073 58 2573 108 3073 158 3573 208 4073 258 4573 9 2083 59 2583 109 3083 159 3583 209 4083 259 4883 10 2093 60 2593 110 3093 160 3593 210 4093 260 4593 11 2103 61 2603 111 3103 161 3603 211 4103 261 4603 12 2113 62 2613 112 3113 162 3613 212 4113 262 4613 14 2133 64 2633 114 3133 164 3633 214 4133 264 4633 15 2163 65 2663 117 3163 167 3663 216 4153 266 4653 18 2173 68 2673 118												
9 2083 59 2583 109 3083 159 3583 209 4083 259 4583 10 2093 60 2593 110 3093 160 3593 210 4093 250 4583 11 2103 61 2603 111 3103 161 3603 211 4103 261 4603 12 2113 62 2613 112 3113 162 3613 212 4113 262 4613 13 2123 63 2623 113 3123 163 3623 214 4113 265 4613 15 2143 65 2643 115 3143 165 3643 215 4143 265 4643 16 2153 66 2683 115 3153 166 3653 216 4153 266 4653 18 2173 68 2673 118												
10												
111 2103 61 2603 111 3103 161 3603 211 4103 261 4603 12 2113 62 2613 112 3113 3123 633 212 4113 262 4613 13 2123 64 2633 114 3133 164 3633 214 4133 264 4633 14 2133 64 2633 114 3133 164 3633 215 4143 264 4633 15 2143 65 2643 115 3143 166 3643 215 4143 266 4653 16 2153 66 2653 116 3153 166 3653 216 4153 266 4653 17 2163 67 2663 117 3163 166 3653 218 4173 286 4653 19 2183 69 2683 119												
12 2113 62 2613 112 3113 162 3613 212 4113 262 4613 13 2123 63 2623 113 3123 163 3623 213 4123 263 4623 15 2143 65 2643 115 3143 166 3633 214 4133 264 4633 15 2143 65 2643 115 3143 166 3653 216 4163 265 4643 16 2153 66 2653 116 3153 166 3653 216 4163 266 4663 18 2173 68 2673 118 3173 168 3673 218 4173 268 4673 19 2183 69 2683 119 3183 169 3683 219 4183 269 4683 20 2193 70 2693 120	1											
13 2123 63 2623 113 3123 163 3623 213 4123 263 4623 14 2133 64 2633 114 3133 164 36633 214 4143 264 4633 15 2143 65 2643 116 3133 166 3663 215 4143 264 4633 16 2153 66 2653 116 3153 166 3663 217 4163 267 4663 18 2173 68 2673 118 3173 168 3673 218 4173 268 4673 19 2183 69 2683 119 3183 169 3683 219 4183 268 4673 19 2183 69 2683 119 3183 169 3683 220 4193 270 4683 20 2193 70 2693 120												
14 2133 64 2633 114 3133 164 3633 214 4133 264 4633 15 2143 65 2643 115 3143 165 3663 216 4143 265 4683 16 2153 66 2653 116 3153 166 3653 216 4163 267 4663 17 2163 67 2663 117 3163 167 3663 217 4163 267 4663 18 2173 68 2673 118 3173 168 3673 218 4173 288 4673 19 2183 69 2683 119 3183 169 3663 219 4183 269 4683 20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 2703 121												
15 2143 65 2643 115 3143 165 3643 215 4143 265 4643 16 2153 66 2653 116 3153 166 3663 216 4153 266 4663 17 2163 67 2663 118 3173 168 3673 218 4173 268 4673 18 2173 68 2673 118 3173 168 3673 218 4173 268 4673 19 2183 69 2683 119 3183 169 3683 219 4183 269 4683 20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 7273 122 3213 170 3693 220 44133 270 4693 221 2223 73 2723 123												
16 2153 66 2653 116 3153 166 3653 216 4153 266 4663 17 2163 67 2663 117 3163 167 3663 217 4163 267 4663 18 2173 68 2673 118 3173 168 3673 218 4173 268 4673 19 2183 69 2683 119 3183 169 3683 219 4183 269 4683 20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 2703 121 3203 171 3703 221 4203 271 4703 22 2213 72 2713 122 3213 172 3713 222 4213 275 4713 22 2213 72 2733 124												
17 2163 67 2663 117 3163 167 3663 217 4163 267 4663 18 2173 68 2673 118 3173 168 3673 218 4173 268 4673 19 2183 69 2683 119 3183 169 3683 219 4183 269 4683 20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 2703 121 3203 171 3703 221 4203 271 4703 22 2213 72 2713 122 3213 172 3713 222 4213 272 4713 224 2233 74 2733 124 3233 174 3733 224 4233 274 4733 25 2243 75 2743 125	1											
18 2173 68 2673 118 3173 168 3673 218 4173 268 4673 19 2183 69 2683 119 3183 169 3683 219 4183 269 4683 20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 2703 121 3203 171 3703 221 4203 271 4703 22 2213 72 2713 122 3213 172 3713 222 4213 272 4713 23 2223 73 2723 123 3223 173 3723 223 4223 273 4723 24 2233 76 2733 126 3253 175 3743 225 4243 275 4743 26 2253 76 2753 126	16	2153	66									
19 2183 69 2683 119 3183 169 3683 219 4183 269 4683 20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 2703 121 3203 171 3703 221 4203 271 4703 22 2213 72 2713 122 3213 172 3713 222 4213 272 4713 23 2223 73 2723 123 3223 173 3723 223 4223 274 4733 24 2233 74 2733 124 3233 174 3733 224 4233 274 4733 25 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126												
20 2193 70 2693 120 3193 170 3693 220 4193 270 4693 21 2203 71 2703 121 3203 171 3703 221 4203 271 4703 22 2213 72 2713 122 3213 172 3713 222 4213 272 4713 23 2223 73 2723 123 3223 173 3723 223 4223 273 4723 24 2233 74 2733 124 3233 174 3733 224 4233 274 4733 26 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126 3253 176 3753 226 4253 276 4763 27 2263 77 2763 128	18		68									
21 2203 71 2703 121 3203 171 3703 221 4203 271 4703 22 2213 72 2713 122 3213 172 3713 222 4213 272 4713 23 2223 73 2723 123 3223 173 3723 223 4223 273 4723 24 2233 74 2733 124 3233 174 3733 224 4233 274 4733 25 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126 3253 176 3753 226 4253 276 4763 27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 29 2283 79 2783 129	19	2183	69		119		169		219	4183	269	4683
22 2213 72 2713 122 3213 172 3713 222 4213 272 4713 23 2223 73 2723 123 3223 173 3723 223 4223 273 4723 24 2233 74 2733 124 3233 174 3733 224 4233 274 4733 25 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126 3253 176 3763 227 4263 277 4763 27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 30 2293 80 2793 130	20	2193	70	2693	120		170		220	4193	270	4693
23 2223 73 2723 123 3223 173 3723 223 4223 273 4723 24 2233 74 2733 124 3233 174 3733 224 4233 274 4733 25 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126 3253 176 3753 226 4253 276 4753 27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 29 2283 79 2783 129 3283 179 3783 229 4283 279 4783 31 2303 81 2803 131	21	2203	71	2703	121	3203	171	3703	221	4203	271	4703
24 2233 74 2733 124 3233 174 3733 224 4233 274 4733 25 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126 3253 176 3753 226 4253 276 4763 27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 29 2283 79 2783 129 3283 179 3783 229 4283 279 4783 30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131	22	2213	72	2713	122	3213	172	3713	222	4213	272	4713
25 2243 75 2743 125 3243 175 3743 225 4243 275 4743 26 2253 76 2753 126 3253 176 3753 226 4253 276 4753 27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 39 2283 79 2783 129 3283 179 3783 229 4283 279 4783 30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 133	23	2223	73	2723	123	3223	173	3723	223	4223	273	4723
26 2253 76 2753 126 3253 176 3753 226 4253 276 4753 27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 29 2283 79 2783 129 3283 179 3783 229 4283 279 4783 30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133	24	2233	74	2733	124	3233	174	3733	224	4233	274	4733
27 2263 77 2763 127 3263 177 3763 227 4263 277 4763 28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 29 2283 79 2783 129 3283 179 3783 229 4283 279 4783 30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133 3323 183 3823 233 4323 284 4833 34 2333 84 2833 134	25	2243	75	2743	125	3243	175	3743	225	4243	275	4743
28 2273 78 2773 128 3273 178 3773 228 4273 278 4773 29 2283 79 2783 129 3283 179 3783 229 4283 279 4783 30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133 3323 183 3823 233 4323 283 4823 34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 36 2353 86 2853 136	26	2253	76	2753	126	3253	176	3753	226	4253	276	4753
29 2283 79 2783 129 3283 179 3783 229 4283 279 4783 30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133 3323 183 3823 233 4323 283 4823 34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136	27	2263	77	2763	127	3263	177	3763	227	4263	277	4763
30 2293 80 2793 130 3293 180 3793 230 4293 280 4793 31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133 3323 183 3823 233 4323 283 4823 34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136 3353 186 3853 237 4363 287 4863 38 2373 88 2873 138	28	2273	78	2773	128	3273	178	3773	228	4273	278	4773
31 2303 81 2803 131 3303 181 3803 231 4303 281 4803 32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133 3323 183 3823 233 4323 283 4823 34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136 3353 186 3853 236 4353 286 4853 37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138	29	2283	79	2783	129	3283	179	3783	229	4283	279	4783
32 2313 82 2813 132 3313 182 3813 232 4313 282 4813 33 2323 83 2823 133 3323 183 3823 233 4323 283 4823 34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136 3353 186 3853 236 4353 286 4853 37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139	30	2293	80	2793	130	3293	180	3793	230	4293	280	4793
33 2323 83 2823 133 3323 183 3823 233 4323 283 4823 34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136 3353 186 3853 236 4353 286 4853 37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140	31	2303	81	2803	131	3303	181	3803	231	4303	281	4803
34 2333 84 2833 134 3333 184 3833 234 4333 284 4833 35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136 3353 186 3853 236 4353 286 4853 37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141	32	2313	82	2813	132	3313	182	3813	232	4313	282	4813
35 2343 85 2843 135 3343 185 3843 235 4343 285 4843 36 2353 86 2853 136 3353 186 3853 236 4353 286 4853 37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142	33	2323	83	2823	133	3323	183	3823	233	4323	283	4823
36 2353 86 2853 136 3353 186 3853 236 4353 286 4853 37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143	34	2333	84	2833	134	3333	184	3833	234	4333	284	4833
37 2363 87 2863 137 3363 187 3863 237 4363 287 4863 38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144	35	2343	85	2843	135	3343	185	3843	235	4343	285	4843
38 2373 88 2873 138 3373 188 3873 238 4373 288 4873 39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46	36	2353	86	2853	136	3353	186	3853	236	4353	286	4853
39 2383 89 2883 139 3383 189 3883 239 4383 289 4883 40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47	37	2363	87	2863	137	3363	187	3863	237	4363	287	4863
40 2393 90 2893 140 3393 190 3893 240 4393 290 4893 41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147	38	2373	88	2873	138	3373	188	3873	238	4373	288	4873
41 2403 91 2903 141 3403 191 3903 241 4403 291 4903 42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49	39	2383	89	2883	139	3383	189	3883	239	4383	289	4883
42 2413 92 2913 142 3413 192 3913 242 4413 292 4913 43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	40	2393	90	2893	140	3393	190	3893	240	4393	290	4893
43 2423 93 2923 143 3423 193 3923 243 4423 293 4923 44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	41	2403	91	2903	141	3403	191	3903	241	4403	291	4903
44 2433 94 2933 144 3433 194 3933 244 4433 294 4933 45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	42	2413	92	2913	142	3413	192	3913	242	4413	292	4913
45 2443 95 2943 145 3443 195 3943 245 4443 295 4943 46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	43	2423	93	2923	143	3423	193	3923	243	4423	293	4923
46 2453 96 2953 146 3453 196 3953 246 4453 296 4953 47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	44	2433	94	2933	144	3433	194	3933	244	4433	294	4933
47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	45	2443	95	2943	145	3443	195	3943	245	4443	295	4943
47 2463 97 2963 147 3463 197 3963 247 4463 297 4963 48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	46	2453	96	2953	146	3453	196	3953	246	4453	296	4953
48 2473 98 2973 148 3473 198 3973 248 4473 298 4973 49 2483 99 2983 149 3483 199 3983 249 4483 299 4983	47		97		147		197	3963	247	4463	297	4963
49 2483 99 2983 149 3483 199 3983 249 4483 299 4983					148		198	3973	248	4473	298	4973
			99		149		199	3983	249	4483	299	4983
	50	2493	100	2993	150	3493	200	3993	250	4493	300	4993

(1) For axis 1 (positioning option)

			1			ı					
Data No.	Positioning option										
-	·		·		·						·
301	5003	351	5503	401	6003	451	6503	501	7003	551	7503
302	5013	352	5513	402	6013	452	6513	502	7013	552	7513
303	5023	353	5523	403	6023	453	6523	503	7023	553	7523
304	5033	354	5533	404	6033	454	6533	504	7033	554	7533
305	5043	355	5543	405	6043	455	6543	505	7043	555	7543
306	5053	356	5553	406	6053	456	6553	506	7053	556	7553
307	5063	357	5563	407	6063	457	6563	507	7063	557	7563
308	5073	358	5573	408	6073	458	6573	508	7073	558	7573
309	5083	359	5583	409	6083	459	6583	509	7083	559	7583
310	5093	360	5593	410	6093	460	6593	510	7093	560	7593
311	5103	361	5603	411	6103	461	6603	511	7103	561	7603
312	5113	362	5613	412	6113	462	6613	512	7113	562	7613
313	5123	363	5623	413	6123	463	6623	513	7123	563	7623
314	5133	364	5633	414	6133	464	6633	514	7133	564	7633
315	5143	365	5643	415	6143	465	6643	515	7143	565	7643
316	5153	366	5653	416	6153	466	6653	516	7153	566	7653
317	5163	367	5663	417	6163	467	6663	517	7163	567	7663
318	5173	368	5673	418	6173	468	6673	518	7173	568	7673
319	5183	369	5683	419	6183	469	6683	519	7183	569	7683
320	5193	370	5693	420	6193	470	6693	520	7193	570	7693
321	5203	371	5703	421	6203	471	6703	521	7203	571	7703
322	5213	372	5713	422	6213	472	6713	522	7213	572	7713
323	5223	373	5723	423	6223	473	6723	523	7223	573	7723
324	5233	374	5733	424	6233	474	6733	524	7233	574	7733
325	5243	375	5743	425	6243	475	6743	525	7243	575	7743
326	5253	376	5753	426	6253	476	6753	526	7253	576	7753
327	5263	377	5763	427	6263	477	6763	527	7263	577	7763
328	5273	378	5773	428	6273	478	6773	528	7273	578	7773
329	5283	379	5783	429	6283	479	6783	529	7283	579	7783
330	5293	380	5793	430	6293	480	6793	530	7293	580	7793
331	5303	381	5803	431	6303	481	6803	531	7303	581	7803
332	5313	382	5813	432	6313	482	6813	532	7313	582	7813
333	5323	383	5823	433	6323	483	6823	533	7323	583	7823
334	5333	384	5833	434	6333	484	6833	534	7333	584	7833
335	5343	385	5843	435	6343	485	6843	535	7343	585	7843
336	5353	386	5853	436	6353	486	6853	536	7353	586	7853
337	5363	387	5863	437	6363	487	6863	537	7363	587	7863
338	5373	388	5873	438	6373	488	6873	538	7373	588	7873
339	5383	389	5883	439	6383	489	6883	539	7383	589	7883
340	5393	390	5893	440	6393	490	6893	540	7393	590	7893
341	5403	391	5903	441	6403	491	6903	541	7403	591	7903
342	5413	392	5913	442	6413	492	6913	542	7413	592	7913
343	5423	393	5923	443	6423	493	6923	543	7423	593	7923
344	5433	394	5933	444	6433	494	6933	544	7433	594	7933
345	5443	395	5943	445	6443	495	6943	545	7443	595	7943
346	5453	396	5953	446	6453	496	6953	546	7453	596	7953
347	5463	397	5963	447	6463	497	6963	547	7463	597	7963
348	5473	398	5973	448	6473	498	6973	548	7473	598	7973
349	5483	399	5983	449	6483	499	6983	549	7483	599	7983
350	5493	400	5993	450	6493	500	6993	550	7493	600	7993

Data Honing Mo Dave Low Low right Low roder order orde	Dete	Posi-		Donall		mand		ioning	Arc	data
1 8000 8001 8002 8004 8005 8006 8007 8008 8009 2 8010 8011 8012 8014 8015 8016 8017 8018 8019 3 8020 8021 8022 8024 8025 8026 8027 8028 8029 4 8030 8031 8032 8034 8035 8036 8037 8038 8039 5 8040 8051 8052 8054 8055 8056 8057 8058 8059 8056 8057 8058 8059 8056 8057 8058 8059 8060 8061 8062 8064 8065 8066 8067 8068 8069 8099 8099 8092 8094 8095 8096 8097 8098 8099 8091 8092 8094 8055 8056 8057 8058 8059 8096 8097 8098 8099 8091 8092 8094 8055 8056 8057 8058 8059 8096 8097 8098 8099 8091 8092 8094 8095 8096 8097 8098 8099 8091 8092 8094 8095 8096 8097 8098 8099 8098 8099 8099 8099 8099 8091 8092 8094 8095 8096 8097 8098 8099 8091 8092 8094 8095 8096 8097 8098 8099 8				-	_				Low-	High-
2 8010 8011 8012 8024 8025 8026 8027 8028 8029 3 8020 8021 8022 8024 8025 8026 8027 8028 8029 4 8030 8031 8032 8034 8035 8036 8037 8038 8039 5 8040 8061 8062 8064 8065 8066 8067 8068 8069 7 8060 8061 8062 8064 8065 8066 8067 8068 8089 8 8070 8071 8072 8074 8075 8076 8077 8078 8099 11 8000 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8102 8104 8105 8106 8107 8108 8109 12 8110 8111 8142 8144 8145 814		fier			order		order		order	
3 8020 8021 8022 8024 8025 8026 8027 8028 8039 5 8040 8041 8042 8044 8045 8046 8047 8048 8049 6 8050 8051 8052 8064 8055 8056 8057 8068 8065 7 8060 8061 8062 8064 8065 8066 8067 8068 8089 8 8070 8071 8072 8074 8075 8076 8077 8078 8079 9 8080 8081 8082 8084 8085 8066 8087 8088 8089 10 8090 8091 8092 8094 8095 8096 8097 8088 8089 11 8100 8101 8102 8104 8105 8166 8167 8168 8169 12 811 8112 8142 8144 8145 8146	1	8000	8001	8002	8004	8005	8006	8007	8008	8009
4 8030 8031 8032 8034 8035 8036 8037 8038 8039 5 8040 8041 8042 8044 8045 8046 8047 8048 8049 6 8050 8051 8052 8054 8055 8056 8057 8058 8059 7 8060 8061 8062 8064 8065 8066 8067 8068 8069 8 8070 8071 8072 8074 8075 8076 8077 8078 8079 9 8080 8081 8082 8084 8085 8066 8097 8098 8099 10 8090 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8102 8104 8105 8166 8107 8108 8199 12 811 8122 8124 8125 8156 8157	2	8010	8011	8012	8014		8016	8017	8018	8019
5 8040 8041 8042 8044 8045 8046 8047 8048 8059 8058 8059 8058 8059 8058 8059 8058 8059 8058 8059 8058 8059 8069 8069 8067 8068 8069 8069 8069 8069 8067 8078 8079 80	3	8020	8021	8022	8024	8025	8026	8027	8028	8029
6 8050 8051 8052 8054 8055 8056 8057 8058 8059 7 8060 8061 8062 8064 8065 8066 8067 8068 8069 8 8070 8071 8072 8074 8075 8076 8077 8078 8079 9 8080 8081 8082 8084 8085 8068 8087 8088 8089 10 8090 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8101 8102 8104 8105 8106 8107 8108 8109 12 8110 8111 8112 8114 8114 8115 8116 8161 8162 8161 8161 8162 8161 8161 8162 8161 8148 8145 8148 8145 8148 8149 8168 8167 8168 8169	4	8030	8031	8032	8034	8035	8036	8037	8038	8039
7 8060 8061 8062 8064 8065 8066 8067 8068 8079 8 8070 8071 8072 8074 8075 8076 8077 8078 8079 9 8080 8081 8082 8084 8085 8086 8087 8088 8089 10 8090 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8102 8104 8105 8106 8107 8108 8109 12 8110 8111 8112 8144 8115 8116 8117 8118 8122 8124 8125 8126 8127 8128 8139 15 8140 8141 8142 8144 8145 8146 8147 8148 8139 16 8150 8151 8152 8154 8155 8156 8157 8158 8159 <t< td=""><td>5</td><td>8040</td><td>8041</td><td>8042</td><td>8044</td><td>8045</td><td>8046</td><td>8047</td><td>8048</td><td>8049</td></t<>	5	8040	8041	8042	8044	8045	8046	8047	8048	8049
8 8070 8071 8072 8074 8075 8076 8077 8078 8089 9 8080 8081 8082 8084 8085 8086 8087 8088 8089 10 8090 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8102 8104 8105 8106 8107 8108 8109 11 8100 8111 8112 8144 8115 8116 8116 81619 14 8130 8131 8132 8134 8135 8136 8137 8138 8139 15 8140 8141 8142 8144 8145 8146 8167 8168 8169 16 8150 8151 8152 8154 8155 8156 8157 8158 8159 17 8160 8161 8162 8164 8165 8166 <t< td=""><td>6</td><td>8050</td><td>8051</td><td>8052</td><td>8054</td><td>8055</td><td>8056</td><td>8057</td><td>8058</td><td>8059</td></t<>	6	8050	8051	8052	8054	8055	8056	8057	8058	8059
9 8080 8081 8082 8084 8085 8086 8087 8088 8099 11 8100 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8102 8104 8105 8106 8107 8108 8109 12 8110 8111 8112 8114 8115 8116 8117 8118 8119 13 8120 8121 8122 8124 8125 8126 8127 8128 8129 14 8130 8131 8132 8134 8135 8136 8137 8138 8139 15 8140 8141 8142 8144 8145 8146 8167 8188 8189 16 8150 8151 8152 8154 8155 8166 8167 8188 8189 17 8160 8161 8162 8124 8125 <t< td=""><td>7</td><td>8060</td><td>8061</td><td>8062</td><td>8064</td><td>8065</td><td>8066</td><td>8067</td><td>8068</td><td>8069</td></t<>	7	8060	8061	8062	8064	8065	8066	8067	8068	8069
10 8090 8091 8092 8094 8095 8096 8097 8098 8099 11 8100 8101 8102 8104 8105 8106 8107 8108 8109 12 8110 8111 8112 8114 8115 8116 8117 8118 8119 13 8120 8121 8122 8124 8125 8126 8127 8128 8139 15 8140 8141 8142 8144 8145 8146 8147 8148 8149 16 8150 8151 8152 8154 8155 8156 8157 8158 8159 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8178 8178 8188 8189 18 810 8181 8182 8184 8185 <t< td=""><td>8</td><td>8070</td><td>8071</td><td>8072</td><td>8074</td><td>8075</td><td>8076</td><td>8077</td><td>8078</td><td>8079</td></t<>	8	8070	8071	8072	8074	8075	8076	8077	8078	8079
11 8100 8101 8102 8104 8105 8106 8107 8108 8109 12 8110 8111 8112 8114 8115 8116 8117 8118 8119 13 8120 8121 8122 8124 8125 8126 8127 8128 8129 14 8130 8131 8132 8134 8135 8136 8137 8138 8139 15 8140 8141 8142 8144 8145 8146 8147 8148 8149 16 8150 8151 8152 8154 8155 8156 8157 8158 8159 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8178 8178 8188 8189 20 8190 8191 8192 8194 8195 <	9	8080	8081	8082	8084	8085	8086	8087	8088	8089
12 8110 8111 8112 8114 8115 8116 8117 8118 8119 13 8120 8121 8122 8124 8125 8126 8127 8128 8129 14 8130 8131 8132 8134 8135 8136 8137 8138 8139 15 8140 8141 8142 8144 8145 8146 8147 8148 8149 16 8150 8151 8152 8154 8155 8156 8157 8158 8169 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8176 8177 8178 8179 19 8180 8181 8182 8184 8185 8166 8167 8168 81899 21 8200 8201 8202 8204 8205	10	8090	8091	8092	8094	8095	8096	8097	8098	8099
13 8120 8121 8122 8124 8125 8126 8127 8138 8139 14 8130 8131 8132 8134 8135 8136 8137 8138 8139 15 8140 8141 8142 8144 8145 8146 8147 8148 8149 16 8150 8151 8152 8154 8155 8156 8157 8168 8169 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8176 8177 8178 8179 19 8180 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8188 81899 21 8200 8201 8202 8204 8205	11	8100	8101	8102	8104	8105	8106	8107	8108	8109
14 8130 8131 8132 8134 8135 8136 8137 8138 8139 15 8140 8141 8142 8144 8145 8146 8147 8148 8149 16 8150 8151 8152 8154 8155 8156 8157 8158 8159 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8176 8177 8178 8179 19 8180 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8188 8189 21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8225 <	12	8110	8111	8112	8114	8115	8116	8117	8118	8119
15 8140 8141 8142 8144 8145 8146 8147 8148 8149 16 8150 8151 8152 8154 8155 8156 8157 8158 8159 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8176 8177 8178 8179 19 8180 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8198 8199 21 8200 8201 8202 8204 8205 8206 8207 8208 8290 22 8210 8211 8212 8214 8215 8262 8224 8225 8226 8227 8228 8229 24 8230 8221 <	13	8120	8121	8122	8124	8125	8126	8127	8128	8129
16 8150 8151 8152 8154 8155 8156 8157 8158 8159 17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8176 8177 8178 8179 19 8180 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8198 8199 21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8266 8227 8228 8229 24 8230 8251 8252 8254 8255 <	14	8130	8131	8132	8134	8135	8136	8137	8138	8139
17 8160 8161 8162 8164 8165 8166 8167 8168 8169 18 8170 8171 8172 8174 8175 8176 8177 8178 8179 19 8180 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8198 8199 21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8226 8227 8228 8229 24 8230 8231 8222 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8244 8255 <	15	8140	8141	8142	8144	8145	8146	8147	8148	8149
18 8170 8171 8172 8174 8175 8176 8177 8188 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8198 8199 21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8226 8227 8228 8229 24 8230 8231 8232 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8266 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279	16	8150	8151	8152	8154	8155	8156	8157	8158	8159
19 8180 8181 8182 8184 8185 8186 8187 8188 8189 20 8190 8191 8192 8194 8195 8196 8197 8198 8199 21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8226 8227 8228 8229 24 8230 8231 8232 8234 8235 8236 8237 8238 8239 25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8264 8265 <	17	8160	8161	8162	8164	8165	8166	8167	8168	8169
20 8190 8191 8192 8194 8195 8196 8197 8198 8199 21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8226 8227 8228 8229 24 8230 8231 8232 8234 8235 8236 8237 8238 8239 25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8264 8265 8266 8267 8288 8289 30 8290 8291 8292 8294 8295 <	18	8170	8171	8172	8174	8175	8176	8177	8178	8179
21 8200 8201 8202 8204 8205 8206 8207 8208 8209 22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8226 8227 8228 8229 24 8230 8231 8232 8234 8235 8236 8237 8238 8239 25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8244 8265 8266 8267 8268 8269 28 8270 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 <	19	8180	8181	8182	8184	8185	8186	8187	8188	8189
22 8210 8211 8212 8214 8215 8216 8217 8218 8219 23 8220 8221 8222 8224 8225 8226 8227 8228 8229 24 8230 8231 8232 8234 8235 8236 8237 8238 8239 25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 <	20	8190	8191	8192	8194	8195	8196	8197	8198	8199
23 8220 8221 8222 8224 8235 8236 8237 8238 8239 24 8230 8231 8232 8234 8235 8236 8237 8238 8239 25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8264 8265 8266 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 <	21	8200	8201	8202	8204	8205	8206	8207	8208	8209
24 8230 8231 8232 8234 8235 8236 8237 8238 8239 25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8264 8265 8266 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 <	22	8210	8211	8212	8214	8215	8216	8217	8218	8219
25 8240 8241 8242 8244 8245 8246 8247 8248 8249 26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8264 8265 8266 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 <	23	8220	8221	8222	8224	8225	8226	8227	8228	8229
26 8250 8251 8252 8254 8255 8256 8257 8258 8259 27 8260 8261 8262 8264 8265 8266 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8342 8344 8345 <	24	8230	8231	8232	8234	8235	8236	8237	8238	8239
27 8260 8261 8262 8264 8265 8266 8267 8268 8269 28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 <	25	8240	8241	8242	8244	8245	8246	8247	8248	8249
28 8270 8271 8272 8274 8275 8276 8277 8278 8279 29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 <	26	8250	8251	8252	8254	8255	8256	8257	8258	8259
29 8280 8281 8282 8284 8285 8286 8287 8288 8289 30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 <	27	8260	8261	8262	8264	8265	8266	8267	8268	8269
30 8290 8291 8292 8294 8295 8296 8297 8298 8299 31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 <	28	8270	8271	8272	8274	8275	8276	8277	8278	8279
31 8300 8301 8302 8304 8305 8306 8307 8308 8309 32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 <	29	8280	8281	8282	8284	8285	8286	8287	8288	8289
32 8310 8311 8312 8314 8315 8316 8317 8318 8319 33 8320 8321 8322 8324 8325 8326 8327 8328 8329 34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8402 8404 8405 <	30	8290	8291	8292	8294	8295	8296	8297	8298	8299
33 8320 8321 8322 8324 8325 8326 8327 8328 8339 34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 <	31	8300	8301	8302	8304	8305	8306	8307	8308	8309
34 8330 8331 8332 8334 8335 8336 8337 8338 8339 35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 <	32	8310	8311	8312	8314	8315	8316	8317	8318	8319
35 8340 8341 8342 8344 8345 8346 8347 8348 8349 36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 <	33	8320	8321	8322	8324	8325	8326	8327	8328	8329
36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 <	34	8330	8331	8332	8334	8335	8336	8337	8338	8339
36 8350 8351 8352 8354 8355 8356 8357 8358 8359 37 8360 8361 8362 8364 8365 8366 8367 8368 8369 38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 <	35	8340	8341		8344	8345	8346	8347	8348	8349
38 8370 8371 8372 8374 8375 8376 8377 8378 8379 39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 <	36	8350		8352	8354	8355	8356	8357	8358	8359
39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 <	37	8360	8361	8362	8364	8365	8366	8367	8368	8369
39 8380 8381 8382 8384 8385 8386 8387 8388 8389 40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 <	38	8370	8371	8372	8374	8375	8376	8377	8378	8379
40 8390 8391 8392 8394 8395 8396 8397 8398 8399 41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 <		8380		8382	8384	8385	8386	8387	8388	8389
41 8400 8401 8402 8404 8405 8406 8407 8408 8409 42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489	40	8390			8394			8397		
42 8410 8411 8412 8414 8415 8416 8417 8418 8419 43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489	41			8402	8404			8407		
43 8420 8421 8422 8424 8425 8426 8427 8428 8429 44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489					8414	8415	8416	8417	8418	8419
44 8430 8431 8432 8434 8435 8436 8437 8438 8439 45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489					8424	8425	8426	8427	8428	8429
45 8440 8441 8442 8444 8445 8446 8447 8448 8449 46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489					8434	8435	8436	8437	8438	8439
46 8450 8451 8452 8454 8455 8456 8457 8458 8459 47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489					8444		8446	8447	8448	8449
47 8460 8461 8462 8464 8465 8466 8467 8468 8469 48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489					8454			8457		8459
48 8470 8471 8472 8474 8475 8476 8477 8478 8479 49 8480 8481 8482 8484 8485 8486 8487 8488 8489										
49 8480 8481 8482 8484 8485 8486 8487 8488 8489										
■ >U 1049U 1049 1049Z 18494 18495 18496 18497 18498 18499	50	8490	8491	8492	8494	8495	8496	8497	8498	8499

No. Identife	Data	Posi-	М	Dwell		mand		oning	Arc	data
fier Learner order order order order order order 51 8500 8501 8501 8508 8509 8508 8509 52 8510 8511 8512 8514 8515 8516 8517 8518 8519 53 8520 8521 8522 8524 8525 8536 8537 8533 8533 8533 8533 8533 8536 8536 8537 8538 8539 8548 8545 8546 8566 8567 8568 8569 56 8550 8551 8522 8544 8565 8567 8568 8569 59 8580 8591 8592 8594 8595 8596 8597 8588 8599 60 8590 8591 8592 8694 8695 8659 8699 60 8590 8591 8692 8694 8695 8695 8699 <		tioning identi-		-	_				Low-	High-
52 8510 8511 8512 8524 8525 8526 8527 8528 8529 54 8530 8531 8532 8534 8535 8536 8537 8538 8539 55 8540 8541 8542 8544 8545 8546 8547 8548 8549 56 8550 8551 8552 8564 8565 8566 8567 8568 8569 57 8560 8561 8562 8564 8565 8566 8567 8568 8569 58 8570 8571 8572 8584 8585 8586 8587 8588 8689 60 8590 8591 8592 8594 8595 8596 8597 8598 8599 61 8600 8601 8602 8604 8605 8666 8667 8669 64 8630 8631 8632 8634 8635 8666 <		fier			order	order	order	order	order	
53 8520 8521 8522 8524 8526 8527 8528 8539 8538 8539 8539 8538 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8539 8561 8562 8564 8565 8566 8567 8568 8569 8569 8569 8569 8569 8569 8569 8569 8568 8568 8568 8569 8569 8599 8594 8595 8596 8597 8598 8599 8	51	8500	8501	8502	8504	8505	8506	8507	8508	8509
54 8530 8531 8532 8534 8534 8536 8537 8538 8539 55 8540 8541 8542 8544 8545 8566 8567 8558 8559 57 8560 8561 8562 8564 8566 8567 8578 8579 59 8580 8581 8582 8584 8585 8566 8567 8589 8599 60 8590 8591 8592 8594 8595 8566 8597 8589 8599 61 8600 8601 8602 8604 8605 8606 8607 8608 8699 62 8610 8611 8612 8614 8615 8616 8617 8618 8622 8624 8626 8627 8628 8629 62 8601 8642 8644 8645 8646 8647 8649 66 8650 8651 8652 <	52	8510	8511	8512	8514	8515	8516	8517	8518	8519
55 8540 8541 8542 8544 8545 8546 8547 8548 8559 56 8550 8551 8552 8554 8556 8567 8568 8569 57 8560 8561 8562 8564 8565 8566 8567 8578 8579 59 8580 8581 8522 8584 8585 8566 8567 8588 8589 61 8600 8601 8602 8604 8605 8606 8607 8608 8699 61 8600 8601 8601 8612 8614 8615 8616 8617 8618 8619 63 8650 8631 8632 8634 8636 8637 8638 8639 64 8630 8631 8632 8644 8645 8646 8647 8648 8649 64 8630 8661 8662 8664 8665 8667 <	53	8520	8521	8522	8524	8525	8526	8527	8528	8529
56 8550 8551 8552 8554 8556 8567 8568 8569 57 8560 8561 8562 8564 8565 8566 8567 8568 8569 58 8570 8571 8572 8574 8575 8576 8577 8578 8579 59 8580 8581 8582 8584 8585 8566 8567 8588 8589 60 8590 8591 8592 8594 8595 8596 8597 8598 8599 61 8600 8601 8601 8602 8604 8605 8606 8607 8609 62 861 861 8622 8624 8625 8666 8667 8668 8639 63 8650 8661 8662 8664 8667 8668 8689 66 8650 8661 8662 8664 8667 8668 8669 68	54	8530	8531	8532	8534	8535	8536	8537	8538	8539
57 8560 8561 8562 8564 8565 8566 8567 8568 8569 58 8570 8571 8572 8574 8575 8576 8577 8578 8579 59 8580 8581 8582 8584 8585 8586 8587 8588 8589 60 8590 8591 8592 8594 8595 8596 8597 8598 8599 61 8600 8601 8602 8604 8605 8606 8607 8608 8609 62 8610 8611 8612 8624 8625 8626 8627 8628 8629 64 8630 8631 8632 8634 8635 8636 8637 8638 8639 66 8660 8661 8662 8664 8665 8666 8667 8668 8669 67 8690 8691 8692 8694 8695 <	55	8540	8541	8542	8544	8545	8546	8547	8548	8549
588 8570 8571 8572 8574 8575 8576 8577 8578 8589 599 8580 8581 8582 8584 8585 8586 8587 8588 8589 60 8590 8591 8592 8594 8595 8596 8597 8598 8599 61 8600 8601 8601 8602 8604 8605 8606 8607 8608 8609 62 8610 8611 8612 8624 8625 8626 8627 8628 8629 64 8630 8631 8632 8634 8635 8636 8637 8638 8639 66 8650 8661 8662 8664 8665 8666 8667 8669 8669 8661 8662 8644 8645 8666 8667 8668 8669 69 8690 8691 8692 8694 8695 8666 8667	56	8550	8551	8552	8554	8555	8556	8557	8558	8559
59 8580 8581 8582 8584 8585 8586 8587 8588 8599 61 8600 8601 8602 8604 8605 8606 8607 8608 8609 62 8610 8611 8612 8614 8615 8616 8617 8618 8619 63 8620 8621 8622 8624 8625 8626 8627 8628 8629 64 8630 8631 8632 8634 8635 8636 8637 8638 8639 65 8640 8641 8642 8644 8645 8666 8667 8668 8669 68 8670 8671 8672 8674 8675 8676 8677 8678 8669 68 8670 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 <	57	8560	8561	8562	8564	8565	8566	8567	8568	8569
60 8590 8591 8592 8594 8595 8596 8597 8598 8599 61 8600 8601 8602 8604 8605 8606 8607 8608 8609 62 8610 8611 8612 8614 8615 8616 8617 8618 8619 63 8620 8621 8622 8624 8625 8626 8627 8628 8639 65 8640 8641 8642 8644 8645 8646 8647 8648 8649 66 8650 8661 8662 8664 8665 8666 8667 8668 8669 68 8670 8671 8672 8644 8655 8666 8667 8668 8669 68 8670 8671 8671 8672 8674 8675 8676 8677 8678 8679 71 870 8691 8692 8694 <t< td=""><td>58</td><td>8570</td><td>8571</td><td>8572</td><td>8574</td><td>8575</td><td>8576</td><td>8577</td><td>8578</td><td>8579</td></t<>	58	8570	8571	8572	8574	8575	8576	8577	8578	8579
61 8600 8601 8602 8604 8605 8606 8607 8608 8609 62 8610 8611 8612 8614 8615 8616 8617 8618 8619 63 8620 8621 8622 8624 8625 8626 8627 8628 8629 64 8630 8631 8632 8634 8635 8636 8637 8638 8639 65 8640 8641 8642 8644 8645 8646 8647 8648 8649 66 8650 8661 8662 8664 8665 8666 8667 8668 8669 68 8670 8671 8672 8684 8685 8686 8687 8688 8699 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 870 8711 8702 8704 8705 <t< td=""><td>59</td><td>8580</td><td>8581</td><td>8582</td><td>8584</td><td>8585</td><td>8586</td><td>8587</td><td>8588</td><td>8589</td></t<>	59	8580	8581	8582	8584	8585	8586	8587	8588	8589
62 8610 8611 8612 8614 8615 8616 8617 8618 8619 63 8620 8621 8622 8624 8625 8626 8627 8628 8629 64 8630 8631 8632 8634 8635 8636 8637 8638 8639 65 8640 8641 8642 8644 8645 8646 8647 8648 8659 66 8650 8661 8662 8664 8665 8667 8668 8669 68 8670 8671 8672 8674 8665 8667 8668 8689 70 8690 8691 8692 8694 8695 8696 8697 8688 8689 71 8700 8701 8701 8702 8704 8705 8706 8677 8688 8699 71 8700 8701 8701 8702 8704 8705 <	60	8590	8591	8592	8594	8595	8596	8597	8598	8599
63 8620 8621 8622 8624 8625 8626 8627 8638 8639 64 8630 8631 8632 8634 8635 8637 8638 8639 65 8640 8641 8642 8644 8645 8646 8647 8648 8649 66 8650 8661 8662 8664 8665 8666 8667 8668 8669 68 8670 8671 8672 8674 8675 8676 8677 8678 8679 69 8680 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 8697 8698 8699 71 8700 8701 8702 8704 8705 8706 8707 8708 8709 71 8700 8711 8712 8714 8715 8716 8717 <	61	8600	8601	8602	8604	8605	8606	8607	8608	8609
64 8630 8631 8632 8634 8635 8636 8647 8648 8649 65 8640 8641 8642 8644 8645 8646 8647 8648 8649 66 8650 8651 8652 8654 8655 8656 8667 8668 8669 68 8670 8671 8672 8674 8675 8676 8677 8678 8679 69 8680 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8702 8704 8705 8706 8707 8708 8709 71 8700 8701 8702 8704 8705 8706 8707 8708 8709 72 8710 8711 8722 8724 8725 <	62	8610	8611	8612	8614	8615	8616	8617	8618	8619
65 8640 8641 8642 8644 8645 8646 8647 8648 8649 66 8650 8651 8652 8654 8655 8656 8657 8658 8669 67 8660 8661 8662 8664 8665 8666 8667 8678 8679 68 8670 8671 8672 8674 8675 8676 8677 8688 8689 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8702 8704 8705 8707 8708 8709 71 8700 8701 8702 8704 8705 8707 8708 8699 71 8701 8701 8702 8704 8705 8706 8707 8708 8731 8732 8734 8735 8736 8737 8738 8739 75 <	63	8620	8621	8622	8624	8625	8626	8627	8628	8629
66 8650 8651 8652 8654 8655 8666 8667 8668 8669 67 8660 8661 8662 8664 8665 8667 8668 8669 68 8670 8671 8672 8675 8676 8677 8678 8679 69 8680 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8701 8701 8701 8711 8718 8709 72 8710 8711 8722 8724 8725 8766 8727 8728 8729 74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8766 8767 8768 <	64	8630	8631	8632	8634	8635	8636	8637	8638	8639
66 8650 8651 8652 8654 8655 8656 8657 8658 8659 67 8660 8661 8662 8664 8665 8667 8668 8669 68 8670 8671 8672 8674 8675 8676 8677 8678 8679 69 8680 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8701 8701 8701 8701 8708 8709 71 8700 8701 8701 8702 8701 8701 8701 8701 8701 8702 8702 8702 8702 8702 8702 8702 8703 8738 8739 8738 8739 8738 8739 8738 8739 8738 8739 8738 8739	65	8640	8641	8642	8644	8645	8646	8647	8648	8649
67 8660 8661 8662 8664 8665 8667 8668 8669 68 8670 8671 8672 8674 8675 8676 8677 8678 8679 69 8680 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8702 8704 8705 8706 8707 8708 8709 72 8710 8711 8712 8714 8715 8716 8717 8718 8719 74 8730 8731 8722 8724 8725 8726 8727 8728 8729 74 8740 8741 8742 8744 8745 8746 8747 8748 8749 78 8750 8751 8752 8744 8755 8766 <		8650		8652	8654	8655	8656		8658	
68 8670 8671 8672 8674 8675 8676 8677 8688 8689 70 8690 8681 8682 8684 8685 8686 8687 8688 8689 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8691 8692 8704 8705 8706 8707 8708 8709 72 8710 8711 8712 8714 8715 8716 8717 8718 8719 73 8720 8721 8722 8724 8725 8726 8727 8728 8729 74 8730 8731 8732 8744 8745 8746 8747 8748 8749 75 8740 8741 8742 8744 8745 8766 8767 8768 8799 77 8760 8761 8762 8744 8755 <										
69 8680 8681 8682 8684 8685 8686 8697 8698 8699 70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8702 8704 8705 8706 8707 8708 8709 72 8710 8711 8712 8714 8715 8716 8717 8718 8719 73 8720 8721 8722 8724 8725 8726 8727 8728 8729 74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 <		8670			8674					
70 8690 8691 8692 8694 8695 8696 8697 8698 8699 71 8700 8701 8702 8704 8705 8706 8707 8708 8709 72 8710 8711 8712 8714 8715 8716 8717 8718 8719 73 8720 8721 8722 8724 8725 8726 8727 8728 8729 74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8799 81 880 8781 8782 8784 8755 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>										
71 8700 8701 8702 8704 8705 8706 8707 8708 8709 72 8710 8711 8712 8714 8715 8716 8717 8718 8719 73 8720 8721 8722 8724 8725 8726 8727 8728 8729 74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8789 80 8791 8792 8794 8795 8796 <										
72 8710 8711 8712 8714 8715 8716 8717 8718 8719 73 8720 8721 8722 8724 8725 8726 8727 8728 8729 74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8779 89 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 <										
73 8720 8721 8722 8724 8735 8736 8737 8738 8739 74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8779 80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 <										
74 8730 8731 8732 8734 8735 8736 8737 8738 8739 75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8779 79 8780 8781 8782 8784 8785 8786 8787 8788 8789 80 8790 8791 8792 8794 8795 8796 8797 8788 8789 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8821 8822 8824 8825 <			_	_	_	-		_		
75 8740 8741 8742 8744 8745 8746 8747 8748 8749 76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8779 79 8780 8791 8792 8794 8795 8796 8797 8788 8789 80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 <			_	_						
76 8750 8751 8752 8754 8755 8756 8757 8758 8759 77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8779 79 8780 8781 8782 8784 8785 8786 8787 8788 8789 80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8851 8852 8854 8855 <										
77 8760 8761 8762 8764 8765 8766 8767 8768 8769 78 8770 8771 8772 8774 8775 8776 8777 8778 8779 79 8780 8781 8782 8784 8785 8786 8787 8788 8789 80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 <										
78 8770 8771 8772 8774 8775 8776 8777 8778 8779 79 8780 8781 8782 8784 8785 8786 8787 8788 8789 80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 <										
79 8780 8781 8782 8784 8785 8786 8787 8788 8789 80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8831 8832 8834 8835 8836 8837 8838 8839 85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 <										
80 8790 8791 8792 8794 8795 8796 8797 8798 8799 81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8831 8832 8834 8835 8836 8837 8838 8839 85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8891 8892 8894 8895 <			_	_	_					
81 8800 8801 8802 8804 8805 8806 8807 8808 8809 82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8831 8832 8834 8835 8836 8837 8838 8839 85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 8876 8877 8878 8899 90 8890 8891 8892 8894 8895 <										
82 8810 8811 8812 8814 8815 8816 8817 8818 8819 83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8831 8832 8834 8835 8836 8837 8838 8839 85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8866 8867 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8988 8899 91 8900 8901 8902										
83 8820 8821 8822 8824 8825 8826 8827 8828 8829 84 8830 8831 8832 8834 8835 8836 8837 8838 8839 85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8866 8867 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8898 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 <										
84 8830 8831 8832 8834 8835 8836 8837 8838 8839 85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8886 8887 8888 8889 90 8890 8901 8902 8904 8905 8906 8907 8908 8999 91 8900 8901 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 <										
85 8840 8841 8842 8844 8845 8846 8847 8848 8849 86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8886 8877 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8898 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 <										
86 8850 8851 8852 8854 8855 8856 8857 8858 8859 87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8886 8887 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8988 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 <										
87 8860 8861 8862 8864 8865 8866 8867 8868 8869 88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8886 8887 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8898 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952										
88 8870 8871 8872 8874 8875 8876 8877 8878 8879 89 8880 8881 8882 8884 8885 8886 8887 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8898 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962										
89 8880 8881 8882 8884 8885 8886 8887 8888 8889 90 8890 8891 8892 8894 8895 8896 8897 8898 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972										
90 8890 8891 8892 8894 8895 8896 8897 8898 8899 91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 <										
91 8900 8901 8902 8904 8905 8906 8907 8908 8909 92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 <										
92 8910 8911 8912 8914 8915 8916 8917 8918 8919 93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
93 8920 8921 8922 8924 8925 8926 8927 8928 8929 94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
94 8930 8931 8932 8934 8935 8936 8937 8938 8939 95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
95 8940 8941 8942 8944 8945 8946 8947 8948 8949 96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
96 8950 8951 8952 8954 8955 8956 8957 8958 8959 97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
97 8960 8961 8962 8964 8965 8966 8967 8968 8969 98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
98 8970 8971 8972 8974 8975 8976 8977 8978 8979 99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
99 8980 8981 8982 8984 8985 8986 8987 8988 8989										
1 100 8000 8001 8002 8004 8005 8006 8007 8009 8000										
100 0990 0991 0992 0994 0993 0999 0997 0996 0999	100	8990	8991	8992	8994	8995	8996	8997	8998	8999

Data	Posi-	M	Durall		mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	Low-	eed High-	Low-	ress High-	Low-	High-
	fier			order	order	order	order	order	order
101	9000	9001	9002	9004	9005	9006	9007	9008	9009
102	9010	9011	9012	9014	9015	9016	9017	9018	9019
103	9020	9021	9022	9024	9025	9026	9027	9028	9029
104	9030	9031	9032	9034	9035	9036	9037	9038	9039
105	9040	9041	9042	9044	9045	9046	9047	9048	9049
106	9050	9051	9052	9054	9055	9056	9057	9058	9059
107	9060	9061	9062	9064	9065	9066	9067	9068	9069
108	9070	9071	9072	9074	9075	9076	9077	9078	9079
109	9080	9081	9082	9084	9085	9086	9087	9088	9089
110	9090	9091	9092	9094	9095	9096	9097	9098	9099
111	9100	9101	9102	9104	9105	9106	9107	9108	9109
112	9110	9111	9112	9114	9115	9116	9117	9118	9119
113	9120	9121	9122	9124	9125	9126	9127	9128	9129
114	9130	9131	9132	9134	9135	9136	9137	9138	9139
115	9140	9141	9142	9144	9145	9146	9147	9148	9149
116	9150	9151	9152	9154	9155	9156	9157	9158	9159
117	9160	9161	9162	9164	9165	9166	9167	9168	9169
118	9170	9171	9172	9174	9175	9176	9177	9178	9179
119	9180	9181	9182	9184	9185	9186	9187	9188	9189
120	9190	9191	9192	9194	9195	9196	9197	9198	9199
121	9200	9201	9202	9204	9205	9206	9207	9208	9209
122	9210	9211	9212	9214	9215	9216	9217	9218	9219
123	9220	9221	9222	9224	9225	9226	9227	9228	9229
123	9230	9231	9232	9234	9235	9236	9237	9238	9239
125	9240	9241	9242	9244	9245	9246	9247	9248	9249
126	9250 9260	9251 9261	9252	9254	9255	9256	9257	9258	9259
127 128	9270	9271	9262 9272	9264 9274	9265 9275	9266 9276	9267	9268 9278	9269 9279
129	9280	9271	9272	9274	9275	9276	9277 9287	9278	9289
130	9290	9291	9292	9294	9295	9296	9297	9298	9299
									9309
131	9300	9301	9302	9304	9305	9306	9307	9308	
132	9310	9311	9312	9314	9315	9316	9317	9318	9319
133	9320	9321	9322	9324	9325	9326	9327	9328	9329
134	9330	9331	9332	9334	9335	9336	9337	9338	9339
135	9340	9341	9342	9344	9345	9346	9347	9348	9349
136	9350	9351	9352	9354	9355	9356	9357	9358	9359
137	9360	9361	9362	9364	9365	9366	9367	9368	9369
138	9370	9371	9372	9374	9375	9376	9377	9378	9379
139	9380	9381	9382	9384	9385	9386	9387	9388	9389
140	9390	9391	9392	9394	9395	9396	9397	9398	9399
141	9400	9401	9402	9404	9405	9406	9407	9408	9409
142	9410	9411	9412	9414	9415	9416	9417	9418	9419
143	9420	9421	9422	9424	9425	9426	9427	9428	9429
144	9430	9431	9432	9434	9435	9436	9437	9438	9439
145	9440	9441	9442	9444	9445	9446	9447	9448	9449
146	9450	9451	9452	9454	9455	9456	9457	9458	9459
147	9460	9461	9462	9464	9465	9466	9467	9468	9469
148	9470	9471	9472	9474	9475	9476	9477	9478	9479
149	9480	9481	9482	9484	9485	9486	9487	9488	9489
150	9490	9491	9492	9494	9495	9496	9497	9498	9499

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
151	9500	9501	9502	9504	9505	9506	9507	9508	9509
152	9510	9511	9512	9514	9515	9516	9517	9518	9519
153	9520	9521	9522	9524	9525	9526	9527	9528	9529
154	9530	9531	9532	9534	9535	9536	9537	9538	9539
155	9540	9541	9542	9544	9545	9546	9547	9548	9549
156	9550	9551	9552	9554	9555	9556	9557	9558	9559
157	9560	9561	9562	9564	9565	9566	9567	9568	9569
158	9570	9571	9572	9574	9575	9576	9577	9578	9579
159	9580	9581	9582	9584	9585	9586	9587	9588	9589
160	9590	9591	9592	9594	9595	9596	9597	9598	9599
161	9600	9601	9602	9604	9605	9606	9607	9608	9609
162	9610	9611	9612	9614	9615	9616	9617	9618	9619
163	9620	9621	9622	9624	9625	9626	9627	9628	9629
164	9630	9631	9632	9634	9635	9636	9637	9638	9639
165	9640	9641	9642	9644	9645	9646	9647	9648	9649
166	9650	9651	9652	9654	9655	9656	9657	9658	9659
167	9660	9661	9662	9664	9665	9666	9667	9668	9669
168	9670	9671	9672	9674	9675	9676	9677	9678	9679
169	9680	9681	9682	9684	9685	9686	9687	9688	9689
170	9690	9691	9692	9694	9695	9696	9697	9698	9699
171	9700	9701	9702	9704	9705	9706	9707	9708	9709
172	9710	9711	9712	9714	9715	9716	9717	9718	9719
173	9720	9721	9722	9724	9725	9726	9727	9728	9729
174	9730	9731	9732	9734	9735	9736	9737	9738	9739
175	9740	9741	9742	9744	9745	9746	9747	9748	9749
176	9750	9751	9752	9754	9755	9756	9757	9758	9759
177	9760	9761	9762	9764	9765	9766	9767	9768	9769
178	9770	9771	9772	9774	9775	9776	9777	9778	9779
179	9780	9781	9782	9784	9785	9786	9787	9788	9789
180	9790	9791	9792	9794	9795	9796	9797	9798	9799
181	9800	9801	9802	9804	9805	9806	9807	9808	9809
182	9810	9811	9812	9814	9815	9816	9817	9818	9819
183	9820	9821	9822	9824	9825	9826	9827	9828	9829
184	9830	9831	9832	9834	9835	9836	9837	9838	9839
185	9840	9841	9842	9844	9845	9846	9847	9848	9849
186	9850	9851	9852	9854	9855	9856	9857	9858	9859
187	9860	9861	9862	9864	9865	9866	9867	9868	9869
188	9870	9871	9872	9874	9875	9876	9877	9878	9879
189	9880	9881	9882	9884	9885	9886	9887	9888	9889
190	9890	9891	9892	9894	9895	9896	9897	9898	9899
191	9900	9901	9902	9904	9905	9906	9907	9908	9909
192	9910	9911	9912	9914	9915	9916	9917	9918	9919
193	9920	9921	9922	9924	9925	9926	9927	9928	9929
194	9930	9931	9932	9934	9935	9936	9937	9938	9939
195	9940	9941	9942	9944	9945	9946	9947	9948	9949
196	9950	9951	9952	9954	9955	9956	9957	9958	9959
197	9960	9961	9962	9964	9965	9966	9967	9968	9969
198	9970	9971	9972	9974	9975	9976	9977	9978	9979
199	9980	9981	9982	9984	9985	9986	9987	9988	9989
200	9990	9991	9992	9994	9995	9996	9997	9998	9999

Data	Posi- tioning				mand eed	Positioning address		Arc data		
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-	
	fier			order	order	order	order	order	order	
201	10000	10001	10002	10004	10005	10006	10007	10008	10009	
202	10010	10011	10012	10014	10015	10016	10017	10018	10019	
203	10020	10021	10022	10024	10025	10026	10027	10028	10029	
204	10030	10031	10032	10034	10035	10036	10037	10038	10039	
205	10040	10041	10042	10044	10045	10046	10047	10048	10049	
206	10050	10051	10052	10054	10055	10056	10057	10058	10059	
207	10060	10061	10062	10064	10065	10066	10067	10068	10069	
208	10070	10071	10072	10074	10075	10076	10077	10078	10079	
209	10080	10081	10082	10084	10085	10086	10087	10088	10089	
210	10090	10091	10092	10094	10095	10096	10097	10098	10099	
211	10100	10101	10102	10104	10105	10106	10107	10108	10109	
212	10110	10111	10112	10114	10115	10116	10117	10118	10119	
213	10120	10121	10122	10124	10125	10126	10127	10128	10129	
214	10130	10131	10132	10134	10135	10136	10137	10138	10139	
215	10140	10141	10142	10144	10145	10146	10147	10148	10149	
216	10150	10151	10152	10154	10155	10156	10157	10158	10159	
217	10160	10161	10162	10164	10165	10166	10167	10168	10169	
218	10170	10171	10172	10174	10175	10176	10177	10178	10179	
219	10180	10181	10182	10184	10185	10186	10187	10188	10189	
220	10190	10191	10192	10194	10195	10196	10197	10198	10199	
221	10200	10201	10202	10204	10205	10206	10207	10208	10209	
222	10210	10211	10212	10214	10215	10216	10217	10218	10219	
223	10220	10221	10222	10224	10225	10226	10227	10228	10229	
224	10230	10231	10232	10234	10235	10236	10237	10238	10239	
225	10240	10241	10242	10244	10245	10246	10247	10248	10249	
226	10250	10251	10252	10254	10255	10256	10257	10258	10259	
227	10260	10261	10262	10264	10265	10266	10267	10268	10269	
228	10270	10271	10272	10274	10275	10276	10277	10278	10279	
229	10280	10281	10282	10284	10285	10286	10287	10288	10289	
230	10290	10291	10292	10294	10295	10296	10297	10298	10299	
231	10300	10301	10302	10304	10305	10306	10307	10308	10309	
232	10310	10311	10312	10314	10315	10316	10317	10318	10319	
233	10320	10321	10322	10324	10325	10326	10327	10328	10329	
234	10330	10331	10332	10334	10335	10336	10337	10338	10339	
235	10340	10341	10342	10344	10345	10346	10347	10348	10349	
236	10350	10351	10352	10354	10355	10356	10357	10358	10359	
237	10360	10361	10362	10364	10365	10366	10367	10368	10369	
238	10370	10371	10372	10374	10375	10376	10377	10378	10379	
239	10380	10381	10382	10384	10385	10386	10387	10388	10389	
240	10390	10391	10392	10394	10395	10396	10397	10398	10399	
241	10400	10401	10402	10404	10405	10406	10407	10408	10409	
242	10410	10411	10412	10414	10415	10416	10417	10418	10419	
243	10420	10421	10422	10424	10425	10426	10427	10428	10429	
244	10430	10431	10432	10434	10435	10436	10437	10438	10439	
245	10440	10441	10442	10444	10445	10446	10447	10448	10449	
246	10450	10451	10452	10454	10455	10456	10457	10458	10459	
247	10460	10461	10462	10464	10465	10466	10467	10468	10469	
248	10470	10471	10472	10474	10475	10476	10477	10478	10479	
249	10480	10481	10482	10484	10485	10486	10487	10488	10489	
250	10490	10491	10492	10494	10495	10496	10497	10498	10499	

Data	Posi- tioning	М	Dwell	Com	mand eed	Positi add	oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
251	10500	10501	10502	10504	10505	10506	10507	10508	10509
252	10510	10511	10512	10514	10515	10516	10517	10518	10519
253	10520	10521	10522	10524	10525	10526	10527	10528	10529
254	10530	10531	10532	10534	10535	10536	10537	10538	10539
255	10540	10541	10542	10544	10545	10546	10547	10548	10549
256	10550	10551	10552	10554	10555	10556	10557	10558	10559
257	10560	10561	10562	10564	10565	10566	10567	10568	10569
258	10570	10571	10572	10574	10575	10576	10577	10578	10579
259	10580	10581	10582	10584	10585	10586	10587	10588	10589
260	10590	10591	10592	10594	10595	10596	10597	10598	10599
261	10600	10601	10602	10604	10605	10606	10607	10608	10609
262	10610	10611	10612	10614	10615	10616	10617	10618	10619
263	10620	10621	10622	10624	10625	10626	10627	10628	10629
264	10630	10631	10632	10634	10635	10636	10637	10638	10639
265	10640	10641	10642	10644	10645	10646	10647	10648	10649
266	10650	10651	10652	10654	10655	10656	10657	10658	10659
267	10660	10661	10662	10664	10665	10666	10667	10668	10669
268	10670	10671	10672	10674	10675	10676	10677	10678	10679
269	10680	10681	10682	10684	10685	10686	10687	10688	10689
270	10690	10691	10692	10694	10695	10696	10697	10698	10699
271	10700	10701	10702	10704	10705	10706	10707	10708	10709
272	10710	10711	10712	10714	10715	10716	10717	10718	10719
273	10720	10721	10722	10724	10725	10726	10727	10728	10729
274	10730	10731	10732	10734	10735	10736	10737	10738	10739
275	10740	10741	10742	10744	10745	10746	10747	10748	10749
276	10750	10751	10752	10754	10755	10756	10757	10758	10759
277	10760	10761	10762	10764	10765	10766	10767	10768	10769
278	10770	10771	10772	10774	10775	10776	10777	10778	10779
279	10780	10781	10782	10784	10785	10786	10787	10788	10789
280	10790	10791	10792	10794	10795	10796	10797	10798	10799
281	10800	10801	10802	10804	10805	10806	10807	10808	10809
282	10810	10811	10812	10814	10815	10816	10817	10818	10819
283	10820	10821	10822	10824	10825	10826	10827	10828	10829
284	10830	10831	10832	10834	10835	10836	10837	10838	10839
285	10840	10841	10842	10844	10845	10846	10847	10848	10849
286	10850	10851	10852	10854	10855	10856	10857	10858	10859
287	10860	10861	10862	10864	10865	10866	10867	10868	10869
288	10870	10871	10872	10874	10875	10876	10877	10878	10879
289	10880	10881	10882	10884	10885	10886	10887	10888	10889
290	10890	10891	10892	10894	10895	10896	10897	10898	10899
291	10900	10901	10902	10904	10905	10906	10907	10908	10909
292	10910	10911	10912	10914	10915	10916	10917	10918	10919
293	10920	10921	10922	10924	10925	10926	10927	10928	10929
294	10930	10931	10932	10934	10935	10936	10937	10938	10939
295	10940	10941	10942	10944	10945	10946	10947	10948	10949
296	10950	10951	10952	10954	10955	10956	10957	10958	10959
297	10960	10961	10962	10964	10965	10966	10967	10968	10969
298	10970	10971	10972	10974	10975	10976	10977	10978	10979
299	10980	10981	10982	10984	10985	10986	10987	10988	10989
300	10990	10991	10992	10994	10995	10996	10997	10998	10999

Data	Posi- tioning	ng M Dwell			mand eed		oning ress	Arc data		
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-	
	fier			order	order	order	order	order	order	
301	11000	11001	11002	11004	11005	11006	11007	11008	11009	
302	11010	11011	11012	11014	11015	11016	11017	11018	11019	
303	11020	11021	11022	11024	11025	11026	11027	11028	11029	
304	11030	11031	11032	11034	11035	11036	11037	11038	11039	
305	11040	11041	11042	11044	11045	11046	11047	11048	11049	
306	11050	11051	11052	11054	11055	11056	11057	11058	11059	
307	11060	11061	11062	11064	11065	11066	11067	11068	11069	
308	11070	11071	11072	11074	11075	11076	11077	11078	11079	
309	11080	11081	11082	11084	11085	11086	11087	11088	11089	
310	11090	11091	11092	11094	11095	11096	11097	11098	11099	
311	11100	11101	11102	11104	11105	11106	11107	11108	11109	
312	11110	11111	11112	11114	11115	11116	11117	11118	11119	
313	11120	11121	11122	11124	11125	11126	11127	11128	11129	
314	11130	11131	11132	11134	11135	11136	11137	11138	11139	
315	11140	11141	11142	11144	11145	11146	11147	11148	11149	
316	11150	11151	11152	11154	11155	11156	11157	11158	11159	
317	11160	11161	11162	11164	11165	11166	11167	11168	11169	
318	11170	11171	11172	11174	11175	11176	11177	11178	11179	
319	11180	11181	11182	11184	11185	11186	11187	11188	11189	
320	11190	11191	11192	11194	11195	11196	11197	11198	11199	
321	11200	11201	11202	11204	11205	11206	11207	11208	11209	
322	11210	11211	11212	11214	11215	11216	11217	11218	11219	
323	11220	11221	11222	11224	11225	11226	11227	11228	11229	
324	11230	11231	11232	11234	11235	11236	11237	11238	11239	
325	11240	11241	11242	11244	11245	11246	11247	11248	11249	
326	11250	11251	11252	11254	11255	11256	11257	11258	11259	
327	11260	11261	11262	11264	11265	11266	11267	11268	11269	
328	11270	11271	11272	11274	11275	11276	11277	11278	11279	
329	11280	11281	11282	11284	11285	11286	11287	11288	11289	
330	11290	11291	11292	11294	11295	11296	11297	11298	11299	
331	11300	11301	11302	11304	11305	11306	11307	11308	11309	
332	11310	11311	11312	11314	11315	11316	11317	11318	11319	
333	11320	11321	11322	11324	11325	11326	11327	11328	11329	
334	11330	11331	11332		11335	11336		11338		
335	11340	11341	11342			11346		11348	11349	
336	11350	11351		11354			11357	11358		
337	11360	11361	11362				11367	11368		
338	11370	11371	11372		11375		11377	11378		
339	11380	11381	11382		11375	11386	11387	11388		
340	11390	11391	11392		11395	11396	11397	11398		
341	11400	11401		11404		11406	11407	11408		
342	11410	11411		11414		11416	11417	11418		
343	11410	11421	11412			11416	11417	11428		
344	11430	11431	11432		11425	11436	11437	11438	11439	
345	11440	11441	11442			11446		11448		
346	11450	11451	11452			11456	11457	11458		
347	11460	11461	11462			11466	11467	11468		
348	11470	11471	11472			11476	11477	11478		
349	11480	11481	11482			11486	11487	11488		
350	11490	11491	11492	11494	11495	11496	11497	11498	11499	

Data	Posi-	М	Dwell	Com	mand	Positi add	oning	Arc	data
No.	tioning identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
351	11500	11501	11502	11504	11505	11506	11507	11508	11509
352	11510	11511	11512	11514	11515	11516	11517	11518	11519
353	11520	11521	11522	11524	11525	11526	11527	11528	11529
354	11530	11531	11532	11534	11535	11536	11537	11538	11539
355	11540	11541	11542	11544	11545	11546	11547	11548	11549
356	11550	11551	11552	11554	11555	11556	11557	11558	11559
357	11560	11561	11562	11564	11565	11566	11567	11568	11569
358	11570	11571	11572	11574	11575	11576	11577	11578	11579
359	11580	11581	11582	11584	11585	11586	11587	11588	11589
360	11590	11591	11592	11594	11595	11596	11597	11598	11599
361	11600	11601	11602	11604	11605	11606	11607	11608	11609
362	11610	11611	11612	11614	11615	11616	11617	11618	11619
363	11620	11621	11622	11624	11625	11626	11627	11628	11629
364	11630	11631	11632	11634	11635	11636	11637	11638	11639
365	11640	11641	11642	11644	11645	11646	11647	11648	11649
366	11650	11651	11652	11654	11655	11656	11657	11658	11659
367	11660	11661	11662	11664	11665	11666	11667	11668	11669
368	11670	11671	11672	11674	11675	11676	11677	11678	11679
369	11680	11681	11682	11684	11685	11686	11687	11688	11689
370	11690	11691	11692	11694	11695	11696	11697	11698	11699
371	11700	11701	11702	11704	11705	11706	11707	11708	11709
372	11710	11711	11712	11714	11715	11716	11717	11718	11719
373	11720	11721	11722	11724	11725	11726	11727	11728	11729
374	11730	11731	11732	11734	11735	11736	11737	11738	11739
375	11740	11741	11742	11744	11745	11746	11747	11748	11749
376	11750	11751	11752	11754	11755	11756	11757	11758	11759
377	11760	11761	11762	11764	11765	11766	11767	11768	11769
378	11770	11771	11772	11774	11775	11776	11777	11778	11779
379	11780	11781	11782	11784	11785	11786	11787	11788	11789
380	11790	11791	11792	11794	11795	11796	11797	11798	11799
381	11800	11801	11802	11804	11805	11806	11807	11808	11809
382	11810	11811	11812	11814	11815	11816	11817	11818	11819
383	11820	11821	11822	11824	11825	11826	11827	11828	11829
384	11830	11831	11832	11834	11835	11836	11837	11838	11839
385	11840	11841	11842	11844	11845	11846	11847	11848	11849
386	11850	11851	11852	11854	11855	11856	11857	11858	11859
387	11860	11861	11862	11864	11865	11866	11867	11868	11869
388	11870	11871	11872	11874	11875	11876	11877	11878	11879
389	11880	11881	11882	11884	11885	11886	11887	11888	11889
390	11890	11891	11892	11894	11895	11896	11897	11898	11899
391	11900	11901	11902	11904	11905	11906	11907	11908	11909
392	11910	11911	11912	11914	11915	11916	11917	11918	11919
393	11920	11921	11922	11924	11925	11926	11927	11928	11929
394	11930	11931	11932	11934	11935	11936	11937	11938	11939
395	11940	11941	11942	11944	11945	11946	11947	11948	11949
396	11950	11951	11952	11954	11955	11956	11957	11958	11959
397	11960	11961	11962	11964	11965	11966	11967	11968	11969
398	11970	11971	11972	11974	11975	11976	11977	11978	11979
399	11980	11981	11982	11984	11985	11986	11987	11988	11989
400	11990	11991	11992	11994	11995	11996	11997	11998	11999

Data	Posi-	Posi- oning M Dwell		Command speed			oning ress	Arc data		
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-	
	fier			order	order	order	order	order	order	
401	12000	12001	12002	12004		12006	12007	12008	12009	
402	12010	12011	12012	12014	12015	12016	12017	12018	12019	
403	12020	12021	12022	12024	12025	12026	12027	12028	12029	
404	12030	12031	12032	12034	12035	12036	12037	12038	12039	
405	12040	12041	12042	12044	12045	12046	12047	12048	12049	
406	12050	12051	12052	12054	12055	12056	12057	12058	12059	
407	12060	12061	12062	12064	12065	12066	12067	12068	12069	
408	12070	12071	12072	12074	12075	12076	12077	12078	12079	
409	12080	12081	12082	12084	12085	12086	12087	12088	12089	
410	12090	12091	12092	12094	12095	12096	12097	12098	12099	
411	12100	12101	12102	12104	12105	12106	12107	12108	12109	
412	12110	12111	12112	12114	12115	12116	12117	12118	12119	
413	12120	12121	12122	12124	12125	12126	12127	12128	12129	
414	12130	12131	12132	12134	12135	12136	12137	12138	12139	
415	12140	12141	12142	12144	12145	12146	12147	12148	12149	
416	12150	12151	12152	12154	12155	12156	12157	12158	12159	
417	12160	12161	12162	12164	12165	12166	12167	12168	12169	
418	12170	12171	12172	12174	12175	12176	12177	12178	12179	
419	12180	12181	12182	12184	12185	12186	12187	12188	12189	
420	12190	12191	12192	12194	12195	12196	12197	12198	12199	
421	12200	12201	12202	12204		12206	12207	12208	12209	
422	12210	12211	12212	12214		12216	12217	12218	12219	
423	12220	12221	12222	12224	12225	12226	12227	12228	12229	
424	12230	12231	12232	12234	12235	12236	12237	12238	12239	
425	12240	12231		12234	12245	12246	12247	12248	12249	
			12242							
426	12250	12251	12252	12254	12255	12256	12257	12258	12259	
427	12260	12261	12262	12264	12265	12266	12267	12268	12269	
428	12270	12271	12272	12274	12275	12276	12277	12278	12279	
429	12280	12281	12282	12284	12285	12286	12287	12288	12289	
430	12290	12291	12292	12294	12295	12296	12297	12298	12299	
431	12300	12301	12302	12304	12305	12306	12307	12308	12309	
432	12310	12311	12312	12314	12315	12316	12317	12318	12319	
433	12320	12321	12322	12324	12325	12326	12327	12328	12329	
434	12330	12331	12332					12338		
435	12340	12341	12342	12344	12345	12346	12347	12348	12349	
436	12350	12351	12352	12354	12355	12356	12357	12358		
437	12360	12361	12362	12364	12365	12366	12367	12368	12369	
438	12370	12371	12372	12374	12375	12376	12377	12378	12379	
439	12380	12381	12382	12384	12385	12386	12387	12388	12389	
440	12390	12391	12392	12394	12395	12396	12397	12398	12399	
441	12400	12401	12402	12404	12405	12406	12407	12408	12409	
442	12410	12411	12412	12414	12415	12416	12417	12418	12419	
443	12420	12421	12422	12424	12425	12426	12427	12428	12429	
444	12430	12431	12432	12434	12435	12436	12437	12438	12439	
445	12440	12441	12442	12444	12445	12446	12447	12448	12449	
446	12450	12451	12452	12454	12455	12456	12457	12458	12459	
447	12460	12461	12462	12464	12465	12466	12467	12468	12469	
448	12470	12471	12472	12474	12475	12476	12477	12478	12479	
449	12480	12481	12482	12484	12485	12486	12487	12488	12489	
450	12490	12491	12492	12494	12495	12496	12497	12498	12499	

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
451	12500	12501	12502	12504	12505	12506	12507	12508	12509
452	12510	12511	12512	12514	12515	12516	12517	12518	12519
453	12520	12521	12522	12524	12525	12526	12527	12528	12529
454	12530	12531	12532	12534	12535	12536	12537	12538	12539
455	12540	12541	12542	12544	12545	12546	12547	12548	12549
456	12550	12551	12552	12554	12555	12556	12557	12558	12559
457	12560	12561	12562	12564	12565	12566	12567	12568	12569
458	12570	12571	12572	12574	12575	12576	12577	12578	12579
459	12580	12581	12582	12584	12585	12586	12587	12588	12589
460	12590	12591	12592	12594	12595	12596	12597	12598	12599
461	12600	12601	12602	12604	12605	12606	12607	12608	12609
462	12610	12611	12612	12614	12615	12616	12617	12618	12619
463	12620	12621	12622	12624	12625	12626	12627	12628	12629
464	12630	12631	12632	12634	12635	12636	12637	12638	12639
465	12640	12641	12642	12644	12645	12646	12647	12648	12649
466	12650	12651	12652	12654	12655	12656	12657	12658	12659
467	12660	12661	12662	12664	12665	12666	12667	12668	12669
468	12670	12671	12672	12674	12675	12676	12677	12678	12679
469	12680	12681	12682	12684	12685	12686	12687	12688	12689
470	12690	12691	12692	12694	12695	12696	12697	12698	12699
471	12700	12701	12702	12704	12705	12706	12707	12708	12709
472	12710	12711	12712	12714	12715	12716	12717	12718	12719
473	12720	12721	12722	12724	12725	12726	12727	12728	12729
474	12730	12731	12732	12734	12735	12736	12737	12738	12739
475	12740	12741	12742	12744	12745	12746	12747	12748	12749
476	12750	12751	12752	12754	12755	12756	12757	12758	12759
477	12760	12761	12762	12764	12765	12766	12767	12768	12769
478	12770	12771	12772	12774	12775	12776	12777	12778	12779
479	12780	12781	12782	12784	12785	12786	12787	12788	12789
480	12790	12791	12792	12794	12795	12796	12797	12798	12799
481	12800	12801	12802	12804	12805	12806	12807	12808	12809
482	12810	12811	12812	12814	12815	12816	12817	12818	12819
483	12820	12821	12822	12824	12825	12826	12827	12828	12829
484	12830	12831	12832	12834	12835	12836	12837	12838	12839
485	12840	12841	12842	12844			12847		12849
486	12850	12851	12852		12855		12857	12858	12859
487	12860	12861	12862	12864	12865		12867	12868	12869
488	12870	12871	12872	12874	12875	12876	12877	12878	12879
489	12880	12881	12882	12884	12885	12886	12887	12888	12889
490	12890	12891	12892	12894	12895	12896	12897	12898	12899
491		12901			12905	12906	12907	12908	12909
	12900		12902	12904 12914	12905	12906	12907	12918	12919
492	12910	12911	12912 12922			12916	12917	12918	12919
493	12920	12921		12924	12925	12936	12927	12938	12929
494 495	12930	12931	12932	12934	12935		12937	12938	12939
495	12940	12941	12942	12944	12945	12946			
496	12950	12951	12952	12954	12955	12956	12957	12958	12959
497	12960	12961	12962	12964	12965	12966	12967	12968	12969
498	12970	12971	12972	12974	12975	12976	12977	12978	12979
499	12980	12981	12982	12984	12985	12986	12987	12988	12989
500	12990	12991	12992	12994	12995	12996	12997	12998	12999

Data	Posi-	oning M Dwell			mand eed		ioning ress	Arc data		
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-	
	fier			order	order	order	order	order	order	
501	13000	13001	13002	13004		13006	13007	13008	13009	
502	13010	13011	13012	13014	13015	13016	13017	13018	13019	
503	13020	13021	13022	13024	13025	13026	13027	13028	13029	
504	13030	13031	13032	13034	13035	13036	13037	13038	13039	
505	13040	13041	13042	13044	13045	13046	13047	13048	13049	
506	13050	13051	13052	13054	13055	13056	13057	13058	13059	
507	13060	13061	13062	13064	13065	13066	13067	13068	13069	
508	13070	13071	13072	13074	13075	13076	13077	13078	13079	
509	13080	13081	13082	13084	13085	13086	13087	13088	13089	
510	13090	13091	13092	13094	13095	13096	13097	13098	13099	
511	13100	13101	13102	13104	13105	13106	13107	13108	13109	
512	13110	13111	13112	13114	13115	13116	13117	13118	13119	
513	13120	13121	13122	13124	13125	13126	13127	13128	13129	
514	13130	13131	13132	13134	13135	13136	13137	13138	13139	
515	13140	13141	13142	13144	13145	13146	13147	13148	13149	
516	13150	13151	13152	13154	13155	13156	13157	13158	13159	
517	13160	13161	13162	13164	13165	13166	13167	13168	13169	
518	13170	13171	13172	13174	13175	13176	13177	13178	13179	
519	13180	13181	13182	13184	13185	13186	13187	13188	13189	
520	13190	13191	13192	13194	13195	13196	13197	13198	13199	
521	13200	13201	13202	13204	13205	13206	13207	13208	13209	
522	13210	13211	13212	13214	13215	13216	13217	13218	13219	
523	13220	13221	13222	13224	13225	13226	13227	13228	13229	
524	13230	13231	13232	13234	13235	13236	13237	13238	13239	
525	13240	13241	13242	13244	13245	13246	13247	13248	13249	
526	13250	13251	13252	13254	13255	13256	13257	13258	13259	
527	13260	13261	13262	13264	13265	13266	13267	13268	13269	
528	13270	13271	13272	13274	13275	13276	13277	13278	13279	
529	13280	13281	13282	13284	13285	13286	13287	13288	13289	
530	13290	13291	13292	13294	13295	13296	13297	13298	13299	
531	13300	13301	13302	13304	13305	13306	13307	13308	13309	
532	13310	13311	13312	13314	13315	13316	13317	13318	13319	
533	13320	13321	13322	13324	13325	13326	13327	13328	13329	
534	13330	13331	13332			13336		13338		
535	13340	13341	13342			13346	13347	13348	13349	
536	13350	13351		13354			13357	13358		
537	13360	13361	13362				13367	13368		
538	13370	13371	13372		13375		13377	13378		
539	13380	13381	13382	13384	13385	13386	13387	13388		
540	13390	13391	13392	13394	13395	13396	13397	13398	13399	
	13400	13401					13407			
541		13411	13412	13404		13406		13408 13418		
542 543	13410 13420	13421	13412			13416	13417	13418	13419 13429	
544	13430	13431	13432			13426 13436	13427 13437	13428		
					13435					
545	13440	13441	13442			13446		13448		
546	13450	13451	13452				13457	13458		
547	13460	13461	13462			13466	13467	13468		
548	13470	13471	13472			13476	13477	13478		
549	13480	13481	13482			13486	13487	13488		
550	13490	13491	13492	13494	13495	13496	13497	13498	13499	

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi- fier	code	time	Low-	High-	Low-	High-	Low-	High-
554		40504	40500	order	order	order	order	order	order
551	13500	13501	13502	13504 13514	13505	13506	13507 13517	13508	13509
552	13510	13511	13512		13515	13516		13518	13519
553	13520	13521	13522	13524	13525	13526	13527	13528	13529
554	13530	13531	13532	13534	13535	13536	13537	13538	13539
555	13540	13541	13542	13544	13545	13546	13547	13548	13549
556	13550	13551	13552	13554	13555	13556	13557	13558	13559
557	13560	13561	13562	13564	13565	13566	13567	13568	13569
558	13570	13571	13572	13574	13575	13576	13577	13578	13579
559	13580	13581	13582	13584	13585	13586	13587	13588	13589
560	13590	13591	13592	13594	13595	13596	13597	13598	13599
561	13600	13601	13602	13604	13605	13606	13607	13608	13609
562	13610	13611	13612	13614	13615	13616	13617	13618	13619
563	13620	13621	13622	13624	13625	13626	13627	13628	13629
564	13630	13631	13632	13634	13635	13636	13637	13638	13639
565	13640	13641	13642	13644	13645	13646	13647	13648	13649
566	13650	13651	13652	13654	13655	13656	13657	13658	13659
567	13660	13661	13662	13664	13665	13666	13667	13668	13669
568	13670	13671	13672	13674	13675	13676	13677	13678	13679
569	13680	13681	13682	13684	13685	13686	13687	13688	13689
570	13690	13691	13692	13694	13695	13696	13697	13698	13699
571	13700	13701	13702	13704	13705	13706	13707	13708	13709
572	13710	13711	13712	13714	13715	13716	13717	13718	13719
573	13720	13721	13722	13724	13725	13726	13727	13728	13729
574	13730	13731	13732	13734	13735	13736	13737	13738	13739
575	13740	13741	13742	13744	13745	13746	13747	13748	13749
576	13750	13751	13752	13754	13755	13756	13757	13758	13759
577	13760	13761	13762	13764	13765	13766	13767	13768	13769
578	13770	13771	13772	13774	13775	13776	13777	13778	13779
579	13780	13781	13782	13784	13785	13786	13787	13788	13789
580	13790	13791	13792	13794	13795	13796	13797	13798	13799
581	13800	13801	13802	13804	13805	13806	13807	13808	13809
582	13810	13811	13812	13814	13815	13816	13817	13818	13819
583	13820	13821	13822	13824	13825	13826	13827	13828	13829
584	13830	13831	13832	13834	13835	13836	13837	13838	13839
585	13840	13841	13842		13845	13846		13848	13849
586	13850	13851	13852	13854	13855	13856	13857	13858	13859
587	13860	13861	13862	13864	13865	13866	13867	13868	13869
588	13870	13871	13872	13874	13875	13876	13877	13878	13879
589	13880	13881	13882	13884	13885	13886	13887	13888	13889
590	13890	13891	13892	13894	13895	13896	13897	13898	13899
591	13900	13901	13902	13904	13905	13906	13907	13908	13909
592	13910	13911	13912	13914	13915	13916	13917	13918	13919
593	13920	13921	13922	13924	13925	13926	13927	13928	13929
594	13930	13931	13932	13934	13935	13936	13937	13938	13939
595	13940	13941	13942	13944	13945	13946	13947	13948	13949
596	13950	13951	13952	13954	13955	13956	13957	13958	13959
597	13960	13961	13962	13964	13965	13966	13967	13968	13969
598	13970	13971	13972	13974	13975	13976	13977	13978	13979
599	13980	13981	13982	13984	13985	13986	13987	13988	13989
600	13990	13991	13992	13994	13995	13996	13997	13998	13999

(2) For axis 2 (positioning option)

					1						
Data No.	Positioning option										
	•		· ·		·						·
1	8003	51	8503	101	9003	151	9503	201	10003	251	10503
2	8013	52	8513	102	9013	152	9513	202	10013	252	10513
3	8023	53	8523	103	9023	153	9523	203	10023	253	10523
4	8033	54	8533	104	9033	154	9533	204	10033	254	10533
5	8043	55	8543	105	9043	155	9543	205	10043	255	10543
6	8053	56	8553	106	9053	156	9553	206	10053	256	10553
7	8063	57	8563	107	9063	157	9563	207	10063	257	10563
8	8073	58	8573	108	9073	158	9573	208	10073	258	10573
9	8083	59	8583	109	9083	159	9583	209	10083	259	10583
10	8093	60	8593	110	9093	160	9593	210	10093	260	10593
11	8103	61	8603	111	9103	161	9603	211	10103	261	10603
12	8113	62	8613	112	9113	162	9613	212	10113	262	10613
13	8123	63	8623	113	9123	163	9623	213	10123	263	10623
14	8133	64	8633	114	9133	164	9633	214	10133	264	10633
15	8143	65	8643	115	9143	165	9643	215	10143	265	10643
16	8153	66	8653	116	9153	166	9653	216	10153	266	10653
17	8163	67	8663	117	9163	167	9663	217	10163	267	10663
18	8173	68	8673	118	9173	168	9673	218	10173	268	10673
19	8183	69	8683	119	9183	169	9683	219	10183	269	10683
20	8193	70	8693	120	9193	170	9693	220	10193	270	10693
21	8203	71	8703	121	9203	171	9703	221	10203	271	10703
22	8213	72	8713	122	9213	172	9713	222	10213	272	10713
23	8223	73	8723	123	9223	173	9723	223	10223	273	10723
24	8233	74	8733	124	9233	174	9733	224	10233	274	10733
25	8243	75	8743	125	9243	175	9743	225	10243	275	10743
26	8253	76	8753	126	9253	176	9753	226	10253	276	10753
27	8263	77	8763	127	9263	177	9763	227	10263	277	10763
28	8273	78	8773	128	9273	178	9773	228	10273	278	10773
29	8283	79	8783	129	9283	179	9783	229	10283	279	10783
30	8293	80	8793	130	9293	180	9793	230	10293	280	10793
31	8303	81	8803	131	9303	181	9803	231	10303	281	10803
32	8313	82	8813	132	9313	182	9813	232	10313	282	10813
33	8323	83	8823	133	9323	183	9823	233	10323	283	10823
34	8333	84	8833	134	9333	184	9833	234	10333	284	10833
35	8343	85	8843	135	9343	185	9843	235	10343	285	10843
36	8353	86	8853	136	9353	186	9853	236	10353	286	10853
37	8363	87	8863	137	9363	187	9863	237	10363	287	10863
38	8373	88	8873	138	9373	188	9873	238	10373	288	10873
39	8383	89	8883	139	9383	189	9883	239	10383	289	10883
40	8393	90	8893	140	9393	190	9893	240	10393	290	10893
41	8403	91	8903	141	9403	191	9903	241	10403	291	10903
42	8413	92	8913	142	9413	192	9913	242	10413	292	10913
43	8423	93	8923	143	9423	193	9923	243	10423	293	10923
44	8433	94	8933	144	9433	194	9933	244	10433	294	10933
45	8443	95	8943	145	9443	195	9943	245	10443	295	10943
46	8453	96	8953	146	9453	196	9953	246	10453	296	10953
47	8463	97	8963	147	9463	197	9963	247	10463	297	10963
48	8473	98	8973	148	9473	198	9973	248	10473	298	10973
49	8483	99	8983	149	9483	199	9983	249	10483	299	10983
50	8493	100	8993	150	9493	200	9993	250	10493	300	10993

(2) For axis 2 (positioning option)

						1					
Data	Positioning										
No.	option										
301	11003	351	11503	401	12003	451	12503	501	13003	551	13503
302	11013	352	11513	402	12013	452	12513	502	13013	552	13513
303	11023	353	11523	403	12023	453	12523	503	13023	553	13523
304	11033	354	11533	404	12033	454	12533	504	13033	554	13533
305	11043	355	11543	405	12043	455	12543	505	13043	555	13543
306	11053	356	11553	406	12053	456	12553	506	13053	556	13553
307	11063	357	11563	407	12063	457	12563	507	13063	557	13563
308	11073	358	11573	408	12073	458	12573	508	13073	558	13573
309	11083	359	11583	409	12083	459	12583	509	13083	559	13583
310	11093	360	11593	410	12093	460	12593	510	13093	560	13593
311	11103	361	11603	411	12103	461	12603	511	13103	561	13603
312	11113	362	11613	412	12113	462	12613	512	13113	562	13613
313	11123	363	11623	413	12123	463	12623	513	13123	563	13623
314	11133	364	11633	414	12133	464	12633	514	13133	564	13633
315	11143	365	11643	415	12143	465	12643	515	13143	565	13643
316	11153	366	11653	416	12153	466	12653	516	13153	566	13653
317	11163	367	11663	417	12163	467	12663	517	13163	567	13663
318	11173	368	11673	418	12173	468	12673	518	13173	568	13673
319	11183	369	11683	419	12183	469	12683	519	13183	569	13683
320	11193	370	11693	420	12193	470	12693	520	13193	570	13693
321	11203	371	11703	421	12203	471	12703	521	13203	571	13703
322	11213	372	11713	422	12213	472	12713	522	13213	572	13713
323	11223	373	11723	423	12223	473	12723	523	13223	573	13723
324	11233	374	11733	424	12233	474	12733	524	13233	574	13733
325	11243	375	11743	425	12243	475	12743	525	13243	575	13743
326	11253	376	11753	426	12253	476	12753	526	13253	576	13753
327	11263	377	11763	427	12263	477	12763	527	13263	577	13763
328	11273	378	11773	428	12273	478	12773	528	13273	578	13773
329	11283	379	11783	429	12283	479	12783	529	13283	579	13783
330	11293	380	11793	430	12293	480	12793	530	13293	580	13793
331	11303	381	11803	431	12303	481	12803	531	13303	581	13803
332	11313	382	11813	432	12313	482	12813	532	13313	582	13813
333	11323	383	11823	433	12323	483	12823	533	13323	583	13823
334	11333	384	11833	434	12333	484	12833	534	13333	584	13833
335	11343	385	11843	435	12343	485	12843	535	13343	585	13843
336	11353	386	11853	436	12353	486	12853	536	13353	586	13853
337	11363	387	11863	437	12363	487	12863	537	13363	587	13863
338	11373	388	11873	438	12373	488	12873	538	13373	588	13873
339	11383	389	11883	439	12383	489	12883	539	13383	589	13883
340	11393	390	11893	440	12393	490	12893	540	13393	590	13893
341	11403	391	11903	441	12403	491	12903	541	13403	591	13903
342	11413	392	11913	442	12413	492	12913	542	13413	592	13913
343	11423	393	11923	443	12423	493	12923	543	13423	593	13923
344	11433	394	11933	444	12433	494	12933	544	13433	594	13933
345	11443	395	11943	445	12443	495	12943	545	13443	595	13943
346	11453	396	11953	446	12453	496	12953	546	13453	596	13953
347	11463	397	11963	447	12463	497	12963	547	13463	597	13963
348	11473	398	11973	448	12473	498	12973	548	13473	598	13973
349	11483	399	11983	449	12483	499	12983	549	13483	599	13983
350	11493	400	11993	450	12493	500	12993	550	13493	600	13993

Data	Posi-	M	Dwoll		mand		ioning ress	Arc	data
No.	tioning identi-	M code	Dwell time	Low-	eed High-	Low-	High-	Low-	High-
	fier		-	order	order	order	order	order	order
1	14000	14001	14002	14004	14005	14006	14007	14008	14009
2	14010	14011	14012	14014	14015	14016	14017	14018	14019
3	14020	14021	14022	14024	14025	14026	14027	14028	14029
4	14030	14031	14032	14034	14035	14036	14037	14038	14039
5	14040	14041	14042	14044	14045	14046	14047	14048	14049
6	14050	14051	14052	14054	14055	14056	14057	14058	14059
7	14060	14061	14062	14064	14065	14066	14067	14068	14069
8	14070	14071	14072	14074	14075	14076	14077	14078	14079
9	14080	14081	14082	14084	14085	14086	14087	14088	14089
10	14090	14091	14092	14094	14095	14096	14097	14098	14099
11	14100	14101	14102	14104	14105	14106	14107	14108	14109
12	14110	14111	14112	14114	14115	14116	14117	14118	14119
13	14120	14121	14122	14124	14125	14126	14127	14128	14129
14	14130	14131	14132	14134	14135	14136	14137	14138	14139
15	14140	14141	14142	14144	14145	14146	14147	14148	14149
16	14150	14151	14152	14154	14155	14156	14157	14158	14159
17	14160	14161	14162	14164	14165	14166	14167	14168	14169
18	14170	14171	14172	14174	14175	14176	14177	14178	14179
19	14180	14181	14172	14184	14175	14186	14187	14188	14189
		14191	14192	_			14197	14198	14199
20	14190			14194	14195	14196			
21	14200	14201	14202	14204	14205	14206	14207	14208	14209
22	14210	14211	14212	14214	14215	14216	14217	14218	14219
23	14220	14221	14222	14224	14225	14226	14227	14228	14229
24	14230	14231	14232	14234	14235	14236	14237	14238	14239
25	14240	14241	14242	14244	14245	14246	14247	14248	14249
26	14250	14251	14252	14254	14255	14256	14257	14258	14259
27	14260	14261	14262	14264	14265	14266	14267	14268	14269
28	14270	14271	14272	14274	14275	14276	14277	14278	14279
29	14280	14281	14282	14284	14285	14286	14287	14288	14289
30	14290	14291	14292	14294	14295	14296	14297	14298	14299
31	14300	14301	14302	14304	14305	14306	14307	14308	14309
32	14310	14311	14312	14314	14315	14316	14317	14318	14319
33	14320	14321	14322	14324	14325	14326	14327	14328	14329
34	14330	14331	14332	14334	14335	14336	14337	14338	14339
35	14340	14341	14342	14344	14345	14346	14347	14348	14349
36	14350	14351	14352	14354	14355	14356	14357	14358	14359
37	14360	14361	14362	14364		14366		14368	14369
38	14370	14371	14372	14374	14375	14376	14377	14378	14379
39	14380	14381	14382	14384	14385	14386	14387	14388	14389
40	14390	14391	14392	14394	14395	14396	14397	14398	14399
41	14400	14401	14402	14404		14406	14407	14408	14409
42	14410	14411	14412	14414	14415		14417	14418	14419
43	14420	14421	14422	14424	14425	14426	14427	14428	14429
44	14430	14431	14432	14434	14435	14436	14437	14438	14439
45	14440	14441	14442		14445		14447	14448	
		14451			14455				
46	14450		14452	14454			14457	14458	
47	14460	14461	14462	14464	14465	14466	14467	14468	14469
48	14470	14471	14472	14474	14475	14476	14477	14478	14479
49	14480	14481	14482	14484	14485	14486	14487	14488	14489
50	14490	14491	14492	14494	14495	14496	14497	14498	14499

	Posi-				mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	Spe Low-	eed High-	add Low-	ress High-	Low-	High-
140.	fier	couc	unc	order	order	order	order	order	order
51	14500	14501	14502	14504	14505	14506	14507	14508	14509
52	14510	14511	14512	14514	14515	14516	14517	14518	14519
53	14520	14521	14522	14524	14525	14526	14527	14528	14529
54	14530	14531	14532	14534	14535	14536	14537	14538	14539
55	14540	14541	14542	14544	14545	14546	14547	14548	14549
56	14550	14551	14552	14554	14555	14556	14557	14558	14559
57	14560	14561	14562	14564	14565	14566	14567	14568	14569
58	14570	14571	14572	14574	14575	14576	14577	14578	14579
59	14580	14581	14582	14584	14585	14586	14587	14588	14589
60	14590	14591	14592	14594	14595	14596	14597	14598	14599
61	14600	14601	14602	14604	14605	14606	14607	14608	14609
62	14610	14611	14612	14614	14615	14616	14617	14618	14619
63	14620	14621	14622	14624	14625	14626	14627	14628	14629
64	14630	14631	14632	14634	14635	14636	14637	14638	14639
65	14640	14641	14642	14644	14645	14646	14647	14648	14649
66	14650	14651	14652	14654	14655	14656	14657	14658	14659
67	14660	14661	14662	14664	14665	14666	14667	14668	14669
68	14670	14671	14672	14674	14675	14676	14677	14678	14679
69	14680	14681	14682	14684	14685	14686	14687	14688	14689
70	14690	14691	14692	14694	14695	14696	14697	14698	14699
71	14700	14701	14702	14704	14705	14706	14707	14708	14709
72	14710	14711	14712	14714	14715	14716	14717	14718	14719
73	14720	14721	14722	14724	14725	14726	14727	14728	14729
74	14730	14731	14732	14734	14735	14736	14737	14738	14739
75	14740	14741	14742	14744	14745	14746	14747	14748	14749
76	14750	14751	14752	14754	14755	14756	14757	14758	14759
77	14760	14761	14762	14764	14765	14766	14767	14768	14769
78	14770	14771	14772	14774	14775	14776	14777	14778	14779
79	14780	14781	14782	14784	14785	14786	14787	14788	14789
80	14790	14791	14792	14794	14795	14796	14797	14798	14799
81	14800	14801	14802	14804	14805	14806	14807	14808	14809
82	14810	14811	14812	14814	14815	14816	14817	14818	14819
83	14820	14821	14822	14824	14825	14826	14827	14828	14829
84	14830	14831	14832	14834	14835	14836	14837	14838	14839
85	14840	14841	14842	14844	14845	14846	14847	14848	14849
86	14850	14851	14852	14854	14855	14856	14857	14858	14859
87	14860	14861	14862	14864	14865	14866	14867	14868	14869
88	14870	14871	14872	14874	14875	14876	14877	14878	14879
89	14880	14881	14882	14884	14885	14886	14887	14888	14889
90	14890	14891	14892	14894	14895	14896	14897	14898	14899
91	14900	14901	14902	14904	14905	14906	14907	14908	14909
92	14910	14911	14912	14914	14915	14916	14917	14918	14919
93	14920	14921	14922	14924	14925	14926	14927	14928	14929
94	14930	14931	14932	14934	14935	14936	14937	14938	14939
95	14940	14941	14942	14944	14945	14946	14947	14948	14949
96	14950	14951	14952	14954	14955	14956	14957	14958	14959
97	14960	14961	14962	14964	14965	14966	14967	14968	14969
98	14970	14971	14972	14974	14975	14976	14977	14978	14979
99	14980	14981	14982	14984	14985	14986	14987	14988	14989
100	14990	14991	14992	14994	14995	14996	14997	14998	14999

Data	Posi- tioning	М	Dwell		mand eed	Positi add	oning	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
101	15000	15001	15002	15004	15005	15006	15007	15008	15009
102	15010	15011	15012	15014	15015	15016	15017	15018	15019
103	15020	15021	15022	15024	15025	15026	15027	15028	15029
104	15030	15031	15032	15034	15035	15036	15037	15038	15039
105	15040	15041	15042	15044	15045	15046	15047	15048	15049
106	15050	15051	15052	15054	15055	15056	15057	15058	15059
107	15060	15061	15062	15064	15065	15066	15067	15068	15069
108	15070	15071	15072	15074	15075	15076	15077	15078	15079
109	15080	15081	15082	15084	15085	15086	15087	15088	15089
110	15090	15091	15092	15094	15095	15096	15097	15098	15099
111	15100	15101	15102	15104	15105	15106	15107	15108	15109
112	15110	15111	15112	15114	15115	15116	15117	15118	15119
113	15120	15121	15122	15124	15125	15126	15127	15128	15129
114	15130	15131	15132	15134	15135	15136	15137	15138	15139
115	15140	15141	15142	15144	15145	15146	15147	15148	15149
116	15150	15151	15152	15154	15155	15156	15157	15158	15159
117	15160	15161	15162	15164		15166	15167	15168	15169
118	15170	15171	15172	15174		15176	15177	15178	15179
119	15180	15181	15182	15184	15185	15186	15187	15188	15189
120	15190	15191	15192	15194		15196	15197	15198	15199
121	15200	15201	15202	15204		15206	15207	15208	15209
122	15210	15211	15212	15214	15215	15216	15217	15218	15219
123	15220	15221	15222	15224	15225	15226	15227	15228	15229
124	15230	15231	15232	15234	15235	15236	15237	15238	15239
125	15240	15241	15242	15244	15245	15246	15247	15248	15249
126	15250	15251	15252	15254	15255	15256	15257	15258	15259
127	15260	15261	15262	15264	15265	15266	15267	15268	15269
128	15270	15271	15272	15274	15275	15276	15277	15278	15279
129	15280	15281	15282	15284	15285	15286	15287	15288	15289
130	15290	15291	15292	15294	15295	15296	15297	15298	15299
		15301							
131	15300		15302	15304	15305	15306	15307	15308	15309
132	15310	15311	15312	15314	15315	15316	15317	15318	15319
133	15320	15321	15322	15324	15325	15326	15327	15328	15329 15339
134	15330	15331	15332	15334	15335	15336	15337	15338	
135	15340								
136	15350	15351		15354			15357	15358	
137	15360	15361	15362				15367	15368	
138	15370	15371	15372				15377	15378	
139	15380	15381	15382		15385	15386	15387	15388	15389
140	15390	15391	15392			15396	15397	15398	15399
141	15400	15401	15402			15406	15407	15408	15409
142	15410	15411	15412			15416	15417	15418	
143	15420	15421	15422		15425	15426	15427	15428	15429
144	15430	15431	15432		15435	15436	15437	15438	15439
145	15440	15441	15442	15444	15445	15446	15447	15448	15449
146	15450	15451	15452	15454	15455	15456	15457	15458	15459
147	15460	15461	15462	15464	15465	15466	15467	15468	15469
148	15470	15471	15472	15474	15475	15476	15477	15478	15479
149	15480	15481	15482	15484	15485	15486	15487	15488	15489
150	15490	15491	15492	15494	15495	15496	15497	15498	15499

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
151	15500	15501	15502	15504	15505	15506	15507	15508	15509
152	15510	15511	15512	15514	15515	15516	15517	15518	15519
153	15520	15521	15522	15524	15525	15526	15527	15528	15529
154	15530	15531	15532	15534	15535	15536	15537	15538	15539
155	15540	15541	15542	15544	15545	15546	15547	15548	15549
156	15550	15551	15552	15554	15555	15556	15557	15558	15559
157	15560	15561	15562	15564	15565	15566	15567	15568	15569
158	15570	15571	15572	15574	15575	15576	15577	15578	15579
159	15580	15581	15582	15584	15585	15586	15587	15588	15589
160	15590	15591	15592	15594	15595	15596	15597	15598	15599
161	15600	15601	15602	15604	15605	15606	15607	15608	15609
162	15610	15611	15612	15614	15615	15616	15617	15618	15619
163	15620	15621	15622	15624	15625	15626	15627	15628	15629
164	15630	15631	15632	15634	15635	15636	15637	15638	15639
165	15640	15641	15642	15644	15645	15646	15647	15648	15649
166	15650	15651	15652	15654	15655	15656	15657	15658	15659
167	15660	15661	15662	15664	15665	15666	15667	15668	15669
168	15670	15671	15672	15674	15675	15676	15677	15678	15679
169	15680	15681	15682	15684	15685	15686	15687	15688	15689
170	15690	15691	15692	15694	15695	15696	15697	15698	15699
171	15700	15701	15702	15704	15705	15706	15707	15708	15709
172	15710	15711	15712	15714	15715	15716	15717	15718	15719
173	15720	15721	15722	15724	15725	15726	15727	15728	15729
174	15730	15731	15732	15734	15735	15736	15737	15738	15739
175	15740	15741	15742	15744	15745	15746	15747	15748	15749
176	15750	15751	15752	15754	15755	15756	15757	15758	15759
177	15760	15761	15762	15764	15765	15766	15767	15768	15769
178	15770	15771	15772	15774	15775	15776	15777	15778	15779
179	15780	15781	15782	15784	15785	15786	15787	15788	15789
180	15790	15791	15792	15794	15795	15796	15797	15798	15799
181	15800	15801	15802	15804	15805	15806	15807	15808	15809
182	15810	15811	15812	15814	15815	15816	15817	15818	15819
183	15820	15821	15822	15824	15825	15826	15827	15828	15829
184	15830	15831	15832	15834	15835	15836	15837	15838	15839
185	15840		15842	15844			15847		15849
186	15850	15851	15852	15854	15855	15856	15857	15858	15859
187	15860	15861	15862	15864	15865		15867	15868	15869
188	15870	15871	15872	15874	15875	15876	15877	15878	15879
189	15880	15881	15882	15884	15885	15886	15887	15888	15889
190	15890	15891	15892	15894	15895		15897	15898	15899
191	15900	15901	15902	15904	15905	15906	15907	15908	15909
192	15910	15911	15912	15914	15915	15916	15917	15918	15919
193	15920	15921	15922	15924	15925	15926	15927	15928	15929
194	15930	15931	15932	15934	15935	15936	15937	15938	15939
195	15940	15941	15942	15944	15945	15946	15947	15948	15949
196	15950	15951	15952	15954	15955	15956	15957	15958	15959
197	15960	15961	15962	15964	15965	15966	15967	15968	15969
198	15970	15971	15972	15974	15975	15976	15977	15978	15979
199	15980	15981	15982	15984	15985	15986	15987	15988	15989
200	15990	15991	15992	15994	15995	15996	15997	15998	15999

Dete	Posi-		Donall		mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	spe Low-	High-	add Low-	ress High-	Low-	High-
	fier			order	order	order	order	order	order
201	16000	16001	16002	16004	16005	16006	16007	16008	16009
202	16010	16011	16012	16014	16015	16016	16017	16018	16019
203	16020	16021	16022	16024	16025	16026	16027	16028	16029
204	16030	16031	16032	16034	16035	16036	16037	16038	16039
205	16040	16041	16042	16044	16045	16046	16047	16048	16049
206	16050	16051	16052	16054	16055	16056	16057	16058	16059
207	16060	16061	16062	16064	16065	16066	16067	16068	16069
208	16070	16071	16072	16074	16075	16076	16077	16078	16079
209	16080	16081	16082	16084	16085	16086	16087	16088	16089
210	16090	16091	16092	16094	16095	16096	16097	16098	16099
211	16100	16101	16102	16104	16105	16106	16107	16108	16109
212	16110	16111	16112	16114	16115	16116	16117	16118	16119
213	16120	16121	16122	16124	16125	16126	16127	16128	16129
214	16130	16131	16132	16134	16135	16136	16137	16138	16139
215	16140	16141	16142	16144	16145	16146	16147	16148	16149
216	16150	16151	16152	16154	16155	16156	16157	16158	16159
217	16160	16161	16162	16164	16165	16166	16167	16168	16169
218	16170	16171	16172	16174	16175	16176	16177	16178	16179
219	16180	16181	16182	16184	16185	16186	16187	16188	16189
220	16190	16191	16192	16194	16195	16196	16197	16198	16199
221	16200	16201	16202	16204	16205	16206	16207	16208	16209
222	16210	16211	16212	16214	16215	16216	16217	16218	16219
223	16220	16221	16222	16224	16225	16226	16227	16228	16229
224	16230	16231	16232	16234	16235	16236	16237	16238	16239
225	16240	16241	16242	16244	16245	16246	16247	16248	16249
226	16250	16251	16252	16254	16255	16256	16257	16258	16259
227	16260	16261	16262	16264	16265	16266	16267	16268	16269
228	16270	16271	16272	16274	16275	16276	16277	16278	16279
229	16280	16281	16282	16284	16285	16286	16287	16288	16289
230	16290	16291	16292	16294	16295	16296	16297	16298	16299
231	16300	16301	16302	16304	16305	16306	16307	16308	16309
232	16310	16311	16312	16314	16315	16316	16317	16318	16319
233	16320	16321	16322	16324	16325	16326	16327	16328	16329
234	16330	16331	16332	16334	16335	16336	16337	16338	16339
235	16340	16341	16342	16344	16345	16346	16347	16348	16349
236	16350	16351	16352	16354	16355	16356	16357	16358	16359
237	16360	16361	16362	16364	16365	16366	16367	16368	16369
238	16370	16371	16372	16374	16375	16376	16377	16378	16379
239	16380	16381	16382	16384	16385	16386	16387	16388	16389
240	16390	16391	16392	16394	16395	16396	16397	16398	16399
241	16400	16401	16402	16404	16405	16406	16407	16408	16409
242	16410	16411	16412	16414	16415	16416	16417	16418	16419
243	16420	16421	16422	16424	16425	16426	16427	16428	16429
244	16430	16431	16432	16434	16435	16436	16437	16438	16439
245	16440	16441	16442	16444	16445	16446	16447	16448	16449
246	16450	16451	16452	16454	16455	16456	16457	16458	16459
247	16460	16461	16462	16464	16465	16466	16467	16468	16469
248	16470	16471	16472	16474	16475	16476	16477	16478	16479
249	16480	16481	16482	16484	16485	16486	16487	16488	16489
250	16490	16491	16492	16494	16495	16496	16497	16498	16499

No. Identi	Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
251 16500 16501 16502 16504 16505 16506 16507 16508 16509 252 16510 16511 16512 16514 16515 16516 16517 16518 16519 253 16520 16521 16522 16524 16525 16526 16527 16528 16529 255 16540 16541 16542 16544 16546 16564 16564 16564 16565 16567 16568 16567 256 16550 16561 16562 16564 16566 16567 16568 16569 256 16560 16561 16562 16664 16657 16576 16588 16669 256 16560 16561 16652 16664 16667 16688 16689 260 16560 16661 16661 16661 16661 16661 16661 16661 16662 16664 16662 16664 16662 <		identi-		-	Low-	High-	Low-	High-		~
252 16510 16511 16512 16514 16514 16516 16517 16528 16529 253 16520 16521 16522 16524 16526 16527 16528 16529 254 16530 16531 16522 16524 16536 16537 16538 16539 256 16560 16561 16562 16564 16566 16567 16568 16569 257 16560 16561 16562 16564 16565 16567 16578 16589 258 16500 16561 16562 16584 16586 16567 16588 16589 258 16500 16591 16522 16584 16586 16567 16588 16589 260 16500 16611 16612 16604 16606 16607 16618 16619 263 16640 16661 16662 16662 16662 16663 16657 16658 166										
253 16520 16521 16522 16524 16526 16527 16528 16532 16534 16536 16537 16538 16539 16534 16536 16537 16538 16539 16539 16539 16539 16539 16539 16539 16539 16539 16539 16539 16569 16669 16669 16661 16661 16661 16662 16662 16662 16662 16662 16669 16669 16669 16660 16660 16660 166601 16662 16669 16669										
254 16530 16531 16532 16534 16534 16534 16534 16534 16534 16545 16546 16546 16547 16548 16549 256 16550 16551 16552 16554 16556 16557 16568 16569 16669 16661 16611 16612 16614 16614 16614 16614 16614 16614 16614 16614 16661 16661 16661 16661 16661 16661 16662 16664 16666 16667 16669 16669 </td <td></td>										
255 16540 16541 16542 16544 16545 16567 16563 16554 16556 16556 16557 16563 16563 16565 16565 16565 16566 16567 16568 16569 258 16570 16571 16572 16574 16576 16577 16578 16579 259 16580 16581 16582 16584 16586 16587 16589 16589 260 16590 16591 16592 16584 16589 16597 16589 16599 261 16600 16601 16601 16601 16601 16601 16602 16601 16601 16602 16602 16602 16602 16602 16602 16602 16602 16602 16603 16603 16631 16632 16634 16636 16637 16638 16639 260 16601 16601 16602 16604 16604 16606 16607 16689 <td></td>										
256 16550 16551 16562 16564 16565 16566 16566 16566 16567 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16568 16567 16578 16579 259 16580 16580 16581 16582 16584 16585 16586 16587 16589 16599 261 16600 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16602 16664 16661 16661 16661 16662 16662 16664 16664 16664 16664 16664 16664 16664 16667 16668 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669										
257 16560 16561 16562 16564 16566 16566 16567 16576 16577 16578 16579 258 16580 16581 16582 16584 16585 16586 16587 16578 16588 16588 16588 16588 16588 16589 16590 16590 16590 16591 16592 16594 16605 16606 16597 16598 16599 261 16600 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16602 16604 16603 16631 16632 16634 16665 16667 16668 16632 16664 16665 16667 16668 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669 16669										
258 16570 16571 16572 16574 16575 16576 16577 16578 16580 259 16580 16581 16582 16584 16585 16586 16587 16588 16589 260 16590 16591 16592 16594 16595 16596 16597 16598 16599 261 16600 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16602 16624 16625 16626 16627 16628 16629 16620 16661 16632 16634 16665 16667 16668 16639 16669										
259 16580 16581 16582 16584 16585 16586 16587 16588 16599 261 16500 16501 16502 16604 16605 16506 16507 16598 16599 261 16600 16601 16601 16601 16601 16601 16601 16601 16601 16601 16618 16613 16620 16621 16621 16624 16625 16626 16627 16628 16629 264 16630 16631 16632 16634 16635 16636 16637 16638 16639 265 16660 16661 16662 16664 16665 16667 16668 16669 16										
260 16590 16591 16592 16594 16595 16596 16597 16598 16599 261 16600 16601 16601 16601 16601 16601 16601 16601 16601 16601 16601 16611 16612 16624 16625 16626 16627 16628 16622 264 16630 16631 16632 16634 16635 16636 16637 16638 16639 265 16640 16641 16642 16644 16645 16665 16657 16688 16659 266 16650 16661 16662 16664 16665 16667 16688 16669 268 16660 16661 16662 16664 16665 16667 16688 16669 269 16680 16681 16682 16664 16667 16678 16679 270 16680 16681 16682 16664 16669 16669 <										
261 16600 16601 16602 16604 16605 16606 16607 16608 16609 262 16610 16611 16612 16614 16615 16616 16617 16618 16619 263 16620 16621 16622 16624 16625 16626 16627 16628 16632 264 16630 16631 16632 16634 16635 16636 16637 16638 16639 265 16660 16661 16662 16664 16665 16666 16667 16688 16669 266 16660 16661 16662 16664 16665 16666 16667 16668 16669 268 16680 16681 16682 16664 16667 16668 16689 270 16680 16681 16682 16685 16686 16687 16688 270 16680 16681 16689 16689 16689 167										
262 16610 16611 16612 16612 16612 16612 16622 16624 16625 16626 16627 16628 16629 264 16630 16631 16632 16634 16635 16636 16637 16638 16639 265 16640 16641 16642 16644 16645 16646 16648 16649 266 16650 16651 16662 16664 16665 16660 16661 16662 16664 16665 16667 16668 16669 268 16670 16671 16672 16684 16685 16667 16668 16669 270 16690 16691 16692 16684 16685 16669 16697 16688 16689 270 16690 16691 16791 16702 16704 16705 16707 16708 16709 271 16700 16711 16712 16724 16725 16726 <	260	16590		16592	16594	16595	16596		16598	16599
263 16620 16621 16622 16624 16630 16631 16632 16634 16635 16636 16637 16638 16639 265 16640 16641 16642 16644 16645 16646 16637 16638 16639 266 16650 16651 16652 16654 16665 16666 16667 16668 16669 267 16660 16671 16672 16674 16675 16667 16678 16669 268 16670 16671 16672 16674 16685 16687 16688 16689 270 16690 16691 16692 16694 16695 16696 16697 16688 16689 271 16700 16701 16702 16704 16705 16706 16708 16793 16793 16793 271 16700 16711 16712 16714 16715 16726 16727 16728 16729	261	16600	16601	16602	16604	16605	16606	16607	16608	16609
264 16630 16631 16632 16634 16634 16634 16634 16644 16646 16647 16648 16649 266 16650 16651 16652 16654 16655 16656 16657 16658 16659 267 16660 16661 16662 16664 16665 16666 16667 16668 16669 268 16670 16671 16672 16674 16675 16667 16678 16679 16678 16689 270 16690 16691 16692 16694 16695 16696 16693 16698 271 16700 16701 16702 16704 16705 16706 16703 16708 272 16710 16711 16712 16714 16715 16718 16719 16728 16729 274 16730 16721 16722 16724 16725 16726 16727 16728 16729 2	262		16611	16612	16614	16615		16617	16618	16619
265 16640 16641 16642 16644 16645 16646 16647 16648 16649 266 16650 16651 16652 16654 16655 16657 16658 16659 267 16660 16661 16662 16664 16665 16667 16667 16668 16668 268 16600 16680 16681 16682 16684 16686 16687 16688 16689 269 16690 16691 16692 16694 16696 16697 16688 16689 270 16690 16691 16692 16694 16696 16697 16698 16699 271 16700 16701 16702 16704 16704 16706 16707 16708 16799 272 16701 16771 16772 16714 16715 16726 16727 16728 16729 274 16760 16761 16762 16744 167	263	16620	16621	16622	16624	16625	16626		16628	16629
266 16650 16651 16652 16654 16655 16656 16657 16658 16658 16668 16668 16668 16668 16668 16668 16668 16668 16668 16668 16668 16668 16668 16667 16668 16667 16667 16668 16667 16668 16668 16668 16667 16668 16668 16668 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16689 16690 16690 16690 16690 16690 16690 16698 16698 16698 16698 16689 16690 16690 16698 16689 16690 16690 16690 16690 16690 16690 16690 16690 16690 16690 16690 16690 16790 16708 16709 16708 16709 16778 16768 16771 16778 16788 1	264		16631			16635	16636	16637	16638	16639
267 16660 16661 16662 16664 16665 16666 16667 16668 16668 16668 16668 16668 16677 16678 16679 16677 16678 16679 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16688 16689 16690 16690 16690 16691 16692 16694 16695 16696 16697 16688 16689 270 16700 16701 16701 16702 16704 16705 16706 16707 16708 16709 271 16701 16711 16712 16714 16715 16716 16717 16718 16719 273 16730 16731 16732 16734 16735 16736 16737 16738 16739 274 16750 16751 16762 16744 16755 16766 16767 16	265	16640	16641	16642	16644	16645	16646	16647	16648	16649
268 16670 16671 16672 16674 16675 16676 16677 16678 16689 16690 16690 16690 16690 16690 16690 16698 16698 16699 271 16700 16701 16701 16701 16701 16701 16701 16701 16701 16702 16704 16705 16706 16707 16708 16792 273 16730 16731 16732 16734 16735 16736 16737 16738 16739 274 16740 16741 16742 16744 16745 16766 16767 16738 16799 275 16760 16761 16762 16764 16765 16766 16	266	16650	16651	16652	16654	16655	16656	16657	16658	16659
269 16680 16681 16682 16684 16685 16686 16687 16688 16689 270 16690 16691 16692 16694 16695 16696 16697 16698 16699 271 16700 16701 16701 16701 16701 16701 16701 16702 16704 16705 16706 16707 16708 16709 272 16720 16721 16722 16724 16725 16726 16727 16728 16729 274 16730 16731 16732 16734 16735 16736 16737 16738 16739 275 16740 16741 16742 16744 16745 16746 16747 16748 16749 276 16750 16761 16762 16764 16765 16767 16768 16799 277 16760 16761 16762 16744 16755 16766 16767 16768 <	267	16660	16661	16662	16664	16665	16666	16667	16668	16669
270 16690 16691 16692 16694 16695 16696 16697 16698 16699 271 16700 16701 16702 16704 16705 16706 16707 16708 16709 272 16710 16711 16712 16714 16715 16716 16717 16718 16719 273 16720 16721 16722 16724 16725 16726 16727 16728 16729 274 16730 16731 16732 16734 16735 16736 16737 16738 16739 275 16740 16741 16752 16744 16745 16746 16747 16748 16759 276 16750 16751 16752 16744 16755 16766 16757 16758 16759 277 16760 16761 16772 16774 16772 16774 16779 16778 16799 16798 16791 16791 <	268	16670	16671	16672	16674	16675	16676	16677	16678	16679
271 16700 16701 16702 16704 16705 16706 16707 16708 16709 272 16710 16711 16712 16714 16715 16716 16717 16718 16719 273 16720 16721 16722 16724 16725 16726 16727 16728 16729 274 16730 16731 16732 16734 16735 16736 16737 16738 16739 275 16740 16741 16742 16744 16745 16746 16747 16748 16749 276 16750 16751 16752 16764 16755 16766 16767 16768 16769 277 16760 16761 16772 16774 16775 16776 16777 16778 16798 278 16790 16791 16792 16794 16795 16766 16797 16788 16789 280 16800 168	269	16680	16681	16682	16684	16685	16686	16687	16688	16689
272 16710 16711 16712 16714 16715 16716 16717 16718 16719 273 16720 16721 16722 16724 16725 16726 16727 16728 16729 274 16730 16731 16732 16734 16735 16736 16737 16738 16739 275 16740 16741 16742 16744 16745 16746 16747 16748 16749 276 16750 16751 16752 16754 16765 16766 16767 16788 16759 277 16760 16761 16762 16744 16765 16766 16767 16788 16799 278 16770 16771 16772 16774 16775 16766 16777 16778 16799 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 168	270	16690	16691	16692	16694	16695	16696	16697	16698	16699
273 16720 16721 16722 16724 16735 16736 16737 16738 16739 274 16730 16731 16732 16734 16735 16736 16737 16738 16739 275 16740 16741 16742 16744 16745 16746 16747 16748 16749 276 16750 16751 16752 16754 16755 16756 16757 16758 16759 277 16760 16761 16762 16764 16765 16766 16767 16788 16769 278 16770 16771 16772 16774 16775 16766 16777 16778 16799 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16888 16899 282 16810 168	271	16700	16701	16702	16704	16705	16706	16707	16708	16709
274 16730 16731 16732 16734 16735 16736 16737 16738 16739 275 16740 16741 16742 16744 16745 16746 16747 16748 16749 276 16750 16751 16752 16754 16755 16756 16757 16758 16759 277 16760 16761 16762 16764 16765 16766 16767 16768 16769 278 16770 16771 16772 16774 16775 16766 16767 16778 16779 279 16780 16791 16792 16794 16795 16796 16797 16798 16799 280 16790 16791 16802 16804 16805 16806 16807 16888 16899 281 16800 16801 16821 16804 16805 16806 16807 16828 16829 283 16820 168	272	16710	16711	16712	16714	16715	16716	16717	16718	16719
275 16740 16741 16742 16744 16745 16746 16747 16748 16749 276 16750 16751 16752 16754 16755 16756 16757 16758 16759 277 16760 16761 16762 16764 16765 16766 16767 16768 16769 278 16770 16771 16772 16774 16775 16766 16767 16778 16779 279 16780 16781 16782 16784 16785 16786 16787 16788 16789 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 168	273	16720	16721	16722	16724	16725	16726	16727	16728	16729
276 16750 16751 16752 16754 16755 16756 16757 16758 16759 277 16760 16761 16762 16764 16765 16766 16767 16768 16769 278 16770 16771 16772 16774 16775 16776 16777 16778 16779 279 16780 16781 16782 16784 16785 16786 16787 16788 16789 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16837 16838 16839 285 16840 168	274	16730	16731	16732	16734	16735	16736	16737	16738	16739
277 16760 16761 16762 16764 16765 16766 16767 16768 16769 278 16770 16771 16772 16774 16775 16776 16777 16778 16779 279 16780 16781 16782 16784 16785 16786 16787 16788 16789 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16822 16844 16845 16836 16837 16838 16839 285 16840 168	275	16740	16741	16742	16744	16745	16746	16747	16748	16749
278 16770 16771 16772 16774 16775 16776 16777 16778 16779 279 16780 16781 16782 16784 16785 16786 16787 16788 16789 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16864 16847 16888 16859 287 16860 168	276	16750	16751	16752	16754	16755	16756	16757	16758	16759
279 16780 16781 16782 16784 16785 16786 16787 16788 16789 280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16866 16867 16888 16849 286 16850 16861 16862 16864 16865 16866 16867 16888 16889 288 16870 168	277	16760	16761	16762	16764	16765	16766	16767	16768	16769
280 16790 16791 16792 16794 16795 16796 16797 16798 16799 281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16846 16857 16858 16849 286 16850 16851 16852 16854 16855 16866 16867 16868 16869 287 16860 16861 16862 16864 16865 16866 16867 16888 16889 288 16870 168	278	16770	16771	16772	16774	16775	16776	16777	16778	16779
281 16800 16801 16802 16804 16805 16806 16807 16808 16809 282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16866 16857 16888 16849 286 16860 16851 16862 16864 16865 16866 16867 16868 16859 287 16860 16871 16872 16874 16875 16866 16867 16868 16869 288 16870 16871 16882 16884 16885 16866 16877 16878 16879 290 16890 168	279	16780	16781	16782	16784	16785	16786	16787	16788	16789
282 16810 16811 16812 16814 16815 16816 16817 16818 16819 283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16846 16847 16848 16849 286 16850 16851 16852 16854 16855 16866 16867 16868 16869 287 16860 16861 16862 16864 16865 16866 16867 16878 16869 288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16866 16877 16878 16889 290 16890 169	280	16790	16791	16792	16794	16795	16796	16797	16798	16799
283 16820 16821 16822 16824 16825 16826 16827 16828 16829 284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16846 16847 16848 16849 286 16850 16851 16852 16854 16855 16856 16857 16858 16859 287 16860 16861 16862 16864 16865 16866 16867 16868 16869 288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16896 16897 16988 16899 291 16900 169	281	16800	16801	16802	16804	16805	16806	16807	16808	16809
284 16830 16831 16832 16834 16835 16836 16837 16838 16839 285 16840 16841 16842 16844 16845 16846 16847 16848 16849 286 16850 16851 16852 16854 16855 16856 16857 16858 16859 287 16860 16861 16862 16864 16865 16866 16867 16888 16869 288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16936 16897 16888 16889 291 16900 16901 16902 16904 16905 16906 16907 16908 16999 292 16910 169	282	16810	16811	16812	16814	16815	16816	16817	16818	16819
285 16840 16841 16842 16844 16845 16846 16847 16848 16849 286 16850 16851 16852 16854 16855 16856 16857 16858 16859 287 16860 16861 16862 16864 16865 16866 16867 16868 16869 288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16896 16897 16898 16889 291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 169	283	16820	16821	16822	16824	16825	16826	16827	16828	16829
286 16850 16851 16852 16854 16855 16856 16857 16858 16859 287 16860 16861 16862 16864 16865 16866 16867 16868 16869 288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16896 16897 16888 16889 291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 169	284	16830	16831	16832	16834	16835	16836	16837	16838	16839
287 16860 16861 16862 16864 16865 16866 16867 16868 16868 288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16896 16897 16898 16899 291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 169	285	16840	16841	16842	16844	16845	16846	16847	16848	16849
288 16870 16871 16872 16874 16875 16876 16877 16878 16879 289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16896 16897 16898 16899 291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 169	286	16850	16851	16852	16854	16855	16856	16857	16858	16859
289 16880 16881 16882 16884 16885 16886 16887 16888 16889 290 16890 16891 16892 16894 16895 16896 16897 16898 16899 291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16969 298 16970 169	287	16860	16861	16862	16864	16865	16866	16867	16868	16869
290 16890 16891 16892 16894 16895 16896 16897 16898 16899 291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16974 16975 16976 16977 16978 16979 298 16970 169	288	16870	16871	16872	16874	16875	16876	16877	16878	16879
291 16900 16901 16902 16904 16905 16906 16907 16908 16909 292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16964 16965 16966 16967 16978 16979 298 16970 16981 16982 16984 16985 16966 16987 16978 16989 299 16980 169	289	16880	16881	16882	16884	16885	16886	16887	16888	16889
292 16910 16911 16912 16914 16915 16916 16917 16918 16919 293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16964 16965 16966 16967 16968 16969 298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	290	16890	16891	16892	16894	16895	16896	16897	16898	16899
293 16920 16921 16922 16924 16925 16926 16927 16928 16929 294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16974 16965 16966 16967 16968 16969 298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	291	16900	16901	16902	16904	16905	16906	16907	16908	16909
294 16930 16931 16932 16934 16935 16936 16937 16938 16939 295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16964 16965 16966 16967 16968 16969 298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	292	16910	16911	16912	16914	16915	16916	16917	16918	16919
295 16940 16941 16942 16944 16945 16946 16947 16948 16949 296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16964 16965 16966 16967 16968 16969 298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	293	16920	16921	16922	16924	16925	16926	16927	16928	16929
296 16950 16951 16952 16954 16955 16956 16957 16958 16959 297 16960 16961 16962 16964 16965 16966 16967 16968 16969 298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	294	16930	16931	16932	16934	16935	16936	16937	16938	16939
297 16960 16961 16962 16964 16965 16966 16967 16968 16969 298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	295	16940	16941	16942	16944	16945	16946	16947	16948	16949
298 16970 16971 16972 16974 16975 16976 16977 16978 16979 299 16980 16981 16982 16984 16985 16986 16987 16988 16989	296	16950	16951	16952	16954	16955	16956	16957	16958	16959
299 16980 16981 16982 16984 16985 16986 16987 16988 16989	297	16960	16961	16962	16964	16965	16966	16967	16968	16969
	298	16970	16971	16972	16974	16975	16976	16977	16978	16979
300 16990 16991 16992 16994 16995 16996 16997 16998 16999	299	16980	16981	16982	16984	16985	16986	16987	16988	16989
	300	16990	16991	16992	16994	16995	16996	16997	16998	16999

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
301	17000	17001	17002	17004	17005	17006	17007	17008	17009
302	17010	17011	17012	17014	17015	17016	17017	17018	17019
303	17020	17021	17022	17024	17025	17026	17027	17028	17029
304	17030	17031	17032	17034	17035	17036	17037	17038	17039
305	17040	17041	17042	17044	17045	17046	17047	17048	17049
306	17050	17051	17052	17054	17055	17056	17057	17058	17059
307	17060	17061	17062	17064	17065	17066	17067	17068	17069
308	17070	17071	17072	17074	17075	17076	17077	17078	17079
309	17080	17081	17082	17084	17085	17086	17087	17088	17089
310	17090	17091	17092	17094	17095	17096	17097	17098	17099
311	17100	17101	17102	17104	17105	17106	17107	17108	17109
312	17110	17111	17112	17114	17115	17116	17117	17118	17119
313	17120	17121	17122	17124	17125	17126	17127	17128	17129
314	17130	17131	17132	17134	17135	17136	17137	17138	17139
315	17140	17141	17142	17144	17145	17146	17147	17148	17149
316	17150	17151	17152	17154	17155	17156	17157	17158	17159
317	17160	17161	17162	17164	17165	17166	17167	17168	17169
318	17170	17171	17172	17174	17175	17176	17177	17178	17179
319	17180	17181	17182	17184	17185	17186	17187	17188	17189
320	17190	17191	17192	17194	17195	17196	17197	17198	17199
321	17200	17201	17202	17204	17205	17206	17207	17208	17209
322	17210	17211	17212	17214	17215	17216	17217	17218	17219
323	17220	17221	17222	17224	17225	17226	17227	17228	17229
324	17230	17231	17232	17234	17235	17236	17237	17238	17239
325	17240	17241	17242	17244	17245	17246	17247	17248	17249
326	17250	17251	17252	17254	17255	17256	17257	17258	17259
327	17260	17261	17262	17264	17265	17266	17267	17268	17269
328	17270	17271	17272	17274	17275	17276	17277	17278	17279
329	17280	17281	17282	17284	17285	17286	17287	17288	17289
330	17290	17291	17292	17294	17295	17296	17297	17298	17299
331	17300	17301	17302	17304	17305	17306	17307	17308	17309
332	17310	17311	17312	17314	17315	17316	17317	17318	17319
333	17320	17321	17322	17324	17325	17326	17327	17328	17329
334	17330	17331	17332	17334	17335	17336	17337	17338	17339
335	17340	17341	17342	17344	17345	17346	17347	17348	17349
336	17350	17351	17352	17354	17355	17356	17357	17358	17359
337	17360	17361	17362	17364	17365	17366	17367	17368	17369
338	17370	17371	17372	17374	17375	17376	17377	17378	17379
339	17380	17381	17382	17384	17385	17386	17387	17388	17389
340	17390	17391	17392	17394	17395	17396	17397	17398	17399
341	17400	17401	17402		17405	17406	17407	17408	17409
342	17410	17411	17412		17415	17416	17417	17418	17419
343	17420	17421	17422		17425	17426	17427	17428	17429
344	17430	17431	17432		17435	17436	17437	17438	17439
345	17440	17441	17442		17445	17446		17448	17449
346	17450	17451	17452		17455	17456	17457	17458	
347	17460	17461	17462		17465	17466	17467	17468	
348	17470	17471	17472	17474	17475	17476	17477	17478	17479
349	17480	17481	17482		17485	17486	17487	17488	17489
350	17490	17491	17492	17494	17495	17496	17497	17498	17499

	Posi-			Comi	mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	Spe Low-		add Low-	ress		
INO.	fier	code	unic	order	High- order	order	High- order	Low- order	High- order
351	17500	17501	17502	17504	17505	17506	17507	17508	17509
352	17510	17511	17512	17514	17515	17516	17517	17518	17519
353	17520	17521	17522	17524	17525	17526	17527	17528	17529
354	17530	17531	17532	17534	17535	17536	17537	17538	17539
355	17540	17541	17542	17544	17545	17546	17547	17548	17549
356	17550	17551	17552	17554	17555	17556	17557	17558	17559
357	17560	17561	17562	17564	17565	17566	17567	17568	17569
358	17570	17571	17572	17574	17575	17576	17577	17578	17579
359	17580	17581	17582	17584	17585	17586	17587	17588	17589
360	17590	17591	17592	17594	17595	17596	17597	17598	17599
361	17600	17601	17602	17604	17605	17606	17607	17608	17609
362	17610	17611	17612	17614	17615	17616	17617	17618	17619
363	17620	17621	17622	17624	17625	17626	17627	17628	17629
364	17630	17631	17632	17634	17635	17636	17637	17638	17639
365	17640	17641	17642	17644	17645	17646	17647	17648	17649
366	17650	17651	17652	17654	17655	17656	17657	17658	17659
367	17660	17661	17662	17664	17665	17666	17667	17668	17669
368	17670	17671	17672	17674	17675	17676	17677	17678	17679
369	17680	17681	17682	17684	17685	17686	17687	17688	17689
370	17690	17691	17692	17694	17695	17696	17697	17698	17699
371	17700	17701	17702	17704	17705	17706	17707	17708	17709
372	17710	17711	17712	17714	17715	17716	17717	17718	17719
373	17720	17721	17722	17724	17725	17726	17727	17728	17729
374	17730	17731	17732	17734	17735	17736	17737	17738	17739
375	17740	17741	17742	17744	17745	17746	17747	17748	17749
376	17750	17751	17752	17754	17755	17756	17757	17758	17759
377	17760	17761	17762	17764	17765	17766	17767	17768	17769
378	17770	17771	17772	17774	17775	17776	17777	17778	17779
379	17780	17781	17782	17784	17785	17786	17787	17788	17789
380	17790	17791	17792	17794	17795	17796	17797	17798	17799
381	17800	17801	17802	17804	17805	17806	17807	17808	17809
382	17810	17811	17812	17814	17815	17816	17817	17818	17819
383	17820	17821	17822	17824	17825	17826	17827	17828	17829
384	17830	17831	17832	17834	17835	17836	17837	17838	17839
385	17840	17841	17842	17844	17845	17846	17847	17848	17849
386	17850	17851	17852	17854	17855	17856	17857	17858	17859
387	17860	17861	17862	17864	17865	17866	17867	17868	17869
388	17870	17871	17872	17874	17875	17876	17877	17878	17879
389	17880	17881	17882	17884	17885	17886	17887	17888	17889
390	17890	17891	17892	17894	17895	17896	17897	17898	17899
391	17900	17901	17902	17904	17905	17906	17907	17908	17909
392	17910	17911	17912	17914	17915	17916	17917	17918	17919
393	17920	17921	17922	17924	17925	17926	17927	17928	17929
394	17930	17931	17932	17934	17935	17936	17937	17938	17939
395	17940	17941	17942	17944	17945	17946	17947	17948	17949
396	17950	17951	17952	17954	17955	17956	17957	17958	17959
397	17960	17961	17962	17964	17965	17966	17967	17968	17969
398	17970	17971	17972	17974	17975	17976	17977	17978	17979
399	17980	17981	17982	17984	17985	17986	17987	17988	17989
400	17990	17991	17992	17994	17995	17996	17997	17998	17999

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
401	18000	18001	18002	18004	18005	18006	18007	18008	18009
402	18010	18011	18012	18014	18015	18016	18017	18018	18019
403	18020	18021	18022	18024	18025	18026	18027	18028	18029
404	18030	18031	18032	18034	18035	18036	18037	18038	18039
405	18040	18041	18042	18044	18045	18046	18047	18048	18049
406	18050	18051	18052	18054	18055	18056	18057	18058	18059
407	18060	18061	18062	18064	18065	18066	18067	18068	18069
408	18070	18071	18072	18074	18075	18076	18077	18078	18079
409	18080	18081	18082	18084	18085	18086	18087	18088	18089
410	18090	18091	18092	18094	18095	18096	18097	18098	18099
411	18100	18101	18102	18104	18105	18106	18107	18108	18109
412	18110	18111	18112	18114	18115	18116	18117	18118	18119
413	18120	18121	18122	18124	18125	18126	18127	18128	18129
414	18130	18131	18132	18134	18135	18136	18137	18138	18139
415	18140	18141	18142	18144	18145	18146	18147	18148	18149
416	18150	18151	18152	18154	18155	18156	18157	18158	18159
417	18160	18161	18162	18164	18165	18166	18167	18168	18169
418	18170	18171	18172	18174	18175	18176	18177	18178	18179
419	18180	18181	18182	18184	18185	18186	18187	18188	18189
420	18190	18191	18192	18194	18195	18196	18197	18198	18199
421	18200	18201	18202	18204	18205	18206	18207	18208	18209
422	18210	18211	18212	18214	18215	18216	18217	18218	18219
423	18220	18221	18222	18224	18225	18226	18227	18228	18229
424	18230	18231	18232	18234	18235	18236	18237	18238	18239
425	18240	18241	18242	18244	18245	18246	18247	18248	18249
426	18250	18251	18252	18254	18255	18256	18257	18258	18259
427	18260	18261	18262	18264	18265	18266	18267	18268	18269
428	18270	18271	18272	18274	18275	18276	18277	18278	18279
429	18280	18281	18282	18284	18285	18286	18287	18288	18289
430	18290	18291	18292	18294	18295	18296	18297	18298	18299
431	18300	18301	18302	18304	18305	18306	18307	18308	18309
432	18310	18311	18312	18314	18315	18316	18317	18318	18319
433	18320	18321	18322	18324	18325	18326	18327	18328	18329
434	18330	18331	18332	18334	18335	18336	18337	18338	18339
435	18340	18341	18342	18344	18345	18346	18347	18348	18349
436	18350	18351	18352	18354	18355	18356	18357	18358	18359
437	18360	18361	18362	18364	18365	18366	18367	18368	18369
438	18370	18371	18372	18374	18375	18376	18377	18378	18379
439	18380	18381	18382	18384	18385	18386	18387	18388	18389
440	18390	18391	18392	18394	18395	18396	18397	18398	18399
441	18400	18401	18402	18404	18405	18406	18407	18408	18409
442	18410	18411	18412	18414	18415	18416	18417	18418	18419
443	18420	18421	18422	18424	18425	18426	18427	18428	18429
444	18430	18431	18432	18434	18435	18436	18437	18438	18439
445	18440	18441	18442	18444	18445	18446	18447	18448	18449
446	18450	18451	18452	18454	18455	18456	18457	18458	18459
447	18460	18461	18462	18464	18465	18466	18467	18468	18469
448	18470	18471	18472	18474	18475	18476	18477	18478	18479
449	18480	18481	18482	18484	18485	18486	18487	18488	18489
450	18490	18491	18492	18494	18495	18496	18497	18498	18499

fier corder order order <th< th=""><th>gh- der 5509 5519 5529 5539 5569 5569 6609 6629 6639 6649</th></th<>	gh- der 5509 5519 5529 5539 5569 5569 6609 6629 6639 6649
451 18500 18501 18502 18504 18505 18506 18507 18508 18 452 18510 18511 18512 18514 18515 18516 18517 18518 18 453 18520 18521 18522 18524 18525 18526 18527 18528 18 454 18530 18531 18532 18534 18535 18536 18537 18538 18 455 18560 18551 18552 18544 18555 18566 18567 18568 18 457 18560 18561 18562 18564 18565 18567 18568 18 458 18570 18571 18572 18574 18575 18568 18567 18568 18 459 18580 18581 18582 18584 18595 18566 18567 18588 18 460 18600 18601 18602 1869	5509 5519 5529 5539 5559 5569 5579 5599 6619 6629
452 18510 18511 18512 18514 18515 18526 18527 18528 18 453 18520 18521 18522 18524 18525 18526 18527 18528 18 454 18530 18531 18532 18534 18535 18536 18537 18538 18 455 18540 18541 18542 18544 18545 18566 18567 18568 18 456 18560 18561 18562 18564 18565 18566 18567 18568 18 457 18560 18561 18562 18544 18565 18566 18567 18568 18 459 18580 18581 18522 18544 18585 18586 18587 18588 18 460 18690 18691 18692 18694 18605 18666 18667 18688 18 461 18630 18621 1862	519 529 539 5549 5569 5589 569 6619 6629
453 18520 18521 18522 18524 18536 18537 18538 18 454 18530 18531 18532 18534 18535 18536 18537 18538 18 455 18540 18541 18522 18544 18545 18566 18567 18558 18 456 18560 18561 18562 18564 18565 18566 18567 18568 18 457 18560 18561 18562 18564 18565 18566 18567 18568 18 458 18570 18571 18572 18574 18576 18577 18578 18 459 18580 18581 18522 18594 18595 18596 18597 18588 18 460 18590 18591 18592 18594 18605 18606 18607 18608 18 461 18600 18691 18621 18622 1862	529 539 559 559 569 599 609 619 639
454 18530 18531 18532 18534 18535 18536 18537 18538 18 455 18540 18541 18542 18544 18545 18566 18567 18558 18 456 18550 18551 18552 18554 18555 18566 18567 18568 18 457 18560 18561 18562 18564 18565 18566 18567 18568 18 458 18570 18571 18572 18574 18575 18576 18577 18578 18 459 18580 18581 18582 18584 18585 18586 18587 18588 18 460 18600 18601 18602 18604 18605 18606 18607 18698 18 461 18600 18601 18602 18604 18605 18666 18607 18608 18 464 18630 18631 1863	539 5549 5559 5669 579 589 609 6619 6629
455 18540 18541 18542 18544 18545 18566 18557 18558 18 456 18550 18551 18552 18554 18555 18556 18557 18558 18 457 18560 18561 18562 18564 18565 18566 18567 18568 18 458 18570 18571 18572 18574 18575 18576 18577 18578 18 459 18580 18581 18582 18584 18585 18586 18597 18588 18 460 18590 18591 18592 18594 18595 18596 18597 18598 18 461 18600 18601 18602 18604 18605 18606 18607 18608 18 462 18610 18611 18622 18624 18625 18626 18627 18628 18 464 18630 18631 1863	5549 5559 5569 5579 5589 609 6619 6629
456 18550 18551 18552 18554 18555 18556 18567 18568 18 457 18560 18561 18562 18564 18565 18566 18567 18568 18 458 18570 18571 18572 18574 18575 18576 18577 18578 18 459 18580 18581 18582 18584 18585 18566 18587 18588 18 460 18590 18591 18592 18594 18595 18596 18597 18598 18 461 18600 18601 18602 18604 18606 18607 18608 18 462 18610 18611 18612 18614 18615 18616 18607 18608 18 464 18630 18621 18622 18624 18625 18626 18637 18638 18 465 18640 18651 18652 1865	559 569 579 589 599 609 619 629
457 18560 18561 18562 18564 18565 18566 18567 18578 18574 18575 18576 18577 18578 18588 18640 18600 18601 18602 18594 18595 18596 18597 18598 18 4661 18601 18601 18601 18602 18604 18606 18607 18608 18 462 18621 18622 18624 18625 18626 18627 18628 18 463 18637 18632 18634 18635 18636 18637 18638 18 465 18656 18657 <	5569 5589 5599 6609 6619 6629
458 18570 18571 18572 18574 18575 18576 18577 18578 18 459 18580 18581 18582 18584 18585 18586 18587 18588 18 460 18590 18591 18592 18594 18595 18596 18597 18598 18 461 18600 18601 18602 18604 18605 18606 18607 18608 18 462 18610 18611 18612 18614 18615 18616 18617 18618 18 463 18620 18621 18622 18624 18625 18626 18627 18628 18 464 18630 18631 18632 18634 18635 18636 18637 18638 18 465 18660 18661 18662 18654 18655 18666 18657 18658 18 467 18660 18661 1867	579 589 599 609 619 629 639
459 18580 18581 18582 18584 18585 18586 18587 18588 18584 460 18590 18591 18592 18594 18595 18596 18597 18598 18598 461 18600 18601 18602 18604 18605 18606 18607 18608 18 462 18610 18611 18612 18614 18615 18616 18617 18618 18 463 18620 18621 18622 18624 18625 18626 18627 18628 18 464 18630 18631 18632 18634 18635 18636 18637 18638 18 465 18640 18641 18642 18644 18645 18646 18637 18638 18 467 18660 18661 18652 18654 18655 18666 18667 18668 18 468 18670 18691 <t< td=""><td>589 609 619 629 639</td></t<>	589 609 619 629 639
460 18590 18591 18592 18594 18595 18596 18597 18598 18594 461 18600 18601 18602 18604 18605 18606 18607 18608 18 462 18610 18611 18612 18614 18615 18616 18617 18618 18 463 18620 18621 18622 18624 18625 18626 18627 18628 18 464 18630 18631 18632 18634 18635 18636 18637 18638 18 465 18640 18641 18642 18644 18645 18646 18647 18638 18 467 18660 18651 18652 18654 18655 18666 18657 18668 18 467 18680 18681 18662 18664 18665 18667 18677 18678 18 468 18670 18691 1	609 619 629 639
461 18600 18601 18602 18604 18605 18606 18607 18608 18 462 18610 18611 18612 18614 18615 18616 18617 18618 18 463 18620 18621 18622 18624 18625 18626 18627 18628 18 464 18630 18631 18632 18634 18635 18636 18637 18638 18 465 18640 18641 18642 18644 18645 18646 18647 18638 18 467 18660 18651 18652 18654 18655 18656 18657 18658 18 467 18660 18661 18662 18664 18655 18656 18657 18658 18 468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18691 1868	609 619 629 639
462 18610 18611 18612 18614 18615 18616 18617 18618 18624 18623 18624 18625 18626 18627 18628 18634 18635 18636 18637 18638 18634 18635 18636 18637 18638 18634 18636 18637 18638 18637 18638 18637 18638 18637 18638 18637 18638 18637 18638 18637 18638 18637 18638 18648 18646 18647 18648 18647 18668 18657 18658 18657 18658 18657 18658 18657 18658 18657 18658 18667 18658 18667 18668 18667 18668 18667 18668 18667 18668 18667 18668 18667 18668 18667 18668 18667 18668 18677 18668 18647 18668 18647 18668 18647 18668 18647 18668 1	619 629 639
463 18620 18621 18622 18624 18625 18626 18627 18628 18 464 18630 18631 18632 18634 18635 18636 18637 18638 18 465 18640 18641 18642 18644 18645 18646 18647 18648 18 466 18650 18651 18652 18654 18655 18656 18657 18658 18 467 18660 18661 18662 18664 18665 18666 18667 18668 18 468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18681 18682 18694 18695 18696 18697 18698 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 1870	629 639
464 18630 18631 18632 18634 18635 18636 18637 18638 18634 465 18640 18641 18642 18644 18645 18646 18647 18648 18647 466 18650 18651 18652 18654 18655 18656 18657 18658 18 467 18660 18661 18662 18664 18665 18666 18667 18668 18 468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18681 18682 18684 18685 18686 18687 18688 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 <t< td=""><td>639</td></t<>	639
465 18640 18641 18642 18644 18645 18646 18647 18648 18 466 18650 18651 18652 18654 18655 18656 18657 18658 18 467 18660 18661 18662 18664 18665 18666 18667 18668 18 468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18681 18682 18684 18685 18686 18687 18688 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 1872	
466 18650 18651 18652 18654 18655 18656 18657 18658 18 467 18660 18661 18662 18664 18665 18666 18667 18668 18 468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18681 18682 18684 18685 18686 18687 18688 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 18722 18724 18725 18726 18727 18728 18 474 18730 18731 1873	640
467 18660 18661 18662 18664 18665 18666 18667 18668 18 468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18681 18682 18684 18685 18686 18687 18688 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 18722 18724 18725 18726 18727 18728 18 474 18730 18731 18732 18734 18735 18736 18737 18738 18 475 18740 18751 1875	043
468 18670 18671 18672 18674 18675 18676 18677 18678 18 469 18680 18681 18682 18684 18685 18686 18687 18688 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 18722 18724 18725 18726 18727 18728 18 474 18730 18731 18732 18734 18735 18736 18737 18738 18 475 18740 18741 18742 18744 18745 18746 18747 18738 18 476 18750 18751 1875	659
469 18680 18681 18682 18684 18685 18686 18687 18688 18 470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 18722 18724 18725 18726 18727 18728 18 474 18730 18731 18732 18734 18735 18736 18737 18738 18 475 18740 18741 18742 18744 18745 18746 18747 18748 18 476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 1876	669
470 18690 18691 18692 18694 18695 18696 18697 18698 18 471 18700 18701 18702 18704 18705 18706 18707 18708 18 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 18722 18724 18725 18726 18727 18728 18 474 18730 18731 18732 18734 18735 18736 18737 18738 18 475 18740 18741 18742 18744 18745 18746 18747 18738 18 476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 1877	679
471 18700 18701 18702 18704 18705 18706 18707 18708 18708 18712 472 18710 18711 18712 18714 18715 18716 18717 18718 18 473 18720 18721 18722 18724 18725 18726 18727 18728 18 474 18730 18731 18732 18734 18735 18736 18737 18738 18 475 18740 18741 18742 18744 18745 18746 18747 18748 18 476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 18772 18774 18775 18776 18777 18778 18 479 18780 1	689
472 18710 18711 18712 18714 18715 18716 18717 18718 1	699
473 18720 18721 18722 18724 18725 18726 18727 18728 18724 474 18730 18731 18732 18734 18735 18736 18737 18738 18 475 18740 18741 18742 18744 18745 18746 18747 18748 18 476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 18772 18774 18775 18776 18777 18778 18 479 18780 18781 18782 18784 18785 18766 18787 18788 18 480 18790 18791 18792 18794 18795 18796 18797 18798 18 481 18800 18801 1	709
474 18730 18731 18732 18734 18735 18736 18737 18738 18734 475 18740 18741 18742 18744 18745 18746 18747 18748 18 476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 18772 18774 18775 18776 18777 18778 18 479 18780 18781 18782 18784 18785 18766 18777 18778 18 480 18790 18791 18792 18794 18795 18796 18797 18798 18 481 18800 18801 18802 18804 18805 18806 18807 18808 18 482 18810 18811 1	719
475 18740 18741 18742 18744 18745 18746 18747 18748 18 476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 18772 18774 18775 18776 18777 18778 18 479 18780 18781 18782 18784 18795 18766 18787 18788 18 480 18790 18791 18792 18794 18795 18796 18797 18788 18 481 18800 18801 18802 18804 18805 18806 18807 18808 18 482 18810 18811 18812 18814 18815 18816 18817 18818 18 483 18820 18821 1882	729
476 18750 18751 18752 18754 18755 18756 18757 18758 18 477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 18772 18774 18775 18776 18777 18778 18 479 18780 18781 18782 18784 18785 18786 18787 18788 18 480 18790 18791 18792 18794 18795 18796 18797 18798 18 481 18800 18801 18802 18804 18805 18806 18807 18808 18 482 18810 18811 18812 18814 18815 18816 18817 18818 18 483 18820 18821 18822 18824 18825 18826 18827 18828 18	739
477 18760 18761 18762 18764 18765 18766 18767 18768 18 478 18770 18771 18772 18774 18775 18776 18777 18778 18 479 18780 18781 18782 18784 18785 18766 18787 18788 18 480 18790 18791 18792 18794 18795 18796 18797 18798 18 481 18800 18801 18802 18804 18805 18806 18807 18808 18 482 18810 18811 18812 18814 18815 18816 18817 18818 18 483 18820 18821 18822 18824 18825 18826 18827 18828 18	749
478 18770 18771 18772 18774 18775 18776 18777 18778 18784 18785 18786 18787 18788 18788 18784 18785 18786 18787 18788 18 18787 18788 18 18787 18788 18 18 18788 18 18 18787 18788 18 18 18788 18 18 18797 18798 18	759
479 18780 18781 18782 18784 18785 18786 18787 18788 188888 18888 18888 18888	769
480 18790 18791 18792 18794 18795 18796 18797 18798 18 481 18800 18801 18802 18804 18805 18806 18807 18808 18 482 18810 18811 18812 18814 18815 18816 18817 18818 18 483 18820 18821 18822 18824 18825 18826 18827 18828 18	779
481 18800 18801 18802 18804 18805 18806 18807 18808 18 482 18810 18811 18812 18814 18815 18816 18817 18818 18 483 18820 18821 18822 18824 18825 18826 18827 18828 18	789
482 18810 18811 18812 18814 18815 18816 18817 18818 18 483 18820 18821 18822 18824 18825 18826 18827 18828 18	799
483 18820 18821 18822 18824 18825 18826 18827 18828 18	809
	819
484 18830 18831 18832 18834 18835 18836 18837 18838 18	829
	839
485 18840 18841 18842 18844 18845 18846 18847 18848 18	849
486 18850 18851 18852 18854 18855 18856 18857 18858 18	859
487 18860 18861 18862 18864 18865 18866 18867 18868 18	869
488 18870 18871 18872 18874 18875 18876 18877 18878 18	879
489 18880 18881 18882 18884 18885 18886 18887 18888 18	889
490 18890 18891 18892 18894 18895 18896 18897 18898 18	899
491 18900 18901 18902 18904 18905 18906 18907 18908 18	909
492 18910 18911 18912 18914 18915 18916 18917 18918 18	919
	929
494 18930 18931 18932 18934 18935 18936 18937 18938 18	939
495 18940 18941 18942 18944 18945 18946 18947 18948 18	
	949
	949
	959
500 18990 18991 18992 18994 18995 18996 18997 18998 18	959 969

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi- fier	code	time	Low-	High-	Low-	High-	Low-	High-
501	19000	19001	19002	order 19004	order 19005	order 19006	order 19007	order 19008	order 19009
502	19010	19011	19002	19004	19005	19016	19007	19008	19009
503	19020	19021	19012	19014	19015	19026	19017	19018	19019
504	19020	19031	19032	19024	19025	19036	19027	19028	19029
505	19040	19041	19032	19044	19035	19046	19037	19038	19039
506	19050	19051	19052 19062	19054	19055 19065	19056 19066	19057	19058	19059 19069
507 508	19060 19070	19061 19071	19062	19064 19074		19000	19067 19077	19068 19078	19069
509	19070	19071	19072	19074		19076	19077	19078	19079
510	19090	19091	19092	19094		19096	19097	19098	19009
511	19100	19101	19102	19104	19105	19106	19107	19108	19109
512	19110	19111	19112	19114	19115	19116	19117	19118	19119
513	19120	19121	19122	19124	19125	19126	19127	19128	19129
514	19130	19131	19132	19134	19135	19136	19137	19138	19139
515	19140	19141	19142	19144	19145	19146	19147	19148	19149
516	19150	19151	19152	19154	19155	19156	19157	19158	19159
517	19160	19161	19162	19164	19165	19166	19167	19168	19169
518	19170	19171	19172	19174	19175	19176	19177	19178	19179
519	19180	19181	19182	19184	19185	19186	19187	19188	19189
520	19190	19191	19192	19194	19195	19196	19197	19198	19199
521	19200	19201	19202	19204	19205	19206	19207	19208	19209
522	19210	19211	19212	19214	19215	19216	19217	19218	19219
523	19220	19221	19222	19224	19225	19226	19227	19228	19229
524	19230	19231	19232	19234	19235	19236	19237	19238	19239
525	19240	19241	19242	19244	19245	19246	19247	19248	19249
526	19250	19251	19252	19254	19255	19256	19257	19258	19259
527	19260	19261	19262	19264	19265	19266	19267	19268	19269
528	19270	19271	19272	19274	19275	19276	19277	19278	19279
529	19280	19281	19282	19284	19285	19286	19287	19288	19289
530	19290	19291	19292	19294	19295	19296	19297	19298	19299
531	19300	19301	19302	19304	19305	19306	19307	19308	19309
532	19310	19311	19312	19314	19315	19316	19317	19318	19319
533	19320	19321	19322	19324	19325	19326	19327	19328	19329
534	19330	19331	19332	19334	19335	19336	19337	19338	19339
535	19340	19341	19342	19344	19345	19346	19347	19348	19349
536	19350	19351	19352	19354	19355	19356	19357	19358	19359
537	19360	19361	19362	19364	19365	19366	19367	19368	19369
538	19370	19371	19372	19374	19375	19376	19377	19378	19379
539	19380	19381	19382	19384	19385	19386	19387	19388	19389
540	19390	19391	19392	19394	19395	19396	19397	19398	19399
541	19400	19401	19402	19404	19405	19406	19407	19408	19409
542	19410	19411	19412	19414	19415	19416	19417	19418	19419
543	19420	19421	19422	19424	19425	19426	19427	19428	19429
544	19430	19431	19432	19434	19435	19436	19437	19438	19439
545	19440	19441	19442	19444	19445	19446	19447	19448	19449
546	19450	19451	19452	19454	19455	19456	19457	19458	19459
547	19460	19461	19462	19464	19465	19466	19467	19468	19469
548	19470	19471	19472			19476	19477	19478	
549	19480	19481	19482		19485	19486	19487	19488	19489
550	19490	19491	19492	19494		19496	19497	19498	19499

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
551	19500	19501	19502	19504	19505	19506	19507	19508	19509
552	19510	19511	19512	19514	19515	19516	19517	19518	19519
553	19520	19521	19522	19524	19525	19526	19527	19528	19529
554	19530	19531	19532	19534	19535	19536	19537	19538	19539
555	19540	19541	19542	19544	19545	19546	19547	19548	19549
556	19550	19551	19552	19554	19555	19556	19557	19558	19559
557	19560	19561	19562	19564	19565	19566	19567	19568	19569
558	19570	19571	19572	19574	19575	19576	19577	19578	19579
559	19580	19581	19582	19584	19585	19586	19587	19588	19589
560	19590	19591	19592	19594	19595	19596	19597	19598	19599
561	19600	19601	19602	19604	19605	19606	19607	19608	19609
562	19610	19611	19612	19614	19615	19616	19617	19618	19619
563	19620	19621	19622	19624	19625	19626	19627	19628	19629
564	19630	19631	19632	19634	19635	19636	19637	19638	19639
565	19640	19641	19642	19644	19645	19646	19647	19648	19649
566	19650	19651	19652	19654	19655	19656	19657	19658	19659
567	19660	19661	19662	19664	19665	19666	19667	19668	19669
568	19670	19671	19672	19674	19675	19676	19677	19678	19679
569	19680	19681	19682	19684	19685	19686	19687	19688	19689
570	19690	19691	19692	19694	19695	19696	19697	19698	19699
571	19700	19701	19702	19704	19705	19706	19707	19708	19709
572	19710	19711	19712	19714	19715	19716	19717	19718	19719
573	19720	19721	19712	19724	19725	19726	19727	19728	19729
574	19730	19731	19732	19734	19735	19736	19737	19738	19739
575	19740	19741	19732	19744	19745	19746	19747	19748	19749
576	19750	19751	19752	19754	19755	19756	19757	19758	19759
577	19760	19761	19762	19764	19765	19766	19767	19768	19769
578	19770	19771	19772	19774	19775	19776	19777	19778	19779
579	19780	19781	19782	19784	19785	19786	19787	19788	19789
580	19790	19791	19792	19794	19795	19796	19797	19798	19799
581	19800	19801	19802	19804	19805	19806	19807	19808	19809
582	19810	19811	19812	19814	19815	19816	19817	19818	19819
583	19820	19821	19822	19824	19825	19826	19827	19828	19829
584	19830	19831	19832	19834	19835	19836	19837	19838	19839
585	19840	19841	19842	19844	19845	19846	19847	19848	19849
586	19850	19851	19852	19854	19855	19856	19857	19858	19859
587	19860	19861	19862	19864	19865	19866	19867	19868	19869
588	19870	19871	19872	19874	19875	19876	19877	19878	19879
589	19880	19881	19882	19884	19885	19886	19887	19888	19889
590	19890	19891	19892	19894	19895	19896	19897	19898	19899
591	19900	19901	19902	19904	19905	19906	19907	19908	19909
592	19910	19911	19912	19914	19915	19916	19917	19918	19919
593	19920	19921	19922	19924	19925	19926	19927	19928	19929
594	19930	19931	19932	19934	19935	19936	19937	19938	19939
595	19940	19941	19942	19944	19945	19946	19947	19948	19949
596	19950	19951	19952	19954	19955	19956	19957	19958	19959
597	19960	19961	19962	19964	19965	19966	19967	19968	19969
598	19970	19971	19972	19974	19975	19976	19977	19978	19979
599	19980	19981	19982	19984	19985	19986	19987	19988	19989
600	19990	19991	19992	19994	19995	19996	19997	19998	19999

(3) For axis 3 (positioning option)

Data	Positioning										
No.	option										
1	14003	51	14503	101	15003	151	15503	201	16003	251	16503
2	14013	52	14513	102	15013	152	15513	202	16013	252	16513
3	14023	53	14523	103	15023	153	15523	203	16023	253	16523
4	14033	54	14533	104	15033	154	15533	204	16033	254	16533
5	14043	55	14543	105	15043	155	15543	205	16043	255	16543
6	14053	56	14553	106	15053	156	15553	206	16053	256	16553
7	14063	57	14563	107	15063	157	15563	207	16063	257	16563
8	14073	58	14573	108	15073	158	15573	208	16073	258	16573
9	14083	59	14583	109	15083	159	15583	209	16083	259	16583
10	14093	60	14593	110	15093	160	15593	210	16093	260	16593
11	14103	61	14603	111	15103	161	15603	211	16103	261	16603
12	14113	62	14613	112	15113	162	15613	212	16113	262	16613
13	14123	63	14623	113	15123	163	15623	213	16123	263	16623
14	14133	64	14633	114	15133	164	15633	214	16133	264	16633
15	14143	65	14643	115	15143	165	15643	215	16143	265	16643
16	14153	66	14653	116	15153	166	15653	216	16153	266	16653
17	14163	67	14663	117	15163	167	15663	217	16163	267	16663
18	14173	68	14673	118	15173	168	15673	218	16173	268	16673
19	14183	69	14683	119	15183	169	15683	219	16183	269	16683
20	14193	70	14693	120	15193	170	15693	220	16193	270	16693
21	14203	71	14703	121	15203	171	15703	221	16203	271	16703
22	14213	72	14713	122	15213	172	15713	222	16213	272	16713
23	14223	73	14723	123	15223	173	15723	223	16223	273	16723
24	14233	74	14733	124	15233	174	15733	224	16233	274	16733
25	14243	75	14743	125	15243	175	15743	225	16243	275	16743
26	14253	76	14753	126	15253	176	15753	226	16253	276	16753
27	14263	77	14763	127	15263	177	15763	227	16263	277	16763
28	14273	78	14773	128	15273	178	15773	228	16273	278	16773
29	14283	79	14783	129	15283	179	15783	229	16283	279	16783
30	14293	80	14793	130	15293	180	15793	230	16293	280	16793
31	14303	81	14803	131	15303	181	15803	231	16303	281	16803
32	14313	82	14813	132	15313	182	15813	232	16313	282	16813
33	14323	83	14823	133	15323	183	15823	233	16323	283	16823
34	14333	84	14833	134	15333	184	15833	234	16333	284	16833
35	14343	85	14843	135	15343	185	15843	235	16343	285	16843
36	14353	86	14853	136	15353	186	15853	236	16353	286	16853
37	14363	87	14863	137	15363	187	15863	237	16363	287	16863
38	14373	88	14873	138	15373	188	15873	238	16373	288	16873
39	14383	89	14883	139	15383	189	15883	239	16383	289	16883
40	14393	90	14893	140	15393	190	15893	240	16393	290	16893
41	14403	91	14903	141	15403	191	15903	241	16403	291	16903
42	14413	92	14913	142	15413	192	15913	242	16413	292	16913
43	14423	93	14923	143	15423	193	15923	243	16423	293	16923
44	14433	94	14933	144	15433	194	15933	244	16433	294	16933
45	14443	95	14943	145	15443	195	15943	245	16443	295	16943
46	14453	96	14953	146	15453	196	15953	246	16453	296	16953
47	14463	97	14963	147	15463	197	15963	247	16463	297	16963
48	14473	98	14973	148	15473	198	15973	248	16473	298	16973
49	14483	99	14983	149	15483	199	15983	249	16483	299	16983
50	14493	100	14993	150	15493	200	15993	250	16493	300	16993

(3) For axis 3 (positioning option)

Data	Positioning										
No.	option										
301	17003	351	17503	401	18003	451	18503	501	19003	551	19503
302	17013	352	17513	402	18013	452	18513	502	19013	552	19513
303	17023	353	17523	403	18023	453	18523	503	19023	553	19523
304	17033	354	17533	404	18033	454	18533	504	19033	554	19533
305	17043	355	17543	405	18043	455	18543	505	19043	555	19543
306	17053	356	17553	406	18053	456	18553	506	19053	556	19553
307	17063	357	17563	407	18063	457	18563	507	19063	557	19563
308	17073	358	17573	408	18073	458	18573	508	19073	558	19573
309	17083	359	17583	409	18083	459	18583	509	19083	559	19583
310	17093	360	17593	410	18093	460	18593	510	19093	560	19593
311	17103	361	17603	411	18103	461	18603	511	19103	561	19603
312	17113	362	17613	412	18113	462	18613	512	19113	562	19613
313	17123	363	17623	413	18123	463	18623	513	19123	563	19623
314	17133	364	17633	414	18133	464	18633	514	19133	564	19633
315	17143	365	17643	415	18143	465	18643	515	19143	565	19643
316	17153	366	17653	416	18153	466	18653	516	19153	566	19653
317	17163	367	17663	417	18163	467	18663	517	19163	567	19663
318	17173	368	17673	418	18173	468	18673	518	19173	568	19673
319	17183	369	17683	419	18183	469	18683	519	19183	569	19683
320	17193	370	17693	420	18193	470	18693	520	19193	570	19693
321	17203	371	17703	421	18203	471	18703	521	19203	571	19703
322	17213	372	17713	422	18213	472	18713	522	19213	572	19713
323	17223	373	17723	423	18223	473	18723	523	19223	573	19723
324	17233	374	17733	424	18233	474	18733	524	19233	574	19733
325	17243	375	17743	425	18243	475	18743	525	19243	575	19743
326	17253	376	17753	426	18253	476	18753	526	19253	576	19753
327	17263	377	17763	427	18263	477	18763	527	19263	577	19763
328	17273	378	17773	428	18273	478	18773	528	19273	578	19773
329	17283	379	17783	429	18283	479	18783	529	19283	579	19783
330	17293	380	17793	430	18293	480	18793	530	19293	580	19793
331	17303	381	17803	431	18303	481	18803	531	19303	581	19803
332	17313	382	17813	432	18313	482	18813	532	19313	582	19813
333	17323	383	17823	433	18323	483	18823	533	19323	583	19823
334	17333	384	17833	434	18333	484	18833	534	19333	584	19833
335	17343	385	17843	435	18343	485	18843	535	19343	585	19843
336	17353	386	17853	436	18353	486	18853	536	19353	586	19853
337	17363	387	17863	437	18363	487	18863	537	19363	587	19863
338	17373	388	17873	438	18373	488	18873	538	19373	588	19873
339	17383	389	17883	439	18383	489	18883	539	19383	589	19883
340	17393	390	17893	440	18393	490	18893	540	19393	590	19893
341	17403	391	17903	441	18403	491	18903	541	19403	591	19903
342	17413	392	17913	442	18413	492	18913	542	19413	592	19913
343	17423	393	17923	443	18423	493	18923	543	19423	593	19923
344	17433	394	17933	444	18433	494	18933	544	19433	594	19933
345	17443	395	17943	445	18443	495	18943	545	19443	595	19943
346	17453	396	17953	446	18453	496	18953	546	19453	596	19953
347	17463	397	17963	447	18463	497	18963	547	19463	597	19963
348	17473	398	17973	448	18473	498	18973	548	19473	598	19973
349	17483	399	17983	449	18483	499	18983	549	19483	599	19983
350	17493	400	17993	450	18493	500	18993	550	19493	600	19993

Posi- Data tioning			Dwell	Command speed			oning ress	Arc data		
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-	
	fier			order	order	order	order	order	order	
1	20000	20001	20002	20004	20005	20006	20007	20008	20009	
2	20010	20011	20012	20014	20015	20016	20017	20018	20019	
3	20020	20021	20022	20024	20025	20026	20027	20028	20029	
4	20030	20031	20032	20034	20035	20036	20037	20038	20039	
5	20040	20041	20042	20044	20045	20046	20047	20048	20049	
6	20050	20051	20052	20054	20055	20056	20057	20058	20059	
7	20060	20061	20062	20064	20065	20066	20067	20068	20069	
8	20070	20071	20072	20074	20075	20076	20077	20078	20079	
9	20080	20081	20082	20084	20085	20086	20087	20088	20089	
10	20090	20091	20092	20094	20095	20096	20097	20098	20099	
11	20100	20101	20102	20104	20105	20106	20107	20108	20109	
12	20110	20111	20112	20114	20115	20116	20117	20118	20119	
13	20120	20121	20122	20124	20125	20126	20127	20128	20129	
14	20130	20131	20132	20134	20135	20136	20137	20138	20139	
15	20140	20141	20142	20144	20145	20146	20147	20148	20149	
16	20150	20151	20152	20154	20155	20156	20157	20158	20159	
17	20160	20161	20162	20164	20165	20166	20167	20168	20169	
18	20170	20171	20172	20174	20175	20176	20177	20178	20179	
19	20180	20181	20182	20184	20185	20186	20187	20188	20189	
20	20190	20191	20192	20194	20195	20196	20197	20198	20199	
21	20200	20201	20202	20204	20205	20206	20207	20208	20209	
22	20210	20211	20212	20214	20215	20216	20217	20218	20219	
23	20220	20221	20222	20224	20225	20226	20227	20228	20229	
24	20230	20221	20232	20224	20235	20236	20237	20238	20239	
25	20230	20231	20232	20234	20245	20246	20247	20248	20249	
26	20250	20251	20252	20254	20255	20256	20257	20258	20259	
27	20260	20261	20262	20264	20265	20266	20267	20268	20269	
28	20270	20271	20272	20274	20275	20276	20277	20278	20279	
29	20280	20281	20282	20284	20285	20286	20287	20288	20289	
30	20290	20291	20292	20294	20295	20296	20297	20298	20299	
31	20300	20301	20302	20304	20305	20306	20307	20308	20309	
32	20310	20311	20312	20314	20315	20316	20317	20318	20319	
33	20320	20321	20322	20324	20325	20326	20327	20328	20329	
34	20330	20331	20332	20334	20335	20336	20337	20338	20339	
35	20340	20341	20342	20344	20345	20346	20347	20348	20349	
36	20350	20351	20352	20354	20355	20356	20357	20358	20359	
37	20360	20361	20362	20364	20365	20366	20367	20368	20369	
38	20370	20371	20372	20374	20375	20376	20377	20378	20379	
39	20380	20381	20382	20384	20385	20386	20387	20388	20389	
40	20390	20391	20392	20394	20395	20396	20397	20398	20399	
41	20400	20401	20402	20404	20405	20406	20407	20408	20409	
42	20410	20411	20412	20414	20415	20416	20417	20418	20419	
43	20420	20421	20422	20424	20425	20426	20427	20428	20429	
44	20430	20431	20432	20434	20435	20436	20437	20438	20439	
45	20440	20441	20442	20444	20445	20446	20447	20448	20449	
46	20450	20451	20452	20454	20455	20456	20457	20458	20459	
47	20460	20461	20462	20464	20465	20466	20467	20468	20469	
48	20470	20471	20472		20475	20476	20477	20478		
49	20480	20481	20482		20485	20486	20487	20488		
50	20490	20491	20492	20494	20495	20496	20497	20498		

Data	Posi- tioning	М	Dwell	Command speed		Positi add	oning	Arc data	
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
51	20500	20501	20502	20504	20505	20506	20507	20508	20509
52	20510	20511	20512	20514	20515	20516	20517	20518	20519
53	20520	20521	20522	20524	20525	20526	20527	20528	20529
54	20530	20531	20532	20534	20535	20536	20537	20538	20539
55	20540	20541	20542	20544	20545	20546	20547	20548	20549
56	20550	20551	20552	20554	20555	20556	20557	20558	20559
57	20560	20561	20562	20564	20565	20566	20567	20568	20569
58	20570	20571	20572	20574	20575	20576	20577	20578	20579
59	20580	20581	20582	20584	20585	20586	20587	20588	20589
60	20590	20591	20592	20594	20595	20596	20597	20598	20599
61	20600	20601	20602	20604	20605	20606	20607	20608	20609
62	20610	20611	20612	20614	20615	20616	20617	20618	20619
63	20620	20621	20622	20624	20625	20626	20627	20628	20629
64	20630	20631	20632	20634	20635	20636	20637	20638	20639
65	20640	20641	20642	20644	20645	20646	20647	20648	20649
66	20650	20651	20652	20654	20655	20656	20657	20658	20659
67	20660	20661	20662	20664	20665	20666	20667	20668	20669
68	20670	20671	20672	20674	20675	20676	20677	20678	20679
69	20680	20681	20682	20684	20685	20686	20687	20688	20689
70	20690	20691	20692	20694	20695	20696	20697	20698	20699
71	20700	20701	20702	20704	20705	20706	20707	20708	20709
72	20710	20711	20712	20714	20715	20716	20717	20718	20719
73	20720	20721	20722	20724	20725	20726	20727	20728	20729
74	20730	20731	20732	20734	20735	20736	20737	20738	20739
75	20740	20741	20742	20744	20745	20746	20747	20748	20749
76	20750	20751	20752	20754	20755	20756	20757	20758	20759
77	20760	20761	20762	20764	20765	20766	20767	20768	20769
78	20770	20771	20772	20774	20775	20776	20777	20778	20779
79	20780	20781	20782	20784	20785	20786	20787	20788	20789
80	20790	20791	20792	20794	20795	20796	20797	20798	20799
81	20800	20801	20802	20804	20805	20806	20807	20808	20809
82	20810	20811	20812	20814	20815	20816	20817	20818	20819
83	20820	20821	20822	20824	20825	20826	20827	20828	20829
84	20830	20831	20832	20834	20835	20836	20837	20838	20839
85	20840	20841	20842	20844			20847	20848	20849
86	20850	20851	20852	20854	20855		20857	20858	20859
87	20860	20861	20862	20864	20865		20867	20868	20869
88	20870	20871	20872	20874	20875	20876	20877	20878	20879
89	20880	20881	20882	20884	20885	20886	20887	20888	20889
90	20890	20891	20892	20894	20895	20896	20897	20898	20899
91	20900	20901	20902	20904	20905	20906	20907	20908	20909
92	20910	20911	20912	20914	20915	20916	20917	20918	20919
93	20920	20921	20922	20924	20925	20926	20927	20928	20929
94	20930	20931	20932	20934	20935	20936	20937	20938	20939
95	20940	20941	20942	20944	20945	20946	20947	20948	20949
96	20950	20951	20952	20954	20955		20957	20958	20959
97	20960	20961	20962	20964	20965	20966	20967	20968	20969
98	20970	20971	20972	20974	20975	20976	20977	20978	20979
99	20980	20981	20982	20984	20985	20986	20987	20988	20989
100	20990	20991	20992	20994	20995	20996	20997	20998	20999
.00	_5550	_0001		_55554	_3000	_3000	_3007		_5555

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi- fier	code	time	Low-	High-	Low-	High- order	Low-	High-
101	21000	21001	21002	order 21004	order 21005	order 21006	21007	order 21008	order 21009
102	21010	21011	21012	21014	21015	21016	21017	21018	21019
103	21010	21021	21012	21014	21015	21010	21027	21010	21019
103	21020	21021	21022	21024	21025		21027	21028	21029
						21036			
105	21040	21041	21042	21044	21045	21046	21047	21048	21049
106	21050	21051	21052	21054	21055	21056	21057	21058	21059
107	21060	21061	21062	21064	21065	21066	21067	21068	21069
108 109	21070	21071	21072	21074		21076	21077	21078	21079
	21080	21081	21082	21084	21085	21086	21087	21088	21089
110	21090	21091	21092	21094	21095	21096	21097	21098	21099
111	21100	21101	21102	21104	21105	21106	21107	21108	21109
112	21110	21111	21112	21114	21115	21116	21117	21118	21119
113	21120	21121	21122	21124	21125	21126	21127	21128	21129
114	21130	21131	21132	21134	21135	21136	21137	21138	21139
115	21140	21141	21142	21144	21145	21146	21147	21148	21149
116	21150	21151	21152	21154	21155	21156	21157	21158	21159
117	21160	21161	21162	21164	21165	21166	21167	21168	21169
118	21170	21171	21172	21174	21175	21176	21177	21178	21179
119	21180	21181	21182	21184	21185	21186	21187	21188	21189
120	21190	21191	21192	21194	21195	21196	21197	21198	21199
121	21200	21201	21202	21204	21205	21206	21207	21208	21209
122	21210	21211	21212	21214	21215	21216	21217	21218	21219
123	21220	21221	21222	21224	21225	21226	21227	21228	21229
124	21230	21231	21232	21234	21235	21236	21237	21238	21239
125	21240	21241	21242	21244	21245	21246	21247	21248	21249
126	21250	21251	21252	21254	21255	21256	21257	21258	21259
127	21260	21261	21262	21264	21265	21266	21267	21268	21269
128	21270	21271	21272	21274	21275	21276	21277	21278	21279
129	21280	21281	21282	21284	21285	21286	21287	21288	21289
130	21290	21291	21292	21294	21295	21296	21297	21298	21299
131	21300	21301	21302	21304	21305	21306	21307	21308	21309
132	21310	21311	21312	21314	21315	21316	21317	21318	21319
133	21320	21321	21322	21324	21325	21326	21327	21328	21329
134	21330	21331	21332	21334	21335	21336	21337	21338	21339
135	21340	21341		21344				21348	21349
136	21350	21351	21352	21354	21355	21356	21357	21358	21359
137	21360	21361		21364					21369
138	21370	21371		21374			21377		21379
139	21380	21381	21382		21385		21387		21389
140	21390		21392					21398	
141	21400	21401		21404					21409
142	21410	21411		21414			21417		21419
143	21420	21421		21424			21427		21429
144	21430	21431		21434			21437	21438	
145	21440			21444				21448	
146	21450	21451		21454					21459
147	21460	21461		21464			21467	21468	
148	21470	21471	21402				21407	21408	
149	21470	21471		21474				21478	
							21487		
150	21490	21491	21492	21494	21495	21496	21497	21498	21499

	ioning	M	Dwell	spe	mand eed	addi	oning ress	Arc	data
	denti- fier	code	time	Low-	High-	Low-	High- order	Low-	High-
151 0		21501	01500	order	order	order		order	order
	21500	21501	21502 21512	21504 21514	21505 21515	21506 21516	21507 21517	21508	21509
	21510	21511						21518	21519
	21520	21521	21522	21524	21525	21526	21527	21528	21529
	21530	21531	21532	21534	21535	21536	21537	21538	21539
	21540	21541	21542	21544	21545	21546	21547	21548	21549
	21550	21551	21552	21554	21555	21556	21557	21558	21559
	21560	21561	21562	21564	21565	21566	21567	21568	21569
	21570	21571	21572	21574	21575	21576	21577	21578	21579
	21580	21581	21582	21584	21585	21586	21587	21588	21589
	21590	21591	21592	21594	21595	21596	21597	21598	21599
	21600	21601	21602	21604	21605	21606	21607	21608	21609
	21610	21611	21612	21614	21615	21616	21617	21618	21619
	21620	21621	21622	21624	21625	21626	21627	21628	21629
_	21630	21631	21632	21634	21635	21636	21637	21638	21639
	21640	21641	21642	21644	21645	21646	21647	21648	21649
	21650	21651	21652	21654	21655	21656	21657	21658	21659
	21660	21661	21662	21664	21665	21666	21667	21668	21669
	21670	21671	21672	21674	21675	21676	21677	21678	21679
	21680	21681	21682	21684	21685	21686	21687	21688	21689
	21690	21691	21692	21694	21695	21696	21697	21698	21699
171 2	21700	21701	21702	21704	21705	21706	21707	21708	21709
172 2	21710	21711	21712	21714	21715	21716	21717	21718	21719
	21720	21721	21722	21724	21725	21726	21727	21728	21729
174 2	21730	21731	21732	21734	21735	21736	21737	21738	21739
175 2	21740	21741	21742	21744	21745	21746	21747	21748	21749
176 2	21750	21751	21752	21754	21755	21756	21757	21758	21759
177 2	21760	21761	21762	21764	21765	21766	21767	21768	21769
178 2	21770	21771	21772	21774	21775	21776	21777	21778	21779
	21780	21781	21782	21784	21785	21786	21787	21788	21789
180 2	21790	21791	21792	21794	21795	21796	21797	21798	21799
181 2	21800	21801	21802	21804	21805	21806	21807	21808	21809
182 2	21810	21811	21812	21814	21815	21816	21817	21818	21819
183 2	21820	21821	21822	21824	21825	21826	21827	21828	21829
184 2	21830	21831	21832	21834	21835	21836	21837	21838	21839
185 2	21840	21841	21842	21844	21845	21846	21847	21848	21849
186 2	21850	21851	21852	21854	21855	21856	21857	21858	21859
187 2	21860	21861	21862	21864	21865	21866	21867	21868	21869
188 2	21870	21871	21872	21874	21875	21876	21877	21878	21879
189 2	21880	21881	21882	21884	21885	21886	21887	21888	21889
190 2	21890	21891	21892	21894	21895	21896	21897	21898	21899
191 2	21900	21901	21902	21904	21905	21906	21907	21908	21909
192 2	21910	21911	21912	21914	21915	21916	21917	21918	21919
193 2	21920	21921	21922	21924	21925	21926	21927	21928	21929
194 2	21930	21931	21932	21934	21935	21936	21937	21938	21939
195 2	21940	21941	21942	21944	21945	21946	21947	21948	21949
196 2	21950	21951	21952	21954	21955	21956	21957	21958	21959
197 2	21960	21961	21962	21964	21965	21966	21967	21968	21969
198 2	21970	21971	21972	21974	21975	21976	21977	21978	21979
199 2	21980	21981	21982	21984	21985	21986	21987	21988	21989
200 2	21990	21991	21992	21994	21995	21996	21997	21998	21999

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
201	22000	22001	22002	22004	22005	22006	22007	22008	22009
202	22010	22011	22012	22014	22015	22016	22017	22018	22019
203	22020	22021	22022	22024	22025	22026	22027	22028	22029
204	22030	22031	22032	22034	22035	22036	22037	22038	22039
205	22040	22041	22042	22044	22045	22046	22047	22048	22049
206	22050	22051	22052	22054	22055	22056	22057	22058	22059
207	22060	22061	22062	22064	22065	22066	22067	22068	22069
208	22070	22071	22072	22074	22075	22076	22077	22078	22079
209	22080	22081	22082	22084	22085	22086	22087	22088	22089
210	22090	22091	22092	22094	22095	22096	22097	22098	22099
211	22100	22101	22102	22104	22105	22106	22107	22108	22109
212	22110	22111	22112	22114	22115	22116	22117	22118	22119
213	22120	22121	22122	22124	22125	22126	22127	22128	22129
214	22130	22131	22132	22134	22135	22136	22137	22138	22139
215	22140	22141	22142	22144	22145	22146	22147	22148	22149
216	22150	22151	22152	22154	22155	22156	22157	22158	22159
217	22160	22161	22162	22164	22165	22166	22167	22168	22169
218	22170	22171	22172	22174	22175	22176	22177	22178	22179
219	22180	22181	22182	22184	22185	22186	22187	22188	22189
220	22190	22191	22192	22194	22195	22196	22197	22198	22199
221	22200	22201	22202	22204	22205	22206	22207	22208	22209
222	22210	22211	22212	22214	22215	22216	22217	22218	22219
223	22220	22221	22222	22224	22225	22226	22227	22228	22229
224	22230	22231	22232	22234	22235	22236	22237	22238	22239
225	22240	22241	22242	22244	22245	22246	22247	22248	22249
226	22250	22251	22252	22254	22255	22256	22257	22258	22259
227	22260	22261	22262	22264	22265	22266	22267	22268	22269
228	22270	22271	22272	22274	22275	22276	22277	22278	22279
229	22280	22281	22282	22284	22285	22286	22287	22288	22289
230	22290	22291	22292	22294	22295	22296	22297	22298	22299
231	22300	22301	22302	22304	22305	22306	22307	22308	22309
232	22310	22311	22312	22314	22315	22316	22317	22318	22319
233	22320	22321	22322	22324	22325	22326	22327	22328	22329
234	22330	22331	22332	22334	22335	22336	22337	22338	22339
235	22340		22342		22345	22346		22348	
236	22350	22351		22354			22357		22359
237	22360			22364			22367		22369
238	22370	22371		22374	22375	22376			22379
239	22380	22381		22384	22385	22386		22388	
240	22390	22391	22392		22395	22396		22398	
241	22400	22401		22404		22406			22409
242	22410	22411		22414		22416	22417	22418	
243	22420	22421		22424		22426	22427	22428	
244	22430	22431		22434		22436	22437	22438	
245	22440			22444			22447	22448	
246	22450			22454			22457	22458	
247	22460	22461		22464		22466		22468	
248	22470	22471	22472		22475	22476	22477	22478	
249	22480	22481		22484		22486		22488	
	22490		22492		22495			22498	
250	<u> </u>	42 4 91	<u> </u>	44444	4443	22496	4441	<u> </u>	44499

Data	Posi-	M	Durall		mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	spe Low-	High-	add Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
251	22500	22501	22502	22504	22505	22506	22507	22508	22509
252	22510	22511	22512	22514	22515	22516	22517	22518	22519
253	22520	22521	22522	22524	22525	22526	22527	22528	22529
254	22530	22531	22532	22534	22535	22536	22537	22538	22539
255	22540	22541	22542	22544	22545	22546	22547	22548	22549
256	22550	22551	22552	22554	22555	22556	22557	22558	22559
257	22560	22561	22562	22564	22565	22566	22567	22568	22569
258	22570	22571	22572	22574	22575	22576	22577	22578	22579
259	22580	22581	22582	22584	22585	22586	22587	22588	22589
260	22590	22591	22592	22594	22595	22596	22597	22598	22599
261	22600	22601	22602	22604	22605	22606	22607	22608	22609
262	22610	22611	22612	22614	22615	22616	22617	22618	22619
263	22620	22621	22622	22624	22625	22626	22627	22628	22629
264	22630	22631	22632	22634	22635	22636	22637	22638	22639
265	22640	22641	22642	22644	22645	22646	22647	22648	22649
266	22650	22651	22652	22654	22655	22656	22657	22658	22659
267	22660	22661	22662	22664	22665	22666	22667	22668	22669
268	22670	22671	22672	22674	22675	22676	22677	22678	22679
269	22680	22681	22682	22684	22685	22686	22687	22688	22689
270	22690	22691	22692	22694	22695	22696	22697	22698	22699
271	22700	22701	22702	22704	22705	22706	22707	22708	22709
272	22710	22711	22712	22714	22715	22716	22717	22718	22719
273	22720	22721	22722	22724	22725	22726	22727	22728	22729
274	22730	22731	22732	22734	22735	22736	22737	22738	22739
275	22740	22741	22742	22744	22745	22746	22747	22748	22749
276	22750	22751	22752	22754	22755	22756	22757	22758	22759
277	22760	22761	22762	22764	22765	22766	22767	22768	22769
278	22770	22771	22772	22774	22775	22776	22777	22778	22779
279	22780	22781	22782	22784	22785	22786	22787	22788	22789
280	22790	22791	22792	22794	22795	22796	22797	22798	22799
281	22800	22801	22802	22804	22805	22806	22807	22808	22809
282	22810	22811	22812	22814	22815	22816	22817	22818	22819
283	22820	22821	22822	22824	22825	22826	22827	22828	22829
284	22830	22831	22832	22834	22835	22836	22837	22838	22839
285	22840		22842			22846		22848	22849
	22850	22851	22852	22854	22855	22856		22858	22859
286 287	22860		22862	22864	22865			22868	22869
								22878	22879
288 289	22870 22880	22871 22881	22872 22882	22874 22884	22875 22885	22876 22886	22877 22887	22888	22889
						22896		22898	22899
290	22890	22891	22892	22894	22895		22897		
291	22900	22901	22902	22904	22905	22906		22908 22918	22909 22919
292	22910	22911	22912 22922	22914	22915	22916	22917 22927	22918	22919
293	22920	22921	22922	22924	22925 22935	22926		22928	
294	22930	22931		22934		22936	22937	22948	22939
295	22940	22941	22942	22944	22945	22946	22947		22949
296	22950	22951	22952	22954	22955	22956		22958	22959
297	22960	22961	22962		22965	22966	22967	22968	22969
298	22970	22971	22972	22974	22975	22976	22977	22978	22979
299	22980	22981	22982		22985	22986	22987	22988	22989
300	22990	22991	22992	22994	22995	22996	22997	22998	22999

No. identifier tome tome High-order order	Data	Posi- tioning	М	Dwell		mand ed		oning	Arc	data
fier Let order order order order order order 301 23000 23001 23001 23010 23011 23012 23014 23015 23016 23017 23028 23024 23024 23025 23026 23027 23028 23029 23028 23037 23038 23039 23038 23037 23038 23039 23036 23037 23038 23039 23038 23037 23038 23039 23048 23056 23057 23038 23089 23080 23061 23062 23044 23045 23066 23067 23088 23089 <td></td> <td></td> <td></td> <td>-</td> <td></td> <td></td> <td></td> <td></td> <td>Low-</td> <td>High-</td>				-					Low-	High-
301 23011 23012 2		fier			order		order			
300 23021 23022 23024 23026 23026 23027 23028 23039 23036 23037 23038 23039 23039 23036 23037 23038 23039 23039 23039 23039 23036 23036 23040 23046 23046 23046 23066 23067 23068 23069 23069 23067 23077 23078 23079 23077 23078 23079 23077 23078 23080 2		23000								
304 23030 23031 23032 23034 23034 23036 23037 23038 23039 306 23050 23051 23052 23054 23056 23056 23057 23058 23059 307 23060 23061 23062 23064 23066 23067 23078 23079 308 23080 23081 23082 23084 23086 23077 23078 23089 309 23091 23092 23094 23096 23097 23089 23099 310 23101 23102 23104 23116 23117 23118 23119 311 23102 23121 23142 23146 23146 23147 23188 23189 311 23131 23122 23144 23146 23146 23147 23148 23149 314 23151 23151 23142 23146 23146 23147 23188 23149 318 <td>302</td> <td>23010</td> <td>23011</td> <td>23012</td> <td>23014</td> <td>23015</td> <td>23016</td> <td>23017</td> <td>23018</td> <td>23019</td>	302	23010	23011	23012	23014	23015	23016	23017	23018	23019
3040 23041 23042 23044 23045 23046 23047 23048 23054 23054 23056 23057 23068 23059 23058 23057 23068 23069 23069 23069 23069 23069 23069 23069 23079 23078 23078 23078 23078 23078 23089 23089 23080 23080 23080 23089 23189 23189 23189 23189 23189 23189 23189 23189 23189 23189 23189 23189 23189 23189 23189	303	23020	23021	23022	23024	23025	23026	23027	23028	23029
306 23050 23051 23052 23054 23056 23057 23060 23061 23062 23064 23065 23066 23067 23078 23079 23079 23079 23079 23079 23079 23079 23079 23079 23080 23081 23082 23084 23086 23087 23089 23089 310 23090 23091 23092 23094 23096 23097 23089 23099 311 23100 23101 23110 23110 23110 23110 23110 23110 23110 23110 23110 23110 23110 23131 23132 23134 23136 23137 23188 23139 313 23140 23141 23142 23144 23142 23146 23147 23148 23149 23149 23149 23149 23140 23141 23142 23149 23149 23149 23149 23149 23149 23149 23149	304	23030	23031	23032	23034	23035	23036	23037	23038	23039
307 23060 23061 23062 23064 23065 23067 23078 23079 23074 23072 23074 23075 23076 23077 23078 23079 309 23080 23081 23082 23084 23085 23086 23087 23088 23089 310 23090 23091 23092 23094 23095 23096 23077 23088 23089 311 23100 23111 23112 23112 23142 23145 23145 23146 23147 23118 23139 313 23120 23121 23122 23124 23155 23162 23138 23139 314 23140 23141 23142 23145 23145 23146 23147 23148 23159 317 23160 23171 23172 23172 23179 23178 23159 317 23160 23191 23192 23144 23165 23166 <	305	23040	23041	23042	23044	23045	23046	23047	23048	23049
308 23070 23071 23072 23074 23075 23076 23077 23078 23081 309 23080 23081 23082 23084 23085 23086 23087 23088 23089 310 23090 23091 23092 23094 23095 23096 23097 23088 23089 311 23100 23110 23110 23110 23110 23110 23110 23110 23110 23110 23110 23110 23112 23122 23124 23125 23126 23127 23138 23139 314 23140 23141 23142 23145 23155 23166 23147 23148 23169 316 23170 23171 23172 23142 23155 23166 23147 23158 23159 317 23160 23181 23182 23184 23165 23166 23177 23178 23159 317 23212 <	306	23050	23051	23052	23054	23055	23056	23057	23058	23059
308 23080 23081 23082 23084 23085 23086 23087 23089 23089 23098 23089 23089 23089 23089 23089 23089 23089 23089 23089 23089 23089 23089 23140 23140 23110 23110 23111 23112 23121 23121 23121 23132 23132 23133 23130 23134 23132 23148 23148 23148 23148 23149 23149 23149 23149 23149 23149 23149 23179 23178 23179 23178 23179 23178 23179 23178 23179 23178 23179 23178 23179 23178 23179 23178 23179 23179 23178 2	307	23060	23061	23062	23064	23065	23066	23067	23068	23069
3010 23090 23091 23092 23094 23095 23096 23097 23098 23099 311 23100 23101 23102 23104 23105 23106 23107 23108 23109 312 23110 23111 23112 23124 23125 23126 23127 23128 23139 314 23130 23131 23132 23134 23135 23136 23137 23138 23139 315 23140 23142 23142 23145 23145 23145 23146 23146 23147 23148 23169 317 23160 23161 23162 23144 23145 23165 23167 23188 23169 318 23170 23171 23172 23172 23178 23179 23178 23179 23178 23179 23188 23189 319 23190 23211 23212 23241 23215 23262 23277	308	23070	23071	23072	23074	23075	23076	23077	23078	23079
311 23100 23101 23102 23104 23105 23106 23107 23118 23119 312 23110 23111 23112 23114 23115 23116 23117 23118 23139 313 23120 23121 23122 23124 23125 23126 23127 23128 23139 314 23130 23131 23132 23134 23135 23136 23137 23138 23139 315 23160 23161 23162 23164 23165 23166 23167 23168 23169 318 23160 23161 23162 23144 23165 23166 23167 23188 23169 318 23160 23181 23182 23184 23185 23166 23177 23188 23189 3210 23201 23201 23202 23204 23205 23261 23277 23288 23299 322 23201 23	309	23080	23081	23082	23084	23085	23086	23087	23088	23089
311 23110 23111 23112 23124 23125 23126 23127 23128 23129 23124 23125 23126 23127 23128 23139 23131 23132 23134 23136 23137 23138 23139 315 23140 23141 23142 23144 23145 23146 23147 23148 23149 316 23150 23151 23152 23154 23156 23167 23168 23169 317 23160 23161 23162 23144 23165 23167 23178 23189 318 23170 23171 23172 23174 23176 23177 23178 23189 320 23190 23201 23202 23244 23265 23267 23218 23218 23218 23218 23218 23218 23221 23228 23241 23224 23226 23227 23238 23232 23232 23232 23232 23232 <td>310</td> <td>23090</td> <td>23091</td> <td>23092</td> <td>23094</td> <td>23095</td> <td>23096</td> <td>23097</td> <td>23098</td> <td>23099</td>	310	23090	23091	23092	23094	23095	23096	23097	23098	23099
313 23120 23121 23122 23124 23126 23137 23138 23139 314 23130 23131 23132 23134 23136 23137 23138 23139 315 23140 23141 23142 23144 23146 23147 23148 23149 316 23160 23161 23162 23164 23165 23167 23178 23178 23177 23178 23168 23167 23168 23169 23177 23178 23179 23178 23188 23189 23219 23219 23218 23219 232189 23219 23228 23228	311	23100	23101	23102	23104	23105	23106	23107	23108	23109
314 23130 23131 23132 23134 23144 23144 23146 23147 23148 23149 316 23150 23151 23152 23154 23155 23166 23167 23168 23169 317 23160 23161 23162 23164 23165 23167 23178 23178 23176 23177 23178 23179 318 23170 23171 23172 23174 23185 23187 23188 23189 320 23190 23191 23192 23194 23196 23197 23188 23189 321 23200 23211 23222 23224 23226 23267 23288 23299 322 23201 23211 23222 23224 23226 23227 23288 23293 322 23201 23211 23222 23224 23226 23227 23238 23239 322 23201 23221 232	312	23110	23111	23112	23114	23115	23116	23117	23118	23119
315 23140 23141 23142 23144 23145 23146 23147 23148 23148 23154 23155 23157 23158 23158 23159 317 23160 23161 23162 23164 23165 23167 23177 23178 23178 23177 23178 23178 23177 23178 23178 23177 23178 23188 23188 23189 23181 23189 23189 23190 23191 23192 23194 23196 23197 23188 23189 320 23190 23191 23122 23242 23242 23262 23262 23262 23262 23262 23222 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23242 23248 23249 23248 23248 23248 23248 23248 23248 23248	313	23120	23121	23122	23124	23125	23126	23127	23128	23129
316 23150 23151 23152 23154 23155 23166 23167 23168 23168 23163 23168 23167 23168 23168 23168 23168 23168 23168 23168 23168 23168 23168 23168 23178 23178 23178 23178 23178 23178 23178 23178 23178 23178 23178 23178 23178 23188 23188 23188 23188 23188 23188 23188 23188 23188 23188 23188 23188 23189 23199 23191 23191 23191 23191 23191 23191 23191 23191 23191 23212 23202 23204 23205 23206 23207 23208 23208 23208 23208 23228 23228 23228 23228 23228 23228 23228 23228 23228 23236 23237 23238 23238 23238 23238 23238 23238 23238 2	314	23130	23131	23132	23134	23135	23136	23137	23138	23139
317 23160 23161 23162 23164 23165 23166 23167 23178 23178 23178 23178 23178 23178 23178 23178 23178 23178 23178 23188 23188 23188 23188 23188 23188 23188 23188 23188 23189 23190 23191 23192 23194 23195 23196 23197 23198 23199 321 23200 23201 23201 23202 23242 23205 23206 23277 23282 23293 322 23201 23211 23212 23242 23225 23266 23277 23282 23293 324 23230 23231 23232 23242 23255 23266 23277 23282 23284 324 23250 23251 23252 23264 23265 23266 23267 23288 23289 324 23250 23261 23262 23244 23255 <td>315</td> <td>23140</td> <td>23141</td> <td>23142</td> <td>23144</td> <td>23145</td> <td>23146</td> <td>23147</td> <td>23148</td> <td>23149</td>	315	23140	23141	23142	23144	23145	23146	23147	23148	23149
318 23170 23171 23172 23174 23175 23176 23177 23180 23181 23182 23184 23185 23186 23187 23188 23189 320 23190 23191 23192 23194 23195 23196 23197 23198 23199 321 23200 23201 23202 23204 23205 23206 23207 23208 23209 322 23201 23212 23222 23224 23225 23266 23277 23282 23229 324 23230 23231 23232 23242 23225 23266 23277 23282 23283 325 23240 23241 23242 23242 23255 23266 23267 23268 23288 23289 327 23260 23261 23262 23244 23265 23266 23267 23288 23289 328 23290 23291 23292 23244 <	316	23150	23151	23152	23154	23155	23156	23157	23158	23159
319 23180 23181 23182 23184 23185 23186 23187 23188 23189 320 23190 23191 23192 23194 23195 23196 23197 23198 23199 321 23200 23201 23202 23204 23205 23206 23207 23208 23209 322 23210 23211 23212 23224 23225 23226 23277 23282 23293 324 23230 23231 23222 23244 23245 23246 23247 23288 23293 325 23240 23241 23242 23244 23255 23266 23277 23288 23269 327 23260 23261 23262 23244 23265 23266 23267 23288 23269 3230 23290 23291 23292 23294 23295 23266 23277 23288 23399 331 23300 23	317	23160	23161	23162	23164	23165	23166	23167	23168	23169
320 23190 23191 23192 23194 23195 23196 23197 23198 23199 321 23200 23201 23202 23204 23205 23206 23207 23208 23209 322 23210 23211 23212 23214 23215 23216 23217 23218 23219 323 23220 23231 23232 23234 23235 23236 23237 23282 23239 325 23240 23241 23242 23244 23245 23266 23267 23288 23259 327 23260 23261 23262 23264 23265 23266 23267 23288 23269 328 23270 23281 23282 23284 23285 23286 23287 23288 23289 330 23290 23291 23292 23294 23355 23366 23377 23388 23399 331 23300 233	318	23170	23171	23172	23174	23175	23176	23177	23178	23179
321 23200 23201 23202 23204 23205 23206 23207 23208 23209 322 23210 23211 23212 23214 23215 23216 23217 23218 23219 323 23220 23221 23222 23224 23225 23226 2327 2328 23229 324 23230 23231 23232 23244 23245 23260 23277 23288 23299 326 23250 23251 23252 23264 23265 23266 23267 23268 23269 328 23270 23271 23272 23274 23275 23276 23277 23278 23289 330 23290 23291 23292 23294 23295 23286 23287 23288 23289 331 23300 23301 23302 23304 23305 23366 23297 23288 23289 331 23300 23301	319	23180	23181	23182	23184	23185	23186	23187	23188	23189
322 23210 23211 23212 23214 23215 23216 23217 23218 23219 323 23220 23221 23222 23224 23225 23226 23227 23228 23239 324 23230 23241 23242 23244 23245 23246 23247 23248 23249 326 23250 23251 23252 23254 23255 23256 23257 23268 23259 327 23260 23261 23262 23244 23265 23266 23267 23268 23269 328 23270 23271 23272 23242 23285 23266 23277 23278 23289 330 23290 23291 23292 23294 23295 23296 23297 23298 23299 331 23300 23301 23302 23344 23315 23316 23317 23318 23319 3323 23311 23	320	23190	23191	23192	23194	23195	23196	23197	23198	23199
323 23220 23221 23222 23224 23235 23236 23237 23238 23239 324 23230 23241 23242 23244 23245 23246 23247 23248 23239 325 23240 23241 23242 23244 23245 23266 23247 23248 23249 326 23250 23261 23262 23264 23265 23266 23267 23268 23269 328 23270 23271 23272 23274 23275 23276 23277 23278 23279 329 23280 23281 23282 23284 23285 23286 23297 23288 23289 331 23300 23301 23302 23304 23305 23306 23377 23388 23399 331 23300 23311 23312 23314 23315 23316 23317 23388 23399 334 23330 233	321	23200	23201	23202	23204	23205	23206	23207	23208	23209
324 23230 23231 23232 23244 23245 23246 23247 23248 23249 23246 23247 23248 23249 23249 23249 23249 23249 23249 23249 23249 23249 23249 23249 23249 23249 23249 23249 23248 23247 23248 23259 23250 23250 23250 23260 23261 23262 23244 23255 23266 23267 23268 23269 23279 23278 23279 23278 23279 23288 23289 23280 23281 23282 23284 23285 23286 23287 23288 23289 330 23290 23291 23292 23294 23295 23296 23297 23288 23289 331 23300 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23344 23325	322	23210	23211	23212	23214	23215	23216	23217	23218	23219
325 23240 23241 23242 23244 23245 23246 23247 23248 23249 326 23250 23251 23252 23254 23255 23256 23257 23258 23259 327 23260 23261 23262 23264 23265 23266 23267 23278 23279 328 23270 23271 23272 23274 23275 23286 23287 23288 23289 330 23290 23291 23292 23294 23295 23296 23297 23298 23299 331 23300 23301 23302 23304 23305 23306 23307 23308 23309 333 23300 23321 23322 23324 23315 23316 23317 23318 23319 334 23330 23331 23322 23344 23355 23366 23377 23388 23399 335 23360 233	323	23220	23221	23222	23224	23225	23226	23227	23228	23229
326 23250 23251 23252 23254 23255 23256 23257 23258 23259 327 23260 23261 23262 23264 23265 23266 23267 23268 23269 328 23270 23271 23272 23274 23275 23276 23277 23278 23289 330 23290 23291 23292 23294 23295 23296 23297 23298 23299 331 23300 23301 23302 23304 23305 23306 23307 23308 23309 332 23310 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23324 23325 23326 23377 23388 23399 334 23330 23351 23352 23344 23345 23346 23347 23348 23349 336 23351 233	324	23230	23231	23232	23234	23235	23236	23237	23238	23239
327 23260 23261 23262 23264 23265 23266 23267 23268 23279 328 23270 23271 23272 23274 23275 23276 23277 23278 23279 329 23280 23281 23282 23284 23285 23286 23287 23288 23289 330 23290 23291 23292 23294 23295 23296 23297 23288 23299 331 23300 23301 23302 23304 23305 23306 23307 23308 23309 332 23310 23311 23312 23324 23325 23326 23327 23318 23319 334 23330 23331 23322 23324 23325 23336 23377 23388 23329 335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 233	325	23240	23241	23242	23244	23245	23246	23247	23248	23249
328 23270 23271 23272 23274 23275 23276 23277 23278 23289 329 23280 23281 23282 23284 23285 23286 23287 23288 23289 330 23290 23291 23292 23294 23295 23296 23297 23288 23289 331 23300 23301 23302 23304 23305 23306 23307 23308 23309 332 23310 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23324 23325 23326 23377 23388 23329 334 23330 23331 23332 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23356 23357 23388 23359 337 23360 233	326	23250	23251	23252	23254	23255	23256	23257	23258	23259
329 23280 23281 23282 23284 23285 23286 23287 23288 23289 330 23290 23291 23292 23294 23295 23296 23297 23298 23299 331 23300 23301 23302 23304 23305 23306 23307 23308 23309 332 23310 23311 23312 23314 23315 23316 23317 23388 23399 334 23320 23321 23322 23324 23325 23326 23377 23388 23329 334 23330 23331 23322 23344 23345 23346 23347 23348 23339 335 23360 23351 23352 23354 23355 23356 23357 23388 23359 338 23370 23371 23372 23374 23379 23389 23379 23389 23379 23388 23399 3	327	23260	23261	23262	23264	23265	23266	23267	23268	23269
330 23290 23291 23292 23294 23295 23296 23297 23298 23299 331 23300 23301 23302 23304 23305 23306 23307 23308 23309 332 23310 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23324 23325 23326 23377 23382 23329 334 23330 23331 23332 23334 23335 23336 23377 23388 23393 335 23340 23341 23342 23344 23345 23346 23347 23348 23349 337 23360 23351 23352 23354 23355 23366 23357 23358 23369 338 23370 23371 23372 23374 23379 23389 23379 23380 23377 23378 23399 3	328	23270	23271	23272	23274	23275	23276	23277	23278	23279
331 23300 23301 23302 23304 23305 23306 23307 23308 23309 332 23310 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23324 23325 23326 23327 23328 23329 334 23330 23331 23322 23344 23335 23336 23377 23388 23339 335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23366 23367 23368 23359 337 23360 23361 23362 23364 23365 23366 23367 23368 23369 338 23370 23371 23372 23374 23379 23389 23389 340 23490 23491 23492 234	329	23280	23281	23282	23284	23285	23286	23287	23288	23289
332 23310 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23324 23325 23326 23327 23328 23329 334 23330 23331 23322 23344 23345 23336 23337 23388 23339 335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23356 23357 23358 23359 337 23360 23361 23362 23364 23365 23366 23377 23368 23369 338 23370 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 341 23400 234	330	23290	23291	23292	23294	23295	23296	23297	23298	23299
332 23310 23311 23312 23314 23315 23316 23317 23318 23319 333 23320 23321 23322 23324 23325 23326 23327 23328 23329 334 23330 23331 23322 23344 23345 23336 23337 23388 23339 335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23356 23357 23358 23359 337 23360 23361 23362 23364 23365 23366 23377 23368 23369 338 23370 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 341 23400 234	331	23300	23301	23302	23304	23305	23306	23307	23308	23309
333 23320 23321 23322 23324 23325 23326 23327 23328 23329 334 23330 23331 23332 23334 23335 23336 23337 23338 23339 335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23356 23377 23368 23369 337 23360 23371 23372 23374 23375 23376 23377 23378 23369 338 23370 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23391 23392 23394 23395 23396 23377 23378 23389 341 23400 23401 23402 23404 23405 23406 23407 23408 23499 342 23410 234	332	23310	23311	23312	23314	23315	23316	23317	23318	
335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23356 23357 23358 23359 337 23360 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 340 23390 23391 23392 23394 23395 23396 23397 23498 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23499 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 234			23321			23325				
335 23340 23341 23342 23344 23345 23346 23347 23348 23349 336 23350 23351 23352 23354 23355 23356 23357 23358 23359 337 23360 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 340 23390 23391 23392 23394 23395 23396 23397 23498 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23499 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 234	334	23330	23331	23332	23334	23335	23336	23337	23338	23339
337 23360 23361 23362 23364 23365 23366 23367 23368 23369 338 23370 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 340 23390 23391 23392 23394 23395 23396 23397 23398 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23409 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 234										
337 23360 23361 23362 23364 23365 23366 23367 23368 23369 338 23370 23371 23372 23374 23375 23376 23377 23378 23379 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 340 23390 23391 23392 23394 23395 23396 23397 23398 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23409 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 234			23351				23356	23357		
338 23370 23371 23372 23374 23375 23376 23377 23378 23389 339 23380 23381 23382 23384 23385 23386 23387 23388 23389 340 23390 23391 23392 23394 23395 23396 23397 23388 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23409 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 234										
339 23380 23381 23382 23384 23385 23386 23387 23388 23389 340 23390 23391 23392 23394 23395 23396 23397 23398 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23409 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 234		23370							23378	
340 23390 23391 23392 23394 23395 23396 23397 23398 23399 341 23400 23401 23402 23404 23405 23406 23407 23408 23409 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 234										
341 23400 23401 23402 23404 23405 23406 23407 23408 23409 342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23472 23479 23479 23479 23479 23479 23489 349 234										
342 23410 23411 23412 23414 23415 23416 23417 23418 23419 343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
343 23420 23421 23422 23424 23425 23426 23427 23428 23429 344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
344 23430 23431 23432 23434 23435 23436 23437 23438 23439 345 23440 23441 23442 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
345 23440 23441 23442 23444 23445 23446 23447 23448 23449 346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
346 23450 23451 23452 23454 23455 23456 23457 23458 23459 347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
347 23460 23461 23462 23464 23465 23466 23467 23468 23469 348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
348 23470 23471 23472 23474 23475 23476 23477 23478 23479 349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
349 23480 23481 23482 23484 23485 23486 23487 23488 23489										
2.11 12.349 2.349 2.349 2.349 2.349 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37 2.37	350	23490	23491	23492		23495	23496	23497	23498	

D.1.	Posi-		D		mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	Spe Low-	High-	add Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
351	23500	23501	23502	23504	23505	23506	23507	23508	23509
352	23510	23511	23512	23514	23515	23516	23517	23518	23519
353	23520	23521	23522	23524	23525	23526	23527	23528	23529
354	23530	23531	23532	23534	23535	23536	23537	23538	23539
355	23540	23541	23542	23544	23545	23546	23547	23548	23549
356	23550	23551	23552	23554	23555	23556	23557	23558	23559
357	23560	23561	23562	23564	23565	23566	23567	23568	23569
358	23570	23571	23572	23574	23575	23576	23577	23578	23579
359	23580	23581	23582	23584	23585	23586	23587	23588	23589
360	23590	23591	23592	23594	23595	23596	23597	23598	23599
361	23600	23601	23602	23604	23605	23606	23607	23608	23609
362	23610	23611	23612	23614	23615	23616	23617	23618	23619
363	23620	23621	23622	23624	23625	23626	23627	23628	23629
364	23630	23631	23632	23634	23635	23636	23637	23638	23639
365	23640	23641	23642	23644	23645	23646	23647	23648	23649
366	23650	23651	23652	23654	23655	23656	23657	23658	23659
367	23660	23661	23662	23664	23665	23666	23667	23668	23669
368	23670	23671	23672	23674	23675	23676	23677	23678	23679
369	23680	23681	23682	23684	23685	23686	23687	23688	23689
370	23690	23691	23692	23694	23695	23696	23697	23698	23699
371	23700	23701	23702	23704	23705	23706	23707	23708	23709
372	23710	23711	23712	23714	23715	23716	23717	23718	23719
373	23720	23721	23722	23724	23725	23726	23727	23728	23729
374	23730	23731	23732	23734	23735	23736	23737	23738	23739
375	23740	23741	23742	23744	23745	23746	23747	23748	23749
376	23750	23751	23752	23754	23755	23756	23757	23758	23759
377	23760	23761	23762	23764	23765	23766	23767	23768	23769
378	23770	23771	23772	23774	23775	23776	23777	23778	23779
379	23780	23781	23782	23784	23785	23786	23787	23788	23789
380	23790	23791	23792	23794	23795	23796	23797	23798	23799
381	23800	23801	23802	23804	23805	23806	23807	23808	23809
382	23810	23811	23812	23814	23815	23816	23817	23818	23819
383	23820	23821	23822	23824	23825	23826	23827	23828	23829
384	23830	23831	23832	23834	23835	23836	23837	23838	23839
385	23840	23841	23842	23844		23846	23847	23848	23849
386	23850	23851	23852	23854	23855	23856	23857	23858	23859
387	23860	23861	23862	23864	23865	23866	23867	23868	23869
388	23870	23871	23872	23874	23875	23876	23877	23878	23879
389	23880	23881	23882	23884	23885	23886	23887	23888	23889
390	23890	23891	23892	23894	23895	23896	23897	23898	23899
391	23900	23901	23902	23904	23905	23906	23907	23908	23909
392	23910	23911	23912	23914	23915	23916	23917	23918	23919
393	23920	23921	23922	23924	23925	23926	23927	23928	23929
394	23930	23931	23932	23934	23935	23936	23937	23938	23939
395	23940	23941	23942	23944	23945	23946	23947	23948	23949
396	23950	23951	23952	23954	23955	23956	23957	23958	23959
397	23960	23961	23962	23964	23965	23966	23967	23968	23969
398	23970	23971	23972	23974	23975	23976	23977	23978	23979
399	23980	23981	23982	23984	23985	23986	23987	23988	23989
400	23990	23991	23992	23994	23995	23996	23997	23998	23999
.00	_5550	_5551		_55554	_3000	_5550	_3001	_5555	_5555

Data	Posi-	М	Dwell		mand eed		oning ress	Arc	data
No.	tioning identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
401	24000	24001	24002	24004	24005	24006	24007	24008	24009
402	24010	24011	24012	24014	24015	24016	24017	24018	24019
403	24020	24021	24022	24024	24025	24026	24027	24028	24029
404	24030	24031	24032	24034	24035	24036	24037	24038	24039
405	24040	24041	24042	24044	24045	24046	24047	24048	24049
406	24050	24051	24052	24054	24055	24056	24057	24058	24059
407	24060	24061	24062	24064	24065	24066	24067	24068	24069
408	24070	24071	24072	24074	24075	24076	24077	24078	24079
409	24080	24081	24082	24084	24085	24086	24087	24088	24089
410	24090	24091	24092	24094	24095	24096	24097	24098	24099
411	24100	24101	24102	24104	24105	24106	24107	24108	24109
412	24110	24111	24112	24114	24115	24116	24117	24118	24119
413	24120	24121	24122	24124	24125	24126	24127	24128	24129
414	24130	24131	24132	24134	24135	24136	24137	24138	24139
415	24140	24141	24142	24144	24145	24146	24147	24148	24149
416	24150	24151	24152	24154	24155	24156	24157	24158	24159
417	24160	24161	24162	24164	24165	24166	24167	24168	24169
418	24170	24171	24172	24174	24175	24176	24177	24178	24179
419	24180	24181	24182	24184	24185	24186	24187	24188	24189
420	24190	24191	24192	24194	24195	24196	24197	24198	24199
421	24200	24201	24202	24204	24205	24206	24207	24208	24209
422	24210	24211	24212	24214	24215	24216	24217	24218	24219
423	24220	24221	24222	24224	24225	24226	24227	24228	24229
424	24230	24231	24232	24234	24235	24236	24237	24238	24239
425	24240	24241	24242	24244	24245	24246	24247	24248	24249
426	24250	24251	24252	24254	24255	24256	24257	24258	24259
427	24260	24261	24262	24264	24265	24266	24267	24268	24269
428	24270	24271	24272	24274	24275	24276	24277	24278	24279
429	24280	24281	24282	24284	24285	24286	24287	24288	24289
430	24290	24291	24292	24294	24295	24296	24297	24298	24299
431	24300	24301	24302	24304	24305	24306	24307	24308	24309
432	24310	24311	24312	24314	24315	24316	24317	24318	24319
433	24320	24321	24322	24324	24325	24326	24327	24328	24329
434	24330	24331	24332	24334	24335	24336	24337	24338	24339
435	24340	24341	24342	24344	24345	24346	24347	24348	24349
436	24350	24351	24352	24354	24355	24356	24357	24358	24359
437	24360	24361	24362	24364	24365	24366	24367	24368	24369
438	24370	24371	24372	24374	24375	24376	24377	24378	24379
439	24380	24381	24382	24384	24385	24386	24387	24388	24389
440	24390	24391	24392	24394	24395	24396	24397	24398	24399
441	24400	24401	24402	24404	24405	24406	24407	24408	24409
442	24410	24411	24412	24414	24415	24416	24417	24418	24419
443	24420	24421	24422	24424	24425	24426	24427	24428	24429
444	24430	24431	24432	24434	24435	24436	24437	24438	24439
445	24440	24441	24442	24444	24445	24446	24447	24448	24449
446	24450	24451	24452	24454	24455	24456	24457	24458	24459
447	24460	24461	24462	24464	24465	24466	24467	24468	24469
448	24470	24471	24472	24474	24475	24476	24477	24478	24479
449	24480	24481	24482	24484	24485	24486	24487	24488	24489
450	24490	24491	24492	24494	24495	24496	24497	24498	24499

Data	Posi-	M	Durall		mand	Positi add	oning	Arc	data
Data No.	tioning identi-	M code	Dwell time	spe Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
451	24500	24501	24502	24504	24505	24506	24507	24508	24509
452	24510	24511	24512	24514	24515	24516	24517	24518	24519
453	24520	24521	24522	24524	24525	24526	24527	24528	24529
454	24530	24531	24532	24534	24535	24536	24537	24538	24539
455	24540	24541	24542	24544	24545	24546	24547	24548	24549
456	24550	24551	24552	24554	24555	24556	24557	24558	24559
457	24560	24561	24562	24564	24565	24566	24567	24568	24569
458	24570	24571	24572	24574	24575	24576	24577	24578	24579
459	24580	24581	24582	24584	24585	24586	24587	24588	24589
460	24590	24591	24592	24594	24595	24596	24597	24598	24599
461	24600	24601	24602	24604	24605	24606	24607	24608	24609
462	24610	24611	24612	24614	24615	24616	24617	24618	24619
463	24620	24621	24622	24624	24625	24626	24627	24628	24629
464	24630	24631	24632	24634	24635	24636	24637	24638	24639
465	24640	24641	24642	24644	24645	24646	24647	24648	24649
466	24650	24651	24652	24654	24655	24656	24657	24658	24659
467	24660	24661	24662	24664	24665	24666	24667	24668	24669
468	24670	24671	24672	24674	24675	24676	24677	24678	24679
469	24680	24681	24682	24684	24685	24686	24687	24688	24689
470	24690	24691	24692	24694	24695	24696	24697	24698	24699
471	24700	24701	24702	24704	24705	24706	24707	24708	24709
472	24710	24711	24712	24714	24715	24716	24717	24718	24719
473	24720	24721	24722	24724	24725	24726	24727	24728	24729
474	24730	24731	24732	24734	24735	24736	24737	24738	24739
475	24740	24741	24742	24744	24745	24746	24747	24748	24749
476	24750	24751	24752	24754	24755	24756	24757	24758	24759
477	24760	24761	24762	24764	24765	24766	24767	24768	24769
478	24770	24771	24772	24774	24775	24776	24777	24778	24779
479	24780	24781	24782	24784	24785	24786	24787	24788	24789
480	24790	24791	24792	24794	24795	24796	24797	24798	24799
481	24800	24801	24802	24804	24805	24806	24807	24808	24809
482	24810	24811	24812	24814	24815	24816	24817	24818	24819
483	24820	24821	24822	24824	24825	24826	24827	24828	24829
484	24830	24831	24832	24834	24835	24836	24837	24838	24839
485	24840	24841	24842	24844	24845	24846	24847	24848	24849
486	24850	24851	24852	24854	24855	24856	24857	24858	24859
487	24860	24861	24862	24864	24865			24868	24869
488	24870	24871	24872	24874	24875	24876	24877	24878	24879
489	24880	24881	24882	24884	24885	24886	24887	24888	24889
490	24890	24891	24892	24894	24895	24896	24897	24898	24899
491	24900	24901	24902	24904	24905	24906	24907	24908	24909
492	24910	24911	24912	24914	24915	24916	24917	24918	24919
493	24920	24921	24922	24924	24925	24926	24927	24928	24929
494	24930	24931	24932	24934	24935	24936	24937	24938	24939
495	24940	24941	24942	24944	24945	24946	24947	24948	24949
496	24950	24951	24952	24954	24955	24956	24957	24958	24959
497	24960	24961	24962	24964	24965	24966	24967	24968	24969
498	24900	24901	24902	24974	24905	24976	24977	24978	24979
499	24970	24971	24972	24984	24975	24986	24987	24988	24989
			24902	24904	24905	24996	24997	24998	24999
500	24990	24991	Z439Z	Z 4 554	∠+333	∠ + 330	<u>∠</u> +331	Z+330	ムマッツツ

Data	Posi- tioning	М	Dwell		mand eed		oning ress	Arc	data
No.	identi-	code	time	Low-	High-	Low-	High-	Low-	High-
	fier			order	order	order	order	order	order
501	25000	25001	25002	25004	25005	25006	25007	25008	25009
502	25010	25011	25012	25014	25015	25016	25017	25018	25019
503	25020	25021	25022	25024	25025	25026	25027	25028	25029
504	25030	25031	25032	25034	25035	25036	25037	25038	25039
505	25040	25041	25042	25044	25045	25046	25047	25048	25049
506	25050	25051	25052	25054	25055	25056	25057	25058	25059
507	25060	25061	25062	25064	25065	25066	25067	25068	25069
508	25070	25071	25072	25074	25075	25076	25077	25078	25079
509	25080	25081	25082	25084	25085	25086	25087	25088	25089
510	25090	25091	25092	25094	25095	25096	25097	25098	25099
511	25100	25101	25102	25104	25105	25106	25107	25108	25109
512	25110	25111	25112	25114	25115	25116	25117	25118	25119
513	25120	25121	25122	25124	25125	25126	25127	25128	25129
514	25130	25131	25132	25134	25135	25136	25137	25138	25139
515	25140	25141	25142	25144	25145	25146	25147	25148	25149
516	25150	25151	25152	25154	25155	25156	25157	25158	25159
517	25160	25161	25162	25164	25165	25166	25167	25168	25169
518	25170	25171	25172	25174	25175	25176	25177	25178	25179
519	25180	25181	25182	25184	25185	25186	25187	25188	25189
520	25190	25191	25192	25194	25195	25196	25197	25198	25199
521	25200	25201	25202	25204	25205	25206	25207	25208	25209
522	25210	25211	25212	25214	25215	25216	25217	25218	25219
523	25220	25221	25222	25224	25225	25226	25227	25228	25229
524	25230	25231	25232	25234	25235	25236	25237	25238	25239
525	25240	25241	25242	25244	25245	25246	25247	25248	25249
526	25250	25251	25252	25254	25255	25256	25257	25258	25259
527	25260	25261	25262	25264	25265	25266	25267	25268	25269
528	25270	25271	25272	25274	25275	25276	25277	25278	25279
529	25280	25281	25282	25284	25285	25286	25287	25288	25289
530	25290	25291	25292	25294	25295	25296	25297	25298	25299
531	25300	25301	25302	25304	25305	25306	25307	25308	25309
532	25310	25311	25312	25314	25315	25316	25317	25318	25319
533	25320	25321	25322	25324	25325	25326	25327	25328	25329
534	25330	25331	25332	25334	25335	25336	25337	25338	25339
535	25340	25341	25342		25345	25346	25347	25348	25349
536	25350	25351		25354		25356	25357		25359
537	25360	25361		25364	25365	25366	25367	25368	
538	25370	25371	25372		25375	25376	25377	25378	
539	25380	25381	25382		25385	25386	25387	25388	
540	25390	25391	25392		25395	25396	25397	25398	
541	25400	25401		25404		25406	25407	25408	
542	25410	25411		25414		25416	25417	25418	
543	25420	25421		25424	25425	25426	25427	25428	
544	25430	25431	25432		25435	25436	25437	25438	
545	25440	25441	25442		25445	25446		25448	
546	25450	25451		25454	25455	25456	25457	25458	
547	25460	25461	25462		25465	25466	25467	25468	
548	25470	25471	25472		25475	25476	25477	25478	
549	25480	25481	25482		25485	25486	25487	25488	
	25490		25492		25495	25496	25497	25498	
550	∠J 4 9U	25491	ZJ49Z	ZJ494	49493	2J490	ZJ491	∠J490	49499

	Posi-				mand		oning	Arc	data
Data No.	tioning identi-	M code	Dwell time		ed		ress		
INO.	fier	code	unie	Low- order	High- order	Low- order	High- order	Low- order	High- order
551	25500	25501	25502	25504	25505	25506	25507	25508	25509
552	25510	25511	25512	25514	25515	25516	25517	25518	25519
553	25520	25521	25522	25524	25525	25526	25527	25528	25529
554	25530	25531	25532	25534	25535	25536	25537	25538	25539
555	25540	25541	25542	25544	25545	25546	25547	25548	25549
556	25550	25551	25552	25554	25555	25556	25557	25558	25559
557	25560	25561	25562	25564	25565	25566	25567	25568	25569
558	25570	25571	25572	25574	25575	25576	25577	25578	25579
559	25580	25581	25582	25584	25585	25586	25587	25588	25589
560	25590	25591	25592	25594	25595	25596	25597	25598	25599
561	25600	25601	25602	25604	25605	25606	25607	25608	25609
562	25610	25611	25612	25614	25615	25616	25617	25618	25619
563	25620	25621	25622	25624	25625	25626	25627	25628	25629
564	25630	25631	25632	25634	25635	25636	25637	25638	25639
565	25640	25641	25642	25644	25645	25646	25647	25648	25649
566	25650	25651	25652	25654	25655	25656	25657	25658	25659
567	25660	25661	25662	25664	25665	25666	25667	25668	25669
568	25670	25671	25672	25674	25675	25676	25677	25678	25679
569	25680	25681	25682	25684	25685	25686	25687	25688	25689
570	25690	25691	25692	25694	25695	25696	25697	25698	25699
571	25700	25701	25702	25704	25705	25706	25707	25708	25709
572	25710	25711	25712	25714	25715	25716	25717	25718	25719
573	25720	25721	25722	25724	25725	25726	25727	25728	25729
574	25730	25731	25732	25734	25735	25736	25737	25738	25739
575	25740	25741	25742	25744	25745	25746	25747	25748	25749
576	25750	25751	25752	25754	25755	25756	25757	25758	25759
577	25760	25761	25762	25764	25765	25766	25767	25768	25769
578	25770	25771	25772	25774	25775	25776	25777	25778	25779
579	25780	25781	25782	25784	25785	25786	25787	25788	25789
580	25790	25791	25792	25794	25795	25796	25797	25798	25799
581	25800	25801	25802	25804	25805	25806	25807	25808	25809
582	25810	25811	25812	25814	25815	25816	25817	25818	25819
583	25820	25821	25822	25824	25825	25826	25827	25828	25829
584	25830	25831	25832	25834	25835	25836	25837	25838	25839
585	25840	25841	25842	25844	25845	25846	25847	25848	25849
586	25850	25851	25852	25854	25855	25856	25857	25858	25859
587	25860	25861	25862	25864	25865	25866	25867	25868	25869
588	25870	25871	25872	25874	25875	25876	25877	25878	25879
589	25880	25881	25882	25884	25885	25886	25887	25888	25889
590	25890	25891	25892	25894	25895	25896	25897	25898	25899
591	25900	25901	25902	25904	25905	25906	25907	25908	25909
592	25910	25911	25912	25914	25915	25916	25917	25918	25919
593	25920	25921	25922	25924	25925	25926	25927	25928	25929
594	25930	25931	25932	25934	25935	25936	25937	25938	25939
595	25940	25941	25942	25944	25945	25946	25947	25948	25949
596	25950	25951	25952	25954	25955	25956	25957	25958	25959
597	25960	25961	25962	25964	25965	25966	25967	25968	25969
598	25970	25971	25972	25974	25975	25976	25977	25978	25979
599	25980	25981	25982	25984	25985	25986	25987	25988	25989
600	25990	25991	25992	25994	25995	25996	25997	25998	25999

(4) For axis 4 (positioning option)


D-4-	Desitioning	D-4-	De eltiere in e	D-4-	D 141 1	D-4-	D iti i	D-4-	D 141 1	D-4-	DW
Data	Positioning	Data	Positioning	Data	Positioning	Data	Positioning	Data	Positioning	Data	Positioning
No.	option	No.	option	No.	option	No.	option	No.	option	No.	option
1	20003	51	20503	101	21003	151	21503	201	22003	251	22503
2	20013	52	20513	102	21013	152	21513	202	22013	252	22513
3	20023	53	20523	103	21023	153	21523	203	22023	253	22523
4	20033	54	20533	104	21033	154	21533	204	22033	254	22533
5	20043	55	20543	105	21043	155	21543	205	22043	255	22543
6	20053	56	20553	106	21053	156	21553	206	22053	256	22553
7	20063	57	20563	107	21063	157	21563	207	22063	257	22563
8	20073	58	20573	108	21073	158	21573	208	22073	258	22573
9	20083	59	20583	109	21083	159	21583	209	22083	259	22583
10	20093	60	20593	110	21093	160	21593	210	22093	260	22593
11	20103	61	20603	111	21103	161	21603	211	22103	261	22603
12	20113	62	20613	112	21113	162	21613	212	22113	262	22613
13	20123	63	20623	113	21123	163	21623	213	22123	263	22623
14	20133	64	20633	114	21133	164	21633	214	22133	264	22633
15	20143	65	20643	115	21143	165	21643	215	22143	265	22643
16	20153	66	20653	116	21153	166	21653	216	22153	266	22653
17	20163	67	20663	117	21163	167	21663	217	22163	267	22663
18	20173	68	20673	118	21173	168	21673	218	22173	268	22673
19	20183	69	20683	119	21183	169	21683	219	22183	269	22683
20	20193	70	20693	120	21193	170	21693	220	22193	270	22693
21	20203	71	20703	121	21203	171	21703	221	22203	271	22703
22	20213	72	20713	122	21213	172	21713	222	22213	272	22713
23	20223	73	20723	123	21223	173	21723	223	22223	273	22723
24	20233	74	20733	124	21233	174	21733	224	22233	274	22733
25	20243	75	20743	125	21243	175	21743	225	22243	275	22743
26	20253	76	20753	126	21253	176	21753	226	22253	276	22753
27	20263	77	20763	127	21263	177	21763	227	22263	277	22763
28	20273	78	20773	128	21273	178	21773	228	22273	278	22773
29	20283	79	20783	129	21283	179	21783	229	22283	279	22783
30	20293	80	20793	130	21293	180	21793	230	22293	280	22793
31	20303	81	20803	131	21303	181	21803	231	22303	281	22803
32	20313	82	20813	132	21313	182	21813	232	22313	282	22813
33	20323	83	20823	133	21323	183	21823	233	22323	283	22823
34	20333	84	20833	134	21333	184	21833	234	22333	284	22833
35	20343	85	20843	135	21343	185	21843	235	22343	285	22843
36	20353	86	20853	136	21353	186	21853	236	22353	286	22853
37	20363	87	20863	137	21363	187	21863	237	22363	287	22863
38	20373	88	20873	138	21373	188	21873	238	22373	288	22873
39	20383	89	20883	139	21383	189	21883	239	22383	289	22883
40	20393	90	20893	140	21393	190	21893	240	22393	290	22893
41	20403	91	20903	141	21403	191	21903	241	22403	291	22903
42	20413	92	20913	142	21413	192	21913	242	22413	292	22913
43	20423	93	20923	143	21423	193	21923	243	22423	293	22923
44	20433	94	20933	144	21433	194	21933	244	22433	294	22933
45	20443	95	20943	145	21443	195	21943	245	22443	295	22943
46	20453	96	20953	146	21453	196	21953	246	22453	296	22953
47	20463	97	20963	147	21463	197	21963	247	22463	297	22963
48	20473	98	20973	148	21473	198	21973	248	22473	298	22973
49	20483	99	20983	149	21483	199	21983	249	22483	299	22983
50	20493	100	20993	150	21493	200	21993	250	22493	300	22993

(4) For axis 4 (positioning option)

Data	Positioning	Data	Positioning	Data	Positioning	Data	Positioning	Data	Positioning	Data	Positioning
No.	option	No.	option	No.	option	No.	option	No.	option	No.	option
301	23003	351	23503	401	24003	451	24503	501	25003	551	25503
302	23013	352	23513	402	24013	452	24513	502	25013	552	25513
303	23023	353	23523	403	24023	453	24523	503	25023	553	25523
304	23033	354	23533	404	24033	454	24533	504	25033	554	25533
305	23043	355	23543	405	24043	455	24543	505	25043	555	25543
306	23053	356	23553	406	24053	456	24553	506	25053	556	25553
307	23063	357	23563	407	24063	457	24563	507	25063	557	25563
308	23073	358	23573	408	24073	458	24573	508	25073	558	25573
309	23083	359	23583	409	24073	459	24583	509	25073	559	25583
310	23093	360	23593	410	24093	460	24593	510	25093	560	25593
1					24103	461	24603		25103		25603
311	23103	361	23603	411		462	24603 24613	511	25103 25113	561	
312	23113	362	23613	412	24113	462	24613 24623	512	25113 25123	562	25613
313	23123	363	23623	413	24123			513		563	25623
314	23133	364	23633	414	24133	464	24633	514	25133	564	25633
315	23143	365	23643	415	24143	465	24643	515	25143	565	25643
316	23153	366	23653	416	24153	466	24653	516	25153	566	25653
317	23163	367	23663	417	24163	467	24663	517	25163	567	25663
318	23173	368	23673	418	24173	468	24673	518	25173	568	25673
319	23183	369	23683	419	24183	469	24683	519	25183	569	25683
320	23193	370	23693	420	24193	470	24693	520	25193	570	25693
321	23203	371	23703	421	24203	471	24703	521	25203	571	25703
322	23213	372	23713	422	24213	472	24713	522	25213	572	25713
323	23223	373	23723	423	24223	473	24723	523	25223	573	25723
324	23233	374	23733	424	24233	474	24733	524	25233	574	25733
325	23243	375	23743	425	24243	475	24743	525	25243	575	25743
326	23253	376	23753	426	24253	476	24753	526	25253	576	25753
327	23263	377	23763	427	24263	477	24763	527	25263	577	25763
328	23273	378	23773	428	24273	478	24773	528	25273	578	25773
329	23283	379	23783	429	24283	479	24783	529	25283	579	25783
330	23293	380	23793	430	24293	480	24793	530	25293	580	25793
331	23303	381	23803	431	24303	481	24803	531	25303	581	25803
332	23313	382	23813	432	24313	482	24813	532	25313	582	25813
333	23323	383	23823	433	24323	483	24823	533	25323	583	25823
334	23333	384	23833	434	24333	484	24833	534	25333	584	25833
335	23343	385	23843	435	24343	485	24843	535	25343	585	25843
336	23353	386	23853	436	24353	486	24853	536	25353	586	25853
337	23363	387	23863	437	24363	487	24863	537	25363	587	25863
338	23373	388	23873	438	24373	488	24873	538	25373	588	25873
339	23383	389	23883	439	24383	489	24883	539	25383	589	25883
340	23393	390	23893	440	24393	490	24893	540	25393	590	25893
341	23403	391	23903	441	24403	491	24903	541	25403	591	25903
342	23413	392	23913	442	24413	492	24913	542	25413	592	25913
343	23423	393	23923	443	24423	493	24923	543	25423	593	25923
344	23433	394	23933	444	24433	494	24933	544	25433	594	25933
345	23443	395	23943	445	24443	495	24943	545	25443	595	25943
346	23453	396	23953	446	24453	496	24953	546	25453	596	25953
347	23463	397	23963	447	24463	497	24963	547	25463	597	25963
348	23473	398	23973	448	24473	498	24973	548	25473	598	25973
349	23483	399	23983	449	24483	499	24983	549	25483	599	25983
350	23493	400	23993	450	24493	500	24993	550	25493	600	25993
220	_5.00	.50	_5500	.50							


Appendix 4 Connection examples with servo amplifiers manufactured by MITSUBISHI Electric Corporation

Appendix 4.1 Connection example of QD75D \square N and MR-J3- \square A (Differential driver) *5

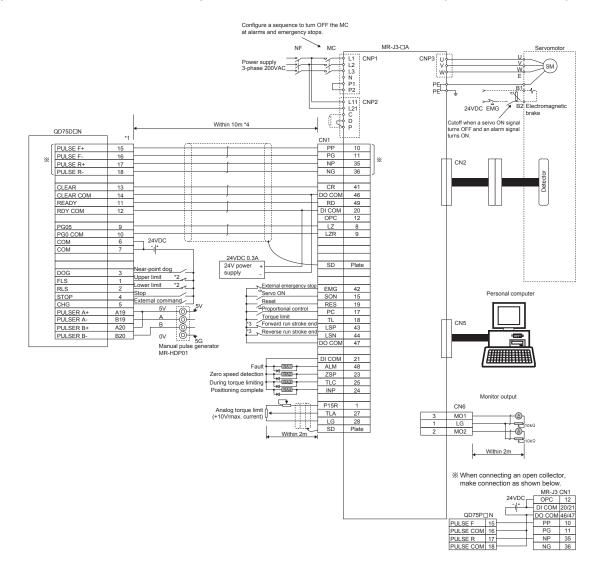


- (1) It is recommended to make differential driver connection since differential driver connection is more excellent than open collector connection in max. output pulse and max. connection distance between servos. (Refer to Section 3.1 "Performance specifications".)
- (2) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (3) *2:The QD75D N upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (4) *3: These are limit switches for the servo (for stop).
- (5) *4:This indicates the distance between the QD75D□N and servo amplifier.
- (6) *5:When used, check the logic for the QD75D\(\time\)N and servo amplifier in Section 3.4.1, (2) "Output specifications". The QD75D\(\time\)N is initially set to negative logic.
- (7) "FA-CBLQ75M2J3(-P) cable" can be used for connecting the QD75D N and MR-J3-A.

Appendix 4.2 Connection example of QD75D□N and MR-H □ A (Differential driver) *

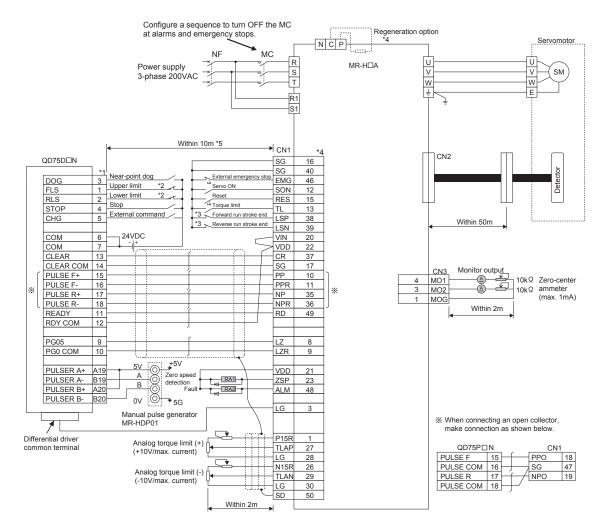


- (1) It is recommended to make differential driver connection since differential driver connection is more excellent than open collector connection in max. output pulse and max. connection distance between servos. (Refer to Section 3.1 "Performance specifications".)
- (2) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (3) *2:The QD75D\(\subseteq\) upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (4) *3: These are limit switches for the servo (for stop).
- (5) *4:Refer to the specification and handling instruction manual of the servo amplifier MR-H for details on connection.
- (6) *5:This indicates the distance between the QD75D and servo amplifier.
- (7) *6:Use the same logic (positive logic/negative logic) for the QD75D\(\subseteq N\) and servo amplifier. The QD75D\(\subseteq N\) is initially set to negative logic.

Appendix 4.3 Connection example of QD75D \square N and MR-J2/J2S- \square A (Differential driver) *5

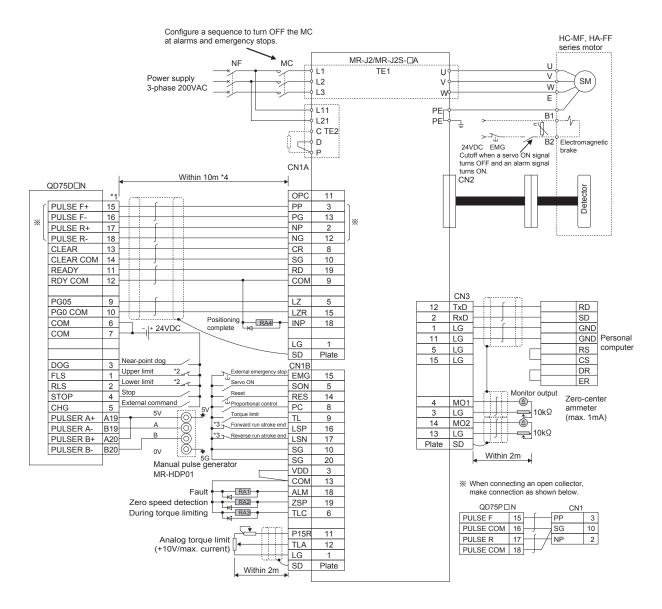

- (1) It is recommended to make differential driver connection since differential driver connection is more excellent than open collector connection in max. output pulse and max. connection distance between servos. (Refer to Section 3.1 "Performance specifications".)
- (2) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (3) *2:The QD75D□N upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (4) *3: These are limit switches for the servo amplifier ($\underline{\text{for}}$ stop).
- (5) *4:This indicates the distance between the QD75D\(\subsetention\) N and servo amplifier.
- (6) *5:Use the same logic (positive logic/negative logic) for the QD75D□N and servo amplifier. The QD75D□N is initially set to negative logic.


Appendix 4.4 Connection example of QD75D□N and MR-C □ A (Differential driver)*5

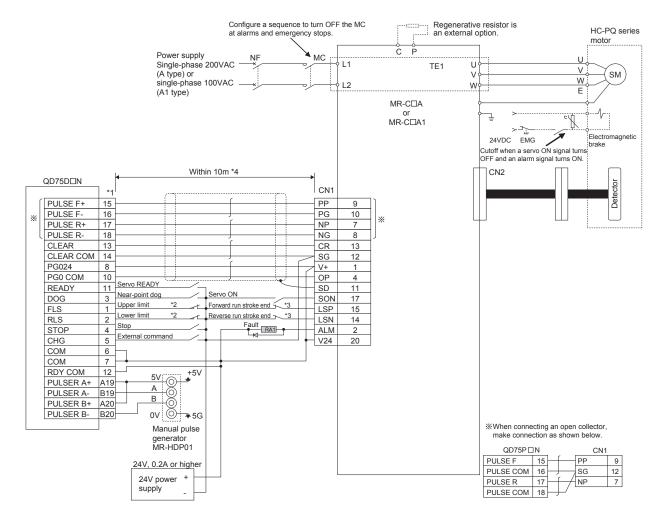

- (1) It is recommended to make differential driver connection since differential driver connection is more excellent than open collector connection in max. output pulse and max. connection distance between servos. (Refer to Section 3.1 "Performance specifications".)
- (2) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (3) *2:The QD75D N upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (4) *3: These are limit switches for the servo amplifier (for stop).
- (5) *4:This indicates the distance between the QD75D□N and servo amplifier.
- (6) ★5:Use the same logic (positive logic/negative logic) for the QD75D□N and servo amplifier. The QD75D□N is initially set to negative logic.

Appendix 5 Connection examples with stepping motors manufactured by ORIENTALMOTOR Co., Ltd.


Appendix 5.1 Connection example of QD75P□N and VEXTA UPD (Open collector)*4

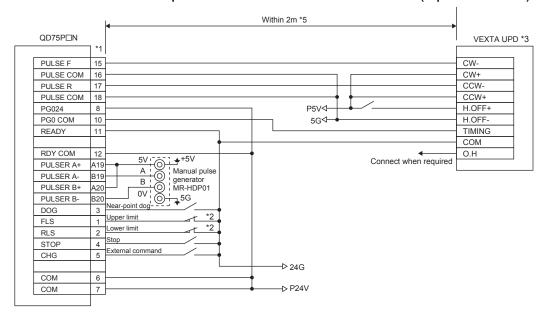

- (1) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (2) *2:The QD75P□N upper limit (FLS) and lower limit (RLS) are used in the OPR retry function.
- (3) *3:Refer to the manual of the stepping motor drive for information on the stepping motor drive side wiring and various signal wire shields not shown above.
- (4) *4:Use the same logic (positive logic/negative logic) for the QD75P□N and stepping motor. The QD75P□N is initially set to negative logic.
- (5) *5:This indicates the distance between the QD75P□N and VEXTA UPD.

Appendix 6 Connection examples with servo amplifiers manufactured by Panasonic Corporation


Appendix 6.1 Connection example of QD75D□N and MINAS-A series (Differential driver) *4

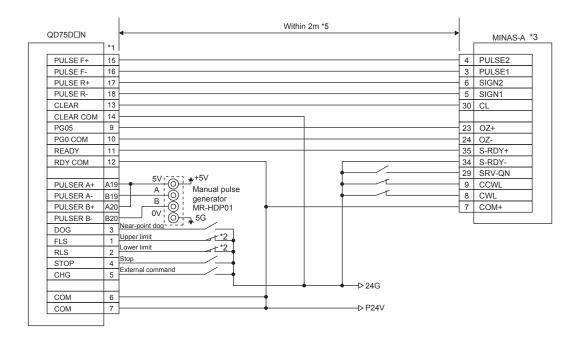

- (1) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (2) *2:The QD75D N upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (3) *3:Refer to the manual of the servo amplifier for information on the servo amplifier side wiring and various signal wire shields not shown above.
- (4) *4:Use the same logic (positive logic/negative logic) for the QD75D□N and servo amplifier. The QD75D□N is initially set to negative logic.
- (5) *5: This indicates the distance between the QD75D N and MINAS-A.

Appendix 7 Connection examples with servo amplifiers manufactured by SANYO DENKI Co., Ltd.


Appendix 7.1 Connection example of QD75D□N and PYO series (Differential driver) *4

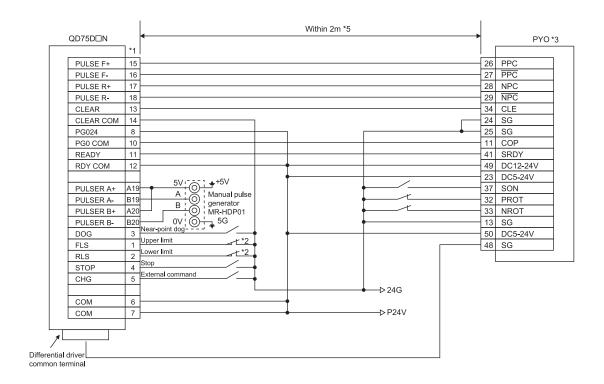

- (1) *1:The logic for each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (2) *2:The QD75D\(\subseteq\) upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (3) *3:Refer to the manual of the servo amplifier for information on the servo amplifier side wiring and various signal wire shields not shown above.
- (4) *4:Use the same logic (positive logic/negative logic) for the QD75D\(\sigma\) and servo amplifier. The QD75D\(\sigma\) is initially set to negative logic.
- (5) *5: This indicates the distance between the QD75D□N and PYO.

Appendix 8 Connection examples with servo amplifiers manufactured by YASKAWA Electric Corporation

Appendix 8.1 Connection example of QD75D□N and ∑-II series (Differential driver)*4

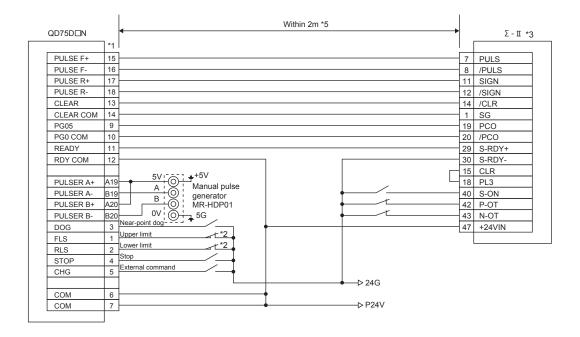

- (1) *1:The logic of each I/O terminal can be changed with " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection" in detailed parameters 1. (Negative logic is used for all terminals in the example above.)
- (2) *2:The QD75D N upper limit (FLS) and lower limit (RLS) are used in the OPR retry function. Set these signals inside the servo amplifier limit switches.
- (3) *3:Refer to the manual of the servo amplifier for information on the servo amplifier side wiring and various signal wire shields not shown above.
- (4) *4:Use the same logic (positive logic/negative logic) for the QD75D□N and servo amplifier. The QD75D□N is initially set to negative logic.
- (5) *5:This indicates the distance between the QD75D \square N and Σ - π .

Appendix 9 Comparisons with conventional positioning modules

Appendix 9.1 Comparisons with A1SD71S2 model

The following shows comparisons with the conventional positioning module A1SD71S2, centered on the QD75 specifications.

	Model	QD75P1N/QD75P1	QD75P2N/QD75P2	QD75P4N/QD75P4	1100=100
Item		QD75D1N/QD75D1	QD75D2N/QD75D2	QD75D4N/QD75D4	A1SD71S2
No. of control axes		1	2	4	2
No. of position	ning data items		600/axis		400/axis
	2-axis linear interpolation	×	0	0	0
Interpolation	3-axis linear interpolation	×	×	0	X
Ť	4-axis linear interpolation	×	×	0	X
	2-axis circular interpolation	×	0	0	X
	Position control		0		0
	Speed control		0		0
Positioning systems	Speed-position switching control		(INC/ABS mode)		Only INC mode)
	Position-speed switching control	0			×
Machine OPF	R function (OPR method)	(6 types)			○ (3 types)
JOG operatio	n	0			0
Inching opera	tion	0			X
Manual pulse	generator function	\circ			X
Acceleration/	Trapezoidal acceleration/deceleration	0			0
deceleration processing	S-curve acceleration/deceleration	0			X
Acceleration/o	deceleration time	Acceleration time and deceleration time setting possible (4 patterns each)			Acceleration/deceleration time same
Compensatio	n	Electronic gears, backlash compensation			Backlash compensation
Error display		Error LED			Error LED
History data s (Start, error, v	-	Provided (3 types, 16 items/axis)			None
Data storage destination		Flash ROM			Buffer memory
No. of occupied I/O points			(battery-less backup)		(battery backup) 48
No. of module occupied slots		32 1			2
INO. OI IIIOGUIE	AD71TU				\bigcirc
Peripheral	AD75TU		×		×
devices (data	A6GPP, A6PHP				$\hat{}$
setting, etc.)	DOS/V personal computer	×			
	200/ V personal computer	O			<u> </u>

 \bigcirc : Possible, imes : Not possible

Appendix 9.2 Comparisons with A1SD75P1-S3/ A1SD75P2-S3/ A1SD75P3-S3 models

The following shows the comparisons between the QD75 and the conventional positioning modules A1SD75P1-S3/A1SD75P2-S3/A1SD75P3-S3.

(1) Comparisons of performance specifications

Model		QD75P1N/QD75P1 QD75D1N/QD75D1	QD75P2N/QD75P2 QD75D2N/QD75D2	QD75P4N/QD75P4 QD75D4N/QD75D4	A1SD75P1 -S3	A1SD75P2 -S3	A1SD75P3 -S3	
No. of control axes		1	2	4	1	2	3	
No. of positioning data items			600/axis * 1					
	2-axis linear interpolation 3-axis linear		× O O			×	0	0
D 141			^`			/\	0)
Position control	interpola		×	×	0	×	×	×
interpolation functions	4-axis li interpola	near	×	×	0	×	×	×
	2-axis contempola		×	0	0	×	0	0
	Position	control					0	
		1-axis	0	0	0	0	0	0
		2-axis linear	×	0	0	×	×	×
	Speed	interpolation 3-axis linear						
Positioning	control	interpolation	×	×	0	×	×	×
systems		4-axis linear	×	×	0	×	×	×
		interpolation	^	^	U	^	^	^
	Speed-position			\circ				
	switching control Position-speed		0					
		g control		0		×		
Positioning range *2		<absolute system=""> -214748364.8 to 214 -21474.83648 to 214 0 to 359.99999 (degi-2147483648 to 214 <incremental 214<="" p="" system-214748364.8="" to=""> -21474.83648 to 214 -21474.83648 to 214 -21474.83648 to 214 <speed-position (di="" (j.="" (pu)<="" 0="" 21474.83647="" 214748364.7="" or="" p="" to=""> 0 to 21474.83647 (pu) 0 to 2147483647 (pu)</speed-position></incremental></absolute>	174.83647 (inch) 17ee) 17483647 (pulse) 17483647 (pulse) 17483647 (inch) 174.83647 (degree) 17483647 (pulse)	ng controls>	/-134217 -21474.8364 /-1342.17 0 to 359.999 /0 to 359 -214748364 /-134217 <incrementa -1342.17="" -21474.8364="" 0="" 134.="" 21474.8="" 21474.83="" 21474.8<="" <speed-pos="" th="" to=""><th>8 to 2147483 72.8 to 13421 8 to 21474.83 728 to 1342.7 99 (degree) 999999 (degree) 8 to 21474836 728 to 13421 8 to 2147483 72.8 to 13421 8 to 21474.83 728 to 1342.7 18 to 21474.83 1728 to 1342.7 18 to 21474.83 1728 to 1342.7 1828 to 1342.7 1828</th><th>772.7 (\(\mu \) m) 6447 (inch) 17727 (inch) e) 647 (pulse) 7727 (pulse) 64.7 (\(\mu \) m) 772.7 (\(\mu \) m) 1772.7 (inch) 1772.7 (inch) 1772.7 (inch) 1772.7 (pulse) 1772.7 (pulse) 1772.7 (pulse) 1 control>))))) ee)</th></incrementa>	8 to 2147483 72.8 to 13421 8 to 21474.83 728 to 1342.7 99 (degree) 999999 (degree) 8 to 21474836 728 to 13421 8 to 2147483 72.8 to 13421 8 to 21474.83 728 to 1342.7 18 to 21474.83 1728 to 1342.7 18 to 21474.83 1728 to 1342.7 1828	772.7 (\(\mu \) m) 6447 (inch) 17727 (inch) e) 647 (pulse) 7727 (pulse) 64.7 (\(\mu \) m) 772.7 (\(\mu \) m) 1772.7 (inch) 1772.7 (inch) 1772.7 (inch) 1772.7 (pulse) 1772.7 (pulse) 1772.7 (pulse) 1 control>))))) ee)	

	Model	QD75P1N/QD75P1	QD75P2N/QD75P2	QD75P4N/QD75P4	A1SD75P1	A1SD75P2	A1SD75P3
Item	Woder	QD75D1N/QD75D1	QD75D2N/QD75D2		-S3	-S3	-S3
Speed command range *2		QD75P□N/QD75D□N: 0.01 to 2000000.00 (mm/min) 0.001 to 2000000.000 (inch/min) 0.001 to 2000000.000 (degree/min) 1 to 4000000 (pulse/s) QD75P□/QD75D□: 0.01 to 2000000.000 (mm/min) 0.001 to 2000000.000 (inch/min) 0.001 to 2000000.000 (degree/min) 1 to 1000000 (pulse/s)			0.01 to 6000000.00 (mm/min) /0.01 to 375000.00 (mm/min) 0.001 to 600000.000 (inch/min) /0.001 to 37500.000 (inch/min) 0.001 to 600000.000 (degree/min) /0.001 to 37500.000 (degree/min) 1 to 1000000 (pulse/s) /1 to 62500 (pulse/s)		m/min) nch/min) nch/min) gree/min) gree/min) e/s)
method)	function (OPR		○ (6 types) *4			O (6 types)	
JOG operation			<u> </u>			0	
Inching operat Manual pulse						×	
function	generator	1	generator/module *	5	1 (generator/axis >	6
Acceleration /deceleration	Trapezoidal acceleration /deceleration S-curve		0			0	
processing	acceleration /deceleration		0			0	
Acceleration/ deceleration	No. of patterns	Acceleration time and	deceleration time can (4 patterns each)	be set independently.		time and dece ependently. (4	
time	Setting range		1 to 8388608ms				ns selectable
Compensation	ı	Electronic gears,	backlash compensatio	n, near pass *6	Electronic gears, backlash compensation, near pass * 6		
Error display			Error LED		17-segment LED)
History data st error, warning)	Provi	ded (3 types, 16 items	/axis)		(4 types, 16 ite	
Data storage of	destination	Flash ROM (battery-less backup) A6CON1 (Soldering type, sold separately)				M (battery-less	
Connection co	onnector	A6CON2 (Crimp type, sold separately) A6CON4 (Soldering type, usable for straight out and diagonal out, sold separately)			'E (Soldering ty 000EL (Crimp t separately)		
Applicable wire	e size	A6CON1, A6CON4: 0.3mm² (22AWG)		10136-3000VE: Approx. 0.05 to 0.24mm ² (30 to 24AWG)			
, ppilodolo Will	0 0120	A6CON2: 0.088 to 0.24mm ² (28 to 24AWG)		10136-600	00EL: Approx. ((28AWG)	0.088mm ²	
Command pul	se output system		075P□N/QD75P□: Open collector 75D□N/QD75D□: Differential driver		Both differential driver and open collector available		
Max. output po	ulse	When connected with open collector: 200kpps When connected with differential driver: 4Mpps (QD75D□N), 1Mpps (QD75D□)			When connected with open collector: 200kpps When connected with differential driver: 400kpps		
Max. connection distance between servos		When connecte	onnected with open collector: 2m (6.56ft) nected with differential driver: 10m (32.79ft)		When connected with open collector: 2r (6.56ft) When connected with differential driver 10m (32.79ft)		
Internal current consumption [5VDC]		QD75P1N: 0.29A QD75D1N: 0.43A QD75P1: 0.40A QD75D1: 0.52A	QD75P2N: 0.30A QD75D2N: 0.45A QD75P2: 0.46A QD75D2: 0.56A	QD75P4N: 0.36A QD75D4N: 0.66A QD75P4: 0.58A QD75D4: 0.82A		0.7A or less	
Flash ROM write count			Max. 100000 times		M	ax. 100000 time	es
No. of occupied I/O points No. of module occupied slots			32 1			32 1	
Outline dimensions		98(3.86)(H)×2)(D)mm (inch)	130(5.12)(H)×	34.5(1.36)(W)> mm (inch)	93.6(3.69)(D)
Weight		QD75P1N: 0.14kg (0.31lb) QD75D1N: 0.15kg (0.33lb) QD75P1: 0.15kg	QD75P2N: 0.14kg (0.31lb) QD75D2N: 0.15kg (0.33lb) QD75P2: 0.15kg	QD75P4N: 0.16kg (0.35lb) QD75D4N: 0.16kg (0.35lb) QD75P4: 0.16kg		0.35kg (0.77lb)	
		(0.33lb) QD75D1:0.15kg (0.33lb)	(0.33lb) QD75D2: 0.15kg (0.33lb)	(0.35lb) QD75D4:0.16kg (0.35lb)			

	Model	QD75P1N/QD75P1	QD75P2N/QD75P2	QD75P4N/QD75P4	A1SD75P1	A1SD75P2	A1SD75P3	
Item		QD75D1N/QD75D1	QD75D2N/QD75D2	QD75D4N/QD75D4	-S3	-S3	-S3	
	STRT signal	×	× (integrated into "CHG") External command signal (External start or speed-position switching selectable with parameters) ×				signal)	
I/O signal for external	CHG signal						ing signal	
devices	In-position (INP)						or)	
	Signal logic switching	tching				Command pulse output signal only		
	Connection with peripheral devices	Connection via CPU module, Q Corresponding Serial Communication Module, Q Corresponding MELSEC/H Remote I/O Module		Di	rect connection	on		
Peripheral devices	AD71TU		×		×			
(data AD75TU		×			0			
setting, etc.)	A6GPP, A6PHP		×			0		
	DOS/V personal computer				0			

 \bigcirc : Possible, \times : Not possible

- QD75: Movement amount = "Number of pulses" × "Unit setting" × "Manual pulse generator 1 pulse input magnification" (refer to Section 11.4.1.)
- A1SD75: Movement amount = "Number of pulses" × "Manual pulse generator 1 pulse input magnification"
- * 6: The near pass function is valid only during the continuous path control. (A1SD75: Selected with parameters, QD75: Standard function)

(2) Function comparisons

Functions added to those of A1SD75P1-S3/A1SD75P2-S3/A1SD75P3-S3

	Added functions	Remarks	
External I/O signal lo	ogic switching function	Refer to Section 13.4.	
Inching operation		Refer to Section 11.3.	
Target position chan	ge function	Refer to Section 12.5.5.	
Multiple axes simulta	aneous start control	Refer to Section 10.5.	
Control systems	3-axis linear interpolation control 4-axis linear interpolation control 3-axis fixed-feed control 4-axis fixed-feed control 2-axis speed control 3-axis speed control 4-axis speed control Position-speed switching control NOP instruction LOOP instruction, LEND instruction	Refer to CHAPTER 9.	
Dedicated instructions	Absolute position restoration Positioning start Teaching Flash ROM writing Parameter initialization	Refer to CHAPTER 14.	
Automatic refresh of	intelligent function modules	Refer to GX Configurator-QP Operating Manual.	
Output hold/clear pa	rameter setting during CPU module error stop	Refer to QCPU User's Manual (Function Explanation, Program Fundamentals).	
Flash ROM write lim		Refer to Section 13.3.	
Speed-position switch	ching control (ABS mode)	Refer to Section 9.2.19.	
Pre-reading start fun	ection	Refer to Section 12.7.7.	
External I/O signal m	nonitor function	Refer to Section 13.5.	
Multiple PLC compa	tible function	Refer to QCPU User's Manual (Multiple CPU System).	
Deceleration start fla	ng function	Refer to Section 12.7.8	
Stop command proc	essing for deceleration stop function	Refer to Section 12.7.9	

^{* 1:} Up to 100 data items/axis of positioning data (No. 1 to 100) can be set using the buffer memory. The positioning data in the buffer memory is not backed up.

^{* 2:} Indicates the standard mode/stepping motor mode about A1SD75P __-S3.

^{* 3:} Indicates the INC mode/ABS mode in speed-position switching control.

^{*} 4: The deviation counter clear signal output time can be set with parameters.

st 5: The movement amount against the number of pulses input from manual pulsar is as follows:

Functions deleted from those of A1SD75P1-S3/A1SD75P2-S3/A1SD75P3-S3

Deleted functions	Remarks		
Stepping motor mode	_		
OPR operation error (Error code: 208)	_		
Fast machine OPR	_		
Special start (stop)	_		
	In the QD75, the start block area on the buffer memory is		
Indirect designation	expanded to five blocks (0 to 4). Each start block can be directly		
	designated with positioning start No. (7000 to 7004).		
Block transfer	With the A1SD75, this interface is used to set positioning data		
	Nos. 101 to 600 that do not exist on the buffer memory.		
Positioning data I/F	Since all positioning data can be set in the buffer memory with the		
	QD75, this function is deleted.		
Start history storage during error	The contents are the same as those of the start history. Therefore,		
Start History Storage during error	the QD75 stores only the start history.		
	These data were deleted because they can be displayed in system		
System monitor data (module type, OS information)	monitor "Module's detailed information" of GX Developer.		
	(Refer to GX Developer Operating Manual.)		

Functions changed from those of A1SD75P1-S3/A1SD75P2-S3/A1SD75P3-S3

Changed functions	Descriptions
Software stroke limit function	 The limit check of arc address is carried out only when a sub point is designated. It is not carried out when a center point is designated. The software stroke limit check during speed control is carried out in the following cases: When the software stroke limit is applied to the current feed value with Pr.14 and the current feed value is updated with Pr.21. When the software stroke limit is applied to the machine feed value. If an attempt is made to change the current value but the designated address is out of the software stroke limit range, the attempt is considered as an error and the current value is not changed. The conventional models feature three types of software stroke limit error codes for upper limit and lower limit respectively. With the QD75, errors for the software stroke upper limit are integrated into error code 507, and errors for the lower limit are integrated into error code 508. Error codes 509 to 512 are deleted.
Current value changing M code function	An error occurs when the designated new current value is out of the software stroke limit range. The M code setting value is valid during the positioning data current value changing instruction.
Acceleration/deceleration control	 An error occurs when the command frequency value calculated from the speed limit value is out of the maximum command frequency of the positioning module being used. Only two-word type (1 to 8388608ms) can be used as the setting value for the acceleration/deceleration time. (The switch between 1-word type and 2-word type is eliminated.)

Changed functions		Descriptions	
Stop process and restart after stop Positioning operation stop	 "Peripheral side (emergency) stop" is deleted from the stop causes of Stop group 2 sudden stop selection. "Test mode faul in the stop causes of Stop group 3 sudden stop selection is changed to be in the stop causes of Stop group 2 sudden stop selection. "Stop (QD75 peripheral)" is added to the stop causes of Stop group 3 sudden stop selection. Error code 100 (Peripheral device stop during operation) is deleted. "CPU module error occurrence" is added to the stop causes of Stop group 2 sudden stop selection. 		
READY signal (X0)	OFF	A1SD75 Normal (READY) Not READY	QD75 Not READY /WDT error Normal
	ON The No. of connectab	/WDT error le manual pulse genera	(READY)
Manual pulse generator operation Axis operation status	generator/1 axis to 1 generator/1 module. "Step stopped" is changed to "Stopped" and "Step error occurring" is changed to "Error occurring". "In position control for position-speed switching control", "In speed		
Continuous path control	control for position-speed switching control", and "In absolute position restoration" are added. A1SD75: If the reference axis operates in reverse direction, the control is internally changed into the continuous positioning control (restart after deceleration stop). QD75: Even if the reference axis operates in reverse direction with interpolation, the control remains as the continuous path control. (In single-axis operation, the operation is the same as that of the A1SD75.)		
Near pass		th control, only the near	pass function is
2-axis interpolation • 2-axis linear interpolation • 2-axis fixed-feed • Circular interpolation • 2-axis speed control	The interpolation target axis can be randomly set with a positioning identifier.		
Step function	"Step stopped" is changed to "Stopped" and "Step error occurring" is changed to "Error occurring" in the axis operation status parameters. The restart command for step start information (02H) is deleted. The step operation is restarted with the restart command.		
Command in-position function	The command in-position width is expanded. • A1SD75 : 1 to 32767000 • QD75 : 1 to 2147483647		
Control unit "degree" handling	The operating direction can be designated even for the ABS control in the unit of "degree".		

Changed functions	Descriptions				
Positioning start No.	No. 9004 (Multiple axes simultaneous start control) is added. Nos. 7004 to 7010 (block start designation) and 8000 to 8049 (indirect designation) are deleted.				
Block start data	With the QD75, the number of blocks is changed to 5 (7000 to 7004). (With the A1SD75, this data is called "positioning start information".)				
Special start data "Simultaneous start"	The simultar	neous start is possible up to 4 axes.			
List of errors/warnings	Refer to the following "Error code comparisons" and "Warning code comparisons".				
Start history	The configuration of "start information" and "start No." is changed so that the start No. can be directly checked.				
Synchronization flag (X1)		PU module starting method is set to with the synchronization flag (X1) si			
Basic parameter 1 " Pr.5 Pulse output mode"	When the programmable controller is turned ON or the CPU module is reset, the valid value is only the first value after the PLC READY signal (Y0) turns from OFF to ON.				
		A1SD75	QD75		
Detailed parameters " Pr.15 Software stroke limit valid/invalid setting"	0 (Eactory setting)	Software stroke limits invalid for manual operation	Software stroke limits valid for manual operation		
[F1.13] Software shoke littlik valid/litvalid Setting	1	Software stroke limits valid for manual operation	Software stroke limits invalid for manual operation		

Error code comparisons

E-may manage	Error	code
Error name	A1SD75	QD75
Outside bias speed range	913	906
Illegal sudden stop deceleration time	962	961
Stop group 1 sudden stop selection error	963	962
Stop group 2 sudden stop selection error	964	963
Stop group 3 sudden stop selection error	965	964
OPR torque limit value error	991	995
Setting for the movement amount after near-point dog ON error	992	991
OPR acceleration time selection error	993	992
OPR deceleration time selection error	994	993

Error type	Added	Deleted
Fatal error	002	51, 52
Common	_	100, 108
OPR, Absolute position restoration	213, 214	208
JOG/Inching operation	301	_
Manual pulse generator operation	_	_
Positioning operation	523, 535, 545, 546	509 to 512
I/F	800 to 806	_
Parameter	920, 935, 990, 996	931, 933, 938, 971, 999

Error whose name is changed: Error code 967

A1SD75: External start selection error

QD75: External command function selection error

Warning code comparisons

Warning type	Added	Deleted
Fatal warning	_	51, 52
Common	110	101, 105 to 108, 115
OPR, Absolute position restoration	_	_
JOG operation/Inching operation	_	_
Manual pulse generator operation	_	402
Positioning operation	516, 517, 518	_
I/F	_	_
Parameter	_	900

Warning whose name is changed: Warning code 512

A1SD75 : Illegal external start function
QD75 : Illegal external command function

(3) Input/output (X/Y) comparisons

(-) []()								
		Input (X)						
	Name	A1SD75	QD75					
(QD75//	A1SD75) READY	X00*1	X00*1					
Axis 1		X01	X10					
Axis 2	Ctart complete	X02	X11					
Axis 3	Start complete	X03	X12					
Axis 4		_	X13					
Axis 1		X04*2	X0C					
Axis 2	BUSY	X05*2	X0D					
Axis 3	6051	X06*2	X0E					
Axis 4		_	X0F					
Axis 1		X07	X14					
Axis 2	Positioning	X08	X15					
Axis 3	complete	X09	X16					
Axis 4		_	X17					
Axis 1		X0A	X08					
Axis 2	Error detection	X0B	X09					
Axis 3	Enoi detection	X0C	X0A					
Axis 4		_	X0B					
Axis 1		X0D	X04					
Axis 2	M code ON	X0E	X05					
Axis 3	W code ON	X0F	X06					
Axis 4			X07					
Synchro	onization flag	_	X01					
Use prohibited		X10 to X1F	X02, X03 X18 to X1F					

	Outpu	ıt (Y)	
	Name	A1SD75	QD75
Axis 1		Y10	Y10
Axis 2	Desitioning start	Y11	Y11
Axis 3	Positioning start	Y12	Y12
Axis 4		-	Y13
Axis 1		Y13	Y04
Axis 2	Avia atan	Y14	Y05
Axis 3	Axis stop	Y1C	Y06
Axis 4		ı	Y07
Axis 1	Forward run JOG start	Y16	Y08
Axis 1	Reverse run JOG start Y17		Y09
Axis 2	Forward run JOG start	Y18	Y0A
Axis 2	Reverse run JOG start	Y19	Y0B
Axis 3	Forward run JOG start	Y1A	Y0C
Axis 3	Reverse run JOG start	Y1B	Y0D
Axis 4	Forward run JOG start	-	Y0E
Axis 4	Reverse run JOG start	-	Y0F
PLC RE	ADY	Y1D	Y00
Axis 1		-	Y14
Axis 2	Execution prohibition	-	Y15
Axis 3	flag	-	Y16
Axis 4		_	Y17
Use pro	hibited	Y00 to Y0F Y1E to Y1F	Y01 to Y03 Y18 to Y1F

^{* 1:} The ON/OFF statuses for READY are different between the QD75 and A1SD75.

	Not READY/WDT error	READY
QD75	OFF	ON
A1SD75	ON	OFF

^{* 2:} When using a program example of No.10 Reset program described in Section 6.4 Positioning program examples of the "A1SD75P1-S3/P2-S3/P3-S3, AD75P1-S3/P2-S3/P3-S3 Positioning Module User's Manual" for the QD75, replace "X4 (BUSY signal for Axis 1)" with "DXC (Direct access input of BUSY signal for Axis 1)". Do the same thing for programs for Axis 2 and Axis 3.

^{*:} Refer to "Section 15.3 List of errors" and "Section 15.4 List of warnings" for details on error codes and warning codes.

(4) Buffer memory address comparisons

The following table shows the buffer memory addresses of the QD75 (Axis 1 to Axis 3) corresponding to the items of the A1SD75.

The shaded area shows the differences between the A1SD75 and QD75.

	Buffer memory address								
Items of A1SD75		A1SD75	T		QD75				
	Axis 1	Axis 2	Axis 3	Axis 1	Axis 2	Axis 3			
Pr.1 Unit setting	0	150	300	0	150	300			
Pr.2 No. of pulses per rotation (Ap)	1	151	301	1	151	301			
Pr.3 Movement amount per rotation (AI)	2	152	302	2	152	302			
Pr.4 Unit magnification (Am)	3	153	303	3	153	303			
Pr.5 Pulse output mode	4	154	304	4	154	304			
Pr.6 Rotation direction setting	5	155	305	5	155	305			
Pr.7 Speed limit value	6	156	306	10	160	310			
	7	157	307	11	161	311			
Pr.8 Acceleration time 0	8	158	308	12	162	312			
	9 10	159 160	309 310	13 14	163 164	313 314			
Pr.9 Deceleration time 0	10	161	310	15	165	314			
	12	162	312	6	156	306			
Pr.10 Bias speed at start	13	163	313	7	157	307			
Pr.11 Stepping motor mode selection amount	14	164	314	_	-	-			
Pr.12 Backlash compensation amount	15	165	315	17	167	317			
Pr.13 Software stroke limit upper limit value	16	166	316	18	168	318			
11.10 Software stroke inflit upper inflit value	17	167	317	19	169	319			
Pr.14 Software stroke limit lower limit value	18	168	318	20	170	320			
	19	169	319	21	171	321			
Pr.15 Software stroke limit selection	20	170	320	22	172	322			
Pr.16 Software stroke limit valid/invalid setting	21	171	321	23	173	323			
Pr.17 Command in-position width	22	172	322	24	174	324			
11:17 Command in position with	23	173	323	25	175	325			
Pr.18 Torque limit setting value	24	174	324	26	176	326			
Pr.19 M code ON signal output timing	25	175	325	27	177	327			
Pr.20 Speed switching mode	26	176	326	28	178	328			
Pr.21 Interpolation speed designation method	27	177	327	29	179	329			
Pr.22 Current feed value during speed control	28	178	328	30	180	330			
Pr.23 Manual pulse generator selection	29	179	329	-	-	-			
Pr.24 Logic selection for pulse output to the drive unit	30	180	330	-	-	-			
Pr.25 Size selection for acceleration/deceleration time	31	181	331	-	_	-			
Pr.26 Acceleration time 1	36	186	336	36	186	336			
	37	187	337	37	187	337			
Pr.27 Acceleration time 2	38 39	188 189	338 339	38 39	188 189	338 339			
	১৬	109	JJ9	აყ	109	১১৬			

	Buffer memory address								
Items of A1SD75		A1SD75			QD75				
	Axis 1	Axis 2	Axis 3	Axis 1	Axis 2	Axis 3			
Pr.28 Acceleration time 3	40	190	340	40	190	340			
7.20 Acceleration time 5	41	191	341	41	191	341			
Pr.29 Deceleration time 1	42	192	342	42	192	342			
	43	193	343	43	193	343			
Pr.30 Deceleration time 2	44	194	344	44	194	344			
	45 46	195 196	345 346	45 46	195 196	345 346			
Pr.31 Deceleration time 3	47	197	347	47	197	347			
	48	198	348	48	198	348			
Pr.32 JOG speed limit value	49	199	349	49	199	349			
Pr.33 JOG operation acceleration time selection	50	200	350	50	200	350			
Pr.34 JOG operation deceleration time selection	51	201	351	51	201	351			
Pr.35 Acceleration/deceleration process selection	52	202	352	52	202	352			
Pr.36 S-curve ratio	53	203	353	53	203	353			
Pr.37 Sudden stop deceleration time	54	204	354	54	204	354			
11.57 Sudden stop deceleration time	55	205	355	55	205	355			
Pr.38 Stop group 1 sudden stop selection	56	206	356	56	206	356			
Pr.39 Stop group 2 sudden stop selection	57	207	357	57	207	357			
Pr.40 Stop group 3 sudden stop selection	58	208	358	58	208	358			
Pr.41 Positioning complete signal output time	59	209	359	59	209	359			
Pr.42 Allowable circular interpolation error width	60	210	360	60	210	360			
[D. 6] E. J. J. C. C. J. C.	61	211	361	61	211	361			
Pr.43 External start function selection (QD75: Pr.42 External command function selection)	62	212	362	62	212	362			
Pr.44 Near pass mode selection for path control	66	216	366	_	_	_			
Pr.45 OPR method	70	220	370	70	220	370			
Pr.46 OPR direction	71	221	371	71	221	371			
[D. 47] OD. 11	72	222	372	72	222	372			
Pr.47 OP address	73	223	373	73	223	373			
Pr.48 OPR speed	74	224	374	74	224	374			
Third of Repost	75	225	375	75	225	375			
Pr.49 Creep speed	76	226	376	76	226	376			
Pr.50 OPR retry	77 78	227 228	377 378	77 78	227 228	377 378			
Pr.51 OPR dwell time	78	229	379	79	229	379			
Pr.52 Setting for the movement amount after near-	80 81	230 231	380 381	80 81	230 231	380 381			
point dog ON Pr.53 OPR acceleration time selection									
	82	232	382	82	232	382			
Pr.54 OPR deceleration time selection	83	233	383	83	233	383			
Pr.55 OP shift amount	84 85	234 235	384 385	84 85	234 235	384 385			
Pr.56 OPR torque limit value	86	236	386	86	236	386			
Pr.57 Speed designation during OP shift	88	238	388	88	238	388			
Pr.58 Dwell time during OPR retry	89	239	389	89	239	389			
		200	303	00	200	505			

		Buffer memory address					
Items of A1SD75		A1SD75	QD75				
		Common for axis 1, 2, 3	Common for axis 1, 2, 3, 4				
Md.1 In test mode flag		450	1200				
Md.2 Module name		451	-				
Md.3 OS type		452 453 454 455	-				
Md.4 OS version		456 457	-				
Md.5 Clock data (hour: minute)		460	-				
Md.6 Clock data (second: 100ms)		461	-				
(Pointer number)		(0) to	(15)				
Md.7 Start axis (QD75: Md.3 Start information)		462 to 537	1212 to 1287				
Md.8 Operation type (QD75: Md.4 Start No.)		463 to 538	1213 to 1288				
Md.9 Start Hour: minute	Start history	464 to 539	1214 to 1289				
(QD75: Md.5 Start Day: Hour)							
Md.10 Start Second: 100ms (QD75: Md.3 Start Minute: second)		465 to 540	1215 to 1290				
Md.11 Error judgment		466 to 541	1216 to 1291				
Md.12 Start history pointer		542	1292				
(Pointer number)		(0) to (15)	_				
Md.13 Start axis		543 to 618	-				
Md.14 Operation type	Start	544 to 619	-				
Md.15 Start Hour: minute	history	545 to 620	-				
Md.16 Start Second: 100ms	during errors	546 to 621	-				
Md.17 Error judgment		547 to 622	-				
Md.18 Start history storage during error		623	-				
(Pointer number)		(0) to	(15)				
Md.19 Axis in which the error occurred		624 to 684	1293 to 1353				
Md.20 Axis error No.		625 to 685	1294 to 1354				
Md.21 Axis error occurrence Hour: minute] [
(QD75: Md.11 Axis error occurrence (Day: Hour))	Error history	626 to 686	1295 to 1355				
Md.22 Axis error occurrence Second: 100ms (QD75: Md.12 Axis error occurrence (Minute: second))	Tilistol y	627 to 687	1296 to 1356				
Md.23 Error history pointer		688	1357				

		Buffer memory address				
Items of A1SD75		A1SD75	QD75			
		Common for axis 1, 2, 3	Common for axis 1, 2, 3, 4			
(Pointer number)		(0) to	0 (15)			
Md.24 Axis in which the warning occurred		689 to 749	1358 to 1418			
Md.25 Axis warning No.		690 to 750	1359 to 1419			
Md.26 Axis warning occurrence Hour: minute		2011				
(QD75: Md.16 Axis warning occurrence (Day: Hour))	Warning history	691 to 751	1360 to 1420			
Md.27 Axis warning occurrence Second: 100ms (QD75: Md.17 Axis warning occurrence (Minute: second))		692 to 752	1361 to 1421			
Md.28 Warning history pointer		753	1422			

	Buffer memory address							
Items of A1SD75		A1SD75		QD75				
	Axis 1	Axis 2	Axis 3	Axis 1	Axis 2	Axis 3		
Md.29 Current feed value	800	900	1000	800	900	1000		
[Md.29] Current leed value	801	901	1001	801	901	1001		
Md.30 Machine feed value	802	902	1002	802	902	1002		
	803	903	1003	803	903	1003		
Md.31 Feedrate	804	904	1004	804	904	1004		
Md.32 Valid M code	805 806	905 906	1005 1006	805 808	905 908	1005		
Md.33 Axis error No.	807	907	1007	806	906	1006		
Md.34 Axis warning No.	808	908	1008	807	907	1007		
Md.35 Axis operation status	809	909	1009	809	909	1009		
	810	910	1010	810	910	1010		
Md.36 Current speed	811	911	1011	811	911	1011		
Md.37 Axis feedrate	812	912	1012	812	912	1012		
[Mid.07] AND IECUIAIC	813	913	1013	813	913	1013		
Md.38 Speed-position switching control positioning	814	914	1014	814	914	1014		
amount	815	915	1015	815	915	1015		
Md.39 External input/output signal	816	916	1016	816	916	1016		
Md.40 Status	817	917	1017	817	917	1017		
Md.41 Target value	818	918	1018	818	918	1018		
[mail:] raigst tales	819	919	1019	819	919	1019		
Md.42 Target speed	820	920	1020	820	920	1020		
	821 822	921 922	1021 1022	821	921	1021		
Md.43 OP absolute position	823	922	1022	-	-	-		
	824	924	1024	824	924	1024		
Md.44 Movement amount after near-point dog ON	825	925	1025	825	925	1025		
Md.45 Torque limit stored value	826	926	1026	826	926	1026		
Md.46 Special start data instruction code setting value	827	927	1027	827	927	1027		
Md.47 Special start data instruction parameter setting value	828	928	1028	828	928	1028		
Md.48 Start positioning data No. setting value	829	929	1029	829	929	1029		
Md.49 In speed limit flag	830	930	1030	830	930	1030		
Md.50 In speed change processing flag	831	931	1031	831	931	1031		
Md.51 Start data pointer being executed	832	932	1032	834	934	1034		
Md.52 Last executed positioning data No.	833	933	1033	837	937	1037		
Md.53 Repetition counter (QD75: Md.41 Special start repetition counter)	834	934	1034	832	932	1032		
Md.54 Positioning data No. being executed	835	935	1035	835	935	1035		
Md.55 Block No. being executed	836	936	1036	836	936	1036		
Md.56 Positioning data being executed	838 to 847	938 to 947	1038 to 1047	838 to 847	938 to 947	1038 to 1047		

	Buffer memory addres							
Items of A1SD75		A1SD75		QD75				
	Axis 1	Axis 2	Axis 3	Axis 1	Axis 2	Axis 3		
Cd.1 Clock data setting (hour)		1100			_			
Cd.2 Clock data setting (minute, second)		1101		-				
Cd.3 Clock data writing		1102			_			
Cd.4 Target axis		1103			-			
Cd.5 Positioning data No.		1104			_			
Cd.6 Write pattern		1105			-			
Cd.7 Read/write request		1106			-			
Cd.8 Read/write positioning data I/F		1108 to 1137			-			
Cd.9 Flash ROM write request		1138			-			
Cd.10 Parameter initialization request		1139			1901			
Cd.11 Positioning start No.	1150	1200	1250	1500	1600	1700		
Cd.12 Axis error reset	1151	1201	1251	1502	1602	1702		
Cd.13 Restart command	1152	1202	1252	1503	1603	1703		
Cd.14 M code OFF request	1153	1203	1253	1504	1604	1704		
Cd.15 New current value	1154 1155	1204 1205	1254 1255	1506 1507	1606 1607	1706 1707		
Cd.16 New speed value	1156 1157	1206 1207	1256 1257	1514 1515	1614 1615	1714 1715		
Cd.17 Speed change request	1158	1207	1258	1516	1616	1716		
Cd.18 Positioning operation speed override	1159	1209	1259	1513	1613	1713		
Cd.19 JOG speed	1160	1210	1260	1518	1618	1718		
Cu. 19 100 speed	1161	1211	1261	1519	1619	1719		
Cd.20 Speed-position switching enable flag	1163	1213	1263	1528	1628	1728		
Cd.21 Speed-position switching control movement	1164	1214	1264	1526	1626	1726		
amount change register	1165	1215	1265	1527	1627	1727		
Cd.22 Manual pulse generator enable flag	1167	1217	1267	1524	1624	1724		
Cd.23 Manual pulse generator 1 pulse input magnification	1168 1169	1218 1219	1268 1269	1522 1523	1622 1623	1722 1723		
Cd.24 OPR return request flag OFF request	1170	1220	1270	1521	1621	1721		
Cd.25 External start valid								
(QD75: Cd.8 External command valid)	1171	1221	1271	1505	1605	1705		
Cd.26 Step valid flag	1172	1222	1272	1545	1645	1745		
Cd.27 Step mode	1173	1223	1273	1544	1644	1744		
Cd.28 Step start information	1174	1224	1274	1546	1646	1746		
Cd.29 Skip command	1175	1225	1275	1547	1647	1747		
Cd.30 New torque value	1176	1226	1276	1525	1625	1725		
Cd.31 Positioning starting point No.	1178	1228	1278	1501	1601	1701		
Cd.32 Interrupt request during continuous operation	1181	1231	1281	1520	1620	1720		
Cd.33 New acceleration time value	1184	1234	1284	1508	1608	1708		
	1185	1235	1285	1509	1609	1709		

					Buffer mem	ory address		
	Items of A1SD75			A1SD75			QD75	
			Axis 1	Axis 2	Axis 3	Axis 1	Axis 2	Axis 3
Cd.34	New deceleration time value		1186	1236	1286	1510	1610	1710
00.57	New deciciation time value		1187	1237	1287	1511	1611	1711
Cd.35	Acceleration/deceleration time change of	during	1188	1238	1288	1512	1612	1712
	speed change, enable/disable selection		1100	1200	1200	1012	1012	17 12
	Da.1 Operation pattern							
	Da.2 Control system		4000	0000	0000	0000	0000	44000
	Da.3 Acceleration time No.		1300	2300	3300	2000	8000	14000
	Da.4 Deceleration time No.							
,	Da.9 M code/condition data		1301	2301	3301	2001	8001	14001
	Da.8 Dwell time/JUMP destination		4000	0000	0000	0000	0000	44000
-	positioning data No.	NO.1	No.1 1302	2302	3302	2002	8002	14002
*	Da.7 Command speed		1304	2304	3304	2004	8004	14004
data	Barr Command Speed		1305	2305	3305	2005	8005	14005
Positioning data	Da.5 Positioning address/movement		1306	2306	3306	2006	8006	14006
ifior	amount		1307	2307	3307	2007	8007	14007
Pos	Da.6 Arc address		1308	2308	3308	2008	8008	14008
			1309	2309	3309	2009	8009	14009
	No.2		1310 to	2310 to	3310 to	2010 to	8010 to	14010 to
	No.3		1319	2319	3319	2019	8019	14019
			1320 to	2320 to	3320 to	2020 to	8020 to	14020 to
			1329	2329	3329	2029	8029	14029
	to		to	to	to	to	to	to
	No.100		2290 to	3290 to	4290 to	2990 to	8990 to	14990 to
			2299	3299	4299	2999	8999	14999

st 1: With the QD75, the positioning data buffer memory addresses are Nos. 1 to 600.

Refer to Appendix 13 "List of buffer memory addresses" for details.

									Buffe	er mem	ory add	dress				
		ı	tems of A1SD75	•			A1S	D75					QE)75		
				,	Axi	s 1	Axis 2		Axis 3		Axis 1		Axis 2		Axis 3	
	Da.10 Shape Da.11 Start data No. Da.12 Special start instruction Da.13 Parameter 2nd point 3rd point		1st point	4300	4350	4550	4600	4800	4850	26000	26050	27000	27050	28000	28050	
	rt bk		2nd point		4301	4351	4551	4601	4801	4851	26001	26051	27001	27051	28001	28051
	Sta		3rd point		4302	4352	4552	4602	4802	4852	26002	26052	27002	27052	28002	28052
2			to		t		t	1		0	t	0	t	0	t	0
*			50th point		4349	4399	4599	4649	4849	4899	26049	26099	27049	27099	28049	28099
rmatic			.14 Condition target		44	00	46	50	49	00	26 ⁻	100	27	100	28	100
info		Da	.15 Condition operator	. ,												
start		Da	.16 Address	No. 1	44 44		46 46			02 03	26 ²		27102 27103		_	102 103
Positioning start information	đ	Da	.17 Parameter 1	110. 1	4404		46 46	54	4904 4905		26104 26105		27	104 2		104 105
Posi	Condition data	Da	.18 Parameter 2		44	06	46	56	49	06	26	106	27	106	28	106
	ndit					4407 4410 to		4657 4907 4660 to 4910 to			26107 26110 to		27107 27110 to		28107 28110 to	
	Ö		No. 2		4419			4669		19	261		271		28119	
			No. 3		4420 to 4429		467	0 to	492	0 to	2612	20 to	2712	20 to	2812	20 to
			to		44 t		4679 to		4929 to		26129 to		27129 to		28129 to	
			ιο		449			0 to	499		26190 to		27190 to		28190 to	
			No. 10		44		47			99	26			199	28	
g Ç			Start No. 8001		45	00	47	50	50	00		-	_	-		_
Positioning start information	Indire	ct	Start No. 8002		45	01	47	51	50	01	_		_	-		_
ositi sta form	specifica	ition	to		t	0	t	0	t	0	t	0	t	0	t	0
⊑			Start No. 8050		45	49	47	99	50	49	-	-	-	-	-	-
PI C	CPU		Condition judgment target d	ata of			50	50					300	000		
	no area		the condition data	ala UI			t							0		
					50							099				
Target a		a. le !	vale NIa				51						-	<u>- </u>		
Head po		•					51						-			
No. of re			a ilems		5102 5103						-					
Read/wr Read/wr							5110 to									
r Cau/Wi	טוטט	r					J110 l	0 0 109								

^{*2:} With the QD75, it is called "block start data".

Refer to Appendix 13 "List of buffer memory addresses" for details.

^{*3:} With the QD75, the "block start data" and "condition data" in the shaded area are called "start block 0". There are five start blocks: 0 to 4.

(5) Data indication No. comparisons

The following table shows the comparisons of numbers for each symbols (Pr., Md., Cd., and Da.) indicating parameters or positioning data items.

The shaded sections indicate the added or changed items with the QD75.

Parameters

Item	A1SD75	QD75
Unit setting	P	r.1
No. of pulses per rotation (Ap)	P	r.2
Movement amount per rotation (AI)	Pi	r.3
Unit magnification (Am)	Pi	r. 4
Pulse output mode	Pi	r.5
Rotation direction setting	Pi	r.6
Speed limit value	Pr.7	Pr.8
Acceleration time 0	Pr.8	Pr.9
Deceleration time 0	Pr.9	Pr.10
Bias speed at start	Pr.10	Pr.7
Stepping motor mode selection	Pr.11	_
Backlash compensation amount	Pr.12	Pr.11
Software stroke limit upper limit value	Pr.13	Pr.12
Software stroke limit lower limit value	Pr.14	Pr.13
Software stroke limit selection	Pr.15	Pr.14
Software stroke limit valid/invalid setting	Pr.16	Pr.15
Command in-position width	Pr.17	Pr.16
Torque limit setting value	Pr.18	Pr.17
M code ON signal output timing	Pr.19	Pr.18
Speed switching mode	Pr.20	Pr.19
Interpolation speed designation method	Pr.21	Pr.20
Current feed value during speed control	Pr.22	Pr.21
Manual pulse generator selection	Pr.23	_
Logic selection for pulse output to the drive unit	Pr.24	_
Input signal logic selection		Pr.22
Output signal logic selection	_	Pr.23
Manual pulse generator input selection	_	Pr.24
Size selection for acceleration/deceleration time	Pr.25	_
Acceleration time 1	Pr.26	Pr.25
Acceleration time 2	Pr.27	Pr.26

Item	A1SD75	QD75
Acceleration time 3	Pr.28	Pr.27
Deceleration time 1	Pr.29	Pr.28
Deceleration time 2	Pr.30	Pr.29
Deceleration time 3	Pr.31	Pr.30
JOG speed limit value	Pr.32	Pr.31
JOG operation acceleration time selection	Pr.33	Pr.32
JOG operation deceleration time selection	Pr.34	Pr.33
Acceleration/deceleration process selection	Pr.35	Pr.34
S-curve ratio	Pr.36	Pr.35
Sudden stop deceleration time	Pr.37	Pr.36
Stop group 1 sudden stop selection	Pr.38	Pr.37
Stop group 2 sudden stop selection	Pr.39	Pr.38
Stop group 3 sudden stop selection	Pr.40	Pr.39
Positioning complete signal output time	Pr.41	Pr.40
Allowable circular interpolation error width	Pr.42	Pr.41
External start function selection (QD75: Pr.42 External command function selection)	Pr.43	Pr.42
Near pass mode selection for path control	Pr.44	_
OPR method	Pr.45	Pr.43
OPR direction	Pr.46	Pr.44
OP address	Pr.47	Pr.45
OPR speed	Pr.48	Pr.46
Creep speed	Pr.49	Pr.47
OPR retry	Pr.50	Pr.48
OPR dwell time	Pr.51	Pr.49
Setting for the movement amount after near-point dog ON	Pr.52	Pr.50
OPR acceleration time selection	Pr.53	Pr.51
OPR deceleration time selection	Pr.54	Pr.52
OP shift amount	Pr.55	Pr.53
OPR torque limit value	Pr.56	Pr.54
Deviation counter clear signal output time	-	Pr.55
Speed designation during OP shift	Pr.57	Pr.56
Dwell time during OPR retry	Pr.58	Pr.57
Speed-position function selection	-	Pr.150

Monitor data

Item		A1SD75	QD75
In test mode flag		Md.1	
Module name		Md.2	_
OS type		Md.3	_
OS version		Md.4	_
Clock data (hour: minute)	Clock data (hour: minute)		_
Clock data (second: 100ms)		Md.6	_
Start axis (QD75: Md.3 Start information)		Md.7	Md.3
Operation type (QD75: Md.4 Start No.)		Md.8	Md.4
Start Hour: minute (QD75: Md.5 Start Hour)	Otant history	Md.9	Md.5
Start Second: 100ms (QD75: Md.6 Start Minute: second)	Start history	Md.10	Md.6
Error judgment		Md.11	Md.7
Start history pointer		Md.12	Md.8
Start axis		Md.13	_
Operation type		Md.14	_
Start Hour: minute	Start history during	Md.15	_
Start Second: 100ms	errors	Md.16	_
Error judgment		Md.17	_
Start history storage during error		Md.18	_
Axis in which the error occurred		Md.19	Md.9
Axis error No.		Md.20	Md.10
Axis error occurrence Hour: minute		Md.21	Md.11
(QD75: Md.11 Axis error occurrence (Hour))	Error history	IVIQ.Z I	IVIG. I I
Axis error occurrence Second: 100ms (QD75: Md.12 Axis error occurrence (Minute: second))		Md.22	Md.12
Pointer		Md.23	Md.13
Axis in which the warning occurred		Md.24	Md.14
Axis warning No.		Md.25	Md.15
Axis warning occurrence Hour: minute (QD75: Md.16 Axis warning occurrence (Hour))	Warning history	Md.26	Md.16
Axis warning occurrence Second: 100ms (QD75: Md.17 Axis warning occurrence (Minute: second))		Md.27	Md.17
Pointer		Md.28	Md.18

ltem	A1SD75	QD75
No. of write accesses to flash ROM	_	Md.19
Current feed value	Md.29	Md.20
Machine feed value	Md.30	Md.21
Feedrate	Md.31	Md.22
Valid M code	Md.32	Md.25
Axis error No.	Md.33	Md.23
Axis warning No.	Md.34	Md.24
Axis operation status	Md.35	Md.26
Current speed	Md.36	Md.27
Axis feedrate	Md.37	Md.28
Speed-position switching control positioning amount	Md.38	Md.29
External input/output signal	Md.39	Md.30
Status	Md.40	Md.31
Target value	Md.41	Md.32
Target speed	Md.42	Md.33
OP absolute position	Md.43	_
Movement amount after near-point dog ON	Md.44	Md.34
Torque limit stored value	Md.45	Md.35
Special start data instruction code setting value	Md.46	Md.36
Special start data instruction parameter setting value	Md.47	Md.37
Start positioning data No. setting value	Md.48	Md.38
In speed control flag	Md.49	Md.39
In speed change processing flag	Md.50	Md.40
Start data pointer being executed	Md.51	Md.43
Last executed positioning data No.	Md.52	Md.46
Repetition counter (QD75: Md.41 Special start repetition counter)	Md.53	Md.41
Control system repetition counter	_	Md.42
Positioning data No. being executed	Md.54	Md.44
Block No. being executed	Md.55	Md.45
Positioning data being executed	Md.56	Md.47
Deceleration start flag	_	Md.48

Control data

Item	A1SD75	QD75
Clock data setting (hour)	Cd.1	_
Clock data setting (minute, second)	Cd.2	_
Clock data writing	Cd.3	_
Target axis	Cd.4	_
Positioning data No.	Cd.5	_
Write pattern	Cd.6	_
Read/write request	Cd.7	_
Read/write positioning data I/F	Cd.8	_
Flash ROM write request	Cd.9	Cd.1
Parameter initialization request	Cd.10	Cd.2
Positioning start No.	Cd.11	Cd.3
Axis error reset	Cd.12	Cd.5
Restart command	Cd.13	Cd.6
M code OFF request	Cd.14	Cd.7
New current value	Cd.15	Cd.9
New speed value	Cd.16	Cd.14
Speed change request	Cd.17	Cd.15
Positioning operation speed override	Cd.18	Cd.13
JOG speed	Cd.19	Cd.17
Inching movement amount	_	Cd.16
Speed-position switching enable flag	Cd.20	Cd.24
Speed-position switching control movement amount change register	Cd.21	Cd.23
Position-speed switching enable flag	_	Cd.26
Position-speed switching control speed change register	_	Cd.25
Target position change request flag	_	Cd.29
Target position change value (new address)	_	Cd.27
Target position change value (new speed)	_	Cd.28
ABS direction in degrees	_	Cd.40
Manual pulse generator enable flag	Cd.22	Cd.21
Manual pulse generator 1 pulse input magnification	Cd.23	Cd.20
OPR request flag OFF request	Cd.24	Cd.19
External start valid (QD75: Cd.8 External command valid)	Cd.25	Cd.8

Item	A1SD75	QD75
Step valid flag	Cd.26	Cd.35
Step mode	Cd.27	Cd.34
Step start information	Cd.28	Cd.36
Skip command	Cd.29	Cd.37
New torque value	Cd.30	Cd.22
Positioning starting point No.	Cd.31	Cd.4
Interrupt request during continuous operation	Cd.32	Cd.18
Simultaneous starting axis start data No. (Axis 1 start data No.)	-	Cd.30
Simultaneous starting axis start data No. (Axis 2 start data No.)	_	Cd.31
Simultaneous starting axis start data No. (Axis 3 start data No.)	_	Cd.32
Simultaneous starting axis start data No. (Axis 4 start data No.)	_	Cd.33
Teaching data selection	_	Cd.38
Teaching positioning data No.	-	Cd.39
New acceleration time value	Cd.33	Cd.10
New deceleration time value	Cd.34	Cd.11
Acceleration/deceleration time change during speed change, enable/disable selection	Cd.35	Cd.12
Stop command processing for deceleration stop selection	_	Cd.42
Deceleration start flag valid	_	Cd.41

Positioning data, block start data, condition data

Item				QD75
Operation patter			Da.1	
	Control system		Da.2	
	Acceleration time No	0.	Da	a.3
	Deceleration time N	0.	Da.4	
Desitioning data	Axis to be interpolate	ed	_	Da.5
Positioning data	Positioning address	movement amount	Da.5	Da.6
	Arc address		Da.6	Da.7
	Command speed		Da.7	Da.8
	Dwell time/JUMP destination positioning data No.		Da.8	Da.9
	M code/condition data		Da.9	Da.10
		Shape	Da.10	Da.11
	Start block data *	Start data No.	Da.11	Da.12
	Start block data *	Special start instruction	Da.12	Da.13
		Parameter	Da.13	Da.14
Positioning start information *		Condition target	Da.14	Da.15
		Condition operator	Da.15	Da.16
	Condition data	Address	Da.16	Da.17
		Parameter 1	Da.17	Da.18
		Parameter 2	Da.18	Da.19

^{*:} Called "block start data" with the QD75.

(6) Input/output signal comparisons

Input signal comparisons

	A1S	A1SD75		QD75	
Name	Logic (initial status)	Logic switch with parameters	Logic (initial status)	Logic switch with parameters	
Drive unit READY	Negative logic	Not possible	Negative logic	Possible	
In-position signal	Negative logic	Not possible	_	_	
Zero signal	Negative logic	Not possible	Negative logic	Possible	
Manual pulse generator A phase Manual pulse generator B phase *1	Negative logic (multiple of 4)	Not possible	Negative logic (multiple of 4)	Possible	
Near-point dog signal	Negative logic	Not possible	Negative logic	Possible	
Stop signal	Negative logic	Not possible	Negative logic	Possible	
Upper limit	Negative logic	Not possible	Negative logic	Possible	
Lower limit	Negative logic	Not possible	Negative logic	Possible	
External start *2	Negative logic	Not possible	Negative logic	Possible	
Speed-position switching signal *2	Negative logic	Not possible	Negative logic	Possible	

Output signal comparisons

	A1SD75		QD75	
Name	Logic (initial status)	Logic switch with parameters	Logic (initial status)	Logic switch with parameters
Command pulse *3	Positive logic CW/CCW mode	Possible	Negative logic CW/CCW mode	Possible
Deviation counter clear	Negative logic	Not possible	Negative logic	Possible

*1: Comparisons about manual pulse generator A phase/B phase

	A1SD75	QD75
No. of connectable manual pulse generators	1 generator/1 axis	1 generator/1 module
Mode selection (with parameter)	Not possible	Possible Multiple of 1 mode, multiple of 4 mode, PULSE/SIGN mode


^{*2:} With the QD75, the "external start signal" and "speed-position switching signal" are combined into the "external command signal".

st 3: Comparisons about command pulse

	A1SD75	QD75	
	Possible		
Mode selection (with parameter)	PULSE/SIGN mode, A phase/B phase (multiple of 4) mode,		
	A phase/B phase (multiple of 1) mode, CW/CCW mode		
	Open collector: 200kpps	Open collector: 200kpps	
Max. command frequency	Differential driver: 400kpps	Differential driver: 4Mpps(QD75D□N)	
	Differential driver: 400kpps	1Mpps (QD75D□)	

Appendix 10 When using GX Works2

The following shows the procedure for positioning operation when GX Works2 is used.

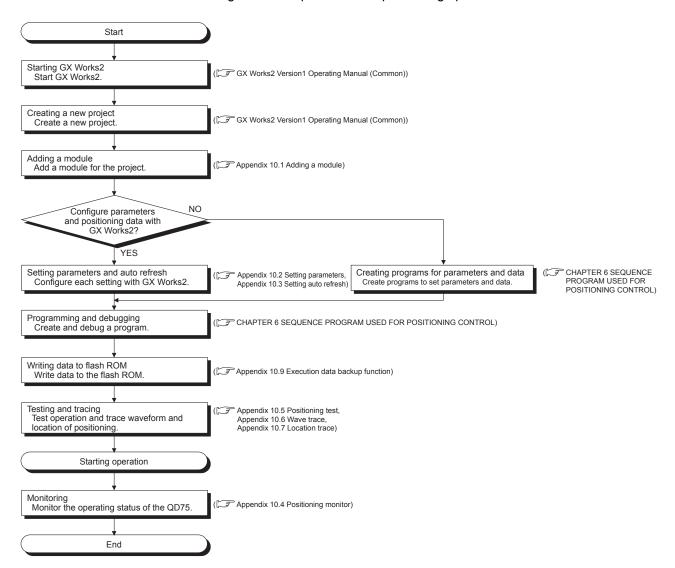

For details on the operation method of GX Works2, refer to the following.

GX Works2 Version 1 Operating Manual (Common)

For details on operation in GX Works2 for the QD75, refer to the following.


GX Works2 Version 1 Operating Manual (Intelligent Function Module)

Appendix 10.1 Adding a module

Add the model name of the positioning module to be used in the project.

(1) Operating procedure

Open the "New Module..." dialog box.
 Project window → Right-click [Intelligent Function Module] → "New Module..."

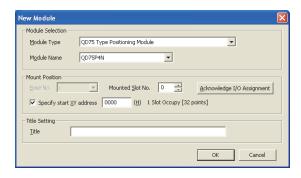

2. Configure settings
Set the following items.

	Item	Contents
	Module Type	Select "QD75 Type Positioning Module".
Module Selection	Module Name	Select the model name of the module to be connected.
	Mounted Slot No.	Select the number of the slot where the module is mounted.
Mount Position	Specify start X/Y address	The start I/O number (hexadecimal) of the module to be mounted on the slot set in "Mounted Slot No." is displayed. The value can be changed.
Title Setting	Title	Enter a title.

Appendix 10.2 Setting parameters


Set parameters for the positioning module.

By setting parameters, the parameter setting by sequence program is not needed.

Parameter setting

(1) Operating procedure

Open the "Parameter" window.
 Project window → [Intelligent Function Module] → Module name → "Parameter"

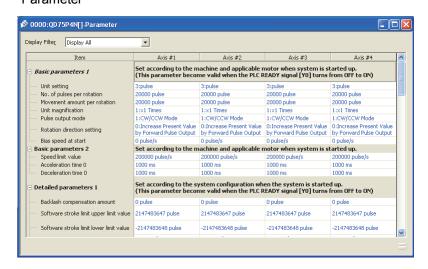

2. Configure settings

Double-click the setting-target item and select or enter a value.

- Items with a pull-down list
 Double-click the item and select an item in the displayed pull-down list.
- Items without a pull-down list
 Double-click the item and enter a value.

For details on the setting items, refer to the following.


Parameter	Reference
Basic parameters 1	Section 5.2.1
Basic parameters 2	Section 5.2.2
Detailed parameters 1	Section 5.2.3
Detailed parameters 2	Section 5.2.4
OPR basic parameters	Section 5.2.5
OPR detailed parameters	Section 5.2.6

Setting positioning data

(1) Operating procedure

1. Open the "Parameter" window.


Project window → [Intelligent Function Module] → Module name → "Positioning_Axis_#□_Data"

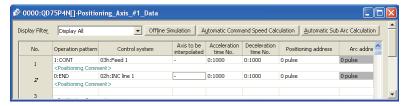

2. Configure settings.


Double-click the setting-target item and select or enter a value.

- Items with a pull-down list
 Double-click the item and select an item in the displayed pull-down list.
- Items without a pull-down list
 Double-click the item and enter a value.

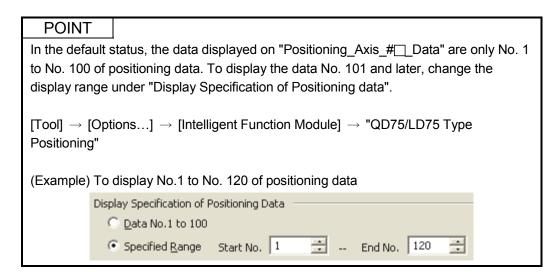


(2) Sub-function


Offline Simulation
 The locus and waveform of configured positioning data can be checked.

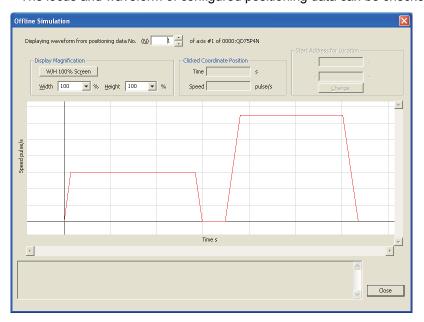


Automatic Command Speed Calculation
 Constant speed is automatically calculated by setting the time for positioning from the starting position to the target position.

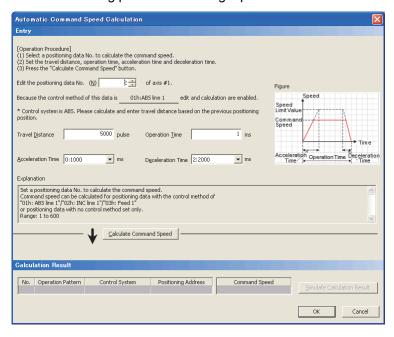

 Automatic Sub Arc Calculation
 The circular interpolation control data for two positioning data interpolation is automatically created, by selecting two positioning data and setting the radius.

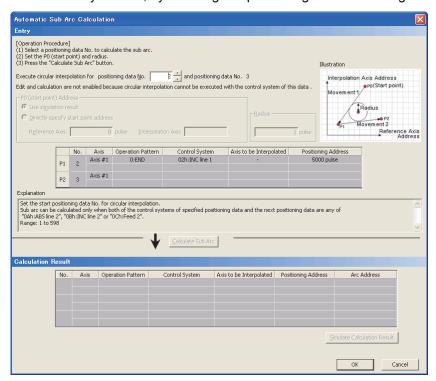

M Code Comment Edit
 Set and display M code comments of the positioning module.

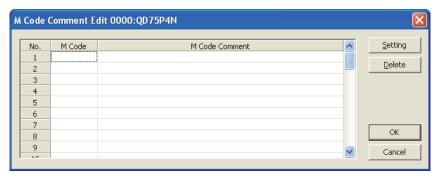

For details on each function, refer to the GX Works2 Version1 Operating Manual (Intelligent Function Module).


Setting block start data

(1) Operating procedure

Open the "Parameter" window.
 Project window → [Intelligent Function Module] → Module name →

"Starting_Axis_#

_Block_Data"

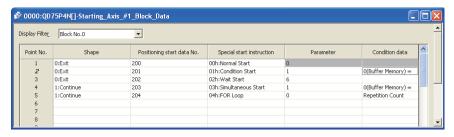

2. Configure settings.

Double-click the setting-target item and select or enter a value.

- Items with a pull-down list
 Double-click the item and select an item in the displayed pull-down list.
- Items without a pull-down list
 Double-click the item and enter a value.

For details on the setting items, refer to Section 5.4 "List of block start data".


Appendix 10.3 Setting auto refresh

Transfer data in the buffer memory of the positioning module to specified devices in the CPU module.

By setting auto refresh, reading by sequence program is not needed.

(1) Operating procedure

1. Open the "Auto_Refresh" window. Project window \to [Intelligent Function Module] \to Module name \to "Auto_Refresh"

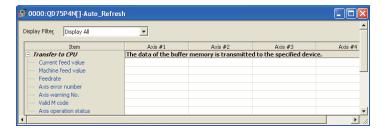

2. Enter devices.

Click the text box of the item to be set, and enter the auto refresh target device.

POINT

To validate the auto refresh data after writing them into the CPU module, power off and then on or reset the CPU module.

Appendix 10.4 Positioning monitor

With the positioning monitor function, the QD75 operating status can be confirmed, and debugging can be performed.

The following five types of monitors are available in this function:

Axis Monitor : The actual status of each axis can be monitored.

• Starting History : 16 starting history logs of operations such as positioning

operation, JOG operation, and manual pulse generator

operation can be monitored.

Error History : 16 error history logs can be monitored.
 Warning History : 16 warning history logs can be monitored.


Module Information List: Signals and flag ON/OFF status of each axis can be

monitored.

Axis Monitor


(1) Operating procedure

Starting the "Positioning Monitor" window
 Display the "Positioning Monitor" window.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Monitor...]

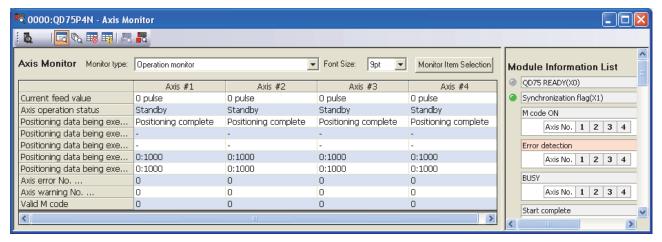


By default, the "Axis Monitor" window is displayed. When displaying the "Axis Monitor" window from the status which another window is selected, proceed according to the 2. below.

Switching to the "Axis Monitor" window
 Click the "Axis Monitor" button () on the toolbar.
 The display switches to the "Axis Monitor" window.

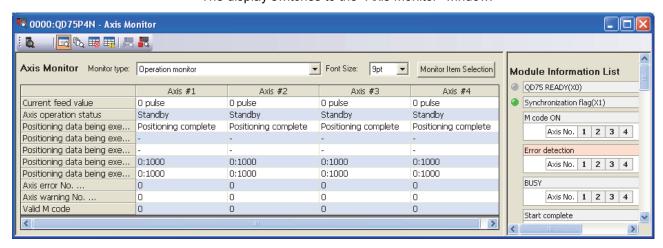


- Selecting the monitor typeSelect the monitor type from the pull-down menu of "Monitor type".
 - "Operation monitor"
 - "Operation monitor (Axis control)"
 - "Operation monitor (Speed-position switching control)"
 - "Operation monitor (Position-speed switching control)"
 - "Operation monitor (OPR monitor)"
 - "Operation monitor (JOG/manual pulse)"

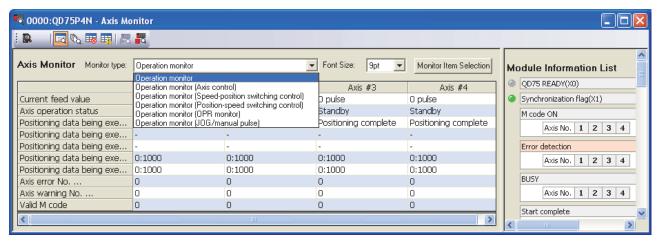

- 4. Selecting the monitor axis and monitor item
 - 1) Click the Monitor Item Selection button.

The "Monitor Item Selection" window is displayed.

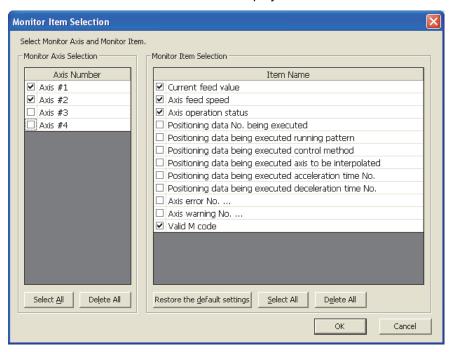

- 2) Select the \square of the axes and items to be monitored. The following shows the selectable monitor items for each monitor type.
 - For "Operation monitor":

Monitor item	Symbol of reference buffer memory	Reference
Current feed value	Md.20	
Axis feed speed	Md.28	
Axis operation status	Md.26	
Positioning data No. being executed	Md.44	
Positioning data being executed running pattern		
Positioning data being executed control method		
Positioning data being executed axis to be interpolated	Md.47	Section 5.6.2
Positioning data being executed acceleration time No.		
Positioning data being executed deceleration time No.		
Axis error No	Md.23	
Axis warning No	Md.24	
Valid M code	Md.25	

• For "Operation monitor (Axis control)":

Monitor item	Symbol of reference buffer memory	Reference	
Current feed value	Md.20		
Axis feed speed	Md.28		
Axis operation status	Md.26	Section 5.6.2	
Target value	Md.32		
Machine feed value	Md.21		
New current value	Cd.9		
New speed value	Cd.14		
Positioning operation speed override	Cd.13	Section 5.7.2	
Step mode	Cd.34	Section 5.7.2	
Step valid flag	Cd.35		
Speed change being processed flag	Md.40		
Status speed change 0 flag	Md.31	Section 5.6.2	
External command valid	Cd.8	Coation F 7 2	
Skip command	Cd.37	Section 5.7.2	

• For "Operation monitor (Speed-position switching control)":

Monitor item	Symbol of reference buffer memory	Reference
Current feed value	Md.20	
Axis feed speed	Md.28	
Axis operation status	Md.26	
Target speed	Md.33	Section 5.6.2
Feedrate	Md.22	OCCION 5.0.2
Current speed	Md.27	
Positioning amount of speed and position switch control	Md.29	
Speed-position switching control movement amount change register	Cd.23	Section 5.7.2
Status speed and position change latch flag	Md.31	Section 5.6.2
Speed-position switching enable flag	Cd.24	Section 5.7.2
Status speed controlling flag	Md.31	Section 5.6.2

• For "Operation monitor (Position-speed switching control)":

Monitor item	Symbol of reference buffer memory	Reference
Current feed value	Md.20	
Axis feed speed	Md.28	
Axis operation status	Md.26	Section 5.6.2
Target speed	Md.33	Section 5.6.2
Feedrate	Md.22	
Current speed	Md.27	
Position-speed switching control speed change register	Cd.25	Section 5.7.2
Status position and speed change latch flag	Md.31	Section 5.6.2
Position-speed switching enable flag	Cd.26	Section 5.7.2
Status speed controlling flag	Md.31	Section 5.6.2


• For "Operation monitor (OPR monitor)":

Monitor item	Symbol of reference buffer memory	Reference	
Current feed value	Md.20		
Axis feed speed	Md.28		
Axis operation status	Md.26		
Movement amount after near-point dog ON	Md.34		
Torque limitation stored value	Md.35		
Status command in-position flag		Section 5.6.2	
Status OPR request flag	Md.31		
Status OPR complete flag			
External I/O signal lower limit			
External I/O signal upper limit			
External I/O signal zero signal	Md.30		
External I/O signal near-point dog signal			
External I/O signal deviation counter clear			

• For "Operation monitor (JOG/manual pulse)":


Monitor item	Symbol of reference buffer memory or device No. of the output signal			Reference		
	Axis 1	Axis 2	Axis 3	Axis 4		
Current feed value	Md.20					
Axis feed speed	Md.28 Md.26			Section 5.6.2		
Axis operation status						
Forward JOG start	Y8	YA	YC	YE	Section 3.3.3	
Reverse JOG start	Y9	YB	YD	YF		
JOG speed	Cd.17			Section 5.7.2		
JOG speed limit value		Pr.	.31			
JOG acceleration time	Pr.32			Section 5.2.4		
JOG deceleration time		Pr.	.33			
Manual pulse generator enable flag	Cd.21			Section 5.7.2		
Manual pulse generator input selection	Pr.24			Section 5.2.3		
Manual pulse generator 1 pulse input magnification	Cd.20			Section 5.7.2		

3) Click the OK button to close the "Monitor Item Selection" window. The selected items are reflected to the "Axis Monitor" window.

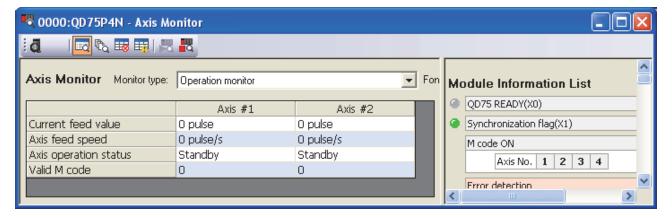


Starting History

- (1) Operating procedure
 - Starting the "Positioning Monitor" window
 Display the "Positioning Monitor" window.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Monitor...]

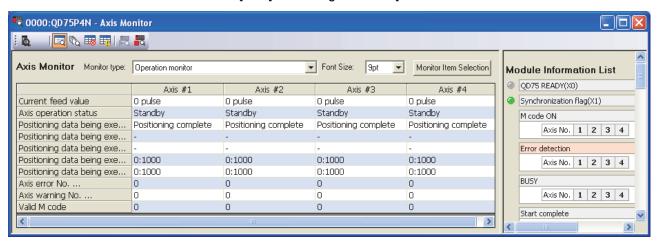

Switching to the "Starting History" window
 Click the "Starting History" button () on the toolbar.
 The display switches to the "Starting History" window.

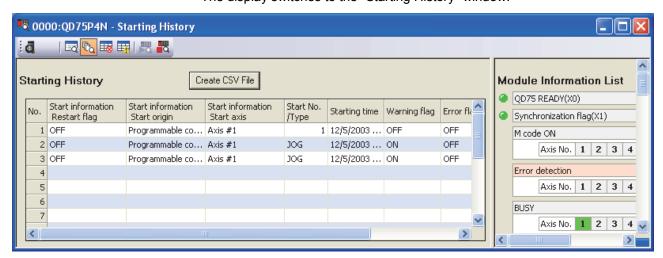


When the number of logs exceeds 16, the latest log overwrites the oldest log so that the latest 16 starting histories can be monitored all the time.

Also, the error details can be confirmed by clicking the error number.


For details on the starting history, refer to Section 5.6.1.

■ Error History

- (1) Operating procedure
 - Starting the "Positioning Monitor" window
 Display the "Positioning Monitor" window.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Monitor...]

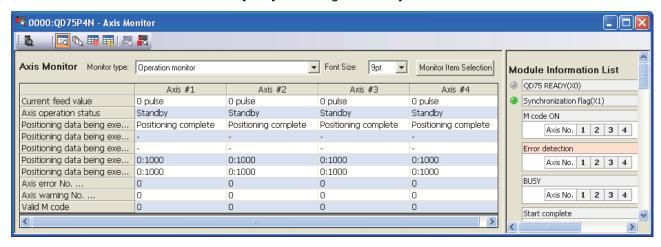

Switching to the "Error History" window
 Click the "Error History" button () on the toolbar.
 The display switches to the "Error History" window.

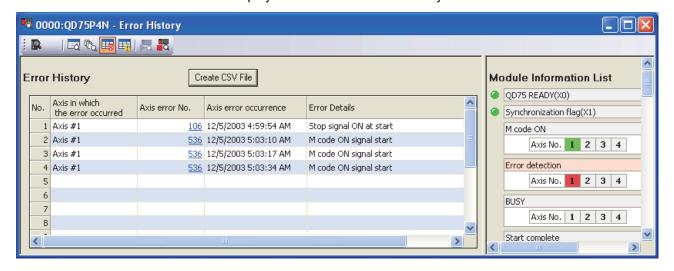


When the number of logs exceeds 16, the latest log overwrites the oldest log so that the latest 16 error histories can be monitored all the time.


Also, the error details can be confirmed by clicking the axis error No.

■ Warning History

- (1) Operating procedure
 - Starting the "Positioning Monitor" window
 Display the "Positioning Monitor" window.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Monitor...]

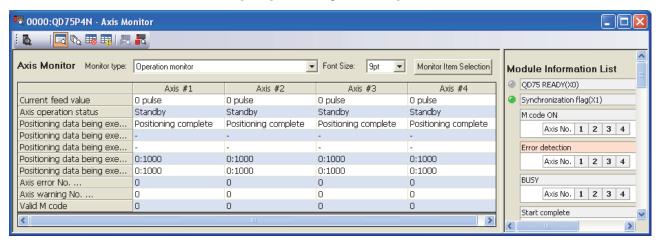

Switching to the "Warning History" window
 Click the "Warning History" button () on the toolbar.
 The display switches to the "Warning History" window.

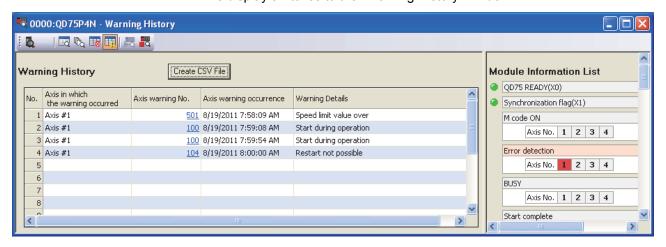


When the number of logs exceeds 16, the latest log overwrites the oldest log so that the latest 16 warning histories can be monitored all the time.

Also, the warning details can be confirmed by clicking the axis warning No.

■ Module Information List

- (1) Operating procedure
 - Starting the "Positioning Monitor" window
 Display the "Positioning Monitor" window.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Monitor...]

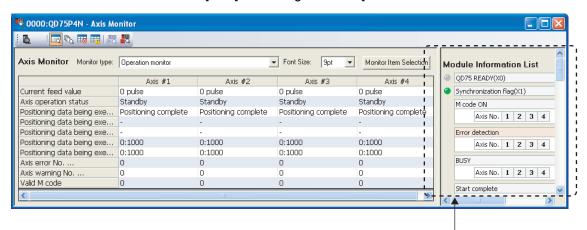

"Module Information List" window

The status by each axis of the following items is displayed in the "Module Information List" window.

Monitor item	Device No. of the I/O signal device or symbol of the buffer memory to be referred			Reference			
	Axis 1	Axis 2	Axis 3	Axis 4			
QD75 READY (X0)	X0						
Synchronization flag (X1)		Х	(1				
M code ON	X4	X5	X6	X7	Section 3.3.2		
Error detection	X8	X9	XA	XB			
BUSY	XC	XD	XE	XF			
Start complete	X10	X11	X12	X13			
Positioning complete	X14	X15	X16	X17			
PLC READY (Y0)		Y	0				
Axis stop	Y4	Y5	Y6	Y7			
Forward JOG start	Y8	YA	YC	YE	Continu 2 2 2		
Reverse JOG start	Y9	YB	YD	YF	Section 3.3.3		
Positioning start	Y10	Y11	Y12	Y13			
Execution prohibition flag	Y14	Y15	Y16	Y17			
External I/O signal lower limit							
External I/O signal upper limit							
External I/O signal drive unit ready							
External I/O signal stop signal		Ma	.30		Section 5.6.2		
External I/O signal external command		IVIU	.30				
External I/O signal zero signal							
External I/O signal near-point dog signal							
External I/O signal deviation counter clear							
External command valid	Cd.8				Section 5.7.2		
Status speed controlling flag							
Status speed and position change latch flag	Status speed and position change latch flag						
Status command in-position flag							
Status OPR request flag				Section 5.6.2			
Status OPR complete flag		IVIO			3600011 3.0.2		
Status position and speed change latch flag							
Status axis warning detection							
Status speed change 0 flag							

Statuses turned ON are displayed in green by each axis.



Also, at error occurrence, the axis in which the error occurred ("Error detection") is displayed in red.

At occurrence of warning, the axis in which the warning occurred ("Status axis warning detection") is displayed in orange.

Appendix 10.5 Positioning test

This function allows users to perform the following tests while monitoring the current status of the QD75.


- · Positioning start test
- · JOG/manual pulse generator/OPR test
- · Speed change test
- · Current value change test

Positioning start test


Test operation is performed by specifying the positioning data No. or point No. of the block start data.

(1) Operating procedure

Open the "Positioning Test" dialog box.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Test...]

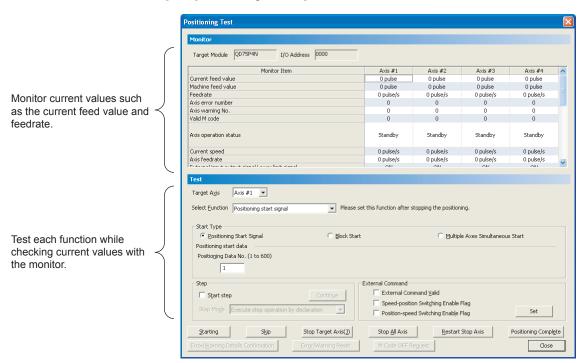

- Select the test target axis.Select the test target axis from the pull-down menu of "Target Axis".
- Select the function.Select "Positioning start signal" from the pull-down menu of "Select Function".

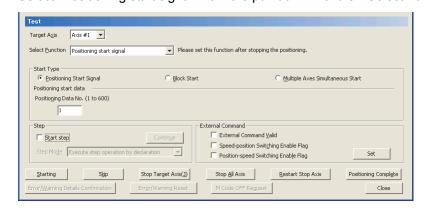

- 4. Perform positioning start test.
 - 1) Select "Positioning Start Signal", "Block Start", or "Multiple Axes Simultaneous Start" for "Start Type".
 - 2) Set positioning start data according to the setting for "Start Type".
 - Positioning Start Signal: Set the positioning data No.
 - Block Start: Set the block No. and point No.
 - Multiple Axes Simultaneous Start: Set the multiple axes simultaneous start data No.
 - Set "Step" and "External Command" as needed.
 - Step

To perform test operation by step start, check the "Start step" checkbox, select a step mode from the pull-down list, and click the Continue button.

- External Command
 To enable external commands or control switch, select the corresponding item and click the Set button.
- 3) Click the Starting button to perform test operation.


■ JOG/manual pulse generator/OPR test

The following test can be performed when positioning control is debugged by the JOG operation test or manual pulse operation test.

- Direction check (forward run or reverse run)
- On/off status check of external input signals, such as upper/lower limit switches, zero signal, or near-point dog signal
- Operation test of speed and acceleration/deceleration
- · Measurement of backlash compensation amount for forward/reverse rotation
- Accurate address check and movement amount measurement
 In addition, the OP is established and the OPR basic and detailed parameters are corrected by the OPR test.

(1) Operating procedure

Open the "Positioning Test" dialog box.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Test]

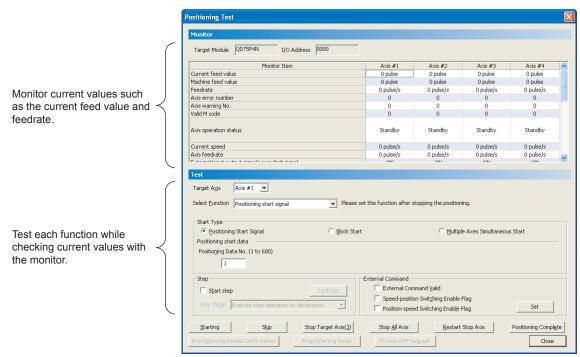


2. Select the test target axis.

Select the test target axis from the pull-down menu of "Target Axis".

3. Select the function.

Select "JOG/Manual Pulse Generator/OPR" from the pull-down menu of "Select Function".

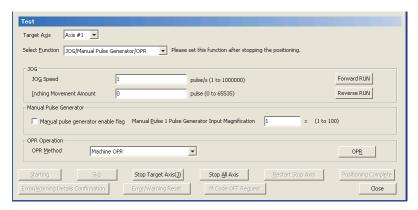


- 1) Perform each operation.
 - JOG operation
 Set "JOG speed" to "1" or more, "Inching Movement Amount" to "0" and click the Forward RUN or Reverse RUN button.
 - Manual Pulse Generator operation
 Set "Manual pulse generator 1 pulse input magnification", select "Manual pulse generator enable flag" and use the manual pulse generator.
 - OPR operation
 Select the OPR method from "Machine OPR" and "Fast OPR", and click the OPR button.

■ Speed change test

The appropriate speed and acceleration/deceleration time can be checked by changing speed or acceleration/deceleration time or by performing override to the axis where the positioning start test, OPR test, or JOG operation test is performed.

(1) Operating procedure

Open the "Positioning Test" dialog box.
 Display the "Positioning Test" window.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Test]

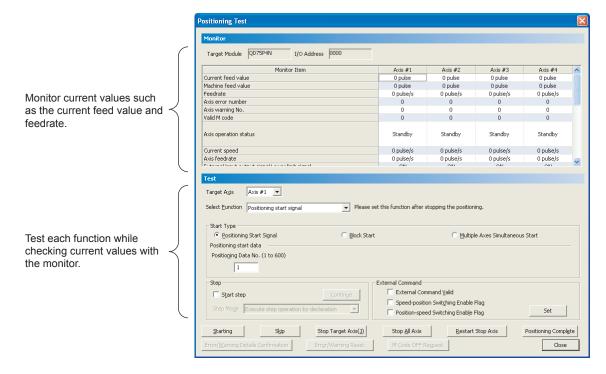


2. Select the test target axis.

Select the test target axis from the pull-down menu of "Target Axis".

3. Select the function.

Select "New Speed" from the pull-down menu of "Select Function".

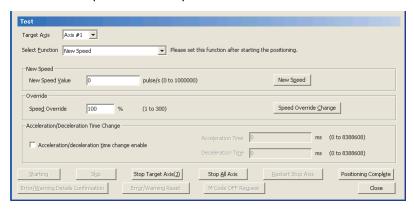

- 4. Execute the speed change test.
 - 1) Execute the speed change function.
 - New Speed
 Enter the new speed value during the startup of positioning start test or OPR test, and click the New Speed button.
 - Override


 Enter the speed override value and click the Speed Override Change button.
 - Acceleration/Deceleration Time Change
 Check the "Acceleration/deceleration time change enable" checkbox, set
 the acceleration time and deceleration time values, and click the
 New Speed button.

■ Current value change test

The current feed value of the QD75 can be changed to the specified address.

(1) Operating procedure


Open the "Positioning Test" dialog box.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Positioning Test]

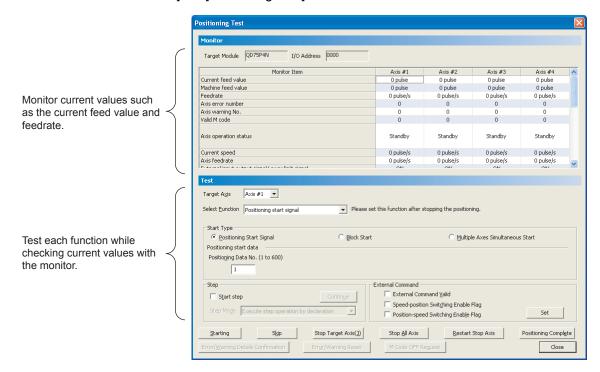

Select the test target axis.Select the test target axis from the pull-down menu of "Target Axis".

3. Select the function.

Select "Current Value Changing" from the pull-down menu of "Select Function".

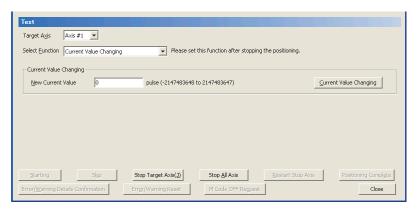


1) Enter the new current value and click the Current Value Changing button.

Appendix 10.6 Wave trace


This function displays the speed command (axis speed) in positioning operation in waveform data.

(1) Operating procedure

Open the "Wave Trace" dialog box.
 [Tool] → [Intelligent Function Module Tool] → [QD75/LD75 Positioning Module] → [Wave Trace]

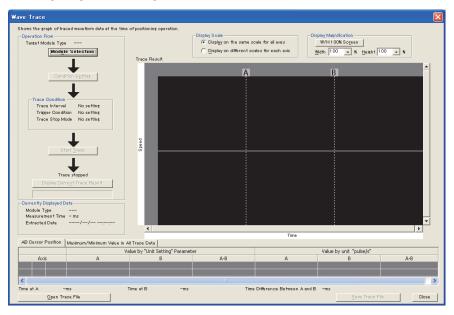


2. Select the module.

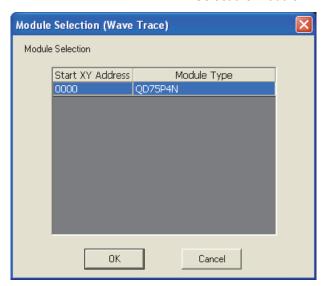

Click the Module Selection button.

Select the positioning module to trace waves and click the OK button.

3. Set conditions.

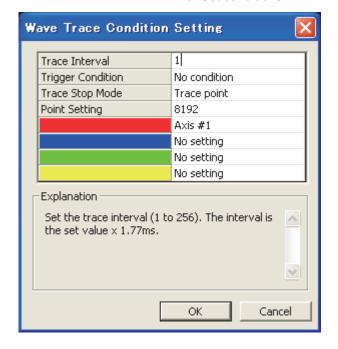

Click the Condition Setting button.

Read the displayed description, set each condition, and click the $\overline{\text{OK}}$ button.


4. Start trace and display trace results.

Click the Start Trace button to start trace.

The trace result at that point can be displayed by clicking the

Display Current Trace Result button during trace, even if the trace completion conditions are not met.

When the completion conditions are met and the trace is completed, the trace result is displayed.

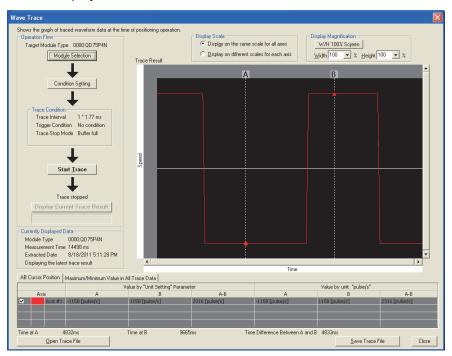


Appendix 10.7 Location trace


This function displays 2-axis interpolation control and simultaneous start (2-axes) in locus data.

(1) Operating procedure

1. Open the "Location Trace" dialog box. [Tool] \rightarrow [Intelligent Function Module Tool] \rightarrow [QD75/LD75 Positioning Module] \rightarrow [Location Trace]

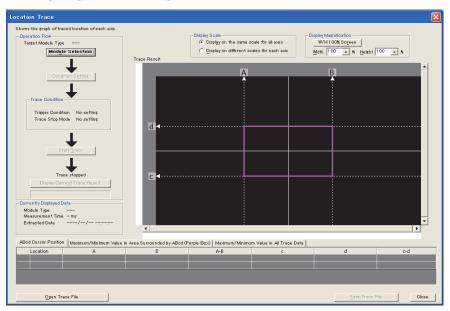


2. Select the module.

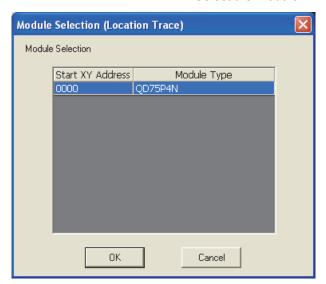

Click the Module Selection button.

Select the positioning module to trace locations and click the OK button.

3. Set conditions.

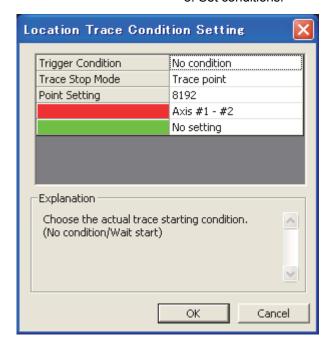

Click the Condition Setting button.

Read the displayed description, set each condition, and click the $\overline{\text{OK}}$ button.


4. Start trace and display trace results.

Click the Start Trace button to start trace.

The trace result at that point can be displayed by clicking the

Display Current Trace Result button during trace, even if the trace completion conditions are not met.

When the completion conditions are met and the trace is completed, the trace result is displayed.

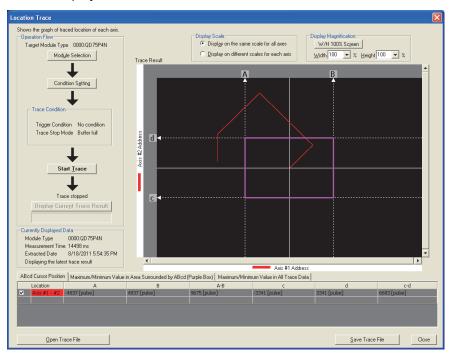

Appendix 10.8 Parameter initialization function

The "parameter initialization function" is used to return the setting data set in the QD75 buffer memory and flash ROM to their factory-set initial values.

The details shown below explain about the "parameter initialization function".

- [1] Parameter initialization means
- [2] Control details
- [3] Control Precautions
- [4] Parameter initialization method

[1] Parameter initialization means

- Initialization is executed with a program.
- Initialization is executed by GX Works2.

Refer to GX Works2 Version1 Operating Manual (Intelligent Function Module) for the execution method by GX Works2.

[2] Control details

The following table shows the setting data initialized by the "parameter initialization function".

(The data initialized are "buffer memory" and " flash ROM " setting data.)

Setting data
Basic parameters (Pr.1 to Pr.10)
Detailed parameters (Pr.11 to Pr.42, Pr.70, Pr.150)
OPR basic parameters (Pr.43 to Pr.48)
OPR detailed parameters (Pr.49 to Pr.57)
Positioning data (No.1 to No.600)
Block start data (No.7000 to No.7004)

[3] Control Precautions

- (1) Parameter initialization is only executed when the positioning control is not carried out (when the PLC READY signal (Y0) is OFF). The warning "In PLC READY" (warning code: 111) will occur if executed when the PLC READY [Y0] is ON.
- (2) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible, and an error "Flash ROM write error" (error code: 801) will occur.
- (3) A "CPU module reset" or "CPU module power restart" must be carried out after the parameters are initialized.
- (4) If an error occurs on the parameter set in the QD75 when the PLC READY signal [Y0] is turned ON, the QD75 READY signal [X0] will not be turned ON and the control cannot be carried out.

Important

Parameter initialization takes about 10 seconds. (Up to 30 seconds are sometimes required.) Do not turn the power ON/OFF; reset the CPU module, etc., during parameter initialization. If the power is turned OFF or the CPU module is reset to forcibly end the process, the data backed up in the flash ROM will be lost.

[4] Parameter initialization method

(1) Parameter initialization is carried out using the dedicated instruction "ZP.PINIT".

(Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details.)

(2) Parameter initialization can also be carried out by the writing of the data shown in the table below to the buffer memory using the TO instruction /intelligent function device.

The initialization of the parameter is executed at the time point the data is written to the QD75 buffer memory.

Setting item	Setting value			Buffer memory address			
		Setting details	Axis	Axis	Axis	Axis	
			1	2	3	4	
Cd.2 Parameter initialization request	1	Set "1" (parameter initialization request).		19	01		

Refer to Section 5.7 "List of control data" for details on the setting details.

When the initialization is complete, "0" will be set in " Cd.2 Parameter initialization request" by the QD75 automatically.

Appendix 10.9 Execution data backup function

When the QD75 buffer memory data is rewritten from the CPU module, "the data backed up in the QD75 flash ROM" may differ from "the data (buffer memory data) for which control is being executed". In cases like these, the data being executed will be lost when the programmable controller power is turned OFF. (Refer to CHAPTER 7.)

In cases like these, the "execution data backup function" backs up the data being executed by writing it to the flash ROM. The data that was backed up is then written to the buffer memory when the power is turned ON next.

The details shown below explain about the "execution data backup function".

- [1] Execution data backup means
- [2] Control details
- [3] Control Precautions
- [4] Execution data backup method

[1] Execution data backup (written to flash ROM) means

- The backup is executed with a program.
- The backup is executed by GX Works2.

Refer to GX Works2 Version1 Operating Manual (Common) for execution data backup method by GX Works2.

[2] Control details

The following shows the data that can be written to the flash ROM using the "execution data backup function".

Buffer memory				
Parameters (Pr.1 to Pr.57,				
Pr.70, Pr.150)				
Positioning data (No. 1 to No. 600)				
Block start data (No. 7000 to 7004)				

Flash ROM Parameters (Pr.1 to Pr.57), Pr.70 , Pr.150) Positioning data (No. 1 to No. 600) Block start data (No. 7000 to 7004)

[3] Control Precautions

- (1) Parameter initialization is only executed when the positioning control is not carried out (when the PLC READY signal (Y0) is OFF). The warning "In PLC READY" (warning code: 111) will occur if executed when the PLC READY [Y0] is ON.
- (2) Writing to the flash ROM can be executed up to 100,000 times. If writing to the flash ROM exceeds 100,000 times, the writing may become impossible, and an error "Flash ROM write error" (error code: 801) will occur.
- (3) After one power ON/CPU module reset operation, writing to the flash ROM using a program is limited to up to 25 times.

 If the 26th writing is executed, an error "Flash ROM write number error" (error code: 801) will occur. If this error occurs, carry out the power OFF ON/CPU module reset operation again.

 Refer to Md.19 of Section 5.1.7 "Types and roles of monitor data" for

Refer to Md.19 of Section 5.1.7 "Types and roles of monitor data" for details.

Important

Do not turn the power ON/OFF, reset the CPU module, during writing to the flash ROM. If the power is turned OFF or the CPU module is reset to forcibly end the process, the data backed up in the flash ROM will be lost.

[4] Execution data backup method

- Execution data backup (writing to the flash ROM) is carried out using the dedicated instruction "ZP.PFWRT". (Refer to CHAPTER 14 "DEDICATED INSTRUCTIONS" for details.)
- (2) Refer to Section 7.2 "Data transmission process" for the data transmission processing at the backup of the execution data.
- (3) Execution data backup can also be carried out by the writing of the data shown in the table below to the QD75 buffer memory using the TO instruction /intelligent function device.

The writing to the flash ROM is executed at the time point the data is written to the QD75 buffer memory.

Setting item	Setting value			Buffer memory address			
		Setting details	Axis	Axis	Axis	Axis	
				2	3	4	
	Cd.1 Flash ROM write request	1	Set "1" (flash ROM write request).		19	00	

Refer to Section 5.7 "List of control data" for details on the setting details.

When the writing to the flash ROM is complete, "0" will be set in " Cd.1 Flash ROM write request" by the QD75 automatically.

Appendix 10.10 External I/O signal logic switching function

This function switches the signal logic according to the external equipment connected to the QD75.

For the system in which drive unit READY with b-contact, upper limit switch, and lower limit switch are not used, the parameter logic setting can be controlled without wiring if it is changed to a "positive logic".

When the drive unit READY, upper limit switch, and lower limit switch are used, ensure to use them with b-contact.

The details shown below explain about the "external I/O signal logic switching function".

- [1] Parameter setting details
- [2] Precautions on parameter setting

[1] Parameter setting details

To use the "external I/O signal logic switching function", set the parameters shown in the following table.

	0.415.4.254.4.4		0.115		Factory-set	Buff	er mem	ory addr	ess
	Setting item		Setting details		initial value	Axis 1	Axis 2	Axis 3	Axis 4
	Selection of logic of signals input from external source to QD75								
		b0	Lower limit						
		b1	Upper limit						
		b2	Drive unit READY						
		b3	Stop signal	0: Negative logic,					
Pr.22 Input signal logic selection	h4	External command signal	1: Positive logic	0	31	181	331	481	
		b5	Zero signal	Set "0".					
		b6	Near-point dog signal						
		b7	Unused						
		b8	Manual pulse generator input	0: Negative logic, 1: Positive logic					
		b9 to b15	Unused	Set "0".					
	Selection of logic of si source		signals output from QI	075 to external	mal				
Pr.23 Output signal logic	Output signal logic	b0	Command pulse signal	0: Negative logic, 1: Positive logic	0	32	182	332	
	selection	b1 to b3	Unused	Set "0".					482
		b4	Deviation counter						
		b5 to b15	Unused	Set "0".	1				

strule Refer to Section 5.2 "List of parameters" for the information on detail settings.


[2] Precautions on parameter setting

- (1) The external I/O signal logic switching parameters are validated when the PLC READY signal [Y0] is turned OFF to ON. (The logic is negative right after power-on.)
- (2) If each signal logic is set erroneously, the operation may not be carried out correctly.
 - Before setting, check the specifications of the equipment to be used.

Appendix 10.11 External I/O signal monitor function

The "external I/O signal monitor function" monitors the module's information and external I/O signal statuses in the module's detailed information which can be displayed on the system monitor of GX Works2.

The information that can be monitored are the module's information (same as the QD75 front "RUN", "ERR" LED indicators) and the following external I/O signals. Set the logic of the external I/O signals in " Pr.22 Input signal logic selection" and " Pr.23 Output signal logic selection".

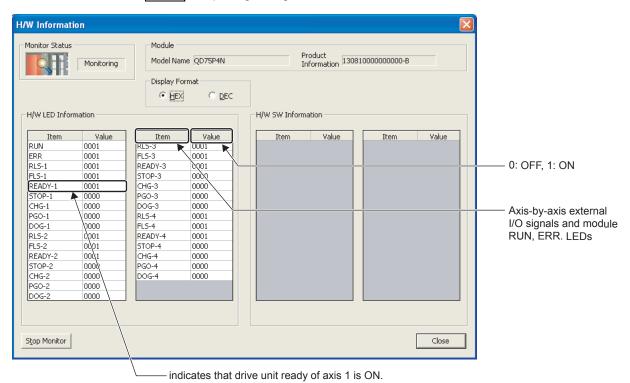


Refer to the following manual for the system monitor of GX Works2. GX Works2 Version1 Operating Manual (Common)

Appendix 10.12 History monitor function

This function monitors starting history, error history, and warning history stored in the buffer memory of the QD75 during operation.

[1] Starting history

Sixteen starting history logs of operations such as positioning operation, JOG operation, and manual pulse generator operation can be monitored. When the number of logs exceeds 16, the latest log overwrites the oldest log so that the latest 16 logs can be monitored all the time. This function allows users to check the operation sequence (whether the operations have been started in a predetermined sequence) at system start-up.

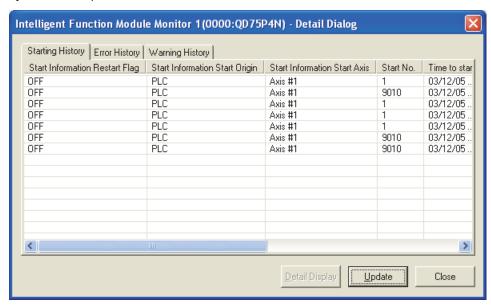



To monitor the starting history, register the QD75 to the "Intelligent Function Module Monitor Window".

For details on the registration method and monitoring method, refer to the following. GX Works2 Version1 Operating Manual (Intelligent Function Module)

[2] Error history, warning history

Sixteen error history logs and sixteen warning history logs can be monitored. When the number of logs exceeds 16, the latest log overwrites the oldest log so that the latest 16 logs can be monitored all the time.

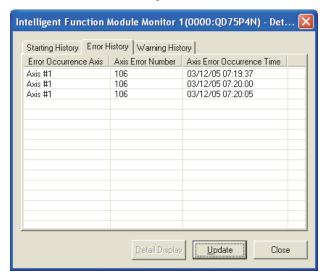

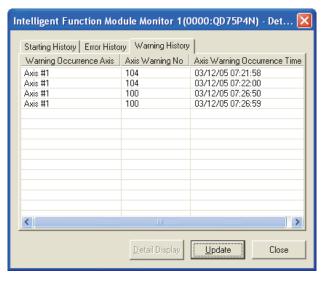

To monitor the error history and warning history, register the QD75 to the "Intelligent Function Module Monitor Window".


For details on the registration method and monitoring method, refer to the following. GX Works2 Version1 Operating Manual (Intelligent Function Module)

Appendix 10.13 Checking errors

Error codes corresponding to the errors occurred in the QD75 can be checked on the following screen of GX Works2.

Select the screen according to the purpose and usage.


- "Module's Detailed Information" screen
- "Error History" screen (for the QD75P□N/QD75D□N only)
- (1) Checking errors on the "Module's Detailed Information" screen Select [Diagnostics] → [System Monitor...] on GX Works2. Select QD75 for "Main Base" and click the Detailed Information button. The "Module's Detailed Information" screen for the QD75 appears and the error code, error details, and corrective actions can be checked.

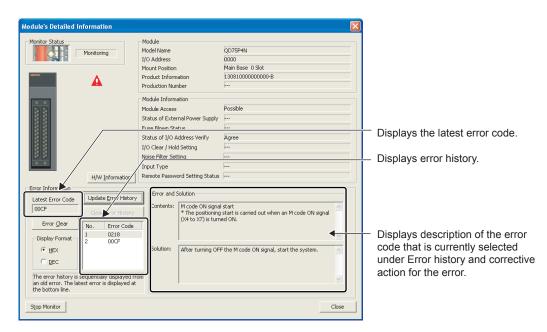

(2) Checking errors on the "Error History" screen. (for the QD75P\(\to\)N\(\to\)D75D\(\to\)N only)

On the "Error History" screen, the error logs of the QD75 are displayed in a list together with the error logs of other modules. The logs can be output to a CSV format file. The error codes and the time of error occurrence can be checked even after the CPU module is powered off and then on or reset.

Select [Diagnostics] \rightarrow [System Monitor...] \rightarrow System Error History button on GX Works2.

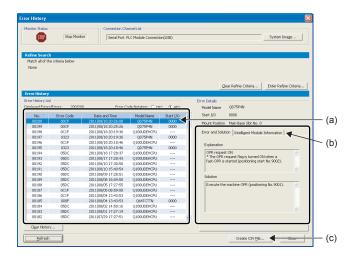

(a) Error History List

Module error logs are displayed in a list.

- (b) Error and Solution, Intelligent Module Information
 - Error and Solution
 Details of the selected in the "Error History List" and its corrective action are displayed.
 - Intelligent Module Information
 The QD75P\(\subseteq N/\text{QD75D}\subseteq N\) status when the error selected in the "Error History List" occurred is displayed.

For the QD75P N/QD75D N, the following contents are displayed.

	For the QD75P□N/QD75D□N, the following contents are displayed.
Item	Description
Start axis	The axis No. requested to start is stored.
Positioning start No.	The positioning start No. is stored.
Axis in which the error occurred	The axis No. in which the error occurred is stored.
Axis error occurrence (Data No.)	The data No. in which the error occurred is stored.
Current feed value	The current feed value (at the time of error) of the error axis is stored.
Input signals with PLC CPU(X0 XF)	The status of input signals (X0 to XF) (at the time of error) is stored (in hexadecimal).
Input signals with PLC CPU(X10 X1F)	The status of input signals (X10 to X1F) (at the time of error) is stored (in hexadecimal).
Output signals with PLC CPU(Y0 YF)	The status of output signals (Y0 to YF) (at the time of error) is stored (in hexadecimal).
Output signals with PLC CPU(Y10 Y1F)	The status of output signals (Y10 to Y1F) (at the time of error) is stored (in hexadecimal).
 Axis 1 drive unit READY signal Axis 1 upper limit signal Axis 1 lower limit signal Axis 1 stop signal Axis 1 external command signal Axis 1 near-point dog signal Axis 1 zero signal 	The status of axis 1 external input signals (at the time of error) is stored.
 Axis 2 drive unit READY signal Axis 2 upper limit signal Axis 2 lower limit signal Axis 2 stop signal Axis 2 external command signal Axis 2 near-point dog signal Axis 2 zero signal 	The status of axis 2 external input signals (at the time of error) is stored.
 Axis 3 drive unit READY signal Axis 3 upper limit signal Axis 3 lower limit signal Axis 3 stop signal Axis 3 external command signal Axis 3 near-point dog signal Axis 3 zero signal 	The status of axis 3 external input signals (at the time of error) is stored.
 Axis 4 drive unit READY signal Axis 4 upper limit signal Axis 4 lower limit signal Axis 4 stop signal Axis 4 external command signal Axis 4 near-point dog signal Axis 4 zero signal 	The status of axis 4 external input signals (at the time of error) is stored.


(c) Create CSV File button

The module error logs are output to a CSV format file.

POINT

(1) If errors frequently occur in the QD75P\(\top\N/\QD75D\(\top\N\), "*HST.LOSS*" (instead of an actual error code) may be displayed in the Error Code column.

(Display example)

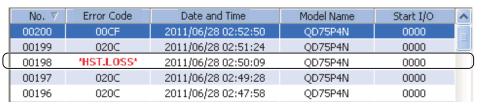


If "*HST.LOSS*" is frequently displayed, set a larger value for the number of errors collected per scan in the PLC RAS tab of the PLC Parameter dialog box. For the setting, refer to the QnUCPU User's Manual (Function Explanation, Program Fundamentals).

(2) If the error occurred at the simultaneous start, the axis No. in which the error is detected is stored in the "Starting axis" in Error History.

Appendix 11 MELSEC Explanation of positioning terms


1-2 PHASE EXCITATION SYSTEM

This is one system for exciting each stepping motor coil in a determined order. In this system, one phase and two phases are alternately excited.

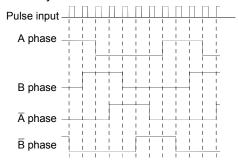

2-PHASE EXCITATION SYSTEM


This is one system for exciting each stepping motor coil in a determined order. In this system, a current constantly flows to 2 phases to carry out step feed.

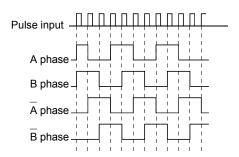

2-PHASE PULSE


An A phase and B phase double pulse. There is a phase difference between the two phases, so that difference can be automatically added and subtracted in the pulse count. The standard phase difference is a 90ø electrical angle.

If the B phase were to lag behind the A phase in a forward run (B phase turns ON after the A phase), the A phase would lag behind the B phase in a reverse run (A phase turns ON after the B phase). In this way the forward and reverse run (addition and subtraction) can be automatically carried out.

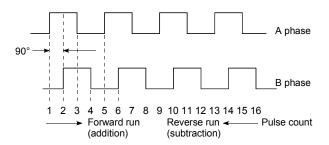

2-SPEED TRAPEZOIDAL CONTROL

In this positioning control method, the positioning pattern, positioning addresses (P1, P2), and positioning speeds (V1, V2) are set in the sequence program. Positioning is carried out to positioning address P1 by issuing the 1st positioning start command. When P1 is reached, the positioning then automatically changes to positioning at the V2 speed.

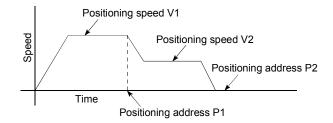


ABSOLUTE ENCODER

This is a detector that enables the angle data within 1 motor rotation to be output to an external destination. Absolute encoders are generally able to output 360° in 8 to 12 bits. Incremental encoders have a disadvantage in that the axis position is lost when a power failure occurs. However, with absolute encoders, the axis position is not lost even when a power failure occurs.

Various codes such as a binary code and BCD code can be output.

Absolute encoders are more expensive, more accurate, and larger than incremental encoders. Refer to "ENCODER".

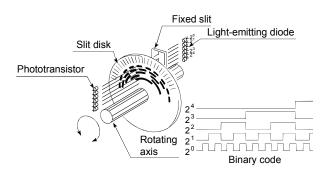

ABSOLUTE POSITION DETECTION SYSTEM


In the absolute position detection system, once an OPR is carried out at the system startup, the system stores the machine position in the memory and retains the current position even when the power is turned OFF. Mechanical deviation will be compensated, so that the OPR is not required after the power is turned ON next time. Configuring this system requires a motor with an absolute position detector and a servo amplifier and positioning module compatible with an absolute position detection system.

ABSOLUTE SYSTEM

This is one system for expressing a positioning address.


Absolute address system.

This system uses 0 as a reference, and expresses the address as the distance from 0. The direction is automatically determined, even when it is not designated. The other address system is the increment system.

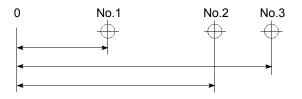

ACCELERATION TIME

The parameter acceleration time refers to the time from a stopped state to the time the speed limit value is reached, so it becomes proportionally shorter as the setting speed decreases. The acceleration time is determined by factors such as machine inertia, motor torque, and load resistance torque.

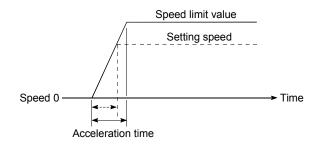


ADDRESS

- 1) This is a numerical value to express the positioning position, designated in mm, inch, angle, or No. of pulse units.
- The memory address. Many addresses are stored in the memory. An address is read or written after it is designated.

AFTER mode

This is the mode that outputs the M code after positioning is complete (after stopping). Clamping can be commanded, drilling dimensions can be selected, etc., with this mode.

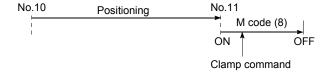


AUTO TUNING (Automatic Tuning)

Properties such as responsiveness and stability of machines driven with a servomotor are affected by changes in the inertia moment and rigidity due to changes in the machine load. etc.

This function automatically adjusts the speed loop gain and position loop gain to match the machine state, so the machine's performance can be maintained at its optimum state. A real time automatic tuning function should be used for machines having large load fluctuations.

BACKLASH COMPENSATION

When a forward run operation changes to a reverse run operation, there is sometimes play (backlash) in the mesh of the toothed gears. This also occurs when using a worm gear. Because of this backlash, a left feed of 1m carried out after a right feed of 1m will not be sufficient to return the machine to its original position. The machine cannot be positioned to its original position without an extra feed equivalent to the backlash amount. This function compensates for that backlash amount.

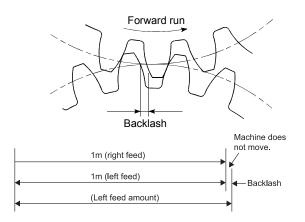


BACKUP FUNCTION

Backup functions consist of the following.

- Functions for storing the sequence program and device statuses stored in the RAM memory of the CPU module, so that they are not lost during power failures, etc.
- 2) Functions for storing the current value in absolute position compatible systems so that it is not lost during power failures, etc.
- 3) Functions for reading the CPU module data (programmable controller programs, parameters, positioning data, etc.) by a peripheral device when the old CPU module is replaced, and then write it to the new CPU module after the replacement is completed.


BALL SCREW

This is a type of screw, with balls lined up in the threads like ball bearings. This reduces backlash, and enables rotation with little force.

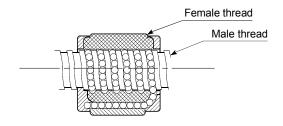


BIAS SPEED AT START

A large amount of torque is required when the machine starts moving, but the torque may be unstable at speed 0 with stepping motors. Therefore, movement can be smoothly carried out by starting the movement at a given speed from the beginning. The bias speed at start is the speed set at that start.

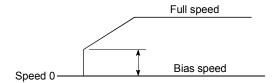

BIPOLAR DRIVE CONSTANT-CURRENT SYSTEM


This is one system for driving a stepping motor. In this method, the orientation of the excitation current flowing to the stator coil is reversed, and the excitation current direction is in both the positive and negative direction. This enables the motor coil to be used effectively, and a large output torque can be obtained at low speeds.

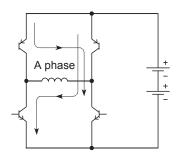

Bipolar drive basic circuit (bridge method)

BUFFER MEMORY

Memory used to temporarily store data. Before writing external data to the CPU module data memory, it is first temporarily stored in the buffer memory to be used for operation by the program. The buffer memory is used by the positioning module because the latest data can be read and written.

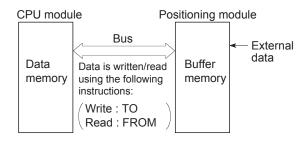

BUSY

The device is doing some other work. It is in a positioning operation or in dwell time.

CCW (Counterclockwise)


Rotation in the counterclockwise direction. In the motor, this is determined looking from the shaft end side. Also refer to "CW".

CHANGE signal

The CHANGE signal is an external signal used to switch the speed-position control from the speed control being executed to position control.

CIRCULAR INTERPOLATION

Automatic operation in which the machine path makes a circle when positioning is carried out by simultaneously operating both the longitudinal feed and latitudinal feed motors. The normal unit is 90ø. Round shapes can be created with this type of interpolation, and obstacles in the machine path can also be avoided. Refer to the terms "INTERPOLATION" OPERATION" and "LINEAR INTERPOLATION"

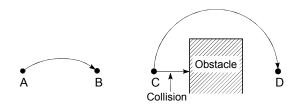


COMMAND PULSE

Refer to term "FEEDBACK PULSE".

COMPOSITE SPEED

The movement speed for the target control during interpolation operations.

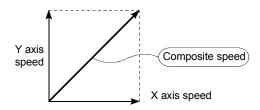

CONTROL UNIT

This is one type of positioning reference data. The unit to be used is designated as mm, inch, degree, or pulse.

CP CONTROL (Continuous Path Control) Continuous path is a control method in which a path is followed without interrupting such as in uniform speed control.

CREEP SPEED

A speed at which the machine moves very slowly.

It is difficult for the machine to stop accurately when running at high speed, so the movement must first be changed to the creep speed before stopping.

Refer to the term "NEAR-POINT DOG".

CURRENT FEED VALUE

The OP address at the completion of the machine OPR is stored.

The position currently being executed is stored.

This value changes when the current value is changed.

CURRENT LOOP MODE

One of the servo control modes in positioning. Mode which uses current for torque control. Also called the torque loop mode.

Refer to the section of "position loop mode".

CURRENT VALUE


This is the current address (position) when stopped or during positioning.

CW (Clockwise)

Rotation in the clockwise direction. Rotation in the clockwise direction looking from the motor shaft end side.


D/A CONVERTER (Digital-to-Analog converter)

A device having a function to convert the digital value expressing the No. of pulses to an analog value expressing the voltage (or current).

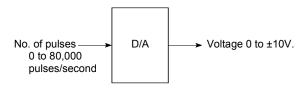

DATA NO.

To carry out positioning to 2 or more addresses, each position is assigned a sequence No. such as No. 1, No. 2, No. 3, etc. The positioning is then carried out following this sequence. The QD75 is capable of positioning up to No. 600.

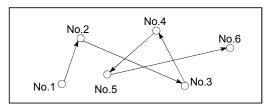


DECELERATION RATIO

A ratio used when the machine is decelerated using a toothed gear. This ratio is a numeral larger than 1.

DECELERATION TIME


The parameter deceleration time is the same value as the acceleration time. Deceleration time refers to the time from the speed limit value to a stopped state, so it becomes proportionally shorter as the setting speed decreases.

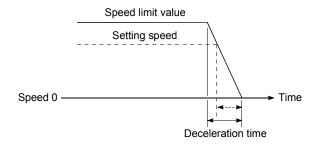

DEVIATION COUNTER


Deviation counters have the following two functions.

- To count the command pulses issued from the QD75, and transmit the count value to the D/A converter.
- To subtract the feedback pulses from the command pulses, and run the motor by the deviation value (droop pulse) of the command pulses and feedback pulses until the command pulses reaches 0.

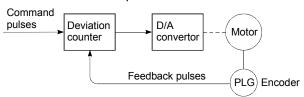

DIFFERENTIAL OUTPUT TYPE

This is one type of encoder feedback pulse output. When one signal is output with this method, a companion signal having the reverse polarity is simultaneously output. This method enables high-frequency transfer, and is resistant to noise, etc., so it is also used in high-speed signal transfer such as inputting and outputting of pulse trains. In general, the transmission side is called the driver, the reception side is called the receiver, and a dedicated IC is used.

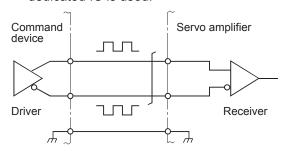

DIGITAL BUS CONNECTION

Commands are generally output from the positioning module to the servo amplifier as a pulse train. Recently, however, devices are being digitalized. Accompanying that, a connection method has appeared in which the bus lines of both the positioning module and the servo amplifier CPUs are connected. This has enabled the construction of higher-accuracy, higher-speed systems. The MELSEC A70D, AD774M, A171SCPU, A273UCPU etc., models employ this digital bus connection.


DOG SIGNAL

The near-point dog of the OPR.

DRIVE UNIT

The commands (such as pulses) output from the positioning module are low-voltage, lowcurrent commands with insufficient energy to run the motor.

The drive unit increases the width of these commands so the motor can be run. It is an accessory on servomotors and stepping motors. Also called a servo amplifier.

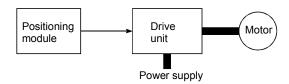

DRIVE UNIT READY

This signal is output when the drive unit for the motor is in a READY state.


This signal remains OFF when the drive unit power is OFF, or during faults, etc.

DROOP PULSE

Because of inertia (GD²) in the machine, it will lag behind and not be able to track if the positioning module speed commands are issued in their normal state.

Thus, for a servomotor, a method is used in which the speed command pulses are delayed by accumulation in a deviation counter. These accumulated pulses are called the droop pulse.

The deviation counter emits all pulses and returns to 0 when the machine stops.

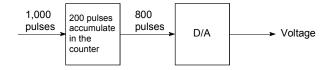

DWELL TIME

This is the time taken immediately after the positioning is completed to adjust for the droop pulses in the deviation counter. The positioning will not be accurate if this time is too short.

DYNAMIC BRAKE

When protection circuits operate due to power failures, emergency stops (EMG signal) etc., this function is used to short-circuit between servomotor terminals via a resistor, thermally consume the rotation energy, and cause a sudden stop without allowing coasting of the motor.

Braking power is generated by electromagnetic brakes only when running motors with which a large brake torque can be obtained. Because electromagnetic brakes have no holding power, they are used in combination with mechanical brakes to prevent dropping of the vertical axis.

ELECTROMAGNETIC BRAKE

This function is supplied on motors with electromagnetic brakes. Electromagnetic brakes are used to prevent slipping during power failures and faults when driving a vertical axis, or as a protective function when the machine is stopped.

These brakes are activated when not excited.

ELECTRONIC GEAR


This function electrically increases/decreases the command pulses from the pulse command module by 1/50 to 50-fold. Thus, the positioning speed and movement amount can be controlled by the electronic gear ratio magnification.

EMERGENCY STOP


Emergency stops cannot be carried out by the QD75, so a method of shutting OFF the servo side power supply from outside the programmable controller, etc., must be considered.

ENCODER

This device turns the input data into a binary code of 1 (ON) and 0 (OFF). A type of pulse generator.

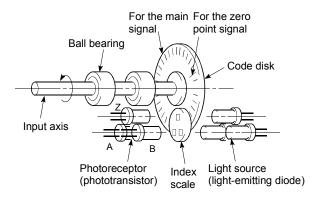

Rotary encoder

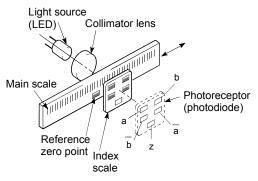

Linear encoder

ERROR CORRECTION

If a dimension error occurs in the machine, and that error is actually smaller or larger than 1m in spite of a 1m command being issued from the QD75, that error amount will be compensated. For example, when the error is actually smaller than 1m, the remaining distance to 1m is fed, and the correct 1m of positioning is carried out.

ERROR RESET

This resets error of axis. Note that if the cause of the error is not eliminated at that time, the error will occur again.

EXTERNAL REGENERATIVE BRAKE RESISTOR

This is also called the regenerative brake. When a machine is moved with a motor, power is normally supplied to the motor from an amplifier. However, the rotation energy in the motor and machine counterflows (regenerates) to the amplifier when the motor is decelerating or when driving a descending load.

The external regenerative resistor consumes this regeneration energy with resistance, obtains the regenerative brake torque, and enables the full capacity of the regeneration system during stopping.

It is used when carrying out highly repetitive acceleration/deceleration.


F

In the QD75, F is a status where the module itself has a fault. [HOLD]

FAST OPR

The axis returns to the machine OP at the OPR speed without detecting the near-point dog.

(This is not validated unless a machine OPR has been carried out first.)

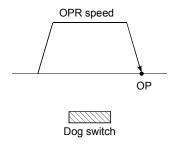


FEED PULSE

This is a pulse issued from the positioning module to a servomotor or stepping motor. Also called a command pulse.

FEED SCREW

This is the basic screw in mechanisms that position using screw rotation. Ball screws are often used to reduce backlash and dimension error.

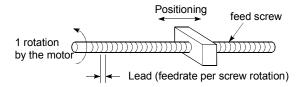

FEEDBACK PULSE

This is a method of using a returning pulse train to confirm whether the machine faithfully operated according to the commands issued in automatic control. If the machine did not faithfully operate according to the commands, a correction command is issued. For example, if a command is issued for 10,000 pulses, and a feedback pulse of 10,000 pulses is returned, then the balance becomes 0 and it can be judged that the command was faithfully followed.

Refer to the term "DEVIATION COUNTER".

FIXED-FEED

This is the feeding of a set dimension for cutting sheet and bar workpieces into the designated dimensions. Incremental system positioning is often used. The current value is not incremented, even when the feed operation is repeated.

FLASH MEMORY

This battery-less memory can be used to store parameters and positioning data for backup. Because it is battery-less, battery maintenance is not required

FLAT TYPE MOTOR (PANCAKE MOTOR)

About 100mm shorter in axial dimension than the standard motor. Used when the servomotor is installed in a small space.

FLS SIGNAL (forward limit signal)

This is the input signal that notifies the user that the limit switch (b contact configuration, normally ON) installed at the upper limit of the positioning control enabled range has been activated.

The positioning operation stops when the FLS signal turns OFF (non-continuity).

G CODE

These are standardized (coded) 2-digit numerical values (00 to 99) designating various control functions of the NC module. Also called G functions.

Example:

G01 Linear interpolation

G02 Circular interpolation CW (clockwise)


G04 Dwell

G28 OPR

G50 Max. spindle speed setting

GAIN

The changing of the ratio between two values having a proportional relation. Seen on a graph, the changing of the incline of the characteristics.

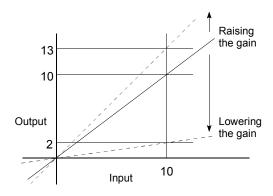


For example, when 10 is output for an input of 10, the output can be changed to 12, 5, etc., by changing the gain.

GD^2

The inertia moment. The sum total of the mass (dm) of each small area configuring an object multiplied by the square of the distance (r) of each of those areas from a given straight line. The relation with I = $\int r^2 dm GD^2$ is given by 4gl, with "q" being gravitational acceleration.

INCREMENTAL ENCODER


A device that simply outputs ON/OFF pulses by the rotation of the axis. 1-phase types output only A pulses, and do not indicate the axis rotation direction. 2-phase types output both A and B pulse trains, and can judge the rotation direction. The direction is judged to be forward if the B pulse train turns ON when A is ON, and judged to be reverse if A turns ON when B is ON. There is also another type of incremental encoder with a zero signal. The most commonly used incremental encoders output between 100 and 10,000 pulses per axis rotation. Refer to "ENCODER".

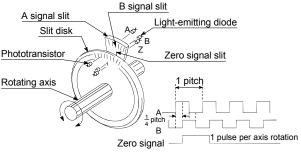

Output waveform 2-phase + OP output

INCREMENTAL SYSTEM

The current value is 0 in this system. Positions are expressed by the designated direction and distance of travel. Also called the relative address system. This system is used in fixed-feed, etc. Compare ABSOLUTE SYSTEM.

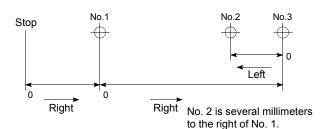

INERTIA

The property of an object, when not being affected by external forces, where it tries to maintain its current condition. The inertia moment.

INPUT TERMINAL

This is a pin connector wired by the user for inputting data to the QD75 from an external source. It is connected to the motor drive unit or machine side.

This terminal is used to output the following.


- · DRIVE UNIT READY signal
- START signal
- STOP signal

, etc.

The input No. Xn is not directly related to the program, so it is not used.

INTERLOCK

In this condition, the machine is blocked from moving to the next operation until the operation in progress is complete. This function is used to prevent damage to devices and malfunctioning.

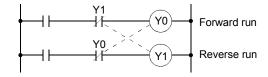

INTERPOLATION OPERATION

The simultaneous operation of multiple motors to carry out a composite operation. Each motor can be freely set with the positioning distance, acceleration/deceleration time, speed, and other factors, which are combined to move a target in a straight line, circle, etc. Linear interpolation and circular interpolation are available. (The circular interpolation uses two motors.)

INVERTER

This refers to a device to change a direct current (DC) to an alternating current (AC). The device actually changes the motor speed by changing 50Hz or 60Hz of commercial frequency to direct current once, then changing it again to a 5 to 120Hz alternating current and controlling the motor speed.

JOG

Jog. This refers to moving the tool little by little. Inching.

Parameter setting is required to carry out JOG operation.


kPPS

This is the abbreviation for "kilopulses per second". 80kPPS equals 80,000 pulses per second.

LIMIT SWITCH


This is a switch set to stop a moving object at both ends, etc., of a movement device for safety reasons.

A circuit is created in which the moving body itself presses against the switch to activate the contact and forcibly shut the power OFF. For example, pressing on the actuator in the drawing below activates the internal microswitch. There are various other types.

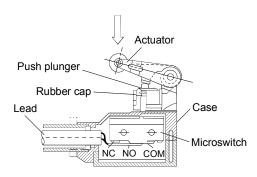

LINEAR INTERPOLATION

This automatic operation simultaneously operates two motors for the latitudinal (X) feed and longitudinal (Y) feed to move a target in a diagonal line for positioning. Three or four motors can also be operated simultaneously. The QD75 combines the operation of axis 1 through 4 for the linear interpolation. The same positioning data No. must be used for the setting. Refer to the term "INTERPOLATION".

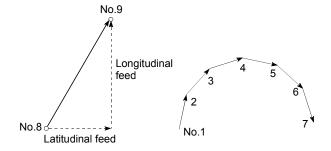

LOAD INERTIA RATIO

GDL²/GDM²
Refer to "GD²".

LOW-INERTIA MOTOR

This is a motor used when frequent acceleration/deceleration is repeated. Low-inertia motors are longitudinally longer, to decrease the rotor diameter and cover the torque. This enables their inertia moment to be reduced up to 1/3 that of standard motors. The ideal load inertia ratio is 1 or less.

M CODE (Machine Code)

These are sub functions that interlock with the positioning operation to replace drills, tighten and loosen clamps, raise and lower welding electrodes, display various data, etc. Either of two modes can be entered when the machine code turns ON: AFTER or WITH. The machine does not move to the next positioning when the machine code is ON. M codes are turned OFF by the programmable controller program.

Code Nos. from 1 to 65535 assigned by the user and used (1: Clamp, 2: Loosen, etc.). Comments can be written after 50 of the M codes, and they can be monitored using a peripheral device or displayed on an external display. Refer to "AFTER MODE" and "WITH MODE".

MACHINE FEED VALUE


The OP address at the completion of the machine OPR is stored.

The current position of the machine coordinates determined by a machine having the OP address as a reference.

Even if the current value is changed, this value will not change.

MANUAL PULSE GENERATOR

The handle of this device is manually rotated to generate pulses. This device is used when manually carrying out accurate positioning.

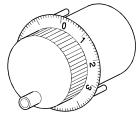

Made by Mitsubishi Electric Corp. (model: MR-HDP01)


MASTER AXIS

When carrying out interpolation operations, this is the side on which the positioning data is executed in priority. For example, when positioning with the X axis and Y axis, the side with the largest movement distance will become the master axis, and the speed will follow that axis. The slave axis speed will be ignored.

MOVEMENT AMOUNT PER PULSE

When using mm, inch, or degree units, the movement amount is calculated and output from the machine side showing how much the motor shaft moves per pulse. Positioning accuracy in smaller units is not possible. On the motor side, the movement amount per axis rotation is normally designed as a reference, so it is calculated as follows.


Movement amount per pulse =

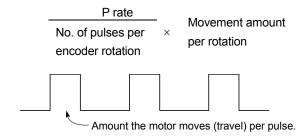

MULTI-PHASE PULSE

A combination of pulses in which 2 or more phases differ.

2-phase pulses, etc.

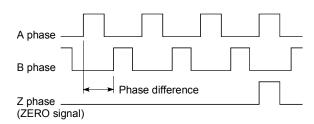

MULTIPLYING RATE SETTING

The P rate. Refer to the term "P RATE".


NC LANGUAGE (Numerical Control Language)

This is the language punched into the paper tape that instructs the machining to the NC module.

The NC language consists of EIA codes (EIA language), ISO codes (ISO standards), and JIS codes (JIS standards).

NEAR-POINT DOG

This is a switch placed before the OP. When this switch turns ON, the feedrate is changed to the creep speed. Because of that, the time that this switch is ON must be long enough to allow for the time required for deceleration from the feedrate to the creep speed.

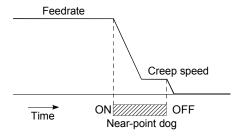

NEW CURRENT VALUE (CURRENT VALUE CHANGING)


The QD75 has no way of knowing the current value when the machine is assembled and the positioning module is connected, so this function is used to teach it a temporary approximate value as the current value. This function can also be used to write a temporary current value when the current value has been lost due to accidents, etc. If an OPR is carried out after that, the positioning module will recognize the zero point.

To prevent the accumulated value from exceeding the stroke limit in fixed-feed, etc., rewrite the current value to 0 after the fixed-feed. The current value can be changed during a positioning stop.

OP

This is the reference position for positioning. Positioning cannot start without a reference point.

The OP is normally set to the upper or lower stroke limit.

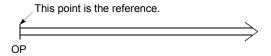

OP SHIFT FUNCTION

The OP position can be shifted in the positive or negative direction by executing a machine OPR and determining the shift amount from the machine OPR complete position.

An OP can be set at a position besides the OP position, or outside the dog switch.

OPERATION PATTERN

The kind of operation to be carried out after executing the positioning data is determined.

- 1) If "POSITIONING COMPLETE" is selected, the operation will stop after the positioning is complete.
- If "CONTINUOUS POSITIONING CONTROL" is selected, the next data No. will be automatically executed after the positioning is complete.
- If "CONTINUOUS PATH CONTROL" is selected, the positioning will not be completed. Only the speed will be automatically changed, and the next data No. will be executed.

OPR METHOD

The OPR methods are shown below. The method used depends on the machine structure, stopping accuracy, etc. OPR can be carried out when the OPR parameters are written.

- 1) Near-point dog method
- 2) Stopper method
- 3) Count method

OPR PARAMETER

This parameter is required when returning to the OP. It is determined by the machine side design, so subsequent changes of this parameter must be accompanied by changes in the machine design.

The OP is the reference for positioning operations, so if the OP is lost due to a power failure during positioning, or because the power is turned OFF and the machine is moved manually, etc., it can be restored by carrying out an OPR. When a machine OPR command is issued, the machine will move in search of the near-point dog regardless of the current value, and will stop at the OP. At this time, the current value will be rewritten to the OP address. Data cannot be written during positioning. With the QD75, data is always written for all axes (from 1 to 4 axes). Refer to the term "NEAR-POINT DOG".

OPR REQUEST

This signal turns ON when there is an error with the QD75. It will turn ON in the following situations.

- 1) When the power is turned ON.
- 2) When the PLC READY signal turns from OFF to ON.
- 3) When the machine OPR starts.
- 4) When the drive unit READY signal turns from ON to OFF.

The user judges whether to carry out a machine OPR in the above situations.

OUTPUT TERMINAL

This is a pin connector for outputting data from the QD75 to an external source. It is connected to the motor drive unit.

This terminal is used to output the following.

- Feedback pulses for both forward run and reverse run
- Start
- · Deviation counter clear

The terminal Nos. are determined for each axis.

The output No. Yn is not directly related to the program, so it is not used.

OVERRIDE FUNCTION

With this function, the speed during positioning operations (current speed) can be varied between 1 and 300%.

The speed can also be changed by the same variable rate for continuous positioning with differing designated speeds.

P RATE (Pulse Rate)

A coefficient that magnifies the feedback pulses per motor shaft rotation by 2-fold, 3-fold, 1/2 or 1/3.

It is the ratio of the feed pulses and feedback pulses.

For example, when the No. of pulses per motor shaft rotation is set to 2400 pulses, and the P rate is set to 2, the result will be equivalent to 1200 pulses.

The rotation per pulse is 0.15° when 2400 pulses per rotation are set, but this becomes 0.3° when 1200 pulses. The positioning accuracy drops as the P rate is increased.

PARAMETER

This is the basic data used in positioning. Parameters are determined by the machine side design, so subsequent changes of parameters must be accompanied by changes in the machine design.

Data cannot be written during positioning. The initial parameter values are written by the maker.

PG0 (Pulse Generator Zero)

Pronounced "pee-jee-zero". Refer to the term "ZERO SIGNAL".




POSITION CONTROL

This is mainly the control of position and dimension, such as in fixed-feed, positioning, numerical control, etc. This is always controlled with feed pulses. There is also speed control.

Drive units may differ, even when the same motor is used.

POSITION DETECTION MODULE

This is an abridged version of positioning. There are two types on MELSEC, the A1S62LS. This module has positioning and limit switch functions, and can use a total of 16 channels. The following drawing shows an example for 5 channels. A resolver is used in the positioning detection.

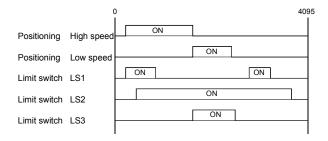

POSITION LOOP GAIN

This is the ratio of the deviation counter droop pulses to the command pulse frequency.


Position loop gain = Command pulse frequency Droop pulses

The position loop gain can be set with the drive unit. Raise the gain to improve the stopping accuracy. However, overshooting will occur if the position loop gain is raised too far, and the operation will become unstable. If the position loop gain is lowered too far, the machine will stop more smoothly but the

POSITION LOOP MODE

stopping error will increase.

This is one servo control mode used in positioning. It is a mode for carrying out position control. The other servo control modes are the speed loop mode for carrying out speed control, and the torque loop mode for carrying out torque control (current control).

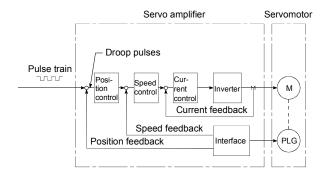

POSITIONING


Accurately moving the machine from a point to a determined point. The distance, direction, speed, etc., for that movement are designated by the user. Positioning is used in operations such as cutting sheets, drilling holes in plates, mounting parts on a PCB, and welding. Positioning is also used with robots.

POSITIONING COMPLETE

Refer to the term "OPERATION PATTERN".

POSITIONING COMPLETE SIGNAL

This is a signal that occurs when the positioning is complete. A timer set beforehand starts when this signal is output, and the machine movement stops for that time. When this signal turns ON, the positioning start signal turns OFF.

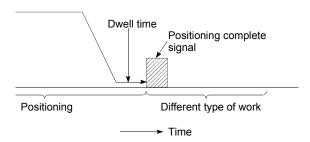

POSITIONING CONTINUED

Refer to the section of term "operation pattern".

POSITIONING DATA

This is data for the user to carry out positioning. The No. of points to which positioning is carried out (the No. of addresses) is designated by the user. In the QD75, these are 600 points.

As a principle, positioning is executed in the order of the data Nos.

POSITIONING PARAMETER

This is basic data for carrying out positioning control. Types of data include control unit, movement amount per pulse, speed limit value, upper and lower stroke limit values, acceleration/deceleration time, positioning system, etc.

Parameters have an initial value, so that value is changed to match the control conditions.

POSITIONING START

This refers the act of designating a target data No. and starting the positioning.

The operation after the positioning is complete for that data No. is determined by the data No.'s positioning pattern.

PTP Control (Point To Point Control)

This is a type of positioning control. With this control method, the points to be passed are designated at random locations on the path. Movement only to a given target positioning is requested. Path control is not required during movement from a given point to the next value.

PULSE

The turning ON and OFF of the current (voltage) for short periods. A pulse train is a series of pulses. The QD75 is the module that generates the pulses.



PULSE GENERATOR


This is a device that generates pulses. Examples include devices installed on the motor shaft that create pulses when the shaft rotates, and digital devices.

1-phase types output one pulse train. 2-phase types output two pulse trains with a phase difference. From 600 to 1,000,000 pulses can be output per shaft rotation. Generators with a ZERO signal function to output 1 or 2 pulses per shaft rotation. Abbreviated as PLG. Refer to the term "ENCODER".

PULSE OUTPUT MODE

There are two methods used to issue forward run and reverse run commands to the servomotor. The type used differs according to the machine maker. In type A, the forward run pulses and reverse run pulses are output from separate terminals.

In type B, the forward run pulses and reverse run pulses are output from the same terminal, and a forward/reverse run identification signal is output from another terminal.

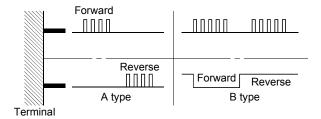

READY


This means that preparation is complete.

REAL-TIME AUTO TUNING (Real-time Automatic Tuning)

Refer to "AUTO TUNING".

REFERENCE AXIS SPEED

This is the speed of the reference axis during interpolation operations.

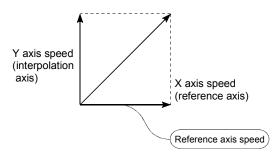


REGENERATIVE BRAKE OPTION

This function is an option. It is used when carrying out highly repetitive acceleration/deceleration.

Refer to "EXTERNAL REGENERATIVE RESISTOR".

RESOLVER

This device detects the angle by resolving the two voltages of the analog input. Also called a 2-phase synchro. For a 1-phase voltage input, the axis rotation angle is converted into a perpendicular 2-phase voltage (analog voltage) and output.

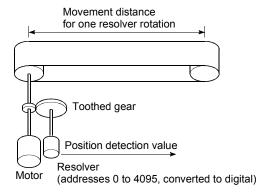

RLS SIGNAL (reverse limit signal)


This is the input signal that notifies the user that the limit switch (b contact configuration, normally ON) installed at the lower limit of the positioning control enabled range is activated. The positioning operation stops when the RLS signal turns OFF (non-continuity).

ROTARY TABLE

A round table on which the workpiece is placed. Positioning control is carried out while rotating the workpiece in a 360° range.

S-CURVE ACCELERATION/DECELERATION

In this pattern, the acceleration and deceleration follow a sine curve, and the movement is smooth. The S-curve ratio can be set from 1 to 100%.

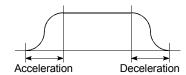

SERVO AMPLIFIER


Refer to the term "DRIVE UNIT".

SERVO LOCK

In positioning using a servomotor, stepping motor, etc., working power is required to hold the machine at the stop position.


(The position will be lost if the machine is moved by external power.)

This kind of state is called servo lock or servo lock torque.

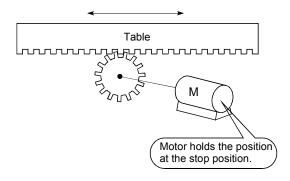

SERVO ON

The servo amplifier will not operate if the servo amplifier is in a normal state and this servo ON signal is OFF.

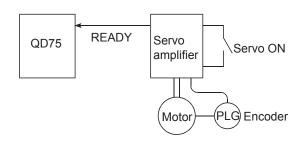

SERVOMOTOR

A motor that rotates true to the command. Servomotors are highly responsive, and can carry out frequent high-speed and highaccuracy starts and stops.


DC and AC types are available, as well as large-capacity motors. A pulse generator accessory for speed detection is common, and feedback control is often carried out.

SETTING UNIT

This is one setting item of the positioning reference parameters. The unit to be used is designated as mm, inch, degree, or pulse.

SFC (Sequential Function Chart)

A sequential function chart is a programming method optimally structured for running a machine's automatic control in sequence with the programmable controller.

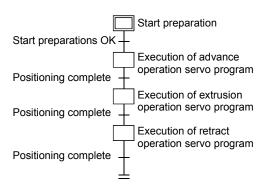

SKIP FUNCTION

When a SKIP signal is input, the positioning being executed is interrupted, the motor is deceleration stopped, and the next positioning is automatically carried out.

SLAVE AXIS

During interpolation operation, the positioning data is partially ignored on this side. This axis is moved by the master axis data.

SPEED CONTROL

Speed control is mainly carried out with the servomotor. It is an application for grindstone rotation, welding speed, feedrate, etc. Speed control differs from position control in that the current position (address) is not controlled. Drive units may differ, even when the same motor is used.

SPEED INTEGRAL COMPENSATION

This is one item in the parameters of the servo amplifier, and is used to raise the frequency response during speed control to improve transient characteristics.

When adjusting the speed loop gain, raising this value is effective if the overshooting during acceleration/deceleration remains large. This compensation is set in ms units.

SPEED LIMIT VALUE

This is the max. speed for positioning. Even if other data is mistakenly set to a higher speed than this, the positioning will be carried out at this speed limit value when it is set in the parameters. The acceleration time becomes the time to accelerate from a stopped state to the speed limit value, and the deceleration time becomes the time to decelerate from the speed limit value to a stopped state.

SPEED LOOP GAIN

This is one item in the parameters of the servo amplifier, and expresses the speed of the control response during speed control. When the load inertia moment ratio increases, the control system speed response decreases and the operation may become unstable. If this happens, the operation can be improved by raising this setting value.

The overshoot will become larger if the speed loop gain is raised too far, and motor vibration noise will occur during operation and when stopped.

SPEED LOOP MODE


This is one servo control mode used in positioning. It is a mode for carrying out speed control. Refer to "POSITION LOOP MODE".

SPEED-POSITION SWITCHING CONTROL

With this control, positioning is carried out to the end point of the movement amount while changing the speed at the speed switching point during positioning control.

SPEED-POSITION SWITCHING CONTROL MODE

This is one method used for positioning. It is an application for operations such as high-speed movement to a point unrelated to positioning, then set dimension movement from the switching signal activation point.

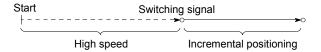

START COMPLETE

This signal gives an immediate response notifying the user that the QD75 that was started is now in a normal state and can start positioning.

STARTING AXIS

One of the QD75 axis system axes (axis 1, axis 2, axis 3, or axis 4) or the reference axis for the interpolation operation is designated as the starting axis.

STATUS


Data showing the state of the machine. Collectively refers to signals that turn ON when the battery voltage drops, during OPR requests, during dwell time, etc.

STEP FUNCTION

When the operation is designed so that several positioning data Nos. are consecutively run, this function can be used to carry out a test operation for 1 data item at a time.

STEP OUT


Stepping motors rotate in proportion to the No. of pulses (frequency), but the motor's rotation will deviate if the load is too large for the motor. This is called step out. If step out occurs, the motor must be replaced by one with a larger torque. Step out causes the positioning error to increase.

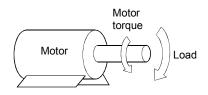


STEPPING MOTOR

A motor that rotates a given angle (example: 0.15ø) when 1 pulse is generated.


For that reason, a rotation proportional to the No. of pulses can be obtained. 2-phase to 5-phase stepping motors are available. In the 3-phase type, the rotor rotates in order from A to C when a voltage is applied. Often found in compact motors, stepping motors rotate accurately without feedback. Be careful of step out when overloaded.

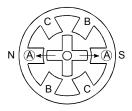


1) First, the A phase is excited by a pulse.

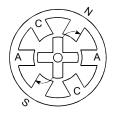

When the B phase is then excited, the force works in the direction shown by the arrows.

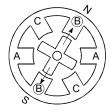

The nearest tooth to the
 B phase is attracted, and the
 rotation stops.

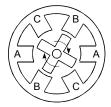

 As the excitation phase is continuously changed, the rotor rotates in a clockwise direction.

STOP SETTLING TIME

Refer to the term "DWELL TIME".

STOP SIGNAL


In positioning control, this is the input signal that directly stops the operation from an external source.

The operation stops when the external stop signal (a-contact) turns ON (continuity).

STOP WITH STOPPER

This is one machine OPR method. With this method, a stopper is established at the OP, and the operation is stopped when the machine presses against it.

Motor burning would occur or the stopper would be damaged if the machine were left in that state. There are two methods to prevent this; a timer can be used to shut OFF the motor after a fixed time, or the motor can be stopped by limiting sudden increase in the motor torque when the machine presses against the stopper.

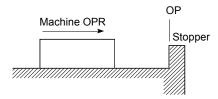

STROKE


The stroke is the variation in the operation by the distance from a stopped state to the next stopped state after a movement.

STROKE LIMIT

This is the range in which a positioning operation is possible, or the range in which the machine can be moved without damage occurring.


(Movement outside this range is possible in the manual operation.) For operations using a worm gear, the stroke limit is determined by the length of the screw. For operations using a fixed-feed, it is determined by the max. dimension to be cut.

The upper and lower limits are set in the parameters, but a separate limit switch should be established and an emergency stop circuit outside the programmable controller should be created. Refer to the term "LIMIT SWITCH".

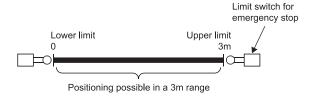

SUDDEN STOP

A stop carried out in a shorter time than the deceleration time designated in the parameters.

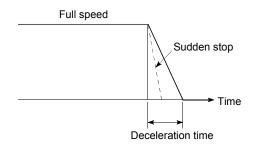

TEACHING

When the positioning address is uncertain, or gauging is required, this function is used by the user to search for and teach the position to the machine.

For example, complex addresses such as drawings can be taught by tracing a model, and the positioning operation can be reproduced.

TORQUE CONTROL

In this function, a limit is established for the resistance torque applied to the motor used for positioning. The power is turned OFF if torque exceeding that value is applied to the motor. When excessive torque is applied to a motor, it causes the current to suddenly increase. Motor burning and other stress on the motor occurs, and the life of the motor is shortened. This function utilizes the sudden increase in the torque when the machine OPR to issue a

TORQUE LOOP MODE

command to stop the motor.

Also called the current loop mode.

Refer to "POSITIONING LOOP MODE".

TORQUE RIPPLE

Torque width variations, deviations in the torque.

TRACKING FUNCTION

In this function, positioning is carried out at a speed relative to a moving target object by inputting the movement amount from an external encoder and adding it to the servo command value.


TRAPEZOIDAL ACCELERATION/DECELERATION

An operation in which a graph of the time and speed takes a trapezoidal shape.



TURNTABLE

A rotating table, which is turned using power. The table is used divided from one 360° rotation into the required locations for work. The positioning control unit is "degree".

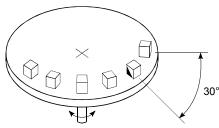

Rotated by the motor

UNIT SETTING

This is the setting of the unit for the actual address to which positioning is required, or for the movement amount.

The following units can be set: mm, inch, degree and pulse. The initial value in the parameters is a pulse unit.

WARNING

A warning is output as a warning code in when an abnormality is detected that is not serious enough to require cancellation or stoppage of the positioning operation. Warnings are handled differently than errors.

WINDOW

These are the selection menus that appear on the screen when the QD75 is started.


- · Menu selection window
- · Mode function selection window
- Sub-function selection window
- Execution/setting selection window

WITH MODE

This is the mode that outputs the M code before the start of the positioning. This mode turns ON at the positioning start, enabling voltage to be applied to the welding electrodes, display of positioning speeds, etc. Refer to the term "AFTER MODE".

XY TABLE

This is a device that moves a table in the X (latitudinal) and Y (longitudinal) directions so that positioning can be carried out easily. There are also commercially available products.

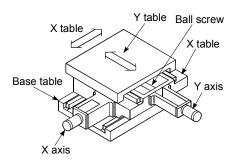

Z PHASE

Also called "PG zero". Refer to "ZERO SIGNAL".

ZERO SIGNAL

This refers to PG0 of the pulse generator (encoder) (one detection per shaft rotation). It also called "Z phase". Refer to the term "PULSE GENERATOR".

Appendix 12 Positioning control troubleshooting

Trouble type	Questions/Trouble	Remedy	No.
Parameter	Display reads "FFFFH" when a parameter is read with GX Configurator-QP.	The CPU module power was turned OFF or the CPU module was reset, etc., during flash ROM writing, which deleted the data in the flash ROM. Initialize the parameters, and reset the required parameters. (Refer to Section 13.2 "Parameter initialization function" for details.)	1
	How can the parameters be returned to their initial values (default values)?	Set the " Cd.2 Parameter initialization request" to "1". (Refer to Section 13.2 "Parameter initialization function" for details.)	2
	A parameter error occurred although the parameter was set correctly by GX Configurator-QP.	The parameter may have been overwritten in the sequence program. Review the sequence program.	3
Hardware stroke limit	The machine overruns if operating at high speeds when the hardware stroke limit range is exceeded.	In the QD75, deceleration stops are executed after the machine exceeds hardware stroke limit range. Because of this, more time is required for the deceleration stop as the speed increases, and the overrun becomes larger. (The deceleration time becomes shorter at lower speeds, so the overrun becomes smaller.)	4
	When the machine exceeded the hardware stroke limit range, positioning toward inside the range was started, but the machine did not start.	Use a "JOG operation", "Inching operation" or "Manual pulse generator operation" to return the machine to inside the hardware stroke limit range. (When the hardware stroke limit range is exceeded, positioning will not start toward inside the range even when so commanded. Once the range is exceeded, a return to inside the range can only be executed using a "JOG operation", "Inching operation" or "Manual pulse generator operation".)	5
Degree	Exactly one rotation is required, but the setting range for a "degree" unit setting is "0 to 359.999". Won't the rotation deviate by "0.001"?	Designate "360.000" in the INC control. The motor will make exactly one rotation.	6
Movement amount per pulse	If the "movement amount per pulse" is calculated as written in the manual, settings smaller than the basic parameter setting range cannot be carried out.	Set "movement amount per pulse" in the QD75 using the three parameter values of Pr.2 to Pr.4. Try setting the values following the explanations for each parameter.	7
Override	Will an override setting value written before starting be valid?	It will be valid.	8
	During path control, will the override still be valid after the point is passed?	It will still be valid.	9
	How can the override be canceled?	Set the " Cd.13 Positioning operation speed override" to "100".	10

Trouble type	Questions/Trouble	Remedy	No.
Acceleration/ deceleration time	How can the deceleration stop time during stopping be shortened using the hardware stroke limit?	Set "1: Sudden stop" in the " Pr.37 Stop group 1 sudden stop selection", and reduce the setting value of " Pr.36 Sudden stop deceleration time".	11
	The motor does not operate at "60000ms" although the acceleration/deceleration time is set to "60000ms".	The value set for the acceleration/deceleration time is the time required for the machine to accelerate from speed "0" to the value set in " Pr.8 Speed limit value". Because of that, the acceleration/deceleration time will also be shorter than "60000ms" if the command speed value is smaller than the " Pr.8 Speed limit value". (Refer to the explanation for Pr.9 and Pr.10 for details.)	12
	Can each acceleration/ deceleration time be individually set to trapezoidal or S-curve acceleration/deceleration?	The trapezoidal and S-curve acceleration/deceleration processing is a common setting for all acceleration/deceleration times, so individual setting is not possible. (Refer to Section 12.7.6 "Acceleration/deceleration process function".)	13
	The machine starts and stops suddenly when carrying out JOG operations and positioning operations. (Using an MR-J2S servo amplifier.)	Review the parameter settings for acceleration/ deceleration time, speed limit value, JOG speed limit value, JOG acceleration/deceleration time, etc.	14
Simplified absolute position detection system	Are simplified absolute position detection system possible in the QD75 Positional deviation models?	They are possible if the models are used in combination with a Mitsubishi "AC Servo". (Refer to "AC servo User's Manual" for details.)	15
Positional deviation	The physical position position detection system from the commanded position, although the positioning is complete (and the monitored current position is correct).	If the deviation counter value is not "0", the servo side is still moving. Increase the torque.	16
Electronic gear	A setting of "1µm = 1pulse" is required in the following system. • Ball screw pitch = 10mm • No. of feedback pulses = 8192pulse	In this case, the following values will result. No. of pulses per rotation = 8192 Movement amount per rotation = 10000 Unit magnification = 10 Therefore, the "Movement amount per pulse" will become "1.2207µm". This value is fixed by the machine system, so it cannot be changed. Thus, the setting "1µm = 1pulse" cannot be achieved.	17

Trouble type	Questions/Trouble	Remedy	No.
Error compensation	The machine only moves to "10081230", although positioning with a command value of "10081234" carried out. How can the error be compensated? The following values are currently set. Pr.2 No. of pulses per rotation = 8192 Pr.3 Movement amount per rotation = 8000	Reset Pr.3 and Pr.2 in the following order. 1) Calculate "8192/8000 × 10081230/10081234". 2) Obtain the reduced value. 3) Set the numerator in "Pr.3 Movement amount per rotation", and the denominator in "Pr.2 No. of pulses per rotation".	18
	When carrying out a count method machine OPR, the message "Leave Sufficient Distance From The OP Position To The Near-Point Dog OFF." appears. Is there a problem if the distance is short?	The near-point dog must be set to turn OFF at a position after the OP is passed. (When the machine OPR is started on the near-point dog on in a count-method machine OPR, the machine enters a normal machine OPR operation after returning to the near-point dog OFF region.) (If the near-point dog is turned OFF before the OP, and the machine OPR is started between the near-point dog OFF position and the OP, the machine will mistakenly interpret that its current position is before the near-point dog ON position, and it will pass over the OP and continue moving.)	19
	In the near-point dog method machine OPR, the stop positions are not uniform.	Carry out the following measures. 1) Separate the near-point dog signal and zero signal detection positions. 2) Lower the values in " Pr.46 OPR speed" and " Pr.47 Creep speed". 3) Confirm whether the zero signal and near-point dog signal turn ON normally. 4) Check that there is no play (backlash) in the machine system.	20
OPR	Can the machine OPR be carried out with the OPR retry function when it is started with the nearpoint dog ON and the upper/lower limit OFF?	A "Hardware stroke limit error" will occur and the operation will not be carried out. (The machine will interpret any position where the nearpoint dog is ON as being within the working range, and that the upper/lower limit is ON.)	21
	Are ABS and INC positioning possible without carrying out an OPR?	They are possible. In this case, the position where the power is turned ON is handled as the current feed value "0".	22
	After an OPR, the OPR request flag sometimes turns ON for no apparent reason.	 The OPR request flag turns ON in the following cases. When the power is turned ON. When the PLC READY signal [YO] turns from OFF to ON. When an OPR is carried out. When the servo amplifier power is turned OFF. If no problem is found when the above are checked, then it is possible that the communication is being interrupted by "a fault in the bus cable", "noise influence", etc. 	23
	The OPR complete flag (Md.31) Status: b4) sometimes turns ON when it shouldn't be ON.	Check whether the drive unit READY signal is weak or the power supply is unstable.	24

Trouble type	Questions/Trouble	Remedy	No.
Start	The positioning start signal [Y10] is kept ON until the BUSY signal is OFF, but is there any problem with turning it OFF before the BUSY signal turns OFF?	After the BUSY signal turns ON, there is no problem with turning [Y10] OFF before the BUSY signal turns OFF. (The QD75 detects the rising edge (OFF \rightarrow ON) of the positioning start signal [Y10].)	25
	The operation will not start even when the start signal is turned ON.	Check the " Md.26 Axis operation status" and " Md.23 Axis error No.".	26
	How many milliseconds should the axis stop signal [Y4] be turned ON for?	The signal should be turned ON at 4ms or more. (If possible, set the signal so it does not turn ON only momentarily, but instead stays ON until the BUSY signal turns OFF. This will keep the stop signal from skipping.)	27
	How can a sudden stop be selected?	Set "1: Sudden stop" in the parameter from Pr.37 to Pr.39 corresponding to the stop group, and reduce the setting value of "Pr.36 Sudden stop deceleration time".	28
Stop	"Normal deceleration stop" was selected in " Pr.39 Stop group 3 sudden stop", and Y stop was turned ON. If the Pr.39 setting is changed to "sudden stop" during a deceleration stop, and the Y stop signal turns from OFF to ON, will the operation change to a sudden stop from that point?	The operation will not change. Even if the same stop factor is input again during the deceleration stop, it will be ignored. The same deceleration stop process used when the stop signal was first input will be continued. (This also applies for Pr.37 and Pr.38.)	29
Circular interpolation	ABS system circular interpolation operates normally, but a vertically oblong circle results when INC system circular interpolation is carried out.	The address designation may be incorrect. When carrying out INC system circular interpolation, designate the relative addresses from the starting point of both the center point and end point.	30
Speed-position switching control	Can the speed be changed during speed control and position control by speed-position switching control?	No. The speed for the speed control and position control cannot be set differently.	31
JOG operation	Even if the JOG start signal is turned ON, the response until it turns ON is sometimes slow.	 Either of the following is possible. The sequence program may be incorrect. Check by creating a test program in which the JOG start signal is turned ON only. If the machine is hitting something when the torque setting is low, it may be trying to move by JOG operation in the opposite direction. In this case, the machine will start moving only after the internal droop pulses have been reached 0 in the counter, even if the JOG start signal has been turned ON. This makes it seem that the response is slow. 	32
	The operation is not carried out at the set JOG speed, although the speed limit value has not been reached.	Either of the following is possible. 1) The JOG start signal may be chattering. Monitor the JOG start signal to confirm whether it is chattering. (When using the "BUSY signal" in the JOG operation start circuit, check the position of the BUSY signal.) 2) The "Pr.31 JOG speed limit value" may not be appropriate. Review the setting value and carry out the JOG operation again.	33

Trouble type	Questions/Trouble	Remedy	No.
JOG operation	When a JOG operation is attempted, an error results and the machine does not move.	The " Pr.31 JOG speed limit value" may be larger than the " Pr.8 Speed limit value". Review the parameters and carry out the JOG operation again.	34
	Why does the positioning complete signal turns ON during the JOG operation?	If a value other than "0" is set for " Cd.16 Inching movement amount", the inching operation is carried out and the positioning complete signal turns ON. Confirm that the " Cd.16 Inching movement amount" is set to "0".	35
	Is it possible to count the pulses when the B phase is set to "1", and only A phase pulses are input?	Not possible. (The QD75 counts 1, 0, 1, 0.)	36
Manual pulse generator operation	Can a manual pulse generator other than the Mitsubishi Electric MR-HDP01 be used?	Other manual pulse generators can be used if they conform to Section 3.4 "Specifications for input/output interfaces with external devices."	37
	Can one manual pulse generator be operated connected to several QD75 modules?	This is possible if the system conforms to the electrical specifications.	38
Current value changing	The BUSY signal is not canceled by the current value changing. How can it be canceled?	The BUSY signal may remain if the scan time is long. Use a complete signal to check whether the current value changing has been executed.	39
QD75 READY signal	The QD75 READY signal does not turn ON even when the PLC READY signal [Y0] is turned ON.	"A parameter error" has occurred. Confirm the error No. in the error history, and correct the parameter.	40
M code ON signal	Is there any problem with setting an M code ON signal OFF request in the next scan after the M code ON signal ON?	The QD75 checks the M code ON signal OFF request every "0.9ms" (QD75P_N/QD75D_N) or "1.8ms" (QD75P_/QD75D_), so there is a possibility that the M code ON signal OFF may be delayed by a maximum of "0.9ms" (QD75P_N/QD75D_N) or "1.8ms" (QD75P_/QD75D_) after the M code ON signal ON, even if an M code ON signal OFF request is set.	41
	How long is the output time for the deviation counter clear signal?	The time set in " Pr.55 Deviation counter clear signal output time". (Initial value: 11ms)	42
Deviation counter clear	Is a deviation counter clear signal output when the positioning is complete?	A signal is not output. The only time the QD75 outputs a deviation counter clear signal is for a machine OPR.	43
	How can a deviation counter clear signal be output?	The QD75 does not output a deviation counter clear signal except for machine OPR.	44
Module	An error "PLC READY OFF start" (error code: 537) occurs after the QD75 is replaced. (The sequence program is the same.)	The internal parameters of the QD75 may be different. Check if the QD75 READY signal [X0] turns ON when the PLC READY signal [Y0] turns ON. When the PLC READY signal is ON but the QD75 READY signal is OFF, the parameter error has occurred. Check the error code and modify the parameter with the error.	45
	The motor only rotates in one direction.	The parameter settings on the QD75 side may not match those on the servo side. Check the parameter settings.	46
Motor	Can the current motor speed be monitored?	The speed shown on the QD75 monitor is calculated from the number of pulses output from the module. Thus, the actual motor speed cannot be monitored. (" Md.22 Feedrate" monitors the commanded speed. It does not show the actual motor speed.)	47

Trouble type	Questions/Trouble	Remedy	No.			
	An error "Backlash compensation amount error" (error code: 920) occurs even when the backlash compensation value is set to "1".	$0 \leq \frac{\text{Backlash compensation value}}{\text{Movement amount per pulse}} \leq 255$ Setting is not possible if the above equation is not satisfied. Adjust by setting " $\frac{\text{Pr.4}}{\text{Init magnification" to 10-fold (or 100-fold, or 1000-fold), and setting "}} \frac{\text{Pr.2}}{\text{Pr.2}} \text{Movement amount per rotation" to 1/10 (or 1/100, or 1/1000).}$	48			
	When a JOG operation is attempted, errors such as "Hardware stroke limit (+)" or "Hardware stroke limit (–)" (error code: 104 or 105) occur and the machine does not move.	The hardware stroke limit wiring has probably not been carried out. Refer to Section 12.4.4 "Hardware stroke limit function" for details, and wire accordingly.	49			
Error/warning	An error "Speed designation during OP shift error" (error code: 997) appears when the PLC READY signal [Y0] turns from OFF to ON.	A value besides "0" or "1" may be set in the " Pr.56 Speed designation during OP shift". Review the set sequence program, and reset the correct parameters.				
	When the start signal was turned ON immediately after the stop signal ON, a warning "Start during operation" (warning code: 100) was detected, and the start was ignored.	The QD75 starts the deceleration stop process when the stop signal ON is detected. Thus, the machine interprets that "positioning is still being executed" immediately after the stop signal ON. Even if the start signal is turned ON at that time, the start request will be ignored and a warning "Start during operation" (warning code: 100) will occur.	51			
	Does a warning "Deceleration/stop speed change" (warning code: 500) occur only during "stop deceleration" and "automatically deceleration"? Is there any problem if the operation is continued in that state without resetting the error?	The warning occurs only at those times mentioned at the left. Because this is a warning, there is no problem if the operation can be continued without resetting the error. (When the speed is changed using the override, the new value will not be reflected on the data being executed, but will be reflected from the next start.)	52			
Positioning complete signal	Position control was executed but the positioning complete signal does not turn ON.	Depending on the stop occurrence factor, positioning may have not been completed normally. Check the axis monitor " Md.26 Axis operation status" after the BUSY signal has turned OFF. Stop: The stop signal has turned ON during positioning. Check the condition under which the stop signal (Y stop, external stop) turns ON. Error: An error has occurred during positioning. Check the error occurrence factor from " Md.23 Axis error No.".	53			
		The setting value of the detailed parameter 2 "Positioning complete signal output time" is 0 or shorter than the scan time. Using the sequence program, set the time when the signal can be detected securely.	54			

Appendix 13 List of buffer memory addresses

The following shows the relation between the buffer memory addresses and the various items. (Do not use any address other than listed below. If used, the system may not operate correctly.)

	Buffer mem	ory address		- Item	Memor	v area
Axis 1	Axis 2	Axis 3	Axis 4	item	Memor	y area
0	150	300	450	Pr.1 Unit setting		
1	151	301	451	Pr.2 No. of pulses per rotation (Ap)	-	
2	152	302	452	Pr.3 Movement amount per rotation (AI)	eters	
3	153	303	453	Pr.4 Unit magnification (Am)	ram	
4	154	304	454	Pr.5 Pulse output mode	c pa	
5	155	305	455	Pr.6 Rotation direction setting	Basic parameters 1	
6	156	306	456	Pr.7 Bias speed at start	-	
7 8	157 158	307 308	457 458			
9	159	309	459	Not used	ters	
10 11	160 161	310 311	460 461	Pr.8 Speed limit value	аше	
12	162	312	462	Pr.9 Acceleration time 0	Basic parameters	
13 14	163 164	313 314	463 464		asic	
15	165	315	465	Pr.10 Deceleration time 0	Ф	
17	167	317	467	Pr.11 Backlash compensation amount		ρ
18 19	168 169	318 319	468 469	Pr.12 Software stroke limit upper limit value		Positioning parameters
20	170	320	470	Pr.13 Software stroke limit lower limit value	1	aran
21	171	321	471		1	g pr
22	172	322	472	Pr.14 Software stroke limit selection	+	ijonii
23	173 174	323 324	473 474	Pr.15 Software stroke limit valid/invalid setting	- -	Posit
25	175	325	475	Pr.16 Command in-position width	eters	ш.
26	176	326	476	Pr.17 Torque limit setting value	ame	
27	177	327	477	Pr.18 M code ON signal output timing	d pai	
28	178	328	478	Pr.19 Speed switching mode	Detailed parameters 1	
29	179	329	479	Pr.20 Interpolation speed designation method	Det	
30	180	330	480	Pr.21 Current feed value during speed control		
31	181	331	481	Pr.22 Input signal logic selection		
32	182	332	482	Pr.23 Output signal logic selection	1	
33	=	-	_	Pr.24 Manual pulse generator input selection	1	
34	184	334	484	Pr.150 Speed-position function selection	7	
35	185	335	485	Not used	စ	
36 37	186	336	486	Pr.25 Acceleration time 1	Detailed parameters 2	
37 38	187 188	337 338	487 488	Dr. 20 Appalaration time 2	Deta	
39	189	339	489	Pr.26 Acceleration time 2	_ _ gd	

	Buffer mem	ory address		W		
Axis 1	Axis 2	Axis 3	Axis 4	- Item	Memoi	ry area
40 41	190 191	340 341	490 491	Pr.27 Acceleration time 3		
42	192	342	492	Pr.28 Deceleration time 1		
43 44	193 194	343 344	493 494		1	
45	195	345	495	Pr.29 Deceleration time 2		
46 47	196 197	346 347	496 497	Pr.30 Deceleration time 3		
48 49	198 199	348 349	498 499	Pr.31 JOG speed limit value		
50	200	350	500	Pr.32 JOG operation acceleration time selection	s S	ters
51	201	351	501	Pr.33 JOG operation deceleration time selection	Detailed parameters 2	Positioning parameters
52	202	352	502	Pr.34 Acceleration/deceleration process selection	aran	y par
53	203	353	503	Pr.35 S-curve ratio	ed b	Juing
54 55	204	354	504	Pr.36 Sudden stop deceleration time	Detail	ositic
55 56	205 206	355 356	505 506	Pr.37 Stop group 1 sudden stop selection		Δ.
57	207	357	507	Pr.38 Stop group 2 sudden stop selection	1	
58	208	358	508	Pr.39 Stop group 3 sudden stop selection		
59	209	359	509	Pr.40 Positioning complete signal output time	<u>.</u>	
60	210	360	510	Pr.41 Allowable circular interpolation error width		
61 62	211 212	361 362	511 512	Pr.42 External command function selection		
70	220	370	520	Pr.43 OPR method		
71	221	371	521	Pr.44 OPR direction	ters	
72	222	372	522	Pr.45 OP address	OPR basic parameters	
73 74	223 224	373 374	523 524		c ba	
75	225	375	525	Pr.46 OPR speed	basi	
76 77	226 227	376 377	526 527	Pr.47 Creep speed	A.	
78	228	378	528	Pr.48 OPR retry	0	ည
79	229	379	529	Pr.49 OPR dwell time		nete
80 81	230 231	380 381	530 531	Pr.50 Setting for the movement amount after near-point dog ON	s	OPR parameter
82	232	382	532	Pr.51 OPR acceleration time selection	eter	PR
83	233	383	533	Pr.52 OPR deceleration time selection	aram	
84	234	384	534	Pr.53 OP shift amount	OPR detailed parameters	
85 86	235 236	385 386	535 536	Pr.54 OPR torque limit value	etail	
87	237	387	537	Pr.55 Deviation counter clear signal output time	PRo	
88	238	388	538	Pr.56 Speed designation during OP shift	0	
89	239	389	539	Pr.57 Dwell time during OPR retry	†	
140	_	_	_	Pr.70 Positioning option valid/invalid setting	Detailed parameters 1	Positioning parameters

							mem									ltem Mem	ory					
				С	omm	on t	o axe		2, 3,	and	4				area							
							12	00								Md.1 In test mode flag						
							12 12 12 12 12 12 12	02 03 04 05 06 07 08 09								Not used						
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(Pointer No.)						
1212	1217	1222	1227	1232	1237	1242		1252	1257	1262	1267	1272	1277	1282	1287	Md.3 Start information						
	1218	1223	1228	1233	1238	1243	1248	1253	1258	1263	1268	1273	1278	1283	1288							
1213	1210	1223	1220	1233	1230	1243	1240	1200	1230	1203	1200	12/3	12/0	1203	1200							
1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	Md.50 Start (Year:month) (QD75P□N/QD75D□N) Md.5 Start (Day:hour)						
1214	1219	1224	1229	1234	1239	1244	1249	1254	1259	1264	1269	1274	1279	1284	1289	Md.5 Start (Day:hour) 별						
1215	1220	1225	1230	1235	1240	1245	1250	1255	1260	1265	1270	1275	1280	1285	1290	Md.6 Start (Minute: second)						
1216	1221	1226	1231	1236	1241	1246	1251	1256	1261	1266	1271	1276	1281	1286	1291	Md.7 Error judgment						
							12	92								Md.8 Start history pointer						
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(Pointer No.) দ্রু						
1293	1297	1301	1305	1309	1313	1317	1321	1325	1329	1333	1337	1341	1345	1349	1353	Md.9 Axis in which the error occurred	data					
1294	1298	1302	1306	1310	1314	1318	1322	1326	1330	1334	1338	1342	1346	1350	1354	Md.10 Axis error No.	itor					
1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471	Md.9 Axis in which the error occurred Md.10 Axis error occurrence (Year:month) (QD75P_N/QD75D_N) Md.11 Axis error occurrence Axis erro	Monitor data					
1295	1299	1303	1307	1311	1315	1319	1323	1327	1331	1335	1339	1343	1347	1351	1355	Md.11 Axis error occurrence (Day:hour)						
1296	1300	1304	1308	1312	1316	1320	1324	1328	1332	1336	1340	1344	1348	1352	1356	Md.12 Axis error occurrence (Minute: second)						
	u						13	57								Md.13 Error history pointer						
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(Pointer No.)						
1358	1362	1366	1370	1374	1378	1382	1386	1390	1394	1398	1402	1406	1410	1414	1418	Md.14 Axis in which the warning occurred						
1359	1363	1367	1371	1375	1379	1383	1387	1391	1395	1399	1403	1407	1411	1415	1419	Md.15 Axis warning No.						
1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487	Md.52 Axis warning occurrence (Year:month) (QD75P_N/QD75D_N) Md.16 Axis warning occurrence (Paythour)						
1360	1364	1368	1372	1376	1380	1384	1388	1392	1396	1400	1404	1408	1412	1416	1420	Md.16 Axis warning occurrence (Day:hour)						
1361	1365	1369	1373	1377	1381	1385	1389	1393	1397	1401	1405	1409	1413	1417	1421	Md.17 Axis warning occurrence (Minute: second)						
L							14	22								Md.18 Warning history pointer						
								24 25								Md.19 No. of write accesses to flash ROM						

	Buffer mem	ory address				
Axis 1	Axis 2	Axis 3	Axis 4	Item	Memor	y area
800	900	1000	1100	Md.20 Current feed value		
801	901	1001	1101	Wa.20 Outlett feed value		
802 803	902 903	1002 1003	1102 1103	Md.21 Machine feed value		
804	904	1004	1104	[MI 00] 5 I . I		
805	905	1005	1105	Md.22 Feedrate		
806	906	1006	1106	Md.23 Axis error No.		
807	907	1007	1107	Md.24 Axis warning No.		
808	908	1008	1108	Md.25 Valid M code		
809	909	1009	1109	Md.26 Axis operation status		
810	910	1010	1110	Md.27 Current speed		
811 812	911 912	1011 1012	1111 1112			
813	913	1012	1113	Md.28 Axis feedrate		
814	914	1014	1114	Md.29 Speed-position switching control		
815	915	1015	1115	positioning amount		
816	916	1016	1116	Md.30 External input/output signal		
817	917	1017	1117	Md.31 Status		
818 819	918 919	1018 1019	1118 1119	Md.32 Target value	ata	Ø
820	920	1020	1120	Md.33 Target speed	tor d	dat
821 824	921 924	1021 1024	1121	Target opens	onii	itor
825	924 925	1024	1124 1125	Md.34 Movement amount after near-point dog ON	Axis monitor data	Monitor data
826	926	1026	1126	Md.35 Torque limit stored value	Ä	
827	927	1027	1127	Md.36 Special start data instruction parameter setting value		
828	928	1028	1128	Md.37 Special start data instruction parameter setting value		
829	929	1029	1129	Md.38 Start positioning data No. setting value.		
830	930	1030	1130	Md.39 In speed control flag		
831	931	1031	1131	Md.40 In speed change processing flag		
832	932	1032	1132	Md.41 Special start repetition counter		
833	933	1033	1133	Md.42 Control system repetition counter		
834	934	1034	1134	Md.43 Start data pointer being executed		
835	935	1035	1135	Md.44 Positioning data No. being executed		
836	936	1036	1136	Md.45 Block No. being executed		
837	937	1037	1137	Md.46 Last executed positioning data No.		
838 to 847	938 to 947	1038 to 1047	1138 to 1147	Md.47 Positioning data being executed		
899	999	1099	1199	Md.48 Deceleration start flag		

	Buffer mem	ory address				
Axis 1	Axis 2	Axis 3	Axis 4	Item	Memory are	а
1500	1600	1700	1800	Cd.3 Positioning start No.		
1501	1601	1701	1801	Cd.4 Positioning starting point No.		
1502	1602	1702	1802	Cd.5 Axis error reset		
1503	1603	1703	1803	Cd.6 Restart command		
1504	1604	1704	1804	Cd.7 M code OFF request		
1505	1605	1705	1805	Cd.8 External command valid		
1506	1606	1706	1806	Cd.9 New current value		
1507 1508	1607 1608	1707 1708	1807 1808			
1509	1609	1709	1809	Cd.10 New acceleration time value		
1510 1511	1610 1611	1710 1711	1810 1811	Cd.11 New deceleration time value		
1512	1612	1712	1812	Cd.12 Acceleration/deceleration time change during speed change, enable/disable selection		
1513	1613	1713	1813	Cd.13 Positioning operation speed override		
1514 1515	1614 1615	1714 1715	1814 1815	Cd.14 New speed value		
1516	1616	1716	1816	Cd.15 Speed change request		
1517	1617	1717	1817	Cd.16 Inching movement amount	g	
1518	1618	1718	1818	Cd.17 JOG speed	data	
1519 1520	1619 1620	1719 1720	1819 1820	Cd.18 Continuous operation interrupt request	is control da	
1521	1621	1721	1821	Cd.19 OPR request flag OFF request	Axis control data Control data	
1522	1622	1722	1822	Cd.20 Manual pulse generator 1 pulse input	₹	
1523	1623	1723	1823	magnification		
1524	1624	1724	1824	Cd.21 Manual pulse generator enable flag		
1525	1625	1725	1825	Cd.22 New torque value		
1526 1527	1626 1627	1726 1727	1826 1827	Cd.23 Speed-position switching control movement amount change register		
1528	1628	1728	1828	Cd.24 Speed-position switching enable flag		
1529	1629	1729	1829	Not used		
1530 1531	1630 1631	1730 1731	1830 1831	Cd.25 Position-speed switching control speed change register		
1532	1632	1732	1832	Cd.26 Position-speed switching enable flag		
1533	1633	1733	1833	Not used		
1534 1535	1634 1635	1734 1735	1834 1835	Cd.27 Target position change value (new address)		
1536 1537	1636 1637	1736 1737	1836 1837	Cd.28 Target position change value (new speed)		
1538	1638	1738	1838	Cd.29 Target position change request flag		
1539	1639	1739	1839	Not used		
1540	1640	1740	1840	Cd.30 Simultaneous starting axis start data No. (axis 1 start data No.)		

	Buffer mem	ory address		Hann.	Memory area	
Axis 1	Axis 2	Axis 3	Axis 4	Item	iviemo	ry area
1541	1641	1741	1841	Cd.31 Simultaneous starting axis start data No. (axis 2 start data No.)		
1542	1642	1742	1842	Cd.32 Simultaneous starting axis start data No. (axis 3 start data No.)		
1543	1643	1743	1843	Cd.33 Simultaneous starting axis start data No. (axis 4 start data No.)	Axis control data	
1544	1644	1744	1844	Cd.34 Step mode	tol	
1545	1645	1745	1845	Cd.35 Step valid flag	COU	
1546	1646	1746	1846	Cd.36 Step start information	۸xis	
1547	1647	1747	1847	Cd.37 Skip command	1	
1548	1648	1748	1848	Cd.38 Teaching data selection		
1549	1649	1749	1849	Cd.39 Teaching positioning data No.		ata
1550	1650	1750	1850	Cd.40 ABS direction in degrees		ep Ic
	19	000		Cd.1 Flash ROM write request		Control data
	19	001		Cd.2 Parameter initialization request	l data	
	19	05		Cd.41 Deceleration start flag valid	System Control data	
	1907 Cd.42 Stop command processing for deceleration stop selection 1934 Cd.43 Output timing selection of near pass control		Syste			
				Cd.43 Output timing selection of near pass control		


	Buffer mem	ory address					
Axis 1	Axis 2	Axis 3	Axis 4	- Item	IVI	emory a	area
2000	8000	14000	20000	Da.1 Operation pattern Da.2 Control system Da.3 Acceleration time No. Da.4 Deceleration time No. Da.5 Axis to be interpolated			
2001	8001	14001	20001	Da.10 M code/condition data No. /No. of LOOP to LEND repetitions	No.1		
2002	8002	14002	20002	Da.9 Dwell time (JUMP destination positioning data No.)			
2003	8003	14003	20003	Da.27 M code ON signal output timing Da.28 ABS direction in degrees Da.29 Interpolation speed designation method	ž	data	data
2004 2005	8004 8005	14004 14005	20004 20005	Da.8 Command speed		Positioning data	Positioning data
2006 2007	8006 8007	14006 14007	20006 20007	Da.6 Positioning address/movement amount		Posit	Posit
2008 2009	8008 8009	14008 14009	20008 20009	Da.7 Arc address			
2010 to 2019	8010 to 8019	14010 to 14019	20010 to 20019	No.2			
2020 to 2029	8020 to 8029	14020 to 14029	20020 to 20029	No.3			
to	to	to	to	to			
7990 to 7999	13990 to 13999	19990 to 19999	25990 to 25999	No.600			

		Buffe	er mem	ory add	dress			ltem	Mor	mony	aroa	
Axi	s 1	Axi	s 2	Axi	s 3	Axi	s 4	item	IVIE	mory	area	
26000	26050	27000	27050	28000	28050	29000	29050	Da.11 Shape Da.12 Start data No. Da.13 Special start instruction Da.14 Parameter	1st point	Block start data		
26001	26051	27001	27051	28001	28051	29001	29051	2nd point		start		
26002	26052	27002	27052	28002	28052	29002	29052	3rd point		90 K		
to	0	te	0	te	0	te	0	to		- M		
26049	26099	27049	27099	28049	28099	29049	29099	50th point			۶ 0	
261	100	27	100	28′	100	29	100	Da.15 Condition target Da.16 Condition operator			Starting block 0	
261 261			102 103	28 ²		29 ²		Da.17 Address	No. 1	<u>t</u> ta	Star	
261 261	105		104 105	28 ²	105	29 ²		Da.18 Parameter 1	ž	Condition data		
261 261		27 <i>°</i> 27 <i>°</i>	106 107	28 <i>°</i> 28 <i>°</i>		29 <i>°</i> 29 <i>°</i>		Da.19 Parameter 2		Conc		ta)
		27110 t		28110 to		29110 to		No. 2				da
26120 to		27120 t		28120 to		29120 to		No. 3				췽
26190 to		27190 to		28190 to		29190 to		to No. 10		1		g bl
26200 to			o 27299	28200 to		29200 to		Block start data			Starting block 1	Positioning data (Starting block data)
26300 to	o 26399	27300 to	o 27399	28300 to	o 28399	29300 to	o 29399	Condition data			Starting	sitioning d
26400 to	o 26499	27400 t	o 27499	28400 to	o 28499	29400 to	o 29499	Block start data			block 2	Pc
26500 to	o 26599	27500 to	o 27599	28500 to	o 28599	29500 to	o 29599	Condition data			Starting	
26600 to	o 26699	27600 to	o 27699	28600 to	o 28699	29600 to	o 29699	Block start data			block 3	
26700 to	o 26799	27700 to	o 27799	28700 to	o 28799	29700 to	o 29799	Condition data			Starting block	
26800 to	o 26899	27800 to	o 27899	28800 to	o 28899	29800 to	o 29899	Block start data			block 4	
26900 to	o 26999	27900 to	o 27999	28900 to	o 28999	29900 to	o 29999	Condition data			Starting block	


	Buffer mem	ory address		Item Memory a						
Axis 1	Axis 2	Axis 3	Axis 4	item	iviemory a	area				
	300	000			PU area	data				
	to	0		Condition judgement target data of the condition data	PLC CPU memory are	Positioning data				
	300	099			I L	Posit				

Appendix 14 External dimension drawing


[1] QD75P1N

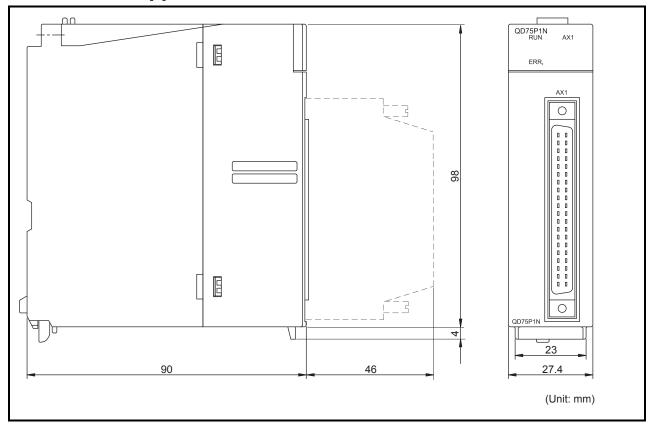

[2] QD75P2N

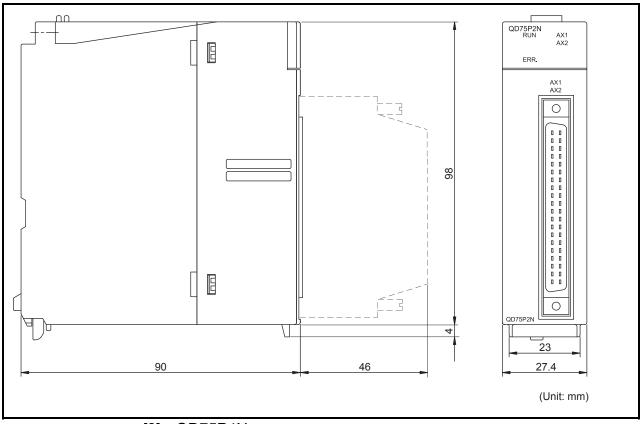


[3] QD75P4N

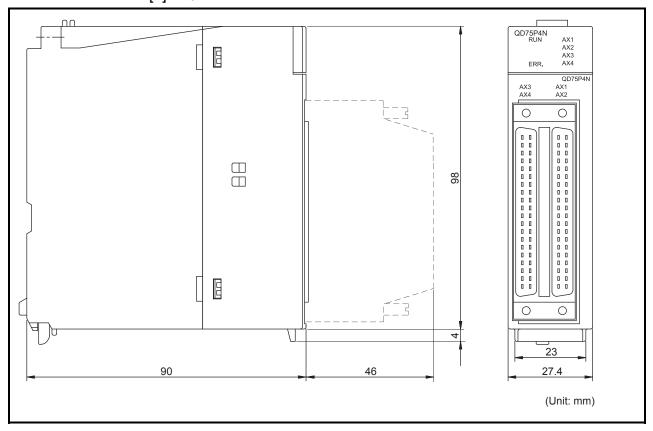


Appendix - 160

[4] QD75D1N

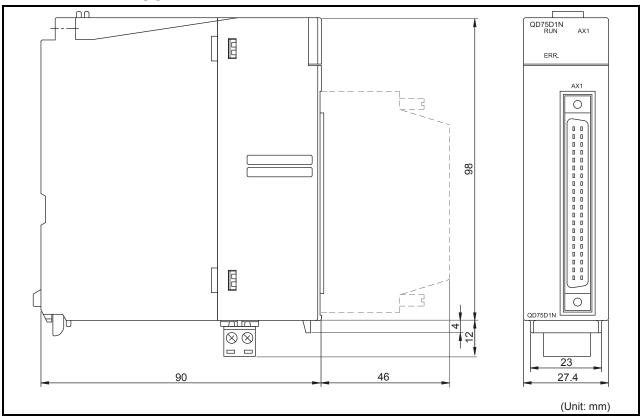


[5] QD75D2N

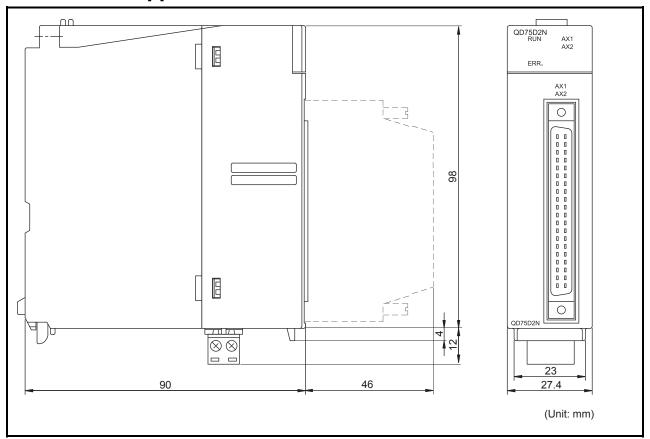


Appendix - 161


[6] QD75D4N

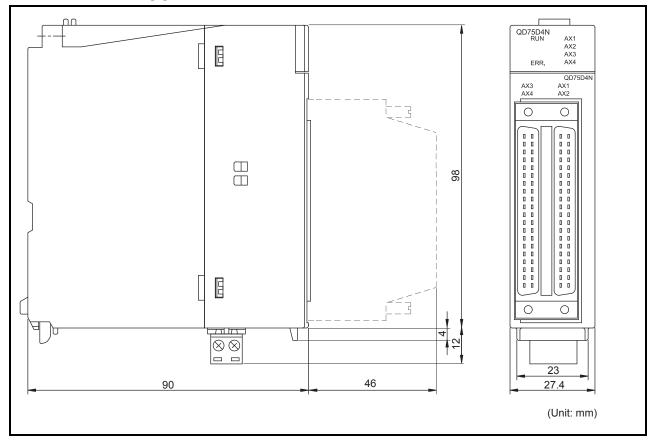

[7] QD75P1/QD75P2/QD75P4

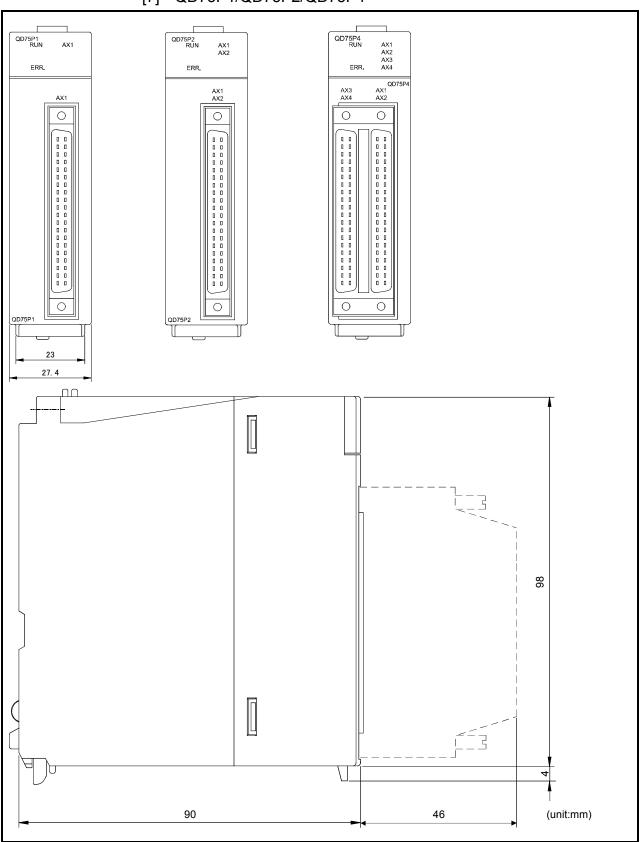

[8] QD75D1/QD75D2/QD75D4

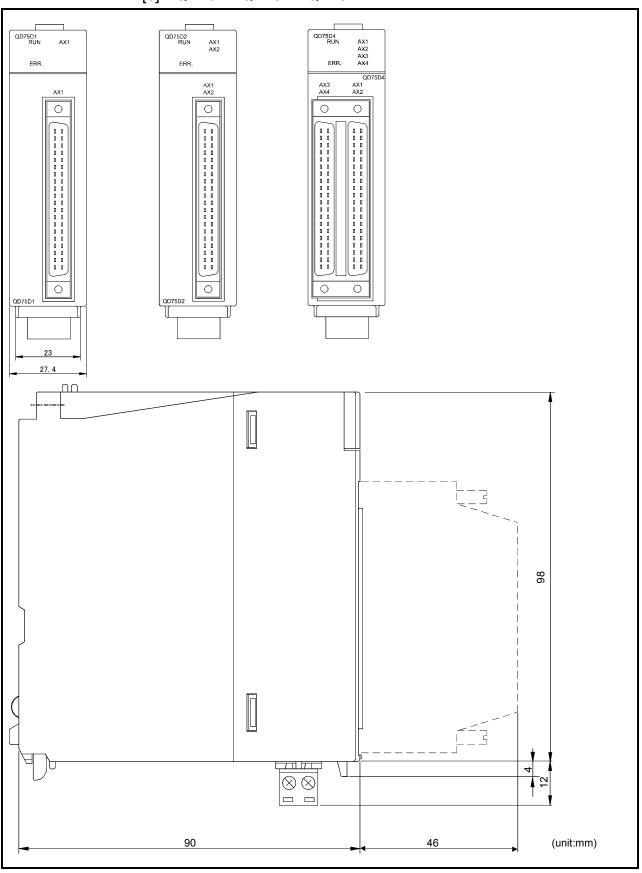

INDEX

Number]
1-2 phase excitation system (Explanation of
positioning terms)Appendix-124
1-axis fixed-feed control 9-47
1-axis linear control (ABS linear 1) 9-31
1-axis linear control (INC linear 1) 9-32
1-axis speed control 9-91
2-axis circular interpolation control with center
point designation (ABS circular right/ABS circular
left)
2-axis circular interpolation control with center
point designation (INC circular right/INC circular
left)
2-axis circular interpolation control with sub point
designation (ABS circular sub)9-60
2-axis circular interpolation control with sub point
designation (INC circular sub)9-63
2-axis fixed-feed control (interpolation) 9-49
2-axis linear interpolation control (ABS linear 2)
9-33
2-axis linear interpolation control (INC linear 2)
9-35
2-axis speed control
2-phase excitation system (Explanation of
positioning terms)Appendix-124
2-phase pulse (Explanation of positioning terms)
Appendix-124
2-speed trapezoidal control (Explanation of
positioning terms)Appendix-124
3-axis fixed-feed control (interpolation) 9-52
3-axis linear interpolation control (ABS linear 3)
9-37
3-axis linear interpolation control (INC linear 3)
9-40
3-axis speed control 9-97
4-axis fixed-feed control (interpolation) 9-57
4-axis linear interpolation control (ABS linear 4)
9-43
4-axis linear interpolation control (INC linear 4)
9-45
4-axis speed control 9-101
T-axis speed control9-101

[A]
A phase/B phase mode5-22
ABS direction in degrees (Cd.40)5-132
Absolute encoder (Explanation of positioning
terms) Appendix-125
Absolute position detection system (Explanation of
positioning terms) Appendix-125
Absolute position restoration function12-62
Absolute system9-16
Absolute system (Explanation of positioning terms)
Appendix-125
Acceleration time (Explanation of positioning
terms) Appendix-125
Acceleration time 0 (Pr.9)5-25
Acceleration time 1 (Pr.25)5-36
Acceleration time 2 (Pr.26)5-36
Acceleration time 3 (Pr.27)5-36
Acceleration time No. (Da.3)5-60
Acceleration/deceleration process selection
(Pr.34)5-38
Acceleration/deceleration processing function
12-96
Acceleration/deceleration time change during
speed change, enable/disable selection (Cd.12)
5-118
Acceleration/deceleration time change function
12-51
Actual acceleration/deceleration time5-25
Adding a module Appendix-81
Address (Da.17)5-80
Address (Explanation of positioning terms)
Appendix-125
AFTER mode12-82
AFTER mode (Explanation of positioning terms)
Appendix-125
Allowable circular interpolation error width
(Pr.41)5-43
Applicable wire size3-3
Arc address (Da.7)5-67
Auto tuning (Explanation of positioning terms)
Appendix-126

	Automatic command speed calculation
	Appendix-84
	Automatic sub arc calculation Appendix-85
	Axis error No. (Md.10, Md.23)5-92, 96
	Axis error occurrence (Day: hour) (Md.11)
	5-92
	Axis error occurrence (Minute: second) (Md.12)
	5-92
	Axis error reset (Cd.5)5-114
	Axis feedrate (Md.28)5-100
	Axis in which the error occurred (Md.9) 5-92
	Axis in which the warning occurred (Md.14)
	5-94
	Axis monitorAppendix-88
	Axis monitor data 5-96
	Axis operation status (Md.26)5-98
	Axis stop signal 3-18
	Axis to be interpolated (Da.5)5-61
	Axis warning detection 5-103
	Axis warning No. (Md.15, Md.24) 5-94, 98
	Axis warning occurrence (Day: hour) (Md.16)
	5-94
	Axis warning occurrence (Minute: second)
	(Md.17)5-94
[Ε	3]
[E	Backlash compensation (Explanation of
[E	Backlash compensation (Explanation of positioning terms)Appendix-126
[E	Backlash compensation (Explanation of positioning terms)Appendix-126 Backlash compensation amount (Pr.11) 5-26
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[[Backlash compensation (Explanation of positioning terms)
[[Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[E	Backlash compensation (Explanation of positioning terms)
[[Backlash compensation (Explanation of positioning terms)

BUSY (Explanation of position	
BUSY signal	
[C]	
CCW (Explanation of position	ning terms)
	• •
CHANGE signal (Explanation	·
Circular interpolation (Explar	
terms)	• •
Combination of functions	
Combination of main function	
Command in-position flag	
Command in-position function	
Command in-position width (
Command pulse (Explanatio	
Command pulse frequency .	
Command speed (Da.8)	
Common functions Communicating signals betw	
module	
Composite speed	
Composite speed (Explanation	on of positioning
terms)	• •
Condition operator (Da.16)	
Condition target (Da.15)	
Conditional JUMP Configuration and roles of Q	
Confirming the current value	•
Continuous operation interru	
Continuous operation interru	· · · -
(Cd.18)	
Continuous path control	
Continuous positioning contr	
Control data area Control functions	
Control system (Da.2)	
Control system repetition cou	
Control unit (Explanation of p	
	• • •
CP control (Explanation of po	
One on a second (Dr. 47)	
Creep speed (Pr.47)	
Creep speed (Explanation of	positioning terms)

Current feed value	9-17
Current feed value (Md.20)	5-96
Current feed value (Explanation of positi	oning
terms)Appe	ndix-128
Current feed value during speed control	(Pr.21)
	5-33
Current loop mode (Explanation of positi	oning
terms)Appe	ndix-128
Current speed (Md.27)	5-98
Current value (Explanation of positioning	terms)
Appe	ndix-128
Current value change testAppe	ndix-104
CW (Explanation of positioning terms)	
Арре	ndix-128
CW/CCW mode	5-21
[D]	
D/A converter (Explanation of positioning	• •
Арре	
Data No. (Explanation of positioning term	ns)
Appe	
Data transmission process	7-6
Deceleration curve	
Deceleration curve continuation	12-108
Deceleration curve re-processing	12-108
Deceleration ratio (Explanation of position	ning
terms)Appe	
Deceleration start flag (Md.48)	5-108
Deceleration start flag valid (Cd.41)	5-110
Deceleration stop	6-45
Deceleration time (Explanation of position	ning
terms)Appe	
Deceleration time 0 (Pr.10)	
Deceleration time 1 (Pr.28)	5-36
Deceleration time 2 (Pr.29)	5-36
Deceleration time 3 (Pr.30)	5-36
Deceleration time No. (Da.4)	5-60
Detailed parameters 1	5-26
Detailed parameters 2	5-36
Details of input signals (QD75 \rightarrow CPU r	nodule)
Details of output signals (CPU module -	→ QD75)
Deviation counter (Explanation of position	ning
terms)Appe	ndix-129
Deviation counter clear	3-27

Deviation counter clear signal output time (
Deviation counter droop pulse amount	
Differential output type (Explanation of pos	
terms) Append	
Digital bus connection (Explanation of posi	
terms) Append	-
DOG signal (Explanation of positioning terr	
Append	,
DOS/V personal computer	
Drive unit (Explanation of positioning terms	
Append	•
Drive unit (Servo amplifier)	
Drive unit READY	
Drive unit READY (Explanation of positioni	
terms) Append	-
Droop pulse (Explanation of positioning ter	
Append	,
Dwell time (Explanation of positioning term	
Append	•
Dwell time (JUMP destination positioning d	
No.) (Da.9)	
Dwell time during OPR retry (Pr.57)	
Dynamic brake (Explanation of positioning	
Append	
[E]	
Electrical specifications	3-19
Electromagnetic brake (Explanation of posi-	tioning
terms) Append	ix-130
Electronic gear (Explanation of positioning	terms)
Append	ix-130
Electronic gear function	12-14
Emergency stop	6-44
Emergency stop (Explanation of positioning	g terms)
Append	ix-130
Encoder (Explanation of positioning terms)	
Append	ix-130
Error and warning details	15-6
Error compensation method	12-17
Error correction (Explanation of positioning	terms)
Append	ix-130
Error history	5-92
Error history pointer (Md.13)	
Error judgement (Md.7)	
Error reset (Explanation of positioning term	s)
Append	ix-130

	Execution data backup function 13-5
	Execution prohibition flag 3-18
	External command signal3-27
	External command function selection (Pr.42)
	5-44
	External command function valid setting program
	6-25
	External command valid (Cd.8)5-116
	External dimension drawingAppendix-159
	External input/output signal (Md.30) 5-100
	External I/O signal logic switching function 13-7
	External I/O signal monitor function
	External regenerative brake resistor (Explanation
	of positioning terms)Appendix-131
[F	n
ין	F (Explanation of positioning terms)
	Appendix-131
	Fast OPR (Explanation of positioning terms)
	Appendix-131
	Fatal stop
	Features of QD751-2
	Feed pulse (Explanation of positioning terms)
	Appendix-131
	Feed screw (Explanation of positioning terms)
	Appendix-131
	Feedback pulse (Explanation of positioning terms)
	Appendix-131
	Feedrate (Md.22) 5-96
	Fixed-feed (Explanation of positioning terms)
	Appendix-131
	Flash memory (Explanation of positioning terms)
	Appendix-131
	Flash ROM 7-2
	Flash ROM write program 6-24
	Flash ROM write request (Cd.1) 5-110
	Flat type motor (Pancake motor) (Explanation of
	positioning terms)Appendix-131
	Flow of all processes 1-15
	Flow of system operation 1-15
	FLS signal (Explanation of positioning terms)
	Appendix-132
	Forced stop 6-44
	Front-loading speed switching mode 9-14
	Function version1-23, Appendix-2
	Functions for compensating the control 12-12
	Functions to change the control details 12-41
	Functions to limit the control 12-27

(3]	
•	G code (Explanation of positioning terms)Appendix-1	32
	Gain (Explanation of positioning terms)	
	GD ² (Explanation of positioning terms)	
	Appendix-1	
	General configuration of program6-	
	GX Configurator-QP	
	GX Developer	
	GX Works2A-	18
ŀ	1]	
	Hardware stroke limit function12-	
	History monitor function Appendix-1	18
T	I	
	Immediate stop6-	45
	In speed change processing flag (Md.40)	
	5-1	06
	In speed control flag5-1	
	In speed limit flag (Md.39)5-1	06
	In test mode flag (Md.1)5-	
	Inching movement amount (Cd.16)5-1	22
	Inching operation setting program6-	20
	Incremental encoder (Explanation of positionin	ıg
	terms) Appendix-1	32
	Incremental system9-	16
	Incremental system (Explanation of positioning)
	terms) Appendix-1	32
	Independent positioning control	9-6
	Inertia (Explanation of positioning terms)	
	Appendix-1	32
	Initialization program6-	25
	Input signal logic selection (Pr.22)5-	33
	Input terminal (Explanation of positioning terms	s)
	Appendix-1	33
	Input/output interface internal circuit3-	28
	Intentional stop6-	44
	Interlock (Explanation of positioning terms)	
	Appendix-1	33
	Internal circuit3-	
	Internal current consumption	
	Interpolation axis9-	
	Interpolation control9-	
	Interpolation operation (Explanation of position	
	terms)	_
	,	-

Interpolation speed designation me	-
Inverter (Explanation of positioning	terms)
[J]	
JOG (Explanation of positioning ter JOG operation acceleration time se	Appendix-133
(Pr.32) JOG operation deceleration time se	election
(Pr.33)	
JOG speed (Cd.17)	
JOG speed limit value (Pr.31)	
JOG start signal	
JUMP instruction	9-136
[K]	
kPPS (Explanation of positioning te	erms)
	,
[L]	
Last executed positioning data No.	,,
LEND	
Limit switch (Explanation of position	
Linear interpolation (Explanation of	• •
terms)	
List of block start data	• •
List of condition data	
List of control data	
List of devices used	6-5
List of errors	15-10
List of functions	3-6
List of input/output signal details	
List of input/output signals	
List of monitor data	
List of parameters	
List of positioning data List of warnings	
Load inertia ratio (Explanation of po	
terms)	
Location trace	
LOOP	
Lower limit signal	
Low-inertia motor (Explanation of p	
terms)	-

[M]
M code (Condition data No., No. of LOOP to
LEND repetitions) (Da.10)5-71
M code (Explanation of positioning terms)
Appendix-134
M code comment edit Appendix-85
M code OFF request12-82
M code OFF request (Cd.7)5-114
M code ON signal3-17
M code ON signal output timing12-81
M code ON signal output timing (Pr.18)5-30
M code output function12-81
Machine feed value9-17
Machine feed value (Md.21)5-96
Machine feed value (Explanation of positioning
terms) Appendix-134
Main functions
Major positioning controls9-2
Manual pulse generator
Manual pulse generator (Explanation of
positioning terms)Appendix-134
Manual pulse generator 1 pulse input magnification (Cd.20)5-124
Manual pulse generator enable flag (Cd.21)
5-124
Manual pulse generator input selection (Pr.24)
5-33
Master axis (Explanation of positioning terms)
Appendix-134
Max. connection distance3-3
Max. output pulse3-3
Mechanism of positioning control1-7
Module's detailed information Appendix-117
Monitor data area7-3
Movement amount after near-point dog ON
(Md.34)5-104
Movement amount per pulse (Pr.2 to Pr.4)
5-19
Movement amount per pulse (Explanation of
positioning terms)Appendix-134
Movement amount per rotation (Pr.3)5-19
Multi-phase pulse (Explanation of positioning
terms) Appendix-134
Multiplying rate setting (Explanation of positioning
terms) Appendix-134

١	N]	
_	NC language (Explanation of positioning te	•
	• •	
	Near pass function	
	Near-point dog (Explanation of positioning	•
	Append	lix-135
	Near-point dog signal	3-27
	New acceleration time value (Cd.10)	5-118
	New current value	9-130
	New current value (Cd.9)	5-116
	New current value (Explanation of position	ing
	terms)Append	
	New deceleration time value (Cd.11)	
	New speed value (Cd.14)	
	New torque value (Cd.22)	5-124
	No. of control axes	3-2
	No. of occupied I/O points	3-3
	No. of pulses per rotation (Pr.2)	5-19
	No. of write accesses to flash ROM (Md.1	
	,	
	NOP instruction	9-135
	Normal start	
·	01	
	<i>O</i>]	
	Offling simulation Appen	ماند ۱۵
	Offline simulationAppen OP (Explanation of positioning terms)	
	OP (Explanation of positioning terms)Append	lix-135
	OP (Explanation of positioning terms)Append OP address (Pr.45)	lix-135 5-49
	OP (Explanation of positioning terms)Append	lix-135 5-49
	OP (Explanation of positioning terms)Append OP address (Pr.45)	lix-135 5-49 5-54
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng .9-110
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de)
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de)
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de) .9-119
	OP (Explanation of positioning terms) Append OP address (Pr.45) OP shift amount (Pr.53) OP shift function OP shift function (Explanation of positionin Append Operation pattern (Da.1) Operation pattern (Explanation of positionin terms) Operation patterns Operation timing and processing time durin position-speed switching control Operation timing and processing time durin speed-position switching control (ABS mod Operation timing and processing time durin speed-position switching control (INC mod	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de) 9-119 ng e)
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de) 9-119 ng e)
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de) .9-119 ng e) .9-110 st OPR 8-24
	OP (Explanation of positioning terms)	lix-135 5-49 5-54 12-8 g terms lix-135 5-58 ng lix-135 9-5 ng 9-110 ng de) .9-119 ng e) .9-110 st OPR 8-24

OPR basic parameters	5-45
OPR complete flag	5-102
OPR deceleration time selection (Pr.52)	5-52
OPR detailed parameters	5-52
OPR direction (Pr.44)	5-46
OPR dwell time (Pr.49)	
OPR method	
OPR method (Pr.43)	5-45
OPR method (1): Near-point dog method	8-7
OPR method (2): Stopper method 1)	8-9
OPR method (3): Stopper method 2)	8-12
OPR method (4): Stopper method 3)	8-15
OPR method (5): Count method 1)	8-17
OPR method (6): Count method 2)	8-20
OPR method (Explanation of positioning t	erms)
Appen	dix-135
OPR parameter (Explanation of positioning	ng terms)
Appen	dix-136
OPR request	
OPR request (Explanation of positioning t	erms)
Appen	dix-136
OPR request flag	5-102
OPR request flag OFF request (Cd.19)	
	5-124
OPR request OFF program	
OPR retry (Pr.48)	5-49
OPR retry function	
OPR speed (Pr.46)	
OPR torque limit value (Pr.54)	
Order of priority for stop process	6-46
Outline design of positioning system	1-9
Outline of installation, wiring and mainten	
Outline of OPR control	
Outline of restarting	
Outline of starting	
Outline of stopping	
Output signal logic selection (Pr.23)	5-33
Output terminal (Explanation of positionin	g terms)
Appen	
Output timing selection of near pass contr	
Override function	
Override function (Evalenction of position	
Override function (Explanation of position	ing
terms) Appen	ing

[F	ף
•	P rate (Explanation of positioning terms)
	Appendix-136
	Parameter (Da.14)5-73
	Parameter (Explanation of positioning terms)
	Appendix-136
	Parameter 1 (Da.18)5-80
	Parameter 2 (Da.19)
	Parameter area
	Parameter initialization program
	Parameter initialization request (Cd.2) 5-110
	Parameter settingAppendix-82
	Performance specifications
	•
	Personal computer
	PG0 (Explanation of positioning terms)
	• •
	PLC CPU memo area
	PLC READY signal
	PLC READY signal [Y0] ON program 6-12
	Position control (Explanation of positioning terms)
	Appendix-136
	Position detection module (Explanation of
	positioning terms)Appendix-137
	Position loop gain (Explanation of positioning
	terms) Appendix-137
	Desition learness of /Fundamentian of maritimina
	Position loop mode (Explanation of positioning
	terms)
	Position-speed switching control 9-123
	Position-speed switching control enable flag
	(Cd.26)
	Position-speed switching control speed change
	register (Cd.25)5-126
	Position-speed switching latch flag 5-102
	Position-speed switching signal 3-8
	Positioning (Explanation of positioning terms)
	Appendix-137
	Positioning address/movement amount (Da.6)
	5-62
	Positioning complete 9-6
	Positioning complete (Explanation of positioning
	terms)Appendix-137
	Positioning complete signal 3-17
	Positioning complete signal (Explanation of
	positioning terms)Appendix-137

Positioning complete signal output time (Pr.40)
5-42
Positioning continued Appendix-137
Positioning control operation program6-12
Positioning data (Explanation of positioning terms)
Appendix-137
Positioning data area (No. 1 to 600)7-3
Positioning data being executed (Md.47)
5-108
Positioning data No. being executed (Md.44)
5-108
Positioning monitor Appendix-88
Positioning operation speed override (Cd.13)
5-120
Positioning parameter (Explanation of positioning
terms) Appendix-138
Positioning program examples6-15
Positioning start (Explanation of positioning terms)
Appendix-138
Positioning start No. (Cd.3)5-114
Positioning start No. setting program6-13
Positioning start program6-19
Positioning start signal3-18
Positioning start test Appendix-98
Positioning starting point No. (Cd.4)5-114
Positioning testAppendix-98
Pre-reading start function12-99
Precautions
Disposal precautions4-16
Handling precautions4-5
Precautions for creating program6-2
Precautions for installation4-7
Precautions for maintenance4-16
 Precautions for using stepping motor1-23
Precautions for wiring4-8
Process time
 Inching operation timing and processing time
11-18
 JOG operation timing and processing time
11-6
 Machine OPR operation timing and process
time6-35
 Manual pulse generator operation timing and
processing times11-28
 Operation timing and processing time during
position-speed switching control9-125

 Operation timing and processing time during speed-position switching control (ABS mode)
9-119
Operation timing and processing time during
speed-position switching control (INC mode)
9-110
Operation timing and processing time of fast
OPR 8-24
Position control operation timing and process
time 6-36
Program details 6-25
Program examples
 Absolute position restoration program 6-23
 Acceleration/deceleration time change
program 6-14
Block start data setting program 6-16
• Continuous operation interrupt program 6-38
• Error reset program 6-24
External command function valid setting
program 6-25
• Flash ROM write program
·
• Inching operation setting program 6-20
JOG operation setting program 6-20
JOG operation/inching operation execution
JOG operation/inching operation execution program 6-20
JOG operation/inching operation execution program
JOG operation/inching operation execution program 6-20
JOG operation/inching operation execution program
JOG operation/inching operation execution program 6-20 M code OFF program 6-20 Manual pulse generator operation program 6-11 OPR request OFF program 6-12 Override program 6-14 Parameter initialization program 6-14 Parameter setting program 6-12 PLC READY signal [Y0] ON program 6-12 Positioning start No. setting program 6-13 Positioning start program 6-13 Restart program 6-14
JOG operation/inching operation execution program

	Pulse generator (Explanation of positioning terms)
	Appendix-138
	Pulse output mode (Pr.5)5-21
	Pulse output mode (Explanation of positioning
	terms) Appendix-138
	PULSE/SIGN mode5-21
	Purpose and applications of positioning control
	1-5
_	21
(Q] - OD75
	QD75A-18
	QD75 READY signal3-18
F	R]
r.	READY (Explanation of positioning terms)
	Real-time AUTO tuning (Explanation of positioning
	terms) Appendix-138
	,
	Reference axis9-23
	Reference axis speed5-31
	Reference axis speed (Explanation of positioning
	terms) Appendix-138
	Regeneration brake option (Explanation of
	positioning terms) Appendix-138
	Relatively safe stop6-44
	Repeated start (FOR condition)10-15
	Repeated start (FOR loop)10-14
	Resolver (Explanation of positioning terms)
	Restart command (Cd.6)5-114
	Restart operation6-40
	Restart program6-40
	· -
	RLS signal (Explanation of positioning terms)
	Appendix-139
	Rotary table
	Rotation direction setting (Pr.6)5-23
[61
. `	S-curve acceleration/deceleration
	S-curve acceleration/deceleration processing
	method
	S-curve ratio (Pr.35)
	SERIAL No1-23, Appendix-2
	Servo amplifier (Explanation of positioning terms)
	Annendiy-139

Servo lock (Explanation of positioning term	
Append	
Servo ON (Explanation of positioning term	
Append	
Servomotor (Explanation of positioning ter	•
Setting auto refresh	
Setting block starting dataApper	
Setting data	
Setting for the movement amount after ne	
dog ON (Pr.50)	
Setting items for block start data	
Setting items for condition data	
Setting items for OPR parameters	
Setting items for positioning data	
Setting items for positioning parameters	
Setting the positioning data	9-29
Setting unit (Explanation of positioning terr	ms)
Append	dix-139
SFC (Explanation of positioning terms)	
Append	
Shape (Da.11)	
Signal layout of connector	
Signal name	3-16
Signals	
Axis stop signal	
BUSY signal	
Error detection signal	3-17
 Execution prohibition flag signal 	3-18
JOG start signal	3-18
M code ON signal	3-17
PLC READY signal	3-18
Positioning complete signal	3-17
Positioning start signal	3-17
QD75 READY signal	3-17
Start complete signal	
Synchronization flag signal	
Simultaneous start	
Simultaneous starting axis start data No. (
start data No.)(Cd.30)	
Simultaneous starting axis start data No. (
start data No.)(Cd.31)	
Simultaneous starting axis start data No. (
start data No.)(Cd.32)	
Simultaneous starting axis start data No. (
start data No.)(Cd.33)	
Skip command (Cd.37)	
J	

Skip function12-78
Skip function (Explanation of positioning terms)
Slave axis (Explanation of positioning terms)
Slot
Software stroke limit lower limit value (Pr.13)
5-27
Software stroke limit selection (Pr.14)5-28
Software stroke limit upper limit value (Pr.12)5-27
Software stroke limit valid/invalid setting (Pr.15)
5-28
Special start data instruction code setting value
(Md.36)5-106
,,
Special start data instruction parameter setting
value (Md.37)
Special start instruction (Da.13)5-78
Special start repetition counter (Md.41)5-108
Specifications of input/output interfaces3-19
Specifications of input/output signals3-16
Speed change 0 flag5-102
Speed change function12-41
Speed change request (<u>Cd.15</u>)5-120
Speed change test Appendix-102
Speed control (Explanation of positioning terms)
Appendix-140
Speed designation during OP shift (Pr.56)
5-55
Speed integral compensation (Explanation of
positioning terms) Appendix-140
Speed limit function12-27
Speed limit value (Pr.8)5-25
Speed limit value (Explanation of positioning
terms) Appendix-140
Speed loop gain (Explanation of positioning terms
Appendix-140
Speed loop mode (Explanation of positioning
terms) Appendix-140
Speed switching mode (Pr.19)5-32
Speed-position function selection (Pr.150)
5-33
Speed-position switching control (ABS mode)
9-115
Speed-position switching control (INC mode)
9-106
Speed–position switching control (Explanation of
positioning terms)
positioning terms/

Speed-position switching control mode
(Explanation of positioning terms)
Appendix-140
Speed-position switching control movement
amount change register (Cd.23)5-126
Speed-position switching control positioning
· · <u></u> · · · ·
amount (Md.29)
Speed-position switching enable flag (Cd.24)
5-126
Speed-position switching latch flag 5-102
Speed-position switching signal 3-8
Spiral interpolation 9-67
Standard speed switching mode 9-13
Start (Day: hour) (Md.5)5-88
Start (Minute: second) (Md.6)5-88
Start complete (Explanation of positioning terms)
Appendix-141
• • • • • • • • • • • • • • • • • • • •
Start complete signal 3-17 Start data No. (Da.12) 5-77
Start data pointer being executed (Md.43)
5-112
Start details setting program 6-26
Start history pointer (Md.8)5-90
Start information (Md.3)5-88
Start No. (Md.4) 5-88
Start positioning data No. setting value (Md.38)
5-106
Start program6-28
Start program for high-level positioning control
Starting axis (Explanation of positioning terms)
Status (Explanation of positioning terms)
Appendix-141
Step function
Step function (Explanation of positioning terms)
Appendix-141
Step mode 12-74
Step mode (Cd.34) 5-130
Step out (Explanation of positioning terms)
Appendix-141
Step start information
Step start information (Cd.36)
Step valid flag (Cd.35)
Stepping motor (Explanation of positioning terms)
Appendix-141

	Stop cause	6-44
	Stop command processing for deceleration	stop
	function1	2-108
	Stop command processing for deceleration	stop
	selection (Cd.42)	•
	Stop group 1 sudden stop selection (Pr.37	_
	01	_
	Stop group 2 sudden stop selection (Pr.38	
	Stop group 3 sudden stop selection (Pr.39	
	Stop process	
	Stop program	
	Stop settling time (Explanation of positioning	ng
	terms) Append	ix-141
	Stop signal	3-27
	STOP signal (Explanation of positioning ter	rms)
	Append	ix-141
	Stop with stopper (Explanation of positioning	ng
	terms) Append	
	Stopper method 1) machine OPR	
	Stopper method 2) machine OPR	
	Stopper method 3) machine OPR	
	Stroke (Explanation of positioning terms)	
	Append	iv_1/12
	Stroke limit (Explanation of positioning tern	
	Append	•
	Sub functions	
	Sub functions specifically for machine OPF	
	Outling store	
	Sudden stop	
	Sudden stop (Explanation of positioning tel	
	Append	
	Sudden stop deceleration time (Pr.36)	
	Synchronization flag (X1)	
	System control data	5-110
	System monitor data	5-86
[7	_	
	Tact time	
	Target position change function	_
	Target position change request flag (Cd.2	9)
		5-128
	Target position change value (new address	s)
	(Cd.27)	•
	Target position change value (new speed)	

Target speed (Md.33)5-104	Types and roles of control data5-15
Target value (Md.32)5-102	Types and roles of monitor data5-12
Teaching (Explanation of positioning terms)	Types of data5-2
Appendix-142	Types of errors15-6
Teaching data selection (Cd.38)5-132	Types of stop processes6-45
Teaching function12-86	Types of warnings15-7
Teaching positioning data No. (Cd.39) 5-132	
Teaching program 6-14	[U]
Time chart	Unconditional JUMP9-136
 Inching operation start time chart 11-22 	Unit magnification (Pr.4)5-18
JOG operation start time chart11-11	Unit setting (Pr.1)5-18
 Time chart for changing the speed from the 	Unit setting (Explanation of positioning terms)
CPU module 12-44	Appendix-143
 Time chart for changing the speed using an 	Upper limit signal3-26
external command signal 12-46	
 Time chart for changing the speed using the 	[V]
override function12-50	Valid M code (Md.25)5-98
Time chart for restarting6-43	
 Time chart for starting "fast OPR" 6-32 	[W]
 Time chart for starting "machine OPR" 6-31 	Wait start10-11
 Time chart for starting "major positioning 	Warning (Explanation of positioning terms)
control"6-33	Appendix-143
 Time chart for starting "position-speed 	Warning history5-94
switching control"6-34	Warning history pointer (Md.18)5-94
 Time chart for starting "speed-position 	Wave trace Appendix-106
switching control"6-33	Window (Explanation of positioning terms)
 Time chart for starting with external command 	Appendix-143
signal6-37	WITH mode12-81
Torque change function 12-56	WITH mode (Explanation of positioning terms)
Torque control (Explanation of positioning terms)	Appendix-143
Appendix-142	Workpiece A-18
Torque limit function	Writing to the Flash ROM13-5
Torque limit setting value (Pr.17) 5-28	
Torque limit stored value (Md.35) 5-104	[X]
Torque loop mode (Explanation of positioning	X0 (QD75 READY)3-17
terms)Appendix-142	X1 (Synchronization flag)3-17
Torque ripple (Explanation of positioning terms)	XY table (Explanation of positioning terms)
Appendix-142	Appendix-143
Tracking function (Explanation of positioning	
terms)Appendix-143	[Z]
Trapezoidal acceleration/deceleration (Explanation	Z phase (Explanation of positioning terms)
of positioning terms)Appendix-143	Appendix-143
Trapezoidal acceleration/deceleration processing	Z.ABRST114-3
method12-97	Z.ABRST214-3
Troubleshooting15-2	Z.ABRST314-3
Turntable (Explanation of positioning terms)	Z.ABRST414-3
Appendix-143	Zero signal (Explanation of positioning terms)
• •	Appondix 142

ZP.PFWRT	14-16
ZP.PINIT	14-20
ZP.PSTRT1	14-8
ZP.PSTRT2	14-8
ZP.PSTRT3	
ZP.PSTRT4	
ZP.TEACH1	14-12
ZP.TEACH2	14-12
ZP.TEACH3	14-12
7P TEΔCH4	14-12

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

[Gratis Warranty Range]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 - 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 - 2. Failure caused by unapproved modifications, etc., to the product by the user.
 - When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 - 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 - 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 - 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

Microsoft and Windows are trademarks of the Microsoft group of companies. The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies. In some cases, trademark symbols such as 'TM' or " $^{\circ}$ " are not specified in this manual.

SH(NA)-080058-V(2405)MEE MODEL: QD75-U-S-E MODEL CODE: 13JR09

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.