

Programmable Controller

**MELSEC iQ-R**  
series

MELSEC iQ-R Channel Isolated  
Analog-Digital Converter Module  
User's Manual (Startup)

---

-R60AD8-G  
-R60AD16-G



# SAFETY PRECAUTIONS

---

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product only. For the safety precautions of the programmable controller system, refer to the MELSEC iQ-R Module Configuration Manual.

In this manual, the safety precautions are classified into two levels: "⚠ WARNING" and "⚠ CAUTION".

 <b>WARNING</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
 <b>CAUTION</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

## [Design Precautions]

---

### **WARNING**

---

- Configure safety circuits external to the programmable controller to ensure that the entire system operates safely even when a fault occurs in the external power supply or the programmable controller. Failure to do so may result in an accident due to an incorrect output or malfunction.
    - (1) Emergency stop circuits, protection circuits, and protective interlock circuits for conflicting operations (such as forward/reverse rotations or upper/lower limit positioning) must be configured external to the programmable controller.
    - (2) When the programmable controller detects an abnormal condition, it stops the operation and all outputs are:
      - Turned off if the overcurrent or overvoltage protection of the power supply module is activated.
      - Held or turned off according to the parameter setting if the self-diagnostic function of the CPU module detects an error such as a watchdog timer error.
    - (3) All outputs may be turned on if an error occurs in a part, such as an I/O control part, where the CPU module cannot detect any error. To ensure safety operation in such a case, provide a safety mechanism or a fail-safe circuit external to the programmable controller. For a fail-safe circuit example, refer to "General Safety Requirements" in the MELSEC iQ-R Module Configuration Manual.
    - (4) Outputs may remain on or off due to a failure of a component such as a relay and transistor in an output circuit. Configure an external circuit for monitoring output signals that could cause a serious accident.
  - In an output circuit, when a load current exceeding the rated current or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
  - Configure a circuit so that the programmable controller is turned on first and then the external power supply. If the external power supply is turned on first, an accident may occur due to an incorrect output or malfunction.
  - Configure a circuit so that the external power supply is turned off first and then the programmable controller. If the programmable controller is turned off first, an accident may occur due to an incorrect output or malfunction.
  - For the operating status of each station after a communication failure, refer to manuals for the network used. For the manuals, please consult your local Mitsubishi representative. Incorrect output or malfunction due to a communication failure may result in an accident.
  - When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents. When a Safety CPU is used, data cannot be modified while the Safety CPU is in SAFETY MODE.
  - Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
-

## [Design Precautions]

---

### **WARNING**

- Do not write any data to the "system area" and "write-protect area" of the buffer memory in the module. Also, do not use any "use prohibited" signals as an output signal from the CPU module to each module. Doing so may cause malfunction of the programmable controller system. For the "system area", "write-protect area", and the "use prohibited" signals, refer to the user's manual for the module used. For areas used for safety communications, they are protected from being written by users, and thus safety communications failure caused by data writing does not occur.
- If a communication cable is disconnected, the network may be unstable, resulting in a communication failure of multiple stations. Configure an interlock circuit in the program to ensure that the entire system will always operate safely even if communications fail. Failure to do so may result in an accident due to an incorrect output or malfunction. When safety communications are used, an interlock by the safety station interlock function protects the system from an incorrect output or malfunction.

### [Precautions for using the channel isolated analog-digital converter modules in SIL2 mode]

- When the R60AD8-G detects a fault in the external power supply or programmable controller, a digital operation value becomes an OFF value (equivalent to 0V/0mA) in all channels. Configure an external circuit to ensure that the power source of a hazard is shut off when a digital operation value of the R60AD8-G is an OFF value (equivalent to 0V/0mA). Failure to do so may result in an accident.
- When a communication failure occurs in CC-Link IE Field Network, a digital operation value of the R60AD8-G becomes an OFF value (equivalent to 0V/0mA). Check the communication status information and configure an interlock circuit in the program to ensure that the entire system will operate safely. Failure to do so may result in an accident due to an incorrect output or malfunction.

## [Design Precautions]

---

### **CAUTION**

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Doing so may result in malfunction due to electromagnetic interference. Keep a distance of 100mm or more between those cables.
- During control of an inductive load such as a lamp, heater, or solenoid valve, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on. Therefore, use a module that has a sufficient current rating.
- After the CPU module is powered on or is reset, the time taken to enter the RUN status varies depending on the system configuration, parameter settings, and/or program size. Design circuits so that the entire system will always operate safely, regardless of the time.
- Do not power off the programmable controller or reset the CPU module while the settings are being written. Doing so will make the data in the flash ROM and SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM and SD memory card again. Doing so also may cause malfunction or failure of the module.
- When changing the operating status of the CPU module from external devices (such as the remote RUN/STOP functions), select "Do Not Open by Program" for "Opening Method" of "Module Parameter". If "OPEN in Program" is selected, an execution of the remote STOP function causes the communication line to close. Consequently, the CPU module cannot reopen the line, and external devices cannot execute the remote RUN function.

## [Security Precautions]

---

### **WARNING**

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from external devices via the network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.
- 

## [Installation Precautions]

---

### **WARNING**

- Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may result in electric shock or cause the module to fail or malfunction.
- 

## [Installation Precautions]

---

### **CAUTION**

- Use the programmable controller in an environment that meets the general specifications in the MELSEC iQ-R Module Configuration Manual. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
  - To mount a module, place the concave part(s) located at the bottom onto the guide(s) of the base unit, and push in the module until the hook(s) located at the top snaps into place. Incorrect interconnection may cause malfunction, failure, or drop of the module.
  - To mount a module with no module fixing hook, place the concave part(s) located at the bottom onto the guide(s) of the base unit, push in the module, and fix it with screw(s). Incorrect interconnection may cause malfunction, failure, or drop of the module.
  - When using the programmable controller in an environment of frequent vibrations, fix the module with a screw.
  - Tighten the screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction. For the specified torque range, refer to the MELSEC iQ-R Module Configuration Manual.
  - When using an extension cable, connect it to the extension cable connector of the base unit securely. Check the connection for looseness. Poor contact may cause malfunction.
  - When using an SD memory card, fully insert it into the SD memory card slot. Check that it is inserted completely. Poor contact may cause malfunction.
  - Securely insert an extended SRAM cassette or a battery-less option cassette into the cassette connector of the CPU module. After insertion, close the cassette cover and check that the cassette is inserted completely. Poor contact may cause malfunction.
  - Beware that the module could be very hot while power is on and immediately after power-off.
  - Do not directly touch any conductive parts and electronic components of the module, SD memory card, extended SRAM cassette, battery-less option cassette, or connector. Doing so can cause malfunction or failure of the module.
-

## [Wiring Precautions]

---

### **WARNING**

---

- Shut off the external power supply (all phases) used in the system before installation and wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.
- After installation and wiring, attach a blank cover module (RG60) to each empty slot before powering on the system for operation. Also, attach an extension connector protective cover<sup>\*1</sup> to each unused extension cable connector as necessary. Directly touching any conductive parts of the connectors while power is on may result in electric shock.

\*1 For details, please consult your local Mitsubishi Electric representative.

---

## [Wiring Precautions]

---

### CAUTION

- Individually ground the FG and LG terminals of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.
  - Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
  - Check the rated voltage and signal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause fire or failure.
  - Connectors for external devices must be crimped or pressed with the tool specified by the manufacturer, or must be correctly soldered. Incomplete connections may cause short circuit, fire, or malfunction.
  - Securely connect the connector to the module. Poor contact may cause malfunction.
  - Do not install the control lines or communication cables together with the main circuit lines or power cables. Doing so may result in malfunction due to noise. Keep a distance of 100mm or more between those cables.
  - Place the cables in a duct or clamp them. If not, dangling cables may swing or inadvertently be pulled, resulting in malfunction or damage to modules or cables. In addition, the weight of the cables may put stress on modules in an environment of strong vibrations and shocks. Do not clamp the extension cables with the jacket stripped. Doing so may change the characteristics of the cables, resulting in malfunction.
  - Check the interface type and correctly connect the cable. Incorrect wiring (connecting the cable to an incorrect interface) may cause failure of the module and external device.
  - Tighten the terminal screws or connector screws within the specified torque range. Undertightening can cause drop of the screw, short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
  - When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.
  - Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
  - When a protective film is attached to the top of the module, remove it before system operation. If not, inadequate heat dissipation of the module may cause a fire, failure, or malfunction.
  - Programmable controllers must be installed in control panels. Connect the main power supply to the power supply module in the control panel through a relay terminal block. Wiring and replacement of a power supply module must be performed by qualified maintenance personnel with knowledge of protection against electric shock. For wiring, refer to the MELSEC iQ-R Module Configuration Manual.
  - For Ethernet cables to be used in the system, select the ones that meet the specifications in the user's manual for the module used. If not, normal data transmission is not guaranteed.
  - Individually ground the shielded cables of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.
-

## [Startup and Maintenance Precautions]

---

### **WARNING**

---

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
  - Correctly connect the battery connector. Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire. Also, do not expose it to liquid or strong shock. Doing so will cause the battery to produce heat, explode, ignite, or leak, resulting in injury and fire.
  - Shut off the external power supply (all phases) used in the system before cleaning the module or retightening the terminal screws, connector screws, or module fixing screws. Failure to do so may result in electric shock.
-

## [Startup and Maintenance Precautions]

---

### CAUTION

- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.
  - Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
  - Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
  - Use any radio communication device such as a cellular phone or PHS (Personal Handy-phone System) 25cm or more away in all directions from the programmable controller. Failure to do so may cause malfunction.
  - Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may cause the module to fail or malfunction.
  - Tighten the screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
  - After the first use of the product, do not perform each of the following operations more than 50 times (IEC 61131-2/JIS B 3502 compliant).  
Exceeding the limit may cause malfunction.
    - Mounting/removing the module to/from the base unit
    - Inserting/removing the extended SRAM cassette or battery-less option cassette to/from the CPU module
    - Mounting/removing the terminal block to/from the module
    - Connecting/disconnecting the extension cable to/from the base unit
  - After the first use of the product, do not insert/remove the SD memory card to/from the CPU module more than 500 times. Exceeding the limit may cause malfunction.
  - Do not touch the metal terminals on the back side of the SD memory card. Doing so may cause malfunction or failure of the module.
  - Do not touch the integrated circuits on the circuit board of an extended SRAM cassette or a battery-less option cassette. Doing so may cause malfunction or failure of the module.
  - Do not drop or apply shock to the battery to be installed in the module. Doing so may damage the battery, causing the battery fluid to leak inside the battery. If the battery is dropped or any shock is applied to it, dispose of it without using.
  - Startup and maintenance of a control panel must be performed by qualified maintenance personnel with knowledge of protection against electric shock. Lock the control panel so that only qualified maintenance personnel can operate it.
  - Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Wearing a grounded antistatic wrist strap is recommended. Failure to discharge the static electricity may cause the module to fail or malfunction.
-

## [Startup and Maintenance Precautions]

---

### CAUTION

- After unpacking, eliminate static electricity from the module to prevent electrostatic discharge from affecting the module. If an electrostatically charged module comes in contact with a grounded metal object, a sudden electrostatic discharge of the module may cause failure.  
For details on how to eliminate static electricity from the module, refer to the following.  
Antistatic Precautions Before Using MELSEC iQ-R Series Products (FA-A-0368)
  - Use a clean and dry cloth to wipe off dirt on the module.
- 

## [Operating Precautions]

---

### CAUTION

- When changing data and operating status, and modifying program of the running programmable controller from an external device such as a personal computer connected to an intelligent function module, read relevant manuals carefully and ensure the safety before operation. Incorrect change or modification may cause system malfunction, damage to the machines, or accidents.
  - Do not power off the programmable controller or reset the CPU module while the setting values in the buffer memory are being written to the flash ROM in the module. Doing so will make the data in the flash ROM and SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM and SD memory card again. Doing so can cause malfunction or failure of the module.
- 

## [Disposal Precautions]

---

### CAUTION

- When disposing of this product, treat it as industrial waste.
  - When disposing of batteries, separate them from other wastes according to the local regulations. For details on battery regulations in EU member states, refer to the MELSEC iQ-R Module Configuration Manual.
- 

## [Transportation Precautions]

---

### CAUTION

- When transporting lithium batteries, follow the transportation regulations. For details on the regulated models, refer to the MELSEC iQ-R Module Configuration Manual.
  - The halogens (such as fluorine, chlorine, bromine, and iodine), which are contained in a fumigant used for disinfection and pest control of wood packaging materials, may cause failure of the product. Prevent the entry of fumigant residues into the product or consider other methods (such as heat treatment) instead of fumigation. The disinfection and pest control measures must be applied to unprocessed raw wood.
-

# CONDITIONS OF USE FOR THE PRODUCT

---

- (1) MELSEC programmable controller ("the PRODUCT") shall be used in conditions;
- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
  - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries. MITSUBISHI ELECTRIC SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI ELECTRIC USER'S, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.
- ("Prohibited Application")
- Prohibited Applications include, but not limited to, the use of the PRODUCT in;
- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
  - Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
  - Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.
- Notwithstanding the above restrictions, Mitsubishi Electric may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi Electric and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi Electric representative in your region.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.
- When SIL2 mode is set
- (1) Although Mitsubishi Electric has declared Product's compliance with the international safety standards IEC61508, IEC61511, this fact does not guarantee that Product will be free from any malfunction or failure. The user of this Product shall comply with any and all applicable safety standard, regulation or law and take appropriate safety measures for the system in which the Product is installed or used and shall take the second or third safety measures other than the Product. Mitsubishi Electric is not liable for damages that could have been prevented by compliance with any applicable safety standard, regulation or law.
- (2) Mitsubishi Electric prohibits the use of Products with or in any application involving, and Mitsubishi Electric shall not be liable for a default, a liability for defect warranty, a quality assurance, negligence or other tort and a product liability in these applications.
- (a) power plants,
  - (b) trains, railway systems, airplanes, airline operations, other transportation systems,
  - (c) hospitals, medical care, dialysis and life support facilities or equipment,
  - (d) amusement equipments,
  - (e) incineration and fuel devices,
  - (f) handling of nuclear or hazardous materials or chemicals,
  - (g) mining and drilling,
  - (h) and other applications where the level of risk to human life, health or property are elevated.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

# INTRODUCTION

Thank you for purchasing the Mitsubishi Electric MELSEC iQ-R series programmable controllers.

This manual describes the performance specifications, procedures before operation, wiring, and operation examples to use the relevant products listed below in standard mode.

Before using this product, please read this manual and the relevant manuals carefully and develop familiarity with the functions and performance of the MELSEC iQ-R series programmable controller to handle the product correctly.

When applying the program examples provided in this manual to an actual system, ensure the applicability and confirm that it will not cause system control problems.

Please make sure that the end users read this manual.

## Point

Unless otherwise specified, this manual provides program examples in which the I/O numbers of X/Y0 to X/YF are assigned to the A/D converter module. Assign I/O numbers when applying the program examples to an actual system. For I/O number assignment, refer to the following.

 MELSEC iQ-R Module Configuration Manual

## Relevant products

R60AD8-G, R60AD16-G

## Modes

Modes of the R60AD8-G are roughly classified into two groups listed below. A mode is set using the module parameter of GX Works3. Mode transition is not possible while the module is operating.

Mode	Description
Standard mode	<ul style="list-style-type: none"><li>• The mode for using the A/D converter module in a normal system</li><li>• The standard mode is subdivided into three types: normal mode, offset/gain setting mode, and Q compatible mode.</li></ul>
SIL2 mode	<ul style="list-style-type: none"><li>• An operation mode of the I/O module and the intelligent function module to perform safety input and output at the SIL2 level. This mode is used when a customer builds safety applications up to IEC 61508: 2010 SIL2 or IEC 61511: 2015 SIL2.</li><li>• The R60AD8-G in SIL2 mode can be used to build safety functions for general industry machinery.</li></ul>

Note that the R60AD16-G does not support SIL2 mode and operates only in standard mode.

## Point

To use the R60AD8-G in SIL2 mode, refer to the following.

 MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application)

## ■Enabling/disabling the safety module

To operate the R60AD8-G in SIL2 mode, it is necessary to enable the safety module so that the set parameters become enabled.

To stop the safety I/O of the R60AD8-G operating in SIL2 mode, or to use that module in standard mode in the other system, disabling the safety module is required.

# COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES

---

## Method of ensuring compliance

To ensure that Mitsubishi Electric programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

-  MELSEC iQ-R Module Configuration Manual
-  Safety Guidelines (IB-0800525)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

## Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the following manuals.

-  MELSEC iQ-R Module Configuration Manual
-  Safety Guidelines (IB-0800525)

# MEMO

---

# CONTENTS

SAFETY PRECAUTIONS .....	1
CONDITIONS OF USE FOR THE PRODUCT .....	10
INTRODUCTION .....	11
COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES .....	12
RELEVANT MANUALS .....	15
TERMS .....	15
<b>CHAPTER 1 PART NAMES</b> .....	<b>18</b>
<b>CHAPTER 2 SPECIFICATIONS</b> .....	<b>20</b>
2.1 Performance Specifications .....	20
<b>CHAPTER 3 FUNCTION LIST</b> .....	<b>22</b>
<b>CHAPTER 4 PROCEDURES BEFORE OPERATION</b> .....	<b>24</b>
<b>CHAPTER 5 SYSTEM CONFIGURATION</b> .....	<b>26</b>
<b>CHAPTER 6 WIRING</b> .....	<b>28</b>
6.1 Wiring Precautions .....	28
Connectors for external devices .....	28
6.2 External Wiring .....	29
Signal layout of the connector for external devices .....	29
<b>CHAPTER 7 OPERATION EXAMPLES</b> .....	<b>32</b>
7.1 Programming Procedure .....	32
7.2 Program Examples .....	32
<b>CHAPTER 8 OFFSET/GAIN SETTING</b> .....	<b>38</b>
8.1 Setting Procedure .....	38
<b>APPENDICES</b> .....	<b>42</b>
Appendix 1 I/O Conversion Characteristics .....	42
Appendix 2 Accuracy .....	47
Appendix 3 External Dimensions .....	48
<b>INDEX</b> .....	<b>50</b>
REVISIONS .....	52
WARRANTY .....	53
TRADEMARKS .....	56

# RELEVANT MANUALS

Manual name [manual number]	Description	Available form
MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Startup) [SH-081485ENG] (this manual)	Performance specifications, procedures before operation, wiring, operation examples, and offset/gain setting of the A/D converter module	Print book e-Manual PDF
MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application) [SH-081487ENG]	Functions, parameter settings, troubleshooting, I/O signals, and buffer memory of the A/D converter module	Print book e-Manual PDF
MELSEC iQ-R Programming Manual (Module Dedicated Instructions) [SH-081976ENG]	Dedicated instructions for the intelligent function modules	e-Manual PDF

This manual does not include detailed information on the following:

- General specifications
- Applicable CPU modules and the number of mountable modules
- Installation

For details, refer to the following.

 MELSEC iQ-R Module Configuration Manual

This manual does not include information on the module function blocks.

For details, refer to the Function Block Reference for the module used.

## Point

e-Manual refers to the Mitsubishi Electric FA electronic book manuals that can be browsed using a dedicated tool.

e-Manual has the following features:

- Required information can be cross-searched in multiple manuals.
- Other manuals can be accessed from the links in the manual.
- The hardware specifications of each part can be found from the product figures.
- Pages that users often browse can be bookmarked.
- Sample programs can be copied to an engineering tool.

# TERMS

Unless otherwise specified, this manual uses the following terms.

Term	Description
A/D converter module	An abbreviation for the MELSEC iQ-R series channel isolated analog-digital converter module
GX Works3	The product name of the software package for the MELSEC programmable controllers
Q compatible mode	A mode in which the module operates with the buffer memory map converted to the equivalent one of the MELSEC Q series
R mode	A mode in which the module operates with the buffer memory map that has been newly laid out in the MELSEC iQ-R series
SIL2 mode	An operation mode of the I/O module and the intelligent function module to perform safety input and output at the SIL2 level.
Watchdog timer error	An error that occurs if the internal processing of the A/D converter module fails. The module monitors its own internal processing by using the watchdog timer.
Engineering tool	Another term for GX Works3
Offset/gain setting mode	A mode used for the offset/gain setting
Global label	A label that is valid for all the program data when multiple program data are created in the project. There are two types of global label: a module specific label (module label), which is generated automatically by GX Works3, and an optional label, which can be created for any specified device.
Factory default setting	A generic term for analog input ranges of 0 to 10V, 0 to 5V, 1 to 5V, -10 to 10V, 0 to 20mA, 4 to 20mA, 1 to 5V (extended mode), and 4 to 20mA (extended mode). In the window on the engineering tool, 4 to 20mA (extended mode) and 1 to 5V (extended mode) are displayed as the following: <ul style="list-style-type: none"> <li>• 4 to 20mA (Extension)</li> <li>• 1 to 5V (Extension)</li> </ul>


Term	Description
Normal mode	A mode used for normal A/D conversion. In the engineering tool, the item name of the mode is displayed as "Normal mode (A/D conversion process)".
Buffer memory	A memory in an intelligent module for storing data (such as setting values and monitored values) to be transferred to the CPU module
Standard mode	A mode for using the A/D converter module in a standard system.
User range	An analog input range where any value can be set. This range can be set in the offset/gain setting.
Module label	A label that represents one of memory areas (I/O signals and buffer memory areas) specific to each module in a given character string. For the module used, GX Works3 automatically generates this label, which can be used as a global label.

# MEMO

---

# 1 PART NAMES

This chapter describes the part names of the A/D converter module.

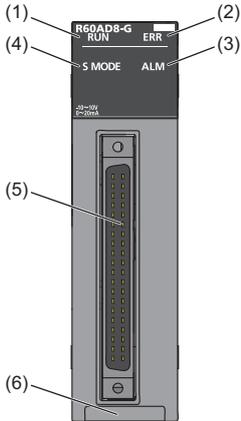

No.	Name	Description
(1)	RUN LED	Indicates the operating status of the module. On: Normal operation Flashing (cycle of 1s): In offset/gain setting mode Flashing (cycle of 400ms): Selected as a module for the online module change Off: 5V power supply interrupted, watchdog timer error occurred, or module change permitted in the process of online module change
(2)	ERR LED	Indicates the error status of the module.*1 On: Error occurred Off: Normal operation
(3)	ALM LED	Indicates the alarm status of the module. Or indicates the wait-for-restart state after the safety module is disabled.*1 On: Alert (process alarm or rate alarm) issued Flashing (1s cycle): Input signal error detected Flashing (400ms cycles): Wait-for-restart Off: Normal operation
(4)	S MODE LED (Only for the R60AD8-G)*2	Always off in standard mode. Used in SIL2 mode. (MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application))
(5)	Connector for external devices	Connector for connection to input signal wires from external devices and others For the signal layout, refer to the following. Page 29 Signal layout of the connector for external devices
(6)	Production information marking	Shows the product information (16 digits) of the module.

\*1 For details, refer to the following.

MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application)

\*2 The LED is added to the module with production information (first four digits) of "0207" or later.



# 2 SPECIFICATIONS

This chapter describes the performance specifications.

## 2.1 Performance Specifications

This section describes the performance specifications of the A/D converter modules.

### R60AD8-G, R60AD16-G

Item	Specifications			
Number of analog input channels	<ul style="list-style-type: none"> <li>• R60AD8-G: 8 channels</li> <li>• R60AD16-G: 16 channels</li> </ul>			
Analog input voltage	-10 to 10VDC (input resistance 1M $\Omega$ )			
Analog input current	0 to 20mADC (input resistance 250 $\Omega$ )			
Digital output	16-bit signed binary value (-32768 to 32767)			
I/O conversion characteristics, resolution <sup>*1</sup>	Analog input range		Digital output value	
	Voltage	0 to 10V	0 to 32000	312.5 $\mu$ V
		0 to 5V		156.3 $\mu$ V
		1 to 5V		125.0 $\mu$ V
		1 to 5V (extended mode)	-8000 to 32767 (-8000 to 36000) <sup>*10</sup>	125.0 $\mu$ V
		-10 to 10V	-32000 to 32000	312.5 $\mu$ V
		User range setting		29.2 $\mu$ V <sup>*9</sup>
	Current	0 to 20mA	0 to 32000	625.0nA
		4 to 20mA		500.0nA
		4 to 20mA (extended mode)	-8000 to 32767 (-8000 to 36000) <sup>*10</sup>	500.0nA
User range setting		-32000 to 32000	115.5nA <sup>*9</sup>	
Accuracy (accuracy of the maximum digital output value) <sup>*2</sup>	Reference accuracy: Within $\pm 0.1\%$ ( $\pm 32$ digit) <sup>*3</sup> Temperature coefficient: $\pm 35$ ppm/ $^{\circ}$ C (0.0035%/ $^{\circ}$ C) <sup>*4</sup>			
Common mode characteristics	Common mode voltage between input and common ground (input voltage 0V): 500VAC			
	Common mode voltage rejection ratio (VCM < 500V): 60Hz 107dB, 50Hz 106dB			
Conversion speed <sup>*5</sup>	10ms/CH			
Response time <sup>*6</sup>	20ms			
Absolute maximum input	Voltage: $\pm 15$ V, Current: 30mA <sup>*7</sup>			
Number of offset/gain settings <sup>*8</sup>	50000 times maximum			
Isolation method	Between I/O terminals and programmable controller power supply: Transformer Between analog input channels: Transformer			
Withstand voltage	Between I/O terminals and programmable controller power supply: 500VACrms for 1 minute Between analog input channels: 1000VACrms for 1 minute			
Insulation resistance	Between I/O terminals and programmable controller power supply: 10M $\Omega$ or higher, at 500VDC Between analog input channels: 10M $\Omega$ or higher, at 500VDC			
Number of occupied I/O points	<ul style="list-style-type: none"> <li>• R60AD8-G: 16 points, 1 slot (I/O assignment: Intelligent 16 points)</li> <li>• R60AD16-G: 32 points, 2 slots (I/O assignment: Empty 16 points + Intelligent 16 points)</li> </ul>			
External interface	40-pin connector			
Applicable wire size	When A6CON1 and A6CON4 are used	0.088 to 0.3mm <sup>2</sup> (28 to 22 AWG) (stranded wire)		
	When A6CON2 is used	0.088 to 0.24mm <sup>2</sup> (28 to 24 AWG) (stranded wire)		
Connector for external devices	A6CON1, A6CON2, A6CON4 (sold separately)			
Internal current consumption (5VDC)	<ul style="list-style-type: none"> <li>• R60AD8-G: 0.33A</li> <li>• R60AD16-G: 0.52A</li> </ul>			
External dimensions	Height	106mm (Base unit mounting side: 98mm)		
	Width	<ul style="list-style-type: none"> <li>• R60AD8-G: 27.8mm</li> <li>• R60AD16-G: 56mm</li> </ul>		
	Depth	110mm		

Item	Specifications
Weight	<ul style="list-style-type: none"> <li>• R60AD8-G: 0.19kg</li> <li>• R60AD16-G: 0.26kg</li> </ul>

- \*1 For details on the I/O conversion characteristics, refer to the following.  
 Page 42 I/O Conversion Characteristics
- \*2 Except for the conditions under noise influence.
- \*3 The accuracy at an ambient temperature when the offset/gain setting is configured.
- \*4 The accuracy based on a temperature change of 1°C.
- \*5 The period at which the digital output value is updated.
- \*6 The time taken for an analog input signal to arrive at the A/D converter inside the module.
- \*7 These voltage and current values are instantaneous values at which no breakdown occurs in the internal resistance of the module.
- \*8 A count more than 50000 times causes Number of writes to offset/gain settings reach limit error (error code: 1080H).
- \*9 Maximum resolution in the user range setting.
- \*10 The range of data that is stored in Digital output value (32 bits).

### Restriction

Immediately after power-off of the power supply module, if the input power source is applied to the power supply module again, the A/D converter module may not start up. When applying the input power source to the power supply module again, do so five seconds or more after the shut-off of the power.

## Restrictions

The module R60AD16-G takes up two slots and so there are restrictions on the available firmware version of the RCP module. For details, refer to the following.

-  MELSEC iQ-R CPU Module User's Manual (Application)

# 3 FUNCTION LIST

The following table lists the functions of the A/D converter module. For further details on the functions, refer to the following.  
 MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application)

Item		Description	
Range switching function		Allows the input range of analog input to be switched for each channel. Switching the range makes it possible to change the I/O conversion characteristics.	
A/D conversion enable/disable setting function		Controls whether to enable or disable A/D conversion for each channel. Disabling A/D conversion for unused channels reduces the conversion cycles.	
A/D conversion method	Sampling processing	Converts analog input values into digital output values at every sampling period, storing them in buffer memory areas.	
	Averaging processing	Time average	Executes A/D conversion for the set time and performs the averaging processing on the total value excluding the maximum and minimum values. The processed values are stored in the buffer memory area. The number of processing times within the set time changes depending on the number of channels where A/D conversion is enabled.
		Count average	Executes A/D conversion for a set number of times and performs the averaging processing on the total value excluding the maximum and minimum values. The processed values are stored in the buffer memory area. The time taken to store the average value obtained by the average processing in the buffer memory area changes depending on the number of channels where A/D conversion is enabled.
		Moving average	Averages digital output values taken at every sampling period for a specified number of times, and stores the averaged value in the buffer memory area. The target range for averaging processing moves at each sampling period, thereby allowing the latest digital output value to be obtained.
Primary delay filter		Smooths the transient noise of analog input depending on the set time constant. The smoothed digital output values are stored in the buffer memory area.	
Scaling function		Performs scale conversion on digital output values within the range from a scaling upper limit value to a scaling lower limit value, both of which are set at desired values. This function reduces the time and effort to create a program of the scale conversion.	
Alert output function	Process alarm	Outputs an alert when a digital operation value falls within the preset alert output range.	
	Rate alarm	Outputs an alert if the change rate of a digital output value is equal to or more than the rate alarm upper limit value, or is equal to or less than the rate alarm lower limit value.	
Input signal error detection function	Upper limit detection, lower limit detection, upper and lower limit detection	Outputs an alarm when an analog input value exceeds the preset range.	
	Simple disconnection detection	Outputs an alarm when an analog input value is 0.5V or smaller or 2mA or smaller.	
Shift function		Adds (shifts) a set conversion value shift amount to a digital output value, and stores the result in the buffer memory area. A change in conversion value shift amount is reflected to the digital operation value in real time, which facilitates fine adjustment at system start-up.	
Digital clipping function		Fixes a possible digital operation value to the maximum digital output value or the minimum digital output value when an input current or voltage exceeds the input range.	
Difference conversion function		Subtracts a difference conversion reference value from a digital operation value and stores the resulting value in the buffer memory area.	
Maximum value/minimum value hold function		Stores the maximum and minimum values of digital operation values in the buffer memory area for each channel.	
Logging function		Logs (records) digital output values or digital operation values. For each channel, 1000 points data can be logged.	
Logging read function		Makes it possible to store more than 1000 points of logging data without stopping logging by transferring the device data to the file register of the CPU module during logging. This function reduces the takt time in a test demanding high-speed conversion.	
Interrupt function		Executes an interrupt program of the CPU module when an interrupt factor such as an input signal error or alert output is detected.	
Error history function		Records errors and alarms that have occurred in the A/D converter module, storing the record into the buffer memory area. Up to 16 storage areas are provided for errors and alarms, respectively.	
Event history function		Collects generated errors and alarms, and performed operations in the A/D converter module as event information into the CPU module.	
Offset/gain setting		Allows the correction of errors in digital output values.	
Backing up, saving, and restoring offset/gain values		The A/D converter module is capable of backing up, saving, and restoring offset/gain values of the user range setting.	

Item	Description
Online module change	<p>Allows module change without stopping the system. For the procedure of the online module change, refer to the following.</p> <p> MELSEC iQ-R Online Module Change Manual</p>
Q compatible mode function	<p>Allows the buffer memory addresses of the A/D converter module to be the same layout as the MELSEC-Q series module.</p> <p>This compatibility makes it possible to reuse sequence programs that have exhibited high performance on the MELSEC-Q series modules.</p>

# 4 PROCEDURES BEFORE OPERATION

---

This chapter describes the procedures before operation.

## 1. Mounting a module

Mount the A/D converter module in any desired configuration.

☞ Page 32 System configuration

## 2. Wiring

Perform wiring of external devices to the A/D converter module.

☞ Page 29 External Wiring

## 3. Adding a module

Add the A/D converter module to a module configuration by using the engineering tool. For details, refer to the following.

📖 GX Works3 Operating Manual

## 4. Parameter settings

Set up the parameters of the A/D converter module by using the engineering tool. For details, refer to the following.

📖 MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application)

## 5. Offset/gain setting

Perform the offset/gain setting to set a user range, if necessary.

☞ Page 38 OFFSET/GAIN SETTING

## 6. Programming

Create a program. For details, refer to the following.

☞ Page 32 OPERATION EXAMPLES



# 5 SYSTEM CONFIGURATION

---

For system configurations using the MELSEC iQ-R series modules, CPU modules that can be used with the A/D converter module, and the number of mountable modules, refer to the following.

 MELSEC iQ-R Module Configuration Manual



# 6 WIRING

This chapter describes the wiring of the A/D converter module.

## 6.1 Wiring Precautions

- Check the signal layout before wiring to the A/D converter module, and connect the cables correctly. For the signal layout, refer to the following.

 Page 29 Signal layout of the connector for external devices

- Provide a single-point ground for the shield wire and the shield of the shielded cable.

### Connectors for external devices

#### Precautions

Tighten the connector screws within the specified torque range.

Screw type	Tightening torque range
Connector screw (M2.6)	0.20 to 0.29N·m

- Use copper wire with a temperature rating of 75°C or higher for the connector.
- Use UL listed connectors if necessary for UL compliance.

#### Applicable connectors

Connectors for external devices to be used for the A/D converter module are sold separately.

The following tables list the applicable connectors, and the reference product of a crimping tool

#### ■40-pin connectors

Type	Model	Applicable wire size
Soldering type connector (straight type)	A6CON1*1	0.088 to 0.3mm <sup>2</sup> (28 to 22 AWG) (stranded wire)
Crimping type connector (straight type)	A6CON2	0.088 to 0.24mm <sup>2</sup> (28 to 24 AWG) (stranded wire)
Soldering type connector (dual purpose (straight/oblique) type)	A6CON4*1	0.088 to 0.3mm <sup>2</sup> (28 to 22 AWG) (stranded wire)

\*1 Select wires with a sheath outside diameter of 1.3mm or shorter when using 40 wires.  
Select wires suitable to the current value used.

#### Point

- The A6CON3 (IDC type connector (straight type)) cannot be used.
- The connector/terminal block converter module and the dedicated cables that are designed for the MELSEC-Q series channel isolated analog module can be used. For details, refer to the following.

 Page 31 When the connector/terminal block converter module is used

#### ■40-pin connector crimping tool

Type	Model	Contact
Crimping tool	N363TT005H	OTAX Corporation

For how to wire connectors and how to use the crimping tool, contact the manufacturer.

#### Wiring method, connection procedure, and disconnection procedure of the connector

For the wiring method, connection procedure, and disconnection procedure, refer to the following.

 MELSEC iQ-R Module Configuration Manual

## 6.2 External Wiring

### Signal layout of the connector for external devices

The following shows the signal layout of the connector for external devices for the A/D converter module.

• R60AD8-G

Pin layout (viewed from the front of the module)	Pin number	Signal name	Pin number	Signal name
	A1	CH1 V+	B1	CH1 V-/I-
	A2	CH1 I+	B2	—
	A3	—	B3	CH2 V+
	A4	CH2 V-/I-	B4	CH2 I+
	A5	—	B5	—
	A6	CH3 V+	B6	CH3 V-/I-
	A7	CH3 I+	B7	—
	A8	—	B8	CH4 V+
	A9	CH4 V-/I-	B9	CH4 I+
	A10	—	B10	—
	A11	CH5 V+	B11	CH5 V-/I-
	A12	CH5 I+	B12	—
	A13	—	B13	CH6 V+
	A14	CH6 V-/I-	B14	CH6 I+
	A15	—	B15	—
	A16	CH7 V+	B16	CH7 V-/I-
	A17	CH7 I+	B17	—
	A18	—	B18	CH8 V+
	A19	CH8 V-/I-	B19	CH8 I+
	A20	—	B20	—

• R60AD16-G

Pin layout (viewed from the front of the module)	Pin number	Signal name						
	2A1	CH9 V+	2B1	CH9 V-/I-	1A1	CH1 V+	1B1	CH1 V-/I-
	2A2	CH9 I+	2B2	—	1A2	CH1 I+	1B2	—
	2A3	—	2B3	CH10 V+	1A3	—	1B3	CH2 V+
	2A4	CH10 V-/I-	2B4	CH10 I+	1A4	CH2 V-/I-	1B4	CH2 I+
	2A5	—	2B5	—	1A5	—	1B5	—
	2A6	CH11 V+	2B6	CH11 V-/I-	1A6	CH3 V+	1B6	CH3 V-/I-
	2A7	CH11 I+	2B7	—	1A7	CH3 I+	1B7	—
	2A8	—	2B8	CH12 V+	1A8	—	1B8	CH4 V+
	2A9	CH12 V-/I-	2B9	CH12 I+	1A9	CH4 V-/I-	1B9	CH4 I+
	2A10	—	2B10	—	1A10	—	1B10	—
	2A11	CH13 V+	2B11	CH13 V-/I-	1A11	CH5 V+	1B11	CH5 V-/I-
	2A12	CH13 I+	2B12	—	1A12	CH5 I+	1B12	—
	2A13	—	2B13	CH14 V+	1A13	—	1B13	CH6 V+
	2A14	CH14 V-/I-	2B14	CH14 I+	1A14	CH6 V-/I-	1B14	CH6 I+
	2A15	—	2B15	—	1A15	—	1B15	—
	2A16	CH15 V+	2B16	CH15 V-/I-	1A16	CH7 V+	1B16	CH7 V-/I-
	2A17	CH15 I+	2B17	—	1A17	CH7 I+	1B17	—
	2A18	—	2B18	CH16 V+	1A18	—	1B18	CH8 V+
	2A19	CH16 V-/I-	2B19	CH16 I+	1A19	CH8 V-/I-	1B19	CH8 I+
	2A20	—	2B20	—	1A20	—	1B20	—


## Examples of external wiring

Here are the examples of external wiring.

### ■R60AD8-G, R60AD16-G


For voltage input

Signal source: 0 to  $\pm 10V$

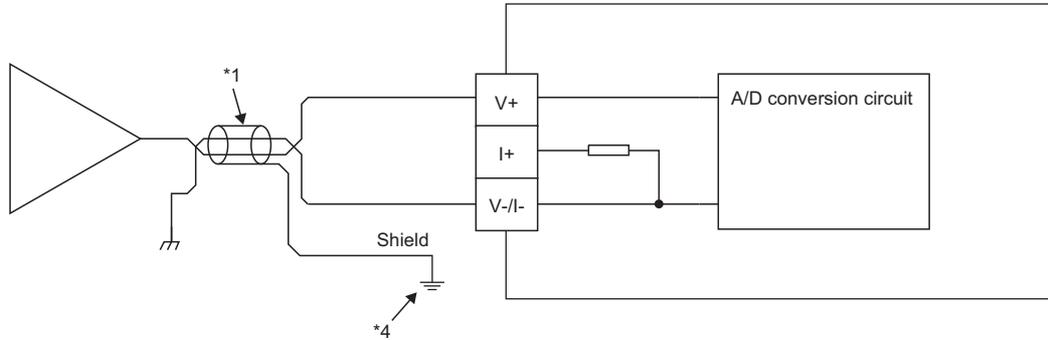

For current input

Signal source: 0 to 20mA

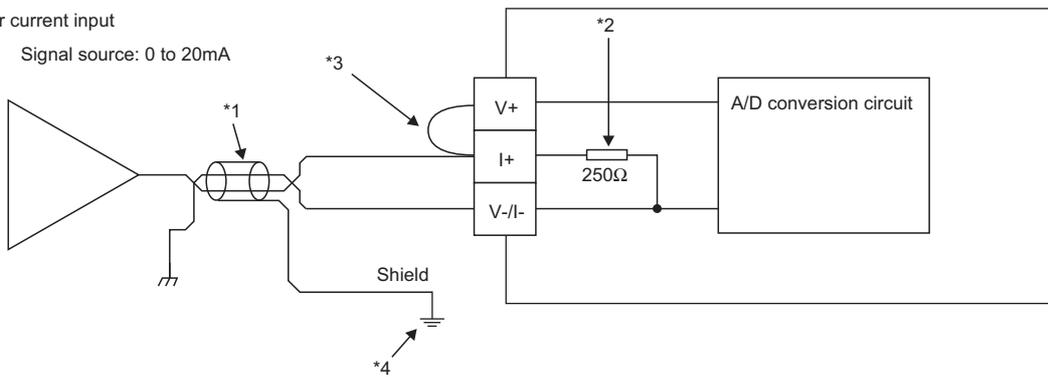

\*1 For the wire, use the 2-core twisted cable.

\*2 The value indicates the input resistance of the A/D converter module.

\*3 For the current input, be sure to connect the terminals (V+) and (I+).

The connection between the terminal (V+) and the terminal (I+) should be made inside the connector for external devices to reduce the resistance of the connecting conductor.

\*4 Be sure to ground the shield wire of cables on each channel.




Ground the FG terminal of the power supply module.

## When the connector/terminal block converter module is used

The A/D converter module allows the use of the connector/terminal block converter module and the dedicated cables that are designed for the Q68AD-G.

To use the connector/terminal block converter module, wire the module as shown below.

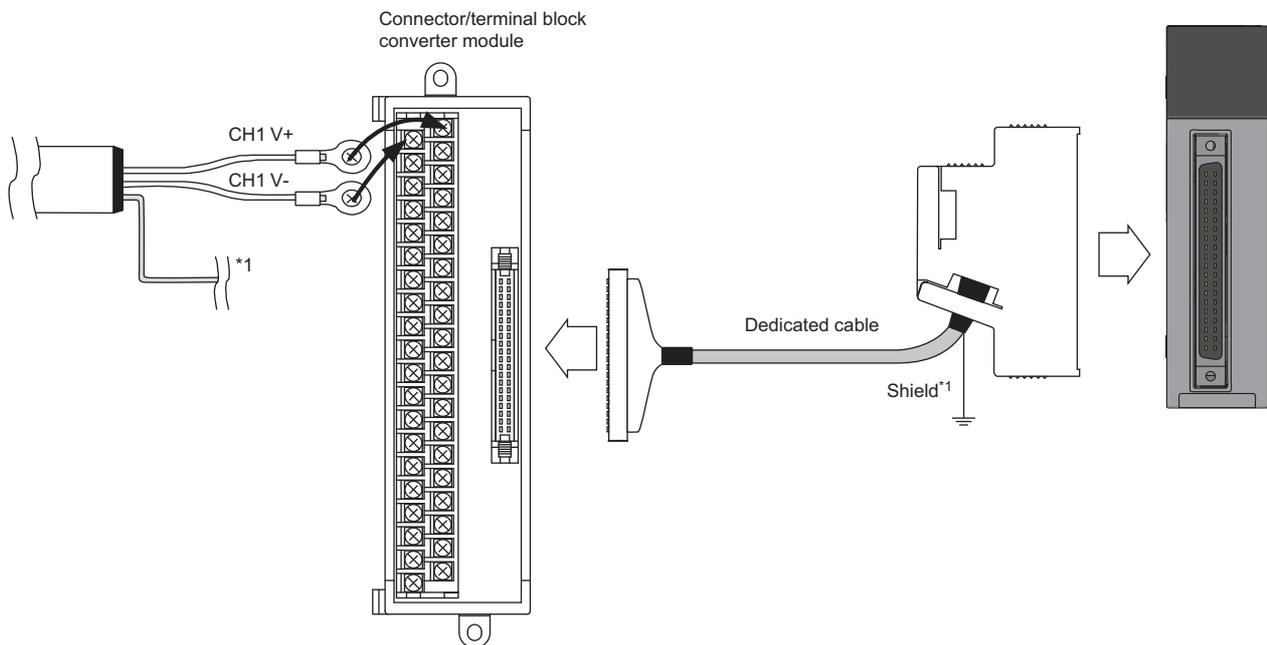

\*1 Be sure to use a shielded cable. The shield must be grounded.

Product name	Model	Remarks	Contact
Connector/terminal block converter module	FA1-TBS40ADGN	—	Your local Mitsubishi Electric sales office or representative
	FA-LTB40ADGN	—	
Dedicated cable	FA-CBL05Q68ADGN	Cable length 0.5m	
	FA-CBL10Q68ADGN	Cable length 1.0m	
	FA-CBL20Q68ADGN	Cable length 2.0m	
	FA-CBL30Q68ADGN	Cable length 3.0m	

### Point

In the factory default settings of the modules, or the R60AD8-G and R60AD16-G, the offset/gain setting is configured with the module being independent.

For this reason, the use of the connector/terminal block converter module and the dedicated cables may cause an error in conversion characteristics due to the effect of conductor resistance and other factors.

If this effect is a problem, use the user range setting to set the offset and gain values.

For the offset/gain setting, refer to the following.

☞ Page 38 OFFSET/GAIN SETTING

# 7 OPERATION EXAMPLES

This chapter describes the programming procedure and the basic program of the A/D converter module.

## 7.1 Programming Procedure

Take the following steps to create a program for running the A/D converter module:

1. Set parameters.  
☞ Page 33 Parameter settings
2. Create a program.  
☞ Page 35 Program examples

### Point


Using function blocks (FBs) reduces load at programming and improves the readability of programs. For details on the function blocks, refer to the following.

📖 MELSEC iQ-R Analog-Digital Converter Module/Digital-Analog Converter Module Function Block Reference

## 7.2 Program Examples

### System configuration

The following figure is an example of the system configuration.

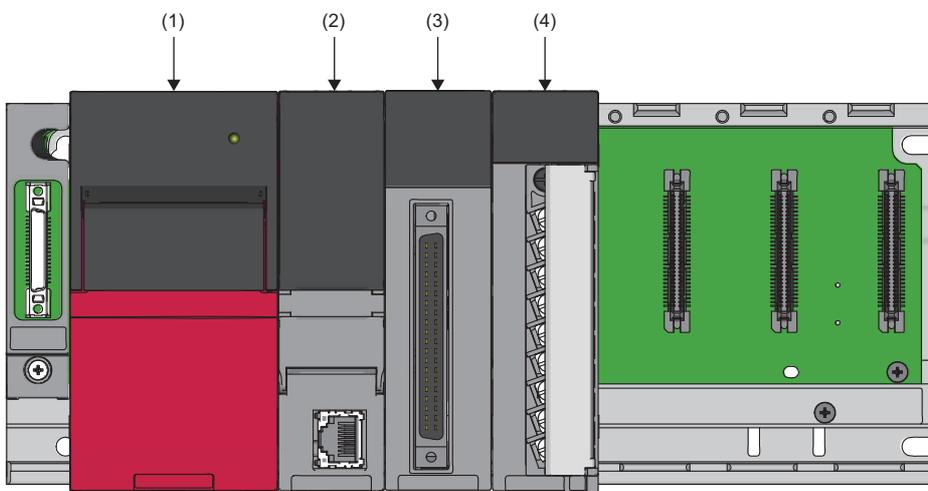

- (1) Power supply module (R61P)
- (2) CPU module (R120CPU)
- (3) A/D converter module (R60AD8-G)
- (4) Input module (RX10)

## Conditions in the program

This program reads digital output values from the A/D converter module's CH1, CH3, CH5, and CH7 where A/D conversion is enabled.

The A/D conversion takes place in CH1 and CH7 by means of sampling processing; in CH3 by means of averaging processing for 50 samples; and in CH5 by means of moving average for 10 samples.

## Parameter settings

Perform initial settings in the parameter settings of the engineering tool. The auto refresh setting does not need to be changed here.

For details on the parameter settings, refer to the following.

 MELSEC iQ-R Channel Isolated Analog-Digital Converter Module User's Manual (Application)

Function	Setting item	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Range switching function	Input range setting	0 to 10V	—	0 to 10V	—	4 to 20mA	—	4 to 20mA	—
A/D conversion enable/disable setting function	A/D conversion enable/disable setting	A/D conversion enable	A/D conversion disable	A/D conversion enable	A/D conversion disable	A/D conversion enable	A/D conversion disable	A/D conversion enable	A/D conversion disable
A/D conversion method	Averaging process specification	Sampling processing	—	Count average	—	Moving average	—	Sampling processing	—
	Time average/Count average/Moving average/Primary delay filter constant setting	—	—	50	—	10	—	—	—
Scaling function	Scaling enable/disable setting	Disable	—	Disable	—	Enable	—	Disable	—
	Scaling upper limit value	—	—	—	—	16000	—	—	—
	Scaling lower limit value	—	—	—	—	2000	—	—	—
Shift function	Conversion value shift amount	0	—	0	—	2000	—	0	—
Digital clipping function	Digital clipping enable/disable setting	Disable	—	Disable	—	Enable	—	Disable	—
Alert output function (process alarm)	Alert output setting (process alarm)	Disable	—	Enable	—	Disable	—	Disable	—
	Process alarm upper upper limit value	—	—	32000	—	—	—	—	—
	Process alarm upper lower limit value	—	—	28000	—	—	—	—	—
	Process alarm lower upper limit value	—	—	4000	—	—	—	—	—
	Process alarm lower lower limit value	—	—	0	—	—	—	—	—
Alert output function (rate alarm)	Alert output setting (rate alarm)	Enable	—	Disable	—	Disable	—	Disable	—
	Rate alarm alert detection cycle setting	400 times	—	—	—	—	—	—	—
	Rate alarm upper limit value	25.0%	—	—	—	—	—	—	—
	Rate alarm lower limit value	-50.0%	—	—	—	—	—	—	—
Input signal error detection function	Input signal error detection setting	Upper/lower limit detection	—	Disable	—	Disable	—	Disable	—
	Input signal error detection upper limit setting value	8.0%	—	—	—	—	—	—	—
	Input signal error detection lower limit setting value	8.0%	—	—	—	—	—	—	—

## Label settings

GX Works3 provides functions that support the creation of a program.

The following table lists the module labels and global labels used for the program examples in this section.

There is no need to change the settings of the module labels. For details on the global labels, refer to the following.

 MELSEC iQ-R Programming Manual (Program Design)

Classification	Label name	Description	Device	
Module label	R60ADG_1.bModuleREADY	Module READY	X0	
	R60ADG_1.bInputSignalErrorDetectionSignal	Input signal error detection signal	X0C	
	R60ADG_1.bMaxValueMinValueResetCompletedFlag	Maximum value/minimum value reset completed flag	X0D	
	R60ADG_1.bA_D_conversionCompletedFlag	A/D conversion completed flag	X0E	
	R60ADG_1.bErrorFlag	Error flag	X0F	
	R60ADG_1.bOperatingConditionSettingRequest	Operating condition setting request	Y9	
	R60ADG_1.bMaxValueMinValueResetRequest	Maximum value/minimum value reset request	Y0D	
	R60ADG_1.uA_D_conversionCompletedFlag.0	A/D conversion completed flag	—	
	R60ADG_1.stnMonitor[0].wDigitalOutputValue	CH1 Digital output value	—	
	R60ADG_1.uA_D_conversionCompletedFlag.2	A/D conversion completed flag	—	
	R60ADG_1.stnMonitor[2].wDigitalOutputValue	CH3 Digital output value	—	
	R60ADG_1.uA_D_conversionCompletedFlag.4	A/D conversion completed flag	—	
	R60ADG_1.stnMonitor[4].wDigitalOperationValue	CH5 Digital operation value	—	
	R60ADG_1.uA_D_conversionCompletedFlag.6	A/D conversion completed flag	—	
	R60ADG_1.stnMonitor[6].wDigitalOutputValue	CH7 Digital output value	—	
	R60ADG_1.stnMonitor[4].wMaxValue	CH5 Maximum value	—	
	R60ADG_1.stnMonitor[4].wMinValue	CH5 Minimum value	—	
	R60ADG_1.uWarningOutputFlagProcessAlarmUpperLimit.2	Alert output flag (process alarm upper limit)	—	
	R60ADG_1.uWarningOutputFlagProcessAlarmLowerLimit.2	Alert output flag (process alarm lower limit)	—	
	R60ADG_1.uWarningOutputFlagRateAlarmUpperLimit.0	Alert output flag (rate alarm upper limit)	—	
	R60ADG_1.uWarningOutputFlagRateAlarmLowerLimit.0	Alert output flag (rate alarm lower limit)	—	
	R60ADG_1.uInputSignalErrorDetectionFlag.0	Input signal error detection flag	—	
	Labels to be defined	Define global labels as shown below:		
	Label Name	Data Type	Class	Assign (Device/Label)
1	DigitOutValSig	Bit	VAR_GLOBAL	X10
2	CH1_DigOutVal	Word [Signed]	VAR_GLOBAL	D11
3	CH3_DigOutVal	Word [Signed]	VAR_GLOBAL	D12
4	CH5_DigCalcVal	Word [Signed]	VAR_GLOBAL	D13
5	CH7_DigOutVal	Word [Signed]	VAR_GLOBAL	D14
6	MaxMinReadSig	Bit	VAR_GLOBAL	X11
7	MaxMinResetSig	Bit	VAR_GLOBAL	X12
8	CH5_DigMaxVal	Word [Signed]	VAR_GLOBAL	D15
9	CH5_DigMinVal	Word [Signed]	VAR_GLOBAL	D16
10	CH3_ProcAlmUpLimit	Bit	VAR_GLOBAL	F0
11	CH3_ProcAlmLowLimit	Bit	VAR_GLOBAL	F1
12	CH1_RateAlmUpLimit	Bit	VAR_GLOBAL	F2
13	CH1_RateAlmLowLimit	Bit	VAR_GLOBAL	F3
14	CH1_InputSigErr	Bit	VAR_GLOBAL	F4
15	ErrOperationEN	Bit	VAR_GLOBAL	
16	ErrResetSig	Bit	VAR_GLOBAL	X13
17	ErrOperationENO	Bit	VAR_GLOBAL	
18	ErrOperationOK	Bit	VAR_GLOBAL	
19	UnitErrFlg	Bit	VAR_GLOBAL	
20	UnitErrCode	Word [Unsigned]/Bit String [16-bit]	VAR_GLOBAL	
21	UnitAlmCode	Word [Unsigned]/Bit String [16-bit]	VAR_GLOBAL	



## Program example 2

- This program is an example to read the maximum and minimum values of CH5, which in turn are cleared.

(0)	MaxMinReadSig X11  ↑	R60ADG_1.bModuleREADY X0 	R60ADG_1.bAD_conversionCompletedFlag X0E 	R60ADG_1.bOperatingConditionSettingRequest Y9  /	R60ADG_1.bMaxValueMinValueResetCompletedFlag X0D  /	MOV	R60ADG_1.stnMonitor[4].wMaxValue	CH5_DigMaxVal D15
						MOV	R60ADG_1.stnMonitor[4].wMinValue	CH5_DigMinVal D16
(12)	MaxMinResetSig X12  ↑					SET	R60ADG_1.bMaxValueMinValueResetRequest Y0D	
(15)	R60ADG_1.bMaxValueMinValueResetRequest Y0D 	R60ADG_1.bMaxValueMinValueResetCompletedFlag X0D 				RST	R60ADG_1.bMaxValueMinValueResetRequest Y0D	
(18)								{END }

- (0) CH5 Maximum value and CH5 Minimum value are to be read.
- (12) 'Maximum value/minimum value reset request' (YD) is to be turned on.
- (15) 'Maximum value/minimum value reset request' (YD) is to be turned off.

## Program example 3

- This program is an example to perform the processing at the time when a process alarm upper/lower limit alert is issued in CH3.

(0)	R60ADG_1.uWarningOutputFlagProcessAlarmUpperLimit.2  ↑					SET	CH3_ProcAlmUpLimit F0
(6)	R60ADG_1.uWarningOutputFlagProcessAlarmLowerLimit.2  ↑					SET	CH3_ProcAlmLowLimit F1
(12)							{END }

- (0) The processing at the time when a process alarm upper limit alert is issued in CH3 is to be performed.
- (6) The processing at the time when a process alarm lower limit alert is issued in CH3 is to be performed.

## Program example 4


- This program is an example to perform the processing at the time when a rate alarm upper/lower limit alert is issued in CH1.

(0)	R60ADG_1.uWarningOutputFlagRateAlarmUpperLimit.0  ↑					SET	CH1_RateAlmUpLimit F2
(6)	R60ADG_1.uWarningOutputFlagRateAlarmLowerLimit.0  ↑					SET	CH1_RateAlmLowLimit F3
(12)							{END }

- (0) The processing at the time when a rate alarm upper limit alert is issued in CH1 is to be performed.
- (6) The processing at the time when a rate alarm lower limit alert is issued in CH1 is to be performed.

## Program example 5

- This program is an example to display the latest error code if an input signal error of CH1 is detected or an error occurs. After that, the program clears the error flag and the stored error code.

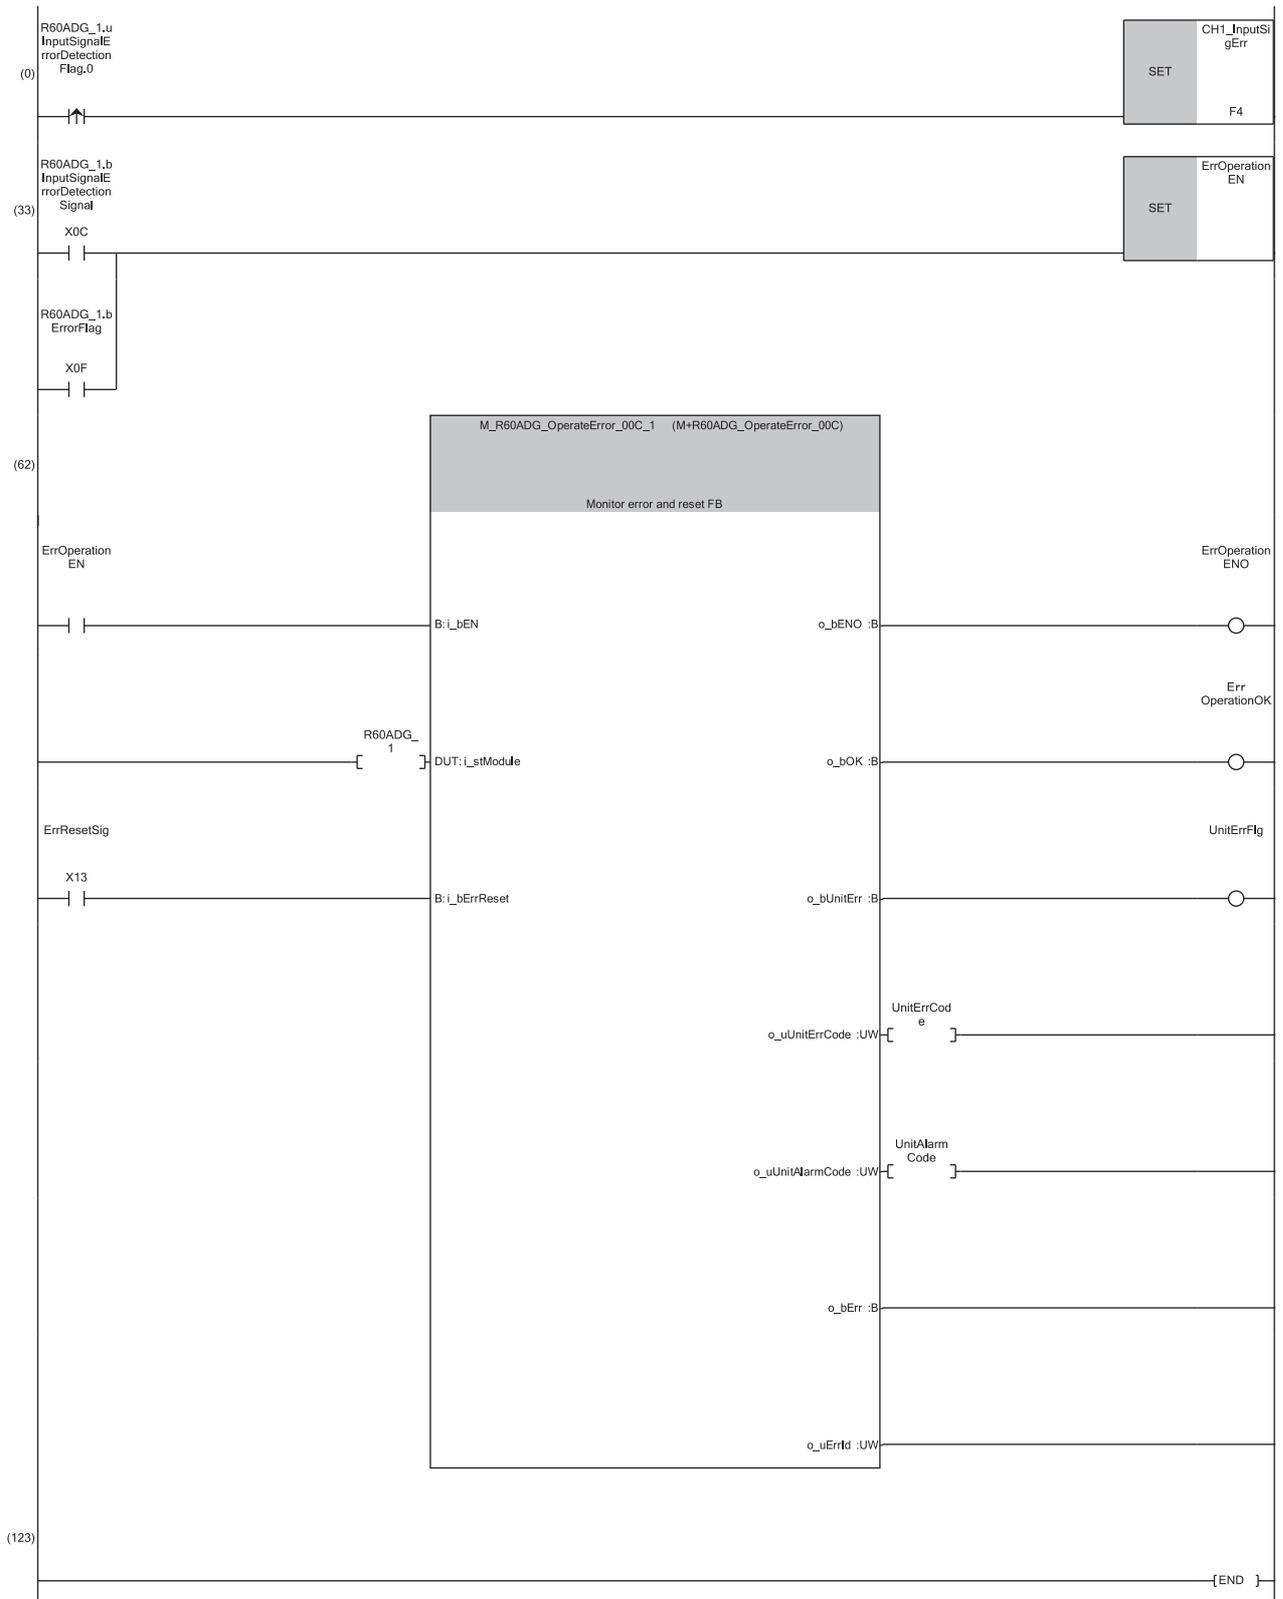

- (0) The processing at the time when an input signal error is detected in CH1 is to be performed.  
 (33) Error manipulation start flag is to be turned on.

# 8 OFFSET/GAIN SETTING


Using the user range setting requires the offset/gain setting.

Access to the offset/gain setting window in the engineering tool to set the offset and gain values.


## 8.1 Setting Procedure

The setting procedure for the offset/gain setting of the A/D converter module is as follows:


[Tool] ⇒ [Module Tool List]

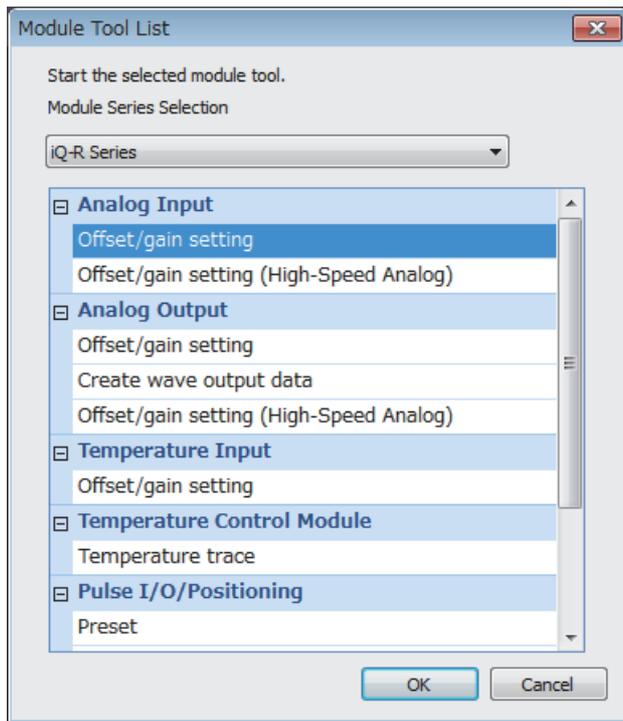

1. In "Analog Input", select "Offset/gain Setting" and click the [OK] button.

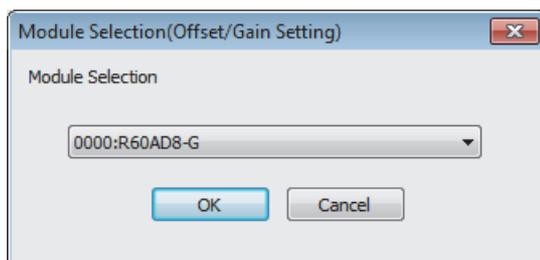


2. Select the target module for the offset/gain setting, and click the [OK] button.

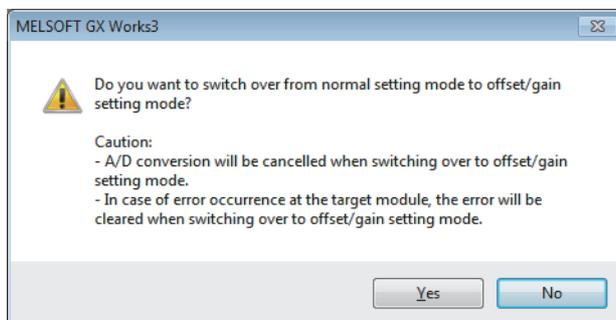


3. Click the [Yes] button.


4. Mark the checkbox of the channel where offset and gain values are to be set.

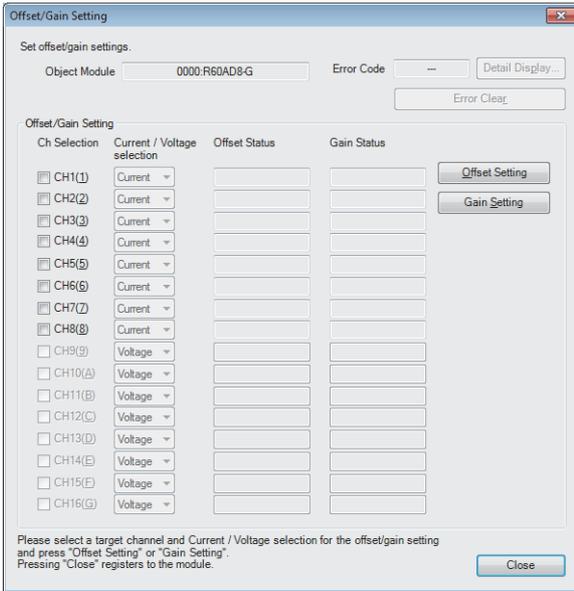


5. Select voltage or current and click the [Offset Setting] button.

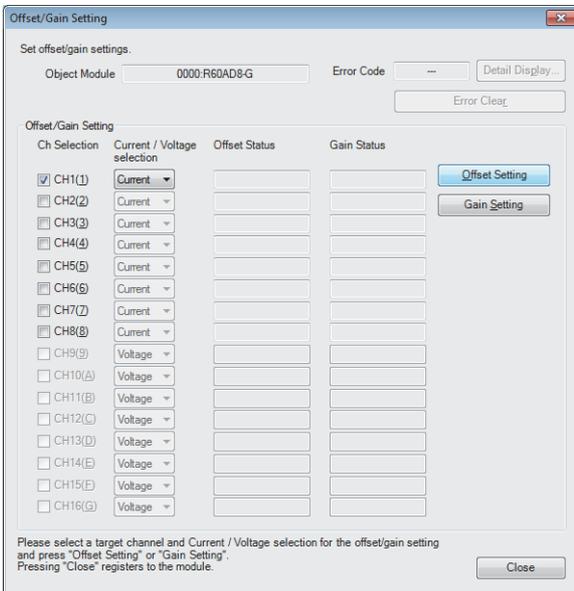


6. Apply the offset voltage or current to the corresponding channel, and click the [Yes] button.

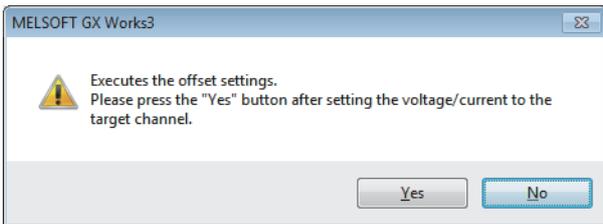


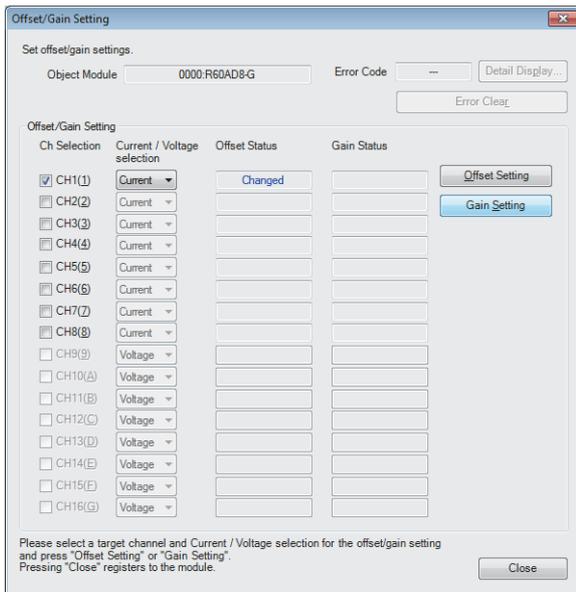


7. Check that "Offset Status" has changed to "Changed", and click the [Gain Setting] button.

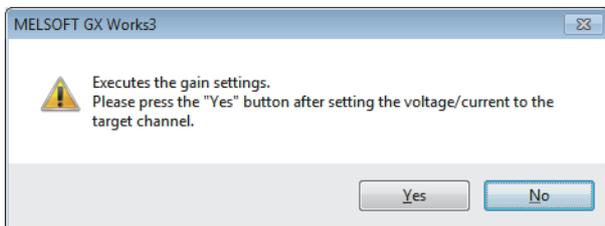

8. Apply the gain voltage or current to the corresponding channel, and click the [Yes] button.

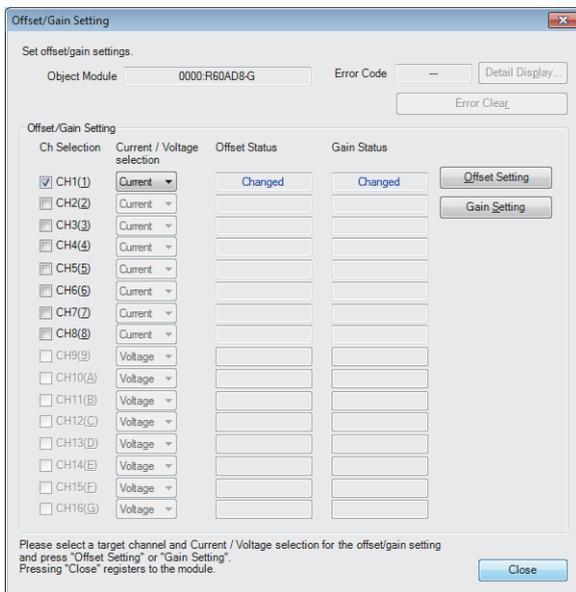

9. Check that "Gain Status" has changed to "Changed", and click the [Close] button.

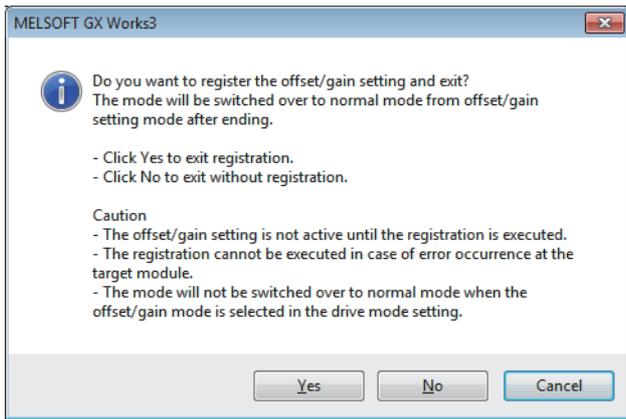

**10.** Click the [Yes] button.

# APPENDICES

---

## Appendix 1 I/O Conversion Characteristics

---

The I/O conversion characteristics of A/D conversion are expressed by the slope of the straight line connecting the offset value and the gain value, both of which are used when an analog signal (voltage or current) from outside the programmable controller is converted to the corresponding digital value.

### Offset value

---

An analog input value (voltage or current) which turns 0 as a digital output value after conversion




### Gain value

---

An analog input value (voltage or current) which turns 32000 as a digital output value after conversion

## Voltage input characteristics

The following shows the list of analog input ranges at the voltage input and the graphs of each of the voltage input characteristics.

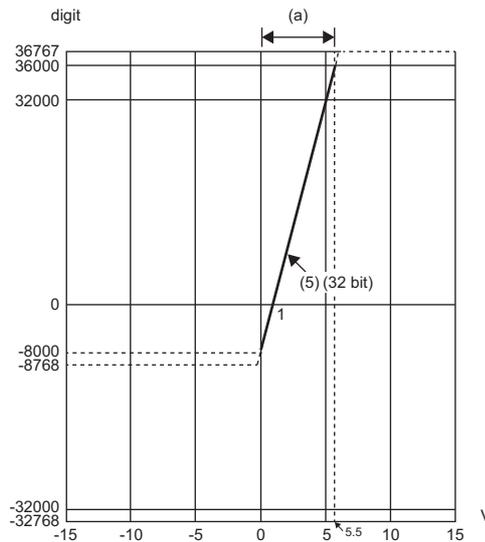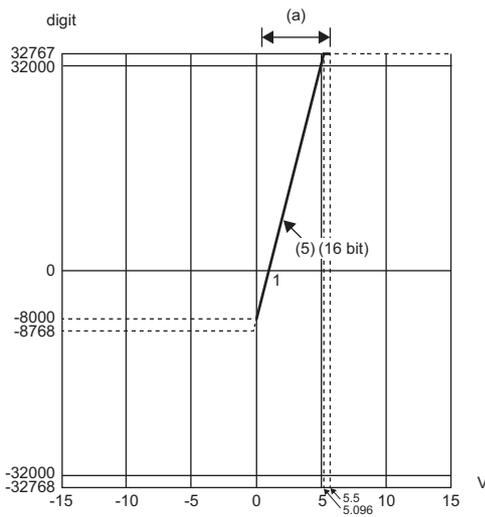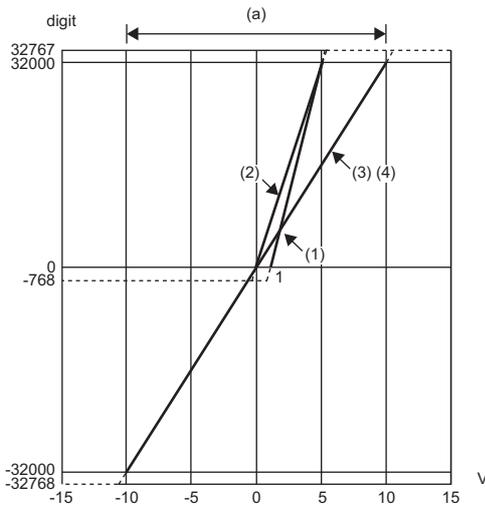

digit: Digital output value

V: Analog input voltage (V)

(5) (16 bit): The line shows (5) for 16 bit.

(5) (32 bit): The line shows (5) for 32 bit.

(a): Practical analog input range

No.	Input range setting	Offset value	Gain value	Digital output value <sup>*3</sup>	Resolution
(1)	1 to 5V	1V	5V	0 to 32000	125.0 $\mu$ V
(2)	0 to 5V	0V	5V		156.3 $\mu$ V
(3)	-10 to 10V	0V	10V	-32000 to 32000	312.5 $\mu$ V
(4)	0 to 10V	0V	10V	0 to 32000	
(5)	1 to 5V (extended mode)	1V	5V	-8000 to 36000	125.0 $\mu$ V
—	User range setting	*1	*1	-32000 to 32000	29.2 $\mu$ V <sup>*2</sup>

A

\*1 Set the offset value and gain value in the user range setting within a range satisfying the following conditions. Failure to satisfy the conditions may not result in proper A/D conversion.

Setting range of the offset value and gain value: -10 to 10V

$$((\text{Gain value}) - (\text{Offset value})) \geq 1.6\text{V}$$

\*2 Maximum resolution in the user range setting.

\*3 If an analog input value exceeds the range of digital output value, the digital output value is fixed to the maximum or minimum value.




Input range setting	Digital output value	
	Minimum	Maximum
1 to 5V	-768	32767
0 to 5V		
-10 to 10V		
0 to 10V	-768	
1 to 5V (extended mode)	-8768	36767
User range setting	-32768	32767

**Point** 

- Set values within the practical range of the analog input and the digital output at each input range. If the range is exceeded, the resolution and accuracy may not fall within the range of the performance specifications. (Do not use the values in the dotted line region in the graph of voltage input characteristics.)
- Do not set a voltage of  $\pm 15\text{V}$  or more. Doing so can cause breakdown of the elements.

## Current input characteristics

The following shows the list of analog input ranges at the current input and the graphs of each of the current input characteristics.

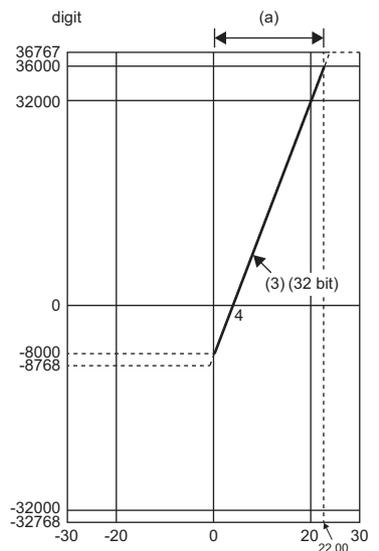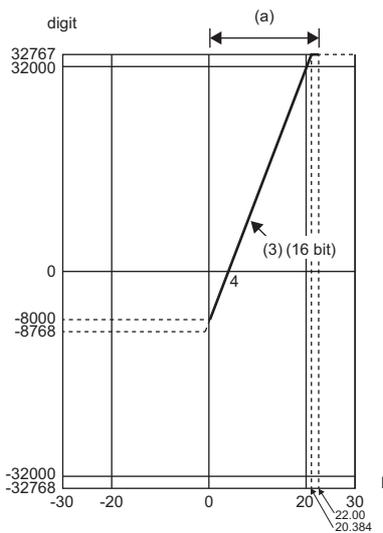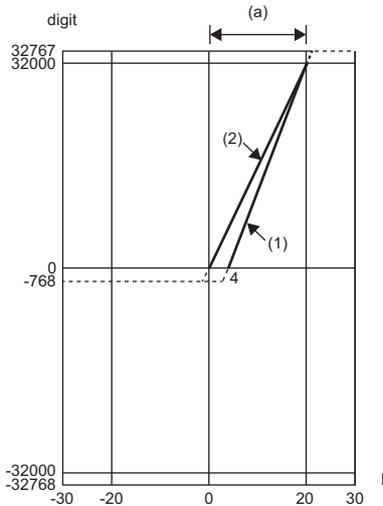

digit: Digital output value

I: Analog input current (mA)

(3) (16 bit): (3) is a 16 bit of.

(3) (32 bit): (3) is a 32 bit of.

(a): Practical analog input range

No.	Input range setting	Offset value	Gain value	Digital output value <sup>*3</sup>	Resolution
(1)	4 to 20mA	4mA	20mA	0 to 32000	500.0nA
(2)	0 to 20mA	0mA	20mA		625.0nA
(3)	4 to 20mA (extended mode)	4mA	20mA	-8000 to 36000	500.0nA
—	User range setting	*1	*1	-32000 to 32000	115.5nA <sup>*2</sup>

\*1 Set the offset value and gain value in the user range setting within a range satisfying the following conditions. Failure to satisfy the conditions may not result in proper A/D conversion.

Gain value  $\leq$  20mA, offset value  $\geq$  0mA

$((\text{Gain value}) - (\text{Offset value})) \geq 12.2\text{mA}$

\*2 Maximum resolution in the user range setting.

\*3 If an analog input value exceeds the range of digital output value, the digital output value is fixed to the maximum or minimum value.

Input range setting	Digital output value	
	Minimum	Maximum
4 to 20mA	-768	32767
0 to 20mA		
4 to 20mA (extended mode)	-8768	36767
User range setting	-32768	32767

**Point** 

- Set values within the practical range of the analog input and the digital output at each input range. If the range is exceeded, the resolution and accuracy may not fall within the range of the performance specifications. (Do not use the values in the dotted line region in the graph of current input characteristics.)
- Do not set a current of  $\pm 30\text{mA}$  or more. Doing so can cause breakdown of the elements.

# Appendix 2 Accuracy

The accuracy of A/D conversion is the accuracy of the maximum digital output value. The accuracy is given by the following formula:

$$\text{Accuracy} = (\text{Reference accuracy}) + (\text{Temperature coefficient}) \times (\text{Temperature variation})$$

- Reference accuracy: The accuracy at an ambient temperature when the offset/gain setting is configured. ( $\pm 0.1\%$  ( $\pm 32$  digits))
- Temperature coefficient: The accuracy based on a temperature change of  $1^\circ\text{C}$ . ( $0.0035\%/^\circ\text{C}$  ( $\pm 1.12$  digits))


An output characteristic change resulting from a change in the offset/gain setting or the analog input range does not sacrifice the reference accuracy and temperature coefficient, which are maintained within the described range of the performance specifications

(except for the conditions under noise influence).

**Ex.**

Accuracy when the temperature changes by  $5^\circ\text{C}$  from  $25^\circ\text{C}$  to  $30^\circ\text{C}$

$$(\pm 0.1\%) + (\pm 0.0035\%/^\circ\text{C} \times 5^\circ\text{C}) = \pm 0.1175\% (\pm 38 \text{ digits})$$

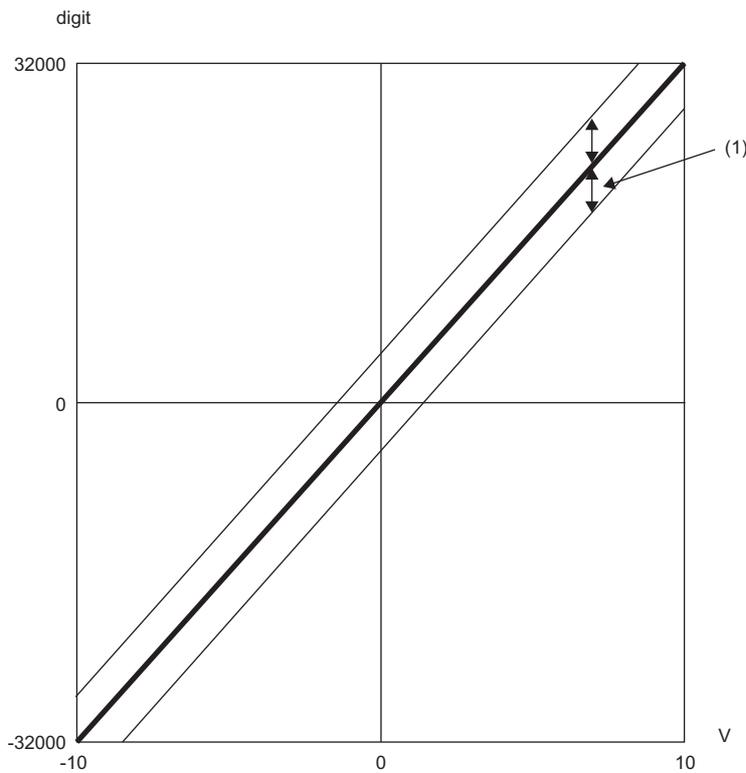

digit: Digital output value


V: Analog input voltage (V)

(1) Voltage fluctuation range

# Appendix 3 External Dimensions


The following figure shows the external dimensions of the A/D converter module.

## R60AD8-G

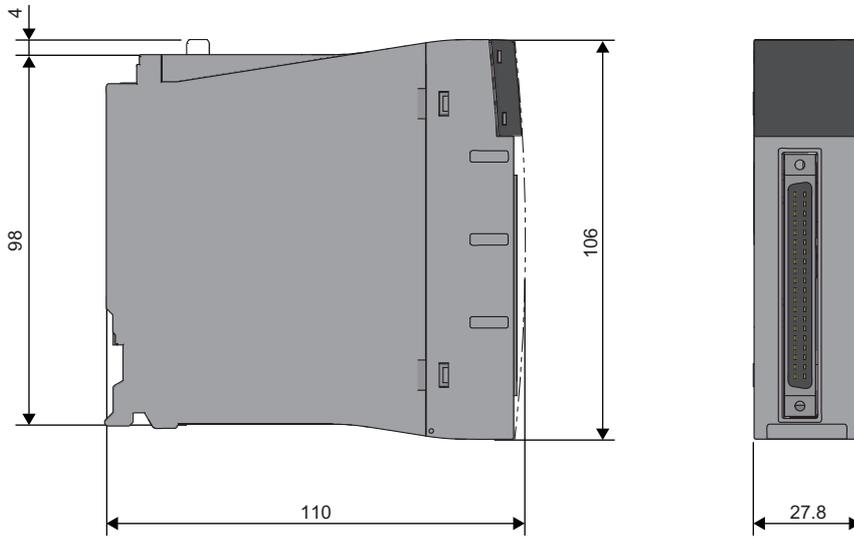

(Unit: mm)

## R60AD16-G

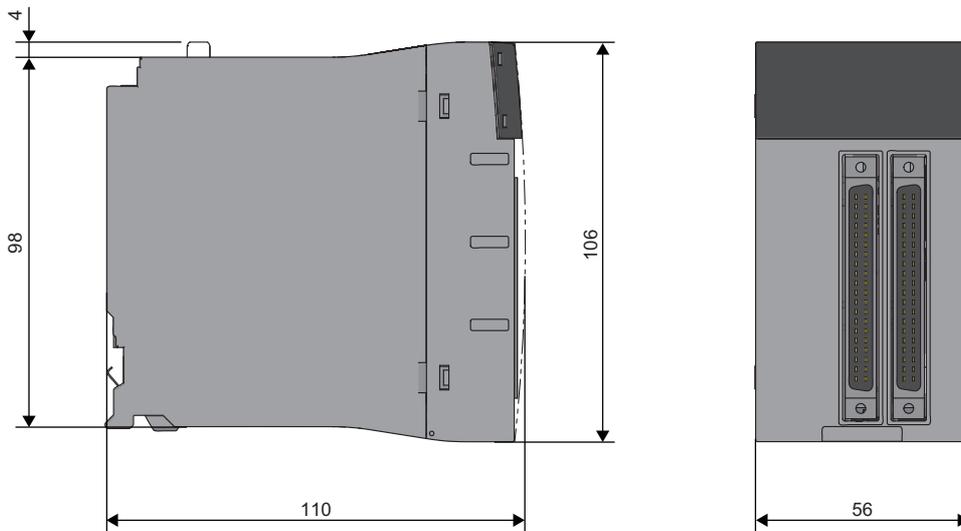

(Unit: mm)

# MEMO

---

A

# INDEX

---

## A

---

Accuracy of A/D conversion . . . . .	47
ALM LED . . . . .	18

## C

---

Connector for external devices . . . . .	28
Connector/terminal block converter module . . . . .	31
Current input characteristics . . . . .	45

## D

---

Dedicated cable . . . . .	31
---------------------------	----

## E

---

ERR LED . . . . .	18
External dimensions . . . . .	48
External wiring . . . . .	29

## F

---

Function block (FB) . . . . .	32
-------------------------------	----

## G

---

Gain value . . . . .	42
----------------------	----

## O

---

Offset value . . . . .	42
Offset/gain setting . . . . .	38

## P

---

Performance specifications . . . . .	20
--------------------------------------	----

## R

---

RUN LED . . . . .	18
-------------------	----

## V

---

Voltage input characteristics . . . . .	43
---	----

# MEMO

---

# REVISIONS

\*The manual number is given on the bottom left of the back cover.

Revision date	*Manual number	Description
January 2015	SH(NA)-081485ENG-A	First edition
March 2016	SH(NA)-081485ENG-B	■Added or modified parts RELEVANT MANUALS, Section 5.2, 7.1, Appendix 1, 2, 3
June 2018	SH(NA)-081485ENG-C	■Added or modified parts SAFETY PRECAUTIONS, COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES, INTRODUCTION, RELEVANT MANUALS, TERMS, Chapter 1, Section 2.1, Chapter 5, Section 6.2, 8.1
August 2020	SH(NA)-081485ENG-D	■Added or modified part Appendix 3
November 2022	SH(NA)-081485ENG-E	■Added or modified parts CONDITIONS OF USE FOR THE PRODUCT, INTRODUCTION, TERMS, WARRANTY
February 2024	SH(NA)-081485ENG-F	■Added or modified parts SAFETY PRECAUTIONS, CONDITIONS OF USE FOR THE PRODUCT, Section 6.1, 7.2

Japanese manual number: SH-081484-F

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2015 MITSUBISHI ELECTRIC CORPORATION

# WARRANTY

---

Please confirm the following product warranty details before using this product.

## **1. Gratis Warranty Term and Gratis Warranty Range**

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
  1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
  2. Failure caused by unapproved modifications, etc., to the product by the user.
  3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
  5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
  6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
  7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

## **2. Onerous repair term after discontinuation of production**

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

## **3. Overseas service**

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

## **4. Exclusion of loss in opportunity and secondary loss from warranty liability**

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

## **5. Changes in product specifications**

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

· When SIL2 mode is set

Please confirm the following product warranty details before using this product.

### **1. Limited Warranty and Product Support.**

- a. Mitsubishi Electric Company ("MELCO") warrants that for a period of eighteen (18) months after date of delivery from the point of manufacture or one year from date of Customer's purchase, whichever is less, Mitsubishi programmable logic controllers (the "Products") will be free from defects in material and workmanship.
- b. At MELCO's option, for those Products MELCO determines are not as warranted, MELCO shall either repair or replace them or issue a credit or return the purchase price paid for them.
- c. For this warranty to apply:
  - (1) Customer shall give MELCO (i) notice of a warranty claim to MELCO and the authorized dealer or distributor from whom the Products were purchased, (ii) the notice shall describe in reasonable details the warranty problem, (iii) the notice shall be provided promptly and in no event later than thirty (30) days after the Customer knows or has reason to believe that Products are not as warranted, and (iv) in any event, the notice must be given within the warranty period;
  - (2) Customer shall cooperate with MELCO and MELCO's representatives in MELCO's investigation of the warranty claim, including preserving evidence of the claim and its causes, meaningfully responding to MELCO's questions and investigation of the problem, grant MELCO access to witnesses, personnel, documents, physical evidence and records concerning the warranty problem, and allow MELCO to examine and test the Products in question onsite or at the premises where they are installed or used; and
  - (3) If MELCO requests, Customer shall remove Products it claims are defective and ship them to MELCO or MELCO's authorized representative for examination and, if found defective, for repair or replacement. The costs of removal, shipment to and from MELCO's designated examination point, and reinstallation of repaired or replaced Products shall be at Customer's expense.
  - (4) If Customer requests and MELCO agrees to effect repairs onsite at any domestic or overseas location, the Customer will pay for the costs of sending repair personnel and shipping parts. MELCO is not responsible for any re-commissioning, maintenance, or testing on-site that involves repairs or replacing of the Products.
- d. Repairs of Products located outside of Japan are accepted by MELCO's local authorized service facility centers ("FA Centers"). Terms and conditions on which each FA Center offers repair services for Products that are out of warranty or not covered by MELCO's limited warranty may vary.
- e. Subject to availability of spare parts, MELCO will offer Product repair services for (7) years after each Product model or line is discontinued, at MELCO's or its FA Centers' rates and charges and standard terms in effect at the time of repair. MELCO usually produces and retains sufficient spare parts for repairs of its Products for a period of seven (7) years after production is discontinued.
- f. MELCO generally announces discontinuation of Products through MELCO's Technical Bulletins. Products discontinued and repair parts for them may not be available after their production is discontinued.

### **2. Limits of Warranties.**

- a. MELCO does not warrant or guarantee the design, specify, manufacture, construction or installation of the materials, construction criteria, functionality, use, properties or other characteristics of the equipment, systems, or production lines into which the Products may be incorporated, including any safety, fail-safe and shut down systems using the Products.
- b. MELCO is not responsible for determining the suitability of the Products for their intended purpose and use, including determining if the Products provide appropriate safety margins and redundancies for the applications, equipment or systems into which they are incorporated.
- c. Customer acknowledges that qualified and experienced personnel are required to determine the suitability, application, design, construction and proper installation and integration of the Products. MELCO does not supply such personnel.
- d. MELCO is not responsible for designing and conducting tests to determine that the Product functions appropriately and meets application standards and requirements as installed or incorporated into the end-user's equipment, production lines or systems.
- e. MELCO does not warrant any Product:
  - (1) repaired or altered by persons other than MELCO or its authorized engineers or FA Centers;
  - (2) subjected to negligence, carelessness, accident, misuse, or damage;
  - (3) improperly stored, handled, installed or maintained;
  - (4) integrated or used in connection with improperly designed, incompatible or defective hardware or software;
  - (5) that fails because consumable parts such as batteries, backlights, or fuses were not tested, serviced or replaced;
  - (6) operated or used with equipment, production lines or systems that do not meet applicable and commensurate legal, safety and industry-accepted standards;
  - (7) operated or used in abnormal applications;
  - (8) installed, operated or used in contravention of instructions, precautions or warnings contained in MELCO's user, instruction and/or safety manuals, technical bulletins and guidelines for the Products;
  - (9) used with obsolete technologies or technologies not fully tested and widely accepted and in use at the time of the Product's manufacture;
  - (10) subjected to excessive heat or moisture, abnormal voltages, shock, excessive vibration, physical damage or other improper environment; or
  - (11) damaged or malfunctioning due to Acts of God, fires, acts of vandals, criminals or terrorists, communication or power failures, or any other cause or failure that results from circumstances beyond MELCO's control.
- f. All Product information and specifications contained on MELCO's website and in catalogs, manuals, or technical information materials provided by MELCO are subject to change without prior notice.

- g. The Product information and statements contained on MELCO's website and in catalogs, manuals, technical bulletins or other materials provided by MELCO are provided as a guide for Customer's use. They do not constitute warranties and are not incorporated in the contract of sale for the Products.
- h. These terms and conditions constitute the entire agreement between Customer and MELCO with respect to warranties, remedies and damages and supersede any other understandings, whether written or oral, between the parties. Customer expressly acknowledges that any representations or statements made by MELCO or others concerning the Products outside these terms are not part of the basis of the bargain between the parties and are not factored into the pricing of the Products.
- i. THE WARRANTIES AND REMEDIES SET FORTH IN THESE TERMS ARE THE EXCLUSIVE AND ONLY WARRANTIES AND REMEDIES THAT APPLY TO THE PRODUCTS.
- j. MELCO DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

### **3. Limits on Damages.**

- a. MELCO'S MAXIMUM CUMULATIVE LIABILITY BASED ON ANY CLAIMS FOR BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE, STRICT TORT LIABILITY OR OTHER THEORIES OF RECOVERY REGARDING THE SALE, REPAIR, REPLACEMENT, DELIVERY, PERFORMANCE, CONDITION, SUITABILITY, COMPLIANCE, OR OTHER ASPECTS OF THE PRODUCTS OR THEIR SALE, INSTALLATION OR USE SHALL BE LIMITED TO THE PRICE PAID FOR PRODUCTS NOT AS WARRANTED.
- b. Although MELCO has declared Product's compliance with the international safety standards IEC61508, IEC61511, this fact does not guarantee that Product will be free from any malfunction or failure. The user of this Product shall comply with any and all applicable safety standard, regulation or law and take appropriate safety measures for the system in which the Product is installed or used and shall take the second or third safety measures other than the Product. MELCO is not liable for damages that could have been prevented by compliance with any applicable safety standard, regulation or law.
- c. MELCO prohibits the use of Products with or in any application involving power plants, trains, railway systems, airplanes, airline operations, other transportation systems, amusement equipments, hospitals, medical care, dialysis and life support facilities or equipment, incineration and fuel devices, handling of nuclear or hazardous materials or chemicals, mining and drilling, and other applications where the level of risk to human life, health or property are elevated.
- d. MELCO SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR PUNITIVE DAMAGES, FOR LOSS OF PROFITS, SALES, OR REVENUE, FOR INCREASED LABOR OR OVERHEAD COSTS, FOR DOWNTIME OR LOSS OF PRODUCTION, FOR COST OVERRUNS, OR FOR ENVIRONMENTAL OR POLLUTION DAMAGES OR CLEAN-UP COSTS, WHETHER THE LOSS IS BASED ON CLAIMS FOR BREACH OF CONTRACT OR WARRANTY, VIOLATION OF STATUTE, NEGLIGENCE OR OTHER TORT, STRICT LIABILITY OR OTHERWISE.
- e. In the event that any damages which are asserted against MELCO arising out of or relating to the Products or defects in them, consist of personal injury, wrongful death and/or physical property damages as well as damages of a pecuniary nature, the disclaimers and limitations contained in these terms shall apply to all three types of damages to the fullest extent permitted by law. If, however, the personal injury, wrongful death and/or physical property damages cannot be disclaimed or limited by law or public policy to the extent provided by these terms, then in any such event the disclaimer of and limitations on pecuniary or economic consequential and incidental damages shall nevertheless be enforceable to the fullest extent allowed by law.
- f. In no event shall any cause of action arising out of breach of warranty or otherwise concerning the Products be brought by Customer more than one year after the cause of action accrues.
- g. Each of the limitations on remedies and damages set forth in these terms is separate and independently enforceable, notwithstanding the unenforceability or failure of essential purpose of any warranty, undertaking, damage limitation, other provision of these terms or other terms comprising the contract of sale between Customer and MELCO.

### **4. Delivery/Force Majeure.**

- a. Any delivery date for the Products acknowledged by MELCO is an estimated and not a promised date. MELCO will make all reasonable efforts to meet the delivery schedule set forth in Customer's order or the purchase contract but shall not be liable for failure to do so.
- b. Products stored at the request of Customer or because Customer refuses or delays shipment shall be at the risk and expense of Customer.
- c. MELCO shall not be liable for any damage to or loss of the Products or any delay in or failure to deliver, service, repair or replace the Products arising from shortage of raw materials, failure of suppliers to make timely delivery, labor difficulties of any kind, earthquake, fire, windstorm, flood, theft, criminal or terrorist acts, war, embargoes, governmental acts or rulings, loss or damage or delays in carriage, acts of God, vandals or any other circumstances reasonably beyond MELCO's control.

### **5. Choice of Law/Jurisdiction.**

These terms and any agreement or contract between Customer and MELCO shall be governed by the laws of the State of New York without regard to conflicts of laws. To the extent any action or dispute is not arbitrated, the parties consent to the exclusive jurisdiction and venue of the federal and state courts located in the Southern District of the State of New York. Any judgment there obtained may be enforced in any court of competent jurisdiction.

### **6. Arbitration.**

Any controversy or claim arising out of, or relating to or in connection with the Products, their sale or use or these terms, shall be settled by arbitration conducted in accordance with the Center for Public Resources (CPR) Rules for Non-Administered Arbitration of International Disputes, by a sole arbitrator chosen from the CPR's panels of distinguished neutrals. Judgment upon the award rendered by the Arbitrator shall be final and binding and may be entered by any court having jurisdiction thereof. The place of the arbitration shall be New York City, New York. The language of the arbitration shall be English. The neutral organization designated to perform the functions specified in Rule 6 and Rules 7.7(b), 7.8 and 7.9 shall be the CPR.

# TRADEMARKS

---

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as <sup>™</sup> or <sup>®</sup> are not specified in this manual.



SH(NA)-081485ENG-F(2402)MEE

MODEL: R-AD-G-U-IN-E

MODEL CODE: 13JX29

## **mitsubishi electric corporation**

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the  
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.