

MELSEC iQ-R MES Interface Module Option Driver Installation Instructions

■ Before Using the Product

Please read this document before use. Keep the document in a safe place for future reference. Make sure that the end users read the document.

For the precautions on using MELSEC iQ-R MES Interface Module Option Driver, refer to the following manual.

 MELSEC iQ-R MES Interface Module Option Driver User's Manual [SH-082186ENG]

Notice

- Reprinting or reproducing the part or all of the contents of this document in any form for any purpose without the permission of Mitsubishi Electric Corporation is strictly forbidden.
- Although we have made the utmost effort to follow the revisions of the software and hardware, in some cases, unsynchronized matter may occur.
- The information in this document may be subject to change without notice.

■ Operating Environment

- Option driver body
This runs in an MES interface module (RD81MES96N).
- Tool add-in

The operating environment is same as that of MES Interface Function Configuration Tool. For details, refer to the following:

 MELSEC iQ-R MES Interface Module User's Manual (Startup) [SH-081422ENG]

■ Installation

1. Execute 'EnableOptionDriverFunction.exe' stored in the following folder in each product DVD.

Model name	Folder
SW1SFD-RMESOPRC-B	Option Driver RC
SW1SFD-RMESOPSM-B	Option Driver SM
SW1SFD-RMESOPOM-B	Option Driver OM

The option driver setting is enabled^{1*2}, and the following items are displayed in MES Interface Function Configuration Tool.

- [Option Driver Management] tab³ in the "Manage MES Interface Module" screen
- [Option]⇒[Management of Add-ins]
 - *1 Enabling of the setting is applied to a configuration personal computer on which this procedure is performed. Therefore, the setting remains enabled even when MES Interface Function Configuration Tool is uninstalled and then installed again.
 - *2 When performing this step while MES Interface Function Configuration Tool is running, restart it to enable the setting.
 - *3 Appears even when connecting to an MES interface module on which an option driver body is installed.

2. Install an option driver according to the installation procedure shown in the following manual.

 MELSEC iQ-R MES Interface Module Option Driver User's Manual [SH-082186ENG]

This manual is stored in the following folder in each product DVD.

Model name	Folder
SW1SFD-RMESOPRC-B	Option Driver RC\001Cfg\Manual
SW1SFD-RMESOPSM-B	Option Driver SM\002Cfg\Manual
SW1SFD-RMESOPOM-B	Option Driver OM\003Cfg\Manual

■ Packing List

Model name	Product name	Quantity
SW1SFD-RMESOPRC-B	End-user software license agreement	1
SW1SFD-RMESOPSM-B	Entitlement ID Notification	1
SW1SFD-RMESOPOM-B	MELSEC iQ-R MES Interface Module Option Driver License Application Instructions	1
	MELSEC iQ-R MES Interface Module Option Driver Installation Instructions (This document)	1

■ Uninstallation

Uninstall an option driver according to the uninstallation procedure shown in the following manual.

 MELSEC iQ-R MES Interface Module Option Driver User's Manual [SH-082186ENG]

This manual is stored in the following folder in each product DVD.

Model name	Folder
SW1SFD-RMESOPRC-B	Option Driver RC\001Cfg\Manual
SW1SFD-RMESOPSM-B	Option Driver SM\002Cfg\Manual
SW1SFD-RMESOPOM-B	Option Driver OM\003Cfg\Manual