

Mitsubishi Electric Industrial Robot

CR800-05VD Controller

RV-5AS-D Standard Specifications Manual



▲ Safety Precautions

Always read the following precautions and the separate "Collaborative Robot Safety Manual" before starting use of the robot to learn the required measures to be taken.

Basic precautions and important points when using collaborative robots

Collaborative robots have a variety of safety functions, so unlike conventional industrial robots, they can work in the same space as humans without being separated by a machine guard.

Even though collaborative robots are equipped with safety functions, it does not guarantee that they will not cause injury. To prevent injury, customers who use robots, machine manufacturers who construct robot systems, and system builders such as system integrators must select and use functions correctly. Peripherals must be designed, manufactured, set, programmed, maintained, and inspected appropriately. Before working with collaborative robots, conduct risk assessments, check that no risk is present, and ensure all required documentation is in order.

It is vitally important that all the points mentioned above are fully understood in order to work with collaborative robots safely and without incident. When using collaborative robots, always keep in mind that they may move unexpectedly.

Revision history

Date of print	Specifications No.	Details of revisions			
2020-04-10	BFP-A3727	• First print.			
2020-07-30	BFP-A3727-A	Revised the battery name.			
2020-10-09	BFP-A3727-B	 Revised the weight of recommended hands. Added detailed information to the specifications of the earth leakage breaker. 			
2021-01-22	BFP-A3727-C	 Added an example of a protective circuit. (Fig. 3-8) Corrected other mistakes and changed some sections. Added "6.4 EMC installation guideline". 			
2021-01-29	BFP-A3727-D	 Updated contents for the optional product "MELFA-3D Vision 3.0 (3F-53U-WINM)". Deleted the optional product "MELFA-3D Vision 2.0 (4F-3DVS2-PKG3)" and associated parts. 			
2021-09-30	BFP-A3727-E	Corrected the explanation of the parameter "SRVON". Added illustrations showing the installation position of ferrite cores. (Fig. 3-9) Revised "(5) Parallel I/O interface". Corrected the explanation of noise in "6.2 Working environment". Revised "(4) Vision sensor mounting bracket". Corrected other mistakes and changed some sections.			
2022-01-31	BFP-A3727-F	Revised "6.4 EMC installation guideline".			
2022-06-30	BFP-A3727-G	 Corrected the model name of the EtherCAT module manufactured by HMS. Corrected errors in writing of the GR connector section in "(2) Solenoid valve set". 			
2022-11-30	BFP-A3727-H	 Changed the plug of the external I/O cable for the parallel I/O interface. Corrected other mistakes and changed some sections. 			
2023-04-17	BFP-A3727-J	 Corrected the HMS module model. Corrected the wire colors and wiring sections in "2.5.3 Wiring and piping system diagram for hand". Corrected the hand connector installation angle and hand cable wiring method at hand installation. Corrected "(2) CR800-05VD controller safety functions and safety performance" Corrected other mistakes and changed some sections. 			
2023-06-07	BFP-A3727-K	 Partially revised "3.1.1 (2) CR800-05VD controller safety functions and safety performance". (EN 61800-5-1:2007 → EN 61800-5-1:2007/A1:2017) Added information on the fault loop impedance to "3.1.2 (2) Operating supply" Added descriptions to "6.1.1 Table 6-1: Self-diagnosis stop functions" regarding that the thermal memory function is not supported for the overload protection function and overcurrent diagnosis function. 			
2023-09-14	BFP-A3727-L	 Added information on PoE device connection to "2.5.2 (3) Ethernet cable and force sensor wiring" and "2.5.3 Wiring and piping system diagram for hand". Corrected "2.5.4 Electrical specifications of hand input/output". Changed some sections. 			
2024-04-05	BFP-A3727-M	 Amended images in "1.3.2 Robot controller". Amended images in "3.7 Options". Amended images in "6.4.4 Example of EMC measures". Updated branch information. Corrected other mistakes and changed some sections. 			

Introduction

This is a vertical articulated robot intended for collaborative operation with humans. However, to comply with the target application, a work system having a well-balanced robot arm, peripheral devices or robot and hand section must be structured.

When creating these standard specifications, we have edited them so that the Mitsubishi robot's characteristics and specifications can be easily understood by users considering the implementation of robots. However, if there are any unclear points, please contact your nearest Mitsubishi branch or dealer.

Mitsubishi hopes that you will consider these standard specifications and use our robots.

Note that in this specification document the specifications related to the robot arm is described Page 12, "2 Robot arm", the specifications related to the controller Page 42, "3 Controller", and software functions and a command list Page 95, "4 Software" separately.

This document has indicated the specification of the following types robot.

<Robot type>

• RV-5AS-D

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
- The contents of this manual are subject to change without notice.
- The specifications values are based on Mitsubishi standard testing methods.
- The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed" or "error may occur". Please contact your nearest dealer if you find any doubtful, wrong or skipped point.
- This is the original document.
- Microsoft, Windows, Windows 7, Windows 8, Windows 8.1, Windows 10 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- The official name of Windows® is Microsoft®Windows®Operating System.
- Windows® 7, Windows® 8, Windows® 8.1, Windows® 10 are either product names of Microsoft Corporation in the United States.
- Ethernet is registered trademarks or trademarks of Xerox Corporation in the United States.
- All other company names and production names in this document are the trademarks or registered trademarks of their respective owners.
 Referenced Standard (Requirement of Chinese standardized law): This Product is designed and
- Referenced Standard (Requirement of Chinese standardized law): This Product is designed and manufactured accordance with GB 11291.1.
- Illustrations in this Instruction Manual may differ from the actual products.

Copyright(C) 2020 MITSUBISHI ELECTRIC CORPORATION

Contents

	Page
1 General configuration	1-1
1.1 Structural equipment	1-1
1.1.1 Standard structural equipment	1-1
1.1.2 Options	1-1
1.1.3 Maintenance parts	1-1
1.2 Model type name of robot	1-2
1.2.1 How to identify the robot model	1-2
1.3 Contents of the structural equipment	1-3
1.3.1 Robot arm	1-3
1.3.2 Controller	1-4
1.3.3 Function extension device	1-5
1.3.4 Minimum equipment required to operate the robot	1-6
1.4 Contents of the Option equipment	1-8
1.4.1 List of the robot arm option equipment	1-8
1.4.2 List of the controller option equipment and special specification	1-8
1.4.3 Function extension device	1-9
1.4.4 Recommended vision sensors	1-9
1.4.5 Recommended hands	1-10
2 Robot arm	2-12
2 1 Standard aposifications	2-12
2.1 Standard specifications	2-12
2.1.1 Dasic specifications	2-12
2.2. Definition of apositional	2-13
2.2 Deminition of specifications	2-14
2.2.2 Rated load (mass capacity)	2-14
2.2.3 Relationships Among Mass Capacity, Speed, and Acceleration/Deceleration Speed	2-16
(1) Setting hand and workpiece conditions	2-16
2.2.4 Vibrations at the Tip of the Arm during Low-Speed Operation of the Robot	2-16
2.2.5 Collision detection	2-17
2.2.6 Protection specifications	2-17
(1) Types of protection specifications	2-17
(2) About the use with the bad environment	2-18
2.3 Names of each part of the robot	2-19
2.3.1 Operation buttons	2-20
2.3.2 Status indicator LED	2-21
2.4 Outside dimension • Operating range diagram	2-23
2.4.1 Outside dimensions of machine cables	2-26
2.5 Tooling	2-27
2.5.1 Wiring and piping for hand	2-27
2.5.2 Internal wiring and piping	2-29
(1) Internal pneumatic plumbing	2-29
(2) Internal Wiring of the hand I/O cables	2-29
(3) Ethemet cable and force sensor winning	2-29
2.5.5 Winning and piping system diagram for hand	2-30
2.5.5 Air supply circuit example for the hand	2-32
2.5.6 About the Installation of Tooling Wiring and Piping	2-32
2.6 Options	2-33
(1) Machine cable (replacement)	2-34
(2) Solenoid valve set	2-35
(3) 2-piece force sensor conversion cable set	2-37
(4) Vision sensor mounting bracket	2-38
2.7 About Overhaul	2-40
2.8 Maintenance parts	2-41
•	

Contents

	Page
3 Controller	3-42
3.1 Standard specifications	3-42
3.1.1 Basic specifications	3-42
(1) CR800-05VD controller	3-42
(2) CR800-05VD controller safety functions and safety performance	3-44
3.1.2 Protection specifications and operating supply	3-46
(1) Protection specifications	3-46
(2) Operating supply	3-46
3.2 Names of each part	3-48
3.2.1 CR800-05VD controller	3-48
3.2.2 Safety extension unit	3-50
3.3 Outside dimensions/Installation dimensions	3-51
3.3.1 Outside dimensions	3-51
(1) CR800-05VD controller	3-51
(2) Safety extension unit	3-54
3.3.2 Installation dimensions	3-55
3.4 External input/output	3-57
3.4.1 Types	3-57
3.5 Dedicated input/output	3-58
3.6 Emergency stop input and output etc.	3-61
3.6.1 Connection of the external emergency stop and mode selector switch	3-62
3.6.2 Special stop input (SKIP)	3-66
3.6.3 Door switch function	3-67
3.6.4 Mode selector switch function	3-67
(1) Automatic Operation/Jog Operation/Brake Release and Necessary Switch Settings	· 3-68
3.7 Options	3-70
(1) Link officient to a china new Josef (T/D)	3-71
(2) High efficient leaching pendant (1/B)	3-74
(3) MELSOFT RT TOUIDUX3/MELSOFT RT TOUIDUX3 MIMI	3-70
(4) MELSOF FICT VISUAIDOX	3_80
(6) External I/O cable	3-86
(7) CC-Link interface	0-00
(8) SD memory card	3-91
(9) Easy-setup kit	3-92
3.8 Maintenance parts	3-94
4 Software	4-95
4.1 List of commands	4-95
5 Instruction Manual	5-96
5 1 Details of each instruction manual	5-96
	0 00
6 Safety	6-97
6 1 Safety	6-97
6.1.1 Self-diagnosis stop functions	6-97
6.1.2 External I/O signals that can be used for preventative safety measures	6-98
6.1.3 Examples of safety measures	6-99
(1) External emergency stop connection [supplementary explanation]	6-106
6.2 Working environment	6-107
(1) Power supply	6-107
(2) Noise	6-107
(3) Temperature and humidity	6-107
(4) Vibration	6-107
(5) Installation environment	6-107
6.3 Precautions for handling	6-107

Contents

Page

	-
6.4 EMC installation guideline	6-109
6.4.1 Outlines	6-109
6.4.2 EMC	6-109
6.4.3 EMC measures	6-109
6.4.4 Example of EMC measures	6-110
6.4.5 Parts for EMC measures	6-110
7Appendix	Appendix-111
Appendix 1: Inertia calculation method	Appendix-111
(1) Load moment calculation example (for J5 axis with flange facing downward 111	ls) Appendix-
(2) Load inertia calculation example (for J6 axis)	Appendix-111
Appendix 2: Classification of external I/O functions	Appendix-112
Appendix 3: Safety diagnosis function (test pulse diagnosis)	Appendix-113
Appendix 4: Safety block diagram	Appendix-114
Appendix 5: Connections of recommended hands, recommended vision sensors and	the force sensor
Appendix-115	
(1) Hand: Co-act EGP-C40 N-N-Assista (Manufactured by SCHUNK)	Appendix-115
(2) Hand: HRC-03-099455 (Manufactured by Zimmer Group)	Appendix-120
(3) Hand: KIT-ASSISTA-G (Manufactured by GIMATIC)	Appendix-124
(4) Hand: ROB-SET ECBPM ASSISTA (Manufactured by SCHMALZ)	Appendix-129
Appendix 6: Declaration of Conformity	Appendix-133
Appendix 7: Specifications discussion material	Appendix-135

1 General configuration

1.1 Structural equipment

Structural equipment consists of the following types.

1.1.1 Standard structural equipment

- The following items are enclosed as a standard.
 - 1) Robot arm
 - 2) Controller
 - 3) Machine cable
 - 4) Safety extension unit
 - 5) Robot arm installation bolts
 - 6) CD-ROM (Instruction manual)

1.1.2 Options

User can install options after their delivery. The customer needs to arrange for the installation.

1.1.3 Maintenance parts

Materials and parts for the maintenance use.

1.2 Model type name of robot

This robot has arranged the type name corresponding to load mass, arm length, and environment specification.

1.2.1 How to identify the robot model

$\frac{\mathbf{RV}}{(a)} - \frac{\langle}{(b)}$	$\frac{\mathbf{AS}}{\mathbf{C}} - \frac{\mathbf{D}}{\mathbf{C}}$	
	(a) RV	Indicates vertical articulated robots.
	(b) ◊	Indicates the rated load capacity. 5 :5kg
	(c) AS	Indicates the robot is part of the "ASSISTA" series.

(d) D.....Indicates the controller type. D : Stand alone type

1.3 Contents of the structural equipment

1.3.1 Robot arm

The list of structural equipment is shown in below.



1.3.2 Controller

The devices shown below can be installed on the controller.



Fig.1-2: Structural equipment

1.3.3 Function extension device

These devices (option) are used to extend the function of the robot.



Fig.1-3: Function extension device

1.3.4 Minimum equipment required to operate the robot

The minimum amount of equipment required to operate the robot is shown below. Equipment that should be supplied by the customer is stated in Table 1-1 below.

Caution To protect against ground faults, connect an earth leakage breaker to the robot controller's primary power supply. Failure to do so may result in electric shock.



Note1) Short circuit pins 6-22 and 13-29 of the CNUSR11 connector if not using a door switch. Fig.1-4: Minimum equipment required

Table 1-1: List of customer	supplied	equipment
-----------------------------	----------	-----------

No.	Name	Specifications/Recommended products
1)	Mode selector switch ^{Note1)}	Recommended product: HA1K-2C2A-2 (manufactured by IDEC)
2)	Mode selector switch connection cable ^{Note1)}	Refer to the mode selector switch catalog to select a connector cable.
3)	Emergency stop switch ^{Note1)}	Use an IEC 60204-1 compliant emergency stop switch, which has two NC contacts for redundancy and a mechanical latching function.
4)	Emergency stop switch connection cable ^{Note1)}	Refer to the emergency stop switch catalog to select a con- nector cable.
5)	Earth leakage breaker ^{Note1)}	Recommended product: Single phase NV30FAU-2P-10A- AC100-240V-30mA (manufactured by Mitsubishi Electric) Make sure to attach the TCS-05FA2 terminal cover (manu- factured by Mitsubishi Electric).
6)	Primary power supply connection cable ^{Note1)}	Min. size: #14 AWG (2 mm ²)
7)	Robot controller grounding cable	Min. size: #14 AWG (2 mm ²)
8)	24 V power supply for the safety extension unit Note1)	Choose a product that meets the following specifications: Voltage: 24 VDC ±5% Max. current draw: 300 mA

No.	Name	Specifications/Recommended products
9)	24 V power supply cable ^{Note1)}	Recommended cable specifications • Conductor size: 0.5 to 1.42 mm ² (20 to 16 AWG) • Outer sheath diameter: 1.8 to 2.8 mm • Shielded
10)	Robot grounding cable	Min. size: #11 AWG (4.2 mm ²)
11)	Electric hand	Use manipulators that satisfy the needs of the customer. Refer to Page 10, "1.4.5 Recommended hands" for recom- mended hands.
12)	Electric hand manipulators	Use a hand that satisfies the needs of the customer.
13)	Computer/Tablet	Refer to Page 78, "(4) MELSOFT RT VisualBox".
14)	LAN cable/USB cable	LAN: 10BASE-T / 100BASE-TX USB: USB Type-A to Mini USB Type-B

Note1) Included with the Easy-setup kit (option). For further information on the Easy-setup kit, refer to Page 92, "(9) Easy-setup kit".

1.4 Contents of the Option equipment

A list of all Optional equipment is shown below.

1.4.1 List of the robot arm option equipment

Table 1-2: The list of robot option equipment

Item	Туре	Specifications	Description	
Machine cable (replacement)	1F-□□UCBL-41	For fixing	" □□ " in type shows the length of the cables as fol- lows. 02=2 m, 10=10 m (Changed from the original length of 5 m)	
Solenoid valve set	1F-VD0□-01	Sink type	Sets with one or two valves are available. Φ4 diame	
	1F-VD0□E-01	Source type	The number that replaces "□" indicates the number of valves the solenoid has (1 or 2).	
2-piece force sensor conversion cable set	1F-ASSISTA-ADCBL	The hand cable is 275 mm in length. The base cable is 200 mm in length.	2-piece force sensor conversion cable set (hand cable/base cable) required to connect the force sensor to the robot.	
Vision sensor mount- ing bracket	1F-ASSISTA- 2DVSFLG	-	Bracket required to connect a vision sensor to the hand.	

1.4.2 List of the controller option equipment and special specification

Table	4 0. T	ha liat	oftha	aantrallar	ontion	~~~	amant	000	nooiol o	nonification
rable	1-0 1	ne usi	огле	connoner	COLICIT	еопи	omeni	and s	Decial S	becilication
10010			01 010	00110101101	00000	9991		ana 0	poolai a	poonioaaon

Item	Туре	Specifications	Description		
Simple teaching	R32TB	Cable length 7m	With 3-position enable switch		
pendant	R32TB-15	Cable length 15m	IP65 Ver. 1.9.5 or later		
Highly efficient	R56TB	Cable length 7m	With 3-position enable switch		
teaching pendant	R56TB-15	Cable length 15m	Ver. 4.2 or later		
Parallel I/O Interface	2D-TZ368(Sink type)/ 2D-TZ378(Source type)	DO: 32 point DI: 32 point Insulated type output signal (0.1A/24V /point) Insulated type input signal (9mA/ 24V /point)	The card type external input-and-output. Interface. Install to the slot of controller.		
External I/O cable	2D-CBL05	5m	Use to connect the external peripheral device to the		
Interface)	2D-CBL15	15m	parallel input/output interface.		
CC-Link interface	2D-TZ576	Only Intelligent device station, Local station	For MELSEC PLC with CC-Link connection.		
Network base card (EtherNet/IP inter- face)	2D-TZ535	Communication interface for mounting the Anybus CompactCom module manufactured by HMS. The customer needs to prepare the EtherNet/IP module (AB6314-B- 218) manufactured by HMS.	Refer to separate volume "Network Base Card Instruction Manual" for details.		
Network base card (PROFINET inter- face)	2D-TZ535-PN	Communication interface for mounting the Anybus CompactCom module manufactured by HMS. The customer needs to prepare the PROFINET IO module (AB6489-B) manufactured by HMS.	Refer to separate volume "Network Base Card Instruction Manual" for details.		
Network base card (CC-Link IE Field interface)	2F-DQ535	Communication interface for mounting the Anybus CompactCom module manufactured by HMS. The customer needs to prepare the CC-Link IE Field module (AB6709- B-116) manufactured by HMS.	Refer to separate volume "Network Base Card Instruction Manual" for details.		
Network base card (EtherCAT interface)	2F-DQ535-EC	Communication interface for mounting the Anybus CompactCom module manufactured by HMS. The customer needs to prepare the EtherCAT module (AB6707-D-224) manufactured by HMS.	Refer to separate volume "Network Base Card Instruction Manual" for details.		
SD memory card	2F-2GBSD	Memory card capacity 2GB.	-		

Item	Туре	Specifications	Description
RT ToolBox3	3F-14C-WINE	DVD-ROM	Windows 7, Windows 8, Windows 8.1, Windows 10 Supporting English. (With the simulation function) Ver.1.70Y or later
RT ToolBox3 mini	3F-15C-WINE	DVD-ROM	Windows 7, Windows 8, Windows 8.1, Windows 10 Supporting English. Ver.1.70Y or later
RT VisualBox	3G-30C-WINE	CD-ROM	Windows 10 Supporting English.
Easy-setup kit	4F-ASSISTA- SETUP-JP	For Japan/North America.	A kit which aids setup that consists of switches, a connector cable, and a 24 V power supply.
	4F-ASSISTA- SETUP-EU	For Europe/China.	

1.4.3 Function extension device

	Table 1-4:	The list	of function	extension	device
--	------------	----------	-------------	-----------	--------

ltem	Type name	Specifications	Remarks
Force sensor set	4F-FS002H-W200	A set of devices necessary for force sense control function, such as a force sensor, an interface unit, and support software.	Refer to separate volume "Force Sense Function Instruction Manual" for details.
MELFA-3D Vision 3.0	3F-53U-WINM	Software that connects a compact 3D vision sensor for robots to measure and recognize parts.	Refer to separate volume "MELFA-3D Vision 3.0 Instruction Manual" for details.

1.4.4 Recommended vision sensors

Type name	Manufacturer	Inquiries (As of April 2020)	Remarks
VS80M-202	Mitsubishi Electric	Mitsubishi Electric	Only available in Japan.
VS80M-202-R	Mitsubishi Electric	Mitsubishi Electric	Supports PatMax RedLine [®] PatMax RedLine [®] cannot be used with RT VisualBox. Only available in Japan.
In-Sight 8402M-363-50	COGNEX	COGNEX	-
In-Sight 8402M-373-50	COGNEX	COGNEX	Supports PatMax RedLine [®] PatMax RedLine [®] cannot be used with RT VisualBox.

PoE adapters and cables are required and sold separately. The following adapter and cable are recommended.

PoE adapter: CPS-AC-POE1A-JP (Manufactured by COGNEX)

PoE cable: CCB-84901-2001-## (Manufactured by COGNEX) (## represents the cable length.)

1.4.5 Recommended hands

Table 1-6: List of recommended hands

Type name	Manufacturer	Inquiries (As of April 2020)	Remarks
Co-act EGP-C40 N-N- Assista	SCHUNK	Europe SCHUNK GmbH & Co. KG Bahnhofstrase 106-134, 74348 Lauffen/Neckar, Germany Tel: +49-7133-103-0 China SCHUNK Intec Precision Machinery Trading (Shanghai) Co., Ltd. Xinzhuang Industrial Park, 1F Build- ing 1, No. 420 Chundong Road, Minhang District Shanghai 201108 Tel: +86-21-54420007	Electric hand Weight: 885 g (including installation parts and the fingers) Max. grasp force: 35 N / 70 N / 105 N / 140 N (Choose from four levels.) Stroke: 12 mm (6 mm in each direction) Allow an interval of 15 ms or more between when the Open hand signal is output and when the Close hand signal is output. For details, refer to the Instruction Manual of the hand.
HRC-03-099455	ZIMMER	Europe Zimmer Group Im Salmenkopf 5 77866 Rheinau - Germany Tel: +49 78 44 9139-0 China ZIMMER GROUP CHINA LTD. Level 2-D3, Bldg 4, 526, Fu-Te East 3rd Rd. CN 200131 Pudong, Shanghai Tel: +86 2161 630506	Electric hand Weight: 962 g (including installation parts and the fingers) Max. grasp force: 50 N / 90 N / 140 N / 190 N (Choose from four levels.) Stroke: 20 mm (10 mm in each direction) Allow an interval of 10 ms or more between when the Open hand signal is output and when the Close hand signal is output. For details, refer to the Instruction Manual of the hand.
KIT-ASSISTA-G	GIMATIC	Europe Gimatic Srl Via Enzo Ferrari 2/4 25030 Ron- cadelle (Bs) Italy Tel: +39 030 2584655 China GIMATIC AUTOMATION ENGI- NEERING (CHANGSHU) CO., LTD ROOM 902, N. 333, SOUTHEAST AVENUE CHANGSHU RC 215500 Tel: +86051252977396	Electric hand (Fingers must be created.) Weight: 922 g (including installation parts) Grasp force: 98 N Stroke: 35 mm (17.5 mm in each direction)
ROB-SET ECBPM ASSISTA	SCHMALZ	Europe J. Schmalz GmbH Johannes-Schmalz-Str.1 DE-72293 Glatten Tel: +49 7443 2403-0 China J. Schmalz GmbH Johannes-Schmalz-Str.1 DE-72293 Glatten Tel: +49 7443 2403-0	Suction hand Weight: 750 g (including installation parts and the suction pad) Maximum vacuum pressure: -60 kPa Flow rate: 1.6 liters per minute

[Reference]: The recommendation products of the USB cable are shown below

Name	Type name	Supplier	Outside dimensions
USB cable (USB A type-USB mini B type)	GT09-C30USB-5P	MITSUBISHI ELECTRIC SYSTEM & SERVICE CO., LTD.	Fig. 1-5
	MR-J3USBCBL3M	MITSUBISHI ELECTRIC CORPORATION.	Fig. 1-6

Table 1-7: Recommendation article of the USB cable

Caution Be careful to the USB cable to apply neither the static electricity nor the noise. Otherwise, it becomes the cause of malfunction.

Caution Use the network equipments (personal computer, USB hub, LAN hub, etc) confirmed by manufacturer. The thing unsuitable for the FA environment (related with conformity, temperature or noise) exists in the equipments connected to USB. When using network equipment, measures against the noise, such as measures against EMI and the addition of the ferrite core, may be necessary. Please fully confirm the operation by customer. Guarantee and maintenance of the equipment on the market (usual office automation equipment) cannot be performed.



Fig.1-5: USB cable (GT09-C30USB-5P)



Fig.1-6: USB cable (MR-J3USBCBL3M)

2 Robot arm

2.1 Standard specifications

2.1.1 Basic specifications

Table 2-1: Standard specifications of RV-5AS-D robot

Item Unit Specifications		Specifications			
Туре			RV-5AS-D		
Environment			Oil mist environments		
Degree of free	edom		6		
Installation po	sture		Floor mounted / ceiling mounted		
Structure			Vertical articulated robots		
Drive system			AC servo motor (brake provided on all axes)		
Position detec	ction method		Absolute encoder		
Motor capac-	Waist (J1)	W	200		
ity	Shoulder (J2)		200		
	Elbow (J3)		150		
	Wrist twist (J4)	-	100		
	Wrist pitch (J5)	-	100		
	Wrist roll (J6)		50		
Operating	Waist (J1)	Dearee	±240		
range	Shoulder (J2)		±148		
	Flbow (J3)	-	+150		
	Wrist twist (J4)	-	±200		
	Wrist nitch (.15)	-	+120		
	Wrist roll (J6)	-	+200		
Speed of	Waist (.I1)	Degree/	124 (59.6)		
motion Note1)	Shoulder (J2)	S S	124 (34 0)		
	Elbow (13)		124 (34.0)		
	Wrist twist (14)		297 (142)		
	Wrist nitch (15)		356 (215)		
	Wrist pitch (33)	-	260		
Maximum raa	wistion (Jo)		010		
Maximum			1 000		
resultant	tion mode		1,000		
velocity	Collaborative		250		
	(Standard opera-	mm/sec			
	tion)		-		
	Collaborative operation mode		50		
	(Low-speed oper-				
Lood	auon) Roting		5		
LUau	Maximum Note3)	kg	55		
Poso ropostal	hility Note4)	mm	10.03		
			0.03		
Ambient tem-	At transport/	°C	20 to 70 (Without froozo)		
Note5) At transport/ storage			-20 to 70 (Without neeze)		
Ambient In use humidity At transport/ storage			45 to 85		
		%RH	95 or less (Without dew drops)		
Mass		kg	32		
Total mass of the robot	the moving parts of	kg	27		
Allowable	Wrist twist (J4)		12.8		
moment load	Wrist pitch (J5)	N•m	12.8		
	Wrist roll (J6)		4.9		

	Item	Unit	Specifications	
Allowable	owable Wrist twist (J4)		0.34	
inertia	Wrist pitch (J5)	kg•m ²	0.34	
	Wrist roll (J6)		0.10	
Wiring	Hand I/O	-	Mechanical interface: 2 inputs/4 outputs Forearm: 6 inputs/0 outputs Base: 0 inputs/4 outputs	
Force sensor cable/ Spare cable		-	5-conductor (24 V/0.7 A) One of the conductors should be used for the frame ground (FG).	
LAN cable		-	Cat-5e supported	
Dlumbing	Primary hoses	-	Φ6 × 2	
Fluthbing	Secondary hoses	-	Φ 4 × 4 From the base of the robot to the elbow.	
Supply press	ure	MPa	0.54	
Protection specification Note6) Note7) - IP54 (ISO Class 5 Note8))		IP54 (ISO Class 5 ^{Note8)})		
Status indicator LED -		-	Six colors: red, yellow, green, blue, white, and light blue. ^{Note9)}	
Painting color - Light gray (Equivalent to Munsell: 0.6B7.6/0.		Light gray (Equivalent to Munsell: 0.6B7.6/0.2, PANTONE: 428C)		
External mag	netic field	mT	Less than 10 ^{Note10)}	

Note1) Values in parentheses indicate the maximum speed when the input voltage is single-phase 100 to 120 VAC. Note2) These values represent the maximum overall speed of all axes combined. The safety functions limit the robot to the speeds shown in the table. For accurate collision force data when the robot is in Collaborative operation mode, measure collision forces under actual operating conditions

For further information on safety functions, refer to the section "Safely-limited speed function (SLS)" in the Function Manual. Note3) Allowable load when the mechanical interface faces downward at an inclination within ±10° to the vertical direction. Please note that when confirming the contact force that occurs in a collision and when confirming the stopping time and stopping distance at our company, the maximum payload is set to the rated payload of 5.0 kg. Note4) The pose repeatability details are given in Page 14, "2.2.1 Pose repeatability

Note5) Sets the robot's operating environmental temperature as parameter OLTMX. The initial value is 30 (°C). Corresponding to the "Optimizing the overload level" described in "Chapter 5 Functions set with parameters" of separate instruction manual/ Detailed explanations of functions and operations for details.)

explanations of functions and operations for details.) Note() The protection specification details are given in Page 17, "2.2.6 Protection specifications". Note7) The protection performance may not be ensured depending on the oil characteristics. Please consult the dealer. Note8) Clean-room specifications are based on values acquired from Mitsubishi Electric's in-house tests. Note9) For further information on the meaning of each color, refer to Page 21, "2.3.2 Status indicator LED".

Note10) Do not place a magnet on the robot surface.

2.1.2 The counter-force applied to the installation surface

The counter-force applied to the installation surface for the strength design of the robot installation surface is shown.



Table 2-2: Value of each counter-force

ltem	Unit	Value
Falls moment: M _L	N•m	325
Torsion moment: M _T	N•m	275
Horizontal translation force: F _H	Ν	700
Vertical translation force: F_V	Ν	1,010

2.2 Definition of specifications

The accuracy of pose repeatability mentioned in catalogs and in the specification manual is defined as follows.

2.2.1 Pose repeatability

For this robot, the pose repeatability is given in accordance with JIS B 8432 (Pose repeatability). Note that the value is based on 100 measurements (although 30 measurements are required according to JIS).

[Caution] The specified "pose repeatability" is not guaranteed to be satisfied under the following conditions.

- [1] Operation pattern factors
 - 1) When an operation that approaches from different directions and orientations are included in relation to the teaching position during repeated operations
 - 2) When the speed at teaching and the speed at execution are different
- [2] Load fluctuation factor
 - 1) When work is present/absent in repeated operations
- [3] Disturbance factor during operation
 - 1) Even if approaching from the same direction and orientation to the teaching position, when the power is turned OFF or a stop operation is performed halfway
- [4] Temperature factors
 - 1) When the operating environment temperature changes
 - 2) When accuracy is required before and after a warm-up operation
- [5] Factors due to differences in accuracy definition
 - 1) When accuracy is required between a position set by a numeric value in the robot's internal coordinate system and a position within the actual space
 - 2) When accuracy is required between a position generated by the pallet function and a position within the actual space

2.2.2 Rated load (mass capacity)

The robot's mass capacity is expressed solely in terms of mass, but even for tools and works of similar mass, eccentric loads will have some restrictions When designing the tooling or when selecting a robot, consider the following issues.

- The tooling should have the value less or equal than the smaller of the allowable inertia and the allowable moment found in Page 12, "2.1.1 Basic specifications". The examples of inertia calculation methods are described in Page 111, "Appendix 1: Inertia calculation method".
- (2) Fig. 2-1 shows the distribution dimensions for the positions of the centers of gravity for loads with relatively small volume. Refer to the figure for designing tooling.
- (3) Even if the load is force, not the mass, design the tooling so that moment does not exceed the allowable moment. Refer to Page 12, "2.1 Standard specifications" for details of allowable moment value.
- [Caution] The mass capacity is greatly influenced by the operating speed of the robot and the motion posture. Even if you are within the allowable range mentioned previously, an overload or generate an overcurrnt alarm could occur. In such cases, it will be necessary to change the time setting for acceleration/deceleration, the operating speed, and the motion posture.
- [Caution] The overhang amount of the load, such as the mass capacity and the allowable moment of inertia defined in this section, are dynamic limit values determined by the capacity of the motor that drives axes or the capacity of the speed reducer. Therefore, it does not guarantee the accuracy on all areas of tooling. Guaranteed accuracy is measured from the center point of the mechanical interface surface. Please note that if the point of operation is kept away from the mechanical interface surface by long and low-rigid tooling, the positioning accuracy may deteriorate or may cause vibration.
- [Caution] Even within the allowable range previously mentioned, an overload alarm may be generated if an ascending operation continues at a micro-low speed. In such a case, it is necessary to increase the ascending speed.



Fig.2-1: Positions of the centers of gravity for loads with relatively small volume

2.2.3 Relationships Among Mass Capacity, Speed, and Acceleration/Deceleration Speed

This robot automatically sets the optimum acceleration and deceleration speeds and maximum speed, according to the load capacity and size that have been set, and operates using these automatically set speeds.

To achieve that, it is necessary to correctly set the actual load data (mass and size of hand and work) to be used. However, vibration, overheating and errors such as excessive margin of error and overload may occur, depending on the robot operation pattern or ambient temperature. In such a case, change the setting value to the +20% range.

If a setting is performed in such a way that it falls below the mounted load, the life span of the mechanism elements used in the robot may be shortened.

(1) Setting hand and workpiece conditions

The parameters "HNDDAT*" and "WRKDAT*" are used to set the mass and size of the hand and workpiece. The numbers 0 to 8 (nine settings) can be set in place of "*".

The default settings of these parameters after power on are "HNDDAT0" and "WRKDAT0".

The hand's mass and center of gravity position for parameter HNDDAT0 can be set with RT VisualBox.

The settings of HNDDAT* have an effect on direct teaching. If unsatisfactory values are set in HNDDAT*, the robot may move unexpectedly during direct teaching. The safe torque range function (STR) may also not function correctly. The force generated upon an impact may also be larger than if the correct values were set, and errors may occur during operation.

<Factory settings>

	Hand mass	Size X	Size Y	Size Z	Center-of-grav- ity position X	Center-of-grav- ity position Y	Center-of-grav- ity position Z
	[kg]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
HNDDAT* =	0.0	0.0	0.0	00.0	0.0	0.0	0.0
WRKDAT* =	0.0	0.0	0.0	0.0	0.0	0.0	0.0

2.2.4 Vibrations at the Tip of the Arm during Low-Speed Operation of the Robot

Vibrations at the tip of the arm may increase substantially during the low-speed operation of the robot, depending on the combination of robot operation, hand mass and hand inertia. This problem occurs when the vibration count specific to the robot arm and the vibration count of the arm driving force are coming close to each other. These vibrations at the tip of the arm can be reduced by taking the following measures:

- 1) Lower the robot's operating speed by approximately 5% from high speed using the Ovrd command.
- 2) Change and move the teaching points of the robot.
- 3) Change the hand mass and hand inertia.

2.2.5 Collision detection

This series of robots has the "Collision detection function", which detects torque differences caused by collisions with the robot arm. This function is set to "disabled" from the factory. It is not a safety function. This function can be enabled/disabled with the COL parameter or ColChk command. Enable this function to protect the robot and peripheral devices.

The abnormalities are detected by the robot's kinetics model, presuming torque necessary for movement at any time. Therefore, the setting parameter (HNDDAT*, WRKDAT*) of the hand and the work piece conditions should be right. And, it may be detected as the collision in movement as speed and motor torque are changed rapidly. (for example, the movement near the place of the origin by linear interpolation, the reversal movement, the cold condition, the operation after long term stoppage)

In such a case, by adjusting the value of the setting parameter (COLLVL, COLLVLJG) of the collision detection level according to actual use environment, the sensitivity of collision detection can be optimized and the damage risk can be reduced further. And, in the operation after the low temperature or long term stoppage, please operate by accustoming at low speed (warm-up), or use the warm-up operation mode.

Refer to the separate instruction manual "Detailed explanations of functions and operations" for details of related parameter.

Table 2-3: Factory-shipments condition

	JOG operation	Automatic
RV-5AS-D	Invalid	Invalid

2.2.6 Protection specifications

(1) Types of protection specifications

The robot arm has protection specifications that comply with the IEC Standards. The protection specifications and applicable fields are shown in Table 2-4.

Tahle	2-4.	Protection	specifications	and an	nlicable fields
Table	Z-4.	FIOLECTION	specifications	anu ap	plicable lielus

Type Protection (IEC Standards value)		Classification	Applicable field	Remarks
RV-5AS-D	IP54	Oil mist specifications	Machine tool (cutting) Machine shop with heavy oil mist Dusty work shop	-

The IP numbers stated in IEC ratings indicate the ingress protection level against solid objects and water. They do not indicate that the product's enclosure protects against oil. A definition of the IEC rating is stated in "Information" below. Certain liquids may cause the robot to rust or corrode.

[Information]

• The IEC IP54

[Degree of protection against solids]

A protective enclosure which prevents dust particles from interfering with sproper operation of the product and compromising safety.

[Degree of protection against water]

A protective enclosure that can withstand the following:

Fresh-water spray in any direction 180° from vertical at a distance of 300 to 500 mm with a water volume of 10±0.5 L/min at 50 to 150 kPa over 1 m2 for a minimum of 10 minutes.

(2) About the use with the bad environment

This robot has protection methods that conform to IEC IP54 standards.

- Usage conditions are shown below.
 - 1) The robot is designed for use in combination with machining device.
 - 2) The inside of the robot arm can be pressurized to ensure that the robot reliably meets IP54 beyond the warranty period. The robot has two φ6 couplings on the side of the base (Refer to Fig. 2-6.). The coupling marked with RETURN (one of the two couplings) can be used for supplying dry air to pressurize the robot instead of connecting solenoid valves. Table 2-6 lists recommended air purging equipment. Table 2-5: Specification of the dry air for pressurization

Item	Dew point	Pressure
Specification	The atmospheric pressure dew point is -20 degree or less.	0.01MPa or less

Table 2-6: Recommended air purge equipment

Item	Part name	Required number	Manufacture
Membrane air dryer	IDG3M-02C-S	1	SMC
Precision regulator	IR1000-01G	1	SMC
Spacer (Connection part)	Y20	1	SMC

- 3) We have confirmed that the robot arm meets the protection specifications by testing it using our specified cutting oil. However, the parts of the controller may be damaged by the cutting oil. When using the controller in oil mist environments, protect the controller from oil mist appropriately. Our warranty does not cover damages or failure resulting from the robot being operated in any environment where other cutting oils than those listed in the table are used (except cutting oils with respect to which the robot's compatibility with the protection specification is verified through our operability evaluation) or where the robot body may be directly splashed with water, oil or dust in quantities larger than stated in the protection specification.
- 4) Take measures so that the robot will not be exposed to water, oil and/or chips for a long period of time.

Also, entrained water droplets lead to the formation of rust on the robot, but would not usually affect the robot's ability to operate normally.

The warranty is invalid for any faults that occur when the robot is used under the following conditions. Also, if the cover and/or other parts are damaged by interferences caused by the peripheral devices and the robot, the protection specification (seal performance, etc.) may be degraded. Therefore, please pay extra attention when handling the robot.

Refer to Page 107, "6.2 Working environment".

- 1) In surroundings that generate inflammable gases or corrosive gasses.
- 2) Atmosphere of the mist containing polish liquid etc.
- 3) Atmosphere in which the water, the oil, and the dust exceeding protection specification fall on the robot arm directly.

2.3 Names of each part of the robot



Fig.2-2: Names of each part of the robot

2.3.1 Operation buttons

Operation buttons are located on the top of the forearm.



Button	Description
DIRECT TEACHING	Hold for 2+ seconds to turn direct teaching On/Off. Press once to change the direct teaching mode.
TEACH	Press once to teach a position. RT VisualBox is required for it to be possible to teach positions using this button.
HAND	Hold for 2+ seconds to align the hand. Press once to open/close the hand.
RESET	When errors occur: Press once to reset errors. While programs are suspended: Press once to reset the program.
START	When collaborative operation has stopped: Hold for 2+ seconds to execute the program from the start. While collaborative operation is suspended: Hold for 2+ seconds to restart the program from the current command.
ENABLE LOCK	Press once to enable/disable the lock. Taking control of operation rights via this button prevents other devices from operating the robot.

CAUTION Before opening/closing the hand, ensure that doing so will not cause workpieces to fall or fingers to become trapped.

2.3.2 Status indicator LED

The status indicator LED is located on the forearm.



Color	Description			
	On	Flashing		
Red	Low-level error	High level error		
Yellow	Warning (Low-speed operation/Standard opera- tion) ^{Note1)}	Warning (High-speed operation)		
Blue	Stopped (Low-speed operation/Standard operation)	Stopped (High-speed operation)		
Green	Collaborative operation mode (Low-speed operation)	Collaborative operation mode (Standard operation)		
White	-	High-speed operation mode		
Light blue	Servo OFF	Controller restarting (not including times when the software is rebooted)		

Note1) If functional safety is not ensured (such as when the safety extension unit is not connected and no origin position has been set) or the robot servos are turned off, the status indicator LED will flash.

CAUTION Under certain lighting, the colors of the Status indicator LED may become difficult to distinguish. Ensure that this does not result in unintended operation.

The following table shows conditions of dedicated output signals that determine the robot status (shown by the color and behavior of the status indicator LED).

The status of dedicated output signals is checked from the top to the bottom of the table, and when the condition is met, the status of the robot will be determined accordingly.

Refer to this table when installing an extra status indicator light.

For information on the dedicated output signals, refer to the separate "Instruction Manual: Detailed explanations of functions and operations" and "Collaborative Robot: Detailed explanations of functions and operations".

Color	Description			
	On	Flashing		
Red	Low level error: LLVLERR output signal = ON	High level error: HLVLERR output signal = ON		
Yellow	Low-speed operation: SFMODE output signal (default setting: 8) = ON Warning level error: CLVLERR output signal = ON	High-speed operation: SFMODE output signal (default setting: 6) = ON Warning level error: CLVLERR output signal = ON		
	Standard operation: SFMODE output signal (default setting: 7) = ON Warning level error: CLVLERR output signal = ON	Collaborative operation mode (No meaning): SFMODE output signal (default setting: 6, 7, 8) = OFF ^{Note1)} Warning level error: CLVLERR output signal = ON		
Light blue	Robot controller turned ON: RCREADY output signal = ON Servo OFF: SRVON output signal (default setting: 1) = OFF	Robot controller not turned ON: RCREADY output signal = OFF		

Color	Description			
00101	On	Flashing		
White	-	High-speed operation: SFMODE output signal (default setting: 6) = ON During operation: START output signal (default set- ting: 0) = ON		
Green	Low-speed operation: SFMODE output signal (default setting: 8) = ON During operation: START output signal (default set- ting: 0) = ON	Standard operation: SFMODE output signal (default setting: 7) = ON During operation: START output signal (default set- ting: 0) = ON		
	Low-speed operation: SFMODE output signal (default setting: 8) = ON Direct teaching ON: DTON output signal = ON	Standard operation: SFMODE output signal (default setting: 7) = ON Direct teaching ON: DTON output signal = ON		
Blue	Low-speed operation: SFMODE output signal (default setting: 8) = ON During standby or stop: START output signal (default setting: 0) = OFF Direct teaching OFF: DTON output signal = OFF	High-speed operation: SFMODE output signal (default setting: 6) = ON During standby or stop: START output signal (default setting: 0) = OFF Direct teaching OFF: DTON output signal = OFF		
	Standard operation: SFMODE output signal (default setting: 7) = ON During standby or stop: START output signal (default setting: 0) = OFF Direct teaching OFF: DTON output signal = OFF			

Note1) Collaborative operation mode (No meaning) if functional safety is not ensured (such as when the safety extension unit is not connected and no origin position has been set) or the robot servos are turned off.

2.4 Outside dimension • Operating range diagram



*1) The depth in which the screw is tightened is 7.5 to 8mm.

*2) Dimensions including the minimum bending radius of the machine cable.

Fig.2-3: Outside dimensions

Note) Don't install the robot arm in the position where direct rays or the heat of lighting hits. The skin temperature of the robot arm may rise, and the error may occur.

Marking and rating plate



Fig.2-4: Locations of the marking and rating plate

Table 2-7: Details of the marking and rating p	olate
--	-------

No.	Description	Details
1)	Rating plate	Robot model Load capacity INDUSTRIAL ROBOT CONTROLLER CR800-05VD Arm reach NODEL RV-5AS-D INDUSTRIAL ROBOT Mass (kg/lb) Serial No. Date of manufacture Date of Motor power MITSUBISHI ELECTRIC CORPORATION R00030001R Material Activity MITSUBISHI ELECTRIC CORPORATION Serial No.
2)	Protective earth symbol	
3)	Maximum supply pressure	AIR IN MAX. 0.54 MPa

The following figure shows a robot at the position of: $J1=0^{\circ}$, $J2=0^{\circ}$, $J3=90^{\circ}$, $J4=0^{\circ}$, $J5=0^{\circ}$, and $J6=0^{\circ}$



- If the angle of J1 is $+42^{\circ} \le J1$ or $J1 \le -144^{\circ}$, then J2 is limited to $J2 \le +96^{\circ}$.
- If the angle of J2 is $J2 \le -95^\circ$, then J3 is limited to $J3 \le +146^\circ$.
- If the angle of J2 is $J2 \le +30^\circ$, then J3 is limited to $-146^\circ \le J3$.
- *2) P point prohibited area:
 P point cannot enter the area shown in the diagram. However, parameter "MELTEXS " can be used to disable the P point prohibited area. The prohibited area is enabled from the factory.

*3) Flange downward singular point line Indicates the path of P point with the wrist facing downward and axes J4 and J6 lined up with each other (the forearm facing vertically downward).

Fig.2-5: Operating range diagram

2.4.1 Outside dimensions of machine cables



2.5 Tooling

2.5.1 Wiring and piping for hand

Shows the wiring and piping configuration for a standard-equipped hand.



View A: Front view of the mechanical interface

*1)The coupling marked with RETURN can be used for supplying dry air to pressurize the robot instead of connecting solenoid valves. Recommended air purging equipment is listed in Table 2-6. Fig.2-6: Wiring and piping for hand

No	Name	Qty.	Robot side (Robot arm side)	Counter side (customer- prepared)	Manufacturer	Remarks
			Connectors, couplings	Connectors, couplings		
(1)	Plug	4	PF-M3	KQ2S04-M3G	SMC	Remove the plugs (PF- M3) and install KQ2S04- M3G couplings.
(2)	Coupling	2	UKBL6	-	Koganei Corp.	-
(3)	Connector (FS)	1	HR30-8P-12PC(71)	HR30-8R-12SC(31)	Hirose Electric Co., Ltd.	Cap installed on robot (HR30-8P-C(31))
(4)	Connector (HND)	1	M12 connector / 8P / A Code / Female	M12 connector / 8P / A Code / Male	Tyco Electronics Japan G.K. (TE connectivity)	Cap installed on robot (2823064)
(5)	Connector (LAN)	1	M12 connector / 8P / X Code / Male	M12 connector / 8P / X Code / Female	Tyco Electronics Japan G.K. (TE connectivity)	Cap installed on robot (T4104000000000)
(6)	Connector	1	M12 connector / 8P / A Code / Female	M12 connector / 8P / A Code / Male	Tyco Electronics Japan G.K. (TE connectivity)	Cap installed on robot (2823064)
(7)	Connector (LAN)	1	M12 connector / 8P / X Code / Female	M12 connector / 8P / X Code / Male	Tyco Electronics Japan G.K. (TE connectivity)	Cap installed on robot (2823064)
(8)	Connector (FS)	1	HR30-8R-12SC(31)	HR30-8P-12PC(71)	Hirose Electric Co., Ltd.	Cap installed on robot (HR30-7R-C(31))

Table 2-8: Connector and pneumatic coupling
2.5.2 Internal wiring and piping

(1) Internal pneumatic plumbing

1) Primary plumbing consists of two $\phi 6$ air hoses that run internally from the air inlet port at the base of the robot to the interior of the base.

The ends of the air hoses connect internally to two ϕ 6 couplings on the side of the robot base. The ends of the ϕ 6 air hoses are located inside the robot base.

- 2) Secondary plumbing consists of four φ 4 air hoses that run internally from the base of the robot to the top of the elbow. The ends of the air hoses at the AIR IN ports are φ 4 in diameter. The air hoses exit out of M3-size holes at the top of the elbow.
- 3) A solenoid valve set with a maximum of two valves can be installed in the base of the robot. For further information on the solenoid valve set, refer to Page 35, "(2) Solenoid valve set".
- (2) Internal wiring of the hand I/O cables
 - 1) There are two hand inputs and four hand outputs wired to the mechanical interface. The electric hand connector exits the robot through the flange.
 - 2) There are four hand outputs wired in the inside of the robot base. There is a connector for the solenoid valve set connected to the end of the cable. The name of the connector is "GR".
 - 3) There are six hand inputs on the underside of the forearm. There are connectors connected to the ends of these cables.

(3) Ethernet cable and force sensor wiring

A category 5e Ethernet cable and a force sensor cable (5-conductor with one of conductors used for the frame ground) run internally up to the mechanical interface. There are connectors connected to the ends of these cables.

If connecting a PoE device, use the device with PoE class 2 (6.49W max.) or less. The cables can also be used as spare cables. To use the cables as spare cables, ensure that the following allowable values are not exceeded.

Allowable current: 0.7A Allowable voltage: 24V

2.5.3 Wiring and piping system diagram for hand

The numbers 1 to 8 in this diagram correspond with the numbers in Table 2-8.



Fig.2-7: Wiring and piping system diagram for hand

2.5.4 Electrical specifications of hand input/output

Item		Specifications	Internal circuit
Туре		DC input	<sink type=""></sink>
No. of input points		8	+ <u>+24</u> ∨
Insulation method		Photo-coupler insulation	function
Rated input voltage		24VDC	
Rated input current		Approx. 7mA/point]~∽⊈ []820
Working voltage range		10.2VDC to 26.4VDC (ripple rate within 5%)	HCn*
ON voltage/ON current		8VDC or more/2mA or more	
OFF voltage/OFF curre	nt	4VDC or less/1mA or less	↓
Input resistance		Approx. 3.3kΩ	<source type=""/>
Response time OF	F-ON	10ms or less (24VDC)	
O	I-OFF	10ms or less (24VDC)	function ↓↓↓ └─────+24∨
Protection function		With an overcurrent protection function (1.0A, total current consumption of the input and output circuits)	
			* Hand input: HCn=HC1 to HC8 Mechanical interface: HC1 and HC2

Table 2-9: Electrical specifications of input circuit

Table 2-10: Electrical specifications of output circuit

Item Specifications Internal		Internal circuit	
Туре		Transistor output	<sink type=""></sink>
No. of output poin	ts	8	+24V
Insulation method		Digital isolator	(Internal power supply)
Rated load voltage	е	24VDC	1 Ÿ i I
Rated load voltage	e range	21.6VDC to 26.4VDC	фсом
Max. current load		0.1A/ 1 point (100%)	GRn*
Current leak with	power OFF	0.1mA or less	
Maximum voltage drop with power ON		0.9VDC(TYP.)	Overcurrent protection
Response time	OFF-ON	2ms or less (hardware response time)	
	ON-OFF	2ms or less (resistance load) (hardware response time)	RG <source type=""/>
Protection function	ı	Protects the over-current (0.9A)	+24V (Internet a surger to)
			* Hand output: GRn=GR1 to GR8 Mechanical interface: GR1 to GR4 Base: GR5 to GR8

2.5.5 Air supply circuit example for the hand

An example of pneumatic supply circuitry for the hand is shown below.

- 1) Make sure that a surge voltage protection circuit such as a diode is connected to the solenoid coil in parallel.
- 2) When the factory pneumatic pressure drops, as a result of the hand clamp strength weakening, there can be damage to the work. To prevent it, install a pressure switch to the source of the air as shown in Fig. 2-8 and use the circuit described so that the robot stops when pressure drops. Use a hand with a spring-pressure clamp, or a mechanical lock-type hand, that can be used in cases where the pressure switch becomes damaged.
- 3) If the air supply temperature (primary piping) used for the tool etc. is lower than ambient air temperature, the dew condensation may occur on the coupling or the hose surface.



Fig.2-8: Air supply circuit example for the hand

2.5.6 About the Installation of Tooling Wiring and Piping

The customer should supply all wires, hoses, and fixtures for tooling.

Adjust the installation position and the length of wires and hoses to suit the movement of the robot.

After connecting all wires and hoses to the robot, run the robot at low speed and check that the wires and hoses do not interfere with any part of the robot or peripheral devices.

2.6 Options

■What are options?

There are a variety of options for the robot designed to make the setting up process easier for customer needs.

customer installation is required for the options.

(1) Machine cable (replacement)

```
■Order type: • Fixed type: 1F-□□UCBL-41 Note) The numbers in the boxes □□ refer the length.
```

∎Outline



Replace the enclosed 5 m standard machine cables (fixed type) with these cables to reduce or extend the distance between the controller and the robot arm.

Configuration

Table 2-11: Configuration equipment and types

Part name	Type ^{Note1)}	Qty.	Mass (kg) _{Note2)}	Remarks
Machine cable (replacement): Fixed type	1F-□□UCBL-41	1 cable	2.6 (2 m) 9 (10 m)	2 m or 10 m

Note1) $\square\square$ represents the cable length.

Note2) Mass indicates one set.

(2) Solenoid valve set

```
■Order type: One set: 1F-VD01-01(Sink type)/1F-VD01E-01(Source type)
Two sets: 1F-VD02-01(Sink type)/1F-VD02E-01(Source type)
```

∎Outline



The solenoid valve set is an option that is used for controlling toolings when various toolings, such as the hand, are installed at the end of the arm. Also, for easy installation of this electromaagnetic set onto the robot, it comes equipped with a manifold, couplings, connectors, among other things.

Configuration

Table 2-12: Configuration equipment

Part name	Туре	Qty.	Mass (kg) _{Note1)}	Remarks	
Solenoid valve set (1 sets)	1F-VD01-01/ 1F-VD01E-01	Either one pc.	1.0	The solenoid cable is pre-installed. Two M4 × 30 installation screws are	
Solenoid valve set (2 sets)	1F-VD02-01/ 1F-VD02E-01	Either one pc.	1.0	Included. The 1F-VD0□-01 is sink type and the 1F-VD0□E-01 is source type.	

Note1) Mass indicates one set.

■Specifications

Table 2-13: Valve specifications

Item	Specifications
Number of positions	2
Port	5 ^{Note1)}
Valve function	Double solenoid
Operating fluid	Clean air ^{Note2)}
Operating method	Internal pilot method
Effective sectional area (CV value)	0.64mm ² (0.03)
Oiling	Unnecessary
Operating pressure range	0.1 to 0.7MPa
Response time	15 msec or less at 0.5 MPa
Max. operating frequency	10Hz
Ambient temperature	-10°C to 50°C (non-condensing)

Note1) Couplings of unused solenoid valves must be blocked with plugs. If they are not blocked, supplied air will blow out from the couplings, lowering the air pressure of the solenoid valves being used and making them nonfunctional.

Recommended product: KQ2P-04 plug manufactured by SMC Corp.

Note2)

The air to be provided must be clean, i.e., filtered with a mist separator or air filter. Failing to do so may lead to malfunctions.

Table 2-14: Solenoid specifications

Item	Specifications
Method	Built-in fly-wheel diodes with surge protection
Rated coil voltage	24VDC ±10%
Power consumption	0.55W
Surge protection circuit	Diode



Fig.2-9: Outline dimensional drawing

(3) 2-piece force sensor conversion cable set

■Order type: 1F-ASSISTA-ADCBL

∎Outline

>€∏]

This cable set includes a conversion cable for connecting a force sensor to the robot hand and a conversion cable for connecting a force sense interface unit to the base of the robot.

Fig. 2-10 shows the connections of the force sensor set using the cables.



Fig.2-10: Connections of the force sensor set

Configuration

Table 2-15: Conversion cables

Part name	Туре	Qty.	Mass (g) _{Note1)}	Remarks
2-piece force sensor conversion cable set	1F-ASSISTA-ADCBL	1 set	15	This cable set includes two conver- sion cables. The hand cable is 275 mm in length. The base cable is 200 mm in length.

Note1) The mass of one conversion cable

(4) Vision sensor mounting bracket

■Order type: 1F-ASSISTA-2DVSFLG

■Outline



Bracket required to connect a 2D vision sensor to the hand. Fig. 2-11 shows the mounting of a vision sensor using the bracket. This product can only be attached to electric hand brackets (manufactured by partner manufacturers). The robot flange does not have mounting screw holes.



Fig.2-11: Mounting of the vision sensor

CAUTION Align the key of the vision sensor cable connector with the keyway of the receptacle on the robot before connecting the cable.



Receptacle of the robot



Cable connector

Configuration

Table 2-16: Configuration equipment and types

-					
	Part name	Туре	Qty.	Mass (g)	Remarks
Vi	sion sensor mounting bracket	1F-ASSISTA-2DVSFLG	1 set	62	-
	Vision sensor mounting bracket	-	1 pc.	53	-
	Vision sensor mounting screw	-	4 pcs.	3	Hex socket screws, M3 x 6
	Positioning pin	-	2 pcs.	2	Parallel pins, φ4 x 10
	Screw for mounting brackets	-	2 pcs.	4	Screw with washer, M4 x 12
	Cable tie	-	2 pcs.	-	100 mm long

Outside dimensions



Fig.2-12: Outside dimensions of the vision sensor mounting bracket

2.7 About Overhaul

Robots which have been in operation for an extended period of time can suffer from wear and other forms of deterioration. In regard to such robots, we define overhaul as an operation to replace parts running out of specified service life or other parts which have been damaged, so that the robots may be put back in shape for continued use. As a rule of thumb, it is recommended that overhaul be carried out before the total amount of servo-on time reaches the specified time (36,000 hours for the robot arm and 36,000 hours for the controller). However, the degree of the equipment's wear and deterioration presumably varies depending on their operating conditions. Especially for operation with high load and frequency, the maintenance cycle may be shorter. For details on the part selection for replacement and the timing of overhaul, contact your dealer.



Fig.2-13: Periodic inspection/overhaul periods

2.8 Maintenance parts

As with any other machine, prolonged use of industrial robots causes their parts to wear and degrade, ultimately causing failure. Periodic maintenance and inspection is required to prevent failure and keep the robot running smoothly over long periods of time. For further information on maintenance and inspection, refer to the section "Maintenance and Inspection" in the Robot Arm Setup and Maintenance Instruction Manual.

3 Controller

3.1 Standard specifications

3.1.1 Basic specifications

(1) CR800-05VD controller

Table 3-1: CR800-05VD controller specifications of controller

Item		Unit	Specification	Remarks
Туре		-	CR800-05VD	Note1)
Number of con	trol axis	-	Simultaneously 6	-
Memory	Programmed positions	point	39,000	Number of program blocks when
capacity	No. of steps	step	78,000	using RT VisualBox: 2000 (vision
	Number of program	-	512	used) Number of programs: 505 (vision sensor not used), less than 500 (vision sensor used) ^{Note2)}
Robot languag	e	-	MELFA-BASIC VI	-
Teaching meth	od	-	Pose teaching method, MDI method ^{Note3)}	-
External input	Input/output	point	0/0	Max. 64/64 by option
and output	Dedicated input/output	-	Assigned with general-purpose input/output	The signal number of "STOP" input signals is fixing.
	Emergency stop input Note4)	point	1 (duplicated)	Note5)
	Emergency stop output	point	1 (duplicated)	
	Mode selector switch input ^{Note6)}	point	1 (duplicated)	
	Mode output	point	1 (duplicated)	
	Robot error output	point	1 (duplicated)	
	Door switch input	point	1 (duplicated)	
	Ecoder input	Channel	2	-
Safety I/O		point	8 (duplicated) / 4 (duplicated)	Safety extension unit
Interface	Force sensor interface	Channel	1	-
	Remote input/output	Channel	1	For connection to the Safety exten- sion unit.
	USB	port	1	Ver. 2.0 HighSpeed device functions only. USB mini-B
Ethernet		port	1	For customer: 1000BASE-T/ 100BASE-TX/10BASE-T
		pon	1	Dedicated T/B port: 100BASE-TX/ 10BASE-T
	Option slot	slot	2	For option interface
	SD memory card slot	slot	1	For extended memory
_	RS-422	port	1	Dedicated T/B port
Power source	Input voltage range ^{Note7)}	V	Single phase AC 100 to 120 Single phase AC 200 to 230	The rate of power-supply voltage fluctuation is within 10%.
	Power capacity	kVA	1.0	Does not include rush current. Note8)
	Power supply frequency	Hz	50/60	-
Outline dimensions Note9)		mm	430(W) x 425(D) x 99.5(H)	Excluding protrusions
Mass		kg	Approx. 12.5	-
Construction		-	Self-contained floor type, Opened type. Installation vertically or horizontally	IP20 Note10)
Ambient	In use	°C	0 to 40	Without freeze
temperature	At transport/storage		-15 to +70	
Ambient	In use	%RH	45 to 85	Without dew drops
numiaity	At transport/storage		90 or less	

Item	Unit	Specification	Remarks
Overvoltage category Note11)	-	II or less	-
Pollution level Note12)	-	2 or less	-
Altitude	m	1000 or less	-
Grounding	Ω	100 or less	100Ωor less (class D grounding) ^{Note13)}
Paint color	-	Dark gray	Equivalent to Munsell: 3.5PB3.2/0.8, PANTONE: 432C

Note1) Refer to the CR800-D controller Instruction Manual if the CR800-05VD controller is not mentioned in other Instruction Manuals related to this product. For further information refer to Page 96, "5.1 Details of each instruction manual".

Note2) The maximum number of usable programs differs depending on the number of types of workpieces that are registered. Note3) Pose teaching method: The method to register the current position of the robot arm.

MDI method: The method to register by inputting the numerical value Immediate.

Note4) Only the STO function can meet the requirements of SIL 3, Category 4, PL e. At factory settings, the STO function meets the requirements of SIL 2, Category 3, PL d.

To use this product at a performance level of SIL 3, Category 4, PL e, refer to Page 113, "Appendix 3: Safety diagnosis function (test pulse diagnosis)" and set the parameters accordingly.

Note5) For details on the functions using external input/output signals, always refer to Page 112, "Appendix 2: Classification of external I/O functions".

Note6) Provide a mode selector switch to change the mode (MANUAL/AUTOMATIC) of the controller. Select the switch that meets the following specifications.

• The switch can be locked in each position of the selected mode.

• The selected switch position can be clearly distinguished from each other.

Only one mode can be selected at a time.

(Recommended switch model: HA1K-2C2A-2 manufactured by IDEC. The key switch can be locked in each position by removing its key.) The mode can be changed by other means than the selector switch.

For example, the user can use a mode change program. In the program, provide a means to lock the selected mode with a password.

- Note7) This product has undergone EMC testing for products intended for use in industrial environments (tested to standards IEC 61000-6-2 and IEC 61000-6-4). This product is not intended to be connected to residential, commercial, or light-industrial power supplies.
- Note8) The power capacity is the recommended value. The power capacity does not include the rush current when the power is turned ON. The power capacity is a guideline and the actual operation is affected by the input power voltage. Use the short circuit breaker which operates by the current leakage under the commercial frequency domain (50-60Hz). If sensitive to the high frequency ingredient, it will become the cause in which below the maximum leak current value carries out the trip.

Input voltage	Item		Current [A]	Apparent power [kVA]	Voltage at measurement [V]
Single-phase 100	At control power ON		0.52	0.06	104.3
V AC	At servo ON		0.52	0.06	104.3
	In automatic opera- tion	Effective value	3.25	0.36	108.0
		Peak	9.00	1.06	108.6
Single-phase 200	At control power ON	J	0.40	0.08	218.5
VAC	At servo ON		0.84	0.18	218.9
	In automatic opera-	Effective value	2.77	0.62	218.8
	tion	Peak	7.00	1.50	219.5

The following table shows current values for reference.

Note9) Refer to Page 51, "3.3.1 Outside dimensions" for details.

Note10) This controller is standard specification. (Refer to Page 46, "3.1.2 Protection specifications and operating supply".)

Note11) This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises.

Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300V is 2500V.

Note12) This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.

Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.

Note13) The robot must be grounded by the customer.

(2) CR800-05VD controller safety functions and safety performance

Item			Description	Remarks		
Safety function	STO function		The function electrically shuts off the driving energy to the motor of the robot arm.	IEC 60204-1:2016 Corresponds to stop category 0		
Note I)	SS1 function		The function to control and decelerate the motor speeds of the robot. After stopping, the robot transitions to the STO state.	IEC 60204-1:2016 Corresponds to stop category 1		
	SS2 function		The function to control and decelerate the motor speeds of the robot. After stopping, the robot transitions to the SOS state.	IEC 60204-1:2016 Corresponds to stop category 2		
	SOS function		Without shutting off the driving energy to the motors, this function monitors the robot so that it stays at rest.	When SOS, SLS, SLP, and STR detect error, activate SS1. EN 61800-5-2:2017 compliant		
	SLS function		This is a function to monitor each part of the robot arm so that their speeds do not exceed monitoring speeds.			
	SLP function		The function monitors specified monitoring positions so that they do not go across position monitoring planes.			
	STR function		This function ensures that the torque limits of each motor in the robot are not exceeded.			
Safety per- formance	er- Standard		tandard EN ISO 10218-1:2011 ISO/TS 15066:2016 EN ISO 13849-1:2015 EN 61800-5-1:2007/A1:2017 EN 61800-5-2:2017 EN 61000-6-7:2015 EN 61326-3-1:2017 IEC 61508-1:2010 IEC 61508-2:2010 IEC 61508-3:2010			
Safety extension	Power supply specifications	Voltage	24 V DC±5% Ripple 0.2 V (P-P)	Supplied by customer		
unit		Maximum consumption current	300 mA	-		
	Structure (IP rating)		IP20	-		
	Weight		0.8kg	-		
	Environment	Operating temperature range	0 to 40°C	It must be kept away from heat appli- ances and other heat sources.		
		Relative humidity	45 to 75%	Non-condensing		
		Vibration	During transportation 3.5 G During operation: 0.5 G or less	-		
		Atmosphere	No corrosive gas / flammable gas / oil mist/dust	-		
		Installation environment	Indoors Place where no intense electromagnetic energy is generated No roughness or tilt on the installation surface	No direct sunlight. Do not install the unit on very rough surfaces.		
	Input signal		8 routes (duplicated signal)	-		
	Output signal		4 routes (duplicated signal)	-		

Note1) The safety functions conform to EN 61800-5-2:2017.

Function	Item	Description	Remarks	
STO	Safety Level	SIL 3 (IEC 61508:2010)	Performance when:	
		Category 4, PL e (EN ISO 13849-1:2015)	External emergency stop input when the test pulse diagnosis set-	
	Mean time to dangerous failure (MTTFd)	MTTFd ≥ 100 years	tings are enabled ^{Note1)}	
	Diagnostic coverage (DC)	DC = 99%		
	Probability of dangerous failure per hour (PFH) ^{Note2)}	PFH = 1.40 × 10 ⁻⁸ [1/hour]		
	Safety Level	SIL 2 (IEC 61508:2010)	Performance when:	
		Category 3, PL d (EN ISO 13849-1:2015)	 External emergency stop input when the test pulse diagnosis set- 	
	Mean time to dangerous failure (MTTFd)	MTTFd ≥ 100 years	tings are disabled (factory settings) • Door switch input • Mode selector switch input	
	Diagnostic coverage (DC)	DC = 90%	Safety extension unit's safety input	
	Probability of dangerous failure per hour (PFH) ^{Note2)}	PFH = 1.57 × 10 ⁻⁸ [1/hour]	Note3)	
SS1, SS2,	Safety Level	SIL 2 (IEC 61508:2010)	Note3)	
SUS, SLS, SLP		Category 3, PL d (EN ISO 13849-1:2015)		
	Mean time to dangerous failure (MTTFd)	MTTFd = 24 years		
	Diagnostic coverage (DC)	DC = 90%		
	Probability of dangerous failure per hour (PFH) ^{Note2)}	PFH = 3.42 × 10 ⁻⁷ [1/hour]		
STR	Safety Level	SIL 2 (IEC 61508:2010)	Note3)	
		Category 3, PL d (EN ISO 13849-1:2015)		
	Mean time to dangerous failure (MTTFd)	MTTFd = 24 years		
	Diagnostic coverage (DC)	DC = 90%		
	Probability of dangerous failure per hour (PFH) ^{Note2)}	PFH = 3.62 × 10 ⁻⁷ [1/hour]		

The following table shows the safety performance of the CR800-05VD controller.

Note1) To use this product at a performance level of SIL 3, Category 4, PL e, refer to Page 113, "Appendix 3: Safety diagnosis function (test pulse diagnosis)" and set the parameters accordingly. Note2) The robot controller PFH or PFHd (Probability of Dangerous Failure per Hour). The PFH of the emergency stop

switch and enable switch on the teaching pendant is shown in the table below.

Teaching pendant	Switch	B10d [cycle]	n _{op} [cycle/year]	MTTFd [year]	DC [%]	PFH [1/hour]
R32TB	Emergency stop switch	1×10 ⁶	6000	1667	≥ 99	2.47×10 ⁻⁸
	Enable switch	1×10 ⁶	6000	1667	≥ 99	2.47×10 ⁻⁸
R56TB	Emergency stop switch	1×10 ⁶	6000	1667	≥ 99	2.47×10 ⁻⁸
	Enable switch	7×10 ⁶	6000	11667	60 ≤ DC < 90	1.57×10 ⁻⁷

Note3) For systems using the I/O signals of the safety extension unit, add the PFH value in the table below. Safety performance of the safety extension unit complies with PL d/Category 3.

MTTFd	DC	PFH
[year]	[%]	[1/hour]
318	90	2.41×10 ⁻⁸

3.1.2 Protection specifications and operating supply

(1) Protection specifications

A protection method complying with the IEC Standard IP20 (Opened type) is adopted for CR800 controller.

The IEC IP symbols refer only to the degree of protection between the solid and the fluids, and don't indicated that any special protection has been constructed for the prevention against oil and water.

[Information]

• The IEC IP20

It indicates the protective structure that prevents an iron ball 12 $_{0}^{+0.05}$ mm diameter, which is being pressed with the power of 3.1 kg±10%, from going through the opening in the outer sheath of the supplied equipment.

(2) Operating supply

The controller is supposed to be installed and used in the customer's system. Supply the primary power of the controller from the system. In addition, provide a safety device (ex. earth leakage breaker) that can shut off the power of the controller in the customer's system. When using an earth leakage breaker as a safety device, select a product with the highest sensitivity possible referring to the specifications in the table below.

ltem	Unit	Specification
Rated voltage	V	AC100 to 120, AC200 to 230
Rated sensitivity current	mA	30 or more, but as low as possible
Rated current	А	10 or more, but as low as possible

To ensure that the earth leakage breaker used with the CR800 controller meets the requirements of the shut-off time defined in EN 60364-4-41, set the fault loop impedance of the customer wiring section to the value shown below.

For TN system Note 1)

Item		Unit	Specification	Remarks
CB, CP, NFB Model name		-	NV30FAU-2P-10A-AC100-240V-30mA	-
	Rated current	Α	10	-
Input voltage range		V	100 to 120 VAC 200 to 230 VAC	-
Maximum permissible fault loop impedance		mΩ	100 to 120 VAC: 194.0 200 to 230 VAC: 284.9	Note 2)

For TT system Note 1)

Item		Unit	Specification	Remarks
Earth leakage	Model name	-	NV30FAU-2P-10A-AC100-240V-30mA	-
Dreaker Note 3) Note 4)	Rated current	Α	A 10	
	Rated sensed current (I∆n)	mA	30	-
Input voltage range		V	100 to 120 VAC 200 to 230 VAC	-
Maximum permissible fault loop impedance		Ω	100 to 120 VAC: 599 200 to 230 VAC: 1199	Note 2)

Note 1) It indicates the grounding system type.

- Note 2) Check that the fault loop impedance of the customer wiring section is equal to or less than the value shown in the table. This value does not include the fault loop impedance of the controller.
- Note 3) For TT system, the rated sensed current and maximum permissible fault loop impedance may be specified by the authorities. Follow the instructions of the authorities.
- Note 4) For TT system, use a Type B earth leakage breaker as required.

Refer to the section Page 107, "6.2 Working environment" for details on the working environment.

3.2 Names of each part

3.2.1 CR800-05VD controller

Controller front





Fig.3-1: Names of controller parts

> Refer to a separate manual "INSTRUCTION MANUAL/Controller Setup and Maintenance" for how to connect a power cable.

	· ·				
	Number of phase	ACIN cable			
	Single phase				
		L (Black) N (White) FG (Green)			
		Terminal: M5, cable length: 3m			
<2> PE terminal	Terminals for	grounding (M4 screw x 2).			
<3> CN1 cable	Machine cab	le connector.			
<4> <5> CNUSR connector	Robot I/O cal	ble connectors.			
	<4>: CNUSR11, <5>: CNUSR12 Refer to a separate manual "INSTRUCTION MANUAL/Controller				
	Setup and Maintenance" for the connection method and thefurther description of pin assignment.				
<6> TB connector	Dedicated co	nnector for connecting T/B.			

	5
LED	Details
POWER	Indicates the control power status. On: Control power ON Off: Control power OFF
AUTO	Indicates the controller mode. On: AUTOMATIC mode Off: MANUAL mode
ERROR	Indicates the error status. On: Error occurred. Rapid flashing: High-level error occurred. Off: Normal operation
READY	Indicates the operation status. On: ON (ready) Slow flashing: During operation Rapid flashing: Operation suspended.

<8> HAND FUSE	Fuse for the hand.
<9> EXT1	Connector for releasing the brake in an emergency.
	For details on the method of releasing the brake in an emergency, refer
	to the separate manual, "INSTRUCTION MANUAL/Robot Arm Setup
	and Maintenance".
	Port used to connect the safety extension unit
<10> RIO	Parallel I/O extension connector.
<11> OPT1	Unused.
<12> OPT2	Unused.
<13> AXIS	Port used to connect the force sensor
<14> PC	Connector for communication with a personal computer.
<15> EXT2	Connector for function extension.
<16> LAN	Connector for Ethernet communication.
<17> SD CARD	SD memory card slot.
<18> Filter cover	Dustproof dust filter cover. An air filter is provided inside the filter cover.
<19> <20>Option slot	Option card slots (must be covered when not used).
·	<19> SLOT1, <20> SLOT2
<21> FG terminal	Option card cable terminals for grounding (M4 screw x 2).

▲ Caution

Use the network equipments (personal computer, USB hub, LAN hub, etc) confirmed by manufacturer. The thing unsuitable for the FA environment (related with conformity, temperature or noise) exists in the equipments connected to USB. When using network equipment, measures against the noise, such as measures against EMI and the addition of the ferrite core, may be necessary. Please fully confirm the operation by customer. Guarantee and maintenance of the equipment on the market (usual office automation equipment) cannot be performed.

3.2.2 Safety extension unit



Fig.3-2: Names of safety extension unit parts

<1> DCIN connector	Socket used to connect the supplied DCIN cable (input voltage: 24 VDC)
<2> DCOUT connector	Unused.
<3> RIO1connector	Port used to connect the robot controller.
<4> RIO2 connector	Unused. Connect the supplied terminator cap (2F-SFTM).
<5> SDI1 connector	Safety DI input port
<6> SDI2 connector	Safety DI input port
<7> SDO1 connector	Safety relay output port
<8> SDO2 connector	Safety relay output port
<9> CJ31 connector	Unused.
<10> CJ32 RIO	Unused.
<11> ALM LED	This LED indicates remote I/O communication status. On: Error / Off: Normal operation
<12> DCIN LED	This LED indicates the status of the 24 VDC power supply. On: Normal operation / Off: Error
<13> FUSE LED	This LED indicates the status of the fuse. On: Normal operation / Off: Fuse blown
<14> H1, H2, H3, H4 LED	This LED indicates the status of the relay. On: Normal operation / Off: Relay welded shut
<15> FG terminal	This is the terminal used to ground the safety extension unit. $(M4 \times 1)$
<16> STATION NO. switch	Station number switch. Set to Station number setting 2 from the factory. Do not change.

- 3.3 Outside dimensions/Installation dimensions
- 3.3.1 Outside dimensions
- (1) CR800-05VD controller



Fig.3-3: Outside dimensions of controller

■Warning labels and rating plate



Fig.3-4: Location of the warning labels and rating plate

Table 3-2:	Details o	f the	warning	labels	and	rating	plate
	Dotalio 0		"" an ing	abolo	ana	raung	piaco

No.	Description	Details			
1)	External emergency stop switch, door switch, and selector switch	The input terminal of Emergency stop switch [1], Door switch [2], and Selector switch [3] is open (unconnected). Ensure appropriate wiring for use. When the input terminal of [1] and [2] is open, an error occurs.			
2)	Transportation of the robot controller	Hold the bottom of the controller on both sides for transportation. Failure to do so could result in dropping.			
3)	Precautions when removing the top panel	Wait at least 3 minutes after turning the power off before removing the top panel. Do not turn the power on until the top panel has been installed. Failure to do so could result in electric shock.			
4)	Precautions during automatic opera- tion	Do not turn the power off during the automatic running. Save the robot program for backup.			
5)	Connection of an earth leakage breaker	Use an Earth Leakage Breaker for connecting the power supply to prevent electric shock.			
6)	Optional cover	The cover of SLOT1 and SLOT2 must be installed when the option card is not used.			
7)	Removal of the teaching pendant	To remove the T/B from the controller during automatic operation, pull out the T/B connector within five seconds while the 3-position enable switch of the T/B is being pulled up lightly (in the position 2). While the switch is being pulled up all the way (in the position 3), the robot stops.			

No.	Description	Details			
8)	IP rating of the robot controller	IP20 Protection rating of the controller corresponds to IP20.			
9)	External emergency stop switch, door switch, and selector switch	The input terminal of Emergency stop switch [1], Door switch [2], and Selector switch [3] is open (unconnected). Ensure appropriate wiring for use. When the input terminal of [1] and [2] is open, an error occurs.			
10)	CNUSR11 input terminal connecter array drawing	< CNUSR11 入力端子コネクタ配列図> < CNUSR11 input terminal connecter array drawing> 5 21 6 22 7 23 12 28 13 29 14 30 CNUSR11			
11)	Rating plate	Robot controller model Input voltage range and power supply frequency Maximum load current Short-circuit current rating Mass (kg/lb) Drawing No. Maximum motor rating Serial No. Date of manufacture			
12)	Input	INPUT 100VAC-200VAC CLASS AC IN			
13)	Electric shock risk sign	4			
14)	Protective earth symbol				
15)	Precautions for vertical installation	In the case of vertical placement, keep this side down.			

(2) Safety extension unit



Fig.3-5: Safety extension unit external dimensions

Fix the safety extension unit in place using either of the following:

a) The holes indicated by "*1" in the diagram above

b) A DIN rail located in an area that is free of vibration

3.3.2 Installation dimensions

The following figures show the dimensions required installing the controller. For the placement of the controller on its side (the horizontal installation), two stacks is permitted.



Vertical installation



Fig.3-6: Installation dimensions

CAUTION

When installing the controller vertically, ensure that the air intake is at the bottom as illustrated in Fig. 3-6.

Fixing installation section sure for prevention from the fall, when using the controller placing vertically. The reference figure of the metal plate for fixing is shown in Fig. 3-7.

You should install the metal plate for fixation to the controller with M4 x 8 or the shorter screw. The screw projection length inside the controller (side board thickness is 1.2 mm) surely makes 6.8 mm or less.

When storing the controller in a cabinet, etc., take special care to the heat radiating properties and ventilation properties so that the ambient temperature remains within the specification values. And, don't install the controller in the position where direct rays or the heat of lighting hits. The skin temperature of the controller may rise, and the error may occur.



Fig.3-7: Reference figure of the fixing metal plate for vertical installation

3.4 External input/output

3.4.1 Types

(1) Dedicated input/output	. These inputs and outputs carry out the robot remote operation and
	These are imputed and subsuite that the subsurger are more than the
(2) General-purpose input/output	. These are inputs and outputs that the customer can program for
	peripheral device control.
(3) Hand input/output	. These are inputs and outputs related to the hand that the customer
	can program.
(4) Emergency stop/Door switch input.	. Information on wiring the emergency stop and wiring used to ensure safety can be found on Page 61, "3.6 Emergency stop input and output etc." and Page 99, "6.1.3 Examples of safety measures".

<For Reference>

Linking our GOT2000 Series display equipment to the robot controller over the Ethernet permits you to control robot controller's input/output from a GOT (graphic operation terminal).

3.5 Dedicated input/output

Show the main function of dedicated input/output in the Table 3-3. Refer to attached instruction manual "Detailed explanations of functions and operations" in the product for the other functions. Each parameter indicated with the parameter name is used by designated the signal No., assigned in the order of input signal No. and output signal No.

Parameter	Input		Note1)	te1) Output	
name	Name	Function	Level	Name	Function
TEACHMD	None			Teaching mode output signal	Outputs that the teaching mode is entered.
ATTOPMD	None			Automatic mode output signal	Outputs that the automatic mode is entered.
ATEXTMD		None		Remote mode output signal	Outputs that the remote mode is entered.
RCREADY		None		Controller power ON complete signal	Outputs that external input signals can be received.
AUTOENA	Automatic operation enabled input signal	Allows automatic operation.	L	Automatic operation enabled output signal	Outputs the automatic operation enabled state.
START	Start input signal	Starts all slots.	Е	Operating output signal	Outputs that the slot is operating.
STOP	Stop input signal	Stops all slots. The input signal No. is fixed to 0. Note) Use the emergency stop input for stop inputs related to safety.	L	Wait output signal	Outputs that the slot is temporarily stopped.
STOP2	Stop input signal	The program during operation is stopped. Unlike the STOP parameter, change of the signal number is possible. Notes) Specification is the same as the STOP parameter.	L	Wait output signal	Outputs that the slot is temporarily stopped. Notes) Specification is the same as the STOP parameter.
SLOTINIT	Program reset input signal	Resets the wait state.	E	Program selection enabled output signal	Outputs that the slot is in the program selection enabled state.
ERRRESET	Error reset input signal	Resets the error state.	E	Error occurring output signal	Outputs that an error has occurred.
CYCLE	Cycle stop input signal	Carries out cycle stop.	E	In cycle stop operation output signal	Outputs that the cycle stop is operating.
SRVOFF	Servo ON enabled input signal	Turns the servo OFF for all mechanisms.	L	Servo ON enabled output signal	Outputs servo-on disable status. (Echo back)
SRVON	Servo ON input signal	Powers on the robot servos. For multiple mechanisms, it powers on the servos of all the mechanisms.	E	In servo ON output signal	Outputs the servo ON state. For multiple mechanisms, the output is performed when at least one of the mechanisms is in the servo ON state.
IOENA	Operation rights input signal	Requests the operation rights for the external signal control.	L	Operation rights output signal	Outputs the operation rights valid state for the external signal control.
MELOCK	Machine lock input signal	Sets/resets the machine lock state for all mechanisms.	E	In machine lock output signal	Outputs the machine lock state.
SAFEPOS	Evasion point return input signal	Requests the evasion point return operation.	E	In evasion point return output signal	Outputs that the evasion point return is taking place.

Table 3-3: Dedicated input/output list

Parameter	Input Note1)			Output		
name	Name	Function	Level	Name	Function	
OUTRESET	General-purpose output signal reset	Resets the general-purpose output signal.	E	None		
EMGERR		None		Emergency stop output signal	Outputs that an emergency stop has occurred.	
S1START : S32START	Start input	Starts each slot.	E	In operation output	Outputs the operating state for each slot.	
S1STOP : S32STOP	Stop input	Stops each slot.	L	In wait output	Outputs that each slot is temporarily stopped.	
PRGSEL	Program selection input signal	Designates the setting value for the program No. with numeric value input signals.	E		None	
OVRDSEL	Override selection input signal	Designates the setting value for the override with the numeric value input signals.	E	None		
IODATA Note2)	Numeric value input (start No., end No.)	Used to designate the program name, override value., mechanism value.	L	Numeric value output (start No., end No.)	Used to output the program name, override value., mechanism No.	
PRGOUT	Program No. output request	Requests output of the program name.	E	Program No. output signal	Outputs that the program name is being output to the numeric value output signal.	
LINEOUT	Line No. output request	Requests output of the line No.	E	Line No. output signal	Outputs that the line No. is being output to the numeric value output signal.	
OVRDOUT	Override value output request	Requests the override output.	E	Override value output signal	Outputs that the override value is being output to the numeric value output signal.	
ERROUT	Error No. output request	Requests the error No. output.	E	Error No. output signal	Outputs that the error No. is being output to the numeric value output signal.	
JOGENA	Jog valid input signal	Validates jog operation with the external signals	E	Jog valid output signal	Outputs that the jog operation with external signals is valid.	
JOGM	Jog mode input 2-bit	Designates the jog mode.	L	Jog mode output 2- bit	Outputs the current jog mode.	
JOG+	Jog feed + side for 8-axes	Requests the + side jog operation.	L		None	
JOG-	Jog feed - side for 8-axes	Requests the - side jog operation.	L	None		
HNDCNTL1 : HNDCNTL3	None			Mechanism 1 hand output signal status : Mechanism 3 hand output signal status	Mechanism 1: Outputs the status of general-purpose outputs 900 to 907. Mechanism 2: Outputs the status of general-purpose outputs 910 to 917. Mechanism 3: Outputs the status of general-purpose outputs 920 to 927.	
HNDSTS1 : HNDSTS3	None			Mechanism 1 hand input signal status : Mechanism 3 hand input signal status	Mechanism 1: Outputs the status of hand inputs 900 to 907. Mechanism 2: Outputs the status of hand inputs 910 to 917. Mechanism 3: Outputs the status of hand inputs 920 to 927.	

Parameter	Input		Note1)	Output	
name	Name	Function	Level	Name	Function
HNDERR1 : HNDERR3	Mechanism 1 hand error input signal : Mechanism 3 hand error input signal	Requests the hand error occurrence.	L	Mechanism 1 hand error output signal : Mechanism 3 hand error output signal	Outputs that a hand error is occurring.
AIRERR1 : AIRERR3	Pneumatic pressure error 1 input signal : Pneumatic pressure error 3 input signal	Request the pneumatic pressure error occurrence.	L	Pneumatic pressure error 1 output signal. : Pneumatic pressure error 3 output signal.	Outputs that a pneumatic pressure error is occurring.
M1PTEXC : M3PTEXC		None	L	Maintenance parts replacement time warning signal	Outputs that the maintenance parts have reached the replacement time.
USERAREA Note3)	None			User-designated area 32-points	Outputs that the robot is in the user- designated area.

Note1) The level indicates the signal level.

L: Level signal \rightarrow The designated function is validated when the signal is ON, and is invalidated when the signal is OFF.

E: Edge signal → The designated function is validated when the signal changes from the OFF to ON state, and the function maintains the original state even when the signal then turns OFF.

Note2) Four elements are set in the order of input signal start No., end No., output signal start No. and end No.

Note3) Up to eight points can be set successively in order of start output signal No. and end output signal No.

3.6 Emergency stop input and output etc.

Do wiring of the external emergency stop, the special stop input, the door switch, and the mode selector switch from the "special input/output" terminal connector.

Item	Name	Function		
Input	Emergency stop	Applies the emergency stop. Dual line, normal close		
Input	Special stop input	Applies the stop. (Refer to Page 66, "3.6.2 Special stop input (SKIP)")		
Input	Door switch	Servo-off. Dual line, normal close (Page 67, "3.6.3 Door switch function")		
Input	Mode selector switch	Changes the mode (MANUAL/AUTOMATIC) of the controller. Dual line (Page 67, "3.6.4 Mode selector switch function")		
Output	Robot error output	Contactor is opening during error occurrence.		
Output	Emergency stop output	The point of contact opens under occurrence of emergency stop of external input signal, emergency stop of T/B.		
Output	Mode output	MANUAL mode: contactor is opening, AUTOMATIC mode: contactor is closing.		

Table 3-4: Special input/output terminal

*At the time of the power supply OFF, the output point of contact is always open.

[Note] Wire for each input terminal as shown in Fig. 3-11.

The contact capacity of each input/output terminal is DC24V/100mA. Do not connect the equipment except for this range. Noise or other effects that overload contact capacities will lead to failure. An example of noise prevention is shown in Fig. 3-8.

In the customer's system, do not ground the + side of 24V power supply prepared by customer for connect to the controller. (related with emergency stop and parallel input/output) If it connects with the controller under the condition that the + side is grounded, it will lead to failure of controller.





Use noise prevention methods that are specific to the devices being used and the environment they are being used in.

An example of connecting devices such as relays



*1) The actual internal robot controller circuit differs from the internal robot controller circuit in the figure.

Recommended varistor						
Model	Manufacturer	Varistor voltage	Max. permissible circuit voltage			
ERZV10D390	Panasonic	39V	31V			
72210S0250K101	TDK	39V	31V			

Fig.3-8: Protection circuit example

[Note] If a stop signal or servo OFF signal is input simultaneously with a door switch open/emergency stop input, the error, H056n "Servo sys. error (A/D)" may occur. When a door switch open/emergency stop is input, the robot turns off the servo after it stops. It is unnecessary to input a stop signal or servo OFF signal. To input a stop signal or servo OFF signal with a door switch open/emergency stop input, wait for 100ms or more after a door switch open/ emergency stop input.

Pin number assignment of each terminal and the circuit diagram are shown in Fig. 3-11.

3.6.1 Connection of the external emergency stop and mode selector switch

The input terminals for the external emergency stop, door switch, and mode selector switch are arranged as shown in Fig. 3-11. Customers should be sure to prepare the external emergency stop, door switch, and mode selector switch, etc. and use the robot while these are connected. Connection procedures are shown below.

In addition, refer to Page 99, "6.1.3 Examples of safety measures" for the information on the emergency stop connection and cautions.

- [Caution] The emergency stop circuit is duplicated inside the controller. The emergency stop switch uses a double contact-type switch, so please be sure to fix both of the contacts to the connector pins as shown below in order to ensure the wiring is duplicated. An error will continue to occur in the event that only one of the pins is connected.
- 1) Please prepare the emergency stop switch, door switch, and mode selector switch.
- 2) Connect the contacts of each switch to the contacts as shown below:
 - a) External emergency switch
 - CNUSR11 connector "between 7 and 23" and "between 14 and 30".
 - b) Door switch
 - CNUSR11 connector "between 6 and 22" and "between 13 and 29".
 - c) Mode selector switch
 - CNUSR11 connector "between 5 and 21" and "between 12 and 28".
- [Caution] Be sure to use a shield cable for the emergency stop wiring cable and dedicated stop input wiring cable. And when operating in an environment that is easily affected by noise, be sure to install the ferrite core (recommended model name: E04SR301334, manufacturer: Seiwa Electric Mfg. Co., Ltd.). Be sure to place the ferrite core in 300mm or less from the connecting terminal section.



Fig.3-9: Installation position of ferrite cores

For information on the installation method, follow the instructions of the ferrite core being used.



/I\CAUTION Make sure there are no mistakes in the wiring. Connecting differently to the way specified in the manual can result in errors, such as the emergency stop not being released. In order to prevent errors occurring, please be sure to check that all functions (such as the teaching box emergency stop, customer emergency stop, and door switch) are working properly after the wiring setup is completed.

CAUTION You should always connect doubly connection of the emergency stop, the door switch, and the mode selector switch. In connection of only one side, if the relay of customer use should break down, it may not function correctly. The robot output contacts (error output, emergency stop output, mode output) are duplicated output contacts that are wired in series. As with emergency stop switches and door switches, ensure that all connections to customer devices are duplicated to achieve redundancy.



CAUTION Please make sure to wire the multiple emergency stop switches so that they each function independently. Check and make sure that the emergency stop doesn't only function under an AND condition (when multiple emergency stop switches are ON at the same time).



Fig.3-10: Emergency stop cable and mode selector switch connection



CAUTION Place the emergency stop switch in an easily operable position, and be sure to wire it to the emergency stop correctly by referencing Page 99, "6.1.3 Examples of safety measures". This is a necessary measure in order to ensure safe operation so that the robot can be stopped immediately by pressing the emergency stop switch in the event that the robot malfunctions.




CAUTION Fully check the number of the cable insertion hole (connector pin number) for incorrect connection. Incorrect wiring may damage the robot or cause a malfunction.



CAUTION When wiring to the CNUSR11/CNUSR12 connector, pay attention to fraying wires of the core wires. The fraying wires can come into contact with the adjacent terminal, causing a short circuit.

Do not apply solder on core wires. Doing so may cause a contact failure.

3.6.2 Special stop input (SKIP)

The SKIP is the input signal to stop the robot. Please connect the pin 4, 13 of the CNUSR12 connector shown in Fig. 3-13.

Item		Specifications	Internal circuit		
Туре		DC input			
No. of input p	point	1]		
Insulation me	ethod	Photo-coupler insulation]		
Rated input v	voltage	24VDC			
Rated input of	current	Approx. 11mA	$\frac{4}{4}$		
Working voltage range		21.6VDC to 26.4VDC (Ripple rate within 5%)	330 13 22k Input		
ON voltage/ON current		8VDC or more / 2mA or more			
OFF voltage/OFF current		4VDC or less / 1mA or less	- <u>2.2</u> · ·		
Input resistance		Approx. 2.2kΩ			
Response	OFF→ON	1ms or less			
time	ON→OFF	1ms or less]		
Common method		1 point per common]		
External wire connection method		Connector			

Table 3-5:	Special sto	p input	electric s	pecification
10010 0 0.	opoolal olo	p nipat	01000110 0	poontoutorr



Note) In the customer's system, do not ground the + side of 24V power supply prepared by customer for connect to the controller. (related with emergency stop and parallel input/output) If it connects with the controller under the condition that the + side is grounded, it will lead to failure of controller.

Fig.3-13: Connection of the special-stop-input

3.6.3 Door switch function

This function uses the status of door switches to turn robot servos OFF when the door of a machine guard is opened.

Follow the wiring example shown in Page 64 "Fig. 3-11: External emergency stop connection" and Page 99, "6.1.3 Examples of safety measures". Details of this function according to the robot status are shown below (Fig. 3-14).

*During automatic operation When the door is opened, the servo turns OFF and the robot stops. An error occurs. The process of the restoration: Close the door, reset the alarm, turn on the servo, and restart.

*During teachingEven when the door is opened, using a selector switch allows to turn the servo ON with the teaching pendant to operate the robot.



Fig.3-14: Door switch function

3.6.4 Mode selector switch function

The mode selector switch switches the mode of the controller between MANUAL mode and AUTOMATIC mode.

Table 3-6: States of in	put terminal
-------------------------	--------------

Mode of controller	Input terminal
MANUAL (Teaching)	Open
AUTOMATIC (Automatic operation)	Close

(1) Automatic Operation/Jog Operation/Brake Release and Necessary Switch Settings The following is a description of various operations performed on the robot and switch settings that are required.

Table 3-7. Various	operations and	necessary	switch settings
	operations and	neccostary	ownon ooningo

				Related	I switch setting	s Note1) Note2)		
No	Operation ^{Note1)}	Method of operation	T/B enable/ disable	T/B enable switch	Mode selector switch input terminal	Door switch input terminal	Safety input 1	Description
1	Jog operation	T/B	Enable	ON	Open (MANUAL mode)	-	-	If the mode selector switch input is set to Open (MANUAL mode), the state of door switch input does not matter.
		RT VisualBox RT ToolBox3	Disable	-	Close (AUTO- MATIC mode)	Close (Door Close)	-	The door switch input status must be "closed" (door closed).
2	Brake release Note3)	T/B	Enable	ON	Open (MANUAL mode)	-	-	If the mode selector switch input is set to Open (MANUAL mode), the state of door switch input does not matter.
		RT VisualBox	Disable	-	Close (AUTO- MATIC mode)	-	-	If the door switch input is set to Open (door opened), the error H0040 (Door Switch Signal is Input) will occur, but the brakes can be released.
3	Automatic operation	T/B RT VisualBox RT ToolBox3	Disable	-	Close (AUTO- MATIC mode)	Close (Door Close)	-	The door switch input status must be "closed" (door closed).
4		Operation buttons	Disable	-	Close (AUTO- MATIC mode)	Close (Door Close)	Open (collaborative operation)	The door switch input status must be "closed" (door closed). Safety input 1 must be set to "Open" (collaborative operation).
5		T/B	Enable	ON	Open (MANUAL mode)	-	-	If the mode selector switch input is set to Open (MANUAL mode) and automatic operation is performed, the robot will operate at the safe speed (250 mm/s) or less.
6	Direct teaching	Operation buttons RT VisualBox RT ToolBox3	Disable	-	Close (AUTO- MATIC mode)	Close (Door Close)	Open (collaborative operation).	The door switch input status must be "closed" (door closed). Safety input 1 must be set to "Open" (collaborative operation).

Note1) Regardless of the operation mode or the input terminal status indicated in Table 3-7, the possible statuses of the robot in collaborative operation mode are indicated in the table below.

Collaborative operation mode	Safety input 1	Location of the robot relative to the low- speed space
High-speed operation mode	Close	-
Collaborative operation mode (Standard operation)	Open	Outside the space
Collaborative operation mode (Low-speed operation)	Open	Inside the space

Note2) "-" in the table indicates that the state of switch concerned does not matter.

Refer to the following for operation of each switch.

Note3)

Upon the release of brake, the robot arm may fall under its own weight depending on the axis which has been released. To ensure safety, take appropriate measures such as supporting the axis to avoid the free fall.



Be sure to prepare one brake release method at the robot usage site.

3.7 Options

■What are options?

There are a variety of options for the robot designed to make the setting up process easier for user needs. User installation is required for the options.

(1) Teaching pendant (T/B)

■Order type: ●R32TB :Cable length 7m ●R32TB-15 :Cable length 15m

∎Outline



This is used to create, edit and control the program, teach the operation position and for jog feed, etc. For safety proposes, a 3-position enable switch is mounted.^{*1)}

For multiple robots, you can operate them with just one teaching pendant by repeating the removal of it from another robot and the connection of it to the target robot.

Configuration

Table 3-8: Configuration device

Part name	Туре	Qty.	Mass (kg) ^{Note1)}	Remarks
Teaching pendant	R32TB	Either one pc	1.7	Cable 7 m, Ver. 1.9.5 or later
	R32TB-15	Entrer one pe.	2.8	Cable 15 m, Ver. 1.9.5 or later

Note1) Mass indicates one set.

Specifications

Table 3-9: Specifications

Items	Specifications	Remarks
Outline dimensions	195(W) x 292(H) x 106(D) (refer to outline drawing)	
Body color	Dark gray	
Mass	Approx. 0.9kg (body only, excluding cables)	
Connection method	Connects with controller via connector.	
Interface	RS-422	
Display method	LCD method: 24 characters x 8 lines, LCD illumination: with backlight	At 8x8 font
Operation section	36 keys	

*1) <3-position enable switch>

In ISO 10218-1: 2011 and JIS B 8433-1: 2015, this is defined as an "enable device". These standards specify that the robot operation using the teaching pendant is enabled only when the "enable device" is at a specified position.

With the Mitsubishi Electric industrial robot, the above "enable device" is configured of an "Enable/Disable switch" and "Enable switch".

The 3-position enable switch has three statuses. The following modes are entered according to the switch state.

a) "Not pressed" The robot does not operate. *)

b) "Pressed lightly" The robot can be operated and teaching is possible.

c) "Pressed with force" The robot does not operate. *)

^{*)} Releasing or forcefully pressing the 3-position enable switch cuts power to the servos in the same way as when the emergency stop is input. This helps to ensure safety.

Operations such as editing programs and displaying the robot's status are possible while the 3-position enable switch is released or forcefully pressed (excludes operating the robot).



Fig.3-15: Outside dimensions of teaching pendant

Installation method

The teaching pendant is connected to the TB connector on the front of the controller.

■Key layout and main functions



 [Emergency stop] switch [TB ENABLE] switch Enable switch 	 The robot servo turns OFF and the operation stops immediately. This switch changes the T/B key operation between enable and disable. When the [Enable/Disable] switch "2)" is enabled, and this key is released or pressed with force, the servo will turn OFF, and the operating robot will stop immediately.
4) LCD display panel	. The robot status and various menus are displayed.
5) Status display lamp	. Display the state of the robot or T/B.
6) [F1], [F2], [F3], [F4]	. Execute the function corresponding to each function currently displayed on LCD.
7) [FUNCTION] key	. Switch the function display to check another functions assigned to the
	function keys ([F1], [F2], [F3], and [F4]) when five or more functions are
	available for next operation, where only four function keys are available.
8) [STOP] key	. This stops the program and decelerates the robot to a stop.
9) [OVRD↑][OVRD↓] key	. Change moving speed. Speed goes up by [OVRD↑] key. Speed goes down by [OVRD↓] key
10) [JOG] operation key	. Move the robot according to jog mode. And, input the numerical value.
11) [SERVO] key	. Press this key with holding enable switch lightly, then servo power will turn on.
12) [MONITOR] key	. It becomes monitor mode and display the monitor menu.
13) [JOG] key	. It becomes jog mode and display the jog operation.
14) [HAND] key	. It becomes hand mode and display the hand operation.
15) [CHARCTER] key	. Switch the function of the number/character keys between number input and
	character (letter or some special character) input when both inputs are available on the T/B.
16) [RESET] key	. This resets the error. The program reset will execute, if this key and the [EXE] key are pressed.
17) [↑][↓][←][→] key	. Moves the cursor each direction.
18) [CLEAR] key	. Erase a text on the cursor position when number/character input is available.
19) [EXE] key	. Input operation is fixed. And, while pressing this key, the robot moves when direct mode.
20) Number/character key	. Input the number or character when the number/character input is available.

Fig.3-16: Teaching pendant key layout and main functions

(2) High efficient teachin	g pendant (T/B)
■Order type: ●R56TB	:Cable length 7m
●R56TB-15	:Cable length 15r

TB-15	:Cable length 15m
-------	-------------------

Outline



This is used to create, edit and control the program, to teach the operation position, or to perform jog feed, etc. This highly efficient teaching pendant has a touchscreen graphical user interface (GUI) which allows easy operation. In addition, the 3-position enable switch ^{*1)} is provided for the safety use. For multiple robots, you can operate them with just one teaching pendant by repeating the removal of it from another robot and the connection of it to the target robot.

Configuration

Table 3-10: Configuration device

Part name	Туре	Qty.	Mass (kg) Note1)	Remarks
High efficient teaching pendant	R56TB	Either one pc	2.1	Cable 7 m, Ver. 4.2 or later
	R56TB-15	Entroi one po.	3.2	Cable 15 m, Ver. 4.2 or later

Note1) Mass indicates one set.

Specifications

Table 3-11: Specifications

Items	Specifications	Remarks
Outline dimensions	252(W) x 240(H) x 114(D) (refer to outline drawing)	
Body color	Dark gray	
Mass	Approx. 1.25kg (body only, excluding cables)	
Connection method	Connects with controller via connector.	
Interface	RS-422, Ethernet (10BASE-T)	For connection with robot controller
	USB host	Note1)
Display	6.5" TFT (640 x 480) color touchscreen, with backlight	

Note1) The operation of the following USB memory sticks has been confirmed.

a) Kingston Data TravelerManufacture: Kingston, Type: USB 2.0 memory stick,

Memory sizes: 128 MB - 1GB

b) Transcend Jet FlashManufacture: Transcend, Type: USB 2.0 memory stick,

Memory sizes: 128 MB - 1GB

Notice) The operation of those other than the above is not guaranteed.

Installation method

The teaching pendant is connected to the TB connector on the front of the controller.

*1) <3-position enable switch>

With the Mitsubishi Electric industrial robot, the above "enable device" is configured of an "Enable/Disable switch" and "Enable switch".

The 3-position enable switch has three statuses. The following modes are entered according to the switch state.

a) "Not pressed" The robot does not operate.

b) "Pressed lightly" The robot can be operated and teaching is possible.

c) "Pressed with force" The robot does not operate.

*) Releasing or forcefully pressing the 3-position enable switch cuts power to the servos in the same way as when the emergency stop is input. This helps to ensure safety.

Operations such as editing programs and displaying the robot's status are possible while the 3-position enable switch is released or forcefully pressed (excludes operating the robot).

In ISO 10218-1: 2011 and JIS B 8433-1: 2015, this is defined as an "enable device". These standards specify that the robot operation using the teaching pendant is enabled only when the "enable device" is at a specified position.

Outside dimensions and main functions



1) TEACH button	. This changeover switch is used to enable or disable the T/B key operations. The
	lamp (white) lights up during enabling state.
2) Wheel	. Move the cursor to select the menu and so on.
3) Emergency stop switch	. This stops the robot in an emergency state. The servo turns OFF. Turn to the
	right to cancel.
4) Touch stylus (Integrated in hous	sing)
	The pen which operates the touch panel.
5) Power supply LED, T/B enable	LED
,	POWER LED lights up during supplying the power supply. TB ENABLE LED
	lights up during enabling state.
6) Touch panel	. Tap to operate with the stylus pen and the screen is displayed.
7) USB connecter	Plug-in the USB memory stick.
8) STOP button	. This stops the robot immediately. The servo does not turn OFF.
9) SERVO button	This turns ON the servo power simultaneously with the enable switch. The LED
	(green) lights during servo ON.
10) RESET button	This key resets an error state that has occurred.
11) CAUTION button	. If this button is pushed in jog operation, the limit switch can be canceled.
	Moreover, push this button, when releasing the brake.
12) HOME button	Not use.
13) OVRD button	. This scrolls override up or down.
14) HAND button	Display the screen of hand operation.
15) JOG button	Display the screen of jog operation.
16) +/- button	. This button operates corresponding to the selected operation.
17) EXE button	Move the robot, such as hand alignment.
18) MENU button	Display the menu screen.
19) RETURN button	Close each operation screen.
20) Arrow button	. Move the cursor
21) OK button	. Fix each screen operation.
22) CANCEL button	.Cancel each screen operation.
23) Multi grip handle	.Holds the T/B.
24) Enable switch	. If this switch is released or pressed with force while the T/B is enabled, the
	servo power supply turns OFF. To move the robot in jog operation or the like,
	press the switch lightly and hold it. The enable switch is mounted on each of the
	multi grip handle.

Fig.3-17: Teaching pendant outside dimensions and main functions

(3) MELSOFT RT ToolBox3/MELSOFT RT ToolBox3 mini

■Order type:

MELSOFT RT ToolBox3

 *For windows DVD-ROM : 3F-14C-WINE

 MELSOFT RT ToolBox3 mini

 *For windows DVD-ROM : 3F-15C-WINE

∎Outline



RT ToolBox3 has a wide range of uses, which include assisting with program design (editing and creation), setup (program execution, management, debugging), maintenance, and checking robot specifications (tact time etc.).

Configuration

Table 3-12: Product configuration

Part name	Туре	Medium	Mass (kg) ^{Note1)}	Remarks
RT ToolBox3	3F-14C-WINE	DVD-ROM	0.2	Ver.1.70Y or later
RT ToolBox3 mini	3F-15C-WINE	DVD-ROM	0.2	Ver.1.70Y or later

Note1) Mass indicates one set.

Features

(1) Simple operation with guidance method and menu method

The Windows standard is used for windows operation, so the controller initialization and startup operations can be carried out easily by following the instructions given on the screen. Even a beginner can easily carry out the series of operations from program creation to execution.

(2) Increased work efficiency with ample support functions

The work efficiency is greatly improved with the multi-window method that carries out multiple steps and displays in parallel. The renumbering function, and copy, search, syntax check and step execution are especially sufficient, and are extremely useful when editing or debugging the program. With the simulation function support of MELSOFT RT ToolBox3, the program can be debugged and the tact checked before starting the machine at the site. This allows the on-site startup work efficiently to be greatly improved.

Functions

Table 3-13: Functions

Fun	ction	Functional existence ^{Note1)}		Details	
Compatible mod	el	0	0	Personal computer running Windows 7, Windows 8, Windows 8.1, or Windows 10. Note2)	
Program editing functions	Editing functions	0	0	 MELFA BASIC V, VI language compatible Multiple editing screen simultaneously display Command input, comment writing Position data editing File operation (writing to controller, personal computer) Search and replace function (using characters, line Nos., labels) Copy, cut, paste, insert (per character, line), undo (per command statement, position conversion) Line No. automatic generation, renumbering Batch syntax check Command template Position conversion batch editing Position variable template Print, print preview 	
	Control functions	0	0	 Program file control (list, copy, movement, delete, content comparison, name change, protect) 	
	Debugging functions	0	0	 Direct editing of program in controller Confirmation of robot program operation (step execution, direct execution) 	
Simulation functi	ion	0	×	 Off-line simulation of robot program operation using CG (computer graphics) Tact time calculation 	
Monitor functions	S	0	0	 Robot operation monitor (robot operation state, stop signal, error monitor, program monitor (execution program, variables), general-purpose input/ output signals (forced output possible), dedicated input/output signals, operation confirmation (operation range, current position, hand, etc.) Operation monitor (working time statistics, production information, robot version) Servo monitor (load) 	
Maintenance fun	nction	0	0	Parameter setting Batch, divided backup	
				_ MELSOFT RT ToolBox3 mini (3F-15C-WINE)	

____ MELSOFT RT ToolBox3 (3F-14C-WINE)

Note1) The symbols "o" and "x" indicate whether the function is available for MELSOFT RT ToolBox3 and MELSOFT RT ToolBox3 mini. o: available ×: unavailable

Note2) Recommend corresponding to CE Marking, an FCC standard, and a VCCI standard.

(4) MELSOFT RT VisualBox

■Order type:

•MELSOFT RT VisualBox
 *For windows CD-ROM : 3G-30C-WINE

∎Outline



RT VisualBox is intuitive, easy-to-use software with support for touch-screen devices. It enables users to easily set up and program robots, even without specialist robot knowledge.

Configuration

Table 3-14: Product configuration

Part name	Туре	Medium	Mass (kg) ^{Note1)}	Remarks
MELSOFT RT VisualBox	3G-30C-WINE	CD-ROM	0.2	-

Note1) Mass indicates one set.

Features

(1) Programming knowledge is not required as robots can be programmed visually using programming blocks.

Users who do not understand robot programming language can easily create and debug programs just by placing operation blocks on screen. The robots direct teaching function also makes teaching positions to the robot more intuitive and efficient.

(2) No time needs to be wasted configuring essential settings.

Most of the settings appear in a wizard, so by following the on screen instructions settings can be easily configured in order to set the robot up.

(3) The vision sensor can be setup and adjusted quicker than before.

If using recommended vision sensors, you can create programs that incorporate vision sensors just by using RT VisualBox. Even functions that take a long time to set up and adjust, such as the calibration function, are easy to use. Just follow the on-screen instructions.

Functions

Table 3-15: Functions

F	unction	Details			
Robot connection	n	Used to select how the robot is connected.			
Initial settings		Used to configure the initial settings (installation type, hand settings, workpiece settings, and workpiece grasp position).			
Programming	Visual programming (main screen)	 Programs can be created by dragging and dropping program blocks. Programs can be executed and debugged. The 3D layout and simulation can be viewed from this screen. 			
	Block properties	Used to configure the advance settings of each block.			
Robot operation panel		 Used to operate the robot. The robot can be operated using the following four modes: direct teaching, jog, inching, and joint mode. 			
	Monitor	Taught positions, signals, variables, errors			
Custom set-	Select language	Used to select the display language			
tings	Workpiece grasp posi- tion settings	Used to configure the workpiece grasp position settings (These settings are available in the initial settings.)			
	Signal settings	A separate name can be specified for each input signal and each output signal.			
Date and time settings		Used to set the date and time			
Safety settings	·	Used to configure the mandatory settings of safety functions.			
Vision sensor	Connection settings	Used to configure the vision sensor connection settings			
settings	Workpiece transporta- tion	Used to configure pick-up point and workpiece identification settings			
Maintenance	Backup	Export data from the currently connected robot as a backup file			
	Restore	Sends backup file data to the currently selected robot			
	Origin settings	Used to configure the origin settings of each axisUsed to release the brakes			
	Parameter settings	Used to read and write parameters			
Help	Manual	Displays the Instruction Manual for this product			
	Software version	Shows the software version			

(5) Parallel I/O interface

■Order type : ●2D-TZ368 (Sink type)/2D-TZ378 (Source type)

∎Outline



• The connecting cable with external equipment is not attached. Since we are preparing the external input-and-output cable (2D-CBL05 or 2D-CBL15) as the option, please use.

Configuration

Table 3-16: Configuration device

Part name	Туре	Qty.	Mass (kg) Note1)	Remarks
Parallel I/O interface	2D-TZ368	Either	0.4	Input/output 32 points/32 points
	2D-TZ378	one pc.		2D-TZ368 is sink type. 2D-TZ378 is source type.

Note1) Mass indicates one set.

Specifications

Table 3-17: Electrical specifications of input circuits

Item		Specification		Internal circuit	
Туре		DC input		<sink type=""></sink>	
Number of input po	oints	32		+24\//+12\/	
Insulation method		Photo coupler insulation			
Rated input voltage	e	12VDC	24VDC		
Rated input curren	t	Approx. 3mA	Approx.9mA	│	
Working voltage range		10.2VDC to 26.4VDC (Ripple factor should be less than 5%)		2.7K	
ON voltage/ON cur	N current 8VDC or more/2mA or more		A or more		
OFF voltage/ OFF	current	4VDC or less/1mA	or less		
Input resistance		Approx. 2.7kΩ		2.7K Input	
Response time	OFF-ON	10ms or less(24VDC)			
	ON-OFF	10ms or less(24VDC)			
Common method 32 points per common		mon			
External cable connection method		Connector			

lt	em	Specification	Internal circuit
Туре		Transistor output	<sink type=""></sink>
No. of outpu	it points	32	1
Insulation m	nethod	Photo-coupler insulation	<u>+24V/+1</u> 2V
Rated load	voltage	12VDC/24VDC	↓ ↓ Output
Rated load	voltage range	10.2VDC to 30VDC (peak voltage 30VDC)	╵╹╹━╇
Max. load c	urrent	0.1A/point (100%)	
Leakage cu	rrent at OFF	Within 0.1mA	24G/12G
Max. voltage	e drop at ON	0.9VDC(TYP.) Note1)	Fuse
Response	OFF-ON	10ms or less (Resistance load) (hardware response time)	<source type=""/>
time	ON-OFF	10ms or less (Resistance load) (hardware response time)	
Fuse rating		Fuse 1.6A (one per common)	
		Replacement possible (max. 3)	
Common m	ethod	16 points per common (common terminal: 2points)	
External wir	e connection	Connector	\$∽K
method			24G/12G
External	Voltage	12VDC/24VDC(10.2VDC to 30VDC)	
power supply	Current	60mA (TYP.24VDC per common) (base drive current)	

Table 3-18: Electrical specifications for the output circuits

Note1) The maximum voltage drop value at signal ON.

Refer to it for the equipment connected to the output circuit.

*A voltage exceeding the rated voltage or incorrect wiring may damage the circuit.

A Caution The protection fuse of the output circuit prevents the failure at the time of the load short circuit and incorrect connection. The load connected of the customer should be careful not to exceed maximum rating current. The internal transistor may be damaged if maximum rating current is exceeded.

Installation method

The expansion parallel input/output interface is installed in the controller. Refer to separate "Instruction Manual/Controller Setup and Maintenance" for details on the installing method.

If it installs in the option SLOT of the controller, the station number will be assigned automatically.

SLOT1: station number 0 (0 to 31) SLOT2: station number 1 (32 to 63)





■Pin layout of connector



Fig.3-19: Pin layout of connector

■Connector pin No. and signal assignment

The station number is fixed by the slot to install and the allocation range of the general-purpose input-andoutput signal is fixed.

	Table 3-19:	The slot	number	and the	station	number
--	-------------	----------	--------	---------	---------	--------

Slot number	Station	Range of the general-purpose input-and-output signal		
Clot Humber	number	Connector <1>	Connector <2>	
SLOT1	0	Input: 0 to 15 Output: 0 to 15	Input: 16 to 31 Output: 16 to 31	
SLOT2	1	Input: 32 to 47 Output: 32 to 47	Input: 48 to 63 Output: 48 to 63	

The connector pin number of the parallel input-and-output interface installed in SLOT1 and signal number allocation are shown in Table 3-20 and Table 3-21. If it installs in other slots, please interpret and utilize.

Din		Functio	Function name			Function name		
No.	Line color	General-purpose	Dedicated/power supply, common	No.	Line color	General-purpose	Dedicated/power supply, common	
1C	Orange/Red a		24G/12G: For pins	1D	Orange/Black a		+24V/+12V(COM):	
			5D-20D				For pins 5D-20D	
2C	Gray/Red a		COM: For pins	2D	Gray/Black a		Reserved	
			5C-20C ^{Note1)}					
3C	White/Red a		Reserved	3D	White/Black a		Reserved	
4C	Yellow/Red a		Reserved	4D	Yellow/Black a		Reserved	
5C	Pink/Red a	General-purpose input 15		5D	Pink/Black a	General-purpose output 15		
6C	Orange/Red b	General-purpose input 14		6D	Orange/Black b	General-purpose output 14		
7C	Gray/Red b	General-purpose input 13		7D	Gray/Black b	General-purpose output 13		
8C	White/Red b	General-purpose input 12		8D	White/Black b	General-purpose output 12		
9C	Yellow/Red b	General-purpose input 11		9D	Yellow/Black b	General-purpose output 11		
10C	Pink/Red b	General-purpose input 10		10D	Pink/Black b	General-purpose output 10		
11C	Orange/Red C	General-purpose input 9		11D	Orange/Black c	General-purpose output 9		
12C	Gray/Red C	General-purpose input 8		12D	Gray/Black c	General-purpose output 8		
13C	White/Red C	General-purpose input 7		13D	White/Black c	General-purpose output 7		
14C	Yellow/Red C	General-purpose input 6		14D	Yellow/Black c	General-purpose output 6		
15C	Pink/Red C	General-purpose input 5	Operation rights input	15D	Pink/Black c	General-purpose output 5		
			signal ^{Note2)}					
16C	Orange/Red d	General-purpose input 4	Servo ON input signal	16D	Orange/Black d	General-purpose output 4		
			Note2)					
17C	Gray/Red d	General-purpose input 3	Start input ^{Note2)}	17D	Gray/Black d	General-purpose output 3	Operation rights	
							output signal ^{Note2)}	
18C	White/Red d	General-purpose input 2	Error reset input signal	18D	White/Black d	General-purpose output 2	Error occurring	
			Note2)				output signal ^{Note2)}	
19C	Yellow/Red d	General-purpose input 1	Servo OFF input	19D	Yellow/Black d	General-purpose output 1	In servo ON output	
			signal ^{Note2)}				signal ^{Note2)}	
20C	Pink/Red d	General-purpose input 0	Stop input Note3)	20D	Pink/Black d	General-purpose output 0	Operating output	
							Note2)	

Table 3-20: Connector<1>	pin assignment lis	t and external I/O cable	(2D-CBL**)) color(SLOT1))
--------------------------	--------------------	--------------------------	------------	----------------	---

Note1) Sink type: +24V/+12V(COM), Source type: 24G/12G Note2) The dedicated signal is assigned at shipping. It can change with the parameter. Note3) The dedicated input signal (STOP) is assigned at shipping. The signal number is fixing.

Table 3-21: Connector<2> r	pin assignment list and external	I/O cable (2D	-CBL**) color(SLOT1)
----------------------------	----------------------------------	---------------	----------------	--------

Din		Function name		Din		Function name		
No.	Line color	General-purpose	Dedicated/power supply, common	No.	Line color	General-purpose	Dedicated/power supply, common	
1A	Orange/Red a		24G/12G: For pins 5B-	1B	Orange/Black a		+24V/+12V(COM):	
			20B				For pins 5B-20B	
2A	Gray/Red a		COM: For pins 5A-	2B	Gray/Black a		Reserved	
			20A ^{Note1)}					
ЗA	White/Red a		Reserved	3B	White/Black a		Reserved	
4A	Yellow/Red a		Reserved	4B	Yellow/Black a		Reserved	
5A	Pink/Red a	General-purpose input 31		5B	Pink/Black a	General-purpose output 31		
6A	Orange/Red b	General-purpose input 30		6B	Orange/Black b	General-purpose output 30		
7A	Gray/Red b	General-purpose input 29		7B	Gray/Black b	General-purpose output 29		
8A	White/Red b	General-purpose input 28		8B	White/Black b	General-purpose output 28		
9A	Yellow/Red b	General-purpose input 27		9B	Yellow/Black b	General-purpose output 27		
10A	Pink/Red b	General-purpose input 26		10B	Pink/Black b	General-purpose output 26		
11A	Orange/Red C	General-purpose input 25		11B	Orange/Black c	General-purpose output 25		
12A	Gray/Red C	General-purpose input 24		12B	Gray/Black c	General-purpose output 24		
13A	White/Red C	General-purpose input 23		13B	White/Black c	General-purpose output 23		
14A	Yellow/Red C	General-purpose input 22		14B	Yellow/Black c	General-purpose output 22		
15A	Pink/Red C	General-purpose input 21		15B	Pink/Black c	General-purpose output 21		
16A	Orange/Red d	General-purpose input 20		16B	Orange/Black d	General-purpose output 20		
17A	Gray/Red d	General-purpose input 29		17B	Gray/Black d	General-purpose output 19		
18A	White/Red d	General-purpose input 18		18B	White/Black d	General-purpose output 18		
19A	Yellow/Red d	General-purpose input 17		19B	Yellow/Black d	General-purpose output 17		
20A	Pink/Red d	General-purpose input 16		20B	Pink/Black d	General-purpose output 16		

Note1) Sink type: +24V/+12V(COM), Source type: 24G/12G



<Reference> The example of connection with our PLC





The following shows an example of a protective circuit.

Fig.3-21: Connection with a Mitsubishi PLC (Example of sink type) for use of a protective circuit



Fig.3-22: Connection with a Mitsubishi PLC (Example of source type)





Fig.3-23: Connection with a Mitsubishi PLC (Example of source type) for use of a protective circuit

(6) External I/O cable

■Order type : •2D-CBL□□[Note]The numbers in the boxes□□ refer to the length. (05: 5m, 15: 15m)

∎Outline



This is the dedicated cable used to connect an external peripheral device to the connector on the parallel I/O interface.

One end matches the connector on the parallel input/output unit, and the other end is free. Connect the peripheral device's input/output signal using the free end. One cable correspond to the input 16 points and output 16 points. Two cables are needed to connection of (input 32 points and output 32 points)

Configuration

Table 3-22: Configuration device

Part name	Туре	Qty.	Mass (kg) ^{Note1)}	Remarks	
External I/O cable	2D-CBL		0.7(5m) 1.84(15m)	5m or 15m	

with built-in standard.

Note1) Mass indicates one set.

Specifications

Table 3-23: Specifications

Items	Specifications					
Number of cables x cable size	AWG #28 x 20P (40 cores)					
Total length	5m, 15m					

Connector pin numbers and cable colors

Table 3-24: Connector pin numbers and cable colors

Pin no.	Cable colors	Pin no.	Cable colors	Pin no.	Cable colors	Pin no.	Cable colors
1A/C	Orange/Red a	11A/C	Orange/Red c	1B/D	Orange/Black a	11B/D	Orange/Black c
2A/C	Gray/Red a	12A/C	Gray/Red c	2B/D	Gray/Black a	12B/D	Gray/Black c
3A/C	White/Red a	13A/C	White/Red c	3B/D	White/Black a	13B/D	White/Black c
4A/C	Yellow/Red a	14A/C	Yellow/Red c	4B/D	Yellow/Black a	14B/D	Yellow/Black c
5A/C	Pink/Red a	15A/C	Pink/Red c	5B/D	Pink/Black a	15B/D	Pink/Black c
6A/C	Orange/Red b	16A/C	Orange/Red d	6B/D	Orange/Black b	16B/D	Orange/Black d
7A/C	Gray/Red b	17A/C	Gray/Red d	7B/D	Gray/Black b	17B/D	Gray/Black d
8A/C	White/Red b	18A/C	White/Red d	8B/D	White/Black b	18B/D	White/Black d
9A/C	Yellow/Red b	19A/C	Yellow/Red d	9B/D	Yellow/Black b	19B/D	Yellow/Black d
10A/C	Pink/Red b	20A/C	Pink/Red d	10B/D	Pink/Black b	20B/D	Pink/Black d

Notes) Pin number of connector<1> are 1C, 2C,20C, 1D, 2D,20D, connector<2> are 1A, 2A,20A, 1B, 2B,20B.

Connections and outside dimensions

The sheath of each signal cable (40 lines) is color indicated and marked with dots. Refer to the cable color specifications in "Table 3-24: Connector pin numbers and cable colors" when making the connections.





(7) CC-Link interface

■Order type: ●2D-TZ576

Outline



The CC-Link interface is the optioninterface to not only add bit data to the robot controller, but also to add CC-Link field network function that allows cyclic transmission of word data.

Configuration

Table 3-25: Configuration device

Part name	Туре	Qty.	Mass(kg) ^{Note1)}	Remarks
CC-Link interface	TZ576	1	0.6	
Manual	BFP-A8634	1	-	CD-ROM
Ferrite core	E04SR301334	2	-	Do ouro to install this for poiss
Cable clamp	AL4	2	-	
	AL5	2	-	
On-line connector for communication	A6CON-LJ5P	1	-	
Terminal resistor	A6CON-TR11N	1	-	Resistance value: 100Ω
One-touch connector plug for communication	A6CON-L5P	2	-	

Note1) Mass indicates one set.

Table 3-26: Procured by the customer

Part name	Туре	Qty.	Remarks
Master station	FX3U-16CCL-M (FX series) RJ61BT11 (R series) QJ61BT11 (Q series) QJ61BT11N (Q series) AJ61QBT11 (QnA series) A1SJ61QBT11 (QnAS series) AJ61BT11 (A series) AJ61BT11 (A series) AJ61BT11 (A series) A1SJ61BT11 (AnS series) A80BD-J61BT11 (personal computer board)	1	
Communication cable	-	1	Ddedicated cable



Specifications

Table 3-27: Specifications

Item				Specif	fications		Remarks
Communication function			Bit data a	nd word da	ata can be tr	ansmitted.	Word data are used by the registers.
Station type			Inte	lligent devi	ice station ^N	ote1)	
Support station				Local	station		No master station function
The versio	n correspond	ing to CC-Link		V	er.2		The extended cyclic setup is possible.
Mountable	option slot			Slo	it 1, 2		
Number of cards	mountable C	C-Link interface			1		Multiple CC-Link interface cards cannot be inserted.
Number of	stations			1 to 64	stations		When four stations are occupied, continuous station numbers are used. The station numbers are set by a DIP switch.
Transmissi	on speed		10	M/5M/2.5M	/625K/156K	bps	This is set by the rotary SW.
Station nur	nber		[1 t	io 64		When two or more stations are occupied,
Number of	occupied sta	tions		1/2	2/3/4		Continuous station numbers are used.
Extended of	cyclic setup			1/2	2/4/8		
Maximum	ink point	Remote I/O (RX, RY).		Each 8	96 points		The two last cannot be used.
		Remote register (RWr, RWw)		Each 12	28 register		16 bits/register
Extended	cyclic setup	-	1 fold setup	2 fold setup	3 fold setup	4 fold setup	
Link point per set	When one station is occupied	Remote I/O (RX, RY).	32 point	32 point	64 point	128 point	
		Remote register (RWw)	4 word	8 word	16 word	32 word	
		Remote register (RWr)	4 word	8 word	16 word	32 word	
	When two stations is	Remote I/O (RX, RY).	64 point	96 point	192 point	384 point	
	occupied	Remote register (RWw)	8 word	16 word	32 word	64 word	
		Remote register (RWr)	8 word	16 word	32 word	64 word	
	When three	Remote I/O (RX, RY).	96 point	160 point	320 point	640 point	
	stations is occupied	Remote register (RWw)	12 word	24 word	48 word	96 word	
		Remote register (RWr)	12 word	24 word	48 word	96 word	
	When four stations is	Remote I/O (RX, RY).	128 point	224 point	448 point	896 point	
	occupiea	Remote register (RWw)	16 word	32 word	64 word	128 word	
		Remote register (RWr)	16 word	32 word	64 word	128 word	
Number of	the maximum	n occupancy station		4 st	ations		
The I/O first number of the robot controller.		The num numbe	No. 6 Iber corres r by the set "CC	3000 ponding to th tup of the pa CFIX."	he station arameter		

Note1) Not available for the transient transmission function and FX-series models that do not support intelligent devices.

Functions

(1) Communication function

- The number of usable points is 896 points maximum for bit control and 128 points maximum for word control.
- (2) Easy setup
 - The CC-Link interface card can be set by a rotary switch or DIP switch.
 - No separate space is required to mount the CC-Link interface card as it is embedded in the robot controller (can only be mounted into slot 2).
 - Easy wiring since only four terminals need to be connected.
 - Dedicated commands have been added to MELFA-BASIC VI (robot programming language); thus, no complex interface programming is required.

(3) High-speed response

- The link scan time when connecting 64 stations is approximately 7.2 ms.
- A transmission speed can be selected from 10M, 5M, 2.5M, 625K and 156K bps according to the transmission distance.

(8) SD memory card ■Order type: 2F-2GBSD

∎Outline



This card is used as an extended memory.

To save logging data, insert an SD card into the SD card slot on the front of the robot controller.

Configuration

Table 3-28: Configuration device

Part name	Туре	Qty.	Remarks
SD memory card	2F-2GBSD	1	Memory card capacity: 2GB

(9) Easy-setup kit

■Order type:

•4F-ASSISTA-SETUP-JP (For Japan/North America) •4F-ASSISTA-SETUP-EU (For Europe/China)

∎Outline



The Easy-setup kit is manufactured from the emergency stop switch, safety extension unit power supply, cables, and other devices shown in Table 1-1.

Configuration

Table 3-29: Product configuration

Part name	Туре	Qty.	Mass (kg)	Remarks
Easy-setup kit (For Japan/North America)	4F-ASSISTA- SETUP-JP	1	6.1	Plug type A for 100 V power supply
EMG / Mode selector switch box	-	1	0.48	Equipped with an emergency stop switch and a mode selector switch. (Door switch short-circuited)
SDIO cables for the safety extension unit	-	1	0.78	SDI cable: 8 SDO cable: 2
Earth leakage breaker / safety exten- sion unit power supply box	-	1	4.84	24 V DC power supply: 1 24 V DC power input cable: 1 24 V DC power output cable: 1 Earth leakage breaker: 1 Primary power wire (Plug type A): 1
Easy-setup kit (For Europe/China)	4F-ASSISTA- SETUP-EU	1	6.1	Plug type SE for 200 V power supply
EMG / Mode selector switch box	-	1	0.48	Equipped with an emergency stop switch and a mode selector switch. (Door switch short-circuited)
SDIO cables for the safety extension unit	-	1	0.78	SDI cable: 8 SDO cable: 2
Earth leakage breaker / safety exten- sion unit power supply box	-	1	4.84	24 V DC power supply: 1 24 V DC power input cable: 1 24 V DC power output cable: 1 Earth leakage breaker: 1 Primary power wire (Plug type SE): 1

Outside dimensions



Fig.3-26: Dimensions of the EMG / Mode selector switch box





Fig.3-27: Dimensions of SDIO cables for the safety extension unit



Fig.3-28: Dimensions of the Earth leakage breaker / safety extension unit power supply box

3.8 Maintenance parts

The consumable parts used in the controller are shown in Table 3-30. Purchase these parts from your dealer when required. Some Mitsubishi-designated parts differ from the maker's standard parts. Thus, confirm the part name, robot arm and controller serial No. and purchase the parts from your dealer.

Table 3-30: Controller consumable parts list

No.	Name	Type ^{Note1)}	Qty.	Usage place	Supplier
1	Filter	BKOFA0773H42	1	Inside the filter cover	Mitsubishi Electric

Note1) Confirm the robot arm serial No., and contact the dealer or service branch of Mitsubishi Electric Co., for the type.

4 Software

4.1 List of commands

Table 4-1 shows the main program blocks used in RT VisualBox and their descriptions.

Program block	Block name	Description
*	Move	Moves the robot (Tap/click to configure settings)
\$	Hand	Opens/closes the hand (Tap/click to configure settings)
X	Wait	Instructs the robot to wait (Tap/click to configure settings)
*	Signal	Outputs signals (Tap/click to configure settings)
	Calculate	Performs calculations (Tap/click to configure settings)
	Vision	Recognizes the workpiece (Tap/click to configure settings) This block becomes available when a robot is connected to the software.
	Pause	Pauses the operation
-\$	Branch	Branches conditions (Tap/click to configure settings)
•	Repeat	Repeats the operation (Tap/click to configure settings)
	Pallet	Used to set up palletizing operations (Tap/click to configure settings).

Table 4-1: Program block list

5 Instruction Manual

5.1 Details of each instruction manual

The contents and purposes of the documents enclosed with this product are shown below. Use these documents according to the application.

Manual name	Description	Manual No.
Collaborative Robot Safety Manual	To ensure the safety of robot users, this manual provides information on common precautions and safety measures that should be taken when handling the robot or creating and designing robot systems. Read this manual first.	BFP-A3733
Hello ASSISTA Quick Set-up Guide	Describes procedures including unpacking, installation, programming using RT VisualBox, and operation of the robot.	BFP-A3715
Standard Specifications Manual (This manual)	Provides information on standard product specifications, options, and maintenance parts. It also provides information on safety and technical precautions when introducing the robot into a new environment.	BFP-A3727
Robot Arm Setup and Maintenance	Explains pre-operation requirements for the robot (unpacking, transportation, installation, and operation checks) and how to carry out maintenance and inspection.	BFP-A3729
Controller Setup and Maintenance	Explains the steps that must be taken before using the robot controller (unpacking, transportation, and installation). It also contains information on maintenance and inspection.	BFP-A3731
Collaborative Robot: Detailed explanations of functions and operations	Provides information on functions specific to collaborative robots.	BFP-A3735
Detailed explanations of functions and operations ^{Note1)}	Describes details on functions and operation methods, including information of how to use MELFABASIC VI commands in programs, how to connect external input/output devices, and how to set parameters. The FR series is used as an example for explanation purposes. For information on unsupported functions, refer to the Collaborative Robot: Detailed explanations of functions and operations.	BFP-A3478
Troubleshooting Note1)	Provides information on the causes and solutions to errors that may occur while operating the robot.	BFP-A3480
Tracking Function Note1)	Provides information on the specifications, functions, and usage of the conveyor tracking function.	BFP-A3520
GOT Direct Connection Extended Function Note1)	Describes the data configuration of the memory between the GOT and the robot, monitoring, and operating procedures.	BFP-A3546
Ethernet Function Note1)	Explains how to communicate with a computer over Ethernet using TCP/IP protocols.	BFP-A3379

Note1) Instances where the CR800-D controller is mentioned also refer to the CR800-05VD.

6 Safety

6.1 Safety

For information on safety, refer to the Collaborative Robot Safety Manual and take appropriate measures accordingly.

6.1.1 Self-diagnosis stop functions

This robot has the self-diagnosis stop functions shown in Table 6-1 and the stop functions shown in Table 6-2 for safe use.

No.	Function		Details	Remarks	
1	Overload protection func- tion Note 1)		Activates when the total servo current time exceeds the specified value.	The drive circuit is shut off. The robot stops, and an alarm displays.	
2	Overcurrent diagnosis function Note 1)		Activates when an overcurrent flows to the motor circuit.	The drive circuit is shut off. The robot stops, and an alarm displays.	
3	Encoder disconnection diagnosis function		Activates when the encoder cable is discon- nected.	The drive circuit is shut off. The robot stops, and an alarm displays.	
4	Deflection over diagno- sis function		Activates when an error occurs between the com- mand value and actual position, and the error exceeds the specified amount.	The drive circuit is shut off. The robot stops, and an alarm displays.	
5	AC power voltage drop diagnosis function		Activates when the AC power voltage drops below the specified value.	The drive circuit is shut off. The robot stops, and an alarm displays.	
6	CPU error detection function		Activates when an error occurs in the CPU.	The drive circuit is shut off. The robot stops, and an alarm displays.	
7	Overrun preven- tion func- tion	Software limit detec- tion	This is the limit provided by the software to enable operation only in the operation range.	The drive circuit is shut off. The robot stops, and an alarm displays.	

Table 6-1: Self-diagnosis stop functions

Note 1) There is no thermal memory function that conforms to EN 61800-5-1:2007/A1:2017.

Stop function	Teaching pendant	External input	Opera- tion but- tons	Details	
Emer- gency stop	0	0	-	The servo power is shut off and the mechanical brakes activate to stop the robot by stopping operation in an emergency. To recover, reset the alarm, and turn the servo ON with the servo ON command.	
Stop	0	0	0	The robot immediately decelerates to stop by stopping operation as usual. Note that the servo power is not shut off. Use this when using the collision evasion sensor, etc.	

Table 6-2: List of stop functions

6.1.2 External I/O signals that can be used for preventative safety measures

Table 6-3: External I/O signals that can be used for preventative safety measures

		8				
	Signal	Connection point	Parameter	Functions	Usage method	
	External emer- gency stop Note1)	Connector CNUSR11	-	This servo power is shut off, and the robot stops immediately.	Externally installed emergency stop switch. Stopping at high-level error occurrence.	
	Door switch input ^{Note1)}		-		Machine guard door switch.	
Input	Stop	I/O interface	STOP, STOP2	The program execution is stopped, and the robot stops. The servo power is not shut off.	The robot is stopped when a peripheral device fault occurs. The servo power is not shut off.	
	Servo OFF		SRVOFF	The servo power can be shut off.	The robot is stopped when a peripheral device fault occurs. The servo power is also shut off.	
	Automatic operation enable		AUTOENA	Disables automatic operation when inactive.	Door switch on safety protection fence.	
	Safety input 1	Connector SDI1 (Safety exten- sion unit)	-	Switches between collaborative opera- tion mode and high-speed operation mode.	By connecting a safety sensor to this input, it is possible to make the robot switch to high-speed operation mode once someone leaves the vicinity of the robot. The robot can also be made to switch to collaborative operation mode when someone nears the robot.	
Output	Emergency stop output	Connector CNUSR11	-	Outputs the input signal of external emergency stop or emergency stop switch of T/B turned on.	Display and warn the pilot lamp, the input signal of external emergency stop or the emergency stop switch of T/B turned on.	
	In servo ON	I/O interface	SRVON	The servo power ON/OFF state is output.	The servo power ON/OFF state is shown and alerted with the display lamps.	
	Waiting]	STOP, STOP2	Outputs that the robot is temporarily stopped.	The temporary stop state is shown and alerted with the display lamps.	
	In alarm	Connector CNUSR11	ERRRESET	Outputs when an alarm occurs in the robot.	The alarm state is shown and alerted with the display lamps.	
	Operation sta- tus ^{Note2)}	I/O interface	SFMODE	Outputs the operation status (high- speed/standard/low-speed).	The operation status is indicated by the Status indicator LED.	

Note1) The external emergency stop input and the door switch input have duplicate NC contacts for redundancy. Thus, if the emergency stop input circuit is opened when the robot is started up, the robot will not operate. Refer to Page 99, "6.1.3 Examples of safety measures"for details. And, refer to Page 68, "(1) Automatic Operation/Jog Operation/Brake Release and Necessary Switch Settings"for the function of the door switch input and the mode selector switch input.

Note2) Safety outputs of the safety extension unit can also output the operation status. For information on how to set this signal, refer to the Collaborative Robot: Detailed explanations of functions and operations. All output signals listed in Table 6-3 are non-safety output. If system requires safety output, please use that of safety extension unit.

6.1.3 Examples of safety measures

The controller's dedicated I/O terminal connector has a duplicate emergency stop circuit. A Safety extension unit must be connected to the robot.

Figures Fig. 6-1 to Fig. 6-6 are examples of safety measures. Refer to these figures when creating safety measures. The figures represent systems which are operating normally (i.e. Systems not in an emergency stop state).

- [Note] In the emergency-stop related wiring by the customer, if the coil (is not the contact points) of the relay prepared by the customer is connected to the controller, please be sure to implement the measure against the noise by the customer in the coil section. And, please also take the lifetime of noise suppression parts into consideration.
 - Electric specification of the emergency-stop-related output terminal: 24V DC or less, related current 100mA or less.
 - In the customer's system, do not ground the + side of 24V power supply prepared by customer for connect to the controller. (related with emergency stop and parallel input/output) If it connects with the controller under the condition that the + side is grounded, it will lead to failure of controller.

Examples of safety measures	Description	Figure
Wiring example 1	Not using a machine guard and running the robot in collaborative operation mode only	Fig. 6-1
Wiring example 2	Using a safety sensor (such as an area sensor) to switch between collaborative operation mode and high-speed operation mode	Fig. 6-2
Wiring example 3	Using a machine guard and running the robot in high-speed operation mode only	Fig. 6-3
Wiring example 4	Connecting an emergency stop switch of a peripheral device when using collabora- tive operation mode	Fig. 6-4
Wiring example 5	Connecting an emergency stop switch of a peripheral device to two robot control- lers when using collaborative operation mode	Fig. 6-5
Wiring example 6	Connecting a safety relay to a robot controller	Fig. 6-6

< Wiring example 1>: Not using a machine guard and running the robot in collaborative operation mode only Connect the emergency stop switch of peripheral equipment to the controller. The power supply for emergency stop input uses the power supply in the controller. <Operation of the emergency stop> If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state. <Operation of Safety input 1> Opening the terminals will keep the robot in collaborative operation mode. Emergency stop switch (2-contact type) ↔ Peripheral T/B emergency stop switch +24V equippment *2 Ģ Internal power supply 24V +3.3\ CNUSR11 🕂+24V +3.3V 14/7 30/23 +3.3V Ą +3.3V +3.3\ -+24V 13/6 Door switch 29/22 input Mode selector switch input +3.3\ ---+24V 12/5ᆋ 0 28/21 Internal emergency stop circuit 10/3 Emergency stop 26/19] output *4 Safety input 1 11/4COM+ (SDI1) A1 B1 27/20] Mode output *1 A2 B2 8/1 Error output 24/17 *3 Safety extension unit RIO RIO1 Ľ

*1) The CNUSR11 port and SDI1 port both have two rows of terminals, indicating that there are two channels. Both channels must be connected.

*2) This is the emergency stop switch of the teaching pendant that is connected to the robot controller.

*3) If a Safety extension unit is not connected to the robot controller, the error H2260 "Safety function execution disabled (No extended safety unit)" will occur.

*4) For examples of safety input 1 connections, refer to the section "Connecting the safety extension unit to the controller" in the separate manual "Instruction Manual: Controller Setup and Maintenance".

Fig.6-1: Example of safety measures (wiring example 1)


*2) This is the emergency stop switch of the teaching pendant that is connected to the robot controller.

*3) If a Safety extension unit is not connected to the robot controller, the error H2260 "Safety function execution disabled (No extended safety unit)" will occur.

*4) For examples of safety input 1 connections, refer to the section "Connecting the safety extension unit to the controller" in the separate manual "Instruction Manual: Controller Setup and Maintenance".

Fig.6-2: Example of safety measures (wiring example 2)

<Wiring example 3>: Using a machine guard and running the robot in high-speed operation mode only Connect the emergency stop switch of peripheral equipment to the controller. The power supply for emergency stop input uses the power supply in the controller. <Operation of the emergency stop> If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state. <Operation of Safety input 1> Closing the terminals will keep the robot in high-speed operation mode. Emergency stop switch (2-contact type) T/B emergency stop switch +24V equippment *2 Ģ Internal power supply 24V +3.3V CNUSR11 -+24V +3.3V 14/7 Φ olc 30/23 1/ Machine guard +3.3V door +3.3V 0 +3.3\ +24∨ 13/6 Door switch input -010 29/22 Mode selector +3.3\ switch input +24V 12/5 ⊸⊸ 28/21 Internal emergency stop circuit 10/3 Emergency stop 26/19 output *4, *5 Safetv input 1 11/4 COM+ (SDI1) B1 A1 Mode output 27/20 A2 B2 8/1 Error output 24/17] *3 Safety extension RIO unit RIO1 Ľ

*1) The CNUSR11 port and SDI1 port both have two rows of terminals, indicating that there are two channels. Both channels must be connected.

*2) This is the emergency stop switch of the teaching pendant that is connected to the robot controller.

*3) If a Safety extension unit is not connected to the robot controller, the error H2260 "Safety function execution disabled (No extended safety unit)" will occur.

*4) For examples of safety input 1 connections, refer to the section "Connecting the safety extension unit to the controller" in the separate manual "Instruction Manual: Controller Setup and Maintenance".

*5) Direct teaching is not available in high-speed operation mode.

Fig.6-3: Example of safety measures (wiring example 3)



*1) The CNUSR11 port and SDI1 port both have two rows of terminals, indicating that there are two channels. Both channels must be connected.

*2) This is the emergency stop switch of the teaching pendant that is connected to the robot controller.

*3) If a Safety extension unit is not connected to the robot controller, the error H2260 "Safety function execution disabled (No extended safety unit)" will occur.

*4) For examples of safety input 1 connections, refer to the section "Connecting the safety extension unit to the controller" in the separate manual "Instruction Manual: Controller Setup and Maintenance".

Fig.6-4: Example of safety measures (wiring example 4)







Fig.6-6: Example of safety measures (wiring example 6)

(1) External emergency stop connection [supplementary explanation]

- (1) Use a 2-contact type switch for all switches.
- (2) Install a limit switch on the doors of machine guards. Wire the switch to the Door switch input terminal so that the NO contact (Form-A) turns the terminal On when the door is closed (power applied to switch), and turns the terminal Off when the door is open (switch released).
- (3) Use an IEC 60204-1 compliant emergency stop switch, which has two NC contacts for redundancy and a mechanical latching function.
- (4) Classify the faults into minor faults (faults that are easily restored and that do not have a great effect) and major faults (faults that cause the entire system to stop immediately, and that require care in restoration), and wire accordingly.
- [Caution] The external emergency-stop switch pins of the user-wired CNUSR11 connector can be used for safety measures. Please be aware that there are restrictions on the number of switch contacts, cable rating, and cable length.
 - Switch contact Prepare a 2-contact type.^{*1)}
 - Switch contact capacity Related current of 24 VDC or higher for a no-voltage contact. *1)
 - Cable length The length of the wire between the switch and terminal block must be max. 15m or less. Please use the shield line, in case of the
 - cable may receive the noise etc. by other equipment, such as servo amplifier. And, if it is necessary, please fix a ferrite core (recommended model name: E04SR301334, manufacturer: Seiwa Electric Mfg. Co., Ltd.) to the shielded cable. The size of the wire that fits to use is shown below.
 - CNUSR11 connector: AWG24 to 16 (0.2 to 1.25mm²)

Electric specification of the emergency stop related output circuit is 100mA/24V or less. Don't connect the equipment except for this range.



INCAUTION Be sure to perform wiring correctly. If there are mistakes in the wiring, the robot may not stop when the emergency stop button is pressed and there will be a risk of damage or personal injury occurring.

> After wiring, be sure to press each of the installed emergency stop switches and check whether the emergency stop circuit works properly.



Be sure to duplicate connection of the emergency stop, door switch and mode selector switch. If not duplicated, these functions may fail due to a broken relay used by customer, etc.

^{*1)} The minimum load electric current of the switch is more than 5mA/24V.

6.2 Working environment

Avoid installation in the following places as the equipment's life and operation will be affected by the ambient environment conditions. When using in the following conditions, the customer must pay special attention to the preventive measures.

(1) Power supply

- Where the voltage fluctuation will exceed the input voltage range.
- Where a momentary power failure exceeding 20ms may occur.
- Where the power capacity cannot be sufficiently secured.

Please use the controller with an input power supply voltage fluctuation rate of 10% or less. In the case of 200 VAC input, for example, if the controller is used with 180 VAC during the day and 220 VAC during the night, turn the servo off once and then on again.

If this is not performed, an excessive regeneration or overvoltage error may occur.

(2) Noise

• Where a surge voltage exceeding 2000V, 5kHz (equivalent to EN 61000-4-4) may be applied on the primary voltage. Locations where a strong electric field or magnetic field exists, such as near large inverters, high output frequency oscillator, large contactors and welding machines.

[Recommendation]

A noise-cut transformer; a noise filter; reinforcement of ground lines and electromagnetic shields; isolation by keeping away from noise sources; reduction of noise level of emission.

This product has undergone EMC testing for products intended for use in industrial environments (tested to standards EN 61000-6-2 and EN 61000-6-4). This product is not intended to be connected to residential, commercial, or light-industrial power supplies.

(3) Temperature and humidity

- Where the atmospheric temperature exceeds 40 degree , lower than 0 degree.
- Where the relative humidity exceeds 75% RH or below 45% RH, or condensation may occur.
- Where the robot will be subject to direct sunlight or near heat generating sources such as heaters.

(4) Vibration

• Where excessive vibration or impact may be applied. (Use in an environment of 3.5G or less during transportation and 0.1G or less during operation.)

/\CAUTION

If the robot is installed on equipment such as an automated guided vehicle (AGV), turn the robot servos OFF while the AGV is moving. Robot servos cannot be turned OFF with RT VisualBox.

(5) Installation environment

- Where strong electric fields or magnetic fields are generated.
- Where the installation surface is rough. (Avoid installing the robot on a bumpy or inclined floor.)
- Where there is heavy powder dust and oil mist present.

6.3 Precautions for handling

- (1) The robot has brakes. If the robot is moved with an excessive external force while the brake is applied, the robot accuracy may decrease, a backlash may occur, or the reduction gear may be damaged.
- (2) Avoid moving the robot arm by hand. When unavoidable, gradually move the arm. If moved suddenly, the accuracy may drop due to an excessive backlash, or the backed up data may be destroyed.
- (3) Note that depending on the posture, even when within the movement range, the wrist section could interfere with the base section. Take care to prevent interference during jog.
- (4) The robot arm consists of precision parts such as bearing. Lubricants such as grease are also applied on the moving parts to keep the mechanical accuracy. In a cold start under low temperature or in the first start after being stored for one month or longer, lubricants may not be spread enough. Such condition may lower the positioning accuracy, cause servo and overload alarms, and early wearing of the moving parts. To avoid such situation, perform warm-up operation of the machine at a low speed (at about 20%)

of normal operation speed). Move the robot arm from the lower to the upper limit of the movable range with the 30 degree joint angle or more for about 10 minutes. After that, speed up the operation gradually. Please use the warm-up operation. (About the details of the warm-up operation, refer to "INSTRUC-TION MANUAL/Detailed explanations of functions and operations".)

- (5) The robot arm and controller must be grounded with 100Ω or less (class D grounding) to secure the noise resistance and to prevent electric shocks.
- (6) The items described in these specifications are conditions for carrying out the periodic maintenance and inspections described in the instruction manual.
- (7) If this robot interferes with the workpiece or peripheral devices during operation, the position may deviate, etc. Take care to prevent interference with the workpiece or peripheral devices during operation.
- (8) Do not attach a tape or a label to the robot arm and the controller. If a tape or a label with strong adhesive power, such as a packaging tape, is attached to the coated surfaces of the robot arm and controller, the coated surface may be damaged when such tape or label is peeled off.
- (9) If the robot is operated with a heavy load and at a high speed, the surface of the robot arm gets very hot. It would not result in burns, however, it may cause secondary accidents if touched carelessly.
- (10) Do not shut down the input power supply to stop the robot. If the power supply is frequently shut down during a heavy load or high-speed operation, the speed reducer may be damaged, backlash may occur, and the program data may be destroyed.
- (11) If something collides with body of the robot while it is in automatic operation mode (due to the origin being set incorrectly, for example), the casing or mechanisms such as reduction gears may need to be replaced. Contact Mitsubishi Electric or your local distributor for replacement parts. Continued use of the robot after a collision without inspecting or changing parts will increase the risk of damaging reduction gears or other mechanisms.
- (12) If power is interrupted the brakes will be applied. In which case, the arm may deviate from its original path if it is in automatic operation mode. Depending on the movement the robot is making at the time the power is interrupted, the robot arm may come into contact with the body of the robot. Take measures to ensure that dangerous situations do not arise from the arm interfering with peripherals.
 - Example) Installing a UPS (uninterruptible power supply unit) to the primary power source in order to reduce interference.
- (13) Do not conduct an insulated voltage test. If conducted by mistake, it may result in a breakdown.
- (14) Fretting may occur on the axis which moving angle or moving distance move minutely, or not moves. Fretting is that the required oil film becomes hard to be formed if the moving angle is small, and wear occurs. The axis which not moved is moving slightly by vibration etc. To make no fretting recommends to move these axes about once every day the 30 degree or more, or the 20mm or more.
- (15) The United Nations' Recommendations on the Transport of Dangerous Goods must be observed for transborder transportation of lithium batteries by air, sea, and land. The lithium batteries (ER6V) used in Mitsubishi industrial robots contain lithium and fall under the definition. When the lithium batteries are shipped for storage, etc., they will be classified as Class 9: Miscellaneous dangerous substances and articles. Please contact your transportation company and must provide appropriate transport safety measures as the customer's consignor.
- (16) If the air supply temperature (primary piping) used for the tool etc. is lower than ambient air temperature, the dew condensation may occur on the coupling or the hose surface.
- (17) When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products. Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.

6.4 EMC installation guideline

6.4.1 Outlines

Industrial robots are one of the components of automation systems as well as main components. This section introduces methods and parts to ensure electromagnetic compatibility (EMC) in automation systems. We test for EMC in the environment described in this manual, but the noise level varies depending on device types, layout, control panel structure, and wiring, etc. Please make final checks for EMC.

6.4.2 EMC

EMC can be broadly classified into two categories: EMI and EMS.

(1) Emission (EMI: Electromagnetic Interference)......The capacity not to generate the disturbance noise which has a bad influence outside.

(2) Immunity (EMS: Electromagnetic Susceptibility)....The capacity which does not malfunction for the disturbance noise from the outside.

Each contents are shown below.

Item	Name	Contents	
Emission (EMI)	Radiative noise disturbance	The electromagnetic noise etc. which are emitted to environs.	
	Electrical-conduction noise disturbance	The electromagnetism noise etc. which flow out of the power-supply line.	
Immunity	Electrostatic discharge immunity test	The noise from the electrified human body.	
(EMS)	Radiated, radio-frequency, electromagnetic field immunity test susceptibility test	The electromagnetism noise from the transceiver, the broadcasting station, etc.	
	Electrical fast transient burst immunity test	The relay noise or the electromagnetism noise etc. which are caused in power-supply ON/OFF.	
	Immunity to conducted distrurbances induced radio-frequency fields	The electromagnetism noise etc. which flow in through the power source wire and the grounding wire.	
	Power frequency magnetic field immunity test	The electromagnetism noise with a power supply frequency of 50/60 Hz etc.	
	Voltage dips, short interruptions and voltage vari- ations immunity test	The noise in the variation of the source voltage of the power dispatching, etc.	
	Surge immunity test	The electromagnetism noise by the thunderbolt, etc.	

6.4.3 EMC measures

There are mainly following items in the EMC measures.

- (1) Store into the sealed metal board.
- (2) Grounding all the conductor that have floated electrically (makes the impedance low).
- (3) Wiring so that the power source wire and signal wire are separated.
- (4) Use the shield cable for the cable which wired outside of the metal board.

(5) Install the noise filter.

- To suppress the noise emitted out of the board, be careful of the following item.
- (1) Ensure grounding of the equipment.
- (2) Use the shield cable.
- (3) Separate the metal board electrically. Narrows the distance/hole.

The strength of electromagnetic noise emitted to environment is changed a lot by the shielding efficiency of cable and the distance of metal board, so it should be careful.

6.4.4 Example of EMC measures

Industrial robots are designed for use with other devices. We test our industrial robots for conformity with EMC standards in the following system architecture. However, it does not mean that every system meets the requirements of EMC standards.

Electromagnetic compatibility depends on the relationship between the industrial robot and devices in the system, wiring conditions, layout, or other factors. Therefore, check whether the entire machinery/system meets the requirements.



Fig.6-7: Example of EMC measures

- 1) Attach the shield tube <3> to the machine cable and ground both ends of the tube.
- 2) Install the ferrite cores <5> and <6> on the shield tube.
- 3) Install the ferrite cores <4> on the cable of the teaching pendant.
- 4) Attach the noise filters <2> and surge protector <1> to the power cable.
- 5) Install the ferrite cores <4> on the RIO cable of the safety extension unit.

No.	Item	Model	Quantity	Manufacturer	Remarks
1	Surge protector	RSPD-250-Q4	1	OKAYA ELECTRIC INDUSTRIES CO., LTD.	-
2	Noise filter	SUP-EL15-ER6	2	OKAYA ELECTRIC INDUSTRIES CO., LTD.	-
3	Shield tube	MTFX40	1	Zippertubing (Japan), Ltd.	-
4	Ferrite core	E04SR301334	5	SEIWA ELECTRIC MFG CO.Ltd	-
5	Ferrite core	GTEC41-27-16	3	KITAGAWA INDUSTRIES CO. I TD	Install them on the
6		011 041-27-10	3		shield tube.

Table 6-4: Parts for EMC measures

6.4.5 Parts for EMC measures

For details on the parts for EMC measures described on Page 110, "6.4.4 Example of EMC measures", contact your nearest Mitsubishi branch or dealer.

7 Appendix

Appendix 1: Inertia calculation method

An allowable moment of inertia in the mechanical interface at the tip of the robot arm is determined. If a load exceeding the allowable moment of inertia is put, on the tip of the arm, vibration during operation and an overload alarm may occur. Therefore, consider the matching/appropriateness of the hand and load to be mounted on the tip of the arm for the robot specifications when you select a robot. The following describes the load inertia calculation method.

For the vertical articulated robot, consider the load moment and the load inertia on the wrist axes (J4 to J6 axes). To consider them, calculate the load moment and load inertia applied on each of J4 to J6 axes in consideration of the posture of the hand and workpiece. The following figures show the examples.

(1) Load moment calculation example (for J5 axis with flange facing downwards)

The items shown in the right picture a	are defined as follows.	
Hand mass	: W1 (kg)	
Center of gravity of the hand	: L1 (m)	
Workpiece mass	: W2 (kg)	
Center of gravity of the workpiece	: L2 (m)	
The load moment applied to the J5 at	xis is calculated as follows.	
Where g is gravitational acceleration	(m/s ²).	

Load moment about the J5 axis : M (Nm) = W1 × L1 × g + W2 × L2 × g

Check that the value of M is equal to or less than the allowable load moment of the target model.



(2) Load inertia calculation example (for J6 axis)

The items shown in the right picture are defined as follows.				
Hand mass : W1 (kg				
Distance between the center of J6 axis and				
the center of gravity of the hand : L1 (m)				
Workpiece mass : W2 (kg)				
Center of gravity of the workpiece : L2 (m)				

Assume that both hand and workpiece are rectangle. When their surface areas

can be expressed as follows, respectively: a1 × b1,

and $a2 \times b2$ (where a = height, b = width), the load inertia about the J6 axis is calculated as follows.

- Load inertia about the J6 axis of the hand : I1 (kg•m²) = $Iz_1 + W_1 \times L_{1^2} = W_1 \times (a_{1^2} + b_{1^2})/12 + W_1 \times L_{1^2}$
- Load inertia about the J6 axis of the workpiece : l2 (kg•m²) = $Iz_2 + W_2 \times L_{2^2} = W_2 \times (a_{2^2} + b_{2^2})/12 + W_2 \times L_{2^2}$

Total load inertia about the J6 axis of both hand and workpiece : $I (kg \cdot m^2) = I_1 + I_2$ Check that the value of I is equal to or less than the allowable load moment of the target model.

Note) When the robot changes its posture significantly in a direction other than the vertical downward direction, check the load moment inertia about the J4 axis as well.



Appendix 2: Classification of external I/O functions

Take note of the following information regarding external I/O functions.

Table 7-1: Classification	of external	I/O functions
---------------------------	-------------	---------------

Classification	Function	Description	
Safety signals	Emergency stop input	This function detects emergency stop inputs. The safety diagnosis function for the emergency stop input circuit makes the STO function meet the requirements of SIL 3, Category 4, PL e. At factory settings, the STO function meets the requirements of SIL 2, Category 3, PL d. To make the STO function meet the requirements of SIL 3, Category 4, PL e, change the parameter setting by referring to Page 113, "Appendix 3: Safety diagnosis function (test pulse diagnosis)".	
	Mode selector switch input	This function switches the control mode between manual and automatic.	
	Door switch input	This function checks the state of machine guard door switches to detect whether machine guard doors are open.	
Non-safety signals	Emergency stop output	This function monitors the emergency stop state of the robot.	
	Mode output	This function monitors the manual and automatic operation modes.	
	Robot error output	This function monitors the error state of the robot.	

Appendix 3: Safety diagnosis function (test pulse diagnosis)

The Safety diagnosis function checks the emergency stop status of the robot using the pulse output from the emergency stop signals (EXTEMG11, EXTEMG21). By changing the settings of TPOEMG, off pulses can be output regularly from EXTEMG11 and EXTEMG21. The width of the pulses that are output is approximately 20 ms. By checking the robot controller test pulses regularly, it is possible to ascertain whether the emergency stop line is working properly.

When using this function, connect emergency stop switches by seeing Fig. 7-2.

Make sure to prevent test pulses of this function from causing faulty operation of peripheral devices.



Fig.7-1: Test pulse diagnosis

Table 7-2: Parameter details

Item	Description		
Parameter name	TPOEMG		
Function	This enables configuring the pulse output function for outputting test pulse signals from emergency stop ports (EXTEMG11, EXTEMG21).		
What parameter settings means	0: Outputs no test pulses 1: Outputs test pulses		
Default	0		



Fig.7-2: How to wire emergency stop lines

Appendix 4: Safety block diagram



Fig.7-3: Safety block diagram

Appendix 5: Connections of recommended hands, recommended vision sensors and the force sensor

This section explains the connections of recommended hands (all types), recommended vision sensors, and the force sensor.

∧CAUTION

When using a vision sensor, prevent the J5 and J6 axes from being at the following angles during Joint free mode (direct teaching). J5 axis: +95° or more J6 axis: ±20° or more

(1) Hand: Co-act EGP-C40 N-N-Assista (Manufactured by SCHUNK)

Fig. 7-4 shows the connection details of a hand, vision sensor, and force sensor.

The items required depend on which devices are used.

Table 7-3 lists the items required for using each device. Purchase the relevant options. For details on the steps of mounting devices, refer to their Instruction Manuals.

Fig. 7-5 shows the overall view of the robot with a hand and vision sensor mounted.

Fig. 7-6 shows the wiring of a hand and vision sensor to the robot.



Fig.7-4: Connection details of the hand (Co-act EGP-C40 N-N-Assista)

Table 7-3: List of the items required to use the hand (Co-act EGP-C40 N-N-Assista),	vision sensor,	and
force sensor		

		Device used		(o: Required, -: Not required)		
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
1	Mechanical interface					
2	Hand connector cable	0	0	0	0	- (End of the robot
3	Vision sensor connector cable	0	0	0	0	arm)
4	Force sensor connector cable					

		Device used		(o: Required, -: Not required)		
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
5	Hand bracket					
6	Screw for installing hand brackets					
7	Positioning pin for hand brack- ets					
8	Adapter plate					
9	Positioning pin for adapter plates	0	0	0	0	Co-act EGP-C40 N- N-Assista
10	Hand	0	Ŭ	Ŭ,	Ŭ	(Manufactured by SCHUNK)
11	Screw for mounting hands (inserted into the hand)					
12	Positioning collar for hands (attached to two screws of No.11)					
13	Hand connector cable					
14	Fingers					
15	Vision sensor mounting bracket					1F-ASSISTA-
16	Screw for installing vision sen- sor mounting brackets (M4 hex socket screw x 2)	-	0	-	0	(Manufactured by Mitsubishi Electric)
17	Vision sensor					VS80M-202,
18	Screw for mounting vision sen- sors (M3 hex socket screw x 4)	-	O	-	O	(Manufactured by Mitsubishi Electric) In-Sight 8402M- 363-50, In-Sight 8402M-373-50 (Manufactured by Cognex)
19	Vision sensor mounting adapter					
20	Positioning pin for sensor mounting adapters (φ5 pin x 1)					
21	Force sensor					4F-FS002H-W200
22	Screw for mounting force sen- sors (inserted into the force sen- sor, M6 hex socket screw x 4)	-	-	0	0	(Manufactured by Mitsubishi Electric)
23	Positioning pin for force sen- sors (φ3 pin x 2)					
24	Force sensor conversion cable	-	-	0	0	1F-ASSISTA- ADCBL (Manufactured by Mitsubishi Electric)

		Device used		(o: Required, -: Not required)		
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
25	Flange for connecting force sensors to adapter plates					
26	Screw for mounting flanges to connect force sensors to adapter plates					-
27	Positioning pin for flanges to connect force sensors to adapter plates	_	_	0	0	(Fabrication required) ^{Note1)}
28	Screw for mounting flanges to connect force sensors to adapter plates					

Note1) For information on hands, refer to Page 10, "1.4.5 Recommended hands" and contact the manufacturer.



Fig.7-5: Overall view of the robot with the hand (Co-act EGP-C40 N-N-Assista) and a vision sensor mounted

Vision sensor connector cable



Fig.7-6: Wiring of the hand (Co-act EGP-C40 N-N-Assista) and a vision sensor to the robot

Check that the cable fixed with a cable tie does not cross the dotted line as shown in the figure below.



To prevent interference with peripheral equipment due to cable sag when attaching the hand, adjust the hand connector angle and cable sag by referring to the figure below.



(2) Hand: HRC-03-099455 (Manufactured by Zimmer Group)

Fig. 7-7 shows the connection details of a hand, vision sensor, and force sensor.

The items required depend on which devices are used.

Table 7-4 lists the items required for using each device. Purchase the relevant options. For details on the steps of mounting devices, refer to their Instruction Manuals.

Fig. 7-8 shows the overall view of the robot with a hand and vision sensor mounted.

Fig. 7-9 shows the wiring of a hand and vision sensor to the robot.



Fig.7-7: Connection details of the hand (HRC-03-099455)

Table 7-4: List of the items required to use the hand	(HRC-03-099455), vision sensor, and force sensor
---	--

		De	Device used (o: F		(o: Required, -: Not required)	
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
1	Mechanical interface					
2	Hand connector cable		<u></u>		0	- (End of the robot
3	Vision sensor connector cable	0	0	0	0	arm)
4	Force sensor connector cable					

		De	evice used	(o: Required	, -: Not required)	
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
5	Hand bracket					
6	Screw for installing hand brackets					
7	Positioning pin for hand brack- ets					
8	Adapter plate					
9	Positioning pin for adapter plates	0	0	0	0	(Manufactured by Zimmer Group)
10	Hand					
11	Screw for mounting hands					
12	Positioning pin for hands					
13	Hand connector cable					
14	Fingers					
15	Vision sensor mounting bracket					1F-ASSISTA-
16	Screw for installing vision sen- sor mounting brackets (M4 hex socket screw x 2)	-	0	-	0	(Manufactured by Mitsubishi Electric)
17	Vision sensor					VS80M-202,
18	Screw for mounting vision sen- sors (M3 hex socket screw x 4)	-	o	-	o	VS80M-202-R (Manufactured by Mitsubishi Electric) In-Sight 8402M- 363-50, In-Sight 8402M-373-50 (Manufactured by Cognex)
19	Vision sensor mounting adapter					
20	Positioning pin for sensor mounting adapters (φ5 pin x 1)					
21	Force sensor					4F-FS002H-W200
22	Screw for mounting force sen- sors (inserted into the force sen- sor, M6 hex socket screw x 4)	-	-	0	0	Mitsubishi Electric)
23	Positioning pin for force sen- sors (φ3 pin x 2)					
24	Force sensor conversion cable	-	-	0	0	1F-ASSISTA- ADCBL (Manufactured by Mitsubishi Electric)

		De	evice used	(o: Required	, -: Not required)	
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
25	Flange for connecting force sensors to adapter plates					
26	Screw for mounting flanges to connect force sensors to adapter plates					-
27	Positioning pin for flanges to connect force sensors to adapter plates	-	-	0	0	(Fabrication required) ^{Note1)}
28	Screw for mounting flanges to connect force sensors to adapter plates					

Note1) For information on hands, refer to Page 10, "1.4.5 Recommended hands" and contact the manufacturer.



Fig.7-8: Overall view of the robot with the hand (HRC-03-099455) and a vision sensor mounted



Fig.7-9: Wiring of the hand (HRC-03-099455) and a vision sensor to the robot

Check that the cable fixed with a cable tie does not cross the dotted line as shown in the figure below.



(3) Hand: KIT-ASSISTA-G (Manufactured by GIMATIC)

Fig. 7-10 shows the connection details of a hand, vision sensor, and force sensor.

The items required depend on which devices are used.

Table 7-5 lists the items required for using each device. Purchase the relevant options. For details on the steps of mounting devices, refer to their Instruction Manuals.

Fig. 7-11 shows the overall view of the robot with a hand and vision sensor mounted.

Fig. 7-12 shows the wiring of a hand and vision sensor to the robot.



Fig.7-10: Connection details of the hand (KIT-ASSISTA-G)

Table 7-5: List of the items required to use the hand (KIT-ASSISTA-G), vision sensor, and force sensor

		De	Device used (o: Required, -: Not required)			
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
1	Mechanical interface					
2	Hand connector cable	0	<u>_</u>		0	- (End of the robot
3	Vision sensor connector cable	0	0	0	0	arm)
4	Force sensor connector cable					

		Device used		(o: Required, -: Not required)						
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model				
5	Hand bracket									
6	Screw for installing hand brackets									
7	Positioning pin for hand brack- ets									
8	Adapter plate 1									
9	Positioning pin for adapter plate 1									
10	Adapter plate 2	0	0	0	0	(Manufactured by				
11	Screw for mounting adapter plate 2					GIMATIC)				
12	Positioning pin for adapter plate 2									
13	Hand									
14	Screw for mounting hands									
15	Positioning pin for hands									
16	Hand connector cable									
17	Fingers	0	0	0	0	- (Fabrication required) ^{Note1)}				
18	Vision sensor mounting bracket					1F-ASSISTA-				
19	Screw for installing vision sen- sor mounting brackets (M4 hex socket screw x 2)	-	0	-	0	(Manufactured by Mitsubishi Electric)				
20	Vision sensor					VS80M-202,				
21	Screw for mounting vision sen- sors (M3 hex socket screw x 4)	-	0	-	0	VS80M-202-R (Manufactured by Mitsubishi Electric) In-Sight 8402M-				
						363-50, In-Sight 8402M-373-50 (Manufactured by Cognex)				
22	Vision sensor mounting adapter									
23	Positioning pin for sensor mounting adapters (φ5 pin x 1)									
24	Force sensor					4F-FS002H-W200				
25	Screw for mounting force sen- sors (inserted into the force sen- sor, M6 hex socket screw x 4)	-	-	-	-	-	-	0	0	(Manufactured by Mitsubishi Electric)
26	Positioning pin for force sen- sors (φ3 pin x 2)									
27	Force sensor conversion cable	-	-	0	0	1F-ASSISTA- ADCBL (Manufactured by Mitsubishi Electric)				

		De	evice used	(o: Required	, -: Not required)	
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
28	Flange for connecting force sensors to adapter plates					
29	Screw for mounting flanges to connect force sensors to adapter plates					-
30	Positioning pin for flanges to connect force sensors to adapter plates	-	-	0	0	(Fabrication required) ^{Note2)}
31	Screw for mounting flanges to connect force sensors to adapter plates					

Note1) Refer to "Fig. 7-13: Opening and closing of the hand" and position fingers correctly.

Note2) For information on hands, refer to Page 10, "1.4.5 Recommended hands" and contact the manufacturer.



Fig.7-11: Overall view of the robot with the hand (KIT-ASSISTA-G) and a vision sensor mounted





Check that the cable fixed with a cable tie does not cross the dotted line as shown in the figure below.



≜CAUTION

To prevent interference with peripheral equipment due to cable sag when attaching the hand, adjust the hand connector angle and cable sag by referring to the figure below.



Fingers must be created and attached to the hand (KIT-ASSISTA-G). Refer to the following figure "Opening and closing of the hand" and position fingers correctly.

In the initial settings, the electric hand opens upon power on. Keep in mind that workpieces may drop in certain conditions.

Hand open





Fig.7-13: Opening and closing of the hand (KIT-ASSISTA-G)

(4) Hand: ROB-SET ECBPM ASSISTA (Manufactured by SCHMALZ)

Fig. 7-14 shows the connection details of a hand, vision sensor, and force sensor.

The items required depend on which devices are used.

Table 7-6 lists the items required for using each device. Purchase the relevant options. For details on the steps of mounting devices, refer to their Instruction Manuals.

Fig. 7-15 shows the overall view of the robot with a hand and vision sensor mounted.

Fig. 7-16 shows the wiring of a hand and vision sensor to the robot.



Fig.7-14: Connection details of the hand (ROB-SET ECBPM ASSISTA)

Table 7-6: List of the items required to use the	hand (ROB-SET ECBPN	1 ASSISTA), vis	ion sensor, a	and force
sensor				

		De	Device used (o: Requ		, -: Not required)		
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model	
1	Mechanical interface						
2	Hand connector cable	nector cable		0	0	- (End of the robot	
3	Vision sensor connector cable		0			arm)	
4	Force sensor connector cable						

		Device used		(o: Required, -: Not required)		
No.	Name	Hand only	Hand and vision sensor	Hand and force sensor	Hand, vision sensor, and force sensor	Model
5	Hand bracket					
6	Screw for installing hand brackets					
7	Positioning pin for hand brack- ets					
8	Flange with cable					
9	Screw for attaching the flange with cable	0	0	0	0	ROB-SET ECBPM ASSISTA (Manufactured by
10	Positioning pin for the flange with cable					SCHMALZ)
11	Hand					
12	Screw for mounting hands					
13	Hand connector cable					
14	Suction pad					
15	Distance plate					-
16	Positioning pin for distance plates	-	-	0	0	(Fabrication required) ^{Note1)}
17	Vision sensor mounting bracket					1F-ASSISTA-
18	Screw for installing vision sen- sor mounting brackets (M4 hex socket screw x 2)	-	0	-	0	(Manufactured by Mitsubishi Electric)
19	Vision sensor					VS80M-202,
20	Screw for mounting vision sen- sors (M3 hex socket screw x 4)	-	0	-	0	VS80M-202-R (Manufactured by Mitsubishi Electric) In-Sight 8402M- 363-50, In-Sight 8402M-373-50 (Manufactured by Cognex)
21	Force sensor					
22	Screw for mounting force sen- sors ((inserted into the force sen- sor, M6 hex socket screw x 4))	-	-	0	0	4F-FS002H-W200 (Manufactured by Mitsubishi Electric)
23	Positioning pin for force sen- sors (φ3 pin x 2)					
24	Force sensor conversion cable	-	-	0	0	1F-ASSISTA- ADCBL (Manufactured by Mitsubishi Electric)

Note1) Select the screw No. 9 suitable for the distance plate.



Fig.7-15: Overall view of the robot with the hand (ROB-SET ECBPM ASSISTA) and a vision sensor mounted



Vision sensor connector cable

Fig.7-16: Wiring of the hand (ROB-SET ECBPM ASSISTA) and a vision sensor to the robot

Check that the cable fixed with a cable tie does not cross the dotted line as shown in the figure below.





To prevent interference with peripheral equipment due to cable sag when attaching the hand, adjust the hand connector angle and cable sag by referring to the figure below.



Appendix 6: Declaration of Conformity

The latest version of the Declaration of Conformity (hardcopy) is included with the product.

EU DECLARATION OF INCORPORATION OF PARTLY COMPLETE MACHINERY (Machinery Directive) We, Manufacturer Manufacturer MITSUBISHI ELECTRIC CORPORATION Address CORPORATION OF PARTLY COMPLETE MACHINERY (Machinery Directive) We, Manufacturer MITSUBISHI ELECTRIC CORPORATION Address CORPORATION OF PARTLY COMPLETE MACHINERY (Place of Declare) Brand Name Manufacturer CORPORATION OF PARTLY COMPLETE MACHINERY (Place of Declare) Declamation of Declare) Declamation Manufacturer Mathematical Standard Optimetive 2014/30/EU EN 6100-64.2007/A1:2011 EN 6100-64.2007/A1:2012 EN 6100-64.2007/A1:2011 Mathematical Standard Mathematical Standard Mathematical Standard Mathematical Standard Mation 1200-64.2007/A1:2011	ELLDEC			PoHS Directiv	2)
We, Manufacturer MITSUBISHI ELECTRIC CORPORATION Address TOKYO 100-8310, JAPAN (Place of Declare) Brand Name Image: Comparison of the state of	EU DECLARA	ATION OF INCORP	ORATION OF PARTLY COM	PLETE MACH	INERY
Manufacturer MITSUBISHI ELECTRIC CORPORATION Address TOKYO 100-8310, JAPAN (Place of Declare) Brand Name Brand Name Imsubsch Cectare under our sole responsibility that the product Description Description E. Industrial environment only Cectare under our sole responsibility that the product Description Description E. Industrial environment only To which this declaration relates is in conformity with the following standard and directive. Notifie EMC Directive 2014/30/EU EN 61000-64:2007/A1:2011 EN 61000-2.2006 EN 61000-3204/A1:2012 Notifie Machinery Directive 2006/42/EC EN 180 2100:2010 Notifie Machinery Directive 2006/42/EC EN 50 12010:2010 EN 50 13849-12016 EN SIG 0138-12010 EN 180 2136:2015 EN 180 2136:2015 EN 180 2136:2015 EN SIG 01380-2015 EN 180 2131:2000 EN 1349:132000 Identification NU 1 TUY SUD Product Service GmbH, Ridlerstrasse 65 80339 Muenchol 0123 Essential requirements of Machinery Directive are applied and fulfilled and the relevant technical docur complex that applicable heath and safety requirements of the Machinery Directive sections 1.1.3, 1.1.5.1.1.5.	We,	(M	achinery Directive)		
Address : TOKYO 100-8310, JAPAN (Place of Declare) Brand Name :	Manufactur	rer : MITS	UBISHI ELECTRIC CORPOR	ATION	
Brand Name Immediation declare under our sole responsibility that the product Description Industrial robot Type of Model :: AS (See appendix) Notice :: Refer to Appendix for each type name Eor industrial environment only to which this declaration relates is in conformity with the following standard and directive. Directive 2014/30/EU EN 61000-64:2001 ENC Directive 2014/30/EU EN 61000-64:2001 Machinery Directive 2006/42/EC EN 150 0210:1:2011 Machinery Directive 2006/42/EC EN 150 0210:1:2011 EN 150 02100:2010 EN 150 0210:1:2011 EN 150 02100:2010 EN 150 0210:1:2009 EN 150 03840-1:2010 EN 150 03840-1:2009 EN 150 03840-1:2009 EN 150 0380:2015 EN 150 041/4:2010 EN 50581:2012 This declaration is based on the conformity assessment of following Notified Body No Name and Address In accordance with part B of Anex VII of Machinery Directive. TUV SÜD Product Service GmbH, Ridlerstrasse 65 80339 Muenchen 0123 Essential requirements of Machinery Directive are applied and fulfiled and the relevant technical docur complied in accordance with part B of Anex VII of Machin	Address (Place of D	: TOK) Declare)	(O 100-8310, JAPAN		
declare under our sole responsibility that the product Description : Industrial robot Type of Model :: AS (See appendix) Notice : Refer to Appendix for each type name For industrial environment only to which this declaration relates is in conformity with the following standard and directive. Directive 2014/30/EU ENC Directive 2014/30/EU Harmonized Standard Notifie Machinery Directive 2006/42/EC EN 61800-3:2004/A1:2011 EN 61800-3:2005 Image: Control of the standard of the standar	Brand Nam	1e : 📩	MITSUBISHI ELECTRIC		
Directive 2014/30/EU Harmonized Standard Notifie EMC Directive 2014/30/EU EN 61000-6-4:2007/A1:2011 Intervent of the text of the text of the text of tex of text of text of tex of tex of text of text of tex	declare under our s Description Type of Mo Notice to which this declar	ole responsibility tha i Indus idel : AS (S : Refer For ir ation relates is in cor	t the product trial robot See appendix) to Appendix for each type nar idustrial environment only formity with the following stan	ne dard and direc	tive.
Elicit Directive 2014/30/ED Elix 61000-6-2:2007 Machinery Directive 2006/42/EC EN 150 1210:2010 En 150 1210:2010 EN 150 13849-1:2015 IsO/TS 15066:2016 EN 60204-1:2006/A1:2009 EN 150 13849-1:2015 IsO/TS 15066:2016 EN 150 13849:1:2012 EN 150 518:2012 EN 490:093/A1:2009 En 150 518:2012 En 150 518:2012 EN 60581:2012 EN 50 551:2012 EN 60581:2012 En 150 VSÜD Product Service GmbH,Ridlerstrasse 65 80339 Muenchen 0123 Essential requirements of Machinery Directive are applied and fulfilled and the relevant technical docurr compiled in accordance with part B of Annex VII of Machinery Directive. The product above compiles with all applicable health and safety requirements of the Machinery Directive sections 1.1.3, 1.1.5, 1.2.1, 1.2.3, 1.2.5, 1.2.6, 1.3.2, 1.3.3, 1.3.4, 1.3.8.1, 1.3.9, 1.5.1, 1.5.2, 1.5.4-1.5.10, 1.1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.3, 1.7.4. If National authorities require relevant information on this product by rational reasons, we transmit its informatil. This product must not be put into service until the final machinery into which it is to be incorporated has bee in conformity with Machinery Directive.	Directive EMC Directive	2014/30/EU	Harmonized Standard		Notified Bo
Machinery Directive 2006/42/EC EN ISO 1210:2010 EN ISO 1210:2010 EN ISO 1210:2010 EN ISO 1210:2011 EN ISO 13849-1:2015 ISO/TS 15066:2016 EN ISO 4114:2010 EN ISO 4114:2010 EN ISO 4414:2010 EN ISO 561:2012 EN 60264:1:2009 This declaration is based on the conformity assessment of following Notified Body No. Name and Address Identification Nu 1 TUV SUD Product Service GmbH,Ridlerstrasse 65 80339 Muenchen 0123 Essential requirements of Machinery Directive are applied and fulfilled and the relevant technical docur compiled in accordance with part B of Annex VII of Machinery Directive. The product above complies with all applicable health and safety requirements of the Machinery Directive sections 1.1.3, 1.1.5, 1.2.1, 1.2.3, 1.2.5, 1.3.2, 1.3.3, 1.3.4, 1.3.8.1, 1.3.9, 1.5.1, 1.5.2, 1.5.4-1.5.10, 1.1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.3, 1.7.4. If National authorities require relevant information on this product by rational reasons, we transmit its informatil. This product must not be put into service until the final machinery into which it is to be incorporated has bee in conformity with Machinery Directive. Authorized representative in Europe MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 1	ENIC Directive	2014/30/EU	EN 61000-6-4:2007/A1:2017 EN 61000-6-2:2005 EN 61800-3:2004/A1:2012 (Category C2, Second Environm	ent)	
RoHS Directive 2011/65/EU EN 50581:2012 EN 50581:2012 EN 62321:2009 This declaration is based on the conformity assessment of following Notified Body No. Name and Address Identification Nu 1 TÜV SÜD Product Service GmbH,Ridlerstrasse 65 80339 Muenchen 0123 Essential requirements of Machinery Directive are applied and fulfilled and the relevant technical docum compiled in accordance with part B of Annex VII of Machinery Directive. 1 1.5, 1.2, 1.2, 3, 1.2, 5, 1.2, 6, 1.3, 2, 1.3, 3, 1.3, 4, 1.3, 8, 1, 1.3, 9, 1.5, 1, 1.5, 2, 1.5, 4-1, 5, 10, 1.4, 1.6, 2, 1.6, 3, 1.6, 4, 1.7, 1.1, 1.7, 3, 1.7, 4. If National authorities require relevant information on this product by rational reasons, we transmit its informali. This product must not be put into service until the final machinery into which it is to be incorporated has been in conformity with Machinery Directive. Authorized representative in Europe MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 13 Apr. 2020 Signed for and on behalf of Signed for and on behalf of	Machinery Directive	2006/42/EC	EN ISO 12100:2010 EN ISO 10218-1:2011 EN ISO 10218-1:2011 ISO/TS 15066:2016 EN 60204-1:2006/A1:2009 EN ISO 4414:2010 EN ISO 43850:2015 EN ISO 13850:2015 EN 349-1993/A1:2008		_
This declaration is based on the conformity assessment of following Notified Body No. Name and Address Identification Nu 1 TÜV SÜD Product Service GmbH,Ridlerstrasse 65 80339 Muenchen 0123 Essential requirements of Machinery Directive are applied and fulfilled and the relevant technical docum compiled in accordance with part B of Annex VII of Machinery Directive. The product above complies with all applicable health and safety requirements of the Machinery Directive sections 1.1.3, 1.1.5, 1.2.1, 1.2.3, 1.2.5, 1.2.6, 1.3.2, 1.3.3, 1.3.4, 1.3.8.1, 1.3.9, 1.5.1, 1.5.2, 1.5.4-1.5.10, 1.4. 16 National authorities require relevant information on this product by rational reasons, we transmit its informatil. This product must not be put into service until the final machinery into which it is to be incorporated has been in conformity with Machinery Directive. Authorized representative in Europe MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 13 Apr. 2020 Signed for and on behalf of Xigned for and on behalf of	RoHS Directive	2011/65/EU	EN 50581:2012 EN 62321:2009		_
No. Name and Address Identification Nu 1 TÜV SÜD Product Service GmbH,Ridlerstrasse 65 80339 Muenchen 0123 Essential requirements of Machinery Directive are applied and fulfilled and the relevant technical docum compiled in accordance with part B of Annex VII of Machinery Directive. 0123 The product above compiles with all applicable health and safety requirements of the Machinery Directive sections 1.1.3, 1.1.5, 1.2.1, 1.2.3, 1.2.5, 1.2.6, 1.3.2, 1.3.3, 1.3.4, 1.3.8.1, 1.3.9, 1.5.1, 1.5.2, 1.5.4-1.5.10, 1.4. 1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.3, 1.7.4. If National authorities require relevant information on this product by rational reasons, we transmit its informali. This product must not be put into service until the final machinery into which it is to be incorporated has been in conformity with Machinery Directive. Authorized representative in Europe MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 13 Apr. 2020 Signed for and on behalf of (Signeture) TAW MACMAL	This declaration is	based on the confor	mity assessment of following I	Notified Body	
 The root of the observation of the observation of the final machinery Directive and fulfilled and the relevant technical docum compiled in accordance with part B of Annex VII of Machinery Directive. The product above complies with all applicable health and safety requirements of the Machinery Directive sections 1.1.3, 1.1.5, 1.2.1, 1.2.3, 1.2.5, 1.2.6, 1.3.2, 1.3.3, 1.3.4, 1.3.8.1, 1.3.9, 1.5.1, 1.5.2, 1.5.4-1.5.10, 1.4.16.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.3, 1.7.4. If National authorities require relevant information on this product by rational reasons, we transmit its information. This product must not be put into service until the final machinery into which it is to be incorporated has been in conformity with Machinery Directive. Authorized representative in Europe MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 13 Apr. 2020 Signed for and on behalf of (Signeture) 	No. Name and Ad	dress	Ridlerstrasse 65 80339 Muen	Identific	ation Numbe
Authorized representative in Europe MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 13 Apr. 2020 Signed for and on behalf of (Signature) TAMU MACHINE, DATE	Compiled in accordan The product above c sections 1.1.3, 1.1.5, 1.6.2, 1.6.3, 1.6.4, 1.7 If National authorities mail. This product must no in conformity with Ma	to or interclinery Directive complies with all applica 1.2.1, 1.2.3, 1.2.5, 1.2.6 7.1.1, 1.7.3, 1.7.4 . s require relevant inform t be put into service unti chingry Directive	VII of Machinery Directive. ble health and safety requirements , 1.3.2, 1.3.3, 1.3.4, 1.3.8.1, 1.3.9, 1 lation on this product by rational re	to be incorporate	y Directive, ar 1.5.10, 1.5.16, nit its informa d has been de
MITSUBISHI ELECTRIC EUROPE B.V., German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Issue Date (Date of Declaration): 13 Apr. 2020 Signed for and on behalf of	Authorized represe	entative in Europe			
Signed for and on behalf of	MITSUBISHI ELEO Mitsubishi-Electric Issue Date (Date of	CTRIC EUROPE B.\ -Platz 1, 40882 Rat of Declaration): 13 Ap	/, German Branch ingen, Germany or. 2020		
(Signature) Tomu Attention,	Signed for and on	behalf of			
(Signature) [Toru Otsuka] General Manager, Robot Manufacturing Department MITSUBISHI ELECTRIC CORPORATION		on Otsu	kou		

Robot type	Robot model	
RV-5AS-D R	₹V-5AS-D	

Appendix 7: Specifications discussion material

■Customer information

	Company name	Name	
	Address	Telephone	
D	urchasod modal		

Purchased model

Type ^{Note1)}	Controller
RV-5AS-D	CR800-05VD

Note1) Refer to the Page 2, "1.2 Model type name of robot" for the details of the robot arm type name.

■Options (Installable after shipment)

		туре	Provision, and specifications when provided.		
Robot arm	Machine cable (replacement)	1F-□□UCBL-41	Fixed type: □Not provided □2m □10m		
	Solenoid valve set	1F-VD0□-01 1F-VD0□E-01	□Not provided 1F-VD0□-01 (Sink): □1 valve □2 valves 1F-VD0□E-01 (Source): □1 valve □2 valves		
	2-piece force sensor conversion cable set	1F-ASSISTA-ADCBL	□Not provided □Provided		
	Vision sensor mounting bracket	1F-ASSISTA-2DVSFLG	□Not provided □Provided		
Control-	Simple teaching pendant	R32TB-DD	□Not provided □7m □15m		
ler	Highly efficient teaching pendant	R56TB-□□	□Not provided □7m □15m		
	Parallel I/O interface	2D-TZ368/ 2D-TZ378	□Not provided 2D-TZ368(Sink type)/ □-1pc. □-2pc. 2D-TZ378(Source type)/□-1pc. □-2pc.		
	External I/O cable (For parallel I/O interface)	2D-CBL□□ (2D-TZ368/TZ378)	□Not provided □5m-()pc. □15m-()pc.		
	CC-Link interface	2D-TZ576	□Not provided □Provided		
	EtherNet/IP interface	2D-TZ535	□Not provided □Provided		
	PROFINET interface	2D-TZ535-PN	□Not provided □Provided		
	CC-Link IE Field interface	2F-DQ535	□Not provided □Provided		
	EtherCAT interface	2F-DQ535-EC	□Not provided □Provided		
	SD memory card	2F-2GBSD	□Not provided □Provided		
	RT ToolBox3	3F-14C-WINE	□Not provided □Windows7/8/8.1/10 English DVD-ROM		
	RT ToolBox3 mini	3F-15C-WINE	Not provided □Windows 7/8/8.1/10 English DVD-ROM		
	RT VisualBox	3G-30C-WINE	□Not provided □Windows 10 English CD-ROM		
	Easy-setup kit	4F-ASSISTA-SETUP-JP 4F-ASSISTA-SETUP-EU	For Japan/North America:		
Function	Force sensor set	4F-FS002H-W200	□Not provided □Provided		
extension	MELFA-3D Vision 3.0	3F-53U-WINM	□Not provided □Provided		

■Maintenance parts (Consumable parts) Maintenance parts □Backup batteries ER6V () pcs.

■Robot selection check list

Work description	□Material handling □Assembly □Machining L/UL □Sealing □Testing and inspection □Other ()					
Workpiece mass ()g	Hand mass ()g	Atmosphere □ General environment □ Oil mist: Confirm oil proof □ request (Oil name: □ Other () ^{Note1)} / □ not request)	
Remarks						

Note1) Refer to Page 17, "2.2.6 Protection specifications" about oil resistance.
MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN