

Cassette	Capacity	Applicable model	Comments
FX-EEPROM-16	16k steps	FX2N	EEPROM requires battery back-up, when using latched type devices.

- When attaching or detaching the memory cassette, turn off the main unit power source. Raise the pull lever when attaching or detaching.
- EEPROM is not initialized. When used for the first time, the CPU error LED may flicker.
Transfer or write a program directly, or write all NOP in on-line program mode using the FX-20P or FX-30P.
- After program transfer or write, be sure to verify and check. If an error is found, transfer and verify again.
- When writing a program, turn OFF the memory protect switch, but keep it in the ON position during ordinary operation.

- For CE details please see documentation supplied with FX Main Units.

Attention

- This product is designed for use in industrial applications.

Note

- Manufactured by: Mitsubishi Electric Corporation
2-7-3 Marunouchi, Chiyoda-ku, Tokyo,
100-8310 Japan
- Authorized Representative in the European Community:
Mitsubishi Electric Europe B.V.
Gothaer Str. 8, 40880 Ratingen, Germany

