



Programmable Controller

MELSEC iQ-F
series

MELSEC iQ-F
FX5 User's Manual (SLMP)

SAFETY PRECAUTIONS

(Read these precautions before use.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety in order to handle the product correctly.

This manual classifies the safety precautions into two categories: [⚠️ WARNING] and [⚠️ CAUTION].

 WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
 CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Depending on the circumstances, procedures indicated by [⚠️ CAUTION] may also cause severe injury.

It is important to follow all precautions for personal safety.

Store this manual in a safe place so that it can be read whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]

WARNING

- Make sure to set up the following safety circuits outside the PLC to ensure safe system operation even during external power supply problems or PLC failure. Otherwise, malfunctions may cause serious accidents.
 - (1) Note that when the CPU module detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the CPU module occurs in an input/output control block, output control may be disabled. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - Do not write any data to the "system area" of the buffer memory in an intelligent function module. Doing so may cause malfunction of the programmable controller system.
 - When executing control (data change) to a running other station programmable controller by connecting the external device to the SLMP compatible device, configure interlock circuits in the program of the other station programmable controller to ensure that the entire system operates safely at any time.

For other controls to a running other station programmable controller (such as program modification or operating status change), read relevant manuals carefully and ensure the safety before the operation. Especially, in the case of a control from an external device to a remote other station programmable controller, immediate action cannot be taken for a problem on the programmable controller due to a communication failure.

Determine the handling method as a system when communication failure occurs along with configuration of interlock circuit on other station PLC program, by considering external equipment and other station PLC.
 - Do not write any data into the "system area" or "write protect area" of the buffer memory in the SLMP compatible device or intelligent function module. Also, do not output (ON) any "use prohibited" signals among the signals which are output to the SLMP compatible device and intelligent function device. Executing data writing to the "system area" or "write protect area", or outputting "use prohibited" signals may cause malfunction of the programmable controller alarm.
-

[SECURITY PRECAUTIONS]

WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.
-

[STARTUP AND MAINTENANCE PRECAUTIONS]

WARNING

- Before modifying the program in operation, forcible output, running or stopping the PLC, read through this manual carefully, and ensure complete safety. An operation error may damage the machinery or cause accidents.
 - Do not change the program in the PLC from two or more peripheral equipment devices at the same time. (i.e. from an engineering tool and a GOT)
Doing so may cause destruction or malfunction of the PLC program.
-

[STARTUP AND MAINTENANCE PRECAUTIONS]

CAUTION

- Read relevant manuals carefully and ensure the safety before performing online operations (operation status change) with peripheral devices connected to the running SLMP compatible device or CPU modules of other stations. Improper operation may damage machines or cause accidents.
-

INTRODUCTION

This manual explains the specifications and settings related to the SLMP function of the MELSEC iQ-F Series.

It should be read and understood before attempting to install or use the module.

Always forward it to the end user.

Regarding use of this product

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Note

- If in doubt at any stage during the installation of the product, always consult a professional electrical engineer who is qualified and trained to the local and national standards. If in doubt about the operation or use, please consult the nearest Mitsubishi Electric representative.
- Since the examples indicated by this manual, technical bulletin, catalog, etc. are used as a reference, please use it after confirming the function and safety of the equipment and system. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.
- This manual content, specification etc. may be changed without a notice for improvement.
- The information in this manual has been carefully checked and is believed to be accurate; however, if you notice a doubtful point, an error, etc., please contact the nearest Mitsubishi Electric representative. When doing so, please provide the manual number given at the end of this manual.

CONTENTS

SAFETY PRECAUTIONS	1
INTRODUCTION	3
RELEVANT MANUALS	6
TERMS	7
CHAPTER 1 OUTLINE	10
1.1 Outline of SLMP	10
1.2 Features of SLMP	12
CHAPTER 2 SLMP DATA COMMUNICATION	14
2.1 Type and Application of the Data Communication Frame	14
2.2 Allowable Access Range of Each Data Communication Frame	15
SLMP frame	15
Access range	15
2.3 Concept of Control Procedure of SLMP	15
2.4 Access Timing of the Ethernet-equipped Module Side	16
2.5 Transfer Time	17
CHAPTER 3 MESSAGE FORMAT	18
3.1 3E Frame	18
Message format and control procedure	18
Application data specification items	25
Transfer data in character area	31
Character areas	36
3.2 1E Frame	43
Message format and control procedure	43
Application data specification items	48
Transfer data in character area	50
Character areas	55
CHAPTER 4 3E FRAME COMMANDS	59
4.1 List of Commands and Functions	59
4.2 Device Access	67
Commands	67
Device range	68
Device Read (Batch)	70
Device Write (Batch)	75
Device Read Random	78
Device Write Random	83
Device Read Block	91
Device Write Block	98
4.3 Remote Control	106
Before the remote operation	106
Remote RUN	106
Remote STOP	108
Remote PAUSE	108
Remote latch clear	109
Remote RESET	110

Processor type read	111
4.4 Clear Error	114
4.5 Self-Test	115
4.6 Remote Password Unlock or Lock	117
Lock	118
Unlock	119
CHAPTER 5 1E FRAME COMMANDS	121
5.1 List of Commands and Functions	121
5.2 Device Access	122
Commands	122
Device range	123
Batch Reading	124
Batch Writing	127
Test (Random Write)	129
5.3 Remote Control	134
Before the remote operation	134
Remote RUN	134
Remote STOP	135
5.4 Read PC Type Name	136
5.5 Loopback Test	137
CHAPTER 6 TROUBLESHOOTING	139
APPENDIX	141
Appendix 1 Device Memory Extension Specification	141
Access to module access device	141
Access with indirect specification of the device No. by using index register or long index register	144
Access with indirect specification of the device No. by using the values stored in word device	149
Appendix 2 Command Comparison between MC Protocol and SLMP	152
Appendix 3 CPU Module Processing Time of SLMP	153
Appendix 4 Added and Enhanced Functions	155
INDEX	156
REVISIONS	158
WARRANTY	159
TRADEMARKS	160

RELEVANT MANUALS

Manual name <manual number>	Description
MELSEC iQ-F FX5 User's Manual (Startup) <JY997D58201>	Describes the performance specifications, procedures before operation, and troubleshooting of the FX5 CPU module.
MELSEC iQ-F FX5UJ User's Manual (Hardware) <SH-082206ENG>	Describes the details of hardware of the FX5UJ CPU module, including input/output specifications, wiring, installation, and maintenance.
MELSEC iQ-F FX5U User's Manual (Hardware) <JY997D55301>	Describes the details of hardware of the FX5U CPU module, including input/output specifications, wiring, installation, and maintenance.
MELSEC iQ-F FX5UC User's Manual (Hardware) <JY997D61401>	Describes the details of hardware of the FX5UC CPU module, including input/output specifications, wiring, installation, and maintenance.
MELSEC iQ-F FX5 User's Manual (Application) <JY997D55401>	Describes the basic knowledge required for program design, functions of the CPU module, devices/labels, and parameters.
MELSEC iQ-F FX5 Programming Manual (Program Design) <JY997D55701>	Describes the specifications of ladder, ST, FBD/LD, and SFC programs, and labels.
MELSEC iQ-F FX5 Programming Manual (Instructions, Standard Functions/Function Blocks) <JY997D55801>	Describes the specifications of instructions and functions that can be used in programs.
MELSEC iQ-F FX5 User's Manual (Serial Communication) <JY997D55901>	Describes the N:N network, Parallel link, MELSEC Communication protocol, inverter communication, non-protocol communication, and predefined protocol support.
MELSEC iQ-F FX5 User's Manual (MELSEC Communication Protocol) <JY997D60801>	Explains methods for the device that is communicating with the CPU module by MC protocol to read and write the data of the CPU module.
MELSEC iQ-F FX5 User's Manual (MODBUS Communication) <JY997D56101>	Describes the MODBUS serial communication and MODBUS/TCP communication.
MELSEC iQ-F FX5 User's Manual (PROFIBUS) <SH-081910ENG>	Describes the PROFIBUS-DP master module.
MELSEC iQ-F FX5 User's Manual (Ethernet Communication) <JY997D56201>	Describes the Ethernet communication function of the CPU module built-in and the Ethernet module.
MELSEC iQ-F FX5-ENET User's Manual <SH-082026ENG>	Describes the FX5-ENET.
MELSEC iQ-F FX5-ENET/IP User's Manual <SH-082027ENG>	Describes the FX5-ENET/IP.
MELSEC iQ-F FX5 User's Manual (BACnet) <SH-082218ENG>	BACnet functions of the Ethernet module.
MELSEC iQ-F FX5 User's Manual (SLMP) <JY997D56001> (This manual)	Explains methods for the device that is communicating with the CPU module by SLMP to read and write the data of the CPU module.
MELSEC iQ-F FX5 User's Manual (CC-Link IE TSN) <SH-082215ENG>	Describes the CC-Link IE TSN module.
MELSEC iQ-F FX5 User's Manual (CC-Link IE) <JY997D64201>	Describes the CC-Link IE field network module.
MELSEC iQ-F FX5 User's Manual (CC-Link) <SH-081793ENG>	Describes the CC-Link system master/intelligent device module.
MELSEC iQ-F FX5 User's Manual (AnyWireASLINK) <SH-081796ENG>	Describes the AnyWireASLINK system master module.
MELSEC iQ-F FX5 User's Manual (Positioning Control - CPU module built-in, High-speed pulse input/output module) <JY997D56301>	Describes the positioning function of the CPU module built-in and the high-speed pulse input/output module.
MELSEC iQ-F FX5 User's Manual (Positioning Control - Intelligent function module) <SH-081805ENG>	Describes the positioning module.
MELSEC iQ-F FX5 Motion Module/Simple Motion Module User's Manual (Startup) <IB0300251>	Describes the specifications, procedures before operation, system configuration, wiring, and operation examples of the Motion module/Simple Motion module.
MELSEC iQ-F FX5 Motion Module/Simple Motion Module User's Manual (Application) <IB0300253>	Describes the functions, input/output signals, buffer memories, parameter settings, programming, and troubleshooting of the Motion module/Simple Motion module.
MELSEC iQ-F FX5 Motion Module/Simple Motion Module User's Manual (Advanced Synchronous Control) <IB0300255>	Describes the functions and programming for the synchronous control of the Motion module/Simple Motion module.
MELSEC iQ-F FX5 Motion Module User's Manual (CC-Link IE TSN) <IB0300568>	Describes the functions, parameter settings, troubleshooting, and buffer memories of the CC-Link IE TSN network.

Manual name <manual number>	Description
MELSEC iQ-F FX5 User's Manual (Analog Control - CPU module built-in, Expansion adapter) <JY997D60501>	Describes the analog function of the CPU module built-in and the analog adapter.
MELSEC iQ-F FX5 User's Manual (Analog Control - Intelligent function module) <SH-081802ENG>	Describes the analog input module, analog output module, and multiple input module.
MELSEC iQ-F FX5 User's Manual (Temperature Control) <SH-081799ENG>	Describes the temperature control module.
MELSEC iQ-F FX5 User's Manual (Safety Control) <SH-082078ENG>	Describes the safety extension modules.
GX Works3 Operating Manual <SH-081215ENG>	Describes the system configuration, parameter settings, and online operations of GX Works3.
Transition from MELSEC FX3G, FX3U, FX3UC Series to MELSEC iQ-F Series Handbook <JY997D66201>	Describes the transition from MELSEC FX3G/FX3U/FX3UC series to MELSEC iQ-F series.


TERMS

Unless otherwise specified, this manual uses the following terms.

For details on the FX3 devices that can be connected with the FX5, refer to the User's Manual (Hardware) of the CPU module to be used.

Terms	Description
■Devices	
FX5	Generic term for FX5UJ, FX5U and FX5UC PLCs
FX3	Generic term for FX3S, FX3G, FX3GC, FX3U, and FX3UC PLCs
FX5 CPU module	Generic term for FX5UJ CPU module, FX5U CPU module and FX5UC CPU module
FX5UJ CPU module	Generic term for FX5UJ-24MR/ES, FX5UJ-24MT/ES, FX5UJ-24MT/ESS, FX5UJ-40MR/ES, FX5UJ-40MT/ES, FX5UJ-40MT/ESS, FX5UJ-60MR/ES, FX5UJ-60MT/ES, and FX5UJ-60MT/ESS
FX5U CPU module	Generic term for FX5U-32MR/ES, FX5U-32MT/ES, FX5U-32MT/ESS, FX5U-64MR/ES, FX5U-64MT/ES, FX5U-64MT/ESS, FX5U-80MR/ES, FX5U-80MT/ES, FX5U-80MT/ESS, FX5U-32MR/DS, FX5U-32MT/DS, FX5U-32MT/DSS, FX5U-64MR/DS, FX5U-64MT/DS, FX5U-64MT/DSS, FX5U-80MR/DS, FX5U-80MT/DS, and FX5U-80MT/DSS
FX5UC CPU module	Generic term for FX5UC-32MT/D, FX5UC-32MT/DSS, FX5UC-64MT/D, FX5UC-64MT/DSS, FX5UC-96MT/D, FX5UC-96MT/DSS, FX5UC-32MT/DS-TS, FX5UC-32MT/DSS-TS, and FX5UC-32MR/DS-TS
Extension module	Generic term for FX5 extension modules, FX3 function modules, Extension modules (extension cable type) and Extension module (extension connector type)
FX5 extension module	Generic term for I/O modules, FX5 extension power supply modules, FX5 intelligent function modules, and FX5 safety extension modules
FX3 extension module	Generic term for FX3 extension power supply module and FX3 intelligent function module
Extension module (extension cable type)	Generic term for Input modules (extension cable type), Output modules (extension cable type), Input/output modules (extension cable type), Powered input/output module, High-speed pulse input/output module, Extension power supply module (extension cable type), Connector conversion module (extension cable type), Intelligent function modules, Safety extension modules, and Bus conversion module (extension cable type)
Extension module (extension connector type)	Generic term for Input modules (extension connector type), Output modules (extension connector type), Input/output modules (extension connector type), Extension power supply module (extension connector type), Connector conversion module (extension connector type), and Bus conversion module (extension connector type)
I/O module	Generic term for Input modules, Output modules, Input/output modules, Powered input/output modules, and High-speed pulse input/output modules
Input module	Generic term for Input modules (extension cable type) and Input modules (extension connector type)
Input module (extension cable type)	Generic term for FX5-8EX/ES and FX5-16EX/ES
Input module (extension connector type)	Generic term for FX5-C16EX/D, FX5-C16EX/DS, FX5-C32EX/D, FX5-C32EX/DS, and FX5-C32EX/DS-TS
Output module	Generic term for Output modules (extension cable type) and Output modules (extension connector type)
Output module (extension cable type)	Generic term for FX5-8EYR/ES, FX5-8EYT/ES, FX5-8EYT/ESS, FX5-16EYR/ES, FX5-16EYT/ES, and FX5-16EYT/ESS
Output module (extension connector type)	Generic term for FX5-C16EYT/D, FX5-C16EYT/DSS, FX5-C16EYR/D-TS, FX5-C32EYT/D, FX5-C32EYT/DSS, FX5-C32EYT/D-TS, and FX5-C32EYT/DSS-TS
Input/output module	Generic term for Input/output modules (extension cable type) and Input/output modules (extension connector type)
Input/output module (extension cable type)	Generic term for FX5-16ER/ES, FX5-16ET/ES, and FX5-16ET/ESS

Terms	Description
Input/output module (extension connector type)	Generic term for FX5-C32ET/D, FX5-C32ET/DSS, FX5-C32ET/DS-TS, and FX5-C32ET/DSS-TS
Powered input/output module	Generic term for FX5-32ER/ES, FX5-32ET/ES, FX5-32ET/ESS, FX5-32ER/DS, FX5-32ET/DS, and FX5-32ET/DSS
High-speed pulse input/output module	Generic term for FX5-16ET/ES-H and FX5-16ET/ESS-H
Extension power supply module	Generic term for FX5 extension power supply module and FX3 extension power supply module
FX5 extension power supply module	Generic term for FX5 extension power supply module (extension cable type) and FX5 extension power supply module (extension connector type)
FX5 extension power supply module (extension cable type)	Different name for FX5-1PSU-5V
FX5 extension power supply module (extension connector type)	Different name for FX5-C1PS-5V
FX3 extension power supply module	Different name for FX3U-1PSU-5V
Intelligent module	The abbreviation for intelligent function modules
Intelligent function module	Generic term for FX5 intelligent function modules and FX3 intelligent function modules
FX5 intelligent function module	Generic term for FX5-4AD, FX5-4DA, FX5-8AD, FX5-4LC, FX5-20PG-P, FX5-20PG-D, FX5-40SSC-G, FX5-80SSC-G, FX5-40SSC-S, FX5-80SSC-S, FX5-ENET, FX5-ENET/IP, FX5-CCLGN-MS, FX5-CCLIEF, FX5-CCL-MS, FX5-ASL-M, and FX5-DP-M
FX3 intelligent function module	Generic term for FX3U-4AD, FX3U-4DA, FX3U-4LC, FX3U-1PG, FX3U-2HC, FX3U-16CCL-M, FX3U-64CCL, FX3U-128ASL-M, and FX3U-32DP
FX5 safety extension module	Generic term for safety main modules and safety expansion modules
Safety main module	Different name for FX5-SF-MU4T5
Safety expansion module	Generic term for expansion modules installed to a safety main module
Safety input expansion module	Different name for FX5-SF-8DI4
Expansion board	Generic term for board for FX5UJ CPU module and FX5U CPU module
Communication board	Generic term for FX5-232-BD, FX5-485-BD, and FX5-422-BD-GOT
Expansion adapter	Generic term for adapter for FX5 CPU module
Communication adapter	Generic term for FX5-232ADP and FX5-485ADP
Analog adapter	Generic term for FX5-4AD-ADP, FX5-4DA-ADP, FX5-4AD-PT-ADP, FX5-4AD-TC-ADP, and FX5-4A-ADP
Bus conversion module	Generic term for Bus conversion module (extension cable type) and Bus conversion module (extension connector type)
Bus conversion module (extension cable type)	Different name for FX5-CNV-BUS
Bus conversion module (extension connector type)	Different name for FX5-CNV-BUSC
Connector conversion module	Generic term for Connector conversion module (extension cable type) and Connector conversion module (extension connector type)
Connector conversion module (extension cable type)	Different name for FX5-CNV-IF
Connector conversion module (extension connector type)	Different name for FX5-CNV-IFC
Extended extension cable	Generic term for FX5-30EC and FX5-65EC
Connector conversion adapter	Different name for FX5-CNV-BC
Battery	Different name for FX3U-32BL
SD memory card	Generic term for NZ1MEM-2GBSD, NZ1MEM-4GBSD, NZ1MEM-8GBSD, NZ1MEM-16GBSD, L1MEM-2GBSD and L1MEM-4GBSD SD memory cards Abbreviation of Secure Digital Memory Card. Device that stores data using flash memory.
Peripheral device	Generic term for engineering tools and GOTs
GOT	Generic term for Mitsubishi Electric Graphic Operation Terminal GOT1000 and GOT2000 series
■Software packages	
Engineering tool	The product name of the software package for the MELSEC programmable controllers
GX Works3	The product name of the software package, SWnDND-GXW3, for the MELSEC programmable controllers (The 'n' represents a version.)
■Communication-related	
Ethernet-equipped module	A generic term for the following modules when the Ethernet function is used: <ul style="list-style-type: none"> • CPU module • FX5-ENET • FX5-ENET/IP

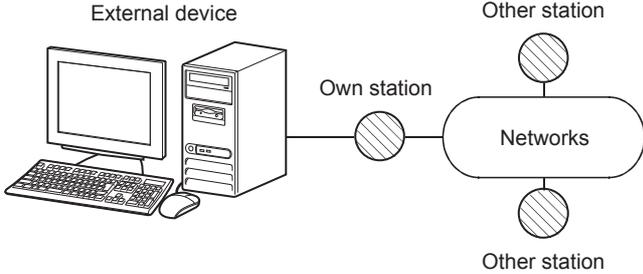Terms	Description
Ethernet module	Generic term for FX5-ENET and FX5-ENET/IP
SLMP	The abbreviation for Seamless Message Protocol. A protocol for accessing SLMP-compatible devices and PLCs that are connected to SLMP-compatible devices from external devices.
SLMP-compatible device	Generic term for devices that can receive SLMP messages.
MC protocol	The abbreviation of the MELSEC communication protocol. A protocol for accessing MC protocol-compatible devices and PLCs that are connected to MC protocol-compatible devices from external devices.
MC protocol-compatible device	Generic term for devices that can receive MC protocol messages.
External device	Generic term for devices of communication target (such as personal computer, HMI)
Own station	Own station indicates the station directly connected to external device.
Other station	Other station indicates a station connected to the own station on the network.  <p>The diagram illustrates a network configuration. On the left, an 'External device' is represented by a computer monitor, keyboard, and mouse. This device is connected to an 'Own station', depicted as a vertical PLC rack. The 'Own station' is connected to a central 'Networks' block, shown as a rounded rectangle. From this network block, two lines extend upwards and downwards to two separate 'Other station' nodes, each represented by a circle with diagonal hatching.</p>
Relay station	A station that includes two or more network modules. Transient transmission is performed through this station to stations on other networks.
Module access device	A generic term for the module access device of the MELSEC iQ-R series/MELSEC iQ-F series and intelligent function module device of the MELSEC-Q/L series
Buffer memory	Memory areas of Intelligent function modules and SLMP-compatible devices for storing setting values and monitor values.

1 OUTLINE

This manual describes the compatible devices, access ranges, communication procedures, and message formats of the SLMP.

When transferring data using SLMP, always refer to  Page 14 SLMP DATA COMMUNICATION.

1.1 Outline of SLMP

SLMP is a protocol used for access from a Ethernet-equipped module or an external device (such as a personal computer or an HMI) to an SLMP compatible device through Ethernet.

SLMP communications are available among devices that can transfer messages by SLMP.

The Ethernet port of the Ethernet-equipped module can be used as a server of SLMP. The Ethernet port of the CPU module can be used as a client of SLMP.


The message format of SLMP is 3E/1E frames.

[Server function]

The CPU module performs data processing and data transfer based on a request message (command) from external devices.

[Client function]

Request messages can be sent to external devices and response messages from external devices can be received by dedicated instructions. The SLMP client function is supported only for the CPU module, and the SLMP frame transmission is supported only for the 3E frame.

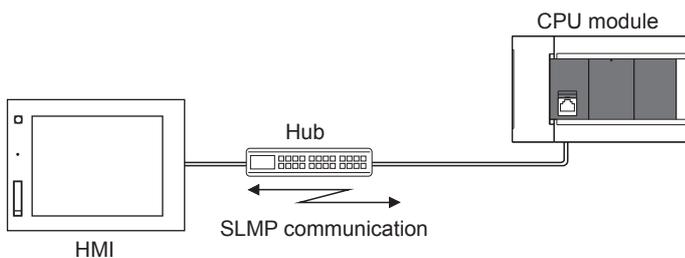

Point

The message format of each SLMP is the same as that of the following MC protocols frames.

- 3E frame: QnA compatible 3E frame of MC protocol
- 1E frame: A compatible 1E frame of MC protocol

The external devices used with the above MC protocols can be connected to SLMP compatible devices.

For details on MC protocol, refer to the following manual.

MELSEC-Q/L MELSEC Communication Protocol Reference Manual

Restriction

The 1E frame is supported only for FX5U/FX5UC CPU module and Ethernet module. For supported versions, refer to  Page 155 Added and Enhanced Functions.

Applications

- Device data in a Ethernet-equipped module can be written or read from a personal computer or an HMI by using SLMP.
- Writing and reading the device allows operation monitoring, data analyzing, and production managing of a Ethernet-equipped module by a personal computer or an HMI.
- External illegal access can be prevented by the remote password function.

Data communication procedures

The following shows the flow for starting SLMP communication. For details, refer to  MELSEC iQ-F FX5 User's Manual (Ethernet Communication).

1. Connecting cables and external devices

Make the connections for SLMP communication.

2. Setting parameters

Configure the module parameters with the engineering tool.

3. Writing to the Ethernet-equipped module

Write the parameters set in the Ethernet-equipped module. Turn power OFF → ON or perform reset to enable the parameters.

4. Initial process state check

After setting the module parameter, check if initial process of the Ethernet-equipped module is completed normally.

5. SLMP communication ^{*1}

[Server function]

SLMP messages from external devices are received.

[Client function] ^{*2}

SLMP messages are sent to external devices.

^{*1} The connection is established/disconnected by the system.


^{*2} Only 3E frame of the CPU module is supported.

1.2 Features of SLMP

System monitoring from an external device (such as personal computer, HMI)


An external device can send a request message in SLMP message format to an Ethernet-equipped module to enable device read, allowing system monitoring.

Using SLMP allows not only device data reading but also device data writing and resetting an Ethernet-equipped module.

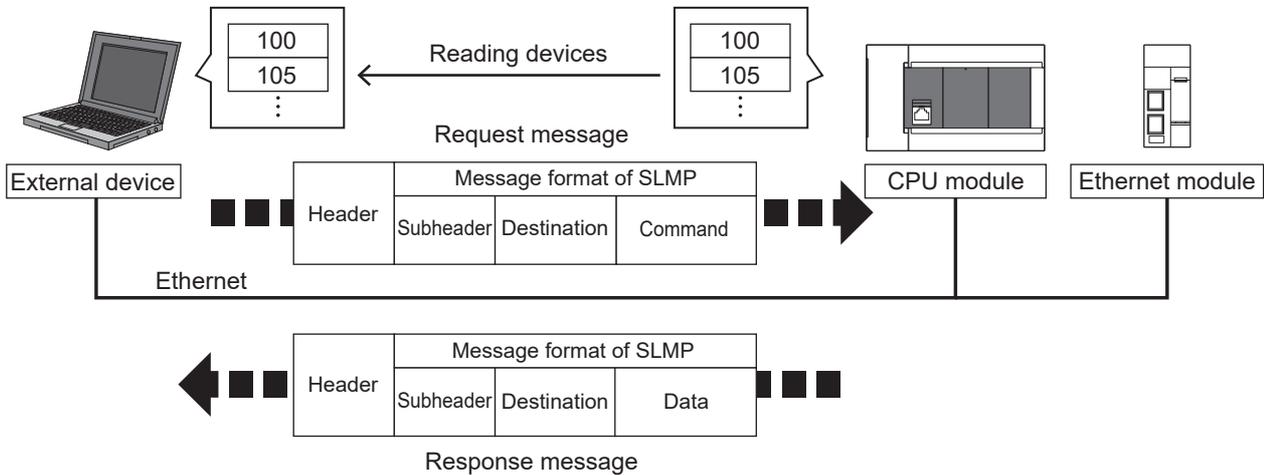


Connecting an external device used with MC protocol

An external device that uses the QnA compatible 3E frame of MC protocol and A compatible 1E frame of MC protocol can be connected to an Ethernet-equipped module directly.

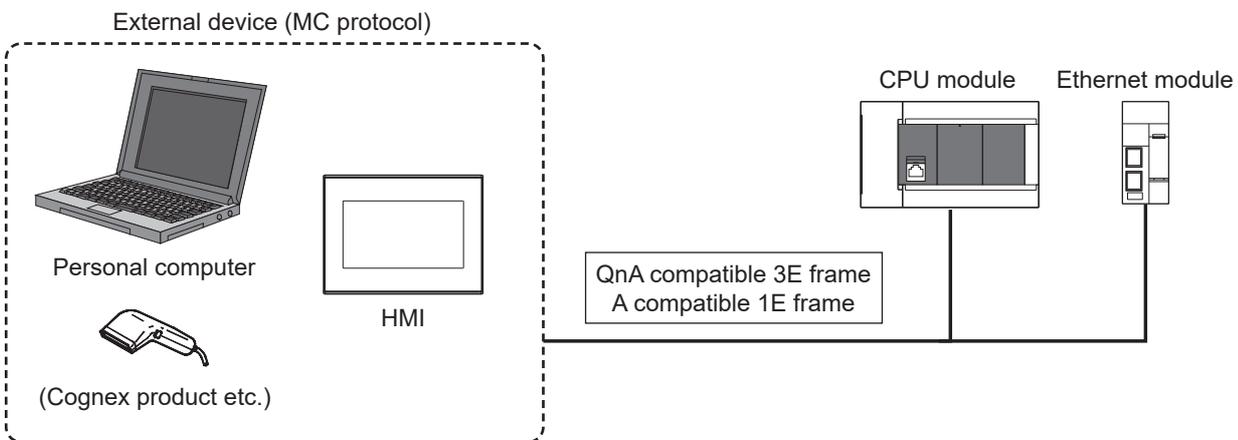


Access via network

SLMP allows an external device to access modules in the same network and other networks seamlessly via an SLMP-compatible device.

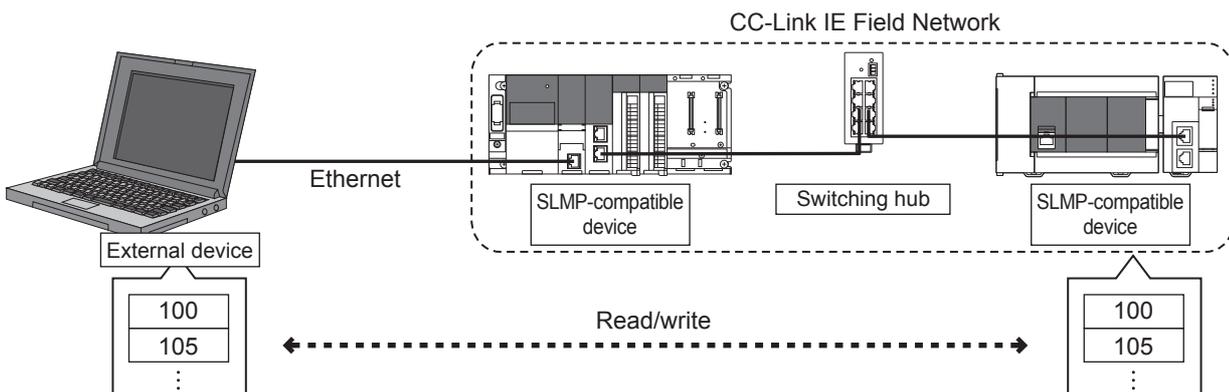

Easy SLMP communication with the predefined protocol support function

SLMP communication can be easily used with the predefined protocol support function of the engineering tool. Like external devices communicating on SLMP, CPU modules can control SLMP-compatible devices.

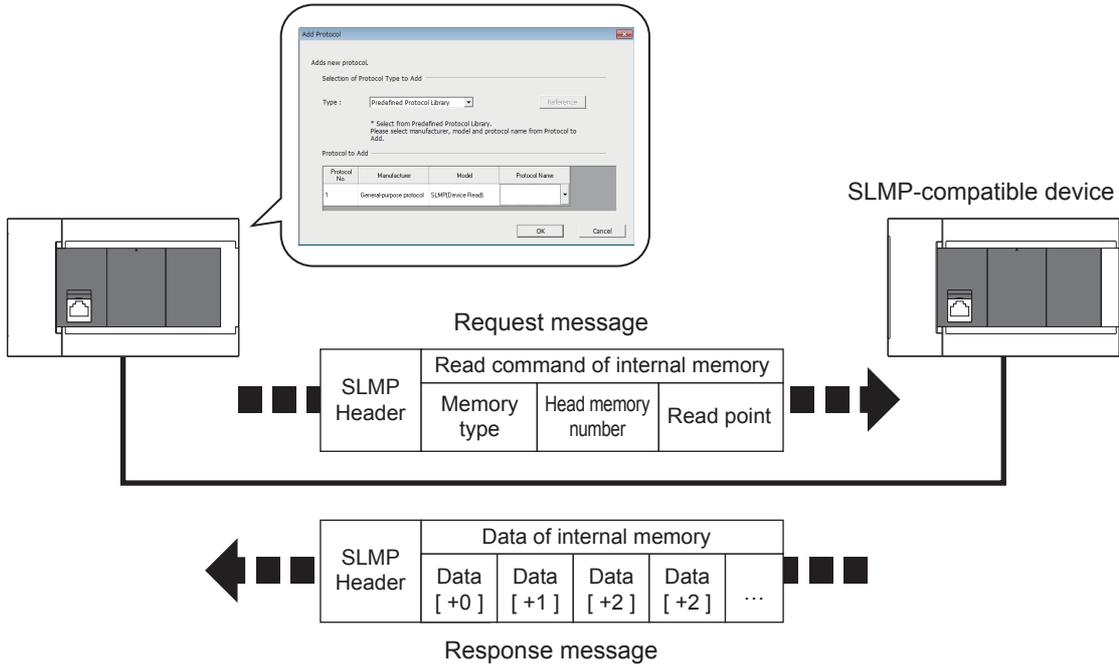

2 SLMP DATA COMMUNICATION

This chapter describes the SLMP data communication by which the external equipment reads or writes data to a Ethernet-equipped module.

2.1 Type and Application of the Data Communication Frame

This section describes the type and application of the frame (data communication message) by which the external equipment accesses a Ethernet-equipped module with SLMP.

When the external equipment accesses a Ethernet-equipped module using Ethernet, the data communication is executed by sending or receiving a command message (access request) and response message (response) of the following frame.

Target communication method	Applicable communication frames	Communication data code	Section of control procedure
Ethernet	<ul style="list-style-type: none">• 3E frame• 1E frame	ASCII code or binary code	Page 18 MESSAGE FORMAT

Point

There are 2 types of ASCII code: ASCII code (X, Y OCT) and ASCII code (X, Y HEX).

The specification method of the device number for the X (input) and Y (output) to be accessed is different from each other. (☞ Page 67 Device Access, Page 122 Device Access)

- ASCII code (X, Y OCT): octal
- ASCII code (X, Y HEX): hexadecimal

Unless otherwise specified, the both of them are described as ASCII code.

For supported versions of ASCII code (X, Y HEX) for the FX5U/FX5UC CPU module, refer to ☞ Page 155 Added and Enhanced Functions.

3E frame

- The message format is the same as the QnA compatible 3E frame of MC protocol.
- The main purpose of the frame is to access all the devices of the Ethernet-equipped module from the external equipment.
- The frame enables access to CC-Link IE controller network and CC-Link IE field network.

Point

When using binary codes, the communication time will decrease since the amount of communication data is reduced by approximately half comparing to using ASCII codes.

1E frame

- The message format is the same as the A compatible 1E frame of MC protocol.
- This frame is designed mainly to facilitate access to Ethernet-equipped module devices from the external equipment.

Point

The communication time of 1E frame is shorter than 3E frame because the amount of communication data by the 1E frame is smaller compared to 3E frame.

2.2 Allowable Access Range of Each Data Communication Frame

The following shows the frame and access range of a message used in SLMP.

SLMP frame


Frame	Type of the network which connects the external device with the connecting stations	Reference
Ethernet communication frame (3E/1E frame)	Ethernet	Page 18 MESSAGE FORMAT

Access range

Ethernet communication frame

■When the external device is connected directly with the Ethernet-equipped module via Ethernet

In the following system configuration, communication with the Ethernet-equipped module is possible using the Ethernet communication frame from the external device.

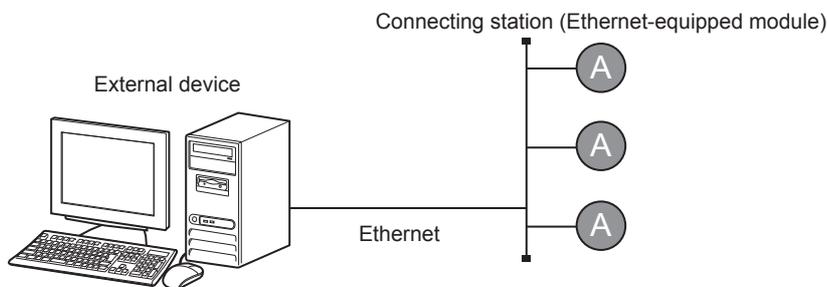

Assigned symbol	Description
A	Station directly connected to the external device

2.3 Concept of Control Procedure of SLMP


This section describes the concept of the procedure (control procedure) when the external equipment accesses a Ethernet-equipped module with SLMP.

Sending a command message

Data communication using SLMP communication is executed in half-duplex communication.

To access the Ethernet-equipped module, send the next command message after receiving a response message for the preceding command message from the Ethernet-equipped module.

(Until the receiving of the response message is completed, the next command message cannot be sent.)

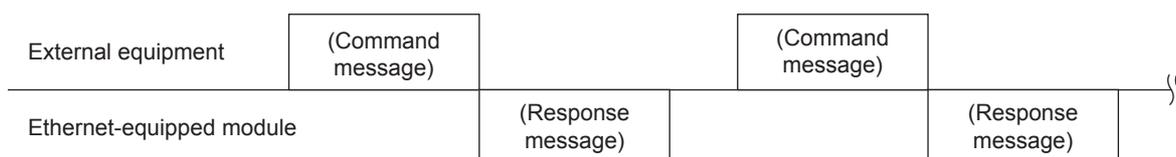


When a response message of completion for a command message cannot be received

When a response message of completion with an error is received, take corrective actions depending on the error code in the response message.


2.4 Access Timing of the Ethernet-equipped Module Side

The following shows the access timing of the Ethernet-equipped module side when the Ethernet port of the Ethernet-equipped module is accessed from the external device.

- RUN

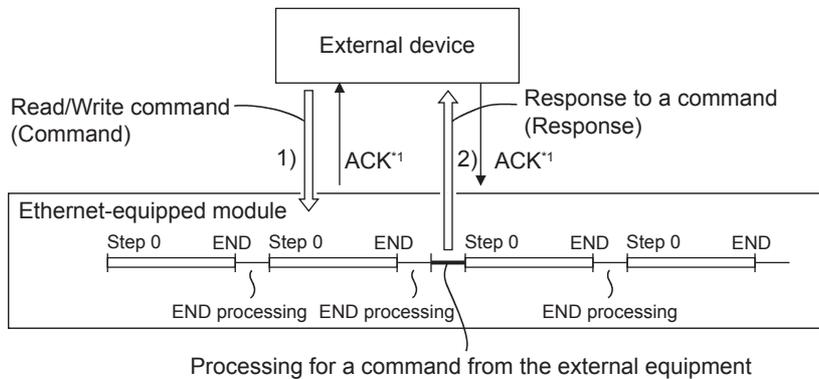

- STOP

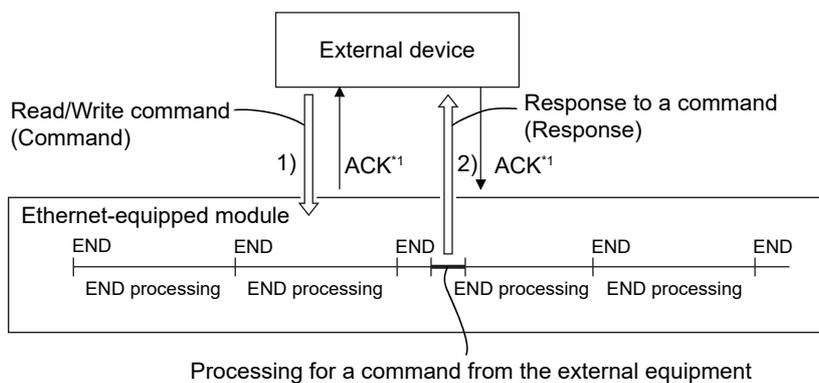

- *1 ACK shown in the figure is a response which is sent or received between the Ethernet-equipped module and external equipment (a response for receiving a message) when the Ethernet-equipped module is accessed from the external equipment using TCP/IP communication. This response is not the same as the one for the processing requested from the external equipment by a command message (processing result). When access is executed using UDP/IP communication via the Ethernet port, an ACK response is not sent.

1. To send a read request or a write request to the Ethernet-equipped module side from the external equipment, a command message is sent.
2. The Ethernet-equipped module reads or writes the data according to the description requested from the external equipment when the END instruction of the CPU module is executed and sends a response message (response) including the processing result to the external equipment of the request source.

Point

- Access between the external equipment and Ethernet-equipped module is processed at each END processing when the Ethernet-equipped module is running for a command request. (The scan time becomes longer by the processing time of the command request.)
- When accesses are requested simultaneously to the Ethernet-equipped module from multiple external equipment, the processing requested from the external device may be on hold until several END processings take place depending on the request timing.

2.5 Transfer Time

This section describes the method for calculating the link time of the CPU module.

Point

The link time of the Ethernet module varies depending on the usage of other intelligent function modules.

Link time

■ Calculation method

Calculate the minimum processing time of the SLMP communication by the following calculation formula.

However, the processing time may become longer depending on the load of the network (how much a line is crowded), window size of each connecting device, number of connections to be used simultaneously, and system configuration. As a guideline, recognize the value calculated by the following calculation formula as the processing time when a communication is executed by only one connection.

- Minimum processing time of the SLMP communication (for batch read or batch write)

$$Tfs = Ke + (Kdt \times Df) + Scr \times \text{Number of scans required for processing} + \text{ACK processing time of external equipment}$$


Tfs: Time from when the request data of a personal computer is received until the CPU module completes the processing (Unit: ms)^{*1}

Ke, Kdt: Constant (Refer to the following table.)

Df: Number of words of the request data + Number of words of the response data (application data part)

Scr: Scan time

*1 The following shows the timing from when the request data of a personal computer is received until the CPU module completes the processing.

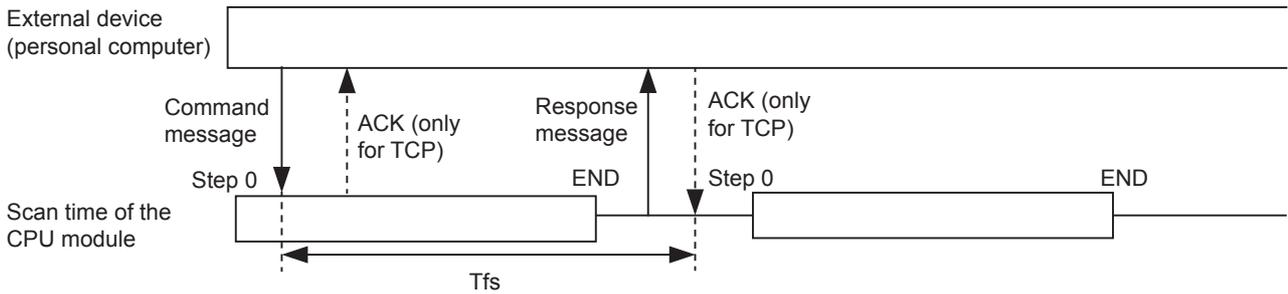

Communication description	TCP/IP communication		UDP/IP communication	
	Ke	Kdt	Ke	Kdt
Batch read	1	0.001	1	0.001
Batch write	1	0.001	1	0.001

Ex.

[Calculation example 1]

Time from when the request data of a personal computer is received until the processing is completed, when a TCP/IP communication is executed between personal computers and 32 points data read from the data register (D) of own station by the SLMP communication in binary code (Unit: ms)

The scan time of the mounted station is 40 ms.

$$Tfs = 1 + (0.001 \times 32) + 40 \times 1 + \text{ACK processing time of external equipment}$$

[Calculation example 2]

Time from when the request data of a personal computer is received until the processing is completed, when a TCP/IP communication is executed between personal computers and 32 points data written to the data register (D) of own station by the SLMP communication in binary code (Unit: ms)

The scan time of the mounted station is 40 ms.

$$Tfs = 1 + (0.001 \times 32) + 40 \times 1 + \text{ACK processing time of external equipment}$$

3 MESSAGE FORMAT

This chapter describes the message data format, the data specification method, and limitations etc. when performing SLMP data communication using the 3E frame to the Ethernet port.

Frame type	Ethernet port	Remark
3E frame	Communicable	The message format is the same as the QnA compatible 3E frame
1E frame	Communicable	The message format is the same as the A compatible 1E frame

3.1 3E Frame

This section describes the message format for each command when performing the data communication using the 3E frame.

Message format and control procedure

This section describes the message format and the control procedures when performing the data communication using the 3E frame.

Data format

The data format for communicating between the built-in Ethernet port and the external device consists of header and application data.

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data

Response message

Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data

Header

This header is for TCP/IP and UDP/IP.

Add the header for external equipment to Ethernet-equipped module (command message) at the external equipment side before sending the message (normally the header is added automatically).

It is not necessary to set the header for Ethernet-equipped module to external equipment (response message) by the user because the header is added by the Ethernet-equipped module automatically.


Application data

Application data is divided into subheader and text.


The subheader indicates whether a message is a command message or a response message. (☞ Page 20 Subheader configuration)

Text is the request data (command) and the response data (response) in each function. (☞ Page 59 3E FRAME COMMANDS)

■When communicating data in ASCII code

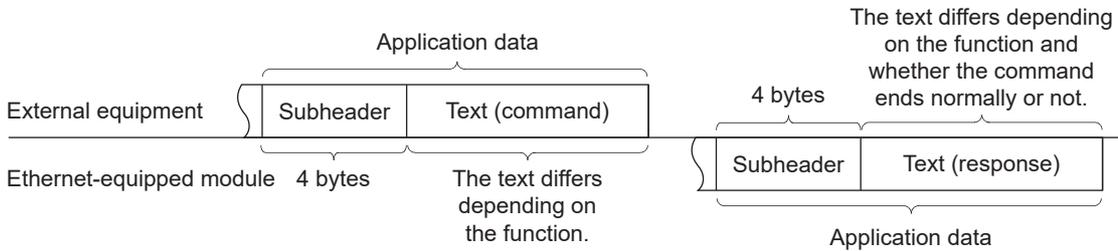

■When communicating data in binary code

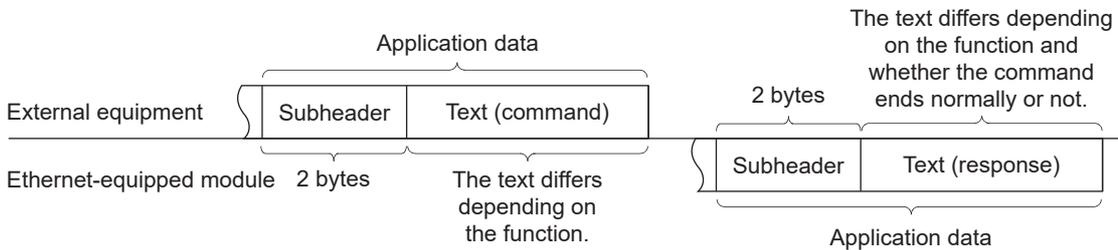


Point

It is not necessary to set the response to a command from the external equipment by the user because the response is created and sent by the Ethernet-equipped module.

Subheader configuration

This section describes the subheader configuration.

■When communicating data in ASCII code

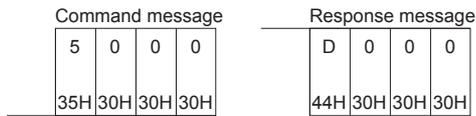

■When communicating data in binary code



Control procedure

This section describes the control procedures and the format of the application data when performing the data communication.

The □ (Thick line) part shown in the message explanation diagram (☞ Page 67 Device Access) of this section are items common to all commands and correspond to the * portion of the message explanation diagrams indicated in this chapter. For the data contents and the data specification method of the □ (Thick line) part, refer to ☞ Page 25 Application data specification items.

Point

Data code (ASCII/binary) to be used when communicating, it is determined by the parameters of the GX Works3.

[CPU module]

Navigation window ⇒ [Parameter] ⇒ [FX5UCPU] ⇒ [Module Parameter] ⇒ [Ethernet Port] ⇒ [Basic Settings] ⇒ [Own Node Settings] ⇒ "Communication Date Code"


[Ethernet module]

Navigation window ⇒ [Parameter] ⇒ [Module Information] ⇒ [FX5-ENET] or [FX5-ENET/IP] ⇒ [Basic Settings] ⇒ [Own Node Settings] ⇒ "Communication Date Code"

When communicating data in ASCII code


- When data is read from a Ethernet-equipped module by external equipment

External equipment → Ethernet-equipped module (command message)

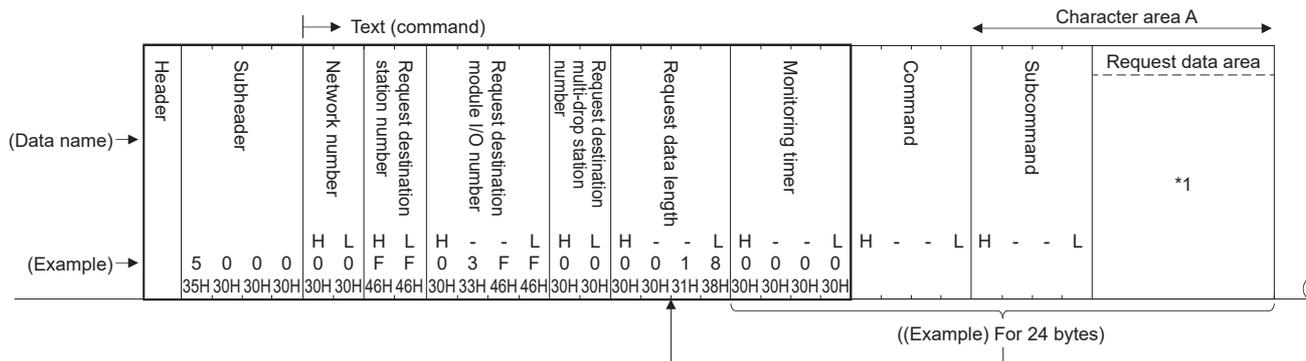


Ethernet-equipped module → External equipment (response message)

(When completed normally)

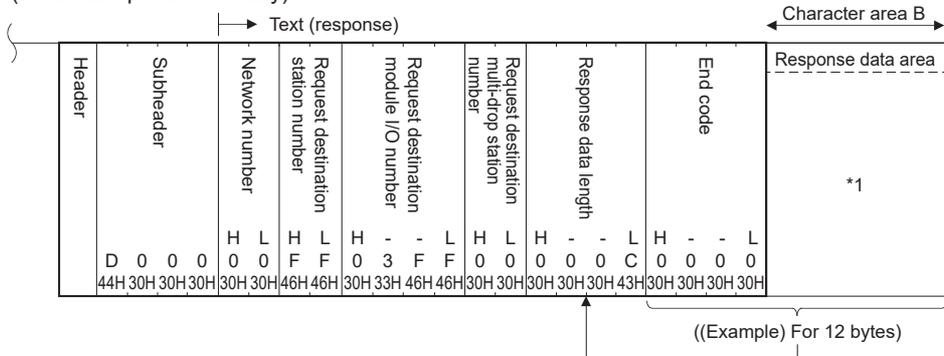


(When completed with error)

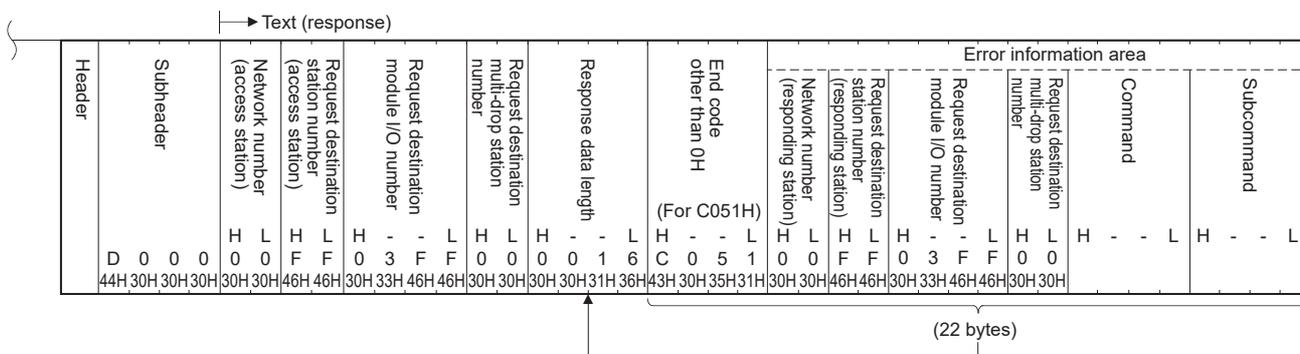

*1 The order of data items differs depending on the command or subcommand. For details, refer to Page 67 Device Access.


- When data is written from external equipment to a Ethernet-equipped module

External equipment → Ethernet-equipped module (command message)

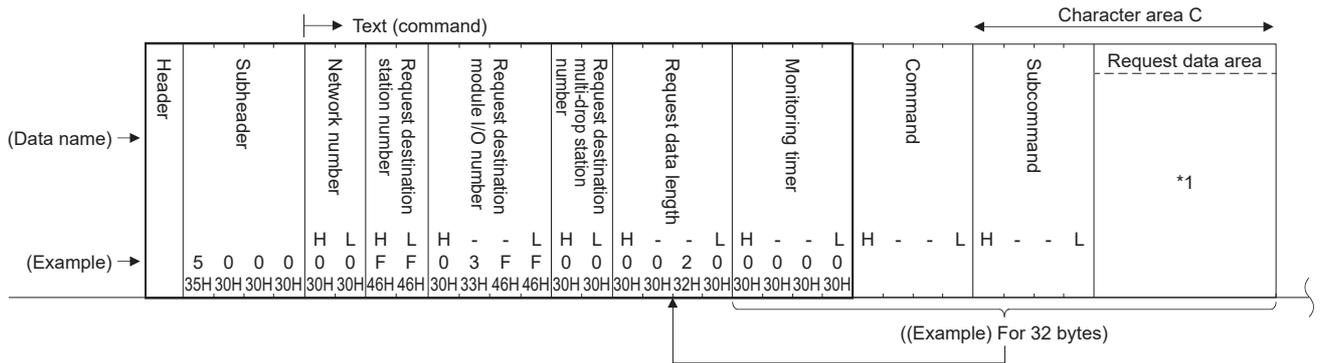


Ethernet-equipped module → External equipment (response message)

(When completed normally)

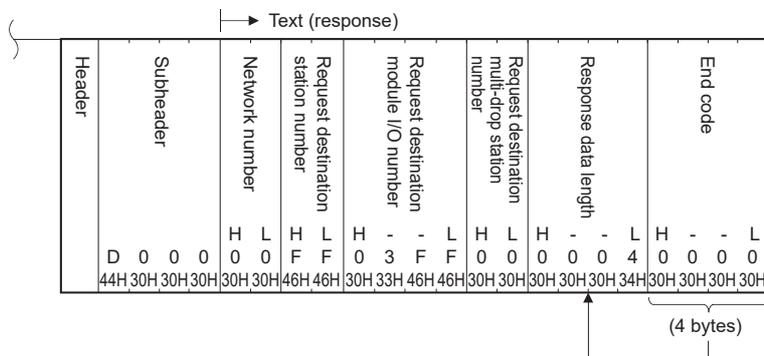


(When completed with error)

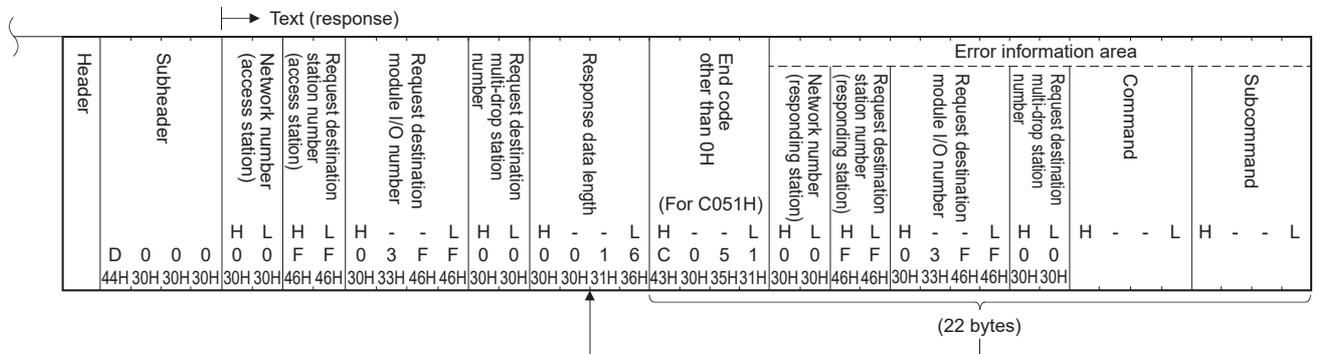



*1 The order of data items differs depending on the command or subcommand. For details, refer to Page 67 Device Access.

■When communicating data in binary code

- When data is read from a Ethernet-equipped module by external equipment

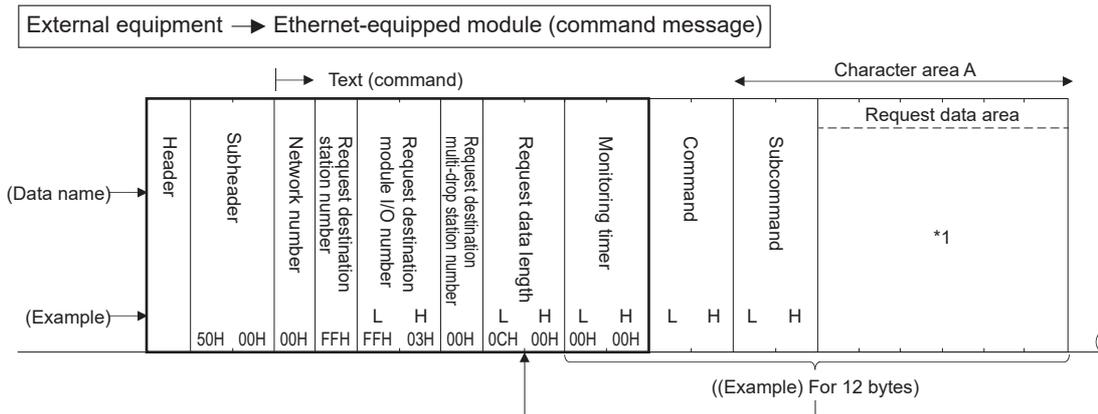


Ethernet-equipped module → External equipment (response message)

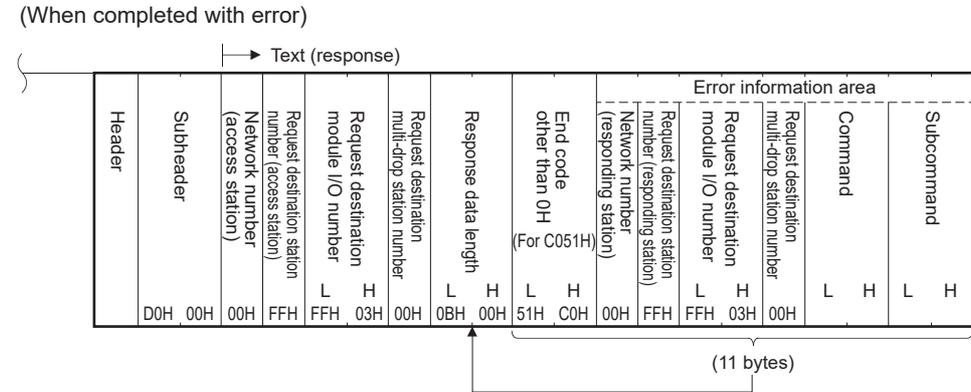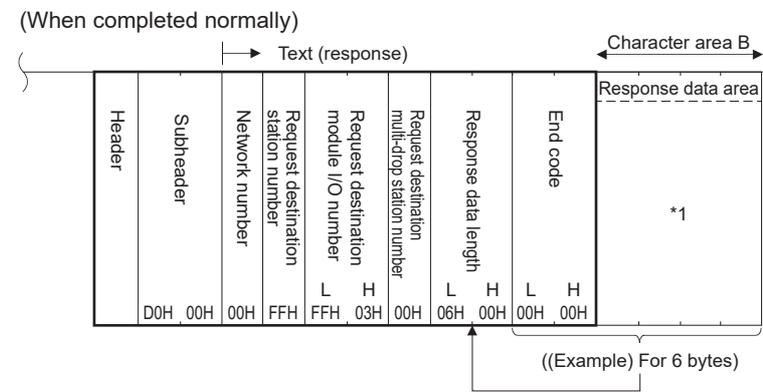


*1 The order of data items differs depending on the command or subcommand. For details, refer to Page 67 Device Access.

- When data is written from external equipment to a Ethernet-equipped module

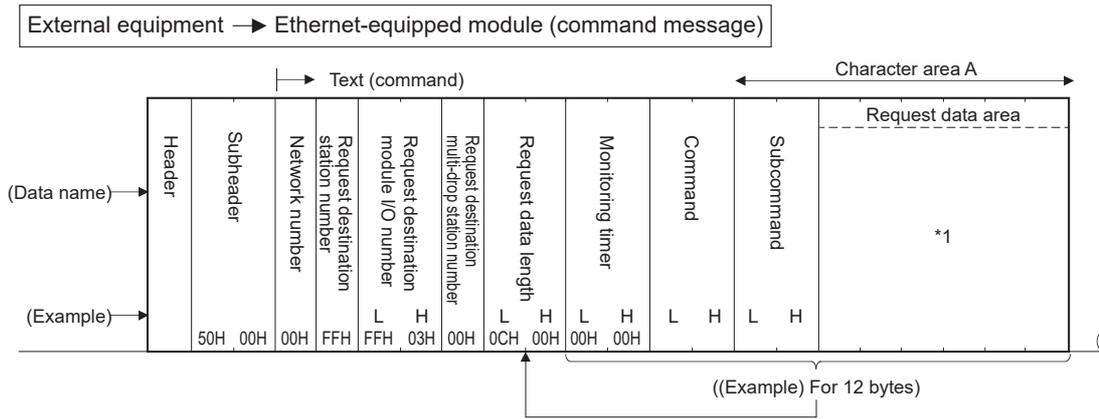


Ethernet-equipped module → External equipment (response message)

(When completed normally)

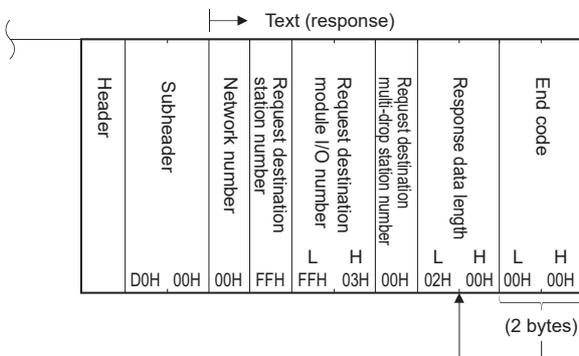

(When completed with error)

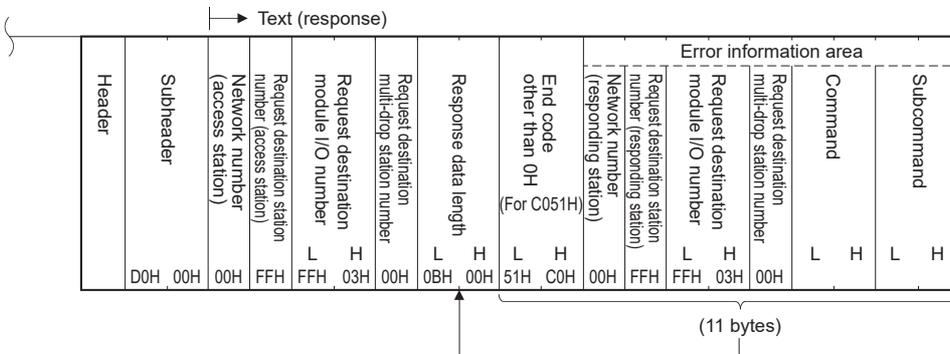

*1 The order of data items differs depending on the command or subcommand. For details, refer to Page 67 Device Access.

Application data specification items

This section describes the data contents and the specification method of common data items in the application data in each message when performing the data communication using the 3E frame.

Request destination network number and request destination station number

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data

Response message

Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data


Specify the request destination network number and request destination station number to be used as an access destination in hexadecimal.

Specify the request destination network number and request destination station number according to installation conditions of access destination stations based on the following table.

Data of the response message is a value set in the request message.


No.	Access destination	Station to be specified	Request destination network number	Request destination station number
1 ^{*1}	Connecting station (Within the range indicated in No. 1 in the figure below)	— (Specify the fixed value indicated on the right)	00H	FFH
2	Other stations or relay station (Within the range indicated in No. 2 in the figure below)	Access destination station	01 to EFH (1 to 239)	01 to 78H (1 to 120): Station number 7DH: Assigned control station/ Master station 7EH: Present control station/ Master station
3	Multi-drop connecting station via network (Within the range indicated in No. 3 in the figure below)	A station on the network where multi-drop connecting stations are connected (In the figure below, [A] is specified)	01 to EFH (1 to 239)	01 to 78H (1 to 120): Station number 7DH: Assigned control station/ Master station 7EH: Present control station/ Master station

*1 Please use specification No.1 to access Ethernet-equipped module.

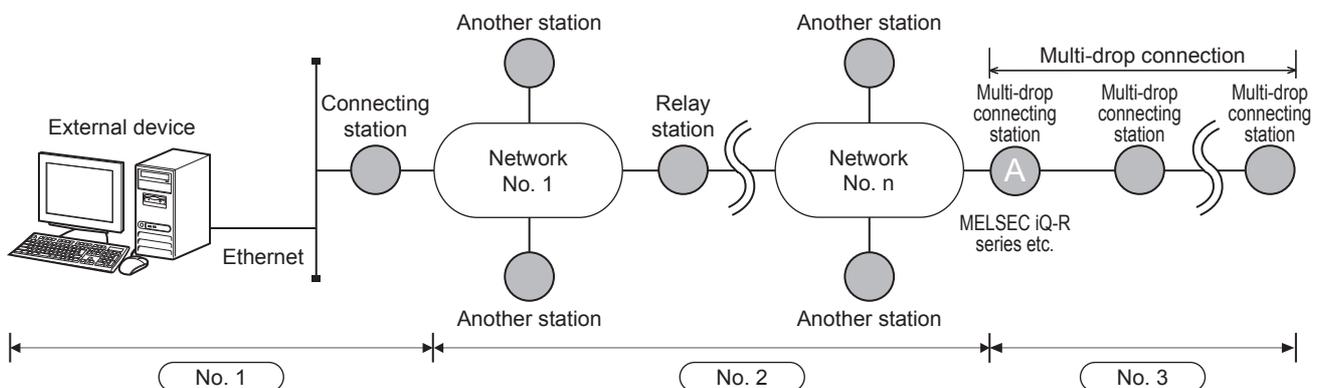

Ex.

When specifying the connecting station (network No.00H, station number FFH)

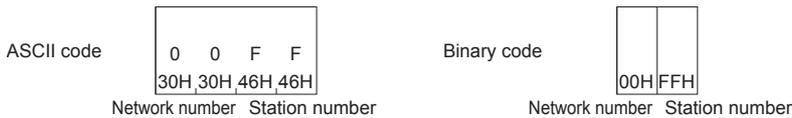

Precautions

- The stations of network number 240 to 255 cannot be accessed.
- Ethernet-equipped module cannot perform multi-drop connection.
- Ethernet-equipped module cannot perform connection via network.

Request destination module I/O number

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data

Response message

Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data


Select the module number of the access destination from the table below.

When the send destination of the request message is a multi-drop connecting station that is connected to the request destination station, set the I/O number (upper 3-digits) of the serial communication module which is performing the multi-drop connection.

No.	Module to be accessed*1	Request destination station Request destination module I/O number
1*2	Own station	03FFH
2	Other station (control CPU)	03FFH
3	The module which is performing multi-drop connection with serial communication module ("A" in the figure below), which is connected to the network	0000H to 01FFH


*1 Ethernet-equipped module cannot perform multi-drop connection.

*2 Please use specification No.1 to access Ethernet-equipped module.

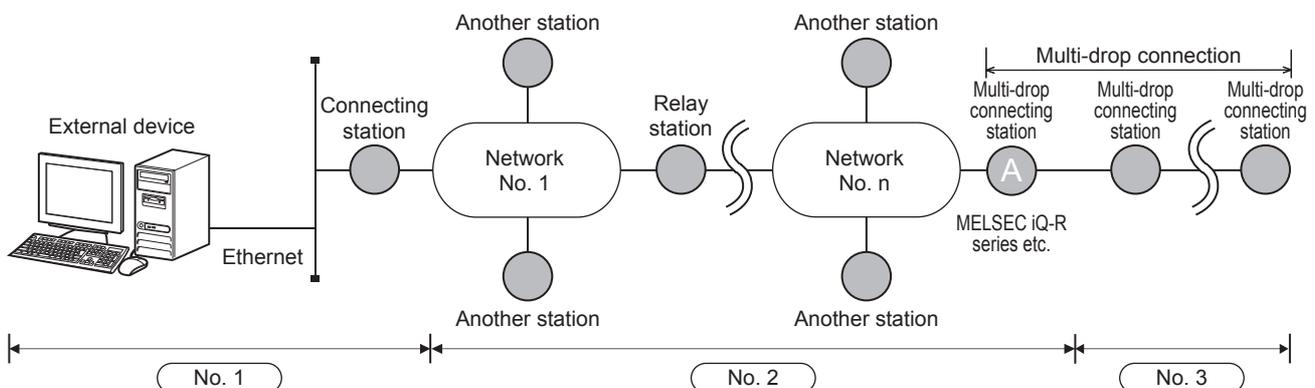

Ex.

When specifying the own station (03FFH) as the request destination module I/O number

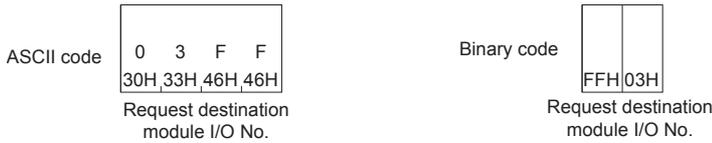

Request destination multi-drop station number

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data

Response message


Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data

Specify the station number of the SLMP compatible device linked by the multi-drop connection in the access destination, within the range shown in the table below.

When not specifying the SLMP compatible device linked by the multi-drop connection, set 00H.

No.	Access station of external equipment	Request destination multi-drop station number
1	Stations on the multi-drop connection ("F" in the figure below)	Set the station number (00H to 1FH (0 to 31)) ("F" in the figure below)
2	A station that relays the network and the multi-drop connection ("E" in the figure below)	00H (0)
3 ^{*1}	Other than above	00H (0)

*1 Please use specification No.3 to access Ethernet-equipped module.

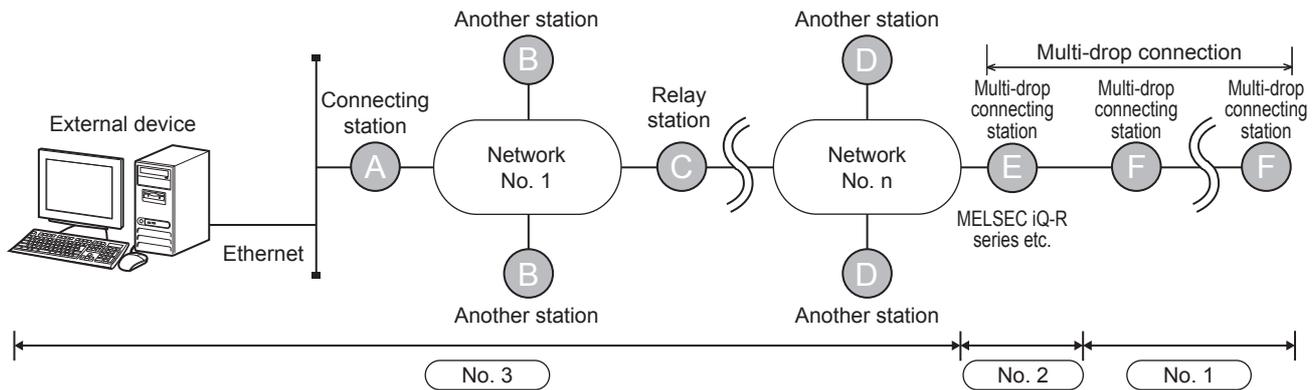


Ex.

When specifying 00H as the requested multi-drop station number



Request data length

Request message

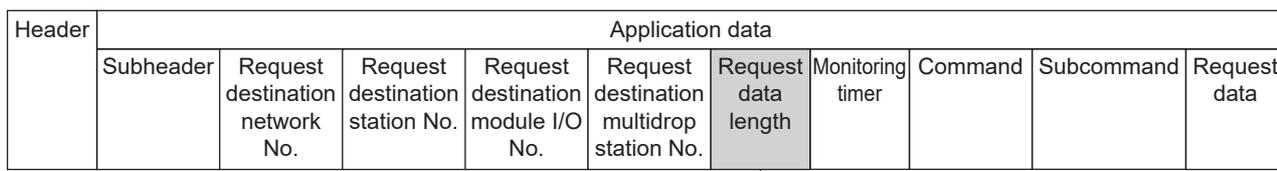

Specify the total data size from the Monitoring timer to the request data in hexadecimal. (Unit: byte)

Ex.

When the request data length is 24 (18H) bytes




Response data length


Response message

When normally completed, the total data size from the end code to the response data is set in hexadecimal. When completed with error, the total data size from the end code to the error information is set in hexadecimal. (Unit: byte)

(When completed normally)

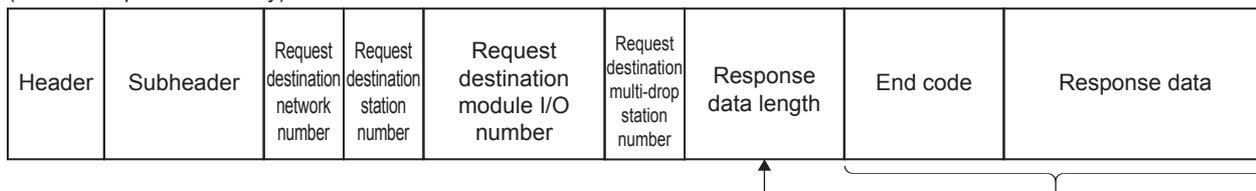

(When completed with error)

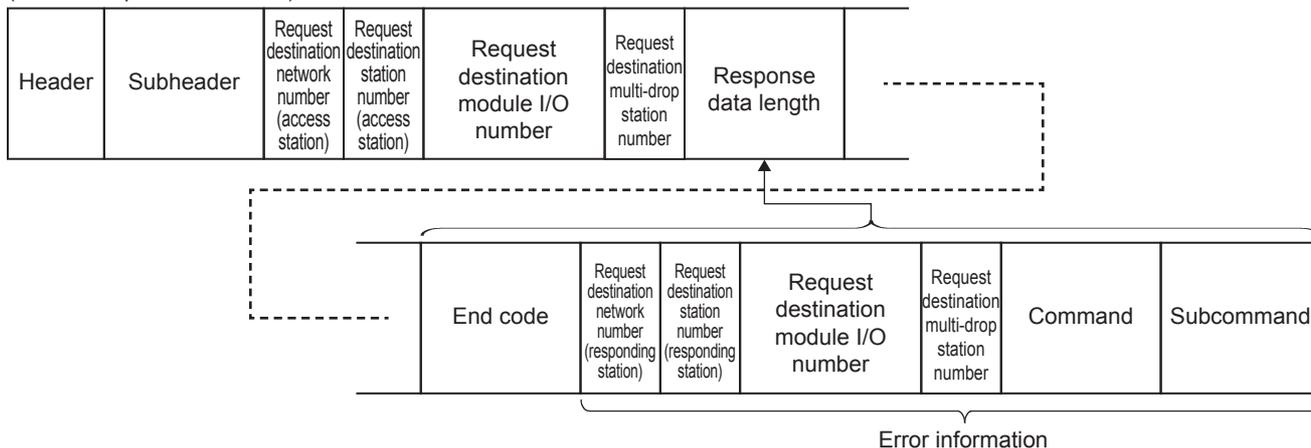

Monitoring timer

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data

This timer is used to set the wait time until a response is returned after the SLMP-compatible device that has received a request message from an external device sends a processing request to the accessed device.

- 0000H (0): Indefinitely waiting (waiting until the processing is completed)
- 0001H to FFFFH (1 to 65535)^{*1}: Wait time (unit: 250 ms)

*1 Supported only for Ethernet modules.

For normal data communication, it is recommended to use this message within the setting range shown in the following table depending on the communication destination.

Access destination	Monitoring timer
Other station	01H to 28H (0.25 sec to 10 sec)

Ex.

ASCII code	<table border="1"> <tr><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>30H</td><td>30H</td><td>30H</td><td>30H</td></tr> </table>	0	0	0	0	30H	30H	30H	30H	Binary code	<table border="1"> <tr><td>00H</td><td>00H</td></tr> </table>	00H	00H
0	0	0	0										
30H	30H	30H	30H										
00H	00H												

When communicating data in ASCII code

Sending from the upper byte to the lower byte.

When communicating data in binary code

Sending from the lower byte to the upper byte.

Precautions

Specify "0000H" (indefinite wait) for the CPU module.

End code

Response message

Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data

The command processing result is stored.

When normally completed, "0000H" is stored. When completed with error, an error code set at the request destination is stored.

(For the set error code and corresponding error contents, refer to [Page 139 TROUBLESHOOTING](#) and manuals of the SLMP compatible device of the response station.)

Ex.

	When completed		When failed (for 0400H)																
ASCII code	<table border="1"> <tr><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>30H</td><td>30H</td><td>30H</td><td>30H</td></tr> </table>	0	0	0	0	30H	30H	30H	30H	ASCII code	<table border="1"> <tr><td>0</td><td>4</td><td>0</td><td>0</td></tr> <tr><td>30H</td><td>34H</td><td>30H</td><td>30H</td></tr> </table>	0	4	0	0	30H	34H	30H	30H
0	0	0	0																
30H	30H	30H	30H																
0	4	0	0																
30H	34H	30H	30H																
Binary code	<table border="1"> <tr><td>00H</td><td>00H</td></tr> </table>	00H	00H	Binary code	<table border="1"> <tr><td>00H</td><td>04H</td></tr> </table>	00H	04H												
00H	00H																		
00H	04H																		

Request data

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data

Set a command to be executed and data for the argument of the subcommand.

(Some commands and subcommands do not require the request data specification.)

For details of the request data, refer to the paragraph relating to the command to be executed. (Page 67 Device Access)

Response data

Response message

Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data

The processing result of the request data is stored.

(Some commands do not return response messages.)

For details of the response data, refer to the paragraph relating to the command to be executed. (Page 67 Device Access)

Error information

The request destination network number, request destination station number, request destination module I/O number, and request destination multi-drop station number of the station which responded with errors are stored.

Numbers which differ from the requested station specified by the request message may be stored because the information of the station which responded with errors is stored.

The command and the subcommand specified by the request message of the request data are stored.

Transfer data in character area

This section describes how to transfer bit device data and word device data and data alignment in the character area sent and received between the external equipment and the Ethernet-equipped module by using each command.

The transfer data explained below is handled as the character area A for reading and monitoring and the character area C for writing, testing, and registering the monitor data are stored.

Character area

Request message

Header	Application data									
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Request data length	Monitoring timer	Command	Subcommand	Request data
									Character area A and C	

Response message

Header	Application data							
	Subheader	Request destination network No.	Request destination station No.	Request destination module I/O No.	Request destination multidrop station No.	Response data length	End code	Response data
							Character area B	

Communicating data (when communicating in ASCII code)

■When bit device memory is read or written

The bit device memory is handled in 1-bit (1-point) units or in 1-word (16-point) units.


The transfer data in each case is described below.

- In 1-bit (1-point) units

When the bit device memory is handled in 1-bit units, specify 1-point (1-byte) with an ASCII code, and express "1" (31H) for ON and "0" (30H) for OFF. Specify for the number of devices starting from the head device in the order of device numbers.

Ex.

When indicating the on/off status of five devices starting from M10

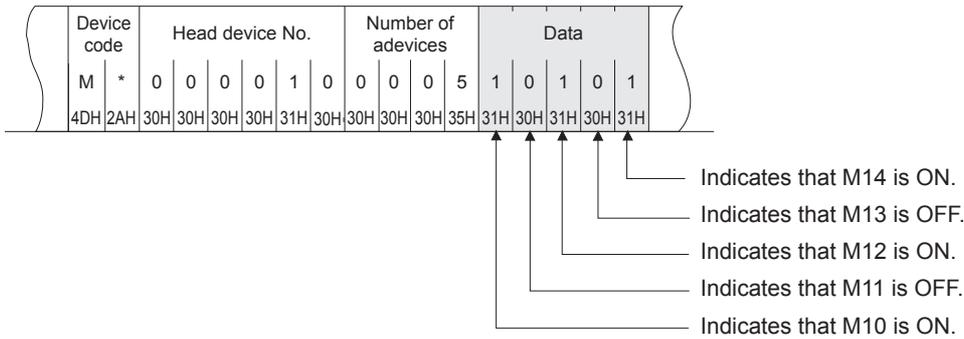


- In 1-word (16-point) units

When the bit device memory is handled in 1-word units, specify one word (16 bits) with a 4-digit ASCII code, and express 1-point with 1-bit ON/OFF. Specify for the number of devices starting from the head device in 1-word units in the order from the most significant bit to the least significant bit (b15 to b0).

Ex.

When indicating the on/off status of 32 devices starting from M16

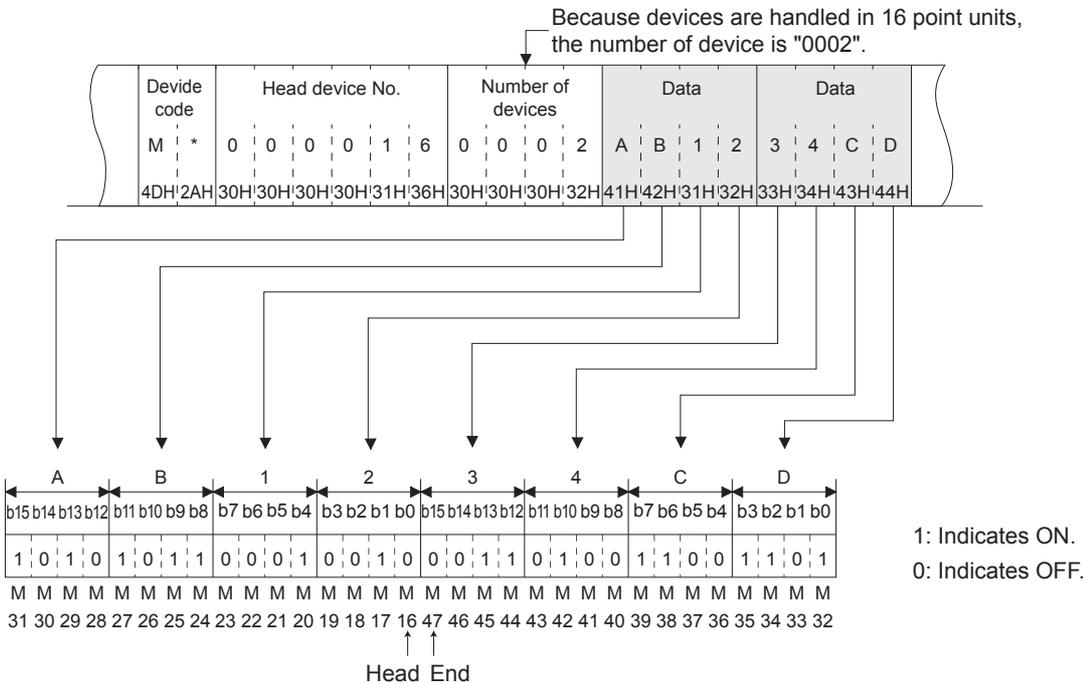


When word device memory is read or written

One word device is expressed with a 1-word (4-byte) 4-digit ASCII code (hexadecimal). Specify for the number of devices starting from the head device in 1-word units in the order from the most significant byte to the least significant byte (b15 to b0).

Ex.

When indicating the contents stored in the data registers D350 and D351

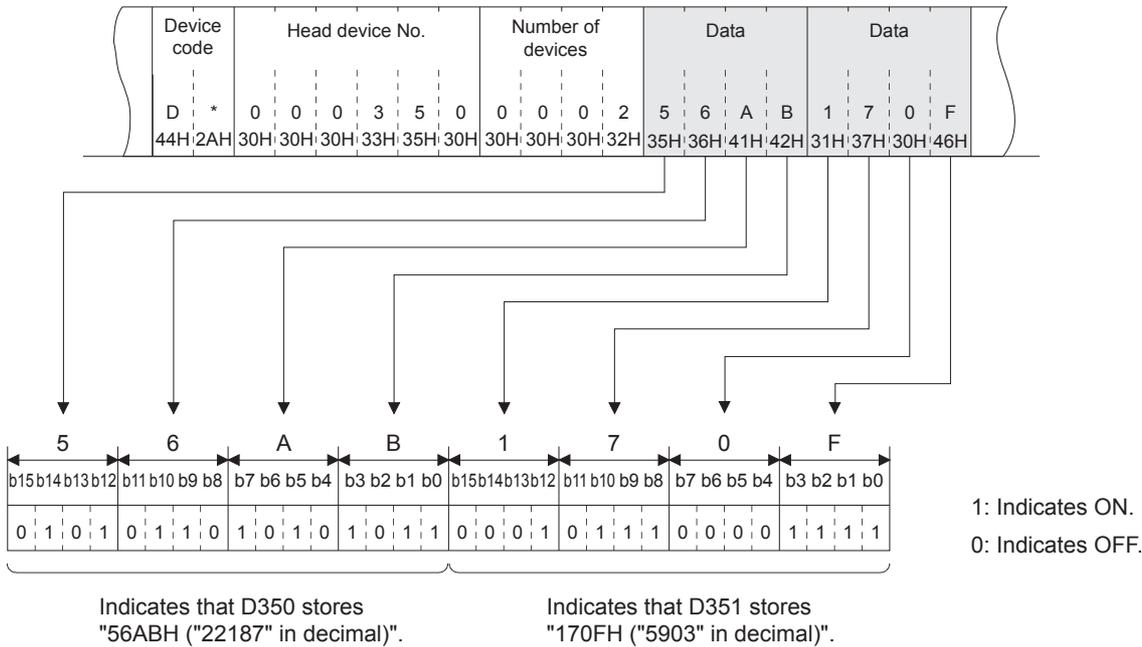

Point

Use capitalized code for alphabetical letter.

When data other than integer value (real number, character string), is stored in the word device memory for reading data, the stored value are read as integer value.

(Example 1) When a real number (0.75) is stored in D0 and D1, the value is read as the following integer value.

- D0 = 0000H, D1 = 3F40H

(Example 2) When a character string (12AB) is stored in D2 and D3, the character string is read as the following integer value.

- D2 = 3231H, D3 = 4241H

Data in word units handled when reading and writing buffer memory areas is expressed in the same way as the word device memory.

Communicating data (When communicating data in binary code)

■When bit device memory is read or written

The bit device memory is handled in 1-bit (1-point) units or in 1-word (16-point) units.


The transfer data in each case is described below.

- In 1-bit (1-point) units

When the bit device memory is handled in 1-bit units, specify 1-point, 4 bits, (two points, 1 byte) with a binary code, "1" for ON and "0" for OFF. Specify for the number of devices starting from the head device in the order of device numbers from the most significant bit.

Ex.

When indicating the on/off status of five devices starting from M10

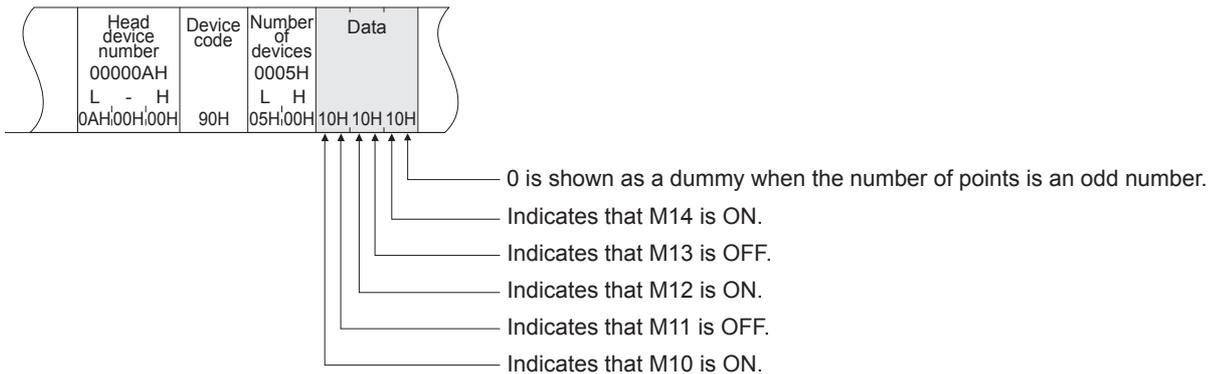


- In 1-word (16-point) units

When the bit device memory is handled in 1-word units, specify one word (2 bytes) with a binary code, and express 1-point with 1-bit ON/OFF. Specify for the number of devices starting from the head device in 1-word units in the order from the least significant bytes (b7 to b0) to the most significant bytes (b15 to b8).

Ex.

When indicating the on/off status of 32 devices starting from M16

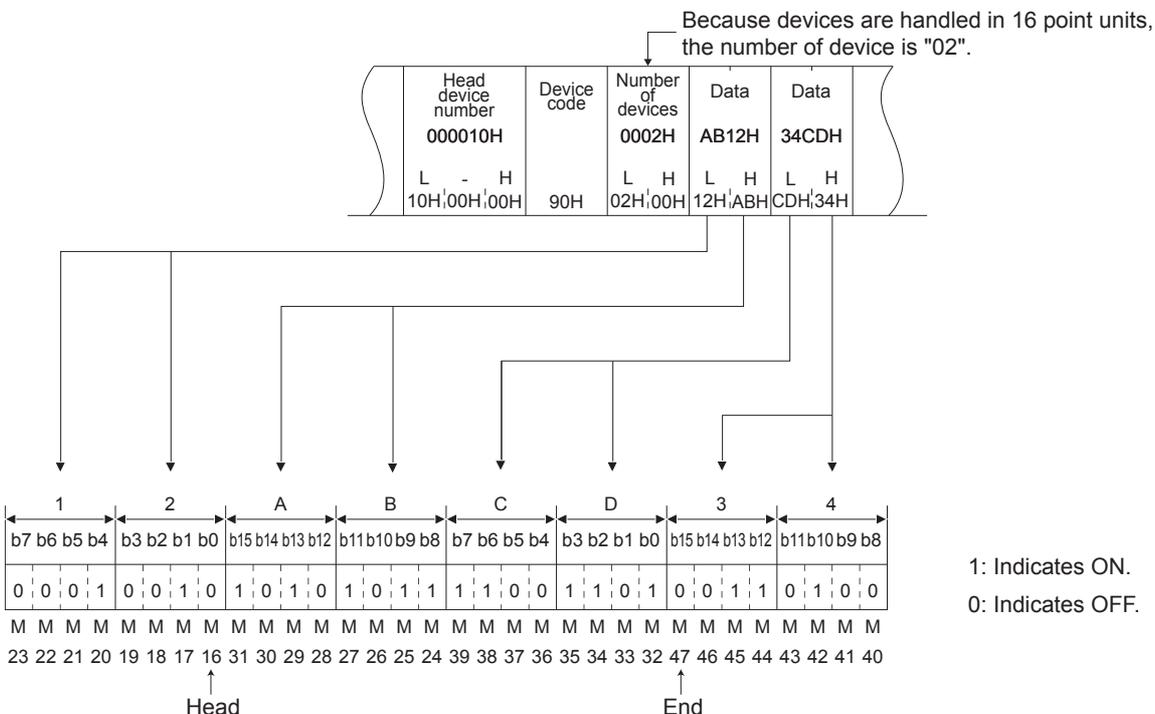


When word device memory is read or written

One word device memory is expressed with a 1-word (2-byte) 4-digit binary code (hexadecimal). Specify for the number of devices starting from the head device in 1-word units in the order from the least significant bytes (b7 to b0) to the most significant bytes (b15 to b8).

Ex.

When indicating the contents stored in the data registers D350 and D351

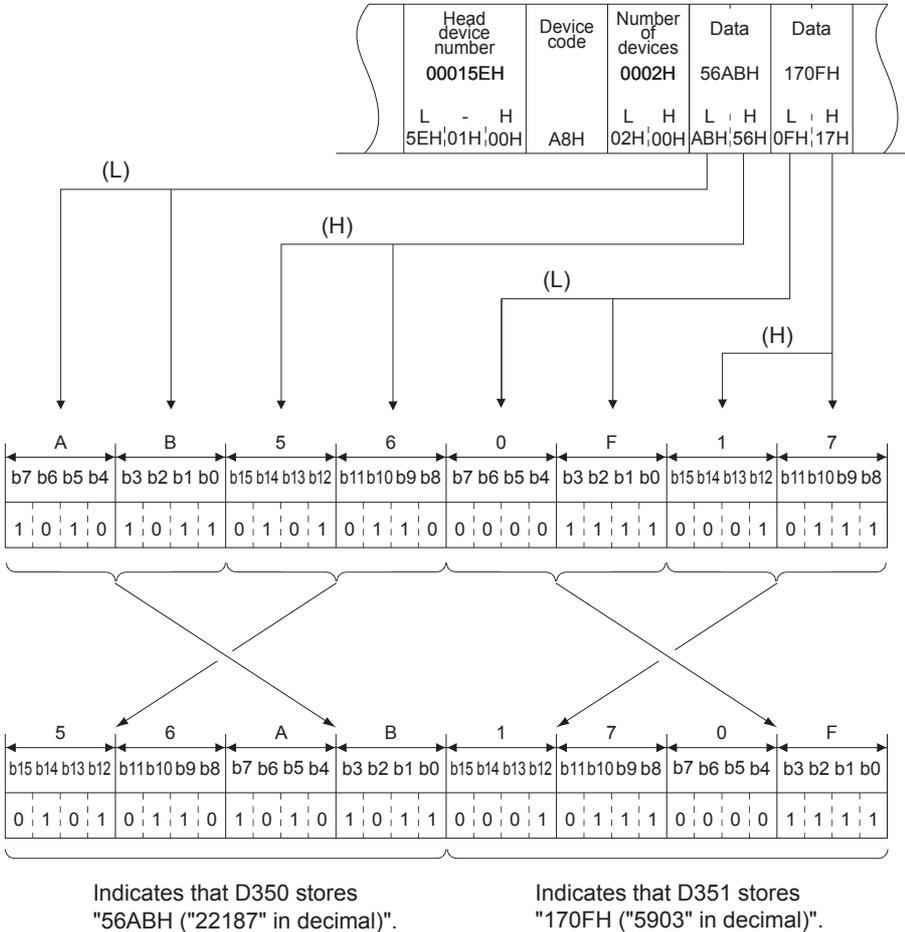

1: Indicates ON.
0: Indicates OFF.

Point

When data other than integer value (real number, character string), is stored in the word device memory for reading data, the stored value are read as integer value.

(Example 1) When a real number (0.75) is stored in D0 and D1, the value is read as the following integer value.

- D0 = 0000H, D1 = 3F40H

(Example 2) When a character string (12AB) is stored in D2 and D3, the character string is read as the following integer value.

- D2 = 3231H, D3 = 4241H

Reading and writing extension file registers and buffer memory areas are performed in the same way as those of the word device memory.

Character areas


This section explains character areas in the control procedure (data area when communicating in binary code).

- Character areas differ depending on command to be used and contents to be specified. This section explains the data common to the character area when the device memory to be read or written is specified directly.
- Character area data handled only by a certain command and not by others, is explained in the section that explains the corresponding command.


Data of character area (when communicating in ASCII code)

The data order and contents of character areas A, B, and C are identical when the same command is used under the same conditions in the control procedure when communicating using ASCII code.

■In the case of reading

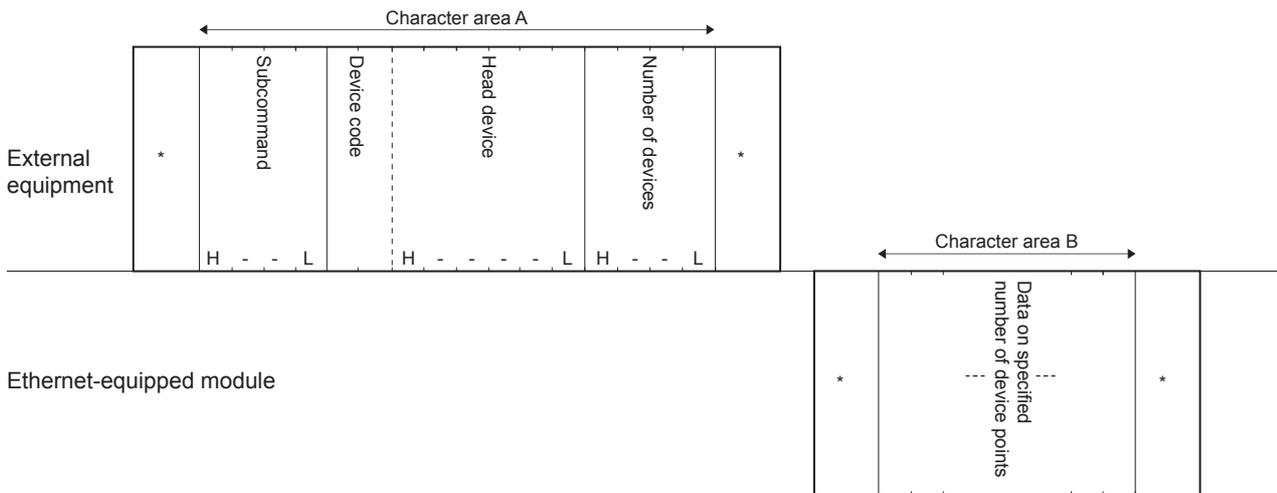


■In the case of writing

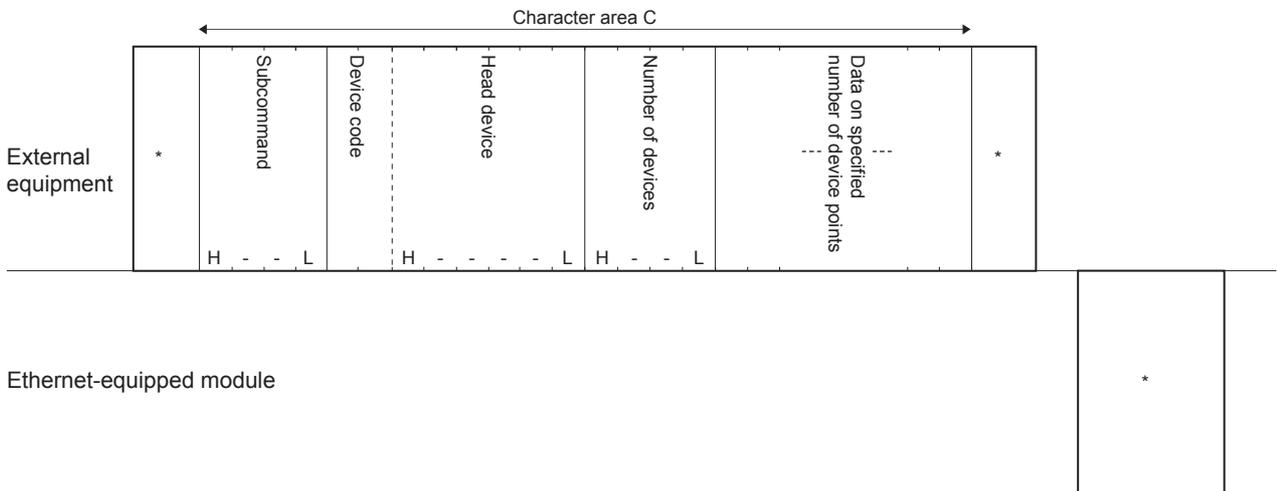


The data array and the data contents marked with * are shown in Page 18 Message format and control procedure.

Data of data area (when communicating in binary code)

■In the case of reading

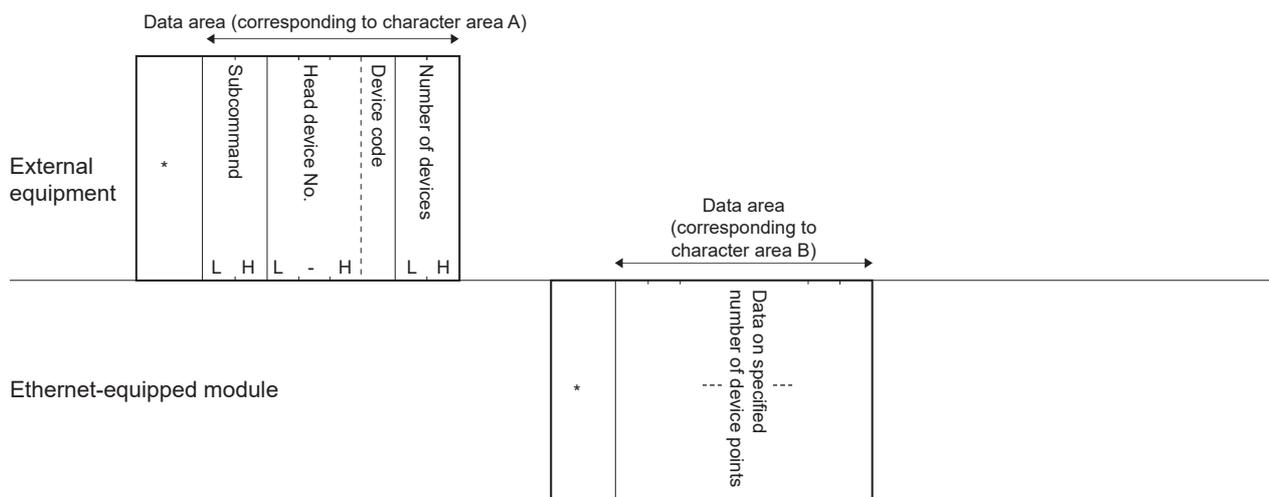

■In the case of writing

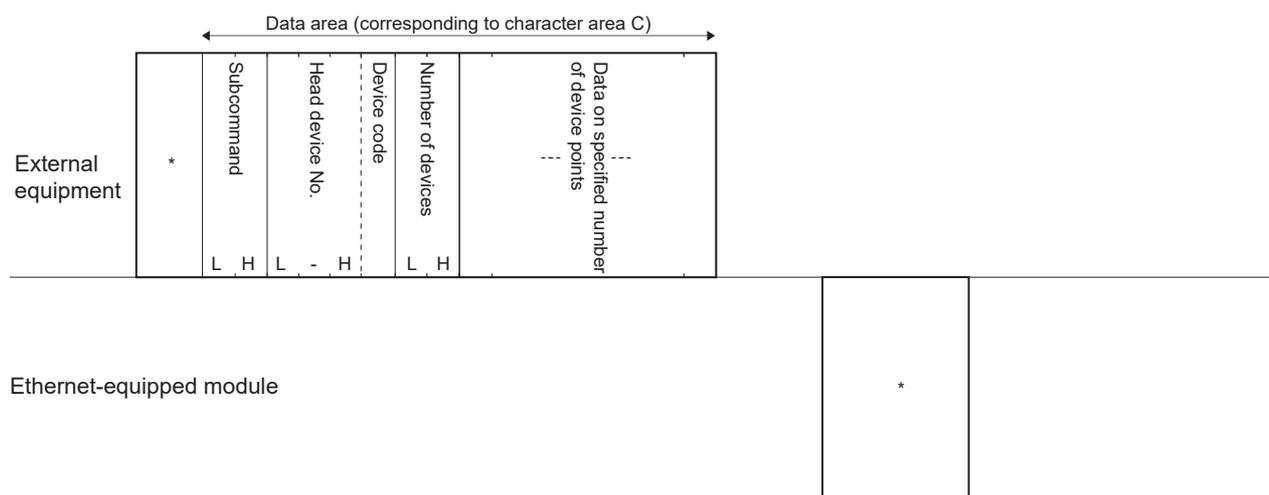

The data array and the data contents marked with * are shown in [Page 18 Message format and control procedure](#).

Data contents common to character areas

■Subcommand

Subcommands are data for specifying the unit for reading and writing, device type to be specified, and the data reading condition.

The following table shows the details of setting items.

Setting item	Description	
Data size specification	Word units	<ul style="list-style-type: none"> The target data is read or written in word units. Select "0" even when the reading data or writing data does not exist in arguments of the command.
	Bit units	The target data is read or written in bit units.
Device specification format	2 digit code/6 digit number specification	Data or items related to the address specifications are expressed in the following sizes, which are the same as the existing setting. <ul style="list-style-type: none"> Device code: 1 byte in binary Device number: 3 bytes in binary
	4 digit code/8 digit number specification	Data or items related to the address specifications are extended to the following size. <ul style="list-style-type: none"> Device code: 2 byte in binary Device number: 4 bytes in binary
Device memory extension specification	Not specified	Set this when specifying devices of a Ethernet-equipped module. * Set this when not using the device memory extension specification.
	Specified	<ul style="list-style-type: none"> Set this for the buffer memory specification of the intelligent function module. This setting corresponds to the buffer memory indirect specification with index register.


① When communicating data in ASCII code

The value 0000H(0), or the following value, is converted to a 4 digit (hexadecimal) ASCII code and sequentially transmitted beginning from the most significant digit ("0").

② When communicating data in binary code

The value 0000H, or the following 2-byte value, is used for transmission.

③ The following figure shows the specification contents of the subcommand.

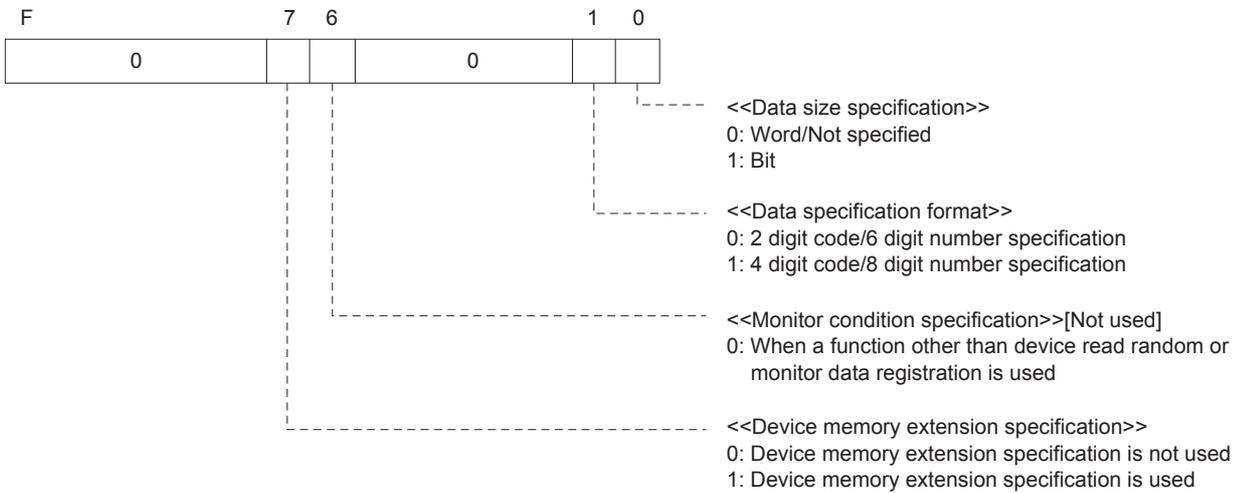

④ In the following cases, the subcommand is 0000H or 0001H.

- When neither monitor condition nor device memory extension is specified.
- When using a command that cannot select monitor condition specification and device memory extension specification.

■ Device code

Device codes are data for identifying the device memory to be read or written.

Device codes are shown in Page 68 Device range.

① When communicating data in ASCII code

Device codes are converted into 2-digit ASCII code (when word device is specified) or 4-digit ASCII code (when long device is specified), and the device codes are sequentially sent beginning from the most significant digit. Use capitalized code for alphabetical letter in ASCII code.

Ex.

In the case of input (X)



The input relay device code "X*" is sequentially sent from "X".

The second character "*" can be specified by a space (code: 20H).

② When communicating data in binary code

The data is sent with the binary codes.

Ex.

In the case of input (X)



Head device No. (device No.)

Data for specifying the number of the device to read data from or write data to. When specifying continuous device areas, specify the head number of the device range. Specify the head device number by the expressing method for the relevant device (octal, decimal or hexadecimal number).

For the device number and expressing method, refer to  Page 68 Device range.

① When communicating data in ASCII code

The device number is converted to a 6-digit ASCII code (when word device is specified) or 8-digit ASCII code (when long device is specified), and sequentially sent beginning from the most significant digit.

The "0" column of the most significant digit (in for example "001234", this refers to "0" of the first two characters) can also be specified by a space (code: 20H).

Ex.

In the case of the device number is "1234"



② When communicating data in binary code

The 3-byte (2 digit code/6 digit number specification) or 4-byte (4 digit code/8 digit number specification) binary code with the device number specified by the device specification format is sequentially sent starting from the low byte. The device with decimal device number is sent after converting to hexadecimal device number.

Ex.

In case of internal relay M1234 and link relay B1234



Internal relay M1234 becomes 0004D2H and is sent in the order of D2H, 04H, and 00H.

Link relay B1234 becomes 001234H and is sent in the order of 34H, 12H, and 00H.

Number of devices


This data is for specifying the number of points to be read or written when each command is executed. It must be specified within the limits of the number of points that can be processed per communication. ( Page 67 Commands)

① When communicating data in ASCII code

Points are converted into 4-digit hexadecimal ASCII code (when word device is specified) or 8-digits ASCII code (when long device is specified) with the device number that specified by the device specification format and sequentially sent beginning from the most significant digit. Use capitalized code for alphabetical letter in ASCII code.

Ex.

In the case of 5 points and 20 points

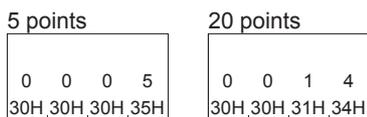

②When communicating data in binary code

Use numerical values in 2 bytes which indicate the number of points to be processed, and send them in order from the lower byte to the upper byte.

Ex.

In the case of 5 points and 20 points

5 points

05H,00H

20 points

14H,00H

■Data on specified number of device points

This field holds the contents of the data written to the specified device, or the contents of the data read from the specified device. The data order changes depending on the processing units (words or bits).

For the data contents and order (transmission order), refer to  Page 31 Transfer data in character area.

■Bit access points

This data is for specifying the number of points to be accessed in units of bits. It must be specified within the limits of the number of points processed per communication. ( Page 67 Commands)

①When communicating data in ASCII code

The number of the bytes is converted into 2-digit ASCII code (hexadecimal) and sequentially sent beginning from the most significant digit. Use capitalized code for alphabetical letter in ASCII code.

Ex.

In the case of 5 points and 20 points

5 points

0 0 0 5
30H,30H,30H,35H

20 points

0 0 1 4
30H,30H,31H,34H

②When communicating data in binary code

The 1-byte value (hexadecimal), which indicates the number of the points, is used for transmission.

Ex.

In the case of 5 points and 20 points

5 points

05H,00H

20 points

14H,00H

Device memory extension specification (subcommand: bit7)

For details, refer to  Page 141 Device Memory Extension Specification.


This section explains how to read or write from/to a device to/from module access device areas and how to specify a device indirectly by using index register.

Message format


Response messages are extended as well.

When communicating data in ASCII code

2 digit code/6 digit number specification

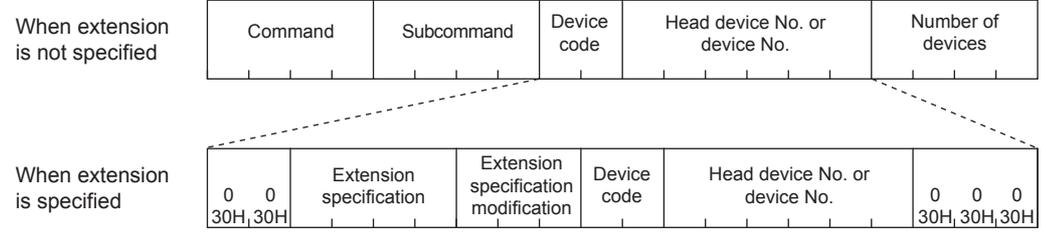


4 digit code/8 digit number specification

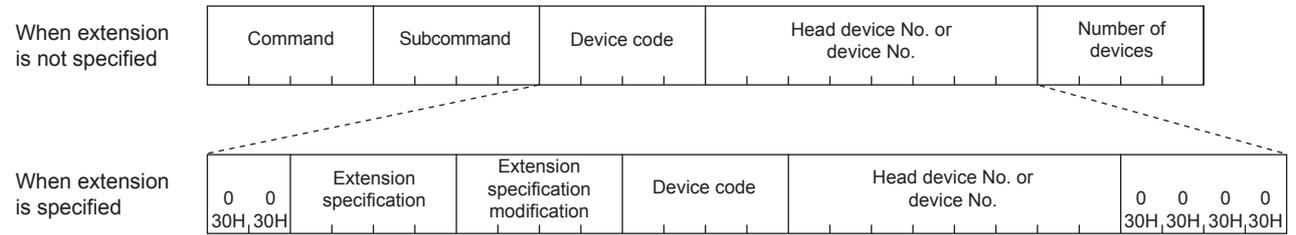


When communicating data in binary code

2 digit code/6 digit number specification

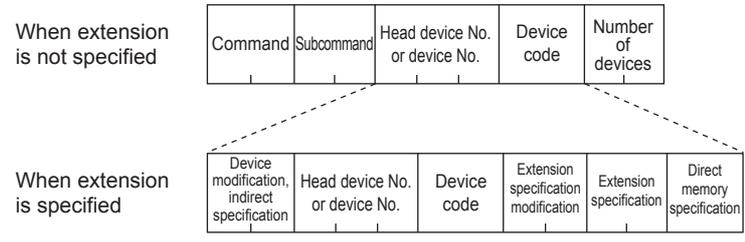


4 digit code/8 digit number specification

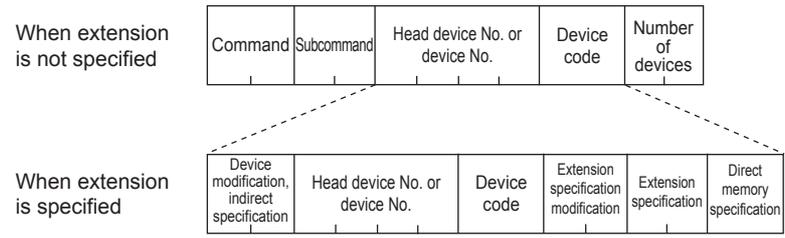

2 Module access device specification

The following shows the approach for module access device specification in programming and request data.

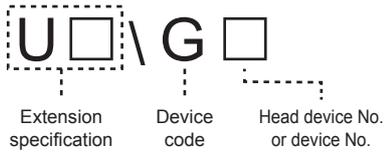

Extension specification

Specify the module number of intelligent function modules.

ASCII code	Binary code
Specify the start I/O number in hexadecimal (3-digit ASCII code). When described with 4-digits, specify the start I/O number with the upper 3-digits.	Specify the module number in hexadecimal (2 bytes). When described with 4-digits, specify the module number with the upper 3-digits.
<div style="text-align: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Example</div> 001 </div> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px;"> U □ □ □ 55H, _____ </div> <div style="border: 1px solid black; padding: 5px;"> U 0 0 1 55H, 30H, 30H, 31H </div> </div>	<div style="text-align: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Example</div> 001 </div> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px;"> □ □ H □ □ H </div> <div style="border: 1px solid black; padding: 5px;"> 01H, 00H </div> </div>

Device code

Specify the module access device. (☞ Page 68 Device range)

Head device No. or device No.

The format is the same as the message when extension is not specified.

3.2 1E Frame

This section describes the message format for each command when performing the data communication using the 1E frame.

Message format and control procedure

This section describes the message format and the control procedures when performing the data communication using the 1E frame.

Data format

The data format consists of header and application data.

Request message

Header	Application data			
	Subheader	PC No.	Monitoring timer	Request data

Response message

Header	Application data		
	Subheader	End code	Response data

Header

This header is for TCP/IP and UDP/IP.

Add the header for external equipment to Ethernet-equipped module (command message) at the external equipment side before sending the message (normally the header is added automatically).

It is not necessary to set the header for Ethernet-equipped module to external equipment (response message) by the user because the header is added by the Ethernet-equipped module automatically.


Application data

Application data is divided into subheader and text.


The subheader indicates whether a message is a command message or a response message. (☞ Page 44 Subheader configuration)

Text is the request data (command) and the response data (response) in each function. (☞ Page 121 1E FRAME COMMANDS)

■When communicating data in ASCII code

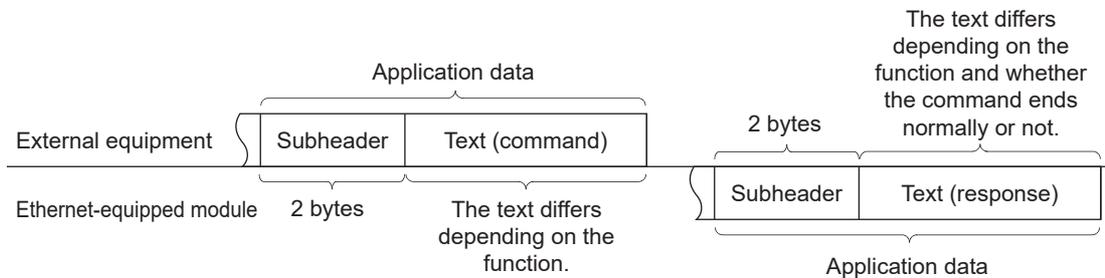

■When communicating data in binary code

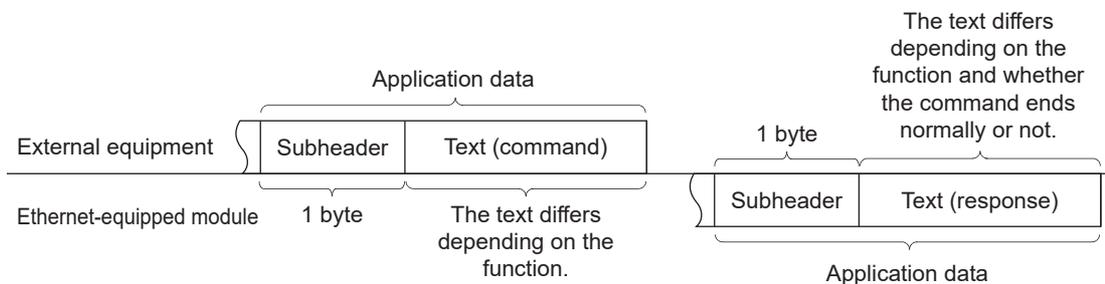


Point

It is not necessary to set the response to a command from the external equipment by the user because the response is created and sent by the Ethernet-equipped module.


Subheader configuration

This section describes the subheader configuration.

■When communicating data in ASCII code

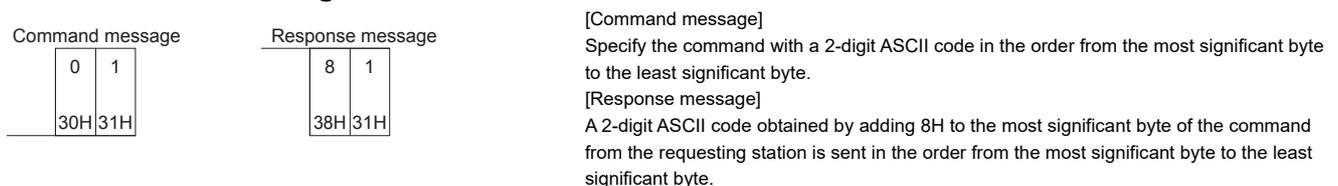

■When communicating data in binary code

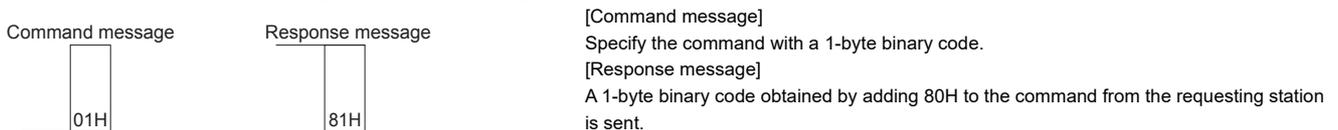

Precautions

When the communication data code is an ASCII code, if data that cannot be binary converted into a subheader is specified, the data cannot be recognized as a 1E frame message, and no response message is returned.

Control procedure

This section describes the control procedures and the format of the application data when performing the data communication.

The □ (Thick line) part shown in the message explanation diagram of this section are items common to all commands. For the data contents and the data specification method of the □ (Thick line) part, refer to [Page 48 Application data specification items](#).

Point

Data code (ASCII/binary) to be used when communicating, it is determined by the parameters of the GX Works3.

[CPU module]


Navigation window ⇒ [Parameter] ⇒ [FX5UCPU] ⇒ [Module Parameter] ⇒ [Ethernet Port] ⇒ [Basic Settings] ⇒ [Own Node Settings] ⇒ "Communication Date Code"

[Ethernet module]

Navigation window ⇒ [Parameter] ⇒ [Module Information] ⇒ [FX5-ENET] or [FX5-ENET/IP] ⇒ [Basic Settings] ⇒ [Own Node Settings] ⇒ "Communication Date Code"

When communicating data in ASCII code


- When data is read from a Ethernet-equipped module by external equipment

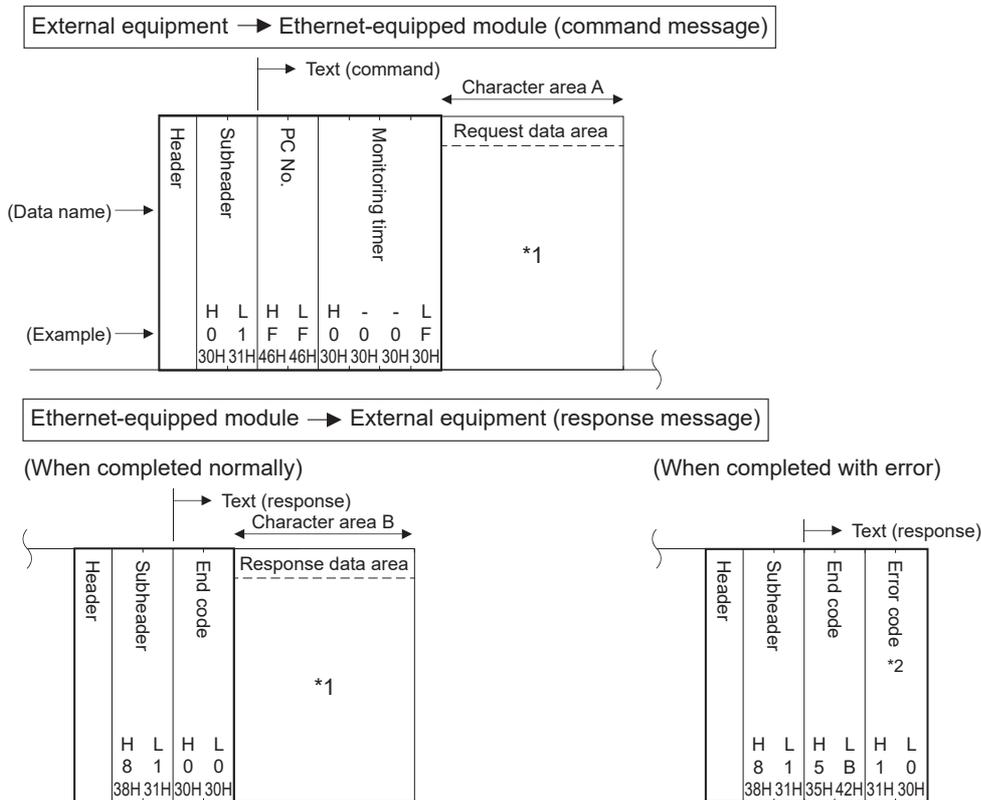

*1 The order of data items differs depending on the command. For details, refer to [Page 122 Device Access](#).


*2 The error code is stored when the end code is "5BH."

- When data is written from external equipment to a Ethernet-equipped module

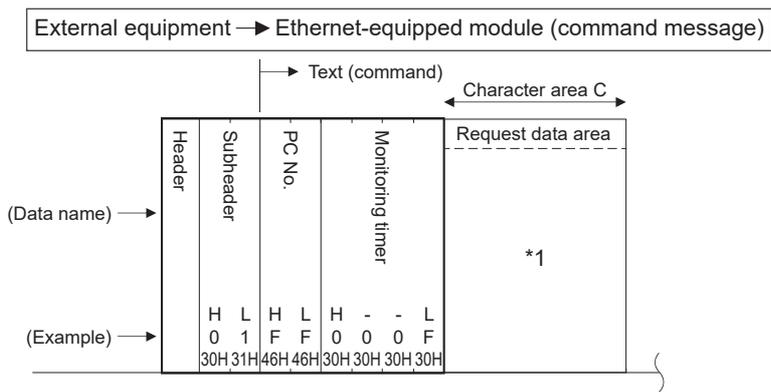


Ethernet-equipped module → External equipment (response message)

(When completed normally)

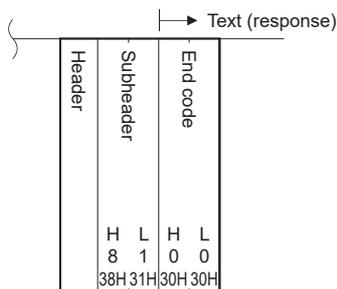

(When completed with error)

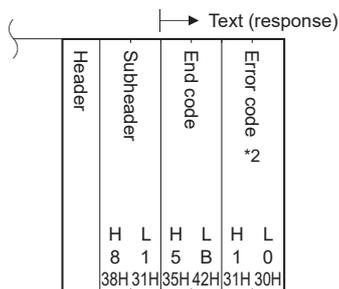


*1 The order of data items differs depending on the command. For details, refer to Page 122 Device Access.

*2 The error code is stored when the end code is "5BH."

■When communicating data in binary code


- When data is read from a Ethernet-equipped module by external equipment

External equipment → Ethernet-equipped module (command message)

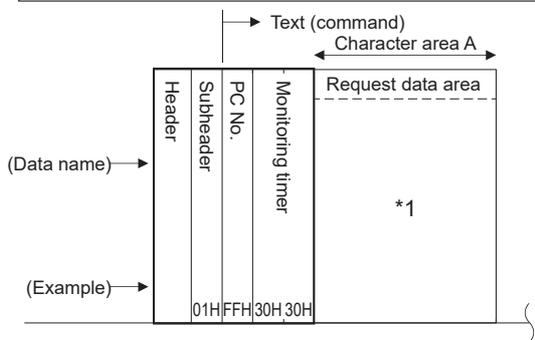


Ethernet-equipped module → External equipment (response message)

(When completed normally)

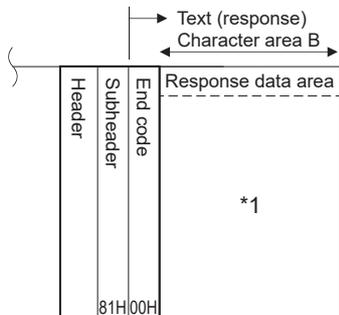


(When completed with error)

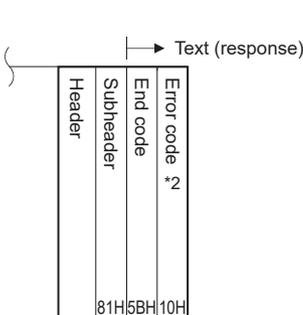

*1 The order of data items differs depending on the command. For details, refer to Page 122 Device Access.

*2 The error code is stored when the end code is "5BH."

- When data is written from external equipment to a Ethernet-equipped module

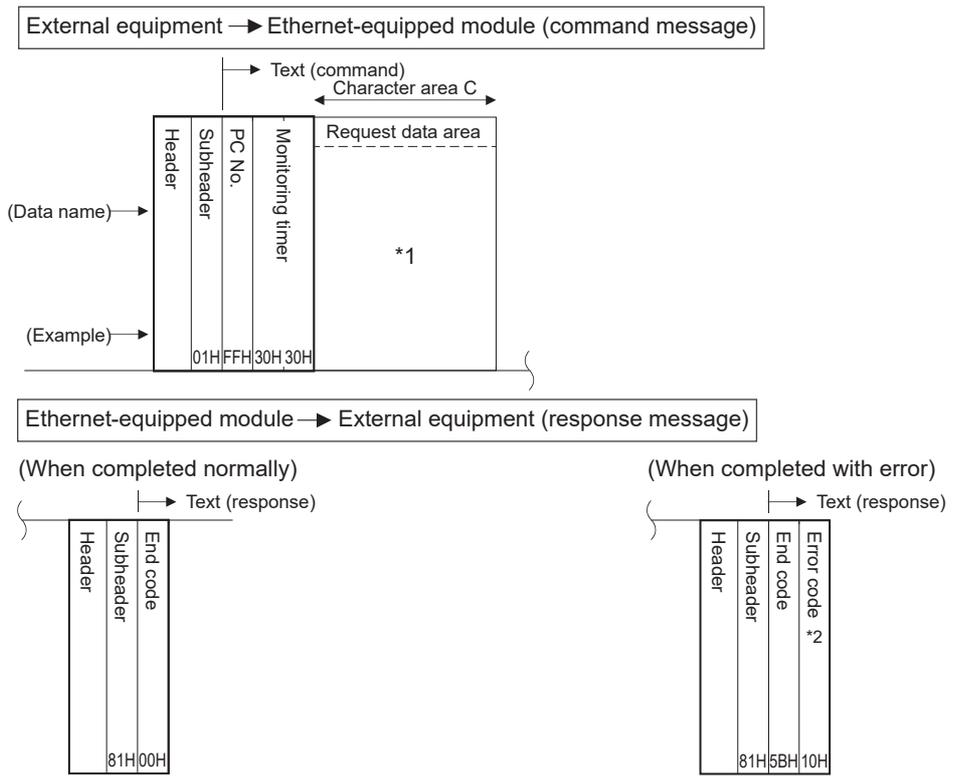

*1 The order of data items differs depending on the command. For details, refer to Page 122 Device Access.

*2 The error code is stored when the end code is "5BH."

Application data specification items


This section describes the data contents and the specification method of common data items in the application data in each message when performing the data communication using the 1E frame.

PC No.

Request message

Header	Application data			
	Subheader	PC No.	Monitoring timer	Request data

Specify the request destination PC No. to be used as an access destination in hexadecimal. Only the connecting station (FFH) can be specified as the access destination.

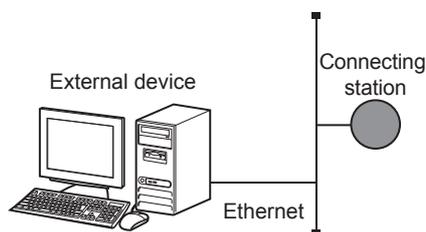

Ex.

When specifying the connecting station (PC No. FFH)

ASCII code	<table border="1"> <tr><td>F</td><td>F</td></tr> <tr><td>46H</td><td>46H</td></tr> </table> <p>PC No.</p>	F	F	46H	46H	Binary code	<table border="1"> <tr><td>FFH</td></tr> </table> <p>PC No.</p>	FFH
F	F							
46H	46H							
FFH								

Precautions

When the communication data code is an ASCII code, if data that cannot be binary converted into a PC number is specified, the data cannot be recognized as a 1E frame message, and no response message is returned.

Monitoring timer

Request message

Header	Application data			
	Subheader	PC No.	Monitoring timer	Request data

This timer is used to set the wait time until a response is returned after the SLMP-compatible device that has received a request message from an external device sends a processing request to the accessed device.

- 0000H (0): Indefinitely waiting (waiting until the processing is completed)
- 0001H to FFFFH (1 to 65535)*1: Wait time (unit: 250 ms)

*1 Supported only for Ethernet modules.

For normal data communication, it is recommended to use this message within the setting range shown in the following table depending on the communication destination.

Access destination	Monitoring timer
Other station	01H to 28H (0.25 sec to 10 sec)

■When communicating data in ASCII code

Sending from the upper byte to the lower byte.

■When communicating data in binary code


Sending from the lower byte to the upper byte.

Precautions

Specify "0000H" (indefinite wait) for the CPU module.

Ex.

When specifying the 0000H (Unlimited wait)

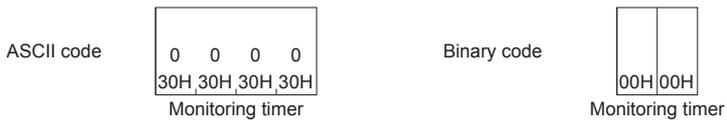

End code


■Response message

Header	Application data		
	Subheader	End code	Response data

The command processing result is stored.

When normally completed, "00H" is stored. When completed with error, an error code set at the request destination is stored. (For the set error code and corresponding error contents, refer to [Page 139 TROUBLESHOOTING](#) and manuals of the SLMP compatible device of the response station.)

Ex.

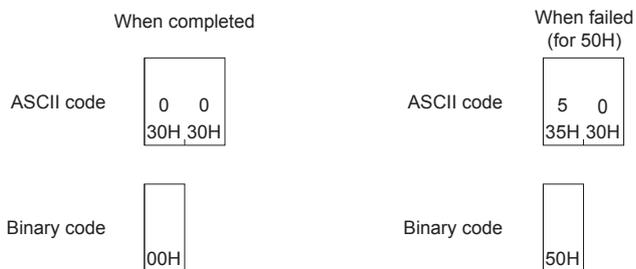

Request data

■Request message

Header	Application data			
	Subheader	PC No.	Monitoring timer	Request data

Set the data that is the argument of the command to be executed.

(Some commands do not require the request data specification.)

For details of the request data, refer to the paragraph relating to the command to be executed. ([Page 122 Device Access](#))

Response data

■Response message

Header	Application data		
	Subheader	End code	Response data

The processing result of the request data is stored
(Some commands do not return response messages.)

For details of the response data, refer to the paragraph relating to the command to be executed. (Page 122 Device Access)

Transfer data in character area

This section describes how to transfer bit device data and word device data and data alignment in the character area sent and received between the external equipment and the Ethernet-equipped module by using each command.

The transfer data explained below is handled as the character area A for reading and monitoring and the character area C for writing, testing, and registering the monitor data are stored.

Character area

■Request message

Header	Application data			
	Subheader	PC No.	Monitoring timer	Request data

Character area A and C

■Response message

Header	Application data		
	Subheader	End code	Response data

Character area B

Communicating data (when communicating in ASCII code)

■When bit device memory is read or written

The bit device memory is handled in 1-bit (1-point) units or in 1-word (16-point) units.


The transfer data in each case is described below.

- In 1-bit (1-point) units

When the bit device memory is handled in 1-bit units, specify 1-point (1-byte) with an ASCII code, and express "1" (31H) for ON and "0" (30H) for OFF. Specify for the number of devices starting from the head device in the order of device numbers.

Ex.

When indicating the on/off status of five devices starting from M10

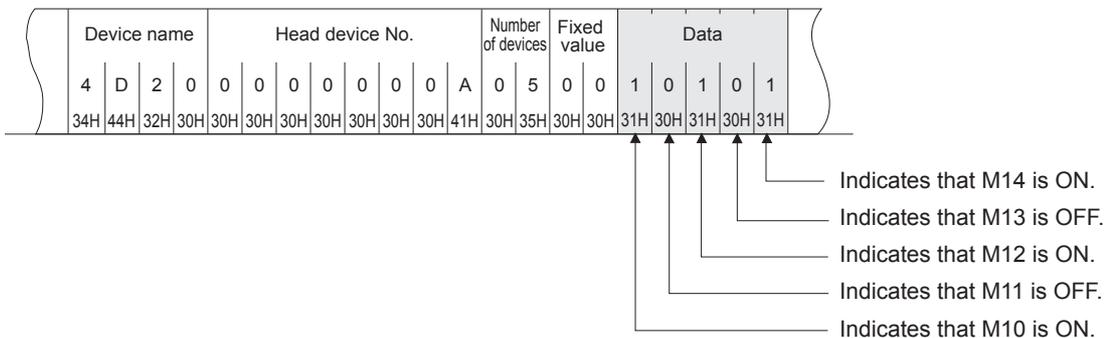


- In 1-word (16-point) units

When the bit device memory is handled in 1-word units, specify one word (16 bits) with a 4-digit ASCII code, and express 1-point with 1-bit ON/OFF. Specify for the number of devices starting from the head device in 1-word units in the order from the most significant bit to the least significant bit (b15 to b0).

Ex.

When indicating the on/off status of 32 devices starting from M16

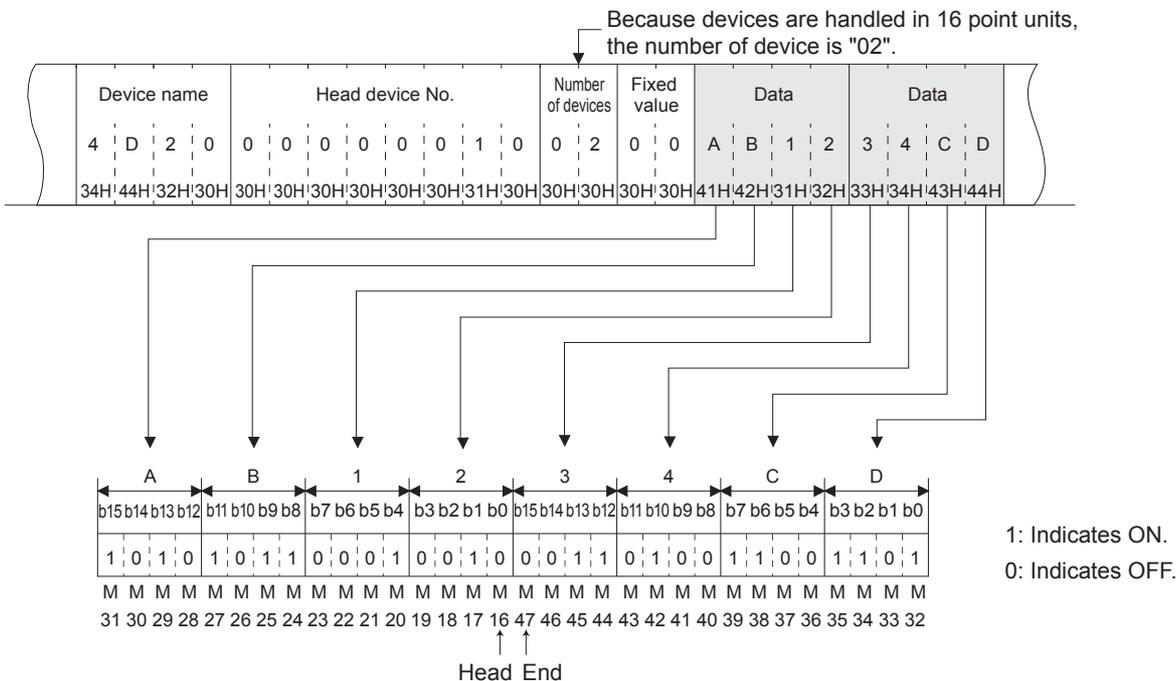


■When word device memory is read or written

One word device is expressed with a 1-word (4-byte) 4-digit ASCII code (hexadecimal). Specify for the number of devices starting from the head device in 1-word units in the order from the most significant byte to the least significant byte (b15 to b0).

Ex.

When indicating the contents stored in the data registers D350 and D351

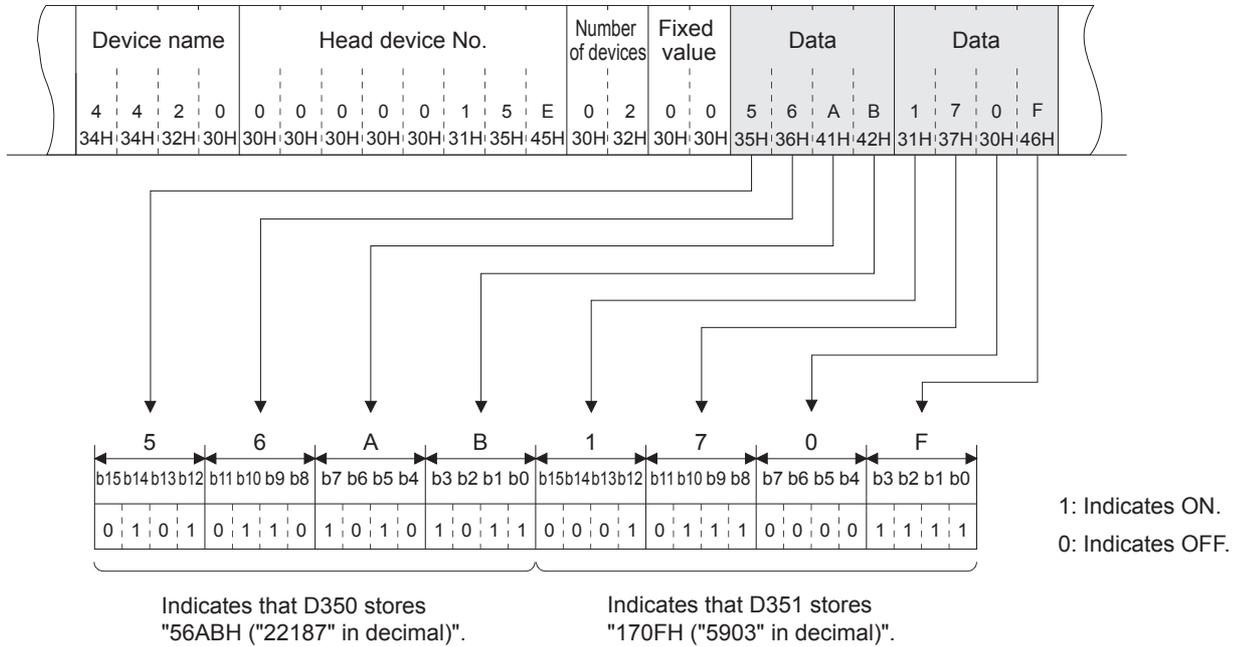

Point

Use capitalized code for alphabetical letter.

When data other than integer value (real number, character string), is stored in the word device memory for reading data, the stored value are read as integer value.

(Example 1) When a real number (0.75) is stored in D0 and D1, the value is read as the following integer value.

- D0 = 0000H, D1 = 3F40H

(Example 2) When a character string (12AB) is stored in D2 and D3, the character string is read as the following integer value.

- D2 = 3231H, D3 = 4241H

Communicating data (When communicating data in binary code)

■When bit device memory is read or written

The bit device memory is handled in 1-bit (1-point) units or in 1-word (16-point) units.

The transfer data in each case is described below.


- In 1-bit (1-point) units

When the bit device memory is handled in 1-bit units, specify 1-point, 4 bits, (two points, 1 byte) with a binary code, "1" for ON and "0" for OFF. Specify for the number of devices starting from the head device in the order of device numbers from the most significant bit.

Ex.

When indicating the on/off status of five devices starting from M10

Head device No. L - - H	Device name L H	Number of devices	Fixed value	Data
0000000AH	4D20H	05H	00H	10H 10H 10H
0AH 00H 00H 00H	20H 4DH			

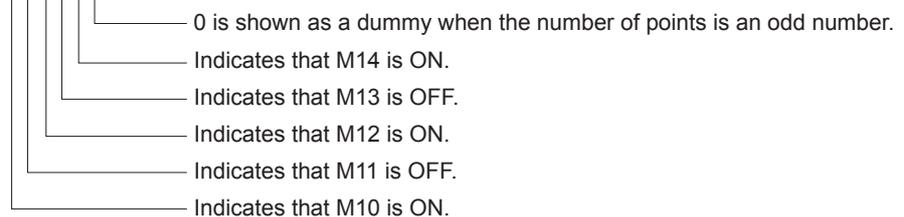

- In 1-word (16-point) units


When the bit device memory is handled in 1-word units, specify one word (2 bytes) with a binary code, and express 1-point with 1-bit ON/OFF. Specify for the number of devices starting from the head device in 1-word units in the order from the least significant bytes (b7 to b0) to the most significant bytes (b15 to b8).

Ex.

When indicating the on/off status of 32 devices starting from M16

Because devices are handled in 16 point units, the number of device is "02".

Head device No. L - - H	Device name L H	Number of devices	Fixed value	Data L H	Data L H
000010H	4D20H	02H	00H	AB12H	34CDH
10H 00H 00H 00H	20H 4DH			12H ABH	CDH 34H

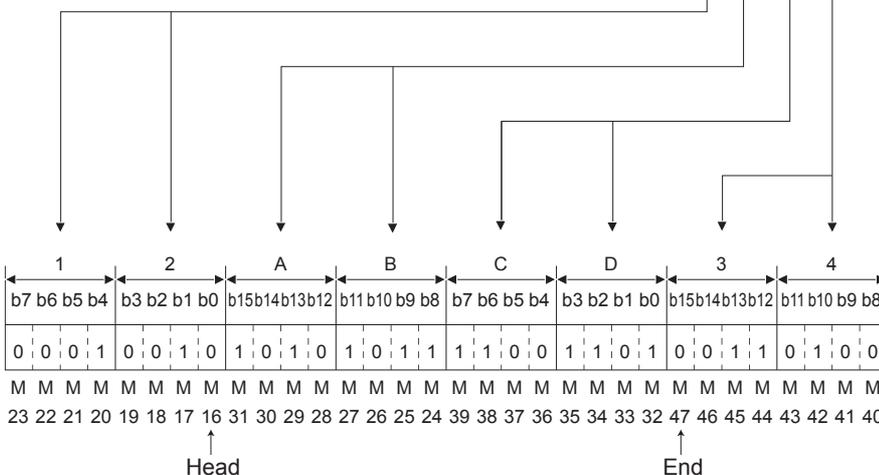


1: Indicates ON.
0: Indicates OFF.

■When word device memory is read or written

One word device memory is expressed with a 1-word (2-byte) 4-digit binary code (hexadecimal). Specify for the number of devices starting from the head device in 1-word units in the order from the least significant bytes (b7 to b0) to the most significant bytes (b15 to b8).

Ex.

When indicating the contents stored in the data registers D350 and D351

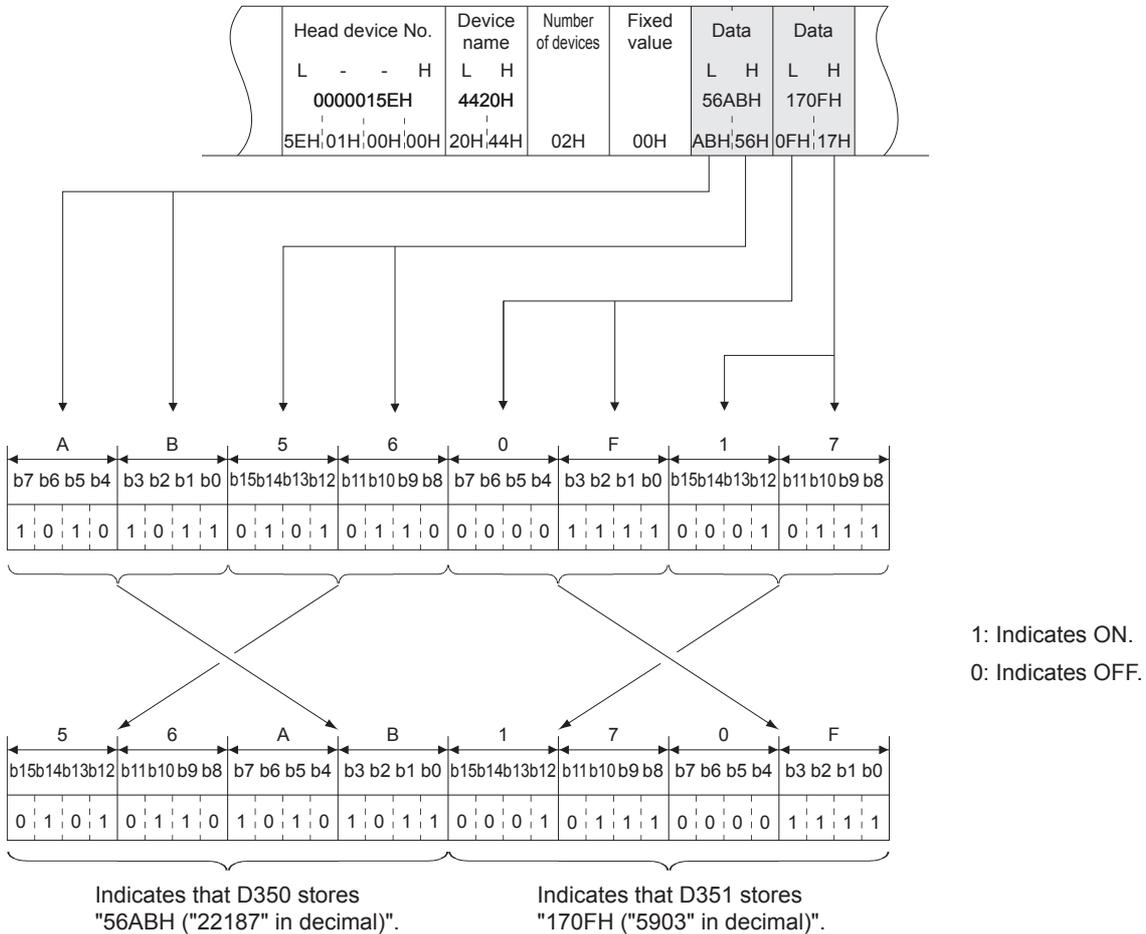

Point

When data other than integer value (real number, character string), is stored in the word device memory for reading data, the stored value are read as integer value.

(Example 1) When a real number (0.75) is stored in D0 and D1, the value is read as the following integer value.

- D0 = 0000H, D1 = 3F40H

(Example 2) When a character string (12AB) is stored in D2 and D3, the character string is read as the following integer value.

- D2 = 3231H, D3 = 4241H

Character areas


This section explains character areas in the control procedure (data area when communicating in binary code).

- Character areas differ depending on command to be used and contents to be specified. This section explains the data common to the character area when the device memory to be read or written is specified directly.
- Character area data handled only by a certain command and not by others, is explained in the section that explains the corresponding command.


Data of character area (when communicating in ASCII code)

The data order and contents of character areas A, B, and C are identical when the same command is used under the same conditions in the control procedure when communicating using ASCII code.

■In the case of reading

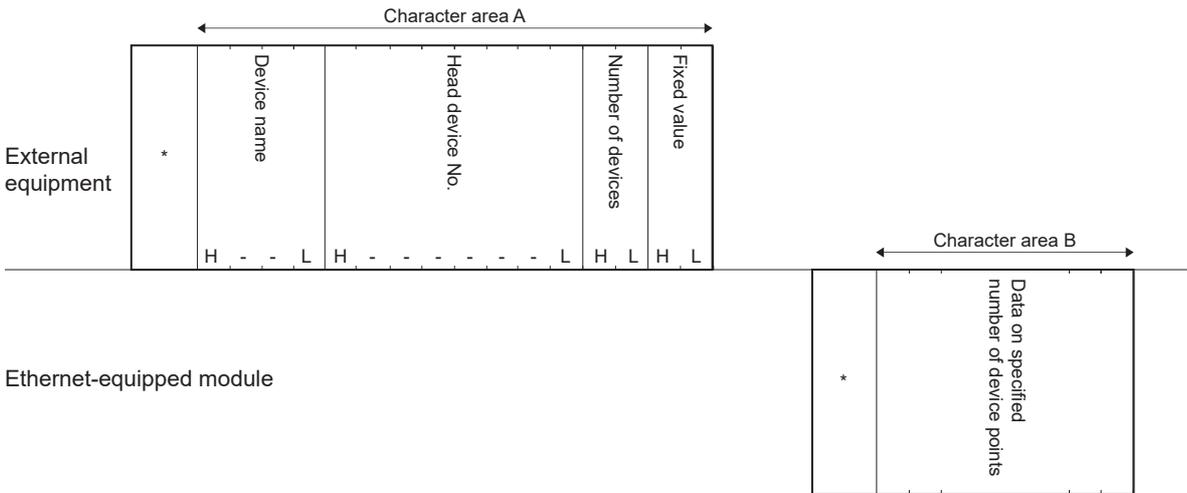


■In the case of writing

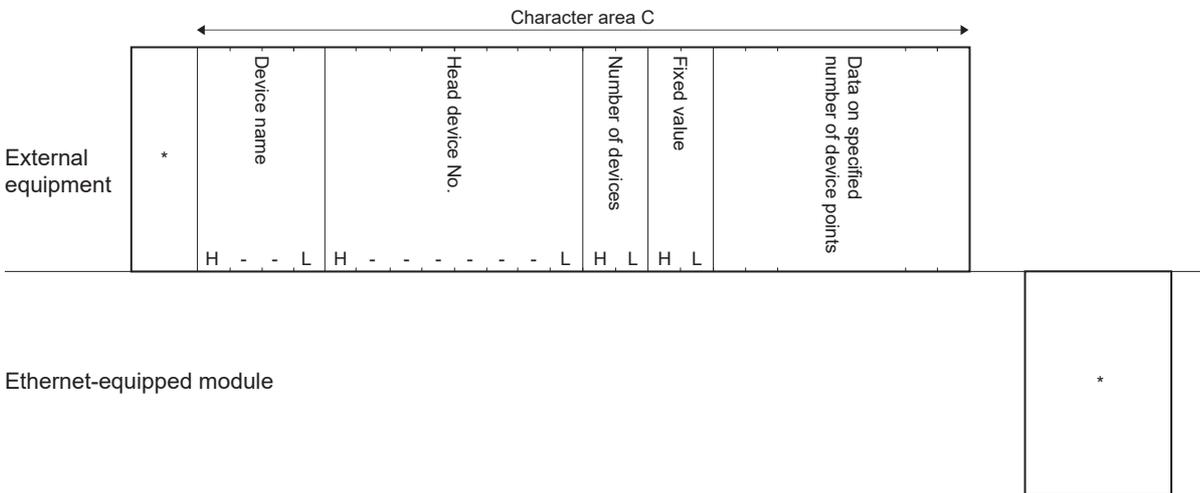


The data array and the data contents marked with * are shown in Page 43 Message format and control procedure.

Data of data area (when communicating in binary code)

■ In the case of reading

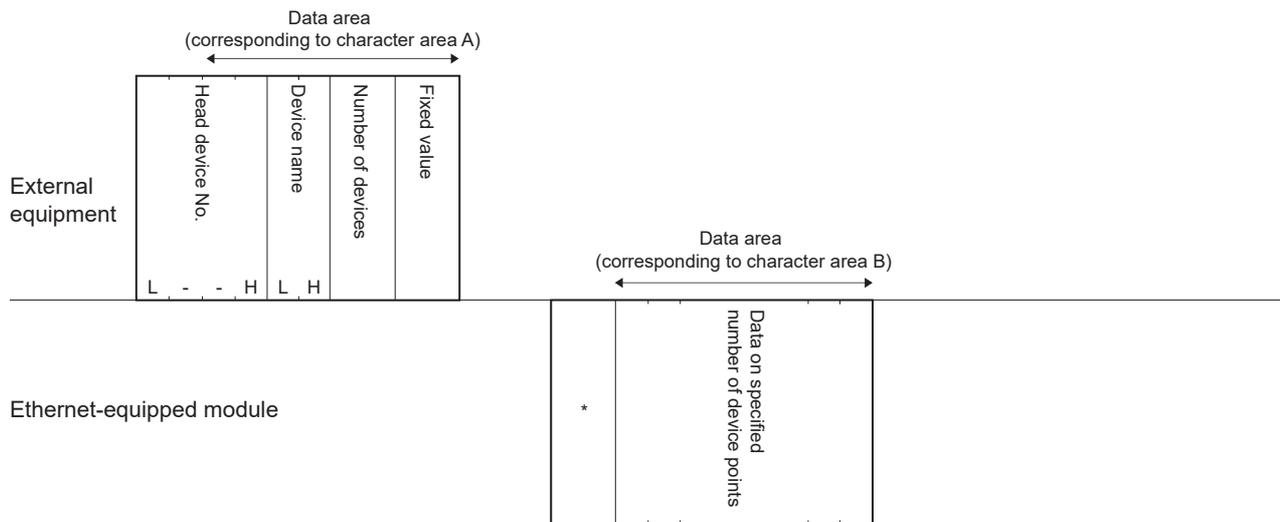

■ In the case of writing

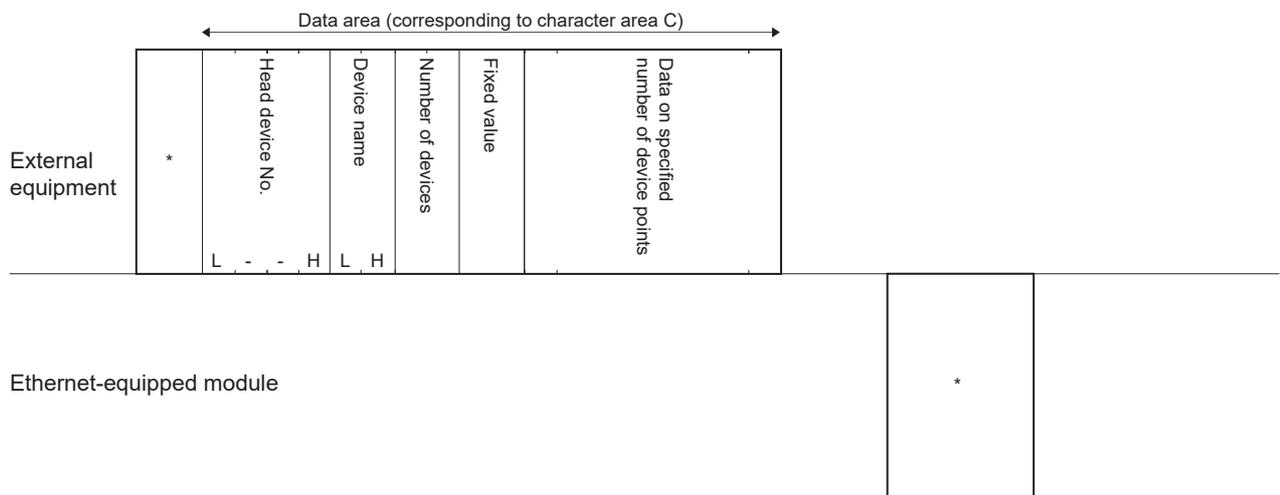

The data array and the data contents marked with * are shown in  Page 43 Message format and control procedure.

Data contents common to character areas

■Device name (Device code)

Device codes are data for identifying the device memory to be read or written.

Device codes are shown in  Page 122 Device Access.

①When communicating data in ASCII code

Device codes are converted into 4-digit ASCII code (hexadecimal), and the device codes are sequentially sent beginning from the most significant digit. Use capitalized code for alphabetical letter in ASCII code.

Ex.

In the case of input (X)

5	8	2	0
35H	38H	32H	30H

②When communicating data in binary code

Specify the device code with a 2-byte binary code in the order from the least significant byte to the most significant byte.

Ex.

In the case of input (X)

5820H
20H, 58H

■Head device No. (device No.)

Data for specifying the number of the device to read data from or write data to. When specifying continuous device areas, specify the head number of the device range. The method for specifying the head device number varies depending on the expressing method for the relevant device.

- Octal: Specify in octal notation.
- Decimal: Specify after converting into hexadecimal.
- Hexadecimal: Specify in hexadecimal notation.

Use capitalized code for alphabetical letter.

For the device number and expressing method, refer to  Page 122 Device Access.

①When communicating data in ASCII code

Device codes are converted into 8-digit ASCII code, and the device codes are sequentially sent beginning from the most significant digit.

The "0" column of the most significant digit (in for example "001234", this refers to "0" of the first two characters) can also be specified by a space (code: 20H).

Ex.

In the case of the device number is "1234 (4D2H)"

0	0	0	0	0	4	D	2
30H	30H	30H	30H	30H	34H	44H	32H

②When communicating data in binary code

Specify the device number as a 4-byte binary code in the specified device specification format in the order from the least significant byte to the most significant byte after converting into hexadecimal.

Ex.

In the case of the device number is "1234 (4D2H)"

4D2H
D2H, 04H, 00H, 00H

■Number of devices

This data is for specifying the number of points to be read or written when each command is executed. It must be specified within the limits of the number of points that can be processed per communication. (☞ Page 122 Commands)

①When communicating data in ASCII code

Device codes are converted into 4-digit ASCII code (hexadecimal), and the device codes are sequentially sent beginning from the most significant digit. Use capitalized code for alphabetical letter.

Ex.

In the case of 5 points and 20 points

5 points

00H,05H

20 points

00H,14H

②When communicating data in binary code

Specify the number of points with a 1-byte binary code after converting into hexadecimal.

Ex.

In the case of 5 points and 20 points

5 points 20 points

05H

14H

■Fixed value

A fixed value (00H) must be specified after the number of device points.

①When communicating data in ASCII code

Specify the fixed value after converting into a 2-digit ASCII code.

Ex.

30H,30H

②When communicating data in binary code

Specify the fixed value with a 1-byte binary code.

Ex.

00H

4 3E FRAME COMMANDS

This chapter explains 3E frame commands of SLMP.

For parts of the transmission message other than the command part, refer to  Page 18 3E Frame

4.1 List of Commands and Functions

This section describes commands and functions when accessing from the external equipment to the Ethernet-equipped module.

CPU module

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Read (Batch)	0401H	0001H	This command reads data from a bit device or word device in units of 1 bit.	ASCII: 1792 points BIN: 3584 points
		0000H	<ul style="list-style-type: none"> This command reads data from bit devices in units of 16 bits. This command reads data from word devices in units of 1 word. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points)
		0081H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 bit. This command reads data from devices indirectly specified by index registers in units of 1 bit. 	ASCII: 1792 points BIN: 3584 points
		0080H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 word. This command reads data from devices indirectly specified by index registers in units of 1 word. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points)
		0083H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 bit. This command reads data from devices indirectly specified by index registers in units of 1 bit. 	ASCII: 1792 points BIN: 3584 points
		0082H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 word. This command reads data from devices indirectly specified by index registers in units of 1 word. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points)
Device Write (Batch)	1401H	0001H	This command writes data to bit devices in units of 1 bit.	ASCII: 1792 points BIN: 3584 points
		0000H	<ul style="list-style-type: none"> This command writes data to bit devices in units of 16 bits. This command writes data to word devices in units of 1 word. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points) ^{*1}
		0081H	<ul style="list-style-type: none"> This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 bit. Bit devices, word devices, and buffer memory are indirectly specified by index registers. 	ASCII: 1792 points BIN: 3584 points
		0080H	This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits).	ASCII: 480 words (7680 points) BIN: 960 words (15360 points) ^{*1}
		0083H	This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 bit.	ASCII: 1972 points BIN: 3584 points
		0082H	This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits).	ASCII: 480 words (7680 points) BIN: 960 words (15360 points) ^{*1}
Device Read Random	0403H	0000H	This command reads data from word devices in units of 1 word or 2 words by randomly specifying device numbers.	ASCII: (Word access points + double-word access points) × 2 ≤ 192 BIN: Word access points + double-word access points ≤ 192

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Read Random	0403H	0080H	This command reads data from the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits).	ASCII: (Word access points + double-word access points) $\times 4 \leq 192$ BIN: (Word access points + double-word access points) $\times 2 \leq 192$
		0082H	This command reads data from the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits).	ASCII: (Word access points + double-word access points) $\times 4 \leq 192$ BIN: (Word access points + double-word access points) $\times 2 \leq 192$
Device Write Random	1402H	0001H	This command writes data to bit devices in units of 1 bit by randomly specifying device numbers.	ASCII: 94 points BIN: 188 points
		0000H	<ul style="list-style-type: none"> This command writes data to bit devices in units of 16 bits by randomly specifying device numbers. This command writes data to word devices in units of 1 word or 2 words by randomly specifying device numbers. 	ASCII: ((Word access points) $\times 12 +$ (double-word access points) $\times 14$) $\times 2 \leq 1920$ BIN: (Word access points) $\times 12 +$ (double-word access points) $\times 14 \leq 1920$
		0081H	<ul style="list-style-type: none"> This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 bit. Buffer memory is indirectly specified by index registers. 	ASCII: 47 points BIN: 94 points
		0080H	This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits) or 2 words.	ASCII: ((Word access points) $\times 12 +$ (double-word access points) $\times 14$) $\times 4 \leq 1920$ BIN: ((Word access points) $\times 12 +$ (double-word access points) $\times 14$) $\times 2 \leq 1920$
		0083H	This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 bit.	ASCII: 47 points BIN: 94 points
		0082H	This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits) or 2 words.	ASCII: ((Word access points) $\times 12 +$ (double-word access points) $\times 14$) $\times 4 \leq 1920$ BIN: ((Word access points) $\times 12 +$ (double-word access points) $\times 14$) $\times 2 \leq 1920$
Device Read Block	0406H	0000H	With n points of bit devices and word devices as 1 block, this command reads data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.)	ASCII: (Number of word device blocks + number of bit device blocks) $\times 2 \leq 120$ and (Total points of each blocks of word device + total points of each blocks of bit device) $\times 2 \leq 960$ BIN: Number of word device blocks + number of bit device blocks ≤ 120 and Total points of each blocks of word device + total points of each blocks of bit device ≤ 960

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Read Block	0406H	0080H	With n points of buffer memory in intelligent function modules and SLMP-compatible devices as 1 block, this command reads data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.)	ASCII: (Number of word device blocks + number of bit device blocks) $\times 4 \leq 120$ and (Total points of each blocks of word device + total points of each blocks of bit device) $\times 2 \leq 960$ BIN: (Number of word device blocks + number of bit device blocks) $\times 2 \leq 120$ and Total points of each blocks of word device + total points of each blocks of bit device ≤ 960
		0082H	With n points of buffer memory in intelligent function modules and SLMP-compatible devices as 1 block, this command reads data by randomly specifying multiple blocks.	ASCII: (Number of word device blocks + number of bit device blocks) $\times 4 \leq 120$ and (Total points of each blocks of word device + total points of each blocks of bit device) $\times 2 \leq 960$ BIN: (Number of word device blocks + number of bit device blocks) $\times 2 \leq 120$ and Total points of each blocks of word device + total points of each blocks of bit device ≤ 960
Device Write Block	1406H	0000H	With n points of bit devices and word devices as 1 block, this command writes data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.)	ASCII: (Number of word device blocks + number of bit device blocks) $\times 2 \leq 120$ and ((Number of word device blocks + number of bit device blocks) $\times 4$ + Total points of each blocks of word device + total points of each blocks of bit device) $\times 2 \leq 760$ BIN: Number of word device blocks + number of bit device blocks ≤ 120 and (Number of word device blocks + number of bit device blocks) $\times 4$ + Total points of each blocks of word device + total points of each blocks of bit device ≤ 760
		0080H	With n points of buffer memory in intelligent function modules and SLMP-compatible devices as 1 block, this command writes data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.)	ASCII: (Number of word device blocks + number of bit device blocks) $\times 4 \leq 120$ and ((Number of word device blocks + number of bit device blocks) $\times 4$ + Total points of each blocks of word device + total points of each blocks of bit device) $\times 2 \leq 760$ BIN: (Number of word device blocks + number of bit device blocks) $\times 2 \leq 120$ and (Number of word device blocks + number of bit device blocks) $\times 4$ + Total points of each blocks of word device + total points of each blocks of bit device ≤ 760

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Write Block	1406H	0082H	With n points of buffer memory in intelligent function modules and SLMP-compatible devices as 1 block, this command writes data by randomly specifying multiple blocks.	ASCII: (Number of word device blocks + number of bit device blocks) ×4 ≤120 and ((Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤760 BIN: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and (Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device ≤760 ^{*2}
Remote Run	1001H	0000H	This command performs a remote RUN request for a device.	—
Remote Stop	1002H	0000H	This command performs a remote STOP request for a device.	—
Remote Pause	1003H	0000H	This command performs a remote PAUSE request for a device.	—
Remote Latch Clear	1005H	0000H	This command performs a remote latch clear request when the device is in the STOP state.	—
Remote Reset	1006H	0000H	This command performs a remote reset request to reset the device error stop state.	—
Read Type Name	0101H	0000H	This command reads the processor module name code (processor type) of a device.	—
Self-Test	0619H	0000H	This command checks if normal communication is possible.	—
Clear Error	1617H	0001H	This command batch clears all errors and turns off the LED.	—
Password Lock	1631H	0000H	This command sets to the locked status from the unlocked status by specifying the remote password. (Sets the device to the state where communication is not possible.)	—
Password Unlock	1630H	0000H	This command sets to the unlocked status from the locked status by specifying the remote password. (Sets the device to the state where communication is possible.)	—

*1 When using FX5-CCLIEF, it is 940 words (15040 points).

*2 When using FX5-CCLIEF, the (number of word device blocks + number of bit device blocks) ×2 ≤120 points, and the (number of word device blocks + bit device blocks) ×9 + total points of each block of word device + total points of each block of bit device ≤ 960 points.

Ethernet module

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Read (Batch)	0401H	0001H	This command reads data from a bit device in units of 1 bit.	ASCII: 1792 points BIN: 3584 points
		0000H	<ul style="list-style-type: none"> This command reads data from bit devices in units of 16 bits. This command reads data from word devices in units of 1 word. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points)
		0081H	The CPU devices (bit devices) can be directly accessed. This command performs the same processing as the batch read (command: 0401H) and subcommand: 0001H.	ASCII: 1792 points BIN: 3584 points
		0080H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 word. The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the batch read (command: 0401) and subcommand: 0000H. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points)
		0083H	The CPU devices (bit devices) can be directly accessed. This command performs the same processing as the batch read (command: 0401H) and subcommand: 0001H.	ASCII: 1792 points BIN: 3584 points
		0082H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 word. The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the batch read (command: 0401) and subcommand: 0000H. 	ASCII: 480 words (7680 points) BIN: 960 words (15360 points)
Device Write (Batch)	1401H	0001H	This command writes data to bit devices in units of 1 bit.	ASCII: 1792 points BIN: 3584 points
		0000H	<ul style="list-style-type: none"> This command writes data to bit devices in units of 16 bits. This command writes data to word devices in units of 1 word. 	ASCII: 480 words (7680 points) BIN: 949 words (15184 points) ^{*1}
		0081H	The CPU devices (bit devices) can be directly accessed. This command performs the same processing as the batch write (command: 1401H) and subcommand: 0001H.	ASCII: 1792 points BIN: 3584 points
		0080H	<ul style="list-style-type: none"> This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits). The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the batch write (command: 1401H) and subcommand: 0000H. 	ASCII: 480 words (7680 points) BIN: 949 words (15184 points) ^{*1}
		0083H	The CPU devices (bit devices) can be directly accessed. This command performs the same processing as the batch write (command: 1401H) and subcommand: 0001H.	ASCII: 1972 points BIN: 3584 points
		0082H	<ul style="list-style-type: none"> This command writes data to the buffer memory in intelligent function modules and SLMP-compatible devices in units of 1 word (16 bits). The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the batch write (command: 1401H) and subcommand: 0000H. 	ASCII: 480 words (7680 points) BIN: 949 words (15184 points) ^{*1}
Device Read Random ^{*2}	0403H	0000H	This command reads data from bit devices and word devices in units of 1 word or 2 words by randomly specifying device numbers.	ASCII: (Word access points + double-word access points) × 2 ≤ 192 BIN: Word access points + double-word access points ≤ 123

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Read Random ^{*2}	0403H	0080H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 word (16 bits) or 2 words. This command reads data from devices indirectly specified by index registers in units of 1 word or 2 words. The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the random read (command: 0403H) and subcommand: 0000H. 	ASCII: (Word access points + double-word access points) ×4 ≤192 BIN: (Word access points + double-word access points) ×2 ≤192
		0082H	<ul style="list-style-type: none"> This command reads data from the buffer memory in intelligent function modules in units of 1 word (16 bits) or 2 words. This command reads data from devices indirectly specified by index registers in units of 1 word or 2 words. The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the random read (command: 0403H) and subcommand: 0000H. 	ASCII: (Word access points + double-word access points) ×4 ≤192 BIN: (Word access points + double-word access points) ×2 ≤192
Device Write Random ^{*3}	1402H	0001H	This command writes data to bit devices in units of 1 bit by randomly specifying device numbers.	ASCII: 94 points BIN: 188 points
		0000H	<ul style="list-style-type: none"> This command writes data to bit devices in units of 16 bits by randomly specifying device numbers. This command writes data to word devices in units of 1 word or 2 words by randomly specifying device numbers. 	ASCII: ((Word access points)×12+ (double-word access points) ×14) ×2 ≤1920 BIN: (Word access points)×18+ (double-word access points) ×20 ≤1920
		0081H	The CPU devices (bit devices) can be directly accessed. This command performs the same processing as the random write (command: 1402H) and subcommand: 0001H.	ASCII: 47 points BIN: 94 points
		0080H	<ul style="list-style-type: none"> This command writes data to the buffer memory in intelligent function modules in units of 1 word (16 bits) or 2 words. This command writes data from devices indirectly specified by index registers in units of 1 word or 2 words. The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the random write (command: 1402H) and subcommand: 0000H. 	ASCII: ((Word access points) ×12+ (double-word access points) ×14) ×4 ≤1920 BIN: ((Word access points)×12+ (double-word access points) ×14) ×2 ≤1920
		0083H	The CPU devices (bit devices) can be directly accessed. This command performs the same processing as the random write (command: 1402H) and subcommand: 0001H.	ASCII: 47 points BIN: 94 points
		0082H	<ul style="list-style-type: none"> This command writes data to the buffer memory in intelligent function modules in units of 1 word (16 bits) or 2 words. This command writes data from devices indirectly specified by index registers in units of 1 word or 2 words. The CPU devices (bit devices and word devices) can be directly accessed. This command performs the same processing as the random write (command: 1402H) and subcommand: 0000H. 	ASCII: ((Word access points) ×12+ (double-word access points) ×14) ×4 ≤1920 BIN: ((Word access points)×12+ (double-word access points) ×14) ×2 ≤1920
Device Read Block ^{*4}	0406H	0000H	With n points of bit devices and word devices as 1 block, this command reads data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.)	ASCII: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and (Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤960 BIN: Number of word device blocks + number of bit device blocks ≤120 and Total points of each blocks of word device + total points of each blocks of bit device ≤960

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Read Block ⁴	0406H	0080H	<ul style="list-style-type: none"> With n points of buffer memory in intelligent function modules as 1 block, this command reads data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.) <ul style="list-style-type: none"> This command performs the same processing as the multiple block batch read (command: 0406H) and subcommand: 0000H. 	ASCII: (Number of word device blocks + number of bit device blocks) ×4 ≤120 and (Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤960 BIN: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and Total points of each blocks of word device + total points of each blocks of bit device ≤960
		0082H	<ul style="list-style-type: none"> With n points of buffer memory in intelligent function modules as 1 block, this command reads data by randomly specifying multiple blocks. <ul style="list-style-type: none"> This command performs the same processing as the multiple block batch read (command: 0406H) and subcommand: 0000H. 	ASCII: (Number of word device blocks + number of bit device blocks) ×4 ≤120 and (Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤960 BIN: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and Total points of each blocks of word device + total points of each blocks of bit device ≤960
Device Write Block ⁴	1406H	0000H	With n points of bit devices and word devices as 1 block, this command writes data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.)	ASCII: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and ((Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤770 BIN: Number of word device blocks + number of bit device blocks ≤120 and (Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device ≤770
		0080H	<ul style="list-style-type: none"> With n points of buffer memory in intelligent function modules as 1 block, this command writes data by randomly specifying multiple blocks. (When bit devices are specified, 1 point is 16 bits.) <ul style="list-style-type: none"> This command performs the same processing as the multiple block batch write (command: 1406H) and subcommand: 0000H 	ASCII: (Number of word device blocks + number of bit device blocks) ×4 ≤120 and ((Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤770 BIN: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and (Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device ≤770

Name	Command	Sub-commands	Processing content	Number of points processed per communication
Device Write Block ^{*4}	1406H	0082H	<ul style="list-style-type: none"> With n points of buffer memory in intelligent function modules as 1 block, this command writes data by randomly specifying multiple blocks. This command performs the same processing as the multiple block batch write (command: 1406H) and subcommand: 0000H 	ASCII: (Number of word device blocks + number of bit device blocks) ×4 ≤120 and ((Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device) ×2 ≤770 BIN: (Number of word device blocks + number of bit device blocks) ×2 ≤120 and (Number of word device blocks + number of bit device blocks) ×4 + Total points of each blocks of word device + total points of each blocks of bit device ≤770 ^{*5}
Remote Run	1001H	0000H	This command performs a remote RUN request for a device.	—
Remote Stop	1002H	0000H	This command performs a remote STOP request for a device.	—
Remote Pause	1003H	0000H	This command performs a remote PAUSE request for a device.	—
Remote Latch Clear	1005H	0000H	This command performs a remote latch clear request when the device is in the STOP state.	—
Remote Reset	1006H	0000H	This command performs a remote reset request to reset the device error stop state.	—
Read Type Name	0101H	0000H	This command reads the processor module name code (processor type) of a device.	—
Self-Test	0619H	0000H	This command checks if normal communication is possible.	—

*1 When using FX5-CCLIEF, it is 940 words (15040 points).

*2 The following devices (contacts and coils) cannot be specified.

- Timers (TS and TC)
- Retentive timers (STS and STC)
- Counters (CS and CC)
- Long counters (LCS and LCC)

*3 The following devices (contacts and coils) cannot be specified.

- Timers (TS and TC)
- Retentive timers (STS and STC)
- Counters (CS and CC)

*4 Double-word devices cannot be accessed.

*5 When using FX5-CCLIEF, the (number of word device blocks + number of bit device blocks) ×2 ≤120 points, and the (number of word device blocks + bit device blocks) ×9 + total points of each block of word device + total points of each block of bit device ≤ 960 points.

4.2 Device Access

This section explains the control procedure specification method and shows a specification example when the device memory is read and written.

Commands

This section explains commands when the device memory is read or written.

Commands			
Function		Command (Subcommand)	Processing content
Device Read (Batch)	Bit units	0401 (00□1)	Reads bit devices in 1 point units.
	Word units	0401 (00□0)	Reads bit devices in 16 point units. Reads word devices in 1 point units.
Device Write (Batch)	Bit units	1401 (00□1)	Writes bit devices in 1-point units.
	Word units	1401 (00□0)	Writes bit devices in 16-point units. Writes word devices in 1-point units.
Device Read Random	Word units	0403 (00□0)	Reads bit devices specified randomly in 16-point units or 32-point units.
			Reads word devices specified randomly in 1-point units or 2-point units.
Device Write Random	Bit units	1402 (00□1)	Sets or resets device memory to bit devices specified randomly in 1-point units.
	Word units	1402 (00□0)	Sets or resets device memory to bit devices specified randomly in 16-point units or 32-point units Writes device memory to word devices specified randomly in 1-point units or 2-point units.
Device Read Block	Word units	0406 (00□0)	Sets n point(s) in the word device or bit device (one point is specified by 16-bit) as 1 block, specifies multiple blocks randomly and reads the device memory.
Device Write Block	Word units	1406 (00□0)	Sets n point(s) in the word device or bit device (one point is specified by 16-bit) as 1 block, specifies multiple blocks randomly and writes the device memory.

Device range

This section shows accessible CPU module device.

Specify the device and device number range that exist in the module targeted for data read or write.

In the case of Ethernet-equipped module

Classification	Device		Type	Device code ^{*1} (Device specification format: Long)		Device No.	Device compatibility ^{*2}	
				ASCII code	Binary code			
Internal user device	Input		Bit	X* (X****)	9CH (9C00H)	Specify in the range of device numbers of the module to access.	^{*3}	○
	Output			Y* (Y****)	9DH (9D00H)		^{*3}	○
	Internal relay			M* (M****)	90H (9000H)		Decimal	○
	Latching relay			L* (L****)	92H (9200H)		Decimal	○
	Annunciator			F* (F****)	93H (9300H)		Decimal	○
	Edge relay			V* (V****)	94H (9400H)		Decimal	—
	Link relay			B* (B****)	A0H (A000H)		Hexadecimal	○
	Step relay			S* (S****)	98H (9800H)		Decimal	○
	Data register			Word	D* (D****)		A8H (A800H)	Decimal
	Link register		W* (W****)		B4H (B400H)		Hexadecimal	○
	Timer	Contact	Bit	TS (TS**)	C1H (C100H)		Decimal	○
		Coil	Bit	TC (TC**)	C0H (C000H)			○
		Current value	Word	TN (TN**)	C2H (C200H)			○
	Long timer	Contact	Bit	— (LTS*)	51H (5100H)		Decimal	—
		Coil	Bit	— (LTC*)	50H (5000H)			—
		Current value	Double Word	— (LTN*)	52H (5200H)			—
	Retentive timer	Contact	Bit	SS (STS*)	C7H (C700H)		Decimal	○
		Coil	Bit	SC (STC*)	C6H (C600H)			○
		Current value	Word	SN (STN*)	C8H (C800H)			○
	Long retentive timer	Contact	Bit	— (LSTS)	59H (5900H)		Decimal	—
Coil		Bit	— (LSTC)	58H (5800H)	—			
Current value		Double Word	— (LSTN)	5AH (5A00H)	—			
Counter	Contact	Bit	CS (CS**)	C4H (C400H)	Decimal	○		
	Coil	Bit	CC (CC**)	C3H (C300H)		○		
	Current value	Word	CN (CN**)	C5H (C500H)		○		

Classification	Device		Type	Device code* ¹ (Device specification format: Long)		Device No.		Device compatibility* ²
				ASCII code	Binary code			
Internal user device	Long counter	Contact	Bit	— (LCS*)	55H (5500H)	Specify in the range of device numbers of the module to access.	Decimal	○
		Coil	Bit	— (LCC*)	54H (5400H)			○
		Current value	Double Word	— (LCN*)	56H (5600H)			○
	Link special relay		Bit	SB (SB**)	A1H (A100H)		Hexadecimal	○
	Link special register		Word	SW (SW**)	B5H (B500H)		Hexadecimal	○
System device	Special relay		Bit	SM (SM**)	91H (9100H)	—	Decimal	○
	Special register		Word	SD (SD**)	A9H (A900H)		Decimal	○
	Function input		Bit	—	—		Hexadecimal	—
	Function output			—	—		Hexadecimal	—
	Function register		Word	—	—		Decimal	—
Index register			Word	Z* (Z***)	CCH (CC00H)	Specify in the range of device numbers of the module to access.	Decimal	○
Long index register			Double Word	LZ (LZ***)	62H (6200H)		Decimal	○
File register			Word	R* (R***)	AFH (AF00H)		Decimal	○
				ZR (ZR**)	B0H (B000H)		Decimal	—
Link direct device* ⁴	Link input		Bit	X* (X***)	9CH (9C00H)	Specify in the range of device numbers of the module to access.	Hexadecimal	—
	Link output			Y* (Y***)	9DH (9D00H)		Hexadecimal	—
	Link relay			B* (B***)	A0H (A000H)		Hexadecimal	—
	Link special relay			SB (SB**)	A1H (A100H)		Hexadecimal	—
	Link register			Word	W* (W***)		B4H (B400H)	Hexadecimal
	Link special register		SW (SW**)		B5H (B500H)		Hexadecimal	—
Module access device* ⁴	Link register		Word	W* (W***)	B4H (B400H)	Specify in the range of device numbers of the module to access.	Hexadecimal	—
	Link special register			SW (SW**)	B5H (B500H)		Hexadecimal	—
	Module access device			G* (G***)	ABH (AB00H)		Decimal	○
Other devices	SFC block device		Bit	BL (BL**)	DCH (DC00H)	—	Decimal	×

*1 [ASCII code]

If the device code is less than the specified character number, add "" (ASCII code: 2AH) or a space (ASCII code: 20H) after the device code.

[Binary code]

When "Device code" is less than the size specified add "00H" to the end of the device code.

*2 ○: SLMP-compatible device

—: FX5-incompatible device

×: SLMP-incompatible device

*3 Depends on the communication data code. See below.

ASCII code (X, Y OCT): octal

ASCII code (X, Y HEX), binary code: hexadecimal

*4 "Device memory extension specification" for sub-commands must be turned ON (1).

Device Read (Batch)

Data in devices are read in a batch.

Request data

■When communicating data in ASCII code

2 digit code/6 digit number specification

	4 bytes	4 bytes	2 bytes	6 bytes	4 bytes
When extension is not specified	0 4 0 1 30H, 34H, 30H, 31H	Subcommand	Device code	Head device No.	Number of devices

When extension is specified	0 0 30H, 30H	Extension specification	Extension specification modification	Device code	Head device No.	0 0 0 30H, 30H, 30H
	2 bytes	4 bytes	3 bytes	2 bytes	6 bytes	3 bytes

4 digit code/8 digit number specification

	4 bytes	4 bytes	4 bytes	8 bytes	4 bytes
When extension is not specified	0 4 0 1 30H, 34H, 30H, 31H	Subcommand	Device code	Head device No.	Number of devices

When extension is specified	0 0 30H, 30H	Extension specification	Extension specification modification	Device code	Head device No.	0 0 0 0 30H, 30H, 30H, 30H
	2 bytes	4 bytes	4 bytes	4 bytes	10 bytes	4 bytes

■When communicating data in binary code

2 digit code/6 digit number specification

	2 bytes	2 bytes	3 bytes	1 byte	2 bytes
When extension is not specified	01H, 04H	Subcommand	Head device No.	Device code	Number of devices

When extension is specified	Device modification, indirect specification	Head device No.	Device code	Extension specification modification	Extension specification	Direct memory specification
	2 bytes	3 bytes	1 byte	2 bytes	2 bytes	1 byte

4 digit code/8 digit number specification

	2 bytes	2 bytes	4 bytes	2 bytes	2 bytes
When extension is not specified	01H, 04H	Subcommand	Head device No.	Device code	Number of devices

When extension is specified	Device modification, indirect specification	Head device No.	Device code	Extension specification modification	Extension specification	Direct memory specification
	2 bytes	4 bytes	2 bytes	2 bytes	2 bytes	1 byte

■Subcommand

Specify the subcommand selected from the item.

Item			Subcommand					
Data size specification	Device specification format	Device memory extension specification	ASCII code (Upper column: characters, lower column: character code)				Binary code	
Bit units	2 digit code/6 digit number specification	Not specified	0	0	0	1	01H	00H
			30H	30H	30H	31H		
		Specified	0	0	8	1	81H	00H
			30H	30H	38H	31H		
	4 digit code/8 digit number specification	Specified	0	0	8	3	83H	00H
			30H	30H	38H	33H		
Word units	2 digit code/6 digit number specification	Not specified	0	0	0	0	00H	00H
			30H	30H	30H	30H		
		Specified	0	0	8	0	80H	00H
			30H	30H	30H	30H		
	4 digit code/8 digit number specification	Specified	0	0	8	2	82H	00H
			30H	30H	38H	32H		

■Device code

Specify the device code that corresponds to the device type to be read. (☞ Page 68 Device range)

Precautions

Batch Read (0401H) is not applicable to double word devices or long index registers (LZ).

■Device No.

Specify the head number of target device of reading.

■Number of devices

Specify the number of target device points of reading.

Item	Number of devices	
	ASCII code	Binary code
When reading data in bit units	1 to 1792 points	1 to 3584 points
When reading data in word units	1 to 480 points	1 to 960 points

Response data

The read device value is stored in hexadecimal. The data order differs depending on the type of code, ASCII code or binary code.

Read data

Communication example

■When reading data in bit units

M100 to M107 are read.

- When communicating data in ASCII code

(Request data)

Subcommand		Device code	Head device No.	Number of devices
0 4 0 1	0 0 0 1	M *	0 0 0 1 0 0	0 0 0 8
30H,34H,30H,31H	30H,30H,30H,31H	4DH,2AH	30H,30H,30H,31H,30H,30H	30H,30H,30H,38H

(Response data)

0 0 0 1 0 0 1 1	0 = OFF 1 = ON
30H,30H,30H,31H,30H,30H,31H,31H	

M100 to M107

- When communicating data in binary code

(Request data)

Subcommand	Head device No.	Device code	Number of devices
01H,04H	01H,00H	64H,00H,00H	90H,08H,00H

(Response data)

00H,01H,00H,11H	0 = OFF 1 = ON
to	M107 M106
M101	
M100	

■When reading data in word units (bit device)


M100 to M131 (2-word) are read.

- When communicating data in ASCII code

(Request data)

Subcommand				Device code	Head device No.	Number of devices
0	4	0	1	M *	0 0 0 1 0 0	0 0 0 2
30H,34H,30H,31H	30H,30H,30H,30H	4DH,2AH	30H,30H,30H,31H,30H,30H	30H,30H,30H,32H		

(Response data)

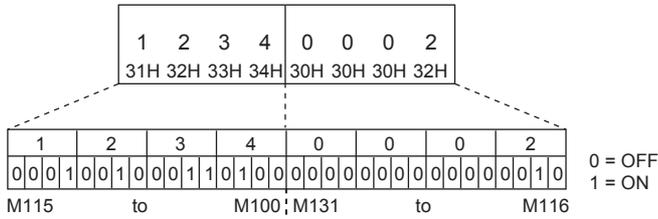


- When communicating data in binary code

(Request data)

Subcommand	Head device No.	Device code	Number of devices
01H,04H,00H,00H	64H,00H,00H	90H	02H,00H

(Response data)

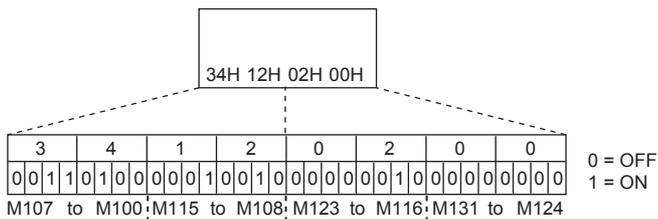

■When reading data in word units (word device)

Values in T100 to T102 are read.

It is supposed that 4660 (1234H) is stored in T100, 2 (2H) is stored in T101, and 7663 (1DEFH) is stored T102.

- When communicating data in ASCII code

(Request data)

Subcommand				Device code	Head device No.				Number of devices								
0	4	0	1	0	0	0	0	T	N	0	0	0	1	0	0	0	3
30H	34H	30H	31H	30H	30H	30H	30H	54H	4EH	30H	30H	30H	31H	30H	30H	30H	33H

(Response data)

1	2	3	4	0	0	0	2	1	D	E	F
31H	32H	33H	34H	30H	30H	30H	32H	31H	44H	45H	46H
T100				T101				T102			

- When communicating data in binary code

(Request data)

Subcommand		Head device No.		Device code	Number of devices
01H	04H	00H	00H	C2H	03H

(Response data)

34H	12H	02H	00H	EFH	1DH
T100		T101		T102	

Device Write (Batch)

Data in devices are written in a batch.

Request data

■When communicating data in ASCII code

2 digit code/6 digit number specification

	4 bytes	4 bytes	2 bytes	6 bytes	4 bytes	
When extension is not specified	1 4 0 1 31H,34H,30H,31H	Subcommand	Device code	Head device No.	Number of devices	Write data for the number of points

When extension is specified

0 0 30H,30H	Extension specification	Extension specification modification	Device code	Head device No.	0 0 0 30H,30H,30H
2 bytes	4 bytes	3 bytes	2 bytes	6 bytes	3 bytes

4 digit code/8 digit number specification

	4 bytes	4 bytes	4 bytes	8 bytes	4 bytes	
When extension is not specified	1 4 0 1 31H,34H,30H,31H	Subcommand	Device code	Head device No.	Number of devices	Write data for the number of points

When extension is specified

0 0 30H,30H	Extension specification	Extension specification modification	Device code	Head device No.	0 0 0 0 30H,30H,30H,30H
2 bytes	4 bytes	4 bytes	4 bytes	10 bytes	4 bytes

■When communicating data in binary code

2 digit code/6 digit number specification

	2 bytes	2 bytes	3 bytes	1 byte	2 bytes	
When extension is not specified	01H, 14H	Subcommand	Head device No.	Device code	Number of devices	Write data for the number of points

When extension is specified

Device modification, indirect specification	Head device No.	Device code	Extension specification modification	Extension specification	Direct memory specification
2 bytes	3 bytes	1 byte	2 bytes	2 bytes	1 byte

4 digit code/8 digit number specification

	2 bytes	2 bytes	4 bytes	2 bytes	2 bytes	
When extension is not specified	01H, 14H	Subcommand	Head device No.	Device code	Number of devices	Write data for the number of points

When extension is specified

Device modification, indirect specification	Head device No.	Device code	Extension specification modification	Extension specification	Direct memory specification
2 bytes	4 bytes	2 bytes	2 bytes	2 bytes	1 byte

■Subcommand

Specify the subcommand selected from the item.

Item			Subcommand					
Data size specification	Device specification format	Device memory extension specification	ASCII code (Upper column: characters, lower column: character code)				Binary code	
Bit units	2 digit code/6 digit number specification	Not specified	0	0	0	1	01H	00H
			30H	30H	30H	31H		
		Specified	0	0	8	1	81H	00H
			30H	30H	38H	31H		
	4 digit code/8 digit number specification	Specified	0	0	8	3	83H	00H
			30H	30H	38H	33H		
Word units	2 digit code/6 digit number specification	Not specified	0	0	0	0	00H	00H
			30H	30H	30H	30H		
		Specified	0	0	8	0	80H	00H
			30H	30H	38H	30H		
	4 digit code/8 digit number specification	Specified	0	0	8	2	82H	00H
			30H	30H	38H	32H		

■Device code

Specify the device code that corresponds to the device type to be written. (☞ Page 68 Device range)

Precautions

Batch Write (1401H) is not applicable to double word devices or long index registers (LZ).

■Device No.

Specify the head number of target device of writing.

■Number of devices

Specify the number of target device points of writing.

Item	Number of devices		
	ASCII code	Binary code	
		CPU module	Ethernet module
When writing data in bit units	1 to 1792 points	1 to 3584 points	
When writing data in word units	1 to 480 points	1 to 960 ^{*1} points	1 to 949 ^{*1} points

*1 When using FX5-CCLIEF, the number of points differs. For details, refer to ☞ Page 59 List of Commands and Functions.

■Write data

Specify value to be written to a device for the number of points specified in "Device point".

Response data

There is no response data for the Device Write command.

Communication example

■When writing data in bit units

Values are written to M100 to M107.


- When communicating data in ASCII code
(Request data)

Subcommand		Device code	Head device No.	Number of devices	Write data																						
1	4	0	1	0	0	0	1	M	*	0	0	0	1	0	0	0	0	0	8	1	1	0	0	1	1	0	0
31H	34H	30H	31H	30H	30H	30H	31H	4DH	2AH	30H	30H	30H	31H	30H	30H	30H	30H	30H	38H	31H	31H	30H	30H	31H	31H	30H	30H

M100 to M107 0 = OFF
1 = ON

- When communicating data in binary code

(Request data)

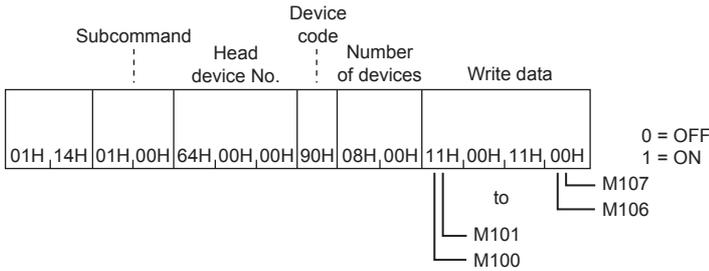


■When writing data in word units (bit device)

Values are written to M100 to M131 (2-word).


- When communicating data in ASCII code

(Request data)

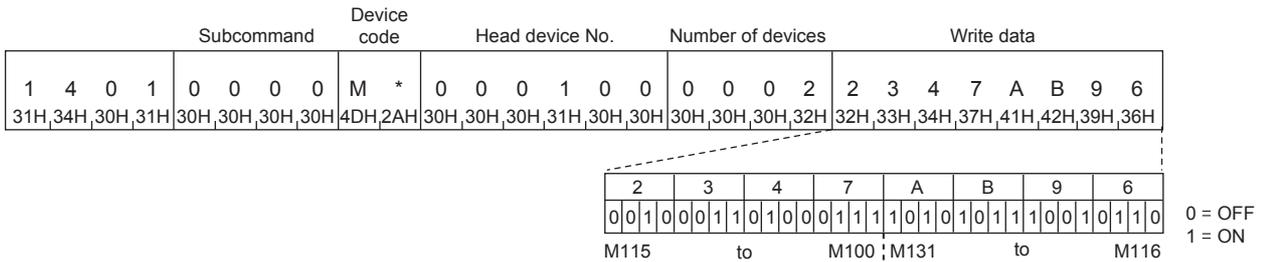

- When communicating data in binary code

(Request data)

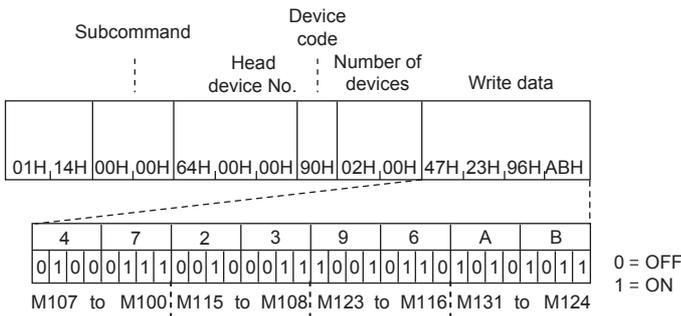


■When writing data in word units (word device)

6549 (1995H) is written in D100, 4610 (1202H) is written in D101, and 4400 (1130H) is written in D102.


- When communicating data in ASCII code

(Request data)

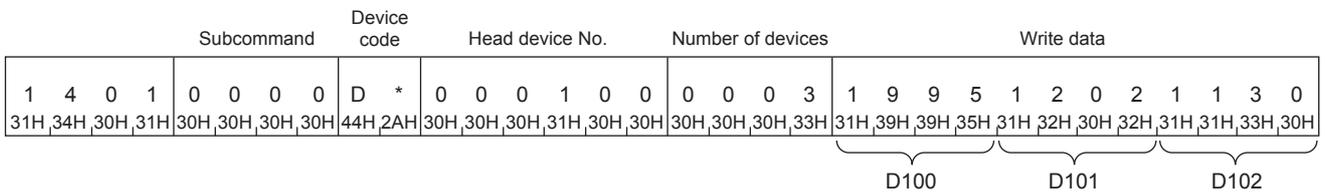

- When communicating data in binary code

(Request data)

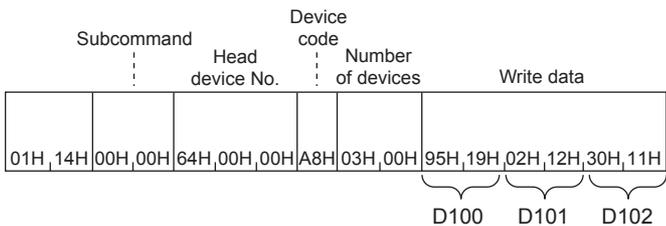

Device Read Random


This command specifies the device No. randomly and reads the device value.

Request data

■When communicating data in ASCII code


2 digit code/6 digit number specification

Specify the devices for the specified number of points.

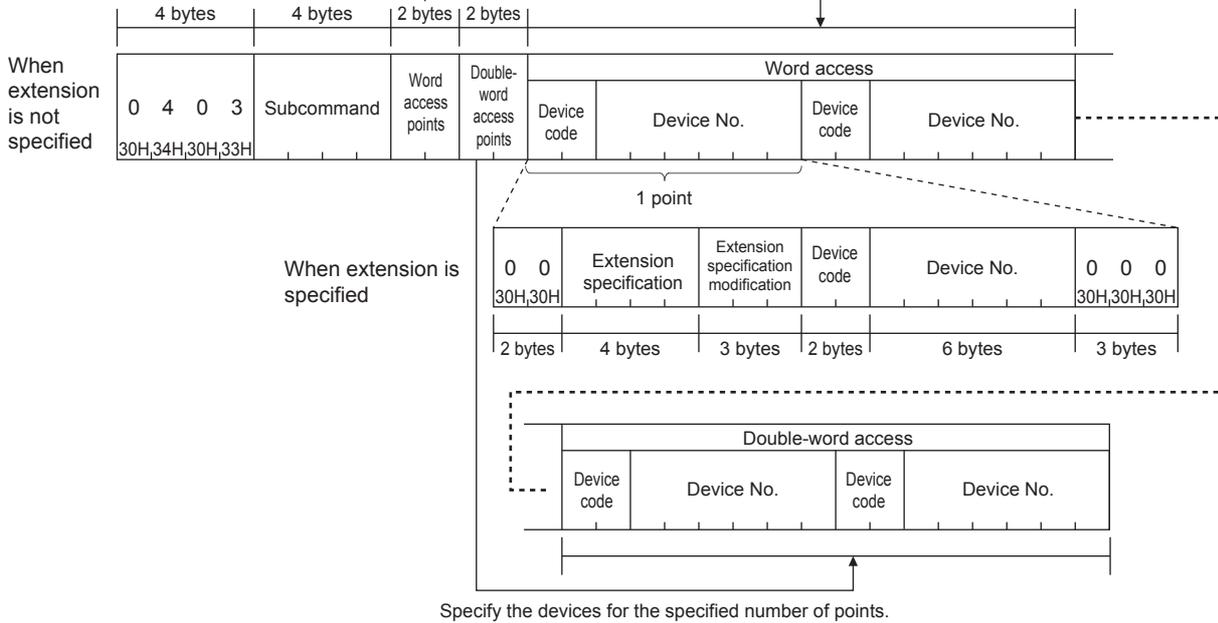


4 digit code/8 digit number specification

Specify the devices for the specified number of points.

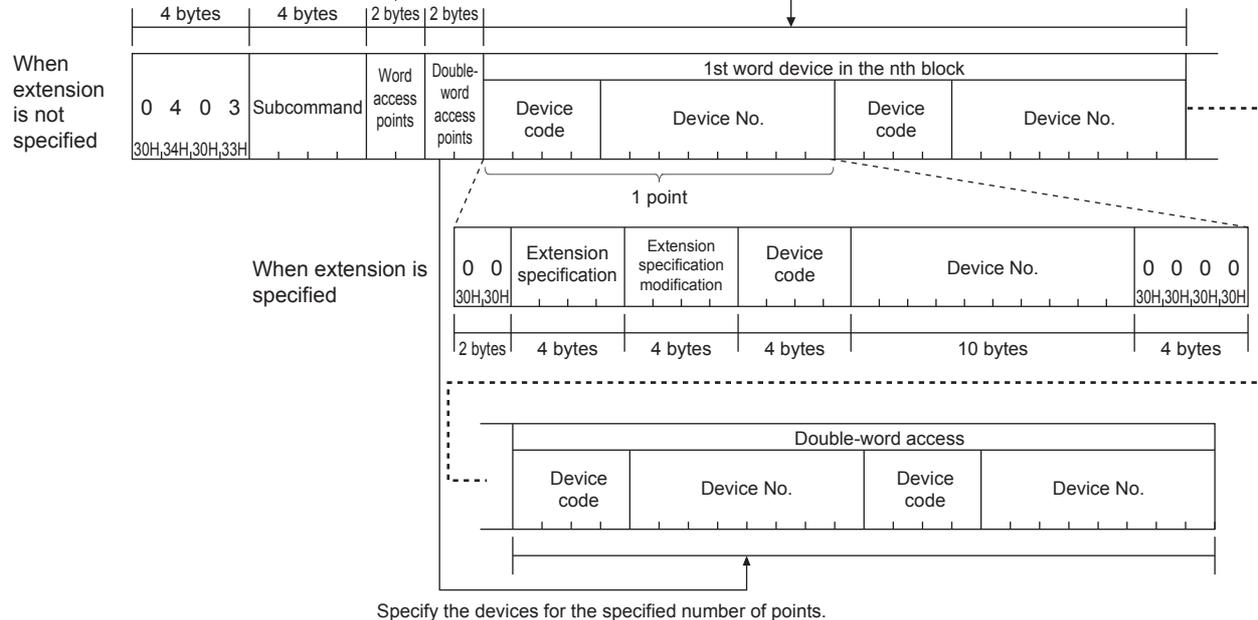


■When communicating data in binary code

2 digit code/6 digit number specification

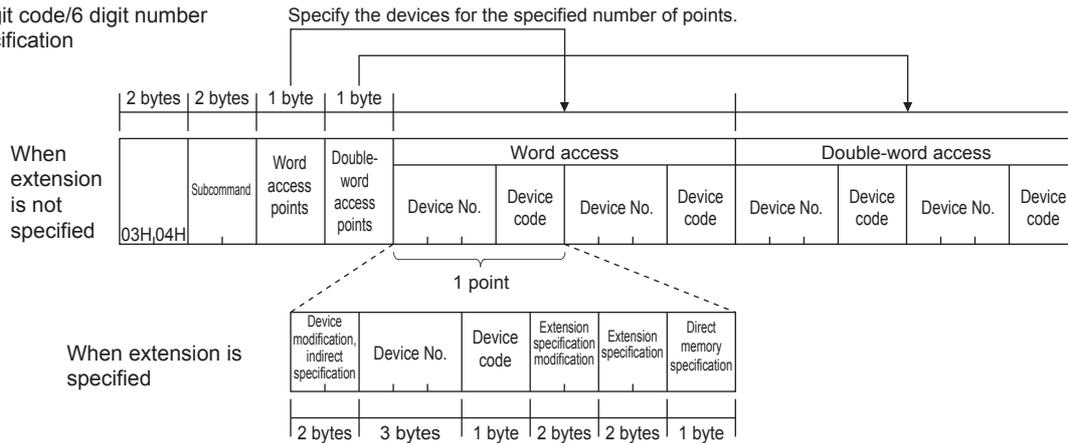

4 digit code/8 digit number specification

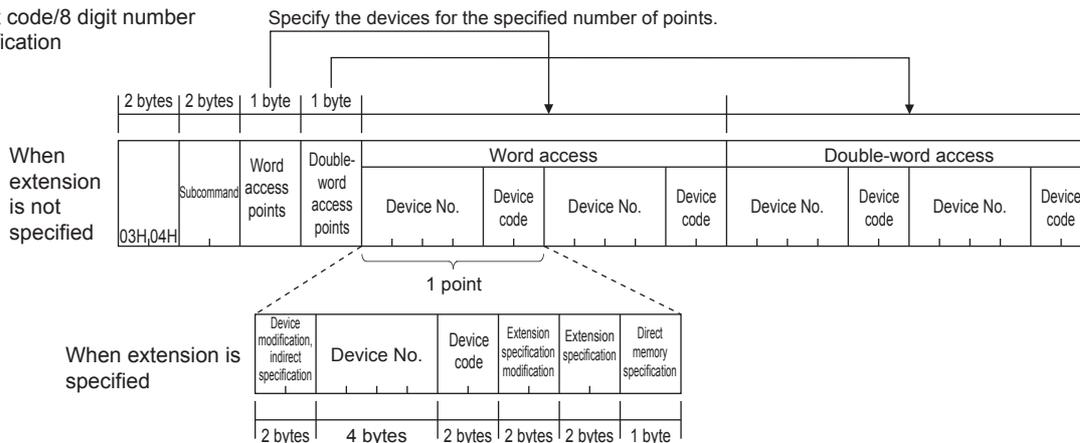

■Subcommand

Specify the subcommand selected from the item.

Item	Device specification format	Device memory extension specification	Subcommand					
			ASCII code (Upper column: characters, lower column: character code)				Binary code	
Word units	2 digit code/6 digit number specification	Not specified	0	0	0	0	00H	00H
			30H	30H	30H	30H		
	4 digit code/8 digit number specification	Specified	0	0	8	0	80H	00H
			30H	30H	38H	30H		
4 digit code/8 digit number specification	Specified	0	0	8	2	82H	00H	
		30H	30H	38H	32H			

■Word access points, double-word access points

Specify the number of target device points of reading.

Item	Description	Number of points	
		ASCII code	Binary code
Word access points	Specify the number of points to be accessed in one-word units. The bit device is 16-point units, the word device is one-word units.	1 ≤ (word access points + double-word access points) × 2 ≤ 192 When device memory extension specification is used, double the number of the access points.	1 ≤ word access points + double-word access points ≤ 192*1 When device memory extension specification is used, double the number of the access points.
Double-word access points	Specify the number of points to be accessed in two-word units. The bit device is 32-point units, the word device is two-word units.		

*1 123 points when the subcommand 0000H is specified in the Ethernet module.

■ Device code, device No.

Specify the target device of reading.

Item	Description
Word access	Specify the device points specified as word access points. The specification is not necessary when the word access points are zero.
Double-word access	Specify the device points specified as double-word access points. The specification is not necessary when the double-word access points are zero.

Set up in order of word access device → double word access device.


Precautions

Random Read (0403H) is not applicable to the following devices (contacts and coils).

- Timers (TS and TC)
- Accumulated timers (STS and STC)
- Counters (CS and CC)
- Long counters (LCS and LCC)

Response data

The read device value is stored in hexadecimal. The data order differs depending on the type of code, ASCII code or binary code.

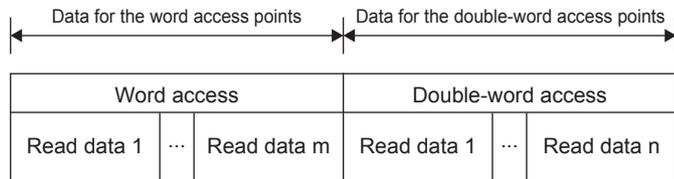


Communication example

Read D0, T0, M100 to M115, X20 to X37 by word access, and D1500 to D1501, Y160 to Y217, M1111 to M1142 by double-word access.


It is supposed that 6549 (1995H) is stored in D0, 4610 (1202H) is stored in T0, 20302 (4F4EH) is stored in D1500, 19540 (4C54H) is stored in D1501.

■ When communicating data in ASCII code (X, Y OCT)


- Request data

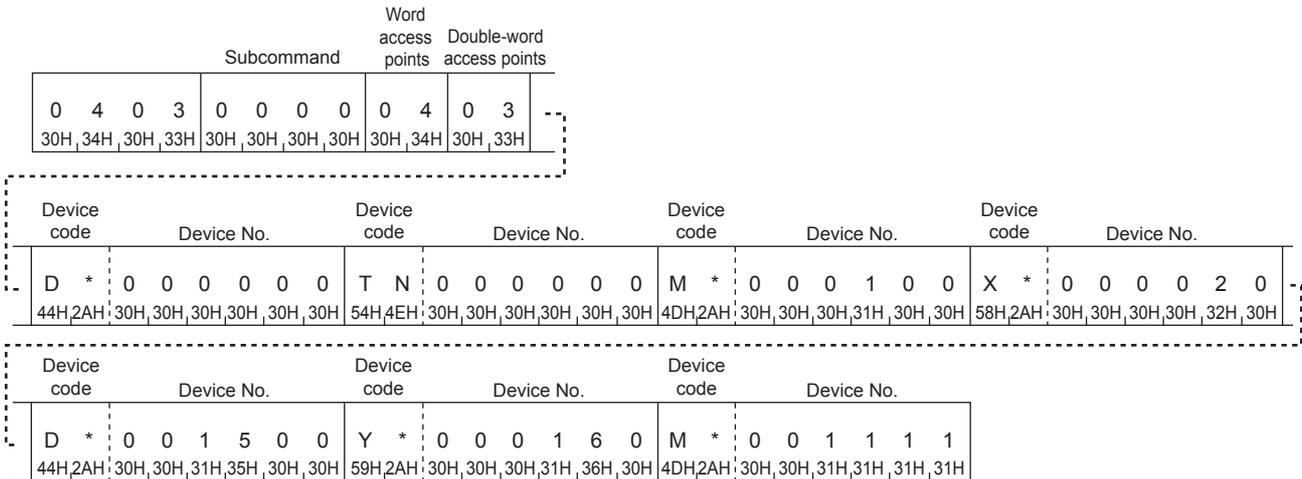


- Response data

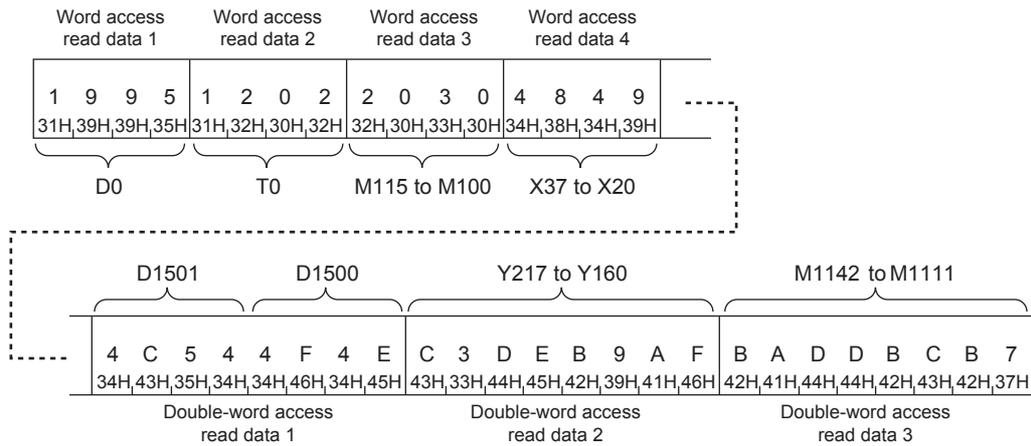


Word access read data 3

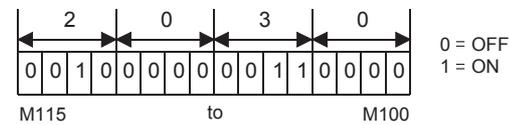


Double-word access read data 2

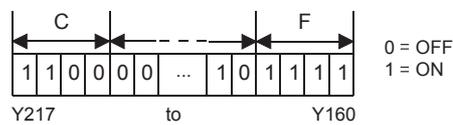

Word access read data 4

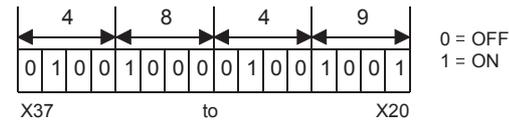


Double-word access read data 3

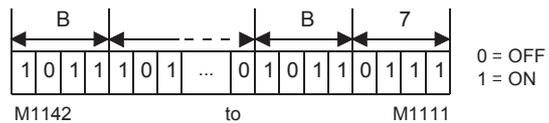


■ When communicating data in binary code


• Request data

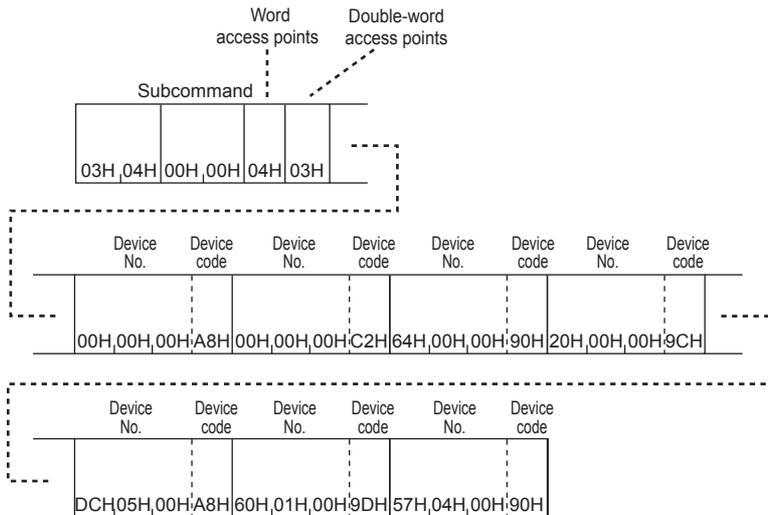


• Response data

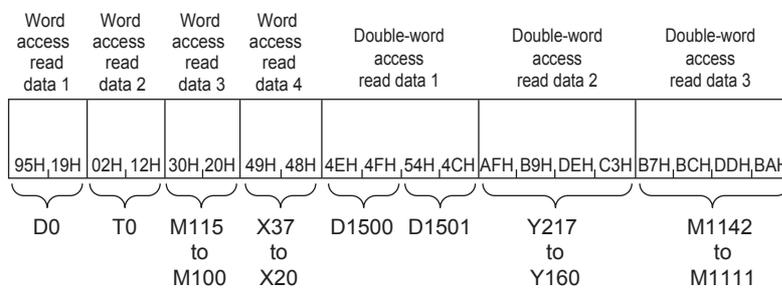


Word access read data 3

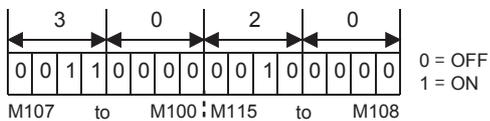

Double-word access read data 2

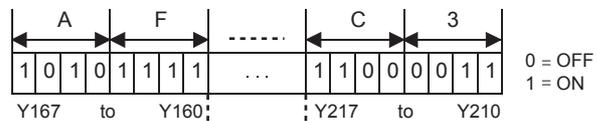

Word access read data 4

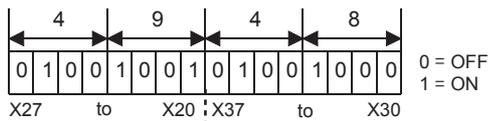

Double-word access read data 3



Device Write Random


This command specifies the device No. randomly and writes the data.

Request data


■ When writing data in bit units

- When communicating data in ASCII code

2 digit code/6 digit number specification Specify the devices for the specified number of points.

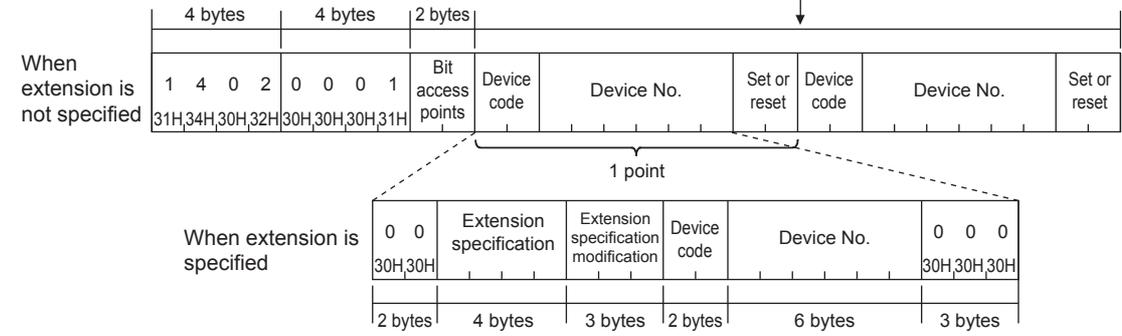


4 digit code/8 digit number specification Specify the devices for the specified number of points.

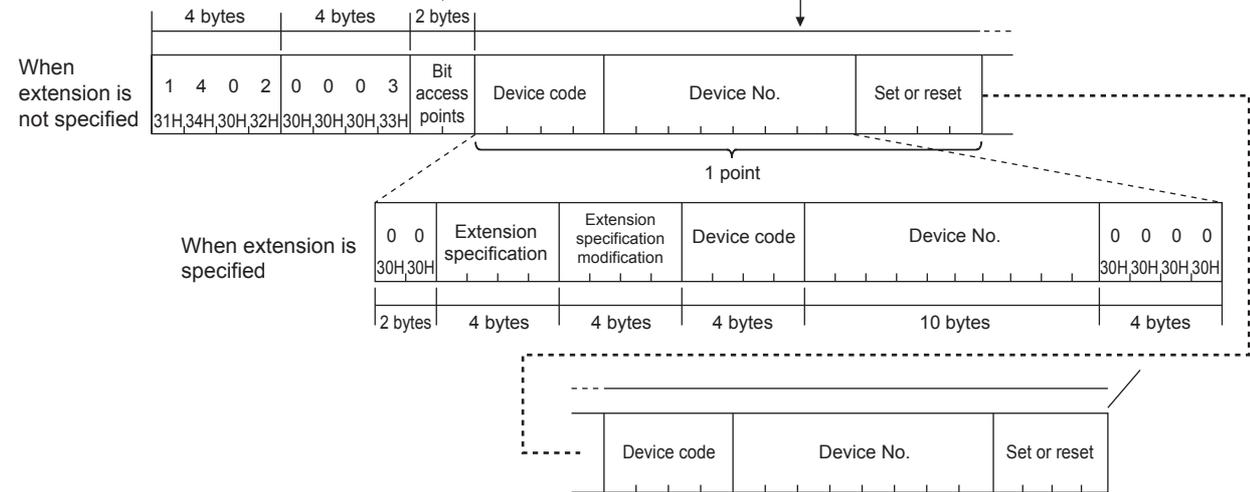


• When communicating data in binary code

2 digit code/6 digit number specification

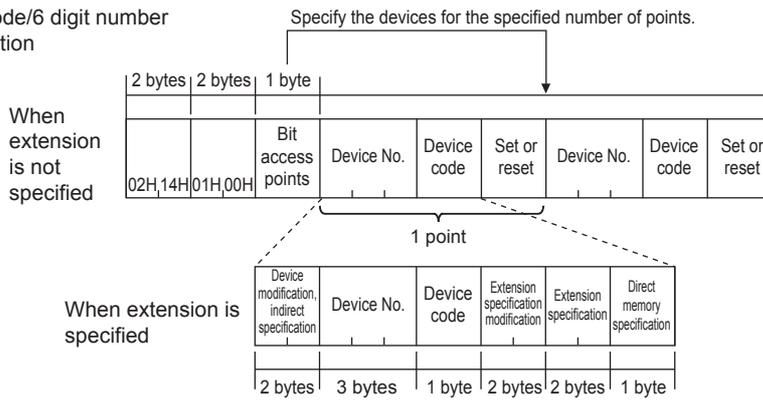


4 digit code/8 digit number specification

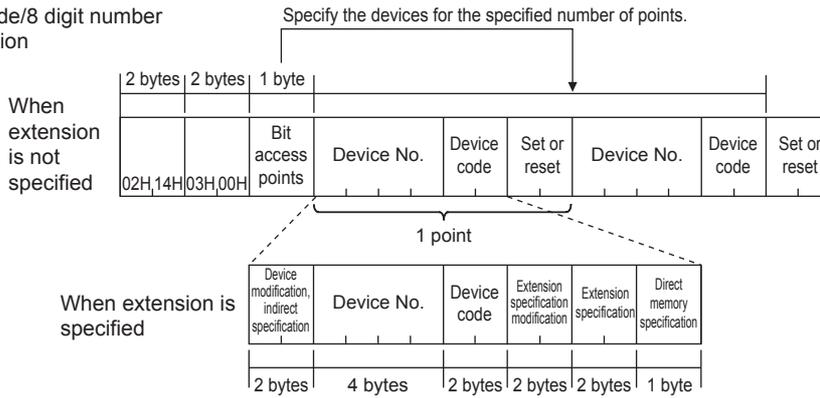

When writing data in word units


- When communicating data in ASCII code

2 digit code/6 digit number specification Specify the devices for the specified number of points.

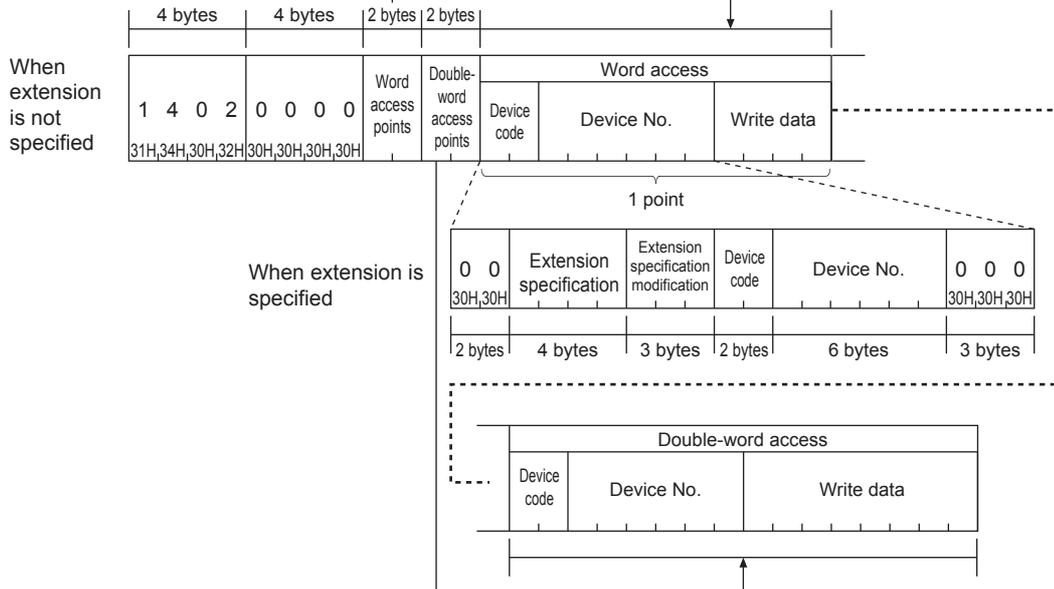

Specify the devices for the specified number of points.


4 digit code/8 digit number specification Specify the devices for the specified number of points.

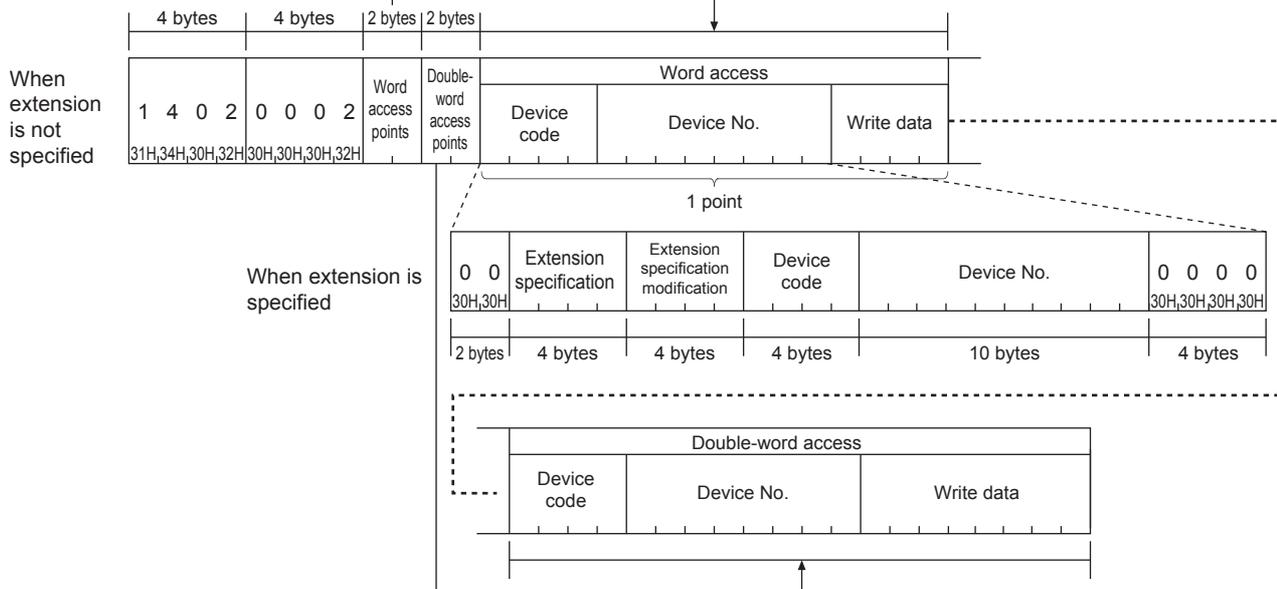


Specify the devices for the specified number of points.

- When communicating data in binary code

2 digit code/6 digit number specification

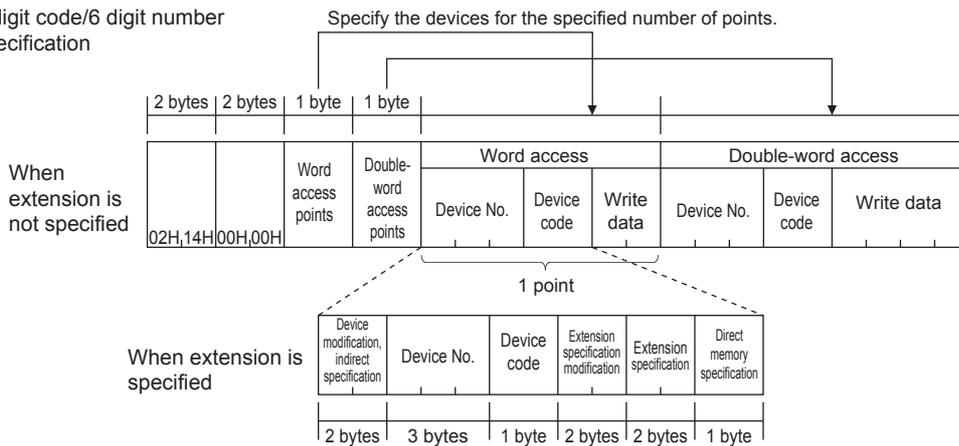

4 digit code/8 digit number specification

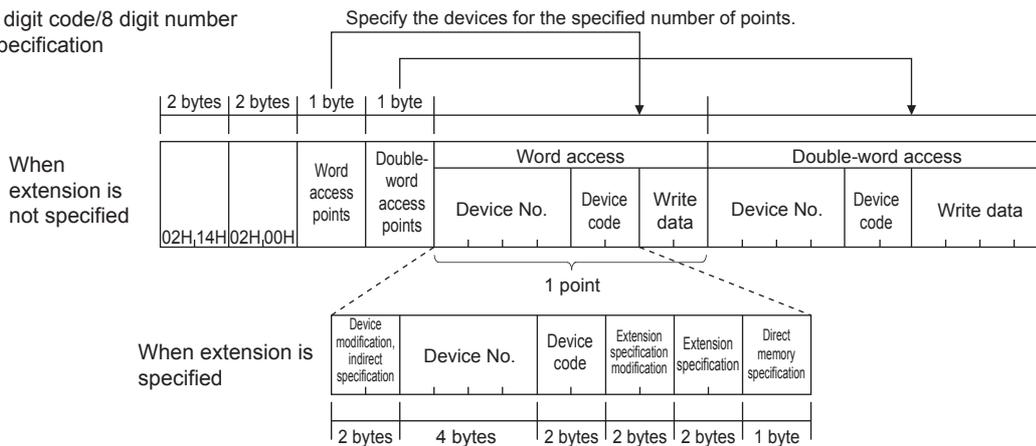

■ Subcommand

Specify the subcommand selected from the item.

Item			Subcommand					
Data size specification	Device specification format	Device memory extension specification	ASCII code (Upper column: characters, lower column: character code)				Binary code	
Bit units	2 digit code/6 digit number specification	Not specified	0	0	0	1	01H	00H
			30H	30H	30H	31H		
	4 digit code/8 digit number specification	Specified	0	0	8	1	81H	00H
			30H	30H	38H	31H		
Word units	2 digit code/6 digit number specification	Not specified	0	0	0	0	00H	00H
			30H	30H	30H	30H		
	4 digit code/8 digit number specification	Specified	0	0	8	0	80H	00H
			30H	30H	38H	30H		
			0	0	8	2	82H	00H
			30H	30H	38H	32H		

■ Bit access points, word access points, double-word access points

Item	Description	Number of points	
		ASCII code	Binary code
Bit access points	Specify the number of bit device points in one-point units.	1 to 94 When device memory extension specification is used 1 to 47	1 to 188 When device memory extension specification is used 1 to 94
Word access points	Specify the number of points to be accessed in one-word units. The bit device is 16-point units, the word device is one-word units.	1 ≤ (word access points × 12 + double-word access points × 14) × 2 ≤ 1920 When device memory extension specification is used, double the number of the access points.	1 ≤ word access points × 12 + double-word access points × 14 ≤ 1920 ^{*1} When device memory extension specification is used, double the number of the access points.
Double-word access points	Specify the number of points to be accessed in two-word units. The bit device is 32-point units, the word device is two-word units.		

*1 When the subcommand 0000H is specified in the Ethernet module, the number of points is:
 $1 \leq (\text{number of word access points}) \times 18 + (\text{number of double-word access points}) \times 20 \leq 1962$ points.

■ Device code, device No., write data

Specify the target device of writing.

The data is specified in hexadecimal number.

Item	Description
Word access	Specify the device points specified as word access points. The specification is not necessary when the word access points are zero.
Double-word access	Specify the device points specified as double-word access points. The specification is not necessary when the double-word access points are zero.

Precautions

Random Write (1402H) is not applicable to the following devices (contacts and coils).

- Timers (TS and TC)
- Accumulated timers (STS and STC)
- Counters (CS and CC)

■ Set or reset

Specify ON/OFF of the bit device.

- 2 digit code/6 digit number specification

Item	Data to write		Remark
	ON	OFF	
ASCII code	"01"	"00"	Two characters will be sent in order from "0".
Binary code	01H	00H	The one-byte numerical value shown left will be sent.

- 4 digit code/8 digit number specification

Item	Data to write		Remark
	ON	OFF	
ASCII code	"0001"	"0000"	Four characters will be sent in order from "0".
Binary code	0001H	0000H	The two-byte numerical value shown left will be sent.

Response data

There is no response data for the Write Random command.

Communication example

■ When writing data in bit units

Turn off M50 and turn on Y27.

- When communicating data in ASCII code (X, Y OCT)

(Request data)

Subcommand				Bit access points	Device code	Device No.				Set or reset	Device code	Device No.				Set or reset													
1	4	0	2	0	2	M	*	0	0	0	0	0	0	Y	*	0	0	0	0	2	7	0	1						
31H	34H	30H	32H	30H	30H	30H	31H	30H	32H	4DH	2AH	30H	30H	30H	30H	35H	30H	30H	30H	59H	2AH	30H	30H	30H	30H	32H	37H	30H	31H

- When communicating data in binary code

(Request data)






Subcommand		Device No.	Device code	Set or reset	Device code	Set or reset								
02H	14H	01H	00H	02H	32H	00H	00H	90H	00H	27H	00H	00H	9DH	01H

When writing data in word units

Write the value in a device as follows.

Item	Target device
Word access	D0, D1, M100 to M115, X20 to X37
Double-word access	D1500 to D1501, Y160 to Y217, M1111 to M1142

- When communicating data in ASCII code (X, Y OCT)
(Request data)

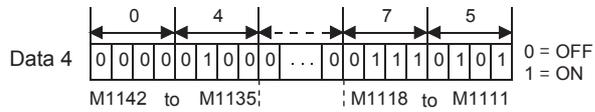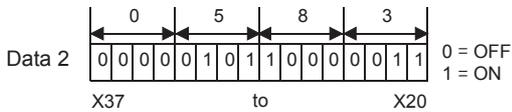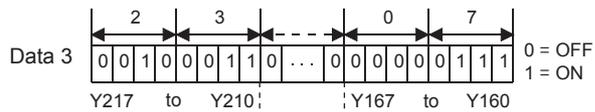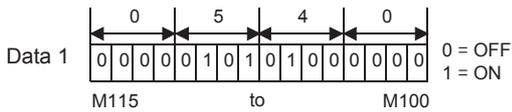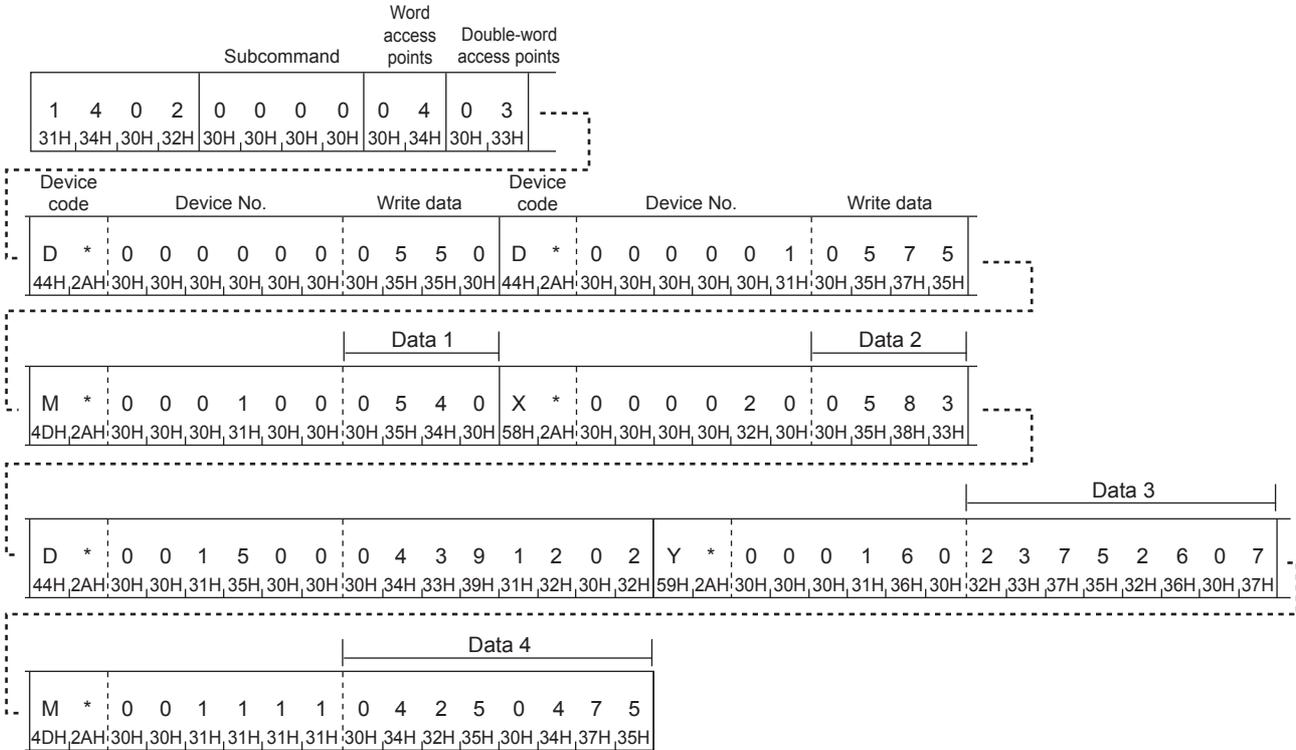

Device Read Block



The examples shown in this section explain the control procedure for reading by randomly specifying multiple blocks, where 1 block consists of n point(s) of a bit device memory (one point is specified by 16-bit) and a word device memory (one point is specified by 1-word).

Data array in the character area during the device read block

This section explains how data is ordered in the character areas during device read block.


When communicating data in ASCII code

(Request data)

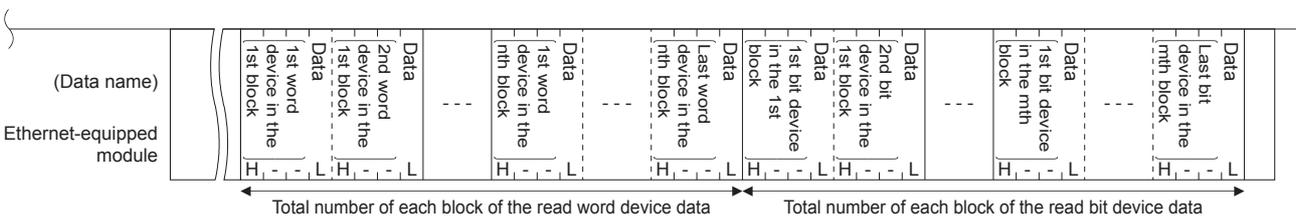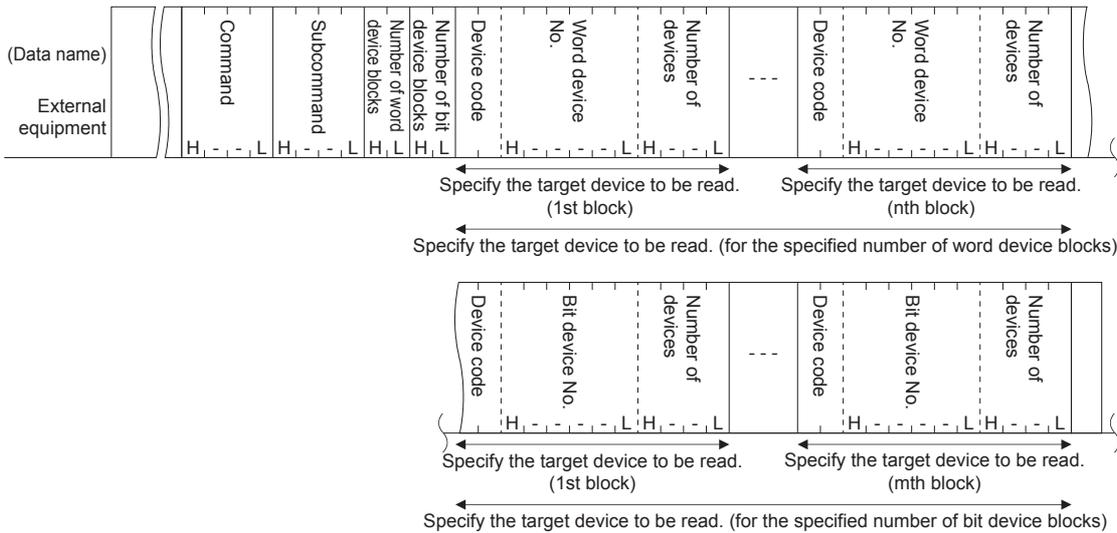


When communicating data in binary code

(Request data)

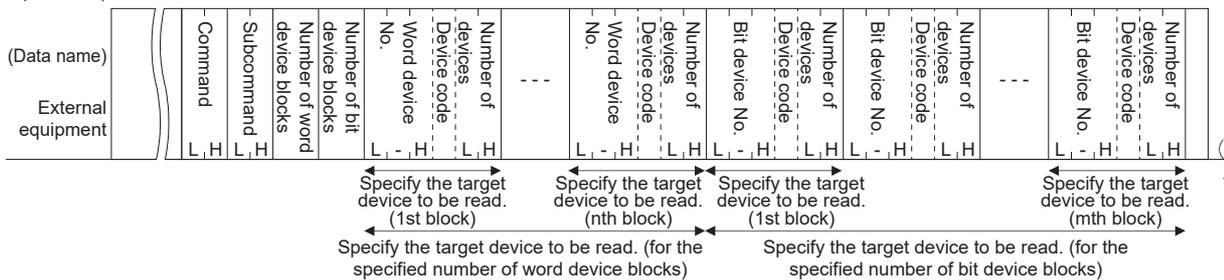

(Response data)

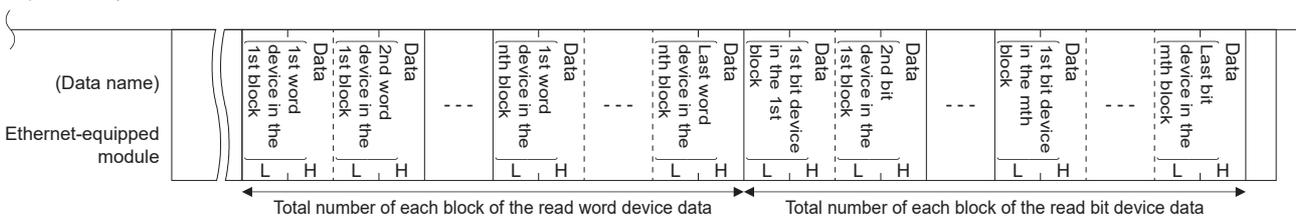

Contents of the character areas during device read block

This section explains what is in the character area when a device read block function is performed.

■Number of word device blocks and number of bit device blocks

This data is for specifying the number of word device blocks or bit device blocks to be sent directly after this data field in the batch read to the word device or bit device, respectively.

- When communicating data in ASCII code

Each number of blocks are converted to 2-digit ASCII code (hexadecimal) and sent.

Ex.

For 5 blocks: Converted to "05", and sent sequentially from "0".

For 20 blocks: Converted to "14", and sent sequentially from "1".

- When communicating data in binary code

1-byte numeric value indicating the number of blocks is transmitted.

Ex.

For 5 blocks: 05H is sent.

For 20 blocks: 14H is sent.

- Specify the number of blocks so the following condition is satisfied:

$120 \geq \text{number of word device blocks} + \text{number of bit device blocks}$

- When setting either number of blocks to 0, the corresponding device number, device code, number of device points, and data specification are not necessary.

■Word device number and bit device number

This data is for specifying the head word device or bit device for each block to which batch read is performed, where continuous word or bit devices are considered one block.

- When communicating data in ASCII code

The head device number of each block is converted to 6-digit ASCII code and sent.

Ex.

Internal relay M1234 and link register W1234:

The internal relay M1234 is converted to "001234" or " 1234", and the link register W1234 is converted to "001234" or " __1234". In both cases, the transmission starts from "0" or " " (space).

- When communicating data in binary code

The head device number of each block is indicated in a 3-byte numeric value and sent.

Ex.

Internal relay M1234 and link register W1234:

Internal relay M1234 becomes 0004D2H and is sent in the order of D2H, 04H, and 00H.

The link register W1234 is converted to 001234H and sent in the order of 34H, 12H, and 00H.

■ Device code

This data is for identifying the head device memory for each block for which batch read is performed.

The device code for each device is shown in  Page 68 Device range.

Precautions

Double word devices and long index registers (LZ) cannot be used in the multiple block batch read (0406H).

- When communicating data in ASCII code

Each device code is converted to 2-digit ASCII code (hexadecimal) and sent.

Ex.

Internal relay (M) and link register (W):

The internal relay (M) is converted to "M*" and link register (W) is converted to "W*", and sent from "M" and "W" respectively.

- When communicating data in binary code

1-byte numeric value indicating each device code is sent.

Ex.

Internal relay (M) and link register (W):

90H is transmitted for the internal relay (M) and B4H is sent for the link register (W).

■ Number of devices

This data is for specifying the number of points in the continuous device range of each block for which batch read is performed (1 point = 16 bits for bit device memory and 1 point = 1 word for word device memory), where one block consists of continuous word or bit devices.

- When communicating data in ASCII code

The number of points for each block is converted to a 4-digit ASCII code (hexadecimal) and sent.

Ex.

For 5 points: Converted to "0005", and sent sequentially from "0".

For 20 points: Converted to "0014", and sent sequentially from "0".

- When communicating data in binary code

2-byte numeric value indicating the number of points for each block is sent.

Ex.

For 5 points: Converted to 0005H, and sent sequentially from 05H.

For 20 points: Converted to 0014H, and sent sequentially from 14H.

- Specify number of devices so that the appropriate condition is satisfied

$960 \geq$ total number of points for all word device blocks + total number of points for all bit device blocks


Point

The extension specification is allowed for the device memory being read using the device read block functions.


Request data

■ When communicating data in ASCII code

2 digit code/6 digit number specification

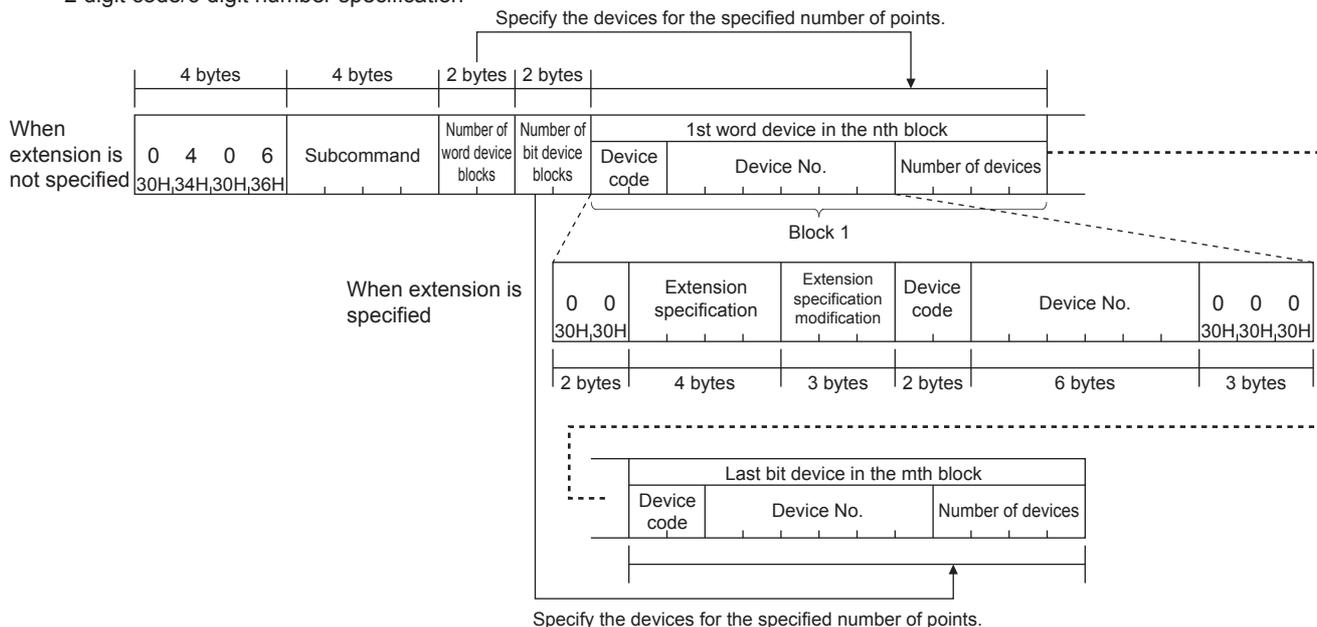


4 digit code/8 digit number specification

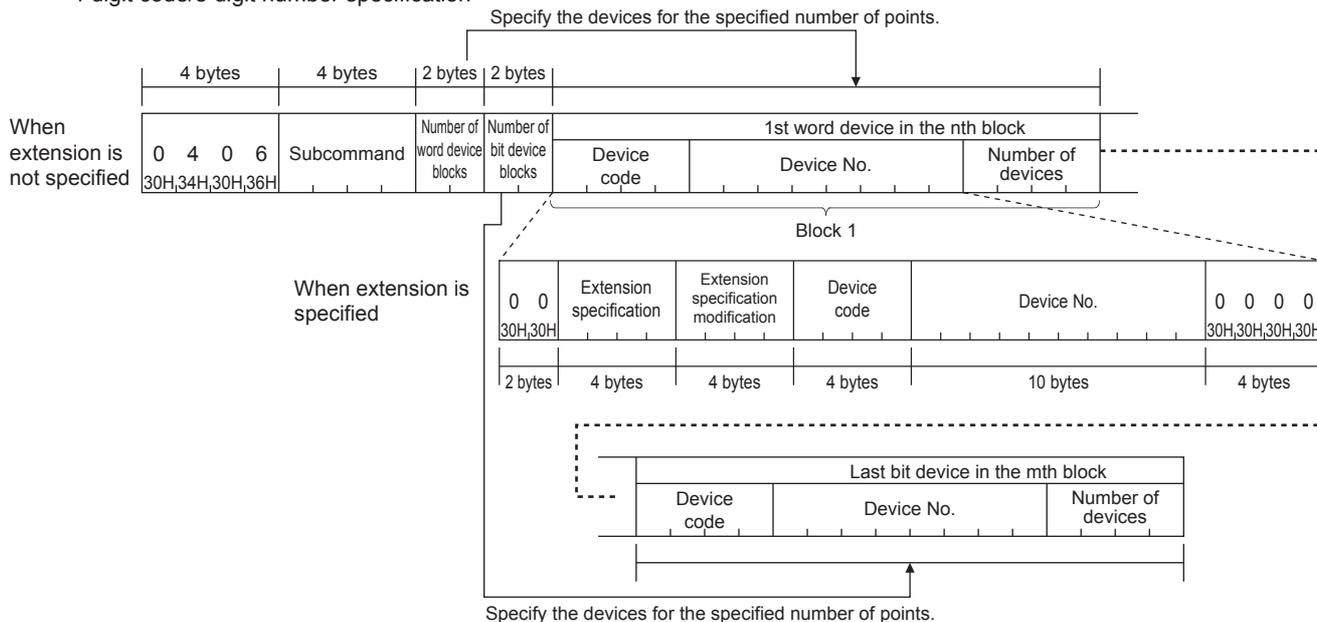


■When communicating data in binary code

2 digit code/6 digit number specification

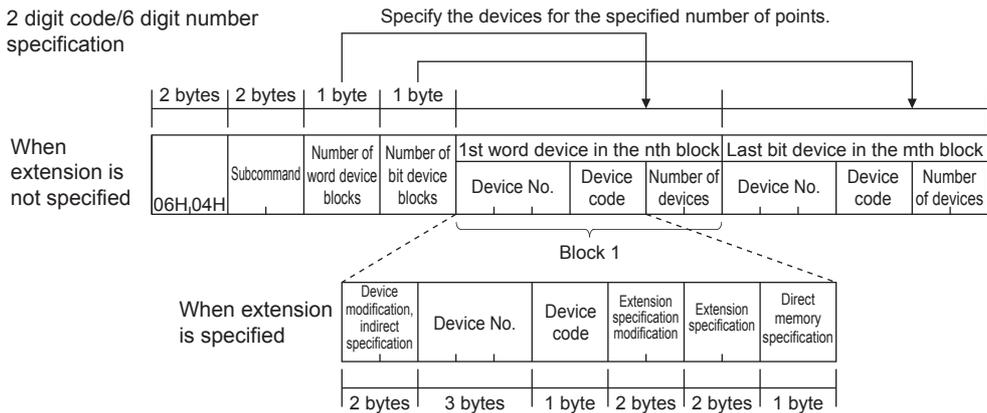

4 digit code/8 digit number specification

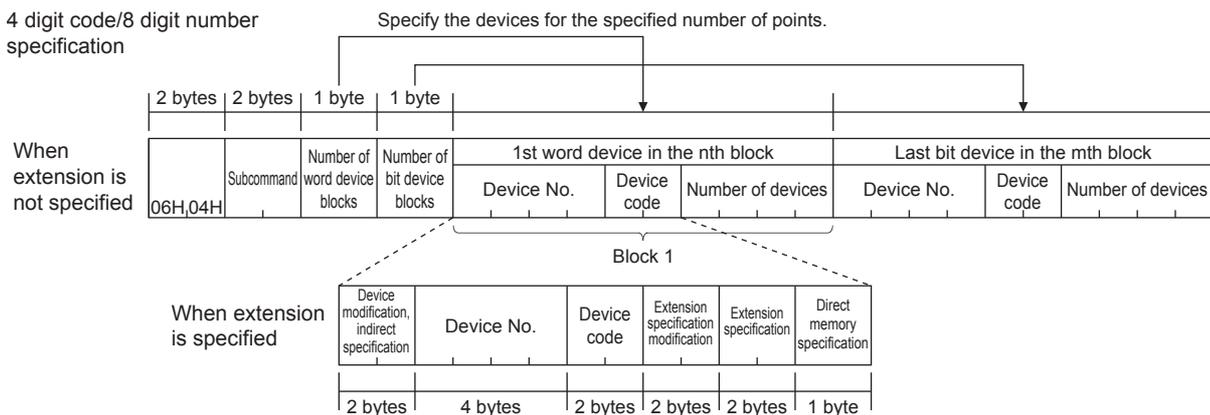

① Subcommand

Specify the subcommand selected from the item.

Item	Device specification format	Device memory extension specification	Subcommand				Binary code	
			ASCII code (Upper column: characters, lower column: character code)					
Word units	2 digit code/6 digit number specification	Not specified	0	0	0	0	00H	00H
			30H	30H	30H	30H		
	4 digit code/8 digit number specification	Specified	0	0	8	0	80H	00H
			30H	30H	38H	30H		

② Number of word device blocks and number of bit device blocks

Specify the number of blocks of the device to be read in hexadecimal.

Item	Description	Number of points	
		ASCII code	Binary code
Number of word device blocks	Specify the number of blocks of the word device to be read.	(Number of word device blocks + number of bit device blocks) × 2 ≤ 120 and (Total points of each blocks of word device + total points of each blocks of bit device) × 2 ≤ 960 When device memory extension specification is used (Number of word device blocks + number of bit device blocks) × 4 ≤ 120 and (Total points of each blocks of word device + total points of each blocks of bit device) × 2 ≤ 960	Number of word device blocks + number of bit device blocks ≤ 120 and Total points of each blocks of word device + total points of each blocks of bit device ≤ 960 When device memory extension specification is used (Number of word device blocks + number of bit device blocks) × 2 ≤ 120 and Total points of each blocks of word device + total points of each blocks of bit device ≤ 960
Number of bit device blocks	Specify the number of blocks of the bit device to be read.		

③ Device code, device No., number of device points

Specify the device points while satisfying the following conditions:


Total number of points for all word device blocks + total number of points for all bit device blocks ≤ 960

Item	Description
Word device	Specify the device points specified in "Number of word device blocks". When "Number of word device blocks" is set to 0, this specification is unnecessary.
Bit device	Specify the device points specified in "Number of bit device blocks". When "Number of bit device blocks" is set to 0, this specification is unnecessary.

Point

When specifying a contact and a coil of a timer, retentive timer, and counter, use the bit device block.
Set in order of word device → bit device.

Response data

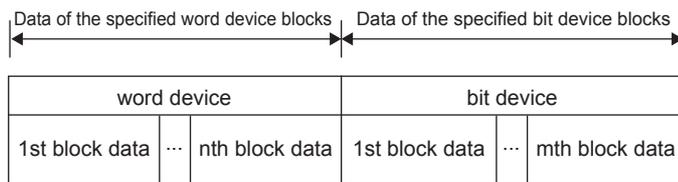


Communication example

Values are read from devices as follows.


Item	Read contents
Word device	<ul style="list-style-type: none"> Block 1: D0 to D3 (4 points) Block 2: W100 to W107 (8 points)
Bit device	<ul style="list-style-type: none"> Block 1: M0 to M31 (2 points) Block 2: M128 to M159 (2 points) Block 3: B100 to B12F (3 points)

■ When communicating data in ASCII code

(Request data)

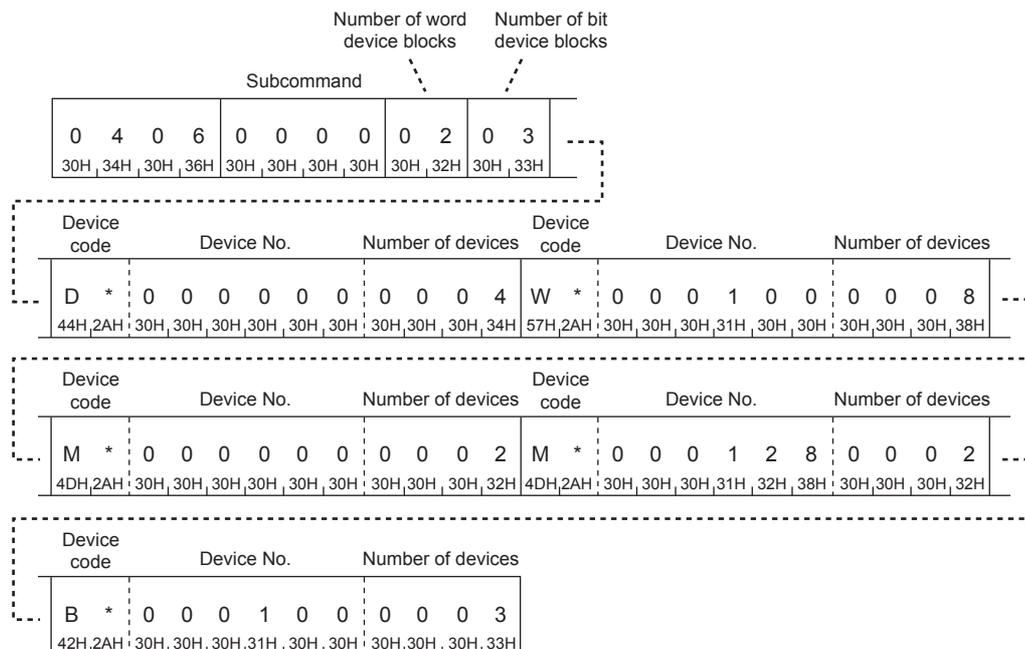


(Response data)

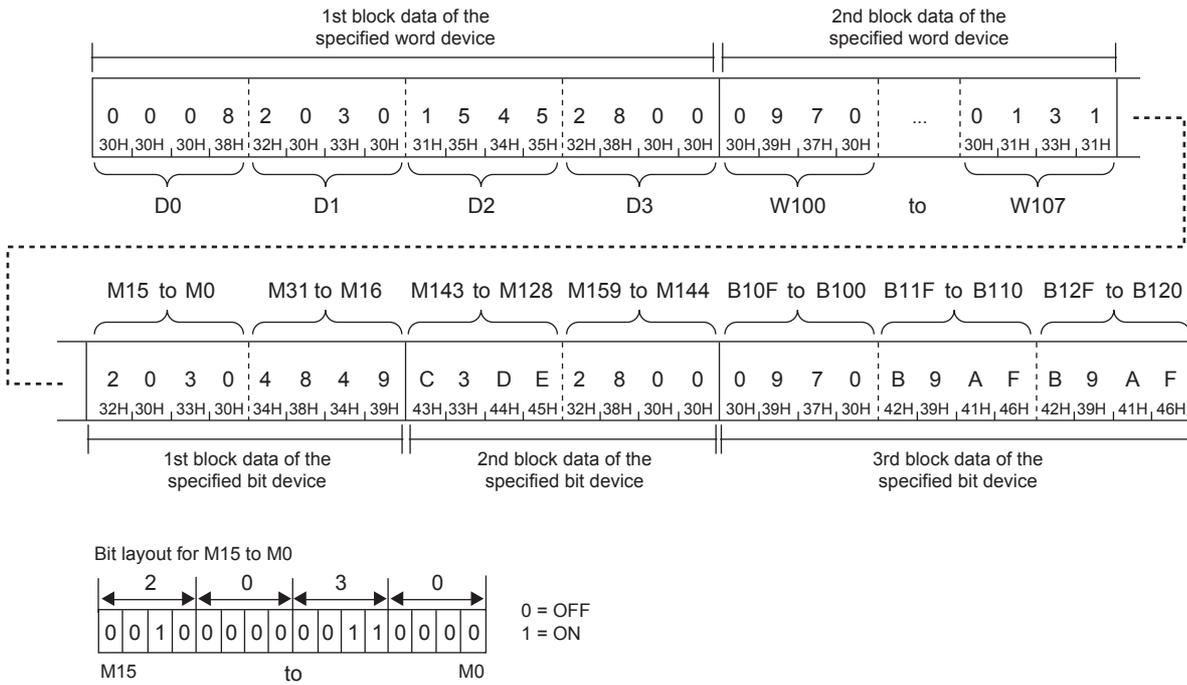


■When communicating data in binary code

(Request data)

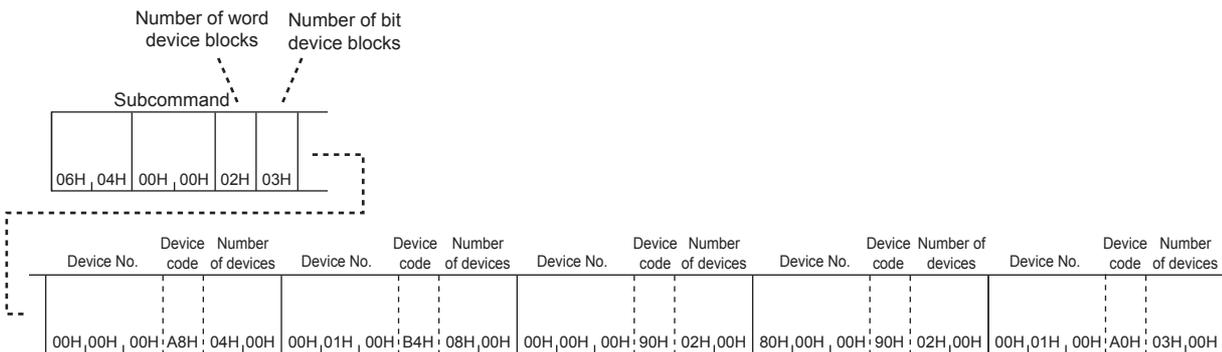

(Response data)

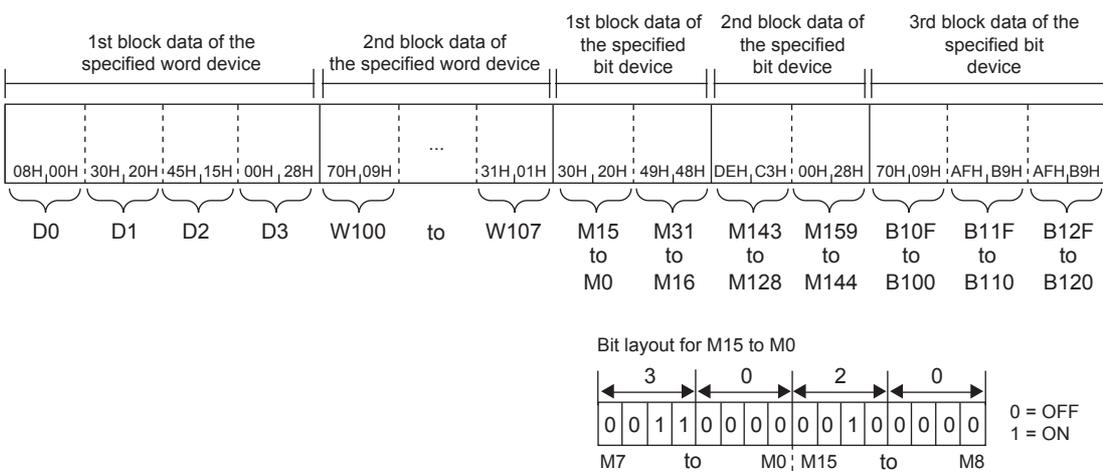


Device Write Block

The examples shown in this section explain the control procedure for writing by randomly specifying multiple blocks, where 1 block consists of n point(s) of a bit device memory (one point is specified by 16-bit) and a word device memory (one point is specified by 1-word).


Data array in the character area during the device write block

This section explains how data is ordered in the character areas during device write block

■When communicating data in ASCII code

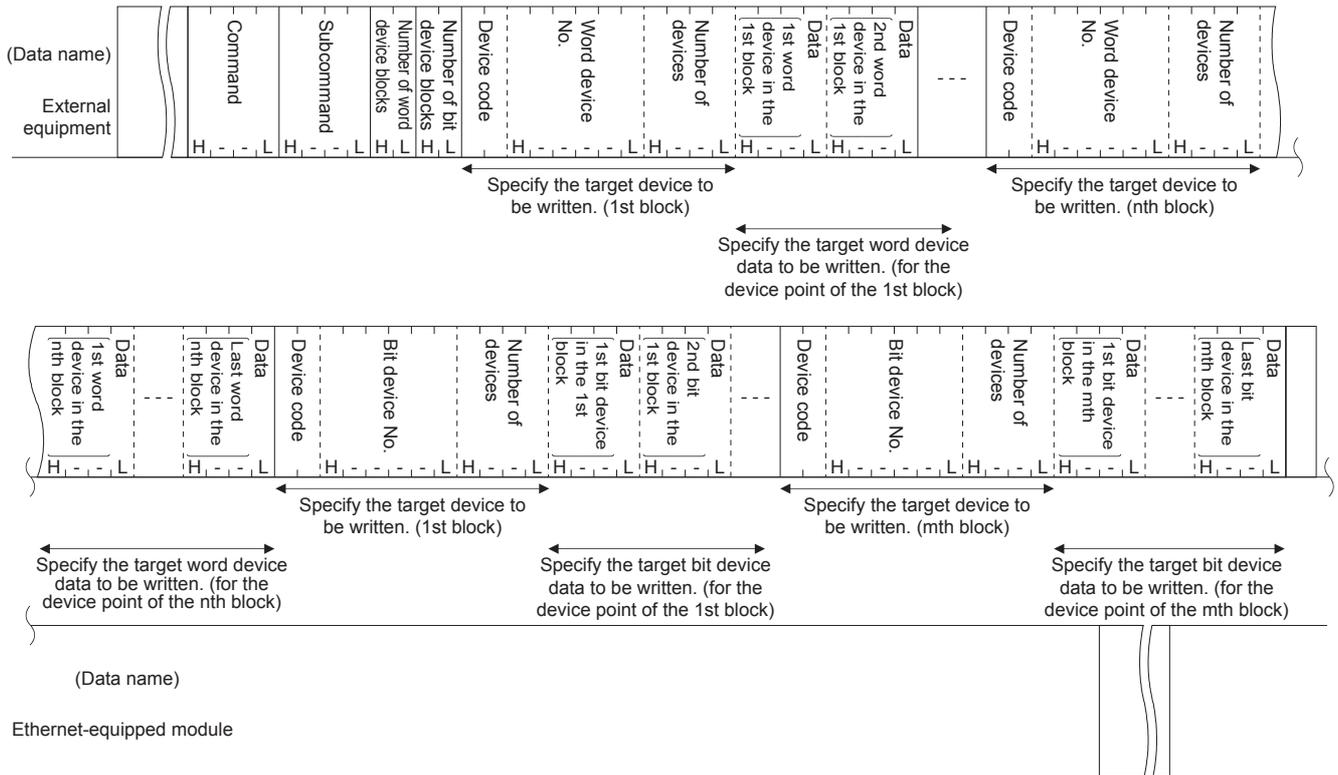

■When communicating data in binary code

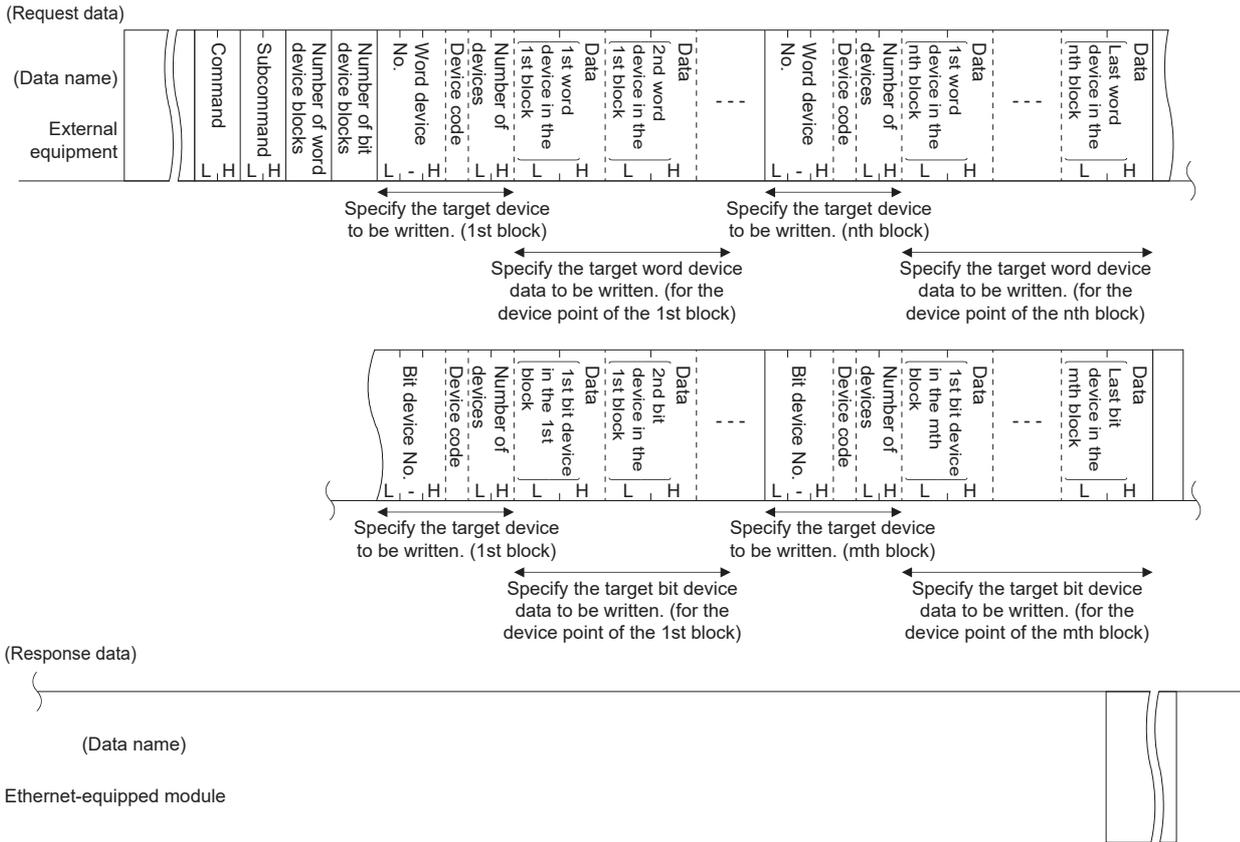

Contents of the character areas during device write block

This section explains what is in the character area when a device write block function is performed.

■Number of word device blocks and number of bit device blocks

This data is for specifying the number of word device blocks or bit device blocks to be sent directly after this data field in the batch write to the word device or bit device, respectively.

- When communicating data in ASCII code

Each number of blocks are converted to 2-digit ASCII code (hexadecimal) and sent.

Ex.

For 5 blocks: Converted to "05", and sent sequentially from "0".

For 20 blocks: Converted to "14", and sent sequentially from "1".

- When communicating data in binary code

1-byte numeric value indicating the number of blocks is transmitted.

Ex.

For 5 blocks: 05H is sent.

For 20 blocks: 14H is sent.

- Specify the number of blocks so the following condition is satisfied:

$120 \geq \text{number of word device blocks} + \text{number of bit device blocks}$

- When setting either number of blocks to 0, the corresponding device number, device code, number of device points, and data specification are not necessary.

■Word device number and bit device number

This data is for specifying the head word device or bit device for each block to which batch write is performed, where continuous word or bit devices are considered one block.

- When communicating data in ASCII code

The head device number of each block is converted to 6-digit ASCII code and sent.

Ex.

Internal relay M1234 and link register W1234:

The internal relay M1234 is converted to "001234" or " 1234", and the link register W1234 is converted to "001234" or " __1234". In both cases, the transmission starts from "0" or " " (space).

- When communicating data in binary code

The head device number of each block is indicated in a 3-byte numeric value and sent.

Ex.

Internal relay M1234 and link register W1234:

Internal relay M1234 becomes 0004D2H and is sent in the order of D2H, 04H, and 00H.

The link register W1234 is converted to 001234H and sent in the order of 34H, 12H, and 00H.

■Device code

This data is for identifying the head device memory for each block for which batch write is performed.

The device code for each device is shown in  Page 68 Device range.

Precautions

Double word devices and long index registers (LZ) cannot be used in the multiple block batch write (1406H).

- When communicating data in ASCII code

Each device code is converted to 2-digit ASCII code (hexadecimal) and sent.

Ex.

Internal relay (M) and link register (W):

The internal relay (M) is converted to "M*" and link register (W) is converted to "W*", and sent from "M" and "W" respectively.

- When communicating data in binary code

1-byte numeric value indicating each device code is sent.

Ex.

Internal relay (M) and link register (W):

90H is transmitted for the internal relay (M) and B4H is sent for the link register (W).

■Number of devices

This data is for specifying the number of points in the continuous device range of each block for which batch write is performed (1 point = 16 bits for bit device memory and 1 point = 1 word for word device memory), where one block consists of continuous word or bit devices.

- When communicating data in ASCII code

The number of points for each block is converted to a 4-digit ASCII code (hexadecimal) and sent.

Ex.

For 5 points: Converted to "0005", and sent sequentially from "0".

For 20 points: Converted to "0014", and sent sequentially from "0".

- When communicating data in binary code

2-byte numeric value indicating the number of points for each block is sent.

Ex.

For 5 points: Converted to 0005H, and sent sequentially from 05H.

For 20 points: Converted to 0014H, and sent sequentially from 14H.

- Specify number of devices so that the appropriate condition is satisfied

$760 \geq 4 \times (\text{number of word device blocks} + \text{number of bit device blocks}) + \text{total number of points for all word device blocks} + \text{total number of points for all bit device blocks}$

The extension specification is allowed for the device memory being written to using the device write block functions.


Request data

■When communicating data in ASCII code



2 digit code/6 digit number specification

Specify the devices for the specified number of points.

When extension is not specified

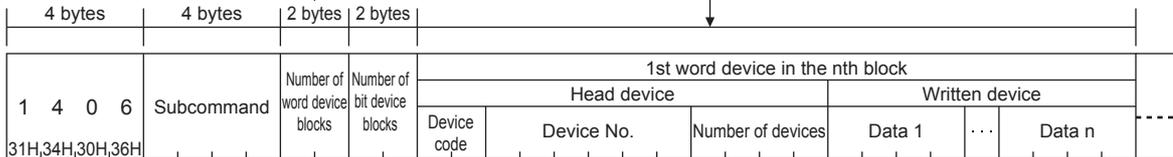

When extension is specified

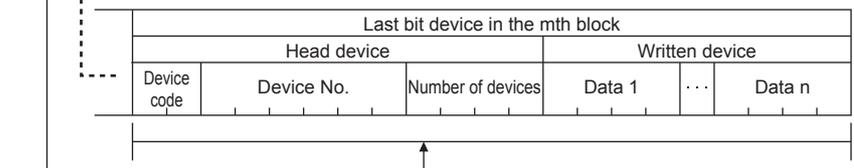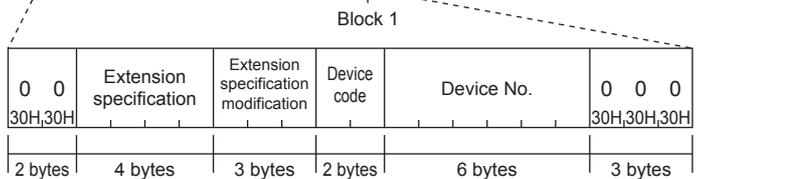


Specify the devices for the specified number of points.




4 digit code/8 digit number specification

Specify the devices for the specified number of points.

When extension is not specified

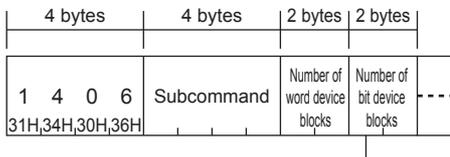


When extension is specified

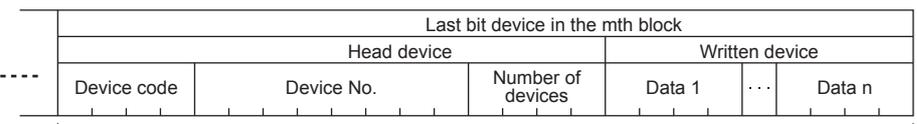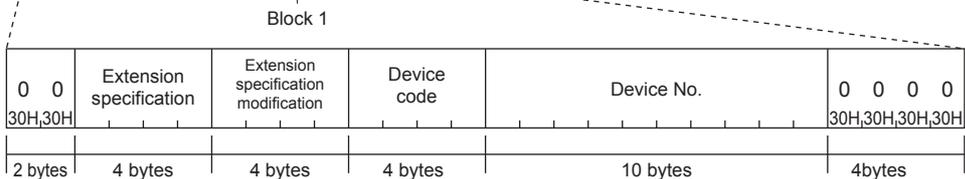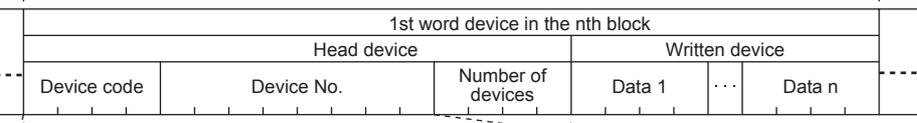


Specify the devices for the specified number of points.

■When communicating data in binary code

2 digit code/6 digit number specification

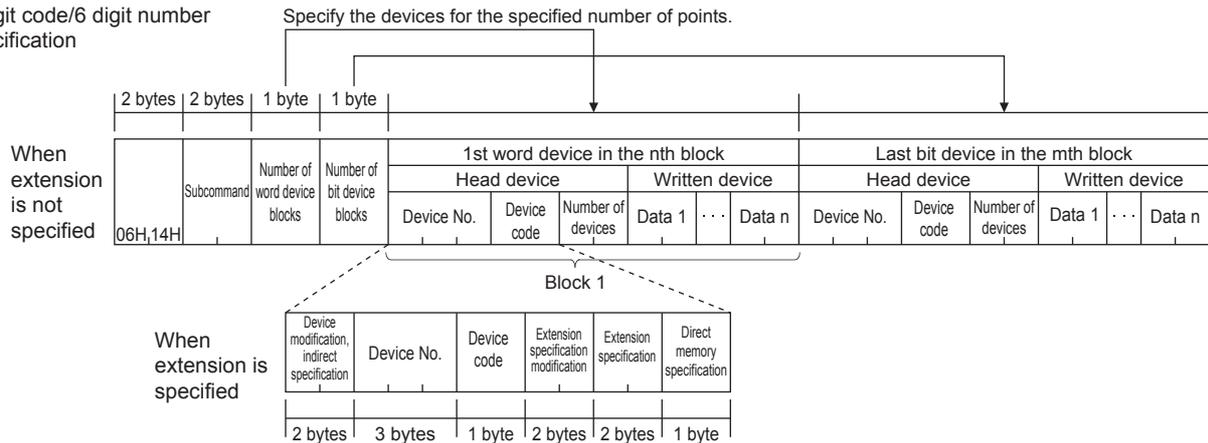

4 digit code/8 digit number specification

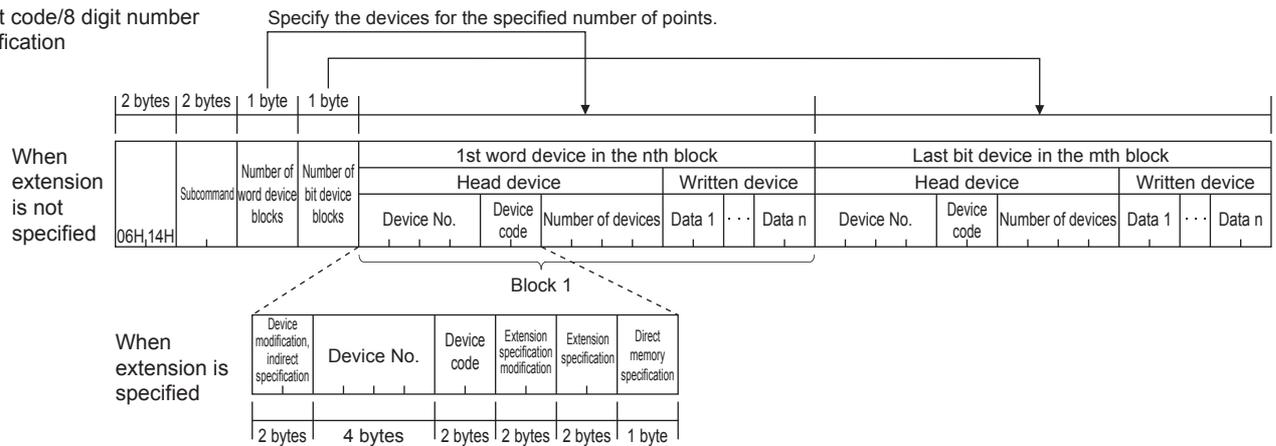

① Subcommand

Specify the subcommand selected from the item.

Item	Device specification format	Device memory extension specification	Subcommand				Binary code	
			ASCII code (Upper column: characters, lower column: character code)					
Word units	2 digit code/6 digit number specification	Not specified	0	0	0	0	00H	00H
			30H	30H	30H	30H		
	4 digit code/8 digit number specification	Specified	0	0	8	0	80H	00H
			30H	30H	38H	30H		

② Number of word device blocks and number of bit device blocks

Specify the number of blocks of the device to be write in hexadecimal.

Item	Description	Number of points	
		ASCII code	Binary code ^{*1}
Number of word device blocks	Specify the number of blocks of the word device to be write.	(Number of word device blocks + number of bit device blocks) × 2 ≤ 120 and ((Number of word device blocks + number of bit device blocks) × 4 + Total points of each blocks of word device + total points of each blocks of bit device) × 2 ≤ 760	Number of word device blocks + number of bit device blocks ≤ 120 and (Number of word device blocks + number of bit device blocks) × 4 + Total points of each blocks of word device + total points of each blocks of bit device ≤ 760
Number of bit device blocks	Specify the number of blocks of the bit device to be write.		
		When device memory extension specification is used (Number of word device blocks + number of bit device blocks) × 4 ≤ 120 and ((Number of word device blocks + number of bit device blocks) × 4 + Total points of each blocks of word device + total points of each blocks of bit device) × 2 ≤ 760	When device memory extension specification is used (Number of word device blocks + number of bit device blocks) × 2 ≤ 120 and (Number of word device blocks + number of bit device blocks) × 4 + Total points of each blocks of word device + total points of each blocks of bit device ≤ 760

*1 When using FX5-CCLIEF, the number of points differs. For details, refer to  Page 59 List of Commands and Functions.

③ Device code, device No., number of device points

Specify the device points while satisfying the following conditions:

(number of word device blocks + number of bit device blocks) × 4 + total number of points for all word device blocks + total number of points for all bit device blocks ≤ 760

Item	Description
Word device	Specify the device points specified in "Number of word device blocks". When "Number of word device blocks" is set to 0, this specification is unnecessary.
Bit device	Specify the device points specified in "Number of bit device blocks". When "Number of bit device blocks" is set to 0, this specification is unnecessary.

Point

When specifying a contact and a coil of a timer, retentive timer, and counter, use the bit device block.
Set up in order of word device → bit device.

Response data

There is no response data for the device write block command.


Communication example

Write values from devices as follows.

Item	Write contents
Word device	<ul style="list-style-type: none"> • Block 1: D0 to D3 (4 points) • Block 2: W100 to W107 (8 points)
Bit device	<ul style="list-style-type: none"> • Block 1: M0 to M31 (2 points) • Block 2: M128 to M159 (2 points) • Block 3: B100 to B12F (3 points)


■When communicating data in ASCII code

(Request data)

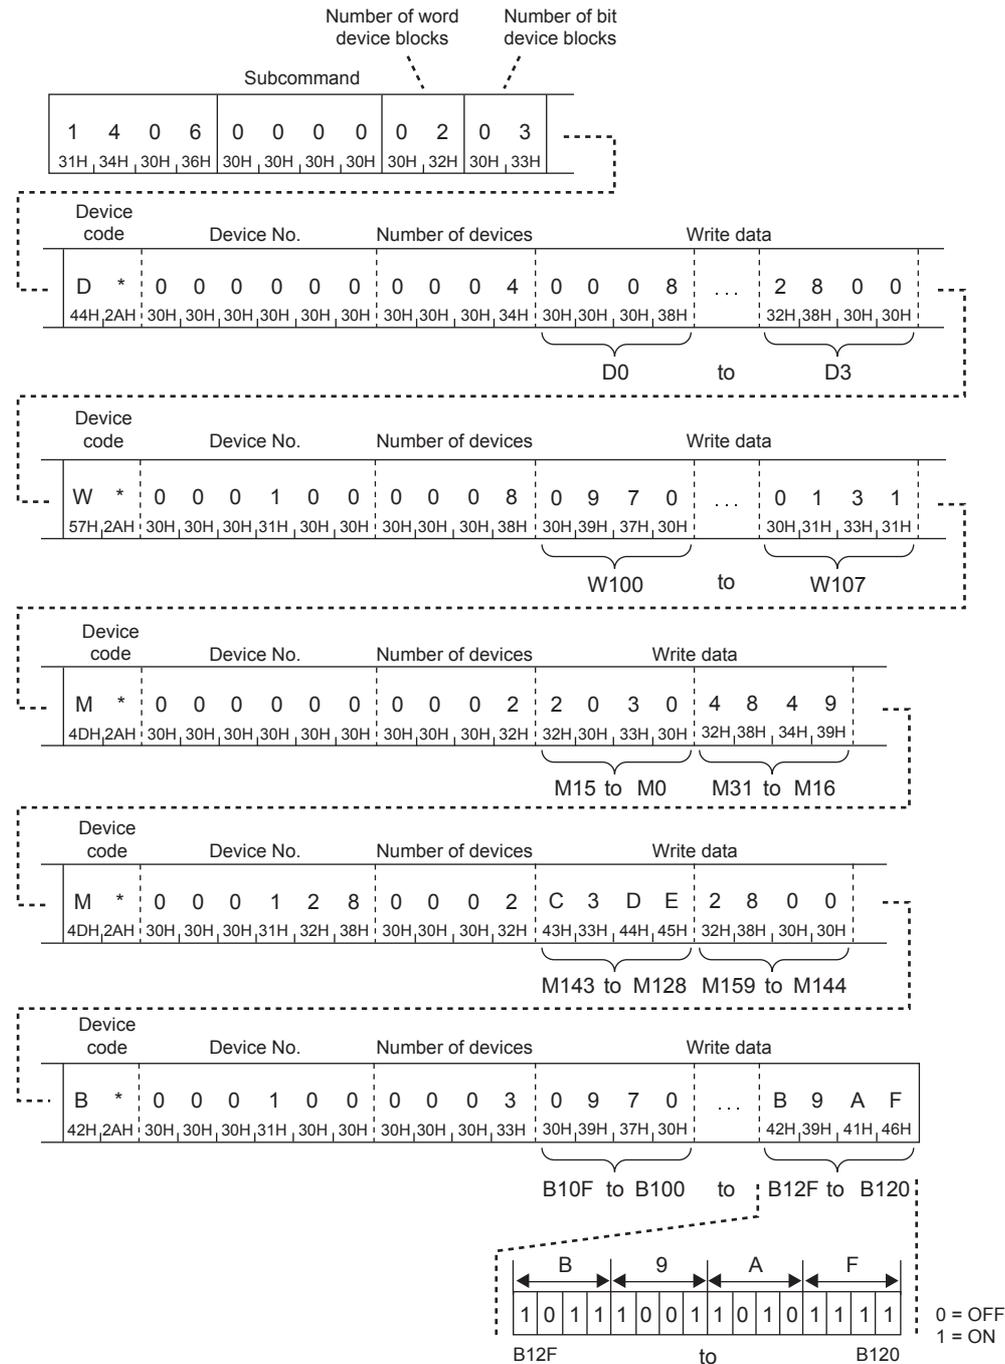

■ When communicating data in binary code

(Request data)

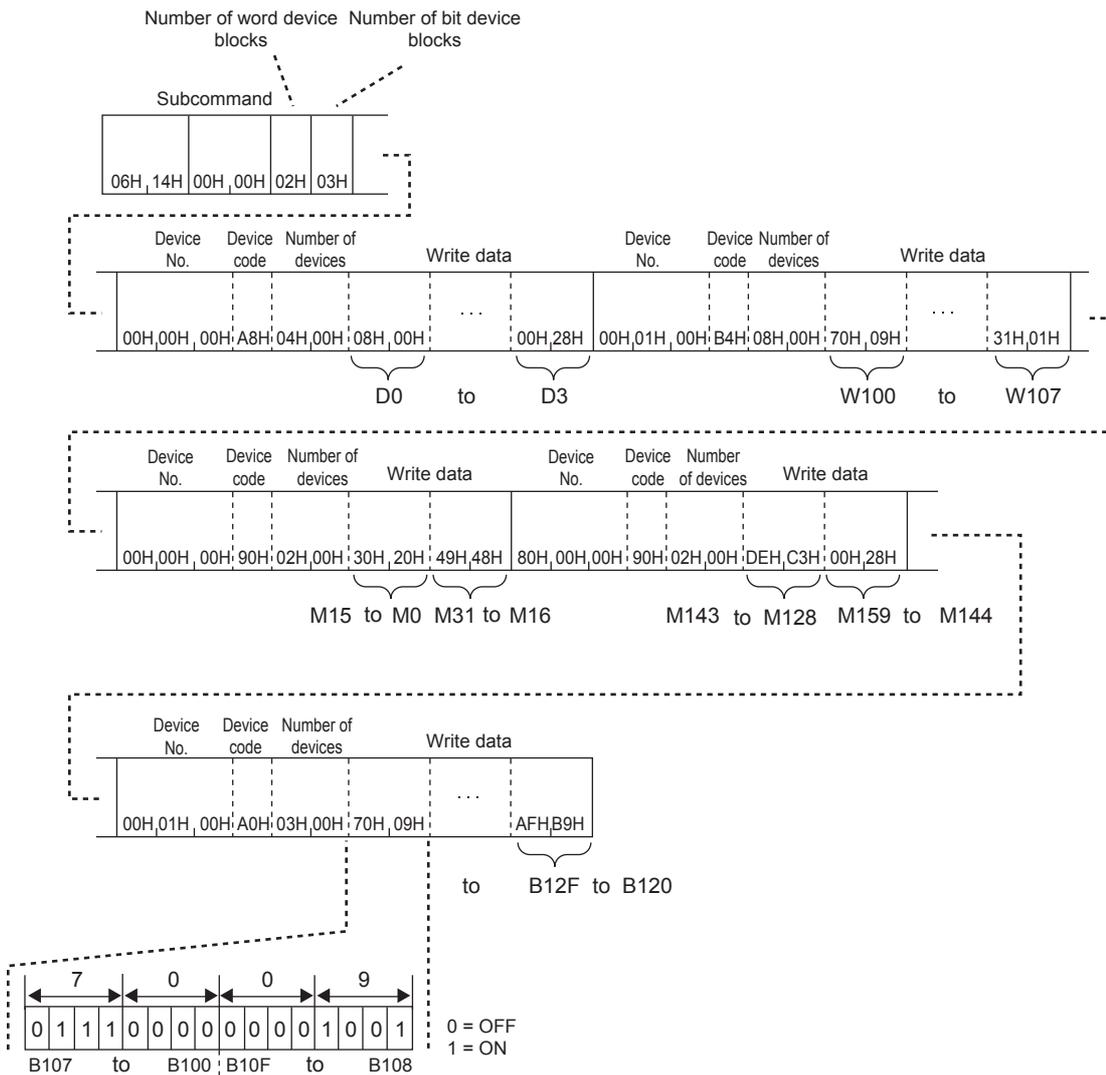

4.3 Remote Control

This section describes the command to set the SLMP compatible device or Ethernet-equipped module to the RUN status or STOP status by a message from the external device.

Before the remote operation

When the accessed device or module is turned from off to on or reset after the remote operation

The information about the remote operation will be deleted.

Ex.

Even if the Remote STOP is executed when the switch of the Ethernet-equipped module is in the RUN status, the switch will return to the RUN status after resetting the module.

When a remote password of the Ethernet-equipped module of the access destination is enabled

Remote operation from the external device is not available. An error will occur at the access destination, and an abnormal response will be sent back to the external device. Unlock the remote password of the Ethernet-equipped module side, and resend the request message.

Operable station in one command

Only one station can be operated remotely by one command.

When executing the remote operation to SLMP compatible device

It is recommended to use the UDP protocol for the remote operation. If TCP is used, the connection will be terminated when resetting. Therefore, reestablishing of connection is necessary.

Remote RUN


This command executes Remote RUN to the access destination module.

Point


Remote RUN can be executed when the switch of the access destination module is in the RUN status. Even if the switch is in the STOP status, Remote RUN (command: 1001H) will be completed normally. However, the access destination does not change to the RUN status.

Request data

■When communicating data in ASCII code

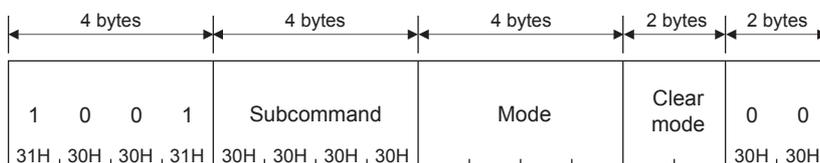

■When communicating data in binary code

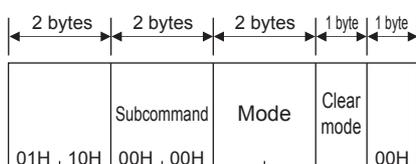

■Mode

This mode specifies whether Remote RUN can be executed forcibly by a device other than the external device which performed Remote STOP or Remote PAUSE. If forced execution is not allowed, Remote RUN can be executed only by the external device which performed Remote STOP or Remote PAUSE.

Forced execution is used when the external device which performed the remote operation cannot execute Remote RUN because of a problem with the device.

Item	Mode											
	ASCII code	Binary code										
Forced execution not allowed (Remote RUN cannot be executed when other device executes Remote STOP or Remote PAUSE.)	<table border="1"> <tr><td>0</td><td>0</td><td>0</td><td>1</td></tr> <tr><td>30H</td><td>30H</td><td>30H</td><td>31H</td></tr> </table>	0	0	0	1	30H	30H	30H	31H	<table border="1"> <tr><td>01H</td><td>00H</td></tr> </table>	01H	00H
0	0	0	1									
30H	30H	30H	31H									
01H	00H											
Forced execution allowed (Remote RUN can be executed when other device executes Remote STOP or Remote PAUSE.)	<table border="1"> <tr><td>0</td><td>0</td><td>0</td><td>3</td></tr> <tr><td>30H</td><td>30H</td><td>30H</td><td>33H</td></tr> </table>	0	0	0	3	30H	30H	30H	33H	<table border="1"> <tr><td>03H</td><td>00H</td></tr> </table>	03H	00H
0	0	0	3									
30H	30H	30H	33H									
03H	00H											

■Clear mode

This mode specifies whether the clear (initialization) processing of device is executed when starting the calculation for the Remote RUN.

Only 00H is valid.

Item	Mode						
	ASCII code	Binary code					
Do not clear the device	<table border="1"> <tr><td>0</td><td>0</td></tr> <tr><td>30H</td><td>30H</td></tr> </table>	0	0	30H	30H	<table border="1"> <tr><td>00H</td></tr> </table>	00H
0	0						
30H	30H						
00H							

Response data

There is no response data for the Remote RUN command.

Communication example

Set mode to "Forced execution not allowed.", and set clear mode to "Clear all devices including that in the latch range" when executing Remote RUN.

- When communicating data in ASCII code

(Request data)

		Mode	Clear mode		
1	0	0	1	0	0
31H	30H	30H	31H	30H	30H
0	0	0	0	0	0
30H	30H	30H	30H	30H	30H
0	0	0	1	0	2
30H	30H	30H	31H	30H	32H
0	0			0	0
30H	30H			30H	30H

- When communicating data in binary code

(Request data)


		Mode	Clear mode		
01H	10H	00H	00H	01H	00H
02H	00H				

Remote STOP


This command executes Remote STOP to the access destination module.

Request data

■When communicating data in ASCII code

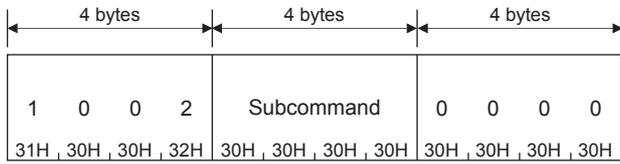

■When communicating data in binary code

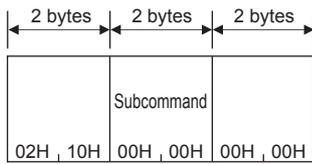

Response data

There is no response data for the Remote STOP command.

Communication example

Send request messages from the external device by using the message format shown in the request data above.

Remote PAUSE


This command executes Remote PAUSE to the access destination module.

Point


Remote PAUSE can be executed when the switch of the access destination module is in the RUN status. Even if the switch is in the STOP status, Remote PAUSE (command: 1003H) will be completed normally. However, the access destination does not change to the PAUSE status.

Request data

■When communicating data in ASCII code

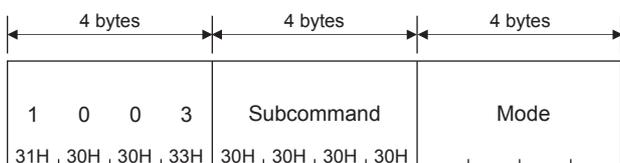

■When communicating data in binary code

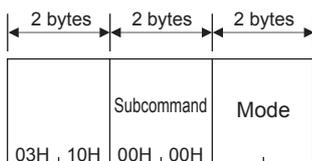

■Mode

This mode specifies whether Remote PAUSE can be executed forcibly by a device other than the external device which performed Remote STOP or Remote PAUSE. If forced execution is not allowed, Remote PAUSE can be executed only by the external device which performed Remote STOP or Remote PAUSE.

Forced execution is used when the external device which performed the remote operation cannot execute Remote PAUSE because of a problem with the device.

Item	Mode											
	ASCII code	Binary code										
Forced execution not allowed (Remote RUN cannot be executed when other device executes Remote STOP or Remote PAUSE.)	<table border="1"> <tr><td>0</td><td>0</td><td>0</td><td>1</td></tr> <tr><td>30H</td><td>30H</td><td>30H</td><td>31H</td></tr> </table>	0	0	0	1	30H	30H	30H	31H	<table border="1"> <tr><td>01H</td><td>00H</td></tr> </table>	01H	00H
0	0	0	1									
30H	30H	30H	31H									
01H	00H											
Forced execution allowed (Remote RUN can be executed when other device executes Remote STOP or Remote PAUSE.)	<table border="1"> <tr><td>0</td><td>0</td><td>0</td><td>3</td></tr> <tr><td>30H</td><td>30H</td><td>30H</td><td>33H</td></tr> </table>	0	0	0	3	30H	30H	30H	33H	<table border="1"> <tr><td>03H</td><td>00H</td></tr> </table>	03H	00H
0	0	0	3									
30H	30H	30H	33H									
03H	00H											

Response data

There is no response data for the Remote PAUSE command.

Communication example

Set mode to "Forced execution not allowed" when executing Remote PAUSE.

■When communicating data in ASCII code

(Request data)

Mode		
1 0 0 3	0 0 0 0	0 0 0 1
31H,30H,30H,33H	30H,30H,30H,30H	30H,30H,30H,31H

■When communicating data in binary code

(Request data)

Mode		
03H,10H	00H,00H	01H,00H

Remote latch clear

This command executes remote latch clear to the access destination module.

Point

Before executing the remote latch clear, set the status of the access destination module to STOP.

While the access destination is stopped or paused remotely by request from another external device:


- The remote latch clear cannot be executed. Abnormal completion of the command will occur.
- Cancel the Remote STOP or Remote PAUSE before executing the command.

Request data

■When communicating data in ASCII code

4 bytes	4 bytes	4 bytes
1 0 0 5	Subcommand	0 0 0 0
31H,30H,30H,35H	30H,30H,30H,30H	30H,30H,30H,30H

■When communicating data in binary code

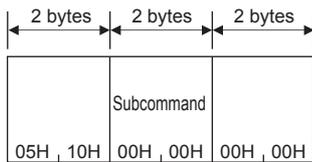

Response data

There is no response data for remote latch clear command.

Communication example

Send request messages from the external device by using the message format shown in the request data above.

Remote RESET

This command executes Remote RESET to the access destination module. Remote RESET is used to restore when an error occurred in the SLMP compatible device.

Point

Before executing Remote RESET, perform the following.


- In the GX Works3 Navigation window ⇒ [Parameter] ⇒ [FX5UJCPU] or [FX5UCPU] ⇒ [CPU Parameter] ⇒ [Operation Related Setting] ⇒ [Remote Reset Setting], select "Enable" for "Remote Reset" if there is a setting of Remote RESET enable or disable in the parameter of the access destination. (Default: Disable)
- Set the status of the access destination module to STOP.

Precautions


- In some cases, Remote RESET cannot be executed because of hardware error, etc.
- The response message when Remote RESET is executed may not be sent back to the external device since the access destination is reset.

Request data

■When communicating data in ASCII code

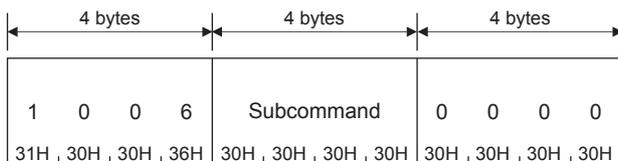

■When communicating data in binary code

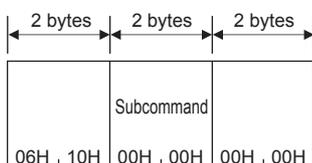

Response data

There is no response data for the Remote RESET command.

Communication example


Send request messages from the external device by using the message format shown in the request data above.

Processor type read


This command reads the processor module name code (processor type) of the access destination module.

Request data

■When communicating data in ASCII code

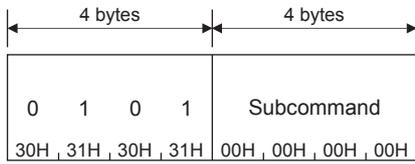


■When communicating data in binary code

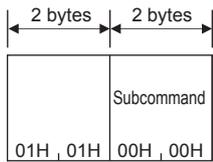


Response data

■When communicating data in ASCII code

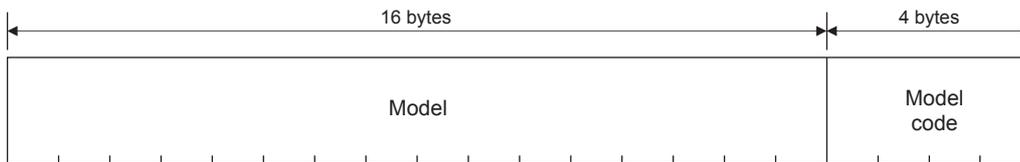

■When communicating data in binary code

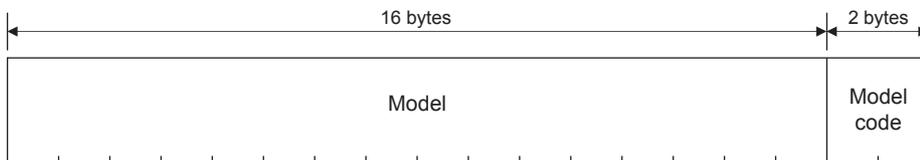

■Model

The characters of the module model are stored for 16 characters from the upper byte.

If the model to be read is less than 16 characters, space (20H) is stored for the remaining characters. Even when communicating data in binary code, the module model is stored in ASCII code.

■ Model code

The following model codes will be stored.

When communicating in binary code, the data is stored in order from the lower byte to the upper byte.

Model	Model code (hexadecimal)
FX5U-32MR/ES	4A21H
FX5U-64MR/ES	4A23H
FX5U-80MR/ES	4A24H
FX5U-32MT/ES	4A29H
FX5U-64MT/ES	4A2BH
FX5U-80MT/ES	4A2CH
FX5U-32MT/ESS	4A31H
FX5U-64MT/ESS	4A33H
FX5U-80MT/ESS	4A34H
FX5U-32MR/DS	4A41H
FX5U-64MR/DS	4A43H
FX5U-80MR/DS	4A44H
FX5U-32MT/DS	4A49H
FX5U-64MT/DS	4A4BH
FX5U-80MT/DS	4A4CH
FX5U-32MT/DSS	4A51H
FX5U-64MT/DSS	4A53H
FX5U-80MT/DSS	4A54H
FX5UC-32MT/D	4A91H
FX5UC-64MT/D	4A92H
FX5UC-96MT/D	4A93H
FX5UC-32MT/DSS	4A99H
FX5UC-64MT/DSS	4A9AH
FX5UC-96MT/DSS	4A9BH
FX5UC-32MR/DS-TS	4AA9H
FX5UC-32MT/DS-TS	4AB1H
FX5UC-32MT/DSS-TS	4AB9H
FX5UJ-24MR/ES	4B0DH
FX5UJ-40MR/ES	4B0EH
FX5UJ-60MR/ES	4B0FH
FX5UJ-24MT/ES	4B14H
FX5UJ-40MT/ES	4B15H
FX5UJ-60MT/ES	4B16H
FX5UJ-24MT/ESS	4B1BH
FX5UJ-40MT/ESS	4B1CH
FX5UJ-60MT/ESS	4B1DH



- The model of the CPU module is identified by the model code.
- When the Ethernet module is used, the model code of the connected CPU module is stored.

Communication example

■When communicating data in ASCII code

(Request data)

0	1	0	1	0	0	0	0
30H	31H	30H	31H	30H	30H	30H	30H

(Response data)

F	X	5	U	-	3	2	M	R	/	E	S	4	A	2	1				
46H	58H	35H	55H	2DH	33H	32H	4DH	52H	2FH	45H	53H	20H	20H	20H	20H	34H	41H	32H	31H

■When communicating data in binary code

(Request data)

01H	01H	00H	00H

(Response data)

F	X	5	U	-	3	2	M	R	/	E	S						
46H	58H	35H	55H	2DH	33H	32H	4DH	52H	2FH	45H	53H	20H	20H	20H	20H	21H	4AH

4.4 Clear Error

This function turns off ERR LED of the CPU module from the external equipment and/or initializes the communication error information or error code stored in the buffer memory.

This function is used to initialize the current error information due to an abnormal response for a command message and return it to the normal state or initialize the error code storage area of the buffer memory.

The order and description of the data item with * shown in the figure of the control procedure differ depending on the frame and pattern in a communication.

Point

This function can be used only for the CPU module which is connected with the external equipment.
This function cannot be used for the CPU module of another station via the network system.


The data part of the command and control procedure when the display LEDs of the CPU module are turned off and the communication error information is initialized from the external equipment is described.

Command


Function	Command (Subcommand)	Processing content
Clear Error	1617(0000)	Turns off the display LEDs, initializes the error code, and others.

Request data

■When communicating data in ASCII code

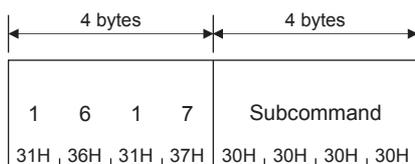

■When communicating data in binary code

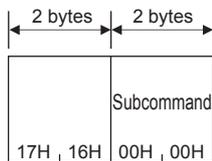

Response data

There is no response data for the Clear Error command.

Communication example

Send request messages from the external device by using the message format shown in the request data above.

4.5 Self-Test

This function tests whether the communication function between the external equipment and Ethernet-equipped module operates normally or not. The control procedure when this function is used is described with examples.

Point


- At the startup of the Ethernet-equipped module or when trouble occurs, this function can check whether the connection between the external equipment and Ethernet-equipped module is correct and/or whether the data communication function operates normally.
- This function can be used only for the Ethernet-equipped module which is connected with the external equipment (including a multi-drop connecting station). This function cannot be used for the Ethernet-equipped module of another station via the network system.

Command

Function	Command (Subcommand)	Processing content
Self-Test	0619(0000)	Checks whether a data communication is executed normally.


Request data

■When communicating data in ASCII code

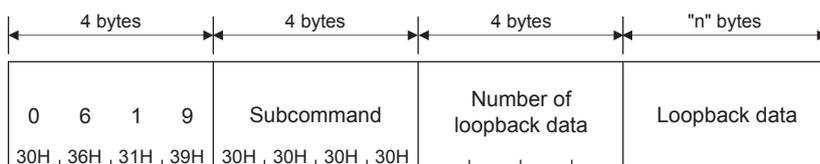

- Number of loopback data (number of bytes)
- The number of the bytes is converted into a four-digit ASCII code (hexadecimal) and data is sent from the upper digit ("0").
- Loopback data (user data)
- The order of character strings for up to 960 1-byte characters ("0" to "9", "A" to "F") is sent from the head.

■When communicating data in binary code

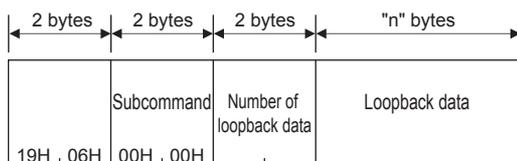

- Number of loopback data (number of bytes)
- The two-byte numerical value which indicates the number of the bytes is used and data is sent from the low byte (L: bit 0 to 7).
- Loopback data (user data)
- Data is sent for up to 960 bytes from the head by treating each character code ("0" to "9", "A" to "F") as a 1 byte value.

Response data

The same number of the loopback data and loopback data which the external equipment sent are sent back to the external equipment.

Communication example

Send request messages from the external device by using the message format in the request data. (Page 115 Request data)

Examples of test with loopback data "ABCDE" are given below.

■When executing the Self-Test by communicating in ASCII code

(Request data)

Command	Subcommand	Number of loopback data	Loopback data
0 6 1 9	0 0 0 0	0 0 0 5	A B C D E
30H,36H,31H,39H	30H,30H,30H,30H	30H,30H,30H,35H	41H,42H,43H,44H,45H

(Response data)

Number of loopback data	Loopback data
0 0 0 5	A B C D E
30H,30H,30H,35H	41H,42H,43H,44H,45H

■When executing the Self-Test by communicating in binary code

(Request data)

Command	Subcommand	Number of loopback data	Loopback data
			A B C D E
19H,06H	00H,00H	05H,00H	41H,42H,43H,44H,45H

(Response data)

Number of loopback data	Loopback data
	A B C D E
05H,00H	41H,42H,43H,44H,45H

4.6 Remote Password Unlock or Lock

This function prevents illegal access from a user who is not allowed to operate the SLMP compatible device. Only CPU modules are supported.

If a remote password is set to the SLMP compatible device, the remote password is checked when the SLMP compatible device is accessed.

The following shows how to use a command to lock or unlock the remote password by the SLMP.


Target of the remote password checking function

When a remote password is set to the SLMP compatible device, unlock the remote password using a command in this section. Then execute data communication.

Control procedure

The following shows the control procedure when a remote password is set to the SLMP compatible device.

■When accessing the FX5CPU

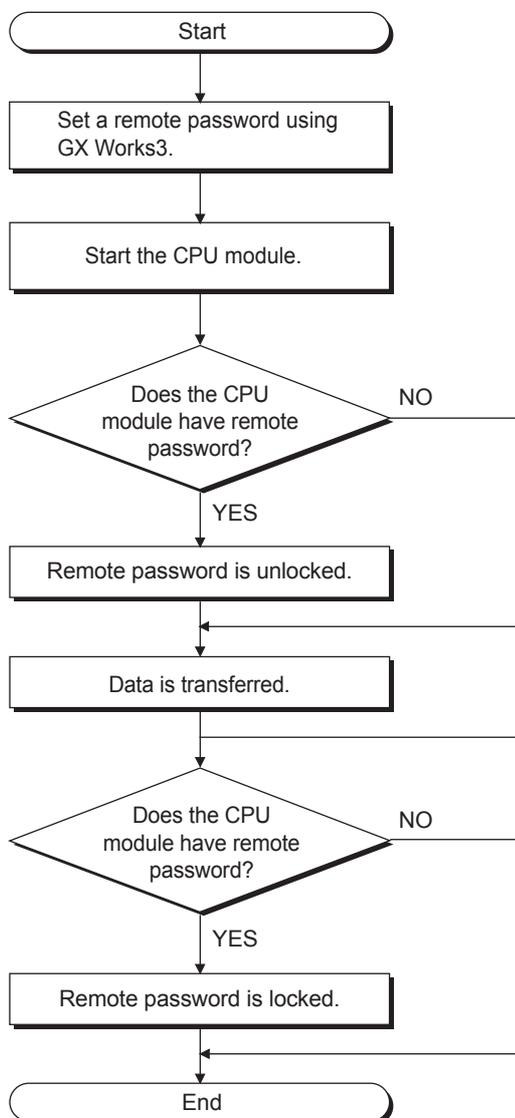

- When the FX5CPU communicating data is set with a remote password, communication is enabled after the completion of the unlock process until the lock process.
- All commands received while the remote password is in locked status will generate an error response. (Execute communication after executing the remote password unlock process.)
- The remote password lock process is automatically performed when the line is disconnected.

Lock


This command changes the remote password from unlocked status to locked status. (Communication to the device is disabled.)

Command


Function		Command (Subcommand)	Processing content
Remote password	Lock	1631(0000)	Specifies a remote password and changes the unlock status to the lock status. (Communication to the CPU module is disabled.)

Request data

■When communicating data in ASCII code

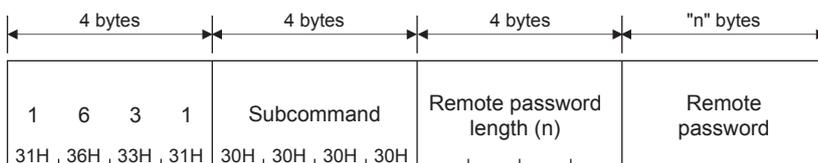

■When communicating data in binary code

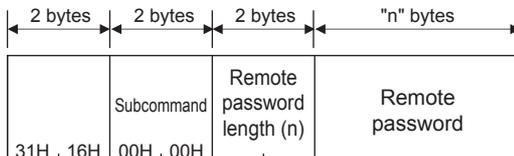

■Subcommand

Item		Subcommand					
		ASCII code				Binary code	
Default	Characters	0	0	0	0	—	—
	Character code	30H	30H	30H	30H	00H	00H

■Remote password length

Remote password length is not used.

■Remote password

Remote password is not used.

Response data

There is no response data for the lock command of the remote password.

Communication example

■When performing the lock process in communication using ASCII code

Command	Subcommand	Remote password length	Remote password
1 6 3 1 31H,36H,33H,31H	0 0 0 0 30H,30H,30H,30H	0 0 1 A 30H,30H,31H,41H	a b c d e f g h i j k l 61H,62H,63H,64H,65H,66H,67H,68H,69H,6AH,6BH,6CH
			m n o p q r s t u v w x y z 6DH,6EH,6FH,70H,71C,72H,73H,74H,75H,76H,77H,78H,79H,7AH

■When performing the lock process in communication using binary code

Subcommand	Remote password length	Remote password
00H,00H	1AH,00H	a b c d e f g h i j k l m n o p q r s t u v w x y z 61H,62H,63H,64H,65H,66H,67H,68H,69H,6AH,6BH,6CH,6DH,6EH,6FH,70H,71C,72H,73H,74H,75H,76H,77H,78H,79H,7AH

Unlock

This command changes the remote password from locked status to unlocked status. (Enables communication to the device.)

Command

Function	Command (Subcommand)	Processing content
Remote password	Unlock	1630(0000) Specifies a remote password and changes the lock status to the unlock status. (Communication to the CPU module is enabled.)

Request data

■When communicating data in ASCII code

4 bytes	4 bytes	4 bytes	"n" bytes
1 6 3 0 31H,36H,33H,30H	Subcommand 00H,00H,00H,00H	Remote password length (n)	Remote password

■When communicating data in binary code

2 bytes	2 bytes	2 bytes	"n" bytes
30H,16H	Subcommand 00H,00H	Remote password length (n)	Remote password

■Subcommand

Item		Subcommand					
		ASCII code				Binary code	
Default	Characters	0	0	0	0	—	—
	Character code	30H	30H	30H	30H	00H	00H

■Remote password length

Specify the remote password length.

The password length is the specified characters (6 to 32 characters).

Item		Remote password length (when the number of remote password characters is 32)					
		ASCII code				Binary code	
6 to 32 characters	Characters	0	0	2	0	—	—
	Character code	30H	30H	32H	30H	20H	00H

■Remote password

Specify the remote password set for the SLMP compatible device, CPU module or intelligent function module using GX Works3.


Specify the remote password using ASCII code also when communicating using binary code.

Response data


There is no response data for the unlock command of the remote password.

Communication example

■When performing the unlock process in communication using ASCII code

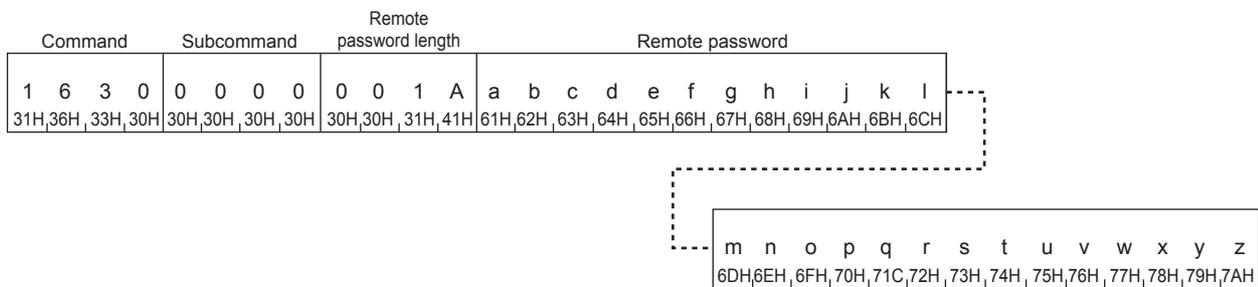

■When performing the unlock process in communication using binary code

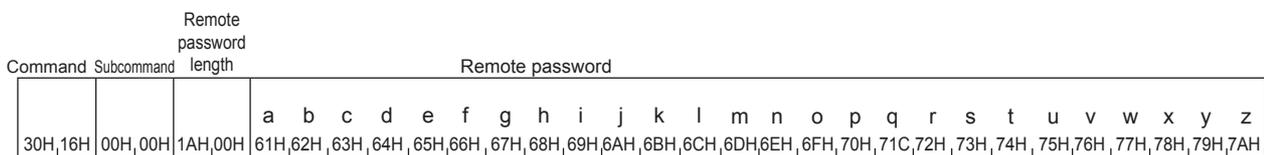

5 1E FRAME COMMANDS

This chapter explains 1E frame commands of SLMP.

For parts of the transmission message other than the command part, refer to  Page 43 1E Frame.

5.1 List of Commands and Functions

This section describes commands and functions when accessing from the external equipment to the Ethernet-equipped module.

Name	Command	Processing content	Number of points processed per communication
Batch Reading	00H	Reads in 1-bit units from bit devices.	256 points
	01H	Reads in 16-bit units from bit devices.*1	32 words (512 points)
		Reads in 1-word units from word devices.*2	64 points
Batch Writing	02H	Writes data in 1-bit units to bit devices.	160 points
	03H	Writes data in 16-bit units to bit devices.*1	10 words (160 points)
		Writes data in 1-word units to bit devices.*2*3	64 points
Test (Random Write)	04H	Writes data in 1-bit units to a bit device by randomly specifying the device number.	80 points
	05H*4	Writes data in 16-bit units to a bit device by randomly specifying the device number.	10 words (160 points)
		Writes data in 1-word units to a word device by randomly specifying the device number.	10 points
Remote RUN	13H	Requests remote RUN/STOP to a device.*5	—
Remote STOP	14H		
Read PC Type Name	15H	Reads Ethernet-equipped module model code.	—
Loopback Test	16H	Returns received characters back to the computer as they are.	254 bytes

*1 The head bit device number must be a multiple of 16.

*2 When reading double word data by user program or the like, read/write 32 bits of data at a time. Specification across C199 and C200 is not allowed.

*3 Long counters cannot be specified.

*4 TS (timer (contact)), CS (counter (contact)) and LCS (long timer (contact)) cannot be specified in the Ethernet module.

*5 When the Remote STOP operation is performed, another communication requesting station cannot perform the remote RUN/STOP operation until the communication requesting station that performed the remote STOP operation performs the remote RUN operation. When the power to the CPU module is turned on, off and on in the remote RUN/STOP state, the remote RUN/STOP state is disabled. When the remote RUN/STOP state is disabled, the RUN/STOP switch setting of the Ethernet-equipped module is enabled.

5.2 Device Access

This section explains the control procedure specification method and shows a specification example when the device memory is read and written.

Commands

This section explains commands when the device memory is read or written.

Commands			
Name		Command	Processing content
Batch Reading	Bit units	00H	Reads bit devices in 1 point units.
	Word units	01H	Reads bit devices in 16 point units.
Reads word devices in 1 point units.			
Batch Writing	Bit units	02H	Writes bit devices in 1-point units.
	Word units	03H	Writes bit devices in 16-point units.
Writes word devices in 1-point units.			
Test (Random Write)	Bit units	04H	Sets or resets device memory to bit devices specified randomly in 1-point units.
	Word units	05H	Sets or resets device memory to bit devices specified randomly in 16-point units.
Writes device memory to word devices specified randomly in 1-point units.			

Device range

This section shows accessible CPU module device.

Specify the device and device number range that exist in the module targeted for data read or write.

In the case of Ethernet-equipped module

Classification	Device	Type	Symbol	Device code ^{*1}		Device No.		Access ^{*2}	
				ASCII code	Binary code				
Internal user device	Input	Bit	X	X*	5820H	0 to 377	^{*3}	○	
	Output		Y	Y*	5920H	0 to 377	^{*3}	○	
	Internal relay		M	M*	4D20H	0 to 7679	Decimal	○	
	Latching relay		L	L*	4C20H	—	Decimal	—	
	Annunciator		F	F*	4620H	—	Decimal	—	
	Link relay		B	B*	4220H	—	Hexadecimal	—	
	Step relay		S	S*	5320H	0 to 4095	Decimal	○	
	Data register		Word	D	D*	4420H	0 to 7999	Decimal	○
	Link register	W		W*	5720H	—	Hexadecimal	—	
	Timer	Contact	Bit	TS	TS	5453H	0 to 511	Decimal	○
		Coil	Bit	TC	TC	5443H	—		—
		Current value	Word	TN	TN	544EH	0 to 511		○
	Retentive timer	Contact	Bit	STS	SS	5353H	—	Decimal	—
		Coil	Bit	STC	SC	5343H	—		—
		Current value	Word	STN	SN	534EH	—		—
	Counter	Contact	Bit	CS	CS	4353H	0 to 255	Decimal	○
		Coil	Bit	CC	CC	4343H	—		—
		Current value	Word	CN	CN	434EH	0 to 255		○
	Long counter	Contact	Bit	LCS	LS	4C53H	^{*4}	Decimal	△
Coil		Bit	LCC	LC	4C43H	—	—		
Current value		Double Word	LCN	LN	4C4EH	^{*5}	△		
Link special relay		Bit	SB	SB	5342H	—	Hexadecimal	—	
Link special register		Word	SW	SW	5357H	—	Hexadecimal	—	
System device	Special relay	Bit	SM	SM	534DH	^{*6}	Decimal	△	
	Special register	Word	SD	SD	5344H	^{*7}	Decimal	△	
Index register		Word	Z	Z*	5A20H	—	Decimal	—	
Long index register		Double Word	LZ	LZ	4C5AH	—	Decimal	—	
File register		Word	R	R*	5220H	0 to 32767	Decimal	○	
Link direct device	Link input	Bit	DX	DX	4458H	—	Hexadecimal	—	
	Link output		DY	DY	4459H	—	Hexadecimal	—	
Module access device		Word	G	—	—	—	Decimal	—	

^{*1} [ASCII code]

If the device code is less than the specified character number, add a space (ASCII code: 20H) after the device code.

[Binary code]

When "Device code" is less than the size specified add "20H" to the end of the device code.

^{*2} ○: Accessible to the FX5 CPU module devices

—: Inaccessible to the FX5 CPU module devices

△: Accessible to a specific device of FX5 CPU module (cannot be directly specified)

^{*3} Depends on the communication data code. See below.

ASCII code (X, Y OCT): octal

ASCII code (X, Y HEX), binary code: hexadecimal

^{*4} Access LCS0 to LCS55 by specifying CS200 to CS255.

^{*5} Access LCN0 to LCN55 by specifying CN200 to CN255.

^{*6} Access SM8000 to SM8511 by specifying M8000 to M8511.

^{*7} Access SD8000 to SD8511 by specifying D8000 to D8511.

Batch Reading

Data in devices are read in a batch.

Request data

■When communicating data in ASCII code

2 bytes	2 bytes	4 bytes	4 bytes	8 bytes	2 bytes	2 bytes
0 0 30H, 30H	PC No.	Monitoring timer	Device name	Head device No.	Number of devices	Fixed value

■When communicating data in binary code

1 byte	1 byte	2 bytes	4 bytes	2 bytes	1 byte	1 byte
00H	PC No.	Monitoring timer	Head device No.	Device name	Number of devices	Fixed value

■Subheader

Specify the command selected from the data size.

Data size	Command		Binary code
	ASCII code (Upper column: characters, lower column: character code)		
Bit devices in 1 point units	0	0	00H
	30H	30H	
Bit devices in 16 point units Word devices in 1 point units	0	1	01H
	30H	31H	

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

■Device name

Specify the device code that corresponds to the device type to be read. (☞ Page 123 Device range)

■Head device No.

Specify the head number of target device of reading.

■Number of devices

Specify the number of devices of reading.

Item	Number of devices
When reading data in 1-bit units	1 to 256 points
When reading data in 16-bit units	1 to 32 words (16 to 512 points)
When reading data in 1-word units	1 to 64 points



To specify 256 for the number of device points, specify "00H."

■Fixed value

Specify the "00H".

Response data

The read device value is stored in hexadecimal. The data order differs depending on the ASCII code or binary code.

Read data

Communication example

■When reading data in bit units

M100 to M111 are read.

- When communicating data in ASCII code

(Request data)

Subheader	PC No.	Monitoring timer	Device name	Head device No.	Number of devices	Fixed value
0 0	F F	0 0 0 0	4 D 2 0	0 0 0 0 0 0 6 4	0 C	0 0
30H,30H	46H,46H	30H,30H,30H,30H	34H,44H,32H,30H	30H,30H,30H,30H,30H,30H,36H,34H	30H,43H	30H,30H

(Response data)

1 0 0 0 1 0 1 1 0 0 0 0	0 = OFF 1 = ON
31H,30H,30H,30H,31H,30H,31H,31H,30H,30H,30H,30H	

M100 to M111

- When communicating data in binary code

(Request data)

Subheader	PC No.	Monitoring timer	Head device No.	Device name	Number of devices	Fixed value
00H	FFH	00H,00H	64H,00H,00H,00H	20H,4DH	0CH	00H

(Response data)

10H, 10H, 10H, 10H, 10H, 10H	0 = OFF 1 = ON
------------------------------	-------------------

M101 to M111

■When reading data in word units (bit device)

Y100 to Y137 (2-word) are read.

- When communicating data in ASCII code (X, Y HEX)

(Request data)

Subheader	PC No.	Monitoring timer	Device name	Head device No.	Number of devices	Fixed value
0 1	F F	0 0 0 0	5 9 2 0	0 0 0 0 0 0 4 0	0 2	0 0
30H,30H	46H,46H	30H,30H,30H,30H	35H,39H,32H,30H	30H,30H,30H,30H,30H,30H,34H,30H	30H,32H	30H,30H

(Response data)

8 2 9 D	5 5 3 E	0 = OFF 1 = ON
38H 32H 39H 44H	35H 35H 33H 45H	

8	2	9	D	5	5	3	E
1001000101010101	1010101010101010	1010101010101010	1010101010101010	1010101010101010	1010101010101010	1010101010101010	1010101010101010


Y117 to Y120

- When communicating data in binary code

(Request data)

Subheader	PC No.	Monitoring timer	Head device No.	Device name	Number of devices	Fixed value
01H	FFH	00H,00H	40H,00H,00H,00H	20H,59H	02H	00H

(Response data)

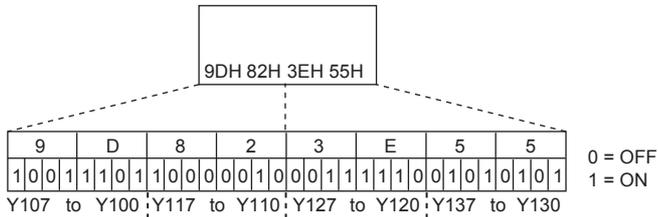

■ When reading data in word units (word device)

Values in D100 to D102 are read.


It is supposed that 4660 (1234H) is stored in D100, 5 (5H) is stored in D101, and 26505 (6789H) is stored D102.

- When communicating data in ASCII code

(Request data)

Subheader	PC No.	Monitoring timer	Device name	Head device No.	Number of devices	Fixed value
0 1	F F	0 0 0 0	4 4 2 0	0 0 0 0 0 0 6 4	0 3	0 0
30H,30H	46H,46H	30H,30H,30H,30H	34H,34H,32H,30H	30H,30H,30H,30H,30H,30H,36H,34H	30H,33H	30H,30H

(Response data)

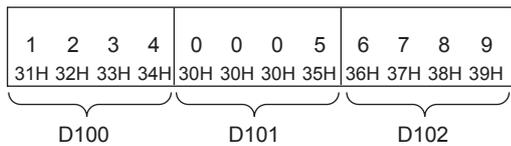


- When communicating data in binary code

(Request data)

Subheader	PC No.	Monitoring timer	Head device No.	Device name	Number of devices	Fixed value
01H	FFH	00H,00H	64H,00H,00H,00H	20H,44H	03H	00H

(Response data)

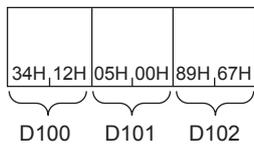

Batch Writing

Data in devices are written in a batch.

Request data

■When communicating data in ASCII code

2 bytes	2 bytes	4 bytes	4 bytes	8 bytes	2 bytes	2 bytes
0 2 30H, 32H	PC No.	Monitoring timer	Device name	Head device No.	Number of devices	Fixed value

■When communicating data in binary code

1 byte	1 byte	2 bytes	4 bytes	2 bytes	1 byte	1 byte
02H	PC No.	Monitoring timer	Head device No.	Device name	Number of devices	Fixed value

■Subheader

Specify the command selected based on the data size.

Data size	Command		
	ASCII code (Upper column: characters, lower column: character code)		Binary code
Bit devices in 1 point units	0	2	02H
	30H	32H	
Bit devices in 16 point units Word devices in 1 point units	0	3	03H
	30H	33H	

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

■Device name

Specify the device code that corresponds to the device type to be read. (☞ Page 123 Device range)

Precautions

When specifying the command 03H, observe the following instructions.

- When the CPU module uses long counters, specify the number of long counter points × 2 for the number of device points.
- The Ethernet module cannot use long counters.

■Head device No.

Specify the head number of target device of reading.

■Number of devices

Specify the number of devices of reading.

Item	Number of devices
When reading data in 1-bit units	1 to 160 points
When reading data in 16-bit units	1 to 10 words (16 to 160 points)
When reading data in 1-word units	1 to 64 points

■Fixed value

Specify the "00H".

Response data


There is no response data for the Batch Writing command.

Communication example


■When writing data in bit units

Values are written to M50 to M61.

- When communicating data in ASCII code
(Request data)

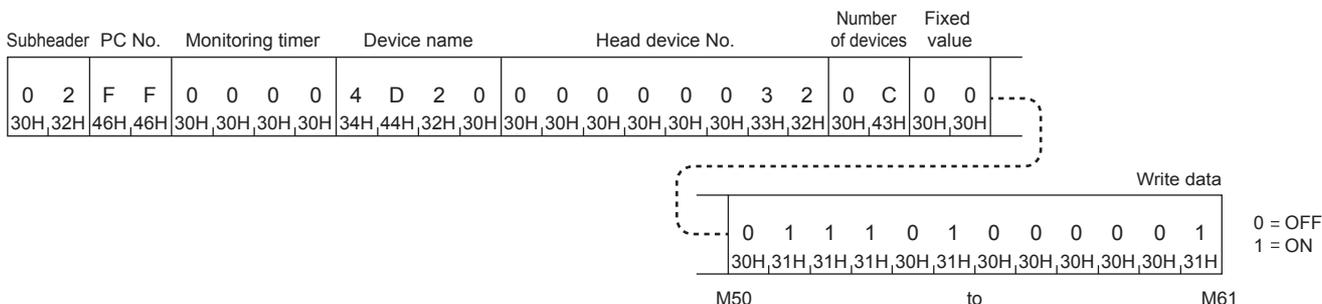


- When communicating data in binary code
(Request data)

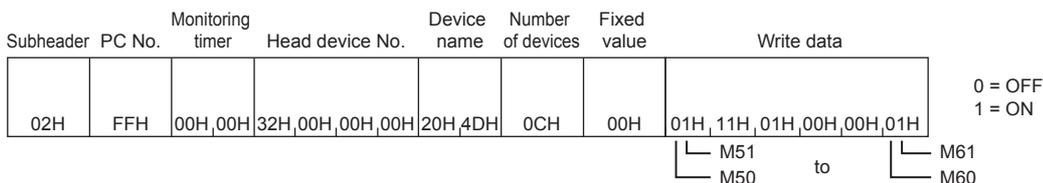


■When writing data in word units (bit device)

Values are written to M32 to M63 (2-word).

- When communicating data in ASCII code
(Request data)

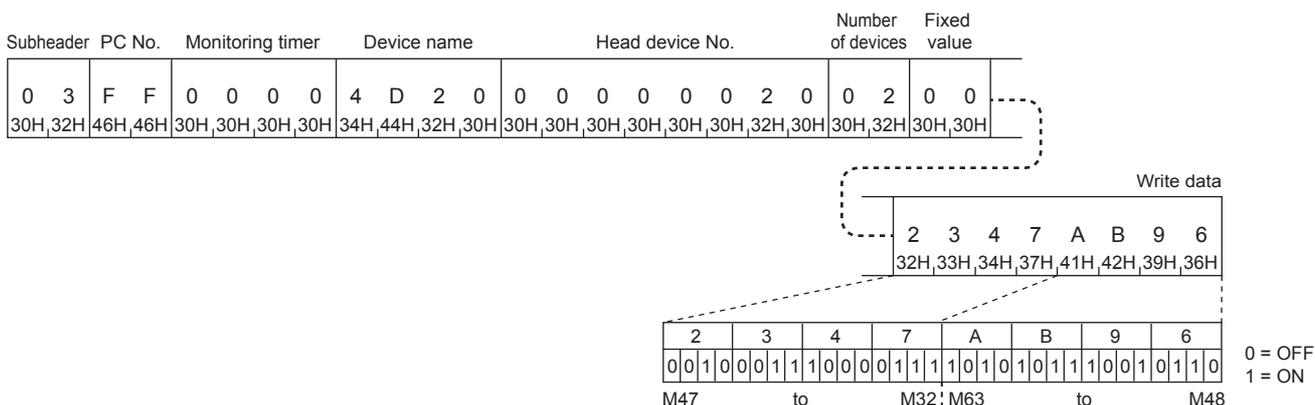


- When communicating data in binary code
(Request data)

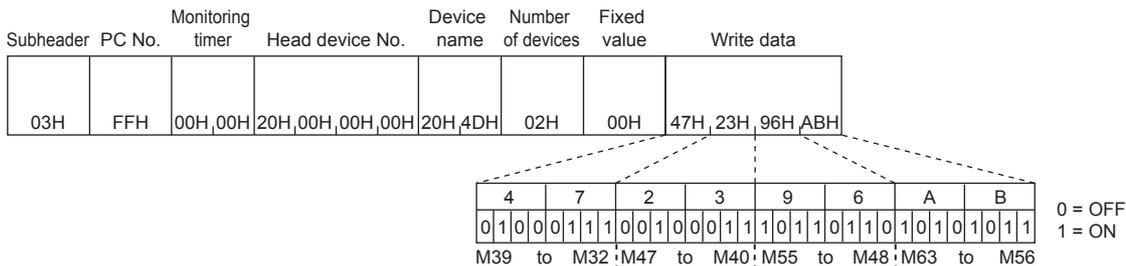


■When writing data in word units (word device)

4660 (1234H) is written in D100, 39030 (9876H) is written in D101, and 265 (109H) is written in D102.

- When communicating data in ASCII code
(Request data)

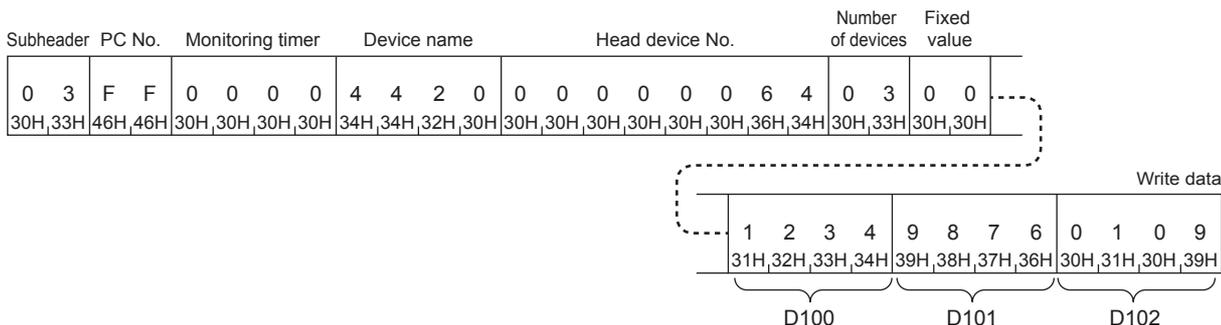

- When communicating data in binary code
(Request data)

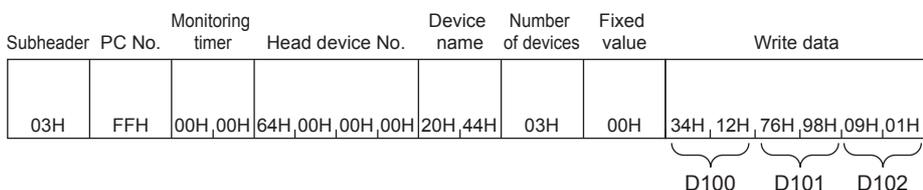


Test (Random Write)

This command specifies the device No. randomly and writes the data.


Request data

■When writing data in bit units

- When communicating data in ASCII code

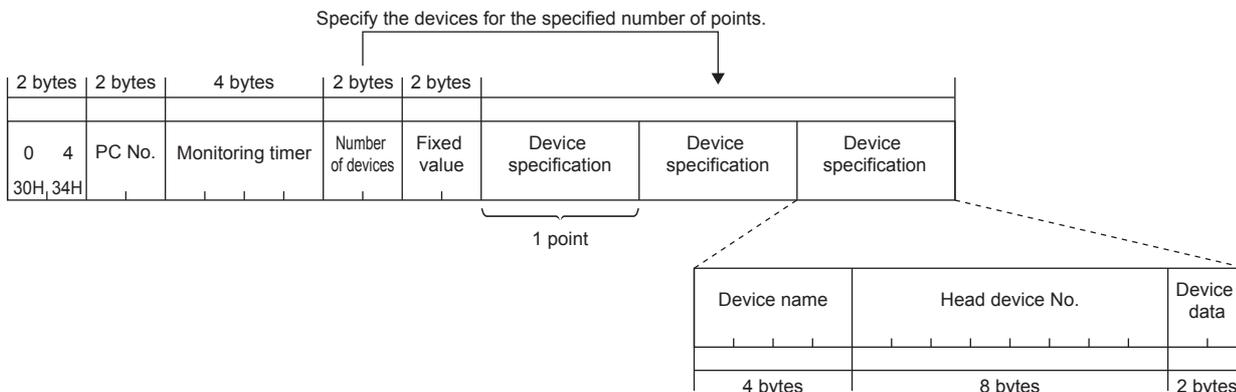


- When communicating data in binary code

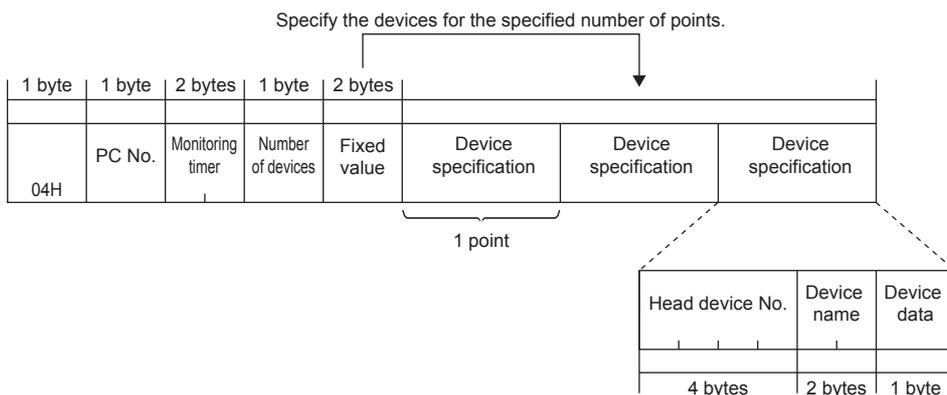


■When writing data in word units

- When communicating data in ASCII code

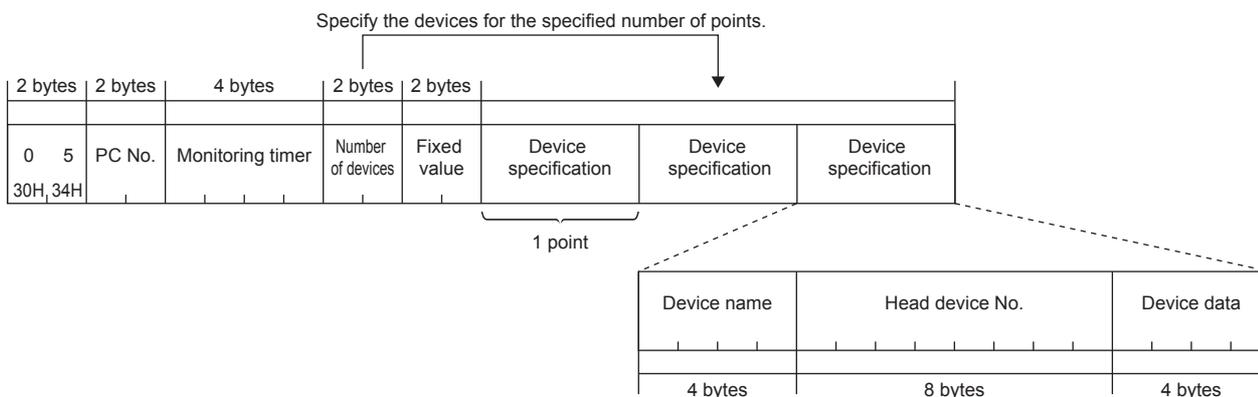

- When communicating data in binary code

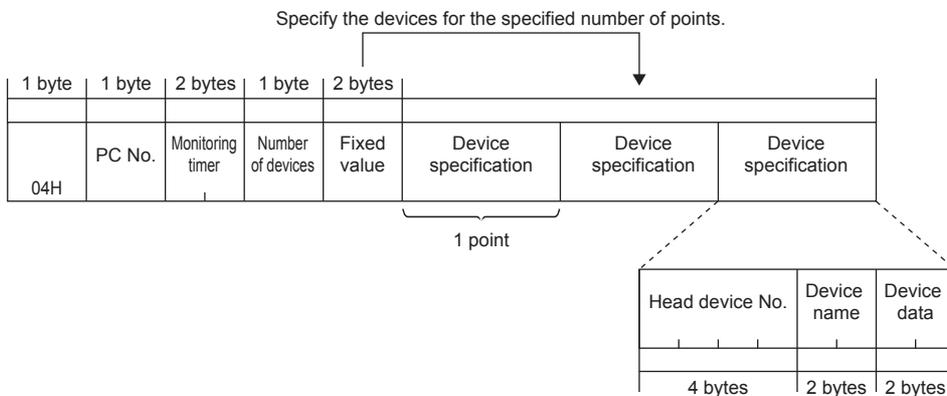

■Subheader

Specify the command selected from the data size.

Data size	Command	
	ASCII code (Upper column: characters, lower column: character code)	Binary code
Bit devices in 1 point units	0	4
	30H	34H
Bit devices in 16 point units Word devices in 1 point units	0	5
	30H	35H

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

■Device name

Specify the device code that corresponds to the device type to be read. (☞ Page 123 Device range)

Precautions

When the command 05H is specified in the Ethernet module, TS (timer (contact)), CS (counter (contact)) and LCS (long timer (contact)) cannot be used.

■Head device No.

Specify the head number of target device of reading.

■Number of devices

Specify the number of devices of reading.

Item	Number of devices
When reading data in 1-bit units	1 to 80 points
When reading data in 16-bit units	1 to 10 words (16 to 160 points)
When reading data in 1-word units	1 to 10 points

■Fixed value

Specify the "00H".

■Device data

Specify the value to be written to the device.

Device units	Communicating data	
	ASCII code	Binary code
Bit units (Bit 1-point units)	If the specified device is ON, express it as "01." If it is OFF, express it as "00." Convert the code into a 2-digit ASCII code, and specify in the order from the most significant byte to the least significant byte.	If the specified device is ON, express it as "01." If it is OFF, express it as "00." Specify with a 1-byte binary code.
Word units (Bit 16-point units)	Specify one word (16 bits) with a 4-digit ASCII code, and express 1-point with 1-bit ON/OFF. Specify in 1-word units in the order from the most significant bit to the least significant bit (b15 to b0).	Specify one word (2 bytes) with a binary code, and express 1-point with 1-bit ON/OFF. Specify in 1-word units in the order from the least significant byte (b7 to b0) to the least significant byte (b15 to b8).
Word units (Word 1-point units)	Express the value to be written with a 1-word (4-byte) 4-digit ASCII code (hexadecimal). Specify in 1-word units in the order from the most significant byte to the least significant byte.	Express the value to be written with a 1-word (2-byte) 4-digit binary code (hexadecimal). Specify in 1-word units in the order from the least significant byte to the most significant byte.

Response data

There is no response data for the Test (Random Write) command.

Communication example

■ When writing data in bit units

Turn on Y45, turn off M60 and turn on S38.

- When communicating data in ASCII code (X, Y HEX)

(Request data)

Subheader	PC No.	Monitoring timer	Number of devices	Fixed value	Device name	Head device No.	Device data	
0 4 30H,32H	F F 46H,46H	0 0 0 0 30H,30H,30H,30H	0 3 30H,33H	0 0 30H,30H	5 9 2 0 35H,39H,32H,30H	0 0 0 0 0 0 2 5 30H,30H,30H,30H,30H,30H,32H,35H	0 1 30H,31H	
Turn on Y45.								
4 D 2 0 34H,44H,32H,30H	0 0 0 0 0 0 3 C 30H,30H,30H,30H,30H,30H,33H,43H							0 0 30H,30H
Turn off M60.								
5 3 2 0 35H,33H,32H,30H	0 0 0 0 0 0 2 6 30H,30H,30H,30H,30H,30H,32H,36H							0 1 30H,30H
Turn on S38.								

- When communicating data in binary code

(Request data)


Subheader	PC No.	Monitoring timer	Number of devices	Fixed value	Head device No.	Device name	Device data	
04H	FFH	00H,00H	03H	00H	25H,00H,00H,00H	20H,59H	01H	
Turn on Y45.								
3CH,00H,00H,00H	20H,5DH							00H
Turn off M60.								
26H,00H,00H,00H	20H,53H							01H
Turn on S38.								

■When writing data in word units

Turn ON/OFF Y20 to Y37, and write 4660 (1234H) to R26 and 80 (50H) to C18.


- When communicating data in ASCII code (X, Y HEX)

(Request data)

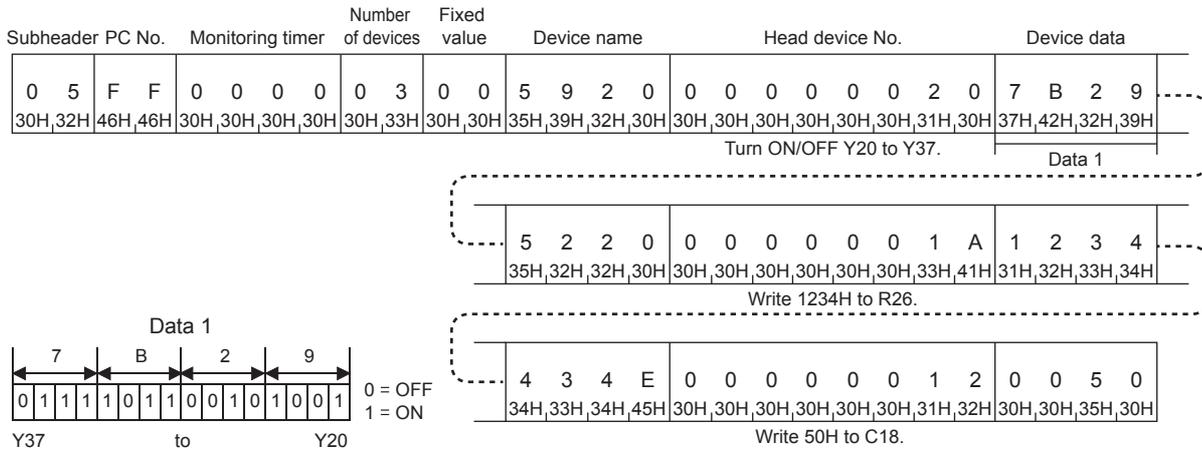

- When communicating data in binary code

(Request data)

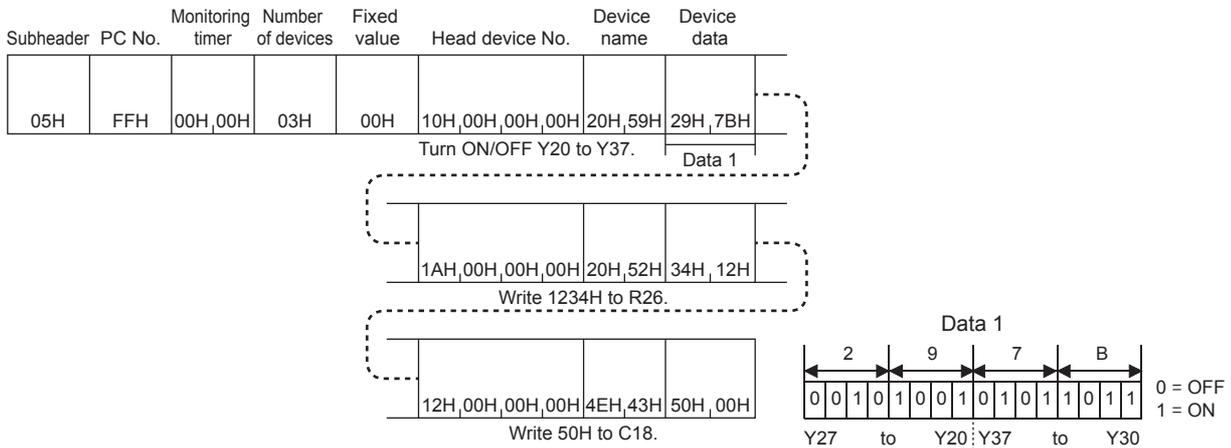

5.3 Remote Control

This section describes the command to set the SLMP compatible device or Ethernet-equipped module to the RUN status or STOP status by a message from the external device.

Before the remote operation

When the Remote STOP operation is performed

Unless the Remote RUN operation is performed by the external device that performed the Remote STOP operation, the Remote RUN/STOP operation by other external devices is invalid.

When the accessed device or module is turned from off to on or reset after the remote operation

The information about the remote operation will be deleted.

Ex.

The Remote STOP is executed when the switch of the Ethernet-equipped module is in the RUN status, and the switch will return to the RUN status when the Ethernet-equipped module power is turned from OFF to ON.

When a remote password (3E frame) of the CPU module of the access destination is enabled

Remote operation from the external device is not available. An error will occur at the access destination, and an abnormal response will be sent back to the external device. Unlock the remote password of the CPU module side, and resend the request message.

Remote RUN

External equipment executes the Remote RUN operation for the Ethernet-equipped module.

Point

The Remote RUN for the CPU module can be used when the switch of the accessed CPU module is set to RUN. Even if the switch is in the STOP status, Remote RUN (command: 13H) will be completed normally. However, the access destination does not change to the RUN status.

Request data

■When communicating data in ASCII code

2 bytes	2 bytes	4 bytes
1 3	PC No.	Monitoring timer
31H,33H		

■When communicating data in binary code

1 byte	1 byte	2 bytes
13H	PC No.	Monitoring timer

■Subheader

Specify the command.

Data size	Command		
	ASCII code (Upper column: characters, lower column: character code)		Binary code
Remote RUN	1	3	13H
	31H	33H	

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

Response data

There is no response data for the Remote RUN command.

Remote STOP

External equipment executes the Remote STOP operation for the Ethernet-equipped module.

Request data

■When communicating data in ASCII code

2 bytes	2 bytes	4 bytes
1 4 31H, 34H	PC No.	Monitoring timer

■When communicating data in binary code

1 byte	1 byte	2 bytes
14H	PC No.	Monitoring time

■Subheader

Specify the command.

Data size	Command		
	ASCII code (Upper column: characters, lower column: character code)		Binary code
Remote STOP	1	4	14H
	31H	34H	

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

Response data

There is no response data for the Remote STOP command.

5.4 Read PC Type Name

This command reads the type name code of Ethernet-equipped module.

Request data

■When communicating data in ASCII code

2 bytes		2 bytes	4 bytes	
1	5	PC No.	Monitoring timer	
31H,35H				

■When communicating data in binary code

1 byte	1 byte	2 bytes	
	PC No.	Monitoring timer	
15H			

■Subheader

Specify the command.

Data size	Command		
	ASCII code (Upper column: characters, lower column: character code)		Binary code
Read PC Type Name	1	5	15H
	31H	35H	

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

Response data

The model code "F3H" is stored.

■When communicating data in ASCII code

2 bytes	
F	3
46H	33H

■When communicating data in binary code

1 byte
F3H

5.5 Loopback Test

This function tests whether the communication function between the external equipment and Ethernet-equipped module operates normally or not. The control procedure when this function is used is described with examples.

Point

At the startup of the Ethernet-equipped module or when trouble occurs, this function can check whether the connection between the external equipment and Ethernet-equipped module is correct and/or whether the data communication function operates normally.

Request data

■When communicating data in ASCII code

(Specified byte length × 2) + 10 bytes

1	6	PC No.	Monitoring timer	Data length (1 to 254 bytes)	Head transmission data	to	End transmission data
31H	36H						

- Data length

Convert the data length to a 2-digit ASCII code (hexadecimal), and specify in the order from the most significant byte.

- Transmission data

Each character code with a sequence of 1-byte characters ("0" to "9" and "A" to "F") is set as a 2-byte value, and up to 254 characters are sent starting from the head.

■When communicating data in binary code

Specified byte length + 5 bytes

1 byte	1 byte	2 bytes				
	PC No.	Monitoring timer	Data length (1 to 254 bytes)	Head transmission data	to	End transmission data
16H						

- Data length

Specify the data length by 1-byte.

- Transmission data

Data is sent for up to 254 bytes from the head by treating each character code ("0" to "9", "A" to "F") as a 1-byte value.

■Subheader

Specify the command.

Data size	Command		
	ASCII code (Upper column: characters, lower column: character code)		Binary code
Loopback Test	1	6	16H
	31H	36H	

■PC No.

Specify the "FFH".

■Monitoring timer

Specify the "0000H".

Response data

The same data length and data as those sent by the external equipment are returned to the external equipment from the Ethernet-equipped module.

Communication example

"ABCDE" is sent.

■When communicating data in ASCII code

(Request data)

Subheader	PC No.	Monitoring timer	Data length	Transmission data					
1	6	F F	0 0 0 0	0 5	A	B	C	D	E
30H,32H	46H,46H	30H,30H,30H,30H	30H,35H	34H,31H	34H,32H	34H,33H	34H,34H	34H,35H	

(Response data)

Data length	Transmission data				
0 5	A	B	C	D	E
30H,35H	34H,31H	34H,32H	34H,33H	34H,34H	34H,35H

■When communicating data in binary code

(Request data)

Subheader	PC No.	Monitoring timer	Data length	Transmission data				
16H	FFH	00H,00H	05H	A	B	C	D	E
				41H,42H	43H,44H	45H		

(Response data)

Data length	Transmission data				
05H	A	B	C	D	E
	41H,42H	43H,44H	45H		

6 TROUBLESHOOTING

Error codes stored when communication ends in error during SLMP are as provided in the following table. For the troubleshooting on the SLMP-compatible device side, refer to the SLMP-compatible device manual.

CPU module

3E: 3E frame, 1E: 1E frame, ○: Supported, —: Not supported

Error code (Hexadecimal)	Error details and causes	Action	SLMP	
			3E	1E
C035H	The existence of the external device could not be confirmed within the response monitoring timer value.	<ul style="list-style-type: none"> Check the movement of the other party equipment. Check whether the connecting cable has come off. 	○	○
C050H	When the communication data code is set to "ASCII", ASCII code data which cannot be converted to binary is received.	<ul style="list-style-type: none"> For communication, set to "Binary" in the communication data code and restart the CPU module. Correct the send data from the target device and send it. 	○	○
C051H	Maximum number of bit devices for which data can be read/written all at once is outside the allowable range.	Correct number of bit devices that can be read or written all at once, and send to CPU module again.	○	○
C052H	Maximum number of word devices for which data can be read/written all at once is outside the allowable range.	Correct number of word devices that can read or write all at once, and send to CPU module again.	○	○
C053H	Maximum number of bit devices for which data can be random read/written all at once is outside the allowable range.	Correct number of bit devices that can be random read or written all at once, and send to CPU module again.	○	○
C054H	Maximum number of word devices for which data can be random read/written all at once is outside the allowable range.	Correct number of word devices that can be random read or written all at once, and send to CPU module again.	○	○
C056H	Read or write request exceeds maximum address.	Correct starting address or number of read and write points, and send to CPU module again. (Be careful not to exceed the maximum address.)	○	○
C058H	Request data length after ASCII-to-binary conversion does not match the number of data in the character section (part of text).	After reviewing and correcting content of text or length of request data in the header, send to CPU module again.	○	—
C059H	<ul style="list-style-type: none"> Error in command or subcommand specification. There is a command or subcommand that cannot be used by the CPU module. 	<ul style="list-style-type: none"> Reconsider request contents. Send command or subcommand that can be used by the CPU module. 	○	○
C05BH	CPU module cannot read or write from/to specified device.	Reconsider device to read or write.	○	○
C05CH	Error in request contents. (Reading or writing by bit unit for word device, etc.)	Correct request content, and send to CPU module again. (Subcommand correction, etc.)	○	○
C05FH	There is a request that cannot be executed for the target CPU module.	<ul style="list-style-type: none"> Correct network No., request station No., request destination module I/O No., or request destination module station No. Correct contents of write request and/or read request. 	○	○
C060H	Error in request contents. (Error in specification of data for bit device, etc.)	Correct request content, and send to CPU module again. (Data correction, etc.)	○	○
C061H	Request data length does not match the number of data in the character section (part of text).	After reconsidering and correcting content of text or length of request data in the header, send to CPU module again.	○	○
C06FH	When the communication data code is set to "Binary", a request message of ASCII is received. (Error history of this error code is registered but no error response is sent.)	<ul style="list-style-type: none"> Send a request message which matches the setting of the communication data code. Change the communication data code to match the request message. 	○	—
C0D8H	The number of specified blocks exceeds the range.	Correct the specified value of for the number of blocks.	○	—
C200H	Error in remote password.	Correct remote password, and re-execute remote password lock and unlock.	○	—
C201H	Locked status of the remote password of the port which is used for communication.	Unlock the remote password before data communication.	○	○
C204H	Different device requested remote password to be unlocked.	Request remote password lock from device that requested unlock of remote password.	○	—
C810H	Error in remote password. (Authentication failure count is 9 or less.)	Correct remote password, and re-execute remote password unlock.	○	—
C815H	Error in remote password. (Authentication failure count is 10.)	Re-execute remote password unlock after the specified time elapses.	○	—

Error code (Hexadecimal)	Error details and causes	Action	SLMP	
			3E	1E
C816H	Remote password authentication is locked out.	Re-execute remote password unlock after the specified time elapses.	○	—

Ethernet module

3E: 3E frame, 1E: 1E frame, ○: Supported, —: Not supported

Error code (Hexadecimal)	Error details and causes	Action	SLMP	
			3E	1E
C035H	The existence of the external device could not be confirmed within the response monitoring timer value.	<ul style="list-style-type: none"> • Check the movement of the other party equipment. • Reconsider and change the set values for confirmation of the existence. • Check whether the connecting cable has come off. 	○	○
C050H	When the communication data code is set to "ASCII", ASCII code data which cannot be converted to binary is received.	<ul style="list-style-type: none"> • For communication, set to "Binary" in the communication data code and restart the CPU module. • Correct the send data from the target device and send it. 	○	○
C051H	Maximum number of bit devices for which data can be read/written all at once is outside the allowable range.	Correct number of bit devices that can be read or written all at once, and send to Ethernet module again.	○	○
C052H	Maximum number of word devices for which data can be read/written all at once is outside the allowable range.	Correct number of word devices that can read or write all at once, and send to Ethernet module again.	○	○
C053H	Maximum number of bit devices for which data can be random read/written all at once is outside the allowable range.	Correct number of bit devices that can be random read or written all at once, and send to Ethernet module again.	○	○
C054H	Maximum number of word devices for which data can be random read/written all at once is outside the allowable range.	Correct number of word devices that can be random read or written all at once, and send to Ethernet module again.	○	○
C056H	Read or write request exceeds maximum address.	Correct starting address or number of read and write points, and send to Ethernet module again. (Be careful not to exceed the maximum address.)	○	○
C057H	The request data length in the SLMP message does not match the number of data in the character section (part of the test).	After reexamining and correcting the content of the text or the request data length in the header, resend the message to the Ethernet module.	○	○
C058H	Request data length after ASCII-to-binary conversion does not match the number of data in the character section (part of text).	After reviewing and correcting content of text or length of request data in the header, send to Ethernet module again.	○	—
C059H	<ul style="list-style-type: none"> • Error in command or subcommand specification. • There is a command or subcommand that cannot be used by the CPU module. 	<ul style="list-style-type: none"> • Reconsider request contents. • Send command or subcommand that can be used by the Ethernet module. 	○	○
C05BH	CPU module cannot read or write from/to specified device.	Reconsider device to read or write.	○	○
C05CH	Error in request contents. (Reading or writing by bit unit for word device, etc.)	Correct request content, and send to Ethernet module again. (Subcommand correction, etc.)	○	○
C05EH	The communication time between the Ethernet module and PLC CPU exceeds the Ethernet monitor timer setting.	<ul style="list-style-type: none"> • Increase the monitor timer setting. • Check the connection between the CPU and Ethernet module. 	○	○
C05FH	There is a request that cannot be executed for the target CPU module.	<ul style="list-style-type: none"> • Correct network No., request station No., request destination module I/O No., or request destination module station No. • Correct contents of write request and/or read request. 	○	○
C060H	Error in request contents. (Error in specification of data for bit device, etc.)	Correct request content, and send to Ethernet module again. (Data correction, etc.)	○	○
C061H	Request data length does not match the number of data in the character section (part of text).	After reconsidering and correcting content of text or length of request data in the header, send to Ethernet module again.	○	○
C06FH	When the communication data code is set to "Binary", a request message of ASCII is received. (Error history of this error code is registered but no error response is sent.)	<ul style="list-style-type: none"> • Sent a request message which matches the setting of the communication data code. • Change the communication data code to match the request message. 	○	○
C0D8H	The number of specified blocks exceeds the range.	Correct the specified value of for the number of blocks.	○	○

APPENDIX

Appendix 1 Device Memory Extension Specification

The following accesses are available by setting the subcommand of request data to 008□.

- Access to module access device
- Access with indirect specification of the device No. by using index register or long index register
- Access with indirect specification of the device No. by using values stored in word device




Device memory extension specification is available only for 3E frame.

Access to module access device


Access to the buffer memory of SLMP compatible devices or intelligent function modules.

Request data


ASCII

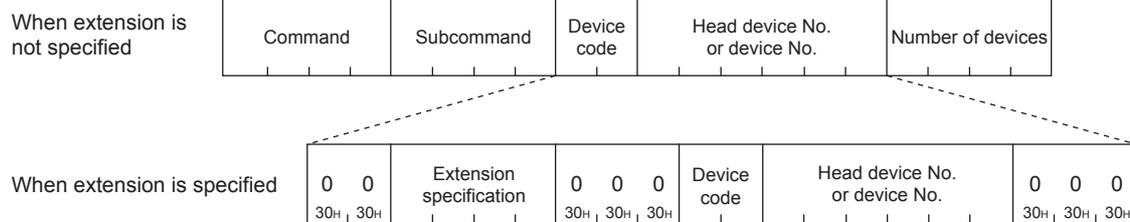

Binary

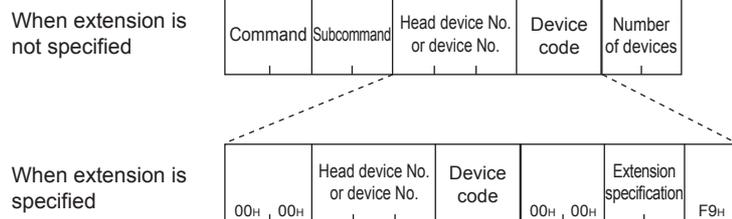

The following shows the module access device and request data.

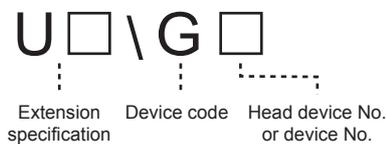

Devices of FX5 CPU module can be accessed by specifying 0 in "extension specification" of commands which can specify multiple devices. (Page 68 Device range) However, when specifying 008□ in "subcommand", specify the device in the message format shown above. Message formats when extension is not specified and message formats when extension is specified cannot coexist in the same message.

■Command

The following commands can be used for accessing.

Item	Command	
Type	Operation	
Device	Read	0401
	Write	1401
	Read Random	0403
	Write Random	1402
	Read Block	0406
	Write Block	1406

■Subcommand

Subcommand	ASCII code	Binary code										
	<table border="1"> <tr><td>0</td><td>0</td><td>8</td><td>0</td></tr> <tr><td>30H</td><td>30H</td><td>38H</td><td>30H</td></tr> </table>	0	0	8	0	30H	30H	38H	30H	<table border="1"> <tr><td>80H</td><td>00H</td></tr> </table>	80H	00H
0	0	8	0									
30H	30H	38H	30H									
80H	00H											
	<table border="1"> <tr><td>0</td><td>0</td><td>8</td><td>2</td></tr> <tr><td>30H</td><td>30H</td><td>38H</td><td>32H</td></tr> </table>	0	0	8	2	30H	30H	38H	32H	<table border="1"> <tr><td>82H</td><td>00H</td></tr> </table>	82H	00H
0	0	8	2									
30H	30H	38H	32H									
82H	00H											

■Extension specification

Specify the module number of intelligent function modules.

ASCII code	Binary code																				
<p>Specify the module number in hexadecimal (ASCII code 3-digits). When described with 4-digits, specify the module number with the upper 3-digits.</p> <p>Example 001</p> <table border="1"> <tr><td>U</td><td>□</td><td>□</td><td>□</td></tr> <tr><td>55H</td><td></td><td></td><td></td></tr> </table> <table border="1"> <tr><td>U</td><td>0</td><td>0</td><td>1</td></tr> <tr><td>55H</td><td>30H</td><td>30H</td><td>31H</td></tr> </table>	U	□	□	□	55H				U	0	0	1	55H	30H	30H	31H	<p>Specify the module number in hexadecimal (2 bytes). When described with 4-digits, specify the module number with the upper 3-digits.</p> <p>Example 001</p> <table border="1"> <tr><td>□□H</td><td>□□H</td></tr> </table> <table border="1"> <tr><td>01H</td><td>00H</td></tr> </table>	□□H	□□H	01H	00H
U	□	□	□																		
55H																					
U	0	0	1																		
55H	30H	30H	31H																		
□□H	□□H																				
01H	00H																				

Point

- Access to buffer memories of modules other than intelligent function modules
- Specify 0 when accessing buffer memory of modules other than intelligent function modules, such as CC-Link IE Field Network Ethernet adapter module.

■Device code

Specify the following device codes.

Type	Device code				Device No. range	
	ASCII code ^{*1}		Binary code			
	2 digit code/ 6 digit number specification	4 digit code/ 8 digit number specification	2 digit code/ 6 digit number specification	4 digit code/ 8 digit number specification		
Word	G*	G***	ABH	AB00H	Specify within the device No. range of the module for access destination.	Decimal

1 For ASCII codes, the device code is specified with 2 characters. If the device text is one character only, add "" (ASCII code: 2AH) or a space (ASCII code: 20H) after the device text.

■Head device or device No.

Specify the head device or device No. in decimal, with the same format as the message when extension is not specified.



Indirect specification of the access target device No. can be performed by using the CPU module index register (Z) or long index register (LZ). (Page 144 Access with indirect specification of the device No. by using index register or long index register)

Response data

The same as when extension is not specified.

Communication example

Access to the buffer memory (Address: 1) of the intelligent function module whose module number is 003H.

- When communicating data in ASCII code

(Request data)

Subcommand	Extension specification	Device code	Head device No. or device No.
0 0 8 0 30H, 30H, 38H, 30H	0 0 30H, 30H	U 0 0 3 55H, 30H, 30H, 33H	0 0 0 30H, 30H, 30H
		G * 47H, 2AH	0 0 0 0 0 1 30H, 30H, 30H, 30H, 30H, 31H
			0 0 0 30H, 30H, 30H

- When communicating data in binary code

(Request data)

Subcommand	Head device No. or device No.	Device code	Extension specification
80H, 00H	00H, 00H	01H, 00H, 00H	ABH
		00H, 00H	03H, 00H
			F8H


Access with indirect specification of the device No. by using index register or long index register

Indirect specification of the device No. can be performed by using the index register or long index register when accessing the device.

The access destination can be switched with one message, by changing the value of the index register or long index register in CPU module programs.


Ex.

When accessing D4 with D0 and Z0 specifications

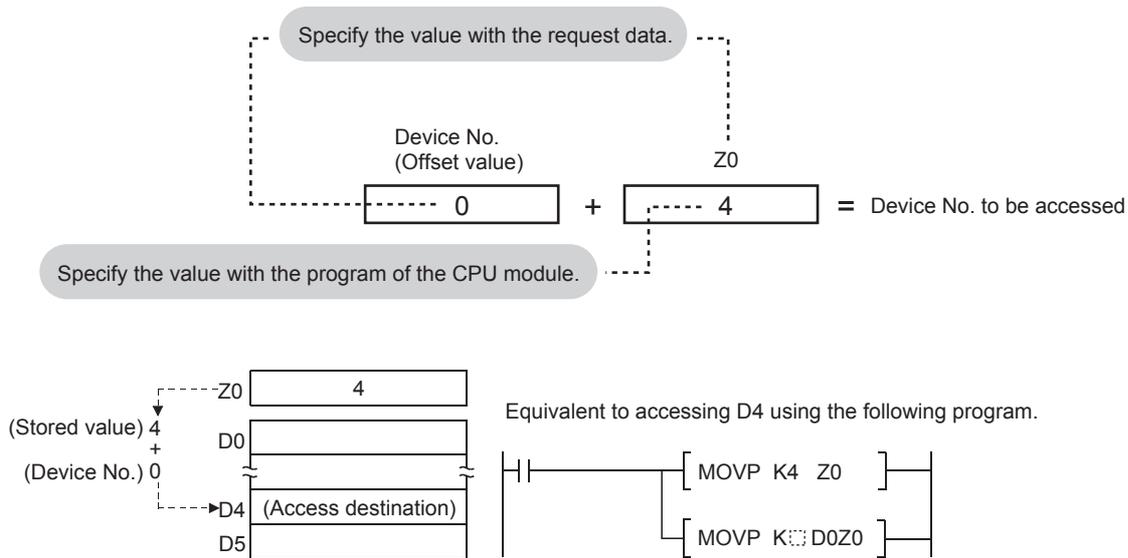

Ex.


When accessing M16 to M31 with M0 and Z0 specifications (Word units)

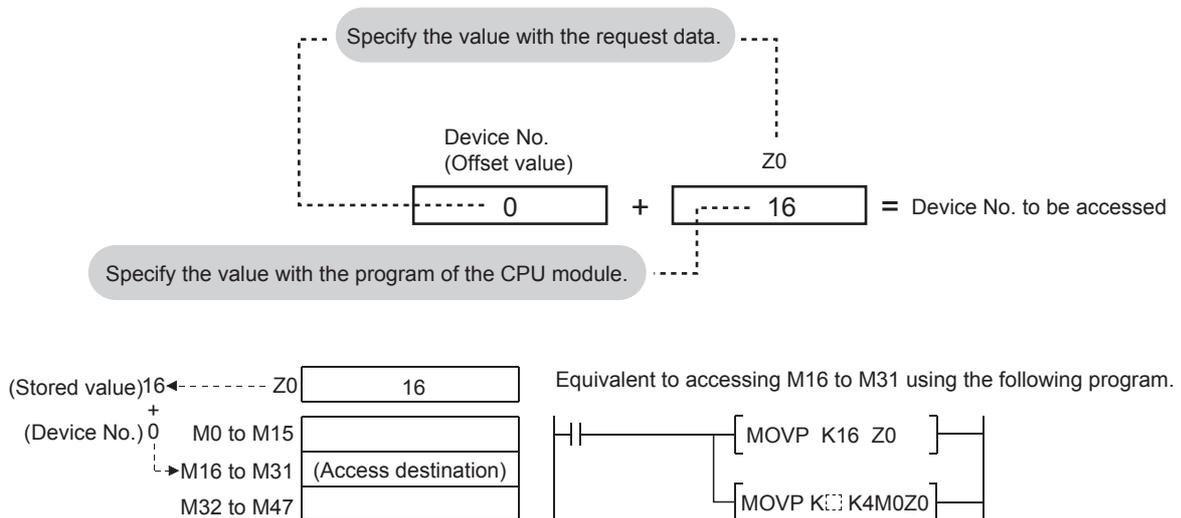


Request data

ASCII

When extension is not specified

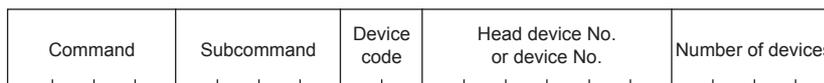


When extension is specified

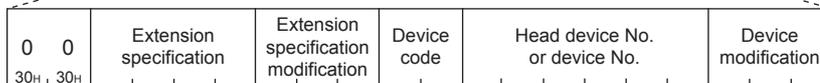


Binary

When extension is not specified

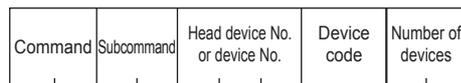


When extension is specified

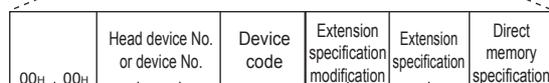


The following shows the approach for devices, index registers, long index registers and request data.

- Other than the module access device

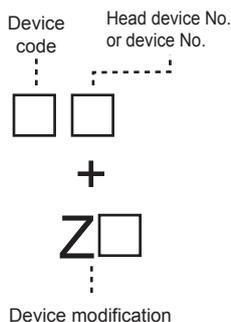

- Module access device

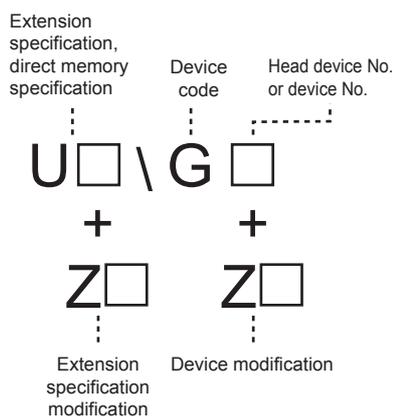

Point

When specifying 008□ in "subcommand", specify the device with the message format shown above. Message formats when extension is not specified and message formats when extension is specified cannot coexist in the same message.

A

■Command

The following commands can be used for accessing.

Item		Command
Type	Operation	
Device	Read Random	0403
	Write Random	1402

■Subcommand

Item	Subcommand	
	ASCII code	Binary code
When accessing in bit units	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 0 0 8 1 <small>30H, 30H, 38H, 31H</small> </div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 81H, 00H </div>
	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 0 0 8 3 <small>30H, 30H, 38H, 33H</small> </div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 83H, 00H </div>
When accessing in word units	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 0 0 8 0 <small>30H, 30H, 38H, 30H</small> </div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 80H, 00H </div>
	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 0 0 8 2 <small>30H, 30H, 38H, 32H</small> </div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 82H, 00H </div>

■Extension specification

Specify the module number.

The values specified in this item turn to the offset value when performing indirect specification of the module number in "extension specification modification".

Item	ASCII code	Binary code
Module access device	Specify the module number in hexadecimal (2 bytes). <div style="text-align: center;"> Example 001 </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> U <input type="text"/> <input type="text"/> <input type="text"/> <small>55H, , ,</small> </div> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> U 0 0 1 <small>55H, 30H, 30H, 31H</small> </div> </div>	Specify the module number in hexadecimal (2 bytes). <div style="text-align: center;"> Example 001 </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <input type="text"/> <input type="text"/> <input type="text"/> <small>□□H, □□H</small> </div> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> 01H, 00H </div> </div>
Devices other than the above	Specify 0. <div style="border: 1px solid black; padding: 5px; display: inline-block;"> 0 0 0 0 <small>30H, 30H, 30H, 30H</small> </div>	Specify 0. <div style="border: 1px solid black; padding: 5px; display: inline-block;"> 00H, 00H </div>

Extension specification modification

Treat the value specified in "extension specification" as the offset value. Specify the index register or long index register number when performing indirect specification of the module number with index register or long index register.

- The following value is specified when the access point is a module of the MELSEC iQ-R/iQ-F Series.

Subcommand	ASCII code	Binary code
0083 0082	Specify the number of the index register in decimal (2-digit ASCII code). <ul style="list-style-type: none"> FX5UJ CPU module: 0 to 19 FX5U/FX5UC CPU module: 0 to 23 Ethernet module: 0 to 24 <div style="border: 1px solid black; padding: 5px; width: fit-content;"> Z <input type="text"/> <input type="text"/> 5AH, 20H, , , </div>	Specify the number of the index register (Z) in hexadecimal. <ul style="list-style-type: none"> FX5UJ CPU module: 00H to 13H FX5U/FX5UC CPU module: 00H to 17H Ethernet module: 00H to 18H <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <input type="text"/> <input type="text"/>H, 40H </div>
0081 0080	Specify the number of the index register in decimal (2-digit ASCII code). <ul style="list-style-type: none"> FX5UJ CPU module: 0 to 19 FX5U/FX5UC CPU module: 0 to 23 Ethernet module: 0 to 24 <div style="border: 1px solid black; padding: 5px; width: fit-content;"> Z <input type="text"/> <input type="text"/> 5AH, , , </div>	Specify the number of the index register (Z) in hexadecimal. <ul style="list-style-type: none"> FX5UJ CPU module: 00H to 13H FX5U/FX5UC CPU module: 00H to 17H Ethernet module: 00H to 18H <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <input type="text"/> <input type="text"/>H, 40H </div>

- The following value is specified when the access point is a module of the MELSEC Q/L Series.

ASCII code	Binary code
Specify the number of the index register in decimal (2-digit ASCII code). (Specification range: 0 to 15)	Specify the number of the index register in hexadecimal. (Specification range: 0 to F)
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Z <input type="text"/> <input type="text"/> 5AH, , , </div>	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <input type="text"/> <input type="text"/>H, 40H </div>

Point

The long index register (LZ) can not be used in the extension specification modification.

A

Device code

Specify the code of the device to be accessed. (☞ Page 68 Device range)

Specify the following device code when accessing the module access device.

Type	Device code				Device No. range	
	ASCII code*1		Binary code			
	2 digit code/6 digit number specification	4 digit code/8 digit number specification	2 digit code/6 digit number specification	4 digit code/8 digit number specification		
Word	G*	G***	ABH	AB00H	Specify within the device No. range of the module for access destination.	Decimal

*1 For ASCII codes, the device code is specified with 2 characters. If the device text is one character only, add "***" (ASCII code: 2AH) or a space (ASCII code: 20H) after the device text.

Head device or device No.

Specify the head device or device No. with the same format as the message when extension is not specified.

The values specified in this item turn to the offset value when performing indirect specification of the device No. in "device modification".

■Device modification

Treat the value specified in "Head device or device No." as the offset value. Specify the index register or long index register number when performing indirect specification of the device No. with index register or long index register.

- The following value is specified when the access point is a module of the MELSEC iQ-R/iQ-F Series.

Subcommand	ASCII code	Binary code
0083 0082	<p>Specify the number of the index register in decimal (2-digit ASCII code).^{*1}</p> <ul style="list-style-type: none"> • FX5UJ CPU module: 0 to 19 • FX5U/FX5UC CPU module: 0 to 23 • Ethernet module: 0 to 24 <p>Specify the number of the long index register (LZ) in decimal (2-digit ASCII code).</p> <ul style="list-style-type: none"> • FX5UJ CPU module: 0, 1 • FX5U/FX5UC CPU module: 0 to 11 • Ethernet module: 0 to 12 <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"> Z □ □ 5AH, 20H, , </div> <div style="border: 1px solid black; padding: 5px; text-align: center;"> L Z □ □ 4CH, 5AH, , </div> </div>	<p>Specify the number of the index register (Z) in hexadecimal.^{*1}</p> <ul style="list-style-type: none"> • FX5UJ CPU module: 00H to 13H • FX5U/FX5UC CPU module: 00H to 17H • Ethernet module: 00H to 18H <p>Specify the number of the long index register (LZ) in hexadecimal.</p> <ul style="list-style-type: none"> • FX5UJ CPU module: 00H, 01H • FX5U/FX5UC CPU module: 00H to 0BH • Ethernet module: 00H to 0CH <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"> □□H, 40H </div> <div style="border: 1px solid black; padding: 5px; text-align: center;"> □□H, 80H </div> </div>
0081 0080	<p>Specify the number of the index register in decimal (2-digit ASCII code).</p> <ul style="list-style-type: none"> • FX5UJ CPU module: 0 to 19 • FX5U/FX5UC CPU module: 0 to 23 • Ethernet module: 0 to 24 <div style="border: 1px solid black; padding: 5px; text-align: center;"> Z □ □ 5AH, , </div>	<p>Specify the number of the index register (Z) in hexadecimal.</p> <ul style="list-style-type: none"> • FX5UJ CPU module: 00H to 13H • FX5U/FX5UC CPU module: 00H to 17H • Ethernet module: 00H to 18H <div style="border: 1px solid black; padding: 5px; text-align: center;"> □□H, 40H </div>

*1 The device modification range of the index register (Z) is -32768 to 32767. When the device modification range is not within -32768 to 32767, use the long index register (LZ).

- The following value is specified when the access point is a module of the MELSEC Q/L Series.

ASCII code	Binary code
<p>Specify the number of the index register in decimal (2-digit ASCII code). (Specification range: 0 to 15)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> Z □ □ 5AH, , </div>	<p>Specify the number of the index register in hexadecimal. (Specification range: 0 to F)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> □□H, 40H </div>

■Direct memory specification (only when communicating in binary code)

Specify the device type when accessing the module access device.

Item	Binary code
Module access device	Specify F8H.
Other than the above	Specify 00H.

Response data

The same as when extension is not specified.

Communication example

Accessing the device of D100 + Z4.

- When communicating data in ASCII code

(Request data)

Subcommand	Extension specification	Extension specification modification	Device code	Head device No. or device No.	Device modification
0 0 8 0 30H, 30H, 38H, 30H	0 0 30H, 30H	0 0 0 0 30H, 30H, 30H, 30H	0 0 0 30H, 30H, 30H	D * 44H, 2AH	0 0 0 1 0 0 30H, 30H, 30H, 31H, 30H, 30H
					Z 0 4 5AH, 30H, 34H

- When communicating data in binary code

(Request data)

Subcommand	Device modification	Head device No. or device No.	Device code	Extension specification modification	Extension specification	Direct memory specification
	80H, 00H	04H, 40H	64H, 00H, 00H	A8H	00H, 00H	00H, 00H
						00H

Access with indirect specification of the device No. by using the values stored in word device

Access the device corresponding to the address stored in word device (for 2 points).

Ex.

When storing the address of D100 in D0, and trying to access D100 from external devices by accessing "@D0"

The ADRSET instruction is used on the Ethernet-equipped module side and the address of D100 is stored in D0.



D100 can be indirectly accessed by specifying "@D0" with the request data.

A

■ Indirect specification, Device modification

Specify the "@" part of the indirect specification device. Indirect specification can be specified only for word devices.

When communicating data in ASCII code



When communicating data in binary code



0H: Without indirect specification
8H: With indirect specification

■ Device code (Only word device codes can be specified at indirect specification)

Specify the code of the device to be accessed. (☞ Page 68 Device range)

■ Head device or device No.

Specify the head device or device No. with the same format as the message when extension is not specified.

Response data

The same as when extension is not specified.

Communication example

Access to @D0. (Consider @D0 indirect specification of D100.)

At command execution, store the D100 address in D0 with the following programs.



- When communicating data in ASCII code
(Request data)

Subcommand	Indirect specification	Device code	Head device No. or device No.	Device modification	
0 0 8 0 30H, 30H, 38H, 30H	0 @ 30H, 40H	0 0 0 0 30H, 30H, 30H, 30H	0 0 0 30H, 30H, 30H	D * 44H, 2AH	0 0 0 0 0 0 30H, 30H, 30H, 30H, 30H, 30H

- When communicating data in binary code
(Request data)

Subcommand	indirect specification	Head device No. or device No.	Device code
80H, 00H	00H, 08H	00H, 00H, 00H	A8H



Appendix 2 Command Comparison between MC Protocol and SLMP

The correspondence table of MC protocol and SLMP is shown below. When connecting an external device which uses MC protocol to a SLMP compatible device, check if replacement of command is required.

Applicable 3E frame command list

The message format of 3E frame of the SLMP is the same as that of the QnA compatible 3E frame of MC protocol.

The commands shown in the following table need not be replaced with SLMP commands.

MC protocol			SLMP	
Item	Command	Subcommand	Type	Operation
Batch read in bit units	0401	00□1	Device	Read
Batch read in word units		00□0		
Batch write in bit units	1401	00□1		Write
Batch write in word units		00□0		
Random read in word units	0403	00□0		Read Random
Random write in bit units (Test)	1402	00□1		Write Random
Random write in word units (Test)		00□0		
Multiple block batch read	0406	00□0		Read Block
Multiple block batch write	1406	00□0		Write Block
Remote RUN	1001	0000		Remote Control
Remote STOP	1002	0000	Remote Stop	
Remote PAUSE	1003	0000	Remote Pause	
Remote latch clear	1005	0000	Remote Latch Clear	
Remote RESET	1006	0000	Remote Reset	
CPU model name read	0101	0000	Read Type Name	
Loopback test	0619	0000	Self-Test	
COM.ERR.LED off	1617	0000	Clear Error	
Remote password unlock	1630	0000	Password Unlock	
Remote password lock	1631	0000	Password Lock	

Applicable 1E frame command list

The message format of 1E frame of the SLMP is the same as that of the A compatible 1E frame of MC protocol.

The commands shown in the following table need not be replaced with SLMP commands.

MC protocol			SLMP	
Item	Command		Type	Operation
Batch Reading	BR	4252H	Batch Reading	00H
	WR	5752H		01H
	QR	5152H		
Batch Writing	BW	4257H	Batch Writing	02H
	WW	5757H		03H
	QW	5157H		
Test (Random Write)	BT	4254H	Test (Random Write)	04H
	WT	5754H		05H
	QT	5154H		
Remote RUN	RR	5252H	Remote RUN	13H
Remote STOP	RS	5253H	Remote STOP	14H
Read CPU Model Name	PC	5043H	Read PC Type Name	15H
Global	GW	4757H	—	—
Loopback Test	TT	5454H	Loopback Test	16H

Appendix 3 CPU Module Processing Time of SLMP

When accessing the CPU module from an external device using SLMP communication, the following "intervention time to the scan time" and "number of scans for processing" of the CPU module side are required. On the request from the external device using SLMP communication, the CPU module processes a specified number of points during each END processing in case the CPU module is running.



The processing time of the Ethernet module depends on the usage of other intelligent function modules.

3E frame

Item		Command	Subcommand	Access points 1) / 2)	Intervention time [ms] ^{*2} (extension of scan time)				Number of scans required for processing
Type	Operation				Access point 1)		Access point 2)		
					FX5UJ	FX5U/ FX5UC	FX5UJ	FX5U/ FX5UC	
Device	Read	0401	0001	1/3584	0.04	0.03	2.23	1.33	1
			0000	1/960	0.04	0.03	0.24	0.14	1
	Write	1401	0001	1/3584	0.04	0.04	1.42	1.06	1
			0000	1/960	0.04	0.03	0.26	0.20	1
	Read Random	0403	0000	1/192	0.04	0.03	1.55	1.48	1
	Write Random	1402	0001	1/188	0.04	0.03	1.49	1.41	1
			0000	1/160 ^{*1}	0.04	0.04	1.33	1.26	1
	Read Block	0406	0000	1/960	0.04	0.03	0.24	0.14	1
Write Block	1406	0000	1/960	0.04	0.03	0.22	0.17	1	
Remote Control	Read Type Name	0101	0000	(one station)	0.04	0.02	—	—	1

*1 This is the processing time when accessing with only word access points specified.

*2 This is the processing time (an average of actual measurements) when 1 is set to "CPU Parameter" - "Service Processing Setting" - "Device/Label Access Service Processing Setting" - "Set Processing Counts" of GX Works3.

1E frame

■When communicating data in ASCII code

Operation	Command	Access points 1) / 2)	Intervention time [ms] ^{*2} (extension of scan time)		Number of scans required for processing
			Access point 1)	Access point 2)	
Batch Reading	00H	1/256	0.0187	0.0646	1
	01H	1/64	0.0196	0.0232	1
Batch Writing	02H	1/160	0.0206	0.0524	1
	03H	1/64	0.0212	0.0268	1
Test (Random Write)	04H	1/80	0.0221	0.5200	1
	05H	1/10 ^{*1}	0.0230	0.0788	1
Remote RUN	13H	—	0.0184	—	1
Remote STOP	14H	—	0.0187	—	1
Read PC Type Name	15H	—	0.0129	—	1
Loopback Test	16H	1/254	0.0201	0.0480	1

*1 This is the processing time when accessing with only word access points specified.

*2 This is the processing time (an average of actual measurements) when 1 is set to "CPU Parameter" - "Service Processing Setting" - "Device/Label Access Service Processing Setting" - "Set Processing Counts" of GX Works3.

■When communicating data in binary code

Operation	Command	Access points 1) / 2)	Intervention time [ms] ^{*2} (extension of scan time)		Number of scans required for processing
			Access point 1)	Access point 2)	
Batch Reading	00H	1/256	0.0267	0.1250	1
	01H	1/64	0.0287	0.1050	1
Batch Writing	02H	1/160	0.0290	0.0950	1
	03H	1/64	0.0304	0.0895	1
Test (Random Write)	04H	1/80	0.0308	0.8010	1
	05H	1/10 ^{*1}	0.0323	0.1210	1
Remote RUN	13H	—	0.0210	—	1
Remote STOP	14H	—	0.0222	—	1
Read PC Type Name	15H	—	0.0240	—	1
Loopback Test	16H	1/254	0.0265	0.2620	1

*1 This is the processing time when accessing with only word access points specified.

*2 This is the processing time (an average of actual measurements) when 1 is set to "CPU Parameter" - "Service Processing Setting" - "Device/Label Access Service Processing Setting" - "Set Processing Counts" of GX Works3.

Point

- Number of scans required for processing

The CPU module processes only one command during an END processing. If GX Works3 or other modules are also accessing the CPU module simultaneously, the number of scans required for processing may increase due to the waiting time.

- Method of reducing the intervention time to the scan time

Adjust the service process execution count of the CPU module in "CPU Parameter" - "Service Processing Setting" - "Device/Label Access Service Processing Setting" to reduce the intervention time to the scan time. (MELSEC iQ-F FX5 User's Manual (Application))

- When extension of scan time affects the control

Access multiple times with less points.

Appendix 4 Added and Enhanced Functions

The functions added or changed with the Ethernet-equipped module and engineering tool, and the supported Ethernet-equipped modules' firmware version and engineering tool software version are given below.

The CPU module firmware version can be confirmed with module diagnosis (CPU diagnosis). Refer to the following manuals for details on diagnosing the module (CPU diagnosis).

📖 MELSEC iQ-F FX5UJ User's Manual (Hardware)

📖 MELSEC iQ-F FX5U User's Manual (Hardware)

📖 MELSEC iQ-F FX5UC User's Manual (Hardware)

The firmware version of the Ethernet module can be found in the buffer memory (Un\G30).

Refer to the 📖 GX Works3 Operating Manual for details on the software version.

FX5UJ CPU module

Add/Change Function	Supported CPU module firmware version	Supported engineering tool software version	Reference
FX5UJ CPU module is supported.	From the first	"1.060N" and above	—

FX5U/FX5UC CPU module

Add/Change Function	Supported CPU module firmware version	Supported engineering tool software version	Reference
Support communication data code: ASCII code (X, Y HEX)	"1.040" and above	"1.030G" and above	Page 14
Support MC protocol 1E frame	"1.210" and above	—	—

Ethernet module

■When FX5UJ CPU module is used

Add/Change Function	Applicable versions			Reference
	CPU module firmware version	Ethernet module firmware version	Engineering tool software version	
SLMP communication types	"1.010" and above	"1.100" and above	"1.075D" and above	—

■When FX5U/ FX5UC CPU module is used

Add/Change Function	Applicable versions			Reference
	CPU module firmware version	Ethernet module firmware version	Engineering tool software version	
SLMP communication types	"1.240" and above	"1.100" and above	"1.075D" and above	—

A

INDEX

0 to 9

1E frame	14
3E frame	14

A

Application data	19,44
----------------------------	-------

B

Buffer memory	9
-------------------------	---

D

Data format	18,43
-----------------------	-------

E

End code	29,49
Error information	30
External device	9

H

Header	18,43
------------------	-------

M

MC protocol	9
Module access device	9
Monitoring timer	29,48

O

Other station	9
Own station	9

P

PC No.	48
----------------	----

R

Relay station	9
Request data	30,49
Request data length	28
Request destination module I/O number	26
Request destination network number and request destination station number	25
Requested multi-drop station number	27
Response data	30,50
Response data length	28

S

SLMP	9
SLMP-compatible device	9

MEMO

REVISIONS

Revision date	Revision	Description
November 2014	A	First Edition
January 2015	B	<ul style="list-style-type: none"> ■ Added function Data code of ASCII
April 2015	C	A part of the cover design is changed.
May 2016	D	<ul style="list-style-type: none"> ■ Added models FX5U-32MR/DS, FX5U-32MT/DS, FX5U-32MT/DSS, FX5UC-64MT/D, FX5UC-64MT/DSS, FX5UC-96MT/D, FX5UC-96MT/DSS, FX5-CCLIEF ■ Added or modified parts SAFETY PRECAUTIONS, RELEVANT MANUALS, TERMS, Section 1.2, 3.1, 4.1, 4.2, 4.3, 4.4, 4.5, 4.6, Appendix 1, WARRANTY
October 2016	E	<ul style="list-style-type: none"> ■ Added models FX5U-64MR/DS, FX5U-64MT/DS, FX5U-64MT/DSS, FX5U-80MR/DS, FX5U-80MT/DS, FX5U-80MT/DSS ■ Added function Communication data code: ASCII code (X, Y HEX) ■ Added or modified parts TERMS, Section 2.1, 2.3, 3.1, 4.2, 4.3, 4.6, Appendix 1, 4
October 2019	F	<ul style="list-style-type: none"> ■ Added models FX5UJ-24MR/ES, FX5UJ-24MT/ES, FX5UJ-24MT/ESS, FX5UJ-40MR/ES, FX5UJ-40MT/ES, FX5UJ-40MT/ESS, FX5UJ-60MR/ES, FX5UJ-60MT/ES, FX5UJ-60MT/ESS, FX5UC-32MT/DS-TS, FX5UC-32MT/DSS-TS, FX5UC-32MR/DS-TS ■ Added or modified parts RELEVANT MANUALS, TERMS, Chapter 1, Section 3.1, 4.2, 4.3, Chapter 5, Appendix 1, 3, 4, TRADEMARKS
May 2020	G	<ul style="list-style-type: none"> ■ Added function 1E frame ■ Added or modified parts RELEVANT MANUALS, TERMS, Chapter 1, Section 2.1, 2.2, Chapter 3, 4, 5, 6, Appendix 1, 2, 3, 4, TRADEMARKS
August 2020	H	<ul style="list-style-type: none"> ■ Added or modified parts SAFETY PRECAUTIONS, WARRANTY
April 2021	J	<ul style="list-style-type: none"> ■ Added models FX5-ENET and FX5-ENET/IP ■ Added or modified parts RELEVANT MANUALS, TERMS, Chapter 1, 2, 3, 4, 5, 6, Appendix 1, 3, 4

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2014 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Relay failure or output contact failure caused by usage beyond the specified life of contact (cycles).
 6. Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 7. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 8. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.
Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi MELSEC programmable controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi programmable controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for railway companies or public service purposes shall be excluded from the programmable controller applications.
In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable controller range of applications. However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the user's discretion.
- (3) Mitsubishi shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

TRADEMARKS

Anywire and AnyWireASLINK are either registered trademarks or trademarks of Anywire Corporation.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as [™] or [®] are not specified in this manual.

Manual number: JY997D56001J

Model: FX5-U-SL-E

Model code: 09R541

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

Specifications are subject to change without notice.