

GT1155HS-QSBD, GT1150HS-QLBD

GT11 Handy GOT General Description



This manual describes the part names, dimensions, mounting, and specifications of the product. Before use read this manual and manuals of relevant products fully to acquire proficiency in bandling and operating the product. Make sure to learn all the product information safety information and precautions

And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user. Registration

The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective Oct 2016

Specifications are subject to change without notice © 2008 MITSUBISHI ELECTRIC CORPORATION

Safety Precaution (Read these precautions before using.)

Before using this product please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly

The precautions given in this manual are concerned with this product. In this manual, the safety precautions are ranked as "WARNING" and "CALITION"

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on circumstances, procedures indicated by "CAUTION" may also be linked to serious results

In any case, it is important to follow the directions for usage

DESIGN PRECAUTIONS

- Some failures of the GOT or cable may keep the outputs on or off. An external monitoring circuit should be provided to check for output signals which may lead to a serious accident
- Not doing so can cause an accident due to false output or malfunction. If a communication fault (including cable disconnection) occurs during
- monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative. A system where the GOT is used should be configured to perform any

significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur. Not doing so can cause an accident due to false output or malfunction.

- Do not use the GOT as the warning device that may cause a serious accident An independent and redundant hardware or mechanical interlock is required
- to configure the device that displays and outputs serious warning. Failure to observe this instruction may result in an accident due to incorrect output or malfunction.
- Incorrect operation of the touch switch(s) may lead to a serious accident if th GOT backlight is gone out.

When the GOT backlight goes out, the POWER LED flickers (green/orange and the display section turns black and causes the monitor screen to appeal blank, while the input of the touch switch(s) remains active. This may confuse an operator in thinking that the GOT is in "screensaver mode, who then tries to release the GOT from this mode by touching the

- display section, which may cause a touch switch to operate. Note that the following occurs on the GOT when the backlight goes out. The POWER LED flickers (green/orange) and the monitor screen appears
- blank

DESIGN PRECAUTIONS **ACAUTION**

- Do not bundle the control and communication cables with main-circuit power or other wiring. Run the above cables separately from such wiring and keep them minimum of 100mm (3.94in.) apart.Not doing so noise can cause a malfunction.
- Do not press the GOT display section with a pointed material as a pen or driver Doing so can result in a damage or failure of the display section. Before connecting to GOT, turn ON the controller to enable the communication

When the communication of controller is not available a communication erro may occur in GOT

MOUNTING PRECAUTIONS

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel Not doing so can cause the unit to fail or malfunction.
- Always turn off the power ON/OFE switch on the connector conversion box before connecting or disconnecting the GOT to it.
- Connecting or disconnecting the GOT with the power being turned on may result in damage to the unit or malfunctions. Be sure to shut off all phases of the external power supply used by the system
- before mounting or removing the relay cable onto/from the GOT
- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the option function board on to/from the GOT. Not doing so can cause the unit to fail or malfunction.
- When installing the option function board or battery, or operating the reset switch wear an earth hand etc. to avoid the static electricity The static electricity can cause the unit to fail or malfunction

MOUNTING PRECAUTIONS **A**CAUTION

- Use the GOT in the environment that satisfies the general specifications described in this manual. Not doing so can cause an electric shock, fire malfunction or product damage or deterioration
- Never drop cutting chips and electric wire chips into the ventilation window of th Handy GOT when you drill screw holes or perform wiring.
- Otherwise fire failure or malfunction may be caused Connect connection cables securely to the specified connectors while the powe
- is turned OFF Imperfect connection may cause malfunction or failure.
- When connecting cables, pay attention to the contents described in this section.
- Especially, attach the rear cover so that PCBs inside the Handy GOT are not interfered with connection cables.
- Securely connect the option function board to the connector provided for the board
- When inserting/removing a CF card into/from the GOT, turn the CF card access switch off in advance. Failure to do so may corrupt data within the CF card
- When inserting a CE card into the GOT push it into the insertion slot until the CE card eject button will non out. Failure to do so may cause a malfunction due to poor contact
- . When removing a CF card from the GOT, make sure to support the CF card by hand, as it may pop out. Failure to do so may cause the CF card to drop from th GOT and break

WIRING PRECAUTIONS

- Make sure to attach the back cover to the Handy GOT before turning on the power and starting operation after the installation or wiring work
- Otherwise, electrical shock may be caused.
- Be sure to shut off all phases of the external power supply used by the system before wiring. Failure to do so may result in an electric shock, product damage or malfunctions
- Please make sure to ground FG terminal of the GOT power supply section by applying 100 or less which is used exclusively for the GOT. Not doing so may cause an electric shock or malfunction.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product. Not doing so can cause a fire or failure
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.

Not doing so can cause the unit or cable to be damaged due to the dangling motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault When unplugging the cable connected to the unit, do not hold and pull the cable nortion Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.

The cables connected to the unit must be run in ducts or clamped

ACAUTION

Plug the communication cable into the connector of the connected unit an tighten the mounting and terminal screws in the specified torque range. Undertightening can cause a short circuit or malfunction. Overtightening ca cause a short circuit or malfunction due to the damage of the screws or unit.

TEST OPERATION **WARNING** DECAUTIONS

- Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value. changing the settings or current values of the timer or counter, and changing the buffer memory current value), read through the manual carefully and make vourself familiar with the operation method.
- During test operation, never change the data of the devices which are used to perform significant operation for the system. False output or malfunction car cause an accident

WIRING PRECAUTIONS

STARTUP/MAINTENANCE **WARNING** RECAUTIONS

- When nower is on, do not touch the terminals Doing so can cause an electric shock or malfunction
- Connect the battery correctly. Do not discharge, disassemble, heat, short solder or throw the battery into the fire. Incorrect handling may cause the battery
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases. Not switching the power off in all phases car cause a unit failure or malfunction. Undertightening can cause a short circuit or malfunction. Overlightening can cause a short circuit or malfunction due to the

STARTUP/MAINTENANCE **∧**CAUTION RECAUTIONS

- Do not disassemble or modify the unit.
- Doing so can cause a failure, malfunction, injury or fire
- Do not touch the conductive and electronic parts of the unit directly.
- Doing so can cause a unit malfunction or failure The cables connected to the unit must be run in ducts or clamped
- Not doing so can cause the unit or cable to be damaged due to the dangling motion or accidental pulling of the cables or can cause a malfunction due to cable connection fault
- When unplugging the cable connected to the unit, do not hold and pull the cable portion. Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault
- Replace battery with GT11-50BAT by Mitsubishi electric Co. only. Use of another battery may present a risk of fire or explosion Dispose of used battery promptly.
- Keep away from children. Do not disassemble and do not dispose of in fire.
- When disposing of the product, handle it as industrial waste When disposing of batteries, separate them from other wastes according to the
- (For details of the battery directive in EU member states, refer GOT User's
- When transporting lithium batteries, make sure to treat them based on the transport regulations. (Refer to User's Manual for details of the regurate modele)
- Before transporting the GOT, turn the GOT power on and check that the batter voltage status is normal on the Time setting & display screen (utilities screen). addition. confirm that the adequate battery life remains on the rating plate. Transporting the GOT with the low battery voltage or the battery the reacher battery life may unstabilize the backup data unstable during transportation.
- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of this manual, as they are precision devices. Failure to do so may cause the unit to fail. Check if the unit operates correctly after transportation.

Associated Manuals

The following manuals are relevant to this product. When these loose manuals are required, please consult with our local distributor.

Manual name	Contents	Manual Number (Model Code)
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) (sold separately) *1	Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series	SH-080529ENG (1D7M24)
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3, 2/3, 3/3 (sold separately) ^{*1}	Describes specifications and settings of the object functions used in GT Designer2	SH-080530ENG (1D7M25)
GT Designer3 Version1 Screen Design Manual (For GOT1000 Series) (Fundamentals) 1/2, 2/2 (sold separately) *1	Describes methods of the GT Designer3 installation operation, basic operation for drawing and transmitting data to GOT1000 series	SH-080866ENG (1D7MB9)
GT Designer3 Version1 Screen Design Manual (For GOT1000 Series) (Functions) 1/2, 2/2 (sold separately) *1	Describes specifications and settings of the object functions used in GT Designer3	SH-080867ENG (1D7MC1)
GT11 Handy GOT User's Manual (Hardware/Utility, Connection) 1/2, 2/2 (sold separately)	Describes the Handy GOT hardware-relevant content such as part names, external dimensions, mounting, power supply wiring, specifications, and introduction to option devices	JY997D20101 JY997D20102 (09R817)

*1 The manual in PDF-format is included in the GT Works2/GT Designer2/GT Works3/GT Designer3 products.

For details of a PLC to be connected, refer to the PLC user's manual respectively.

Bundled Items

Product	duct Model Specifications		Bundled item	Quantity
Name	Name	· · · · · · · ·	Operation switch name character sheets	
	GT1155HS	[320 × 240 dots], STN color LCD (256 colors), built-in	1) OHP sheet	1) One sheet
COT	-QSBD	battery and backlight	2) Reference dimension sheet (switch name change sheet	2) One sheet
GUI	GT1150HS	[320 × 240 dots], STN monochrome LCD (black/white, 16	mount)	
	-QLBD	scales), built-in battery and backlight	Selector switch keys	2
			GT11 Handy GOT General Description (This manual)	1

to generate heat, burst or take fire, resulting in injuries or fires.

- damage of the screws or unit
- DISPOSAL PRECAUTIONS **ACAUTION** local regulations Manual)
- TRANSPORTATION **ACAUTION** PRECAUTIONS

1. Features

1) Improved monitoring performance and connectivity to FA devices

- Two types of display modes are provided: 256-color display and monochrome display. In the monochrome display, 16 scales are used to improve the display.
- High speed monitoring through high speed communication at maximum of 115 2kbps
- Multiple languages are displayed using the Unicode2.1-compatible fonts and beautiful characters are drawn using the TrueType and high quality fonts. High speed display and high speed touch switch response.
- 2) More efficient GOT operations including screen design, startup, adjustment, management and maintenance works
- The display screen of the display unit is created using a drawing software for PC (GT Designer2 Ver2 18U or later/GT Designer3 Ver1 01B or later).
- The 3MB user memory is included as standard.
- CF card interface is included as standard.
- The USB connector interface is included as standard
- 3) Enhanced support of FA device setup tools

- Transferring or monitoring the sequence programs using the personal computer connected to GOT is available, during direct connection to A, QnA, L, Q, or FX series PLC CPU (FA Transparent function).

2. Part Name

2.1 Front Panel



No	Name	Specifications			
(1)	Keylock switch (2-position SW)	Switch for external direct wiring (independent contact)			
(2)	Emergency stop switch	witch for external direct wiring (independent contact)			
(3)	Logo (2 places)	temovable			
(4)	Display section	Displays the utility screen and the user creation screen.			
(5)	Touch panel	For touch switch operation on the utility screen and the user creation screen.			
(6)	Operation switch name sheet installation place	Place (concave shape) where the operation switch name sheet (created by user) is installed.			
(7)	Operation switch name sheet cover	Transparent cover to fix the operation switch name sheet (created by user) (removed when a sheet is inserted).			
(8)	Display LED for grip switch	Display LED for grip switch (green) (lighting control from display section)			
(9)	External interface connector	For external connection cable connection (for PLC, switch and power supply external wiring) (connector: round 32 pins, male)			
(10)	Operation switch (6 switches)	Switch for external direct wiring (independent contact)			
(11)	Display LED for operation switch (6 LEDs)	Display LED for operation switch (green) (lighting control from display section)			
(12)	POWER LED	Lit in green : Power is correctly supplied. Lit in orange : Screen saving and backlight not lit. Blinks in orange/green : Blown back light bulb. Not lit : Power is not supplied.			

For the PC connection, refer to the following.

→ GT11 Handy GOT User's Manual

2.2 Back Panel

Environmental protection back cover closed

(2) (3) (4) (7)(5) (6)



No	Name	Specifications	
(1)	Hook for mounting a neck strap	Hook for mounting a neck strap (must be prepared by the user)	
(2)	Hook for hanging on walls	Hook when the Handy GOT is used hanging on wall	
(3)	Environmental protection back cover screw	For opening and closing the environmental protection back cover (drop prevention screw)	
(4)	Environmental protection back cover	Opened and closed when the PLC communication type is changed (RS-422 ⇔RS-232, before shipping: RS-422), the option function board is mounted, or the battery is replaced.	
(5)	Hand strap	Used to hold the Handy GOT in hand by putting a hand under the strap. Length adjustable.	
(6)	Rating plate	Model, consumption current, serial No., Hardware/ Firmware version is indicated.	
(7)	Grip switch	Switch for external direct wiring (independent contact)	

No	Name	Specifications		
(8)	Battery holder	GT11-50BAT type battery holder		
(9)	Battery	GT11-50BAT type battery. For storing clock data, alarm history and recipe data.		
(10)	Connector for battery connection	For GT11-50BAT type battery connection		
(11)	RS-232 interface	Connector for PLC communication using RS-232		
(12)	Cable connector for PLC communication	Interface cable connector for PLC communication r for Connector for either (11) or (13) and for selection of the PLC communication type. (Connected to RS-422 before shipping.)		
(13)	RS-422 interface	Connector for PLC communication using RS-422		
(14)	Connector for option function board Connector for mounting the GT11-50FNB type option function board			
For the	For the connection to the controller, microcomputer board or PC, refer to the following.			

ightarrow GT11 Handy GOT User's Manual

3. Specifications 3.1 General Specifications

5.1 General Spe	cifications								
	Item			Specifi	cations				
Operating ambient	Display section	0 to 40°C	to 40°C						
temperature	Other than Display section	0 to 40°C	to 40°C						
Storage ambient ten	nperature	-20 to 60°C							
Operating ambient h	numidity	10 to 90% RH, non-	condensing (The wet b	ulb temperature is	39°C or less.)				
Storage ambient hur	nidity	10 to 90% RH, non-	condensing (The wet b	ulb temperature is	39°C or less.)				
				Frequency	Acceleration	Half-amplitude	Sweep Count		
		Conforms to JIS	Under intermittent vibration	5 to 9Hz		3.5mm	10 times each in X,		
Vibration resistance		B3502 and		9 to 150Hz	9.8m/s ²				
		IEC61131-2	Under continuous vibration	5 to 9Hz		1.75mm	Y and Z directions		
				9 to 150Hz	4.9m/s ²				
Shock resistance		Conforms to JIS B3502, IEC 61131-2 (147 m/s ² , 3 times each in X, Y and Z directions)							
Operating atmosphere		Must be free of lamp black, corrosive gas, flammable gas, or excessive amount of electro conductive dust particles and must be no direct sunlight. (Same as for saving)							
Operating altitude*1		2000 m (6562 ft) max.							
Overvoltage categor	y ^{*2}	II or less							
Pollution degree*3		2 or less							
Cooling method		Self-cooling							

*1 Do not use or store the GOT under pressure higher than the atmospheric pressure of altitude 0m (0ft.). Failure to observe this instruction may cause a malfunction.

When the air inside the control panel is purged by pressurization, the surface sheet may be lifted by high pressure. As a result, the touch panel may be difficult to press, and the sheet may be peeled off.

*2 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the raged voltage of 300 V is 2500 V.

*3 This index indicates the degree to which conductive material is generated in the environment where the equipment is used. In pollution degree 2, only non-conductive pollution occurs but temporary conductivity may be produced due to condensation.

Environmental protection back cover opened

3.2 Performance Specifications

		Specifications					
	Item	GT1155HS-QSBD	GT1150HS-QLBD				
	Туре	STN color liquid crystal	STN monochrome (white/black) liquid crystal				
	Screen size	5.7"	1				
	Resolution	320 × 240 dots					
	Display size	W115(4.53) × H86(3.39)[mm](inch)					
Display	Display character	16-dot standard font: 20 characters × 15 lines, 12-dot standard	font: 26 characters × 20 lines				
section*1	Display color	256 colors	Monochrome (white/black), 16 scales				
	Contrast adjustment	16-level adjustment	1				
	Intensity of LCD only	380[cd/m2](Adjustable in 8 levels)	220[cd/m2](Adjustable in 8 levels)				
	Intensity adjustment	8-level adjustment	1				
	Life	Approx. 50,000h. (Time for display intensity to become 1/5 at o	perating ambient temperature of 25°C)				
Backlight		Cold cathode fluorescent tube (irreplaceable by a user) backligh Backlight off/screen saving time can be set.	nt shutoff detection function is included.				
	Life*2	Approx. 75,000h or longer (Time for display intensity reaches 50% at the operating ambient temperature of 25° C)	Approx. 54,000h or longer (Time for display intensity reaches 50% at the operating ambient temperature of 25°C)				
	Number of touch keys	300 keys/screen (Matrix structure of 15 lines × 20 columns)	•				
Touch	Key size	Minimum 16 × 16 dots (per key)					
panel	Number of points touched simultaneously	Maximum of 2 points					
	Life	1 million times or more (operating force 0.98N max.)					
	C drive*3	Flash memory (Internal), for storing project data (3Mbytes) and	OS				
Memory	Life (Number of write times)	100,000 times					
	D drive	SRAM (Internal), 512kbyes (battery backup)	AM (Internal), 512kbyes (battery backup)				
Internal clo	ck Accuracy	-45 seconds, +45 seconds per month					
Buzzer out	put	Single tone (tone length adjustable)					
	Operation switch	6 switches (6 contacts/common), N/O contact, Maximum rating	10mA/24VDC, Life: 1,000,000 times				
	Grip switch	I switch (single wiring) (IDEC HE3B-M2PB), Enable switch (deadman switch) 3-position system of OFF ⇔ ON ⇔ OFF 2 N/O contacts, Maximum rating 1A/24VDC (resistance load), Maximum rating 0.3A/24VDC (induction load), Life: 100,000 times					
Switch	Emergency stop switch	1 switch (single wiring) (OMRON A165E-S-02) 2 N/C contacts, Maximum rating 1A/24VDC (resistance load), Maximum rating 0.3A/24VDC (induction load), Life: 100,000 times					
	Keylock switch (2-position switch)	1 switch (single wiring) (IDEC AS6Q-2KT1PB) 2-notch type (Manual stop at each position/A key can be inserted and removed on only the left side./On the right side, a key cannot be removed./Two keys are provided.) 2-position, Maximum rating 1/24VDC (resistance load), Maximum rating 0.3A/24VDC (induction load), Life: 100,000 times					
LED	POWER LED	1 LED Lit in green: Power is correctly supplied. Lit in orange: Screen saving and backlight not lit. Blinks in orange/green: Blown back light bulb. Not lit: Power is not supplied.					
	LED for operation switch display	6 LEDs, green (lighting control from the display section)					
	LED for grip switch display	1 LED, green (lighting control from display unit part)					
Battery		GT11-50BAT lithium battery					
	Туре	Magnesium maganese dioxide lithium primary battery					
	Backup target	Clock data, alarm history and recipe data					
	Life	Approx. 5 years (Operating ambient temperature of 25°C), Gua	ranteed: 1 year				
	RS-422/RS-232	RS422/RS232 1ch Transmission speed : 115,200/57,600/38,400/19,200/9,600/4,8 Connector shape : Round 32 pins (male) Application : PLC communication (Select either RS-42	00bps 22 or RS-232 when used)				
Built-in interface	RS-232	RS232 1ch Transmission speed : 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : MINI-DIN 6 pin (Female) Application : PC communication (Project data upload/download, OS installation, transparent function)					
	USB	USB (Full Speed 12Mbps) 1ch Connector shape: Min-B Application : PC communication (Project data upload/download, OS installation, transparent function)					
	CF card	Conforming to PCMCIA, compact flash slot, 1ch Connector shape : Dedicated for TYPE I Application : Data transfer, data storage					
	Option function board*4	For mounting the option function board, 1ch					
Environme	ntal protective structure*5	Equivalent to IP65F (excluded on the relay connector side of ex-	ternal cable valid when the external cable is connected)				
External dir	mensions	W176 (6.93) × H220 (8.67) × D93(3.67) [mm] (inch)					
Weight		1.0kg (Handy GOT main unit only)					

Item	GT1155HS-QSBD	GT1150HS-QLBD				
Compatible software package	GT Designer2 Version2.15R or later/GT Designer3 Version1.0	IB or later				
*1 • Bright dots (always lit) and dark comprises of a great number of Please note that these dots app.	lots (unlit) may appear on a liquid crystal display panel. It is impossible display elements. Flickers may be observed depending on the display ear due to its characteristic and are not caused by product defect.	to completely avoid this symptom, as the liquid crystal display color.				
 Flickers and partial discoloration may be generated on the liquid crystal display panel due to the display contents or the contrast adjustment. However, please note that these phenomena appear due to its characteristic and are not caused by product defect. 						
 There is a difference in the displation that there is an individual difference 	ay brightness and the color tones between liquid crystal display panels nce between them.	When using multiple liquid crystal display panels, please note				
 A crosstalk (shadow as an exter When the display section is seen Please note that the response til Especially in the low temperatur Please check the display response When the same screen is display To prevent heat damage, the sci For details on the screen saver Cort learch was 	 A crosstalk (shadow as an extension of the display) may appear on the liquid crystal display panel. Please note that it appears due to its characteristic. When the display section is seen from the outside of the display angle, the display panel may vary depending on the usage environmental temperature. Please note that the response time, brightness and color of the liquid crystal display panel may vary depending on the usage environmental temperature. Especially in the low temperature environment, the display response becomes slow due to the characteristics of the STN liquid crystal. Please check the display response in advance for using this product. When the same screen is displayed for a long time, an incidental color or partial discoloration is generated on the screen due to heat damage, and it may not disappear. To prevent heat damage, the screen saver function, refer to the following. 					
*2 Using the GOT Backlight OFF func For details on the Backlight OFF func → GT11 Handy GOT User's Manua	ion can prolong the life of the backlight. ction, refer to the following. I					
*3 ROM in which new data can be write	ten without deleting the written data.					
*4 Necessity of mounting the option fu → GT11 Handy GOT User's Manua	nction board may differ depending on the hardware version. Refer to the	ne following for details.				
*5 Note that this does not guarantee protection back cover is removed environments filled with oil-mist.	all user's operation environment. The protection is not applied whe In addition, the product may not be used in environments under e	n the interface environment protection cover or environment xposition of oil or chemicals for a long period of time, or in				
3.3 Power Supply Specificatio	ns					
Itom	Specificati	ons				
nem	GT1155HS-QSBD	GT1150HS-QLBD				
Input power supply voltage	24V DC (+10% -15%), ripple voltage 200mV or less					
Fuse (built-in, not exchangeable)	1.0A					
Power consumption	9.84W (410mA/24V DC) or less 9.3	6W (390mA/24V DC) or less				
At backlight off	4.32W (180mA/24V DC) or less					
Inrush current	15A or less (26.4V) 2ms					
Permissible instantaneous power failure time*1	rmissible instantaneous power Within 5ms					
Noise immunity	ise immunity Noise voltage: 1000Vp-p, Noise width: 1µs (by noise simulator of 30 to 100Hz noise frequency)					
electric withstand voltage 500V AC for 1 minute (across power supply terminals and earth)						
Insulation resistance	sulation resistance 10MΩ or larger by insulation resistance tester (across power supply terminals and earth)					
 *1 The GOT continues to operate even The GOT stops operating if there is 8.4 External Dimensions 	upon 5ms or shorter instantaneous power failure. extended power failure or voltage drop, while it automatically resumes	operation as soon as the power is restored.				
	₩ 13 10 13 10 10 10 10 10 10 10 10 10 10					

Specifications



4. Maintenance and Inspection

The GOT does not include consumable components that will cause the shorten life. However, note that battery life is 5 years and LCD life is 50,000 hours. The life of backlight in GT1155HS-QSBD is 75.000 hours and that in GT1150HS-QLBD is 54 000 hours

It is recommended to replace the battery periodically (For the replacement of the liquid crystal screen and backlight, please consult your nearest sales office or FA Contor

4.1 Daily Inspection

Daily inspection items

No.		Inspection Item	Inspection Method	Criterion	Action
	tatus	Loose terminal screws	Retighten screws with screwdriver	Not loose	Retighten terminal screws
Connection s	Proximate solderless terminals	Visual check	Proper intervals	Correct	
	Conne	Conne	Loose connectors	Visual check	Not loose
	status	Dirt on protection sheet	Visual check	Not outstanding	Replace with new one
2 Jsage s	Foreign material attachment	Visual check	No foreign matter sticking	Remove clean	

Refer to the following for the model names of the protection sheet or the replacement procedure

→ GT11 Handy GOT User's Manual

4.2 Periodic Inspection

Yearly or half-yearly inspection items The following inspection should also be performed when equipment has been moved or modified or the wiring changed

No.	Inspection Item		Inspection Method	Criterion	Action
		Ambient temperature	Make measurement	0 to 40°C	For use in control
1	Surrounding environment	Ambient humidity	with thermometer or hygrometer	10 to 90%RH	temperature inside control
		Atmosphere	Measure corrosive gas	No corrosive gas	temperature
2	Power supply voltage check		24V DC Measure voltage across terminals.	20.4 to 26.4V DC	Change supply power
	Mounting	Looseness	Move module	Should be mounted firmly	Retighten screws
3	3 status	Dirt, foreign matter	Visual check	No dirt, foreign matter sticking	Remove, clean
		Loose terminal screws	Retighten screws with screwdriver	Not loose	Retighten terminal screws
4	Connection status	Proximate solderless terminals	Visual check	Proper intervals	Correct
		Loose connectors	Visual check	Not loose	Retighten connector fixing screws
5	Battery		Check the system alarm (error code: 500) report on the Alarm Information screen	(Preventive maintenance)	Replace with new battery when the current battery has reached the specified life span, even if battery voltage is not displayed.

4.3 Battery Replacement

The battery backs up clock data, alarm history and recipe data. Screen data is stored in the flash memory and data is retained even if the battery is dead

 Battery model name Handy GOT is shipped with the following battery

riandy oor to shipped with the following ballory.		
Product name	Model name	
Battery	GT11-50BAT	

· Battery replacement procedure 1) Turn the GOT power off

2) Loosen the environmental protection back cover screws at four points on GOT rear face to remove the cover



3) Remove the old battery from the holder.

4) Disconnect the old battery connector and insert the new battery connector within 30s

5) Insert the battery into the holder.



Battery holder Connector for battery connection

6) Attach the environmental protection back cover and tighten the screws Tightening torque: 36 to 48 N• cm

7) Turn the GOT power on.

8) Check if the battery condition is normal with the utility. Refer to the following for the details of battery status display



How to confirm production year and month

The production year and month of the battery built in the purchased GOT can be confirmed by the production No. (S/N) marked on the GOT main unit.



The production date of the optional replacement battery can be confirmed by the lot No, marked on the nameplate (label) affixed on the battery.



 Battery life Approximate battery life: 5 years (ambient temperature: 25°C) Battery replacement: In 4 to 5 years

Approximate life is 5 years, but life may be shorter depending on the ambient temperature, therefore, note that the battery must be replaced in 4 to 5 years. Make sure to purchase a new battery as needed as it self-discharges

Battery status can be confirmed on a GOT utility screen. For details of battery status or how to output alarm, refer to the following: \rightarrow GT11 Handy GOT User's Manual

5. Cautions on Using Emergency Stop Switch

1) When using the emergency stop switch in the handy GOT, judge the validity to use the emergency stop switch in accordance with the risk assessment in your system.

2) When using the parallel circuit (which disables the emergency stop status while the handy GOT is removed), the system may not conform to the safety standards. Check the safety standards required in the system, and then judge the validity to use the emergency stop switch

Notification of CE marking

The following products have shown compliance through direct testing (to the identified standards) and design analysis (forming a technical construction file) to the European Directive for Electromagnetic Compatibility (2004/108/EC) when used as directed by the appropriate documentation.

- · This product is designed for use in industrial applications
- Type: Graphic Operation Terminal

- Models: GOT series

Standard	Remark		
EN61131.2 · 2007	EMI	Compliance with all relevant aspects of the standard. (Radiated Emissions)	
Programmable controllers - Equipment, requirements and tests	EMS	Compliance with all relevant aspects of the standard. (ESD, RF electromagnetic field, EFTB, Surge, RF conducted disturbances and Power frequency magnetic field)	

For details of CE marking, refer to the following.

→ GT11 Handy GOT User's Manual

「电器电子产品有害物质限制使用标识要求」的表示方式



含有有害6物质的名称,含有量,含有部品

本产品中所含有的有害6物质的名称,含有量,含有部品如下表 所示。

产品中有害物质的名称及含量

部件名称		有害物质						
		铅 (Pb)	汞 (Hg)	镐 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴 二苯醚 (PBDE)	
	外壳	0	0	0	0	0	0	
目子界	印刷基板	\times	0	0	0	0	0	
GOT	背光灯 (CCFL)	0	×	0	0	0	0	
	电缆	×	0	0	0	0	0	

本表格依据ST/T 11364的规定编制。

- ○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
- ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/ T 26572规定的限量要求。

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual. Warranty

Exclusion of loss in opportunity and secondary loss from warranty liability Regardless of the gratis warranty term. Mitsubishi shall not be liable for compensation to

- (1) Damages caused by any cause found not to be the responsibility of Mitsuhishi
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks

/ For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in
- a device or system used in purposes related to human life. Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric
- This product has been manufactured under strict guality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.
- MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN







GT1155HS-QSBD, GT1150HS-QLBD

GT11 Handy GOT General Description



This manual describes the part names, dimensions, mounting, and specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions. And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

Registration The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective Oct 2016

Specifications are subject to change without notice © 2008 MITSUBISHI ELECTRIC CORPORATION

Safety Precaution (Read these precautions before using.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the

product correctly. The precautions given in this manual are concerned with this product. In this manual, the safety precautions are ranked as "WARNING" and IF ALLICOLE

"CAUTION".	
	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury

or physical damage Depending on circumstances, procedures indicated by "CAUTION" may also be linked to serious results. In any case, it is important to follow the directions for usage.

- Some failures of the GOT or cable may keep the outputs on or off. An external monitoring circuit should be provided to check for output signals which may lead to a serious accident. Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable discontention) control of the monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative. A system where the GOT is used should be configured to perform an
- significant operation to the system by using the switches of a device othe than the GOT on the assumption that a GOT communication fault will occur. Not doing so can cause an accident due to false output or malfunction Do not use the GOT as the warning device that may cause a serior
- accident. An independent and redundant hardware or mechanical interlock is require to configure the device that displays and outputs serious warning. Failure to observe this instruction may result in an accident due to inc
- output or malfunction
- output or malfunction. Incorrect operation of the touch switch(s) may lead to a serious accident if the GOT backlight is gone out. When the GOT backlight goes out, the POWER LED flickers (green/orange) and the display section turns black and causes the monitor screen to appear blank, while the input of the touch switch(s) remains active. This may confuse an operator in thinking that the GOT is in "screensaver" mode, who then tries to release the GOT from this mode by touching the display section, which may cause a touch switch to operate. Note that the following occurs on the GOT when the backlight goes out. The DOWER LED flickers (screensaverse) and the pensitir screen appeared
- The POWER LED flickers (green/orange) and the monitor screen appe blank

DESIGN PRECAUTIONS

Do not bundle the control and communication cables with main-circuit, power other wiring. Run the above cables separately from such wiring and keep them minimum of 100mm (3.94in.) apart.Not doing so noise can cause a malfunction. Do not press the GOT display section with a pointed material as a pen or driv Doing so can result in a damage or failure of the display section. Before connecting to GOT, turn ON the controller to enable the communication When the communication of controller is not available, a communication er may occur in GOT.

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel. Not doing so can cause the unit to fail or malfunction. Always turn off the power ON/OFF switch on the connector conversion box before connecting or disconnecting the GOT to it. Connecting or disconnecting the GOT with the power being turned on may result in damage to the unit or malfunctions.
- in damage to the unit or malfunctions. Be sure to shut off all phases of the external power supply used by the syster before mounting or removing the relay cable onto/from the GOT.
- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the option function board on to/from the GOT. No doing so can cause the unit to fail or malfunction.
- When installing the option function board or battery, or operating the reset switch wear an earth band etc. to avoid the static electricity. The static electricity can cause the unit to fail or malfunction.

- Use the GOT in the environment that satisfies the general specification described in this manual. Not doing so can cause an electric shock, fire malfunction or product damage or deterioration.
- Never drop cutting chips and electric wire chips into the ventilation window of th Handy GOT when you drill screw holes or perform wiring. Otherwise, fire, failure or malfunction may be caused.
- Connect connection cables securely to the specified connectors while the pow
- Imperfect connection may cause malfunction or failure
- When connecting cables, pay attention to the contents described in this section. Especially, attach the rear cover so that PCBs inside the Handy GOT are no interfered with connection cables.
- Securely connect the option function board to the connector provided for th board
- When inserting/removing a CF card into/from the GOT, turn the CF card access switch off in advance. Failure to do so may corrupt data within the CF card. When inserting a CF card into the GOT, push it into the insertion slot until the CF card eject button will pop out. Failure to do so may cause a malfunction due to
- poor contact. When removing a CF card from the GOT, make sure to support the CF card by hand, as it may pop out. Failure to do so may cause the CF card to drop from the GOT and break.

IRING PRECAUTIONS

- Make sure to attach the back cover to the Handy GOT before turn power and starting operation after the installation or wiring work. Otherwise, electrical shock may be caused.
- Be sure to shut off all phases of the external power supply used by before wirring. Failure to do so may result in an electric shock, product malfunctions.

 - malfunctions. Please make sure to ground FG terminal of the GOT power supply section by applying 100 or less which is used exclusively for the GOT. Not doing so may cause an electric shock or malfunction. Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product. Not doing so can cause a fire or failure. Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.

RING PRECAUTIONS

- The cables connected to the unit must be run in ducts or clamped. Not doing so can cause the unit or cable to be damaged due to the dangling motion or accidental pulling of the cables or can cause a malfunction due to relate corrections for the
- cable connection fault. When unplugging the cable connected to the unit, do not hold and pull the cab portion
- Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Plug the communication cable into the connector of the connected unit and tighten the mounting and terminal screws in the specified torque range. Undertightening can cause a short circuit or malfunction. Overtightening car cause a short circuit or malfunction due to the damage of the screws or unit.

EST OPERATION RECAUTIONS

Before performing the test operations of the user creation monitor screen (suct as turning ON or OFF bit device, changing the word device current value changing the settings or current values of the timer or counter, and changing the buffer memory current values of the timer or counter, and changing the buffer memory current value), read through the manual carefully and make yourself familiar with the operation method. During test operation, never change the data of the devices which are used to perform significant operation for the system. False output or malfunction can cause an accident.

STARTUP/MAINTENANCE PRECAUTIONS

- When power is on, do not touch the terminals. Doing so can cause an electric shock or malfunction.
- Connect the battery correctly. Do not discharge, disassemble, heat, short solder or throw the battery into the fire. Incorrect handling may cause the battery to generate heat, burst or take fire, resulting in injuries or fires.
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases. Not switching the power off in all phases car cause a unit failure or malfunction. Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

Associated Manuals

The following manuals are relevant to this product. When these loose manuals are required, please consult with our local distributor.

Manual name	Contents	Manual Number (Model Code)			
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) (sold separately) *1	Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series	SH-080529ENG (1D7M24)			
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3, 2/3, 3/3 (sold separately) *1	Describes specifications and settings of the object functions used in GT Designer2	SH-080530ENG (1D7M25)			
GT Designer3 Version1 Screen Design Manual (For GOT1000 Series) (Fundamentals) 1/2, 2/2 (sold separately) *1	Describes methods of the GT Designer3 installation operation, basic operation for drawing and transmitting data to GOT1000 series	SH-080866ENG (1D7MB9)			
GT Designer3 Version1 Screen Design Manual (For GOT1000 Series) (Functions) 1/2, 2/2 (sold separately) *1	Describes specifications and settings of the object functions used in GT Designer3	SH-080867ENG (1D7MC1)			
GT11 Handy GOT User's Manual (Hardware/Utility, Connection) 1/2, 2/2 (sold separately)	Describes the Handy GOT hardware-relevant content such as part names, external dimensions, mounting, power supply wiring, specifications, and introduction to option devices	JY997D20101 JY997D20102 (09R817)			

Bundled Items

Product Name	Model Name	Specifications
COT	GT1155HS -QSBD	[320 \times 240 dots], STN color LCD (256 colors), built-in battery and backlight
	GT1150HS -QLBD	[320 \times 240 dots], STN monochrome LCD (black/white, 16 scales), built-in battery and backlight

For details of a PLC to be connected, refer to the PLC user's manual respectively

Bundled item	Quantity
Operation switch name character sheets 1) OHP sheet 2) Reference dimension sheet (switch name change sheet mount)	1) One sheet 2) One sheet
Selector switch keys	2
GT11 Handy GOT General Description (This manual)	1

1. Features

1) Improved monitoring performance and connectivity to FA devices

Two types of display modes are provided: 256-color display and monochrome display. In the monochrome display, 16 scales are used to improve the display. High speed monitoring through high speed communication at maximum of 115.2kbps.

- Multiple languages are displayed using the Unicode2.1-compatible fonts and beautiful characters are drawn using the TrueType and high quality fonts.
 High speed display and high speed touch switch response.
 More efficient GOT operations including screen design, startup, adjustment, management and maintenance works
- The display screen of the display unit is created using a drawing software for PC (GT Designer2 Ver2.18U or later/GT Designer3 Ver1.01B or later).
- The display screen of the display difference of the display screen of the display difference of the display display difference of the display display difference of the display display
- The USB connector interface is included as standard

3) Enhanced support of FA device setup tools

Pransferring or monitoring the sequence programs using the personal computer connected to GOT is available, during direct connection to A, QnA, L, Q, or FX series PLC CPU (FA Transparent function).

2. Part Name





Operation switch name sheet (prepared by the user)



	_	
No	Name	Specifications
(1)	Hook for mounting a neck strap	Hook for mounting a neck strap (must be prepared by the user)
(2)	Hook for hanging on walls	Hook when the Handy GOT is used hanging on walls.
(3)	Environmental protection back cover screw	For opening and closing the environmental protection back cover (drop prevention screw)
(4)	Environmental protection back cover	Opened and closed when the PLC communication type is changed (RS-422 ⇔RS-232, before shipping: RS-422), the option function board is mounted, or the battery is replaced.
(5)	Hand strap	Used to hold the Handy GOT in hand by putting a hand under the strap. Length adjustable.
		Medal construction construct contribute linear sector

Environmental protection back cover opened



(14) Option function board installed

No	Name	Specifications
(8)	Battery holder	GT11-50BAT type battery holder
(9)	Battery	GT11-50BAT type battery. For storing clock data, alarm history and recipe data.
(10)	Connector for battery connection	For GT11-50BAT type battery connection
(11)	RS-232 interface	Connector for PLC communication using RS-232
(12)	Cable connector for PLC communication	Interface cable connector for PLC communication Connector for either (11) or (13) and for selection of the PLC communication type. (Connected to RS-422 before shipping.)
(13)	RS-422 interface	Connector for PLC communication using RS-422
(14)	Connector for option function board	Connector for mounting the GT11-50FNB type option function board

p from the	(sold separately) *1	and transmitt
	GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3, 2/3, 3/3 (sold separately) *1	Describes sp
ng on the	GT Designer3 Version1 Screen Design Manual (For GOT1000 Series) (Fundamentals) 1/2, 2/2 (sold separately) *1	Describes me and transmitt
he system	GT Designer3 Version1 Screen Design Manual (For GOT1000 Series) (Eurotions) 1/2 2/2	Describes sp

TARTUP/MAINTENANCE PRECAUTIONS Do not disassemble or modify the unit. Doing so can cause a failure, malfunction, injury or fire

- Do not touch the conductive and electronic parts of the unit directly. Doing so can cause a unit malfunction or failure.
 - - The cables connected to the unit must be run in ducts or clamped. Not doing so can cause the unit or cable to be damaged due to the dangling motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault cable connection fault.

- When unplugging the cable connected to the unit, do not hold and pull the cable portion. Doing so can cause the unit or cable to be damaged or can cause malfunction due to a cable connection fault. Replace battery with GT11-50BAT by Mitsubishi electric Co. only
- Use of another battery may present a risk of fire or explosic
- Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire

- When disposing of the product, handle it as industrial waste. When disposing of batteries, separate them from other wastes according to the local regulations.
 - (For details of the battery directive in EU member states, refer GOT User Manual.)

When transporting lithium batteries, make sure to treat them based on th transport regulations. (Refer to User's Manual for details of the regurate models)

models.)
Before transporting the GOT, turn the GOT power on and check that the batter voltage status is normal on the Time setting & display screen (utilities screen). I addition, confirm that the adequate battery life remains on the rating plate. Transporting the GOT with the low battery voltage or the battery the reache battery life may unstabilize the backup data unstable during transportation.
Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistanc described in the general specifications of this manual, as they are precisio devices. Failure to do so may cause the unit to fail.
Check if the unit operates correctly after transportation.

TRANSPORTATION PRECAUTIONS

No	Name	Specifications				
(1)	Keylock switch (2-position SW)	Switch for external direct wiring (independent contact)				
(2)	Emergency stop switch	Switch for external direct wiring (independent contact)				
(3)	Logo (2 places)	movable				
(4)	Display section	Displays the utility screen and the user creation screen.				
(5)	Touch panel	For touch switch operation on the utility screen and the user creation screen.				
(6)	Operation switch name sheet installation place	Place (concave shape) where the operation switch name sheet (created by user) is installed.				
(7)	Operation switch name sheet cover	ransparent cover to fix the operation switch name sheet (created by user) (removed when a sheet is inserted).				
(8)	Display LED for grip switch	isplay LED for grip switch (green) (lighting control from display section)				
(9)	External interface connector	or external connection cable connection (for PLC, switch and power supply external wiring) connector: round 32 pins, male)				
(10)	Operation switch (6 switches)	Switch for external direct wiring (independent contact)				
(11)	Display LED for operation switch (6 LEDs)	Display LED for operation switch (green) (lighting control from display section)				
(12)	POWER LED	Lit in green : Power is correctly supplied. Lit in orange : Screen saving and backlight not lit. Blinks in orange/green : Blown back light bulb. Not lit : Power is not supplied.				

For the PC connection, refer to the following

ightarrow GT11 Handy GOT User's Manual

(0)	rating plate	Firmware version is indicated.
(7)	Grip switch	Switch for external direct wiring (independent contact)

For the connection to the controller, microcomputer board or PC, refer to the following.

 \rightarrow GT11 Handy GOT User's Manual

3. Specifications

3.1 General Specifications

Item		Specifications							
Operating ambient	Display section	0 to 40°C							
temperature	Other than Display section	0 to 40°C	o 40°C						
Storage ambient ten	nperature	-20 to 60°C							
Operating ambient h	numidity	10 to 90% RH, non	-condensing (The wet b	ulb temperature is	39°C or less.)				
Storage ambient hu	midity	10 to 90% RH, non	-condensing (The wet b	ulb temperature is	39°C or less.)				
				Frequency	Acceleration	Half-amplitude	Sweep Count		
		Conforma to JIS	Under intermittent	5 to 9Hz		3.5mm			
Vibration resistance		B3502 and	vibration	9 to 150Hz	9.8m/s ²		10 times each in X,		
		IEC61131-2	Under continuous vibration	5 to 9Hz		1.75mm	Y and Z directions		
				9 to 150Hz	4.9m/s ²				
Shock resistance		Conforms to JIS B3502, IEC 61131-2 (147 m/s ² , 3 times each in X, Y and Z directions)							
Operating atmosphere		Must be free of lamp black, corrosive gas, flammable gas, or excessive amount of electro conductive dust particles and must be no direct sunlight. (Same as for saving)							
Operating altitude*1		2000 m (6562 ft) max.							
Overvoltage categor	ry⁺²	II or less							
Pollution degree ^{*3} 2 or less									
Cooling method		Self-cooling	Self-cooling						

*1 Do not use or store the GOT under pressure higher than the atmospheric pressure of altitude 0m (0ft.). Failure to observe this instruction may cause a malfunction. When the air inside the control panel is purged by pressurization, the surface sheet may be lifted by high pressure. As a result, the touch panel may be difficult to press, and the sheet may be peeled off.
*2 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the raged voltage of 300 V is 2500 V.

This index indicates the degree to which conductive material is generated in the environment where the equipment is used. In pollution degree 2, only non-conductive pollution occurs but temporary conductivity may be produced due to condensatio *3

3.2 Performance Specifications

	Item	GT1155HS-OSBD GT1150HS-OI BD						
	Type	STN color liquid crystal STN monochrome (white/black) liquid crystal						
	Screen size							
Display section*1	Besolution	3.7 320 × 240 dote						
	Display size	320 × 240 00(5 W115/4 53) ~ H86/3 30)[mm]/inch)						
	Display size	16 dot standard fant: 20 charactere y 15 linge, 12 dot standard fant: 26 charactere y 20 linge						
	Display color	256 colore Monochrome (white/higk), 16 ecolor						
	Contrast adjustment	16-level adjustment						
		380[cd/m2]/(Adjustable in 8 levels) 220[cd/m2]/(Adjustable in 8 levels)						
	Intensity of LCD only	22U[C0/m²](Adjustable III o levels) 22U[C0/m²](Adjustable III o levels)						
	Life	8-level adjustment						
	Lile	Approx. bu,uuuri. (Time for display intensity to become 1/5 at operating ambient temperature of 25°C)						
Backlight		Backlight officereen saving time can be set.						
	Life*2	Approx. 75,000 or longer (lime for display intensity reaches Approx. 54,000 or longer (lime for display intensity 50% at the operating ambient temperature of 25°C) reaches 50% at the operating ambient temperature of 25°C)						
	Number of touch keys	300 keys/screen (Matrix structure of 15 lines × 20 columns)						
Touch	Key size	Minimum 16 × 16 dots (per key)						
panel	Number of points touched simultaneously	Maximum of 2 points						
	Life	1 million times or more (operating force 0.98N max.)						
	C drive*3	Flash memory (Internal), for storing project data (3Mbytes) and OS						
Memory	Life (Number of write times)	100,000 times						
	D drive	SRAM (Internal), 512kbyes (battery backup)						
Internal clo	ock Accuracy	-45 seconds. +45 seconds per month						
Buzzer out	put	Single tone (tone length adjustable)						
	Operation switch	6 switches (6 contacts/common). N/O contact. Maximum rating 10mA/24VDC. Life: 1.000.000 times						
	Grip switch	1 switch (single wiring) (IDEC HE3B-M2PB), Enable switch (deadman switch) 3-position system of OFF ⇔ ON ⇔ OFF 2 N/O contacts, Maximum rating 1A/24VDC (resistance load), Maximum rating 0.3A/24VDC (induction load), Life: 100,000 times						
Switch	Emergency stop switch	1 switch (single wiring) (OMRON A165E-S-02) 2 N/C contacts, Maximum rating 1A/24VDC (resistance load), Maximum rating 0.3A/24VDC (induction load), Life: 100,000 times						
	Keylock switch (2-position switch)	1 switch (single wiring) (IDEC AS6Q-2KT1PB) 2-notch type (Manual stop at each position/A key can be inserted and removed on only the left side./On the right side, a key cannot be removed./Two keys are provided.) 2-position, Maximum rating 1A/24VDC (resistance load), Maximum rating 0.3A/24VDC (induction load), Life: 100,000 times						
LED	POWER LED	1 LED Lit in green: Power is correctly supplied. Lit in orange: Screen saving and backlight not lit. Blinks in orange/green: Blown back light bulb. Not lit: Power is not supplied.						
	LED for operation switch display	6 LEDs, green (lighting control from the display section)						
	LED for grip switch display	1 LED, green (lighting control from display unit part)						
Battery		GT11-50BAT lithium battery						
	Туре	Magnesium maganese dioxide lithium primary battery						
	Backup target	Clock data, alarm history and recipe data						
	Life	Approx. 5 years (Operating ambient temperature of 25°C), Guaranteed: 1 year						
Built-in interface	RS-422/RS-232	RS422/RS232 1ch Transmission speed : 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : Round 32 pins (male) Application : PLC communication (Select either RS-422 or RS-232 when used)						
	RS-232	RS232 1ch Transmission speed : 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : MINI-DIN 6 pin (Female) Application : PC communication (Project data upload/download, OS installation, transparent function)						
	USB	USB (Full Speed 12Mbps) 1ch Connector shape: Mini-B Application : PC communication (Project data upload/download, OS installation, transparent function)						
	CF card	Conforming to PCMCIA, compact flash slot, 1ch Connector shape : Dedicated for TYPE I Application : Data transfer, data storage						
	Option function board*4	For mounting the option function board, 1ch						
Environmental protective structure*5		Equivalent to IP65F (excluded on the relay connector side of external cable valid when the external cable is connected)						
External di	mensions	W176 (6.93) × H220 (8.67) × D93(3.67) [mm] (inch)						
Weight		1.0kg (Handy GOT main unit only)						

lterr		Specifications						
	nem	GT1155HS-QSBD	GT1150HS-QLBD					
Co	mpatible software package	GT Designer2 Version2.15R or later/GT Designer3 Version1.01	GT Designer2 Version2.15R or later/GT Designer3 Version1.01B or later					
*1	 Bright dots (always lit) and dark dots (u comprises of a great number of display Please note that these dots appear due Flickers and partial discoloration may that these phenomena appear due to it There is a difference in the display brigit that there is an individual difference be A crosstalk (shadow as an extension of When the display section is seen from Please note that the response time, bri Especially in the low temperature envir Please check the display response in a When the same screen is displayed for. To prevent heat damage, the screen sa For details on the screen saver function → GT11 Handy GOT User's Manual 	Itil) may appear on a liquid crystal display panel. It is impossible t elements. Flickers may be observed depending on the display or to its characteristic and are not caused by product defect. se generated on the liquid crystal display panel due to the display s characteristic and are not caused by product defect. Intress and the color tones between liquid crystal display panels. Newen them. the display) may appear on the liquid crystal display panel. Plea the outside of the display angle, the display color seems like it ha phrness and color of the liquid crystal display panel may vary dep noment, the display response becomes slow due to the character dvance for using this product. a long time, an incidental color or partial discoloration is generated ver function is effective. , refer to the following.	o completely avoid this symptom, as the liquid crystal display olor. y contents or the contrast adjustment. However, please note When using multiple liquid crystal display panels, please note se note that it appears due to its characteristic. s changed. Please note that it is due to its characteristic. ending on the usage environmental temperature. istics of the STN liquid crystal. I on the screen due to heat damage, and it may not disappear.					
*2	2 Using the GOT Backlight OFF function can prolong the life of the backlight. For details on the Backlight OFF function, refer to the following. → GT11 Handy GOT User's Manual							
*3	ROM in which new data can be written wit	hout deleting the written data.						
*4	Necessity of mounting the option function \rightarrow GT11 Handy GOT User's Manual	board may differ depending on the hardware version. Refer to the	e following for details.					
*5	Note that this does not guarantee all use	er's operation environment. The protection is not applied when	the interface environment protection cover or environment					

Note that this does not guarantee an user's operation environment. The protection is not applied when the interface environment protection force of environment and experiments under exposition of oil or chemicals for a long period of time, or in vironments filled with oil-mist.

3.3 Power Supply Specifications

Itom	Specifications					
nem	GT1155HS-QSBD	GT1150HS-QLBD				
Input power supply voltage	24V DC (+10% -15%), ripple voltage 200mV or less					
Fuse (built-in, not exchangeable)	1.0A					
Power consumption	9.84W (410mA/24V DC) or less	9.36W (390mA/24V DC) or less				
At backlight off	4.32W (180mA/24V DC) or less					
Inrush current	15A or less (26.4V) 2ms					
Permissible instantaneous power failure time*1	Within 5ms					
Noise immunity	Noise voltage: 1000Vp-p, Noise width: 1µs (by noise simulator of 30 to 100Hz noise frequency)					
Dielectric withstand voltage	500V AC for 1 minute (across power supply terminals and earth)					
Insulation resistance	$10M\Omega$ or larger by insulation resistance tester (across power supply terminals and earth)					
*1 The GOT continues to operate eve) upon 5ms or shorter instantaneous power failure.					

The GOT stops operating if there is extended power failure or voltage drop, while it automatically resumes operation as soon as the power is restored. 3.4 External Dimensions



4. Maintenance and Inspection

The GOT does not include consumable components that will cause the shorten life. However, note that battery life is 5 years and LCD life is 50,000 hours. The life of backlight in GT1155HS-QSBD is 75,000 hours and that in GT1150HS-QLBD is 54.000 hours.

It is recommended to replace the battery periodically. (For the replacement of the liquid crystal screen and backlight, please consult your nearest sales office or FA Center.)

4.1 Daily Inspection

Daily	any inspection terms					
No.	Inspection Item		Inspection Method	Criterion	Action	
	status	Loose terminal screws	Retighten screws with screwdriver	Not loose	Retighten terminal screws	
1	Connection s	Proximate solderless terminals	Visual check	Proper intervals	Correct	
		Loose connectors	Visual check	Not loose	Retighten connector fixing screws	
2	Usage status	Dirt on protection sheet	Visual check	Not outstanding	Replace with new one	
		Foreign material attachment	Visual check	No foreign matter sticking	Remove clean	

Refer to the following for the model names of the protection sheet or the ightarrow GT11 Handy GOT User's Manual

4.2 Periodic Inspection

Yearly or half-yearly inspection items The following inspection should also be performed when equipment has been

No.	Inspection Item		Inspection Method	Criterion	Action
1	Surrounding environment	Ambient temperature	Make measurement	0 to 40°C	For use in control panel, temperature inside control
		Ambient humidity	with thermometer or hygrometer	10 to 90%RH	
		Atmosphere	Measure corrosive gas	No corrosive gas	temperature
2	Power supply voltage check		24V DC Measure voltage across terminals.	20.4 to 26.4V DC	Change supply power
3	Mounting status	Looseness	Move module	Should be mounted firmly	Retighten screws
		Dirt, foreign matter	Visual check	No dirt, foreign matter sticking	Remove, clean
4	Connection status	Loose terminal screws	Retighten screws with screwdriver	Not loose	Retighten terminal screws
		Proximate solderless terminals	Visual check	Proper intervals	Correct
		Loose connectors	Visual check	Not loose	Retighten connector fixing screws
5	Battery		Check the system alarm (error code: 500) report on the Alarm Information screen	(Preventive maintenance)	Replace with new battery when the current battery has reached the specified life span, even if battery voltage is not displayed.

4.3 Battery Replacement

The battery backs up clock data, alarm history and recipe data. Screen data is stored in the flash memory and data is retained even if the battery is dead.

Battery model name



Battery replacement procedure

1) Turn the GOT power off. 2) Loosen the environmental protection back cover screws at four points on GOT rear face to remove the cov



 Disconnect the old battery connector and insert the new battery connector within 30s.



How to confirm production year and month The production year and month of the battery built in the purchased GOT can be confirmed by the production No. (S/N) marked on the GOT main unit.

(**I**) :

<Jan., 2010 or later>

7-digit

Example nameplate

(manufacture's serial number 1010001) Hardware version

Œ *Actual product nameplate differs from the example shown above. <Dec., 2009 or before>

1010001 Control number - Control names. Month (example: Jan.). 1 to 9: Jan. to Sep., X: Oct., Y: Nov., Z: Dec. - Year (example: 2010) Lot two digit of year Last two digit of year

Last digit of year The production date of the optional replacement battery can be confirmed by the lot No. marked on the nameplate (label) affixed on the battery.



「电器电子产品有害物质限制使用标识要求」的表示方式



Note: This symbol mark is for China only. 含有有害6物质的名称,含有量,含有部品

本产品中所含有的有害6物质的名称,含有量,含有部品如下表 所示。

产品中有害物质的名称及含量

部件名称		有害物质					
		铅 (Pb)	状 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴 二苯醚 (PBDE)
	外壳	0	0	0	0	0	0
見テ嬰	印刷基板	\times	0	0	0	0	0
GOT	背光灯 (CCFL)	0	×	0	0	0	0
	电缆	\times	0	0	0	0	0

本表格依据SJ/T 11364的规定编制。

〇:表示该有害物质在该部件所有均质材料中的含量均在GB/T

26572规定的限量要求以下。 ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/ T 26572规定的限量要求。



6) Attach the environmental protection back cover and tighten the screws. Tightening torque: 36 to 48 N• cm

7) Turn the GOT power on.

Of the details of power on.
 Check if the battery condition is normal with the utility.
 Refer to the following for the details of battery status display.
 → GT11 Handy GOT User's Manual



Battery life Approximate battery life: 5 years (ambient temperature: 25°C) Battery replacement: In 4 to 5 years

Approximate life is 5 years, but life may be shorter depending on the ambient temperature, therefore, note that the battery must be replaced in 4 to 5 years. Make sure to purchase a new battery as needed as it self-discharges.

sure to purchase a new second γ . Battery status can be confirmed on a GOT utility screen. For details of battery status or how to output alarm, refer to the following: \rightarrow GT11 Handy GOT User's Manual

5. Cautions on Using Emergency Stop Switch

 When using the emergency stop switch in the handy GOT, judge the validity to use the emergency stop switch in accordance with the risk assessment in your system. 2) When using the parallel circuit (which disables the emergency stop status while the handy GOT is removed), the system may not conform to the safety standards. Check the safety standards required in the system, and then judge the validity to use the emergency stop switch.

Notification of CE marking

The following products have shown compliance through direct testing (to the identified standards) and design analysis (forming a technical construction file) to the European Directive for Electromagnetic Compatibility (2004/108/EC) when used as directed by the appropriate documentation.

- This product is designed for use in industrial applications
- Type: Graphic Operation Terminal
- Models: GOT series

Standard	Remark		
EN61131-2 · 2007	EMI	Compliance with all relevant aspects of the standard. (Radiated Emissions)	
Programmable controllers - Equipment, requirements and tests	EMS	Compliance with all relevant aspects of the standard. (ESD, RF electromagnetic field, EFTB, Surge, RF conducted disturbances and Power frequency magnetic field)	

For more details please contact your local Mitsubishi Electric sales site. For details of CE marking, refer to the following.

 \rightarrow GT11 Handy GOT User's Manual

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty

Warranty Exclusion of loss in opportunity and secondary loss from warranty liability Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- Mitsubishi. (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products. (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products. (4) Replacement by the user, maintenance of on-site equipment, start-up test run and the tracks.
- and other tasks

A For safe use

This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life. Before using the product for special purposes such as nuclear power, electric

power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.

This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

