



MELSECNET/MINI-S3 - CC-Link Module Wiring Conversion Adapter

User's Manual

A6ADP-1MC16D
A6ADP-2MC16D
A6ADP-1MC16T

Thank you for buying the programmable controller MELSEC-A Series

Prior to use, please read both this manual and detailed manual thoroughly and familiarize yourself with the product.



MODEL	A6ADP-U
MODEL CODE	13JY20
IB(NA)-0800373-C(1612)MEE	

● SAFETY PRECAUTIONS ●

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

In this manual, the safety precautions are classified into two levels:
"⚠ WARNING" and "⚠ CAUTION".

WARNING

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[DESIGN PRECAUTIONS]

CAUTION

- Use the module in the environment described in the general specifications of the CC-Link system remote I/O module User's Manual.
Failure to do so may cause electric shock, fire, malfunction, damage or degradation of the product.

[INSTALLATION PRECAUTIONS]

CAUTION

- Fully insert a wiring conversion adapter mounting screw into a CC-Link terminal block mounting hole, and then tighten wiring conversion adapter mounting screws with specified torques.
If the A6ADP is not correctly installed or screws are not tightened properly, malfunction, failure, or drop may occur.
Tightening screws excessively may damage screws or the A6ADP, resulting in drop, short circuit, or malfunction.
- Be sure to turn off all phases of the external supply power used by the system before mounting or removing the A6ADP.
Failure to do so may damage the product.
- Do not directly touch the conductive part or electronic components of the A6ADP.
Doing so may cause the malfunction or failure of the A6ADP.

[WIRING PRECAUTIONS]

WARNING

- Be sure to turn off all phases of the external supply power used by the system before wiring.
Failure to do so may cause an electric shock or damage of product.
- Before energizing and operating the system after wiring, be sure to attach the terminal cover supplied with the product.
Failure to do so may cause an electric shock.

[WIRING PRECAUTIONS]

CAUTION

- Tighten terminal screws within the specified torque range.
If a terminal screw is too loose, short circuit, fire, or malfunction may occur.
If too tight, it may damage screws or a module, resulting in drop, short circuit, or malfunction.
- Carefully prevent foreign matter such as dust or wire chips from entering the module.
Failure to do so may cause fire, failure, or malfunction.
- Tighten unused terminal screws within tightening torque range (42 to 50N·cm).
Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque.
If any solderless space terminal is used, it may be disconnected when the terminal screw becomes loose, resulting in failure.

[STARTUP AND MAINTENANCE PRECAUTIONS]

WARNING

- Do not touch terminals while power is ON.
Doing so may cause an electric shock.
- Turn off all phases of the external supply power used by the system before cleaning the module or retightening a terminal screw or a wiring conversion adapter mounting screw.
Failure to do so may cause an electric shock.
If a terminal screw is too loose, it may cause a short circuit or malfunction.
If too tight, it may damage screws or a module, resulting in drop, short circuit, or malfunction.
- Do not disassemble or modify the A6ADP.
Doing so may cause failure, malfunction, injury, or fire.
- Do not drop or apply any strong impact to the module.
Doing so may damage the module.
- Turn off all phases of the external supply power used by the system before mounting or removing the A6ADP.
Failure to do so may cause failure or malfunction.

[STARTUP AND MAINTENANCE PRECAUTIONS]

WARNING

- Do not mount or remove the terminal block or the A6ADP more than 50 times after the first use of the product.
(IEC 61131-2 compliant)

CAUTION

- Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.
Failure to do so may cause a failure or malfunction of the module.

[DISPOSAL PRECAUTIONS]

CAUTION

- When disposing of the product, treat it as industrial waste.

● CONDITIONS OF USE FOR THE PRODUCT ●

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
 - i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.

- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

 - Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
 - Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
 - Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

REVISIONS

*The manual number is given on the bottom right of the cover.

Print Date	*Manual Number	Revision				
Mar., 2007	IB(NA)-0800373-A	First printing				
Dec., 2011	IB(NA)-0800373-B	<table border="1"><tr><td>Correction</td></tr><tr><td>COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES</td></tr><tr><td>Addition</td></tr><tr><td>SAFETY PRECAUTIONS(Chinese), CONDITIONS OF USE FOR THE PRODUCT</td></tr></table>	Correction	COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES	Addition	SAFETY PRECAUTIONS(Chinese), CONDITIONS OF USE FOR THE PRODUCT
Correction						
COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES						
Addition						
SAFETY PRECAUTIONS(Chinese), CONDITIONS OF USE FOR THE PRODUCT						
Dec., 2016	IB(NA)-0800373-C	<table border="1"><tr><td>Correction</td></tr><tr><td>Chapter 1, Section 2.2, Chapter 4, 5, 6</td></tr></table>	Correction	Chapter 1, Section 2.2, Chapter 4, 5, 6		
Correction						
Chapter 1, Section 2.2, Chapter 4, 5, 6						

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

CONTENTS

1. Overview	1
2. Performance Specification	2
2.1 Performance specifications	2
2.2 Specifications of terminal number sheet.....	2
3. Part Names	3
4. Procedures for Replacement	4
5. Precautions	5
6. External Dimensions	6

Generic terms and abbreviations

Unless otherwise specified, this manual uses the following generic terms and abbreviations to explain the MELSECNET/MINI-S3 - CC-Link module wiring conversion adapter.

Generic name/ Abbreviation	Description
A6ADP	Generic name for the A6ADP-1MC16D/ A6ADP-2MC16D/ A6ADP-1MC16T type MELSECNET/MINI-S3 - CC-Link module wiring conversion adapter
A6ADP-1MC16D	Abbreviation of the A6ADP-1MC16D type MELSECNET/MINI-S3 - CC-Link module wiring conversion adapter
A6ADP-2MC16D	Abbreviation of the A6ADP-2MC16D type MELSECNET/MINI-S3 - CC-Link module wiring conversion adapter
A6ADP-1MC16T	Abbreviation of the A6ADP-1MC16T type MELSECNET/MINI-S3 - CC-Link module wiring conversion adapter
CC-Link remote I/O module	Abbreviation of the CC-Link system remote I/O module
MINI-S3 module	Abbreviation of the MELSECNET/MINI-S3 remote I/O module

About the Manuals

The following manuals are also related to this product.
Order them by referring to the table below as necessary.

Manual name	Manual Number (Model code)
CC-Link System Remote I/O Module User's Manual This manual explains the specifications and external wiring for the I/O module of the CC-Link system remote I/O module. (Sold separately)	IB-66728 (13J878)
A2C, MELSECNET/MINI-S3 I/O MODULE User's Manual This manual explains the specifications of I/O module that can be connected to the MELSECNET/MINI-S3. (Sold separately)	SH-3546 (13JL00)
Transition from MELSECNET/MINI-S3, A2C(I/O) to CC-Link Handbook This manual explains the comparison of performance specifications and functions of the MELSECNET/MINI-S3, A2C(I/O).	L-08061ENG

COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES

(1) Method of ensuring compliance

To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

- User's manual for the CPU module or head module used
- Safety Guidelines

(This manual is included with the CPU module, base unit, or head module.)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

(2) Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the manuals listed under (1).

1. Overview

This manual describes the specifications, part names, procedures for replacement, and external dimensions for the A6ADP-1MC16D/ A6ADP-2MC16D/ A6ADP-1MC16T type MELSECNET/MINI-S3 - CC-Link module wiring conversion adapter.

For the general specifications, refer to the following manual.

- CC-Link System Remote I/O Module User's Manual.

The A6ADP is a wiring conversion adapter where a terminal block for the existing MINI-S3 module can be used in the CC-Link remote I/O module.

Using the A6ADP enables to save the trouble of rewiring and prevent from miswiring in case of replacement.

However, in the case of changing from a communication cable into a CC-Link dedicated cable and wiring for communication/power supply, rewiring according to the specifications of the CC-Link remote I/O module is necessary.

Table 1.1 Table compatible with applied A6ADP

MINI-S3 module	CC-Link remote I/O module	Applied A6ADP
AJ35TB1-16D	AJ65BTB1-16D	A6ADP-1MC16D
AJ35TB2-16D	AJ65BTB2-16D	A6ADP-2MC16D
AJ35TB1-16T	AJ65BTB1-16T	A6ADP-1MC16T

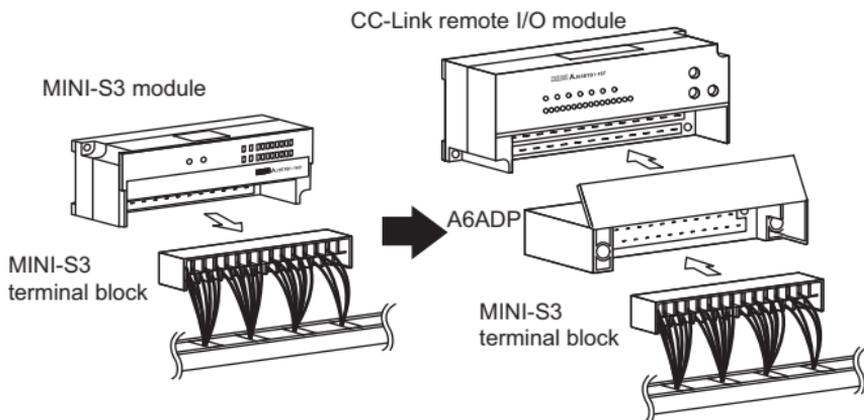


Figure 1.1 Schematic diagram for MINI-S3 - CC-Link module replacement

2. Performance Specification

2.1 Performance specifications

The following describes the performance specifications of the A6ADP.

Model name		A6ADP-1MC16D	A6ADP-2MC16D	A6ADP-1MC16T
External dimensions	W	137.9mm (5.43inch)	183.4mm (7.22inch)	137.9mm (5.43inch)
	H	28.1mm (1.11inch)	28.1mm (1.11inch)	28.1mm (1.11inch)
	D	59.15mm (2.33inch)	59.15mm (2.33inch)	59.15mm (2.33inch)
Weight		0.15kg	0.20kg	0.15kg
Adapter or terminal block mounting screw		M4 screw Tightening torque range: 78 to 118N•cm		
CTL+terminal screw		-	-	M3 screw Tightening torque range: 49 to 78.4N•cm
Applicable solderless terminal		-	-	RAV-1.25-3 *1 V1.25-3N, V2-MS3 TGV1.25-3N, TGV2-3N, V1.25-FS3, V2-FS3 RAP1.25-3ML, RAP2-3SL
Wire size		-	-	0.75 to 2mm ²

*1 Mounting one terminal only

2.2 Specifications of terminal number sheet

(1) A6ADP-1MC16D

1	3	5	7	9	11	13	15	17	19	21	23	25	
DA	DG	-24V	24G	X0	X2	X4	X6	COM	X8	XB	XD	XF	NC
2	4	6	8	10	12	14	16	18	20	22	24	26	
DB	SLD	FG	NC	X1	X3	X5	X7	X8	XA	XC	XE	COM	BTB1-16D

(2) A6ADP-2MC16D


1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33
DA	DG	-24V	24G	COMA	X0	X1	COMB	X4	X5	COMC	X8	X9	COMD	XC	XD	COMF
2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34
DB	SLD	FG	NC	COMG	COMH	X2	X3	COMI	X6	X7	COMJ	XA	XB	COMK	XE	XF

(3) A6ADP-1MC16T

1	3	5	7	9	11	13	15	17	19	21	23	25	
DA	DG	-24V	24G	Y0	Y2	Y4	Y6	COM	Y8	YB	YD	YF	CTL+
2	4	6	8	10	12	14	16	18	20	22	24	26	
DB	SLD	FG	NC	Y1	Y3	Y5	Y7	Y8	YA	YC	YE	COM-	BTB1-16T

3. Part Names

This chapter describes part names of the A6ADP.

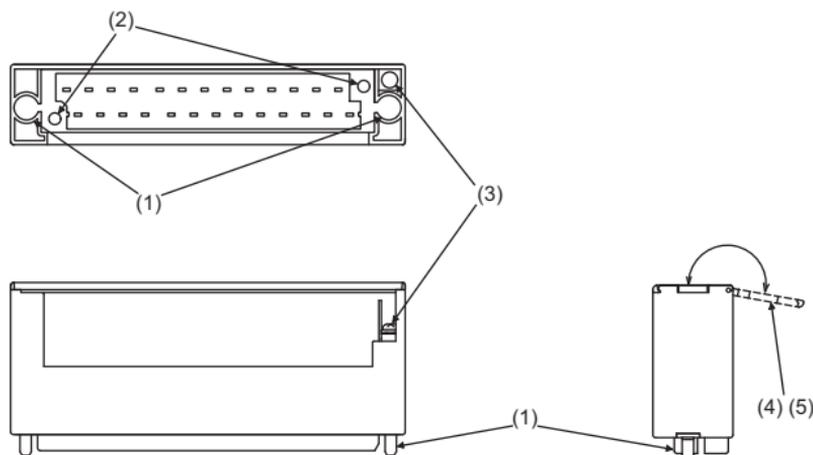



No.	Name	Application
(1)	Wiring conversion adapter mounting screw	Screw for mounting the A6ADP to a CC-Link remote I/O terminal block base (M4 screw)
(2)	Terminal block mounting screw	Screw for mounting the MINI-S3 terminal block to the A6ADP (M4 screw)
(3)	CTL+ terminal screw	Terminal screw for external supply power of the output part (M3 screw) (For replacing the output module only)
(4)	Terminal cover	Terminal block cover dedicated to the A6ADP (open/close)
(5)	Terminal number sheet	Terminal number sheet dedicated to the A6ADP

4. Procedures for Replacement

This chapter describes the procedures for replacing the MINI-S3 module with the CC-Link remote I/O module, including the A6ADP installation.

For the mounting hole measurement or the wiring of lines for communication or power supply, refer to the following manual.

- Transition from MELSECNET/MINI-S3, A2C(I/O) to CC-Link Handbook

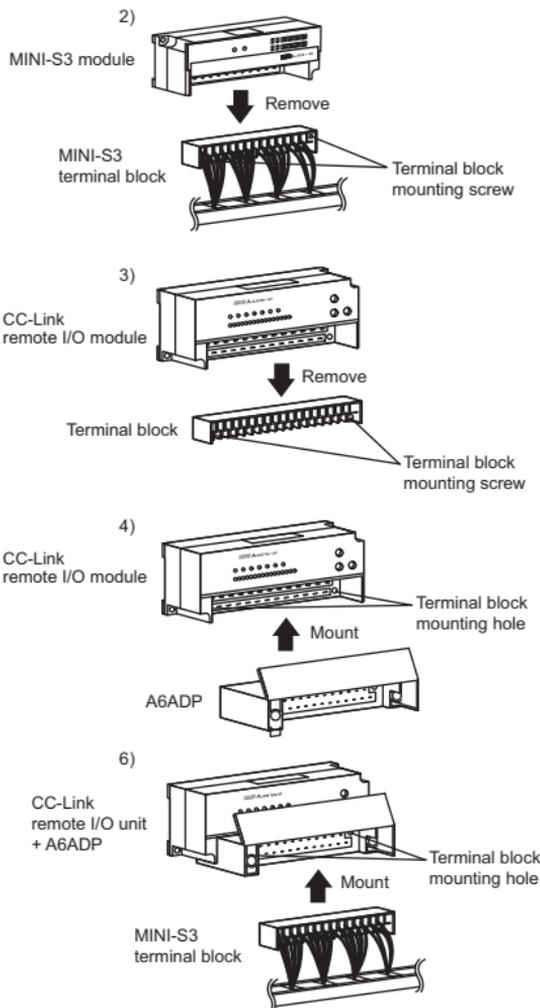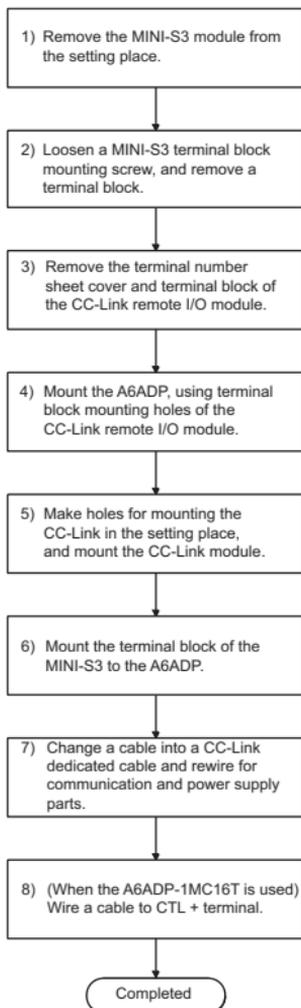


5. Precautions


- (1) When adding the A6ADP to a CC-Link remote I/O module, external dimensions are increased in width (5.1 mm (0.20 inch)) and depth (28.5 mm (1.12 inch)).

The following describes the full view of the CC-Link remote I/O module (describes in dotted line) which mounts the A6ADP (describes in full line).

(a) A6ADP-1MC16D/A6ADP-1MC16T

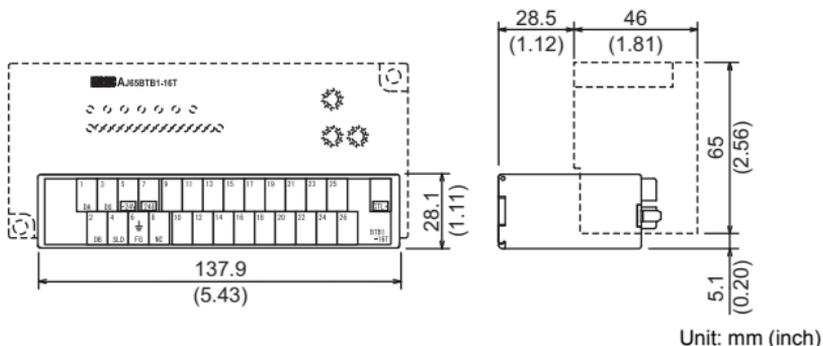

(b) A6ADP-2MC16D

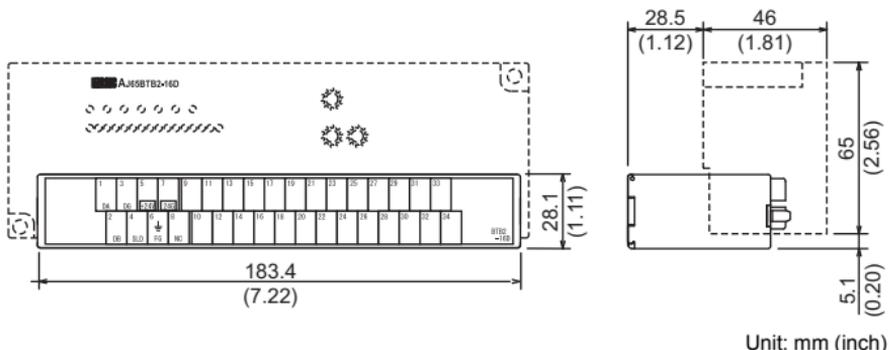


- (2) When using a CC-Link dedicated cable compatible with CC-Link Ver. 1.10, up to 32 remote I/O modules can be connected. (When using CC-Link dedicated cables not compatible with CC-Link Ver. 1.10, there is no restriction on the number of the remote I/O modules to be connected.)


6. External Dimensions

This chapter describes the external dimension diagram of the A6ADP. The dotted line part is a full view of the CC-Link remote I/O module which mounts the A6ADP.

(1) A6ADP-1MC16D/A6ADP-1MC16T

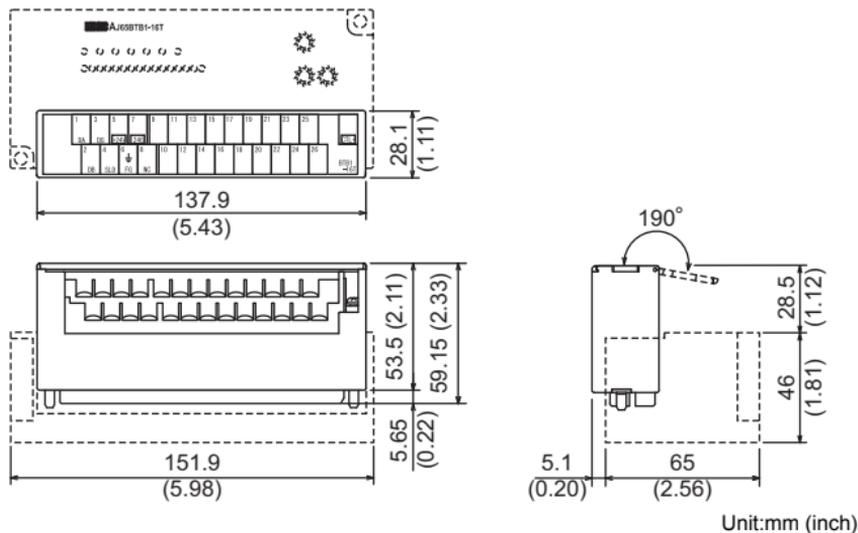

(2) A6ADP-2MC16D

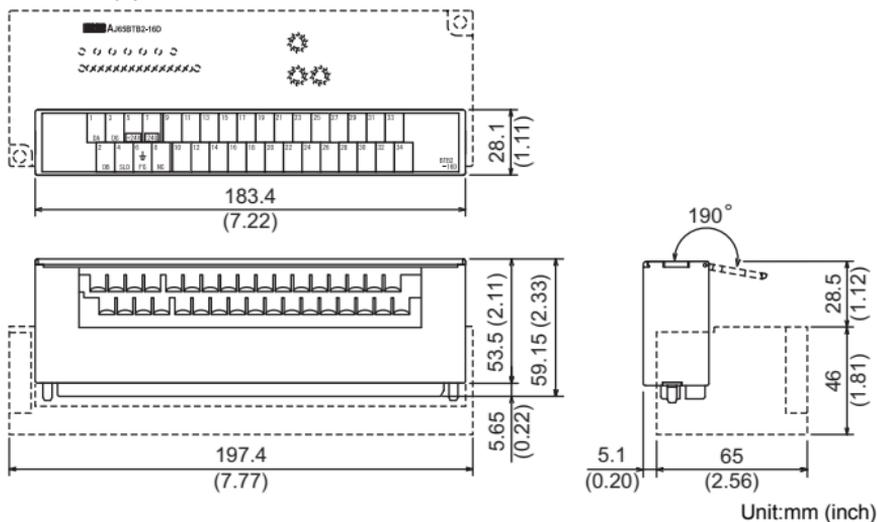

WARRANTY

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

Country/ Region	Sales office/ Tel	Country/ Region	Sales office/ Tel
USA	MITSUBISHI ELECTRIC AUTOMATION, INC. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A. Tel : +1-847-478-2100	Turkey	MITSUBISHI ELECTRIC TURKEY A.Ş. Ümraniye Branch Serifali Mahallesi Nutuk Sokak No:5, TR-34775 Ümraniye/Istanbul, Turkey Tel : +90-216-526-3990
Mexico	MITSUBISHI ELECTRIC AUTOMATION, INC. Mexico Branch Mariano Escobedo #69, Col. Zona Industrial, Tlalpanpanita Edo. Mexico, C.P.54030 Tel : +52-55-3067-7500	UAE	MITSUBISHI ELECTRIC EUROPE B.V. Dubai Branch Dubai Silicon Oasis, P.O.BOX 341241, Dubai, U.A.E. Tel : +971-4-3724716
Brazil	MITSUBISHI ELECTRIC DO BRASIL COMÉRCIO E SERVIÇOS LTDA. Avenida Adelinno Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazil Tel : +55-11-4689-3000	South Africa	ADROIT TECHNOLOGIES 20 Waterford Office Park, 189 Witkoppen Road, Fourways, South Africa Tel : +27-11-658-8100
Germany	MITSUBISHI ELECTRIC EUROPE B.V. German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Tel : +49-2102-486-0	China	MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Shanghai, China Tel : +86-21-2322-3030
UK	MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K. Tel : +44-1707-28-8780	Taiwan	SETSUYO ENTERPRISE CO., LTD. 6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan Tel : +886-2-2299-2499
Ireland	MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount, Dublin 24, Ireland Tel : +353-1-4198800	Korea	MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. 7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea Tel : +82-2-3660-9530
Italy	MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Centro Direzionale Colleoni-Palazzo Sirio Viale Colleoni 7, 20864 Agrate Brianza(Milano) Italy Tel : +39-039-60531	Singapore	MITSUBISHI ELECTRIC ASIA PTE. LTD. 307, Alexandra Road, Mitsubishi Electric Building, Singapore 159943 Tel : +65-6473-2308
Spain	MITSUBISHI ELECTRIC EUROPE, B.V. Spanish Branch Carretera de Rubí, 76-80-Appdo. 420, 08190 Sant Cugat del Vallés (Barcelona), Spain Tel : +34-935-65-3131	Thailand	MITSUBISHI ELECTRIC FACTORY AUTOMATION (THAILAND) CO., LTD. 12th Floor, SV City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwangs Bangpongpanng, Khet Yannawa, Bangkok 10120, Thailand Tel : +66-2682-6522
France	MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets, 92741 Nanterre Cedex, France Tel : +33-1-55-68-55-68	Vietnam	MITSUBISHI ELECTRIC VIETNAM COMPANY LIMITED Hanoi Branch 6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi, Vietnam Tel : +84-4-3937-8075
Czech Republic	MITSUBISHI ELECTRIC EUROPE B.V. Czech Branch Avenir Business Park, Radlicka 751/113e, 158 00 Praha5, Czech Republic Tel : +420-251-551-470	Indonesia	PT. MITSUBISHI ELECTRIC INDONESIA Gedung Jaya 11th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel : +62-21-3192-6461
Poland	MITSUBISHI ELECTRIC EUROPE B.V. Polish Branch ul. Krakowska 50, 32-083 Balice, Poland Tel : +48-12-347-65-00	India	MITSUBISHI ELECTRIC INDIA PVT. LTD. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune-411026, Maharashtra, India Tel : +91-20-2710-2000
Sweden	MITSUBISHI ELECTRIC EUROPE B.V. (Scandinavia) Fjellevägen 8, SE-22736 Lund, Sweden Tel : +46-8-625-10-00	Australia	MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777
Russia	MITSUBISHI ELECTRIC (RUSSIA) LLC St. Petersburg Branch Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; 195027 St. Petersburg, Russia Tel : +7-812-633-3497		

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy,
Trade and Industry for service transaction permission.

Specifications subject to change without notice.