

# **INSTRUCTION MANUAL (Applied)**

# FR-A720-00030 to 03460-NA FR-A740-00015 to 09620-NA

**WIRING** 80.00 PRECAUTIONS FOR USE OF THE INVERTER **PARAMETERS** PROTECTIVE FUNCTIONS PRECAUTIONS FOR MAINTENANCE AND INSPECTION

**SPECIFICATIONS** 

**OUTLINE** 

Thank you for choosing this Mitsubishi Inverter.

This Instruction Manual (applied) provides instructions for advanced use of the FR-A700 series inverters.

Incorrect handling might cause an unexpected fault. Before using the inverter, always read this instruction manual and the Installation Guideline [IB-0600254ENG] packed with the product carefully to use the equipment to its optimum.

#### This section is specifically about safety matters

Do not attempt to install, operate, maintain or inspect the inverter until you have read through instruction manual and appended documents carefully and can use the equipment correctly. Do not use the inverter until you have a full knowledge of the equipment, safety information and instructions. In this instruction manual, the safety instruction levels are classified into "WARNING" and "CAUTION".

Assumes that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

Assumes that incorrect handling may cause hazardous conditions, resulting in medium or slight injury, or may cause physical damage only.

Note that even the ACAUTION level may lead to a serious consequence according to conditions. Please follow strictly the instructions of both levels because they are important to personnel safety.

#### 1. Electric Shock Prevention

#### **AWARNING**

- While power is on or when the inverter is running, do not open the front cover. Otherwise you may get an electric shock.

  Do not run the inverter with the front cover or wiring cover removed.

  Otherwise, you may access the exposed high-voltage terminals or the charging part of the circuitry and get an electric shock.

  Even if power is off, do not remove the front cover except for wiring or periodic inspection. You may access the charged inverter circuits and get an electric shock.

  Before starting wiring or inspection, check to make sure that the operation panel indicator is off, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. The capacitor is charged with high voltage for some time after power off and it is dangerous. it is dangerous.
- This inverter must be earthed (grounded). Earthing (Grounding) must conform to This inverter must be earned (gloudous). Earthing (Gloudning) must conform to the requirements of national and local safety regulations and electrical codes. (JIS, NEC section 250, IEC 536 class 1 and other applicable standards) Any person who is involved in the wiring or inspection of this equipment should be fully competent to do the work.

  Always install the inverter before wiring. Otherwise, you may get an electric shock of the inverter before wiring.
- or be injured.
- or be injured.

  Perform setting dial and key operations with dry hands to prevent an electric shock. Otherwise you may get an electric shock.

  Do not subject the cables to scratches, excessive stress, heavy loads or pinching. Otherwise you may get an electric shock.

  Do not replace the cooling fan while power is on. It is dangerous to replace the cooling fan while power is on.

  Do not touch the printed circuit board with wet hands. You may get an electric shock.

#### **ACAUTION** 2. Fire Prevention

- Mount the inverter to non-combustible surface such as metal or concrete.

  Mounting it to or near combustible material can cause a fire.

  If the inverter has become faulty, switch off the inverter power.

  A continuous flow of large current could cause a fire.

  When using a brake resistor, make up a sequence that will turn off power when an alarm signal is output.
  - Otherwise, the brake resistor may excessively overheat due to damage of the brake transistor and such, causing a fire.

    Do not connect a resistor directly to the DC terminals P/+, N/-. This could cause a fire.

#### 

- Apply only the voltage specified in the instruction manual to each terminal. Otherwise, burst, damage, etc. may occur. Ensure that the cables are connected to the correct terminals. Otherwise, burst,
- damage, etc. may occur. Always make sure that polarity is correct to prevent damage, etc. Otherwise While power is on or for some time after power-off, do not touch the inverter as it
- is hot and you may get burnt

#### 4. Additional Instructions

Also note the following points to prevent an accidental failure, injury, electric

#### (1) Transportation and installation

#### **⚠CAUTION**

- When carrying products, use correct lifting gear to prevent injury. Do not stack the inverter boxes higher than the number recommended
- Ensure that installation position and material can withstand the weight of the inverter. Install according to the information in the instruction manual.

  Do not install or operate the inverter if it is damaged or has parts missing. This can
- When carrying the inverter, do not hold it by the front cover or setting dial; it may
- fall off or fail.

  Do not stand or rest heavy objects on the product.
- Check the inverter mounting orientation is correct.

  Prevent other conductive bodies such as screws and metal fragments or other flammable substance such as oil from entering the inverter.
- As the inverter is a precision instrument, do not drop or subject it to impact. Use the inverter under the following environmental conditions. Otherwise inverter may be damaged.
- LD, ND (initial setting), HD -10°C to +50°C (14°F to 122°F)(non-freezing) temperature 10°C to +40°C (14°F to 104°F)(non-freezing) SLD 90% RH or less (non-condensing) Ambient humidity Storage temperature -20°C to +65°C \*1 (-4°F to 149°F) Indoors (free from corrosive gas, flammable gas, oil Atmosphere mist, dust and dirt) Maximum 1000m (3280.80feet) above sea level for standa operation. After that derate by 3% for every extra 500m Altitude, vibration de, vibration (1640.40feet) up to 2500m (8202feet) (92%) 5.9m/s<sup>2</sup> or less 2 (conforming to JIS C 60068-2-6)

  Temperature applicable for a short time, e.g. in transit.

  - \*2 2.9m/s<sup>2</sup> or less for the FR-A740-03250 or more.

#### **<b> ▲ CAUTION** (2) Wiring

- Do not install a power factor correction capacitor or surge suppressor/radio noise filter (capacitor type filter) on the inverter output side.
- The connection orientation of the output cables U, V, W to the motor will affect the direction of rotation of the motor

#### (3) Test operation and adjustment

#### **⚠CAUTION**

Before starting operation, confirm and adjust the parameters. A failure to do so may cause some machines to make unexpected motions.

#### (4) Operation

#### **<b>⚠WARNING**

- When you have chosen the retry function, stay away from the equipment as it will restart suddenly after an alarm stop
- The key is valid only when the appropriate function setting has been made. Prepare an emergency stop switch separately.
- Make sure that the start signal is off before resetting the inverter alarm. A failure to do so may restart the motor suddenly. The load used should be a three-phase induction motor only. Connection of any other electrical equipment to the inverter output may damage the inverter as well as
- equipment. Performing pre-excitation (LX signal and X13 signal) under torque control (real sensorless vector control) may start the motor running at a low speed even when the start command (STF or STR) is not input. The motor may run also at a low speed when the speed limit value = 0 with a start command input. Perform pre-excitation after making sure that there will be no problem in safety if the motor runs
- Do not modify the equipment.
- Do not perform parts removal which is not instructed in this manual. Doing so may lead to fault or damage of the inverter.

#### **⚠CAUTION**

- The electronic thermal relay function does not guarantee protection of the motor
- from overheating.

  Do not use a magnetic contactor on the inverter input for frequent starting/ stopping of the inverter.
- Use a noise filter to reduce the effect of electromagnetic interference. Otherwise nearby electronic equipment may be affected.

  Take measures to suppress harmonics. Otherwise power supply harmonics from the inverter may heat/damage the power factor correction capacitor and
- when a 400V class motor is inverter-driven, please use an insulation-enhanced motor or measures taken to suppress surge voltages. Surge voltages attributable to the wiring constants may occur at the motor terminals, deteriorating the insulation of the motor.
- When parameter clear or all clear is performed, reset the required parameters
- when parameter clear or all clear is performed, reset the required parameters before starting operations. Each parameter returns to the initial value. The inverter can be easily set for high-speed operation. Before changing its setting, fully examine the performances of the motor and machine. In addition to the inverter's holding function, install a holding device to ensure
- sarety.

  Before running an inverter which had been stored for a long period, always perform inspection and test operation.

  For prevention of damage due to static electricity, touch nearby metal before touching this product to eliminate static electricity from your body.

#### 

- Provide a safety backup such as an emergency brake which will prevent the
- machine and equipment from hazardous conditions if the inverter fails. When the breaker on the inverter input side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter, etc. Identify the cause of the trip
- then remove the cause and power on the breaker.

  When the protective function is activated, take the corresponding corrective action, then reset the inverter, and resume operation

#### (6) Maintenance, inspection and parts replacement

#### **<b>⚠CAUTION**

Do not carry out a megger (insulation resistance) test on the control circuit of the

#### (7) Disposing of the inverter

#### **ACAUTION**

Treat as industrial waste.

#### General instructions

Many of the diagrams and drawings in this instruction manual show the inverter without a cover, or partially open. Never run the inverter in this status. Always replace the cover and follow this instruction manual when operating the

# CONTENTS ————

1	OU	TLINE	1
	1.1	Product checking and parts identification	2
	1.2	Inverter and peripheral devices	3
	1.2.	1 Peripheral devices	4
	1.3	Method of removal and reinstallation of the front cover	
	1.3	Method of removal and remstallation of the front cover	
	1.4	Installation of the inverter and enclosure design	8
	1.4.	1 Inverter installation environment	8
	1.4.	2 Cooling system types for inverter enclosure	10
	1.4.	3 Inverter placement	10
2	WI	RING	13
	2.1	Wiring	14
	2.1.	1 Terminal connection diagram	12
	2.1.	-	
	2.2	Main circuit terminal specifications	
	2.2.	1 Specification of main circuit terminal	16
	2.2.	2 Terminal arrangement of the main circuit terminal, power supply and the motor wiring	17
	2.2.	3 Cables and wiring length	23
	2.2.	When connecting the control circuit and the main circuit separately to the power supply (separate power)	27
	2.3	Control circuit specifications	29
	2.3.	1 Control circuit terminals	29
	2.3.	2 Changing the control logic	32
	2.3.	3 Control circuit terminal layout	34
	2.3.	4 Wiring instructions	35
	2.3.	When connecting the operation panel using a connection cable	36
	2.3.	6 RS-485 terminal block	36
	2.3.	7 Communication operation	36
	2.4	Connection of motor with encoder (vector control)	37
	2.5	Connection of stand-alone option units	45
	2.5.	1 Connection of the dedicated external brake resistor (FR-ABR) (FR-A720-00900 (FR-A740-00430) or less)	45
	2.5.	2 Connection of the brake unit (FR-BU/MT-BU5)	48
	2.5.	3 Connection of the brake unit (BU type)	50
	25	4 Connection of the high power factor converter (FR-HC/MT-HC)	50

	2.5.5	Connection of the power regeneration common converter (FR-CV) (FR-A720-02150 (FR-A740-01100) or less)	52
	2.5.6	Connection of power regeneration converter (MT-RC) (FR-A720-02880 (FR-A740-01440) or more)	53
	2.5.7	Connection of the power factor improving DC reactor (FR-HEL)	53
3	PRE	CAUTIONS FOR USE OF THE INVERTER	55
	3.1 N	oise and leakage currents	56
	3.1.1	Leakage currents and countermeasures	56
	3.1.2	Inverter-generated noises and their reduction techniques	58
	3.1.3	Power supply harmonics	60
	3.2 In	stallation of a reactor	61
	3.3 P	ower-off and magnetic contactor (MC)	62
	3.4 In	verter-driven 400V class motor	63
	3.5 P	recautions for use of the inverter	64
4	PAR	AMETERS	67
	4.1 0	peration panel (FR-DU07)	68
	4.1.1	Parts of the operation panel (FR-DU07)	
	4.1.2	Basic operation (factory setting)	
	4.1.3 4.1.4	Change the parameter setting value Setting dial push	
		arameter List	
	4.2.1	Parameter list	71
	4.3 C	ontrol mode	88
	4.3.1	What is vector control?	
	4.3.2	Change the control method (Pr. 80, Pr. 81, Pr. 451, Pr. 800)	92
	4.4 S	peed control by real sensorless vector control, vector control	96
	4.4.1	Setting procedure of real sensorless vector control (speed control)	97
	4.4.2	Setting procedure of vector control (speed control)	98
	4.4.3	Torque limit level setting for speed control (Pr. 22, Pr. 803, Pr. 810 to Pr. 817, Pr. 858, Pr. 868, Pr. 874)	99
	4.4.4	To perform high accuracy/fast response operation (gain adjustment of real sensorless vector control and vector control) (Pr. 818 to Pr. 821, Pr. 830,	
		Pr. 831, Pr. 880)	
	4.4.5 4.4.6	Speed feed forward control, model adaptive speed control (Pr. 828, Pr. 877 to Pr. 881)  Torque biases (Pr. 840 to Pr. 848)	
	Ŧ. <b>Ť</b> .∪	101940 Diagos (1 1. 070 to 1 1. 070)	113

4.4.7	Prevent the motor from overrunning (Pr. 285, Pr. 853, Pr. 873)	116
4.4.8	Notch filter (Pr. 862, Pr. 863)	117
4.5 To	orque control by real sensorless vector control	118
4.5.1	Torque control	118
4.5.2	Setting procedure of real sensorless vector control (torque control)	120
4.5.3	Setting procedure of vector control (torque control)	121
4.5.4	Torque command (Pr. 803 to Pr. 806)	122
4.5.5	Speed limit (Pr. 807 to Pr. 809)	124
4.5.6	Gain adjustment of torque control (Pr. 824, Pr. 825, Pr. 834, Pr. 835)	127
4.6 P	osition control by vector control	129
4.6.1	Position control	129
4.6.2	Conditional position feed function by contact input (Pr. 419, Pr. 464 to Pr. 494)	131
4.6.3	Position control (Pr. 419, Pr. 428 to Pr. 430) by inverter pulse train input	134
4.6.4	Setting range of the electronic gear (Pr. 420, Pr. 421, Pr. 424)	136
4.6.5	Setting of positioning adjustment parameter (Pr. 426, Pr. 427)	137
4.6.6	Gain adjustment of position control (Pr. 422, Pr. 423, Pr. 425)	138
4.6.7	Trouble shooting for when position control is not exercised normally	140
4.7 A	djustment of real sensorless vector control, vector control	141
4.7.1	Speed detection filter and torque detection filter (Pr. 823, Pr. 827, Pr. 833, Pr. 837)	141
4.7.2	Excitation ratio (Pr. 854)	142
4.8 A	djust the output torque of the motor (current)	143
4.8.1	Manual torque boost (Pr. 0, Pr. 46, Pr. 112)	143
4.8.2	Advanced magnetic flux vector control (Pr. 71, Pr. 80, Pr. 81, Pr. 89, Pr. 450, Pr. 451, Pr. 453, Pr. 454, Pr. 569, Pr. 800)	145
4.8.3	Slip compensation (Pr. 245 to Pr. 247)	148
4.8.4	Stall prevention operation (Pr. 22, Pr. 23, Pr. 48, Pr. 49, Pr. 66, Pr. 114, Pr. 115, Pr. 148, Pr. 149, Pr. 154, Pr. 156, Pr. 157, Pr. 858, Pr. 868)	149
4.8.5	Multiple rating (Pr.570)	154
4.9 Li	mit the output frequency	156
4.9.1	Maximum/minimum frequency (Pr. 1, Pr. 2, Pr. 18)	156
4.9.2	Avoid mechanical resonance points (Frequency jump) (Pr. 31 to Pr. 36)	157
4.10 S	et V/F pattern	158
4.10.1	Base frequency, voltage (Pr. 3, Pr. 19, Pr. 47, Pr. 113)	158
4.10.2	Load pattern selection (Pr. 14)	160
4.10.3	Elevator mode (automatic acceleration/deceleration) (Pr. 61, Pr. 64, Pr. 292)	162
4.10.4	Adjustable 5 points V/F (Pr. 71, Pr. 100 to Pr. 109)	164
4.11 Fı	requency setting by external terminals	165

4.11.1	Multi-speed setting operation (Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239)	165
4.11.2	Jog operation (Pr. 15, Pr. 16)	167
4.11.3	Input compensation of multi-speed and remote setting (Pr. 28)	169
4.11.4	Remote setting function (Pr. 59)	169
	etting of acceleration/deceleration time and celeration/deceleration pattern	. 172
4.12.1	Setting of the acceleration and deceleration time (Pr. 7, Pr. 8, Pr. 20, Pr. 21, Pr. 44, Pr. 45, Pr. 110, Pr. 111)	172
4.12.2	Starting frequency and start-time hold function (Pr. 13, Pr. 571)	174
4.12.3	Acceleration/deceleration pattern (Pr. 29, Pr. 140 to Pr. 143, Pr. 380 to Pr. 383, Pr. 516 to Pr. 519)	175
4.12.4	Shortest acceleration/deceleration and optimum acceleration/deceleration (automatic acceleration/deceleration) (Pr. 61 to Pr. 63, Pr. 292, Pr. 293)	178
4.13 Se	election and protection of a motor	. 181
4.13.1	Motor protection from overheat (Electronic thermal relay function) (Pr. 9, Pr. 51)	181
4.13.2	Applied motor (Pr. 71, Pr. 450)	184
4.13.3	Offline auto tuning (Pr. 71, Pr. 80 to Pr. 84, Pr. 90 to Pr. 94, Pr. 96, Pr. 450, Pr. 453 to Pr. 463, Pr. 684, Pr. 859, Pr. 860)	186
4.13.4	Online auto tuning (Pr. 95, Pr. 574)	196
4.14 M	otor brake and stop opersation	. 199
4.14.1	DC injection brake and zero speed control, servo lock (LX signal, X13 signal, Pr. 10 to Pr. 12, Pr. 802, Pr. 850)	199
4.14.2	Selection of regenerative brake and DC current feeding (Pr. 30, Pr. 70)	
	Selection of regenerative brake and DC current feeding (Pr. 30, Pr. 70)	203
4.14.3		203 209
4.14.3 4.14.4	Stop selection (Pr. 250)	203 209 210
4.14.3 4.14.4 4.14.5	Stop selection (Pr. 250)	203 209 210 213
4.14.3 4.14.4 4.14.5 4.14.6	Stop selection (Pr. 250)	203 209 210 213 216
4.14.3 4.14.4 4.14.5 4.14.6	Stop selection (Pr. 250)	203 209 210 213 216
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15</b> Fu	Stop selection (Pr. 250)	203 209 210 213 216 . <b>227</b>
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2	Stop selection (Pr. 250)	203 209 210 213 216 . <b>227</b> 227 230
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2	Stop-on contact control function (Pr. 6, Pr. 48, Pr. 270, Pr. 275, Pr. 276)	203 209 210 213 216 . <b>227</b> 227 230
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2 4.15.3	Stop-on contact control function (Pr. 6, Pr. 48, Pr. 270, Pr. 275, Pr. 276)  Brake sequence function (Pr. 278 to Pr. 285, Pr. 292)  Orientation control (Pr.350 to Pr.366, Pr.369, Pr.393, Pr.396 to Pr.399)  Inction assignment of external terminal and control  Input terminal function selection (Pr. 178 to Pr. 189)  Inverter output shutoff signal (MRS signal, Pr. 17)  Condition selection of function validity by the second function selection signal (RT) and third function selection signal (X9) (RT signal, X9 signal, Pr. 155)	203 209 210 213 216 . <b>227</b> 227 230 231 232
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2 4.15.3 4.15.4	Stop-on contact control function (Pr. 6, Pr. 48, Pr. 270, Pr. 275, Pr. 276)	203 209 210 213 216 227 230 231 232 234
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2 4.15.3 4.15.4 4.15.5	Stop selection (Pr. 250)	203 209 210 213 216 227 230 231 232 234 241
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2 4.15.3 4.15.4 4.15.5 4.15.6	Stop selection (Pr. 250)	203 209 210 213 216 . <b>227</b> 227 230 231 232 234 241
4.14.3 4.14.4 4.14.5 4.14.6 <b>4.15 Fu</b> 4.15.1 4.15.2 4.15.3 4.15.4 4.15.5 4.15.6 4.15.7	Stop selection (Pr. 250)  Stop-on contact control function (Pr. 6, Pr. 48, Pr. 270, Pr. 275, Pr. 276)  Brake sequence function (Pr. 278 to Pr. 285, Pr. 292)  Orientation control (Pr.350 to Pr.366, Pr.369, Pr.393, Pr.396 to Pr.399)  Inction assignment of external terminal and control  Input terminal function selection (Pr. 178 to Pr. 189)  Inverter output shutoff signal (MRS signal, Pr. 17)  Condition selection of function validity by the second function selection signal (RT) and third function selection signal (X9) (RT signal, X9 signal, Pr. 155)  Start signal selection (terminal STF, STR, STOP, Pr. 250)  Output terminal function selection (Pr. 190 to Pr. 196)  Detection of output frequency (SU, FU, FU2, FU3, FB, FB2, FB3, LS signal, Pr. 41 to Pr. 43, Pr. 50, Pr. 116, Pr. 865)  Output current detection function (Y12 signal, Y13 signal, Pr. 150 to Pr. 153, Pr. 166, Pr. 167)	203 209 210 213 216 227 230 231 232 234 241 243 244

	4.16.1	Speed display and speed setting (Pr. 37, Pr. 144, Pr. 505, Pr. 811)	246
	4.16.2	DU/PU, FM, AM terminal monitor display selection (Pr. 52, Pr. 54, Pr. 158, Pr. 170, Pr. 171, Pr. 268, Pr. 563, Pr. 564, Pr. 891)	. 248
	4.16.3	Reference of the terminal FM (pulse train output) and AM (analog voltage output) (Pr. 55, Pr. 56, Pr. 866, Pr. 867)	. 254
	4.16.4	Terminal FM, AM calibration (Calibration parameter C0 (Pr. 900), C1 (Pr. 901), C8 (Pr. 930) to C11 (Pr. 931))	. 257
4.	17 Op	peration selection at power failure and instantaneous power failure	260
	4.17.1	Automatic restart after instantaneous power failure/flying start (Pr. 57, Pr. 58, Pr. 162 to Pr. 165, Pr. 299, Pr. 611)	. 260
	4.17.2	Power failure-time deceleration-to-stop function (Pr. 261 to Pr. 266, Pr. 294 )	. 265
4.	18 Op	peration setting at alarm occurrence	268
	4.18.1	Retry function (Pr. 65, Pr. 67 to Pr. 69)	268
	4.18.2	Alarm code output selection (Pr. 76)	270
	4.18.3	Input/output phase failure protection selection (Pr. 251, Pr. 872)	271
	4.18.4	Overspeed detection (Pr. 374)	271
	4.18.5	Encoder signal loss detection (Pr. 376)	271
	4.18.6	Fault definition (Pr. 875)	. 272
4.	19 Er	nergy saving operation and energy saving monitor	273
	4.19.1	Energy saving control (Pr. 60)	273
	4.19.2	Energy saving monitor (Pr. 891 to Pr. 899)	. 274
4.	20 M	otor noise, noise reduction	279
	4.20.1	PWM carrier frequency and Soft-PWM control (Pr. 72, Pr. 240, Pr. 260)	279
4.	21 Fr	equency/torque setting by analog input (terminal 1, 2, 4)	281
	4.21.1	Function assignment of analog input terminal (Pr. 858, Pr. 868)	. 281
	4.21.2	Analog input selection (Pr. 73, Pr. 267)	. 282
	4.21.3	Analog input compensation (Pr. 73, Pr. 242, Pr. 243, Pr. 252, Pr. 253)	285
	4.21.4	Response level of analog input and noise elimination (Pr. 74, Pr. 822, Pr. 826, Pr. 832, Pr. 836, Pr. 849)	. 287
	4.21.5	Bias and gain of frequency setting voltage (current) (Pr. 125, Pr. 126, Pr. 241, C2(Pr. 902) to C7(Pr. 905), C12(Pr. 917) to C15(Pr. 918))	. 288
	4.21.6	Bias and gain of torque (magnetic flux) setting voltage (current) (Pr. 241, C16(Pr. 919) to C19(Pr. 920), C38 (Pr. 932) to C41 (Pr. 933))	. 293
	4.21.7	4mA input check of current input (Pr. 573)	. 298
4.:	22 Mi	soperation prevention and parameter setting restriction	300
	4.22.1	Reset selection/disconnected PU detection/PU stop selection (Pr. 75)	. 300
	4.22.2	Parameter write diable selection (Pr. 77)	303
	4.22.3	Reverse rotation prevention selection (Pr. 78)	. 304
	4.22.4	Display of applied parameters and user group function (Pr. 160, Pr. 172 to Pr. 174)	304

4.23	56	election of operation mode and operation location	306
4.2	3.1	Operation mode selection (Pr. 79)	306
4.2	3.2	Operation mode at power on (Pr. 79, Pr. 340)	314
4.2	23.3	Operation command source and speed command source during communication operation (Pr. 338, Pr. 339, Pr. 550, Pr. 551)	315
4.24	Co	ommunication operation and setting	320
4.2	24.1	Wiring and configuration of PU connector	320
4.2	4.2	Wiring and arrangement of RS-485 terminals	322
4.2	24.3	Initial settings and specifications of RS-485 communication (Pr. 117 to Pr. 124, Pr. 331 to Pr. 337, Pr. 341, Pr. 549)	325
4.2	24.4	Communication EEPROM write selection (Pr. 342)	326
4.2	4.5	Mitsubishi inverter protocol (computer link communication)	327
4.2	24.6	Modbus-RTU communication specifications (Pr. 331, Pr. 332, Pr. 334, Pr. 343, Pr. 539, Pr. 549)	338
4.2	24.7	Operation by PLC function (Pr. 414 to Pr. 417, Pr. 506 to Pr. 515)	352
4.2	4.8	USB communication (Pr. 547, Pr. 548)	353
4.25	Sp	pecial operation and frequency control	354
4.2	25.1	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354
4.2	25.2	Commercial power supply-inverter switchover function (Pr. 57, Pr. 58, Pr. 135 to Pr. 139, Pr. 159)	362
4.2	25.3	Load torque high speed frequency control (Pr. 4, Pr. 5, Pr. 270 to Pr. 274)	367
4.2	25.4	Droop control (Pr. 286 to Pr. 288)	369
4.2	25.5	Frequency setting by pulse train input (Pr. 291, Pr. 384 to Pr. 386)	371
4.2	25.6	Encoder feedback control (Pr. 144, Pr. 285, Pr. 359, Pr. 367 to Pr. 369)	374
4.2	25.7	Regeneration avoidance function (Pr. 665, Pr. 882 to Pr. 886)	376
4.26	Us	seful functions	378
4.2	26.1	Cooling fan operation selection (Pr. 244)	378
4.2	6.2	Display of the life of the inverter parts (Pr. 255 to Pr. 259)	379
4.2	6.3	Maintenance timer alarm (Pr. 503, Pr. 504)	381
4.2	6.4	Current average value monitor signal (Pr. 555 to Pr. 557)	382
4.2	6.5	Free parameter (Pr. 888, Pr. 889)	384
4.27	Se	etting from the parameter unit, operation panel	385
4.2	7.1	PU display language selection (Pr. 145)	385
4.2	7.2	Operation panel frequency setting/key lock operation selection (Pr. 161)	385
4.2	7.3	Buzzer control (Pr. 990)	387
4.2	7.4	PU contrast adjustment (Pr. 991)	387
4.28	Pa	arameter clear	388
4.29	ΑI	I parameter clear	389

	4.30	Parameter copy and parameter verification	390
	4.30	.1 Parameter copy	390
	4.30	.2 Parameter verification	392
	4.31	Check and clear of the alarm history	393
5	PR	OTECTIVE FUNCTIONS	395
	5.1	Reset method of protective function	396
	5.2	List of alarm display	397
	5.3	Causes and corrective actions	398
	5.4	Correspondences between digital and actual characters	410
	5.5	Check first when you have troubles	411
	5.5.	1 Motor does not rotate as commanded	411
	5.5.	2 Motor generates abnormal noise	411
	5.5.	Motor generates heat abnormally	412
	5.5.	Motor rotates in opposite direction	412
	5.5.	5 Speed greatly differs from the setting	412
	5.5.	Acceleration/deceleration is not smooth	412
	5.5.	7 Motor current is large	412
	5.5.	Speed does not increase	412
	5.5.		
	5.5.	10 Operation mode is not changed properly	413
	5.5.	11 Operation panel (FR-DU07) display is not operating	413
		12 POWER lamp is not lit	
	5.5.	13 Parameter write cannot be performed	413
6	PR	ECAUTIONS FOR MAINTENANCE AND INSPECTION	415
	6.1	Inspection item	416
	6.1.	1 Daily inspection	416
	6.1.	Periodic inspection	416
	6.1.	3 Daily and periodic inspection	417
	6.1.	Display of the life of the inverter parts	418
	6.1.	5 Checking the inverter and converter modules	418
	6.1.	6 Cleaning	419
	6.1.	7 Replacement of parts	419
	6.1.	3 Inverter replacement	423
	6.2	Measurement of main circuit voltages, currents and powers	424

	6.2.1	Measurement of powers	426
	6.2.2	Measurement of voltages and use of PT	426
	6.2.3	Measurement of currents	427
	6.2.4	Use of CT and transducer	427
	6.2.5	Measurement of inverter input power factor	427
	6.2.6	Measurement of converter output voltage (across terminals P/+ - N/-)	428
	6.2.7	Measurement of inverter output frequency	428
	6.2.8	Insulation resistance test using megger	428
	6.2.9	Pressure test	428
7	SPEC	CIFICATIONS	429
	7.1 Ra	ating	430
	7.1.1	Inverter rating	430
	7.2 C	ommon specifications	432
	7.3 O	utline dimension drawings	433
	7.3.1	Inverter outline dimension drawings	433
	7.4 He	eatsink protrusion attachment procedure	442
	7.4.1	When using a heatsink protrusion attachment (FR-A7CN)	442
	7.4.2	Protrusion of heatsink of the FR-A740-03250 or more	442
	APPE	NDICES	445
	Append	ix 1 For customers who have replaced the older model with th	
	Append	lix 1-1 Replacement of the FR-A500 series	446
	Append	dix 1-2 Replacement of the FR-A200 <excelent> series</excelent>	447
	Append	ix 2 Control mode-based parameter (function) correspondence table and instruction code list	

# 1 / OUTLINE

This chapter describes the basic "OUTLINE" for use of this product.

Always read the instructions before using the equipment

1.1	Product checking and parts identification	2
1.2	Inverter and peripheral devices	3
1.3	Method of removal and reinstallation of the front	
	cover	6
1.4	Installation of the inverter and enclosure design	8

<abbreviations></abbreviations>	
DU	Operation panel (FR-DU07)
PU	Operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07)
Inverter	Mitsubishi inverter FR-A700 series
FR-A700	Mitsubishi inverter FR-A700 series
Pr	Parameter Number
PU operation	Operation using the PU (FR-DU07/FR-PU04/FR-PU07).
External operation	Operation using the control circuit signals
Combined operation	Combined operation using the PU (FR-DU07/FR-PU04/FR-PU07) and external operation.
Mitsubishi standard motor	SF-JR
Mitsubishi constant-torque motor	:.SF-HRCA
Vector dedicated motor	SF-V5RU
<trademarks></trademarks>	
LonWorks® is a registered countries.	trademark of Echelon Corporation in the U.S.A and other

• DeviceNetTM is a registered trademark of ODVA (Open DeviceNet Vender

· Other company and product names herein are the trademarks and registered

Association, Inc.).

trademarks of their respective owners.

2


3




# 1.1 Product checking and parts identification

Unpack the inverter and check the capacity plate on the front cover and the rating plate on the inverter side face to ensure that the product agrees with your order and the inverter is intact.



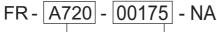

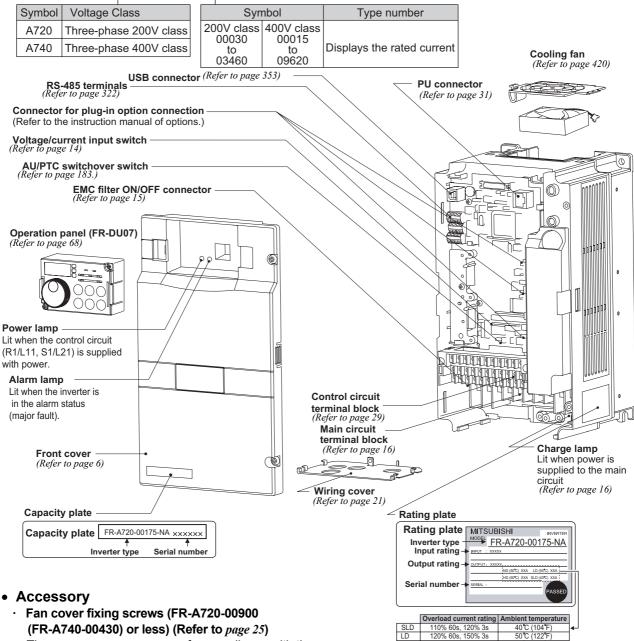

These screws are necessary for compliance with the **European Directive** 

	Capacity	Screw Size (mm)	Number
2	00080 to 00175	M3 × 35	1
0	00240 to 00460	M4 × 40	2
V	00610 to 00900	M4 × 50	1
4	00060 to 00090	M3 × 35	1
0	00120 to 00310	M4 × 40	2
V	00380, 00430	M4 × 50	1

DC reactor supplied (FR-A720-02150 (FR-F740-01100)

- DC reactor supplied (75K or more)
- Eyebolt for hanging the inverter (FR-A720-01250 to 03460, FR-A740-00570 to 05470)


M8 × two pieces



**REMARKS** 

For removal and reinstallation of covers, refer to page 6.

#### 1.2 Inverter and peripheral devices

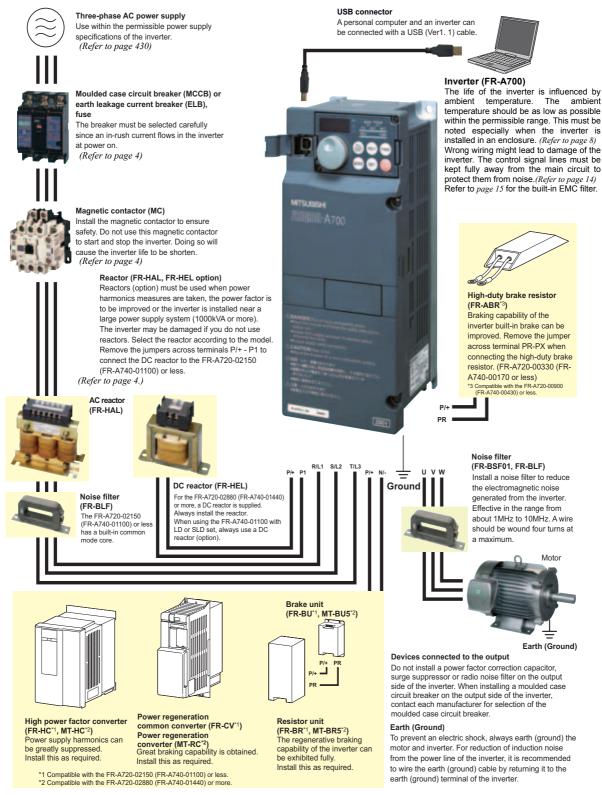

#### CAUTION

- · Do not install a power factor correction capacitor, surge suppressor or radio noise filter on the inverter output side. This will cause the inverter to trip or the capacitor, and surge suppressor to be damaged. If any of the above devices are connected, immediately remove them.
- Electromagnetic wave interference
- The input/output (main circuit) of the inverter includes high frequency components, which may interfere with the communication devices (such as AM radios) used near the inverter. In this case, set the EMC filter valid to minimize interference.
- · Refer to the instruction manual of each option and peripheral devices for details of peripheral devices.




#### 1.2.1 Peripheral devices

Check the motor capacity of the inverter you purchased. Appropriate peripheral devices must be selected according to the capacity. Refer to the following list and prepare appropriate peripheral devices:

#### 200V class

Matan Outnut		Breaker Selection*2,4		Input Side Ma	agnetic Contactor∗₃	
Motor Output (kW(HP))∗₁	Applicable Inverter Type	Reacto	Reactor connection		Reactor connection	
(1.77(111 )) 1		without	with	without	with	
0.4 (1/2)	FR-A720-00030-NA	30AF 5A	30AF 5A	S-N10	S-N10	
0.75 (1)	FR-A720-00050-NA	30AF 10A	30AF 10A	S-N10	S-N10	
1.5 (2)	FR-A720-00080-NA	30AF 15A	30AF 15A	S-N10	S-N10	
2.2 (3)	FR-A720-00110-NA	30AF 20A	30AF 15A	S-N10	S-N10	
3.7 (5)	FR-A720-00175-NA	30AF 30A	30AF 30A	S-N20, N21	S-N10	
5.5 (7.5)	FR-A720-00240-NA	50AF 50A	50AF 40A	S-N25	S-N20, N21	
7.5 (10)	FR-A720-00330-NA	100AF 60A	50AF 50A	S-N25	S-N25	
11 (15)	FR-A720-00460-NA	100AF 75A	100AF 75A	S-N35	S-N35	
15 (20)	FR-A720-00610-NA	225AF 125A	100AF 100A	S-N50	S-N50	
18.5 (25)	FR-A720-00760-NA	225AF 150A	225AF 125A	S-N65	S-N50	
22 (30)	FR-A720-00900-NA	225AF 175A	225AF 150A	S-N80	S-N65	
30 (40)	FR-A720-01150-NA	225AF 225A	225AF 175A	S-N95	S-N80	
37 (50)	FR-A720-01450-NA	400AF 250A	225AF 225A	S-N150	S-N125	
45 (60)	FR-A720-01750-NA	400AF 300A	400AF 300A	S-N180	S-N150	
55 (75)	FR-A720-02150-NA	400AF 400A	400AF 350A	S-N220	S-N180	
75 (100)	FR-A720-02880-NA	_	400AF 400A	_	S-N300	
90 (125)	FR-A720-03460-NA	_	400AF 400A	_	S-N300	

<sup>\*1</sup> Selections for use of the Mitsubishi 4-pole standard motor with power supply voltage of 200VAC 50Hz.

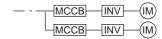

<sup>\*3</sup> Magnetic contactor is selected based on the AC-1 class. The electrical durability of magnetic contactor is 500,000 times. When the magnetic contactor is used for emergency stop during motor driving, the electrical durability is 25 times.

When using the MC for emergency stop during motor driving or using on the motor side during commercial-power supply operation, select the MC with class AC-3 rated current for the motor rated current.

<sup>\*2</sup> Select the MCCB according to the inverter power supply capacity.
Install one MCCB per inverter.
For installations in the United States or Canada, use the fuse certified by the UL and cUL.
(Refer to Image: Installation Guideline.)


<sup>\*4</sup> When the breaker on the inverter primary side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter, etc. Identify the cause of the trip, then remove the cause and power on the breaker.

#### 400V class

Motor Output		Breaker	Selection*2,4	Input Side Magnetic Contactor*3				
(kW(HP))*1	Applicable Inverter Type	Reacto	r connection	Reactor connection				
(KVV(III )) 1		without	with	without	with			
0.4 (1/2)	FR-A740-00015-NA	30AF 5A	30AF 5A	S-N10	S-N10			
0.75 (1)	FR-A740-00025-NA	30AF 5A	30AF 5A	S-N10	S-N10			
1.5 (2)	FR-A740-00040-NA	30AF 10A	30AF 10A	S-N10	S-N10			
2.2 (3)	FR-A740-00060-NA	30AF 10A	30AF 10A	S-N10	S-N10			
3.7 (5)	FR-A740-00090-NA	30AF 20A	30AF 15A	S-N10	S-N10			
5.5 (7.5)	FR-A740-00120-NA	30AF 30A	30AF 20A	S-N20	S-N11, N12			
7.5 (10)	FR-A740-00170-NA	30AF 30A	30AF 30A	S-N20	S-N20			
11 (15)	FR-A740-00230-NA	50AF 50A	50AF 40A	S-N20	S-N20			
15 (20)	FR-A740-00310-NA	100AF 60A	50AF 50A	S-N25	S-N20			
18.5 (25)	FR-A740-00380-NA	100AF 75A	100AF 60A	S-N25	S-N25			
22 (30)	FR-A740-00430-NA	100AF 100A	100AF 75A	S-N35	S-N25			
30 (40)	FR-A740-00570-NA	225AF 125A	100AF 100A	S-N50	S-N50			
37 (50)	FR-A740-00710-NA	225AF 150A	225AF 125A	S-N65	S-N50			
45 (60)	FR-A740-00860-NA	225AF 175A	225AF 150A	S-N80	S-N65			
55 (75)	FR-A740-01100-NA	225AF 200A	225AF 175A	S-N80	S-N80			
75 (100)	FR-A740-01440-NA	_	225AF 225A	_	S-N95			
90 (125)	FR-A740-01880-NA	_	225AF 225A	_	S-N150			
110 (150)	FR-A740-02160-NA	_	225AF 225A	_	S-N180			
132 (200)	FR-A740-02600-NA	_	400AF 400A	_	S-N220			
160 (250)	FR-A740-03250-NA	_	400AF 400A	_	S-N300			
185 (300)	FR-A740-03610-NA	_	400AF 400A	_	S-N300			
220 (350)	FR-A740-04320-NA	_	600AF 500A	_	S-N400			
250 (400)	FR-A740-04810-NA	_	600AF 600A	_	S-N600			
280 (450)	FR-A740-05470-NA	_	600AF 600A	_	S-N600			
315 (500)	FR-A740-06100-NA	_	800AF 700A		S-N600			
355 (550)	FR-A740-06830-NA	_	800AF 800A	_	S-N600			
400 (600)	FR-A740-07700-NA	_	1000AF 900A	_	S-N800			
450 (700)	FR-A740-08660-NA		1000AF 1000A		1000A Rated product			
500 (750)	FR-A740-09620-NA		1200AF 1200A		1000A Rated product			

<sup>\*1</sup> Selections for use of the Mitsubishi 4-pole standard motor with power supply voltage of 400VAC 50Hz.

(Refer to Installation Guideline.)

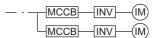

<sup>\*3</sup> Magnetic contactor is selected based on the AC-1 class. The electrical durability of magnetic contactor is 500,000 times. When the magnetic contactor is used for emergency stop during motor driving, the electrical durability is 25 times.

When using the MC for emergency stop during motor driving or using on the motor side during commercial-power supply operation, select the MC with class AC-3 rated current for the motor rated current.

<sup>\*2</sup> Select the MCCB according to the inverter power supply capacity. Install one MCCB per inverter. For installations in the United States or Canada, use the fuse certified by the UL and cUL.


<sup>\*4</sup> When the breaker on the inverter primary side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter, etc. Identify the cause of the trip, then remove the cause and power on the breaker.




#### 1.3 Method of removal and reinstallation of the front cover

#### •Removal of the operation panel


1) Loosen the two screws on the operation panel. (These screws cannot be removed.)

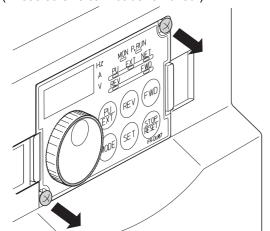

2) Push the left and right hooks of the operation panel and pull the operation panel toward you to remove.

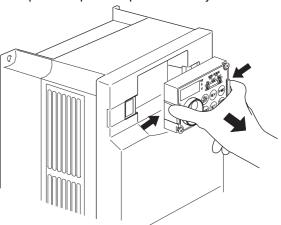


When reinstalling the operation panel, insert it straight to reinstall securely and tighten the fixed screws of the operation panel.

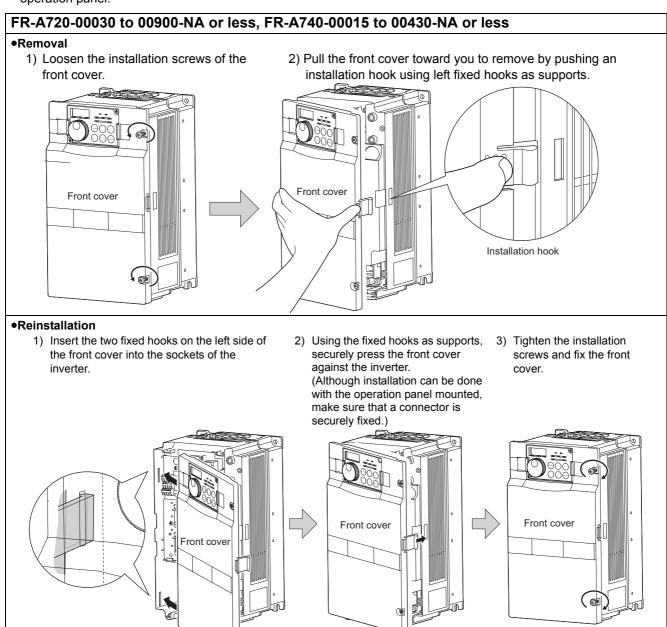


# FR-A720-01150-NA or more, FR-A740-00570-NA or more

#### Removal

 Remove installation screws on the front cover 1 to remove the front cover 1.

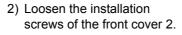


 Pull the front cover 2 toward you to remove by pushing an installation hook on the right side using left fixed hooks as supports.

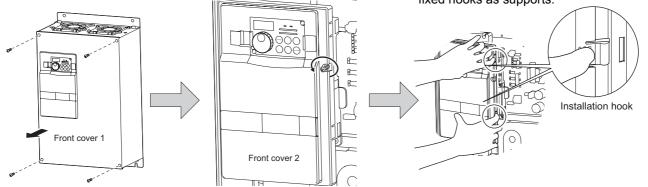


#### Reinstallation

- 1) Insert the two fixed hooks on the left side of the front cover 2 into the sockets of the inverter.
- Using the fixed hooks as supports, securely press the front cover 2 against the inverter. (Although installation can be done with the operation panel mounted, make sure that a connector is securely fixed.)

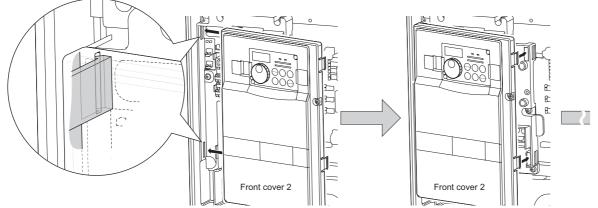

3) Fix the front cover 2 with the installation screws.

4) Fix the front cover 1 with the installation screws.

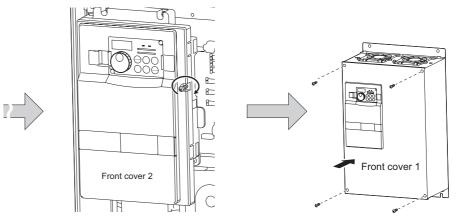

#### REMARKS

For the FR-A720-02150-NA and the FR-A740-03250-NA or more, the front cover 1 is separated into two parts.

#### CAUTION

- 1. Fully make sure that the front cover has been reinstalled securely. Always tighten the installation screws of the front cover.
- 2. The same serial number is printed on the capacity plate of the front cover and the rating plate of the inverter. Before reinstalling the front cover, check the serial numbers to ensure that the cover removed is reinstalled to the inverter from where it was removed.

#### 1.4 Installation of the inverter and enclosure design

When an inverter enclosure is to be designed and manufactured, heat generated by contained equipment, etc., the environment of an operating place, and others must be fully considered to determine the enclosure structure, size and equipment layout. The inverter unit uses many semiconductor devices. To ensure higher reliability and long period of operation, operate the inverter in the ambient environment that completely satisfies the equipment specifications.

#### 1.4.1 Inverter installation environment

As the inverter installation environmet should satisfy the standard specifications indicated in the following table, operation in any place that does not meet these conditions not only deteriorates the performance and life of the inverter, but also causes a failure. Refer to the following points and take adequate measures.

#### **Environmental standard specifications of inverter**

Item	Description							
Ambient temperature	LD, ND(Initial setting), HD	-10 to +50°C (14°F to 122°F) (non-freezing)						
Ambient temperature	SLD	-10 to +40°C (14°F to 104°F) (non-freezing)						
Ambient humidity	90% RH maximum (non-condensing)							
Atmosphere	Free from corrosive and explosive gases, dust and dirt							
Maximum Altitude	1,000m (3280.80 feet) or less							
Vibration	5.9m/s <sup>2</sup> or less *1 (JIS C 60068-2-6 compliant)							

<sup>\*1 2.9</sup>m/s<sup>2</sup> or less for theFR-A740-03250 or more.

#### (1) Temperature

The permissible ambient temperature of the inverter is -10°C (14°F) to +50°C (122°F) or -10°C (14°F) to +40°C (104°F) (when SLD is set). Always operate the inverter within this temperature range. Operation outside this range will considerably shorten the service lives of the semiconductors, parts, capacitors and others. Take the following measures so that the ambient temperature of the inverter falls within the specified range.

#### 1) Measures against high temperature

- Use a forced ventilation system or similar cooling system. (Refer to page 10.)
- Install the enclosure in an air-conditioned electrical chamber.
- Block direct sunlight.
- Provide a shield or similar plate to avoid direct exposure to the radiated heat and wind of a heat source.
- · Ventilate the area around the enclosure well.

#### 2) Measures against low temperature

- Provide a space heater in the enclosure.
- Do not power off the inverter. (Keep the start signal of the inverter off.)

#### 3) Sudden temperature changes

- · Select an installation place where temperature does not change suddenly.
- Avoid installing the inverter near the air outlet of an air conditioner.
- If temperature changes are caused by opening/closing of a door, install the inverter away from the door.

#### (2) Humidity

Normally operate the inverter within the 45 to 90% range of the ambient humidity. Too high humidity will pose problems of reduced insulation and metal corrosion. On the other hand, too low humidity may produce a spatial electrical breakdown. The insulation distance specified in JEM1103 "Control Equipment Insulator" is defined as humidity 45 to 85%.

#### 1) Measures against high humidity

- · Make the enclosure enclosed, and provide it with a hygroscopic agent.
- · Take dry air into the enclosure from outside.
- Provide a space heater in the enclosure.

#### 2) Measures against low humidity

What is important in fitting or inspection of the unit in this status is to discharge your body (static electricity) beforehand and keep your body from contact with the parts and patterns, besides blowing air of proper humidity into the enclosure from outside.

#### 3) Measures against condensation

Condensation may occur if frequent operation stops change the in-enclosure temperature suddenly or if the outsideair temperature changes suddenly.

Condensation causes such faults as reduced insulation and corrosion.

- · Take the measures against high humidity in 1).
- Do not power off the inverter. (Keep the start signal of the inverter off.)

#### (3) Dust, dirt, oil mist

Dust and dirt will cause such faults as poor contact of contact points, reduced insulation or reduced cooling effect due to moisture absorption of accumulated dust and dirt, and in-enclosure tempearture rise due to clogged filter.

In the atmosphere where conductive powder floats, dust and dirt will cause such faults as malfunction, deteriorated insulation and short circuit in a short time.

Since oil mist will cause similar conditions, it is necessary to take adequate measures.

#### Countermeasures

- · Place in a totally enclosed enclosure.
  - Take measures if the in-enclosure temperature rises. (Refer to page 10.)
- Purge air.

Pump clean air from outside to make the in-enclosure pressure higher than the outside-air pressure.

#### (4) Corrosive gas, salt damage

If the inverter is exposed to corrosive gas or to salt near a beach, the printed board patterns and parts will corrode or the relays and switches will result in poor contact.

In such places, take the measures given in Section (3).

#### (5) Explosive, flammable gases

As the inverter is non-explosion proof, it must be contained in an explosion proof enclosure.

In places where explosion may be caused by explosive gas, dust or dirt, an enclosure cannot be used unless it structurally complies with the guidelines and has passed the specified tests. This makes the enclosure itself expensive (including the test charges).

The best way is to avoid installation in such places and install the inverter in a non-hazardous place.

#### (6) Highland

Use the inverter at the altitude of within 1000m (3280.80 feet).

If it is used at a higher place, it is likely that thin air will reduce the cooling effect and low air pressure will deteriorate dielectric strength.

#### (7) Vibration, impact

The vibration resistance of the inverter is up to  $5.9 \text{m/s}^2$  ( $2.9 \text{m/s}^2$  for the FR-A740-03250 or more) at 10 to 55 Hz frequency and 1mm (0.04 inches) amplitude as specified in JIS C 60068-2-6.

Vibration or impact, if less than the specified value, applied for a long time may make the mechanism loose or cause poor contact to the connectors.

Especially when impact is imposed repeatedly, caution must be taken as the part pins are likely to break.

#### Countermeasures

- Provide the enclosure with rubber vibration isolators.
- Strengthen the structure to prevent the enclosure from resonance.
- Install the enclosure away from sources of vibration.

#### 1.4.2 Cooling system types for inverter enclosure

From the enclosure that contains the inverter, the heat of the inverter and other equipment (transformers, lamps, resistors, etc.) and the incoming heat such as direct sunlight must be dissipated to keep the in-enclosure temperature lower than the permissible temperatures of the in-enclosure equipment including the inverter.


The cooling systems are classified as follows in terms of the cooling calculation method.

- 1) Cooling by natural heat dissipation from the enclosure surface (Totally enclosed type)
- 2) Cooling by heat sink (Aluminum fin, etc.)
- 3) Cooling by ventilation (Forced ventilation type, pipe ventilation type)
- 4) Cooling by heat exchanger or cooler (Heat pipe, cooler, etc.)


	Cooling System	Enclosure Structure	Comment					
Natural cooling	Natural ventilation (Enclosed, open type)	INV	Low in cost and generally used, but the enclosure size increases as the inverter capacity increases. For relatively small capacities.					
	Natural ventilation (Totally enclosed type)		Being a totally enclosed type, the most appropriate for hostile environment having dust, dirt, oil mist, etc. The enclosure size increases depending on the inverter capacity.					
Forced cooling	Heatsink cooling	Heatsink INV	Having restrictions on the heatsink mounting position and area, and designed for relative small capacities.					
	Forced ventilation		For general indoor installation. Appropriate for enclosure downsizing and cost reduction, and often used.					
	Heat pipe	Heat pipe	Totally enclosed type for enclosure downsizing.					

#### 1.4.3 Inverter placement

#### (1) Installation of the Inverter

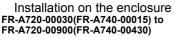


# FR-A720-01150(FR-A740-00570) or more

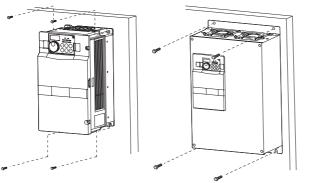

Fix six positions for the FR-A740-03250 to 06830 and fix eight positions for the FR-A740-07700 to 09620.

#### = CAUTION =


When encasing multiple inverters, install them in parallel as a cooling measure. Install the inverter vertically.

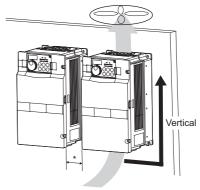



\* Refer to the clearances on the next page.

#### (2) Clearances around the inverter

To ensure ease of heat dissipation and maintenance, leave at least the shown clearances around the inverter. At least the following clearances are required under the inverter as a wiring space, and above the inverter as a heat dissipation space.

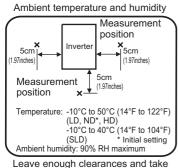

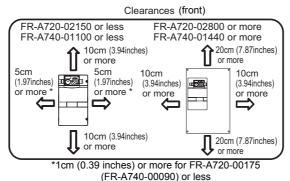

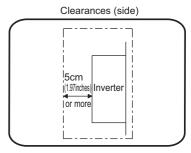

cooling measures.

#### **REMARKS**

For replacing the cooling fan of the FR-A740-03250 or more, 30 cm (11.8inches) of space is necessary in front of the inverter. Refer to  $page\ 420$  for fan replacement.

#### (3) Inverter mounting orientation

Mount the inverter on a wall as specified. Do not mount it horizontally or any other way.


#### (4) Above the inverter

Heat is blown up from inside the inverter by the small fan built in the unit. Any equipment placed above the inverter should be heat resistant.

#### (5) Arrangement of multiple inverters

When multiple inverters are placed in the same enclosure, generally arrange them horizontally as shown in the right figure (a). When it is inevitable to arrange them vertically to minimize space, take such measures as to provide guides since heat from the bottom inverters can increase the temperatures in the top inverters, causing inverter failures.


When mounting multiple inverters, fully take caution not to make the ambient temperature of the inverter higher than the permissible value by providing ventilation and increasing the enclosure size.

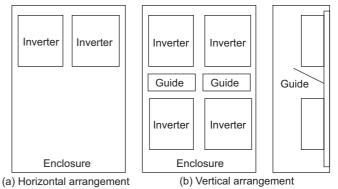

Arrangement of multiple inverters

#### (6) Placement of ventilation fan and inverter

Heat generated in the inverter is blown up from the bottom of the unit as warm air by the cooling fan. When intalling a ventilation fan for that heat, determine the place of ventilation fan installation after fully considering an air flow. (Air passes through areas of low resistance. Make an airway and airflow plates to expose the inverter to cool air.)

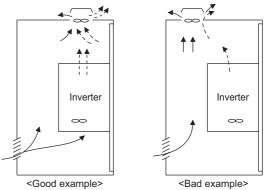

Placement of ventilation fan and inverter

# **MEMO**

# 2 WIRING

This chapter describes the basic "WIRING" for use of this product.


Always read the instructions before using the equipment

2.1	Wiring	. 14
2.2	Main circuit terminal specifications	.16
2.3	Control circuit specifications	.29
2.4	Connection of motor with encoder (vector control).	.37
2.5	Connection of stand-alone option units	45

## $\mathbb{Z}$

#### 2.1 Wiring

#### 2.1.1 Terminal connection diagram

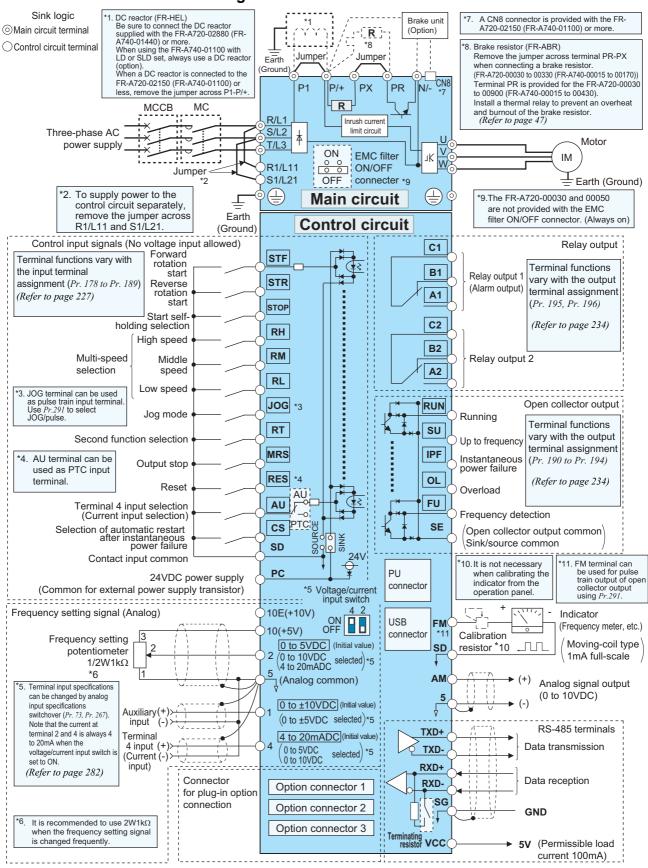

#### CAUTION

- To prevent a malfunction due to noise, keep the signal cables more than 10cm (3.94inches) away from the power cables.
- After wiring, wire offcuts must not be left in the inverter.
- Wire offcuts can cause an alarm, failure or malfunction. Always keep the inverter clean.
- When drilling mounting holes in an enclosure etc., take care not to allow chips and other foreign matter to enter the inverter.


#### 2.1.2 EMC filter

The inverter is equipped with a built-in EMC filter.

Effective for reduction of air-propagated noise on the input side of the inverter.


The EMC filter is factory-set to disable (OFF).

To enable it, fit the EMC filter ON/OFF connector to the ON position.

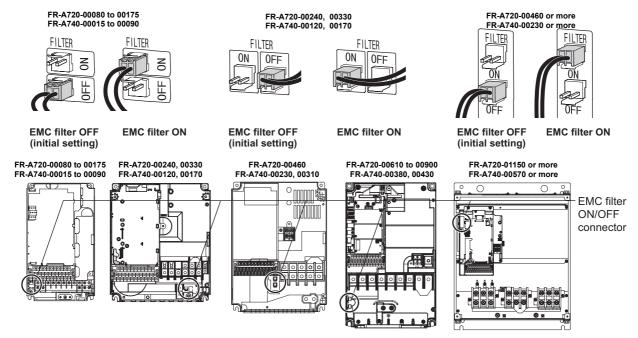

The FR-A720-00030 and 00050 are not provided with the EMC filter ON/OFF connector. (The EMC filter is always valid.) **<How to disconnect the connector>** 

- (1) Before removing a front cover, check to make sure that the indication of the inverter operation panel is off, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. (*Refer to page 6.*)
- (2) When disconnecting the connector, push the fixing tab and pull the connector straight without pulling the cable or forcibly pulling the connector with the tab fixed. When installing the connector, also engage the fixing tab securely. (If it is difficult to disconnect the connector, use a pair of long-nose pliers, etc.)

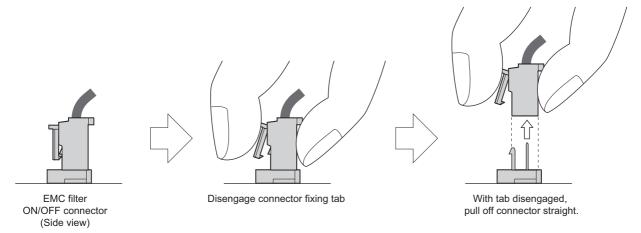

#### CAUTION

- · Fit the connector to either ON or OFF.
- Enabling (turning on) the EMC filter increase leakage current. (Refer to page 57)

## **MARNING**

While power is on or when the inverter is running, do not open the front cover. Otherwise you may get an electric shock.



#### 2.2 Main circuit terminal specifications

## 2.2.1 Specification of main circuit terminal


Terminal Symbol	Terminal Name	Description
R/L1, S/L2, T/L3	AC power input	Connect to the commercial power supply.  Keep these terminals open when using the high power factor converter (FR-HC and MT-HC) or power regeneration common converter (FR-CV).
U, V, W	Inverter output	Connect a three-phase squirrel-cage motor.
R1/L11, S1/L21	Power supply for control circuit	Connected to the AC power supply terminals R/L1 and S/L2. To retain the alarm display and alarm output or when using the high power factor converter (FR-HC and MT-HC) or power regeneration common converter (FR-CV), remove the jumpers from terminals R/L1-R1/L11 and S/L2-S1/L21 and apply external power to these terminals.  Do not turn off the power supply for control circuit (R1/L11, S1/L21) with the main circuit power (R/L1, S/L2, T/L3) on. Doing so may damage the inverter. The circuit should be configured so that the main circuit power (R/L1, S/L2, T/L3) is also turned off when the power supply for control circuit (R1/L11, S1/L21) is off.  FR-A720-00610 (FR-A740-00310) or less: 60VA, FR-A720-00760 (FR-A740-00380) or more: 80VA
P/+, PR	Brake resistor connection	Remove the jumper from terminals PR-PX (FR-A720-00330 (FR-A740-00170) or less) and connect an optional brake resistor (FR-ABR) across terminals P/+-PR. For the FR-A720-00900 (FR-A740-00430) or less, connecting the resistor further provides regenerative braking power.
P/+, N/-	Brake unit connection	Connect the brake unit (FR-BU, BU and MT-BU5), power regeneration common converter (FR-CV), high power factor converter (FR-HC and MT-HC) or power regeneration converter (MT-RC).
P/+, P1	DC reactor connection	For the FR-A720-01750 (FR-A740-00860) or less, remove the jumper across terminals P/+ - P1 and connect the DC reactor. (For the FR-A720-02150 (FR-A740-01100) or more, a DC reactor is supplied as standard. When using the FR-A740-01100 with LD or SLD set, always use a DC reactor (option).)
PR, PX	Built-in brake circuit connection	When the jumper is connected across terminals PX-PR (initial status), the built-in brake circuit is valid. (Provided for the FR-A720-00330 (FR-A740-00170) or less.)
	Earth (Ground)	For earthing (grounding) the inverter chassis. Must be earthed (grounded).

#### \_\_\_ CAUTION =


<sup>·</sup> When connecting a dedicated brake resistor (FR-ABR) and brake unit (FR-BU, BU) remove jumpers across terminals PR-PX (FR-A720-00330 (FR-A740-00170) or less). For details, refer to page 45 to 48.

# 2.2.2 Terminal arrangement of the main circuit terminal, power supply and the motor wiring.


#### 200V class

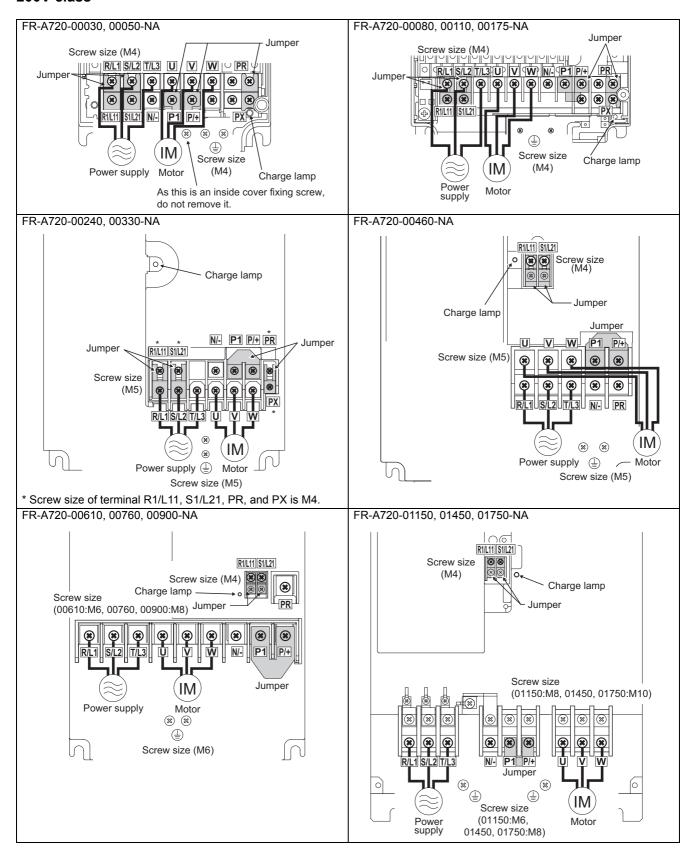




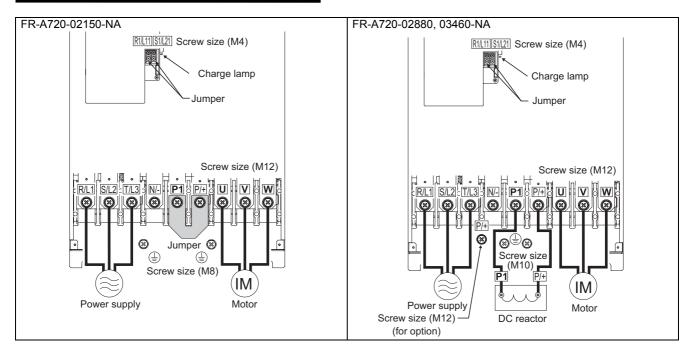

#### 400V class

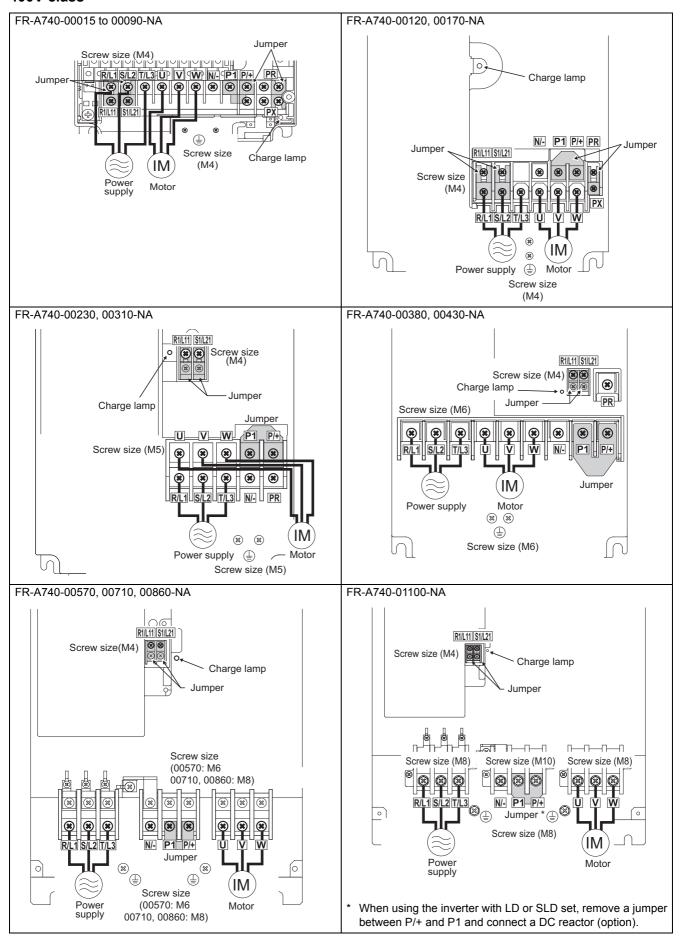




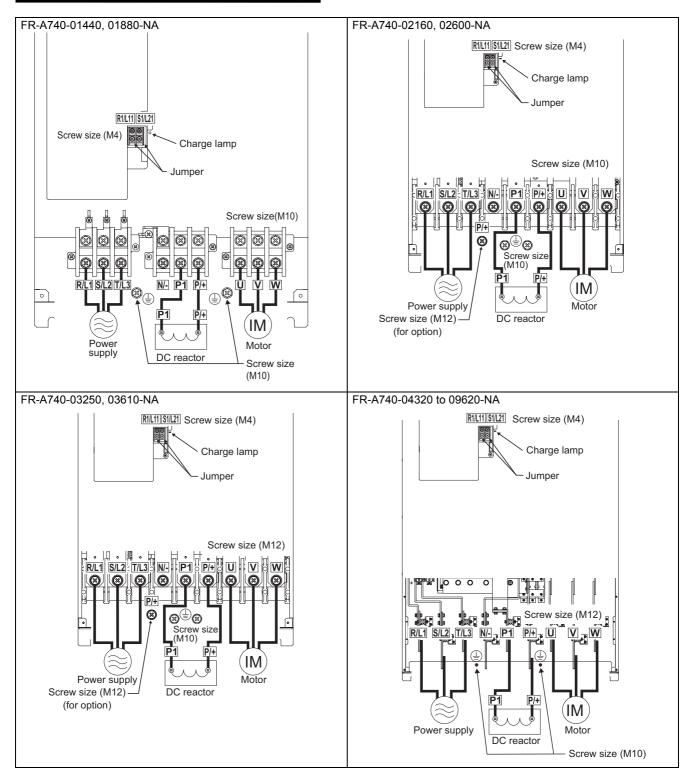

#### CAUTION =


- The power supply cables must be connected to R/L1, S/L2, T/L3. Never connect the power cable to the U, V, W of the inverter. Doing so will damage the inverter. (Phase sequence needs not to be matched.)
- Connect the motor to U, V, W. At this time, turning on the forward rotation switch (signal) rotates the motor in the counterclockwise direction when viewed from the motor shaft.
- · When wiring the inverter main circuit conductor of the FR-A740-04320 or more, tighten a nut from the right side of the conductor. When wiring two wires, place wires on both sides of the conductor. (Refer to the drawing below.) For wiring, use bolts (nuts) provided with the inverter.

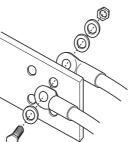




#### Wiring cover and Handling (FR-A720-00760 (FR-A740-00430) or less)

- Remove the wiring cover of the inverter. Punch out a knockout by firmly tapping it with such as a hammer. Remove any sharp edges and burrs from knockout holes of the wiring cover.
- Install conduits and fix with conduits clamps. Pass the cable always through the conduit.

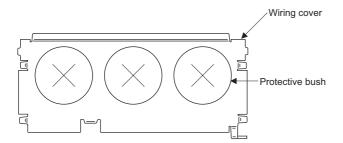

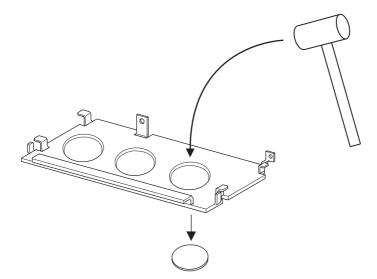

#### CAUTION =

When handling the wiring cover, care must be taken not to cut fingers or hands with sharp edges and burrs. To avoide wire offcuts and other foreign matter to enter the inverter, conduits must be installed to the all knockout holes.

## **WARNING**

Do not wire without using conduits. Otherwise, the cable sheathes may be scratched by the wiring cover edges, resulting in a short circuit or ground fault.

#### **REMARKS**

When using conduits for the FR-A720-00030 and 00050, fix the conduits to the wiring cover after connecting the earth cable to the inverter earth terminal.

#### 2.2.3 Cables and wiring length

#### (1) Applied cable size

Select the recommended cable size to ensure that a voltage drop will be 2% max.

If the wiring distance is long between the inverter and motor, a main circuit cable voltage drop will cause the motor torque to decrease especially at the output of a low frequency.

The following table indicates a selection example for the wiring length of 20m (65.62feet).

#### 200V class (when input power supply is 220V)

			Crim	ping	Cable Sizes								
Applicable Inverter	Terminal Screw Size *4	•	Terminal		HIV, etc. (mm <sup>2</sup> ) *1				AWG/MCM *2		PVC, etc. (mm <sup>2</sup> ) *3		
Туре			R/L1, S/L2, T/L3	U, V, W	R/L1, S/L2, T/L3	U, V, W	P/+, P1	Earth (Ground) cable	R/L1, S/L2, T/L3	U, V, W	R/L1, S/L2, T/L3	U, V, W	Earth (Ground) cable
FR-A720-00030 to 00110-NA	M4	1.5	2-4	2-4	2	2	2	2	14	14	2.5	2.5	2.5
FR-A720-00175-NA	M4	1.5	5.5-4	5.5-4	3.5	3.5	3.5	3.5	12	12	4	4	4
FR-A720-00240-NA	M4-M5	2.5	5.5-5	5.5-5	5.5	5.5	5.5	5.5	10	10	6	6	6
FR-A720-00330-NA	M4-M5	2.5	14-5	8-5	14	8	14	14	6	8	16	10	16
FR-A720-00460-NA	M5	2.5	14-5	14-5	14	14	14	14	6	6	16	16	16
FR-A720-00610-NA	M6	4.4	22-6	22-6	22	22	22	14	4	4	25	25	16
FR-A720-00760-NA	M8-M6	7.8	38-8	38-8	38	38	38	22	2	2	35	35	25
FR-A720-00900-NA	M8-M6	7.8	38-8	38-8	38	38	38	22	2	2	35	35	25
FR-A720-01150-NA	M8-M6	7.8	60-8	60-8	60	60	60	38	1/0	1/0	50	50	25
FR-A720-01450-NA	M10-M8	14.7	80-10	80-10	80	80	80	38	3/0	3/0	70	70	35
FR-A720-01750-NA	M10-M8	14.7	100-10	100-10	100	100	100	60	4/0	4/0	95	95	50
FR-A720-02150-NA	M12-M8	24.5	100-12	100-12	100	100	100	60	4/0	4/0	95	95	50
FR-A720-02880-NA	M12-M10	24.5	150-12	150-12	125	125	125	38	250	250	_	_	==
FR-A720-03460-NA	M12-M10	24.5	150-12	150-12	150	150	150	60	300	300			

<sup>\*1</sup> For the 02150 or less, the cable size is that of the cable (HIV cable (600V class 2 vinyl-insulated cable) etc.) with continuous maximum permissible temperature of 75°C (167°F). Assumes that the ambient temperature is 50°C (122°F) or less and the wiring distance is 20m (65.62feet) or less.

- \*2 The recommended cable size is that of the cable (THHW cable) with continuous maximum permissible temperature of 75°C (167°F). Assumes that the ambient temperature is 40°C (104°F) or less and the wiring distance is 20m (65.62feet) or less. (Selection example for use mainly in the United States.)
- For the 00610 or less, the recommended cable size is that of the cable (PVC cable) with continuous maximum permissible temperature of 70°C (158°F). Assumes that the ambient temperature is 40°C (104°F) or less and the wiring distance is 20m (65.62feet) or less.

  For the 00760 or more, the recommended cable size is that of the cable (XLPE cable) with continuous maximum permissible temperature of 90°C (194°F). Assumes that the ambient temperature is 40°C (104°F) or less and wiring is performed in an enclosure.

  (Selection example for use mainly in Europe.)
- \*4 The terminal screw size indicates the terminal size for R/L1, S/L2, T/L3, U, V, W, and a screw for earthing (grounding). For the 00240 and 00330, screw sizes are different (R1/L11, S1/L21, PR, PX R/L1, S/L2, T/L3, U, V, W, a screw for earthing (grounding)). For the 00760 or more, screw sizes are different. (R/L1, S/L2, T/L3, U, V, W a screw for earthing (grounding))

For the 02880 or more, the recommended cable size is that of the cable (LMFC (heat resistant flexible cross-linked polyethylene insulated cable) etc.) with continuous maximum permissible temperature of 90°C (194°F). Assumes that the ambient temperature is 50°C (122°F) or less and wiring is performed in an enclosure.



#### 400V class (when input power supply is 440V)

			Crimping		Cable Sizes									
Applicable Inverter		Tightening			HIV, etc. (mm <sup>2</sup> ) *1				AWG/I	MCM *2	PVC, etc. (mm <sup>2</sup> ) *3			
Туре	Screw Size *4	Torque N·m	R/L1, S/L2, T/L3	U, V, W	R/L1, S/L2, T/L3	U, V, W	P/+, P1	Earth (Ground) Cable	R/L1, S/L2, T/L3	U, V, W	R/L1, S/L2, T/L3	U, V, W	Earth (Ground) Cable	
FR-A740-00015 to 00090-NA	M4	1.5	2-4	2-4	2	2	2	2	14	14	2.5	2.5	2.5	
FR-A740-00120-NA	M4	1.5	2-4	2-4	2	2	3.5	3.5	12	14	2.5	2.5	4	
FR-A740-00170-NA	M4	1.5	5.5-4	5.5-4	3.5	3.5	3.5	3.5	12	12	4	4	4	
FR-A740-00230-NA	M5	2.5	5.5-5	5.5-5	5.5	5.5	5.5	8	10	10	6	6	10	
FR-A740-00310-NA	M5	2.5	8-5	8-5	8	8	8	8	8	8	10	10	10	
FR-A740-000380-NA	M6	4.4	14-6	8-6	14	8	14	14	6	8	16	10	16	
FR-A740-00430-NA	M6	4.4	14-6	14-6	14	14	22	14	6	6	16	16	16	
FR-A740-00570-NA	M6	4.4	22-6	22-6	22	22	22	14	4	4	25	25	16	
FR-A740-00710-NA	M8	7.8	22-8	22-8	22	22	22	14	4	4	25	25	16	
FR-A740-00860-NA	M8	7.8	38-8	38-8	38	38	38	22	1	2	50	50	25	
FR-A740-01100-NA	M8	7.8	60-8	60-8	60	60	60	22	1/0	1/0	50	50	25	
FR-A740-01440-NA	M10	14.7	60-10	60-10	60	60	60	38	1/0	1/0	50	50	25	
FR-A740-01880-NA	M10	14.7	60-10	60-10	60	60	80	38	3/0	3/0	50	50	25	
FR-A740-02160-NA	M10-M12	14.7	80-10	80-10	80	80	80	38	3/0	3/0	70	70	35	
FR-A740-02600-NA	M10-M12	14.7	100-10	100-10	100	100	100	38	4/0	4/0	95	95	50	
FR-A740-03250-NA	M12-M10	24.5	150-12	150-12	125	150	150	38	250	250	120	120	70	
FR-A740-03610-NA	M12-M10	24.5	150-12	150-12	150	150	150	38	300	300	150	150	95	
FR-A740-04320-NA	M12-M10	24.5	100-12	100-12	2×100	2×100	2×100	60	2×4/0	2×4/0	2×95	2×95	95	
FR-A740-04810-NA	M12-M10	24.5	100-12	100-12	2×100	2×100	2×125	60	2×4/0	2×4/0	2×95	2×95	95	
FR-A740-05470-NA	M12-M10	24.5	150-12	150-12	2×125	2×125	2×125	60	2×250	2×250	2×120	2×120	120	
FR-A740-06100-NA	M12-M10	24.5	150-12	150-12	2×150	2×150	2×150	100	2×300	2×300	2×150	2×150	150	
FR-A740-06830-NA	M12-M10	24.5	C2-200	C2-200	2×200	2×200	2×200	100	2×350	2×350	2×185	2×185	2×95	
FR-A740-07700-NA	M12-M10	24.5	C2-200	C2-200	2×200	2×200	2×200	100	2×400	2×400	2×185	2×185	2×95	
FR-A740-08660-NA	M12-M10	24.5	C2-250	C2-250	2×250	2×250	2×250	100	2×500	2×500	2×240	2×240	2×120	
FR-A740-09620-NA	M12-M10	24.5	C2-200	C2-250	3×200	2×250	3×200	2×100	2×500	2×500	2×240	2×240	2×120	

- \*1 For the 01100 or less, the cable size is that of the cable (HIV cable (600V class 2 vinyl-insulated cable) etc.) with continuous maximum permissible temperature of 75°C (167°F). Assumes that the ambient temperature is 50°C (122°F) or less and the wiring distance is 20m (65.62feet) or less. For the 01440 or more, the recommended cable size is that of the cable (LMFC (heat resistant flexible cross-linked polyethylene insulated cable) etc.) with continuous maximum permissible temperature of 90°C (194°F). Assumes that the ambient temperature is 50°C (122°F) or less and wiring is performed in an enclosure.
- \*2 For the 00860 or less, the recommended cable size is that of the cable (THHW cable) with continuous maximum permissible temperature of 75°C (167°F). Assumes that the ambient temperature is 40°C (104°F) or less and the wiring distance is 20m (65.62feet) or less.

  For the 01100 or more, the recommended cable size is that of the cable (THHN cable) with continuous maximum permissible temperature of 90°C (194°F). Assumes that the ambient temperature is 40°C (104°F) or less and wiring is performed in an enclosure.

  (Selection example for use mainly in the United States.)
- (Selection example for use mainly in the Officed States.)

  For the 00860 or less, the recommended cable size is that of the cable (PVC cable) with continuous maximum permissible temperature of 70°C (158°F). Assumes that the ambient temperature is 40°C (104°F) or less and the wiring distance is 20m (65.62feet) or less.

  For the 01100 or more, the recommended cable size is that of the cable (XLPE cable) with continuous maximum permissible temperature of 90°C (194°F). Assumes that the ambient temperature is 40°C (104°F) or less and wiring is performed in an enclosure.

  (Selection example for use mainly in Europe.)
- \*4 The terminal screw size indicates the terminal size for R/L1, S/L2, T/L3, U, V, W, and a screw for earthing (grounding). For the 02160 and 02600, screw sizes are different (R/L1, S/L2, T/L3, U, V, W, a screw for earthing (grounding) P/+ for option connection) For the 03250 or more, screw sizes are different. (R/L1, S/L2, T/L3, U, V, W a screw for earthing (grounding))

The line voltage drop can be calculated by the following formula:

line voltage drop [V]=  $\frac{\sqrt{3} \times \text{wire resistance}[m\Omega/m] \times \text{wiring distance}[m] \times \text{current}[A]}{1000}$ 

Use a larger diameter cable when the wiring distance is long or when it is desired to decrease the voltage drop (torque reduction) in the low speed range.

#### \_\_\_ CAUTION =

- · Tighten the terminal screw to the specified torque.
  - A screw that has been tighten too loosely can cause a short circuit or malfunction.
  - A screw that has been tighten too tightly can cause a short circuit or malfunction due to the unit breakage.
- Use crimping terminals with insulation sleeve to wire the power supply and motor.

#### (2) Notes on earthing (grounding)

Always earth (ground) the motor and inverter.

1)Purpose of earthing (grounding)

Generally, an electrical apparatus has an earth (ground) terminal, which must be connected to the ground before use.


An electrical circuit is usually insulated by an insulating material and encased. However, it is impossible to manufacture an insulating material that can shut off a leakage current completely, and actually, a slight current flow into the case. The purpose of earthing (grounding) the case of an electrical apparatus is to prevent operator from getting an electric shock from this leakage current when touching it.


To avoid the influence of external noises, this earthing (grounding) is important to audio equipment, sensors, computers and other apparatuses that handle low-level signals or operate very fast.


2)Earthing (grounding) methods and earthing (grounding) work

As described previously, earthing (grounding) is roughly classified into an electrical shock prevention type and a noise-affected malfunction prevention type. Therefore, these two types should be discriminated clearly, and the following work must be done to prevent the leakage current having the inverter's high frequency components from entering the malfunction prevention type earthing (grounding):

- (a) Where possible, use independent earthing (grounding) for the inverter. If independent earthing (grounding) (I) is impossible, use joint earthing (grounding) (II) where the inverter is connected with the other equipment at an earthing (grounding) point. Joint earthing (grounding) as in (III) must be avoided as the inverter is connected with the other equipment by a common earth (ground) cable.
  - Also a leakage current including many high frequency components flows in the earth (ground) cables of the inverter and inverter-driven motor. Therefore, they must use the independent earthing (grounding) method and be separated from the earthing (grounding) of equipment sensitive to the aforementioned noises.
  - In a tall building, it will be a good policy to use the noise malfunction prevention type earthing (grounding) with steel frames and carry out electric shock prevention type earthing (grounding) in the independent earthing (grounding) method.
- (b) This inverter must be earthed (grounded). Earthing (Grounding) must conform to the requirements of national and local safety regulations and electrical codes. (JIS, NEC section 250, IEC 536 class 1 and other applicable standards).
- (c) Use the thickest possible earth (ground) cable. The earth (ground) cable should be of not less than the size indicated in the above table on the previous page.
- (d) The grounding point should be as near as possible to the inverter, and the ground wire length should be as short as possible.
- (e) Run the earth (ground) cable as far away as possible from the I/O wiring of equipment sensitive to noises and run them in parallel in the minimum distance.

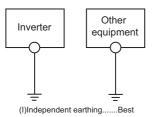

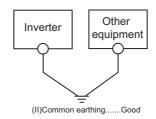

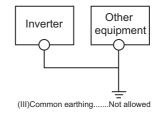




To be compliant with the European Directive (Low Voltage Directive), refer to the Installation guideline.



#### (3) Total wiring length

The overall wiring length for connection of a single motor or multiple motors should be within the value in the table below. (The wiring length should be 100m (328.08feet) maximum for vector control.)

Pr. 72 PWM frequency selection setting (carrier frequency)	FR-A720-00030 FR-A740-00015	FR-A720-00050 FR-A740-00025	FR-A720-00080 or more FR-A740-00040 or more
2 (2kHz) or less	300m	500m	500m
	(984.25 feet)	(1640.42 feet)	(1640.42 feet)
3 to 15 (3kHz to 14.5kHz)	200m	300m	500m
	(656.19 feet)	(984.25 feet)	(1640.42 feet)

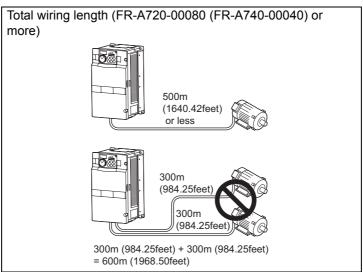

When driving a 400V class motor by the inverter, surge voltages attributable to the wiring constants may occur at the motor terminals, deteriorating the insulation of the motor.

Refer to page 63 for measures against deteriorated insulation.

#### CAUTION =

- Especially for long-distance wiring, the inverter may be affected by a charging current caused by the stray capacitances of the wiring, leading to a malfunction of the overcurrent protective function or fast response current limit function or a malfunction or fault of the equipment connected on the inverter output side. If fast-response current limit function malfunctions, disable this function. (For *Pr. 156 Stall prevention operation selection, refer to page 149*.)
- · For details of Pr. 72 PWM frequency selection, refer to page 279.

#### (4) Cable size of the control circuit power supply (terminal R1/L11, S1/L21)


· Terminal screw size: M4

 $\cdot$  Cable size:  $0.75 \text{mm}^2$  to  $2 \text{mm}^2$ 

· Tightening torque: 1.5N·m

## 2.2.4 When connecting the control circuit and the main circuit separately to the power supply (separate power)


#### <Connection diagram>

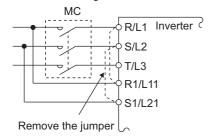

When the protected circuit is activated, opening of the electromagnetic contactor (MC) on the inverter power supply side results in power loss in the control circuit, disabling the alarm output signal retention. Terminals R1/L11 and S1/L21 are provided to hold an alarm signal. In this case, connect the power supply terminals R1/L11 and S1/L21 of the control circuit to the primary side of the MC.


#### • FR-A720-00030 to 00175, FR-A740-00015 to 00090

- 1)Loosen the upper screws.
- 2) Remove the lower screws.
- 3) Remove the jumper
- 4) Connect the separate power supply cable for the control circuit to the lower terminals (R1/L11, S1/L21).

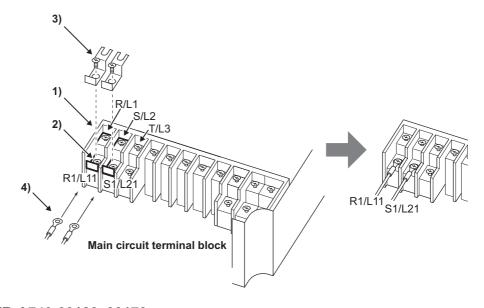

#### • FR-A720-00240, 00330, FR-A740-00120, 00170


- 1) Remove the upper screws.
- 2) Remove the lower screws.
- 3) Remove the jumper.
- 4) Connect the separate power supply cable for the control circuit to the <u>upper terminals</u> (R1/L11, S1/L21).

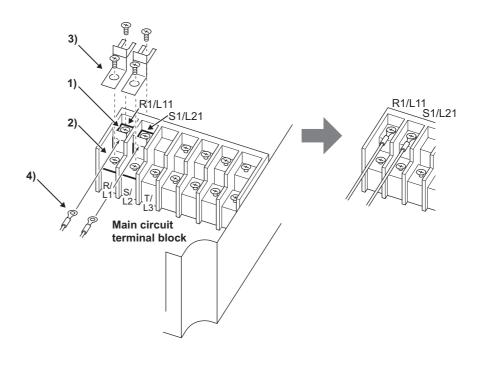



#### • FR-A720-00460 or more, FR-A740-00230 or more

- 1) Remove the upper screws.
- 2) Remove the lower screws.
- 3) Pull the jumper toward you to remove.
- 4) Connect the separate power supply cable for the control circuit to the <u>upper terminals (R1/L11, S1/L21)</u>. Never connect the power cable to the terminals in the lower stand. Doing so will damage the inverter.

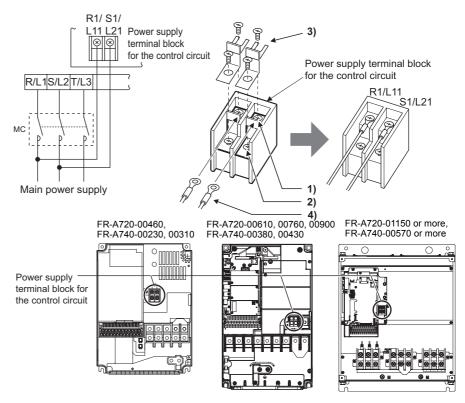

#### **CAUTION**

- Do not turn off the control power (terminals R1/L11 and S1/L21) with the main circuit power (R/L1, S/L2, T/L3) on. Doing so may damage the inverter.
- · Be sure to use the inverter with the jumpers across terminals R/L1-R1/L11 and S/L2-S1/L21 removed when supplying power from other sources. The inverter may be damaged if you do not remove the jumper.
- The voltage should be the same as that of the main control circuit when the control circuit power is supplied from other than the primary side of the MC.
- The power capacity is 60VA or more for FR-A720-00610 (FR-A740-00310) or less, 80VA or more for FR-A720-00760 (FR-A740-00380) or more when separate power is supplied from R1/L11, S1/L21.
- When the power supply used with the control circuit is different from the one used with the main circuit, make up a circuit which will switch off the main circuit power supply terminals R/L1, S/L2, T/L3 when the control circuit power supply terminals R1/L11, S1/L21 are switched off.
- · If the main circuit power is switched off (for 0.1s or more) then on again, the inverter resets and an alarm output will not be held.

### 2.3 Control circuit specifications

#### 2.3.1 Control circuit terminals

indicates that terminal functions can be selected using Pr. 178 to Pr. 196 (I/O terminal function selection) (Refer to page 227.)

#### (1) Input signals

Type	Terminal Symbol	Terminal Name	Description		Rated Specifications	Refer to page	
	STF	Forward rotation start Reverse	Turn on the STF signal to start forward rotation and turn it off to stop.  Turn on the STR signal to start reverse	When the STF and STR signals are turned on simultaneously, the stop	Input resistance	227	
	STR	rotation start	rotation and turn it off to stop.	command is given.	4.7kΩ Voltage at		
	STOP	Start self- holding selection	Turn on the STOP signal to self-hold the st	urn on the STOP signal to self-hold the start signal.			
	RH, RM, RL	Multi-speed selection	Multi-speed can be selected according to t RM and RL signals.		Contacts at short-circuited: 4 to 6mADC	227	
		Jog mode selection	Turn on the JOG signal to select Jog opera turn on the start signal (STF or STR) to sta			227	
	JOG	Pulse train input	JOG terminal can be used as pulse train in pulse train input terminal, the <i>Pr. 291</i> setting (maximum input pulse: 100kpulses/s)		Input resistance 2kΩ Contacts at short-circuited: 8 to 13mADC	227	
	RT	Second function selection	When the second function such as "second "second V/F (base frequency)" are set, turn selects these functions.	Turn on the RT signal to select second function. When the second function such as "second torque boost" and "second V/F (base frequency)" are set, turning on the RT signal selects these functions.			
	MRS Output stop  Turn on the MRS signal (20ms or more) to stop the inverter output. Use to shut off the inverter output when stopping the motor by electromagnetic brake.			•		227	
Contact input	RES	Reset	Used to reset alarm output provided when activated.  Turn on the RES signal for more than 0.1s Initial setting is for reset always. By setting to enabled only at an inverter alarm occurr 1s after reset is cancelled.	Input resistance $4.7k\Omega$ Voltage at opening: 21 to 27VDC Contacts at	227		
	AU	Terminal 4 input selection	Terminal 4 is made valid only when the AU signed frequency setting signal can be set between 4 Turning the AU signal on makes terminal 2 (v	and 20mADC.)	short-circuited: 4 to 6mADC	282	
	Α0	PTC input	AU terminal is used as PTC input terminal the motor). When using it as PTC input terminal switch to PTC.			183	
	CS	Selection of automatic restart after instantaneous power failure  When the CS signal is left on, the inverter restarts automatically at power restoration. Note that restart setting is necessary for this operation. In the initial setting, a restart is disabled.  (Refer to Pr. 57 Restart coasting time page 260)			227		
	SD	Contact input common (sink)	Common terminal for contact input terminal (sink logic) and terminal FM.  Common output terminal for 24VDC 0.1A power supply (PC terminal).  Isolated from terminals 5 and SE.			_	
	External transistor common, 24VDC power supply, contact input common (source)  When connecting the transistor output (open collector output), such as a programmable controller (PLC), when sink logic is selected, connect the external power supply common for transistor output to this terminal to prevent a malfunction caused by undesirable currents.  Can be used as 24VDC 0.1A power supply.  When source logic has been selected, this terminal serves as a contact input common.		Power supply voltage range 19.2 to 28.8VDC Current consumption 100mA	33			




Type	Terminal Symbol	Terminal Name	Description	Rated Specifications	Refer to page
	10E	Frequency setting power	When connecting the frequency setting potentiometer at an initial status, connect it to terminal 10.	10VDC±0.4V Permissible load current 10mA	282
	10	supply	Change the input specifications of terminal 2 when connecting it to terminal 10E. (Refer to Pr. 73 Analog input selection in page 285.)	5.2VDC±0.2V Permissible load current 10mA	282
setting	2	Frequency setting (voltage)	Inputting 0 to 5VDC (or 0 to 10V, 4 to 20mA) provides the maximum output frequency at 5V (10V, 20mA) and makes input and output proportional. Use <i>Pr. 73</i> to switch between input 0 to 5VDC (initial setting) and 0 to 20mADC when the voltage/current input switch is in the OFF position (initially set to OFF). The current input is always the same when the voltage/current input switch is in the ON position ( <i>Pr. 73</i> needs to be set to current input).	Voltage input: Input resistance 10kΩ ± 1kΩ Maximum permissible	282
Frequency se	4	Frequency setting (current)	Inputting 4 to 20mADC (or 0 to 5V, 0 to 10V) provides the maximum output frequency at 20mA (5V, 10V) makes input and output proportional. This input signal is valid only when the AU signal is on (terminal 2 input is invalid). Use <i>Pr. 267</i> to switch between input 4 to 20mA (initial setting) and 0 to 10VDC when the voltage/current input switch is in the OFF position (initially set to ON). The current input is always the same when the voltage/current input switch is in the ON position ( <i>Pr. 267</i> needs to be set to current input). Use <i>Pr. 858</i> to switch terminal functions.	voltage 20VDC Current input: Input resistance 245Ω ± 5Ω Maximum permissible current 30mA *	282
	1	Frequency Inputting 0 to ±5 VDC or 0 to ±10VDC adds this signal to terminal		Input resistance $10k\Omega \pm 1k\Omega$ Maximum permissible voltage $\pm 20VDC$	282
	5	Frequency setting common	Common terminal for frequency setting signal (terminal 2, 1 or 4) and analog output terminal AM and CA. Do not earth (ground).		282

<sup>\*</sup> When the voltage/current input switch is in the OFF position and current input is selected for Pr. 73 and Pr. 267, the input resistance at power off is  $10k\Omega \pm 1k\Omega$ .

#### (2) Output signals

Type	Terminal Symbol	Terminal Name	Description	Rated Specifications	Refer to page
Relay	A1, B1, C1	Relay output 1 (alarm output)	1 changeover contact output indicates that the inverter protective function has activated and the output stopped.  Abnormal: No conduction across B-C (Across A-C Continuity), Normal: Across B-C Continuity (No conduction across A-C)	Contact capacity: 230VAC 0.3A (Power	234
œ	A2, B2, C2	Relay output 2	1 changeover contact output	factor=0.4) 30VDC 0.3A	234

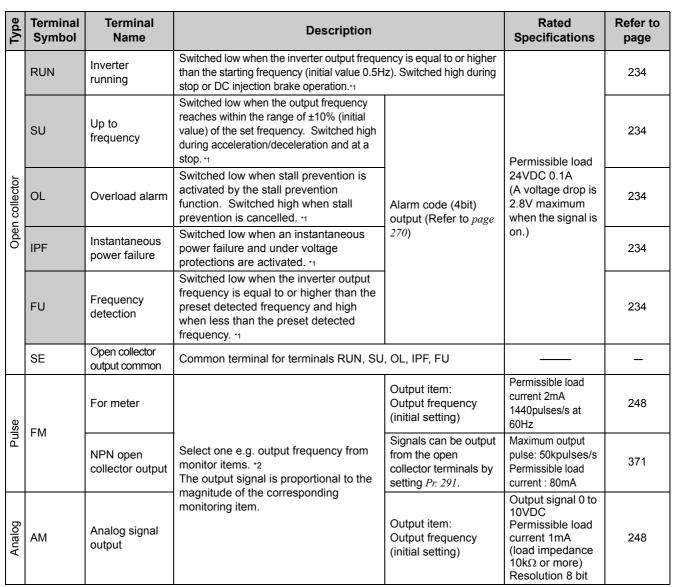

Low indicates that the open collector output transistor is on (conducts). High indicates that the transistor is off (does not conduct).

#### (3) Communication

Type		erminal Symbol	Terminal Name	Description	Refer to page	
10			PU connector	With the PU connector, communication can be made through RS-485.  (for connection on a 1:1 basis only)  . Conforming standard : EIA-485(RS-485)  . Transmission format : Multidrop  . Communication speed : 4800 to 38400bps  . Overall length : 500m (1640.42feet)	320	
RS-485	ls	TXD+	Inverter			
RS	terminals	TXD-	transmission terminal	With the RS-485 terminals, communication can be made through RS-485.  Conforming standard : EIA-485(RS-485)		
			Inverter	Transmission format : Multidrop link	322	
	RS-485	RXD-	reception terminal	Communication speed : 300 to 38400bps Overall length : 500m (1640.42feet)		
	R	SG	Earth (Ground)			
USB			USB connector	The FR-Configurator can be performed by connecting the inverter to the personnel computer through USB. Interfase:Conforms to USB1.1 Transmission speed:12Mbps Connector:USB B connector (B receptacle)		

Not output during inverter reset.



#### 2.3.2 Changing the control logic


The input signals are set to sink logic (SINK) when shipped from the factory.

To change the control logic, the jumper connector on the back of the control circuit terminal block must be moved to the other position.


(The output signals may be used in either the sink or source logic independently of the jumper connector position.)

1)Loosen the two installation screws in both ends of the control circuit terminal block. (These screws cannot be removed.)


Pull down the terminal block from behind the control circuit terminals.

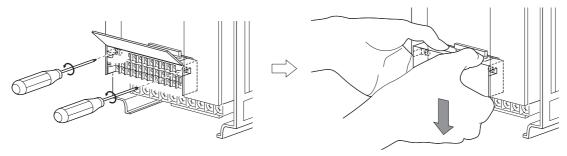

2) Change the jumper connector set to the sink logic (SINK) on the rear panel of the control circuit terminal block to source logic (SOURCE).

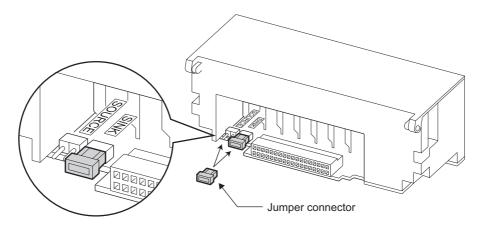

3) Using care not to bend the pins of the inverter's control circuit connector, reinstall the control circuit terminal block and fix it with the mounting screws.

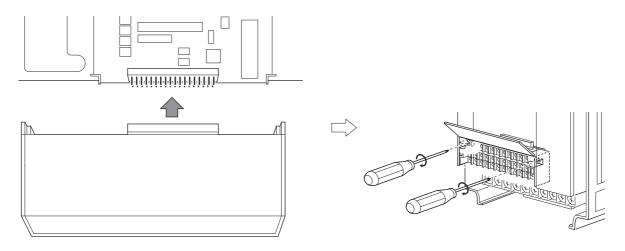

#### CAUTION :


- 1. Make sure that the control circuit connector is fitted correctly.
- 2. While power is on, never disconnect the control circuit terminal block.

#### 4) Sink logic and source logic

- · In sink logic, a signal switches on when a current flows from the corresponding signal input terminal.

  Terminal SD is common to the contact input signals. Terminal SE is common to the open collector output signals.
- In source logic, a signal switches on when a current flows into the corresponding signal input terminal.


  Terminal PC is common to the contact input signals. Terminal SE is common to the open collector output signals.
  - Current flow concerning the input/output signal when sink logic is selected
- Current flow concerning the input/output signal when source logic is selected

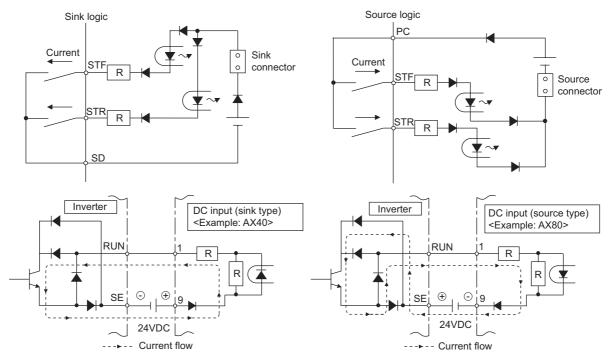

• When using an external power supply for transistor output


#### Sink logic type

Use terminal PC as a common terminal to prevent a malfunction caused by undesirable current. (Do not connect terminal SD of the inverter with terminal 0V of the external power supply. When using terminals PC-SD as a 24VDC power supply, do not install a power supply in parallel in the outside of the inverter. Doing so may cause a malfunction due to undesirable current.)

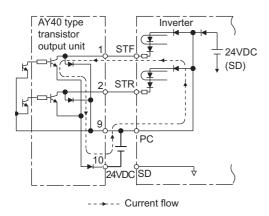

#### Source logic type


When using an external power supply for transistor output, use terminal SD as a common to prevent misoperation caused by undesirable current.

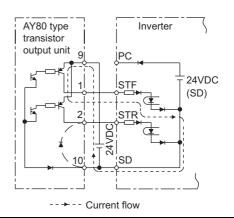



#### 2.3.3 Control circuit terminal layout

Terminal screw size: M3.5 Tightening torque: 1.2N·m

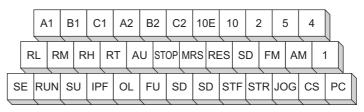

#### (1) Common terminals of the control circuit (SD, 5, SE)

Terminals SD, 5, and SE are all common terminals (0V) for I/O signals and are isolated from each other. Avoid connecting the terminal SD and 5 and the terminal SE and 5.

Terminal SD is a common terminal for the contact input terminals (STF, STR, STOP, RH, RM, RL, JOG, RT, MRS, RES, AU, CS) and frequency output signal (FM).

The open collector circuit is isolated from the internal control circuit by photocoupler.

Terminal 5 is a common terminal for frequency setting signal (terminal 2, 1 or 4) and analog output terminal AM.


It should be protected from external noise using a shielded or twisted cable.

Terminal SE is a common terminal for the open collector output terminal (RUN, SU, OL, IPF, FU).

The contact input circuit is isolated from the internal control circuit by photocoupler.

#### (2) Signal inputs by contactless switches

The contacted input terminals of the inverter (STF, STR, STOP, RH, RM, RL, JOG, RT, MRS, RES, AU, CS) can be controlled using a transistor instead of a contacted switch as shown on the right.

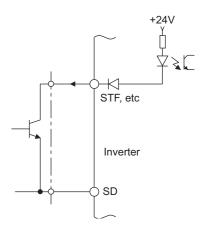

External signal input using transistor

#### 2.3.4 Wiring instructions

- 1) Terminals 5, SD and SE are common to the I/O signals and isolated from each other. Do not earth (ground). Avoid connecting the terminal SD and 5 and the terminal SE and 5.
- 2) Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits (including the 200V relay sequence circuit).
- 3) Use two or more parallel micro-signal contacts or twin contacts to prevent a contact faults when using contact inputs since the control circuit input signals are micro-currents.





Micro signal contacts


Twin contacts


- 4) Do not apply a voltage to the contact input terminals (e.g. STF) of the control circuit.
- 5) Always apply a voltage to the alarm output terminals (A, B, C) via a relay coil, lamp, etc.
- 6) It is recommended to use the cables of 0.75mm² gauge for connection to the control circuit terminals.
  If the cable gauge used is 1.25mm² or more, the front cover may be lifted when there are many cables running or the cables are run improperly, resulting in an operation panel contact fault.
- 7) The wiring length should be 30m (98.43feet) maximum.

#### ● Wiring of the control circuit of the FR-A720-02800 (FR-A740-01440) or more

For wiring of the control circuit of the FR-A720-02800 (FR-A740-01440) or more, separate away from wiring of the main circuit.

Make cuts in rubber bush of the inverter side and lead wires.

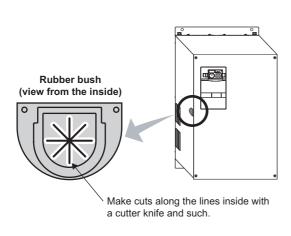


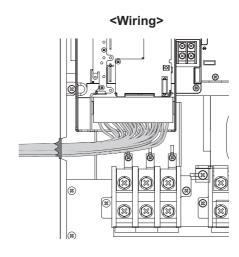



#### 2.3.5 When connecting the operation panel using a connection cable

When connecting the operation panel (FR-DU07) to the inverter using a cable, the operation panel can be mounted on the enclosure surface and operationality improves.

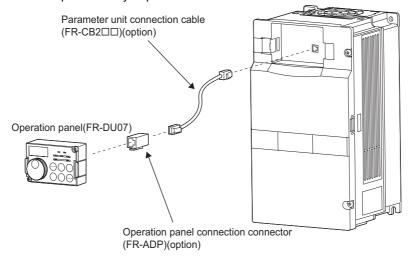

#### REMARKS

- Overall wiring length when the operation panel is connected: 20m(65.6 feet)
- Refer to the following when fabricating the cable on the user side. Commercially available product examples (as of Apr. 2004)


	Product	Туре	Maker
1)	10BASE-T cable	SGLPEV-T 0.5mm × 4P *	Mitsubishi Cable Industries, Ltd.
	RJ-45 connector	5-554720-3	Tyco Electronics Corporation

Do not use pins No. 2, 8 of the 10BASE-T cable.

#### 2.3.6 RS-485 terminal block

- Conforming standard: EIA-485(RS-485)
- · Transmission format: Multidrop link
- · Communication speed: MAX 38400bps
- · Overall length: 500m (1640 feet)
- · Connection cable:Twisted pair cable

(4 paires)

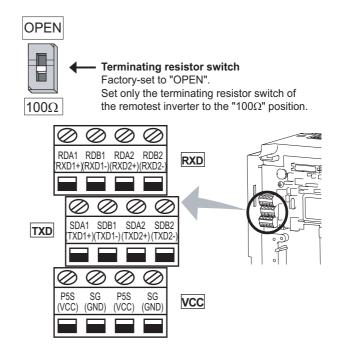

#### 2.3.7 Communication operation

Using the PU connector or RS-485 terminal, you can perform communication operation from a personal computer etc. When the PU connector is connected with a personal, FA or other computer by a communication cable, a user program can run and monitor the inverter or read and write to parameters.

For the Mitsubishi inverter protocol (computer link operation), communication can be performed with the PU connector and RS-485 terminal.

For the Modbus RTU protocol, communication can be performed with the RS-485 terminal.


For further details, refer to 320.

Refer to page 325 for RS-485 communication.

#### 2.4 Connection of motor with encoder (vector control)

Orientation control and encoder feedback control, and speed control, torque control and position control by full-scale vector control operation can be performed using a motor with encoder and a plug-in option FR-A7AP.

#### (1) Structure of the FR-A7AP

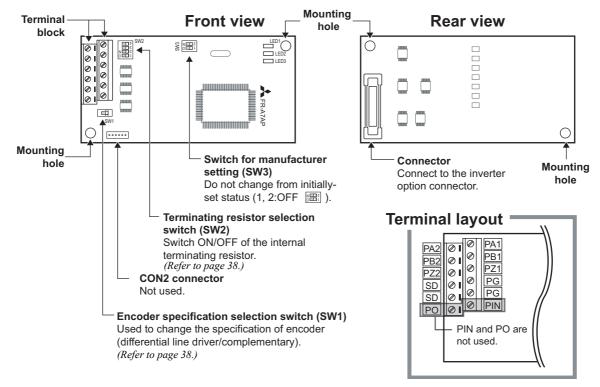


#### (2) Terminals of the FR-A7AP

Terminal	Terminal Name	Description
PA1	Encoder A-phase signal input	
PA2	Encoder A-phase inverse signal input	
PB1	Encoder B-phase signal input	A-, B- and Z-phase signals are input from the encoder.
PB2	Encoder B-phase inverse signal input	A-, b- and z-phase signals are input from the encoder.
PZ1	Encoder Z-phase signal input	
PZ2	Encoder Z-phase inversion signal input	
PG	Power supply (positive side) input	Input power for the encoder power supply.
SD	Power supply ground	Connect the external power supply (5V, 12V, 15V, 24V) and the encoder power cable.
PIN	Not used.	
PO	Not used.	



- (3) Switches of the FR-A7AP
- Encoder specification selection switch (SW1)
   Select either differential line driver or complementary
   It is initially set to the differential line driver. Switch its position according to output circuit.

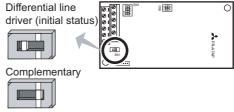

Terminating resistor selection switch (SW2)


Select ON/OFF of the internal terminating resistor. Set the switch to ON (initial status) when an encoder output type is differential line driver and set to OFF when complimentary.

ON: with internal terminating resistor (initial setting status)

OFF: without internal terminating resistor

#### REMARKS

- Set all swithces to the same setting (ON/OFF).
- If the encoder output type is differential line driver, set the terminating resistor switch to the "OFF" position when sharing the same encoder with other unit (NC (numerical controller), etc) or a terminating resistor is connected to other unit.

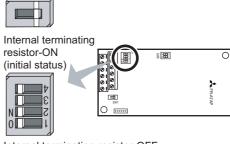

Internal terminating resistor-OFF



#### · Motor used and switch setting

Motor		Encoder Specification Selection Switch (SW1)	Terminating Resistor Selection Switch (SW2)	Power Specifications *2
Mitsubishi standard motor	SF-JR	Differential	ON	5V
Mitsubishi high efficiency	SF-HR	Differential	ON	5V
motor	Others	*1	*1	*1
Mitauhiahi aasatast	SF-JRCA	Differential	ON	5V
Mitsubishi constant- torque motor	SF-HRCA	Differential	ON	5V
torque motor	Others	*1	*1	*1
Dedicated motor	SF-V5RU	Complimentary	OFF	12V
Dedicated motor	SF-VR	Differential	ON	5V
Other manufacturer motor	_	*1	*1	*1

<sup>\*1</sup> Set according to the motor encoder used.

#### CAUTION

SW3 switch is for manufacturer setting. Do not change the setting

#### · Encoder specification


Item	Encoder for SF-JR	Encoder for SF-V5RU	
Resolution	1024 Pulse/Rev	2048 Pulse/Rev	
Power supply voltage	DC5V±10%	DC12V±10%	
Current consumption	150mA	150mA	
Output signal form	A, B phases (90° phase shift) Z phase: 1 pulse/rev	A, B phases (90° phase shift) Z phase: 1 pulse/rev	
Output circuit	Differential line driver 74LS113 equivalent	Complimentary (constant voltage output matched by emitter follow)	
Output voltage	H level: 2.4V or more L level: 0.5V or less	H level: -3V or more L level: 3V or less	

#### CAUTION =

Encoder with resolution of 1000 to 4096 pulse/rev is recommended.


<sup>\*2</sup> Choose a power supply for encoder according to the encoder used (5V/12V/15V/24V).

#### (4) Encoder Cable

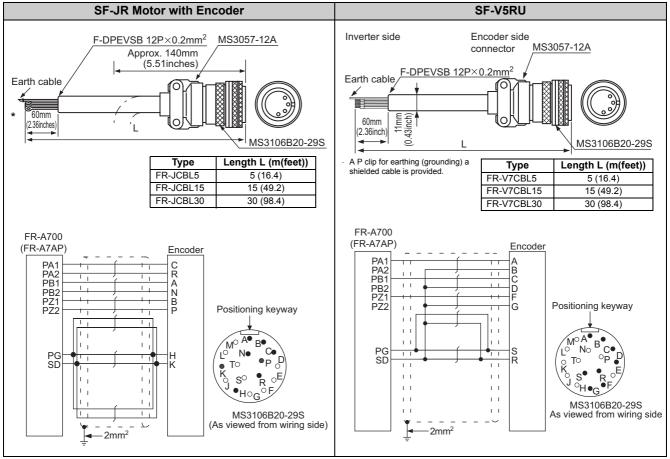

- \* As the terminal block of the FR-A7AP is an insertion type, earth cables need to be modified. (See below)
- When using the dedicated encoder cable (FR-JCBL, FR-V5CBL, etc.) for the conventional motor, cut the crimpling terminal of the encoder cable and strip its sheath to make its cables loose.

Also, protect the shielded cable of the twisted pair shielded cable to ensure that it will not make contact with the conductive area.

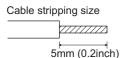

Wire the stripped cable after twisting it to prevent it from becoming loose. In addition, do not solder it. In addition, do not solder it. Use a bar terminal as necessary.

#### REMARKS

Information on bar terminals

Introduced products (as of August, 2005): Phoenix Contact Co.,Ltd.

Terminal Screw Size	Bar Terminal Model (with insulation sleeve)	Bar Terminal Model (without insulation sleeve)	Wire Size (mm²)
M2	AI 0.5-6WH	A 0.5-6	0.3 to 0.5

When using the bar terminal (without insulation sleeve), use care so that the twisted wires do not come out.




#### Connection terminal compatibility table


Motor		SF-V5RU	SF-JR/HR/JRCA/HRCA (with Encoder)
Encoder cable		FR-V7CBL/FR-V5CBL	FR-JCBL
	PA1	PA	PA
	PA2	Keep this open.	PAR
	PB1	РВ	PB
FR-A7AP terminal	PB2	Keep this open.	PBR
I N-A/AF (CIIIIIIai	PZ1	PZ	PZ
	PZ2	Keep this open.	PZR
	PG	PG	5E
	SD	SD	AG2

#### (5) Wiring

#### · Speed control

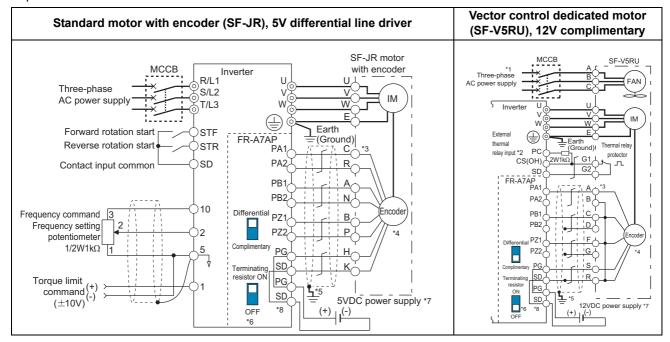


#### · Torque control

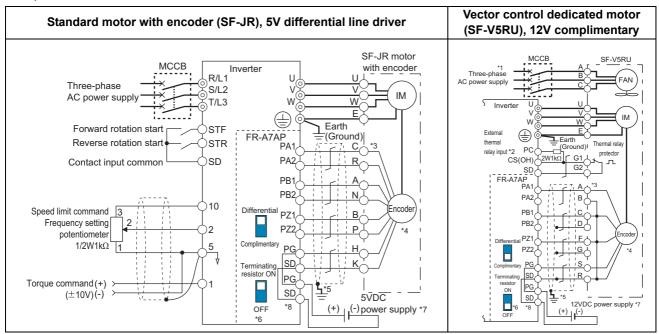

- \*1 For the fan of the 7.5kW or less dedicated motor, the power supply is single phase. (200V/50Hz, 200 to 230V/60Hz)
- \*2 Assign OH (external thermal input) signal to the terminal CS. (Set "7" in *Pr.* 186 )
  Connect a 2W1kΩ resistor between the terminal PC and CS (OH). Install the resistor pushing against the bottom part of the terminal block so as to avoid a contact with other cables.


  \*Refer to page 227 for details of Pr.186 CS terminal function selection.

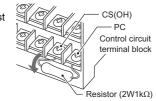

- \*3 The pin number differs according to the encoder used.
- \*4 Connect the encoder so that there is no looseness between the motor and motor shaft. Speed ratio should be 1:1.
- \*5 Earth (Ground) the shielded cable of the encoder cable to the enclosure with a P clip, etc. (Refer to page 43.)
- \*6 For the complementary, set the terminating resistor selection switch to off position. (Refer to page 38.)
- \*7 A separate power supply of 5V/12V/15V/24V is necessary according to the encoder power specification. When performing orientation control together, an encoder and power supply can be shared.
- \*8 For terminal compatibility of the FR-JCBL, FR-V7CBL and FR-A7AP, refer to page 40.




#### · Position control

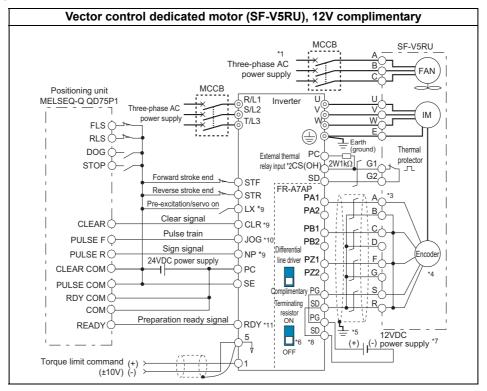

- \*1 For the fan of the 7.5kW or less dedicated motor, the power supply is single phase. (200V/50Hz, 200 to 230V/60Hz)
- \*2 Assign OH (external thermal input) signal to the terminal CS. (Set "7" in Pr. 186) Connect a 2W1kΩ resistor between the terminal PC and CS (OH). Install the resistor pushing against the bottom part of the terminal block so as to avoid a contact with other cables.

Refer to page 227 for details of Pr.186 CS terminal function selection.

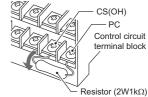

- \*3 The pin number differs according to the encoder used.
- \*4 Connect the encoder so that there is no looseness between the motor and motor shaft. Speed ratio should be 1:1.
- \*5 Earth (Ground) the shielded cable of the encoder cable to the enclosure with a P clip, etc. (Refer to page 43.)
- \*6 For the complementary, set the terminating resistor selection switch to off position. (Refer to page 38.)
- \*7 A separate power supply of 5V/12V/15V/24V is necessary according to the encoder power specification. When performing orientation control together, an encoder and power supply can be shared.
- \*8 For terminal compatibility of the FR-JCBL, FR-V7CBL and FR-A7AP, refer to page 40.
- \*9 Assign the function using *Pr.178 to Pr.184*, *Pr.187 to Pr.189 (input terminal function selection)*.
- \*10 When position control is selected, terminal JOG function is made invalid and conditional position pulse train input terminal becomes valid.
- \*11 Assign the function using Pr.190 to Pr.194 (output terminal function selection).

Earthing (grounding) example using a P clip

Shield

P clip

Encoder cable

#### (6) Instructions for encoder cable wiring

• Use twisted pair shield cables (0.2mm<sup>2</sup> or larger) to connect the FR-A7AP and position detector. Cables to terminals PG and SD should be connected in paralell or be larger in size according to the cable length.

To protect the cables from noise, run them away from any source of noise (e.g. the main circuit and power voltage).

Wiring Length	Paralell Connection		Larger-Size Cable
Within 10m (32.8feet)	At least 2 cables	Cable gauge	0.4mm <sup>2</sup> or larger
Within 20m (65.6feet)	At least 4 cables	Cable gauge 0.2mm <sup>2</sup>	0.75mm <sup>2</sup> or larger
Within 100m (328.1feet) *	At least 6 cables	0.211111-	1.25mm <sup>2</sup> or larger

When differential driver is set and a wiring length is 30m (98.4feet) or more

The wiring length can be extended to 100m by slightly increasing the power by 5V (approx. 5.5V) using six or more cables with gauge size of 0.2mm<sup>2</sup> in parallel or a cable with gauge size of 1.25mm<sup>2</sup> or more. Note that the voltage applied should be within power supply specifications of encoder.

 To reduce noise of the encoder cable, earth (ground) the encoder shielded cable to the enclosure (as near as the inverter) with a P clip or U clip made of metal.

#### REMARKS

- For details of the optional encoder dedicated cable (FR-JCBL/FR-V7CBL), refer to page 39.
- The FR-V7CBL is provided with a P clip for earthing (grounding) shielded cable.

#### (7) Parameter for encoder (Pr.359, Pr.369)

Parameter Number	Name	Initial Value	Setting Range	Description
359	Encoder rotation	1	0	CW Forward rotation is clockwise rotation when viewed from A.
333	direction	l l	1	Forward rotation is counterclockwise rotation when viewed from A.
369	Number of encoder pulses	1024	0 to 4096	Set the number of encoder pulses output. Set the number of pulses before it is multiplied by 4.

The above parameters can be set when the FR-A7AP (option) is mounted.

#### (8) Motor for vector control and parameter setting

Motor name		Pr.9 Electronic thermal O/L relay	Pr.71 Applied motor	Pr.80 Motor capacity	Pr.81 Number of motor poles	Pr.359 Encoder rotation direction	Pr.369 Number of encoder pulses
	SF-JR	Motor rated current	0	Motot capacity	Number of motor poles	1	1024
Mitsubishi standard	SF-JR 4P 1.5kW or less	Motor rated current	20	Motot capacity	Number of motor poles	1	1024
motor	SF-HR	Motor rated current	40	Motot capacity	Number of motor poles	1	1024
	Others	Motor rated current	3 +1	Motot capacity	Number of motor poles	*2	*2
Mitaubiahi aanatant	SF-JRCA 4P	Motor rated current	1	Motot capacity	4	1	1024
Mitsubishi constant- torque motor	SF-HRCA 4P	Motor rated current	50	Motot capacity	4	1	1024
torque motor	Others	Motor rated current	13 •1	Motot capacity	Number of motor poles	*2	*2
Vector control dedicated motor	SF-V5RU (1500r/min series)	0 *3	30	Motot capacity	4	1	2048
Other manufacturer's standard motor	_	Motor rated current	3 *1	Motot capacity	Number of motor poles	*2	*2
Other manufacturer's constant torque motor	_	Motor rated current	13 •1	Motot capacity	Number of motor poles	*2	*2

Values in the bolded frame are initial values.

- \*1 Offline auto tuning is necessary. (Refer to page 186)
- \*2 Set this parameter according to the motor (encoder) used.
- '3 Use thermal protector input provided with the motor.

#### ♦ Parameters referred to ♦

Vector control (speed control) Refer to page 97.

Vector control (torque control) Refer to page 121.

Vector control (position control) Refer to page 129.

Orientation control Refer to page 216.

Encoder feedback control Refer to page 374.



- (9) Combination with a vector control dedicated motor

  Refer to the table below when using with a vector control dedicated motor.
- Combination with the SF-V5RU and SF-THY

Voltage	200V class				400V class	
Rated speed	1500r/min					
Base frequency 50Hz						
Maximum speed			3000	r/min		
Motor capacity	Motor frame number	Motor type	Inverter type	Motor frame number	Motor type	Inverter type
1.5kW	90L	SF-V5RU1K	FR-A720-00110	90L	SF-V5RUH1K	FR-A740-00060
2.2kW	100L	SF-V5RU2K	FR-A720-00175	100L	SF-V5RUH2K	FR-A740-00060
3.7kW	112M	SF-V5RU3K	FR-A720-00240	112M	SF-V5RUH3K	FR-A740-00090
5.5kW	132S	SF-V5RU5K	FR-A720-00330	132S	SF-V5RUH5K	FR-A740-00170
7.5kW	132M	SF-V5RU7K	FR-A720-00460	132M	SF-V5RUH7K	FR-A740-00230
11kW	160M	SF-V5RU11K	FR-A720-00610	160M	SF-V5RUH11K	FR-A740-00310
15kW	160L	SF-V5RU15K	FR-A720-00760	160L	SF-V5RUH15K	FR-A740-00380
18.5kW	180M	SF-V5RU18K	FR-A720-00900	180M	SF-V5RUH18K	FR-A740-00430
22kW	180M	SF-V5RU22K	FR-A720-01150	180M	SF-V5RUH22K	FR-A740-00570
30kW	200L	SF-V5RU30K	FR-A720-01450	200L	SF-V5RUH30K	FR-A740-00710
37kW	200L	SF-V5RU37K	FR-A720-01750	200L	SF-V5RUH37K	FR-A740-00860
45kW	200L	SF-V5RU45K	FR-A720-02150	200L	SF-V5RUH45K	FR-A740-01100
55kW	225S	SF-V5RU55K	FR-A720-02880	225S	SF-V5RUH55K	FR-A740-01440
75kW	250MD	SF-THY	FR-A720-03460	250MD	SF-THY	FR-A740-01880
90kW	_	_	_	250MD	SF-THY	FR-A740-02160
110kW	_	_	_	280MD	SF-THY	FR-A740-02600
132kW	_	_	_	280MD	SF-THY	FR-A740-03250
160kW	_	_	_	280MD	SF-THY	FR-A740-03610
200kW	_	_	_	280L	SF-THY	FR-A740-04320
250kW	_	_	_	315H	SF-THY	FR-A740-05470

#### 2.5 Connection of stand-alone option units

The inverter accepts a variety of stand-alone option units as required.

Incorrect connection will cause inverter damage or accident. Connect and operate the option unit carefully in accordance with the corresponding option unit manual.

## 2.5.1 Connection of the dedicated external brake resistor (FR-ABR) (FR-A720-00900 (FR-A740-00430) or less)

The built-in brake resistor is connected across terminals P/+ and PR. Fit the external dedicated brake resistor (FR-ABR) when the built-in brake resistor does not have enough thermal capability for high-duty operation. At this time, remove the jumper from across terminals PR-PX (FR-A720-00330 (FR-A740-00170) or less) and connect the dedicated brake resistor (FR-ABR) across terminals P/+-PR.

(For the locations of terminal P/+ and PR, refer to the terminal block layout (page 17).)

Removing jumpers across terminal PR-PX disables the built-in brake resistor (power is not supplied).

Note that the built-in brake resistor is not need to be removed from the inverter.

The lead wire of the built-in brake resistor is not need to be removed from the terminal.

Set parameters below.


- · Pr. 30 Regenerative function selection = "1"
- · Pr. 70 Special regenerative brake duty = "FR-A720-00330 (FR-A740-00170) or less: 10%, FR-A720-00460 (FR-A740-00230) or more: 6%" (Refer to page 203)

#### = CAUTION

- 1. The brake resistor connected should only be the dedicated brake resistor.
- 2. The jumper across terminals PR-PX (FR-A720-00330 (FR-A740-00170) or less) must be disconnected before connecting the dedicated brake resistor. Doing so may damage the inverter.


#### ●FR-A720-00030, 00050

- 1) Remove the screws in terminals PR and PX and remove the jumper.
- 2) Connect the brake resistor across terminals P/+ and PR. (The jumper should remain disconnected.)

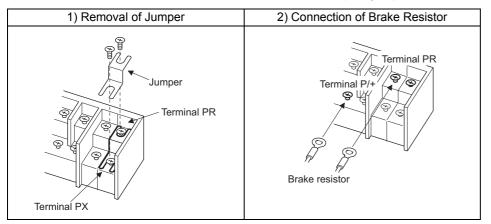

#### ●FR-A720-00080 to 00175, FR-A740-00015 to 00090


- 1) Remove the screws in terminals PR and PX and remove the jumper.
- 2) Connect the brake resistor across terminals P/+ and PR. (The jumper should remain disconnected.)

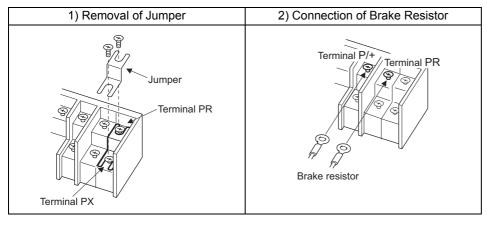




#### ●FR-A720-00240, 00330, FR-A740-00120, 00170

- 1) Remove the screws in terminals PR and PX and remove the jumper.
- 2) Connect the brake resistor across terminals P/+ and PR. (The jumper should remain disconnected.)

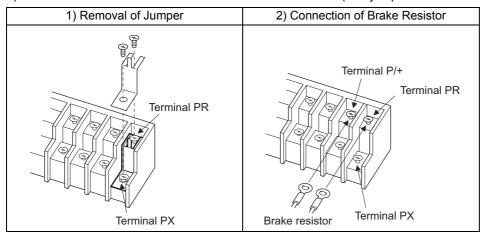


#### ●FR-A720-00460 to 00900, FR-A740-00230 to 00430

Connect the brake resistor across terminals P/+ and PR.

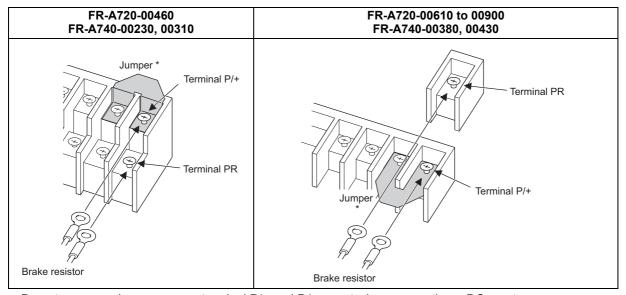


Do not remove a jumper across terminal P/+ and P1 except when connecting a DC reactor.

• When the regenerative brake transistor is damaged, the following sequence is recommended to prevent overheat and burnout of the brake resistor.

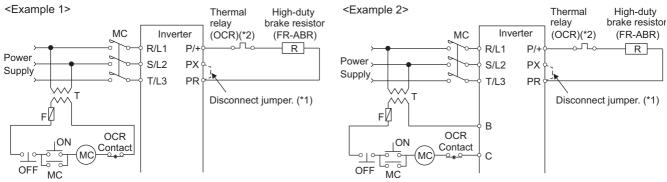

- \*1 Since the FR-A720-00460 (FR-A740-00230) or more inverter is not provided with the PX terminal, a jumper is not need to be removed.
- \*2 Refer to the table below for the type number of each capacity of thermal relay and the diagram below for the connection. (Always install a thermal relay when using the FR-A720-00460 (FR-A740-00230) or more)

Power Supply Voltage	High-Duty Brake Resistor	Thermal Relay Type (Mitsubishi product)	Contact Rating	
	FR-ABR-0.4K	TH-N20CXHZ-0.7A		
	FR-ABR-0.75K	TH-N20CXHZ-1.3A		
	FR-ABR-2.2K	TH-N20CXHZ-2.1A		
	FR-ABR-3.7K	TH-N20CXHZ-3.6A		
200V	FR-ABR-5.5K	TH-N20CXHZ-5A		
	FR-ABR-7.5K	TH-N20CXHZ-6.6A		
	FR-ABR-11K	TH-N20CXHZ-11A		
	FR-ABR-15K	TH-N20CXHZ-11A	110V 5AAC,	
	FR-ABR-22K	TH-N60-22A	220V 2AAC(AC-11 class) 110V 0.5ADC, 220V 0.25ADC(DC-11 class)	
	FR-ABR-H0.4K	TH-N20CXHZ-0.24A		
	FR-ABR-H0.75K	TH-N20CXHZ-0.35A	220 V 0.20 (DO 11 0.005)	
	FR-ABR-H2.2K	TH-N20CXHZ-0.9A		
400V	FR-ABR-H3.7K	TH-N20CXHZ-1.3A		
4000	FR-ABR-H5.5K	TH-N20CXHZ-2.1A		
	FR-ABR-H7.5K	TH-N20CXHZ-2.5A	1	
	FR-ABR-H11K	TH-N20CXHZ-6.6A		
	FR-ABR-H15K	TH-N20CXHZ-6.6A		

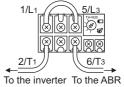


P/+ terminal



#### 2.5.2 Connection of the brake unit (FR-BU/MT-BU5)

When connecting the brake unit (FR-BU(H)/MT-BU5) to improve the brake capability at deceleration, make connection as shown below.

(1) Connection with the FR-BU (FR-A720-02150 (FR-A740-01100) or less)

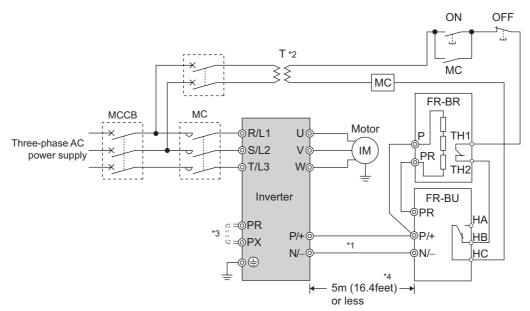


- 1 Connect the inverter terminals (P/+, N/-) and brake unit (FR-BU (H)) terminals so that their terminal signals match with each other. (Incorrect connection will damage the inverter.)
- \*2 When the power supply is 400V class, install a step-down transformer.
- \*3 Be sure to remove a jumper across terminal PR-PX when using the FR-BU with the inverter of FR-A720-00330 (FR-A740-00170) or less.
- \*4 The wiring distance between the inverter, brake unit (FR-BU) and resistor unit (FR-BR) should be within 5m(16.4 feet). If twisted wires are used, the distance should be within 10m(32.8feet).

#### **CAUTION**

· If the transistors in the brake unit should become faulty, the resistor can be unusually hot, causing a fire. Therefore, install a magnetic contactor on the inverteris input side to configure a circuit so that a current is shut off in case of fault.

#### (2) Connection with the MT-BU5 (FR-A720-02800 (FR-A740-01440) or more)

After making sure that the wiring is correct, set "1" in Pr.30 Regenerative function selection. (Refer to page 203)

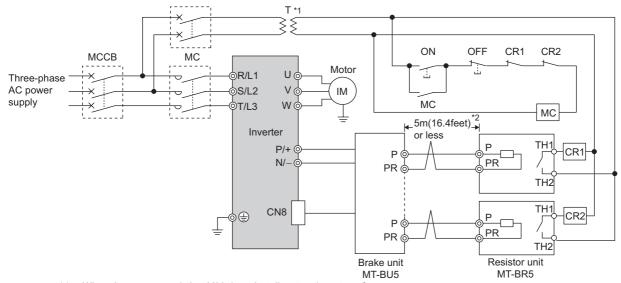

- \*1 When the power supply is 400V class, install a step-down transformer.
- \*2 The wiring length between the resistor unit and brake resistor should be 10m(32.8feet) maximum when wires are twisted and 5m(16.4feet) maximum when wires are not twisted.


#### CAUTION

- · Install the brake unit in a place where a cooling air reaches the brake unit heatsink and within a distance of the cable supplied with the brake unit reaches the inverter.
- For wiring of the brake unit and inverter, use an accessory cable supplied with the brake unit. Connect the main circuit cable to the inverter terminals P/+ and N/- and connect the control circuit cable to the CN8 connector inside by making cuts in the rubber bush at the top of the inverter for leading the cable.
- The brake unit which uses multiple resistor units has terminals equal to the number of resistor units. Connect one resistor unit to one pair of terminal (P, PR).


#### <Inserting the CN8 connector>

Make cuts in rubber bush of the upper portion of the inverter and lead a cable.

1) Make cuts in the rubber bush for leading the CN8 connector cable with a nipper or cutter knife.

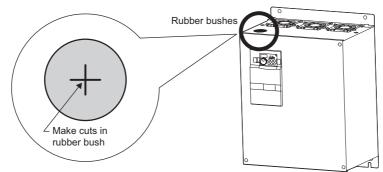

2) Insert a connector on the MT-BU5 side through a rubber bush to connect to a connector on the inverter side.

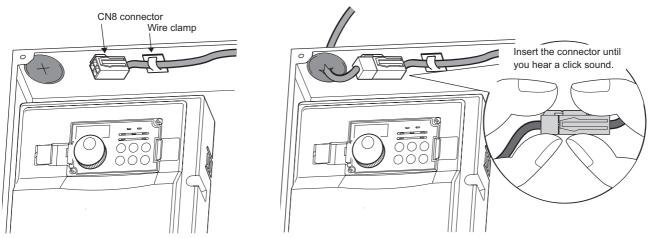


CAUTION

Clamp the CN8 connector cable on the inverter side with a wire clamp securely. Do not connect the MT-BU5 to a CN8 connector of the FR-A740-01100.



#### 2.5.3 Connection of the brake unit (BU type)

Connect the brake unit (BU type) correctly as shown below. Incorrect connection will damage the inverter. Remove the jumper across terminals HB-PC and terminals TB-HC of the brake unit and fit it to across terminals PC-TB.

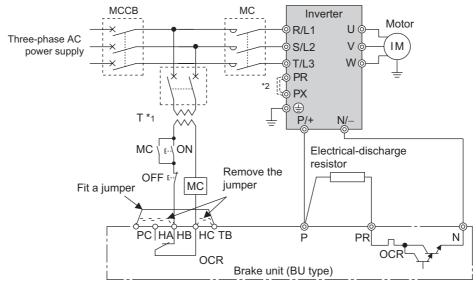

- \*1 When the power supply is 400V class, install a step-down transformer.
- \*2 Be sure to remove a jumper across terminal PR-PX when using the BU-type with the inverter of FR-A720-00330 (FR-A740-00170) or less.

#### CAUTION

- 1. The wiring distance between the inverter, brake unit and resistor unit should be within 2m(6.56feet). If twisted wires are used, the distance should be within 5m(16.4feet).
- 2. If the transistors in the brake unit should become faulty, the resistor can be unusually hot, causing a fire. Therefore, install a magnetic contactor on the inverter's power supply side to shut off a current in case of fault.


#### 2.5.4 Connection of the high power factor converter (FR-HC/MT-HC)

When connecting the high power factor converter (FR-HC/MT-HC) to suppress power harmonics, perform wiring securely as shown below.

Incorrect connection will damage the high power factor converter and inverter.

After making sure that the wiring is correct, set "2" in Pr. 30 Regenerative function selection. (Refer to page 203.)

(1) Connection with the FR-HC (FR-A720-02150 (FR-A740-01100) or less)

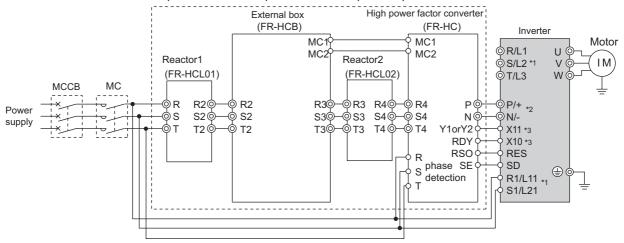


- \*1 Remove the jumpers across the inverter terminals R/L1-R1/L11, S/L2-S1/L21, and connect the control circuit power supply to the R1/L11 and S1/L21 terminals. Always keep the power input terminals R/L1, S/L2, T/L3 open. Incorrect connection will damage the inverter. (E.OPT (option alarm) will occur. (*Refer to page 405*.))
- \*2 Do not insert the MCCB between terminals P/+ N/- (P/+ P/+, N/- N/-). Opposite polarity of terminals N/-, P/+ will damage the inverter.
- \*3 Use *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the terminals used for the X10 (X11) signal. (*Refer to page 227.*) For communication where the start command is sent only once, e.g. RS-485 communication operation, use the X11 signal when making setting to hold the mode at occurrence of an instantaneous power failure. (*Refer to page 204.*)

#### CAUTION

- 1. The voltage phases of terminals R/L1, S/L2, T/L3 and terminals R4, S4, T4 must be matched.
- 2. Use sink logic (factory setting) when the FR-HC is connected. The FR-HC cannot be connected when source logic is selected.

#### (2) Connection with the MT-HC (FR-A720-02880 (FR-A740-01440) or more)

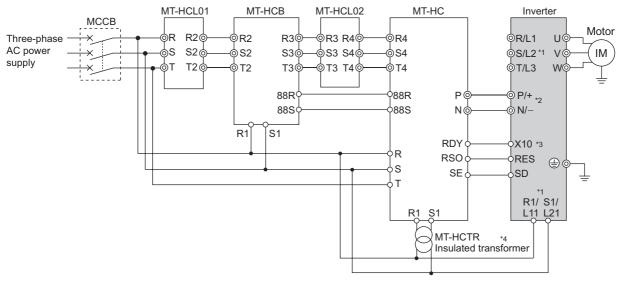

- \*1 Remove the jumper across terminals R/L1 R1/L11, S/L2 /L21 of the inverter, and connect the control circuit power supply to the R1/L11 and S1/L21 terminals. The power input terminals R/L1, S/L2, T/L3 must be open. Incorrect connection will damage the inverter. (E.OPT (option alarm) will occur. (*Refer to page 405*.)
- \*2 Do not insert the MCCB between terminals P/+ N/- (P P/+, N N/-). Opposite polarity of terminals N, P will damage the inverter.
- \*3 Use *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the terminals used for the X10 (X11) signal. (*Refer to page 227.*) For communication where the start command is sent only once, e.g. RS-485 communication operation, use the X11 signal when making setting to hold the mode at occurrence of an instantaneous power failure. (*Refer to page 204.*)
- \*4 Connect the power supply to terminals R1 and S1 of the MT-HC via an insulated transformer.

#### = CAUTION


- · The voltage phases of terminals R/L1, S/L2, T/L3 and terminals R4, S4, T4 must be matched.
- · Use sink logic (factory setting) when the MT-HC is connected. The MT-HC cannot be connected when source logic is selected.
- · When connecting the inverter to the MT-HC, do not connect the DC reactor provided to the inverter.



## 2.5.5 Connection of the power regeneration common converter (FR-CV) (FR-A720-02150 (FR-A740-01100) or less)

When connecting the power regeneration common converter (FR-CV), make connection so that the inverter terminals (P/+, N/-) and the terminal symbols of the power regeneration common converter (FR-CV) are the same.

After making sure that the wiring is correct, set "2" in *Pr. 30 Regenerative function selection*. (*Refer to page 203*.)

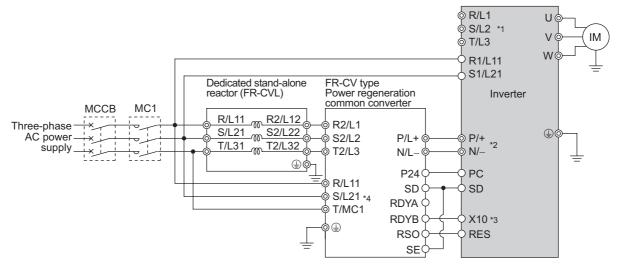


- \*1 Remove the jumpers across terminals R/L1-R1/L11 and S/L2-S1/L21 of the inverter, and connect the control circuit power supply across terminals R1/L11-S1/L21. Always keep the power input terminals R/L1, S/L2, T/L3 open. Incorrect connection will damage the inverter. (E.OPT (option alarm) will occur. (Refer to page 405))
- \*2 Do not insert an MCCB between the terminals P/+ N/- (between P/L+ P/+, between N/L- N/-). Opposite polarity of terminals N/-, P/+ will damage the inverter.
- \*3 Assign the terminal for X10 signal using any of Pr. 178 to Pr. 189 (input terminal function selection). (Refer to page 227)
- \*4 Be sure to connect the power supply and terminals R/L11, S/L21, T/MC1.
  Operating the inverter without connecting them will damage the power regeneration common converter.

#### = CAUTION

- 1. The voltage phases of terminals R/L11, S/L21, T/MC1 and terminals R2/L1, S2/L2, T2/L3 must be matched.
- 2. Use sink logic (factory setting) when the FR-CV is connected. The FR-CV cannot be connected when source logic is selected.

## 2.5.6 Connection of power regeneration converter (MT-RC) (FR-A720-02880 (FR-A740-01440) or more)

When connecting a power regeneration converter (MT-RC), perform wiring securely as shown below. Incorrect connection will damage the regeneration converter and inverter. After connecting securely, set "1" in *Pr. 30 Regenerative function selection* and "0" in *Pr. 70 Special regenerative brake duty*.

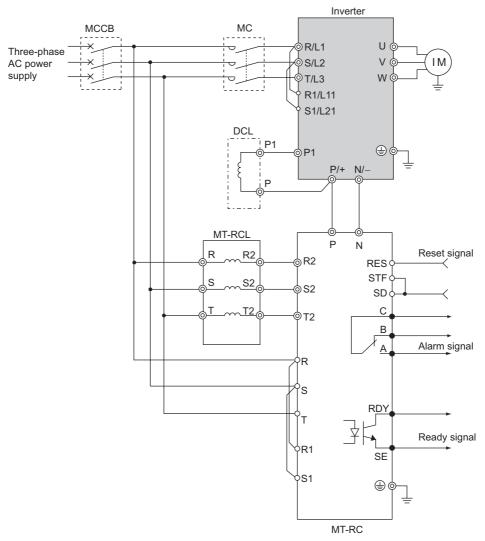

**CAUTION** 

· Refer to the MT-RC manual for precautions for connecting the power coordination reactor and others.


#### 2.5.7 Connection of the power factor improving DC reactor (FR-HEL)

When using the DC reactor (FR-HEL), connect it between terminals P1-P/+.

For the FR-A720-02150 (FR-A740-01100) or less, the jumper connected across terminals P1-P/+ must be removed. Otherwise, the reactor will not exhibit its performance.

For the FR-A720-02880 (FR-A740-01440) or more, a DC reactor is supplied. Always install the reactor.

When using the FR-A740-01100 with LD or SLD set, always use a DC reactor (option).

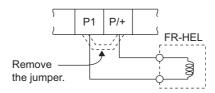

#### CAUTION =

- 1. The wiring distance should be within 5m (16.4feet).
- 2. The size of the cables used should be equal to or larger than that of the power supply cables (R/L1, S/L2, T/L3).

## **MEMO**

# PRECAUTIONS FOR USE OF THE INVERTER

This chapter explains the "PRECAUTIONS FOR USE OF THE INVERTER" for use of this product.

Always read the instructions before using the equipment

3.1	Noise and leakage currents	56
	Installation of a reactor	
3.3	Power-off and magnetic contactor (MC)	62
	Inverter-driven 400V class motor	
	Precautions for use of the inverter	



#### 3.1 Noise and leakage currents

#### 3.1.1 Leakage currents and countermeasures

Capacitances exist between the inverter I/O cables, other cables and earth and in the motor, through which a leakage current flows. Since its value depends on the capacitances, carrier frequency, etc., low acoustic noise operation at the increased carrier frequency of the inverter will increase the leakage current. Therefore, take the following measures. Select the earth leakage breaker according to its rated sensitivity current, independently of the carrier frequency setting.

#### (1) To-earth (ground) leakage currents

Leakage currents may flow not only into the inverter's own line but also into the other lines through the earth (ground) cable, etc. These leakage currents may operate earth (ground) leakage circuit breakers and earth leakage relays unnecessarily.

#### Countermeasures

- If the carrier frequency setting is high, decrease the *Pr. 72 PWM frequency selection* setting. Note that motor noise increases. Selecting *Pr. 240 Soft-PWM operation selection* makes the sound inoffensive.
- · By using earth leakage circuit breakers designed for harmonic and surge suppression in the inverter's own line and other line, operation can be performed with the carrier frequency kept high (with low noise).
- To-earth (ground) leakage currents
  - · Take caution as long wiring will increase the leakage current. Decreasing the carrier frequency of the inverter reduces the leakage current.
  - Increasing the motor capacity increases the leakage current. The leakage current of the 400V class is larger than that of the 200V class.

#### (2) Line-to-line leakage currents

Harmonics of leakage currents flowing in static capacities between the inverter output cables may operate the external thermal relay unnecessarily. When the wiring length is long (50m (164.04feet) or more) for the 400V class small-capacity model (FR-A740-00170 or less), the external thermal relay is likely to operate unnecessarily because the ratio of the leakage current to the rated motor current increases.


• Line-to-line leakage current data example (200V class)

Motor	Rated Motor	Leakage Currents(mA)		
Capacity (kW(HP))	Current(A)	Wiring length 50m(164.04feet)	Wiring length 100m(328.08feet)	
0.4(1/2)	1.8	310	500	
0.75(1)	3.2	340	530	
1.5(2)	5.8	370	560	
2.2(3)	8.1	400	590	
3.7(5)	12.8	440	630	
5.5(7.5)	19.4	490	680	
7.5(10)	25.6	535	725	

Dedicated motor SF-JR 4P
 Carrier frequency: 14.5kHz
 Used wire: 2mm<sup>2</sup>, 4cores

Cabtyre cable

\*The leakage currents of the 400V class are about twice as large.

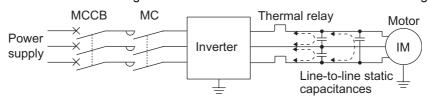

Line-to-line leakage currents path

#### Countermeasures

- · Use Pr. 9 Electronic thermal O/L relay.
- · If the carrier frequency setting is high, decrease the *Pr. 72 PWM frequency selection* setting. Note that motor noise increases. Selecting *Pr. 240 Soft-PWM operation selection* makes the sound inoffensive. To ensure that the motor is protected against line-to-line leakage currents, it is recommended to use a temperature sensor to directly detect motor temperature.

#### Installation and selection of moulded case circuit breaker

Install a moulded case circuit breaker (MCCB) on the power receiving side to protect the wiring of the inverter input side. Select the MCCB according to the inverter input side power factor (which depends on the power supply voltage, output frequency and load). Especially for a completely electromagnetic MCCB, one of a slightly large capacity must be selected since its operation characteristic varies with harmonic currents. (Check it in the data of the corresponding breaker.) As an earth (ground) leakage breaker, use the Mitsubishi earth (ground) leakage breaker designed for harmonics and surge suppression.

#### (3) Selection of rated sensitivity current of earth (ground) leakage breaker

When using the earth (ground) leakage circuit breaker with the inverter circuit, select its rated sensitivity current as follows, independently of the PWM carrier frequency:

 Breaker designed for harmonic and surge suppression Rated sensitivity current:

 $|\Delta n| \ge 10 \times (|g1 + |gn + |gi + |g2 + |gm)$ 

Standard breaker

Rated sensitivity current:


 $I\Delta n \ge 10 \times \{Ig1 + Ign + Igi + 3 \times (Ig2 + Igm)\}\$ 

Ig1, Ig2: Leakage currents in wire path during commercial power supply operation

Ign: Leakage current of inverter input side noise filter


Igm: Leakage current of motor during commercial power supply operation

Igi: Leakage current of inverter unit

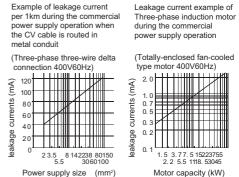

For "\\_" connection, the amount of leakage current is 1/3

#### Example

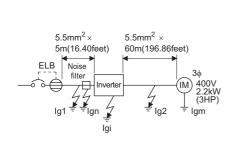

	Breaker Designed for Harmonic and Surge Suppression	Standard Breaker	
Leakage current lg1 (mA)	$\frac{1}{3} \times 66 \times \frac{5m(16.40feet)}{1000m} = 0.11$ (3280.80feet)		
Leakage current Ign (mA)	0 (without i	noise filter)	
Leakage current Igi (mA)	1 (without EMC filter) Refer to the following table for the leakage current of the inverter*		
Leakage current Ig2 (mA)	$\frac{1}{3} \times 66 \times \frac{60m}{(196.86feet)} = 1.32$ $\frac{1}{3} \times 66 \times \frac{1000m}{(3280.80feet)} = 1.32$		
Motor leakage current Igm (mA)	0.36		
Total leakage current (mA)	2.79 6.15		
Rated sensitivity current (mA)	30 100		

<sup>\*</sup> Refer to page 9 for the presence/absence of the EMC filter.

#### •Inverter leakage current (with and without EMC filter)

Input power conditions

(200V class: 220V/60Hz, 400V class: 440V/60Hz, power supply unbalance within 3%)

	Voltage	EMC Filter		
	(V)	ON (mA)	OFF (mA)	
Phase grounding	200	22(1)*	1	
grounding	400	30	1	
Earthed-neutral system	400	1	1	

\*For the FR-A720-00030 and 00050, the EMC filter is always valid. The leakage current is 1mA.

#### = CAUTION =

- · Install the earth leakage breaker (ELB) on the input side of the inverter.
- In the A connection earthed-neutral system, the sensitivity current is purified against an earth (ground) fault in the inverter output side. Earthing (Grounding) must conform to the requirements of national and local safety regulations and electrical codes. (JIS, NEC section 250, IEC 536 class 1 and other applicable standards)
- When the breaker is installed on the output side of the inverter, it may be unnecessarily operated by harmonics even if the effective value is less than the rating. In this case, do not install the breaker since the eddy current and hysteresis loss will increase, leading to temperature rise.
- The following models are standard breakers....BV-C1, BC-V, NVB, NV-L, NV-G2N, NV-G3NA and NV-2F earth leakage relay (except NV-ZHA), NV with AA neutral wire open-phase protection
- The other models are designed for harmonic and surge suppression....NV-C/NV-S/MN series, NV30-FA, NV50-FA, BV-C2, earth leakage alarm breaker (NF-Z), NV-ZHA, NV-H



#### 3.1.2 Inverter-generated noises and their reduction techniques

Some noises enter the inverter to malfunction it and others are radiated by the inverter to malfunction peripheral devices. Though the inverter is designed to be insusceptible to noises, it handles low-level signals, so it requires the following basic techniques. Also, since the inverter chops outputs at high carrier frequency, that could generate noises. If these noises cause peripheral devices to malfunction, measures should be taken to suppress noises. These techniques differ slightly depending on noise propagation paths.

#### 1) Basic techniques


- · Do not run the power cables (I/O cables) and signal cables of the inverter in parallel with each other and do not bundle them.
- Use twisted pair shielded cables for the detector connection and control signal cables, and connect the sheathes
  of the shield cables to terminal SD.
- · Earth (Ground) the inverter, motor, etc. at one point.


#### 2) Techniques to reduce noises that enter and malfunction the inverter

When devices that generate many noises (which use magnetic contactors, magnetic brakes, many relays, for example) are installed near the inverter and the inverter may be malfunctioned by noises, the following measures must be taken:

- Provide surge suppressors for devices that generate many noises to suppress noises.
- · Fit data line filters to signal cables.
- · Earth (Ground) the shields of the detector connection and control signal cables with cable clamp metal.

## 3) Techniques to reduce noises that are radiated by the inverter to malfunction peripheral devices Inverter-generated noises are largely classified into those radiated by the cables connected to the inverter and inverter main circuits (I/O), those electromagnetically and electrostatically induced to the signal cables of the peripheral devices close to the main circuit power supply, and those transmitted through the power supply cables.

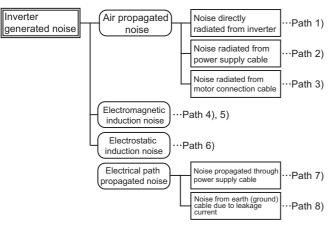

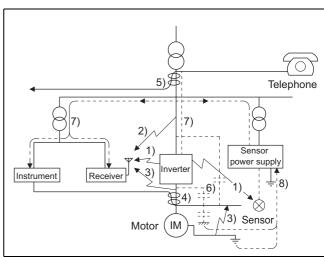


Noise Propagation Path	Measures
1) 2) 3)	When devices that handle low-level signals and are liable to malfunction due to noises, e.g. instruments, receivers and sensors, are contained in the enclosure that contains the inverter or when their signal cables are run near the inverter, the devices may be malfunctioned by air-propagated noises. The following measures must be taken:  (1) Install easily affected devices as far away as possible from the inverter.  (2) Run easily affected signal cables as far away as possible from the inverter and its I/O cables.  (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and do not bundle them.  (4) Set the EMC filter ON/OFF connector of the inverter to the ON position. (Refer to page 15)  (5) Inserting a line noise filter into the output suppresses the radiation noise from the cables.  (6) Use shield cables as signal cables and power cables and run them in individual metal conduits to produce further effects.
4) 5) 6)	When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction noises may be propagated to the signal cables to malfunction the devices and the following measures must be taken:  (1) Install easily affected devices as far away as possible from the inverter.  (2) Run easily affected signal cables as far away as possible from the I/O cables of the inverter.  (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and do not bundle them.  (4) Use shield cables as signal cables and power cables and run them in individual metal conduits to produce further effects.
7)	When the power supplies of the peripheral devices are connected to the power supply of the inverter in the same line, inverter-generated noises may flow back through the power supply cables to malfunction the devices and the following measures must be taken:  (1) Set the EMC filter ON/OFF connector of the inverter to the ON position. (Refer to page 15)  (2) Install the line noise filter (FR-BLF, FR-BSF01) to the power cables (I/O cables) of the inverter.
8)	When a closed loop circuit is formed by connecting the peripheral device wiring to the inverter, leakage currents may flow through the earth (ground) cable of the inverter to malfunction the device. In such a case, disconnection of the earth (ground) cable of the device may cause the device to operate properly.

#### Data line filter

Noise entry can be prevented by providing a data line filter for the detector cable etc.

#### Noise reduction examples

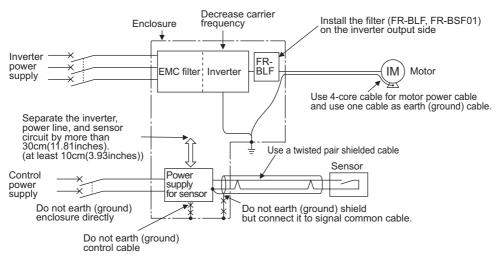



#### 3.1.3 Power supply harmonics

The inverter may generate power supply harmonics from its converter circuit to affect the power generator, power capacitor etc. Power supply harmonics are different from noise and leakage currents in source, frequency band and transmission path. Take the following countermeasure suppression techniques.


•The differences between harmonics and noises are indicated below:

Item	Harmonics	Noise
Frequency	Normally number 40 to 50 max. (3kHz or less)	High frequency (several 10kHz to 1GHz order)
Environment To-electric channel, power impedar		To-space, distance, wiring path
Quantitative understanding	Theoretical calculation possible	Random occurrence, quantitative grasping difficult
Generated amount	Nearly proportional to load capacity	Depending on the current fluctuation ratio (larger as switching is faster)
Affected equipment immunity	Specified in standard per equipment	Different depending on maker's equipment specifications
Suppression example	Provide reactor.	Increase distance.

#### Measures

The harmonic current generated from the inverter to the input side differs according to various conditions such as the wiring impedance, whether a reactor is used or not, and output frequency and output current on the load side.

For the output frequency and output current, we understand that they should be calculated in the conditions under the rated load at the maximum operating frequency.

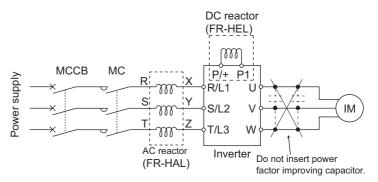


#### CAUTION

The power factor improving capacitor and surge suppressor on the inverter output side may be overheated or damaged by the harmonic components of the inverter output. Also, since an excessive current flows in the inverter to activate overcurrent protection, do not provide a capacitor and surge suppressor on the inverter output side when the motor is driven by the inverter. For power factor improvement, install a reactor on the inverter input side or in the DC circuit.

#### 3.2 Installation of a reactor

When the inverter is connected near a large-capacity power transformer (1000kVA or more and wiring length 10m(32.81feet) max.) or when a power capacitor is to be switched over, an excessive peak current may flow in the power input circuit, damaging the converter circuit. To prevent this, always install the optional DC reactor (FR-HEL) or AC reactor (FR-HAL)

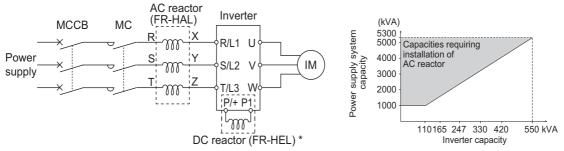

\* When connecting the FR-HEL to the FR-F720-02150 (FR-F740-01100) or less, remove the jumper across terminals P/+ - P1. For the FR-F720-02880 (FR-F740-01440) or more, a DC reactor is supplied. Always install the reactor.

When using the FR-A740-01100 with LD or SLD set, always use a DC reactor (option).

#### **REMARKS**

The wiring length between the FR-HEL and inverter should be 5m (16.4feet) maximum and minimized. Use the same wire size as that of the power supply wire (R/L1, S/L2, T/L3). (Refer to page 23)

## 3.3 Power-off and magnetic contactor (MC)

#### (1) Inverter input side magnetic contactor (MC)

On the inverter input side, it is recommended to provide an MC for the following purposes.


( Refer to page 4 for selection.)

- 1) To release the inverter from the power supply when the inverter's protective function is activated or when the drive is not functioning (e.g. emergency stop operation). When cycle operation or heavy-duty operation is performed with an optional brake resistor connected, overheat and burnout of the electrical-discharge resistor can be prevented if a regenerative brake transistor is damaged due to insufficient heat capacity of the electrical-discharge resistor and excess regenerative brake duty.
- 2) To prevent any accident due to an automatic restart at restoration of power after an inverter stop made by a power failure
- 3) To reset the inverter for an extended period of time
  - The control power supply for inverter is always running and consumes a little power. When stopping the inverter for an extended period of time, powering off the inverter will save power slightly.
- 4) To separate the inverter from the power supply to ensure safe maintenance and inspection work

  The inverter's input side MC is used for the above purpose, select class JEM1038-AC3MC for the inverter input side current when making an emergency stop during normal operation.

#### **REMARKS**

Since repeated inrush currents at power on will shorten the life of the converter circuit (switching life is about 1,000,000 times. (For the 200V class FR-A720-01450 or more, switching life is about 500,000)), frequent starts and stops of the MC must be avoided. Turn on/off the inverter start controlling terminals (STF, STR) to run/stop the inverter.

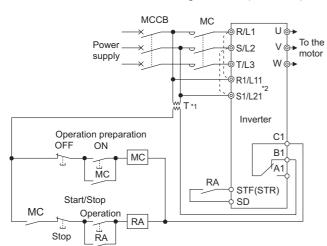

#### Inverter start/stop circuit example

As shown on the left, always use the start signal (ON or OFF across terminals STF or STR-SD) to make a start or stop. (Refer to page 232)

- \*1 When the power supply is 400V class, install a step-down transformer.
- \*2 Connect the power supply terminals R1/L11, S1/L21 of the control circuit to the primary side of the MC to hold an alarm signal when the inverter's protective circuit is activated. At this time, remove jumpers across terminals R/L1-R1/L11 and S/L2-S1/L21. (Refer to page 27 for removal of the jumper.)

#### (2) Handling of the inverter output side magnetic contactor

Switch the magnetic contactor between the inverter and motor only when both the inverter and motor are at a stop. When the magnetic contactor is turned on while the inverter is operating, overcurrent protection of the inverter and such will activate. When an MC is provided to switch to a commercial power supply, for example, it is recommended to use commercial power supply-inverter switchover operation *Pr. 135 to Pr. 139 (Refer to page 362)*.

## 3.4 Inverter-driven 400V class motor

In the PWM type inverter, a surge voltage attributable to wiring constants is generated at the motor terminals. Especially for a 400V class motor, the surge voltage may deteriorate the insulation. When the 400V class motor is driven by the inverter, consider the following measures:

#### Measures

It is recommended to take either of the following measures:

- Rectifying the motor insulation and limiting the PWM carrier frequency according to the wiring length For the 400V class motor, use an <u>insulation-enhanced motor</u>. Specifically.
  - 1) Specify the "400V class inverter-driven insulation-enhanced motor".
  - 2) For the dedicated motor such as the constant-torque motor and low-vibration motor, use the "inverter-driven, dedicated motor".
  - 3) Set Pr. 72 PWM frequency selection as indicated below according to the wiring length

		Wiring Length	
	50m (164.04feet) or less	50m to 100m (164.04feet to 328.09feet)	exceeding 100m (328.09feet)
Pr. 72 PWM frequency selection	15(14.5kHz) or less	9(9kHz) or less	4(4kHz) or less

(2) Suppressing the surge voltage on the inverter side Connect the surge voltage suppression filter (FR-ASF-H) to the FR-A720-02150 (FR-A740-01100) or less and the sine wave filter (MT-BSL/BSC) to the FR-A720-02880 (FR-A740-01440) or more on the inverter output side.

#### CAUTION =

- · For details of Pr. 72 PWM frequency selection, refer to page 279.
- · For explanation of surge voltage suppression filter (FR-ASF-H) and sine wave filter (MT-BSL/BSC), refer to the manual of each option.
- Do not perform vector control with a surge voltage suppression filter (FR-ASF-H) or sine wave filer (MT-BSL/BSC) connected.



#### 3.5 Precautions for use of the inverter

The FR-A700 series is a highly reliable product, but incorrect peripheral circuit making or operation/handling method may shorten the product life or damage the product.

Before starting operation, always recheck the following items.


- (1) Use crimping terminals with insulation sleeve to wire the power supply and motor.
- (2) Application of power to the output terminals (U, V, W) of the inverter will damage the inverter. Never perform such wiring.
- (3) After wiring, wire offcuts must not be left in the inverter. Wire offcuts can cause an alarm, failure or malfunction. Always keep the inverter clean. When drilling mounting holes in an enclosure etc., take care not to allow chips and other foreign matter to enter the inverter.
- (4) Use cables of the size to make a voltage drop 2% maximum. If the wiring distance is long between the inverter and motor, a main circuit cable voltage drop will cause the motor torque to decrease especially at the output of a low frequency. Refer to page 24 for the recommended cable sizes.
- (5) The overall wiring length should be 500m (1640.4 feet) maximum. (The wiring length should be 100m (328.09 feet) maximum for vector control.) Especially for long distance wiring, the fast-response current limit function may be reduced or the equipment connected to the inverter output side may malfunction or become faulty under the influence of a charging current due to the stray capacity of the wiring. Therefore, note the overall wiring length. (Refer to page 26.)
- (6) Electromagnetic wave interference
  The input/output (main circuit) of the inverter includes high frequency components, which may interfere with the communication devices (such as AM radios) used near the inverter. In this case, set the EMC filter valid to minimize interference. (Refer to page 15)
- (7) Do not install a power factor correction capacitor, surge suppressor or radio noise filter on the inverter output side. This will cause the inverter to trip or the capacitor, and surge suppressor to be damaged. If any of the above devices is installed, immediately remove it.
- (8) Before starting wiring or other work after the inverter is operated, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. The capacitor is charged with high voltage for some time after power off and it is dangerous.
- (9) A short circuit or earth (ground) fault on the inverter output side may damage the inverter modules.
  - Fully check the insulation resistance of the circuit prior to inverter operation since repeated short circuits caused by peripheral circuit inadequacy or an earth (ground) fault caused by wiring inadequacy or reduced motor insulation resistance may damage the inverter modules.
  - Fully check the to-earth (ground) insulation and inter-phase insulation of the inverter output side before power-on. Especially for an old motor or use in hostile atmosphere, securely check the motor insulation resistance etc.
- (10) Do not use the inverter input side magnetic contactor to start/stop the inverter.

  Always use the start signal (ON/OFF of STF and STR signals) to start/stop the inverter. (Refer to page 62)
- (11) Across P/+ and PR terminals, connect only an external regenerative brake discharge resistor. Do not connect a mechanical brake.
- (12) Do not apply a voltage higher than the permissible voltage to the inverter I/O signal circuits.

  Contact to the inverter I/O signal circuits or opposite polarity may damage the I/O devices. Especially check the wiring to prevent the speed setting potentiometer from being connected incorrectly to short terminals 10E-5.
- MC2 which are used for commercial power supply-inverter switch-over.

  When the wiring is incorrect or if there is a commercial power supply-inverter switch-over circuit as shown on the right, the inverter will be damaged by leakage current from the power supply due to arcs generated at the time of switch-over or chattering caused by a sequence error. (Commercial operation can not be performed with the vector dedicated motor (SF-V5RU, SF-THY).)

(13) Provide electrical and mechanical interlocks for MC1 and

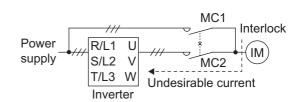

- (14) If the machine must not be restarted when power is restored after a power failure, provide a magnetic contactor in the inverter's input side and also make up a sequence which will not switch on the start signal.

  If the start signal (start switch) remains on after a power failure, the inverter will automatically restart as soon as the power is restored.
- (15) Instructions for overload operation
  When performing an operation of frequent start/stop with the inverter, rise/fall in the temperature of the transistor element of the inverter will repeat due to a continuous flow of large current, shortening the life from thermal fatigue. Since thermal fatigue is related to the amount of current, the life can be increased by reducing current at locked condition, starting current, etc. Decreasing current may increase the life. However, decreasing current will result in insufficient torque and the inverter may not start. Therefore, choose the inverter which has enough allowance for current (up to 2 rank larger in capacity).
- (16) Make sure that the specifications and rating match the system requirements.
- (17) A motor with encoder is necessary for vector control. In addition, connect the encoder directly to the backlash-free motor shaft. An encoder is not necessary for real sensorless vector control.

## **MEMO**

# 4 / PARAMETERS

This chapter explains the "PARAMETERS" for use of this product.

Always read this instructions before use.

The abbreviations in the explanations below are as follows:

...V/F control,

Magnetic flux ... Advanced magnetic flux vector control,

Sensorless ...Real sensorless vector control

vector ...Vector control

1

2

3

٦

5


6

7




## 4.1 Operation panel (FR-DU07)

#### 4.1.1 Parts of the operation panel (FR-DU07)

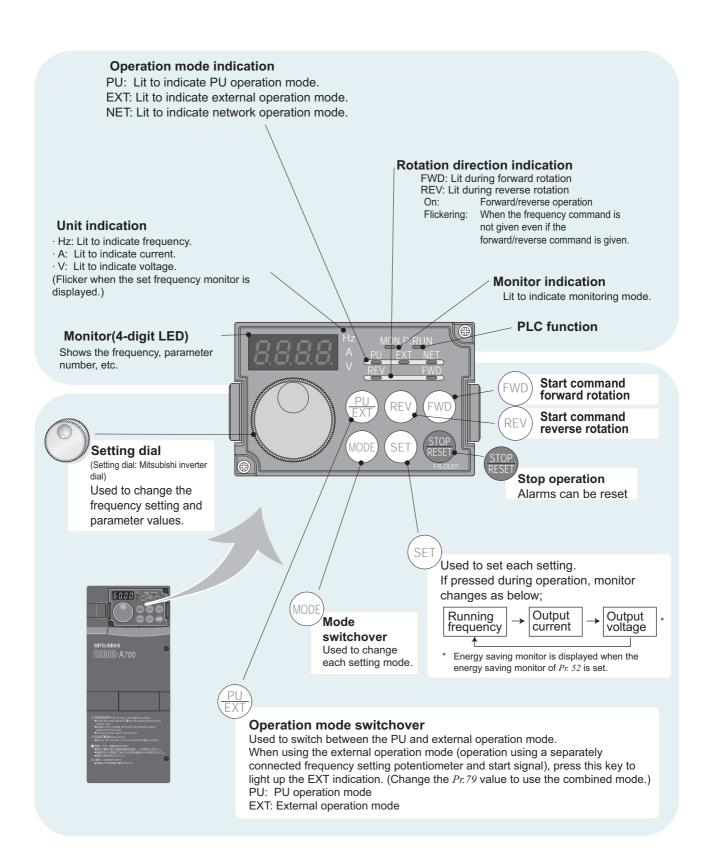

## 4.1.2 Basic operation (factory setting)

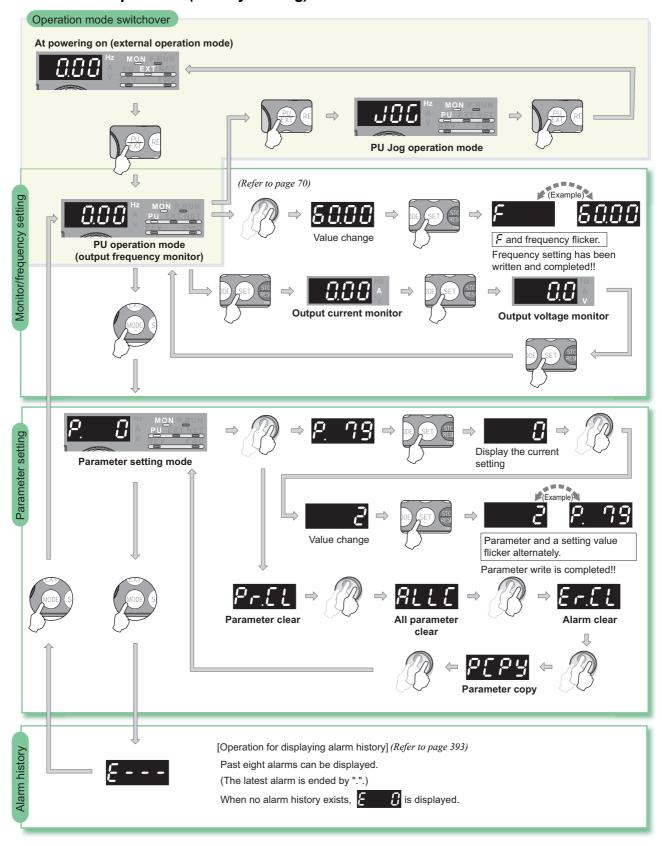


#### REMARKS

Pr. 161 will not be displayed when simple mode (Pr. 160 User group read selection="9999") is selected. (Refer to page 304)



#### 4.1.3 Change the parameter setting value

Changing example Change the Pr. 1 Maximum frequency.

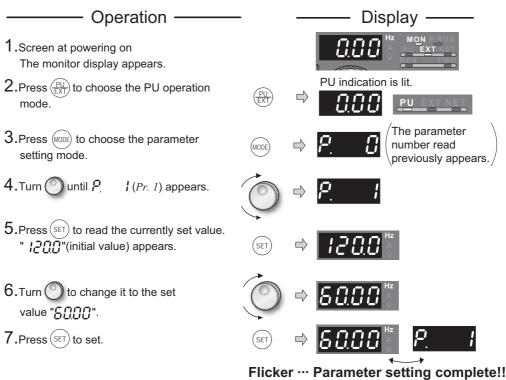

- · By turning ( ), you can read another parameter.
- · Press (SET) to show the setting again.
- · Press (SET) twice to show the next parameter.
- · Press (MODE) twice to return the monitor to frequency monitor.

## ? Er I to Er Y are displayed ... Why?

appears. ..... Write disable error

appears. ..... Write error during operation

appears. ..... Calibration error

8-4 appears. .... Mode designation error

For details refer to page 398.

#### 4.1.4 Setting dial push



Push the setting dial ( ) to display the set frequency currently set.

### 4.2 Parameter List

#### 4.2.1 Parameter list

For simple variable-speed operation of the inverter, the initial setting of the parameters may be used as they are. Set the necessary parameters to meet the load and operational specifications. Parameter setting, change and check can be made from the operation panel (FR-DU07).

#### REMARKS

- · @ indicates simple mode parameters. (initially set to extended mode)
- The shaded parameters in the table allow its setting to be changed during operation even if "0" (initial value) is set in *Pr.77 Parameter write selection*.
- · Refer to the appendix 4 (page 448) for instruction codes for communication and availability of parameter clear, all clear, and parameter copy of each parameter.

Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	<b>©</b> 0	Torque boost	0 to 30%	0.1%	6/4/3/2/1% *1	143	
	<b>©</b> 1	Maximum frequency	0 to 120Hz	0.01Hz	120/60Hz *2	156	
	<b>©</b> 2	Minimum frequency	0 to 120Hz	0.01Hz	0Hz	156	
"	<b>©</b> 3	Base frequency	0 to 400Hz	0.01Hz	60Hz	158	
tions	<b>©</b> 4	Multi-speed setting (high speed)	0 to 400Hz	0.01Hz	60Hz	165	
Basic functions	<b>©</b> 5	Multi-speed setting (middle speed)	0 to 400Hz	0.01Hz	30Hz	165	
sic f	⊚ 6	Multi-speed setting (low speed)	0 to 400Hz	0.01Hz	10Hz	165	
Ba	<b>©</b> 7	Acceleration time	0 to 3600/360s	0.1/0.01s	5/15s *3	172	
	<b>©</b> 8	Deceleration time	0 to 3600/360s	0.1/0.01s	5/15s *3	172	
	<b>©</b> 9	Electronic thermal O/L relay	0 to 500/0 to 3600A *2	0.01/0.1A *2	Inverter rated output current	181	
ion	10	DC injection brake operation frequency	0 to 120Hz, 9999	0.01Hz	3Hz	199	
injecti brake	11	DC injection brake operation time	0 to 10s, 8888	0.1s	0.5s	199	
DC injection brake	12	DC injection brake operation voltage	0 to 30%	0.1%	4/2/1%*3	199	
_	13	Starting frequency	0 to 60Hz	0.01Hz	0.5Hz	174	
_	14	Load pattern selection	0 to 5	1	0	160	
Jog operation	15	Jog frequency	0 to 400Hz	0.01Hz	5Hz	167	
Jog operatio	16	Jog acceleration/deceleration time	0 to 3600/360s	0.1/0.01s	0.5s	167	
_	17	MRS input selection	0, 2, 4	1	0	230	
_	18	High speed maximum frequency	120 to 400Hz	0.01Hz	120/60Hz *2	156	
_	19	Base frequency voltage	0 to 1000V, 8888, 9999	0.1V	9999	158	
Acceleration/ deceleration times	20	Acceleration/deceleration reference frequency	1 to 400Hz	0.01Hz	60Hz	172	
Accele decele tin	21	Acceleration/deceleration time increments	0, 1	1	0	172	
all ntion	22	Stall prevention operation level (torque limit level )	0 to 400%	0.1%	150%	149	
Stall prevention	23	Stall prevention operation level compensation factor at double speed	0 to 200%, 9999	0.1%	9999	149	
Multi-speed setting	24 to 27	Multi-speed setting (4 speed to 7 speed)	0 to 400Hz, 9999	0.01Hz	9999	165	
	28	Multi-speed input compensation selection	0, 1	1	0	169	
_	29	Acceleration/deceleration pattern selection	0 to 5	1	0	175	
_	30	Regenerative function selection	0, 1, 2, 10, 11, 12, 20, 21	1	0	203	
	31	Frequency jump 1A	0 to 400Hz, 9999	0.01Hz	9999	157	
cò	32	Frequency jump 1B	0 to 400Hz, 9999	0.01Hz	9999	157	
Frequency jump	33	Frequency jump 2A	0 to 400Hz, 9999	0.01Hz	9999	157	
requ	34	Frequency jump 2B	0 to 400Hz, 9999	0.01Hz	9999	157	
ш	35	Frequency jump 3A	0 to 400Hz, 9999	0.01Hz	9999	157	
	36	Frequency jump 3B	0 to 400Hz, 9999	0.01Hz	9999	157	
_	37	Speed display	0, 1 to 9998	1	0	246	




Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
cy	41	Up-to-frequency sensitivity	0 to 100%	0.1%	10%	241	
uen	42	Output frequency detection	0 to 400Hz	0.01Hz	6Hz	241	
Frequency detection	43	Output frequency detection for reverse rotation	0 to 400Hz, 9999	0.01Hz	9999	241	
	44	Second acceleration/deceleration time	0 to 3600/360s	0.1/0.01s	5s	172	
	45	Second deceleration time	0 to 3600/360s, 9999	0.1/0.01s	9999	172	
SI	46	Second torque boost	0 to 30%, 9999	0.1%	9999	143	
ction	47	Second V/F (base frequency)	0 to 400Hz, 9999	0.01Hz	9999	158	
Second functions	48	Second stall prevention operation current	0 to 220%	0.1%	150%	149	
Secor	49	Second stall prevention operation frequency	0 to 400Hz, 9999	0.01Hz	0Hz	149	
o,	50	Second output frequency detection	0 to 400Hz	0.01Hz	30Hz	241	
	51	Second electronic thermal O/L relay	0 to 500A, 9999/ 0 to 3600A, 9999 *2	0.01/0.1A *2	9999	181	
suc	52	DU/PU main display data selection	0, 5 to 14, 17 to 20, 22 to 25, 32 to 35, 50 to 57, 100	1	0	248	
Monitor functions	54	FM terminal function selection	1 to 3, 5 to 14, 17, 18, 21, 24, 32 to 34, 50, 52, 53, 70	1	1	248	
onit	55	Frequency monitoring reference	0 to 400Hz	0.01Hz	60Hz	254	
M	56	Current monitoring reference	0 to 500/0 to 3600A *2	0.01/0.1A *2	Inverter rated output current	254	
Automatic restart	57	Restart coasting time	0, 0.1 to 5s, 9999/ 0, 0.1 to 30s, 9999 2	0.1s	9999	260	
Automati	58	Restart cushion time	0 to 60s	0.1s	1s	260	
_	59	Remote function selection	0, 1, 2, 3	1	0	169	
	60	Energy saving control selection	0, 4	1	0	273	
tion/	61	Reference current	0 to 500A, 9999/ 0 to 3600A, 9999 *2	0.01A/0.1A *2	9999	162, 178	
acceleration/ leration	62	Reference value at acceleration	0 to 220%, 9999	0.1%	9999	178	
Automatic ad decele	63	Reference value at deceleration	0 to 220%, 9999	0.1%	9999	178	
Auton	64	Starting frequency for elevator mode	0 to 10Hz, 9999	0.01Hz	9999	162	
	65	Retry selection	0 to 5	1	0	268	
_	66	Stall prevention operation reduction starting frequency	0 to 400Hz	0.01Hz	60Hz	149	
	67	Number of retries at alarm occurrence	0 to 10, 101 to 110	1	0	268	
Retry	68	Retry waiting time	0 to 10s	0.1s	1s	268	
ά	69	Retry count display erase	0	1	0	268	
	70	Special regenerative brake duty	0 to 30%/0 to 10% *2	0.1%	0%	203	
_	71	Applied motor	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54	1	0	145, 184	
	72	PWM frequency selection	0 to 15/0 to 6, 25 *2	1	2	279	
	73	Analog input selection	0 to 7, 10 to 17	1	1	285	
	74	Input filter time constant	0 to 8	1	1	287	
	75	Reset selection/disconnected PU	0 to 3, 14 to 17, 100 to	1	14	300	
	76	detection/PU stop selection  Alarm code output selection	103, 114 to 117 0, 1, 2	1	0	270	
		·					
	77 78	Parameter write selection  Reverse rotation prevention selection	0, 1, 2	1	0	303 304	
		processor designation	. ,		-		

Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	<b>©</b> 79	Operation mode selection	0, 1, 2, 3, 4, 6, 7	1	0	306	
	80	Motor capacity	0.4 to 55kW, 9999/ 0 to 3600kW, 9999 *2	0.01/0.1kW *2	9999	145, 186	
	81	Number of motor poles	2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 9999	1	9999	145, 186	
	82	Motor excitation current	0 to 500A, 9999/ 0 to 3600A, 9999 *2	0.01/0.1A *2	9999	186	
	83	Motor rated voltage	0 to 1000V	0.1V	200/400V	186	
	84	Rated motor frequency	10 to 120Hz	0.01Hz	60Hz	186	
Ø	89	Speed control gain (magnetic flux vector)	0 to 200%	0.1%	9999	145	
nstant	90	Motor constant (R1)	0 to 50 $\Omega$ , 9999/ 0 to 400m $\Omega$ , 9999 *2	$0.001\Omega$ / $0.01$ m $\Omega$ *2	9999	186	
Motor constants	91	Motor constant (R2)	0 to 50Ω, 9999/ 0 to 400mΩ, 9999 *2	0.001Ω/ 0.01mΩ *2	9999	186	
Mo	92	Motor constant (L1)	0 to 50 $\Omega$ (0 to 1000mH), 9999/ 0 to 3600m $\Omega$ (0 to 400mH), 9999 *2	0.001Ω (0.1mH)/ 0.01mΩ(0.01mH) *2	9999	186	
	93	Motor constant (L2)	0 to 50 $\Omega$ (0 to 1000mH), 9999/ 0 to 3600m $\Omega$ (0 to 400mH), 9999 *2	0.001Ω (0.1mH)/ 0.01mΩ(0.01mH) *2	9999	186	
	94	Motor constant (X)	0 to $500\Omega$ (0 to $100\%$ ), $9999/$ 0 to $100\Omega$ (0 to $100\%$ ), $9999 \cdot_2$	0.01Ω (0.1%)/ 0.01Ω (0.01%) *2	9999	186	
	95	Online auto tuning selection	0 to 2	1	0	196	
	96	Auto tuning setting/status	0, 1, 101	1	0	186	
	100	V/F1(first frequency)	0 to 400Hz, 9999	0.01Hz	9999	164	
	101	V/F1(first frequency voltage)	0 to 1,000V	0.1V	0V	164	
V/F	102	V/F2(second frequency)	0 to 400Hz, 9999	0.01Hz	9999	164	
ints	103	V/F2(second frequency voltage)	0 to 1,000V	0.1V	0V	164	
Adjustable 5 points V/F	104	V/F3(third frequency)	0 to 400Hz, 9999	0.01Hz	9999	164	
ple (	105	V/F3(third frequency voltage)	0 to 1,000V	0.1V	0V	164	
usta	106	V/F4(fourth frequency)	0 to 400Hz, 9999	0.01Hz	9999	164	
Adjı	107	V/F4(fourth frequency voltage)	0 to 1,000V	0.1V	0V	164	
	108	V/F5(fifth frequency)	0 to 400Hz, 9999	0.01Hz	9999	164	
	109	V/F5(fifth frequency voltage)	0 to 1,000V	0.1V	0V	164	
	110	Third acceleration/deceleration time	0 to 3600/360s, 9999	0.1/0.01s	9999	172	
	111	Third deceleration time	0 to 3600/360s, 9999	0.1/0.01s	9999	172	
ions	112	Third torque boost	0 to 30%, 9999	0.1%	9999	143	
Third functions	113	Third V/F (base frequency)	0 to 400Hz, 9999	0.01Hz	9999	158	
ird f	114	Third stall prevention operation current	0 to 220%	0.1%	150%	149	
Th	115	Thrid stall prevention operation frequency	0 to 400Hz	0.01Hz	0	149	
	116	Third output frequency detection	0 to 400Hz	0.01Hz	60Hz	241	
	117	PU communication station number	0 to 31	1	0	325	
	118	PU communication speed	48, 96, 192, 384	1	192	325	
tor	119	PU communication stop bit length	0, 1, 10, 11	1	1	325	
nect iicat	120	PU communication parity check	0, 1, 2	1	2	325	
con	121	Number of PU communication retries	0 to10, 9999	1	1	325	
PU connector communication	122	PU communication check time interval	0, 0.1 to 999.8s, 9999	0.1s	9999	325	
J	123	PU communication waiting time setting	0 to 150ms, 9999	1	9999	325	
	124	PU communication CR/LF presence/ absence selection	0, 1, 2	1	1	325	
_	© 125	Terminal 2 frequency setting gain frequency	0 to 400Hz	0.01Hz	60Hz	288	
_	<b>©</b> 126	Terminal 4 frequency setting gain frequency	0 to 400Hz	0.01Hz	60Hz	288	



Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	127	PID control automatic switchover frequency	0 to 400Hz, 9999	0.01Hz	9999	354	
ion	128	PID action selection	10, 11, 20, 21, 50, 51, 60, 61	1	10	354	
tion	129	PID proportional band	0.1 to 1000%, 9999	0.1%	100%	354	
PID operation	130	PID integral time	0.1 to 3600s, 9999	0.1s	1s	354	
0	131	PID upper limit	0 to 100%, 9999	0.1%	9999	354	
₫	132	PID lower limit	0 to 100%, 9999	0.1%	9999	354	
	133	PID action set point	0 to 100%, 9999	0.01%	9999	354	
	134	PID differential time	0.01 to 10.00s, 9999	0.01s	9999	354	
pply-	135	Commercial power-supply switchover sequence output terminal selection	0, 1	1	0	362	
r su -ove	136	MC switchover interlock time	0 to 100s	0.1s	1s	362	
powe	137	Start waiting time	0 to 100s	0.1s	0.5s	362	
nmercial power sup inverter switch-over	138	Commercial power-supply operation switchover selection at an alarm	0, 1	1	0	362	
Commercial power supply- inverter switch-over	139	Automatic switchover frequency between inverter and commercial power-supply operation	0 to 60Hz, 9999	0.01Hz	9999	362	
- "	140	Backlash acceleration stopping frequency	0 to 400Hz	0.01Hz	1Hz	175	
lash	141	Backlash acceleration stopping time	0 to 360s	0.1s	0.5s	175	
Backlash measures	142	Backlash deceleration stopping frequency	0 to 400Hz	0.01Hz	1Hz	175	
	143	Backlash deceleration stopping time	0 to 360s	0.1s	0.5s	175	
	144	Speed setting switchover	0, 2, 4, 6, 8, 10, 102, 104, 106, 108, 110	1	4	246	
PU	145	PU display language selection	0 to 7	1	1	385	
	148	Stall prevention level at 0V input	0 to 220%	0.1%	150%	149	
ion	149	Stall prevention level at 10V input	0 to 220%	0.1%	200%	149	
eteci	150	Output current detection level	0 to 220%	0.1%	150%	243	
Current detection	151	Output current detection signal delay time	0 to 10s	0.1s	0s	243	
Curi	152	Zero current detection level	0 to 220%	0.1%	5%	243	
	153	Zero current detection time	0 to 1s	0.01s	0.5s	243	
_	154	Voltage reduction selection during stall prevention operation	0, 1	1	1	149	
_	155	RT signal function validity condition selection	0, 10	1	0	231	
_	156	Stall prevention operation selection	0 to 31, 100, 101	1	0	149	
_	157	OL signal output timer	0 to 25s, 9999	0.1s	0s	149	
_	158	AM terminal function selection	1 to 3, 5 to 14, 17, 18, 21, 24, 32 to 34, 50, 52, 53, 70	1	1	248	
	159	Automatic switchover ON range between commercial power-supply and inverter operation	0 to 10Hz, 9999	0.01Hz	9999	362	
_	<b>©</b> 160	User group read selection	0, 1, 9999	1	0	304	
	161	Frequency setting/key lock operation selection	0, 1, 10, 11	1	0	385	
start	162	Automatic restart after instantaneous power failure selection	0, 1, 2, 10, 11, 12	1	0	260	
c re	163	First cushion time for restart	0 to 20s	0.1s	0s	260	
mati	164	First cushion voltage for restart	0 to 100%	0.1%	0%	260	
Automatic restart functions	165	Stall prevention operation level for restart	0 to 220%	0.1%	150%	260	

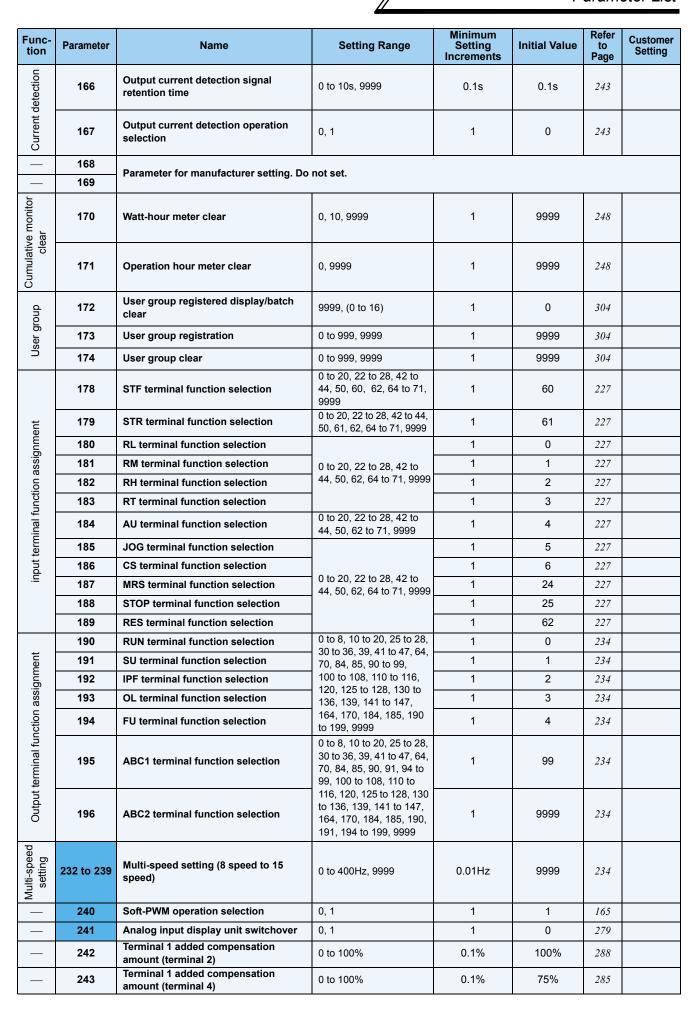



Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
_	244	Cooling fan operation selection	0, 1	1	1	285	
sation	245	Rated slip	0 to 50%, 9999	0.01%	9999	148	
Slip compensation	246	Slip compensation time constant	0.01 to 10s	0.01s	0.5s	148	
Slip	247	Constant-power region slip compensation selection	0, 9999	1	9999	148	
_	250	Stop selection	0 to 100s,1000 to 1100s 8888, 9999	0.1s	9999	209	
	251	Output phase failure protection selection	0, 1	1	1	271	
ompensation tion	252	Override bias	0 to 200%	0.1%	50%	285	
Frequency compensation function	253	Override gain	0 to 200%	0.1%	150%	285	
	255	Life alarm status display	(0 to 15)	1	0	379	
충	256	Inrush current limit circuit life display	(0 to 100%)	1%	100%	379	
Life check	257	Control circuit capacitor life display	(0 to 100%)	1%	100%	379	
Life	258	Main circuit capacitor life display	(0 to 100%)	1%	100%	379	
	259	Main circuit capacitor life measuring	0, 1	1	0	379	
_	260	PWM frequency automatic switchover	0.1	1	1	279	
	261	Power failure stop selection	0, 1, 2, 11, 12	1	0	265	
top	262	Subtracted frequency at deceleration start	0 to 20Hz	0.01Hz	3Hz	265	
re s	263	Subtraction starting frequency	0 to 120Hz, 9999	0.01Hz	60Hz	265	
fail	264	Power-failure deceleration time 1	0 to 3600/360s	0.1/0.01s	5s	265	
Power failure stop	265	Power-failure deceleration time 2	0 to 3600s/360s, 9999	0.1/0.01s	9999	265	
	266	Power failure deceleration time switchover frequency	0 to 400Hz	0.01Hz	60Hz	265	
_	267	Terminal 4 input selection	0, 1, 2	1	0	282	
	268	Monitor decimal digits selection	0,1, 9999	1	9999	248	
	269	Parameter for manufacturer setting. Do	not set.				
_	270	Stop-on contact/load torque high- speed frequency control selection	0, 1, 2, 3	1	0	210, 367	
control	271	High-speed setting maximum current	0 to 220%	0.1%	50%	367	
torque quency	272	Middle-speed setting minimum current	0 to 220%	0.1%	100%	367	
Load torque high speed frequency control	273	Current averaging range	0 to 400Hz, 9999	0.01Hz	9999	367	
	274	Current averaging filter time constant	1 to 4000	1	16	367	
contact	275	Stop-on contact excitation current low- speed multiplying factor	0 to 1000%, 9999	0.1%	9999	210	
Stop-on contact control	276	PWM carrier frequency at stop-on contact	0 to 9, 9999/ 0 to 4, 9999 *2	1	9999	210	

Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	278	Brake opening frequency	0 to 30Hz	0.01Hz	3Hz	213	
uc	279	Brake opening current	0 to 220%	0.1%	130%	213	
ıncti	280	Brake opening current detection time	0 to 2s	0.1s	0.3s	213	
ce fu	281	Brake operation time at start	0 to 5s	0.1s	0.3s	213	
neuc	282	Brake operation frequency	0 to 30Hz	0.01Hz	6Hz	213	
sed	283	Brake operation time at stop	0 to 5s	0.1s	0.3s	213	
Brake sequence function	284	Deceleration detection function selection	0, 1	1	0	213	
	285	Overspeed detection frequency (Speed deviation excess detection frequency)	0 to 30Hz, 9999	0.01Hz	9999	116, 213	
ntrol	286	Droop gain	0 to 100%	0.1%	0%	369	
cor	287	Droop filter time constant	0 to 1s	0.01s	0.3s	369	
Droop control	288	Droop function activation selection	0, 1, 2, 10, 11	1	0	369	
_	291	Pulse train I/O selection	0, 1, 10, 11, 20, 21, 100	1	0	254, 371	
_	292	Automatic acceleration/deceleration	0, 1, 3, 5 to 8, 11	1	0	162, 178, 213	
	293	Acceleration/deceleration separate selection	0 to 2	1	0	178	
	294	UV avoidance voltage gain	0 to 200%	0.1%	100%	265	
	299	Rotation direction detection selection at restarting	0, 1, 9999	1	0	260	
	331	RS-485 communication station number	0 to 31(0 to 247)	1	0	325	
	332	RS-485 communication speed	3, 6, 12, 24, 48, 96, 192, 384	1	96	325	
	333	RS-485 communication stop bit length	0, 1, 10, 11	1	1	325	
	334	RS-485 communication parity check selection	0, 1, 2	1	2	325	
on	335	RS-485 communication retry count	0 to 10, 9999	1	1	325	
nicati	336	RS-485 communication check time interval	0 to 999.8s, 9999	0.1s	0s	325	
mmu	337	RS-485 communication waiting time setting	0 to 150ms, 9999	1	9999	325	
RS-485 communication	338	Communication operation command source	0, 1	1	0	315	
RS-4	339	Communication speed command source	0, 1, 2	1	0	315	
	340	Communication startup mode selection	0, 1, 2, 10, 12	1	0	314	
	341	RS-485 communication CR/LF selection	0, 1, 2	1	1	325	
	342	Communication EEPROM write selection	0, 1	1	0	326	
	343	Communication error count	_	1	0	338	



Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	350 *6	Stop position command selection	0, 1, 9999	1	9999	216	
	351 ∗6	Orientation speed	0 to 30Hz	0.01Hz	2Hz	216	
	352 *6	Creep speed	0 to 10Hz	0.01Hz	0.5Hz	216	
	353 *6	Creep switchover position	0 to 16383	1	511	216	
	354 *6	Position loop switchover position	0 to 8191	1	96	216	
	355 *6	DC injection brake start position	0 to 255	1	5	216	
	356 *6	Internal stop position command	0 to 16383	1	0	216	
	357 *6	In-position zone	0 to 255	1	5	216	
<u></u>	358 *6	Servo torque selection	0 to 13	1	1	216	
ntr	359 *6	Encoder rotation direction	0, 1	1	1	216	
8	360 *6	16 bit data selection	0 to 127	1	0	216	
ţion	361 *6	Position shift	0 to 16383	1	0	216	
ntai	362 *6	Orientation position loop gain	0.1 to 100	0.1	1	216	
Orientation control	363 *6 364 *6	Completion signal output delay time Encoder stop check time	0 to 5s	0.1s	0.5s	216 216	
0	364 *6 365 *6	Orientation limit	0 to 5s 0 to 60s, 9999	0.1s 1s	0.5s 9999	216	
	365 *6 366 *6	Recheck time	0 to 60s, 9999 0 to 5s, 9999	0.1s	9999	216	
	367 *6	Speed feedback range	0 to 400Hz, 9999	0.1s 0.01Hz	9999	374	
	368 *6	Feedback gain	0 to 100	0.01112	1	374	
	369 *6	Number of encoder pulses	0 to 4096	1	1024	216, 374	
	374	Overspeed detection level	0 to 400Hz	0.01Hz	140Hz	271	
	376 *6	Encoder signal loss detection enable/ disable selection	0, 1	1	0	271	
tion/	380	Acceleration S-pattern 1	0 to 50%	1%	0	175	
celerat ition C	381	Deceleration S-pattern 1	0 to 50%	1%	0	175	
S-pattern acceleration/ deceleration C	382	Acceleration S-pattern 2	0 to 50%	1%	0	175	
S-patt	383	Deceleration S-pattern 2	0 to 50%	1%	0	175	
input	384	Input pulse division scaling factor	0 to 250	1	0	371	
Pulse train input	385	Frequency for zero input pulse	0 to 400Hz	0.01Hz	0	371	
Pulse	386	Frequency for maximum input pulse	0 to 400Hz	0.01Hz	60Hz	371	
rol	393 ∗6	Orientation selection	0, 1, 2	1	0	216	
cont	396 ∗6	Orientation speed gain (P term)	0 to 1000	1	60	216	
ion c	397 *6	Orientation speed integral time	0 to 20s	0.001s	0.333s	216	
Orientation control	398 *6	Orientation speed gain (D term)	0 to 100	0.1	1	216	
Orie	399 *6	Orientation deceleration ratio	0 to 1000	1	20	216	
Ę	414	PLC function operation selection	0, 1	1	0	352	
nctic	415	Inverter operation lock mode setting	0, 1	1	0	352	
PLC function	416	Pre-scale function selection	0 to 5	1	0	352	
Ъ	417	Pre-scale setting value	0 to 32767	1	1	352	

Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	419 *6	Position command source selection	0, 2	1	0	131, 134	
	420 *6	Command pulse scaling factor numerator	0 to 32767	1	1	136	
	421 *6	Command pulse scaling factor denominator	0 to 32767	1	1	136	
_	422 *6	Position loop gain	0 to 150sec <sup>-1</sup>	1sec <sup>-1</sup>	25sec <sup>-1</sup>	138	
ontro	423 *6	Position feed forward gain	0 to 100%	1%	0	138	
Position control	424 *6	Position command acceleration/ deceleration time constant	0 to 50s	0.001s	0s	136	
osi	425 *6	Position feed forward command filter	0 to 5s	0.001s	0s	138	
	426 *6	In-position width	0 to 32767pulse	1	100	137	
	427 *6	Excessive level error	0 to 400, 9999	1	40	137	
	428 *6	Command pulse selection	0 to 5	1	0	134	
	429 *6	Clear signal selection	0, 1	1	1	134	
	430 *6	Pulse monitor selection	0 to 5, 9999	1	9999	134	
	450	Second applied motor	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54, 9999	1	9999	184	
	451	Second motor control method selection	10, 11, 12, 20, 9999	1	9999	145	
	453	Second motor capacity	0.4 to 55kW, 9999/ 0 to 3600kW, 9999 *2	0.01kW/0.1kW *2	9999	145	
	454	Number of second motor poles	2, 4, 6, 8, 10, 9999	1	9999	145	
ıts	455	Second motor excitation current	0 to 500A,9999/ 0 to 3600A, 9999 *2	0.01/0.1A *2	9999	186	
star	456	Rated second motor voltage	0 to 1000V	0.1V	200/400V	186	
con	457	Rated second motor frequency	10 to 120Hz	0.01Hz	60Hz	186	
Second motor constants	458	Second motor constant (R1)	0 to 50Ω, 9999/ 0 to 400mΩ, 9999 *2	0.001Ω/ 0.01mΩ *2	9999	186	
cond	459	Second motor constant (R2)	0 to 50Ω, 9999/ 0 to 400mΩ, 9999 *2	0.001Ω/ 0.01mΩ *2	9999	186	
Se	460	Second motor constant (L1)	0 to 50Ω (0 to 1000mH), 9999/ 0 to 3600mΩ (0 to 400mH), 9999 *2	0.001Ω (0.1mH)/ 0.01mΩ(0.01mH) *2	9999	186	
	461	Second motor constant (L2)	0 to 50Ω (0 to 1000mH), 9999/ 0 to 3600mΩ (0 to 400mH), 9999 *2	0.001Ω (0.1mH)/ 0.01mΩ(0.01mH) *2	9999	186	
	462	Second motor constant (X)	0 to 500Ω (0 to 100%), 9999/ 0 to 100Ω (0 to 100%), 9999 *2	0.01Ω (0.1%)/ 0.01Ω (0.01%) *2	9999	186	
	463	Second motor auto tuning setting/ status	0, 1, 101	1	0	186	



Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	464 *6	Digital position control sudden stop deceleration time	0 to 360.0s	0.1s	0	131	
	465 *6	First position feed amount lower 4 digits	0 to 9999	1	0	131	
	466 *6	First position feed amount upper 4 digits	0 to 9999	1	0	131	
	467 *6	Second position feed amount lower 4 digits	0 to 9999	1	0	131	
	468 *6	Second position feed amount upper 4 digits	0 to 9999	1	0	131	
	469 *6	Third position feed amount lower 4 digits	0 to 9999	1	0	131	
	470 *6	Third position feed amount upper 4 digits	0 to 9999	1	0	131	
	471 *6	Fourth position feed amount lower 4 digits	0 to 9999	1	0	131	
	472 *6	Fourth position feed amount upper 4 digits	0 to 9999	1	0	131	
_	473 *6	Fifth position feed amount lower 4 digits	0 to 9999	1	0	131	
Ęį	474 *6	Fifth position feed amount upper 4 digits	0 to 9999	1	0	131	
ı,	475 *6	Sixth position feed amount lower 4 digits	0 to 9999	1	0	131	
) d t	476 *6	Sixth position feed amount upper 4 digits	0 to 9999	1	0	131	
ĘĘ.	477 *6	Seventh position feed amount lower 4 digits	0 to 9999	1	0	131	
ijon	478 *6	Seventh position feed amount upper 4 digits	0 to 9999	1	0	131	
osii	479 *6	Eighth position feed amount lower 4 digits	0 to 9999	1	0	131	
Conditional position feed function	480 *6	Eighth position feed amount upper 4 digits	0 to 9999	1	0	131	
ons	481 *6	Ninth position feed amount lower 4 digits	0 to 9999	1	0	131	
diti	482 *6	Ninth position feed amount upper 4 digits	0 to 9999	1	0	131	
l o	483 *6	Tenth position feed amount lower 4 digits	0 to 9999	1	0	131	
	484 *6	Tenth position feed amount upper 4 digits	0 to 9999	1	0	131	
	485 *6	Eleventh position feed amount lower 4 digits	0 to 9999	1	0	131	
	486 *6	Eleventh position feed amount upper 4 digits	0 to 9999	1	0	131	
	487 *6	Twelfth position feed amount lower 4 digits	0 to 9999	1	0	131	
	488 *6	Twelfth position feed amount upper 4 digits	0 to 9999	1	0	131	
	489 *6	Thirteenth position feed amount lower 4 digits	0 to 9999	1	0	131	
	490 *6 491 *6	Thirteenth position feed amount upper 4 digits	0 to 9999	1	0	131	
	491 *6 492 *6	Fourteenth position feed amount lower 4 digits	0 to 9999 0 to 9999	1	0	131 131	
	492 *6	Fourteenth position feed amount upper 4 digits Fifteenth position feed amount lower 4 digits	0 to 9999	1	0	131	
	493 *6	Fifteenth position feed amount lower 4 digits	0 to 9999	1	0	131	
put	495	Remote output selection	0, 1, 10, 11	1	0	245	
Remote output	496	Remote output data 1	0 to 4095	1	0	245	
Remo	497	Remote output data 2	0 to 4095	1	0	245	
nance	503	Maintenance timer	0 (1 to 9998)	1	0	381	
Maintenanc	504	Maintenance timer alarm output set time	0 to 9998, 9999	1	9999	381	
_	505	Speed setting reference	1 to 120Hz	0.01Hz	60Hz	246	
	506	Parameter 1 for user	0 to 65535	1	0	352	
	507	Parameter 2 for user	0 to 65535	1	0	352	
	508	Parameter 3 for user	0 to 65535	1	0	352	
no	509	Parameter 4 for user	0 to 65535	1	0	352	
PLC function	510	Parameter 5 for user	0 to 65535	1	0	352	
.C. fc	511	Parameter 6 for user	0 to 65535	1	0	352	
집	512	Parameter 7 for user	0 to 65535	1	0	352	
	513	Parameter 8 for user	0 to 65535	1	0	352	
	514	Parameter 9 for user	0 to 65535	1	0	352	
	515	Parameter 10 for user	0 to 65535	1	0	352	_

Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
tion/	516	S-pattern time at a start of acceleration	0.1 to 2.5s	0.1s	0.1s	175	
celerat ation D	517	S-pattern time at a completion of acceleration	0.1 to 2.5s	0.1s	0.1s	175	
S-pattern acceleration/ deceleration D	518	S-pattern time at a start of deceleraiton	0.1 to 2.5s	0.1s	0.1s	175	
S-pat d	519	S-pattern time at a completion of deceleraiton	0.1 to 2.5s	0.1s	0.1s	175	
_	539	Modbus-RTU communication check time interval	0 to 999.8s, 9999	0.1s	9999	338	
USB	547	USB communication station number	0 to 31	1	0	353	
	548	USB communication check time interval	0 to 999.8s, 9999	0.1s	9999	353	
lion	549	Protocol selection	0, 1	1	1	338	
Communication	550	NET mode operation command source selection	0, 1, 9999	1	9999	315	
Сотп	551	PU mode operation command source selection	1, 2, 3	1	2	315	
age or	555	Current average time	0.1 to 1.0s	0.1s	1s	382	
it avera monit	556	Data output mask time	0.0 to 20.0s	0.1s	0s	382	
Current average value monitor	557	Current average value monitor signal output reference current	0 to 500/0 to 3600A *2	0.01/0.1A *2	Rated inverter current	382	
_	563	Energization time carrying-over times	(0 to 65535)	1	0	382	
_	564	Operating time carrying-over times	(0 to 65535)	1	0	382	
Second motor constants	569	Second motor speed control gain	0 to 200%	0.1%	100%	145	
Multiple rating	570	Multiple rating setting	0 to 3	1	2	154	
_	571	Holding time at a start	0.0 to 10.0s, 9999	0.1s	9999	174	
_	573	4mA input check selection	1, 9999	1	9999	298	
_	574	Second motor online auto tuning	0, 1	1	0	196	
trol	575	Output interruption detection time	0 to 3600s, 9999	0.1s	1s	354	
PID control	576	Output interruption detection level	0 to 400Hz	0.01Hz	0Hz	354	
PIC	577	Output interruption cancel level	900 to 1100%	0.1%	1000%	354	
	611	Acceleration time at a restart	0 to 3600s,9999	0.1s	5/15s *2	260	
_	665	Regeneration avoidance frequency gain	0 to 200%	0.1%	100	376	
_	684	Tuning data unit switchover	0, 1	1	0	186	
—	800	Control method selection	0 to 5, 9 to 12, 20	1	20	92, 145	
_	802 *6	Pre-excitation selection	0, 1	1	0	199	
and	803	Constant power range torque characteristic selection	0, 1	1	0	99, 122	
Torque command	804	Torque command source selection	0, 1, 3 to 6	1	0	122	
ue c	805	Torque command value (RAM)	600 to 1400%	1%	1000%	122	
Torq	806	Torque command value (RAM,EEPROM)	600 to 1400%	1%	1000%	122	
nit	807	Speed limit selection	0, 1, 2	1	0	124	
Speed limit	808	Forward rotation speed limit	0 to 120Hz	0.01Hz	60Hz	124	
Spe	809	Reverse rotation speed limit	0 to 120Hz, 9999	0.01Hz	9999	124	



Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	810	Torque limit input method selection	0, 1	1	0	99	
	811	Set resolution switchover	0, 1, 10, 11	1	0	99, 246	
Torque limit	812	Torque limit level (regeneration)	0 to 400%, 9999	0.1%	9999	99	
<u>II</u>	813	Torque limit level (3rd quadrant)	0 to 400%, 9999	0.1%	9999	99	
dne	814	Torque limit level (4th quadrant)	0 to 400%, 9999	0.1%	9999	99	
Tor	815	Torque limit level 2	0 to 400%, 9999	0.1%	9999	99	
	816	Torque limit level during acceleration	0 to 400%, 9999	0.1%	9999	99	
	817	Torque limit level during deceleration	0 to 400%, 9999	0.1%	9999	99	
_		Easy gain tuning response level	0 10 400 %, 9999				
Easy gain tuning	818	setting	1 to 15	1	2	104	
Eas tu	819	Easy gain tuning selection	0 to 2	1	0	104	
	820	Speed control P gain 1	0 to 1000%	1%	60%	104	
	821	Speed control integral time 1	0 to 20s	0.001s	0.333s	104	
	822	Speed setting filter 1	0 to 5s, 9999	0.001s	9999	287	
	823 *6	Speed detection filter 1	0 to 0.1s	0.001s	0.001s	141	
Adjustment function	824	Torque control P gain 1	0 to 200%	1%	100%	127	
_	825	Torque control integral time 1	0 to 500ms	0.1ms	5ms	127	
ction	826	Torque setting filter 1	0 to 5s, 9999	0.001s	9999	287	
func	827	Torque detection filter 1	0 to 0.1s	0.001s	0s	141	
ent	828	Model speed control gain	0 to 1000%	1%	60%	111	
stm	830	Speed control P gain 2	0 to 1000%, 9999	1%	9999	104	
djus	831	Speed control integral time 2	0 to 20s, 9999	0.001s	9999	104	
⋖	832	Speed setting filter 2	0 to 5s, 9999	0.001s	9999	287	
	833 *6	Speed detection filter 2	0 to 0.1s	0.001s	0.001s	141	
	834	Torque control P gain 2	0 to 200%, 9999	1%	9999	127	
	835	Torque control integral time 2	0 to 500ms, 9999	0.1ms	9999	127	
	836	Torque setting filter 2	0 to 5s, 9999	0.001s	9999	287	
	837	Torque detection filter 2	0 to 0.1s, 9999	0.001s	9999	141	
	840 *6	Torque bias selection	0 to 3, 9999	1	9999	113	
	841 *6	Torque bias 1	600 to 1400%, 9999	1%	9999	113	
<b>60</b>	842 *6	Torque bias 2	600 to 1400%, 9999	1%	9999	113	
bias	843 *6	Torque bias 3	600 to 1400%, 9999	1%	9999	113	
Torque	844 *6	Torque bias filter	0 to 5s, 9999	0.001s	9999	113	
Torc	845 *6	Torque bias operation time	0 to 5s, 9999	0.01s	9999	113	
	846 *6	Torque bias balance compensation	0 to 10V, 9999	0.1V	9999	113	
	847 *6	Fall-time torque bias terminal 1 bias	0 to 400%, 9999	1%	9999	113	
	848 *6	Fall-time torque bias terminal 1 gain	0 to 400%, 9999	1%	9999	113	
	849	Analog input offset adjustment	0 to 200%	0.1%	100%	287	
	850	Brake operation selection	0, 1	1	0	199	
	853	Speed deviation time	0 to 100s	0.1s	1s	116	
uo	854	Excitation ratio	0 to 100%	1%	100%	199	
ıncti	858	Terminal 4 function assignment	0, 1, 4, 9999	1	0	281	
Additional function	859	Torque current	0 to 500A, 9999/ 0 to 3600A, 9999 *2	0.01A/0.1A *2	9999	186	
dditic	860	Second motor torque current	0 to 500A, 9999/ 0 to 3600A, 9999 *2	0.01A/0.1A *2	9999	186	
ط	862	Notch filter time constant	0 to 60	1	0	117	
	863	Notch filter depth	0, 1, 2, 3	1	0	117	
	864	Torque detection	0 to 400%	0.1%	150%	244	
	865	Low speed detection	0 to 400Hz	0.01Hz	1.5Hz	241	
Indication function	866	Torque monitoring reference	0 to 400%	0.1%	150%	254	
	867	AM output filter	0 to 5s	0.01s	0.01s	254	

Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
_	868	Terminal 1 function assignment	0 to 6, 9999	1	0	281	
a) w	872	Input phase failure protection selection	0, 1	1	0	271	
Protective Functions	873	Speed limit	0 to 120Hz	0.01Hz	20Hz	116	
rote	874	OLT level setting	0 to 200%	0.1%	150%	99	
дш	875	Fault definition	0, 1	1	0	272	
ons	877	Speed feed forward control/model adaptive speed control selection	0, 1, 2	1	0	111	
Control system functions	878	Speed feed forward filter	0 to 1s	0.01s	0s	111	
ystem	879	Speed feed forward torque limit	0 to 400%	0.1%	150%	111	
ntrol s	880	Load inertia ratio	0 to 200 times	0.1	7	104, 111	
Co	881	Speed feed forward gain	0 to 1000%	1%	0%	111	
unction	882	Regeneration avoidance operation selection	0, 1, 2	1	0	376	
idance f	883	Regeneration avoidance operation level	300 to 800V	0.1V	380/760VDC *5	376	
tion avo	884	Regeneration avoidance at deceleration detection sensitivity	0 to 5	1	0	376	
Regeneration avoidance function	886	Regeneration avoidance voltage gain	0 to 200%	0.1%	100%	376	
Free parameters	888	Free parameter 1	0 to 9999	1	9999	384	
Fr	889	Free parameter 2	0 to 9999	1	9999	384	
	891	Cumulative power monitor digit shifted times	0 to 4, 9999	1	9999	274	
	892	Load factor	30 to 150%	0.1%	100%	274	
onitor	893	Energy saving monitor reference (motor capacity)	0.1 to 55/0 to 3600kW *2	0.01/ 0.1kW *2	Inverter rated capacity	274	
Energy saving monitor	894	Control selection during commercial power-supply operation	0, 1, 2, 3	1	0	274	
	895	Power saving rate reference value	0, 1, 9999	1	9999	274	
nergy	896	Power unit cost	0 to 500, 9999	0.01	9999	274	
Ш	897	Power saving monitor average time	0,1 to 1000h, 9999	1	9999	274	
	898	Power saving cumulative monitor clear	0, 1, 10, 9999	1	9999	274	
	899	Operation time rate (estimated value)	0 to 100%, 9999	0.1%	9999	274	



Func- tion	Parameter	Name	Setting Range	Minimum Setting Increments	Initial Value	Refer to Page	Customer Setting
	C0 (900)	FM terminal calibration	_	_	_	257	
	C1 (901)	AM terminal calibration	_	_	_	257	
	C2 (902)	Terminal 2 frequency setting bias frequency	0 to 400Hz	0.01Hz	0Hz	288	
neters	C3 (902)	Terminal 2 frequency setting bias	0 to 300%	0.1%	0%	288	
paran	125 (903)	Terminal 2 frequency setting gain frequency	0 to 400Hz	0.01Hz	60Hz	288	
ation	C4 (903)	Terminal 2 frequency setting gain	0 to 300%	0.1%	100%	288	
Calibration parameters	C5 (904)	Terminal 4 frequency setting bias frequency	0 to 400Hz	0.01Hz	0Hz	288	
	C6 (904)	Terminal 4 frequency setting bias	0 to 300%	0.1%	20%	288	
	126 (905)	Terminal 4 frequency setting gain frequency	0 to 400Hz	0.01Hz	60Hz	288	
	C7 (905)	Terminal 4 frequency setting gain	0 to 300%	0.1%	100%	288	
	C12 (917)	Terminal 1 bias frequency (speed)	0 to 400Hz	0.01Hz	0Hz	288	
	C13 (917)	Terminal 1 bias (speed)	0 to 300%	0.1%	0%	288	
	C14 (918)	Terminal 1 gain frequency (speed)	0 to 400Hz	0.01Hz	60Hz	288	
(A)	C15 (918)	Terminal 1 gain (speed)	0 to 300%	0.1%	100%	288	
Calibration parameters	C16 (919)	Terminal 1 bias command (torque/ magnetic flux)	0 to 400%	0.1%	0%	293	
parar	C17 (919)	Terminal 1 bias (torque/magnetic flux)	0 to 300%	0.1%	0%	293	
ation	C18 (920)	Terminal 1 gain command (torque/ magnetic flux)	0 to 400%	0.1%	100%	293	
Salibra	C19 (920)	Terminal 1 gain (torque/magnetic flux)	0 to 300%	0.1%	100%	293	
	C38 (932)	Terminal 4 bias command (torque/ magnetic flux)	0 to 400%	0.1%	0%	293	
	C39 (932)	Terminal 4 bias (torque/magnetic flux)	0 to 300%	0.1%	20%	293	
	C40 (933)	Terminal 4 gain command (torque/ magnetic flux)	0 to 400%	0.1%	100%	293	
	C41 (933)	Terminal 4 gain (torque/magnetic flux)	0 to 300%	0.1%	100%	293	
	989	Parameter copy alarm release	10/100	1	10/100 *2	390	
)	990	PU buzzer control	0, 1	1	1	387	
PU	991	PU contrast adjustment	0 to 63	1	58	387	
2	Pr. CL	Parameter clear	0, 1	1	0	388	
Clear parameters	ALLC	All parameter clear	0, 1	1	0	389	
Cle	Er.CL	Alarm history clear	0, 1	1	0	393	
par	PCPY	Parameter copy	0, 1, 2, 3	1	0	390	

PCPY Parameter copy 0, 1, 2, 3 1 0 390

Differ according to capacities.
6%: FR-A720-00030, 00050 (FR-A740-00015, 00025)
4%: FR-A720-00080 to 00175 (FR-A740-00040 to 00090)
3%: FR-A720-00240, 00330(FR-A740-00120, 00170)
2%: FR-A720-00240 to 02150(FR-A740-00230 to 01100)
1%: FR-A720-02880(FR-A740-01440) or more
Differ according to capacities. (FR-A720-02150(FR-A740-01100) or less/FR-A720-02880(FR-A740-01440) or more)
Differ according to capacities. (FR-A720-00330(FR-A740-00170) or less/FR-A720-00460(FR-A740-00230) or more)
Differ according to capacities. (FR-A720-00330(FR-A740-00170) or less/FR-A720-00460 to 02150(FR-A740-00230) to 01100)/FR-A720-02880(FR-A740-01440) or more)
Differ according to capacities. (FR-A720-00330(FR-A740-00170) or less/FR-A720-00460 to 02150(FR-A740-00230) to 01100)/FR-A720-02880(FR-A740-01440) or more)
Differs according to the voltage class. (200V class/400V class)
Setting can be made only when the FR-A7AP is mounted.

4.3	Control mode	88
4.3.1 4.3.2	What is vector control?	
4.4	Speed control by real sensorless vector control, vector control	96
4.4.1	Setting procedure of real sensorless vector control (speed control)	
4.4.2 4.4.3	Setting procedure of vector control (speed control)	98
7.7.0	(Pr. 22, Pr. 803, Pr. 810 to Pr. 817, Pr. 858, Pr. 868, Pr. 874)	99
4.4.4	To perform high accuracy/fast response operation (gain adjustment of real sensorless vector control and vector control) (Pr. 818 to Pr. 821, Pr. 830,	
	Pr. 831, Pr. 880)	104
4.4.5	Speed feed forward control, model adaptive speed control (Pr. 828, Pr. 877 to Pr. 881)	
4.4.6 4.4.7	Torque biases (Pr. 840 to Pr. 848)Prevent the motor from overrunning (Pr. 285, Pr. 853, Pr. 873)	113
4.4.7	Notch filter (Pr. 862, Pr. 863)	
4.5	Torque control by real sensorless vector control	118
4.5.1	Torque control	118
4.5.2	Setting procedure of real sensorless vector control (torque control)	
4.5.3	Setting procedure of vector control (torque control)	
4.5.4	Torque command (Pr. 803 to Pr. 806)	
4.5.5 4.5.6	Speed limit (Pr. 807 to Pr. 809)	
4.6	Position control by vector control	129
1	Position control	
4.6.1 4.6.2	Conditional position feed function by contact input (Pr. 419, Pr. 464 to Pr. 494)	
4.6.3	Position control (Pr. 419, Pr. 428 to Pr. 430) by inverter pulse train input	
4.6.4	Setting range of the electronic gear (Pr. 420, Pr. 421, Pr. 424)	
4.6.5	Setting of positioning adjustment parameter (Pr. 426, Pr. 427)	
4.6.6	Gain adjustment of position control (Pr. 422, Pr. 423, Pr. 425)	
4.6.7	Trouble shooting for when position control is not exercised normally	140
4.7	Adjustment of real sensorless vector control, vector control	141
4.7.1 4.7.2	Speed detection filter and torque detection filter (Pr. 823, Pr. 827, Pr. 833, Pr. 837)  Excitation ratio (Pr. 854)	
4.8	Adjust the output torque of the motor (current)	143
4.8.1	Manual torque boost (Pr. 0, Pr. 46, Pr. 112)	
4.8.2	Advanced magnetic flux vector control (Pr. 71, Pr. 80, Pr. 81, Pr. 89, Pr. 450,	
400	Pr. 451, Pr. 453, Pr. 454, Pr. 569, Pr. 800)	
4.8.3 4.8.4	Slip compensation (Pr. 245 to Pr. 247)	148
7.0.7	Pr. 148, Pr. 149, Pr. 154, Pr. 156, Pr. 157, Pr. 858, Pr. 868)	149
4.8.5	Multiple rating (Pr.570)	
4.9	Limit the output frequency	156
4.9.1	Maximum/minimum frequency (Pr. 1, Pr. 2, Pr. 18)	156
4.9.2	Avoid mechanical resonance points (Frequency jump) (Pr. 31 to Pr. 36)	
4.10	Set V/F pattern	158
4.10.1		
4.10.2 4.10.3	,	
4.10.4		
4.11	Frequency setting by external terminals	165
4.11.1		
4.11.2	2 Jog operation (Pr. 15, Pr. 16)	167
4.11.3	1 1 ,	
4.11.4		169
4.12	Setting of acceleration/deceleration time and	4=0
	acceleration/deceleration pattern	172

4.12.1 Setting of the acceleration and deceleration time (Pr. 7, Pr. 8, Pr. 20, Pr. 21,

	Pr. 44, Pr. 45, Pr. 110, Pr. 111)	
4.12.2	Starting frequency and start-time hold function (Pr. 13, Pr. 571)	174
4.12.3	Acceleration/deceleration pattern (Pr. 29, Pr. 140 to Pr. 143, Pr. 380 to Pr. 383, Pr. 516 to Pr. 519)	175
4.12.4	Shortest acceleration/deceleration and optimum acceleration/deceleration	175
	(automatic acceleration/deceleration) (Pr. 61 to Pr. 63, Pr. 292, Pr. 293)	178
4.13	Selection and protection of a motor	181
	·	
4.13.1	Motor protection from overheat (Electronic thermal relay function) (Pr. 9, Pr. 51)	
4.13.2 4.13.3	Applied motor (Pr. 71, Pr. 450)	184
4.13.3	Pr. 453 to Pr. 463, Pr. 684, Pr. 859, Pr. 860)	186
4.13.4	Online auto tuning (Pr. 95, Pr. 574)	
4.14	Motor brake and stop opersation	199
4.14.1		
4.14.1	DC injection brake and zero speed control, servo lock (LX signal, X13 signal, Pr. 10 to Pr. 12, Pr. 802, Pr. 850)	199
4.14.2	Selection of regenerative brake and DC current feeding (Pr. 30, Pr. 70)	203
4.14.3	Stop selection (Pr. 250)	209
4.14.4	Stop-on contact control function (Pr. 6, Pr. 48, Pr. 270, Pr. 275, Pr. 276)	
4.14.5	Brake sequence function (Pr. 278 to Pr. 285, Pr. 292)	
4.14.6	Orientation control (Pr.350 to Pr.366, Pr.369, Pr.393, Pr.396 to Pr.399)	
4.15	Function assignment of external terminal and control	227
4.15.1	Input terminal function selection (Pr. 178 to Pr. 189)	227
4.15.2	Inverter output shutoff signal (MRS signal, Pr. 17)	230
4.15.3	Condition selection of function validity by the second function selection signal (RT) and	
4.45.4	third function selection signal (X9) (RT signal, X9 signal, Pr. 155)	
4.15.4 4.15.5	Start signal selection (terminal STF, STR, STOP, Pr. 250)  Output terminal function selection (Pr. 190 to Pr. 196)	
4.15.5	Detection of output frequency (SU, FU, FU2, FU3, FB, FB2, FB3, LS signal,	234
1.10.0	Pr. 41 to Pr. 43, Pr. 50, Pr. 116, Pr. 865)	241
4.15.7	Output current detection function	
	(Y12 signal, Y13 signal, Pr. 150 to Pr. 153, Pr. 166, Pr. 167)	
4.15.8	Detection of output torque (TU signal, Pr. 864)	
4.15.9	Remote output function (REM signal, Pr. 495 to Pr. 497)	
4.16	Monitor display and monitor output signal	246
4.16.1	Speed display and speed setting (Pr. 37, Pr. 144, Pr. 505, Pr. 811)	246
4.16.2	DU/PU, FM, AM terminal monitor display selection (Pr. 52, Pr. 54, Pr. 158, Pr. 170,	0.40
4.16.3	Pr. 171, Pr. 268, Pr. 563, Pr. 564, Pr. 891)	248
4.10.3	(Pr. 55, Pr. 56, Pr. 866, Pr. 867)	254
4.16.4	Terminal FM, AM calibration (Calibration parameter C0 (Pr. 900), C1 (Pr. 901),	201
	C8 (Pr. 930) to C11 (Pr. 931))	257
4.17	Operation selection at power failure and instantaneous power failure	260
4.17.1	Automatic restart after instantaneous power failure/flying start	
	(Pr. 57, Pr. 58, Pr. 162 to Pr. 165, Pr. 299, Pr. 611)	260
4.17.2	Power failure-time deceleration-to-stop function (Pr. 261 to Pr. 266, Pr. 294 )	265
4.18	Operation setting at alarm occurrence	268
4.18.1	Retry function (Pr. 65, Pr. 67 to Pr. 69)	268
4.18.2	Alarm code output selection (Pr. 76)	
4.18.3	Input/output phase failure protection selection (Pr. 251, Pr. 872)	
4.18.4	Overspeed detection (Pr. 374)	
4.18.5	Encoder signal loss detection (Pr. 376)	
4.18.6	Fault definition (Pr. 875)	
4.19	Energy saving operation and energy saving monitor	273
4.19.1	Energy saving control (Pr. 60)	
4.19.2	Energy saving monitor (Pr. 891 to Pr. 899)	
4.20	Motor noise, noise reduction	279
4.20.1	PWM carrier frequency and Soft-PWM control (Pr. 72, Pr. 240, Pr. 260)	279
4.21	Frequency/torque setting by analog input (terminal 1, 2, 4)	281

	Function assignment of analog input terminal (Pr. 858, Pr. 868)	
4.21.2	Analog input selection (Pr. 73, Pr. 267)	
4.21.3	Analog input compensation (Pr. 73, Pr. 242, Pr. 243, Pr. 252, Pr. 253)	285
4.21.4	Response level of analog input and noise elimination	
4 04 5	(Pr. 74, Pr. 822, Pr. 826, Pr. 832, Pr. 836, Pr. 849)	287
4.21.5	Bias and gain of frequency setting voltage (current)	200
4.21.6	(Pr. 125, Pr. 126, Pr. 241, C2(Pr. 902) to C7(Pr. 905), C12(Pr. 917) to C15(Pr. 918))	200
4.21.0	(Pr. 241, C16(Pr. 919) to C19(Pr. 920), C38 (Pr. 932) to C41 (Pr. 933))	203
4.21.7	4mA input check of current input (Pr. 573)	298
4.22	Misoperation prevention and parameter setting restriction	300
4.22.1	Reset selection/disconnected PU detection/PU stop selection (Pr. 75)	300
4.22.2	Parameter write diable selection (Pr. 77)	
4.22.3	Reverse rotation prevention selection (Pr. 78)	
4.22.4	Display of applied parameters and user group function (Pr. 160, Pr. 172 to Pr. 174)	304
4.23	Selection of operation mode and operation location	306
4.23.1	Operation mode selection (Pr. 79)	306
4.23.1	Operation mode at power on (Pr. 79, Pr. 340)	
4.23.3	Operation command source and speed command source during	017
0.0	communication operation (Pr. 338, Pr. 339, Pr. 550, Pr. 551)	315
424 (	•	
4.24	Communication operation and setting	320
4.24.1	Wiring and configuration of PU connector	320
4.24.2	Wiring and arrangement of RS-485 terminals	322
4.24.3	Initial settings and specifications of RS-485 communication	
	(Pr. 117 to Pr. 124, Pr. 331 to Pr. 337, Pr. 341, Pr. 549)	
4.24.4	Communication EEPROM write selection (Pr. 342)	
4.24.5	Mitsubishi inverter protocol (computer link communication)	327
4.24.6	Modbus-RTU communication specifications (Pr. 331, Pr. 332, Pr. 334, Pr. 343,	000
4047	Pr. 539, Pr. 549) Operation by PLC function (Pr. 414 to Pr. 417, Pr. 506 to Pr. 515)	
4.24.7		
4.24.8	USB communication (Pr. 547, Pr. 548)	
	Special operation and frequency control	354
	Special operation and frequency control  PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354
4.25	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	<b>354</b>
4.25 \$ 4.25.1 4.25.2	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	<b>354</b> 
4.25 \$ 4.25.1 4.25.2 4.25.3	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	<b>354</b>
4.25.1 4.25.2 4.25.3 4.25.4	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	<b>354</b>
4.25.1 4.25.2 4.25.3 4.25.4 4.25.5	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354 
4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.5	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354 
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)  Commercial power supply-inverter switchover function (Pr. 57, Pr. 58, Pr. 135 to Pr. 139, Pr. 159)  Load torque high speed frequency control (Pr. 4, Pr. 5, Pr. 270 to Pr. 274)  Droop control (Pr. 286 to Pr. 288)  Frequency setting by pulse train input (Pr. 291, Pr. 384 to Pr. 386)  Encoder feedback control (Pr. 144, Pr. 285, Pr. 359, Pr. 367 to Pr. 369).  Regeneration avoidance function (Pr. 665, Pr. 882 to Pr. 886)	354 
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354 
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 \$ 4.26.1	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 \$ 4.26.1 4.26.2	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)  Commercial power supply-inverter switchover function (Pr. 57, Pr. 58, Pr. 135 to Pr. 139, Pr. 159)  Load torque high speed frequency control (Pr. 4, Pr. 5, Pr. 270 to Pr. 274)  Droop control (Pr. 286 to Pr. 288)  Frequency setting by pulse train input (Pr. 291, Pr. 384 to Pr. 386)  Encoder feedback control (Pr. 144, Pr. 285, Pr. 359, Pr. 367 to Pr. 369).  Regeneration avoidance function (Pr. 665, Pr. 882 to Pr. 886)  Jseful functions  Cooling fan operation selection (Pr. 244)  Display of the life of the inverter parts (Pr. 255 to Pr. 259)  Maintenance timer alarm (Pr. 503, Pr. 504)  Current average value monitor signal (Pr. 555 to Pr. 557)	354  354  362  369  371  374  378  378  378  381
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 4.26.1 4.26.2 4.26.3	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)  Commercial power supply-inverter switchover function (Pr. 57, Pr. 58, Pr. 135 to Pr. 139, Pr. 159)  Load torque high speed frequency control (Pr. 4, Pr. 5, Pr. 270 to Pr. 274)  Droop control (Pr. 286 to Pr. 288)  Frequency setting by pulse train input (Pr. 291, Pr. 384 to Pr. 386)  Encoder feedback control (Pr. 144, Pr. 285, Pr. 359, Pr. 367 to Pr. 369).  Regeneration avoidance function (Pr. 665, Pr. 882 to Pr. 886)  Jseful functions  Cooling fan operation selection (Pr. 244)  Display of the life of the inverter parts (Pr. 255 to Pr. 259)  Maintenance timer alarm (Pr. 503, Pr. 504)	354  354  362  369  371  374  378  378  378  381
4.25 \$\\ 4.25.1 \\ 4.25.2 \\ 4.25.3 \\ 4.25.4 \\ 4.25.5 \\ 4.25.6 \\ 4.25.7 \\ 4.26 \\ 4.26.2 \\ 4.26.3 \\ 4.26.4 \\ 4.26.5	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  362  369  371  374  378  378  378  381
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 4.26.1 4.26.2 4.26.3 4.26.4 4.26.5 4.27	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  362  369  371  374  378  378  378  381  382  385
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 4.26.1 4.26.2 4.26.3 4.26.4 4.26.5 4.27	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  362  369  369  371  374  378  378  378  378  381  382  385
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 4.26.1 4.26.2 4.26.3 4.26.4 4.26.5 4.27	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  354  369  369  371  374  376  378  378  381  382  384  385
4.25 \$\\ 4.25.1 \\ 4.25.2 \\ 4.25.3 \\ 4.25.4 \\ 4.25.5 \\ 4.25.6 \\ 4.25.7 \\ 4.26 \\ 4.26.1 \\ 4.26.2 \\ 4.26.3 \\ 4.26.4 \\ 4.26.5 \\ 4.27.1 \\ 4.27.2 \\ 4.27.3	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  354  369  369  371  374  376  378  378  381  382  384  385  385
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 \$ 4.26.1 4.26.2 4.26.3 4.26.4 4.26.5 4.27 4.27.1 4.27.2 4.27.3 4.27.4	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  362  367  369  371  374  378  378  381  385  385  385
4.25 \$ 4.25.1 4.25.2 4.25.3 4.25.4 4.25.5 4.25.6 4.25.7 4.26 \$ 4.26.1 4.26.2 4.26.3 4.26.4 4.26.5 4.27 4.27 4.27 4.27.1 4.27.2 4.27.3 4.27.4 4.28	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  354  362  369  371  374  378  378  381  385  385  385  387  388
4.25 \$\\ 4.25.1 \\ 4.25.2 \\ 4.25.2 \\ 4.25.3 \\ 4.25.4 \\ 4.25.5 \\ 4.25.6 \\ 4.25.7 \\ 4.26 \\ 4.26.3 \\ 4.26.3 \\ 4.26.4 \\ 4.26.5 \\ 4.27 \\ 4.27.1 \\ 4.27.2 \\ 4.27.3 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.25.1 \\ 4.25.2 \\ 4.26.3 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.20	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  362  369  371  378  378  378  381  385  385  385  387  387  388
4.25 \$\\ 4.25.1 \\ 4.25.2 \\ 4.25.2 \\ 4.25.3 \\ 4.25.4 \\ 4.25.5 \\ 4.25.6 \\ 4.25.7 \\ 4.26 \\ 4.26.3 \\ 4.26.3 \\ 4.26.4 \\ 4.26.5 \\ 4.27 \\ 4.27.1 \\ 4.27.2 \\ 4.27.3 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.25.1 \\ 4.25.2 \\ 4.26.3 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.27.4 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.28 \\ 4.29 \\ 4.20	PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)	354  354  362  367  369  371  374  376  378  381  385  385  385  387  388  389  390
4.25 \$\\ 4.25.1 \\ 4.25.2 \\ 4.25.3 \\ 4.25.4 \\ 4.25.5 \\ 4.25.6 \\ 4.25.7 \\ 4.26 \\ 4.26.3 \\ 4.26.3 \\ 4.26.4 \\ 4.26.5 \\ 4.27 \\ 4.28 \\ 4.30 \\ 4.30.1 \\ 4.30.2	Special operation and frequency control  PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)  Commercial power supply-inverter switchover function (Pr. 57, Pr. 58, Pr. 135 to Pr. 139, Pr. 159)  Load torque high speed frequency control (Pr. 4, Pr. 5, Pr. 270 to Pr. 274)  Droop control (Pr. 286 to Pr. 288)	354  354  362  369  371  374  376  378  378  381  385  385  385  387  387  388  389  390



#### 4.3 Control mode

V/F control (initial setting), advanced magnetic flux vector control, real sensorless vector control and vector control are available with this inverter.

#### (1) V/F Control

· It controls frequency and voltage so that the ratio of frequency (F) to voltage (V) is constant when changing frequency.

#### (2) Advanced magnetic flux vector control

• This control devides the inverter output current into an excitation current and a torque current by vector calculation and makes voltage compensation to flow a motor current which meets the load torque.

#### (3) Real sensorless vector control

- By estimating the motor speed, speed control and torque control with more advanced current control function are enabled. When high accuracy and fast response is necessary, select the real sensorless vector control and perform offline auto tuning and online auto tuning.
- · This control can be applied to the following applications.
  - · To minimize the speed fluctuation even at at a severe load fluctuation
  - · To generate low speed torque
  - · To prevent machine from damage due to too large torque (torque limit)
  - · To perform torque control

#### (4) Vector control

- When the FR-A7AP is mounterd, full-scale vector control operation can be performed using a motor with encoder.
   Fast response/high accuracy speed control (zero speed control, servo lock), torque control, and position control can be performed.
- · What is vector control?


Excellent control characteristics when compared to V/F control and other control techniques, achieving the control characteristics equal to those of DC machines.

It is suitable for applications below.

- $\cdot$  To minimize the speed fluctuation even at at a severe load fluctuation
- · To generate low speed torque
- · To prevent machine from damage due to too large torque (torque limit)
- · To perform torque control or position control
- · Servo-lock torque control which generates a torque at zero speed (i.e. status of motor shaft = stopped)

#### 4.3.1 What is vector control?

Vector control is one of the control techniques for driving an induction motor. To help explain vector control, the fundamental equivalent circuit of an induction motor is shown below:

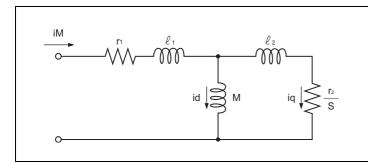

r1 : Primary resistance

r2 : Secondary resistance

ℓ₁: Primary leakage inductance

 $\ell_2$ : Secondary leakage inductance

M: Mutual inductance


S:Slip

id : Excitation current

iq: Torque current

im: Motor current

In the above diagram, currents flowing in the induction motor can be classified into a current id (excitation current) for making a magnetic flux in the motor and a current iq (torque current) for causing the motor to develop a torque.

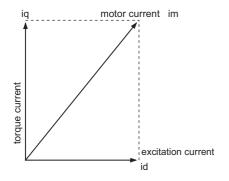

In vector control, the voltage and output frequency are calculated to control the motor so that the excitation current and torque current (as shown in the left figure) flow to the optimum as described below:

- (1) The excitation current is controlled to place the internal magnetic flux of the motor in the optimum status.
- (2) Derive the torque command value so that the difference between the motor speed command and the actual speed (speed estimated value for real sensorless vector control) obtained from the encoder connected to the motor shaft is zero. Torque current is controlled so that torque as set in the torque command is developed.

Motor-generated torque (TM), slip angular velocity ( $\omega$ s) and the motor's secondary magnetic flux ( $\phi$ 2) can be found by the following calculation:

$$T_{M} \propto \phi_{2} \cdot iq$$
  
 $\phi_{2} = M \cdot id$   
 $\cos = r2$  iq

 $\omega s = \frac{r2}{L2} \cdot \frac{iq}{id}$ 

where, L2 = secondary inductance


 $L2 = \ell_2 + M$ 

Vector control provides the following advantages:


- Excellent control characteristics when compared to V/ F control and other control techniques, achieving the control characteristics equal to those of DC machines.
- (2) Applicable to high-response applications with which induction motors were previously regarded as difficult to use. Applications requiring a wide variable-speed range from extremely low speed to high speed, frequent acceleration/deceleration operations, continuous four-quadrant operations etc.
- (3) Allows torque control.
- (4) Allows servo-lock torque control which generates a torque at zero speed (i.e. status of motor shaft = stopped). (Cannot be performed under real sensorless vector control.)



#### Block diagram of real sensorless vector control

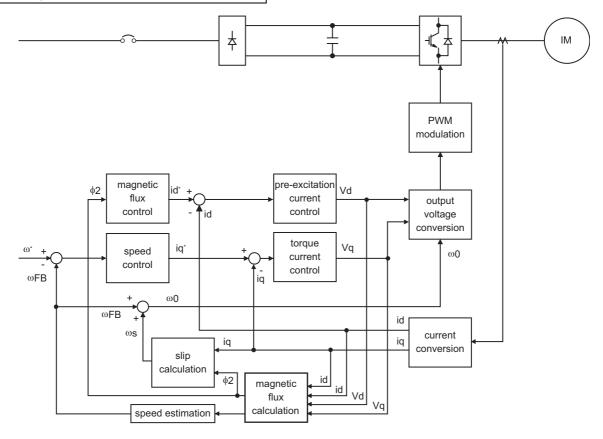

#### Block diagram of vector control

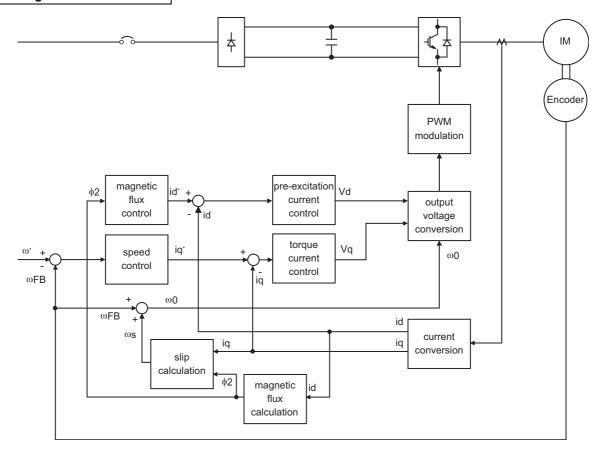

#### (1) Speed control

Speed control operation is performed to zero the difference between the speed command ( $\omega^*$ ) and actual rotation detection value ( $\omega$ FB). At this time, the motor load is found and its result is transferred to the torque current controller as a torque current command (iq\*).

#### (2) Torque current control

A voltage (Vq) is calculated to start a current (iq\*) which is identical to the torque current command (iq) found by the speed controller.

#### (3) Magnetic flux control

The magnetic flux ( $\phi$ 2) of the motor is derived from the excitation current (id). The excitation current command (id\*) is calculated to use that motor magnetic flux ( $\phi$ 2) as a predetermined magnetic flux.

#### (4) Excitation current control

A voltage (Vd) is calculated to start a current (id) which is identical to the excitation current command (id\*) found by magnetic flux control.

#### (5) Output frequency calculation

Motor slip  $(\omega s)$  is calculated on the basis of the torque current value (iq) and magnetic flux  $(\phi 2)$ . The output frequency (w0) is found by adding that slip  $(\omega s)$  to the feedback  $(\omega FB)$  found by a feedback from the encoder.

The above results are used to make PWM modulation and run the motor.



## 4.3.2 Change the control method (Pr. 80, Pr. 81, Pr. 451, Pr. 800)

Set when selecting the advanced magnetic flux vector control, real sensorless vector control or vector control. Select a control mode from speed control mode, torque control mode and position control mode under real sensorless vector control or vector control. The initial value is V/F control.

- •Select a control method using Pr. 800 (Pr. 451) Control method selection .
- •Each control method can be switched using a method switching signal (MC).

Parameter Number	Name	Initial Value	Setting 200V class (4	•	Description		
			02150 (01100) or less	0.4 to 55kW	Set the applied mater capaci	itu	
80	Motor Capacity	9999	02880 (01440) or more	0 to 3600kW	Set the applied motor capacity.		
			999	9	V/F control		
	81 Number of motor poles		2, 4, 6, 8, 10		Set the number of motor poles.		
81			12, 14, 16, 18, 20		X18 signal-ON:V/F control	Set 10 + number of motor poles	
			9999		V/F control		
			0 to 5		V/F control		
800	Control method	20	9		Vector control test operation		
800	selection 20 10, 11, 12 20		10, 11, 12		Real sensorless vector control		
			)	V/F control (advanced magnetic flux vector control)			
	Second motor         10, 11           451         control method         9999         20		10, 11	, 12	Real sensorless vector control		
451			)	V/F control (advanced magnetic flux vector control			
	selection		9999		Second motor is invalid		

#### (1) Setting of the motor capacity and the number of motor poles (Pr. 80, Pr. 81)

- · Motor specifications(the motor capacity and the number of motor poles) must be set to select advanced magnetic flux vector control, real sensorless vector control or vector control.
- · Set the motor capacity (kW) in *Pr. 80 Motor capacity* and set the number of motor poles in *Pr. 81 Number of motor poles*.

#### (2) Selection of control method and control mode

· Select the inverter control mode for V/F control, advanced magnetic flux vector control (speed control), real sensorless vector control (speed control, torque control) and vector control (speed control, torque control, and position control).

Pr. 80, Pr. 81 Setting	Pr. 800 Setting	Pr. 451 Setting	Control Method	Control Mode	Remarks	
	0	_		Speed control	_	
	1	_		Torque control	_	
	2	_		Speed control-torque control switchover	MC ON: Torque control MC OFF: Speed control	
	3	_	V/F control	Position control	_	
	4	_		Speed control-position control switchover	MC ON: Position control MC OFF: Speed control	
Other	5	_		Position control-torque control switchover	MC ON: Torque contro MC OFF: Position control	
than	9	_		Vector control test operation		
9999	10		Real sensorless vector	Speed control	_	
	11			Torque control		
	1	2	control	Speed control-torque control switchover	MC ON: Torque control MC OFF: Speed control	
	20 ( <i>Pr. 800</i> initial value)		Advanced magnetic flux vector control	Speed control	_	
	9999 ( <i>Pr. 451</i> initial value)		V/F coi	ntrol, advanced magnetic flux ved	ctor control	
9999	_	_ *		V/F control		

<sup>\*</sup> Control method is V/F control regardless of the setting value of Pr.~800 when "9999" is set in Pr.~80 Motor capacity or Pr.~81 Number of motor poles.



#### (3) Vector control test operation (Pr. 800 = "9")

· Speed control test operation can be performed even when the motor is not connected.

The speed calculation value changes to track the speed command and the transition can be checked with the operation panel and analog signal output at FM and AM.

#### CAUTION =

- · Since current is not detected and voltage is not output, monitors related to current and voltage such as output current and output voltage, etc. and output signals do not function.
- For speed calcuration, speed is calculated in consideration of Pr. 880 Load inertia ratio

#### (4) Control method switching by external terminals (RT signal, X18 signal)

- The switching of the control method (V/F control, advanced magnetic flux vector control, real sensorless vector control and vector control) by the external terminal may be made in either of the following two ways: switching by the second function selection signal (RT), or V/F switching signal (X18).
- Two types of control method can be switched with the RT signal by setting the type of motor to be used as second motor in *Pr. 450 Second applied motor* and control method of the motor in *Pr. 451 Second motor control method selection*. Turn on the RT signal to select the second function.
- For switching by the X18 signal, setting "12, 14, 16, 18, 20" in *Pr. 81 Number of motor poles* and turning the X18 signal on switches the currently selected control method (advanced magnetic flux vector control, real sensorless vector control and vector control) to V/F control. In this case, electronic thermal relay characteristic, etc. can not be changed. Therefore, use this terminal only for changing the control system of one motor.

For the terminal used for X18 signal input, set "18" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function.

First Motor Control Method	Second Motor Control Method (RT signal is on)	Pr. 450 Setting	Pr. 453, Pr. 454 Setting	Pr. 451 Setting
	V/F Control	9999	_	
V/F Control	V/I Control	0.11	9999	
V/F Control	Advanced magnetic flux vector control	Other than 9999	Other than	20, 9999
	Real sensorless vector control	0000	9999	10 to 12
	Same control as the first motor *1	9999	_	
Advanced magnetic flux vector control	V/F Control	011 11	9999	_
Real sensorless vector control	Advanced magnetic flux vector control	Other than 9999	Other than	20, 9999
	Real sensorless vector control	9999		10 to 12

<sup>\*1</sup> V/F control is selected when "12, 14, 16, 18, 20" is set in *Pr. 81* and the X18 signal is on. When the X18 signal is not assigned, turning the RT signal on selects V/F control as the RT signal shares this function.

#### **REMARKS**

- The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189* (*input terminal function selection*), you can assign the RT signal to the other terminal.
- · The RT signal acts as the second function selection signal and makes the other second functions valid. (Refer to page 231.)



#### (5) Switching the control method from the external terminal (MC signal)

- · When "12 (2)" is set in *Pr.* 800 (*Pr.* 451), speed control is selected when the control mode switching signal (MC) is off, and torque control is selected when the signal is off under real sensorless vector control and vector control. Switching between speed control and torque control is always enabled.
  - Under vector control, speed control/position control switchover and torque control/position control switchover can be made by setting "4, 5" in *Pr.* 800. For the terminal used for MC signal input, set "26" in any of *Pr.* 178 to *Pr.* 189 (input terminal function selection) to assign the function.
- · When an analog input terminal (terminal 1,4) is used for torque limit, torque command, etc., terminal functions also switch as below if control mode is switched.

#### Terminal 1 function according to control

Pr. 868 Setting	Real Sensorless Vector Control ( $Pr. 8\theta\theta$ = 12), Vector control ( $Pr. 8\theta\theta$ = 2)			
Fr. 808 Setting	Speed control (MC signal-OFF)	Torque control (MC signal-ON)		
0 (initial value)	Speed setting auxiliary (Pr. 810 = 0)	Speed limit auxiliary (Pr. 807 =0)		
1	Magnetic flux command	Magnetic flux command		
2	Regenerative torque limit (Pr. 810 = 1)	_		
3	_	Torque command (Pr. 804 = 0)		
4	Torque limit ( $Pr. 810 = 1$ )	Torque command (Pr. 804 = 0)		
5	_	Forward reverse speed limit (Pr. 807 = 2)		
6	_	_		
9999	<del>_</del>	_		

Pr. 868 Setting	Vector Control (Pr. 800 = 4)			
Fr. 808 Setting	Speed control (MC signal-OFF)	Position control (MC signal-ON)		
0 (initial value)	Speed setting auxiliary (Pr. 810 = 0)	_		
1	Magnetic flux command	Magnetic flux command		
2	Regenerative torque limit (Pr. 810 = 1)	Regenerative torque limit (Pr. 810 = 1)		
3	_	_		
4	Torque limit ( $Pr. 810 = 1$ )	Torque limit ( $Pr. 810 = 1$ )		
5	_	_		
6	Torque bias	_		
9999	_	_		

Pr. 868 Setting	Vector Control (Pr. 800 = 5)			
rr. 808 Setting	Position control (MC signal-OFF)	Torque control (MC signal-ON)		
0 (initial value)	<del>-</del>	Speed command auxiliary (Pr. 810 =0)		
1	Magnetic flux command	Magnetic flux command		
2	Regenerative torque limit (Pr. 810 = 1)	_		
3	<del>-</del>	Torque command (Pr. 804 = 0)		
4	Torque limit (Pr. 810 = 1)	Torque command (Pr. 804 = 0)		
5	<del>-</del>	Forward reverse speed limit (Pr. 807 = 2)		
6	<del></del>	_		
9999	<del></del>	_		

#### • Terminal 4 function according to control

Pr. 858 Setting	Real Sensorless Vector Control ( $Pr. 800 = 12$ ), Vector control ( $Pr. 800 = 2$ )		
	Speed control (MC signal-OFF)	Torque control (MC signal-ON)	
0 (initial value)	Speed command (AU signal-ON, Pr. 810 = 0)	Speed limit (AU signal-ON, Pr. 807 = 0)	
1	Magnetic flux command	Magnetic flux command	
4	Torque limit ( <i>Pr.</i> 810 = 1)	_	
9999	_	<del>_</del>	

Pr. 858 Setting	Vector Control ( $Pr. 800 = 4$ )		
	Speed control (MC signal-OFF)	Position control (MC signal-ON)	
0 (initial value)	Speed command (AU signal-ON, Pr. 810 = 0)	_	
1	Magnetic flux command	d Magnetic flux command	
4	Torque limit (Pr. 810 = 1)	810 = 1) Torque limit ( $Pr. 810 = 1$ )	
9999	_	_	

Pr. 858 Setting	Vector Control (Pr. 800 = 5)		
17. 838 Setting	Position control (MC signal-OFF)	Torque control (MC signal-ON)	
0 (initial value)	<del></del>	Speed limit (AU signal-ON, Pr. 807 = 0)	
1	Magnetic flux command	Magnetic flux command	
4	Torque limit ( $Pr. 810 = 1$ )	_	
9999		_	

<sup>-:</sup> No function

#### **REMARKS**

- Switching between speed control and torque control is always enabled independently of whether the motor is at a stop or running or the DC injection brake operation (pre-excitation).
- Speed control/position control switchover and torque control/position control switchover is made when frequency drops to the Pr. 865 Low speed detection, and not switched during motor operation.

#### = CAUTION =

Changing the terminal assignment using Pr. 178 to Pr. 189 (input terminal function selection) may affect the other functions. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Advanced magnetic flux vector control Tel Refer to page 145

Real sensorless vector control, vector control (speed control) Refer to page 96

Real sensorless vector control, vector control (torque control) Refer to page 118

Vector control (position control) Refer to page 129

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

Pr. 450 Second applied motor Refer to page 184

Pr. 804 Torque command source selection Refer to page 122
Pr. 807 Speed limit selection Refer to page 124

Pr. 810 Torque limit input method selection Refer to page 99

Pr. 858 Terminal 4 function assignment, Pr. 868 Terminal 1 function assignment 👺 Refer to page 281




# 4.4 Speed control by real sensorless vector control, vector control

Purpose	Parameter that should be Set		Refer to Page
To perform torque limit during speed control	Torque limit	Pr. 22, Pr. 803, Pr. 810, Pr. 812 to Pr. 817, Pr. 858, Pr. 868, Pr. 874	99
Gain adjustment of speed control	Easy gain tuning Gain adjustment	Pr. 818 to Pr. 821, Pr. 830, Pr. 831, Pr. 880	104
To enhance the trackability of the motor in response to a speed command change	Speed feed forward control, model adaptive speed control	Pr. 828, Pr. 877 to Pr. 881	111
Stabilize the speed detection signal	Speed detection filter	Pr. 823, Pr. 833	141
Accelerates the rise of the torque at a start.	Torque bias	Pr. 840 to Pr. 848	113
Avoid mechanical resonance	Notch filter	Pr. 862, Pr. 863	117

Speed control is exercised to match the speed command and actual motor speed.

## 4.4.1 Setting procedure of real sensorless vector control (speed control) Sensorless

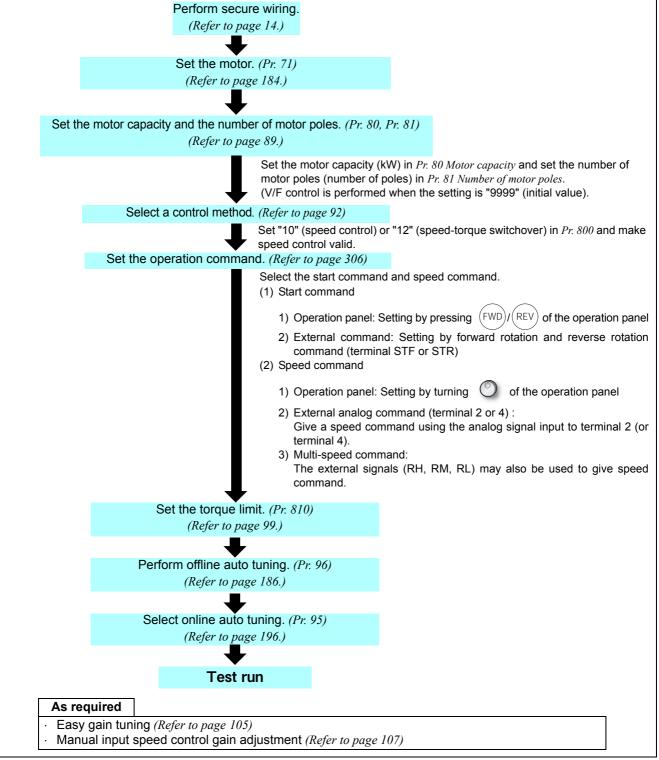

#### CAUTION

- · Make sure to perform offline auto tuning before performing real sensorless vector control.
- The carrier frequencies are selectable from among 2k, 6k, 10k, 14kHz for real sensorless vector control.
- Torque control can not be performed in the low speed region and at a low speed with light load. Choose vector control.
- Performing pre-excitation (LX signal and X13 signal) under torque control may start the motor running at a low speed even when the start command (STF or STR) is not input. The motor may run also at a low speed when the speed limit value=0 with a start command input. Perform pre-excitation after making sure that there will be no problem in safety if the motor runs.
- Do not switch between the STF (forward rotation command) and STR (reverse rotation command) during operation under torque control. Overcurrent shut-off error (E.OC□) or opposite rotation deceleration error (E.11) occurs.
- For the FR-A720-00030 to 00175 (FR-A740-00015 to 00090), the speed deviation may become large at 20Hz or less and torque may become insufficient in the low speed region under 1Hz during continuous operation under real sensorless vector control. In such case, stop operation once and reaccelerate to improve the problems.
- When the inverter is likely to start during motor coasting under real sensorless vector control, set to make frequency search of automatic restart after instantaneous power failure valid (*Pr.* 57 ≠ "9999", *Pr.* 162 = "10").



#### 

Perform secure wiring. (Refer to page 41.) Mount the FR-A7AP. Set the motor and encoder. (Pr. 71, Pr.359, Pr.369) Set Pr.71 Applied motor, Pr.359 Encoder rotation direction and Pr.369 *Number of encoder pulses* according to the motor and encoder used. (Refer to page 43.) Set the motor capacity and the number of motor poles according as required. (Pr. 80, Pr. 81) (Refer to page 92.) Set the motor capacity (kW) in Pr. 80 Motor capacity and set the number of motor poles (number of poles) in Pr. 81 Number of motor poles. (V/F control is performed when the setting is "9999" (initial value).) Select a control method. (Refer to page 92.) Make speed control valid by selecting "0" (speed control), "2" (speedtorque switchover), or "4" (speed-position switchover) for Pr.800. Set the run command. (Refer to page 306.) Select the start command and speed command. (1) Start command 1)Operation panel: Setting by pressing of the operation panel 2)External command: Setting by forward rotation or reverse rotation command (terminal STF or STR) (2)Speed command 1)Operation panel: Setting by pressing O of the operation panel 2) External analog command (terminal 2 or 4): Give a speed command using the analog signal input to terminal 2 (or terminal 4). 3)Multi-speed command: The external signals (RH, RM, RL) may also be used to give speed command. Set the torque limit. (Pr. 810) (Refer to page 99.) Test run As required Perform offline auto tuning. (Pr.96) (refer to page 186). Select online auto tuning. (Pr.95) (refer to page 196). Easy gain tuning (refer to page 104)

· Manual input speed control gain adjustment (refer to page 107)

# 4.4.3 Torque limit level setting for speed control (Pr. 22, Pr. 803, Pr. 810 to Pr. 817, Pr. 858, Pr. 868, Pr. 874) Sensorless Vector


This function limits the output torque to the predetermined value during speed control under real sensorless vector control or vector control.

- Set the torque limit level within the range 0 to 400% in *Pr. 22*. When the TL signal is turned on, torque limit level 2 functions.
- You can select whether the torque limit level is set using parameters or analog input teminals (terminal 1, 4). In addition, you can set torque limit level for forward (power driving/regeneration) and reverse (power driving/regeneration) operation individually.

Parameter Number	Name	Initial Value	Setting Range	Des	cription	
22	Stall prevention operation level (torque limit level)	150/200%*	0 to 400%	that the rated torque  * For the 3.7K or less, t to 200% when V/F con	he value changes from 150% trol or advanced magnetic flux ged to real sensorless vector	
803	Constant power range torque characteristic	0	0	Constant motor output limit Constant torque	Select the torque limit in the constant output region by torque limit	
	selection		1	limit	setting.	
810	Torque limit input method	0	0	settings)	orque limit by parameter	
010	selection	0	1	1, 4)	torque limit by terminal	
811 *1	Set resolution switchover	0		Speed setting and running speed monitor increments from the PU, RS-485 communication or communication option.	Torque limit setting increments Pr. 22, Pr. 812 to Pr. 817	
			0 1	1r/min 0.1r/min	0.1%	
			10 11	1r/min 0.1r/min	0.01%	
812	Torque limit level (regeneration)	9999	0 to 400%	Set the torque limit lever regeneration.		
	,		9999	Limit at the value of <i>Pr. 22</i> or analog terminal Set the torque limit level for reverse rotation		
813	Torque limit level (3rd quadrant)	9999	0 to 400% 9999	driving.	Pr. 22 or analog terminal	
814	Torque limit level (4th quadrant)	9999	0 to 400%	Set the torque limit lever regeneration.	el for reverse rotation	
	quadrant <i>i</i>		9999	Limit at the value of <i>Pr. 22</i> or analog termina When the torque limit selection (TL) signal is		
815	Torque limit level 2	9999	0 to 400%	on, the <i>Pr. 815</i> value is regardless of <i>Pr. 810</i>	s a torque limit value	
	Tanana limit lasat dasi		9999		Pr. 22 or analog terminal	
816	Torque limit level during	9999	0 to 400%		alue during acceleration.	
	acceleration Torque limit level during		9999 0 to 400%	Same torque limit as	at constant speed alue during deceleration.	
817	deceleration	9999	9999	Same torque limit as		
858	Terminal 4 function assignment	0	0, 4, 9999	When "4" is set in, th changed with a signa		
868	Terminal 1 function assignment	0	0, 2 to 5, 9999	When "4" is set in, th changed with a signal	•	
874	OLT level setting	150%	0 to 200%	torque limit is activate	ke an alarm stop if the ed to stall the motor. Set n alarm stop is made.	

<sup>\*1</sup> Setting can be made only when the FR-A7AP is mounted.

CAUTION

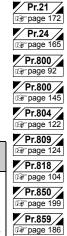

Pr.867

page 254

Pr.872

page 271

Pr.875

<sup>·</sup> Under real sensorless vector control, the lower limit of torque limit level is set 30% if the value less than 30% is input.




## (1) Selection of torque limit input method (Pr. 810)

· Set *Pr. 810 Torque limit input method selection* to select the method to limit output torque during speed control. Torque limit by parameter setting is initially set.

Parameter Number	Setting Range	Torque Limit Input Method	Description
810	0 (initial value)	Internal torque limit	Parameter-set torque limit operation is performed. Changing the torque limit parameter value by communication enables torque limit to be input by communication.
	1	External torque limit	Torque limit using the analog voltage (current) from terminal 1 or terminal 4 is made valid.

# (2) Torque limit level by parameter setting (Pr.~810 = "0", Pr.~812 to Pr.~814)

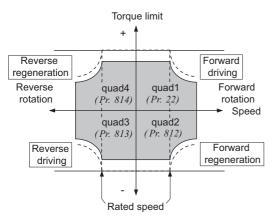


- · In the initial setting, limit is made on all quadrants on the *Pr. 22 Stall prevention operation level (torque limit level)*.
- · When you want to set the level on a quadrant basis, set the torque limit level in *Pr. 812 Torque limit level (regeneration)*, *Pr. 813 Torque limit level (3rd quadrant)*, *Pr. 814 Torque limit level (4th quadrant)*.

When "9999" is set, Pr. 22 is the torque limit level.

## (3) Torque limit level by analog input (terminal 1, 4) (Pr. 810 = "1", Pr. 858, Pr. 868)

- · With the upper limit of torque limit as set in *Pr. 22*, the analog input from terminal 1 input is used as the torque limit value within the *Pr. 22* setting range.
- · When torque limit value is input from terminal 1, set "4" in *Pr. 868 Terminal 1 function assignment*. When torque limit value is input from terminal 4, set "4" in *Pr. 858 Terminal 4 function assignment*.
- When Pr. 858 = "4" and Pr. 868 = "2", torque is limitted by analog input from terminal 1 for regeneration and by terminal 4 for driving.
- Torque limit by analog input can be calibrated using *calibration parameter C16 (Pr. 919) to C19 (Pr. 920), C38 (Pr. 932) to C41 (Pr. 933) . (Refer to page 293)*

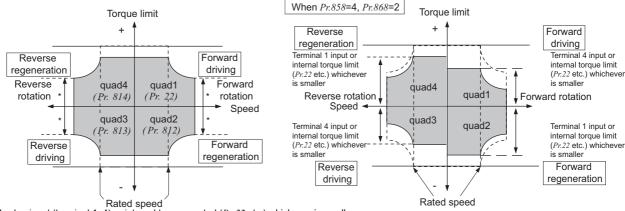


Analog input (terminal 1, 4) or internal torque control (*Pr. 22* etc.) whichever is smaller

# • Terminal 1, 4 function according to control (-: without function)

Pr. 858 Setting	Pr. 868 Setting	Real Sensorless Vector Control (Speed Control)				
Fr. 838 Setting	Fr. 808 Setting	Terminal 4 function	Terminal 1 function			
	0 (initial value)		Speed setting auxiliary (Pr. 810 = 0)			
0	1		Magnetic flux command			
	2	Speed command				
(initial value)	3	(AU signal-ON, <i>Pr. 810</i> = 0)	_			
(initial value)	4 *1	(7.65 signal 6.14, 17. 616 6)	Torque limit ( $Pr. 810 = 1$ )			
	5		_			
	6 *4		Torque bias ( <i>Pr. 840</i> = 1 to 3)			
	9999		_			
	0 (initial value)	Magnetic flux command	Speed setting auxiliary (Pr. 810 = 0)			
	1 *4	— *3	Magnetic flux command			
	2		_			
1	3		_			
	4	Magnetic flux command	Torque limit ( $Pr. 810 = 1$ )			
	5	Magnetic hax command	_			
	6 *4		Torque bias ( <i>Pr. 840</i> = 1 to 3)			
	9999		_			
	0 (initial value)	Torque limit ( <i>Pr. 810</i> = 1)	Speed setting auxiliary (Pr. 810 = 0)			
	1		Magnetic flux command			
	2	Driving torque limit ( $Pr. 810 = 1$ )	Regenerative torque limit ( <i>Pr. 810</i> = 1)			
4 *2	3	Torque limit ( $Pr. 810 = 1$ )				
	4 *1	<del></del> *3	Torque limit ( $Pr. 810 = 1$ )			
	5		_			
	6 *4	Torque limit ( $Pr. 810 = 1$ )	Torque bias ( <i>Pr. 840</i> = 1 to 3)			
	9999		_			
9999	_	<del></del>	_			

- \*1 When the Pr. 868 setting is other than "0", other functions of terminal 1 (auxiliary input, override function, PID function) do not function.
- \*2 When the *Pr.* 858 setting is other than "0", PID control and speed command from terminal 4 do not function even if the AU signal turns on.
- \*3 When "1" (magnetic flux command) or "4" (torque limit) is set in both *Pr. 858* and *Pr. 868*, function of terminal 1 has higher priority and terminal 4 has no function.
- \*4 Setting is valid only when exercising vector control with the FR-A7AP.

# (4) Second torque limit level (TL signal, Pr. 815)

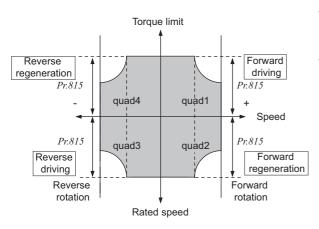

- · For *Pr. 815 Torque limit level 2*, the *Pr. 815* value is a torque limit value regardless of *Pr. 810 Torque limit input method selection* when the torque limit selection signal (TL) is on.
- Set "27" in *Pr. 178 to Pr. 189 (input terminal function selection)* to assign a function to the TL signal.

#### CAUTION


· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.



# (5) Set a torque limit value during acceleration and deceleration individually (Pr. 816, Pr. 817)

You can set torque limit during acceleration and deceleration individually.

The following chart shows torque limit according to the settings of *Pr. 816 Torque limit level during acceleration* and *Pr. 817 Torque limit level during deceleration*.

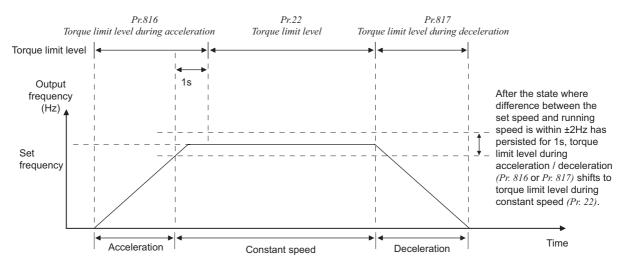

# (6) Setting increments switchover of the torque limit level (Pr. 811)

· By setting "10, 11" in *Pr. 811 Set resolution switchover*, the setting increments of *Pr. 22 Torque restriction level* and *Pr. 812 to Pr. 817 (torque restriction level)* can be switched to 0.01%.

#### **REMARKS**


- · The internal resolution of the torque restriction is 0.024% (100/2<sup>12</sup>) and the fraction less than the resolution is rounded off.
- · When the torque restriction setting increments have been changed (0.1%⇔0.01%), reset is necessary because the settings of *Pr. 22* and *Pr. 812 to Pr. 817* are multiplied by 1/10 (ten times).

For example, when 10 (0.01%) set in Pr.~811 is changed to 1 (0.1%) with Pr.~22 = 150.00%,

Pr. 22 = 1500.0% and the maximum torque is 400%.


· Refer to page 246 for switchover of speed setting increments.

# (7) Change the torque characteristics in the constant power range (Pr. 803)

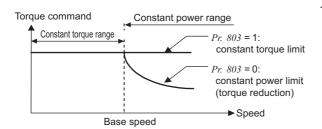

· You can select whether the torque imit in the constant power range be constant torque limit (setting is "1") or constant power limit (initial setting is "0"), using *Pr. 803 Constant power range torque characteristic selection* under torque limit operation.

# (8) Alarm stop when torque limit is activated (Pr. 874)

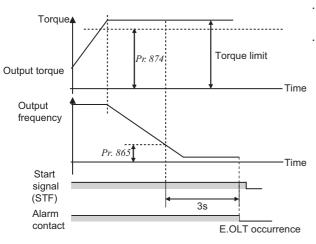

- This function can make an alarm stop if the torque limit is activated to stall the motor.
- The motor stalls if the torque limit is activated under a high load applied during speed control or position control. At this time, if the motor speed is lower than the speed set in *Pr. 865 Low speed detection* and also the output torque exceeds the level set in *Pr. 874 OLT level setting* for 3s, it is regarded as a stop effected by stall prevention and E. OLT is output, resulting in an alarm stop.

#### **REMARKS**

 If the frequency has fallen to 0.5Hz by stall prevention operation and remains for 3s under V/F control and advanced magnetic flux vector control, an alarm (E.OLT) appears to shutoff the inverter output. In this case, this function is activated regardless of Pr. 874.

This alarm is not provided under torque control.

#### ♦Parameters referred to ♦

- · Pr. 22 Stall prevention operation level 👺 Refer to page 149
- · Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227
- · Pr. 840 Torque bias selection Refer to page 113
- · Pr. 865 Low speed detection Refer to page 241



# 4.4.4 To perform high accuracy/fast response operation (gain adjustment of real sensorless vector control and vector control) (Pr. 818 to Pr. 821, Pr. 830,

Pr. 831, Pr. 880) Sensorless Vector




The ratio of the load inertia to the motor inertia (load inertia moment ratio) is estimated in real time from the torque command and speed during motor operation by vector control. As optimum gain of speed control and position control are automatically set from the load inertia ratio and response level, time and effort of making gain adjustment are reduced. (Easy gain tuning)

When the load inertia ratio can not be estimated due to load fluctuation or real sensorless vector control is exercised, control gain is automatically set by manually inputting the load inertia ratio.

Make a manual input adjustment when vibration, noise or any other unfavorable phenomenon occurs due to large load inertia or gear backlash, for example, or when you want to exhibit the best performance that matches the machine.

Parameter Number	Name	Initial Value	Setting Range	Description
818	Easy gain tuning response level setting	2	1 to 15	Set the response level.  1: Slow response to 15: Fast response
			0	Without easy gain tuning
819	Easy gain tuning selection	0	1	With load estimation, with gain calculation (valid only during vector control)
			2	With load (Pr. 880) manual input, gain calculation
820	Speed control P gain 1	ntrol P gain 1 60%		Set the proportional gain for speed control. (Increasing the value improves trackability in response to a speed command change and reduces speed variation with disturbance.)
821	Speed control integral time 1 0.333		0 to 20s	Set the integral time during speed control. (Decrease the value to shorten the time taken for returning to the original speed if speed variation with disturbance occurs.)
830	Speed control P gain 2	9999	0 to 1000%	Second function of <i>Pr. 820</i> (valid when RT signal is on)
			9999	No function
831	Speed control integral time 2	9999	0 to 20s	Second function of <i>Pr. 821</i> (valid when RT signal is on)
	uiiie Z	<u> </u>	9999	No function
880	Load inertia ratio	7 times	0 to 200 times	Set the load intertia ratio to the motor.

# (1) Block diagram of easy gain tuning function

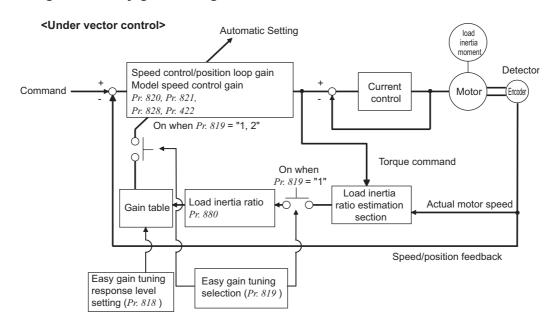

# (2) Easy gain tuning execution procedure (Pr. 819 = "1" load inertia ratio automatic estimation)

Easy gain tuning (load inertia ratio automatic estimation) is valid only in the speed control or position control mode under vector control.

It is invalid under torque control, V/F control, advanced magnetic flux vector control and real sensorless vector control.

1) Set the response level using *Pr.818 Easy gain tuning response level setting*.

Refer to the diagram on the right and set the response level.

Increasing the value will improve trackability to the command, but too high value will generate vibration. The relationship between the setting and response level are shown on the right.

Pr.818 setting	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Response level	Slo res	w pon	se	<b>←</b>		<b>→</b>		Mido		9 ◀	-	-	r	Fast response	
Guideline of machine resonance frequency (Hz)	8	10	12	15	18	22	28	34	42	52	64	79	98	122	150
		Large conveyor General machine tool, conveyor  Arm robot Precision machine tool													

2) Each control gain is automatically set from the load inertia ratio estimated during acceleration/deceleration operation and the *Pr. 818 Easy gain tuning response level setting* value.

*Pr.* 880 Load inertia ratio is used as the initial value of the load inertia ratio for tuning. Estimated value is set in *Pr.* 880 during tuning.

The load inertia ratio may not be estimated well, e.g. it takes a long time for estimation, if the following conditions are not satisfied.

- · Time taken for acceleration/deceleration to reach 1500r/min is 5s or less.
- · Speed is 150r/min or more.
- · Acceleration/deceleration torque is 10% or more of the rated torque.
- · Abrupt disturbance is not applied during acceleration/deceleration.
- · Load inertia ratio is approx. 30 times or less.
- · No gear backlash nor belt looseness is found.
- 3) Press (FWD) or (REV) to estimate the load inertia ratio or calculate gain any time. (The operation command for external operation is the STF or STR signal.)

# (3) Easy gain tuning execution procedure (Pr.819 = "2" load inertia manual input)

Easy gain tuning (load inertia ratio manual input) is valid only in the speed control mode under real sensorless vector control or in the speed control or position control mode under vector control.

- 1) Set the load inertia ratio to the motor in *Pr. 880 Load inertia ratio*.
- 2) Set "2" (with easy gain tuning) in *Pr. 819 Easy gain tuning selection*. Then, *Pr. 820 Speed control P gain 1* and *Pr. 821 Speed control integral time 1* are automaticaly set by gain calculation.
  - Operation is performed in a gain adjusted status from the next operation.
- 3) Perform a test run and set the response level in *Pr.* 818 Easy gain tuning response level setting. Increasing the value will improve trackability to the command, but too high value will generate vibration. (When "2" (parameter write enabled during operation) is set in *Pr.* 77 Parameter write selection, response level adjustment can be made during operation.)

#### REMARKS

- · When "1 or 2" is set in *Pr.* 819 and then returned the *Pr.* 819 setting to "0" after tuning is executed, tuning results which are set in each parameter remain unchanged.
- · When good tuning accuracy is not obtained after executing easy gain tuning due to disturbance and such, perform fine adjustment by manual input. Set "0" (without easy gain tuning) in *Pr.* 819.



# (4) Parameters automatically set by easy gain tuning

The following table indicates the relationship between easy gain tuning function and gain adjustment parameter.


		Easy Gain Tuning Selection (Pr. 81)	9) Setting
	0	1	2
Load inertia ratio (Pr. 880)	Manual input	<ul> <li>a) Inertia estimation result (RAM) by easy gain tuning is dispayed.</li> <li>b) Set the value in the following cases: <ul> <li>Every hour after power-on</li> <li>When a value other than "1" is set in Pr. 819</li> <li>When vector control is changed to other control (V/F control etc.) using Pr. 800</li> </ul> </li> <li>c) Write is enabled only during a stop (manual input)</li> </ul>	Manual input
Speed control P gain 1 (Pr. 820) Speed control integral time 1 (Pr. 821) Model speed control gain (Pr. 828) Position loop gain (Pr. 422)	Manual input	<ul> <li>a) Tuning result (RAM) is displayed.</li> <li>b) Set the value in the following cases: <ul> <li>Every hour after power-on</li> <li>When a value other than "1" is set in <i>Pr. 819</i></li> <li>When vector control is changed to other control (V/F control etc.) using <i>Pr. 800</i></li> <li>c) Write (manual input) disabled</li> </ul> </li> </ul>	<ul> <li>a) Gain is calculated when "2" is set in <i>Pr. 819</i> and the result is set in the parameter.</li> <li>b) When the value is read, the tuning result (parameter setting value) is displayed.</li> <li>c) Write (manual input) disabled</li> </ul>

#### — CAUTION —


<sup>·</sup> Performing easy gain tuning with larger inertia than the specified value during vector control may cause malfunction such as hunting. In addition, when the motor shaft is fixed with servo lock or position control, bearing may be damaged. To prevent these, make gain adjustment by manual input without performing easy gain tuning.

# (5) Manual input speed control gain adjustment

· Make adjustment when any of such phenomena as unusual machine vibration/noise, low response level and overshoot has occurred.

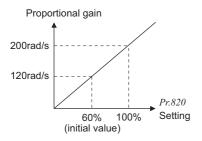

- Pr. 820 Speed control P gain 1 = "60%" (initial value) is equivalent to 120rad/s (speed responce of the motor alone). Increasing the setting value improves the response level, but a too large gain will produce vibration and/or unusual noise.
- Decreasing the *Pr. 821 Speed control integral time 1* shortens the return time taken at a speed change. However, a too short time will generate an overshoot.
- · When there is load inertia, the actual speed gain is as given below.

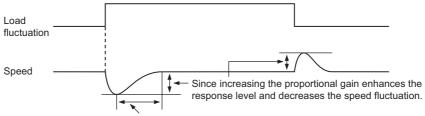

Decreasing the integral time shortens the return time taken.

Also, when there is load inertia, the actual speed gain decreases as indicated below.

JM: Inertia of the motor

JL: Motor shaft-equivalent load inertia

- · Adjustment procedures are as below:
  - 1)Check the conditions and simultaneously change the Pr. 820 value.
  - 2)If you cannot make proper adjustment, change the Pr. 821 value and repeat step 1).

No.	Phenomenon/ Condition	Adjustment Method				
		Set the Pr	Set the Pr. 820 and Pr. 821 values a little higher.			
1	Load inertia	Pr. 820	When a speed rise is slow, increase the value 10% by 10% until just before vibration/noise is produced, and set about 0.8 to 0.9 of that value.			
	is large	Pr. 821	If an overshoot occurs, double the value until an overshoot does not occur, and set about 0.8 to 0.9 of that value.			
		Set the Pr	820 value a little lower and the Pr. 821 value a little higher.			
	Vibration/noise generated from mechanical system	Pr. 820	Decrease the value 10% by 10% until just before vibration/noise is not produced,			
2		17. 020	and set about 0.8 to 0.9 of that value.			
		Pr. 821	If an overshoot occurs, double the value until an overshoot does not occur, and			
			set about 0.8 to 0.9 of that value.			
		Set the <i>Pr. 820</i> value a little higher.				
3	Slow response	Pr. 820	When a speed rise is slow, increase the value 5% by 5% until just before			
		- 1, 0= 0	vibration/noise is produced, and set about 0.8 to 0.9 of that value.			
	Long return time		821 value a little lower.			
4	(response time)	Decrease the Pr. 821 value by half until just before an overshoot or the unstable phenomenon				
(response time)		does not occur, and set about 0.8 to 0.9 of that value.				
	Overshoot	Set the <i>Pr. 821</i> value a little higher.				
5	or unstable	Double the	e Pr. 821 value until just before an overshoot or the unstable phenomenon does not			
	phenomenon occurs.	occur, and	set about 0.8 to 0.9 of that value.			

#### **REMARKS**

- · When making manual input gain adjustment, set "0" (without easy gain tuning) (initial value) in Pr. 819 Easy gain tuning selection.
- · Pr. 830 Speed control P gain 2 and Pr. 831 Speed control integral time 2 are made valid when the RT terminal is switched on. Make adjustments in the same way as Pr. 820 and Pr. 821.



# (6) P/P1 switchover (X44 signal)


· By turning the P/PI control switching signal (X44) on/off during seed control operation under real sensorless vector control or vector control, you can select whether to add the integral time (I) or not when performing gain adjustment with P gain and integral time.

When the X44 signal is off..... PI control

When the X44 signal is on..... P control

· For the terminal used for X44 signal input, set "44" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function.

# [Function block diagram]

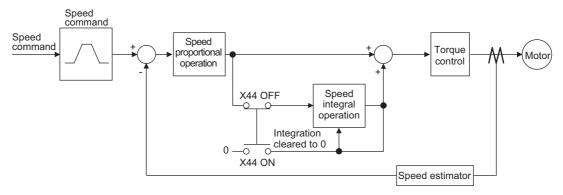

#### CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.

# (7) Troubleshooting (speed)

	Phenomenon	Cause	Countermeasures			
	Phenomenon	<ul><li>(1) The motor wiring is wrong</li><li>(2) Encoder specifications (encoder specification selection switch FR-A7AP) are wrong</li></ul>	(1) Wiring check Select V/F control ( <i>Pr.800</i> = 20) and check the rotation direction of the motor. Check the speed monitor output from output terminal FM. For the FR-V5RU, set "170V" for 3.7kW or less and "160V" for more in <i>Pr. 19 Base frequency voltage</i> , and set "50Hz" in <i>Pr. 3 Base frequency</i> . When the forward rotation signal is input, the motor running in the counterclockwise direction as viewed from the motor shaft is normal. (If it runs in the clockwise direction, the phase sequence of the inverter secondary side wiring is incorrect.)  (2) Check the encoder specifications. Check the encoder specifications selection switch (FR-A7AP) of differential/complimentary			
1	Motor does not rotate. (Vector control)	(3) The encoder wiring is wrong.	<ul> <li>(3) Check that FWD is displayed when running the motor in the counter-clockwise direction from outside during a stop of the inverter with vector control setting. If REV is displayed, the encoder phase sequence is wrong.     Perform the correct wiring or match the <i>Pr.359 Encoder rotation direction</i>.     </li> <li>Pr. 359 Relationship between the motor</li> </ul>			
			setting and encoder			
			0 Encoder Clockwise direction as viewed from A is forward rotation			
			(Initial value)  Encoder Counter clockwise direction as viewed from A is forward rotation			
		<ul><li>(4) The <i>Pr. 369 Number of encoder</i> pulses setting and the number of encoder used are different.</li><li>(5) Encoder power specifications</li></ul>	<ul> <li>(4) The motor will not run if the parameter setting is smaller than the number of encoder pulses used. Set the <i>Pr. 369 Number of encoder pulses</i> correctly.</li> <li>(5) Check the power specifications (5V/12V/15V/24V) of</li> </ul>			
		are wrong. Or, power is not input.	encoder and input the external power supply.			
	Motor does not run at	(1) The speed command from the command device is incorrect. The speed command is compounded with noise.	(1) Check that a correct speed command comes from the command device.  Decrease <i>Pr. 72 PWM frequency selection</i> .			
2	correct speed. (Speed command does not match actual speed)	(2) The speed command value does not match the inverter-recognized value.	(2) Readjust speed command bias/gain <i>Pr. 125, Pr. 126, C2 to C7</i> and <i>C12 to C15</i> .			
		(3) The number of encoder pulses setting is incorrect.	(3) Check the setting of <i>Pr. 369 Number of encoder pulses</i> . (vector control)			
3	Speed does not rise to the speed command.	(1) Insufficient torque. Torque limit is actuated.	(1) -1 Increase the torque limit value.  (Refer to torque limit of speed control on page 99)  (1)-2 Insufficient capacity			
	opeca commana.	(2) Only P (proportional) control is selected.	(2) When the load is heavy, speed deviation will occur under P (proportional) control. Select PI control.			



	Phenomenon	Cause	Countermeasures
		(1) The speed command varies.	<ul> <li>(1) -1 Check that a correct speed command comes from the command device. (Take measures against noises.)</li> <li>(1) -2 Decrease <i>Pr. 72 PWM frequency selection</i>.</li> <li>(1) -3 Increase <i>Pr. 822 Speed setting filter 1. (Refer to page 287)</i></li> </ul>
4	Motor speed is unstable.	(2) Insufficient torque.	(2) Increase the torque limit value. (Refer to torque limit of speed control on page 99)
		(3) The speed control gains do not match the machine. (machine resonance)	<ul> <li>(3) -1 Perform easy gain tuning. (Refer to page 105)</li> <li>(3) -2 Adjust Pr. 820, Pr. 821. (Refer to page 107)</li> <li>(3) -3 Perform speed feed forward/model adaptive speed control.</li> </ul>
5	Motor or machine hunts (vibration/noise is produced).	(1) The speed control gain is high.	<ul> <li>(1) -1 Perform easy gain tuning. (Refer to page 105)</li> <li>(1) -2 Decrease Pr. 820 and increase Pr. 821.</li> <li>(1) -3 Perform speed feed foward control and model adaptive speed control.</li> </ul>
		(2) The torque control gain is high.	(2) Decrease the <i>Pr. 824</i> value. ( <i>Refer to page 127</i> )
6	Acceleration/deceleration time does not match the	(3) The motor wiring is wrong.  (1) Insufficient torque.	(3) Check the wiring  (1) -1 Increase the torque limit value.  (Refer to torque limit of speed control on page 99)  (1) -2 Perform speed feed foward control.
	setting.	(2) Large load inertia.	(2) Set the acceleration/deceleration time that meets the load.
7	Machine operation is unstable	(1) The speed control gains do not match the machine.	<ul> <li>(1) -1 Perform easy gain tuning. (Refer to page 105)</li> <li>(1) -2 Adjust Pr. 820, Pr. 821. (Refer to page 107)</li> <li>(1) -3 Perform speed feed foward control and model adaptive speed control.</li> </ul>
	uristable	(2) Slow response because of improper acceleration/ deceleration time of the inverter.	(2) Change the acceleration/deceleration time to an optimum value.
8	Speed fluctuates at low speed.	(1) Adverse effect of high carrier frequency.	(1) Decrease Pr. 72 PWM frequency selection.
	ороси.	(2) Low speed control gain.	(2) Increase Pr. 820 Speed control P gain 1.

# 4.4.5 Speed feed forward control, model adaptive speed control (Pr. 828, Pr. 877 to Pr. 881) Sensorless Vector

By making parameter setting, select the speed feed forward control or model adaptive speed control.
 The speed feed forward control enhances the trackability of the motor in response to a speed command change.


The model adaptive speed control enables individual adjustment of speed trackability and motor disturbance torque response.

Pr.827
page 141
<b>Pr.830</b> ☐ page 104
Pr.875
⊕ page272
<b>Pr.882</b> page 376

Parameter Number	Name	Initial Value	Setting Range	Description
828	Model speed control gain	60%	0 to 1000%	Set the gain for model speed controller.
	Speed feed forward		0	Normal speed control is exercised.
877	control/model	0	1	Speed feed forward control is exercised.
077	adaptive speed control selection		2	Model adaptive speed control is enabled.
878	Speed feed forward filter	0s	0 to 1s	Set the primary delay filter for the speed feed forward result calculated using the speed command and load inertia ratio.
879	Speed feed forward torque limit		0 to 400%	Limits the maximum value of the speed feed forward torque.
880	Load inertia ratio	7 times	0 to 200 times	Set the load intertia ratio to the motor.
881	Speed feed forward gain	0%	0 to 1000%	Set the feed forward calculation result as a gain.

## **POINT**

When model adaptive speed control is selected, the data obtained from easy gain tuning is used for *Pr. 828 Model speed control gain*. Perform easy gain tuning also (simultaneously). (*Refer to page 105*)

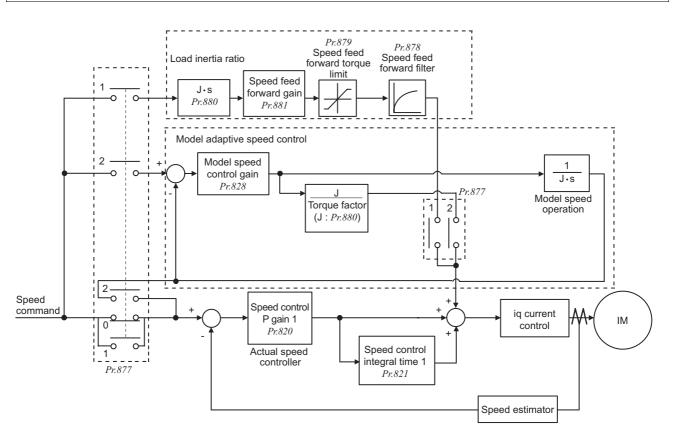



# (1) Speed feed forward control (Pr. 877 = "1")

- · Calculate required torque in responce to the acceleration/deceleration command for the inertia ratio set in *Pr.* 880 and generate torque immediately.
- · When the speed feed forward gain is 100%, the calculation result of the speed feed forward is reflected as-is.
- · If the speed command changes suddenly, large torque is generated due to the speed feed forward calculation. The maximum value of the speed feed forward is limited using *Pr.* 879 .
- · Using Pr.878, the speed feed forward result can be dulled by the primary delay filter.

# (2) Model adaptive speed control (Pr. 877 = "2")

- The motor's model speed is calculated to feed back the model side speed controller. This model speed is also used as the actual speed controller command.
- The inertia ratio in *Pr.* 880 is used for calculation of the torque current command value given by the model side speed controller.
- · The torque current command value of the model side speed controller is added to the output of the actual speed controller, and the result is used as the iq current control input.
  - Pr.~828 is used for model side speed control (P control), and the first gain in Pr.~820 is used for the actual speed controller. The model adaptive speed control is valid for the first motor only.
- · When Pr. 877 = 2, switching to the second motor handles the second motor as Pr. 877 = 0.

#### = CAUTION

The adequate gain value for the model and actual loop parts are set according to the responce setting of easy gain tuning under model adaptive speed control. To increase the responce level, the *Pr. 818 Easy gain tuning response level setting* needs to be changed (increased).

## (3) Combination of easy gain tuning

The following table indicates the relationships between the speed feed forward/model adaptive speed control and easy gain tuning function.

	Easy Gain Tuning Selection (Pr. 819) Setting					
	0	1	2			
Load inertia ratio (Pr. 880)	Manual input	Inertia ratio estimation value found by easy gain tuning is displayed.  Manual input enabled only during a stop.	Manual input			
Speed control P gain 1 (Pr. 820)	Manual input	Tuning results are displayed. Write disabled	Tuning results are displayed. Write disabled			
Speed control integral time 1 ( <i>Pr. 821</i> )	Manual input	Tuning results are displayed. Write disabled	Tuning results are displayed. Write disabled			
Model speed control gain (Pr. 828)	Manual input	Tuning results are displayed. Write disabled	Tuning results are displayed. Write disabled			
Speed feed forward gain (Pr. 881)	Manual input	Manual input	Manual input			

## ♦ Parameters referred to ♦

Pr. 820 Speed control P gain 1, Pr. 830 Speed control P gain 2 F Refer to page 104

Pr. 821 Speed control integral time 1, Pr. 831 Speed control integral time 2 Refer to page 104


#### 

This function accelerates the rise of the torque at a start. Adjust the torque at a motor start using the contact signals or analog signals .

Parameter Number	Name	Initial Value	Setting Range	Description
			0	Set the torque bias amount with the contact signal (X42, X43) using <i>Pr.841 to Pr.843</i> .
			1	Set the terminal 1-based torque bias amount as desired in $C16$ to $C19$ . (in the case a cage goes up when a motor runs reversely)
840	Torque bias selection	9999	2	Set the terminal 1-based torque bias amount as desired in <i>C16 to C19</i> . (in the case a cage goes up when a motor runs forward)
			3	The terminal 1-based torque bias amount can be set automatically in <i>C16 to C19</i> , <i>Pr.846</i> according to the load.
			9999	Without torque bias, rated torque 100%
841	Torque bias 1		600 to 999%	Negative torque bias amount (-400% to -1%)
842	Torque bias 2	9999	1000 to 1400%	Positive torque bias amount (0% to 400%)
843	Torque bias 3		9999	Without torque bias setting
844	Torque bias filter	9999	0 to 5s	Time until torque rises.
044	Torque bias filler	9999	9999	Same operation as when 0s is set.
845	Torque bias operation time	9999	0 to 5s	Time for maintaining torque equivalent to the torque bias amount.
	une		9999	Same operation as when 0s is set.
846	Torque bias balance	9999	0 to 10V	Set the voltage under balanced load.
U-10	compensation	3333	9999	Same operation as when 0V is set.
847	Fall-time torque bias	9999	0 to 400%	Set the bias value of the torque command.
071	terminal 1 bias	3333	9999	Same as at a rise time (C16, C17(Pr.919)).
848	Fall-time torque bias	9999	0 to 400%	Set the gain value of the torque command.
0.0	terminal 1 gain	0000	9999	Same as at a rise time (C18, C19(Pr.920)).

The above parameters can be set when the FR-A7AP (option) is mounted.

# (1) Block diagram

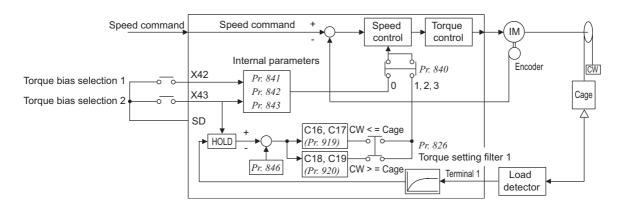



# (2) Setting torque bias amount with the contact input (Pr.840 = "0")

- · Select the torque bias amount in the table below according to the combination of contact signals.
- Set "42" in *Pr.178 to Pr.189 (input terminal function selection)* for the terminal used for X42 signal input and set "43" for the terminal used for X43 signal input to assign functions.

Torque Bias Selection 1 (X42 Terminal)	Torque Bias Selection 2 (X43 Terminal)	Torque bias amount
OFF	OFF	0%
ON	OFF	Pr.841 -400% to +400% (setting value : 600 to 1400%)
OFF	ON	Pr.842 -400% to +400% (setting value : 600 to 1400%)
ON	ON	Pr.843 -400% to +400% (setting value : 600 to 1400%)


Example) when Pr.841 = 1025, -25% when Pr.842 = 975, -25% when Pr.843 = 925, -75%

#### — CAUTION

Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.


# (3) Setting torque bias amount with terminal 1 (Pr.840 = "1, 2")

- · Calculate torque bias from the load input from terminal 1 and provide torque bias.
- · When torque command is set from terminal 1, set "6" in Pr.868 Terminal 1 function assignment .

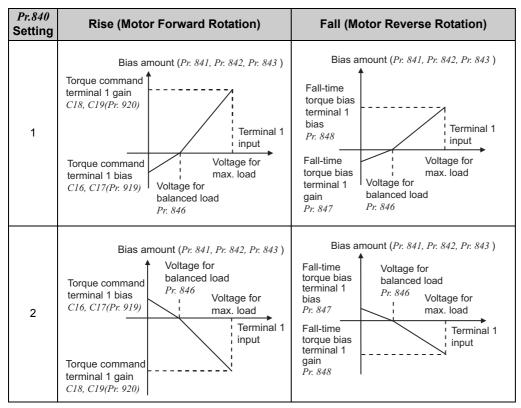

# (4) Setting torque bias amount with terminal 1 ( $Pr.84\theta$ ="3")


- · C16 terminal 1 bias command (torque/magnetic flux), C17 terminal 1 bias (torque/magnetic flux), C18 terminal 1 gain command (torque/magnetic flux), C19 terminal 1 gain (torque/magnetic flux), and Pr.846 Torque bias balance compensation can be set automatically according to the load.
- · When torque command is set from terminal 1, set "6" in Pr.868 Terminal 1 function assignment.
- · Setting C16, C17 (Pr.919), C18, C19 (Pr.920)

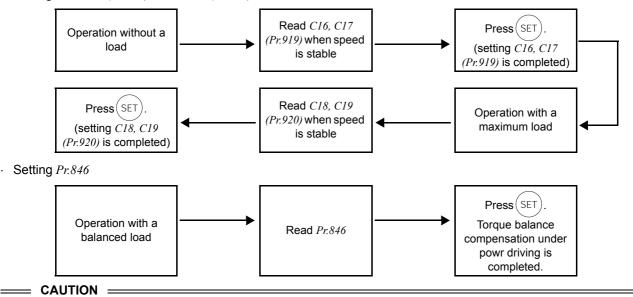

When starting torque bias operation after completion of automatic setting, set "1 or 2" in Pr. 840.

# (5) Torque bias operation

- · When a value other than 9999 is set in *Pr.844 Torque bias filter*, you can slow the rise of torque. At this time, the torque rises according to the time constant of the primary delay filter.
- · Set the time for output torque be maintained with the torque bias command value alone in Pr.845 Torque bias operation time.

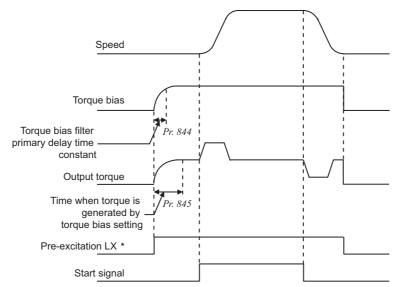

\* When pre-excitation is not made, the torque bias functions simultaneously with the start signal.

#### CAUTION

- · When torque bias is made valid and "6" is set in *Pr.868*, terminal 1 serves as torque command not as frequency setting auxiliary. When Override compensation is set by *Pr. 73* and terminal 1 acts as main speed, no main speed (main speed = 0Hz) is slected.
- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.

#### Reference parameters

- · Pr. 73 Analog input selection Te Refer to page 282.
- · Pr. 178 to Pr. 189 (input terminal function selection) \*\* Refer to page 227.
- · C16 to C19 (torque setting voltage (current) bias and gain) Refer to page 293.



# 4.4.7 Prevent the motor from overrunning (Pr. 285, Pr. 853, Pr. 873) Vector


This function prevents the motor from overrunning when the load torque is too large and incorrect number of encoder is set.

Parameter Number	Name	Initial Value	Setting Range	Description
	Excessive speed		9999	Without speed deviation excessive
285	deviation detection frequency *1	9999	0 to 30Hz	If the difference (absolute value) between the speed command value and actual speed
853 *2	Speed deviation time	1.0s	0 to 100s	during speed control under vector control exceeds the <i>Pr.285 Excessive speed deviation detection frequency</i> for more than the time set in <i>Pr.853 Speed deviation time</i> , speed deviation excessive occurs and inverter error (E. OSD) appears, resulting in a stop.
873 *2	Speed limit	20Hz	0 to 120Hz	Frequency is limited at the set frequency + <i>Pr</i> :873.

<sup>\*1</sup> Acts as over speed detection frequency under encoder feed back operation. (Refer to page 213)

## (1) Speed deviation excessive (Pr.285, Pr.853)


When the deviation between the set frequency and actual speed is large, e.g. too large load torque, this function can cause the inverter to provide a speed deviation excessive alarm (E.OSD) and come to an alarm stop.

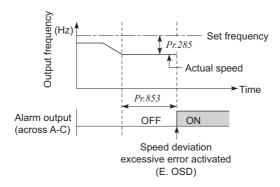

## (2) Speed limit (*Pr.873*)

This function prevents the motor from overrunning when the setting of number of encoder pulses and the actual number differ.

When the setting of number of encoder pulses is smaller than the actual number, the motor may increase its speed. To prevent this, restrict the output frequency with frequency (obtained by adding the set frequency and *Pr.873*).

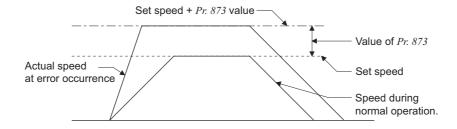

#### **CAUTION**

- · If automatic restart after instantaneous power failure  $(Pr.57 \neq 9999)$  is selected when the setting of number of encoder pulses is smaller than the actual number, the output speed is limited with the synchronous speed oftained by adding the maximum setting (Pr.1) and Pr.873 setting.
- When speed limit function is activated due to regenerative torque limit, output torque may suddenly decrease. In addition, output phase error (E.LF) may occur when speed limit function is activated during during pre-excitation.
  When the setting of number of encoder pulses are correct, it is recommended to set a mamimum value (120Hz) in Pr.873.

#### Reference parameters

Pr.285 Overspeed detection frequency Refer to page 213.

<sup>\*2</sup> This parameter can be set when the FR-A7AP (option) is mounted.

# 4.4.8 Notch filter (Pr. 862, Pr. 863) Sensorless Vector

You can reduce the response level of speed control in the resonance frequency band of the mechanical system to avoid mechanical resonance.



Parameter Number	Name	Initial Value	Setting Range	Description
862	Notch filter time constant	0	0 to 60	Refer to the following table
863	Notch filter depth	0	0 to 3	0 (deep) → (sharrow)

# (1) Pr. 862 Notch filter time constant

· If you do not know the machine resonance frequency, decrease notch frequency gradually from the highest value. The point at which the smallest vibration is generated is the notch frequency setting.

Setting	0	1	2	3	4	5	6	7	8	9
Frequency	Invalid	1000	500	333.3	250	200	166.7	142.9	125	111.1
Setting	10	11	12	13	14	15	16	17	18	19
Frequency	100	90.9	83.3	76.9	71.4	66.7	62.5	58.8	55.6	52.6
Setting	20	21	22	23	24	25	26	27	28	29
Frequency	50	47.6	45.5	43.5	41.7	40	38.5	37	35.7	34.5
Setting	30	31	32	33	34	35	36	37	38	39
Frequency	33.3	32.3	31.3	30.3	29.4	28.6	27.8	27.0	26.3	25.6
Setting	40	41	42	43	44	45	46	47	48	49
Frequency	25.0	24.4	23.8	23.3	22.7	22.2	21.7	21.3	20.8	20.4
Setting	50	51	52	53	54	55	56	57	58	59
Frequency	20.0	19.6	19.2	18.9	18.5	18.2	17.9	17.5	17.2	16.9
Setting	60									
Frequency	16.7									

# (2) Pr. 863 Notch filter depth

• The notch filter with deeper depth has an effect on minimizing mechanical resonance. However, large vibration may be generated adversely due to substantial phase delay.

Setting	3	2	1	0
Depth	Sharrow	$\rightarrow$	<b>←</b>	Deep
Gain	-4dB	-8dB	-14dB	-40dB


# 4.5 Torque control by real sensorless vector control

Purpose	Parameter	that must be Set	Refer to Page
Selection of torque command source and setting of torque command value	Torque command	Pr. 803 to Pr. 806	122
Prevent the motor overspeed	Speed limit	Pr. 807 to Pr. 809	124
Improve torque control accuracy	Gain adjustment for torque control	Pr. 824, Pr. 825, Pr. 834, Pr. 835	127
Stabilize the torque detection signal	Torque detection filter	Pr. 827, Pr. 837	141


# 4.5.1 Torque control

- Torque control is exercised to develop torque as set in the torque command.
- The motor speed becomes constant when the motor output torque and load torque are balanced. For torque control, therefore, the speed is determined by the load.
- For torque control, the motor gains speed as the motor output torque becomes greater than the motor load. Here, set the speed limit value so that the motor speed does not increase too high. (Torque control is disabled under speed limit since speed control is exercised.)
- When speed limit is not set, the speed limit value setting is regarded as 0Hz to disable torque control.

## (1) Operation transition

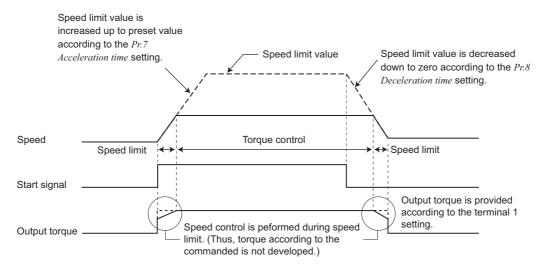

· When "0" is set in *Pr.* 7 or *Pr.* 8 , speed control is exercised upon powering off a start signal and the output torque is limited at the torque limit value.

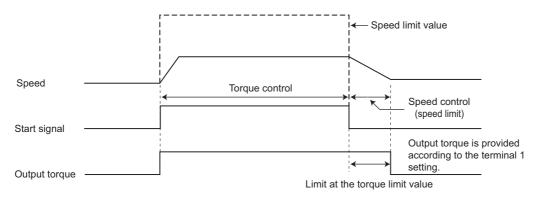


Item	Description				
	External operation	STF, STR signal			
Start signal	PU operation	(FWD) and (REV) of FR-DU07, FR-PU07 or FR-PU04			
Torque command	Select the input method of torque command and input the torque command.				
Speed limit	Select the input method of speed limit and input the speed limit value.				

# (2) Operation example (when Pr. 804 = "0")

Torque control is enabled if the actual speed is less than the speed limit value.

When the actual speed reaches or exceeds the speed limit value, speed limit operation starts, torque control is stopped, and speed control (proportional control) starts.

The following shows the operations in response to the analog input command from terminal 1.

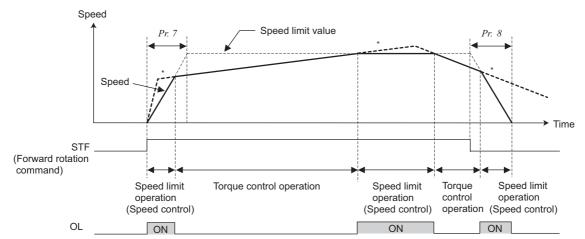

\*When the speed limit activates, torque according to the commanded is not developed.

- 1) When STF signal is turned on, the speed limit value is increased according to the time set in Pr. 7.
- 2) Speed control operation is performed if the actual speed rises to or above the speed limit value.
- 3) When the STF signal is turned off, the speed limit value is decreased according to the time set in Pr. 8.
- 4) For torque control, the actual speed becomes constant when the torque command and load torque are balanced.
- 5) The motor torque developing direction is determined by the combination of the torque command input polarity and start signal as indicated in the following table.

Torque Command	Torque Developing Direction	
Polarity	STF signal ON	STR signal ON
Positive torque command	Forward rotation direction (forward rotation driving/reverse rotation regeneration)	Reverse rotation direction (forward rotation regeneration/reverse rotation driving)
Negative torque command	Reverse rotation direction (forward rotation regeneration/reverse rotation driving)	Forward rotation direction (forward rotation driving/reverse rotation regeneration)

#### **REMARKS**


- · When speed limit operation starts, speed control is exercised to enable internal torque limit (*Pr. 22 torque limit level*) (initial value). Speed control may not be returned to torque control in this case.

  Torque limit be set to external torque limit (terminal 1, 4)
- · Undervoltage avoidance function (*Pr. 261*="11, 12") of power-failure deceleration stop function is made invalid under torque control. When *Pr. 261*="11 (12)", the inverter operates in the same manner as when "1 (2)" is set in *Pr. 261*.
- · Set linear acceleration/deceleration (*Pr. 29=*"0 (initial value)") when torque control is exercised. When acceleration/deceleration patterns other than the linear acceleration/deceleration are selected, the protective function of the inverter may function. (*Refer to page 175*)


#### CAUTION

 Performing pre-excitation (LX signal and X13 signal) under torque control (real sensorless vector control or vector control) may start the motor running at a low speed even when the start command (STF or STR) is not input. The motor may run also at a low speed when the speed limit value = 0 with a start command input. Perform pre-excitation after making sure that there will be no problem in safety if the motor runs.

# 4.5.2 Setting procedure of real sensorless vector control (torque control) Sensorless

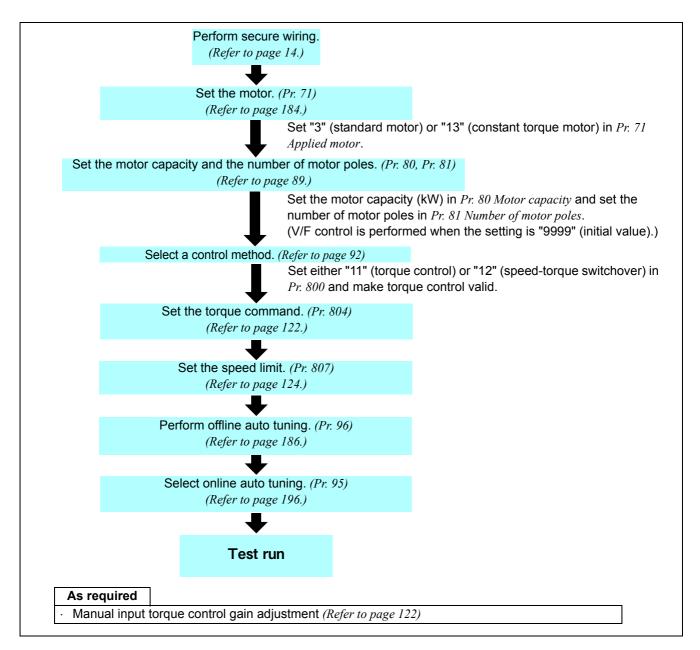

#### 

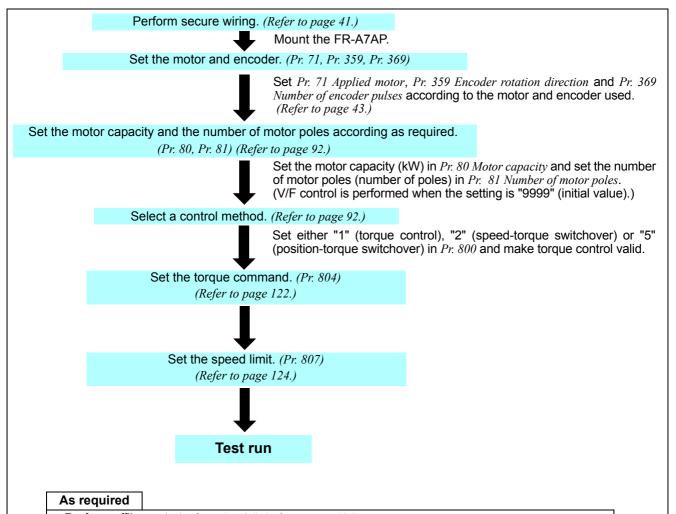

- · Perform offline auto tuning. (Pr. 96) (refer to page 186).
- · Select online auto tuning. (Pr. 95) (refer to page 196).
- · Manual input torque control gain adjustment (refer to page 122)

# 4.5.4 Torque command (Pr. 803 to Pr. 806) Sensorless Vector

Pr.800


page 92

Pr.807


page 124

Torque command source for torque operation can be selected.

Parameter Number	Name	Initial Value	Setting Range		Description	
222	Constant power range	_	0	Constant motor output limit	Select the torque limit in the constant	
803	torque characteristic selection	0	1	Constant torque limit	power region by torque limit setting.	
			0	Torque command by termina (Refer to page 293)	al1 analog input	
			1	Torque command by parame (-400% to 400%)	eter setting (Pr. 805 or Pr. 806)	
	804 Torque command source selection	0	3	Torque command by parameter setting ( <i>Pr.</i> 805 or <i>Pr.</i> 806) (-400% to 400%)	Torque command by CC-Link communication (FR-A7NC) Setting from the remote resister can be made. (-400% to 400%)	
804			4	12 bit/16 bit digital input (FR-A7AX)		
			5	Torque command by parameter setting ( <i>Pr.</i> 805 or <i>Pr.</i> 806)	Torque command by CC-Link communication (FR-A7NC) Setting from the remote resister can be made. (-327.68% to 327.67%)	
			6	(-400% to 400%)	Torque command by CC-Link communication (FR-A7NC) (-327.68% to 327.67%)	
805	Torque command value (RAM)	1000%	600 to 1400%	Writes the torque command value to the RAM. On the assumption that 1000% is 0%, the torque command is set by an offset from 1000%.		
806	Torque command value (RAM,EEPROM)	1000%	600 to 1400%	Writes the torque command value to the RAM and EEPROM. On the assumption that 1000% is 0%, the torque command is set by an offset from 1000%.		

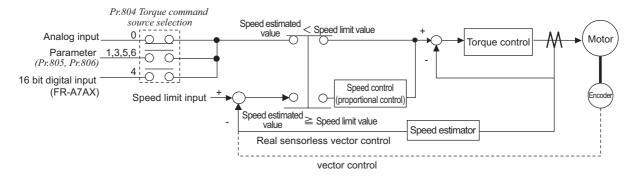


# (1) Torque command (Pr. 804 = "0" (initial value)) by analog input (terminal 1)

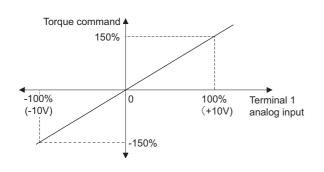

- Torque command is given by voltage (current) input to terminal 1.
- · When torque command is input from terminal 1, set "4 or 3" in *Pr. 868 Terminal 1 function assignment*.
- Torque command by analog input can be calibrated using calibration parameter C16 (Pr. 919) to C19 (Pr. 920) . (Refer to page 293)

# (2) Torque command using parameters (Pr. 804 = "1")

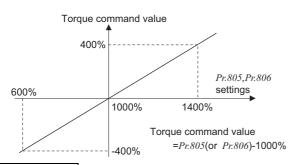

- Torque command value can be set by setting Pr. 805 Torque command value (RAM) or Pr. 806 Torque command value (RAM, EEPROM).
- For Pr. 805 or Pr. 806, the torque command is set by an offset from 1000% on the assumption that 1000% is 0%. The relationship between the Pr. 805 or Pr. 806 setting and actual torque command value at this time is shown on the left.
- When changing the torque command frequently, write to *Pr.* 805. Performing frequent parameter write to *Pr.* 806 will shorten the life of the EEPROM.

#### **REMARKS**

 When torque command is set in Pr. 805 (RAM), powering off the inverter will erase the changed parameter values. Therefore, the parameter value available when power is switched on again is the value set in Pr. 806 (EEPROM).

#### CAUTION

· When giving a torque command by parameter setting, set the speed limit value to an appropriate value to prevent overspeed. (Refer to page 124.)

# (3) Torque command by CC-Link communication (Pr. 804 = "3, 5, 6")

- · Writing a value to Pr. 805 or Pr. 806 using the FR-A7NC (communication option) sets the torque command value.
- When "3 or 5" is set in *Pr.804*, torque command can be set in remote resister RWw1 or RWwc using the FR-A7NC (communication option).
- By setting "5, 6" in *Pr.804*, the range of torque command setting from FR-A7NC (communication option) is set from -327.68% to 327.67% (0.01% increments).

Pr.804 Setting	Torque Command Source	Setting Range	Increments	
1	Torque command by parameter setting (Pr. 805 or Pr. 806)	600 to 1400 (-400% to 400%)	1%	
	Torque command by parameter setting (Pr. 805 or Pr. 806)			
3	Torque command from remote resister (RWw1 or RWwc)	600 to 1400 (-400% to 400%)	1%	
	with using CC-Link communication (FR-A7NC)			
	Torque command by parameter setting (Pr. 805 or Pr. 806)	600 to 1400 (-400% to 400%)	1%	
5	Torque command from remote resister (RWw1 or RWwc)	-32768 to 32767 (two's complement)	0.01%	
	with using CC-Link communication (FR-A7NC)	(-327.68% to 327.67%)	0.0176	
	Torque command by parameter setting (Pr. 805 or Pr. 806)	600 to 1400 (-400% to 400%)	1%	
6	without using CC-Link communication (FR-A7NC)	000 to 1400 (-400% to 400%)	I 70	
	Torque command by parameter setting (Pr. 805 or Pr. 806)	-32768 to 32767 (two's complement)	0.01%	
	with using CC-Link communication (FR-A7NC)	(-327.68% to 327.67%)	0.01%	

#### **REMARKS**

For details of the setting with the FR-A7AX, refer to the FR-A7AX instruction manual.


#### (4) Torque command by 16 bit digital input (Pr. 804 = 4)

· Give a torque command by 16 bit or 12 bit digital input using the FR-A7AX (plug-in option).

#### REMARKS

For details of the setting with the FR-A7AX, refer to the FR-A7AX instruction manual.

# (5) Change the torque characteristics in the constant power (Pr. 803)

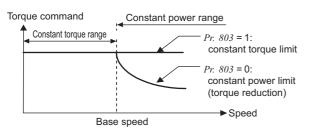

· Whether the torque command in the constant power range is set to constant torque limit (setting value is "1") or constant power limit (setting value is "0", initial value) in the torque command can be set using *Pr. 803 Constant power range torque characteristic selection*.

#### ◆Parameters referred to ◆

Pr. 868 Terminal 1 function assignment Refer to page 99.
Calibration parameter C16 (Pr. 919) to C19 (Pr. 920) (terminal 1 bias, gain torque) Refer to page 293


# 4.5.5 Speed limit (Pr. 807 to Pr. 809) Sensorless Vector




Set the speed limit value to prevent overspeed of the motor in case the load torque becomes less than the torque command value, etc. during torque control operation.

Parameter Number	Name	Initial Value	Setting Range	Description
	807 Speed limit selection		0	Use the speed command value during speed control as speed limit.
807		0	1	According to <i>Pr.</i> 808 and <i>Pr.</i> 809 , set the speed limit in forward and reverse rotation directions individually.
507			2	Forward/reverse rotation speed limit The analog voltage of the terminal 1 input is used to make speed limit. The speed limit of the forward rotation and reverse rotation is switched according to the polarity
808	Forward rotation speed limit	60Hz	0 to120Hz	Set the speed limit for the forward rotation direction.
809	Reverse rotation speed	9999	0 to120Hz	Set the speed limit of the reverse rotation side.
003	limit	9999	9999	As set in <i>Pr.</i> 808.

# <Control block diagram>

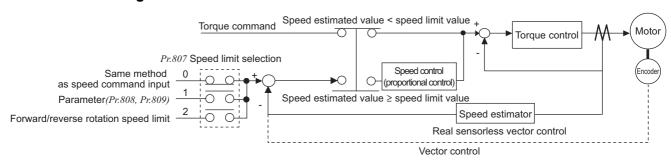

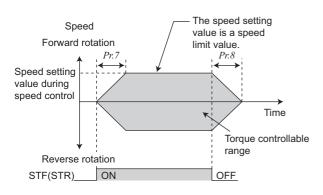

# (1) Use the speed command for speed control (Pr. 807 = "0" initial value)

- Set the speed limit in the same method as speed setting for speed control (speed setting by the PU (FR-DU07/ FR-PU07/FR-PU04), multi-speed setting, options, etc.)
- According to the acceleration time set in *Pr. 7 Acceleration time*, the limit level is increased from 0Hz upon turning on of the start signal, and when the start signal turns off, the speed limit level is decreased from the then speed limit level to the DC injection brake operation speed in *Pr. 10* to a stop in accordance with the deceleration time set in *Pr. 8 Deceleration time*.

#### **REMARKS**

- · When the above speed limit command is greater than the *Pr. 1 Maximum frequency* value, the speed limit value is the *Pr. 1 Maximum frequency* value, and when the speed limit command is less than the *Pr. 2 Minimum frequency* value, the speed limit value is the *Pr. 2 Minimum frequency* value. Similarly when the speed limit command is smaller than *Pr. 13 Starting frequency*, the speed limit value is 0Hz.
- · When speed limit is to be made using analog input, perform calibration of the analog input terminal 1, 2 and 4. (Refer to page 293.)


#### CAUTION

When speed limit is to be made using the analog command (terminal 1,2,4), turn off the external signals (RH, RM, RL). If any of external signals (RH, RM, RL) is on, multi-speed limits are made valid.

# (2) Set the forward rotation and reverse rotation individually (Pr. 807 = "1")

Set the speed limit during foward rotation using *Pr. 808 Forward rotation speed limit* and the speed limit during reverse rotation using *Pr. 809 Reverse rotation speed limit*.

The speed during forward and reverse rotation is limited at the setting value of Pr.~808 when "9999" (initial value) is set in Pr.~809.

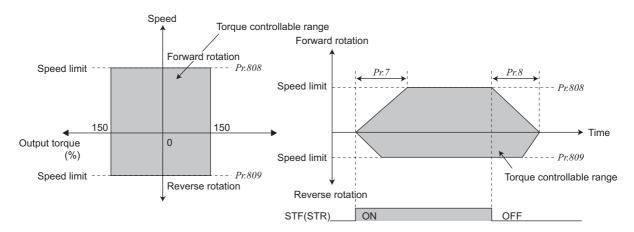


# (3) Forward rotation/reverse rotation speed limit (Pr. 807 = "2")

- · When making a speed limit using analog input from terminal 1, the speed limit of the forward and reverse rotation can be switched according to the polarity of voltage.
- · Forward/reverse rotation speed limit is made valid when Pr. 868 Terminal 1 function assignment ="5".
- · For 0 to 10V input, set the forward rotation speed limit. The reverse rotation speed limit at this time is the value of *Pr.1 Maximum frequency*.
- · For -10 to 0V input, set the reverse rotation speed limit. The forward rotation speed limit at this time is the value of *Pr. 1 Maximum frequency* .
- · The maximum speed of both the forward and reverse rotations is Pr. 1 Maximum frequency.

#### ●When terminal 1 input is "-10 to 0V"

●When terminal 1 input is "0 to 10V"

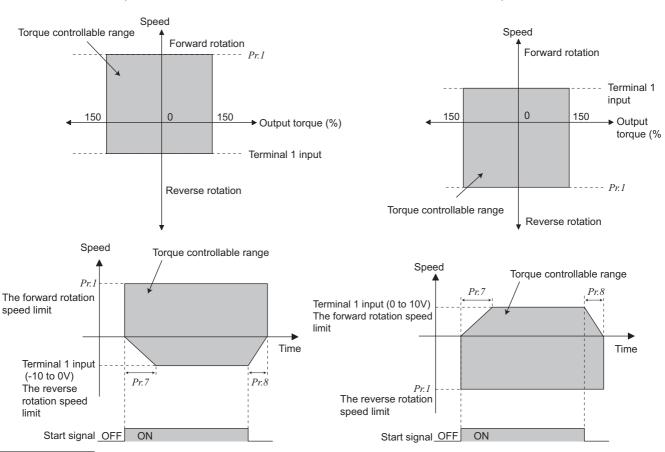

## REMARKS

When making speed limit from terminal 1, make calibration of terminal 1. (Refer to page 293.)

#### CAUTION

When the actual speed reaches or exceeds the speed limit value, torque control is switched to speed control to prevent overspeed.

5½ (SL) appears on the operation panel during speed limit operation and the OL signal is output.

## ♦ Parameters referred to ♦

Pr. 1 Maximum frequency, Pr. 2 Minimum frequency Refer to page 156

Pr. 7 Acceleration time, Pr. 8 Deceleration time Refer to page 172

Pr. 13 Starting frequency Refer to page 174

Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239 (Multi-speed operation) Refer to page 165

Pr. 868 Terminal 1 function assignment Refer to page 281

Pr. 125, Pr. 126, C2 to C7, C12 to C15 (frequency setting voltage (current) bias/gain) Refer to page 288

Set the current loop integral compensation time when

Without torque control integral time 2 function

the RT signal is on.

# 4.5.6 Gain adjustment of torque control (Pr. 824, Pr. 825, Pr. 834, Pr. 835) Sensorless - Vector-

Although stable operation is possible with the initial value, make adjustment when any of such phenomena as unusual motor and machine vibration/noise and overcurrent has occurred.

unusuai i	motor and machine vibration	n/noise and ov	ercurrent nas o	ccurrea.	Pr.820
arameter Name		Initial Value	Setting Range	Description	Pr.83
824	Torque control P gain 1	100%	0 to 200%	Set the current loop proportional gain. 100% is equivalent to 2000rad/s.	Pr.83
825	Torque control integral time 1	5ms	0 to 500ms	Set the current loop integral compensation time.	
834	Torque control P gain 2	9999	0 to 200%	Set the current loop proportional gain when the RT signal is on.	
	_		9999	Without torque control P gain 2 function	1

# (1) Adjustment of current loop proportional (P) gain

 $\cdot\,$  For general adjustment, make setting within the range 50 to 200% as a guideline.

9999

· Set the proportional gain for torque control.

Torque control integral

time 2

· Increasing the value improves trackability in response to a current command change and reduces current variation with disturbance. However, a too large gain will cause instability, generating harmonic torque pulsation.

0 to500ms

9999

# (2) Adjustment of current control integral time

- · Set the integral time of current control during torque control.
- · A small value enhances the torque response level, but a too small value will cause current fluctuation.
- Decreasing the value shortens the time taken to return to the original torque if current variation with disturbance occurs.

## (3) Use multiple gains

- · When you want to change the gain according to applications, switch multiple motors with one inverter, etc., use *Torque control P gain 2* and *Torque control integral time 2*.
- · Pr. 834 Torque control P gain 2 and Pr. 835 Torque control integral time 2 are valid when the RT signal is on.

## **REMARKS**

835

- · The RT signal acts as the second function selection signal and makes the other second functions valid. (Refer to page 231.)
- The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.



Make adjustment when any of such phenomena as unusual motor and machine vibration/noise/current and overcurrent has occurred.

- 1)Check the conditions and simultaneously change the Pr. 824 value.
- 2)If you cannot make proper adjustment, change the Pr. 825 value and repeat step (1).

	Adjustment Method						
	Set <i>Pr.</i> 824 a little lower and <i>Pr.</i> 825 a little higher. First lower <i>Pr.</i> 824 and check the motor for unusual vibration/noise and overcurrent. If the problem still persists, increase <i>Pr.</i> 825.						
Pr. 824	Decrease the value 10% by 10% until just before unusual noise and current are improved, and set about 0.8 to 0.9 of that value.  Note that a too low value will produce current ripples, causing the motor to generate sound synchronizing the cycle of current ripples.						
Pr. 825	Double the current value until just before an unusual noise and current does not occur, and set about 0.8 to 0.9 of that value.  Note that taking a too long time will produce current ripples, causing the motor to generate sound synchronizing the cycle of current ripples.						

# (5) Troubleshooting (Torque)

	Phenomenon	Cause	Countermeasures
	Torque control is not exercised normally.	(1) The phase sequence of the motor or encoder wiring is wrong.	(1) Check the wiring. (Refer to page 14)
		(2) The control mode selection, <i>Pr.</i> 800, setting is improper.	(2) Check the Pr. 800 setting. (Refer to page 92)
		(3) The speed limit value is not input.	(3) Set the speed limit value. (If the speed limit value is not input, the motor will not rotate since the speed limit value is regarded as 0Hz.)
1		(4) The torque command varies.	<ul> <li>(4)-1 Check that the command device gives a correct torque command.</li> <li>(4)-2 Decrease <i>Pr. 72 PWM frequency selection</i> .</li> <li>(4)-3 Increase <i>Pr. 826 Torque setting filter 1</i></li> </ul>
		(5) The torque command does not match the inverter-recognized value.	(5) Recalibrate C16 Terminal 1 bias command (torque/magnetic flux), C17 Terminal 1 bias (torque/magnetic flux), C18 Terminal 1 gain command (torque/magnetic flux), C19 Terminal 1 gain (torque/magnetic flux). (Refer to page 293)
		(6) Torque variation due to the change in the motor temperature.	(6) Select magnetic flux observer by setting <i>Pr. 95 Online</i> auto tuning selection. (Refer to page 196)
2	When the torque command is small, the motor rotates in the direction opposite to the start signal.	The offset calibration of the torque command does not match.	Recalibrate C16 Terminal 1 bias command (torque/magnetic flux) and C17 Terminal 1 bias (torque/magnetic flux). (Refer to page 293)
3	Normal torque control cannot be exercised during acceleration/ deceleration. The motor vibrates.	The speed limit is activated. (When $Pr.~807$ = "0, 2", the speed limit may be activated since the speed limit value changes with the setting of the acceleration/ deceleration time in $Pr.~7$ and $Pr.~8$ .)	Reduce the acceleration/deceleration time. Or, set the acceleration/deceleration time to "0". (The speed limit during acceleration/deceleration depends on the speed limit during the constant speed.)
4	Output torque is not linear in response to the torque command.	Insufficient torque.	Return the excitation ratio in <i>Pr.</i> 854 to initial value.

# ♦ Parameters referred to ♦

Pr. 72 PWM frequency selection Refer to page 279

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

Pr. 800 Control method selection Refer to page 92

Pr. 807 Speed limit selection Refer to page 124

C16 to C19 (torque setting voltage (current) bias and gain) Refer to page 293


# 4.6 Position control by vector control

Purpose	Parameter	Refer to Page	
Conditional position control by parameter setting	Position command by parameter	Pr. 419, Pr. 464 to Pr. 494	131
Position control by pulse train input of the inverter	Position command by conditional pulse train	Pr. 419, Pr. 428 to Pr. 430	134
Adjust the gear ratio of motor and machine	Setting the electronic gear	Pr. 420, Pr. 421, Pr. 424	136
Setting of positioning adjustment parameter	In-position width Excessive level error	Pr. 426, Pr. 427	137
Improve position control accuracy	Gain adjustment of position control	Pr. 422, Pr. 423, Pr. 425	138

## 4.6.1 Position control Vector


- In the position control, the speed command is calculated so that the difference between command pulse (or parameter setting) and the number of feedback pulses from the encoder is zero to run the motor.
- This inverter can perform conditional position feed by contact input and position control by inverter conditional pulse input.

# (1) Setting procedure

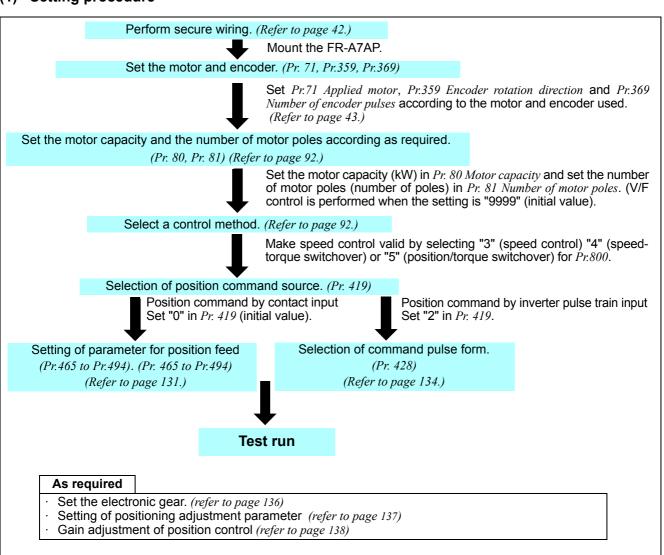




## (2) Control block diagram

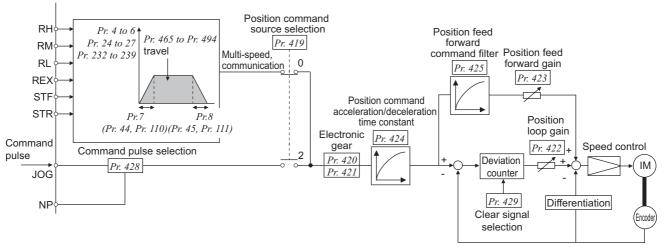

## (3) Example of operation

The speed command given to rotate the motor is calculated to zero the difference between the number of internal command pulse train pulses (when *Pr. 419* = 0, the number of pulses set by parameter (*Pr. 465 to Pr. 494*) is changed to the command pulses in the inverter) and the number of pulses fed back from the motor end encoder.

- 1) When a pulse train is input, pulses are accumulated in the deviation counter and these droop pulses act as position control pulses to give the speed command.
- 2)As soon as the motor starts running under the speed command of the inverter, the encoder generates feed back pulses and the droop of the deviation counter is counted down. The deviation counter maintains a given droop pulse value to keep the motor running.
- 3) When the command pulse input stops, the droop pulses of the deviation counter decrease, reducing the speed. The motor stops when there are no droop pulses.
- 4) When the number of droop pulses has fallen below the value set in *Pr. 426 In-position width*, it is regarded as completion of positioning and the in-position signal (Y36) turns on.

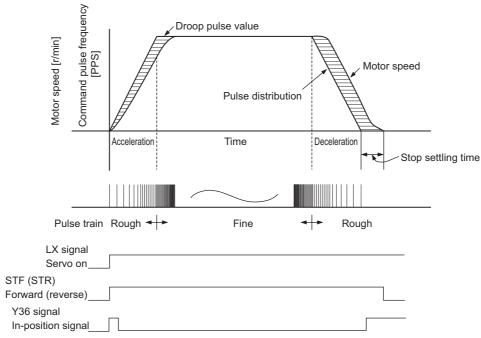

- · For conditional position control function by contact input, the STF and STR terminals provide the forward (reverse) command signal. The motor can run only in the direction where the forward (reverse) signal is on. Turning the STF signal off does not run the motor forward and turning the STR signal off does not run the motor reverse.
- The pulse train is rough during acceleration and coarse at the maximum speed. During deceleration the pulse train is rough and at last there are no pulses. The motor stops shortly after the command pulses stop.

  This time lag is necessary for maintaining the stop accuracy and called stop settling time.

#### **REMARKS**

- For the servo on signal (SL), set "23" in Pr. 178 to Pr. 189 (input terminal function selection) to assign the function.
- · For the in-position signal (Y36), set "36" in Pr. 190 to Pr. 196 (output terminal function selection) to assign the function.



#### CAUTION

Changing the terminal function using any of *Pr. 178 to Pr. 189, 190 to Pr. 196* may affect the other functions. Make setting after confirming the function of each terminal.

## ◆Parameters referred to ◆

Pr. 178 to Pr. 189 (input terminal function selection) \*\* Refer to page 227 Pr. 190 to Pr. 196 (output terminal function selection) \*\* Refer to page 234

# 4.6.2 Conditional position feed function by contact input (Pr. 419, Pr. 464 to Pr. 494)

Inputting the number of pulses (positions) in the parameters and setting multi-speed and forward (reverse) commands enable position control. The motor does not return to the home position with this conditional position feed function .

Parameter Number	Name	Initial Value	Setting Range	Description				
440	Position command source	0	0	Conditional position control function by contact input. (position command by parameter settings)  Conditional pulse train position command by inverter pulse train input				
419	selection	0	2					
464	Digital position control sudden stop deceleration time	0s	0 to 360.0s	Set the time until the inverter stops when the forward rotation (reverse rotation) command is turned off with the position feed forward function.				
						Metho ON: C		Position feed frequency
465	First position feed amount lower 4 digits	0	0 to 9999	X	0			High speed (Pr. 4)
466	First position feed amount upper 4 digits	0	0 to 9999		J	×	×	High speed (Pr. 4)
467	Second position feed amount lower 4 digits	0	0 to 9999	×	×	0	×	Middle speed (Pr. 5)
468	Second position feed amount upper 4 digits	0	0 to 9999	^				
469	Third position feed amount lower 4 digits	0	0 to 9999	×	×	×	0	Low speed (Pr. 6)
470	Third position feed amount upper 4 digits	0	0 to 9999	^	^	^	)	2011 opoca (1 1. 0)
471	Fourth position feed amount lower 4 digits	0	0 to 9999	_ ×	×	0	0	4 speed (Pr. 24)
472	Fourth position feed amount upper 4 digits	0	0 to 9999					4 Speed (1 7. 24)
473	Fifth position feed amount lower 4 digits	0	0 to 9999	_ ×	0	×	0	5 speed (Pr. 25)
474	Fifth position feed amount upper 4 digits	0	0 to 9999					
475	Sixth position feed amount lower 4 digits	0	0 to 9999	×	0	0	×	6 speed (Pr. 26)
476	Sixth position feed amount upper 4 digits	0	0 to 9999					
477	Seventh position feed amount lower 4 digits	0	0 to 9999	×	0	0	0	7 speed (Pr. 27)
478	Seventh position feed amount upper 4 digits	0	0 to 9999					- Speed (* // 2/)
479	Eighth position feed amount lower 4 digits	0	0 to 9999	0	×	×	×	8 speed (Pr. 232)
480	Eighth position feed amount upper 4 digits	0	0 to 9999		, ,			



Parameter Number	Name	Initial Value	Setting Range	Description				
481	Ninth position feed amount lower 4 digits	0	0 to 9999	0	×	×	0	9 Speed (Pr. 233)
482	Ninth position feed amount upper 4 digits	0	0 to 9999					
483	Tenth position feed amount lower 4 digits	0	0 to 9999	0	×	0	×	10 speed (Pr. 234)
484	Tenth position feed amount upper 4 digits	0	0 to 9999					
485	Eleventh position feed amount lower 4 digits	0	0 to 9999	0	×	0	0	11 speed (Pr. 235)
486	Eleventh position feed amount upper 4 digits	0	0 to 9999					
487	Twelfth position feed amount lower 4 digits	0	0 to 9999	. 0	0	×	×	12 speed (Pr. 236)
488	Twelfth position feed amount upper 4 digits	0	0 to 9999					
489	Thirteenth position feed amount lower 4 digits	0	0 to 9999	0	0	×	0	13 speed (Pr. 237)
490	Thirteenth position feed amount upper 4 digits	0	0 to 9999					
491	Fourteenth position feed amount lower 4 digits	0	0 to 9999	0	0	0	×	14 speed (Pr. 238)
492	Fourteenth position feed amount upper 4 digits	0	0 to 9999					
493	Fifteenth position feed amount lower 4 digits	0	0 to 9999	0	0	0	0	15 speed (Pr. 239)
494	Fifteenth position feed amount upper 4 digits	0	0 to 9999	)				

The above parameters can be set when the FR-A7AP (option) is mounted.


# (1) Setting of position feed amount by parameter

- ·Set position feed amount in Pr.465 to Pr.494.
- ·The feed amount set in each parameter is selected by mult-speed terminal (RH, RM,RL,REX).
- ·Set (encoder resolutionxspeedx4 times) for position feed amount.
- ·For example, the formula for stopping the motor after 100 rotations using the FR-V5RU is as follows:

2048 (pulse/rev)  $\times$  100 (speed)  $\times$  4 = 819200 (feed amount)

To set 819200 for the first position feed amount, divide the value into upper four digits and lower four digits and set 81 (decimal) in Pr: 466 (upper) and 9200 (decimal) in Pr: 465 (lower).

# (2) Position command operation by parameter

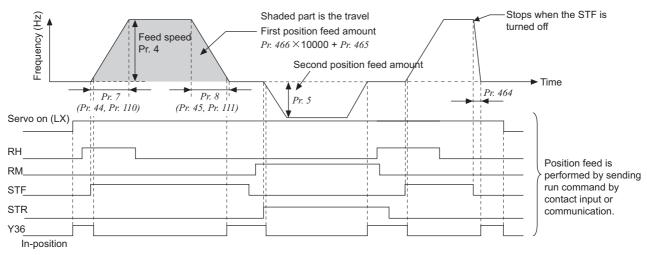

· For deceleration by turning the STF(STR) off, use *Pr. 464 Digital position control sudden stop deceleration time* to set deceleration time.

## **REMARKS**

- · Acceleration/deceleration time is 0.1s minimum and 360s maximum.
- · Pr. 20 Acceleration/deceleration reference frequency is clamped at a minimum of 16.66Hz (500r/min).
- The acceleration/deceleration patterns for position control are all linear acceleration and the setting of *Pr. 29 Acceleration/deceleration pattern selection* is invalid.

#### CAUTION

Information on multi-speed command (position command by RL, RM, RH, and REX signals) is determined at rising of the forward (reverse) command to perform position control. Therefore, set forward (reverse) command after multi-speed command (position command). Position feed is invalid if the multi-speed command is given after forward (reverse) command.

## ♦ Parameters referred to ♦

Pr. 20 Acceleration/deceleration reference frequency Refer to page 172

Pr. 29 Acceleration/deceleration pattern selection Refer to page 175



#### 


Conditional position pulse train command can be input by pulse train input and sign signal (NP) from the JOG terminal.

Parameter Number	Name	Initial Value	Setting Range	Description		
419	Position command source	0	0	Conditional position continput. (position command		
419	selection	0	2	Conditional pulse train position command by inverter pulse train input		
428	Command pulse selection	0	0 to 2	Pulse train + sign	Negative logic	
420			3 to 5		Positive logic	
420	Clear signal colection	1	0	Deviation counter is clear of the clear signal (CLR)	red at edge of turning off from on	
429	429 Clear signal selection		' [	1	Deviation counter while to	the clear signal (CLR) is
430	Pulse monitor selection	The status of various pulses dur displayed.		lses during runnning is		
			9999	Frequency monitor is displayed.		

The above parameters can be set when the FR-A7AP (option) is mounted.

# (1) Operation

Turnign on the servo on signal (LX) cancels the base circuit shut-off and the operation ready signal (RDY) turns on after 0.1s. Turning on the STF (forward stroke end signal) or STR (forward stroke end signal) runs the motor according to the commanded pulse. When the forward (reverse) stroke end signal turns off, the motor does not run in that direction.

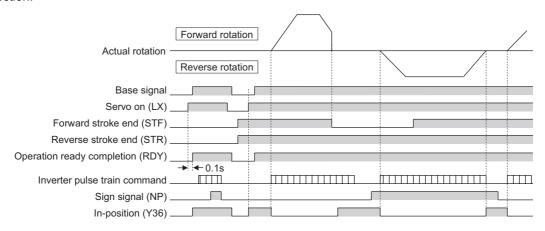

# (2) Pulse train type selection (Pr.428, NP signal)

- 1)Set "2"(conditional pulse train position command) in Pr. 419.
- 2)Set "68" in Pr. 178 to Pr. 189 (input terminal function selection) to assign conditional position pulse train sign (NP).
- 3)Select command pulse train using Pr. 428

Pr. 428 Setting	Command	Pulse Train Type	At Forward Rotation	At Reverse Rotation
0 to 2	Negative logic	Pulse train + sign	JOG TITLE	H
3 to 5	Positive logic	Pulse train + sign	JOG_ T_ T_ T_ T_ NP H L	


<sup>4)</sup>Select vector control, then select position control.

# REMARKS

<sup>·</sup> When Pr. 419 Position command source selection = "2" (conditional pulse train position command), JOG terminal serves as conditional position pulse train input terminal regardless of the Pr. 291 Pulse train I/O selection setting.

# (3) Selection of clear signal (Pr. 429, CLR signal)

- · Use this function to zero the droop pulse for home position operation, etc.
- · When "0" is set in *Pr.* 429, the deivication counter is cleared at the edge of truning on of the clear signal (CLR). In addition, the CLR signal truns on in synchronization with zero pulse signal of the encoder at home position operation, etc. and deviation counter is cleared.
- · For the terminal used for CLR signal, set "69" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function.

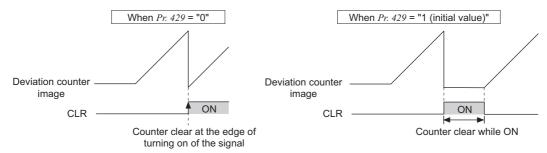

# (4) Pulse monitor selection (Pr. 430)

The status of various pulses during running is displayed.

Set "6" in Pr. 52 DU/PU main display data selection to display output frequency monitor.

Pr. 430 Setting	Description	Display Range (FR-DU07)	Display Range (FR-PU04)
0	The cumulative command pulse value is displayed.	Lower 4 digits	Lower 5 digits
1	The cumulative command pulse value is displayed.	Upper 4 digits	Upper 5 digits
2	The cumulative feedback pulse value is displayed.	Lower 4 digits	Lower 5 digits
3	The cumulative leedback pulse value is displayed.	Upper 4 digits	Upper 5 digits
4	The drage nulses are manitered	Lower 4 digits	Lower 5 digits
5	The droop pulses are monitored.	Upper 4 digits	Upper 5 digits
9999	Frequency monitor is displayed. (initial value)		

#### **REMARKS**

- · Count the number of pulses when the servo is on.
- · The cumulative pulse value is cleared when the base is shut off or the clear signal (CLR) is turned on.

#### CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.

#### ◆Parameters referred to ◆

Pr. 52 DU/PU main display data selection Refer to page 248

Pr. 178 to Pr. 189 (input terminal function selection) The Refer to page 227



# 4.6.4 Setting range of the electronic gear (Pr. 420, Pr. 421, Pr. 424) Vector

Set the ratio of the machine side gear and the motor side gear.

Parameter Number	Name	Initial Value	Setting Range	Description
420	Command pulse scaling factor numerator	1	0 to 32767 *	Set the electric gear.
421	Command pulse scaling factor denominator	1	0 to 32767 *	<i>Pr. 420</i> is a numerator and <i>Pr. 421</i> is a denominator.
424	Position command acceleration/deceleration time constant	0s	0 to 50s	Used when rotation has become unsmooth at a large electronic gear ratio (about 10 times or more) and low speed.

The above parameters can be set when the FR-A7AP (option) is mounted.

# (1) Calculation of the gear ration (Pr. 420, Pr. 421)

· The position resolution (travel per pulse  $\Delta \ell$  [mm]) is determined by the travel per motor revolution  $\Delta s$  [mm] and the feedback pulses Pf [pulse/rev] of the detector, and is represented by the following expression.

$$\Delta \ell = \frac{\Delta s}{Pf}$$
  $\Delta \ell$ : travel per pulse [mm]  $\Delta \ell$ : travel per motor rotation [mm] Pf: number of feedback pulses [pulse]

Pf : number of feedback pulses [pulse/rev] (number of pulses after multipling the number

of encoder pulses by four)

Using the parameters, the travel per command pulse can be set separately to set the travel per command pulse without a fraction.

$$\Delta \ell = \frac{\Delta s}{Pf} \times \frac{Pr. 420}{Pr. 421}$$

In addition, the relationship between the motor speed and internal command pulse frequency is as follows:

fo 
$$\times \frac{Pr. 420}{Pr. 421}$$
 = Pf  $\times \frac{No}{60}$  fo : Internal command pulse frequency [pps] No : Motor speed [mr/minn]

#### = CAUTION =

Set the electronic gear in the range of 1/50 to 20.

Note that too small a value will decrease the speed command and too large a value will increase the speed ripples.

#### [Setting example 1]

The travel per pulse is  $\Delta \ell = 0.01$  (mm) in a drive system where the ballscrew pitch PB = 10 (mm) and the reduction ratio 1/n = 1 and the electronic gear ratio is  $\Delta s = 10$  (mm) when the number of feedback pulses Pf = 4000 (pulse/rev). According to the following expression,

$$\Delta \ell = \frac{\Delta s}{Pf} \times \frac{Pr. 420}{Pr. 421}$$

$$\frac{Pr. 420}{Pr. 421} = \Delta \ell \times \frac{Pf}{\Delta s}$$

$$= 0.01 \times \frac{4000}{10} = \frac{4}{1}$$

Therefore, set "4" in Pr. 420 and "1" in Pr. 421.

[Setting example 2]

Find the internal command pulse frequency of the dedicated motor rated speed.

Note that the command pulse scaling factor Pr. 420/Pr. 421 = 1.

Assuming that the number of encoder pulses is 2048 (pulses/rev) (feedback pulse Pf =  $2048 \times 4$ ),

fo = 2048 
$$\times$$
 4  $\times$  No  $\times$  Pr. 421  $\times$  60  $\times$  Pr. 420

Therefore, the internal command pulse frequency is 204800 (pps).

= 204800

<sup>\*</sup> When the operation panel (FR-DU07) is used, the maximum setting is 9999. When a parameter unit is used, up to the maximum value within the setting range can be set.



Relationship between position resolution  $\Delta \ell$  and overall accuracy

Since overall accuracy (positioning accuracy of machine) is the sum of electrical error and mechanical error, normally take measures to prevent the electrical system error from affecting the overall error. As a guideline, refer to the following relationship.

$$\Delta \ell < \frac{1}{5}$$
 to  $\frac{1}{10} \times \Delta \epsilon$   $\Delta \epsilon$ :positioning accuracy

<Stopping characteristic of motor>

When parameters are used to run the motor, the internal command pulse frequency and motor speed have the relationship as shown in the chart on  $page\ 130$ , and as the motor speed decreases, pulses are accumulated in the deviation counter of the inverter. These pulses are called droop pulses ( $\varepsilon$ ) and the relationship between command frequency (fo) and position loop gain (Kp:  $Pr.\ 422$ ) is as represented by the following expression.

$$\varepsilon = \frac{\text{fo}}{\text{Kp}}$$
 [pulse]  $\varepsilon = \frac{204800}{25}$  [pulse] (rated motor speed)

When the initial value of Kp is  $25s^{-1}$ , the droop pulses ( $\varepsilon$ ) are 8192 pulses.

Since the inverter has droop pulses during running, a stop settling time (ts) is needed from when the command has zeroed until the motor stops. Set the operation pattern in consideration of the stop settling time.

ts = 
$$3 \times \frac{1}{Kp}$$
 [s]

When the initial value of Kp is 25s<sup>-1</sup>, the stop settling time (ts) is 0.12s.

The positioning accuracy  $\Delta \varepsilon$  is (5 to 10)  $\times \Delta \ell = \Delta \varepsilon$  [mm]

# (2) Position command acceleration/deceleration time constant (Pr. 424)

- · When the electronic gear ratio is large (about 10 or more times) and the speed is low, rotation will not be smooth, resulting in pulse-wise rotation. At such a time, set this parameter to smooth the rotation.
- · When acceleration/deceleration time cannot be provided for the command pulses, a sudden change in command pulse frequency may cause an overshoot or error excess alarm. At such a time, set this parameter to provide acceleration/deceleration time.

Normally set 0.

#### → Parameters referred to →

Pr. 422 Position gain Refer to page 138

# 4.6.5 Setting of positioning adjustment parameter (Pr. 426, Pr. 427) Vector

Parameter Number	Name	Initial Value	Setting Range	Description
426	In-position width	100 pulses	0 to 32767 pulses *	When the number of droop pulses has fallen below the setting value, the in-position signal (Y36) turns on.
427	Excessive level error	40	0 to 400	A position error excessive (E.OD) occurs when the number of droop pulses exceeds the setting.
			9999	Function invalid

The above parameters can be set when the FR-A7AP (option) is mounted.

\* When the operation panel (FR-DU07) is used, the maximum setting is 9999. When a parameter unit is used, up to the maximum value within the setting range can be set.

## (1) In-position width (Pr. 426)

The Y36 signal acts as an in-position signal.

When the number of droop pulses has fallen below the setting value, the in-position signal (Y36) turns on.

For the Y36 signal, assign the function by setting "36" (positive logic) or "136" (negative logic) in any of Pr. 190 to Pr. 196 (output terminal function selection).

## (2) Excessive level error (Pr. 427)

When droop pulses exceed the value set in *Pr. 427*, position error large occurs and displays an error (E.OD) to stop the inverter. When you decreased the *Pr. 422 Position loop gain* setting, increase the error excessive level setting. Also decrease the setting when you want to detect an error slightly earlier under large load.

When "9999" is set in Pr. 427, position error large (E.OD) does not occur regardless of droop pulses.



# 4.6.6 Gain adjustment of position control (Pr. 422, Pr. 423, Pr. 425)

Easy gain tuning is available as an easy tuning method. Refer to page 104 for easy gain tuning. If it does not produce any effect, make fine adjustment by using the following parameters. Set "0" in Pr.~819~Easy~gain~tuning~selection~ before setting the parameters below.

Parameter Number	Name	Initial Value	Setting Range	Description
422	Position loop gain	25s <sup>-1</sup>	0 to 150s <sup>-1</sup>	Set the gain of the position loop.
423	Position feed forward gain	0%	0 to 100%	Function to cancel a delay caused by the droop pulses of the deviation counter.
425	Position feed forward command filter	0s	0 to 5s	Enters the primary delay filter in response to the feed forward command.

The above parameters can be set when the FR-A7AP (option) is mounted.

# (1) Position loop gain (Pr. 422)

- · Make adjustment when any of such phenomena as unusual vibration, noise and overcurrent of the motor/machine occurs.
- · Increasing the setting improves trackability for the position command and also improves servo rigidity at a stop, but oppositely makes an overshoot and vibration more liable to occur.
- · Normally set this parameter within the range about 5 to 50.

Phenomenon/Condition	Adjustment Method			
	Increase the Pr. 422 value.			
Slow response	Pr. 422	Increase the value 3s <sup>-1</sup> by 3s-1 until just before an overshoot, stop-time vibration or other instable phenomenon occurs, and set about 0.8 to 0.9 of that value.		
Overshoot, stop-time	Decrease the Pr.	422 value.		
vibration or other instable phenomenon occurs.	Pr. 422	Decrease the value 3s <sup>-1</sup> by 3s-1 until just before an overshoot, stop-time vibration or other instable phenomenon occurs, and set about 0.8 to 0.9 of that value.		

# (2) Position feed forward gain (Pr. 423)

- · This function is designed to cancel a delay caused by the droop pulses of the deviation counter.
- · When a tracking delay for command pulses poses a problem, increase the setting gradually and use this parameter within the range where an overshoot or vibration will not occur.
- · This function has no effects on servo rigidity at a stop.
- · Normally set this parameter to 0.

# (3) Troubleshooting

	Phenomenon	Cause	Countermeasures
		<ul><li>(1) The phase sequence of the motor or encoder wiring is wrong.</li><li>(2) The control mode selection <i>Pr.</i> 800 setting is improper.</li></ul>	<ul><li>(1) Check the wiring. (Refer to page 41)</li><li>(2) Check the Pr. 800 setting. (Refer to page 92)</li></ul>
		(3) The servo on signal or stroke end signal (STF, STR) is not input.	(3) Check that the signals are input normally.
1	Motor does not rotate	(4) Command pulse, position pulse sign (NP) are not correctly input.	(4)-1 Check that the command pulses are input normally. (Check the cumulative command pulse value in <i>Pr.</i> 430)
	Motor does not rotate		<ul> <li>(4)-2 Check the command pulse form and command pulse selection, <i>Pr. 428</i>, setting.</li> <li>(4)-3 Check that the position pulse sign (NP) is assigned to the input terminal. (inverter pulse input)</li> </ul>
		(5) Pr. 419 Position command source selection setting is not correct.	(5)Check the position command source selection <i>in Pr.</i> 419.
		(6) When "0" is set in <i>Pr. 419</i> Position command source  selection, the settings of position feed amount in <i>Pr. 465 to Pr. 494</i> are not correct.	(6)Check the position feed amount in <i>Pr. 465 to Pr. 494</i> .
		(1) The command pulses are not input correctly.	<ul> <li>(1)-1 Check the command pulse form and command pulse selection, <i>Pr. 428</i> setting.</li> <li>(1)-2 Check that the command pulses are input normally. (Check the cumulative command pulse value in <i>Pr.</i></li> </ul>
2	Position shift occurs.		<ul><li>(1)-3 Check that the position pulse sign (NP) is assigned to the input terminal. (inverter pulse input)</li></ul>
		(2)The command is affected by noise. Or the encoder feedback is compounded with noise.	<ul> <li>(2)-1 Decrease the <i>Pr. 72 PWM frequency selection</i> value.</li> <li>(2)-2 Change the earthing (grounding) point of shielded wire. Or leave the cable suspended.</li> </ul>
		1) The position loop gain is high.	(1) Decrease the Pr. 422 value.
3	Motor or machine hunts.	2) The position loop gain is high.	<ul><li>(2)-1 Perform easy gain tuning.</li><li>(2)-2 Decrease <i>Pr. 820</i> and increase <i>Pr. 821</i>.</li></ul>
4	Machine operation is unstable	The acceleration/deceleration time setting has adverse effect.	(1) Decrease Pr. 7 and Pr. 8.

# → Parameters referred to ◆

Pr. 7 Acceleration time Refer to page 172 Pr. 8 Deceleration time Refer to page 172

Pr. 72 PWM frequency selection Refer to page 279
Pr. 800 Control method selection Refer to page 92


Pr. 802 Pre-excitation selection Refer to page 199

Pr. 819 Easy gain tuning selection Refer to page 104

Pr. 820 Speed control P gain 1 Refer to page 104

Pr. 821 Speed control integral time 1 Refer to page 104

#### 

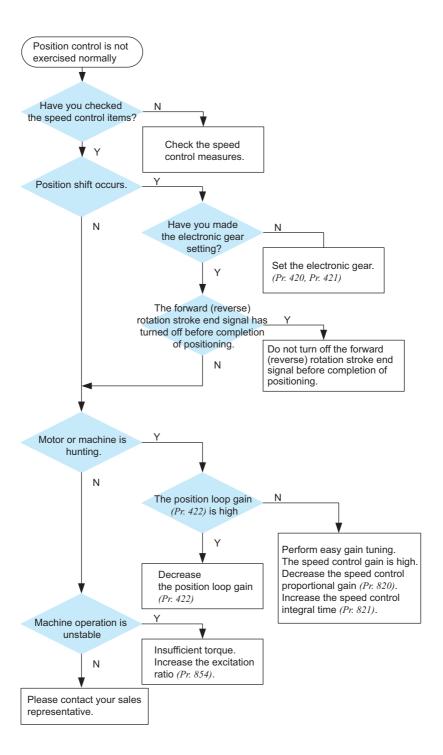

## **REMARKS**

The speed command of position control relates to speed control. (Refer to page 97)

# 4.7 Adjustment of real sensorless vector control, vector control

Purpose	Parameter	Refer to Page	
Stabilize speed and feedback signal	Speed detection filter Torque detection filter	Pr. 823, Pr. 827, Pr. 833, Pr. 837	141
Change the excitation ratio	Excitation ratio	Pr. 854	142

# 4.7.1 Speed detection filter and torque detection filter (Pr. 823, Pr. 827, Pr. 833, Pr. 837) Sensorless Vector

Set the time constant of the primary delay filter relative to the speed feedback signal and torque feedback signal. Since this function reduces the speed loop response, use it with the initial value.

Parameter Number	Name	Initial Value	Setting Range	Description	
			0	Without filter	
823 *1	Speed detection filter 1	0.001s	0.001 to 0.1s	Set the time constant of the primary delay filter relative to the speed feedback signal.	
	827 Torque detection filter 1			0	Without filter
827		0s	0.001 to 0.1s	Set the time constant of the primary delay filter relative to the torque feedback signal.	
833 *1	Speed detection filter 2	9999	0 to 0.1s	Second function of <i>Pr. 823</i> (valid when RT signal is on)	
			9999	Same as the Pr. 823 setting	
837	Torque detection filter 2	9999	0 to 0.1s	Second function of <i>Pr. 827</i> (valid when RT signal is on)	
		-	9999	Same as the Pr. 827 setting	

<sup>\*1</sup> This parameter can be set when the FR-A7AP (option) is mounted.

# (1) Stabilize speed detection (Pr. 823, Pr. 833)

- Since the current loop response reduces, use it with the initial value.
   Increase the setting value gradually and adjust the value to stabilize the speed when speed ripples occur due to harmonic disturbance, etc. A too large value will run the motor unstably.
- · Position control is valid only during vector control

# (2) Stabilize speed detection (Pr. 827, Pr. 837)

Since the current loop response reduces, use it with the initial value.
 Increase the setting value gradually and adjust the value to stabilize the speed when torque ripples occur due to harmonic disturbance, etc. A too large value will run the motor unstably.

## (3) Use multiple primary delay filters.

· Use *Pr. 833 and Pr. 837* to change the filter accroding to applications. *Pr.833 and Pr.837* are valid when the RT signal is on.

## **REMARKS**

- · The RT signal acts as the second function selection signal and makes the other second functions valid. (Refer to page 231.)
  - The RT signal is assigned to the RT terminal in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.




# 4.7.2 Excitation ratio (Pr. 854) Sensorless Vector

Decrease the excitation ratio when you want to improve efficiency under light load. (Motor magnetic noise decreases.)

Parameter Number	Name	Initial Value	Setting Range	Description
854	Excitation ratio	100%	0 to 100%	Set the excitation ratio under no load.

 Note that the rise of output torque becomes slow if excitation ratio is decreased.

This function is appropriate for applications as machine tools which repeat rapid acceleration/deceleration up to high speed.

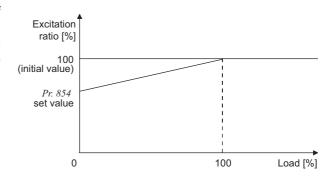

## **REMARKS**

When "1" (magnetic flux with terminal) is set in *Pr. 858 Terminal 4 function assignment* or *Pr. 868 Terminal 1 function assignment*, the *Pr. 854* setting is made invalid.

# 4.8 Adjust the output torque of the motor (current)

Purpose	Paramete	Refer to Page	
Set starting torque manually	Manual torque boost	Pr. 0, Pr. 46, Pr. 112	143
Automatically control output current according to load	Advanced magnetic flux vector control	Pr. 71, Pr. 80, Pr. 81, Pr. 89, Pr. 450, Pr. 451, Pr. 453, Pr. 454, Pr. 569, Pr. 800	145
Compensate for motor slip to secure low-speed torque	Slip compensation	Pr. 245 to Pr. 247	148
Limit output current to prevent inverter trip	Stall prevention operation	Pr. 22, Pr. 23, Pr. 66, Pr. 154, Pr. 156, Pr. 157	149
Change the overload current rating specifications	Multiple rating setting	Pr. 570	154

# 4.8.1 Manual torque boost (Pr. 0, Pr. 46, Pr. 112)

- You can compensate for a voltage drop in the low-frequency region to improve motor torque reduction in the low-speed range.
- •Motor torque in the low-frequency range can be adjusted to the load to increase the starting motor torque.
- •Three types of starting torque boost can be changed by switching terminals.

Parameter Number	Name	Initial Value 200V class (400V class)		Setting Range	Description	
		00030, 00050(00015, 00025)	6%			
		00080 to 00175 (00040 to 00090)	4%			
0	Torque boost	00240, 00330 (00120, 00170)	3%	0 to 30%	Set the output voltage at 0Hz as %.	
		00460 to 02150 (00230 to 01100) 29		]		
		02880 (01440) or more	1%			
	Second torque	9999		0 to 30%	Set the torque boost value when the	
46	boost			0 10 30 %	RT signal is on.	
	poosi			9999	Without second torque boost	
	Third torque	9999		0 to 30%	Set the torque boost value when the	
112	boost			0 10 30 %	X9 signal is on.	
	มบบอเ			9999	Without third torque boost	


# (1) Starting torque adjustment

Pr. 1

**Pr.45**☐ page 172

Pr.47
page 158
Pr.111
page page 172
Pr.113
page 158

- · On the assumption that Pr. 19 Base frequency voltage is 100%, set the output voltage at 0Hz in % in Pr. 0 (Pr. 46, Pr. 112).
- · Adjust the parameter little by little (about 0.5%), and check the motor status each time. If the setting is too large, the motor will overheat. The guideline is about 10% at the greatest.

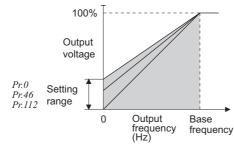

## (2) Set multiple torque boost (RT signal, X9 signal, Pr. 46, Pr. 112)

- · Use the second (third) torque boost when changing the torque boost according to application or when using multiple motors by switching between them by one inverter.
- · Pr. 46 Second torque boost is made valid when the RT signal turns on.
- *Pr.* 112 Third torque boost is valid when the X9 signal is on. For the terminal used for X9 signal input, set "9" in any of *Pr.* 178 to *Pr.* 189 (input terminal function selection) to assign the X9 signal function.

## **REMARKS**

- The RT(X9) signal acts as the second (third) function selection signal and makes the other second (third) functions valid. (Refer to page 231)
- The RT signal is assigned to the RT terminal in the default setting. By setting "3" to any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.

#### === CAUTION :

- Increase the setting when the distance between the inverter and motor is long or when motor torque is insufficient in the low-speed range. If the setting is too large, an overcurrent trip may occur.
- The Pr. 0, Pr. 46, Pr. 112 settings are valid only when V/F control is selected.
- When using the inverter dedicated motor (constant torque motor) with the FR-A720-00240, FR-A720-00330, FR-A740-00120 or FR-A740-00170, set the torque boost value to 2%. If the initial set *Pr. 71* value is changed to the setting for use with a constant-torque motor, the *Pr. 0* setting changes to the corresponding value in above.
- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 3 Base frequency, Pr. 19 Base frequency voltage Refer to page 158

Pr. 71 Applied motor Refer to page 184

Pr. 178 to Pr. 189 (Input terminal function selection) Refer to page 227

# 4.8.2 Advanced magnetic flux vector control (Pr. 71, Pr. 80, Pr. 81, Pr. 89, Pr. 450, Pr. 451, Pr. 453, Pr. 454, Pr. 569, Pr. 800) Magnetic flux

Advanced magnetic flux vector control can be selected by setting the capacity, number and type of motor to be used in Pr.~80 and Pr.~81.

•What is advanced magnetic flux vector control?

The low speed torque can be improved by providing voltage compensation so that the motor current which meets the load torque to flow. Output frequency compensation (slip compensation) is made so that the motor actual speed approximates a speed command value. Effective when load fluctuates drastically, etc.

Parameter Number	Name	Initial Value	Setting 200V Class (		Description	on	
71	Applied motor	0	20, 23, 24, 30, 33, 34, 40,		By selecting a standard motor or constant torque motor, thermal characteristic and motor constants of each motor are set.		
80	0 Motor Capacity		02150(01100) or less 02880(01440)	0.4 to 55kW	Set the applied motor capacity.		
			or more 0 to 3600kW		V/F control		
			2, 4, 6		Set the number of motor pol	<b>AS</b>	
81	Number of motor poles	9999	12, 14, 10		X18 signal-ON:V/F control·	Set 10 + number of motor poles.	
			999	99	V/F control		
89	Speed control gain (magnetic flux vector)	9999	0 to 200%		Motor speed fluctuation due to load fluctuation is adjusted during advanced magnetic flux vector control.  100% is a referenced value.		
			9999		Gain matching with the motor set in Pr. 71.		
450	Second applied motor	9999	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54		Set when using the second motor. (same specifications as <i>Pr. 71</i> )		
			99	99	Function invalid (Pr. 71 is valid)		
	Second motor control		10, 11, 12		Real sensorless vector control		
451	method selection	9999	20, 9	999	V/F control (advanced magnetic flux vector control)		
			02150(01100) or less	0.4 to 55kW	Set the capacity of the seco	nd motor	
453	Second motor capacity	9999	02880(01440) or more	0 to 3600kW	Set the capacity of the secon	ild motor.	
			99	99	V/F control		
454	Number of second motor	9999	2, 4, 6	, 8, 10	Set the number of poles of the	he second motor.	
707	poles	0000	9999		V/F control		
569	Second motor speed control gain	9999	0 to 200%		Second motor speed fluctua fluctuation is adjusted during magnetic flux vector control. 100% is a referenced value.	g advanced	
		9999		Gain matching with the motor	or set in <i>Pr. 451</i> .		
			10, 1	1, 12	Real sensorless vector conti	-	
800	Control method selection	20	2	0	V/F control (advanced magn control)	netic flux vector	

Use Pr.~178~to~Pr.~189 to assign the terminals used for the X18 and MC signal. (Refer to page 227)

# POINT

If the following conditions are not satisfied, select V/F control since malfunction such as insufficient torque and uneven rotation may occurr.

- The motor capacity should be equal to or one rank lower than the inverter capacity. (note that the capacity is 0.4kW or more)
- Motor to be used is either Mitsubishi standard motor (SF-JR, SF-HR two-pole, four-pole, six-pole 0.4kW or more) or Mitsubishi constant torque motor (SF-JRCA, SF-HRCA 200V class four-pole 0.4kW to 55kW). When using a motor other than the above (other manufacturer's motor), perform offline auto tuning without fail.
- Single-motor operation (one motor run by one inverter) should be performed.
- The wiring length from inverter to motor should be within 30m. (Perform offline auto tuning in the state where wiring work is performed when the wiring length exceeds 30m.)
- For FR-A720-02880 (FR-A740-01440) or more, do not use an option sine wave filter (MT-BSL/BSC) between the inverter and motor.



Pr.82

| Pr.82 |
| Pr.386 |
| Pr.386 |
| Pr.455 |
| Pr.644 |
| Pr.564 |
| Pr.571 |
| Pr.684 |
| Pr.684 |
| Pr.803 |

page 99



# (1) Selection method of advanced magnetic flux vector control

Perform secure wiring. (Refer to page 14)



## Set the motor. (Pr. 71)

N	lotor	Pr.71 Setting *1	REMARKS
Mitsubishi standard	SF-JR	0 (initial value)	
motor	SF-JR 4P 1.5kW or less	20	
Mitsubishi high	SF-HR	40	
efficiency motor	Others	3	Offline auto tuning is necessary. *2
Mitsubishi constant-	SF-JRCA 200V 4P	1	
torque motor	SF-HRCA 200V 4P	50	
torque motor	Others (SF-JRC, etc.)	13	Offline auto tuning is necessary. *2
Other manufacturer's standard motor	_	3	Offline auto tuning is necessary. +2
Other manufacturer's constant torque motor	_	13	Offline auto tuning is necessary. +2

<sup>\*1</sup> For other settings of *Pr.71*, refer to *page 184*.

<sup>\*2</sup> Refer to 196 page for offline auto tuning.



Set the motor capacity and the number of motor poles.

(Pr. 80, Pr. 81) (Refer to page 92)



Set motor capacity (kW) in *Pr.80 Motor capacitry* and the number of motor poles (number of poles) in *Pr. 81 Number of motor poles*. (V/F control is performed when the setting is "9999" (initial value).)

Set the operation command. (Refer to page 306)

Select the start command and speed command.

- (1) Start command
  - 1. Operation panel:

Setting by pressing (FWD) I(REV) of the operation panel

- 2. External command: Setting by forward rotation or reverse rotation command (terminal STF or STR)
- (2) Speed command
  - 1. Operation panel:

Setting by pressing O of the operation panel

Setting by pressing Or the operation p

- External analog command (terminal 2 or 4):
   Give a speed command using the analog signal input to terminal 2 (or terminal 4).
- Multi-speed command:
   The external signals (RH, RM, RL) may also be used to give speed command.

Test run

# As required

- · Perform offline auto tuning. (Pr. 96) (refer to page 186)
- Select online auto tuning. (Pr. 95) (refer to page 196)

## **REMARKS**


· When higher accuracy operation is necessary, set online auto tuning after performing offline auto tuning and select real sensorless vector control.

#### CAUTION

- · Uneven rotation slightly increases as compared to the V/F control. (It is not suitable for machines such as grinding machine and wrapping machine which requires less uneven rotation at low speed.)
- · When a surge voltage suppression filter (FR-ASF-H) is connected between the inverter and motor, output torque may decreases.
- · When terminal assignment is changed using *Pr. 178 to Pr. 189 (input terminal function selection)*, the other functions may be affected. Make setting after confirming the function of each terminal.

# (2) Adjust the motor speed fluctuation at load fluctuation (speed control gain)

The motor speed fluctuation at load fluctuation can be adjusted using  $Pr.\,89$ . (It is useful when the speed command does not match the motor speed after the FR-A500(L) series inverter is replaced with the FR-A700 series inverter, etc.)

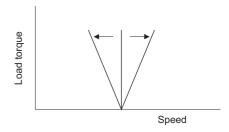

# (3) Advanced magnetic flux vector control is performed with two motors

- •Turning the RT signal on allows the second motor to be controled.
- •Set the second motor in *Pr. 450 Second applied motor*. (Initial setting is "9999" (without second applied motor). *Refer to page 184*.)

Function	RT signal ON (second motor)	RT signal OFF (first motor)
Applied motor	Pr. 450	Pr. 71
Motor capacity	Pr. 453	Pr. 80
Number of motor poles	Pr. 454	Pr. 81
Speed control gain	Pr. 569	Pr. 89
Control method selection	Pr. 451	Pr. 800

#### **REMARKS**

• The RT signal acts as the second function selection signal and makes the other second functions valid. (*Refer to page 231*)

The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, the RT signal can be assigned to the other terminal.

#### CAUTION

• Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

#### ♦ Parameters referred to ♦

Pr. 71, Pr. 450 Applied motor Refer to page 184

Pr. 800, Pr. 451 Control method selection Refer to page 92

# 4.8.3 Slip compensation (Pr. 245 to Pr. 247) \_\_\_\_\_



The inverter output current may be used to assume motor slip to keep the motor speed constant.

Parameter Number	Name	Initial Value	Setting Range	Description	
245	Rated slip	9999	0.01 to 50%	Used to set the rated motor slip.	
243	Rated Slip	3333	0, 9999	No slip compensation	
246	Slip compensation time constant	0.5s	0.01 to 10s	Used to set the slip compensation response time. When the value is made smaller, response will be faster. However, as load inertia is greater, a regenerative overvoltage (E.OV□) error is more liable to occur.	
247	Constant-power region slip compensation selection	9999	0	Slip compensation is not made in the constant power range (frequency range above the frequency set in <i>Pr. 3</i> )	
	compensation selection		9999	Slip compensation is made in the constant power range.	

· Slip compensation is validated when the motor rated slip calculated by the following formula is set in Pr. 245. Slip compensation is not made when Pr. 245 = "0" or "9999".

## REMARKS

When performing slip compensation, the output frequency may become greater than the set frequency. Set the *Pr. 1 Maximum frequency* value a little higher than the set frequency.

#### → Parameters referred to →

Pr. 1 Maximum frequency Refer to page 156

Pr. 3 Base frequency Refer to page 158

# 4.8.4 Stall prevention operation (Pr. 22, Pr. 23, Pr. 48, Pr. 49, Pr. 66, Pr. 114, Pr. 115, Pr. 148, Pr. 149, Pr. 154, Pr. 156, Pr. 157, Pr. 858, Pr. 868)

This function monitors the output current and automatically changes the output frequency to prevent the inverter from coming to an alarm stop due to overcurrent, overvoltage, etc. It can also limit stall prevention and fast-response current limit operation during acceleration/deceleration, driving or regeneration. Invalid under real sensorless vector control or vector control.

Stall prevention

If the output current exceeds the stall prevention operation level, the output frequency of the inverter is automatically varied to reduce the output current.

Also the second stall prevention function can restrict the output frequency range in which the stall prevention function is valid. (Pr. 49)

Fast-response current limit

If the current exceeds the limit value, the output of the inverter is shut off to prevent an overcurrent.

Parameter Number	Name	Initial Value	Setting Range	Description
	Stall prevention operation		0	Stall prevention operation selection becomes invalid.
22	level	150% *	0.1 to 400%	Set the current value at which stall prevention operation will be started.
23	Stall prevention operation level compensation factor	9999	0 to 200% *	The stall operation level can be reduced when operating at a high speed above the rated frequency.
	at double speed		9999	Constant according to Pr. 22
48	Second stall prevention	150% *	0	Second stall prevention operation invalid
	operation current	10070	0.1 to 220% *	The second stall prevention operation level can be set.
			0	Second stall prevention operation invalid
49	Second stall prevention operation frequency	0Hz	0.01 to 400Hz	Set the frequency at which stall prevention operation of <i>Pr. 48</i> is started.
			9999	Pr. 48 is valid when the RT signal is on.
66	Stall prevention operation reduction starting frequency	60Hz	0 to 400Hz	Set the frequency at which the stall operation level is started to reduce.
	Third stall prevention		0	Third stall prevention operation invalid
114	operation current	150%	0.1 to 220% *	Stall prevention operation level can be changed with the X9 signal.
	Thrid stall prevention		0	Third stall prevention operation invalid
115	operation frequency	0Hz	0.01 to 400Hz	Set the frequency at which stall prevention operation when the X9 signal is on starts.
148	Stall prevention level at 0V input	150% *	0 to 220% *	Stall prevention operation level can be changed by
149	Stall prevention level at 10V input	200% *	0 to 220% *	the analog signal input to terminal 1 (terminal 4).
154	Voltage reduction selection during stall	1	0	With voltage reduction You can select whether to use output voltage reduction during
	prevention operation		1	Without voltage reduction   stall prevention operation or not.
156	Stall prevention operation selection	0	0 to 31, 100, 101	You can select whether stall prevention operation and fast- response current limit operation will be performed or not.
157	OL signal output timer	0 to 25s		Set the output start time of the OL signal output when stall prevention is activated.
			9999	Without the OL signal output
858	Terminal 4 function assignment	0	0, 4, 9999	By setting "4", the stall prevention operation level can be changed with a signal to terminal 4.
868	Terminal 1 function assignment	0	0, 2 to 5, 9999	By setting "4", the stall prevention operation level can be changed with a signal to terminal 1.

When Pr. 570 Multiple rating setting  $\neq$  "2", performing parameter clear changes the initial value and setting range. (Refer to page 154)

# Output current Output frequency Output frequency Time Stall prevention operation example

# (1) Setting of stall prevention operation level (Pr. 22)

- Set in *Pr. 22* the ratio of the output current to the rated inverter current at which stall prevention operation will be performed. Normally set 150% (initial value).
- Stall prevention operation stops acceleration (makes deceleration) during acceleration, makes deceleration during constant speed, and stops deceleration during deceleration.
- · When stall prevention operation is performed, the OL signal is output.

#### CAUTION

- · If an overload status lasts long, an inverter trip (e.g. electronic thermal relay function (E.THM)) may occur.
- When Pr. 156 has been set to activate the fast-response current limit (initial setting), the Pr. 22 setting should not be higher than 170%. The torque will not be developed by doing so. (When Pr. 570 = "2")
- When real sensorless vector control or vector control is selected using *Pr. 800 Control method selection*, *Pr.22* serves as torque limit level. For the FR-A720-00175 (FR-A740-00090) or less, the *Pr. 22* setting changes from 150% (initial value) to 200%.

Pr.113/
Pr.98 158
Pr.116
Pr.145
Pr.145
Page 385

Pr.150
page 243
Pr.153
page 243
Pr.155

page 231

Pr.158

page 248

Pr.850

page 199

Pr.859

page 186

Pr.867


page 254

**Pr.872** page 271

# (2) Stall prevention operation signal output and output timing adjustment (OL signal, Pr. 157)

- · When the output power exceeds the stall prevention operation level and stall prevention is activated, the stall prevention operation signal (OL signal) turns on for longer than 100ms. When the output power falls to or below the stall prevention operation level, the output signal turns off.
- · Use Pr. 157 OL signal output timer to set whether the OL signal is output immediately or after a preset period of time.
- · This operation is also performed when the regeneration avoidance function  $\sigma L$  (overvoltage stall) is executed.

Pr. 157 Setting	Description						
0 (initial value)	Output immediately						
0.1 to 25	Output after the set time (s) has elapsed						
9999	Not output						

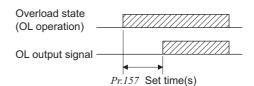


#### **REMARKS**


• The OL signal is assigned to the terminal OL in the initial setting. The OL signal can also be assigned to the other terminal by setting "3 (positive logic) or 103 (negative logic)" to any of *Pr. 190 to Pr. 190 (output terminal function selection)*.

#### CAUTION

- · If the frequency has fallen to 0.5Hz by stall prevention operation and remains for 3s, an alarm (E.OLT) appears to shutoff the inverter output.
- · When terminal assignment is changed using *Pr. 190 to Pr. 196 (output terminal function selection)*, the other functions may be affected. Please make setting after confirming the function of each terminal.

# (3) Setting of stall prevention operation in high frequency range (Pr. 22, Pr. 23, Pr. 66)

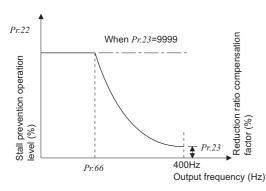

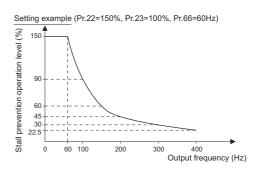

During high-speed operation above the rated motor frequency, acceleration may not be made because the motor current does not increase. If operation is performed in a high frequency range, the current at motor lockup becomes smaller than the rated output current of the inverter, and the protective function (OL) is not executed if the motor is at a stop.

To improve the operating characteristics of the motor in this case, the stall prevention level can be reduced in the high frequency range. This function is effective for performing operation up to the high-speed range on a centrifugal separator etc. Normally, set 60Hz in Pr. 66 and 100% in Pr. 23.

· Formula for stall prevention operation level


Stall prevention operation level (%)= A + B 
$$\times \left[\frac{Pr.\ 22 - A}{Pr.\ 22 - B}\right] \times \left[\frac{Pr.\ 23 - 100}{100}\right]$$

However, A = 
$$\frac{Pr. 66(Hz) \times Pr. 22(\%)}{\text{Output frequency (H)}}, B = \frac{Pr. 66(Hz) \times Pr. 22(\%)}{400Hz}$$


· When *Pr. 23 Stall prevention operation level compensation factor at double speed* = "9999" (initial value), the stall prevention operation level is kept constant at the *Pr. 22* setting up to 400Hz.

# (4) Set multiple stall prevention operation levels (Pr. 48, Pr. 49, Pr. 114, Pr. 115)


(stopping torque).

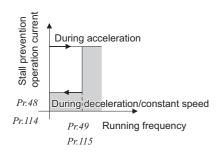

Set frequency exceeds Pr. 49(Pr.115)

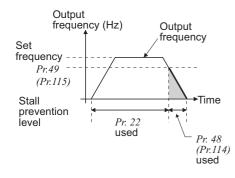

Set frequency is Pr. 49 (Pr.115) or less

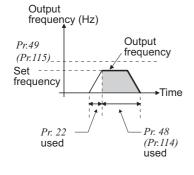

- Setting "9999" in Pr. 49 Second stall prevention operation frequency and turning the RT (X9) signal on make Pr. 48 Second stall prevention operation current valid.
- In Pr. 48 (Pr. 114), you can set the stall prevention operation level at the output frequency from 0Hz to that set in Pr. 49 (Pr. 115).
   During acceleration, however, the operation level is as set in Pr. 22.
- · This function can also be used for stop-on-contact or similar operation by decreasing the *Pr. 48 (Pr. 114)* setting to weaken the deceleration torque
- *Pr. 114* and *Pr. 115* are made valid when the X9 signal is on. For the terminal used for X9 signal input, set "9" in any of *Pr. 178 to Pr. 189* input terminal function selection to assign the X9 signal function.

Pr. 49 Setting	Pr. 115 Setting	Operation					
(initial	) value)	The second (third) stall prevention operation is not performed.					
0.01Hz t	to 400Hz	The second (third) stall prevention operation is performed according to the frequency.*1					
9999*2	Setting can not be made.	The second (third) stall prevention function is performed according to the RT signal. RT signal ON Stall level <i>Pr. 48</i> RT signal OFF Stall level <i>Pr. 22</i>					

- \*1 The smaller setting of the stall prevention operation levels set in *Pr. 22* and *Pr. 48* has a higher priority.
- \*2 When *Pr.* 868 = "4" (Stall prevention operation level analog input), the stall prevention operation level also switches from the analog input (terminal 1 input) to the stall prevention operation level of *Pr.* 48 when the RT signal turns on. (The second stall prevention operation level cannot be input in an analog form.)


# **REMARKS**

- When Pr. 49 ≠ "9999" (level changed according to frequency) and Pr. 48 = "0%", the stall prevention operation level is 0% at or higher than the frequency set in Pr. 49.
- In the initial setting, the RT signal is assigned to the RT terminal. By setting "3" to any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.

## CAUTION =

- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.
- The RT(X9) signal acts as the second (third) function selection signal and makes the other second (third) functions valid. (Refer to page 231)

# (5) Stall prevention operation level setting by terminal 1 (terminal 4) (analog variable) (*Pr. 148, Pr. 149, Pr. 858, Pr. 868*)

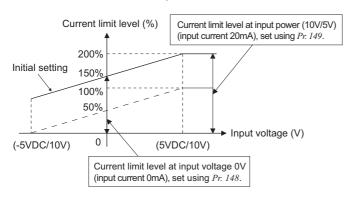

- To set the stall prevention operation level using terminal 1 (analog input), set *Pr. 868 Terminal 1 function assignment* to "4".
- · Input 0 to 5V (or 0 to 10V) to terminal 1. Select 5V or 10V using Pr. 73 Analog input selection. When Pr. 73 = "1" (initial value), 0 to  $\pm 10$ V is input.
- To set stall prevention operation level using terminal 4 (analog current input), set "4" in *Pr. 858 Terminal 4 function assignment*.
  - Input 0 to 20mA to terminal 4. The AU signal need not be turned on.
- Set the current limit level at the input voltage of 0V (0mA) in Pr. 148 Stall prevention level at 0V input
- Set the current limit level at the input voltage of 10V/5V (20mA) in Pr. 149 Stall prevention level at 10V input.

D., 050 Catting	Du 969 Cotting	V/F, Advanced Magnetic Flux Vector Control			
Pr. 858 Setting	Pr. 868 Setting	Terminal 4 function	Terminal 1 function		
	0		Frequency auxiliary		
0	(initial value)		l requertey auxiliary		
	1		Magnetic flux command		
	2	Frequency command	_		
(initial value)	3	(AU signal-ON)	_		
(Illitial value)	4 *1	(AO Signal-ON)	Stall prevention		
	5		_		
	6		Torque bias		
	9999		_		
	0	Magnetic flux command			
	(initial value)				
	1	<del></del>	Magnetic flux command		
	2		_		
1	3		_		
	4 *1	Magnetic flux command	Stall prevention		
	5	magnette hax command	_		
	6		Torque bias		
	9999		<del>-</del>		
	0		Frequency auxiliary		
	(initial value)	Stall prevention			
	1	Clair provention	Magnetic flux command		
	2		<del>-</del>		
4 *2	3	<u> </u>	_		
	4 *1	*3	Stall prevention		
	5		<del></del>		
	6	Stall prevention	Torque bias		
	9999		<del></del>		
9999	_				

<sup>\*1</sup> When Pr. 868 = "4" (analog stall prevention), other functions of terminal 1 (auxiliary input, override function, PID control) do not function.

#### REMARKS

· The fast-response current limit level cannot be set.

## (6) To further prevent an alarm stop (Pr. 154)

- · When *Pr. 154* is set to "0", the output voltage reduces during stall prevention operation. By making setting to reduce the output voltage, an overcurrent trip can further become difficult to occur.
- Use this function where a torque decrease will not pose a problem.

Pr. 154 Setting	Description			
0	Output voltage reduced			
1 (initial value)	Output voltage not reduced			

<sup>\*2</sup> When Pr. 858 = "4" (analog stall prevention), PID control and speed command from terminal 4 do not function even if the AU signal turns on.

<sup>\*3</sup> When "4" (stall prevention) is set in both *Pr.* 858 and *Pr.* 868, function of terminal 1 has higher priority and terminal 4 has no function.

# (7) Limit the stall prevention operation and fast-response current limit operation according to the operating status (*Pr. 156*)

· Refer to the following table and select whether fast-response current limit operation will be performed or not and the operation to be performed at OL signal output.

Pr. 156	Fast-response Current Limit	Opera	Prevention tion Sel tivated t activate	ection	OL Signal Output O:Operation	Pr. 156	Fast-response Current Limit	Opera O:Act	revention tion Sel ivated activate	ection	OL Signal Output O:Operation
Setting	○: Activated ●: Not activated	Acceleration	Constant speed	Deceleration	●:Operation not continued *1	Setting	O:Activated ●: Not activated	Acceleration	Constant speed	Deceleration	●:Operation not continued *1
0 (initial value)	0	0	0	0	0	16	0	0	0	0	•
1	•	0	0	0	0	17	•	0	0	0	•
2	0	•	0	0	0	18	0	•	0	0	•
3	•	•	0	0	0	19	•	•	0	0	•
4	0	0	•	0	0	20	0	0	•	0	•
5	•	0	•	0	0	21	•	0	•	0	•
6	0	•	•	0	0	22	0	•	•	0	•
7	•	•	•	0	0	23	•	•	•	0	•
8	0	0	0	•	0	24	0	0	0	0	•
9	•	0	0	•	0	25	•	0	0	•	•
10	0	•	0	•	0	26	0	•	0	•	•
11	•	•	0	•	0	27	•	•	0	•	•
12	0	0	•	•	0	28	0	0	•	•	•
13	•	0	•	•	0	29	•	0	•	•	•
14	0	•	•	•	0	30	0	•	•	•	•
15	•	•	•	•	—- *2	31	•	•	•	•	—-*2
- i		0	0	0	0	Driving	•	0	0	0	0
100 *3	⊕ Balana Ba Balana Ba Balana Ba Ba Ba Ba Ba Ba Ba Ba Ba Ba Ba Ba Ba	•	•	•	— *2	101 Regeneration	•	•	•	•	—*2

<sup>\*1</sup> When "Operation not continued for OL signal output" is selected, the " FOL " alarm code (stopped by stall prevention) is displayed and operation stopped.

\*2 Since both fast-response current limit and stall prevention are not activated, OL signal and E.OLT are not output.

#### CAUTION

- · When the load is heavy, when the lift is predetermined, or when the acceleration/deceleration time is short, stall prevention is activated and acceleration/deceleration may not be made according to the preset acceleration/deceleration time. Set *Pr. 156* and stall prevention operation level to the optimum values.
- In vertical lift applications, make setting so that the fast-response current limit is not activated. Torque may not be produced, causing a drop due to gravity.

# **⚠** CAUTION

♠ Do not set a small value as the stall prevention operation current. Otherwise, torque generated will reduce.

Always perform test operation.

Stall prevention operation during acceleration may increase the acceleration time.

Stall prevention operation performed during constant speed may cause sudden speed changes.

Stall prevention operation during deceleration may increase the deceleration time, increasing the deceleration distance.

#### ♦ Parameters referred to ♦

- · Pr. 22 Torque limit level ® Refer to page 99
- · Pr. 73 Analog input selection Refer to page 282
- · Pr. 178 to Pr. 189 (Input terminal function selection) T Refer to page 227
- · Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234
- · Pr. 570 Multiple rating setting Refer to page 154
- · Pr. 858 Terminal 4 function assignment, Pr. 868 Terminal 1 function assignment Refer to page 281

<sup>\*3</sup> The settings "100" and "101" allow operations to be performed in the driving and regeneration modes, respectively. The setting "101" disables the fast-response current limit in the driving mode.

# 4.8.5 Multiple rating (Pr.570)



You can use the inverter by changing the overload current rating specifications according to load applications. Note that the control rating of each function changes.

Parameter Number	Name	Initial Value	Setting Range	Description	
			0	SLD Ambient temperature 40°C (104°F), Overload current rating 110% 60s, 120% 3s (Inverse time characteristics)	
F70	Multiple pating acting	2	1	Ambient temperature 50°C (122°F), Overload current rating 120% 60s, 150% 3s (Inverse time characteristics)	
570	Multiple rating setting			2	ND Ambient temperature 50°C (122°F), Overload current rating 150% 60s, 200% 3s (Inverse time characteristics)
			3	HD Ambient temperature 50°C (122°F), Overload current rating 200% 60s, 250% 3s (Inverse time characteristics)	

• The initial value and setting range of the following parameters are changed by performing parameter clear and reset after changing this parameter setting.

Dauauaatau				Pr. 570	Setting		Refer
Parameter Number	Name		0	1	2 (initial value)	3	to Page
9	Electronic thermal O/L relay	Initial Value	SLD rated current *1	LD rated current *1	ND rated current *1	HD rated current *1	181
22	Stall prevention operation level	Setting Range Initial Value	0 to 400% 110%	0 to 400% 120%	0 to 400% 150%	0 to 400% 200%	99, 149
23	Stall prevention operation level compensation factor	Setting Range	0 to 150%, 9999	0 to 200%, 9999	0 to 200%, 9999	0 to 200%, 9999	149
	at double speed Second stall	Initial Value Setting Range	9999 0 to 120%	9999 0 to 150%	9999 0 to 220%	9999 0 to 280%	
48	prevention operation current	Initial Value	110%	120%	150%	200%	149
56	Current monitoring reference	Initial Value	SLD rated current *1	LD rated current *1	ND rated current *1	HD rated current *1	254
62	Reference value at acceleration	Setting Range Initial Value	0 to 120% 9999	0 to 150% 9999	0 to 220% 9999	0 to 280% 9999	178
63	Reference value at deceleration	Setting Range Initial Value	0 to 120% 9999	0 to 150% 9999	0 to 220% 9999	0 to 280% 9999	178
114	Third stall prevention operation current	Setting Range Initial Value	0 to 120% 110%	0 to 150%	0 to 220% 150%	0 to 280% 200%	149
148	Stall prevention level at 0V input	Setting Range Initial Value	0 to 120% 110%	0 to 150%	0 to 220% 150%	0 to 280% 200%	149
149	Stall prevention level at 10V input	Setting Range Initial Value	0 to 120% 120%	0 to 150%	0 to 220% 200%	0 to 280% 250%	149
150	Output current detection level	Setting Range Initial Value	0 to 120% 110%	0 to 150%	0 to 220% 150%	0 to 280% 200%	243
152	Zero current detection level	Setting Range Initial Value	0 to 120%	0 to 150%	0 to 220%	0 to 280%	243
	Stall prevention	Setting Range	0 to 120%	0 to 150%	0 to 220%	0 to 280%	
165	operation level for restart	Initial Value	110%	120%	150%	200%	260
271	High-speed setting maximum current	Setting Range Initial Value	0 to 120% 50%	0 to 150% 50%	0 to 220% 50%	0 to 280% 50%	367

272	Middle-speed setting	Setting Range	0 to 120%	0 to 150%	0 to 220%	0 to 280%	367
212	minimum current	Initial Value	100%	100%	100%	100%	307
279	Brake opening current	Setting Range	0 to 220%	0 to 220%	0 to 220%	0 to 280%	213
219	brake opening current	Initial Value	130%	130%	130%	130%	213
557	Current average value monitor signal output reference current	Initial Value	SLD rated current *1	LD rated current *1	ND rated current *1	HD rated current *1	382
893	Energy saving monitor reference (motor capacity)	Initial Value	LD/SLD value of Applied moter Capacity	LD value of Applied moter Capacity *1	ND rated current *1	HD rated current *1	274

=== CAUTION =

When Pr. 570 = "0" (initial value), Pr.260 PWM frequency automatic switchover becomes invalid. (Refer to page 279.)

 <sup>\*1</sup> The rated current differs according to the inverter capacity. Refer to rated specifications (page 430).
 \*2 For FR-A720-02150 (FR-A740-01100) or less, applied motor capacity is LD value. For A720-02880 (FR-A740-01440) or more, applied motor capacity is SLD value. Refer to rated specifications (page 430).



# 4.9 Limit the output frequency

Purpose	Parameter that must be Set		Refer to Page
Set upper limit and lower limit of output frequency	Maximum/minimum frequency Pr. 1, Pr. 2, Pr. 18		156
Perform operation by avoiding machine resonance points	Frequency jump	Pr. 31 to Pr. 36	157

# 4.9.1 Maximum/minimum frequency (Pr. 1, Pr. 2, Pr. 18)

**Pr.0**☐ page 143

You can limit the motor speed. Clamp the upper and lower limits of the output frequency.


page 143	
<b>Pr.3</b> ☐ page 158	
Pr.17 /	
page 230	
page 158	

Parameter Number	Name	Initial Value 200V class (400V class)		Setting Range	Description	
1	Maximum frequency	02150 (01100) or less	120Hz	0 to 120Hz	Set the upper limit of the output	
'	Maximum frequency	02880 (01440) or more	60Hz	0 (0 120112	frequency.	
2	Minimum frequency	0Hz		0 to 120Hz	Set the lower limit of the output frequency.	
40 *	High speed maximum	02150 (01100) or less	120Hz	120 to 400Hz	Set when performing the	
18 *	frequency	02880 (01440) or more	60Hz	120 (0 400H2	operation at 120Hz or more.	

# e (1) Set maximum frequency e uency . Set the upper limit of the output

# Set the upper limit of the output frequency in *Pr. 1 Maximum frequency*. If the frequency of the frequency command entered is higher than the setting, the output frequency is clamped at the maximum frequency.

· When you want to perform operation above 120Hz, set the upper limit of the output frequency to *Pr. 18 High speed maximum frequency*. (When *Pr. 18* is set, *Pr. 1* automatically switches to the frequency of *Pr. 18*. When *Pr. 18* is set, *Pr. 18* automatically switches to the frequency of *Pr. 1*.)

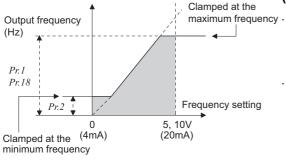

#### REMARKS

· When performing operation above 60Hz using the frequency setting analog signal, change *Pr. 125 (Pr. 126) (frequency setting gain)*. If only *Pr. 1* or *Pr. 18* is changed, operation above 60Hz cannot be performed.

#### (2) Set minimum frequency

- · Use Pr. 2 Minimum frequency to set the lower limit of the output frequency.
- The output frequency is clamped by the *Pr. 2* setting even if the set frequency is lower than the *Pr. 2* setting (The frequency will not decrease to the *Pr. 2* setting.)

#### **REMARKS**

- · When Pr. 15 Jog frequency is equal to or less than Pr. 2, the Pr. 15 setting has precedence over the Pr. 2 setting.
- · When stall prevention is activated to decrease the output frequency, the output frequency may drop to Pr. 2 or below.

# **CAUTION**

If the *Pr. 2* setting is higher than the *Pr. 13 Starting frequency* value, note that the motor will run at the set frequency according to the acceleration time setting by merely switching the start signal on, without entry of the command frequency.

#### ◆ Parameters referred to ◆

Pr. 13 Starting frequency Refer to page 174


Pr. 15 Jog frequency Refer to page 167

# 4.9.2 Avoid mechanical resonance points (Frequency jump) (Pr. 31 to Pr. 36)

When it is desired to avoid resonance attributable to the natural frequency of a mechanical system, these parameters allow resonant frequencies to be jumped.



Parameter Number	Name	Initial Value	Setting Range	Description
31	Frequency jump 1A	9999	0 to 400Hz, 9999	
32	Frequency jump 1B	9999	0 to 400Hz, 9999	144 45 044 05 044 05:
33	Frequency jump 2A	9999	0 to 400Hz, 9999	1A to 1B, 2A to 2B, 3A to 3B is frequency jumps
34	Frequency jump 2B	9999	0 to 400Hz, 9999	9999: Function invalid
35	Frequency jump 3A	9999	0 to 400Hz, 9999	
36	Frequency jump 3B	9999	0 to 400Hz, 9999	

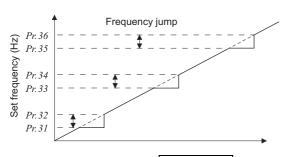

- Up to three areas may be set, with the jump frequencies set to either the top or bottom point of each area.
- The settings of frequency jumps 1A, 2A, 3A are jump points, and operation is performed at these frequencies in the jump areas.

To fix the frequency to 30Hz in the range 30Hz to 35Hz, set 35Hz in Pr. 34 and 30Hz in Pr. 33.

 To jump the frequency to 35Hz in the range 30Hz to 35Hz, set 35Hz in Pr. 33 and 30Hz in Pr. 34.

# = CAUTION

During acceleration/deceleration, the running frequency within the set area is valid.

Example 2



# 4.10 Set V/F pattern


Purpose	Parameter	Parameter that must be Set		
Set motor ratings	Base frequency, base frequency voltage	Pr. 3, Pr. 19, Pr. 47, Pr. 113	158	
Select a V/F pattern according to applications	Load pattern selection	Pr. 14	160	
Automatically set a V/F pattern for elevators	Elevator mode (automatic acceleration)	Pr. 61, Pr. 64, Pr. 292	162	
Use special motor	Adjustable 5 points V/F	Pr. 71, Pr. 100 to Pr. 109	164	

# 4.10.1 Base frequency, voltage (Pr. 3, Pr. 19, Pr. 47, Pr. 113)

Pr. 2 Used to adjust the inverter outputs (voltage, frequency) to the motor rating.

page 156
<b>Pr.4</b> ☐ page 165
<b>Pr.18</b> page 156
<b>Pr.20</b> page 172
<b>Pr.46</b> page 143
<b>Pr.48</b>
<b>Pr.112</b> page 143
<b>Pr.114</b>

Parameter Number	Name	Initial Value	Setting Range	Description
3	Base frequency	60Hz	0 to 400Hz	Set the frequency when the motor rated torque is generated. (50Hz/60Hz)
			0 to 1000V	Set the base voltage.
19	Base frequency voltage	9999	8888	95% of power supply voltage
			9999	Same as power supply voltage
47	Second V/F (base frequency)	9999	0 to 400Hz	Set the base frequency when the RT signal is on.
			9999	Second V/F invalid
113 Third V/F (base frequency)	Third V/F (base frequency)	9999	0 to 400Hz	Set the base frequency when the X9 signal is ON.
			9999	Third V/F is invalid

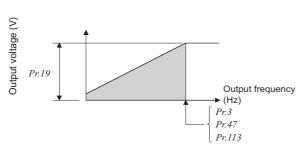

# (1) Setting of base frequency (Pr. 3)

- · When operating a standard motor, generally set the rated frequency of the motor to *Pr. 3 Base frequency*. When running the motor using commercial power supply-inverter switch-over operation, set *Pr. 3* to the same value as the power supply frequency.
- If the frequency given on the motor rating plate is "50Hz" only, always set to "50Hz". Leaving the base frequency unchanged from "60Hz" may make the voltage too low and the torque insufficient. It may result in an inverter trip due to overload. Special care must be taken when "1" (reduced torque load) is set in *Pr. 14 Load pattern selection*.
- When using the Mitsubishi constant-torque motor, set Pr. 3 to 60Hz.

# (2) Set multiple base frequencies (Pr. 47, Pr. 113)

- · When you want to change the base frequency when switching multiple motors with one inverter, use the *Pr. 47 Second V/F (base frequency)*.
- · Pr. 47 Second V/F (base frequency) is made valid when the RT signal in ON and Pr. 113 Third V/F (base frequency) is made valid when the X9 signal is on. Assign the terminal for X9 signal input using any of Pr. 178 to Pr. 189 (input terminal function selection).

#### **REMARKS**

- The RT(X9) signal acts as the second (third) function selection signal and makes the other second (third) functions valid. (Refer to page 231)
- In the initial setting, the RT signal is assigned to the RT terminal. By setting "3" to any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.



- Use Pr. 19 Base frequency voltage to set the base voltage (e.g. rated motor voltage).
- · If the setting is less than the power supply voltage, the maximum output voltage of the inverter is as set in Pr. 19.
- · Pr. 19 can be utilized in the following cases.
  - (a) When regeneration frequency is high (e.g. continuous regeneration)During regeneration, the output voltage becomes higher than the reference and may cause an overcurrent trip (E.OC□) due to an increased motor current.
  - (b) When power supply voltage variation is large
    When the power supply voltage exceeds the rated voltage of the motor, speed variation or motor overheat may be caused by excessive torque or increased motor current.
  - (c) When you want to expand constant-power characteristic range
    To expand the constant-power range at the base frequency or less, set a value greater than the power supply voltage to *Pr. 19*.
- Set parameters as below when running the vector control dedicated motor (SF-V5RU, SF-VR) under V/F control.

Motor type	Pr. 19 Setting	Pr. 3 Setting
SF-V5RU-3.7kW or less	170V	
SF-V5RU-5.5kW or more	160V	
SF-V5RUH-3.7kW or less	340V	50Hz
SF-V5RUH-5.5kW or more	320V	30H2
SF-VR	160V	
SF-VRH	320V	

#### **REMARKS**

When operation is discontinued under vector control due to failure of an encoder, etc., setting "20" in *Pr.800 Control method selection* enables V/E control operation.

#### **CAUTION**

- · When advanced magnetic flux vector control, real sensorless vector control or vector control is selected, *Pr. 3, Pr. 47, Pr. 113* and *Pr. 19* are made invalid and *Pr. 83* and *Pr. 84* are made valid.
  - Note that *Pr. 3* or *Pr. 47* and *Pr. 113* values are made valid as inflection points of S-pattern when *Pr. 29 Acceleration/deceleration pattern selection* = "1" (S-pattern acceleration/deceleration A).
- · When Pr. 71 Applied motor is set to "2" (adjustable 5 points V/F characteristic), the Pr. 47 and Pr. 113 setting becomes invalid. In addition, you cannot set "8888" or "9999" in Pr. 19.
- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.

# ♦ Parameters referred to ♦

Pr. 14 Load pattern selection Refer to page 160

Pr. 29 Acceleration/deceleration pattern selection Refer to page 175

Pr. 71 Applied motor Refer to page 184

Pr. 80 Motor capacity Refer to page 92.

Pr. 83 Motor rated voltage, Pr. 84 Rated motor frequency Refer to page 186.

Pr. 178 to Pr. 189 (input terminal function selection) \*\* Refer to page 227.

Advanced magnetic flux vector control Refer to page 145.

Real sensorless vector control Refer to page 92.




# 4.10.2 Load pattern selection (Pr. 14)



You can select the optimum output characteristic (V/F characteristic) for the application and load characteristics.

Parameter Number	Name	Initial Value	Setting Range	Description	
	14 Load pattern selection		0	For constant torque load	
			1	For reduced-torque load	
		0		2	For constant torque elevators (at reverse rotation boost of 0%)
14			3	For constant torque elevators (at forward rotation boost of 0%)	
	Zoua pattorii oolootion			4	RT signal onfor constant torque load RT signal offfor constant torque elevators at reverse rotation boost of 0%
			5	RT signal onfor constant torque load RT signal offfor constant torque elevators at forward rotation boost of 0%	

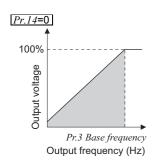

## (1) For constant-torque load (setting "0", initial value)

- · At or less than the base frequency, the output voltage varies linearly with the output frequency.
- · Set this value when driving the load whose load torque is constant even if the speed varies, e.g. conveyor, cart or roll drive.

# POINT


If the load is a fan or pump, select "for rated torque load (setting "0")" in any of the following cases.

- · When a blower of large moment of inertia (J) is accelerated in a short time
- · For constant-torque load such as rotary pump or gear pump
- · When load torque increases at low speed, e.g. screw pump

# Pr.14=1 100% Pr.3 Base frequency Output frequency (Hz)

## (2) For variable-torque load (setting "1")

- · At or less than the base frequency, the output voltage varies with the output frequency in a square curve.
- Set this value when driving the load whose load torque varies in proportion to the square of the speed, e.g. fan or pump.

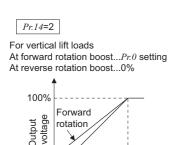

Reverse

rotation

Output frequency (Hz)

Base frequency

For vertical lift loads
At forward rotation boost...0%
At reverse rotation boost...Pr.0 setting

Reverse rotation

Pr.0

Forward rotation

Output frequency (Hz)

Base frequency

# (3) Elevator load applications (setting values "2, 3")

- Set "2" when a vertical lift load is fixed as power driving load at forward rotation and regenerative load at reverse rotation.
- Pr. 0 Torque boost is valid during forward rotation and torque boost is automatically changed to "0%" during reverse rotation.
- Set "3" for an elevated load that is in the driving mode during reverse rotation and in the regenerative load mode during forward rotation according to the load weight, e.g. counterweight system.

#### REMARKS

 When torque is continuously regenerated as vertical lift load, it is effective to set the rated voltage in Pr. 19 Base frequency voltage to prevent trip due to current at regeneration.

Pr:0

Pr. 14 Setting	RT(X17) Signal	Output Characteristics
4	ON	For constant torque load (same as when the setting is "0")
4	OFF	For elevators at reverse rotation boost of 0% (same as when the setting is "2")
5	ON	For constant torque load (same as when the setting is "0")
5	OFF	For elevators at forward rotation boost of 0% (same as when the setting is "3")

# (4) Change load pattern selection using terminal (setting values are "4, 5")

- Output characteristic can be switched between for constant torque load and for elevator using the RT signal or X17 signal.
- For the terminal used for X17 signal input, set "17" in any of *Pr. 178 to Pr. 189* (input terminal function selection) to assign the function.

When X17 is assigned, switchover by the RT signal is made invalid.

# **REMARKS**

• The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, the RT signal can be assigned to the other terminal.

#### = CAUTION =

- · When advanced magnetic flux vector control, real sensorless vector control or vector control is selected, this parameter setting is ignored.
- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal. When the RT signal is on, the other second functions are also valid.

#### ◆ Parameters referred to ◆

Pr. 0 Torque boost Refer to page 143

Pr. 3 Base frequency Refer to page 158

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

Advanced magnetic flux vector control Refer to page 145.

Real sensorless vector control Refer to page 92.



# 4.10.3 Elevator mode (automatic acceleration/deceleration) (Pr. 61, Pr. 64, Pr. 292)



Operation matching a load characteristic of elevator with counterweight can be performed.




Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description	
			02150 (01100) or less	0 to 500A	Set the reference current for elevator mo	
61	Reference current	9999	02880 (01440) or more	0 to 3600A	Set the reference current for	elevator mode.
			99	99	Rated inverter current value	reference
64	Starting frequency for elevator mode	9999	0 to	10%	Set the starting frequency for the elevator mode.	
	elevator illode		9999		Starting frequency 2Hz	
	Automatic acceleration/ deceleration	0	0		Normal mode	
			1		Minimum acceleration/ deceleration (without brake)	
			1	1	Minimum acceleration/ deceleration (with brake)	(Refer to page 178.)
292			3		Optimum acceleration/ deceleration	
			5		Elevator mode 1 (stall prevention operation le	vel 150%)
			(	6	Elevator mode 2 (stall prevention operation level 180%)	
			7,	. 8	Brake sequence mode 1, 2 (Re	efer to page 213.)

## (1) Elevator mode

- · When "5" or "6" is set in Pr. 292 Automatic acceleration/deceleration, elevator mode is selected and each setting is changed as in the table below.
- · Enough torque is generated during power driving and the torque boost value is automatically changed during regeneration and operation without load so that overcurrent protection function does not activate due to over excitation.

	Normal Mode	Elevator Mode		
	Normal wode	Pr. 292=5	Pr. 292=6	
Torque boost Pr. 0 (6/4/3/2%)		Changes according to the output current (right chart)		
Starting frequency	Pr. 13 (0.5Hz)	Pr. 64 (2Hz) Accelerate after maintaining 100ms		
Base frequency voltage	Base frequency voltage Pr. 19 (9999)		0V	
Stall prevention operation level	Pr. 22 (150%) etc.	150% 180%		

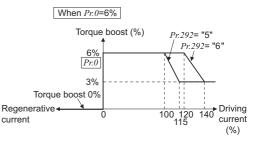

· When operating the elevator with load more than the rated inverter current, the maximum torque may become insufficient. For the elevator without counterweight, setting "2 or 3" (for elevator load) in Pr. 14 Load pattern selection and an appropriate value in Pr. 19 Base frequency voltage will generate larger maximum torque than when elevator mode is selected.

#### **REMARKS**

Stall prevention operation level automatically decreases according to the electronic thermal relay function cumulative value, to prevent inverter overload shut-off (E.THT, E.THM).

When lift mode (Pr. 292=5, 6) is set with automatic acceleration / deceleration set, the stall prevention operation level is changed as shown below.

		SLD	LD	ND	HD
		Pr. 570=0	Pr. 570=1	Pr. 570=2	Pr. 570=3
Stall prevention	Pr. 292=5	110%	120%	150%	200%
operation level	Pr. 292=6	115%	140%	180%	230%

# (2) Adjustment of elevator mode (Pr. 61, Pr. 64)

· By setting the adjustment parameters Pr. 61 and Pr. 64, the application range can be made wider.

Parameter Number	Name	Setting Range 200V class (400V class)		Description	
_ ,		02150 (01100) or less	0 to 500A	For example, when the motor and inverter are different in	
h'i	Reference current	02880 (01440) or more	0 to 3600A	capacity, set the rated motor current value. Set reference current (A) of the stall prevention operation level	
			nitial value)	The rated inverter output current is defined as reference.	
64	Starting		o 10Hz	Set the starting frequency for the elevator mode.	
64	frequency for elevator mode	9999 (ir	nitial value)	Starting frequency 2Hz	

# REMARKS

- Even if automatic acceleration/deceleration has been selected, inputting the jog signal (jog operation), RT signal (second function selection) or X9 signal (third function selection) during an inverter stop will switch to the normal operation and give priority to jog operation or second and third function selection. Note that JOG and RT signal input is invalid even if JOG signal and RT signal are input during operation with acceleration/deceleration selected.
- Elevator mode is invalid when advanced magnetic flux vector, real sensorless vector control or vector control is selected.
- · Since the *Pr.* 61 and *Pr.* 64 settings automatically return to the initial value (9999) if the *Pr.* 292 setting is changed, set *Pr.* 292 first when you need to set *Pr.* 61 and *Pr.* 64.




# 4.10.4 Adjustable 5 points V/F (Pr. 71, Pr. 100 to Pr. 109)

**Pr. 70**☐ page 268 Pr. 72 Pr. 96

/Pr. 110/ page 172

A dedicated V/F pattern can be made by freely setting the V/F characteristic between a startup and the base frequency and base voltage under V/F control (frequency voltage/frequency). The torque pattern that is optimum for the machine's characteristic can be set.

Parameter Number	Name	Initial Value Setting Range		Description
71	Applied motor	0	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54	Set "2" for adjustable 5 points V/F control.
100	V/F1(first frequency)	9999	0 to 400Hz, 9999	
101	V/F1(first frequency voltage)	0V	0 to 1000V	
102	V/F2(second frequency)	9999	0 to 400Hz, 9999	
103	V/F2(second frequency voltage)	0V	0 to 1000V	
104	V/F3(third frequency)	9999	0 to 400Hz, 9999	Set each points (frequency, voltage) of V/F pattern.
105	V/F3(third frequency voltage)	0V	0 to 1000V	9999: No V/F setting
106	V/F4(fourth frequency)	9999	0 to 400Hz, 9999	J
107	V/F4(fourth frequency voltage)	0V	0 to 1000V	
108	V/F5(fifth frequency)	9999	0 to 400Hz, 9999	
109	V/F5(fifth frequency voltage)	0V	0 to 1000V	

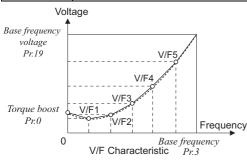

- Any V/F characteristic can be provided by presetting the parameters of V/F1 (first frequency voltage/first frequency) to V/F5.
- For a machine of large static friction coefficient and small dynamic static friction coefficient, for example, set a V/F pattern that will increase the voltage only in a low-speed range since such a machine requires large torque at a start.

#### (Setting procedure)

- 1)Set the rated motor voltage in Pr. 19 Base frequency voltage. (No function at the setting of "9999" (initial value) or "8888".) 2)Set *Pr. 71 Applied motor* to "2" (Adjustable 5 points V/F characteristic).
- 3) Set the frequency and voltage you want to set in Pr. 100 to Pr. 109.

# CAUTION

Set this parameter correctly according to the motor used.

Incorrect setting may cause the motor to overheat and burn.

#### CAUTION

- Adjustable 5 points V/F characteristics function only under V/F control. They do not function for advanced magnetic flux vector control, real sensorless vector control or vector control.
- When Pr. 19 Base frequency voltage = "8888" or "9999", Pr. 71 cannot be set to "2". To set Pr. 71 to "2", set the rated voltage value in Pr. 19.
- When the frequency values at each point are the same, a write disable error (£r !) appears.
- Set the points (frequencies, voltages) of Pr. 100 to Pr. 109 within the ranges of Pr. 3 Base frequency and Pr. 19 Base frequency voltage.
- When "2" is set in Pr. 71, Pr. 47 Second V/F (base frequency) and Pr. 113 Third V/F (base frequency) will not function.
- When Pr. 71 is set to "2", the electronic thermal relay function makes calculation as a standard motor.

#### **REMARKS**

- A greater energy saving effect can be expected by combining Pr. 60 Energy saving control selection and adjustable 5 points V/F.
- For the FR-A720-00240, 00330 and FR-A740-00120, 00170, the Pr. 0 Torque boost and Pr. 12 DC injection brake operation voltage settings are automatically changed according to the Pr. 71 setting as follows.

Pr. 71	Standard Motor Setting 0, 2, 3 to 8, 20, 23, 24, 40, 43, 44	Constant Torque Motor Setting 1, 13 to 18, 50, 53, 54
Pr. 0	3%	2%
Pr. 12	4%	2%

## ◆ Parameters referred to ◆

- · Pr. 3 Base frequency, Pr. 19 Base frequency voltage Refer to page 158
- · Pr. 12 DC injection brake operation voltage Refer to page 199
- · Pr. 47 Second V/F (base frequency), Pr. 113 Third V/F (base frequency) Refer to page 158
- · Pr. 60 Energy saving control selection Refer to page 273
- · Pr. 71 Applied motor, Pr. 450 Second applied motor Refer to page 184
- · Advanced magnetic flux vector control \*\* Refer to page 145
- Real sensorless vector control Refer to page 92
- Vector control Refer to page 92

/ Pr. 3

Pr. 7
Pr. 7
Pr. 23
Pr. 23
Pr. 28
Pr. 28
Pr. 28
Pr. 28
Pr. 196
Pr. 196
Pr. 240
Pr. 240

# 4.11 Frequency setting by external terminals


Purpose	Parameter	Refer to Page	
Make frequency setting by combination of terminals	Multi-speed operation	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239	165
Perform jog operation	Jog operation	Pr. 15, Pr. 16	167
Added compensation for multi-speed setting and remote setting	Multi-speed input compensation selection	Pr. 28	169
Infinitely variable speed setting by terminals	Remote setting function	Pr. 59	169


# 4.11.1 Multi-speed setting operation (Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239)

Can be used to change the preset speed in the parameter with the contact terminals. Any speed can be selected by merely turning on-off the contact signals (RH, RM, RL, REX signals).

	<del>_</del>			
Parameter Number	Name	Initial Value	Setting Range	Description
4	Multi-speed setting (high speed)	60Hz	0 to 400Hz	Set the ferquency when RH turns on.
5	Multi-speed setting (middle speed)	30Hz	0 to 400Hz	Set the ferquency when RM turns on.
6	Multi-speed setting (low speed)	10Hz	0 to 400Hz	Set the ferquency when RL turns on.
24	Multi-speed setting (speed4)	9999	0 to 400Hz, 9999	
25	Multi-speed setting (speed 5)	9999	0 to 400Hz, 9999	
26	Multi-speed setting (speed 6)	9999	0 to 400Hz, 9999	
27	Multi-speed setting (speed 7)	9999	0 to 400Hz, 9999	
232	Multi-speed setting (speed 8)	9999	0 to 400Hz, 9999	Frequency from speed 4 to speed 15
233	Multi-speed setting (speed 9)	9999	0 to 400Hz, 9999	can be set according to the combination of the RH, RM, RL and
234	Multi-speed setting (speed 10)	9999	0 to 400Hz, 9999	REX signals.
235	Multi-speed setting (speed 11)	9999	0 to 400Hz, 9999	9999: not selected
236	Multi-speed setting (speed 12)	9999	0 to 400Hz, 9999	Todos. Not solociou
237	Multi-speed setting (speed 13)	9999	0 to 400Hz, 9999	]
238	Multi-speed setting (speed 14)	9999	0 to 400Hz, 9999	
239	Multi-speed setting (speed 15)	9999	0 to 400Hz, 9999	1

The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

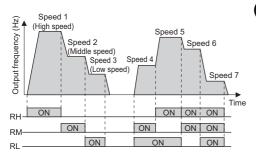

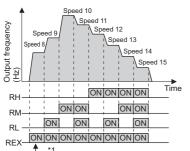

# (1) Multi-speed setting (Pr. 4 to Pr. 6)


· Operation is performed at the frequency set in  $Pr.\ 4$  when the RH signal turns on,  $Pr.\ 5$  when the RM signal turns on, and  $Pr.\ 6$  when the RL signal turns on.


#### **REMARKS**

- In the initial setting, if two or three speeds are simultaneously selected, priority is given to the set frequency of the lower signal. For example, when the RH and RM signals turn on, the RM signal (Pr. 5) has a higher priority.
- The RH, RM, RL signals are assigned to the terminal RH, RM, RL in the initial setting.
- By setting "0 (RL)", "1 (RM)", "2 (RH)" in any of *Pr.178 to Pr.189 (input terminal function assignment)*, the signals can be assigned to other terminals.

# (2) Multi-speed setting higher than speed 4 (Pr. 24 to Pr. 27, Pr. 232 to Pr. 239)

- · Frequency from speed 4 to speed 15 can be set according to the combination of the RH, RM, RL and REX signals. Set the running frequencies in *Pr. 24 to Pr. 27, Pr. 232 to Pr. 239*. (In the initial value setting, speed 4 to speed 15 are unavailable.).
- For the terminal used for REX signal input, set "8" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function.
- \* When "9999" is set in *Pr. 232 Multi-speed setting (speed 8)*, operation is performed at frequency set in *Pr. 6* when RH, RM and RL are turned off and REX is turned on.

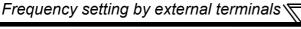

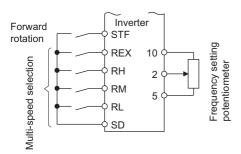

**Multi-Speed Operation Connection Example** 

## **REMARKS**

- The priorities of the frequency commands by the external signals are "jog operation > multi-speed operation > terminal 4 analog input > terminal 2 analog input". (Refer to page 288 for the frequency command by analog input)
- Valid in external operation mode or PU/external combined operation mode (Pr. 79 = "3" or "4").
- Multi-speed parameters can also be set in the PU or external operation mode.
- Pr. 24 to Pr. 27 and Pr. 232 to Pr. 239 settings have no priority between them.
- When a value other than "0" is set in Pr. 59 Remote function selection, the RH, RM and RL signals are used as the remote setting signals and the multi-speed setting becomes invalid.
- When making analog input compensation, set "1" in Pr. 28 Multi-speed input compensation selection.

#### = CAUTION :

Changing the terminal assignment using Pr. 178 to Pr. 189 (input terminal function selection) may affect the other functions. Make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 15 Jog frequency Refer to page 167

Pr. 28 Multi-speed input compensation selection Refer to page 169

Pr. 59 Remote function selection Refer to page 169

Pr. 79 Operation mode selection Refer to page 306

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

# 4.11.2 Jog operation (Pr. 15, Pr. 16)

You can set the frequency and acceleration/decelertion time for jog operation. Jog operation can be performed from either the outside or PU.

Can be used for conveyor positioning, test operation, etc.




Parameter Number	Name	Initial Value	Setting Range	Description
15	Jog frequency	5Hz	0 to 400Hz	Set the frequency for jog operation.
16	Jog acceleration/ deceleration time	0.5s	0 to 3600/360s*	Set the acceleration/deceleration time for jog operation. Set the time taken to reach the frequency set in <i>Pr. 20 Acceleration/deceleration reference frequency</i> for acceleration/deceleration time. (Initial value is 60Hz)  The acceleration and deceleration time cannot be set separately.

The above parameters are displayed as simple mode parameters only when the parameter unit (FR-PU04/FR-PU07) is connected. When the operation panel (FR-DU07) is connected, the above parameters can be set only when *Pr. 160 User group read selection* = "0". (*Refer to page 304*)

## (1) Jog operation from outside

· When the jog signal is on, a start and stop can be made by the start signal (STF, STR). (The jog signal is assigned to the terminal JOG in the initial setting)

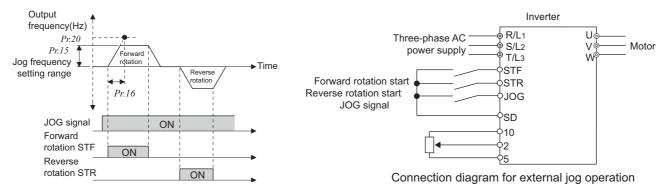


# - Operation

- ation ———Indication
- 1. Screen at powering on
  - Confirm that the external operation mode is selected. ([EXT] lit)

If not displayed, press (PU) to change to the external [EXT] operation mode.

If the operation mode still does not change, set Pr. 79 to change to the external operation mode.

- 2. Turn the JOG switch on.
- 3. Turn the start switch (STF or STR) on.
  - The motor rotates while start switch (STF or STR) is ON.
  - · Rotates at 5Hz. (Initial value of Pr. 15)
- 4. Turn the start switch (STF or STR) off.

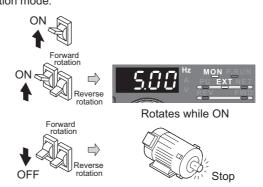


#### **REMARKS**

- · When you want to change the running frequency, change Pr. 15 Jog frequency . (initial value "5Hz")
- · When you want to change the running frequency, change Pr. 16 Jog acceleration/deceleration time . (initial value "0.5s")

<sup>\*</sup> When the setting of *Pr. 21 Acceleration/deceleration time increments* is "0" (initial value), the setting range is "0 to 3600s" and the setting increments are "0.1s", and when the setting is "1", the setting range is "0 to 360s" and the setting increments are "0.01s"

# (2) Jog operation from PU

 Set the PU (FR-DU07/FR-PU07/FR-PU04) to the jog operation mode. Operation is performed only while the start button is pressed.

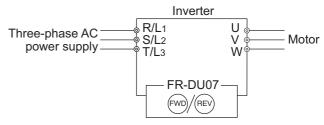

# Operation -Indication -1. Confirmation of the RUN indication and operation mode indication The monitor mode should have been selected. The inverter should be at a stop. 2. Press (PU) to choose the PU JOG operation mode. 3. Press (FWD) (or (REV)) Hold down. - While $\left( \mathrm{FWD}\right)$ (or $\left( \mathrm{REV}\right) )$ is pressed, the motor rotates. · Rotates at 5Hz. (initial value of Pr. 15) 4. Release (FWD) (or (REV)). (FWD) Release [When changing the frequency of PU JOG operation] The parameter number read 5.Press (MODE) to choose the parameter previously settina mode. appears. **6.**Turn until *Pr. 15 JOG frequency* appears. 7.Press (SET) to show the currently set value. (5Hz) 8.Turn to set the value to 9.Press (SET) to set.

#### = CAUTION

· When *Pr. 29 Acceleration/deceleration pattern selection=* "1" (S-pattern acceleration/deceleration A), the acceleration/deceleration time is the period of time required to reach *Pr. 3 Base frequency*.

Flicker · · · Parameter setting complete!!

The Pr. 15 setting should be equal to or higher than the Pr. 13 Starting frequency setting.

10. Perform the operations in steps 1 to 4. The motor rotates at 10Hz.

- The JOG signal can be assigned to the input terminal using any of *Pr. 178 to Pr. 189 (input terminal function selection)*. When terminal assignment is changed, the other functions may be affected. Please make setting after confirming the function of each terminal.
- During jog operation, the second acceleration/deceleration via the RT signal cannot be selected. (The other second functions are valid. (Refer to page 231))
- When Pr. 79 Operation mode selection = "4", push (FWD)/(REV) of the PU (FR-DU07/FR-PU04/FR-PU07) to make a start or push

to make a stop.

- This function is invalid when Pr. 79 = "3" or "6".
- Jog operation is invalid under position control.

## ◆ Parameters referred to ◆

- · Pr. 13 Starting frequency Refer to page 174
- · Pr. 29 Acceleration/deceleration pattern selection Refer to page 175
- · Pr. 20 Acceleration/deceleration reference frequency, Pr. 21 Acceleration/deceleration time increments \*\* Refer to page 172
- · Pr. 79 Operation mode selection Refer to page 306
- · Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

# 4.11.3 Input compensation of multi-speed and remote setting (Pr. 28)

By inputting the frequency setting compensation signal (terminal 1, 2), the speed (frequency) can be compensated for relative to the multi-speed setting or the speed setting by remote setting function.

Pr.27	
⊕ page 165	
Pr. 29	ì
□ page 175	ĺ

Parameter Number	Name	Initial Value	Setting Range	Description
	Multi-speed input	0	0	Without compensation
	compensation selection	U	1	With compensation

#### **REMARKS**

- · Select the compensation input voltage (0 to ±5V, 0 to ±10) and used terminal (terminal 1, 2) using Pr. 73 Analog input selection.
- · When using terminal 1 for compensation input, set "0" (initial value) in Pr. 868 Terminal 1 function assignment.

#### ◆ Parameters referred to ◆

Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239 (multi-speed operation) Refer to page 165

Pr. 73 Analog input selection Refer to page 282

Pr. 59 Remote function selection Refer to page 169


Pr. 868 Terminal 1 function assignment Refer to page 281


# 4.11.4 Remote setting function (Pr. 59)

• Even if the operation panel is located away from the enclosure, you can use contact signals to perform continuous variable-speed operation, without using analog signals.



Parameter	Name	Initial Value		Description	
Number			Setting Range	RH, RM, RL signal function	Frequency setting storage function
		0	0	Multi-speed setting	_
	Remote function selection		1	Remote setting	Yes
50			2	Remote setting	No
59			3	Remote setting	No (Turning STF/STR off clears remotely- set frequency.)

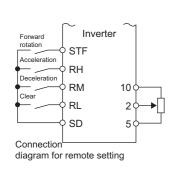

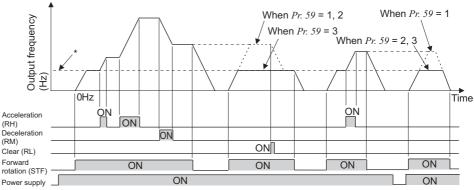

\* External operation frequency (other than multi-speed) or PU running frequency


## (1) Remote setting function

- · Use *Pr. 59* to select whether the remote setting function is used or not and whether the frequency setting storage function in the remote setting mode is used or not.
  - When *Pr. 59* is set to any of "1 to 3" (remote setting function valid), the functions of the RH, RM and RL signals are changed to acceleration (RH), deceleration (RM) and clear (RL).
- · When the remote function is used, the output frequency of the inverter can be compensated for as follows:
- External operation ... Frequency set by RH/RM operation + external running frequency or PU running frequency (other than multi-speed).

(When making analog input compensation, set "1" in Pr. 28 Multi-speed input compensation selection

When  $Pr.\ 28$  is set to "0" and acceleration/deceleration is made to reach the set frequency of the analog voltage input (terminal 2 or terminal 4) by RH/RM, the auxiliary input by terminal 1 becomes invalid.)

PU operation ...... Frequency set by RH/RM operation + PU running frequency

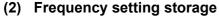


· The frequency setting storage function stores the remotely-set frequency (frequency set by RH/RM operation) into the memory (EEPROM). When power is switched off once, then on, operation is resumed with that output frequency value. (*Pr.* 59 =1)

### <Frequency setting storage conditions>

- · Frequency at the point when the start signal (STF or STR) turns off
- The remotely-set frequency is stored every one minute after one minute has elapsed since turn off (on) of both the RH (acceleration) and RM (deceleration) signals. (The frequency is written if the present frequency setting compared with the past frequency setting every one minute is different. The state of the RL signal does not affect writing.)

### = CAUTION =

 The range of frequency changeable by RH (acceleration) and RH (deceleration) is 0 to maximum frequency (Pr.1 or Pr.18 setting). Note that the maximum value of set frequency is (main speed + maximum frequency).

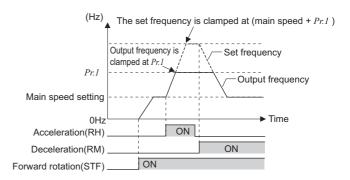


- When the acceleration or deceleration signal switches on, acceleration/deceleration time is as set in *Pr.* 44 and *Pr.* 45. Note that when long time has been set in *Pr.* 7 or *Pr.* 8, the acceleration/deceleration time is as set in *Pr.* 7 or *Pr.* 8. (when RT signal is off) When the RT signal is on, acceleration/deceleration is made in the time set to *Pr.* 44 and *Pr.* 45, regardless of the *Pr.* 7 or *Pr.* 8 setting.
- Even if the start signal (STF or STR) is off, turning on the acceleration (RH) or deceleration (RM) signal varies the preset frequency.
- When switching the start signal from ON to OFF, or changing frequency by the RH or RM signal frequently, set the frequency setting value storage function (write to EEPROM) invalid (*Pr. 59* ="2, 3"). If set valid (*Pr. 59* ="1"), frequency is written to EEPROM frequently, this will shorten the life of the EEPROM.
- The RH, RM, RL signals can be assigned to the input terminal using any Pr. 178 to Pr. 189 (input terminal function selection). When terminal assignment is changed, the other functions may be affected. Please make setting after confirming the function of each terminal
- · Also available for the network operation mode.


### **REMARKS**

During jog operation or PID control operation, the remote setting function is invalid.

### Setting frequency is "0"

- Even when the remotely-set frequency is cleared by turning on the RL (clear) signal after turn off (on) of both the RH and RM signals, the inverter operates at the remotely-set frequency stored in the last operation if power is reapplied before one minute has elapsed since turn off (on) of both the RH and RM signals
- When the remotely-set frequency is cleared by turning on the RL (clear) signal after turn off (on) of both the RH and RM signals, the inverter operates at the frequency in the remotely-set frequency cleared state if power is reapplied after one minute has elapsed since turn off (on) of both the RH and RM signals.

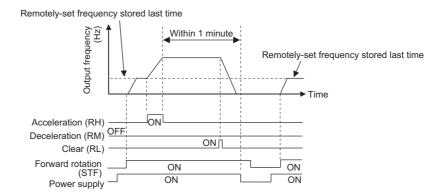

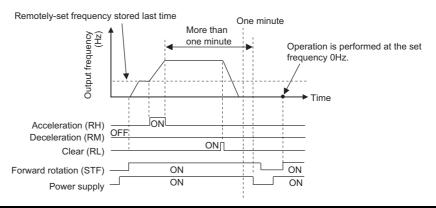

When selecting this function, re-set the maximum frequency according to the machine.

### ◆ Parameters referred to ◆

Pr. 1 Maximum frequency, Pr. 18 High speed maximum frequency Refer to page 156

Pr. 7 Acceleration time, Pr. 8 Deceleration time, Pr. 44 Second acceleration/deceleration time, Pr. 45 Second deceleration time. The Refer to page 172

Pr. 28 Multi-speed input compensation selection \*\* Refer to page 169
Pr. 178 to Pr. 189 (input terminal function selection) \*\* Refer to page 227



### 4.12 Setting of acceleration/deceleration time and acceleration/deceleration pattern

Purpose	Parameter that	Parameter that must be Set			
Motor acceleration/deceleration time setting	Acceleration/deceleration time	Pr. 7, Pr. 8, Pr. 20, Pr. 21, Pr. 44, Pr. 45, Pr. 110, Pr. 111	172		
Starting frequency	Starting frequency and start- time hold	Pr. 13, Pr. 571	174		
Set acceleration/deceleration pattern suitable for application	Acceleration/deceleration pattern and backlash measures	Pr. 29, Pr. 140 to Pr. 143, Pr. 380 to Pr. 383, Pr. 516 to Pr. 519	175		
Automatically set appropriate acceleration/deceleration time	Automatic acceleration/ deceleration	Pr. 61 to Pr. 63, Pr. 292	178		

### 4.12.1 Setting of the acceleration and deceleration time (Pr. 7, Pr. 8, Pr. 20, Pr. 21, Pr. 44, Pr. 45, Pr. 110, Pr. 111)




Used to set motor acceleration/deceleration time.

Set a larger value for a slower speed increase/decrease or a smaller value for a faster speed increase/decrease. For the acceleration time at automatic restart after instantaneous power failure, refer to Pr. 611 Acceleration time at a restart (page 260).

page 181	
<b>Pr.19</b> ☐ page 158	
<b>Pr.22</b> ☐ page 149	
Pr.43  page 241	
<b>Pr.46</b>	
<b>Pr.109</b> ☐ page 164	
<b>Pr.112</b>	
	L

Parameter Number	Name	Initial Value 200V class (400V class)		Setting Range	Desc	ription	
7	Acceleration time	00330 (00170) or less		0 to 3600/360s *1	Set the motor acceler	ration time	
,	Acceleration time			0 10 3000/3005 1	Set the motor acceler	ration time.	
8	Deceleration time	00330 (00170) or less 5s		0 to 3600/360s *1	Set the motor decele	ration time	
0	Deceleration time	00460 (00230) or more	15s	0 10 3000/3005 1	Set the motor decele	ration time.	
20	Acceleration/ deceleration reference frequency	60Hz		1 to 400Hz	Set the frequency that will be the basis of acceleration/deceleration time. As acceleration/deceleration time, set the frequency change time from stop to <i>Pr. 20</i>		
	Acceleration/			0	Increments: 0.1s Range: 0 to 3600s	Increments and setting range of	
21 deceleration time increments	0		1	Increments: 0.01s Range: 0 to 360s	acceleration/ deceleration time setting can be changed.		
44	Second acceleration/ deceleration time	5s		0 to 3600/360s *1	Set the acceleration/o the RT signal is on.	deceleration time when	
45	Second deceleration time	9999		0 to 3600/360s *1	Set the deceleration to signal is on.	time when the RT	
	deceleration time			9999	Acceleration time = deceleration time		
110	Third acceleration/	adda		0 to 3600/360s *1	Set the acceleration/deceleration time when the X9 signal is on.		
110	deceleration time			9999	Without the third acceleration/deceleratio function.		
111	Third deceleration time	9999		0 to 3600/360s *1	Set the deceleration time when the X9 signal is on.		
	ume				Acceleration time = deceleration time		

Depends on the *Pr. 21 Acceleration/deceleration time increments* setting. The initial value for the setting range is "0 to 3600s" and the setting increments is "0.1s".

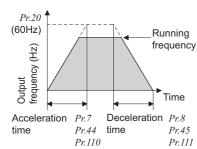

### (1) Acceleration time setting (Pr. 7, Pr. 20)

- · Use Pr. 7 Acceleration time to set the acceleration time required to reach Pr. 20 Acceleration/deceleration reference frequency from 0Hz.
- Set the acceleration time according to the following formula.

Acceleration		Pr. 20		Acceleration time from stop to
time setting	=	Maximum operating frequency - Pr. 13	×	maximum operating frequency

Example) When Pr. 20 = 60Hz (initial value), Pr. 13 = 0.5Hz, and acceleration can be made up to the maximum operating frequency of 50Hz in

$$Pr. 7 = \frac{60 \text{Hz}}{50 \text{Hz} - 0.5 \text{Hz}} \times 10 \text{s} \stackrel{:}{=} 12.1 \text{s}$$

### (2) Deceleration time setting (Pr. 8, Pr. 20)

- Use Pr. 8 Deceleration time to set the deceleration time required to reach 0Hz from Pr. 20 Acceleration/deceleration reference frequency.
- Set the deceleration time according to the following formula.

Deceleration		Pr. 20		Deceleration time from maximum
time setting	= _	Maximum operating frequency - Pr. 10	×	operating frequency to stop.

Example) When the frequency can be decelerated down to the maximum operating frequency of 50Hz in 10s with 120Hz set in Pr. 20 and 3Hz set in Pr. 10

$$Pr. 8 = \frac{120\text{Hz}}{50\text{Hz} - 3\text{Hz}} \times 10\text{s} \stackrel{.}{=} 25.5\text{s}$$

### (3) Change the setting range and increments of the acceleration/deceleration time (Pr. 21)

Use Pr. 21 to set the acceleration/deceleration time and minimum setting range. Setting "0" (initial value) ...... 0 to 3600s (minimum setting increments 0.1s) Setting "1" ...... 0 to 360s (minimum setting increments 0.01s)

Changing the Pr. 21 setting changes the acceleration/deceleration time setting (Pr. 7, Pr. 8, Pr. 16, Pr. 44, Pr. 45, Pr. 110, Pr. 111, Pr. 264, Pr. 265).

(The Pr. 611 Acceleration time at a restart setting is not affected.) <Example>

When  $\dot{P}r$ : 21 = "0", setting "5.0" s in Pr. 7 and "1" in Pr. 21 automatically changes the Pr. 7 setting to "0.5" s.

### (4) Set multiple acceleration/deceleration time (RT signal, Pr. 44, Pr. 45, Pr. 110, Pr. 111)

- Pr. 44 and Pr. 45 are valid when the RT signal is on, and Pr. 110 and Pr. 111 are valid when the X9 signal is on. When both the RT and X9 are on, Pr. 110 and Pr. 111 are valid.
- For the terminal used for X9 signal input, set "9" in any of Pr. 178 to Pr. 189 (input terminal function selection) to assign the function.
- When "9999" is set in Pr. 45 or Pr. 111, the deceleration time becomes equal to the acceleration time (Pr. 44, Pr. 110).
- · When Pr. 110 = "9999", third acceleration/deceleration time is invalid.

- In S-shaped acceleration/deceleration pattern A (refer to page 175), the set time is the period required to reach the base frequency set in Pr. 3 Base frequency.
- Acceleration/deceleration time formula when the set frequency is the base frequency or higher

$$t = \frac{4}{9} \times \frac{T}{(Pr.\ 3)^2} \times f^2 + \frac{5}{9} T \quad \text{T: Acceleration/deceleration time setting value(s)} \\ f : \text{Set frequency(Hz)}$$

Guideline for acceleration/deceleration time when Pr. 3 Base frequency = 60Hz (0Hz to set frequency)

Frequency setting (Hz) Acceleration/ deceleration time (s)	60	120	200	400
5	5	12	27	102
15	15	35	82	305

The RT, X9 signal can be assigned to the input terminal using any of Pr. 178 to Pr. 189 (input terminal function selection). When terminal assignment is changed, the other functions may be affected. Please make setting after confirming the function of each terminal

### **REMARKS**

- The RT (X9) signal acts as the second (third) function selection signal and makes the other second (third) function valid. (Refer to page 231)
  - The RT signal is assigned to the RT terminal in the default setting. By setting "3" in any of Pr. 178 to Pr. 189 (input terminal function selection), you can assign the RT signal to the other terminal.
- If the Pr. 20 setting is changed, the Pr. 125 and Pr. 126 (frequency setting signal gain frequency) settings do not change. Set Pr. 125 and Pr. 126 to adjust the gains.
- When the Pr. 7, Pr. 8, Pr. 44, Pr. 45, Pr. 110 and Pr. 111 settings are 0.03s or less, the acceleration/deceleration time is 0.04s (under V/F control, advanced magnetic flux vector control). At that time, set Pr. 20 to "120Hz" or less.
- If the acceleration/deceleration time is set, the actual motor acceleration/deceleration time cannot be made shorter than the shortest acceleration/deceleration time determined by the mechanical system J (inertia moment) and motor torque.

### ◆ Parameters referred to ◆

Pr. 3 Base frequency Refer to page 158

Pr. 10 DC injection brake operation frequency 🕃 Refer to page 199 Pr. 29 Acceleration/deceleration pattern selection 🕃 Refer to page 175

Pr. 125, Pr. 126 (frequency setting gain frequency) Refer to page 288

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227




### 4.12.2 Starting frequency and start-time hold function (Pr. 13, Pr. 571)



**Pr.574**☐ page 196

You can set the starting frequency and hold the set starting frequency for a certain period of time. Set these functions when you need the starting torque or want to smooth motor drive at a start.

Parameter Number	Name	Initial Value	Setting Range	Description
13	Starting frequency	0.5Hz	0 to 60Hz	Frequency at start can be set in the range 0 to 60Hz. You can set the starting frequency at which the start signal is turned on.
571	Holding time at a start	9999	0.0 to 10.0s	Set the holding time of <i>Pr. 13 Starting frequency</i> .
			9999	Holding function at a start is invalid

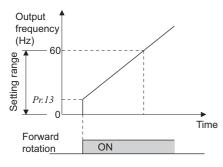


### (1) Starting frequency setting (Pr. 13)

- · Frequency at start can be set in the range 0 to 60Hz.
- You can set the starting frequency at which the start signal is turned on.

### CAUTION

The inverter will not start if the frequency setting signal is less than the value set in Pr. 13.

For example, when 5Hz is set in Pr. 13, the motor will not start running until the frequency setting signal reaches 5Hz.

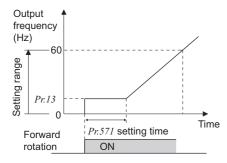

### (2) Start-time hold function (Pr. 571)

- This function holds the time set in *Pr. 571* and the output frequency set in *Pr. 13 Starting frequency*.
- This function performs initial excitation to smooth the motor drive at a start.

### REMARKS

When Pr. 13 = "0Hz", the starting frequency is held at 0.01Hz.

### = CAUTION

- · When the start signal was turned off during start-time hold, deceleration is started at that point.
- At switching between forward rotation and reverse rotation, the starting frequency is valid but the start-time hold function is invalid.

# **⚠** CAUTION

Note that when *Pr. 13* is set to any value lower than *Pr. 2 Minimum frequency*, simply turning on the start signal will run the motor at the preset frequency even if the command frequency is not input.

### ♦ Parameters referred to ♦


Pr. 2 Minimum frequency Refer to page 156

# 4.12.3 Acceleration/deceleration pattern (Pr. 29, Pr. 140 to Pr. 143, Pr. 380 to Pr. 383, Pr. 516 to Pr. 519)

You can set the acceleration/deceleration pattern suitable for application.

You can also set the backlash measures that stop acceleration/deceleration once at the parameter-set frequency and time during acceleration/deceleration.


Parame Numb	Name	Initial Value	Setting Range	Description		
			0	Linear acceleration/ deceleration		
Í			1	S-pattern acceleration/deceleration A		
29	Acceleration/deceleration pattern	0	2	S-pattern acceleration/deceleration B		
	selection	U	3	Backlash measures		
<b>[</b>			4	S-pattern acceleration/deceleration C		
			5	S-pattern acceleration/deceleration D		
140	Backlash acceleration stopping frequency	1Hz	0 to 400Hz			
141	Backlash acceleration stopping time	0.5s	0 to 360s	Set the stopping frequency and time for backlash measures.		
142	Backlash deceleration stopping frequency	1Hz	0 to 400Hz	Valid when <i>Pr. 29</i> = 3		
143	Backlash deceleration stopping time	0.5s	0 to 360s			
380	Acceleration S-pattern 1	0	0 to 50%	Valid when S-pattern acceleration/ deceleration C ( <i>Pr. 29</i> = 4) is set		
381	Deceleration S-pattern 1	0	0 to 50%	Set the time taken for S-pattern from starting of acceleration/deceleration to linear acceleration as % to the		
382	Acceleration S-pattern 2	0	0 to 50%	acceleration/deceleration time ( <i>Pr. 7, Pr. 8</i> etc.)		
383	Deceleration S-pattern 2	0	0 to 50%	An acceleration/deceleration pattern can be changed with the X20 signal.		
516	S-pattern time at a start of acceleration	0.1s	0.1 to 2.5s	W.E. I. O. II. I. II. I		
517	S-pattern time at a completion of acceleration	0.1s	0.1 to 2.5s	Valid when S-pattern acceleration/ deceleration D ( <i>Pr. 29</i> = 5) is set. Set the time taken for S-pattern		
518	S-pattern time at a start of deceleraiton	0.1s	0.1 to 2.5s	· ·		
519	S-pattern time at a completion of deceleraiton	0.1s	0.1 to 2.5s	acceleration/deceleration (S-pattern operation).		

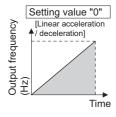

Pr.28
page 169

Pr.30
page 203

Pr.139
Pr.144
Pr. 144
Pr.343
Pr.384
Pr.384
Pr.504
Pr.504
Pr.547
Pr. 547

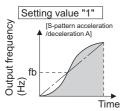

### (1) Linear acceleration/ deceleration (Pr. 29 = "0", initial value)

 When the frequency is changed for acceleration, deceleration, etc. in inverter operation, the output frequency is changed linearly (linear acceleration/ deceleration) to reach the set frequency without straining the motor and inverter. Linear acceleration/deceleration has a uniform frequency/time slope.

### (2) S-pattern acceleration/deceleration A (*Pr. 29* = "1")

· For machine tool spindle applications, etc.

Used when acceleration/deceleration must be made in a short time to a high-speed range of not lower than the base frequency. In this acceleration/deceleration pattern, *Pr. 3 Base frequency* (fb) is the inflection point of the S pattern and you can set the acceleration/deceleration time appropriate for motor torque reduction in a constant-power operation region of *Pr.3 Base frequency* (initial value = 60Hz) or higher.

### CAUTION

 As the acceleration/deceleration time of S-pattern acceleration/deceleration A, set the time taken until Pr. 3 Base frequency is reached, not Pr. 20 Acceleration/deceleration reference frequency.



# Setting value "2" Setting value "2" (S-pattern acceleration //deceleration B) (S-pattern acceleration B) (S-pattern acceleration B) (S-pattern acceleration B) Time

### (3) S-pattern acceleration/deceleration B (Pr. 29 = "2")

For prevention of load shifting in conveyor and other applications
 Since acceleration/deceleration is always made in an S shape from current frequency (f2) to target frequency (f1), this function eases shock produced at acceleration/deceleration and is effective for load collapse prevention, etc.

# Setting value "3" [Anti-backlash measure function] Pr. 142 Pr. 144 Time Pr. 144

### (4) Backlash measures (Pr. 29 = "3", Pr. 140 to Pr. 143)

· What is backlash?


Reduction gears have an engagement gap and have a dead zone between forward rotation and reverse rotation. This dead zone is called backlash, and this gap disables a mechanical system from following motor rotation.

More specifically, a motor shaft develops excessive torque when the direction of rotation changes or when constant-speed operation shifts to deceleration, resulting in a sudden motor current increase or regenerative status.

To avoid backlash, acceleration/deceleration is temporarily stopped.
 Set the acceleration/deceleration stopping frequency and time in *Pr. 140 to Pr. 143*.

CAUTION

Setting the backlash measures increases the acceleration/deceleration time by the stopping time.

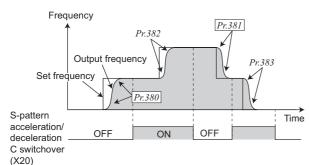


# (5) S-pattern acceleration/deceleration C (Pr. 29 = "4", Pr. 380 to Pr. 383)

- With the S-pattern acceleration/deceleration C switch signal (X20), an acceleration/deceleration curve S-pattern 1 or S-pattern 2 can be selected.
- For the terminal used for X20 signal input, set "20" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function.

Operation X20 signal	During Acceleration	During Deceleration
OFF	Pr. 380 Acceleration S-pattern 1	Pr. 381 Deceleration S-pattern 1
ON	Pr. 382 Acceleration S-pattern 2	Pr. 383 Deceleration S-pattern 2

• Set % of time taken for forming an S-pattern in *Pr. 380 to Pr. 383* as acceleration time is 100%.

### Parameter setting (%) Ts / T × 100%

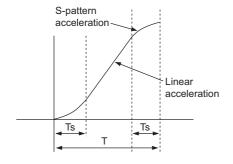



### **REMARKS**

- At a start, the motor starts at *Pr. 13 Starting frequency* when the start signal turns on.
- If there is a difference between the speed command and speed at a start of deceleration due to torque limit operation etc., the speed command is matched with the speed to make deceleration.

### = CAUTION

- · Change the S pattern acceleration/deceleration C switch (X20 signal) after the speed becomes constant.
- S pattern operation before switching continues even if the X20 signal is changed during acceleration or deceleration.
- The X20 signal can be assigned to the input terminal using any of *Pr. 178 to Pr. 189 (input terminal function selection)*. Changing the terminal assignment may affect the other functions. Make setting after confirming the function of each terminal.

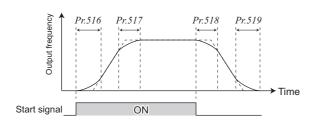

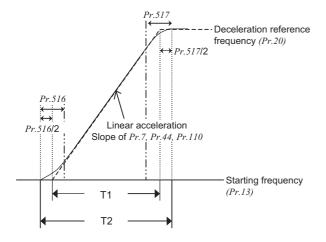

# (6) S-pattern acceleration/deceleration D (*Pr. 29* = "5", *Pr. 516 to Pr. 519*)

- · Set the time taken for S-pattern operation of S-pattern acceleration/deceleration using *Pr. 516 to Pr. 519*. Set each S-pattern operation time for acceleration start (*Pr. 516*), acceleration completion (*Pr. 517*), deceleration start (*Pr. 518*) and deceleration completion (*Pr. 519*).
- When S-pattern acceleration/deceleration D is set, acceleration/deceleration time will become longer as follows:

Actual acceleration time T2 = set acceleration time T1+
(S-pattern time at a start of acceleration+S-pattern time at a completion of acceleration) /2
Actual deceleration time T2 = set deceleration time T1+
(S-pattern time at a start of deceleration+S-pattern time at a completion of deceleration) /2

Set acceleration/deceleration time T1 indicates *Pr. 7, Pr. 8, Pr. 44, Pr. 45, Pr. 110* and *Pr. 111*.

### = CAUTION

- Even if the start signal is turned off during acceleration, the inverter will not decelerate immediately to avoid sudden frequency change. (Likewise, the inverter will not immediately accelerate when deceleration is changed to reacceleration by turning the start signal on during deceleration, etc.)
- For example, the actual acceleration time when starting the inverter with an S-pattern acceleration/deceleration pattern
   D selected for a stop to 60Hz in the parameter initial setting is as shown left:

Set acceleration time T1 =  $(Pr. 20 - Pr. 13) \times Pr. 7/Pr. 20$ Actual acceleration time T2 = set acceleration time T1+ (Pr. 516 + Pr. 517)/2

### Therefore,

Set acceleration time T1 =  $(60Hz - 0.5Hz) \times 5s/60Hz$  = 4.96s (actual acceleration time at linear acceleration) Actual acceleration time T2 = 4.96s + (0.1s + 0.1s)/2= 5.06s (acceleration time at S-pattern acceleration)

### CAUTION


- · When the acceleration/deceleration time (*Pr.7*, *Pr.8*, etc.) setting under real sensorless vector control or vector control is 0s, the S-pattern acceleration/deceleration A to D (*Pr.29*= "1, 2, 4, 5") is linear acceleration/deceleration.
- Set linear acceleration/deceleration (*Pr. 29* = "0 (initial value)") when torque control is exercised under real sensorless vector control or vector control. When acceleration/deceleration patterns other than the linear acceleration/deceleration are selected, the protective function of the inverter may function.

### ◆ Parameters referred to ◆

Pr. 3 Base frequency Refer to page 158


Pr. 7 Acceleration time, Pr. 8 Deceleration time, Pr. 20 Acceleration/deceleration reference frequency Refer to page 172

Pr. 178 to Pr. 189 (Input terminal function selection) 👺 Refer to page 227

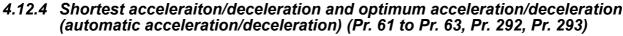

**Pr.60** page 273 **Pr.64** page 162 **Pr.291**☐ page 254 /Pr.291/

page 371 

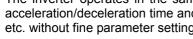

The inverter operates in the same conditions as when appropriate values are set in each parameter even if acceleration/deceleration time and V/F pattern are not set. This function is useful when you just want to operate, etc. without fine parameter setting.

Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description
61	Reference current	9999	02150 (01100) or less 02880 (01440) or more	0 to 500A 0 to 3600A	Set the reference current during shortest/ optimum acceleration/deceleration.
			9	9999	Rated inverter output current value is reference
			0 to	220% *	Set the limit value/optimum value during shortest/optimum acceleration.
62	Reference value at acceleration	9999	g	9999	Shortest acceleration/deceleration: 150% is a limit value Optimum acceleration/deceleration: 100% is an optimum value
			0 to 220% *		Set the limit value/optimum value during shortest/optimum deceleration.
63	Reference value at deceleration	9999	9999		Shortest acceleration/deceleration: 150% is a limit value Optimum acceleration/deceleration: 100% is an optimum value
			0		Normal mode
		0	1		Shortest acceleration/deceleration (without brake)
292	Automatic acceleration/		11		Shortest acceleration/deceleration (with brake)
	deceleration		3		Optimum acceleration/deceleration
			5, 6		Elevator mode1, 2 (refer to page162)
			7, 8		Brake sequence mode 1, 2 (Refer to page 213.)
	Acceleration/ deceleration separate selection	0	0		Both acceleration and deceleration are made in the shortest/optimum acceleration/deceleration mode
293			1		Only acceleration is made in the shortest/ optimum acceleration/deceleration mode
			2		Only deceleration is made in the shortest/ optimum acceleration/deceleration mode

<sup>\*</sup> When Pr. 570 Multiple rating setting ≠ "2", performing parameter clear changes the setting range. (Refer to page 154)

### (1) Shortest acceleration/deceleration mode (Pr. 292="1, 11", Pr. 293)

- Set when you want to accelerate/decelerate the motor for the shortest time. It is desired to make acceleration/ deceleration in a shorter time for a machine tool etc. but the design values of machine constants are unknown.
- Acceleration/deceleration speed is automatically adjusted at a start of acceleration/deceleration so that acceleration/deceleration is made with the maximum torque the inverter can output according to the setting value of Pr. 7 Acceleration time and Pr. 8 Deceleration time. (The setting values of Pr. 7 and Pr. 8 are not changed)
- Either acceleration or deceleration can be made in the shortest time using Pr. 293 Acceleration/deceleration separate selection. When the setting value is "0" (initial value), both acceleration and deceleration can be made in the shortest time.
- Since the FR-A720-00330 (FR-A740-00170) or less inverter has a built-in brake resistor, set Pr. 292 to "11". Set "11" also when a high-duty brake resistor or brake unit is connected. Deceleration time can be further shortened.
- When the shortest acceleration/deceleration mode is selected under V/F control and advanced magnetic flux vector control, the stall prevention operation level during acceleration/deceleration becomes 150% (adjustable using Pr. 61 to Pr. 63). The setting of Pr. 22 Stall prevention operation level and stall level by analog input are used only during a constant speed operation. Adjustment using Pr. 61 to Pr. 63 can not be made under real sensorless vector control or vector control since torque limit level (Pr. 22 etc.) is used during acceleration/deceleration.
- · It is inappropriate to use for the following applications.
  - a)Machine with a large inertia such as a fan (more than 10 times). Since stall prevention operation will be activated for a long time, this type of machine may be brought to an alarm stop due to motor overloading, etc. . b)It is desired to always perform operation with a constant acceleration/deceleration time
  - c)It is desired to perform operation making sure the inverter and motor have enough capability.

### **REMARKS**

- If outmatic acceleration/deceleration mode has been selected, inputting the jog signal (jog operation), RT signal (second function selection) or X9 signal (third function selection) during an inverter stop will switch to the normal operation and give priority to jog operation, second function selection or third function selection. Note that JOG and RT signal input is invalid even if JOG signal and RT signal are input during operation in automatic acceleration/deceleration mode. Since acceleration/deceleration is made with the stall prevention operation being activated, the acceleration/deceleration speed always varies according to the load conditions. Note that when proper values are set in Pr. 7 and Pr. 8, acceleration/deceleration time may be shorter than selecting shortest acceleration/deceleration mode.



- The optimum operation within the rating range where the inverter can be continuously used regardless of the inverter capability is performed.
  - Automatically set torque boost and acceleration/deceleration time so that the average current during acceleration/ deceleration is the rated current by the self-learning of the inverter.

    It is appropriate for applications such as automatic transfer machine, etc. which is small in load change and is
  - operated in a predetermined pattern.
- At the initial time when the optimum acceleration/deceleration mode has been selected, operation is performed at the values set in Pr. 0 Torque boost, Pr. 7 Acceleration time and Pr. 8 Deceleration time. After operation, the average current and peak current are calculated from the motor current during acceleration/deceleration. These values are compared with the reference current (initial value is rated inverter current) and calculated, then more appropriate values are set in Pr. 0, Pr. 7 and Pr. 8.

After that, operation is performed under the conditions of Pr. 0, Pr. 7 and Pr. 8 set, and more appropriate values are calculated. Note that the Pr. 0 value will not change under advanced magnetic flux vector control, real sensorless vector control or vector control.

Storage of parameters

The optimum values of *Pr. 0, Pr. 7* and *Pr. 8* are written to both the parameter RAM and EEPROM only three times of acceleration/deceleration after the optimum acceleration/deceleration mode has been selected or after the power is switched on or the inverter is reset. At of after the fourth attempt, they are not stored into EEPROM. Hence, after power-on or inverter reset, the values changed at the third time are valid. Note that the values changed at the fourth or later time are calculated to optimum and the values of  $Pr.\ 0,\ Pr.\ 7$  and  $Pr.\ 8$  are set to RAM, the values can be stored into EEPROM by reading and writting the values with the operation panel and paramter unit.

Number of	Pr. 0, Pr.			
Optimum Value Changes	EEPROM value	RAM value	Optimum Conditions	
1 to 3 times	Updated	Updated	Updated	
4 or more times	I d from I Undated		Updated	

- Either acceleration or deceleration can be made in the optimum acceleration/deceleration mode using Pr. 293 Acceleration/deceleration separate selection.
  - When the setting value is "0" (initial value), both acceleration and deceleration are made in the optimum acceleration/deceleration mode.
- It is inappropriate for machines which change in load and operation conditions. Since the stored optimum values are used for the next operation, faults, e.g. acceleration/deceleration is not made if conditions change, alarm stop is made due to overcurrent protective function, may occur.

### **REMARKS**

- If shortest acceleration/deceleration mode has been selected, inputting the jog signal (jog operation) or RT signal (second function selection) during an inverter stop will switch to the normal operation and give priority to jog operation or second function selection. Note that JOG and RT signal input is invalid even if JOG signal and RT signal are input during operation in shortest/optimum acceleration/deceleration mode.
- Because of the learning system, this mode is not valid at the first operation after the optimum acceleration/deceleration mode is set.
- The optimum value are operated on only when acceleration is made from a stop to 30Hz or more or when deceleration is made from 30Hz or more to stop.
- When the motor is not connected or output current is less than 5% of the rated inverter current, optimum acceleration/ deceleration mode will not function.

### (3) Adjustment of shortest and optimum acceleration/deceleration mode (Pr. 61 to Pr. 63)

By setting the adjustment parameters Pr. 61 to Pr. 63, the application range can be made wider.

Parameter Number	Name	Setting Range 200V class (400V class)		Description	
			0 to 500A	For example, when the motor and inverter are different in capacity, set the rated motor current value.  Shortest acceleration/deceleration: Set reference current (A) of the stall	
61	Reference current	02880 (01440) or more	0 to 3600A	prevention operation level during acceleration/deceleration Optimum acceleration/deceleration: Set reference current (A) of the optimum current during acceleration/deceleration	
			ial value)	The rated inverter current is defined as reference.	
62	Reference value at acceleration	0 to 220%		Set when it is desired to change the reference level of acceleration and deceleration. Shortest acceleration/deceleration: Set the stall prevention operation level (ratio to the current value of $Pr.\ 61$ ) during acceleration/deceleration. Shortest acceleration/deceleration: Set the optimum current level (ratio to the current value of $Pr.\ 61$ ) during acceleration/deceleration.	
63	Reference value at deceleration	9999 (initial value)		Shortest acceleration/deceleration: The 150% value during shortest acceleration/deceleration is judged as the stall prevention operation level. Optimum acceleration/deceleration: 100% is the optimum value	

### **REMARKS**

- Pr. 61 to Pr. 63 are invalid when real sensorless vector control or vector control is selected in the shortest acceleration/ deceleration mode.
- Since the Pr. 61 to Pr. 63 settings automatically return to the initial value (9999) if the Pr. 292 setting is changed, set Pr. 292 first when you need to set Pr. 61 to Pr. 63.

### ◆ Parameters referred to ◆

Pr. 0 Torque boost Refer to page 143

Pr. 7 Acceleration time, Pr. 8 Deceleration time Refer to page 172

Pr. 22 Stall prevention operation level Refer to page 149

Pr. 22 Torque limit level Refer to page 99

### 4.13 Selection and protection of a motor

Purpose	Parameter that n	Refer to Page	
Motor protection from overheat	Electronic thermal O/L relay	Pr. 9, Pr. 51	181
Use the constant torque motor	Applied motor	Pr. 71	184
The motor performance can be maximized for operation in magnetic flux vector control system	Offline auto tuning	Pr. 82 to Pr. 84, Pr. 90 to Pr. 94, Pr. 96	186
High accuracy operation unaffected by the motor temperature and stable operation with high torque down to ultra low speed are performed	Online auto tuning	Pr. 95, Pr. 574	196

### 4.13.1 Motor protection from overheat (Electronic thermal relay function) (Pr. 9, Pr. 51)


Set the current of the electronic thermal O/L relay to protect the motor from overheat. This feature provides the optimum protective characteristics, including reduced motor cooling capability, at low speed.

Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description
	Electronic thermal	Rated inverter	02150 (01100) or less	0 to 500A	
9 O/L relay	output current *1	02880 (01440) or more	0 to 3600A	Set the rated motor current.	
			02150 (01100) or less	0 to 500A	Made valid when the RT signal is
Second electronic thermal O/L relay *2	9999	02880 (01440) or more	0 to 3600A	on. Set the rated motor current.	
	thermal O/L felay 2		9999		Second electronic thermal O/L relay invalid

- 1 The initial value of the FR-A720-00030 and 00050 (FR-A740-00015 and 00025) is set to 85% of the rated inverter current.
- \*2 When parameter is read using the FR-PU04, a parameter name different from an actual parameter is displayed.

### (1) Electronic thermal O/L relay (Pr. 9)

Electronic thermal relay function operation characteristic

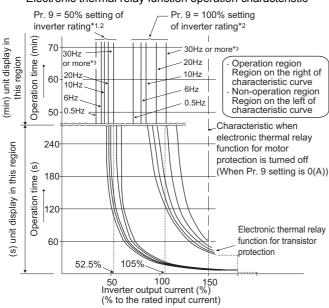


This function detects the overload (overheat) of the motor, stops the operation of the inverter's output transistor, and stops the output. (The operation characteristic is shown on the left)

- Set the rated current [A] of the motor in Pr. 9. (When the power supply specification is 200V/220V(400V/ 440V) 60Hz, set the 1.1 times the rated motor current.)
- Set "0" in *Pr. 9* when you do not want to activate the electronic thermal relay function, e.g. when using an external thermal relay with the motor. (Note that the output transistor protection of the inverter functions (E.THT).)
- When using the Mitsubishi constant-torque motor
  - 1) Set "1" or any of "13" to "18", "50", "53", "54" in *Pr. 71*. (This provides a 100% continuous torque characteristic in the low-speed range.)
  - 2) Set the rated current of the motor in Pr. 9.
- \*1 When a value 50% of the inverter rated output current (current value) is set in  $Pr.\ 9$
- The % value denotes the percentage to the inverter rated output current. It is not the percentage to the motor rated current.
- \*3 When you set the electronic thermal relay function dedicated to the Mitsubishi constant-torque motor, this characteristic curve applies to operation at 6Hz or higher.

### = CAUTION

- · Protective function by electronic thermal relay function is reset by inverter power reset and reset signal input. Avoid unnecessary reset and power-off.
- When multiple motors are operated by a single inverter, protection cannot be provided by the electronic thermal relay function. Install an external thermal relay to each motor.
- · When the difference between the inverter and motor capacities is large and the setting is small, the protective characteristics of the electronic thermal relay function will be deteriorated. In this case, use an external thermal relay.
- · A special motor cannot be protected by the electronic thermal relay function. Use the external thermal relay.
- The operation time of the transistor protection thermal relay shortens when the Pr. 72 PWM frequency selection setting increases.

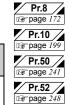




### (2) Set multiple electronic thermal relay functions (Pr. 51)

Use this function when rotating two motors of different rated currents individually by a single inverter. (When rotating two motors together, use external thermal relays.)

- · Set the rated current of the second motor in Pr. 51.
- · When the RT signal is on, thermal protection is provided based on the Pr. 51 setting.

Pr. 450	Pr. 9	Pr. 51	RT =	OFF	RT =	ON
Second applied motor	Electronic thermal O/L relay	Second electronic thermal O/L relay	First motor	Second motor	First motor	Second motor
		9999	×	×	×	×
9999	0	0	×	×	×	×
		0.01 to 500 (0.1 to 3600)	×	*	×	0
	Other than	9999	0	×	0	×
9999		0	0	×	*	×
		0.01 to 500 (0.1 to 3600)		*	*	0
Oth on the on		9999	×	×	×	×
Other than 9999	0	0	×	×	×	×
3333		0.01 to 500 (0.1 to 3600)	×	*	×	0
Other then	Otherthen	9999	0	*	*	0
Other than 9999	Other than	0	0	×	*	×
3333		0.01 to 500 (0.1 to 3600)	0	*	*	0

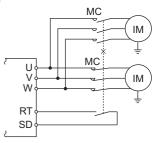


- O .... Output current value is used to perform integration processing.
- ★ .... Output current is assumed as 0A to perform integration processing. (cooling processing)
- × ..... Electronic thermal relay function is not activated.

### **REMARKS**

- The RT signal acts as the second function selection signal and makes the other second functions valid. (Refer to page 231)
- The RT signal is assigned to the RT terminal in the initial setting. By setting "3" in any of Pr. 178 to Pr. 189 (input terminal function selection), you can assign the RT signal to the other terminal.

### (3) Electronic thermal relay function alarm output and alarm signal (THP signal)

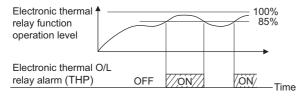


- 100%: Electronic thermal relay function alarm operation value . The alarm signal (THP) is output when the electronic thermal relay function cumulative value reaches 85% of the level set in Pr. 9 or Pr. 51. If it reaches 100% of the Pr. 9 Electronic thermal O/ L relay setting, electronic thermal relay function protection (E. THM/E.THT) occurs.
  - The inverter does not shut off the output if the alarm signal is output.
  - For the terminal used for the THP signal output, assign the function by setting "8" (positive logic) or "108" (negative logic) in any of Pr. 190 to Pr. 196 (output terminal function selection).

### = CAUTION =

Changing the terminal assignment using Pr. 190 to Pr. 196 (output terminal function selection) may affect the other functions. Make setting after confirming the function of each terminal.


### (4) External thermal relay input (OH signal)

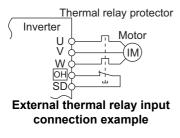

- To protect the motor against overheat, use the OH signal when using an external thermal relay or the built-in thermal protector of the motor.
- When the thermal relay operates, the inverter shuts off the output and outputs the alarm signal (E.OHT).
- For the terminal used for OH signal input, assign the function by setting "7" in any of Pr. 178 to Pr. 189 (input terminal function selection)



A thermal protector is provided for a vector control dedicated motor (SF-V5RU).

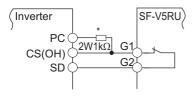


 Assign OH (external thermal input) signal to the CS terminal.

(Pr.186 = "7")

Connect a  $2W1k\Omega$  resistor between the terminal PC and CS(OH).

Install the resistor pushing it against the bottom part of the terminal block so as to avoid a contact with other cables.


Refer to page 227 for details of Pr.186 CS terminal function selection.

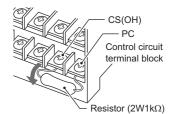


### CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.

### (5) PTC thermistor input (PTC signal)

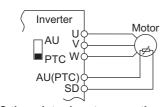

PTC thermistor input connection example

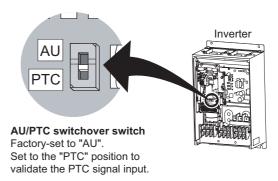

Built-in PTC thermistor of the motor can be input to the PTC signal (AU terminal).

- For the terminal used for PTC signal input, assign the function by setting "63" in *Pr. 184 AU terminal function selection* and also set the AU/PTC switchover switch to the PTC terminal function. (The initial setting is the AU terminal function.)
- · If a motor overheat state is detected for more than 10s according to the input from the PTC thermistor, the inverter shuts off the output and outputs the PTC thermal alarm signal (E.PTC).
- · The input specifications of the PTC thermistor are shown on the right.

Motor Temperature	PTC Thermistor Resistance Value ( $\Omega$ )
Normal	0 to 500
Boundary	500 to 4k
Overheat	4k or higher

### CAUTION

- · When the PTC signal was not assigned to Pr.~184 and the AU/PTC switchover switch was set to the PTC terminal function, the function assigned to the AU terminal is always off. Reversely, when the PTC signal was assigned to Pr.~184 and the AU/PTC switchover switch was set to the AU terminal function, a PTC thermal error (E.PTC) occurs since the function is always in a motor overheat state.
- · When you want to input a current, assign the AU signal to the other signal.
- · When terminal assignment is changed, the other functions may be affected. Please make setting after confirming the function of the AU terminal.

### ◆ Parameters referred to ◆

Pr. 71 Applied motor Refer to page 184

Pr. 72 PWM frequency selection Refer to page 279

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

Pr. 190 to Pr. 196 (output terminal function selection) The Refer to page 234

Specifications of the AU terminal Refer to page 29



### 4.13.2 Applied motor (Pr. 71, Pr. 450)

Pr.70

page 203

Pr.72

page 279

Pr.386

page 268

Pr.451

Setting of the used motor selects the thermal characteristic appropriate for the motor.

Setting is necessary when using a constant-torque motor. Thermal characteristic of the electronic thermal relay function suitable for the motor is set.

When advanced magnetic flux vector, real sensorless vector control or vector control is selected, the motor constants (SF-JR, SF-HR, SF-JRCA, SF-HRCA, etc.) necessary for control are selected as well.

Parameter Number	Name	Initial Value	Setting Range	Description
71	Applied motor	0	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54	Selecting the standard motor or constant- torque motor sets the corresponding motor thermal characteristic.
450	Second applied motor	9999	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54	Set when using the second motor. (same specifications as <i>Pr. 71</i> )
			9999	Not function

### (1) Set the motor to be used

Refer to the following list and set this parameter according to the motor used.

Pr. 71 (Pr. 450) Setting					Moto	r (O : used mo	otor)
Pr. 71	Pr. 450	Thermal Characteristic of the Funct		hermal Relay	Standard (SF-JR, SF- TH etc.)	Constant torque (SF-JRCA etc.)	Vector (SF-V5RU)
( <i>Pr. 71</i> init	•	Thermal characteristics of a stand	dard motor		0		
1		Thermal characteristics of the Mi	tsubishi consta	ant-torque motor		0	
2	2	Thermal characteristics of a standal Adjustable 5 points V/F (Refer to p			0		
2	0	Mitsubishi standard motor (SF-thermal characteristic for the co	JR 4P 1.5kW onstant-torque	(2HP) or less) e motor	0		
3	0	Vector control dedicated motor	(SF-V5RU)				0
4	0	Thermal characteristic of Mitsubis	shi High efficie	ency motor SF-	O*1		
5	0	Thermal characteristic of Mitsubis	shi constant-to	orque motor SF-		○ *2	
3	3	Standard motor			0		
1:	3	Constant-torque motor				0	
2	3	Mitsubishi standard motor (SF-JR 4P 1.5kW or less)	Select "offline auto tuning setting"		0		
3	3	Vector control dedicated motor (SF-V5RU, SF-THY)					0
4	3	Mitsubishi High efficiency motor (SF-HR)			O *1		
5	3	Mitsubishi constant-torque motor (SF-HRCA)				○ *2	
4	1	Standard motor			0		
1-	4	Constant-torque motor				0	
2	4	Mitsubishi standard motor (SF-JR 4P 1.5kW or less)			0		
3	4	Vector control dedicated motor (SF-V5RU, SF-THY)	Auto tuning data can be read, changed, and set				0
4	4	Mitsubishi High efficiency motor (SF-HR)			O*1		
5	4	Mitsubishi constant-torque motor (SF-HRCA)				○ *2	
5	5	Standard motor	Star	Direct input of	0		
1	5	Constant-torque motor	connection	motor		0	
6	3	Standard motor	Delta	constants is	0		
1	6	Constant-torque motor	connection	enabled		0	

-	7	Standard motor	Star	Motor	0		
1	7	Constant-torque motor	connection	constants direct input		0	
	8	Standard motor	Delta	+	0		
1	8	Constant-torque motor	connection	offline auto tuning		0	
_	9999 ( <i>Pr. 450</i>	Without second applied motor					

<sup>\*1</sup> Motor constants of Mitsubishi high efficiency motor SF-HR.

### REMARKS

- When performing offline auto tuning, set "3, 7, 8, 13, 17, 18, 23, 43, 53" in *Pr. 71*. (Refer to *page 186* for offline auto tuning)
- For the FR-F720-00240, 00330 and FR-F740-00120, 00170, the *Pr. 0 Torque boost* and *Pr. 12 DC injection brake operation voltage* settings are automatically changed according to the *Pr. 71* setting as follows.

Pr. 71	Standard Motor Setting 0, 2, 3 to 8, 20, 23, 24, 40, 43, 44	Constant Torque Motor Setting 1, 13 to 18, 50, 53, 54
Pr. 0	3%	2%
Pr. 12	4%	2%

### (2) Use multiple motors (Pr. 450)

- · Set Pr. 450 Second applied motor to use multiple motors with one inverter.
- · When "9999" (initial value) is set, no function is selected.
- When Pr. 450 ≠ 9999, turning the RT signal on makes the following parameter valid.

Function	RT Signal ON (second motor)	RT Signal OFF (first motor)
Applied motor	Pr. 450	Pr. 71
Control method selection	Pr. 451	Pr. 800
Motor capacity	Pr. 453	Pr. 80
Number of motor poles	Pr. 454	Pr. 81
Motor excitation current	Pr. 455	Pr. 82
Motor rated voltage	Pr. 456	Pr. 83
Rated motor frequency	Pr. 457	Pr. 84
Motor constant (R1)	Pr. 458	Pr. 90

Function	RT Signal ON (second motor)	RT Signal OFF (first motor)
Motor constant (R2)	Pr. 459	Pr. 91
Motor constant (L1)	Pr. 460	Pr. 92
Motor constant (L2)	Pr. 461	Pr. 93
Motor constant (X)	Pr. 462	Pr. 94
Auto tuning setting/status	Pr. 463	Pr. 96
Online auto tuning selection	Pr. 574	Pr. 95
Torque current	Pr. 860	Pr. 859

### **REMARKS**

- · The RT signal acts as the second function selection signal and makes the other second functions valid. (Refer to page 231)
- The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.

### = CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.



Set this parameter correctly according to the motor used. Incorrect setting may cause the motor to overheat and burn.

### ♦ Parameters referred to ♦

Pr. 0 Torque boost Refer to page 143

Pr. 12 DC injection brake operation voltage Refer to page 199

Pr. 80 Motor capacity, Pr. 81 Number of motor poles, Pr. 453 Second motor capacity, Pr. 454 Number of second motor poles Refer to page 143

Pr. 82 to Pr. 84, Pr. 90 to Pr. 94, Pr. 96, Pr. 455 to Pr. 463, Pr. 859, Pr. 860 (Motor constant) 🖼 Refer to page 186

Pr. 95 Online auto tuning selection, Pr. 574 Second motor online auto tuning \*\*Refer to page 196

Pr. 451 Second motor control method selection, Pr. 800 Control method selection Refer to page 92

Pr. 100 to Pr. 109 (Adjustable 5 points V/F) Refer to page 164

<sup>\*2</sup> Motor constants of Mitsubishi constant-torque motor SF-HRCA.




# 4.13.3 Offline auto tuning (Pr. 71, Pr. 80 to Pr. 84, Pr. 90 to Pr. 94, Pr. 96, Pr. 450, Pr. 453 to Pr. 463, Pr. 684, Pr. 859, Pr. 860) Magnetic flux Sensorless Vector


The motor performance can be maximized with offline auto tuning.

• What is offline auto tuning?

When performing advanced magnetic flux vector control, real sensorless vector control or vector control, the motor can be run with the optimum operating characteristics by automatically measuring the motor constants (offline auto tuning) even when each motor constants differs, other manufacturer's motor is used, or the wiring length is long.

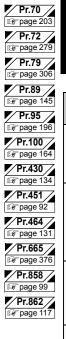

Parameter Number	Name	Initial Value		g Range (400V class)	Description
71	Applied motor	0	0 to 8, 13 to 18, 20, 23, 24, 30, 33, 34, 40, 43, 44, 50, 53, 54		By selecting a standard motor or constant torque motor, thermal characteristic and motor constants of each motor are set.
80	Motor capacity	9999	02150 (01100) or less 02880 (01440) or more	0.4 to 55kW 0 to 3600kW	- Set the applied motor capacity.
			9	999	V/F control
			2, 4,	6, 8, 10	Set the number of motor poles.
81	Number of motor poles	9999		16, 18, 20	X18 signal-ON:V/F control Set 10 + number of motor poles.
			9	999	V/F control
			02150 (01100) or less	0 to 500A	Tuning data (The value measured by offline auto
82	Motor excitation current	9999	02880 (01440) or more	0 to 3600A	tuning is automatically set.)
			9	999	Use the Mitsubishi motor (SF-JR, SF-HR, SF-JRCA, SF-HRCA) constants
83	Motor rated voltage	200/400V *	0 to 1000V		Set the rated motor voltage(V).  * The initial value differs according to the voltage level. (200V/400V)
84	Rated motor frequency	60Hz	10 to	120Hz	Set the rated motor frequency (Hz).
90	Motor constant (R1)	9999	02150 (01100) or less	0 to 50Ω, 9999	
	, ,		02880 (01440) or more	0 to 400mΩ, 9999	
91	Motor constant (B4)	0000	02150 (01100) or less	0 to 50Ω, 9999	
91	Motor constant (R1)	9999	02880 (01440) or more	0 to 400mΩ, 9999	
02	Matanagaratant (I.4)	0000	02150 (01100) or less	0 to 50Ω, (0 to 1000mH), 9999	Tuning data
92	Motor constant (L1)	9999	02880 (01440) or more	0 to 3600mΩ (0 to 400mH), 9999	Tuning data (The value measured by offline auto tuning is automatically set.) 9999: Use the Mitsubishi motor (SF-JR,
93	Motor constant (L2)	9999	02150 (01100) or less	0 to 50Ω (0 to 1000mH), 9999	SF-HR, SF-JRCA, SF-HRCA) constants
	motor constant (LZ)	3333	02880 (01440) or more	0 to 3600mΩ (0 to 400mH), 9999	
94	Motor constant (X)	9999	02150 (01100) or less	0 to 500Ω (0 to 100%), 9999	
<b>54</b>	Motor constant (X)	9999	02880 (01440) or more	0 to 100Ω (0 to 100%), 9999	

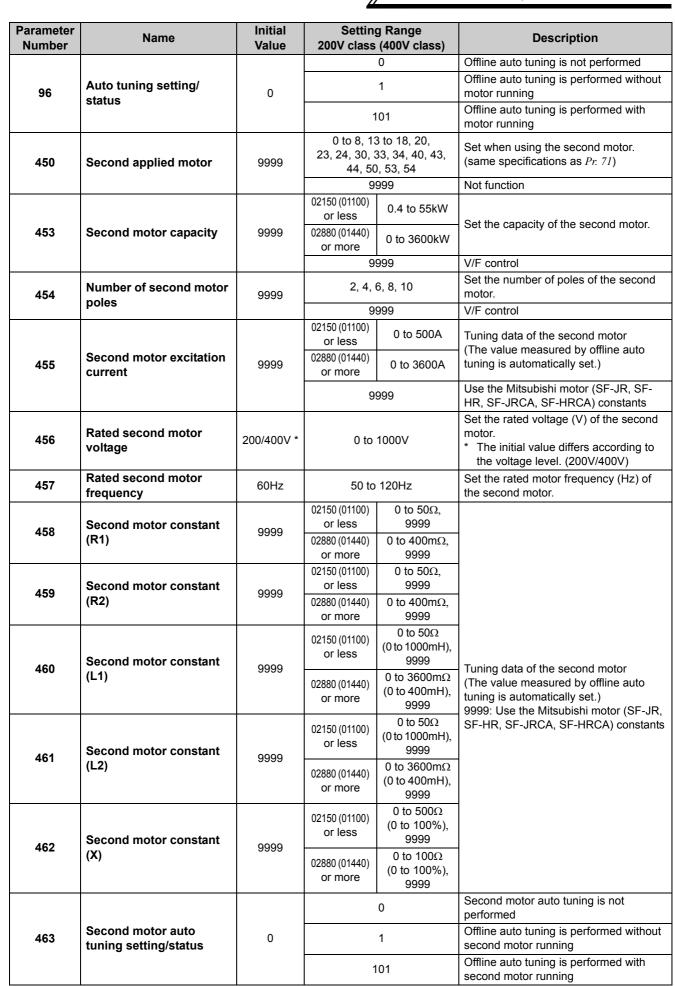



Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description
684	Tuning data unit	0		0	Internal data converter value
004	switchover			1	Displayed in "A, Ω, mH, %"
			02150 (01100) or less	0 to 500A	Tuning data (The value measured by offline auto
859 Torque current	Torque current	9999	02880 (01440) or more	0 to 3600A	tuning is automatically set.)
			99	999	Use the Mitsubishi motor (SF-JR, SF-HR, SF-JRCA, SF-HRCA) constants
	Second motor torque current	9999	02150 (01100) or less	0 to 500A	Tuning data of the second motor (The value measured by offline auto
Udo			02880 (01440) or more	0 to 3600A	tuning is automatically set.)
			99	999	Use the Mitsubishi motor (SF-JR, SF-HR, SF-JRCA, SF-HRCA) constants

### POINT

- This function is made valid only when a value other than "9999" is set in *Pr. 80* and *Pr. 81* and advanced magnetic flux vector control, real sensorless vector control or vector control is selected.
- · You can copy the offline auto tuning data (motor constants) to another inverter with the PU (FR-DU07/FR-PU07).
- · Even when motors (other manufacturer's motor, SF-JRC, etc.) other than Mitsubishi standard motor, high efficiency motor (SF-JR SF-HR 0.4kW or more), Mitsubishi constant-torque motor (SF-JRCA SF-HRCA 200V class four-pole 0.4kW to 55kW) and vector control dedicated motor (SF-V5RU) are used or the wiring length is long, using the offline auto tuning function runs the motor with the optimum operating characteristics.
- Tuning is enabled even when a load is connected to the motor. (As the load is lighter, tuning accuracy is higher. Tuning accuracy does not change even if the inertia is large.)
- For the offline auto tuning, you can select either the motor non-rotation mode (Pr. 96 = "1") or rotation mode. (Pr. 96 = "10").
- · The rotation mode has higher tuning accuracy than the non-rotation mode.
- · Reading/writing/copy of motor constants tuned by offline auto tuning are enabled.
- The offline auto tuning status can be monitored with the PU (FR-DU07/FR-PU07/FR-PU04).
- Do not connect a surge voltage suppression filter (FR-ASF-H) to the FR-A720-02150 (FR-A740-01100) or less and sine wave filter (MT-BSL/BSC) to the FR-A720-02880 (FR-A740-01440) or more between the inverter and motor.

### (1) Before performing offline auto tuning

Check the following before performing offline auto tuning.

- · Make sure advanced magnetic flux vector control (*Pr.* 80, *Pr.* 81), real sensorless vector control or vector control (*Pr.* 800) is selected.
- · A motor should be connected. Note that the motor should be at a stop at a tuning start.
- The motor capacity should be equal to or one rank lower than the inverter capacity. (note that the capacity is 0.4kW or more)
- · The maximum frequency is 120Hz.
- · Motors such as high-slip motor, high-speed motor and special motor cannot be tuned.
- Even if tuning is performed without motor running (*Pr. 96 Auto tuning setting/status* = "1"), the motor may run slightly. Therefore, fix the motor securely with a mechanical brake, or before tuning, make sure that there will be no problem in safety if the motor runs. (Caution is required especially in vertical lift applications). Note that if the motor runs slightly, tuning performance is unaffected.
- Note the following when selecting offline auto tuning performed with motor running (*Pr. 96 Auto tuning setting/status* = "101").

Torque is not enough during tuning.

The motor may be run at nearly its rated speed.

The brake is open.

No external force is applied to rotate the motor.

- Offline auto tuning will not be performed properly if it is performed with a surge voltage suppression filter (FR-ASF-H) connected to the FR-A720-02150 (FR-A740-01100) or less and sine wave filter (MT-BSL/BSC) connected to the FR-A720-02880 (FR-A740-01440) or more between the inverter and motor. Remove it before starting tuning.
- When exercising vector control, use the encoder that is coupled directly to the motor shaft without looseness. Speed ratio should be 1:1.

### (2) Setting

- 1) Select the advanced magnetic flux vector control, real sensorless vector control or vector control (refer to page 92).
- 2) Set "1" or "101" in Pr. 96 Auto tuning setting/status.
  - $\cdot$  When the setting is "1" . . . . . . . Tuning is performed without motor running.

It takes approximately 25 to 120s \* until tuning is completed.

(Excitation noise is produced during tuning.)

\* Tuning time differs according to the inverter capacity and motor type.

· When the setting is "101" . . . . . Tuning is performed without motor running.

It takes approximately 40s until tuning is completed.

The motor runs at nearly its rated frequency.

- 3) Set the rated motor current (initial value is rated inverter current) in *Pr. 9 Electronic thermal O/L relay (refer to page 181 )*.
- 4) Set the rated voltage of motor (initial value is 200V/400V) in *Pr. 83 Motor rated voltage* and rated frequency of motor (initial value is 60Hz) in *Pr. 84 Rated motor frequency*.

(For a Japanese standard motor, etc. which has both 50Hz and 60Hz rated values, set 200V/60Hz or 400V/60Hz).)

5)	Set	Pr.	71	Appli	ied	motor	accord	ling	to '	the	mot	tor	used	
----	-----	-----	----	-------	-----	-------	--------	------	------	-----	-----	-----	------	--

M	Pr. 71 Setting *	
Mitsubishi standard	SF-JR, SF-TH	3
motor	SF-JR 4P-1.5kW or less	23
Mitsubishi high efficiency	SF-HR	43
motor	Others	3
Mitsubishi constant-	SF-JRCA 200V 4P, SF-TH (constant torque)	13
torque motor	SF-HRCA 200V 4P	53
	Others (SF-JRC, etc.)	13
Vector control dediated motor	SF-V5RU SF-THY	33
Other manufacturer's standard motor	_	3
Other manufacturer's constant torque motor	_	13

<sup>\*</sup> For other settings of Pr. 71 , refer to page 184.



### (3) Execution of tuning

### CAUTION =

Before performing tuning, check the monitor display of the operation panel (FR-DU07) or parameter unit (FR-PU04/FR-PU07) if the inverter is in the state ready for tuning. (Refer to 2) below) When the start command is turned on under V/F control, the motor starts.

1)When performing PU operation, press (FWD)/(REV) of the operation panel.

For external operation, turn on the run command (STF signal or STR signal). Tuning starts.

### CAUTION =

- · When selecting offline auto tuning performed with motor running (*Pr. 96 Auto tuning setting/status* = "101"), caution must be taken since the motor runs.
- · To force tuning to end, use the MRS or RES signal or press STOP of the operation panel.
  - (Turning the start signal (STF signal or STR signal) off also ends tuning.)
- · During offline auto tuning, only the following I/O signals are valid:
  - · Input signals <valid signal> STOP, OH, MRS, RT, CS, RES, STF, STR
  - · Output terminal RUN, OL, IPF, FM, AM, A1B1C1
  - Note that the progress status of offline auto tuning is output from AM and FM when speed and output frequency are selected.
- · Since the RUN signal turns on when tuning is started, caution is required especially when a sequerence which releases a mechanical brake by the RUN signal has been designed.
- When executing offline auto tuning, input the run command after switching on the main circuit power (R/L1, S/L2, T/L3) of the inverter.
- · Do not perform ON/OFF switching of the second function selection signal (RT) during execution of offline auto tuning. Auto tuning is not excecuted properly.
- · Setting offline auto tuning (Pr. 96 Auto tuning setting/status = "1 or 101") will make pre-excitation invalid.

2)Monitor is displayed on the operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07) during tuning as below.

	Parame (FR-PU04/FR-	ter Unit PU07) Display	Operation Panel (FR-DU07) Display		
Pr. 96 setting	1	101	1	101	
(1) Setting	1 STOP PU	101 STOP PU	HZ MON PRUN A PUEXT NET V REV FWD	ID I	
(2) Tuning in progress	TUNE 2 STF FWD PU	TUNE 102 STF FWD PU	MON PRIN	102 MON EXT	
(3) Normal end	TUNE COMPLETION STF STOP PU	TUNE 103 COMPLETION STF STOP PU	HON EXT TWO FWD	Flickering	
(4) Error end (when the inverter protective function is activated)	TUNE ERROR	9 OP PU	3	HZ MON PRUN A PU EXT NET V FWD	

·Reference: Offline auto tuning time (when the initial value is set)

Offline Auto Tuning Setting	Time
Non-rotation mode (Pr. 96 = "1")	Approximately 25 to 120s (Tuning time differs according to the inverter capacity and motor type.)
Rotation mode ( <i>Pr. 96</i> = "101")	Approximately 40s (Offline auto tuning time varies with the acceleration and deceleration time settings as indicated below. Offline auto tuning time = acceleration time + deceleration time + approx. 30s)



3)When offline auto tuning ends, press of the operation panel during PU operation. For external operation, turn off the start signal (STF signal or STR signal).

This operation resets the offline auto tuning and the PU's monitor display returns to the normal indication. (Without this operation, next operation cannot be started.)

### **REMARKS**

- · Do not change the Pr. 96 setting after completion of tuning (3 or 103).
- If the Pr. 96 setting is changed, tuning data is made invalid.
- If the Pr. 96 setting is changed, tuning must be performed again.
- 4)If offline auto tuning ended in error (see the table below), motor constants are not set. Perform an inverter reset and restart tuning.

Error Display	Error Cause	Remedy
8	Forced end	Set "1" or "101" in <i>Pr. 96</i> and perform tuning again.
9	Inverter protective function operation	Make setting again.
91	Current limit (stall prevention) function was activated.	Increase acceleration/deceleration time. Set "1" in <i>Pr. 156</i> .
92	Converter output voltage reached 75% of rated value.	Check for fluctuation of power supply voltage.
93	Calculation error A motor is not connected.	Check the motor wiring and make setting again.

5)When tuning is ended forcibly by pressing or turning off the start signal (STF or STR) during tuning, offline auto tuning does not end normally. (The motor constants have not been set.)

Perform an inverter reset and restart tuning.

### === CAUTION =

- The motor constants measured once in the offline auto tuning are stored as parameters and their data are held until the offline auto tuning is performed again.
- An instantaneous power failure occurring during tuning will result in a tuning error.
   After power is restored, the inverter goes into the normal operation mode. Therefore, when STF (STR) signal is on, the motor runs in the forward (reverse) rotation.
- · Any alarm occurring during tuning is handled as in the ordinary mode. Note that if an error retry has been set, retry is ignored.
- · The set frequency monitor displayed during the offline auto tuning is 0Hz.

## **A** CAUTION

Note that the motor may start running suddenly.

⚠ When the offline auto tuning is used in vertical lift application, e.g. a lifter, it may drop due to insufficient torque.



### (4) Utilizing or changing offline auto tuning data for use

The data measured in the offline auto tuning can be read and utilized or changed.

<Operating procedure>

1)Set Pr. 71 according to the motor used.

Mo	tor	Pr. 71 Setting*
	SF-JR, SF-TH	4
Mitsubishi standard motor Mitsubishi high efficiency	SF-JR 4P 1.5kW or less	24
motor	SF-HR	44
	Others	4
Mitsubishi constant-torque	SF-JRCA 200V 4P SF-TH (constant torque)	14
motor	SF-HRCA 200V 4P	54
	Others (SF-JRC, etc.)	14
Vector control dedicated motor	SF-V5RU SF-THY	34
Other manufacturer's standard motor	-	4
Other manufacturer's constant torque motor	_	14

<sup>\*1</sup> For other settings of Pr. 71, refer to the page 184.

2)In the parameter setting mode, read the following parameters and set desired values.

Parameter Number	Name	Setting Range	Setting Increments	Initial Value
82	Motor excitation current	0 to ***, 9999	1	9999
90	Motor constant (R1)	0 to ***, 9999	1	9999
91	Motor constant (R2)	0 to ***, 9999	1	9999
92	Motor constant (L1)	0 to ***, 9999	1	9999
93	Motor constant (L2)	0 to ***, 9999	1	9999
94	Motor constant (X)	0 to ***, 9999	1	9999
859	Torque current	0 to ***, 9999	1	9999

### **REMARKS**

• The display units of the motor constants read using *Pr. 684 Tuning data unit switchover* can be changed. Note that parameter values can not be changed.

Pr. 684 Setting 200V class (400V class)		Pr. 82, Pr.455	Pr. 90, Pr. 458	Pr. 91, Pr. 459	Pr. 92, Pr. 460	Pr. 93, Pr. 461	Pr. 94, Pr. 462	Pr. 859, Pr. 860
0				Internal d	lata conver	ted value		
1	02150 (01100) or less	0.01A	0.001Ω	0.001Ω	0.1mH	0.1mH	0.1%	0.01A
	02880 (01440) or more	0.1A	$0.01 \text{m}\Omega$	$0.01 \text{m}\Omega$	0.01mH	0.01mH	0.01%	0.1A

- · When "9999" is set in Pr. 90 to Pr. 94, Mitsubishi motor (SF-JR, SF-HR,SF-JRCA, SF-HRCA) constants are used.
- · As the motor constants measured in the offline auto tuning have been converted into internal data (\*\*\*\*), refer to the following setting example when making setting:

Setting example To slightly increase Pr. 90 value (5%)

When Pr. 90 is displayed "2516",

set 2642, i.e.  $2516 \times 1.05 = 2641.8$ , in Pr. 90.

(The value displayed has been converted into a value for internal use. Hence, simple addition of a given

value to the displayed value has no significance.)

### (5) Method to set the motor constants without using the offline auto tuning data

The Pr. 92 and Pr. 93 motor constants may either be entered in  $[\Omega]$  or in [mH]. Before starting operation, confirm which motor constant unit is used.

• To enter the Pr. 92 and Pr. 93 motor constants in  $[\Omega]$ 

<Operating procedure>

1) Set Pr. 71 according to the motor used.

		Star Connection Motor	Delta Connection Motor
Setting	Standard motor	5	6
Setting	Constant-torque motor	15	16

2) In the parameter setting mode, read the following parameters and set desired values.

Iq =torque current, I100 =rated current, I0 =no load current

$$Iq = \sqrt{1100^2 - 10^2}$$

Parameters Number	Name	Setting Range 200V class (400V class)		Setting Increments	Initial Value
82	Motor excitation current	02150 (01100) or less	0 to 500A	0.01A	9999
02	(no load current)	02880 (01440) or more	0 to 3600A	0.1A	9999
90	Motor constant (R1)	02150 (01100) or less	0 to 50Ω, 9999	0.001Ω	9999
90	WOLOF CONSTANT (KT)	02880 (01440) or more	0 to 400mΩ, 9999	$0.01$ m $\Omega$	9999
91	Motor constant (R2)	02150 (01100) or less	0 to 50Ω, 9999	0.001Ω	9999
91	Woldi Constant (RZ)	02880 (01440) or more	0 to 400mΩ, 9999	$0.01$ m $\Omega$	9999
92	Motor constant (L1)	02150 (01100) or less	0 to 50Ω, 9999	0.001Ω	9999
92		02880 (01440) or more	0 to 3600mΩ, 9999	$0.01$ m $\Omega$	
93	Motor constant (L2)	02150 (01100) or less	0 to 50Ω, 9999	0.001Ω	0000
93		02880 (01440) or more	0 to 3600mΩ, 9999	$0.01$ m $\Omega$	9999
94	Motor constant (V)	02150 (01100) or less	0 to 500Ω, 9999	0.01Ω	0000
94	Motor constant (X)	02880 (01440) or more	0 to 100Ω, 9999	0.0122	9999
859	Torque current	02150 (01100) or less	0 to 500A	0.01A	0000
659	Torque current	02880 (01440) or more	0 to 3600A	0.1A	9999

3) Refer to the following table and set Pr. 83 and Pr. 84.

Parameter Number	Name	Setting Range	Setting Increments	Initial Value
83	Motor rated voltage	0.1V	0 to 1000V	200V/400V*
84	Rated motor frequency	10 to 120Hz	0.01Hz	60Hz

<sup>\*</sup> The initial value differs according to the voltage level. (200V/400V)

### CAUTION

- · When "9999" is set in Pr. 90 to Pr. 94, Mitsubishi motor (SF-JR, SF-HR, SF-JRCA, SF-HRCA) constants are used.
- If "star connection" is mistaken for "delta connection" or vice versa during setting of *Pr. 71*, advanced magnetic flux vector control, real sensorless vector control and vector control cannot be exercised properly.



- To enter the *Pr. 92* and *Pr. 93* motor constants in [mH] <Operating procedure>
- 1) Set Pr. 71 according to the motor used.


	Motor			
Mitsubishi standard	SF-JR	0		
motor	SF-JR 4P 1.5kW or less	20		
Mitsubishi high efficiency motor	SF-HR	40		
Mitsubishi constant-	SF-JRCA 200V 4P SF-TH (constant torque)	1		
torque motor	SF-HRCA 200V 4P	50		
Vector control dedicated motor	SF-V5RU	30		

<sup>\*1</sup> For other settings of Pr. 71, refer to the page 184.

 $2) \ In \ the \ parameter \ setting \ mode, \ read \ the \ following \ parameters \ and \ set \ desired \ values.$ 

Calculate the Pr. 94 value from the following formula.

$$Pr. 94 \text{ setting} = (1 - \frac{M^2}{L1 \times L2}) \times 100 \text{ (\%)}$$

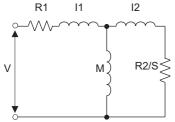

L1= I1+ M: Primary inductance L2= I2+ M: Secondary inductance R1: Primary resistance

R2: Secondary resistance

I1: Primary leakage inductance

I2: Secondary leakage inductance

M: Excitation inductance S: Slip

Motor equivalent circuit diagram

Parameter Number	Name	Setting 200V class	Setting Increments	Initial Value	
82	Motor excitation current	02150 (01100) or less	0 to 500A	0.01A	9999
02	(no load current)	02880 (01440) or more	0 to 3600A	0.1A	9999
90	Motor constant (R1)	02150 (01100) or less	0 to 50Ω, 9999	0.001Ω	9999
90	Motor constant (KT)	02880 (01440) or more	0 to 400mΩ, 9999	0.01mΩ	9999
91	Motor constant (R2)	02150 (01100) or less	0 to 50Ω, 9999	0.001Ω	9999
91	Woldi Constant (RZ)	02880 (01440) or more	0 to 400mΩ, 9999	0.01mΩ	9999
92	Motor constant (L1)	02150 (01100) or less	0 to 1000mH, 9999	0.1mH	9999
92	Motor constant (L1)	02880 (01440) or more	0 to 400mH, 9999	0.01mH	9999
93	Motor constant (L2)	02150 (01100) or less	0 to 1000mH, 9999	0.1mH	9999
93	Motor constant (L2)	02880 (01440) or more	0 to 400mH, 9999	0.01mH	9999
94	Motor constant (V)	02150 (01100) or less	0 to 100%, 9999	0.1%	9999
94	Motor constant (X)	02880 (01440) or more	0 to 100%, 9999	0.01%	9999
859	Torque ourrent	02150 (01100) or less	0 to 500A	0.01A	9999
659	Torque current	02880 (01440) or more	0 to 3600A	0.1A	3333

3) Refer to the following table and set Pr. 83 and Pr. 84.

Parameter Number	Name	Setting Range	Setting Increments	Initial Value
83	Motor rated voltage	0.1V	0 to 1000V	200V/400V*
84	Rated motor frequency	10 to 120Hz	0.01Hz	60Hz

<sup>\*</sup> The initial value differs according to the voltage level. (200V/400V)

### REMARKS

· When "9999" is set in *Pr. 90 to Pr. 94* , Mitsubishi motor (SF-JR, SF-HR,SF-JRCA, SF-HRCA) constants are used.

### (6) Tune second applied motor

- · When you want to switch two motors with one inverter, set the second motor in *Pr. 450 Second applied motor (refer to page 184)*. Initial setting is without second applied motor.
- · Turning the RT signal on makes the following parameters for the second parameters valid.

Functions	RT Signal ON (second motor)	RT Signal OFF (first motor)
Motor capacity	Pr. 453	Pr. 80
Number of motor poles	Pr. 454	Pr. 81
Motor excitation current	Pr. 455	Pr. 82
Motor rated voltage	Pr. 456	Pr. 83
Rated motor frequency	Pr. 457	Pr. 84
Motor constant (R1)	Pr. 458	Pr. 90
Motor constant (R2)	Pr. 459	Pr. 91
Motor constant (L1)	Pr. 460	Pr. 92
Motor constant (L2)	Pr. 461	Pr. 93
Motor constant (X)	Pr. 462	Pr. 94
Auto tuning setting/status	Pr. 463	Pr. 96

### **REMARKS**

• The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.

### CAUTION =

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

### ◆ Parameters referred to ◆

Pr. 7 Acceleration time, Pr. 8 Deceleration time Refer to page 172

Pr. 9 Electronic thermal O/L relay Refer to page 181

Pr. 71 Applied motor Refer to page 184

Pr. 80 Motor capacity, Pr. 81 Number of motor poles Refer to page 92

Pr. 95 Online auto tuning selection Refer to page 196

Pr. 156 Stall prevention operation selection Refer to page 149

Pr. 178 to Pr. 189 (input terminal function selection) The Refer to page 227

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

Pr. 800 Control method selection Refer to page 92



### 4.13.4 Online auto tuning (Pr. 95, Pr. 574) Magnetic flux Sensorless Vector



When online auto tuning is selected under advanced magnetic flux vector control, real sensorless vector control or vector control, excellent torque accuracy is provided by temperature compensation even if the secondary resistance value of the motor varies with the rise of the motor temperature.

Parameter Number	Name	Initial Value	Setting Range	Description
			0	Online auto tuning is not performed
95	Online auto tuning selection	0	1	Start-time online auto tuning
	SCICCION		2	Magnetic flux observer (normal tuning)
574	Second motor online auto tuning	0	0, 1	Select the second motor online auto tuning. (same as <i>Pr. 95</i> )

### (1) Start-time online auto tuning (setting is "1")

- By quickly tuning the motor constants at a start, high accuracy operation unaffacted by the motor temperature and stable operation with high torque down to ultra low speed can be performed.
- · Make sure advanced magnetic flux vector control (Pr.80, Pr.81), real sensorless vector control or vector control (Pr.800) is selected.
- · Before performing online auto tuning, perform offline auto tuning without fail.

### <Operation method>

- 1) Refer to page 186 to perform offline auto tuning.
- 2) Check that "3" or "103" (offline auto tuning completion) is set in Pr. 96 Auto tuning setting/status.
- 3) Set "1" (start-time online auto tuning) in *Pr. 95 Online auto tuning selection*. Online auto tuning is performed from the next starting.
- 4) Before starting operation, check that the following parameters have been set.

Parameter Number	Description					
9	Used as rated motor current and electronic thermal relay parameters.					
71	Applied motor					
80	Motor capacity (down to one rank lower than the inverter capacity, note that the capacity should be 0.4kW to 55kW)					
81	Number of motor poles					

5) When performing PU operation, press (FWD)/(REV) of the operation panel.

For external operation, turn on the run command (STF signal or STR signal).

### = CAUTION

• For using start-time online auto tuning in vertical lift applications, examine the utilization of a brake sequence for the brake opening timing at a start. Though the tuning ends in about a maximum of 500ms after a start, torque is not provided fully during that period. Therefore, note that there may be a possibility of drop due to gravity.

### (2) Magnetic flux observer (normal tuning) (setting value is "2")

· When exercising vector control using a motor with encoder, it is effective for torque accuracy improvement. The current flowing in the motor and the inverter output voltage are used to estimate/observe the magnetic flux in the motor.

The magnetic flux of the motor is always detected with high accuracy so that an excellent characteristic is provided regardless of the change in the temperature of the secondary resistance.

· Vector control (Pr.80, Pr.81, Pr.800) should be selected. (Refer to page 58.)


### CAUTION

· For the SF-V5RU, SF-JR (with encoder), SF-HR (with encoder), SF-JRCA (with encoder) or SF-HRCA (with encoder), it is not necessary to perform offline auto tuning to select adaptive magnetic flux observer. (Note that it is necessary to perform offline auto tuning (non-rotation mode) for the wiring length resistance to be reflected on the control when the wiring length is long (30m (98.4feet) or longer as reference).

# REMARKS

- Online auto tuning does not operate if the MRS signal is input, if the preset speed is less than the *Pr. 13 Starting frequency* (V/F control or advanced magnetic flux vector control), or if the starting conditions of the inverter are not satisfied, e.g. inverter error.
- · Online auto tuning does not operate during deceleration or at a restart during DC brake operation.
- · Invalid for jog operation.
- · Automatic restart after instantaneous power failure overrides when automatic restart after instantaneous power failure is selected. (Start-time online auto tuning is not performed at frequency search.)
  - Perform online auto tuning at a stop with the X28 signal when using automatic restart after instantaneous power failure together.(Refer to the following for details.)
- · Zero current detection and output current detection are valid during online auto tuning.
- · The RUN signal is not output during online auto tuning. The RUN signal turns on at a start.
- · If the period from an inverter stop to a restart is within 4s, start-time tuning is performed but the tuning results are not reflected.

### (3) Start-time online auto tuning from external terminal (X28 signal, Y39 signal)

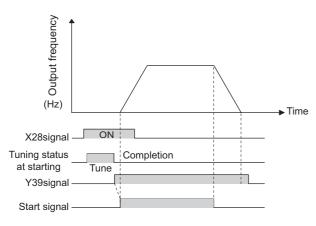

- By turning on the start-time tuning signal (X28) before the start signal (STF or STR) turns on (at a stop), online tuning is performed and a starting delay after start signal turns on due to tuning can be avoided.
- · Perform offline auto tuning and set "1" (start-time tuning) in *Pr. 95*.
- When the start-time tuning completion signal (Y39) is off, start-time tuning with the X28 signal is performed.
- · Start-time tuning ends within 500ms maximum.
- When using the X28 signal, set "28" in *Pr. 178 to Pr. 189 (input terminal function selection)* and assign functions to the input terminal.
- · When using the Y39 signal, set "39 (positive logic) or 139 (negative logic)" in *Pr. 190 to Pr. 196 (output terminal function selection)* and assign functions to the output terminal.

### **REMARKS**

- · Start-time tuning is performed when the start signal is turned on during zero speed control also.
- · The Y39 signal is in on status while secondary magnetic flux exists after the motor stop.
- · While the Y39 signal is on, the X28 signal is not valid.
- · The STF, STR signals are valid after completion of the start-time tuning.
- Only the output signals below are valid during tuning.
   IPF, THP, PU, Y12, RY, ER, LF, MT, FM, AM, A1, B1, C1, A2, B2, C2
- · Tuning is invalid during V/F control.

### CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection) or Pr. 190 to Pr. 196 (output terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.



### (4) Tune second applied motor

· When you want to switch two motors with one inverter, set the second motor in *Pr. 450 Second applied motor*.(Initial setting is without second applied motor. (*Refer to page 184*))

Perform tuning using Pr. 574 Second motor online auto tuning.

Pr. 574 Second motor online auto tuning is made valid when the RT signal turns on.

Parameter Number	Description					
51	Used as rated motor current and electronic thermal relay parameters.					
450	Applied motor					
453	Motor capacity (down to one rank lower than the inverter capacity, note that the capacity should be 0.4kW to 55kW)					
454	Number of motor poles					

### **REMARKS**

The RT signal acts as the second function selection signal and makes the other second functions valid. (*Refer to page 231.*)
The RT signal is assigned to the terminal RT in the initial setting. By setting "3" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the RT signal to the other terminal.

### CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.

### ◆ Parameters referred to ◆

Pr. 9 Electronic thermal O/L relay Telev Refer to page 181

Pr. 71 Applied motor Refer to page 184

Pr. 80 Motor capacity Refer to page 196

Pr. 81 Number of motor poles Refer to page 196

Pr. 96 Auto tuning setting/status Refer to page 186

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

Pr. 190 to Pr .196 (output terminal function selection) Refer to page 234

### 4.14 Motor brake and stop opersation

Purpose	Parameter that must	be Set	Refer to Page
Motor braking torque adjustment	DC injection brake and zero speed control	Pr. 10 to Pr. 12, Pr. 802, Pr. 850	199
Improve the motor braking torque with an option	Selection of a regenerative brake	Pr. 30, Pr. 70	203
Coast the motor to a stop	Selection of motor stopping method	Pr. 250	209
Used to stop the motor with a mechanical brake (vibration restraint at stop-on-contact)	Stop-on-contact control	Pr. 270, Pr. 275, Pr. 276	210
Used to stop the motor with a mechanical brake (operation timing of a mechanical brake)	Brake sequence function	Pr. 278 to Pr. 285, Pr. 292	213

# 4.14.1 DC injection brake and zero speed control, servo lock (LX signal, X13 signal, Pr. 10 to Pr. 12, Pr. 802, Pr. 850)


The DC injection brake can be operated at a motor stop to adjust the stop timing and braking torque. Zero speed control can be also selected during real sensorless vector control.

In DC injection brake operation, DC voltage is directly applied to the motor to prevent the motor shaft from rotating. In zero speed control, vector control is performed to maintain 0r/min. In either control, the motor will not return to the original position if the motor shaft rotates due to external force.

The motor shaft position is maintained with servo lock. The motor will return to the original position if the motor shaft rotates due to external force.


Parameter Number	Name	Initial Value 200V class (400V class)		Setting Range	Description	
10	DC injection brake operation frequency	3Hz		0 to 120Hz	Set the operation frequency of the DC injection brake (zero speed control).	
	operation frequency			9999	Operated at Pr. 13 or less.	
				0	DC injection brake (zero speed control) disabled	
11	DC injection brake operation time			0.1 to 10s	Set the operation time of the DC injection brake (zero speed control).	
				8888	Operate when X13 signal is on	
		00330 (00170) or less				
12	DC injection brake operation voltage	00460(00230) to 02150(01100)	2%	0 to 30%	Set the DC injection brake voltage (torque). When "0" is set, DC injection brake is disabled.	
		02880 (01440) or more	1%			
802 *	Pre-excitation	0		0	Zero speed control	
002	selection			1	Servo lock	
850	Brake operation	0		0	DC injection brake operation	
850	selection	U		1	Zero speed control	

<sup>\*</sup> This parameter can be set when the FR-A7AP (option) is mounted.

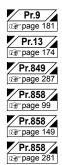




### When Pr. 11="0.1 to 10s"

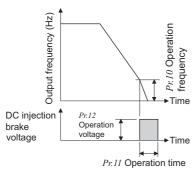

### When Pr. 11="8888"

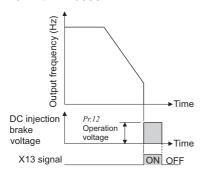

### (1) Operation frequency setting (Pr. 10)

- · When the frequency at which the DC injection brake (zero speed control, servo lock) operates is set in *Pr. 10*, the DC injection brake (zero speed control, servo lock) is operated when this frequency is reached during deceleration.
- At the Pr. 10 setting of "9999", the DC injection brake (zero speed control, servo lock) is operated when deceleration is made to the frequency set in Pr. 13 Starting frequency.

### REMARKS

- Performing pre-excitation (zero speed control) under real sensorless vector may cause motor vibration, etc. at deceleration to stop. To prevent this, set Pr.10 DC injection brake operation frequency to 0.5Hz or less.
- The initial value of Pr. 10 automatically changes to 0.5Hz during vector control

### (2) Operation time setting (X13 signal, Pr. 11)

- Use Pr. 11 to set the duration period the DC injection brake (zero speed control, servo lock) is applied.
- When Pr. 11 = "0s", the DC injection brake (zero speed control, servo lock) is not operated. (At a stop, the motor coasts.)
- When *Pr. 11*= "8888", the DC injection brake (zero speed control, servo lock) is applied when X13 signal is turned on.
- For the terminal used for X13 signal input, set "13" in any of *Pr. 178 to Pr. 189* to assign the function. (*Refer to page 227*)
- When the motor does not stop due to large load moment (J), increasing the setting produces an effect.

### REMARKS

- When the X13 signal is turned on with Pr. 11= "8888", zero speed control is activated regardless of setting of Pr. 850 Brake operation selection.
- Under vector control, zero speed control or servo rock is activated depending on the  $Pr.\ 802$  setting.



### (3) Operation voltage (torque) setting (Pr. 12)

- · Use *Pr. 12* to set the percentage to the power supply voltage. (This parameter is not used during zero speed control or servo lock.)
- · When Pr. 12 = "0%", the DC injection brake is not operated. (At a stop, the motor coasts.)
- · When using the constant-torque motor (SF-JRCA) and energy saving motor (SF-HR, SF-HRCA), change the *Pr. 12* setting as follows.

SF-JRCA: FR-A720-00175 (FR-A740-00090) or less ...4%,

FR-A720-00240 to 02150 (FR-A740-00120 to 01100)...2%

SF-HR, SF-HRCA: FR-A720-00175 (FR-A740-00090) or less...4%,

FR-A720-00240 and 00330 (FR-A740-00120 and 00170)...3%, FR-A720-00460 to 02150 (FR-A740-00230 to 01100)...2%

(FR-A720-01150 (FR-A740-00570)...1.5%)

### **REMARKS**

For the FR-A720-00240, 00330 and FR-A740-00120, 00170, when the *Pr. 12* setting is as below, changing the *Pr. 71 Applied motor* setting changes the *Pr. 12* setting automatically, it is not necessary to change the *Pr. 12* setting.

(a) When *Pr. 12* is 4% (initial value)

The *Pr. 12* setting is automatically changed to 2% if the *Pr. 71* value is changed from the value selecting the standard motor (0, 2 to 8, 20, 23, 24, 40, 43, 44) to the value selecting the constant torque motor (1, 13 to 18, 50, 53, 54).

(b) When Pr. 12 is 2%

The *Pr. 12* setting is automatically changed to 4% (initial value) if the *Pr. 71* value is changed from the value selecting the constant torque motor (1, 13 to 18, 50, 53, 54) to the value selecting the standard motor (0, 2 to 8, 20, 23, 24, 40, 43, 44).

### (4) Brake operation selection during real sensorless vector control (Pr. 850)

· You can select DC injection brake (initial value) or zero speed control for brake operation during real sensorless vector control.

When Pr.~850 = "1", zero speed control is exercised when the frequency reaches or decreases below the frequency set in Pr.10.

### **REMARKS**

- · When the X13 signal is on with Pr. 11 = "8888", zero speed control is activated regardless of setting of Pr. 850 Brake operation selection.
- · When restarting from brake operation during real sensorless vector control, set "1" (zero speed control) in *Pr.850*. When the setting value is "0" (DC injection brake), it may take approx. 2s until ....is actually output from when the start command is input.

### (5) Brake operation selection under vector control (Pr. 802)

· When pre-excitation is performed, select zero speed control or servo lock using Pr. 802.

Pr. 802 Setting	Pre-excitation	Description
0 (initial value)	Zero speed control	Even under load, an attempt is made to maintain 0r/min to keep the motor shaft stopped. Note that if the shaft is overcome and turned by external force, it does not return to the original position. Position control is not exercised and only speed control is carried out to perform operation.
1	Servo lock	Even under load, an attempt is made to maintain the motor shaft position. Note that if the shaft is turned by external force, it returns to the original position after the external force has gone away. Since position control is exercised, you can adjust this position loop gain using <i>Pr. 422 Position loop gain</i> .


· The relationship between the DC injection brake operation and pre-excitation operation under each control

Control Method	Control mode	Pr. 802	Pr. 850	Decelerates to stop	LX-ON	X13-ON ( <i>Pr. 11</i> = "8888")
V/F control	_	_	_	DC Injection Brake	_	DC Injection Brake
Advanced magnetic flux vector control	_	_	_	DC Injection Brake	_	DC Injection Brake
Real sensorless vector control	Speed	_	0	DC Injection Brake	Zero speed	DC Injection Brake
	Эреец	_	1	Zero speed	Zeio speed	
	Torque	_	0	DC Injection Brake	Zero speed	Zero speed
	loique	_	1	Zero speed	Zeio speed	zero speed
	Speed	0	_	Zero speed	Zero speed	Zero speed
Vector control	Speed	1	_	Servo lock	Servo lock	Servo lock
	Torque	0	_	Zero speed	Zero speed	Zero speed
	Torque	1	_	Servo lock	Servo lock	Servo lock
	Position	_	_	_	Servo lock	_



### (6) Pre-excitation signal (LX signal)

- · When the LX signal is turned on under real sensorless vector control or vector control, pre-excitation (zero speed control or servo lock) is exercised during a stop.
- · For the terminal used for LX signal input, set "23" in any of Pr. 178 to Pr. 186 to assign the function.

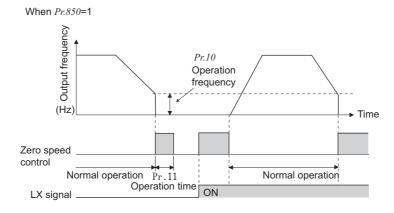

### CAUTION

- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Make setting after confirming the function of each terminal.
- Performing pre-excitation (LX signal and X13 signal) under torque control (real sensorless vector control) may start the motor running at a low speed even when the start command (STF or STR) is not input. The motor may run also at a low speed when the speed limit value=0 with a start command input. Perform pre-excitation after making sure that there will be no problem in safety if the motor runs.
- · Although FWD/REV of the operation panel is not lit during pre-excitation, note that voltage is applied to the motor.
- Note that when offline auto tuning (*Pr. 96 Auto tuning setting/status=* "1 or 101") is performed during pre-excitation, offline auto tuning is not executed but the motor starts.

# **⚠** CAUTION

As stop holding torque is not produced, install a mechanical brake.

After the machine stops fully and the mechanical brake is applied, switch the LX signal (pre-excitation) off.


### ♦ Parameters referred to ♦

Pr. 13 Starting frequency Refer to page 174


Pr. 71 Applied motor Refer to page 184

Pr. 178 to Pr. 189 (Input terminal function selection) Refer to page 227

Pr. 422 Position loop gain Refer to page 138

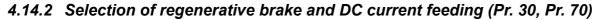

- •When making frequent starts/stops, use the optional high-duty brake resistor (FR-ABR), brake unit (BU, FR-BU, MT-BU) to increase the regenerative brake duty.
- ●Use a power regeneration common converter (FR-CV) or power regeneration converter (MT-RC) for continuous operation in regeneration status.
  - Use the "high power factor converter (FR-HC, MT-HC) to reduce harmonics, improve the power factor, or continuously use the regenerative mode.
- ●You can select either DC feeding mode 1 in which operation is performed with DC power (terminal P, N) or DC feeding mode 2 in which operation is performed normally with the AC power (terminal R, S, T) and performed with DC power such as battery at occurrence of power failure.

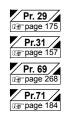

Parameter Number	Name	Initial Value		Range class class)	Description	
					Regeneration unit	Terminal for power supply to the inverter
			(	)		R, S, T
			1	0	Built-in brake resistor, without regenerative function, brake unit	P, N (DC feeding mode 1)
			2	0	(FR-BU, BU type)	R, S, T / P, N (DC feeding mode 2)
30	Regenerative function	0	0 1		R, S, T	
	selection		11		High-duty brake resistor, Brake unit (MT-BU5), Power	P, N (DC feeding mode 1)
			21		regeneration converter (MT-RC)	R, S, T / P, N (DC feeding mode 2)
			2		High power factor converter (FR-HC, MT-HC), power regeneration common converter (FR-CV)	P, N
70	70 Special regenerative brake duty 0%		02150 (01100) or less	0 to 30%	Cat the 0/ FD of the built in broke	tronsister energias
/0			02880 (01440) 0 to 10% or more		Set the %ED of the built-in brake transistor operation.	

### <FR-A720-02150(FR-A740-01100) or less>

Regeneration unit	Power supply to the inverter	Pr. 30 Setting	Pr. 70 Setting	Remarks
Built-in brake (FR-A720-00330	R, S, T	0 (initial value)		The regenerative brake duty is as follows. • FR-A720-00030 to 00175 3%
(FR-A740-00170) or less).	P, N	10		· FR-A720-00240, 00330 2%
brake unit (FR-BU, BU)	R, S, T / P, N	20		FR-A740-00015 to 00170 2% Other than the above 0% (without built-in brake resistor)
High-duty brake resistor (FR-ABR)	R, S, T	1		Change the setting according to the capacity.
(FR-A720-00900	P, N	11	10/6%	(FR-A720-00330(FR-A740-00170) or less /
(FR-A740-00430) or less)	R, S, T / P, N	21		FR-A720-00460(FR-A740-00230) or more)
High power factor converter (FR-HC), Power regeneration common converter (FR-CV)	P, N	2	0 (initial value)	



### <FR-A720-02880(FR-A740-01440) or more>

Regeneration unit	Power supply to the inverter	Pr. 30 Setting	Pr. 70 Setting
Not used	R, S, T	0 (initial value)	_
	P, N	10	
	R, S, T / P, N	20	
Power regeneration converter (MT-RC)	R, S, T	1	0% (initial value)
Brake unit (MT-BU5)	R, S, T	1	10%
	P, N	11	
	R, S, T / P, N	21	
High power factor converter (FR-HC)	P, N	2	

### (1) When the built-in brake resistor, the brake unit (BU, FR-BU) is used

· Set "0" (initial value) in *Pr. 30*. The *Pr. 70* setting is made invalid.

At this time, the regenerative brake duty is as follows. (The built-in brake resistor is provided for the FR-A720-00330(FR-A740-00170) or less.)

- · FR-A720-00030 to 00175..3%
- · FR-A720-00240, 00330.....2%
- · FR-A740-00015 to 00170..2%
- · Other than the above ......0% (without built-in brake resistor)

### (2) When using the high-duty brake resistor (FR-ABR)

- · Set "1" in Pr. 30.
- · Set Pr. 70 as follows.

FR-A720-00330(FR-A740-00170) or less ............ 10% FR-A720-00460(FR-A740-00230) or more ........ 6%

### (3) When using a brake unit (MT-BU5) and power regeneration converter (MT-RC)

- · Set "1, 11 or 21" in Pr. 30.
- · Set "10%" In Pr. 70 when using a brake unit (MT-BU5).
- · Set "0%" in Pr. 70 when using a power regeneration converter (MT-RC).


# (4) When using the high power factor converter (FR-HC, MT-HC) or power regeneration common converter (FR-CV)

- · Set "2" in Pr. 30. The Pr. 70 setting is made invalid.
- · Use any of Pr. 178 to Pr. 189 (input terminal function assignment) to assign the following signals to the contact input terminals.
  - (a) X10 signal: FR-HC, MT-HC connection, FR-CV connection (inverter operation enable signal)

    To make protective coordination with the FR-HC, MT-HC or FR-CV, use the inverter operation enable signal to shut off the inverter output. Input the RDY signal of the FR-HC, MT-HC (RDYB signal of the FR-CV).
  - (b) X11 signal: FR-HC, MT-HC connection (instantaneous power failure detection signal) When the setting has been made to hold the mode at occurrence of an instantaneous power failure for RS-485 communication operation, use this signal to hold the mode. Input the Y1 or Y2 signal (instantaneous power failure detection signal) of the FR-HC, MT-HC.
- For the terminal used for X10 or X11 signal input, assign its function by setting "10" (X10) or "11" (X11) in any of *Pr. 178 to Pr. 189*.

### (5) DC feeding mode1 ( $Pr. 3\theta = "10, 11"$ )

- · Setting "10, 11" in Pr. 30 enables DC power supply operation.
- · Leave the AC power supply connection terminal R/L1, S/L2, and T/L3 open and connect the DC power supply to terminal P/+ and N/-. Also, remove jumpers across terminal R/L1-R/1/L11 and S/L2-S1/L21, and connect terminals R1/L11 and S1/L21 to terminal P/+ and N/-.
- · The diagram below is a connection example.

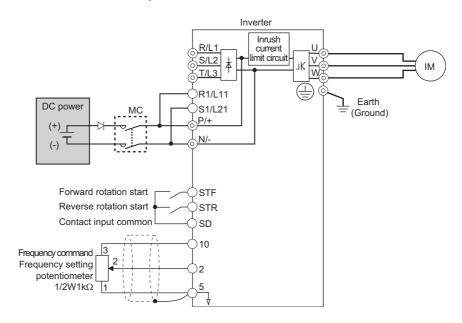




#### (6) DC feeding mode2 (*Pr.* $3\theta$ = "20, 21")

- · When "20 or 21" is set in *Pr. 30*, operation is performed with AC power normally and with DC power such as battery at power failure.
- · Connect the AC power supply to terminal R/L1, S/L2, and T/L3 and connect the DC power supply to terminal P/+ and N/-. Also, remove jumpers across terminal R/L1-R/1/L11 and S/L2-S1/L21, and connect terminals R1/L11 and S1/L21 to terminal P/+ and N/-.
- Turning DC feeding operation permission signal (X70) enables DC power supply operation. Refer to the table below for I/O signals.


Sigr	nal	Name	Description	Parameter setting
Input	X70	DC feeding operation permission signal	When performing operation with DC feeding, turn on the X70 signal. When the inverter output is shut off because of power failure, the inverter can be started in about 150ms after switching off the X70 signal then on again. (When automatic restart operation is valid, the inverter starts after additional $Pr. 57$ set time has elapsed.) When the X70 signal turns off during inverter operation, output is shutoff $(Pr. 261 = 0)$ or the inverter is decelerated to a stop $(Pr. 261 \neq 0)$ .	Set 70 in any of <i>Pr. 178</i> to <i>Pr. 189</i> .
	X71	DC feeding cancel signal	Turn this signal on to stop DC feeding. When the X71 signal is turned on during inverter operation with turning on the X70 signal, output is shutoff $(Pr.\ 261=0)$ or the inverter is decelerated to a stop $(Pr.\ 261\neq0)$ , then the X85 signal turns off after the inverter stop. After turning on of the X71 signal, operation can not be performed even if the X70 signal is turned on.	Set 71 in any of <i>Pr. 178</i> to <i>Pr. 189</i> .
Output	Y85	Output Y85 DC feeding signal	This signal turns on during power failure or under voltage of AC power. The signal turns off when the X71 signal turns on or power is restored. The Y85 signal does not turn off during inverter operation even if the power is restored and turns off after an inverter stop. When the Y85 signal turns on because of undervoltage, the Y85 signal does not turn off even if undervoltage is eliminated. ON/OFF status is retained at an inverter reset.	Set "85 (positive logic) or 185 (negative logic)" in any of <i>Pr. 190</i> to <i>Pr. 196</i>

· The following shows the connection diagram when switching to a DC power using inverter power failure detection.

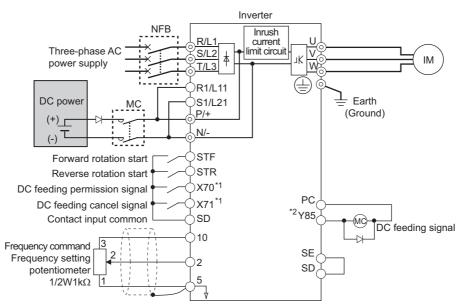


- \*1 Assign the function using Pr.178 to Pr.189 (input terminal function selection).
- $^{\star}2$  Assign the function using Pr.190 to Pr.196 (output terminal function selection).


· Operation example 1 at power failure

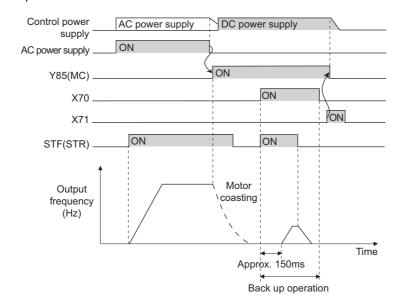

· Operation example 2 at power failure (when DC power is restored)

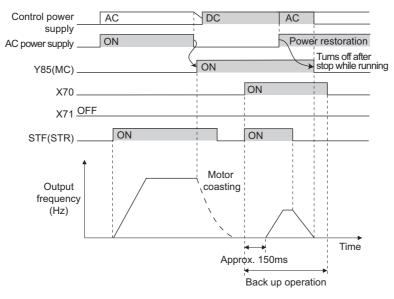

· Operation example at power failure (when continuous operation is performed)

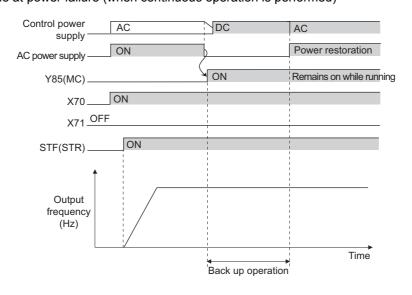




### (7) Power supply specification at DC feeding

200V class	Rated input DC voltage	283VDC to 339VDC
200 V Class	Permissible fluctuation	240VDC to 373VDC
400V class	Rated input DC voltage	537VDC to 679VDC
400 V Class	Permissible fluctuation	457VDC to 740VDC

As voltage between PN becomes 415V (830V) or more temporarily at regeneration, make selection of DC power supply carefully.

### (8) Regenerative brake duty alarm output and alarm signal (RBP signal)

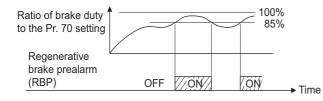

- 100%: regenerative overvoltage protection operation value [RB] appears on the operation panel and an alarm signal (RBP) is output when 85% of the regenerative brake duty set in Pr. 70 is reached. If the regenerative brake duty reaches 100% of the Pr. 70 setting, a regenerative overvoltage (E.OV1 to E.OV3) occurs.
  - The inverter does not shut off the output when the alarm signal is output.
  - For the terminal used for the RBP signal output, assign the function by setting "7" (positive logic) or "107" (negative logic) in any of Pr. 190 to Pr. 196 (output terminal function selection).

#### REMARKS

- The MRS signal can also be used instead of the X10 signal. (Refer to page 230.)
- Refer to pages 48 to 52 for the connection of high-duty brake resistor (FR-ABR), brake unit, high power factor converter (FR-HC, MT-HC) and power regeneration common converter (FR-CV).
- When AC power is connected to terminal R/L1, S/L2, T/L3 during DC feeding with "2, 10, 11, 20, or 21" (DC feeding) set in Pr.30, an option alarm (E.OPT) occurs.
- When DC feeding operation is performed with "2, 10, 11, 20, or 21" (DC deeding) set in Pr.30, undervoltage protection (E.UVT) and instantaneous power failure (E.IPF) are not detected.

#### = CAUTION =

- The brake resister is not connectable to the FR-A720-01150 (FR-A740-00570) or more inverter, the Pr. 70 setting is invalid.
- Changing the terminal assignment using Pr. 178 to Pr. 189 (input terminal function selection) or Pr. 190 to Pr. 196 (output terminal function selection) may affect the other functions. Please make setting after confirming the function of each terminal

## CAUTION

 $\bigwedge$  The value set in Pr. 70 must not exceed the setting of the brake resistor used. Otherwise, the resistor can overheat.

#### ◆ Parameters referred to ◆

Pr. 57 Restart coasting time Refer to page 260

Pr. 178 to Pr.189 (input terminal function selection) Refer to page 227

Pr. 190 to Pr.196 (output terminal function selection) Refer to page 234

Pr. 261 Power failure stop selection Refer to page 265


## 4.14.3 Stop selection (Pr. 250)


Used to select the stopping method (deceleration to a stop or coasting) when the start signal turns off. Used to stop the motor with a mechanical brake, etc. together with switching off of the start signal.

You can also select the operations of the start signals (STF/STR). (Refer to page 232 for start signal selection)



Parameter				Desc	ription
Number	Name	Initial Value	Setting Range	Start signal (STF/STR) (Refer to page 232)	Stop operation
	250 Stop selection	9999	0 to 100s	STF signal: Forward rotation start STR signal: Reverse rotation start	When the start signal is turned off, the motor decelerates to stop.
250			1000s to 1100s	STF signal: Start signal STR signal: Forward/ reverse signal	
200			9999	STF signal: Forward rotation start STR signal: Reverse rotation start	
			8888	STF signal: Start signal STR signal: Forward/ reverse signal	

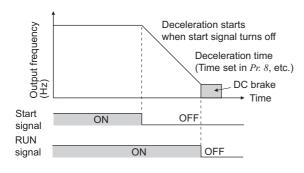

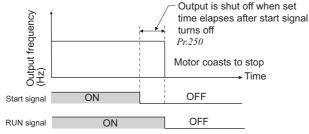

#### (1) Decelerate the motor to a stop

- · Set Pr. 250 to "9999" (initial value) or "8888".
- The motor decelerates to a stop when the start signal (STF/STR) turns off.

#### (2) Coast the motor to a stop

- Use Pr. 250 to set the time from when the start signal turns off until the output is shut off. When any of "1000" to "1100" is set, the output is shut off after (Pr. 250 1000)s.
- The output is shut off when the time set in Pr. 250 has elapsed after the start signal had turned off. The motor coasts to a stop.
- · The RUN signal turns off when the output stops.

### REMARKS

Stop selection is invalid when the following functions are activated.

- · Position control (Pr 419 = 0)
- · Power failure stop function (Pr. 261)
- · PU stop (Pr. 75)
- · Deceleration stop because of fault definition (Pr. 875)
- Deceleration stop because of communication error (Pr. 502)
- · Offline auto tuning (with motor running)
- · Emergency stop by LonWorks communication

#### CAUTION

· When the start signal is turned on again during motor coasting, the motor starts at Pr. 13 Starting frequency.

#### ◆ Parameters referred to ◆

Pr. 7 Acceleration time , Pr. 8 Deceleration time Refer to page 172

Pr. 13 Starting frequency Refer to page 174



## 4.14.4 Stop-on contact control function (Pr. 6, Pr. 48, Pr. 270, Pr. 275, Pr. 276) Magnetic flux Sensorless


**Pr.5**☐ page 165 Pr.5 **Pr.7** page 172 Pr.49

page 149 page 248

/Pr.271 ⊕ page 367 /Pr.278/ page 213

To ensure accurate positioning at the upper limit etc. of a lift, stop-on-contact control causes a mechanical brake to be closed while the motor is developing a holding torque to keep the load in contact with a mechanical stopper etc.


This function suppresses vibration which is liable to occur when the load is stopped upon contact in vertical motion applications, ensuring steady precise positioning.

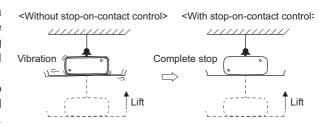


Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description	
6	Multi-speed setting (low speed)	10Hz	0 to 400Hz		Set the output frequency for stop-on-contact control.	
48	Second stall prevention operation current	150% *			Set the stall prevention operation level for stop-on-contact control.	
			0		Normal operation	
	Stop-on contact/	0	1		Stop-on-contact control	
270	load torque high- speed frequency control selection		2		Load torque high speed frequency control (Refer to page 367)	
			3		Stop-on-contact+load torque high speed frequency control (Refer to page 367)	
275	Stop-on contact excitation current low-speed	9999	0 to 1000%	1	Set the force (holding torque) for stop-on-contact control. Normally set 130% to 180%. Valid only during advanced magnetic flux vector control	
	multiplying factor		9999		No compensation.	
	PWM carrier frequency at stop-on contact	9999	02150(01100) or less	0 to 9	Set a PWM carrier frequency for stop-on-contact control. For real sensorless vector control, carrier frequency is always 2Hz when a setting value is 0 to 5 and always 6Hz	
276			02880(01440) or more	0 to 4	when a setting value is 6 to 9. (Valid at the frequency of 3Hz or less.)	
			9999		As set in Pr.72 PWM frequency selection .	

<sup>\*</sup> When Pr. 570 Multiple rating setting = "2", performing parameter clear changes the initial value and setting range. (Refer to page 154)

#### <Connection and operation example>

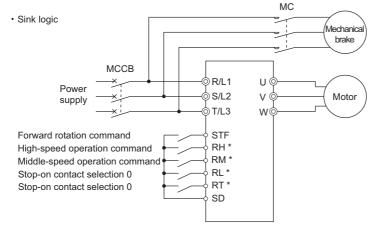



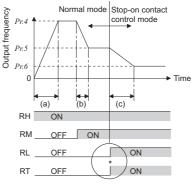

Goes into stop-on-contact control mode when both RL and RT switch on

- \*RL and RT may be switched on in any order
- with any time difference
- (a):Acceleration time (Pr.7)
- (b):Deceleration time (Pr.8)
- (c):Second deceleration time (Pr.44)



- Make sure that the inverter is in external operation mode. (Refer to page 306)
- Select either real sensorless vector control or advanced magnetic flux vector control.
- · Set"1 or 3" in Pr. 270 Stop-on contact/load torque high-speed frequency control selection.
- Set output frequency during stop-on-contact control in Pr. 6 Multi-speed setting (low speed).
   The frequency should be as low as possible (about 2Hz). If it is set to more than 30Hz, the operating frequency will be 30Hz.
- · When both the RT and RL signals are switched on, the inverter enters the stop-on-contact mode, in which operation is performed at the frequency set in *Pr.* 6 independently of the preceding speed.

#### CAUTION =

- By increasing the Pr. 275 setting, the low-speed (stop-on-contact) torque increases, but overcurrent alarm (E.OCT) may occur or the machine may oscillate in a stop-on-contact state.
- · The stop-on-contact function is different from servo-lock function, and if used to stop or hold a load for an extended period, this function can cause the motor to overheat.
  - After a stop, immediately reset this function and use a mechanical brake to hold the load.
- · Under the following operating conditions, the stop-on-contact function is made invalid:
  - PU operation (Pr. 79) · JOG operation (JOG signal) · PU+external operation (Pr. 79) · PID control function operation (Pr. 128)
  - · Remote setting function operation (Pr. 59) · Start time tuning · Orientation control function operation
- When performing stop-on-contact control during encoder feedback control, encoder feedback control is made invalid due to a mode shift to the stop-on-contact control mode.

### (2) Function switching of stop-on-contact control selection

	Normal C (either RL or RT is	Operation off or both are off)	With Stop-on-Contact Control (both RL and RT are on)		
Useful Functions	Real sensorless vector control	Advanced magnetic flux vector control	Real sensorless vector control	Advanced magnetic flux vector control	
Output frequency	0 to 5V,	speed 0 to 10V mA etc.	Pr. 6 s	setting	
Stall prevention operation level	_	Pr. 22 setting	_	Pr. 48 setting *	
Torque limit level	Pr. 22 setting	_	Pr. 22 Setting	_	
Excitation current low speed scaling factor	_	_	_	The current is compensated for by <i>Pr.</i> 275 (0 to 1000%) settings before RL and RT are switched on.	
Carrier frequency	Pr. 72	setting	Pr. 276 setting when our less (Pr. 72 when	tput frequency is 3Hz or Pr. 276 = "9999")	
Fast-response current limit	_	Valid	_	Invalid	

<sup>\*</sup> When RL and RT are on, Pr. 49 Second stall prevention operation frequency is invalid.



## (3) Set frequency when stop-on-contact control (Pr. 270 = 1, 3) is selected

- The following table lists the frequencies set when the input terminals (RH, RM, RL, RT, JOG) are selected together. Bold frame indicates stop-on-contact control is valid.
- · Stop-on-contact control is disabled when remote setting function is selected (Pr. 59 = 1 to 3).

In	put Si	gnal(	(O = c	n)	Set Frequency
RH	RM	RL	RT	JOG	Set Frequency
0					Pr. 4 Multi-speed setting (high speed)
	0				Pr. 5 Multi-speed setting (middle speed)
		0			Pr. 6 Multi-speed setting (low speed)
			0		By 0 to 5V(0 to 10V), 4 to 20mA input
				0	Pr. 15 Jog frequency
0	0				Pr. 26 Multi-speed setting (speed 6)
0		0			Pr. 25 Multi-speed setting (speed 5)
0			0		Pr. 4 Multi-speed setting (high speed)
0				0	Pr. 15 Jog frequency
	0	0			Pr. 24 Multi-speed setting (speed4)
	0		0		Pr. 5 Multi-speed setting (middle speed)
	0			0	Pr. 15 Jog frequency
		0	0		Pr. 6 Multi-speed setting (low speed)
		0		0	Pr. 15 Jog frequency
			0	0	Pr. 15 Jog frequency
		0	0	0	Pr. 15 Jog frequency

In	put Si	gnal (	(O = c	n)	Set Frequency
RH	RM	RL	RT	JOG	Set i requency
	0		0	0	Pr. 15 Jog frequency
	0	0		0	Pr. 15 Jog frequency
	0	0	0		Pr. 6 Multi-speed setting (low speed)
0			0	0	Pr. 15 Jog frequency
0		0		0	Pr. 15 Jog frequency
0		0	0		Pr. 6 Multi-speed setting (low speed)
0	0			0	Pr. 15 Jog frequency
0	0		0		Pr. 26 Multi-speed setting (speed 6)
0	0	0			Pr. 27 Multi-speed setting (speed 7)
	0	0	0	0	Pr. 15 Jog frequency
0		0	0	0	Pr. 15 Jog frequency
0	0		0	0	Pr. 15 Jog frequency
0	0	0		0	Pr. 15 Jog frequency
0	0	0	0		Pr. 6 Multi-speed setting (low speed)
0	0	0	0	0	Pr. 15 Jog frequency
					By 0 to 5V(0 to 10V), 4 to 20mA input

#### CAUTION =

· Changing the terminal function using any of *Pr. 178 to Pr. 189* may affect the other functions. Please make setting after confirming the function of each terminal.

## → Parameters referred to ◆

Pr. 4 to Pr. 6, Pr. 24 to Pr. 27 (multi-speed setting) Refer to page 165

Pr. 15 Jog frequency Refer to page 167

Pr. 22 Stall prevention operation level, Pr. 48 Second stall prevention operation current 👺 Refer to page 149

Pr. 22 Torque limit level Te Refer to page 99

Pr. 59 Remote function selection Refer to page 169

Pr. 72 PWM frequency selection  $\ ^{\frown}$  Refer to page 279

Pr. 79 Operation mode selection Refer to page 306

Pr. 95 Online auto tuning selection Refer to page 196

Pr. 128 PID action selection Refer to page 354

Pr. 178 to Pr. 189 (input terminal function selection) \*\* Refer to page 227

Pr. 270 = 2, 3 (load torque high speed frequency control) Refer to page 367

/Pr.276

page 210

/Pr.286 /

Pr.291
page 254
Pr.293
page 178

## 7

## 4.14.5 Brake sequence function (Pr. 278 to Pr. 285, Pr. 292) Magnetic flux Sensorless Vector


This function is used to output from the inverter the mechanical brake operation timing signal in vertical lift and other applications.

This function prevents the load from dropping with gravity at a start due to the operation timing error of the mechanical brake or an overcurrent alarm from occurring at a stop, ensuring secure operation.

Parameter Number	Name	Initial Value	Setting Range	Description
278	Brake opening frequency	3Hz	0 to 30Hz	Set to the rated slip frequency of the motor + about 1.0Hz. This parameter may be only set if $Pr. 278 \le Pr. 282$ .
279	Brake opening current	130%	0 to 220% *2	Generally, set this parameter to about 50 to 90%. If the setting is too low, the load is liable to drop due to gravity at start. Suppose that the rated inverter current is 100%.
280	Brake opening current detection time	0.3s	0 to 2s	Generally, set this parameter to about 0.1 to 0.3s.
281	Brake operation time at start	0.3s	0 to 5s	Set the mechanical delay time until the brake is loosened. Set the mechanical delay time until the brake is loosened + about 0.1 to 0.2s when <i>Pr. 292</i> = "8".
282	Brake operation frequency	6Hz	0 to 30Hz	Set the frequency to activate the mechanical brake by turning off the brake opening request signal (BOF). Generally, set this parameter to the $Pr.\ 278$ setting + 3 to 4Hz. Setting is enabled only when $Pr.\ 282 \ge Pr.\ 278$ .
283	Brake operation time at stop	0.3s	0 to 5s	Set the mechanical delay time until the brake is closed + 0.1s when $Pr.\ 292$ =7. Set the mechanical delay time until the brake is closed + 0.2 to 0.3s when $Pr.\ 292$ = 8.
	Deceleration detection		0	Deceleration is not detected.
284	function selection	0	1	If deceleration is not normal during deceleration operation, the inverter alarm is provided.
285	Overspeed detection frequency *1	9999	0 to 30Hz	If (detected frequency) - (output frequency) ≥ Pr. 285 during encoder feedback control, the inverter alarm (E.MB1) is provided.
			9999	Overspeed is not detected.
			0	Normal operation mode
			1, 11	Shortest acceleration/deceleration mode (Refer to page 178)
292	Automatic acceleration/	0	3	Optimum acceleration/deceleration mode (Refer to page 180)
232	deceleration	U	5, 6	Elevator mode (Refer to page 162)
			7	Brake sequence mode 1
			8	Brake sequence mode 2

<sup>\*1</sup> When exercising vector control with the FR-A7AP, this parameter changes to excessive speed deviation detection frequency (For details, refer to page 116)

## <Connection diagram>

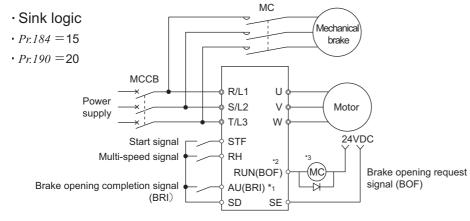

- 11 The input terminal used differs according to the *Pr. 178 to Pr. 189* settings.
- \*2 The output signal terminal used differs according to the *Pr. 190 to Pr. 196* settings.
- \*3 The current should be within the permissible current of transistor in the inverter. (24V 0.1ADC)

#### CAUTION =

- $\cdot$  When brake sequence mode is selected, automatic restart after instantaneous power failure is invalid.
- When using this function, set the acceleration time to 1s or longer.
- · Changing the terminal function using any of Pr. 178 to Pr. 189, Pr. 190 to Pr. 196 may affect the other functions.


Please make setting after confirming the function of each terminal.


<sup>\*2</sup> When Pr. 570 Multiple rating setting ≠ "2", performing parameter clear changes the setting range. (Refer to page 154)



#### (1) Set the brake sequence mode

- Select either real sensorless vector control, vector control (speed control) or advanced magnetic flux vector control.
   The brake sequence function is valid only when the external operation mode, external/PU combined operation mode 1 or network operation mode is selected.
- Set "7 or 8" (brake sequence mode) in Pr. 292.
   To ensure more complete sequence control, it is recommended to set "7" (brake opening completion signal input) in Pr. 292.
- · Set "15" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* and assign the brake opening completion signal (BRI) to the input terminal.
- Set "20 (positive logic)" or 120 (negative logic) in any of *Pr. 190 to Pr. 196 (output terminal function selection)* and assign the brake opening request signal (BOF) to the output terminal.

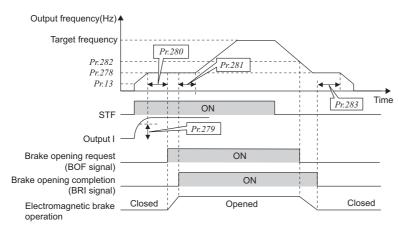

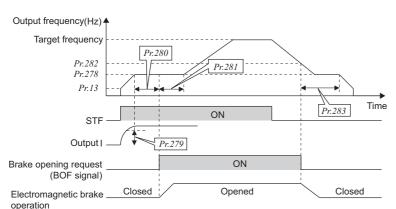

## (2) With brake opening completion signal input (Pr. 292 ="7")

When the start signal is input to the inverter, the inverter starts running. When the internal speed command reaches the value set in *Pr. 278* and the output current is not less than the value set in *Pr. 279*, the inverter outputs the brake opening request signal (BOF) after the time set in *Pr. 280* has elapsed.

When the time set in *Pr. 281* elapses after the brake opening completion signal (BRI) was activated, the inverter increases the output frequency to the set speed.

When the speed has decreased to the frequency set in *Pr. 282* during deceleration, the BOF signal is turned off. When the time set in *Pr. 283* elapses after the electromagnetic brake operation was completed and the BRI signal was turned off, the inverter output is switched off.

## (3) Without brake opening completion signal input (Pr. 292 ="8")

When the start signal is input to the inverter, the inverter starts running. When the internal speed command reaches the value set in Pr. 278 and the output current is not less than the value set in Pr. 279, the inverter outputs the brake opening request signal (BOF) after the time set in Pr. 280 has elapsed.

When the time set in  $Pr.\ 281$  elapses after the BOF signal is output, the inverter increases the output frequency to the set speed.

· When the speed has decreased to the frequency set in *Pr. 282* during deceleration, the brake opening request signal (BOF) is turned off. When the time set in *Pr. 283* has elapsed after the BOF signal is turned off, the inverter output is switched off.

#### **REMARKS**

Even if automatic acceleration/deceleration has been selected, inputting the jog signal (jog operation), RT signal (second function selection) or X9 signal (third function selection) during an inverter stop will switch to the normal operation and give priority to jog operation or second and third function selection. Note that JOG and RT signal input is invalid even if JOG signal and RT signal are input during automatic acceleration/deceleration operation.



#### (4) Protective functions

If any of the following errors occurs in the brake sequence mode, the inverter results in an alarm, shuts off the output, and turns off the brake opening request signal (BOF).

Error Display	Description
E.MB1	(Detection frequency) - (output frequency) > <i>Pr. 285</i> during encoder feedback control When <i>Pr. 285 Overspeed detection frequency</i> =9999, overspeed is not detected.
E.MB2	Deceleration is not normal during deceleration operation from the set frequency to the frequency set in $Pr. 282$ . (when $Pr. 284$ =1) (except stall prevention operation)
E.MB3	Brake opening request signal (BOF) turned on though the motor is at a stop. (gravity drop prevention function)
E.MB4	Although more than 2s have elapsed after the start command (forward or reverse rotation) is input, the brake opening request signal (BOF) does not turn on.
E.MB5	Although more than 2s have elapsed after the brake opening request signal (BOF) turned on, the brake opening completion signal (BRI) does not turn on.
E.MB6	Though the inverter had turned on the brake opening request signal (BOF), the brake opening completion signal (BRI) turned off midway.
E.MB7	Although more than 2s have elapsed after the brake opening request signal (BOF) turned off at a stop, the brake opening completion signal (BRI) does not turn off.

#### CAUTION

- · Overspeed detection (*Pr. 285*) is valid under encoder feedback control (used with the FR-A7AP option) even if a value other than "7 or 8" is set in *Pr. 292*.
- · A too large setting of Pr.278 Brake opening frequency activates stall prevention operation and may cause E.MB4.

#### ♦ Parameters referred to ♦

 $\textit{Pr. 80 Motor capacity, Pr. 81 Number of motor poles} \ \ \textcircled{\textit{Refer to page 92}}$ 

Pr. 180 to Pr. 186 (input terminal function selection) Refer to page 227

Pr. 190 to Pr. 195 (output terminal function selection) Refer to page 234

Pr. 800 Control method selection Refer to page 92

Encoder feedback control Refer to page 374



## 4.14.6 Orientation control (Pr.350 to Pr.366, Pr.369, Pr.393, Pr.396 to Pr.399)

Magnetic flux Vector

This function is used with a position detector (encoder) installed to the spindle of a machine tool, etc. to allow a rotation shaft to be stopped at the specified position (oriented).

Option FR-A7AP is necessary.

Pr.350 Stop position command selection is initially set to "9999", orientation control function is invalid.

Parameter Number	Name	Initial Value	Setting Range	Desci	ription
	Stop Position Command		0	Internal stop position comma	and (Pr.356)
350	Stop Position Command Selection	9999	1	External stop position comm	and (FR-A7AX 16-bit data)
	Selection		9999	Orientation control invalid	
351	Orientation speed	2Hz	0 to 30Hz	Decrease the motor speed to the set value when the orientation command (X22) is given.	
352	Creep speed	0.5Hz	0 to 10Hz	After the speed reaches the	
353	Creep switchover position	511	0 to 16383*	current position pulse reache position set in <i>Pr.353</i> .	·
354	Position loop switchover position	96	0 to 8191	As soon as the current positi position loop switchover position loop.	tion, control is changed to
355	DC injection brake start position	5	0 to 255	After changed to position loo applied and the motor stops position pulse reaches the se position.	as soon as the current et DC injection brake start
356	Internal stop position command	0	0 to 16383*	When "0" is set in <i>Pr. 350</i> , the activated and the setting value position.	internal position command is ue of <i>Pr. 356</i> becomes a stop
357	In-position zone	5	0 to 255	Set the in-position zone at a	
358	Servo torque selection	1	0 to 13	Functions at orientation com	pletion can be selected.
359	Encoder rotation direction	1	0	from A is forw	
			1	Encoder Counter clockwise viewed from A is f	
			0	Speed command	When dispetie D 250 and
360	16 Bit Data Selection	0	1 2 to 127	16 bit data is used as external position command as is.  Set the stop position dividing up to 128 stop positions at regular	When 1 is set in <i>Pr.350</i> and the FR-A7AX is mounted, set a stop position using 16-bit data.  Stop position command is input as binary regardless
361	Position shift	0	0 to 16383	intervals. of the <i>Pr.304</i> setting.  Shift the origin using a compensation value without changing the origin of the encoder. The stop position is position obtained by adding the setting value of <i>Pr. 361</i> the position command.	
362	Orientation position loop gain	1	0.1 to 100	When servo torque function is output frequency for generating the creep speed of <i>Pr.352</i> graset in <i>Pr.362</i> . Although the opthe value is increased, a made	ing servo torque increases to idually according to the slope eration becomes faster when chine may hunt, etc.
363	Completion signal output delay time	0.5s	0 to 5.0s	time after in-position zone is turns off delaying the set time	e after in-position zone is out.
364	Encoder stop check time	0.5s	0 to 5.0s	Orientation fault signal (ORN remains stopped for the set to completion in the state where signal (ORA) is output. ORM orientation is not completed a state where ORA signal is output.	e no orientation complete signal is output when again in the set time in the


Parameter Number	Name	Initial Value	Setting Range	Description
365	Orientation limit	9999	0 to 60.0s	Measure the time taken after passing the creep switchover position and output the orientation fault signal (ORM) if orientation is not completed within the set time.
			9999	Set to 120s.
366	Recheck time	9999	0 to 5.0s	Turning off the start signal with orientation command (X22) on after stopping the motor by orientation control, the present position is checked again after the set time elapses and the orientation complete signal (ORA) or orientation fault signal (ORM) is output.
			9999	Not checked.
369	Number of encoder pulses	1024	0 to 4096	Set the number of pulses of the encoder. Set the number of pulses before multiplied by four.
393	Orientation selection	0	0 1 2	Orientation is executed from the current rotation direction. Orientation is executed from the forward rotation direction. Orientation is executed from the reverse rotation direction.
396	Orientation speed gain (P term)	1 (P 60 0 to 1000		Servo rigidity is (response level during position control
397	Orientation speed integral time	0.333	0 to 20.0s	loop) at orientation stop can be adjusted.
398	Orientation speed gain (D term)	1	0 to 100.0	Lag/advance compensation gain can be adjusted.
399	Orientation deceleration ratio	20	0 to 1000	Make adjustment when the motor runs back at orientation stop or the orientation time is long.

The above parameters can be set when the FR-A7AP (option) is mounted.

<sup>\*</sup> When the operation panel (FR-DU07) is used, the maximum setting is 9999. When a parameter unit is used, up to the maximum value within the setting range can be set.




#### (1) Connection example

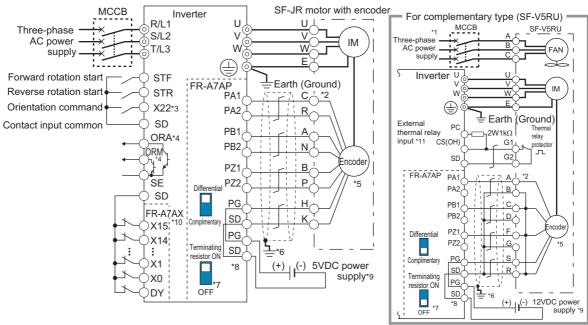

- 1 For the fan of the 7.5kW or less dedicated motor, the power supply is single phase.
- \*2 The pin number differs according to the encoder used.
- \*3 Use Pr.178 to Pr.189 (input terminal function selection) to assign the function to any of terminal. (Refer to page 227.)
- \*4 Use Pr.190 to Pr.196 (output terminal function selection) to assign the function to any of terminal. (Refer to page 234.)
- \*5 Connect the encoder so that there is no looseness between the motor and motor shaft. Speed ratio should be 1:1.
- \*6 Earth (Ground) the shielded cable of the encoder cable to the enclosure with a P clip, etc. (Refer to page 43.)
- For the differential line driver, set the terminating resistor selection switch to on position (initial status) to use. (Refer to page 38.)

  Note that the terminating resistor switch should be set to off position when sharing the same encoder with other unit (NC, etc) or a terminating resistor is connected to other unit.
  - For the complementary, set the switch to off position.
- \*8 For terminal compatibility of the FR-JCBL, FR-V5CBL and FR-A7AP, refer to page 40.
- \*9 A separate power supply of 5V/12V/15V/24V is necessary according to the encoder power specification.

  When performing encoder feedback control and vector control together, an encoder and power supply can be shared.
- \*10 When a stop position command is input from outside, a plug-in option FR-A7AX is necessary. Refer to page 219 for external stop position command.)
- \*11 Assign OH (external thermal input) signal to the terminal CS. *Pr.* 186 = "7")
  Connect a 2WlkΩ resistor between the terminal PC and CS(OH).
  Install the resistor pushing it against the bottom part of the terminal block so as to avoid a contact with other cables.

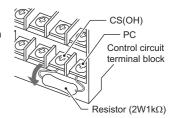

#### <Setting>

If the orientation command signal (X22) is turned on during operation after the various parameters have been set, the speed will decelerate to the "orientation switchover speed". After the "orientation stop distance" is calculated, the speed will further decelerate, and the "orientation state" (servo lock) will be entered. The "orientation complete signal" (ORA) will be output when the "orientation complete width" is entered.

### (2) Setting I/O singals

Termi nal	Terminal Name	Application Explanation
X22*1	Orientation command input	Used to enter an orientation signal for orientation. For the terminal used for X22 signal input, set "22" in any of <i>Pr. 178 to Pr. 189</i> to assign the function.
SD	Contact input common	Common terminal for the orientation signal.
ORA <sub>2</sub>	Orientaiton complete signal output	Switched low if the orientation has stopped within the in-position zone while the start and orientation signals are input.  For the terminal used for the ORA signal output, assign the function by setting "27 (positive logic) or 127 (negative logic)" in any of <i>Pr. 190 to Pr. 196</i> .
ORM•2	Orientation fault signal output	Switched low if the orientation has not stopped within the in-position zone while the start and orientation signals are input.  For the terminal used for the ORM signal output, assign the function by setting "28 (positive logic) or 128 (negative logic) any of <i>Pr. 190 to Pr. 196</i> .
SE	Open collector output common	Common terminal for the ORA and ORM open collector output terminals.

<sup>\*1</sup> For X22 signals, assign functions to any of terminal using Pr.178 to Pr.189 (ouput terminal function selection). (Refer to page 227)

<sup>\*2</sup> For ORA and ORM signals, assign functions to any of terminal using Pr.190 to Pr.196 (ouput terminal function selection). (Refer to page 234)

### (3) Selecting stop position command (Pr. 350 Stop position command selection)


· Select either the internal stop position command (*Pr. 356*) or the external stop position command (16-bit data using the FR-A7AX).

Pr.350 Setting	Stop Position Command Source			
0	Internal stop position command (Pr. 356:0 to 16383)			
1	External stop position command (FR-A7AX) 16-bit data			

1) Internal stop position command (Pr. 350 = "0")

The value set in *Pr. 356* is the stop position.

When the number of encoder pulses is 1024p/r, one revolution of the encoder is divided into 4096 positions, i.e.  $360^{\circ}/4096$  pulses =  $0.0879^{\circ}/pulses$  per address, as shown on the right. The stop positions (addresses) are indicated in parentheses.

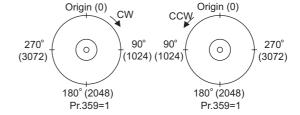


#### 2) External stop position command (Pr. 350 = "1")

Mount the option FR-A7AX and set a stop position using 16-bit data (binary input).

· The value set in Pr. 360 16-bit data selection should be the number of stop positions less 1.

Pr. 360 Setting	Description
0	External position command is made invalid (speed command or tprque command with the FR-A7AX)
1	Position command direct input The 16-bit digital signal from the FR-A7AX is directly serves as stop position command. <example> When the Pr. 369 Number of encoder pulses setting is 1024, stop position command from 0 to 4095 can be directly input using the FR-A7AX and input digital signal of 2047 (H7FF) to stop the motor at 180° position. The command more than 4096 is considered as 4095.</example>
2 to 127	Set the stop position command dividing up to 128 stop positions at regular intervals.  If the external stop command entered is greater than the setting, the stop positions are the same as those in the maximum external stop command value. <example> When the number of stop positions is 90 (divided at intervals of 4°), 90 - 1 = 89. Hence, set "89".</example>

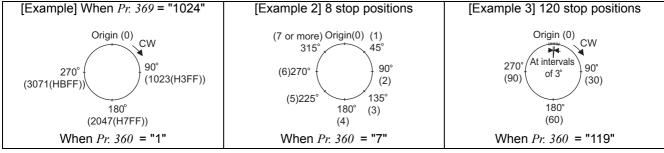

#### CAUTION

- · Values in parentheses indicate binary data entered from the terminals. Even if the position pulse monitor (*Pr. 52 DU/PU main display data selection* = 19) is selected, the data monitored is not the number of stop positions. Pulse monitores aer 0 to 65535.
- FR-A7AX parameters (Pr.300 to Pr.305) are invalid. (Valid when Pr.360 = "0")
- · Terminal DY (data read timing input signal) is made invalid during vector control. (The position data is downloaded at the start of orientation.)
- · When the option is not fitted or Pr. 360 = "0", the stop position is 0 even if the external stop position command is selected with the Pr. 350 setting.



· Relationship between stop position command and 16-bit data

Pr. 350		Operation					
Stop Position Command Selection	Pr. 360 16 Bit Data Selection	Stop position command	16 bit data (FR-A7AX)	Speed command			
	0: Speed command	Internal (Pr. 356)	Speed command	16 bit data			
0:internal	1, 2 to 127: position command	Internal (Pr. 356)	Invalid	External command (or PU)			
	0: Speed command	Internal (Pr. 356)	Speed command	16 bit data			
1: External	1, 2 to 127: position command	External (Internal when the FR-A7AX is not mounted (Pr.356))	Position command	External command (or PU)			

### 3) Pr. 361 Position shift (initial value "0")

The stop position is a position obtained by adding the setting value of *Pr. 361* to the position command.

<Position shift function>

Shift the origin using a compensation value without changing the origin of the oisition detector (encoder).

#### **REMARKS**

• When orientation control is made valid using *Pr. 350 Stop position command selection* with the FR-A7AP mounted, the rotation direction of encoder is displayed on the rotation direction display of the PU (FR-DU07/FR-PU04/FR-PU07). Set the parameter so that turning on the STF signal displays FWD or turning on the STR signal displays REV.

#### (4) Monitor display change


Monitor	REMARKS
Position pulse monitor	When "19" is set in $Pr. 52$ , position pulse monitor is displayed instead of output voltage monitor of the PU. (Displayed only when the FR-A7AP is mounted.)
Orientation status*	When "22" is set in <i>Pr.52</i> , orientation status is displayed instead of output voltage monitor of the PU. (Displayed only when the FR-A7AP is mounted.) 0-Other than orientation operation or orientation speed is not reached 1-Orientation speed is reached 2-Creep speed is reached 3-Position loop is reached 4-Orientation complete 5-Orientatino fault (pulse stop) 6-Orientatino fault (orientation limit) 7-Orientation fault (recheck) 8-Continuous multi-point orientation

<sup>\*</sup> Invalid during vector control. ("0"is always displayed)

#### (5) Pr. 357 In-position zone (initial value "5")

- The positioning width for orientation stop can be set. The initial setting of Pr.~357 is "5". To change the  $\Delta\theta$  value, finely adjust with  $\pm 10$  increments, and make fine adjustment.
- If the position detection value from the encoder enters  $\pm\Delta\theta$  during orientation stop, the orientation complete signal (ORA) will be output.

#### Example of operation

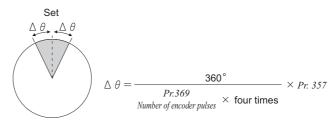


## (6) Orientation operation (under V/F control, advanced magnetic flux vector control)

#### Orientation during running


- 1) When the orientatino command (X22) is input, the motor speed decreases to the orientation speed set in *Pr. 351 Orientation speed*. (*Pr. 351* initial value:2Hz)
- 2) After the speed reaches the orientation speed, the speed decreases to the creep speed set in *Pr. 352 Creep speed* as soon as the current position pulse reaches the creep switchover position set in *Pr. 353 Creep switchover position* (*Pr. 352* initial value:0.5Hz, *Pr. 353* initial value:511)
- 3) Moreover, as soon as the current position pulse reaches the set position loop switchover position in *Pr. 354 Position loop switchover position*, control is changed to position loop. (*Pr. 354* initial value:96)
- 4) After switching to position loop, the inverter decelerates and stops with DC injection brake as soon as the current posigion pulse has rached the DC injection brake start position set in *Pr. 355 DC injection brake start position*. (*Pr. 355* initial value:5)
- 5) When the position pulse has stopped within the in-position zone set in *Pr. 357 In-position zone*, the orientation completion signal (ORA) is output after the comletion signal output delay time set in *Pr. 363 Completion signal output delay time* has elapsed. If the motor does not stop within the in-position zone due to external force, etc., the orientation completion signal is turned off after the time set in *Pr. 363 Completion signal output delay time* has elapsed. (*Pr. 357* initial value:5)
- 6) If the orientation is not completed continusouly for the time set in *Pr. 365 Orientation limit* after passing the creep switchover position, the orientation fault signal (ORM) is output.
- 7) When the motor stops before the position pulse reaching the in-position zone due to external force after orientation start and orientation completion signal (ORA) is not output, orientation fault signal (ORM) is output after the time set in encoder stop check time set in *Pr. 364 Encoder stop check time* has elapsed. Moreover, the orientation complete signal (ORA) is turned off after the time set in *Pr. 363 Completion signal output delay time* has elapsed if the position pulse is outside the in-position zone due to external force, etc. after outputting the orientation complete signal (ORA), and the orientation fault signal (ORM) is output if the orientation has not completed within the time set in *Pr. 364 Encoder stop check time*.
- 8) When the start signal (STF or STR) is turned off with the orientation command on after outputting the orientation completion signal (ORA) and orientation fault signal (ORM), the orientation complte signal (ORM) or orientation fault signal (ORM) is output again after recheck time set in *Pr. 366 Recheck time* has elapsed.
- 9) The orientation completion signal (ORA) and orientation fault signal (ORM) are not output when the orientation command is off.

#### REMARKS

When the orientation command is off with the start signal on, the speed accelerates to the command speed.

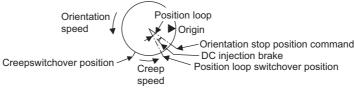

- If the motor shart hants, set a larger value in *Pr.354 Position loop switchover position* or a smaller value in *Pr.352 Creep speed* to prevent it.
- Action time chart

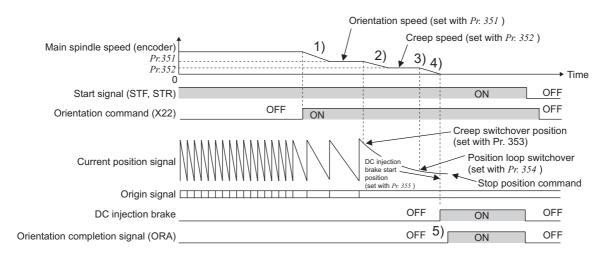




#### Orientation from stop

After turning on the orientation command (X22), turning on the start signal will increase the motor speed to the orientation speed set in *Pr. 351 Orientation speed*, then orientation operation same as when "orientation during rrunning"is performed.


Note that, DC injection brake is operated if the position signal is within the DC injection brake start position.

· Action time chart

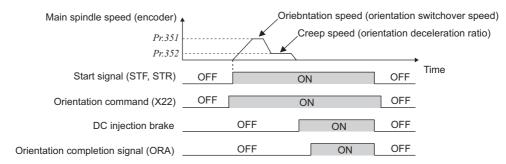

#### Continuous multi-point orientation

Orientation command and orientation with STF/STR on (Orientation in servo in status)

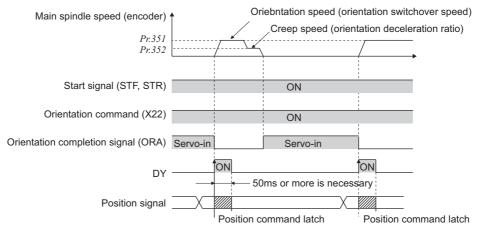

- Read the position data at starting up of DY (refer to the FR-A7AX instruction manual).
- When the position signal is within the creep switchover position, the speed starts up to the creep speed not to the orientation speed.
- · When the position signal is not within the creep switchover position, the speed starts up to the orientation speed.
- The DC injection brake is operated if the position signal is within the DC injection brake start position.
- 16-bit data with the FR-A7AX is valid only when the DY signal is on.

#### = CAUTION

- The encoder should be coupled with the motor shaft or main spindle oriented with a speed ratio of 1 to 1 without any mechanical looseness.
- DC injection brake operates when orientation stop is made. Release the DC injection brake in a time as short as possible (within several seconds) since continuous operation of the DC injection brake will cause the motor to overheat, leading to burnout.
- Since no servo lock function is available after orientation stop, provide a holding mechanism such as mechanical brake or knock pin
  when secure holding of a main spindle is required.
- · To ensure correct positioning, the encoder must be set in the proper rotation direction and the A and B phases connected correctly.
- When the pulse signal from the encoder stops due to the encoder signal loss, etc. during orientation, the orientation fault signal (ORM)
  may be output.
- When the DC injection brake is set to disabled using parameter for DC injection brake adjustment (voltage, frequency, speed, time) when performing orientation control, orientation operation can not be completed. Always set the DC injection brake enabled.
- <u>To terminate orientation</u>, the start signal (STF or STR) must be first switched off and the orientation signal (X22) must be switched off. As soon as this orientation signal is switched off, orientation control ends.(Depending on the *Pr. 358 Servo torque selection* setting, orientation status continues if the orientation signal remains on even if DC injection brake is released at turning off of the the start signal. Therefore, the orientation status of the monitor function is not 0.)
- · When retry function of Pr. 358 Servo torque selection is selected, this retry function is performed three times including the first orientation.
- When performing orientation control, make proper setting of *Pr. 350 Stop position command selection* and *Pr. 360 16 bit data selection (external position command selection).* If the values set are incorrect, proper orientation control will not be performed.
- When *Pr. 11 DC injection brake operation time* = "8888" (DC injection brake external selection), DC injection brake does not operate if the X13 signal is not turned on. Note that the DC injection brake is applied under orientation control regardless of the X13 signal status.
- · When orientation control is exercised, PID control is invalid.

#### • Servo torque selection (Pr. 358)

Valid only under V/F control and advanced magnetic flux vector control.

Pr. 358Setting									Remarks						
Function	0	1	2	3	4	5	6	7	8	9	10	11	12	13	Remarks
Servo torque function selection until output of the orientation completion signal (ORA)	×	0	0	0	0	×	0	×	0	×	0	×	×	0	O With servo torque function  X Without servo torque function
2) Retry function selection	×	×	×	×	×	×	×	0	×	×	×	0	×	×	O With retry function  × Without retry function
Output frequency is compensated when the motor stops outside the in-position zone	×	×	0	0	×	0	0	×	×	×	×	×	0	0	O With frequency compensation  X Withouf frequency compensation
4) DC injection brake and servo torque selection when the position pulse comes off the in-position zone after output of the orientation completion signal (ORA)	0	×	×	×	×	0	0	0	0	0	0	0	0	0	O With DC injection brake  X With servo torque
5) End switch selection of the DC injection brake and orientation completion signal (ORA)	0	0	0	×	×	0	0	0	0	×	×	×	×	×	When the start signal (STF, STR) or orientation command is turned off     When the orientation command is turned off
6) Completion signal off selection when the position pulse comes off the in-position zone after output of the orientation completion signal (ORA)	0	0	0	0	0	×	×	×	×	×	×	×	×	×	Turnes off the completion signal when the motor stops outside of the inposition zone      Completion signal remains on even if the position pulse comes off the completion zone (orientation fault singal (ORM) is not output)

#### **REMARKS**

- · When the orientation command is off with the start signal on, the speed accelerates to the command speed.
- When the motor shaft stops outside of the set setting range of stop position, the motor shaft is returned to the stop position by servo torque function (if enough torque is generated).
- 1) Servo torque function selection until output of the orientation completion signal

Whether servo torque is available or not is selected using *Pr. 358 Servo torque selection*. Servo torque is not generated if the current position pulse is in between the orientation stop position and DC injection brake start position. Although, the shaft is retained by the DC injection brake, servo torque is generated to return the shaft within the width if the shaft moves out of the width by external force, etc. Once the orientation completion signal (ORA) is output, the motor runs according to the setting made in 4).

2) Retry function selection

Select retry function using Pr. 358 Servo torque selection. Note that servo torque function can not be used together. When the motor shaft is not stopped within the in-position zone when the motor stop is checked, orientation operation is performed again by retry function.

With this retry function, three orientations includign the first one are performed. More than three times retry operations are not made. (The orientation fault signal (ORM) is not output during retry operation)

- 3) Frequency compnesation function when the motor stops outside the orinetation in-position zone
  - Withen the motor stops before enterning the in-position zone due to external force, etc., output frequency is increased to move the shaft to the orientation stop position. The output frequency is gradually increased to the creep speed of  $Pr. 352 \ Creep \ speed$ .

Note that retry function can not be used together.

- 4) DC injection brake and servo torque selection when the position pulse comes off the in-position zone after output of the orientation completion signal (ORA)
  - If the position pulse comes off the orientation in-position width, you can select a setting either fixing a shaft with the DC injection brake or returning the motor to the orientation stop position with servo torque.
- 5) Orientation operation end switch operation selection between DC injection brake or servo torque When ending the orientation operation, turn off the start signal (STF or STR), then turn off the orientation command (X22). At this time, you can select when to turn off the orientation completion signal (ORA) from between at turning off of the start signal or turning off of the orientation command signal.
- 6) Selection of completion signal off or on when the motor stops outside of the in-position zone after output of the orientation completion signal (ORA)
  - You can select the mode to turn off the completion signal or keep the completion signal on (orientation fault signal (ORM) is not output) when the motor stops outside of the in-position zone.



#### • Position loop gain (Pr. 362)

When servo torque function is selected using Pr. 358 Servo torque selection, output frequency for generating servo torque increases to the creep speed of Pr. 352 Creep speed gradually according to the slope set in Pr. 362 Orientation position loop gain.

Although the operation becomes faster when the value is increased, a machine may hunt, etc.


#### (7) Orientation operation explanation (during vector control)

#### • Setting the rotation direction (Pr. 393 Orientation selection)

Pr. 393 Setting	Rotation Direction	Remarks
0 (initial value)	Pre-orientation	Orientation is executed from the current rotation direction.
1	Forward rotation orientation	Orientation is executed from the forward rotation direction. (If the motor is running in reverse, orientation is executed from the forward rotation direction after deceleration.)
2	Reverse rotation orientation	Orientation is executed from the reverse rotation direction. (If the motor is running in forward, orientation is executed from the reverse rotation direction after deceleration.)

#### 1) Orientation from the current rotation direction

- When the orientation command (X22) is input, the motor speed will decelerate from the runnig speed to *Pr. 351 Orientation speed*.
   At the same time, the orientation stop position command will be read in. (The stop position command is determined by the setting of *Pr. 350 and Pr. 360*
- When the orientation switchover speed is reached, the encoder Z phase pulse will be confirmed, and the mode will change from speed control to position control (*Pr. 362 Orientation position loop gain* ).
- The distance to the orientation stop position is calculated at switching of the control, and the motor decelerates and stops with a set deceleration pattern (*Pr. 399*) and the orientation (servo lock) state will be entered.
- When entered in the *Pr. 357* in-position zone, the orientation completion signal (ORA) will be output.
- The zero point position (origin) can be moved using Pr. 361 Position shift.

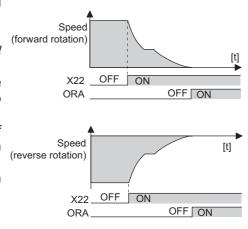


## **AWARNING**


⚠ If the orientation command (X22) is turned off while the start signal is input, the motor will accelerate toward the speed of the current speed command. Thus, to stop, turn the forward rotation (reverse rotation) signal off.

#### 2) Orientation from the forward rotation direction

- This method is used to improve the stopping precision and maintain the mechanical precision when the backlash is large.
- If the motor is running in the forward rotation direction, it will orientation stop with the same method as "orientation from the current rotation direction".
- If the motor is running in reverse, it will decelerate, the rotation direction will be changed to forward run, and then orientation stop will be executed.

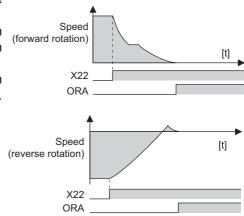

- 3) Orientation from the reverse rotation direction
- If the motor is running in the reverse rotation direction, it will orientation stop with the same method as "orientation from the current rotation direction".
- If the motor is running in forward, it will decelerate, the rotation direction will be changed to reverse run, and then orientation stop will be executed.

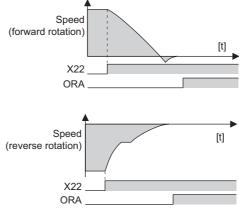

#### = CAUTION =

- The encoder should be coupled with the motor shaft oriented with a speed ratio of 1 to 1 without any mechanical looseness.
- To ensure correct positioning, the encoder must be set in the proper rotation direction and the A and B phases connected correctly.
- Orientation may not be completed if the pulse signals are not received from the encoder during orientation due to a break in the cable or the like.
- To terminate orientation, the start signal (STF or STR) must be first switched off and the orientation signal (X22) must be switched off. As soon as this orientation signal is switched off, orientation control ends.
- When performing orientation control, make proper setting of *Pr. 350 Stop position command selection* and *Pr. 360 16 bit data selection*.
  - If the values set are incorrect, proper orientation control will not be performed.
- · When orientation control is exercised, PID control is invalid.

#### **REMARKS**

If "E.ECT" (no encoder signal) is displayed causing the inverter to trip when the orient signal (X22) is ON, check for a break in the cable of the Z phase of the encoder.

#### • Servo rigidity adjustment (Pr. 362, Pr. 396 to Pr. 398)

- •To increase the servo rigidity during orientation stop using Pr. 396 or Pr. 397, adjust with the following procedures.
  - 1) Increase the *Pr. 362 Orientation position loop gain* value to the extent that rocking does not occur during orientation stop.
  - 2) Increase Pr. 396 and Pr. 397 at the same rate.
    - Generally adjust Pr. 396 in the range from 10 to 100, and Pr. 397 from 0.1 to 1.0s.
    - (Note that these do not need to be set to the same rate.)

#### <Example>

When the Pr. 396 value is multiplied by 1.2, divide the Pr. 397 value by 1.2.

If vibration occurs during orientation stop, the scale cannot be raised any higher.

3) Pr. 398 is the lag/advance compensation gain.

The limit cycle can be prevented by increasing the value, and the running can be stopped stably. However, the torque in regard to the position deviation will drop, and the motor will stop with deviation.

#### POINT

Application of lag/advance control and PI control

PI control can be applied by setting Pr. 398 to 0. Normally, the lag/advance control is selected. Note that PI control should be used when using a machine with a high spindle stationary friction torque and requires a stopping position precision.

- \*1 Servo rigidity: This is the response when a position control loop is configured.

  When the servo rigidity is raised, the holding force will increase, the running will stabilize, but vibration will occur easily. When the servo rigidity is lowered, the holding force will drop, and the setting time will increase.
- \*2 Limit cycle:This is a phenomenon that generates ± continuous vibration centering on the target position.
- \*3 Rocking: Movement in which return occurs if the stopping position is exceeded.



## • Pr. 399 Orientation deceleration ratio (initial value is 20)

 Make adjustments as shown below according to the orientation status. (Refer to the Pr. 396 and Pr. 397 details also.

Generally adjust Pr. 362 in the range from 5 to 50, and Pr. 399 from 5 to 50...

Phenomenon		Adjustment Procedure					
Filefioniefion	Pr. 396	Pr. 397	Pr. 362	Pr. 399			
Rocking occurs during stopping	3)	3)	2)	1) 🛰			
The orientation time is long	-	-	2)	1) 🖊			
Hunting occurs when stopping	2)	2) 💉	1)	-			
The servo rigidity during stopping is low	1) 💉	1)	2) 💉	-			

### REMARKS

- Increase the parameter setting value.
  - → :Do not change the parameter setting value.
  - :Decrease the parameter setting
- . The numbers 1), 2) and 3) in the table show the order of priority for changing the parameters setting value.


#### === CAUTION =

Or, if the motor does forward/reverse reciprocation operation , the parameter setting value for the orientation detector installation direction may be incorrect. Review *Pr. 393 Orientation selection (refer to page 217) and Pr. 359 Encoder rotation direction (refer to page 216)*.

#### • Pr. 351 Orientation speed (initial value: 2Hz)

• Set the speed when switching beween the speed control mode and the position control mode is performed under orientation operation.

Decreasing the set speed enables stable orientation stop. Note that the orientation time will increase.

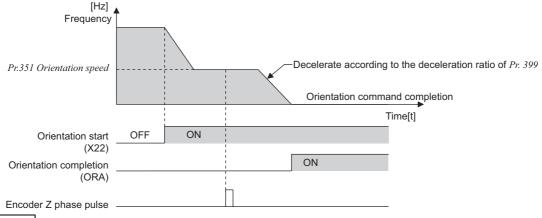

#### **REMARKS**

When "19" is set in Pr. 52 DU/PU main display data selection, position pulse monitor is displayed instead of PU output voltage monitor.

## 4.15 Function assignment of external terminal and control

Purpose	Parameter th	at must be Set	Refer to Page
Assign function to input terminal	Input terminal function selection	Pr. 178 to Pr. 189	227
Set MRS signal (output shutoff) to normally closed contact specification	MRS input selection	Pr. 17	230
Make the second (third) function valid only during constant speed operation	RT reflection time selection	Pr. 155	231
Assign start signal and forward/ reverse command to other signals	Start signal (STF/STR) operation selection	Pr. 250	232
Assign function to output terminal	Output terminal function assignment	Pr. 190 to Pr. 196	234
Detect output frequency	Up-to-frequency sensitivity Output frequency detection Low speed detection	Pr. 41 to Pr. 43, Pr. 50, Pr. 116, Pr. 865	241
Detect output current	Output current detection Zero current detection	Pr. 150 to Pr. 153, Pr. 166, Pr. 167	243
Remote output function	Remote output	Pr. 495 to Pr. 497	245
Detect output torque	Output torque detection	Pr. 864	244

## 4.15.1 Input terminal function selection (Pr. 178 to Pr. 189)

Use these parameters to select/change the input terminal functions.

Parameter Number	Name	Initial Value	Initial Signal	Setting Range	
178	STF terminal function selection	60	STF (forward rotation command)	0 to 20, 22 to 28, 42 to 44, 50, 60, 62, 64 to 71, 9999	
179	STR terminal function selection	61	STR (reverse rotation command)	0 to 20, 22 to 28, 42 to 44, 50, 61, 62, 64 to 71, 9999	
180	RL terminal function selection		RL (low-speed operation command)		
181	RM terminal function selection	1	RM (middle-speed operation command)	0 to 20, 22 to 28, 42 to 44,	
182	RH terminal function selection	2	RH (high speed operation command)	50, 62, 64 to 71, 9999	
183	RT terminal function selection	3	RT (second function selection)		
184	AU terminal function selection	tion 4 AU (terminal 4 input selection)		0 to 20, 22 to 28, 42 to 44, 50, 62 to 71, 9999	
185	JOG terminal function selection	5	JOG (Jog operation selection)		
186	CS terminal function selection	6	CS (selection of automatic restart after instantaneous power failure)		
187	MRS terminal function selection	24	MRS (output stop)	0 to 20, 22 to 28, 42 to 44, 50, 62, 64 to 71, 9999	
188	STOP terminal function selection	25	STOP (start self-holding selection)		
189	RES terminal function selection	62	RES (inverter reset)		

## (1) Input terminal function assignment

- $\cdot$  Use  $\ensuremath{\textit{Pr. 178 to Pr. 189}}$  to set the functions of the input terminals.
- · Refer to the following table and set the parameters:

Setting	Signal Name		Function	Related Parameters	Refer to Page
	RL	Pr. 59 = 0 (initial value)	Low-speed operation command	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239	165
0	KL	<i>Pr.</i> 59 =1, 2 *1	Remote setting (setting clear)	Pr. 59	169
		<i>Pr. 270</i> <b>=1</b> , 3 *2	Stop-on-contact selection 0	Pr. 270, Pr. 275, Pr. 276	210
1	RM	Pr. 59 = 0 (initial value)	Middle-speed operation command	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239	165
		<i>Pr.</i> 59 =1, 2 *1	Remote setting (deceleration)	Pr. 59	169





Setting	Signal Name	Funct	ion	Related Parameters	Refer to Page
2	RH	Pr. 59 = 0 (initial value) High-s	peed operation command	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239	165
		Pr. 59 = 1, 2 *1 Remo	te setting (acceleration)	Pr. 59	169
		Second function selection		Pr. 44 to Pr. 51, Pr. 450 to Pr. 463,	231
3	RT			Pr. 569, Pr. 832, Pr. 836, etc.	
			n-contact selection 1	Pr. 270, Pr. 275, Pr. 276	210
4	AU	Terminal 4 input selection		Pr. 267	282
5	JOG	Jog operation selection		Pr. 15, Pr. 16	167
6	CS	Selection of automatic restart after flying start	r instantaneous power failure,	Pr. 57, Pr. 58, Pr.162 to Pr.165, Pr. 299, Pr. 611	260
7	ОН	External thermal relay input *3		Pr. 9	181
8	REX	15 speed selection (combination v	vith three speeds RL, RM, RH)	Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr.232 to Pr.239	165
9	Х9	Third function selection		Pr. 110 to Pr. 116	231
10	X10	Inverter operation enable signal (FR	-HC, MT-HC, FR-CV connection)	Pr. 30, Pr. 70	203
11	X11	FR-HC or MT-HC connection, instan	taneous power failure detection	Pr. 30, Pr. 70	203
12	X12	PU operation external interlock	·	Pr. 79	306
13	X13	External DC injection brake oper	ation start	Pr. 10 to Pr. 12	199
14	X14	PID control valid terminal		Pr. 127 to Pr. 134, Pr. 575 to Pr. 577	354
15	BRI	Brake opening completion signal		Pr. 278 to Pr. 285	210
16	X16	PU-external operation switchove		Pr. 79, Pr. 340	312
17	X17	Load pattern selection forward/re		Pr. 14	160
18	X18	V/F switchover (V/F control is ex		Pr. 80, Pr. 81, Pr. 800	92, 145, 186
19	X19	Load torque high-speed frequence	CV	Pr. 270 to Pr. 274	367
20	X20	S-shaped acceleration/decelerat		Pr. 380 to Pr. 383	175
22	X22	Orientation command *4, *6	3	Pr. 350 to Pr. 369	216
23	LX	Pre-excitation *5		Pr. 850	199
24	MRS	Output stop		Pr. 17	230
25	STOP	Start self-holding selection		_	232
26	MC	Control mode changing		Pr. 800	92, 145
27	TL	Torque limit selection		Pr. 815	99
28	X28	Start-time tuning start external inpu	ıt	Pr. 95	196
42	X42	Torque bias selection 1 *6		Pr. 840 to Pr. 845	113
43	X43	Torque bias selection 2 ∗6		Pr. 840 to Pr. 845	113
44	X44	P/PI control switchover		Pr. 820, Pr. 821, Pr. 830, Pr. 831	104
50	SQ	Sequence start		Pr. 414 to Pr. 417, Pr. 506 to Pr. 515	352
60	STF	Forward rotation command (assigned to STF terminal (Pr. 17	(8) only)	_	232
61	STR	Reverse rotation command (assigned to STR terminal (Pr. 17)	79) only)	_	232
62	RES	Inverter reset			_
63	PTC	PTC thermistor input (assigned t	o AU terminal (Pr. 184) only)	Pr. 9	181
64	X64	PID forward/reverse action switc		Pr. 127 to Pr. 134, Pr. 5	354
65	X65	PU-NET operation switchover		Pr. 79, Pr. 340	314
66	X66	External-NET operation switchov	ver	Pr. 79, Pr. 340	314
67	X67	Command source switchover		Pr. 338, Pr. 339	315
68	NP	Conditional position pulse train s	ign ∗6	Pr. 291, Pr. 419 to Pr. 430, Pr. 464	134
69	CLR	Conditional position droop pulse	clear ∗6	Pr. 291, Pr. 419 to Pr. 430, Pr. 464	134
70	X70	DC feeding operation permission	ı	Pr. 30, Pr. 70	203
71	X71	DC feeding cancel		Pr. 30, Pr. 70	203
9999	_	No function		_	

<sup>\*1</sup> When Pr. 59 Remote function selection = "1 or 2", the functions of the RL, RM and RH signals change as listed above.

<sup>\*2</sup> When *Pr. 270 Stop-on contact/load torque high-speed frequency control selection* = "1 or 3", the functions of the RL and RM signals change as listed above. 
\*3 The OH signal turns on when the relay contact "opens".

<sup>\*4</sup> The FR-A7AX (16-bit digital input) is needed to externally input a stop position under orientation control.

<sup>\*5</sup> Servo ON is made valid during position control under vector control operation.

<sup>\*6</sup> Available only when used with the FR-A7AP.

#### CAUTION

- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.
- · One function can be assigned to two or more terminals. In this case, the terminal inputs are ORed.
- · The priorities of the speed commands are in order of jog, multi-speed setting (RH, RM, RL, REX) and PID (X14).
- · When the X10 signal (FR-HC, FR-CV connection inverter operation enable signal) is not set or when the PU operation external interlock (X12) signal is not assigned at the *Pr. 79 Operation mode selection* setting of "7", the MRS signal shares this function.
- Use common terminals to assign multi-speeds (speed 7) and remote setting. They cannot be set individually.
   (Common terminals are used since these functions are designed for speed setting and need not be set at the same time.)
- When V/F switching (X18) signal and load pattern selection forward rotation reverse rotation boost (X17) signal are not assigned, the RT signal shares this function. (*Pr. 81 Number of motor poles*= "12, 14, 16, 18, 20") In this case, V/F control is controlled by the second function.

## (2) Response time of each signal

• The response time of the X10 signal is within 2ms. However, when the X10 signal is not assigned at the *Pr. 30 Regenerative function selection* setting of "2" (FR-HC/FR-CV connection), the response time of the MRS signal is within 2ms.

Pr. 17 MRS input selection is made invalid.

Pr. 30	MRS	X10	Respon	Pr. 17	
Setting Assignment		Assignment	MRS	X10	11.17
2	0	×	Within 2ms	_	Invalid
	×	0	_	Within 2ms	
	0	0	Within 20ms	Within 2ms	Valid
	0	×	Within 20ms	_	Valid
Other than 2	×	0	_	_	
	0	0	Within 20ms	_	Valid







The inverter output can be shut off from the MRS signal. The logic of the MRS signal can also be selected.



Parameter Number	Name	Initial Value	Setting Range	Description	
					Open input always
			2	Close input always (NC contact input specifications)	
17	MRS input selection	0	4	External terminal: Close input always (NC contact input specifications) Communication: Open input always	

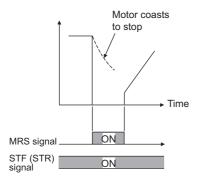

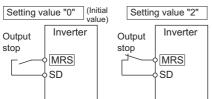

#### (1) Output shutoff signal (terminal MRS)

- Turning on the output shutoff signal (MRS) during inverter running shuts off the output immediately.
- · Terminal MRS may be used as described below.
- (a) When mechanical brake (e.g. electromagnetic brake) is used to stop motor

The inverter output is shut off when the mechanical brake operates.

- (b) To provide interlock to disable operation by the inverter With the MRS signal on, the inverter cannot be operated if the start signal is entered into the inverter.
- (c) Coast the motor to a stop

  When the start signal is turned off, the inverter decelerates the motor to a stop in the preset deceleration time, but when the MRS

## signal is turned on, the motor coasts to a stop (2) MRS signal logic inversion (Pr. 17 = "2")

· When *Pr. 17* is set to "2", the MRS signal (output stop) can be changed to the normally closed (NC contact) input specification. When the MRS signal turns on (opens), the inverter shuts off the output.

# (3) Assign a different action for each MRS signal input from communication and external terminal (*Pr. 17* = "4")

· When *Pr. 17* is set to "4", the MRS signal from external terminal (output stop) can be changed to the normally closed (NC contact) input, and the MRS signal from communication can be changed to the normally open (NO contact) input.

This function is useful to perform operation by communication with MRS signal from external terminal remained on.

MRS operation from PLC function is changed to NO contact as same as the communication.

External MRS	Communication MRS	Pr. 17 Setting					
External line	Communication wito	0	2	4			
OFF	ON	Operation enabled	Output shutoff	Output shutoff			
OFF	ON	Output shutoff	Output shutoff	Output shutoff			
ON	OFF	Output shutoff	Output shutoff	Operation enabled			
ON	OFF	Output shutoff	Operation enabled	Output shutoff			

#### **REMARKS**

- The MRS signal is assigned to the terminal MRS in the initial setting. By setting "24" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, the MRS signal can be assigned to the other terminal.
- · The MRS signal can shut off the output, independently of the PU, external or network operation mode.

#### = CAUTION

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 178 to Pr. 189 (Input terminal function selection) Refer to page 227

## 4.15.3 Condition selection of function validity by the second function selection signal (RT) and third function selection signal (X9) (RT signal, X9 signal, Pr. 155)

You can select the second (third) function using the RT(X9) signal.

You can also set the condition (reflection condition) where the second function and third function become valid.





Parameter Number	Name	Initial Value	Setting Range	Description
	DT aire al franction validity		0	Second (third) function is immediately made valid with on of the RT(X9) signal.
155	RT signal function validity condition selection	0	10	Second (third) function is valid only during the RT (X9) signal is on and constant speed operation. (invalid during acceleration/deceleration)

- When the RT signal turns on, the second function becomes valid.
- When the X9 signal turns on, the third function becomes valid.
- For the X9 signal, set "9" in any of Pr. 178 to Pr. 189 (input terminal function selection) to assign the function.
- The second (third) function has the following applications.
  - (a)Switching between normal use and emergency use
  - (b)Switching between heavy load and light load
- c)Changing of acceleration/deceleration time by broken line acceleration/deceleration
- (d)Switching of characteristic between main motor and sub motor

#### **Second function** connection diagram

### Second acceleration/deceleration time example

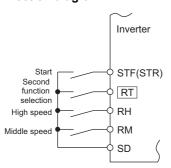

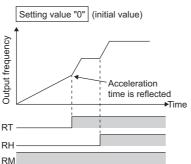

Functions that can be set as second and third functions

Function	First Function Parameter Number	Second Function Parameter Number	Third Function Parameter Number	Referto Page
Torque boost	Pr. 0	Pr. 46	Pr. 112	143
Base frequency	Pr. 3	Pr. 47	Pr. 113	158
Acceleration time	Pr. 7	Pr. 44	Pr. 110	172
Deceleration time	Pr. 8	Pr. 44, Pr. 45	Pr. 110, Pr. 111	172
Electronic thermal relay function	Pr. 9	Pr. 51	_	181
Stall prevention	Pr. 22	Pr. 48, Pr. 49	Pr. 114, Pr. 115	149
Applied motor	Pr. 71	Pr. 450	_	184
Motor constant	Pr. 80 to Pr. 84, Pr. 89, Pr. 90 to Pr. 94, Pr. 96, Pr. 859	Pr. 453 to Pr. 457, Pr. 569, Pr. 458 to Pr. 462, Pr. 463, Pr. 860	_	99
Online auto tuning selection	Pr. 95	Pr. 574	_	196
Motor control method	Pr. 800	Pr. 451	_	92
Speed control gain	Pr. 820, Pr. 821	Pr. 830, Pr. 831	_	104
Analog input filter	Pr. 822, Pr. 826	Pr. 832, Pr. 836	_	287
Speed detection filter	Pr. 823	Pr. 833	=	141
Torque control gain	Pr. 824, Pr. 825	Pr. 834, Pr. 835	_	127
Torque detection filter	Pr. 827	Pr. 837	_	141

#### **REMARKS**

The RT signal is assigned to the RT terminal in the initial setting. By setting "3" in any of Pr. 178 to Pr. 189 (input terminal function selection), the RT signal can be assigned to the other terminal.

#### CAUTION =

- When the RT (X9) signal is on, the other functions such as the second (third) are also selected.
- Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 178 to Pr.189 (input terminal function selection) Refer to page 227



## 4.15.4 Start signal selection (terminal STF, STR, STOP, Pr. 250)




You can select the operation of the start signal (STF/STR).

Used to select the stopping method (deceleration to a stop or coasting) when the start signal turns off. Used to stop the motor with a mechanical brake, etc. together with switching off of the start signal. (Refer to *page 209* for stop selection)


Parameter	Name	Initial	Setting	Desci	ription	
Number	Ivaille	Value Range		Start signal (STF/STR)	Stop operation	
	Stop selection		0 to 100s	STF signal: Forward rotation start STR signal: Reverse rotation start	The motor is coasted to a stop when the preset time elapses after the start signal is turned off. When the setting is any of	
250		op selection 9999 -	1000s to 1100s	STF signal: Start signal STR signal: Forward/reverse rotation signal	1000s to 1100s, the inverter coasts to a stop in ( <i>Pr. 250</i> - 1000)s.	
250			9999	STF signal: Forward rotation start STR signal: Reverse rotation start	When the start signal is turned off, the motor decelerates to	
			8888	STF signal: Start signal STR signal: Forward/reverse rotation signal	stop.	

## (1) 2-wire type (terminal STF, STR)

- · A two-wire type connection is shown below.
- · In the initial setting, the forward/reverse rotation signals (STF/STR) are used as start and stop signals. Turn on either of the forward and reverse rotation signals to start the motor in the corresponding direction. If both are turned off (or on) during operation, the inverter decelerates to a stop.
- The speed setting signal may either be given by entering 0 to 10VDC across the speed setting input terminal 2-5, by setting the required values in *Pr. 4 to Pr. 6 Multi-speed setting (high, middle, low speeds)*, etc. (For multi-speed operation, refer to *page 165*)
- When Pr. 250 is set to any of "1000 to 1100, 8888", the STF signal becomes a start command and the STR signal a forward/reverse command.

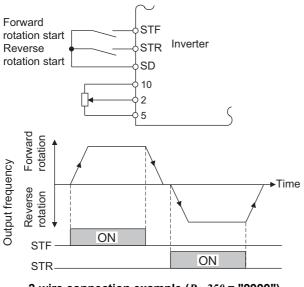

2-wire connection example ( $Pr. 25\theta$  = "9999")

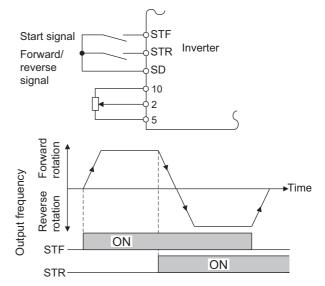


2-wire connection example ( $Pr. 25\theta = "8888"$ )

#### **REMARKS**

- When *Pr. 250* is set to any of "0 to 100, 1000 to 1100", the motor coasts to a stop if the start command is turned off. (*Refer to page 209*)
- The STF and STR signals are assigned to the STF and STR terminals in the initial setting. The STF signal can be assigned to *Pr. 178 STF terminal function selection* and the STR signal to *Pr. 179 STR terminal function selection* only.

### (2) 3-wire type (terminal STF, STR, STOP)

- · A three-wire type connection is shown below.
- The start self-holding selection becomes valid when the STOP signal is turned on. In this case, the forward/reverse rotation signal functions only as a start signal.
- · If the start signal (STF or STR) is turned on and then off, the start signal is held and makes a start. When changing the direction of rotation, turn STR (STF) on once and then off.
- · To stop the inverter, turning off the STOP signal once decelerates it to a stop.

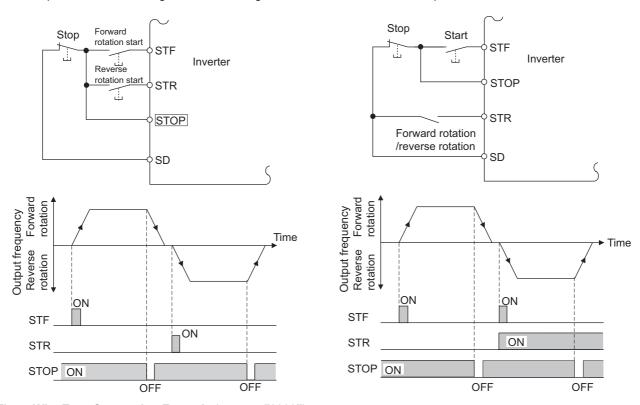

Three-Wire Type Connection Example ( $Pr. 25\theta$  ="9999") Three-Wire Type Connection Example ( $Pr. 25\theta$  ="8888")

#### **REMARKS**

- The STOP signal is assigned to the terminal STOP in the initial setting. By setting "25" in *Pr. 178 to Pr. 189*, the STOP signal can also be assigned to the other terminal.
- · When the JOG signal is turned on to enable jog operation, the STOP signal becomes invalid.
- If the MRS signal is turned on to stop the output, the self-holding function is not canceled.

## (3) Start signal selection

STF	STR	Pr. 250 Setting Inverter Status				
317	SIK	0 to 100s, 9999	1000s to 1100s, 8888			
OFF	OFF	Stop	Stop			
OFF	ON	Reverse rotation	σιορ			
ON	OFF	Forward rotation	Forward rotation			
ON	ON	Stop	Reverse rotation			

#### ◆ Parameters referred to ◆

Pr. 4 to Pr. 6 (Multi-speed setting) Refer to page 165

Pr. 178 to Pr. 189 (Input terminal function selection) Refer to page 227



## 4.15.5 Output terminal function selection (Pr. 190 to Pr. 196)



You can change the functions of the open collector output terminal and relay output terminal.

Parameter Number	Name		Initial Value	Initial Signal	Setting Range	
190	RUN terminal function selection		0	RUN (inverter running)		
191	SU terminal function selection	Open	1	SU (up to frequency)	0 to 8, 10 to 20, 25 to 28, 30 to 36, 39, 41 to 47, 64, 70, 84, 85, 90 to	
192	IPF terminal function selection	collector output	2	IPF (instantaneous power failure, undervoltage)	99, 100 to 108, 110 to 116, 120, 125 to 128, 130 to 136, 139, 141 to	
193	OL terminal function selection	terminal	3	OL (overload alarm)	147, 164, 170, 184, 185, 190 to 199, 9999	
194	FU terminal function selection		4	FU (output frequency detection)		
195	ABC1 terminal function selection	Relay	99	ALM (alarm output)	0 to 8, 10 to 20, 25 to 28, 30 to 36, 39, 41 to 47, 64, 70, 84, 85, 90, 91, 94 to 99, 100 to 108, 110 to 116.	
196	ABC2 terminal function selection	output terminal	9999	No function	120, 125 to 128, 130 to 136, 139, 141 to 147, 164, 170, 184, 185, 190, 191, 194 to 199, 9999	

#### (1) Output signal list

- · You can set the functions of the output terminals.
- · Refer to the following table and set the parameters: (0 to 99: Positive logic, 100 to 199: Negative logic)

Set	ting	Signal			Related	Refer to
Positive Logic	Negative Logic	Name	Function	Operation	Parameters	Page
0	100	RUN	Inverter running	Output during operation when the inverter output frequency rises to or above <i>Pr. 13 Starting frequency.</i>	_	237
1	101	SU	Up to frequency *1	Output when the output frequency is reached to the set frequency. *3	Pr. 41	241
2	102	IPF	Instantaneous power failure/undervoltage	Output at occurrence of an instantaneous power failure or when undervoltage protection is activated.	Pr. 57	260
3	103	OL	Overload alarm	Output while stall prevention function is activated.	Pr. 22, Pr. 23, Pr. 66, Pr. 148, Pr. 149, Pr. 154	149
4	104	FU	Output frequency detection	Output when the output frequency reaches the frequency set in <i>Pr. 42</i> ( <i>Pr. 43</i> for reverse rotation). *3	Pr. 42, Pr. 43	241
5	105	FU2	Second output frequency detection	Output when the output frequency reaches the frequency set in <i>Pr. 50.</i> *3	Pr. 50	241
6	106	FU3	Third output frequency detection	Output when the output frequency reaches the frequency set in <i>Pr. 116.</i> *3	Pr. 116	241
7	107	RBP	Regenerative brake prealarm	Output when 85% of the regenerative brake duty set in <i>Pr.</i> 70 is reached.	Pr. 70	203
8	108	THP	Electronic thermal relay function prealarm	Output when the electronic thermal relay function cumulative value reaches 85%. (Electronic thermal relay function protection (E.THT/E.THM) activates, when the value reached 100%.)	Pr. 9	182
10	110	PU	PU operation mode	Output when the PU operation mode is selected.	Pr. 79	306
11	111	RY	Inverter operation ready	Output when the inverter power is turned on, then output after reset process is completed (when the inverter can be started by switching the start signal on or while it is running).	_	237
12	112	Y12	Output current detection	Output when the output current is higher than the <i>Pr. 150</i> setting for longer than the time set in <i>Pr. 151</i> .	Pr. 150, Pr. 151	243
13	113	Y13	Zero current detection	Output when the output power is lower than the <i>Pr. 152</i> setting for longer than the time set in <i>Pr. 153</i> .	Pr. 152, Pr. 153	243

Set	ting	Cianal			Delete d	Refer to	
Positive Logic	Negative Logic	Signal Name	Function	Operation	Related Parameters	Page	
14	114	FDN	PID lower limit	Output when the feedback value falls below the lower limit of PID control.			
15	115	FUP	PID upper limit	the upper limit of PID control	Pr. 127 to Pr. 134, Pr. 575 to Pr. 577	354	
16	116	RL	PID forward/reverse rotation output	Output when forward rotation is performed in PID control.			
17	_	MC1	Commercial power- supply switchover MC1				
18		MC2	Commercial power- supply switchover MC2	Used when the commercial power supply- inverter switchover function is used.	Pr. 135 to Pr. 139, Pr. 159	362	
19		МС3	Commercial power- supply switchover MC3				
20	120	BOF	Brake opening request	Output to open the brake when the brake sequence function is selected.	Pr. 292	213	
25	125	FAN	Fan fault output	Output at the time of a fan fault.	Pr. 244	378	
26	126	FIN	Heatsink overheat pre-alarm	Output when the heatsink temperature reaches about 85% of the heatsink overheat protection providing temperature.	_	403	
27	127	ORA	Orientation in-position		Pr. 350 to Pr. 366,	040	
28	128	ORM	Orientation error	When orientation is valid *4	Pr. 369, Pr. 393, Pr. 396 to Pr. 399	216	
30	130	Y30	Forward rotation output	Output when the motor is running in forward direction. *4  Output when the motor is running in reverse		239	
31	131	Y31	Reverse rotation output	direction. *4		239	
32	132	Y32	Regenerative status output	Output in the regeneration status under vector control operation. *4		239	
33	133	RY2	Operation ready 2	Output during real sensorless vector control, vector control, pre-excitation or operation.	_	237	
33	133	RY2	Operation ready 2	Output during pre-exitation or operation under real sensorless vector control.	_	237	
34	134	LS	Low speed output	Output when the output frequency reduces below the <i>Pr.</i> 865 setting.	Pr. 865	241	
35	135	TU	Torque detection	Output when the motor torque rises above the <i>Pr.</i> 864 value.	Pr. 864	244	
36	136	Y36	In-position	Output when the number of droop pulses has fallen below the setting value.	Pr. 426	137	
39	139	Y39	Start time tuning completion	Output on completion of start-time tuning.	Pr. 95, Pr. 574	196	
41	141	FB	Speed detection	Output when the actual motor speed	Dr. 42 Dr. 50		
42	142 143	FB2 FB3	Second speed detection	(estimated actual speed value) reaches the <i>Pr. 42</i> ( <i>Pr. 50</i> , <i>Pr.116</i> ) setting.	Pr. 42, Pr. 50, Pr. 116	241	
44	144	RUN2	Inverter running	<ul> <li>Output during forward rotation or the reverse rotation signal is ON.</li> <li>Output at deceleration even during forward rotation or the reverse rotation signal is OFF. (Does not output during pre-excitation LX is ON.)</li> <li>Output during the orientation command signal (X22) is ON.</li> <li>Switched ON when the servo is ON (LX-ON) under position control.</li> </ul>	_	237	
45	145	RUN3	Inverter running and start command is on	Output when the inverter running and start commands are on.	_	237	
46	146	Y46	During deceleration at occurrence of power failure (retained until release)	Output when the power failure-time deceleration function is executed.	Pr. 261 to Pr. 266	265	
47	147	PID	During PID control activated	Output during PID control.	Pr. 127 to Pr. 134, Pr. 575 to Pr. 577	354	
64	164	Y64	During retry	Output during retry processing.	Pr. 65 to Pr. 69	268	
70	170	SLEEP	PID output interruption	Output when the PID output interruption function is executed.	Pr. 127 to Pr. 134, Pr. 575 to Pr. 577	354	



Set	ting	Cianal			Dolotod	Refer to
Positive Logic	Negative Logic	Signal Name	Function	Operation	Related Parameters	Page
84	184	RDY	Position control preparation ready	Signal is output when the servo is on (LX-ON) and ready to operate.	Pr. 419, Pr. 428 to Pr. 430	134
85	185	Y85	DC current feeding	This signal turns on during power failure or under voltage of AC power.	Pr. 30, Pr. 70	203
90	190	Y90	Life alarm	Output when any of the control circuit capacitor, main circuit capacitor and inrush current limit circuit or the cooling fan approaches the end of its service life.	Pr. 255 to Pr. 259	379
91	191	Y91	Alarm output 3 (power-off signal)	Output when an error occurs due to the circuit failure or connection alarm of the inverter.	_	240
92	192	Y92	Energy saving average value updated timing	Turned on and off alternately every time the power saving average value is updated when the power saving monitor is used.	Pr. 52, Pr. 54, Pr. 158, Pr. 891 to Pr. 899	274
93	193	Y93	Current average value monitor signal	Average current value and maintenance timer value are output as pulses. Cannot be set to <i>Pr. 195</i> and <i>Pr. 196</i> (relay output terminal).	Pr. 555 to Pr. 557	382
94	194	ALM2	Alarm output 2	Output when the inverter's protective function is activated to stop the output (major fault). Continue outputting the signal during inverter reset and stop outputting after reset is cancelled. *2	_	240
95	195	Y95	Maintenance timer signal	Output when <i>Pr. 503</i> rises to or above the <i>Pr. 504</i> setting.	Pr. 503, Pr. 504	381
96	196	REM	Remote output	Output to the terminal when a value is set to the parameter.	Pr. 495 to Pr. 497	245
97	197	ER	Minor fault output 2	Output when the inverter protective function is activated to stop the output (major fault)	Pr. 875	272
98	198	LF	Minor fault output	Output when a minor fault (fan failure or communication error warning) occurs.	Pr. 121, Pr. 244	325, 378
99	199	ALM	Alarm output	Output when the inverter protective function is activated to stop the output (major fault). The signal output is stopped when a reset turns on.	_	240
99	99		No function	_	_	_

Note that when the frequency setting is varied using an analog signal or O of the operation panel (FR-DU07), the output of the SU (up to



frequency) signal may alternate on and off depending on that varying speed and the timing of the varying speed due to acceleration/deceleration time setting. (The output will not alternate on and off when the acceleration/deceleration time setting is "0s".)

- When a power supply reset is performed, the alarm output 2 signal (ALM2) turns off as soon as the power supply switches off.
- Up to frequency SU, frequency detection FU, FU2, FU3 under encoder feed back control or vector control (option FR-A7AP is mounted) signals are as below.
  - SU, FU: Output when the actual speed (frequency) by the encoder feedback signal exceeds detected specification frequency. FU2. FU3: Output when the inverter output frequency exceeds detected specification frequency.
- \*4 This parameter is valid when the FR-A7AP (option) is mounted.

#### **REMARKS**


- The same function may be set to more than one terminal.
- When the function is executed, the terminal conducts at the setting of any of "0" to "99", and does not conduct at the setting of any of "100" to "199"
- The signal will not function if a value other than the above is set to any of Pr. 190 to Pr. 196.
- When Pr. 76 Alarm code output selection = "1", the output signals of the terminals SU, IPF, OL and FU are switched as set in Pr. 76. (When an inverter alarm occurs, the signal output is switched to the alarm output.)
- The output assignment of the terminal RUN and alarm output relay are as set above regardless of Pr. 76.

#### — CAUTION =

- When terminal assignment is changed using Pr. 190 to Pr. 196 (output terminal function selection), the other functions may be affected. Please make setting after confirming the function of each terminal.
- Do not assign signals which repeat frequent ON/OFF to A1, B1, C1, A2, B2, C2. Otherwise, the life of the relay contact decreases

# (2) Inverter operation ready signal (RY, RY2 signal) and inverter running signal (RUN, RUN2, RUN3 signal)

## Under V/F control, advanced magnetic flux vector control

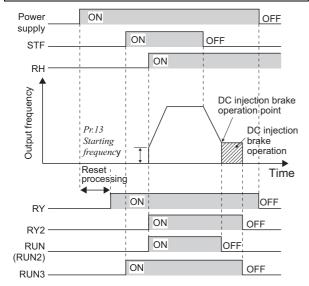


- When the inverter is ready to operate, the output of the operation ready signal (RY) is on. (It is also on during inverter running.)
- When the output frequency of the inverter rises to or above *Pr. 13 Starting frequency*, the output of the inverter running signals (RUN, RUN2) is turned on. During an inverter stop or DC injection brake operation, the output is off.
- For the RUN3 signal, output is on while the inverter running and the start signal is on.
- (For the RUN3 signal, output is on if the starting command is on even when the inverter protective function is activated or the MRS signal is on.)
- The output is on during DC injection brake operation and off during an inverter stop.

Inverter Status	Start	Start Signal is	Start Signal is	Under DC	At Alarm Occurrence or MRS Signal is on			t after r Failure		
	ÖFF	ON	ON	Injection	(output	shutoff)	Coas	sting		
Output Status	(during stop)	(during stop)	(during running)	Brake	Start Signal is ON	Start Signal is OFF	Start Signal is ON	Start Signal is OFF	Restarting	
RY	ON	ON	ON	ON	OFF	OFF	00	N *1	ON	
RY2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
RUN	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	
RUN2	OFF	OFF	ON	OFF	OFF	OFF	OFF OFF		ON	
RUN3	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON	

<sup>\*1</sup> This signal turns off during power failure or undervoltage.

## trol 🕌

#### Under real sensor less vector control

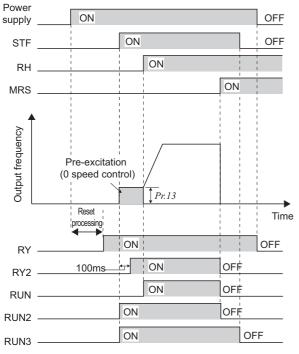

When the inverter is ready to operate, the output of the operation ready signal (RY) is on.


(It is also on during inverter running.)

- When the inverter output frequency rises to or above the *Pr.* 13 Starting frequency setting, the output of the inverter running signal (RUN) is turned on. During an inverter stop, DC injection brake operation, start time tuning or pre-excitation, the output is off.
- For the RUN2 signal, the output is on while the inverter is running and the start signal is on. (For the RUN2 signal, the output is off when the inverter protective function is activated and the MRS signal is on.)
- For the RUN3 signal, the output is on while the inverter is running and the start signal is on.
- The RUN2 and RUN3 signals are on when the start command is on and even during pre-excitation with "0" set in speed command. (Note that the RUN2 signal turn off during pre-excitation by turning the LX signal on.)
- The RY2 signal turns on at the start of pre-excitation.

The signal is on while pre-excitation is activated even during an inverter stop. The signal turns off while the output is shut off (MRS signal).

#### REMARKS

For pre-excitation by pre-excitation signal (LX), the RY2 signal turns on when 100ms has elapsed after LX signal turn on (500ms for the FR-A720-02880(FR-A740-01440) or more).

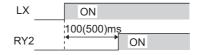

Inverter Status	Start	Start	Start	DC At Alarm Automatic Rest Occurrence or Instantaneous Por		Occurrence or				
	Signal is OFF	signal is ON *1	Signal is ON	is ON brake (output shutoff) Coasting			_			
Output Status	(during stop)	(pre- excitation)	(during running)	(pre- excitation)	operation (pre- excitation) S	Start Signal is ON	Start Signal is OFF	Start Signal is ON	Start Signal is OFF	Restarting
RY	ON	ON	ON	ON	ON	O	FF	10	l *2	ON
RY2	OFF	ON	ON	ON *3	ON	O	FF	OFF	OFF	OFF
RUN	OFF	OFF	ON	OFF	OFF	O	FF	OFF	OFF	ON
RUN2	OFF	ON	ON	OFF *4	OFF	OFF		OFF	OFF	ON
RUN3	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	ON

- \*1 Pre-excitation is made when the start signal is ON and frequency command is 0Hz.
- \*2 This signal turns OFF during power failure or undervoltage.
- \*3 There is a delay of 100ms (500ms for the FR-A720-02880 (FR-A740-01440) or more) when the signal is ON.
- \*4 This signal turns ON during servo ON (LX signal is ON) under position control.


Output	Pr. 190 to Pr. 196 Setting			
Signal	Positive logic	Negative logic		
RY	11	111		
RY2	33	133		
RUN	0	100		
RUN2	44	144		
RUN3	45	145		

· When using the RY, RY2, RUN, RUN2 and RUN3 signals, assign functions to *Pr. 190 to Pr. 196 (output terminal selection function)* referring to the table on the left.

#### **REMARKS**

· The RUN signal is assigned to the terminal RUN in the initial setting.

## (3) Forward rotation and reverse rotation signal (Y30, Y31 signal)

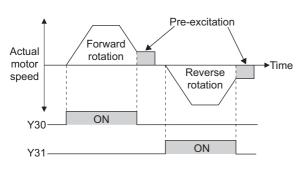


- The status during forward rotation (Y30) and reverse rotation (Y31) are output from the actual motor speed under vector control.
- Y30 and Y31 signals turn off during pre-excitation (zero speed, servo lock) under speed control or torque control operation. Note that signals are output according to the motor rotation during servo lock under position control as same as inverter running.

### REMARKS

- · This signal is always off during V/F control, advanced magnetic flux vector control or real sensorless vector control.
- If the motor is made to run by external force, etc. during an inverter stop, Y30 and Y31 remain OFF.
- The FR-A7AP (option) is necessary for vector control.

#### (4) Regenerative mode output signal (Y32 signal)

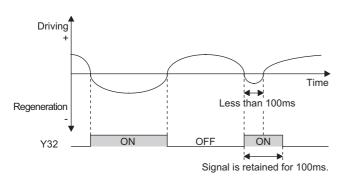


- While the motor is in regenerative status (motor is in power regeneration status), the regenerative status output signal (Y32) is turned on.
- If the signal is turned on once, it will be retained for at least 100ms.
- It turns off while the inverter is stopped and during preexcitation.

#### **REMARKS**

- This signal is always off during V/F control, advanced magnetic flux vector control or real sensorless vector control.
- The FR-A7AP (option) is necessary for vector control.

## (5) Alarm output signal (ALM, ALM2 signal)

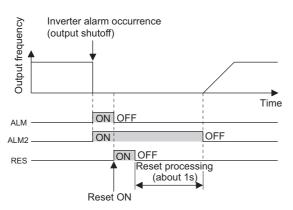

- If the inverter comes to an alarm stop, the ALM and ALM2 signals are output.
- The ALM2 signal remains on during a reset period after alarm occurrence.
- When using the ALM2 signal, set "94 (positive logic)" or "194 (negative logic)" to any of Pr. 190 to Pr. 196 (output terminal function selection) to assign the function to the output terminal.
- The ALM signal is assigned to the A1B1C1 contact in the initial setting.

## REMARKS

Refer to page 398 for the inverter alarm description.

## (6) Input MC shutoff signal (Y91 signal)

- The Y91 signal is output at occurrence of an alarm attributable to the failure of the inverter circuit or an alarm caused by a wiring mistake.
- · When using the Y91 signal, set "91 (positive logic)" or "191 (negative logic)" to any of *Pr. 190 to Pr. 196 (output terminal function selection)* to assign the function to the output terminal.
- $\cdot$  The following table indicates the alarms that will output the Y91 signal. (Refer to page 398 for the alarm description.)

No.	Alarm Description		
1	Inrush current limit circuit alarm (E.IOH)		
2	CPU error (E.CPU)		
3	CPU error (E.6)		
4	CPU error (E.7)		
5	Parameter storage device alarm (E.PE)		
6	Parameter storage device alarm (E.PE2)		
7	24VDC power output short circuit (E.P24)		
8	Operation panel power supply short circuit, RS-485 terminal power supply short circuit(E.CTE)		
9	Output side earth(ground) fault overcurrent protection(E.GF)		
10	Output phase failure (E.LF)		
11	Brake transistor alarm detection (E.BE)		

#### ◆ Parameters referred to ◆


Pr. 13 Starting frequency Refer to page 174.

Pr. 76 Alarm code output selection Refer to page 270

# 4.15.6 Detection of output frequency (SU, FU, FU2, FU3, FB, FB2, FB3, LS signal, Pr. 41 to Pr. 43, Pr. 50, Pr. 116, Pr. 865)


The inverter output frequency is detected and output to the output signal.

Parameter Number	Name	Initial Value	Setting Range	Description	
41	Up-to-frequency sensitivity	10%	0 to 100%	Set the level where the SU signal turns on.	
42	Output frequency detection	6Hz	0 to 400Hz	Set the frequency where the FU (FB) signal turns on.	
43	Output frequency detection for reverse rotation	9999	0 to 400Hz	Set the frequency where the FU (FB) signal turns on in reverse rotation.	
			9999	Same as Pr. 42 setting	
50	Second output frequency detection	30Hz	0 to 400Hz	Set the frequency where the FU2 (FB2) signal turns on.	
116	Third output frequency detection	60Hz	0 to 400Hz	Set the frequency where the FU3 (FB3) signal turns on.	
865	Low speed detection	1.5Hz	0 to 400Hz	Set the frequency where the LS signal turns on.	

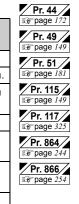

Pr. <u>37</u>

page 246

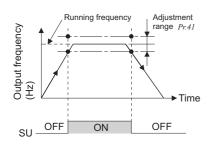


### (1) Up-to-frequency sensitivity (SU signal, Pr. 41)

- $\cdot$  When the output frequency reaches the running frequency, the up-to-frequency signal (SU) is output.
- · The Pr.~41 value can be adjusted within the range  $\pm 1\%$  to  $\pm 100\%$  on the assumption that the set frequency is 100%.
- This parameter can be used to ensure that the running frequency has been reached to provide the operation start signal etc. for related equipment.


# (2) Output frequency detection (FU (FB) signal, FU2 (FB2) signal, FU3 (FB3) signal, *Pr. 42*, *Pr. 43*, *Pr. 50*, *Pr. 116*)

- · When the output frequency rises to or above the *Pr. 42* setting, the output frequency detection signal (FU, FB) is output.
- · This function can be used for electromagnetic brake operation, open signal, etc.
- The FU (FU2, FU3) signal is output when the output frequency reaches the set frequency. While the FB (FB2, FB3) signal is output when the actual rotation detection speed (during real sensorless vector control: speed estimated value, during vector control: feedback value) of the motor reaches the set frequency. The FU signal and FB signal are output simultaneously during V/F control and advanced magnetic flux vector control.
- When the detection frequency is set in *Pr. 43*, frequency detection used exclusively for reverse rotation can also be set. This function is effective for switching the timing of electromagnetic brake operation between forward rotation (rise) and reverse rotation (fall) during elevator operation, etc.
- When  $Pr. 43 \neq$  "9999", the Pr. 42 setting applies to forward rotation and the Pr. 43 setting applies to reverse rotation.
- When outputting a frequency detection signal besides the FU signal, set the detection frequency in *Pr. 50 or Pr. 116*. The FU2 (FB2) signal (FU3(FB3) signal if *Pr.116* or more) is output when the output frequency reaches or exceeds the *Pr. 50* setting
- · For each signal, assign functions to Pr. 190 to Pr. 196 (output terminal function selection) referring to the table below.

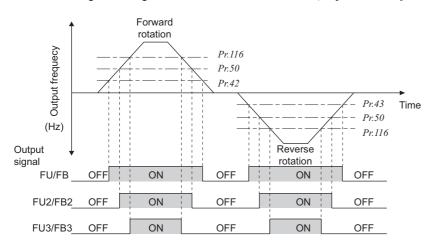

Parameter	Output Signals	Pr. 190 to Pr. 196 Setting		
Number		Positive logic	Negative logic	
42, 43	FU	4	104	
	FB	41	141	
50	FU2	5	105	
	FB2	42	142	
116	FU3	6	106	
	FB3	43	143	



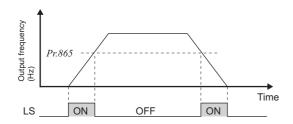

# (3) Low speed detection (LS signal, Pr. 865)

- The low speed detection signal (LS) signal is output when the output frequency reduces below the *Pr. 865 Low speed detection* setting.
- · When speed control is performed by real sensorless vector control or vector control, an alarm (E.OLT) is displayed and the inverter output is stopped if frequency drops to the *Pr.* 865 setting by torque limit operation and the output torque exceeds *Pr.* 874 OLT level setting and remains for more than 3s.
- · For the LS signal, set "34 (positive logic) or 134 (negative logic)" in *Pr. 190 to Pr. 196 (output terminal function selection)* and assign functions to the output terminal.

### **REMARKS**

- · The FU signal is assigned to the terminal FU and the SU signal is assigned to the terminal SU in the initial setting.
- All signals are OFF during DC injection brake, pre-excitation (zero speed control, servo lock), or start time tuning.
- The output frequency to be compared with the set frequency at the SU signal and LS signal differs according to the control method.

Control Method	Compared Output Frequency
V/F control	Output frequency
Advanced magnetic flux vector control	Output frequency before slip compensation
Real sensorless vector control	Frequency (actual motor speed) estimated value
Encoder feedback control, vector control	Value of actual motor rotation represented in terms of frequency setting

# CAUTION

· When terminal assignment is changed using Pr. 190 to Pr. 196 (output terminal function selection), the other functions may be affected. Please make setting after confirming the function of each terminal.

## ◆ Parameters referred to ◆

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234 Pr. 874 OLT level setting Refer to page 99

Pr.149

Pr.154 /

Pr.170


page 248

# 4.15.7 Output current detection function (Y12 signal, Y13 signal, Pr. 150 to Pr. 153, Pr. 166, Pr. 167)

The output power during inverter running can be detected and output to the output terminal.


Parameter Number	Name	Initial Value	Setting Range	Description
150	Output current detection level	150%*	0 to 220%*	Set the output current detection level. 100% is the rated inverter current.
151	Output current detection signal delay time	0s	0 to 10s	Set the output current detection period. Set the time from when the output current has risen above the setting until the output current detection signal (Y12) is output.
152	Zero current detection level	5%	0 to 220% *	Set the zero current detection level. The rated inverter current is assumed to be 100%.
153	Zero current detection time	0.5s	0 to 1s	Set this parameter to define the period from when the output current drops below the <i>Pr. 152</i> value until the zero current detection signal (Y13) is output.
166	Output current detection	0.1s	0 to 10s	Set the retention time when the Y12 signal is on.
100	signal retention time	0.15	9999	The Y12 signal on status is retained. The signal is turned off at the next start.
167	Output current detection	0	0	Operation continues when the Y12 signal is on
107	operation selection	U	1	The inverter is brought to an alarm stop when the Y12 signal is on. (E.CDO)

<sup>\*</sup> When Pr. 570 Multiple rating setting ≠ "2", performing parameter clear changes the initial value and setting range. (Refer to page 154.)

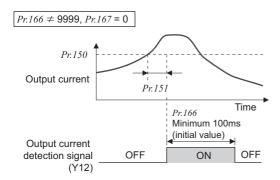

# (1) Output current detection (Y12 signal, *Pr. 150, Pr. 151, Pr. 166, Pr. 167*)

- The output current detection function can be used for excessive torque detection, etc.
- If the output current remains higher than the Pr. 150 setting during inverter operation for longer than the time set in Pr. 151, the output current detection signal (Y12) is output from the inverter's open collector or relay output terminal.
- When the Y12 signal turns on, the ON state is held for the time set in  $Pr.\ 166$ .
- · When Pr. 166 = "9999", the ON state is held until a next start.
- At the *Pr.* 167 setting of "1", the inverter output is stopped and the output current detection alarm (E.CDO) is displayed when the Y12 signal turns on. When an alarm stop occurs, the Y12 signal is on for the time set in *Pr.* 166 at the *Pr.* 166 setting of other than 9999, and remains on until a reset is made at the *Pr.* 166 setting of 9999. E.CDO does not occur even if "1" is set in *Pr.*167 while Y12 is ON. The *Pr.*167 setting is made valid after Y12 turns OFF.
- Set "12 (positive logic)" or "112 (negative logic)" to any of Pr. 190 to Pr. 196 (output terminal function selection) to assign the function of the Y12 signal to the output terminal.

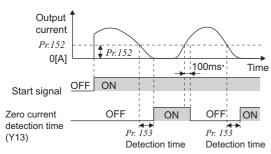

\* Once turned on, the zero current detection time signal (Y13) is held on for at least 100ms.

# (2) Zero current detection (Y13 signal, *Pr. 152, Pr. 153*)

- If the output current remains lower than the *Pr. 152* setting during inverter operation for longer than the time set in *Pr. 153*, the zero current detection (Y13) signal is output from the inverter's open collector or relay output terminal.
- When the inverter's output current falls to "0", torque will not be generated. This may cause a drop due to gravity when the inverter is used in elevator application. To prevent this, the Y13 signal can be output from the inverter to close the mechanical brake when the output current has fallen to "zero".
- Set "13 (positive logic)" or "113 (negative logic)" in any of Pr. 190 to Pr. 196 (output terminal function selection) to assign the function of the Y13 signal to the output terminal.

#### = CAUTION

- This function is also valid during execution of the online or offline auto tuning.
- · The response time of Y12 and Y13 signals is approximately 350ms.
- When terminal assignment is changed using *Pr. 190 to Pr. 196 (output terminal function selection)*, the other functions may be affected. Please make setting after confirming the function of each terminal.

# **⚠** CAUTION

- The zero current detection level setting should not be too high, and the zero current detection time setting not too long. Otherwise, the detection signal may not be output when torque is not generated at a low output current.
- ↑ To prevent the machine and equipment from resulting in hazardous conditions by use of the zero current detection signal, install a safety backup such as an emergency brake.

## ◆ Parameters referred to ◆

Online auto tuning Refer to page 196

Offline auto tuning & Refer to page 186

Pr. 190 to Pr. 196 (output terminal function selection) & Refer to page 234

# 4.15.8 Detection of output torque (TU signal, Pr. 864) Sensorless Magnetic flux Vector


Output the signal when the motor torque rises above the setting value.

This function can be used for electromagnetic brake operation, open signal, etc.

Pr.865	
page 241	

Pr 863

-	ameter umber	Name	Initial Value	Setting Range	Description		
	864	Torque detection	150%	0 to 400%	Set the torque value where the TU signal turns on.		

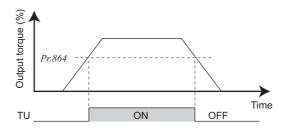

- When the output torque reaches or exceeds the detected torque value set in *Pr.* 864 under real sensorless vector control, advanced magnetic flux vector control, or vector control, the torque detection signal (TU) turns on.
  - It turns off when the torque falls below the detection torque value.
- For the TU signal, set "35 (positive logic) or 135 (negative logic)" in Pr. 190 to Pr. 196 (output terminal function selection) and assign functions to the output terminal.

#### CAUTION

When terminal assignment is changed using *Pr. 190 to Pr. 196 (output terminal function selection)*, the other functions maybe affected. Please make setteing after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

# 4.15.9 Remote output function (REM signal, Pr. 495 to Pr. 497)

You can utilize the on/off of the inverter's output signals instead of the remote output terminal of the programmable logic controller.



Parameter Number	Name	Initial Value	Setting Range	Description	
				Remote output data clear at powering off	Remote output data
495	Remote output selection	0	1	Remote output data retention even at powering off	reset
493	Remote output selection		10	Remote output data clear at powering off	Remote output data
			11	Remote output data retention even at powering off	inverter reset
496 *	Remote output data 1	0	0 to 4095	Refer to the following diagram.	
497 *	Remote output data 2	0	0 to 4095		

<sup>\*</sup> The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

#### <Remote output data>

Pr. 496

b11											b0
۱,	<u> </u>	*1	*1	*1	ABC2	ABC1	FU	OL	IPF	SU	RUN

Pr. 497


b11											b0
*	*	RA3 *3	RA2 *3	RA1 *3	Y6 *2	Y5 *2	Y4 *2	Y3 *2	Y2 *2	Y1 *2	Y0 *2

- \*1 As desired (always 0 when read)
- \*2 Y0 to Y6 are available only when the extension output option (FR-A7AY) is fitted
- \*3 RA1 to RA3 are available only when the relay output option (FR-A7AR) is fitted

- The output terminal can be turned on/off depending on the Pr. 496 or Pr. 497 setting. The remote output selection can be controlled on/off by computer link communication from the PU connector or RS-485 port or by communication from the communication option.
- Set "96" (positive logic) or "196" (negative logic) to any of *Pr. 190 to Pr. 196 (output terminal function selection)*, and assign the remote output (REM) signal to the terminal used for remote output,
- · When you refer to the diagram on the left and set 1 to the terminal bit (terminal where the REM signal has been assigned) of *Pr. 496* or *Pr. 497*, the output terminal turns on (off for negative logic). By setting 0, the output terminal turns off (on for negative logic).

Example)When "96" (positive logic) is set in *Pr. 190 RUN terminal function selection* and "1" (H01) is set in *Pr. 496*, the terminal RUN turns on.

#### ON/OFF example for positive logic

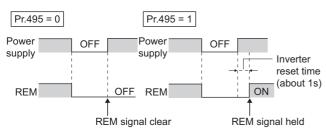

- When *Pr.* 495 = "0" (initial value), performing a power supply reset (including a power failure) clears the REM signal output. (The ON/OFF states of the terminals are as set in *Pr.* 190 to *Pr.* 196.) The *Pr.* 496 and *Pr.* 497 settings are also "0".
- When Pr. 495 = "1", the remote output data before power supply-off is stored into the EEPROM, so the signal output at power recovery is the same as before power supply-off. However, it is not stored when the inverter is reset (terminal reset, reset request through communication).

(See the chart on the left)

#### REMARKS

- The output terminal where the REM signal is not assigned using any of *Pr. 190 to Pr. 196* does not turn on/off if 0/1 is set to the terminal bit of *Pr. 496* or *Pr. 497*. (It turns on/off with the assigned function.)
- · When the inverter is reset (terminal reset, reset request through communication), *Pr.* 496 and *Pr.* 497 values turn to "0". When *Pr.* 495 = "1", however, they are the settings at power supply-off. (The settings are stored at power supply-off.)

#### CAUTION

· When Pr. 495 = "1" (remote output data retention even at powering off), take such a step as to connect R1/L11, S1/L21 and P/+, N/- to ensure that control power will be retained to some degree. If you do not take such a step, the output signals provided after power-on are not guaranteed.

#### ◆ Parameters referred to ◆


· Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

# 4.16 Monitor display and monitor output signal

Purpose	Parame	ter that must be Set	Refer to Page
Display motor speed Set speed	Speed display and speed setting	Pr. 37, Pr. 144, Pr. 505, Pr. 811	246
Change PU monitor display data	DU/PU main display data selection Cumulative monitor clear	Pr. 52, Pr. 170, Pr. 171, Pr. 268, Pr. 891	248
Change of the monitor output from terminal FM and AM	Terminal , AM function selection	Pr. 54, Pr. 158, Pr. 291, Pr. 866, Pr. 867	248
Set the reference of the monitor output from terminal FM and AM	Setting of reference of terminal FM and AM	Pr. 55, Pr. 56, Pr. 291, Pr. 866, Pr. 867	254
Adjust terminal FM, AM outputs	Terminal , AM calibration	Pr. 900, Pr. 901	257

# 4.16.1 Speed display and speed setting (Pr. 37, Pr. 144, Pr. 505, Pr. 811)

You can change the PU (FR-DU07/FR-PU04/FR-PU07) monitor display or frequency setting to motor speed or machine speed.

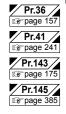

Parameter Number	Namo		Name Initia Valu		Setting Range	Description			
			0	Frequency display, setting	Frequency display, setting				
37	Speed display	0	1 to yyyx	Set the machine speed at <i>Pr.505</i> .	Set the machine speed at <i>Pr.505</i> .				
144	Speed setting switchover	4		Set the number of motor poles when displaying the motor speed.	Set the number of motor poles when displaying the motor speed.				
505	Speed setting reference	60Hz	1 to 120Hz	Set the reference speed for Pr. 37.					
				Speed setting and running speed monitor increments from the PU, RS-485 communication or communication option.					
811	Set resolution switchover	et resolution switchover 0		1r/min	0.1%				
			1	0.1r.min	0.170				
			10	1r/min 0.01%					
			11	0.1r.min	0.0170				

- To display the machine speed, set in Pr. 37 the machine speed for operation with frequency set in Pr. 505. For example, when Pr. 505 = "60Hz" and Pr. 37 = "1000", "1000" is displayed on the running speed monitor when the running frequency is 60Hz. When running frequency is 30Hz, "500" is displayed.
- When displaying the motor speed, set the number of motor poles (2, 4, 6, 8, 10) or number of motor poles + 100 (102, 104, 106, 108, 110) in *Pr. 144*.
- The *Pr. 144* setting is automatically changed if the number of motor poles is set in *Pr.81 Number of motor poles*. The *Pr. 81* setting is not automatically changed even if the setting of *Pr. 144* is changed.

Example 1) When "2 or 12" is set in Pr. 81 from the initial value

The setting of *Pr. 144* changes to 2 from 4.

Example 2) When "2" is set in Pr. 81 with Pr. 144 = "104"

The setting of Pr. 144 changes to 102 from 104.

- · When "10, or 11" is set in *Pr.811*, the setting increments of speed setting from the PU, speed setting from RS-485 communication or communication options (other than FR-A7ND, FR-A7NL) and running speed monitor is 0.1r/min.
- When both *Pr. 37* and *Pr. 144* have been set, their priorities are as given below.

Pr. 144, 102 to 110 > Pr. 37, 1 to 9998 > Pr. 144, 2 to 10

· When the running speed monitor is selected, each monitor and setting are determined by the combination of *Pr. 37* and *Pr. 144* as listed below. (The units within the thick frame are the initial values.)

Pr. 37 Setting	Pr. 144 Setting	Output Frequency Monitor	Set Frequency Monitor	Running Speed Monitor	Frequency Setting Parameter Setting
0	0	Hz	Hz	r/min ∗1	Hz
(initial	2 to 10	Hz	Hz	r/min ∗1	Hz
value)	102 to 110	r/min *1	r/min ∗1	r/min ∗1	r/min ∗1
	0	Hz	Hz	Machine speed *1	Hz
1 to 9998	2 to 10	Machine speed *1	Machine speed *1	Machine speed *1	Machine speed *1
	102 to 110	Hz	Hz	r/min *1	Hz

<sup>\*1</sup> Motor speed r/min conversion formula.......... frequency × 120/number of motor poles (*Pr. 144*)

\*2 The increments for Hz are 0.01Hz, machine speed are 1m/min, and r/min are 1r/min.

\*3 *Pr.505* is always set as frequency (Hz).

## CAUTION

- · In the V/F control mode, the output frequency of the inverter is displayed in terms of synchronous speed, and therefore, it is unequal to the actual speed by motor slip. This display changes to the actual speed (estimated value calculated based on the motor slip) when the advanced magnetic flux vector control or real sensorless vector control is selected, and actual speed from the encoder when encoder feed back control or vector control is performed.
- · When the running speed display is selected at the setting of *Pr. 37=* "0" and *Pr. 144=* "0", the monitor display is provided on the assumption that the number of motor poles is 4. (1800r/min is displayed at 60Hz)
- Refer to Pr. 52 when you want to change the PU main monitor (PU main display).
- · Since the panel display of the operation panel (FR-DU07) is 4 digits in length, the monitor value of more than "9999" is displayed "----".
- · After setting the running speed in 0.1r/min increments (*Pr.811*= "1, 11"), changing the setting increments to 1r/min increments (*Pr.811*= "1, 10") changes the speed resolution from 0.1r/min to 0.3r/min (four poles), which may round down 0.1r/min increments.
- · When the machine speed is displayed on the FR-PU04/FR-PU07, do not change the speed by using an up/down key in the state where the set speed exceeding 65535 is displayed. The set speed may become arbitrary value.

# **⚠** CAUTION

Make sure that the settings of the running speed and number of motor poles are correct. Otherwise, the motor might run at extremely high speed, damaging the machine.

#### ♦ Parameters referred to ♦

Pr. 52 DU/PU main display data selection Refer to page 248

Pr. 80 Motor capacity, Pr. 81 Number of motor poles Refer to page 145

Pr. 800 Control system selection Refer to page 92

Pr. 811 Set resolution switchover Refer to page 99



# 4.16.2 DU/PU, FM, AM terminal monitor display selection (Pr. 52, Pr. 54, Pr. 158, Pr. 170, Pr. 171, Pr. 268, Pr. 563, Pr. 564, Pr. 891)

Pr.51

page 181 Pr.55
page 254 **Pr.157**☐ page 149 Pr.159

page 362

The monitor to be displayed on the main screen of the operation panel (FR-DU07)/parameter unit (FR-PU04/FR-PU07) can be selected.

In addition, signals to be output from the terminal FM (pulse train output) and AM (analog output) can be selected.

Pr.159  page 362	Parameter Number	Name	Initial Value	Setting Range	Description
Pr.167  page 243  Pr.172  page 304  Pr.267	52*	DU/PU main display data selection	0 (output frequency)	0, 5 to 14, 17 to 20, 22 to 25, 32 to 35, 50 to 57, 100	Select the monitor to be displayed on the operation panel and parameter unit. Refer to the following table for monitor description.
page 282	54*	FM terminal function selection	1 (output	1 to 3, 5 to 14, 17, 18, 21, 24, 32	Select the monitor output to terminal FM.
Pr.270  Page 367	158*	AM terminal function selection	frequency)	to 34, 50, 52, 53, 70	Select the monitor output to terminal AM.
Pr.557				0	Set "0" to clear the watt-hour meter monitor.
Pr.569	170	Watt-hour meter clear	9999	10	Set the maximum value when monitoring from communication to 0 to 9999kWh.
Pr.889				9999	Set the maximum value when monitoring from communication to 0 to 65535kWh.
Pr.892  Page 274	171	Operation hour meter clear	9999	0, 9999	Set "0" in the parameter to clear the watt-hour monitor. Setting "9999" has no effect.
		Manitar desimal digita		0	Display as integral value
	268*	Monitor decimal digits selection	9999	1	Display in 0.1 increments
				9999	No function
	563	Energization time carrying-over times	0	0 to 65535 (reading only)	The numbers of cumulative energization time monitor exceeded 65535h is displayed. Reading only
	564	Operating time carrying- over times	0	0 to 65535 (reading only)	The numbers of operation time monitor exceeded 65535h is displayed. Reading only
	Cumulative power moni		9999	0 to 4	Set the number of times to shift the cumulative power monitor digit. Clamp the monitoring value at maximum.
	031	digit shifted times	3333	9999	No shift Clear the monitor value when it exceeds the maximum value.

<sup>\*</sup> The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in Pr. 77 Parameter write selection.

# (1) Monitor description list (Pr. 52)

- · Set the monitor to be displayed on the operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07) in Pr. 52 DU/PU main display data selection.
- PSet the monitor to be output to the terminal FM (pulse train output) in Pr. 54 FM terminal function selection.
- · Set the monitor to be output to the terminal AM (analog output (0 to 10VDC voltage output)) in Pr. 158 AM terminal function selection.
- · Refer to the following table and set the monitor to be displayed. (The signals marked × cannot be selected for monitoring)

		Pr. 52	Setting	Pr. 54 (FM)	Full-scale	
Types of Monitor	Increments	DU LED	DU LED PU main monitor		Value of the Terminal FM and AM	Description
Output frequency	0.01Hz	0/1	00	1	Pr. 55	Display the inverter output frequency.
Output current	0.01A/0.1A *7	0/1	0/100		Pr. 56	Display the inverter output current effective value.
Output voltage	0.1V	0/100		3	200V class: 400V 400V class: 800V	Display the inverter output voltage.
Alarm display		0/1	100	×		Display 8 past alarms individually.
Frequency setting	0.01Hz	5	*1	5	Pr. 55	Display the set frequency.

		Pr. 52 Setting		Pr. 54 (FM)	Full-scale	
Types of Monitor	Increments	DU LED	PU main monitor	Pr. 158 (AM) Setting	Value of the Terminal FM and AM	Description
Running speed	1(r/min)	6	*1	6	The value converted with the <i>Pr. 37</i> value from <i>Pr. 55</i>	Display the motor speed (depending on <i>Pr. 37</i> and <i>Pr. 144</i> settings, for details, refer to page 246)
Motor torque	0.1%	7	*1	7	Pr. 866	Display the motor torque in percentage on the assumption that the rated motor torque is 100% (0% is displayed during V/F control)
Converter output voltage	0.1V	8	*1	8	200V class: 400V 400V class: 800V	Display the DC bus voltage value.
Regenerative brake duty	0.1%	9	*1	9	Pr. 70	Brake duty set in Pr. 30 and Pr. 70
Electronic thermal relay function load factor	0.1%	10	*1	10	100%	Display the motor thermal cumulative value on the assumption that the thermal operation level is 100%.
Output current peak value	0.01A/0.1A *7	11	*1	11	Pr. 56	Retain the peak value of the output current monitor and display (clears at every start)
Converter output voltage peak value	0.1V	12	*1	12	200V class: 400V 400V class: 800V	Retain the peak value of the DC bus voltage value and display (clears at every start)
Input power	0.01kW/ 0.1kW +7	13	*1	13	Rated inverter power × 2	Display power on the inverter input side
Output power	0.01kW/ 0.1kW *7	14	*1	14	Rated inverter power × 2	Display power on the inverter output side
Load meter	0.1%	1	7	17	100%	Torque current is displayed in % on the assumption that the <i>Pr. 56</i> setting is 100%
Motor excitation current	0.01A/0.1A *7	1	8	18	Pr. 56	Display the excitation current of the motor
Position pulse *2	_	1	9	×	_	Display the number of pulses per rotation of the motor when orientation control is valid
Cumulative energization time	1h	2	0	×	_	Cumulative energization time since the inverter shipment is displayed. You can check the numbers of the monitor value exceeded 65535h with <i>Pr. 563</i> .
Reference voltage output	_	_	_	21	_	Terminal CA : 20mA is output Terminal AM: 10V is output
Orientation status *2	1	2	2	×	_	Display only when orientation control is valid (Refer to page 216)
Actual operation time *4, *5, *8	1h	2	3	×	_	Cumulative inverter running time is displayed. You can check the numbers of the monitor value exceeded 65535h with <i>Pr. 564</i> . Use <i>Pr. 171</i> to clear the value. ( <i>Refer to page 253</i> )
Motor load factor	0.1%	2	4	24	200%	On the assumption that the rated inverter current value is 100%, the output current value is displayed in %.  Monitor value = output current monitor value/ rated inverter current × 100 [%]
Cumulative power *8	0.01kW/ 0.1kW *6*7	2	5	×	_	Cumulative power amount is displayed according to the output power monitor. Use <i>Pr. 170</i> to clear the value. ( <i>Refer to page 253</i> )
Torque command	0.1%	3	2	32	Pr. 866	Display torque command value obtained from vector control
Torque current command	0.1%	3	3	33	Pr. 866	Display torque current command value
Motor output	0.01kW	3	4	34	Rated motor capacity	Multiply the motor speed by the then output torque and display the machine output of the motor shaft end
Feedback pulse	_	3	5	×	_	Display the number of pulses fed back from the encoder during one sampling (display during a stop).

<del></del>
11
- //
11

		Pr. 52	Setting	Pr. 54 (FM)	Full-scale	
Types of Monitor	Increments	DU LED	PU main monitor	Pr. 158 (AM) Setting	Value of the Terminal FM and AM	Description
Power saving effect	Variable according	50		50	Inverter capacity	Display energy saving effect monitor You can change the monitor to power saving,
Cumulative saving power	to parameters	5	51	×	_	power saving average value, charge display and % display using parameters. (For details, refer to page 275)
PID set point	0.1%	5	52	52	100%	B: 1 11 1 1 1 1
PID measured value	0.1%	5	i3	53	100%	Display the set point, measured value and deviation during PID control (For details, refer to page 359)
PID deviation	0.1%	54		×	_	
Input terminal status	_	55	*1	×	_	Display the input terminal ON/OFF status on the PU (Refer to <i>page 252</i> for DU display)
Output terminal status	_	33	*1	×	_	Display the output terminal ON/OFF status on the PU (Refer to <i>page 252</i> for DU display)
Option input terminal status	_	56	×	×	_	Display the input terminal ON/OFF status of the digital input option (FR-A7AX) on the DU (refer to page 252 for details)
Option output terminal status	_	57	×	×	_	Display the output terminal ON/OFF states of the digital output option (FR-A7AY) or relay output option (FR-A7AR) on the DU (refer to page 252 for details)
PLC function	0.1%	:	×	70	100%	Refer to the FR-A700 PLC function programming manual for details of the PLC function.


- \*1 Frequency setting to output terminal status on the PU main monitor are selected by "other monitor selection" of the parameter unit (FR-PU04, FR-PU07).
- \*2 Position pulse and orientation status function when used with an option (FR-A7AP) and orientation control is made valid. When orientation control is invalid, "0" remains displayed and these functions are invalid.
- \*3 Feedback pulse functions when the option (FR-A7AP) is used and vector control is performed.
- \*4 The cumulative energization time and actual operation time are accumulated from 0 to 65535 hours, then cleared, and accumulated again from 0. When the operation panel (FR-DU07) is used, the time is displayed up to 65.53 (65530h) on the assumption that 1h = 0.001, and thereafter, it is added up from 0.
- \*5 The actual operation time is not added up if the cumulative operation time before power supply-off is less than 1h.
- \*6 When using the parameter unit (FR-PU04/FR-PU07), "kW" is displayed.
- \*7 The setting depends on the inverter capacity. (FR-A720-02150(FR-A740-01100) or less / FR-A720-02880(FR-A740-01440) or more)
- \*8 Since the panel display of the operation panel (FR-DU07) is 4 digits in length, the monitor value of more than "9999" is displayed "----".

# REMARKS


- By setting "0" in Pr. 52, the monitoring of output frequency to alarm display can be selected in sequence by (SET)
- When the operation panel (FR-DU07) is used, the displayed units are Hz, V and A only and the others are not displayed.
- The monitor set in *Pr. 52* is displayed in the third monitor position. (The output voltage monitor is changed.)

# Initial value

\* The monitor displayed at powering on is the first monitor. Display the monitor you want to display on the first monitor and hold down

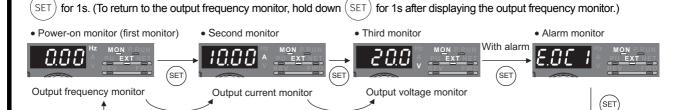

Example)When *Pr. 52* is set to "20" (cumulative energization time), the monitor is displayed on the operation panel as described below.

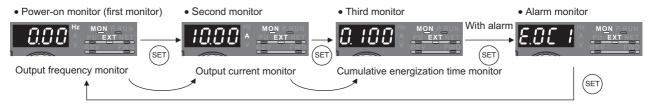

# (2) Display set frequency during stop (*Pr. 52*)

 When Pr. 52 is set to "100", the set frequency monitor is displayed during a stop and the output frequency monitor is displayed during operation. (LED of Hz flickers during stop and is lit during running.)

	Pr. 52					
	0	100				
	During running/stop	During stop	During running			
Output frequency	Output frequency	Set frequency	Output frequency			
Output current	Output current					
Output voltage	Output voltage					
Alarm display	Alarm display					

# **REMARKS**

- · During an error, the output frequency at error occurrence appears.
- · During MRS, the values displayed are the same as during a stop.
- During offline auto tuning, the tuning status monitor has priority.




# (3) Operation panel (FR-DU07) I/O terminal monitor (Pr. 52)

- · When Pr. 52 is set to any of "55 to 57", the I/O terminal states can be monitored on the operation panel (FR-DU07).
- · The I/O terminal monitor is displayed on the third monitor.
- The LED is on when the terminal is on, and the LED is off when the terminal is off. The center line of LED is always on.


Pr. 52 Setting	Monitor Description					
55	Display the I/O and output terminal ON/OFF states of the inverter unit.					
56 *	Display the input terminal ON/OFF states of the digital input option (FR-A7AX).					
57 *	Display the output terminal ON/OFF states of the digital output option (FR-A7AY) or relay output option (FR-A7AR).					

<sup>\*</sup> You can set "56" or "57" even if the option is not fitted. When the option is not fitted, the monitor displays are all off.


· On the unit I/O terminal monitor (*Pr. 52* = "55"), the upper LEDs denote the input terminal states and the lower the output terminal states.

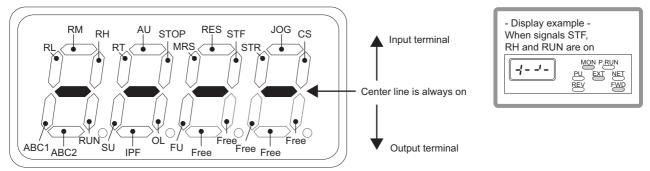

· On the input option terminal monitor (*Pr. 52*= "56"), the decimal point LED of the first digit LED is on.

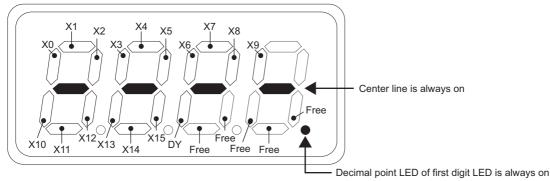

· On the input option terminal monitor (*Pr. 52*= "57"), the decimal point LED of the second digit LED is on.

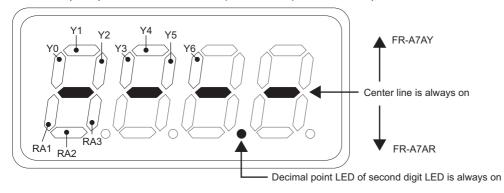

# (4) Cumulative power monitor and clear (Pr. 170, Pr. 891)

- On the cumulative power monitor (Pr. 52 = "25"), the output power monitor value is added up and is updated in 1h increments.
- The operation panel (FR-DU07), parameter unit (FR-PU04, FR-PU07) and communication (RS-485 communication, communication option) display increments and display ranges are as indicated below.

Operation P	anel *1	Parameter Ur	nit *2		Communication	
Range	Increments	Range	Increments	R	ange	Increments
Range	lincrements	Kange	Ilicielliellis	<i>Pr. 170</i> = <b>10</b>	<i>Pr. 170</i> = 9999	Increments
0 to 99.99kWh	0.01kWh	0 to 999.99kWh	0.01kWh		0 to 0550514Mb	
100.0 to 999.9kWh	0.1kWh	1000.0 to 9999.9kWh	0.1kWh	0 to 9999kWh	0 to 65535kWh (initial value)	1kWh
1000 to 9999kWh	1kWh	10000 to 99999kWh	1kWh		(iiiidi valac)	

Power is measured in the range 0 to 9999.99kWh, and displayed in 4 digits.

- The monitor data digit can be shifted to the right by the number of *Pr. 891* settings.
  - For example, if the cumulative power value is 1278.56kWh when Pr. 891 = "2", the PU/DU display is 12.78 (display in 100kWh increments) and the communication data is 12.
- · If the maximum value is exceeded at Pr. 891 = "0 to 4", the power is clamped at the maximum value, indicating that a digit shift is necessary. If the maximum value is exceeded at Pr. 891 = "9999", the power returns to 0 and is recounted.

If the maximum value is exceeded at Pr. 891 = "9999", the power returns to 0 and is recounted.

· Writing "0" in *Pr. 170* clears the cumulative power monitor.

#### **REMARKS**

If "0" is written in Pr. 170 and Pr. 170 is read again, "9999" or "10" is displayed.

# (5) Cumulative energization time and actual operation time monitor (Pr. 171, Pr. 563, Pr. 564)

- · On the cumulative energization time monitor (Pr. 52 = "20"), the inverter running time is added up every hour.
- · On the actual operation time monitor (Pr. 52 = "23"), the inverter running time is added up every hour. (Time is not added up during a stop.)
- · If the numbers of monitor value exceeds 65535, it is added up from 0. You can check the numbers of cumulative energization time monitor exceeded 65535h with Pr. 563 and the numbers of actual operation time monitor exceeded 65535h with Pr. 564.
- · Writing "0" in Pr. 171 clears the actual operation time monitor. (Energization time monitor can not be cleared.)

## **REMARKS**

- The actual operation time is not added up unless the inverter is operated one or more hours continuously.
- If "0" is written in Pr. 171 and Pr. 171 is read again, "9999" is always displayed. Setting "9999" does not clear the actual operation time meter.

# (6) You can select the decimal digits of the monitor (Pr. 268)

· As the operation panel (FR-DU07) display is 4 digits long, the decimal places may vary at analog input, etc. The decimal places can be hidden by selecting the decimal digits.

In such a case, the decimal digits can be selected by Pr. 268.

Pr. 268 Setting	Description
9999 (initial value)	No function
0	When 1 or 2 decimal places (0.1 increments or 0.01 increments) are monitored, the decimal places are dropped and the monitor displays an integer value (1 increments). The monitor value of 0.99 or less is displayed as 0.
1	When 2 decimal places (0.01 increments) are monitored, the 0.01 decimal place is dropped and the monitor displays the first decimal place (0.1 increments).  When the monitor display digit is originally in 1 increments, it is displayed unchanged in 1 increments.

#### **REMARKS**

The number of display digits on the cumulative energization time (Pr. 52 = "20"), actual operation time (Pr. 52 = "23"), cumulative power (Pr. 52 = "25") or cumulative saving power monitor (Pr. 52 = "51") does not change.

#### ◆ Parameters referred to ◆

Pr. 37 Speed display, Pr. 144 speed setting switchover Refer to page 246

Pr. 55 Frequency monitoring reference, Pr. 56 Current monitoring reference, Pr. 866 Torque monitoring reference 🖼 Refer to page 254

Pr. 291 Pulse train I/O selection Refer to page 254

When the monitor value exceeds "99.99", a carry occurs, e.g. "1000.0", so the value is displayed in 0.1kWh increments. Power is measured in the range 0 to 99999.99.99kWh, and displayed in 5 digits.

When the monitor value exceeds "999.99", a carry occurs, e.g. "1000.0", so the value is displayed in 0.1kWh increments.

Pr.54

page 248

**Pr.57**☐ page 260

**Pr.288 Pr.288 Pr.2888 <b>Pr.2888 Pr.2888 <b>Pr.2888 Pr.2888 Pr.2888** 

Pr.292

Pr.865

page 241

Pr.868

page 149



(Pr. 55, Pr. 56, Pr. 866, Pr. 867)

Two types of monitor output, pulse train output from the terminal FM and analog output from the terminal AM, are available. In addition, pulse train output by voltage output and by open collector output can be selected for terminal FM.

Set the reference of the signal output from terminal FM and AM.


Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)			Description		
55 *	Frequency monitoring reference	60Hz	0 to 4	00Hz		value to output the output r value to terminal FM and AM.		
56 *	Current monitoring reference	Rated inverter output current	02150 (01100) or less 02880 (01440) or less	0 to 500A 0 to 3600A		value to output the output alue to terminal FM and AM.		
			0		Pulse train input	Pulse train output		
					Terminal JOG	FM output		
			1		Pulse train input	FM output		
			1	0	Terminal JOG	High speed pulse train output (50%Duty)		
204	D. In a desire UO and a disc		1	1	Pulse train input	High speed pulse train output (50%Duty)		
291	Pulse train I/O selection	0	20		Terminal JOG	High speed pulse train output (ON width is always same)		
			21		Pulse train input	High speed pulse train output (ON width is always same)		
			100		Pulse train input	High speed pulse train output (ON width is always same) The inverter outputs the signal input as pulse train as is		
866 *	Torque monitoring reference	150%	0 to 400%		0 to 400%			value to output the torque erminal FM and AM.
867	AM output filter	0.01s	0 to	0 to 5s Set the output filter of terminal AM.		er of terminal AM.		

<sup>\*</sup> The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.


# (1) Pulse train output of the terminal FM (Pr. 291)

• Two types of pulse train can be output to the terminal FM.

# FM output circuit

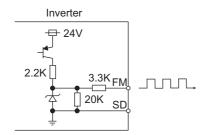

- When Pr. 291 Pulse train I/O selection = "0 (initial value) or 1", FM output is selected and pulse train with maximum of 8VDC 2400pulses/s is output.
  - The pulse width can be adjusted by calibration  $parameter\ C0$   $(Pr.\ 900)\ FM\ terminal\ calibration$  using the operation panel and parameter unit.
- Output frequency, etc. of the inverter can be indicated by connecting a DC ammeter of full-scale 1mA, digital indicator, etc.

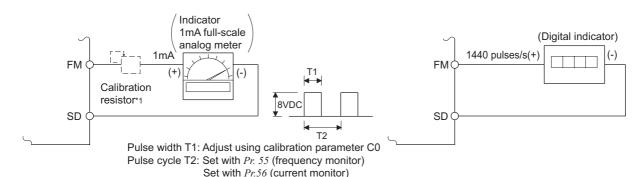



- \*1 Not needed when the operation panel (FR-DU07) or parameter unit (FR-PU04/FR-PU07) is used for calibration.


  This resistor is used when calibration must be made near the frequency meter for such a reason as a remote frequency meter.

  Note that the needle of the frequency meter may not deflect to full-scale when the calibration resistor is connected. In this case, use this resistor and operation panel or parameter unit together.
- \*2 The initial setting is 1mA full-scale and 1440 pulse/s teminal FM frequency at 60Hz.


# High speed pulse train output circuit (connection example with a pulse counter)

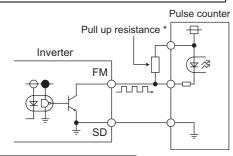

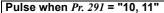

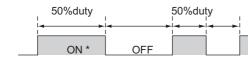

## Pulse when *Pr. 291* = "20, 21, 100"

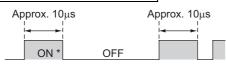

- When *Pr. 291 Pulse train I/O selection* = "10, 11, 20, 21, 100", high speed pulse train is output by open collector output. Pulse train of maximum of 55k pulses/s is output.
  - Two types of pulse width, 50% Duty and fixed ON width, are available. Adjustment by calibration *parameter C0 (Pr. 900) FM terminal calibration* can not be performed.
- \* When the output wiring length is long, a pulse shape is deformed due to the stray capacitances of the wiring and output pulse can not be recognized. If the wiring length is long, connect the open collector output signal and the power supply using an external pull up resistance.
  - Check specifications of a pulse counter for a resistance value to pull up. Select an appropriate resistance value so that the load current is 80mA or less.
- When Pr. 291 = "10, 11", the pulse cycle is 50% Duty (on width and off width are the same).
- When *Pr. 291* = "20, 21, 100", fixed on width of pulse is output (approx. 10µs).
- When the setting value is "100", the pulse train from the pulse train input (terminal JOG) is output as is. Use this value for synchronous speed operation of multiple inverters. (Refer to *page 371*)
- \* ON indicates that the open collector output transistor is on.


# • High speed pulse train output specifications

Item	Specifications
Output method	NPN open collector output
Voltage between a collector and emitter	30V (max)
Maximum permissible load current	80mA
Output pulse rate	0 to 55kpps *
Output resolution	3pps (excluding a jitter)

<sup>\*</sup> The output pulse rate is 50kpps when a monitor output value is 100%.


#### CAUTION


- · Input specifications of terminal JOG (pulse train input or contact input) can be selected with *Pr. 291*. Change the setting value using care not to change input specifications of terminal JOG.
- After changing a setting value of *Pr. 291*, connect a meter between terminal FM and SD. Take note that a voltage is not applied to terminal FM when FM output (voltage output) pulse train is selected.
- · The FM output of the inverter can not be connected to devices which have source logic type pulse input.
- When high speed pulse train output (Pr. 291 = "10, 11, 20, 21, 100") is selected, performing parameter all clear returns the Pr. 291 setting to the initial value of "0", changing the terminal FM output from high speed pulse train output to FM output (voltage output).

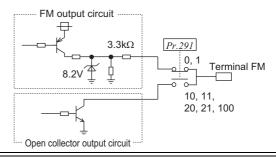

# (2) Frequency monitoring reference (Pr. 55)


- Set the frequency to be based when the frequency is selected as the output of the terminal FM and terminal AM.
- Set the inverter output frequency (set frequency) at which the pulse speed of the terminal FM is 1440 pulses/s (50K pulses/s). The pulse speed and inverter output frequency are proportional to each other. Note that the maximum pulse train output is 2400 pulses/s (55K pulses/s).
- Set the reference value of the frequency at which the output voltage of the terminal AM is 10VDC.
- The output voltage and frequency are proportional to each other. (The maximum output voltage is 10VDC.)

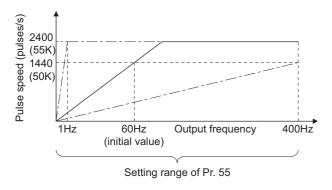


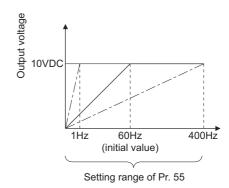

# (3) Current monitoring reference (Pr. 56)


- Set the current at which the pulse speed of the terminal FM is 1440 pulses/s (50K pulses/s).
- The pulse speed and current value are proportional to each other. (The maximum pulse train output is 2400 pulses/s (55K pulses/s).)
- Set the reference value of the current at which the output voltage of the terminal AM is 10VDC.
- The output voltage and current value are proportional to each other. (The maximum output voltage is 10VDC.)

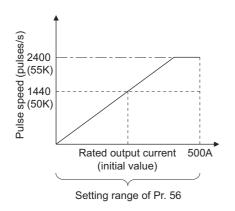


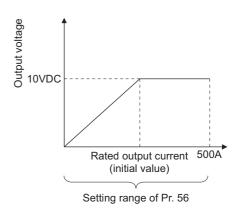

# (4) Reference of torque monitor (Pr. 866)

- Set the torque at which the pulse speed of the terminal FM is 1440 pulses/s (50k pulses/s).
- Pulse speed and torque monitor value are proportional. (The maximum pulse train output is 2400 pulses/s (55k pulses/s).
- Set the torque reference value at which the output voltage of the terminal AM is 10VDC.
- Output voltage and torque monitor value are proportional. (The maximum output voltage is 10VDC.)

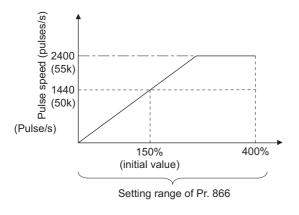

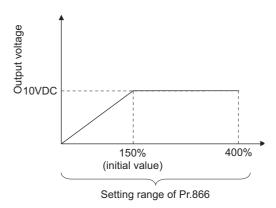

# (5) Terminal AM response adjustment (Pr. 867)

- Using Pr. 867, the output voltage response of the terminal AM can be adjusted within the range 0 to 5s.
- Increasing the setting stabilizes the terminal AM output more but reduces the response level. (Setting "0" sets the response level to 4ms)

# 4.16.4 Terminal FM, AM calibration (Calibration parameter C0 (Pr. 900), C1 (Pr. 901), C8 (Pr. 930) to C11 (Pr. 931))

By using the operation panel or parameter unit, you can calibrate terminal FM and terminal AM to full scale deflection.




Parameter Number	Name	Initial Value	Setting Range	Description (Refer to page 209)
C0(900)	FM terminal calibration	_	_	Calibrate the scale of the meter connected to terminal FM.
C1(901)	AM terminal calibration	_		Calibrate the scale of the analog meter connected to terminal AM.

<sup>1</sup> The parameter number in parentheses is the one for use with the parameter unit (FR-PU04/FR-PU07).

# (1) FM terminal calibration ( $C\theta(Pr. 900)$ )

- The terminal FM is preset to output pulses. By setting the *Calibration parameter C0 (Pr. 900)*, the meter connected to the inverter can be calibrated by parameter setting without use of a calibration resistor.
- · Using the pulse train output of the terminal FM, a digital display can be provided by a digital counter. The monitor value is 1440 pulses/s output at the full-scale value of the table on the previous page (*Pr. 54 FM terminal function selection*).

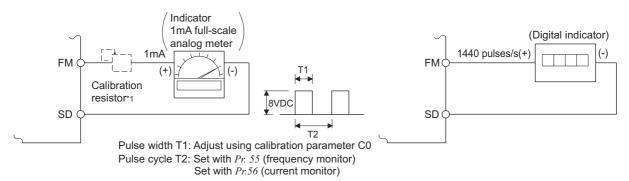

- Calibrate the terminal FM in the following procedure.
  - 1) Connect an indicator (frequency meter) across the terminals FM-SD of the inverter. (Note the polarity. The terminal FM is positive.)
  - 2) When a calibration resistor has already been connected, adjust the resistance to "0" or remove the resistor.
  - 3) Refer to the output signal list (page 248) and set Pr. 54. When you selected the running frequency or inverter output current as the output signal, preset the running frequency or current value, at which the output signal will be 1440 pulses/s, to Pr. 55 Frequency monitoring reference or Pr. 56 Current monitoring reference. At 1440 pulses/s, the meter generally deflects to full-scale.

# **REMARKS**

- · When outputting such an item as the output current, which cannot reach a 100% value easily by operation, set *Pr. 54* to "21" (reference voltage output) and make calibration. 1440 pulses/s are output from the terminal FM.
- The wiring length of the terminal FM should be 200m maximum.


#### CAUTION

- The initial value of *the calibration parameter C0 (Pr. 900)* is set to 1mA full-scale and 1440 pulses/s FM output frequency at 60Hz. The maximum pulse train output of terminal FM is 2400 pulses/s.
- When a frequency meter is connected to across terminals FM-SD to monitor the running frequency, the FM terminal output is filled to capacity at the initial setting if the maximum output frequency reaches or exceeds 100Hz. In this case, the *Pr. 55* setting must be changed to the maximum frequency.
- · When *Pr. 291 Pulse train I/O selection* = "10, 11, 20, 21, 100" (high speed pulse train output), calibration using *calibration* parameter *C0* (*Pr. 900*) can not be made.

<sup>\*2</sup> The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

# a/ 🥌

# (2) AM terminal calibration (C1(Pr. 901))

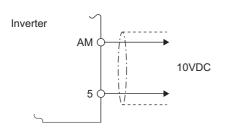

 Terminal AM is factory-set to provide a 10VDC output in the full-scale status of the corresponding monitor item. *Calibration parameter C1 (Pr. 901)* allows the output voltage ratios (gains) to be adjusted according to the meter scale. Note that the maximum output voltage is 10VDC.


- · Calibrate the AM terminal in the following procedure.
  - 1) Connect a 0-10VDC meter (frequency meter) to across inverter terminals AM-5. (Note the polarity. The terminal AM is positive.)
  - 2) Refer to the monitor description list (page 248) and set Pr. 158.

    When you selected the running frequency, inverter output current or the like as monitor, preset in Pr. 55 or Pr. 56 the running frequency or current value at which the output signal will be 10V.
  - 3) When outputting the item that cannot achieve a 100% value easily by operation, e.g. output current, set "21" (reference voltage output) in *Pr. 158* and perform the following operation. After that, set "2" (output current, for example) in *Pr. 158*.

# **REMARKS**

When outputting such an item as the output current, which cannot reach a 100% value easily by operation, set *Pr. 54* to "21" (reference voltage output) and make calibration. 10VDC is output from the terminal AM.

# (3) How to calibrate the terminal FM when using the operation panel (FR-DU07)

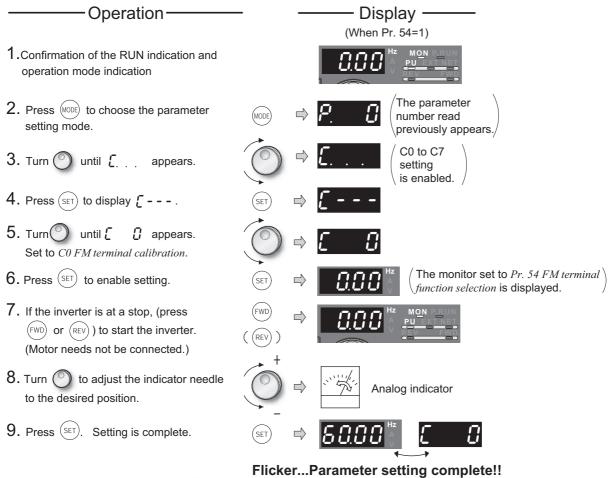

### can read another narameter

- By turning , you can read another parameter.
- Press (SET) to return to the [ - indication (step 4).
- Press (SET) twice to show the next parameter ( Pr. [].).

# **REMARKS**

- · Calibration can also be made for external operation. Set the frequency in external operation mode, and make calibration in the above procedure.
- · Calibration can be made even during operation.
- For the operation procedure using the parameter unit (FR-PU04/FR-PU07), refer to the parameter unit instruction manual.






Purpose	Parameter t	Refer to Page	
At instantaneous power failure occurrence, restart inverter without stopping motor	Automatic restart operation after instantaneous power failure/flying start	Pr. 57, Pr. 58, Pr. 162 to Pr. 165, Pr. 299, Pr. 611	260
When undervoltage or a power failure occurs, the inverter can be decelerated to a stop.	Power failure-time deceleration-to-stop function	Pr. 261 to Pr. 266, Pr. 294	265

# 4.17.1 Automatic restart after instantaneous power failure/flying start (Pr. 57, Pr. 58, Pr. 162 to Pr. 165, Pr. 299, Pr. 611)

You can restart the inverter without stopping the motor in the following cases.

- $\cdot\,\,$  when commercial power supply operation is switched to inverter operation
- · when power comes back on after an instantaneous power failure
- when motor is coasting at start

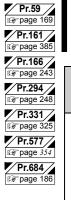

Pr.56
page 254

Parameter Number	Name	Initial Val 200V cla (400V cla	SS	Setting Range 200V class (400V class)		Description	
Restart coasting		0000		0		FR-A720-00080 (FR-A740-00040) or less 0.5s, FR-A720-00110 to 00330 (FR-A740-00060 to 00170) or less 1s, FR-A720-00460 to 02150 (FR-A740-00230 to 01100) or less 3.0s, FR-A720-02880 (FR-A740-01440) or more 5.0s, The above times are coasting time.	
57	time	9999		02150 (01100) or less	0.1 to 5s	Set the waiting time for inverter-triggered restart after	
				02880 (01440) or more	0.1 to 30s	an instantaneous power failure.	
				9999		No restart	
58	Restart cushion time	1s		0 to 60s		Set a voltage starting time at restart.	
		start after stantaneous 0 wer failure		0		With frequency search	
	Automatic			1		Without frequency search (reduced voltage system)	
162	instantaneous			2		Encoder detection frequency search	
	power failure			10		Frequency search at every start	
	selection			11		Reduced voltage system at every start	
				12		Encoder detection frequency search at every start	
163	First cushion time for restart	0s		0 to 20	s	Set a voltage starting time at restart.	
164	First cushion voltage for restart	0%		0 to 100%		Consider using these parameters according to the load (moment of inertia, torque) magnitude.	
165	Stall prevention operation level for restart	150%*1		0 to 220%*1		Consider the rated inverter current as 100% and set the stall prevention operation level during restart operation.	
611	Acceleration time at a restart	02150 (01100) or less 02880 (01440) or more	5s 15s	0 to 3600s, 9999		Set the acceleration time to reach the set frequency at a restart.  Acceleration time for restart is the normal acceleration time (e.g. <i>Pr.</i> 7) when "9999" is set.	

<sup>\*1</sup> When  $Pr. 570 Multiple \ rating \ setting \ \neq$  "2", performing parameter clear changes the initial value and setting range. (Refer to page 154.)



# (1) Automatic restart after instantaneous power failure operation

· When instantaneous power failure protection (E.IPF) and undervotage protection (E.UVT) are activated, the inverter output is shut off. (Refer to page 404 for E.IPF and E.UVT.)

When automatic restart after instantaneous power failure operation is set, the motor can be restarted if power is restored after an instantaneous power failure or undervoltage is corrected. (E.IPF and E.UVT are not activated.)

- When E.IPF and E.UVT are activated, instantaneous power failure/under voltage signal (IPF) is output.
- The IPF signal is assigned to the terminal IPF in the initial setting. The IPF signal can also be assigned to the other terminal by setting "2 (positive logic) or 102 (negative logic)" to any of *Pr. 190 to Pr. 196 (output terminal function selection)*.

## ■When Pr. 162 = 0, 10 (with frequency search) V/F control, advanced magnetic flux vector control Instaneous (power failure) time Power supply (R/L1, S/L2, T/L3) Motor speed N (r/min) Inverter output frequency f(Hz) Inverter output voltage E(V) Restart cushion Speed time (Pr.58 setting) Coasting (time (Pr.57) detection time Acceleration time The output shut off timing differs at a restart according to the load condition. (Pr.611 setting) Real sensorless vector control Instaneous (power failure) time Power supply (R/L1, S/L2, T/L3) Motor speed N

Speed

time

detection

Acceleration time

at a restart

(Pr.611 setting)

(r/min)

E(V)

Inverter output

frequency f(Hz)

output voltage

Coasting

time (Pr.57

The output shut off timing differs according to the load condition.

# (2) Automatic restart operation selection (Pr. 162, Pr. 299)

#### · With frequency search

When "0 (initial value), 10" is set in *Pr. 162*, the inverter smoothly starts after detecting the motor speed upon power restoration.

- During reverse rotation, the inverter can be restarted smoothly as the direction of rotation is detected.
- You can select whether to make rotation direction detection or not with Pr. 299 Rotation direction detection selection at restarting.

When capacities of the motor and inverter differ, set "0" (without rotation direction detection) in *Pr. 299*.


Pr.299 Setting	i	Pr. 78 Setting				
Fr.299 Setting	0	1	2			
9999	0	×	×			
0 (initial value)	×	×	×			
1	0	0	0			


O:with rotation direction detection ×:without rotation direction detection

## REMARKS

- When the inverter capacity is two rank or more larger than the motor capacity, the inverter may not start due to overcurrent (OCT) alarm.
- If two or more motors are connected to one inverter, the inverter functions abnormally. (The inverter does not start smoothly.)
- Since the DC injection brake is operated instantaneously when the speed is detected at a restart, the speed may reduce if the inertia moment (J) of the load is small.
- When reverse rotation is detected when *Pr. 78*="1" (reverse rotation disabled), the rotation direction is changed to forward rotation after decelerates in reverse rotation when the start command is forward rotation. The inverter will not start when the start command is reverse rotation.



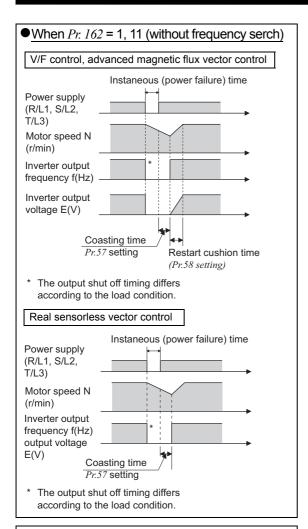

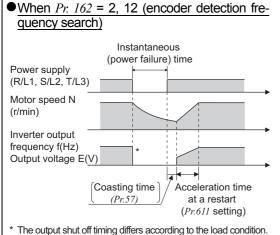

## Without frequency search

When Pr. 162 = "1" or "11", automatic restart operation is performed in a reduced voltage system, where the voltage is gradually risen with the output frequency unchanged from prior to an instantaneous power failure independently of the coasting speed of the motor. For  $Pr. 117 \ Real \ sensorless \ vector \ control$ , output ,frequency and voltage before instantaneous power failure are output. (Pr. 58 is made invalid.)

## **REMARKS**

 This system stores the output frequency prior to an instantaneous power failure and increases the voltage. Therefore, if the instantaneous power failure time exceeds 0.2s, the inverter starts at Pr. 13 Starting frequency (initial value = 0.5Hz) since the stored output frequency cannot be retained.

# Encoder detection frequency search

- · When "2 or 12" is set in *Pr. 162* under encoder feedback control, the motor starts at the motor speed and in the rotation direction detected from the encoder at power restoration.
- Encoder detection frequency search is performed regardless of the *Pr. 162* setting under vector control.
- · The Pr.~58 and  $\check{Pr}.~299$  settings are invalid for encoder detection frequency search.

## **REMARKS**

· When encoder feedback control is invalid, setting "2 or 12" in *Pr. 162* enables frequency search (*Pr. 162* = "0, 10").

# · Restart operation at every start

When  $Pr.\ 162$  = "10, 11 or 12", automatic restart operation is also performed every start, in addition to the automatic restart after instantaneous power failure. When  $Pr.\ 162$  = "0" or "2", automatic restart operation is performed at the first start after power supply-on, but the inverter starts at the starting frequency at the second time or later.

# (3) Restart coasting time (Pr. 57)


- · Coasting time is the time from when the motor speed is detected until automatic restart control is started.
- Set *Pr.* 57 to "0" to perform automatic restart operation. The coasting time is automatically set to the value below. Generally this setting will pose no problems.

200V class	00080 or less	00110 to 00330	00460 to 02150	02880 or more
400V class	00040 or less	00060 to 00170	00230 to 01100	01440 or more
Coasting time	0.5s	1s	3s	5s

Operation may not be performed well depending on the load inertia moment (J) magnitude or operation frequency. Adjust the coasting time between 0.1s and 5s according to the load specifications.

# (4) Restart cushion time (Pr. 58)

- · Cushion time is the length of time taken to raise the voltage appropriate to the detected motor speed (output frequency prior to instantaneous power failure when Pr: 162 = "1" or "11").
- Normally the initial value need not be changed for operation, but adjust it according to the load inertia moment (J) or torque magnitude.
- · Pr. 58 is invalid during encoder feedback control (Pr. 162 = "2, 12"), real sensorless vector control or vector control.

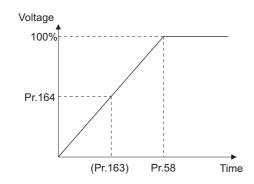

# (5) Automatic restart operation adjustment (*Pr. 163 to Pr. 165, Pr. 611*)


- · Using *Pr. 163* and *Pr. 164*, you can adjust the voltage rise time at a restart as shown on the left.
- Using Pr. 165, you can set the stall prevention operation level at a restart.
- · Using *Pr. 611*, you can set the acceleration time until the set frequency is reached after automatic restart operation is performed besides the normal acceleration time.

### REMARKS

If the setting of *Pr. 21 Acceleration/deceleration time increments* is changed, the setting increments of *Pr. 611* does not change.

# (6) Connection (CS signal)

- When the automatic restart after instantaneous power failure selection signal (CS) is turned on, automatic restart operation is enabled.
- When Pr. 57 is set to other than "9999" (automatic restart operation enabled), the inverter will not operate if used with the CS signal remained off.

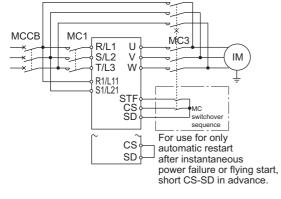

MC2

## REMARKS

The CS signal is assigned to the terminal CS in the initial setting. By setting "6" in any of *Pr. 178 to Pr. 189 (input terminal function selection)*, you can assign the CS signal to the other terminal.

#### = CAUTION =

- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.
- When automatic restart operation is selected, undervotage protection (E.UVT) and instantaneous power failure protection (E.IPF) among the alarm output signals will not be provided at occurrence of an instantaneous power failure.
- The SU and FU signals are not output during a restart. They are output after the restart cushion time has elapsed.
- Automatic restart operation will also be performed after a reset made by an inverter reset is canceled or when a retry is made by the retry function.
- · Automatic restart after instantaneous power failure function is invalid when load torque high speed frequency control (*Pr. 270* = "2, 3") is set.



↑ Provide mechanical interlocks for MC1 and MC2. The inverter will be damaged if the power supply is input to the inverter output section.

⚠ When automatic restart after instantaneous power failure has been selected, the motor and machine will start suddenly (after the reset time has elapsed) after occurrence of an instantaneous power failure. Stay away from the motor and machine. When you have selected automatic restart after instantaneous power failure function, apply in easily visible places the CAUTION stickers supplied to the installation guideline.

#### ◆ Parameters referred to ◆

Pr. 7 Acceleration time, Pr. 21 Acceleration/deceleration time increments Refer to page 172

Pr. 13 Starting frequency Refer to page 174

Pr. 65, Pr. 67 to Pr. 69 Retry function Refer to page 268

Pr. 78 Reverse rotation prevention selection Refer to page 304


Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227


# 4.17.2 Power failure-time deceleration-to-stop function (Pr. 261 to Pr. 266, Pr. 294)

When a power failure or undervoltage occurs, the inverter can be decelerated to a stop or can be decelerated and re-accelerated to the set frequency.

Parameter Number	Name	Initial Value	Setting Range		Description
				0	Coasting to stop When undervoltage or power failure occurs, the inverter output is shut off.
	Power failure stop		1	Without under voltage avoidance	When undervoltage or a power failure occurs, the
261	selection	0	11	With under voltage avoidance	inverter can be decelerated to a stop.
			2	Without under voltage avoidance	When undervoltage or a power failure occurs, the inverter can be decelerated to a stop.
			12	With under voltage avoidance	If power is restored during a power failure, the inverter accelerates again.
262	Subtracted frequency at deceleration start	3Hz	0 to 20Hz		Normally operation can be performed with the initial value unchanged. But adjust the frequency according to the magnitude of the load specifications (moment of inertia, torque).
263	Subtraction starting frequency		0 to 120Hz		When output frequency ≥ Pr. 263  Decelerate from the speed obtained from output frequency minus Pr. 262.  When output frequency < Pr. 263  Decelerate from output frequency
			9999		Decelerate from the speed obtained from output frequency minus <i>Pr.</i> 262.
264	Power-failure deceleration time 1	5s		0 to 3600/ 360s *	Set a deceleration slope down to the frequency set in <i>Pr.</i> 266.
265	Power-failure deceleration time 2	9999		0 to 3600/ 360s *	Set a deceleration slope below the frequency set in <i>Pr. 266</i> .
				9999	Same slope as in Pr. 264
266	Power failure deceleration time switchover frequency	60Hz		0 to 400Hz	Set the frequency at which the deceleration slope is switched from the <i>Pr. 264</i> setting to the <i>Pr. 265</i> setting.
294	UV avoidance voltage gain	100%		0 to 200%	Adjust the response level during undervoltage avoidance operation. A larger setting will improve responsiveness to the bus voltage change. Since the regeneration amount is large when the inertia is large, decrease the setting value.

When the setting of *Pr. 21 Acceleration/deceleration time increments* is "0" (initial value), the setting range is "0 to 3600s" and the setting increments are "0.1s", and when the setting is "1", the setting range is "0 to 360s" and the setting increments are "0.01s"

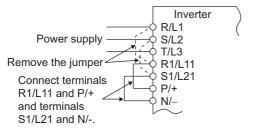

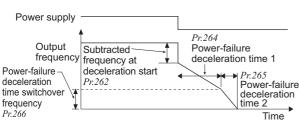


# (1) Connection and parameter setting


- Remove the jumpers across terminals R/L1-R1/L11 and across terminals S/L2-S1/L21, and connect terminals R1/L11 and P/+ and terminals S1/L21 and N/-.
- · When *Pr. 261* is set to "1" or "2", the inverter decelerates to a stop if an undervoltage or power failure occurs.

# (2) Operation outline of deceleration to stop at power failure

- · If an undervoltage or power failure occurs, the output frequency is dropped by the frequency set in Pr. 262.
- Deceleration is made in the deceleration time set in *Pr. 264*. (The deceleration time setting is the time required from *Pr. 20 Acceleration/deceleration reference frequency* to a stop.)
- When the frequency is low and enough regeneration energy is not provided, for example, the deceleration time (slope) from Pr. 265 to a stop can be changed.

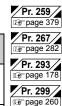




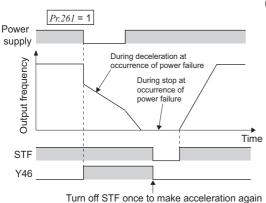

# (3) Power failure stop mode (Pr. 261 = "1, 11")


 If power is restored during power failure deceleration, deceleration to a stop is continued and the inverter remains stopped. To restart, turn off the start signal once, then turn it on again.

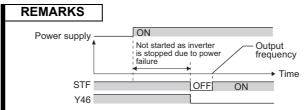


- $\cdot$  When automatic restart after instantaneous power failure is selected ( $Pr.57 \neq$  "9999"), deceleration to stop function is invalid and the restart after instantaneous power failure operation is performed.
- After a power failure stop, the inverter will not start if the power supply is switched on with the start signal (STF/STR) input. After switching on the power supply, turn off the start signal once and then on again to make a start.

# (4) Original operation continuation at instantaneous power failure function (Pr. 261 = "2, 12")

- · When power is restored during deceleration after an instantaneous power failure, acceleration is made again up to the set frequency.
- · When this function is used in combination with the automatic restart after instantaneous power failure operation, deceleration can be made at a power failure and acceleration can be made again after power restoration. When power is restored after a stop by deceleration at an instantaneous power failure, automatic restart operation is performed if automatic restart after instantaneous power failure has been selected (*Pr.* 57 ≠ "9999")

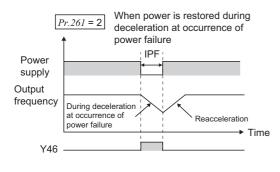

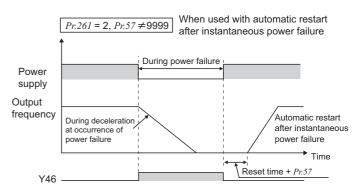

# (5) Undervoltage avoidance function (*Pr. 261* = "11, 12", *Pr. 294*)

- · When *Pr. 261* = "11, 12", the deceleration time is automatically adjusted (shortened) to prevent undervoltage from occuring during deceleration at an instantaneous power failure.
- · Adjust the slope of frequency decrease and response level with *Pr. 294*. A larger setting will improve responsiveness to the bus voltage.
  - Since the regeneration amount is large when the inertia is large, decrease the setting value.

## **REMARKS**

Undervoltage avoidance function is invalid during torque control by real sensorless vector control. When Pr. 261 = "11 (12)", the inverter operates in the same manner as when "1 (2)" is set in Pr. 261.



- · After deceleration at an instantaneous power failure, inverter can not start even if the start command is given. In this case, check the power failure deceleration signal (Y46 signal). (at occurrence of input phase failure protection (E.ILF), etc.)
- The Y46 signal is on during deceleration at an instantaneous power failure or during a stop after deceleration at an instantaneous power failure.
- For the Y46 signal, set "46 (positive logic)" or "146 (negative logic)" in any of *Pr. 190 to Pr. 196 (output terminal function selection)* to assign the function.

#### **REMARKS**

When Pr.~872 = "1" (input phase failure protection provided) and  $Pr.~261 \neq$  "0" (power failure stop function valid), input phase failure protection (E.ILF) is not provided but power-failure deceleration is made.

#### CAUTION

- · When Pr. 30 Regenerative function selection = "2" (FR-HC, MT-HC, FR-CV is used), the power failure deceleration function is invalid
- · When the (output frequency *Pr. 262*) at undervoltage or power failure occurrence is negative, the calculation result is regarded as 0Hz. (DC injection brake operation is performed without deceleration).
- During a stop or error, the power failure stop selection is not performed.
- · Changing the terminal assignment using *Pr. 190 to Pr. 196 (output terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.



⚠ If power-failure deceleration operation is set, some loads may cause the inverter to trip and the motor to coast. The motor will coast if enough regenerative energy is given from the motor.

#### ◆ Parameters referred to ◆

Pr. 12 DC injection brake operation voltage Refer to page 199

Pr. 20 Acceleration/deceleration reference frequency, Pr. 21 Acceleration/deceleration time increments 🕮 Refer to page 172

Pr. 30 Regenerative function selection Refer to page 203

Pr. 57 Restart coasting time Refer to page 260

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

Pr. 872 Input phase failure protection selection Refer to page 271



# 4.18 Operation setting at alarm occurrence

Purpose	Parameter t	Refer to Page	
Recover by retry operation at alarm occurrence	Retry operatoin	Pr. 65, Pr. 67 to Pr. 69	268
Output alarm code from terminal	Alarm code output function	Pr. 76	270
Do not output input/output phase failure alarm	Input/output phase failure protection selection	Pr. 251, Pr. 872	271
The motor is decelerated to stop at motor thermal activation	Fault definition	Pr. 875	272


# 4.18.1 Retry function (Pr. 65, Pr. 67 to Pr. 69)




If an alarm occurs, the inverter resets itself automatically to restart. You can also select the alarm description for a retry.

When automatic restart after instantaneous power failure is selected ( $Pr. 57 Restart coasting time \neq$  "9999"), restart operation is performed at retry operation as at an instantaneous power failure. (Refer to page 260 for the restart function.)

Parameter Number	Name	Initial Value	Setting Range	Description
65	Retry selection	0	0 to 5	An alarm for retry can be selected. (Refer to the next page)
			0	No retry function
67	Number of retries at alarm occurrence	0	1 to 10	Set the number of retries at alarm occurrence. An alarm output is not provided during retry operation.
	occurrence		101 to 110	Set the number of retries at alarm occurrence. (The setting value of minus 100 is the number of retries.) An alarm output is provided during retry operation.
68	Retry waiting time	1s	0 to 10s	Set the waiting time from when an inverter alarm occurs until a retry is made.
69	Retry count display erase	0	0	Clear the number of restarts succeeded by retry.

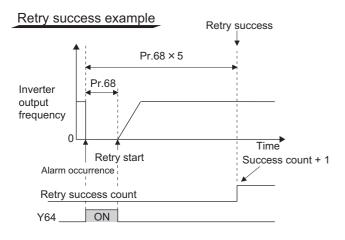

# Retry failure example

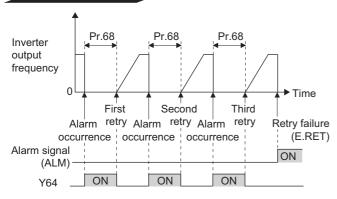

- Retry operation automatically resets an alarm and restarts the inverter at the starting frequency when the time set in Pr. 68 elapses after the inverter stopped due to the alarm.
- · Retry operation is performed by setting *Pr. 67* to any value other than "0". Set the number of retries at alarm occurrence in *Pr. 67*.
- When retries fail consecutively more than the number of times set in *Pr.* 67, a retry count excess alarm (E.RET) occurs, stopping the inverter output. (Refer to retry failure example)
- Use Pr. 68 to set the waiting time from when an inverter alarm occurs until a retry is made in the range 0 to 10s. (When the setting value is "0s", the actual time is 0.1s.)
- Reading the Pr. 69 value provides the cumulative number of successful restart times made by retry. The cumulative count in Pr. 69 is increased by 1 when a retry is regarded as successful after normal operation continues without alarms occurring for more than four times longer than the time set in Pr. 68 after a retry start.
- · Writing "0" in Pr. 69 clears the cumulative count.
- During a retry, the Y64 signal is on. For the Y64 signal, assign the function by setting "64 (positive logic)" or "164 (negative logic)" in any of *Pr. 190 to Pr. 196 (output terminal faction selection)*.

## = CAUTION

When terminal assignment is changed using  $Pr.\ 190$  to  $Pr.\ 196$ , the other functions may be affected. Please make setting after confirming the function of each terminal.

- · Using *Pr. 65* you can select the alarm that will cause a retry to be executed. No retry will be made for the alarm not indicated. (Refer to *page 398* for the alarm description.)
  - indicates the errors selected for retry.

Alarm			Pr. 65 S	Setting	l		Alarm			Pr. 65	Setting		
Display for Retry	0	1	2	3	4	5	Display for Retry	0	1	2	3	4	5
E.OC1	•	•		•	•	•	E. PE	•				•	
E.OC2	•	•		•	•		E.MB1	•				•	
E.OC3	•	•		•	•	•	E.MB2	•				•	
E.OV1	•		•	•	•		E.MB3	•				•	
E.OV2	•		•	•	•		E.MB4	•				•	
E.OV3	•		•	•	•		E.MB5	•				•	
E.THM	•						E.MB6	•				•	
E.THT	•						E.MB7	•				•	
E.IPF	•				•		E.OS	•				•	
E.UVT	•				•		E.OSD	•				•	
E. BE	•				•		E.OD	•				•	
E. GF	•				•		E.PTC	•					
E.OHT	•						E.CDO	•				•	
E.OLT	•				•		E.SER	•				•	
E.OPT	•				•		E.ILF	•				•	
E.OP3	•				•				•	•	•		•

#### CAUTION

- For a retry error, only the description of the first alarm is stored.
- · When an inverter alarm is reset by the retry function at the retry time, the accumulated data of the electronic thermal relay function, regeneration converter duty etc. are not cleared. (Different from the power-on reset.)

# **⚠** CAUTION

Mhen you have selected the retry function, stay away from the motor and machine unless required. They will start suddenly (after the reset time has elapsed) after occurrence of an alarm.

When you have selected the retry function, apply in easily visible places the CAUTION stickers supplied to the installation guideline.

# ◆ Parameters referred to ◆

Pr. 57 Restart coasting time Refer to page 260



# 4.18.2 Alarm code output selection (Pr. 76)



At alarm occurrence, its description can be output as a 4-bit digital signal from the open collector output terminals. The alarm code can be read by a programmable controller, etc., and its corrective action can be shown on a display, etc.

Parameter Number	Name	Initial Value	Setting Range	Description
			0	Without alarm code output
76	76 Alarm code output selection	0	1	With alarm code output (Refer to the following table)
			2	Alarm code output at alarm occurrence only (Refer to the following table)

- $\cdot$  By setting Pr.~76 to "1" or "2", the alarm code can be output to the output terminals.
- · When the setting is "2", an alarm code is output at only alarm occurrence, and during normal operation, the terminals output the signals assigned to *Pr. 190 to Pr. 196 (output terminal function selection)*.
- · The following table indicates alarm codes to be output. (0: output transistor off, 1: output transistor on)

Operation Panel	Οι	tput of Out	put Termin	als	
Indication (FR-DU07)	SU	IPF	OL	FU	Alarm Code
Normal *	0	0	0	0	0
E.OC1	0	0	0	1	1
E.OC2	0	0	1	0	2
E.OC3	0	0	1	1	3
E.OV1 to E.OV3	0	1	0	0	4
E.THM	0	1	0	1	5
E.THT	0	1	1	0	6
E.IPF	0	1	1	1	7
E.UVT	1	0	0	0	8
E.FIN	1	0	0	1	9
E. BE	1	0	1	0	Α
E. GF	1	0	1	1	В
E.OHT	1	1	0	0	С
E.OLT	1	1	0	1	D
E.OPT	1	1	1	0	E
E.OP3	1	1	1	0	E
Other than the above	1	1	1	1	F

<sup>\*</sup> When Pr. 76 = "2", the output terminals output the signals assigned to Pr. 190 to Pr. 196.

## CAUTION =

· When a value other than "0" is set in Pr.76

When an alarm occurs, the output terminals SU, IPF, OL, FU output the signal in the above table, independently of the *Pr. 190 to Pr. 196 (output terminal function selection)* settings. Please be careful when inverter control setting has been made with the output signals of *Pr. 190 to Pr. 196*.

# ♦ Parameters referred to ♦

# 4.18.3 Input/output phase failure protection selection (Pr. 251, Pr. 872)

You can disable the output phase failure protection function that stops the inverter output if one of the inverter output side (load side) three phases (U, V, W) opens.

The input phase failure protection function of the inverter input side (R/L1, S/L2, T/L3) can be made valid.

Parameter Number	Name	Initial Value	Setting Range	Description
251	Output phase failure protection	1	0	Without output phase failure protection
231	selection	'	1	With output phase failure protection
872	Input phase failure protection	0	0	Without input phase failure protection
012	selection	J	1	With input phase failure protection

# Pr.250 Pr.252 Pr.252 Pr.868 Pr.868 Pr.874 Pr.874

# (1) Output phase failure protection selection (Pr. 251)

When Pr. 251 is set to "0", output phase failure protection (E.LF) becomes invalid.

# (2) Input phase failure protection selection (Pr. 872)

· When *Pr.* 872 is set to "1", input phase failure protection (E.ILF) is provided if a phase failure of one phase among the three phases is detected for 1s continuously.

#### **REMARKS**

If an input phase failure has occurred when Pr: 872 = "1" (input phase failure protected) and a value other than "0" (power failure stop function valid) is set in Pr: 261, input phase failure protection (E.ILF) is not provided but power-failure deceleration is made.

#### CAUTION


- · When an input phase failure occurs in the R/L1 and S/L2 phases, input phase failure protection is not provided but the inverter output is shut off.
- · If an input phase failure continues for a long time, the converter section and capacitor lives of the inverter will be shorter.

#### ◆ Parameters referred to ◆

Pr. 261 Power failure stop selection Refer to page 265

# 4.18.4 Overspeed detection (Pr. 374)

Parameter Number	Name	Initial Value	Setting Range	Description
374	Overspeed detection level	140Hz	0 to 400Hz	When the motor speed reaches or exceeds the speed set in <i>Pr.374</i> during encoder feedback control, real sensorless vector control, or vector control, over speed (E.OS) occurs and stops the inverter output.

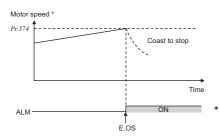

The output frequency and *Pr.374* are compared during real sensorless vector control.

# 

When the encoder signal is lost during encoder feedback control, orientation control, or vector control, signal loss detection (E.ECT) is activated to stop the inverter output.

Parameter Number	Name	Initial Value	Setting Range	Description
	Encoder signal loss		0	Signal loss detection is invalid
376	detection enable/disable selection	0	1	Signal loss detection is valid

<sup>\*</sup> Setting can be made only when the FR-A7AP is mounted.



# 4.18.6 Fault definition (Pr. 875)

When motor thermal protection is activated, an alarm can be output after the motor decelerates to a stop.




Parameter Number	Name	Initial Value	Setting Range	Description
975	875 Fault definition	0	0	Normal operation
0/5			1	The motor decelerates to stop when motor thermal protection is activated.

# (1) Output is immediately shutoff at occurrence of any alarm (setting value is "0", initial value)

 Output is immediately shutoff and an alarm output is provided at alarm occurrence.

# (2) The motor decelerates to stop when motor thermal protection is activated (setting value is "1")

- When the minor fault output 2 signal (ER) turns on during external thermal relay £ [] H [ (OHT), motor overload (electronic thermal relay function) £ [ H [ (THM) or PTC thermistor £ [ [ (PTC) is activated, the motor starts deceleration as soon as the minor fault output 2 signal (ER) turns on and an alarm is provided after deceleration to a stop.
- When the ER signal turns on, decrease load, etc. to allow the inverter to decelerate.
- At occurrence of an alarm other than OHT, THM and PTC, output is immediately shut off and an alarm is output.
- Set "97 (positive logic) or 197 (negative logic)" in *Pr. 190 to Pr. 196 (output terminal function selection)* and assign the ER signal to the output terminal.
- This function is invalid during position control.

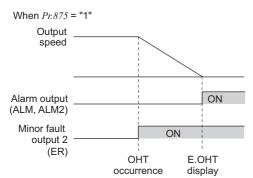

#### = CAUTION

- The value "0" is recommended for the system in which the motor continues running without deceleration due to a large torque on the load side.
- Changing the terminal assignment using Pr. 190 to Pr. 196 (output terminal function selection) may affect the other functions. Make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

# 4.19 Energy saving operation and energy saving monitor

Purpose	Parameter the	Refer to Page	
Energy saving operation	Energy saving operation	273	
How much energy can be saved	Energy saving monitor	Pr. 52, Pr. 54, Pr. 158, Pr. 891 to Pr. 899	274

# 4.19.1 Energy saving control (Pr. 60)

Without a fine parameter setting, the inverter automatically performs energy saving control. This inverter is optimum for fan and pump applications.

/ Pr.59
page 169
Pr 61 /
/ PI.01 /

Parameter Number	Name	Initial Value	Setting Range	Description		
60	Energy saving control selection*	0	0	Normal operation mode		
		U	4	Energy saving operation mode		

<sup>\*</sup> When parameter is read using the FR-PU04, a parameter name different from an actual parameter is displayed.

# **Energy saving operation mode (setting "4")**

- · When "4" is set in *Pr.* 60, the inverter operates in the energy saving operation mode.
- · In the energy saving operation mode, the inverter automatically controls the output voltage to minimize the inverter output voltage during a constant operation.

#### REMARKS

For applications a large load torque is applied to or machines repeat frequent acceleration/deceleration, an energy saving effect is not expected.

#### CAUTION =

- · When the energy saving mode is selected, deceleration time may be longer than the setting value. Since overvoltage alarm tends to occur as compared to the constant torque load characteristics, set a longer deceleration time.
- · The energy saving operation mode function only under V/F control. When the advanced magnetic flux vector control, real sensorless vector control and vector control are selected, the energy saving mode is invalid.



Pr.51

Pr.55

Pr.55

Pr.157

Pr.157
Pr.159
Pr.159
Pr.889
Pr.889
Pr.990
Pr.990

From the power consumption estimated value during commercial power supply operation, the energy saving effect by use of the inverter can be monitored/output.

Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description		
52	DU/PU main display data selection	0 (output frequency)	0, 5 to 14, 17 to 20, 22 to 25, 32 to 35, 50 to 57, 100		50:Power saving monitor 51:Cumulative saving power monitor		
54	CA terminal function selection	1 (output	1 to 3, 5 to 14, 17, 18, 21, 24, 32 to 34, 50, 52, 53		50:Power saving monitor		
158	AM terminal function selection	frequency)					
891	Cumulative power monitor digit shifted times	9999	0 to 4		Set the number of times to shift the cumulative power monitor digit Clamp the monitoring value at maximum.		
			9999		No shift Clear the monitor value when it exceeds the maximum value.		
892	Load factor	100%	30 to 150%		Set the load factor for commercial power-supply operation. Multiplied by the power consumption rate (page 277) during commercial power supply operation.		
			02150 (01100) or less	0.1 to 55kW	Set the motor capacity (pump capacity). Set when calculating power		
893	Energy saving monitor reference (motor capacity)	Applied motor Capacity •	02880 (01440) or more	0 to 3600kW	saving rate, power saving rate average value, commercial operation power.  * The applied motor capacity is different according to the <i>Pr. 570</i> setting.  ( <i>Refer to page</i> 154)		
	Control selection during		0	I.	Discharge damper control (fan)		
			1		Inlet damper control (fan)		
894	commercial power-supply	0	2		Valve control (pump)		
	operation		3		Commercial power-supply drive (fixed value)		
895	Power saving rate reference value	9999	0		Consider the value during commercial power-supply operation as 100%		
095		9999	1		Consider the Pr. 893 setting as 100%.		
			9999		No function		
896	Power unit cost	9999	0 to 500		Set the power unit cost. Display the power saving amount charge on the energy saving monitor.		
			9999		No function		
	Power saving monitor		0		Average for 30 minutes		
897	average time	9999	1 to 10		Average for the set time		
			999		No function  Cumulative monitor value clear		
	Power saving cumulative monitor clear		0		Cumulative monitor value clear  Cumulative monitor value hold		
					Totalization continued		
898		9999	10	)	(communication data upper limit 9999)		
			999	9	Totalization continued (communication data upper limit 65535)		
899	Operation time rate (estimated value)	9999	0 to 100%		Use for calculation of annual power saving amount. Set the annual operation ratio (consider 365 days × 24hr as 100%).		
	arameters allow its setting to be cha		9999		No function		

The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

# (1) Energy saving monitor list

• The following provides the items that can be monitored by the power saving monitor (Pr. 52, Pr. 54, Pr. 158 = "50"). (Only 1) power saving and 3) power saving average value can be output to Pr. 54 (terminal CA) and Pr. 158 (terminal AM))

	Energy Saving	Description and Formula	Incre-	Parameter Setting			
	Monitor Item	Description and Formula	ments	Pr. 895	Pr. 896	Pr. 897	Pr. 899
1)	Power saving	Difference between the estimated value of power necessary for commercial power supply operation and the input power calculated by the inverter Power during commercial power supply operation – input power monitor	0.01kW/ 0.1kW *3	9999			
2)	Power saving rate	Ratio of power saving on the assumption that power during commercial power supply operation is 100%  1) Power saving  Power during commercial power supply operation	0.1%	0 -	_	9999	
	-	Ratio of power saving on the assumption that $Pr.893$ is 100%  1) Power saving $Pr.893 \times 100$		1	•		
3)	Power saving average value	Average value of power saving amount per hour during predetermined time ( $Pr. 897$ ) $\frac{\Sigma \text{ (1) Power saving} \times \Delta \text{t)}}{Pr. 897}$	0.01kWh /0.1kWh	9999			_
4)	Power saving rate	Ratio of power saving average value on the assumption that the value during commercial power supply operation is 100% $\frac{\Sigma \text{ ( 2) Power saving rate} \times \Delta \text{t)}}{Pr.~897} \times \text{100}$	0.1%	0 1%	9999	0 to 1000h	
,	average value	Ratio of power saving average value on the assumption that <i>Pr. 893</i> is 100%  3) Power saving average value  Pr. 893		1			
5)	Power saving amount average value	Power saving average value represented in terms of charge 3) Power saving average value × <i>Pr. 896</i>	0.01/0.1		0 to 500		

• The following shows the items which can be monitored by the cumulative saving power monitor (Pr. 52 = "51"). (The monitor value of the cumulative monitor can be shifted to the right with Pr. 891 Cumulative power monitor digit shifted times.)

	<b>Energy Saving</b>	Description and Formula	Incre-	Parameter Setting			
	Monitor Item	Description and Formula		Pr. 895	Pr. 896	Pr. 897	Pr. 899
6)	Power saving amount	Power saving is added up per hour. $\Sigma$ ( 1) Power saving $\times$ $\Delta$ t)	0.01kWh /0.1kWh *1*2*3		9999		9999
7)	Power saving amount charge	Power saving amount represented in terms of charge <b>6) Power saving amount</b> $\times$ <i>Pr.</i> 896	0.01/0.1		0 to 500		
8)	Annual power saving amount	Estimated value of annual power saving amount  6) Power saving amount  Operation time during accumulation of power saving amount  24 × 365 × Pr. 899 100	0.01kWh /0.1kWh *1*2*3		9999	_	0 to 100%
9)	Annual power saving amount charge	Annual power saving amount represented in terms of charge 8) Annual power saving amount × <i>Pr.</i> 896	0.01/0.1		0 to 500		

For communication (RS-485 communication, communication option), the display increments are 1. For example, the communication data is "10" for "10.00kWh".

#### **REMARKS**

- As the operation panel (FR-DU07) is 4-digit display, it displays in 0.1 increments since a carry occurs, e.g. "100.0", when a
- monitor value in 0.01 increments exceeds "99.99". The maximum display is "9999".

  As the operation panel (FR-PU04/FR-PU07) is 5-digit display, it displays in 0.1 increments since a carry occurs, e.g. "1000.0", when a monitor value in 0.01 increments exceeds "999.99". The maximum display is "99999".
- The upper limit of communication (RS-485 communication, communication option) is "65535" when Pr. 898 Power saving cumulative monitor clear = "9999". The upper limit of 0.01 increments monitor is "655.35" and that of 0.1 increments monitor is "655.35".

When using the parameter unit (FR-PU04/FR-PU07), "kW" is displayed.


The setting depends on capacities. (FR-A720-02150 (FR-A740-01100) or less/FR-A720-02880 (FR-A740-01440) or more)

# (2) Power saving instantaneous monitor (1) power savings, 2) power saving rate)

- On the power saving monitor (1)), an energy saving effect as compared to the power consumption during commercial power supply operation (estimated value) is calculated and displays on the main monitor.
- In the following case, the power saving monitor (1) is "0".
  - (a)Calculated values of the power saving monitor are negative values.
  - (b)During the DC injection brake operation
  - (c)Motor is not connected (output current monitor is 0A)
- On the power saving rate monitor (2)), setting "0" in *Pr. 895 Power saving rate reference value* displays the power saving rate on the assumption that power (estimated value) during commercial power supply operation is 100%. When *Pr. 895* = "1", the power saving rate on the assumption that the *Pr. 893 Energy saving monitor reference (motor capacity)* value is 100% is displayed.

# (3) Power saving average value monitor (3) power saving average value, 4) average power saving rate average value, 5) power saving amount average value)

- · Power saving average value monitor can be displayed when a value other than "9999" is set in *Pr. 897 Power saving monitor average time*.
- The power saving average value monitor (3)) displays the average value per unit time of the power saving amount at averaging.
- The average value is updated every time an average time has elapsed after the *Pr.* 897 setting is changed, power is turned on or the inverter is reset, assuming as a starting point. The power savings average value update timing signal (Y92) is inverted every time the average value is updated.

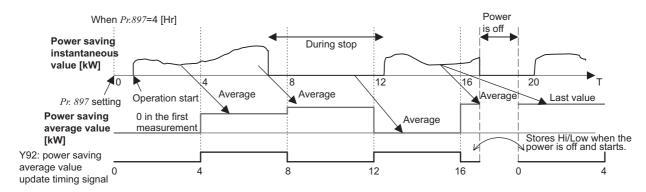

- The power saving average value monitor (4)) displays the average value per unit time of power saving rate (2)) at every average time by setting "0" or "1" in *Pr. 895 Power saving rate reference value*.
- By setting the charge (power unit) per 1kWh of power amount in Pr.~896~Power~unit~cost, the power saving amount average value monitor (5)) displays the charge relative to the power saving average value (power saving average value (3))  $\times Pr.~896$ ).

# (4) Cumulative saving power monitor (6) power saving amount, 7) power saving amount charge, 8) annual power saving amount, 9) annual power saving amount charge)


- On the cumulative saving power monitor, the monitor data digit can be shifted to the right by the number of  $Pr.\ 891$  Cumulative power monitor digit shifted times settings. For example, if the cumulative power value is 1278.56kWh when  $Pr.\ 891$  = "2", the PU/DU display is 12.78 (display in 100kWh increments) and the communication data is 12. If the maximum value is exceeded at  $Pr.\ 891$  = "0 to 4", the power is clamped at the maximum value, indicating that a digit shift is necessary. If the maximum value is exceeded at  $Pr.\ 891$  = "9999", the power returns to 0 and is recounted. The other monitors are clamped at the display maximum value.
- The cumulative saving power monitor (6)) can measure the power amount during a predetermined period. Measure according to the following steps
  - 1) Write "9999" or "10" in Pr. 898 Power saving cumulative monitor clear.
- 2) Write "0" in *Pr. 898* at measurement start timing to clear the cumulative saving power monitor value and start totalization of power saving.
- 3) Write "1" in Pr. 898 at measurement end timing to hold the cumulative saving power monitor value.

#### **REMARKS**

 The cumulative saving power monitor value is stored every hour. Hence, when the power supply is switched on again within one hour after it was switched off, the previously stored monitor value is displayed and totalization starts. (The cumulative monitor value may decrease)

# (5) Power estimated value of commercial power supply operation (Pr. 892, Pr. 893, Pr. 894)

- · Select the commercial power supply operation pattern from among the four patterns of discharge damper control (fan), inlet damper control (fan), valve control (pump) and commercial power supply drive, and set it to *Pr. 894 Control selection during commercial power-supply operation*.
- · Set the motor capacity (pump capacity) in Pr. 893 Energy saving monitor reference (motor capacity).
- The power consumption rate (%) during commercial power supply operation is estimated from the operation pattern and the ratio of speed to rating (current output frequency/*Pr. 3 Base frequency*) in the following chart.

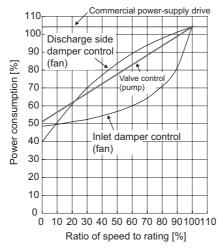

· From the motor capacity set in *Pr. 893* and *Pr. 892 Load factor*, the power estimated value (kW) during commercial power supply operation is found by the following formula.

Power estimated value (kW) during commercial power supply operation
$$= Pr. 893 \text{ (kW)} \times \frac{\text{Power consumption (\%)}}{100} \times \frac{Pr. 892 \text{ (\%)}}{100}$$

# REMARKS

· Since the speed does not increase above the power supply frequency in commercial power supply operation, it becomes constant when the output frequency rises to or above *Pr. 3 Base frequency*.



## (6) Annual power saving amount, power charge (Pr. 899)

- By setting the operation time rate [%] (ratio of time when the motor is actually driven by the inverter during a year) in *Pr.* 899, the annual energy saving effect can be predicted.
- · When the operation pattern is predetermined to some degree, the estimated value of the annual power saving amount can be found by measurement of the power saving amount during a given measurement period.
- · Refer to the following and set the operation time rate.
  - 1) Predict the average time [h/day] of operation in a day.
  - 2) Find the annual operation days [days/year]. (Monthly average operation days × 12 months)
  - 3) Calculate the annual operation time [h/year] from 1) and 2).

Annual operation time (h/year) = Average time (h/day) × Operation days (days/year)

4) Calculate the operation time rate and set it to Pr. 899.

Operation time rate (%) = 
$$\frac{\text{Annual operation time (h/year)}}{24 \text{ (h/day) x 365 (days/year)}} \times 100(\%)$$

#### **REMARKS**

Operation time rate setting example: When operation is performed for about 21 hours per day and the monthly average operation days are 16 days

Annual operation time = 21 (h/day)  $\times$  16 (days/month)  $\times$  12 months = 4032 (h/year)

4032 (h/year)

Operation time rate (%) =  $\frac{1}{24 \text{ (h/day)} \times 365 \text{ (days/year)}} \times 100(\%) = \frac{46.03\%}{100}$ 

Set 46.03% to Pr. 899.

· Calculate the annual power saving amount from Pr. 899 Operation time rate (estimated value) and power saving average value monitor

Annual power saving amount (kWh/year) = Power saving average value (kW) during totalization when Pr. 898 = 10 or 9999

• The annual power saving amount charge can be monitored by setting the power charge per hour in *Pr. 896 Power unit cost*.

Calculate the annual power saving amount charge in the following method.

Annual power saving amount charge = Annual power saving amount (kWh/year) × Pr. 896

#### REMARKS

In the regeneration mode, make calculation on the assumption that "power saving = power during commercial power supply operation (input power = 0)".

#### → Parameters referred to ◆

Pr. 3 Base frequency Refer to page 158

Pr. 52 DU/PU main display data selection Refer to page 248

Pr. 54 FM terminal function selection Refer to page 248

Pr. 158 AM terminal function selection Refer to page 248

Pr.71

/Pr.241/

# 4.20 Motor noise, noise reduction

# 4.20.1 PWM carrier frequency and Soft-PWM control (Pr. 72, Pr. 240, Pr. 260)

You can change the motor sound.

Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description
<b>72</b> *1	PWM frequency selection	2	02150(01100) or less 02880(01440)	0 to 15	PWM carrier frequency can be changed. The setting displayed is in [kHz]. Note that 0 indicates 0.7kHz, 15 indicates
			or more	0 to 6, 25	14.5kHz and 25 indicates 2.5kHz.
			0		Soft-PWM is invalid
240 *1	Soft-PWM operation selection	1	1		When <i>Pr.</i> 72 = "0 to 5" ("0 to 4" for FR-A720-02880 (FR-A740-01440) or more), soft-PWM is valid.
260 *2	PWM frequency automatic switchover	1	0		PWM carrier frequency is constant independently of load. When the carrier frequency is set to 3kHz or more (Pr. 72 ≥ "3"), perform continuous operation at less than 85% of the rated inverter current.
			1		Decreases PWM carrier frequency automatically when load increases.

<sup>\*1</sup>The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

#### (1) PWM carrier frequency changing (Pr. 72)

- · You can change the PWM carrier frequency of the inverter.
- · Changing the PWM carrier frequency produces an effect on avoiding the resonance frequency of a mechanical system or motor or on reducing noise or leakage current generated from the inverter.
- · Carrier frequencies under real sensorless vector control or vector control is as shown below.

Pr. 72 Setting	Carrier Frequencies
0 to 5	2
6 to 9	6
10 to 13	10
14, 15	14

When using an option sine wave filter (MT-BSL/BSC) for the FR-A720-02880 (FR-A740-01440) or more, set "25" in *Pr. 72* (2.5kHz).

#### REMARKS

When "25" (available with the FR-A720-02880 (FR-A740-01440) or more) is set in Pr. 72, V/F control is forcibly selected.

<sup>\*2</sup>Reading and writing are enabled when "0 or 1" is set in Pr.570.



#### (2) Soft-PWM control (Pr. 240)

· Soft-PWM control is a control system that changes the motor noise from a metallic tone into an unoffending complex tone.

#### (3) PWM carrier frequency automatic reduction function (Pr. 260)

- When continuous operation is performed at 85% or more of the inverter rated current (the parenthesized value of the rated output current on page 430 or more) with the carrier frequency of the inverter set to 3kHz or more (Pr. 72 ≥ "3"), the carrier frequency is automatically reduced to 2kHz to protect the output transistor of the inverter. (Motor noise increases, but it is not a failure)
- · When *Pr. 260* is set to"0", the carrier frequency becomes constant (*Pr. 72* setting) independently of the load, making the motor sound uniform.

Note that continuous operation should be performed at less than 85% of the inverter rating.

#### CAUTION =

- Decreasing the PWM carrier frequency reduces inverter-generated noise and leakage current, but increases motor noise.
- · When *Pr.* 570 = "2 (initial value) or 3", functions of *Pr.* 260 become invalid. PWM carrier frequency automatically decreases when load increases. (*Refer to page 430.*)
- · When PWM carrier frequency is set to 1kHz or less (*Pr.72*≤1), fast response current limit may function prior to stall prevention operation due to increase in harmonic currents depending on the motor, resulting in insufficient torque. In such case, set fast-response current limit operation invalid using *Pr.156 Stall prevention operation selection*.

#### ◆ Parameters referred to ◆

Pr.156 Stall prevention operation selection Refer to page 149

/Pr.850/

/Pr.872/


# 4.21 Frequency/torque setting by analog input (terminal 1, 2, 4)

Purpose	Parameter that m	nust be Set	Refer to Page
Function assignment of analog input terminal	Terminal 1 and terminal 4 function assignment	Pr. 858, Pr. 868	281
Selection of voltage/current input (terminal 1, 2, 4) Perform forward/ reverse rotation by analog input	Analog input selection	Pr. 73, Pr. 267	282
Adjust the main speed by analog auxiliary input	Analog auxliary input and compensation (added compensation and override function)	Pr. 73, Pr. 242, Pr. 243, Pr. 252, Pr. 253	285
Noise elimination at the analog input	Input filter	Pr. 74, Pr. 822, Pr. 826, Pr. 832, Pr. 836, Pr. 849	287
Adjustment (calibration) of analog input frequency and voltage (current)	Bias and gain of frequency setting voltage (current)	Pr. 125, Pr. 126, Pr. 241, C2 to C7 (Pr. 902 to Pr. 905) C12 to C15 (Pr. 917 to Pr. 918)	288
Adjustment (calibration) of analog input torque and voltage (current)	Bias and gain of torque setting voltage (current)	Pr. 241, C16 to C19 (Pr. 919 to Pr. 920), C38 to C41 (Pr. 932 to Pr. 933)	293
Analog input (current) status check	4mA input check	Pr. 573	298

# 4.21.1 Function assignment of analog input terminal (Pr. 858, Pr. 868)

Function assignment of terminal 1 and terminal 4 of analog input can be selected and changed by parameter.

Parameter Number	Name	Initial Value	Setting Range	Description
858	Terminal 4 function assignment	0	0, 1, 4, 9999	Select the terminal 4 function. (Refer to the following list)
868	Terminal 1 function assignment	0	0 to 6, 9999	Select the terminal 1 function. (Refer to the following list)

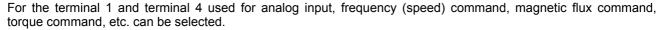

Functions change according to the control mode as in the table below.

Terminal 1 function according to control

Pr. 868	V/F Control	Real Sensorless Vector	Control, Vector Control	Vector Control
Setting	Advanced Magnetic Flux Vector Control	Speed control	Torque control	Position control
0 (Initial value)	Frequency setting auxiliary (Pr. 810 = 0)	Speed setting auxiliary ( <i>Pr.</i> 810 = 0)	Speed limit auxiliary (Pr. 807 = 0)	_
1	-	Magnetic flux command	Magnetic flux command	Magnetic flux command
2	_	Regenerative torque limit (Pr. 810 = 1)	_	Regenerative torque limit ( <i>Pr.</i> 810 = 1)
3	_	_	Torque command ( <i>Pr.</i> 804 = 0)	_
4	Stall prevention operation level input (Pr. 810 = 1)	Torque limit ( <i>Pr. 810</i> = 1)	Torque command (Pr. 804 = 0)	Torque limit ( <i>Pr. 810</i> = 1)
5	_	_	Forward/reverse rotation speed limit (Pr. 807 = 2)	_
6	_	Torque bias input ( <i>Pr.</i> 840 = 1, 2, 3)	_	_
9999	_	_	<u> </u>	_

#### Terminal 4 function according to control

o forminar i	- reminal Franction according to control						
Pr. 858	V/F Ccontrol	Real Sensorless Vector	Vector Control				
Setting	Advanced Magnetic Flux Vector Control	Speed control	Torque control	Position control			
0 (Initial value)	Frequency command (AU signal-ON, Pr. 810 = 0)	Speed command (AU signal-ON, Pr. 810 = 0)	Speed limit (AU signal-ON, <i>Pr.</i> 807 = 0)	_			
1	_	Magnetic flux command	Magnetic flux command	Magnetic flux command			
4	Stall prevention operation level input (Pr. 810 = 1)	Torque limit ( <i>Pr. 810</i> = 1)	_	Torque limit ( <i>Pr. 810</i> = 1)			
9999		-	-	_			

<sup>-:</sup> No function



#### **REMARKS**


- · When "4" is set in both Pr. 868 and Pr. 858, terminal 1 is made valid and terminal 4 has no function.
- When "4" (stall prevention/torque limit) is set in Pr. 868, functions of terminal 4 become valid independently of whether the AU
  terminal is on or off.


#### ◆ Parameters referred to ◆

Advanced magnetic flux vector control Refer to page 145
Real sensorless vector control Refer to page 92
Pr. 804 Torque command source selection Refer to page 122
Pr. 807 Speed limit selection Refer to page 124

Pr. 810 Torque limit input method selection \*\* Refer to page 99

# 4.21.2 Analog input selection (Pr. 73, Pr. 267)

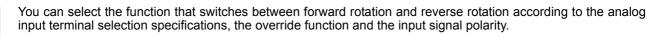

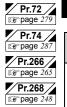


Parameter Number	Name	Initial Value	Setting Range	De	scription
73	Analog input selection	1	0 to 7, 10 to 17	You can select the input specifications of termina 2 (0 to 5V, 0 to 10V, 4 to 20mA) and input specifications of terminal 1 (0 to ±5V, 0 to ±10V). The input specifications can be selected when the voltage/current input switch is off. Terminal 2 is always used for current input when the switch is on, the parameter needs to be set to current input. Override and reversible operation can be selected.	
	Terminal 4 input selection	0	0	Terminal 4 input 4 to 20mA	The input specifications can be selected when
267			1	Terminal 4 input 0 to 5V	the voltage/current input switch is off. Set "0"
			2	Terminal 4 input 0 to 10V	when the switch is ON.

## (1) Selection of analog input selection

· For the terminals 1, 2, 4 used for analog input, voltage input (0 to 5V, 0 to 10V) or current input (4 to 20mA) can be selected.

The current at terminal 2 and 4 is always 4 to 20mA when the voltage/current input switch is set to ON.

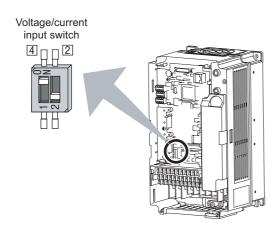

#### 1:Terminal 4 input

ON: Current input (initial status)

OFF: Voltage/current switchover (current input in the initial status)

#### 2: Terminal 2 input

ON: Current input

OFF: Voltage/current switchover (voltage input in the initial status)

#### = CAUTION


When turning ON the voltage/current input switch, set input specifications of terminal to current input using Pr.73 and Pr.267.

· Refer to the following table and set Pr. 73 and Pr. 267. ( indicates the main speed setting)

Pr. 73 Setting	Terminal 2 Input	Terminal 1 Input	Terminal 4 Input	Pr. 73 Setting	Compensation Input Terminal and Compensation Method	Polarity Reversible
0	0 to 10V	0 to ±10V		0		No
1 (initial value)	0 to to 5V	0 to ±10V		1 (initial value)	Terminal 1	(Indicates that
2	0 to 10V	0 to ±5V		2	Added compensation	a frequency
3	0 to 5V	0 to ±5V		3		command
4	0 to 10V	0 to ±10V		4	Terminal 2	signal of
5	0 to 5V	0 to ±5V		5	Override	negative
6	4 to 20mA	0 to ±10V	When the AU	6		polarity is not
7	4 to 20mA	0 to ±5V	signal is off	7		accepted.)
10	0 to 10V	0 to ±10V	×	10	Terminal 1	
11	0 to 5V	0 to ±10V	^	11	Added compensation	
12	0 to 10V	0 to ±5V		12		
13	0 to 5V	0 to ±5V		13		Yes
14	0 to 10V	0 to ±10V		14	Terminal 2	163
15	0 to 5V	0 to ±5V		15	Override	
16	4 to 20mA	0 to ±10V		16	Terminal 1	
17	4 to 20mA	0 to ±5V		17	Added compensation	
0		0 to ±10V		0		No
1 (initial value)	×	0 to ±10V		1 (initial value)	Terminal 1	(Indicates that
2	^	0 to ±5V		2	Added compensation	a frequency
3		0 to ±5V		3		command
4	0 to 10V	×	According to	4	Terminal 2	signal of
5	0 to 5V		Pr. 267 setting	5	Override	negative
6	×	0 to ±10V	when the AU	6		polarity is not
7	^	0 to ±5V	signal is on	7		accepted.)
10		0 to ±10V	0: 4 to 20mA	10	Terminal 1	
11	×	0 to ±10V	(initial value)	11	Added compensation	
12	, î	0 to ±5V	1: 0 to 5V	12		
13		0 to ±5V	2: 0 to 10V	13		Yes
14	0 to 10V	×		14	Terminal 2	103
15	0 to 5V			15	Override	]
16	×	0 to ±10V		16	Terminal 1	
17	^	0 to ±5V		17	Added compensation	

#### = CAUTION


- · The terminal 1 (frequency setting auxiliary input) signal is added to the main speed setting signal of the terminal 2 or 4.
- When an override is selected, the terminal 1 or 4 is used for the main speed setting and the terminal 2 for the override signal (50% to 150% at 0 to 5V or 0 to 10V). (When the main speed of the terminal 1 or terminal 4 is not input, compensation by the terminal 2 is made invalid.))
- Use *Pr. 125 (Pr. 126) (frequency setting gain)* to change the maximum output frequency at input of the maximum output frequency command voltage (current). At this time, the command voltage (current) need not be input.
  - Also, the acceleration/deceleration time, which is a slope up/down to the acceleration/deceleration reference frequency, is not affected by the change in *Pr. 73* setting.
- · When *Pr. 858 Terminal 4 function assignment, Pr. 868 Terminal 1 function assignment* = "4", the value of the terminal 1 or terminal 4 is as set to the stall prevention operation level. When terminal 1 and terminal 4 are used for frequency setting, set "0" (initial value) in *Pr. 858* and *Pr. 868*.

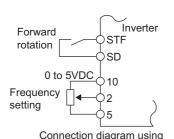


Frequency 55

Connection diagram using terminal 2 (0 to 10VDC)

terminal 2 (0 to 5VDC)

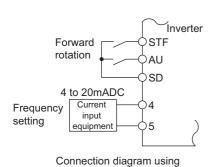

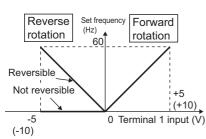

terminal 4 (4 to 20mADC)

Compensation input characteristic when STF is on

#### (2) Perform operation by analog input voltage

- The frequency setting signal inputs 0 to 5VDC (or 0 to 10VDC) to across the terminals 2-5. The 5V (10V) input is the maximum output frequency.
   The maximum output frequency is reached when 5V (10V) is input.
- The power supply 5V (10V) can be input by either using the internal power supply or preparing an external power supply. The internal power supply outputs 5VDC across terminals 10-5, or 10V across terminals 10E-5.

Terminal	Inverter Built-in Power Supply Voltage	Frequency Setting Resolution	Pr. 73 (terminal 2 input voltage)
10	5VDC	0.030Hz/60Hz	0 to 5VDC input
10E	10VDC	0.015Hz/60Hz	0 to 10VDC input

- When inputting 10VDC to the terminal 2, set any of "0, 2, 4, 10, 12, 14" in *Pr.* 73. (The initial value is 0 to 5V)
- Setting "1 (0 to 5VDC)" or "2 (0 to 10VDC)" in Pr. 267 changes the terminal 4 to the voltage input specification. When the AU signal turns on, the terminal 4 input becomes valid.

#### REMARKS

The wiring length of the terminal 10, 2, 5 should be 30m (98.4 feet) maximum.

# (3) Perform operation by analog input current

- When the pressure or temperature is controlled constant by a fan, pump, etc., automatic operation can be performed by inputting the output signal 4 to 20mADC of the adjuster to across the terminals 4-5.
- · The AU signal must be turned on to use the terminal 4.
- Setting any of "6, 7, 16, 17" in Pr. 73 changes the terminal 2 to the current input specification. At this time, the AU signal need not be turned on.

# (4) Perform forward/reverse rotation by analog input (polarity reversible operation)

- · Setting any of "10 to 17" in *Pr. 73* enables polarity reversible operation.
- · Providing  $\pm$  input (0 to  $\pm$ 5V or 0 to  $\pm$ 10V) to the terminal 1 enables forward/reverse rotation operation according to the polarity.

#### ◆ Parameters referred to ◆

Pr. 22 Stall prevention operation level Refer to page 149

Pr. 125 Terminal 2 frequency setting gain frequency, Pr. 126 Terminal 4 frequency setting gain frequency Terminal 2 frequency setting gain frequency Refer to page 288

Pr. 252, Pr. 253 Override bias/gain Refer to page 285

Pr. 858 Terminal 4 function assignment, Pr. 868 Terminal 1 function assignment Refer to page 281

# 4.21.3 Analog input compensation (Pr. 73, Pr. 242, Pr. 243, Pr. 252, Pr. 253)


A fixed ratio of analog compensation (override) can be made by the added compensation or terminal 2 as an auxiliary input for multi-speed operation or the speed setting signal (main speed) of the terminal 2 or terminal 4.

Parameter Number	Name	Initial Value	Setting Range	Description
73	Analog input selection	1	0 to 3, 6, 7, 10 to 13, 16, 17	Added compensation
			4, 5, 14, 15	Override compensation
242	Terminal 1 added compensation amount (terminal 2)	100%	0 to 100%	Set the ratio of added compensation amount when terminal 2 is the main speed.
243	Terminal 1 added compensation amount (terminal 4)	75%	0 to 100%	Set the ratio of added compensation amount when terminal 4 is the main speed.
252	Override bias	50%	0 to 200%	Set the bias side compensation value of override function.
253	Override gain	150%	0 to 200%	Set the gain side compensation value of override function.

# Pr.74 Pr.74 Pr.241 Pr.244 Pr.251 Pr.255 Pr.255

Pr.72

## (1) Added compensation (Pr. 242, Pr. 243)

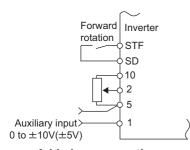

Added compensation connection example


- The compensation signal can be input for the main speed setting for synchronous/continuous speed control operation, etc.
- Setting any of "0 to 3, 6, 7, 10 to 13, 16, 17" in *Pr. 73* adds the voltage across terminals 1-5 to the voltage signal across terminals 2-5.
- If the result of addition is negative, it is regarded as 0 at the *Pr. 73* setting of any of "0 to 3, 6, 7", or reverse rotation operation (polarity reversible operation) is performed when the STF signal turns on at the *Pr. 73* setting of any of "10 to 13, 16, 17".
- The compensation input of the terminal 1 can also be added to the multi-speed setting or terminal 4 (initial value 4 to 20mA).
- The added compensation for terminal 2 can be adjusted by *Pr. 242*, and the compensation for terminal 4 by *Pr. 243*.

Analog command value using terminal 2

= Terminal 2 input + Terminal 1 input 
$$\times \frac{Pr. 242}{100(\%)}$$

Analog command value using terminal 4

= Terminal 4 input + Terminal 1 input 
$$\times \frac{Pr. 243}{100(\%)}$$

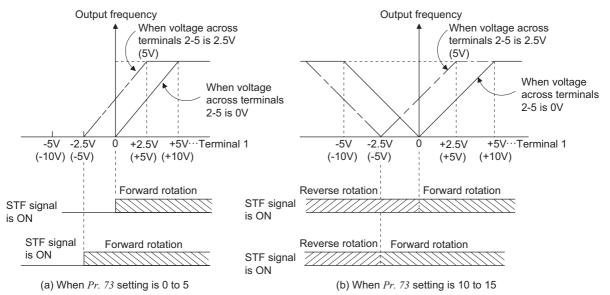


**Auxiliary input characteristics** 

# (2) Override function (Pr. 252, Pr. 253)


- · Use the override function to change the main speed at a fixed ratio.
- Set any of "4, 5, 14, 15" in Pr. 73 to select an override.
- When an override is selected, the terminal 1 or terminal 4 is used for the main speed setting and the terminal 2 for the override signal. (When the main speed of the terminal 1 or terminal 4 is not input, compensation made by the terminal 2 becomes invalid.)
- Using Pr. 252 and Pr. 253, set the override range.
- · How to find the set frequency for override

Set frequency (Hz) = Main speed set frequency (Hz)  $\times \frac{\text{Compensation amount (\%)}}{100(\%)}$ 


Main speed set frequency (Hz): Terminal 1, 4 input, multi-speed setting Compensation amount (%): Terminal 2 input

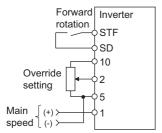

Override connection diagram

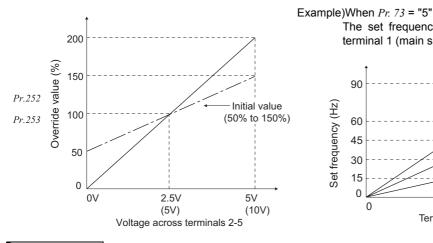

The set frequency changes as shown below according to the terminal 1 (main speed) and terminal 2 (auxiliary) inputs.

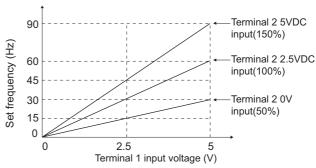

#### **REMARKS**

- The AU signal must be turned on to use the terminal 4.
- · When inputting compensation to multi-speed operation or remote setting, set "1" (compensation made) in *Pr. 28 Multi-speed input compensation selection*. (Initial value is "0")

#### ♦ Parameters referred to ♦

Pr. 28 Multi-speed input compensation selection Refer to page 169

Pr. 73 Analog input selection Refer to page 282

Pr.73 page 282

Pr.73
page 285

Pr<u>.75</u> page 300 /Pr.8<u>21</u>/ page 104 /Pr.<u>824</u>/ page 12 /Pr.825/ page 127 Pr.827 /Pr.831/ ⊕ page 104 /Pr.<u>834</u>/ ☐ page 127 Pr.835 ⊕ page 127 Pr.837 page 141 Pr.850

page 199

# 4.21.4 Response level of analog input and noise elimination (Pr. 74, Pr. 822, Pr. 826, Pr. 832, Pr. 836, Pr. 849)

Response level and stability of frequency reference command and torque reference command by analog input (terminal 1, 2, 4) signal can be adjusted.

Parameter Number	Name	Initial Value	Setting Range	Description	
74	Input filter time constant	1	0 to 8	The primary delay filter time constant for the analog input can be set. A larger setting results in slower response.	
822	Speed setting filter 1	9999	0 to 5s	Set the time constant of the primary delay filter relative to the external speed command (analog input command).	
			9999	Pr. 74 used	
826	826 Torque setting filter 1		0 to 5s	Set the time constant of the primary delay filter relative to the external torque command (analog input command).	
			9999	9999	Pr. 74 used
832	Speed setting filter 2	9999	0 to 5s, 9999	Second function of Pr. 822 (valid when RT terminal is on)	
836	Torque setting filter 2	9999	0 to 5s, 9999	Second function of Pr. 826 (valid when RT terminal is on)	
849	Analog input offset adjustment	100%	0 to 200%	This function provides speed command by analog input (terminal 2) with offset. Motor rotation due to noise, etc. by analog input can be avoided at zero speed command.	

#### (1) Time constant of analog input (Pr. 74)

- · Effective for eliminating noise in the frequency setting circuit.
- Increase the filter time constant if steady operation cannnot be performed due to noise.


A larger setting results in slower response (The time constant can be set between approximately 10ms to 1s with the setting of 0 to 8).

# (2) Time constant of analog speed command input (Pr. 822, Pr. 832)

- Set the time constant of the primary delay filter relative to the external speed command (analog input command) using Pr. 822 Speed setting filter 1.
- Set a large time constant when you want to delay the tracking of the speed command, when the analog input voltage fluctuates, etc.
- When you want to change time constant when switching multiple motors with one inverter, use the Pr. 832 Speed setting filter 2.
- · Pr. 832 Speed setting filter 2 is made valid when the RT signal turns on.

#### (3) Time constant of analog torque command input (Pr. 826, Pr. 836)

- · Set the time constant of the primary delay filter relative to the external speed command (analog input command) using Pr. 826 Torque setting filter 1.
  - Set a large time constant value when you want to delay the tracking of the torque command, when the analog input voltage fluctuates, etc.
- · When you want to change time constant when switching two motors with one inverter, etc., use Pr. 836 Torque setting filter 2.
- · Pr. 836 Torque setting filter 2 is made valid when the RT signal turns on.

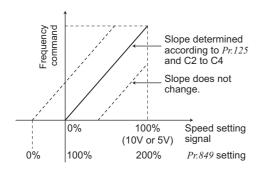

#### Offset adjustment of analog speed command input (*Pr. 849*)

- · When speed command by analog input is set, create the range where the motor remains stop to prevent malfunction at very low speed.
- On the assumption that the Pr. 849 setting 100% as 0, the offset voltage is offset as follows:

100% < *Pr. 849*...... positive side

100% > *Pr. 849.....* negative side

The offset voltage is found by the following formula.


Offset voltage = 
$$\frac{\text{Voltage at } 100\%}{(5\text{V or } 10\text{V}^{2})} \times \frac{Pr. 849 - 100}{100} [V]$$

\* According to the Pr. 73 setting

#### ♦ Parameters referred to ♦


Pr. 73 Analog input selection Refer to page 282

Pr. 125, C2 to C4 (Bias and gain of the terminal 2 frequency setting) Refer to page 288

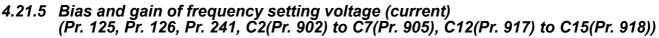

You can set the magnitude (slope) of the output frequency as desired in relation to the frequency setting signal (0 to 5V, 0 to 10V or 4 to 20mADC).

Set Pr. 73 and Pr. 267 to switch between 0 to 5VDC, 0 to 10VDC and 4 to 20mADC. (Refer to page 281)

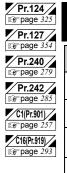

Parameter Number	Name	Initial Value	Setting Range	Description	
125	Terminal 2 frequency setting gain frequency	60Hz	0 to 400Hz	Set the frequency of terminal 2 input gain (maximum).	
126	Terminal 4 frequency setting gain frequency	60Hz	0 to 400Hz	Set the frequency of terminal 4 input gain (maximum).	
241 *2	Analog input display unit switchover	0	0	Displayed in % Select the unit of analog input display.	
C2(902) *1	Terminal 2 frequency setting bias frequency	0Hz	0 to 400Hz	Set the frequency on the bias side of terminal 2 input.	
C3(902) *1	Terminal 2 frequency setting bias	0%	0 to 300%	Set the converted % of the bias side voltage (current) of terminal 2 input.	
C4(903) *1	Terminal 2 frequency setting gain	100%	0 to 300%	Set the converted % of the gain side voltage (current) of terminal 2 input.	
C5(904) *1	Terminal 4 frequency setting bias frequency	0Hz	0 to 400Hz	Set the frequency on the bias side of terminal 4 input.	
C6(904) *1	Terminal 4 frequency setting bias	20%	0 to 300%	Set the converted % of the bias side current (voltage) of terminal 4 input.	
C7(905) *1	Terminal 4 frequency setting gain	100%	0 to 300%	Set the converted % of the gain side current (voltage) of terminal 4 input.	
C12(917) *1	Terminal 1 bias frequency (speed)	0Hz	0 to 400Hz	Set the frequency (speed) on the bias side of terminal 1 input.	
C13(917) *1	Terminal 1 bias (speed)	0%	0 to 300%	Set the converted % of the bias side voltage of terminal 1 input.	
C14(918) *1	Terminal 1 gain frequency (speed)	60Hz	0 to 400Hz	Set the frequency (speed) of terminal1 input gain (maximum).	
C15(918) *1	Terminal 1 gain (speed)	100%	0 to 300%	Set the converted % of the gain side voltage of terminal 1 input.	

(1) The relationship between analog input terminal and calibration parameter Terminal 1 functional calibration parameter

Pr. 868	Terminal function	Calibration Parameters			
Setting	reminal function	Bias setting	Gain setting		
0 (initial value)	Frequency (speed) setting auxiliary	C2(Pr. 902) Terminal 2 frequency setting bias frequency C3(Pr. 902) Terminal 2 frequency setting bias C5(Pr. 904) Terminal 4 frequency setting bias frequency C6(Pr. 904) Terminal 4 frequency setting bias	Pr. 125 Terminal 2 frequency setting gain frequency C4(Pr. 903) Terminal 2 frequency setting gain Pr. 126 Terminal 4 frequency setting gain frequency C7(Pr. 905) Terminal 4 frequency setting gain		
1	Magnetic flux command	C16(Pr.919) Terminal Ibias command (torque/magnetic flux) C17(Pr.919) Terminal Ibias (torque/magnetic flux)	C18(Pr. 920) Terminal 1 gain command (torque/magnetic flux) C19(Pr. 920) Terminal 1 gain (torque/magnetic flux)		
2	Regenerative torque limit				
3	Torque command	C16(Pr. 919) Terminal 1 bias command (torque/magnetic flux)	C18(Pr. 920) Terminal 1 gain command (torque/magnetic flux)		
4	Stall prevention operation level/ torque limit/torque command	C17(Pr. 919) Terminal 1 bias (torque/magnetic flux)	C19(Pr. 920) Terminal 1 gain (torque/magnetic flux)		
5	Forward/reverse rotation speed limit	C12(Pr. 917) Terminal 1 bias frequency (speed) C13(Pr. 917) Terminal 1 bias (speed)	C14(Pr. 918) Terminal 1 gain frequency (speed) C15(Pr. 918) Terminal 1 gain (speed)		
6	Torque bias input	C16(Pr. 919) Terminal 1 bias command (torque/magnetic flux) C17(Pr. 919) Terminal 1 bias (torque/magnetic flux)	C18(Pr. 920) Terminal 1 gain command (torque/magnetic flux) C19(Pr. 920) Terminal 1 gain (torque/magnetic flux)		
9999	<del>-</del>	_	_		


#### Terminal 4 functional calibration parameter


Pr. 858 Setting	V/F Control	Calibration Parameters			
	Advanced Magnetic Flux Vector Control	Bias setting	Gain setting		
0 (initial value)	Frequency command/speed command	C5(Pr. 904) Terminal 4 frequency setting bias frequency C6(Pr. 904) Terminal 4 frequency setting bias	Pr. 126 Terminal 4 frequency setting gain frequency C7(Pr. 905) Terminal 4 frequency setting gain		
1	Magnetic flux command	C38(Pr.932) Terminal 4 bias command (torque/magnetic flux) C39(Pr.32) Terminal 4 bias (torque/magnetic flux)	C40(Pr.933) Terminal 4 gain command (torque/magnetic flux) C41(Pr.933) Terminal 4 gain (torque/magnetic flux)		
4	Stall prevention operation level */ torque limit	C38(Pr. 932) Terminal 4 bias command (torque/magnetic flux) C39(Pr. 932) Terminal 4 bias (torque/magnetic flux)	C40(Pr. 933) Terminal 4 gain command (torque/magnetic flux) C41(Pr. 933) Terminal 4 gain (torque/magnetic flux)		
9999	—	_	_		

<sup>-:</sup> No function

The parameter number in parentheses is the one for use with the parameter unit (FR-PU04/FR-PU07). The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

<sup>\*</sup> Use Pr. 148 Stall prevention level at 0V input and Pr. 149 Stall prevention level at 10V input to adjust bias/gain of stall prevention operation level

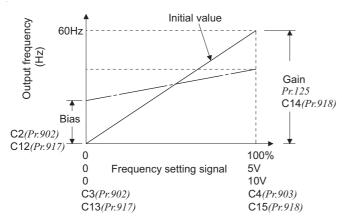

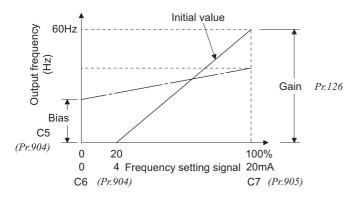

# (2) Change the frequency at maximum analog input. (Pr. 125, Pr. 126)

 Set a value in Pr. 125 (Pr. 126) when changing only the frequency setting (gain) of the maximum analog input power (current). (C2 (Pr. 902) to C7 (Pr. 905) setting need not be changed)

# (3) Analog input bias/gain calibration (*C2(Pr. 902) to C7(Pr. 905*), *C12(Pr. 917) to C15(Pr. 918)*)

- The "bias" and "gain" functions are used to adjust the relationship between the input signal entered from outside the inverter to set the output frequency, e.g. 0 to 5V, 0 to 10V or 4 to 20mADC, and the output frequency.
- Set the bias frequency of the terminal 2 input using *C2 (Pr. 902)*. (factory-set to the frequency at 0V)
- Using Pr. 125, set the output frequency relative to the frequency command voltage (current) set in Pr. 73 Analog input selection.
- Set the bias frequency of the terminal 1 input using C12 (Pr. 917). (factory-set to the frequency at 0V)
- Using *C14* (*Pr. 918*), set the output frequency relative to the frequency command voltage (current) set in *Pr. 73 Analog input selection*.
- Set the bias frequency of the terminal 4 input using *C5 (Pr. 904)*. (factory-set to the frequency at 4mA)
- Using Pr. 126, set the output frequency relative to 20mA of the frequency command current (4 to 20mA).
- There are three methods to adjust the frequency setting voltage (current) bias/gain.
  - (a) Method to adjust any point by application of voltage (current) to across the terminals 2-5 (4-5).

    ### page 290
  - (b) Method to adjust any point without application of a voltage (current) to across terminals 2-5(4-5).

    ## page 291
- (c) Adjusting only the frequency without adjusting the voltage (current). \*\* page 292\*\*

#### CAUTION

- · When the terminal 2 is calibrated to change the inclination of the set frequency, the setting of the terminal 1 is also changed.
- · When a voltage is input to the terminal 1 to make calibration, (terminal 2 (4) analog value + terminal 1 analog value) is the analog calibration value.
- · When the voltage/current input specifications were changed using *Pr. 73* and *Pr. 267*, be sure to make calibration.

#### (4) Analog input display unit changing (Pr. 241)

- · You can change the analog input display unit (%/V/mA) for analog input bias/gain calibration.
- Depending on the terminal input specification set to *Pr. 73* and *Pr. 267*, the display units of *C3 (Pr. 902), C4 (Pr. 903), C6 (Pr. 904) C7 (Pr. 905)* change as shown below.

Analog Command (terminal 2, 4) (according to <i>Pr. 73, Pr. 267</i> )	<i>Pr. 241</i> = 0 (initial value)	<i>Pr. 241</i> = 1
0 to 5V input	0 to 5V $\rightarrow$ desplayed in 0 to 100%(0.1%).	0 to 100% $\rightarrow$ desplayed in 0 to 5V(0.01V).
0 to 10V input	0 to 10V $\rightarrow$ desplayed in 0 to 100%(0.1%).	0 to 100% $\rightarrow$ desplayed in 0 to 10V(0.01V).
4 to 20mA input	0 to 20mA $\rightarrow$ desplayed in 0 to 100%(0.1%).	0 to 100% $\rightarrow$ desplayed in 0 to 20mA(0.01mA).

#### **REMARKS**

Analog input display is not displayed correctly if voltage is applied to terminal 1 when terminal 1 input specifications (0 to ±5V, 0 to ±10V) and main speed (terminal 2, terminal 4 input) specifications (0 to 5V, 0 to 10V, 0 to 20mA) differ. (For example, 5V (100%) is analog displayed when 0V and 10V are applied to terminal 2 and terminal 1 respectively in the initial status.
 In this case, set "0" (initial value is 0% display) in Pr. 241 to use.

# (5) Frequency setting voltage (current) bias/gain adjustment method

(a)Method to adjust any point by application of voltage (current) to across the terminals 2-5 (4-5).


#### Operation Display 1. Confirmation of the RUN indication and operation mode indication · The inverter must be at a stop. • The inverter must be in the PU operation mode. (Using (PU)) The parameter 2.Press (MODE) to choose the parameter setting mode. number read previously appears 3.Turn (° until 🛴 🗼 appears. C0 to C41 4. Press (SET) to display [ - - setting is enabled. 5. Turn (\*) until [ 4([ appears. Set to C4 Terminal 2 frequency Terminal 2 input Terminal 4 input setting gain. Analog voltage (current) 6. Press (SET) to display the analog voltage (current) value (%) across terminals 2-5 value (%). (across terminals 4-5) 7. Apply a 5V (20mA) voltage (current). (Turn the external potentiometer connected across terminals 2-5 (across terminals 4-5) to maximum (any position).) The value is nearly 100 (%) in the maximum position of the potentiometer = CAUTION : After performing the operation in step 6, do not touch until completion of calibration. Terminal 2 input Terminal 4 input 8.Press (SET) to set. Flicker...Parameter setting complete!! (Adjustment completed)


- \* The value is nearly 100 (%) in the maximum position of the potentiometer.
- ), you can read another parameter. By turning (
- Press (SET) to return to the [ - indication (step 4). • Press (SET) twice to show the next parameter (Pr.[]).

#### **REMARKS**

- If the frequency meter (indicator) connected to across terminals FM-SD does not indicate just 60Hz, set calibration parameter C0 FM terminal calibration. (Refer to page 257)
- If the gain and bias frequency settings are too close, an error (£ 3) may be displayed at the time of write.

(b) Method to adjust any point without application of a voltage (current) to across terminals 2-5(4-5). (To change from 4V (80%) to 5V (100%))

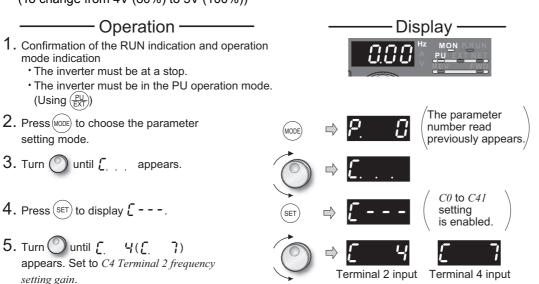

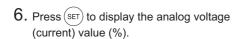



Analog voltage (current) value (%) across terminals 2-5 (across terminals 4-5)

7. Turn to set the gain voltage (%).
"0V (0mA) equals to 0%, 5V (10V, 20mA) to 100%"



The gain frequency is reached when the analog voltage (current) value across terminals 2-5 (across terminals

4-5) is 100%.

Remarks

8. Press (SET) to set.

The current setting at the instant of turning (is displayed.




is displayed.



Terminal 2 input Terminal 4 input

(SET)



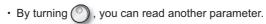

- Press (SET) to return to the [ - indication (step 4).
- Press (SET) twice to show the next parameter (Pr.[]).


#### **REMARKS**

By pressing after step 6, you can confirm the current frequency setting bias/gain setting. It cannot be confirmed after execution of step 7.

(c) Method to adjust only the frequency without adjustment of a gain voltage (current). (When changing the gain frequency from 60Hz to 50Hz)

# Operation-

- 1. Turn until P. 125 (Pr. 125) or P. 126 (Pr. 126) appears.
- 2. Press (SET) to show the currently set value. (60.00Hz)
- 3. Turn to change the set value to "50.00". (50.00Hz)
- 4. Press (SET) to set.
- Mode/monitor check
   Press (MODE) twice to choose the monitor/frequency monitor.
- Apply a voltage across the inverter terminals 2-5 (across 4-5) and turn on the start command (STF, STR).
   Operation starts at 50Hz.

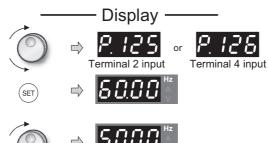



Flicker...Parameter setting complete!!



#### **REMARKS**

- Changing C4 (Pr. 903) or C7 (Pr. 905) (gain adjustment) value will not change the Pr. 20 value. The input of terminal 1 (frequency setting auxiliary input) is added to the frequency setting signal.
- For the operation procedure using the parameter unit (FR-PU04/FR-PU07), refer to the FR-PU04/FR-PU07 instruction manual.
- When setting the value to 120Hz or more, it is necessary to set *Pr. 18 High speed maximum frequency* to 120Hz or more. (*Refer to page 156*)
- · Make the bias frequency setting using calibration parameter C2 (Pr. 902) or C5 (Pr. 904). (Refer to page 289)

# **⚠** CAUTION

↑ Take care when setting any value other than "0" as the bias speed at 0V (0mA). Even if a frequency command is not given, merely turning on the start signal will start the motor at the preset frequency.

# ♦ Parameters referred to ♦

Pr. 20 Acceleration/deceleration reference frequency Refer to page 172

Pr. 73 Analog input selection, Pr. 267 Terminal 4 input selection Refer to page 282

Pr. 79 Operation mode selection Refer to page 306

# 4.21.6 Bias and gain of torque (magnetic flux) setting voltage (current) (Pr. 241, C16(Pr. 919) to C19(Pr. 920), C38 (Pr. 932) to C41 (Pr. 933)) Sensorless Vector

You can set the magnitude (slope) of the torque as desired in relation to the torque setting signal (0 to 5VDC, 0 to 10V or 4 to 20mA).

Use Pr. 73 and Pr. 267 to switch from among 0 to 5V, 0 to 10V, 4 to 20mADC. (Refer to page 282)

<b>Pr.240</b> page 279
Pr.242
C15(Pr.918)  page 288

Parameter Number	Name	Initial Value	Setting Range	Description	
241 *2	Analog input display unit	0	0	Displayed in %	Select the unit of analog input
241 2	switchover	O	1	Displayed in V/mA	display.
C16(919) *1	Terminal 1 bias command (torque/ magnetic flux)	0%	0 to 400%	Set the torque (mag terminal 1 input.	netic flux) on the bias side of
C17(919) *1	Terminal 1 bias (torque/magnetic flux)	0%	0 to 300%	Set the converted % of the bias side voltage (current) of terminal1 input.	
C18(920) *1	Terminal 1 gain command (torque/ magnetic flux)	150%	0 to 400%	Set the torque (magnetic flux) of the terminal 1 input gain (maximum).	
C19(920) *1	Terminal 1 gain (torque/magnetic flux)	100%	0 to 300%	Set the converted % of the gain side voltage of terminal1 input.	
C38(932) *1	Terminal 4 bias command (torque/ magnetic flux)	0%	0 to 400%	Set the torque (magnetic flux) on the bias side of terminal 4 input.	
C39(932) *1	Terminal 4 bias (torque/magnetic flux)	20%	0 to 300%	Set the converted % of the bias side current (voltage) of terminal 4 input.	
C40(933) *1	Terminal 4 gain command (torque/ magnetic flux)	150%	0 to 400%	Set the torque (magnetic flux) of the terminal 4 input gain (maximum).	
C41(933) *1	Terminal 4 gain (torque/magnetic flux)	100%	0 to 300%	(voltage) of terminal 4 input.	

<sup>\*1</sup> The parameter number in parentheses is the one for use with the parameter unit (FR-PU04/FR-PU07).

## (1) Change functions of analog input terminal

In the initial setting status, terminal 1 and terminal 4 used for analog input are respectively set to speed setting auxiliary (speed limit auxiliary) and speed command (speed limit). To use an analog input terminal as torque command, torque limit input or magnetic flux command input, set *Pr. 868 Terminal 1 function assignment* and *Pr. 858 Terminal 4 function assignment* to change functions. (Refer to page 281)

#### (2) The relationship between analog input terminal and calibration parameter

Terminal 1 functional calibration parameter

Pr. 868	Terminal	Calibration	Parameters	
Setting	function	Bias setting	Gain setting	
0 (initial value)	Frequency (speed) setting auxiliary	C2(Pr. 902) Terminal 2 frequency setting bias frequency C3(Pr. 902) Terminal 2 frequency setting bias C5(Pr. 904) Terminal 4 frequency setting bias frequency C6(Pr. 904) Terminal 4 frequency setting bias	Pr. 125 Terminal 2 frequency setting gain frequency C4(Pr. 903) Terminal 2 frequency setting gain Pr. 126 Terminal 4 frequency setting gain frequency C7(Pr. 905) Terminal 4 frequency setting gain	
1	Magnetic flux command	C16(Pr.919) Terminal Ibias command (torque/magnetic flux) C17(Pr.919) Terminal Ibias (torque/magnetic flux)	C18(Pr. 920) Terminal 1 gain command (torque/magnetic flux) C19(Pr. 920) Terminal 1 gain (torque/magnetic flux)	
2	Regenerative torque limit			
3	Torque command	C16(Pr. 919) Terminal 1 bias command (torque/magnetic flux)	C18(Pr. 920) Terminal 1 gain command (torque/magnetic flux)	
4	Stall prevention operation level/ torque limit/torque command	C17(Pr. 919) Terminal 1 bias (torque/magnetic flux)	C19(Pr. 920) Terminal 1 gain (torque/magnetic flux)	
5	Forward/reverse rotation speed limit	C12(Pr. 917) Terminal 1 bias frequency (speed) C13(Pr. 917) Terminal 1 bias (speed)	C14(Pr. 918) Terminal 1 gain frequency (speed) C15(Pr. 918) Terminal 1 gain (speed)	
6	6 Torque bias input C16(Pr. 919) Terminal 1 bias command (torque/magnetic flux) C17(Pr. 919) Terminal 1 bias (torque/magnetic flux)		C18(Pr. 920) Terminal 1 gain command (torque/magnetic flux) C19(Pr. 920) Terminal 1 gain (torque/magnetic flux)	
9999	<u> </u>	_	_	


<sup>\*2</sup> The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection* .


#### • Terminal 4 functional calibration parameter

D 050	V/F Control	Calibration Parameters			
Pr. 858 Setting	Advanced Magnetic Flux Vector Control	Bias setting	Gain setting		
0 (initial value)	(initial command/speed CS(Pr. 904) Terminal 4 frequency setting bias frequency		Pr. 126 Terminal 4 frequency setting gain frequency C7(Pr. 905) Terminal 4 frequency setting gain		
1 Magnetic flux command		C38(Pr.932) Terminal 4 bias command (torque/magnetic flux) C39(Pr.32) Terminal 4 bias (torque/magnetic flux)	C40(Pr.933) Terminal 4 gain command (torque/magnetic flux) C41(Pr.933) Terminal 4 gain (torque/magnetic flux)		
		C38(Pr. 932) Terminal 4 bias command (torque/magnetic flux) C39(Pr. 932) Terminal 4 bias (torque/magnetic flux)	C40(Pr. 933) Terminal 4 gain command (torque/magnetic flux) C41(Pr. 933) Terminal 4 gain (torque/magnetic flux)		
9999	_	_	_		

<sup>- :</sup> No function

Use Pr. 148 Stall prevention level at 0V input and Pr. 149 Stall prevention level at 10V input to adjust bias/gain of stall prevention operation level.

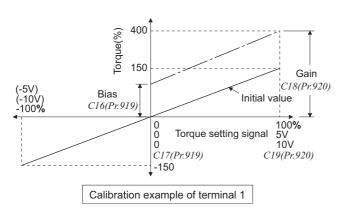

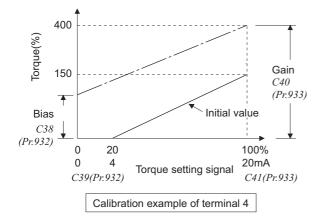

# (3) Change the torque at maximum analog input. (C18(Pr. 920), C40(Pr. 933))

· Set *C18(Pr. 920)*, *C40(Pr. 933)* when changing only torque setting (gain) of the maximum analog input voltage (current).

# (4) Calibration of analog input bias and gain (C16(Pr. 919) to C19(Pr. 920), C38 (Pr. 932) to C41 (Pr. 933))

- The "bias" and "gain" functions are used to adjust the relationship between the input signal entered from outside the inverter to set the torque command and torque limit, e.g. 0 to 5V, 0 to 10V or 4 to 20mADC, and the torque.
- Set the bias torque of terminal 1 input in C16 (Pr. 919). (It is factory-set to the torque at OV)
- Set the torque in C18 (Pr. 920) for the torque command voltage set with Pr. 73 Analog input selection. (initial value is 10V)
- · Set the bias torque of terminal 4 input in *C38 (Pr. 932)* . (It is factory-set to the torque at 4mA)
- Set the torque in *C40 (Pr. 933)* for 20mA of the torque command current (4 to 20mA).
- There are the following three methods to adjust the torque setting voltage (current) bias and gain.
  - a) Method to adjust any point without application of voltage (current) to across terminals 1-5(4-5)
     page 295
- b) Method to adjust any point without application of voltage (current) to across terminals 1-5(4-5)

  ## page 296
- c) Method to adjust torque only without adjustment of voltage (current) \*page 297

#### CAUTION

· When voltage/current input specifications were switched using Pr. 73 and Pr. 267, perform calibration without fail.


# (5) Analog input display unit changing (Pr. 241)

- You can change the analog input display unit (%/V/mA) for analog input bias/gain calibration.
- · Display unit of C17 (Pr. 919), C19 (Pr. 920), C39 (Pr. 932), C41 (Pr. 933) changes as follows accrding to the terminal input specifications set in Pr. 73 and Pr. 267.

Analog Command (terminal 1,4) (according to <i>Pr. 73, Pr. 267</i> )	<i>Pr.241</i> = 0 (initial value)	<i>Pr.241</i> = 1
0 to 5V input	0 to 5V $\rightarrow$ displayed in 0 to 100%(0.1%)	0 to 100% → displayed in 0 to 5V(0.01V)
0 to 10V input	0 to 10V $\rightarrow$ displayed in 0 to 100%(0.1%)	0 to 100% → displayed in 0 to 10V(0.01V)
4 to 20mA input	0 to 20mA $\rightarrow$ displayed in 0 to 100%(0.1%)	0 to 100% $\rightarrow$ displayed in 0 to 20mA(0.01mA)

## (6) Adjustment method of torque setting voltage (current) bias and gain

a) Method to adjust any point without application of a voltage (current) to across terminals 1-5(4-5)

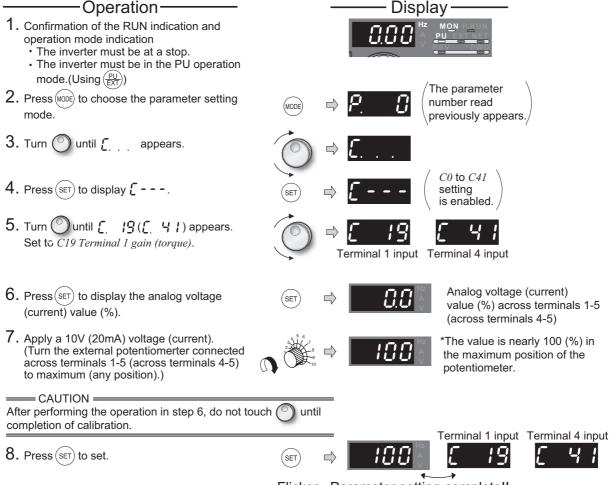


Flicker...Parameter setting complete!! (Adjustment completed)

- By turning , you can read another parameter.
- Press (SET) to return to the [ - indication (step 4).
- Press (SET) twice to show the next parameter (Pr.[].).

#### **REMARKS**

An error at writing (¿ ⁻ ȝ) may appear if torque setting value of gain and bias are too close.

b) Method to adjust any point without application of a voltage (current) to across terminals 1-5(4-5) (To change from 8V (80%) to 10V (100%))

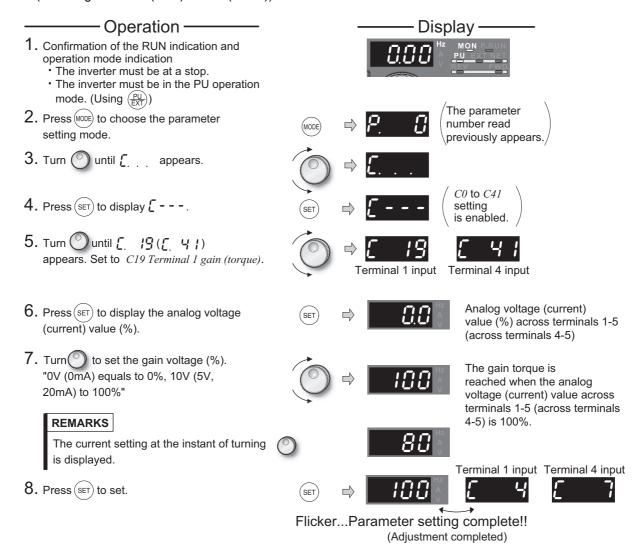

- By turning O, you can read another parameter.
- Press (SET) to return to the [ - indication (step 4).
- Press(SET) twice to show the next parameter (Pr.∑L).

#### **REMARKS**

You can check the current torque setting bias/gain setting by pressing O after step 6.


You can not check after performing operation in step 7.

c)Method to adjust torque only without adjustment of gain voltage (current) (when changing gain torque from 150% to 130%)

# —Operation-

- 1. Turn until [. 18 (Pr.920) or [. 40] (Pr.933) appears.
- 2. Press (SET) to show the currently set value. (150%)
- 3. Turn to change the set value to "1300" (130.0%)
- 4. Press (SET) to set.
- 5. Mode/monitor check

  Press (MODE) twice to choose the monitor/frequency monitor.
- Apply a voltage across the inverter terminals 1-5 (across 4-5) and turn on the start command (STF, STR).
   Operation starts with 130% torque.

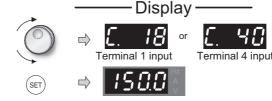





Flicker...Parameter setting complete!!



#### **REMARKS**

- For operation from the parameter unit (FR-PU04/FR-PU07), refer to the instruction manual of the FR-PU04/FR-PU07.
- · Set bias torque setting using calibration parameter C16 (Pr. 919) or C38 (Pr. 932). (Refer to page 294)

# **<b> ∴** CAUTION

↑ Take care when setting any value other than "0" as the bias torque at 0V (0mA). Torque is applied to the motor by merely tuning on the start signal without torque command.

# ♦ Parameters referred to ♦

Pr. 20 Acceleration/deceleration reference frequency 👺 Refer to page 172

Pr. 73 Analog input selection, Pr. 267 Terminal 4 input selection 👺 Refer to page 282

Pr. 79 Operation mode selection Refer to page 306

Pr. 858 Terminal 4 function assignment, Pr. 868 Terminal 1 function assignment Refer to page 281


# 4.21.7 4mA input check of current input (Pr. 573)



When inputting 4 to 20mA current to terminal 2 or terminal 4, decrease in analog current input is detected to enable continuous operation even if input has decreased.

Parameter Number	Name	Initial Value	Setting Range	Description
573	4mA input check selection	9999	1	When the current input drops to or below 2mA, the LF signal is output and inverter continues operation at the frequency (average value) just before current reaches 2mA.
			9999	4mA input is not checked.

The above parameters can be set when Pr. 160 User group read selection = "0". (Refer to page 304.)

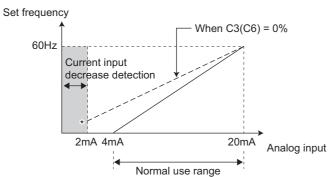


\* When Pr.573 = "1", input decrease is detected (LF signal output) even if the analog input value to bias frequency of terminal 2 or terminal 4 is set to 2mA or less using C2 (Pr. 902) or C5 (Pr. 904) and the value is not as bias frequency settings.


# (1) Operation at a current input decrease continues (Pr. 573 = "1")

- When the input current of terminal 4 (terminal 2) falls 2mA or below, output minor fault signal (LF) is output.
- When the current falls below 2mA, the output frequency (average value) before detection is retained and operation at the retained frequency continues.
- When the current input increases above 3mA, the LF signal output is turned off and the inverter operates according to the current input.
- For the LF signal, set "98 (positive logic) or 198 (negative logic)" in Pr. 190 to Pr. 196 (output terminal function selection) and assign functions to the output terminal.
- Since turning off the start command clears the retained frequency, the inverter does not operate at the retained frequency even if restarted.

#### During external operation (Pr. 573=1)

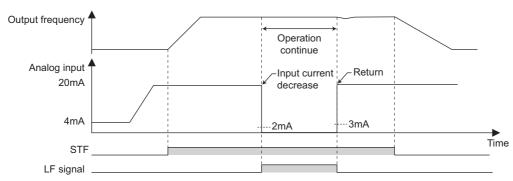

#### During PID control (reverse action) (Pr. 573=1)

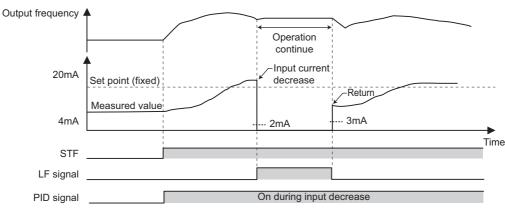

= CAUTION

<sup>·</sup> When terminal assignment is changed using *Pr. 190 to Pr. 196 (output terminal function selection)*, the other functions may be affected. Please make setting after confirming the function of each terminal.

# (2) Function related to 4mA input check

Function	Operation (Pr. 573 = 1)		
Minimum frequency	Even if the input current decreases, minimum frequency setting clamp is valid.	156	
Multi-speed operation	Operation by multiple speed signal has precedence even if input current decreases. (Frequency is not retained when the input current decreases.) Operation stops when a multi-speed signal turns off.		
Jog operation	The Jog signal has precedence. (Frequency is not retained when the input current decreases.)  Operation stops when the jog signal is turned off during decrease in input current. PU/jog operation is enabled during PID control.  At this time, PU/jog operation has precedence during decrease in input current.		
MRS	Output is shut off by the MRS signal even if input current decreases. (The inverter stops when the MRS signal is turned off.)	230	
Remote setting	The retained frequency will not change even if remote acceleration/deceleration and clear are performed during decrease in input current. Reflected at restoration.		
Retry	When retry was successful at error occurrence during decrease in input current, retained frequency was not cleared and operation continues.		
Added compensation, override function	Operation of added compensation (terminal 1) and override compensation (terminal 2) are invalid during decrease in input current.		
Input filter time constant	The value before filtering is detected. When input current decreases, frequency after filtering (average value) is retained.	287	
Forward/reverse rotation prevention	Motor rotation direction can be restricted independently of 4mA input check setting.	304	
PID control	Although PID operation is stopped when input current decreases, the X14 signal remains on. (PID operation is valid.)	354	
Power failure stop	Even if input current decreases when undervoltage or power failure occurs, the motor stops according to the setting of power-failure deceleration stop function		
Pump function	If auxiliary motor switchover conditions of pump function is satisfied even when input current decreases, motor connection/release operation is performed.		
Switch-over	When the switchover function is operated, frequency is the same as that of the retained frequency.  Note that if 4mA input is made invalid once in switchover mode, the frequency is not retained next time.	306	

# - ♦ Parameters referred to ♦

Pr. 73 Analog input selection Refer to page 282
Pr. 267 Terminal 4 input selection Refer to page 282

# 4.22 Misoperation prevention and parameter setting restriction

Purpose	Parameter that m	Parameter that must be Set		
Limit reset function Make alarm stop when PU is disconnected Stop from PU	Reset selection/disconnected PU detection/PU stop selection	Pr. 75	300	
Prevention of parameter rewrite	Parameter write disable selection	Pr. 77	303	
Prevention of reverse rotation of the motor	Reverse rotation prevention selection	Pr. 78	304	
Display necessary parameters	Display of applied parameters and user group function	Pr. 160, Pr. 172 to Pr. 174	304	
Control of parameter write by communication	EEPROM write selection	Pr. 342	326	

# 4.22.1 Reset selection/disconnected PU detection/PU stop selection (Pr. 75)



You can select the reset input acceptance, disconnected PU (FR-DU07/FR-PU04/FR-PU07) connector detection function and PU stop function.

Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description
75	Reset selection/disconnected	14	02150 (01100) or less	0 to 3, 14 to 17	For the initial value, reset always enabled, without disconnected PU detection, and
73	PU detection/PU stop selection	14	02880 (01440) or more	0 to 3, 14 to 17, 100 to 103, 114 to117	with PU stop function are set.

·The Pr. 75 value can be set any time. Also, if parameter (all) clear is executed, this setting will not return to the initial value.

Pr. 75 Setting	Reset Selection	Disconnected PU Detection	PU Stop Selection	Reset Limit
0	Reset input always enabled	If the PU is disconnected,		
1	Enabled only when the protective function is activated	operation will be continued.	Pressing (STOP) decelerates	
2	Reset input always enabled	When the PU is	the motor to a stop only in	
3	Enabled only when the protective function is activated	disconnected, the inverter output is shut off.	the PU operation mode.	
14 (initial value)	Reset input always enabled	If the PU is disconnected, operation will be continued.	Pressing STOP decelerates	Not function
15	Enabled only when the protective function is activated	operation will be continued.	the motor to a stop in any of the PU, external and communication operation	
16	Reset input always enabled	When the PU is		
17	Enabled only when the protective function is activated	disconnected, the inverter output is shut off.	modes.	
100 *	Reset input always enabled	If the PU is disconnected,		
101 *	Enabled only when the protective function is activated	operation will be continued.	Pressing STOP decelerates	
102 *	Reset input always enabled	When the PU is	the motor to a stop only in	
103 *	Enabled only when the protective function is activated	disconnected, the inverter output is shut off.	the PU operation mode.	Function
114 *	Reset input always enabled	If the PU is disconnected.	CTAR	Function
115 *	Enabled only when the protective function is activated	operation will be continued.	Pressing RESET decelerates the motor to a stop in any of	
116 *	Reset input always enabled	When the PU is	the PU, external and	
117 *	Enabled only when the protective function is activated	disconnected, the inverter output is shut off.	communication operation modes.	

<sup>\*</sup> Available with the FR-A720-02880 (FR-A740-01440) or more.

#### (1) Reset selection

- · You can select the operation timing of reset function (RES signal, reset command through communication) input.
- When *Pr.* 75 is set to any of "1, 3, 15, 17, 101, 103, 115, 117", a reset can be input only when the protective function is activated.

#### = CAUTION

- When the reset signal (RES) is input during operation, the motor coasts since the inverter being reset shuts off the output.
   Also, the cumulative value of the electronic thermal relay function and regenerative brake duty is cleared.
- · The reset key of the PU is valid only when the protective function is activated, independently of the Pr. 75 setting

#### (2) Disconnected PU detection

- This function detects that the PU (FR-DU07/FR-PU04/FR-PU07) has been disconnected from the inverter for longer than 1s and causes the inverter to provide an alarm output (E.PUE) and come to an alarm stop.
- When Pr. 75 is set to any of "0, 1, 14, 15, 100, 101, 114, 115", operation is continued if the PU is disconnected.

#### = CAUTION

- · When the PU has been disconnected since before power-on, it is not judged as an alarm.
- · To make a restart, confirm that the PU is connected and then reset the inverter.
- The motor decelerates to a stop when the PU is disconnected during PU jog operation with *Pr.* 75 set to any of "0, 1, 14, 15" (operation is continued if the PU is disconnected).
- When RS-485 communication operation is performed through the PU connector, the reset selection/PU stop selection function is valid but the disconnected PU detection function is invalid.

#### (3) PU stop selection

- In any of the PU operation, external operation and network operation modes, the motor can be stopped by pressing
  of the PU.
- When the inverter is stopped by the PU stop function, " 🗗 💃 " is displayed but an alarm is not output. An alarm output is not provided.
- When *Pr.* 75 is set to any of "0 to 3, 100 to 103", deceleration to a stop by (RESET) is valid only in the PU operation mode.


#### **REMARKS**

The motor will also decelerate to a stop (PU stop) when (RSSE) is input during operation in the PU mode through RS-485 communication with *Pr. 551 PU mode operation command source selection* set to "1" (PU mode RS-485 terminals).

# (4) Restarting method when stop was made by pressing operation



# from the PU during external

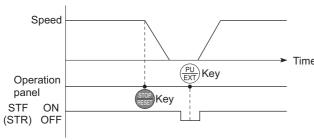

Stop/restart example for external operation

#### (a) When operation panel (FR-DU07) is used

- 1)After the motor has decelerated to a stop, turn off the STF or STR signal.
- 2)Press (PU) to display PU.....( F 5 canceled)
- 3)Press  $\frac{PU}{EXT}$  to return to  $\frac{EXT}{EXT}$ .
- 4)Turn on the STF or STR signal.

## (b) Connection of the parameter unit (FR-PU04/FR-PU07)

- 1)After the motor has decelerated to a stop, turn off the STF or STR signal.
- 2)Press EXT .----( 📮 🕻 canceled)
- 3)Turn on the STF or STR signal.
- The motor can be restarted by making a reset using a power supply reset or RES signal.

#### = CAUTION

· If Pr. 250 Stop selection is set to other than "9999" to select coasting to a stop, the motor will not be coasted to a stop but decelerated to a stop by the PU stop function during external operation. To restart after the inverter is stopped by PU with PLC function, reset using a power supply rest or RES signal. (sending stop signal from GX Developer, can also perform the reset.)

# CAUTION

♠ Do not reset the inverter with the start signal on. Doing so will cause the inverter to start immediately after a reset, leading to hazardous conditions.

# (5) Reset limit

- Setting can be made for the FR-A720-02880 (FR-A740-01440) or more.
- You can set Pr. 75 to disable reset operation until the thermal cumulative amount reaches 0 when a thermal trip (THM, THT) or an overcurrent trip (OC1 to OC3) occurs consecutively twice.
- When Pr. 75 = "100 to 103, 114 to 117", reset limit is made valid.

#### **REMARKS**

When the power-on reset (no control power is supplied) is made, the thermal cumulative amount is cleared.

#### → Parameters referred to ◆

Pr. 250 Stop selection Refer to page 209

# 4.22.2 Parameter write diable selection (Pr. 77)

You can select whether write to various parameters can be performed or not. Use this function to prevent parameter values from being rewritten by misoperation.

	Pr.76
	© page 270
1	Pr.78

Parameter Number	Name	Initial Value	Setting Range	Description
77	Parameter write selection	0	0	Write is enabled only during a stop.
			1	Parameter write is not enabled.
			2	Parameter write is enabled in any operation mode regardless of operation status.

Pr. 77 can be always set independently of the operation mode and operation status.

# (1) Write parameters only at a stop (setting "0", initial value)

- · Parameters can be written only during a stop in the PU operation mode.
- The shaded parameters in the parameter list (page 71) can always be written, regardless of the operation mode and operation status. However, Pr. 72 PWM frequency selection and Pr. 240 Soft-PWM operation selection can be written during operation in the PU operation mode, but cannot be written in external operation mode.

## (2) Disable parameter write (setting "1")

- Parameter write is not enabled. (Reading is enabled.)
- · Parameter clear and all parameter clear cannot be performed, either.
- The parameters given on the right can be written even if Pr. 77 = "1".

Parameter Number Name		
22	Stall prevention operation level	
75	Reset selection/disconnected PU detection/PU stop selection	
77	Parameter write selection	
79	Operation mode selection	
160	User group read selection	

# (3) Write parameters during operation (setting "2")

- · Parameters can always be written.
- The following parameters cannot be written during operation if Pr: 77 = "2". Stop operation when changing their parameter settings.

Parameter Number	Name		
19	Base frequency voltage		
23	Stall prevention operation level compensation factor at double speed		
48	Second stall prevention operation current		
49	Second stall prevention operation frequency		
60	Energy saving control selection		
61	Reference current		
66	Stall prevention operation reduction starting frequency		
71	Applied motor		
79	Operation mode selection		
80	Motor capacity		
81	Number of motor poles		
82	Motor excitation current		
83	Motor rated voltage		
84	Rated motor frequency		
90 to 94	(Motor constants)		
95	Online auto tuning selection		
96	Auto tuning setting/status		
100 to 109	(Adjustable 5 points V/F parameter)		
114	Third stall prevention operation current		
115	Thrid stall prevention operation frequency		
135 to 139	(Parameter for commercial power-supply switchover sequence)		
178 to 196	(I/O terminal function selection)		
255	Life alarm status display		
256	Inrush current limit circuit life display		

Parameter Number	Name		
257	Control circuit capacitor life display		
258	······································		
291	Pulse train I/O selection		
292	Automatic acceleration/deceleration		
293	Acceleration/deceleration separate selection		
329	Digital input unit selection (Parameter for the plug-in option FR-A7AX)		
343	Communication error count		
450	Second applied motor		
451	Second motor control method selection		
453	Second motor capacity		
454	Number of second motor poles		
458 to 462	(Second motor constant)		
463	Second motor auto tuning setting/status		
541	Frequency command sign selection (CC-Link)		
341	(Parameter for the plug-in option FR-A7NC)		
563	Energization time carrying-over times		
564	Operating time carrying-over times		
570	Multiple rating setting		
574	Second motor online auto tuning		
800	Control method selection		
819	Easy gain tuning selection		
858	Terminal 4 function assignment		
859 Torque current			
860	Second motor torque current		
868	Terminal 1 function assignment		

#### ◆ Parameters referred to ◆

Pr. 79 Operation mode selection Refer to page 306

# 4.22.3 Reverse rotation prevention selection (Pr. 78)



This function can prevent reverse rotation fault resulting from the incorrect input of the start signal.



Parameter Number	Name	Initial Value	Setting Range	Description
78	Reverse rotation prevention	0	0	Both forward and reverse rotations allowed
78	selection		1	Reverse rotation disabled
			2	Forward rotation disallowed

- · Set this parameter when you want to limit the motor rotation to only one direction.
- This parameter is valid for all of the reverse rotation and forward rotation keys of the operation panel (FR-DU07), parameter unit (FR-PU04/FR-PU07), start signals (STF, STR signals) via external terminals, and the forward and reverse rotation commands through communication.

# 4.22.4 Display of applied parameters and user group function (Pr. 160, Pr. 172 to Pr. 174)



Parameter which can be read from the operation panel and parameter unit can be restricted.

Parameter Number	Name	Initial Value	Setting Range	Description
		0	9999	Only the simple mode parameters can be displayed.
160	User group read selection		0	The simple mode and extended parameters can be displayed
			1	Only parameters registered in the user group can be displayed.
172	User group registered display/ batch clear	0	(0 to 16)	Displays the number of cases registered as a user group. (Reading only)
	batch clear		9999	Batch clear the user group registration
173 *1	User group registration	9999	0 to 999, 9999	Set the parameter numbers to be registered to the user group.
174 *1	User group clear	9999	0 to 999, 9999	Set the parameter numbers to be cleared from the user group.

<sup>\*1</sup> The values read from Pr. 173 and Pr. 174 are always "9999".

# (1) Display of simple mode parameters and extended parameters (Pr. 160)

- · When Pr. 160 = "9999", only the simple mode parameters can be displayed on the operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07). (Refer to the parameter list, pages 71 to 84, for the simple mode parameters.)
- · In the initial setting (*Pr. 160=*"0") status, simple mode parameters and extended parameters can be displayed.

#### **REMARKS**

- · When a plug-in option is fitted to the inverter, the option parameters can also be read.
- When reading the parameters using the communication option, all parameters (simple mode, extended mode, parameters for options) can be read regardless of the *Pr. 160* setting.
- When reading the parameters using the RS-485 terminals, all parameters can be read reagrdless of the Pr. 160 setting by setting Pr.550 NET mode operation command source selection and Pr. 551 PU mode operation command source selection.

Pr. 551	Pr. 550	Pr. 160 Valid/Invalid
1 (RS-485)	_	Valid
	0(OP)	Valid
2(PU)	1(RS-485)	Invalid (all readable)
(initial value)	, I 9999 I	With OP: valid
3(USB)		Without OP: invalid (all readable)

OP indicates a communication option


<sup>·</sup> Pr. 15 Jog frequency, Pr. 16 Jog acceleration/deceleration time Pr. 991 PU contrast adjustment are displayed as simple mode parameters when the parameter unit (FR-PU04/FR-PU07) is mounted.

## (2) User group function (*Pr. 160, Pr. 172 to Pr. 174*)

- The user group function is designed to display only the parameters necessary for setting.
- From among all parameters, a maximum of 16 parameters can be registered to a user group. When Pr. 160 is set to "1", only the parameters registered to the user group can be accessed. (Reading of parameters other than the user group registration is disabled.)
- To register a parameter to the user group, set its parameter number to Pr. 173.
- To delete a parameter from the user group, set its parameter number to Pr. 174. To batch-delete the registered parameters, set Pr. 172 to "9999".

# (3) Registration of parameter to user group (Pr. 173)


When registering Pr. 3 to user group

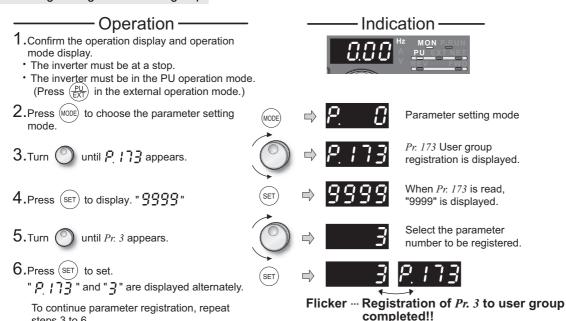

#### (4) Deletion of parameter from user group (Pr. 174)

When deleting Pr. 3 from user group

steps 3 to 6.

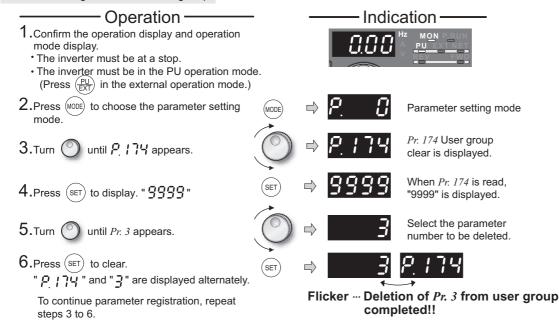

#### **REMARKS**

- Pr. 77, Pr. 160 and Pr. 991 can always be read, independently of the user group setting.
- Pr. 77, Pr. 160 and Pr. 172 to Pr. 174 cannot be registered to the user group.
- When *Pr. 174* or *Pr. 175* is read, "9999" is always displayed. Although "9999" can be written, no function is available.
- When any value other than "9999" is set to Pr. 172, no function is available.

#### ◆ Parameters referred to ◆

Pr. 550 NET mode operation command source selection Refer to page 315 Pr. 551 PU mode operation command source selection Refer to page 315



# 4.23 Selection of operation mode and operation location

Purpose	Parameter that must	Refer to Page	
Operation mode selection	Operation mode selection	Pr. 79	306
Started in network operation mode	Operation mode at power on	Pr. 79, Pr. 340	314
Selection of control location	Sslection of control source, speed command source and control location during communication operation	Pr. 338, Pr. 339, Pr. 550, Pr. 551	315

# 4.23.1 Operation mode selection (Pr. 79)




Used to select the operation mode of the inverter.

Mode can be changed as desired between operation using external signals (external operation), operation from the PU (FR-DU07/FR-PU07/FR-PU04), combined operation of PU operation and external operation (external/PU combined operation, and network operation (when RS-485 terminals or a communication option is used).

Parameter Number	Name	Initial Value	Setting Range	Description		LED Indication ■: Off □: On				
						0		Use external/PU switchover mod between the PU and external ope At power on, the inverter is in the mode.	eration mode.	External operation mode  EXT  PU operation mode
			1	Fixed to PU operation mode		PUEXINET				
			2	Fixed to external operation mode Operation can be performed by external and Net operation mode	switching between the	External operation mode  EXT  NET operation mode				
				External/PU combined operation	mode 1					
				Running frequency	Start signal					
			3	PU (FR-DU07/FR-PU04/FR-PU07) setting or external signal input (multi-speed setting, across terminals 4-5 (valid when AU signal turns on)).	External signal input (terminal STF, STR)					
70	Operation			External/PU combined operation mode 2		PU EXI				
79	mode selection	6	Running frequency	Start signal						
			4	External signal input (Terminal 2, 4, 1, JOG, multi- speed selection, etc.)	Input from the PU (FR-DU07/FR-PU04/FR-PU07)					
			6	Switch-over mode Switch among PU operation, exterports operation while keeping the same	e operation status.	External operation mode  EXT  NET operation mode				
			7	External operation mode (PU operation Mode)  Operation mode can be switch mode.  (output stop during external operation mode can not be operation mode)	hed to the PU operation peration)	PU operation mode  External operation mode				

The above parameters can be changed during a stop in any operation mode.

# (1) Operation mode basics

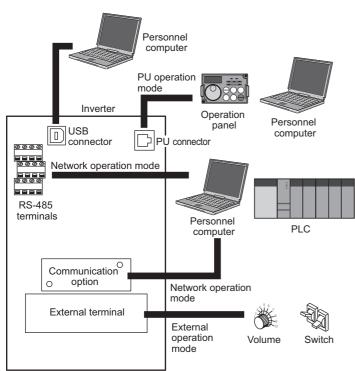


- The operation mode is to specify the source of inputting the start command and set frequency of the inverter.
- Select the "external operation mode" when performing operation by basically using the control circuit terminals and providing potentiometers, switches, etc. externally, select the "PU operation mode" when inputting the start command and frequency setting through communication from the operation panel (FR-DU07), parameter unit (FR-PU04/FR-PU07), PU connector, or select the "network operation mode (NET operation mode)" when using the RS-485 terminals or communication option.
- The operation mode can be selected from the operation panel or with the communication instruction code.

#### **REMARKS**

- · Either "3" or "4" may be set to select the PU/external combined operation, and these settings differ in starting method.
- In the initial setting, the stop function by RESET of the PU (FR-DU07/FR-PU07) (PU stop selection) is valid also in other than the PU operation mode. (*Pr. 75 Reset selection/disconnected PU detection/PU stop selection. Refer to page 300.*)

## (2) Operation mode switching method

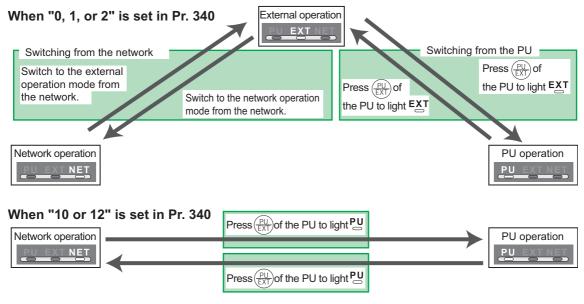

#### REMARKS

 $\cdot\;$  For switching of operation by external terminals, refer to the following:

PU operation external interlock signal (X12 signal) \* page 311

PU-external operation switch-over signal (X16) Page 312


PU-NET operation switchover signal (X65), External-NET operation switchover signal (X66) 👺 page 313

Pr. 340 Communication startup mode selection page 314




#### (3) Operation mode selection flow

In the following flowchart, select the basic parameter setting and terminal connection related to the operation mode.

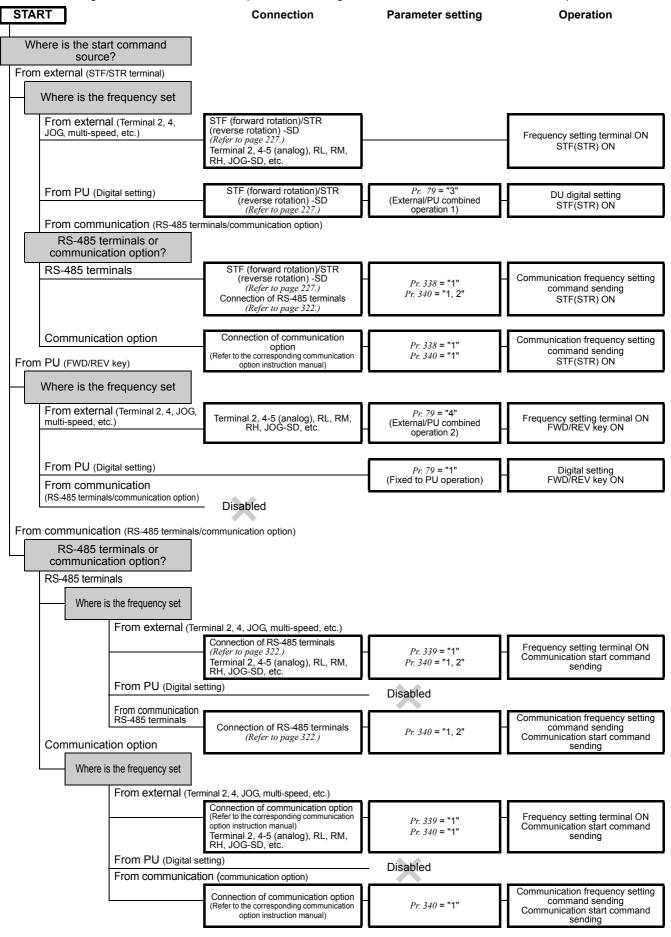

## (4) External operation mode (setting "0" (initial value), "2")

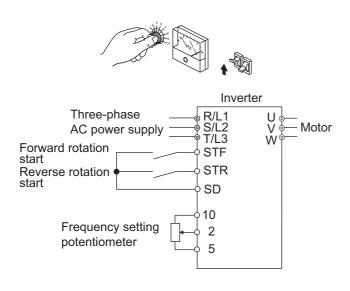


- Select the external operation mode when performing operation by providing a frequency setting potentiometer, start switch, etc. externally and connecting them to the control circuit terminals of the inverter.
- · Basically, parameter changing is disabled in external operation mode. (Some parameters can be changed. Refer to *page 71* for the parameter list.)
- When "0" or "2" is selected for *Pr. 79*, the inverter enters the external operation mode at power on. (When using the network operation mode, refer to *page 314*)
- When parameter changing is seldom necessary, setting
   "2" fixes the operation mode to external operation mode. When frequent parameter changing is necessary, setting
   "0" (initial value) allows the operation mode to be changed easily to PU operation mode by

pressing of the operation panel. When you switched to PU operation mode, always return to external operation mode.

 The STF and STR signal are used as a start command, and the terminal 2, 4, multi-speed setting, JOG signal, etc. are used as frequency setting.

## (5) PU operation mode (setting "1")



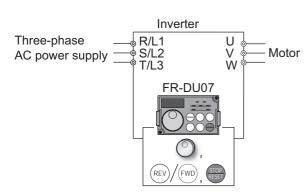


- Select the PU operation mode when performing operation by only the key operation of the operation panel (FR-DU07) or parameter unit (FR-PU04/FR-PU07). Also select the PU operation mode when making communication using the PU connector.
- When "1" is selected for Pr. 79, the inverter enters the PU operation mode at power on. You cannot change to the other operation mode.
- The setting dial of the operation panel can be used for setting like a potentiometer. (*Pr. 161 Frequency setting/key lock operation selection, refer to page 385.*)
- When PU operation mode is selected, the PU operation mode signal (PU) can be output.

For the terminal used for the PU signal output, assign the function by setting "10 (positive logic) or 110 (negative logic)" in any of *Pr. 190 to Pr. 196 (output terminal function selection)*.





# (6) PU/external combined operation mode 1 (setting "3")

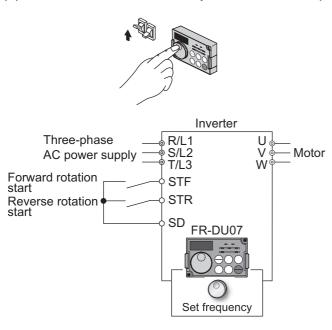

- · Select the PU/external combined operation mode 1 when making frequency setting from the operation panel (FR-DU07) or parameter unit (FR-PU04/FR-PU07) and inputting the start command with the external start switch.
- · Select "3" for *Pr. 79*. You cannot change to the other operation mode.
- When a frequency is input from the external signal by multi-speed setting, it has a higher priority than the frequency setting of the PU. When AU is on, the terminal 4 is used.

#### (7) PU/external combined operation mode 2 (setting "4")

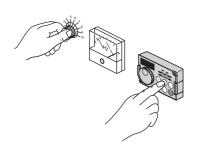

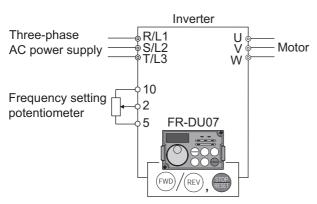

- Select the PU/external combined operation mode 2 when making frequency setting from the external potentiometer, multi-speed or JOG signal and inputting the start command by key operation of the operation panel (FR-DU07) or parameter unit (FR-PU04/FR-PU07).
- · Select "4" for *Pr. 79*. You cannot change to the other operation mode.



#### (8) Switch-over mode (setting "6")

· While continuing operation, you can switch between the PU operation, external operation and network operation (when RS-485 terminals or communication option is used).

Operation Mode Switching	Switching Operation/Operating Status
External operation → PU operation	Select the PU operation mode with the operation panel or parameter unit.  Rotation direction is the same as that of external operation.  The frequency set with the volume (frequency setting potentiometer) or like is used unchanged. (Note that the setting will disappear when power is switched off or the inverter is reset.)
External operation → NET operation	Send the mode change command to network operation mode through communication.  Rotation direction is the same as that of external operation.  The value set with the setting volume (frequency setting potentiometer) or like is used unchanged. (Note that the setting will disappear when power is switched off or the inverter is reset.)
PU operation → external operation	Press the external operation key of the operation panel, parameter unit.  The rotation direction is determined by the input signal of the external operation.  The set frequency is determined by the external frequency setting signal.
PU operation → NET operation	Send the mode change command to network operation mode through communication.  Rotation direction and set frequency are the same as those of PU operation.
NET operation → external operation	Command to change to external mode is transmitted by communication.  Rotation direction is determined by the external operation input signal.  The set frequency is determined by the external frequency setting signal.
NET operation → PU operation	Select the PU operation mode with the operation panel or parameter unit.  The rotation direction and set frequency signal in network operation mode are used unchanged.

#### (9) PU operation interlock (setting "7")

- The PU operation interlock function is designed to forcibly change the operation mode to external operation mode when the PU operation interlock signal (X12) input turns off. This function prevents the inverter from being inoperative by the external command if the mode is accidentally left unswitched from the PU operation mode.
- · Set "7" (PU operation interlock) in Pr. 79.
- · For the terminal used for X12 signal (PU operation interlock signal) input, set "12" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function. (Refer to *page 227* for *Pr. 178 to Pr. 189*.)
- · When the X12 signal has not been assigned, the function of the MRS signal switches from MRS (output stop) to the PU operation interlock signal.

X12 (MRS)	Functio	n/Operation	
Signal	Operation mode	Parameter write	
ON	Operation mode (external, PU, NET) switching enabled Output stop during external operation	Parameter write enabled ( <i>Pr. 77 Parameter write selection</i> , depending on the corresponding parameter write condition (Refer to <i>page 71</i> for the parameter list))	
OFF	Forcibly switched to external operation mode External operation allowed Switching to PU or NET operation mode disabled	Parameter write disabled with exception of Pr. 79	

## <Function/operation changed by switching on-off the X12 (MRS) signal>

Operating Condition		X12 (MRS)	Operation		Switching to
Operation mode	Status	Signal	Mode	Operating Status	PU, NET Operation Mode
PU/NET	During stop	ON→OFF *1	External *2	If external operation frequency setting and start signal	Disallowed
	Running	ON→OFF *1	LAternal 2	are entered, operation is performed in that status.	Disallowed
External	During stop	OFF→ON	External +2	During stop	Allowed
		ON→OFF			Disallowed
	Running	OFF→ON		During operation → output stop	Disallowed
		ON→OFF		Output stop → operation	Disallowed

<sup>1</sup> The operation mode switches to external operation mode independently of whether the start signal (STF, STR) is on or off. Therefore, the motor is run in external operation mode when the X12 (MRS) signal is turned off with either of STF and STR on.

\*2 At alarm occurrence, pressing (



of the operation panel resets the inverter.

#### = CAUTION

- · If the X12 (MRS) signal is on, the operation mode cannot be switched to PU operation mode when the start signal (STF, STR) is on.
- · When the MRS signal is used as the PU interlock signal, the MRS signal serves as the normal MRS function (output stop) by turning on the MRS signal and then changing the *Pr.* 79 value to other than "7" in the PU operation mode. Also as soon as "7" is set in *Pr.* 79, the signal acts as the PU interlock signal.
- · When the MRS signal is used as the PU operation interlock signal, the logic of the signal is as set in *Pr. 17*. When *Pr. 17* = "2", read ON as OFF and OFF as ON in the above explanation.
- · Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.



# (10) Switching of operation mode by external terminal (X16 signal)

- · When external operation and operation from the operation panel are used together, use of the PU-external operation switching signal (X16) allows switching between the PU operation mode and external operation mode during a stop (during a motor stop, start command off).
- · When Pr. 79 = any of "0, 6, 7", the operation mode can be switched between the PU operation mode and external operation mode. (Pr. 79 = "6" switch-over mode can be changed during operation)
- For the terminal used for X16 signal input, set "16" in any of *Pr. 178 to Pr. 189 (input terminal function selection)* to assign the function.

	Pr. 79	X16 Signal State	Operation Mode	Remarks	
	Setting	ON (external)	OFF (PU)	Remarks	
0 (	(initial value)	External operation mode	PU operation mode	Can be switched to external, PU or NET operation mode	
	1 PU operation mode		tion mode	Fixed to PU operation mode	
	2	External operation mode		Fixed to external operation mode (Can be switched to NET operation mode)	
	3, 4	External/PU combined operation mode		External/PU combined mode fixed	
	6	External operation mode	PU operation mode	Can be switched to external, PU or NET operation mode with operation continued	
7	X12(MRS) ON	External operation mode	PU operation mode	Can be switched to external, PU or NET operation mode (Output stop in external operation mode)	
'	X12(MRS) OFF	External operation mode		Fixed to external operation mode (Forcibly switched to external operation mode)	

#### **REMARKS**

- The operation mode status changes depending on the setting of *Pr. 340 Communication startup mode selection* and the ON/OFF states of the X65 and X66 signals. (For details, refer to *page 313*.)
- The priorities of Pr. 79, Pr. 340 and signals are Pr. 79 > X12 > X66 > X65 > X16 > Pr. 340.

#### = CAUTION =

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

#### (11) Switching of operation mode by external terminal (X65, X66 signal)

- · When Pr. 79 = any of "0, 2, 6, 7", the operation mode switching signals (X65, X66) can be used to change the PU or external operation mode to network operation mode during a stop (during a motor stop or start command off). (Pr. 79 = "6" switch-over mode can be changed during operation)
- · When switching between the network operation mode and PU operation mode
  - 1) Set *Pr. 79* to "0" (initial value), "6" or "7". (At the *Pr. 79* setting of "7", the operation mode can be switched when the X12 (MRS) signal turns on.)
  - 2) Set "10 or 12" in Pr. 340 Communication startup mode selection.
  - 3) Set "65" in any of Pr. 178 to Pr. 189 to assign the NET-PU operation switchover signal (X65) to the external terminal.
  - 4) The operation mode changes to PU operation mode when the X65 signal turns on, or to network operation mode when the X65 signal turns off.

Pr. 340		Pr. 79	X65 Signal State		Remarks	
Setting		Setting	ON (PU)	OFF (NET)	. Nemarks	
	0	(initial value)	PU operation mode *1	NET operation mode *2	Cannot be switched to external operation mode	
	1		PU operation mode		Fixed to PU operation mode	
10, 12		2	NET operation mode		Fixed to NET operation mode	
	3, 4		External/PU combined operation mode		External/PU combined mode fixed	
	6		PU operation mode *1	NET operation mode *2	Operation mode can be switched with operation continued Cannot be switched to external operation mode	
	7	X12(MRS) ON	PU operation mode *1	NET operation mode *2,3	Output stop in external operation mode	
		X12(MRS) OFF	External operation mode		Forcibly switched to external operation mode	

<sup>\*1</sup> NET operation mode when the X66 signal is on.

- \*2 PU operation mode when the X16 signal is off. PU operation mode also when *Pr. 550 NET mode operation command source selection* = "1" (communication option control source) and the communication option is not fitted.
- \*3 External operation mode when the X16 signal is on.
- · When switching between the network operation mode and external operation mode
  - 1) Set *Pr. 79* to "0" (initial value), "2", "6" or "7". (At the *Pr. 79* setting of "7", the operation mode can be switched when the X12 (MRS) signal turns on.)
  - 2) Set "0 (initial value), 1 or 2" in Pr. 340 Communication startup mode selection.
  - 3) Set "66" in any of Pr. 178 to Pr. 189 to assign the NET-external operation switchover signal (X66) to the external terminal.
  - 4) The operation mode changes to network operation mode when the X66 signal turns on, or to external operation mode when the X66 signal turns off.

Pr. 340		Pr. 79	X66 Signal State		Remarks	
Setting		Setting	ON (NET)	OFF(external)	Remarks	
	0	(initial value)	NET operation mode *1	External operation mode *2		
	1		PU operation mode		Fixed to PU operation mode	
0	2		NET operation mode *1	External operation mode	Cannot be switched to PU operation mode	
(initial		3, 4	External/PU combined operation mode		External/PU combined mode fixed	
value),	6		NET operation mode *1	External operation mode *2	Operation mode can be switched with operation continued	
1, 2	7	X12(MRS) ON	NET operation mode *1	External operation mode +2	Output stop in external operation mode	
		X12(MRS) OFF	External operation mode		Forcibly switched to external operation mode	

<sup>1</sup> PU operation mode is selected when Pr. 550 NET mode operation command source selection = "1" (communication option control source) and the communication option is not fitted.

\*2 PU operation is selected when the X16 signal is off. When the X65 signal has been assigned, the operation mode changes with the ON/OFF state of the X65 signal.

#### **REMARKS**

The priorities of Pr. 79, Pr. 340 and signals are Pr. 79 > X12 > X66 > X65 > X16 > Pr. 340.

#### = CAUTION :

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 15 Jog frequency Refer to page 167

Pr. 4 to 6, Pr. 24 to 27, Pr. 232 to Pr. 239 Multi-speed operation Refer to page 165

Pr. 75 Reset selection/disconnected PU detection/PU stop selection Refer to page 300

Pr. 161 Frequency setting/key lock operation selection Refer to page 385

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227


Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

Pr. 340 Communication startup mode selection Refer to page 314

Pr. 550 NET mode operation command source selection Refer to page 315



### 4.23.2 Operation mode at power on (Pr. 79, Pr. 340)

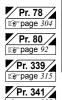

page 325

When power is switched on or when power comes back on after instantaneous power failure, the inverter can be started up in network operation mode.

After the inverter has started up in the network operation mode, parameter write and operation can be performed from a program.

Set this mode for communication operation using the RS-485 terminals or communication option.

Parameter Number	Name	Initial Value	Setting Range	Description
79	Operation mode selection	0	0 to 4, 6, 7	Select the operation mode. (Refer to page 308.)
			0	As set in Pr. 79.
340 *	Communication startup	0	1, 2	Started in network operation mode.  When the setting is "2", it will resume the pre-instantaneous power failure operation mode after an instantaneous power failure occurs.
340	mode selection	Ü	10, 12	Started in network operation mode. Operation mode can be changed between the PU operation mode and network operation mode from the operation panel. When the setting is "12", it will resume the pre-instantaneous power failure operation mode after an instantaneous power failure occurs.

The above parameters can be changed during a stop in any operation mode.

### (1) Specify operation mode at power on (Pr. 340)

• Depending on the Pr. 79 and Pr. 340 settings, the operation mode at power on (reset) changes as described below.

Pr. 340 Setting	Pr. 79 Setting	Operation Mode at Power on, Power Restoration, Reset	Operation Mode Switching		
	0 (initial value)	External operation mode	Switching among the external, PU, and NET operation mode is enabled *2		
	1	PU operation mode	Fixed to PU operation mode		
0	2	External operation mode	Switching between the external and Net operation mode is enabled Switching to PU operation mode is disabled		
(initial value)	3, 4	External/PU combined operation mode	Operation mode switching is disabled		
value)	6	External operation mode	Switching among the external, PU, and NET operation mode is enabled with operation continued		
	X12 (MRS) signal ON External operation mod		Switching among the external, PU, and NET operation mode is enabled *2		
	,	X12 (MRS) signal OFF External operation mode	Fixed to external operation mode (forcibly switched to external operation mode.)		
	0	NET operation mode			
	1	PU operation mode			
	2	NET operation mode			
1, 2 *1	3, 4	External/PU combined operation mode	Same as when <i>Pr. 340</i> = "0"		
	6	NET operation mode			
	7	X12 (MRS) signal ON NET operation mode	]		
		X12 (MRS) signal OFF External operation mode			
	0	NET operation mode	Switching between the PU and NET operation mode is enabled *3		
	1	PU operation mode	Same as when <i>Pr. 340</i> = "0"		
10 10	2	NET operation mode	Fixed to NET operation mode		
10, 12 *1	3, 4	External/PU combined operation mode	Same as when <i>Pr. 340</i> = "0"		
	6	NET operation mode	Switching among the external, PU, and NET operation mode is enabled with operation continued <sup>3</sup>		
	7	External operation mode	Same as when <i>Pr. 340</i> = "0"		

The Pr. 340 setting "2" or "12" is mainly used for communication operation using the inverter RS-485 terminals. When a value other than "9999" (selection of automatic restart after instantaneous power failure) is set in Pr. 57 Restart coasting time, the inverter will resume the same operation state which was in before after power has been restored from an instantaneous power failure.

The operation mode cannot be switched directly between the PU operation mode and network operation mode.

#### ◆ Parameters referred to ◆

Pr. 57 Restart coasting time Refer to page 260. Pr. 79 Operation mode selection Refer to page 306.

The parameters can be set whenever the communication option is connected. (Refer to page 304.).

Operation mode can be changed between the PU operation mode and network operation mode with  $\frac{PU}{EXT}$  key of the operation panel (FR-DU07) and X65 signal.

Pr.337

Pr.340

Pr.549

Pr.555

## 4.23.3 Operation command source and speed command source during communication operation (Pr. 338, Pr. 339, Pr. 550, Pr. 551)

When the RS-485 terminals or communication option is used, the external operation command and speed command can be made valid. Also, the control command source in the PU operation mode can be selected.

Parameter Number	Name	Initial Value	Setting Range	Description
338	Communication operation	0	0	Operation command source communication
330	command source	U	1	Operation command source external
			0	Speed command source communication
339	Communication speed command source	0	1	Speed command source external (Frequency setting from communication is invalid, terminal 2 and 1 setting from external is valid)
	Sommana Source		2	Speed command source external (Frequency setting from communication is valid, terminal 2 and 1 setting from external is invalid)
			0	Communication option valid
	NET mode operation	0000	1	RS-485 terminals valid
550 *	command source selection	9999	9999	Automatic recognition of the communication option Normally, the RS-485 terminals are valid. When the communication option is fitted, the communication option is valid.
	B		1	Select the RS-485 terminals as the PU operation mode control source.
551 *	PU mode operation command source selection			Select the PU connector as the PU operation mode control source.
	Communa Cource Selection		3	Select the USB connector as the PU operation mode control source.

The above parameters can be set whenever the communication option is connected. (Refer to page 304.)

### (1) Select the control source of the network operation mode (Pr. 550)

- · Either the RS-485 terminals or communication option can be specified as the source of control in network operation mode.
- For example, set *Pr. 550* to "1" when executing parameter write, start command or frequency setting from the inverter RS-485 terminals in the network operation mode independently of whether the communication option is connected or not.

#### **CAUTION**

Since Pr. 550 = "9999" (automatic recognition of the communication option) in the initial setting, parameter write, start command
and frequency setting cannot be executed by communication using the inverter RS-485 terminals when the communication option
is fitted. (Monitor and parameter read can be performed.)

#### (2) Select the control source of the PU operation mode (Pr. 551)

- Either the PU connector, RS-485 terminals or USB connector can be specified as the source of control in the PU operation mode.
- · When performing parameter write, giving start command and setting frequency from communication with the RS-485 terminals in PU operation mode, set "1" in *Pr.* 551. When a USB connector is used, set "3" in *Pr.* 551.

#### CAUTION

- The PU operation mode has a higher priority when Pr. 550 = "1" (NET mode RS-485 terminals) and Pr. 551 = "1" (PU mode RS-485 terminals). When the communication option is not fitted, therefore, the operation mode cannot be switched to network operation mode.
- · Changed setting value is made valid when powering on or resetting the inverter.

Pr. 550	Pr. 551		Operation Mod	e of Control Source		Remarks
Setting	Setting	PU connector	USB connector	RS-485 terminals	Communication option	Remarks
	1	×	×	PU operation mode *1	NET operation mode +2	
0	2 (initial value)	PU operation mode	×	×	NET operation mode +2	
	3	×	PU operation mode	×	NET operation mode *2	
	1	×	×	PU operation mode +1	×	Switching to NET operation mode disabled
1	2 (initial value)	PU operation mode	×	NET operation mode	×	
	3	×	PU operation mode	NET operation mode	×	
	1	×	×	PU operation mode *1	NET operation mode +2	
	2 (initial			×	NET operation mode *2	Communication option fitted
9999 (initial	value)	PU operation mode	×	NET operation mode	×	Communication option not fitted
value)				×	NET operation mode *2	Communication option fitted
	3	X	PU operation mode	NET operation mode	×	Communication option not fitted

<sup>\*1</sup> The Modbus-RTU protocol cannot be used in the PU operation mode. When using the Modbus-RTU protocol, set Pr. 551 to "2".

<sup>\*</sup> Pr 550 and Pr. 551 are always write-enabled.

<sup>\*2</sup> When the communication option is not fitted, the operation mode cannot be switched to network operation mode.



### (3) Controllability through communcation

Operation Location	Condition (Pr. 551 Setting)	Operation Mode Item	PU Operation	External Operation	External/PU Combined Operation Mode 1 (Pr. 79 =3)	External/PU Combined Operation Mode 2 (Pr. 79 =4)	NET Operation (when RS-485 terminals are used) *6	NET Operation (when communication option is used) *7
nector		Run command (start, stop)	0	<b>*</b> *3	<b>*</b> *3	0	,	<b>★</b> *3
J conr	2 (PU	Running frequency setting	0	×	0	×		×
n Pl	connector) or 3 (USB	Monitor	0	0	0	0		0
fron	connector)	Parameter write	O *4	× *5	O *4	O *4	:	× *5
on t	,	Parameter read	0	0	0	0		0
cati e U		Inverter reset	0	0	0	0		0
Control by RS-485 communication from PU connector or, operation from the USB connector		Run command (start, stop)	★ *3	<b>*</b> *3	<b>*</b> *3	<b>*</b> *3	,	<b>★</b> *3
85 cor ation fi		Running frequency setting	×	×	×	×		×
S-4 per	Except for 2	Monitor	0	0	0	0		0
by Rs or, ol	(3)	Parameter write	× *5	× *5	× *5	× *5		× *5
<u> </u>		Parameter read	0	0	0	0		0
Contro		Inverter reset	0	0	0	0		0
	1 (RS-485 terminals)	Run command (start, stop)	0	×	×	0		×
ε		Running frequency setting	0	×	0	×		×
fro		Monitor	0	0	0	0		0
tion		Parameter write	O *4	× *5	O *4	O *4		× *5
iica		Parameter read	0	0	0	0		0
nur Eem		Inverter reset	0	0	0	0		0
by communicatio RS-485 terminals		Run command (start, stop)	×	×	×	×	O *1	×
Control by communication from RS-485 terminals	F	Running frequency setting	×	×	×	×	O *1	×
ပိ	Except for 1	Monitor	0	0	0	0	0	0
		Parameter write	× *5	× *5	× *5	× *5	O *4	× *5
		Parameter read	0	0	0	0	0	0
		Inverter reset	×	×	×	×	O *2	×
ation		Run command (start, stop)	×	×	×	×	×	O *1
Control by communication from communication		Running frequency setting	×	×	×	×	×	O *1
con	_	Monitor	0	0	0	0	0	0
l by		Parameter write	× *5	× *5	× *5	× *5	× *5	O *4
ntro co		Parameter read	0	0	0	0	0	0
-		Inverter reset	×	×	×	×	×	O *2
ıit nals		Inverter reset	0	0	0	0		0
Control circuit external terminals	_	Run command (start, stop)	×	0	0	×	:	× *1
Contr		Frequency setting	×	0	×	0	:	× *1

O: Enabled, ×: Disabled, ★ : Some are enabled

<sup>\*1</sup> As set in Pr. 338 Communication operation command source and Pr. 339 Communication speed command source. (Refer to page 315)

<sup>\*2</sup> At occurrence of RS-485 communication error, the inverter cannot be reset from the computer.

<sup>\*3</sup> Enabled only when stopped by the PU. At a PU stop, PS is displayed on the operation panel. As set in Pr. 75 Reset selection/disconnected PU detection/PU stop selection. (Refer to page 300)

<sup>\*4</sup> Some parameters may be write-disabled according to the Pr. 77 Parameter write selection setting and operating status. (Refer to page 303)

<sup>\*5</sup> Some parameters are write-enabled independently of the operation mode and command source presence/absence. When *Pr.* 77 = 2, write is enabled. (Refer to *page* 71 for the parameter list)Parameter clear is disabled.

<sup>\*6</sup> When Pr. 550 NET mode operation command source selection = 1 (RS-485 terminals valid) or Pr. 550 NET mode operation command source selection = 9999 and the communication option is not fitted.

<sup>\*7</sup> When Pr. 550 NET mode operation command source selection = 0 (communication option valid) or Pr. 550 NET mode operation command source selection = 9999 and the communication option is fitted.

### (4) Operation at alarm occurrence

Alarm Definition	Operation Mode Condition (Pr. 551 setting)	PU Operation	External Operation	External/PU Combined Operation Mode 1 (Pr. 79 = 3)	External/PU Combined Operation Mode 2 (Pr. 79 =4)	NET Operation (when RS-485 terminals are used) *5	NET Operation (when communication option is used)	
Inverter fault	_				Stop			
PU	2 (PU connector)			St	top/continued *1, 4			
disconnection of the PU connector	1 (RS-485 terminals)		Stop/continued *1					
Communication alarm of PU	2 (PU connector)	Stop/ continued	d Continued Stop/cor			Conti	nued	
connector	1 (RS-485 terminals)		•		Continued			
Communication alarm of RS-	1 (RS-485 terminals)	Stop/ continued	Cor	ntinued	Stop/continued	Conti	nued	
485 terminals	2 (PU connector)		С	ontinued		Stop/continued	Continued	
Communication alarm of USB	3 (USB connector)	Stop/ continued *2	Cor	ntinued	Stop/continued	Conti	nued	
connector	Except for 3	Continued						
Communication alarm of communication option	_		Continued			Stop/continued	Continued	

<sup>\*1</sup> Can be selected using Pr. 75 Reset selection/disconnected PU detection/PU stop selection

<sup>\*2</sup> Can be selected using Pr. 122 PU communication check time interval, Pr. 336 RS-485 communication check time interval or Pr. 548 USB communication check time interval.

<sup>\*3</sup> As controlled by the communication option.

<sup>\*4</sup> In the PU jog operation mode, operation is always stopped when the PU is disconnected. Whether error (E.PEU) occurrence is allowed or not is as set in *Pr. 75 Reset selection/disconnected PU detection/PU stop selection*.

<sup>\*5</sup> When Pr. 550 NET mode operation command source selection = 1 (RS-485 terminals valid) or Pr. 550 NET mode operation command source selection = 9999 and the communication option is not fitted

<sup>\*6</sup> When Pr. 550 NET mode operation command source selection = 0 (communication option valid) or Pr. 550 NET mode operation command source selection = 9999 and the communication option is fitted



### (5) Selection of control source in network operation mode (Pr. 338, Pr. 339)

- · As control sources, there are the operation command sources that control the signals related to the inverter start command and function selection and the speed command source that controls the signals related to frequency setting.
- In network operation mode, the commands from the external terminals and communication (RS-485 terminals or communication option) are as listed below.

	pera		Pr. 338 (	Communication operation command source		0: NET			1: Externa	ıl	Remarks
	ocat Selec		Pr. 339 Communication speed command source		0: NET	1:External	2:External	0: NET	1:External	2:External	Remarks
Fixe	ed fu	nction	Running frequency from		NET		NET	NET	_	NET	
	mina		commun								
equ	ivale	ent	Terminal			External			External		
fun	ction	1)	Terminal Terminal			EXT	ernal	—	EXT	ernal	
		0	RL	Low speed operation com- mand/remote setting clear	NET	Exte	ernal	nsation NET	Exte	ernal	D 50 11011 ( 11'
		1	RM	stop-on-contact selection 0  Middle-speed operation command/remote setting deceleration	NET	Exte	ernal	NET	Exte	ernal	Pr. 59 = "0" (multi- speeds) Pr. 59 = "1 , 2" (remote)
		2	RH	High speed operation command/remote setting acceleration	NET	Exte	ernal	NET	Exte	ernal	<i>Pr.</i> 270 = "1′, 3" (stop-on-contact)
		3	RT	Second function selection/ Stop-on contact selection 1		NET			External		<i>Pr. 270</i> = "1 , 3" (stop-on-contact)
		4	AU	Current input selection	_	Com	bined	_	Com	bined	
		5	JOG	Jog operation selection					External		
		6	cs	Selection of automatic restart after instantaneous power failure			Exte	ernal			
		7	ОН	External thermal relay input	External						
		8	REX	Fifteen speed selection	NET	Exte	ernal	NET	Exte	ernal	<i>Pr.</i> 59 = "0" (multi-speeds)
		9	Х9	Third function selection		NET			External		
		10	X10	Inverter operation enable signal	External						
uo	tting	11	X11	FR-HC connection, instantaneous power failure detection			Exte	ernal			
Selective function	Pr. 178 to Pr. 189 setting	12	X12	PU operation external interlock			Exte	ernal			
tive 1	o Pr.	13	X13	External DC injection brake operation start		NET			External		
elec	78 1	14	X14	PID control valid terminal	NET	Exte	ernal	NET	Exte	ernal	
Ň	Pr. I	15	BRI	Brake opening completion signal		NET			External		
		16	X16	PU-external operation switchover			Exte	ernal			
		17	X17	Load pattern selection forward rotation reverse rotation boost		NET			External		
		18	X18	V/F switching Load torque high-speed fre-	1	NET			External		
		19	X19	quency S-pattern acceleration/decel-		NET External					
		20	X20 X22	eration C switchover  Orientation command	NET External  NET External						
		23	LX	Pre-excitation	NET External						
				Output stop			External		Pr. 79 ≠ <b>"7"</b>		
		24	MRS	PU operation interlock	External			Pr. 79 = "7" When X12 signal is not assigned			
		25	STOP	Start self-holding selection					External		
		26	MC	Control mode swichover		NET			External		
		27	TL	Torque limit selection		NET			External		
		28	X28	Start-time tuning start external input		NET			External		

	)pera	ation	Pr. 338	Communication operation command source		0: NET			1: Externa	al	Remarks
_	Selec		Pr. 339	9 Communication speed command source	0: NET	1:External	2:External	0: NET	1:External	2:External	Remarks
		42	X42	Torque bias selection 1		NET			External		
		43	X43	Torque bias selection 2		NET			External		
		44	X44	P/PI control switchover		NET			External		
		60	STF	Forward rotation command		NET			External		
		61	STR	Reverse rotation command		NET			External		
l _	ng	62	RES	Reset	External						
io	setting	63	PTC	PID forward action switchover	External						
nc.	s 681	64	X64	PID forward action switchover	NET External NET External						
] e	: 18	65	X65	PU-NET operation switchover		•	Exte	rnal			
Selective function	8 to Pr.	66	X66	External-NET operation switchover			Exte	ernal			
Sel	Pr. 178	67	X67	Command source switchover			Exte	ernal			
	Pr.	68	NP	Conditional position pulse train sign	External						
		69	CLR	Conditional position droop pulse clear	External						
		70	X70	DC feeding operation permission	NET External						
		71	X71	DC feeding cansel		NET			External	_	

#### [Explanation of table]

External : Control is valid only from external terminal signal.

NET : Control only from communication is valid

Combined : Control is valid from either of external terminal and communication. : Control is invalid from either of external terminal and communication.

Compensation: Control by signal from external terminal is only valid when Pr. 28 Multi-speed input compensation selection = "1"

### **REMARKS**

• The control source of communication is as set in Pr. 550 and Pr. 551.

#### (6) Switching of command source by external terminal (X67)

- · In network operation mode, the command source switching signal (X67) can be used to switch the operation command source and speed command source. This signal can be utilized to control the signal input from both the external terminal and communication.
- · Set "67" in any of *Pr. 178 to Pr. 189* (input terminal function selection) to assign the X67 signal to the external terminal.
- $\cdot$  When the X67 signal is off, the operation command source and speed command source are external.

X67 Signal State	Operation Command Source	Speed Command Source		
No signal assignment	According to Pr. 338	According to Pr. 339		
ON	According to 17. 338			
OFF Operation is valid only from external terminal signa				

#### REMARKS

- · The ON/OFF state of the X67 signal is reflected only during a stop. It is reflected after a stop when the terminal is switched during operation.
- When the X67 signal is off, a reset via communication is disabled.

#### CAUTION =

· Changing the terminal assignment using *Pr. 178 to Pr. 189 (input terminal function selection)* may affect the other functions. Please make setting after confirming the function of each terminal.

### ♦ Parameters referred to ♦

Pr. 28 Multi-speed input compensation selection Refer to page 169.

Pr. 59 Remote function selection Refer to page 169.

Pr. 79 Operation mode selection Refer to page 306.




## 4.24 Communication operation and setting

Purpose	Parameter that must	be Set	Refer to Page
Communication operation from PU connector	Initial setting of computer link communication (PU connector)	Pr. 117 to Pr. 124	325
Communication operation from RS-485	Initial setting of computer link communication (RS-485 terminals)	Pr. 331 to Pr. 337, Pr. 341	325
terminals	Modbus-RTU communication specifications	Pr. 331, Pr. 332, Pr. 334, Pr. 343, Pr. 549	338
Restrictions on parameter write through communication	Communication EEPROM write selection	Pr. 342	326
Operation by PLC function	PLC function	Pr. 414 to Pr. 417, Pr. 506 to Pr. 515	352
Communication using USB (FR-Configurator)	USB communication	Pr. 547, Pr. 548	353

## 4.24.1 Wiring and configuration of PU connector

Using the PU connector, you can perform communication operation from a personal computer etc. When the PU connector is connected with a personal, FA or other computer by a communication cable, a user program can run and monitor the inverter or read and write to parameters.

### (1) PU connector pin-outs

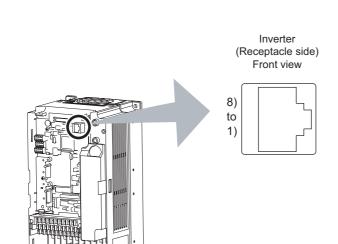


Pin Number	Name	Description
1)	SG	Earth (Ground) (connected to terminal 5)
2)		Operation panel power supply
3)	RDA	Inverter receive+
4)	SDB	Inverter send-
5)	SDA	Inverter send+
6)	RDB	Inverter receive-
7)	SG	Earth (Ground) (connected to terminal 5)
8)	_	Operation panel power supply

#### CAUTION


- · Pins No. 2 and 8 provide power to the operation panel or parameter unit. Do not use these pins for RS-485 communication.
- Do not connect the PU connector to the computer's LAN board, FAX modem socket or telephone modular connector. The
  product could be damaged due to differences in electrical specifications.

### (2) PU connector communication system configuration and wiring

### System configuration

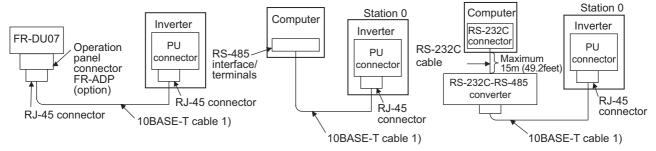

### Connection with RS-485 computer

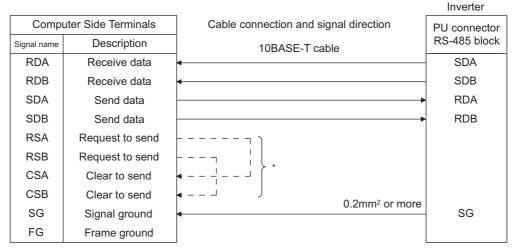

<sup>\*</sup> Make connections in accordance with the manual of the computer used. Fully check the terminal numbers of the computer since they change with the model.

#### **REMARKS**

· Computer-inverter connection cable

Refer to the following for the cable (RS-232C  $\Leftrightarrow$  RS-485 converter) for connection of the computer having the RS-232C interface with the inverter. Commercially available product examples (as of April, 2004)

Туре	Maker
FA-T-RS40□ *	Mitsubishi Electric Engineering Co., Ltd.

- \* The converter cable cannot connect two or more inverters (the computer and inverter are connected on a 1:1 basis). Since the product is packed with the RS-232C cable and RS-485 cable (10BASE-T + RJ-45 connector), the cable and connector need not be prepared separately. Contact a maker for details of the product.
- Refer to the following when fabricating the cable on the user side.
   Commercially available product examples (as of April, 2004)

	Product	Туре	Maker
1)	10BASE-T cable	SGLPEV-T 0.5mm × 4P *	Mitsubishi Cable Industries, Ltd.

\* Do not use pins No. 2, 8 of the 10- BASE-T cable.


### CAUTION

When performing RS-485 communication with multiple inverters, use the RS-485 terminals. (Refer to page 323)



### 4.24.2 Wiring and arrangement of RS-485 terminals

### (1) RS-485 terminal layout

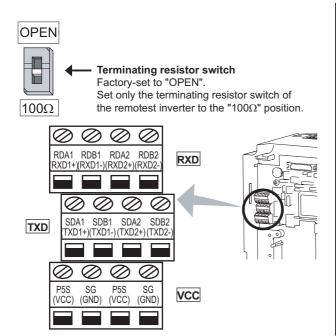

Name	Description
RDA1 (RXD1+)	Inverter receive+
RDB1 (RXD1-)	Inverter receive-
RDA2	Inverter receive+
(RXD2+)	(for branch)
RDB2	Inverter receive-
(RXD2-)	(for branch)
SDA1 (TXD1+)	Inverter send+
SDB1 (TXD1-)	Inverter send-
SDA2	Inverter send+
(TXD2+)	(for branch)
SDB2	Inverter send-
(TXD2-)	(for branch)
P5S	5V
(VCC)	Permissible load current 100mA
SG	Earth (Ground)
(GND)	(connected to terminal SD)

### (2) Connection of RS-485 terminals and wires

Loosen the terminal screw and insert the cable into the terminal.

Screw size	M2
Tightening torque	0.22N•m to 0.25N•m
Cable size	0.3mm <sup>2</sup> to 0.75mm <sup>2</sup>
Screwdriver	Small ⊖ flat-blade screwdriver (Tip thickness: 0.4mm /tip width: 2.5mm)

Wire the stripped cable after twisting it to prevent it from becoming loose. In addition, do not solder it.

Cable stripping size

5mm
(0.2 inches)

Use a bar terminal as necessary.

### CAUTION =

Undertightening can cause cable disconnection or malfunction. Overtightening can cause a short circuit or malfunction due to damage to the screw or unit.

#### **REMARKS**

#### Information on bar terminals

Introduced products (as of October, 2003): Phoenix Contact Co., Ltd.

Terminal Screw Size	Bar Terminal Model (with insulation sleeve)	Bar Terminal Model (without insulation sleeve)	Wire Size (mm²)		
M2	AI 0.5-6WH	A 0.5-6	0.3 to 0.5		

Bar terminal crimping tool: CRIMPFOX ZA3 (Phoenix Contact Co., (Ltd.))


Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits (including the 200V relay sequence circuit).

When using the bar terminal (without insulation sleeve), use care so that the twisted wires do not come out.




### (3) RS-485 terminal system configuration

### Connection of a computer to the inverter (1:1 connection)

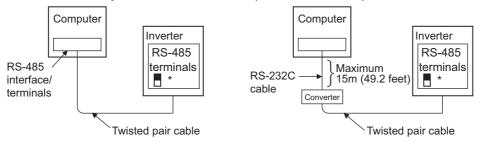

\*Set the terminating resistor switch to the " $100\Omega$ " position.


### • Combination of computer and multiple inverters (1:n connection)

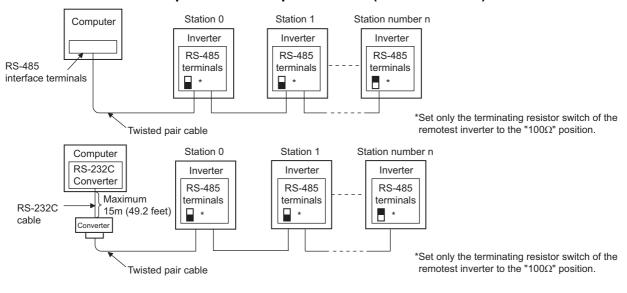




### (4) RS-485 terminal wiring method

### Wiring of one RS-485 computer and one inverter

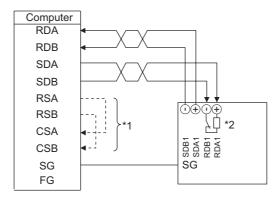

### • Wiring of one RS-485 computer and "n" inverters (several inverters)

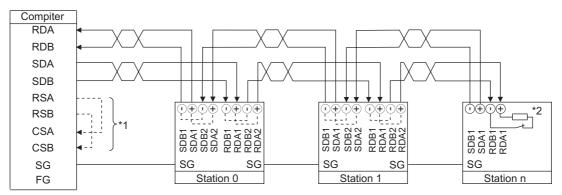


- \*1 Make connections in accordance with the manual of the computer used.

  Fully check the terminal numbers of the computer since they change with the model.
- \*2 For the inverter farthest from the computer, set the terminating resistor switch to ON (100 $\Omega$  side).


#### **REMARKS**

For branching, connect the wires as shown below.

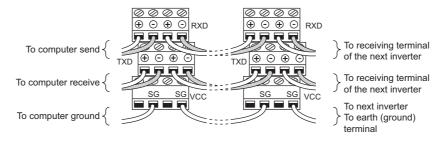

### (5) 2-wire type connection

If the computer is 2-wire type, pass wires across receiving terminals and transmission terminals of the RS-485 terminals to enable 2-wire type connection with the inverter.

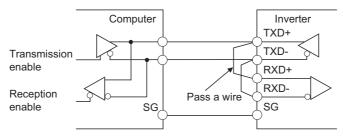

#### REMARKS

- 2-wire type connection is unable when using Modbus-RTU protocol.
- · A program should be created so that transmission is disabled (receiving state) when the computer is not sending and reception is disabled (sending state) during sending to prevent the computer from receiving its own data.

# 4.24.3 Initial settings and specifications of RS-485 communication (Pr. 117 to Pr. 124, Pr. 331 to Pr. 337, Pr. 341, Pr. 549)

Used to perform required settings for communication between the inverter and personal computer.

- There are two different communications: communication using the PU connector of the inverter and communication using the RS-485 terminals.
- You can perform parameter setting, monitor, etc. from the PU connector or RS-485 terminals of the inverter using the Mitsubishi inverter protocol (computer link communication).
- To make communication between the personal computer and inverter, initialization of the communication specifications must be made to the inverter.

Data communication cannot be made if the initial settings are not made or there is any setting error.

### [PU connector communication related parameter]

Parameter Number	Name	Initial Value	Setting Range	Description			
117	PU communication station number	0	0 to 31	Specify the inverter station number. Set the inverter station numbers when two or more inverters are connected to one personal computer.			
118	PU communication speed	192	48, 96, 192, 384	Set the communication. The setting value × 1 communication speed For example, the communication speed 19200bps when the setting the communication speeds.	00 equals the d. munication speed is		
				Stop bit length	Data length		
119	PU communication stop bit	1	0	1bit 2bit	- 8bit		
	length		10 11	1bit 2bit	- 7bit		
			0	Without parity check			
120	PU communication parity check	2	1	With odd parity check			
	Clieck		2	With even parity check			
121	Number of PU communication retries	1	0 to 10	occurrence of a da number of consecut	number of retries at ta receive error. If the ive errors exceeds the ne inverter will come to		
			9999	If a communication error occurs, the inverter will not come to an alarm stop.			
			0	No PU connector cor	nmunication		
122	PU communication check time interval	9999	0.1 to 999.8s	If a no-communica	nmunication check time. tion state persists for issible time, the inverter stop.		
			9999	No communication ch	neck		
123	PU communication waiting time setting	9999	0 to 150ms	Set the waiting transmission to the in	time between data verter and response.		
	ume seumy		9999	Set with communication data.			
	PU communication CR/LF		0	Without CR/LF			
124	presence/absence selection	1	1	With CR			
			2	With CR/LF			





### [RS-485 terminal communication related parameter]

Parameter Number	Name	Initial Value	Setting Range	Description		
331	RS-485 communication station number	0	0 to 31 (0 to 247)	Set the inverter station number. (same specifications as <i>Pr. 117</i> )		
332	RS-485 communication speed	96	3, 6, 12, 24, 48, 96, 192, 384	Used to select the communication speed. (same specifications as <i>Pr. 118</i> )		
333 ∗₂	RS-485 communication stop bit length	1	0, 1, 10, 11	Select stop bit length and data length. (same specifications as <i>Pr. 119</i> )		
334	RS-485 communication parity check selection	2	0, 1, 2	Select the parity check specifications. (same specifications as $Pr. 120$ )		
335 ∗₃	RS-485 communication retry count	1	0 to 10, 9999	Set the permissible number of retries at occurrence of a data receive error. (same specifications as <i>Pr. 121</i> )		
	RS-485 communication check	0.	0	RS-485 communication can be made, but the inverter will come to an alarm stop in the NET operation mode.		
336 ∗₃	time interval	0s	0.1 to 999.8s	Set the interval of communication check time. (same specifications as <i>Pr. 122</i> )		
			9999	No communication check		
337 ∗₃	RS-485 communication waiting time setting	9999	0 to 150ms, 9999	Set the waiting time between data transmission to the inverter and response. (same specifications as <i>Pr. 123</i> )		
341 ∗₃	RS-485 communication CR/LF selection	1	0, 1, 2	Select presence/absence of CR/LF. (same specifications as <i>Pr. 124</i> )		
549	Protocol selection	1	0	Mitsubishi inverter (computer link) protocol		
343	1 TOLOGOT SCIECTION	'	1	Modbus-RTU protocol ⁴4		

- \*1 When "1" (Modbus-RTU protocol) is set in Pr. 549, the setting range within parenthesis is applied.
- \*2 For the Modbus-RTU protocol, the data length is fixed to 8 bits and the stop bit depends on the Pr. 334 setting. (Refer to page 338)
- \*3 The Modbus-RTU protocol becomes invalid.
- \*4 The Modbus-RTU protocol is valid for only communication from the RS-485 terminals.

### CAUTION =

- · If communication is made without *Pr. 336 RS-485 communication check time interval* being changed from "0" (initial value), monitor, parameter read, etc. can be performed, but the inverter results in an alarm as soon as it is switched to the NET operation mode. If the operation mode at power on is the network operation mode, a communication alarm (E.SER) occurs after first communication.
  - When performing operation or parameter write through communication, set "9999" or a greater value to *Pr. 336*. (The setting depends on the computer side program.) (*Refer to page 331*)
- Always reset the inverter after making the initial settings of the parameters. After you have changed the communication-related parameters, communication cannot be made until the inverter is reset.



### 4.24.4 Communication EEPROM write selection (Pr. 342)

Parameters written via the inverter's PU connector, RS-485 terminals, USB communication or from the communication option can be written to the RAM. Set this parameter when frequent parameter changes are required.

Parameter Number	Name	Initial Value	Setting Range	Description		
342	Communication EEPROM write	0	0	Parameter values written by communication are written to the EEPROM and RAM.		
342	selection	O	1	Parameter values written by communication are written to the RAM.		

The above parameters can be set any time when the communication option is connected. (Refer to page 304)

· When changing the parameter values frequently, set "1" in *Pr. 342* to write them to the RAM. The life of the EEPROM will be shorter if parameter write is performed frequently with the setting unchanged from "0 (initial value)" (EEPROM write).

#### REMARKS

· When *Pr. 342* is set to "1" (only RAM write), the new values of the parameters will be cleared at power supply-off of the inverter. Therefore, the parameter values available when power is switched on again are the values stored in EEPROM previously.

### 4.24.5 Mitsubishi inverter protocol (computer link communication)


You can perform parameter setting, monitor, etc. from the PU connector or RS-485 terminals of the inverter using the Mitsubishi inverter protocol (computer link communication).

### (1) Communication specifications

· The communication specifications are given below.

It	em	Description	Related Parameters
Communication	orotocol	Mitsubishi protocol (computer link)	Pr. 551
Conforming stan	dard	EIA-485 (RS-485)	_
Number of inverters connected		1:N (maximum 32 units), setting is 0 to 31 stations	Pr. 117 Pr. 331
Communication PU connector		Selected from among 4800/9600/19200 and 38400bps	Pr. 118
speed	RS-485 terminal	Can be selected from 300, 600, 1200, 2400, 4800, 9600, 19200 and 38400bps	Pr. 332
Control protocol		Asynchronous system	_
Communication	method	Half-duplex system	_
	Character system	ASCII (7 bits or 8 bits can be selected)	Pr. 119 Pr. 333
	Start bit	1bit	_
Communication	Stop bit length	1 bit or 2 bits can be selected	Pr. 119 Pr. 333
specifications	Parity check	Check (even, odd) or no check can be selected	Pr. 120 Pr. 334
	Error check	Sum code check	_
	Terminator	CR/LF (presence or absence can be selected)	Pr. 124 Pr. 341
Waiting time sett	ing	Selectable between presence and absence	Pr. 123 Pr. 337

### (2) Communication procedure

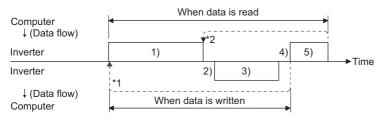

- Data communication between the computer and inverter is made in the following procedure.
- Request data is sent from the computer to the inverter. (The inverter will not send data unless requested.)
- 2) After waiting for the waiting time
- 3) The inverter sends return data to the computer in response to the computer request.
- 4) After having waited for the time taken for inverter processing
- 5) Answer from computer in response to reply data 3) is sent. (Even if 5) is not sent, subsequent communication is made property.)
- \*1 If a data error is detected and a retry must be made, execute retry operation with the user program. The inverter comes to an alarm stop if the number of consecutive retries exceeds the parameter setting.
- 2 On receipt of a data error occurrence, the inverter returns "reply data 3)" to the computer again. The inverter comes to an alarm stop if the number of consecutive data errors reaches or exceeds the parameter setting.



### (3) Communication operation presence/absence and data format types

- · Data communication between the computer and inverter is made in ASCII code (hexadecimal code).
- · Communication operation presence/absence and data format types are as follows:

Symbol	Operation	1	Run Command	Running Frequency	Parameter Write	Inverter Reset	Monitor	Parameter Read
1)	Communication request inverter in accordance program in the computer.	is sent to the with the user	A A'	Α	А	А	В	В
2)	Inverter data processing ti	me	Present	Present	Present	Absent	Present	Present
3)	Reply data from the inverter (Data 1) is checked for error)	No error *1 (Request accepted)	С	С	С	C *2	E E'	E
		With error. (Request rejected)	D	D	D	D *2	D	D
4)	Computer processing dela	ıy time	Absent	Absent	Absent	Absent	Absent	Absent
5)	Answer from computer in response to reply data 3)	No error *1 (No inverter processing)	Absent	Absent	Absent	Absent	Absent (C)	Absent (C)
	(Data 3) is checked for error)	With error (Inverter re- outputs 3))	Absent	Absent	Absent	Absent	F	F

<sup>\*1</sup> In the communication request data from the computer to the inverter, 10ms or more is also required after "no data error (ACK)". (Refer to page 329)

### 1)Communication request data from the computer to the inverter

Format						Numbei	r of Cha	aracters	3						
Format	1	2	3	4	5	6	7	8	9	10	11	12	13		
Α	ENQ	Inverter	r station	Inetructi	Instruction code			Data			Sum check		*4		
(Data write)							Data				Sum check		4		
A'	ENQ	Inverter	r station	Inetructi	on code	Waiting	Data Sum		Sum	m check *4					
(Data write)					nstruction code		Dala		Sulli Check		4				
В	ENQ	Inverte	r station	Inetructi	Instruction code		Cum abaak		*4			_			
(Data read)	*1	numl	ber ∗2	IIISHUCH	on code	time ∗₃	time *3		Sum check		JIECK 4				

#### 3)Reply data from the inverter to the computer

### · When data is written

Format	Number of Characters								
Format	1	2	3	4	5				
С	ACK	Inverter	station	*4					
(No data error detected)	*1	numl	number *2						
D	NAK	Inverter station		Inverter station		Error	+4		
(Data error detected)	*1	numl	oer ∗2	Code	*4				

#### · When data is read

Format	Number of Characters										
Format	1	2	3	4	5	6	7	8	9	10	11
E	STX	Inverter station			Read data E					check	*4
(No data error detected)	*1	num	ber ∗2		Nead	uala		*1	Guill	CHECK	4
E'	STX	Inverte	r station	Peac	l data	ETX Sum		check	*4		
(No data error detected)	*1	num	ber *2	Read data		*1	Suili	CHECK	4		
D	NAK	Inverte	r station	Error	*4					•'	
(Data error detected)	*1	num	ber ∗2	Code	4						

### 5)Send data from the computer to the inverter during data read

Format	Nun	nber of	Charac	ters
Format	1	2	3	4
C (No data error detected)	,	Inverter numl		*4
<b>F</b> (Data error detected)	NAK *1	Inverter station number *2		*4

<sup>\*1</sup> Indicate a control code

The inverter response to the inverter reset request can be selected. (Refer to page 333)

<sup>\*2</sup> Specify the inverter station numbers between H00 and H1F (stations 0 to 31) in hexadecimal.

<sup>\*3</sup> When Pr. 123, Pr. 337 (waiting time setting) ≠ "9999", create the communication request data without "waiting time" in the data format. (The number of characters decreases by 1.)

<sup>\*4</sup> CR, LF code

When data is transmitted from the computer to the inverter, CR (carriage return) and LF (line feed) codes are automatically set at the end of a data group on some computers. In this case, setting must also be made on the inverter according to the computer. Whether the CR and LF codes will be present or absent can be selected using *Pr. 124 or Pr. 341 (CR, LF presence/absence selection)*.

### (4) Data definitions

#### 1) Control codes

Signal Name	ASCII Code	Description
STX	H02	Start Of Text (start of data)
ETX	H03	End Of Text (end of data)
ENQ	H05	Enquiry (communication request)
ACK	H06	Acknowledge (no data error detected)
LF	H0A	Line Feed
CR	H0D	Carriage Return
NAK	H15	Negative Acknowledge (data error detected)

#### 2) Inverter station number

Specify the station number of the inverter which communicates with the computer.

#### 3) Instruction code


Specify the processing request, e.g. operation or monitoring, given by the computer to the inverter. Hence, the inverter can be run and monitored in various ways by specifying the instruction code as appropriate. (*Refer to page 448*)

#### 4) Data

Indicates the data such as frequency and parameters transferred to and from the inverter. The definitions and ranges of set data are determined in accordance with the instruction codes. (Refer to page 448)

#### 5) Waiting time

Specify the waiting time between the receipt of data at the inverter from the computer and the transmission of reply data. Set the waiting time in accordance with the response time of the computer between 0 and 150ms in 10ms increments (e.g. 1 = 10ms, 2 = 20ms).

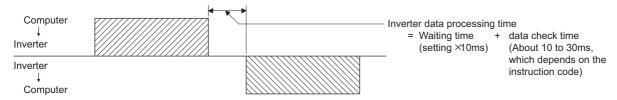


#### **REMARKS**


- When Pr. 123, Pr. 337 (waiting time setting) ≠ "9999", create the communication request data without "waiting time" in the data format. (The number of characters decreases by 1.)
- · The data check time changes depending on the instruction code. (Refer to page 330)

#### 6) Sum check code

The sum check code is 2-digit ASCII (hexadecimal) representing the lower 1 byte (8 bits) of the sum (binary) derived from the checked ASCII data

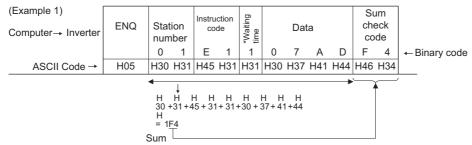

When the Pr. 123 "waiting time setting"≠"9999", create the communication request data without "waiting time" in the data format. (The number of characters decreases by 1.)

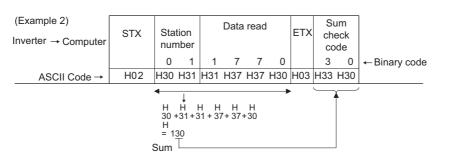




### 7) Error Code

If any error is found in the data received by the inverter, its definition is sent back to the computer together with the NAK code.

Error Code	Error Item	Error Description	Inverter Operation	
Н0	Computer NAK error	The number of errors consecutively detected in communication request data from the computer is greater than allowed number of retries.		
H1	Parity error	The parity check result does not match the specified parity.		
H2	Sum check error	The sum check code in the computer does not match that of the data received by the inverter.	Brought to an alarm stop if error occurs continuously more than	
НЗ	Protocol error	The data received by the inverter has a grammatical mistake. Alternatively, data receive is not completed within the predetermined time. CR or LF is not as set in the parameter.	the allowable number of retries. (E.PUE/E.SER)	
H4	Framing error	The stop bit length differs from the initial setting.		
H5	Overrun error	New data has been sent by the computer before the inverter completes receiving the preceding data.		
H6	_	<del>-</del>	_	
H7	Character error	The character received is invalid (other than 0 to 9, A to F, control code).	Does not accept received data but is not brought to alarm stop.	
H8	_	<del>-</del>	_	
H9	_	_	_	
НА	Mode error	Parameter write was attempted in other than the computer link operation mode, when operation command source is not selected or during inverter operation.	Does not accept	
HB	Instruction code error	The specified command does not exist.	brought to alarm stop.	
HC	Data range error	Invalid data has been specified for parameter write, frequency setting, etc.	brought to diami stop.	
HD				
HE	—	<u> </u>	<u> </u>	
HF	_		_	

### (5) Response time

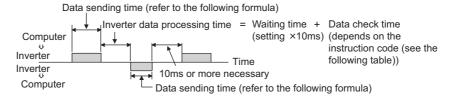

### [Formula for data sending time]

### Communication specifications

Name	Number of Bits	
Stop bit length	Stop bit length	
Data length		7 bits 8 bits
Darity shook	Yes	1 bit
Parity check	No	0

In addition to the above, 1 start bit is necessary. Minimum number of total bits...... 9 bits Miximum number of total bits...... 12 bits

### ●Data check time


Item	Check Time
Various monitors, run command, frequency setting (RAM)	<12ms
Parameter read/write, frequency setting (EEPROM)	<30ms
Parameter clear/all clear	<5s
Reset command	No answer

### (6) Retry count setting (Pr. 121, Pr. 335)


- Set the permissible number of retries at occurrence of a data receive error. (Refer to page 330 for data receive error for retry)
- · When data receive errors occur consecutively and exceed the permissible number of retries set, an inverter alarm (E.PUE) is provided and the output is shut off.
- · When "9999" is set, an inverter alarm is not provided even if data receive error occurs but a minor fault output signal (LF) is output.

For the terminal used for the LF signal output, assign the function by setting "98 (positive logic) or 198 (negative logic)" in any of *Pr. 190 to Pr. 196 (output terminal function selection*).

Example: PU connector communication, Pr. 121 = "1" (initial value)

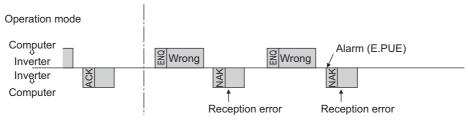


Example: PU connector communication, Pr. 121 = "9999"

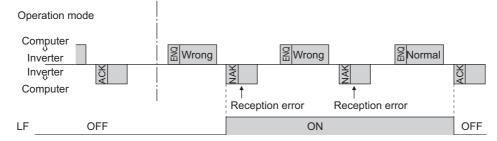

### (7) Open cable detection (Pr. 122, Pr. 336 RS-485 communication check time interval)

- · If disconnection (communication stop) is detected between the inverter and computer as a result of disconnection check, a communication error (PU connector communication: E.PUE, RS-485 terminal communication: E.SER) occurs and the inverter output is shut off.
- Disconnection check is made when the setting is any of "0.1s" to "999.8s". To make disconnection check, it is necessary to send data (control code *refer to page 329*) from the computer within the communication check time interval. (The send data has nothing to do with the station number)
- Communication check is started at the first communication in the operation mode having the operation source (PU operation mode for PU connector communication in the initial setting or network operation mode for RS-485 terminal communication).
- · When the setting is "9999", communication check (disconnection detection) is not made.
- When the setting is "0", communication from the PU connector cannot be performed. For communication via the RS-485 terminals, monitor, parameter read, etc. can be performed, but a communication error (E.SER) occurs as soon as the inverter is switched to network operation mode.

Example: PU connector communication, Pr. 122 = "0.1 to 999.8s"

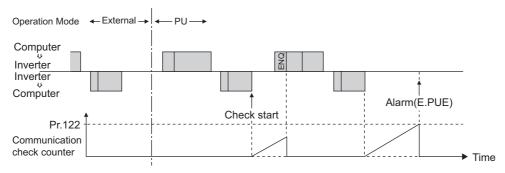




### (8) Instructions for the program

- 1) When data from the computer has any error, the inverter does not accept that error. Hence, in the user program, always insert a retry program for data error.
- 2) All data communication, e.g. run command or monitoring, are started when the computer gives a communication request. The inverter does not return any data without the computer's request. Hence, design the program so that the computer gives a data read request for monitoring, etc. as required.
- 3) Program example

To change the operation mode to computer link operation

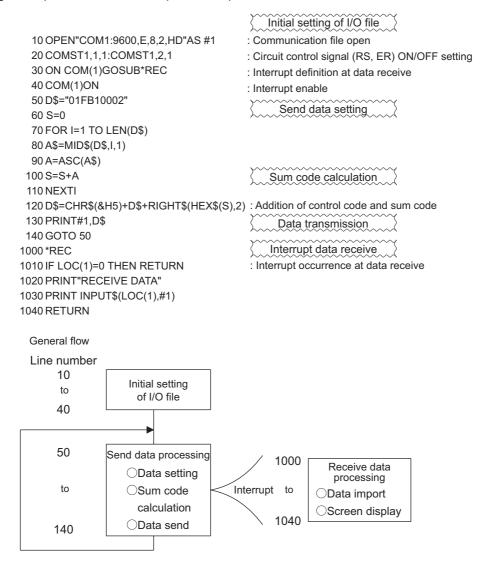

## **CAUTION**

Always set the communication check time interval before starting operation to prevent hazardous conditions.

↑ Data communication is not started automatically but is made only once when the computer provides a communication request. If communication is disabled during operation due to signal cable breakage etc., the inverter cannot be stopped. When the communication check time interval has elapsed, the inverter will come to an alarm stop (E.PUE, E.SER). The inverter can be coasted to a stop by switching on its RES signal or by switching power off.

⚠ If communication is broken due to signal cable breakage, computer fault etc., the inverter does not detect such a fault. This should be fully noted.

### (9) Setting items and set data

After completion of parameter setting, set the instruction codes and data then start communication from the computer to allow various types of operation control and monitoring.

No.		Item	Read/ Write	Instructi on Code	Data Description	Number of Data Digits (format)
1	Ор	eration mode	Read Write	H7B HFB	H0000: Network operation H0001: External operation H0002: PU operation	4 digits (B.E/D) 4 digits
		Output frequency/ speed	Read	H6F	(RS-485 communication operation via PU connector)  H0000 to HFFFF: Output frequency in 0.01Hz increments  Speed in 1r/min increments (when <i>Pr. 37</i> = 1 to 9998 or <i>Pr. 144</i> = 2 to 10, 102 to 110)	(A,C/D) 4 digits (B.E/D)
		Output current	Read	H70	H0000 to HFFFF: Output current (hexadecimal) in 0.01A increments (FR-A720-02150(FR-A740-01100) or less) / 0.1A increments (FR-A720-02880(FR-A740-01440) or more)	4 digits (B.E/D)
		Output voltage	Read	H71	H0000 to HFFFF: Output voltage (hexadecimal) in 0.1V increments	4 digits (B.E/D)
		Special monitor	Read	H72	H0000 to HFFFF: Monitor data selected in instruction code HF3	4 digits (B.E/D)
2	Monitor	Special monitor	Read	H73	H01 to H3C: Monitor selection data	2digits (B.E'/D)
	2	selection No.	Write	HF3	Refer to the special monitor No. table (page 335)	2digits (A',C/D)
		Alarm definition	Read	H74 to H77	b15 b8 b7 b0 H74 Second alarm in past Latest alarm H75 Fourth alarm in past Third alarm in past H76 Sixth alarm in past Fifth alarm in past H77 Eighth alarm in past Seventh alarm in past Refer to the alarm data table (page 336)	4 digits (B.E/D)
3		n command tended)	Write	HF9	You can set the control input commands such as the forward rotation signal (STF) and reverse rotation signal (STR). ( <i>Refer to</i>	4 digits (A,C/D) 2digits
		n command	Write	HFA	page 336 for details)	(A',C/D)
4	mo	erter status nitor tended)	Read	H79	You can monitor the states of the output signals such as forward rotation, reverse rotation and inverter running (RUN). (Refer to page	4 digits (B.E/D)
		erter status nitor	Read	Н7А	337 for details)	2digits (B.E'/D)
	(RA	: frequency AM) : frequency	Read	H6D	Read the set frequency/speed from the RAM or EEPROM. H0000 to HFFFF: Set frequency in 0.01Hz increments Speed in 1r/min increments (When <i>Pr. 37</i> = 1 to 9998 or <i>Pr. 144</i> = 2	4 digits (B.E/D)
_	(EE	PROM)		H6E	to 10, 102 to 110)  Write the set frequency/speed into the RAM or EEPROM.	(0.270)
5	(RA	frequency AM) frequency M, EEPROM)	Write	HED	H0000 to H9C40 (0 to 400.00Hz): frequency in 0.01Hz increments H0000 to H270E (0 to 9998): speed in r/min increments (when <i>Pr. 37</i> = 1 to 9998 or <i>Pr. 144</i> = 2 to 10, 102 to 110)  To change the running frequency consecutively, write data to the inverter RAM. (Instruction code: HED)	4 digits (A,C/D)
6	Inv	erter reset	Write	HFD	H9696: Resets the inverter.  As the inverter is reset at start of communication by the computer, the inverter cannot send reply data back to the computer.  H9966: Resets the inverter.  When data is sent normally, ACK is returned to the computer and	4 digits (A,C/D)  4 digits (A,D)
7		rm definition	Write	HF4	then the inverter is reset.  H9696: Alarm history batch clear	4 digits (A,C/D)
<u> </u>	uii (	JiJui				(, 1,0,0)

Refer to page 328 for data formats (A, A', B, B', C, D)



No.	Item	Read/ Write	Instructi on Code		Data Description					Number of Data Digits (format)
				All parameters Any of four diffethe data.				ned according	to	
				Pr.	Communi- cation Pr.	Calibration Pr. +2	Other Pr.	HEC HF3 HFF		
				H9696	0	×	0	0		
	All parameter	\A/mita	HFC	H9966	0	0	0	0		4 digits
8	clear	Write	HFC	H5A5A	×	×	0	0		(A,C/D)
				H55AA	×	0	0	0		
				<ul> <li>When all parameter clear is executed for H9696 or H996 communication-related parameter settings also return to the init values. When resuming operation, set the parameters again.</li> <li>*1 Refer to page 325, 326.</li> <li>*2 Refer to the list of calibration parameters on the next page for calibrating parameters.</li> <li>*3 Pr. 75 is not cleared</li> </ul>					itial	
9	Parameters	Read	H00 to H63	Refer to the invalues as requi		de <i>(page 448</i>	3) and write	and/or read	the	4 digits (B.E/D)
10	raidilleteis	Write	H80 to HE3	When setting I must be set.	<i>Pr. 100</i> and	later, link p	arameter e	xpansion sett	ting	4 digits (A,C/D)
11	Link parameter	Read	H7F	Parameter des	cription is	changed ac	cording to t	the H00 to H	H09	2digits (B.E'/D)
''	extended setting	Write	HFF	For details of th	e setting, re	fer to the ins	struction cod	le (page 448).		2digits (A',C/D)
12	Second parameter changing	Read	H6C	H00:Frequency H01: Paramete	/hen setting the calibration parameters 100:Frequency 12 01: Parameter-set analog value 02: Analog value input from terminal					2digits (B.E'/D)
12	(instruction code HFF=1, 9)	Write	HEC	parameters. *2 The gain fre		also be writte	·	page for calibra		2digits (A',C/D)

Refer to page 328 for data formats (A, A', B, B', C, D)

### REMARKS

- · Set 65520 (HFFF0) as a parameter value "8888" and 65535 (HFFFF) as "9999".
- · For the instruction codes HFF, HEC and HF3, their values are held once written but cleared to zero when an inverter reset or all clear is performed.

Example) When reading the C3 (Pr. 902) and C6 (Pr. 904) settings from the inverter of station 0

	Computer Send Data	Inverter Send Data	Description
1)	ENQ 00 FF 0 01 82	ACK 00	Set "H01" in the extended link parameter.
2)	ENQ 00 EC 0 01 7E	ACK 00	Set "H01" in second parameter changing.
3)	ENQ 00 5E 0 0F	STX 00 0000 ETX 25	C3 (Pr. 902) is read. 0% is read.
4)	ENQ 00 60 0 FB	STX 00 0000 ETX 25	C6 (Pr. 904) is read. 0% is read.

To read/write C3 (Pr. 902) and C6 (Pr. 904) after inverter reset or parameter clear, execute from 1) again.

### [List of calibration parameters]

_			truct code	
Para meter	Name	Read	Write	Extended
C2 (902)	Terminal 2 frequency setting bias frequency	5E	DE	1
C3 (902)	Terminal 2 frequency setting bias	5E	DE	1
125 (903)	Terminal 2 frequency setting gain frquency	5F	DF	1
C4 (903)	Terminal 2 frequency setting gain	5F	DF	1
C5 (904)	Terminal 4 frequency setting bias frequency	60	E0	1
C6 (904)	Terminal 4 frequency setting bias	60	E0	1
126 (905)	Terminal 4 frequency setting gain frequency	61	E1	1
C7 (905)	Terminal 4 frequency setting gain	61	E1	1

_			truct code	
Para meter	Name	Read	Write	Extended
C12 (917)	Terminal 1 bias frequency (speed)	11	91	9
C13 (917)	Terminal 1 bias frequency (speed)	11	91	9
C14 (918)	Terminal 1 gain frequency (speed)	12	92	9
C15 (918)	Terminal 1 gain (speed)	12	92	9
	Terminal 1 bias command (torque)	13	93	9
C17 (919)	Terminal 1bias (torque)	13	93	9
C18 (920)	Terminal 1gain command (torque)	14	94	9
C19 (920)	Terminal 1 gain (torque)	14	94	9

_			truct code	
Para meter	Name	Read	Write	Extended
	Terminal 4 bias command (torque)	20	A0	9
000	Terminal 4 bias (torque)	20	A0	9
C40 (933)	Terminal 4 gain command (torque)	21	A1	9
C41 (933)	Terminal 4 gain (torque)	21	A1	9

### [Special monitor selection No.]

Refer to page 248 for details of the monitor description.


Data	Description	Unit
H01	Output frequency	0.01Hz
H02	Output current	0.01A/
		0.1A *1
H03	Output voltage	0.1V
H05	Frequency setting	0.01Hz
H06	Running speed	1r/min
H07	Motor torque	0.1%
H08	Converter output voltage	0.1V
H09	Regenerative brake duty	0.1%
Н0А	Electronic thermal relay function load factor	0.1%
нов	Output current peak	0.01A/
value		0.1A *1
H0C	Converter output voltage peak value	0.1V

Description	Unit
Input nower	0.01kWh/
input power	0.1kW *1
Output nower	0.01kWh/
Output power	0.1kW *1
Input terminal status *2	_
Output terminal status *3	_
Load meter	0.1%
Motor evoitation current	0.01A/
Woldi excitation current	0.1A *1
Position pulse	
Cumulative energization	1h
time	
Orientation status	_
Actual operation time	1h
Motor load factor	0.1%
Cumulative power	1kWh
	Input power  Output power  Input terminal status *2  Output terminal status *3  Load meter  Motor excitation current  Position pulse  Cumulative energization time  Orientation status  Actual operation time  Motor load factor

Data Description Unit

Data	Description	Unit	
H20	Torque command	0.1%	
H21	Torque current command	0.1%	
H22	Motor output	0.10.01k W	
H23	Feedback pulse	_	
H32	Power saving effect	Variable	
H33	Cumulative saving power	Variable	
H34	PID set point	0.1%	
H35	PID measured value	0.1%	
H36	PID deviation value	0.1%	
НЗА	Option input terminal status1 *4	_	
НЗВ	H3B Option input terminal status2 *5		
нзс	Option output terminal status *6	_	

- 1 The setting depends on capacities. (FR-A720-02150 (FR-A740-01100) or less / FR-A740-02880(FR-A740-01440) or more)
- \*2 Input terminal monitor details

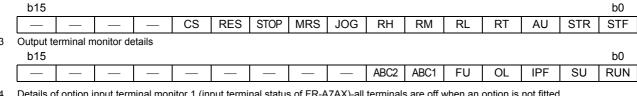

4 Details of option input terminal monitor 1 (input terminal status of FR-A7AX)-all terminals are off when an option is not fitted b15

| X15 | X14 | X13 | X12 | X11 | X10 | X9 | X8 | X7 | X6 | X5 | X4 | X3 | X2 | X1 | X0

*5	Details of option input terminal monitor 2 (input terminal status of FR-A7AX)-all terminals are off when an option is not fitted														
J	Details of option input terminal morntor 2 (input terminal status of FR-A7AX)-all terminals are off when an option is not litted														
	LAF										hΛ				
	b15										b0				




### [Alarm data]

Refer to page 397 for details of alarm description.

Data	Description		Data	Description		Data	Description
H00	No alarm		H91	E.PTC		HD3	E.OD
H10	E.OC1		HA0	E.OPT		HD5	E.MB1
H11	E.OC2		HA3	E.OP3		HD6	E.MB2
H12	E.OC3		HB0	E.PE		HD7	E.MB3
H20	E.OV1		HB1	E.PUE		HD8	E.MB4
H21	E.OV2		HB2	E.RET		HD9	E.MB5
H22	E.OV3		HB3	E.PE2		HDA	E.MB6
H30	E.THT		HC0	E.CPU		HDB	E.MB7
H31	E.THM		HC1	E.CTE		HDC	E.EP
H40	E.FIN		HC2	E.P24		HF1	E.1
H50	E.IPF		HC4	E.CDO		HF2	E.2
H51	E.UVT		HC5	E.IOH		HF3	E.3
H52	E.ILF		HC6	E.SER		HF6	E.6
H60	E.OLT		HC7	E.AIE		HF7	E.7
H70	E.BE		HC8	E.USB		HFB	E.11
H80	E.GF		HD0	E.OS		HFD	E.13
H81	E.LF		HD1	E.OSD			·
1100	L () I	l	1100	L	l		

Alarm description display example (instruction code H74)

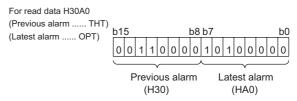

#### [Run command]

[Kull Colli				
Item	Instruction Code	Bit Length	Description	Example
Run command	HFA	8bit	b0: AU (current input selection) *1 b1: Forward rotation command b2: Reverse rotation command b3: RL (low speed operation command) *1 b4: RM (middle speed operation command) *1 b5: RH (high speed operation command) *1 b6: RT (second function selection) *1 b7: MRS (output stop) *1	[Example 1] H02 Forward rotation b7 b0 0 0 0 0 0 1 0 1 0    [Example 2] H00 Stop b7 b0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Run command (extended)	HF9	16bit	b0:AU (current input selection) *1 b1:Forward rotation command b2:Reverse rotation command b3:RL (low speed operation command) *1 b4:RM (middle speed operation command) *1 b5: RH (high speed operation command) *1 b6:RT (second function selection) *1 b7:MRS (output stop) *1 b8:JOG (Jog operation) *2 b9:CS (selection of automatic restart after instantaneous power failure) *2 b10: STOP (start self-holding) *2 b11:RES (reset) *2 b12:— b13:— b14:— b15:—	[Example 1] H0002 Forward rotation b15

<sup>\*1</sup> The signal within parentheses is the initial setting. The description changes depending on the setting of Pr. 180 to Pr. 184, Pr. 187 (input terminal function selection) (page 227).

<sup>\*2</sup> The signal within parentheses is the initial setting. Since jog operation/selection of automatic restart after instantaneous power failure/start self-holding/reset cannot be controlled by the network, bit 8 to bit 11 are invalid in the initial status. When using bit 8 to bit 11, change the signals with *Pr. 185, Pr. 186, Pr. 189, (input terminal function selection) (page 234).* (Reset can be executed with the instruction code HFD.)

### [Inverter status monitor]

Item	Instruction Code	Bit Length	Description	Example
Inverter status monitor	Н7А	8bit	b0:RUN (inverter running)* b1:Forward rotation b2:Reverse rotation b3:SU (up to frequency) * b4:OL (overload) * b5:IPF (instantaneous power failure) * b6:FU (frequency detection)* b7:ABC1 (alarm) *	[Example 1] H02 ··· During forward rotation b0
Inverter status monitor (extended)	H79	16bit	b0:RUN (inverter running) * b1:Forward rotation b2:Reverse rotation b3:SU (up to frequency) * b4:OL (overload) * b5:IPF (instantaneous power failure) * b6:FU (frequency detection) * b7:ABC1 (alarm) * b8:ABC2 (—)* b9:— b10:— b11:— b12:— b13:— b14:— b15: Alarm occurrence	[Example 1] H0002 ··· During forward rotation b15 b0 0 0 0 0 0 0 0 0 0 0 0 1 0 1 0 [Example 2] H8080 ··· Stop at alarm occurrence b15 b0 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

<sup>\*</sup> The signal within parentheses is the initial setting. The description changes depending on the setting of *Pr. 190 to Pr. 196 (output terminal function selection)*.



### 4.24.6 Modbus-RTU communication specifications (Pr. 331, Pr. 332, Pr. 334, Pr. 343, Pr. 539, Pr. 549)

Pr.299

page 260 **Pr.333** / page 325 Pr.335 Pr.342 page 326 Pr.380 Pr.548 page 353 Pr.550 / page 315

Using the Modbus-RTU communication protocol, communication operation or parameter setting can be performed from the RS-485 terminals of the inverter.

Parameter Number	Name	Initial Value	Setting Range	Description
			0	Broadcast communication is selected.
331	RS-485 communication station number	0	1 to 247	Specify the inverter station number. Set the inverter station numbers when two or more inverters are connected to one personal computer.
332	RS-485 communication speed	96	3, 6, 12, 24, 48, 96, 192, 384	Set the communication speed. The setting value × 100 equals the communication speed. For example, the communication speed is 9600bps when the setting value is "96".
	RS-485 communication parity check selection		0	Without parity check Stop bit length 2bits
334		2	1	With odd parity check Stop bit length 1bit
			2	With even parity check Stop bit length 1bit
343	Communication error count	0	_	Display the number of communication errors during Modbus-RTU communication. Reading only
			0	Modbus-RTU communication can be made, but the inverter will come to an alarm stop in the NET operation mode.
539	Modbus-RTU communication check time interval	9999	0.1 to 999.8s	Set the interval of communication check time. (same specifications as <i>Pr. 122</i> )
			9999	No communication check
549	Protocol selection	1	0	Mitsubishi inverter (computer link) protocol
	17010301 0010011011	•	1	Modbus-RTU protocol

#### CAUTION

When Modbus-RTU communication is performed with "0" (initial value) set in Pr. 331 RS-485 communication station number, broadcast communication is selected and the inverter does not send a response message to the master. When response from the inverter is necessary, set a value other than "0" in Pr. 331 (initial value 0).

Some functions are invalid for broadcast communication. (Refer to page 340)

#### REMARKS

- When using the Modbus-RTU protocol, set *Pr. 549 Protocol selection* to "1".

  When the communication option is fitted with *Pr. 550 NET mode operation command source selection* set to "9999" (initial value), the command source (e.g. run command) from the RS-485 terminals is invalid. (Refer to page 315)

### Communication specifications

· The communication specifications are given below.

Ite	m	Description	Related Parameters
Communication p	rotocol	Modbus-RTU protocol	Pr. 549
Conforming stand	dard	EIA-485 (RS-485)	_
Number of inverte	ers connected	1: N (maximum 32 units), setting is 0 to 247 stations	Pr. 331
Communication s	peed	Can be selected from 300, 600, 1200, 2400, 4800, 9600, 19200 and 38400bps	Pr. 332
Control protocol		Asynchronous system	
Communication method		Half-duplex system	
	Character system	Binary(fixed to 8 bits)	
	Start bit	1bit	
Communication	Stop bit length	Select from the following three types  · No parity, stop bit length 2 bits	Pr. 334
specifications	Parity check	<ul> <li>Odd parity, stop bit length 1 bit</li> <li>Even parity, stop bit length 1 bit</li> </ul>	11.004
	Error check	CRC code check	
	Terminator	Not used	
Waiting time setti	ng	Not used	

### (2) Outline


The Modbus protocol is the communication protocol developed by Modicon for PLC.

The Modbus protocol performs serial communication between the master and slave using the dedicated message frame. The dedicated message frame has the functions that can perform data read and write. Using the functions, you can read and write the parameter values from the inverter, write the input command of the inverter, and check the operating status. In this product, the inverter data are classified in the holding register area (register addresses 40001 to 49999). By accessing the assigned holding register address, the master can communicate with the inverter which is a slave.

#### **REMARKS**

There are two different serial transmission modes: ASCII (American Standard Code for Information Interchange) mode and RTU (Remote Terminal Unit) mode. This product supports only the RTU mode in which 1-byte (8-bit) data is transmitted as-is. Only the communication protocol is defined by the Modbus protocol, and the physical layer is not stipulated.

### (3) Message format

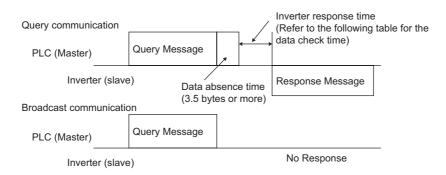

#### Data check time

Item	Check Time
Various monitors, operation command, frequency setting (RAM)	< 12ms
Parameter read/write, frequency setting (EEPROM)	< 30ms
Parameter clear/all clear	< 5s
Reset command	No answer

#### 1) Query

The master sends a message to the slave (= inverter) at the specified address.

#### 2) Normal Response

After receiving the query from the master, the slave executes the requested function and returns the corresponding normal response to the master.

#### 3) Error Response

If an invalid function code, address or data is received, the slave returns it to the master.

When a response description is returned, the error code indicating that the request from the master cannot be executed is added.

No response is returned for the hardware-detected error, frame error and CRC check error.

### 4) Broadcast

By specifying address 0, the master can send a message to all slaves. All slaves that received the message from the master execute the requested function. In this communication, the slaves do not return a response to the master.

#### REMARKS

The slave executes the function independently of the inverter station number setting (Pr. 331) during broadcast communication.




### (4) Message frame (protocol)

### Communication method

Basically, the master sends a query message (question) and the slave returns a response message (response). When communication is normal, Device Address and Function Code are copied as they are, and when communication is abnormal (function code or data code is illegal), bit 7 (= 80h) of Function Code is turned on and the error code is set to Data Bytes.

Query message from Master

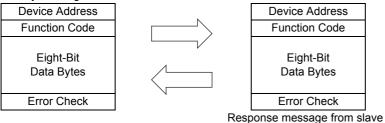

The message frame consists of the four message fields as shown above.

By adding the no-data time (T1: Start, End) of 3.5 characters to the beginning and end of the message data, the slave recognizes it as one message.

#### Protocol details

The four message fields will be explained below.

Start	1) ADDRESS	2) FUNCTION	3) DATA	4) CRC CHECK		End
T1	8bit	8bit	n × 8bit	L 8bit	H 8bit	T1

Message Field		Description							
1) ADDRESS field	message When th The valu	The address is 1 byte long (8 bits) and any of 0 to 247 can be set. Set 0 to send a broadcast message (all-address instruction) or any of 1 to 247 to send a message to each slave.  When the slave responds, it returns the address set from the master.  The value set to Pr. 331 RS-485 communication station number is the slave address.							
	function operation returned When th	that it wants to request fron n. The following table gives if the set function code is o e slave returns a normal res	oits) and any of 1 to 255 can be set. To the slave, and the slave performs the the supported function codes. An error ther than those in the following table. sponse, it returns the function code seponse, it returns H80 + function code.	e requested or response is					
	Code	Function Name	Outline	Broadcast Communication					
	H03	Read Holding Register	Reads the holding register data.	Disallowed					
2) FUNCTION field	H06	H06 Preset Single Register Writes data to the holding register.							
	H08	Diagnostics	Makes a function diagnosis. (communication check only)	Disallowed					
	H10	Preset Multiple Registers	Writes data to multiple consecutive holding registers.	Allowed					
	H46	Read Holding Register Access Log	Reads the number of registers that succeeded in communication last tme.	Disallowed					
	Table 1: Function code list								
3) DATA field			he function code (refer to page341). Da of access to the holding register, etc.	ta includes the byte					
4) CRC CHECK field	data is a byte is a The CR0 side reca	dded to the end of the mess dded first and is followed by C value is calculated by the salculates CRC during messalculates	cked for error. CRC check is performed sage. When CRC is added to the mest of the high-order byte. Sending side that adds CRC to the mestage receiving, and compares the resulting CRC CHECK field. If these two values	sage, the low-order ssage. The receiving It of that calculation					

### (5) Message format types

The message formats corresponding to the function codes in Table 1 on *page 340* will be explained.

### • Read holding register data (H03 or 03)

Can read the description of 1) system environment variables, 2) real-time monitor, 3) alarm history, and 4) inverter parameters assigned to the holding register area (refer to the register list (page 347)).

### **Query Message**

1) Slave Address	2) Function	3) Starting Address		) Function 3) Starting Address 4)		4) No. o	f Points	CRC (	Check
(8bit)	H03	Н	L	Н	L	L	Н		
	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)		

### Normal response (Response message)

1) \$	Slave Address	2) Function	5) Byte Count	6) Data			CRC (	Check
	(8bit)	H03 (8bit)	(8bit)	H (8bit)	L (8bit)	 (n × 16bit)	L (8bit)	H (8bit)

#### Query message setting

Message	Setting Description
1)Slave Address	Set the address to which the message will be sent. Broadcast communication cannot be made (0 is invalid).
2)Function	Set H03.
3)Starting Address	Set the address at which holding register data read will be started.  Starting address = starting register address (decimal) – 40001  For example, setting of the starting address 0001 reads the data of the holding register 40002.
4)No. of Points	Set the number of holding registers from which data will be read. The number of registers from which data can be read is a maximum of 125.

### · Description of normal response

Message	Setting Description
5)Byte Count	The setting range is H02 to H14 (2 to 20). Twice greater than the No. of Points specified at 4) is set.
6)Data	The number of data specified at 4) is set. Data are read in order of Hi byte and Lo byte, and set in order of starting address data, starting address + 1 data, starting address + 2 data,

Example) To read the register values of 41004 (Pr. 4) to 41006 (Pr. 6) from the slave address 17 (H11)

### Query message

Slave Address	Function	Starting Address		No. of Points		CRC Check	
H11	H03	H03	HEB	H00	H03	H77	H2B
(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

### Normal response (Response message)

Slave Address	Function	Byte Count		Data				CRC (	Check	
H11	H03	H06	H17	H70	H0B	HB8	H03	HE8	H2C	HE6
(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

### Read value

Register 41004 (*Pr. 4*): H1770 (60.00Hz) Register 41005 (*Pr. 5*): H0BB8 (30.00Hz) Register 41006 (*Pr. 6*): H03E8 (10.00Hz)



### • Write multiple holding register data (H06 or 06)

You can write the description of 1) system environment variables and 4) inverter parameters assigned to the holding register area (refer to the register list (page 347)).

### Query message

1) Slave Address	2) Function	3) Register Address		4) Preset Data		CRC Check	
(8bit)	H06 (8bit)	H (8bit)	L (8bit)	H (8bit)	L (8bit)	L (8bit)	H (8bit)

### Normal response (Response message)

I	1) Slave Address	2) Function	3) Register Address		4) Preset Data		CRC Check	
	(8bit)	H06 (8bit)	H (8bit)	L (8bit)	H (8bit)	L (8bit)	L (8bit)	H (8bit)

#### · Query message setting

Message	Setting Description
1)Slave Address	Set the address to which the message will be sent. Setting of address 0 enables broadcast communication
2)Function	Set H06.
3)RegisterAddress	Set the address of the holding register to which data will be written.  Register address = holding register address (decimal) – 40001  For example, setting of register address 0001 writes data to the holding register address 40002.
4)Prese Data	Set the data that will be written to the holding register. The written data is fixed to 2 bytes.

### · Description of normal response

1) to 4) (including CRC check) of the normal response are the same as those of the query message. No response is made for broadcast communication.

Example) To write 60Hz (H1770) to 40014 (running frequency RAM) at slave address 5 (H05).

#### Query message

Slave Address	Function	Register A	ster Address Preset Data			CRC (	Check
H05	H06	H00 H0D		H17	H70	H17	H99
(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

Normal Response (Response message)

Same data as the query message

#### CAUTION =

For broadcast communication, no response is returned in reply to a query. Therefore, the next query must be made when the inverter processing time has elapsed after the previous query.

### • Function diagnosis (H08 or 08)

A communication check can be made since the query message sent is returned unchanged as a response message (function of subfunction code H00). Subfunction code H00 (Return Query Data)

Query Message

1) Slave Address	2) Function	3) Subfunction		4) Date		CRC Check	
(8bit)	H08	H00	H00	Н	L	L	Н
(onit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

#### Normal Response (Response message)

1) Slave Address	2) Function	3) Subfunction		4) Date		CRC Check	
(8bit)	H08	H00	H00	Н	L	L	Н
(obit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

#### · Query message setting

Message	Setting Description
1)Slave Address	Set the address to which the message will be sent. Broadcast communication cannot be made (0 is invalid).
2)Function	Set H08.
3)Subfunction	Set H0000.
4)Data	Any data can be set if it is 2 bytes long. The setting range is H0000 to HFFFF.

### · Description of normal response

1) to 4) (including CRC check) of the normal response are the same as those of the query message.

#### = CAUTION =

For broadcast communication, no response is returned in reply to a query. Therefore, the next query must be made when the inverter processing time has elapsed after the previous query.

### • Write multiple holding register data (H10 or 16)

You can write data to multiple holding registers.

### Query message

1) Slave Address	2) Function	3) Starting Ad	ldress	,	o. of sters	5) ByteCount	6) Data		CRC	Check	
(8bit)	H10 (8bit)	H (8bit)	L (8bit)	H (8bit)	L (8bit)	(8bit)	H (8bit)	L (8bit)	 (n × 2 × 8bit)	L (8bit)	H (8bit)

### Normal Response (Response message)

1) Slave Address	2) Function	3) Starting Address		4) No. of Registers		CRC Check	
(8bit)	H10	H	L	H	L	L	H
	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

### · Query message setting

Message	Setting Description
1)Slave Address	Set the address to which the message will be sent. Setting of address 0 enables broadcast communication.
2)Function	Set H10.
3) Starting Address	Set the address where holding register data write will be started.  Starting address = starting register address (decimal) – 40001  For example, setting of the starting address 0001 reads the data of the holding register 40002.
4)No. of Points	Set the number of holding registers where data will be written. The number of registers where data can be written is a maximum of 125.
5)Byte Count	The setting range is H02 to HFA (0 to 250). Set a value twice greater than the value specified at 4).
6)Data	Set the data specified by the number specified at 4). The written data are set in order of Hi byte and Lo byte, and arranged in order of the starting address data, starting address + 1 data, starting address + 2 data



### · Description of normal response

1) to 4) (including CRC check) of the normal response are the same as those of the query message.

Example) To write 0.5s (H05) to 41007 (Pr. 7) at the slave address 25 (H19) and 1s (H0A) to 41008 (Pr. 8).

#### Query Message

Slave Address	Function		ting ress	No. of	Points	Byte Count		Da	ıta		CRC (	Check
H19	H10	H03	HEE	H00	H02	H04	H00	H05	H00	H0A	H86	H3D
(8bit)	(8bit)	(8bit)	(8bit)	8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

### Response message (Response message)

Slave Address	Function	Starting Address		No. of	No. of Points		CRC Check	
H19	H10	H03	HEE	H00	H02	H22	H61	
(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	

#### • Read holding register access log (H46 or 70)

A response can be made to a query made by the function code H03, H06 or H0F.

The starting address of the holding registers that succeeded in access during previous communication and the number of successful registers are returned.

In response to the query for other than the above function code, 0 is returned for the address and number of registers.

### **Query Message**

1) Slave Address	2) Function	CRC (	Check
(8bit)	H46	L	H
	(8bit)	(8bit)	(8bit)

### Normal Response (Response message)

1) Slave Address	2) Function	3) Starting Address		4) No. of Points		CRC Check	
(8bit)	H46 (8bit)	H (8bit)	L (8bit)	H (8bit)	L (8bit)	L (8bit)	H (8bit)

#### Query message setting

Message	Setting Description
1)Slave Address	Set the address to which the message will be sent. Broadcast communication cannot be made (0 is invalid)
2)Function	Set H46.

### · Description of normal response

Message	Setting Description
3)Starting Address	The starting address of the holding registers that succeeded in access is returned.  Starting address = starting register address (decimal) – 40001  For example, when the starting address 0001 is returned, the address of the holding register that succeeded in access is 40002.
4)No. of Points	The number of holding registers that succeeded in access is returned.

Example) To read the successful register starting address and successful count from the slave address 25 (H19).

#### Query Message

Slave Address	Function	CRC Check			
H19	H46	H8B	HD2		
(8bit)	(8bit)	(8bit)	(8bit)		

### Normal Response (Response message)

Slave Address	Function	Starting	Address	No. of	Points	CRC	Check
H19	H10	H03	HEE	H00	H02	H22	H61
(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)	(8bit)

Success of two registers at starting address 41007 (Pr. 7) is returned.



### • Error response

An error response is returned if the query message received from the master has an illegal function, address or data. No response is returned for a parity, CRC, overrun, framing or busy error.

— CAUTION

No response message is sent in the case of broadcast communication also.

Error response (Response message)

1) Slave Address	2) Function	3) Exception Code	CRC (	Check
(8bit)	H80 + Function (8bit)	(8bit)	L (8bit)	H (8bit)

Message	Setting Description
1)Slave address	Set the address received from the master.
2)Function	The master-requested function code + H80 is set.
3)Exception code	The code in the following table is set.

#### **Error code list**

Code	Error Item	Error Definition
01	ILLEGAL FUNCTION (Function code illegal)	The set function code in the query message from the master cannot be handled by the slave.
02	ILLEGAL DATA ADDRESS 11 (Address illegal)	The set register address in the query message from the master cannot be handled by the inverter.  (No parameter, parameter read disabled, parameter write disabled)
03	ILLEGAL DATA VALUE (Data illegal)	The set data in the query message from the master cannot be handled by the inverter.  (Out of parameter write range, mode specified, other error)

<sup>\*1</sup> An error will not occur in the following cases.

1) Function code H03 (Read Holding Register Data )

When the No. of Points is 1 or more and there is one or more holding registers from which data can be read

2) Function code H10 (Write Multiple Holding Register Data)

When the No. of Points is 1 or more and there is 1 or more holding registers to which data can be written Namely, when the function code H03 or H10 is used to access multiple holding registers, an error will not occur if a non-existing holding register or read disabled or write disabled holding register is accessed.

#### REMARKS

An error will occur if all accessed holding registers do not exist.

Data read from a non-existing holding register is 0, and data written there is invalid.

### · Message data mistake detection

To detect the mistakes of message data from the master, they are checked for the following errors. If an error is detected, an alarm stop will not occur.

#### Error check item

Error Item	Error Definition	Inverter Side Operation
Parity error	The data received by the inverter differs from the specified parity ( <i>Pr. 334</i> setting).	
Framing error	The data received by the inverter differs from the specified stop bit length ( <i>Pr. 333</i> ).	
Overrun error	The following data was sent from the master before the inverter completes data receiving.	1) Pr. 343 is increased by 1 at error occurrence.
Message frame error	The message frame data length is checked, and the received data length of less than 4 bytes is regarded as an error.	2)The terminal LF is output at error occurrence.
CRC check error	A mismatch found by CRC check between the message frame data and calculation result is regarded as an error.	



### 1) Pr. 343 Communication error count

You can check the cumulative number of communication errors.


Parameters	Setting Range	Minimum Setting Range	Initial Value	
343	(Read only)	1	0	

#### = CAUTION :

The number of commnication errors is temporarily stored into the RAM. As it is not stored into the EEPROM, performing a power supply reset or inverter reset clears the value to 0.

### 2) Output signal LF "minor failure output(communication error warnings)"

During a communication error, the minor failure output (LF signal) is output by open collector output. Assign the used terminal using any of *Pr. 190 to Pr. 196 (output terminal function selection)*.

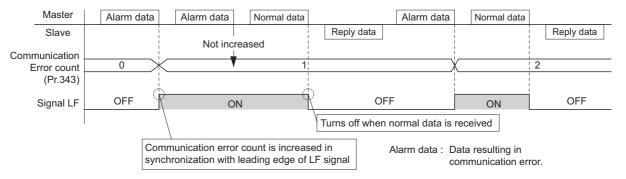

#### CAUTION

The LF signal can be assigned to the output terminal using any of *Pr. 190 to Pr. 196*. When terminal assignment is changed, the other functions may be affected. Please make setting after confirming the function of each terminal.

### (6) Modbus registers

System environment variable

Register	Definition	Read/Write	Remarks
40002	Inverter reset	Write	Any value can be written
40003	Parameter clear	Write	Set H965A as a written value.
40004	All parameter clear	Write	Set H99AA as a written value.
40006	Parameter clear *1	Write	Set H5A96 as a written value.
40007	All parameter clear *1	Write	Set HAA99 as a written value.
40009	Inverter status/control input instruction *2	Read/write	See below.
40010	Operation mode/inverter setting *3	Read/write	See below.
40014	Running frequency (RAM value)	Read/write	According to the <i>Pr. 37</i> and <i>Pr. 144</i> settings, the frequency and selectable speed are in 1r/min
40015	40015 Running frequency (EEPROM value)		increments.

<sup>\*1</sup> The communication parameter values are not cleared.

- \*2 For write, set the data as a control input instruction. For read, data is read as an inverter operating status.
- \*3 For write, set data as the operation mode setting. For read, data is read as the operation mode status.

#### <Inverter status/control input instruction>

#### Definition Bit **Control input instruction** Inverter status 0 Stop command RUN (inverter running) \*2 Forward rotation command Forward rotation 1 2 Reverse rotation command Reverse rotation 3 RH (high speed operation command) \*1 SU (up to frequency) \*2 4 RM (middle speed operation command) \*1 OL (overload) \*2 RL (low speed operation command) \*1 IPF (instantaneous power failure) \*2 5 6 JOG (Jog operation) \*1 FU (frequency detection) \*2 7 RT (second function selection) \*1 ABC1 (alarm) +2 8 AU (current input selection) \*1 ABC2 (-(selection of automatic restart after 0 instantaneous power failure) \*1 10 MRS (output stop) \*1 0 11 STOP (start self-holding) \*1 0 12 RES (reset) \*1 0 13 0 0 14 0 0 Alarm occurrence 15

### <Operation mode/inverter setting>

Mode	Read Value	Written Value
EXT	H0000	H0010
PU	H0001	
EXT JOG	H0002	_
NET	H0004	H0014
PU+ EXT	H0005	

The restrictions depending on the operation mode changes according to the computer link specifications.

Each assigned signal is valid or invalid depending on NET. (Refer to page 315)

<sup>1</sup> The signal within parentheses is the initial setting. The description changes depending on the setting of *Pr. 180 to Pr. 189 (input terminal function selection) (page 227)*.

<sup>\*2</sup> The signal within parentheses is the initial setting. The description changes depending on the setting of Pr. 190 to Pr. 196 (output terminal function selection) (page234).



• Real-time monitor Refer to *page 248* for details of the monitor description.

Register	Definition	Increments		
40201	Output frequency	0.01Hz		
40202	Output current	0.01A/ 0.1A *6		
40203	Output voltage	0.1V		
40205	Frequency setting	0.01Hz		
40206	Running speed	1r/min		
40207	Motor torque	0.1%		
40208	Converter output voltage	0.1V		
40209	Regenerative brake duty	0.1%		
40210	Electronic thermal relay function load factor	0.1%		
40211	40211 Output current peak value			
40212	40212 Converter output voltage peak value			

Register	Definition	Increments
40213	Input power	0.01kWh/
10210	Input power	0.1kW *6
40214	Output power	0.01kWh/
10211	Output power	0.1kW *6
40215	Input terminal	
10210	status *2	
40216	Output terminal	
10210	status *3	
40217	Load meter	0.1%
40218	Motor excitation	0.01A/
40210	current	0.1A *6
40219	Position pulse	
40220	Cumulative	1h
40220	energization time	111
40222	Orientation status	
40223	Actual operation	1h
40223	time	111
40224	Motor load factor	0.1%
40225	Cumulative power	1kWh

Register	Definition	Increments
40226	Torque command	0.1%
40227	Torque current command	0.1%
40228	Motor output	0.01/ 0.1kW *6
40229	Feedback pulse	
40250	Power saving effect	Variable
40251	Cumulative saving power	Variable
40252	PID set point	0.1%
40253	PID measured value	0.1%
40254	PID deviation value	0.1%
40258	Option input terminal status1 *3	_
40259	Option input terminal status2 *4	_
40260	Option output terminal status *5	

*1	Input terr b15	minal mo	nitor detai	ils												b0
	_		_	_	CS	RES	STOP	MRS	JOG	RH	RM	RL	RT	AU	STR	STF
*2	Output te	erminal m	onitor det	tails												
	b15															b0
	_		_	_	_	_				ABC2	ABC1	FU	OL	IPF	SU	RUN
*3	Details of	f option i	nput termi	inal moni	tor 1 (inp	ut termina	al status o	of FR-A7/	AX)-all ter	minals a	re off whe	en an opti	on is not	fitted		
	b15															b0
	X15	X14	X13	X12	X11	X10	X9	X8	X7	X6	X5	X4	X3	X2	X1	X0
*4	Details of	f option i	nput termi	inal moni	tor 2 (inp	ut termina	al status o	of FR-A7A	AX)-all tei	minals a	re off whe	en an opti	on is not	fitted		
	b15	·							•			·				b0
			_					_	_	_		_	_			DY
*5	Details of	f option in	nput termi	inal moni	tor (outpu	ıt termina	ıl status o	f FR-A7A	Y/A7AR)	-all termir	nals are c	off when a	an option	is not fitte	ed	
	b15	•	•		` '				,				•			b0
		_	_	_	_	_	RA3	RA2	RA1	Y6	Y5	Y4	Y3	Y2	Y1	Y0

<sup>\*6</sup> The setting depends on capacities. (FR-A720-02150 (FR-A740-01100) or less / FR-A720-02880 (FR-A740-01440) or more)

### Parameter

Parameters	Register	Parameter Name	Read/Write	Remarks
0 to 999	41000 to 41999	Refer to the parameter list (page 71) for the parameter names.	Read/write	The parameter number + 41000 is the register number.
C2(902)	41902	Terminal 2 frequency setting bias (frequency)	Read/write	
C3(902)	42092	Terminal 2 frequency setting bias (analog value)	Read/write	The analog value (%) set to C3 (902) is read.
C3(902)	43902	Terminal 2 frequency setting bias (terminal analog value)	Read	The analog value (%) of the voltage (current) applied to the terminal 2 is read.
125(903)	41903	Terminal 2 frequency setting gain (frequency)	Read/write	
C4(903)	42093	Terminal 2 frequency setting gain (analog value)	Read/write	The analog value (%) set to C4 (903) is read.
04(903)	43903	Terminal 2 frequency setting gain (terminal analog value)	Read	The analog value (%) of the voltage (current) applied to the terminal 2 is read.
C5(904)	41904	Terminal 4 frequency setting bias (frequency)	Read/write	
C6(904)	42094	Terminal 4 frequency setting bias (analog value)	Read/write	The analog value (%) set to C6 (904) is read.
C6(904)	43904	Terminal 4 frequency setting bias (terminal analog value)	Read	The analog value (%) of the current (voltage) applied to the terminal 4 is read.
126(905)	41905	Terminal 4 frequency setting gain (frequency)	Read/write	
C7(905)	42095	Terminal 4 frequency setting gain (analog value)	Read/write	The analog value (%) set to C7 (905) is read.
C7(905)	43905	Terminal 4 frequency setting gain (terminal analog value)	Read	The analog value (%) of the current (voltage) applied to the terminal 4 is read.
C12(917)	41917	Terminal 1 bias frequency (speed)	Read/write	
	42107	Terminal 1 bias (speed)	Read/write	Analog value (%) set in C13 (917) is read.
C13(917)	43917	Terminal 1 bias (speed) (terminal analog value)	Read	Analog value (%) of the voltage applied to terminal 1 is read.
C14(918)	41918	Terminal 1 gain frequency (speed)	Read/write	
	42108	Terminal 1 gain (speed)	Read/write	Analog value (%) set in C15(918) is read.
C15(918)	43918	Terminal 1 gain (speed) (terminal analog value)	Read	Analog value (%) of the voltage applied to terminal 1 is read.
C16(919)	41919	Terminal 1 bias command (torque/ magnetic flux)	Read/write	
	42109	Terminal 1 bias (torque/magnetic flux)	Read/write	Analog value (%) set in C17(919) is read.
C17(919)	43919	Terminal 1 bias (torque/magnetic flux) (terminal analog value)	Read	Analog value (%) of the voltage applied to terminal 1 is read.
C18(920)	41920	Terminal 1 gain command (torque/ magnetic flux)	Read/write	
	42110	Terminal 1 gain (torque/magnetic flux)	Read/write	Analog value (%) set in C19(920) is read.
C19(920)	43920	Terminal 1 gain (torque/magnetic flux) (terminal analog value)	Read	Analog value (%) of the voltage applied to terminal 1 is read.
C38(932)	41932	Terminal 4 bias command (torque/ magnetic flux)	Read/write	
	42122	Terminal 4 bias (torque/magnetic flux)	Read/write	Analog value (%) set in C39(932) is read.
C39(932)	43932	Terminal 4 bias (torque/magnetic flux) (terminal analog value)	Read	Analog value (%) of the current (voltage) applied to terminal 4 is read.
C40(933)	41933	Terminal 4 gain command (torque/ magnetic flux)	Read/write	
	42123	Terminal 4 gain (torque/magnetic flux)	Read/write	Analog value (%) set in C41 (933) is read.
C41(933)	43933	Terminal 4 gain (torque/magnetic flux) (terminal analog value)	Read	Analog value (%) of the current (voltage) applied to terminal 4 is read.



## Alarm history

Register	Definition	Read/Write	Remarks
40501	Alarm history 1	Read/write	
40502	Alarm history 2	Read	]
40503	Alarm history 3	Read	Being 2 bytes in length, the data is stored as
40504	Alarm history 4	Read	"H00OO". The error code can be referrred to in the low-order 1 byte.
40505	Alarm history 5	Read	Performing write using the register 40501 batch-
40506	Alarm history 6	Read	clears the alarm history. Set any value as data.
40507	Alarm history 7	Read	] , ,
40508	Alarm history 8	Read	]

## Alarm code list


Data	Description	Data	Description	Data	Description
H00	No alarm	H91	E.PTC	HD3	E.OD
H10	E.OC1	HA0	E.OPT	HD5	E.MB1
H11	E.OC2	HA3	E.OP3	HD6	E.MB2
H12	E.OC3	HB0	E.PE	HD7	E.MB3
H20	E.OV1	HB1	E.PUE	HD8	E.MB4
H21	E.OV2	HB2	E.RET	HD9	E.MB5
H22	E.OV3	HB3	E.PE2	HDA	E.MB6
H30	E.THT	HC0	E.CPU	HDB	E.MB7
H31	E.THM	HC1	E.CTE	HDC	E.EP
H40	E.FIN	HC2	E.P24	HF1	E.1
H50	E.IPF	HC4	E.CDO	HF2	E.2
H51	E.UVT	HC5	E.IOH	HF3	E.3
H52	E.ILF	HC6	E.SER	HF6	E.6
H60	E.OLT	HC7	E.AIE	HF7	E.7
H70	E.BE	HC8	E.USB	HFB	E.11
H80	E.GF	HD0	E.OS	HFD	E.13
H81	E.LF	HD1	E.OSD		
H90	E.OHT	HD2	E.ECT		

<sup>\*</sup> Refer to page 397 for details of alarm definition.

## (7) Open cable detection (Pr. 539 Modbus-RTU communication check time interval)

If disconnection (communication stop) is detected between the inverter and master as a result of disconnection check, a communication error (E.SER) occurs and the inverter output is shut off.

- · Disconnection check is made when the setting is any of "0.1s to 999.8s". To make disconnection check, it is necessary to send data from the master within the communication check time interval. (The inverter makes communication check (clearing of communication check counter) regardless of the station number setting of the data sent from the master.)
- · Communication check is started from the first communication after switching to the network operation mode (use Pr. 551 PU mode operation source selection to change).
- · When the setting is "9999", communication check (disconnection detection) is not made.
- · When the setting value is "0", monitor, parameter read, etc. can be performed. However, a communication error (E.SER) occurs as soon as the inverter is switched to the network operation mode.
- · Communication check time of query communication includes data absence time (3.5 byte). Since this data absence time differs according to the communication speed, make setting considering this absence time.

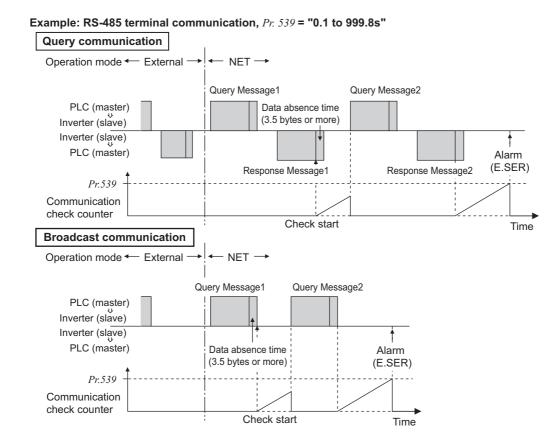



## 4.24.7 Operation by PLC function (Pr. 414 to Pr. 417, Pr. 506 to Pr. 515)

I/O data read, write, etc. can be performed by accessing the inverter in the predetermined method using special relays, special registers, etc.

Operation, parameter read/write, etc. can be performed in accordance with the created sequence programs (built in the inverter) using input data from the control input terminals.


With the output signals, output data can be output to outside the inverter from the control output terminals as not only the inverter's status signals but also pilot lamp on/off, interlock and other control signals set freely by the user

Parameter Number	Name	Initial Value	Setting Range	Description
	DI C function energtion		0	PLC function is invalid
414	PLC function operation selection	0	1	PLC function is valid (Inverter reset is necessary to make this setting valid.)
			0	The inverter start signal is made valid regardless of the sequence program execution key.
415	Inverter operation lock mode setting	0	1	The inverter start signal is made valid only when the sequence program execution key is set to RUN. When the sequence program execution key is in the STOP position, the inverter does not start if the inverter start signal STF or STR is turned on. (If the key is switched from RUN to STOP during inverter operation, the inverter is decelerated to a stop.)
416	Pre-scale function selection	0	0 to 5	Pre-scale function selection (increments scaling factor) 0: No function 1: ×1 2: ×0.1 3: ×0.01 4: ×0.001 5: ×0.0001
417	Pre-scale setting value	1	0 to 32767	Set the pre-scale value to calcute the number of sampling pulse when inputting the pulse train.
506	Parameter 1 for user			
507	Parameter 2 for user			Inverter parameters Pr. 506 to Pr. 515 can be used as
508	Parameter 3 for user			user parameters.
509	Parameter 4 for user			Since this parameter area and the devices used with the
510	Parameter 5 for user	0	0 to 65535	PLC function, D110 to D119, are accessible to each
511	Parameter 6 for user			other, the values set in <i>Pr. 506 to Pr. 515</i> can be used in a
512	Parameter 7 for user			sequence program. The result of operation performed in the sequence
513	Parameter 8 for user			program can also be monitored using <i>Pr. 506 to Pr. 515</i> .
514	Parameter 9 for user	_		
515	Parameter 10 for user			

Refer to the FR-A700 PLC function programming manual for details of the PLC function.

## 4.24.8 USB communication (Pr. 547, Pr. 548)

Inverter setup can be easily performed using the FR-Configurator by connecting the inverter and personal computer with a USB cable.

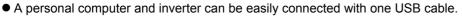




Parameter Number	Name	Initial Value	Setting Range	Description
547	USB communication station number	0	0 to 31	Specify the inverter station number.
548	USB communication check time interval		0	USB communication is enabled. However, the inverter will come to an alarm stop (E. USB) if operation is changed to PU operation mode.
		9999	0.1 to 999.8s	Set the interval of communication check time. If a no-communication state persists for longer than the permissible time, the inverter will come to an alarm stop (E.USB).
			9999	No communication check

## USB communication specifications

Interfase	Conforms to USB1.1
Transmission speed:	12Mbps
Connector	USB B connector (B receptacle)
Cable	Twisted pair shield cable 5m maximum
Power supply	Self-power supply

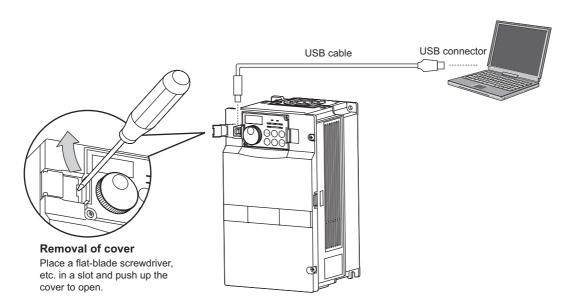

- · When using USB communication, set "3" in Pr. 551 PU mode operation command source selection.
- You can perform parameter setting and monitoring with the FR-Configurator. Refer to the instruction manual of the FR-Configurator for details.

## ◆ Parameters referred to ◆

Pr. 551 PU mode operation command source selection Refer to page 315



## 4.25 Special operation and frequency control

Purpose	Parameter th	Refer to Page	
Perform process control such as pump and air volume.	PID control	Pr. 127 to Pr. 134, Pr. 575 to Pr. 577	354
Switch between the inverter operation and commercial power-supply operation to operate.	Commercial power supply- inverter switchover function	Pr. 135 to Pr. 139, Pr. 159	362
Increase speed when the load is light.	Load torque high speed frequency control	Pr. 4, Pr. 5, Pr. 270 to Pr. 274	367
Frequency control appropriate for the load torque	Droop control	Pr. 286 to Pr. 288	369
Frequency setting by pulse train input	Pulse train input	Pr. 291, Pr. 384 to Pr. 386	371
Make the motor speed constant by encorder	Encoder feedback control	Pr. 144, Pr. 285, Pr. 359, Pr. 367 to Pr. 369	374
Avoid overvoltage alarm due to regeneration by automatic adjustment of output frequency	Regeneration avoidance function	Pr. 882 to Pr. 886	376

## 4.25.1 PID control (Pr. 127 to Pr. 134, Pr. 575 to Pr. 577)



The inverter can be used to exercise process control, e.g. flow rate, air volume or pressure.

The terminal 2 input signal or parameter setting is used as a set point and the terminal 4 input signal used as a feedback value to constitute a feedback system for PID control.




Parameter Number	Name	Initial Value	Setting Range	Description		
127	PID control automatic	9999	0 to 400Hz	Set the frequency at changed to PID conf	which the control is automatically trol.	
	switchover frequency		9999	Without PID automa	tic switchover function	
			10	PID reverse action	Deviation value signal input	
			11	PID forward action	(terminal 1 )	
			20	PID reverse action	Measured value (terminal 4 )	
128	PID action selection	10	21	PID forward action	Set point (terminal 2 or Pr. 133)	
120	PID action selection	10	50	PID reverse action	Deviation value signal input	
			51	PID forward action	(LONWORKS, CC-Link communication)	
			60	PID reverse action	Measured value, set point input	
			61	PID forward action	(LONWORKS, CC-Link communication)	
129 *1	PID proportional band		0.1 to 1000%	If the proportional band is narrow (parameter setting is smathe manipulated variable varies greatly with a slight change the measured value. Hence, as the proportional band narrow the response sensitivity (gain) improves but the stabil deteriorates, e.g. hunting occurs.  Gain Kp = 1/proportional band		
			9999	No proportional control		
130 *1	PID integral time	1s	0.1 to 3600s	(I) action to provide the proportional (P)	put, time (Ti) required for only the integral the same manipulated variable as that for action. As the integral time decreases, the earlier but hunting occurs more easily.	
			9999	No integral control		
131	PID upper limit	9999	0 to 100%	to 100%  Set the upper limit value. If the feedback value exceeds setting, the FUP signal is output. The maximum in 5V/10V) of the measured value (terminal 4) is equil 100%.		
			9999	No function		
132	PID lower limit	9999	0 to 100%	setting range, the FI	alue. If the measured value falls below the DN signal is output. The maximum input ne measured value (terminal 4) is	
			9999	No function		
133 *1	PID action set point	9999	0 to 100%	Used to set the set point for PID control.		
133 "1	TID action set point	2222	9999	Terminal 2 input is the set point.		

Parameter Number	Name	Initial Value	Setting Range	Description
134 *1	PID differential time	9999	0.01 to 10.00s	For deviation lamp input, time (Td) required for providing only the manipulated variable for the proportional (P) action. As the differential time increases, greater response is made to a deviation change.
			9999	No differential control
575	Output interruption detection time		0 to 3600s	The inverter stops operation if the output frequency after PID operation remains at less than the <i>Pr. 576</i> setting for longer than the time set in <i>Pr. 575</i> .
			9999	Without output interruption function
576	Output interruption detection level	0Hz	0 to 400Hz	Set the frequency at which the output interruption processing is performed.
577	Output interruption cancel level	1000%	900 to 1100%	Set the level ( <i>Pr. 577</i> minus 1000%) at which the PID output interruption function is canceled.

<sup>\*1</sup> Pr. 129, Pr. 130, Pr. 133 and Pr. 134 can be set during operation. They can also be set independently of the operation mode.


## (1) PID control basic configuration

· Pr. 128 = "10, 11" (Deviation value signal input)

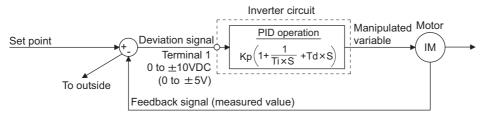

Kp: Proportionality constant Ti: Integral time S: Operator Td: Differential time

· Pr. 128 = "20, 21" (Measured value input)

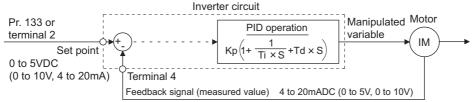

Kp: Proportionality constant Ti: Integral time S: Operator Td: Differential time




## (2) PID action overview

## 1) PI action

A combination of P action (P) and I action (I) for providing a manipulated variable in response to deviation and changes with time.

[Operation example for stepped changes of measured value]

(Note) PI action is the sum of P and I actions.

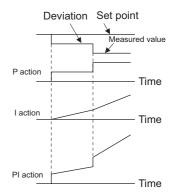


## 2) PD action

A combination of P action (P) and differential control action (D) for providing a manipulated variable in response to deviation speed to improve the transient characteristic.

[Operation example for proportional changes of measured value]


(Note) PD action is the sum of P and D actions.

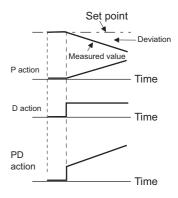

## 3) PID action


The PI action and PD action are combined to utilize the advantages of both actions for control.

(Note) PID action is the sum of P, I and D actions.

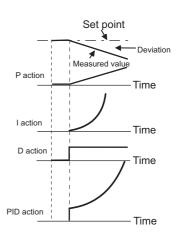


## 4)Reverse action

Increases the manipulated variable (output frequency) if deviation X = (set point - measured value) is positive, and decreases the manipulated variable if deviation is negative.

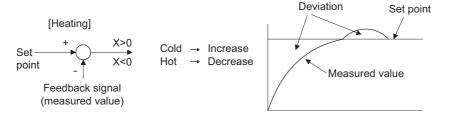

#### 5)Forward action

Increases the manipulated variable (output frequency) if deviation X = (set point - measured value) is negative, and decreases the manipulated variable if deviation is positive.

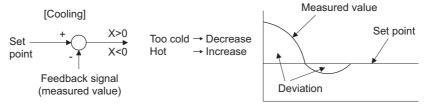


Relationships between deviation and manipulated variable (output frequency)

	Deviation			
	Positive	Negative		
Reverse action	71	Zi .		
Forward action	ĸ	71		

## (3) Connection diagram

- · Sink logic
- $\cdot Pr. 128 = 20$
- $\cdot Pr. 183 = 14$
- $\cdot Pr. 191 = 47$
- · Pr. 192 = 16
- $\cdot Pr. 193 = 14$
- · Pr. 194 = 15

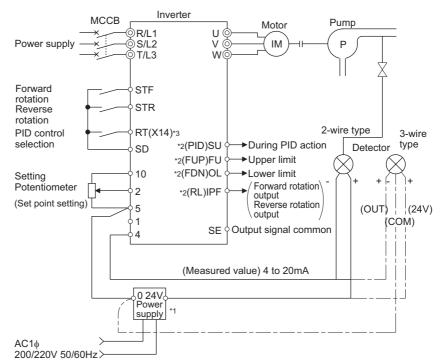

- \*1 The power supply must be selected in accordance with the power specifications of the detector used.
- \*2 The used output signal terminal changes depending on the Pr. 190 to Pr. 196 (output terminal selection) setting.
- \*3 The used output signal terminal changes depending on the Pr. 178 to Pr. 189 (input terminal selection) setting.



## (4) I/O signals and parameter setting

- Turn on the X14 signal to perform PID control. When this signal is off, PID action is not performed and normal inverter operation is performed. (Note that the X14 signal need not be turned on for PID control via LONWORKS communication.)
- Enter the set point across inverter terminals 2-5 or into *Pr. 133* and enter the measured value signal across inverter terminals 4-5. At this time, set "20" or "21" in *Pr. 128*.
- · When entering the externally calculated deviation signal, enter it across terminals 1-5. At this time, set "10" or "11" in *Pr. 128*.

	Signal	Terminal Used	Function	Description	Parameter Setting
	X14	Depending on	PID control selection	Turn on X14 to perform PID control.	Set 14 in any of <i>Pr. 178 to Pr. 189</i> .
	X64	Pr. 178 to Pr. 189	PID forward/ reverse action switchover	By turning on X64, forward action can be selected for PID reverse action ( $Pr. 128 = 10, 20$ ), and reverse action for forward action ( $Pr. 128 = 11, 21$ ).	Set 64 in any of <i>Pr. 178 to Pr. 189</i> .
	2	2	Set point input	Enter the set point for PID control.  0 to 5V0 to 100%  0 to 10V0 to 100%  4 to 20mA.0 to 100%	Pr. 128 = 20, 21, Pr. 133 = 9999  Pr. 73 = 1 · 1, 3, 5, 11, 13, 15  Pr. 73 = 0, 2, 4, 10, 12, 14  Pr. 73 = 6, 7
	PU	_	Set point input	Set the set value (Pr. 133) from the operation panel or parameter unit.	<i>Pr. 128</i> = 20, 21, <i>Pr. 133</i> = 0 to 100%
Input	1	1	Deviation signal input	Input the deviation signal calculated externally.  -5V to +5V100% to +100%  -10V to +10V100% to +100%	Pr. 128 = 10 *1, 11  Pr. 73 = 2, 3, 5, 7, 12, 13, 15, 17  Pr. 73 = 0, 1 *1, 4, 6, 10, 11, 14, 16
	4	4 4 Measured value input		Input the signal from the detector (measured value signal). 4 to 20mA.0 to 100% 0 to 5V0 to 100% 0 to 10V0 to 100%	Pr. 128 = 20, 21  Pr. 267 = 0 *1  Pr. 267 = 1  Pr. 267 = 2
	Communi- cation	_	Deviation value input Set value, measured value input	Input the deviation value from LONWORKS, CC-Link communication.  Input the set value and measured value from LONWORKS, CC-Link communication.	Pr. 128 = 50, 51  Pr. 128 = 60, 61
	FUP		Upper limit output	Output to indicate that the measured value signal exceeded the upper limit value ( <i>Pr. 131</i> ).	Pr. 128 = 20, 21, 60, 61 $Pr. 131 \neq 9999$ Set 15 or 115 in any of $Pr. 190 \text{ to } Pr.$ 196.
	FDN	Lower limit ou		Output when the measured value signal falls below the lower limit ( <i>Pr. 132</i> ).	Pr. 128 =20, 21, 60, 61 $Pr. 132 \neq 9999$ Set 14 or 114 in any of $Pr. 190 \text{ to } Pr.$ $196.  ^{\circ}3$
Output	RL	Pr. 190 to Pr. 196	Forward (reverse) rotation direction output	"Hi" is output to indicate that the output indication of the parameter unit is forward rotation (FWD) or "Low" to indicate that it is reverse rotation (REV) or stop (STOP).	Set 16 or 116 in any of <i>Pr. 190 to Pr. 196.</i> •3
	PID	During PID control activated		Turns on during PID control.	Set 47 or 147 in any of <i>Pr. 190 to Pr. 196.</i> *3
	SLEEP		PID output interruption	Turns on when the PID output interruption function is performed.	<i>Pr.</i> 575 ≠ 9999 Set 70 or 170 in any of <i>Pr.</i> 190 to <i>Pr.</i> 196. *3
	SE	SE	Output terminal common	Common terminal for terminals FUP, FDN, RL, PID and SLEEP	

<sup>\*1</sup> The shaded area indicates the parameter initial value.

## CAUTION


<sup>\*2</sup> For the setting method via LonWorks communication, refer to the LonWorks communication option (FR-A7NL) instruction manual. For the setting method via CC-Link communication, refer to the CC-Link communication option (FR-A7NC) instruction manual.

<sup>\*3</sup> When 100 or larger value is set in any of Pr. 190 to Pr. 196 (output terminal function selection), the terminal output has negative logic. (Refer to page 234 for details)

<sup>·</sup> Changing the terminal function using any of *Pr. 178 to Pr. 189, 190 to Pr. 196* may affect the other functions. Please make setting after confirming the function of each terminal.


## (5) PID control automatic switchover control (Pr. 127)

- · For a fast system startup at an operation start, the system can be started up in normal operation mode only at a start.
- · When the frequency is set to *Pr. 127 PID control automatic switchover frequency* within the range 0 to 400Hz, the system starts up in normal operation mode from a start until *Pr. 127* is reached, and then it shifts to PID control operation mode. Once the system has entered PID control operation, it continues PID control if the output frequency falls to or below *Pr. 127*.

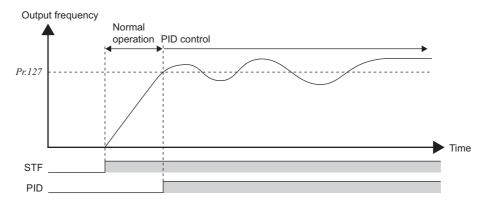

## (6) PID output suspension function (SLEEP function) (SLEEP signal, Pr. 575 to Pr. 577)

- The inverter stops operation if the output frequency after PID operation remains at less than the *Pr. 576 Output interruption detection level* setting for longer than the time set in *Pr. 575 Output interruption detection time*. This function can reduce energy consumption in the low-efficiency, low-speed range.
- · When the deviation (= set value measured value) reaches the PID output shutoff cancel level (*Pr. 577* setting 1000%) while the PID output interruption function is on, the PID output interruption function is canceled and PID control operation is resumed automatically.
- · While the PID output interruption function is on, the PID output interruption signal (SLEEP) is output. At this time, the inverter running signal (RUN) is off and the PID control operating signal (PID) is on.

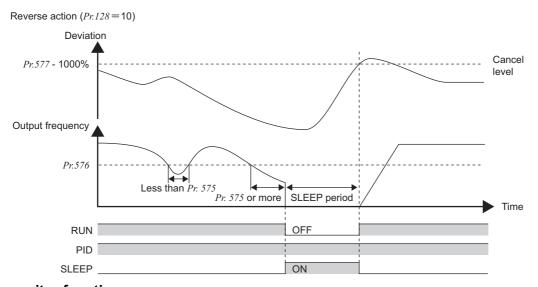


## (7) PID monitor function

- The PID control set value, measured value and deviation value can be output to the operation panel monitor display and terminal FM, AM.
- The deviation monitor can display a negative value on the assumption that 1000 is 0%. (The deviation monitor cannot be output from the terminal FM, AM.)
- · For the monitors, set the following values in *Pr. 52 DU/PU main display data selection, Pr. 54 FM terminal function selection*, and *Pr. 158 AM terminal function selection*.

Setting	Monitor Description	Minimum Increments	Terminal FM, AM Full Scale	Remarks
52	PID set point	0.1%	100%	For deviation input (Pr. 128 = 10, 11), the monitor
53	PID measurement value	0.1%	100%	value is always displayed as 0.
54	PID deviation value	0.1%		Value cannot be set to <i>Pr. 54</i> or <i>Pr. 158</i> .  The PID deviation value of 0% is displayed as 1000.




## (8) Adjustment procedure

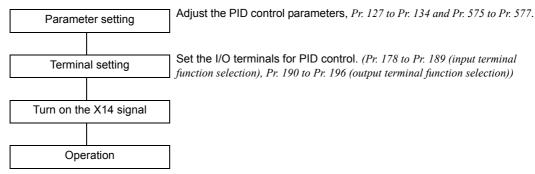

## (9) Calibration example

(A detector of 4mA at 0°C and 20mA at 50°C is used to adjust the room temperature to 25°C under PID control. The set point is given to across inverter terminals 2-5 (0 to 5V).)

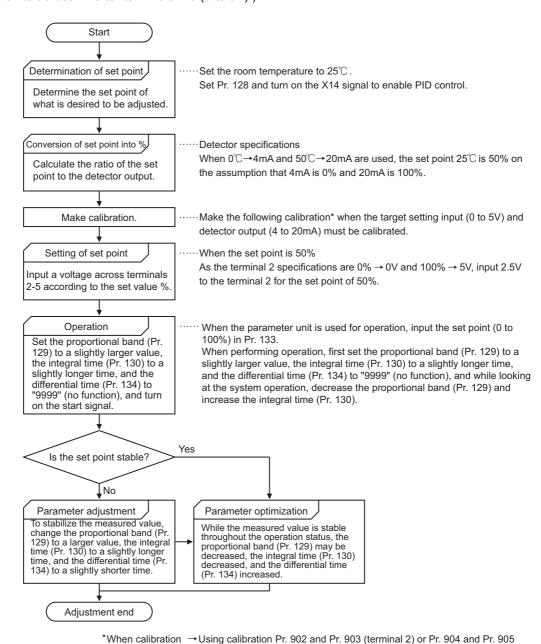

is required

(terminal 4), calibrate the detector output and target setting input.

Make calibration in the PU mode during an inverter stop.

## <Set point input calibration>

- 1. Apply the input voltage of 0% set point setting (e.g. 0V) across terminals 2-5.
- 2. Enter in C2 (Pr. 902) the frequency which should be output by the inverter at the deviation of 0% (e.g. 0Hz).
- 3. In *C3 (Pr. 902)*, set the voltage value at 0%.
- 4. Apply the voltage of 100% set point (e.g. 5V) to across terminals 2-5.
- 5. Enter in Pr. 125 the frequency which should be output by the inverter at the deviation of 100% (e.g. 60Hz).
- 6. In C4 (Pr. 903), set the voltage value at 100%.


## <Detector output calibration>


- 1. Apply the output current of 0% detector setting (e.g. 4mA) across terminals 4-5.
- 2. Make calibration using C6 (Pr. 904).
- 3. Apply the output current of 100% detector setting (e.g. 20mA) across terminals 4-5.
- 4. Make calibration using C7 (Pr. 905).


## REMARKS

· The frequency set in C5 (Pr. 904) and Pr. 126 should be the same as set in C2 (Pr. 902) and Pr. 125.

The results of the above calibration are as shown below:

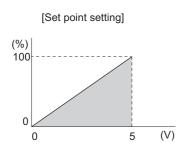

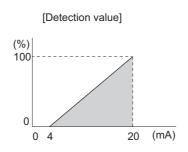

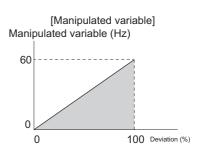

#### = CAUTION =

- · If the multi-speed (RH, RM, RL signal) or jog operation (jog signal) is entered with the X14 signal on, PID control is stopped and multi-speed or jog operation is started.
- · If the setting is as follows, PID control becomes invalid.
  - Pr. 79 Operation mode selection = "6" (switchover mode)
  - Pr. 858 Terminal 4 function assignment, Pr. 868 Terminal 1 function assignment = "4" (torque command)
- · When the *Pr. 128* setting is "20" or "21", note that the input across inverter terminals 1-5 is added to the set value across terminals 2-5.
- · When using terminal 4 (measured value input) and terminal 1 (deviation input) under PID control, set "0" (initial value) in *Pr. 858 Terminal 4 function assignment* and "0" (initial value) in *Pr. 868 Terminal 1 function assignment*.
- · Changing the terminal function using any of *Pr. 178 to Pr. 189, Pr. 190 to Pr. 196* may affect the other functions. Please make setting after confirming the function of each terminal.
- · When PID control is selected, the minimum frequency is the frequency set in *Pr. 902* and the maximum frequency is the frequency set in *Pr. 903*. (*Pr. 1 Maximum frequency* and *Pr. 2 Minimum frequency* settings are also valid.)
- · The remote operation function is invalid during PID operation.

## ♦ Parameters referred to ♦

Pr. 59 Remote function selection Refer to page 169

Pr. 73 Analog input selection Refer to page 282

Pr. 79 Operation mode selection Refer to page 306

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234

C2 (Pr. 902) to C7 (Pr. 905) Frequency setting voltage (current) bias/gain Refer to page 288



# 4.25.2 Commercial power supply-inverter switchover function (Pr. 57, Pr. 58, Pr. 135 to Pr. 139, Pr. 159)



page 304

The complicated sequence circuit for commercial power supply-inverter switchover is built in the inverter. Hence, merely inputting the start, stop or automatic switchover selection signal facilitates the interlock operation of the switchover magnetic contactor.

Parameter Number	Name	Initial Value	Setting 200V o (400V o	class	Description
E7	57 Restart coasting time 9999			FR-A720-00080 (FR-A740-00040) or less 0.5s, FR-A720-00110 to 00330 (FR-A740-00060 to 00170) or less 1s, FR-A720-00460 to 02150 (FR-A740-00230 to 01100) or less 3.0s, FR-A720-02880 (FR-A740-01440) or more 5.0s, The above times are coasting time.	
57	Restart coasting time	9999	02150 (01100) or less 02880 (01440) or more	0.1 to 5s 0.1 to 30s	Set the waiting time for inverter-triggered restart after an instantaneous power failure.
			999	-	No restart
58	Restart cushion time	1s	0 to (		Set a voltage starting time at restart.
135	Commercial power- supply switchover sequence output terminal selection	0	1		Without commercial power-supply switchover sequence  With commercial power-supply switchover sequence
136	MC switchover interlock time	1s	0 to 100s		Set the operation interlock time of MC2 and MC3.
137	Start waiting time	0.5s	0 to 100s		Set the time slightly longer (0.3 to 0.5s or so) than the time from when the ON signal enters MC3 until it actually turns on.
	Commercial power-		0		Inverter output is stopped (motor coast) at inverter fault.
138	supply operation switchover selection at an alarm	0	1		Operation is automatically switched to the commercial power-supply operation at inverter fault (Not switched when an external thermal error occurs)
139	Automatic switchover frequency between inverter and commercial power-supply operation	9999	0 to 60Hz		Set the frequency to switch the inverter operation to the commercial power-supply operation.  Inverter operation is performed from a start until <i>Pr. 139</i> is reached, and when the output frequency is at or above <i>Pr. 139</i> , inverter operation is automatically switched to commercial power supply operation.
			999	99	Without automatic switchover
159	Automatic switchover ON range between commercial power- supply and inverter operation	9999	0 to 10Hz		Valid during automatic switchover operation ( $Pr. 139 \neq 9999$ ) When the frequency command decreases below ( $Pr. 139$ minus $Pr. 159$ ) after operation is switched from inverter operation to commercial power-supply operation, the inverter automatically switches operation to the inverter operation and operates at the frequency of frequency command. When the inverter start command (STF/STR) is turned off, operation is switched to the inverter operation also.
			9999		Valid during automatic switchover operation ( $Pr. 139 \neq 9999$ ) When the inverter start command (STF/STR) is turned off after operation is switched from the inverter operation to commercial power-supply inverter operation, operation is switched to the inverter operation and the motor decelerates to stop.

When the motor is operated at 60Hz (or 50Hz), more efficient operation can be performed by the commercial power supply than by the inverter. When the motor cannot be stopped for a long time for the maintenance/inspection of the inverter, it is recommended to provide the commercial power supply circuit.

To switch between inverter operation and commercial power supply operation, an interlock must be provided to stop the motor once and then start it by the inverter in order to prevent the inverter from resulting in an overcurrent alarm.


Using the commercial power supply switchover sequence function that outputs the timing signal for operation of the magnetic contactor, a complicated commercial power supply switchover interlock can be provided by the inverter.

#### CAUTION

Commercial operation can not be performed with the Mitsubishi vector motor (SF-V5RU).

## (1) Connection diagram

The following shows the connection diagram of a typical commercial power supply switchover sequence. Sink logic, Pr. 185 = "7", Pr. 192 = "17", Pr. 193 = "18", Pr. 194 = "19"

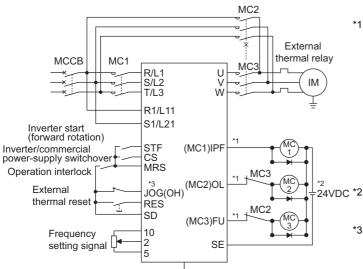

\*1 Take caution for the capacity of the sequence output terminal. The used terminal changes depending on the setting of *Pr. 190 to Pr. 196 (output terminal function selection)*.

Output Terminal Capacity	Output Terminal Permissble Load
Inverter open collector output (RUN, SU, IPF, OL, FU)	24VDC 0.1A
Inverter relay output (A1-C1, B1-C1, A2-B2, B2-C2) Relay output option (FR-A7AR)	230VAC 0.3A 30VDC 0.3A

When connecting a DC power supply, insert a protective diode. When connecting an AC power supply, connect a relay output option (FR-A7AR) and use a contact output.

The used terminal changes depending on the setting of Pr. 180 to Pr. 189 (input terminal function selection).

Commercial power supply switchover sequence connection diagram

## = CAUTION =

- Use the commercial power supply switchover function in external operation mode. Be sure to connect the other power supply since the function is not performed normally unless the connection terminals R1/L11, S1/L21 are not connected to the other power supply (power supply that does not pass MC1).
- Be sure to provide mechanical interlocks for MC2 and MC3.
- · Operations of magnetic contactors (MC1, MC2, MC3)

Magnetic		Ope	ration (O: Shorted, $\times$ :	Open)
Contactor	Installation Place		During inverter operation	At an inverter alarm occurrence
MC1	Between power supply and inverter input	0	0	× (Shorted by reset)
MC2	Between power supply and motor	0	×	× (Can be selected using Pr. 138, always open when external thermal relay is on)
MC3	Between inverter output and motor	×	0	×



· The input signals are as indicated below.

Signal	Terminal Used	Function	Operation	MC Operation ∗6		
Signal	Juan Terminal Osea Function		Орегацоп	MC1 *5	MC2	MC3
MRS	MRS	Operation enable/disable	ON Commercial-inverter operation enabled	0	_	_
IVIIXO	selection *1	OFF Commercial-inverter operation disabled	0	×	No change	
			ON Inverter operation	0	×	0
CS	CS CS Inverter/commercial switchover	OFF Commercial power suply operation	0	0	×	
STF (STR)	STF(STR)	Inverter operation command (Invalid for commercial	ONForward rotation (reverse rotation)	0	×	0
operation) *3	OFFStop	0	×	0		
ОН	Set "7 in any of	External thermal relay input	ON Motor normal	0		
011			OFF Motor abnormal	×	×	×
RES	RES	Operating status initialization	ON Initialization	No change	×	No change
		4	OFF Normal operation	0		

Unless the MRS signal is turned on, neither commercial power supply operation nor inverter operation can be performed.

O: MC-ON ×: MC-OFF

No change: The status before the signal turns on or off is held.

· The output signals are as indicated below.

Signal	Terminal Used (Pr. 190 to Pr. 196 setting)	Description
MC1	17	Control signal output of inverter input side magnetic contactor MC1
MC2	18	Control signal output of commercial power supply operation magnetic contactor MC2
MC3	19	Control signal output of inverter output side magnetic contactor MC3

 $<sup>^{*}2</sup>$  The CS signal functions only when the MRS signal is on.

STF (STR) functions only when both the MRS signal and CS signal are on.

<sup>\*4</sup> The RES signal enables reset input acceptance selection using Pr. 75 Reset selection/disconnected PU detection/PU stop selection.


<sup>\*5</sup> MC1 turns off when an inverter alarm occurs.

MC operation


<sup>— :</sup> Inverter operation...... .....MC2 is off and MC3 is on Commercial power supply operation ......MC2 is on and MC3 is off

## (2) Commercial power supply-inverter switchover operation sequence


Operation sequence example when there is no automatic switchover sequence (Pr. 139 = "9999")

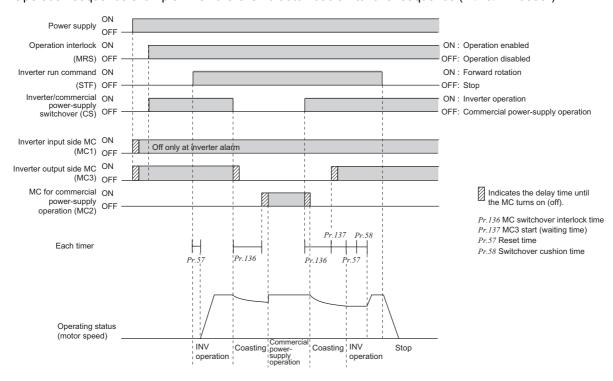

· Operation sequence example when there is automatic switchover sequence ( $Pr. 139 \neq$  "9999", Pr. 159 = "9999")

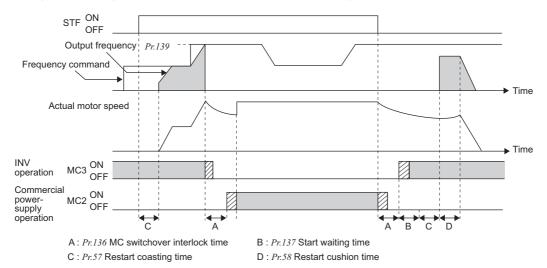

· Operation sequence example when there is automatic switchover sequence (Pr. 139 ≠ "9999", Pr. 159 ≠ "9999")

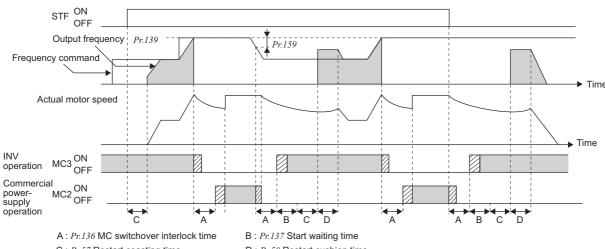


C: Pr.57 Restart coasting time

D: Pr.58 Restart cushion time



## (3) Operation procedure

## 1)Procedure for operation Operation pattern

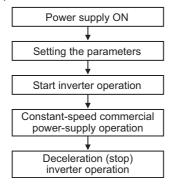

- · Pr. 135 = "1" (open collector output terminal of inverter)
- · Pr. 136 = "2.0s"
- Pr. 137 = "1.0s" (Set the time longer than the time from when MC3 actually turns on until the inverter and motor are connected. If the time is short, a restart may not function properly.)
- · Pr. 57 = "0.5s"
- Pr. 58 = "0.5s" (Be sure to set this parameter when commercial power supply operation is switched to inverter operation.)

## 2) Signal ON/OFF after parameter setting

	MRS	cs	STF	MC1	MC2	МС3	Remarks
Power supply ON	OFF (OFF)	OFF (OFF)	OFF (OFF)	$\begin{array}{c} OFF \to ON \\ (OFF \to ON) \end{array}$	OFF (OFF)	$ \begin{array}{c} OFF \to ON \\ (OFF \to ON) \end{array} $	External operation mode (PU operation mode)
At start (inverter)	$OFF \to ON$	$OFF \to ON$	$OFF \to ON$	ON	OFF	ON	
At constant speed (commercial power supply)	ON	$ON \rightarrow OFF$	ON	ON	$OFF \to ON$	$ON \rightarrow OFF$	MC2 turns on after MC3 turns off (coasting status during this period) Waiting time 2s
Switched to inverter for deceleration (inverter)	ON	$OFF \to ON$	ON	ON	ON → OFF	$OFF \to ON$	MC3 turns on after MC2 turns off (coasting status during this period) Waiting time 4s
Stop	ON	ON	$ON \rightarrow OFF$	ON	OFF	ON	

#### = CAUTION

- Connect the control power supply (R1/L11, S1/L21) in front of input side MC1. If the control power supply is connected behind input side MC1, the commercial power supply-inverter switchover sequence function is not executed.
- The commercial power supply-inverter switchover sequence function is valid only when *Pr. 135* = "1" in the external operation or combined operation mode (PU speed command, external operation command *Pr. 79* = "3"). When *Pr. 135* = "1" in the operation mode other than the above, MC1 and MC3 turn on.
- When the MRS and CS signals are on and the STF (STR) signal is off, MC3 is on, but when the motor was coasted to a stop from commercial power supply operation last time, a start is made after the time set in Pr. 137 has elapsed.
- · Inverter operation can be performed when the MRS, STF (STR) and CS signals turn on. In any other case (MRS signal ON), commercial power supply operation is performed.
- · When the CS signal is turned off, the motor switches to commercial power supply operation. However, when the STF (STR) signal is turned off, the motor is decelerated to a stop in the inverter operation mode.
- · When both MC2 and MC3 are off and either MC2 or MC3 is then turned on, there is a waiting time set in Pr. 136.
- If commercial power supply-inverter switchover sequence is made valid (*Pr. 135* = "1"), the *Pr. 136* and *Pr. 137* settings are ignored in the PU operation mode. The input terminals (STF, CS, MRS, OH) of the inverter return to their normal functions.
- When the commercial power supply-inverter switchover sequence function (*Pr. 135* = "1") and PU operation interlock function (*Pr. 79* = "7") are used simultaneously, the MRS signal is shared by the PU operation external interlock signal unless the X12 signal is assigned. (When the MRS and CS signals turn on, inverter operation is enabled)
- · Changing the terminal function using any of *Pr. 178 to Pr. 189, 190 to Pr. 196* may affect the other functions. Please make setting after confirming the function of each terminal.

#### → Parameters referred to →

Pr. 11 DC injection brake operation time Refer to page 199

Pr. 57 Restart coasting time Refer to page 260

Pr. 58 Restart cushion time Refer to page 260

Pr. 79 Operation mode selection Refer to page 306

Pr. 178 to Pr. 189 (Input terminal function selection) Refer to page 227

Pr. 190 to Pr. 196 (Output terminal function selection) Refer to page 234

Pr.3

□ page

Pr 268


/Pr.<u>275</u>/

## 4.25.3 Load torque high speed frequency control (Pr. 4, Pr. 5, Pr. 270 to Pr. 274)

Load torque high speed frequency control is a function which automatically sets the operational maximum frequency according to the load.

More specifically, the magnitude of the load is judged according to the average current at a certain time after starting to perform operation at higher than the preset frequency under light load.

This function is designed to increase speed automatically under light load, for example to minimize the incoming/outgoing time in a multi-story parking lot.

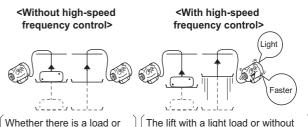

The lift with a light load or without a load is moved faster than the list with a load.


(The output frequency is increased.)

	Value	Setting Range	Description
Multi-speed setting (high speed)	60Hz	0 to 400Hz	Set the higher-speed frequency.
Multi-speed setting (middle speed)	30Hz	0 to 400Hz	Set the lower-speed frequency.
01		0	Normal operation
•		1	Stop-on-control (refer to page 210)
	0	2	Load torque high speed frequency control
selection		3	Stop-on-contact (refer to page 210) +load torque high speed frequency control
High-speed setting maximum current	50%	0 to 220% *	Set the upper and lower limits of the current at high and
Middle-speed setting minimum current	100%	0 to 220% *	middle speeds.
Current overeging renge	0000	0 to 400Hz	Average current during acceleration from $(Pr. 273 \times 1/2)$ Hz to $(Pr. 273)$ Hz can be achieved.
73 Current averaging range	9999	9999	Average current during acceleration from ( $Pr. 5 \times 1/2$ ) Hz to ( $Pr. 5$ ) Hz is achieved.
Current averaging filter time constant	1 16		Set the time constant of the primary delay filter relative to the output current.  The time constant [ms] is $0.75 \times Pr.274$ and the initial value is 12ms.  A larger setting provides higher stability but poorer response.
Stfs HnNn	Aulti-speed setting (middle speed)  Stop-on contact/load orque high-speed requency control selection  High-speed setting maximum current  Middle-speed setting minimum current  Current averaging range	Adulti-speed setting (middle speed)  Stop-on contact/load orque high-speed requency control selection  High-speed setting maximum current  Middle-speed setting ninimum current  Current averaging range  50%  100%	Multi-speed setting (middle speed)  Stop-on contact/load orque high-speed requency control selection  High-speed setting maximum current  Middle-speed setting ninimum current  Current averaging range  O to 400Hz  0 to 220% *  0 to 220% *  0 to 400Hz  100%  O to 220% *

not, the lift is moved

vertically at the same speed.

## <Connection diagram>

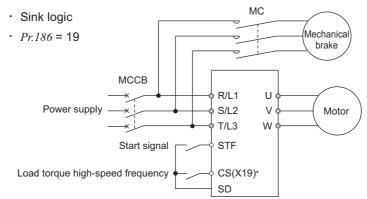


\* The used terminal changes according to the Pr. 180 to Pr. 189 (input terminal function selection) settings.

<sup>\*</sup> When Pr. 570 Multiple rating setting ≠ "2", performing parameter clear changes the setting range. (Refer to page 154)



## (1) Load torque high speed frequency control setting

- · Set "2 or 3" in Pr. 270 Stop-on contact/load torque high-speed frequency control selection.
- · When operating with the load torque high speed frequency function selection signal (X19) on, the inverter automatically changes the maximum frequency within the setting range of *Pr. 4 Multi-speed setting (high speed)* and *Pr. 5* according to the magnitude of the average current during the time to accelerate from 1/2 of the frequency set in *Pr. 5 Multi-speed setting (middle speed)* to the frequency set in *Pr. 5*.
- · Set "19" in Pr. 178 to Pr. 189 (input terminal function selection) and assign the X19 signal function to the input terminal.
- · Made valid only in the external operation mode.
- · This control can be activated at every start.

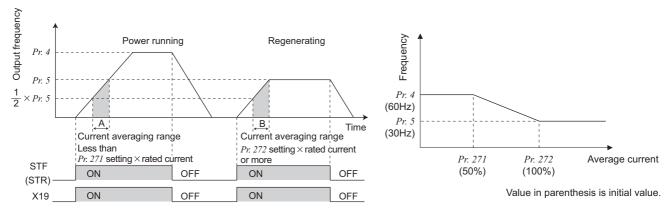

## (2) Operation of load torque high speed frequency control setting

- · When the average current of the current averaging range (above chart A) during operation with the X19 signal on is less than the "rated inverter current × *Pr. 271* setting (%)", the maximum frequency automatically becomes the *Pr. 4 Multi-speed setting (high speed)*.
- · When the average current of the current averaging range (above chart B) during operation with the X19 signal on is than the "rated inverter current × *Pr. 272* setting (%)", the maximum frequency automatically becomes the *Pr. 5 Multispeed setting (middle speed)* setting value.
- · The current averaging range can be set between 1/2 frequency of the Pr. 273 setting value and Pr. 273 set frequency.

## **CAUTION**

- · When the current averaging range includes the constant power range, the output current may become large in the constant power range.
- · When the average current value in the current averaging range is small, deceleration time becomes longer as the running frequency increases.
- The maximum output frequency is 120Hz. The output frequency is 120Hz even when the setting is above 120Hz.
- · The fast-response current limit function is made invalid.
- · When the average current during acceleration is too small, it may be judged as regeneration and the maximum frequency becomes the setting of *Pr. 5*.
- · Changing the terminal function using any of *Pr. 178 to Pr. 189* may affect the other functions. Please make setting after confirming the function of each terminal.
- The load torque high speed frequency function is made invalid in the following operation conditions. PU operation (*Pr. 79*), PU+external operation (*Pr. 79*), JOG operation (*JOG signal*), PID control function operation (*X14 signal*), remote setting function operation (*Pr. 59*), orientation control function operation, multi-speed setting (*RH, RM, RL signal*), 16 bit digital input option (FR-A7AX)

## **ACAUTION**

↑ When the load is light, the motor may suddenly accelerate to 120Hz maximum, causing hazard. Securely provide mechanical interlock on the machine side to perform.

#### ◆ Parameters referred to ◆

Pr. 4 to Pr. 6, Pr. 24 to Pr. 27 (multi-speed setting) Refer to page 165

Pr. 59 Remote function selection Refer to page 169

Pr. 79 Operation mode selection Refer to page 306

Pr. 128 PID action selection Refer to page 354

Pr. 178 to Pr. 189 (input terminal function selection) Refer to page 227

## 4.25.4 Droop control (Pr. 286 to Pr. 288) Magnetic flux Sensorless Vector

This function is designed to balance the load in proportion to the load torque to provide the speed drooping characteristic under advanced magnetic flux vector control, real sensorless vector control and vector control. This function is effective for balancing the load when using multiple inverters




Parameter Number	Name	Initial Value	Setting Range	Description
			0	Normal operation
286	Droop gain	0%	0.1% to 100%	Droop control is valid Set the drooping amount at the rated torque as a percentage with respect to the rated motor frequency.
287	Droop filter time constant	0.3s	0 to 1s	Set the time constant of the filter applied on the torque amount current.
			0	Droop control is not exercised during acceleration/ deceleration.
		ļ	1	Droop control is always exercised during operation. (with 0 limit)
288	Droop function activation selection	0	2	Droop control is always exercised during operation. (without 0 limit)
			10	Droop control is not exercised during acceleration/ deceleration. (Motor speed is referenced)
			11	Droop control is always exercised during operation. (Motor speed is referenced)

# Prequency Droop compensation frequency Droop gain Droop Torque

## (1) Droop control

- The output frequency is changed according to the magnitude of torque amount current under advanced magnetic flux vector control, real sensorless vector control and vector control. The drooping amount at the rated torque is set by the droop gain as a percentage using the rated frequency (Motor speed when Pr. 288 = "10, 11") as a reference.
- The maximum droop compensation frequency is 120Hz.

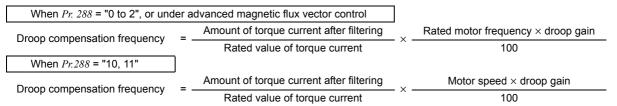

## REMARKS

Set the droop gain to about the rated slip of the motor.



## (2) Limit the frequency after droop compensation (0 limit)

· Setting *Pr. 288* under real sensorless vector control or vector control can limit the frequency command when the frequency after droop compensation is negative.

Pr. 288	Descr	ription
Setting	Under advanced magnetic flux vector control	Under real sensorless vector control or vector control
0 (initial value), 10	Droop control is not exercised during acceleration/	Droop control is not exercised during acceleration/ deceleration. Note that the frequency command is limited at 0Hz when the frequency command after droop control is negative. When $Pr.288$ = "10", droop compensation amount is determined using the motor speed as reference.
1, 11	deceleration.  Note that the frequency command after droop control is limited at 0.5Hz when the frequency command after droop control is negative.  Droop compensation amount is determined using the rated motor frequency as reference.	Droop control is always exercised during operation. Note that the frequency command is limited at 0Hz when the frequency command after droop control is negative. When $Pr.288$ = "11", droop compensation amount is determined using the motor speed as reference.
2		Droop control is always exercised during operation.  Note that under vector control, the frequency command is not limited at 0Hz even when the frequency command after droop control is negative.  (The frequency command is limited at 0Hz under real sesorless vector control.)

## REMARKS

The maximum value of frequency after droop compensation is either 120Hz or Pr. 1 Maximum frequency, whichever is smaller.

## ◆ Parameters referred to ◆

Pr. 1 Maximum frequency Refer to page 156

## 4.25.5 Frequency setting by pulse train input (Pr. 291, Pr. 384 to Pr. 386)

The inverter speed can be set by inputting pulse train from terminal JOG. In addition, synchronous speed operation of inverters can be performed by combining pulse train I/O.


page 369
Pr.292
page 213
Pr.383
Pr. 450/ page 184
ł

/Pr.288/


Parameter Number	Name	Initial Value	Setting Range	Description		
				Pulse train input	Pulse train output	
			0	Terminal JOG	FM output	
			1	Pulse train input	FM output	
			10	Terminal JOG	High speed pulse train output (50%Duty)	
			11	Pulse train input	High speed pulse train output (50%Duty)	
291	91 Pulse train I/O selection	0	20	Terminal JOG	High speed pulse train output (ON width is always same)	
			21	Pulse train input	High speed pulse train output (ON width is always same)	
			100	Pulse train input	High speed pulse train output (ON width is always same) The inverter outputs the signal input as pulse train as it	
			0	Pulse train input invalid		
384	Input pulse division scaling factor		1 to 250	Indicates division scaling factor to the input pulse and the frequency resolution to the input pulse changes according the value.		
385	Frequency for zero input pulse	0Hz	0 to 400Hz	Set the frequency when the input pulse is 0 (bias).		
386	Frequency for maximum input pulse	60Hz	0 to 400Hz	Set the frequency when the input pulse is maximum (gain).		

## (1) Pulse train input selection (Pr. 291)


- · Setting any of "1, 11, 21, 100" in *Pr. 291 Pulse train I/O selection* and a value other than "0" in *Pr. 384 Input pulse division scaling factor* switches terminal JOG to pulse train input terminal and frequency setting of the inverter can be performed. (The initial value is JOG signal)
  - Pulse train input of maximum of 100k pulse/s is enabled.
- · Output specifications (high speed pulse train output or FM output) of terminal FM can be selected using Pr. 291.
  - Connection with an open collector output system pulse generator

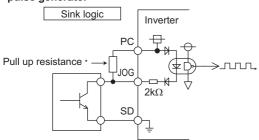


 Connection with a complimentary output system pulse generator

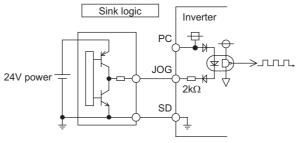

 Connection with an open collector output system pulse generator

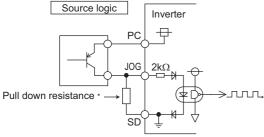

 Connection with a complimentary output system pulse generator

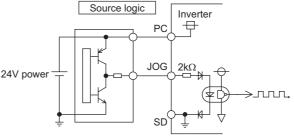

Using care not to change output specifications of terminal JOG, change the setting value (Refer to page 254 for pulse train output).



\* When the wiring length of the open collector output connection is long, input pulse can not be recognized because of a pulse shape deformation due to the stray capacitances of the wiring.

When wiring length is long (10m or more of 0.75mm<sup>2</sup> twisted cable is recommended), connect an open collector output signal and power supply using a pull up resistance. The reference of resistance value to the wiring length is as in the table below,

Wiring Length	Less than 10m	10 to 50m	50 to 100m
Pull up/down resistance	Not necessary	1kΩ	470Ω
Load current (for reference)	10mA	35mA	65mA

Stray capacitances of the wiring greately differ according to the cable type and cable laying, the above cable length is not a guaranteed value. When using a pull up resistance, check the permissible power of the resistor and permissible load current of output transistor and use them within a permissible range.

## REMARKS


· When pulse train input is selected, a function assigned to terminal JOG using Pr. 185 JOG terminal function selection is made invalid.

## Pulse train input specifications

	Item	Specifications
		Open collector output
Avail	able pulse system	Complimentary output
		(power supply voltage 24V)
	H input level	20V or more (voltage between JOG-SD)
	L input level	5V or less (voltage between JOG-SD)
Maxim	num input pulse rate	100kpps
	um input pulse width	2.5us
Input re	sistance/load current	2kΩ (typ) / 10mA (typ)
Maximum wiring	Open collector output system	10m (0.75mm <sup>2</sup> / twisted pair)
length (reference value) Complemenraty output system		100m (output resistance 50 $\Omega$ ) *
Det	tection resolution	1/3750

The wiring length of complementary output depends on the output wiring specifications of complementary output device.

Stray capacitances of the wiring greately differ according to the cable type and cable laying, the maximum cable length is not a guaranteed value.

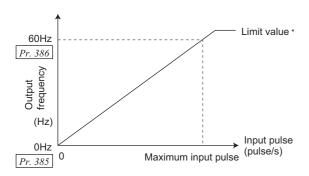

# (2) Adjustment of pulse train input and frequency (Pr. 385, Pr. 386)

- · Frequency for zero input pulse can be set using *Pr. 385 Frequency for zero input pulse* and frequency at maximum input pulse can be set using *Pr. 386 Frequency for maximum input pulse*.
  - Limit value can be calculated from the following formula.
     (Pr. 386 Pr. 385) × 1.1 + Pr. 385


## (3) Calculation method of division scaling factor of input pulse (Pr. 384)

- Maximum input pulse can be calcualted from the following formula using *Pr. 384 Input pulse division scaling factor*.
   Maximum of input pulse (pulse/s) = *Pr. 384* × 400 (maximum of 100kpulse/s)
   Detectable pulse = 11.45 pulse/s
- For example, when you want to operate at 0Hz when pulse train input is zero and operate at 30Hz when pulse train is 4000 pulse/s, set parameters as below.

Pr. 384 = 10 (maximum input pulse 4000 pulse/s)

Pr. 385 = 0Hz, Pr. 386 = 30Hz (pulse train limit value is 33Hz)

## (4) Synchronous speed operation by pulse I/O

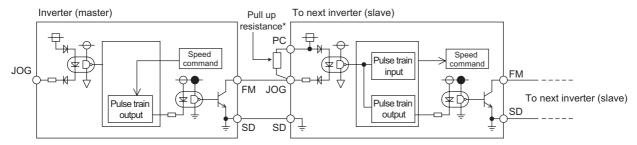

\* When the wiring length between FM and JOG is long, a pulse shape is deformed due to the stray capacitances of the wiring and input pulse can not be recognized.

When wiring length is long (10m or more of 0.75mm<sup>2</sup> twisted cable is recommended), connect terminal JOG and terminal PC using an external pull up resistance. The reference of resistance value to the wiring length is as in the table below,

Stray capacitances of the wiring greately differ according to the cable type and cable laying, the above cable length is not a guaranteed value.

When using a pull up resistance, check the permissible power and permissible load current (terminal PC: 100mA, high speed pulse train output: 85mA) of the resistor and use them within a permissible range.

- By setting "100" in *Pr. 291*, pulse train input can be output at pulse train output (terminal FM) as it is. Synchronous speed operation of multiple inverters can be enabled by daisy chain connection.
- · Since maximum pulse train output is maximum of 50k pulse/s, set "125" in Pr. 384 of the inverter receiving pulse train.
- When operating two or more inverters synchronously, perform wiring according to the following steps. (so that 24V contact input will not be applied to terminal FM)
  - 1) Set pulse train output (a value other than "0, 1") in Pr. 291 of the master side inverter.
  - 2) Turn off the inverter power
  - 3) Perform wiring of the master side terminal FM-SD and slave side terminal JOG-SD
  - 4) Turn on the inverter power

#### CAUTION

- After changing a setting value of *Pr. 291*, connect JOG terminal between termial FM and SD. Take note that a voltage is not applied to terminal FM specially when FM output (voltage output) pulse train is selected.
- · For the slave side inverter, use sink logic (factory setting). The inverter will not function properly if source logic is selected.

## Specifications of synchronous speed operation

Item	Specifications
Output pulse type	Pulse width is fixed (10μs)
Pulse rate	0 to 50kpps
Pulse transmission delay	1 to 2μs per inverter *

<sup>\*</sup> When a pulse transmission delay in a slave is approximately 1 to 2μs and wiring length is long, the delay further increases.

#### ◆ Parameters referred to ◆

Pr. 291 (pulse train output ) 🕮 Refer to page 254

## 4.25.6 Encoder feedback control (Pr. 144, Pr. 285, Pr. 359, Pr. 367 to Pr. 369)

This controls the inverter output frequency so that the motor speed is constant to the load variation by detecting the motor speed with the speed detector (encoder) to feed it back to the inverter.

Option FR-A7AP is necessary.

Parameter Numbers	Name	Initial Value	Setting Range	Description
144	Speed setting switchover	4	0, 2, 4, 6, 8, 10, 102, 104, 106, 108, 110	Set the number of motor poles when performing encoder feedback control under V/F control.
285	Overspeed detection frequency 1		0 to 30Hz	If (detected frequency) - (output frequency) > <i>Pr. 285</i> during encoder feedback control, the inverter alarm (E.MB1) is provided.
			9999	Overspeed is not detected.
<b>359</b> ∗2	Encoder rotation direction	1	0	Encoder Clockwise direction as viewed from A is forward rotation
339 2	9 *2 Encoder rotation direction		1	Encoder Counter clockwise direction as viewed from A is forward rotation
<b>367</b> *2	Speed feedback range	9999	0 to 400Hz	Set the region of speed feedback control.
367 "2	Speed feedback range	3333	9999	Encoder feedback control is invalid
<b>368</b> *2	Feedback gain	1	0 to 100	Set when the rotation is unstable or response is slow.
369 *2	Number of encoder pulses	1024	0 to 4096	Set the number of pulses of the encoder. Set the number of pulses before multiplied by four.

<sup>\*1</sup> When exercising vector control with the FR-A7AP, this parameter changes to excessive speed deviation detection frequency.(For details, refer to page nn)

## (1) Setting before the operation

- · When performing encoder feedback control under V/F control, set the number of motor poles in *Pr. 144 Speed setting switchover* according to the motor used. Under advanced magnetic flux vector control, the *Pr. 81 Number of motor poles* setting is made valid and the *Pr. 144* setting is invalid.
- Set the rotation direction and the number of encoder pulses of the encoder using *Pr. 359 Encoder rotation direction* and *Pr. 369 Number of encoder pulses*.

#### **REMARKS**

- When "0, 10, 10" is set in Pr: 144 and run the inverter, error E.1 to E.3 occurs.
- · When "102, 104, 106, 108" is set in Pr. 144, the value subtracting 100 is set as the number of motor poles.


#### - CAUTION

- · If the number of motor poles is wrong, control at correct speed can not be performed. Always check before operation.
- Encoder feedback control can not be performed when the setting of encoder rotation direction is wrong. (Inverter operation is enabled.)

Encoder rotation direction can be checked with the rotation direction display of the parameter unit.

<sup>\*2</sup> The above parameters can be set when the FR-A7AP (option) is mounted.

# When a value other than "9999" is set in *Pr. 367 Speed feedback range*, encoder feedback control is valid. Using the set point (frequency at which stable speed)

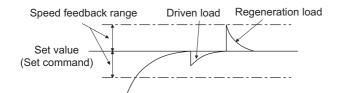

(2) Selection of encoder feedback control (Pr. 367)

 Using the set point (frequency at which stable speed operation is performed) as reference, set the higher and lower setting range. Normally, set the frequency converted from the slip amount (r/min) of the rated motor speed (rated load). If the setting is too large, response becomes slow.

## Example: Rated speed of a 4-pole motor is 1740r/min (60Hz)

Slip Nsp

- synchronous speed rated speed
- = 1800 1740 = 60(r/min)

Frequency equivalent to slip (fsp)

fsp = 
$$\frac{\text{Nsp} \times \text{number of poles}}{120}$$
 =  $\frac{60 \times 4}{120}$  = 2 (Hz)

## (3) Feedback gain (Pr. 368)

- · Set Pr. 368 Feedback gain when the rotation is unstable or response is slow.
- · If the acceleration/deceleration time is long, feedback response becomes slower. In this case, increase the *Pr. 368* setting.

Pr. 368 setting	Description
Pr. 368 >1	Although the response becomes faster, overcurrent or unstable rotation is liable to occur.
1< Pr. 368	Although the response becomes slower, the motor rotation becomes stable.

## (4) Overspeed detection (Pr. 285)

If (detection frequency) - (output frequency) > Pr. 285 under encoder feedback control, E.MB1 occurs and the inverter output is stopped to prevent malfunction when the accurate pulse signal from the encoder can not be detected.
 Overspeed is not detected when Pr. 285 = "9999".

#### = CAUTION =

- The encoder should be coupled on the same axis with the motor shaft with a speed ratio of 1 to 1 without any mechanical looseness.
- · During acceleration/deceleration, encoder feedback control is not performed to prevent unstable phenomenon such as hunting.
- Encoder feedback control is performed once output frequency has reached within [set speed] ± [speed feedback range].
- · If the following conditions occur during encoder feedback control, the inverter operates at the frequency within [set speed] ± [speed feedback range] without coming to an alarm stop nor tracking the motor speed.
  - The pulse signals are not received from the encoder due to a signal loss or the like.
  - · The accurate pulse signal from the encoder can not be detected due to induction noise, etc.
  - · The motor has been forcibly accelerated (regeneration) or decelerated (motor lock or the like) by large external force.
- For the motor with brake, use the RUN signal (inverter running) to open the brake. The brake may not be opened if the FU (output frequency detection) signal is used.
- · Do not turn off the external power supply of the encoder during encoder feedback control. Encoder feedback control functions abnormally.

#### ♦ Parameters referred to ♦

Pr.81 Number of motor poles Refer to page 145



## 4.25.7 Regeneration avoidance function (Pr. 665, Pr. 882 to Pr. 886)




This function detects a regeneration status and increases the frequency to avoid the regeneration status.


• Possible to avoid regeneration by automatically increasing the frequency and continue operation if the fan happens to rotate faster than the set speed due to the effect of another fan in the same duct.


Parameter Number	Name	Initial Value	Setting Range	Description		
	Damanaratian		0	Regeneration avoidance function invalid		
882	Regeneration avoidance operation	0	1	Regeneration avoidance function valid		
002	selection	O	2	Regeneration avoidance function is valid only during a constant speed operation		
883	Regeneration avoidance operation level	380VDC/ 760VDC *	300 to 800V	Set the bus voltage level at which regeneration avoidance operates. When the bus voltage level is set to low, overvoltage error will be less apt to occur. However, the actual deceleration time increases. The set value must be higher than the power supply voltage $\times \sqrt{2}$ .  * The initial value differs according to the voltage level. (200V / 400V)		
	Regeneration		0	Regeneration avoidance by bus voltage change ratio is invalid		
884	avoidance at deceleration detection sensitivity	0	1 to 5	Set sensitivity to detect the bus voltage change ratio  Setting 1    Detection sensitivity low high		
885	Regeneration avoidance	6Hz	0 to 10Hz	Set the limit value of frequency which rises at activation of regeneration avoidance function.		
000	compensation frequency limit value	0112	9999	Frequency limit invalid		
886	Regeneration avoidance voltage gain	100%	0 to 200%	Adjust responsiveness at activation of regeneration avoidance. A larger setting will improve responsiveness to the bus voltage change. However, the output frequency could become unstable.		
665	Regeneration avoidance frequency gain	100%	0 to 200%	When the load inertia of the motor is large, decrease the <i>Pr.</i> 88 setting. When vibration is not suppressed by decreasing the <i>Pt.</i> 886 setting, set a smaller value in <i>Pr.</i> 665.		

## (1) What is regeneration avoidance function? (Pr. 882, Pr. 883)

- · When the regeneration status is serious, the DC bus voltage rises and an overvoltage alarm (E. OV□) may occur. When this bus voltage rise is detected and the bus voltage level reaches or exceeds *Pr.* 883, increasing the frequency avoids the regeneration status.
- · For regeneration avoidance operation, you can select whether it is always activated or activated only at a low speed.

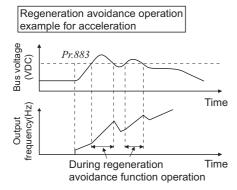

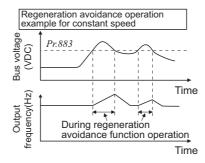

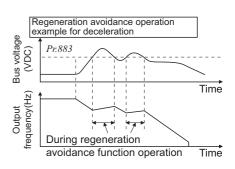

· Setting *Pr.* 882 to "1, 2" validates the regeneration avoidance function.

## **REMARKS**

- The inclination of the frequency increased or decreased by the regeneration avoidance function changes depending on the regeneration status.
- The DC bus voltage of the inverter is normally about  $\sqrt{2}$  times greater than the input voltage. When the input voltage is 220VAC(440VAC), the bus voltage is about 311VDC(622VDC).
- However, it varies with the input power supply waveform.

  The *Pr.* 883 setting should be kept higher than the DC bus voltage level. Otherwise, the regeneration avoidance function is always on.

## (2) To detect the regeneration status during deceleration faster (Pr. 884)

· As the regeneration avoidance function cannot respond to an abrupt voltage change by detection of the bus voltage level, the ratio of bus voltage change is detected to stop deceleration if the bus voltage is less than *Pr. 883 Regeneration avoidance operation level*.

Set that detectable bus voltage change ratio to Pr. 884 as detection sensitivity.

Increasing the setting raises the detection sensitivity


#### = CAUTION

Too small setting (low detection sensitivity) will disable detection, and too large setting will turn on the regeneration avoidance function if the bus voltage is varied by an input power change, etc.

## (3) Limit regeneration avoidance operation frequency (Pr. 885)

You can limit the output frequency compensated for (increased) by the regeneration avoidance function.

- The frequency is limited to the output frequency (frequency prior to regeneration avoidance operation) + Pr. 885 Regeneration avoidance compensation frequency limit value during acceleration or constant speed. If the regeneration avoidance frequency exceeds the limit value during deceleration, the limit value is held until the output frequency falls to 1/2 of Pr. 885.
- When the regeneration avoidance frequency has reached Pr. 1
   *Maximum frequency*, it is limited to the maximum frequency.
- · Pr. 885 is set to "9999", the frequency setting is invalid.

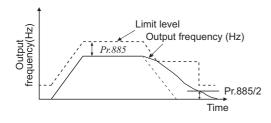

## (4) Regeneration avoidance function adjustment (Pr. 886)

- · If the frequency becomes unstable during regeneration avoidance operation, decrease the setting of *Pr. 886 Regeneration avoidance voltage gain.* Reversely, if sudden regeneration causes an overvoltage alarm, increase the setting.
- · When the load inertia of the motor is large, decrease the *Pr. 886* setting. When vibration is not suppressed by decreasing the *Pr.886 Regeneration avoidance voltage gain* setting, set a smaller value in *Pr.665 Regeneration avoidance frequency gain*.
- · Under vector control, unusual noise may be generated from the motor during deceleration when using regeneration avoidance function. To prevent this, make gain adjustment, e.g. by performing easy gain tuning. (Refer to page 104)

#### CAUTION

- · When regeneration avoidance operation is performed,  $\varpi L$  (overvoltage stall) is displayed and the OL signal is output.
- · When regeneration avoidance operation is performed, stall prevention is also activated at the same time.
- The regeneration avoidance function cannot shorten the actual deceleration time taken to stop the motor. The actual deceleration time depends on the regeneration capability. When shortening the deceleration time, consider using the regeneration unit (BU, FR-BU, MT-BU5, FR-CV, FR-HC, MT-HC) or the brake resistor (FR-ABR, etc.).
- · When using the regeneration unit (BU, FR-BU, MT-BU5, FR-CV, FR-HC, MT-HC) or the brake resistor (FR-ABR, etc.), set *Pr.* 882 to "0 (initial value)" (regeneration avoidance function invalid).
- · When regeneration avoidance operation is performed, the OL signal output item of Pr. 156 also becomes the target of

• (overvoltage stall). Pr. 157 OL signal output timer also becomes the target of • (overvoltage stall).

## ◆ Parameters referred to ◆

Pr. 1 Maximum frequency Refer to page 156 Pr. 8 Deceleration time Refer to page 172

Pr. 22 Stall prevention operation level Refer to page 149

377



## 4.26 Useful functions

Purpose	Parameter that m	Refer to Page	
Increase cooling fan life	Cooling fan operation selection	Pr. 244	378
	Inverter part life display	Pr. 255 to Pr. 259	379
To determine the maintenance time	Maintenance output function	Pr. 503, Pr. 504	381
of parts.	Current average value monitor signal	Pr. 555 to Pr. 557	382
Freely available parameter	Free parameter	Pr. 888, Pr. 889	384

## 4.26.1 Cooling fan operation selection (Pr. 244)



You can control the operation of the cooling fan (FR-A720-00080 or more, FR-A740-00060 or more) built in the inverter.

Parameter Number	Name	Initial Value	Setting Range	Description
			0	Operates at power on Cooling fan on/off control invalid (The cooling fan is always on at power on)
244	Cooling fan operation selection	1	1	Cooling fan on/off control valid The fan is always on while the inverter is running. During a stop, the inverter status is monitored and the fan switches on-off according to the temperature.

· In either of the following cases, fan operation is regarded as faulty, [FN] is shown on the operation panel, and the fan fault (FAN) and minor fault (LF) signals are output.

Pr. 244 = 0

When the fan comes to a stop with power on

·Pr. 244 = "1"

When the fan stops during the fan ON command while the inverter is running

• For the terminal used for FAN signal output, set "25" (positive logic) or "125" (negative logic) in any of *Pr. 190 to Pr. 196 (output terminal function selection)*, and for the LF signal, set "98" (positive logic) or "198" (negative logic).

#### CAUTION


· When terminal assignment is changed using *Pr. 190 to Pr. 196 (output terminal function selection)*, the other functions may be affected. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 190 to Pr. 196 (output terminal function selection) Refer to page 234



Degrees of deterioration of main circuit capacitor, control circuit capacitor, cooling fan and inrush current limit circuit can be diagnosed by monitor.

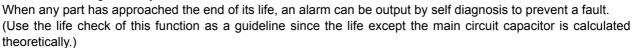


For the life check of the main circuit capacitor, the alarm signal (Y90) will not be output if a measuring method of (4) is not performed.



Parameter Number	Name	Initial Value	Setting Range	Description
255	255 Life alarm status display 0 (0 to 2		(0 to 15)	Display whether the control circuit capacitor, main circuit capacitor, cooling fan, and each parts of the inrush current limit circuit has reached the life alarm output level or not. Reading only
256	Inrush current limit circuit life display	100%	(0 to 100%)	Display the deterioration degree of the inrush current limit circuit. Reading only
257	Control circuit capacitor life display	100%	(0 to 100%)	Display the deterioration degree of the control circuit capacitor. Reading only
258	Main circuit capacitor life display 100% (0 to 100%)		(0 to 100%)	Display the deterioration degree of the main circuit capacitor. Reading only The value measured by <i>Pr. 259</i> is displayed.
259	Main circuit capacitor life measuring		0, 1 (2, 3, 8, 9)	Setting "1" and switching the power supply off starts the measurement of the main circuit capacitor life.  When the <i>Pr. 259</i> value is "3" after powering on again, the measuring is completed. Read the deterioration degree in <i>Pr. 258</i> .

## (1) Life alarm display and signal output (Y90 signal, Pr. 255)

· Whether any of the control circuit capacitor, main circuit capacitor, cooling fan and inrush current limit circuit has reached the life alarm output level or not can be checked by *Pr. 255 Life alarm status display* and life alarm signal (Y90).

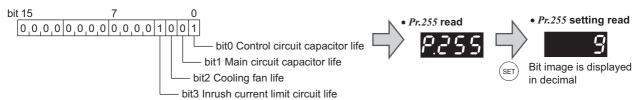

Pr. 255 (decimal)	Bit (binary)	Inrush Current Limit Circuit Life	Cooling Fan Life	Main Circuit Capacitor Life	Control Circuit Capacitor Life
15	1111	0	0	0	0
14	1110	0	0	0	×
13	1101	0	0	×	0
12	1100	0	0	×	×
11	1011	0	×	0	0
10	1010	0	×	0	×
9	1001	0	×	×	0
8	1000	0	×	×	×
7	0111	×	0	0	0
6	0110	×	0	0	×
5	0101	×	0	×	0
4	0100	×	0	×	×
3	0011	×	×	0	0
2	0010	×	×	0	×
1	0001	×	×	×	0
0	0000	×	×	×	×

O: With warnings, x: Without warnings



- The life alarm signal (Y90) turns on when any of the control circuit capacitor, main circuit capacitor, cooling fan and inrush current limit circuit reaches the life alarm output level.
- For the terminal used for the Y90 signal, set "90" (positive logic) or "190" (negative logic) to any of *Pr. 190 to Pr. 196 (output terminal function selection)*.

#### **REMARKS**

The digital output option (FR-A7AY) allows the control circuit capacitor life signal (Y86), main circuit capacitor life signal (Y87), cooling fan life signal (Y88) and inrush current limit circuit life signal (Y89) to be output individually.

#### CAUTION

· When terminal assignment is changed using Pr. 190 to Pr. 196 (output terminal function selection), the other functions may be affected. Please make setting after confirming the function of each terminal.

## (2) Life display of the inrush current limit circuit (Pr. 256)

- · The life of the inrush current limit circuit (relay, contactor and inrush resistor) is displayed in Pr. 259.
- The number of contact (relay, contactor, thyristor) ON times is counted, and it is counted down from 100% (1 million times) every 1%/10,000 times. As soon as 10% (900,000 times) is reached, *Pr. 255* bit 3 is turned on and also an alarm is output to the Y90 signal.

## (3) Control circuit capacitor life display (Pr. 257)

- The deterioration degree of the control circuit capacitor is displayed in *Pr. 257* as a life.
- · In the operating status, the control circuit capacitor life is calculated from the energization time and temperature, and is counted down from 100%. As soon as the control circuit capacitor life falls below 10%, *Pr. 255* bit 0 is turned on and also an alarm is output to the Y90 signal.

## (4) Main circuit capacitor life display (Pr. 258, Pr. 259)

- · The deterioration degree of the main circuit capacitor is displayed in Pr. 258 as a life.
- · On the assumption that the main circuit capacitor capacitance at factory shipment is 100%, the capacitor life is displayed in *Pr. 258* every time measurement is made. When the measured value falls to or below 85%, *Pr. 255* bit 1 is turned on and also an alarm is output to the Y90 signal.
- · Measure the capacitor capacity according to the following procedure and check the deterioration level of the capacitor capacity.
  - 1) Check that the motor is connected and at a stop.
- 2) Set "1" (measuring start) in Pr. 259
- 3) Switch power off. The inverter applies DC voltage to the motor to measure the capacitor capacity while the inverter is off.
- 4) After making sure that the power lamp is off, switch on the power supply again.
- 5) Check that "3" (measuring completion) is set in *Pr. 259*, read *Pr. 258*, and check the deterioration degree of the main circuit capacitor.

Pr. 259	Description	Remarks
0	No measurement	Initial value
1	Measurement start	Measurement starts when the power supply is switched off.
2	During measurement	
3	Measurement complete	
8	Forced end See (c), (g), (h), (i) below.	Only displayed and cannot be set
9	Measurement error See (d), (e), (f) below.	

#### **REMARKS**

- The life of the main circuit capacitor can not be measured in the following conditions.
  - (a) The FR-HC, MT-HC, FR-CV, FR-BU, MT-BU5 or BU is connected
  - (b) Terminals R1/L11, S1/L21 or DC power supply is connected to the terminal P/+ and N/-.
  - (c) Switch power on during measuring.
  - (d) The motor is not connected to the inverter.
  - (e) The motor is running. (The motor is coasting.)
  - (f) The motor capacity is two rank smaller as compared to the inverter capacity.
  - (g) The inverter is at an alarm stop or an alarm occurred while power is off.
- (h) The inverter output is shut off with the MRS signal.
- (i) The start command is given while measuring.
- Operating environment: Ambient Temperature (annual average 40°C (104°F) (free from corrosive gas, flammable gas, oil mist, dust and dirt))
  - Output current (80% of the rated current of Mitsubishi standard 4P motor)



## (5) Cooling fan life display

• The cooling fan speed of 40% or less is detected and "FN" is displayed on the operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07). As an alarm display, *Pr. 255* bit 2 is turned on and also an alarm is output to the Y90 signal.

#### **REMARKS**

· When the inverter is mounted with two or more cooling fans, the life of even one cooling fan is diagnosed.

#### CAUTION =


· For replacement of each part, contact the nearest Mitsubishi FA center.

## 4.26.3 Maintenance timer alarm (Pr. 503, Pr. 504)

When the cumulative energization time of the inverter reaches the parameter set time, the maintenance timer output signal (Y95) is output. (MT) is displayed on the operation panel (FR-DU07). This can be used as a guideline for the maintenance time of peripheral devices.



Parameter Number	Name	Initial Value	Setting Range	Description
503	Maintenance timer	0	0 (1 to 9998)	Display the cumulative energization time of the inverter in 100h increments.  Reading only  Writing the setting of "0" clears the cumulative energization time.
504	Maintenance timer alarm output set time	9999	0 to 9998	Set the time taken until when the maintenance timer alarm output signal (Y95) is output.
			9999	No function

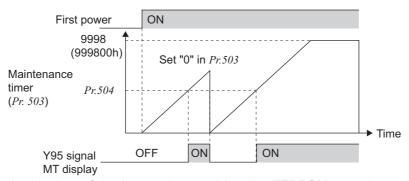

- The cumulative energization time of the inverter is stored into the EEPROM every hour and indicated in *Pr. 503 Maintenance timer* in 100h increments. *Pr. 503* is clamped at 9998 (999800h).
- When the *Pr. 503* value reaches the time set in *Pr. 504 Maintenance timer alarm output set time* (100h increments), the maintenance timer alarm output signal (Y95) is output.
- For the terminal used for the Y95 signal output, assign the function by setting "95" (positive logic) or "195" (negative logic) to any of *Pr. 190 to Pr. 196 (output terminal function selection)*.

#### CAUTION =

- · The cumulative energization time is counted every hour. The energization time of less than 1h is not counted.
  - When terminal assignment is changed using *Pr. 190 to Pr. 196 (output terminal function selection)*, the other functions may be affected. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 190 to Pr. 196(output terminal function selection) Refer to page 234




## 4.26.4 Current average value monitor signal (Pr. 555 to Pr. 557)



The average value of the output current during constant speed operation and the maintenance timer value are output as a pulse to the current average value monitor signal (Y93).


The pulse width output to the I/O module of the PLC or the like can be used as a guideline due to abrasion of machines and elongation of belt and for aged deterioration of devices to know the maintenance time.

The current average value monitor signal (Y93) is output as pulse for 20s as 1 cycle and repeatedly output during constant speed operation.

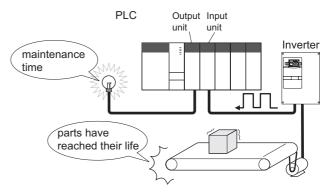

Parameter Number	Name	Initial Value	Setting Range 200V class (400V class)		Description
555	Current average time	1s	0.1 to 1.0s		Set the time taken to average the current during start bit output (1s).
556	Data output mask time	0s	0.0 to 20.0s		Set the time for not obtaining (mask) transient state data.
	Current average value	Rated inverter	02150(01100) or less	0 to 500A	Set the reference (100%) for
557	557 monitor signal output reference current		02880(01440) or more 0 to 3600A		outputting the signal of the current average value.

The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in Pr. 77 Parameter write selection.

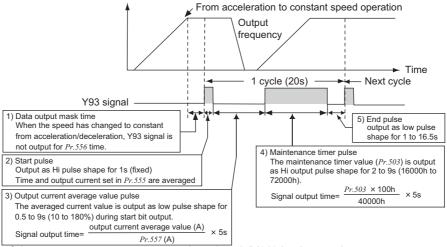


- · The pulse output of the current average value monitor signal (Y93) is shown above.
- · For the terminal used for the Y93 signal output, assign the function by setting "93" (positive logic) or "193" (negative logic) to any of *Pr. 190 to Pr. 194 (output terminal function selection)*. (The function can not be assigned to *Pr. 195 ABC1 terminal function selection* and *Pr. 196 ABC2 terminal function selection*.)
- (1) Setting of Pr. 556 Data output mask time

The output current is unstable (transient state) right after the operation is changed from the acceleration/ deceleration state to the constant speed operation. Set the time for not obtaining (mask) transient state data in Pr: 556.

(2) Setting of the Pr. 555 Current average time

The average output current is calculated during Hi output of start bit (1s). Set the time taken to average the current during start bit output in *Pr.* 555.

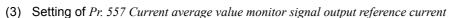


Set the reference (100%) for outputting the signal of the current average value. Obtain the time to output the signal from the following formula.

# $\frac{\text{Output current average value}}{Pr. 557 \text{ setting}} \times 5s \text{ (output current average value 100\%/5s)}$

Note that the output time range is 0.5 to 9s, and it is 0.5s when the output current average value is less than 10% of the setting value of Pr. 557 and 9s when exceeds 180%


Example)When Pr. 557 = 10A and the average value of output current is 15A As 15A/10A  $\times$  5s = 7.5, the current average value monitor signal is output as low pulse shape for 7.5s.

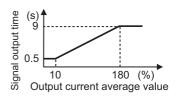

#### (4) Output of Pr. 503 Maintenance timer


After the output current average value is output as low pulse shape, the maintenance timer value is output as high pulse shape. The output time of the maintenance timer value is obtained from the following formula.

Note that the output time range is 2 to 9s, and it is 2s when *Pr.* 503 is less than 16000h and 9s when exceeds 72000h.

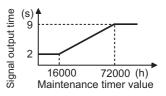

#### **REMARKS**

- · Mask of data output and sampling of output current are not performed during acceleration/deceleration.
- When the speed is changed to acceleration/deceleration from constant speed during start bit output, the data is judged as invalid, the start bit is output as high pulse shape for 3.5s, and the end signal is output as low pulse shape for 16.5s.
   The signal is output for at least 1 cycle even when acceleration/deceleration state continues after the start bit output is completed.

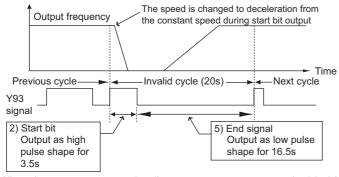

- · When the output current value (inverter output current monitor) is 0A on completion of the 1 cycle signal output, the signal is not output until the speed becomes constant next time
- · The current average value monitor signal (Y93) is output as low pulse shape for 20s (without data output) under the following condition.
  - (a) When the motor is in the acceleration/deceleration state on completion of the 1 cycle signal output
  - (b)When 1-cycle signal output was ended during restart operation with the setting of automatic restart after instantaneous power failure (*Pr.* 57 ≠ "9999")
  - (c)When automatic restart operation was being performed with automatic restart after instantaneous power failure selected (*Pr.* 57 ≠ "9999") on completion of the data output mask

#### CAUTION =

· When terminal assignment is changed using Pr. 190 to Pr. 196 (output terminal function selection), the other functions may be affected. Please make setting after confirming the function of each terminal.

#### ◆ Parameters referred to ◆

Pr. 190 to Pr. 196(output terminal function selection) Refer to page 234

Pr. 503 Maintenance timer Refer to page 381

Pr. 57 Restart coasting time Refer to page 260



## 4.26.5 Free parameter (Pr. 888, Pr. 889)



Parameters you can use for your own purposes.

You can input any number within the setting range 0 to 9999.

For example, the number can be used:

- · As a unit number when multiple units are used.
- · As a pattern number for each operation application when multiple units are used.
- · As the year and month of introduction or inspection.

Parameter Number	Name	Initial Value	Setting Range	Description
888	Free parameter 1	9999	0 to 9999	
889	Free parameter 2	9999	0 to 9999	

The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

## REMARKS

Pr. 888 and Pr. 889 do not influence the inverter operation.

## 4.27 Setting from the parameter unit, operation panel

Purpose	Parameter that mus	Refer to Page	
Switch the display language of the parameter unit	PU display language selection	Pr. 145	385
Use the setting dial of the operation panel like a volume for frequency setting. Key lock of operation panel	Operation panel operation selection	Pr. 161	385
Control of the parameter unit, operation panel buzzer	PU buzzer control	Pr. 990	387
Adjust the LCD contrast of the parameter unit	PU contrast adjustment	Pr. 991	387

## 4.27.1 PU display language selection (Pr. 145)

You can switch the display language of the parameter unit (FR-PU04/FR-PU07) to another.

Parameter Number	Name	Initial Value	Setting Range	Definition
145 P	PU display language selection	1	0	Japanese
			1	English
			2	Germany
			3	French
			4	Spanish
			5	Italian
			6	Swedish
			7	Finnish

## 4.27.2 Operation panel frequency setting/key lock operation selection (Pr. 161)

The setting dial of the operation panel (FR-DU07) can be used like a volume to perform operation. The key operation of the operation panel can be disabled.


Parameter Number	Name	Initial Value	Setting Range	Description	
	Frequency setting/key lock operation selection	0	0	Setting dial frequency setting mode	Key lock mode invalid
			1	Setting dial volume mode	
			10	Setting dial frequency setting mode	Key lock mode valid
			11	Setting dial volume mode	



Pr.144 Pr.148

# (1) Using the setting dial like a volume to set the frequency.

Operation example Changing the frequency from 0Hz to 60Hz during operation

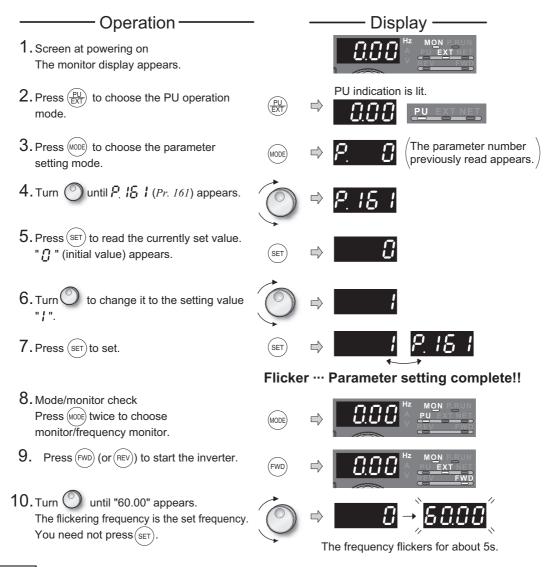

#### **REMARKS**

- · If the display changes from flickering "60.00" to "0.00", the setting of *Pr. 161 Frequency setting/key lock operation selection* may not be "1".
- · Independently of whether the inverter is running or at a stop, the frequency can be set by merely turning the dial.
- · When the frequency is changed, it will be stored in EEPROM as the set frequency after 10s.

# (2) Disable the setting dial and key operation of the operation panel (Press [MODE] long (2s))

- · Operation using the setting dial and key of the operation panel can be made invalid to prevent parameter change and unexpected start and stop.
- · Set "10 or 11" in Pr. 161, then press (MODE) for 2s to make the setting dial and key operation invalid.
- When the setting dial and key operation is made invalid, **\[ \]** appears on the operation panel. When the setting dial and key operation is invalid, **\[ \]** appears if the setting dial or key operation is performed. (When the setting dial or key operation is not performed for 2s, the monitor display appears.)
- · To make the setting dial and key operation valid again, press (MODE) for 2s.

#### = CAUTION =

· Release the operation lock to release the PU stop by key operation.

#### **REMARKS**

Even if the setting dial and key operation are disabled, the monitor display



is valid

# 4.27.3 Buzzer control (Pr. 990)

You can make the buzzer "beep" when you press key of the operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07).



Parameter Number	Name	Initial Value	Setting Range	Description
990	PU buzzer control	1	0	Without buzzer
990	FO buzzer control	ı	1	With buzzer

The above parameters allow its setting to be changed during operation in any operation mode even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

# 4.27.4 PU contrast adjustment (Pr. 991)

Contrast adjustment of the LCD of the parameter unit (FR-PU04/FR-PU07) can be performed. Decreasing the setting value makes contrast light.

Parameter Number	Name	Initial Value	Setting Range	Description
991	PU contrast adjustment	58	0 to 63	0 : Light ↓ 63: Dark


The above parameters are displayed as simple mode parameters only when the parameter unit (FR-PU04/FR-PU07) is connected.



# 4.28 Parameter clear

#### POINT

Set "1" in *Pr. CL parameter clear* to initialize all parameters. (Parameters are not cleared when "1" is set in *Pr. 77 Parameter write selection*. In addition, calibration parameters are not cleared.)

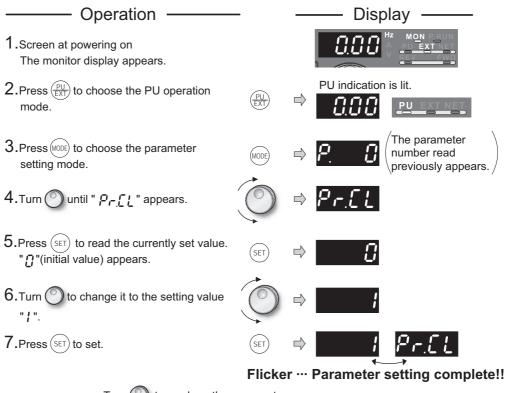

- $\cdot$  Turn  $ext{ } ext{ } ex$
- · Press (SET) to show the setting again.
- · Press(SET) twice to show the next parameter.

Setting	Description	
0	Not executed.	
1	Returns all parameters except <i>calibration parameters C0 (Pr. 900) to C7 (Pr. 905), C12 (Pr. 917) to C19 (Pr. 920), C38 (Pr. 932) to C41 (Pr. 933)</i> to the initial values.	

#### **REMARKS**


Refer to the list of parameters on page 448 for availability of parameter clear.

- - The inverter is not in the PU operation mode.
    - 1. Press  $\left(\frac{PU}{EXT}\right)$ 
      - PU is lit and the monitor (4 digit LED) displays "0" (*Pr. 79* = "0" (initial value)).
    - 2. Carry out operation from step 6 again.

# 4.29 All parameter clear

# POINT

· Set "1" in *ALLC parameter clear* to initialize all parameters. (Parameters are not cleared when "1" is set in *Pr. 77 Parameter write selection*. In addition, calibration parameters are not cleared.)

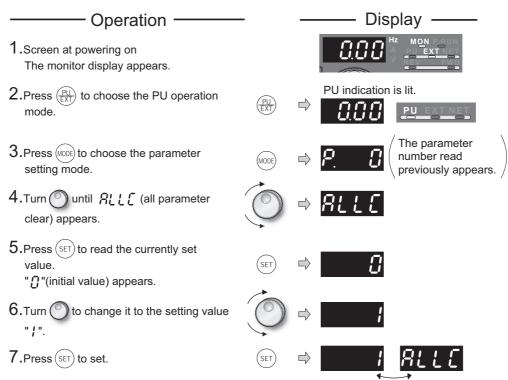

- Flicker ··· Parameter setting complete!!
- · Press ( ) to read another parameter.
- · Press(SET) to show the setting again.
- · Press (SET) twice to show the next parameter.

Setting	Description	
0	Not executed.	
1	All parameters return to the initial values.	

#### **REMARKS**

Refer to the list of parameters on page 448 for availability of all parameter clear.

- ? and Ery are displayed alternately ... Why?
  - The inverter is not in the PU operation mode.
    - 1. Press  $\frac{PU}{EXT}$ 
      - is lit and the monitor (4 digit LED) displays "0" (Pr. 79 = "0" (initial value)).
    - 2. Carry out operation from step 6 again.

# 4.30 Parameter copy and parameter verification


PCPY Setting	Description		
0 Cancel			
1	Copy the source parameters to the operation panel.		
Write the parameters copied to the operation panel into the destination inverter.			
3	Verify parameters in the inverter and operation panel. (Refer to page 392.)		

#### **REMARKS**

- When the copy destination inverter is not the FR-A700 series or parameter copy write is performed after parameter read is stopped, "model error ( - 돈 나 )" is displayed.
- Refer to the parameter list on  $page\ 448$  and later for availability of parameter copy.
- When the power is turned off or an operation panel is disconnected, etc. during parameter copy write, perform write again or check the values by parameter verification.

# 4.30.1 Parameter copy

Multiple inverters and parameter settings can be copied.

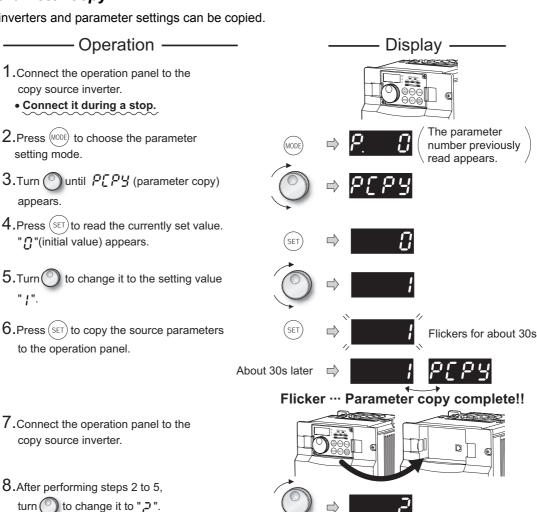

The frequency flickers

for about 30s

- 9. Press (SET) to write the parameters copied to the operation panel to the destination inverter.
- 10. When copy is completed, " ? " and " ? [ ? ] " flicker.
- Flicker ··· Parameter copy complete!! 11. After writing the parameter values to the copy destination inverter, always reset the inverter, e.g. switch power off once, before starting operation.
- appears...Why? Parameter read error. Perform operation from step 3 again.
- appears...Why? Parameter write error. Perform operation from step 8 again.

# ?[P and [][][] flicker alternately


- Appears when parameters are copied between the inverter of FR-A720-02150 (FR-A740-01100) or less and FR-A720-02880 (FR-A740-01440) or more.
  - 1. Set "0" in Pr. 160 User group read selection.
  - 2. Set the following setting (initial value) in Pr. 989 Parameter copy alarm release.

	FR-A720-02150 (FR-A740-01100) or	FR-A720-02880 (FR-A740-01440) or	
	less	more	
Pr. 989 Setting	10	100	

3. Reset Pr. 9, Pr. 30, Pr. 51, Pr. 52, Pr. 54, Pr. 56, Pr. 57, Pr. 61, Pr. 70, Pr. 72, Pr. 80, Pr. 82, Pr. 90 to Pr. 94, Pr. 158, Pr. 455, Pr. 458 to Pr. 462, Pr. 557, Pr. 859, Pr. 860, Pr. 893.

#### 4.30.2 Parameter verification

Whether same parameter values are set in other inverters or not can be checked.

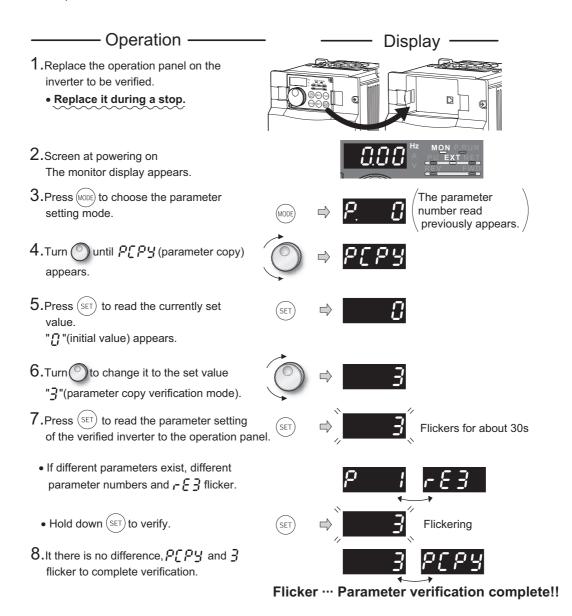

#### **REMARKS**


When the copy destination inverter is not the FR-A700 series, "model error ( - E 4 )" is displayed.

? cea flickers ... Why?

P Set frequencies, etc. may be different. Check set frequencies.

# 4.31 Check and clear of the alarm history

# (1) Check for the alarm (major fault) history

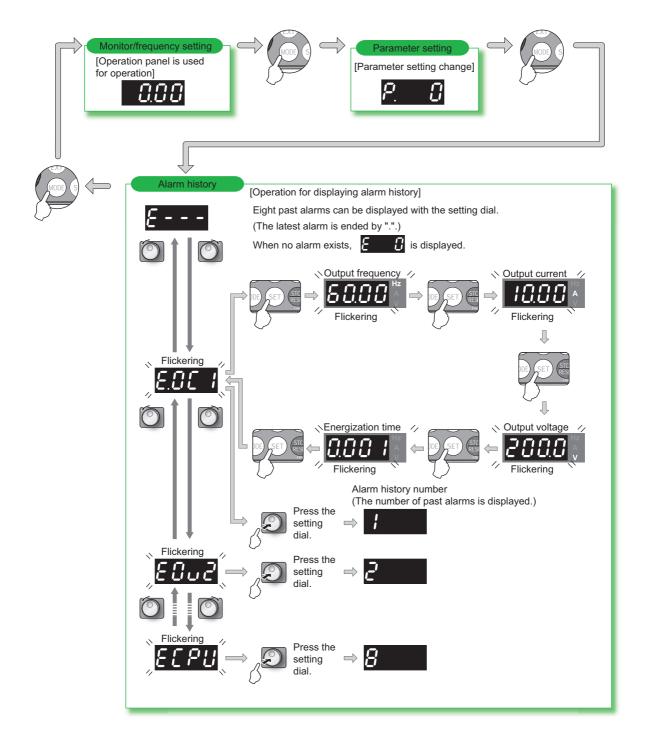




# (2) Clearing procedure

#### POINT

• The alarm history can be cleared by setting "1" in *Er.CL Alarm history clear*. (The alarm history is not cleared when "1" is set in *Pr. 77 Parameter write selection*)

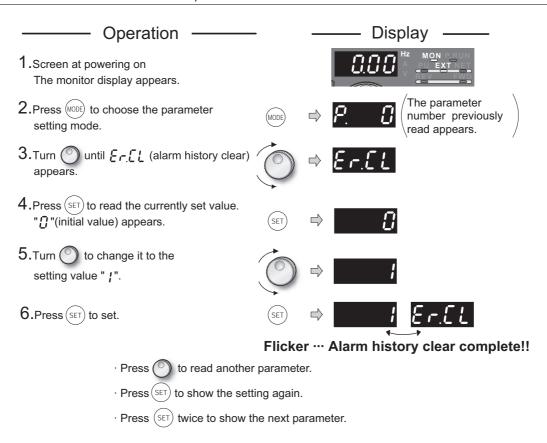

# 5 PROTECTIVE FUNCTIONS

This chapter describes the basic "PROTECTIVE FUNCTION" for use of this product.

Always read the instructions before using the equipment

5.1	Reset method of protective function	396
5.2	List of alarm display	397
	Causes and corrective actions	
	Correspondences between digital and actual	
	characters	410
5.5	Check first when you have troubles	411



When an alarm (major failures) occurs in the inverter, the protective function is activated bringing the inverter to an alarm stop and the PU display automatically changes to any of the following error (alarm) indications.

If your fault does not correspond to any of the following errors or if you have any other problem, please contact your sales representative.

- Retention of alarm output signal....... When the magnetic contactor (MC) provided on the input side of the inverter is
  opened at the activation of the protective function, the inverter's control power
  will be lost and the alarm output will not be held.

- When the protective function is activated, take the corresponding corrective action, then reset the inverter, and resume operation.

Not doing so may lead to the inverter fault and damage.

Inverter alarm displays are roughly divided as below.

(1) Error Message

A message regarding operational fault and setting fault by the operation panel (FR-DU07) and parameter unit (FR-PU04 /FR-PU07) is displayed.

The inverter does not shut off output.

(2) Warnings

The inverter does not shut off output even when a warning is displayed. However, failure to take appropriate measures will lead to a major fault.

(3) Minor fault

The inverter does not shut off output. You can also output a minor fault signal by making parameter setting.

(4) Major fault

When the protective function is activated, the inverter output is shut off and an alarm is output.

# 5.1 Reset method of protective function

#### (1) Resetting the inverter

The inverter can be reset by performing any of the following operations. Note that the internal thermal integrated value of the electronic thermal relay function and the number of retries are cleared (erased) by resetting the inverter. Recover about 1s after reset is cancelled.

Operation 1: ..... Using the operation panel, press



to reset the inverter.


(Enabled only when the inverter protective function is activated (major fault) (Refer to *page 402* for major fault.))



Operation 2:..... Switch power off once, then switch it on again.



Operation 3: ..... Turn on the reset signal (RES) for more than 0.1s. (If the RES signal is kept on, "Err." appears (flickers) to indicate that the inverter is in a reset status.)

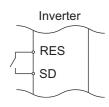

# 5.2 List of alarm display

Operation Panel Indication			Name	Refer to
	E	E	Alarm history	393
d)	HOLd	HOLD	Operation panel lock	398
Error message	Er 1 to Er4	Er1 to 4	Parameter write error	398
Error	- E   to - E 4	rE1 to 4	Copy operation error	399
	Err.	Err.	Error	399
	0L	OL	Stall prevention (overcurrent)	400
	οĹ	oL	Stall prevention (overvoltage)	400
	rb	RB	Regenerative brake prealarm	401
Warnings	l H	TH	Electronic thermal relay function prealarm	401
Varn	<i>PS</i>	PS	PU stop	400
^	UL	MT	Maintenance signal output	401
	EP.	СР	Parameter copy	401
	SL	SL	Speed limit indication (Output during speed limit)	401
Minor fault	۴۵	FN	Fan fault	401
	E.0C	E.OC1	Overcurrent shut-off during acceleration	402
	8.002	E.OC2	Overcurrent shut-off during constant speed	402
	E.003	E.OC3	Overcurrent shut-off during deceleration or stop	402
	8.0 <sub>0</sub> 1	E.OV1	Regenerative overvoltage shut-off during acceleration	402
	E.Ou2	E.OV2	Regenerative overvoltage shut-off during constant speed	403
ıult	E.O u 3	E.OV3	Regenerative overvoltage shut- off during deceleration or stop	403
lajor faulf	E.C.H.C	E.THT	Inverter overload shut-off (electronic thermal relay function)	403
Ma	E.C HO	E.THM	Motor overload shut-off (electronic thermal relay function)	403
	8.81 n	E.FIN	Fin overheat	403
	EJ PF	E.IPF	Instantaneous power failure	404
	Е. ЬЕ	E.BE	Brake transistor alarm detection	404
	E.UuT	E.UVT	Undervoltage	404
	ELLE	E.ILF*	Input phase failure	404
	E.DL F	E.OLT	Stall prevention	404

	Operation P	anel	Name	Refer to
	E. GF	E.GF	Output side earth (ground) fault overcurrent	405
	E. LF	E.LF	Output phase failure	405
	E.0HF	E.OHT	External thermal relay operation *2	405
	8.200	E.PTC*	PTC thermistor operation	405
	8.0PF	E.OPT	Option alarm	405
	E.OP3	E.OP3	Communication option alarm	405
	Ε. / to Ε. 3	E. 1 to E. 3	Option alarm	406
	E. PE	E.PE	Parameter storage device alarm	406
	<i>E.PUE</i>	E.PUE	PU disconnection	406
	E E.F	E.RET	Retry count excess	406
	<i>E.P.E.2</i>	E.PE2*	Parameter storage device alarm	406
	8. 97 1. 9 1. 9	E. 6 / E. 7 / E.CPU	CPU error	407
Major fault	E.C.T.E	E.CTE	Operation panel power supply short circuit, RS-485 terminal power supply short circuit	407
Σ	8.294	E.P24	24VDC power output short circuit	408
	063.3	E.CDO*	Output current detection value exceeded	408
	EJ 0H	E.IOH*	Inrush current limit circuit alarm	409
	8.58 r	E.SER*	Communication error (inverter)	409
	E.RT E	E.AIE*	Analog input error	409
	8.05	E.OS	Overspeed occurence	407
	8.058	E.OSD	Speed deviation excess detection	407
	133.3	E.OSD	Open cable detection	408
	E. 0d	E.OD	Excessive position error	408
	E.N& 1 to E.N& 1	E.MB1 to E.MB7	Brake sequence error	407
	E.E.P	E.EP	Encoder phase error	408
	8.856	E.USB*	USB communication error	409
	E. 11	E.11	Opposite rotation deceleration error	409
	E. 13	E.13	Internal circuit error	409

If an error occurs when using the FR-PU04, "Fault 14" is displayed on the FR-PU04.



# 5.3 Causes and corrective actions

# (1) Error Message

A message regarding operational troubles is displayed. Output is not shut off.

Operation Panel Indication	HOLD	HOLd	
Name	Operation panel lock		
Description	Operation loc	k mode is set. Operation other than RESET is made invalid. (Refer to page 387.)	
Check point		_	
Corrective action	Press MODE f	or 2s to release lock.	

Operation Panel Indication	Er1	Er I	
Name	Write disable error		
Description	<ol> <li>You attempted to make parameter setting when <i>Pr. 77 Parameter write selection</i> has been set to disable parameter write.</li> <li>Frequency jump setting range overlapped.</li> <li>Adjustable 5 points V/F settings overlapped</li> <li>The PU and inverter cannot make normal communication</li> </ol>		
1. Check the setting of <i>Pr. 77 Parameter write selection (Refer to page 303.)</i> 2. Check the settings of <i>Pr. 31 to 36 (frequency jump). (Refer to page 157.)</i> 3. Check the settings of <i>Pr. 100 to Pr. 109 (adjustable 5 points V/F). (Refer to page 164.)</i> 4. Check the connection of the PU and inverter.		settings of Pr. 31 to 36 (frequency jump). (Refer to page 157.) settings of Pr. 100 to Pr. 109 (adjustable 5 points V/F). (Refer to page 164.)	

Operation Panel Indication	Er2	E-2	
Name	Write error during operation		
Description	When parameter write was performed during operation with a value other than "2" (writing is enabled independently of operation status in any operation mode) is set in <i>Pr.</i> 77 and the STF (STR) is on.		
Check point	1. Check the <i>Pr.</i> 77 setting. ( <i>Refer to page 303.</i> ) 2. Check that the inverter is not operating.		
Corrective action  1. Set "2" in <i>Pr. 77</i> . 2. After stopping operation, make parameter setting.		• • • •	

Operation Panel Indication	Er3	Er3		
Name	Calibration en	Calibration error		
Description	Analog input b	Analog input bias and gain calibration values are too close.		
Check point	Check the setti	ngs of C3, C4, C6 and C7 (calibration functions). (Refer to page 288.)		

Operation Panel Indication	Er4	E-4		
Name	Mode designa	ation error		
Description	You attempted	d to make parameter setting in the NET operation mode when Pr. 77 is not "2".		
Check point		P. Check that operation mode is "PU operation mode".  P. Check the Pr. 77 setting. (Refer to page 303.)		
Corrective action	303.)	Iting the operation mode to the "PU operation mode", make parameter setting. (Refer to page titing "2" in $Pr. 77$ , make parameter setting.		

//
//

Operation Panel Indication	rE1	r E			
Name	Parameter rea	Parameter read error			
Description	An error occu	An error occurred in the EEPROM on the operation panel side during parameter copy reading.			
Check point		<del></del>			
Corrective action		neter copy again. (Refer to page 390.) n operation panel (FR-DU07) failure. Please contact your sales representative.			

Operation Panel Indication	rE2	r82			
Name	Parameter wr	write error			
Description	<ol> <li>You attempted to perform parameter copy write during operation.</li> <li>An error occurred in the EEPROM on the operation panel side during parameter copy writing.</li> </ol>				
Check point	Is the FWD or REV LED of the operation panel (FR-DU07) lit or flickering?				
Corrective action		ng operation, make parameter copy again. (Refer to page 390.) operation panel (FR-DU07) failure. Please contact your sales representative.			

Operation Panel Indication	rE3	r E 3			
Name	Parameter ve	rification error			
Description	Data on the operation panel side and inverter side are different.     An error occurred in the EEPROM on the operation panel side during parameter verification.				
Check point	Check for the parameter setting of the source inverter and inverter to be verified.				
Corrective action	1. Press (SET) to continue verification.  Make parameter verification again. (Refer to page 392.)  2. Check for an operation panel (FR-DU07) failure. Please contact your sales representative.				

Operation Panel Indication	rE4	r E 4			
Name	Model error				
Description		1. A different model was used for parameter write and verification during parameter copy.     2. When parameter copy write is stopped after parameter copy read is stopped.			
Check point	Check that the verified inverter is the same model.     Check that the power is not turned off or an operation panel is not disconnected, etc. during parameter copy read.				
Corrective action		e same model (FR-A700 series) for parameter copy and verification. n parameter copy read again.			

Operation Panel Indication	Err.	Err.			
Description	3. When the c	S signal is on and inverter cannot make normal communication (contact fault of the connector) e control circuit power (R1/L11, S1/L21) and the main circuit power (R/L1, S/L2, T/L3) are ed to a separate power, it may appear at turning on of the main circuit. It is not a fault.			
Corrective action	1. Turn off the 2. Check the of	RES signal. connection of the PU and inverter.			



# (2) Warnings

When the protective function is activated, the output is not shut off.

Operation Panel	OL	DL.	FR-PU04 FR-PU07	OL		
Indication Name	Stall prevention					
Name	During acceleration	When the output curren control) of the inverter e operation level, etc.), this current decreases to pro-	exceeds the stall is function stops event the invert is decreased be	during real sensorless vector control or vector I prevention operation level ( <i>Pr. 22 Stall prevention</i> the increase in frequency until the overload er from resulting in overcurrent shut-off. When low stall prevention operation level, this function		
Description	When the output current (output torque during real sensorless vector of control) of the inverter exceeds the stall prevention operation level ( <i>Pr. constants operation level</i> etc.) this function reduces frequency until the overland					
	During deceleration					
Check point	<ol> <li>Check that the <i>Pr. 0 Torque boost</i> setting is not too large.</li> <li>Check that the <i>Pr. 7 Acceleration time</i> and <i>Pr. 8 Deceleration time</i> settings are not too small.</li> <li>Check that the load is not too heavy.</li> <li>Are there any failure in peripheral devices?</li> <li>Check that the <i>Pr. 13 Starting frequency</i> is not too large.         <ul> <li>Check the motor for use under overload.</li> </ul> </li> </ol>					
Corrective action	<ol> <li>Increase or decrease the <i>Pr. 0 Torque boost</i> value 1% by 1% and check the motor status. (<i>Refer to page 143</i>.)</li> <li>Set a larger value in <i>Pr. 7 Acceleration time</i> and <i>Pr. 8 Deceleration time</i>. (<i>Refer to page 172</i>.)</li> <li>Reduce the load weight.</li> <li>Try advanced magnetic flux vector control, real sensorless vector control or vector control.</li> <li>Change the <i>Pr. 14 Load pattern selection</i> setting.</li> <li>Set stall prevention operation current in <i>Pr. 22 Stall prevention operation level</i>. (The initial value is 150%.) The acceleration/deceleration time may change. Increase the stall prevention operation level with <i>Pr. 22 Stall prevention operation level</i>, or disable stall prevention with <i>Pr. 156 Stall prevention operation selection</i>. (Use <i>Pr. 156</i> to set either operation continued or not at OL operation.)</li> </ol>					

Operation Panel Indication	oL	οL	FR-PU04 FR-PU07	oL
Name	Stall prevention	n (overvoltage)		
Description	During deceleration	If the regenerative energy of the motor becomes excessive and exceeds the regenerative energy consumption capability, this function stops the decrease in frequency to prevent overvoltage shut-off. As soon as the regenerative energy has decreased, deceleration resumes.  If the regenerative energy of the motor becomes excessive when regeneration avoidance function is selected ( <i>Pr.</i> 882 = 1), this function increases the speed to prevent overvoltage shut-off. ( <i>Refer to page 376.</i> )		
Check point	Check for sudden speed reduction. Regeneration avoidance function ( <i>Pr. 882 to Pr. 886</i> ) is being used? ( <i>Refer to page 376.</i> )			
Corrective action	The deceleration time may change. Increase the deceleration time using <i>Pr. 8 Deceleration time</i> .			

Operation Panel Indication	PS	<i>P</i> 5	FR-PU04 FR-PU07	PS
Name	PU stop			
Description	Stop with RESET of the PU is set in <i>Pr. 75 Reset selection/disconnected PU detection/PU stop selection</i> . (For <i>Pr. 75</i> , refer to <i>page 300</i> .)			
Check point	Check for a stop made by pressing STOP of the operation panel.			
Corrective action	Turn the start signal off and release with $\stackrel{\text{PU}}{\text{EXT}}$ .			

Operation Panel Indication	RB	r b	FR-PU04 FR-PU07	RB	
Name	Regenerative	brake prealarm			
Description	duty value. If the RBP signal output,	Appears if the regenerative brake duty reaches or exceeds 85% of the <i>Pr. 70 Special regenerative brake duty</i> value. If the regenerative brake duty reaches 100%, a regenerative overvoltage (E. OV_) occurs. The RBP signal can be simultaneously output with the [RB] display. For the terminal used for the RBP signal output, assign the function by setting "7" (positive logic) or "107" (negative logic) in any of <i>Pr. 190 to Pr. 196 (output terminal function selection). (Refer to page 234)</i>			
Check point	<ul> <li>Check that the brake resistor duty is not high.</li> <li>Check that the <i>Pr. 30 Regenerative function selection</i> and <i>Pr. 70 Special regenerative brake duty</i> values are correct.</li> </ul>				
Corrective action		deceleration time.	ion salaction and P	r 70 Special regenerative brake duty Values	

• Check the Pr. 30 Regenerative function selection and Pr. 70 Special regenerative brake duty values.

Operation Panel Indication	ТН	l. H	FR-PU04 FR-PU07	ТН	
Name	Electronic the	rmal relay function prea	larm		
Description	Appears if the cumulative value of the <i>Pr. 9 Electronic thermal O/L relay</i> reaches or exceeds 85% of the preset level. If it reaches 100% of the <i>Pr. 9 Electronic thermal O/L relay</i> setting, a motor overload shut-off (E. THM) occurs.  The THP signal can be simultaneously output with the [TH] display. For the terminal used for the THP signal output, assign the function by setting "8" (positive logic) or "108" (negative logic) in any of <i>Pr. 190 to Pr. 196 (output terminal function selection). (Refer to page 234)</i>				
Check point	1. Check for large load or sudden acceleration.     2. Is the <i>Pr. 9 Electronic thermal O/L relay</i> setting is appropriate? ( <i>Refer to page 181.</i> )				
Corrective action		load weight or the num opriate value in Pr. 9 El		times. D/L relay. (Refer to page 181.)	

Operation Panel	МТ	ΠΓ	FR-PU04			
Indication	141.1	111	FR-PU07	MT		
Name	Maintenance s	Maintenance signal output				
Description	Indicates that the cumulative energization time of the inverter has reached a given time.					
Check point	The <i>Pr. 503 Maintenance timer</i> setting is larger than the <i>Pr. 504 Maintenance timer alarm output set time</i> setting. ( <i>Refer to page 381.</i> )					
Corrective action	Setting "0" in Pr. 503 Maintenance timer erraces the signal.					

Operation Panel	СР	P	FR-PU04			
Indication	OF .	<u> </u>	FR-PU07	СР		
Name	Parameter co	Parameter copy				
Description		Appears when parameters are copied between models with capacities of FR-A720-02150(FR-A740-01100) or less and FR-A720-02880(FR-A740-01440) or more.				
Check point		Resetting of Pr.9, Pr.30, Pr.51, Pr.52, Pr.54, Pr.56, Pr.57, Pr.61, Pr.70, Pr.72, Pr.80, Pr.82, Pr.90 to Pr.94, Pr.158, Pr.455, Pr.458 to Pr.462, Pr.557, Pr.859, Pr.860 and Pr.893 is necessary.				
Corrective action	Set the initial	Set the initial value in Pr. 989 Parameter copy alarm release.				

Operation Panel	SL	5!	FR-PU04		
Indication	J.	JL	FR-PU07	SL	
Name	Speed limit indication (output during speed limit)				
Description	Output if the speed limit level is exceeded during torque control.				
Check point	<ul><li>Check that the torque command is not larger than required.</li><li>Check that the speed limit level is not low.</li></ul>				
Corrective action		Decrease the torque command.     Increase the speed limit level.			

#### (3) Minor fault

When the protective function is activated, the output is not shut off. You can also output a minor fault signal by making parameter setting. (Set "98" in any of *Pr. 190 to Pr. 196 (output terminal function selection). (Refer to page 234.)*)

Operation Panel Indication	FN	Fn	FR-PU04 FR-PU07	FN		
Name	Fan fault	Fan fault				
Description		For the inverter that contains a cooling fan, $F_{\Box}$ appears on the operation panel when the cooling fan stops due to a fault or different operation from the setting of $Pr. 244$ Cooling fan operation selection.				
Check point	Check the cooling fan for a fault.					
Corrective action	Check for fan	fault. Please contact yo	ur sales represe	ntative.		



(4) Major fault
When the protective function is activated, the inverter output is shut off and an alarm is output.

Operation Panel Indication	E.OC1	E.0 E 1	FR-PU04 FR-PU07	OC During Accs	
Name	Overcurrent s	hut-off during accelerat	tion		
Description		rter output current reach he protective circuit is ac		proximately 220% of the rated current during sinverter output.	
Check point	<ol> <li>1. Check for sudden acceleration.</li> <li>2. Check that the downward acceleration time is not long in vertical lift application.</li> <li>3. Check for output short circuit.</li> <li>4. Check that the <i>Pr. 3 Base frequency</i> setting is not 60Hz when the motor rated frequency is 50Hz.</li> <li>5. Check that stall prevention operation is correct.</li> <li>6. Check that the regeneration is not performed frequently. (Check that the output voltage becomes larger than the V/F reference voltage at regeneration and overcurrent due to increase in motor current occurs.)</li> <li>7. Check that the power supply for RS-485 terminal is not shorted. (under vector control)</li> </ol>				
Corrective action	<ol> <li>7. Check that the power supply for RS-485 terminal is not shorted. (under vector control)</li> <li>1. Increase the acceleration time.         (Shorten the downward acceleration time in vertical lift application.)</li> <li>2. When "E.OC1" is always lit at starting, disconnect the motor once and start the inverter.         If "E.OC1" is still lit, contact your sales representative.</li> <li>3. Check the wiring to make sure that output short circuit does not occur.</li> <li>4. Set the <i>Pr. 3 Base frequency</i> to 50Hz. (<i>Refer to page 158.</i>)</li> <li>5. Perform a correct stall prevention operation. (<i>Refer to page 149.</i>)</li> <li>6. Set base voltage (rated voltage of the motor, etc.) in <i>Pr. 19 Base frequency voltage</i>. (<i>Refer to page 158.</i>)</li> <li>7. Check RS-485 terminal connection. (under vector control)</li> </ol>				

Operation Panel Indication	E.OC2	8.002	FR-PU04 FR-PU07	Stedy Spd OC	
Name	Overcurrent s	hut-off during constant s	peed		
Description	When the inverter output current reaches or exceeds approximately 220% of the rated current during constant speed operation, the protective circuit is activated to stop the inverter output.				
Check point	1. Check for sudden load change.     2. Check for output short circuit.     3. Check that stall prevention operation is correct     4. Check that the power supply for RS-485 terminal is not shorted. (under vector control)				
Corrective action	1. Keep load stable. 2. Check the wiring to avoid output short circuit. 3. Check that stall prevention operation setting is correct. (Refer to page 149.) 4. Check RS-485 terminal connection. (under vector control)				

Operation Panel Indication	E.OC3	8.003	FR-PU04 FR-PU07	OC During Dec	
Name	Overcurrent s	hut-off during deceleration	on or stop		
Description	When the inverter output current reaches or exceeds approximately 220% of the rated inverter current during deceleration (other than acceleration or constant speed), the protective circuit is activated to stop the inverter output.				
Check point	1. Check for sudden speed reduction.     2. Check for output short circuit.     3. Check for too fast operation of the motor's mechanical brake.     4. Check that stall prevention operation setting is correct.     5. Check that the power supply for RS-485 terminal is not shorted. (under vector control)				
Corrective action	1. Increase the deceleration time. 2. Check the wiring to avoid output short circuit. 3. Check the mechanical brake operation. 4. Check that stall prevention operation setting is correct. (Refer to page 149.) 5. Check RS-485 terminal connection. (under vector control)				

Operation Panel Indication	E.OV1	E.Ou 1	FR-PU04 FR-PU07	OV During Acc
Name	Regenerative	overvoltage shut-off dur	ing acceleration	
Description	If regenerative energy causes the inverter's internal main circuit DC voltage to reach or exceed the specified value, the protective circuit is activated to stop the inverter output. The circuit may also be activated by a surge voltage produced in the power supply system.			
Check point	Check for too slow acceleration. (e.g. during descending acceleration with lifting load)			
Corrective action		ne acceleration time. ration avoidance function	n (Pr. 882 to Pr. 88	86). (Refer to page 376.)



Operation Panel Indication	E.OV2	8.002	FR-PU04 FR-PU07	Stedy Spd OV	
Name	_	overvoltage shut-off durin	•		
Description	If regenerative energy causes the inverter's internal main circuit DC voltage to reach or exceed the specified value, the protective circuit is activated to stop the inverter output. The circuit may also be activated by a surge voltage produced in the power supply system.				
Check point	Check for sudden load change.				
Corrective action	<ul> <li>Keep load stable.</li> <li>Use regeneration avoidance function (<i>Pr. 882 to Pr. 886</i>). (<i>Refer to page 376</i>.)</li> <li>Use the brake unit or power regeneration common converter (FR-CV) as required.</li> </ul>				

Operation Panel Indication	E.OV3	E.O u 3	FR-PU04 FR-PU07	OV During Dec	
Name	Regenerative	overvoltage shut-off dur	ing deceleration	or stop	
Description	If regenerative energy causes the inverter's internal main circuit DC voltage to reach or exceed the specified value, the protective circuit is activated to stop the inverter output. The circuit may also be activated by a surge voltage produced in the power supply system.				
Check point	Check for sudden speed reduction.				
Corrective action	<ul> <li>Increase the deceleration time. (Set the deceleration time which matches the inertia of moment of the load)</li> <li>Decrease the braking duty.</li> <li>Use regeneration avoidance function (<i>Pr. 882 to Pr. 886</i>). (<i>Refer to page 376.</i>)</li> <li>Use the brake unit or power regeneration common converter (FR-CV) as required.</li> </ul>				

Operation Panel Indication	E.THT	E.F.H.F	FR-PU04 FR-PU07	Inv. Overload
Name	Inverter overload shut-off (electronic thermal relay function) •2			
Description	If a current not less than 150% of the rated output current flows and overcurrent shut-off does not occur (220% or less), inverse-time characteristics cause the electronic thermal relay to be activated to stop the inverter output in order to protect the output transistors. (overload immunity 150%-1 60s)			
Check point	Check the motor for use under overload.			
Corrective action	Reduce the lo	ad weight.		

When ND is selected. (Refer to page 430.)

Operation Panel Indication	Е.ТНМ	E.F H.N	FR-PU04 FR-PU07	Motor Overload		
Name	Motor overloa	d shut-off (electronic the	ermal relay functi	ion) *2		
Description	The electronic thermal relay function in the inverter detects motor overheat due to overload or reduced cooling capability during constant-speed operation and pre-alarm (TH display) is output when the temperature reaches 85% of the <i>Pr. 9 Electronic thermal O/L relay</i> setting and the protection circuit is activated to stop the inverter output when the temperature reaches the specified value. When running a special motor such as a multi-pole motor or multiple motors, provide a thermal relay on the inverter output side since such motor(s) cannot be protected by the electronic thermal relay function.					
Check point	<ol> <li>Check the motor for use under overload.</li> <li>Check that the setting of <i>Pr. 71 Applied motor</i> for motor selection is correct. (<i>Refer to page 184.</i>)</li> <li>Check that stall prevention operation setting is correct.</li> </ol>					
Corrective action		J		e motor in <i>Pr. 71 Applied motor</i> . ect. ( <i>Refer to page 149</i> .)		

Resetting the inverter initializes the internal thermal integrated data of the electronic thermal relay function.

Operation Panel Indication	E.FIN	8.F1 n	FR-PU04 FR-PU07	H/Sink O/Temp		
Name	Fin overheat					
Description	If the heatsink overheats, the temperature sensor is actuated to stop the inverter output.  The FIN signal can be output when the temperature becomes approximately 85% of the heatsink overheat protection operation temperature.  For the terminal used for the FIN signal output, assign the function by setting "26" (positive logic) or "126" (negative logic) in any of <i>Pr. 190 to Pr. 196 (output terminal function selection). (Refer to page 234)</i>					
Check point	Check for too high ambient temperature.     Check for heatsink clogging.					
	3. Check that the cooling fan is stopped. (Check that $\digamma_{n}$ is displayed on the operation panel.)					
Corrective action	1. Set the amb 2. Clean the h 3. Replace the		nin the specificat	ions.		



Operation Panel Indication	E.IPF	EI PF	FR-PU04 FR-PU07	Inst. Pwr. Loss			
Name	Instantaneous	power failure					
Description	If a power failure occurs for longer than 15ms (this also applies to inverter input shut-off), the instantaneous power failure protective function is activated to stop the inverter output in order to prevent the control circuit from malfunctioning. If a power failure persists for longer than 100ms, the alarm warning output is not provided, and the inverter restarts if the start signal is on upon power restoration. (The inverter continues operating if an instantaneous power failure is within 15ms.) In some operating status (load magnitude, acceleration/deceleration time setting, etc.), overcurrent or other protection may be activated upon power restoration. When instantaneous power failure protection is activated, the IPF signal is output. ( <i>Refer to page 260</i> )						
Check point	Find the cause	Find the cause of instantaneous power failure occurrence.					
Corrective action	<ul> <li>Remedy the instantaneous power failure.</li> <li>Prepare a backup power supply for instantaneous power failure.</li> <li>Set the function of automatic restart after instantaneous power failure (<i>Pr. 57</i>). (<i>Refer to page 260.</i>)</li> </ul>						

Operation Panel Indication	E.BE	Ε.	<i>bE</i>	FR-PU04 FR-PU07	Br. Cct. Fault	
Name	Brake transisto	Brake transistor alarm detection				
Description		This function stops the inverter output if an alarm occurs in the brake circuit, e.g. damaged brake transistors. In this case, the inverter must be powered off immediately.				
Check point	Reduce the load inertia.     Check that the frequency of using the brake is proper.					
Corrective action	Replace the ir	nverter.				

Operation Panel Indication	E.UVT	E.U., [	FR-PU04 FR-PU07	Under Voltage			
Name	Undervoltage	Undervoltage					
Description	In addition, the the power sup stops the inve	If the power supply voltage of the inverter decreases, the control circuit will not perform normal functions. In addition, the motor torque wiil be insufficient and/or heat generation will increase. To prevent this, if the power supply voltage decreases below about 150VAC (300VAC for the 400V class), this function stops the inverter output.  When a jumper is not connected across P/+-P1, the undervoltage protective function is activated. When undervoltage protection is activated, the IPF signal is output. (Refer to page 260)					
Check point		Check for start of large-capacity motor.     Check that a jumper or DC reactor is connected across terminals P/+-P1.					
Corrective action	2. Connect a j	1. Check the power supply system equipment such as the power supply. 2. Connect a jumper or DC reactor across terminals P/+-P1.  If the problem still persists after taking the above measure, please contact your sales representative.					

Operation Panel	E.ILF	E.I L.F	FR-PU04	Fault 14		
Indication	E.ILF		FR-PU07	Input phase loss		
Name	Input phase failure					
Description	This alarm is output when function valid setting (=1) is set in <i>Pr. 872 Input phase failure protection selection</i> and one phase of the three phase power input opens. ( <i>Refer to page 271.</i> )					
Check point	Check for a break in the cable for the three-phase power supply input.					
Corrective action	<ul> <li>Wire the cables properly.</li> <li>Repair a brake portion in the cable.</li> <li>Check the <i>Pr. 872 Input phase failure protection selection</i> setting.</li> </ul>					

Operation Panel Indication	E.OLT	E.DL	FR-PU04 FR-PU07	Still Prev STP ( OL shown during stall prevention operation)		
Name	Stall prevention	n				
Description	If the frequency has fallen to 0.5Hz by stall prevention operation and remains for 3s, an alarm (E.OLT) appears to shutoff the inverter output. OL appears while stall prevention is being activated. When speed control is performed by real sensorless vector control or vector control, an alarm (E.OLT) is displayed and the inverter output is stopped if frequency drops to the <i>Pr. 865 Low speed detection</i> (initial value is 1.5Hz) setting by torque limit operation and the output torque exceeds <i>Pr. 874 OLT level setting</i> (initial value is 150%) setting and remains for more than 3s.					
Check point	<ul> <li>Check the motor for use under overload. (Refer to page 150.)</li> <li>Check that the Pr. 865 Low speed detection and Pr. 874 OLT level setting values are correct. (Check the Pr. 22 Stall prevention operation level setting if V/F control is exercised.)</li> </ul>					
Corrective action		Pr. 22 Stall prevention op		865 Low speed detection and Pr. 874 OLT level ation level setting if V/F control is exercised.)		

Operation Panel Indication	E.GF	Ε.	SF	FR-PU04 FR-PU07	Ground Fault	
Name	•	Output side earth (ground) fault overcurrent				
Description		This function stops the inverter output if an earth (ground) fault overcurrent flows due to an earth (ground) fault that occurred on the inverter's output (load) side.				
Check point	Check for an earth (ground) fault in the motor and connection cable.					
Corrective action	Remedy the e	Remedy the earth (ground) fault portion.				

Operation Panel Indication	E.LF	Ε.	LF	FR-PU04 FR-PU07		
Name	Output phase failure					
Description	This function stops the inverter output if one of the three phases (U, V, W) on the inverter's output side (load side) opens.					
Check point	Check the wiring (Check that the motor is normal.)     Check that the capacity of the motor used is not smaller than that of the inverter.					
Corrective action	<ul> <li>Wire the cables properly.</li> <li>Check the <i>Pr. 251 Output phase failure protection selection</i> setting.</li> </ul>					

Operation Panel Indication	E.OHT	E.0HF	FR-PU04 FR-PU07	OH Fault			
Name	External thern	External thermal relay operation +3					
Description	If the external thermal relay provided for motor overheat protection, or the internally mounted temperature relay in the motor, etc. switches on (contacts open), the inverter output is stopped.						
Check point	<ul> <li>Check for motor overheating.</li> <li>Check that the value of 7 (OH signal) is set correctly in any of <i>Pr. 178 to Pr. 189 (input terminal function selection)</i>.</li> </ul>						
Corrective action		load and operating duty relay contacts are reset		e inverter will not restart unless it is reset.			

<sup>\*3</sup> Functions only when any of Pr. 178 to Pr. 189 (input terminal function selection) is set to OH.

Operation Panel	E.PTC	EPEE	FR-PU04	Fault 14			
Indication	L.1 10		FR-PU07	PTC activated			
Name		PTC thermistor operation					
Description	input connecte	Appears when the motor overheat status is detected for 10s or more by the external PTC thermistor input connected to the terminal AU.					
Check point	· Check the r	<ul> <li>Check the connection between the PTC thermistor switch and thermal protector.</li> <li>Check the motor for operation under overload.</li> <li>Is valid setting ( = 63) selected in <i>Pr. 184 AU terminal function selection</i> ? (<i>Refer to page 183, 227.</i>)</li> </ul>					
Corrective action	Reduce the load weight.						

Operation Panel Indication	E.OPT	E.DPT	FR-PU04 FR-PU07	Option Fault					
Name	Option alarm	Option alarm							
Description	Appears when the AC power supply is connected to the terminal R/L1, S/L2, T/L3 accidentally when a high power factor converter is connected.  Appears when torque command by the plug-in option is selected using <i>Pr. 804 Torque command source selection</i> and no plug-in option is mounted.  Appears when the switch for the manufacturer setting of the plug-in option is changed.								
Check point	Check that the AC power supply is not connected to the terminal R/L1, S/L2, T/L3 when a high power factor converter (FR-HC, MT-HC) or power regeneration common converter (FR-CV) is connected.      Check that the plug-in option for torque command setting is connected.								
Corrective action	<ul> <li>Check that the plug-in option for torque command setting is connected.</li> <li>Check the parameter (<i>Pr. 30</i>) setting and wiring.</li> <li>The inverter may be damaged if the AC power supply is connected to the terminal R/L1, S/L2, T/L3 when a high power factor converter is connected. Please contact your sales representative.</li> <li>Check for connection of the plug-in option. Check the <i>Pr. 804 Torque command source selection</i> setting.</li> <li>Return the switch for the manufacturer setting of the plug-in option to the initial status. (<i>Refer to instruction manual of each option</i>)</li> </ul>								

Operation Panel Indication	E.OP3	E.0P3	FR-PU04 FR-PU07	Option slot alarm 3	
Name	Communication	on option alarm			
Description	Stops the inve	erter output when a comr	nunication line	error occurs in the communication option.	
Check point	Check for a wrong option function setting and operation.     Check that the plug-in option is plugged into the connector securely.     Check for a brake in the communication cable.     Check that the terminating resistor is fitted properly.				
Corrective action	Check the option function setting, etc.     Connect the plug-in option securely.     Check the connection of communication cable.				



Operation Panel Indication	E. 1 to E. 3	ε. ε	/ to	FR-PU04 FR-PU07	Fault 1 to Fault 3	
Name	Option alarm					
Description	Stops the inverter output if a contact faullt or the like of the connector between the inverter and communication option occurs or if a communication option is fitted to the connector 1 or 2.  Appears when the switch for the manufacturer setting of the plug-in option is changed.					
Check point	1. Check that the plug-in option is plugged into the connector securely.     (1 to 3 indicate the option connector numbers.)     2. Check for excess electrical noises around the inverter.     3. Check that the communication option is not fitted to the connector 1 or 2.					
Corrective action	<ol> <li>Check that the communication option is not fitted to the connector 1 or 2.</li> <li>Connect the plug-in option securely.</li> <li>Take measures against noises if there are devices producing excess electrical noises around the inverter. If the problem still persists after taking the above measure, please contact your sales representative or distributor.</li> <li>Fit the communication option to the connector 3.</li> <li>Return the switch for the manufacturer setting of the plug-in option to the initial status. (Refer to instruction manual of each option)</li> </ol>					

Operation Panel Indication	E.PE	ε.	PE	FR-PU04 FR-PU07	Corrupt Memry	
Name	Parameter sto	rage devi	ce alarm (cont	rol circuit board)		
Description	A fault occurre	ed in parar	neters stored	(EEPROM failur	re)	
Check point	Check for too	Check for too many number of parameter write times.				
Corrective action	When perform	Please contact your sales representative.  When performing parameter write frequently for communication purposes, set "1" in <i>Pr. 342</i> to enable RAM write. Note that powering off returns the inverter to the status before RAM write.				

Operation Panel	E.PE2	E.P.E.2	FR-PU04	Fault 14			
Indication	L.FLZ		FR-PU07	PR storage alarm			
Name	Parameter sto	Parameter storage device alarm (main circuit board)					
Description	A fault occurre	A fault occurred in parameters stored (EEPROM failure)					
Check point							
Corrective action	Please contac	Please contact your sales representative.					

Operation Panel Indication	E.PUE	<i>E.PUE</i>	FR-PU04 FR-PU07	PU Leave Out		
Name	PU disconnec	tion				
Description	This function stops the inverter output if communication between the inverter and PU is suspended, e.g. the operation panel and parameter unit is disconnected, when "2", "3", "16" or "17" was set in <i>Pr. 75 Reset selection/disconnected PU detection/PU stop selection</i> . This function stops the inverter output when communication errors occurred consecutively for more than permissible number of retries when a value other than "9999" is set in <i>Pr. 121 Number of PU communication retries</i> during the RS-485 communication with the PU connector. This function also stops the inverter output if communication is broken for the period of time set in <i>Pr. 122 PU communication check time interval</i> .					
Check point	<ul> <li>Check that the FR-DU07 or parameter unit (FR-PU04/FR-PU07) is fitted tightly.</li> <li>Check the <i>Pr. 75</i> setting.</li> </ul>					
Corrective action	Fit the FR-DU07 or parameter unit (FR-PU04/FR-PU07) securely.					

Operation Panel Indication	E.RET	E.r	FR-PU04 FR-PU07	Retry No Over		
Name	Retry count ex	Retry count excess				
Description	If operation ca output.	If operation cannot be resumed properly within the number of retries set, this function stops the inverter output.				
Check point	Find the cause of alarm occurrence.					
Corrective action	Eliminate the	cause of the error prece	ding this error in	ndication.		

	E. 6	Ε.	8	FR-PU04 FR-PU07	Fault 6		
Operation Panel Indication	E. 7	Ε.	7		Fault 7		
	E.CPU	E.C	ԲԱ		CPU Fault		
Name	CPU error						
Description	Stops the inve	Stops the inverter output if the communication error of the built-in CPU occurs.					
Check point	Check for dev	Check for devices producing excess electrical noises around the inverter.					
Corrective action	inverter.	Take measures against noises if there are devices producing excess electrical noises around the					

Operation Panel Indication	E.CTE	8.2.78	FR-PU04 FR-PU07	E.CTE		
Name	Operation par	nel power supply short c	rcuit, RS-485 te	rminal power supply short circuit		
Description	When the operation panel power supply (PU connector) is shorted, this function shuts off the power output. At this time, the operation panel (parameter unit) cannot be used and RS-485 communication from the PU connector cannot be made. When the power supply for the RS-485 terminals are shorted, this function shuts off the power output.  At this time, communication from the RS-485 terminals cannot be made.  To reset, enter the RES signal or switch power off, then on again.					
Check point	Check for a short circuit in the PU connector cable.     Check that the RS-485 terminals are connected correctly.					
Corrective action	1. Check the F 2. Check the	PU and cable. connection of the RS-48	5 terminals			

Operation Panel	E.MB1 to 7	<i>E.ΠЪ  </i> to	FR-PU04			
Indication		E.N&7	FR-PU07	E.MB1 Fault to E.MB7 Fault		
Name	Brake sequen	ce error				
Description		The inverter output is stopped when a sequence error occurs during use of the brake sequence function ( <i>Pr. 278</i> to <i>Pr. 285</i> ). ( <i>Refer to page 213</i> )				
Check point	Find the cause of alarm occurrence.					
Corrective action	Check the set	Check the set parameters and perform wiring properly.				

Operation Panel Indication	E.OS	<i>E.</i> 05	FR-PU04 FR-PU07	Overspeed occurrence		
Name	Overspeed oc	curence				
Description		Appears when the motor speed reaches and exceedes the overspeed setting level under encoder feedback control or vector control.				
Check point	<ul> <li>Check that the <i>Pr. 374 Overspeed detection level</i> value is correct.</li> <li>Check that the number of encoder pulses does not differ from the actual number of encoder pulses.</li> </ul>					
Corrective action		374 Overspeed detection le ect number of encoder		tly. Number of encoder pulses.		

Operation Panel Indication	E.OSD	E.05d	FR-PU04 FR-PU07	Excessive speed deflection			
Name		on excess detection					
Description		Stops the inverter output if the motor speed is increased or decreased under the influence of the load etc. during vector control and cannot be controlled in accordance with the speed command value.					
Check point	<ul> <li>Check that the values of <i>Pr.285 Overspeed detection frequency</i> and <i>Pr.853 Speed deviation time</i> are correct.</li> <li>Check for sudden load change.</li> <li>Check that the number of encoder pulses does not differ from the actual number of encoder pulses.</li> </ul>						
Corrective action	<ul> <li>Set Pr.285 Overspeed detection frequency and Pr.853 Speed deviation time correctly.</li> <li>Keep load stable.</li> <li>Set the correct number of encoder pulses in Pr. 369 Number of encoder pulses.</li> </ul>						



Operation Panel Indication	E.ECT	8.867	FR-PU04 FR-PU07	No encoder signal				
Name	Open cable d	etection						
Description		Stops the inverter output when the encoder signal is shut off under orientation control, encoder feedback control or vector control.						
Check point	Check for the encoder signal loss.     Check that the encoder specifications are correct.     Check for a loose connector.     Check that the switch setting of the FR-A7AP is correct.     Check that the power is supplied to the encoder. Or, check that the power is not supplied to the encoder later than the inverter.							
Corrective action	<ul> <li>encoder later than the inverter.</li> <li>Remedy the open cable.</li> <li>Use an encoder that meets the specifications.</li> <li>Make connection securely.</li> <li>Make a switch setting of the FR-A7AP correctly. (Refer to page 38)</li> <li>Supply the power to the encoder. Or supply the power to the encoder at the same time when the power is supplied to the inverter.</li> <li>If the power is supplied to the encoder after the inverter, check that the encoder signal is securely sent and set "0" in Pr.376.</li> </ul>							

Operation Panel	E.EOD		Od	FR-PU04	Fault 14		
Indication	E.EOD	C.		FR-PU07	Excessive position error		
Name	Excessive pos	ition error					
Description	Indicates that the difference between the position command and position feedback exceeded the reference under position control.						
Check point	· Check that	<ul> <li>Check that the position detecting encoder mounting orientation matches the parameter.</li> <li>Check that the load is not large.</li> <li>Check that the Pr. 427 Excessive level error and Pr. 369 Number of encoder pulses are correct.</li> </ul>					
Corrective action	<ul> <li>Check the parameters.</li> <li>Reduce the load weight.</li> <li>Set the <i>Pr. 427 Excessive level error</i> and <i>Pr. 369 Number of encoder pulses</i> correctly.</li> </ul>						

Operation Panel	E.EP	E.E.P	FR-PU04	Fault 14	
Indication		L.L /	FR-PU07	E.EP	
Name	Encoder phas	e error			
Description	The rotation command of the inverter differs from the actual motor rotation direction detected from the encoder during offline auto tuning.				
Check point	<ul> <li>Check for mis-wiring of the encoder cable.</li> <li>Check for wrong setting of <i>Pr. 359 Encoder rotation direction</i>.</li> </ul>				
Corrective action		nnection and wiring secu Pr. 359 Encoder rotation			

Operation Panel Indication	E.P24	E.P.24	FR-PU04 FR-PU07	E.P24			
Name	24VDC power	er output short circuit					
Description	When the 24VDC power output from the PC terminal is shorted, this function shuts off the power output. At this time, all external contact inputs switch off. The inverter cannot be reset by entering the RES signal. To reset it, use the operation panel or switch power off, then on again.						
Check point	· Check for a short circuit in the PC terminal output.						
Corrective action	· Remedy the earth (ground) fault portion.						

Operation Panel	E.CDO	E.E a'O	FR-PU04	Fault 14		
Indication	L.ODO	C.L 0 U	FR-PU07	OC detect level		
Name	Output curren	t detection value exceed	ed			
Description	This function is activated when the output current exceeds the <i>Pr. 150 Output current detection level</i> setting.					
Check point	Check the settings of Pr. 150 Output current detection level, Pr. 151 Output current detection signal delay time, Pr. 166 Output current detection signal retention time, Pr. 167 Output current detection operation selection. (Refer to page 243.)					



Operation Panel	E.IOH	EJ OH	FR-PU04	Fault 14	
Indication	L.IOII		FR-PU07	Inrush overheat	
Name	Inrush current	limit circuit alarm			
Description	This function is activated when the resistor of the inrush current limit circuit overheats. The inrush current limit circuit failure				
Check point	Check that frequent power ON/OFF is not repeated.				
Corrective action		rcuit where frequent pov still persists after taking		not repeated. sure, please contact your sales representative.	

Operation Panel	E.SER	E.5E r	FR-PU04	Fault 14		
Indication	E.SEK	C.3C.	FR-PU07	VFD Comm error		
Name	Communication	on error (inverter)				
Description	This function stops the inverter output when communication error occurs consecutively for more than permissible retry count when a value other than "9999" is set in <i>Pr. 335 RS-485 communication retry count</i> during RS-485 communication from the RS-485 terminals. This function also stops the inverter output if communication is broken for the period of time set in <i>Pr. 336 RS-485 communication check time interval</i> .					
Check point	Check the RS-485 terminal wiring.					
Corrective action	Perform wiring of the RS-485 terminals properly.					

Operation Panel	E.AIE	E.81 E	FR-PU04	Fault 14		
Indication	LAIL		FR-PU07	Analog in error		
Name	Analog input e	error				
Description	Appears when 30mA or more is input or a voltage (7.5V or more) is input with the terminal 2/4 set to current input.					
Check point	Check the setting of Pr. 73 Analog input selection and Pr. 267 Terminal 4 input selection. (Refer to page 282.)					
Corrective action	_	requency command by to voltage input.	current input or	set Pr. 73 Analog input selection or Pr. 267 Terminal		

Operation Panel	E.USB	<i>£US</i> b	FR-PU04	Fault 14		
Indication	L.00B	C.U J O	FR-PU07	USB comm error		
Name	USB commun	ication error				
Description	When the time inverter outpu		unication check t	ime interval has broken, this function stops the		
Check point	Check the US	SB communication cable.				
Corrective action	<ul> <li>Check the <i>Pr. 548 USB communication check time interval</i> setting.</li> <li>Check the USB communication cable.</li> <li>Increase the <i>Pr. 548 USB communication check time interval</i> setting. Or, change the setting to 9999. (<i>Refer to page 353</i>)</li> </ul>					

Operation Panel Indication	E.11	Ε.	1	1		FR-PU04 FR-PU07	Fault 11
Name	Opposite rota	ion decele	ratior	n error			
Description	The speed may not decelerate during low speed operation if the rotation direction of the speed command and the estimated speed differ when the rotation is changing from forward to reverse (or from reverse to forward) under real sensorless vector control. At this time, the inverter output is stopped if the rotation direction will not change, causing overload.						
Check point	<ul> <li>Check that the <i>Pr. 71 Applied motor</i> setting is appropriate.</li> <li>Check that offline auto tuning and online auto tuning have been performed.</li> </ul>						
Corrective action	Check the s     Perform offl     Please cont	ine auto tu	ning,	then o	nlir	ne auto tuning.	

Operation Panel Indication	E.13	Ε.	13	FR-PU04 FR-PU07	Fault 13			
Name	Internal circuit	Internal circuit error						
Description	Appears when an internal circuit error occurred.							
Corrective action	Please contac	Please contact your sales representative.						

#### CAUTION =

- If protective functions of E.ILF, E.PTC, E.PE2, E.EP, E.OD, E.CDO, E.IOH, E.SER, E.AIE, E.USB are activated when using the FR-PU04, "Fault 14" appears.
   Also when the alarm history is checked on the FR-PU04, the display is "E.14".

   If alarms other than the above appear, contact your sales representative.



# 5.4 Correspondences between digital and actual characters

There are the following correspondences between the actual alphanumeric characters and the digital characters displayed on the operation panel.

Actual	Digital
0	
1	
2	
3	
4	<b>-</b>
5	5
6	<u>5</u>
7	
8	
9	[9]

Actual	Digital
Actual  A  B  C	Digital
E	$ \mathcal{E} $
F	F
G	
Н	
J	
L	

Actual	Digital
M	
N	<b></b>
0	
0	ø
Р	<b>-</b>
S	5
T	
U	<u>/_/</u>
V	
r	
-	-

# 5.5 Check first when you have troubles

For real sensorless vector control and vector control, refer to the trouble shooting of speed control on *page 109*, torque control on *page 128*, and position control on *page 140*.

#### **POINT**

If the cause is still unknown after every check, it is recommended to initialize the parameters (initial value) then reset the required parameter values and check again.

# 5.5.1 Motor does not rotate as commanded

1) Check the Pr.0 Torque boost setting if V/F control is exercised. (Refer to page 143)

## 2) Check the main circuit

- —Check that a proper power supply voltage is applied (operation panel display is provided).
- —Check that the motor is connected properly.
- —Check that the jumper across P/+-P1 is connected.

## 3) Check the input signals

- —Check that start signal is input.
- —Check that both the forward and reverse rotation start signals are not input simultaneously.
- Check that the frequency setting signal is not zero. (When the frequency command is 0Hz and the start command is entered, FWD or REV LED on the operation panel flickers.)
- —Check that the AU signal is on when the frequency setting signal is 4 to 20mA.
- —Check that the output stop signal (MRS) or reset signal (RES) is not on.
- —Check that the CS signal is not OFF with automatic restart after instantaneous power failure function is selected ( $Pr. 57 \neq$  "9999").
- —Check that the sink or source jumper connector is fitted securely. (Refer to page 32)

## 4) Check the parameter settings

- —Check that Pr. 78 Reverse rotation prevention selection is not selected.
- —Check that the *Pr. 79 Operation mode selection* setting is correct.
- —Check that the bias and gain (calibration parameter C2 to C7) settings are correct.
- —Check that the Pr. 13 Starting frequency setting is not greater than the running frequency.
- —Check that frequency settings of each running frequency (such as multi-speed operation) are not zero.
- Check that especially the Pr. 1 Maximum frequency setting is not zero.
- —Check that the Pr. 15 Jog frequency setting is not lower than the Pr. 13 Starting frequency setting.

#### 5) Inspection of load

- —Check that the load is not too heavy.
- —Check that the shaft is not locked.

# 5.5.2 Motor generates abnormal noise

-No carrier frequency noises (metallic noises) are generated.

- □ Soft-PWM control to change the motor tone into an unoffending complex tone is factory-set to valid by *Pr. 72 PWM frequency selection*.
  - Adjust Pr. 72 PWM frequency selection to change the motor tone.
- -Check that the gain value under real sensorless vector control or vector control is not too high. Check the setting of *Pr. 820 (Pr. 830) Speed control P gain* when speed control is exercised and *Pr. 824 (Pr. 834) Torque control P gain* when torque control is exercised.
- —Check for any mechanical looseness.
- Contact the motor manufacturer.



# 5.5.3 Motor generates heat abnormally

- —Is the fan for the motor is running? (Check for accumulated dust.)
- —Check that the load is not too heavy. Lighten the load.
- —Check that the inverter output voltages (U, V, W) balanced.
- —Check that the Pr. 0 Torque boost setting is correct.
- —Was the motor type set? Check the setting of *Pr. 71 Applied motor*.
- —When using any other manufacturer's motor, perform offline auto tuning. (Refer to page 186.)

# 5.5.4 Motor rotates in opposite direction

- —Check that the phase sequence of output terminals U, V and W is correct.
- —Check that the start signals (forward rotation, reverse rotation) are connected properly. (Refer to page 29)

# 5.5.5 Speed greatly differs from the setting

- —Check that the frequency setting signal is correct. (Measure the input signal level.)
- —Check that the Pr. 1, Pr. 2, Pr. 19, Calibration parameter C2 to C7 settings are correct
- —Check that the input signal lines are not affected by external noise.
- (Use shielded cables)
- —Check that the load is not too heavy.
- —Check that the Pr. 31 to Pr. 36 (frequency jump) settings are correct.

# 5.5.6 Acceleration/deceleration is not smooth

- —Check that the acceleration and deceleration time settings are not too short.
- —Check that the load is not too heavy.
- Check that the torque boost (*Pr. 0, Pr. 46, Pr. 112*) setting is not too large to activate the stall function (torque limit).

# 5.5.7 Motor current is large

- —Check that the load is not too heavy.
- —Check that the Pr. 0 Torque boost setting is correct.
- —Check that the *Pr. 3 Base frequency* setting is correct.
- —Check that the *Pr. 14 Load pattern selection* setting is appropriate.
- Check that the *Pr. 19 Base frequency voltage* setting is correct.

# 5.5.8 Speed does not increase

- —Check that the maximum frequency (Pr. 1) setting is correct. (If you want to run the motor at 120Hz or more, set Pr. 18 High speed maximum frequency. (Refer to page 156.))
- —Check that the load is not too heavy.
- (In agitators, etc., load may become heavier in winter.)
- —Check that the torque boost (Pr.0, Pr.46, Pr.112) setting is not too large to activate the stall function under V/F control
- —Check that the brake resistor is not connected to terminals P/+-P1 accidentally.

# 5.5.9 Speed varies during operation

When advanced magnetic flux vector control, real sensorless vector control, vector control or encoder feedback control is exercised, the output frequency varies with load fluctuation between 0 and 2Hz. This is a normal operation and is not a fault.

## 1) Inspection of load

Check that the load is not varying.

# 2) Check the input signals

- —Check that the frequency setting signal is not varying.
- —Check that the frequency setting signal is not affected by noise. Input filter to the analog input terminal using *Pr. 74 Input filter time constant* and *Pr. 822 Speed setting filter 1*.
- —Check for a malfunction due to undesirable currents when the transistor output unit is connected. (Refer to page 33)

## 3) Others

- —Check that the settings of *Pr. 80 Motor capacity* and *Pr. 81 Number of motor poles* are correct to the inverter capacity and motor capacity under advanced magnetic flux vector control, real sensorless vector control or vector control.
- —Check that the wiring length is not exceeding 30m when advanced magnetic flux vector control, real sensorless vector control or vector control is exercised. Perform offline auto tuning. (Refer to pege 186)
- -Check that the wiring length is not too long for V/F control
- —Change the Pr. 19 Base frequency voltage setting (about 3%) under V/F control.

# 5.5.10 Operation mode is not changed properly

If the operation mode does not change correctly, check the following:

## 1) Inspection of load

- Check that the STF or STR signal is off.
  - When it is on, the operation mode cannot be changed.

#### 2) Parameter setting

—Check the Pr. 79 setting.

When the Pr. 79 Operation mode selection setting is "0" (initial value), the inverter is placed in the external operation mode at input power-on. At this time, press  $\frac{PU}{EXT}$  on the operation panel (press when the parameter unit (FR-PU04/FR-PU07) is used) to switch to the PU operation mode.

# 5.5.11 Operation panel (FR-DU07) display is not operating

—Check that the operation panel is connected to the inverter securely.

# 5.5.12 POWER lamp is not lit

Check that wiring is securely performed and installation is correct.

# 5.5.13 Parameter write cannot be performed

- —Make sure that operation is not being performed (signal STF or STR is not ON).
- -Make sure that you are not attempting to set the parameter in the external operation mode.
- -Check Pr. 77 Parameter write selection.
- —Check Pr. 161 Frequency setting/key lock operation selection.



# PRECAUTIONS FOR MAINTENANCE AND INSPECTION

This chapter provides the "PRECAUTIONS FOR MAINTENANCE AND INSPECTION" of this product.

Always read the instructions before using the equipment

3.1	Inspection item	416
	Measurement of main circuit voltages, currents an	
	powers	424



The inverter is a static unit mainly consisting of semiconductor devices. Daily inspection must be performed to prevent any fault from occurring due to the adverse effects of the operating environment, such as temperature, humidity, dust, dirt and vibration, changes in the parts with time, service life, and other factors.

# • Precautions for maintenance and inspection

For some short time after the power is switched off, a high voltage remains in the smoothing capacitor. When accessing the inverter for inspection, wait for at least 10 minutes after the power supply has been switched off, and then make sure that the voltage across the main circuit terminals P/+-N/– of the inverter is not more than 30VDC using a tester, etc.

# 6.1 Inspection item

## 6.1.1 Daily inspection

Basically, check for the following faults during operation.

- (1) Motor operation fault
- (2) Improper installation environment
- (3) Cooling system fault
- (4) Unusual vibration and noise
- (5) Unusual overheat and discoloration

During operation, check the inverter input voltages using a tester.

# 6.1.2 Periodic inspection

Check the areas inaccessible during operation and requiring periodic inspection.

Consult us for periodic inspection.

- 1) Check for cooling system fault......Clean the air filter, etc.
- 2) Tightening check and retightening.......The screws and bolts may become loose due to vibration, temperature changes, etc.

Tighten them according to the specified tightening torque. (Refer to page 23, 24)

- 3) Check the conductors and insulating materials for corrosion and damage.
- 4) Measure insulation resistance.
- 5) Check and change the cooling fan and relay.

#### Daily and periodic inspection 6.1.3

no on	Inspection Item		Description		erval		r's	
Area of Inspection					Periodic	Corrective Action at Alarm Occurrence	Customer's Check	
	Surrounding environment		Check the ambient temperature, humidity, dirt, corrosive gas, oil mist, etc	0		Improve emvironment		
General	Overall unit		Check for unusual vibration and noise	0		Check alarm location and retighten		
	Power supply voltage		Check that the main circuit voltages and control voltages are normal *1	0		Inspect the power supply		
			(1) Check with megger (across main circuit terminals and earth (ground) terminal).		0	Contact the manufacturer		
	Ger	neral	(2) Check for loose screws and bolts.		0	Retighten		
			(3) Check for overheat traces on the parts.		0	Contact the manufacturer		
			(4) Check for stain		0	Clean		
			(1)Check conductors for distortion.		0	Contact the manufacturer		
	Cor	ductors, cables	(2)Check cable sheaths for breakage and		0	Contact the manufacturer		
			deterioration (crack, discoloration, etc.)		O	Contact the manufacturer		
Main	Trai	nsformer/reactor	Check for unusual odor and abnormal increase in whining sound.	0		Stop the device and contact the manufacturer.		
circuit	Terr	minal block	Check for damage.		0	Stop the device and contact the manufacturer.		
	Sm	oothing	(1)Check for liquid leakage.		0	Contact the manufacturer		
		ninum	(2) Check for safety valve projection and bulge.		0	Contact the manufacturer		
	electrolytic capacitor		(3) Visual check and judge by the life check of the main circuit capacitor (Refer to page 418)		0			
	Relay/contactor		Check that the operation is normal and no chatter is heard.		0	Contact the manufacturer		
	Doc	sistor	(1) Check for crack in resistor insulation.		0	Contact the manufacturer		
	Res	SISTOI	(2) Check for a break in the cable.		0	Contact the manufacturer		
	Operation check		(1) Check that the output voltages across phases with the inverter operated alone is balanced		0	Contact the manufacturer		
Control			(2) Check that no fault is found in protective and display circuits in a sequence protective operation test.		0	Contact the manufacturer		
circuit protective	×	Overall	(1)Check for unusual odor and discoloration.		0	Stop the device and contact the manufacturer.		
circuit	check		(2) Check for serious rust development		0	Contact the manufacturer		
	arts cl	rts	Aluminum electrolytic	(1) Check for liquid leakage in a capacitor and deformation trance		0	Contact the manufacturer	
	ш	capacitor	(2) Visual check and judge by the life check of the control circuit capacitor. (Refer to page 418.)		0			
	Cooling fan		(1) Check for unusual vibration and noise.	0		Replace the fan		
			(2) Check for loose screws and bolts		0	Retighten		
Cooling			(3) Check for stain		0	Clean		
system	Н	atsink	(1) Check for clogging		0	Clean		
2,000111	1100		(2) Check for stain		0	Clean		
	Air filter, etc.		(1)Check for clogging		0	Clean or replace		
	ΛII	mici, etc.	(2) Check for stain		0	Clean or replace		
	lod:	oation	(1)Check that display is normal.	0		Contact the manufacturer		
Dienlay	mal	cation	(2) Check for stain		0	Clean		
Display	Met	er	Check that reading is normal	0		Stop the device and contact the manufacturer.		
Load	Load Operation check		Check for vibration and abnormal increase in operation noise	0		Stop the device and contact the manufacturer.		

<sup>\*1</sup> It is recommended to install a device to monitor voltage for checking the power supply voltage to the inverter.
\*2 One to two years of periodic inspection cycle is recommended. However, it differs according to the installation environment. Consult us for periodic inspection.



## 6.1.4 Display of the life of the inverter parts

The self-diagnostic alarm is output when the life span of the control circuit capacitor, cooling fan, each parts of the inrush current limit circuit is near to give an indication of replacement time .

#### The life alarm output can be used as a guideline for life judgement.

Parts	Judgement Level	
Main circuit capacitor	85% of the initial capacity	
Control circuit capacitor	Estimated 10% life remaining	
Inrush current limit circuit	Estimated 10% life remaining (Power on: 100,000 times left)	
Cooling fan	Less than 40% of the predetermined speed	



Refer to page 379 to perform the life check of the inverter parts.

# 6.1.5 Checking the inverter and converter modules

#### <Preparation>

- (1) Disconnect the external power supply cables (R/L1, S/L2, T/L3) and motor cables (U, V, W).
- (2) Prepare a tester. (Use  $100\Omega$  range.)

## <Checking method>


Change the polarity of the tester alternately at the inverter terminals R/L1, S/L2, T/L3, U, V, W, P/+ and N/-, and check for continuity.

#### CAUTION

- 1. Before measurement, check that the smoothing capacitor is discharged.
- 2. At the time of discontinuity, due to the smothing capacitor, the tester may not indicate ∞. At the time of continuity, the measured value is several to several ten's-of ohms depending on the module type, circuit tester type, etc. If all measured values are almost the same, the modules are without fault.

#### <Module device numbers and terminals to be checked>

		Tester Polarity		Measured		Tester Polarity		Measured
		$\oplus$	$\bigcirc$	Value		<b>(+)</b>	$\Theta$	Value
	D1	R/L1	P/+	Discontinuity	D4	R/L1	N/-	Continuity
<u>.</u>	יט	P/+	R/L1	Continuity	D4	N/-	R/L1	Discontinuity
Converter module	D2	S/L2	P/+	Discontinuity	D5	S/L2	N/-	Continuity
onv	D2	P/+	S/L2	Continuity	03	N/-	S/L2	Discontinuity
0 -	D3	T/L3	P/+	Discontinuity	D6	T/L3	N/-	Continuity
	D3	P/+	T/L3	Continuity		N/-	T/L3	Discontinuity
	TR1	U	P/+	Discontinuity	TR4	U	N/-	Continuity
	IKI	P/+	U	Continuity		N/-	U	Discontinuity
Inverter module	TR3	V	P/+	Discontinuity	TR6	V	N/-	Continuity
nve	113	P/+	V	Continuity	IIKO	N/-	V	Discontinuity
	TR5	W	P/+	Discontinuity	TR2	W	N/-	Continuity
	113	P/+	W	Continuity	1132	N/-	W	Discontinuity

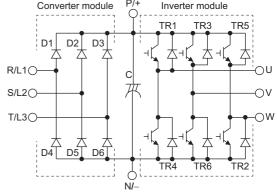

(Assumes the use of an analog meter.)

# 6.1.6 Cleaning

Always run the inverter in a clean status.

When cleaning the inverter, gently wipe dirty areas with a soft cloth immersed in neutral detergent or ethanol.

CAUTION

Do not use solvent, such as acetone, benzene, toluene and alcohol, as they will cause the inverter surface paint to peel off. The display, etc. of the operation panel (FR-DU07) and parameter unit (FR-PU04/FR-PU07) are vulnerable to detergent and alcohol. Therefore, avoid using them for cleaning.

# 6.1.7 Replacement of parts

The inverter consists of many electronic parts such as semiconductor devices.

The following parts may deteriorate with age because of their structures or physical characteristics, leading to reduced performance or fault of the inverter. For preventive maintenance, the parts must be replaced periodically. Use the life check function as a guidance of parts replacement.

Part Name	Standard Replacement Interval *1	Description		
Cooling fan	10 years	Replace (as required)		
Main circuit smoothing capacitor	10 years ∗₂	Replace (as required)		
On-board smoothing capacitor	10 years	Replace the board (as required)		
Relays	_	as required		
Fuse (FR-A740-03250 or more)	10 years	Replace the fuse (as required)		

<sup>\*1</sup> Replacement years for when the yearly average ambient temperature is 40°C (104°F) (without corrosive gas, flammable gas, oil mist, dust and dirt etc)

CAUTION =

For parts replacement, consult the nearest Mitsubishi FA Center.

<sup>\*2</sup> Output current: equivalent to rating current of the Mitsubishi standard motor (4 poles)



# (1) Cooling fan


The replacement interval of the cooling fan used for cooling the parts generating heat such as the main circuit semiconductor is greatly affected by the ambient temperature. When unusual noise and/or vibration is noticed during inspection, the cooling fan must be replaced immediately.

#### CAUTION =

For parts replacement, consult the nearest Mitsubishi FA Center.

Inverter Type		Fan Type	Units
	00080 to 00175	MMF-06F24ES-RP1 BKO-CA1638H01	1
A720	00240 to 00460	MMF-08D24ES-RP1 BKO-CA1639H01	2
	00610, 00760	MMF-12D24DS-RP1 BKO-CA1619H01	1
	00900	MMF-06F24ES-RP1 BKO-CA1638H01	1
	00900	MMF-12D24DS-RP1 BKO-CA1619H01	1
	01150	MMF-09D24TS-RP1 BKO-CA1640H01	2
	01450, 01750	MMF-12D24DS-RP1 BKO-CA1619H01	2
	02150 to 03460	MMF-12D24DS-RP1 BKO-CA1619H01	3
	00060, 00090	MMF-06F24ES-RP1 BKO-CA1638H01	1
	00120 to 00310	MMF-08D24ES-RP1 BKO-CA1639H01	2
	00380, 00430	MMF-12D24DS-RP1 BKO-CA1619H01	1
A740	00570	MMF-09D24TS-RP1 BKO-CA1640H01	2
	00710 to 01100	MMF-12D24DS-RP1 BKO-CA1619H01	2
	01440 to 02600	WWW -12D24DO-KI T BKO-OATOT91101	3
	03250, 03610		3
	04320 to 05470	9LB1424H5H03	4
	06100, 06830		5
	07700 to 09620	9LB1424S5H03	


The FR-A720-00030, 00050, FR-A740-00015 to 00040 are not provided with a cooling fan.

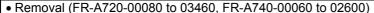

1) Push the hooks from above and remove the fan cover.



FR-A720-00080 to 00175 FR-A740-00060, 00090

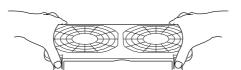


FR-A720-00240 to 00900 FR-A740-00120 to 00430



FR-A720-01150 or more FR-A740-00570 to 02600

- 2) Disconnect the fan connectors.
- 3) Remove the fan.

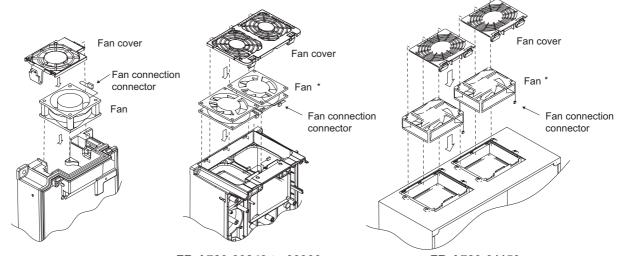

FR-A720-00080 to 00175 FR-A740-00060, 00090 FR-A720-00240 to 00900 FR-A740-00120 to 00430

FR-A720-01150 or more FR-A740-00570 to 02600

\* The number of cooling fans differs according to the inverter capacity. (Refer to the table above)



- Reinstallation (FR-A720-00080 to 03460, FR-A740-00060 to 02600)
  - 1) After confirming the orientation of the fan, reinstall the fan so that the arrow on the left of "AIR FLOW" faces up.




<Fan side face>

#### CAUTION =


Installing the fan in the opposite air flow direction can cause the inverter life to be shorter.

2) Reconnect the fan connectors.


When wiring, use care to avoid the cables being caught by the fan.

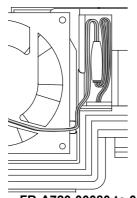


FR-A720-00080 to 00175 FR-A740-00060, 00090

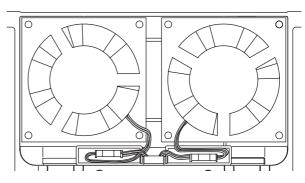


FR-A720-00240 to 00460 FR-A740-00120 to 00310

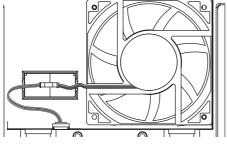

FR-A720-00610, 00760 FR-A740-00380, 00430

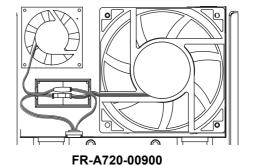

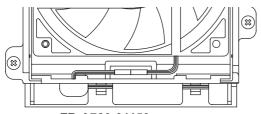

FR-A720-01150 or more FR-A740-00570 to 02600

- 3) Reinstall the fan cover.
- 2. Insert hooks until you hear a click sound.1. Insert hooks into holes.

FR-A720-00080 to 00175 FR-A740-00060, 00090

1. Insert hooks into holes.


2. Insert hooks until you hear a click sound.

FR-A720-00240 to 00900 FR-A740-00120 to 00430



FR-A720-01150 or more FR-A740-00570 to 02600




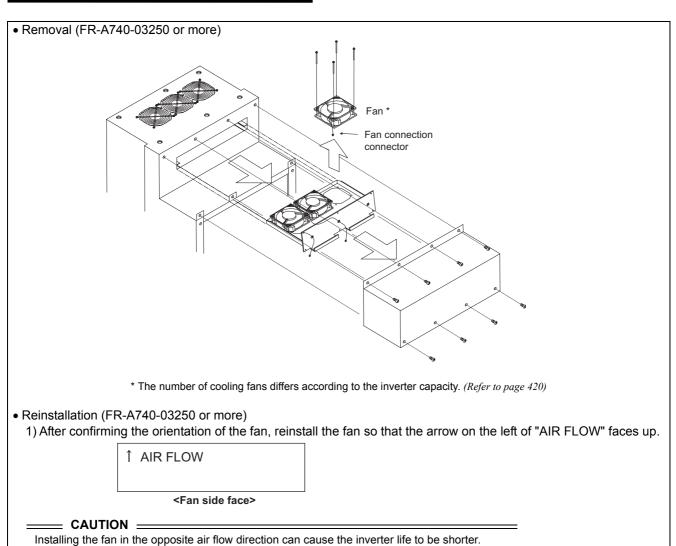

# (2) Replacement procedure of the cooling fan when using a heatsink protrusion attachment (FR-A7CN)

When replacing a cooling fan, remove a top cover of the heatsink protrusion attachment and perform replacement. After replacing the cooling fan, replace the top cover in the original position.

2) Install fans referring to the above figure.

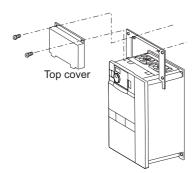



# (3) Smoothing capacitors

A large-capacity aluminum electrolytic capacitor is used for smoothing in the main circuit DC section, and an aluminum electrolytic capacitor is used for stabilizing the control power in the control circuit. Their characteristics are deteriorated by the adverse effects of ripple currents, etc.

The replacement intervals greatly vary with the ambient temperature and operating conditions. When the inverter is operated in air-conditioned, normal environment conditions, replace the capacitors about every 10 years.

The appearance criteria for inspection are as follows:

- 1) Case: Check the side and bottom faces for expansion
- 2) Sealing plate: Check for remarkable warp and extreme crack.
- 3) Check for external crack, discoloration, fluid leakage, etc. Judge that the capacitor has reached its life when the measured capacitance of the capacitor reduced below 80% of the rating.



Refer to page 379 to perform the life check of the main circuit capacitor.


# (4) Relays

To prevent a contact fault, etc., relays must be replaced according to the cumulative number of switching times (switching life).


# 6.1.8 Inverter replacement

The inverter can be replaced with the control circuit wiring kept connected. Before replacement, remove the wiring cover of the inverter.

1) Loosen the two installation screws in both ends of the control circuit terminal block. (These screws cannot be removed.) Pull down the terminal block from behind the control circuit terminals.

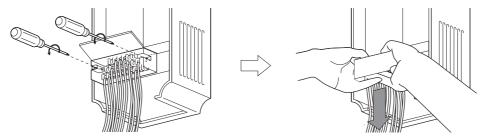

2) Using care not to bend the pins of the inverter's control circuit connector, reinstall the control circuit terminal block and fix it with the mounting screws.

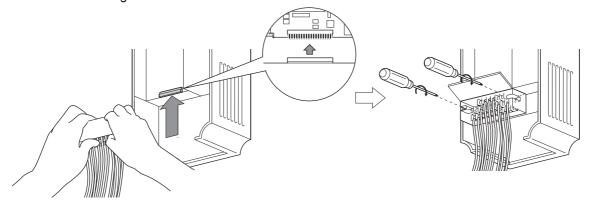

CAUTION

Before starting inverter replacement, switch power off, wait for at least 10 minutes, and then check the voltage with a tester and such to ensure safety.



# 6.2 Measurement of main circuit voltages, currents and powers


Since the voltages and currents on the inverter power supply and output sides include harmonics, measurement data depends on the instruments used and circuits measured.

When instruments for commercial frequency are used for measurement, measure the following circuits with the instruments given on the next page.

• When installing meters etc. on the inverter output side

When the inverter-to-motor wiring length is large, especially in the 400V class, small-capacity models, the meters and CTs may generate heat due to line-to-line leakage current. Therefore, choose the equipment which has enough allowance for the current rating.

When measuring and indicating the output voltage and output current of the inverter, it is recommended to utilize the AM-5 and FM-SD terminal output function of the inverter.

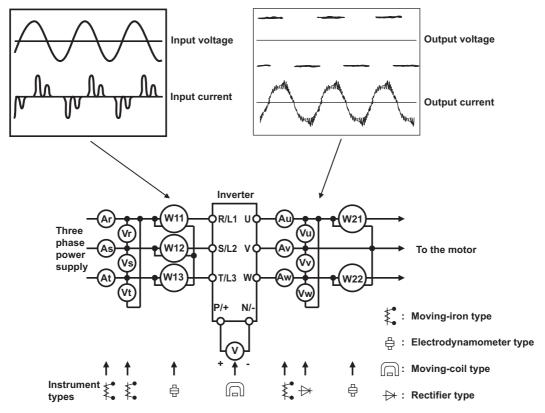

**Examples of Measuring Points and Instruments** 

# Measuring points and instruments

Item	Measuring Point	Measuring Instrument	Remarks (Reference Measured	Value)
Power supply voltage V1	Across R/L1-S/ L2, S/L2-T/L3, T/ L3-R/L1	Moving-iron type AC voltmeter	Commercial power supply Within permissible AC voltage fluctuatio (Refer to page 430)	on
Power supply side current	R/L1, S/L2, and T/L3 line currents	Moving-iron type AC ammeter		
Power supply side power P1	R/L1, S/L2, T/L3 and R/L1-S/L2, S/L2-T/ L3, T/L3-R/L1	Electrodynamic type single-phase wattmeter	P1=W11+W12+W13 (3-wattmeter meth	nod)
Power supply side power factor Pf1	Calculate after me $Pf_1 = \frac{P_1}{\sqrt{3} V_1 \times I_1}$		er supply side current and power supply s	side power.
Output side voltage V2	Across U-V, V-W and W-U	Rectifier type AC voltage meter *1 (Moving-iron type cannot measure)	Difference between the phases is within the maximum output voltage.	n ±1% of
Output side current I2	U, V and W line currents	Moving-iron type AC ammeter *2	Difference between the phases is 10% of the rated inverter current.	or lower of
Output side power P2	V-W	Electrodynamic type single-phase wattmeter	P2 = W21 + W22 2-wattmeter method (or 3-wattmeter me	ethod)
Output side power factor Pf2	Calculate in simila $Pf_2 = \frac{P_2}{\sqrt{3} V_2 \times I_2}$	r manner to power supply side power × 100%	er factor.	
Converter output	Across P/+-N/-	Moving-coil type (such as tester)	Inverter LED display is lit. 1.35 × V1	
Frequency setting	Across 2, 4(+)-5		0 to 10VDC, 4 to 20mA	
signal	Across 1(+)-5		0 to ±5VDC, 0 to ±10VDC	
Frequency setting	Across 10 (+) -5		5.2VDC	"5" is
power supply	Across 10E(+)-5		10VDC	common
	Across AM(+)-5		Approximately 10VDC at maximum frequency (without frequency meter)	
Frequency meter signal	Across FM(+)-SD  Across STF, STR,	Moving-coil type (Tester and such may be used) (Internal resistance: 50kΩ or larger)	Approximately 5VDC at maximum frequency (without frequency meter)  T1  BVDC  T2  Pulse width T1:  Adjusted by C0 (Pr. 900)  Pulse cycle T2: Set by Pr. 55  (Valid for frequency monitoring only)	"SD" is common
Start signal Select signal	RH, RM, RL, JOG, RT, AU, STOP, CS (+) -SD		When open 20 to 30VDC	
Reset	Across RES (+) -SD		ON voltage: 1V or less	
Output stop	Across MRS (+) -SD			
Alarm signal	Across A1-C1 Across B1-C1	Moving-coil type (such as tester)	Across A1-C1 Discontinuity Co	onormal> ontinuity continuity

Use an FFT to measure the output voltage accurately. A tester or general measuring instrument cannot measure accurately. When the carrier frequency exceeds 5kHz, do not use this instrument since using it may increase eddy-current losses produced in metal parts inside the instrument, leading to burnout. If the wiring length between the inverter and motor is long, the instrument and CT may generate heat due to line-to-line leakage current. When the setting of *Pr. 195 ABC1 terminal function selection* is positive logic



# 6.2.1 Measurement of powers

Using an electro-dynamometer type meter, measure the power in both the input and output sides of the inverter using the two- or three-wattmeter method. As the current is liable to be imbalanced especially in the input side, it is recommended to use the three-wattmeter method.


Examples of measured value differences produced by different measuring meters are shown below.

An error will be produced by difference between measuring instruments, e.g. power calculation type and two- or three-wattmeter type three-phase wattmeter. When a CT is used in the current measuring side or when the meter contains a PT on the voltage measurement side, an error will also be produced due to the frequency characteristics of the CT and PT.

#### [Measurement conditions]

Constant-torque (100%) load, constant-power at 60Hz or more.

3.7kW(5HP), 4-pole motor, value indicated in 3-wattmeter method is 100%.

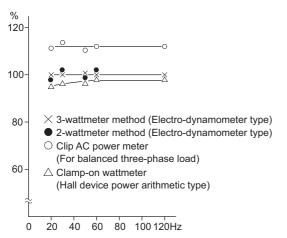


Example of measuring inverter input power

#### [Measurement conditions]

Constant-torque (100%) load, constant-power at 60Hz or more.

3.7kW(5HP), 4-pole motor, value indicated in 3-wattmeter method is 100%.

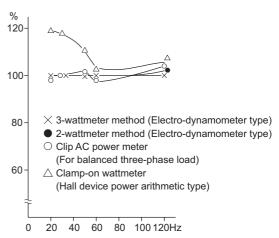

Example of measuring inverter output power

# 6.2.2 Measurement of voltages and use of PT

#### (1) Inverter input side

As the input side voltage has a sine wave and it is extremely small in distortion, accurate measurement can be made with an ordinary AC meter.

## (2) Inverter output side

Since the output side voltage has a PWM-controlled rectangular wave, always use a rectifier type voltmeter. A needle type tester can not be used to measure the output side voltage as it indicates a value much greater than the actual value. A moving-iron type meter indicates an effective value which includes harmonics and therefore the value is larger than that of the fundamental wave. The value monitored on the operation panel is the inverter-controlled voltage itself. Hence, that value is accurate and it is recommended to monitor values (provide analog output) using the operation panel.

# (3) PT

No PT can be used in the output side of the inverter. Use a direct-reading meter. (A PT can be used in the input side of the inverter.)

#### 6.2.3 Measurement of currents

Use a moving-iron type meter on both the input and output sides of the inverter. However, if the carrier frequency exceeds 5kHz, do not use that meter since an overcurrent losses produced in the internal metal parts of the meter will increase and the meter may burn out. In this case, use an approximate-effective value type.

As the inverter input side current is easily imbalanced, measurement of currents in all three phases is recommended. Correct values can not be measured in one or two phases. On the other hand, the phase imbalanced ratio of the output side current must be within 10%.

When using a clamp ammeter, always use an effective value detection type. A mean value detection type produces a large error and may indicate an extremely smaller value than the actual value. The value monitored on the operation panel is accurate if the output frequency varies, and it is recommended to monitor values (provide analog output) using the operation panel.


An example of the measured value difference produced by different measuring meters is shown below.


#### [Measurement conditions]


# [Measurement conditions]

Value indicated by moving-iron type ammeter is 100%.

Value indicated by moving-iron type ammeter is 100%.

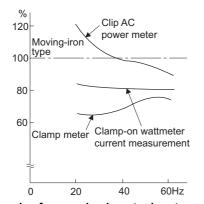

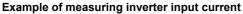

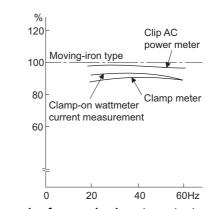

Example of measuring inverter output current

#### 6.2.4 Use of CT and transducer

A CT may be used in both the input and output sides of the inverter, but the one used should have the largest possible VA ability because an error will increase if the frequency gets lower.

When using a transducer, use the effective value calculation type which is immune to harmonics.

#### 6.2.5 Measurement of inverter input power factor

Use the effective power and apparent power to calculate the inverter input power factor. A power-factor meter can not indicate an exact value.



# 6.2.6 Measurement of converter output voltage (across terminals P/+ - N/-)

The output voltage of the converter is developed across terminals P/+ - N/- and can be measured with a moving-coil type meter (tester). Although the voltage varies according to the power supply voltage, approximately 270V to 300V (approximately 540V to 600V for the 400V class) is output when no load is connected and voltage decreases when a load is connected.

When regenerative energy is returned from the motor during deceleration, for example, the converter output voltage rises to nearly 400V to 450V (800V to 900V for the 400V class) maximum.

# 6.2.7 Measurement of inverter output frequency

A pulse train proportional to the output frequency is output across the frequency meter signal output terminal FM-SD of the inverter. This pulse train output can be counted by a frequency counter, or a meter (moving-coil type voltmeter) can be used to read the mean value of the pulse train output voltage. When a meter is used to measure the output frequency, approximately 5VDC is indicated at the maximum frequency.


For detailed specifications of the frequency meter signal output terminal FM, refer to page 257.

# 6.2.8 Insulation resistance test using megger

For the inverter, conduct the insulation resistance test on the main circuit only as shown below and do not perform the test on the control circuit. (Use a 500VDC megger.)

#### CAUTION =

- Before performing the insulation resistance test on the external circuit, disconnect the cables from all terminals of the inverter so that the test voltage is not applied to the inverter.
- · For the continuity test of the control circuit, use a tester (high resistance range) and do not use the megger or buzzer.

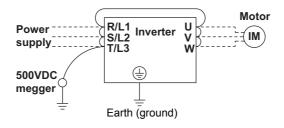

#### 6.2.9 Pressure test

Do not conduct a pressure test. Deterioration may occur.

# 7 / SPECIFICATIONS

This chapter provides the "SPECIFICATIONS" of this product. Always read the instructions before using the equipment

7.1	Rating	430
	Common specifications	
6.3	Outline dimension drawings	162
7.4	Heatsink protrusion attachment procedure	442



# 7.1 Rating

# 7.1.1 Inverter rating

#### ●200V class

	Type FR-A720	)-000-NA	00030	00050	00080	00110	00175	00240	00330	00460	00610	00760	00900	01150	01450	01750	02150	02880	03460
	plicable motor (N) *1	capacity for ND	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90
	Rated capacity	/ (kVA) *2	1.1	1.9	3.1	4.2	6.7	9.2	12.6	17.6	23.3	29	34	44	55	67	82	110	132
		SLD	4.6	7.7	10.5	16.7	24	34	49	63	77	93	125 *10	154	187	233	316	380 (323)	475 (403)
	Rated		4.2	7.0	9.6	15.2	23	31	45	58	70	85	114 *10	140	170	212	288	346 (294)	432 (367)
	current (A) *3	ND	3	5	8	11	17.5	24	33	46	61	76	90	115	145	175	215	288 (244)	346 (294)
Output		HD	1.5	3	5	8	11	17.5	24	33	46	61	76	90	115	145	175	215 (182)	288 (244)
	Overload	SLD		110% 60s, 120% 3s (inverse time characteristics) ambient temperature 40°C 120% 60s, 150% 3s (inverse time characteristics) ambient temperature 50°C															
	current rating	LD			120	% 60s,	150%	3s (inv	erse ti	me ch	aracte	ristics	) ambi	ent te	mpera	ture 5	0°C		
	*4	ND			150	% 60s,	200%	3s (inv	erse ti	me ch	aracte	ristics	) ambi	ent te	mpera	ture 5	0°C		
	-4	HD		200% 60s, 250% 3s (inverse time characteristics) ambient temperature 50°C															
	Voltage *5			Three-phase 200 to 240V															
	Regenerative	Maximum value/	150% torque/ 100% torque/				torque/	100%	torque/		20% t	orque/	'		20% torque/				orque/
	braking torque	permissible duty	;	3%ED 3%ED 2%ED continuous *6 continuous									contir	nuous					
supply	Rated input AC voltage/free	quency					Thre	e-phas	e 200	to 220	V 50⊦	łz, 200	) to 24	0V 60	Hz				
r St	Permissible AC	voltage fluctuation						170	to 242	V 50H	z,170	to 264	V 60F	Ιz					
Power	Permissible freq	juency fluctuation								=	5%								
P0	Power supply of	capacity (kVA) *7	1.5	2.5	4.5	5.5	9	12	17	20	28	34	41	52	66	80	100	110	132
										Е	nclos	ed typ	е						
Pr	otective structu	r <b>e</b> *9			Open	type (I	NEMA1	)		(UL ty	pe1 Ple	enum R 8	ated)		Op	en typ	oe (IPC	00)	
Co	oling system		Self-c	ooling						F	orced	air co	oling						
Αŗ	prox. mass (kg	)	1.9	2.3	3.8	3.8	3.8	7.1	7.1	7.5	13	13	14	23	35	35	58	70	70

- \*1. The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
- \*2. The rated output capacity indicated assumes that the output voltage is 220V.
- \*3. When operating the inverter of 02880 or more with a value larger than 2kHz set in Pr. 72 PWM frequency selection, the rated output current is the value in parenthesis.
- \*4. The % value of the overload current rating indicates the ratio of the overload current to the inverter's rated output current. For repeated duty, allow time for the inverter and motor to return to or below the temperatures under 100% load.
- \*5. The maximum output voltage does not exceed the power supply voltage. The maximum output voltage can be changed within the setting range. However, the pulse voltage value of the inverter output side voltage remains unchanged at about √2 that of the power supply.
- \*6. For the 00460 to 00900 capacities, using the dedicated external brake resistor (FR-ABR) will achieve the performance of 100% torque/6%ED.
- \*7. The power supply capacity varies with the value of the power supply side inverter impedance (including those of the input reactor and cables).
- \*8. When the hook of the inverter front cover is cut off for installation of the plug-in option, the inverter changes to an open type (IP00).
- \*9. FR-DU07:IP40 (except for the PU connector)
- \*10. Protective structure of SLD and LD rating of FR-A720-00900-NA is IP00 due to vending space. The conduit plate needs to remove at SLD and LD.

#### ●400V class

	Type FR-A74	0-□□□□-NA	00015	00025	00040	00060	00090	00120	00170	00230	00310	00380	00430	00570	00710	00860	01100
Α	pplicable motor	capacity for ND	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55
(1	(W) *1																
	Rated capacit		1.1	1.9	3	4.6	6.9	9.1	13	17.5	23.6	29	32.8	43.4	54	65	84
		SLD	2.3	3.8	5.2	8.3	12.6	17	25	31	38	47	62	77	93	116	180
	Rated	LD	2.1	3.5	4.8	7.6	11.5	16	23	29	35	43	57	70	85	106	144
	current (A)	ND	1.5	2.5	4	6	9	12	17	23	31	38	44	57	71	86	110 *10
<b>+</b>		HD	0.8	1.5	2.5	4	6	9	12	17	23	31	38	44	57	71	86 *10
Output	Overload	SLD						`				) ambie		<u> </u>			
	current rating	ND ND						•				ambie		•			
	*4							•				) ambie		•			
	Voltage *5	HD			200% t	0US, Z5	0% 38			ase 38		ambie	ent tem	peratui	e 50 C	•	
	Regenerative	Maximum value/						11	пее-рп	ase 30	0 10 46	UV					
	braking torque	permissible duty			100%	torque/	/2%ED			20%	torque/	continu	ous *6	20%	torque	/contin	uous
vladis	Rated input AC voltage/fre	equency					Т	hree-p	hase 3	80 to 4	80V 50	Hz/60H	lz				
Ū.	Permissible AC	voltage fluctuation						3	23 to 5	28V 50	Hz/60H	lz					
Power	Permissible free	quency fluctuation								±5%							
q	Power supply	capacity (kVA) *7	1.5	2.5	4.5	5.5	9	12	17	20	28	34	41	52	66	80	100
Р	rotective structu	re *9			Oper	type (	IP00)		•			ed type Rated)		С	pen typ	e (IP0	0)
C	ooling system		Se	elf-cooli	na							ir coolii					
	pprox. mass (kg	1)	3.5	3.5	3.5	3.5	3.5	6.5	6.5	7.5	7.5	13	13	23	35	35	37
	Type FR-A74		01440	01880	02160	02600	03250	03610	04320	04810	05470	06100	06830	07700	08660	09620	
Α	oplicable motor																1
	W) *1	,	75	90	110	132	160	185	220	250	280	315	355	400	450	500	
	Rated capacity	/ (kVA) *2	110	137	165	198	248	275	329	367	417	465	521	587	660	733	
		SLD	216 (183)	260 (221)	325 (276)	361 (306)	432 (367)	481 (408)	547 (464)	610 (518)	683 (580)	770 (654)	866 (736)	962 (817)	1094 (929)	1212 (1030)	
	Rated current	LD	180 (153)	216 (183)	260 (221)	325 (276)	361 (306)	432 (367)	481 (408)	547 (464)	610 (518)	683 (580)	770 (654)	866 (736)	962 (817)	1094 (929)	
	(A)*3	ND	144 (122)	180 (153)	216 (183)	260 (221)	325 (276)	361 (306)	432 (367)	481 (408)	547 (464)	610 (518)	683 (580)	770 (654)	866 (736)	962 (817)	
Output		HD	110	144	180	216	260	325	361	432	481	547	610	683	770	820	i
Ī		SLD	(93)	(122)	(153)	(183)	(221)	(276)	(306)	(367)	(408)	(464) nbient 1	(518)	(580)	(654)	(697)	
	Overload	LD					•					nbient					
	current rating	ND										nbient					ł
	*4	HD										mbient	•				1
	Voltage*5	ווו		200	70 003,	, 230 /0	03 (1117			380 to		HOICH	cripci	ature 5	0 0		ŀ
	Regenerative	Maximum value/															
	braking torque	permissible duty						10%	torque	contin	uous						
2	1	, ,					Thre	e-nhas	e 380 t	o 480V	50Hz/	60Hz					
yladins	AC voltage/fre						11110					00112					
	1 01111001010 7 10	voltage fluctuation						323		√ 50Hz	/60H						
Power		quency fluctuation		•	1		•	•		5%		•		•	1		
		capacity (kVA) *7	110	137	165	198	248	275	329	367	417	465	521	587	660	733	
	rotective structu	re *9								pe (IP0	•						
	ooling system	`			70	70	140			ir cooli		000	000	070	070	070	l
А	pprox. mass (kg	)	50	57	72	72	110	110	175	175	175	260	260	370	370	370	]

- \*1. The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
- \*2. The rated output capacity indicated assumes that the output voltage is 440V.
- \*3. When operating the inverter of 01440 or more with a value larger than 2kHz set in Pr. 72 PWM frequency selection, the rated output current is the value in parenthesis.
- The % value of the overload current rating indicates the ratio of the overload current to the inverter's rated output current. For repeated duty, allow time for the inverter and motor to return to or below the temperatures under 100% load.
- \*5. The maximum output voltage does not exceed the power supply voltage. The maximum output voltage can be changed within the setting range. However, the pulse voltage value of the inverter output side voltage remains unchanged at about  $\sqrt{2}$  that of the power supply.
- For the 00230 to 00430 capacities, using the dedicated external brake resistor (FR-ABR) will achieve the performance of 100% torque/6%ED.
- The power supply capacity varies with the value of the power supply side inverter impedance (including those of the input reactor and cables).
- \*8. When the hook of the inverter front cover is cut off for installation of the plug-in option, the inverter changes to an open type (IP00).
- \*9. FR-DU07:IP40 (except for the PU connector)
- \*10. DC reactor does not have to be used.



# 7.2 Common specifications


	0-	-414	la a al	Soft-PWM control/high carrier frequency PWM control (selectable from among V/F control, advanced magnetic flux vector control and										
		ntrol met		real sensorless vector control) / vector control (when used with option FR-A7AP)*1										
	Ou	tput frequ	iency range	0.2 to 400Hz										
SU	Fre set res	equency ting solution	Analog input	0.015Hz/0 to 60Hz (terminal 2, 4: 0 to 10V/12bit) 0.03Hz/0 to 60Hz (terminal 2, 4: 0 to 5V/11bit, 0 to 20mA/about 11bit, terminal 1: 0 to ±10V/12bit) 0.06Hz/0 to 60Hz (terminal 1: 0 to ±5V/11bit)										
Control specifications			Digital input	0.01Hz										
oific		equency curacy	Analog input	Within ±0.2% of the max. output frequency (25°C±10°C)										
bed			Digital input lency characteristics	Within 0.01% of the set output frequency  Base frequency can be set from 0 to 400Hz Constant torque/variable torque pattern or adjustable 5 points V/F can be selected										
0 8		irting torg		200% 0.3Hz (0.4K to 3.7K), 150% 0.3Hz (5.5K or more) (under real sensorless vector control or vector control)										
뒱		que boos		Manual torque boost										
ŏ		•	n/deceleration time	0 to 3600s (acceleration and deceleration can be set individually), linear or S-pattern acceleration/deceleration mode, backlash										
		ting	"acceleration time	measures acceleration/deceleration can be selected.										
	DC	injection	brake	Operation frequency (0 to 120Hz), operation time (0 to 10s), operation voltage (0 to 30%) variable										
	Sta	II preventi	on operation level	Operation current level can be set (0 to 220% adjustable), whether to use the function or not can be selected										
		que limit l		Torque limit value can be set (0 to 400% variable)										
		equency	Analog input	• Terminal 2, 4: 0 to 10V, 0 to 5V, 4 to 20mA can be selected  • Terminal 1: -10 to +10V, -5 to +5V can be selected										
	sig	ting nal	Digital input	Input using the setting dial of the operation panel or parameter unit Four-digit BCD or 16 bit binary (when used with option FR-A7AX)										
		ırt signal		Forward and reverse rotation or start signal automatic self-holding input (3-wire input) can be selected.										
	Input signals  Pulse train input			on can select any twelve signals using <i>Pr. 178 to Pr. 189 (input terminal finitic) selection)</i> from among multi speed selection, remote setting, op-on-contact, second function selection, third function selection, terminal 4 input selection, JOG operation selection, selection of utomatic restart after instantaneous power failure, flying start, external thermal relay input, inverter operation enable signal (FR-HC/FR-CV onnection), FR-HC connection (instantaneous power failure detection), PU operation/external inter lock signal, external DC injection brake peration start, PID control enable terminal, brake opening completion signal, PU operation/external operation switchover, load pattern election forward rotation reverse rotation boost, V/F switching, load torque high-speed frequency, S-pattern acceleration/deceleration C witchover, pre-excitation, output stop, start self-holding selection, control mode changing, torque limit selection, start-time tuning start xternal input, torque bias selection 1, 2 *1, P/PI control switchover, forward rotation command, reverse rotation command, inverter reset, TC thermistor input, PID forward reverse operation switchover, PU-NET operation switchover, NET-external operation switchover, and opmmand source switchover, conditional position pulse train sign *1, conditional position droop pulse clear *1.										
		Pulse tra	ain input	00kpps laximum/minimum frequency setting, frequency jump operation, external thermal relay input selection, polarity reversible opera										
Operation specifications	Operational functions			Intomatic restart after instantaneous power failure operation, commercial power supply-inverter switchover operation, forward/reverse tation prevention, remote setting, brake sequence, second function, third function, multi-speed operation, original operation intimuation at instantaneous power failure, stop-on-contact control, load torque high speed frequency control, droop control, generation avoidance, slip compensation, operation mode selection, offline auto tuning function, online auto tuning function, PID introl, computer link operation (RS-485), motor end orientation*1, machine end orientation*1, pre-excitation, notch filter, machine lalyzer*1, easy gain tuning, speed feed forward, and torque bias*1										
Opera	Output signals	Operatir	ng status	instantaneous power failure/undervoltage, overload warning, output frequency (speed) detection, second output frequency (speed) detection, third output frequency (speed) detection, regenerative brake prealarm, electronic thermal relay function pre-alarm, PU operation mode, inverter operation ready, output current detection, zero current detection, PID lower limit, PID upper limit, PID onward rotation reverse rotation output, commercial power supply-inverter switchover MC2, commercial power supply-inverter switchover MC3, orientation completion <sup>1</sup> 1, brake opening request, fan fault output, heatsink overheat pre-alarm, inverter running/start command on, deceleration at an instantaneous power failure, PID control activated, during retry, PID output interruption, life alarm, alarm output 1, 2, 3 (power-off signal), power savings average value update timing, current average monitor, maintenance timer alarm, remote output, forward rotation output <sup>1</sup> 1, reverse rotation output <sup>1</sup> 1, low speed output, torque detection, regenerative status output <sup>1</sup> 1, start-time tuning completion, in-position completion <sup>1</sup> 1, minor failure output and alarm output. Open collector output (5 points), relay output (2 points) and alarm code of the inverter can be output (4 bit) from the open collector.										
	Output	FR	nen used with the -A7AY, FR-A7AR otion)	In addition to the above, you can select any signals using <i>Pr. 313 to Pr. 319 (extension output terminal function selection)</i> from among control circuit capacitor life, main circuit capacitor life, cooling fan life, inrush current limit circuit life. (only positive logic can be set for extension terminals of the FR-A7AR)										
			ain output	50kpps										
		Pulse/ar	nalog output	You can select any signals using <i>Pr. 54 FM terminal function selection (pulse train output)</i> and <i>Pr. 158 AM terminal function selection (analog output)</i> from among output frequency, motor current (steady or peak value), output voltage, frequency setting, operation speed, motor torque, converter output voltage (steady or peak value), electronic thermal relay function load factor, input power, output power, load meter, motor excitation current, reference voltage output, motor load factor, power saving effect, regenerative brake duty ,PID set point, PID measured value, motor output, torque command, torque current command, and torque monitor.										
ndication	ÈR	R-DU07/ -PU07/ -PU04)	Operating status	Output frequency, motor current (steady or peak value), output voltage, frequency setting, running speed,motor torque, overload, converter output voltage (steady or peak value), electronic thermal relay function load factor, input power, output power, load meter, motor excitation current, cumlative energization time, actual operation time, motor load factor, cumulative power, energy saving effect, cumulative saving power, regenerative brake duty, PID set point, PID measured value, PID deviation, inverter I/O terminal monitor, input terminal option monitor*2., output terminal option monitor*2., option fitting status*3., terminal assignment status*3., torque command, torque current command, feed back pulse*1,motor output										
=	``		Alarm definition	Alarm definition is displayed during the protective function is activated, the output voltage/current/frequency/cumulative energization time right before the protection function was activated and past 8 alarm definitions are stored.										
			Interactive guidance	Operation guide/trouble shooting with a help function*3.										
Pr			ing function	Overcurrent during acceleration, overcurrent during constant speed, overcurrent during deceleration, overvoltage during acceleration, overvoltage during deceleration, inverter protection thermal operation, motor protection thermal operation, heatsink overheat, instantaneous power failure occurrence, undervoltage, input phase failure, motor overload, output side earth (ground) fault overcurrent, output short circuit, main circuit element overheat, output phase failure, external thermal relay operation, PTC thermistor operation, option alarm, parameter error, PU disconnection, retry count excess, CPU alarm, operation panel power supply short circuit, 24VDC power output short circuit, output current detection value excess, inrush current limit circuit alarm, communication alarm (inverter), USB error, opposite rotation deceleration error, analog input error, fan fault, overcurrent stall prevention, overvoltage stall prevention, regenerative brake prealarm, electronic thermal relay function prealarm, PU stop, maintenance timer alarm*2, brake transistor alarm, parameter write error, copy operation error, operation panel lock, parameter copy alarm, speed limit indication, encoder no-signal*1, speed deviation large*1, overspeed*1, position error large*1, encoder phase error*1										
int			nperature	-10°C to +50°C (non-freezing)										
Environment		bient hur		90%RH maximum (non-condensing)										
/iror		nosphere	perature*4.	-20°C to +65°C Indoors (without corrosive gas, flammable gas, oil mist, dust and dirt etc.)										
En	_	itude/vibr		Maximum 1000m above sea level, 5.9m/s <sup>2</sup> or less *5. (conforms to JIS C 60068-2-6)										
				Maximum 1000m above sea level, 5.9m/s <sup>-</sup> or less *5. (conforms to JIS C 60068-2-6)  (FR-A7AP) is mounted										

- \*1. Available only when the option (FR-A7AP) is mounted
  \*2. Can be displayed only on the operation panel (FR-DU07).
  \*3. Can be displayed only on the parameter unit (FR-PU07/FR-PU04).
  \*4. Temperature applicable for a short period in transit, etc.
  \*5. 2.9m/s² or less for the FR-A740-03250 or more.


# **Outline dimension drawings**

#### Inverter outline dimension drawings 7.3.1


• FR-A720-00030, 00050-NA

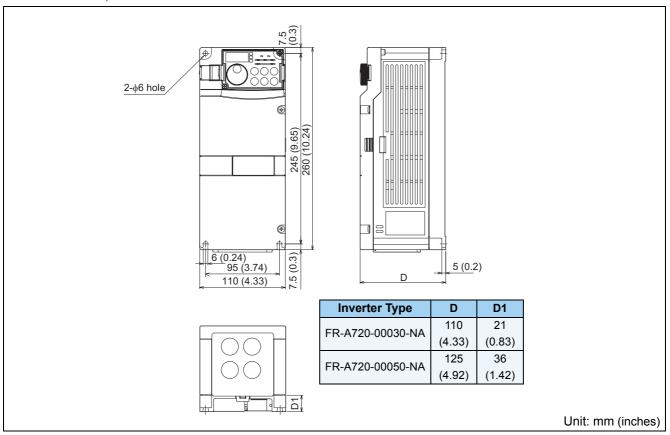


- •FR-A720-00080, 00110, 00175-NA
- •FR-A740-00015, 00025, 00040, 00060, 00090-NA

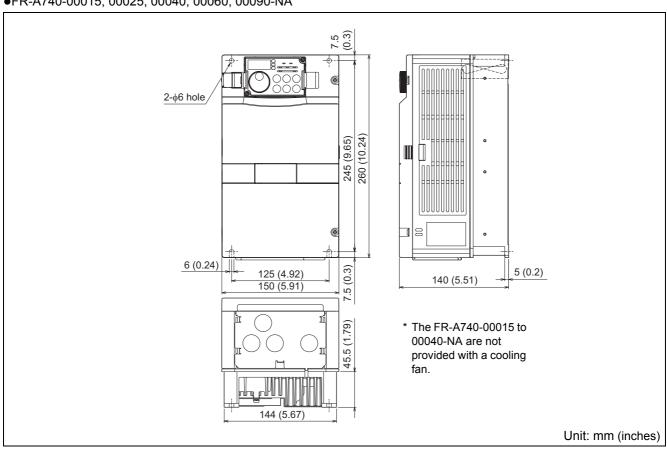


- •FR-A720-00240, 00330, 00460-NA
- •FR-A740-00120, 00170, 00230, 00310-NA

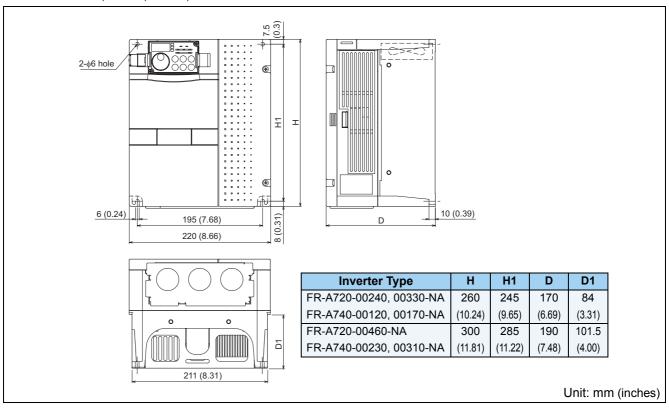

- •FR-A720-00610, 00760, 00900-NA
- •FR-A740-00380, 00430-NA

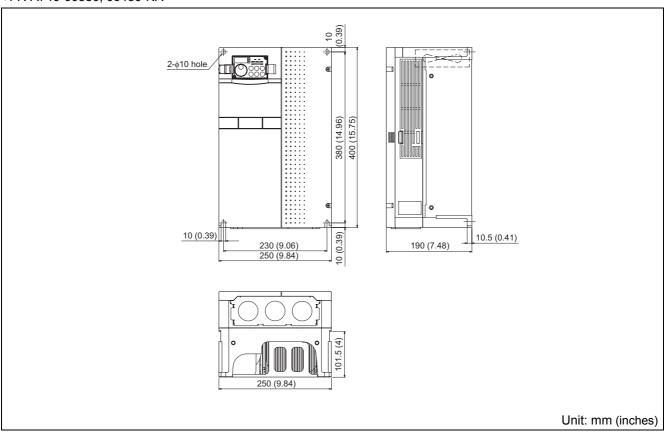


- ●FR-A720-01150, 01450, 01750, 02150-NA
- •FR-A740-00570, 00710, 00860, 01100-NA

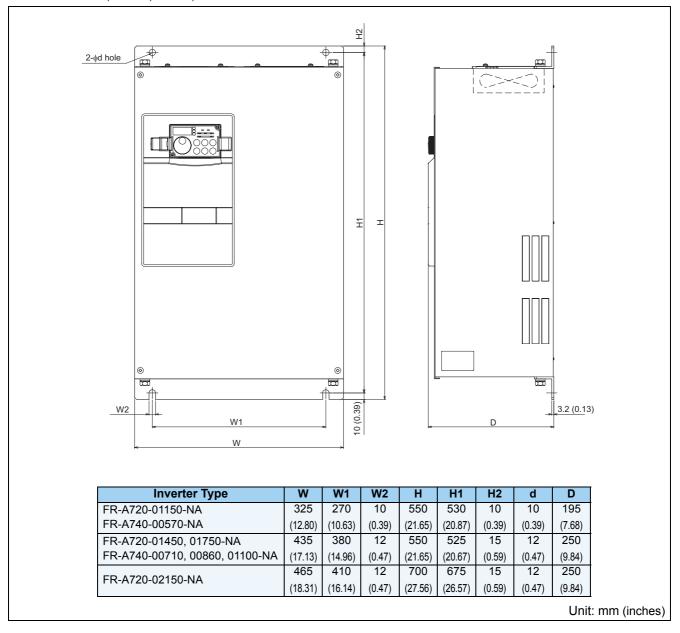





## •FR-A740-01440, 01880-NA

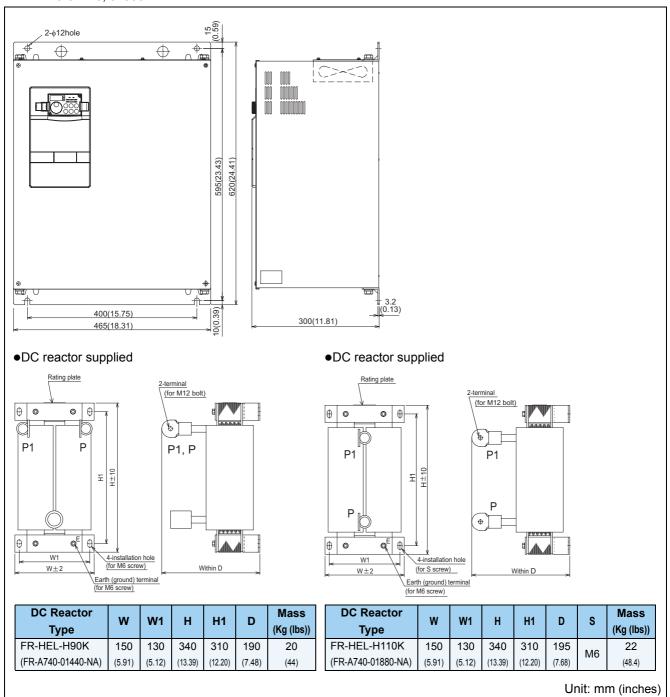

•FR-A740-02160, 02600-NA

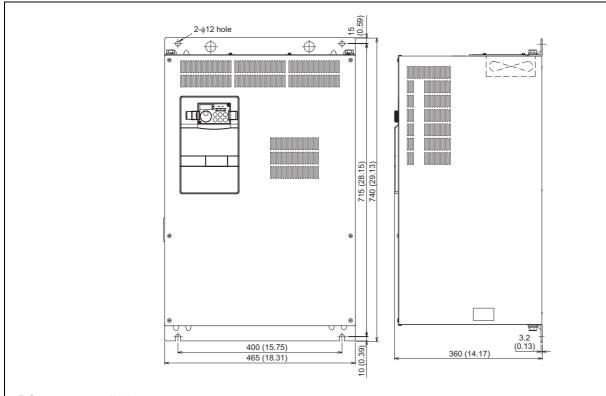

DC reactor supplied

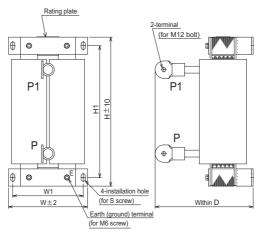


DC Reactor Type	w	W1	Н	H1	D	S	Mass (Kg (lbs))
FR-HEL-90K (FR-A720-02880-NA)	150 (5.91)	130 (5.19)	340 (13.39)	310 (12.2)	200 (7.87)	М6	19 (41.8)
FR-HEL-110K (FR-A720-03460-NA)	175 (6.89)	150 (5.91)	400 (15.75)	365 (14.37)	200 (7.87)	М8	20 (44)
FR-HEL-H132K (FR-A740-02160-NA)	175 (6.89)	150 (5.91)	405 (15.94)	370 (14.57)	200 (7.87)	M8	26 (57.2)
FR-HEL-H160K (FR-A740-02600-NA)	175 (6.89)	150 (5.91)	405 (15.94)	370 (14.57)	205 (8.07)	M8	28 (61.6)


Unit: mm (inches)




#### •FR-A740-03250, 03610-NA

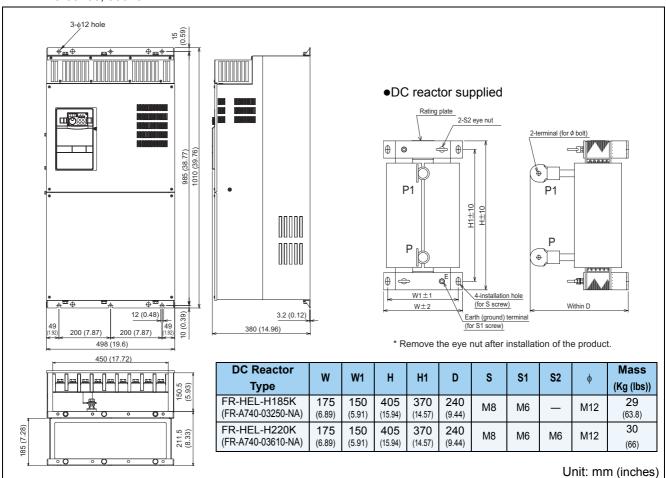


#### •FR-A740-04320, 04810, 05470-NA

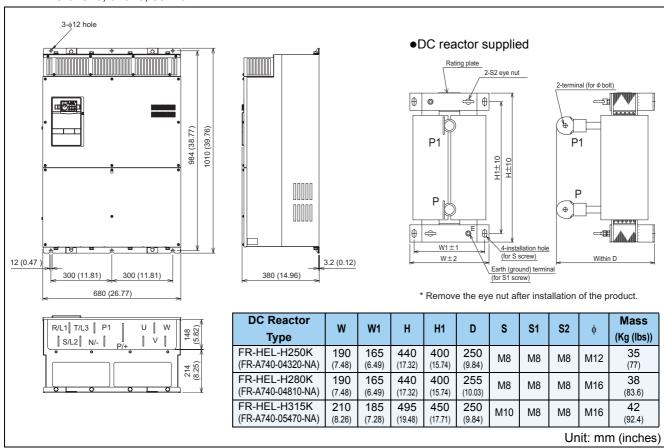

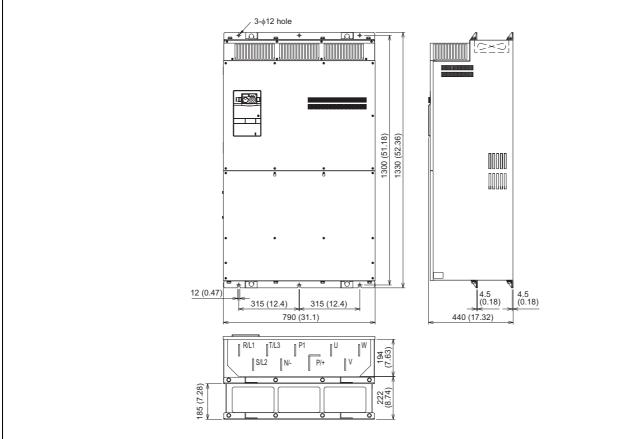


# ◆DC reactor supplied

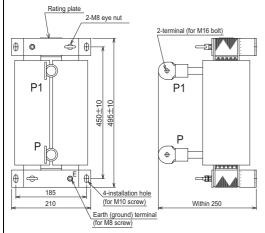

\* Remove the eye nut after installation of the product.

DC Reactor Type	Mass
De Reactor Type	(Kg (lbs))
FR-HEL-H355K (FR-A740-06100-NA)	46 (101.2)

#### •DC reactor supplied

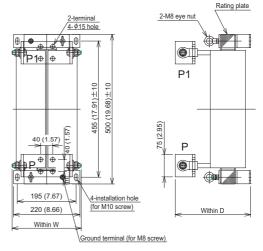


\* Remove the eye nut after installation of the product.

DC Reactor Type	w	D	Mass (Kg (lbs))
FR-HEL-H400K	235	250	50
(FR-A740-06830-NA)	(9.25)	(9.84)	(110)


Unit: mm (inches)



## •FR-A740-07700, 08660, 09620-NA

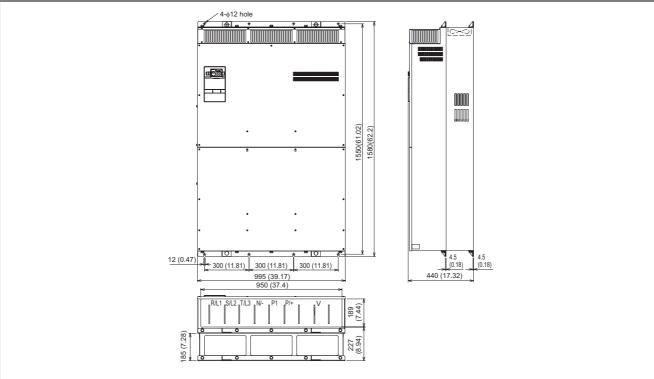

# •DC reactor supplied

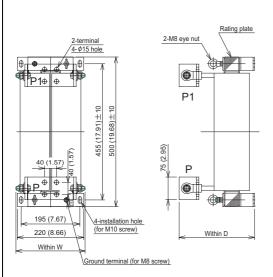


\* Remove the eye nut after installation of the product.

DC Reactor Type	w	D	Mass (Kg (lbs))
FR-HEL-H450K	240	270	57
(FR-A740-07700-NA)	(9.45)	(10.63)	(125.4)

# DC reactor supplied

FR-HEL-H560K

(FR-A740-09620-NA)

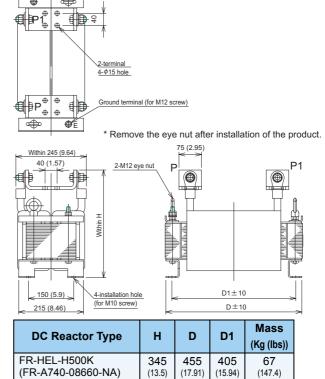

360

(14.17)


460

(18.11)


410 85 (16.14) (187)

Unit: mm (inches)


# • Operation panel (FR-DU07)

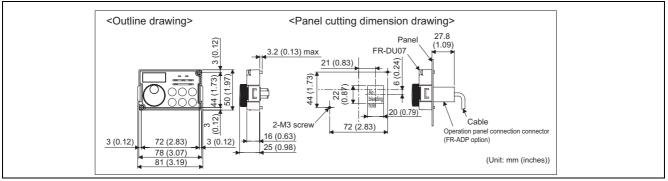

#### Parameter unit (option) (FR-PU07)

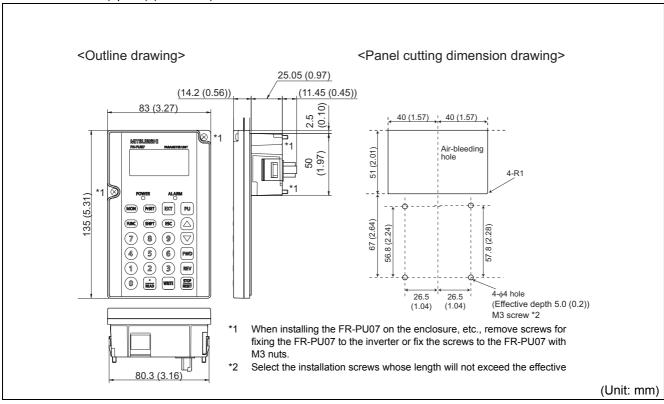

## • Parameter unit (option) (FR-PU04)

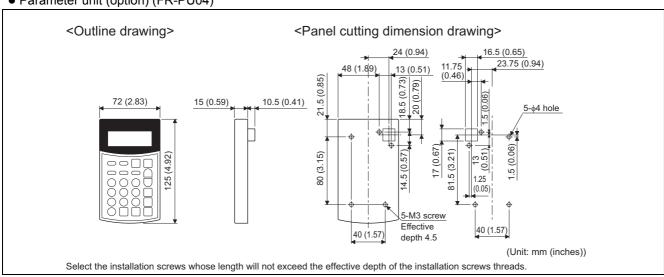

# 7.4 Heatsink protrusion attachment procedure

When encasing the inverter in an enclosure, the generated heat amount in an enclosure can be greatly reduced by installing the heatsink portion of the inverter outside the enclosure. When installing the inverter in a compact enclosure, etc., this installation method is recommended.

# 7.4.1 When using a heatsink protrusion attachment (FR-A7CN)


For the FR-A720-00080 to 02150, FR-A740-00015 to 02600, a heatsink can be protruded outside the enclosure using a heatsink protrusion attachment (FR-A7CN). (For the FR-A740-03250 or more, attachment is not necessary when the heatsink is to be protruded.)

For a panel cut dimension drawing and an installation procedure of the heatsink protrusion attachment (FR-A7CN) to the inverter, refer to a manual of "heatsink protrusion attachment".

#### 7.4.2 Protrusion of heatsink of the FR-A740-03250 or more

#### (1) Panel cutting


Cut the panel of the enclosure according to the inverter capacity.

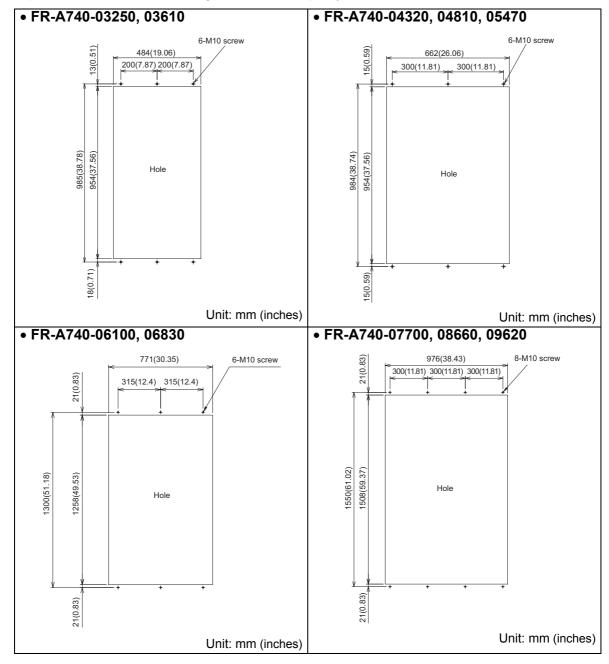

## (2) Shift and removal of a rear side installation frame


#### • FR-A740-03250 to 05470

One installation frame is attached to each of the upper and lower part of the inverter. Change the position of the rear side installation frame on the upper and lower side of the inverter to the front side as shown on the right. When changing the installation frames, make sure that the installation orientation is correct.

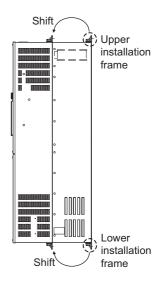


#### • FR-A740-06100 or more

Two installation frames each are attached to the upper and lower part of the inverter. Remove the rear side installation frame on the upper and lower side of the inverter as shown on the right.

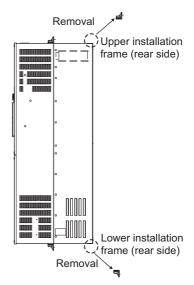

# (3) Installation of the inverter

Push the inverter heatsink portion outside the enclosure and fix the enclosure and inverter with upper and lower installation frame.

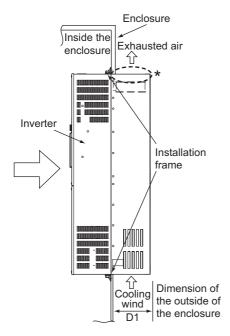

## = CAUTION =

- · Having a cooling fan, the cooling section which comes out of the enclosure can not be used in the environment of water drops, oil, mist, dust, etc.
- Be careful not to drop screws, dust etc. into the inverter and cooling fan section.

# **APPENDICES**

This chapter provides the "APPENDICES" of this product. Always read the instructions before using the equipment.

# Appendix 1 For customers who have replaced the older model with this inverter


# Appendix 1-1 Replacement of the FR-A500 series

## (1) Instructions for installation

- 1)Removal procedure of the front cover was changed. (with screws) Please note. (Refer to page 6.)
- 2)Removal procedure of the operation panel was changed. (with screws) Please note. (Refer to page 6.)
- 3)Plug-in options of the A500 series are not compatible
- 4)Operation panel (FR-DU04) can not be used.
- 5)Setup software (FR-SW0-SETUP/FR-SW1-SETUP) can not be used.

# (2) Wiring instructions

1)The control circuit terminal block can be used for the FR-A700 series without removing wiring. Note that the wiring cover (FR-A720-00030 to 00900 (FR-A740-00015 to 00430)) is not compatible.

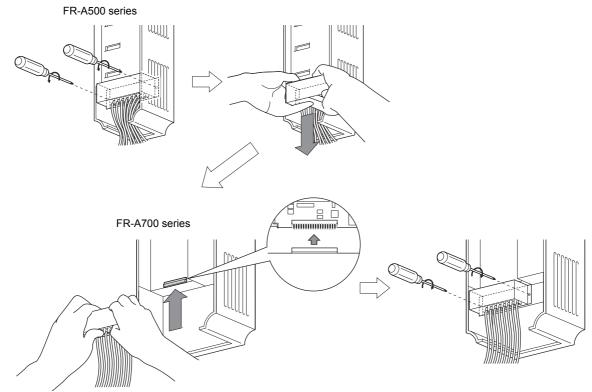

(Note that the relay output 2 (A2, B2, C2) specific for the FR-A700 series can not be used with the FR-A500 series terminals.)

#### (3) Instructions for continuous use of the FR-PU04 (parameter unit)

- 1)For the FR-A700 series, many functions (parameters) have been added. When setting these parameters, the parameter name and setting range are not displayed. User initial value list and user clear of the HELP function can not be used.
- 2) For the FR-A700 series, many protective functions have been added. These functions activate, but all alarms are displayed as "Fault 14". When the alarm history has been checked, "E.14" appears. Added alarm display will not appear on the parameter unit.
- 3) User initial value setting can not be used.
- 4) User registration/clear (user group 2) can not be used.
- 5) Parameter copy/verification function can not be used.

#### (4) Parameter resetting

It is easy if you use setup software (FR-Configurator).

# (5) Main differences and compatibilities with the FR-A500(L) series

Item	FR-A500(L)	FR-A700					
Control method	V/F control Advanced magnetic flux vector control	V/F control Advanced magnetic flux vector control Real sensorless vector control Vector control (used with a plug-in option FR-A7AP)					
	User group 1 (16), user group 2 (16) (Pr. 160, Pr. 173 to Pr. 175)	User group (16) only Setting methods were partially changed ( <i>Pr.</i> 160, <i>Pr.</i> 172 to <i>Pr.</i> 173)					
Changed/cleared	User initial value setting (Pr. 199)	User initial value setting ( <i>Pr. 199</i> ) was cleared Substitutable with the copy function of the operation panel (FR-DU07)					
functions	Long wiring mode ( <i>Pr. 240</i> setting 10, 11)	Setting is not necessary ( <i>Pr. 240</i> settings "10" and "11" were cleared)					
	Intelligent mode selection (Pr. 60)	Parameter number change (Pr. 60 Energy saving control selection) (Pr. 292 Automatic acceleration/deceleration)					
	Program operation (Pr. 200 to Pr. 231)	Function was cleared					
Terminal block	Removable terminal block	Removable terminal block Upward compatibility (A500 terminal block mountable)					
PU	FR-PU04, DU04	FR-PU07 FR-DU07 FR-PU04 (Some functions, such as parameter copy, are unavailable.) FR-DU04 unavailable					
	Dedicated plug-in	option (incompatible)					
Plug-in Options	Computer link, relay output option FR-A5NR	Built into the inverter (RS-485 terminals, relay output 2 points)					
Installation size	mounting dimensions For the FR-A740-00230, 00310, an optional interce Heatsink protrusion attachment is not compatible.	1170, 00380 to 01100, 02160, 03250 are compatible in rcompatibility attachment (FR-AAT) is necessary. e. 0 to 00175, 01150, 02150 or more, FR-A740-00015 to					

# Appendix 1-2 Replacement of the FR-A200 < EXCELENT> series

# Instructions for installation

• When using the installation holes of the FR-A200(E) series, FR-A5AT (intercompatibility attachment) is necessary.

# Appendix 2 Control mode-based parameter (function) correspondence table and instruction code list

- \*1 These instruction codes are used for parameter read and write by using Mitsubishi inverter protocol with the RS-485 communication. (Refer to page 325 for RS-485 communication)
- \*2 Validity and invalidity according to operation mode are as follows:
  - O:Usable parameter
  - ×:Unusable parameter
  - $\Delta\!:\!\mbox{Parameters}$  available only during position control set by parameter
- \*3 "O" indicates valid and "x" indicates invalid of "parameter copy", "parameter clear", and "all parameter clear".

Symbols in the table indicate parameters which function when an option is mounted.

AX ....... FR-A7AX, AY ....... FR-A7AY, AR ....... FR-A7AR, AP ....... FR-A7AP, NC ....... FR-A7NC, ND ...... FR-A7ND, NL ...... FR-A7NL, NP ...... FR-A7NP

			truct ode		Con	trol Mode	rol Mode-based Correspondence Table *2							
Param				ъ		Advanced	Ve	ctor cont	trol		nsorless	Cop	Cle	i C
eter	Name	Read	Read Write Extended		V/F Control	flux (		Torque control	Position control	Speed so control	Torque control	Parameter Copy	Parameter Clear	All Parameter Clear
0	Torque boost	00	80	0	0	×	×	×	×	×	×	0	0	0
1	Maximum frequency	01	81	0	0	0	0	0	0	0	0	0	0	0
2	Minimum frequency	02	82	0	0	0	0	0	×	0	0	0	0	0
3	Base frequency	03	83	0	0	×	×	×	×	×	×	0	0	0
4	Multi-speed setting (high speed)	04	84	0	0	0	0	0	Δ	0	0	0	0	0
5	Multi-speed setting (middle speed)	05	85	0	0	0	0	0	Δ	0	0	0	0	0
6	Multi-speed setting (low speed)	06	86	0	0	0	0	0	Δ	0	0	0	0	0
7	Acceleration time	07	87	0	0	0	0	0	Δ	0	0	0	0	0
8	Deceleration time	80	88	0	0	0	0	0	Δ	0	0	0	0	0
9	Electronic thermal O/L relay	09	89	0	0	0	0	0	0	0	0	0	0	0
10	DC injection brake operation frequency	0A	8 <i>A</i>	0	0	0	0	0	×	0	0	0	0	0
11	DC injection brake operation time	0B	8B	0	0	0	0	0	×	0	0	0	0	0
12	DC injection brake operation voltage	0C	8C	0	0	0	×	×	×	×	×	0	0	0
13	Starting frequency	0D	8D	0	0	0	0	0	×	0	0	0	0	0
14	Load pattern selection	0E	8E	0	0	×	×	×	×	×	×	0	0	0
15	Jog frequency	0F	8F	0	0	0	0	0	×	0	0	0	0	0
16	Jog acceleration/ deceleration time	10	90	0	0	0	0	0	×	0	0	0	0	0
17	MRS input selection	11	91	0	0	0	0	0	0	0	0	0	0	0
18	High speed maximum frequency	12	92	0	0	0	×	×	×	×	×	0	0	0
19	Base frequency voltage	13	93	0	0	×	×	×	×	×	×	0	0	0
20	Acceleration/deceleration reference frequency	14	94	0	0	0	0	0	Δ	0	0	0	0	0
21	Acceleration/deceleration time increments	15	95	0	0	0	0	0	Δ	0	0	0	0	0
22	Stall prevention operation level (Torque limit level )	16	96	0	0	0	0	×	0	0	×	0	0	0
23	Stall prevention operation level compensation factor at double speed	17	97	0	0	0	×	×	×	×	×	0	0	0
24	Multi-speed setting (speed4)	18	98	0	0	0	0	0	Δ	0	0	0	0	0
25	Multi-speed setting (speed 5)	19	99	0	0	0	0	0	Δ	0	0	0	0	0
26	Multi-speed setting (speed 6)	1A	9 <i>A</i>	0	0	0	0	0	Δ	0	0	0	0	0
27	Multi-speed setting (speed 7)	1B	9B	0	0	0	0	0	Δ	0	0	0	0	0
28	Multi-speed input compensation selection	1C	9C	0	0	0	0	0	×	0	0	0	0	0
29	Acceleration/deceleration pattern selection	1D	9D	0	0	0	0	0	×	0	0	0	0	0

			truct		Con	itrol Mode	-based	Corres	onden	ce Tabl	<b>e</b> *2	y *3	ar *3	ear *3
Param				7		Advanced	Ve	ctor cont	rol		nsorless	Cop	Cles	er Cle
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
30	Regenerative function selection	1E	9E	0	0	0	0	0	0	0	0	0	0	0
31	Frequency jump 1A	1F	9F	0	0	0	0	0	×	0	0	0	0	0
32	Frequency jump 1B	20	A0	0	0	0	0	0	×	0	0	0	0	0
33	Frequency jump 2A	21	A1	0	0	0	0	0	×	0	0	0	0	0
34	Frequency jump 2B	22	A2	0	0	0	0	0	×	0	0	0	0	0
35	Frequency jump 3A	23	A3	0	0	0	0	0	×	0	0	0	0	0
36 37	Frequency jump 3B	24	A4	0	0	0	0	0	×	0	0	0	0	0
41	Speed display Up-to-frequency sensitivity	25 29	A5 A9	0	0	0	0	0	0	0	0	0	0	0 0
42	Output frequency detection	29 2A	AA	0	0	0	0	×	×	0	0	0	0	0
43	Output frequency detection for reverse rotation	2B	AB	0	0	0	0	0	0	0	0	0	0	0
44	Second acceleration/ deceleration time	2C	AC	0	0	0	0	0	Δ	0	0	0	0	0
45	Second deceleration time	2D	AD	0	0	0	0	0	Δ	0	0	0	0	0
46	Second torque boost	2E	AE	0	0	×	×	×	X	×	×	0	0	0
47	Second V/F (base frequency)	2F	AF	0	0	×	×	×	×	×	×	0	0	0
48	Second stall prevention operation current	30	В0	0	0	0	×	×	×	×	×	0	0	0
49	Second stall prevention operation frequency	31	B1	0	0	0	×	×	×	×	×	0	0	0
50	Second output frequency detection	32	B2	0	0	0	0	0	0	0	0	0	0	0
51	Second electronic thermal O/L relay	33	В3	0	0	0	0	0	0	0	0	0	0	0
52	DU/PU main display data selection	34	B4	0	0	0	0	0	0	0	0	0	0	0
54	FM terminal function selection	36	B6	0	0	0	0	0	0	0	0	0	0	0
55	Frequency monitoring reference  Current monitoring	37	B7	0	0	0	0	0	0	0	0	0	0	0
56 57	reference Restart coasting time	38	B8 B9	0	0	0	0	0	0	0	0	0	0	0
58	Restart cushion time	39 3A	ВА	0	0	0	×	×	×	×	×	0	0	0
59	Remote function selection	3B	BB	0	0	0	0	0	×	0	0	0	0	0
60	Energy saving control selection	3C	вс	0	0	0	×	×	×	×	×	0	0	0
61	Reference current	3D	BD	0	0	0	0	×	×	0	×	0	0	0
62	Reference value at acceleration	3E	BE	0	0	0	0	×	×	0	×	0	0	0
63	Reference value at dcceleration	3F	BF	0	0	0	0	×	×	0	×	0	0	0
64	Starting frequency for elevator mode	40	C0	0	0	×	×	×	×	×	×	0	0	0
65	Retry selection	41	C1	0	0	0	0	0	×	0	0	0	0	0
66	Stall prevention operation reduction starting frequency	42	C2	0	0	0	×	×	×	×	×	0	0	0
67	Number of retries at alarm occurrence	43	СЗ	0	0	0	0	0	×	0	0	0	0	0
68	Retry waiting time	44	C4	0	0	0	0	0	×	0	0	0	0	0
69	Retry count display erase	45	C5	0	0	0	0	0	×	0	0	0	0	0
70	Special regenerative brake duty	46	C6	0	0	0	0	0	0	0	0	0	0	0

			truct		Control Mode-based Correspondence Table +2							٧ *٤	r *3	ar *3
Param				75		Advanced	Ve	ctor cont	rol		nsorless	Cop	Clea	i Ci
eter	Name	ad	Write	Jde	V/F	magnetic flux	0	<b>-</b>	D141		control	eter	ieter	mete
		Read	Mr	Extended	Control	vector control	Speed	Torque control	Position control	Speed	Torque control	Parameter Copy	Parameter Clear	All Parameter Clear *3
71	Applied motor	47	C7	0	0	0	0	0	0	0	0	0	0	0
72	PWM frequency selection	48	C8	0	0	0	0	0	0	0	0	0	0	0
73	Analog input selection	49	C9	0	0	0	0	0	×	0	0	0	0	0
74	Input filter time constant	4A	CA	0	0	0	0	0	×	0	0	0	0	0
75	Reset selection/ disconnected PU detection/ PU stop selection	4B	СВ	0	0	0	0	0	0	0	0	0	×	×
76	Alarm code output selection	4C	СС	0	0	0	0	0	0	0	0	0	0	0
77 *	Parameter write selection	4D	CD	0	0	0	0	0	0	0	0	0	0	0
78	Reverse rotation prevention selection	4E	CE	0	0	0	0	0	0	0	0	0	0	0
79 *	Operation mode selection	4F	CF	0	0	0	0	0	0	0	0	0	0	0
80	Motor capacity	50	D0	0	×	0	0	0	0	0	0	0	0	0
81	Number of motor poles	51	D1	0	×	0	0	0	0	0	0	0	0	0
82	Motor excitation current	52	D2	0	×	0	0	0	0	0	0	0	×	0
83	Motor rated voltage	53	D3	0	×	0	0	0	0	0	0	0	0	0
84	Rated motor frequency	54	D4	0	×	0	0	0	0	0	0	0	0	0
89	Speed control gain (magnetic flux vector)	59	D9	0	×	0	×	×	×	×	×	0	×	0
90	Motor constant (R1)	5A	DA	0	×	0	0	0	0	0	0	0	×	0
91	Motor constant (R2)	5B	DB	0	×	0	0	0	0	0	0	0	×	0
92	Motor constant (L1)	5C	DC	0	×	0	0	0	0	0	0	0	×	0
93	Motor constant (L2)	5D	DD	0	×	0	0	0	0	0	0	0	×	0
94	Motor constant (X)	5E	DE	0	×	0	0	0	0	0	0	0	×	0
95	Online auto tuning selection	5F	DF	0	×	0	0	0	0	0	0	0	0	0
96	Auto tuning setting/status	60	E0	0	×	0	0	0	0	0	0	0	×	0
100	V/F1(first frequency)	00	80	1	0	×	×	X	×	×	×	0	0	0
101	V/F1(first frequency voltage)	01	81	1	0	×	×	×	×	×	×	0	0	0
102	V/F2(second frequency)	02	82	1	0	×	×	X	×	×	×	0	0	0
103	V/F2(second frequency voltage)	03	83	1	0	×	×	×	×	×	×	0	0	0
104	V/F3(third frequency)	04	84	1	0	×	×	X	X	X	X	0	0	0
105	V/F3(third frequency voltage)	05	85	1	0	×	×	×	×	×	×	0	0	0
106	V/F4(fourth frequency)	06	86	1	0	×	×	X	×	X	×	0	0	0
107	V/F4(fourth frequency voltage)	07	87	1	0	×	×	×	×	×	×	0	0	0
108	V/F5(fifth frequency)	08	88	1	0	×	×	×	×	×	×	0	0	0
109	V/F5(fifth frequency voltage)	09	89	1	0	×	×	×	×	×	×	0	0	0
110	Third acceleration/ deceleration time	0A	8A	1	0	0	0	0	Δ	0	0	0	0	0
111	Third deceleration time	0B	8B	1	0	0	0	0	Δ	0	0	0	0	0
112 113	Third torque boost Third V/F (base frequency)	0C 0D	8C 8D	1	0	×	×	×	×	×	×	0 0	0 0	0
114	Third stall prevention operation current	0E	8E	1	0	× 0	×	×	×	×	×	0	0	0
115	Thrid stall prevention operation frequency	0F	8F	1	0	0	×	×	×	×	×	0	0	0
L	and write from communication with P			L			<u> </u>	<u> </u>	<u> </u>		l			

<sup>\*</sup> Read and write from communication with PU connector only is enabled.

			truct		Control Mode-based Correspondence Table +2								ar *3	ear *3
Param				70		Advanced	Vector control				nsorless	Cop	Clex	Ş
eter	Name	Read	Write	nde	V/F	magnetic flux	Cnood	Torque	Position		control	eter	neter	mete
		Re	Wr	Extended	Control	vector control	Speed control	control	control	Speed	Torque	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
116	Third output frequency detection	10	90	1	0	0	0	0	0	0	0	0	0	0
117	PU communication station	11	91	1	0	0	0	0	0	0	0	0	0	0
118	PU communication speed	12	92	1	0	0	0	0	0	0	0	0	0	0
119	PU communication stop bit length	13	93	1	0	0	0	0	0	0	0	0	0	0
120	PU communication parity check	14	94	1	0	0	0	0	0	0	0	0	0	0
121	Number of PU communication retries	15	95	1	0	0	0	0	0	0	0	0	0	0
122	PU communication check time interval	16	96	1	0	0	0	0	0	0	0	0	0	0
123	PU communication waiting time setting	17	97	1	0	0	0	0	0	0	0	0	0	0
124	PU communication CR/LF presence/absence selection	18	98	1	0	0	0	0	0	0	0	0	0	0
125	Terminal 2 frequency setting gain frequency	19	99	1	0	0	0	0	×	0	0	0	×	0
126	Terminal 4 frequency setting gain frequency	1A	9 <i>A</i>	1	0	0	0	0	×	0	0	0	×	0
127	PID control automatic switchover frequency	1B	9B	1	0	0	0	×	×	0	×	0	0	0
128	PID action selection	1C	9C	1	0	0	0	×	×	0	×	0	0	0
129	PID proportional band	1D	9D	1	0	0	0	×	×	0	×	0	0	0
130	PID integral time	1E	9E	1	0	0	0	×	×	0	×	0	0	0
131	PID upper limit	1F	9F	1	0	0	0	X	×	0	X	0	0	0
132 133	PID lower limit PID action set point	20	A0	1	0	0	0	X	×	0	X	0 0	0	0
134	PID differential time	22	A1 A2	1	0	0	0	×	×	0	×	0	0	0
135	Commercial power-supply switchover sequence output terminal selection			1	0	0	0	×	×	0	×	0	0	0
136	MC switchover interlock time	24	A4	1	0	0	0	×	×	0	×	0	0	0
137	Start waiting time	25	A5	1	0	0	0	×	×	0	×	0	0	0
138	Commercial power-supply operation switchover selection at an alarm	26	A6	1	0	0	0	×	×	0	×	0	0	0
139	Automatic switchover frequency between inverter and commercial power-supply operation	27	A7	1	0	0	0	×	×	0	×	0	0	0
140	Backlash acceleration stopping frequency	28	A8	1	0	0	0	0	×	0	0	0	0	0
141	Backlash acceleration stopping time	29	A9	1	0	0	0	0	×	0	0	0	0	0
142	Backlash deceleration stopping frequency	2A	AA	1	0	0	0	0	×	0	0	0	0	0
143	Backlash deceleration stopping time	2B	AB	1	0	0	0	0	×	0	0	0	0	0
144	Speed setting switchover	2C	AC	1	0	0	0	0	0	0	0	0	0	0
145	PU display language selection	2D	AD	1	0	0	0	0	0	0	0	0	×	×
148	Stall prevention level at 0V input	30	В0	1	0	0	×	×	×	×	×	0	0	0

			truct		Con	ntrol Mode	based	Corres	ponden	ce Tabl	<b>e</b> *2	y *3	ar *3	ear *3
Param	Name			pa		Advanced	Ve	ctor cont	rol		nsorless	ır Cop	r Cle	ter CI
eter	Nume	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed	Torque	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
149	Stall prevention level at 10V input	31	B1	1	0	0	×	×	×	×	×	0	0	0
150	Output current detection level	32	В2	1	0	0	0	0	0	0	0	0	0	0
151	Output current detection signal delay time	33	В3	1	0	0	0	0	0	0	0	0	0	0
152	Zero current detection level	34	B4	1	0	0	0	0	0	0	0	0	0	0
153	Zero current detection time	35	B5	1	0	0	0	0	0	0	0	0	0	0
154	Voltage reduction selection during stall prevention operation	36	В6	1	0	0	×	×	×	×	×	0	0	0
155	RT signal reflection time selection	37	B7	1	0	0	0	×	×	0	×	0	0	0
156	Stall prevention operation selection	38	В8	1	0	0	×	×	×	×	×	0	0	0
157	OL signal output timer	39	В9	1	0	0	0	0	0	0	0	0	0	0
158	AM terminal function selection	3 <i>A</i>	ВА	1	0	0	0	0	0	0	0	0	0	0
159	Automatic switchover ON range between commercial power-supply and inverter operation	3B	BB	1	0	0	0	×	×	0	×	0	0	0
160	User group read selection	00	80	2	0	0	0	0	0	0	0	0	0	0
161	Frequency setting/key lock operation selection	01	81	2	0	0	0	0	0	0	0	0	×	0
162	Automatic restart after instantaneous power failure selection	02	82	2	0	0	0	0	×	0	0	0	0	0
163	First cushion time for restart	03	83	2	0	0	×	×	×	×	×	0	0	0
164	First cushion voltage for restart	04	84	2	0	0	×	×	×	×	×	0	0	0
165	Stall prevention operation level for restart	05	85	2	0	0	×	×	×	×	×	0	0	0
166	Output current detection signal retention time	06	86	2	0	0	0	0	0	0	0	0	0	0
167	Output current detection operation selection	07	87	2	0	0	0	0	0	0	0	0	0	0
168 169	Parameter for manufacturer s	settin	g. Do	not	set.									
170	Watt-hour meter clear	0A	8A	2	0	0	0	0	0	0	0	0	×	0
171	Operation hour meter clear	0B	8B	2	0	0	0	0	0	0	0	×	×	×
172	User group registered display/batch clear	ос	8C	2	0	0	0	0	0	0	0	0	×	×
173	User group registration	0D	8D	2	0	0	0	0	0	0	0	×	×	×
174	User group clear	0E	8E	2	0	0	0	0	0	0	0	×	×	×
178	STF terminal function selection	12	92	2	0	0	0	0	0	0	0	0	×	0
179	STR terminal function selection	13	93	2	0	0	0	0	0	0	0	0	×	0
180	RL terminal function selection	14	94	2	0	0	0	0	0	0	0	0	×	0
181	RM terminal function selection	15	95	2	0	0	0	0	0	0	0	0	×	0
182	RH terminal function selection	16	96	2	0	0	0	0	0	0	0	0	×	0

			truct		Control Mode-based Correspondence Table *2						y *3	ar *3	ear *3	
Param	Name			p		Advanced	Ve	ctor cont	rol		nsorless	r Cop	r Clea	ter Cle
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed	Torque	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
183	RT terminal function selection	17	97	2	0	0	0	0	0	0	0	0	×	0
184	AU terminal function selection	18	98	2	0	0	0	0	0	0	0	0	×	0
185	JOG terminal function selection	19	99	2	0	0	0	0	0	0	0	0	×	0
186	CS terminal function selection	1A	9 <i>A</i>	2	0	0	0	0	0	0	0	0	×	0
187	MRS terminal function selection	1B	9B	2	0	0	0	0	0	0	0	0	×	0
188	STOP terminal function selection	1C	9C	2	0	0	0	0	0	0	0	0	×	0
189	RES terminal function selection	1D	9D	2	0	0	0	0	0	0	0	0	×	0
190	RUN terminal function selection	1E	9E	2	0	0	0	0	0	0	0	0	×	0
191	SU terminal function selection	1F	9F	2	0	0	0	0	0	0	0	0	×	0
192	IPF terminal function selection	20	A0	2	0	0	0	0	0	0	0	0	×	0
193	OL terminal function selection	21	A1	2	0	0	0	0	0	0	0	0	×	0
194	FU terminal function selection	22	A2	2	0	0	0	0	0	0	0	0	×	0
195	ABC1 terminal function selection	23	А3	2	0	0	0	0	0	0	0	0	×	0
196	ABC2 terminal function selection	24	A4	2	0	0	0	0	0	0	0	0	×	0
232	Multi-speed setting (speed 8)	28	A8	2	0	0	0	0	Δ	0	0	0	0	0
233	Multi-speed setting (speed 9)	29	A9	2	0	0	0	0	Δ	0	0	0	0	0
234	Multi-speed setting (speed 10)	2A	AA	2	0	0	0	0	Δ	0	0	0	0	0
235	Multi-speed setting (speed 11)	2B	AB	2	0	0	0	0	Δ	0	0	0	0	0
236	Multi-speed setting (speed 12)	2C	AC	2	0	0	0	0	Δ	0	0	0	0	0
237	Multi-speed setting (speed 13)	2D	AD	2	0	0	0	0	Δ	0	0	0	0	0
238	Multi-speed setting (speed 14)	2E	ΑE	2	0	0	0	0	Δ	0	0	0	0	0
239	Multi-speed setting (speed 15)	2F	AF	2	0	0	0	0	Δ	0	0	0	0	0
240	Soft-PWM operation selection	30	В0	2	0	0	0	0	0	0	0	0	0	0
241	Analog input display unit switchover	31	B1	2	0	0	0	0	0	0	0	0	0	0
242	Terminal 1 added compensation amount (terminal 2)	32	В2	2	0	0	0	0	×	0	0	0	0	0
243	Terminal 1 added compensation amount (terminal 4)	33	ВЗ	2	0	0	0	0	×	0	0	0	0	0
244	Cooling fan operation selection	34	B4	2	0	0	0	0	0	0	0	0	0	0
245	Rated slip	35	B5	2	0	×	×	×	×	×	×	0	0	0

			truct		Control Mode-based Correspondence Table 2							y *3	ar *3	ear *3
Param	Nome			٦		Advanced	Ve	ctor conf	rol		nsorless	. Cop	Cle	er Ci
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed a	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
246	Slip compensation time constant	36	В6	2	0	×	×	×	×	×	×	0	0	0
247	Constant-power region slip compensation selection	37	В7	2	0	×	×	×	×	×	×	0	0	0
250	Stop selection	3 <i>A</i>	BA	2	0	0	0	0	×	0	0	0	0	0
251	Output phase failure protection selection	3B	BB	2	0	0	0	0	0	0	0	0	0	0
252	Override bias	3C	ВС	2	0	0	0	0	×	0	0	0	0	0
253	Override gain	3D	BD	2	0	0	0	0	X	0	0	0	0	0
255	Life alarm status display	3F	BF	2	0	0	0	0	0	0	0	×	×	×
256	Inrush current limit circuit life display	40	C0	2	0	0	0	0	0	0	0	×	×	×
257	Control circuit capacitor life display	41	C1	2	0	0	0	0	0	0	0	×	×	×
258	Main circuit capacitor life display	42	C2	2	0	0	0	0	0	0	0	×	×	×
259	Main circuit capacitor life measuring	43	C3	2	0	0	0	0	0	0	0	0	0	0
260	PWM frequency automatic switchover	44	C4	2	0	0	0	0	0	0	0	0	0	0
261	Power failure stop selection	45	C5	2	0	0	0	0	×	0	0	0	0	0
262	Subtracted frequency at deceleration start	46	C6	2	0	0	0	0	×	0	0	0	0	0
263	Subtraction starting frequency	47	C7	2	0	0	0	0	×	0	0	0	0	0
264	Power-failure deceleration time 1	48	C8	2	0	0	0	0	×	0	0	0	0	0
265	Power-failure deceleration time 2	49	C9	2	0	0	0	0	×	0	0	0	0	0
266	Power failure deceleration time switchover frequency	4A	CA	2	0	0	0	0	×	0	0	0	0	0
267	Terminal 4 input selection	4B	СВ	2	0	0	0	0	0	0	0	0	×	0
268	Monitor decimal digits selection	4C	СС	2	0	0	0	0	0	0	0	0	0	0
269	Parameter for manufacturer s	ettin	g. Do	not	set.									
270	Stop-on contact/load torque high-speed frequency control selection	4E	CE	2	0	0	0	×	×	0	×	0	0	0
271	High-speed setting maximum current	4F	CF	2	0	0	0	×	×	0	×	0	0	0
272	Middle-speed setting minimum current	50	D0	2	0	0	0	×	×	0	×	0	0	0
273	Current averaging range	51	D1	2	0	0	0	×	×	0	×	0	0	0
274	Current averaging filter time constant	52	D2	2	0	0	0	×	×	0	×	0	0	0
275	Stop-on contact excitation current low-speed multiplying factor	53	D3	2	×	0	×	×	×	×	×	0	0	0
276	PWM carrier frequency at stop-on contact	54	D4	2	×	0	×	×	×	×	×	0	0	0
278	Brake opening frequency	56	D6	2	×	0	0	×	×	0	×	0	0	0
279	Brake opening current	57	D7	2	×	0	0	×	×	0	×	0	0	0
280	Brake opening current detection time	58	D8	2	×	0	0	×	×	0	×	0	0	0
281	Brake operation time at start	59	D9	2	×	0	0	×	×	0	×	0	0	0
282	Brake operation frequency	5A	DA	2	×	0	0	X	×	0	×	0	0	0

			truct		Cor	itrol Mode	-based	Corres	ponden	ce Tabl	<b>e</b> *2	/ *3	r *3	ar *3
Param						Advanced	Ve	ctor cont	trol	Real ser	Cop	Clea	r Cle	
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
283	Brake operation time at stop	5B	DB	2	×	0	0	×	×	0	×	0	0	0
284	Deceleration detection function selection	5C	DC	2	0	0	0	×	×	×	×	0	0	0
285	Overspeed detection frequency (Excessive speed deviation detection frequency)	5D	DD	2	0	0	0	×	×	0	×	0	0	0
286	Droop gain	5E	DE	2	×	0	0	×	×	0	×	0	0	0
287	Droop filter time constant	5F	DF	2	×	0	0	×	×	0	×	0	0	0
288	Droop function activation selection	60	E0	2	×	×	0	×	×	0	×	0	0	0
291	Pulse train I/O selection	63	E3	2	0	0	0	0	×	0	0	0	×	0
292	Automatic acceleration/ deceleration	64	E4	2	0	0	0	×	×	0	×	0	0	0
293	Acceleration/deceleration time individual calculation selection	65	E5	2	0	0	0	×	×	0	×	0	0	0
294	UV avoidance voltage gain	66	E6	2	0	0	0	0	×	0	0	0	0	0
299	Rotation direction detection selection at restarting	6B	EB	2	0	0	×	×	×	0	×	0	0	0
300	BCD input bias AX	00	80	3	0	0	0	0	×	0	0	0	0	0
301	BCD input gain AX	01	81	3	0	0	0	0	×	0	0	0	0	0
302	BIN input bias AX	02	82	3	0	0	0	0	×	0	0	0	0	0
303	BIN input gain AX	03	83	3	0	0	0	0	×	0	0	0	0	0
304	Digital input and analog input compensation enable/ disable selection AX	04	84	3	0	0	0	0	×	0	0	0	0	0
305	Read timing operation selection AX	05	85	3	0	0	0	0	×	0	0	0	0	0
306	Analog output signal selection AY	06	86	3	0	0	0	0	0	0	0	0	0	0
307	Setting for zero analog output AY	07	87	3	0	0	0	0	0	0	0	0	0	0
308	Setting for maximum analog output AY	08	88	3	0	0	0	0	0	0	0	0	0	0
309	Analog output signal voltage/current switchover AY	09	89	3	0	0	0	0	0	0	0	0	0	0
310	Analog meter voltage output selection AY	0A	8A	3	0	0	0	0	0	0	0	0	0	0
311	Setting for zero analog meter voltage output AY	0B	8B	3	0	0	0	0	0	0	0	0	0	0
312	Setting for maximum analog meter voltage output AY	0C	8C	3	0	0	0	0	0	0	0	0	0	0
313	DO0 output selection AY NC	0D	8D	3	0	0	0	0	0	0	0	0	0	0
314	DO1 output selection AY NC	0E	8E	3	0	0	0	0	0	0	0	0	0	0
315	DO2 output selection AY NC	0F	8F	3	0	0	0	0	0	0	0	0	0	0
316	DO3 output selection AY	10	90	3	0	0	0	0	0	0	0	0	0	0
317	DO4 output selection AY	11	91	3	0	0	0	0	0	0	0	0	0	0
318	DO5 output selection AY	12	92	3	0	0	0	0	0	0	0	0	0	0
319	DO6 output selection AY	13	93	3	0	0	0	0	0	0	0	0	0	0

			truct		Control Mode-based Correspondence Table *2								ar *3	ear *3
Param				ъ		Advanced	Ve	ctor cont	rol		nsorless	Cop	Cles	ar Cle
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
320	RA1 output selection AR	14	94	3	0	0	0	0	0	0	0	0	0	0
321	RA2 output selection AR	15	95	3	0	0	0	0	0	0	0	0	0	0
322	RA3 output selection AR	16	96	3	0	0	0	0	0	0	0	0	0	0
323	AM0 0V adjustment AY	17	97	3	0	0	0	0	0	0	0	0	×	0
324	AM1 0mA adjustment AY Digital input unit	18	98	3	0	0	0	0	0	0	0	0	×	0
329	selection AX	1D	9D	3	0	0	0	0	×	0	0	0	×	0
331	RS-485 communication station	1F	9F	3	0	0	0	0	0	0	0	0	0	0
332	RS-485 communication speed	20	A0	3	0	0	0	0	0	0	0	0	0	0
333	RS-485 communication stop bit length	21	A1	3	0	0	0	0	0	0	0	0	0	0
334	RS-485 communication parity check selection	22	A2	3	0	0	0	0	0	0	0	0	0	0
335	RS-485 communication retry count	23	А3	3	0	0	0	0	0	0	0	0	0	0
336	RS-485 communication check time interval	24	A4	3	0	0	0	0	0	0	0	0	0	0
337	RS-485 communication waiting time setting	25	A5	3	0	0	0	0	0	0	0	0	0	0
338	Communication operation command source	26	A6	3	0	0	0	0	0	0	0	0	0	0
339	Communication speed command source	27	A7	3	0	0	0	0	0	0	0	0	0	0
340	Communication startup mode selection	28	A8	3	0	0	0	0	0	0	0	0	0	0
341	RS-485 communication CR/ LF selection Communication EEPROM	29	A9	3	0	0	0	0	0	0	0	0	0	0
342	write selection	2A	AA	3	0	0	0	0	0	0	0	0	0	0
343	Communication error count DeviceNet address start	2B	AB	3	0	0	0	0	0	0	0	×	×	×
345	data ND	2D	AD	3	0	0	0	0	0	0	0	0	0	0
346	DeviceNet baud rate ND Communication reset	2E	AE	3	0	0	0	0	0	0	0	0	0	0
349	selection NC ND NL NP	31	B1	3	0	0	0	0	0	0	0	0	0	0
350	Stop position command selection AP	32	В2	3	0	0	0	×	×	×	×	0	0	0
351	Orientation speed AP	33	ВЗ	3	0	0	0	×	×	×	×	0	0	0
352	Creep speed AP	34	В4	3	0	0	0	×	×	×	×	0	0	0
353	Creep switchover position	35	B5	3	0	0	0	×	×	×	×	0	0	0
354	Position loop switchover position AP	36	В6	3	0	0	0	×	×	×	×	0	0	0
355	DC injection brake start position AP	37	В7	3	0	0	0	×	×	×	×	0	0	0
356	Internal stop position command [AP]	38	В8	3	0	0	0	×	×	×	×	0	0	0
357	In-position zone AP	39	В9	3	0	0	0	×	×	×	×	0	0	0
358	Servo torque selection AP	3A	ВА	3	0	0	0	×	×	×	×	0	0	0
359	Encoder rotation direction  AP	3B	ВВ	3	0	0	0	0	0	0	0	0	0	0

			truct		Control Mode-based Correspondence Table •2							y *3	ar *3	ear *3
Param	Nome			٦		Advanced	Ve	ctor cont	rol		nsorless	. Cop	S Cles	er Ci
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
360	16 bit data selection AP	3C	ВС	3	0	0	0	×	×	×	×	0	0	0
361	Position shift AP	3D	BD	3	0	0	0	×	×	×	×	0	0	0
362	Orientation position loop	3E	BE	3	0	0	0	×	×	×	×	0	0	0
363	Completion signal output delay time AP	3F	BF	3	0	0	0	×	×	×	×	0	0	0
364	Encoder stop check time	40	C0	3	0	0	0	×	×	×	×	0	0	0
365	Orientation limit AP	41	C1	3	0	0	0	×	×	×	×	0	0	0
366	Recheck time AP	42	C2	3	0	0	0	×	×	×	×	0	0	0
367	Speed feedback range AP	43	C3	3	0	0	0	×	×	×	×	0	0	0
368	Feedback gain AP	44	C4	3	0	0	×	×	×	×	×	0	0	0
369	Number of encoder pulses  AP	45	C5	3	0	0	0	0	0	0	0	0	0	0
374	Overspeed detection level	4A	CA	3	×	×	0	0	0	×	×	0	0	0
376	Encoder signal loss detection enable/disable selection AP	4C	СС	3	0	0	0	0	0	×	×	0	0	0
380	Acceleration S-pattern 1	50	D0	3	0	0	0	0	×	0	0	0	0	0
381	Deceleration S-pattern 1	51	D1	3	0	0	0	0	×	0	0	0	0	0
382	Acceleration S-pattern 2	52	D2	3	0	0	0	0	×	0	0	0	0	0
383	Deceleration S-pattern 2	53	D3	3	0	0	0	0	×	0	0	0	0	0
384	Input pulse division scaling factor	54	D4	3	0	0	0	0	×	0	0	0	0	0
385	Frequency for 0 input pulse	55	D5	3	0	0	0	0	×	0	0	0	0	0
386	Frequency for maximum input pulse Initial communication delay	56	D6	3	0	0	0	0	×	0	0	0	0	0
387	time_NL	57	D7	3	0	0	0	0	0	0	0	0	0	0
388	Send time interval at hart beat NL	58	D8	3	0	0	0	0	0	0	0	0	0	0
389	Minimum sending time at hart beat NL	59	D9	3	0	0	0	0	0	0	0	0	0	0
390	% setting reference frequency NL	5A	DA	3	0	0	0	0	0	0	0	0	0	0
391	Receive time interval at hart beat NL	5B	DB	3	0	0	0	0	0	0	0	0	0	0
392	Event driven detection width NL	5C	DC	3	0	0	0	0	0	0	0	0	0	0
393	Orientation selection AP	5D	DD	3	×	×	0	×	×	×	×	0	0	0
396	Orientation speed gain (P term) AP	60	E0	3	×	×	0	×	×	×	×	0	0	0
397	Orientation speed integral time AP	61	E1	3	×	×	0	×	×	×	×	0	0	0
398	Orientation speed gain (D term) AP	62	E2	3	×	×	0	×	×	×	×	0	0	0
399	Orientation deceleration ratio AP	63	E3	3	×	×	0	×	×	×	×	0	0	0
414	PLC function operation selection	0E	8E	4	0	0	0	0	0	0	0	0	×	×

		Instruction Code * 1										y *3	ar *3	ear *3
Param	Nome			٦			Ve	ctor cont	trol		nsorless	S S	Cle	er Ci
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
415	Inverter operation lock mode setting	0F	8F	4	0	0	0	0	0	0	0	0	0	0
416	Pre-scale function selection	10	90	4	0	0	0	0	0	0	0	0	0	0
417	Pre-scale setting value	11	91	4	0	0	0	0	0	0	0	0	0	0
419	Position command source selection AP	13	93	4	×	×	×	×	0	×	×	0	0	0
420	Command pulse scaling factor numerator AP	14	94	4	×	×	×	×	0	×	×	0	0	0
421	Command pulse scaling factor denominator AP	15	95	4	×	×	×	×	0	×	×	0	0	0
422	Position loop gain AP	16	96	4	×	×	×	×	0	×	×	0	0	0
423	Position feed forward gain  AP	17	97	4	×	×	×	×	0	×	×	0	0	0
424	Position command acceleration/deceleration time constant AP	18	98	4	×	×	×	×	0	×	×	0	0	0
425	Position feed forward command filter AP	19	99	4	×	×	×	×	0	×	×	0	0	0
426	In-position width AP	1A	9 <i>A</i>	4	×	×	×	×	0	×	×	0	0	0
427	Excessive level error AP	1B	9B	4	×	×	×	×	0	×	×	0	0	0
428	Command pulse selection	1C	9C	4	×	×	×	×	0	×	×	0	0	0
429	Clear signal selection AP	1D	9D	4	×	×	×	×	0	×	×	0	0	0
430	Pulse monitor selection AP	1E	9E	4	×	×	×	×	0	×	×	0	0	0
447	Digital torque command bias AX	2F	AF	4	×	×	×	0	×	×	0	0	0	0
448	Digital torque command gain AX	30	В0	4	×	×	×	0	×	×	0	0	0	0
450	Second applied motor	32	B2	4	0	0	×	×	×	0	0	0	0	0
451	Second motor control method selection	33	ВЗ	4	0	0	×	×	×	0	0	0	0	0
453	Second motor capacity	35	B5	4	×	0	×	×	×	0	0	0	0	0
454	Number of second motor poles	36	В6	4	×	0	×	×	×	0	0	0	0	0
455	Second motor excitation current	37	В7	4	×	0	×	×	×	0	0	0	×	0
456	Rated second motor voltage	38	В8	4	×	0	×	×	×	0	0	0	0	0
457	Rated second motor frequency	39	B9	4	×	0	×	×	×	0	0	0	0	0
458	Second motor constant (R1)	3A	BA	4	×	0	×	×	×	0	0	0	×	0
459	Second motor constant (R2)	3B	BB	4	×	0	X	X	X	0	0	0	×	0
460	Second motor constant (L1)	3C	BC	4	X	0	×	X	X	0	0	0	×	0 0
461 462	Second motor constant (L2) Second motor constant (X)	3D 3E	BD BE	4	×	0	×	×	×	0	0	0	×	0
463	Second motor constant (X) Second motor auto tuning setting/status	3E 3F	BF	4	×	0	×	×	×	0	0	0	×	0
464	Digital position control sudden stop deceleration time AP	40	CO	4	×	×	×	×	0	×	×	0	0	0
465	First position feed amount lower 4 digits AP	41	C1	4	×	×	×	×	0	×	×	0	0	0
466	First position feed amount upper 4 digits AP	42	C2	4	×	×	×	×	0	×	×	0	0	0

		Instruction Code *1 Control Mode-based Correspondence Table *2									<b>e</b> *2	۰ ۲	F *3	ear *3
Param	Name			ō		Advanced	Ve	ctor cont	rol			Cop	Clea	er Cle
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
467	Second position feed amount lower 4 digits AP	43	C3	4	×	×	×	×	0	×	×	0	0	0
468	Second position feed amount upper 4 digits AP	44	C4	4	×	×	×	×	0	×	×	0	0	0
469	Third position feed amount lower 4 digits AP	45	C5	4	×	×	×	×	0	×	×	0	0	0
470	Third position feed amount upper 4 digits AP	46	C6	4	×	×	×	×	0	×	×	0	0	0
471	Fourth position feed amount lower 4 digits AP	47	C7	4	×	×	×	×	0	×	×	0	0	0
472	Fourth position feed amount upper 4 digits AP	48	C8	4	×	×	×	×	0	×	×	0	0	0
473	Fifth position feed amount lower 4 digits AP	49	C9	4	×	×	×	×	0	×	×	0	0	0
474	Fifth position feed amount upper 4 digits AP	4A	CA	4	×	×	×	×	0	×	×	0	0	0
475	Sixth position feed amount lower 4 digits AP	4B	СВ	4	×	×	×	×	0	×	×	0	0	0
476	Sixth position feed amount upper 4 digits AP	4C	СС	4	×	×	×	×	0	×	×	0	0	0
477	Seventh position feed amount lower 4 digits AP	4D	CD	4	×	×	×	×	0	×	×	0	0	0
478	Seventh position feed amount upper 4 digits AP	4E	CE	4	×	×	×	×	0	×	×	0	0	0
479	Eighth position feed amount lower 4 digits AP	4F	CF	4	×	×	×	×	0	×	×	0	0	0
480	Eighth position feed amount upper 4 digits AP	50	D0	4	×	×	×	×	0	×	×	0	0	0
481	Ninth position feed amount lower 4 digits AP	51	D1	4	×	×	×	×	0	×	×	0	0	0
482	Ninth position feed amount upper 4 digits AP	52	D2	4	×	×	×	×	0	×	×	0	0	0
483	Tenth position feed amount lower 4 digits AP	53	D3	4	×	×	×	×	0	×	×	0	0	0
484	Tenth position feed amount upper 4 digits AP	54	D4	4	×	×	×	×	0	×	×	0	0	0
485	Eleventh position feed amount lower 4 digits AP	55	D5	4	×	×	×	×	0	×	×	0	0	0
486	Eleventh position feed amount upper 4 digits AP	56	D6	4	×	×	×	×	0	×	×	0	0	0
487	Twelfth position feed amount lower 4 digits AP	57	D7	4	×	×	×	×	0	×	×	0	0	0
488	Twelfth position feed amount upper 4 digits AP	58	D8	4	×	×	×	×	0	×	×	0	0	0
489	Thirteenth position feed amount lower 4 digits AP	59	D9	4	×	×	×	×	0	×	×	0	0	0
490	Thirteenth position feed amount upper 4 digits AP	5A	DA	4	×	×	×	×	0	×	×	0	0	0
491	Fourteenth position feed amount lower 4 digits AP	5B	DB	4	×	×	×	×	0	×	×	0	0	0
492	Fourteenth position feed amount upper 4 digits AP	5C	DC	4	×	×	×	×	0	×	×	0	0	0

			Control Mode-based Correspondence Table *2  Advanced Vector control Real sensorles:									y *3	ar *3	ear *3
Param				5		Advanced	Ve	ctor cont	rol			Cop	Cle	Ö
eter	Name	þ	te	ge	V/F	magnetic					control	əter	eter	nete
		Read	Write	Extended	Control	flux vector control	Speed control	Torque	Position control	Speed	Torque	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
493	Fifteenth position feed amount lower 4 digits AP	5D	DD	4	×	×	×	×	0	×	×	0	0	0
494	Fifteenth position feed amount upper 4 digits AP	5E	DE	4	×	×	×	×	0	×	×	0	0	0
495	Remote output selection	5F	DF	4	0	0	0	0	0	0	0	0	0	0
496	Remote output data 1	60	E0	4	0	0	0	0	0	0	0	×	×	×
497	Remote output data 2	61	E1	4	0	0	0	0	0	0	0	×	×	×
500	Communication error execution waiting time NC ND NL NP	00	80	5	0	0	0	0	0	0	0	0	0	0
501	Communication error occurrence count display NC ND NL NP	01	81	5	0	0	0	0	0	0	0	×	0	0
502	Stop mode selection at communication error NC ND NL NP	02	82	5	0	0	0	0	0	0	0	0	0	0
503	Maintenance timer	03	83	5	0	0	0	0	0	0	0	×	×	×
504	Maintenance timer alarm output set time	04	84	5	0	0	0	0	0	0	0	0	×	0
505	Speed setting reference	05	85	5	0	0	0	0	0	0	0	0	0	0
506	Parameter 1 for user	06	86	5	0	0	0	0	0	0	0	0	0	0
507	Parameter 2 for user	07	87	5	0	0	0	0	0	0	0	0	0	0
508	Parameter 3 for user	08	88	5	0	0	0	0	0	0	0	0	0	0
509	Parameter 4 for user	09	89	5	0	0	0	0	0	0	0	0	0	0
510	Parameter 5 for user	0A	8A	5	0	0	0	0	0	0	0	0	0	0
511 512	Parameter 6 for user	0B	8B	5	0	0	0	0	0	0	0	0 0	0	0
512	Parameter 7 for user Parameter 8 for user	0C 0D	8C 8D	5 5	0	0	0	0	0	0	0	0	0	0
513	Parameter 9 for user	0E	8E	5	0	0	0	0	0	0	0	0	0	0
514	Parameter 10 for user	0E 0F	8F	5	0	0	0	0	0	0	0	0	0	0
516	S-pattern time at a start of acceleration	10	90	5	0	0	0	0	×	0	0	0	0	0
517	S-pattern time at a completion of acceleration	11	91	5	0	0	0	0	×	0	0	0	0	0
518	S-pattern time at a start of deceleraiton	12	92	5	0	0	0	0	×	0	0	0	0	0
519	S-pattern time at a completion of deceleraiton	13	93	5	0	0	0	0	×	0	0	0	0	0
539	Modbus-RTU communication check time interval	27	A7	5	0	0	0	0	0	0	0	0	0	0
541	Frequency command sign selection (CC-Link) NC	29	A9	5	0	0	0	×	×	0	×	0	0	0
542	Communication station number (CC-Link) NC	2A	AA	5	0	0	0	0	0	0	0	0	0	0
543	Baud rate (CC-Link) NC	2B	AB	5	0	0	0	0	0	0	0	0	0	0
544	CC-Link extended setting NC	2C	AC	5	0	0	0	0	0	0	0	0	0	0
547	USB communication station number	2F	AF	5	0	0	0	0	0	0	0	0	0	0
548	USB communication check time interval	30	В0	5	0	0	0	0	0	0	0	0	0	0
549	Protocol selection	31	B1	5	0	0	0	0	0	0	0	0	0	0

			Instruction Code * 1 Control Mode-based Correspondence Table *2									/ *3	r *3	ar *3
Davana						Advanced	Ve	ctor cont	trol	Real sei	nsorless	Sop	Clea	Cle
Param eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
550	NET mode operation command source selection	32	B2	5	0	0	0	0	0	0	0	0	0	0
551	PU mode operation command source selection	33	В3	5	0	0	0	0	0	0	0	0	0	0
555	Current average time	37	В7	5	0	0	0	0	0	0	0	0	0	0
556	Data output mask time	38	B8	5	0	0	0	0	0	0	0	0	0	0
557	Current average value monitor signal output reference current	39	В9	5	0	0	0	0	0	0	0	0	0	0
563	Energization time carrying- over times	3F	BF	5	0	0	0	0	0	0	0	×	×	×
564	Operating time carrying- over times	40	CO	5	0	0	0	0	0	0	0	×	×	×
569	Second motor speed control gain	45	C5	5	×	0	×	×	×	×	×	0	×	0
570	Multiple rating setting	46	C6	5	0	0	0	0	0	0	0	0	×	×
571	Holding time at a start	47	C7	5	0	0	0	0	×	0	0	0	0	0
573	4mA input check selection	49	C9	5	0	0	0	0	×	0	0	0	0	0
574	Second motor online auto tuning	4A	CA	5	×	0	×	×	×	0	0	0	0	0
575	Output interruption detection time	4B	СВ	5	0	0	0	×	×	0	×	0	0	0
576	Output interruption detection level	4C	СС	5	0	0	0	×	×	0	×	0	0	0
577	Output interruption cancel level	4D	CD	5	0	0	0	×	×	0	×	0	0	0
611	Acceleration time at a restart	0B	8B	6	0	0	0	×	×	0	×	0	0	0
665	Regeneration avoidance frequency gain	41	C1	6	0	0	0	×	×	0	×	0	0	0
684	Tuning data increments switchover	54	D4	6	×	0	0	0	0	0	0	0	0	0
800	Control method selection	00	80	8	0	0	0	0	0	0	0	0	0	0
802	Pre-excitation selection AP	02	82	8	×	×	0	×	×	×	×	0	0	0
803	Constant power range torque characteristic selection	03	83	8	×	×	0	0	0	0	0	0	0	0
804	Torque command source selection	04	84	8	×	×	×	0	×	×	0	0	0	0
805	Torque command value (RAM)	05	85	8	×	×	×	0	×	×	0	×	0	0
806	Torque command value (RAM,EEPROM)	06	86	8	×	×	×	0	×	×	0	0	0	0
807	Speed limit selection	07	87	8	×	×	×	0	×	×	0	0	0	0
808	Forward rotation speed limit	08	88	8	×	×	×	0	×	×	0	0	0	0
809	Reverse rotation speed limit	09	89	8	×	×	×	0	×	×	0	0	0	0
810	Torque limit input method selection	0A	8A	8	×	×	0	×	0	0	×	0	0	0
811	Set resolution switchover	0B	8B	8	0	0	0	0	0	0	0	0	0	0
812	Torque limit level (regeneration)	0C	8C	8	×	×	0	×	0	0	×	0	0	0
813	Torque limit level (3rd quadrant)	0D	8D	8	×	×	0	×	0	0	×	0	0	0
814	Torque limit level (4th quadrant)	0E	8E	8	×	×	0	×	0	0	×	0	0	0
815	Torque limit level 2	0F	8F	8	×	×	0	×	0	0	×	0	0	0
816	Torque limit level during acceleration	10	90	8	×	×	0	×	0	0	×	0	0	0

			Control Mode-based Correspondence Table *2  Advanced Vector control Real sensorles										F *3	ear *3
Param	Name			0		Advanced	Ve	ctor cont	rol		nsorless	Cop	r Clea	er Cle
eter		Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
817	Torque limit level during deceleration	11	91	8	×	×	0	×	0	0	×	0	0	0
818	Easy gain tuning response level setting	12	92	8	×	×	0	×	0	0	×	0	0	0
819	Easy gain tuning selection	13	93	8	×	×	0	×	0	0	×	0	×	0
820	Speed control P gain 1	14	94	8	×	×	0	×	0	0	×	0	0	0
821	Speed control integral time 1	15	95	8	×	×	0	×	0	0	×	0	0	0
822	Speed setting filter 1	16	96	8	×	×	0	0	×	0	0	0	0	0
823	Speed detection filter 1 AP	17	97	8	×	×	0	0	0	X	×	0	0	0
824	Torque control P gain 1	18	98	8	×	×	0	0	0	0	0	0	0	0
825	Torque control integral time 1	19	99	8	×	×	0	0	0	0	0	0	0	0
826	Torque setting filter 1	1A	9 <i>A</i>	8	×	×	0	0	0	0	0	0	0	0
827	Torque detection filter 1	1B	9B	8	×	×	0	0	0	0	0	0	0	0
828	Model speed control gain	1C	9C	8	×	×	0	×	0	0	×	0	0	0
830	Speed control P gain 2	1E	9E	8	×	×	0	X	0	0	×	0	0	0
831	Speed control integral time 2	1F	9F	8	×	×	0	×	0	0	×	0	0	0
832	Speed setting filter2	20	A0	8	×	×	0	0	X	0	0	0	0	0
833	Speed detection filter 2 AP	21	A1	8	×	×	0	×	0	×	×	0	0	0
834	Torque control P gain 2	22	A2	8	×	×	0	0	0	0	0	0	0	0
835	Torque control integral time 2	23	A3	8	×	×	0	0	0	0	0	0	0	0
836	Torque setting filter2	24	A4	8	×	×	0	0	0	0	0	0	0	0
837	Torque detection filter 2	25	A5	8	×	×	0	0	0	0	0	0	0	0
840	Torque bias selection AP	28	A8	8	×	X	0	X	×	X	×	0	0	0
841	Torque bias 1 AP	29	A9	8	×	×	0	×	×	×	×	0	0	0
842	Torque bias 2 AP	2A	AA	8	×	×	0	×	×	×	×	0	0	0
843	Torque bias 3 AP	2B	AB	8	×	×	0	×	×	×	×	0	0	0
844	Torque bias filter AP	2C	AC	8	×	×	0	×	×	×	×	0	0	0
845	Torque bias operation time	2D	AD	8	×	×	0	×	×	×	×	0	0	0
846	Torque bias balance compensation AP	2E	AE	8	×	×	0	×	×	×	×	0	0	0
847	Fall-time torque bias terminal 1 bias AP	2F	AF	8	×	×	0	×	×	×	×	0	0	0
848	Fall-time torque bias terminal 1 gain AP	30	В0	8	×	×	0	×	×	×	×	0	0	0
849	Analog input off set adjustment	31	B1	8	0	0	0	0	0	0	0	0	0	0
850	Control operation selection	32	В2	8	×	×	×	×	×	0	0	0	0	0
853	Speed deviation time AP	35	B5	8	×	×	0	×	×	×	×	0	0	0
854	Excitation ratio	36	В6	8	×	×	0	0	0	0	0	0	0	0
858	Terminal 4 function assignment	3A	BA	8	0	0	0	0	0	0	0	0	×	0
859	Torque current	3B	BB	8	×	0	0	0	0	0	0	0	×	0
860	Second motor torque current	3C	ВС	8	×	0	×	×	×	0	0	0	×	0
862	Notch filter time constant	3E	BE	8	×	×	0	×	0	0	×	0	0	0
863	Notch filter depth	3F	BF	8	×	×	0	×	0	0	×	0	0	0
864	Torque detection	40	C0	8	×	×	0	0	0	0	0	0	0	0
865	Low speed detection	41	C1	8	×	×	0	0	0	0	0	0	0	0
866	Torque monitoring reference	42	C2	8	×	0	0	0	0	0	0	0	0	0
867	AM output filter	43	СЗ	8	0	0	0	0	0	0	0	0	0	0

			truct		1 Control Mode-based Correspondence Table *2								r *3	ear *3
Param				_		Advanced	Ve	ctor cont	trol			Cop	Clea	ı
eter	Name	Read	Write	Extended	V/F Control	magnetic flux vector control	Speed control	Torque control	Position control	Speed control	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear *3
868	Terminal 1 function assignment	44	C4	8	0	0	0	0	0	0	0	0	×	0
872	Input phase failure protection selection	48	C8	8	0	0	0	0	0	0	0	0	0	0
873	Speed limit AP	49	C9	8	×	×	0	×	×	×	×	0	0	0
874	OLT level setting	4A	CA	8	×	×	0	×	0	0	×	0	0	0
875	Fault definition	4B	СВ	8	0	0	0	0	×	0	0	0	0	0
877	Speed feed forward control/ model adaptive speed control selection	4D	CD	8	×	×	0	×	0	0	×	0	0	0
878	Speed feed forward filter	4E	CE	8	×	×	0	×	0	0	×	0	0	0
879	Speed feed forward torque limit	4F	CF	8	×	×	0	×	0	0	×	0	0	0
880	Load inertia ratio	50	D0	8	×	×	0	×	0	0	×	0	0	0
881	Speed feed forward gain	51	D1	8	×	×	0	×	0	0	×	0	0	0
882	Regeneration avoidance operation selection	52	D2	8	0	0	0	×	×	0	×	0	0	0
883	Regeneration avoidance operation level	53	D3	8	0	0	0	×	×	0	×	0	0	0
884	Regeneration avoidance at deceleration detection sensitivity	54	D4	8	0	0	0	×	×	0	×	0	0	0
885	Regeneration avoidance compensation frequency limit value	55	D5	8	0	0	0	×	×	0	×	0	0	0
886	Regeneration avoidance voltage gain	56	D6	8	0	0	0	×	×	0	×	0	0	0
888	Free parameter 1	58	D8	8	0	0	0	0	0	0	0	0	×	×
889	Free parameter 2	59	D9	8	0	0	0	0	0	0	0	0	×	×
891	Cumulative power monitor digit shifted times	5B	DB	8	0	0	0	0	0	0	0	0	0	0
892	Load factor	5C	DC	8	0	0	0	0	0	0	0	0	0	0
893	Energy saving monitor reference (motor capacity)	5D	DD	8	0	0	0	0	0	0	0	0	0	0
894	Control selection during commercial power-supply operation	5E	DE	8	0	0	0	0	0	0	0	0	0	0
895	Power saving rate reference value	5F	DF	8	0	0	0	0	0	0	0	0	0	0
896	Power unit cost	60	E0	8	0	0	0	0	0	0	0	0	0	0
897	Power saving monitor average time	61	E1	8	0	0	0	0	0	0	0	0	0	0
898	Power saving cumulative monitor clear	62	E2	8	0	0	0	0	0	0	0	0	×	0
899	Operation time rate (estimated value)	63	E3	8	0	0	0	0	0	0	0	0	0	0
C0 (900)	FM terminal calibration	5C	DC	1	0	0	0	0	0	0	0	0	×	0
C1 (901)	AM terminal calibration	5D	DD	1	0	0	0	0	0	0	0	0	×	0
C2 (902)	Terminal 2 frequency setting bias frequency	5E	DE	1	0	0	0	0	0	0	0	0	×	0
C3 (902)	Terminal 2 frequency setting bias	5E	DE	1	0	0	0	0	0	0	0	0	×	0
125 (903)	Terminal 2 frequency setting gain frequency	5F	DF	1	0	0	0	0	0	0	0	0	×	0

		Instruction Code *1 Control Mode-based Correspondence Table *2									y *3	ar *3	ear *3	
Param	Name			pa		Advanced magnetic	Ve	ctor con	trol		nsorless	ır Cop	ar Cle	ter Cl
eter		Read	Write	Extended	V/F Control	flux vector control	Speed control	Torque control	Position control	Speed	Torque control	Parameter Copy	Parameter Clear *3	All Parameter Clear
C4 (903)	Terminal 2 frequency setting gain	5F	DF	1	0	0	0	0	0	0	0	0	×	0
C5 (904)	Terminal 4 frequency setting bias frequency	60	E0	1	0	0	0	0	0	0	0	0	×	0
C6 (904)	Terminal 4 frequency setting bias	60	E0	1	0	0	0	0	0	0	0	0	×	0
126 (905)	Terminal 4 frequency setting gain frequency	61	E1	1	0	0	0	0	0	0	0	0	×	0
C7 (905)	Terminal 4 frequency setting gain	61	E1	1	0	0	0	0	0	0	0	0	×	0
C12 (917)	Terminal 1 bias frequency (speed)	11	91	9	×	×	0	0	0	0	0	0	×	0
C13 (917)	Terminal 1 bias frequency (speed)	11	91	9	×	×	0	0	0	0	0	0	×	0
C14 (918)	Terminal 1 gain frequency (speed)	12	92	9	×	×	0	0	0	0	0	0	×	0
C15 (918)	Terminal 1 gain (speed)	12	92	9	×	×	0	0	0	0	0	0	×	0
C16 (919)	Terminal 1 bias command (torque/magnetic flux)	13	93	9	×	×	0	0	0	0	0	0	×	0
C17 (919)	Terminal 1 bias (torque/ magnetic flux)	13	93	9	×	×	0	0	0	0	0	0	×	0
C18 (920)	Terminal 1 gain command (torque/magnetic flux)	14	94	9	×	×	0	0	0	0	0	0	×	0
C19 (920)	Terminal 1 gain (torque/ magnetic flux)	14	94	9	×	×	0	0	0	0	0	0	×	0
C38 (932)	Terminal 4 bias command (torque/magnetic flux)	20	Α0	9	×	×	0	0	0	0	0	0	×	0
C39 (932)	Terminal 4 bias (torque/ magnetic flux)	20	Α0	9	×	×	0	0	0	0	0	0	×	0
C40 (933)	Terminal 4 gain command (torque/magnetic flux)	21	A1	9	×	×	0	0	0	0	0	0	×	0
C41 (933)	Terminal 4 gain (torque/ magnetic flux)	21	A1	9	×	×	0	0	0	0	0	0	×	0
989	Parameter copy alarm release	59	D9	9	0	0	0	0	0	0	0	0	×	0
990	PU buzzer control	5A	DA	9	0	0	0	0	0	0	0	0	0	0
991	PU contrast adjustment	5B	DB	9	0	0	0	0	0	0	0	0	×	0

\*The manual number is given on the bottom left of the back cover.

Print Date	*Manual Number	Revision
Sep., 2005	IB(NA)-0600255ENG-A	First edition

### **A** For Maximum Safety

- Mitsubishi inverters are not designed or manufactured to be used in equipment or systems in situations that can affect or endanger human life.
- When considering this product for operation in special applications such as machinery or systems used in passenger transportation, medical, aerospace, atomic power, electric power, or submarine repeating applications, please contact your nearest Mitsubishi sales representative.
- Although this product was manufactured under conditions of strict quality control, you are strongly advised
  to install safety devices to prevent serious accidents when it is used in facilities where breakdowns of the
  product are likely to cause a serious accident.
- Please do not use this product for loads other than three-phase induction motors.

# FR-A700 Series Instruction Manual Supplement

 Please make corrections to the error about rated inverter output current in the section "Inverter rating" in this manual (applied).

	Wrong						Correct							
		FR-A720- 00050-NA	FR-A740- 09620-NA				FR-A720- 00050-NA	FR-A740- 09620-NA						
	SLD	7.7	1212 (1030)			SLD	7.1	1212 (1030)						
Rated current	LD	7.0	1094 (929)		Rated current	LD	6.5	1094 (929)						
(A)	ND	5	962 (817)	_	(A)	ND	5	962 (817)						
	HD	3	820 (697)			HD	3	866 (736)						

#### 2. Precautions for selecting multiple rating (Pr.570)

- (1) LD (Pr. 570 ="1") and SLD (Pr. 570 ="0") are valid only for V/F control. This parameter can be set only when "9999" is set in Pr.80, Pr.81, Pr.453, and Pr.454.
- (2) For PWM carrier frequency automatic reduction function, the following should be noted.

Multiple ration	ng ( <i>Pr.570</i> )	PWM carrier frequency automatic reduction *
0	SLD	valid
1	LD	Pr.260 = "0" : invalid Pr.260 = "1" (initial setting) : valid
2(initial setting)	ND	invalid
3	HD	invalid

<sup>\*</sup> When continuous operation is performed at 85% or more of the inverter rated current with the carrier frequency of the inverter set to 3kHz or more (*Pr.*72 > "2"), the carrier frequency is automatically reduced to 2kHz to protect the output transistor of the inverter.(Motor noise increases, but it is not a failure)

#### 3. When using multi-pole motor

- (1) Specially when using a multi-pole motor with more than 8 poles under vector control (with encoder, real sensorless), adjust speed control P gain (Pr.820) and torque control P gain (Pr.824) according to the motor referring to the following methods.
  - \* For speed control P gain *Pr.820*, increasing the setting value improves the response level, but a too large gain will produce vibration and/or unusual noise.
  - \* For torque control P gain Pr.824, note that a too low value will produce current ripples, causing the motor to generate sound synchronizing the cycle of current ripples.

#### **Adjustment method**

No.	Phenomenon/Condition	Adjustment Method
1	The motor rotation is unstable in the low speed range.	Set a higher value in $Pr.820$ Speed control $P$ gain according to the motor inertia. Since the self inertia of a multi-pole motor tends to become large, make adjustment to improve the unstable phenomenon, then make fine adjustment in consideration of the response level using that setting as reference. In addition, when performing vector control with encoder, gain adjustment according to the inertia can be easily done using easy gain tuning $(Pr.819 = 1)$ .
2	Speed trackability is poor	Set a higher value in Pr.820 Speed control P gain.
3	Speed variation at the load fluctuation is large	Increase the value 10% by 10% until just before vibration or unusual noise is produced, and set about 0.8 to 0.9 of that value. If you cannot make proper adjustment, increase the value of $Pr.821$ Speed control integral time double by double and make adjustment of $Pr.820$ again.
4	Torque becomes insufficient or torque ripple occurs at starting or in the low speed range under real sensorless vector control.	Set the speed control gain a little higher. (same as No. 1) If the problem still persists after gain adjustment, increase <i>Pr.13 Start frequency</i> or set the acceleration time shorter if the inverter is starting to avoid continuous operation in the ultra low speed range.
5	Unusual motor and machine vibration, noise or overcurrent occurs.	Set a lower value in <i>Pr.824 Torque control P gain</i> .  Decrease the value 10% by 10% until just before the
6	Overcurrent or overspeed (E.OS) occurs at a start under real sensorless vector control.	phenomenon is improved, and set about 0.8 to 0.9 of that value.

(2) Enough torque may not be generated in the ultra-low speed range less than approx. 2 Hz when performing real sensorless vector control. The guideline of speed control range is as shown below.

Driving: 1:200 (2, 4, 6 poles) Can be used at 0.3 Hz or more at rated 60 Hz

1:30 (8, 10 poles) Can be used at 2 Hz or more at rated 60 Hz

Regeneration: 1:12 (2 to 10 poles) Can be used at 5 Hz or more at rated 60 Hz

#### 4. Clearing of flash memory for PLC function

Setting 9696 in Pr.498 clears flash memory used for PLC function.

rameter umber	Name	Initial Value	Setting Range	Description
	DI C function flesh			9696: Flash memory clear
498	PLC function flash memory clear	0	0 to 9999	Other than 9696:
	memory clear			Flash memory is not cleared

- · For *Pr.498*, always 0 is read independently of the written value.
- When you can not remember a key word for PLC function (register function by GX developer), clearing flash memory using *Pr.498* cancels the key word.
- Clearing flash memory is enabled only when the PLC function is invalid (*Pr.414* =0).

#### CAUTION ——

- · Since executing this function clears a program of the PLC function and all PLC parameters, write a program and PLC parameters again.
- As it takes about 5s for clearing of flash memory, do not perform inverter reset nor switch power off for 5s after writing 9696 in Pr.498. If the inverter reset or power off occurs in 5s, write 9696 in Pr.498 again.

## **MEMO**