

MITSUBISHI ELECTRIC
General-Purpose AC Servo
MELSERVO-J4

Model
 MR-CV11K to MR-CV55K
 MR-CV11K4 to MR-CV75K4
 MR-CR55K/MR-CR55K4
 MR-J4-DU700_4 to MR-J4-DU37K
 MR-J4-DU700_4 to MR-J4-DU55K_4

Instructions and Cautions for Safe Use of AC Servos

Country/Region	Sales office	Tel/Fax
USA	Mitsubishi Electric Automation, Inc. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.	Tel : +1-847-478-2100 Fax : +1-847-478-2253
Germany	Mitsubishi Electric Europe B.V. German Branch Mitsubishi-Electric-Platz 1, 40862 Ratingen, Germany	Tel : +49-2102-486-0 Fax : +49-2102-486-1120
China	Mitsubishi Electric Automation (China) Co., Ltd. Mitsubishi Electric Automation Center, No.1386 Hongqiao Road, Shanghai, China	Tel : +86-21-3323-3030 Fax : +86-21-3323-3030
Korea	Mitsubishi Electric Automation Korea Co., Ltd. 7F-9F, Gangseo Hangang Ji-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea	Tel : +82-2-3660-6510 Fax : +82-2-3664-8372/2835
Japan	Mitsubishi Electric Corporation Tokyo Building, 2-7-3, Marunouchi, Chiyoda-ku, Tokyo 100-8310, Japan	Tel : +81-3-3218-2111

MITSUBISHI ELECTRIC CORPORATION
 HEAD OFFICE: TOKYO BLDG MARUNOUCHI TOKYO 100-8310

IB(NA)0300228-F(2008)MEE Specifications are subject to change without notice.

Copyright©2014 Mitsubishi Electric Corporation All Rights Reserved.

Contents of the package
 Unpack the product and check the rating plate to see if the servo amplifier is as you ordered.

(1) Converter unit		(2) Drive unit	
Contents	Quantity	Contents	Quantity
Converter unit	1	Drive unit	1
Eyebolt (55 kW or more)	2	Eyebolt (30 kW or more)	2
Connector set (Note)	1	Eyebolt (30 kW or more)	1
MR-CV/MR-CR/MR-J4-DU Instructions and Cautions for Safe Use of AC Servos (this guide)	1	MR-CV/MR-CR/MR-J4-DU Instructions and Cautions for Safe Use of AC Servos (this guide)	1

Note: A connector set for CN23 is packed together with MR-CV. A connector set for CN1 is packed together with MR-CR.

Rating plate
 The following shows an example of rating plate for explanation of each item.

Converter unit		Drive unit	
Model	MR-CR55K	Model	MR-J4-DU30KB
Capacity	55 kW	Capacity	30 kW
Rated output	37 kW	Rated output	20 kW
Rated current	110 A	Rated current	60 A
Rated voltage	200 V AC	Rated voltage	200 V AC
IP rating	IP20	IP rating	IP20
Year and month of manufacture	2014-03	Year and month of manufacture	2014-03
Country of origin	Japan	Country of origin	Japan

Warning plate
 The following shows an example of warning plate.

WARNING
 警告
 本製品は、誤った取り扱いにより、人身の死傷や財産の損失を招く恐れがあります。必ず本製品の取扱説明書（マニュアル）を厳密に読み、取り扱いにあたっては、必ずその指示に従ってください。

CAUTION
 注意
 本製品は、誤った取り扱いにより、人身の死傷や財産の損失を招く恐れがあります。必ず本製品の取扱説明書（マニュアル）を厳密に読み、取り扱いにあたっては、必ずその指示に従ってください。

1. About the manuals
 To use the MELSERVO-J4 series safely, read each instruction manual carefully. Converter units and drive units are written as servo amplifiers in this guide under certain circumstances.

1.1 MELSERVO-J4 relevant manuals
 This installation guide explains how to mount MR-J4 servo amplifiers. You can also check it with our website for free. <http://www.mitsubishielectric.com/faq/>
 If you have any questions about the operation or programming of the equipment described in this guide, contact your local sales office.
 In addition, when you mount a protective device, specific technical skills which are not detailed in the guide will be required.

1.2 Purpose of this guide
 This installation guide explains the safe operation of MR-J4 servo amplifiers for engineers of machinery manufacturers and machine operators. This installation guide does not explain how to operate machines in which safety servo system is, or will be integrated. For detailed information of the products, refer to each servo amplifier instruction manual.

1.3 Terms related to safety
1.3.1 IEC 61800-5-2 Stop function
 STO function (Refer to IEC 61800-5-2: 2007 4.2.2.2 STO)
 MR-J4 servo amplifiers have the STO function. The STO function shuts down energy to servo motors, thus removing torque. This function electrically cuts off power supply to the servo amplifier.

2. About safety
 This chapter explains safety of users and machine operators. Please read the chapter carefully before mounting the equipment. In this installation guide, the specific warnings and cautions levels are classified as follows.

WARNING Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

CAUTION Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight injury to personnel or may cause physical damage.

2.1 Professional engineer
 Only professional engineers should mount MR-J4 servo amplifiers.
 Here, professional engineers should meet all the conditions below:
 (1) Persons who took a proper training of related work of electrical equipment or persons who can avoid risk based on past experience.
 (2) Persons who have read and familiarized himself/herself with this installation guide and operating manuals for the protective devices (e.g. light curtain) connected to the safety control system.

2.2 Applications of the devices
 MR-J4 servo amplifiers comply with the following standards.
 IEC/EN ISO 13849-1: 2015 Category 3 PL e, IEC/EN 62061 SIL CL 3, IEC/EN 61800-5-2 (STO), IEC/EN 61800-5-1/IGB 12668.501, IEC/EN/KN 61800-3/GB 12668.3, IEC/EN 62024-1
 MR-J4 servo amplifiers can be used with the MR-D30 functional safety unit, MR-J3-D05 safety logic unit, or safety PLCs. For combinations of the servo amplifiers and MR-D30, refer to "MR-D30 Instruction Manual". For combinations of the servo amplifiers and MR-J3-D05, refer to each servo amplifier instruction manual.

2.3 Correct use
 Use the MR-J4 servo amplifiers with specifications. Refer to each instruction manual for specifications such as voltage, temperature, etc. Mitsubishi Electric Co. accepts no claims for liability if the equipment is used in any other way or if modifications are made to the device, even in the context of mounting and installation.

WARNING
 If you need to get close to the moving parts of the machine for inspection or others, ensure safety by confirming the power off, etc. Otherwise, it may cause an accident.
 It takes 20 minutes maximum for capacitor discharging. Do not touch the unit and terminals immediately after power off.

2.3.1 Selection of peripheral equipment and wire
 The followings are selected based on IEC/EN 61800-5-1, UL 508C, and CSA C22.2 No. 274.
 (1) Local wiring and crimping tool
 The following table shows the stranded wire sizes [AWG] and the crimp terminal symbols rated at 75 °C/60 °C.

Table 1. Recommended wire

Converter unit	75 °C/60 °C stranded wire [AWG] (Note 2)			Drive unit	75 °C/60 °C stranded wire [AWG] (Note 2)		
	L1/L2/L3 (Note 3)	L+L- (Note 3)	L+L- (Note 3)		L1/L2/L3 (Note 3)	L+L- (Note 3)	L+L- (Note 3)
MR-CV11K (Note 1)	8: 16W	-	-	MR-J4-DU700 (Note 1)	8: 0.6	-	-
MR-CV18K (Note 1)	8: 16W	-	-	MR-J4-DU300 (Note 1)	8: 0.6	-	-
MR-CV30K (Note 1)	2: 17/10	-	-	MR-J4-DU11K (Note 1)	4: e/2	-	-
MR-CV37K (Note 1)	1/0: 17/10	-	-	MR-J4-DU15K (Note 1)	2: a/10	-	-
MR-CV45K (Note 1)	1/0: 7/2	-	-	MR-J4-DU22K (Note 1)	1/0: 7/2	-	-
MR-CV55K (Note 1)	3/0: 3/4	-	-	MR-J4-DU30K (Note 1)	2: 0.6	-	-
MR-CV11K4 (Note 1)	1/0: 17/10	-	-	MR-J4-DU37K (Note 1)	2: 2/10 (Note 4)	-	-
MR-CV18K4 (Note 1)	8: 16W	-	-	MR-J4-DU37K (Note 1)	-	-	-
MR-CV30K4 (Note 1)	6: 14W	14: g/14: g	-	MR-J4-DU700 (Note 1)	8: 0.6	-	-
MR-CV37K4 (Note 1)	4: 12W	-	-	MR-J4-DU300 (Note 1)	8: 0.6	-	-
MR-CV45K4 (Note 1)	4: 12W	-	-	MR-J4-DU11K (Note 1)	8: 0.6	-	-
MR-CV55K4 (Note 1)	2: 17/10	-	-	MR-J4-DU15K (Note 1)	6: 16W	-	-
MR-CV11K4 (Note 1)	1/0: 7/2	-	-	MR-J4-DU22K (Note 1)	4: e/2	-	-
MR-CR55K (Note 1)	2 × 2/10: d (Note 4)	-	-	MR-J4-DU30K (Note 1)	3: e/2	-	-
MR-CR55K4 (Note 1)	2: 2/10	-	-	MR-J4-DU37K (Note 1)	2: 7/1	-	-
				MR-J4-DU55K (Note 1)	1/0: d/10	-	-
				MR-J4-DU55K (Note 1)	1/0: d/20	-	-

Note: 1. To connect these models to a terminal block, be sure to use the screws that come with the terminal block.
 2. Alphabets in the table indicate crimping tools. For crimp terminals and applicable tools, refer to table 2.
 3. Select wire size depending on the rated output of the servo motors. The values in the table are sizes based on rated output of the servo amplifiers.
 4. When the rated current is less than 175 A, 2/0: d can also be used.

Table 2. Recommended crimp terminal

Symbol	Servo amplifier-side crimp terminals	Applicable tool	Manufacturer
a	FVDS-S-10	YNT-1210S	JST (U.S.T. Mfg. Co., Ltd.)
b	FVDS-10	YF-1E-4	JST (U.S.T. Mfg. Co., Ltd.)
c (Note 1)	R38-10	YF-1E-4	JST (U.S.T. Mfg. Co., Ltd.)
d (Note 1)	R60-10	YPT-60-21	JST (U.S.T. Mfg. Co., Ltd.)
e	FVDS-2	YF-1E-4	JST (U.S.T. Mfg. Co., Ltd.)
f (Note 1)	R38-9	YPT-60-21	JST (U.S.T. Mfg. Co., Ltd.)
g	FVDS-4	YNT-1210S	JST (U.S.T. Mfg. Co., Ltd.)

Note: 1. Coat the crimping part with an insulation tape.
 2. Some crimp terminals may not be mounted depending on their sizes. Make sure to use the recommended ones or equivalent ones.

(2) Selection example of MCCB and fuse
 Use a fuse (T class) or the molded-case circuit breaker (UL 489 Listed MCCB) indicated in the table below. The T class fuses and molded-case circuit breakers in the table are selected examples based on rated I/O of the servo amplifiers. When you select a smaller capacity servo motor to connect to the servo amplifier, you can also use smaller capacity T class fuses or molded-case circuit breaker than ones in the table. For selecting ones other than Class T fuses and molded-case circuit breaker, refer to each servo amplifier instruction manual.

Converter unit	Molded-case circuit breaker (240 V AC) (300 V)	Fuse (300 V)
MR-CV11K	MF100-CV-FU-60A (100 A frame 60 A)	60 A
MR-CV18K	MF100-CV-FU-100A (100 A frame 100 A)	100 A
MR-CV30K	MF225-CV-FU-120A (125 A frame 150 A)	225 A
MR-CV37K	MF225-CV-FU-200A (225 A frame 200 A)	300 A
MR-CV45K	MF225-CV-FU-225A (225 A frame 225 A)	350 A
MR-CV55K	MF400-SKW-300A (400 A frame 300 A)	400 A
MR-CR55K	MF225-CV-FU-175A (225 A frame 175 A)	300 A

(3) Power supply
 This servo amplifier can be used on the condition of overvoltage category III set forth in IEC/EN 60664-1. For the interface power supply, use an external 24 V DC power supply with reinforced insulation on I/O terminals.

(4) Grounding
 To prevent an electric shock, always connect the protective earth (PE) terminal (marked ⊕) of the servo amplifier to the protective earth (PE) of the cabinet. Do not connect two grounding cables to the same protective earth (PE) terminal. Always connect cables to the terminals one-to-one. This product can cause a DC current in the protective earthing conductor. Where a residual current-operated protective (RCD: earth-leakage current breaker) device is used for protection in case of direct or indirect contact, only an RCD of Type B is allowed on the supply side of this product.

(5) Motor overload and over-temperature protection
 Servo motors do not have the overheat protection function of own. The servo motors are protected by the servo motor overheat protection function of the servo amplifiers (a protection characteristic based on 120 % of the rated current). To provide the servo motor with overheat protection, use a magnetic contactor (electromagnetic switch) with a thermal relay. Alternatively, install a thermal sensor or equivalent equipment near the rating plate of the servo motor to check that the servo motor temperature is under 105 °C with sensing device. (Refer to Chapter 4)

2.3.2 EU compliance
 The EC directives were issued to standardize the regulations of the EU countries and ensure smooth distribution of safety-guaranteed products. The CE marking proves the compliance of the manufacturer with the EC directives, and this marking also applies to machines and equipment incorporating servos.

(1) EMC requirement
 MR-J4 servo amplifiers comply with IEC 61800-3. As for I/O wires (max. length 10 m. However, 3 m for STO cable for CN8), and encoder cables (max. length 50 m), use shielded wires and ground the shields. Install an EMC filter and surge protector on the primary side of the servo amplifier. In addition, use a line noise filter for outputs of the servo amplifiers. The following shows recommended products.
 EMC filter: HF 2000A UL series, TF30C-C-TX series, COSEL FTB series
 Surge protector: Okaya Electric Industries RSD series Line noise filter: Mitsubishi Electric FR-BIF
 The MR-J4 series is not intended to be used with low-voltage distribution lines for household. If it is used in such an environment, radio frequency interference may be generated. The installer shall provide a guide for installation and use, including recommended mitigation devices. To avoid the risk of cross-talk to signal cables, the installation instructions shall either recommend that the power interface cable be segregated from signal cables.

(2) For Declaration of Conformity (DoC)
 MITSUBISHI ELECTRIC EUROPE B.V. hereby declares that the servo amplifiers are in compliance with EC directives (Machinery directive (2006/42/EC), EMC directive (2014/30/EU), Low voltage directive (2014/35/EU), and RoHS directive (2011/65/EU)). For the copy of Declaration of Conformity, contact your local sales office.

2.3.3 USA/Canada compliance
 This servo amplifier is designed in compliance with UL 508C and CSA C22.2 No. 274.

(1) Installation
 The minimum cabinet size is 150% of each MR-J4 servo amplifier's volume. Also, design the cabinet so that the ambient temperature in the cabinet is 55 °C or less. The servo amplifier must be installed in a metal cabinet. Additionally, mount the servo amplifier on a cabinet that meets the standard of IEC/EN 60204-1 is correctly connected. For environment, the units should be used in open type (UL 50) and overvoltage category shown in table in chapter 8. The servo amplifier needs to be installed at or below pollution degree 2. Use only copper wires or copper bus bars for wiring.

(2) Short-circuit current rating (SCCR)
 Suitable For Use On A Circuit Capable Of Delivering Not More Than 100 kA rms Symmetrical Amperes, 500 Volts Maximum.

(3) Branch circuit protection
 For installation in United States, branch circuit protection must be provided, in accordance with the National Electrical Code and any applicable provincial codes.
 For installation in Canada, branch circuit protection must be provided, in accordance with the Canada Electrical Code and any applicable provincial codes.

2.3.4 South Korea compliance (MR-CR55K(4) and 30 kW or more of MR-J4-DU)
 This product complies with the Radio Waves Act (KC mark) Please note the following to use the product.
 이 기기는 업무용 (A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
 (The product is for business use (Class A) and meets the electromagnetic compatibility requirements. The seller and the user must note the above and use the product in a place except for home.)
 In addition, use an EMC filter, surge protector, ferrite core, and line noise filter on the primary side for inputs. Use a ferrite core and line noise filter for outputs. Use a distance greater than 30 m between the product and third party sensitive radio communications.

2.4 General cautions for safety protection and protective measures
 Observe the following items to ensure proper use of the MR-J4 servo amplifiers.

(1) For safety components and installing systems, only qualified personnel and professional engineers should perform.
 (2) When mounting, installing, and using the MR-J4 servo amplifier, always observe standards and directives applicable in the country.

2.5 Residual risk
 (1) Be sure that all safety related switches, relays, sensors, etc., meet the required safety standards.
 (2) Perform all risk assessments and safety level certification to the machine or the system as a whole.
 (3) If the upper and lower power modules in the servo amplifier are shorted and damaged simultaneously, the servo motor may make a half revolution at a maximum.
 (4) Only qualified personnel are authorized to install, start-up, repair or adjust the machines in which these components are installed. Only trained engineers should install and operate the equipment. (ISO 13849-1: 2015 Table F.1 No. 5)
 (5) Separate the wiring for safety observation function from other signal wirings. (ISO 13849-1: 2015 Table F.1 No. 1)
 (6) Protect the cables with appropriate ways (routing them in a cabinet, using a cable guard, etc.).
 (7) Keep the required clearance/creepage distance depending on voltage you use.

2.6 Disposal
 Disposal of unusable or irreparable devices should always occur in accordance with the applicable country-specific waste disposal regulations. (Example: European Waste 16 02 14)

2.7 Lithium battery transportation
 To transport lithium batteries, take actions to comply with the instructions and regulations such as the United Nations (UN), the International Civil Aviation Organization (ICAO), and the International Maritime Organization (IMO). The batteries (MR-BATV1SET, MR-BATV1, and MR-BATV1) are assembled batteries from two batteries (lithium metal battery CR17335A) and are not subject to the dangerous goods (Class 9) of the UN Recommendations.


3. Mounting/dismounting
 Installation direction and clearances

CAUTION
 The devices must be installed in the specified direction. Not doing so may cause a malfunction.
 Mount the servo amplifier on a cabinet which meets IP54 in the correct vertical direction to maintain pollution degree 2.

4. Electrical Installation and configuration diagram


WARNING
 Turn off the molded-case circuit breaker (MCCB) to avoid electrical shocks or damages to the product before starting the installation or wiring.

CAUTION
 The installation complies with IEC/EN 60204-1. The voltage supply to machines must be 20 ms or more of tolerance against instantaneous power failure as specified in IEC/EN 60204-1.
 Connecting a servo motor of the wrong axis to U, V, W, or CN2, of the servo amplifier may cause a malfunction.
 Securely connect the cables in the specified method and tighten them with the specified torque. Otherwise, the servo motor may operate unexpectedly.

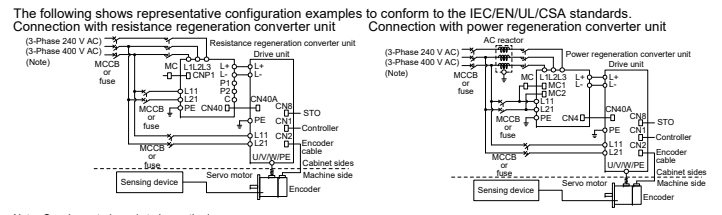

Note: Supply neutral needs to be earthed.
 The connectors described by rectangles are safely separated from the main circuits described by circles. The connected motors will be limited as follows.
 (1) HG/HF/HC/HA series servo motors (Mfg.: Mitsubishi Electric)
 (2) Using a servo motor complied with IEC 60034-1 and Mitsubishi Electric encoder (OBA, OSA)

 5. Signals
 5.1 Signal
 The following shows MR-J4-DU30KB signals as a typical example. For other servo amplifiers, refer to each servo amplifier instruction manual.



5.3 Signals and STO state
 The following table shows the STO1 and STO2 states when the power is on in normal state and STO1 and STO2 are on (closed) or off (opened).

STO1	STO2	Monitoring STO1 state	Monitoring STO2 state
OFF	OFF	ON (STO state)	ON (STO state)
OFF	ON	ON (STO state)	OFF (STO release)
ON	OFF	OFF (STO release)	ON (STO state)
ON	ON	OFF (STO release)	OFF (STO release)

6. Maintenance and service
WARNING
 To avoid an electric shock, only qualified personnel should attempt inspections. For repair and parts replacement, contact your local sales office.

6.1 Inspection items
 It is recommended that the following points periodically be checked.
 (1) Check for loose terminal block screws. Retighten any loose screws.

Part name	Life guideline	
	10 years (Note 3)	10 years (Note 3)
Smoothing capacitor	0 to 55 Class 3K3 (IEC/EN 60721-3-3)	
Relay	Number of power-on, forced stop and controller forced stop times: 100,000 times Number of on and off for STO: 100,000 times	
Cooling fan	10,000 hours to 30,000 hours (2 years to 3 years)	
Battery backup time (Note 1)	Approximately 20,000 hours (equipment power supply, off, ambient temperature: 20 °C)	
Battery life (Note 2)	5 years from date of manufacture	

Note: 1. The time is for using MR-J4 servo amplifier with a rotary servo motor using MR-BATV1SET or MR-BATV1BJ. For details and other battery backup time, refer to each instruction manual.
 2. The characteristic of smoothing capacitor is deteriorated due to ripple currents, etc. The capacitor will be the end of its life in 10 years of continuous operation in air-conditioned environment (ambient temperature of 40 °C or less for use at the maximum 1000 m above sea level, 30 °C or less for over 1000 m to 2000 m).
 3. The characteristic of smoothing capacitor is deteriorated due to ripple currents, etc. The capacitor will be the end of its life in 10 years of continuous operation in air-conditioned environment (ambient temperature of 40 °C or less for use at the maximum 1000 m above sea level, 30 °C or less for over 1000 m to 2000 m).

6.2 Parts having service life
 Service life of the following parts is listed below. However, the service life varies depending on operating methods and environment. If any fault is found in the parts, they must be replaced immediately regardless of their service life. For parts replacement, please contact your local sales office.

Part name	Life guideline
Smoothing capacitor	0 to 55 Class 3K3 (IEC/EN 60721-3-3)
Relay	Number of power-on, forced stop and controller forced stop times: 100,000 times Number of on and off for STO: 100,000 times
Cooling fan	10,000 hours to 30,000 hours (2 years to 3 years)
Battery backup time (Note 1)	Approximately 20,000 hours (equipment power supply, off, ambient temperature: 20 °C)
Battery life (Note 2)	5 years from date of manufacture

7. Transportation and storage
 Transport the products correctly according to their mass.
 Stacking in excess of the limited number of product packages is not allowed.
 Do not hold the front cover, cables, or connectors when carrying the servo amplifier.
 Otherwise, it may drop.
 For detailed information on transportation and handling of the battery, refer to the servo amplifier instruction manual.
 Install the product in a load-bearing place of servo amplifier and servo motor in accordance with the instruction manual.
 Do not put excessive load on the machine.

When you keep or use it, please fulfill the following environment.

Item	Environment
Ambient temperature	0 to 55 Class 3K3 (IEC/EN 60721-3-3)
Relative humidity	20 to 65 Class 2K2 (IEC/EN 60721-3-2)
Vibration resistance	0 to 65 Class 1K4 (IEC/EN 60721-3-1)
IP rating	IP20 (IEC/EN 60529), Terminal block IP00
Altitude	Open type (UL 50)
IP rating	IP20 (IEC/EN 60529), Terminal block IP00
Altitude	Max. 2000 m above sea level
Transportation	Max. 10000 m above sea level

Note: In regular transport packaging

8. Technical data
8.1 Converter unit

Item	CR		CV				MR								
	55K	11K	18K	30K	37K	45K	55K	55K4	11K4	18K4	30K4	37K4	45K4	55K4	75K4
Output	270 V DC to 324 V DC														
Rated voltage	215.9														
Rated current [A]	41	76	144	144	198	238	113.8	21	38	72	82	99	119	150	
Main circuit voltage	3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz														
Main circuit current [A]	191.3														
Control circuit (line voltage)	1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz, 0.3 A														
Control circuit (line current)	1-phase														