

FieldDeviceConfigurator

Installation Instructions

Before Using the Product

Please read this document before use. Keep the document in a safe place for future reference. Make sure that the end users read the document.

For the precautions on using, refer to the following manual.

[FieldDeviceConfigurator Operating Manual\[SH-081945ENG\]](#)

Notice

- Reprinting or reproducing the part or all of the contents of this document in any form for any purpose without the permission of Mitsubishi Electric Corporation is strictly forbidden.
- Although we have made the utmost effort to follow the revisions of the software and hardware, in some cases, unsynchronized matter may occur.
- The information in this document may be subject to change without notice.

Operating Environment

Item	Contents
Personal computer	A personal computer on which Microsoft® Windows® operates
CPU	Intel® Core™2 Duo Processor 2GHz or more recommended
Required memory	64-bit OS: Recommended 2GB or more 32-bit OS: Recommended 1GB or more
Available hard disk capacity	For installation: 31.1 MB or more For operation: 512 MB or more free virtual memory capacity
Monitor	Resolution 1024 × 768 pixels or higher
OS (English version)	<ul style="list-style-type: none"> • Windows 10 (Home, Pro, Enterprise, Education, IoT Enterprise 2016 LTSC^{*1}) • Windows 8.1, Windows 8.1 (Pro, Enterprise) • Windows 8, Windows 8 (Pro, Enterprise) • Windows 7 (Starter, Home Premium, Professional, Ultimate, Enterprise) • Windows Vista® (Home Basic, Home Premium, Ultimate, Business, Enterprise)^{*2} • Windows XP® (Professional SP3, Home SP3)^{*2}

*1 64-bit version only

*2 32-bit version only

- When the following functions are used, this product may not run properly.
 - Activating the application with Windows compatible mode.
 - Simplified user switch-over
 - Remote desktop
 - Windows XP Mode
 - Windows Touch or Touch
 - Modern UI
 - Client Hyper-V
 - Tablet mode
 - Virtual Desktops
 - Unified Write Filter
- In the following cases, the screen of this product may not work properly.
 - The size of the text and/or other items on the screen are other than default (such as 96 DPI, 100%, and 9 pt).
For details, refer to the following manual.
[FieldDeviceConfigurator Operating Manual\[SH-081945ENG\]](#)
 - The resolution of the screen is changed in operation.
 - Windows theme is changed in operation.
 - The multi-display is set.
- Use the product as a standard user or an administrator for Windows 10, Windows 8.1, Windows 8, Windows 7, and Windows Vista.

Installation

■ Confirm before installation

- Log on to the personal computer as an administrator.
- Close all running applications before installation. If the product is installed while other applications are running, it may not operate normally.

■ Procedure

1. Insert the DVD-ROM (SW2DND-IQWK-CNT-A2) to the DVD-ROM drive.
2. Double-click the "winvoker.exe" in the DVD-ROM.
3. Select "Configuration Tool MELSOFT FieldDeviceConfigurator".
4. Download the compressed file, and decompress it.
5. Double-click "setup.exe" in the unzipped folder to start installation.
6. Select or enter the necessary information by following the on-screen instructions.

■ Notice

- Do not shift to the power save mode (standby, hibernate, sleep) while installing software.
- We do not guarantee those commercially available Microsoft Windows Operating System products that are introduced in this manual.
- This software's copyright is owned by Mitsubishi Electric Corporation.
- We do not take any responsibilities for the consequences of operating this product (including manual).

Uninstallation

Uninstall the application from the control panel of Windows.

Intel is either registered trademarks or trademarks of Intel Corporation in the United States and/or other countries.

Microsoft, Windows, Windows Vista, and Windows XP are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as [™] or [®] are not specified in this manual.