### Driver for MELSEC FX 485 ADP/BD

English

Svenska

© Beijer Electronics AB 2000, MA00452, 2000-06

Beijer Electronics AB reserves the right to change information in this manual without prior notice. All examples in this manual are used solely to promote understanding of how the program works and its operation. Beijer Electronics AB take no responsibility if these examples are used in real applications.

#### MELSEC FX 485 ADP/BD

This manual presents installation and handling of the driver MELSEC FX 485 ADP/BD to the terminals in the E-series.

The functionality in the E-terminals and in MAC Programmer+ are described in the E-manual.

© Beijer Electronics AB 2000, MA00452, 2000-06

Beijer Electronics AB reserves the right to change information in this manual without prior notice. All examples in this manual are used solely to promote understanding of how the program works and its operation. Beijer Electronics AB take no responsibility if these examples are used in real applications.

## Content

1 Introduction	3
2 Install and update driver	4
2.1 Installation of driver using Internet	4
2.2 Installation of driver from disk	4
3 Connecting the terminal to the	
PLC system	5
3.1 Settings in the MAC Programmer+	5
3.2 Settings in the PLC system	8
3.3 Connecting the terminal to the PLC system	9
4 Addressing	10
4.1 Mixing FX and A/AnS-series PLC system on the same	
485 network	10
4.2 Station handling	10
4.3 PLC program	11
5 Efficient communication	12
5.1 Signals affecting the communication time	12
5.2 How to make the communication more efficient	13
6 Drawings	14

## **1** Introduction

This manual describes how the PLC system is connected to the operator terminals in the E-series via the protocol MELSEC FX 485 ADP/BD and how they communicate. Addressing of an item is done in the normal MELSEC FX way. For information about the PLC system we refer to the manual for current system.

The FX 485 ADP/BD driver can be used with the MELSEC FX0N/FX2N series controllers equipped with the module 485 ADP or BD. It can also be used with MELSEC A/AnS series controllers equipped with a C24 module.

The driver uses Protocol Format 1 with checksum control for the communication with the PLC system.

## 2 Install and update driver

When installing MAC Programmer+ the drivers available at the time of release are installed too. A new driver can be added into MAC Programmer+ either with MAC Programmer+ using an Internet connection or from diskette. A driver can be updated to a newer version in the same ways.

#### 2.1 Installation of driver using Internet

To update available drivers to the latest version or to install new drivers you can use the function Update terminal drivers, from Internet in the File menu in MAC Programmer+. All projects must be closed before this function is used and the computer must be able to make an Internet connection. You don't need a browser. When the connection is established a list is shown with all drivers that can be downloaded from Internet to the computer. The list shows the version number of available drivers and the version number of installed drivers. Mark the driver/drivers you want to install in the MAC Programmer+. The function Mark Newer will mark all drivers that are available in a newer version then the one installed and the drivers not installed. Then you select Download. Each drivers is approximately 500 kb and it is ready to use when the download is ready.

### 2.2 Installation of driver from disk

To update available drivers to the latest version or to install new drivers you can use the function Update terminal drivers, from Disk in the File menu in MAC Programmer+. All projects must be closed before this function is used. Select the folder with the new driver and choose to open the mpd-file. A list is shown with all drivers that can be installed showing the version number of available drivers and the version number of installed drivers. Mark the driver/drivers you want to install in the MAC Programmer+. The function Mark Newer will mark all drivers that are available in a newer version then the one installed and the drivers not installed. Then you select Install.

How to select the FX 485 ADP/BD driver in the project and how to transfer it to the terminal are described in *chapter 3*.

# 3 Connecting the terminal to the PLC system

#### 3.1 Settings in the MAC Programmer+

For communication with PLC system via the protocol FX 485 ADP/BD the following settings must be made in the programming tool MAC Programmer+.

#### **Driver selection**

Choosing **New** in the **File** menu creates a new project and the dialog **Project Settings** is shown. In an existing project, the dialog is shown by selecting **Project Settings** in the **File** menu.

Project Settings	×
E900 5.0x	C <u>h</u> ange
Controller system	Change
Color scheme [Current default]	<u>C</u> hange
(COK	Cancel

Press **Change...** under Controller system to get the choice list of available drivers. Choose Brand name, Protocol and then press OK. Press OK again to confirm the project settings.

#### **Communication setup**

The settings for the communication between the terminal and the PLC system are done under **Peripherals** in the **Setup** menu. To change which port the PLC system is connected to, mark Controller and hold left mouse button down and drag to move it to another communication port. Mark the selected communication port and press **Edit** to change the other communication settings.



The settings should be:

Parameter	Description
Port	RS-422
Baudrate	1 200 – 19 200
Data bits	8*
Stop bits	1*
Parity	None*

\* See also the section PLC Program.

To make specific settings for the selected driver mark the driver name and press **Edit**.

Driver configuration		×
Settings About		
Station selection		
Default station:	0	
ОК	Avbryt ⊻erkställ H	jälp

Under **Settings** you define the default station number. Values 0-15 can be stated. See also the section Station handling in this manual.

#### Transfer the driver to the terminal

The selected driver is downloaded into the terminal when the project is transferred to the terminal. Choose Project in the Transfer menu.

Project Transfer			
Percent complete:	0%		
		<u></u>	end
Byte count (Kb):	0	<u>R</u> e	ceive
Time elapsed:		⊻	erify
Status:		5	ito <u>p</u>
Info:			
Retries:	0		
Terminal Version:		Seţt	ings
🔽 Test project on se	nd 🔽 Automatic terr	ninal RUN/PROG swite	ching
Send complete pr Partial send options Blocks C None C All C From: Alarms Symbols Time channels LED's	oject Check termina	Al version Delete Trend data Recipe Data Download drive O Never Always Automatic	r pck
	E <u>x</u> it		

There are three alternatives when the driver is downloaded into the terminal:

Function	Description
Never	The driver is not down-loaded and the existing driver in the terminal is used.
Always	The driver is down-loaded every time the project is trans- ferred.
Automatic	The driver is down-loaded if the driver in the terminal is not the same as the selected driver in the project. If it is the same the driver is not down-loaded.

## 3.2 Settings in the PLC system

For information about settings in the PLC-system we refer to the manual for current system.

## 3.3 Connecting the terminal to the PLC system

#### **Multidrop connection via RS-485**



The terminal is connected to an RS-485 network via the adaptor CAB8 which is connected to the RS-422 port on the terminal and a cable according to the drawing below. CAB8 is a standard adaptor that can be ordered from Beijer Electronics. For further information about settings in the PLC system, cable specifications and information about connecting the PLC system to the terminal we refer to the manual for the current system.



The connection 7 and 8 on the CAB8 is the line termination. Remember to terminate the other side of the line by connecting a 110 ohm resistor between RDA and RDB.

#### **Multidrop connection via RS-422**

RS-422 connection can be made directly via the 25-pole connector on the E-series terminal. See the manual for FX 485 ADP/BD and the E-series manual for cable drawings.

## 4 Addressing

The terminal can handle different data types in the PLC system. The following devices can be addressed.

#### **Digital devices**

Туре	Address	Comment
Μ	0 – 1535	Memory
M	8000 - 8255	Special memory
Х	0 – 0377	Inputs, octal addressing
Y	0 – 0377	Outputs, octal addressing
Т	0 – 255	Timer contact
С	0 – 255	Counter contact
S	0 – 999	State

#### **Analog devices**

Туре	Address	Comment
D	0 – 7999	Data register
D	8000 - 8255	Special register
Т	0 – 199	Timer current value
С	0 – 255	Counter current value

## 4.1 Mixing FX and A/AnS-series PLC system on the same 485 network

FX0N/FX2N and A/AnS series PLC system can be combined on the same network using the C24 module on the A/AnS system. The device range stated in the tables above is also valid for A/AnS.

#### Note!

X and Y is octal in FX and hexadecimal in A. Therefor, when entering devices for A, you have to convert between A and FX. To reach input X1F (hex) in the A system you have to enter X37 (octal) in the MAC Programmer+.

## 4.2 Station handling

In the **Driver Configuration** dialog you state the default station address. The default station is the station the terminal checks communication towards at startup and it is also the station for the device which is not assigned to any specific station. For communication with the other stations the station numbers is given as a prefix to the device.

Example

08:D0	D0 from station 8
M0	M0 from the station set as Default station.

#### 4.3 PLC program

Certain registers (D8120, D8121 and D8129) must be set from the PLC program to select Baudrate, station number and so on. If using an FX0N system the memory cell M8120 must be ON before setting these data register.

#### Example

LD	M8002	
SET	M8120	(Only necessary for FX0N)
MOV		
	H6091	(0110 0000 1001 0001) (b15,14b0)
	D8120	19200 baud, 8 data bits, no parity, protocol form 1 with checksum.

MOV

K1

D8121 Station number 1.

M8120=Backup flag for RS-485 network (must be set for the FX0N). D8120=Communication format.

D8121=Local station number in the RS-485 network, 0-15. D8129=Data network Time-out timer value.

Dol29-Data network fille-out timer valu

The communication settings in D8120

Bit no Name 0 (b			Description	
		0 (bit=OFF)	1 (bit=0N)	
b0	Data length	7 bit	8 bit	
b1 b2	Parity	(b2,b1) (0,0): None (0,1): Even (1,1): Odd		
b3	Stop bit	1 bit	2 bit	
b4 b5 b6 b7	Baudrate (bps)	(b7, b6, b5, b4) (0,0,1,1): 300 (0,1,0,0): 600 (0,1,0,1): 1200 (0,1,1,0): 2400	(b7, b6, b5, b4) (0,1,1,1): 4800 (1,0,0,0): 9600 (1,0,0,1): 19200	
b8 b9		(b9, b8) (0,0):Default		
b10 b11 b12		Computer link	(b12, b11, b10) (0,0,0): RS-485 (422) interface (0,1,0): RS-232C interface	
b13	Sum check	Sum check code is not added	Sum check code is added automati- cally	
b14 b15		(b15, b14) (0,1):Default		

## **5** Efficient communication

To make the communication between the terminal and the PLC system quick and efficient the following should be noted about how the signals are read and what that can be done to optimize the reading.

## 5.1 Signals affecting the communication time

It is only signals to objects in the current block that are read continuously. Signals to objects in other blocks are not read, that is the number of blocks does not affect the communication time.

Besides the signals to objects in the current block, the terminal is continuously reading the following signals from the PLC system:

Display signals Block print-out signals LED registers Alarm signals Remote acknowledge signals on alarms and alarm groups Login signal Logout signal Trend registers at the sample points Bargraph registers if using min/max indicators New display register Buzzer register Backlight signal Cursor control block Recipe control block Library index register Index registers PLC clock register if the PLC clock is used in the terminal List erase signal No protocol control register No protocol on signal

#### Signals not affecting the communication time

The following signals do not affect the communication time:

- Signals linked to function keys
- Time channels
- Objects in the alarm messages

## 5.2 How to make the communication more efficient

#### **Group PLC-signals consecutively**

The signals from the PLC system are read most rapidly if all signals in the list above are consecutive. If for example, 100 signals are defined, it is quickest to read these if they are linked to, for example, M0.0-M11.7. If the signals are spread out (e.g. I0.4, Q30.0, T45.3 etc.) the updating is slower.

#### **Efficient block changes**

Block changes are carried out most rapidly and efficiently through the block jump function on the function keys or through a jump object. "Display signals" in the block header should only be used when the PLC system is to force the presentation of another block. The "New Display" register can also be used if the PLC system is to change the block. This does not affect communication as much as a larger number of "Display signals".

#### Use the clock of the terminal

An extra load is put on communication if the clock of the PLC system is used since the clock register must be read up to the terminal. Downloading of the clock to the PLC system also creates an extra load. The interval between downloadings should therefore be as long as possible.

#### **Packaging of signals**

When the signals are transferred between the terminal and the PLC system, all signals are not transferred simultaneously. Instead they are divided into packages with a number of signals in each package. To decrease the number of packages that have to be transferred and make the communication faster this number has to be considered. The number of signals in each package depends on the used driver. In the FX 485 ADP/BD driver the number is 64 for analog devices in FX and C24 (13 for FX0N) and 256 for digital devices in FX and C24 (54 for FX0N).

To make the communication as fast as possible the number of packages has to be minimized. Consecutive signals require a minimum of used packages but it is not always possible to have consecutive signals. In such cases the so-called waste between two signals has to be considered. The waste is the maximum distance between two signals you can have and still keep them in the same package.

The waste depends on the used driver. In the FX 485 ADP/BD driver the number is 64 for analog devices in FX and C24 (13 for FX0N) and 100 for digital devices in FX and C24 (54 for FX0N)



## 6 Drawings









#### MELSEC FX 485 ADP/BD

Denna manual är en installations- och hanteringsmanual till drivrutinen MELSEC FX 485 ADP/BD till operatörsterminalerna i E-serien. Funktionaliteten i terminalerna och i MAC Programmer+ är beskriven i E-seriemanualen.

© Beijer Electronics AB 2000, MA00452, 2000-06

Beijer Electronics AB reserverar sig mot att informationen i denna manual kan komma att ändra sig utan föregående varning. Alla exempel i denna i denna manual används endast för att öka förståelsen om hur programmen arbetar. Beijer Electronics AB tar inget ansvar för att dessa fungerar i verkliga applikationer.

## Innehåll

1 Introduktion	3
2 Installation och uppdatering av drivrutin	4
2.1 Installation av drivrutin med Internet	4
2.2 Installation av drivrutin från disk	4
3 Anslutning av terminalen till PLC- systemet	5
3.1 Inställningar i MAC Programmer+	5
3.2 Inställningar i PLC-systemet	8
3.3 Koppla in terminalen till PLC-systemet	9
4 Adressering	10
4.1 Blanda PLC-system från FX och A/AnS-serierna i samma	
485 nätverk	10
4.2 Stationshantering	10
4.3 PLC-program	11
5 Effektiv kommunikation	12
5.1 Signaler som påverkar kommunikationstiden	12
5.2 Hur kommunikationen kan göras effektivare	13
6 Ritningar	14

### **1** Introduktion

Manualen beskriver hur PLC-systemet ansluts till operatörsterminalerna i E-serien via protokollet FX 485 ADP/BD. Adressering i PLC-systemet görs på normalt MELSEC FX sätt. För information om PLC-systemet hänvisas till manualen för aktuellt system.

Drivrutinen FX 485 ADP/BD kan användas till styrsystem i serierna MELSEC FX0N och FX2N som är utrustade med en 485 ADP eller BD modul. Den kan också användas till styrsystem i serierna MELSEC A/AnS som är utrustade med en C24 modul.

Drivrutinen använder Protocol Format 1 med checksum-kontroll för kommunikation med PLC-systemet.

## 2 Installation och uppdatering av drivrutin

Tillgängliga drivrutiner installeras samtidigt som MAC Programmer+ installeras. En ny drivrutin kan läggas till i MAC Programmer+ antingen med hjälp av MAC Programmer+ och en Internet anslutning eller från diskett. En drivrutin uppdateras till nyare version på samma sätt.

## 2.1 Installation av drivrutin med Internet

För att uppdatera tillgängliga drivrutiner till senaste version eller för att installera nya drivrutiner används funktionen Update terminal drivers, from Internet i menyn File i MAC Programmer+. Alla projekt måste stängas innan funktionen används och datorn måste kunna göra en Internet anslutning. Någon browser behövs inte. När anslutningen är etablerad visas en lista med alla drivrutiner som kan laddas ner via Internet till datorn. I listan visas versionsnummer på tillgängliga drivrutiner och versionsnumret på installerade drivrutiner i MAC Programmer+. Markera de drivrutiner som skall installeras i MAC Programmer+. Funktionen Mark Newer markerar alla drivrutiner som finns tillgängliga i en senare version och de som inte är installerade. Välj därefter Download. Varje drivrutin är ungefär 500 kb stor och de är färdiga att använda när nedladdningen är klar.

## 2.2 Installation av drivrutin från disk

För att uppdatera tillgängliga drivrutiner till senaste version eller för att installera nya drivrutiner används funktionen Update terminal drivers, from Disk i menyn File i MAC Programmer+. Alla projekt måste stängas innan funktionen används. Välj den katalog som innehåller den nya drivrutinen och öppna mpd-filen. En lista visas med alla drivrutiner som kan installeras. I listan visas versionsnummer på tillgängliga drivrutiner och versionsnumret på installerade drivrutiner i MAC Programmer+. Markera de drivrutiner som skall installeras i MAC Programmer+. Funktionen Mark Newer markerar alla drivrutiner som finns tillgängliga i en senare version och de som inte är installerade. Välj därefter Install.

Hur man väljer FX 485 ADP/BD drivrutinen i projektet och hur man överför den till terminalen beskrivs i *kapitel 3*.

## 3 Anslutning av terminalen till PLCsystemet

#### 3.1 Inställningar i MAC Programmer+

För kommunikation med PLC-systemet via protokollet FX 485 ADP/BD måste följande inställningar göras i programmeringsverktyget MAC Programmer+

#### Val av drivrutin

Välj **New** i **File** menyn, då skapas ett nytt projekt och dialogen **Project Settings** visas. I ett befintligt projekt, visas dialogen genom då man väljer **Project Settings** i **File** menyn.

Project Settings	×
Terminal E900 5.0x	C <u>h</u> ange
Controller system FX 485ADP/FX	Change
Color scheme [Current default]	<u>C</u> hange
(OK	Cancel

Tryck på **Change...** under Conroller system och välj i listan över tillgängliga system. Välj fabrikat, protokoll och modell och tryck för OK. Tryck på OK igen och bekräfta projektinställningarna.

#### Kommunikationsinställning

Inställningarna för kommunikationen mellan terminalen och PLC-systemet utföres under **Peripherals** i **Setup** menyn. För att ändra PLC-systemets anslutna port, markera Controller och håll vänster musknapp nere och drag den till en annan kommunikationsport. Markera den valda kommunikationsporten och tryck **Edit** för ändra den nya kommunikationsinställningen.



Inställningarna skall vara:

Parameter	Beskrivning
Port	RS-422
Baudrate	1 200 – 19 200
Data bits	8*
Stop bits	1*
Parity	Ingen*

\* Se också avsnittet PLC Program

För att göra speciella inställningar för vald drivrutin markerar du namnet på drivrutinen och trycker på **Edit**.

Driver configuration		×
Settings About		
Station selection		
Default station:	0	
	<u> </u>	
ОК	Avbryt <u>V</u> erkställ Hjälp	

Under **Settings** och **Station selection** definierar du stationens nummer. Värden 0-15 kan anges. Se även avsnittet Stationshantering i denna manual.

#### Överföra drivrutinen till terminalen

Drivrutinen laddas ner till terminalen när hela projektet överförs till terminalen. Välj **Project** i **Transfer** menyn.

Project Transfer		
Percent complete:	0%	1
		<u>S</u> end
Byte count (Kb):	0	<u>R</u> eceive
Time elapsed:		⊻erify
Status:		Stop
Info:		
Retries:	0	
Terminal Version:		Se <u>t</u> tings
🔽 Test project on sen	d 🔽 Automatic ter	minal RUN/PROG switching
Send complete pro Partial send options Blocks None All From: D Alsma	ject 🔽 Check termin	al version Delete Trend data Recipe Data Download driver C Never
Symbols	<ul> <li>Message library</li> <li>Setup</li> </ul>	Anways     Automatic
Time channels	Function keys Passwords	□
	E <u>x</u> it	

Det finns tre olika alternativ när drivrutinen laddas ned till terminalen.

Funktion	Beskrivning
Never	Drivrutinen laddas aldrig, befintlig drivrutin i terminalen används.
Always	Drivrutinen laddas varje gång projektet överföres.
Automatic	Drivrutinen laddas om drivrutinen i terminalen inte är samma som i projektet. Om samma drivrutin finns laddas den inte.

## 3.2 Inställningar i PLC-systemet

För vidare information om inställningar i PLC-systemet hänvisas till aktuell manual.

## **3.3 Koppla in terminalen till PLC-systemet**



#### **Multidrop-anslutning via RS-485**

Terminalen ansluts till ett RS-485-nätverk via adaptern CAB8 vilken är ansluten till RS-422 porten på terminalen via en kabel enligt nedanstående ritning. CAB8 är en standard adapter som kan beställas från Beijer Electronics. För mer information om inställningar i PLC-systemet, kabelspecifikationer och information om hur PLC-systemet ansluts till terminalen hänvisas till manualen för aktuellt system.



Anslutningen mellan 7 och 8 på CAB8 är linjetermineringen. Glöm inte att terminera även den andra sidan av linjen genom att ansluta ett 110 ohms motstånd mellan RDA och RDB.

#### Multidrop anslutning via RS-422

RS-422 anslutning kan göras direkt via den 25-poliga kontakten på terminalerna i E-serien. Se manualen för FX 485 ADP/BD samt E-seriens manual för kabelritningar.

## 4 Adressering

Terminalen kan hantera olika datatyper i PLC-systemet. Följande signaler kan adresseras.

#### Digitala signaler

Тур	Adress	Kommentar
Μ	0 – 1535	Minne
М	8000 - 8255	Specialminne
Х	0 – 0377	Ingångar, oktal adressering
Υ	0 – 0377	Utgångar, oktal adressering
Т	0 – 255	Tidkretskontakt
С	0 – 255	Räknarkontakt
S	0 – 999	State

#### Analoga signaler

Тур	Adress	Kommentar
D	0 – 7999	Dataregister
D	8000 - 8255	Specialregister
Т	0 – 199	Tidkrets aktuellt värde
С	0 – 255	Räknare aktuellt värde

#### 4.1 Blanda PLC-system från FX och A/ AnS-serierna i samma 485 nätverk

PLC-system från FX0N/FX2N och A/AnS-serierna kan kombineras i samma nätverk om C24 modulen används i A/AnS-systemet. Signalom-rådena i ovanstående tabell gäller även för A/AnS-systemet.

#### Observera!

X och Y är oktala FX och hexadecimala i A. Du måste därför konvertera signalerna när de anges för ett A-system. För att nå ingång X1F (hex) i A-systemet skriver du X37 (octal) i MAC Programmer+.

## 4.2 Stationshantering

Under **Driver Configuration** i **Peripherals** anges förinställd station. Det är den station som terminalen testar kommunikationen till vid uppstart. Det är också den station som adresseras då inget stationsnummer anges. För att kommunicera med andra stationer måste stationsnumret anges som prefix till adressen.

Exempel

08:D0	D0 from station 8
MO	M0 i förinställd station

#### 4.3 PLC-program

Register som styr överföringshastighet, stationsnummer etc (D8120, D8121 and D8129) måste sättas från PLC-programmet. Används ett FX0N-system måste minnescell M8120 vara ettställd innan dessa register påverkas.

#### Exempel

LD SET MOV	M8002 M8120	(Behövs endast för FX0N-system)
MOV	H6091 D8120	(0110 0000 1001 0001) (b15,14b0) 19200 baud, 8 databitar, ingen paritet, protokollform 1 med checksum.
1.011		

MOV

K1 D8121 Stationsnummer 1.

M8120=Backupflagga för RS-485 nätverk (måste vara ettställd i FX0N). D8120=Kommunikationsformat.

D8121=Lokalt stationsnummer i RS-485 nätverket, 0-15.

D8129=Data nätverk Time-out timer värde.

Kommunikationsinställningarna i D8120

Ditor	Namn	Beskrivning	
Ditili.		0 (bit=FRÅN)	1 (bit=TILL)
b0	Data length	7 bit	8 bit
b1 b2	Parity	(b2,b1) (0,0): Ingen (0,1): Jämn (1,1): Udda	
b3	Stop bit	1 bit	2 bit
b4 b5 b6 b7	Baudrate (bps)	(b7, b6, b5, b4) (0,0,1,1): 300 (0,1,0,0): 600 (0,1,0,1): 1200 (0,1,1,0): 2400	(b7, b6, b5, b4) (0,1,1,1): 4800 (1,0,0,0): 9600 (1,0,0,1): 19200
b8 b9		(b9, b8) (0,0):Default	
b10 b11 b12		Datalänk	(b12, b11, b10) (0,0,0): RS-485 (422) interface (0,1,0): RS-232C interface
b13	Sum check	Sum check kod läggs inte till	Sum check kod läggs till automatiskt
b14 b15		(b15, b14) (0,1):Default	

## 5 Effektiv kommunikation

För att göra kommunikationen mellan terminalen och PLC-systemet snabb och effektiv bör följande noteras om hur signalerna läses och vad som kan göras för att optimera detta.

#### 5.1 Signaler som påverkar kommunikationstiden

Det är endast signalerna till objekten i aktuellt block som läses kontinuerligt. Signalerna till objekten i de andra blocken läses inte och antalet block påverkar därför inte kommuniktionstiden.

Förutom signalerna till objekten det i aktuella blocket, läser terminalen hela tiden följande signaler från PLC-systemet:

Display signaler Blockutskriftsignaler LED register Larmsignaler Fjärrkvittering till larm och larmgrupper Login signal Logout signal Trendregister vid samplingspunkterna Register till stapelobjekten om min/max indikatorer används New displayregistret Summerregistret Registret som styr bakrundsbelysningen Kontrollblocket för markören Kontrollblocket för recept i PLC-systemet Indexregistret till biblioteket Indexregister Registren till PLC-klockan om PLC-klockan används i terminalen Signalen som styr radering av larmlistan Kontrollregistret för No protocol Kontrollsignalen som styr om No protocol skall vara aktivt

#### Signaler som inte påverkar kommunikationstiden

Följande signaler påverkar inte kommunikationstiden:

- Signaler kopplade till funktionstangenterna
- Tidkanalerna
- Objekt i larmtexter

#### 5.2 Hur kommunikationen kan göras effektivare

#### Gruppera PLC-signalerna i en följd

Signalerna från PLC systemet läses snabbast om signalerna i listan ovan är i en följd. Till exempel om 100 signaler är definierade, läses dessa snabbast om de grupperas, till exempel M0.0-M11.7. Om signalerna sprides ut (t ex I0.4, Q30.0, T45.3 etc.) går uppdateringen långsammare.

#### Effektiva blockbyten

Blockbyte sker effektivast via blockhoppsfunktionen på funktionstangentrna eller via hoppobjekt. "Display signals" i blockhuvudet bör endast användas då PLC-systemet skall tvinga fram ett annat block. Skall PLCsystemet byta bild kan även "New Display" -registret användas. Det belastar inte kommunikationen lika mycket som ett större antal "Display signals".

#### Använd klockan i terminalen

Används terminalklockan belastas kommunikationen eftersom PLCsystemets klockregister måste läsas upp till terminalen. Nerladdningen av terminalklockan till PLC-systemet belastar också.

Intervallet mellan nerladdningarna bör därför vara så långt som möjligt.

#### Packning av signaler

När signalerna skall överföras mellan terminalen och PLC-systemet, överförs inte alla signalerna samtidigt. De delas istället in i paket med ett antal signaler i varje. För att minska antalet paket som skall överföras och för att göra kommunikationen snabbare måste man ta hänsyn till detta. Antalet signaler i varje paket beror på drivrutinen. I FX 485 ADP/BD drivrutinen är antalet 64 st för analoga signaler i FX och C24 (13 för FX0N) och 256 för digitala signaler i FX och C24 (54 för FX0N).

För att göra kommunikation så snabb som möjligt måste antalet paket minimeras. Signaler i en följd behöver ett minimalt antal paket men det är kanske inte alltid nödvändigt. I sådana fall blir det sk glapp mellan två signaler. Glappet är det maximala avståndet mellan två signaler där de fortfarande kan hållas inom samma paket.

Glappet beror på vilken drivrutin som används. I FX 485 ADP/BD drivrutinen är antalet 64 för analoga signaler i FX och C24 (13 för FX0N)och 100 för digitala signaler i FX och C24 (54 för FX0N).

Signal	1	2	3	4	5	6	7	8	9	10
Använd	X	X					Χ	X	Χ	

Glapp

## 6 Ritningar







