

MELSOFT MR Configurator2

Installation Instructions

Before Using the Product

Please read this document before use. Keep the document in a safe place for future reference. Make sure that the end users read the document.

For the precautions on using MR Configurator2, refer to the following manual.

 MR Configurator2 Installation Guide

For better understanding, when using a CD version of this product, replace "disc" with "CD-R" to read this document; and when using a DVD version of this product, replace "disc" with "DVD-R".


Notice

- Reprinting or reproducing the part or all of the contents of this document in any form for any purpose without the permission of Mitsubishi Electric Corporation is strictly forbidden.
- Although we have made the utmost effort to follow the revisions of the software and hardware, in some cases, unsynchronized matter may occur.
- The information in this document may be subject to change without notice.

Operating Environment

Item	Contents	
Personal computer	A personal computer on which Windows® operates	
CPU	Windows 11 2 or more cores on a compatible 64-bit processor or System on a Chip (SoC)	
	Other than Windows 11 Desktop PC: Intel® Celeron® Processor Laptop PC : Intel® Pentium® M Processor	2.8 GHz or more recommended 1.7 GHz or more recommended
Required memory	Windows 11 Windows® 64-bit edition	4 GB or more recommended
	Other than Windows 11 Windows® 64-bit edition Windows® 32-bit edition	2 GB or more recommended 1 GB or more recommended
Available hard disk capacity	1.5 GB or more	
Disc drive	CD-R/DVD-R compatible disc drive	
Monitor	Resolution 1024 x 768 pixels or higher	
OS (English version)	<ul style="list-style-type: none"> • Microsoft® Windows® 11 Home Operating System • Microsoft® Windows® 11 Pro Operating System • Microsoft® Windows® 11 Enterprise Operating System • Microsoft® Windows® 11 Education Operating System • Microsoft® Windows® 10 Home Operating System • Microsoft® Windows® 10 Pro Operating System • Microsoft® Windows® 10 Enterprise Operating System • Microsoft® Windows® 10 Education Operating System • Microsoft® Windows® 10 IoT Enterprise 2016 LTSC Operating System (Note-1) • Microsoft® Windows® 8.1 Operating System • Microsoft® Windows® 8.1 Pro Operating System • Microsoft® Windows® 8.1 Enterprise Operating System • Microsoft® Windows® 8 Operating System • Microsoft® Windows® 8 Pro Operating System • Microsoft® Windows® 8 Enterprise Operating System • Microsoft® Windows® 7 Starter Operating System • Microsoft® Windows® 7 Home Premium Operating System • Microsoft® Windows® 7 Professional Operating System • Microsoft® Windows® 7 Ultimate Operating System • Microsoft® Windows® 7 Enterprise Operating System 	
Communication interface	RS-232 port, USB port, Ethernet port	

(Note-1):32-bit edition is not supported.

- If .NET Framework 3.5 (including .NET 2.0 and 3.0) has been disabled, it is necessary to enable it.
- If any of the following functions is used, this product may not operate normally.
 - Start of application in Windows® compatible mode
 - Fast user switching
 - Remote desktop
 - Windows XP Mode
 - Windows Touch or Touch
 - Modern UI
 - Client Hyper-V
 - Tablet Mode
 - Virtual desktop
 - High Contrast Mode
 - Unified Write Filter
- The screen of this product may not operate normally in the following occasions:
 - The size of text and other items on the screen is other than 100% (96DPI, 9pt, etc.)
For details, refer to the following manual.
 MR Configurator2 Installation Guide
 - Changed the resolution of the screen during operating
 - Multi-display is set
- Please use the product as "Standard User" or "Administrator".
- Surrogate pair characters and environment dependent characters are not available.

Installation

■ Confirm before installation

- Log on to the personal computer as a user having the Administrator authority.
- Close all the applications running under Microsoft® Windows® Operating System before installation. If the product is installed while other applications are running, it may not operate normally.

1. Insert the MELSOFT MR Configurator2 disc into the disc drive. Double-click the "setup.exe" on the disc.
2. Select or enter the necessary information by following the on-screen instructions. (Note-1)

(Note-1):Product ID is written on the "License certificate" included with the product. Enter the 12-digit number divided into 3 and 9 digits.

Packing List

Model name	Product name	Quantity
SW1DNC-MRC2-E (English version package)	MELSOFT MR Configurator2 product (Standard license product) CD-R	1
	Installation Instructions (This document)	1
	End-user software license agreement	1
	License Certificate	1
SW1DND-MRC2-EC (English version package)	MELSOFT MR Configurator2 product (Site license product) DVD-R	1
	Installation Instructions (This document)	1
	End-user software license agreement	1
	License Certificate	1

■ Acknowledgements


- We do not guarantee those commercially available Microsoft® Windows® Operating System products that are introduced in this manual.
- This software's copyright is owned by Mitsubishi Electric Corporation.
- This software requires one license per computer to be purchased.
- This product (including manual) can be used under the Software License Agreement only.
- We do not take any responsibilities for the consequences of operating this product (including manual).

Uninstallation

Uninstall MELSOFT MR Configurator2 from the control panel of Windows®.

Installing the USB driver

In order to communicate with a servo amplifier via USB, a USB driver needs to be installed. For a USB driver installation procedure, refer to the following manual.

 MR Configurator2 Installation Guide

Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
Intel, Pentium, and Celeron are registered trademarks or trademarks of Intel Corporation in the United States and other countries.
The Installation Guide on the disc is a PDF file.
To view the PDF file, Adobe Reader is required.
Download from the Adobe website.
Adobe and Adobe Reader are registered trademarks of Adobe Inc.
Generally, the company names, system names and product names, etc. mentioned herein are registered trademarks or trademarks of their respective companies.
The trademark symbols (™, ®) mentioned herein may be unspecified.