

Programmable Controller

MELSEC iQ-R
series

MELSEC iQ-R Channel Isolated Thermocouple Input Module/Channel Isolated RTD Input Module User's Manual (Startup)

-R60TD8-G
-R60RD8-G



SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product only. For the safety precautions of the programmable controller system, refer to the MELSEC iQ-R Module Configuration Manual.

In this manual, the safety precautions are classified into two levels: "⚠ WARNING" and "⚠ CAUTION".

 WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
 CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

WARNING

- Configure safety circuits external to the programmable controller to ensure that the entire system operates safely even when a fault occurs in the external power supply or the programmable controller. Failure to do so may result in an accident due to an incorrect output or malfunction.
 - (1) Emergency stop circuits, protection circuits, and protective interlock circuits for conflicting operations (such as forward/reverse rotations or upper/lower limit positioning) must be configured external to the programmable controller.
 - (2) When the programmable controller detects an abnormal condition, it stops the operation and all outputs are:
 - Turned off if the overcurrent or overvoltage protection of the power supply module is activated.
 - Held or turned off according to the parameter setting if the self-diagnostic function of the CPU module detects an error such as a watchdog timer error.
 - (3) All outputs may be turned on if an error occurs in a part, such as an I/O control part, where the CPU module cannot detect any error. To ensure safety operation in such a case, provide a safety mechanism or a fail-safe circuit external to the programmable controller. For a fail-safe circuit example, refer to "General Safety Requirements" in the MELSEC iQ-R Module Configuration Manual.
 - (4) Outputs may remain on or off due to a failure of a component such as a relay and transistor in an output circuit. Configure an external circuit for monitoring output signals that could cause a serious accident.
 - In an output circuit, when a load current exceeding the rated current or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
 - Configure a circuit so that the programmable controller is turned on first and then the external power supply. If the external power supply is turned on first, an accident may occur due to an incorrect output or malfunction.
 - Configure a circuit so that the external power supply is turned off first and then the programmable controller. If the programmable controller is turned off first, an accident may occur due to an incorrect output or malfunction.
 - For the operating status of each station after a communication failure, refer to manuals for the network used. For the manuals, please consult your local Mitsubishi representative. Incorrect output or malfunction due to a communication failure may result in an accident.
-

WARNING

- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents. When a Safety CPU is used, data cannot be modified while the Safety CPU is in SAFETY MODE.
 - Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
 - Do not write any data to the "system area" and "write-protect area" of the buffer memory in the module. Also, do not use any "use prohibited" signals as an output signal from the CPU module to each module. Doing so may cause malfunction of the programmable controller system. For the "system area", "write-protect area", and the "use prohibited" signals, refer to the user's manual for the module used. For areas used for safety communications, they are protected from being written by users, and thus safety communications failure caused by data writing does not occur.
 - If a communication cable is disconnected, the network may be unstable, resulting in a communication failure of multiple stations. Configure an interlock circuit in the program to ensure that the entire system will always operate safely even if communications fail. Incorrect output or malfunction due to a communication failure may result in an accident. When safety communications are used, an interlock by the safety station interlock function protects the system from an incorrect output or malfunction.
 - To maintain the safety of the programmable controller system against unauthorized access from external devices via the network, take appropriate measures. To maintain the safety against unauthorized access via the Internet, take measures such as installing a firewall.
-

[Design Precautions]

CAUTION

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Doing so may result in malfunction due to electromagnetic interference. Keep a distance of 100mm or more between those cables.
 - During control of an inductive load such as a lamp, heater, or solenoid valve, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on. Therefore, use a module that has a sufficient current rating.
 - After the CPU module is powered on or is reset, the time taken to enter the RUN status varies depending on the system configuration, parameter settings, and/or program size. Design circuits so that the entire system will always operate safely, regardless of the time.
 - Do not power off the programmable controller or reset the CPU module while the settings are being written. Doing so will make the data in the flash ROM and SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM and SD memory card again. Doing so also may cause malfunction or failure of the module.
 - When changing the operating status of the CPU module from external devices (such as the remote RUN/STOP functions), select "Do Not Open by Program" for "Opening Method" of "Module Parameter". If "Open by Program" is selected, an execution of the remote STOP function causes the communication line to close. Consequently, the CPU module cannot reopen the line, and external devices cannot execute the remote RUN function.
-

[Security Precautions]

WARNING

- To maintain the security (confidentiality, integrity, and availability) of the programmable controller and the system against unauthorized access, denial-of-service (DoS) attacks, computer viruses, and other cyberattacks from external devices via the network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions.
-

[Installation Precautions]

WARNING

- Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may result in electric shock or cause the module to fail or malfunction.
-

[Installation Precautions]

CAUTION

- Use the programmable controller in an environment that meets the general specifications in the Safety Guidelines (IB-0800525). Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
 - To mount a module, place the concave part(s) located at the bottom onto the guide(s) of the base unit, and push in the module until the hook(s) located at the top snaps into place. Incorrect interconnection may cause malfunction, failure, or drop of the module.
 - To mount a module with no module fixing hook, place the concave part(s) located at the bottom onto the guide(s) of the base unit, push in the module, and fix it with screw(s). Incorrect interconnection may cause malfunction, failure, or drop of the module.
 - When using the programmable controller in an environment of frequent vibrations, fix the module with a screw.
 - Tighten the screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction. For the specified torque range, refer to the MELSEC iQ-R Module Configuration Manual.
 - When using an extension cable, connect it to the extension cable connector of the base unit securely. Check the connection for looseness. Poor contact may cause malfunction.
 - When using an SD memory card, fully insert it into the SD memory card slot. Check that it is inserted completely. Poor contact may cause malfunction.
 - Securely insert an extended SRAM cassette or a battery-less option cassette into the cassette connector of the CPU module. After insertion, close the cassette cover and check that the cassette is inserted completely. Poor contact may cause malfunction.
 - Beware that the module could be very hot while power is on and immediately after power-off.
 - Do not directly touch any conductive parts and electronic components of the module, SD memory card, extended SRAM cassette, battery-less option cassette, or connector. Doing so can cause malfunction or failure of the module.
-

[Wiring Precautions]

WARNING

- Shut off the external power supply (all phases) used in the system before installation and wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.
- After installation and wiring, attach a blank cover module (RG60) to each empty slot before powering on the system for operation. Also, attach an extension connector protective cover^{*1} to each unused extension cable connector as necessary. Directly touching any conductive parts of the connectors while power is on may result in electric shock.

^{*1} For details, please consult your local Mitsubishi Electric representative.

[Wiring Precautions]

CAUTION

- Individually ground the FG and LG terminals of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.
- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Check the rated voltage and signal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause fire or failure.
- Connectors for external devices must be crimped or pressed with the tool specified by the manufacturer, or must be correctly soldered. Incomplete connections may cause short circuit, fire, or malfunction.
- Securely connect the connector to the module. Poor contact may cause malfunction.
- Do not install the control lines or communication cables together with the main circuit lines or power cables. Doing so may result in malfunction due to noise. Keep a distance of 100mm or more between those cables.
- Place the cables in a duct or clamp them. If not, dangling cables may swing or inadvertently be pulled, resulting in malfunction or damage to modules or cables.
In addition, the weight of the cables may put stress on modules in an environment of strong vibrations and shocks. Do not clamp the extension cables with the jacket stripped. Doing so may change the characteristics of the cables, resulting in malfunction.
- Check the interface type and correctly connect the cable. Incorrect wiring (connecting the cable to an incorrect interface) may cause failure of the module and external device.
- Tighten the terminal screws or connector screws within the specified torque range. Undertightening can cause drop of the screw, short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
- When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.
- Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
- When a protective film is attached to the top of the module, remove it before system operation. If not, inadequate heat dissipation of the module may cause a fire, failure, or malfunction.
- Programmable controllers must be installed in control panels. Connect the main power supply to the power supply module in the control panel through a relay terminal block. Wiring and replacement of a power supply module must be performed by qualified maintenance personnel with knowledge of protection against electric shock. For wiring, refer to the MELSEC iQ-R Module Configuration Manual.
- For Ethernet cables to be used in the system, select the ones that meet the specifications in the user's manual for the module used. If not, normal data transmission is not guaranteed.
- Individually ground the shielded cables of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.

[Precautions for using channel isolated thermocouple input modules]

- Do not place the module near a device that generates magnetic noise.
-

[Startup and Maintenance Precautions]

WARNING

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
 - Correctly connect the battery connector. Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire. Also, do not expose it to liquid or strong shock. Doing so will cause the battery to produce heat, explode, ignite, or leak, resulting in injury and fire.
 - Shut off the external power supply (all phases) used in the system before cleaning the module or retightening the terminal screws, connector screws, or module fixing screws. Failure to do so may result in electric shock.
-

[Startup and Maintenance Precautions]

CAUTION

- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.
 - Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
 - Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
 - Use any radio communication device such as a cellular phone or PHS (Personal Handy-phone System) 25cm or more away in all directions from the programmable controller. Failure to do so may cause malfunction.
 - Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may cause the module to fail or malfunction.
 - Tighten the screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
 - After the first use of the product, do not perform each of the following operations more than 50 times (IEC 61131-2/JIS B 3502 compliant).
Exceeding the limit may cause malfunction.
 - Mounting/removing the module to/from the base unit
 - Inserting/removing the extended SRAM cassette or battery-less option cassette to/from the CPU module
 - Mounting/removing the terminal block to/from the module
 - Connecting/disconnecting the extension cable to/from the base unit
 - After the first use of the product, do not insert/remove the SD memory card to/from the CPU module more than 500 times. Exceeding the limit may cause malfunction.
 - Do not touch the metal terminals on the back side of the SD memory card. Doing so may cause malfunction or failure of the module.
 - Do not touch the integrated circuits on the circuit board of an extended SRAM cassette or a battery-less option cassette. Doing so may cause malfunction or failure of the module.
 - Do not drop or apply shock to the battery to be installed in the module. Doing so may damage the battery, causing the battery fluid to leak inside the battery. If the battery is dropped or any shock is applied to it, dispose of it without using.
 - Startup and maintenance of a control panel must be performed by qualified maintenance personnel with knowledge of protection against electric shock. Lock the control panel so that only qualified maintenance personnel can operate it.
 - Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Wearing a grounded antistatic wrist strap is recommended. Failure to discharge the static electricity may cause the module to fail or malfunction.
-

[Startup and Maintenance Precautions]

CAUTION

- After unpacking, eliminate static electricity from the module to prevent electrostatic discharge from affecting the module. If an electrostatically charged module comes in contact with a grounded metal object, a sudden electrostatic discharge of the module may cause failure. For details on how to eliminate static electricity from the module, refer to the following.

Antistatic Precautions Before Using MELSEC iQ-R Series Products (FA-A-0368)

- Use a clean and dry cloth to wipe off dirt on the module.
-

[Operating Precautions]

CAUTION

- When changing data and operating status, and modifying program of the running programmable controller from an external device such as a personal computer connected to an intelligent function module, read relevant manuals carefully and ensure the safety before operation. Incorrect change or modification may cause system malfunction, damage to the machines, or accidents.
 - Do not power off the programmable controller or reset the CPU module while the setting values in the buffer memory are being written to the flash ROM in the module. Doing so will make the data in the flash ROM and SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM and SD memory card again. Doing so can cause malfunction or failure of the module.
-

[Disposal Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.
 - When disposing of batteries, separate them from other wastes according to the local regulations. For details on battery regulations in EU member states, refer to the MELSEC iQ-R Module Configuration Manual.
-

[Transportation Precautions]

CAUTION

- When transporting lithium batteries, follow the transportation regulations. For details on the regulated models, refer to the MELSEC iQ-R Module Configuration Manual.
 - The halogens (such as fluorine, chlorine, bromine, and iodine), which are contained in a fumigant used for disinfection and pest control of wood packaging materials, may cause failure of the product. Prevent the entry of fumigant residues into the product or consider other methods (such as heat treatment) instead of fumigation. The disinfection and pest control measures must be applied to unprocessed raw wood.
-

CONDITIONS OF USE FOR THE PRODUCT

- (1) MELSEC programmable controller ("the PRODUCT") shall be used in conditions;
- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries. MITSUBISHI ELECTRIC SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI ELECTRIC USER'S, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.
- ("Prohibited Application")
- Prohibited Applications include, but not limited to, the use of the PRODUCT in;
- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
 - Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
 - Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.
- Notwithstanding the above restrictions, Mitsubishi Electric may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi Electric and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi Electric representative in your region.
- (3) Mitsubishi Electric shall have no responsibility or liability for any problems involving programmable controller trouble and system trouble caused by DoS attacks, unauthorized access, computer viruses, and other cyberattacks.

INTRODUCTION

Thank you for purchasing the Mitsubishi Electric MELSEC iQ-R series programmable controllers. This manual describes the specifications, procedures before operation, wiring, and programming of the relevant products listed below. Before using this product, please read this manual and the relevant manuals carefully and develop familiarity with the functions and performance of the MELSEC iQ-R series programmable controller to handle the product correctly. When applying the program examples provided in this manual to an actual system, ensure the applicability and confirm that it will not cause system control problems. Please make sure that the end users read this manual.

Point

Unless otherwise specified, this manual provides program examples in which the I/O numbers of X/Y0 to X/YF are assigned to a temperature input module. Assign I/O numbers when applying the program examples to an actual system. For I/O number assignment, refer to the following.

 MELSEC iQ-R Module Configuration Manual



Relevant products

R60TD8-G, R60RD8-G

COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES

Method of ensuring compliance



To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

-  MELSEC iQ-R Module Configuration Manual
-  Safety Guidelines (IB-0800525)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the following manuals.

-  MELSEC iQ-R Module Configuration Manual
-  Safety Guidelines (IB-0800525)

MEMO

CONTENTS

SAFETY PRECAUTIONS	1
CONDITIONS OF USE FOR THE PRODUCT	10
INTRODUCTION	10
COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES	11
RELEVANT MANUALS	14
TERMS	14
GENERIC TERMS AND ABBREVIATIONS	15
CHAPTER 1 PART NAMES	16
CHAPTER 2 SPECIFICATIONS	18
2.1 Performance Specifications	18
CHAPTER 3 FUNCTION LIST	20
CHAPTER 4 PROCEDURES BEFORE OPERATION	22
CHAPTER 5 SYSTEM CONFIGURATION	24
CHAPTER 6 WIRING	26
6.1 Wiring Precautions	26
Connector for external devices	26
6.2 External Wiring	27
Signal layout of connectors for external devices	27
External wiring examples	29
To use a connector/terminal block converter module	32
CHAPTER 7 OPERATION EXAMPLES	34
7.1 Programming Procedure	34
7.2 Program Examples	34
CHAPTER 8 OFFSET/GAIN SETTING	41
8.1 Setting Procedure	41
APPENDICES	44
Appendix 1 Accuracy	44
Appendix 2 External Dimensions	47
INDEX	48
REVISIONS	50
WARRANTY	51
TRADEMARKS	52

RELEVANT MANUALS


The manuals related to this product are shown below.

Manual name [manual number]	Description
MELSEC iQ-R Channel Isolated Thermocouple Input Module/ Channel Isolated RTD Input Module User's Manual (Startup) [SH-081493ENG] (this manual)	System configuration, specifications, procedures before operation, wiring, and operation examples of the channel isolated thermocouple input module and the channel isolated RTD input module
MELSEC iQ-R Module Configuration Manual [SH-081262ENG]	Common information on the hardware configuration of all modules, overview of each system configuration, and specifications of the power supply module, base unit, SD memory card, and battery
MELSEC iQ-R Channel Isolated Thermocouple Input Module/ Channel Isolated RTD Input Module User's Manual (Application) [SH-081495ENG]	Functions, parameter settings, I/O signals, buffer memory, and troubleshooting of the channel isolated thermocouple input module and the channel isolated RTD input module
MELSEC iQ-R Programming Manual (Module Dedicated Instructions) [SH-081976ENG]	Dedicated instructions for the intelligent function modules
MELSEC iQ-R Thermocouple Input Module/RTD Input Module Function Block Reference [BCN-P5999-0462]	Function blocks used for the channel isolated thermocouple input module and channel isolated RTD input module
GX Works3 Operating Manual [SH-081215ENG]	System configuration, parameter settings, and online operations of GX Works3
MELSEC iQ-R Online Module Change Manual [SH-081501ENG]	Online module change, which allows a module to be changed without stopping the system for MELSEC iQ-R series programmable controllers

This manual does not include detailed information on the following:

- General specifications
- Applicable combinations of CPU modules and the other modules, and the number of mountable modules
- Installation

For details, refer to the following.

 MELSEC iQ-R Module Configuration Manual

TERMS

Unless otherwise specified, this manual uses the following terms.

Term	Description
Buffer memory	Memory in an intelligent function module to store data such as setting values and monitor values. For CPU modules, it refers to memory to store data such as setting values and monitor values of the Ethernet function, or data used for data communication of the multiple CPU system function.
Engineering tool	A tool used for setting up programmable controllers, programming, debugging, and maintenance
Global label	A label that is valid for all the program data when multiple program data are created in the project. There are two types of global label: a module specific label (module label), which is generated automatically by GX Works3, and an optional label, which can be created for any specified device.
Module label	A label that represents one of memory areas (I/O signals and buffer memory areas) specific to each module in a given character string. For the module used, GX Works3 automatically generates this label, which can be used as a global label.


GENERIC TERMS AND ABBREVIATIONS


Unless otherwise specified, this manual uses the following generic terms and abbreviations.

Generic term/abbreviation	Description
Cold junction compensation resistor (RTD)	An abbreviation for the resistance temperature detector (RTD) used for cold junction compensation
RTD input module	An abbreviation for the MELSEC iQ-R series channel isolated RTD input module
Temperature input module	A generic term for the thermocouple input module and the RTD input module
Thermocouple input module	An abbreviation for the MELSEC iQ-R series channel isolated thermocouple input module

1 PART NAMES

This chapter describes the part names of temperature input modules.

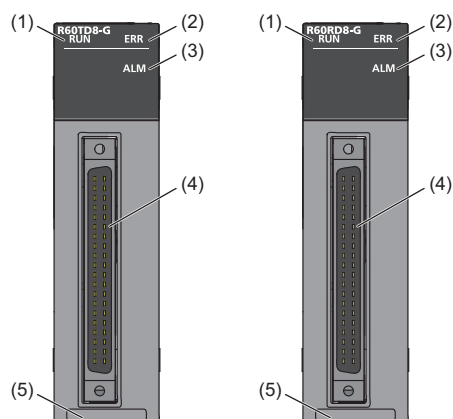

No.	Name	Description
(1)	RUN LED	Indicates the operating status of the module. On: Normal operation Flashing (1s cycle): In offset/gain setting mode Flashing (400ms cycle): The module for online module change selected Off: 5V power supply interrupted or watchdog timer error occurred, module change for online module change possible
(2)	ERR LED	Indicates the error status of the module. On: Error occurred* ¹ Off: Normal operation
(3)	ALM LED	Indicates the alarm status of the module. On: Alert (process alarm or rate alarm) issued Flashing: Disconnection detected Off: Normal operation
(4)	Connector for external devices	A connector for input signal wires of external devices and others For the signal layout, refer to the following.  Page 27 Signal layout of connectors for external devices
(5)	Production information marking	Shows the product information (16 digits) of the module.

*1 For details, refer to the following.

 MELSEC iQ-R Channel Isolated Thermocouple Input Module/Channel Isolated RTD Input Module User's Manual (Application)



2 SPECIFICATIONS

This chapter describes the performance specifications.

2.1 Performance Specifications

This section describes the performance specifications of temperature input modules.

Thermocouple input module

Item		Specifications
Model		R60TD8-G
Number of analog input channels		8 channels + Cold junction compensation channel per module
Output	Measured temperature value	16-bit signed binary value (-2700 to 18200)
	Scaling value	16-bit signed binary value
Compliant thermocouple standard		JIS C1602-1995, IEC 60584-1(1995), IEC 60584-2(1982)
Usable thermocouples and conversion accuracy		For details, refer to the following.  Page 44 Usable thermocouple, conversion accuracy, and effect per wiring resistance 1Ω
Cold junction compensation accuracy		±1.0°C
Accuracy*1		For details, refer to the following.  Page 44 Accuracy of the thermocouple input module
Resolution		B, R, S, N: 0.3°C K, E, J, T: 0.1°C
Conversion speed*2		30ms/channel
Isolation method*3	Between thermocouple input channel and programmable controller power supply	Transformer isolation
	Between thermocouple input channels	Transformer isolation
Withstand voltage	Between thermocouple input channel and programmable controller power supply	500VACrms for 1 minute
	Between thermocouple input channels	1000VACrms for 1 minute
Insulation resistance	Between thermocouple input channel and programmable controller power supply	500VDC 10MΩ or higher
	Between thermocouple input channels	500VDC 10MΩ or higher
Disconnection detection		Built-in
Number of offset/gain settings*4		50000 times maximum
Number of occupied I/O points		16 points (I/O assignment: Intelligent 16 points)
External interface		40-pin connector
Applicable wire size	When A6CON1 and A6CON4 are used	0.088 to 0.3mm ² (28 to 22 AWG) (stranded wire)
	When A6CON2 is used	0.088 to 0.24mm ² (28 to 24 AWG) (stranded wire)
Connector for external devices		A6CON1, A6CON2, A6CON4 (sold separately)
Internal current consumption (5VDC)		0.36A
External dimensions	Height	106mm
	Width	27.8mm
	Depth	110mm
Weight		0.19kg

*1 Except for the conditions under noise influence.

*2 This conversion speed is the time required to store a measured temperature value into the buffer memory in sampling processing.

*3 No isolation is provided between the cold junction compensation channel and the programmable controller power supply.

*4 A count more than 50000 times causes Number of writes to offset/gain settings reach limit error (error code: 1080H).

RTD input module

Item		Specifications
Model		R60RD8-G
Number of analog input channels		8 channels
Output	Measured temperature value	16-bit signed binary value (-2000 to 8500)
	Scaling value	16-bit signed binary value
Usable resistance temperature detector ^{*1}		Pt100 (JIS C 1604-2013, IEC 751:1983) JPt100 (JIS C 1604-1981) Ni100 (DIN 43760 1987) Pt50 (JIS C 1604-1981)
Temperature measuring range	Pt100	-200 to 850°C
	JPt100	-180 to 600°C
	Ni100	-60 to 250°C
	Pt50	-200 to 650°C
Output current for temperature detection		1.0mA or lower
Conversion accuracy ^{*2*3}	Pt100	-200 to 850°C ±0.8°C (ambient temperature: 25±5°C), ±2.4°C (ambient temperature: 0 to 55°C)
		-20 to 120°C ±0.3°C (ambient temperature: 25±5°C), ±1.1°C (ambient temperature: 0 to 55°C)
		0 to 200°C ±0.4°C (ambient temperature: 25±5°C), ±1.2°C (ambient temperature: 0 to 55°C)
	JPt100	-180 to 600°C ±0.8°C (ambient temperature: 25±5°C), ±2.4°C (ambient temperature: 0 to 55°C)
		-20 to 120°C ±0.3°C (ambient temperature: 25±5°C), ±1.1°C (ambient temperature: 0 to 55°C)
		0 to 200°C ±0.4°C (ambient temperature: 25±5°C), ±1.2°C (ambient temperature: 0 to 55°C)
	Ni100	-60 to 250°C ±0.4°C (ambient temperature: 25±5°C), ±1.2°C (ambient temperature: 0 to 55°C)
	Pt50	-200 to 650°C ±0.8°C (ambient temperature: 25±5°C), ±2.4°C (ambient temperature: 0 to 55°C)
Resolution		0.1°C
Conversion speed ^{*4}		10ms/channel
Isolation method	Between RTD input channel and programmable controller power supply	Transformer isolation
	Between RTD input channels	Transformer isolation
Withstand voltage	Between RTD input channel and programmable controller power supply	500VACrms for 1 minute
	Between RTD input channels	1000VACrms for 1 minute
Insulation resistance	Between RTD input channel and programmable controller power supply	500VDC 10MΩ or higher
	Between RTD input channels	500VDC 10MΩ or higher
Disconnection detection		Built-in
Number of offset/gain settings ^{*5}		50000 times maximum
Number of occupied I/O points		16 points (I/O assignment: Intelligent 16 points)
External interface		40-pin connector
Applicable wire size	When A6CON1 and A6CON4 are used	0.088mm ² to 0.3mm ² (28 to 22 AWG) (stranded wire)
	When A6CON2 is used	0.088mm ² to 0.24mm ² (28 to 24 AWG) (stranded wire)
Connector for external devices		A6CON1, A6CON2, A6CON4 (sold separately)
Internal current consumption (5VDC)		0.35A
External dimensions	Height	106mm
	Width	27.8mm
	Depth	110mm
Weight		0.19kg

*1 An usable resistance temperature detector is 3-wire type only. A resistance temperature detector of 2-wire type or 4-wire type cannot be used.

*2 When a value outside the input range is input from a resistance temperature detector, the value is regarded as the maximum value or minimum value of the input range.

*3 The accuracy when a resistance temperature detector is connected, refer to the following.

☞ Page 46 Accuracy of the RTD input module

*4 This conversion speed is the time required to store a measured temperature value into the buffer memory in sampling processing.



*5 A count more than 50000 times causes Number of writes to offset/gain settings reach limit error (error code: 1080H).

3 FUNCTION LIST

This chapter lists the functions of temperature input modules. For details on the functions, refer to the following.

📖 MELSEC iQ-R Channel Isolated Thermocouple Input Module/Channel Isolated RTD Input Module User's Manual (Application)

Item		Description
Input range setting function		Allows to select the thermocouple type or resistance temperature detector type to be used as well as the input range for each channel.
Conversion enable/disable setting function		Sets whether to enable or disable the temperature conversion for each channel. Disabling the conversion on unused channels reduces the conversion cycles.
Temperature conversion method	Sampling processing	Executes the conversion of temperature input values every sampling cycle and stores the converted values in buffer memory areas as measured temperature values.
	Averaging processing	Time average Executes the temperature conversion for set time and averages the total value excluding the maximum value and the minimum value. The calculated value is stored in the buffer memory area. The number of processing times within the set time varies depending on the number of channels where the conversion is enabled.
		Count average Executes the temperature conversion for a set number of times and averages the total value excluding the maximum value and the minimum value. The calculated value is stored in the buffer memory area. The time taken to store the average value obtained by the processing in the buffer memory area varies depending on the number of channels where the conversion is enabled.
		Moving average Averages measured temperature values taken at every sampling cycle for a specified number of times, and stores the averaged value in the buffer memory area. Because the target range for averaging processing is moved in response to every sampling processing, the latest measured temperature value can be obtained.
	Primary delay filter	Performs the conversion where the transient noise of temperature input is smoothed depending on the set time constant. The smoothed measured temperature value is stored in the buffer memory area.
Scaling function		Performs scale conversion from a measured temperature value to a value calculated using the ratio (%) of the set scaling width to the set scaling range. The converted value is stored in the buffer memory area.
Alert output function	Process alarm	Outputs an alert when a measured temperature value enters the preset alert output range.
	Rate alarm	Outputs an alert when the change of a measured temperature value is equal to or greater than the rate alarm upper limit value, or equal to or smaller than the rate alarm lower limit value.
Disconnection detection function		Outputs an alarm when disconnection of a thermocouple, compensation lead wire, or resistance temperature detector is detected. A measured temperature value to be stored at the disconnection detection is selected from the following. <ul style="list-style-type: none"> • Value just before disconnection • Upscale • Downscale • Any value
Cold junction compensation setting function		Enables two types of cold junction compensation (using a cold junction compensation resistor or an external method (cooling bath)) by setting whether to use a cold junction compensation resistor.
Cold junction compensation resistor disconnection detection function		Outputs an error when disconnection of a cold junction compensation resistor (RTD) is detected.
Logging function		Logs (records) measured temperature values or scaling values. Data of 1000 points can be logged for each channel.
Logging read function		Allows to store more than 1000 points of data without stopping logging by transferring the device data to the file register of the CPU module during logging. This function reduces the takt time in a test demanding high-speed conversion.
Interrupt function		Executes an interrupt program of the CPU module when an interrupt factor such as alert output or disconnection is detected.
Error history function		Records up to 16 errors and alarms that occurred in a temperature input module to store them in the buffer memory areas.
Event history function		Collects occurred errors and alarms, and performed operations in a temperature input module, and stores them as event information into the CPU module.
Offset/gain setting		Corrects errors in measured temperature values.
Backing up, saving, and restoring offset/gain values		Allows to back up, save, and restore the offset/gain values of the user range setting.

Item	Description
Online module change	Allows to replace a module without stopping the system. For procedures for the online module change, refer to the following.  MELSEC iQ-R Online Module Change Manual
Q compatible mode function	Allows to convert the layout of buffer memory addresses of a temperature input module to the one equivalent to a MELSEC-Q series module. This compatibility enables the reuse of programs that have proven performance on MELSEC-Q series modules.
Firmware update function ^{*1}	Enables users to update the firmware versions of modules by using firmware update files. (For the firmware update file, please consult your local Mitsubishi representative.) For details on the function, refer to the following.  MELSEC iQ-R Module Configuration Manual

^{*1} When offset/gain setting mode is used, the firmware update function cannot be used.

4 PROCEDURES BEFORE OPERATION

This chapter describes the procedures before operation.

1. Mounting a module


Mount a temperature input module in any desired configuration.

2. Wiring

Perform wiring of thermocouples or resistance temperature detectors to a temperature input module.


3. Adding a module

Add a temperature input module to a module configuration by using the engineering tool. For details, refer to the following.

 GX Works3 Operating Manual

4. Module settings

Set up the parameters of the temperature input module by using the engineering tool. For details, refer to the following.

 MELSEC iQ-R Channel Isolated Thermocouple Input Module/Channel Isolated RTD Input Module User's Manual (Application)

5. Offset/gain setting

Perform the offset/gain setting to set a user range.

 Page 41 OFFSET/GAIN SETTING


6. Programming

Create a program. For details, refer to the following.

 Page 34 OPERATION EXAMPLES

5 SYSTEM CONFIGURATION

For system configurations using the MELSEC iQ-R series modules, CPU modules that can be used with the temperature input module, and the number of mountable modules, refer to the following.


 MELSEC iQ-R Module Configuration Manual

6 WIRING

This chapter describes the wiring of a temperature input module.

6.1 Wiring Precautions

Check the signal layout and then correctly wire a temperature input module. For the signal layout, refer to the following.

 Page 27 Signal layout of connectors for external devices

Connector for external devices

Precautions

- Tighten the connector screws within the specified torque range.

Screw type	Tightening torque range
Connector screw (M2.6)	0.20 to 0.29N·m

- Use copper wire with a temperature rating of 75°C or higher for the connector.
- Use UL listed connectors if necessary for UL compliance.

Applicable connectors

Connectors for external devices to be used for a temperature input module are sold separately.

The following tables list the applicable connectors, and the reference product of a crimping tool.

■40-pin connectors

Type	Model	Applicable wire size
Soldering type connector (straight type)	A6CON1	0.088 to 0.3mm ² (28 to 22 AWG) (stranded wire)
Crimping type connector (straight type)	A6CON2	0.088 to 0.24mm ² (28 to 24 AWG) (stranded wire)
Soldering type connector (dual purpose (straight/oblique) type)	A6CON4	0.088 to 0.3mm ² (28 to 22 AWG) (stranded wire)

- *1 Use a cable with a sheath outside diameter of 1.3mm or less when 40 cables are connected.
Select appropriate cables according to the current value used.

Point

- The A6CON3 (IDC type connector (straight type)) cannot be used.
- A connector/terminal block converter module for MELSEC-Q series temperature input module and the dedicated cable can be used. For details, refer to the following.

 Page 32 To use a connector/terminal block converter module


■40-pin connector crimping tool

Type	Model	Contact
Crimping tool	N363TT005H	OTAX CO., LTD.

For how to wire the connector and how to use the crimping tool, contact the manufacturer.

Wiring methods, and installation and removal procedures for the connectors

For the wiring methods, and installation and removal procedures, refer to the following.

 MELSEC iQ-R Module Configuration Manual


6.2 External Wiring

Signal layout of connectors for external devices

The following tables show the signal layout of external device connectors of a temperature input module.

Thermocouple input module				
Pin layout (viewed from the front of the module)	CH1 to CH8, RTD			
	Pin number	Signal name	Pin number	Signal name
<div><div><div>A1</div><div>A2</div><div>A3</div><div>A4</div><div>A5</div><div>A6</div><div>A7</div><div>A8</div><div>A9</div><div>A10</div><div>A11</div><div>A12</div><div>A13</div><div>A14</div><div>A15</div><div>A16</div><div>A17</div><div>A18</div><div>A19</div><div>A20</div></div><div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div><div>□ □</div></div><div><div>B1</div><div>B2</div><div>B3</div><div>B4</div><div>B5</div><div>B6</div><div>B7</div><div>B8</div><div>B9</div><div>B10</div><div>B11</div><div>B12</div><div>B13</div><div>B14</div><div>B15</div><div>B16</div><div>B17</div><div>B18</div><div>B19</div><div>B20</div></div></div>	A1	CH1+	B1	CH1-
	A2	—	B2	—
	A3	CH2+	B3	CH2-
	A4	—	B4	—
	A5	CH3+	B5	CH3-
	A6	—	B6	—
	A7	CH4+	B7	CH4-
	A8	—	B8	—
	A9	CH5+	B9	CH5-
	A10	—	B10	—
	A11	CH6+	B11	CH6-
	A12	—	B12	—
	A13	CH7+	B13	CH7-
	A14	—	B14	—
	A15	CH8+	B15	CH8-
	A16	—	B16	—
	A17	—	B17	—
	A18	—	B18	—
	A19	—	B19	RTD+
	A20	RTDG	B20	RTD-

RTD input module

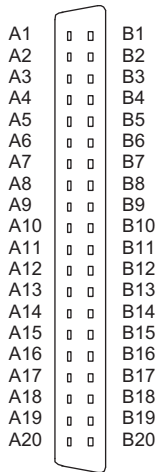Pin layout (viewed from the front of the module)	CH1 to CH8			
	Pin number	Signal name	Pin number	Signal name
	A1	CH1 A1	B1	CH1 B1
	A2	CH1 b1	B2	—
	A3	—	B3	CH2 b2
	A4	CH2 A2	B4	CH2 B2
	A5	—	B5	—
	A6	CH3 A3	B6	CH3 B3
	A7	CH3 b3	B7	—
	A8	—	B8	CH4 b4
	A9	CH4 A4	B9	CH4 B4
	A10	—	B10	—
	A11	CH5 A5	B11	CH5 B5
	A12	CH5 b5	B12	—
	A13	—	B13	CH6 b6
	A14	CH6 A6	B14	CH6 B6
	A15	—	B15	—
	A16	CH7 A7	B16	CH7 B7
	A17	CH7 b7	B17	—
	A18	—	B18	CH8 b8
	A19	CH8 A8	B19	CH8 B8
	A20	—	B20	—


External wiring examples

This section shows the examples of external wiring.

Thermocouple input module

Follow the procedure below for wiring.

1. Install a relay terminal block.
2. Connect thermocouples and compensation lead wires to the relay terminal block.
3. When With cold junction compensation (0) is set to 'Cold junction compensation with/without setting' (Un\G298), connect the provided cold junction compensation resistor (RTD) to the relay terminal block.
4. Wire the relay terminal block to a thermocouple input module using an external device connector.

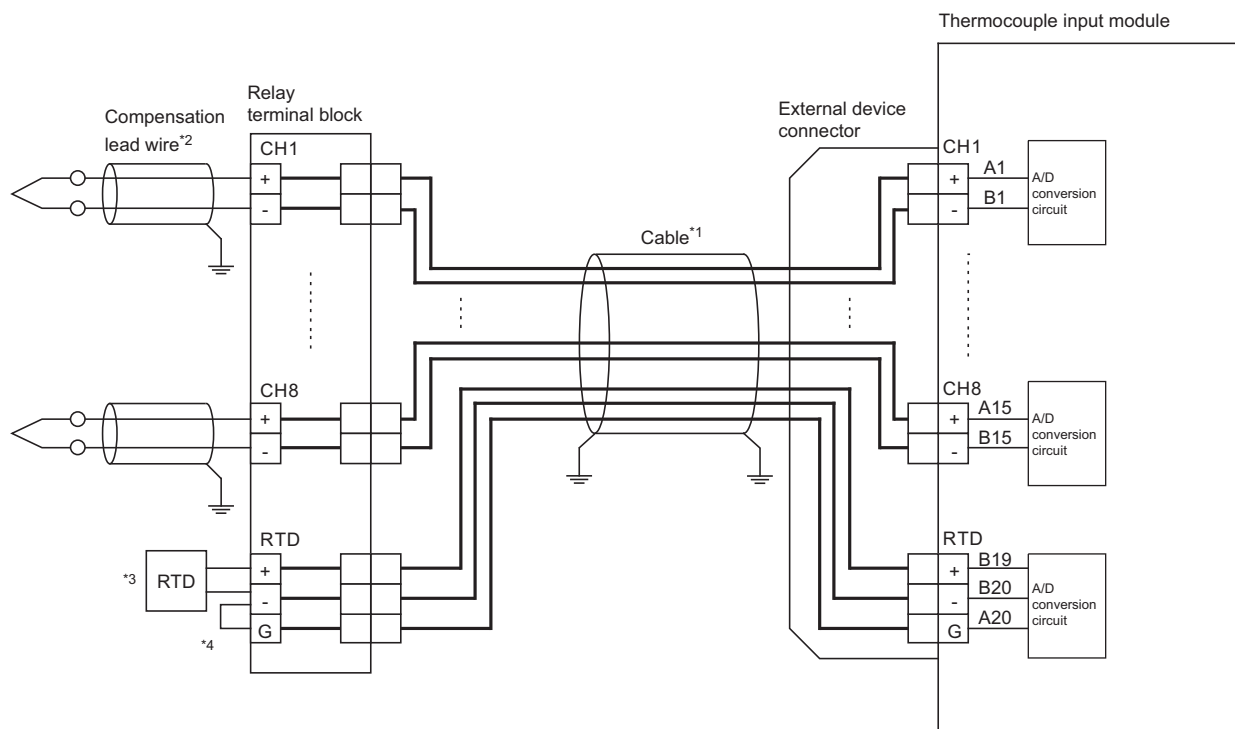

*1 Use a shielded cable and ground the shields. Do not use a compensation lead wire.


*2 Use a shielded compensation lead wire and ground the shield. Do not use a cable.

*3 Connect the cold junction compensation resistor (RTD) when With cold junction compensation (0) is set to 'Cold junction compensation with/without setting' (Un\G298).


*4 When connect the cold junction compensation resistor (RTD), connect the terminal of RTD- to the terminal of RTDG.

If the cold junction compensation resistor (RTD) and the reference junction of the thermocouple (or the reference junction of the compensation lead wire) are not connected to the same place (relay terminal block), the (ambient) temperature difference may lead to a faulty measured temperature value. In addition, if an incorrect wire is connected between A and B or B and C (case 1 or case 2 below), the (ambient) temperature difference may lead to a faulty measured temperature value.

- Case 1 (a cable is connected between the reference junction of the thermocouple and the relay terminal block)

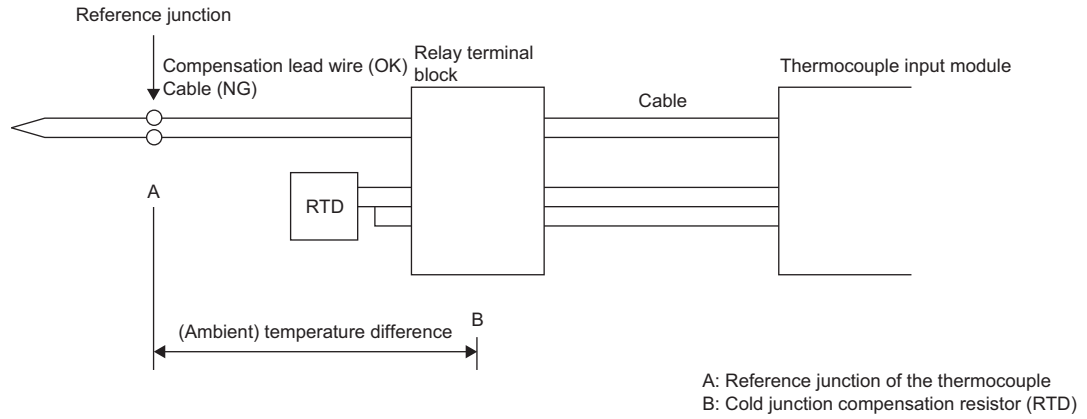


- Case 2 (a compensation lead wire is connected between the relay terminal block and the thermocouple input module)

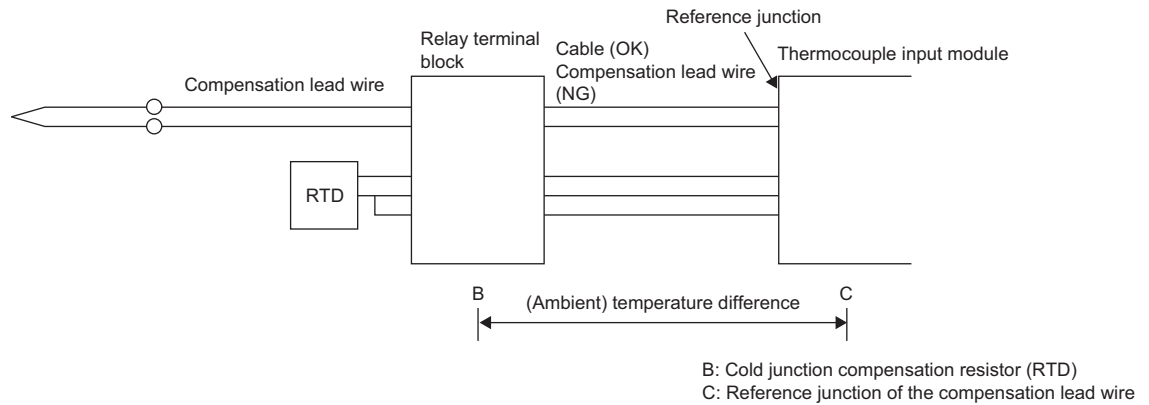

RTD input module

Follow the procedure below for wiring.


1. Install a relay terminal block.
2. Connect resistance temperature detectors to the relay terminal block.
3. Wire the relay terminal block to an RTD input module using an external device connector.

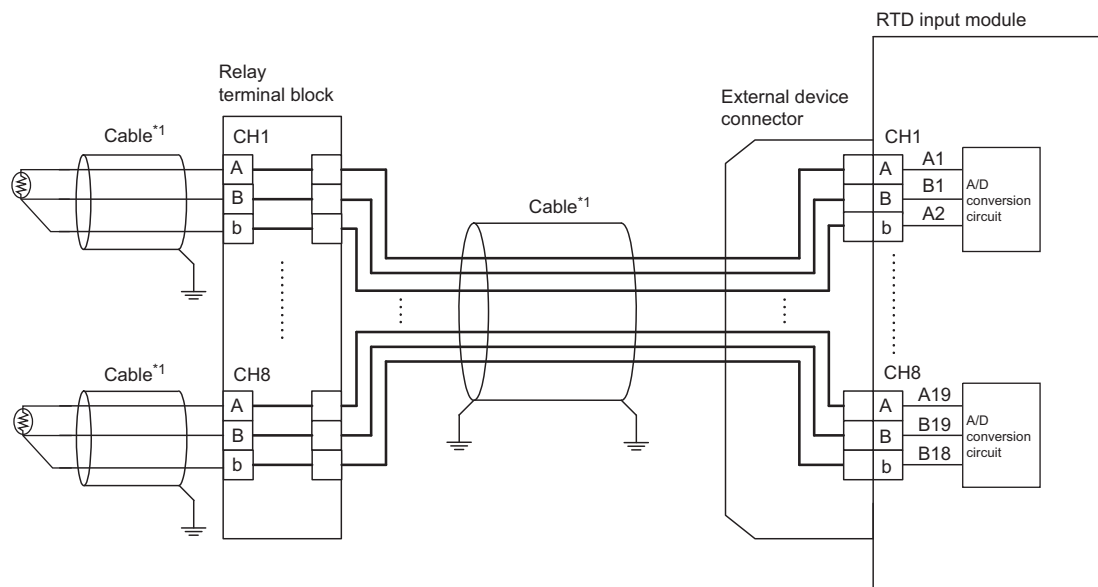

*1 Use a shielded cable and ground the shields.

■ Specifications when a resistance temperature detector is connected

When connecting a resistance temperature detector to the RTD input module, make sure that the conductor resistance values of three wires satisfy the conditions below.

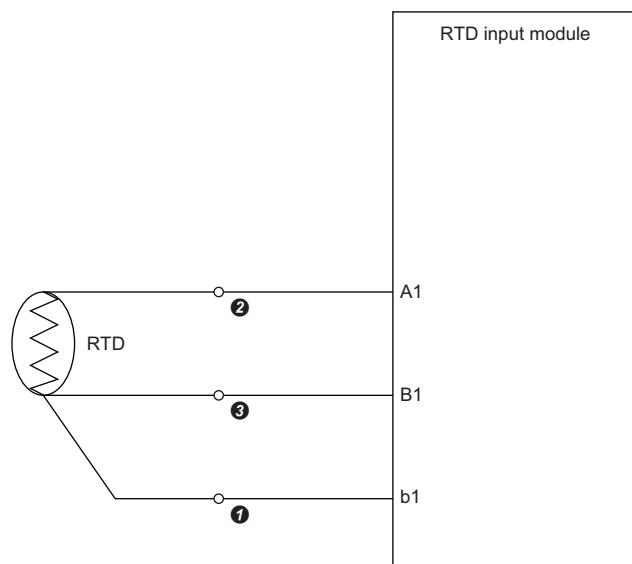


- Each conductor resistance of ①, ②, and ③ must be 350Ω or lower.
- The difference of conductor resistance values between ② and ③ must be 10Ω or lower when Pt100, JPt100, or Ni100 is used, 5Ω or lower when Pt50 is used.

To use a connector/terminal block converter module

A connector/terminal block converter module for MELSEC-Q series temperature input module can be used with a temperature input module. This section shows the examples of external wiring when a connector/terminal block converter module is used.

Thermocouple input module

Use the connector/terminal block converter module for the Q68TD-G-H02(H01). Wire the modules as shown below.

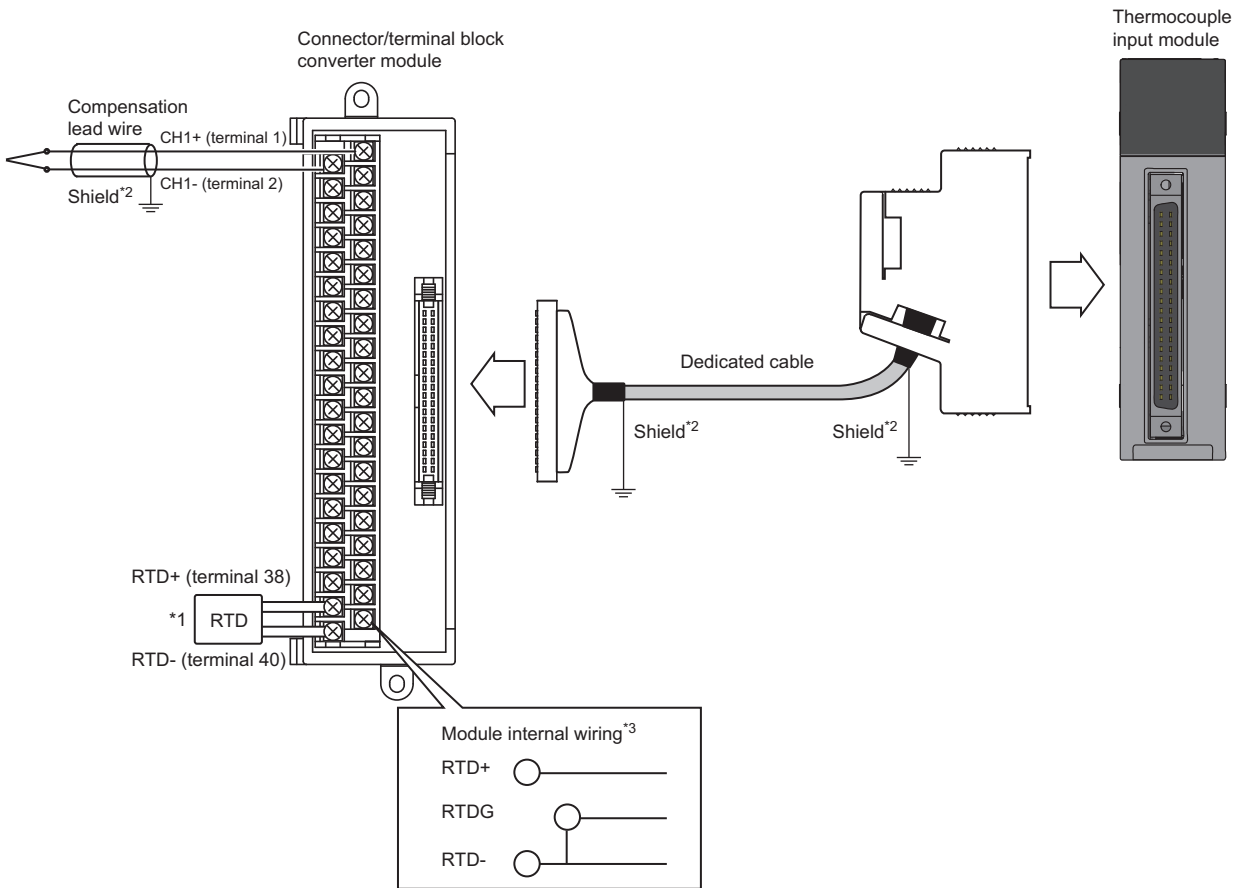

*1 Connect the cold junction compensation resistor (RTD) when With cold junction compensation (0) is set to 'Cold junction compensation with/without setting' (Un\G298).


*2 Ground the shields.

*3 The RTD- and RTDG are connected in the connector/terminal block converter module. Therefore the connection of RTD- and RTDG at the terminal block is not required.

Product name	Model	Remarks	Contact
Connector/terminal block converter module	FA-LTB40TDG	—	Your local Mitsubishi Electric sales office or representative
Dedicated cable	FA-CBL05Q68TDG	Cable length: 0.5m	
	FA-CBL10Q68TDG	Cable length: 1.0m	
	FA-CBL20Q68TDG	Cable length: 2.0m	
	FA-CBL30Q68TDG	Cable length: 3.0m	

RTD input module

Use the connector/terminal block converter module for the Q68RD3-G. Wire the modules as shown below.

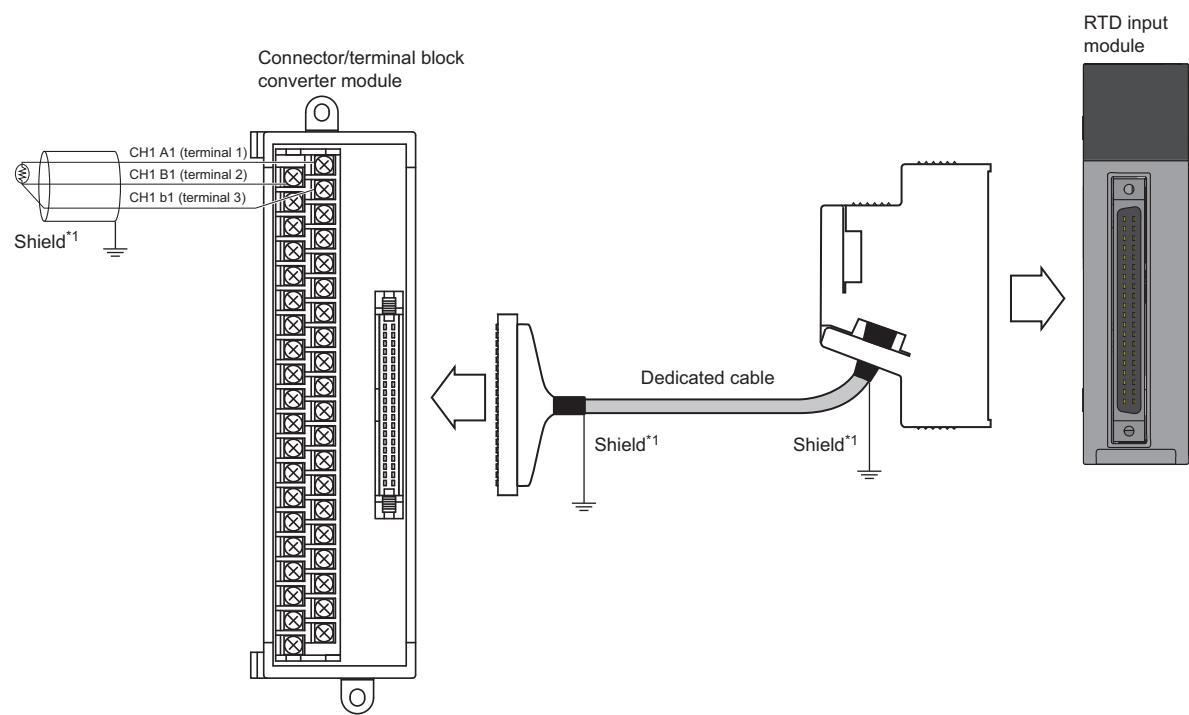

6

*1 Ground the shields.

Product name	Model	Remarks	Contact
Connector/terminal block converter module	FA-LTB40RD3G	—	Your local Mitsubishi Electric sales office or representative
Dedicated cable	FA-CBL05Q68RD3G	Cable length: 0.5m	
	FA-CBL10Q68RD3G	Cable length: 1.0m	
	FA-CBL20Q68RD3G	Cable length: 2.0m	
	FA-CBL30Q68RD3G	Cable length: 3.0m	

7 OPERATION EXAMPLES

This chapter describes the programming procedure and the basic program of a temperature input module.

7.1 Programming Procedure

Take the following steps to create a program for running a temperature input module:

1. Set parameters.

☞ Page 35 Parameter settings


2. Create a program.

☞ Page 38 Program examples

7.2 Program Examples

System configuration

The following figure shows an example of the system configuration.

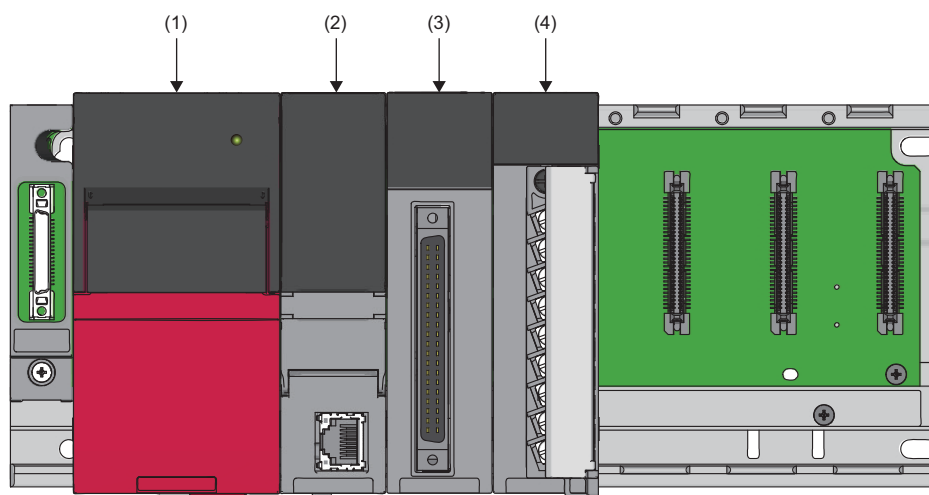

(1) Power supply module (R61P)

(2) CPU module (R120CPU)

(3) Temperature input module (R60TD8-G)

(4) Input module (RX10)


Parameter settings

Perform an initial setting in the module parameter of the engineering tool. The refresh settings do not need to be changed here.


Operating procedure

1. Create the project with the following settings.


 [Project] ⇒ [New]

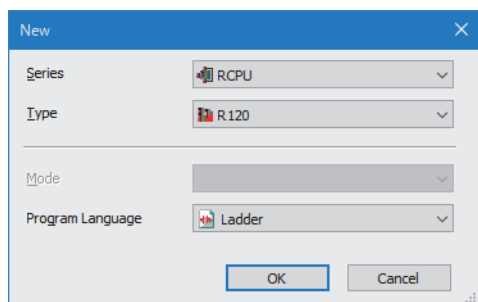


2. Click the [Setting Change] button and set "Module Label" to "Use".

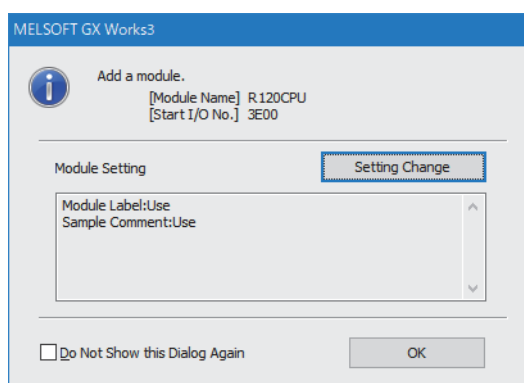

3. Add the temperature input module with the following settings.

 [Navigation window] ⇒ [Parameter] ⇒ [Module Information] ⇒ Right-click ⇒ [Add New Module]

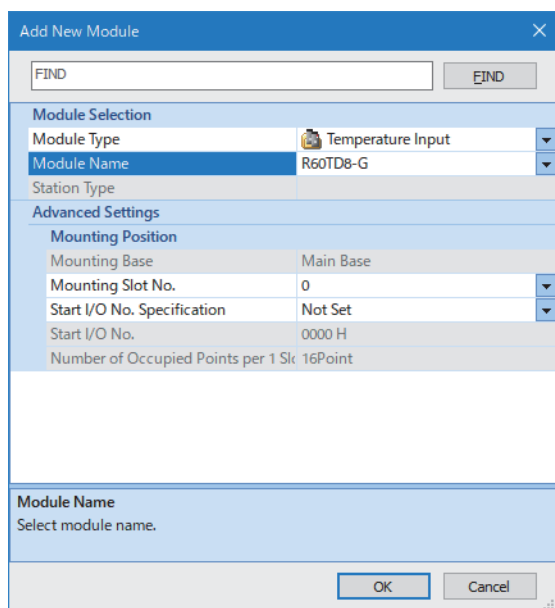

4. Configure the setting to use the module labels and add the module labels of the temperature input module.

MELSOFT GX Works3

Add a module.

[Module Name] R60TD8-G
[Start I/O No.] 0000

Module Setting

Module Label:Use
Sample Comment:Use

☐ Do Not Show this Dialog Again

OK

5. Set "Basic setting" of the module parameter of the temperature input module as shown below.

[Navigation window] ⇒ [Parameter] ⇒ [Module Information] ⇒ [R60TD8-G] ⇒ [Basic setting]

0000:R60TD8-G Module Parameter

Setting Item List

Input the Setting Item to Search

Basic setting
Application setting
Interrupt setting
Refresh settings

Setting Item

Item	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Thermocouple type selection function	Set the thermocouple type for each channel.							
Thermocouple type setting	Thermocouple K	Thermocouple K	Thermocouple E	Thermocouple K	Thermocouple J	Thermocouple K	Thermocouple T	Thermocouple K
Offset/gain setting	Factory default	Factory default	Factory default	Factory default	User range setti	Factory default	User range setti	Factory default setting
Cold junction temperature compensation with/without setting function	Set the cold junction temperature compensation with/without using the cold junction temperature compensation resistor.							
Cold junction temperature compensation	With cold junction temperature compensation							
Operation mode setting function	The two operation modes, "Normal mode" to execute the normal temperature conversion and "Offset/gain setting mode" to execute the offset/gain setting.							
Operation mode setting	Normal mode (Conversion process)							
Conversion enable/disable setting function	Set whether to enable or disable the output of the conversion value.							
Conversion enable/disable setting	Conversion enab	Conversion enab	Conversion enab	Conversion enab	Conversion enab	Conversion enab	Conversion enab	Conversion enab
Temperature conversion system	Set the temperature conversion control system.							
Average processing setting	Sampling proces	Sampling proces	Count average	Sampling proces	Moving average	Sampling proces	Sampling proces	Sampling processing
Time average/Count average/Moving average/Primary delay filter constant setting	0	0	50 times	0	10 times	0	0	0

Explanation

Set the thermocouple type for each channel.

Check Restore the Default Settings

6. Set "Application setting" of the module parameter of the temperature input module as shown below.

[Navigation window] ⇒ [Parameter] ⇒ [Module Information] ⇒ [R60TD8-G] ⇒ [Application setting]

0000:R60TD8-G Module Parameter

Setting Item List

Input the Setting Item to Search

Basic setting
Application setting
Interrupt setting
Refresh settings

Setting Item

Item	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Scaling function	Configure the setting for the scaling at the conversion.							
Scaling enable/disable setting	Disable	Disable	Disable	Disable	Enable	Disable	Disable	Disable
Scaling range upper limit value	0.0 °C	0.0 °C	0.0 °C	0.0 °C	500.0 °C	0.0 °C	0.0 °C	0.0 °C
Scaling range lower limit value	0.0 °C	0.0 °C	0.0 °C	0.0 °C	-100.0 °C	0.0 °C	0.0 °C	0.0 °C
Scaling width upper limit value	0	0	0	0	100	0	0	0
Scaling width lower limit value	0	0	0	0	0	0	0	0
Warning output function (Process alarm)	Set an alert at the conversion.							
Warning output setting (Process alarm)	Disable	Disable	Enable	Disable	Disable	Disable	Disable	Disable
Process alarm upper upper limit value	1200.0 °C	1200.0 °C	900.0 °C	1200.0 °C	1200.0 °C	1200.0 °C	1200.0 °C	1200.0 °C
Process alarm upper lower limit value	1200.0 °C	1200.0 °C	700.0 °C	1200.0 °C	1200.0 °C	1200.0 °C	1200.0 °C	1200.0 °C
Process alarm lower upper limit value	-200.0 °C	-200.0 °C	400.0 °C	-200.0 °C	-200.0 °C	-200.0 °C	-200.0 °C	-200.0 °C
Process alarm lower lower limit value	-200.0 °C	-200.0 °C	0.0 °C	-200.0 °C	-200.0 °C	-200.0 °C	-200.0 °C	-200.0 °C
Warning output function (Rate alarm)	Set an alert at the conversion.							
Warning output setting (Rate alarm)	Enable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Rate alarm detection cycle setting	40 times	0 times	0 times	0 times	0 times	0 times	0 times	0 times
Rate alarm upper limit value	25.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C
Rate alarm lower limit value	-5.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C
Disconnection detection function	Configure the setting for the disconnection detection at the conversion.							
Disconnection detection function enable/disable setting	Disable	Disable	Disable	Disable	Disable	Disable	Enable	Disable
Conversion setting for disconnection detection	Down Scale	Down Scale	Down Scale	Down Scale	Down Scale	Down Scale	Down Scale	Down Scale
Disconnection detection Automatic clear enable/disable setting	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C	0.0 °C
Logging function	Configure the setting for the logging function at the conversion.							
Logging enable/disable setting	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Measured temp	Measured temp	Measured temp	Measured temp	Measured temp	Measured temp	Measured temp	Measured temp	Measured temperature value
Logging data setting	240 ms	240 ms	240 ms	240 ms	240 ms	240 ms	240 ms	240 ms
Logging cycle setting value	ms	ms	ms	ms	ms	ms	ms	ms
Logging cycle unit setting	ms	ms	ms	ms	ms	ms	ms	ms
Level trigger condition setting	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Logging points after trigger	500	500	500	500	500	500	500	500
Trigger data	400	600	800	1000	1200	1400	1600	1800
Trigger setting value	0	0	0	0	0	0	0	0
Logging loading enable/disable setting	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Logging read points setting value	100	100	100	100	100	100	100	100
Online module change	The module can be changed without the system being stopped.							
Auto restore of Offset/gain setting with the module change	Enable							

Explanation

Configure the setting for the scaling at the conversion.

Check Restore the Default Settings

7. Write the set parameters to the CPU module on the master station. Then reset the CPU module or turn off and on the power.


 [Online] ⇌ [Write to PLC]

Label settings

GX Works3 provides functions that support the creation of a program.

The following table lists the module labels and global labels used for the program examples in this section.

There is no need to change the settings of the module labels. For details on the global labels, refer to the following.


 MELSEC iQ-R Programming Manual (Program Design)

Classification	Label name	Description	Device
Module label	R60TDG_1.bModuleREADY	Module READY	X0
	R60TDG_1.bDisconnectionDetectionSignal	Disconnection detection signal	XC
	R60TDG_1.bConversionCompletedFlag	Conversion completed flag	XE
	R60TDG_1.bErrorFlag	Error flag	XF
	R60TDG_1.bOperatingConditionSettingRequest	Operating condition setting request	Y9
	R60TDG_1.stnMonitor[0].wMeasuredTemperatureValue	CH1 Measured temperature value	—
	R60TDG_1.uConversionCompletedFlag.0	CH1 Conversion completed flag	—
	R60TDG_1.stnMonitor[2].wMeasuredTemperatureValue	CH3 Measured temperature value	—
	R60TDG_1.uConversionCompletedFlag.2	CH3 Conversion completed flag	—
	R60TDG_1.stnMonitor[4].wMeasuredTemperatureValue	CH5 Measured temperature value	—
	R60TDG_1.uConversionCompletedFlag.4	CH5 Conversion completed flag	—
	R60TDG_1.stnMonitor[6].wMeasuredTemperatureValue	CH7 Measured temperature value	—
	R60TDG_1.uConversionCompletedFlag.6	CH7 Conversion completed flag	—
	R60TDG_1.uWarningOutputFlagProcessAlarmUpperLimit.2	CH3 Alert output flag (Process alarm upper limit)	—
	R60TDG_1.uWarningOutputFlagProcessAlarmLowerLimit.2	CH3 Alert output flag (Process alarm lower limit)	—
	R60TDG_1.uWarningOutputFlagRateAlarmUpperLimit.0	CH1 Alert output flag (Rate alarm upper limit)	—
	R60TDG_1.uWarningOutputFlagRateAlarmLowerLimit.0	CH1 Alert output flag (Rate alarm lower limit)	—
	R60TDG_1.uDisconnectionDetectionFlag.6	CH7 Disconnection detection signal	—
Labels to be defined	Define global labels as shown below:		
	Label Name	Data Type	Class
1	CH1_TemperatureVal	Word [Signed]	VAR_GLOBAL
2	CH3_TemperatureVal	Word [Signed]	VAR_GLOBAL
3	CH5_ScalingVal	Word [Signed]	VAR_GLOBAL
4	CH7_TemperatureVal	Word [Signed]	VAR_GLOBAL
5	CH3_ProcAlmUpLimit	Bit	VAR_GLOBAL
6	CH3_ProcAlmLowLimit	Bit	VAR_GLOBAL
7	CH1_RateAlmUpLimit	Bit	VAR_GLOBAL
8	CH1_RateAlmLowLimit	Bit	VAR_GLOBAL
9	CH7_Disconnection	Bit	VAR_GLOBAL
10	DigitOutValSig	Bit	VAR_GLOBAL
11	ErrResetSig	Bit	VAR_GLOBAL
12	ErrOperationEN	Bit	VAR_GLOBAL
13	ErrOperationENO	Bit	VAR_GLOBAL
14	ErrOperationOK	Bit	VAR_GLOBAL
15	UnitErrFlg	Bit	VAR_GLOBAL
16	UnitErrCode	Word [Signed]	VAR_GLOBAL
17	UnitAlamCode	Word [Signed]	VAR_GLOBAL

Program examples

■Program example 1


- This program is an example to read and save the measured temperature values of CH1, CH3, and CH7, and the scaling value of CH5.

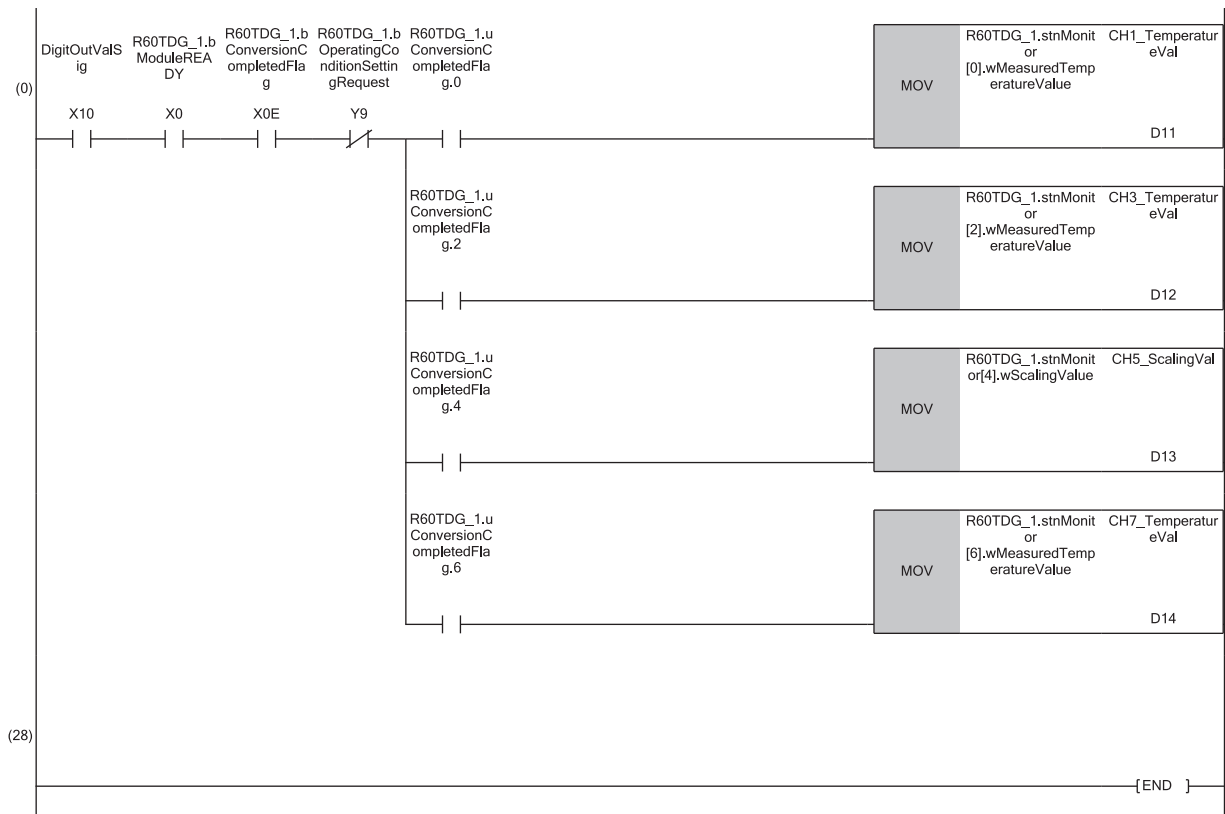

(0) CH1 Measured temperature value, CH3 Measured temperature value, CH5 Scaling value, and CH7 Measured temperature value are to be read.

■Program example 2


- This program is an example to perform the processing at the time of the issuance of a process alarm upper/lower limit alert in CH3.

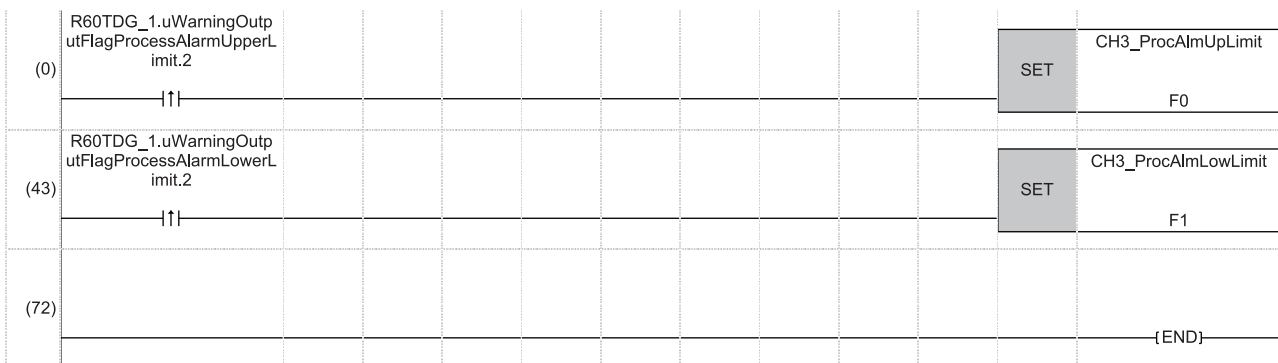


(0) At the time when a process alarm upper limit alert is issued in CH3, the processing is to be performed.

(43) At the time when a process alarm lower limit alert is issued in CH3, the processing is to be performed.

- This program is an example to perform the processing at the time of the issuance of a rate alarm upper/lower limit alert in CH1.




- This program is an example to perform the processing at the time of disconnection detection in CH7.



■Program example 5

- This program is an example to make the latest error code appear when disconnection is detected or an error has occurred. After this, the program clears the disconnection detection flag, error flag, and stored error code.

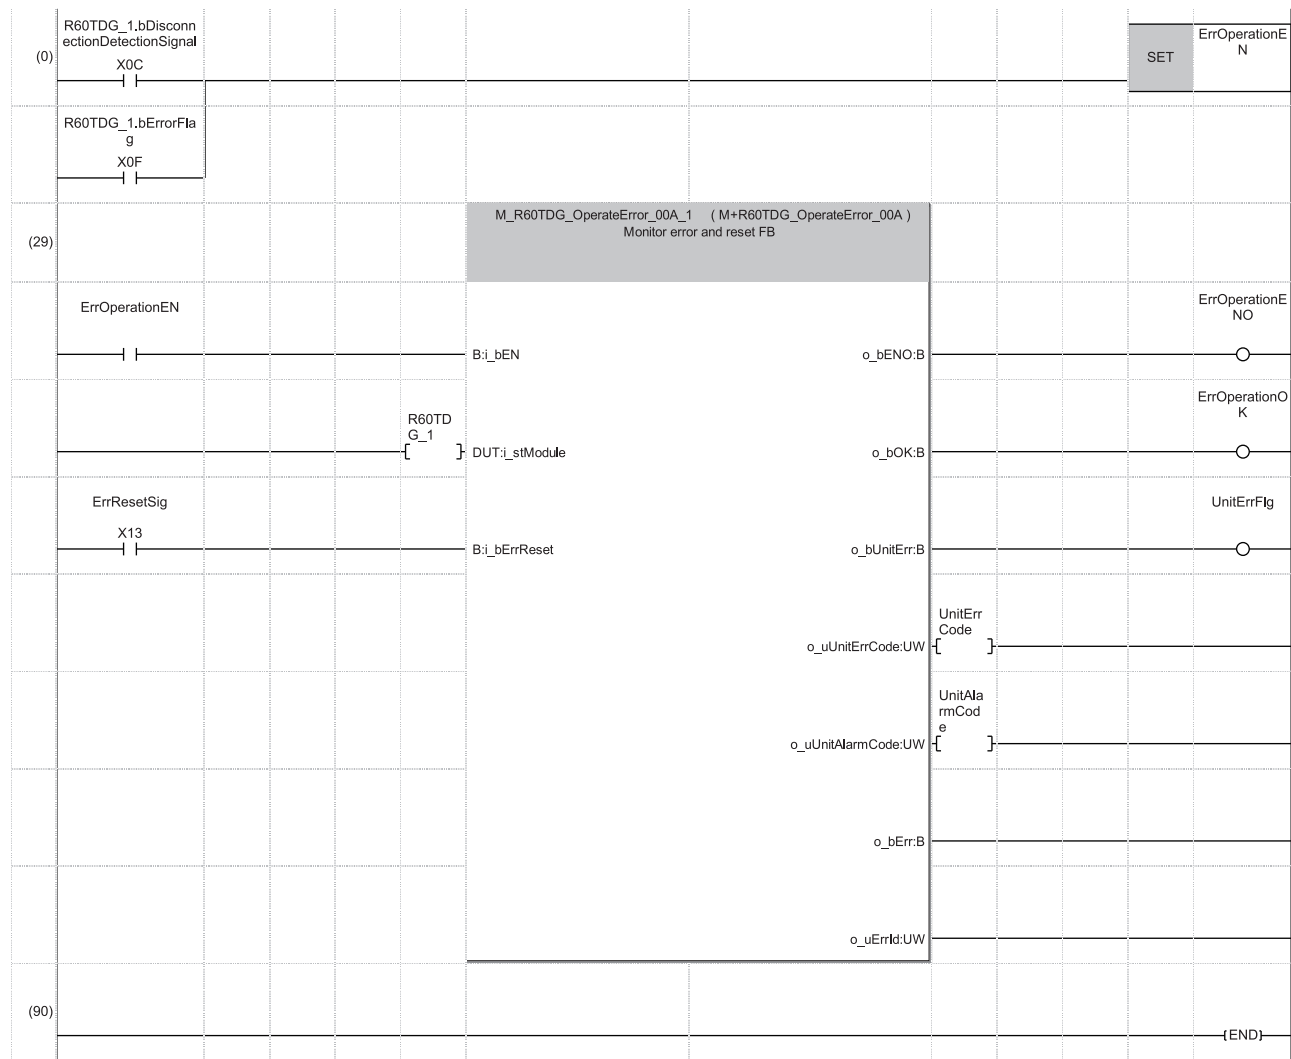

(0) Error manipulation start flag is to be turned on.

8 OFFSET/GAIN SETTING


Using the user range setting requires setting the offset and gain values.

Access to the offset/gain setting window in the engineering tool to set the offset and gain values.


8.1 Setting Procedure

The setting procedure for the offset/gain setting of a temperature input module is as follows:


[Tool] ⇒ [Module Tool List]

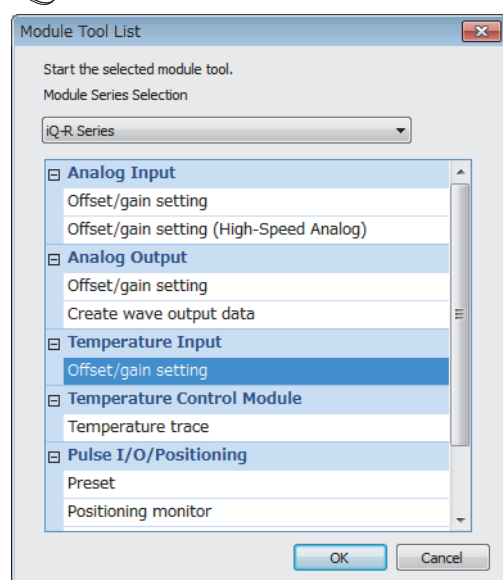

1. In "Temperature Input", select "Offset/gain setting" and click [OK] button.

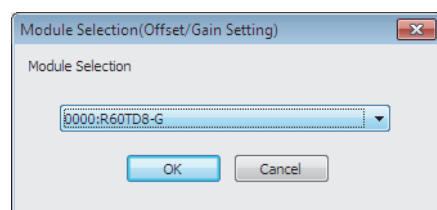

2. Select the target module for the offset/gain setting, and click [OK] button.

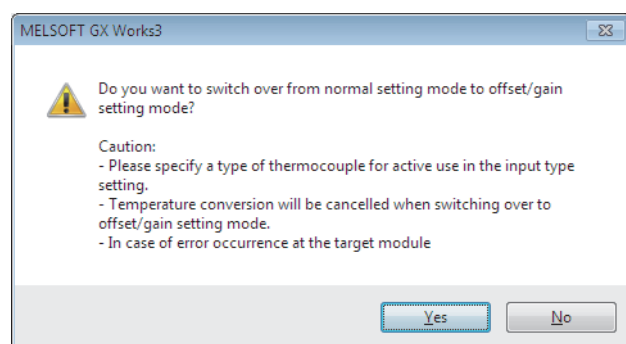

3. Click [Yes] button.

Set offset/gain settings.

Object Module: 0000:R60TD8-G

Error Code: -- [Detail Display]

Error Clear

Offset/Gain Setting	Setting Range Mode	Offset Temperature Setting Value	Offset Status	Gain Temperature Setting Value	Gain Status
<input checked="" type="checkbox"/> CH1(1)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C	0.0	Changed	100.0	Changed
<input type="checkbox"/> CH2(2)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH3(3)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH4(4)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH5(5)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH6(6)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH7(7)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH8(8)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				

Settable Temperature Range:
Condition1: (Gain Value) - (Offset Value) > 0.1[C] (when temperature is input)
Please adjust the offset/gain around the minimum and maximum value of temperature for use.

Condition2: Input range shown below (): accuracy assurance range)
K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C

Please select a target channel for the offset/gain setting and press Offset Setting or Gain Setting.
Pressing Close registers to the module.

Close

MELSOFT GX Works3

Executes the offset settings.
Please press the Yes button after setting the temperature/voltage to the target channel.

Yes No

Set offset/gain settings.

Object Module: 0000:R60TD8-G

Error Code: -- [Detail Display]

Error Clear

Offset/Gain Setting	Setting Range Mode	Offset Temperature Setting Value	Offset Status	Gain Temperature Setting Value	Gain Status
<input checked="" type="checkbox"/> CH1(1)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C	0.0	Changed	100.0	Changed
<input type="checkbox"/> CH2(2)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH3(3)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH4(4)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH5(5)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH6(6)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH7(7)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH8(8)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				

Settable Temperature Range:
Condition1: (Gain Value) - (Offset Value) > 0.1[C] (when temperature is input)
Please adjust the offset/gain around the minimum and maximum value of temperature for use.

Condition2: Input range shown below (): accuracy assurance range)
K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C

Please select a target channel for the offset/gain setting and press Offset Setting or Gain Setting.
Pressing Close registers to the module.

Close

MELSOFT GX Works3

Executes the gain settings.
Please press the Yes button after setting the temperature/voltage to the target channel.

Yes No

Set offset/gain settings.

Object Module: 0000:R60TD8-G

Error Code: -- [Detail Display]

Error Clear

Offset/Gain Setting	Setting Range Mode	Offset Temperature Setting Value	Offset Status	Gain Temperature Setting Value	Gain Status
<input checked="" type="checkbox"/> CH1(1)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C	0.0	Changed	100.0	Changed
<input type="checkbox"/> CH2(2)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH3(3)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH4(4)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH5(5)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH6(6)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH7(7)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				
<input type="checkbox"/> CH8(8)	K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C				


Settable Temperature Range:
Condition1: (Gain Value) - (Offset Value) > 0.1[C] (when temperature is input)
Please adjust the offset/gain around the minimum and maximum value of temperature for use.

Condition2: Input range shown below (): accuracy assurance range)
K Thermocouple: -270.0 to 1370.0C; 200.0 to 1200.0C

Please select a target channel for the offset/gain setting and press Offset Setting or Gain Setting.
Pressing Close registers to the module.

Close

4. Check the channel where the offset/gain setting is performed.
5. Write the temperature setting value corresponding to the offset value to "Offset Temperature Setting Value".
6. Click [Offset Setting] button.
7. Apply a value that becomes an offset value to the terminal of the corresponding channel, and click [Yes] button.
8. Check that "Offset Status" has changed to "Changed".
9. Write the temperature setting value corresponding to the gain value to "Gain Temperature Setting Value".
10. Click [Gain Setting] button.
11. Apply a value that becomes a gain value to the terminal of the corresponding channel, and click [Yes] button.
12. Check that "Gain Status" has changed to "Changed", and click [Close] button.

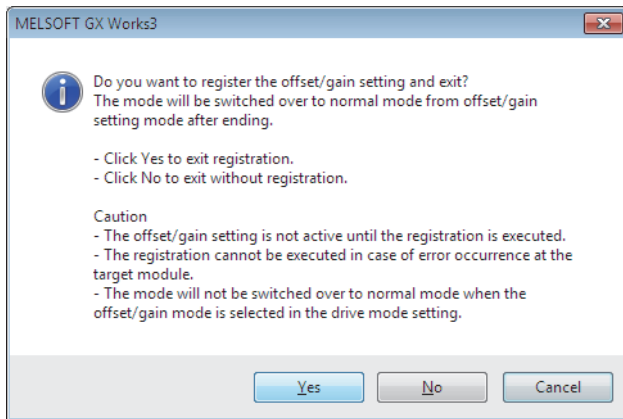

13. Click [Yes] button.

Point

After shifting the mode from offset/gain setting mode to normal mode, change the operating status of the CPU module from STOP to RUN, reset the CPU module, or turn off and on the power.

APPENDICES

Appendix 1 Accuracy

This section describes the accuracy of a temperature input module.

Accuracy of the thermocouple input module

The accuracy (°C) is calculated from the following formula.

$$A_C + T_C \times C_{OAT} + A_{CJ}$$

A_C : Conversion accuracy

T_C : Temperature characteristics

C_{OAT} : Operating ambient temperature change

A_{CJ} : Cold junction compensation accuracy

Note that the operating ambient temperature change indicates the extent to which the operating ambient temperature is out of the range of $25 \pm 5^\circ\text{C}$.

Ex.

Accuracy when B thermocouple is used, the operating ambient temperature is 35°C , and measured temperature is 1000°C
 $(\pm 1.0^\circ\text{C}) + (\pm 0.29^\circ\text{C}) \times (35^\circ\text{C} - 30^\circ\text{C}) + (\pm 1^\circ\text{C}) = \pm 3.45^\circ\text{C}$

■ Usable thermocouple, conversion accuracy, and effect per wiring resistance 1Ω

The following table shows the relation of usable thermocouple, conversion accuracy, and effect per wiring resistance 1Ω

Usable thermocouple	Temperature measuring range*1	Conversion accuracy (for operating ambient temperature $25 \pm 5^\circ\text{C}$)	Temperature characteristics (for 1°C of operating ambient temperature change)	Maximum temperature error at ambient temperature 55°C	Effect per wiring resistance 1Ω *4
B	0 to 600°C	—*3	—*3	—*3	—*3
	600 to 800°C *2	$\pm 1.3^\circ\text{C}$	$\pm 0.3^\circ\text{C}$	$\pm 8.8^\circ\text{C}$	$0.042^\circ\text{C}/\Omega$
	800 to 1700°C *2	$\pm 1.0^\circ\text{C}$	$\pm 0.29^\circ\text{C}$	$\pm 8.25^\circ\text{C}$	$0.036^\circ\text{C}/\Omega$
	1700 to 1820°C	—*3	—*3	—*3	—*3
R	-50 to 0°C	—*3	—*3	—*3	—*3
	0 to 300°C *2	$\pm 1.5^\circ\text{C}$	$\pm 0.4^\circ\text{C}$	$\pm 11.5^\circ\text{C}$	$0.05^\circ\text{C}/\Omega$
	300 to 1600°C *2	$\pm 0.8^\circ\text{C}$	$\pm 0.29^\circ\text{C}$	$\pm 8.05^\circ\text{C}$	$0.028^\circ\text{C}/\Omega$
	1600 to 1760°C	—*3	—*3	—*3	—*3
S	-50 to 0°C	—*3	—*3	—*3	—*3
	0 to 300°C *2	$\pm 1.5^\circ\text{C}$	$\pm 0.4^\circ\text{C}$	$\pm 11.5^\circ\text{C}$	$0.05^\circ\text{C}/\Omega$
	300 to 1600°C *2	$\pm 0.8^\circ\text{C}$	$\pm 0.29^\circ\text{C}$	$\pm 8.05^\circ\text{C}$	$0.028^\circ\text{C}/\Omega$
	1600 to 1760°C	—*3	—*3	—*3	—*3
K	-270 to -200°C	—*3	—*3	—*3	—*3
	-200 to 0°C *2	$\pm 0.5^\circ\text{C}$	$\pm 0.06^\circ\text{C}$, or a larger value of -0.1% or $+0.1\%$ of measured temperature	$\pm 5.5^\circ\text{C}$	$0.017^\circ\text{C}/\Omega$
	0 to 1200°C *2	$\pm 0.3^\circ\text{C}$	$\pm 0.06^\circ\text{C}$, or a larger value of -0.02% or $+0.02\%$ of measured temperature	$\pm 6.3^\circ\text{C}$	$0.007^\circ\text{C}/\Omega$
	1200 to 1370°C	—*3	—*3	—*3	—*3
E	-270 to -200°C	—*3	—*3	—*3	—*3
	-200 to 0°C *2	$\pm 0.5^\circ\text{C}$	$\pm 0.06^\circ\text{C}$, or a larger value of -0.15% or $+0.15\%$ of measured temperature	$\pm 8.0^\circ\text{C}$	$0.01^\circ\text{C}/\Omega$
	0 to 900°C *2	$\pm 0.2^\circ\text{C}$	$\pm 0.06^\circ\text{C}$, or a larger value of -0.02% or $+0.02\%$ of measured temperature	$\pm 4.7^\circ\text{C}$	$0.005^\circ\text{C}/\Omega$
	900 to 1000°C	—*3	—*3	—*3	—*3

Usable thermocouple	Temperature measuring range ^{*1}	Conversion accuracy (for operating ambient temperature 25±5°C)	Temperature characteristics (for 1°C of operating ambient temperature change)	Maximum temperature error at ambient temperature 55°C	Effect per wiring resistance 1Ω ^{*4}
J	-210 to -40°C	— ^{*3}	— ^{*3}	— ^{*3}	— ^{*3}
	-40 to 750°C ^{*2}	±0.2°C	±0.06°C, or a larger value of -0.02% or +0.02% of measured temperature	±3.95°C	0.006°C/Ω
	750 to 1200°C	— ^{*3}	— ^{*3}	— ^{*3}	— ^{*3}
T	-270 to -200°C	— ^{*3}	— ^{*3}	— ^{*3}	— ^{*3}
	-200 to 0°C ^{*2}	±0.5°C	±0.06°C, or a larger value of -0.1% or +0.1% of measured temperature	±5.5°C	0.016°C/Ω
	0 to 350°C ^{*2}	±0.4°C	±0.06°C, or a larger value of -0.02% or +0.02% of measured temperature	±2.15°C	0.007°C/Ω
	350 to 400°C	— ^{*3}	— ^{*3}	— ^{*3}	— ^{*3}
N	-270 to -200°C	— ^{*3}	— ^{*3}	— ^{*3}	— ^{*3}
	-200 to 0°C ^{*2}	±0.5°C	±0.06°C, or a larger value of -0.2% or +0.2% of measured temperature	±6.2°C	0.025°C/Ω
	0 to 1250°C ^{*2}	±0.5°C	±0.06°C, or a larger value of -0.02% or +0.02% of measured temperature	±6.75°C	0.01°C/Ω
	1250 to 1300°C	— ^{*3}	— ^{*3}	— ^{*3}	— ^{*3}

*1 If a value outside the temperature measuring range in the table is input from a thermocouple, the value is regarded as the maximum value or minimum value of the temperature measuring range.

*2 The accuracy is applied to only the temperature range of class 1 to 3 of JIS C 1602-1995.

*3 The accuracy is not guaranteed though temperature measurement is possible.

*4 The value indicates a temperature error generated per wiring resistance 1Ω of a thermocouple. Check the resistance value and calculate the temperature error of the system. If the error is beyond the allowable range of the system used, correct the measured temperature value with the offset/gain setting.

Accuracy of the RTD input module

The accuracy (°C) is calculated from the following formula.

$$A_C + A_{L_{RTD}}$$

A_C : Conversion accuracy

$A_{L_{RTD}}$: Allowance of the resistance temperature detector used

- Allowance of Pt100 (JIS C 1604-1997, IEC 751:1983)

Class	Allowance
A	$\pm(0.15 + 0.002 t)^{\circ}\text{C}$
B	$\pm(0.3 + 0.005 t)^{\circ}\text{C}$

- Allowance of JPt100 and Pt50 (JIS C 1604-1981)


Class	Allowance
0.15	$\pm(0.15 + 0.0015 t)^{\circ}\text{C}$
0.2	$\pm(0.15 + 0.002 t)^{\circ}\text{C}$
0.5	$\pm(0.3 + 0.005 t)^{\circ}\text{C}$

- Allowance of Ni100 (DIN 43760 1987)

Class	Allowance
0 to 250°C	$\pm(0.4 + 0.007 t)^{\circ}\text{C}$
-60 to 0°C	$\pm(0.4 + 0.0028 t)^{\circ}\text{C}$

Appendix 2 External Dimensions

The following figure shows the external dimensions of a temperature input module.

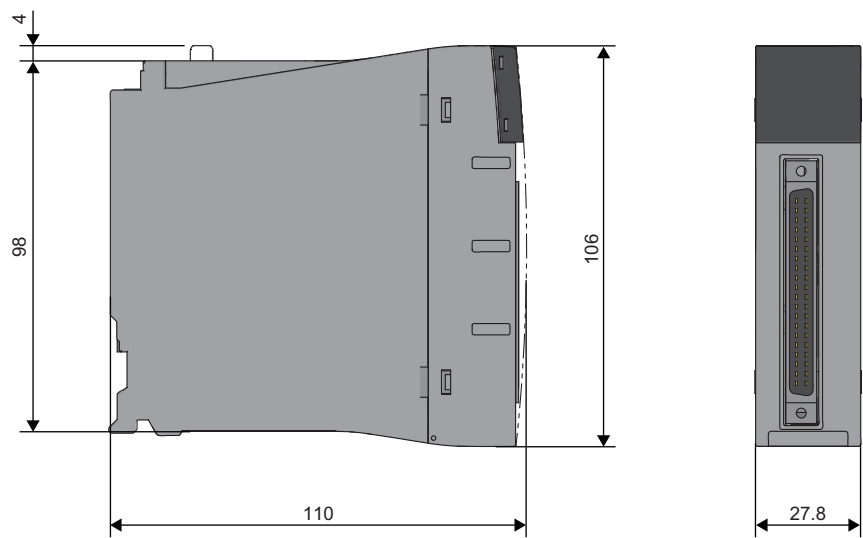

(Unit: mm)

INDEX

0 to 9

40-pin connector crimping tool	26
40-pin connectors	26

A

Accuracy	44
ALM LED	16

C

Cold junction compensation resistor (RTD)	15
Connector for external devices	16,26

E

ERR LED	16
External dimensions	47
External wiring examples	29

O

Offset/gain setting	41
-------------------------------	----

P

Performance specifications	18
Production information marking	16
Program examples	34

R

RTD input module	15
RUN LED	16

S

Signal layout of connectors for external devices	27
---	----

T

Temperature input module	15
Thermocouple input module	15

MEMO

REVISIONS

*The manual number is given on the bottom left of the back cover.

Revision date	*Manual number	Description
January 2015	SH(NA)-081493ENG-A	First edition
March 2016	SH(NA)-081493ENG-B	■Added or modified parts RELEVANT MANUALS, Chapter 4, Section 5.2, 7.1, Appendix 1, 2
August 2020	SH(NA)-081493ENG-C	■Added or modified part Appendix 2
January 2021	SH(NA)-081493ENG-D	■Added or modified parts SAFETY PRECAUTIONS, RELEVANT MANUALS, TERMS, GENERIC TERMS AND ABBREVIATIONS, Chapter 3, 5, Section 7.2
February 2024	SH(NA)-081493ENG-E	■Added or modified parts SAFETY PRECAUTIONS, Section 6.1, 7.2
October 2024	SH(NA)-081493ENG-F	■Added or modified part Section 8.1

Japanese manual number: SH-081492-F

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2015 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

TRADEMARKS

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as '™' or '®' are not specified in this manual.

SH(NA)-081493ENG-F(2410)MEE
MODEL: R60TDG-R60RDG-U-IN-E

mitsubishi electric corporation

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN

When exported from Japan, this manual does not require application to the
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.