

# MITSUBISHI

## GT16 Video/RGB Input Unit

### User's Manual

GT16M-V4  
GT16M-V4R1  
GT16M-R2

Thank you for purchasing the GOT1000 Series.

Prior to use, please read both this manual and detailed manual thoroughly to fully understand the product.

|                           |              |
|---------------------------|--------------|
| MODEL                     | GT16M-V4R1-U |
| MODEL CODE                | 1D7M85       |
| IB(NA)-0800431-D(1106)MEE |              |

GRAPHIC OPERATION TERMINAL  
**GOT1000**

#### SAFETY PRECAUTIONS

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product. In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".

**DANGER** Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

**CAUTION** Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the **CAUTION** level may lead to a serious accident according to the circumstances. Always follow the precautions of both levels because they are important to personal safety. Please save this manual to make it accessible when required and always forward it to the end user.

#### DESIGN PRECAUTIONS

##### CAUTION

- Do not bunch the control wires or communication cables with the main circuit or power wires, or lay them close to each other. As a guide, separate the lines by a distance of at least 100mm (3.94 inches) otherwise malfunctions may occur due to noise.

#### INSTALLATION PRECAUTIONS

##### DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing this unit to/from the GOT. Not doing so can cause a unit failure or malfunction.
- Before connecting the Bus connection cable to this unit, always shut off GOT power and PLC CPU power externally in all phases. Not doing so can cause a malfunction.

##### CAUTION

- Use this unit in the environment that satisfies the general specifications described in the User's Manual for the GOT used. Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- Do not drop the unit or subject it to string shock. A unit damage may result.
- When installing this unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range. Undertightening can cause a drop, failure or malfunction. Overtightening can cause a drop, failure or malfunction due to screw or unit damage.

#### WIRING PRECAUTIONS

##### DANGER

- Be sure to shut off all phases of the external power supply used by the system before wiring. Failure to do so may result in an electric shock, product damage or malfunctions.

##### CAUTION

- Exercise care to avoid foreign matter such as chips and wire offcuts entering the unit. Not doing so can cause a fire, failure or malfunction.
- Make sure to securely connect the cable to the connector of unit. Incorrect connection may cause malfunctions.

#### STARTUP AND MAINTENANCE PRECAUTIONS

##### DANGER

- Before starting cleaning, always shut off GOT power externally in all phases. Not doing so can cause a unit failure or malfunction. Undertightening can cause the GOT to drop, short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.
- Do not disassemble or modify any unit. This will cause failure, malfunction, injuries, or fire.
- Do not touch the conductive areas and electronic parts of this unit directly. Doing so can cause a unit malfunction or failure.

##### CAUTION

- Always secure the cables connected to the unit, e.g. run them in conduits or clamp them. Not doing so can cause unit or cable damage due to dangling, moved or accidentally pulled cables or can cause a malfunction due to a cable contact fault.
- Do not hold the cable part when unplugging any cable connected to the unit. Doing so can cause unit or cable damage or a malfunction due to a cable contact fault.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the unit. Failure to do so may cause a failure or malfunctions of the unit.

#### DISPOSAL PRECAUTIONS

##### CAUTION

- Dispose of this product as industrial waste.

#### TRANSPORTATION PRECAUTIONS

##### CAUTION

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual for the GOT used, as they are precision devices. Failure to do so may cause the unit to fail. Check if the unit operates correctly after transportation.

#### Manuals

The following shows manuals relevant to this product.

##### Detailed Manual

| Manual name  | Manual number (Model code) |
|--|----------------------------|
| GT16 User's Manual (Hardware) (Sold separately)  | SH-080928ENG (1D7MD3)      |
| GOT1000 Series Connection Manual (Microcomputer, MODBUS Products, Peripherals) for GT Works3 (Sold separately) | SH-080871ENG (1D7MC5)      |
| GT Designer3 Version1 Screen Design Manual (Functions) (Sold separately)                                       | SH-080867ENG (1D7MC1)      |

##### Relevant Manuals

For relevant manuals, refer to the PDF manuals stored in the CD-ROM for the drawing software used.

© 2008 MITSUBISHI ELECTRIC CORPORATION

#### Compliance with the EMC and Low Voltage Directives

To configure a system meeting the requirements of the EMC and Low Voltage Directives when incorporating the Mitsubishi GOT (EMC and Low Voltage Directives compliant) into other machinery or equipment, refer to "EMC AND LOW VOLTAGE DIRECTIVES" of the General Description included with the GOT used. The CE mark, indicating compliance with the EMC and Low Voltage Directives, is printed on the rating plate of the GOT.

#### Compliance with the Radio Waves Act (South Korea)

This product complies with the Radio Waves Act (South Korea). Note the following when using the product in South Korea.

이 기기는 업무용 (A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바랍니다. 기정의외의 지역에서 사용하는 것을 목적으로 합니다. (The product is for business use (Class A) and meets the electromagnetic compatibility requirements. The seller and the user must note the above point, and use the product in a place except for home.)

#### Packing List

After unpacking the box, check that the following products are included.


| Model      | Product                                   | Quantity |
|------------|---|----------|
| GT16M-V4   | Video input unit                          | 1        |
|            | Mounting screw set (4 screws, 4 stickers) | 1        |
|            | Extension interface relay board           | 1        |
| GT16M-V4R1 | Video/RGB input unit                      | 1        |
|            | Mounting screw set (4 screws, 4 stickers) | 1        |
|            | Extension interface relay board           | 1        |
| GT16M-R2   | RGB input unit                            | 1        |
|            | Mounting screw set (4 screws, 4 stickers) | 1        |
|            | Extension interface relay board           | 1        |

## 1. OVERVIEW

This User's Manual describes the following units. When mounting the following units with the GT16□□M, the GOT can display video images taken by a camcorder or a RGB screen.

- For the GT16M-V4 video input unit (hereinafter referred to as the video input unit), the GOT can display video images taken by up to four camcorders.
- For the GT16M-V4R1 video/RGB input unit (hereinafter referred to as the video/RGB input unit), the GOT can display video images taken by up to four camcorders or a RGB screen for up to one device for the RGB input.
- For the GT16M-R2 RGB input unit (hereinafter referred to as the RGB input unit), the GOT can display only one RGB screen by switching up to two video input channels.

For the video input with using the above units, the GOT can be used as a vision sensor monitor. For the RGB input unit with using the above units, the units can be used as the RGB output type vision sensor.

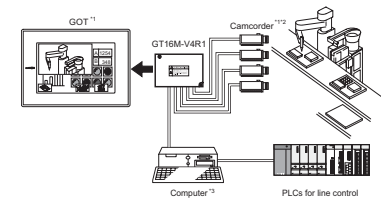

- \*1: Power on the GOT simultaneously with the camcorder.
- \*2: Depending on the camcorder type, noise from the power supply cable of the camcorder may cause malfunction of the GOT or a programmable controller.

In this case, attach the following line filter to the power supply line of the camcorder. Recommended line filter: TDK ZHC2203-11 (or equivalent products) \*3: When connecting any of the above units to a personal computer, ground the ground cable of the personal computer.

To use the video input unit, video/RGB input unit, and RGB input unit set the communication settings. For the settings and system configurations, refer to GOT1000 Series Connection Manual. For video input and RGB input functions, refer to GT Designer2 Version□ Screen Design Manual.

## 2. SPECIFICATIONS

The performance specifications of the video input unit, video/RGB input unit, and RGB input unit are indicated below.

The general specifications of the video input unit, video/RGB input unit, and RGB input unit are the same as those of the GOT. Refer to the User's Manual for the GOT used for the general specifications of the GOT.

| Item                             | Specifications                    |   |  |                         |
|----------------------------------|-----------------------------------|---|--|-------------------------|
|                                  | GT16M-V4                          | GT16M-V4R1  | GT16M-R2   |                         |
| Video input section <sup>2</sup> | Video input format                | Color<br>NTSC format, PAL format (interlaced format)      | -  |                         |
|                                  |                                   | Monochrome<br>EIA format, CCIR format (interlaced format) | -  |                         |
|                                  | Number of video input channels    | 4 channel   | -  |                         |
|                                  | Input signal                      | 1Vp-p, 75Ω, composite signal                              | -  |                         |
| RGB input section                | Display size (dot)                | 640×480<br>768×576, 720×480 <sup>1</sup>                  | -  |                         |
|                                  | Connector for external connection | BNC connector   | -  |                         |
|                                  | RGB input method (dot)            | -   | Analog RGB(XGA; 1024×768, SVGA; 800×600, VGA; 640×480)   | -                       |
|                                  | Number of video input channels    | -   | 1 channel  | 2 channels <sup>3</sup> |
|                                  | Input image signal                | -   | 1Vp-p, 75Ω   | -                       |
| RGB input section                | Synchronizing signal              | -   | TTL, 1kΩ   | -                       |
|                                  | Display size (dot)                | -   | 1024×768 (refresh rate 60Hz)<br>800×600 (refresh rate 60, 72, 75Hz)<br>640×480 (refresh rate 60, 72, 75, 85Hz) | -                       |
|                                  | Connector for external connection | -   | D-Sub 15 pin: female   | -                       |
| Internal current consumption     | 3.3 VDC                           | 0.32A   | 0.94A  | 0.75A                   |
|                                  | 5.0 VDC                           | 0.12A   | 0.12A  | -                       |
| Weight                           |                                   | 0.20kg (0.42lb)   | 0.22kg (0.46lb)  | 0.17kg (0.38lb)         |


\*1: Compatible with PAL and CCIR formats only.

- \*2: The GOT cannot display both video images and RGB screens at the same time.
- \*3: The GOT can display only one RGB screen.

## 3. PART NAMES AND EXTERNAL DIMENSIONS


### 3.1 Video/RGB Input Unit, Video Input Unit, and RGB Input Unit

The external dimensions for all the units are the same except the connector dimensions of the video input section and the RGB input section.

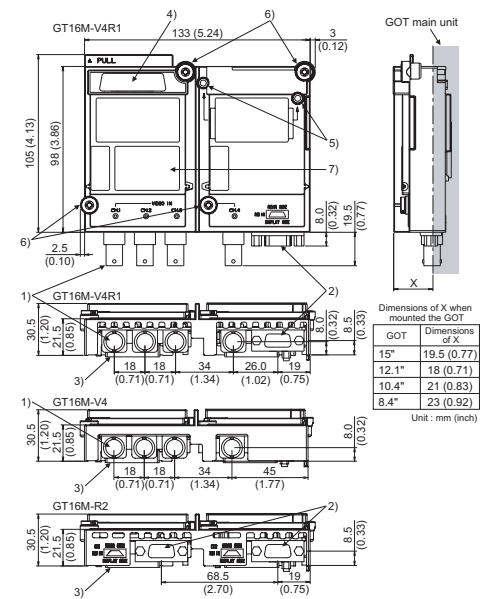

| No. | Name                      | Description  |
|-----|---------------------------|--|
| 1)  | Connector for video input | Connector for connecting a coaxial cable             |
| 2)  | Connector for RGB input   | Connector for connecting 9-core combined cables      |
| 3)  | Interface connector       | Connector connected to the GOT                       |
| 4)  | Extension connector       | Connector for connecting an extension unit           |
| 5)  | Board fixing screw        | Screw for fixing the extension interface relay board |
| 6)  | Mounting screw            | Screw for fixing the unit                            |
| 7)  | Rating plate              | -  |


### 3.2 Extension Interface Relay Board

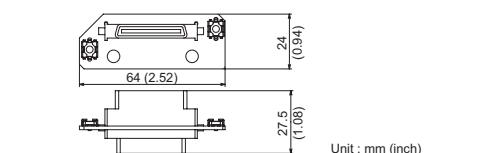

## 4. INSTALLATION PROCEDURE

The installation procedure for the video/RGB input unit is explained using the GT1575.

- Turn off the GOT.
- Remove two extension unit covers of the GOT.
- Connect the extension interface relay board to the extend interface2 side on the GOT. Remove the connector cover from the board.
- The connector for video input has the protection cap. Remove the protection cap for the connector to be used. (Store the removed protection cap.)
- Fit the video/RGB input unit in the GOT case.
- Tighten four mounting screws with a torque of 0.36 to 0.48N·m to fix the unit.
- Tighten two board fixing screws with a torque of 0.36 to 0.48 N·m to fix the board.
- For mounting any extension unit on the unit, remove the connector cover and the stickers. For mounting no extension unit on the unit, cover over four mounting screws with the accessory stickers to avoid static electricity. Keep the connector cover fixed. Keep all the stickers fixed.

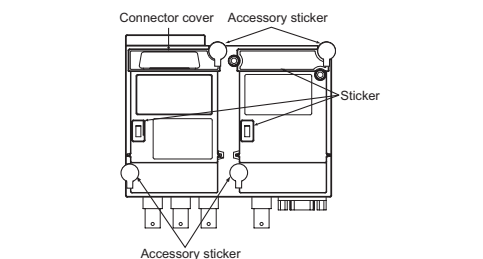

**Point**  
Remove the screws that fixes the extension interface relay board before removing the unit. (Above 7))

## Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

#### For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

| Country/Region | Sales office/Tel   |
|----------------|--|
| U.S.A          | Mitsubishi Electric Automation Inc.<br>500 Corporate Woods Parkway Vernon Hills, IL 60061, U.S.A.<br>Tel : +1-847-478-2100   |
| Brazil         | MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda.<br>Rua Correia Dias, 184, Edificio Paraíso Trade Center-8 andar<br>Paraiso, Sao Paulo, SP Brazil<br>Tel : +55-11-5908-8331                                       |
| Germany        | Mitsubishi Electric Europe B.V. German Branch<br>Gothaer Strasse 8 D-40880 Ratingen, GERMANY<br>Tel : +49-2102-486-0   |
| U.K            | Mitsubishi Electric Europe B.V. UK Branch<br>Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K.<br>Tel : +44-1707-276100   |
| Italy          | Mitsubishi Electric Europe B.V. Italian Branch<br>Centro Dir. Colloeni, Pal. Perseo-Ing.2<br>Via Paracelso 12, I-20041 Agrate Brianza, Milano, Italy<br>Tel : +39-039-60531                                    |
| Spain          | Mitsubishi Electric Europe B.V. Spanish Branch<br>Carrera de Ruiz 76-80<br>E-08190 Sant Cugat del Valles, Barcelona, Spain<br>Tel : +34-93-565-3131  |
| France         | Mitsubishi Electric Europe B.V. French Branch<br>25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France<br>Tel : +33-1-5568-5568  |
| South Africa   | Circuit Breaker Industries Ltd.<br>Private Bag 2016, ZA-1600 Isando, South Africa<br>Tel : +27-11-928-2000   |
| Hong Kong      | Mitsubishi Electric Automation (Hong Kong) Ltd.<br>10th Floor, Manulife Tower, 169 Electric Road, North Point, Hong Kong<br>Tel : +852-2887-8870   |
| China          | Mitsubishi Electric Automation (China) Ltd.<br>4/F Zhi Fu Plaza, No.80 Xin Chang Road, Shanghai 200003, China<br>Tel : +86-21-6120-0808  |
| Taiwan         | Setsubyo Enterprise Co., Ltd.<br>6F No.105 Wu-Kung 3rd Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan<br>Tel : +886-2-2299-2499  |
| Korea          | Mitsubishi Electric Automation Korea Co., Ltd.<br>1480-6, Gayang-dong, Gangseo-ku Seoul<br>157-200, Korea<br>Tel : +82-2-3660-9552   |
| Singapore      | Mitsubishi Electric Asia Pte. Ltd.<br>307 Alexandra Road #05-01/02,<br>Mitsubishi Electric Building, Singapore 159943<br>Tel : +65-6470-2460   |
| Thailand       | Mitsubishi Electric Automation (Thailand) Co., Ltd.<br>Bang-Chan Industrial Estate No.111 Moo 4, Senthai Rd,<br>T.Kannayao, A.Kannayao, Bangkok 10230 Thailand<br>Tel : +66-2-517-1326                         |
| Indonesia      | P.T. Autoteknindo Sumber Makmur<br>Muara Karang Selatan, Block A/Ulita<br>No.1 Kav. No.11 Kawasan Industri Pergudangan<br>Jakarta - Utara 14440, P.O.Box 5045 Jakarta, 11050 Indonesia<br>Tel : +62-21-6630833 |
| India          | Messung Systems Pvt. Ltd.<br>Electronic Sadan NO:111 Unit No15, M.I.D.C Bhosari,<br>Pune-411026, India<br>Tel : +91-20-2712-3130   |
| Australia      | Mitsubishi Electric Australia Pty. Ltd.<br>348 Victoria Road, Rydalmere, N.S.W 2116, Australia<br>Tel : +61-2-9684-7777  |

**MITSUBISHI ELECTRIC CORPORATION**  
HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice. Printed in Japan, June 2011.