

General-Purpose AC Servo

MITSUBISHI SERVO AMPLIFIERS & MOTORS  
**MELSERVO-J4**

General-Purpose Interface AC Servo

**MODEL**

**MR-J4-  A-  RJ**

SERVO AMPLIFIER

INSTRUCTION MANUAL

(Modbus-RTU Protocol)

## ● Safety Instructions ●

Please read the instructions carefully before using the equipment.


To use the equipment correctly, do not attempt to install, operate, maintain, or inspect the equipment until you have read through this Instruction Manual, Installation guide, and appended documents carefully. Do not use the equipment until you have a full knowledge of the equipment, safety information and instructions. In this Instruction Manual, the safety instruction levels are classified into "WARNING" and "CAUTION".




Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.




Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight injury to personnel or may cause physical damage.

Note that the  CAUTION level may lead to a serious consequence according to conditions. Please follow the instructions of both levels because they are important to personnel safety. What must not be done and what must be done are indicated by the following diagrammatic symbols.



Indicates what must not be done. For example, "No Fire" is indicated by .



Indicates what must be done. For example, grounding is indicated by .

In this Instruction Manual, instructions at a lower level than the above, instructions for other functions, and so on are classified into "POINT".

After reading this Instruction Manual, keep it accessible to the operator.

## 1. To prevent electric shock, note the following

### WARNING

- Before wiring and inspections, turn off the power and wait for 15 minutes or more until the charge lamp turns off. Then, confirm that the voltage between P+ and N- is safe with a voltage tester and others. Otherwise, an electric shock may occur. In addition, when confirming whether the charge lamp is off or not, always confirm it from the front of the servo amplifier.
- Ground the servo amplifier and servo motor securely.
- Any person who is involved in wiring and inspection should be fully competent to do the work.
- Do not attempt to wire the servo amplifier and servo motor until they have been installed. Otherwise, it may cause an electric shock.
- Do not operate switches with wet hands. Otherwise, it may cause an electric shock.
- The cables should not be damaged, stressed, loaded, or pinched. Otherwise, it may cause an electric shock.
- During power-on or operation, do not open the front cover of the servo amplifier. Otherwise, it may cause an electric shock.
- Do not operate the servo amplifier with the front cover removed. High-voltage terminals and charging area are exposed and you may get an electric shock.
- Except for wiring and periodic inspection, do not remove the front cover of the servo amplifier even if the power is off. The servo amplifier is charged and you may get an electric shock.
- To prevent an electric shock, always connect the protective earth (PE) terminal (marked  $\oplus$ ) of the servo amplifier to the protective earth (PE) of the cabinet.
- To avoid an electric shock, insulate the connections of the power supply terminals.

## 2. To prevent fire, note the following

### CAUTION

- Install the servo amplifier, servo motor, and regenerative resistor on incombustible material. Installing them directly or close to combustibles will lead to smoke or a fire.
- Always connect a magnetic contactor between the power supply and the main circuit power supply (L1, L2, and L3) of the servo amplifier, in order to configure a circuit that shuts down the power supply on the side of the servo amplifier's power supply. If a magnetic contactor is not connected, continuous flow of a large current may cause smoke or a fire when the servo amplifier malfunctions.
- Not doing so may cause a fire when a regenerative transistor malfunctions or the like may overheat the regenerative resistor.
- Always connect a molded-case circuit breaker, or a fuse to each servo amplifier between the power supply and the main circuit power supply (L1, L2, and L3) of the servo amplifier, in order to configure a circuit that shuts down the power supply on the side of the servo amplifier's power supply. If a molded-case circuit breaker or fuse is not connected, continuous flow of a large current may cause smoke or a fire when the servo amplifier malfunctions.
- When using the regenerative resistor, switch power off with the alarm signal.
- Provide adequate protection to prevent screws and other conductive matter, oil and other combustible matter from entering the servo amplifier and servo motor.

### 3. To prevent injury, note the following

<b>CAUTION</b>	
<ul style="list-style-type: none"> <li>● Only the voltage specified in the Instruction Manual should be applied to each terminal. Otherwise, a burst, damage, etc. may occur.</li> <li>● Connect cables to the correct terminals. Otherwise, a burst, damage, etc. may occur.</li> <li>● Ensure that polarity (+/-) is correct. Otherwise, a burst, damage, etc. may occur.</li> <li>● The servo amplifier heat sink, regenerative resistor, servo motor, etc. may be hot while power is on or for some time after power-off. Take safety measures, e.g. provide covers, to prevent accidental contact of hands and parts (cables, etc.) with them.</li> </ul>	

### 4. Additional instructions

The following instructions should also be fully noted. Incorrect handling may cause a fault, injury, electric shock, fire, etc.

#### (1) Transportation and installation

<b>CAUTION</b>					
<ul style="list-style-type: none"> <li>● Transport the products correctly according to their mass.</li> <li>● Stacking in excess of the specified number of product packages is not allowed.</li> <li>● Do not hold the front cover when transporting the servo amplifier. Otherwise, it may drop.</li> <li>● Install the servo amplifier and the servo motor in a load-bearing place in accordance with the Instruction Manual.</li> <li>● Do not get on or put heavy load on the equipment.</li> <li>● The equipment must be installed in the specified direction.</li> <li>● Leave specified clearances between the servo amplifier and the cabinet walls or other equipment.</li> <li>● Do not install or operate the servo amplifier and servo motor which have been damaged or have any parts missing.</li> <li>● Do not block the intake and exhaust areas of the servo amplifier. Otherwise, it may cause a malfunction.</li> <li>● Do not drop or strike the servo amplifier and servo motor. Isolate them from all impact loads.</li> <li>● When you keep or use the equipment, please fulfill the following environment.</li> </ul>					
Items	Environment				
Ambient temperature	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; padding: 2px;">Operation</td> <td style="padding: 2px;">0 °C to 55 °C (non-freezing)</td> </tr> <tr> <td style="padding: 2px;">Storage</td> <td style="padding: 2px;">-20 °C to 65 °C (non-freezing)</td> </tr> </table>	Operation	0 °C to 55 °C (non-freezing)	Storage	-20 °C to 65 °C (non-freezing)
Operation	0 °C to 55 °C (non-freezing)				
Storage	-20 °C to 65 °C (non-freezing)				
Ambient humidity	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; padding: 2px;">Operation</td> <td style="padding: 2px;">90 %RH or less (non-condensing)</td> </tr> <tr> <td style="padding: 2px;">Storage</td> <td style="padding: 2px;"></td> </tr> </table>	Operation	90 %RH or less (non-condensing)	Storage	
Operation	90 %RH or less (non-condensing)				
Storage					
Ambience	Indoors (no direct sunlight), free from corrosive gas, flammable gas, oil mist, dust, and dirt				
Altitude	2000 m or less above sea level (Contact your local sales office for the altitude for options.)				
Vibration resistance	5.9 m/s <sup>2</sup> at 10 Hz to 55 Hz (directions of X, Y, and Z axes)				


  

<ul style="list-style-type: none"> <li>● When the equipment has been stored for an extended period of time, consult your local sales office.</li> <li>● When handling the servo amplifier, be careful about the edged parts such as corners of the servo amplifier.</li> <li>● The servo amplifier must be installed in the metal cabinet.</li> <li>● When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products. Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.</li> </ul>	
---	--


## (2) Wiring

### ⚠ CAUTION

- Wire the equipment correctly and securely. Otherwise, the servo motor may operate unexpectedly.
- Do not install a power capacitor, surge killer, or radio noise filter (FR-BIF-(H) option) on the servo amplifier output side.
- To avoid a malfunction, connect the wires to the correct phase terminals (U, V, and W) of the servo amplifier and servo motor.
- Connect the servo amplifier power output (U, V, and W) to the servo motor power input (U, V, and W) directly. Do not let a magnetic contactor, etc. intervene. Otherwise, it may cause a malfunction.

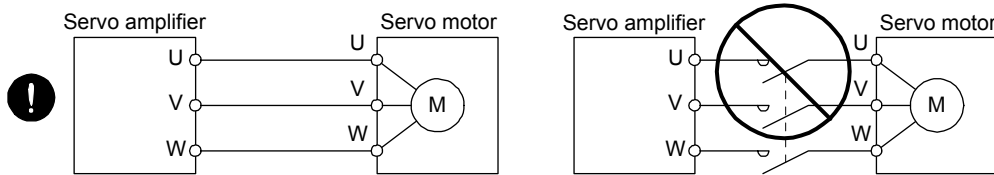

- The connection diagrams in this instruction manual are shown for sink interfaces, unless stated otherwise.
- The surge absorbing diode installed to the DC relay for control output should be fitted in the specified direction. Otherwise, the emergency stop and other protective circuits may not operate.

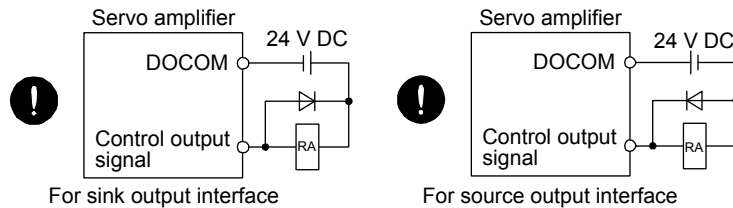

- When the cable is not tightened enough to the terminal block, the cable or terminal block may generate heat because of the poor contact. Be sure to tighten the cable with specified torque.
- Connecting a servo motor for different axis to the U, V, W, or CN2 may cause a malfunction.

## (3) Test run and adjustment

### ⚠ CAUTION

- Before operation, check the parameter settings. Improper settings may cause some machines to perform unexpected operation.
- Never adjust or change the parameter values extremely as it will make operation unstable.
- Do not close to moving parts at servo-on status.

## (4) Usage

### ⚠ CAUTION

- Provide an external emergency stop circuit to ensure that operation can be stopped and power switched off immediately.
- Do not disassemble, repair, or modify the equipment.


## ⚠ CAUTION

- Before resetting an alarm, make sure that the run signal of the servo amplifier is off in order to prevent a sudden restart. Otherwise, it may cause an accident.
- Use a noise filter, etc. to minimize the influence of electromagnetic interference. Electromagnetic interference may be given to the electronic equipment used near the servo amplifier.
- Burning or breaking a servo amplifier may cause a toxic gas. Do not burn or break it.
- Use the servo amplifier with the specified servo motor.
- The electromagnetic brake on the servo motor is designed to hold the motor shaft and should not be used for ordinary braking.
- For such reasons as service life and mechanical structure (e.g. where a ball screw and the servo motor are coupled via a timing belt), the electromagnetic brake may not hold the motor shaft. To ensure safety, install a stopper on the machine side.

### (5) Corrective actions

## ⚠ CAUTION

- When it is assumed that a hazardous condition may occur due to a power failure or product malfunction, use a servo motor with an electromagnetic brake or external brake to prevent the condition.
- Configure an electromagnetic brake circuit so that it is activated also by an external EMG stop switch.

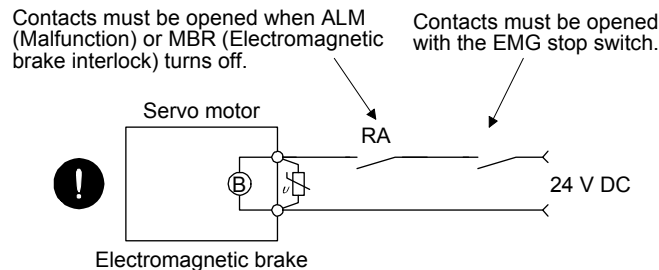

- When any alarm has occurred, eliminate its cause, ensure safety, and deactivate the alarm before restarting operation.
- Provide an adequate protection to prevent unexpected restart after an instantaneous power failure.

### (6) Maintenance, inspection and parts replacement

## ⚠ CAUTION

- With age, the electrolytic capacitor of the servo amplifier will deteriorate. To prevent a secondary accident due to a malfunction, it is recommended that the electrolytic capacitor be replaced every 10 years when it is used in a general environment. Please contact your local sales office.
- When using a servo amplifier whose power has not been turned on for a long time, contact your local sales office.

### (7) General instruction

- To illustrate details, the equipment in the diagrams of this Instruction Manual may have been drawn without covers and safety guards. When the equipment is operated, the covers and safety guards must be installed as specified. Operation must be performed in accordance with this Specifications and Instruction Manual.

## ● DISPOSAL OF WASTE ●

Please dispose a servo amplifier, battery (primary battery) and other options according to your local laws and regulations.

### EEPROM life

The number of write times to the EEPROM, which stores parameter settings, etc., is limited to 100,000. If the total number of the following operations exceeds 100,000, the servo amplifier may malfunction when the EEPROM reaches the end of its useful life.

- Write to the EEPROM due to parameter setting changes
- Write to the EEPROM due to device changes
- Write to the EEPROM due to point table changes
- Write to the EEPROM due to program changes
- Home position setting in the absolute position detection system

### STO function of the servo amplifier

When using the STO function of the servo amplifier, refer to chapter 13 of "MR-J4-\_A\_(-RJ) Servo Amplifier Instruction Manual".

For the MR-J3-D05 safety logic unit, refer to appendix 5 of "MR-J4-\_A\_(-RJ) Servo Amplifier Instruction Manual".

### Compliance with global standards

For the compliance with global standards, refer to appendix 4 of "MR-J4-\_A\_(-RJ) Servo Amplifier Instruction Manual".

### «About the manuals»

You must have this Instruction Manual and the following manuals to use this servo. Ensure to prepare them to use the servo safely.

#### Relevant manuals

Manual name	Manual No.
MELSERVO MR-J4-_A_(-RJ) Servo Amplifier Instruction Manual	SH(NA)030107
MELSERVO MR-J4-_A_-RJ Servo Amplifier Instruction Manual (POSITIONING MODE) (Note 5)	SH(NA)030143
MELSERVO MR-J4-DU_(-RJ)/MR-CR55K_ Instruction Manual (Note 6)	SH(NA)030153
MELSERVO-J4 Servo Amplifier Instruction Manual (Troubleshooting)	SH(NA)030109
MELSERVO Servo Motor Instruction Manual (Vol. 3) (Note 1)	SH(NA)030113
MELSERVO Linear Servo Motor Instruction Manual (Note 2)	SH(NA)030110
MELSERVO Direct Drive Motor Instruction Manual (Note 3)	SH(NA)030112
MELSERVO Linear Encoder Instruction Manual (Note 2, 4)	SH(NA)030111
EMC Installation Guidelines	IB(NA)67310

- Note
1. It is necessary for using a rotary servo motor.
  2. It is necessary for using a linear servo motor.
  3. It is necessary for using a direct drive motor.
  4. It is necessary for using a fully closed loop system.
  5. It is necessary for using an MR-J4-\_A\_-RJ servo amplifier in the positioning mode.
  6. It is necessary for using an MR-J4-DU\_A\_-RJ drive unit and MR-CR55K\_ converter unit.

«U.S. customary units»

U.S. customary units are not shown in this manual. Convert the values if necessary according to the following table.

Quantity	SI (metric) unit	U.S. customary unit
Mass	1 [kg]	2.2046 [lb]
Length	1 [mm]	0.03937 [inch]
Torque	1 [N·m]	141.6 [oz·inch]
Moment of inertia	1 [(× 10 <sup>-4</sup> kg·m <sup>2</sup> )]	5.4675 [oz·inch <sup>2</sup> ]
Load (thrust load/axial load)	1 [N]	0.2248 [lbf]
Temperature	N [°C] × 9/5 + 32	N [°F]





## CONTENTS

<b>1. FUNCTIONS AND CONFIGURATION</b>	<b>1- 1 to 1- 6</b>
1.1 Summary.....	1- 1
1.2 Function List.....	1- 2
1.3 Communication Specifications.....	1- 2
1.4 System Configuration .....	1- 3
1.4.1 Diagrammatic sketch.....	1- 3
1.4.2 Cable connection diagram .....	1- 4
<b>2. PARAMETER</b>	<b>2- 1 to 2- 6</b>
2.1 Detailed list of parameters .....	2- 2
2.2 Restrictions on using Modbus-RTU communication .....	2- 5
<b>3. MODBUS PROTOCOL</b>	<b>3- 1 to 3-10</b>
3.1 Modbus-RTU Message Format .....	3- 1
3.2 Broadcast Communication.....	3- 1
3.3 Modbus-RTU Communication Message Frame .....	3- 2
3.4 Function Codes.....	3- 3
3.4.1 List of function codes .....	3- 3
3.4.2 Read Holding Registers (Reading data in holding registers: 03h).....	3- 4
3.4.3 Diagnostics (Function diagnostics: 08h) .....	3- 6
3.4.4 Preset Multiple Registers (Writing data in multiple holding registers: 10h) .....	3- 8
3.4.5 Processing at occurrence of an error.....	3-10
<b>4. MODBUS REGISTERS</b>	<b>4- 1 to 4-24</b>
4.1 List of Available Registers .....	4- 1
4.2 Monitor (Address: 2B01h to 2B7Fh) .....	4- 2
4.2.1 List of registers .....	4- 2
4.2.2 Directions for use .....	4- 4
4.3 Parameter Setting (Address: 2001h to 27FFh).....	4- 4
4.3.1 List of registers .....	4- 4
4.3.2 Directions for use .....	4- 5
4.4 Point Table Setting (Address: 2801h to 28FFh) .....	4- 5
4.4.1 List of registers .....	4- 5
4.4.2 Directions for use .....	4- 5
4.5 Write Command to EEP-ROM (Address: 1010h) .....	4- 6
4.5.1 List of registers .....	4- 6
4.5.2 Directions for use .....	4- 7
4.6 Alarm Information (Address: 1001h).....	4- 8
4.6.1 List of registers .....	4- 8
4.6.2 Directions for use .....	4- 8
4.7 Alarm Number (Address: 2A41h) .....	4- 8
4.7.1 List of registers .....	4- 8
4.7.2 Directions for use .....	4- 8
4.8 Alarm Occurrence Monitor (Address: 2B81h to 2BFFh).....	4- 9

4.8.1	List of registers .....	4- 9
4.8.2	Directions for use .....	4-11
4.9	Alarm History (Address: 2A00h to 2A0Fh) .....	4-11
4.9.1	List of registers .....	4-11
4.9.2	Directions for use .....	4-11
4.10	Alarm History Clear (Address: 2A40h) .....	4-11
4.10.1	List of registers .....	4-11
4.10.2	Directions for use .....	4-11
4.11	Parameter Error Count (Address: 2A44h) .....	4-12
4.11.1	List of registers .....	4-12
4.11.2	Directions for use .....	4-12
4.12	Parameter Error List (Address: 2A45h) .....	4-12
4.12.1	List of registers .....	4-12
4.12.2	Directions for use .....	4-12
4.13	Point Table Error Number (Address: 2A43h) .....	4-13
4.13.1	List of registers .....	4-13
4.13.2	Directions for use .....	4-13
4.14	External Input Pin Status (Address: 2C10h).....	4-14
4.14.1	List of registers .....	4-14
4.14.2	Directions for use .....	4-14
4.15	External Output Pin Status (Address: 2C11h).....	4-15
4.15.1	List of registers .....	4-15
4.15.2	Directions for use .....	4-15
4.16	Input Device Status (Address: 2C12h).....	4-15
4.16.1	List of registers .....	4-15
4.16.2	Directions for use .....	4-16
4.17	Output Device Status (Address: 2C13h) .....	4-17
4.17.1	List of registers .....	4-17
4.17.2	Directions for use .....	4-18
4.18	Servo Amplifier Model (Address: 1008h).....	4-19
4.18.1	List of registers .....	4-19
4.18.2	Directions for use .....	4-19
4.19	Servo Amplifier Software Version (Address: 100Ah).....	4-19
4.19.1	List of registers .....	4-19
4.19.2	Directions for use .....	4-19
4.20	Broadcast Setting (Address: 2D98h).....	4-20
4.20.1	List of registers .....	4-20
4.20.2	Directions for use .....	4-20
4.21	Servo Motor Rated Speed (Address: 2D28h).....	4-21
4.21.1	List of registers .....	4-21
4.21.2	Directions for use .....	4-21
4.22	Servo Motor Maximum Speed (Address: 2D29h).....	4-21
4.22.1	List of registers .....	4-21
4.22.2	Directions for use .....	4-21
4.23	SDO Abort Code (Address: 2A60h).....	4-22
4.23.1	List of registers .....	4-22
4.23.2	Directions for use .....	4-22
4.24	Access Log 1 (Address: 2A64h) .....	4-22
4.24.1	List of registers .....	4-22
4.24.2	Directions for use .....	4-22

4.25	Access Log 2 (Address: 2A65h)	4-23
4.25.1	List of registers	4-23
4.25.2	Directions for use	4-23
4.26	Communication Error Count (Address: 2A68h)	4-23
4.26.1	List of registers	4-23
4.26.2	Directions for use	4-23
4.27	Supported Profile Information (Address: 1000h)	4-24
4.27.1	List of registers	4-24
4.27.2	Directions for use	4-24
4.28	Device Information (Address: 1018h)	4-24
4.28.1	List of registers	4-24
4.28.2	Directions for use	4-24

<b>5. DRIVING MOTOR</b>	<b>5- 1 to 5-46</b>
-------------------------	---------------------

5.1	Device Control	5- 2
5.1.1	Function description	5- 2
5.1.2	Related registers	5- 3
5.1.3	Details of registers	5- 3
5.1.4	Directions for use	5- 4
5.2	Control Mode	5- 5
5.2.1	Function description	5- 5
5.2.2	Related registers	5- 5
5.2.3	Details of registers	5- 5
5.2.4	Directions for use	5- 7
5.3	Home Position Return Mode	5- 7
5.3.1	Function description	5- 7
5.3.2	Related registers	5- 8
5.3.3	Details of registers	5- 8
5.3.4	Directions for use	5-12
5.4	JOG Operation Mode	5-13
5.4.1	Function description	5-13
5.4.2	Related registers	5-13
5.4.3	Details of registers	5-14
5.4.4	Directions for use	5-17
5.5	Point Table Operation Mode	5-18
5.5.1	Function description	5-18
5.5.2	Related registers	5-18
5.5.3	Details of registers	5-19
5.5.4	Directions for use	5-22
5.6	Program Operation Mode	5-24
5.6.1	Function description	5-24
5.6.2	Related registers	5-24
5.6.3	Details of registers	5-25
5.6.4	Directions for use	5-27
5.7	Touch Probe (Address: 60B8h to 60BBh)	5-28
5.7.1	Function description	5-28
5.7.2	List of registers	5-28
5.7.3	Details of registers	5-29
5.7.4	Directions for use	5-31
5.8	Function common to the modes	5-33

5.8.1	List of registers .....	5-33
5.8.2	Control input (2D01h to 2D09h) .....	5-33
5.8.3	Control output (2D11h to 2D19h) .....	5-38
5.8.4	Simultaneous start bit setting (2D9Ah) .....	5-43
5.8.5	Controller force stop (2D9Bh) .....	5-43
5.8.6	Override (2DB0h) .....	5-44
5.8.7	Forward torque limit value (60E0h) .....	5-44
5.8.8	Reverse torque limit value (60E1h) .....	5-44
5.8.9	Current position (6064h) .....	5-44
5.8.10	Current speed (606Ch) .....	5-44
5.8.11	Current torque (6077h) .....	5-45
5.8.12	Cam number setting (2D80h) .....	5-45
5.8.13	Current cam number (2D82h) .....	5-45
5.8.14	Cam axis one-cycle length setting (2D84h) .....	5-45
5.8.15	Cam stroke length setting (2D85h) .....	5-45

6. LIST OF MODBUS REGISTERS	6- 1 to 6- 4
-----------------------------	--------------

# 1. FUNCTIONS AND CONFIGURATION

---

## 1. FUNCTIONS AND CONFIGURATION

This instruction manual describes the communication with the MR-J4- \_A\_ -RJ servo amplifiers using the Modbus-RTU communication protocol. Refer to "MR-J4- \_A\_ (-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL" and "MR-J4- \_A\_ -RJ SERVO AMPLIFIER INSTRUCTION MANUAL (POSITIONING MODE)" for the items not given in this manual.

### 1.1 Summary

POINT
<ul style="list-style-type: none"><li>● Modbus-RTU communication function is available with the following servo amplifiers and drive units.<ul style="list-style-type: none"><li>▪ MR-J4- _A_ -RJ of 100 W to 22 kW manufactured in November 2014 or later.</li><li>▪ MR-J4-DU_ _A_ -RJ manufactured in January 2015 or later.</li></ul>This will be available with MR-J4-03A6-RJ in the future.</li><li>● Note that using the Modbus-RTU communication function prevents the RS-422/RS-485 communication function (Mitsubishi general-purpose AC servo protocol) from being used, and vice versa. They cannot be used together.</li></ul>

The Modbus protocol developed for programmable controllers is provided by Modicom.Inc.

The Modbus protocol uses dedicated message frames for the serial communication between a master and slaves. The dedicated message frames have functions for reading and writing data, and users can read and write data in parameters, write input commands, and check operation status of servo amplifiers by using the functions.

For MR-J4- \_A\_ -RJ servo amplifier, Modbus registers are assigned like the address assignment of CiA 402 drive profile.

A Modbus-compatible controller, the master, can communicate with the MR-J4- \_A\_ -RJ servo amplifiers that are slaves by accessing assigned holding registers.

The ASCII (American Standard Code for Information Interchange) mode and the RTU (Remote Terminal Unit) mode are provided as the serial transmission modes of the Modbus protocol. The MR-J4- \_A\_ -RJ servo amplifiers support only the RTU mode.

# 1. FUNCTIONS AND CONFIGURATION

## 1.2 Function List

The following table lists the functions that can be used in the Modbus-RTU communication.


Function	Description	Detailed explanation
Status monitor	Reads the items in "Display all", the monitor function of MR Configurator2, such as the servo motor speed and droop pulse.	Section 4.2
Parameter setting	Reads and writes data from/to parameters.	Section 4.3
Point table setting	Reads and writes point table data.	Section 4.4
Current alarm read	Reads alarm numbers that currently exist.	Section 4.7
Alarm history read	Reads the history of up to 16 alarms.	Section 4.9
Parameter error number read	Reads the parameter number at occurrence of a parameter error.	Section 4.11
Point table error number read	Reads the point table number at occurrence of a point table error.	Section 4.13
I/O monitor	Reads the ON/OFF state of external I/O signals and the status of the I/O devices	Section 4.14 Section 4.15 Section 4.16 Section 4.17
Servo amplifier information read	Reads the servo amplifier model and software version.	Section 4.18 Section 4.19
Motor drive (Note)	By accessing to holding registers which are assigned like the address assignment of CiA 402 drive profile, the servo motors are driven.	Chapter 5

Note. This is not available when the control mode is set to the positioning mode (indexer method).

## 1.3 Communication Specifications

The following table shows the communication specifications. For parameters, refer to chapter 2.

Item	Description	Remark	
Communication protocol	Modbus-RTU protocol	When using, select the protocol with [Pr. PC71].	
Conformed standard	EIA-485 (RS-485)		
Number of connectable modules	1: n (up to 32 modules), Setting: Station 1 to station 247 (Station 0: Station number for the broadcast communication) Up to 32 modules including other slave devices such as inverters can be connected.	Set station numbers with [Pr. PC70].	
Communication baud rate [bps]	4800/9600/19200/38400/57600/115200	Select this item with [Pr. PC71].	
Control procedure	Asynchronous serial communication		
Communication method	Half duplex		
Communication specifications	Character method	Binary (fixed to 8 bits)	
	Start bit	1 bit	
	Stop bit length	Select from the following three types.	
	Parity check	<ul style="list-style-type: none"> <li>• Even parity, stop bit length of 1 bit (Initial setting)</li> <li>• Odd parity, stop bit length of 1 bit</li> <li>• No parity, stop bit length of 2 bits</li> </ul>	Select this item with [Pr. PC71].
	Error check	CRC-16 method	
Terminator	None		
Waiting time setting	None		
Master/slave type	Slave		

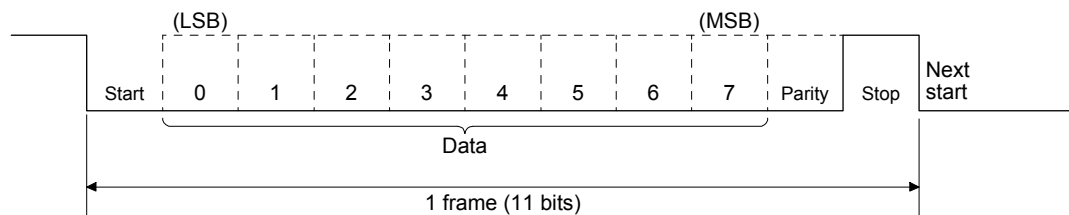


# 1. FUNCTIONS AND CONFIGURATION

## 1.4 System Configuration

### 1.4.1 Diagrammatic sketch

Up to 32 axes of servo amplifiers can be operated and controlled on one bus.

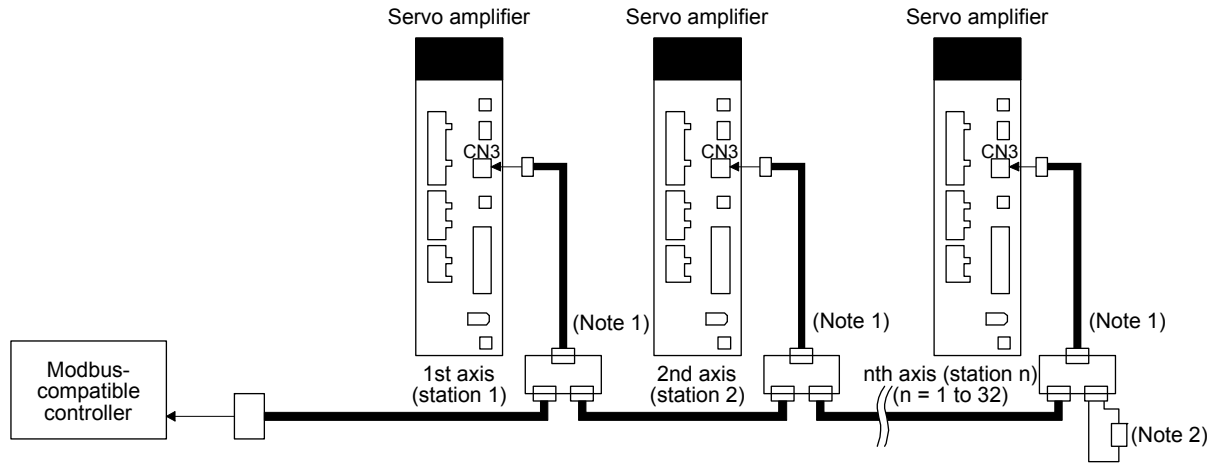

- Note 1. BMJ-8 (Hachiko Electric) is recommended for the branch connector.  
Note 2. The final axis must be terminated between RDP (pin No.3) and RDN (pin No.6) on the receiving side (servo amplifier) with a 150  $\Omega$  resistor.




# 1. FUNCTIONS AND CONFIGURATION


## 1.4.2 Cable connection diagram

### (1) Half duplex wiring

Wire the system as shown below.

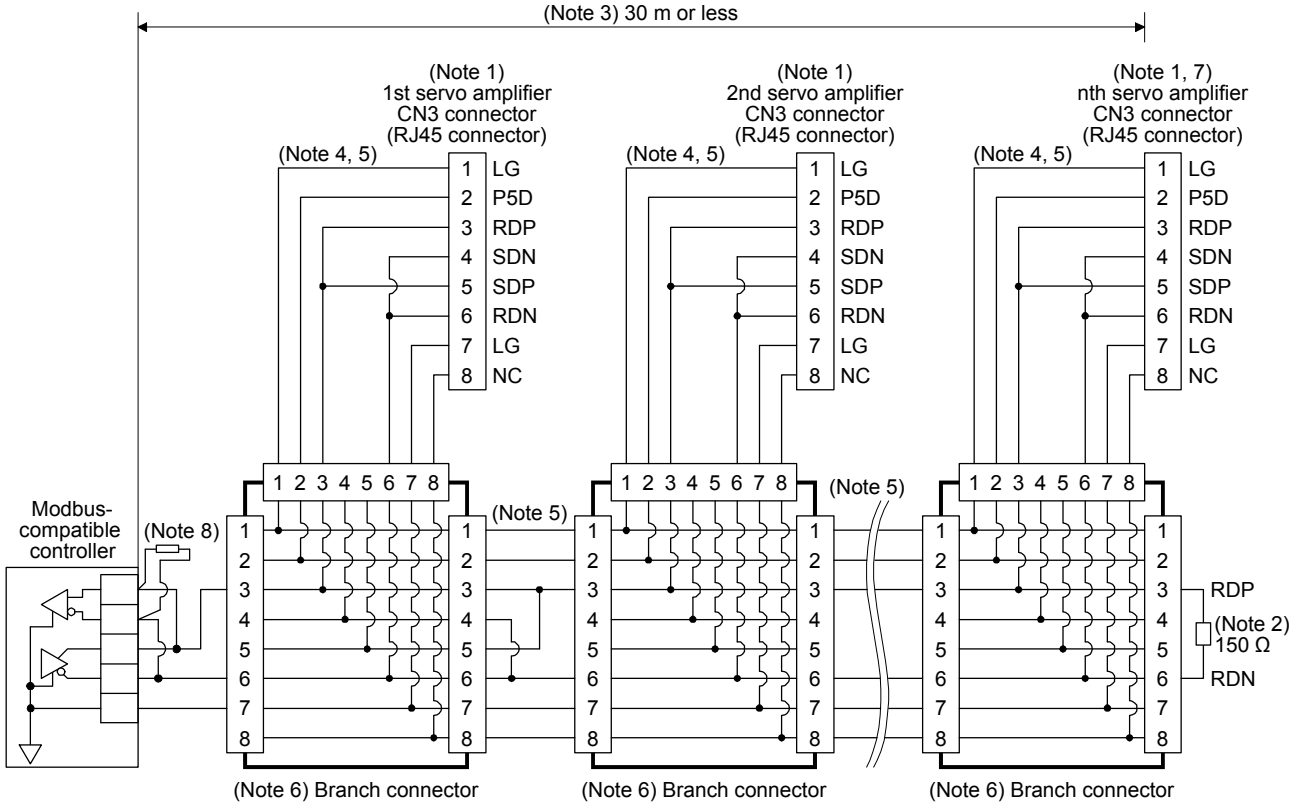

- Note 1. Recommended connector (Hirose Electric)  
 Plug: TM10P-88P  
 Wiring tool: CL250-0228-1  
 The following shows pin assignment viewed from the connector wiring section.




2. The final axis must be terminated between RDP (pin No.3) and RDN (pin No.6) on the receiving side (servo amplifier) with a 150 Ω resistor.
3. The overall length is 30 m or less in low-noise environment.
4. The wiring between the branch connector and the servo amplifier should be as short as possible.
5. Use an EIA568-compliant cable (10BASE-T cable, etc.).
6. Recommended branch connector: BMJ-8 (Hachiko Electric)
7.  $n \leq 32$  (Up to 32 axes can be connected.)
8. When a Modbus-compatible controller does not have a termination resistor, terminate the wire with a 150 Ω resistor.


# 1. FUNCTIONS AND CONFIGURATION

## (2) Full duplex wiring

Wire the system as shown below.

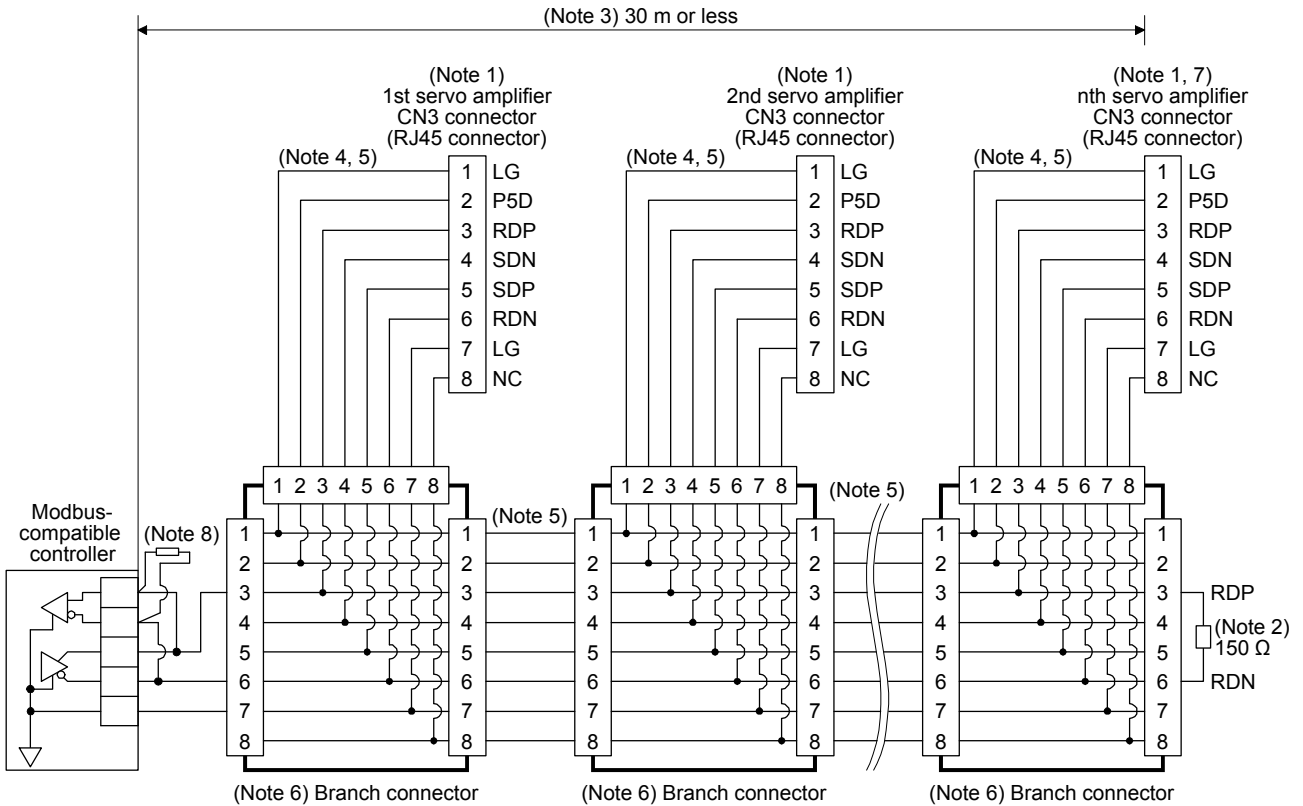

- Note 1. Recommended connector (Hirose Electric)  
 Plug: TM10P-88P  
 Wiring tool: CL250-0228-1  
 The following shows pin assignment viewed from the connector wiring section.



2. The final axis must be terminated between RDP (pin No.3) and RDN (pin No.6) on the receiving side (servo amplifier) with a 150 Ω resistor.
3. The overall length is 30 m or less in low-noise environment.
4. The wiring between the branch connector and the servo amplifier should be as short as possible.
5. Use an EIA568-compliant cable (10BASE-T cable, etc.).
6. Recommended branch connector: BMJ-8 (Hachiko Electric)
7.  $n \leq 32$  (Up to 32 axes can be connected.)
8. When a Modbus-compatible controller does not have a termination resistor, terminate the wire with a 150 Ω register.



## 2. PARAMETER

---

### 2. PARAMETER

#### CAUTION

- Never adjust or change parameter values drastically. Doing so leads to unstable operations.
- If fixed values are written in the digits of a parameter, do not change these values.
- Do not change parameters for manufacturer setting.
- Do not set any values other than the described setting values to each parameter.

This chapter describes the parameters used for the communication with the MR-J4-\_A\_-RJ servo amplifiers using the Modbus-RTU communication protocol. Refer to "MR-J4-\_A\_-RJ SERVO AMPLIFIER INSTRUCTION MANUAL" and "MR-J4-\_A\_-RJ SERVO AMPLIFIER INSTRUCTION MANUAL (POSITIONING MODE)" for the items not given in this chapter.

#### POINT

- To enable a parameter whose symbol is preceded by \*, turn off and on the power after setting a value.
- The symbols in the control mode column mean as follows.
  - P: Position control mode
  - S: Speed control mode
  - T: Torque control mode
  - CP: Positioning mode (point table method)
  - CL: Positioning mode (program method)
  - PS: Positioning mode (indexer method)
- Setting a value out of the setting range in each parameter will trigger [AL. 37 Parameter error].
- Set a value to each "x" in the "Setting digit" columns.

## 2. PARAMETER

### 2.1 Detailed list of parameters

#### (1) Extension setting parameters ([Pr. PC\_ \_])

No./Symbol/Name	Setting digit	Function	Initial value [unit]	Control mode					
				P	S	T	CP	CL	PS
PC70 *SNOM Modbus-RTU communication station number setting		Set a station number for the Modbus-RTU communication. The station number "0" does not send a response data to the master (controller). When a response from a slave (servo amplifier) is required, set a value other than "0".  Setting range: 0 to 247	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PC71 *COPF Function selection C-F	__ _ x	Communication protocol selection Select the communication protocol used. 0: RS-422/RS-485 communication (Mitsubishi general-purpose AC servo protocol) 1: Modbus-RTU protocol To perform the Modbus-RTU communication, select "1". Set the Modbus-RTU communication Input device selection ( _ x _ _ ) of this parameter as necessary. Set as shown in Table 2.1 for each control mode.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__ x _	Modbus-RTU communication baud rate selection 0: 9600 [bps] 1: 19200 [bps] 2: 38400 [bps] 3: 57600 [bps] 4: 115200 [bps] 6: 4800 [bps]	4h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	Modbus-RTU communication Input device selection Select input devices for the Modbus-RTU communication. 0: Operating input devices via the Modbus-RTU communication 1: Operating input devices via DI Set as shown in Table 2.1 for each control mode.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _	Control switching method selection Select a control switching method. 0: Automatic selection 1: Input device (LOP (control switching)) 2: Modbus register (6060h) When "0" is selected for this digit, the control switching method is selected according to "Modbus-RTU communication Input device selection" in [Pr. PC71] as follows. <ul style="list-style-type: none"> <li>• When "Operating input devices via DI ( _ 1 _ _ )" is selected: LOP (Control switching)</li> <li>• When "Operating input devices via the Modbus-RTU communication ( _ 0 _ _ )" is selected: Modbus register (6060h)</li> </ul>	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

## 2. PARAMETER

No./Symbol/Name	Setting digit	Function	Initial value [unit]	Control mode								
				P	S	T	CP	CL	PS			
PC71 *COPF Function selection C-F	<b>Table 2.1 Setting of [Pr. PC71] for the Modbus-RTU communication</b>											
	[Pr. PA01]		Modbus-RTU communication									
			For operating input devices via DI	For operating input devices via the Modbus-RTU communication								
	___ 0 (Position control mode)		_ 1 _ 1 (Note 1)	Unavailable								
	___ 1 (Position control mode and speed control mode)											
	___ 2 (Speed control mode)											
	___ 3 (Speed control mode and torque control mode)											
	___ 4 (Torque control mode)											
	___ 5 (Torque control mode and position control mode)											
	___ 6 (Positioning mode (point table method))								_ 0 _ 1 (Note 2)			
___ 7 (Positioning mode (program method))		Unavailable										
___ 8 (Positioning mode (indexer method))												
Note 1. Refer to section 2.2 (a) for the restrictions on operating input devices via DI. Note 2. Refer to section 2.2 (b) for the restrictions on operating input devices via the Modbus-RTU communication.												
PC72 *COPG Function selection C-G	___ x	Modbus-RTU communication Communication endian selection 0: Standard endian 1: Big endian Endian indicates the order of data with the unit of 2 bytes. For example, the following explains the order of 4-byte data "12345678h". 0 (Standard endian): 56781234 1 (Big endian): 12345678	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
	__ x _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
	_ x _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
	x _ _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			

## 2. PARAMETER

### (2) Extension setting 3 parameters ([Pr. PF\_\_])

No./Symbol/Name	Setting digit	Function	Initial value [unit]	Control mode					
				P	S	T	CP	CL	PS
PF45 *FOP12 Function selection F-12	___x	Modbus-RTU communication Parity selection 0: Even parity, stop bit length of 1 bit 1: Odd parity, stop bit length of 1 bit 2: No parity, stop bit length of 2 bits	0h	○	○	○	○	○	○
	__x_	For manufacturer setting	0h						
	_x__		0h						
	x___		0h						
PF46 MIC Modbus-RTU communication Communication timeout time		Set the communication timeout time in the Modbus-RTU communication. When "0" is set, communication timeout is not checked.  Setting range: 0 to 60	0 [s]	○	○	○	○	○	○

### (3) Positioning control parameters ([Pr. PT\_\_])

No./symbol/name	Setting digit	Function	Initial value [Unit]	Control mode					
				P	S	T	CP	CL	PS
PT45 *CZTY Home position return type 2	__xx	Home position return method 2 Set the home position return method. 00: Home position return set in the first digit of [Pr. PT04] is enabled. 07: Home position neighborhood input and home position signal type (forward rotation) (Homing on home switch and index pulse) 08: Home position neighborhood input and home position signal type (forward rotation) (Homing on home switch and index pulse) 0B: Home position neighborhood input and home position signal type (reverse rotation) (Homing on home switch and index pulse) 0C: Home position neighborhood input and home position signal type (reverse rotation) (Homing on home switch and index pulse) 17: Home position non-signal type (forward rotation) (Homing without index pulse) 1B: Home position non-signal type (reverse rotation) (Homing without index pulse)	00h				○	○	
	_x__	For manufacturer setting	0h						
	x___		0h						

## 2. PARAMETER

### 2.2 Restrictions on using Modbus-RTU communication

(a) Restrictions on operating input devices via DI

When the input devices are operated via DI ([Pr. PC71]: \_ 1 \_ 1), the Modbus registers shown in table 2.2 cannot be used in the Modbus-RTU communication.

Table 2.2 Unusable registers when the input devices are operated via DI

Address	Modbus register
6040h	Control command
6081h	Command speed
2D01h to 2D09h	Control input
2D60h	Point table specification
2D70h	Program number specification
2D9Ah	Simultaneous start bit setting
2DB0h	Override
60E0h	Forward rotation torque limit
60E1h	Reverse rotation torque limit

(b) Restrictions on operating input devices via the Modbus-RTU communication

When the input devices are operated via the Modbus-RTU communication ([Pr. PC71]: \_ 0 \_ 1), the Modbus registers shown in table 2.2 can be used. However, only the input devices shown in table 2.3 can be used via DI.

Table 2.3 Input devices which can be used via DI

Device name	Symbol
Forward rotation stroke end	LSP
Reverse rotation stroke end	LSN
Proximity dog	DOG
Mark detection	MSD
Forced stop 2/Forced stop 1	EM2/EM1
Program input 1	PI1
Program input 2	PI2
Program input 3	PI3
Current position latch input	LPS
Clutch command	CLTC (Note)
Cam position compensation request	CPCD (Note)

Note. This is available with servo amplifiers with software version C1 or later.






### 3. MODBUS PROTOCOL

### 3. MODBUS PROTOCOL

#### 3.1 Modbus-RTU Message Format

In the Modbus-RTU communication, a command sent from a master (controller) to a slave (servo amplifier) is called "Query Message", and a command that the slave (servo amplifier) returns to the master (controller) is called "Response Message".


The servo amplifier that received a Query Message processes the command only after it passes through a dataless section of 3.5 bytes or larger. The servo amplifier will send a Response Message to the controller after the servo amplifier's response time has passed. When the controller sent a Query Message without securing a dataless section of 3.5 bytes or larger, the servo amplifier does not respond. Execute processing so that the controller sends the next Query Message only after it receives a Response Message sent from the servo amplifier.

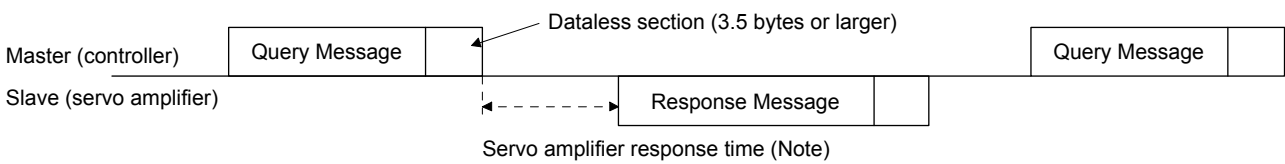

Note. The servo amplifier response time differs depending on the command to send.

#### 3.2 Broadcast Communication

The Modbus-RTU communication supports the broadcast communication in which a Query Message is sent from the master (controller) to all slaves (all axes of servo amplifiers). In this case, the servo amplifiers do not return a Response Message. Execute processing so that the master sends the next Query Message after the slave processing time has passed. The broadcast communication supports only the function code: 10h (Preset Multiple Registers).

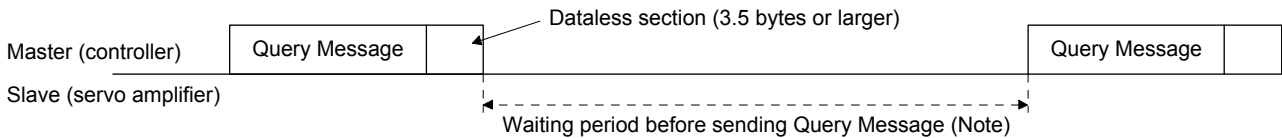


Note. The waiting period before sending Query Message varies depending on a command to be sent. Refer to the following table.

Condition	No. of Registers (Number of registers to write)	Waiting time for sending query message
For writing data of 4 bytes	2	12 [ms]
For writing data of 244 bytes	122	300 [ms]

### 3. MODBUS PROTOCOL

#### 3.3 Modbus-RTU Communication Message Frame

Query Messages sent from the master (controller) and Response Messages sent from the slaves (servo amplifiers) are both sent in the following message frame format.

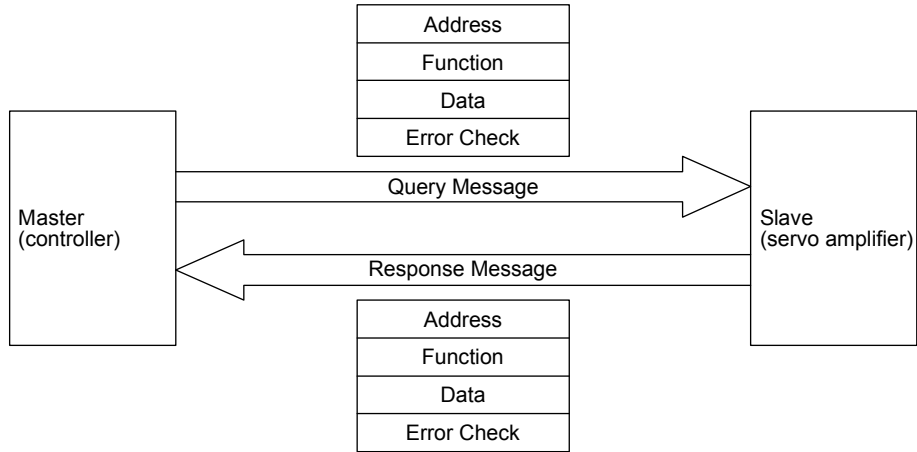

A message frame is composed of four message fields.

When a slave (servo amplifier) received a Query Message sent from the master (controller) without errors, the Function Code in the Query Message is copied into the Function Code field in a Response Message.

When a slave (servo amplifier) received a Query Message with an error, the slave returns a value obtained by adding "80h" to the Function Code value in the Query Message to the master. Judge the occurrence of an error by checking the Function Code in the Response Message on the controller side.

During the dataless time of 3.5 bytes before and after the reception of a Query Message, the servo amplifier recognizes the received Query Message.

#### Message frame

Start (START)	Address	Function	Data	Error Check		End (END)
				L	H	
3.5 bytes	8 bits	8 bits	n × 8 bits	8 bits	8 bits	3.5 bytes

Message field	Size	Communication path	Description
Address (Address field)	8 bits	Master → Slave	Set a station number. Set a value within 0 to 247 with 1-byte length (8 bits). When 0 is set, the broadcast communication is executed.
		Slave → Master	The station number of a slave (servo amplifier) is returned.
Function (Function field)	8 bits	Master → Slave	Set a function code. Set a function code to request to the slave.
		Slave → Master	Send the function code requested by the master. When a communication error has occurred, send a value obtained by adding "80h" to the function code requested by the master.
Data (Data field)	n × 8 bits	Master → Slave	The format changes depending on the function code selected. Refer to section 3.4 for details.
		Slave → Master	The format changes depending on the function code selected. Refer to section 3.4 for details.
Error Check (Error check field)	16 bits	Master → Slave	Send data to perform the CRC check of a received message frame.
		Slave → Master	

### 3. MODBUS PROTOCOL

---

#### 3.4 Function Codes

##### 3.4.1 List of function codes

The MR-J4-  A-  -RJ servo amplifier supports the following function codes.

Code	Function name	Description	Broadcast communication
03h	Read Holding Registers	Reading data in holding registers The data in the registered holding registers can be read from the master.	Not supported
08h	Diagnostics	Function diagnostics When this function code is sent from the master to a slave, the slave returns the received data to the master without any changes. Communication checks can be performed.	Not supported
10h	Preset Multiple Registers	Writing data in multiple holding registers Continuous multiple data sets can be written in the registered holding registers from the master.	Supported

### 3. MODBUS PROTOCOL

#### 3.4.2 Read Holding Registers (Reading data in holding registers: 03h)

Continuous register data sets are read for the specified number of data points starting from the specified register address.

##### (1) Message frame

##### Query Message

Slave Address	Function	Starting Address		No. of Points		CRC Check	
		H	L	H	L	L	H
(8 bits)	03h	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	Set a station number to which the message is sent. The number "0" (station number for broadcast sending) cannot be set.
Function (Function code)	8 bits	Set "03h".
Starting Address (Start address) (Note 2)	16 bits	Set a start address of the holding registers to read.
No. of Points (Number of read points)	16 bits	Set the number of points of data to read starting from the start address of the holding registers from which data is read. Set the number of read points described in the list of holding registers. To read the data in continuous registers, set a value obtained by adding the number of read points of the target registers to this number.
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a controller.

##### Response Message

Slave Address	Function	Byte Count	Data				CRC Check		
			H	L	to	H	L	H	
(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)	to	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	The station number of a slave (servo amplifier) is returned.
Function (Function code)	8 bits	When the message was received without errors, "03h" is returned.
Byte Count (Byte count)	8 bits	The Data frame size (in units of bytes) is returned. A value obtained by multiplying the value set for No. of Points in the Query Message by 2 is returned.
Data (Read data) (Note 1)	16 bits × n	Data starting from the start address specified in the Query Message is returned. Data is read in order of H (higher bits) and L (lower bits). Data is read in order starting from the start address.
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.

Note 1. Higher 8 bits of 1-byte data are set to "0h" when this data is returned. To use the signed 1-byte data as 2-byte data, perform sign extension on the master (controller) side.

- Registers can be classified into two types: registers that can be continuously accessed and particular registers that cannot be continuously accessed.

To read particular registers, read only the target registers.

For the details on whether the target registers can be continuously accessed or not, refer to the directions for use of each function of the Modbus registers described in chapter 4.

### 3. MODBUS PROTOCOL

(2) Usage example of Read Holding Registers (function code: 03h)

The following shows a setting example of when Modbus registers 2B05h (Command pulse frequency) to 2B07h (Analog torque limit voltage) in the slave address "02" are read.

Index	Name	Data type	Read/write	No. of Points (Number of read points)	Continuous read/write	Register value (Read data)
2B05h	Command pulse frequency (Command pulse frequency)	4 bytes	Read	2	○	12345678h
2B06h	Analog speed command voltage (Analog speed command voltage) Analog speed limit voltage (Analog speed limit voltage)	2 bytes	Read	1	○	1000h
2B07h	Analog torque limit voltage (Analog torque limit voltage) Analog torque command voltage (Analog torque command voltage)	2 bytes	Read	1	○	2000h

Query Message

Slave Address	Function	Starting Address		No. of Points		CRC Check	
		H	L	H	L	L	H
02h	03h	2Bh	05h	00h	04h	(8 bits)	(8 bits)

Set the following values to each Query Message.

Message	Description
Slave Address (Slave address)	Set the station number "02h".
Function (Function code)	Set "03h".
Starting Address (Start address)	Set "2B05h", the start address to read.
No. of Points (Number of read points)	Set "04h", because the total number of read points from Modbus registers 2B05h to 2B07h is 4.
CRC Check (CRC error check)	Data for CRC error check This data is calculated automatically by a controller.

Response Message

Slave Address	Function	Byte Count	Data								CRC Check	
			H	L	H	L	H	L	H	L	L	H
02h	03h	08h	56h	78h	12h	34h	10h	00h	20h	00h	(8 bits)	(8 bits)

The following shows the information in each Response Message.

Message	Description
Slave Address (Slave address)	The station number "02h" is returned.
Function (Function code)	The value "03h" is returned. This means that the message was received without errors.
Byte Count (Byte count)	The value "08h" is returned. This means that data of 8 frames is returned.
Data (Read data)	Data starting from the start address is returned. Lower-bit value of the register 2B05h: "5678h" Higher-bit value of the register 2B05h: "1234h" Value of the register 2B06h: "1000h" Value of the register 2B07h: "2000h" The endian setting of 4-byte data can be configured using [Pr. PC72]. This example shows the case when the standard endian (initial value) is set.
CRC Check (CRC error check)	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.

### 3. MODBUS PROTOCOL

#### 3.4.3 Diagnostics (Function diagnostics: 08h)

Use this register when performing the communication check from the master (controller). When a slave (servo amplifier) received a Query Message, the slave sends the received data as a Response Message without any changes to the master (controller).

##### (1) Message frame

##### Query Message

Slave Address	Function	Sub Function		Data		CRC Check	
		H	L	H	L	L	H
(8 bits)	08h	00h	00h	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	Set a station number to which the message is sent. The number "0" (station number for broadcast sending) cannot be set.
Function (Function code)	8 bits	Set "08h".
Sub Function (Sub function)	16 bits	Set "0000h". When a value other than "0000h" is set, a communication error occurs.
Data (Data)	16 bits	Set 2-byte length data.
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a controller.

##### Response Message

Slave Address	Function	Sub Function		Data		CRC Check	
		H	L	H	L	L	H
(8 bits)	08h	00h	00h	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	The station number of a slave (servo amplifier) is returned.
Function (Function code)	8 bits	When the Query Message was received without errors, "08h" is returned.
Sub Function (Sub function)	16 bits	The value "0000h" is returned.
Data (Data)	16 bits	The data set in the Query Message is returned.
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.

### 3. MODBUS PROTOCOL

(2) Usage example of Diagnostics (function code: 08h)

The following shows a setting example of when the function diagnostics of the slave address "03h" is executed.

#### Query Message

Slave Address	Function	Sub Function		Data		CRC Check	
		H	L	H	L	L	H
03h	08h	00h	00h	12h	34h	(8 bits)	(8 bits)

Set the following values to each Query Message.

Message	Description
Slave Address (Slave address)	Set the station number "03h".
Function (Function code)	Set "08h".
Sub Function (Sub function)	Set "0000h".
Data (Data)	When setting 1234h, set values as follows: H: "12h" L: "34h"
CRC Check (CRC error check)	Data for CRC error check This data is calculated automatically by a controller.

#### Response Message

Slave Address	Function	Sub Function		Data		CRC Check	
		H	L	H	L	L	H
03h	08h	00h	00h	12h	34h	(8 bits)	(8 bits)

The following shows the information in each Response Message.

Message	Description
Slave Address (Slave address)	The station number "03h" is returned.
Function (Function code)	The value "08h" is returned. This means that the message was received without errors.
Sub Function (Sub function)	The value "0000h" is returned.
Data (Data)	The value "1234h" set in the Query Message is returned. H: "12h" L: "34h"
CRC Check (CRC error check)	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.



### 3. MODBUS PROTOCOL

#### 3.4.4 Preset Multiple Registers (Writing data in multiple holding registers: 10h)

Write data in continuous holding registers.

##### (1) Message frame

##### Query Message

Slave Address	Function	Starting Address		No. of Registers		Byte Count	Data					CRC Check	
		H	L	H	L		H	L	to	H	L	L	H
(8 bits)	10h	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)	to	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	Set a station number to which the message is sent. When "0" (station number for broadcast sending) is set, this message is sent to all axes. (Note 1)
Function (Function code)	8 bits	Set "10h".
Starting Address (Start address) (Note 2)	16 bits	Set the start address of the holding registers to which data is written.
No. of Registers (Number of registers to write)	16 bits	Set the number of points of data to write starting from the start address of the holding registers to which data is written. Set the number of write points described in the list of holding registers. To write data in continuous registers, set a value obtained by adding the number of write points of the target registers to this number.
Byte Count (Byte count)	8 bits	Set the size of the data to write.
Data (Data) (Note 2)	16 bits × n	Set the data to write.
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a controller.

##### Response Message

Slave Address	Function	Starting Address		No. of Registers		CRC Check	
		H	L	H	L	L	H
(8 bits)	10h	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	The station number of a slave (servo amplifier) is returned.
Function (Function code)	8 bits	When the Query Message was received without errors, "10h" is returned.
Starting Address (Start address)	16 bits	The start address of the holding registers to which the data was written is returned.
No. of Registers (Number of registers to write)	16 bits	The number of points of written data starting from the start address of the holding registers to which the data was written is returned.
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.

- Note
1. When the broadcast communication was performed, a Response Message is not returned from the slave. To send the next Query Message continuously, send it considering the processing time of the slave.
  2. Registers can be classified into two types: registers to which data can be continuously written and particular registers to which data cannot be continuously written.  
To write data in particular registers, write data in the target registers one by one.  
For the details on whether data can be continuously written into the target registers or not, refer to chapter 4.

### 3. MODBUS PROTOCOL

(2) Usage example of Preset Multiple Registers (function code: 10h)

The following shows a setting example for writing "0100h" in the Modbus register 2102h (servo parameter PC02) of the slave address "02h".

Index	Name	Data type	Read/write	No. of Registers (Number of registers to write)	Continuous read/write	Setting value
2102h	Servo Parameter PC02	4 bytes	Read/write	2	○	00000100h

#### Query Message

Slave Address	Function	Starting Address		No. of Registers		Byte Count	Data				CRC Check		
		H	L	H	L		H	L	L	H			
02h	10h	21h	02h	00h	02h	04h	01h	00h	00h	00h	00h	(8 bits)	(8 bits)

Set the following values to each Query Message.

Message	Description
Slave Address (Slave address)	Set the station number "02h".
Function (Function code)	Set "10h".
Starting Address (Start address)	Set "2102h", the start address of the registers to which data is written.
No. of Registers (Number of registers to write)	Set "02h", because the total number of write points of the Modbus register 2102h is 2.
Byte Count (Byte count)	Set "04h". This means that data of 4 frames is sent.
Data (Data)	Set values in order starting from the start address. Lower-bit value of the register 2102h: "0100h" Higher-bit value of the register 2102h: "0000h" The endian setting of 4-byte data can be configured using [Pr. PC72]. This example shows the case when the standard endian (initial value) is set.
CRC Check (CRC error check)	Data for CRC error check This data is calculated automatically by a controller.

#### Response Message

Slave Address	Function	Starting Address		No. of Registers		CRC Check	
		H	L	H	L	L	H
02h	10h	21h	02h	00h	02h	(8 bits)	(8 bits)

The following shows the information in each Response Message.

Message	Description
Slave Address (Slave address)	The station number "02h" is returned.
Function (Function code)	The value "10h" is returned. This means that the message was received without errors.
Starting Address (Start address)	The value "2102h", the start address of the holding registers to which the data was written is returned. H: "21h" L: "02h"
No. of Registers (Number of registers to write)	The number of registers to write "02h" is returned.
CRC Check (CRC error check)	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.

### 3. MODBUS PROTOCOL

#### 3.4.5 Processing at occurrence of an error

In the Modbus-RTU communication, when the Query Message sent from the master (controller) includes an incorrect value, the slave (servo amplifier) returns an exception response to the master (controller).

When a parity error, CRC error, overrun error, or framing error occurs, the slave (servo amplifier) does not return a message to the master (controller).

When an exception response occurs, a value obtained by adding "80h" to the function code sent in the Query Message is returned with an exception code.

However, no exception response occurs in the following cases.

- When the function code "03h" (Read Holding Registers) is used  
When data can be read from even one of continuous registers, no exception response occurs. In this case, the data that cannot be read from the registers is indefinite.
- When the function code "10h" (Preset Multiple Registers) is used  
When data can be written into even one of continuous registers, no exception response occurs.

The following shows the Response Message to be sent at occurrence of an exception response.

#### Response Message

Slave Address	Function	Exception Code	CRC Check	
			L	H
(8 bits)	(8 bits)	(8 bits)	(8 bits)	(8 bits)

Message	Size	Description
Slave Address (Slave address)	8 bits	The station number of a slave (servo amplifier) is returned.
Function (Function code)	8 bits	A value obtained by adding "80h" to the function code of the Query Message is returned. When Function is "03h": "83h" When Function is "08h": "88h" When Function is "10h": "90h" When an unsupported Function (example: "01h") is used, "Function + 80h" (example: "81h") is returned.
Exception Code (Exception code)	8 bits	An exception code is set. For the details on exception codes, refer to the table "List of exception codes".
CRC Check (CRC error check)	16 bits	Data for CRC error check This data is calculated automatically by a servo amplifier, and the value will be returned.

#### List of exception codes

When an exception code is generated, a CRC error may occur at the same time.

Code	Error name	Description
01h	ILLEGAL FUNCTION (Illegal function code)	The Query Message sent from the master set a function code that the slave does not support.
02h	ILLEGAL DATA ADDRESS (Illegal address)	The Query Message sent from the master set a register address that the slave does not support. (Ex: No register address is set, or reading or writing data from/to registers is not available.)
03h	ILLEGAL DATA VALUE (Illegal data)	The Query Message sent from the master set data that the register cannot handle. (Ex: A value out of the setting range is set, or "0" is set to No. of Registers.)

## 4. MODBUS REGISTERS

### 4. MODBUS REGISTERS

#### POINT

● For details on the registers for driving a motor, refer to chapter 5.

#### 4.1 List of Available Registers

By reading and writing data in the registers that are compatible with the Modbus-RTU communication, the following functions can be performed using the MR-J4-\_A\_-RJ servo amplifier.

Function	Description	Reference
Monitor	Each status in the servo amplifier can be monitored.	Section 4.2
Parameter setting	Data can be read and written from/to parameters.	Section 4.3
Point table setting	Point table data can be read and written.	Section 4.4
Write command to EEPROM	The set servo parameters and point table data can be saved in EEPROM.	Section 4.5
Alarm information	The alarm status of the servo amplifier can be read.	Section 4.6
Alarm number	The current alarm number can be read.	Section 4.7
Alarm occurrence monitor	Each monitor information at occurrence of an error can be read.	Section 4.8
Alarm history	The alarm history at occurrence of an error can be read.	Section 4.9
Alarm history clear	The history of alarms can be cleared.	Section 4.10
Parameter error count	The parameter error count can be read.	Section 4.11
Parameter error number	Parameter error numbers can be read.	Section 4.12
Point table error number	Point table error numbers can be read.	Section 4.13
External input pin status	The ON/OFF state of the external input pins input to the servo amplifier can be read.	Section 4.14
External output pin status	The ON/OFF state of external output pins output from the servo amplifier can be read.	Section 4.15
Input device status	The current input device status can be read.	Section 4.16
Output device status	The current output device status can be read.	Section 4.17
Servo amplifier model	The model name of the currently-connected servo amplifier can be read.	Section 4.18
Servo amplifier software version	The software version of the currently connected servo amplifier can be read.	Section 4.19
Broadcast setting	The disabling setting of the broadcast communication of the Modbus-RTU communication can be configured.	Section 4.20
Servo motor rated speed	The servo motor rated speed can be read.	Section 4.21
Servo motor maximum speed	The servo motor maximum speed can be read.	Section 4.22
SDO Abort Code	The SDO Abort Code that is currently occurring can be read.	Section 4.23
Access log 1	The access log 1 can be read.	Section 4.24
Access log 2	The access log 2 can be read.	Section 4.25
Communication error count	The Modbus-RTU communication error count can be read.	Section 4.26
Supported profile information	The supported profile information can be read.	Section 4.27
Device information	The device information can be read.	Section 4.28

## 4. MODBUS REGISTERS

### 4.2 Monitor (Address: 2B01h to 2B7Fh)

Each status in the servo amplifier can be monitored. For the items that can be monitored, refer to the list of registers.

#### 4.2.1 List of registers

The following items can be monitored. Refer to "MR-J4-\_A\_(-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL" and "MR-J4-\_A\_(-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL (POSITIONING MODE)" for each of the following items.

Address	Name	Unit	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2B01h	Cumulative feedback pulses (Cumulative feedback pulses)	pulse	4 bytes	Read	2	Possible
2B02h	Servo motor speed (Servo motor speed)	r/min mm/s	4 bytes	Read	2	Possible
2B03h	Droop pulses (Droop pulses)	pulse	4 bytes	Read	2	Possible
2B04h	Cumulative command pulses (Cumulative command pulses)	pulse	4 bytes	Read	2	Possible
2B05h	Command pulse frequency (Command pulse frequency)	kpulse/s	4 bytes	Read	2	Possible
2B06h	Analog speed command voltage (Analog speed command voltage) Analog speed limit voltage (Analog speed limit voltage)	0.01 V	2 bytes	Read	1	Possible
2B07h	Analog torque limit voltage (Analog torque limit voltage) Analog torque command voltage (Analog torque command voltage)	0.01 V	2 bytes	Read	1	Possible
2B08h	Regenerative load ratio (Regenerative load ratio)	%	2 bytes	Read	1	Possible
2B09h	Effective load ratio (Effective load ratio)	%	2 bytes	Read	1	Possible
2B0Ah	Peak load ratio (Peak load ratio)	%	2 bytes	Read	1	Possible
2B0Bh	Instantaneous torque (Instantaneous torque)	%	2 bytes	Read	1	Possible
2B0Ch	Position within one-revolution (Position within one-revolution)	pulse	4 bytes	Read	2	Possible
2B0Dh	ABS counter (Multi-revolution counter)	rev	4 bytes	Read	2	Possible
2B0Eh	Load to motor inertia ratio (Load to motor inertia ratio)	0.01 times	2 bytes	Read	1	Possible
2B0Fh	Bus voltage (Bus voltage)	V	2 bytes	Read	1	Possible
2B10h	Load-side cumulative feedback pulses (Load-side cumulative feedback pulses)	pulse	4 bytes	Read	2	Possible
2B11h	Load-side droop pulses (Load-side droop pulses)	pulse	4 bytes	Read	2	Possible
2B12h	Load-side encoder information 1 (Load-side encoder information 1) Z-phase counter (Z-phase counter)	pulse	4 bytes	Read	2	Possible
2B13h	Load-side encoder information 2 (Load-side encoder information 2)	rev	4 bytes	Read	2	Possible
2B14h	Analog monitor output voltage 1 (Analog monitor output voltage 1)	0.01 V	2 bytes	Read	1	Possible
2B15h	Analog monitor output voltage 2 (Analog monitor output voltage 2)	0.01 V	2 bytes	Read	1	Possible
2B16h	Cumulative encoder out pulses (encoder pulse output)	pulse	4 bytes	Read	2	Possible
2B17h	Temperature of motor thermistor (Temperature of motor thermistor)	°C	2 bytes	Read	1	Possible
2B18h	Motor-side cumu. feedback pulses (before gear) (Motor-side cumu. feedback pulses (before gear))	pulse	4 bytes	Read	2	Possible

## 4. MODBUS REGISTERS

Address	Name	Unit	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2B19h	Electrical angle (Electrical angle)	pulse	4 bytes	Read	2	Possible
2B1Ah to 2B22h	Reserved (For manufacturer setting)					
2B23h	Motor-side/load-side position deviation (Motor-side/load-side position deviation)	pulse	4 bytes	Read	2	Possible
2B24h	Motor-side/load-side speed deviation (Motor- side/load-side speed deviation)	r/min	4 bytes	Read	2	Possible
2B25h	Encoder inside temperature (Encoder inside temperature)	°C	2 bytes	Read	1	Possible
2B26h	Settling time (Settling time)	ms	2 bytes	Read	1	Possible
2B27h	Oscillation detection frequency (Oscillation detection frequency)	Hz	2 bytes	Read	1	Possible
2B28h	Number of tough operations (Number of tough drive operations)	times	2 bytes	Read	1	Possible
2B29h 2B2Ah 2B2Bh 2B2Ch	Reserved (For manufacturer setting)					
2B2Dh	Unit power consumption (Unit power consumption)	W	2 bytes	Read	1	Possible
2B2Eh	Unit total power consumption (Unit total power consumption)	Wh	4 bytes	Read	2	Possible
2B2Fh	Current position (Current position)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2B30h	Command position (Command position)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2B31h	Remaining command distance (Remaining command distance)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2B32h	Point table No./Program No./Station position No. (Point table No./Program No./Station position No.)		2 bytes	Read	1	Possible
2B33h	Step No. (Step number)		2 bytes	Read	1	Possible
2B34h	Override voltage (Analog override voltage)	0.01 V	2 bytes	Read	1	Possible
2B35h	Override level (Override level)	%	2 bytes	Read	1	Possible
2B36h 2B37h	Reserved (For manufacturer setting)					
2B38h	Current position in one cycle of CAM axis (Current position in one cycle of CAM axis)	0.001 mm (Note 2)	4 bytes	Read	2	Possible
2B39h	Basis position of CAM (Basis position of CAM)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2B3Ah	Feed current position of CAM (Feed current position of CAM)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2B3Bh	CAM No. (Executed CAM number)		2 bytes	Read	1	Possible
2B3Ch	Stroke movement of CAM (Stroke movement of executed CAM)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2B3Dh	Current position of main axis (Current position of main axis)	0.001 mm (Note 2)	4 bytes	Read	2	Possible
2B3Eh	Current position in one cycle of main axis (Current position in one cycle of main axis)	0.001 mm (Note 2)	4 bytes	Read	2	Possible
2B3Fh to 2B7Fh	Reserved (For manufacturer setting)					

Note 1. The unit and magnification change depending on the setting values of [Pr. PT01] and [Pr. PT03].

2. The unit and magnification change depending on the setting values of [Pr. PT01] and [Pr. PT03] or the setting of the cam control data No. 14.

## 4. MODBUS REGISTERS

### 4.2.2 Directions for use

Set the address of the item to be monitored using the function code "03h" (Read Holding Registers). The value of the specified monitor item is returned from the servo amplifier.

Data in these registers can be continuously read. Data in continuous registers can be read at once. An error occurs if the register for manufacturer setting.

### 4.3 Parameter Setting (Address: 2001h to 27FFh)

Data can be read and written from/to parameters.

#### 4.3.1 List of registers

Data can be read and written from/to the following parameters. Refer to "MR-J4-\_A\_(-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL" and "MR-J4-\_A\_-RJ SERVO AMPLIFIER INSTRUCTION MANUAL (POSITIONING MODE)" for the setting of each parameter.

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2001h to 2020h	Servo Parameter PA01 to PA32 (servo parameter PA01 to PA32)	4 bytes	Read/write	2	Possible
2021h to 2080h	Reserved (For manufacturer setting)				
2081h to 20C0h	Servo Parameter PB01 to PB64 (servo parameter PB01 to PB64)	4 bytes	Read/write	2	Possible
20C1h to 2100h	Reserved (For manufacturer setting)				
2101h to 2150h	Servo Parameter PC01 to PC80 (servo parameter PC01 to PC80)	4 bytes	Read/write	2	Possible
2151h to 2180h	Reserved (For manufacturer setting)				
2181h to 21B0h	Servo Parameter PD01 to PD48 (servo parameter PD01 to PD48)	4 bytes	Read/write	2	Possible
21B1h to 2200h	Reserved (For manufacturer setting)				
2201h to 2240h	Servo Parameter PE01 to PE64 (servo parameter PE01 to PE64)	4 bytes	Read/write	2	Possible
2241h to 2280h	Reserved (For manufacturer setting)				
2281h to 22B0h	Servo Parameter PF01 to PF48 (servo parameter PF01 to PF48)	4 bytes	Read/write	2	Possible
22B1h to 2300h	Reserved (For manufacturer setting)				
2301h to 2320h	Servo Parameter Po01 to Po32 (Servo Parameter Po01 to Po32)	4 bytes	Read/write	2	Possible
2321h to 2400h	Reserved (For manufacturer setting)				
2401h to 2430h	Servo Parameter PL01 to PL48 (Servo Parameter PL01 to PL48)	4 bytes	Read/write	2	Possible
2431h to 2480h	Reserved (For manufacturer setting)				
2481h to 24B0h	Servo Parameter PT01 to PT48 (servo parameter PT01 to PT48)	4 bytes	Read/write	2	Possible
24B1h to 27FFh	Reserved (For manufacturer setting)				

## 4. MODBUS REGISTERS

### 4.3.2 Directions for use

Read the parameter values using the function code "03h" (Read Holding Registers). Write the parameter values using the function code "10h" (Preset Multiple Registers). Reading and writing of data from/to parameters depend on the setting of [Pr. PA19 Parameter writing inhibit].

Even though parameter setting values are changed with these registers, the set values are deleted at power-off if no setting for holding values is configured. To hold parameter setting values even after power-off, configure the setting to save the values in EEPROM using Store Parameter (Register: 1010h) after the parameter setting values are changed.

### 4.4 Point Table Setting (Address: 2801h to 28FFh)

Point table data can be read and written.

#### 4.4.1 List of registers

Point table data can be read and written from/to the following registers. For details of point tables, refer to "MR-J4-\_A\_-RJ SERVO AMPLIFIER INSTRUCTION MANUAL (POSITIONING MODE)".

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2801h to 28FFh	Number of entries (Number of entries) (Note)	1 byte	Read/write	9	Impossible
	Point data (Position data)	4 bytes			
	Speed (Servo motor speed)	2 bytes			
	Acceleration (Acceleration time constant)	2 bytes			
	Deceleration (Deceleration time constant)	2 bytes			
	Dwell (Dwell)	2 bytes			
	Sub function (Sub function)	1 byte			
	M code (M code)	1 byte			

Note. This item is enabled only at reading. At reading, "07h" is returned.

#### 4.4.2 Directions for use

Read point table data using the function code "03h" (Read Holding Registers). At this time, "07h" is returned to Number of entries. Write point table data using the function code "10h" (Preset Multiple Registers). Set "00h" or "07h" for Number of entries. Reading and writing of the point table data are executed by each point table number. Thus, changing only position data of the particular point table number cannot be performed. In that case, overwrite all the setting data values of the particular point table number with new data.

Data cannot be continuously read and written from/to these registers. Set values for each point table number.

Even though setting values are changed with these registers, the set values are deleted at power-off if no setting for holding values is configured. To hold setting values even after power-off, configure the setting to save the values in EEPROM using Store Parameter (Register: 1010h) after the setting values are changed.



## 4. MODBUS REGISTERS

---

### 4.5 Write Command to EEPROM (Address: 1010h)

Parameter and point table setting values can be saved in EEPROM.

#### 4.5.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
1010h	Store parameter	Number of entries	1 byte	Read/write	11	Impossible
		Save all parameters (Save all parameters)	4 bytes			
		Save communication Parameters (Save communication parameters)	4 bytes			
		Save application Parameters (Save application parameters)	4 bytes			
		Save manufacturer defined parameters (Save manufacturer- defined parameters)	4 bytes			
		Save Point table (Save point tables)	4 bytes			

## 4. MODBUS REGISTERS

### 4.5.2 Directions for use

Using the function code "03h" (Read Holding Registers) reads the information that shows whether each command can be used or not. The following table shows the returned values of each item.

Item	Saved parameter	Returned value
Number of entries (Number of entries)		05h
Save all parameters (Save all parameters)	Address: 2001h to 27FFh Address: 2801h to 28FFh	00000001h (Supported)
Save communication parameters (Save communication parameters)	Address: 1000h to 1FFFh	00000000h (Unsupported)
Save application Parameters (Save application parameters)	Address: 2001h to 27FFh Address: 2801h to 28FFh	00000001h (Supported)
Save manufacturer defined parameters (Save manufacturer-defined parameters)	Address: 2001h to 27FFh	00000001h (Supported)
Save Point table (Save point tables)	Address: 2801h to 28FFh	00000001h (Supported)

Select the items to be saved in EEP-ROM using the function code "10h" (Preset Multiple Registers). At this time, set "00h" or "05h" for Number of entries.

To save servo amplifier parameters and point table data in EEP-ROM, configure required settings following the table below. When bit 1 (EEP-ROM write completed) of the control output (register: 2D11h) is "1", saving data in EEP-ROM has been completed.

Writing a value other than "65766173h" and "00000000h" to each item results in an error.

Item	Setting value	Write to EEP-ROM	
		Parameter	Point table
Number of entries (Number of entries)	05h		
Save all parameters (Save all parameters)	00000000h	Invalid	Invalid
	65766173h ("save")	Valid	Valid
	Other than the values above	Error	Error
Save communication parameters (Save communication parameters)	00000000h	Invalid	Invalid
	65766173h ("save")	Invalid	Invalid
	Other than the values above	Error	Error
Save application Parameters (Save application parameters)	00000000h	Invalid	Invalid
	65766173h ("save")	Valid	Valid
	Other than the values above	Error	Error
Save manufacturer defined parameters (Save manufacturer-defined parameters)	00000000h	Invalid	Invalid
	65766173h ("save")	Valid	Invalid
	Other than the values above	Error	Error
Save Point table (Save point tables)	00000000h	Invalid	Invalid
	65766173h ("save")	Invalid	Valid
	Other than the values above	Error	Error

## 4. MODBUS REGISTERS

---

### 4.6 Alarm Information (Address: 1001h)

The error status can be checked.

#### 4.6.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
1001h	Error Register (Alarm Information)	1 byte	Read	1	Impossible

#### 4.6.2 Directions for use

The occurrence of an alarm can be read using the function code "03h" (Read Holding Registers). The following table shows the response data.

Response data	Status
00h	No alarms or warnings
01h	Alarms and warnings

When an alarm or a warning has occurred, alarm numbers, warning numbers, and detail numbers can be read from the register "2A41h".

### 4.7 Alarm Number (Address: 2A41h)

Alarm numbers, warning numbers, and detail numbers that currently exist can be read.

#### 4.7.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A41h	Current alarm (Alarm Number)	4 bytes	Read	2	Impossible

#### 4.7.2 Directions for use

Alarm numbers, warning numbers, and detail numbers that currently exist can be read using the function code "03h" (Read Holding Registers). An alarm number or warning number is stored in the higher bits of the response data, and a detail number is stored in the lower bits of the response data.

Address	Response data	When [AL 20.3] has occurred
Higher 2 bytes of 2A41h	Alarm number or warning number	0020h
Lower 2 bytes of 2A41h	Detail number	0003h

When data in this register is read while no error has occurred, "00000000h" is returned.

## 4. MODBUS REGISTERS

### 4.8 Alarm Occurrence Monitor (Address: 2B81h to 2BFFh)

Each monitor information at occurrence of an error can be read.

#### 4.8.1 List of registers

Address	Name	Unit	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2B81h	Cumulative feedback pulses (Cumulative feedback pulses)	pulse	4 bytes	Read	2	Possible
2B82h	Servo motor speed (Servo motor speed)	r/min mm/s	4 bytes	Read	2	Possible
2B83h	Droop pulses (Droop pulses)	pulse	4 bytes	Read	2	Possible
2B84h	Cumulative command pulses (Cumulative command pulses)	pulse	4 bytes	Read	2	Possible
2B85h	Command pulse frequency (Command pulse frequency)	kpulse/s	4 bytes	Read	2	Possible
2B86h	Analog speed command voltage (Analog speed command voltage) Analog speed limit voltage (Analog speed limit voltage)	0.01 V	2 bytes	Read	1	Possible
2B87h	Analog torque limit voltage (Analog torque limit voltage) Analog torque command voltage (Analog torque command voltage)	0.01 V	2 bytes	Read	1	Possible
2B88h	Regenerative load ratio (Regenerative load ratio)	%	2 bytes	Read	1	Possible
2B89h	Effective load ratio (Effective load ratio)	%	2 bytes	Read	1	Possible
2B8Ah	Peak load ratio (Peak load ratio)	%	2 bytes	Read	1	Possible
2B8Bh	Instantaneous torque (Instantaneous torque)	%	2 bytes	Read	1	Possible
2B8Ch	Position within one-revolution (Position within one-revolution)	pulse	4 bytes	Read	2	Possible
2B8Dh	ABS counter (Multi-revolution counter)	rev	4 bytes	Read	2	Possible
2B8Eh	Load to motor inertia ratio (Load to motor inertia ratio)	0.01 times	2 bytes	Read	1	Possible
2B8Fh	Bus voltage (Bus voltage)	V	2 bytes	Read	1	Possible
2B90h	Load-side cumulative feedback pulses (Load-side cumulative feedback pulses)	pulse	4 bytes	Read	2	Possible
2B91h	Load-side droop pulses (Load-side droop pulses)	pulse	4 bytes	Read	2	Possible
2B92h	Load-side encoder information 1 (Load-side encoder information 1) Z-phase counter (Z-phase counter)	pulse	4 bytes	Read	2	Possible
2B93h	Load-side encoder information 2 (Load-side encoder information 2)	rev	4 bytes	Read	2	Possible
2B94h	Analog monitor output voltage 1 (Analog monitor output voltage 1)	0.01 V	2 bytes	Read	1	Possible
2B95h	Analog monitor output voltage 2 (Analog monitor output voltage 2)	0.01 V	2 bytes	Read	1	Possible
2B96h	Cumulative encoder out pulses (encoder pulse output)	pulse	4 bytes	Read	2	Possible
2B97h	Temperature of motor thermistor (Temperature of motor thermistor)	°C	2 bytes	Read	1	Possible
2B98h	Motor-side cumu. feedback pulses (before gear) (Motor-side cumu. feedback pulses (before gear))	pulse	4 bytes	Read	2	Possible
2B99h	Electrical angle (Electrical angle)	pulse	4 bytes	Read	2	Possible
2B9Ah to 2BA2h	Reserved (For manufacturer setting)					

## 4. MODBUS REGISTERS

Address	Name	Unit	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2BA3h	Motor-side/load-side position deviation (Motor-side/load-side position deviation)	pulse	4 bytes	Read	2	Possible
2BA4h	Motor-side/load-side speed deviation (Motor-side/load-side speed deviation)	r/min	4 bytes	Read	2	Possible
2BA5h	Encoder inside temperature (Encoder inside temperature)	°C	2 bytes	Read	1	Possible
2BA6h	Settling time (Settling time)	ms	2 bytes	Read	1	Possible
2BA7h	Oscillation detection frequency (Oscillation detection frequency)	Hz	2 bytes	Read	1	Possible
2BA8h	Number of tough operations (Number of tough drive operations)	times	2 bytes	Read	1	Possible
2BA9h	Reserved (For manufacturer setting)					
2BAAh						
2BABh						
2BACH						
2BADh	Unit power consumption (Unit power consumption)	W	2 bytes	Read	1	Possible
2BAEh	Unit total power consumption (Unit total power consumption)	Wh	4 bytes	Read	2	Possible
2BAFh	Current position (Current position)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2BB0h	Command position (Command position)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2BB1h	Remaining command distance (Remaining command distance)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2BB2h	Point table No./Program No./Station position No. (Point table number/Program number/Station position number)		2 bytes	Read	1	Possible
2BB3h	Step No. (Step number)		2 bytes	Read	1	Possible
2BB4h	Override voltage (Analog override voltage)	0.01 V	2 bytes	Read	1	Possible
2BB5h	Override level (Override level)	%	2 bytes	Read	1	Possible
2BB6h	Reserved (For manufacturer setting)					
2BB7h						
2BB8h	Current position in one cycle of CAM axis (Current position in one cycle of CAM axis)	0.001 mm (Note 2)	4 bytes	Read	2	Possible
2BB9h	Basis position of CAM (Basis position of CAM)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2BBAh	Feed current position of CAM (Feed current position of CAM)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2BBBh	CAM No. (Executed CAM number)		2 bytes	Read	1	Possible
2BBCh	Stroke movement of CAM (Stroke movement of executed CAM)	0.001 mm (Note 1)	4 bytes	Read	2	Possible
2BBDh	Current position of main axis (Current position of main axis)	0.001 mm (Note 2)	4 bytes	Read	2	Possible
2BBEh	Current position in one cycle of main axis (Current position in one cycle of main axis)	0.001 mm (Note 2)	4 bytes	Read	2	Possible
2BBFh to 2BFFh	Reserved (For manufacturer setting)					

Note 1. The unit and magnification change depending on the setting values of [Pr. PT01] and [Pr. PT03].

2. The unit and magnification change depending on the setting values of [Pr. PT01] and [Pr. PT03], or the setting of the cam control data No. 14.

## 4. MODBUS REGISTERS

### 4.8.2 Directions for use

Set the address of the item to be monitored using the function code "03h" (Read Holding Registers). The value of the specified monitor item is returned from the servo amplifier.

Data in these registers can be continuously read. Data in continuous registers can be read at once. An error occurs if the register for manufacturer setting.

### 4.9 Alarm History (Address: 2A00h to 2A0Fh)

The history of up to 16 alarms can be read.

#### 4.9.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
2A00h to 2A0Fh	Alarm History0 to Alarm History15 (Alarm history 0 to 15)	Number of entries (Number of entries)	1 byte	Read	5	Impossible
		Alarm No. (Alarm number)	4 bytes			
		Alarm time (Hour) (Alarm time (Hour))	4 bytes			

#### 4.9.2 Directions for use

The history of alarms can be read using the function code "03h" (Read Holding Registers). At this time, "02h" is returned to Number of entries. The alarm number of a specified alarm history is returned to Alarm No. The alarm number or warning number is returned to the higher 2 bytes, and the detail number is returned to the lower 2 bytes. When no alarm history exists, "00000000h" is returned.

Alarm No.	Response data	When [AL 20.3] has occurred
Higher 2 bytes	Alarm number or warning number	0020h
Lower 2 bytes	Detail number	0003h

The alarm time (Unit: hour) of a specified alarm history is returned to Alarm time. When no alarm history exists, "00000000h" is returned.

### 4.10 Alarm History Clear (Address: 2A40h)

The alarm history can be cleared.

#### 4.10.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A40h	Clear alarm history (Clear alarm history)	2 bytes	Writing	1	Impossible

#### 4.10.2 Directions for use

The history of alarms can be cleared by writing "1EA5h" using the function code "10h" (Preset Multiple Registers). When a value other than "1EA5h" is written, the history of alarms cannot be cleared.

## 4. MODBUS REGISTERS

### 4.11 Parameter Error Count (Address: 2A44h)

When [AL. 37 parameter error] has occurred, the number of parameters where parameter errors have occurred can be read.

#### 4.11.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A44h	Parameter error No. (Parameter error count)	1 byte	Read	1	Impossible

#### 4.11.2 Directions for use

Read the parameter error number count using the function code "03h" (Read Holding Registers). When no parameter error has occurred, "00h" is returned.

### 4.12 Parameter Error List (Address: 2A45h)

The error numbers of the currently existing parameter errors can be read.

#### 4.12.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A45h	Parameter error list (Parameter error number)	Number of entries (Number of entries)	Read	1 + Number of read points	Impossible
		Parameter error 1 (Parameter error number 1) to Parameter error 32 (Parameter error number 32)			
		2 bytes × 32			

#### 4.12.2 Directions for use

Read the parameter error numbers using the function code "03h" (Read Holding Registers). At this time, set the value read with the parameter error count (2A44h) for Number of entries. Note that up to 32 parameter errors can be read.

Parameter error 1 to Parameter error 32 store parameter error numbers. Parameter group numbers are stored in the higher 8 bits, and parameter numbers are stored in the lower 8 bits. The following table lists parameter group numbers.

Parameter group	Number
Basic setting parameters [Pr. PA_ _]	00
Gain/filter setting parameters [Pr. PB_ _]	01
Extension setting parameters [Pr. PC_ _]	02
I/O setting parameters [Pr. PD_ _]	03
Extension setting 2 parameters [Pr. PE_ _]	04
Extension setting 3 parameters [Pr. PF_ _]	05
Option setting parameters [Pr. Po_ _]	09
Linear servo motor/DD motor setting parameters [Pr. PL_ _]	0B
Positioning control parameters [Pr. PT_ _]	0C

## 4. MODBUS REGISTERS

### 4.13 Point Table Error Number (Address: 2A43h)

When a point table error [AL. 37] has occurred, the detail of the point table where the point table error has occurred can be read.

#### 4.13.1 List of registers

Address	Name		Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A43h	Point Table error No. (Point table error number)	Number of entries (Number of entries)	1 byte	Read	4	Impossible
		Point Table Error No. (Point table error number)	2 bytes			
		Point Table Error Factor (Point table error factor)	4 bytes			

#### 4.13.2 Directions for use

Read a point table error number using the function code "03h" (Read Holding Registers). At this time, "02h" is returned to Number of entries.

The factor of the error that has occurred in the point table with the number read with Point Table Error No. is stored in Point Table Error Factor.

The following table describes the assignment of bits for point table error factors. The values in the areas marked with diagonal lines are indefinite.

Bit	Error factor bit details
0	0: No error 1: Target position
1	/
2	0: No error 1: Servo motor speed
3	0: No error 1: Acceleration time constant
4	0: No error 1: Deceleration time constant
5	0: No error 1: Dwell
6	0: No error 1: Sub function
7	0: No error 1: M code
8 to 31	/



## 4. MODBUS REGISTERS

### 4.14 External Input Pin Status (Address: 2C10h)

The ON/OFF state of the external input pins input to the servo amplifier can be read.

#### 4.14.1 List of registers

Address	Name		Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2C10h	External Input pin display (External input pin status)	Number of entries (Number of entries)	1 byte	Read	3	Impossible
		External Input pin display1 (External input pin status 1)	4 bytes			

#### 4.14.2 Directions for use

Read the ON/OFF state of external input pins using the function code "03h" (Read Holding Registers). At this time, "02h" is returned to Number of entries.

External Input pin display1 displays the input pin status of the MR-J4-\_A\_-RJ servo amplifier. The following table shows the details. When the input of the target pin is on, "1" is returned. When the input of the target pin is off, "0" is returned. The values in the areas marked with diagonal lines are indefinite.

Bit	CN1 connector pin	Bit	CN1 connector pin	Bit	CN1 connector pin	Bit	CN1 connector pin
0	43	8	18	16	/	24	/
1	44	9	45	17	/	25	/
2	42	10	10	18	/	26	/
3	15	11	35	19	/	27	/
4	19	12	/	20	/	28	/
5	41	13	/	21	/	29	/
6	16	14	/	22	/	30	/
7	17	15	/	23	/	31	/

## 4. MODBUS REGISTERS

### 4.15 External Output Pin Status (Address: 2C11h)

The ON/OFF state of external output pins output from the servo amplifier can be read.

#### 4.15.1 List of registers

Address	Name		Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2C11h	External Output pin display (External output pin status)	Number of entries (Number of entries)	1 byte	Read	3	Impossible
		External Output pin display1 (External output pin status 1)	4 bytes			

#### 4.15.2 Directions for use

Read the ON/OFF state of external output pins using the function code "03h" (Read Holding Registers). At this time, "02h" is returned to Number of entries.

External Output pin display1 displays the output pin status of the MR-J4- \_A\_-RJ servo amplifier. The following table shows the details. When the output of the target pin is on, "1" is returned. When the output of the target pin is off, "0" is returned. The values in the areas marked with diagonal lines are indefinite.

Bit	CN1 connector pin	Bit	CN1 connector pin	Bit	CN1 connector pin	Bit	CN1 connector pin
0	49	8	14	16	/	24	/
1	24	9	/	17	/	25	/
2	23	10	/	18	/	26	/
3	25	11	/	19	/	27	/
4	22	12	/	20	/	28	/
5	48	13	/	21	/	29	/
6	33	14	/	22	/	30	/
7	13	15	/	23	/	31	/

### 4.16 Input Device Status (Address: 2C12h)

The current input device status can be read.

#### 4.16.1 List of registers

Address	Name		Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2C12h	External Input signal display (Input device status)	Number of entries (Number of entries)	1 byte	Read	9	Impossible
		External Input signal display1 (Input device status 1)	4 bytes			
		External Input signal display2 (Input device status 2)	4 bytes			
		External Input signal display3 (Input device status 3)	4 bytes			
		External Input signal display4 (Input device status 4)	4 bytes			

## 4. MODBUS REGISTERS

### 4.16.2 Directions for use

Read the ON/OFF state of input devices using the function code "03h" (Read Holding Registers). At this time, "04h" is returned to Number of entries.

External Input signal display1 (Input device status 1) to External Input signal display4 (Input device status 4) display the ON/OFF state of each input device of the MR-J4-\_A\_-RJ servo amplifier. The following table shows the details. When the input of the target device is on, "1" is returned. When the input of the target device is off, "0" is returned. The values in the areas marked with diagonal lines are indefinite.

Bit	Input device abbreviation (Note 1)			
	Input device status 1	Input device status 2	Input device status 3	Input device status 4
0	SON		MD0	POS00
1	LSP	ABSM	MD1	POS01
2	LSN	ABSR		POS02
3	TL		TCH	POS03
4	TL1		TP0	POS10
5	PC		TP1	POS11
6	RES		OVR	POS12
7	CR			POS13
8	SP1			POS20
9	SP2		DOG/SIG	POS21
10	SP3		SPD1	POS22
11	ST1/RS2		SPD2	POS23
12	ST2/RS1		SPD3	POSP
13	CMX1		SPD4	POSN
14	CMX2			STRB
15	LOP			
16		MSD	LPS	
17		PI1		
18	EM2/EM1	PI2		
19		PI3		
20	STAB2	CAMC	OV0	
21		CI0	OV1	
22		CI1	OV2	
23		CI2	OV3	
24	TSTP	CI3	DI0	
25		CLTC (Note 2)	DI1	
26		CPCD (Note 2)	DI2	
27	CDP		DI3	
28	CLD		DI4	
29	MECR		DI5	
30			DI6	
31			DI7	

- Note 1. Refer to "MR-J4-\_A\_-(-RJ) Servo Amplifier Instruction Manual" and "MR-J4-\_A\_-RJ Servo Amplifier Instruction Manual (Positioning Mode)" for details on the signals.
- Note 2. This is available with servo amplifiers with software version C1 or later.

## 4. MODBUS REGISTERS

---

### 4.17 Output Device Status (Address: 2C13h)

The current output device status can be read.

#### 4.17.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2C13h	Number of entries (Number of entries)	1 byte	Read	9	Impossible
	External Output signal display1 (Output device status 1)	4 bytes			
	External Output signal display2 (Output device status 2)	4 bytes			
	External Output signal display3 (Output device status 3)	4 bytes			
	External Output signal display4 (Output device status 4)	4 bytes			

## 4. MODBUS REGISTERS

### 4.17.2 Directions for use

Read the ON/OFF state of output devices using the function code "03h" (Read Holding Registers). At this time, "04h" is returned to Number of entries.

External Output signal display1 (Output device status 1) to External Output signal display4 (Output device status 4) display the ON/OFF state of each output device of the MR-J4-\_A\_-RJ servo amplifier. The following table shows the details. When the output of the target device is on, "1" is returned. When the output of the target device is off, "0" is returned. The values in the areas marked with diagonal lines are indefinite.

Bit	Output device abbreviation (Note 1)			
	Output device status 1	Output device status 2	Output device status 3	Output device status 4
0	RD			MCD00
1	SA			MCD01
2	ZSP			MCD02
3	TLC		CPO	MCD03
4	VLC		ZP	MCD10
5	INP		POT	MCD11
6			PUS	MCD12
7	WNG		MEND	MCD13
8	ALM			ACD0
9	OP			ACD1
10	MBR			ACD2
11	DB			ACD3
12	ALCD0		PED	PRQ0
13	ALCD1			PRQ1
14	ALCD2			
15	BWNG			
16				
17			ALMWNG	
18			BW9F	
19		MSDH		
20		MSDL		
21		SOUT		
22		OUT1		
23		OUT2		
24		OUT3	PT0/PS0	
25	CDPS	CAMS	PT1/PS1	
26	CLDS	CLTS (Note 2)	PT2/PS2	
27	ABSV	CLTSM (Note 2)	PT3/PS3	
28		CPCC (Note 2)	PT4/PS4	
29			PT5/PS5	
30			PT6/PS6	
31	MTTR		PT7/PS7	

- Note 1. Refer to "MR-J4-\_A\_-(-RJ) Servo Amplifier Instruction Manual" and "MR-J4-\_A\_-RJ Servo Amplifier Instruction Manual (Positioning Mode)" for details on the signals.
2. This is available with servo amplifiers with software version C1 or later.

## 4. MODBUS REGISTERS

---

### 4.18 Servo Amplifier Model (Address: 1008h)

The model name of the currently-connected servo amplifier can be read.

#### 4.18.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
1008h	Manufacture Device Name (Servo amplifier model)	32 bytes	Read	16	Impossible

#### 4.18.2 Directions for use

Read the model name of the servo amplifier using the function code "03h" (Read Holding Registers). The model name of the servo amplifier is returned in ASCII codes. The ASCII codes are read in order from the lower address.

### 4.19 Servo Amplifier Software Version (Address: 100Ah)

The software version of the currently-connected servo amplifier can be read.

#### 4.19.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
100Ah	Manufacture Software Version (Servo amplifier software version)	16 bytes	Read	8	Impossible

#### 4.19.2 Directions for use

Read the software version of the servo amplifier using the function code "03h" (Read Holding Registers). The software version of the servo amplifier is returned in ASCII codes. The ASCII codes are read in order from the lower address.

## 4. MODBUS REGISTERS

---

### 4.20 Broadcast Setting (Address: 2D98h)

The setting of the broadcast communication of the Modbus-RTU communication can be configured. The broadcast command can be disabled for each axis using this register.

#### 4.20.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D98h	Select behavior of broadcast message (Broadcast setting)	1 byte	Read/write	1	Impossible

#### 4.20.2 Directions for use

The current broadcast communication setting can be read using the function code "03h" (Read Holding Registers).

Configure the broadcast communication setting using the function code "10h" (Preset Multiple Registers).

The following table lists the setting values for this register. Do not set any value other than "00h" and "01h".

Setting value	Description
0	Broadcast instruction enabled
1	Broadcast instruction disabled

## 4. MODBUS REGISTERS

---

### 4.21 Servo Motor Rated Speed (Address: 2D28h)

The servo motor rated speed ([r/min] or [mm/s]) can be read.

#### 4.21.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D28h	Motor rated speed (Servo motor rated speed)	4 bytes	Read	2	Impossible

#### 4.21.2 Directions for use

Read the servo motor rated speed ([r/min] or [mm/s]) using the function code "03h" (Read Holding Registers).

### 4.22 Servo Motor Maximum Speed (Address: 2D29h)

The servo motor maximum speed ([r/min] or [mm/s]) can be read.

#### 4.22.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D29h	Motor max speed (Servo motor maximum speed)	4 bytes	Read	2	Impossible

#### 4.22.2 Directions for use

Read the servo motor maximum speed ([r/min] or [mm/s]) using the function code "03h" (Read Holding Registers).



## 4. MODBUS REGISTERS

### 4.23 SDO Abort Code (Address: 2A60h)

The latest SDO Abort Code can be read.

The access to registers can be checked by reading the latest SDO Abort Code.

When an error is found by reading SDO Abort Codes, change the method to access registers.

#### 4.23.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A60h	SDO Abort Code (SDO Abort Code)	4 bytes	Read	2	Impossible

#### 4.23.2 Directions for use

Read SDO Abort Codes using the function code "03h" (Read Holding Registers).

The following table lists the SDO Abort Codes.

SDO Abort Code	Description
0000 0000h	No error
0601 0000h	Unsupported access to an object.
0601 0001h	Attempt to read a write only object.
0601 0002h	Attempt to write a read only object.
0602 0000h	Object does not exist in the object dictionary.
0607 0010h	Data type does not match, length of service parameter does not match.
0609 0011h	Sub-index does not exist.
0609 0030h	Value range of parameter exceeded (only for write access).
0609 0031h	Value of parameter written too high.
0609 0032h	Value of parameter written too low.
0800 0021h	Data cannot be transferred or stored to the application because of local control.
0800 0022h	Data cannot be transferred or stored to the application because of the present device state.

### 4.24 Access Log 1 (Address: 2A64h)

The access log 1 can be read.

#### 4.24.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A64h	Access log 1 (Access log 1)	4 bytes	Read	2	Impossible

#### 4.24.2 Directions for use

Read the access log 1 using the function code "03h" (Read Holding Registers).

The access log 1 displays the Index and SubIndex that were lastly accessed using the Modbus-RTU communication.

Access log 1	Response data
Higher 2 bytes	Index: xxxxh
Lower 2 bytes	SubIndex: 00yyh

For example, when the access to a point table (address: 2801h) succeeded, the read value of the access log 1 is "28010007h".

## 4. MODBUS REGISTERS

---

### 4.25 Access Log 2 (Address: 2A65h)

The access log 2 can be read.

#### 4.25.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A65h	Access log 2 (Access log 2)	2 bytes	Read	1	Impossible

#### 4.25.2 Directions for use

Read the access log 2 using the function code "03h" (Read Holding Registers).

The access log 2 displays the number of addresses that were lastly accessed using the Modbus-RTU communication.

Use this register when an access error has occurred in the continuous read/write.

For example, when an error has occurred while the registers for monitoring (address: 2B01h to 2B0Ah) are continuously read, the error has occurred at the address 2B07h because the read value of the access log 2 is "0006h".

### 4.26 Communication Error Count (Address: 2A68h)

The Modbus-RTU communication error count can be read.

#### 4.26.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2A68h	Communication error count (Communication error count)	2 bytes	Read	1	Impossible

#### 4.26.2 Directions for use

The total count of the following communication errors can be read using the function code "03h" (Read Holding Registers).

- Errors detected by hardware (parity error, overrun error, and framing error)
- Message frame length error
- CRC error

Executing Clear alarm history clears the error count. For details of Clear alarm history, refer to section 4.10.

## 4. MODBUS REGISTERS

### 4.27 Supported Profile Information (Address: 1000h)

The supported profile information can be read.

#### 4.27.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
1000h	Device type (Supported profile information)	4 bytes	Read	2	Impossible

#### 4.27.2 Directions for use

Read the supported profile information using the function code "03h" (Read Holding Registers). The following table shows the response data.

Device type	Response data
Higher 2 bytes	0002h (Servo drive)
Lower 2 bytes	0192h (CiA 402)

### 4.28 Device Information (Address: 1018h)

The device information can be read.

#### 4.28.1 List of registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
1018h	Device type (Device information)	Number of entries (Number of entries)	1 byte	Read	9	Impossible
		Vendor ID (Vendor ID)	4 bytes			
		Product code (Product code)	4 bytes			
		Revision number (Revision number)	4 bytes			
		Serial number (Serial number)	4 bytes			

#### 4.28.2 Directions for use

Read the device information using the function code "03h" (Read Holding Registers). The following table shows the response data.

Item	Response data
Number of entries (Number of entries)	04h
Vendor ID (Vendor ID)	00000A1Eh
Product code (Product code)	0000203h
Revision number (Revision number)	00010000h
Serial number (Serial number)	00000000h

## 5. DRIVING MOTOR

---

### 5. DRIVING MOTOR

POINT
<ul style="list-style-type: none"> <li>● Use a servo motor after setting [Pr. PF46 Modbus-RTU communication Communication timeout time]. The servo motor may continue to operate after the communication is disabled due to a communication shut-off or other causes.</li> <li>● The servo motor cannot be driven with Modbus-RTU communication when the control mode is set to the positioning mode (indexer method).</li> </ul>

This chapter describes how to drive a servo motor in the Modbus-RTU communication. For MR-J4-\_A\_-RJ servo amplifier, Modbus registers are assigned like the address assignment of CiA 402 drive profile. The servo motors are driven by Modbus compatible controller as master accessing to the assigned holding registers. The following shows a list of functions that can be used.


Function	Description	Detailed explanation
Device control	The master (controller) can control the state machine of the slave (servo amplifier) to drive the servo motor.	Section 5.1
Control mode	The following modes can be selected: each control mode, home position return mode, JOG operation mode, point table mode, and program drive mode.	Section 5.2
Home position return mode	In this mode, the servo amplifier performs a home position return operation using the method directed by the master (controller).	Section 5.3
JOG operation mode	In this mode, the servo motor is manually driven at a speed set by the master (controller).	Section 5.4
Point table operation mode	In this mode, the servo motor is driven with a prespecified point table.	Section 5.5
Program drive mode	In this mode, the servo motor is driven with a prespecified program.	Section 5.6
Touch probe	The current position latch data at the rising edge and falling edge of sensor inputs can be read.	Section 5.7
Function common to the modes	This function uses the common registers that can be used for the home position return mode, JOG operation mode, point table operation mode, and program operation mode.	Section 5.8

# 5. DRIVING MOTOR

## 5.1 Device Control

### 5.1.1 Function description

The servo amplifier status is managed based on the state machine below. Setting the control command (6040h) from the master (controller) changes the status of the slave (servo amplifier). The current servo amplifier status can be read with the control status (6041h).

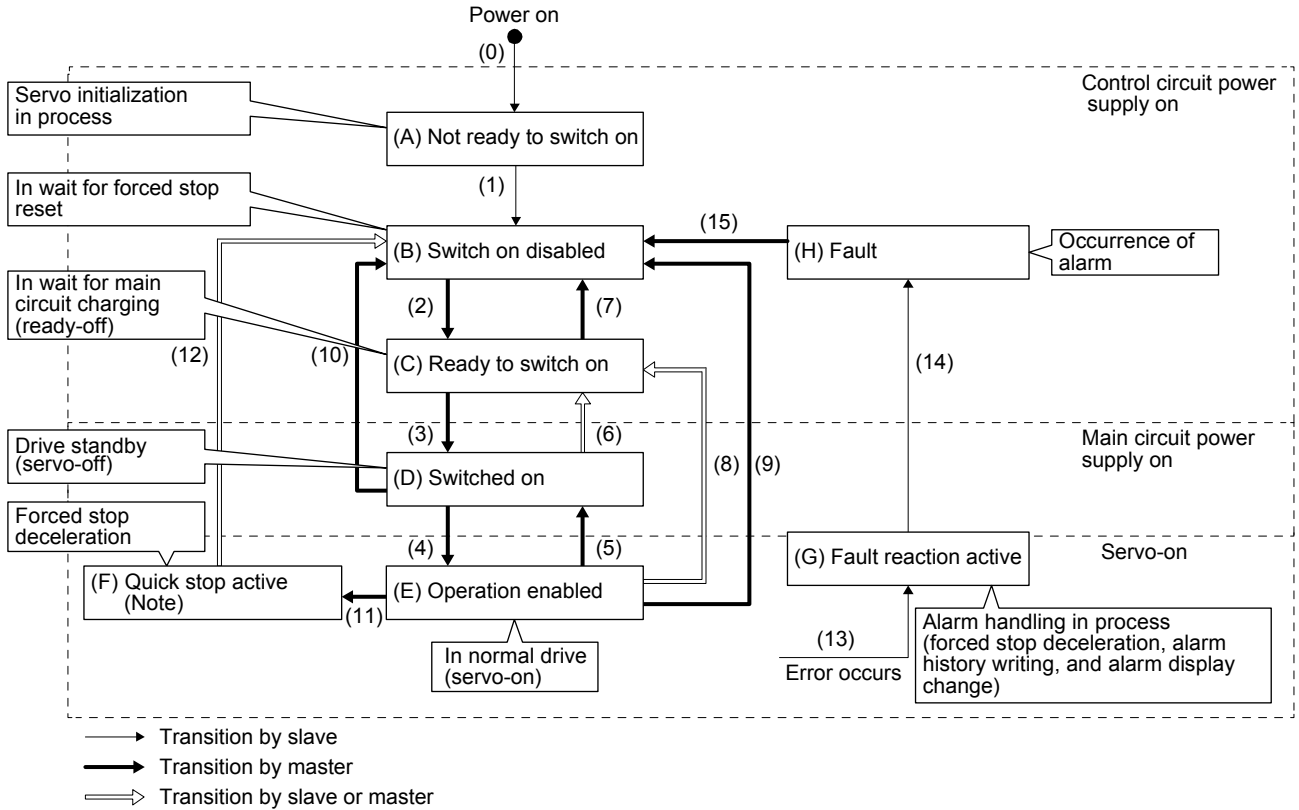

Note. Quick stop will be available in the future.

## 5. DRIVING MOTOR

### 5.1.2 Related registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible
6041h	Status word (Control status)	2 bytes	Read	1	Impossible

### 5.1.3 Details of registers

#### (1) Control command (Control word: 6040h)

This register issues a command from the master (controller) to the slave (servo amplifier).

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible

The current control command status can be checked using the function code "03h" (Read Holding Registers).

A control command can be written using the function code "10h" (Preset Multiple Registers).

The following table lists the bits of this register. The slave can be controlled with bit 0 to bit 3 and bit 7.

Bit	Description
0	Switch On
1	Enable Voltage
2	Quick Stop
3	Enable Operation
4 to 6	Operation Mode Specific (Note 1)
7	Fault Reset
8	Halt
9 to 15	Reserved (Note 2)

Note 1. The description changes depending on the control mode.

Note 2. The value at reading is undefined. Set "0" at writing.

The following table lists the commands issued to the servo amplifier. Turn on the bit that corresponds to the command.

Command	Bit 7	Bit 3	Bit 2	Bit 1	Bit 0
Shutdown	0		1	1	0
Switch On	0	0	1	1	1
Disable voltage	0			0	
Quick stop (Note)	0		0	1	
Disable operation	0	0	1	1	1
Enable operation	0	1	1	1	1
Fault reset	0 → 1				

Note. The Quick stop command is not supported.

## 5. DRIVING MOTOR

### (2) Control status (Status word: 6041h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6041h	Status word (Control status)	2 bytes	Read	1	Impossible

The current control status can be checked using the function code "03h" (Read Holding Registers). The following table lists the bits of this register. The status can be checked with bit 0 to bit 7.

Bit	Description
0	Ready To Switch On
1	Switched On
2	Operation Enabled
3	Fault
4	Voltage Enabled
5	Quick Stop
6	Switch On Disabled
7	Warning
8	Reserved (Note 2)
9	Remote
10	Target reached
11	Internal Limit Active
12 to 13	Operation Mode Specific (Note 1)
14 to 15	Reserved (Note 2)

Note 1. The description changes depending on the control mode.  
2. The value at reading is undefined.

The following table lists the servo amplifier statuses that can be read with bit 0 to bit 7.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Status
	0			0	0	0	0	Not ready to switch on
	1			0	0	0	0	Switch on disable
	0	1		0	0	0	1	Ready to switch on
	0	1		0	0	1	1	Switch on
	0	1		0	1	1	1	Operation enabled
	0	0		0	1	1	1	Quick stop active
	0			1	1	1	1	Fault reaction active
	0			1	0	0	0	Fault
			1					Main power on
1								Warning

Bit 9 turns on when the control command (Control word) is enabled in the Modbus-RTU communication.

Bit 11 turns on when the stroke limit, software limit, or positioning command is outside the range.

#### 5.1.4 Directions for use

The function code "10h" (Preset Multiple Registers) allows a transition to the target status, skipping the statuses in between.

The statuses can transition as shown in the following table, for example. (Refer to the figure in section 5.1.1.)

Current status	Command	Status after transition
(B) Switch on disabled	Switch on	(D) Switched on
(B) Switch on disabled	Enable operation	(E) Operation enabled
(C) Ready to switch on	Enable operation	(E) Operation enabled

## 5. DRIVING MOTOR

### 5.2 Control Mode

This section describes the control modes that the MR-J4-\_A\_-RJ servo amplifier supports.

#### 5.2.1 Function description

The MR-J4-\_A\_-RJ servo amplifier supports various control modes.

A control mode can be selected with the control mode (Modes of operation: 6060h).

The following table shows the correspondence between the control modes before and after switching.

Control mode		Control mode after switching						
		Position	Speed	Torque	Point table	Program	Home position return	JOG operation
Control mode before switching	Position		○	○	×	×	×	×
	Speed	○		○	×	×	×	×
	Torque	○	○		×	×	×	×
	Point table	×	×	×		×	○	○
	Program	×	×	×	×		○	○
	Home position return	×	×	×	○ (Note)	○ (Note)		○
	JOG operation	×	×	×	○ (Note)	○ (Note)	○	

○: Switchable ×: Non-switchable

Note. Use [Pr. PA01] to switch the mode between the point table and program.

After switching control modes, check that the control modes have been switched by monitoring the control mode display (Modes of operation Display: 6061h).

Switch control modes while the servo motor is being stopped.

#### 5.2.2 Related registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6060h	Modes of operation (Control mode)	1 byte	Read/write	1	Impossible
6061h	Modes of operation Display (Control mode display)	1 byte	Read	1	Impossible
6502h	Supported Drive Modes (Supported control mode)	4 bytes	Read	2	Impossible

#### 5.2.3 Details of registers

##### (1) Control mode (Modes of operation: 6060h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6060h	Modes of operation (Control mode)	1 byte	Read/write	1	Impossible

The current control mode setting can be checked using the function code "03h" (Read Holding Registers).

Control modes can be switched by setting a control mode using the function code "10h" (Preset Multiple Registers).

The following table shows the correspondence between control modes and setting values.

Control mode	Setting value
Position control	-20
Speed control	-21
Torque control	-22
Point table	-101
Program operation	-102
Home position return	6
JOG operation	-100



## 5. DRIVING MOTOR

### (2) Control mode display (Modes of operation Display: 6061h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6061h	Modes of operation Display (Control mode display)	1 byte	Read	1	Impossible

The current control mode can be read using the function code "03h" (Read Holding Registers).

The following table shows the correspondence between control modes and setting values.

Control mode	Setting value
Position control	-20
Speed control	-21
Torque control	-22
Point table	-101
Program operation	-102
Home position return	6
JOG operation	-100
Test mode: JOG operation	-1
Test mode: Positioning operation	-2
Test mode: DO forced output	-4
Test mode: Machine analyzer	-6
Test mode: One-step feed (in point table operation)	-10
Test mode: One-step feed (in program operation)	-11

### (3) Supported control mode (Supported Drive Modes: 6502h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6502h	Supported Drive Modes (Supported control mode)	4 bytes	Read	2	Impossible

Supported control modes can be read using the function code "03h" (Read Holding Registers).

The return value is 00070020h. The following table shows the details.

Bit	Supported Modes	Defined value
0	Profile Position mode	0
1	Velocity mode	0
2	Profile Velocity mode	0
3	Torque Profile mode	0
4	Reserved	0
5	Homing Mode (Home position return)	1: Supported
6	Interpolated Position mode	0
7	Cyclic Sync Position mode	0
8	Cyclic Sync Velocity mode	0
9	Cyclic Sync Torque mode	0
10 to 15	Reserved	0
16	JOG mode (JOG operation)	1: Supported
17	Point table mode (Point table)	1: Supported
18	Program drive mode (Program operation)	1: Supported
19 to 31	Reserved	0

## 5. DRIVING MOTOR

### 5.2.4 Directions for use

- (1) Positioning with point table operation ([Pr. PA01]: "\_ \_ \_ 6")  
After performing a home position return operation, perform a point table operation. Use the control mode (Modes of operation: 6060h) when switching the mode to the home position return or point table operation.
- (2) Registering the destination position data by a JOG operation ([Pr. PA01]: "\_ \_ \_ 6") as the position data in a point table  
After performing a home position return operation, perform a JOG operation to reach the target position and register the position data to a point table. Use the control mode (Modes of operation: 6060h) when switching the mode to the home position return or JOG operation.
- (3) Performing speed control ([Pr. PA01]: "\_ \_ \_ 1") when [Pr. PC71] is "21\_1"  
Use the control mode (Modes of operation: 6060h) to switch the mode to the speed control, torque control, or position control.


### 5.3 Home Position Return Mode

This section describes how to perform a home position return operation in the Modbus-RTU communication.

#### 5.3.1 Function description

Perform a home position return operation following the instruction below.

After setting the home position return method (Homing method: 6098h), home position return speed (Homing speed: 6099h), and home position return acceleration/deceleration time constant, start the operation with the control command (Control word: 6040h). The specified home position return operation is performed. The completion of the home position return operation can be checked with the control status (Status word: 6041h).

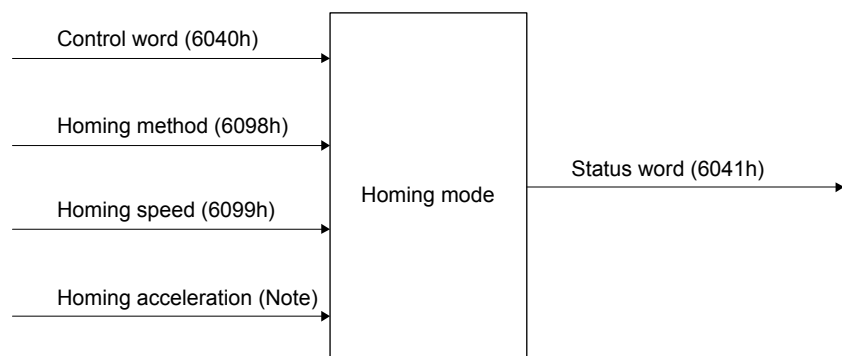

Note. In the point table mode, use the acceleration time constant and deceleration time constant in point table No. 1 (2801h).

In the program drive mode, Use [Pr. PC30] (211Eh) and [Pr. PC31] (211Fh).

## 5. DRIVING MOTOR

### 5.3.2 Related registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible	
6098h	Homing method (Home position return method)	1 byte	Read/write	1	Impossible	
6099h	Homing speed (Home position return speed)	Number of entries (Number of entries)	1 byte	Read/write	5	Impossible
		Speed during search for switch (Home position return speed)	4 bytes			
		Speed during search for zero (Creep speed)	4 bytes			
6041h	Status word (Control status)	2 bytes	Read	1	Impossible	

For details of the change to the acceleration time constant or deceleration time constant in point table No. 1 used for a home position return operation in the point table mode, refer to Section 4.4.

For details of the change to the acceleration time constant parameter [Pr. PC30] and deceleration time constant parameter [Pr. PC31] used for a home position return operation in the program mode, refer to Section 4.3.

### 5.3.3 Details of registers

#### (1) Control command (Control word: 6040h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible

The current control input command status can be checked using the function code "03h" (Read Holding Registers).

A control input can be written using the function code "10h" (Preset Multiple Registers).

The bits of this register that relate to the home position return operation are shown below.

Bit	Description
0 to 3	Refer to section 5.1.3.
4	Homing Operation Start (Home position return operation start)
5 to 6	Reserved (Note)
7	Refer to section 5.1.3.
8	Halt (Stop command)
9 to 15	Refer to section 5.1.3.

Note. The value at reading is undefined. Set "0" at writing.

To start a home position return operation, turn bit 4 from "0" to "1". When the home position return operation is completed or an alarm is issued during the operation, turn bit 4 from "1" to "0".

When bit 8 (Halt) of the control command (6040h) is set to "1", the servo motor decelerates to a stop.

Then, when bit 8 (Halt) is set to "0" and bit 4 is turned from "0" to "1", the home position return operation resumes.

## 5. DRIVING MOTOR

### (2) Home position return method (Homing method: 6098h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6098h	Homing method (Home position return method)	1 byte	Read/write	1	Impossible

The current home position return method can be read using the function code "03h" (Read Holding Registers).

Set a home position return method using the function code "10h" (Preset Multiple Registers). To enable the written home position return method after turning the power back on, execute the write command to EEP-ROM (1010h). After the execution of the write command to EEP-ROM, the values of [Pr. PT04] and [Pr. PT45] are changed.

The following table lists selectable home position return methods.

Setting value	Home position return method	Direction of rotation	Description	Home position return parameter	
				Pr. PT04 (__x x)	Pr. PT45 (__x x)
Other than the values below	Home position return method selected with [Pr. PT04] or [Pr. PT45]	-	The home position return method specified with [Pr. PT04] or [Pr. PT45] is used.	Value being set	Value being set
7	Homing on home switch and index pulse	Forward	When the front end of the proximity dog is detected, the travel in the reverse direction starts. Then, the position where the first Z-phase signal is detected is set as a home position.	xxh	07h
11		Reverse		xxh	0bh
8		Forward	The position specified by the first Z-phase signal after the front end of the proximity dog is detected is set as a home position.	xxh	08h
12		Reverse		xxh	0ch
23	Homing without index pulse	Forward	After the front end of the proximity dog is detected, the position is shifted in the reverse direction and the position on the front end (edge) of the proximity dog is set as a home position.	xxh	17h
27		Reverse		xxh	1bh
35	Homing on index pulse	-	This method is the data set type. Any target position to which the object is moved is set as a home position. (Available only in a servo-on state)	xxh	23h
37		-		xxh	25h
-1	Dog type (Rear-end detection Z-phase reference)	Forward	At the front end of the proximity dog, deceleration starts. After the rear end is passed, the position specified by the first Z-phase signal or the position of the Z-phase signal shifted by the set home position shift distance is set as a home position.	00h	00h
-33		Reverse		10h	00h
-4	Stopper type (Stopper position reference)	Forward	The object is pressed against a mechanical stopper and the position where it is stopped is set as a home position.	03h	00h
-36		Reverse		13h	00h
-5	Home position ignorance (Servo-on position as home position)	-	The current position at servo-on is set as a home position. A home position can be set without switching to the home position return mode (Homing Mode).	04h	00h
-2	Count type (Front-end detection Z-phase reference)	Forward	At the front end of the proximity dog, deceleration starts. After the front end is passed, the position specified by the first Z-phase signal after the set distance or the position of the Z-phase signal shifted by the set home position shift distance is set as a home position.	01h	00h
-34		Reverse		11h	00h
-6	Dog type (Rear-end detection rear-end reference)	Forward	At the front end of the proximity dog, deceleration starts. After the rear end is passed, the position is shifted by the travel distance after the proximity dog and home position shift distance. The position after the shifts is set as a home position.	05h	00h
-38		Reverse		15h	00h

## 5. DRIVING MOTOR

Setting value	Home position return method	Direction of rotation	Description	Home position return parameter	
				Pr. PT04 (__ x x)	Pr. PT45 (__ x x)
-7	Count type (Front-end detection front-end reference)	Forward	At the front end of the proximity dog, deceleration starts. The position is shifted by the travel distance after the proximity dog and home position shift distance. The position after the shifts is set as a home position.	06h	00h
-39		Reverse		16h	00h
-8	Dog cradle type	Forward	The position specified by the first Z-phase signal after the front end of the proximity dog is detected is set as a home position.	07h	00h
-40		Reverse		17h	00h
-9	Dog type last Z-phase reference	Forward	When the front end of the proximity dog is detected, the travel in the reverse direction starts. Then, the position where the first Z-phase signal is detected is set as a home position or the position after a shift by the home position shift distance from the position specified by the first Z-phase signal is set as a home position.	08h	00h
-41		Reverse		18h	00h
-10	Dog type front end reference	Forward	From the front end of the proximity dog, the position is shifted by the travel distance after proximity dog and home position shift distance. The position after the shifts is set as a home position.	09h	00h
-42		Reverse		19h	00h
-11	Dogless Z-phase reference	Forward	The position specified by the first Z-phase signal or position of the first Z-phase signal shifted by the home position shift distance is set as a home position.	0Ah	00h
-43		Reverse		1Ah	00h

### (3) Home position return speed (Homing speed: 6099h)

Address	Name		Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6099h	Homing speed (Home position return speed)	Number of entries (Number of entries)	1 byte	Read/write	5	Impossible
		Speed during search for switch (Home position return speed)	4 bytes			
		Speed during search for zero (Creep speed)	4 bytes			

The current home position return speed can be read using the function code "03h" (Read Holding Registers). At this time, "02h" is returned to Number of entries.

The current home position return speed is returned to Speed during search for switch in units of r/min or mm/s.

The current creep speed is returned to Speed during search for zero in units of r/min or mm/s.

Set a home position return speed using the function code "10h" (Preset Multiple Registers). At this time, write "02h" in Number of entries.

Set a home position return speed in Speed during search for switch in units of r/min or mm/s.

Set a creep speed in Speed during search for zero in units of r/min or mm/s.

## 5. DRIVING MOTOR

---

### (4) Control status (Status word: 6041h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6041h	Status word (Control status)	2 bytes	Read	1	Impossible

The current control status can be checked using the function code "03h" (Read Holding Registers). The bits of this register that relate to the home position return operation are shown below.

Bit	Description
0 to 9	Refer to section 5.1.3.
10	Target reached (Command position reached)
11	Refer to section 5.1.3.
12	Homing attained (Home position return complete)
13	Homing error (Home position return error)
14 to 15	Refer to section 5.1.3.

(a) Bit 10 of the control status (6041h) (Target reached)

Bit 10 turns on (1) when the command position is reached. If bit 8 (Halt) of the control command is set to "1", bit 10 turns on (1) when a deceleration stop is completed.

If a command is input again, bit 10 turns off (0).

(b) Bit 12 of the control status (6041h) (Homing attained)


Bit 12 turns off (0) when a home position return operation is started and turns on (1) when the operation is completed. For absolute position detection system, bit 12 turns on (1) after the power supply is turned on.

(c) Bit 13 of the control status (6041h) (Homing error)

Bit 13 turns on (1) when an alarm or warning ([AL 90.2], [AL 90.3], [AL 90.5], [AL 96.1], [AL 96.2], or [AL 96.3]) occurs during a home position return operation.

## 5. DRIVING MOTOR

### 5.3.4 Directions for use

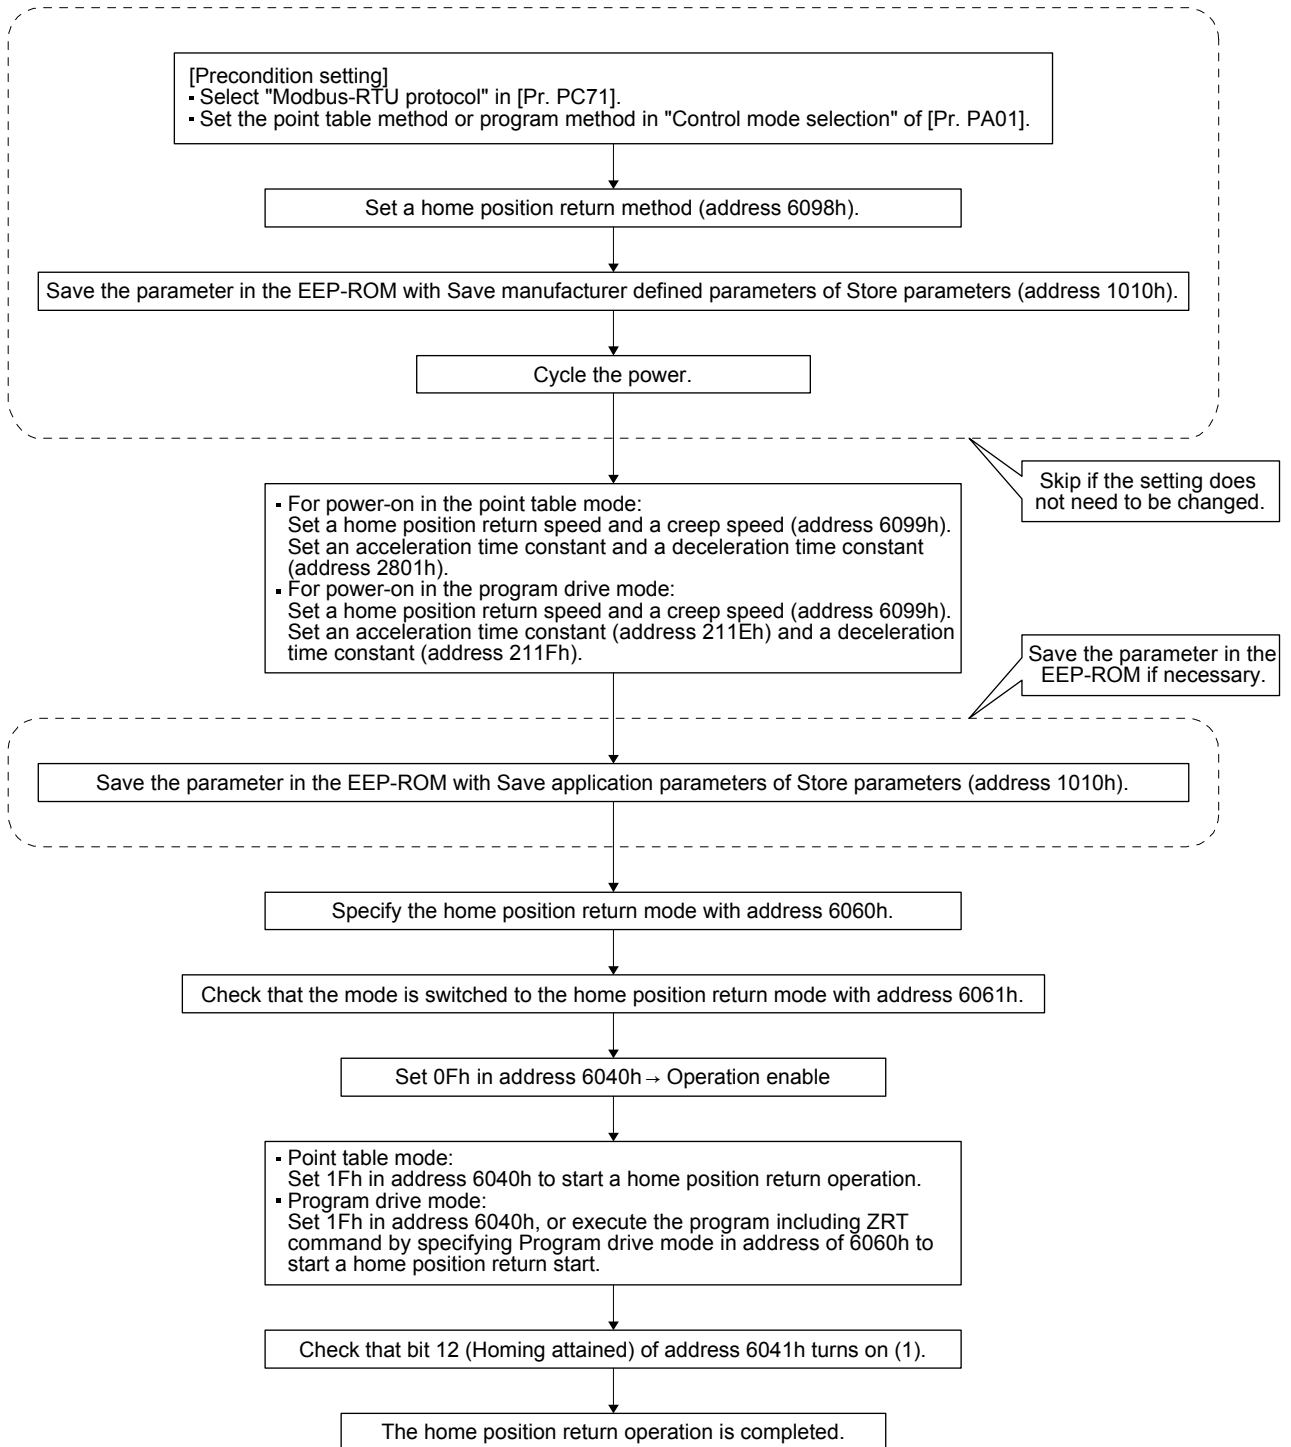

## 5. DRIVING MOTOR


### 5.4 JOG Operation Mode

This section describes how to perform a JOG operation in the Modbus-RTU communication.

#### 5.4.1 Function description

Perform a JOG operation following the instruction below.

After setting the command speed (Profile Velocity: 6081h), acceleration time constant (Profile Acceleration: 6083h), deceleration time constant (Profile Deceleration: 6084h), and software limit (Software Position Limit: 607Dh), start the operation with the control command (Control word: 6040h). The servo motor starts rotating at a specified speed. The current servo motor status can be checked with the control status (Status word: 6041h).

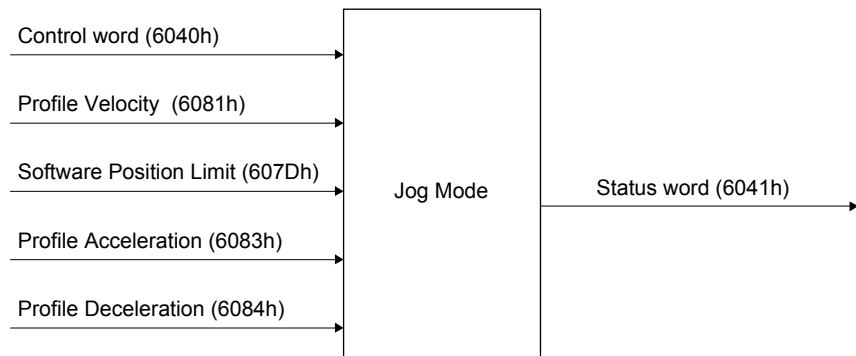

#### 5.4.2 Related registers

Address	Name		Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)		2 bytes	Read/write	1	Impossible
6081h	Profile Velocity (Command speed)		4 bytes	Read/write	2	Impossible
6083h	Profile Acceleration (Acceleration time constant)		4 bytes	Read/write	2	Impossible
6084h	Profile Deceleration (Deceleration time constant)		4 bytes	Read/write	2	Impossible
607Dh	Software Position Limit (Software limit)	Number of entries (Number of entries)	1 byte	Read/write	5	Impossible
		Min Position Limit (Stroke limit -)	4 bytes			
		Max Position Limit (Stroke limit +)	4 bytes			
6041h	Status word (Control status)		2 bytes	Read	1	Impossible



## 5. DRIVING MOTOR

### 5.4.3 Details of registers

#### (1) Control command (Control word: 6040h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible

The current control command input can be checked using the function code "03h" (Read Holding Registers).

A control input can be written using the function code "10h" (Preset Multiple Registers).

The bits of this register that relate to the JOG operation are shown below.

Bit	Description
0 to 3	Refer to section 5.1.3.
4	Rotation Start (Rotation start)
5	Direction (Rotation direction)
6	Reserved (Note)
7	Refer to section 5.1.3.
8	Halt (Stop command)
9 to 15	Refer to section 5.1.3.

Note. The value at reading is undefined. Set "0" at writing.

The servo motor can be started with bit 4 (Rotation Start) of the control command (6040h).

If "1" is set, the servo motor starts rotating. If "0" is set, the servo motor stops.

The rotation direction of the servo motor can be set with bit 5 of (Direction) of the control command (6040h).

The servo motor rotates in the forward direction if "0" is set, and in the reverse direction if "1" is set. If the direction of the rotation is reversed while the servo motor is rotating, the servo motor once stops and then starts rotating in the opposite direction.

Use bit 8 (Halt) of the control command (6040h) to forcibly stop the servo motor.

If "1" is set, a deceleration stop is performed. If "0" is set, the operation resumes.

#### (2) Command speed (Profile Velocity: 6081h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6081h	Profile Velocity (Command speed)	4 bytes	Read/write	2	Impossible

The current speed command value can be read using the function code "03h" (Read Holding Registers).

A speed command value can be set using the function code "10h" (Preset Multiple Registers). Set a value in units of r/min or mm/s.

#### (3) Acceleration time constant (Profile Acceleration: 6083h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6083h	Profile Acceleration (Acceleration time constant)	4 bytes	Read/write	2	Impossible

The current acceleration time constant can be read using the function code "03h" (Read Holding Registers).

An acceleration time constant can be set using the function code "10h" (Preset Multiple Registers). Set the length of time until the servo motor accelerates to the rated speed in units of ms.

## 5. DRIVING MOTOR

### (4) Deceleration time constant (Profile Deceleration: 6084h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6084h	Profile Deceleration (Deceleration time constant)	4 bytes	Read/write	2	Impossible

The current deceleration time constant can be read using the function code "03h" (Read Holding Registers).

A deceleration time constant can be set using the function code "10h" (Preset Multiple Registers). Set the length of time until the servo motor decelerates from the rated speed to a stop in units of ms.

### (5) Software limit (Software Position Limit: 607Dh)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
607Dh	Software Position Limit (Software limit)	Number of entries (Number of entries)	1 byte	Read/write	5	Impossible
		Min Position Limit (Stroke limit -)	4 bytes			
		Max Position Limit (Stroke limit +)	4 bytes			

The current software limit setting value can be read using the function code "03h" (Read Holding Registers).

At this time, "02h" is returned to Number of entries.

The stroke limit value in the reverse direction is returned to Min Position Limit (stroke limit -) in units of commands.

The stroke limit value in the forward direction is returned to Max Position Limit (stroke limit +) in units of commands.

The current software limit setting can be written using the function code "10h" (Preset Multiple Registers).

At this time, set "02h" for Number of entries.

Set the stroke limit value in the reverse direction in Min Position Limit (stroke limit -) in units of commands.

Set the stroke limit value in the forward direction in Max Position Limit (stroke limit +) in units of commands.

If Min Position Limit (stroke limit -) and Max Position Limit (stroke limit +) are set to the same value, the software limit function is disabled.

## 5. DRIVING MOTOR

---

### (6) Control status (Status word: 6041h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6041h	Status word (Control status)	2 bytes	Read	1	Impossible

The current control status can be checked using the function code "03h" (Read Holding Registers). The bits of this register that relate to the JOG operation are shown below.

Bit	Description
0 to 9	Refer to section 5.1.3.
10	Target reached (Command position reached)
11	Refer to section 5.1.3.
12 to 13	Reserved (Note)
14 to 15	Refer to section 5.1.3.


Note. The value at reading is undefined.

During a JOG operation, "0" is returned to bit 10 (Target reached) of the control status (6041h). While the servo motor is being stopped, "1" is returned.

If bit 8 (Halt) of the control command (6040h) is set to "1", bit 10 turns on (1) when a deceleration stop is completed.

## 5. DRIVING MOTOR

### 5.4.4 Directions for use

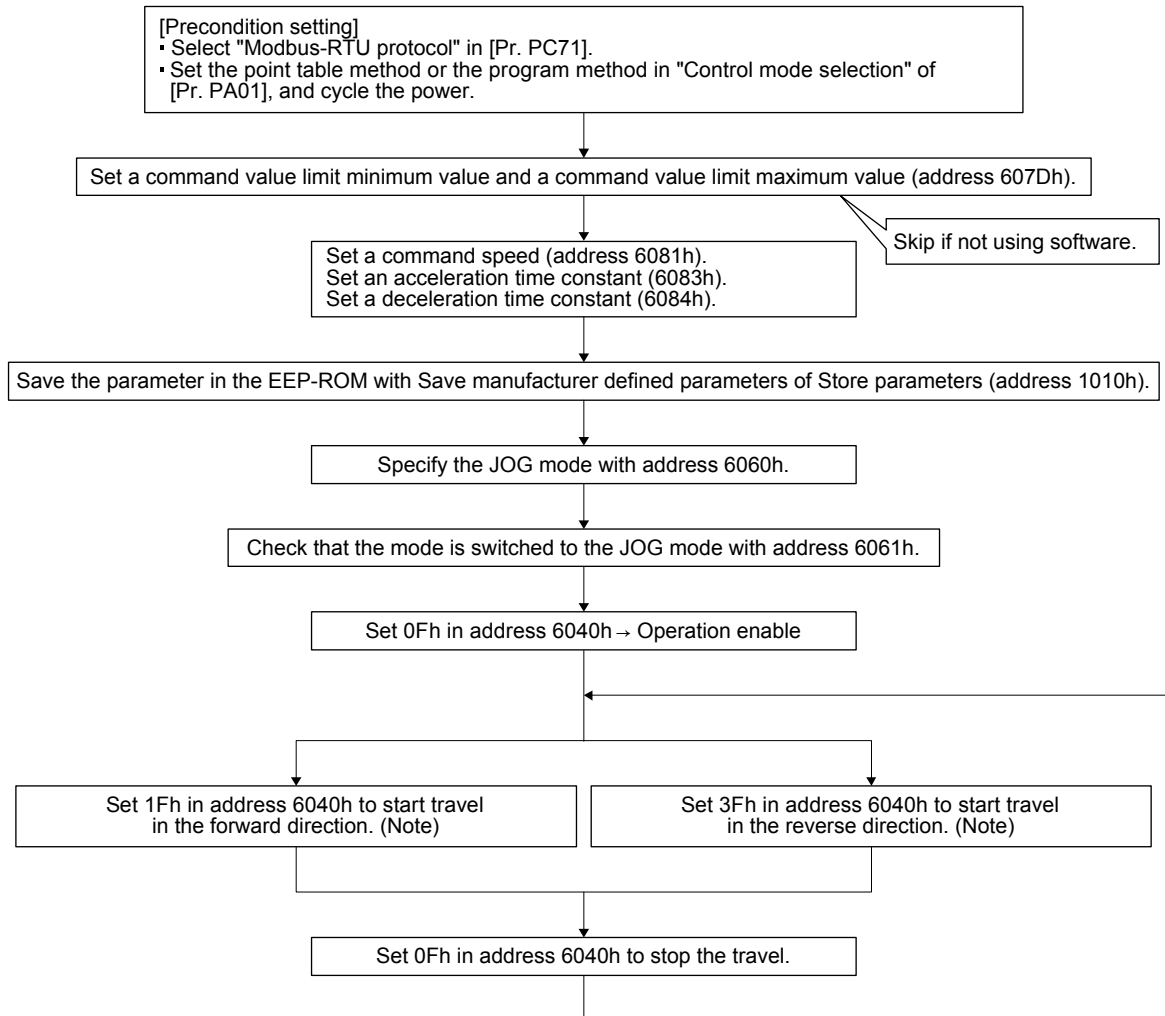

Note. [The operations are performed when [Pr. PT01] (address 2481h) is set to "\_\_\_1" (incremental value command method). When [Pr. PT01] (address 2481h) is set to "\_\_\_0" (absolute value command method), setting 1Fh in address 6040h starts travel to the target position.

## 5. DRIVING MOTOR


### 5.5 Point Table Operation Mode

This section describes how to perform a point table data operation.

#### 5.5.1 Function description

Perform a point table data operation following the instruction below.

After setting the point table (Point Table: 2801h to 28FFh), point table specification (Target Point Table: 2D60h), and Software Position Limit (607Dh), start the operation with the control command (Control word: 6040h). The point table operation is performed. During a point table operation, the current status can be acquired with the control status (Status word: 6041h), the point table number used for the current operation can be acquired with the point table request (Point Demand Value: 2D68h), and the latest point number on which the operation is completed can be acquired with the current point table (Point Actual Value: 2D69h).

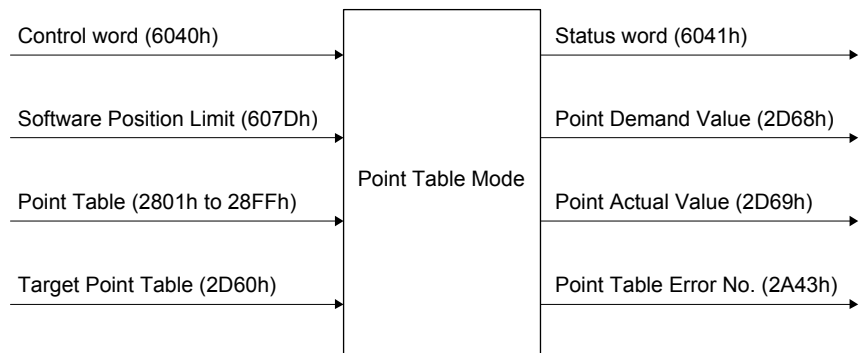

#### 5.5.2 Related registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible
607Dh	Software Position Limit (Software limit)	Number of entries (Number of entries)	Read/write	5	Impossible
		Min Position Limit (Stroke limit -)			
		Max Position Limit (Stroke limit +)			
2801h to 28FFh	Point Table No. 1 to No. 255 (Point table No. 1 to No. 255)	Number of entries (Number of entries)	Read/write	9	Impossible
		Point data (Position data)			
		Speed (Speed data)			
		Acceleration (Acceleration time constant)			
		Deceleration (Deceleration time constant)			
		Dwell (Dwell)			
		Sub function (Sub function)			
		M code (M code)			
2D60h	Target Point Table (Point table specification)	2 bytes	Read/write	1	Impossible
6041h	Status word (Control status)	2 bytes	Read/write	1	Impossible
2D68h	Point Demand Value (Point table request)	2 bytes	Read/write	1	Impossible
2D69h	Point Actual Value (Current point table)	2 bytes	Read/write	1	Impossible
2A43h	Point Table error No. (Point table error number)	Number of entries (Number of entries)	Read	4	Impossible
		Point Table Error No. (Point table error number)			
		Point Table Error Factor (Point table error factor)			

## 5. DRIVING MOTOR

### 5.5.3 Details of registers

#### (1) Control command (Control word: 6040h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible

The current control input command status can be checked using the function code "03h" (Read Holding Registers).

A control command can be written using the function code "10h" (Preset Multiple Registers).

The bits of this register that relate to the point table operation are shown below.

Bit	Description
0 to 3	Refer to section 5.1.3.
4	New Set Point (Positioning command change)
5	Direction (Rotation direction)
6	Reserved (Note)
7	Refer to section 5.1.3.
8	Halt (Stop command)
9 to 15	Refer to section 5.1.3.

Note. The value at reading is undefined. Set "0" at writing.

Use bit 4 (New Set Point) of the control command (6040h) to apply point table data.

If "1" is set, new point table data is applied. To restart the operation after the servo motor is stopped, set "0" before setting "1" again.

For [Pr. PT01] (address 2481h) = "\_\_\_ 1" (incremental value command method), the rotation direction of the servo motor can be set with bit 5 of (Direction) of the control command (6040h).

The servo motor rotates in the forward direction if "0" is set, and in the reverse direction if "1" is set. If the direction of the rotation is reversed while the servo motor is rotating, the servo motor once stops and then starts rotating in the opposite direction.

Use bit 8 (Halt) of the control command (6040h) to forcibly stop the servo motor.

If "1" is set, a deceleration stop is performed. If "0" is set, the operation resumes.

#### (2) Software limit (Software Position Limit: 607Dh)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
607Dh	Software Position Limit (Software limit)	Number of entries (Number of entries)	1 byte	5	Impossible
		Min Position Limit (Stroke limit -)	4 bytes		
		Max Position Limit (Stroke limit +)	4 bytes		

The current software limit setting value can be read using the function code "03h" (Read Holding Registers).

At this time, "02h" is returned to Number of entries.

The stroke limit value in the reverse direction is returned to Min Position Limit (stroke limit -) in units of commands.

The stroke limit value in the forward direction is returned to Max Position Limit (stroke limit +) in units of commands.

## 5. DRIVING MOTOR

The current software limit setting can be written using the function code "10h" (Preset Multiple Registers).

At this time, set "02h" for Number of entries.

Set the stroke limit value in the reverse direction in Min Position Limit (stroke limit -) in units of commands.

Set the stroke limit value in the forward direction in Max Position Limit (stroke limit +) in units of commands.

If Min Position Limit (stroke limit -) and Max Position Limit (stroke limit +) are set to the same value, the software limit function is disabled.

### (3) Point table setting (Point Table No. 1 to No. 255: 2801h to 28FFh)

For the setting method, refer to Section 4.4.

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2801h to 28FFh	Number of entries (Number of entries)	1 byte	Read/write	9	Impossible
	Point data (Position data)	4 bytes			
	Speed (Speed data)	2 bytes			
	Acceleration (Acceleration time constant)	2 bytes			
	Deceleration (Deceleration time constant)	2 bytes			
	Dwell (Dwell)	2 bytes			
	Sub function (Sub function)	1 byte			
	M code (M code)	1 byte			

### (4) Point table specification (Target Point Table: 2D60h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D60h	Target Point Table (Point table specification)	2 bytes	Read/write	1	Impossible

The point table specification number can be read using the function code "03h" (Read Holding Registers).

A point table specification number can be set using the function code "10h" (Preset Multiple Registers).

### (5) Control status (Status word: 6041h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6041h	Status word (Control status)	2 bytes	Read/write	1	Impossible

The current point table operation status can be read using the function code "03h" (Read Holding Registers).

The bits of this register that relate to the point table operation are shown below.

Bit	Description
0 to 9	Refer to section 5.1.3.
10	Target reached (Command position reached)
11	Refer to section 5.1.3.
12	Set Point Acknowledge (Positioning command change accepted)
13	Reserved (Note)
14 to 15	Refer to section 5.1.3.

Note. The value at reading is undefined. Set "0" at writing.

## 5. DRIVING MOTOR

(a) Bit 10 of the control status (6041h) (Target reached)

Bit 10 turns on (1) when the command position is reached. If bit 8 (Halt) of the control command is set to "1", bit 10 turns on (1) when a deceleration stop is completed.

If a command is input again, bit 10 turns off (0).

(b) Bit 12 (Set Point Acknowledge) of the control status (6041h)

When bit 4 of the control command (6040h) is set to "1" and the servo amplifier completes accepting the command, bit 12 turns on (1).

(6) Point table request (Point Demand Value: 2D68h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D68h	Point Demand Value (Point table request)	2 bytes	Read/write	1	Impossible

The currently commanded point table number can be read using the function code "03h" (Read Holding Registers).

While the servo motor is being stopped, the value of the point table specification (Target Point Table: 2D60h) is returned.

(7) Current point table (Point Actual Value: 2D69h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D69h	Point Actual Value (Current point table)	2 bytes	Read/write	1	Impossible

The point table number on which the operation is already completed is read using the function code "03h" (Read Holding Registers).

When a home position return operation is completed, "0" is returned.

(8) Point table error number (Point Table Error: 2A43h)

When a point table setting error occurs, the point table number and setting item that have caused the error are returned. For the reading method, refer to Section 4.13.


Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
2A43h	Point Table error No. (Point table error number)	Number of entries (Number of entries)	Read	4	Impossible	
		Point Table Error No. (Point table error number)				1 byte
		Point Table Error Factor (Point table error factor)				2 bytes
		Point Table Error Factor (Point table error factor)		4 bytes		



## 5. DRIVING MOTOR


### 5.5.4 Directions for use

#### (1) For operation that uses point table data saved in the EEPROM

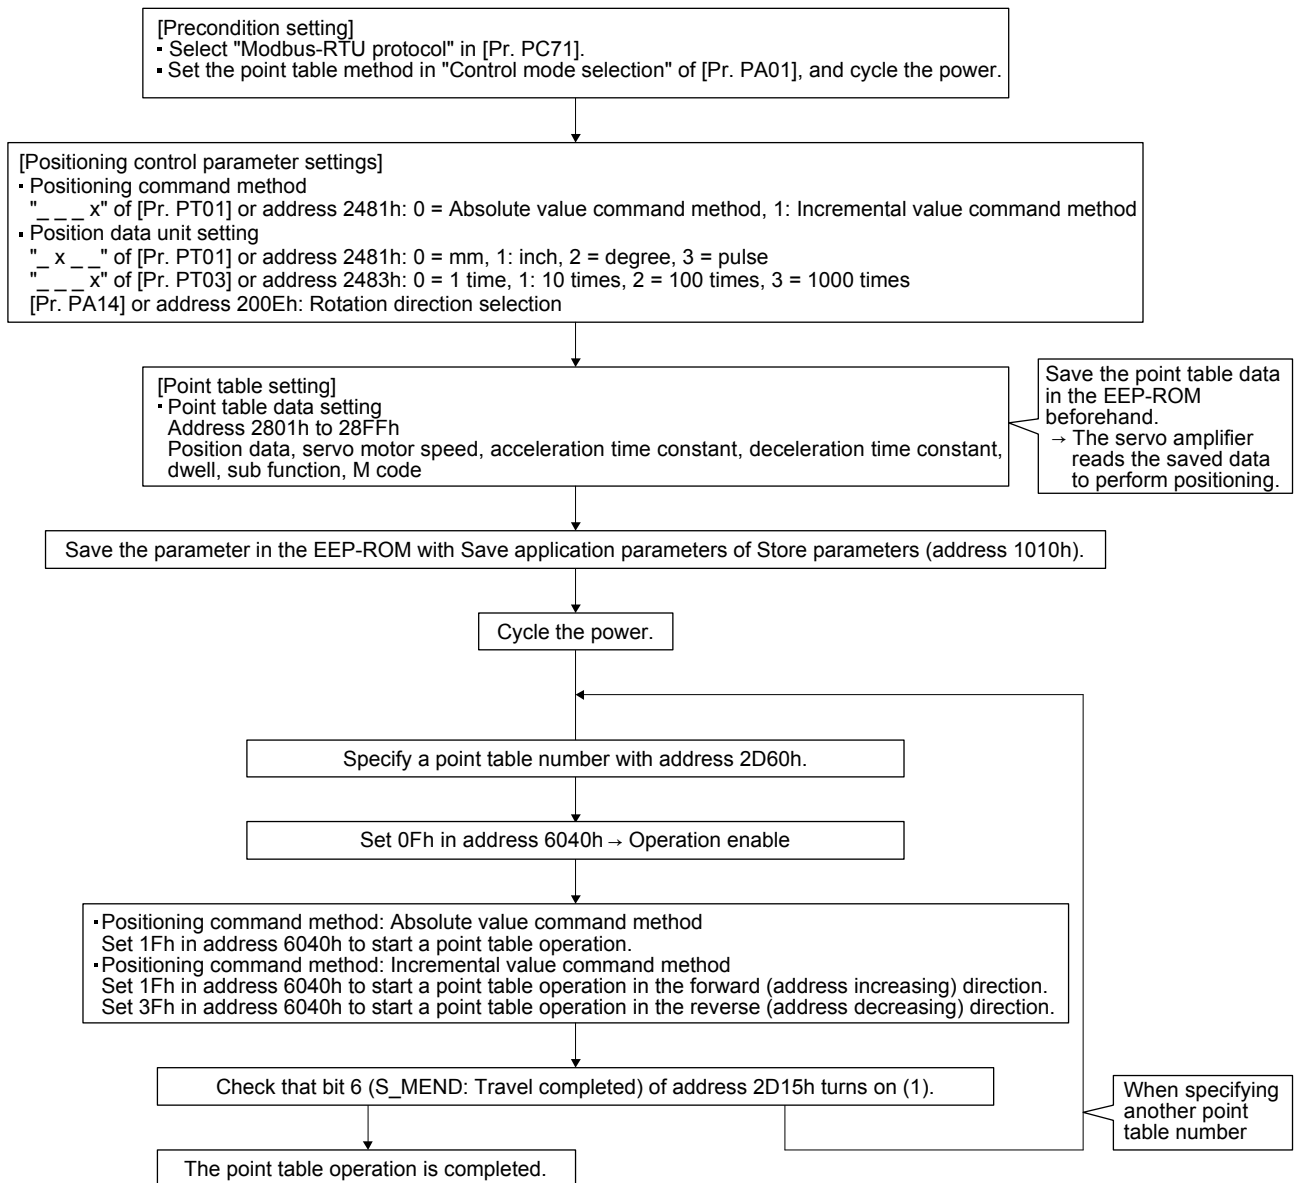

## 5. DRIVING MOTOR

- (2) For operation that uses point table data sequentially sent to the servo amplifier (Method of saving point table data in RAM)

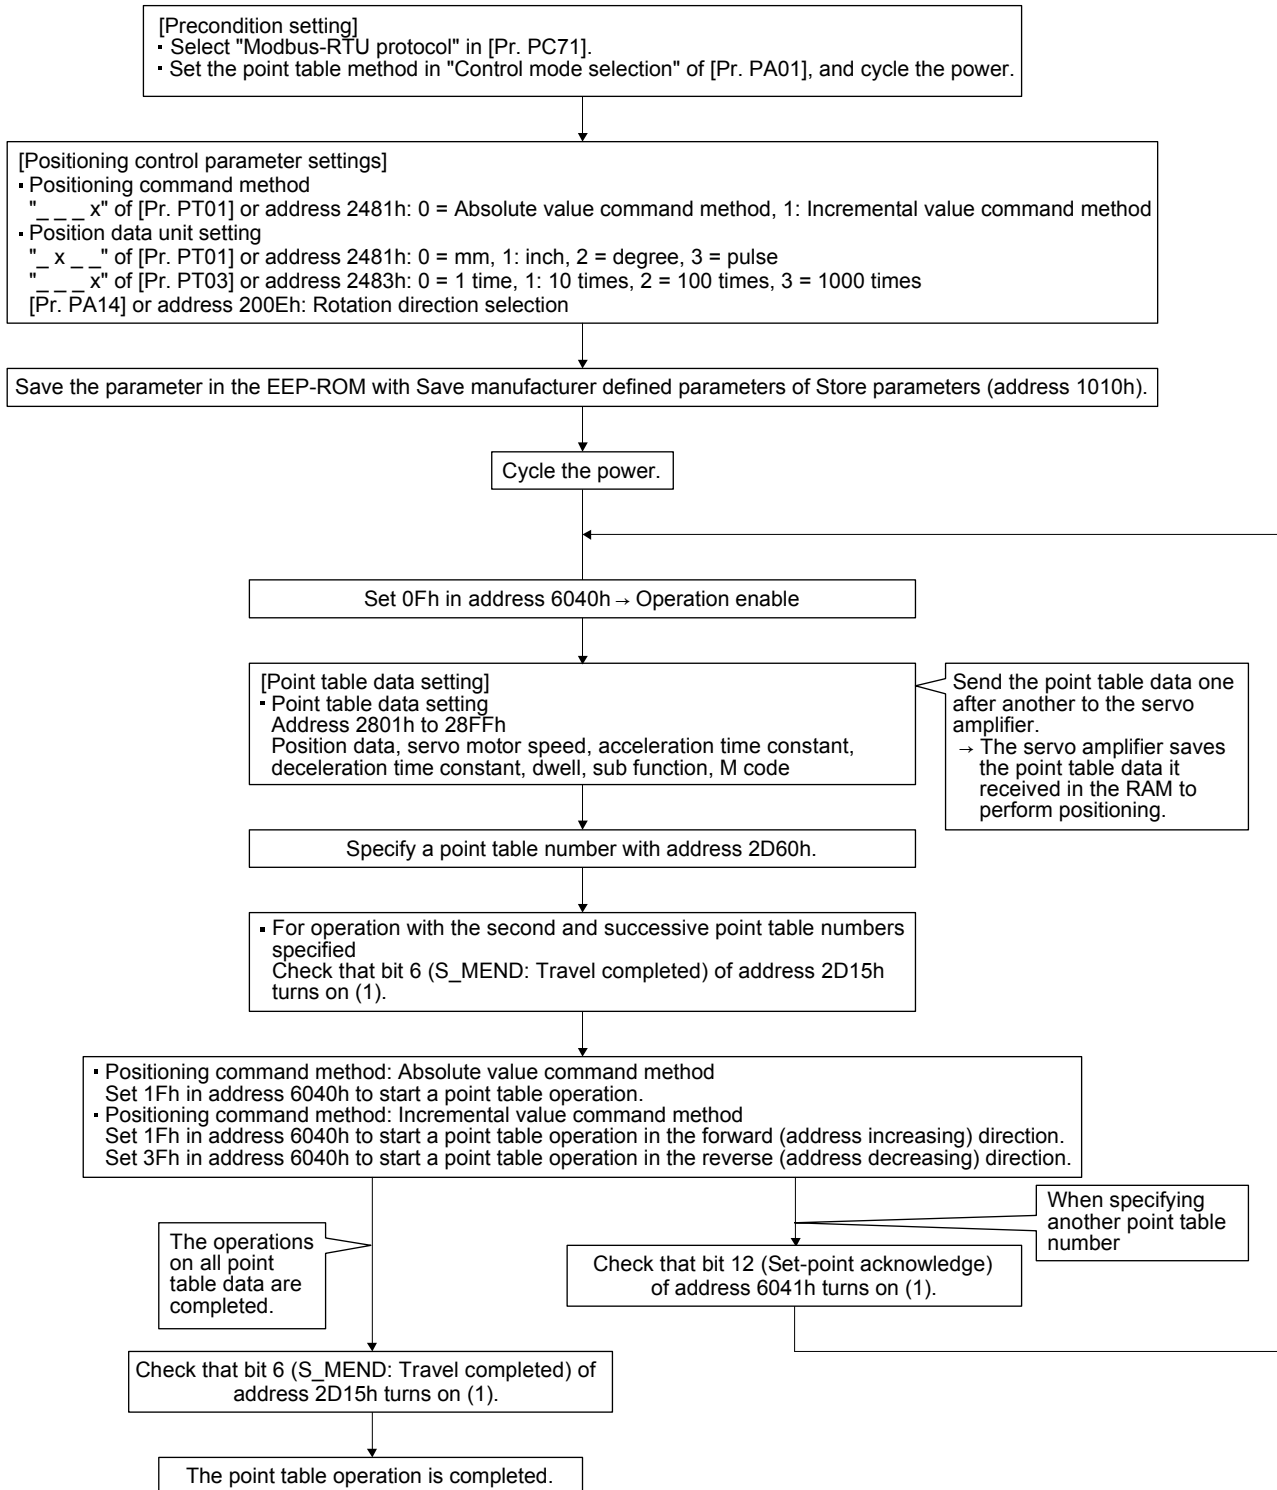

## 5. DRIVING MOTOR

### 5.6 Program Operation Mode


This section describes how to perform a program operation.

#### 5.6.1 Function description

Set a program beforehand, and then set a program number in the program number specification (Target Program No.: 2D70h) and start the operation with the control command (Control word: 6040h). The specified program starts running.

The current status can be checked with the control status (Status word: 6041h).

The currently running program number can be read with the program number request (Program No. Demand Value: 2D78h). The current step number can be read with the program step number (Program Step No.: 2D79h).

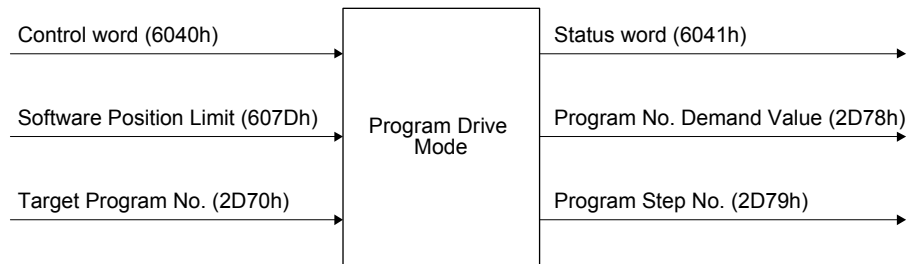

#### 5.6.2 Related registers

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible	
607Dh	Software Position Limit (Software limit)	Number of entries (Number of entries)	1 byte	Read/write	5	Impossible
		Min Position Limit (Stroke limit -)	4 bytes			
		Max Position Limit (Stroke limit +)	4 bytes			
2D70h	Target Program No. (Program number specification)	2 bytes	Read	1	Impossible	
6041h	Status word (Control status)	2 bytes	Read	1	Impossible	
2D78h	Program No. Demand Value (Program number request)	2 bytes	Read	1	Impossible	
2D79h	Program Step No. (Program step number)	2 bytes	Read	1	Impossible	

## 5. DRIVING MOTOR

### 5.6.3 Details of registers

#### (1) Control command (Control word: 6040h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6040h	Control word (Control command)	2 bytes	Read/write	1	Impossible

The current control input command status can be checked using the function code "03h" (Read Holding Registers).

A control command can be written using the function code "10h" (Preset Multiple Registers).

The bits of this register that relate to the program operation are shown below.

Bit	Description
0 to 3	Refer to section 5.1.3.
4	New Set Program (Program operation command change)
5	Reserved (Note)
6	Stop (Program operation mode end applied)
7	Refer to section 5.1.3.
8	Halt (Stop command)
9 to 15	Refer to section 5.1.3.

Note. The value at reading is undefined. Set "0" at writing.

Use bit 4 (New Set Program) of the control command (6040h) to start a program operation.

When the bit is set to "1", the specified program number setting takes effect. To restart the operation after the servo motor is stopped, set "0" before setting "1" again.

If "1" is set to bit 6 (Stop) of the control command (6040h), the program ends during the processing.

Use bit 8 (Halt) of the control command (6040h) to forcibly stop the servo motor.

If "1" is set, a deceleration stop is performed. If "0" is set, the operation resumes. However, a deceleration stop is not performed when the ZRT command is executed.

#### (2) Software limit (Software Position Limit: 607Dh)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write	
607Dh	Software Position Limit (Software limit)	Number of entries (Number of entries)	1 byte	Read/write	5	Impossible
		Min Position Limit (Stroke limit -)	4 bytes			
		Max Position Limit (Stroke limit +)	4 bytes			

The current software limit setting value can be read using the function code "03h" (Read Holding Registers).

At this time, "02h" is returned to Number of entries.

The stroke limit value in the reverse direction is returned to Min Position Limit (stroke limit -) in units of commands.

The stroke limit value in the forward direction is returned to Max Position Limit (stroke limit +) in units of commands.

## 5. DRIVING MOTOR

The current software limit setting can be written using the function code "10h" (Preset Multiple Registers).

At this time, set "02h" for Number of entries.

Set the stroke limit value in the reverse direction in Min Position Limit (stroke limit -) in units of commands.

Set the stroke limit value in the forward direction in Max Position Limit (stroke limit +) in units of commands.

If Min Position Limit (stroke limit -) and Max Position Limit (stroke limit +) are set to the same value, the software limit function is disabled.

### (3) Program number specification (Target Program No.: 2D70h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D70h	Target Program No. (Program number specification)	2 bytes	Read	1	Impossible

The currently specified program number can be read using the function code "03h" (Read Holding Registers).

A program number can be set using the function code "10h" (Preset Multiple Registers).

### (4) Control status (Status word: 6041h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
6041h	Status word (Control status)	2 bytes	Read	1	Impossible

The current program operation status can be read using the function code "03h" (Read Holding Registers).

The bits of this register that relate to the program operation are shown below.

Bit	Description
0 to 9	Refer to section 5.1.3.
10	Target reached (Command position reached)
11	Refer to section 5.1.3.
12	Program Running (in program operation)
13	Reserved (Note)
14 to 15	Refer to section 5.1.3.

Note. The value at reading is undefined.

#### (a) Bit 10 of the control status (6041h) (Target reached)

Bit 10 turns on (0) when the start signal turns on. Bit 10 turns on (1) when the command position is reached. If bit 8 (Halt) of the control command is set to "1", bit 10 turns on (1) when a deceleration stop is completed.

#### (b) Bit 12 (Program Running) of the control status (6041h)

During a program operation, bit 12 is on (1). When the program stops running or has ended, the bit turns off (0).

## 5. DRIVING MOTOR

### (5) Program number request (Program No. Demand Value: 2D78h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D78h	Program No. Demand Value (Program number request)	2 bytes	Read	1	Impossible

The currently commanded program number can be read using the function code "03h" (Read Holding Registers).

While the servo motor is being stopped, the value set for the program number specification (Target Program No.: 2D70h) is returned.


### (6) Program step number (Program Step No.: 2D79h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D79h	Program Step No. (Program step number)	2 bytes	Read	1	Impossible

The currently running program step number can be read using the function code "03h" (Read Holding Registers).

While no program is running, "0" is returned.

#### 5.6.4 Directions for use

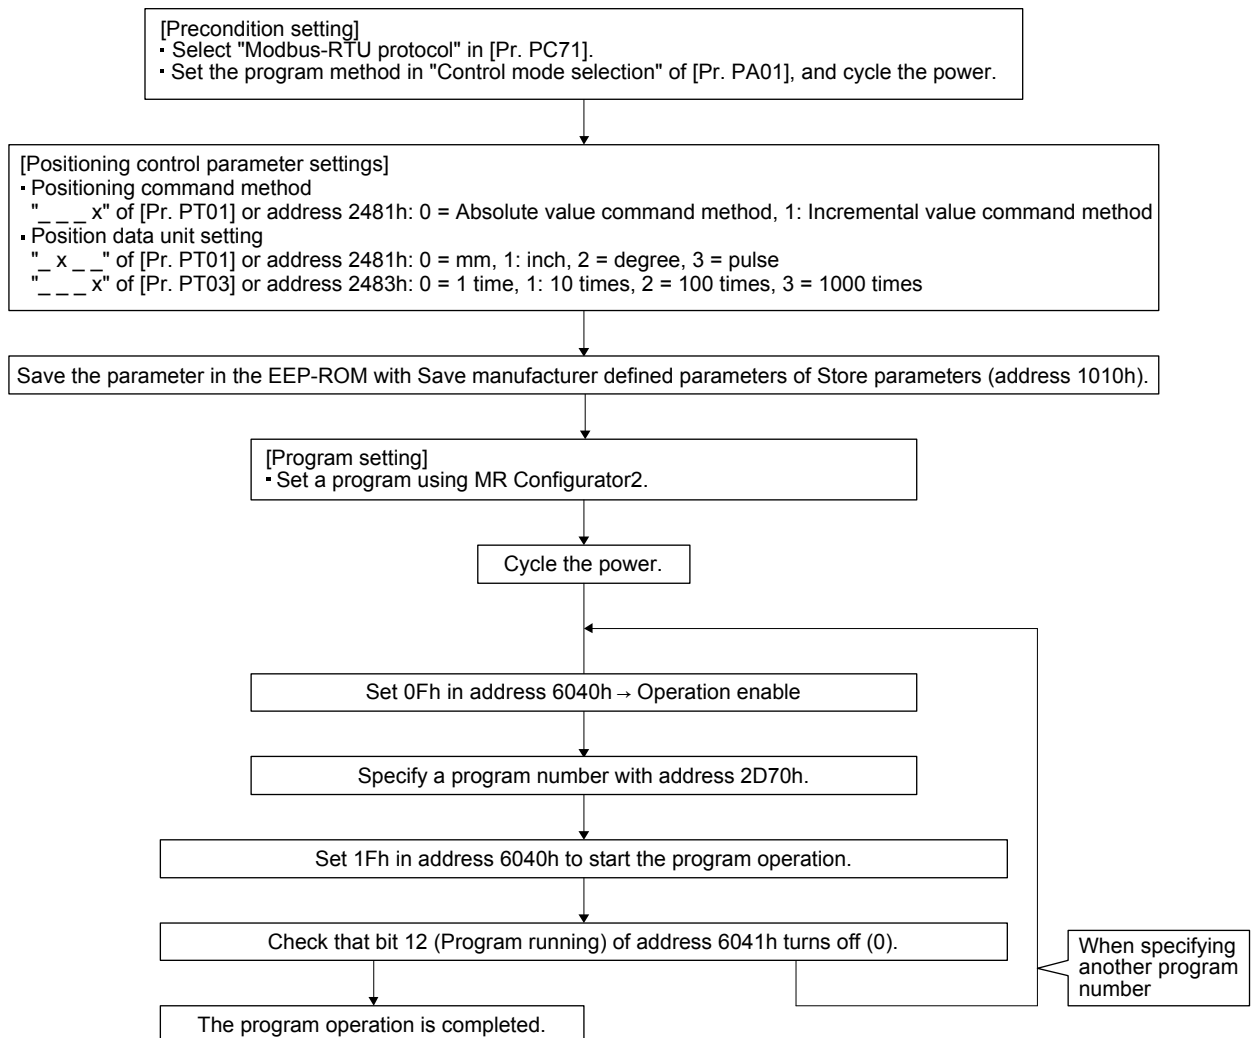

## 5. DRIVING MOTOR


### 5.7 Touch Probe (Address: 60B8h to 60BBh)

The current position latch data at the time of MSD (Mark detection) input can be read.

#### 5.7.1 Function description

When the touch probe function (60B8h) is set, and MSD (Mark detection), an external signal, is turned on/off, the current position at the rising and falling edges are latched.

The latch status of the current position data can be checked with the touch probe status (60B9h). The latched current data can be read with the touch probe position positive value (60BAh) and the touch probe position negative value (60BBh).

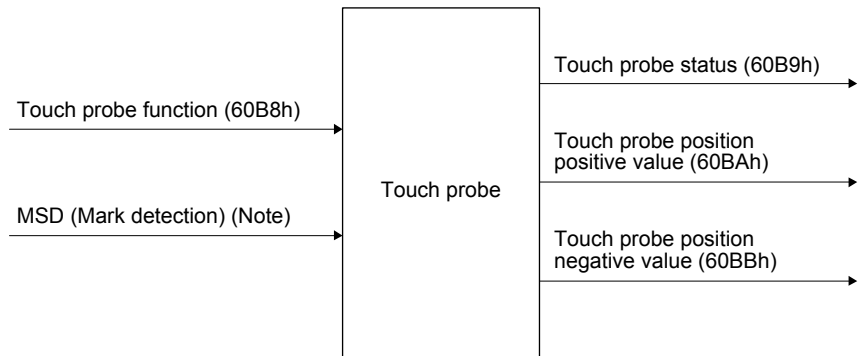

Note. Input by an external signal.

#### 5.7.2 List of registers

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
60B8h	Touch probe function (touch probe function setting)	2 bytes	Read/write	1	Possible
60B9h	Touch probe status (touch probe function status)	2 bytes	Read	1	Possible
60BAh	Touch probe position positive value (rising edge position of touch probe)	4 bytes	Read	2	Possible
60BBh	Touch probe position negative value (falling edge position of touch probe)	4 bytes	Read	2	Possible

## 5. DRIVING MOTOR

### 5.7.3 Details of registers

#### (1) Touch probe function setting (Touch probe function: 60B8h)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
60B8h	Touch probe function (touch probe function setting)	2 bytes	Read/write	1	Possible

The current setting of the touch probe function can be checked using function code "03h" (Read Holding Registers).

The touch probe function is set using function code "10h" (Preset Multiple Registers). The following table lists the setting of this register.

Bit	Description
0	0: Latch function disabled 1: Latch function enabled
1	0: Latch with the first trigger 1: Continuously latch with trigger inputs
2	The value at reading is undefined. Set "0" when writing.
3	
4	0: Stop sampling at the rising edge of touch probe 1: Start sampling at the rising edge of touch probe
5	0: Stop sampling at the falling edge of touch probe 1: Start sampling at the falling edge of touch probe
6 to 15	The value at reading is undefined. Set "0" when writing.

Select enable/disable for the latch function with bit 0. Select "1" when using the touch probe function. Select a trigger condition for the touch probe function with bit 1. Set "0" to latch just once when MSD (Mark detection) is input. Set "1" to latch every time MSD (Mark detection) is input.

Set a condition for the rising edge of the MSD (Mark detection) with bit 4. Set "1" to latch at the rising edge.

Set a condition for the falling edge of the MSD (Mark detection) with bit 5. Set "1" to latch at the falling edge.



## 5. DRIVING MOTOR

### (2) Status of the touch probe function (Touch probe status: 60B9h)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
60B9h	Touch probe status (touch probe function status)	2 bytes	Read	1	Possible

The current status of the touch probe function can be checked using function code "03h" (Read Holding Registers). The following table lists the setting of this register.

Bit	Description
0	0: Latch function of touch probe is disabled. 1: Latch function of touch probe is enabled.
1	0: Latch is incomplete at the rising edge with the latch function of the touch probe. 1: Latch is complete at the rising edge with the latch function of the touch probe.
2	0: Latch is incomplete at the falling edge with the latch function of the touch probe. 1: Latch is complete at the falling edge with the latch function of the touch probe.
3 to 5	The value at reading is undefined.
6	MSDH (Latch completed at rising edge of Mark detection) status 0: Latch is incomplete at the rising edge with the latch function of the touch probe. 1: Latch is complete at the rising edge with the latch function of the touch probe.
7	MSDL (Latch completed at falling edge of Mark detection) status 0: Latch is incomplete at the falling edge with the latch function of the touch probe. 1: Latch is complete at the falling edge with the latch function of the touch probe.
8 to 15	The value at reading is undefined.

Bit 0 indicates the status of the touch probe function. 0 indicates disabled, and 1 enabled.

With bit 1, if the data is latched at the rising edge of the touch probe can be checked. Latched data can be read when this bit is set to "1". When this bit turns on, it remains on until bit 4 of the touch probe setting (60B8h) is set to "0".

With bit 2, if the data is latched at the falling edge of the touch probe can be checked. Latched data can be read when this bit is set to "1". When this bit turns on, it remains on until bit 5 of the touch probe setting (60B8h) is set to "0".

Bit 6 indicates the status of MSDH (Latch completed at rising edge of Mark detection). When bit 0 is set to "1" and bit 6 is set to "1", the position of the touch probe rising edge is updated.

Bit 7 indicates the status of MSDH (Latch completed at falling edge of Mark detection). When bit 0 is set to "1" and bit 7 is set to "1", the position of the touch probe falling edge is updated.

### (3) Rising edge position of touch probe (Touch probe position positive value: 60BAh)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
60BAh	Touch probe position positive value (rising edge position of touch probe)	4 bytes	Read	2	Possible

The current position of the touch probe rising edge can be checked using function code "03h" (Read Holding Registers).

## 5. DRIVING MOTOR

---

(4) Falling edge position of touch probe (Touch probe position negative value: 60BBh)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
60BBh	Touch probe position negative value (falling edge position of touch probe)	4 bytes	Read	2	Possible

The current position of the touch probe falling edge can be checked using function code "03h" (Read Holding Registers).


### 5.7.4 Directions for use

The following explains for latching the current position at the rising edge of MSD (Mark detection).

- (1) Set "13h" to the touch probe setting (Touch probe function: 60B8h) to store data at rising edge of MSD (Mark detection).
- (2) At this time, the touch probe status (Touch probe status: 60B9h) is set to "0001h", and the latched data has not been stored yet.
- (3) Turn on MSD (Mark detection) with an external signal.
- (4) The touch probe status (Touch probe status: 60B9h) changes to "0043h", and the current position at the time of MSD (Mark detection) on will be stored to the rising edge position of touch probe (Touch probe position positive value: 60BAh).
- (5) Turn off MSD (Mark detection) with an external signal.
- (6) The touch probe status (Touch probe status: 60B9h) changes to "0083h", and the current position at the time of MSD (Mark detection) off will not be stored to the falling edge position of touch probe (Touch probe position negative value: 60BBh).
- (7) Latching can be continued from (3).

# 5. DRIVING MOTOR

The following shows a timing chart.

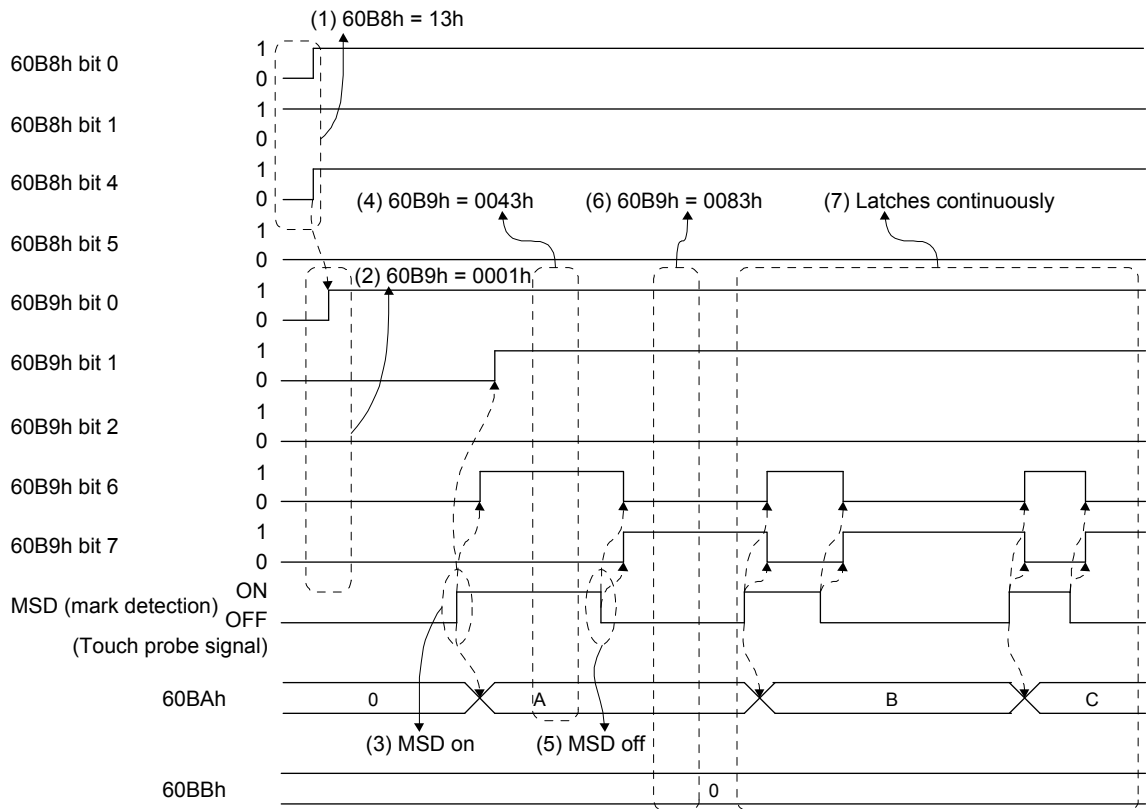

## 5. DRIVING MOTOR

### 5.8 Function common to the modes

This section describes the registers that can be used for the home position return mode, JOG mode, point table mode, and program operation mode.

#### 5.8.1 List of registers

Function	Description	Read/write	Detailed explanation
Control input (2D01h to 2D09h)	The control input of the servo amplifier can be specified.	Read/write	Section 5.8.2
Control output (2D11h to 2D19h)	The control output status of the servo amplifier can be read.	Read	Section 5.8.3
Simultaneous start bit setting (2D9Ah)	Bit 4 of the control command (Control word: 6040h) can be set.	Writing	Section 5.8.4
Controller force stop (2D9Bh)	The controller force stop can be specified.	Writing	Section 5.8.5
Override (2DB0h)	An override value can be set.	Read/write	Section 5.8.6
Forward torque limit value (60E0h)	The torque limit value for the forward operation can be set.	Read/write	Section 5.8.7
Reverse torque limit value (60E1h)	The torque limit value for the reverse operation can be set.	Read/write	Section 5.8.8
Current position (6064h)	The current position can be read.	Read	Section 5.8.9
Current speed (606Ch)	The current speed can be read.	Read	Section 5.8.10
Current torque (6077h)	The current torque can be read.	Read	Section 5.8.11
Cam number setting (2D80h)	A cam number can be set.	Read/write	Section 5.8.12
Current cam number (2D82h)	The cam number being used in the cam control operation can be read.	Read	Section 5.8.13
Cam axis one-cycle length setting (2D84h)	One-cycle length of a cam axis can be written in the RAM space in the servo amplifier.	Writing	Section 5.8.14
Cam stroke length setting (2D85h)	The cam stroke length can be written in the RAM space in the servo amplifier.	Writing	Section 5.8.15
Cam data write (2D88h, 2D89h, 2D8Bh)	Cam data can be written in the RAM space in the servo amplifier.	Read/write	(Note)

Note. For details, contact your local sales office.

#### 5.8.2 Control input (2D01h to 2D09h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D01h to 2D09h	Control DI1 to Control DI9 (Control input)	2 bytes	Read/write	1	Possible

The input device status (ON or OFF) can be read using the function code "03h" (Read Holding Registers). Input devices can be turned on or off using the function code "10h" (Preset Multiple Registers).

## 5. DRIVING MOTOR

The following table lists readable and writable input devices.

Bit definition of control DI1

Bit	Abbreviation	Description						
0	C_EM1/2	Forced stop 1/2						
1		The value at reading is undefined. Set "0" at writing.						
2								
3								
4	C_CDP		Gain switching					
5	C_CLD	Fully closed loop selection						
6		The value at reading is undefined. Set "0" at writing.						
7								
8	C_TL1	<p>Internal torque limit selection The smallest value among Object 60E0h/60E1h and the torque limits in the table below is applied as the torque limit value.</p> <table border="1"> <thead> <tr> <th>Bit 8</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Parameter 1</td> </tr> <tr> <td>1</td> <td>Parameter 1 and 2</td> </tr> </tbody> </table> <p>Parameter 1: [Pr. PA11], [Pr. PA12] Parameter 2: [Pr. PA35]</p>	Bit 8	Description	0	Parameter 1	1	Parameter 1 and 2
Bit 8	Description							
0	Parameter 1							
1	Parameter 1 and 2							
9		The value at reading is undefined. Set "0" at writing.						
10								
11								
12								
13								
14								
15								

Bit definition of control DI2

Bit	Abbreviation	Description
0		The value at reading is undefined. Set "0" at writing.
1		
2		
3		
4		The value at reading is undefined. Set "0" at writing.
5	C_CAMC	
6		The value at reading is undefined. Set "0" at writing.
7		
8	C_PC	Proportional control
9		The value at reading is undefined. Set "0" at writing.
10		
11	C_CLTC (Note)	Clutch command
12		The value at reading is undefined. Set "0" at writing.
13	C_CPCD (Note)	Cam position compensation requirement
14		The value at reading is undefined. Set "0" at writing.
15		

Note. This is available with servo amplifiers with software version C1 or later.

## 5. DRIVING MOTOR

---

Bit definition of control DI3

Bit	Abbreviation	Description
0		The value at reading is undefined. Set "0" at writing.
1		
2	C_CM1	Electronic gear selection 1
3	C_CM2	Electronic gear selection 2
4		The value at reading is undefined. Set "0" at writing.
5		
6		
7		
8		
9		
10		
11	C_CR	Clear
12		The value at reading is undefined. Set "0" at writing.
13	C_STAB2	Second acceleration/deceleration selection
14		The value at reading is undefined. Set "0" at writing.
15		

Bit definition of control DI4

Bit	Abbreviation	Description
0		The value at reading is undefined. Set "0" at writing.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

## 5. DRIVING MOTOR

---

Bit definition of control DI5

Bit	Abbreviation	Description
0		The value at reading is undefined. Set "0" at writing.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Bit definition of control DI6

Bit	Abbreviation	Description
0		The value at reading is undefined. Set "0" at writing.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

## 5. DRIVING MOTOR

Bit definition of control DI7

Bit	Abbreviation	Description
0	C_PI1	Program input 1
1	C_PI2	Program input 2
2	C_PI3	Program input 3
3	C_TCH	Teach
4	C_TP0	Generator multiplication 1
5	C_TP1	Generator multiplication 2
6		The value at reading is undefined. Set "0" at writing.
7	C_OVR	Analog override selection
8	C_LPS	Current position latch input
9		The value at reading is undefined. Set "0" at writing.
10	C_STAB	Speed acceleration/deceleration selection
11		The value at reading is undefined. Set "0" at writing.
12		
13		
14		
15		

Bit definition of control DI8

Bit	Abbreviation	Description
0	C_SIG	External limit/Rotation direction decision/Automatic speed selection
1	C_RT	Second acceleration/deceleration selection
2	C_RTCDP	Second acceleration/deceleration gain selection
3	C_OV0	Digital override selection 1
4	C_OV1	Digital override selection 2
5	C_OV2	Digital override selection 3
6	C_OV3	Digital override selection 4
7		The value at reading is undefined. Set "0" when writing.
8		
9		
10		
11		
12		
13		
14		
15		



## 5. DRIVING MOTOR

Bit definition of control DI9

Bit	Abbreviation	Description
0		The value at reading is undefined. Set "0" at writing.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

### 5.8.3 Control output (2D11h to 2D19h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D11h to 2D19h	Status DO1 to Status DO9 (Control output)	2 bytes	Read	1	Possible

The output device status (ON or OFF) can be read using the function code "03h" (Read Holding Registers). The following table lists readable output devices.

Bit definition of status DO1

Bit	Abbreviation	Description
0		The value at reading is undefined.
1	S_ERF	EEP-ROM write completed 0: EEP-ROM write in process 1: EEP-ROM write completed
2	S_SA	Speed reached
3		The value at reading is undefined.
4	S_CDPS	Variable gain selection
5		The value at reading is undefined.
6	S_CLD	During fully closed loop control
7	S_TL	Analog torque limit selection in process
8	S_TL1	Torque limit selection in process
9		The value at reading is undefined.
10		
11		
12	S_INP	In-position
13	S_TLC	Limiting torque
14	S_ABSV	Absolute position undetermined
15	S_BWNG	Battery warning

## 5. DRIVING MOTOR

Bit definition of status DO2

Bit	Abbreviation	Description
0	S_ZPAS	Z-phase already passed
1		The value at reading is undefined.
2		
3	S_ZSP	
4	S_VLC	Limiting speed
5	S_CAMS	Under cam control
6		The value at reading is undefined.
7		
8	S_PC	
9		The value at reading is undefined.
10		
11	S_CLTS (Note)	
12	S_CLTSM (Note)	Clutch smoothing status
13	S_CPCC (Note)	Cam position compensation completed
14		The value at reading is undefined.
15		

Note. This is available with servo amplifiers with software version C1 or later.

Bit definition of status DO3

Bit	Abbreviation	Description
0		The value at reading is undefined.
1		
2		
3		
4		
5	S_STO	During STO
6		The value at reading is undefined.
7		
8		
9		
10		
11	S_MTTR	During tough drive
12		The value at reading is undefined.
13		
14		
15	S_PDO	Outputting programmable DO

## 5. DRIVING MOTOR

---

Bit definition of status DO4

Bit	Abbreviation	Description
0		The value at reading is undefined.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Bit definition of status DO5

Bit	Abbreviation	Description
0		The value at reading is undefined.
1		
2		
3		
4		
5	S_CPO	Rough match
6	S_MEND	Travel completed
7	S_ZP	Home position return operation completed
8	S_PUS	Temporary stop
9		The value at reading is undefined.
10		
11		
12		
13		
14		
15		

## 5. DRIVING MOTOR

Bit definition of status DO6

Bit	Abbreviation	Description
0		The value at reading is undefined.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Bit definition of status DO7

Bit	Abbreviation	Description
0	S_ALMWNG	Failure/warning
1	S_BW9F	AL9F warning
2	S_POT	Position range output
3	S_PED	Position end
4	S_SOUT	SYNC synchronous output
5		The value at reading is undefined.
6	S_OUT1	Program output 1
7	S_OUT2	Program output 2
8	S_OUT3	Program output 3
9		The value at reading is undefined.
10		
11		
12		
13		
14		
15		

## 5. DRIVING MOTOR

---

Bit definition of status DO8

Bit	Abbreviation	Description
0		The value at reading is undefined.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Bit definition of status DO9

Bit	Abbreviation	Description
0		The value at reading is undefined.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

## 5. DRIVING MOTOR

### 5.8.4 Simultaneous start bit setting (2D9Ah)

Multiple axis system with different operation modes (for example, point table operation and program operation) can be started simultaneously using the broadcast communication. This setting is not needed when the same operation mode is used.

#### (1) List of registers

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
2D9Ah	Set Control word bit4 (Simultaneous start bit setting)	1 byte	Writing	1	Impossible

#### (2) Usage

Before setting this register, execute the following for all axes to be started simultaneously, and prepare for simultaneous start.

- (a) Specify the point table No. or the program No.
- (b) Operation enable status (Set "0Fh" or "2Fh" to register 6040h.)

Use function code "10h" (Preset Multiple Registers) when setting. The setting is shown as follows:

Setting value	Description
0	Turn off the simultaneous start signal.
1	Turn on the simultaneous start signal.

Simultaneous start is executed by setting "1" to this register.

When the operation is complete, change the point table No. or the program No. after setting "0" to this register. Simultaneous start will be executed again by setting "1" to this register.

### 5.8.5 Controller force stop (2D9Bh)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D9Bh	C_EM1/2 command (Controller force stop)	1 byte	Writing	1	Impossible

Controller operations can be forcibly stopped using the function code "10h" (Preset Multiple Registers).

The following table lists the setting values of this register.

Bit	Description
0	Controller force stop OFF
1	Controller force stop ON

Controller force stop is performed without reference to the broadcast setting (2D98h).

Use this register to forcibly stop the servo amplifiers of all axes in the broadcast communication.

## 5. DRIVING MOTOR

### 5.8.6 Override (2DB0h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2DB0h	Override (Override)	2 bytes	Read/write	1	Impossible

Turning on OVR (override selection) enables the setting.

The override value can be read using the function code "03h" (Read Holding Registers).

An override value can be set using the function code "10h" (Preset Multiple Registers).

Set the override value between 0% and 200% in the unit of %.

### 5.8.7 Forward torque limit value (60E0h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
60E0h	Positive torque limit value (Forward torque limit value)	2 bytes	Read/write	1	Impossible

The forward torque limit value can be read using the function code "03h" (Read Holding Registers).

A forward torque limit value can be set using the function code "10h" (Preset Multiple Registers).

Set a forward torque limit value in units of 0.1%.

### 5.8.8 Reverse torque limit value (60E1h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
60E1h	Negative torque limit value (Reverse torque limit value)	2 bytes	Read/write	1	Impossible

The reverse torque limit value can be read using the function code "03h" (Read Holding Registers).

A reverse torque limit value can be set using the function code "10h" (Preset Multiple Registers).

Set a reverse torque limit value in units of 0.1%.

### 5.8.9 Current position (6064h)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
6064h	Position actual value (current position)	4 bytes	Read	2	Impossible

The current position can be read using the function code "03h" (Read Holding Registers). The read value is the same as the one in the address 2B2Fh for monitoring (refer to section 4.2).

### 5.8.10 Current speed (606Ch)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
606Ch	Velocity actual value (current speed)	4 bytes	Read	2	Impossible

The current speed can be read using the function code "03h" (Read Holding Registers).

The read data is in the unit of r/min or mm/s.

## 5. DRIVING MOTOR

### 5.8.11 Current torque (6077h)

Address	Name	Data type	Read/write	No. of point/ No. of Registers	Continuous read/ continuous write
6077h	Torque actual value (current torque)	2 bytes	Read	1	Impossible

The current torque value can be read using function code "03h" (Read Holding Registers). The read data is in the unit of 0.1%.

### 5.8.12 Cam number setting (2D80h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D80h	Target CAM No. (Cam number setting)	1 byte	Read/write	1	Impossible

A set cam number can be read using the function code "03h" (Read Holding Registers).

A cam number can be set using the function code "10h" (Preset Multiple Registers). If the cam control data No. 49 Cam number is "0", the cam number setting with 2D80h is enabled.

If the cam number is not "0", the setting of the cam control data No. 49 Cam number is enabled.

### 5.8.13 Current cam number (2D82h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D82h	CAM actual No. (Current cam number)	1 byte	Read	1	Impossible

While a cam control operation is being performed (when "1" is set in bit 5 S\_CAMS Under cam control of 2D12h), the cam number being used in the operation can be read using the function code "03h" (Read Holding Registers).

### 5.8.14 Cam axis one-cycle length setting (2D84h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D84h	One cycle length of CAM axis (Cam axis one cycle length setting)	4 bytes	Read/write	2	Impossible

The one-cycle length of a cam axis can be written in the RAM space in the servo amplifier using the function code "10h" (Preset Multiple Registers).

### 5.8.15 Cam stroke length setting (2D85h)

Address	Name	Data type	Read/write	No. of points/ No. of registers	Continuous read/ continuous write
2D85h	Stroke movement of CAM (Cam stroke length setting)	4 bytes	Read/write	2	Impossible

A cam stroke length can be written in the RAM space in the servo amplifier using the function code "10h" (Preset Multiple Registers).





## 6. LIST OF MODBUS REGISTERS

### 6. LIST OF MODBUS REGISTERS

The following shows the data types used for the Modbus registers.

Data type	Abbreviation	Size	Range
Unsigned8	UINT8	1 byte	0 to 255
Unsigned16	UINT16	2 bytes	0 to 65535
Unsigned32	UINT32	4 bytes	0 to 4294967295
Integer8	INT8	1 byte	-128 to 127
Integer16	INT16	2 bytes	-32768 to 32767
Integer32	INT32	4 bytes	-2147483648 to 2147483647
Visible string	VS		

The following shows the list of the Modbus registers supported in the Modbus-RTU communication for the MR-J4-\_A\_-RJ servo amplifier.

Register No.	Function	Data type	Reference
1000h	Supported profile information	4 bytes (UINT32)	Section 4.27
1001h	Alarm Information	1 byte (UINT8)	Section 4.6
1008h	Servo amplifier model	1 byte × 32 (VS)	Section 4.18
100Ah	Servo amplifier software version	1 byte × 16 (VS)	Section 4.19
1010h	Write command to EEPROM	1 byte (UINT8)	Section 4.5
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
1018h	Device information	1 byte (UINT8)	Section 4.28
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
2001h to 2020h	Servo parameter PA01 to PA32	4 bytes (INT32)	Section 4.3
2081h to 20C0h	Servo parameter PB01 to PB64	4 bytes (INT32)	Section 4.3
2101h to 2150h	Servo parameter PC01 to PC80	4 bytes (INT32)	Section 4.3
2181h to 21B0h	Servo parameter PD01 to PD48	4 bytes (INT32)	Section 4.3
2201h to 2240h	Servo parameter PE01 to PE64	4 bytes (INT32)	Section 4.3
2281h to 22B0h	Servo parameter PF01 to PF48	4 bytes (INT32)	Section 4.3
2301h to 2320h	Servo parameter Po01 to Po32	4 bytes (INT32)	Section 4.3
2401h to 2430h	Servo parameter PL01 to PL48	4 bytes (INT32)	Section 4.3
2481h to 24B0h	Servo parameter PT01 to PT48	4 bytes (INT32)	Section 4.3
2801h to 28FFh	Point table setting	1 byte (UINT8)	Section 4.4
		4 bytes (INT32)	
		2 bytes (UINT16)	
		2 bytes (UINT16)	
		2 bytes (UINT16)	
		2 bytes (UINT16)	
		1 byte (UINT8)	
1 byte (UINT8)			
2A00h to 2A0Fh	Alarm history	1 byte (UINT8)	Section 4.9
		4 bytes (UINT32)	
		4 bytes (UINT32)	
2A40h	Alarm history clear	2 bytes (UINT16)	Section 4.10
2A43h	Point table error number	1 byte (UINT8)	Section 4.13
		2 bytes (UINT16)	
		4 bytes (UINT32)	
2A44h	Parameter error count	2 bytes (UINT16)	Section 4.11

## 6. LIST OF MODBUS REGISTERS

Register No.	Function	Data type	Reference
2A45h	Parameter error list	1 byte (UINT8)	Section 4.12
		2 bytes (UINT16) × 32	
2A60h	SDO Abort Code	4 bytes (UINT32)	Section 4.23
2A64h	Access Log 1	4 bytes (UINT32)	Section 4.24
2A65h	Access Log 2	4 bytes (UINT32)	Section 4.25
2A68h	Communication error count	2 bytes (UINT16)	Section 4.26
2B01h	Cumulative feedback pulses	4 bytes (INT32)	Section 4.2
2B02h	Servo motor speed	4 bytes (INT32)	Section 4.2
2B03h	Droop pulses	4 bytes (INT32)	Section 4.2
2B04h	Cumulative command pulses	4 bytes (INT32)	Section 4.2
2B05h	Command pulse frequency	4 bytes (INT32)	Section 4.2
2B06h	Analog speed command voltage	2 bytes (INT16)	Section 4.2
	Analog speed limit voltage		
2B07h	Analog torque limit voltage	2 bytes (INT16)	Section 4.2
	Analog torque command voltage		
2B08h	Regenerative load ratio	2 bytes (UINT16)	Section 4.2
2B09h	Effective load ratio	2 bytes (UINT16)	Section 4.2
2B0Ah	Peak load ratio	2 bytes (UINT16)	Section 4.2
2B0Bh	Instantaneous torque	2 bytes (INT16)	Section 4.2
2B0Ch	Position within one-revolution	4 bytes (INT32)	Section 4.2
2B0Dh	Multi-revolution counter	4 bytes (INT32)	Section 4.2
2B0Eh	Load to motor inertia ratio	2 bytes (UINT16)	Section 4.2
2B0Fh	Bus voltage	2 bytes (UINT16)	Section 4.2
2B10h	Load-side cumulative feedback pulses	4 bytes (INT32)	Section 4.2
2B11h	Load-side droop pulses	4 bytes (INT32)	Section 4.2
2B12h	Load-side encoder information 1	4 bytes (INT32)	Section 4.2
	Z-phase counter		
2B13h	Load-side encoder information 2	4 bytes (INT32)	Section 4.2
2B14h	Analog monitor 1 output voltage	2 bytes (INT16)	Section 4.2
2B15h	Analog monitor 2 output voltage	2 bytes (INT16)	Section 4.2
2B16h	Encoder pulse output	4 bytes (INT32)	Section 4.2
2B17h	Temperature of motor thermistor	2 bytes (INT16)	Section 4.2
2B19h	Electrical angle	4 bytes (INT32)	Section 4.2
2B23h	Motor-side/load-side position deviation	4 bytes (INT32)	Section 4.2
2B24h	Motor-side/load-side speed deviation	4 bytes (INT32)	Section 4.2
2B25h	Encoder inside temperature	2 bytes (INT16)	Section 4.2
2B26h	Settling time	2 bytes (INT16)	Section 4.2
2B27h	Oscillation detection frequency	2 bytes (INT16)	Section 4.2
2B28h	Number of tough drive operations	2 bytes (UINT16)	Section 4.2
2B2Dh	Unit power consumption	2 bytes (INT16)	Section 4.2
2B2Eh	Unit total power consumption	4 bytes (INT32)	Section 4.2
2B2Fh	Current position	4 bytes (INT32)	Section 4.2
2B30h	Command position	4 bytes (INT32)	Section 4.2
2B31h	Command remaining distance	4 bytes (INT32)	Section 4.2
2B32h	Point table No./Program No./Station position No.	2 bytes (INT16)	Section 4.2
2B33h	Step No.	2 bytes (INT16)	Section 4.2
2B34h	Analog override voltage	2 bytes (INT16)	Section 4.2
2B35h	Override level	2 bytes (INT16)	Section 4.2
2B38h	Current position in one cycle of CAM axis	4 bytes (INT32)	Section 4.2
2B39h	Basis position of CAM	4 bytes (INT32)	Section 4.2
2B3Ah	Feed current position of CAM	4 bytes (INT32)	Section 4.2
2B3Bh	Executed CAM No.	2 bytes (INT16)	Section 4.2
2B3Ch	Stroke movement of executed CAM	4 bytes (INT32)	Section 4.2
2B3Dh	Current position of main axis	4 bytes (INT32)	Section 4.2

## 6. LIST OF MODBUS REGISTERS

Register No.	Function	Data type	Reference
2B3Eh	Current position in one cycle of main axis	4 bytes (INT32)	Section 4.2
2C10h	External input pin status	1 byte (UINT8)	Section 4.14
		4 bytes (UINT32)	
2C11h	External output pin status	1 byte (UINT8)	Section 4.15
		4 bytes (UINT32)	
2C12h	Input device status	1 byte (UINT8)	Section 4.16
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
2C13h	Output device status	1 byte (UINT8)	Section 4.17
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
		4 bytes (UINT32)	
2D01h to 2D09h	Control input	2 bytes (UINT16)	Section 5.8.2
2D11h to 2D19h	Control output	2 bytes (UINT16)	Section 5.8.3
2D28h	Servo motor rated speed	4 bytes (UINT32)	Section 4.21
2D29h	Servo motor maximum speed	4 bytes (UINT32)	Section 4.22
2D60h	Point table specification	2 bytes (INT16)	Section 5.5
2D68h	Point table request	2 bytes (INT16)	Section 5.5
2D69h	Current point table	2 bytes (INT16)	Section 5.5
2D70h	Program number specification	2 bytes (INT16)	Section 5.6
2D78h	Program number request	2 bytes (INT16)	Section 5.6
2D79h	Program step number	2 bytes (INT16)	Section 5.6
2D80h	Cam number setting	1 byte (UINT8)	Section 5.8.12
2D82h	Current cam number	1 byte (UINT8)	Section 5.8.13
2D84h	Cam axis one cycle length setting	4 bytes (INT32)	Section 5.8.14
2D85h	Cam stroke length setting	4 bytes (INT32)	Section 5.8.15
2D88h, 2D89h, 2D8Bh	Cam data write	1 byte (UINT8), 2 bytes (UINT16), 64 bytes	Section 5.8.1
2D98h	Broadcast Setting	1 byte (UINT8)	Section 4.20
2D9Ah	Simultaneous start bit setting	1 byte (UINT8)	Section 5.8.4
2D9Bh	Controller force stop	1 byte (UINT8)	Section 5.8.5
2DB0h	Override	2 bytes (UINT16)	Section 5.8.6
6040h	Control command	2 bytes (UINT16)	Section 5.1
6041h	Control status	2 bytes (UINT16)	Section 5.1
6060h	Control mode	1 byte (INT8)	Section 5.2
6061h	Control mode display	1 byte (INT8)	Section 5.2
6064h	Current position	4 bytes (UINT32)	Section 5.8.9
606Ch	Current speed	4 bytes (UINT32)	Section 5.8.10
6077h	Current torque	2 bytes (UINT16)	Section 5.8.11
607Dh	Software limit	1 byte (UINT8)	Section 5.4
		4 bytes (UINT32)	
		4 bytes (UINT32)	
6081h	Command speed	4 bytes (UINT32)	Section 5.4
6083h	Acceleration time constant	4 bytes (UINT32)	Section 5.4
6084h	Deceleration time constant	4 bytes (UINT32)	Section 5.4
6098h	Home position return method	1 byte (INT8)	Section 5.3
6099h	Home position return speed	1 byte (UINT8)	Section 5.3
		4 bytes (UINT32)	
		4 bytes (UINT32)	
60B8h	Touch probe function setting	2 bytes (UINT16)	Section 5.7
60B9h	Touch probe function status	2 bytes (UINT16)	Section 5.7
60BAh	Rising edge position of touch probe	2 bytes (UINT16)	Section 5.7
60BBh	Falling edge position of touch probe	2 bytes (UINT16)	Section 5.7

# 6. LIST OF MODBUS REGISTERS

---

Register No.	Function	Data type	Reference
60E0h	Forward torque limit value	2 bytes (UINT16)	Section 5.8.7
60E1h	Reverse torque limit value	2 bytes (UINT16)	Section 5.8.8
6502h	Supported control mode	4 bytes (UINT32)	Section 5.2

REVISIONS

\*The manual number is given on the bottom left of the back cover.

Print Data	*Manual Number	Revision
Aug. 2015	SH(NA)030175-A	First edition

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.



Country/Region	Sales office	Tel/Fax
USA	MITSUBISHI ELECTRIC AUTOMATION, INC. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.	Tel : +1-847-478-2100 Fax : +1-847-478-2253
Mexico	MITSUBISHI ELECTRIC AUTOMATION, INC. Mexico Branch Mariano Escobedo #69, Col. Zona Industrial, Tlalnepantla Edo, C.P.54030, Mexico	Tel : +52-55-3067-7500 Fax : -
Brazil	MITSUBISHI ELECTRIC DO BRASIL COMÉRCIO E SERVIÇOS LTDA. Rua Jussara, 1750- Bloco B Anexo, Jardim Santa Cecilia, CÉP 06465-070, Barueri - SP, Brasil	Tel : +55-11-4689-3000 Fax : +55-11-4689-3016
Germany	MITSUBISHI ELECTRIC EUROPE B.V. German Branch Gothaer Strasse 8, D-40880 Ratingen, Germany	Tel : +49-2102-486-0 Fax : +49-2102-486-1120
UK	MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K.	Tel : +44-1707-28-8780 Fax : +44-1707-27-8695
Italy	MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Centro Direzionale Colleoni - Palazzo Sirio Viale Colleoni 7, 20864 Agrate Brianza (Milano) Italy	Tel : +39-039-60531 Fax : +39-039-6053-312
Spain	MITSUBISHI ELECTRIC EUROPE, B.V. Spanish Branch Carretera de Rubí, 76-80-Apdo. 420, 08173 Sant Cugat del Vallés (Barcelona), Spain	Tel : +34-935-65-3131 Fax : +34-935-89-1579
France	MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France	Tel : +33-1-55-68-55-68 Fax : +33-1-55-68-57-57
Czech Republic	MITSUBISHI ELECTRIC EUROPE B.V. Czech Branch Avenir Business Park, Radlicka 751/113e, 158 00 Praha5, Czech Republic	Tel : +420-251-551-470 Fax : +420-251-551-471
Poland	MITSUBISHI ELECTRIC EUROPE B.V. Polish Branch Krakowska 50, 32-083 Balice, Poland	Tel : +48-12-630-47-00 Fax : +48-12-630-47-01
Russia	MITSUBISHI ELECTRIC EUROPE B.V. Russian Branch St. Petersburg office Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; RU-195027 St. Petersburg, Russia	Tel : +7-812-633-3497 Fax : +7-812-633-3499
Sweden	MITSUBISHI ELECTRIC EUROPE B.V. (Scandinavia) Fjellievägen 8, SE-22736 Lund, Sweden	Tel : +46-8-625-10-00 Fax : +46-46-39-70-18
Turkey	MITSUBISHI ELECTRIC TURKEY A.Ş Ümraniye Branch Şerifali Mahallesi Nutuk Sokak No:5, TR-34775 Ümraniye, İstanbul, Turkey	Tel : +90-216-526-3990 Fax : +90-216-526-3995
UAE	MITSUBISHI ELECTRIC EUROPE B.V. Dubai Branch Dubai Silicon Oasis, P.O.BOX 341241, Dubai, U.A.E.	Tel : +971-4-3724716 Fax : +971-4-3724721
South Africa	ADROIT TECHNOLOGIES 20 Waterford Office Park, 189 Witkoppen Road, Fourways, Johannesburg, South Africa	Tel : +27-11-658-8100 Fax : +27-11-658-8101
China	MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Shanghai, China	Tel : +86-21-2322-3030 Fax : +86-21-2322-3000
Taiwan	SETSUYO ENTERPRISE CO., LTD. 6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan, R.O.C.	Tel : +886-2-2299-2499 Fax : +886-2-2299-2509
Korea	MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. 7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 157-801, Korea	Tel : +82-2-3660-9510 Fax : +82-2-3664-8372/8335
Singapore	MITSUBISHI ELECTRIC ASIA PTE. LTD. 307, Alexandra Road, Mitsubishi Electric Building, Singapore 159943	Tel : +65-6473-2308 Fax : +65-6476-7439
Thailand	MITSUBISHI ELECTRIC FACTORY AUTOMATION (THAILAND) CO., LTD. 12th Floor, SV.City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwaeng Bangpongpan, Khet Yannawa, Bangkok 10120, Thailand	Tel : +66-2682-6522 to 6531 Fax : +66-2682-6020
Indonesia	PT. MITSUBISHI ELECTRIC INDONESIA Gedung Jaya 11th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia	Tel : +62-21-3192-6461 Fax : +62-21-3192-3942
Vietnam	MITSUBISHI ELECTRIC VIETNAM COMPANY LIMITED Unit 01-04, 10th Floor, Vincom Center, 72 Le Thanh Ton Street, District 1, Ho Chi Minh City, Vietnam	Tel : +84-8-3910-5945 Fax : +84-8-3910-5947
India	MITSUBISHI ELECTRIC INDIA PVT. LTD. Pune Branch Emerald House, EL -3, J Block, M.I.D.C Bhosari, Pune - 411026, Maharashtra, India	Tel : +91-20-2710-2000 Fax : +91-20-2710-2100
Australia	MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia	Tel : +61-2-9684-7777 Fax : +61-2-9684-7245

MELSERVO is a trademark or registered trademark of Mitsubishi Electric Corporation in Japan and/or other countries.  
Modbus is registered trademark of SCHNEIDER ELECTRIC USA, INC.  
All other product names and company names are trademarks or registered trademarks of their respective companies.



## Warranty

### 1. Warranty period and coverage

We will repair any failure or defect hereinafter referred to as "failure" in our FA equipment hereinafter referred to as the "Product" arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit are repaired or replaced.

### [Term]

The term of warranty for Product is twelve (12) months after your purchase or delivery of the Product to a place designated by you or eighteen (18) months from the date of manufacture whichever comes first ("Warranty Period"). Warranty period for repaired Product cannot exceed beyond the original warranty period before any repair work.

### [Limitations]

- (1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule.  
It can also be carried out by us or our service company upon your request and the actual cost will be charged. However, it will not be charged if we are responsible for the cause of the failure.
- (2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.
- (3) Even during the term of warranty, the repair cost will be charged on you in the following cases;
  - (i) a failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem
  - (ii) a failure caused by any alteration, etc. to the Product made on your side without our approval
  - (iii) a failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety device required by applicable laws and has any function or structure considered to be indispensable according to a common sense in the industry
  - (iv) a failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
  - (v) any replacement of consumable parts (battery, fan, smoothing capacitor, etc.)
  - (vi) a failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters
  - (vii) a failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company
  - (viii) any other failures which we are not responsible for or which you acknowledge we are not responsible for

### 2. Term of warranty after the stop of production

- (1) We may accept the repair at charge for another seven (7) years after the production of the product is discontinued. The announcement of the stop of production for each model can be seen in our Sales and Service, etc.
- (2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

### 3. Service in overseas countries

Our regional FA Center in overseas countries will accept the repair work of the Product. However, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

### 4. Exclusion of responsibility for compensation against loss of opportunity, secondary loss, etc.

Whether under or after the term of warranty, we assume no responsibility for any damages arisen from causes for which we are not responsible, any losses of opportunity and/or profit incurred by you due to a failure of the Product, any damages, secondary damages or compensation for accidents arisen under a specific circumstance that are foreseen or unforeseen by our company, any damages to products other than the Product, and also compensation for any replacement work, readjustment, start-up test run of local machines and the Product and any other operations conducted by you.

### 5. Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

### 6. Application and use of the Product

- (1) For the use of our General-Purpose AC Servo, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in General-Purpose AC Servo, and a backup or fail-safe function should operate on an external system to General-Purpose AC Servo when any failure or malfunction occurs.
- (2) Our General-Purpose AC Servo is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these applications when used  
In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used. We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.

MODEL	MR-J4-A-RJ INSTRUCTION (MODBUS-RTU)
MODEL CODE	1CW822

# MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG MARUNOUCHI TOKYO 100-8310