

AJ65VBTC3E-16TE 形 CC-Link システム小形タイプリモート I/O ユニットユーザーズマニュアル

AJ65VBTC3E-16TE CC-Link System Compact Type Remote I/O Module User's Manual

●安全上のご注意●

(ご使用前に必ずお読みください)

本製品のご使用に際しては、本マニュアルをよくお読みいただくと共に、安全に対して十分に注意を払って、正しく取扱いはしていただくようお願いいたします。

本マニュアルで示す注意事項は、本製品に関するもののみについて記載したもので、シーケンサシステムとしての安全上のご注意に関しては、使用するCPUユニットのユーザーズマニュアルを参照してください。

この「安全上のご注意」では、安全注意事項のランクを「△警告」、△注意」として区分してあります。

△警告 取扱いを誤った場合に、危険な状況が起こりえて、死亡または重傷を負う可能性が想定される場合。

△注意 取扱いを誤った場合に、危険な状況が起こりえて、中程度の傷害や軽傷を負う可能性が想定される場合および物的損害だけの発生が想定される場合。

なお、△注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。

いずれも重要な内容を記載していますので必ず守ってください。本マニュアルは必要ときに読めるよう大切に保管すると共に、必ず最終ユーザーまでお届けいただくようお願いいたします。

●SAFETY PRECAUTIONS●

(Read these precautions before using this product.)

Before using this product, please read this manual carefully and pay full attention to safety to handle the product correctly. The precautions given in this manual are concerned with this product only. For the safety precautions of the programmable controller system, refer to the user's manual for the CPU module used.

In this manual, the safety precautions are classified into two levels:

△WARNING and △CAUTION.

△WARNING Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

△CAUTION Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under △CAUTION may lead to serious consequences. Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

(1609) MEE

[Design Precautions]

△警告

- In the case of a communication failure in the network, the status of the error station will be as follows:
 - All inputs from remote I/O stations are turned off.
 - All outputs from remote I/O stations are turned off.
 Check the communication status information and configure an interlock circuit in the sequence program to ensure that the entire system will operate safely. Incorrect output or malfunction due to a communication failure may result in an accident.
- Outputs may remain on or off due to a failure of a remote I/O module. Configure an external circuit for monitoring output signals that could cause a serious accident.

△注意

- Use the module in an environment that meets the general specifications in the user's manual for the CPU module used. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100mm (3.94 inches) or more between them. Failure to do so may result in malfunction due to noise.

[Installation Precautions]

△警告

- Do not directly touch any conductive parts of the module. Doing so can cause malfunction or failure of the module.
- Securely fix the module with a DIN rail or mounting screws. Tighten the screws within the specified torque range. Undertightening can cause drop of the screw, short circuit or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Securely connect the cable connectors. Poor contact may cause malfunction.

[Wiring Precautions]

△警告

- Shut off the external power supply for the system in all phases before wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.

△注意

- Ground the FG terminal to the protective ground conductor dedicated to the programmable controller. Failure to do so may result in electric shock or malfunction.
- Tighten any unused terminal screws within the specified torque range (0.42 to 0.50Nm). Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Check the rated voltage and terminal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
- Tighten the terminal screw within the specified torque range. Undertightening can cause short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
- Place the cables in a duct or clamp them. If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.

△注意

- 制御線と通信ケーブルは束線したり、近接したりしないでください。ノイズにより、誤動作の原因となります。
- 外部接続機器の異常やシーケンサの故障などによる過電流が長時間継続して流れた場合、発煙、発火の恐れがありますので、外部にヒューズなどの安全回路を設けてください。
- ユニットに接続されたケーブルを取りはずすときは、ケーブル部分を手に持って引っ張らないでください。コネクタ付きのケーブルは、ユニットの接続部分のコネクタを手で持ってください。コネクタ付きのケーブルは、端子ネジを緩めてから取りはずしてください。ユニットに接続された状態でケーブルを引っ張ると、誤動作またはユニットやケーブルの破損の原因となります。

[立上げ・保守時の注意事項]

△警告

- 通電中に端子に触れないでください。感電または誤動作の原因になります。
- 清掃、端子ネジ、ユニット取り付けネジの増し締めは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、感電の恐れがあります。

△注意

- 各ユニットの分解、改造はしないでください。故障、誤動作、ケガ、火災の原因となります。
- ユニットは落下させたり、強い衝撃を与えないでください。ユニットの破損の原因となります。
- ユニットの取り付け・取りはずしは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因となります。
- 端子台の質感は、製品ご使用後、50回以内としてください。(JIS B 3502に準拠)
- ユニットに触れる前には、必ず接地された金属などの導電物に触れて、人体などに帯電している静電気を放電してください。静電気を放電しないと、ユニットの故障や誤動作の原因となります。

[廃棄時の注意事項]

△注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

△CAUTION

- Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
- When an overcurrent caused by an error of an external device or a failure of the programmable controller flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
- When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.

[Startup and Maintenance Precautions]

△WARNING

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
- Shut off the external power supply for the system in all phases before cleaning the module or re tightening the terminal screws or module mounting screws. Failure to do so may result in electric shock.

△CAUTION

- Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
- Do not drop or apply strong shock to the module. Doing so may damage the module.
- Shut off the external power supply for the system in all phases before mounting or removing a module. Failure to do so may cause the module to fail or malfunction.
- After the first use of the product, do not mount/remove the terminal block to/from the module more than 50 times (IEC 61131-2 compliant).
- Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Failure to do so may cause the module to fail or malfunction.

[Disposal Precautions]

△CAUTION

- When disposing of this product, treat it as industrial waste.

[設計上の注意事項]

△警告

- データリンクが通信異常になったとき、通信異常時は次のような状態になります。通信状態情報を使って、システムが安全側に働くようにシーケンサプログラム上でインタロック回路を構成してください。誤出力、誤動作により事故の恐れがあります。
- (1) リモートI/O局からの入力、全点OFFします。
- (2) リモートI/O局からの出力は、全点OFFします。

△注意

- ユニットは、CPUユニットユーザーズマニュアル記載の一般仕様で使用する環境で使用してください。範囲外の環境で使用すると、感電、火災、誤動作、製品の損傷、あるいは劣化の原因となります。
- 制御線と通信ケーブルは、主回路や動力線などと束線したり、近接したりしないでください。100mm以上を目安として離してください。ノイズにより、誤動作の原因となります。

[取付け上の注意事項]

△警告

- ユニットの導電部分には直接触らないでください。ユニットの誤動作、故障の原因となります。
- ユニットは、DINレールまたは取り付けネジにて、確実に固定し、取り付けネジは規定トルク範囲で確実に締め付けてください。ネジの締め付けがゆるい、落下、短絡、誤動作の原因となります。ネジを締め過ぎると、ネジやユニットの破損による落下、短絡、誤動作の原因となります。
- 各接続ケーブルのコネクタは装着部に確実に装着してください。接触不良により、誤動作の原因となります。

[配線上の注意事項]

△警告

- 配線作業は、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、感電またはユニットの故障や誤動作の原因となります。

△注意

- FG端子は、シーケンサ専用のD種接地(第三種接地)以上で必ず接地を行ってください。感電、誤動作の恐れがあります。
- 空き端子ネジは必ず締め付けトルク範囲(0.42～0.50N・m)で締め付けてください。圧着端子と短絡する原因になります。
- 圧着端子は、適合圧着端子を使用し、規定のトルクで締め付けてください。先開形圧着端子を使用すると、端子ネジがゆるんだ場合に脱落し、故障の原因となります。
- ユニットへの配線は、製品の定格電圧や端子配列を確認した上で正しく行ってください。定格と異なる電圧の入力や、電源を接続、誤配線をするなど、火災、故障の原因となります。
- 端子ネジの締め付けは、規定トルク範囲で行ってください。ネジの締め付けがゆるい、短絡、火災、誤動作の原因となります。ネジを締め過ぎると、ネジやユニットの破損による落下、短絡、火災、誤動作の原因となります。
- ユニット内に粉や配線クズなどの異物が入らないように注意してください。火災、故障、誤動作の原因となります。
- ユニットに接続する電線やケーブルは、必ずダクトに納めるか、またはクランプによる固定処理を行ってください。ケーブルをダクトに納めなかったり、クランプによる固定処理をしない、ケーブルのふらつきや移動、不注意の引っ張りなどによりユニットやケーブルの破損、ケーブルの接続不良による誤動作の原因となります。

●安全注意事項●

(使用之前请务必阅读)

在使用本产品之前，应仔细阅读本手册，同时在充分注意安全的前提下正确操作。本手册中仅记载与本产品有关的注意事项。关于可编程控制器系统方面的安全注意事项，请参阅所使用的CPU模块的用户手册。

在“安全注意事项”中，安全注意事项被分为“△警告”和“△注意”两个等级。

△警告 表示操作错误时，可能会引起危险，导致死亡或重伤事故。

△注意 表示操作错误时，可能会引起危险，导致中度伤害或轻伤，或导致财物损失。

此外，根据情况不同，即使标注为“△注意”的事项也有可能引发严重后果。这两个等级的注意事项记载的均为重要内容，请务必遵守。

请妥善保管本手册以备需要时参阅，并将本手册交给最终用户。

[设计注意事项]

△警告

- 数据链接处于通信异常时，通信异常站将变为以下状态。应使用通信状态信息，在顺控程序上配置互锁电路，以保证整个系统能安全运行。否则可能由于误输出、误动作而导致事故发生。
- (1) 来自于远程I/O站的输入的全部OFF。
- (2) 来自于远程I/O站的输出的全部OFF。

由于远程I/O模块的故障，可能导致输出保持为ON状态或者OFF状态。对于可能导致重大事故发生的输出信号，应在外部设置监视电路。

△注意

- 应在CPU模块用户手册记载的一般规格环境下使用模块。如果在一般规格范围以外的环境中使用模块，可能导致触电、火灾、误动作、设备损坏或性能劣化。
- 请勿将控制线及通信电缆与主电路及动力线等捆扎在一起或相互靠近。应相距大约100mm以上距离。因为噪声有可能导致误动作。

[安装注意事项]

△注意

- 请勿直接触碰模块的导电部分。否则可能导致模块误动作、故障。
- 模块应通过DIN导轨或者安装螺栓切实地加以固定，安装螺栓应在规定的扭矩范围内切实地拧紧。如果安装螺栓拧得过松，有可能导致坠落、短路或误动作。如果安装螺栓拧得过硬，有可能造成螺栓及模块损坏从而发生坠落、短路或误动作。
- 应将各连接电缆的接口切实地安装在安装部位。否则可能因接触不良而导致误动作。

[配线注意事项]

△警告

- 在配线作业时，必须将系统使用的外部供电电源全部断开后再进行操作。如果未全部断开，有可能导致触电、模块故障或误动作。

△注意

- 必须将FG端子与可编程控制器的专用接地线连接，否则有可能导致触电或误动作。
- 空闲端子螺栓必须在扭矩范围(0.42～0.50N・m)内拧紧。否则可能导致与压装端子发生短路。
- 应使用合适的压装端子，并按规定扭矩拧紧。如果使用Y型压装端子，端子螺栓松动时可能导致脱落或故障。
- 进行模块配线作业时，应在确认产品的额定电压及端子排列的基础上正确进行操作。如果连接了与额定值不符的电压、电源或配线错误，可能导致火灾或故障。
- 应在规定的扭矩范围内拧紧端子螺栓。如果端子螺栓拧得过松，有可能导致短路、火灾或误动作。如果端子螺栓拧得过硬，有可能造成螺栓及模块损坏从而发生短路、火灾或误动作。
- 应注意防止切屑及配线头等异物掉入模块内。否则有可能导致火灾、故障或误动作。
- 与模块相连接的导线及电缆必须收入套管中，或者用夹具进行固定处理。如果未将电缆收入套管或用夹具进行固定处理，可能由于电缆的晃动及移动、不恰当的拉拽造成模块及电缆破损、电缆接触不良而导致误动作。
- 请勿将控制线及通信电缆与主电路及动力线捆扎在一起或相互靠近。因为噪声有可能导致误动作。
- 外部连接机器的异常及可编程控制器的故障等导致长时间过电流时，可能会导致冒烟、火灾，因此请在外部设置保险丝等安全电路。
- 在拆卸与模块相连接的电缆时，请勿用手拉扯电缆部分。对于带接口的电缆，应用手握住与模块相连接的接口进行拆卸。对于端子排连接的电缆，应松开端子螺栓后拆卸。如果在与模块连接的状态下拉扯电缆，可能导致误动作或模块及电缆破损。

[启动/维护注意事项]

△警告

- 在通电状态下请勿触摸端子，否则可能导致触电或误动作。
- 在清洁模块或重新紧固端子螺栓、模块安装螺栓时，必须将系统使用的外部供电电源全部断开后再进行操作。如果未全部断开，有可能导致触电。

△注意


- 请勿拆开或改造模块，否则可能导致故障、误动作、人身伤害或火灾。
- 应防止模块掉落或受到强烈冲击，否则可能导致模块破损。
- 在进行模块的拆装时，必须将系统使用的外部供电电源全部断开后再进行操作，否则可能导致模块故障或误动作。
- 产品投入使用后，端子排的拆装次数不应超过50次。(根据IEC61131-2规范)
- 在触碰模块之前，必须先触碰已接地的金属等导电物，释放人体等所携带的静电。如果不释放掉静电，有可能导致模块故障或误动作。

[报废处理注意事项]

△注意

- 本产品报废时，应当当作工业废物处理。

1. 各部名称と設定

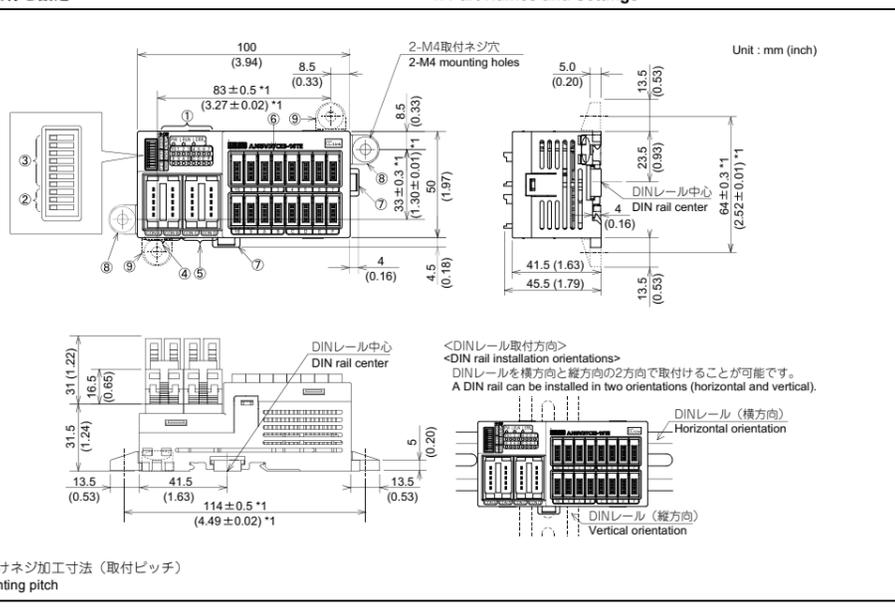

1. Part Names and Settings

No.	名称	内容																		
①	動作表示 LED	<table border="1"> <thead> <tr> <th>LED名</th> <th>確認内容</th> </tr> </thead> <tbody> <tr> <td>PW</td> <td>点灯: 電源 ON 消灯: 電源 OFF</td> </tr> <tr> <td>L RUN</td> <td>点灯: 送信正常時 消灯: 送信中断時 (タイムアウトエラー)</td> </tr> <tr> <td>LERR</td> <td>点灯: 送信エラー時 一定間隔で点滅: 通信中に局番設定 / 伝送速度設定スイッチの設定を変更したとき 一定間隔で点滅: 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯: 送信正常時</td> </tr> <tr> <td>Y0 ~ YF</td> <td>点灯: 出力 ON 消灯: 出力 OFF</td> </tr> </tbody> </table>	LED名	確認内容	PW	点灯: 電源 ON 消灯: 電源 OFF	L RUN	点灯: 送信正常時 消灯: 送信中断時 (タイムアウトエラー)	LERR	点灯: 送信エラー時 一定間隔で点滅: 通信中に局番設定 / 伝送速度設定スイッチの設定を変更したとき 一定間隔で点滅: 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯: 送信正常時	Y0 ~ YF	点灯: 出力 ON 消灯: 出力 OFF								
LED名	確認内容																			
PW	点灯: 電源 ON 消灯: 電源 OFF																			
L RUN	点灯: 送信正常時 消灯: 送信中断時 (タイムアウトエラー)																			
LERR	点灯: 送信エラー時 一定間隔で点滅: 通信中に局番設定 / 伝送速度設定スイッチの設定を変更したとき 一定間隔で点滅: 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯: 送信正常時																			
Y0 ~ YF	点灯: 出力 ON 消灯: 出力 OFF																			
②	伝送速度設定スイッチ	<table border="1"> <thead> <tr> <th>設定値</th> <th>設定スイッチ状態</th> <th>伝送速度</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OFF OFF OFF</td> <td>156kbps</td> </tr> <tr> <td>1</td> <td>OFF OFF ON</td> <td>625kbps</td> </tr> <tr> <td>2</td> <td>OFF ON OFF</td> <td>2.5Mbps</td> </tr> <tr> <td>3</td> <td>OFF ON ON</td> <td>5.0Mbps</td> </tr> <tr> <td>4</td> <td>ON OFF OFF</td> <td>10Mbps</td> </tr> </tbody> </table> 伝送速度は必ず上記の範囲で設定してください。	設定値	設定スイッチ状態	伝送速度	0	OFF OFF OFF	156kbps	1	OFF OFF ON	625kbps	2	OFF ON OFF	2.5Mbps	3	OFF ON ON	5.0Mbps	4	ON OFF OFF	10Mbps
設定値	設定スイッチ状態	伝送速度																		
0	OFF OFF OFF	156kbps																		
1	OFF OFF ON	625kbps																		
2	OFF ON OFF	2.5Mbps																		
3	OFF ON ON	5.0Mbps																		
4	ON OFF OFF	10Mbps																		
③	局番設定スイッチ	STATION NO. の "10"、"20"、"40" で局番の10の位を設定します。 STATION NO. の "1"、"2"、"4"、"8" で局番の1の位を設定します。 局番は必ず1～64の範囲で設定してください。*2 (例) <table border="1"> <thead> <tr> <th>局番</th> <th>十の位</th> <th>一の位</th> </tr> </thead> <tbody> <tr> <td>40</td> <td>20</td> <td>10</td> </tr> <tr> <td>20</td> <td>10</td> <td>8</td> </tr> <tr> <td>10</td> <td>8</td> <td>4</td> </tr> <tr> <td>8</td> <td>4</td> <td>2</td> </tr> <tr> <td>4</td> <td>2</td> <td>1</td> </tr> </tbody> </table>	局番	十の位	一の位	40	20	10	20	10	8	10	8	4	8	4	2	4	2	1
局番	十の位	一の位																		
40	20	10																		
20	10	8																		
10	8	4																		
8	4	2																		
4	2	1																		
④	通信用コネクタ	通信ラインの接続用コネクタコネクタです。																		
⑤	電源・FG用コネクタ	ユニット電源ライン、I/O電源ライン、FGの接続用コネクタコネクタです。																		
⑥	入出力用コネクタ	入出力信号の接続用コネクタです。																		
⑦	DINレール用フック	ユニットをDINレールに取り付けるときにDINレール用フックの中心線と指でカチンと音がするまで押し込みます。																		
⑧	ネジ取付け用固定具 (付属品)	ユニットを筐体などに取り付ける場合に⑧⑨に装着して使用します。(⑧と⑨の2通りの装着が可能です。)																		

*2 局番は重複して設定できません。

No.	Item	LED name	Description																	
①	Operation status indicator LED	PW L RUN LERR	<table border="1"> <thead> <tr> <th>Details</th> </tr> </thead> <tbody> <tr> <td>On: Power being supplied Off: No power supplied</td> </tr> <tr> <td>On: Normal communication Off: No communication (timeout error)</td> </tr> <tr> <td>On: Communication error Flashing regularly: The station number or transmission speed switch setting is changed while power is on. Flashing irregularly: The terminating resistor setting is incorrect. The module or CC-Link dedicated cable is affected by noise. Off: Normal communication</td> </tr> <tr> <td>Y0 to YF On: Output ON Off: Output OFF</td> </tr> </tbody> </table>	Details	On: Power being supplied Off: No power supplied	On: Normal communication Off: No communication (timeout error)	On: Communication error Flashing regularly: The station number or transmission speed switch setting is changed while power is on. Flashing irregularly: The terminating resistor setting is incorrect. The module or CC-Link dedicated cable is affected by noise. Off: Normal communication	Y0 to YF On: Output ON Off: Output OFF												
Details																				
On: Power being supplied Off: No power supplied																				
On: Normal communication Off: No communication (timeout error)																				
On: Communication error Flashing regularly: The station number or transmission speed switch setting is changed while power is on. Flashing irregularly: The terminating resistor setting is incorrect. The module or CC-Link dedicated cable is affected by noise. Off: Normal communication																				
Y0 to YF On: Output ON Off: Output OFF																				
②	Transmission speed setting switch	Setting	<table border="1"> <thead> <tr> <th>Switch status</th> <th>Transmission speed</th> </tr> </thead> <tbody> <tr> <td>0 OFF OFF OFF</td> <td>156kbps</td> </tr> <tr> <td>1 OFF OFF ON</td> <td>625kbps</td> </tr> <tr> <td>2 OFF ON OFF</td> <td>2.5Mbps</td> </tr> <tr> <td>3 OFF ON ON</td> <td>5.0Mbps</td> </tr> <tr> <td>4 ON OFF OFF</td> <td>10Mbps</td> </tr> </tbody> </table> Set the transmission speed within the above range.	Switch status	Transmission speed	0 OFF OFF OFF	156kbps	1 OFF OFF ON	625kbps	2 OFF ON OFF	2.5Mbps	3 OFF ON ON	5.0Mbps	4 ON OFF OFF	10Mbps					
Switch status	Transmission speed																			
0 OFF OFF OFF	156kbps																			
1 OFF OFF ON	625kbps																			
2 OFF ON OFF	2.5Mbps																			
3 OFF ON ON	5.0Mbps																			
4 ON OFF OFF	10Mbps																			
③	Station number setting switch	Select "10", "20", or "40" for the tens place. Select "1", "2", "4", or "8" for the ones place. Set the station number within the range of 1 to 64. *2 (Example) Setting the station number to 32: <table border="1"> <thead> <tr> <th>Station number</th> <th>Tens place</th> <th>Ones place</th> </tr> </thead> <tbody> <tr> <td>40</td> <td>20</td> <td>10</td> </tr> <tr> <td>20</td> <td>10</td> <td>8</td> </tr> <tr> <td>10</td> <td>8</td> <td>4</td> </tr> <tr> <td>8</td> <td>4</td> <td>2</td> </tr> <tr> <td>4</td> <td>2</td> <td>1</td> </tr> </tbody> </table>	Station number	Tens place	Ones place	40	20	10	20	10	8	10	8	4	8	4	2	4	2	1
Station number	Tens place	Ones place																		
40	20	10																		
20	10	8																		
10	8	4																		
8	4	2																		
4	2	1																		
④	Connector for communication	One-touch connector for communication line																		
⑤	Connector for power supply and FG	One-touch connector for module power supply line, I/O power supply line, and FG																		
⑥	Connector for I/O signals	Connector for I/O signals																		
⑦	DIN rail hook	When mounting the module to a DIN rail, push in the DIN rail hook until it clicks.																		
⑧	Mounting bracket (accessory)	Used to install the module to a control panel. (Can be attached in two different ways, ⑧ and ⑨.)																		
*2 A unique station number should be set.																				

2. 付属品

ネジ取り付け用固定具 2個

3. 使用周囲温度

本製品は、0～55℃の範囲でご使用ください。

4. 仕様

項目	内容	
出力点数	16点	
絶縁方式	フォトカプラ絶縁	
定格負荷電圧	DC12/24V (リップル率5%以内)	
使用負荷電圧範囲	DC10.2～26.4V	
最大負荷電流	0.1A/1点, 1.6A/1コモン	
最大突入電流	0.7A, 10ms以下	
OFF時漏れ電流	0.1mA以下	
ON時最大電圧降下	DC0.1V以下(TYP) 0.1A DC0.2V以下(MAX) 0.1A	
出力形式	ソースタイプ	
保護機能	過負荷保護機能, 過熱保護機能	
応答時間	OFF→ON 1ms以下 ON→OFF 1ms以下(抵抗負荷)	
出力部外部供給電圧	電圧 DC12/24V (リップル率5%以内) (許容電圧範囲 DC10.2～26.4V)	
電流	11mA以下(DC24V, 全点ON時) 外部負荷電流は含まず	
サーキットブレーカ	リレータイプ	
接続機器供給用電流	1.0A以下(コモン)	
コモン方式	16点1コモン(センサコネクタ(e-CON)3線式)	
占有間数	1箱 32点割付け(18点使用)	
ユニット電源	電圧 DC24V (DC24V, 全点ON時) 電流 45mA以下	
ノイズ耐量	DCタイプのノイズ電圧500Vp-p, ノイズ幅1μs, ノイズ周波数25～60Hzのノイズシミュレータによる	
耐電圧	DC外部端子一極-アース間 AC500V 1分間	
絶縁抵抗	DC外部端子一極-アース間 DC500V 絶縁抵抗計にて10MΩ以上	
保護等級	IP1XB	
質量	0.11kg	
外部接続方式*1	通信部	通信用ワンタッチコネクタ (伝送回路) (5ピン・圧接タイプ、コネクタ用プラグは別売): A6CON-L5P (オプション) 通信用オンラインコネクタ: A6CON-LJ5P
	電源部	電源・FG用ワンタッチコネクタ (ユニット電源、出力電源、FG) (5ピン・圧接タイプ、コネクタ用プラグは別売): A6CON-PW5P, A6CON-PW5P-SOD (オプション) 電源用オンラインコネクタ: A6CON-PWJ5P
	入出力部	センサコネクタ(e-CON) (4ピン・圧接タイプ、コネクタ用プラグは別売) (I/O信号)
適用 DIN レール	通信用コネクタ 適合ケーブル: FANC-110SBH, FA-CBL200PSBH, CS-110 電源・FG用コネクタ 0.66～0.98mm ² (AWG18) [φ2.2～3.0mm (A6CON-PW5P), φ2.0～2.3mm (A6CON-PW5P-SOD)] 素線径 0.16mm以上 絶縁被覆材: PVC (耐熱ビニル)	
適合電線サイズ	入出力用コネクタ	センサコネクタ(e-CON) コネクタ用プラグは別売 (適合サイズ: 0.08～0.5mm ² , 使用するコネクタ用プラグにより異なる) CC-Linkシステム小型タイプリモートI/Oユニット ユーザーマニュアル(詳細編) SH(名)-3307参照

*1 各コネクタの圧接方法は、CC-Linkシステム小型タイプリモートI/Oユニットユーザーマニュアル(詳細編) SH(名)-3307を参照してください

2. Accessory

Mounting bracket (2 pieces)

3. Operating Ambient Temperature


Use the module in the ambient temperatures of 0 to 55°C.

4. Specifications

Item	Description	
Number of output points	16 points	
Isolation method	Photocoupler	
Rated load voltage	12/24VDC (ripple ratio: within 5%)	
Operating load voltage range	10.2 to 26.4VDC	
Max. load current	0.1A/point, 1.6A/common	
Max. inrush current	0.7A, 10ms or less	
Leakage current at OFF	0.1mA or lower	
Max. voltage drop at ON	0.1VDC or lower (TYP) 0.1A 0.2VDC or lower (MAX) 0.1A	
Output type	Source type	
Protection function	Overload protection, overheat protection	
Response time	OFF→ON 1ms or less ON→OFF 1ms or less (resistive load)	
External power supply	Voltage 12/24VDC (ripple ratio: within 5%) (allowable voltage range 10.2 to 26.4VDC) Current 11mA or lower (at 24VDC and all points ON), excluding external load current	
Surge suppressor	Zener diode	
Supply current for connected device	1.0A or lower/common	
Wiring method for common	16 points/common (3-wire, sensor connector (e-CON) type)	
Number of occupied stations	32-point assignment/station (16 points used)	
Module power supply	Voltage 24VDC (ripple ratio: within 5%) (allowable voltage range 20.4 to 26.4VDC) Current 45mA or lower (at 24VDC and all points ON)	
Noise immunity	Noise voltage 500Vp-p, noise width 1μs, noise frequency 25 to 60Hz (DC type noise simulator condition)	
Withstand voltage	500VAC for 1 minute between all DC external terminals and ground	
Insulation resistance	10MΩ or higher between all DC external terminals and ground (500VDC insulation resistance tester)	
Protection degree	IP1XB	
Weight	0.11kg	
External connection system*1	Communication part	One-touch connector for communication (Transmission circuit) 5-pin IDC plug is sold separately: A6CON-L5P <Optional> Online connector for communication: A6CON-LJ5P
	Power supply part	One-touch connector for power supply and FG (Module power supply, I/O power supply, FG) 5-pin IDC plug is sold separately: A6CON-PW5P, A6CON-PW5P-SOD <Optional> Online connector for power supply: A6CON-PWJ5P
	I/O part	Sensor connector (e-CON) (I/O signals) 4-pin IDC plug is sold separately.
Applicable DIN rail	1H35-7.5Fe, 1H35-7.5Al (compliant with IEC 60715)	
Applicable wire size	Connector for communication	Applicable cable: FANC-110SBH, FA-CBL200PSBH, CS-110 0.66 to 0.98mm ² (AWG18) [φ2.2 to 3.0mm (A6CON-PW5P), φ2.0 to 2.3mm (A6CON-PW5P-SOD)] Wire diameter: 0.16mm or more Insulating coating material: PVC (heat-resistant)
	Connector for power supply and FG	0.66 to 0.98mm ² (AWG18) [φ2.2 to 3.0mm (A6CON-PW5P), φ2.0 to 2.3mm (A6CON-PW5P-SOD)] Wire diameter: 0.16mm or more Insulating coating material: PVC (heat-resistant)
	Connector for I/O	Sensor connector (e-CON), Applicable connector plugs are sold separately. (applicable wire size: 0.08 to 0.5mm ² , depending on the connector plug) Refer to the CC-Link System Compact Type Remote I/O Module User's Manual (SH(NA)-4007).


*1 For how to press connectors, refer to the CC-Link System Compact Type Remote I/O Module User's Manual (SH(NA)-4007).

外部接続 External connection

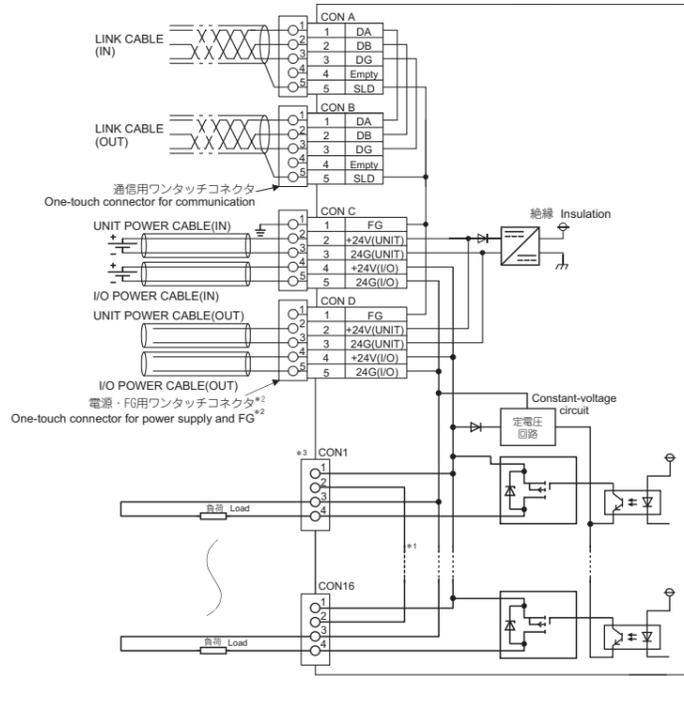

- *1 CON1-16の2ピンは内部で接続されているため使用できません。
Since all No.2 pins of CON1 to CON16 are connected inside the module, they cannot be used.
- *2 電源・FG用ワンタッチコネクタのアキには必ず無配線のプラグを装着してください。
Attach an un-wired connector plug to an unused one-touch connector for power supply and FG.
- *3 センサコネクタ(e-CON)を誤配線した場合、誤動作や電源の短絡により故障する恐れがあります。
Wiring the sensor connector (e-CON) incorrectly may cause malfunction or failure due to short circuit of the power supply.

端子配列 Terminal layout

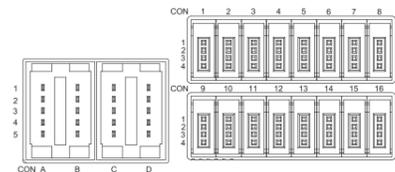

ユニット正面から見た場合
Viewed from the front of the module

5. 改正中国 RoHS による電器電子製品中の有害物質使用制限表示

「电器电子产品有害物质限制使用标识要求」の表示方式



Note: This symbol mark is for China only.

含有有害6物質の名称, 含有量, 含有部品
本製品中所含有の有害6物質の名称, 含有量, 含有部品如下表所示。

製品中有害物質の名称及含量

部品名称	有害物質	鉛 (Pb)	汞 (Hg)	銅 (Cd)	六価鉻 (Cr(VI))	多環芳香族 (PBB)	多環二苯醚 (PBDE)
印刷基板		×	○	○	○	○	○
外壳		○	○	○	○	○	○

本表格依据SJ/T 11364 的规定编制。

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。