



#### **FACTORY AUTOMATION**

## **MELFA FAMILY**

#### **Industrial robots**



- Articulated-arm robots
- Programming software
- SCARA robots
- Simulation
- High-performance controllers

# Global impact of Mitsubishi Electric







Through Mitsubishi Electric's vision, "Changes for the Better" are possible for a brighter future.

#### Changes for the Better

We bring together the best minds to create the best technologies. At Mitsubishi Electric, we understand that technology is the driving force of change in our lives. By bringing greater comfort to daily life, maximising the efficiency of businesses and keeping things running across society, we integrate technology and innovation to bring changes for the better.

Mitsubishi Electric is involved in many areas including the following

#### **Energy and electric systems**

A wide range of power and electrical products from generators to large-scale displays.

#### **Electronic devices**

 $\label{lem:conductor} A\ wide\ portfolio\ of\ cutting-edge\ semiconductor\ devices\ for\ systems\ and\ products.$ 

#### Home appliance

Dependable consumer products like air conditioners and home entertainment systems.

#### Information and communication systems

Commercial and consumer-centric equipment, products and systems.

#### **Industrial automation systems**

Maximising productivity and efficiency with cutting-edge automation technology.

## **Contents**

Features in detail	4-5	
Precision and flexibility	6-7	
The technology in detail	8-9	
Software for industrial robots	10	
Your solution partner	11	

## **Features in detail**

#### Robots from € 1.65/hr

Calculated on the basis of their average service life, around 6–7 years in typical applications, Mitsubishi Electric robots have a surprisingly low total cost of ownership at around € 1.65 per hour for both purchasing and operation.



#### Versatility

Small robots have been used in more than 30,000 applications in widely differing fields since 1978 – and what is more they work around the clock, 24 hours a day, 7 days a week.






Suitable for high-precision component placement with repeatability performance of  $\pm 0.005$  mm and a cycle period of just 0.28 s.



The World's first twin-arm SCARA robot with parallel structure for maximum precision.

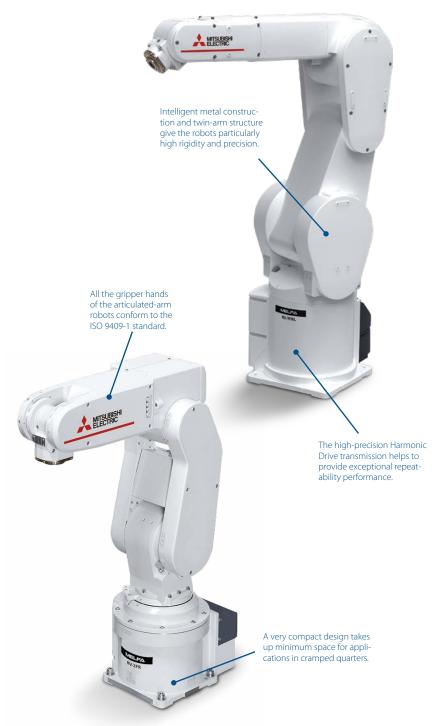

#### Simple programming

A powerful range of robots needs an equally powerful and user-friendly programming interface. Mitsubishi Electric's RT Toolbox3 packages are powerful programming and simulation software tools tailored precisely for the needs of your robots.



#### **Network capabilities**

Network connections like Ethernet, ProfiBus, ProfiNet, DeviceNet<sup>™</sup> and CC-Link make it easy to integrate Mitsubishi Electric robot controllers in to larger systems, providing users with access to every step of the process.




## **Precision and flexibility**



#### **Pharmaceutical industry**

Modular control concepts and pharmaceutical industry certification make MELFA robots the ideal partner in the life sciences sector. Integral database connection and an all-embracing control concept facilitate modular and flexible applications in any field where quality and production data have to be backed up in a comprehensible manner.



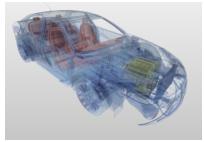

#### **Food and drink**

Increasing hygiene demands, a variety of products and the traceability of production processes are ensured with MELFA robots – now and in the future.

Innovative details and stringent guidelines for MELFA robots guarantee assured quality even in ultra-clean applications.

#### **Automotive industry**

Highly accurate and extremely flexible MELFA robots are used whenever every little detail matters – haptic measurement, quality assurance and assembly of complex components. MELFA robots carry out their tasks around the clock and at full speed.

#### **Packaging**

High-performance and flexibility are a matter of course for MELFA robots. It goes equally without saying that all Mitsubishi Electric automation components can be incorporated. These include additional axes, PLC controllers and operating terminals. Furthermore, cameras can be connected and robots synchronised with conveyor belts. These functions enable packaging tasks to be carried out reliably, quickly and continuously.







## **Electronics and mechanical engineering**

Mitsubishi Electric provides a wide range of products from parallel-arm robots for the micro assembly of miniature components to fully sealed articulated arm robots. There are no applications which are not suitable for MELFA robots. Whether cleanroom or dirty, oily and dusty environments, the product range always includes the right robot for your application.

#### **Training**

Learning from practical experience – a goal which can be achieved in a training environment with the compact, lightweight MELFA robots. Simple programming, simulation options and experienced teachers make entry into the field of robotics easy.

No limits – thanks to standard real-time interfaces and simple programming, MELFA robots provide all sorts of options for using the robots as manipulators, even for complex university research projects.

## The technology in detail





#### **More safety**

The DIN ISO-10218 safety standard is common to all robots and therefore guarantees safe operation in all applications. Mitsubishi Electric's supplementary product range including safety controllers enables the robots to be integrated into a common safety concept. Ready-made example projects make it possible for anyone to put together even complex systems quickly and effectively.

The optional "MELFA SafePlus" safety technology for the F series robot controllers has functions available like reduced safe speed control, safe limited control range and safe torque monitoring, which can be activated via safety inputs. Logic for each safe I/O can be edited and in combination with the postion monitoring function a safe system can be constructed without using a Safety PLC.

Based on these functions, saving of safety equipment and a reduction of safeguarded space is possible which leads to a reduction of cost and space while meeting all safety requirements at the same time.

## Sensor-controlled robots with image processing

Mitsubishi Electric's industrial robots can be connected to any object recognition camera system via the Ethernet port or the robot controller's RS232 interface. This enables static and moving parts to be detected with the correct positional information.

The possible uses of sensor-controlled robots in factory automation are manifold. They range from component assembly via quality control and the reworking of workpieces to the location and removal of objects from a conveyor belt.


## F-Q series – full PLC functionality in the robot

As robots are never installed on a standalone basis, the system must be easy to integrate into its working environment to enable it to communicate with PLC and motion systems as well as operating panels and other systems. Together with the modular robot CPU, the Mitsubishi Electric iQ Platform provides the ideal basis for integrating the full functionality of a PLC into the robot controller – once again demonstrating the company's role as a pioneer in automation technology.

## Simple integration into complex applications

Up to eight additional axes can be connected directly to the robot controller with just one cable. Of these, two axes can be used as additional interpolating axes, e.g. as the seventh and eighth robot axis.

The special feature compared with other systems is that all additionally connected axes can be programmed in exactly the same way as the robot, using the same Teach-Box or the standard RT ToolBox3 software. This avoids the additional expense of software, training and programming.

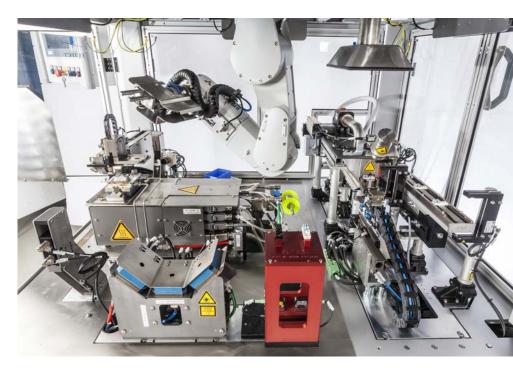





## More efficient monitoring and maintenance functions


Direct connection of the company's infrastructure GOT operating terminal via Ethernet opens up a number of monitoring, control and maintenance functions for the robot. The correction of taught points, the backup and restore function, the entry of production data, and the selection and control of processes are just some of the options provided by the Mitsubishi Electric operating terminal in conjunction with MELFA robots.

## Open communication for PC connection

The robot controller can be connected to an MES system, for example for easily and quickly changing manufacturing sequences without stopping production.

Furthermore, the robot can be initiated for any kind of movement in real time. Flexible and complex movements, which are generated graphically on the PC, for example, can be realised in this way.

## Programming and simulation

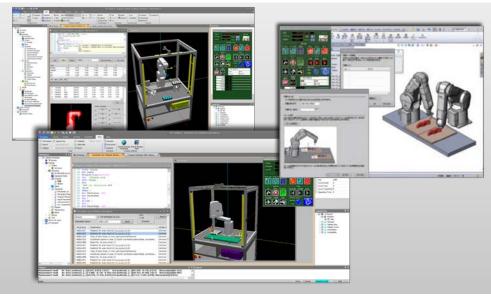

Simulation of a Mitsubishi Electric industrial robot directly in an application

High-performance industrial robots also require high-performance software. For this reason, more and more automation engineers are opting for the versatile and convenient Mitsubishi Electric software. All tasks, such as the creation of projects, programming and simulation, are implemented intuitively and mesh perfectly with one another. This results in optimum movement sequences in the shortest possible installation and commissioning time.

#### **Programming**

Offline and online programming with simulation

#### Simulation

3D-CAD import and up to 16 robots can be simulated in one project; additional axes can be connected and positions taught directly in the simulation.

#### **Parameters**

Parameter structure for the simple parameterisation of functions; complete overview of all parameters with display of modified values only.

#### Maintenance

Full backup and restore function and monitoring of service intervals, production runtimes and product cycles.

#### Monitoring

Display of load currents, position values, variables and variable positions. Monitoring of switching signals, program execution and fault history.

#### **Documentation**

Full project documentation with output of modified parameters, program code and positions.



## 3D-simulation with RT Toolbox3 Pro

The RT Toolbox3 Pro add-in tool for SolidWorks enables a robot in a production system to be simulated on a PC, and converts the workpiece paths into robot position data.

Supplementing the SolidWorks platform by the addition of RTToolbox3 Pro extends the simulation functions and opens up new simulation possibilities.

- The CAD data of the system can be directly imported
- Grippers can be connected directly to the robot
- Handling of workpieces
- Offline teaching in a 3D environment
- Creation of robot programs
- Collision-checking between robot and system environment

## The convenient operating terminal for mobile teaching

The R56TB is a powerful operating panel for carrying out all tasks directly at the robot, from controlling the robot and displaying the loads by means of the input/output display to complete program creation and parameterisation. The comprehensive functions ensure optimum utilisation of the robot system and thus reduce setup times.

The integral USB port enables data to be exchanged conveniently, and complete controller backups can be uploaded and downloaded through a memory stick.



**Technical Information Section** 

#### Further publications within the industrial automation range

### **Brochures**

#### **HMI family**

Product catalogue for operator terminals, supervision software and accessories

#### MR family

Product catalogue for servo amplifiers and servo motors as well as motion controller and accessories

#### **FX family**

Product catalogue for programmable logic controllers and accessories for the MELSEC FX family

#### Q/L family

Product catalogues for programmable logic controllers and accessories for the further MELSEC PLC series

#### **FR** family

Product catalogue for frequency inverters and accessories

#### LVS family

Product catalogue for low voltage switchgears, magnetic contactors and circuit breakers

#### **Automation Book**

Overview on all Mitsubishi Electric automation products, like frequency inverters, servo/motion, robots etc.

#### **Further service supplies**

This product catalogue is designed to give an overview of the extensive range of Mitsubishi Electric MELFA RV-FR, RH-FRH and RP-ADH series. If you cannot find the information you require in this catalogue, there are a number of ways you can get further details on configuration and technical issues, pricing and availability.

For technical issues visit the https://eu3a.mitsubishielectric.com website.

Our website provides a simple and fast way of accessing further technical data and up to the minute details on our products and services. Manuals and catalogues are available in several different languages and can be downloaded for free.

For technical, configuration, pricing and availability issues contact our distributors and partners.

Mitsubishi Electric partners and distributors are pleased to answer your technical questions or help with configuration building. For a list of Mitsubishi Electric partners please see the back of this catalogue or alternatively take a look at the "contact us" section of our website.

#### About this product catalogue

This catalogue is a guide to the range of products available. For detailed configuration rules, system building, installation and configuration the associated product manuals must be read. You must satisfy yourself that any system you design with the products in this catalogue is fit for purpose, meets your requires and conforms to the product configuration rules as defined in the product manuals.

Specifications are subject to change without notice. All trademarks acknowledged.

© Mitsubishi Electric Europe B.V., Factory Automation - European Business Group

The products of Mitsubishi Electric Europe B.V., that are listed and described in this document, are neither subject to approval for export nor subject to the Dual-Use List.

#### A complete lineup

without saying.

#### Large range of robot models makes selection easy

Mitsubishi Electric produces a comprehensive range of robot models to cater to the full spectrum of modern needs.

All Mitsubishi Electric robots are powerful, fast and compact – that goes almost

The product range includes the almost universal articulated-arm robots with 6 degrees of freedom and payloads of 2 kg to 70 kg and SCARA robots with 4 degrees of freedom and payloads of 3 kg to 20 kg for assembly and palletising tasks.

Three special models are the unique high-precision robots with their parallel arm structure for very fast micro handling tasks with payloads of 1 kg to 5 kg as well as the flexible high-speed SCARA robots for ceiling mounting.

#### Vertical, multiple-joint type (RV)



		-							
Туре		RV-2FR(B)	RV-2FRL(B)	RV-4FRLM	RV-7FRM	RV-7FRLM	RV-7FRLLM		
Number of axis			6	6	6	6	6		
Payload	kg		2	4	7	7	7		
Maximum reach radius	mm	504	649	649	713	908	1503		
Environmental	Standard	IP	30	IP67	IP67	IP67	IP67		
specifications	Clean	-	_	(ISO class 3 optional)					
			— (ISO class 3 optional) (ISO class 3 optional) (ISO class 3 optional)						
Controller				CR800-D/CR800	-R + R16RTCPU				

#### Horizontal, multiple-joint type (RH/RP)





Туре		RP-1ADH	RP-3ADH	RP-5ADH	RH-1FRHR	RH-3FRHR
Number of axis		4	4	4	4	4
Payload	kg	1	3	5	1	3
Maximum reach radius	mm	150x105 (corresponds to DIN A6)	210x148 (corresponds to DIN A5)	297x210 (corresponds to DIN A4)	550	350
Environmental	Standard	IP30	IP30	IP30	IP20 (IP65 optional)	IP20 (IP65 optional)
specifications	Clean	_	_	_	_	(ISO class 5 optional)
Controller			CR1DA		CR800-D/CR800	-R + R16RTCPU

#### Advanced intelligence, safety and integration

The concept of FR robots offers a simple approach to advanced and flexible production to handle all automation needs. This concept is based on 3 key features

- Intelligence: "MELFA Smart Plus" offers greater accuracy and shorter startup times, making installation simpler and more advanced tasks possible.
- Safety: A comprehensive range of safety functions, including position and speed monitoring, allow work to be conducted in cooperation with people
- Integration: MELSEC iQ-R compatible robot controller and the e-F@ctory integrated FA solution offers seamless integration of robots and IT systems.





RV-13FRM	RV-13FRLM	RV-20FRM	RV-35FM <sup>①</sup>	RV-50FM <sup>①</sup>	RV-70FM <sup>①</sup>
6	6	6	6	6	6
13	13	20	35	50	70
1094	1388	1094	2050	2050	2050
IP67	IP67	IP67	IP40/IP67	IP40/IP67	IP40/IP67
(ISO class 3 optional)	(ISO class 3 optional)	(ISO class 3 optional)	_	_	_





CR800-D/CR800-R + R16RTCPU





RH-3FRH5515	RH-6FRH5520	RH-12FRH8535	RH-20FRH10035	RD-1F500 <sup>①</sup>	RD-1F800 <sup>①</sup>	RD-1F1100 <sup>①</sup>	RD-1F1300 <sup>1</sup>
4	4	4	4	4	4	4	4
3	6	12	20	2	3	3	3
550	550	850	1000	500	800	1100	1300
IP20	IP54 (IP65 optional)	IP54 (IP65 optional)	IP54 (IP65 optional)	IP65	IP65	IP65	IP65
(ISO class 3 optional)	(IP69K optional)	(IP69K optional)	(IP69K optional)	(IP69K optional)			





CR800-D/CR800-R + R16RTCPU

#### ■ Model designation









RH-1FRHR5515-D

RH-6FRH5520N-R

#### Vertical, multiple-joint type (RV)

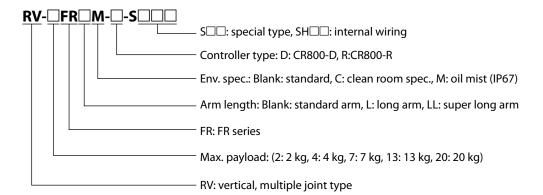

#### Horizontal, multiple-joint type (RH)

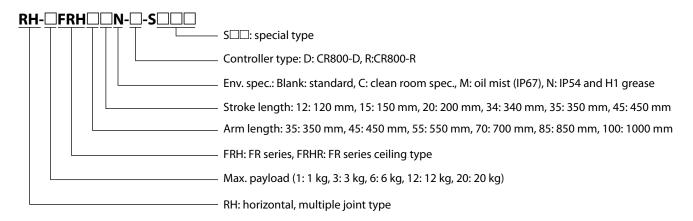


#### ■ Shortened takt times

#### Improved control performance

Produced the fastest operating performance in its class using high-performance motors and unique driver control technology developed by Mitsubishi Electric.

- Enabled high torque output at high rotational speed, shortening acceleration/deceleration time
- Shortened positioning time for improved device throughput
- Continuous operability improved

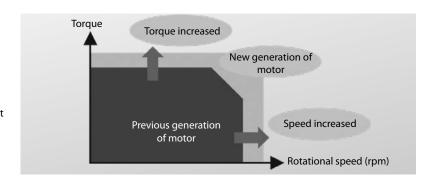

#### ■ Improved tooling performance

#### Internal routing of hand wiring and signal cable


- Internal routing of cables and air hoses
- No interference with cables around devices
- Reduced risk of wiring disconnection
- ullet Optional models of RV with internal wiring and hoses up to the hand are available (-SH $\square\square$ )



#### Flexibility with internal Ethernet cable tools

Internal installation of wiring and piping for connecting to vision sensors enabled.


- Hand: 8 input points/8 output points
- Ethernet cable for the vision sensor
- Additional cables to control vision systems or other sensors

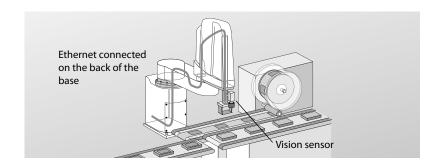

#### ■ Full use of installation space

#### **Expanded pivotal operating range**

- Improved flexibility for robot layout design
- More effective use of access space around the entire perimeter
- Shortened movement distances, enabling takt times to be shortened

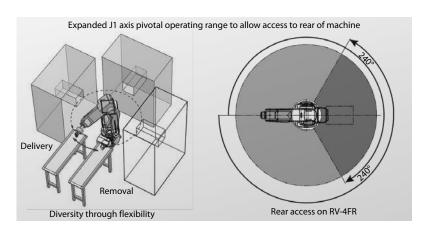

#### ■ Improved user friendliness

#### Simple automatic operation from the teaching box

- Same functions as on the operating panel of the robot controller
- Monitoring screens can be set up individually to match the needs of user debugging conditions
- Enabled for R32TB and R56TB
- User definition screens for customized operation screens and monitoring




Enables automatic operation of servo motor on/off, startup and shutdown, reset, program selection, and other operations.

#### GOT backup/restore functions (Supported on GT14, GT15, GT16, GT21, GT23, GT25 and GT27)

Robot data on the GOT can be backed up to and restored from a CF-/SD-card or USB memory stick. Due to the direct Ethernet connection a PC is not required

- This helps prevent data from being lost due to the empty battery/battery or robot malfunction.
- Data can be saved after periodic maintenance tasks are performed or when unexpected errors occur. Dramatically improves serviceability

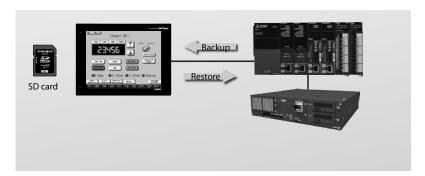

#### Maintenance (log function)


Information before and after errors occur (state changes, I/O, external system variables, etc.) and program run states can automatically be transferred to an FTP server as log data or saved on an SD card. Operation logs can also be downloaded, enabling efficient analysis of error causes.



#### **Easier robot information management**

Memory is included in the robot body and used to store robot-specific information. This makes it easy to switch robot controllers.


Information can also be collected without visiting the workplace, simplifying the formulation of maintenance plans.

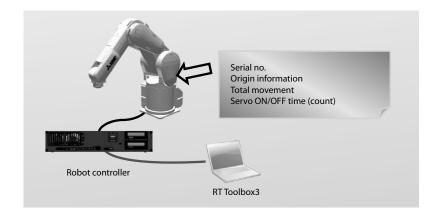

#### **■** Improved accuracy

#### **Active gain control**


- Optimal motor control tuning settings in real-time based on robot operating position, posture and load conditions
- Improved palletization accuracy
- Improved trajectory accuracy

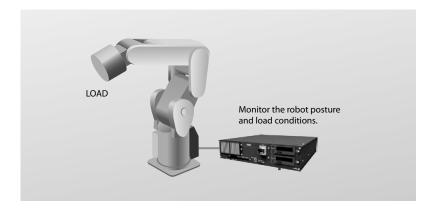

#### Simplified tool length setting

Tool settings for the tool coordinate system can be set by attaching the tool and using three to eight of the same teaching points.

- Eliminates errors introduced when the tool was made.
- Higher precision
- Saving time, since measuring the tool is not necessary.

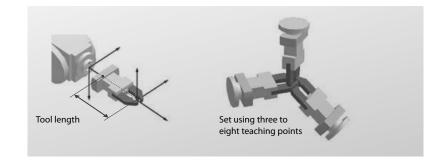


#### ■ Adaptation to operation

#### **Compliance control**

This function reduces the rigidity of the robot arm and tracks external forces.

- Special hands and sensors are unnecessary
- Reduced tooling costs
- Shortened line stop times

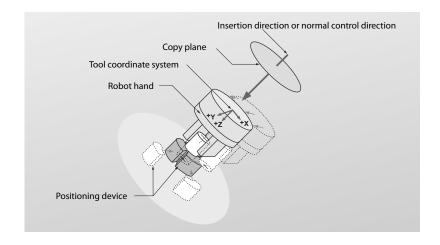


#### Connection to peripheral devices

#### **Network vision sensor**

The robot and camera can be easily simultaneously calibrated through a simple process using vision sensor setting tools.


- Simple connection between the robot and camera using Ethernet
- Simple control using vision control commands in the robot programs
- Shortened takt times
- Reduced system costs

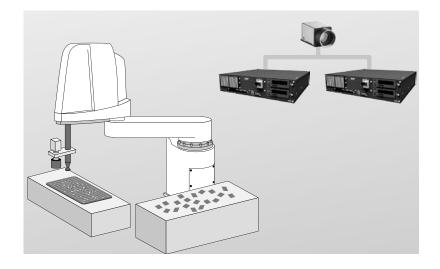

#### **Tracking**

Transport, alignment, and installation work, etc. can be performed while robots are tracked with the workpiece on the conveyor without stopping the conveyor.


- Higher throughput of components
- Easy programm creation (MELFA BASIC V/VI)
- No need for an additional positioning device
- Prediction of workpiece position for better tact times
- Circular tracking available

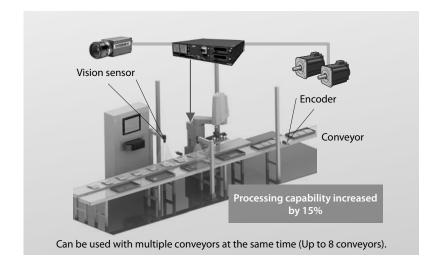

#### **Additional axis function**

The layout can be set up to include the robot traveling axis and turntable as well as user machines separate from the robot such as loaders and positioning devices.


- Up to 8 additional axes can be controlled by the controller
- No additional motion control hardware necessary
- Plug-and-play compatibility with the MELSERVO MR-J4-B servos
- Two axes can be contolled simultaneous with the robot
- No need of special programming knowledge, because robot software is used.

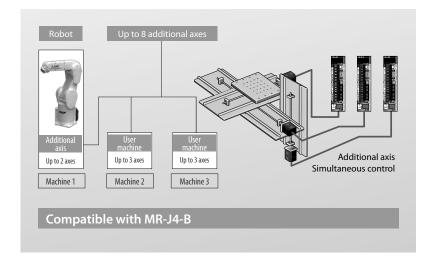

#### ■ CC-Link IE Field Network Basic function

FR series robot controller supports the slave stations of "CC-Link IE Field Network Basic" as a built-in function


- CC-Link IE Field Network Basic compatible products and Ethernet compatible products can be connected on the same Ethernet communications line
- MELSEC iQ-R/iQ-F/Q/L series PLC CPU and the MELFA FR series robot controller have built-in Ethernet as standard, so no dedicated option is required
- enabling a highly-flexible and cost-effective system

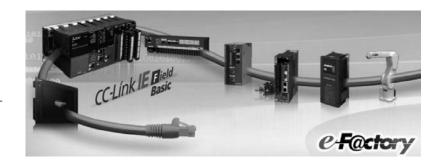

#### ■ Collision avoidance (R type controllers only)

The robot is stopped, even before collisions can occur. This is possible due to the fast position control, that ist implemented in the iQ Platform as a standard feature.

- Robots can operate together in a confine space without interfereing with each other
- Reduces the number of recovery man-hours required after a collision
- Already represented in the simulation of the RT Toolbox3
- Can be used in Teach-Mode already

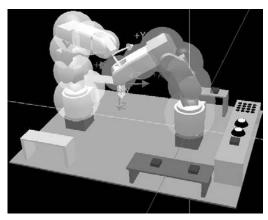


Possible collisions with other robots are avoided.

#### ■ Coordinated control (R type controllers only)

Enables coordinated control between multiple robots through CPU connection between the robots.

- Easy to operate by predefined default function
- Enables transport of lengthy or heavy objects using smallsized robots
- Programming as already known by using standard commands

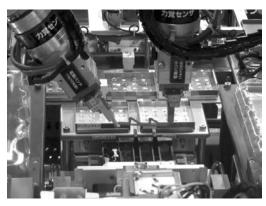


Enables installation work to be completed while gripper positions between robots are maintained.

#### Intelligent technology


#### Force sensor

- Monitors the force applied to the robot gripper to handle processes like a human operator
- Keeps the force constant so that the workpiece can be handled without causing damage
- Complex assembly tasks achieved through techniques such as phase matching
- Force log function for checking the quality check

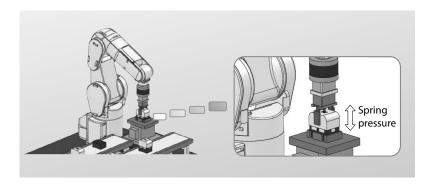


#### Arm temperature compensation

- Monitors temperature of motor encoders
- Improves positioning accuracy by compensating for thermal expansion in the robot arm

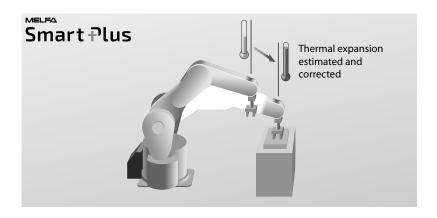


#### Calibration assistance

- Reduces the time for calibration during start up and improves position accuracy
- Automatically correcting the robot and camera coordinates
- Automatically correcting the robot and workpiece coordinates
- Adjust the robot location relative to other robots

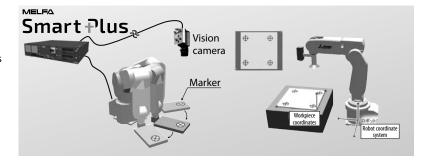

#### Coordinate control for additional axes

- Allows synchronized operation when a robot is installed on an additional axis (linear axis) to handle large workpieces which exceed robot's working range
- Allows synchronized operation when tracking of the robot with a workpieces on an additional axis (linear axis) is executed

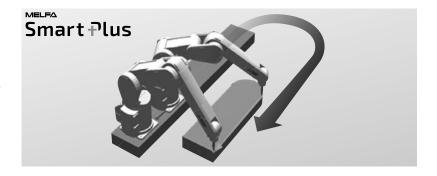

#### **■** MELFA SafePlus features


"MELFA SafePlus" safety technology for the FR series robot controllers

- Supported Safety functions:
   STO (Safe Torque Off), SS1 (Safe Stop 1), SS2 (Safe Stop 2),
   SOS (Safe Operation Stop), SLS (Safely-Limited Speed),
   SLP (Safely-Limited Position)
- All functions follow the safety standards EN ISO 10218-1 (Industrial robots), EN ISO 13849-1 (Safety of machinery), EN 62061/IEC 61508 (Functional safety) and EN 61800-5-2 (Safety function drive).

# MELFΔ SafePlus Keeping the operator and equipment safe even in close proximity of the robot

#### Reduced speed control (safe limited speed, SLS)


Function to control the robot speed with safe limted speed to secure operator's safety when signaled via safety input signals. Up to four different zones with different limited speed can be activated. Operator can be interactive while the robot is running in automatic mode, but with safe low speed.

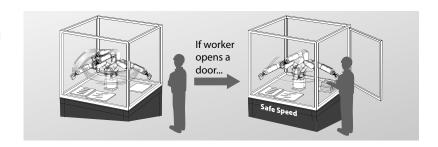

#### Limited range control (safe limited position, SLP)


Function to control the robot movement range and to ensure that the robot does not exceed the set limit activated by the safety input signal. This function monitors the robot arm. If the robot or the attached hand exceeds any set plane, the robot will stop immediately.

Independent areas can be defined for different safety situations.

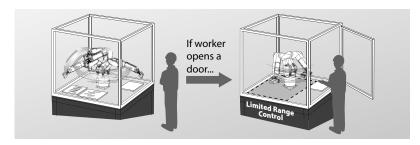

#### **Safety logic editing**


Expands the dual safety channels to 8 inputs and 4 outputs. Logic for each safe I/O can be edited and in combination with the postion monitoring function a safe system can be constructed without using a Safety PLC.

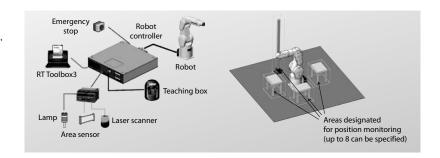

#### **Collision detection function (Standard feature)**

This function detects if the arm collides with an obstacle while teaching or operation, and helps to reduce damaging the robot arm and tools. The detection level can be changed according to the protection targets.

The operation which should follow after the collision detection can be programmed to suit to the application, for example stop immediatly and show error or retract and show then the error.

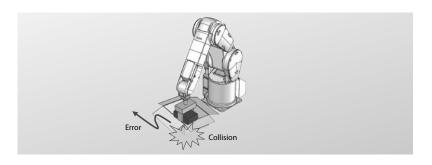

#### ■ Special functions with GOT terminals and the iQ Platform

#### **Shared memory expansion**

Enhanced efficiency of monitoring and maintenance operations onsite using a single GOT (display device) as the Human Machine Interface (HMI).


- Enables the robot to be controlled from the GOT even without a teaching box
- Current robot position data, error information, and other items can be displayed easily on the GOT
- Connection with a single Ethernet cable and direct access to the control unit
- 8192 input an output points can be exchanged via Ethernet connection








Jog/hand operation screen

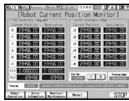

Current position monitor screen

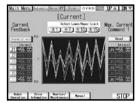

Current value and load factor monitor screen



Maintenance forecast screen




Manual/video display menu

#### Direct execution function for programmable controllers

Robots can be controlled easily using programmable controller language.

- Control of system operation using an single programmable controller
- Direct changing of system specifications via programmable controller
- Direct handling of troubleshhooting
- Simple movement to teached positions by PLC program
- No need to use any robot programs

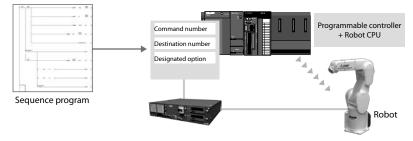

	Details
Operation	Joint-interpolated motion Linear-interpolated motion
Motion control	Designated override Designated acceleration/deceleration settings Designated speed Toestings Designated auxiliary motion Opening/closing of hand

## אסטטנא

#### ■ Industrial robots RV-2FR(B)/RV-2FRL(B)



RV-2FR(B)


#### The articulated arm robots RV-2FR(B)/RV-2FRL(B)

The compact and light RV-2FR(B)/RV-2FRL(B) can be seamless integrated into different automation systems. Flexibility and the wide range of motion permits acting in applications with limited space, like mounting, assembling, palletising, sorting or bonding. Even the basic model is available with a fully equipped standard controller or as PLC robot with integration onto the iQ Platform.

#### **Highlights:**


- 2 different arm length with 504 mm and 649 mm
- Only 19/21 kg weight and extremely compact
- Highest flexibility
- Floor, wall and ceiling installation possible
- Position repeatability of ±0.02 mm

			Specifications					
Characteristics/Functions			RV-2FR-D/ RV-2FR-R	RV-2FRB-D-S25/ RV-2FRB-R-S25	RV-2FRL-D-S25/ RV-2FRL-R-S25	RV-2FRLB-D-S25/ RV-2FRLB-R-S25		
Degrees of freedom (no. of axes)			6					
Installation posture			Floor, ceiling or wall mounting po	ossible				
Structure			Vertical multiple-joint type					
Drive system			AC servo axes J1, J4, J6: no brake	AC servo (brakes on all axes)	AC servo axes J1, J4, J6: no brake	AC servo (brakes on all axes)		
Position detection method			Absolute encoder					
Daylond canacity	rated	l.a	2					
Payload capacity	maximum	kg	3					
Arm reachable radius (to the center poir	nt of the J5 axis)	mm	504		649			
	waist (J1)		480 (-240-240)		480 (-240-240)			
	shoulder (J2)		240 (-120-120)		237 (-117–120)			
No. 2004!	elbow (J3)	4	160 (0-160)		160 (0-160)			
Operating range	wrist twist (J4)	degree	400 (-200-200)		400 (-200–200)			
	wrist pitch (J5)		240 (-120-120)		240 (-120-120)			
	wrist roll (J6)		720 (-360-360)		720 (-360-360)			
	waist (J1)		300		225			
	shoulder (J2)		150		105			
	elbow (J3)		300		165			
Naximum speed	wrist twist (J4)	degree/s	450		412			
	wrist pitch (J5)		450		450			
	wrist roll (J6)		720		720			
Maximum composite speed		mm/s	4955		4200			
Cycle time (25x300x25 mm with 1 kg loa	ad)	sec	0.6		0.7			
Position repeatability		mm	±0.02					
Ambient temperature		°C	0 to 40					
Weight		kg	19		21			
	wrist twist (J4)		4.17					
Tolerable moment	wrist pitch (J5)	Nm	4.17					
	wrist roll (J6)		2.45					
	wrist twist (J4)		0.18 (0.27)					
Tolerable inertia	wrist pitch (J5)	kgm²	0.18 (0.27)					
	wrist roll (J6)		0.04 (0.1)					
Tool wiring			Hand input 4 points/hand output	4 points				
Tool pneumatic pipes			$\emptyset$ 4x4 (from the base level to the	gripper hand area)				
Supply pneumatic pressure		MPa	$0.5 \pm 10 \%$					
Gripper flange			ISO 9409-1-31.5					
Protection rating			IP30					
Robot controller			CR800-D/CR800-R + R16RTCPU					
Order information		Art. no.	313052/ 314029	313053/ 314030	313054/	313085/		

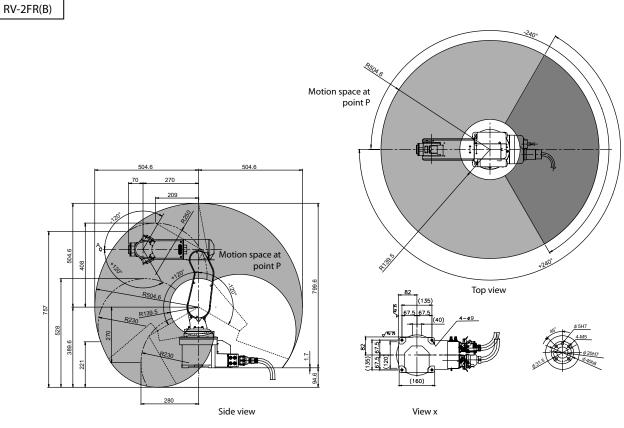

Dimensions: mm

RV-2FRL(B)

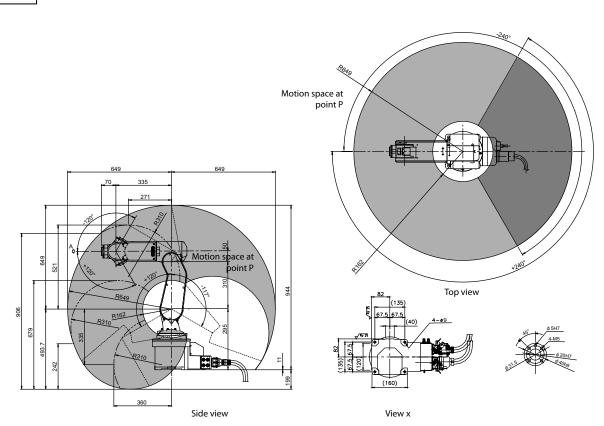

## אסמסנא

#### ■ Industrial robots RV-4FRLM



**RV-4FRLM** 

#### The articulated arm robots RV-4FRLM

The robots of the RV-4 FR series are designed for easy integration into existing work cells or innovative and compact applications. Features such as the direct control over local I/Os allows the robot to interact directly with sensors and actuators, speeding up and simplifying system building. A new innovative design allows a maximum of flexibility, so that the robot can expand his workspace to work faster and more flexible.

#### **Highlights:**

- Slim arm design
- IP67 protection
- Internal routed cables and air hoses
- Extended maintenance intervals
- 4 kg rated and maximal payload

Characteristics/Functions			Specifications		
			RV-4FRLM-D	RV-4FRLM-R	
Degrees of freedom (no. of axes)			6		
Installation posture			Floor, ceiling or wall mounting possible (wall n	nounting with limitations in the J1 axis)	
Structure			Vertical multiple-joint type		
Drive system			AC servo (brakes on all axes)		
Position detection method			Absolute encoder		
Payload capacity	maximum	kg	4		
Arm reachable radius (to the center p	oint of the J5 axis)	mm	649		
	waist (J1)		480 (±240)		
	shoulder (J2)		240 (-120—120)		
Operating range	elbow (J3)	degree	164 (0-164)		
operating range	wrist twist (J4)	uegiee	400 (±200)		
	wrist pitch (J5)		240 (-120-120)		
	wrist roll (J6)		720 (±360)		
	waist (J1)		420		
	shoulder (J2)		336		
	elbow (J3)		250		
Maximum speed	wrist twist (J4)	degree/s	540		
	wrist pitch (J5)		623		
	wrist roll (J6)		720		
Maximum composite speed		mm/s	9048		
Cycle time (25x300x25 mm with 1 kg	load)	sec	0.36		
Position repeatability		mm	±0.02		
Ambient temperature		$^{\circ}$	0-40		
Weight		kg	41		
	wrist twist (J4)		6.66		
Tolerable moment	wrist pitch (J5)	Nm	6.66		
	wrist roll (J6)		3.96		
	wrist twist (J4)		0.20		
Tolerable inertia	wrist pitch (J5)	kgm²	0.20		
	wrist roll (J6)		0.10		
Tool wiring			Hand input 8 points/hand output 8 points		
Tool pneumatic pipes			$\emptyset$ 6x2 for robot connection ( $\emptyset$ 4x8 from base po	rtion to forearm)	
Supply pneumatic pressure		MPa	0.54 (as overpressure if required)		
Gripper flange			ISO 9409-1-31.5		
Protection rating			IP67 (Optional clean room model available)		
Robot controller			CR800-D	CR800-R + R16RTCPU	
A 1 1 6 11			24200	N. 1077	
Order information		Art. no.	313089	314056	

#### RV-4FRL Motion space at point P 648.7 648.7 125 Point P Motion\* +240° space at 20 point P 648.7 Ppint P φ5H7 R140.4 R648.7 350 \$20H7 490

140

Dimensions: mm

Gripper flange ISO 9409-1-31.5

#### ■ Industrial robots RV-7FRM/7FRLM/7FRLLM



#### The articulated arm robots RV-7FRM/7FRLM/7FRLLM


The RV-7FRM with a nominal and maximum payload of 7 kg sets new benchmark standards for speed, flexibility, ease of integration and simplicity of programming. For an optimum work radius the robot is available in three versions with ranges from 713 mm to 1503 mm. Ethernet, USB, tracking, camera connection and additional axis connections are standard in all MELFA Robot Series.

#### **Highlights:**

- Cycle time of only 0.32 s (RV-7FRM) for a 12-inch cycle
- Drastically increased working range for J1 and J4 axis for a maximum working area
- Internal wiring
- IP67 protection
- Workspace radius of up to 1503 mm (RV-7FRLLM)

			Specifications			
Characteristics/Functions			RV-7FRM-D/ RV-7FRM-R	RV-7FRLM-D/ RV-7FRLM-R	RV-7FRLLM-D RV-7FRLLM-R	
Degrees of freedom (no. of axes)			6		6 (super long arm)	
Installation posture			Floor, ceiling or wall mounting	ng possible (wall mounting with limitations i	n the J1 axis)	
Structure			Vertical multiple-joint type			
Drive system			AC servo (brakes on all axes)			
Position detection method			Absolute encoder			
Payload capacity	maximum	kg	7			
Arm reachable radius (to the center	point of the J5 axis)	mm	713	908	1503	
	waist (J1)		480 (±240)		380 (±190)	
	shoulder (J2)		240 (-115-125)	240 (-110-130)	240 (-90—150)	
0	elbow (J3)	4	156 (0-156)	162 (0-162)	167.5 (-10–157.5)	
Operating range	wrist twist (J4)	degree	400 (±200)			
	wrist pitch (J5)		240 (-120-120)			
	wrist roll (J6)		720 (±360)			
	waist (J1)		360	288	234	
	shoulder (J2)		401	321	164	
	elbow (J3)	_	450	360	219	
Maximum speed	wrist twist (J4)	degree/s	337		375	
	wrist pitch (J5)		450			
	wrist roll (J6)		720			
Maximum composite speed		mm/s	11064	10977	15300	
Cycle time (25x300x25 mm with 1 k	kg load)	sec	0.32	0.35	0.63	
Position repeatability		mm	±0.02		±0.06	
Ambient temperature		°C	0-40			
Weight		kg	65	67	130	
	wrist twist (J4)		16.2			
Tolerable moment	wrist pitch (J5)	Nm	16.2			
	wrist roll (J6)		6.86			
	wrist twist (J4)		0.45			
Tolerable inertia	wrist pitch (J5)	kgm²	0.45			
	wrist roll (J6)		0.10			
Tool wiring			Hand input 8 points/hand output 8 points			
Tool pneumatic pipes			Ø 6x2 for robot connection (Ø4x8 from base portion to forearm)			
Supply pneumatic pressure		MPa	0.54 (as overpressure if requi	red)		
Gripper flange			ISO 9409-1-31.5			
Protection rating			IP67 (Optional clean room m	odel available)		
Robot controller			CR800-D/CR800-R + R16RTC	PU		
			313091/	313093/	313095/	
Order information		Art. no.	314058	314060	314062	

#### ■ Robot arms RV-7FRM/7FRLM/7FRLLM

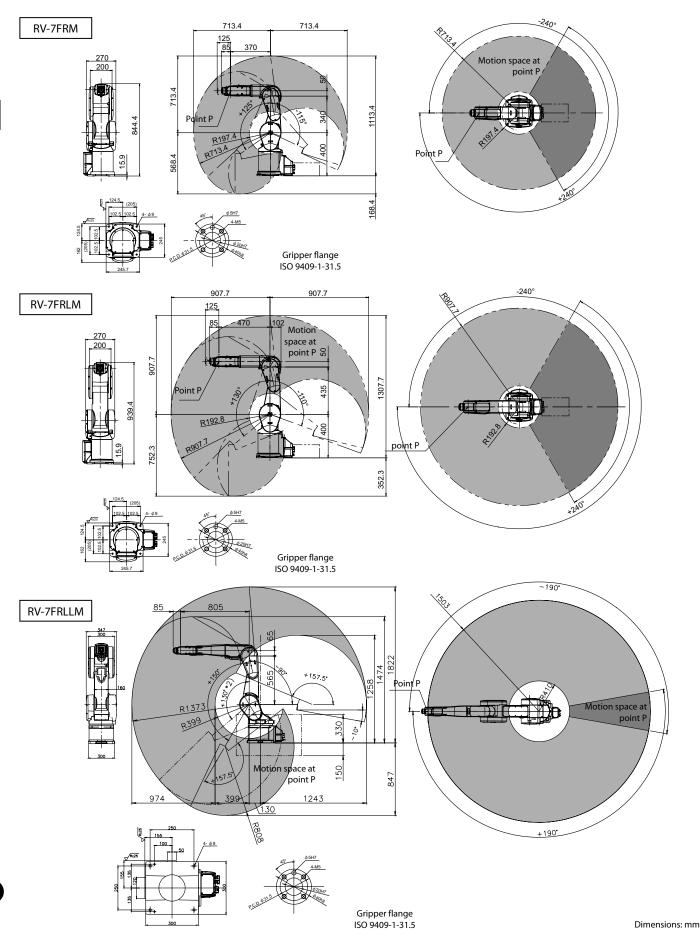

#### ■ Industrial robots RV-13FRM/RV-13FRLM/RV-20FRM



RV-20FRM

#### The articulated arm robots RV-13FRM/RV-13FRLM/ **RV-20FRM**


The high-performance robots RV-13 and RV-20 are specially suited for handling heavy loads. Due to the compact body and slim arm design, the robots can operate in a large work area. The anti-collision function of the iQ Platform models prevents collisions between robots which are working close together.

#### **Highlights:**

- internal routing of cables and air hoses through the robot arm
- New gears for quiet, precise positioning and movement
- maximum payload of 20 kg (RV-20FRM)
- Protection rating IP67 standard

		Specifications					
Characteristics/Functions			RV-13FRM-D RV-13FRM-R	RV-13FRLM-D RV-13FRLM-R	RV-20FRM-D RV-20FRM-R		
Degrees of freedom (no. of axes)			6	NV-13FNLM-N	RV-ZUFRM-R		
Installation posture				ng possible (wall mounting with limitations	in the J1 axis)		
Structure			Vertical multiple-joint type				
Drive system			AC servo (all axes with brakes	5)			
Position detection method			Absolute encoder				
	rated		12		15		
Payload capacity	maximum	kg	13		20		
Arm reachable radius (to the center po	oint of the J5 axis)	mm	1094	1388	1094		
	waist (J1)		380(±190)				
	shoulder (J2)		240 (-90-150)				
O	elbow (J3)		167.5 (-10-157.5)				
Operating range	wrist twist (J4)	degree	400 (±200)				
	wrist pitch (J5)		240 (-120-120)				
	wrist roll (J6)		720 (±360)				
	waist (J1)		290	234	110		
	shoulder (J2)		234	164	110		
	elbow (J3)	_	312	219	110		
Maximum speed	wrist twist (J4)	degree/s	375		124		
	wrist pitch (J5)		375		125		
	wrist roll (J6)		720		360		
Maximum composite speed		mm/s	10450	9700	4200		
Cycle time (25x300x25 mm with 1 kg	load)	sec		0.68	0.70		
Position repeatability		mm	±0.05				
Ambient temperature		°C	0-40				
Weight		kg	120	130	120		
	wrist twist (J4)		19.3		49.0		
Tolerable moment	wrist pitch (J5)	Nm	19.3		49.0		
	wrist roll (J6)		11				
	wrist twist (J4)		0.47		1.40		
Tolerable inertia	wrist pitch (J5)	kgm²	0.47		1.40		
	wrist roll (J6)		0.14				
Tool wiring			Hand input 8 points / hand o	utput 8 points			
Tool pneumatic pipes			Primary: Ø 6x2, secondary: Ø				
Supply pneumatic pressure		MPa	0.54 (as overpressure if requi	red)			
Gripper flange			ISO 9409-1-40				
Protection rating			IP67 (Optional clean room m				
Robot controller			CR800-D/CR800-R + R16RTC	PU			
Order information		Art. no.	313097/ 314064	313099/ 314066	312663/ 314068		

#### ■ Robot arms RV-13FRM/RV-13FRLM/RV-20FRM

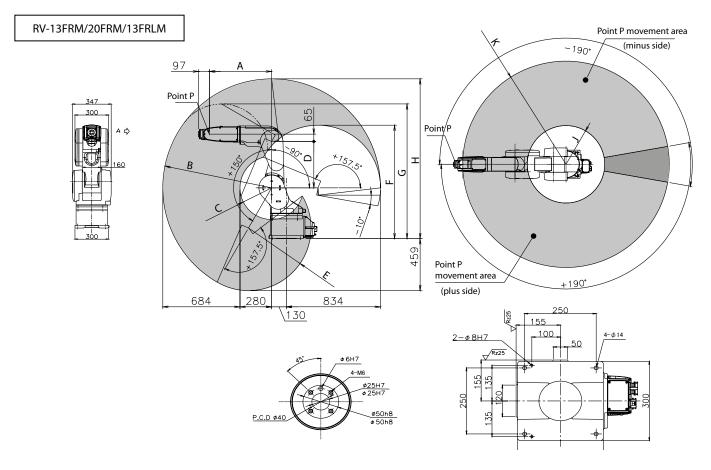

Dimensions: mm

#### Variable dimensions

Robot series	Α	В	C	D	E	F	G	Н	J	К
RV-13FRM/20FRM	550	R964	R280	410	R554	1004	1191	1414	R410	R1094
RV-13FRLM	690	R1258	R328	565	R693	1143	1416	1708	R458	R1388

#### ■ Industrial robots RV-35F/RV-50F/RV-70F



RV-35F/RV-50F/RV-70F

#### High capacity robots RV-35F/RV-50F/RV-70F

These robots with payload from 35 kg up to 70 kg are addressing applications that require higher payloads and longer reaches, including CNC machine tending, large material handling, palletizing and end of line packaging.


#### **Highlights:**

- Long reach arm up to 2050 mm for tasks can be spread farther apart and can accommodate larger parts and processes
- Multiple environmental protection ratings available in IP40 and IP67 protection ratings for various application requirements
- $\bullet \ \ \text{Seamless integration in the Mitsubishi Electric automation world}$

			Specifications		
Characteristics/Functions			RV-35F ①	RV-50F®	RV-70F ①
Degrees of freedom (no. of axes)			6		
Installation posture			Floor		
Structure			Vertical multiple-joint type		
Drive system			AC servo (all axes with brakes)		
Position detection method			Absolute encoder		
Payload capacity		kg	35	50	70
Arm reachable radius (to the center point of	f the J5 axis)	mm	2050		
	waist (J1)		330(±165)		
	shoulder (J2)		215 (-80-135)		
Operating range	elbow (J3)	degree	261(-90-171)		
operating range	wrist twist (J4)	uegree	720 (±360)		
	wrist pitch (J5)		250 (±125)		
	wrist roll (J6)		900 (±450)		
	waist (J1)		185	180	175
	shoulder (J2)		180	180	145
Maniferrore	elbow (J3)	d /-	190	180	165
Maximum speed	wrist twist (J4)	degree/s	305	255	235
	wrist pitch (J5)		305	255	235
	wrist roll (J6)		420	370	350
Maximum composite speed		mm/s	13450	13000	11500
Position repeatability		mm	±0.07		
Ambient temperature		°C	0-40		
Weight		kg	640		
	wrist twist (J4)		160	210	300
Tolerable moment	wrist pitch (J5)	Nm	160	210	300
	wrist roll (J6)		90	130	150
	wrist twist (J4)		16	30	30
Tolerable inertia	wrist pitch (J5)	kgm <sup>2</sup>	16	30	30
	wrist roll (J6)		5	12	12
Tool wiring			16 input points/16 output points		
Tool pneumatic pipes			Ø 10x2		
Supply pneumatic pressure		MPa	Max. 0.49		
Protection rating			IP67		
Robot controller			CR760 <sup>①</sup>		
Order information		Art. no.	On request	On request	On request

 $<sup>\</sup>textcircled{1} \ \ \mathsf{Please} \ \mathsf{contact} \ \mathsf{your} \ \mathsf{Mitsubishi} \ \mathsf{Electric} \ \mathsf{representative} \ \mathsf{for} \ \mathsf{more} \ \mathsf{details}.$ 

#### ■ Robot arms RV-35F/RV-50F/RV-70F

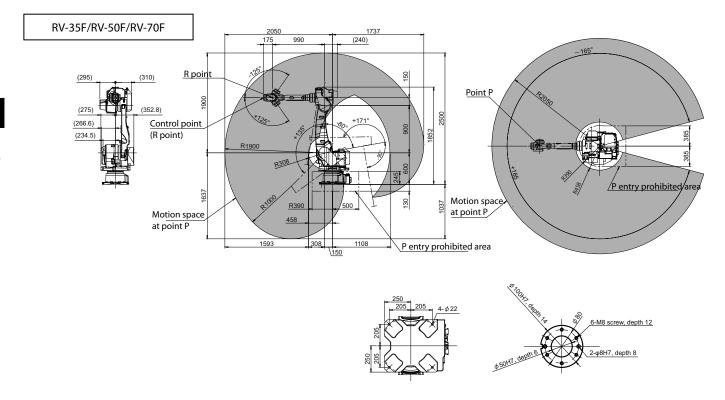

Dimensions: mm

#### ■ Industrial robots RP-1ADH/RP-3ADH/RP-5ADH



#### The SCARA robots RP-1ADH, RP-3ADH and RP-5ADH


The RP-1ADH, RP-3ADH and RP-5ADH SCARA robots are in their element in all applications calling for fast and precise placement of components in limited space. The unique mechanical design of these robots gives them a significant edge for improved productivity and micro-handling quality.


#### **Highlights:**


- Repeatability ±0.005 mm (RP-1ADH)
- Footprint just 200x160 mm (RP-1ADH)
- Pick & Place cycle time < 0.5 s
- unique concept

Characteristics/Functions		Specifications				
		RP-1ADH	RP-3ADH	RP-5ADH		
Degrees of freedom (no. of axes)		4				
Installation posture			Floor mounting			
Drive system			AC servo			
Position detection method			Absolute encoder			
Brake attachment			All axes			
Payload capacity	rated	kg	0.5	1.0	2.0	
	maximum		1.0	3.0	5.0	
Operating range	width depth	mm	150x105 (DIN-A6)	210x148 (DIN-A5)	297x210 (DIN-A4)	
	vertical	mm	30	50		
	twist	degree	±200			
Maximum speed	J1/J2	degree/s	480	432		
	J3	mm/s	800	960		
	J4	degree/s	3000	1330	1230	
Cycle time (25 x 100 x 25 mm)		sec	0.28	0.33	0.38	
Inertial moment	wrist	kgm <sup>2</sup>	3.10x10-4	1.60x10-3	3.20x10-3	
Position repeatability	X, Y direction	mm	±0.005	±0.008	±0.01	
	Z direction	mm	±0.01			
	direction of the wrist twist	degree	±0.02	±0.03		
Ambient temperature		°C				
Weight k		kg	12	24	25	
Tool wiring		8 inputs/8 outputs				
Supply pneumatic pressure MPa		0.5 ±10 %				
Robot controller			CR1DA			
Order information		Art ma	252843	252844	252885	
vruer iiiivriiiati0fi		ALT. 110.	232043	ZJZ0 <del>44</del>	232003	

#### ■ Robot arms RP-1ADH/RP-3ADH/RP-5ADH

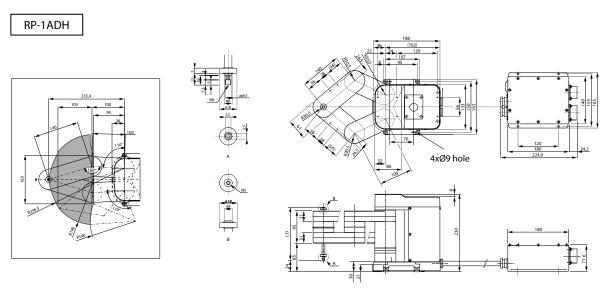

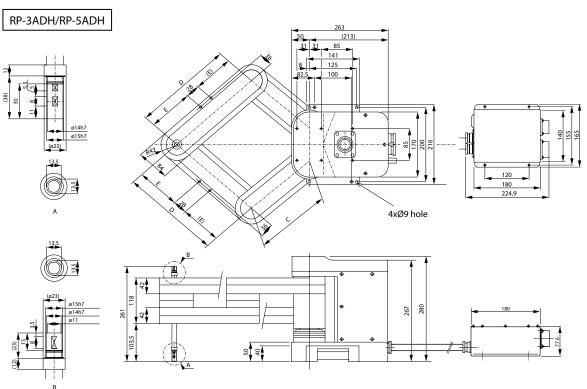

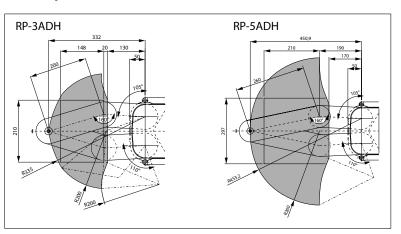

#### Variable dimensions

Robot series	C	D	E
RP-3ADH	140	200	86
RP-5ADH	200	260	116

### ■ Industrial robots RH-1FRHR



### **SCARA** robot for overhead installation

With its special compact design and support for overhead installation above the application, the robot RH-1FRHR doesn't take up any valuable space in the work area next to the installation location, enabling even smaller work cell dimensions.


The RH-1FRHR5515 is a high-speed robot dedicated for handling of small parts up to 1 kg. Up to 150 picks/min with conveyer tracking including hand open/close are possible.

### **Highlights:**

- High-speed 4 axis robots for fastest pick and place (cycle times of only 0.28 s)
- Up to 150 picks/min. with conveyor tracking including hand open/close
- Space saving and flexible installation method
- Optional integrated vacuum valve and bellow for highest requirements in pharmaceutical and F&B application

			Specifications		
Characteristics/Functions			RH-1FRHR5515-D	RH-1FRHR5515-R	
Degrees of freedom (no. of axes)			4	4	
Installation posture			On floor, ceiling mounting, wall mounting		
Structure			Horizontal articulated arm (SCARA)		
Drive system			AC servo		
Position detection method			Absolute encoder		
Brake attachment			Axes J1, J2, J4: no brake; axis J3: with brake		
Payload capacity	rated	kg	1		
rayioau capacity	maximum	ĸy	3		
Maximum reach		mm	550		
	J1	degree	±177		
Operating range	J2	degree			
operating range	J3 (Z)	mm	150		
	J4 (O axis)	degree			
	J1	degree/s	337.5		
Maximum speed	J2	degree/s	720		
Maximum speed	J3 (Z)	mm/s	765		
	J4 (Θ axis)	degree/s	3000		
Maximum composite speed		mm/s	6267		
Cycle time (25x300x25 mm with 1 kg load)		sec	0.28		
Allowable wrist moment of inertia	rated	kgm²	0.005		
The state of the s	maximum		0.005		
	X, Y direction	mm	±0.012		
Position repeatability	J3 (Z direction)	mm			
	J4 (O axis)	degree	±0.004		
Ambient temperature		°C	0-40		
Weight		kg	49		
Tool wiring			Hand: 8 inputs/8 outputs, 8 signal cables		
Tool pneumatic pipes			Primary: Ø 6x2 (secondary: Ø 4x8 by option)		
Supply pneumatic pressure		MPa	$5\pm10\%$ for the pneumatic gripper		
Protection rating			IP20 (IP65/ISO class 5 with additional bellow)		
Robot controller			CR800-D	CR800-R + R16RTCPU	
Order information		Art. no.	312997	313661	

RH-1FRHR

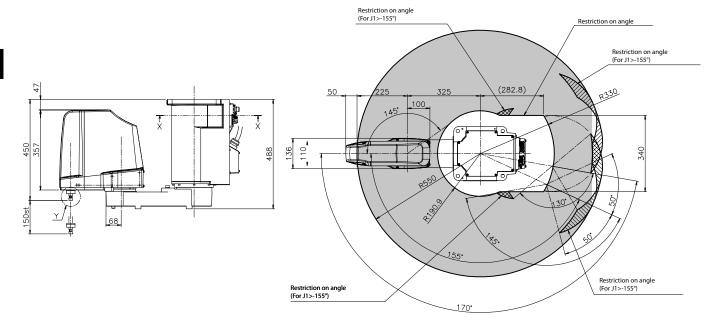

Dimensions: mm

### ■ Industrial robots RH-3FRHR



RH-3FRHR

### The SCARA robots RH-3FRHR

With its special compact design and support for overhead installation above the application, the robot RH-3FRHR doesn't take up any valuable space in the work area next to the installation location, enabling even smaller work cell dimensions. The robot's perfectly circular cylindrical work space is 150 mm high with a diameter of 700 mm. It can access any point in this space with a repeatability of just  $\pm 0.01$  mm while manipulating a payload of up to 3 kg.


### **Highlights:**

- Overhead installation for minimum space requirements
- Only 24 kg weight
- Cycle times of only 0.32 s
- High stability due to compact design
- Pneumatic hoses and signal wires are routed inside the robot


Characteristics/Franctions			Specifications		
Characteristics/Functions			RH-3FRHR3515-D-S25	RH-3FRHR3515-R-S25	
Degrees of freedom (no. of axes)			4	4	
Installation posture			Overhead		
Structure			Horizontal multiple-joint type		
Drive system			AC servo		
Position detection method			Absolute encoder		
Brake attachment			Axes J1, J2, J4: no brake; axis J3: with brake		
Payload capacity	rated	kg	1		
Tayload capacity	maximum	Ny .	3		
Maximum reach	arm 1 + arm 2				
	J1	degree	450 (±225)		
Operating range	J2	degree	450 (±225)		
operating range	J3 (Z)	mm	150		
	J4 (Θ axis)		1440 (±720)		
	J1	degree/s	672		
Maximum speed	J2	degree/s	708		
Maximum speed	J3 (Z)	mm/s	1500		
	J4 (Θ axis)	degree/s			
Maximum composite speed			6267 (J1, J2)		
Cycle time (25x300x25 mm with 1 kg load)		sec	0.32		
Allowable wrist moment of inertia	rated	kgm²	0.005		
	maximum		0.05		
	X, Y direction	mm	±0.01		
Position repeatability	J3 (Z direction)	mm	±0.01		
	J4 (Θ axis)	degree			
Ambient temperature		°C	0-40		
Weight		kg	24		
Tool wiring			Input 8 points/output 8 points (option: output 8 points), 8 spa	re wires	
Tool pneumatic pipes			Primary: Ø 6x2 (secondary: Ø 4x8 by option)		
Supply pneumatic pressure		MPa	$5\pm10\%$ for the pneumatic gripper		
Protection rating			IP20 (Optional IP65 and clean room model available)		
Robot controller			CR800-D	CR800-R + R16RTCPU	
Order information			312998	314028	


### ■ Robot arms RH-3FRHR

RH-3FRHR

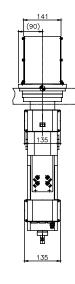

Robots

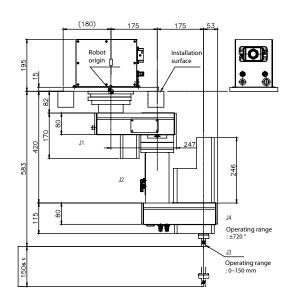

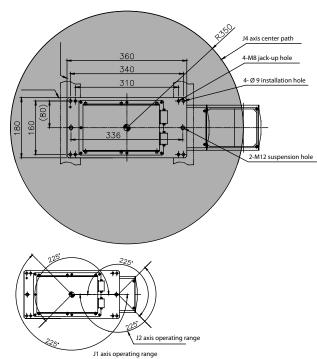

Dimensions: mm

### ■ Industrial robots RH-FRH



RH-6FRH

### The SCARA robots RH-FRH

SCARA robots are ideal for sorting, palletizing and component installation due to their short cycle time. The robots of the RH-FR series achieve the highest speeds in their class thanks to the new motors developed by Mitsubishi Electric, high arm rigidity, and unique control technology.


The resulting reduced cycle time of only 0.29 seconds for a 12" cycle make for significantly increased productivity and improved continuous operation.

### **Highlights:**

- Connections for pneumatic grippers, Ethernet, USB, tracking functions, camera interface, hand I/O, additional axis controller and an interface for GOT HMIs
- Fully enclosed cabling to end of spindle for protection and safety
- RH-6/12/20FRH has the tried-and-tested protection class IP54 (IP65 optional)

			Specifications			
Characteristics/Functions			RH-3FRH5515-D/ RH-3FRH5515-R	RH-6FRH5520N-D/ RH-6FRH5520N-R	RH-12FRH8535N-D/ RH-12FRH8535N-R	RH-20FRH10035N-D/ RH-20FRH10035N-R
Degrees of freedom (no. of axes)			4	4	4	4
Installation posture			Floor mounting			
Structure			Horizontal multiple-joint	type		
Drive system			AC servo			
Position detection method			Absolute encoder			
Brake attachment			Axes J1, J2, J4: no brake; a	axis J3: with brake		
Dayland canacity	rated	l.a.	1	3	3	5
Payload capacity	maximum	– kg	3	6	12	20
Maximum reach	arm 1 + arm 2	mm	550	550	850	1000
	J1	degree	340 (±170)			
On avating yours	J2	degree	290 (±145)		306 (±153)	
Operating range	J3 (Z)	mm	150	200	350	350
	J4 (Θ axis)	degree	720 (±360)			
	J1	degree/s	400	400	280	280
	J2	degree/s	720	670	450	450
Maximum speed	J3 (Z)	mm/s	1100	2400	2800	2400
	J4 (Θ axis)	degree/s	3000	2500	2400	1700
Maximum composite speed		mm/s	8300	8300	11350	13283
Cycle time (25x300x25 mm with max. 2 k	kg load)	sec	0.51	0.29	0.30	0.36
Allowable wrist moment of inertia	rated	leams?	0.005	0.01	0.025	0.065
Allowable wrist moment of mertia	maximum	kgm <sup>2</sup>	0.06	0.12	0.3	1.05
	X, Y direction	mm	±0.012	±0.012	±0.015	±0.015
Position repeatability	J3 (Z direction)	mm	±0.010			
	J4 (Θ axis)	degree	±0.004		±0.005	
Ambient temperature		°C	0-40			
Weight		kg	32	37	69	77
Tool wiring		į	Input 8 points/output 8 p	oints (total 20 scores)		
Tool pneumatic pipes			Primary: Ø 6x2, secondary	y: Ø 4x8		
Supply pneumatic pressure		MPa	$5 \pm 10 \%$ for the pneumat	tic gripper		
Protection rating			IP20	IP54 (IP65 with additional	bellow, optional clean room mode	el available)
Robot controller			CR800-D/CR800-R + R16	RTCPU		
Order information		Art. no.	312930/ 313651	312985/ 313666	312991/ 313672	312995/ 313676

### ■ Robot arms RH-FRH

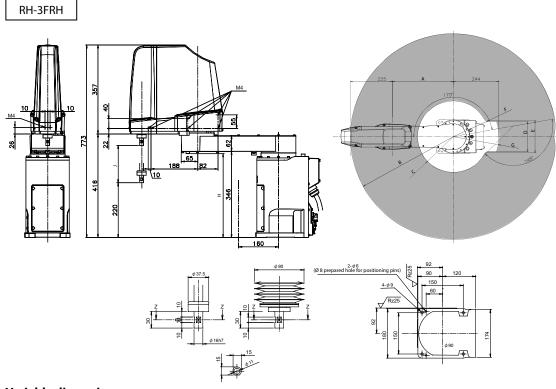


Dimensions: mm

### Variable dimensions

Robot series	Α	В	C	D	E	F	G	Н	J
RH-3FRH5515	125	R550	R142	210	R253	220	R174	342	150

RH-6FRH

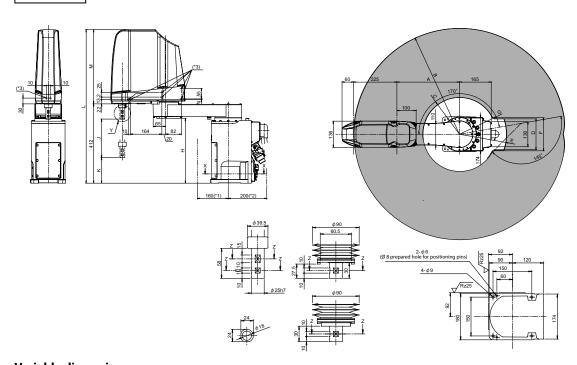


### Variable dimensions

Dimensions: mm

Robot series	A	В	C	D	E	F	G	Н	J	K	L	M
RH-6FRH5520	325	R550	R191	160	R244	172	R197	337	200	133	798	386

### RH-12FRH/20FRH

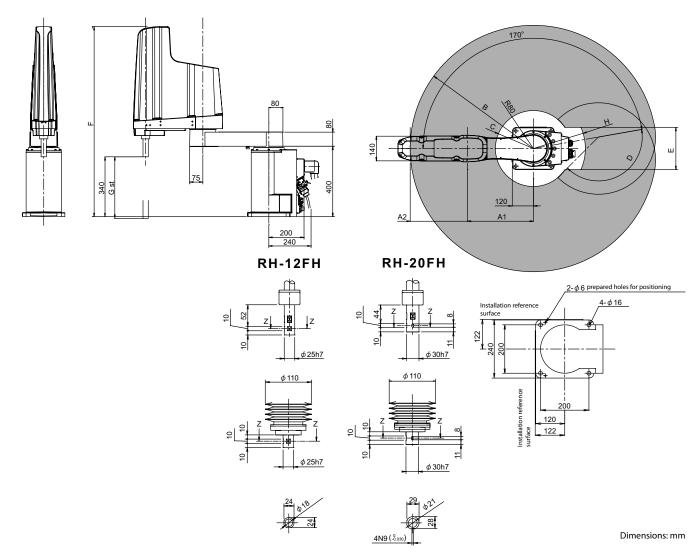

### Variable dimensions

Robot series	A1	A2	В	C	D	E	F	G	Н
RH-12FRH/20FRH85□	525	325	R850	R278	153°	_	1080/1180	350/340	_
RH-20FRH100□	525	475	R1000	R238	153°	240	1080/1180	350/340	R295

### **■ Industrial robots RD-1F500/RD-1F800/RD-1F1100/RD-1F1300**



RD-1F800

### **Delta robots**

When items to be picked and placed for packing and assembly are relatively lightweight with simple geometries, than delta robots can offer an effective and reliable high quality, high speed solution. Users can take the advantage of Mitsubishi Electric's highly dynamic servo technology to drive the parallel kinematic axis, and control via Mitsubishi Electric's standard robot controller.


### **Highlights:**

- Lightweight and simple construction for high speed pick-andplace applications.
- Seamless integration in Mitsubishi Electric robot controller
- Fully integrated in RT Toolbox3 inclusive simulation
- Dedicated HD models with IP69K and stainless steel for F&B industry


		Specifications			
Characteristics/Functions		RD-1F500 <sup>①</sup>	RD-1F800 <sup>①</sup>	RD-1F1100 <sup>①</sup>	RD-1F1300 <sup>①</sup>
Degrees of freedom (no. of axes)		4	4	4	4
Installation posture		Ceiling mounting			
Structure		Delta kinematic			
Drive system		AC servo motor (J1/J2/J3: with	orake; rotation axis: without brake	2)	
Position detection method		Absolute encoder			
Payload capacity	rated kg	1	1		
r ayload capacity	maximum	2	3		
Maximum reach	mm	Ø 500x130	Ø 800x250	Ø 1100x250	Ø 1300x250
Cycle time (25x300x25 mm with max. 1 kg loa	d) sec	Max. 200	Max. 200	Max. 180	Max. 150
Position repeatability	X, Y direction mm	±0.2	±0.1		±0.2
1 ostron repeatability	J3 (Z direction) mm	±0.3			
Ambient temperature	°C	5–45			
Weight	kg	45	80	80	85
Protection rating		IP65			
Robot controller		CR750 <sup>①</sup>			
Order information	Art no	On request	On request	On request	On request

① Please contact your Mitsubishi Electric representative for more details.

### **■** FR-D series system configuration

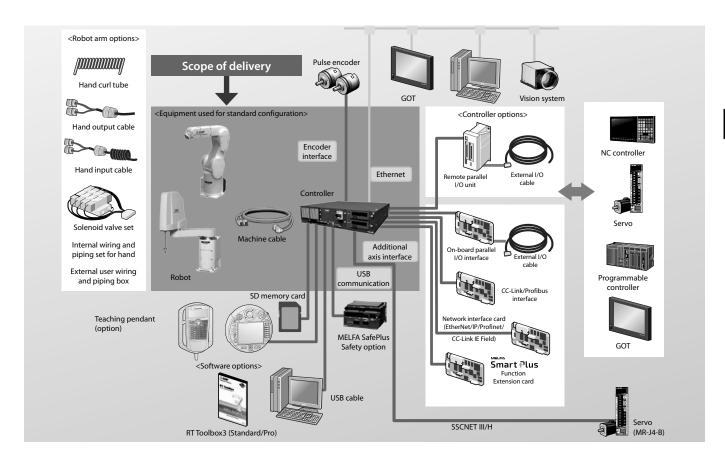

### **■** FR-R series system configuration (iQ-R Platform)

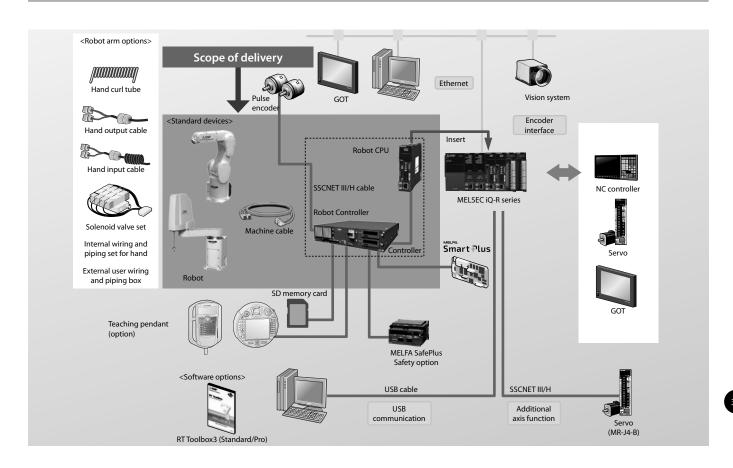

### **■** Controller specifications



CR1DA



Controller CR800

### **Powerful controller**

Every robot system has its own compact, modular robot controller, which contains the CPU and the power electronics for controlling the robot.


Mitsubishi Electric's robot controllers have a particularly slim, compact design. No matter which Mitsubishi robot you use the programming language and options are always the same. You can add special application functions by inserting expansion option cards in the slots in the controllers. Therefore it is possible, to integrate the controller into different types of networks.


All controllers have already implemented functions like Ethernet and USB connection, additional axes control over SSCNET III/H and tracking encoder interface as a standard.

The control unit CR800 also includes the input and output card for the connection of a pneumatic or electric gripper.

Characteristics/Functions			CR800-D	CR800-R	CR1DA
Shipped with robot			RV-2FR/2FRL/4FR/4FRL/7FR/7FRL/7FRLL/13FR/13 RH-1FHR/3FRHR/3FRH/6FRH/12FRH/20FRH	FRL/20FR	RP-1ADH/3ADH/5ADH
Robot CPU			_	R16RTCPU	_
Path control method			PTP control and CP control		
Number of controllable axes			6  robot axes + 2  interpolation axes + 6  independe	nt axes	
Programming language			MELFA-BASIC V/VI		MELFA-BASIC IV/V
Position teaching method			Teaching method, MDI method		
	no. of teaching points		39000	39000	13000
Memory capacity	no. program steps		78000	78000	26000
	no. of programs		512	512	256
	general purpose I/Os		Up to 256 optional	Up to 8192 shared with PLC CPU	Up to 256
	dedicated I/Os		Assigned to general-purpose I/O	Assigned to multiple CPU common device	Assigned to general-purpose I/O
	hand open/close		8 inputs/8 outputs		8 inputs/0 outputs
	emergency stop I/Os		1 (redundant)		
External inputs/outputs	door switch input		1 (redundant)		
	enabling device input		_	1 (redundant)	
	mode output		1 (redundant)		
	robot error output		1 (redundant)		
	synchronization of additiona	l axes	1 (redundant)		
	Ethernet		1 (10BASE-T/ 100BASE-TX/1000BASE-T)		1 (10BASE-T/100BASE-TX)
	USB		1 (Ver. 2.0 device functions only, mini B terminal)	1 (USB port of programmable controller CPU unit can be used.)	1 (Ver. 2.0 device functions only, mini B terminal)
SD Memory slot			1	1	_
Ambient temperature		°C	0-40	0-40 (controller)/0-55 (Robot CPU)	0-40
Relative humidity		% RH	45-85		
Davias sumulu	input voltage range	٧	RV-2F(L)/4F(L)/7F(L), RH-1FRHR/3FRH/3FRHR/6FR RV-7FRLL/13FR(L)/20FR: 3-phase 180—253 V AC or	RH/12FRH/20FRH: 1-phase 180—253 V AC r 1-phase 207—253 V AC	RP-1/3/5ADH, RH-3SDHR: 1-phase 180—253 V AC
Power supply	power capacity	kVA	RV-2FR(L), RH-3FRH: 0.5; RV-4FR(L), RH-3FRHR/6FRH-1FRHR/12FRH/20FRH: 1.5; RV-7FR(L): 2.0; RV-7	RH: 1.0; 7FRLL/13FR(L)/20FR: 3.0	1.0
Dimensions (WxHxD) includi	ng legs	mm	430x99.5x425	430x99.5x425	270x290x200
Weight		kg	12.5	12.5	9
Structure (protective specific	ration)		Self-contained floor type/open structure (Vertical	and horizontal position can be placed) (IP20) + IP54	4 protection box available as an option
Grounding		Ω	100 or less (class D grounding)		

### ■ Controller dimensions

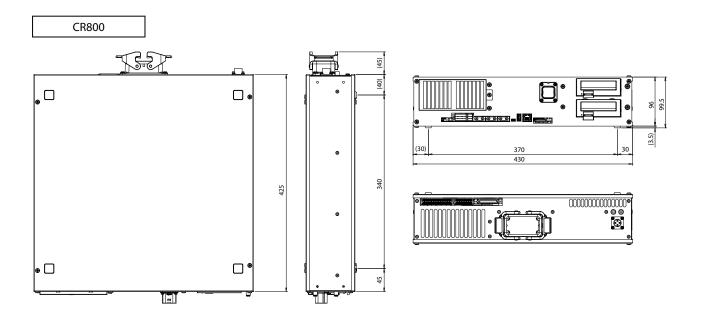

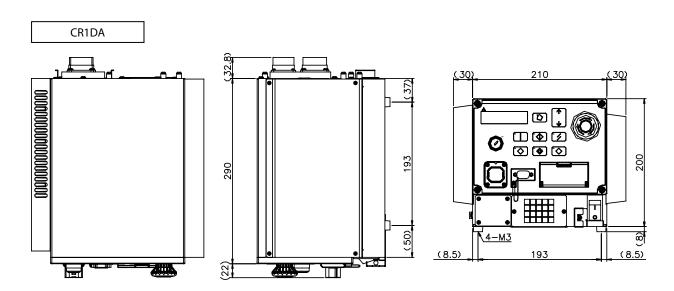

### ■ Teaching box for FR series, F series, SD/SQ series and ADH series robots







### **Operation and programming**

The R56TB teach panel is a multifunctional control and programming terminal for all Mitsubishi Electric FR series, F series, SD/SQ series and ADH series robots. Its intuitive user interface makes it easy to control robot movements and perform extensive diagnostics and monitoring functions for users of all levels. All safety-critical functions such as robot movements are assigned to keys.

Programming and monitoring functions are accessed and adjusted quickly and easily via the bright 6.5" touchscreen display.

In addition to controlling robot movements the terminal has many other functions: For example, writing programs with a virtual on-screen keyboard and monitoring all system status parameters, inputs and outputs, including those accessed via the network.

A complete backup of the robot can simply be loaded or stored on an USB stick via the R56TB.

Specifications	s	R56TB	R32TB			
Compatibility		All Mitsubishi Electric FR series, F series, SD/SQ series and ADH series robots				
Functions		Operation, programming and monitoring of all robot	functions			
Programming a	and monitoring	Read out information, also during operation; program editing with virtual keyboard; display up to 14 lines of program code; I/O monitoring for up to 256 inputs and 256 outputs; service display with information on maintenance intervals; error display with details of the last 128 alarms	Read out information, also during operation, program editing with T9-Key standard, supervising of I/Os, display of error alarms, right-/left-Hand usage, 36 keys for operation selection			
Software		ntegrated operating system software with menu-based user interface				
Menu navigatio	on (language)	German, English, French, Italian	English, Japanese			
Display	type/dimensions	6.5" TFT display (640x480 pixels)	Monochrome LCD graphic display (24 characters x 8 lines			
' '	technology	Touchscreen with backlight	LCD with backlight			
Interfaces		USB, Ethernet for connection to the robot controller	RS422 for connection to the robot controller			
Connection		Direct connection to the robot controller, cable length	17 m			
Protection ratin	ng	IP65	IP65			
Weight kg		1.25	0.9			
Order informa	ation Art. no.	218854	214968			
Accessories w	rall mount Art. no.	204294	274317			

### ■ Force sensor





#### Force sensor set

With the force sensor our RV-FR and RH-FR robots can be controlled to reach pre-set values of reaction force and softness when the robot contacts surrounding objects.

#### **Features**

- Function for controlling robots while applying a specified force
- Function for controlling the stiffness of robot appendages
- Function for changing control characteristics while the robot is running

- Function for acquiring force sensor and robot positions while contact made
- Function for display force sensor data and maintaining maximum values
- Function for acquiring force sensor information synchronized to position
- Information as log data and displaying it in graph form
- Allows logging start/stop commands to be specified in robot programs
- Function for transferring acquired log files to the FTP server

Specifications		4F-FS002H-W200	4F-FS002H-W1000
Robots		RV-FR and RH-FR	
Controller		CR800-D/R	
Max. static load (Fx, Fy, Fz / Mx, My, Mz)		200N/4Nm	1000N/30Nm
Set includes:		Force sensor, Force sensor in 24 V DC Power supply incl.	nterface unit, Sensor attachment adapter, Adapter cable for internal wiring, I m cable, Serial cable between unit and sensor 5 m, SSCNET III cable 10 m
Order information	Art. no.	313064	313105

### ■ MELFA SafePlus



### "MELFA SafePlus" safety technology for the FR series robot controllers

Functions like reduced safe speed control, safe limited control range and safe torque monitoring are the main functions which can be activated via safety inputs, as a

result the FR series robots can be easily integrated in safety systems.

Simple safety logic to control safety I/Os can be programmed in the robot controller without using a dedicted Safety PLC.

Specifications	4F-SF002-01
Robots	RV-FR and RH-FR
Controller	CR800-D/R
Redundant safety In-/Outputs	8 inputs / 4 outputs
	242064
Order information Art. no.	313061

### **■ MELFA Smart Plus Card**

# Smart Plus

## Advanced intelligent functions are provided by MELFA Smart Plus

Integrated functions for the various sensors and autonomous startup adjustment functions are included:

- Robot mechanism temperature compensation function
- Calibration assistance function
- Coordinated control for additional axes

Specifications	2F-DQ510	2F-DQ511
Robots	RV-FR and RH-FR	
Controller	CR800-D/R	
Number of functions enabled	All functions	1 function
<b>Order information</b> Art. no.	325728	325729

### ■ Internal/external wiring




### Internal wiring/piping set for hand

This set consists of hand input cables and hoses that can be routed through the spindle until the end of the arm 2.

A bracket to fix the set on the arm 2 is included. The set can be used with an optional solenoid valve.

Specifications		1F-HS304S-01	1F-HS408S-01	1F-HS604S-01
Robots		RH-1FRHR/RH-3FRH	RH-6FRH	RH-12FRH/20FRH
Stroke	mm	_	200	350
Length from the shaft end	mm	300	300	400
Attachment		4 air hoses (Ø 3), 8 hand input cables (0.2 mm²) 2 power cables (0.3 mm²)	4 air hoses (Ø 4), 8 hand input cables (0.2 mm²) 2 power cables (0.3 mm²)	4 air hoses (Ø 6), 8 hand input cables (0.2 mm²) 2 power cables (0.3 mm²)
Remarks		Both ends are free. Eight reducers (Ø 3 to Ø 4) are attached. The robot arm side is connector (HC1, HC2), and one side is free.	Both ends are free. The robot arm side is connector (HC1, HC2), and one side is free.	Both ends are free. The robot arm side is connector (HC1, HC2), and one side is free.
Weight	kg	0.4		
Order information	Art. no.	250468	250469	254396

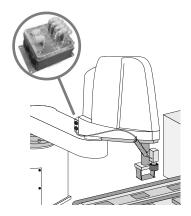


### **External wiring/piping box**

With this option hand output and input cables and pneumatic hoses can be routed from the back of arm 2 to the spindle end outside the robot casing. Connections for connecting the external hoses and brackets for attaching the cables and hoses are

included. The option can also be used for oil mist and clean room models. A bracket to fix the set on the arm 2 is included. The set can be used with an optional solenoid valve.

Specifications		1F-UT-BOX	1F-UT-B0X-01
Robots		RH-3FRH/6FRH	RH-12FRH/20FRH
Attachment		Eight air hoses (connect to solenoid valve) Installation screws (conical spring washer, plain wash	er)
Weight	kg	0.5	
Order information	Art. no.	251104	254398

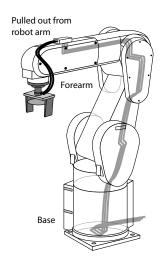

### Forearm external wiring set/base external wiring set

With these options the hand input signal cables and the communication cables etc. can be led out of the bottom of the forearm and from the side of the base.

Use the recommended pairing in the table to led out the same cables on the arm side and at the base.

Specifications	1F-HB01S-01	1F-HA01S-01	
Robots	RV-4FRL/7FR/7FRL/7FRLL/13FR/13FRL/20FR		
Part name	Forearm external wiring set	Base external wiring set	
Hand input signal cable	8	_	
Vision sensor camera cable	1	1	
Additional cable	4	4	
Recommended pairing	•	•	
Order information Art. no.	257936	257935	

### ■ Solenoid valve sets



### Solenoid gripper control valve sets

This option is used to control the gripper tool installed on the robot arm. The valve set comes with all the components required for installation, including the branch manifold, couplings and dampers.

The valves are fitted with plug-in control cables for quick and easy wiring.
The solenoid valve sets are for use with oil-free compressed air.

Specifications		1A-VD0□E-RP				1F-VV0□E-01		1E-VD0□E	
Specifications		1	2	3	4	1	2	1	2
No. of valves		1	2	3	4	1	2	1	2
Range of use (robot type)		RP-1/3/5ADH				RH-1FHR		RV-2FR(B)/ RV-2FRL(B)	
Valve function		Double solenoid				Vacuum valve		Double solenoid	
Operating method		Internal pilot method				Two-stage ejector		Internal pilot method	
Effective sectional area (CV value)		1.5 mm				1.5 mm		1.5 mm	
Operating pressure range		2-7 bar				3-6 bar		2-7 bar	
Maximum pressure		10 bar				10 bar		10 bar	
Response time		<12 ms at 24 V DC				<2.5 ms at 24 V DC		<12 ms at 24 V DC	
Max. operating frequency		5 Hz				5 Hz		5 Hz	
Ambient temperature		-10−50 °C				-5-50 °C		-10−50 °C	
Coil rated voltage		24 V DC $\pm$ 10 %				24 V DC $\pm 10 \%$		24 V DC $\pm 10$ %	
Order information Art	t. no.	129780	129781	129792	129793	277712	277713	47397	47398

Specifications	1S-VD0□E-05	1F-VD0	□E-01			1S-VD0	□E-01			1F-VD0	□E-02			1F-VD0	□E-03		
specifications	4	1	2	3	4	1	2	3	4	1	2	3	4	1	2	3	4
No. of valves	4	1	2	3	4	1	2	3	4	1	2	3	4	1	2	3	4
Range of use (see page )	RH-3FRHR	RH-1FR	HR, RH-3F	RH, RH-6	FRH	RH-12/F	RH-20FRH			RV-4FR	L, RV-7FR,	RV-7FRL		RV-13FF	, RV-20FF	2	
Valve function	Double solenoid	Double s	solenoid			Double	solenoid			Double	solenoid			Double s	olenoid		
Operating method	Internal pilot method	Internal	pilot met	hod		Internal	pilot met	hod		Interna	l pilot met	thod		Internal	pilot met	hod	
Effective sectional area (CV value)	0.64 mm	0.64 mn	n			0.64 mr	n			0.64 mi	m			0.64 mn	1		
Operating pressure range	1–7 bar	1–7 bar				1–7 bar				1–7 ba	r			1–7 bar			
Maximum pressure	10 bar	10 bar				10 bar				10 bar				10 bar			
Response time	<22 ms at 5 bar	<22 ms	at 5 bar			<22 ms	at 5 bar			<22 ms	at 5 bar			<22 ms	at 5 bar		
Max. operating frequency	5 Hz	5 Hz				5 Hz				5 Hz				5 Hz			
Ambient temperature	-10-50 °C	-10-50	°C			-10-50	°C			-10-50	°C			-10-50	°C		
Coil rated voltage	24 V DC ±10 %	24 V DC	±10 %			24 V DC	±10 %			24 V DC	±10 %			24 V DC	±10 %		
Order information Art. no.	238375	250470	250471	250472	250473	153057	153058	153059	153062	255281	255282	255283	255284	268829	268830	268831	268832

### ■ Bellows



### **Bellows**

By adding the bellow to the Z axis, the IP protection can be increased to IP65 for the SCARA robots RH-1FRHR, RH-6FRH, RH-12FRH, and RH-20FRH.

Bellow type	Robot type	Z-Axis length	Art. no.
1F-JS-21	RH-1FRHR	150 mm	277714
1F-JS-01	RH-6FRH	200 mm	251456
1F-JS-02	RH-6FRH	340 mm	251457
1F-JS-05	RH-12FRH	350 mm	255689
1F-JS-06	RH-12FRH	450 mm	255690
1F-JS-09	RH-20FRH	350 mm	255693
1F-JS-10	RH-20FRH	450 mm	255694

### ■ Interface boards for robot controllers



### I/O interface

You can increase the number of I/Os to a maximum of 64 by adding 2D-TZ378 interface modules.

By adding 2A-RZ371 slot-in cards you can increase the number of remote I/Os to 256 (depends on the controller model).

Specifications		2A-RZ371	2D-TZ378	
Application		Interface for additional inputs/outputs		
Туре		Decentralized I/O box with 32 inputs and 32 outputs	Slot-in card with 32 inputs and 32 outputs	
Range of use		All MELFA robots except R series		
Rated load voltage		Inputs: 12 V/24 V; outputs: 12 V/24 V, max. 0.1 A/per output		
Max. no. of usable I/O boxes		7	2	
Order information	Art. no.	124658	218862	

For I/O connection cables see page 45

### Pneumatic hand interface

The 2A-RZ375 interface card is used to operate the robot's pneumatic gripper. It controls the solenoid valve set (see page 41).

Specifications		2A-RZ375
Application		Interface for pneumatic hand (pneumatic valves)
Range of use		All MELFA robots except FR series and F series
Connections		Up to 4 pneumatic valves
Order information	Art. no.	124657

### **CC-Link interface**

The 2D-TZ576 interface makes it possible to integrate the CR□-D robot controller in a CC-Link network.

The CC-Link interface is a high-speed bit (for I/Os) and word (for data registers) network card.

Specifications	2D-TZ576		
Application	CC-Link interface		
Range of use	All MELFA robots except R series		
Communications cable	Shielded 3-core twisted cable		
Max. number of I/O points and data registers	126 I/Os/16 data register		
Refresh rate	7.2 ms		
Communications distances	100 m at 10 Mbps, 150 m at 5 Mbps, 250 m at 2.5 Mbps, 600 m at 0.62 Mbps, 1500 m at 0.15 Mbps		
Order information Art. no.	219063		

### **Profibus interface**

These interface cards make it possible to integrate the robot controller in a Profibus network.

Specifications		2D-TZ577
Application		Profibus DP interface
Range of use		All MELFA robots except Q series
Communications cable		Twisted pair cable
Communications distances		1200 m at 9.6/19.2/93.75 Kbps, 1000 m at 187.5 Kbps, 400 m at 500 Kbps, 200 m at 1500 Kbps
Max. no. of communications words		122
Order information	Art. no.	218861

## Profinet I/O / EtherNet/IP / CC-Link IE Field interface

These interface cards make it possible to integrate the robot controller in a Profinet I/O, in a Ethernet/IP or in a CC-Link IE Field network.

Specifications		2D-TZ535-PN-SET	2D-TZ535-EIP-SET	2F-DQ535-CCIEF-SET	
Application		Profinet I/O	CC-Link IE Field		
Range of use		All MELFA robots except R series			
Communications cable		Industrial Ethernet twisted pair cable			
Transmission speed		100 Mbit/s	1 Gbit/s		
Number of I/O data		Max. 256 bytes send and max. 256 bytes receive			
Order information	Aut no	269546	202400	324560	
order information	Art. no.	209040	282409	324560	

### ■ Gripper signal cables



### **Connection cables**

A variety of different cables are available for connecting the control and status monitoring signals of the gripper tools.

When the pneumatic gripper is used you need to monitor the position of the gripper.

You should thus always connect a gripper signal input cable when you use the pneumatic gripper. One end of the cable set is fitted with a plug for the gripper's sensor signals. The other end is without connectors and can be wired as required for your system.

Specifications		1A-GR200-RP	1E-GR35S	1F-GR35S-02	1F-GR60S-01	1S-GR35S-02
Туре		Hand signal output cable				
Range of use (robot type)		RP-1/3/5ADH	RV-2FR(B)/RV-2FRL(B)	RV-4FRL, RV-7FR/RV-7FRL/ 7FRLL,RV-13FR/13FRL,RV-20FR	RH-1FRHR, RH-3FRH/RH-6FRH/ RH-12FRH/RH-20FRH	RH-3FRHR
Design		Single sided with connector	Single sided with connector	Single sided with connector	Single sided with connector	Single sided with connector
Application		Custom-made magnetic valve set	Custom-made magnetic valve set	Custom-made magnetic valve set	Custom-made magnetic valve set	Custom-made magnetic valve set
Length	mm	2000	350	500	1050	450
Order information	Art. no.	129778	47391	255285	250467	166272

Specifications		1A-HC200-RP	1F-HC35C-01	1F-HC35C-02	1F-HC35S-02	1S-HC00S-01	1S-HC30C-11
Туре		Hand signal input cable					
Range of use (robot type)		RP-1/3/5ADH	RH-1FRHR, RH-3FRH, RH-6FRH	RH-12FRH/RH-20FRH	RV-4FRL, RV-7FR, RV-7FRL/7FRLL, RV-13FR/ 13FRL,RV-20FR	RH-3FRHR	RV-2FR(B)/RV-2FRL(B)
Design		Single sided with connector	Single sided with connector	Single sided with connecto			
Application		Monitoring of the gripper condition	Monitoring of the gripper condition	Monitoring of the gripper condition			
No. of cores		10	12	12	10	6	11
Length	mm	2000	1650	1800	1000	1210	300
Order information	Art. no.	129779	250474	254395	255286	238376	257063

### ■ Connectors and valve signal cables





### The connection to your system

Choose additional components to configure the optimal interface between the robot system and your application. The wide range of options makes it possible to configure the robot precisely for the individual requirements of your application.

The connectors listed in the following table can be used for making your own cables for the gripper input and output signals (see also the table above).

R-SMR-09V-B	R-SMR-10V-N	S-series Hand OUTPUT	S-series Hand INPUT	RV-F / RV-FR Connector Set	RH-FH / RH-FRH Connector Set
Gripper output connector	Gripper output connector	Hand signal output connector	Hand signal input connector	Connector set for OP1/2/3/4 & GR1/2 signals and LAN	Connector set for HC1/2 & GR1/2 signals
RP-1/3/5ADH	RP-1/3/5ADH	All MELFA robots except RP-ADH and RV-FR series	All MELFA robots except RP-ADH and RV-FR series	All MELFA RV-FR robots	All MELFA RH-FRH robots
Black, 9 pins	White, 10 pins	8 pins	6 pins	Complete set	Complete set
Plug and contacts	Plug and contacts	Plug and contacts	Plug and contacts	Plug and contacts	Plug and contacts
132112	132113	164814	164815	268039	273182
	Gripper output connector  RP-1/3/5ADH  Black, 9 pins	Gripper output connector  RP-1/3/5ADH RP-1/3/5ADH  Black, 9 pins White, 10 pins  Plug and contacts Plug and contacts	Gripper output connector  RP-1/3/5ADH  RP-1/	Gripper output connector Gripper output connector Hand signal output connector Hand signal input connector  RP-1/3/5ADH RP-1/3/5ADH All MELFA robots except RP-ADH and RV-FR series Black, 9 pins White, 10 pins 8 pins 6 pins  Plug and contacts Plug and contacts Plug and contacts Plug and contacts	Gripper output connector Gripper output connector Hand signal output connector Hand signal input connector OP1/2/3/4 & GR1/2 signals and LAN  RP-1/3/5ADH RP-1/3/5ADH RP-ADH and RV-FR series RP-ADH and RV-FR series Plug and contacts Connector Set  Connector Set  Connector Set  All MELFA robots except RP-ADH and RV-FR series All MELFA robots except RP-ADH and RV-FR series Plug and contacts

### Hand curl tube



### Replacement gripper hoses

These spiral hoses are for use with the pneumatic gripper. They are also suitable for use with clean room robots.

Specifications		1E-ST0404C	1E-ST0408C-300	1N-ST0608C-01	1S-ST0304S
Туре		Spiral hose			
Range of use (robot type)		RV-2FR(B)/2FRL(B), RV-4FRL, RV-7FR/7FRL/7FRLL	RH-1FRHR, RH-3FRH/6FRH	RH-12FRH/20FRH, RV-13FR/20FR	RH-3FRHR
Application		For double pneumatic gripper	For quadruple pneumatic gripper	For quadruple pneumatic gripper	For double pneumatic gripper
Dimensions	mm	4xØ 4	8xØ 4	8xØ 6	4xØ 3
Order information	Art. no.	47389	270236	269556	238377

### Machine cables for robots and controllers



### Replacement cables for power and signal connections

These machine cables make it possible to decrease/increase the distance between the controller and the robot arm. Versions are available for either flexible and fixed routing of the cables between the controller and the robot arm.

Use the flexible versions for installation of the cables in drag chains and similar configurations. These cables replace the standard cables supplied with the robot.

Specifications		1F-02UCBL-41	1F-10UCBL-41	1F-15UCBL-41	1F-20UCBL-41					
Туре		Replacement cable for a fixed installation	placement cable for a fixed installation							
Range of use (robot type)		RV-2FR, RV-2FRL, RV-4FRL, RV-7FR/7FRL/7F	2FR, RV-2FRL, RV-4FRL, RV-7FR/7FRL/7FRLL, RV-13FR/13FRL, RV-20FR, RH-3FRHR, RH-6FRH, RH-12FRH, RH-20FRH							
Minimum bending radius		More than 150 mm	lore than 150 mm							
Protection rating		Oil-proof specification sheath	)il-proof specification sheath							
Length	m	2	10	15	20					
0	A., t	225720	212107	212107	2270/2					
Order information	Art. no.	325730	313106	313107	327863					

Specifications	1F-10LUCBL-41	1F-15LUCBL-41	1F-20LUCBL-41					
Туре	Replacement cable for a flexible installation in a drag chair	1						
Range of use (robot type)	RV-2FR, RV-2FRL, RV-4FRL, RV-7FR/7FRL/7FRLL, RV-13FR/	.2FR, RV-2FRL, RV-4FRL, RV-7FR/7FRLL, RV-13FR/13FRL, RV-20FR, RH-3FRHR, RH-6FRH, RH-12FRH, RH-20FRH						
Minimum bending radius	More than 100 mm	re than 100 mm						
Cable bear isovolumetric ration	s50 %							
Max. movement speed	2000 mm/s	2000 mm/s						
Guidance of life count	7.5 million times	.5 million times						
Protection rating	Oil-proof specification sheath							
Length m	10	15	20					
	242400	242400	227044					
Order information Art. no	. 313108	313109	327864					

### Connection cables for PCs and inputs/outputs



### **Connection cables, connectors**

The RV-CAB cable is for establishing an RS232C serial connection between the robot controller and a personal computer, whereby the MR-J3USBCBL3M can be used for USB connection.

The I/O connection cable is for connecting peripherals to the parallel I/O interface.

One end of the cable is fitted with a connector for the controller's parallel I/O port. The other end is supplied without a connector so that you can connect the appropriate connectors for your equipment.

Specifications		MR-J3USBCBL3M	2A-CBL05	2A-CBL15	2D-CBL05	2D-CBL15	
Туре		USB Cable					
Application		USB connection PC-controller	I/O cable for 2A-RZ371		I/O cable for 2D-TZ378		
Range of use	Range of use F		All MELFA robots except R series				
Design		Mini USB	Plug on one side				
Length	m	3	5	15	5	15	
Order information	Art. no.	160229	47387	59947	218857	218858	

### ■ Controller protection box (IP54)



The controller protection box for the control unit CR800 prevents the penetration of oil mist or other influences from the operating environment.

The front of the housing is equipped with a mode switch and a connector for the teaching box.

	CR800-MB
	Controller protection box
	Controller CR800
mm	495x250x725
• .	*****
	mm Art. no.

### ■ Buffer batteries



### **Batteries**

The backup batteries are used to maintain the encoder and memory power supply. One battery supplies the control unit and up to five batteries are installed in the robot arm.

Specifications		RP-ADH series	RH-FRH series	RV-FR series	Art. no.
MR-BAT6V1	Number	_	4	4	248692
A6BAT	Number	3	_	_	4077
Q6BAT	Number	1	_	_	130376
Battery-Set RH-FR	/RV-FR	for RH-FR series and RV	-FR series consits of 4 pcs. N	NR-BAT6V1	327911

### ■ Options overview for all robots

Option	Marking	RV-2FR(B)/ RV-2FRL(B)	RV-4FRLM		RV-13FRM/ RV-13FRLM/ RV-20FRM	RH-3FRH	RH-6FRH	RH-12FRH/ RH-20FRH	RH-1FRHR	RH-3FRHR	RP- 1/3/5ADH	Art. no.	See Page
Teaching Box	R32TB	•	•	•	•	•	•	•	•	•	•	214968	38
Teaching Box	R56TB	•	•	•	•	•	•	•	•	•	•	218854	38
F	4F-FS002H-W200	•	•	•	•	•	•	•	•	•		313064	39
Force sensor	4F-FS002H-W1000	•	•	•	•	•	•	•	•	•		313105	39
MELFA SafePlus	4F-SF002-01	•	•	•	•	•	•	•	•	•		313061	39
MELFA Smart Plus Card	2F-DQ510	•	•	•	•	•	•	•	•	•		325728	39
MELFA SMART PIUS CARD	2F-DQ511	•	•	•	•	•	•	•	•	•		325729	39
Single valve set	1A-VD01E-RP										•	129780	41
Double valve set	1A-VD02E-RP										•	129781	41
Triple valve set	1A-VD03E-RP										•	129792	41
Quadrupla valva cot	1A-VD04E-RP										•	129793	41
Quadruple valve set	1S-VD04E-05									•		238375	41
Single valve set	1E-VD01E	•										47397	41
Double valve set	1E-VD02E	•										47398	41
Single valve set	1F-VD01E-01					•	•		•			250470	41
Double valve set	1F-VD02E-01					•	•		•			250471	41
Triple valve set	1F-VD03E-01					•	•		•			250472	41
Quadruple valve set	1F-VD04E-01					•	•		•			250473	41
Single valve set	1F-VD01E-02		•	•								255281	41
Double valve set	1F-VD02E-02		•	•								255282	41
Triple valve set	1F-VD03E-02		•	•								255283	41
Quadruple valve set	1F-VD04E-02		•	•								255284	41
Single valve set	1F-VD01E-03				•							268829	41
Double valve set	1F-VD02E-03				•							268830	41
Quadruple valve set	1S-VD04E-01							•				153062	41
Single vacuum valve set	1F-VV01E-01								•			277712	41
Double vacuum valve set	1F-VV02E-01								•			277713	41
	1F-JS-21								•			277714	41
	1F-JS-01						•					251456	41
	1F-JS-02						•					251457	41
Bellows	1F-JS-05							•				255689	41
	1F-JS-06							•				255690	41
	1F-JS-09							•				255639	41
	1F-JS-10							•				255694	41
CC-Link interface <sup>①</sup>	2D-TZ576	•	•	•	•	•	•	•	•	•	•	219063	42
CC-Link IE Field interface	2F-DQ535-CCIEF-SET	•	•	•	•	•	•	•	•	•	•	324560	42
Profibus interface <sup>①</sup>	2D-TZ577	•	•	•	•	•	•	•	•	•	•	218861	42
Profinet interface	2D-TZ535-PN-SET	•	•	•	•	•	•	•	•	•	•	269546	42
Ethernet/IP interface	2D-TZ535-EIP-SET	•	•	•	•	•	•	•	•	•	•	282409	42
I/O interface <sup>①</sup>	2D-TZ378	•	•	•	•	•	•	•	•	•	•	218862	42
1/O IIILETIACE ©	2A-RZ371	•	•	•	•	•	•	•	•	•	•	124658	42
Pneumatic hand interface	2A-RZ375									•	•	124657	42
	1A-GR200-RP										•	129778	43
	1E-GR35S	•										47391	43
Hand signal output cable	1F-GR35S-02		•	•	•							255285	43
	1F-GR60S-01					•	•	•	•			250467	43
	1S-GR35S-02									•		166272	43
	1A-HC200-RP										•	129779	43
	1F-HC35C-01					•	•		•			250474	43
Hand signal input cable	1F-HC35C-02							•				254395	43
rianu signai input cable	1F-HC35S-02		•	•	•							255286	43
	1S-HC00S-01									•		238376	43
	1S-HC30C-11	•										257063	43
Gripper output connector	R-SMR-09V-B										•	132112	43
Gripper input connector	R-SMR-10V-N										•	132113	43
Hand signal output connector	S-series Hand OUTPUT		•	•	•	•	•	•		•		164814	43
Hand signal input connector	S-series Hand INPUT		•	•	•	•	•	•		•		164815	43

### ■ Options overview for all robots

Option	Marking	RV-2FR(B)/ RV-2FRL(B)	RV-4FRLM	RV-7FRM/ RV-7FRLM RV-7FRLLM	RV-13FRM/ RV-13FRLM/ RV-20FRM	RH-3FRH	RH-6FRH	RH-12FRH/ RH-20FRH	RH-1FRHR	RH-3FRHR	RP- 1/3/5ADH	Art. no.	See Page
	RH-FRH Hand connector set					•	•	•	•	•		273182	43
Connector sets	RV-F/RV-FR connector set		•	•	•							268039	43
	1E-ST0404C	•	•	•								47389	44
	1E-ST0408C-300					•	•		•			270236	44
Hand curl tube <sup>①</sup>	1S-ST0304S									•		238377	44
	1N-ST0608C-01				•			•				269556	44
	1F-HS304S-01					•			•			250468	40
Internal wiring and piping set	1F-HS408S-01						•					250469	40
3	1F-HS604S-01							•				254396	40
	1F-UT-BOX					•	•					251104	40
External wiring/piping box	1F-UT-B0X-01							•				254398	40
Forearm external wiring set	1F-HB01S-01		•	•	•							257936	40
Base external wiring set	1F-HA01S-01		•	•	•							257935	40
,	1F-02UCBL-41		•	•	•		•	•		•		325730	44
Extension cable for fixed	1F-10UCBL-41		•	•	•		•	•		•		313106	44
installation	1F-15UCBL-41		•	•	•		•	•		•		313107	44
	1F-20UCBL-41		•	•	•		•	•		•		327863	44
	1A-05LCBL-1										•	167304	44
Extension cable for flexible	1F-10LUCBL-41		•	•	•		•	•		•		157582	44
installation in a drag chain	1F-15LUCBL-41		•	•	•		•	•		•		313109	44
	1F-20LUCBL-41		•	•	•		•	•		•		327864	44
PC connection cable USB	MR-J3USBCBL3M	•	•	•	•	•	•	•	•	•		160229	45
	2A-CBL05	•	•	•	•	•	•	•	•	•	•	47387	45
Connection cable for I/O	2A-CBL15	•	•	•	•	•	•	•	•	•	•	59947	45
interface <sup>①</sup>	2D-CBL05	•	•	•	•	•	•	•	•	•	•	218857	45
	2D-CBL15	•	•	•	•	•	•	•	•	•	•	218858	45
Controller protection box (IP54)	CR800-MB	•	•	•	•	•	•	•	•			313062	45
Wall mount	R32TB wall mount	•	•	•	•	•	•	•	•	•	•	274317	38
Wall mount	R56TB wall mount	•	•	•	•	•	•	•	•	•	•	204294	38

<sup>1</sup> except Q series

### ■ MELFA-BASIC programming

### Easy-to-Learn MELFA-BASIC Programming language

Mitsubishi Electric robots are controlled with programs written in the powerful MELFA BASIC programming language. In addition to the familiar standard BASIC instructions and constructs like FOR ... NEXT and GOTO, MELFA BASIC also has some extensions required for robots, including additional data types, instructions for movement and gripper control and I/O instructions. The familiarity of standard BASIC makes it easy for beginners to get started with robot programming.


Despite its simplicity and short learning curve, MELFA BASIC is a powerful language that can be used to create very complex robot programs MELFA BASIC VI allows structured programming with functions and re-use code and ready-made libraries are additionally improving the reusability and readability.

### **Programming**

Robot programs are written with the MELFA BASIC instructions with the help of a PC and the teaching box. The positions

are defined with the teaching box and the actual program is written on the PC.

Programs are written using the RT Toolbox3 programming and project managing software for industrial robots. You can find more information about the programming software on the following pages..

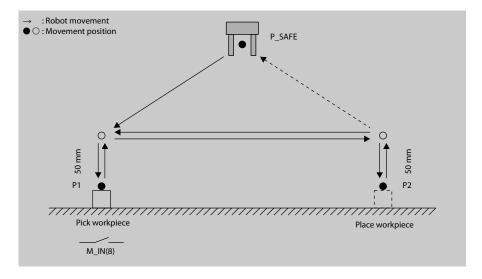

### Sample program

The sample program below is for a pickand-place operation. The input signal M\_IN(8) tells the program that there is a workpiece in position P1. When a workpiece is present the input signal is set to 1 and the pick-and-place operation is performed. The workpiece is picked up from position P1 and deposited in position P2. If no workpiece is present the robot remains in the retracted position P\_SAFE.

### **Pick-and-Place Program**

<ul> <li>Wait M_IN(8) = 1</li> <li>Wait until input bit 8 is set</li> <li>HOPEN 1</li> <li>*PickPlace</li> <li>Jump-Destination "PickPlace"</li> </ul>	
3 11 2	
4 *PickPlace Jump-Destination "PickPlace"	
5 MVS Pick, -50 Move longitudinally to a position 50 mm from "Pick" relative to the tool Z-direction	'n
6 MVS Pick Move to position "Pick"	
7 HCLOSE 1 Close gripper 1	
8 DLY 0.2 Wait for 0.2 s to ensure proper closing of gripper	
9 MVS Pick, -50 Move longitudinally to a position 50 mm from "Pick" relative to the tool Z-direction	n
10 MVS Place, -50 Move longitudinally to a position 50 mm from "Place" relative to the tool Z-directi	on
11 MVS Place Move to position "Place"	
12 HOPEN 1 Open gripper 1 and deposit workpiece	
13 DLY 0.2 Wait for 0.2 s to ensure proper opening of gripper	
MVS Place, -50 Move longitudinally to a position 50 mm from "Place" relative to the tool Z-directi	on
15 IF M_IN(8) = 1 THEN GOTO *PickPlace If another workpiece is present repeat the pick-and-place operation	
16 MVS P_SAFE If no workpiece is present return to safe position and end program	
17 END Program end	

### ■ RT Toolbox3


RT Toolbox3 is a software for program creation and total engineering support. This PC software supports everything from system startup to debugging, simulation, maintenance and operation. This includes programming and editing, operational checking before robots are installed, measureing process tact time, debugging

during robot startup, monitoring robot operation after startup, and trouble shooting.

- Compatible with Windows® XP, Windows® Vista, Windows® 7, Windows® 8 and Windows® 10.
- Support for all processes, from programming and startup to maintenance
- Enhanced simulation functions
- Advanced maintenance functions
- Extended documentation function


### **Enhanced RT Toolbox3 visual functions**

- Set parameters can be displayed visually to prevent setting errors.
- Display of teaching positions and trajectories of end points.
- Hands can be created and then attached to the robot.
- 3D polygonal models can be imported into the program.(Applicable 3D data file formats: STL, OBJ)

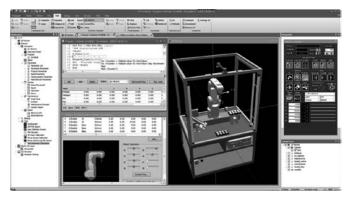

### Linked to iQ Works2

- Integrated Software Suite Consits of GX Works3, MT Works2, GT Works3, RT Toolbox3 and FR Configurator2, which are programming software for each respective product
- System management software MELSOFT Navigator is the central system configuration incorporating an easy-to-use, graphical user interface with additional project-sharing features such as system labels and parameters.

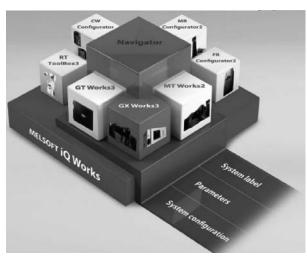

### **Program editing and debugging functions**

Creation of programs in MELFA-BASIC IV/V/VI and the Movemaster languages.\* Improvement of work operations by a multi-window format and the various editing functions. This is helpful for use in checking operations such as the execution of program steps, setting of breakpoint settings, and other tasks.

- \* MELFA-BASIC is a programming language that further expands upon and develops the commands needed for
- In MELFA-BASIC, the expansion of the command as well as parallel processing or structuring that were difficult to realize in BASIC language can make it possible to operate MELFA easily.




### Simulation functions

Offline robot motion and tact time check for designated parts of a program.



#### 3D viewer

Graphical representation of a work along with the dimensions, color and other specified details of the work area to be gripped.

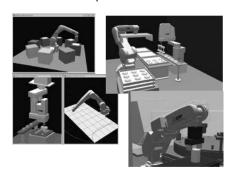

### **Monitor functions**

This is used to monitor program execution status and variables, input signals, etc.)



#### **Maintenance functions**

These functions include maintenance forecast, position recovery support, parameter management, etc.



### ■ RT Toolbox3 Pro

### A 3D robot simulator offers powerful support for system design and preliminary layout.

RT Toolbox3 Pro offers an add-in tool <sup>①</sup> for SolidWorks <sup>2</sup> used for robot simulation in production systems on PC's converting processing paths of workpieces into robot position data. Adding RT Toolbox3 pro into the SolidWorks platform adds to and expands on the robot simulation functions.

- Loading of part data from peripheral created in SolidWorks® devices and rearrangement
- Installation of hands by CAD files
- Handling of work pieces
- Creating operation data from 3D CAD source data

- Offline teaching in 3D CAD surrounding
- Creation of robot programs (template) Workflow processes can be created using a combination of the offline teaching and CAD link functions and then converted into robot programs. (MELFA-BASIC IV, V, VI format)
- Simulation of robot operations
- Display of the robot movement path in the application/the workspace
- Interference checks between the robot and peripheral devices
- Saving simulated movements to video files (AVI format)

- Measurement of cycle times
- Robot program debugging functions
- Jog function teaching the robot
- Installation of a travelling axis to verify the operation of the system equipped with this.
- Calibration of point sequence data of CAD coordinates and robot coordinate data
- $^{\scriptsize \scriptsize 1}$  An add-in tool is a software program that adds certain functions to application software packages.
- <sup>②</sup> SolidWorks<sup>®</sup> is a registered trademark of SolidWorks Corp, (USA).

### Automatic robot program creation function


The teaching position data and robot operation programs necessary for operating robots can be generated automatically by simple loading of 3D CAD data<sup>®</sup> for the applicable works into SolidWorks<sup>®</sup> and then setting of processing conditions and areas using RT Toolbox3 Pro.

® Formats that can be loaded into SolidWorks®

- IGES
- STEP
- ParasolidR
- SAT (ACISR)
- Pro/ENGINEERR
- CGR (CATIARgraphics)
- Unigraphics
- PAR (Solid Edge TM)
- DWG
- DXFTM
- STL VRML
- VDA-FS
- IPT (Autodesk Inventor)
- · Machanical Desktop
- CADKEYR
- Viewpoint RealityWave
- HOOPS
- · HCG (Highly compressed graphics)

Note: Check the SolidWorks website and other published documents for the latest specifications.

### **Example screens for RT Toolbox3 Pro**

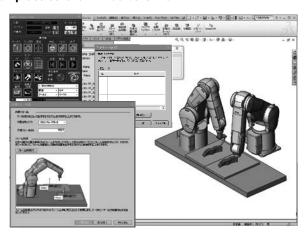

A	0
Accessories	Options overview for all robots
Batteries45	Overview robots
Bellows	Horizontal, multiple-joint type (RH/RP)
Connection cables for PCs and inputs/outputs, connectors	Model designation
Controller protection box45	Vertical, multiple-joint type (RV)
Force sensor	vertical, multiple-joint type (nv)4
Gripper signal cables	S
Hand curl tube	3
Interface boards	SCARA robots
Machine cables for robots and controllers	RH-1FRHR
MELFA SafePlus	RH-3FRHR
MELFA Smart Plus Card	RH-FRH
Solenoid valve sets	RP-1ADH/RP-3ADH/RP-5ADH
Teaching box	11 1101/11 3101/11 3101
Valve signal cables and connectors	Software
Wiring	MELFA-BASIC programming48
Articulated arm robots	RT Toolbox349
RV-2FR(B)/RV-2FRL(B	RT Toolbox3 Pro50
RV-4FRLM	Curatial formations
RV-7FRM/7FRLM/7FRLLM	Special functions
RV-13FRM/RV-13FRLM/RV-20FRM	Adaptation to operation
RV-35F/RV-50F/RV-70F	CC-Link IE Field Network Basic function
	Collision avoidance
C	Connection to peripheral devices
•	Coordinated control
Controller	Full use of installation space
	GOT terminals
D	Improved accuracy9
	Improved tooling performance
Delta robots	Improved user friendliness
RD-1F500/RD-1F800/RD-1F1100/RD-1F1300	Intelligent technology
	iQ Platform
Dimensions	MELFA SafePlus features
Controller	Shortened takt times
RH-1FRHR	System configuration
RH-3FRHR30	, .
RH-FRH32	
RP-1ADH/RP-3ADH/RP-5ADH26	
RV-2FR(L)(B)	
RV-4FRLM	
RV-7FRM/7FRLM/7FRLLM20	
RV-13FRM/RV-13FRLM/RV-20FRM	
RV-35F/RV-50F/RV-70F	
М	
Movement ranges	
RH-1FRHR	
RH-3FRHR30	
RH-FRH	
RP-1ADH/RP-3ADH/RP-5ADH26	
RV-2FR(L)(B)	
RV-4FRI M 18	


 RV-7FRM/7FRLM/FRLLM
 20

 RV-13FRM/RV-13FRLM/RV-20FRM
 22

 RV-35F/RV-50F/RV-70F
 24

Notes

# Your solution partner

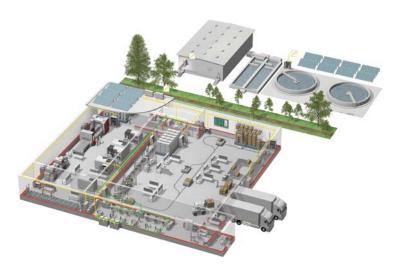

Mitsubishi Electric offers a wide range of automation equipment from PLCs and HMIs to CNC and EDM machines



Since its beginnings in 1870, some 45 companies use the Mitsubishi name, covering a spectrum of finance, commerce and industry.

The Mitsubishi brand name is recognized around the world as a symbol of premium quality.

Mitsubishi Electric Corporation is active in space development, transportation, semi-conductors, energy systems, communications and information processing, audio visual equipment and home electronics, building and energy management and automation systems, and has 237 factories and laboratories worldwide in over 121 countries.

This is why you can rely on Mitsubishi Electric automation solution - because we know first hand about the need for reliable, efficient, easy-to-use automation and control in our own factories.

As one of the world's leading companies with a global turnover of over 4 trillion Yen (over \$40 billion), employing over 130,000 people, Mitsubishi Electric has the resource and the commitment to deliver the ultimate in service and support as well as the best products.



Low voltage: MCCB, MCB, AC



Medium voltage: VCB, VCC



Power monitoring, energy management



Compact and Modular Controllers



Inverters, Servos and Motors



Visualization: HMIs, Software, MES connectivity



Numerical Control (NC)



Robots: SCARA, Articulated arm



Processing machines: EDM, Lasers, IDS



 $\hbox{Air-conditioning, Photovoltaic, EDS}$ 

## **Global Partner. Local Friend.**

### **European Offices**

Germany	Czech Rep.	France	Ireland	Italy	Netherlands	Poland
Mitsubishi Electric Europe B.V.	Mitsubishi Electric Europe B.V.	Mitsubishi Electric Europe B.V.	Mitsubishi Electric Europe B.V.	Mitsubishi Electric Europe B.V.	Mitsubishi Electric Europe B.V.	Mitsubishi Electric Europe B.V.
Mitsubishi-Electric-Platz 1	Pekařská 621/7	25, Boulevard des Bouvets	Westgate Business Park, Ballymount	Viale Colleoni 7 Palazzo Sirio	Nijverheidsweg 23C	ul. Krakowska 48
D-40882 Ratingen	CZ-155 00 Praha 5	F-92741 Nanterre Cedex	IRL-Dublin 24	I-20864 Agrate Brianza (MB)	NL-3641IP Mijdrecht	PL-32-083 Balice
Phone: +49 (0)2102 / 486-0	Phone: +420 255 719 200	Phone: +33 (0) 1 / 55 68 55 68	Phone: +353 (0)1 4198800	Phone: +39 039 / 60 53 1	Phone: +31 (0) 297 250 350	Phone: +48 (0) 12 347 65 00
Russia Mitsubishi Electric (Russia) LLC 2 bld. 1, Letnikovskaya st. RU-115114 Moscow Phone: +7 495 / 721 2070	Spain Mitsubishi Electric Europe B.V. Carretera de Rubi 76-80 Apdo. 420 E-08190 Sant Cugat del Vallés (Barcelona) Phone: +34 (0) 93 / 5653131	Sweden Mitsubishi Electric Europe B.V. (Scandinavia) Hedvig Möllers gata 6 SE-223 55 Lund Phone: 446 (0) 8 625 10 00	Turkey Mitsubishi Electric Turkey Elektrik Ürünleri A.Ş. Şerifali Mahallesi Kale Sokak No:41 TR-34775 Ümraniye-ISTANBUL Phone: +90 (216) 969 25 00	UK Mitsubishi Electric Europe B.V. Travellers Lane UK-Hatfield, Herts. AL10 8XB Phone: +44 (0)1707 / 28 87 80		

### Representatives

Austria	Belarus	Bosnia and Herzegovina	Bulgaria	Croatia	Czech Republic	Denmark
GEVA	OOO TECHNIKON	INEA RBT d.o.o.	AKHNATON	INEA CR	AutoCont C.S. S.R.O.	HANS FØLSGAARD A/S
Wiener Straße 89	Prospect Nezavisimosti 177-9	Stegne 11	4, Andrei Ljapchev Blvd., PO Box 21	Losinjska 4 a	Kafkova 1853/3	Theilgaards Torv 1
A-2500 Baden	BY-220125 Minsk	\$1-1000 Ljubljana	BG-1756 Sofia	IR-10000 Zagreb	CZ-702 00 OStrawa 2	DK-4600 Køge
Phone: +43 (0)2252 / 85 55 20	Phone: +375 (0)17 / 393 1177	Phone: +386 (0)1/513 8116	Phone: +359 (0)2 / 817 6000	Phone: +385 (0)1 / 36 940 - 01/-02/-03	Phone: 4420 595 691 150	Phone: +45 4320 8600
Estonia	Finland	Greece	Hungary	Latvia OAK Integrator Products SIA Ritausmas iela 23 LV-1058 Riga Phone: +371 67842280	Malta	Portugal
Electrobit OÜ	UTU Automation Oy	UTECO A.B.E.E.	AxiCont Automatika Kft.		ALFATRADE Ltd.	Fonsea S.A.
Pärnu mnt. 160i	Peltotie 37	5, Mavrogenous Str.	(Robot Center) Rokolya utca 1-13		99, Paola Hill	R. João Francisco do Casal 87/89
EST-11317, Tallinn	FIN-28400 Ulvila	GR-18542 Piraeus	HU-1131 Budapest		Malta-Paola PLA 1702	PT-3801-997 Aveiro, Esqueira
Phone: +372 6518 140	Phone: +358 (0)207 / 463 500	Phone: +30 (0)211 / 1206-900	Phone: +36 (0)1 / 412-0882		Phone: +356 (0)21 / 697 816	Phone: +351 (0)234 / 303 900
Romania Sirius Trading & Services Aleea Lacul Morii Nr. 3 RO-060841 Bucuresti, Sector 6 Phone: +40 (0)21 / 430 40 06	Serbia INEA SR d.o.o. UI. Karadjordjeva 12/217 SER-11300 Smederevo Phone: +386 (026) 461 54 01	Slovakia SIMAP SK Dolné Pažite 603/97 Sk-911 06 Trenčín Phone: +421 (0)32 743 04 72	Slovenia INEA RBT d.o.o. Stegne 11 S-1000 Ljubljana Phone: +386 (0)1 / 513 8116	Ukraine CSC- AUTOMATION Ltd. 4 B, Yevhena Sverstyuka Str. UA-02002 Klev Phone: +380 (0)44 / 494 33 44		
Egypt EIM Energy 3 Roxy Square ET-11341 Heliopolis, Cairo Phone: +202 24552559	Israel ILAN & GAVISH Ltd. 24 Shenkar St., Kiryat Arie IL-49001 Petah-Tikva Phone: +972 (0)3 / 922 18 24	South Africa ADROIT TECHNOLOGIES 20 Waterford Office Park 189 Witkoppen Road ZA-Fourways Phone: + 27 (0)11 / 658 8100				

### Version check



Mitsubishi Electric Europe B.V.
FA - European Business Group
Mitsubishi-Electric-Platz 1
D-40882 Ratingen Germany
Tel.: +49(0)2102-4860 Fax: +49(0)2102-4861120
info@mitsubishi-automation.com
https://eu.aa.mitsubishielectric.com