

FX_{1N}-2EYT-BD Output Expansion Board

USER'S MANUAL

JY992D95201B



This manual contains text, diagrams and explanations which will guide the reader in the correct installation, safe use and operation of the FX_{1N}-2EYT-BD Output Expansion Board and should be read and understood before attempting to install or use the unit. Further information can be found in the associated manuals list below.

Specifications are subject to change without notice

Guidelines for the Safety of the User and Protection of the FX_{1N}-2EYT-BD.

This manual has been written to be used by trained and competent personnel. The definition of such a person or persons is as follows:

- a) Any engineer using the product associated with this manual, should be of a competent nature, trained and qualified to the local and national standards. These engineers should be fully aware of all aspects of safety with regards to automated equipment.
- b) Any commissioning or service engineer must be of a competent nature, trained and qualified to the local and national standards.
- c) All operators of the completed equipment should be trained to use that product in a safe and coordinated manner in compliance to established safety practices.

Note: The term 'completed equipment' refers to a third party constructed device which contains or uses the product associated with this manual.

Note's on the Symbols Used in this Manual

At various times through out this manual certain symbols will be used to highlight points of information which are intended to ensure the users personal safety and protect the integrity of equipment.



- 1) Indicates that the identified danger **WILL** cause physical and property damage.



- 2) Indicates that the identified danger could **POSSIBLY** cause physical and property damage.

- Under no circumstances will Mitsubishi Electric be liable or responsible for any consequential damage that may arise as a result of the installation or use of this equipment.
- All examples and diagrams shown in this manual are intended only as an aid to understanding the text, not to guarantee operation. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.
- Owing to the very great variety in possible application of this equipment, you must satisfy yourself as to its suitability for your specific application.

Associated manuals

Manual name	Manual No.	Description
FX _{1S} Series Hardware Manual	JY992D83901	Describes contents related to hardware of FX _{1S} Series PLC such as specifications, wiring and installation.
FX _{1N} Series Hardware Manual	JY992D89301	Describes contents related to hardware of FX _{1N} Series PLC such as specifications, wiring and installation.
FX Programming Manual II	JY992D88101	Describes instructions in FX _{1S} /FX _{1N} /FX _{2N} /FX _{2NC} Series.


1. Introduction

The FX_{1N}-2EYT-BD output expansion board (hereafter referred to as "FX_{1N}-2EYT-BD" or "Function expansion board") is a function expansion board to be installed in the FX_{1S} or FX_{1N} series programmable controller (hereafter referred to as "PLC"), to increase the output of two points.

1.1 Features of the FX_{1N}-2EYT-BD

- 1) Additional increase of two output points.
- 2) Internal mounting in the top of the PLC meaning no need for change to the installation area of the PLC.
- 3) Additional outputs have special auxiliary relays associated to each point, which are turned ON or OFF depending on the required output state of the FX_{1N}-2EYT-BD.
As special auxiliary relays are used in the PLC program for the output points, the additional outputs are not included in the regular system I/O count.

1.2 External Dimensions and Each Part Name

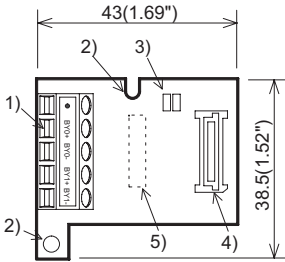

Dimensions: mm (inches)

Accessories : Top cover for board 1
M3 screw to mount board 2
M3 screw to fix top cover 1

- 1) Output terminal.
 - : Unused (Do not wire).
 - BY0+ : + side terminal of output BY0
 - BY0- : - side terminal of output BY0
 - BY1+ : + side terminal of output BY1
 - BY1- : - side terminal of output BY1The top face of this connector is higher than the top face of the PLC panel cover by approximately 7 mm.
- 2) Mounting hole (2- ϕ 3.5(0.14"))
- 3) Output LED
 - BY0 LED : The LED lights when BY0 is turn on.
 - BY1 LED : The LED lights when BY1 is turn on.
- 4) External port for display module FX_{1N}-5DM or memory cassette FX_{1N}-EEPROM-8L
- 5) External connector for PLC

1.3 System configuration

- Only one function expansion board can be used on one FX_{1S} and FX_{1N} series PLC main unit. Do not try to install two or more expansion boards.
- FX_{1N}-2EYT-BD can be used together with FX_{1N}-5DM.
Refer to the FX_{1S} or FX_{1N} HARDWARE MANUAL when using the FX_{1N}-2EYT-BD together with an FX_{1N}-5DM.
- When using with the memory cassette FX_{1N}-EEPROM-8L, only program transfer is possible. (The memory cassette cannot be connected permanently)

1.4 Applicable PLC

Series name	Applicable version
FX _{1S}	V2.0 or later
FX _{1N}	V2.0 or later

2. Installation



Caution

- 1) Do not use the function expansion board in environments that contain excessive or conductive dust, corrosive or flammable gas, moisture or rain, excessive heat, regular impact shocks or excessive vibration.
Use in these environment may cause electric shock, fire, malfunction, damage or deterioration of the product.
- 2) Cut off all phases of power source before installing / removing or performing wiring work on the unit in order to avoid electric shock or damage of product.
- 3) After the installation wiring etc. replace the PLCs top cover before power ON.
- 4) Securely install the function expansion board, and fix it to the PLC.
Defective contact can cause malfunction.


2.1 Mounting

Turn off all power to the PLC before installing the FX_{1N}-2EYT-BD.

- a) Top cover for FX_{1N}-2EYT-BD (supplied as an accessory))
- b) M3 screw to fix top cover (supplied as an accessory)
- c) M3 screw to fix FX_{1N}-2EYT-BD (2 pieces)
(supplied as accessories)
- d) External port for optional equipment
- e) FX_{1N}-2EYT-BD (function expansion board)



Note: Do not remove this screw on the PLC(FX_{1S}).

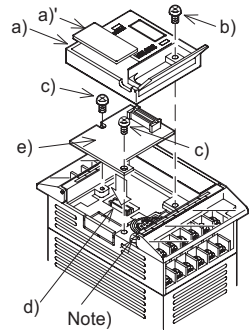

- 1) Remove the top cover of the main unit and keep.
- 2) Plug FX_{1N}-2EYT-BD **e**) in to the external port **d**).
- 3) Fix the function expansion board to the main unit with two M3 screws **c**).
- (Tightening torque: 0.3 to 0.6 N·m)
- 4) Attach the top cover for FX_{1N}-2EYT-BD **a**) in place of the original cover.
During attachment, remove **a**)' with a suitable tool, so that the output terminals are exposed.
- 5) Fix the top cover with an M3 screw **b**).
- (Tightening torque: 0.3 to 0.6 N·m)

3. Output Wiring



Wiring cautions

Observe the following cautions to avoid electrical shock, short-circuit, disconnection or damage in the unit.

- Do not lay signal cable near to high voltage power cable or house them in the same trunking duct. Effects of noise or surge induction may occur. Keep signal cables a safe distance of more than 100 mm (4") from these power cables.
- Where output signal lines are used over an extended distance consideration for voltage drop and noise interference should be made.
- Twist the end of each stranded cable so that barbed wires are not present.
- Never solder the end of any cables.
- Never connect cables of a non permitted size. Make sure that the number of connected cables is not more than the unit has been designed for.
- Fix cables so that any stress is not directly applied on the terminal block or the cable connection area.
- Tighten the terminals to a torque of 0.5 to 0.6 N·m. Do not tighten terminal screws exceeding the specified torque. Failure to do so may cause equipment failures or malfunctions.
- Use an interlock circuit for external circuit protection.
- Do not wire [●] terminal.


3.1 Applicable cables

- Use AWG26-16 for the connection with output equipment.
- Tighten the terminals to a torque of 0.5 to 0.6N·m. Do not tighten terminal screws exceeding the specified torque. Failure to do so may cause equipment failures or malfunctions.
- When using a different type of cable, defective contact of the terminal part is possible. Use a crimp terminal to achieve a good contact.

Linear and sectional area


Linear	Sectional area (mm ²)	Terminal
AWG26	0.1288	Stranded cable: Remove sheath, twist core wires, then connect cable. Single cable: Remove sheath, then connect cable.
⋮	⋮	
AWG16	1.309	

Terminal processing of wire

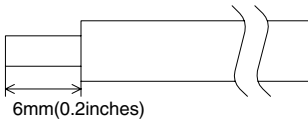


3.2 Wiring of output

Sink Type

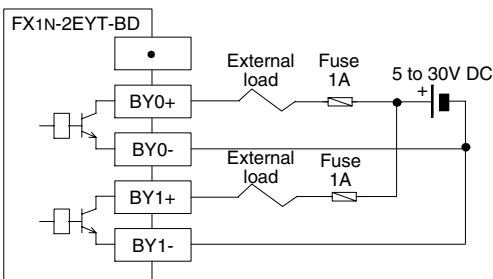

Source type

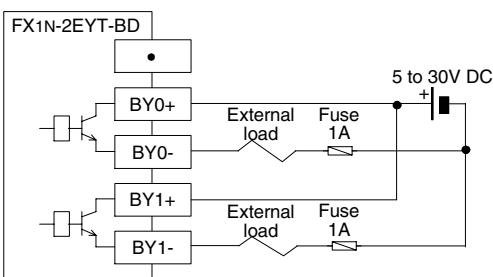

4. Device allocation and program example



Caution

Do not turn the special auxiliary relays either side of M8116 and M8117 ON and OFF carelessly. This may cause malfunction.


4.1 Device allocation

Each output of FX_{1N}-2EYT-BD is allocated a special auxiliary relay.

The ON/OFF state of each output is reflected in its corresponding special auxiliary relay.

- BY0 output of FX_{1N}-2EYT-BD : M8116
BY1 output of FX_{1N}-2EYT-BD : M8117

4.2 Program example



- Turn the special auxiliary relay allocated to each output ON and OFF by program of PLC.

- When the END instruction of the program is executed, the output process is completed. The interruption output processing of HSCS (high-speed counter comparison set), and HSCR (high-speed counter comparison reset), etc. are not carried out.
Output refreshing by REF instruction can not be done.
- Do not use the special auxiliary relay for an instruction by which the bit device is of three points or more such as comparison result of the CMP instruction and comparison result of the ZCP instruction is occupied.
Do not use the special auxiliary relays for the operand of each application instruction as data. (K1M8116 and K2M8116, etc.)

5. Specifications



Caution

- Do not touch the terminal while power is ON.
Electric shock is possible.
- Cleaning and additional tightening of the terminal should only be done after turning OFF the power supply.
Electric shock is possible while the power is ON.
- For repair please contact a service representative. Incorrect repair can cause malfunction or electric shock
- Install or uninstall FX_{1N}-2EYT-BD after turning OFF the power supply. Installing and uninstalling while the power supply ON may cause malfunction.
- Treat as industrial waste when disposing of the product.

5.1 Environmental specifications

The environmental specifications are equivalent to those of the PLC main unit.
(Refer to the manual of the PLC main unit.)

5.2 Power supply specifications

Item	Specification
Consumption current	5V DC Supply by PLC.

5.3 Output specifications

Item	Specification
External power supply	5 to 30V DC
Circuit insulation	Photo coupler
Operation display	LED lighting when photo coupler is driven
The maximum resistance load	0.5A/1 point
The maximum, inductive load	12W/24V DC
Open road leakage current	0.1mA/DC30V
Response time OFF to ON	0.2ms or less
Response time ON to OFF	0.2ms or less

Attention

- This product is designed for use in industrial applications.

Note

- Manufactured by: Mitsubishi Electric Corporation
2-7-3 Marunouchi, Chiyoda-ku, Tokyo, 100-8310 Japan
- Manufactured at: Mitsubishi Electric Corporation Himeji Works
840 Chiyoda-machi, Himeji, Hyogo, 670-8677 Japan
- Authorized Representative in the European Community:
Mitsubishi Electric Europe B.V.
Gothaer Str. 8, 40880 Ratingen, Germany

Manual number : JY992D95201

Manual revision : B

Date : October 2010



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
HIMEJI WORKS : 840, CHIYODA CHO, HIMEJI, JAPAN

FX_{1N}

FX_{1N}-2EYT-BD Output Expansion Board

USER'S MANUAL

JY992D95201B

This manual contains text, diagrams and explanations which will guide the reader in the correct installation, safe use and operation of the FX_{1N}-2EYT-BD Output Expansion Board and should be read and understood before attempting to install or use the unit. Further information can be found in the associated manuals list below.

Specifications are subject to change without notice

Guidelines for the Safety of the User and Protection of the FX_{1N}-2EYT-BD.

This manual has been written to be used by trained and competent personnel. The definition of such a person or persons is as follows:

- Any engineer using the product associated with this manual, should be of a competent nature, trained and qualified to the local and national standards. These engineers should be fully aware of all aspects of safety with regards to automated equipment.
- Any commissioning or service engineer must be of a competent nature, trained and qualified to the local and national standards.
- All operators of the completed equipment should be trained to use that product in a safe and coordinated manner in compliance to established safety practices.

Note: The term 'completed equipment' refers to a third party constructed device which contains or uses the product associated with this manual.

Note's on the Symbols Used in this Manual

At various times through out this manual certain symbols will be used to highlight points of information which are intended to ensure the users personal safety and protect the integrity of equipment.



- Indicates that the identified danger **WILL** cause physical and property damage.



- Indicates that the identified danger could **POSSIBLY** cause physical and property damage.

- Under no circumstances will Mitsubishi Electric be liable or responsible for any consequential damage that may arise as a result of the installation or use of this equipment.
- All examples and diagrams shown in this manual are intended only as an aid to understanding the text, not to guarantee operation. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.
- Owing to the very great variety in possible application of this equipment, you must satisfy yourself as to its suitability for your specific application.

Associated manuals

Manual name	Manual No.	Description
FX _{1S} Series Hardware Manual	JY992D83901	Describes contents related to hardware of FX _{1S} Series PLC such as specifications, wiring and installation.
FX _{1N} Series Hardware Manual	JY992D89301	Describes contents related to hardware of FX _{1N} Series PLC such as specifications, wiring and installation.
FX Programming Manual II	JY992D88101	Describes instructions in FX _{1S} /FX _{1N} /FX _{2N} /FX _{2NC} Series.


1. Introduction

The FX_{1N}-2EYT-BD output expansion board (hereafter referred to as "FX_{1N}-2EYT-BD" or "Function expansion board") is a function expansion board to be installed in the FX_{1S} or FX_{1N} series programmable controller (hereafter referred to as "PLC"), to increase the output of two points.

1.1 Features of the FX_{1N}-2EYT-BD

- Additional increase of two output points.
- Internal mounting in the top of the PLC meaning no need for change to the installation area of the PLC.
- Additional outputs have special auxiliary relays associated to each point, which are turned ON or OFF depending on the required output state of the FX_{1N}-2EYT-BD. As special auxiliary relays are used in the PLC program for the output points, the additional outputs are not included in the regular system I/O count.

1.2 External Dimensions and Each Part Name

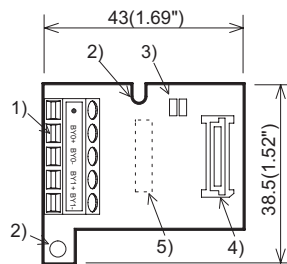

Dimensions: mm (inches)

Accessories : Top cover for board 1
M3 screw to mount board 2
M3 screw to fix top cover 1

- Output terminal.
 - : Unused (Do not wire).
 - BY0+ : + side terminal of output BY0
 - BY0- : - side terminal of output BY0
 - BY1+ : + side terminal of output BY1
 - BY1- : - side terminal of output BY1
 - The top face of this connector is higher than the top face of the PLC panel cover by approximately 7 mm.
- Mounting hole (2-φ3.5(0.14"))
- Output LED
 - BY0 LED : The LED lights when BY0 is turn on.
 - BY1 LED : The LED lights when BY1 is turn on.
- External port for display module FX_{1N}-5DM or memory cassette FX_{1N}-EEPROM-8L
- External connector for PLC

1.3 System configuration

- Only one function expansion board can be used on one FX_{1S} and FX_{1N} series PLC main unit. Do not try to install two or more expansion boards.
- FX_{1N}-2EYT-BD can be used together with FX_{1N}-5DM. Refer to the FX_{1S} or FX_{1N} HARDWARE MANUAL when using the FX_{1N}-2EYT-BD together with an FX_{1N}-5DM.
- When using with the memory cassette FX_{1N}-EEPROM-8L, only program transfer is possible. (The memory cassette cannot be connected permanently)

1.4 Applicable PLC

Series name	Applicable version
FX _{1S}	V2.0 or later
FX _{1N}	V2.0 or later

2. Installation



Caution

- Do not use the function expansion board in environments that contain excessive or conductive dust, corrosive or flammable gas, moisture or rain, excessive heat, regular impact shocks or excessive vibration. Use in these environment may cause electric shock, fire, malfunction, damage or deterioration of the product.
- Cut off all phases of power source before installing / removing or performing wiring work on the unit in order to avoid electric shock or damage of product.
- After the installation wiring etc. replace the PLCs top cover before power ON.
- Securely install the function expansion board, and fix it to the PLC. Defective contact can cause malfunction.

2.1 Mounting


Turn off all power to the PLC before installing the FX_{1N}-2EYT-BD.

- Top cover for FX_{1N}-2EYT-BD (supplied as an accessory))
- M3 screw to fix top cover (supplied as an accessory)
- M3 screw to fix FX_{1N}-2EYT-BD (2 pieces) (supplied as accessories)
- External port for optional equipment
- FX_{1N}-2EYT-BD (function expansion board)



Note: Do not remove this screw on the PLC(FX_{1S}).

- Remove the top cover of the main unit and keep.
- Plug FX_{1N}-2EYT-BD **e)** in to the external port **d)**.
- Fix the function expansion board to the main unit with two M3 screws **c)**. (Tightening torque: 0.3 to 0.6 N·m)
- Attach the top cover for FX_{1N}-2EYT-BD **a)** in place of the original cover. During attachment, remove **a')** with a suitable tool, so that the output terminals are exposed.
- Fix the top cover with an M3 screw **b)**. (Tightening torque: 0.3 to 0.6 N·m)

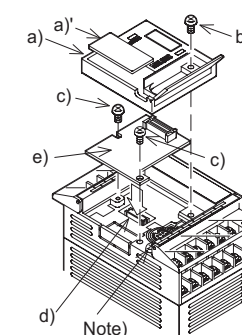

3. Output Wiring

Wiring cautions



Observe the following cautions to avoid electrical shock, short-circuit, disconnection or damage in the unit.

- Do not lay signal cable near to high voltage power cable or house them in the same trunking duct. Effects of noise or surge induction may occur. Keep signal cables a safe distance of more than 100 mm (4") from these power cables.
- Where output signal lines are used over an extended distance consideration for voltage drop and noise interference should be made.
- Twist the end of each stranded cable so that barbed wires are not present.
- Never solder the end of any cables.
- Never connect cables of a non permitted size. Make sure that the number of connected cables is not more than the unit has been designed for.
- Fix cables so that any stress is not directly applied on the terminal block or the cable connection area.
- Tighten the terminals to a torque of 0.5 to 0.6 N·m. Do not tighten terminal screws exceeding the specified torque. Failure to do so may cause equipment failures or malfunctions.
- Use an interlock circuit for external circuit protection.
- Do not wire [●] terminal.

3.1 Applicable cables

- Use AWG26-16 for the connection with output equipment.
- Tighten the terminals to a torque of 0.5 to 0.6N·m. Do not tighten terminal screws exceeding the specified torque. Failure to do so may cause equipment failures or malfunctions.
- When using a different type of cable, defective contact of the terminal part is possible. Use a crimp terminal to achieve a good contact.

Linear and sectional area


Linear	Sectional area (mm ²)	Terminal
AWG26	0.1288	Stranded cable: Remove sheath, twist core wires, then connect cable. Single cable: Remove sheath, then connect cable.
⋮	⋮	
AWG16	1.309	

Terminal processing of wire




3.2 Wiring of output

Sink Type

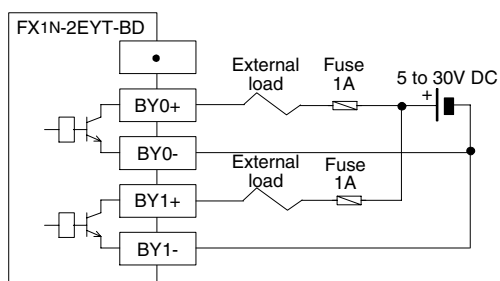

Source type

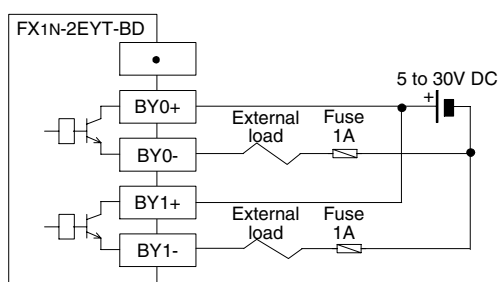

4. Device allocation and program example



Caution


Do not turn the special auxiliary relays either side of M8116 and M8117 ON and OFF carelessly. This may cause malfunction.

4.1 Device allocation

Each output of FX1N-2EYT-BD is allocated a special auxiliary relay. The ON/OFF state of each output is reflected in its corresponding special auxiliary relay.

- BY0 output of FX1N-2EYT-BD : M8116
- BY1 output of FX1N-2EYT-BD : M8117

4.2 Program example



- Turn the special auxiliary relay allocated to each output ON and OFF by program of PLC.

- When the END instruction of the program is executed, the output process is completed. The interruption output processing of HSCS (high-speed counter comparison set), and HSCR (high-speed counter comparison reset), etc. are not carried out. Output refreshing by REF instruction can not be done.
- Do not use the special auxiliary relay for an instruction by which the bit device is of three points or more such as comparison result of the CMP instruction and comparison result of the ZCP instruction is occupied. Do not use the special auxiliary relays for the operand of each application instruction as data. (K1M8116 and K2M8116, etc.)

5. Specifications



Caution

- Do not touch the terminal while power is ON. Electric shock is possible.
- Cleaning and additional tightening of the terminal should only be done after turning OFF the power supply. Electric shock is possible while the power is ON.
- For repair please contact a service representative. Incorrect repair can cause malfunction or electric shock
- Install or uninstall FX1N-2EYT-BD after turning OFF the power supply. Installing and uninstalling while the power supply ON may cause malfunction.
- Treat as industrial waste when disposing of the product.

5.1 Environmental specifications

The environmental specifications are equivalent to those of the PLC main unit. (Refer to the manual of the PLC main unit.)

5.2 Power supply specifications

Item	Specification
Consumption current	5V DC Supply by PLC.

5.3 Output specifications

Item	Specification
External power supply	5 to 30V DC
Circuit insulation	Photo coupler
Operation display	LED lighting when photo coupler is driven
The maximum resistance load	0.5A/1 point
The maximum, inductive load	12W/24V DC
Open road leakage current	0.1mA/DC30V
Response time OFF to ON	0.2ms or less
Response time ON to OFF	0.2ms or less

Attention

- This product is designed for use in industrial applications.

Note

- Manufactured by: Mitsubishi Electric Corporation
2-7-3 Marunouchi, Chiyoda-ku, Tokyo, 100-8310 Japan
- Manufactured at: Mitsubishi Electric Corporation Himeji Works
840 Chiyoda-machi, Himeji, Hyogo, 670-8677 Japan
- Authorized Representative in the European Community:
Mitsubishi Electric Europe B.V.
Gothaer Str. 8, 40880 Ratingen, Germany

Manual number : JY992D95201

Manual revision : B

Date : October 2010

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
HIMEJI WORKS : 840, CHIYODA CHO, HIMEJI, JAPAN