



**MITSUBISHI
ELECTRIC**

CC-Link System Repeater (T-junction) Module

User's Manual

AJ65SBT-RPT

Thank you for purchasing the programmable controller MELSEC series.

Prior to use, please read this and relevant manuals thoroughly to fully understand the product.



MODEL	AJ65SBT-RPT-U
MODEL CODE	13JQ81
IB(NA)-0800078-K(1612)MEE	

● SAFETY PRECAUTIONS ●

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

In this manual, the safety precautions are classified into two levels:

"⚠ WARNING" and "⚠ CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

WARNING

- Input/output could be switched on or off when a problem occurs in the repeater module.
So build an external monitoring circuit that will monitor any input/output signals that could cause a serious accident.

CAUTION

- Use the programmable controller in the environment that meets the general specifications contained in this Manual.
Using the programmable controller outside the range of the general specifications may result in electric shock, fire or malfunction, or may damage or degrade the module.
- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. It may cause malfunction due to noise interference. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables.

[Installation Precautions]

CAUTION

- Do not directly touch the module's conductive parts or electronic components. Doing so may cause malfunctions or failure of the module.
- Tighten the module securely using DIN rail or installation screws within the specified torque range.
Loose terminal screws may cause falling, short circuit or erroneous operation. If the terminal screws are too tight, it may cause falling or short circuit due to damage of the screws.

[Wiring Precautions]

WARNING

- Be sure to shut off all phases of the external power supply used by the system before installation or wiring. If the power is not disconnected at all phases an electric shock or product damage may result.

[Wiring Precautions]

CAUTION

- Always ground the FG terminal to the protective ground conductor. Otherwise there will be an electric shock or misoperation.
- Be sure to tighten any unused terminal screws within a tightening torque range (42 to 50N·cm). Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque. If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from the rating or mis-wiring may cause fire and/or trouble.
- Fix terminal screws securely with the specified torque. Loose terminal screws may cause short circuit or malfunction. If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws or module.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, trouble or malfunction.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the module. Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
- Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
- When disconnecting a cable from the module, do not pull on the cable itself. Before disconnecting the cable from the terminal block, loosen off the screws of the terminal block. If you pull the cable connected to the module, the module or cable can be damaged or misoperation can occur due to cable connection fault.

[Startup and Maintenance Precautions]

WARNING

- Do not touch terminals when the power is on.
It may cause an electric shock or malfunction.

CAUTION

- Never try to disassemble or modify module.
It may cause trouble, malfunction, injury or fire.
- Do not drop or apply any strong impact to the module.
Doing so may damage the module.
- Be sure to shut off all phases of the external power supply used by the system before cleaning or retightening the terminal screws. If you do not switch off the external power supply, it will cause trouble or malfunction of the module.
- Be sure to shut off all phases of the external power supply used by the system before mounting or dismounting the module to or from the panel.
If you do not switch off the external power supply, it will cause trouble or malfunction of the module.
- Do not install/remove the terminal block more than 50 times after the first use of the product. (IEC 61131-2 compliant)
- Before handling the module, always touch grounded metal, etc. to discharge static electricity from the human body.
Failure to do so can cause the module to fail or malfunction.

[Disposal Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.

● PRÉCAUTIONS DE SÉCURITÉ ●

(Lire ces précautions avant toute utilisation du produit.)

Avant d'utiliser ce produit, lire attentivement ce manuel ainsi que les manuels auxquels il renvoie, et toujours considérer la sécurité comme de la plus haute importance en manipulant le produit correctement.

Dans ce manuel, les précautions de sécurité sont classées en deux niveaux, à savoir : "⚠ AVERTISSEMENT" et "⚠ ATTENTION"

⚠ AVERTISSEMENT

Attire l'attention sur le fait qu'une négligence peut créer une situation de danger avec risque de mort ou de blessures graves.

⚠ ATTENTION

Attire l'attention sur le fait qu'une négligence peut créer une situation de danger avec risque de blessures légères ou de gravité moyennes ou risque de dégâts matériels.

Dans certaines circonstances, le non-respect d'une précaution de sécurité introduite sous le titre "⚠ ATTENTION" peut avoir des conséquences graves. Les précautions de ces deux niveaux doivent être observées dans leur intégralité car elles ont trait à la sécurité des personnes et aussi du système.

Veiller à ce que les utilisateurs finaux lisent ce manuel qui doit être conservé soigneusement à portée de main pour s'y référer autant que de besoin.

[PRÉCAUTIONS DE CONCEPTION]

⚠ AVERTISSEMENT

- Les entrées/sorties peuvent se trouver activées ou désactivées par l'apparition d'un problème dans le module répéteur.
On doit donc constituer un circuit de surveillance externe pour le suivi des signaux d'entrée/sortie qui pourraient être à l'origine d'accidents ou d'incidents graves.

ATTENTION

- *Utiliser l'automate programmable dans un environnement en conformité avec les spécifications générales que présente ce manuel.
L'utilisation de l'automate programmable hors des conditions prévues dans les spécifications générales peut être à l'origine d'un choc électrique, d'un départ de feu ou d'un dysfonctionnement, ou peut endommager ou détériorer l'appareil.*
- *Ne pas grouper ni placer à proximité les câbles de commande ou câbles de communication avec les câbles des circuits principaux et/ou d'alimentation. Cela pourrait produire des interférences à l'origine de dysfonctionnements. Installer ces câbles à une distance d'au moins 100mm (3,94 pouces) des câbles des circuits principaux et/ou d'alimentation.*

[Précautions d'installation]

ATTENTION

- *Éviter tout contact direct avec les pièces conductrices ou les composants électroniques du module.
Cela pourrait entraîner des dysfonctionnements ou une panne du module.*
- *Serrer le module fermement avec un rail DIN ou avec des vis de fixation serrées dans les limites du couple de serrage prescrit.
Des vis de bornes desserrées peuvent tomber et être à l'origine de courts-circuits ou d'un fonctionnement erratique.
Un serrage excessif des vis de borne risque de les endommager ces vis dont la chute risque de provoquer un court-circuit.*

[Précautions de câblage]

AVERTISSEMENT

- *Avant installation ou câblage, toujours vérifier que les alimentations externes utilisées par le système ont été coupées sur toutes les phases. Si l'alimentation n'est pas déconnectée sur toutes les phases, il y a risque d'électrocution et d'endommagement du produit.*

[Précautions de câblage]

ATTENTION

- *Toujours mettre à la masse la borne FG sur le conducteur de protection de terre.
Autrement, il y aurait risque d'électrocution ou de dysfonctionnement.*
- *Toujours serrer les vis des bornes inutilisées dans les limites du couple de serrage prescrit (42 à 50N•cm). Faute de quoi, il y a risque de court-circuit par contact avec une borne sans soudure.*
- *Utiliser des bornes sans soudure de type approprié en les serrant dans les limites du couple de serrage prescrit. Une borne sans soudure dont la vis se desserre peut être une source de mauvais contact avec risque de panne.*
- *Effectuer le câblage du module correctement, en respectant la tension nominale et l'affectation des bornes du produit. Le raccordement à une source d'alimentation électrique différente de celle prescrite ou une erreur de câblage peut être à l'origine d'un départ de feu et/ou d'un dysfonctionnement.*
- *Bien serrer les vis de borne au couple de serrage prescrit.
Des vis de bornes desserrées peuvent être à l'origine de court-circuits ou de dysfonctionnements.
Un serrage excessif peut endommager le module ou les vis qui risquent de tomber et de provoquer un court-circuit ou un fonctionnement erratique.*
- *Veiller à ce qu'aucun objet ou impureté, débris de fil ou autres, ne pénètre dans le module.
Cela peut être à l'origine d'un départ de feu, d'une panne ou d'un dysfonctionnement.*
- *Tout câble ou fil raccordé au module doit être maintenu en place par un conduit ou des colliers de fixation.
Faute de quoi, il y a risque d'endommagement du module ou des câbles par ballonnement ou effort de traction exercé accidentellement sur les câbles, tout mauvais contact d'un câble pouvant être à l'origine de dysfonctionnement.*
- *Ne pas installer les lignes de commandes avec les câbles de communication et ne pas les placer à proximité les uns des autres.
Faute de quoi, les bruits parasites produiront des dysfonctionnements.*
- *Pour enlever un câble du module, ne pas tirer sur le câble proprement dit.
Avant de débrancher le câble de la plaque à bornes, desserrer les vis de la plaque à bornes.
Tirer sur un câble raccordé au module peut endommager le module ou le câble et entraîner des dysfonctionnements par mauvais contact.*

[Précautions de démarrage et de maintenance]

AVERTISSEMENT

- *Ne pas toucher aux bornes quand l'appareil est sous tension.
Cela pourrait être à l'origine d'une électrocution ou d'un dysfonctionnement.*

ATTENTION

- *Ne jamais tenter de démonter ou modifier le module.
Il y aurait risque de panne, dysfonctionnement, blessure ou départ de feu.*
- *Ne pas faire tomber le module, ni le soumettre à de forts chocs.
Cela risquerait d'endommager le module.*
- *Ne pas oublier de couper toutes les phases de l'alimentation externe utilisée par le système avant le nettoyage ou le resserrage des vis de bornes.
Négliger de couper l'alimentation externe peut être à l'origine d'une panne ou d'un dysfonctionnement du module.*
- *Ne pas oublier de couper toutes les phases de l'alimentation externe utilisée par le système avant de mettre le module en place dans le tableau ou de l'en retirer.
Négliger de couper l'alimentation externe peut être à l'origine d'une panne ou d'un dysfonctionnement du module.*
- *Après la mise en service du produit, le nombre maximum admissible d'opérations de pose/retrait de la plaque à bornes est de 50 (selon IEC 61131-2).*
- *Avant de manipuler le module, toujours se décharger de la charge électrostatique dont le corps est porteur en touchant un objet métallique mis à la terre.
Faute de quoi, il y a risque de panne ou de dysfonctionnement du module.*

[Précautions de mise au rebut]

ATTENTION

- *Lors de sa mise au rebut, ce produit doit être traité comme un déchet industriel.*

● CONDITIONS OF USE FOR THE PRODUCT ●

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

REVISIONS

* The manual number is given on the bottom right of the cover.

Print Date	*Manual Number	Revision
Oct., 1999	IB (NA)-0800078-A	First edition (Japanese only)
Nov., 1999	IB (NA)-0800078-B	English is added.
Feb., 2000	IB (NA)-0800078-C	<u>Correction</u> Section 3.2, Chapter 5
Feb., 2005	IB (NA)-0800078-D	<u>Addition</u> Conformation to the EMC Directive and Low Voltage Instruction, Section 2.2 <u>Correction</u> SAFETY PRECAUTIONS, About the Manuals, Abbreviated names, generic names and terms, Product structure, Chapter 1, Section 1.1, 2.1, 2.3, 3.1, 3.2, 3.3, 3.4, 4.1, 4.2.1, 4.2.2, 4.3, 4.4, 4.6, 4.7, 4.8, Chapter 5, Chapter 6
Mar., 2006	IB (NA)-0800078-E	<u>Correction</u> REVISIONS, Conformation to the EMC Directive and Low Voltage Instruction, Section 2.2, 2.3
Sep., 2006	IB (NA)-0800078-F	<u>Correction</u> SAFETY PRECAUTIONS
Dec., 2006	IB (NA)-0800078-G	<u>Correction</u> About the Manuals, Abbreviated names, generic names and terms, Section 2.3, 3.2, 3.3, 4.2.1
Aug., 2007	IB (NA)-0800078-H	<u>Correction</u> Section 4.3, Chapter 6
Dec., 2011	IB (NA)-0800078-I	<u>Addition</u> CONDITIONS OF USE FOR THE PRODUCT, SAFETY PRECAUTIONS (Chinese) <u>Correction</u> SAFETY PRECAUTIONS, About the Manuals, Conformation the EMC directive and Low Voltage Instruction, Section 3.1, 4.2.1, 4.7

* The manual number is given on the bottom right of the cover.

Print Date	*Manual Number	Revision
Nov., 2014	IB (NA)-0800078-J	<p data-bbox="511 142 596 165">Addition</p> <p data-bbox="511 176 615 199">Section 2.3</p> <p data-bbox="511 209 617 232">Correction</p> <p data-bbox="511 243 967 311">Related manuals, ABBREVIATED NAMES, GENERIC NAMES AND TERMS, Section 2.4, 3.2, 3.3, 4.3, Chapter 6</p> <p data-bbox="511 321 594 345">Change</p> <p data-bbox="511 355 795 378">from Section 2.3 to Section 2.4</p>
Dec., 2016	IB (NA)-0800078-K	<p data-bbox="511 398 596 422">Addition</p> <p data-bbox="511 432 832 455">SAFETY PRECAUTIONS (French)</p> <p data-bbox="511 465 617 489">Correction</p> <p data-bbox="511 499 760 522">Section 3.1, 4.3, Chapter 6</p>

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

CONTENTS

1. OVERVIEW	18
1.1 Features.....	18
2. SYSTEM CONFIGURATION	20
2.1 Total configuration	20
2.2 Checking hardware versions.....	21
2.3 Checking serial number	21
2.4 Cautions on system configuration.....	22
3. SPECIFICATIONS	29
3.1 General specifications.....	29
3.2 Performance specifications.....	31
3.3 Specifications of connection cables	32
3.4 Max. transmission distance.....	32
4. PROCEDURE UP TO START OF DATA LINK	33
4.1 Procedure up to start of data link.....	33
4.2 Mounting and installation	33
4.2.1 Cautions on handling.....	33
4.2.2 Installation environment	35
4.3 Names and settings of parts	36
4.4 Check of module state (Hardware test)	39
4.5 Setting of switches	40
4.6 Installation and removal of protective cover.....	41
4.7 Connection of module through CC-Link dedicated cable.....	42
4.8 Check for state of connection (Line test)	44
5. TROUBLESHOOTING	46
6. EXTERNAL DIMENSIONS.....	50

ABOUT MANUALS

The following manuals are related to this product.
Referring to this list, please request the necessary manuals.

Related
manuals

Manual Name	Manual Number (Model Code)
MELSEC iQ-R CC-Link System Master/Local Module User's Manual (Startup)	SH-081269ENG 13JX10
MELSEC iQ-R CC-Link System Master/Local Module User's Manual (Application)	SH-081270ENG 13JX19
MELSEC-Q CC-Link System Master/Local Module User's Manual	SH-080394E (13JR64)
MELSEC-L CC-Link System Master/Local Module User's Manual	SH-080895ENG 13JZ41
CC-Link System Master/Local Module Type AJ61QBT11/A1SJ61QBT11 User's Manual	IB-66722 (13J873)
CC-Link System Master/Local Module Type AJ61BT11/A1SJ61BT11 User's Manual	IB-66721 (13J872)
CC-Link System Optical Repeater Module User's Manual AJ65SBT- RPS/RPG	IB-0800089 (13JQ85)
CC-Link System Space Optical Repeater Module User's Manual AJ65BT-RPI-10A/AJ65BT-RPI-10B	IB-0800090 (13JQ86)
CC-Link System Low Profile Waterproof Type Repeater Hub Module User's Manual AJ65FBTA-RPH	IB-0800288 (13JP55)
CC-Link System Spring Clamp Terminal Block Type Repeater Hub Module User's Manual AJ65BTS-RPH	IB-0800346 (13JP97)

COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVE

(1) Method of ensuring compliance

To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary.

Please refer to one of the following manuals.

- User's manual for the CPU module or head module used
- Safety Guidelines (this manual is included with the CPU module, base unit, or head module)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

(2) Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the manuals listed under (1).

ABBREVIATED NAMES, GENERIC NAMES AND TERMS

Abbreviated names, generic names and terms Description

Abbreviated names, generic names and terms	Description
AJ65SBT-RPT	Abbreviation of AJ65SBT-RPT type CC-Link system repeater (T-junction) module.
AJ65FBTA-RPH	Abbreviation of AJ65FBTA-RPH type CC-Link system low profile waterproof type repeater module.
AJ65BTS-RPH	Abbreviation of AJ65BTS-RPH type CC-Link system spring clamp terminal block type repeater hub module.
AJ65SBT-RPS/RPG	Abbreviation of AJ65SBT-RPS/AJ65SBT-RPG type CC-Link system optical repeater module.
AJ65BT-RPI-10A/10B	Abbreviation of AJ65BT-RPI-10A/AJ65BT-RPI-10B type CC-Link system space optical repeater module.
Engineering tool	Generic name of GX Developer, GX Works2, and GX Works3
Master station	A station that controls the entire system. This station can perform cyclic transmission and transient transmission with all stations. Only one master station can be used in a system.
Local station	A station that performs cyclic transmission and transient transmission with the master station and other local stations.
Remote I/O station	A station that exchanges I/O signals (bit data) with the master station by cyclic transmission. This station cannot perform transient transmission.
Remote device station	A station that exchanges I/O signals (bit data) and I/O data (word data) with the master station by cyclic transmission. This station cannot perform transient transmission.
Remote station	Generic name of a remote I/O station and a remote device station
Intelligent device station	A station that exchanges I/O signals (bit data) and I/O data (word data) with another station by cyclic transmission. This station responds to a transient transmission request from another station and also issues a transient transmission request to another station.
Master module	Generic name of modules that can serve as a master station
Local module	Generic name of modules that can serve as a local station
Remote module	Modules that can serve as a remote I/O station, remote device station, and intelligent device station. Generic name of AJ65BTB□□-□□, AJ65BTC□-□□, AJ65BT-64AD, AJ65BT-64DAV, and AJ65BT-64DAI
Segment	System between terminating resistors connected to each other through cross-over cables. The conventional CC-Link system can be said to be configured with one segment (See Section 2.1.).
Repeater	Module for expanding the CC-Link system by connecting the segments to each other.

Abbreviated names, generic names and terms	Description
Transient transmission	A function of communication with another station, which is used when requested by a dedicated instruction or an engineering tool
Cyclic transmission	A function by which data are periodically exchanged among stations on the same system using link devices

PRODUCT STRUCTURE

The product structure of AJ65SBT-RPT is given in the table below.

Part name	Quantity
AJ65SBT-RPT module	1
Terminating resistor 110Ω 1/2W (Brown, Brown, Brown)	2
Terminating resistor 130Ω 1/2W (Brown, Orange, Brown)	2

1. OVERVIEW

This User's Manual describes the specifications, names of parts, and settings of the AJ65SBT-RPT type CC-Link system repeater (T-junction) module (hereafter abbreviated as AJ65SBT-RPT) used in the CC-Link system.

1.1 Features


The AJ65SBT-RPT module is used to increase the flexibility of laying down the cables of the CC-Link system.

Use of this module enables the transmission distance of the CC-Link system to be extended and the wiring to be laid down in the form of T-junction.

(1) Extended transmission distance in CC-Link system

Use of this module enables the transmission distance of the CC-Link system to be extended.

In addition, use of multiple modules enables the transmission distance of the CC-Link system to be extended up to 10 stages.

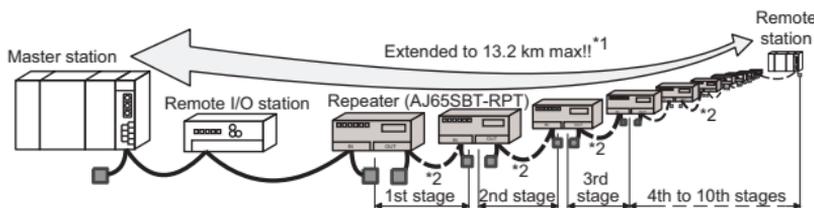


*1 Max. transmission distance at a transmission speed of 156 kbps.


*2 Though it is not shown here, the other remote stations can be connected between the repeaters.

(2) Enabled T-junction wiring in CC-Link system

Arrangement of this module between the modules of the CC-Link system enables the CC-Link system to be wired in the form of T-junction. This is applicable to all CC-Link systems operating at transmission speeds of 10 Mbps, 5 Mbps, 2.5 Mbps, 625 kbps and 156 kbps.

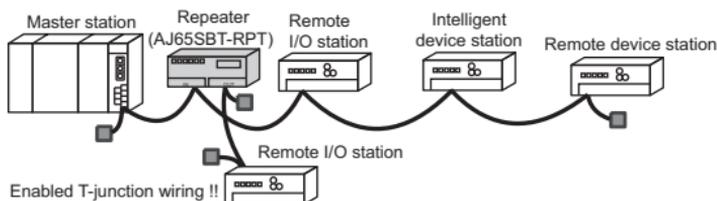

- (3) Mountable to control panel with either screws or DIN rail
This module can be mounted onto the control panel with either screws or DIN rail.
- (4) Compact module size
The module size has been reduced to the same one as that of AJ65SBTB1-8□ type small remote I/O module.

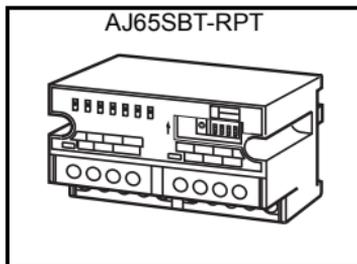


Item	Size
Height	50.0mm (1.97 inch)
Width	87.3mm (3.44 inch)
Depth	40.0mm (1.58 inch)

2. SYSTEM CONFIGURATION


2.1 Total configuration

The total configuration employed when the AJ65SBT-RPT module is used is as shown below.

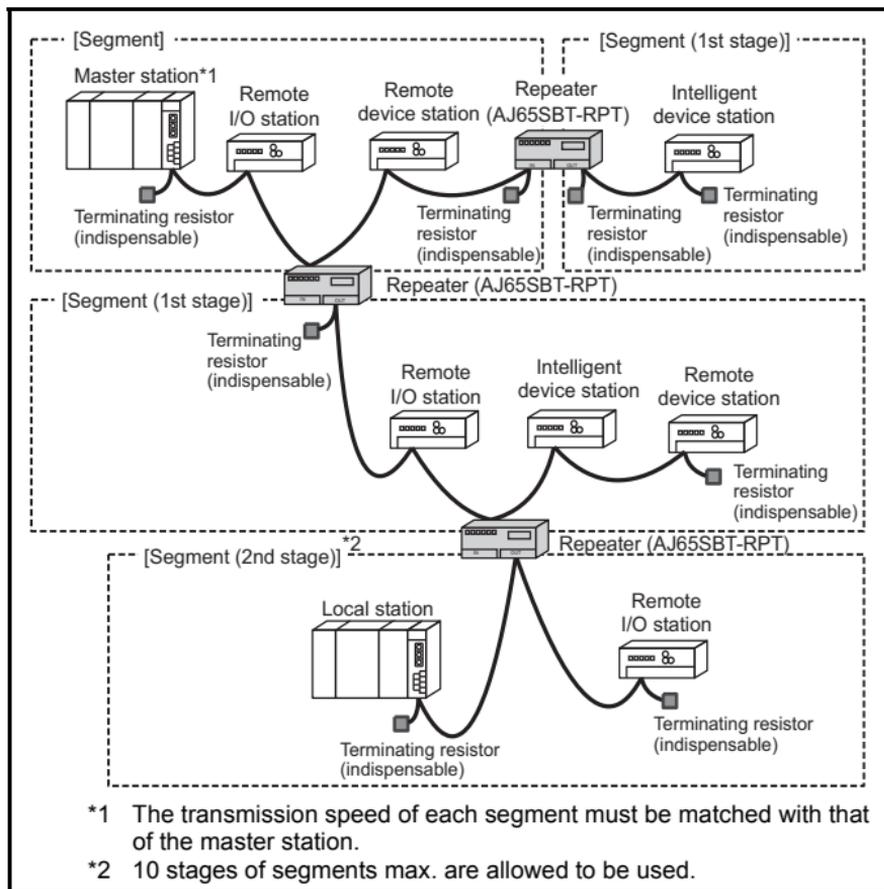


2.2 Checking hardware versions

The hardware versions of the AJ65SBT-RPT can be checked on the DATE section on the rating plate, which is situated on the side on the module.

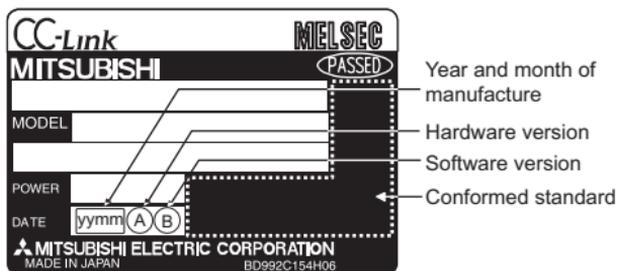

2.3 Checking serial number

The serial number of the AJ65SBT-RPT can be checked on the SERIAL section on the rating plate.

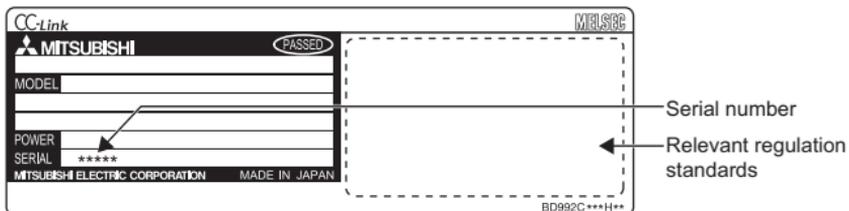


2.4 Cautions on system configuration

(1) Conditions of usable master module


When the AJ61BT11, A1SJ61BT11, AJ61QBT11 and A1SJ61QBT11 modules are used, those of the functional version B or later must be employed. Use the master module bearing the version 9707 B or later in the DATE column of the name plate as shown in the figure below.

When the RJ61BT11, QJ61BT11N, QJ61BT11, LJ61BT11 module is used, any module can be used irrespective of the version.


(a) Rating plate of AJ61BT11 or AJ61QBT11

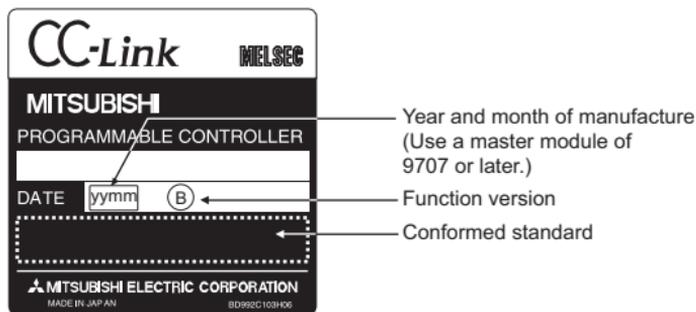

(b) Rating plate of A1SJ61BT11 or A1SJ61QBT11

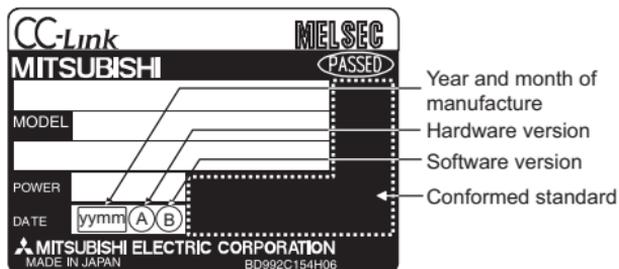

- (2) Max. number of modules connected to configure CC-Link system
Up to 64 modules of repeaters can be connected in one segment.
In the CC-Link system where repeaters are used, also the number of remote stations capable of being controlled by one master station is the same as in the other systems.
For details, refer to the User's Manual of the applicable master module.
- (3) Max. number of stages connected to configure segment
Use of this module enables communication between the master station located in a segment and a remote station located in a segment apart by 10 stages max. from the segment where the master station exists.

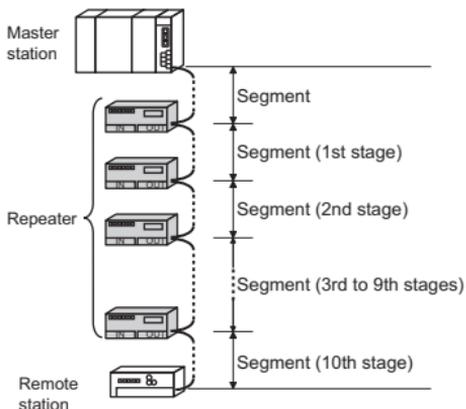


- (4) Instructions for using different models of repeaters in combination
 Note that when combining the repeaters of different models, there are the following restrictions on the number of connectable repeaters and the number of connected stages.

Combination pattern	Max. number of repeaters						Max. number of stages
	AJ65BTS -RPH	AJ65FBT A-RPH	AJ65SBT -RPH	AJ65SBT -RPS	AJ65SBT -RPG	AJ65BT -RPI -10A/10B	
1)	1	—	2	—	—	—	3
	—	1	2	—	—	—	
2)	1	—	—	2(1 set)	—	—	2
	1	—	—	—	2(1 set)	—	
	—	1	—	2(1 set)	—	—	
	—	1	—	—	2(1 set)	—	
3)	1	—	—	—	—	2(1 set)	
	—	1	—	—	—	2(1 set)	
4)	—	—	2	4(2 set)	—	—	4
5)	—	—	2	—	2(1 set)	—	3
6)	—	—	2	—	—	2(1 set)	
7)	—	—	—	2(1 set)	2(1 set)	—	2
8)	—	—	—	2(1 set)	—	2(1 set)	
	—	—	—	—	2(1 set)	2(1 set)	
9)	1	1	—	—	—	—	


POINT

- For the CC-Link system, up to 2 repeater types can be used in combination. Using 3 models or more is not allowed.
 - When repeaters are connected in the same segment by link wiring, up to 64 modules can be connected.
- For details, refer to the user's manual of the master module used.


Ex.) A CC-Link system with combination pattern 6) is built

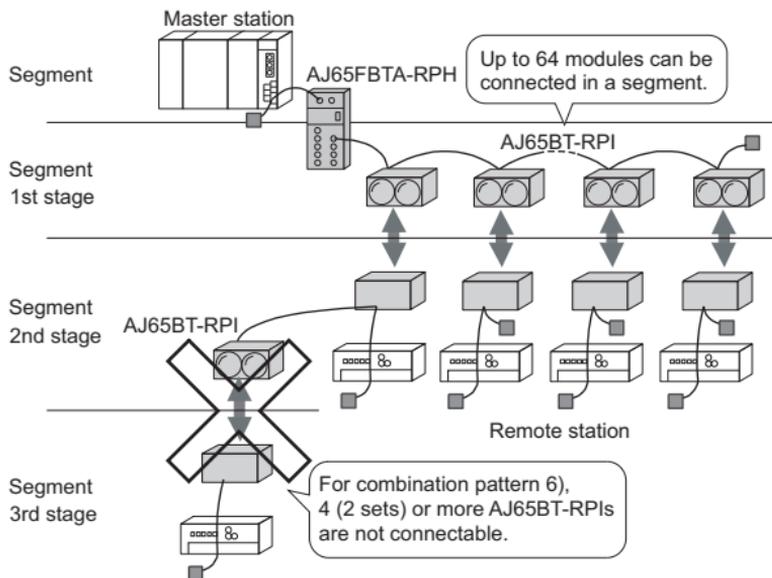


(a) Combination pattern 1)

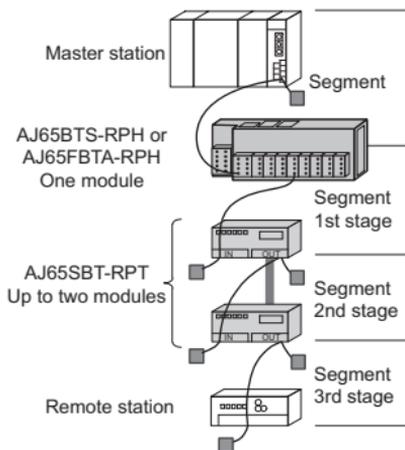


(b) Combination pattern 2)

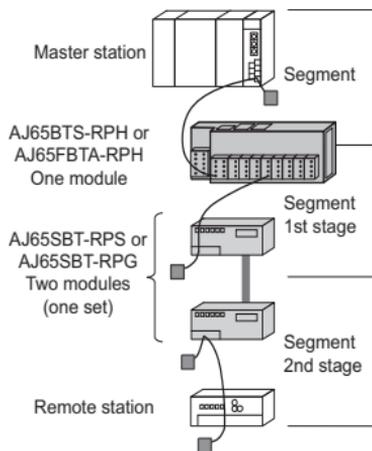


(c) Combination pattern 3)

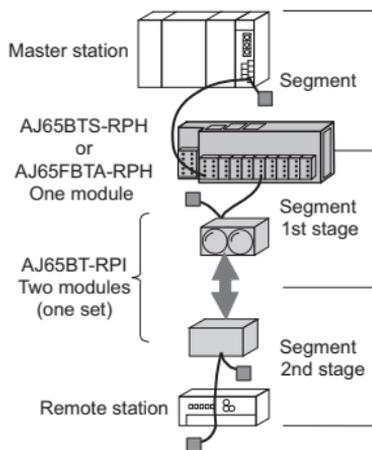


(d) Combination pattern 4)

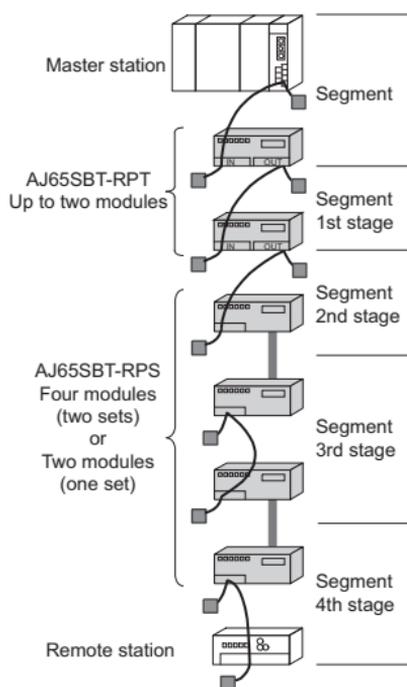


(e) Combination pattern 5)

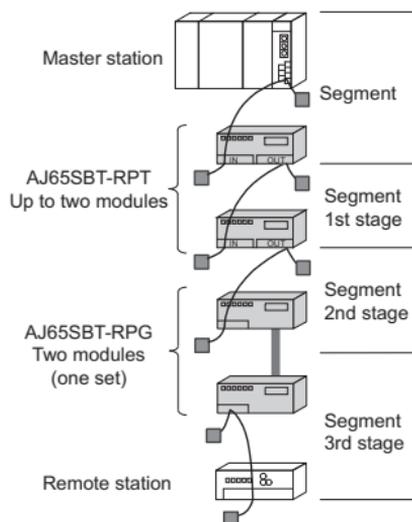


(g) Combination pattern 7)

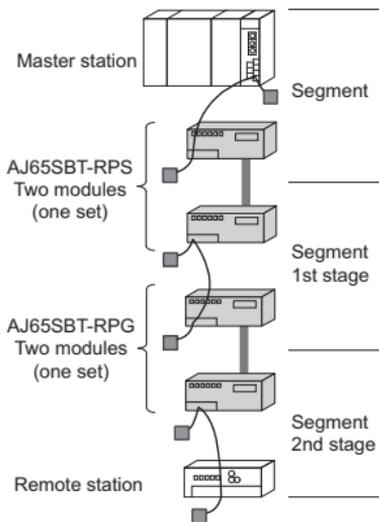


(f) Combination pattern 6)

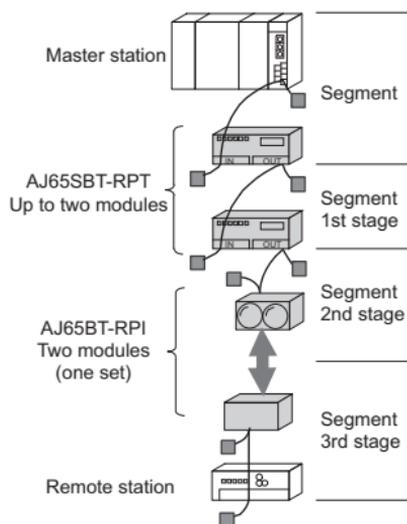

(h) Combination pattern 8)

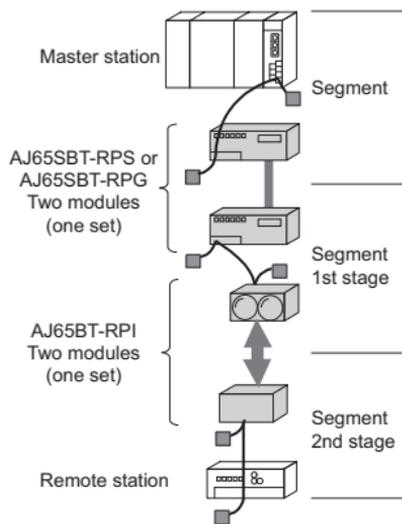

(i) Combination pattern 9)

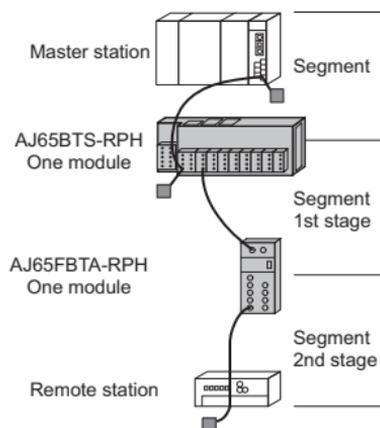

3. SPECIFICATIONS

3.1 General specifications

The general specifications of the AJ65SBT-RPT are shown below.

Item	Specifications					
Operating ambient temperature <i>Température ambiante de fonctionnement</i>	0 to 55 °C 0 à 55 °C					
Storage ambient temperature	-20 to 75 °C					
Operating ambient humidity	10 to 90%RH, non-condensing					
Storage ambient humidity						
Vibration resistance	Compliant with JIS B 3502 and IEC 61131-2	Under intermittent vibration	Frequency	Constant acceleration	Half amplitude	Sweep Count
			5 to 8.4Hz	—	3.5 mm	10 times each in X, Y, Z directions
		Under continuous vibration	8.4 to 150Hz	9.8 m/s ²	—	
			5 to 8.4Hz	—	1.75mm	—
8.4 to 150Hz	4.9 m/s ²	—				
Shock resistance	Compliant with JIS B 3502 and IEC 61131-2 (147 m/s ² , 3 times each in 3 directions X, Y, Z)					
Operating atmosphere	No corrosive gases					
Operating altitude *3	0 to 2000m					
Installation location	Inside a control panel *4					
Overvoltage category *1	II or less					
Pollution degree *2	2 or less					

- *1 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises.
Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300V is 2500V.
- *2 This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.
Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.
- *3 Do not use or store the programmable controller under pressure higher than the atmospheric pressure of altitude 0m. Doing so may cause malfunction. When using the programmable controller under pressure, please consult your local Mitsubishi Electric representative.
- *4 It can also be used in an environment other than on the control panel if the conditions such as usage ambient temperature and humidity are satisfied.

3.2 Performance specifications

The performance specifications of the AJ65SBT-RPT module are shown below.

Item		Specifications	
Transmission speed		Selectable from among 156kbps, 625kbps, 2.5Mbps, 5Mbps and 10Mbps	
Max. number of stages connected to configure segment		AJ65SBT-RPT only (Refer to Section 2.4 (3))	10 stage
		Combination of AJ65SBT-RPT and AJ65SBT-RPS (Refer to Section 2.4 (4))	4 stage
		Combination of AJ65SBT-RPT and one of AJ65FBTA-RPH, AJ65BTS-RPH, AJ65SBT-RPG, or AJ65BT-RPI (Refer to Section 2.4 (4))	3 stage
Max. transmission distance of each segment		Varies according to transmission speed (Refer to Section 3.4.).	
Max. number of modules connected		64 (Refer to Section 2.4 regarding the conditions for the number of modules connected).	
Number of stations occupied		0 (none)	
Settable station number		None	
Repeater power supply	Voltage	20.4 to 26.4 V DC	
	Current	60.0 mA (TYP. 24 V DC)	
Noise durability		Simulator noise of 500 Vp-p, obtained by a noise simulator using noise width of 1 μ s and noise frequency of 25 to 60 Hz	
Maximum voltage		500V AC for 1 minute between all DC external terminals and ground	
Insulation resistance		10M Ω or higher, measured with a 500V DC insulation resistance tester	
Weight		0.2 kg	
External connection	Communication area, module power supply	7-point 2-piece terminal block [transmission circuit, module power supply, FG] M3 \times 5.2 Tightening torque: 59 to 88N-cm Applicable solderless terminals: 2 max.	
Applicable solderless terminals		<ul style="list-style-type: none"> • RAV1.25-3 (conforming to JIS C 2805) [Applicable wire size: 0.3 to 1.25mm²] • V2-MS3, RAP2-3SL, TGV2-3N [Applicable wire size: 1.25 to 2.0mm²] 	

3.3 Specifications of connection cables

Use the CC-Link dedicated cables for the CC-Link system. If cable other than the CC-Link dedicated cable is used, the performance of the CC-Link system cannot be guaranteed.


For the specifications of the CC-Link dedicated cables or any other inquiries, visit the following site:

CC-Link Partner Association website: www.cc-link.org

Remark

For details, refer to the CC-Link cable wiring manual issued by the CC-Link Partner Association.

3.4 Max. transmission distance

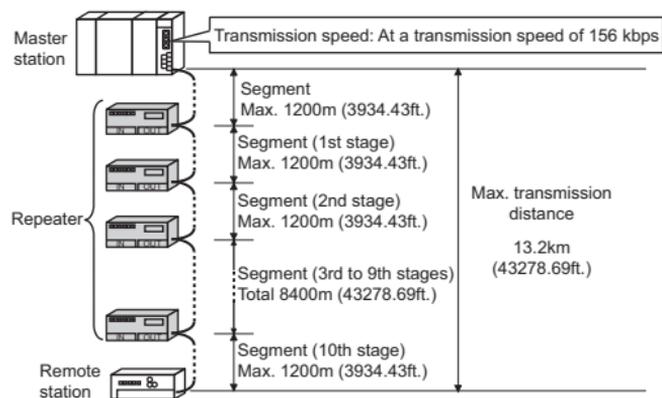


Conditions	Description
Transmission speed	The maximum transmission distance in each segment is the same as that in normal CC-Link system (system configured with one segment only). The maximum transmission distance in each segment varies according to the transmission speed. For details, refer to the User's Manual of the applicable master module. (The length of the cables between repeater stations is treated in the same manner as in the remote I/O station.)
Max. number of stages connected to configure segment	When one connection stage is added, the maximum transmission distance is added by an amount equivalent to one segment.

4. PROCEDURE UP TO START OF DATA LINK

4.1 Procedure up to start of data link

The procedure ranging from the installation of the AJ65SBT-RPT module to the start of data link is described below.

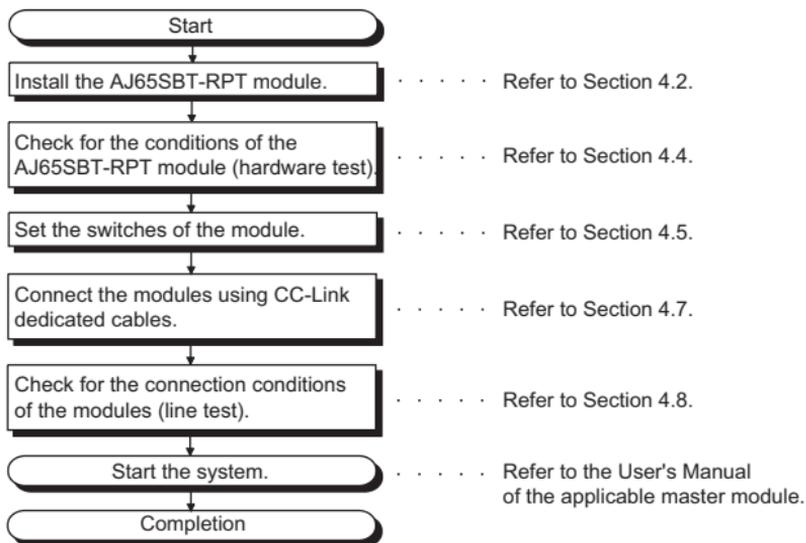

POINT

<p>The procedure described here is for the AJ65SBT-RPT module only. In order for you to understand the procedure of the entire CC-Link system, refer to the User's Manual of the applicable master module.</p>
--

4.2 Mounting and installation


4.2.1 Cautions on handling

Cautions on handling the AJ65SBT-RPT module are described below.

- (1) Tighten screws (such as a module fixing screw) within the tightening torque range specified in the table below.
Do not over-tighten these screws. The screws and module case may be damaged.

Screw location	Specified torque range
Module fixing screw (M4 thread with finished circular flat washer)	0.78 to 1.08 N·m
Terminal block screw (M3 thread) <i>Vis de plaque à bornes (filetage M3)</i>	0.59 to 0.88 N·m <i>0.59 à 0.88 N·m</i>
Terminal block mounting screw (M3.5 thread)	0.68 to 0.98 N·m

- (2) A protective film is attached on the module's surface for the purpose of scratch prevention during transportation.
Prior to use, be sure to remove it.
- (3) When a DIN rail is used, install it taking care with the following.
- Applicable DIN rail type (conforming to IEC 60715)
TH35-7.5Fe
TH35-7.5A1
 - Intervals of DIN rail mounting screws
Mount the DIN rail by fixing it with mounting screws at intervals of 200 mm (7.87inch) or shorter.
- (4) To install the AJ65SBT-RPT module on the DIN rail, press, by the finger, the DIN rail hook located on the underside of the module at the centerline until you hear it click.

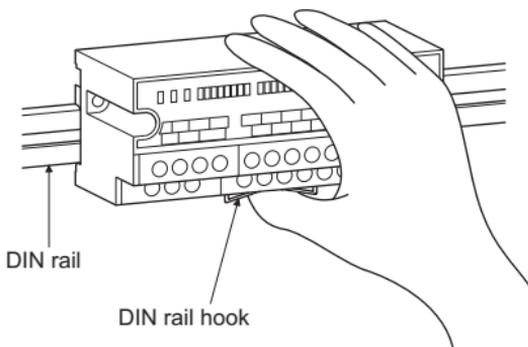


- (5) When installing the AJ65SBT-RPT module on the control panel, to improve the ventilation and facilitate the replacement of the module, provide a distance of 60 mm (2.36inch) or longer between the upper and lower surfaces of the module and the structural members or parts.

- (6) Install the AJ65SBT-RPT module on a flat smooth surface. If there are irregularities on the installation surface, undue force may be applied to the printed circuit boards, and the boards may be damaged.
- (7) Depending on the grounding condition of the system, a high-frequency noise may occur between the systems. When these systems are connected through CC-Link dedicated cables, a communication error may occur by the mixing of noise into the repeaters.

If the high-frequency noise occurs between the systems connected through the cables of 10 m (32.79ft.) or shorter, take either of the measures specified below.

- Connect the systems through cables of 2 mm² or larger (across FG terminals of the remote station in each system, or across grounds of the control panel to which the remote station is grounded).
- Use CC-Link cables of 10 m (32.79ft.) or longer between the systems.

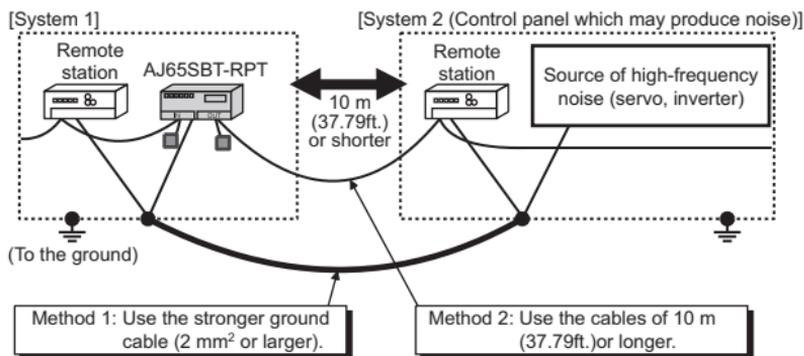


4.2.2 Installation environment

For the installation environment, refer to section 3.1.

4.3 Names and settings of parts

The names of parts of the AJ65SBT-RPT module, indication statuses of LEDs, and settings of switches are described below.

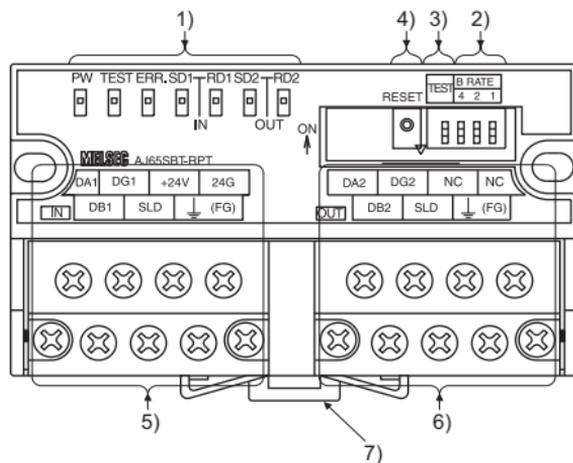

No.	Name	Application		
1)	Operation status display LED	Check for the module condition by observing the state of lighting of the LED.		
		LED Name	Application	
			For hardware test	For normal operation
		PW	Goes on: Power supply is turned ON. Goes off: Power supply is turned OFF or reset switch is pressed.	
		TEST	Goes on: Hardware test is under operation. Goes off: Communication is under operation.	
		ERR.	Goes on: Hardware is faulty. Switch set value is faulty. Flashes : Switch set value was changed during operation. Goes off: Normal	Goes on: Communication is faulty. Switch set value is faulty. Flashes : Switch set value was changed during operation. Goes off: Communication is normal.
		SD1	Flashes : Circuit is normal. Goes off: Circuit is faulty.	Goes on: Data is being transmitted to IN side. Goes off: Data is not transmitted to IN side.
		RD1	Flashes : Circuit on IN side is normal. Goes off: Circuit on IN side is faulty.	Goes on: Data is being received from IN side. Goes off: Data is not received from IN side.
		SD2	Flashes : Circuit is normal. Goes off: Circuit is faulty.	Goes on: Data is being transmitted to OUT side. Goes off: Data is not transmitted to OUT side.
		RD2	Flashes : Circuit on OUT side is normal. Goes off: Circuit on OUT side is faulty.	Goes on: Data is being received from OUT side. Goes off: Data is not received from OUT side.

No.	Name	Application				
2)	Transmission speed setting switch	Set the transmission speed of the module (set to 0 at the time of delivery).				
		Setting value	Setting switch status			Transmission speed
			4	2	1	
		0	OFF	OFF	OFF	156kbps
		1	OFF	OFF	ON	625kbps
		2	OFF	ON	OFF	2.5Mbps
		3	OFF	ON	ON	5Mbps
	4	ON	OFF	OFF	10Mbps	
	5 to 7	Cannot be set. If set to 5 to 7, the ERR. LED is turned on and data are not transferred.				
3)	Test switch	Set the operating condition of the module (set to OFF at the time of delivery).				
		State of switch		Operating state		
		ON		Hardware test		
		OFF		Normal operation		
4)	Reset switch	Reset the module on the hardware side (set to OFF at the time of delivery).				
		State of switch		Operating state		
		ON		Hardware test		
		OFF		Normal operation		
5)	IN side terminal block	Terminal block for connecting the CC-Link dedicated cable on the side where the power supply and master station are located.				
6)	OUT side terminal block	Terminal block for connecting the CC-Link dedicated cable on the side where the master station is not located.				
7)	Hook for DIN rail	Hook for installing the module on the DIN rail. To install the module, press the DIN rail hook at the centerline until you hear it click.				


POINT

The states of setting of the test switch and transmission speed set switch obtained when the module power supply is set from OFF to ON or the reset switch is set to OFF become effective.
When the states of setting are changed with the module power supply turned ON, perform the above operations again.

4.4 Check of module state (Hardware test)

Check that the module operates normally using the module proper.
Ensure to perform this check before configuring the system.

Perform the test in accordance with the steps shown below.

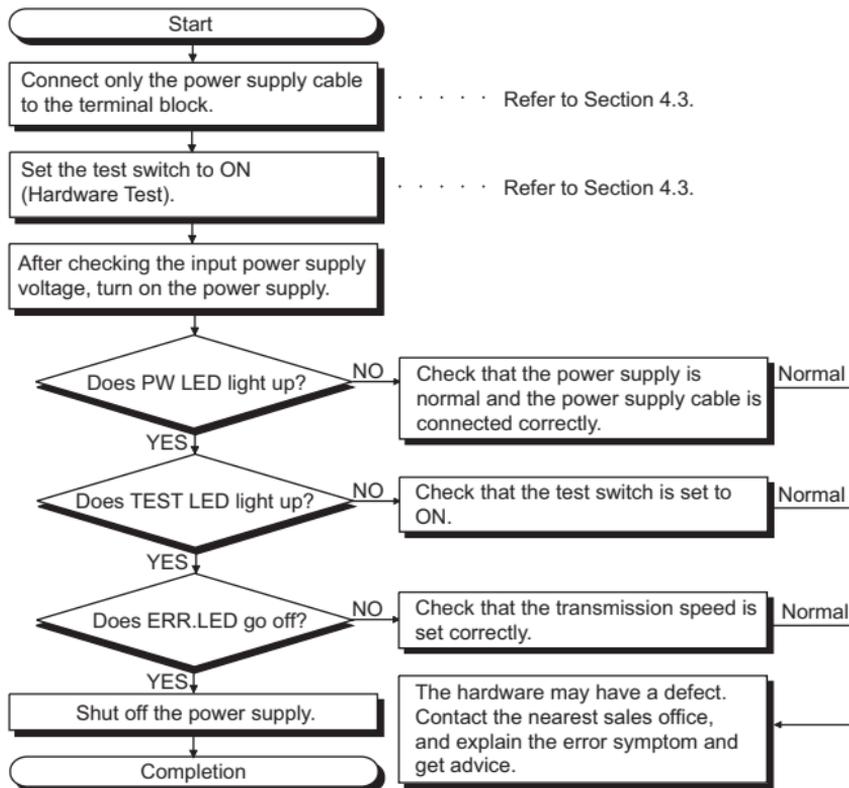

4.5 Setting of switches

The setting of the switches on the AJ65SBT-RPT module is described below.

(1) Test switch

This switch is used to set the operating condition of the AJ65SBT-RPT module.

In normal operation, set it to OFF.

For detail of the setting, refer to Section 4.3.

POINT

<p>The states of setting of the test switch obtained when the module power supply is set from OFF to ON or the reset switch is set to OFF become effective. When the states of setting are changed with the module power supply turned ON, perform the above operations again.</p>
--

(2) Transmission speed setting switch

This switch is used to set the transmission speed of the AJ65SBT-RPT module.

For detail of the setting, refer to Section 4.3.

POINT

- | |
|---|
| <ul style="list-style-type: none">• Set to the same state of setting as set in the master station.• The states of setting of the transmission speed setting switch obtained when the module power supply is set from OFF to ON or the reset switch is set to OFF become effective. <p>When the states of setting are changed with the module power supply turned ON, perform the above operations again.</p> |
|---|

4.6 Installation and removal of protective cover

A protective cover can be installed on the front surface of the AJ65SBT-RPT module to prevent foreign matter from entering the terminal blocks. The protective cover applicable to the AJ65SBT-RPT module is specified below.


Procure it as necessary.

Item	Type	Description	Remarks
Protective cover	A6CVR-8	Cover for prevention of entry of foreign matter into terminal blocks (sold in batches of 10).	Optional

To dismount and mount the protective cover on and from the AJ65SBT-RPT module, follow the steps below.


(1) Mounting

With the upper section of the protective cover hooked to the upper end section of the module, press the lower section of the cover until you hear it click.

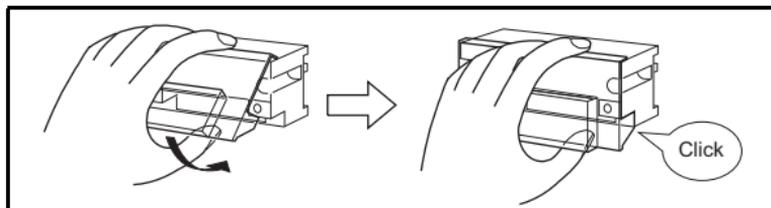

(2) Dismounting

With the finger applied to the lower section of the protective cover, raise the cover upward.

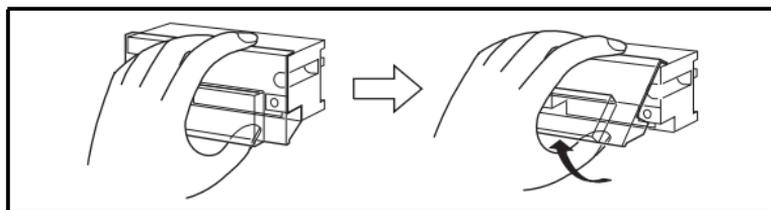


4.7 Connection of module through CC-Link dedicated cable

Raccordement du câble dédié CC-Link de traversée de module

The method of connecting the AJ65SBT-RPT module to the CC-Link system through the CC-Link dedicated cable is shown below.

La méthode de connexion d'un module AJ65SBT-RPT à un système CC-Link par câble dédié CC-Link est représentée schématiquement ci-après.

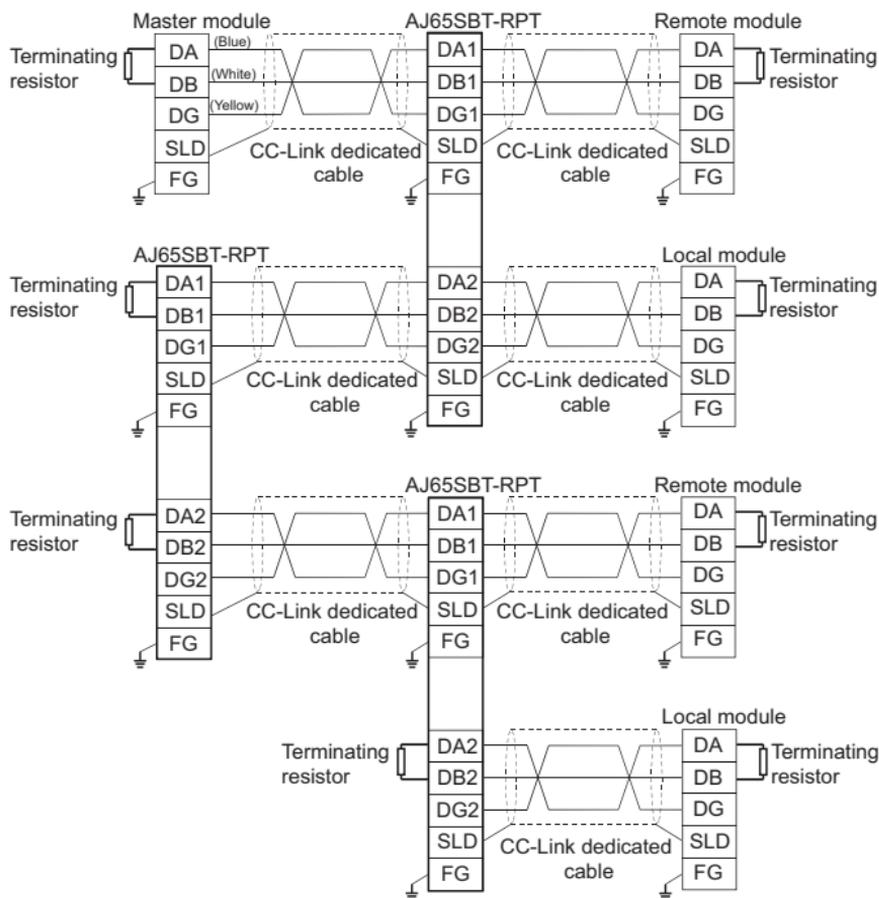

English	French
Master module	<i>Module maître</i>
Remote module	<i>Module distant</i>
Terminating resistor	<i>Résistance d'extrémité</i>
Blue	<i>bleu</i>
White	<i>blanc</i>
Yellow	<i>jaune</i>
CC-Link dedicated cable	<i>Câble dédié pour CC-Link</i>
Local module	<i>Module local</i>

Important
Important

In each segment, ensure to use the same type of CC-Link dedicated cables. If different types of cables are used, normal data transmission will not be assured.

Sur chaque segment, s'assurer qu'on utilise des câbles dédiés CC-Link du même type.

Si les câbles utilisés sont de types différents, la transmission normale des données ne peut être garantie.

POINT
POINT

- Ensure to connect the terminating resistor to both end modules of each segment.
In addition, connect them between DA and DB (DA1-DB1 and DA2-DB2 for AJ65SBT-RPT).
(The terminating resistor are furnished with the module.)
- The terminating resistor vary according to the type of cables in use.
For detail, refer to the User's Manual of the applicable master module.
- Connect the shield wire of the CC-Link dedicated cable to "SLD" of each module, and ground both ends of the shielded wire via "FG".
The SLD and FG are connected within the module.
- *Ne pas oublier de raccorder les résistances terminales aux deux modules d'extrémité sur chaque tronçon.*
De plus, établir la connexion entre DA et DB (DA1-DB1 et DA2-DB2 pour AJ65SBT-RPT).
(La résistance terminale est fournie avec le module.)
- *La résistance terminale à utiliser dépend du type des câbles.*
Pour le détail, voir le Manuel de l'utilisateur du module maître concerné.
- *Raccorder le fil de blindage de blindage du câble dédié CC-Link sur "SLD" de chaque module, et mettre à la terre les deux extrémités via "FG".*
SLD et FG sont connectés à l'intérieur du module.

4.8 Check for state of connection (Line test)

Connect all modules including the AJ65SBT-RPT module through the CC-Link dedicated cable. Then, check that the CC-Link system is in the state capable of performing a data link normally.


Because whether or not a master station can establish a data link with a particular slave station can be checked by the connection status check (circuit test), an error module can be identified.

For the connection status check (circuit test), perform the circuit test 1 of the master module. If an error is detected, perform the circuit test 2 of the master module.

For the details of circuit tests 1 and 2, refer to the user's manual of the master module used.

Perform the test following the steps on the next page.

POINT
Perform the circuit test 2 of the master module by selecting the target stations as described in (1) to (3) below. <ol style="list-style-type: none">(1) In the segment including the master module, select slave stations in order from the nearest to the master module to the farthest.(2) In the segment (1st stage), select slave stations in order from the nearest to the AJ65SBT-RPT to the farthest.(3) In the segment (2nd stage), select slave stations in order from the nearest to the AJ65SBT-RPT to the farthest.

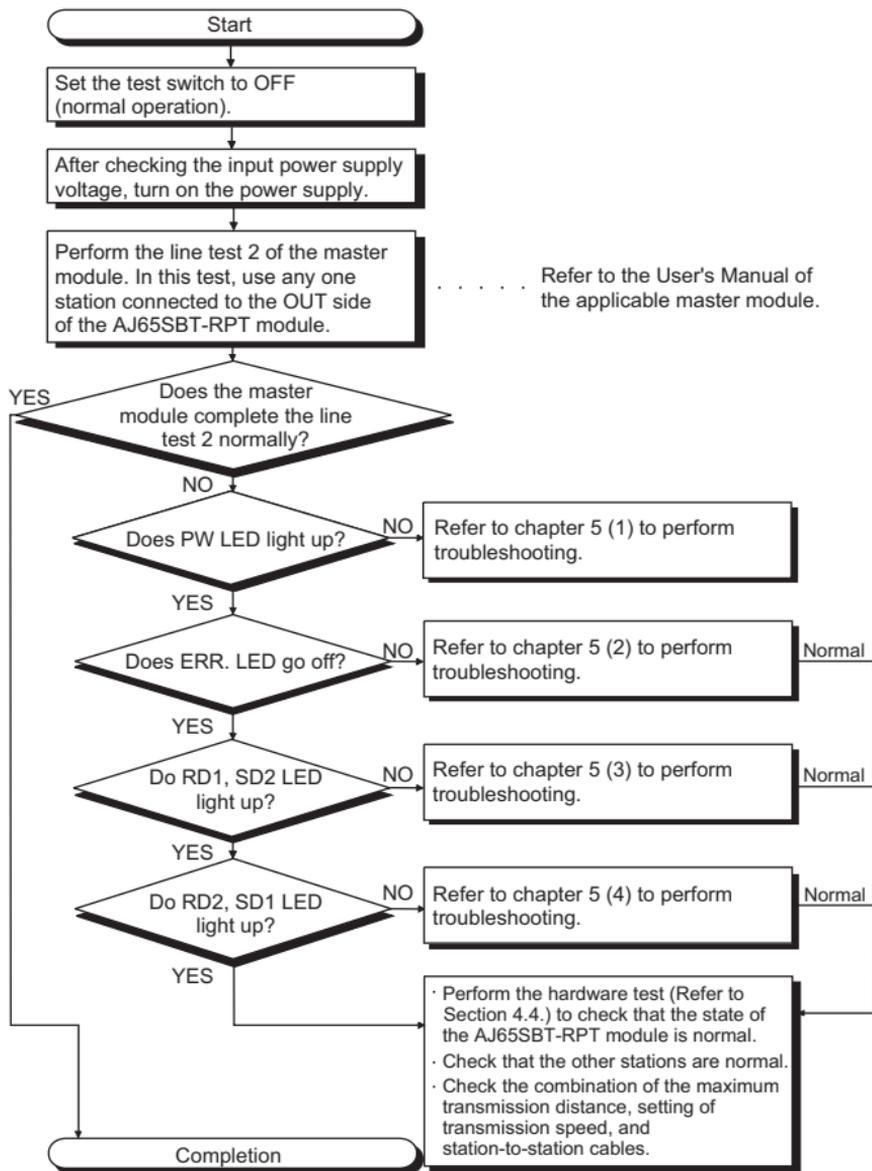

5. TROUBLESHOOTING


This section describes the measures when a trouble occurred in the AJ65SBT-RPT.

Perform the troubleshooting indicated in the reference section.


No. *1	Problem	Reference section
1	The PW LED is not lit while the module power is ON.	(1) in this chapter
2	The ERR. LED lights up or blinked.	(2) in this chapter
3	The RD1 or SD2 LED is not lit during data link.	(3) in this chapter
4	The RD2 or SD1 LED is not lit during data link.	(4) in this chapter

*1 If more than one problem occurred simultaneously, perform the troubleshooting in order of the item numbers.


- (1) The PW LED is not lit while the module power is ON
Troubleshooting is shown below for the case that the PW LED is not lit while the module power is ON.

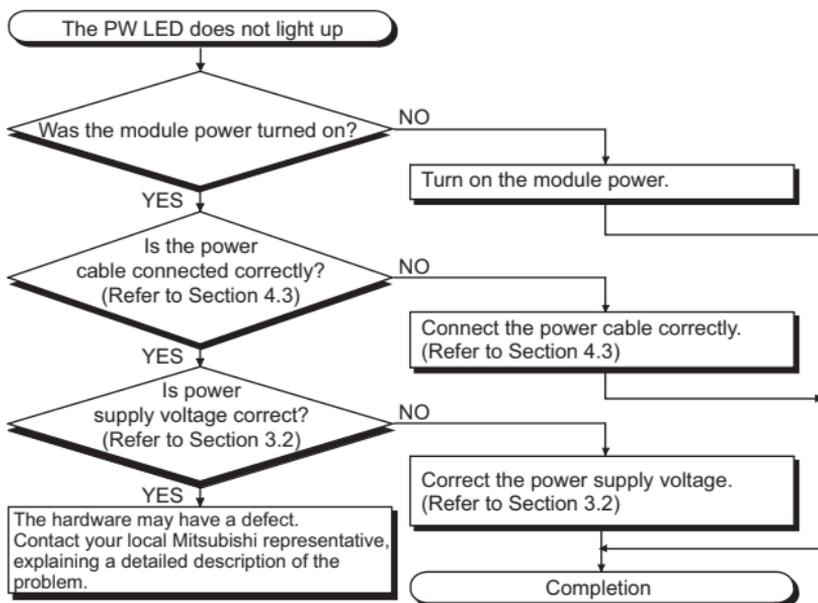


- (2) The ERR. LED lights up or blinks
Troubleshooting is shown below for the case that the ERR. LED lights up or blinks.

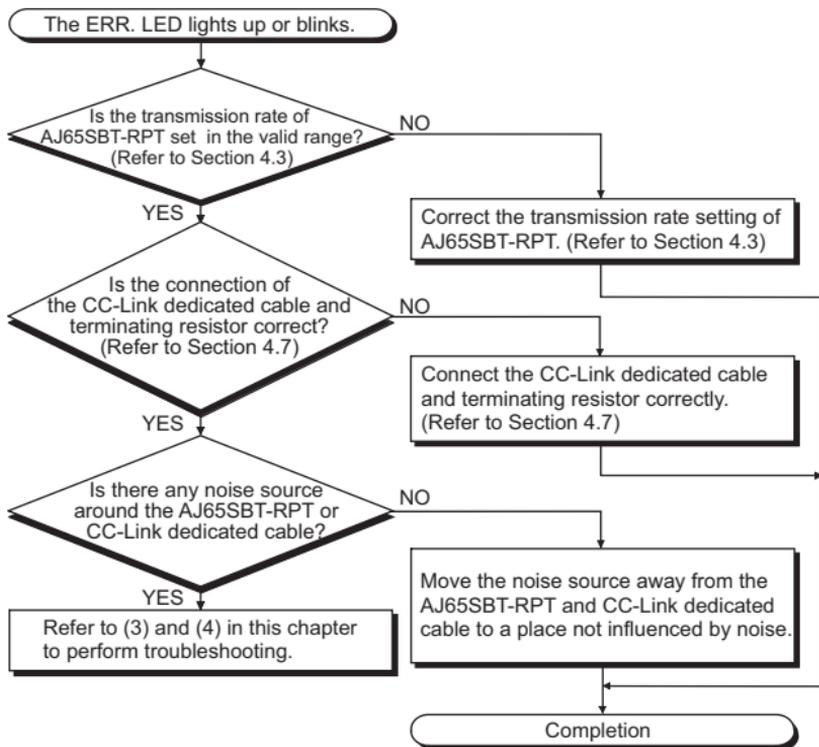

- (3) The RD1 or SD2 LED is not lit during data link
This section describes troubleshooting for the case that the RD1 or SD2 LED is not lit.

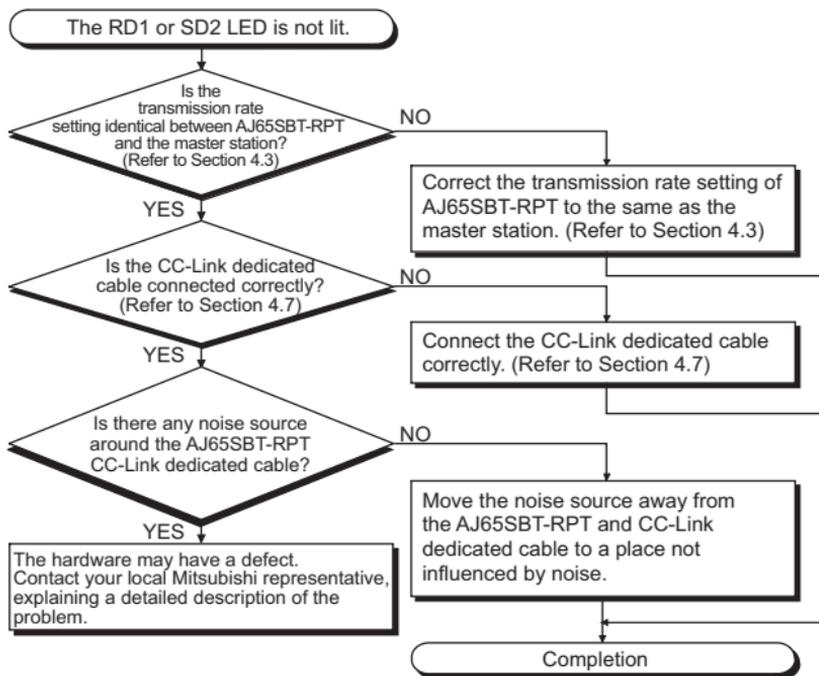

- (4) The RD2 or SD1 LED is not lit during data link
This section describes troubleshooting for the case that the RD2 or SD1 LED is not lit.

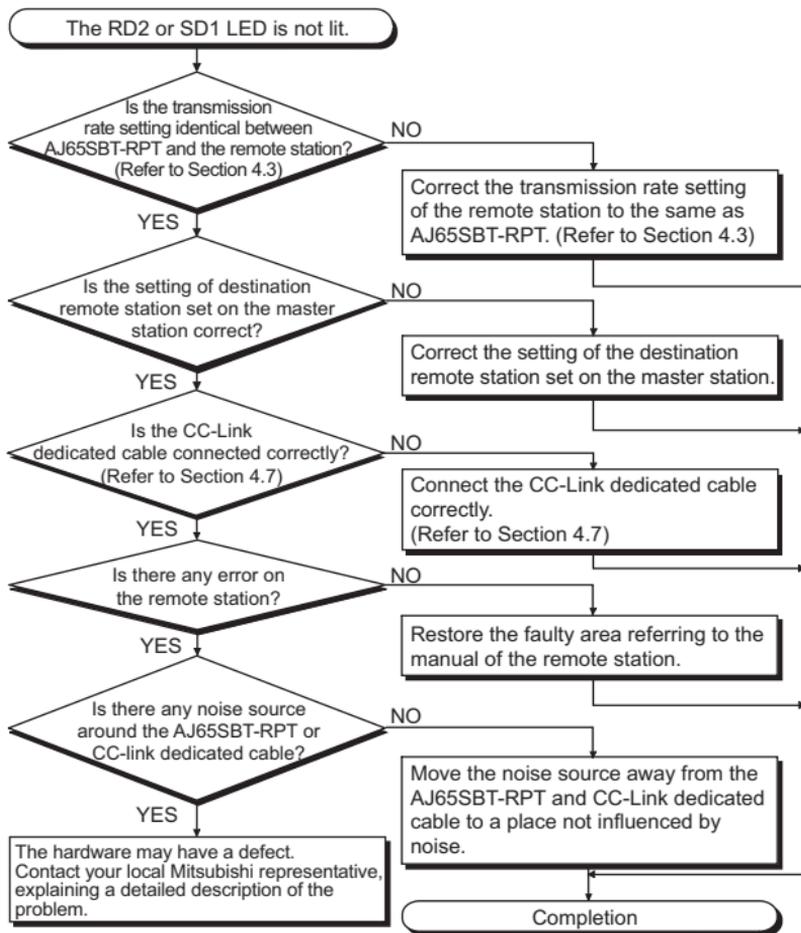

WARRANTY

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

Country/ Region	Sales office/ Tel	Country/ Region	Sales office/ Tel
USA	MITSUBISHI ELECTRIC AUTOMATION, INC. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A. Tel: +1-847-478-2100	Turkey	MITSUBISHI ELECTRIC TURKEY A.Ş Ümraniye Branch Serifali Mahallesi Nutuk Sokak No:5, TR-34775 Ümraniye/İstanbul, Turkey Tel: +90-216-526-3990
Mexico	MITSUBISHI ELECTRIC AUTOMATION, INC. Mexico Branch Mariano Escobedo #69, Col. Zona Industrial, Tlalneapantla Edo. Mexico, C.P.54030 Tel: +52-55-3067-7500	UAE	MITSUBISHI ELECTRIC EUROPE B.V. Dubai Branch Dubai Silicon Oasis, P.O.BOX 341241, Dubai, U.A.E. Tel: +971-4-3724716
Brazil	MITSUBISHI ELECTRIC DO BRASIL COMÉRCIO E SERVIÇOS LTDA. Avenida Adélino Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazil Tel: +55-11-4689-3000	South Africa	ADROIT TECHNOLOGIES 20 Waterford Office Park, 189 Witkoppen Road, Fourways, South Africa Tel: +27-11-658-8100
Germany	MITSUBISHI ELECTRIC EUROPE B.V. German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Tel: +49-2102-486-0	China	MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Shanghai, China Tel: +86-21-2322-3030
UK	MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K. Tel: +44-1707-28-8780	Taiwan	SETSUYO ENTERPRISE CO., LTD. 6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan Tel: +886-2-2299-2499
Ireland	MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount, Dublin 24, Ireland Tel: +353-1-4198800	Korea	MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. 7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea Tel: +82-2-3660-9530
Italy	MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Centro Direzionale Colleoni-Palazzo Sirio Viale Colleoni 7, 20864 Agrate Brianza(Milano) Italy Tel: +39-039-60531	Singapore	MITSUBISHI ELECTRIC ASIA PTE. LTD. 307, Alexandra Road, Mitsubishi Electric Building, Singapore 159443 Tel: +65-6473-2308
Spain	MITSUBISHI ELECTRIC EUROPE, B.V. Spanish Branch Carretera de Rubí, 76-80-Appdo. 420, 08190 Sant Cugat del Vallés (Barcelona), Spain Tel: +34-935-65-3131	Thailand	MITSUBISHI ELECTRIC FACTORY AUTOMATION (THAILAND) CO., LTD. 12th Floor, SV.City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwaeng Bangpoo, Khet Yannawa, Bangkok 10120, Thailand Tel: +66-2682-6522
France	MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets, 92741 Nanterre Cedex, France Tel: +33-1-55-68-55-68	Vietnam	MITSUBISHI ELECTRIC VIETNAM COMPANY LIMITED Hanoi Branch 6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi, Vietnam Tel: +84-4-3937-8075
Czech Republic	MITSUBISHI ELECTRIC EUROPE B.V. Czech Branch Avenir Business Park, Radlicka 751/113e, 158 00 Praha5, Czech Republic Tel: +420-251-551-470	Indonesia	PT. MITSUBISHI ELECTRIC INDONESIA Gedung Jaya 11th Floor, J.L. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel: +62-21-3192-6461
Poland	MITSUBISHI ELECTRIC EUROPE B.V. Polish Branch ul. Krakowska 50, 32-083 Balice, Poland Tel: +48-12-347-65-00	India	MITSUBISHI ELECTRIC INDIA PVT. LTD. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune-411026, Maharashtra, India Tel: +91-20-2710-2000
Sweden	MITSUBISHI ELECTRIC EUROPE B.V. (Scandinavia) Fjellievägen 8, SE-22736 Lund, Sweden Tel: +46-8-625-10-00	Australia	MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia Tel: +61-2-9684-7777
Russia	MITSUBISHI ELECTRIC (RUSSIA) LLC St. Petersburg Branch Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; 195027 St. Petersburg, Russia Tel: +7-812-633-3497		

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy,
Trade and Industry for service transaction permission.

Specifications subject to change without notice.