



**MITSUBISHI  
ELECTRIC**

---

# CC-Link System Master/Local Module

---

User's Manual  
(Hardware)

**AJ61QBT11**  
**A1SJ61QBT11**

Thank you for buying the general-purpose programmable controller MELSEC-QnA Series.

Prior to use, please read both this manual and detailed manual thoroughly and familiarize yourself with the product.



MODEL	AJ61QBT11-U-H-JE
MODEL CODE	13JT19
IB(NA)-0800147-G(1612)MEE	

## ● SAFETY PRECAUTIONS ●

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

In this manual, the safety precautions are classified into two levels:  
"⚠ WARNING" and "⚠ CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

### [DESIGN PRECAUTIONS]

#### ⚠ WARNING

- For the operating status of each station after a data link failure, refer to Chapter 5 in the user's manual.
- The master station or local station cannot detect errors when a station specified as an error-invalidated station becomes communication error.

#### ⚠ CAUTION

- Do not install the control lines or communication cables together with main circuit lines or power cables. Keep a distance of 100mm (3.94 inches) or more between them. Failure to do so may result in malfunction due to noise.

## [INSTALLATION PRECAUTIONS]

### CAUTION

- Use the programmable controller in an environment that meets the specifications in the user's manual of the CPU module used.  
Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- Insert the tabs at the bottom of the module into the holes in the base unit before mounting the module.  
(For the Q2AS series modules, tighten the screws to the base unit with the specified torque.)  
Incorrect mounting may cause malfunction, failure, or drop of the module.
- Shut off the external power supply for the system in all phases before mounting or removing the module.  
Failure to do so may result in damage to the product.
- Do not directly touch any conductive part of the module.  
Doing so can cause malfunction or failure of the module.

## [WIRING PRECAUTIONS]

### WARNING

- Shut off the external power supply for the system in all phases before wiring.  
Failure to do so may result in electric shock or damage to the product.
- After wiring, attach the included terminal cover to the module before turning it on for operation.  
Failure to do so may result in malfunction.

## [WIRING PRECAUTIONS]

### CAUTION

- Tighten the terminal screws within the specified torque range.  
Undertightening can cause short circuit, fire, or malfunction.  
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module.  
Such foreign matter can cause a fire, failure, or malfunction.
- Place the cables in a duct or clamp them.  
If not, dangling cables may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.
- Do not install the control lines or communication cables together with the main circuit lines or power cables.  
Doing so may cause malfunction due to noise.
- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- When disconnecting the cable from the module, do not pull the cable by the cable part.  
When removing the cable with a connector, hold the connector on the side that is connected to the module.  
When removing the cable without a connector, loose the screws on the side that is connected to the module.  
Pulling the cable that is still connected to the module may result in damage to the module or cable, or malfunction due to poor contact.

## [STARTUP AND MAINTENANCE PRECAUTIONS]

### WARNING

- Do not touch any terminal while power is on.  
Doing so can cause electric shock.
- Shut off the external power supply for the system in all phases before cleaning the module or retightening the terminal screws or module fixing screws.  
Failure to do so may result in electric shock.  
Undertightening can cause drop of screw, short circuit, or malfunction.  
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.

### CAUTION

- Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
- Shut off the external power supply for the system in all phases before mounting or removing the module. Failure to do so may cause the module to fail or malfunction.
- After the first use of the product, do not mount/remove the module to/from the base unit, and the terminal block to/from the module more than 50 times (IEC 61131-2 compliant) respectively.  
Exceeding the limit of 50 times may cause malfunction.
- Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.  
Failure to do so may cause the module to fail or malfunction.

## [DISPOSAL PRECAUTIONS]

### CAUTION

- When disposing of this product, treat it as industrial waste.

## ● CONDITIONS OF USE FOR THE PRODUCT ●

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
  - i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
  - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
  
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

  - Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
  - Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
  - Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

## REVISIONS

\* The manual number is given on the bottom right of the cover.

Print Date	*Manual Number	Revision
Jul.,2000	IB(NA)-0800147-A	First edition
Nov.,2000	IB(NA)-0800147-B	Partial correction Contact address (Back cover)
Mar.,2006	IB(NA)-0800147-C	Partial correction SAFETY PRECAUTIONS, Conformation to the EMC Directive and Low Voltage Instruction, Section 1.1, 2.1, 5.1
Jun.,2007	IB(NA)-0800147-D	Partial correction Section 3, 6.1, 6.2, Contact address (Back cover)
Jul.,2009	IB(NA)-0800147-E	"PLC" was changed to "programmable controller". Partial correction SAFETY PRECAUTIONS, Compliance with the EMC and Low Voltage Directives, Section 1.1, 2.1 to 2.2, Chapter 3, 4.1, 5.1, 6.1
Dec.,2011	IB(NA)-0800147-F	Partial correction COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES, Section 5.1 Addition SAFETY PRECAUTIONS(Chinese), CONDITIONS OF USE FOR THE PRODUCT
Dec.,2016	IB(NA)-0800147-G	Partial correction Chapter 3, Section 6.2

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.



---

---

# CONTENTS

---

---

1. Overview .....	1
1.1 Definition of Ver.1.10 .....	2
2. Performance Specification .....	3
2.1 Performance specification .....	3
2.1.1 Maximum overall cable distance .....	5
2.2 CC-Link dedicated cable .....	5
3. Name and Setting of Each Component .....	6
4. Loading and Installation .....	10
4.1 Handling precautions .....	10
4.2 Installation environment.....	11
5. External Wiring .....	12
5.1 Wiring the CC-Link dedicated cable .....	12
6. External Dimensions .....	14
6.1 AJ61QBT11 .....	14
6.2 A1SJ61QBT11.....	15

## **COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES**

(1) Method of ensuring compliance

To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

- User's manual for the CPU module used
- User's manual (hardware) for the CPU module or base unit used

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

(2) Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the manuals listed under (1).

---

## 1. Overview

---

This manual describes the specifications, name of each part, settings, etc., of the AJ61QBT11 CC-Link System Master/Local Module (hereafter abbreviated as AJ61QBT11) and A1SJ61QBT11 CC-Link System Master/Local Module (hereafter abbreviated as A1SJ61QBT11) to be used in combination with the MELSEC-QnA series programmable controller CPU.

Confirm that the following items are included in the package.

Item name		Number of items
AJ61QBT11 CC-Link System Master/ Local Module	AJ61QBT11	1
	Terminating resistor 110Ω 1/2W (Brown-brown-brown)	2
	Terminating resistor 130Ω 1/2W (Brown-orange-brown)	2
A1SJ61QBT11 CC-Link System Master/Local Module	A1SJ61QBT11	1
	Terminating resistor 110Ω 1/2W (Brown-brown-brown)	2
	Terminating resistor 130Ω 1/2W (Brown-orange-brown)	2

## 1.1 Definition of Ver.1.10

The module of which the cable length between station and station is uniformly 20cm or more by improving the conventional limit of the cable length between station and station is defined as Ver.1.10.

The conventional modules are defined as Ver.1.00.

The conditions for setting the cable length between station and station uniformly to 20cm or more are indicated below.

- 1) All modules configuring the CC-Link system must use Version 1.10.
- 2) All data link cables must be Version 1.10 compatible CC-Link dedicated cable.

Point	
	In the case of the system containing modules of both Ver.1.00 and Ver.1.10, the maximum overall cable length and the station-to-station cable length must meet the specifications for Ver.1.00.

### (1) Checking Version 1.10

The "CC-Link" logo is printed on the front of the module or on the "rating plate" for the Version 1.10 modules.

**CC-Link**

## 2. Performance Specification

### 2.1 Performance specification

The following shows the performance specification of the AJ61QBT11 and A1SJ61QBT11. Refer to the CPU module User's Manual to be used for general specification of AJ61QBT11 and A1SJ61QBT11.

Item	Specification
Transmission speed	Selectable from 156kbps/625kbps/2.5Mbps/5Mbps/10Mbps
Maximum overall cable distance (Maximum transmission distance)	Differs according to the transmission speed (Refer to Section 2.1.1)
Maximum number of connected modules (when master station)	64 modules However, the following conditions must be satisfied: $\{(1 \times a) + (2 \times b) + (3 \times c) + (4 \times d)\} \leq 64$ a: Number of modules occupying 1 station. b: Number of modules occupying 2 stations. c: Number of modules occupying 3 stations. d: Number of modules occupying 4 stations. $\{(16 \times A) + (54 \times B) + (88 \times C)\} \leq 2304$ A: Number of remote I/O stations $\leq 64$ B: Number of remote device stations $\leq 42$ C: Number of local stations, standby master stations, intelligent device stations $\leq 26$
Number of occupied stations (when local station)	1 to 4 stations*1 (switched using the DIP switch)
Maximum link points for one system	Remote I/O (RX, RY) : 2048 points Remote register (RWw) : 256 points (master station → remote/local station) Remote register (RWr) : 256 points (remote/local station → master station)
Link points for one remote/local station	Remote I/O (RX, RY) : 32 points (local station 30 points) Remote register (RWw) : 4 points (master station → remote/local station) Remote register (RWr) : 4 points (remote/local station → master station)
Communication method	Broadcast polling method
Synchronous method	Frame synchronous method
Encoding method	NRZI method
Transmission path	Bus (RS-485)
Transmission format	Conform to HDLC
Error control system	CRC ( $X^{16}+X^{12}+X^5+1$ )
Cable*2	CC-Link dedicated cable (Ver.1.00)/CC-Link dedicated high-performance cable/Version 1.10 compatible CC-Link dedicated cable <sup>±</sup>

Item	Specification
RAS function	<ul style="list-style-type: none"> <li>• Auto return function</li> <li>• Slave station cutoff function</li> <li>• Error detection by the link special relay/register</li> </ul>
Number of parameter registration to E <sup>2</sup> PROM	10000 times
Number of occupied I/O points	32 points (I/O assignment: special 32 points)
Internal current consumption (5VDC)	AJ61QBT11:0.45A, A1SJ61QBT11:0.4A
Weight	AJ61QBT11:0.4kg, A1SJ61QBT11:0.25kg

- \*1 This setting is applicable to the AJ61QBT11 of hardware version F or later and the A1SJ61QBT11 of hardware version G or later. For the modules with other versions, the setting is "1 station" and "4 stations" only.
- \*2 Each of Ver.1.10 compatible CC-Link cables, CC-Link dedicated cables (Ver.1.00), and CC-Link dedicated high-performance cables cannot be used together with other cable types.  
 If different cable types are used together, normal data transmission is not guaranteed.  
 Also attach the terminating resistor which matches the cable type. (Refer to section 5.1)

### **2.1.1 Maximum overall cable distance**

The maximum overall cable distance differs according to the transmission speed.

For the relationship between the transmission speed and maximum overall cable distance, refer to the CC-Link System Master/Local Module User's Manual.

### **2.2 CC-Link dedicated cable**

Use the CC-Link dedicated cables in a CC-Link system.

If a cable other than the CC-Link dedicated cable is used, the performance of the CC-Link system cannot be guaranteed.

For the specifications of the CC-Link dedicated cables or any other inquiries, visit the following site:

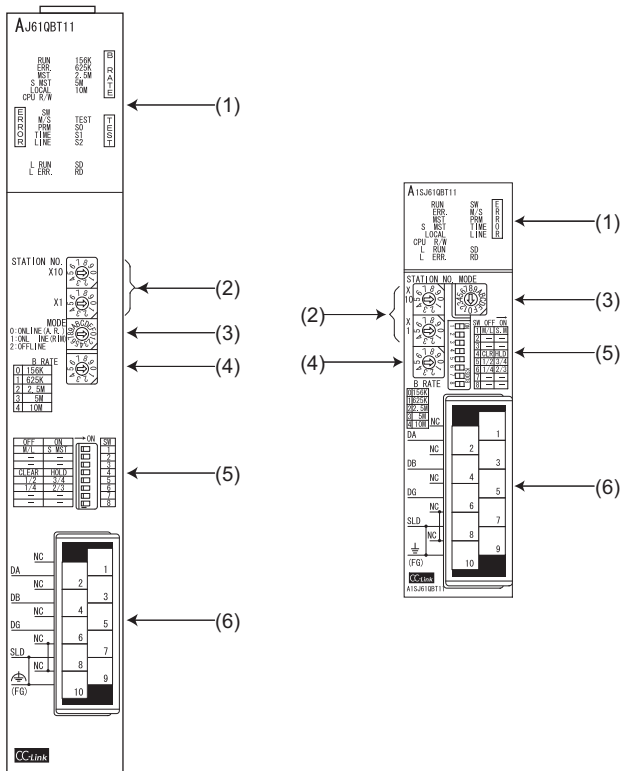
CC-Link Partner Association website: [www.cc-link.org](http://www.cc-link.org)

Remarks
---------

For details, refer to the CC-Link cable wiring manual issued by CC-Link Partner Association.

### 3. Name and Setting of Each Component

This section explains the name and setting of each component of AJ61QBT11 and A1SJ61QBT11.
















No.	Name	Description										
(1)	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;"><b>AJ61QBT11</b></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">           RUN ERR. MST S. MST LOCAL CPU R/W         </td> <td style="width: 50%; text-align: center;">           156K 625K 2.5M 5M 10M         </td> </tr> </table> <div style="display: flex; justify-content: space-between; font-size: small;"> <span style="border: 1px solid black; padding: 2px;">ERROR</span> <span style="border: 1px solid black; padding: 2px;">TEST</span> </div> <table style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 50%; text-align: center;">           SW M/S PRM TIME LINE         </td> <td style="width: 50%; text-align: center;">           TEST SD S1 S2         </td> </tr> <tr> <td style="width: 50%;">           L RUN L ERR.         </td> <td style="width: 50%;">           SD RD         </td> </tr> </table> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center;"><b>A1SJ61QBT11</b></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">           RUN ERR. MST S LOCAL CPU R/W L RUN L ERR.         </td> <td style="width: 50%; text-align: center;">           SW M/S PRM TIME LINE         </td> </tr> <tr> <td style="width: 50%;">           L RUN L ERR.         </td> <td style="width: 50%;">           SD RD         </td> </tr> </table> </div>	RUN ERR. MST S. MST LOCAL CPU R/W	156K 625K 2.5M 5M 10M	SW M/S PRM TIME LINE	TEST SD S1 S2	L RUN L ERR.	SD RD	RUN ERR. MST S LOCAL CPU R/W L RUN L ERR.	SW M/S PRM TIME LINE	L RUN L ERR.	SD RD	Data link status can be checked from the LED on status.
		RUN ERR. MST S. MST LOCAL CPU R/W	156K 625K 2.5M 5M 10M									
		SW M/S PRM TIME LINE	TEST SD S1 S2									
		L RUN L ERR.	SD RD									
		RUN ERR. MST S LOCAL CPU R/W L RUN L ERR.	SW M/S PRM TIME LINE									
		L RUN L ERR.	SD RD									
		LED name	Description									
		RUN	ON: Module is normal. OFF: Watchdog timer error.									
		ERR.	ON: Communication error at all stations. Flashing: Communication faulty station exists.									
		MST	ON: Set as a master station.									
		S MST	ON: Set as a standby master station.									
		LOCAL	ON: Set as a local station.									
		CPU R/W	ON: Communicating with programmable controller CPU. (FROM/TO)									
		ERROR	SW	ON: Switch setting error.								
			M/S	ON: Master station already exists on the same line. Flashing: Occupied station count overlapping (With the exception of the first station number overlapping)								
			PRM	ON: Parameter setting error.								
			TIME	ON: Cable disconnection, or no response from all stations due to noise in a communication path								
			LINE	ON: Cable disconnection, or transmission path is affected by noise, etc.								
		L RUN	ON: In data link. (host)*1									
		L ERR.	ON: Communication error (host). Flashing at regular intervals: The setting(s) of switches (2) to (5) was changed while the power was on. *2 Flashing at irregular intervals: Terminating resistor is not connected, or module and/or CC-Link dedicated cable is affected by noise.									
		B R A T E	156K	ON: Transmission speed is set to "156kbps".								
			625K	ON: Transmission speed is set to "625kbps".								
			2.5M	ON: Transmission speed is set to "2.5Mbps".								
			5M	ON: Transmission speed is set to "5Mbps".								
			10M	ON: Transmission speed is set to "10Mbps".								
		T E S T	TEST	ON: Offline test in progress.								
			S0	(Not used)								
S1												
S2												
SD	ON: Sending data.											
RD	ON: Receiving data.											

\*1 When the module is operated in the synchronous mode, the LED may be lit dimly.

\*2 When all stations are in error, changes on switches may not be detected.

No.	Name	Description																																		
(2)	Station number setting switch AJ61QBT11 STATION NO. X10  X1  A1SJ61QBT11 STATION NO. X10  X1 	Set the module station number.(setting at shipment: 0) <Range> • In the remote net mode Master station: 0 Local station: 1 to 64 Standby master station: 1 to 63 The "SW" and "L ERR." LEDs are turned on when a value other than 0 to 64 is set. • In the remote I/O net mode Master station: 1 to 64 (set the last station number of remote I/O station) When set to 0, the "PLM" LED is turned on.																																		
(3)	Mode setting switches AJ61QBT11 MODE 0:ONLINE(A.R.) 1:ONLINE(RIM) 2:OFFLINE  A1SJ61QBT11 MODE 	Set the module operation status. (setting at shipment: 0) <table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Online (remote net mode)</td> </tr> <tr> <td>1</td> <td>Online (remote I/O net mode)</td> </tr> <tr> <td>2</td> <td>Offline</td> </tr> <tr> <td>3</td> <td>Line test 1 *3</td> </tr> <tr> <td>4</td> <td>Line test 2 *3</td> </tr> <tr> <td>5</td> <td>Parameter confirmation test *3</td> </tr> <tr> <td>6</td> <td>Hardware test</td> </tr> <tr> <td>7</td> <td>Setting error (the "SW" LED on)</td> </tr> <tr> <td>8 to A</td> <td>Setting prohibited</td> </tr> <tr> <td>B to F</td> <td>Setting error (the "SW" LED on)</td> </tr> </tbody> </table>	Number	Name	0	Online (remote net mode)	1	Online (remote I/O net mode)	2	Offline	3	Line test 1 *3	4	Line test 2 *3	5	Parameter confirmation test *3	6	Hardware test	7	Setting error (the "SW" LED on)	8 to A	Setting prohibited	B to F	Setting error (the "SW" LED on)												
Number	Name																																			
0	Online (remote net mode)																																			
1	Online (remote I/O net mode)																																			
2	Offline																																			
3	Line test 1 *3																																			
4	Line test 2 *3																																			
5	Parameter confirmation test *3																																			
6	Hardware test																																			
7	Setting error (the "SW" LED on)																																			
8 to A	Setting prohibited																																			
B to F	Setting error (the "SW" LED on)																																			
(4)	Transmission speed setting switch AJ61QBT11 B RATE  <table border="1"> <tbody> <tr><td>0</td><td>156K</td></tr> <tr><td>1</td><td>625K</td></tr> <tr><td>2</td><td>2.5M</td></tr> <tr><td>3</td><td>5M</td></tr> <tr><td>4</td><td>10M</td></tr> </tbody> </table> A1SJ61QBT11  B RATE <table border="1"> <tbody> <tr><td>0</td><td>156K</td></tr> <tr><td>1</td><td>625K</td></tr> <tr><td>2</td><td>2.5M</td></tr> <tr><td>3</td><td>5M</td></tr> <tr><td>4</td><td>10M</td></tr> </tbody> </table>	0	156K	1	625K	2	2.5M	3	5M	4	10M	0	156K	1	625K	2	2.5M	3	5M	4	10M	Set the module transmission speed (setting at shipment: 0) <table border="1"> <thead> <tr> <th>Number</th> <th>Setting detail</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>156kbps</td> </tr> <tr> <td>1</td> <td>625kbps</td> </tr> <tr> <td>2</td> <td>2.5Mbps</td> </tr> <tr> <td>3</td> <td>5Mbps</td> </tr> <tr> <td>4</td> <td>10Mbps</td> </tr> <tr> <td>5 to 9</td> <td>Setting error (the "SW" and "L ERR" LED on)</td> </tr> </tbody> </table>	Number	Setting detail	0	156kbps	1	625kbps	2	2.5Mbps	3	5Mbps	4	10Mbps	5 to 9	Setting error (the "SW" and "L ERR" LED on)
0	156K																																			
1	625K																																			
2	2.5M																																			
3	5M																																			
4	10M																																			
0	156K																																			
1	625K																																			
2	2.5M																																			
3	5M																																			
4	10M																																			
Number	Setting detail																																			
0	156kbps																																			
1	625kbps																																			
2	2.5Mbps																																			
3	5Mbps																																			
4	10Mbps																																			
5 to 9	Setting error (the "SW" and "L ERR" LED on)																																			

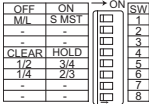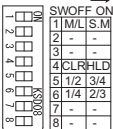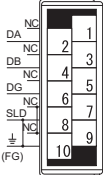\*3 Use impossible at local station.

No.	Name	Description																																							
(5)	Condition setting switch AJ61QBT11  A1SJ61QBT11 	Set the operation condition (setting at shipment: All is OFF)																																							
		<table border="1"> <thead> <tr> <th>Number</th> <th>Setting detail</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>SW1</td> <td>Station type</td> <td>OFF: Master station/Local station ON : Standby master station</td> </tr> <tr> <td>SW2</td> <td>(Unusable)</td> <td>Always off</td> </tr> <tr> <td>SW3</td> <td>(Unusable)</td> <td>Always off</td> </tr> <tr> <td>SW4</td> <td>Input data status of the data link error station</td> <td>OFF: Clear ON : Hold</td> </tr> <tr> <td>SW5</td> <td rowspan="4">Number of occupied stations</td> <td> <table border="1"> <thead> <tr> <th>Number of occupied stations</th> <th>SW5</th> <th>SW6</th> </tr> </thead> <tbody> <tr> <td>1 station</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>2 stations*4</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>3 stations*4</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>4 stations</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table> </td> </tr> <tr> <td>SW7</td> <td>(Unusable)</td> <td>Always off</td> </tr> <tr> <td>SW8</td> <td>(Unusable)</td> <td>Always off</td> </tr> </tbody> </table>	Number	Setting detail	Description	SW1	Station type	OFF: Master station/Local station ON : Standby master station	SW2	(Unusable)	Always off	SW3	(Unusable)	Always off	SW4	Input data status of the data link error station	OFF: Clear ON : Hold	SW5	Number of occupied stations	<table border="1"> <thead> <tr> <th>Number of occupied stations</th> <th>SW5</th> <th>SW6</th> </tr> </thead> <tbody> <tr> <td>1 station</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>2 stations*4</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>3 stations*4</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>4 stations</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>	Number of occupied stations	SW5	SW6	1 station	OFF	OFF	2 stations*4	OFF	ON	3 stations*4	ON	ON	4 stations	ON	OFF	SW7	(Unusable)	Always off	SW8	(Unusable)	Always off
		Number	Setting detail	Description																																					
		SW1	Station type	OFF: Master station/Local station ON : Standby master station																																					
		SW2	(Unusable)	Always off																																					
		SW3	(Unusable)	Always off																																					
		SW4	Input data status of the data link error station	OFF: Clear ON : Hold																																					
		SW5	Number of occupied stations	<table border="1"> <thead> <tr> <th>Number of occupied stations</th> <th>SW5</th> <th>SW6</th> </tr> </thead> <tbody> <tr> <td>1 station</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>2 stations*4</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>3 stations*4</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>4 stations</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>	Number of occupied stations	SW5	SW6	1 station	OFF	OFF	2 stations*4	OFF	ON	3 stations*4	ON	ON	4 stations	ON	OFF																						
		Number of occupied stations		SW5	SW6																																				
		1 station		OFF	OFF																																				
2 stations*4	OFF	ON																																							
3 stations*4	ON	ON																																							
4 stations	ON	OFF																																							
SW7	(Unusable)	Always off																																							
SW8	(Unusable)	Always off																																							
(6)	Terminal block 	Connect the CC-Link dedicated cable for data link. Refer to Section 5.1 for how to connect the cables. Note that the following terminals are connected inside the module. <ul style="list-style-type: none"> <li>• SLD (terminal No. 8) and FG (terminal No. 10)</li> <li>• NC (terminal No. 7) and NC (terminal No. 9)</li> </ul> 2-piece type terminal block. The module can be exchanged with another without removing the signal lines from the terminal block. (Replace the module after turning off its power.)																																							

- \*4 The AJ61QBT11 of hardware version F or later and the A1SJ61QBT11 of hardware version G or later are compatible with this setting.  
 For other than the above, only SW5 is used to set the number of occupied stations.  
 OFF : 1 station occupied  
 ON : 4 stations occupied  
 Keep SW6 OFF as it is unusable.

Point
The setting for the switches (2) to (5) when the module power supply is turned OFF → ON is valid. When the setting is changed while the module power supply is on, reset the programmable controller CPU or turn off and then on the module power supply again.

Important
Do not use station number 64 in a system where the waiting master station exists. When it is used, the station number 64 will not communicate correctly.

---

---

## 4. Loading and Installation

---

---

The following is explanations of the handling precautions and installation environment, which is common to modules when handling AJ61QBT11 and A1SJ61QBT11 from unpacking to installation. For the details of loading and installation of the module, refer to the user's manual of the programmable controller CPU module used.

### 4.1 Handling precautions

The following is an explanation of handling precautions of the module.

- (1) Do not drop the module case or terminal block, or subject them to heavy impact since they are made of resin.
- (2) Do not remove the print circuit board of each module from its case. This may cause a failure in the module.
- (3) Prevent foreign matter such as dust or wire chips from entering the module.  
Such foreign matter can cause a fire, failure, or malfunction.
- (4) Solderless terminals with insulation sleeve cannot be used for the terminal block. It is recommended that the wiring connecting sections of the solderless terminals will be covered with a marking tube or an insulation tube.
- (5) Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.  
Failure to do so may cause the module to fail or malfunction.
- (6) Tighten the module mounting screws and terminal screws within the following torque range.

Screw location	Tightening torque range
Module mounting screws (M4 screws)	0.78 to 1.18N·m
Terminal-block terminal screws (M3.5 screws)	0.59 to 0.88N·m
Terminal-block installation screws (M3.5 screws)	0.49 to 0.78N·m

- (7) Insert the tabs at the bottom of the module into the holes in the base unit before mounting the module. (For the Q2AS series modules, make sure screws are securely tightened to the base unit with the specified torque.)  
Incorrect mounting may cause malfunction, failure, or drop of the module.

Point
(1) Turn off the power supply to the applicable station before mounting or removing the terminal block. If the terminal block is mounted or removed without turning off the power supply to the applicable station, correct data transmission cannot be guaranteed.
(2) Power off the system in advance when removing the terminating resistor to change the system. If the terminating resistor is removed and mounted while the system is energized, normal data transmission will not be guaranteed.



## 4.2 Installation environment

Refer to the user's manual of the programmable controller CPU module used.

---

---

## 5. External Wiring

---

---

### 5.1 Wiring the CC-Link dedicated cable

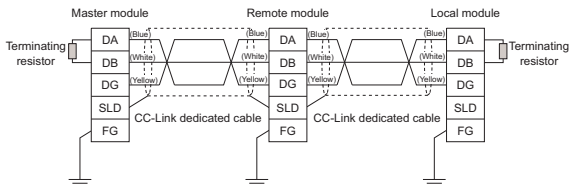
The connection method of the CC-Link dedicated cables for the master module, local module, standby master module, remote module and intelligent module are described.

- (1) Ver.1.10-compatible CC-Link dedicated cables, CC-Link dedicated cables (Ver.1.00), and CC-Link dedicated high-performance cables cannot be used together. If used together, correct data transmission will not be guaranteed.
- (2) CC-Link cables can be connected from any station number.
- (3) Connect the shielded wire of the CC-Link dedicated cable to "SLD" of each module, and ground both ends of the shielded wire to the protective ground conductor via "FG".  
The SLD and FG are connected within the module.
- (4) Connect the "terminating resistors" supplied with each module at both ends of the CC-Link system.  
Connect the terminating resistors across "DA" and "DB".  
When a T-branch system is configured, some restrictions are applied to the use of the A(1S)J61BT11/A(1S)J61QBT11 as the master station. Refer to the CC-Link System Master/Local Module User's Manual for details.
- (5) The terminating resistors to be connected vary depending on the cable type used in the CC-Link system.

Cable type	Terminating resistor
CC-Link dedicated cable	110 1/2 W
Version 1.10 compatible CC-Link dedicated cable	(brown-brown-brown)
CC-Link dedicated high-performance cable	130 1/2 W (brown-orange-brown)


- (6) M3 screws are used for terminal block screws.  
The type of applicable solderless terminal is 1.25-3.  
Solderless terminals with insulation sleeve cannot be used.
- (7) The master module can be connected at other points than both ends.
- (8) Star connection is not allowed.

(9) The connection method is shown below.



## 6. External Dimensions

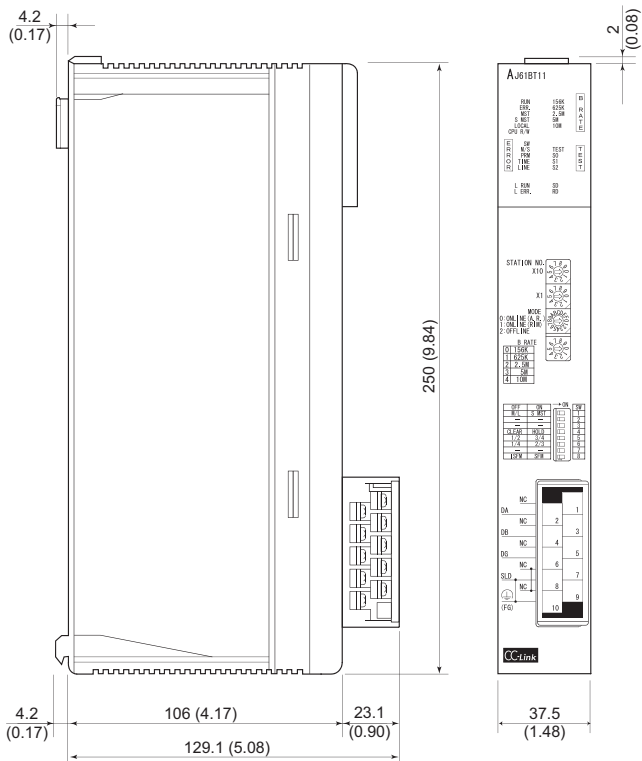
### 6.1 AJ61QBT11



Unit: mm (inch)



## 6.2 A1SJ61QBT11

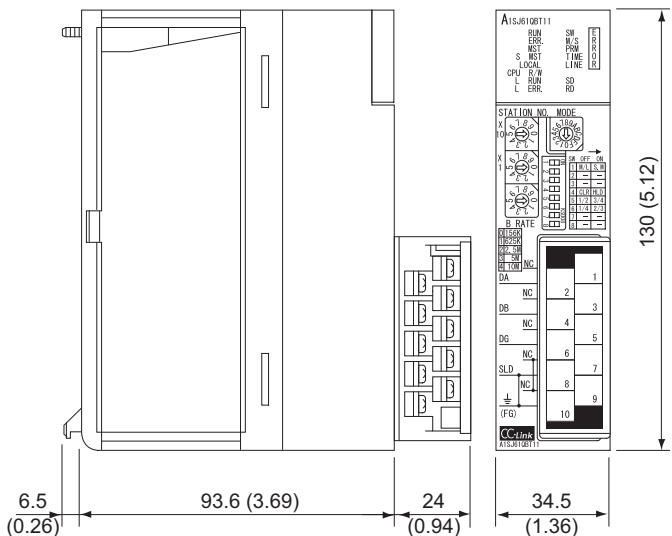

Unit: mm (inch)

# MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



## WARRANTY

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
USA	MITSUBISHI ELECTRIC AUTOMATION, INC. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A. Tel : +1-847-478-2100	Turkey	MITSUBISHI ELECTRIC TURKEY A.Ş. Umraniye Branch Serifali Mahallesi Nutuk Sokak No.5, TR-34775 Umraniye/Istanbul, Turkey Tel : +90-216-526-3990
Mexico	MITSUBISHI ELECTRIC AUTOMATION, INC. Mexico Branch Mariano Escobedo #69, Col. Zona Industrial, Tlalnequilpan Edo. Mexico, C.P.54030 Tel : +52-55-3067-7500	UAE	MITSUBISHI ELECTRIC EUROPE B.V. Dubai Branch Dubai Silicon Oasis, P.O.BOX 341241, Dubai, U.A.E. Tel : +971-4-3724716
Brazil	MITSUBISHI ELECTRIC DO BRASIL COMÉRCIO E SERVIÇOS LTDA. Avenida Adelino Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazil Tel : +55-11-4689-3000	South Africa	ADROIT TECHNOLOGIES 20 Waterford Office Park, 189 Witkoppen Road, Fourways, South Africa Tel : +27-11-658-8100
Germany	MITSUBISHI ELECTRIC EUROPE B.V. German Branch Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany Tel : +49-2102-486-0	China	MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. No.1386 Hongqiao Road, Mitsubishi Electric Automation Center, Shanghai, China Tel : +86-21-2322-3030
UK	MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, U.K. Tel : +44-1707-28-8780	Taiwan	SETSUYO ENTERPRISE CO., LTD. 6F, No.105, Wugong 3rd Road, Wugu District, New Taipei City 24889, Taiwan Tel : +886-2-2299-2499
Ireland	MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount, Dublin 24, Ireland Tel : +353-1-4198800	Korea	MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. 7F-9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea Tel : +82-2-3660-9530
Italy	MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Centro Direzionale Colleoni-Palazzo Sirio Viale Colleoni 7, 20864 Agrate Brianza(Milano) Italy Tel : +39-039-60531	Singapore	MITSUBISHI ELECTRIC ASIA PTE. LTD. 307, Alexandra Road, Mitsubishi Electric Building, Singapore 159943 Tel : +65-6473-2308
Spain	MITSUBISHI ELECTRIC EUROPE, B.V. Spanish Branch Carretera de Rubí, 76-80-Appdo. 420, 08190 Sant Cugat del Vallés (Barcelona), Spain Tel : +34-935-65-3131	Thailand	MITSUBISHI ELECTRIC FACTORY AUTOMATION (THAILAND) CO., LTD. 12th Floor, SV City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwaeng Bangpangpang, Khet Yannawa, Bangkok 10120, Thailand Tel : +66-2682-6522
France	MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets, 92741 Nanterre Cedex, France Tel : +33-1-55-68-55-68	Vietnam	MITSUBISHI ELECTRIC VIETNAM COMPANY LIMITED Hanoi Branch 6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi, Vietnam Tel : +84-4-3937-8075
Czech Republic	MITSUBISHI ELECTRIC EUROPE B.V. Czech Branch Avenir Business Park, Radlicka 751/1136, 158 00 Praha5, Czech Republic Tel : +420-251-551-470	Indonesia	PT. MITSUBISHI ELECTRIC INDONESIA Gedung Jaya 11th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel : +62-21-3192-6461
Poland	MITSUBISHI ELECTRIC EUROPE B.V. Polish Branch ul. Krakowska 50, 32-083 Balice, Poland Tel : +48-12-347-65-00	India	MITSUBISHI ELECTRIC INDIA PVT. LTD. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune-411026, Maharashtra, India Tel : +91-20-2710-2000
Sweden	MITSUBISHI ELECTRIC EUROPE B.V. (Scandinavia) Fjellievägen 8, SE-22736 Lund, Sweden Tel : +46-8-625-10-00	Australia	MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777
Russia	MITSUBISHI ELECTRIC (RUSSIA) LLC St. Petersburg Branch Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; 195027 St. Petersburg, Russia Tel : +7-812-633-3497		

### MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy,  
Trade and Industry for service transaction permission.

Specifications subject to change without notice.