

mitsubishi
Mitsubishi Industrial Robot

RP-1AH/3AH/5AH Series

Standard Specifications Manual
(CR1-571 Controller)

Supplemental Instruction


This document additionally explains the specification and the function of the "emergency stop output terminal (5-6 pin)" which are prepared on the robot controller rear. Therefore, you confirm the details of this document, use the "emergency stop output terminal" correctly, and please utilize for the safety of equipment.

1. Emergency stop output terminal

Electric specification: DC24V/300mA

Function: Emergency stop output opens when either one of the emergency stop switches shown below or an input signal turns on.

- (1) Emergency stop switch of the controller.
- (2) Emergency stop switch or deadman switch of the T/B (option).
- (3) External emergency stop input.
- (4) The T/B mount/dismount switch is OFF when the T/B is unconnected.

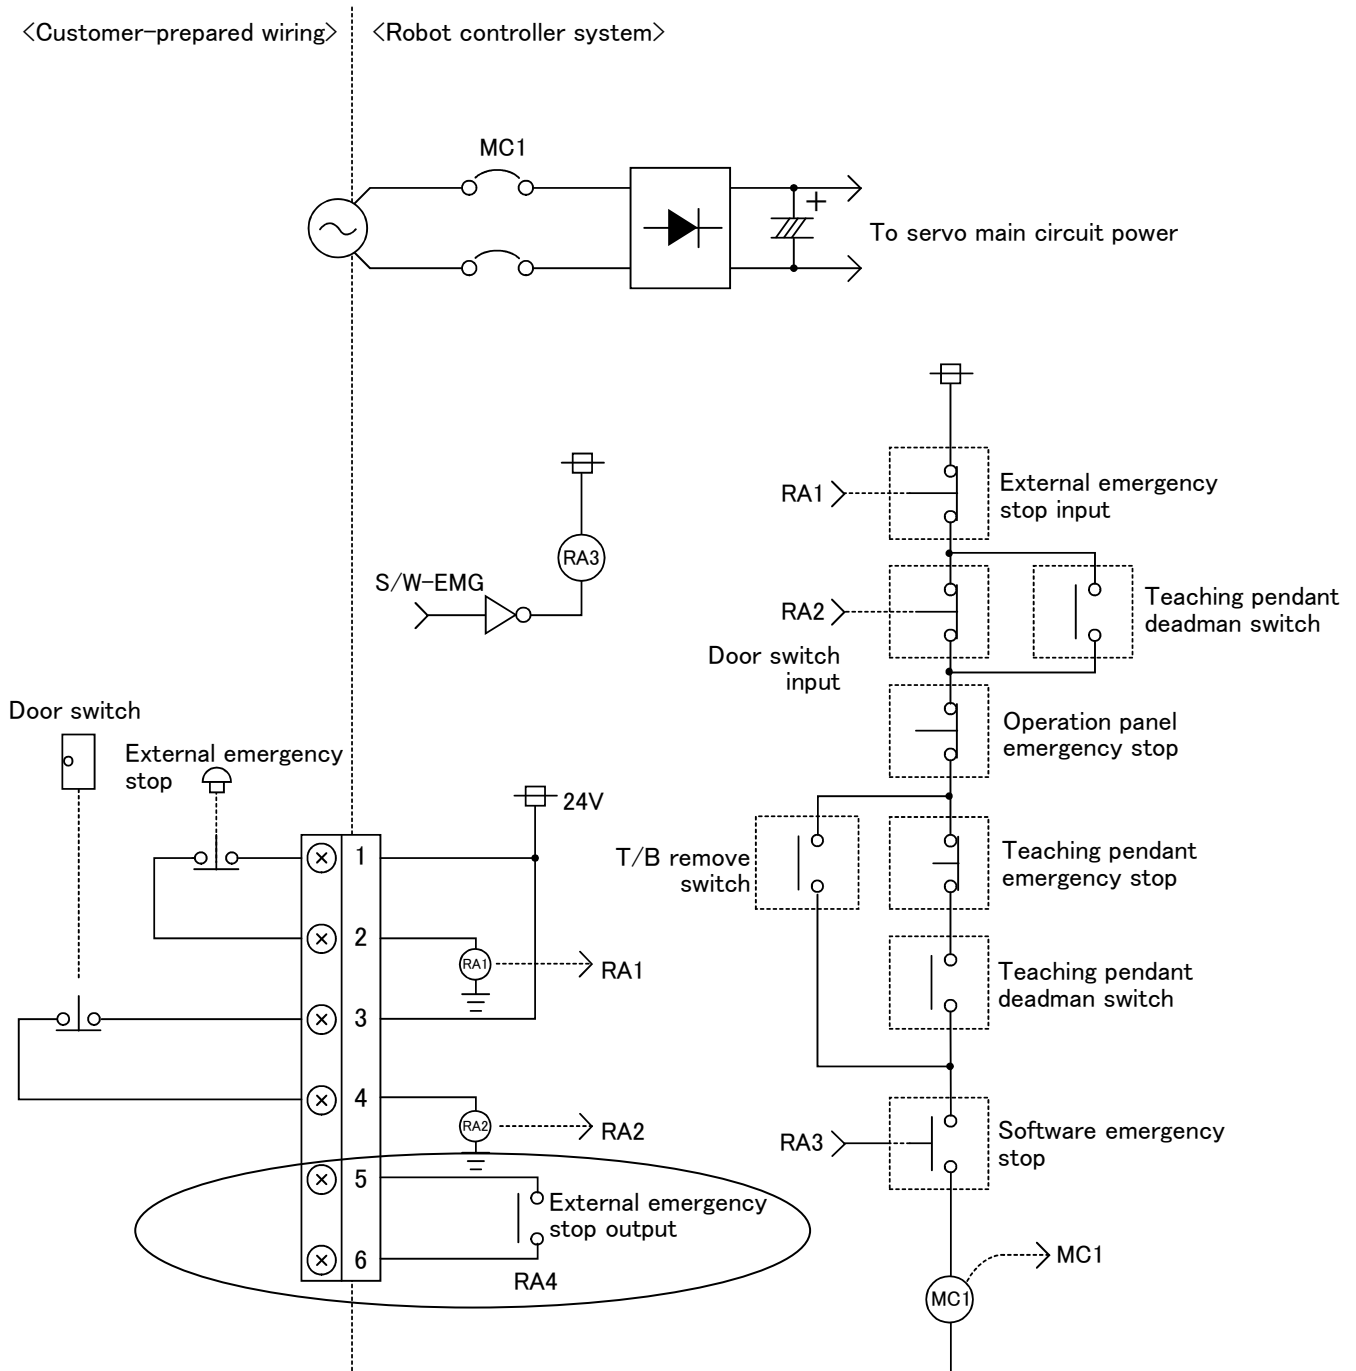

Connecting an external device outside the range of DC24V/300mA will cause a controller failure.

Supplemental Instruction

Thank you for purchasing the Mitsubishi Industrial Robot MELFA Series.

This document explains partial changes and correction to the specifications of parallel inputs and outputs of the CR1, CR1B, CR2A and CR2B Mitsubishi Industrial Robot Controllers. Therefore, check the content, and use it together with your standard specifications and instruction manual.

1. Revision place

We found some erroneous descriptions related to the common method for output circuit of the parallel input/output unit mounted as a standard.

Revision place	Correction	Mistake
Common method item shown in the table "Electric specifications of output circuit"	8 points per common (common terminal: 8 points)	4 points per common (common terminal: 4 points)

<Supplementary notes regarding output circuit fuses>

The output circuit protective fuses prevent failure in case of load short-circuit and improper connections. Please do not connect loads that cause the current to exceed the maximum rated current. If the maximum rated current is exceeded, the internal transistors may be damaged. The locations of the fuses are indicated in "4. Locations of Output Circuit Fuses for Parallel Input/Output Unit."

2. Changes

The common method for output circuit of the optional parallel input/output unit has been changed.

Revision place	Correction	Mistake
Common method item shown in the table "Electric specifications of output circuit"	8 points per common (common terminal: 8 points)	4 points per common (common terminal: 4 points)

3. Signal assignment for parallel input/output connectors

The signal assignment for parallel input/output connectors has been changed according to the corrections and changes made to the output circuit above. A list of pin numbers and signals assigned to them is shown below. The following examples are for CN100, but the assignments is the same for all standard and optional parallel input/output units (including the second and subsequent units as well).

List of connector CN100 pin numbers and signal assignments after changes (common for sink/source of CR1/CR1B/CR2A/CR2B)


Pin No.	Line color	Function name		Pin No.	Line color	Function name	
		General-purpose	Dedicated/power supply, common			General-purpose	Dedicated/power supply, common
1	Orange/Red A		FG	26	Orange/Blue A		FG
2	Gray/Red A		0V:For pins 4-7, 10-13	27	Gray/Blue A		0V:For pins 29-32, 35-38
3	White/Red A		12V/24V:For pins 4-7	28	White/Blue A		12V/24V:For pins 29-32
4	Yellow/Red A	General-purpose output 0	Running	29	Yellow/Blue A	General-purpose output 4	
5	Pink/Red A	General-purpose output 1	Servo on	30	Pink/Blue A	General-purpose output 5	
6	Orange/Red B	General-purpose output 2	Error	31	Orange/Blue B	General-purpose output 6	
7	Gray/Red B	General-purpose output 3	Operation rights	32	Gray/Blue B	General-purpose output 7	
8	White/Red B		0V:For pins 4-7 , 10-13	33	White/Blue B		0V:For pins 29-32 , 35-38
9	Yellow/Red B		12V/24V:For pins 10-13	34	Yellow/Blue B		12V/24V:For pins 35-38
10	Pink/Red B	General-purpose output 8		35	Pink/Blue B	General-purpose output 12	
11	Orange/Red C	General-purpose output 9		36	Orange/Blue C	General-purpose output 13	
12	Gray/Red C	General-purpose output 10		37	Gray/Blue C	General-purpose output 14	
13	White/Red C	General-purpose output 11		38	White/Blue C	General-purpose output 15	
14	Yellow/Red C		COM0:For pins 15-22 ^{Note1)}	39	Yellow/Blue C		COM1:For pins 40-47 ^{Note1)}
15	Pink/Red C	General-purpose input 0	Stop(All slot) ^{Note2)}	40	Pink/Blue C	General-purpose input 8	
16	Orange/Red D	General-purpose input 1	Servo off	41	Orange/Blue D	General-purpose input 9	
17	Gray/Red D	General-purpose input 2	Error reset	42	Gray/Blue D	General-purpose input 10	
18	White/Red D	General-purpose input 3	Start	43	White/Blue D	General-purpose input 11	
19	Yellow/Red D	General-purpose input 4	Servo on	44	Yellow/Blue D	General-purpose input 12	
20	Pink/Red D	General-purpose input 5	Operation rights	45	Pink/Blue D	General-purpose input 13	
21	Orange/Red E	General-purpose input 6		46	Orange/Blue E	General-purpose input 14	
22	Gray/Red E	General-purpose input 7		47	Gray/Blue E	General-purpose input 15	
23	White/Red E		Reserved	48	White/Blue E		Reserved
24	Yellow/Red E		Reserved	49	Yellow/Blue E		Reserved
25	Pink/Red E		Reserved	50	Pink/Blue E		Reserved

Note 1) Sink type:24V/12V(COM), Source type:0V(COM)

Note 2) The assignment of the dedicated input signal "STOP" is fixed.


4. Locations of Output Circuit Fuses for Parallel Input/Output Unit

(1) Parallel input/output mounted as standard

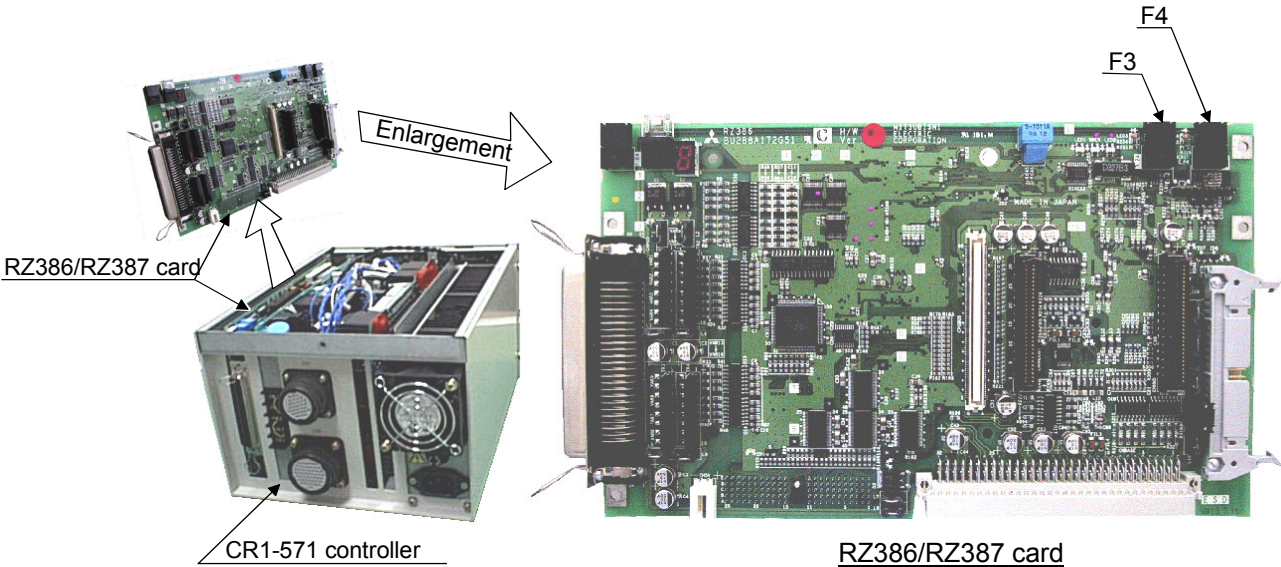

Pin No.	Fuse
4 ~ 7 pin 10 ~ 13 pin	F3
29 ~ 32 pin 35 ~ 38 pin	F4

(2) Parallel input/output of optional

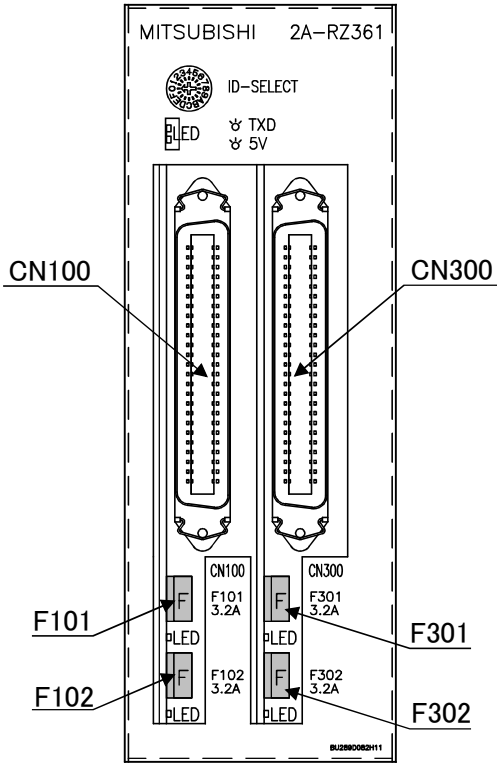

Connector	Pin No.	Fuse
CN100	4 ~ 7 pin 10 ~ 13 pin	F101
	29 ~ 32 pin 35 ~ 38 pin	F102
CN300	4 ~ 7 pin 10 ~ 13 pin	F301
	29 ~ 32 pin 35 ~ 38 pin	F302

■ Introduction

The RP-1AH is an ultra-compact robot with an arm mass of approx. 12kg and installation area equivalent to A5 size. Highly accurate layout and assembly into devices are possible. With the world's first 5-joint closed link structure, the arm section has been downsized and made highly rigid, allowing productivity to be increased greatly with high-speed operations equivalent to a dedicated machine.

Furthermore, a positioning repeatability (0.005mm) one digit higher than the conventional robot has been realized allowing accurate and detailed work to be carried out.

The RP-3AH with an extended movement range maximum mass capacity of 3kg, and the RP-5AH with a maximum mass capacity of 5kg are also available.

The clean specification of the cleanliness 100 ($0.3 \mu\text{m}$) are also available.

However, to comply with the target application, a work system having a well-balanced robot arm, peripheral devices or robot and hand section must be structured.

When creating these standard specifications, we have edited them so that the Mitsubishi robot's characteristics and specifications can be easily understood by users considering the implementation of robots. However, if there are any unclear points, please contact your nearest Mitsubishi branch or dealer.

Mitsubishi hopes that you will consider these standard specifications and use our robots.









In this manual, the specifications regarding the robot arm are given in [Page 5, "2 Robot arm"](#) and following, and the specifications regarding the controller are given in [Page 35, "3 Controller"](#) and following. Refer to the corresponding sections for details on the specifications, options and maintenance parts, etc.

Caution:

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
- The details of this manual are subject to change without notice.
- The specifications values are based on Mitsubishi standard testing methods.
- The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed".
Please contact your nearest dealer if you find any doubtful, wrong or skipped point.
- This Specifications Manual is original.

Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

-  CAUTION** All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training
-  CAUTION** For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan
-  WARNING** Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch
-  CAUTION** During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress
-  WARNING** Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence
-  CAUTION** Establish a set signaling method to the related operators for starting work, and follow this method.
Signaling of operation start
-  CAUTION** As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress
-  CAUTION** Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

The points of the precautions given in the separate "Safety Manual" are given below.
Refer to the actual "Safety Manual" for details.

⚠CAUTION

Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)

⚠CAUTION

Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.

⚠CAUTION

Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.

⚠CAUTION

Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.

⚠CAUTION

Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.

⚠CAUTION

Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.

⚠WARNING

Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.

⚠WARNING

Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.

⚠CAUTION

Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.

⚠WARNING

When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.

⚠CAUTION

Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.

⚠CAUTION

After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.

⚠CAUTION

Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.

⚠CAUTION

Never carry out modifications based on personal judgments, or use non-designated maintenance parts.
Failure to observe this could lead to faults or failures.

⚠WARNING

When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

⚠ CAUTION

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected. Moreover, it may interfere with the peripheral device by drop or move by inertia of the arm.

⚠ CAUTION

Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters.

If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.


Precautions for the basic configuration are shown below. (When CR1-571/CR1B-571 is used for the controller.)

⚠ CAUTION

Provide an earth leakage breaker that packed together on the primary power supply of the controller as protection against electric leakage. Confirm the setting connector of the input power supply voltage of the controller, if the type which more than one power supply voltage can be used. Then connect the power supply.

Failure to do so could lead to electric shock accidents.

Power supply *RV-1A/2AJ series and RP-1AH/3AH/5AH series: Single phase 90-132VAC, 180-253VAC.
*Except the above: Single phase 180-253VAC.

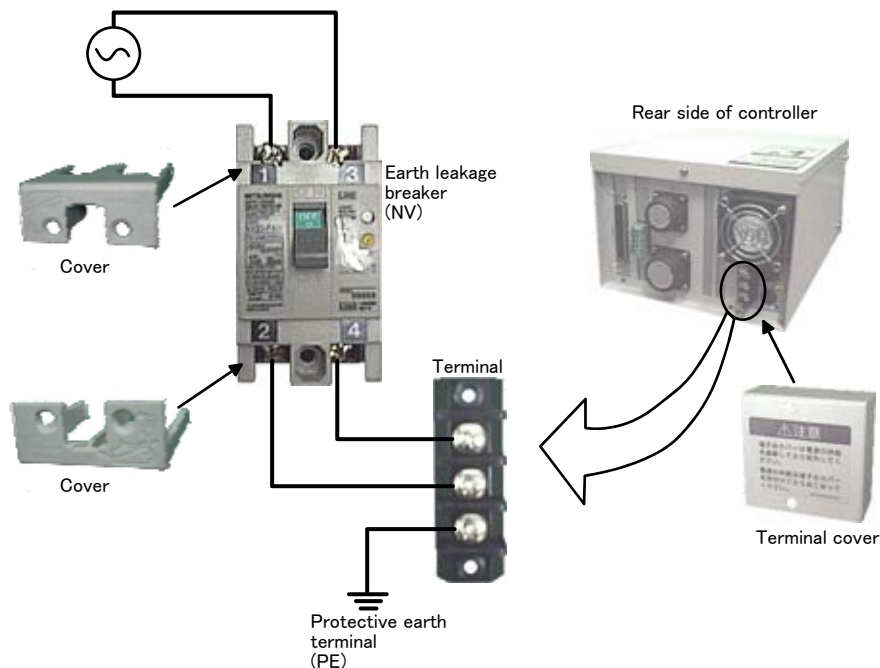

Revision history

Date of print	Specifications No.	Details of revisions
2000-04-10	BFP-A8104Z	First print
2000-05-16	BFP-A8104Z-a	Error in writing correction
2000-06-30	BFP-A8104	Error in writing correction
2001-03-06	BFP-A8104-A	Error in writing correction
2001-05-14	BFP-A8104-B	Error in writing correction
2002-01-25	BFP-A8104-C	LNG, RLNG and MESNGLSW parameters were added. Error in writing correction
2002-07-05	BFP-A8104-D	The description of input/output circuit terminal was corrected. Error in writing correction.
2006-07-12	BFP-A8104-E	Error in writing correction.
2009-06-23	BFP-A8104-F	The EC Declaration of Conformity was changed. (Correspond to the EMC directive; 2004/108/EC)
2009-07-29	BFP-A8104-G	The EC-Statement of Compliance was added.
2009-09-26	BFP-A8104-H	The EC Declaration of Conformity was changed. (Correspond to the EMC directive ; 2006/42/EC.)

CONTENTS

Page

1 General configuration	1
1.1 Configuration Devices	1
1.1.1 Standard configuration devices	1
1.1.2 Shipping special specifications	1
1.1.3 Options	1
1.1.4 Maintenance parts	1
1.2 Contents of the structural equipment	2
1.2.1 Robot arm	2
1.2.2 Controller	3
1.3 Contents of the Option equipment and special specification	4
2 Robot arm	5
2.1 Standard specifications	5
2.2 Definition of specifications	6
2.2.1 Pose repeatability	6
2.2.2 Relation of mass capacity and acceleration/deceleration	7
2.2.3 Clean specifications	8
2.3 Names of each part	9
2.4 Outside dimensions • Operating range	10
(1) RP-1AH/1AHC-SB	10
(2) RP-3AH/3AHC-SB	13
(3) RP-5AH/5AHC-SB	16
2.5 Tooling	19
2.5.1 Wiring and piping for hand	19
2.5.2 Pneumatic piping in robot	21
2.5.3 Wiring of pneumatic hand output cable in robot	21
2.5.4 Wiring of hand check input cable in robot	21
2.5.5 Wiring and piping system diagram for hand	22
2.5.6 Electrical specifications of hand input/output	23
2.5.7 Air supply circuit example for the hand	24
2.6 Shipping special specifications, options, and maintenance parts	25
2.6.1 Shipping special specifications	25
(1) Machine cable extension	26
2.7 Options	28
(1) Solenoid valve set	29
(2) Hand input cable	31
(3) Hand output cable	32
2.8 Maintenance parts	33
3 Controller	35
3.1 Standard specifications	35
3.1.1 Standard specifications	35
3.1.2 Protection specifications and operating supply	36
3.2 Names of each part	37
3.3 Outside dimensions/Installation dimensions	39
3.3.1 Outside dimensions	39
3.3.2 Installation dimensions	40
3.4 External input/output	41
3.4.1 Types	41
3.4.2 Explanation	41
3.5 Dedicated input/output	42
3.6 Emergency stop input/output	44
3.6.1 Connection of the external emergency stop	44
3.6.2 Door switch function	45
3.7 Parallel input/output unit	46

CONTENTS

	Page
3.8 Options	51
(1) Teaching pendant (T/B)	52
(2) Pneumatic hand interface	55
(3) Expansion option box	57
(4) Parallel I/O unit	59
(5) External I/O cable	68
(6) Personal computer cable	70
(7) Extended serial interface	72
(8) CC-Link interface	74
(9) Ethernet interface	77
(10) Additional axis interface	79
(11) Personal computer support software/Personal computer support software mini	81
3.9 Maintenance parts	83
4 Software	85
4.1 List of commands	85
(1) The procedure of robot language selection	85
(2) MELFA-BASIC IV commands	85
(3) MOVEMASTER commands	88
4.2 List of parameters	90
(1) List of parameters	90
(2) Change the display language / 表示言語の切り替え	92
5 Safety	93
5.1 Safety	93
5.1.1 Self-diagnosis stop functions	93
5.1.2 External input/output signals that can be used for safety protection measures	93
5.1.3 Precautions for using robot	94
5.1.4 Safety measures for automatic operation	94
5.1.5 Safety measures for teaching	94
5.1.6 Safety measures for maintenance and inspections, etc.	94
5.1.7 Examples of safety measures	95
5.2 Working environment	96
5.3 Precautions for handling	96
6Appendix	97
Appendix 1 : Specifications discussion material	97

1 General configuration

1.1 Configuration Devices

The following devices are included in this system.

1.1.1 Standard configuration devices

The following items are enclosed as a standard.

- (1) Robot arm (with connector box)
- (2) Controller
- (3) Machine cable
- (4) Robot arm installation bolts
- (5) Transportation fittings
- (6) Instruction manuals, Safety manual
- (7) Guarantee card

1.1.2 Shipping special specifications

Some standard configuration devices or specifications may be changed before shipment from the factory. Thus, it may take some time for delivery, so please consult with your nearest dealer. Changes in the specifications after shipment will require on-site work or for the system to be returned to Mitsubishi.

1.1.3 Options

The options, which expand the robot functions, can be installed after shipment. All installation must be done by the customer.

1.1.4 Maintenance parts

These are consumable parts and spare parts for maintenance.

Consult with "your dealer" for parts that are not listed.

1.2 Contents of the structural equipment

1.2.1 Robot arm

The device installed on the robot arm is shown below.

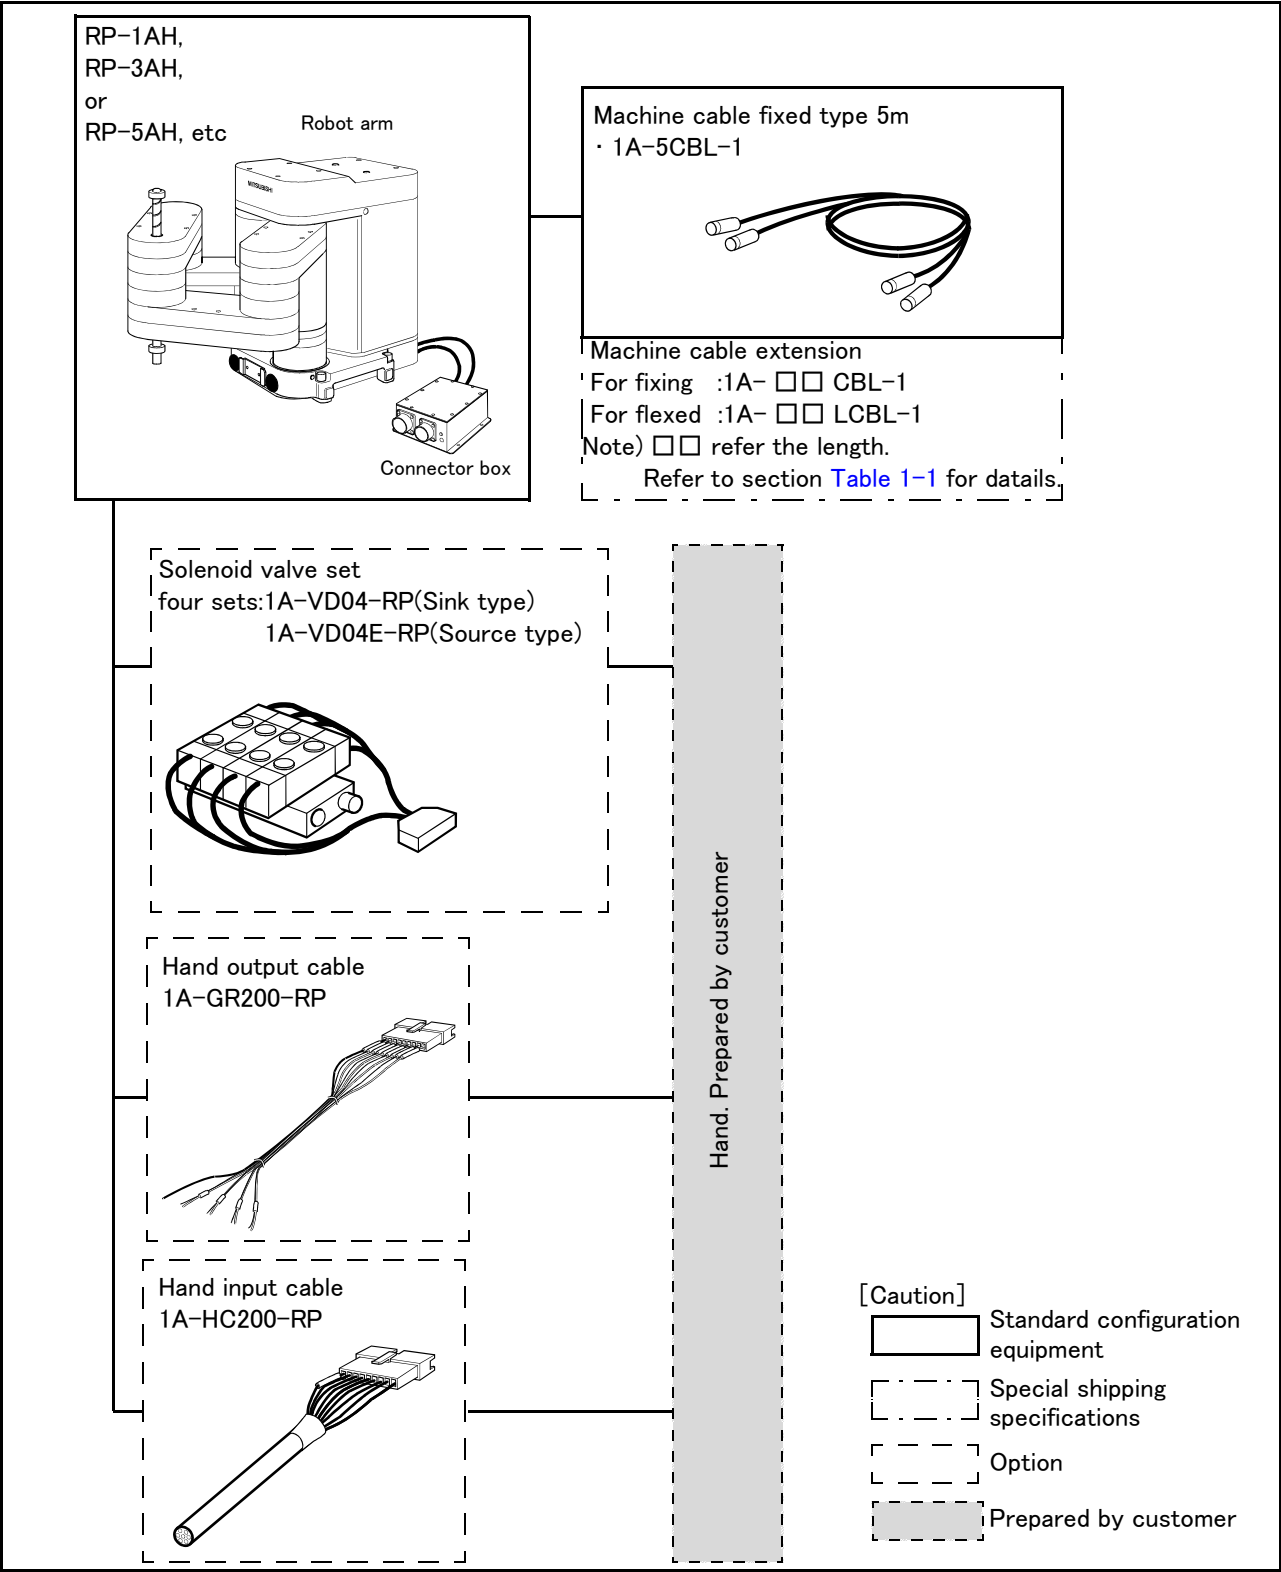


Fig.1-1 : Structural equipment (Robot arm)

1.2.2 Controller

The devices shown below can be installed on the controller.

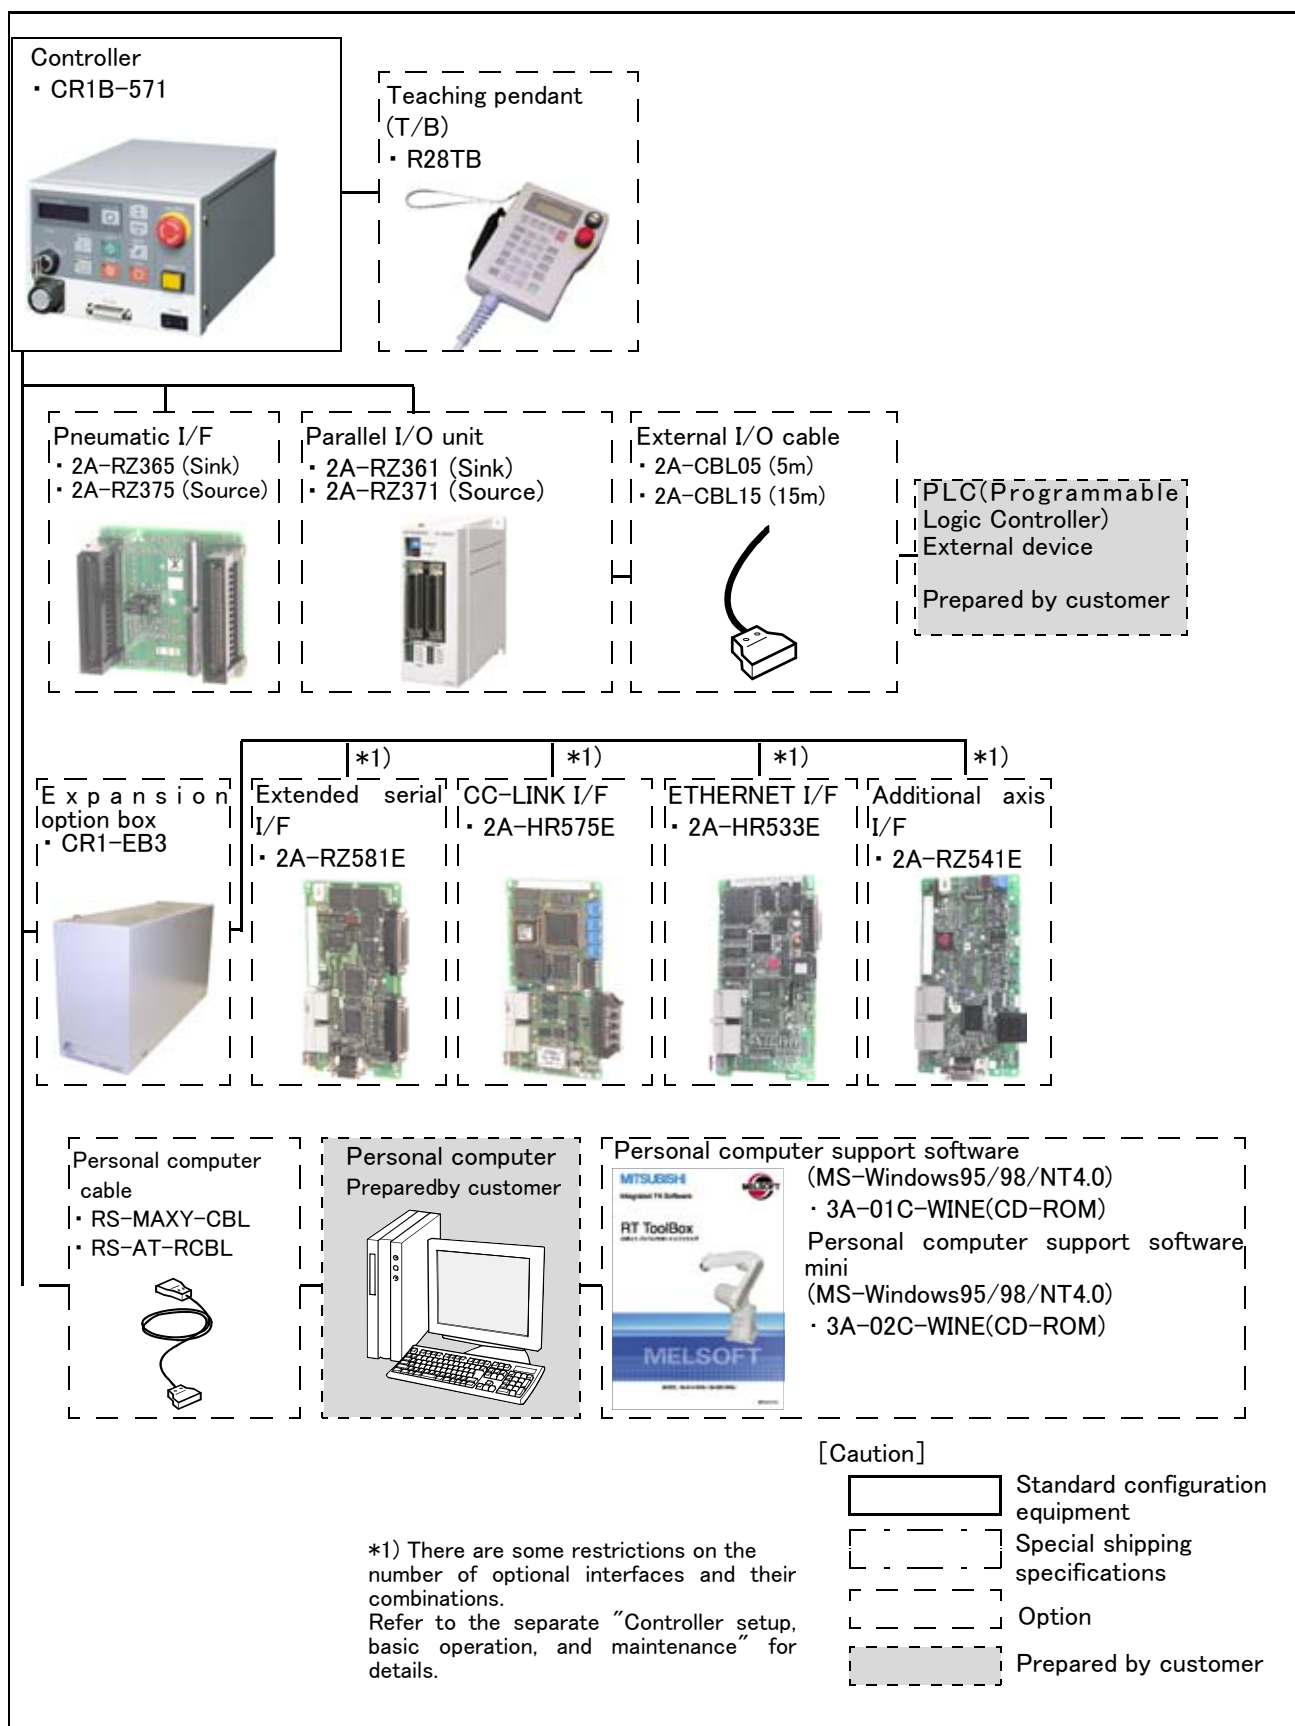


Fig.1-2 : Structural equipment (controller)

1.3 Contents of the Option equipment and special specification

A list of the Optional equipments and special specifications are shown below.

Table 1-1 : The list of the Option equipment and special specification

Item	Type	Specification	Classification	Description
Solenoid valve set	1A-VD04-RP	Four sets(Sink type)	○	Consult with Mitsubishi for the delivery schedule and price when requesting a 1, 2 or 3-row type.
	1A-VD04E-RP	Four sets(Source type)	○	
Hand output cable	1A-GR200-RP		○	
Hand input cable	1A-HC200-RP		○	
Extended machine cables	1A- □□ CBL-1	For fixing (Two sets for power and signal)	□	10、15m
	1A- □□ LCBL-1	For bending (Two sets for power and signal)	□	5、10、15m
Teaching pendant	R28TB	Cable length 7m	○	With 3-position deadman switch/ IP 65
	R28TB-15	Cable length 15m (special specification)	○	
Pneumatic hand interface	2A-RZ365	DO: 8 point (Sink type)	○	It is necessary when the hand output signal of the robot arm is used. (Integrated in the controller.)
	2A-RZ375	DO: 8 point (Source type)	○	
Parallel I/O Unit	2A-RZ361	DO: 32 point (Sink type)/ DI: 32 point (Sink type)	○	The unit for expansion the external input/output. Electrical isolated Type (100mA/Point)
	2A-RZ371	DO: 32 point (Source type)/ DI: 32 point (Source type)	○	
External I/O cable (For Parallel I/O Unit)	2A-CBL05	5m	○	Use to connect the external peripheral device to the parallel input/output unit
	2A-CBL15	15m	○	
Personal computer cable	RS-MAXY-CBL	RS-232C cable 3m for PC-AT compatible model	○	Use RS-AT-RCBL for the connection from the expansion option box.
	RS-AT-RCBL		○	
Personal computer Support software	3A-01C-WINE	CD-ROM	○	MS-Windows98/2000/NT4.0/Me/XP (With the simulation function)
Personal computer Support software mini	3A-02C-WINE	CD-ROM	○	MS-Windows98/2000/NT4.0/Me/XP
RT ToolBox2 (Personal computer Support software)	3D-11C-WINE	CD-ROM	○	MS-Windows2000/XP/Vista (With the simulation function)
RT ToolBox2 mini (Personal computer Support software mini)	3D-12C-WINE	CD-ROM	○	MS-Windows2000/XP/Vista
Expansion option box	CR1-EB3	Up to three option cards can be mounted	○	Install on the side of the controller
Extended serial interface	2A-RZ581-E	RS-232C x 1 RS-232C or RS-422 x 1	○	CR-EB3 is need.
CC-Link interface	2A-HR575-E	Local station (The local station alone is supported.)	○	for MELSEC PLC with CC-Link connection. CR-EB3 is need.
Ethernet interface	2A-HR533-E	ETHERNET x 1	○	CR-EB3 is need.
Additional axis interface	2A-RZ541-E	SSC x 1 Up to 8 axes can be added	○	MR-J2 servoAmplifier Unit connection. CR-EB3 is need.

Note1) In the classification column, ○ refers to an option, and □ to a Shipping special specifications.

2 Robot arm

2.1 Standard specifications

2.1.1 Standard specifications

Table 2-1 : Tab Standard specifications of robot

Item		Unit	Specification					
Type			RP-1AH	RP-1AHC-SB	PR-3AH	RP-3AHC-SB	RP-5AH	RP-5AHC-SB
Degree of freedom of motion			4-axis					
Installation posture			On floor					
Encoder/Drive system			Absolute encoder/AC servo					
Motor capacity		W	100(All axis)		200(J1,J2,J3 axis), 100(J4 axis)			
Brake			With brake (All axes)					
Maximum load ^{Note1)}		kg	1.0		3.0		5.0	
Rated load		kg	0.5		1.0		2.0	
Arm length	No.1 Arm	mm	100		140		200	
	No.2 Arm		140		200		260	
Motion range	Width x depth	mm	150 x 105 (A6 size)		210 x 148 (A5 size)		297 x 210 (A4 size)	
	Vertical	mm	30		50			
	Rotation	Degree	± 200					
Maximum velocity	J1・J2	Degree/s	480		432			
	J3	mm/s	800		960			
	J4	Degree/s	3000		1330		1230	
Tolerable wrist moment of inertia		kg・m ²	3.10 x 10 ⁻⁴		1.60 x 10 ⁻³		3.20 x 10 ⁻³	
Position repeatability ^{Note2)}	X, Y direction	mm	± 0.005		± 0.008		± 0.01	
	Z direction	mm	± 0.01					
	Wrist rotation direction	Degree	± 0.02		± 0.03			
Mass		kg	Apporox. 12		Apporox. 24		Apporox. 25	
Tool wiring			Input 8 point/ Output 8 point					
Tool pneumatic pipes			None					
Cleanliness ^{Note3)}				100(0.3 μ m) Note2)		100(0.3 μ m) Note2)		100(0.3 μ m) Note2)
Paint color			color: Light gray (Equivalent to Munsell: 7.65Y7.6/0.73)					

Note1)It is necessary to set the acceleration/deacceleration speed appropriately according to the installing load mass. Refer to [Page 6, "2.2 Definition of specifications"](#) for detail.

Note2)The pose repeatability details are given in [Page 6, "2.2.1 Pose repeatability"](#).

Note3)The clean specification details are given in [Page 8, "2.2.3 Clean specifications"](#) Consult with Mitsubishi for the delivery schedule because it is special specification.

Internal suction requirement. (50 Liter/min)

2.2 Definition of specifications

The accuracy of pose repeatability mentioned in catalogs and in the specification manual is defined as follows.

2.2.1 Pose repeatability

For this robot, the pose repeatability is given in accordance with JIS 8432 (Pose repeatability). Note that the value is based on 100 measurements (although 30 measurements are required according to JIS).

[Caution] The specified “pose repeatability” is not guaranteed to be satisfied under the following conditions.

- [1] Operation pattern factors
 - 1) When an operation that approaches from different directions and orientations are included in relation to the teaching position during repeated operations
 - 2) When the speed at teaching and the speed at execution are different
- [2] Load fluctuation factor
 - 1) When work is present/absent in repeated operations
- [3] Disturbance factor during operation
 - 1) Even if approaching from the same direction and orientation to the teaching position, when the power is turned OFF or a stop operation is performed halfway
- [4] Temperature factors
 - 1) When the operating environment temperature changes
 - 2) When accuracy is required before and after a warm-up operation
- [5] Factors due to differences in accuracy definition
 - 1) When accuracy is required between a position set by a numeric value in the robot's internal coordinate system and a position within the actual space
 - 2) When accuracy is required between a position generated by the pallet function ^{Note1)} and a position within the actual space

Note1)

The pallet function is a function that teaches only the position of the work used as reference (3 to 4 points) and obtains the remaining positions by calculations, for an operation that arranges works orderly or for an operation that unloads orderly arranged works. By using this function, for example, in the case of an operation that arranges works on grid points of 100 x 100, by teaching only three points of four corners, the remaining grid points are automatically generated; thus, it is not necessary to teach all 10,000 points. For more information about the pallet function, refer to the separate volume, “Instruction Manual/Detailed Explanation of Functions and Operations.”

2.2.2 Relation of mass capacity and acceleration/deceleration

The acceleration/deceleration must be set appropriately in the program according to the loaded load mass. The relation of the optimum acceleration/deceleration in respect to the mass capacity is shown with a percentage in Fig. 2-1.

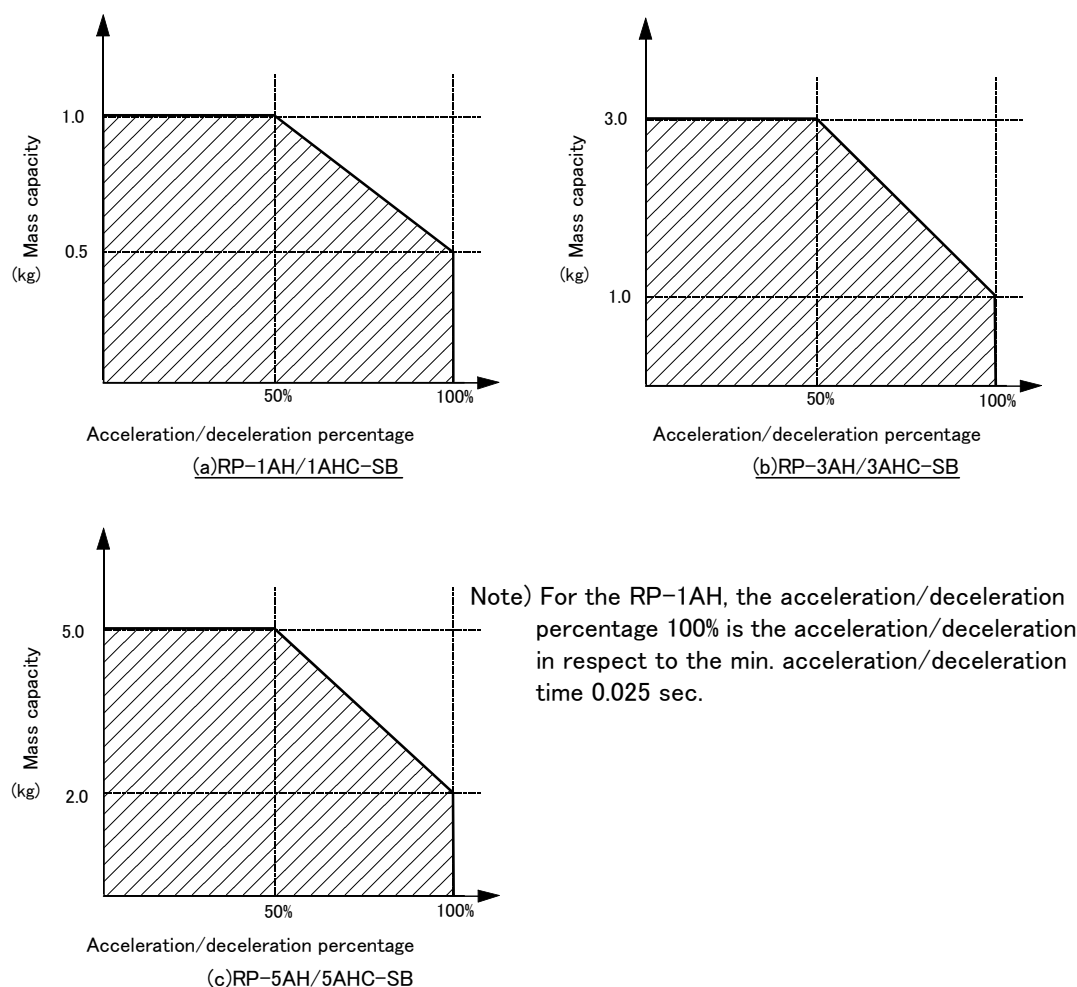


Fig.2-1 : Relation of mass capacity and optimum acceleration/deceleration percentage

Make sure that the acceleration/deceleration percentage satisfies the values in the shaded section shown in Fig. 2-1. The acceleration/deceleration percentage is set with the ACCEL command in the program. If the percentage is not set in the program, the default value 100% will be set as the acceleration/deceleration percentage.

An example of setting in the program is shown below.

Example) When the loaded load mass is 1kg, the appropriate acceleration/deceleration percentage will be 50%, as shown in Fig. 2-1. Thus, the acceleration/deceleration percentage is set as 50 in the program.

【Program example】

```
1 0 ACCEL 50, 50
```

```
2 0 MOV P 1
```

```
:
```

```
,
```

```
,
```

Write the target work program after this.

Details on the ACCEL command are given in section "3.17 Explanation of command words" in the separate manual "Details of Functions and Operations".

When using the optimum acceleration/deceleration function (when using the OADL command), the optimum acceleration/deceleration percentage will be set automatically according to the load state, so setting with the ACCEL command is not required.

2.2.3 Clean specifications

The robot arm clean specifications shown in [Table 2-2](#).

Please confirm the delivery date, because both are special specifications.

Table 2-2 : Clean specifications

Type	Cleanliness	Internal suction	Remarks
RP-1AHC-SB RP-3AHC-SB RP-5AHC-SB	100(0.3 μ m)	concentrated suction with vacuum generating valve.(50Liter/min) ^{Note1)}	The coupling to install at the robot arm back side is enclosed. (Refer to Table 2-3)

Note1)The vacuum generating valve prepared by customer.

The controller (OR1-571) of this robot is a general environment specification. Install the controller in the place not to influence the cleanliness if using with clean environment.

Table 2-3 : Specifications of vacuum generation valve

Type	Maker	Use tube outside diameter
MEDT10	Koganei	$\Phi 6$

■ Precautions for use

- (1) Install an attached coupling at the back of the robot arm, and use the pneumatic pipe of $\phi 6$ from there, and do suction.
- (2) Be careful that exhaust from the vacuum generation valve for the suction doesn't give a cleanliness a bad influence.
- (3) When using a device that moves or rotates the robot arm, the down flow may not be secured because of the air flow. In this case, the degree of cleanliness cannot be ensured.

2.3 Names of each part

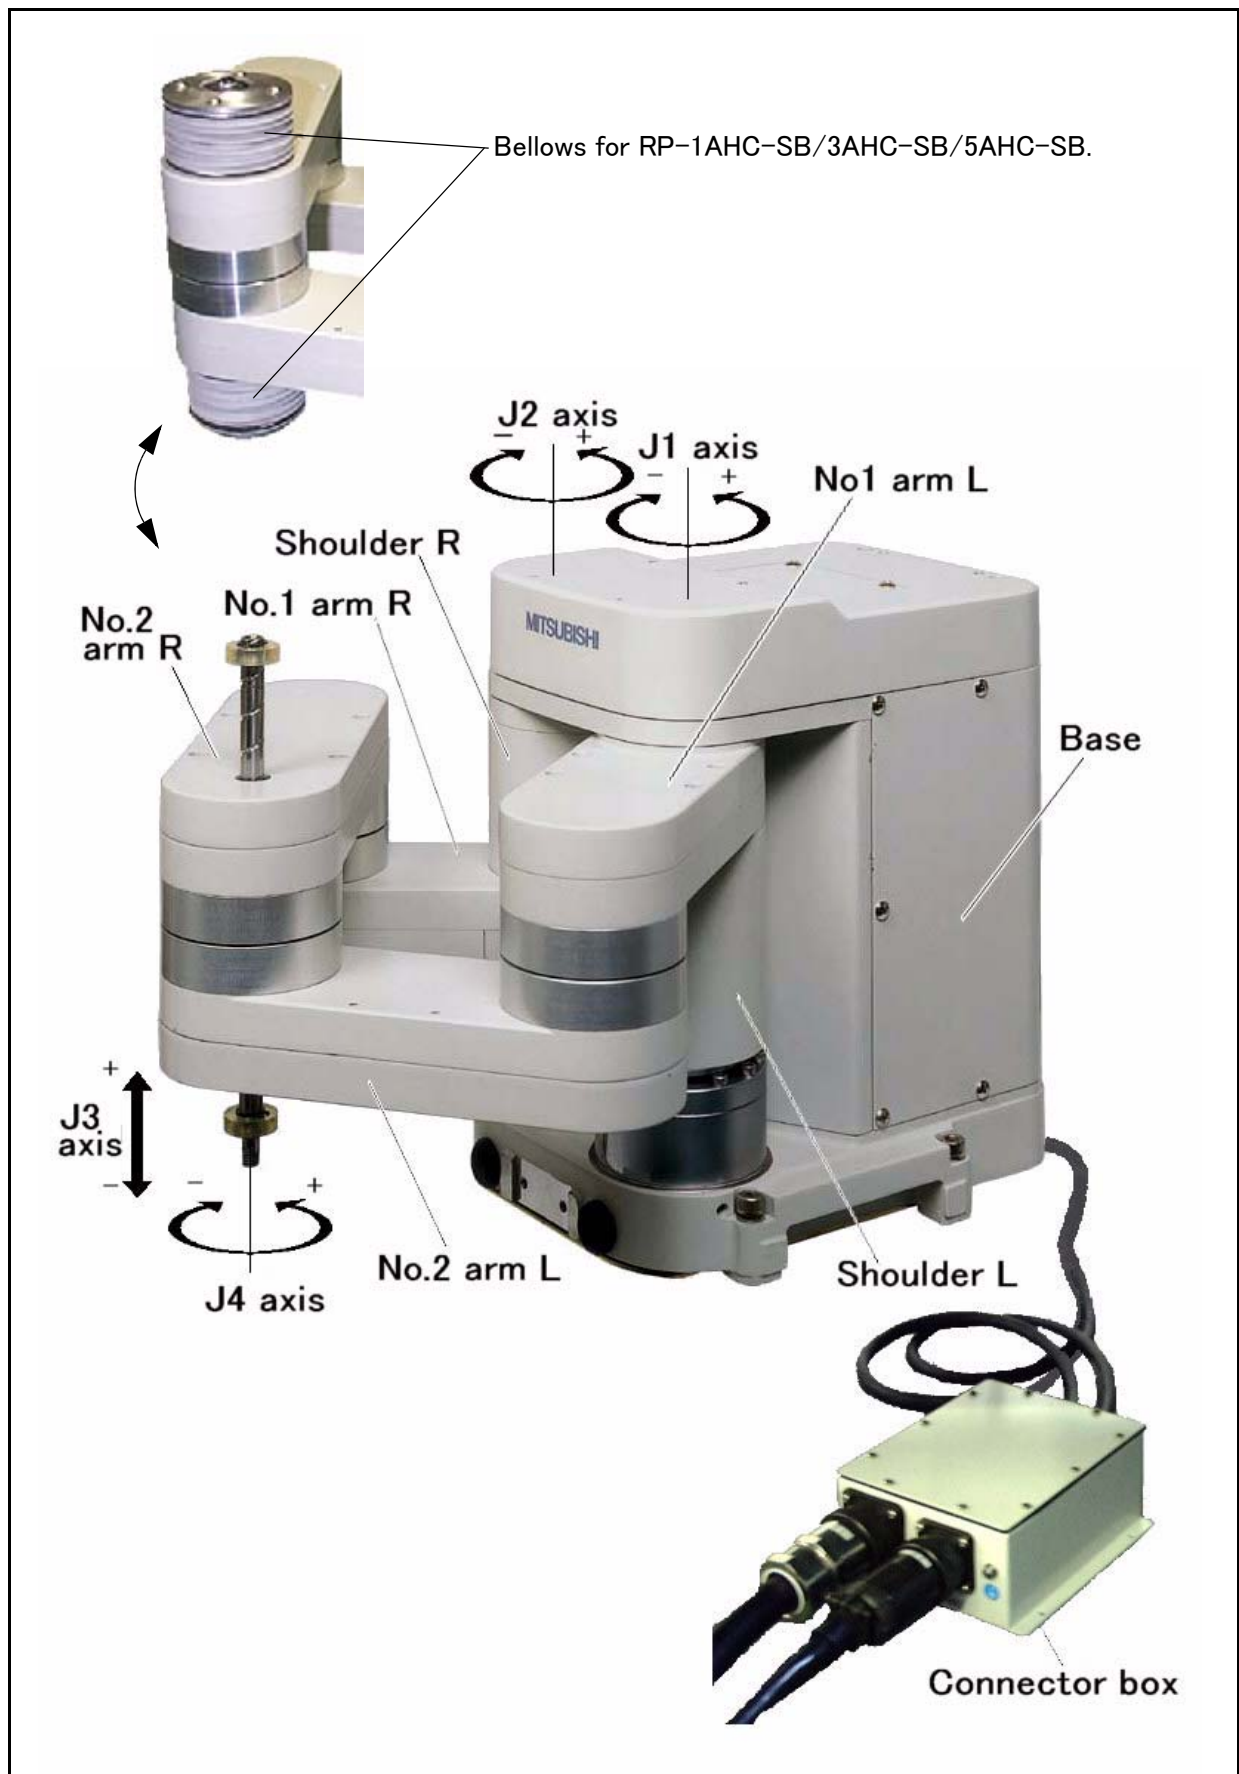


Fig.2-2 : Names of each part of the robot

2.4 Outside dimensions • Operating range

(1) RP-1AH/1AHC-SB

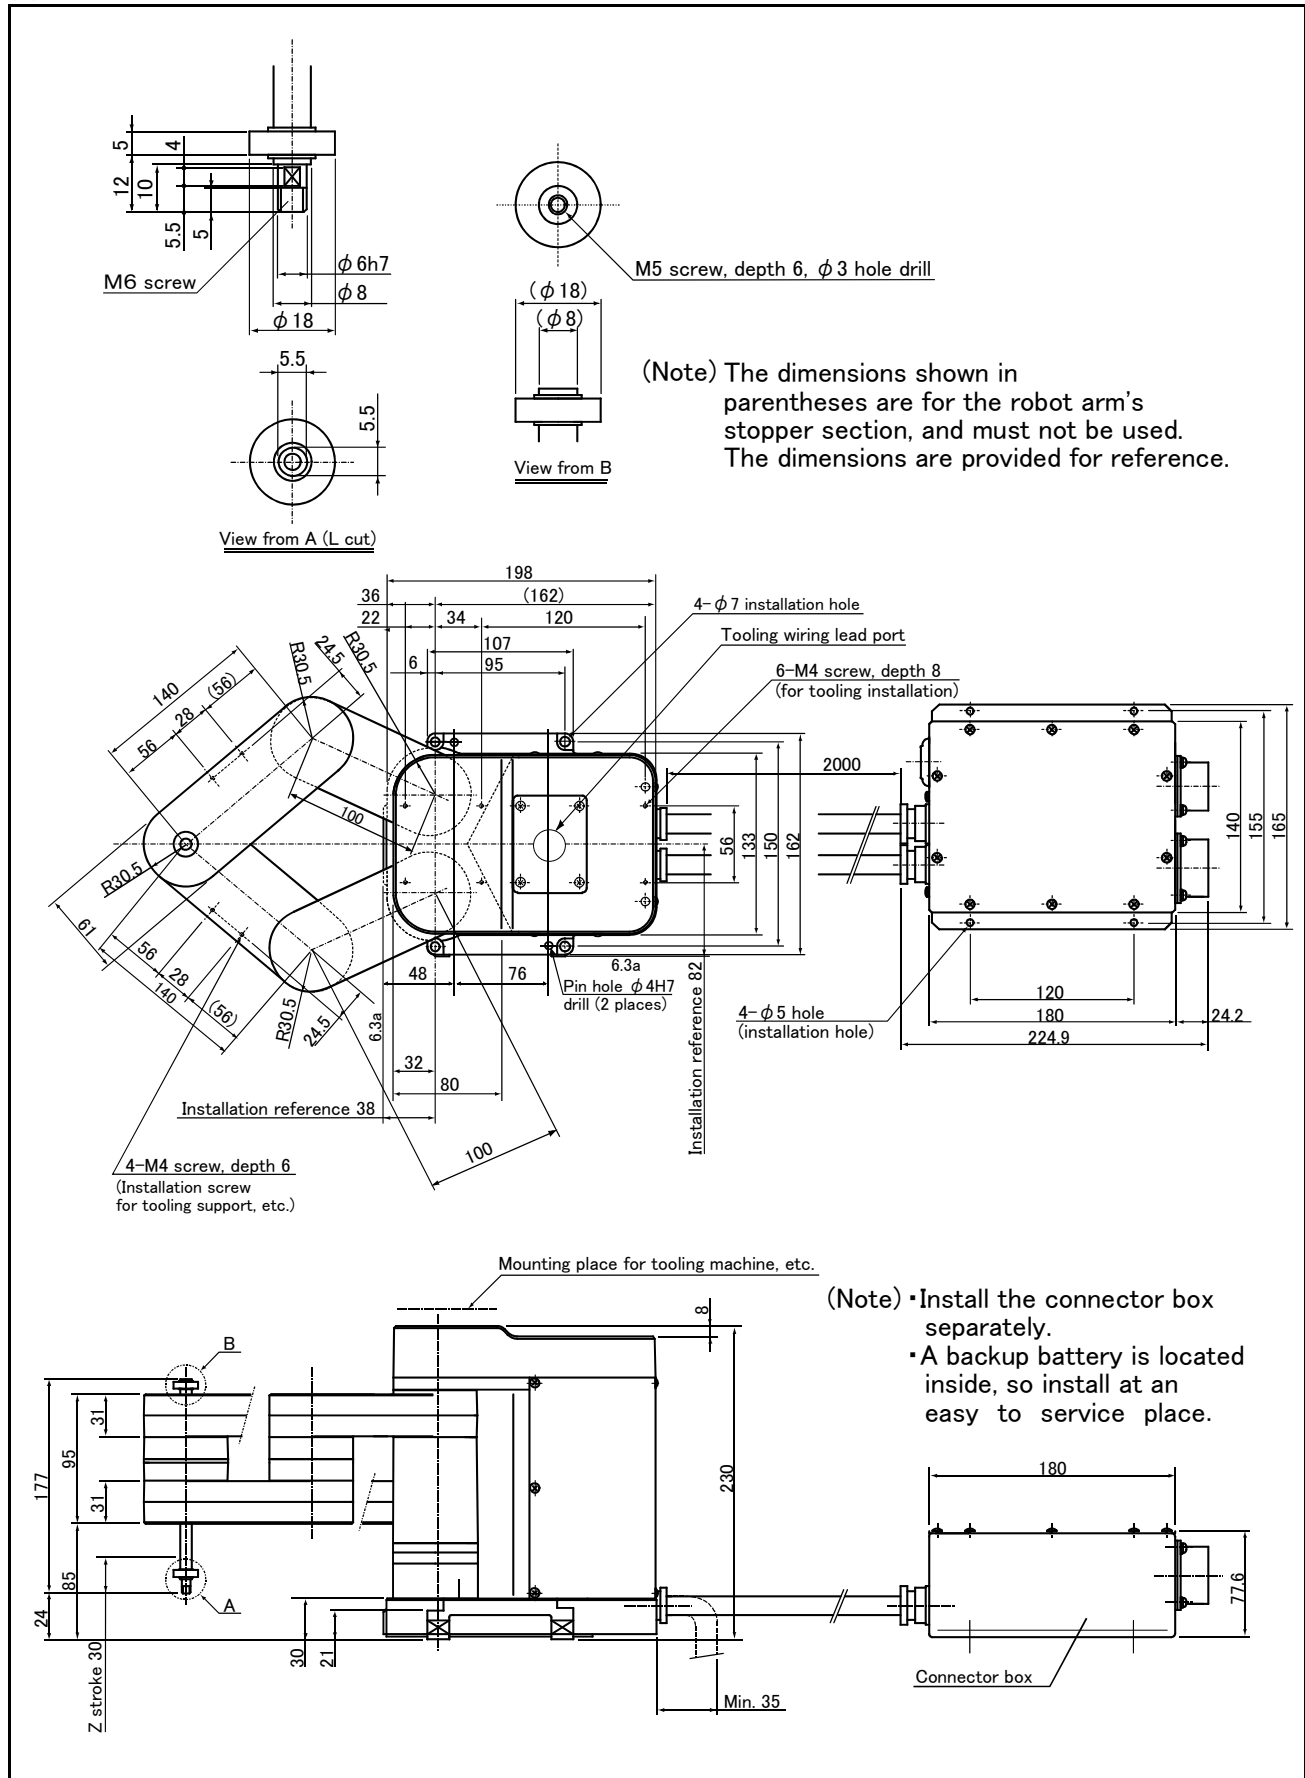


Fig.2-3 : Outside dimensions(RP-1AH)



Outside dimensions • Operating range 2-11

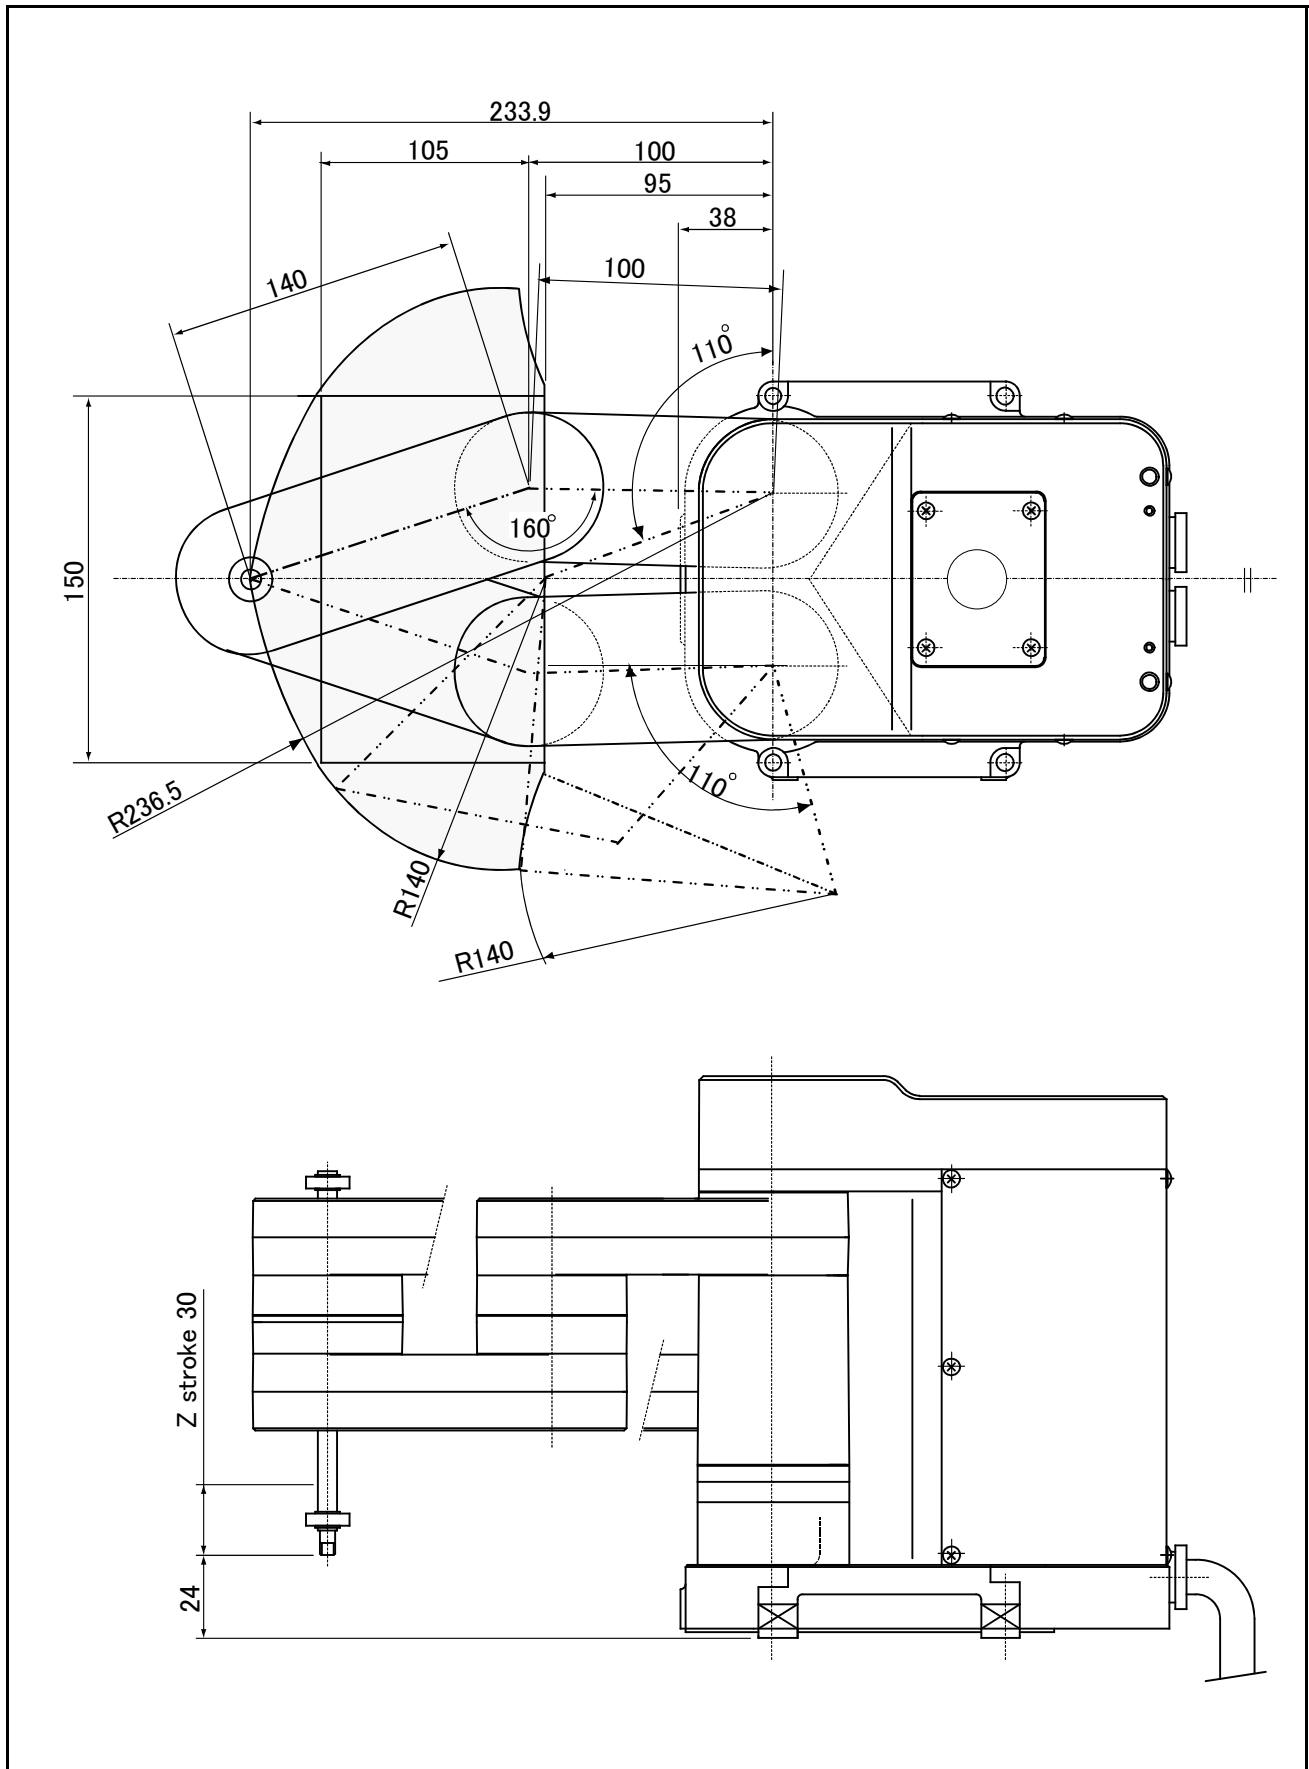
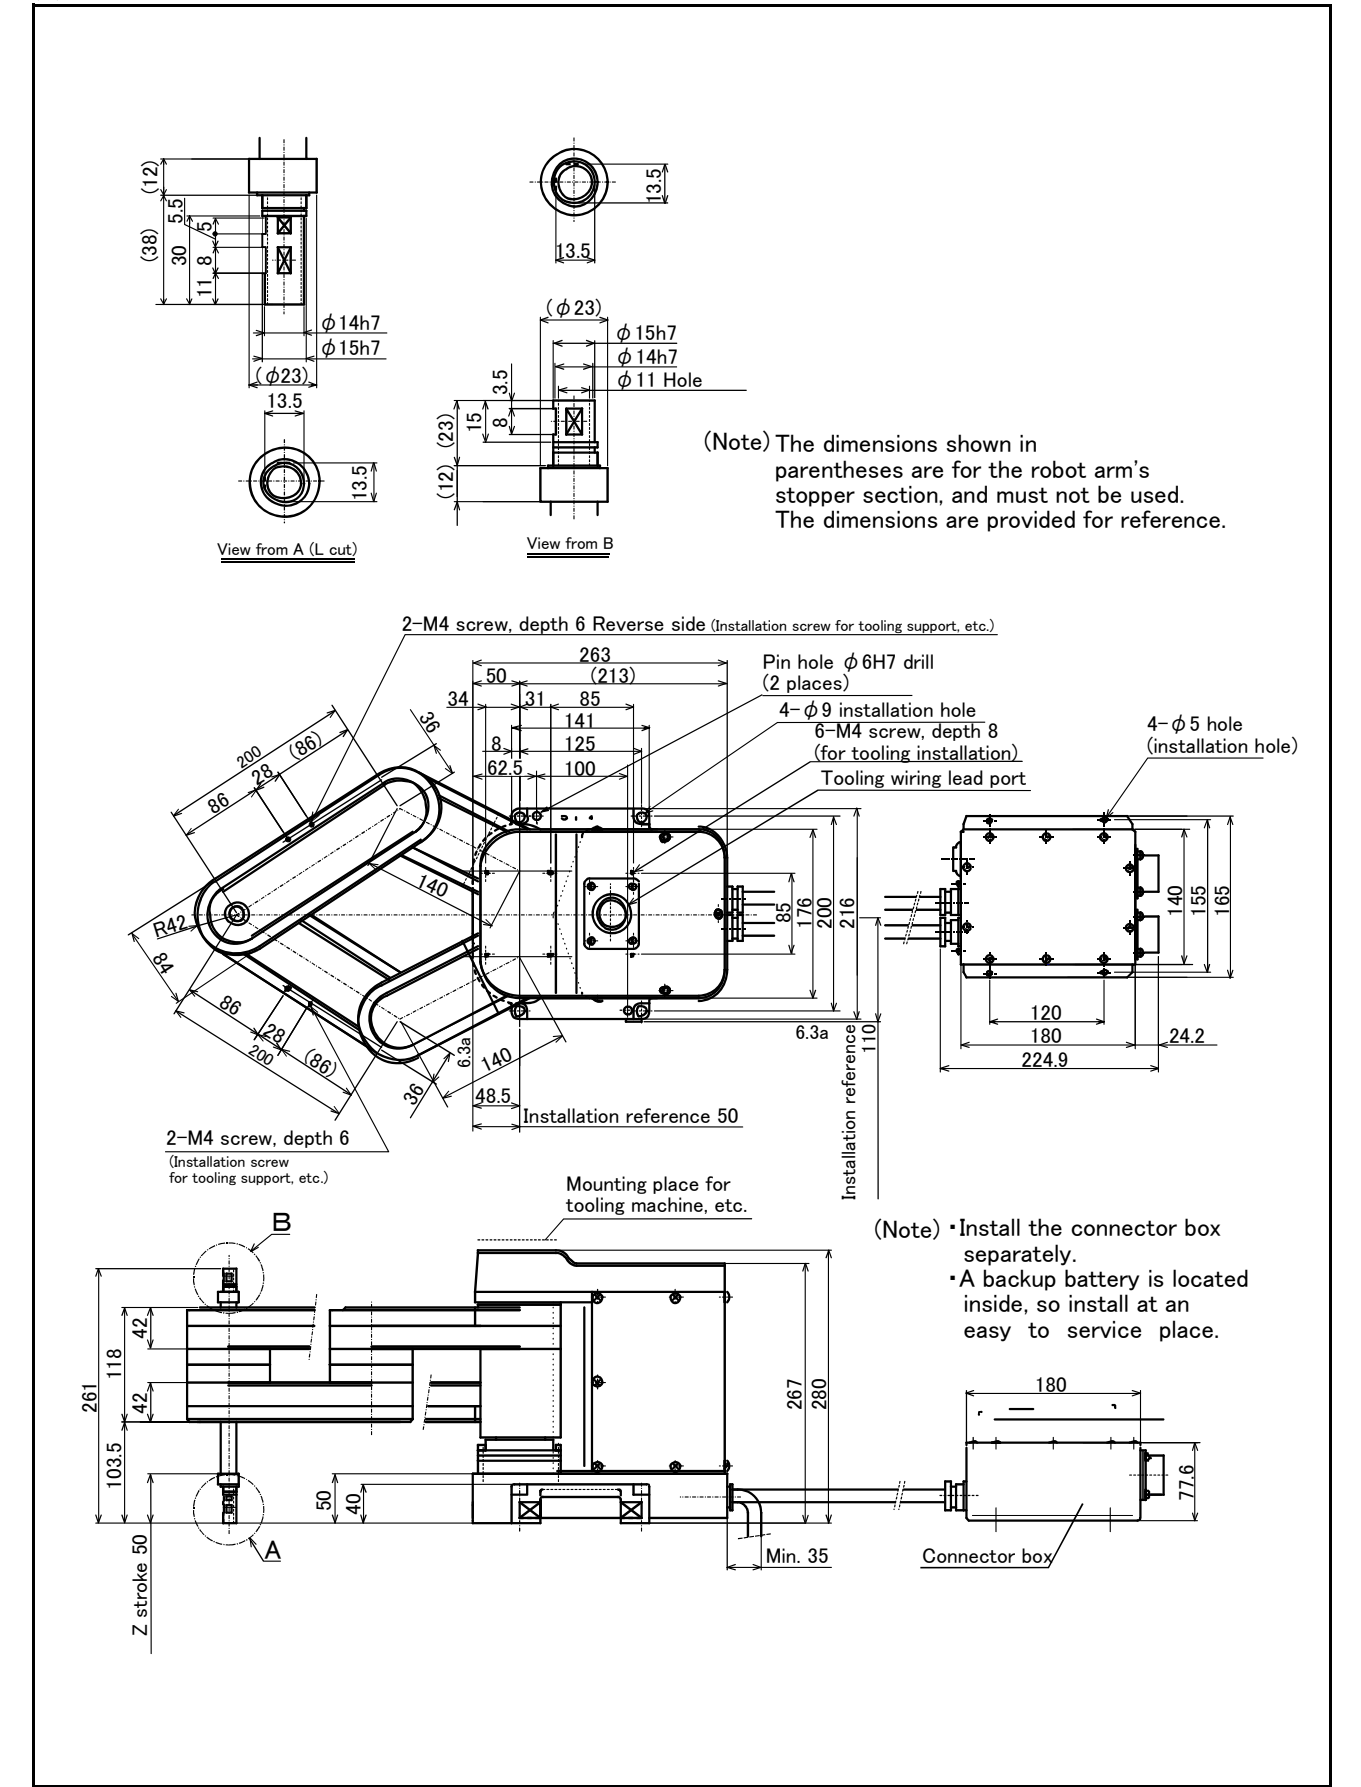
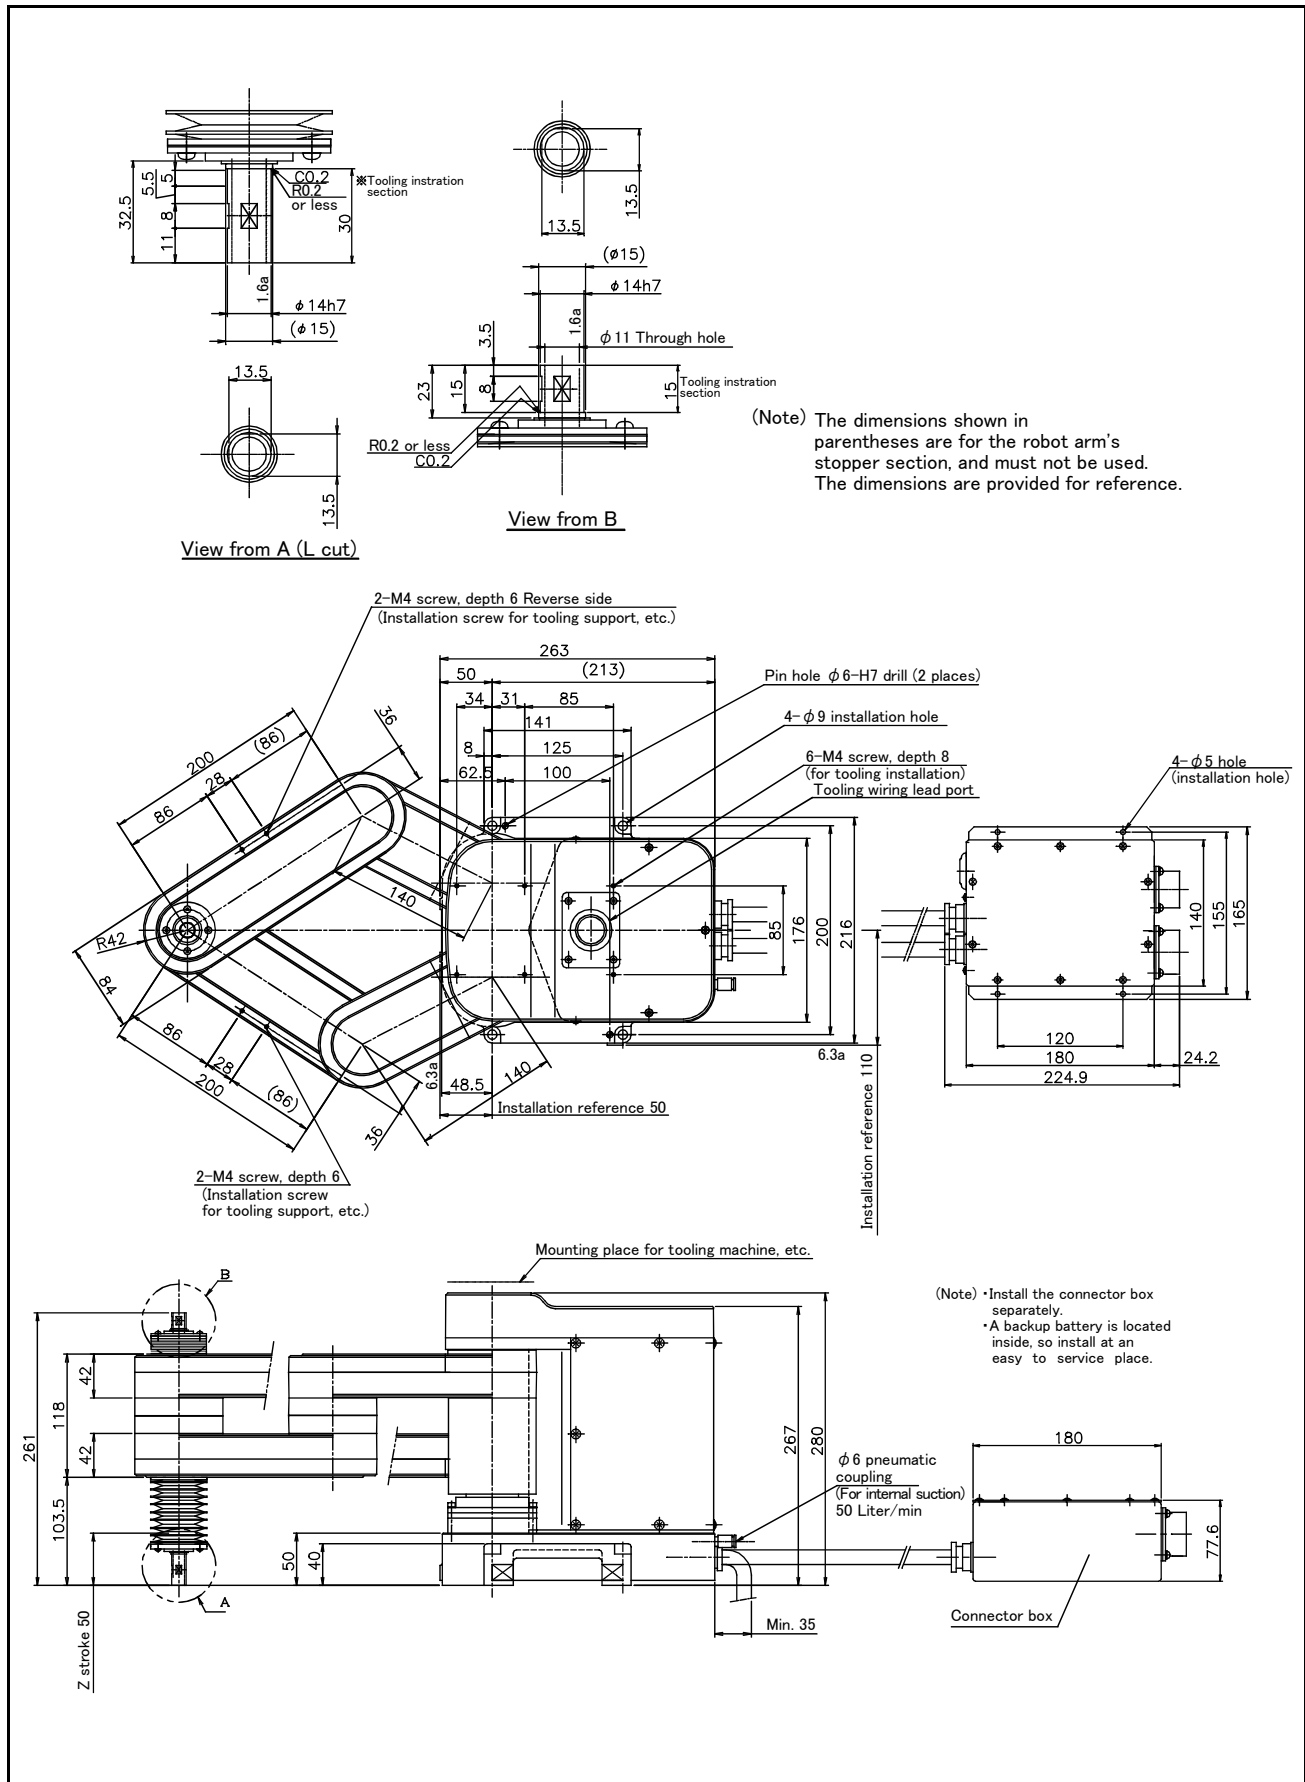


Fig.2-5 : Operating range diagram (RP-1AH/1AHC-SB)





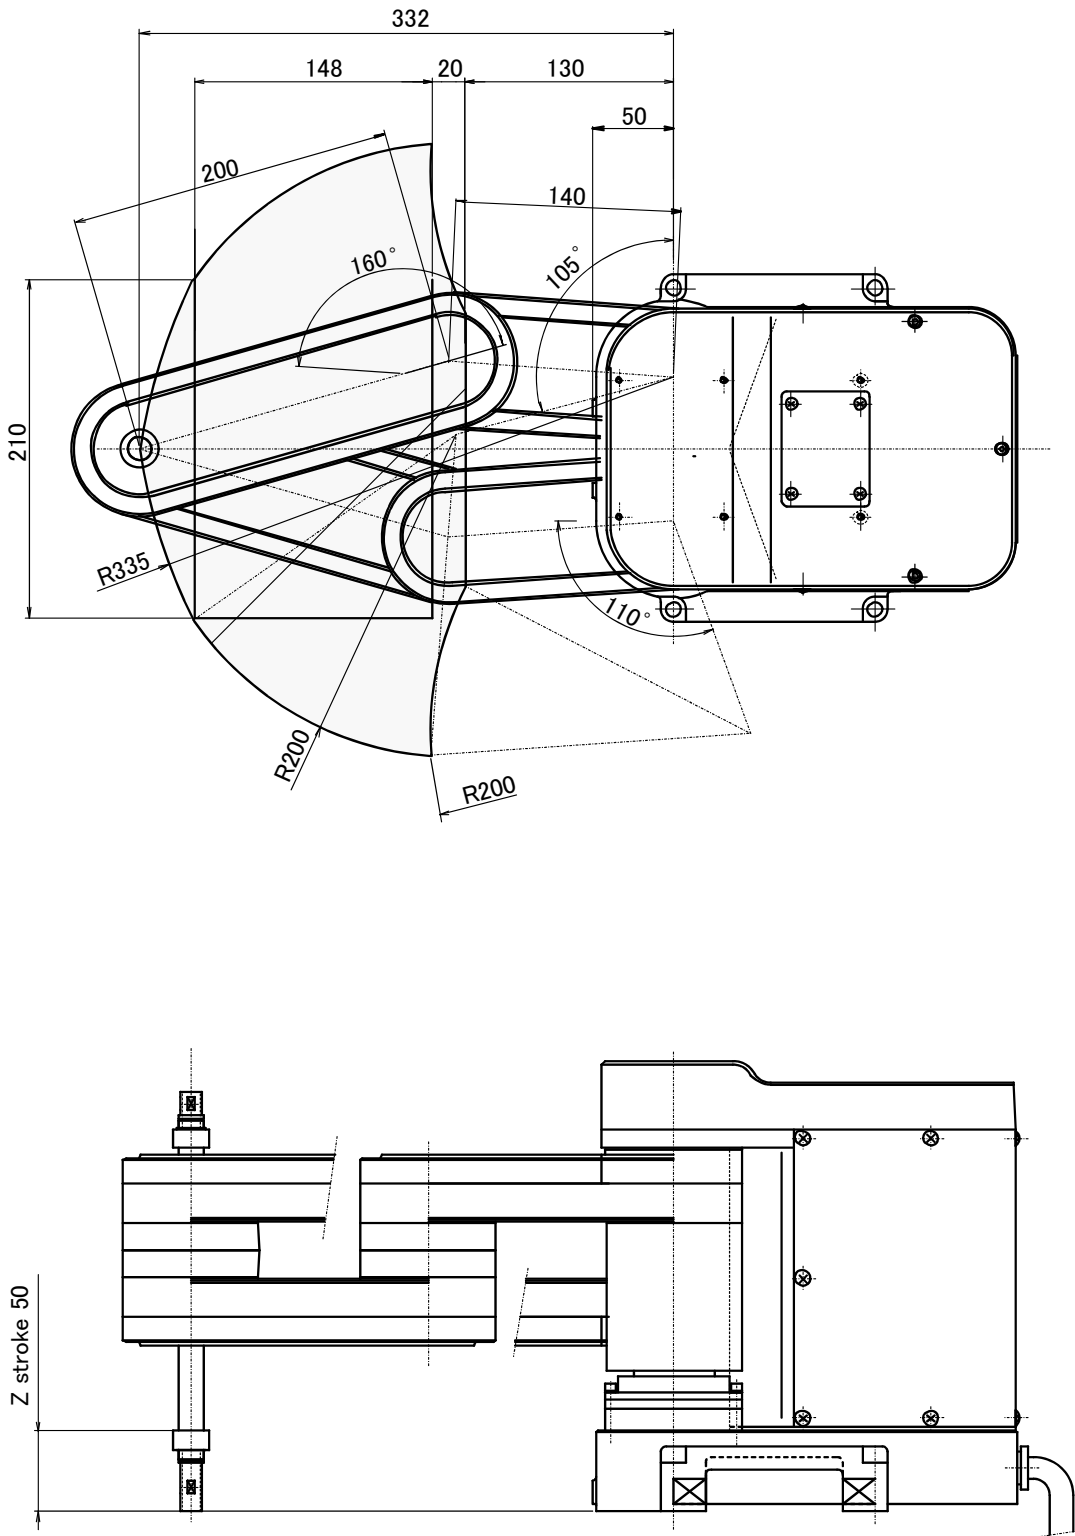


Fig.2-8 : Operating range diagram (RP-3AH/3AHC-SB)

(3) RP-5AH/5AHC-SB

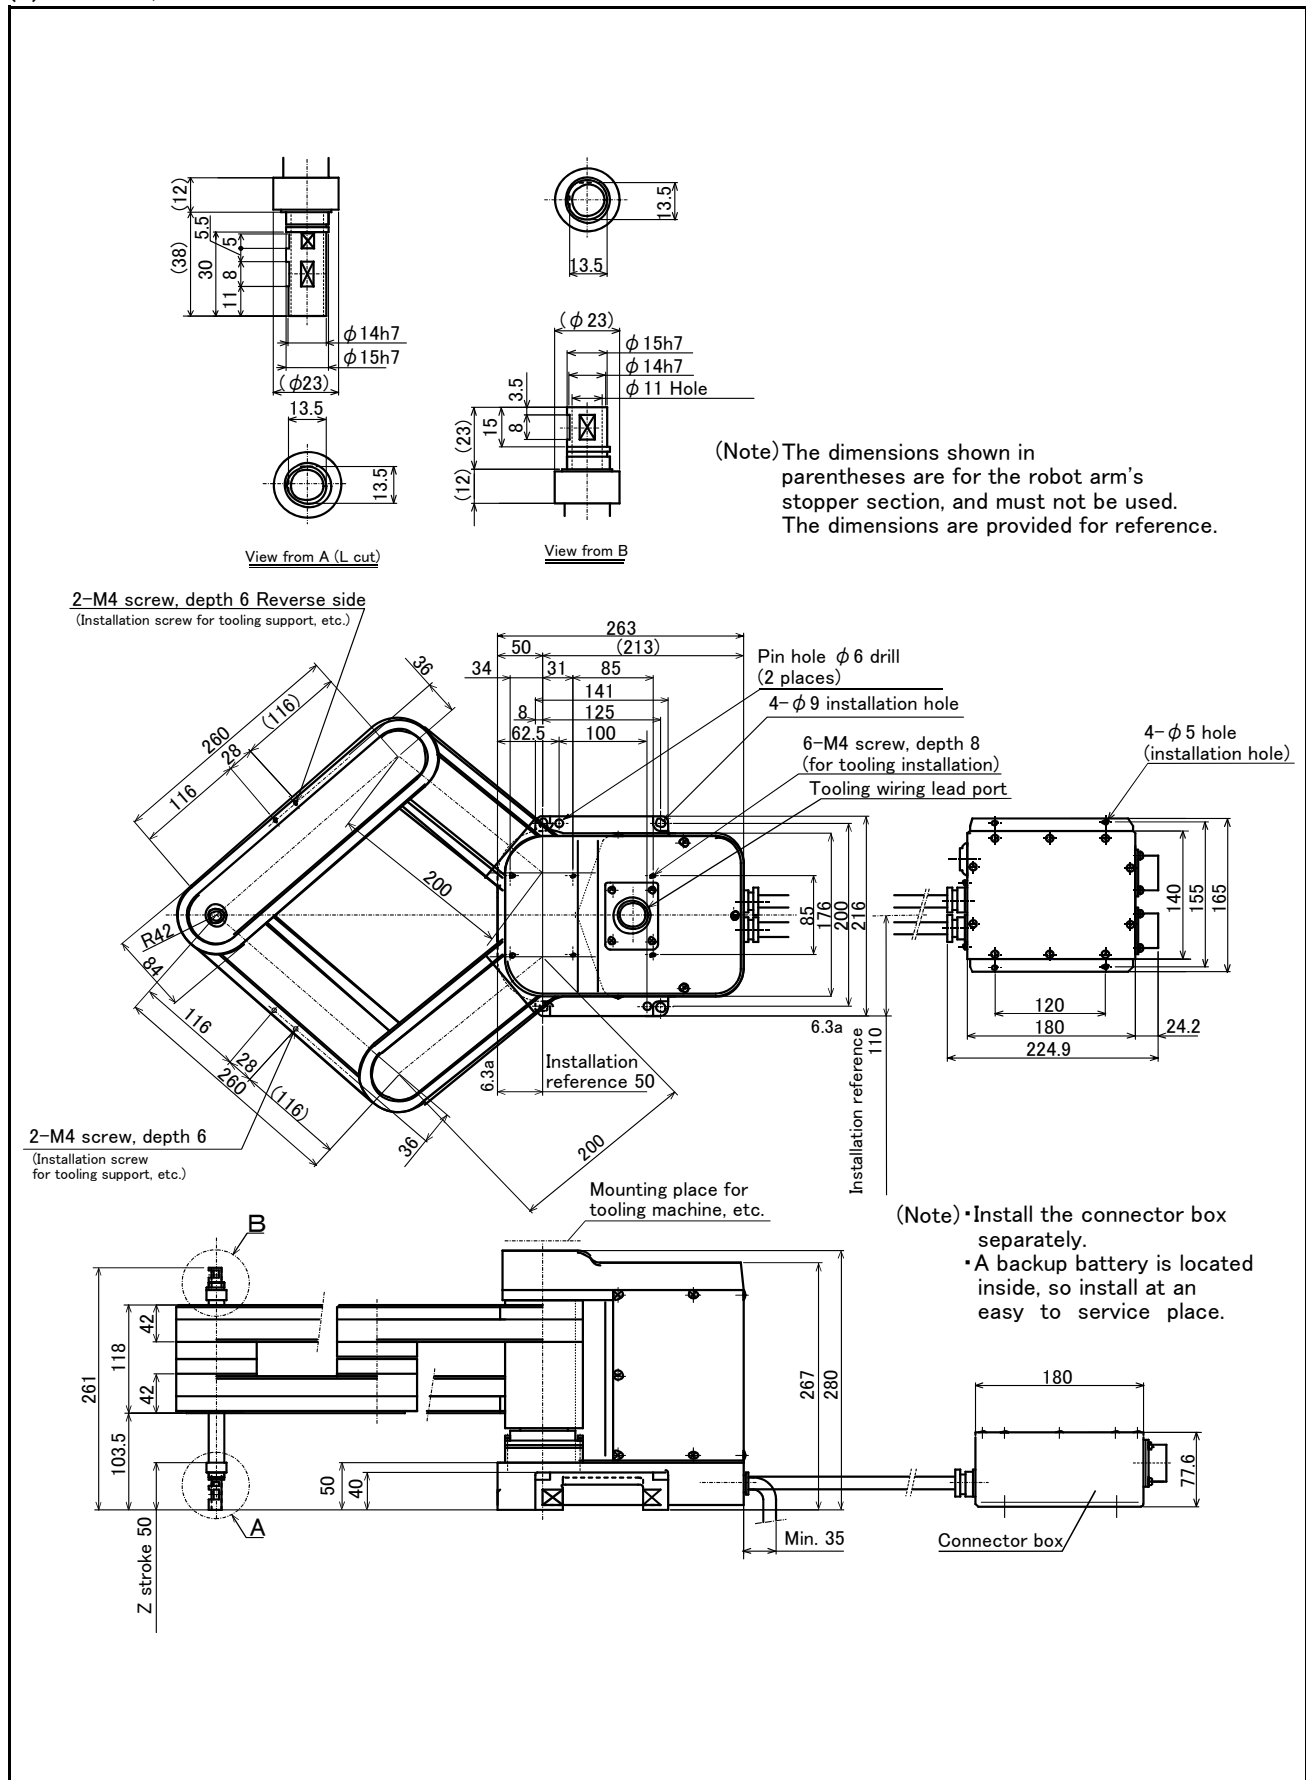


Fig.2-9 : Outside dimensions (RP-5AH)



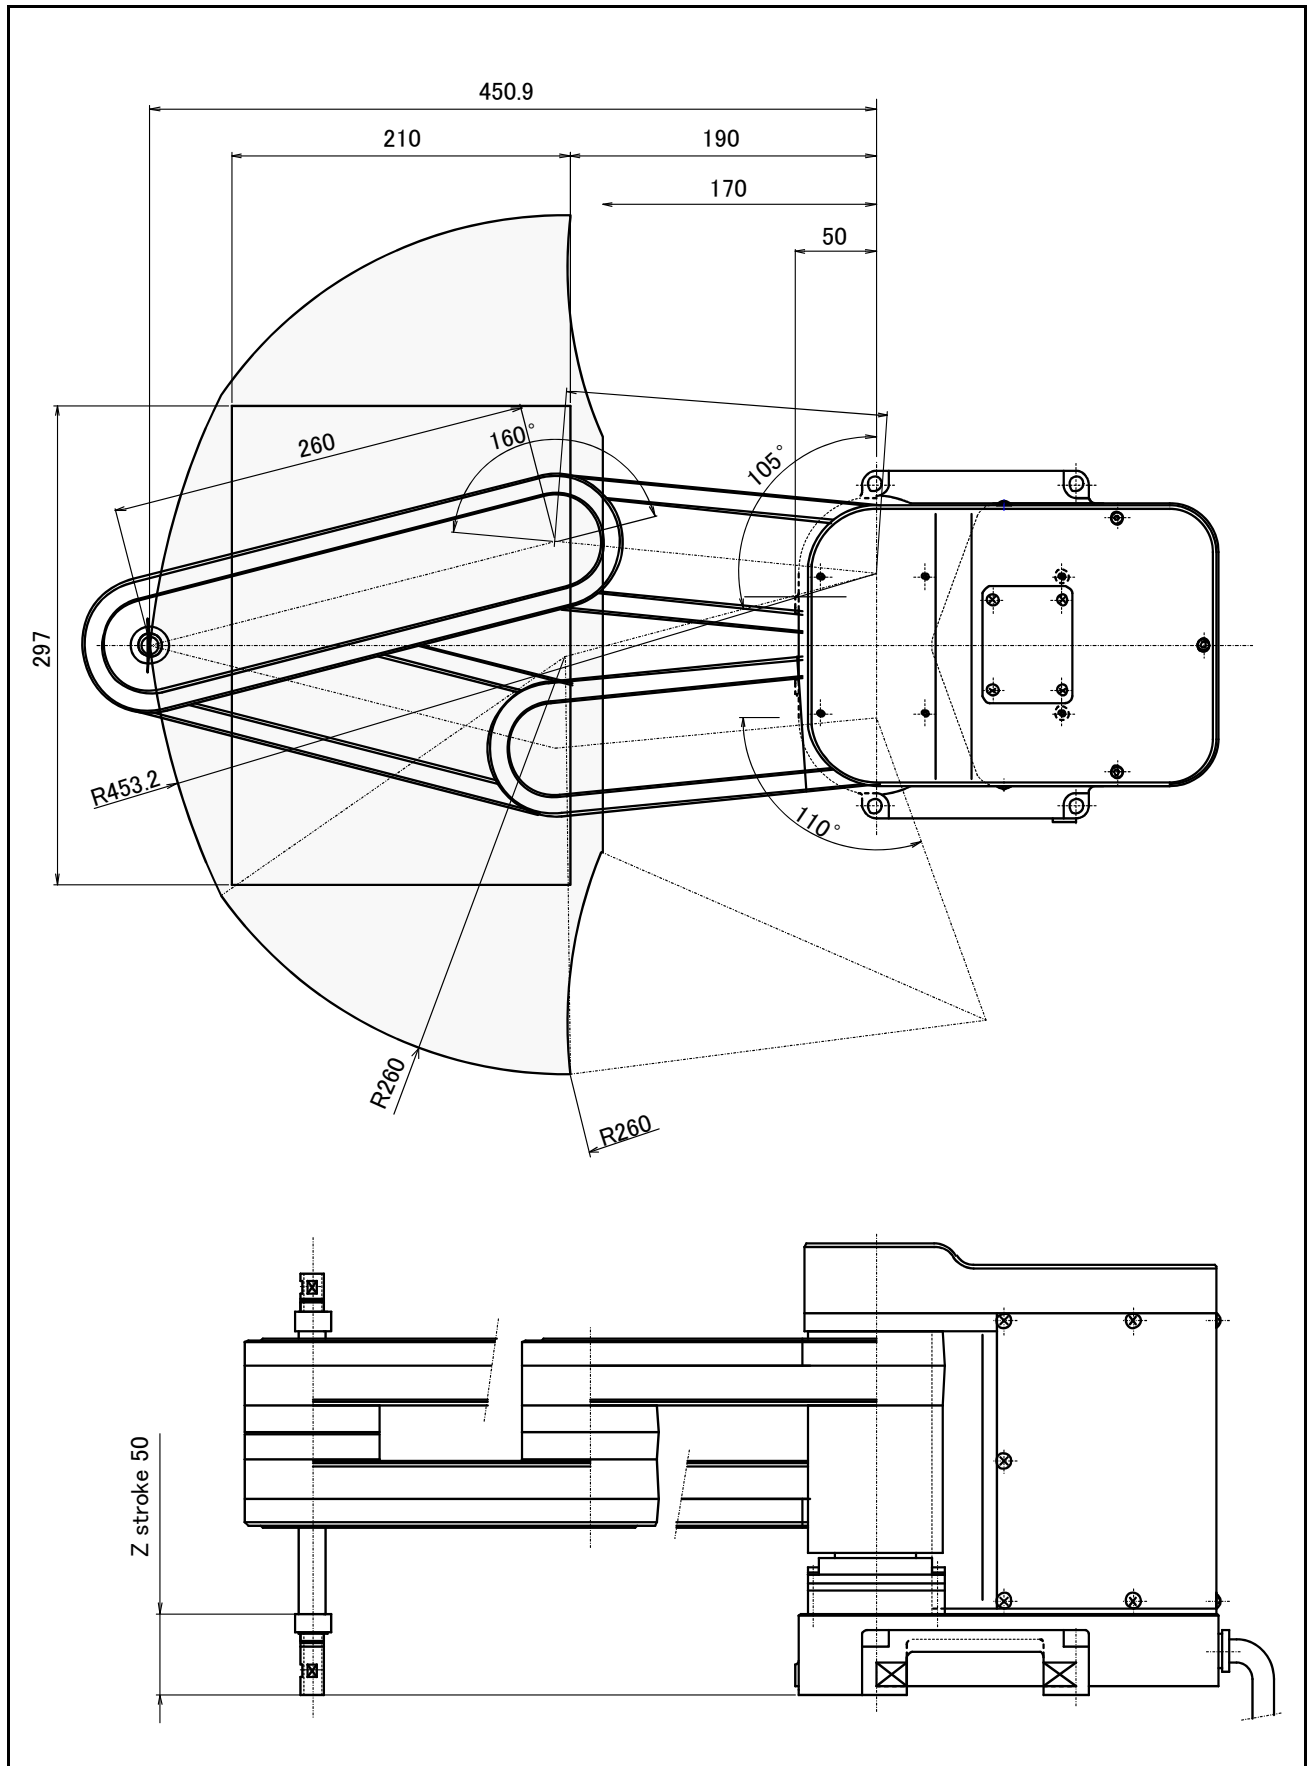



Fig.2-11 : Operating range diagram (RP-5AH/5AHC-SB)

2.5 Tooling

2.5.1 Wiring and piping for hand

The wiring and piping for hand is shown below. Same as RP-1AH/1AHC-SB/3AH/3AHC-SB/5AH/5AHC-SB.

(1) Control with pneumatic hand interface (2A-RZ365/2A-RZ375: Option)

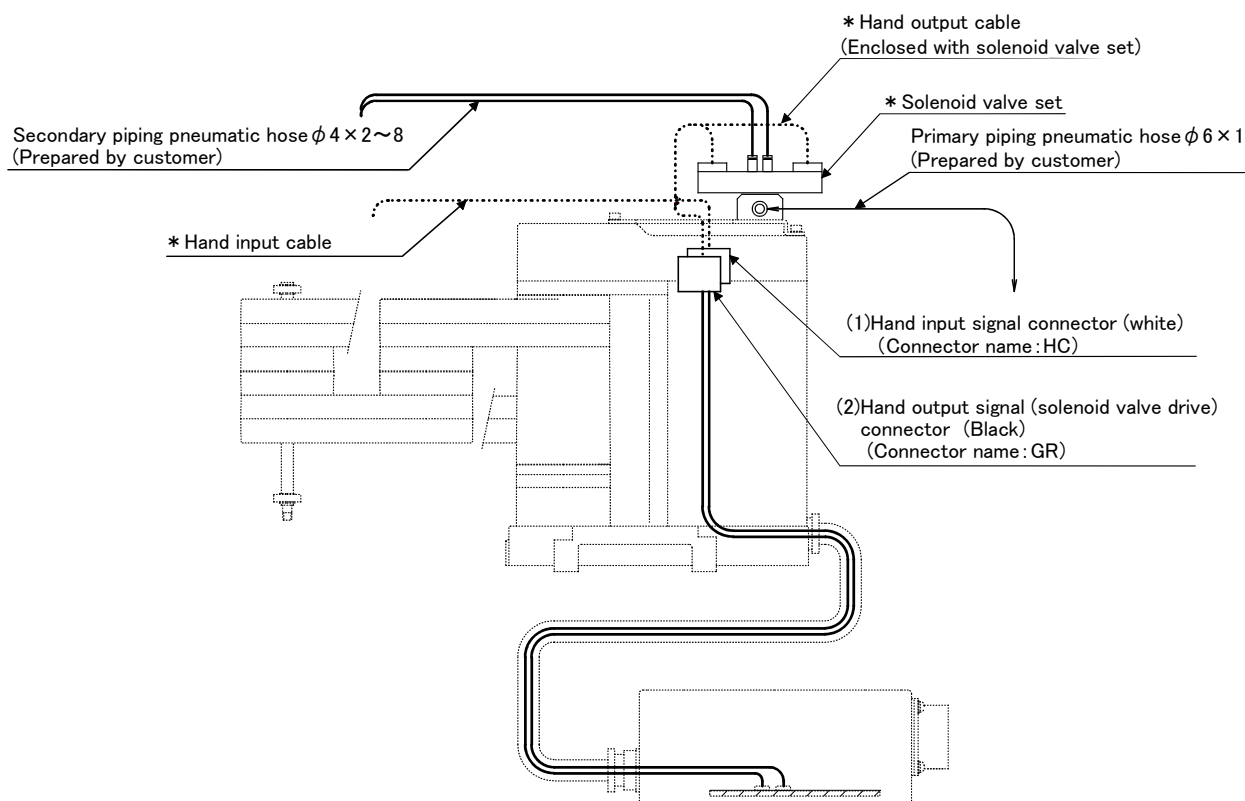

(1) Hand input signal connector layout specifications(HC) (2) Hand output signal connector layout specifications(GR)

Sink type and
Source type are common

- 10:0V(COM)
- 9:+24V
- 8:HC8
- 7:HC7
- 6:HC6
- 5:HC5
- 4:HC4
- 3:HC3
- 2:HC2
- 1:HC1

Sink
type Source
type

- 9:24V 9:24G
- 8:GR8 8:GR8
- 7:GR7 7:GR7
- 6:GR6 6:GR6
- 5:GR5 5:GR5
- 4:GR4 4:GR4
- 3:GR3 3:GR3
- 2:GR2 2:GR2
- 1:GR1 1:GR1

Note) When using the hand output signal, it is necessary to use the optional pneumatic hand interface (2A-RZ365/2A-RZ375).

(3) Hand input/output signal connector form

Hand Input/Output	Robot side	Manufacturer	Counter side (customer-prepared)	Manufacturer
	Type		Type	
For hand input	SMP-10V-NC	JST	SMR-10V-N	JST
	BHF-001GI-0.8BS	JST	BYM-001T-0.6	JST
For hand output	SMP-09V-BC	JST	SMR-09V-B	JST
	BHF-001GI-0.8BS	JST	BYM-001T-0.6	JST


Note) Parts indicated with an * are options.

* Refer to the [Page 55, "\(2\) Pneumatic hand interface"](#) for the electrical specifications of output signal.

* Refer to the [Page 46, "3.7 Parallel input/output unit"](#) for the electrical specifications of input output signal.

Fig.2-12 : Wiring and piping for hand (Pneumatic hand interface)

(2) Control with parallel I/O unit (2A-RZ361/2A-RZ371: Standard, or expansion)

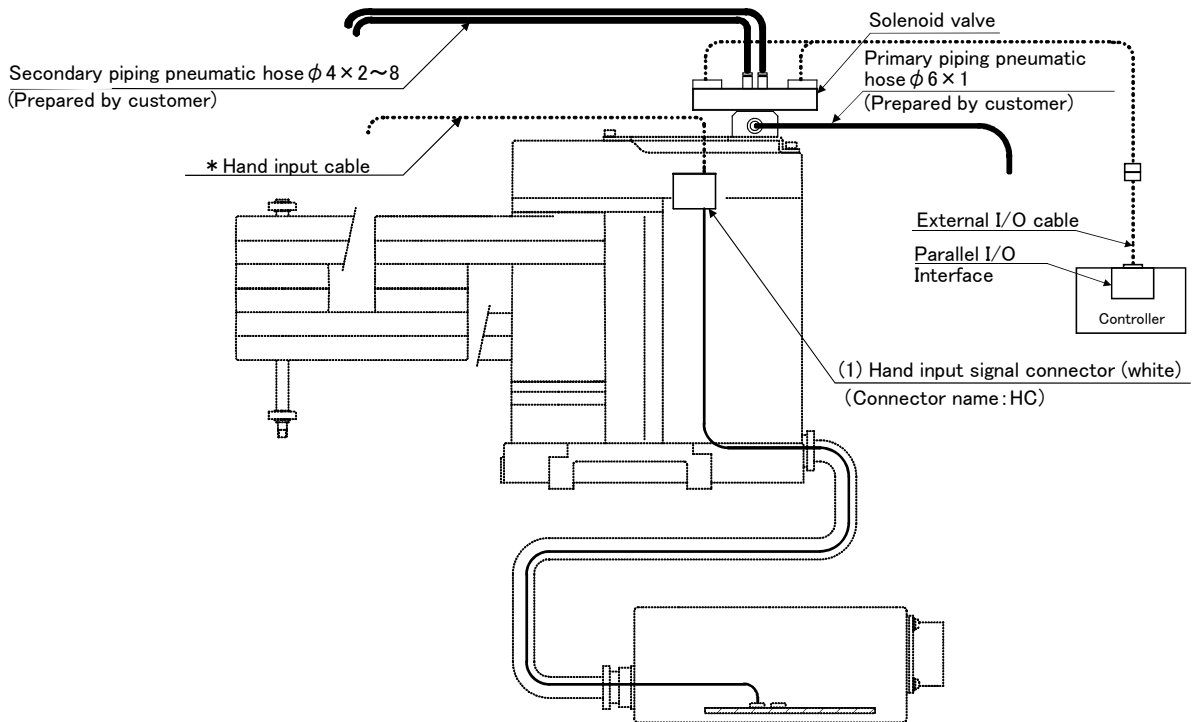

(1) Hand input signal connector layout specifications(HC)

Sink type and
Source type are common

- 10:0V(COM)
- 9:+24V
- 8:HC8
- 7:HC7
- 6:HC6
- 5:HC5
- 4:HC4
- 3:HC3
- 2:HC2
- 1:HC1

(2) Hand input signal connector form

Hand Input/Output	Robot side	Manufacturer	Counter side (customer-prepared)	Manufacturer
	Type		Type	
For hand input	SMP-10V-NC	JST	SMR-10V-N	JST
	BHF-001GI-0.8BS	JST	BYM-001T-0.6	JST

Note) Parts indicated with an * are options.

* Refer to the [Page 46, "3.7 Parallel input/output unit"](#) for the electrical specifications of input output signal.

Fig.2-13 : Wiring and piping for hand (Parallel I/O interface)

2.5.2 Pneumatic piping in robot

- (1) Piping to supply air to the solenoid valves is not provided in the robot, so directly connect the primary piping from the air supply source to the solenoid valve. (The primary pneumatic hose must be prepared by the customer.)
- (2) The wrist section coupled axis is hollow, so air can be supplied to the end of the hand with the secondary piping from the solenoid valve. (The secondary pneumatic hose and coupled axis section coupling must be prepared by the customer.)
- (3) Up to four rows of solenoid valve sets (option) can be installed on the top of the robot arm.

2.5.3 Wiring of pneumatic hand output cable in robot

- (1) The pneumatic hand output cable can be used by installing the optional pneumatic hand interface on the controller.
- (2) The hand output cable is wired from the connector PCB in the connector box to the top of the arm. The end is bridged to the connector. (Connector name: "GR")

2.5.4 Wiring of hand check input cable in robot

- (1) The hand check input cable is wired from the connector PCB in the connector box to the top of the arm. The end is bridged to the connector. (Connector name: "HC")

Table 2-4 : Wiring and piping for hand

No.	Parts name	Qty.	Robot side (Robot arm side)	Counter side (customer-prepared)	Manufacturer
(1)	Connector	1	SMP-10V-NC	SMR-10V-N	Japan solderless terminal MFG. Co.,LTD
(2)	Connector	1	SMP-09V-BC	SMR-09V-B	Japan solderless terminal MFG. Co.,LTD

2.5.5 Wiring and piping system diagram for hand

Shows the wiring and piping configuration for a standard-equipped hand.

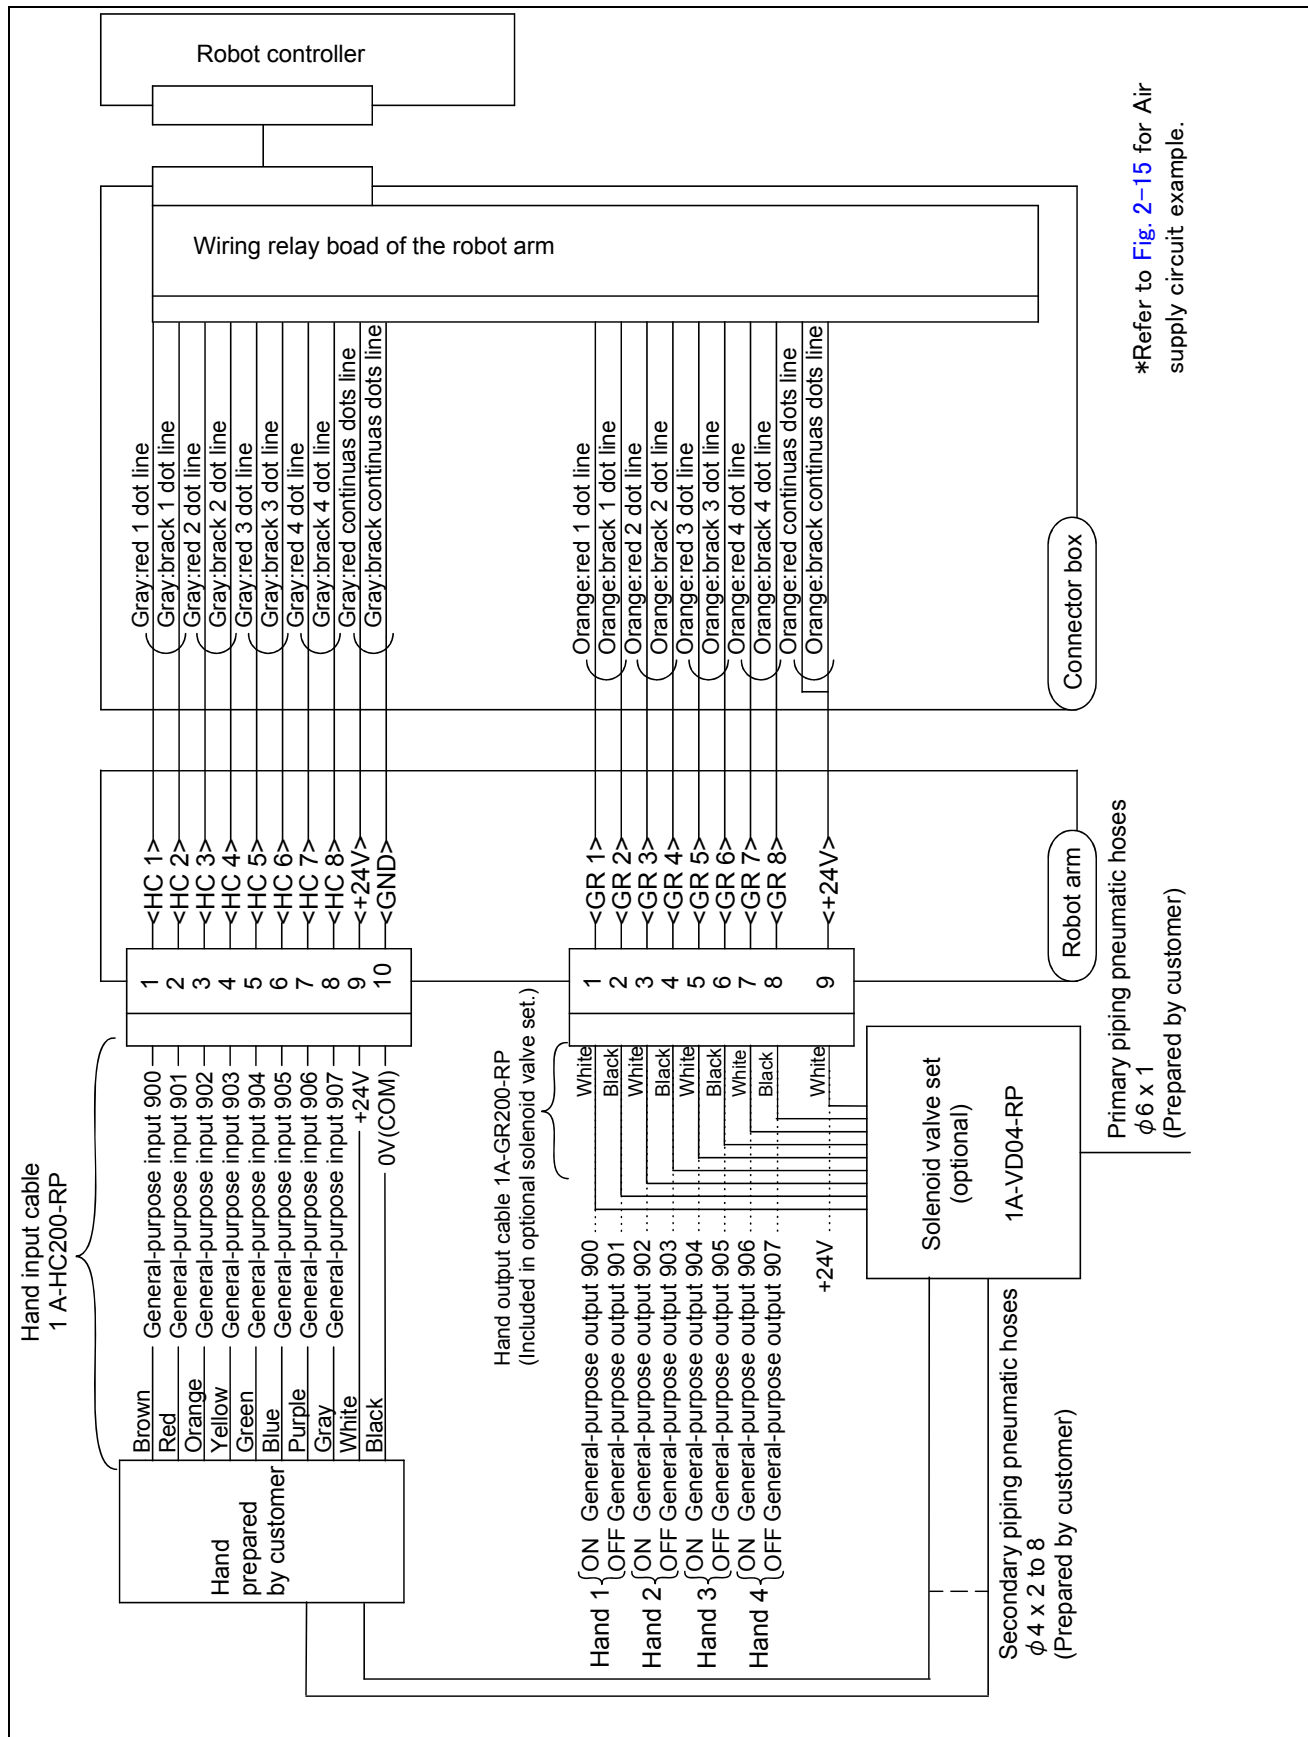


Fig.2-14 : Wiring and piping system diagram for hand and example the solenoid valve installation

2.5.6 Electrical specifications of hand input/output

Table 2-5 : Electrical specifications of input circuit

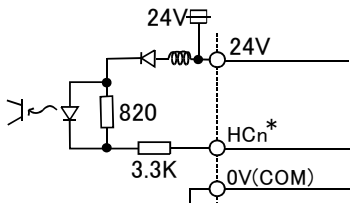
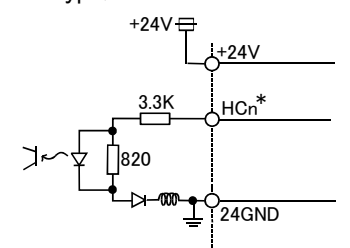
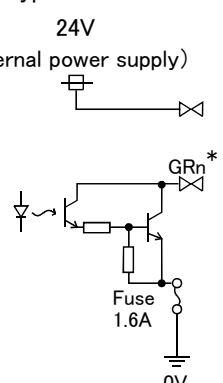
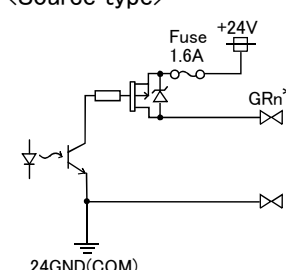
Item		Specifications	Internal circuit
Type		DC input	<p><Sink type></p>  <p><Source type></p>  <p>* HCn = HC1 ~ HC8</p>
No. of input points		8	
Insulation method		Photo-coupler insulation	
Rated input voltage		12VDC/24VDC	
Rated input current		Approx. 3mA/approx. 7mA	
Working voltage range		DC10.2 to 26.4V(ripple rate within 5%)	
ON voltage/ON current		8VDC or more/2mA or more	
OFF voltage/OFF current		4VDC or less/1mA or less	
Input resistance		Approx. 3.3kΩ	
Response time	OFF-ON	10ms or less(DC24V)	
	ON-OFF	10ms or less(DC24V)	

Table 2-6 : Electrical specifications of output circuit

Item		Specification	Internal circuit
Type		Transistor output	<p><Sink type></p> <p>24V (Internal power supply)</p>  <p><Source type></p>  <p>* GRn = GR1 ~ GR8</p>
No. of output points		8	
Insulation method		Photo coupler insulation	
Rated load voltage		DC24V	
Rated load voltage range		DC21.6 to 26.4VDC	
Max. current load		0.1A/ 1 point (100%)	
Current leak with power OFF		0.1mA or less	
Maximum voltage drop with power ON		DC0.9V(TYP.)	
Response time	OFF-ON	2ms or less (hardware response time)	
	ON-OFF	2 ms or less (resistance load) (hardware response time)	
Fuse rating		1.6A (each one common) Cannot be exchanged	

Note) An optional air hand interface (2A-RZ365/RZ375) is required to use hand output.

2.5.7 Air supply circuit example for the hand

Fig. 2-15 shows an example of pneumatic supply circuitry for the hand.

- (1) Place diodes parallel to the solenoid coil.
- (2) When the factory pneumatic pressure drops, as a result of the hand clamp strength weakening, there can be damage to the work. To prevent it, install a pressure switch to the source of the air as shown in Fig. 2-15 and use the circuit described so that the robot stops when pressure drops. Use a hand with a spring-pressure clamp, or a mechanical lock-type hand, that can be used in cases where the pressure switch becomes damaged.
- (3) Supply clean air to the vacuum generation valve when you use clean type robot.

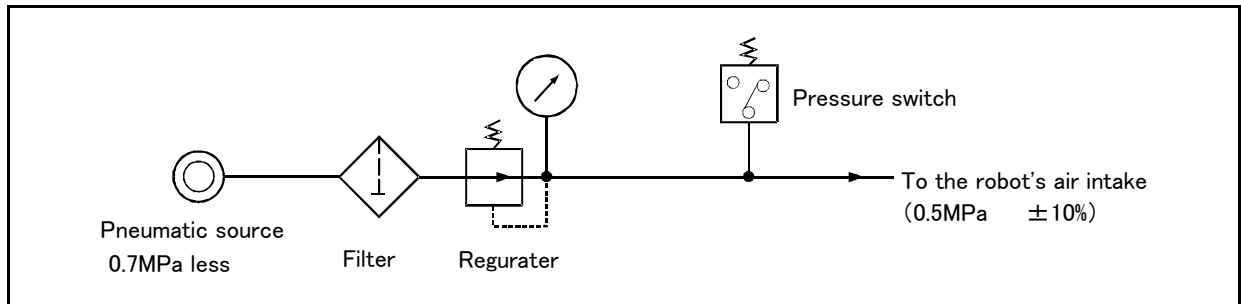


Fig.2-15 : Air supply circuit example for the hand

2.6 Shippng special specifications, options,and maintenance parts

2.6.1 Shipping special specifications

■ What are shipping special specifications?

Shipping special specifications refer to specifications of standard configuration equipment that are changed at the time of shipment from the factory. Consequently, customer need to confirm the delivery date.

To make changes to the specifications after shipment, service work must be performed at the work site or the robot must be returned for service.

■ How to order

- (1) Confirm beforehand when the special factory specifications can be shipped, because they may not be immediately available.
- (2) Order before the factory shipping date.
- (3) Specified method Specify the part name, type, and robot arm type.

(1) Machine cable extension

- Order type :
- Fixed type(10m) 1A-10CBL-1
 - Fixed type(15m) 1A-15CBL-1
 - Flexed type 1A-05LCBL-1
 - Flexed type 1A-10LCBL-1
 - Flexed type 1A-15LCBL-1

■ Outline



This cable is exchanged with the standard machine cable (5m) accessory to extend the distance between the controller and connector box enclosed with the robot arm. A fixed type and flexible type are available.

Exchanges after shipment will be charged (for packaging, shipping costs).

The fixing and flexible types are both configured of the motor signal cable and motor power cable .

[Note] The cable length between robot arm and connector box doesn't change.

■ Configuration

Table 2-7 : Configuration equipments and types

Part name		Type	Qty.		Mass(kg) Note1)	Remarks
			Fixed	Flexed		
Fixed	Set of signal and power cables	1A- □□ CBL-1	1 set	—	7.0(10m) 10.0(15m)	10m, or 15m each
	Motor signal cable (for fixed type)	1E- □□ CBL(S)-N	1 cable	—		
	Motor power cable (for fixed type)	1A- □□ CBL(P)-1	1 cable	—		
Flexed	Set of signal and power cables	1A- □□ LCBL-1	1 set	—	5.7(5m) 10.1(10m) 14.2(15m)	5m, 10m, or 15m each
	Motor signal cable (for flexed type)	1E- □□ LCBL(S)-N	—	1 cable		
	Motor power cable (for flexed type)	1A- □□ LCBL(P)-1	—	1 cable		
	Nylon clamp	NK-18N	—	2 pcs.	—	
	Nylon clamp	NK-14N	—	2 pcs.	—	
	Silicon rubber		—	4 pcs.	—	

Note1) Mass indicates one set.

Note) The numbers in the boxes □□ refer the length.

■ Specifications

The specifications for the fixed type cables are the same as those for standard cables.

Table 2-8 conditions for the flexed type cables.

Table 2-8 : Conditions for the flexed type cables

Item		Specifications
Minimum flexed radius		100R or more
Cable bare, etc., occupation rate		50% or less
Maximum movement speed		2000mm/s or less
Warranty life (no.)		7.5 million times
Environmental proof		Oil-proof specification sheath (for silicon grease, cable sliding lubricant type)
Cable configuration	Motor power cable	φ 6.5 x 10
	Motor signal cable	φ 7 x 6 and φ 1.7 x 1

[Caution] The warranty life may greatly differ according to the usage state (items related to Table 2-8 and to the amount of silicon grease applied in the cable conduit).

[Caution] This option can be installed on clean-type, but its cleanliness is not under warranty.

■ Cable configuration

The configuration of the flexed cable is shown in [Table 2-9](#). Refer to this table when selecting the cable bare.

Table 2-9 : Cable configuration

Item	Motor signal cable 1E- □□ LCBL(S)-N		Motor power cable 1A- □□ LCBL(P)-1
	AWG#24(0.2mm ²) -4P	AWG#18(0.75mm ²)	AWG#18(0.75mm ²) -3C
No.of cores			
Finish dimensions	Approx. ϕ 7mm	Approx. ϕ 1.7mm	Approx. ϕ 6.5mm
No.of cables used	6 cables	1 cable	10 cables

Note) The square in the cable name indicates the cable length.

2.7 Options

■ What are options?


There are a variety of options for the robot designed to make the setting up process easier for user needs. User installation is required for the options. Options come in two types: "set options" and "single options".

1. Set options.....A combination of single options and parts that together, form a set for serving some purpose.
2. Single options.....That are configured from the fewest number of required units of a part. Please choose user's purpose additionally.

(1) Solenoid valve set

- Order type : 4 sets : 1A-VD04-RP(Sink type)
1A-VD04E-RP(Source type)

■ Outline

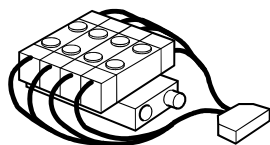

This is a solenoid valve option used for controlling various tooling that is installed, such as the hand on the arm end. This solenoid valve set has a hand output cable connected to the solenoid valve. A manifold, coupling and silencer, etc., are assembled to make installation onto the robot arm easier.

This option is installed on the top of the robot arm.

When using the robot arm's hand output signal, the pneumatic hand interface option must be installed on the separate controller.

■ Configuration

Table 2-10 : Configuration equipment

Part name	Type	Qty.		Mass(kg) Note1)	Remarks
		Sink	Source		
Solenoid valve set (4 sets)	1A-VD04-RP	1pc.	–	0.2	Solenoid valve installation screw (M4 x 10) :4 screw
	1A-VD04E-RP	–	1pc.	0.2	

Note1)Mass indicates one set.

■ Specifications

Table 2-11 : Valve specifications

Item	Specifications
Number of positions	2
Port	5
Valve function	Double solenoid
Operating fluid	Clean air
Operating method	Pilot type
Effective sectional area (CV value)	1.5mm (0.08)
Oilling	Unlubricated oil
Operating pressure range	0.2 ~ 0.7MPa
Guaranteed proof pressure	1.0MPa
Response time	12msec or less (DC24V)
Max. operating frequency	5c/s
Ambient temperature	5 ~ 50 deg.

Table 2-12 : Solenoid specifications

Item	Specifications
Method	Built-in fly-wheel diodes with surge protection
Operation voltage	DC24V \pm 10%
Current value	40mA
Insulation	B type
Insulation resistance	100 Ω or more
Surge protection	Fly-wheel diode


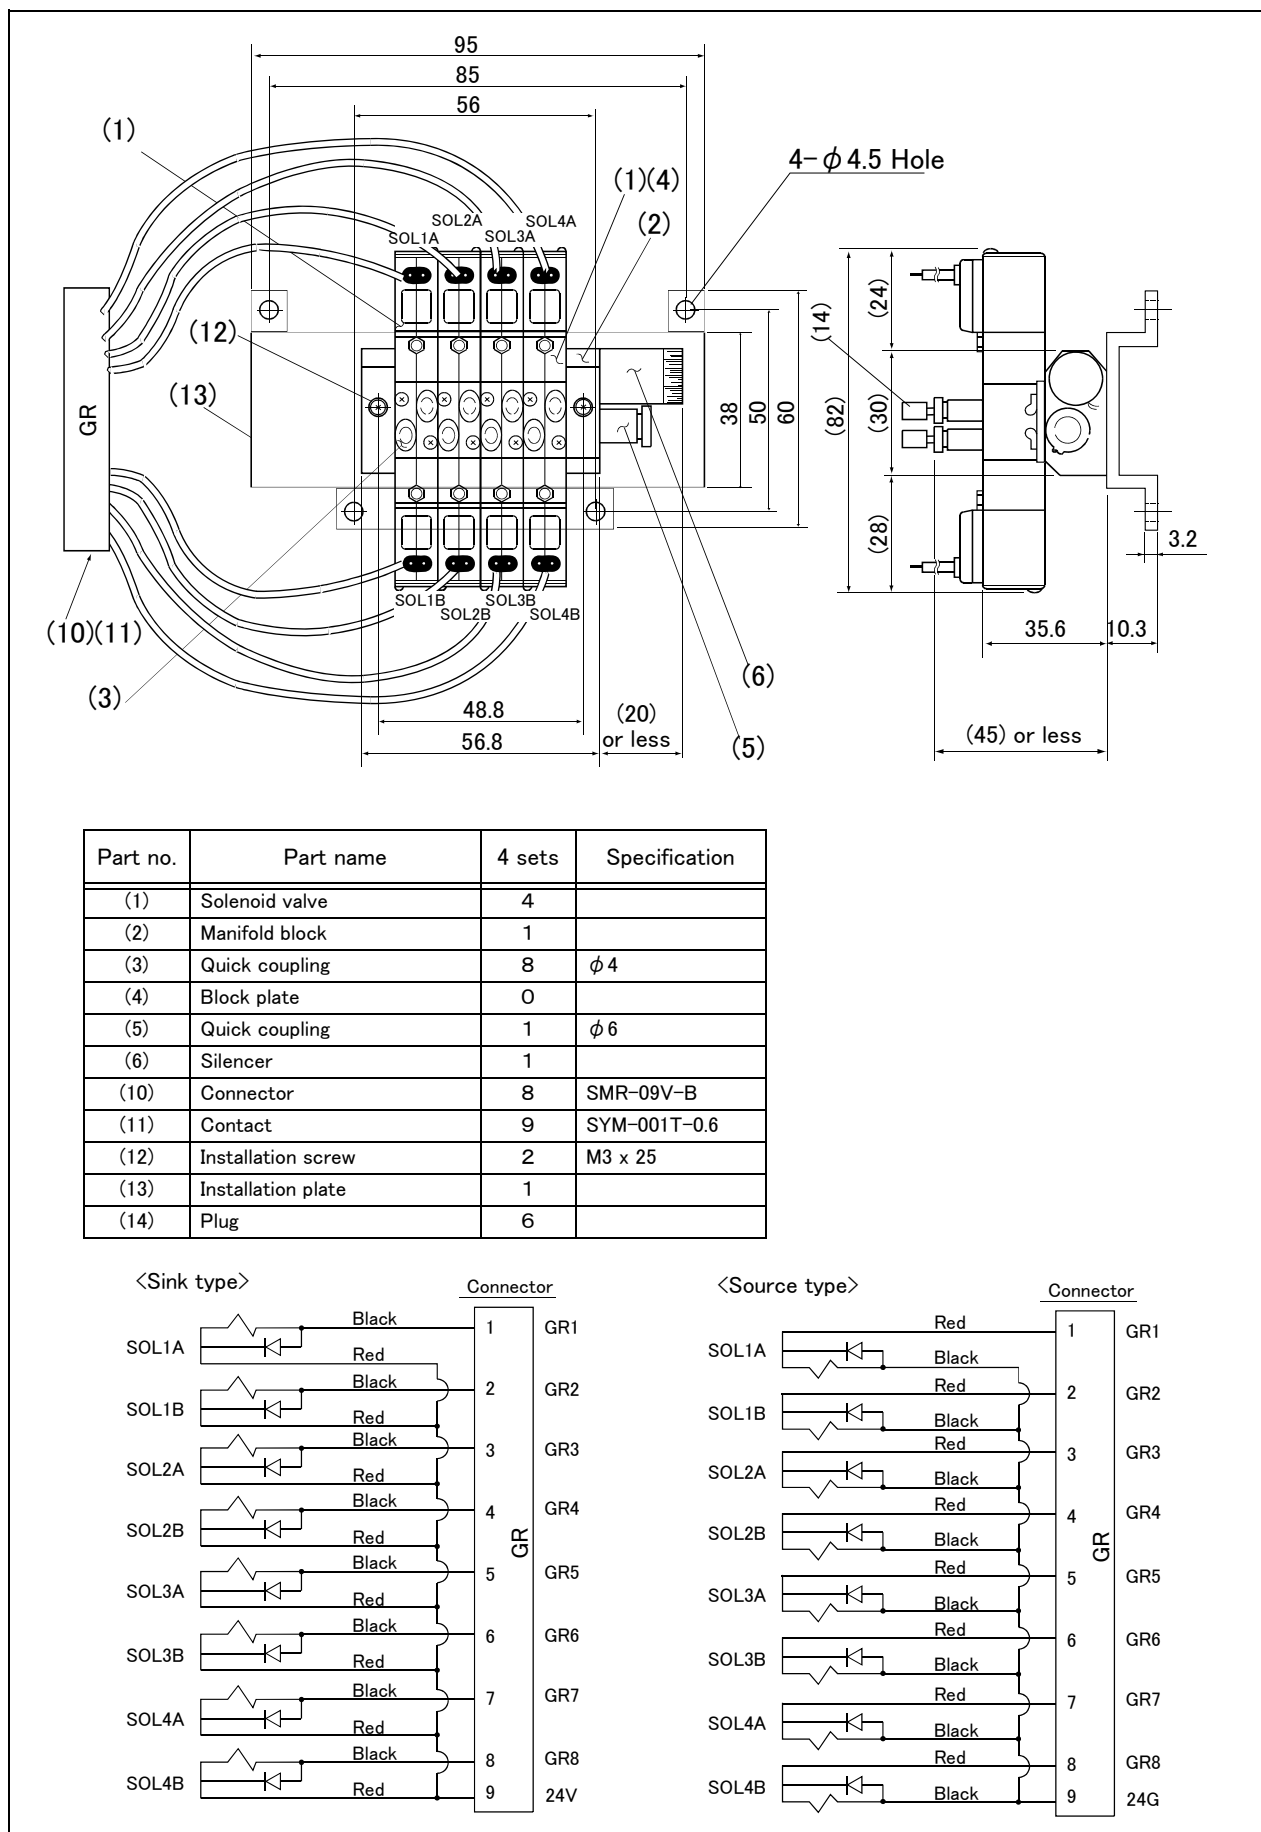


Fig.2-16 : Solenoid valve outline dimensional drawing

(2) Hand input cable

■ Order type : 1A-HC200-RP

■ Outline

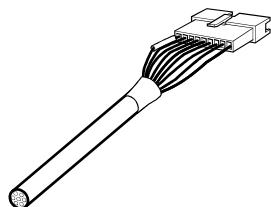

This cable is used when the customer is designing the pneumatic hand. It is used to retrieve the hand open/close confirmation signal or grasp confirmation signal to the controller.

One end can be connected to the hand signal input connector on the top of the robot arm. The other end is connected to the sensor in the hand designed by the customer. A flexible cable is used.

■ Configuration

Table 2-13 : Configuration equipment

Part name	Type	Qty.	Mass(kg) ^{Note1)}	Remarks
Hand input cable	1A-HC200-RP	1 cable	0.1	

Note1) Mass indicates one set.

■ Specifications

Table 2-14 : Specifications

Item	Specification	Remarks
Cable core	AWG#24(0.2mm ²) x 2 core x 5 sets	One side connector and one side cable connection
Total length	2000mm	

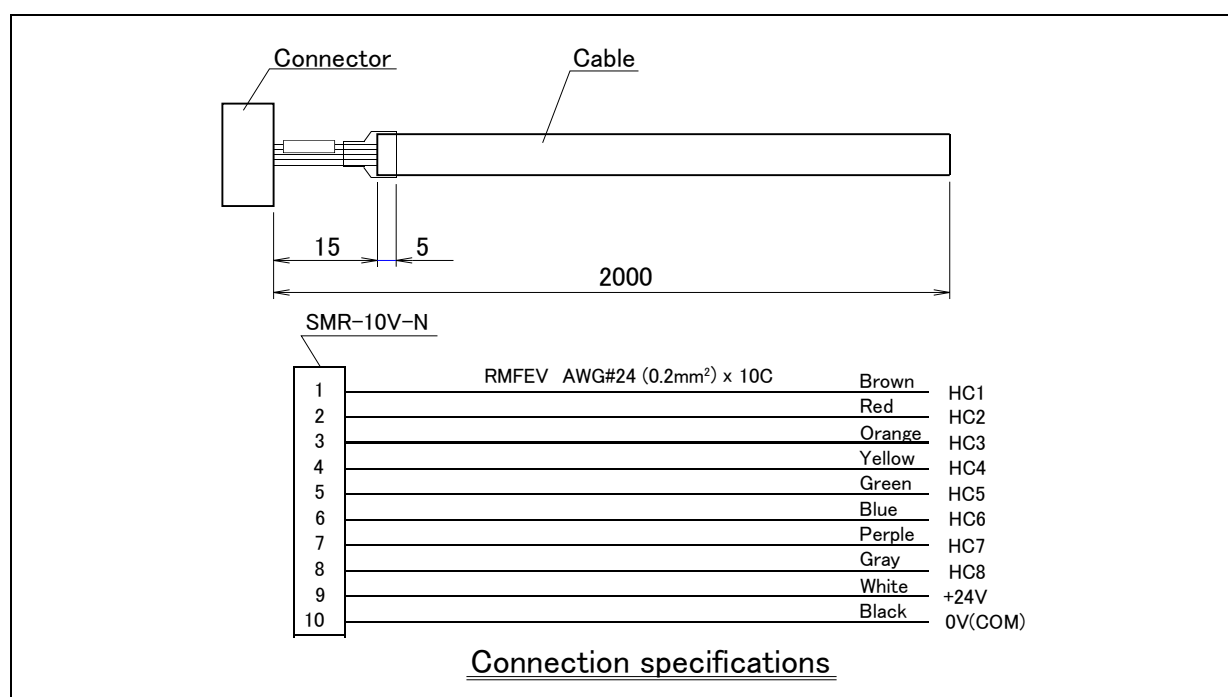



Fig.2-17 : Outline and pin assignment

[Caution] This option can be installed on clean-type, but its cleanliness is not under warranty.

(3) Hand output cable

■ Order type : 1A-GR200-RP

■ Outline

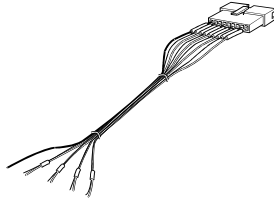

This cable is used when the customer is using a solenoid valve other than the optional solenoid valve set.

One end has a connector connected to the input terminal in the robot arm. The other end is a cable bridge.

A flexible cable is used.

When using the robot arm's hand output signal, the pneumatic hand interface option must be installed on the separate controller.

■ Configuration

Table 2-15 : Configuration equipment

Part name	Type	Qty.	Mass(kg) ^{Note1)}	Remarks
Hand output cable	1A-GR200-RP	1 cable	0.1	

Note1) Mass indicates one set.

■ Specifications

Table 2-16 : Specifications

Item	Specification	Remarks
Cable core	AWG#24(0.2mm ²) x 2core x 5 sets	One side connector and one side cable connection
Total length	2000mm	

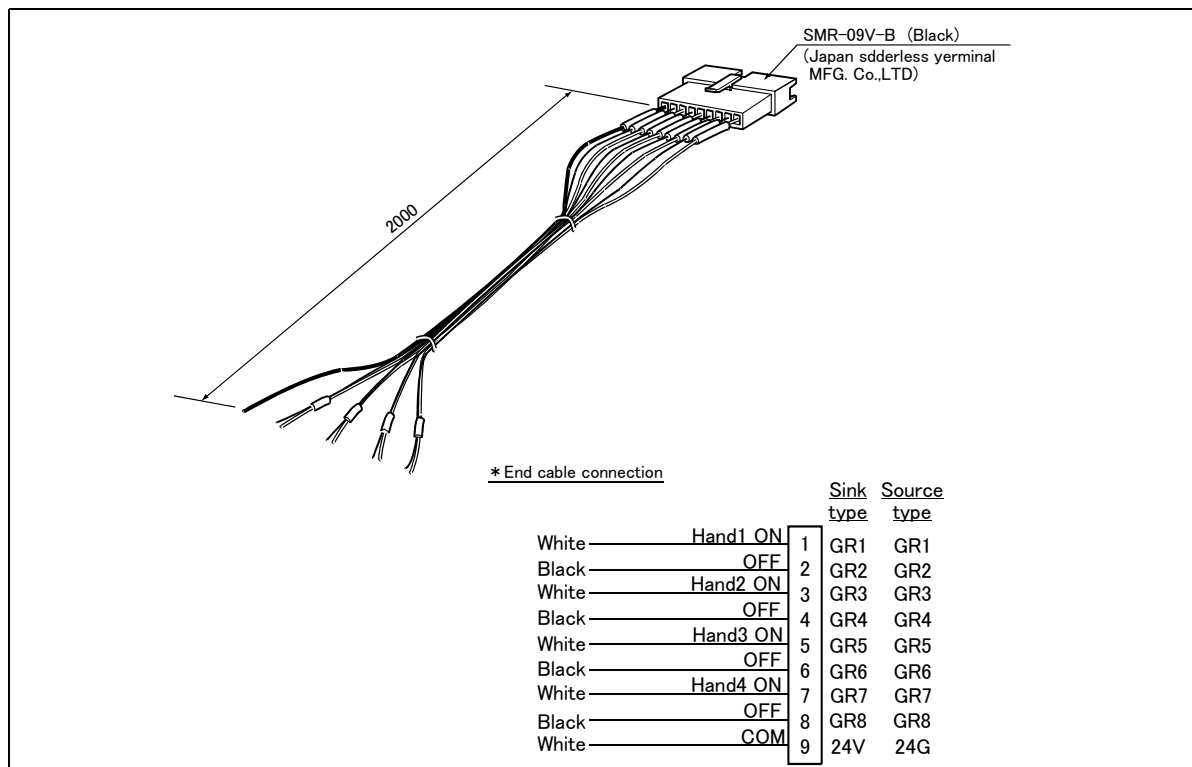


Fig.2-18 : Outline and pin assignment

2.8 Maintenance parts

The consumable parts used in the robot arm are shown in [Table 2-17](#). Purchase these parts from your dealer when required. Some Mitsubishi-designated parts differ from the maker's standard parts. Thus, confirm the part name, robot arm and controller serial No. and purchase the parts from your dealer .

Table 2-17 : Consumable part list(RP-1AH/1AHC-SB/3AH/3AHC-SB/5AH/5AHC-SB)

No.	Part name	Type	Qty.	Usage place	Supplier
1	Lithium battery	A6BAT	3	Connector box	Mitsubishi Electric
2	Grrase	Harmonic grease 4 BNo.2	As needed	Reduction gears of J1,J2 axis	
3		Marutenpu PS No.2		Ball screw spline	

3 Controller

3.1 Standard specifications

3.1.1 Standard specifications

Table 3-1 : Standard specifications of controller

Item		Unit	Specification	Remarks
Type			CR1-571	
Number of control axis			Simultaneously 4	
CPU			64 bit RISC, and DSP	
Memory capacity	Programmed positions and No. of steps	point step	2,500 5,000	
	Number of programs		88	
Robot language			MELFA-BASIC IV or MOVEMASTER COMMAND	
Teaching method			Pose teaching method ,MDI method	
External input and output	Input and output	point	16/16	Max. 240/240 ^{Note1)}
	Dedicated input/output	point	Assigned with general-purpose input/output	"STOP" 1 point is fixed
	Hand open/close input/output	point	Input 8 point/Output 0 point	Up to 8 output points can be added as an option ^{Note2)}
	Emergency stop input	point	1	Single emergency line
	Door switch input	point	1	Single door switch line
Interface	Emergency stop output	point	1	Single emergency line
	RS-232C	port	1	For expansion such as the personal computer, Vision sensor
	RS-422	port	1	Dedicated for T/B
	Hand dedicated slot	slot	1	Dedicated for pneumatic hand interface
	Expansion slot	slot	0	3 slot expansion is possible when using expansion option box.
	Robot input/output link	channel	1	Used for general-purpose input/output (Max. 240/240)
Power source	Input voltage range	V	1-phase, AC90 to132 1-phase, AC180 to 253	^{Note3)}
	Power capacity	KVA	0.7	Does not include rush current ^{Note4)}
Outline dimensions		mm	212(W)x290(D)x151(H)	Excluding protrusions
Mass		kg	Approx. 8	
Construction			Self-contained floor type , Opened type	IP20 ^{Note5)}
Operating temperature range		deg.	0 to 40	
Ambient humidity		%RH	45 to 85	Without dew drops
Grounding		Ω	100 or less	D class grounding earth ^{Note6)}
Paint color			Light gray	Munsell 0.08GY7.64/0.81

Note1) It is the value when seven maximums expand (224/224) the Parallel I/O unit.
(2A-RZ361 or 2A-RZ371:Input 32 points / Output 32 points.)

Note2)It is when an pneumatic hand interface (2A-RZ365 or 2A-RZ375) is installed.

Note3) 1-phase,AC180 to 253. This specification is changed for CE-Marking model.

Note4) The power capacity (0.7kVA) is the maximum rating value for normal operation. The power capacity does not include the rush current when the power is turned ON. The power capacity is a guideline and the actual operation is affected by the input power voltage. The power consumption in the specific operation pattern with the RP-1AH is approx. 0.5kw.

Note5) The controller (CR1-571) of this robot is a general environment specification. (Refer to) When the controller is used with many dust or oil-mist environment, install the controller into the board prepared by customer to protect the controller from the dust, oil-mist, etc. Install the controller in the place not to influence the cleanliness if using with clean environment. (Refer to [Page 8](#), "2.2.3 Clean specifications".)

Note6) The robot must be grounded by the customer.

3.1.2 Protection specifications and operating supply

A protection method complying with the IEC Standard IP20(Opened type) is adopted for the controller.

The IEC IP symbols refer only to the degree of protection between the solid and the fluids, and don't indicated that any special protection has been constructed for the prevention against oil and water.

- The IEC IP20

It indicates the protective structure that prevents an iron ball $12^{+0.05}_0$ mm diameter, which is being pressed with the power of $3.1 \text{ kg} \pm 10\%$, from going through the opening in the outer sheath of the supplied equipment.

Refer to the section [Page 96, "5.2 Working environment"](#) for details on the working environment.

3.2 Names of each part

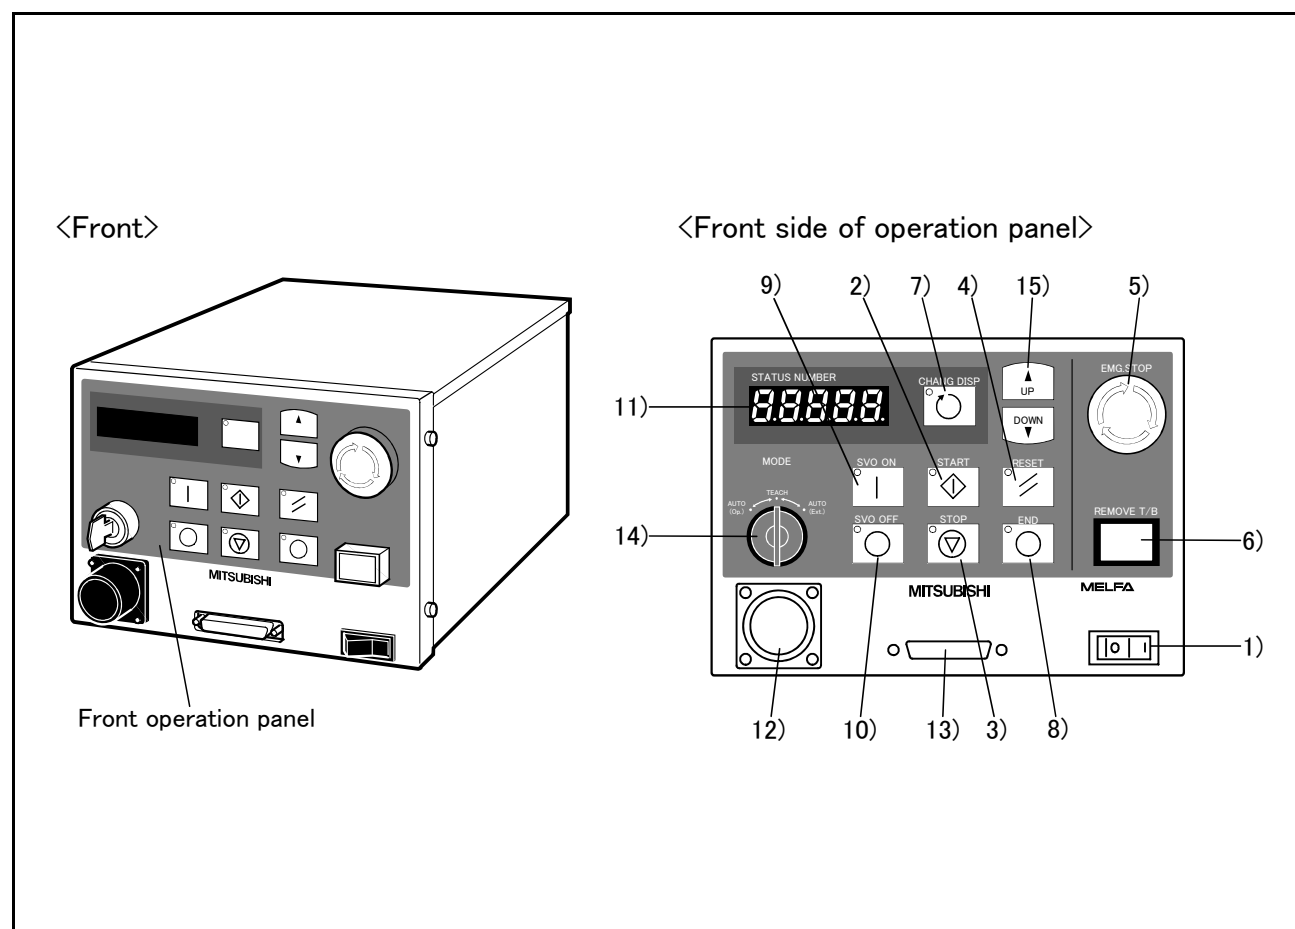


Fig.3-1 : Names of controller parts

- 1) POWER switch..... This turns the control power ON/OFF.
- 2) START button..... This executes the program and operates the robot. The program is run continuously.
- 3) STOP button..... This stops the robot immediately. The servo does not turn OFF.
- 4) RESET button..... This resets the error. This also resets the program's halted state and resets the program.
- 5) Emergency stop switch..... This stops the robot in an emergency state. The servo turns OFF.
- 6) T/B remove switch..... This is used to connect/disconnect the T/B without turning OFF the controller's control power.
- 7) CHNGDISP button..... This changes the details displayed on the display panel in the order of "Override" → "Program No." → "Line No.".
- 8) END button..... This stops the program being executed at the last line or END statement.
- 9) SVO.ON button..... This turns ON the servo power. (The servo turns ON.)
- 10) SVO.OFF button..... This turns OFF the servo power. (The servo turns OFF.)
- 11) STATUS NUMBER (display panel)..... The alarm No., program No., override value (%), etc., are displayed.
- 12) T/B connection connector..... This is a dedicated connector for connecting the T/B.
- 13) Personal computer connection connector..... This is an RS-232C specification connector for connecting the personal computer.
- 14) MODE key switch..... This changes the robot's operation mode. ^{Note)}
 - AUTO (Op.)..... Only operations from the controller are valid. Operations for which the operation mode must be at the external device or T/B are not possible.
 - TEACH..... When the T/B is valid, only operations from the T/B are valid. Operations for which the operation mode must be at the external device or controller are not possible.
 - AUTO (Ext.)..... Only operations from the external device are valid. Operations for which the operation mode must be at the T/B or controller are not possible.
- 15) UP/DOWN button..... This scrolls up or down the details displayed on the "STATUS. NUMBER" display panel.



CAUTION

Note) The servo will turn OFF when the controller's [MODE] switch is changed.
Note that axes not provided with brakes could drop with their own weight.

Carry out the following operations to prevent the servo from turning OFF when the [MODE] switch is changed.

The servo on status can be maintained by changing the mode with keeping pressing lightly the deadman switch of T/B. The operating method is shown below.

■ When the mode is changed from TEACH to AUTO.

- 1) While holding down the deadman switch on the T/B, set the [ENABLE/DISABLE] switch to "DISABLE".
- 2) While holding down the deadman switch on the T/B, set the controller [MODE] switch to "AUTO".
- 3) Release the T/B deadman switch.

■ When the mode is changed from AUTO to TEACH.

- 1) While the [ENABLE/DISABLE] switch on the T/B is "DISABLE", hold down the deadman switch.
- 2) While holding down the deadman switch on the T/B, set the controller [MODE] switch to "TEACH".
- 3) While holding down the deadman switch on the T/B, set the [ENABLE/DISABLE] switch to "ENABLE", then do the operation of T/B that you wish.

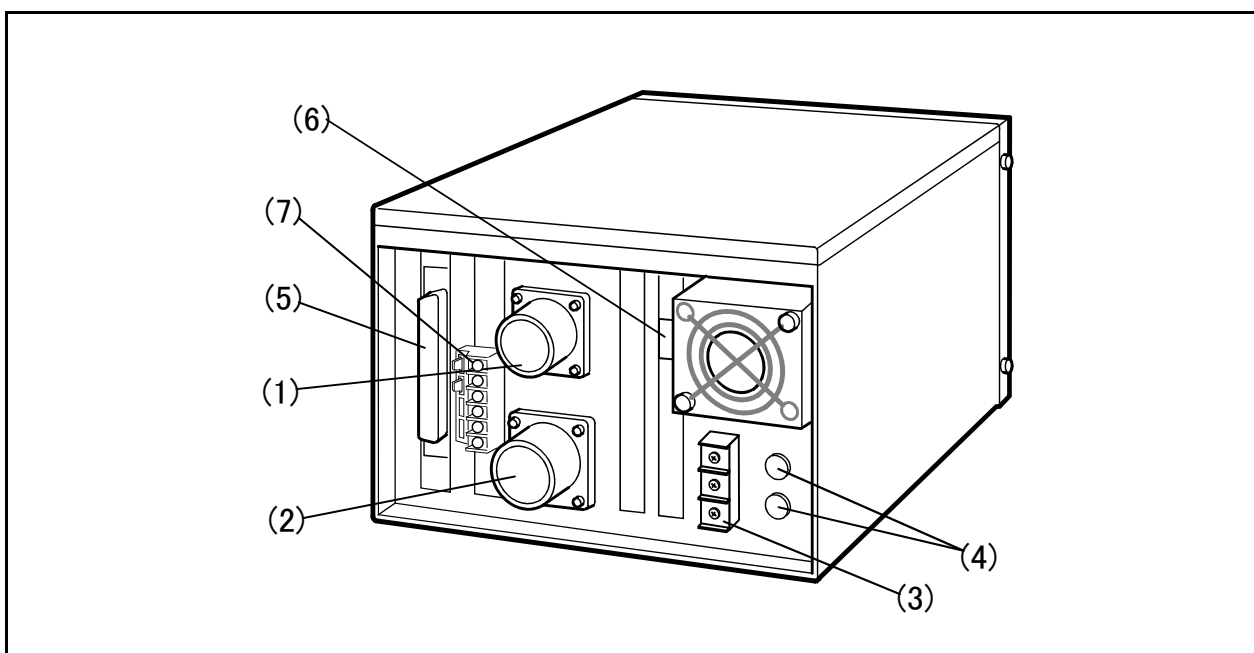


Fig.3-2 : Names of each controller part (Rear side)

- 1) Machine cable connector (for motor power) Connects to the robot arm base. (CN1 connector)
- 2) Machine cable connector (for motor signal) Connects to the robot arm base. (CN2 connector)
- 3) Power supply terminals.
- 4) Fuse box.
- 5) External input/output signal connector.
- 6) Network cable connector for parallel I/O unit expansion.
- 7) Emergency stop switch and door switch terminals connector.

3.3 Outside dimensions/Installation dimensions

3.3.1 Outside dimensions

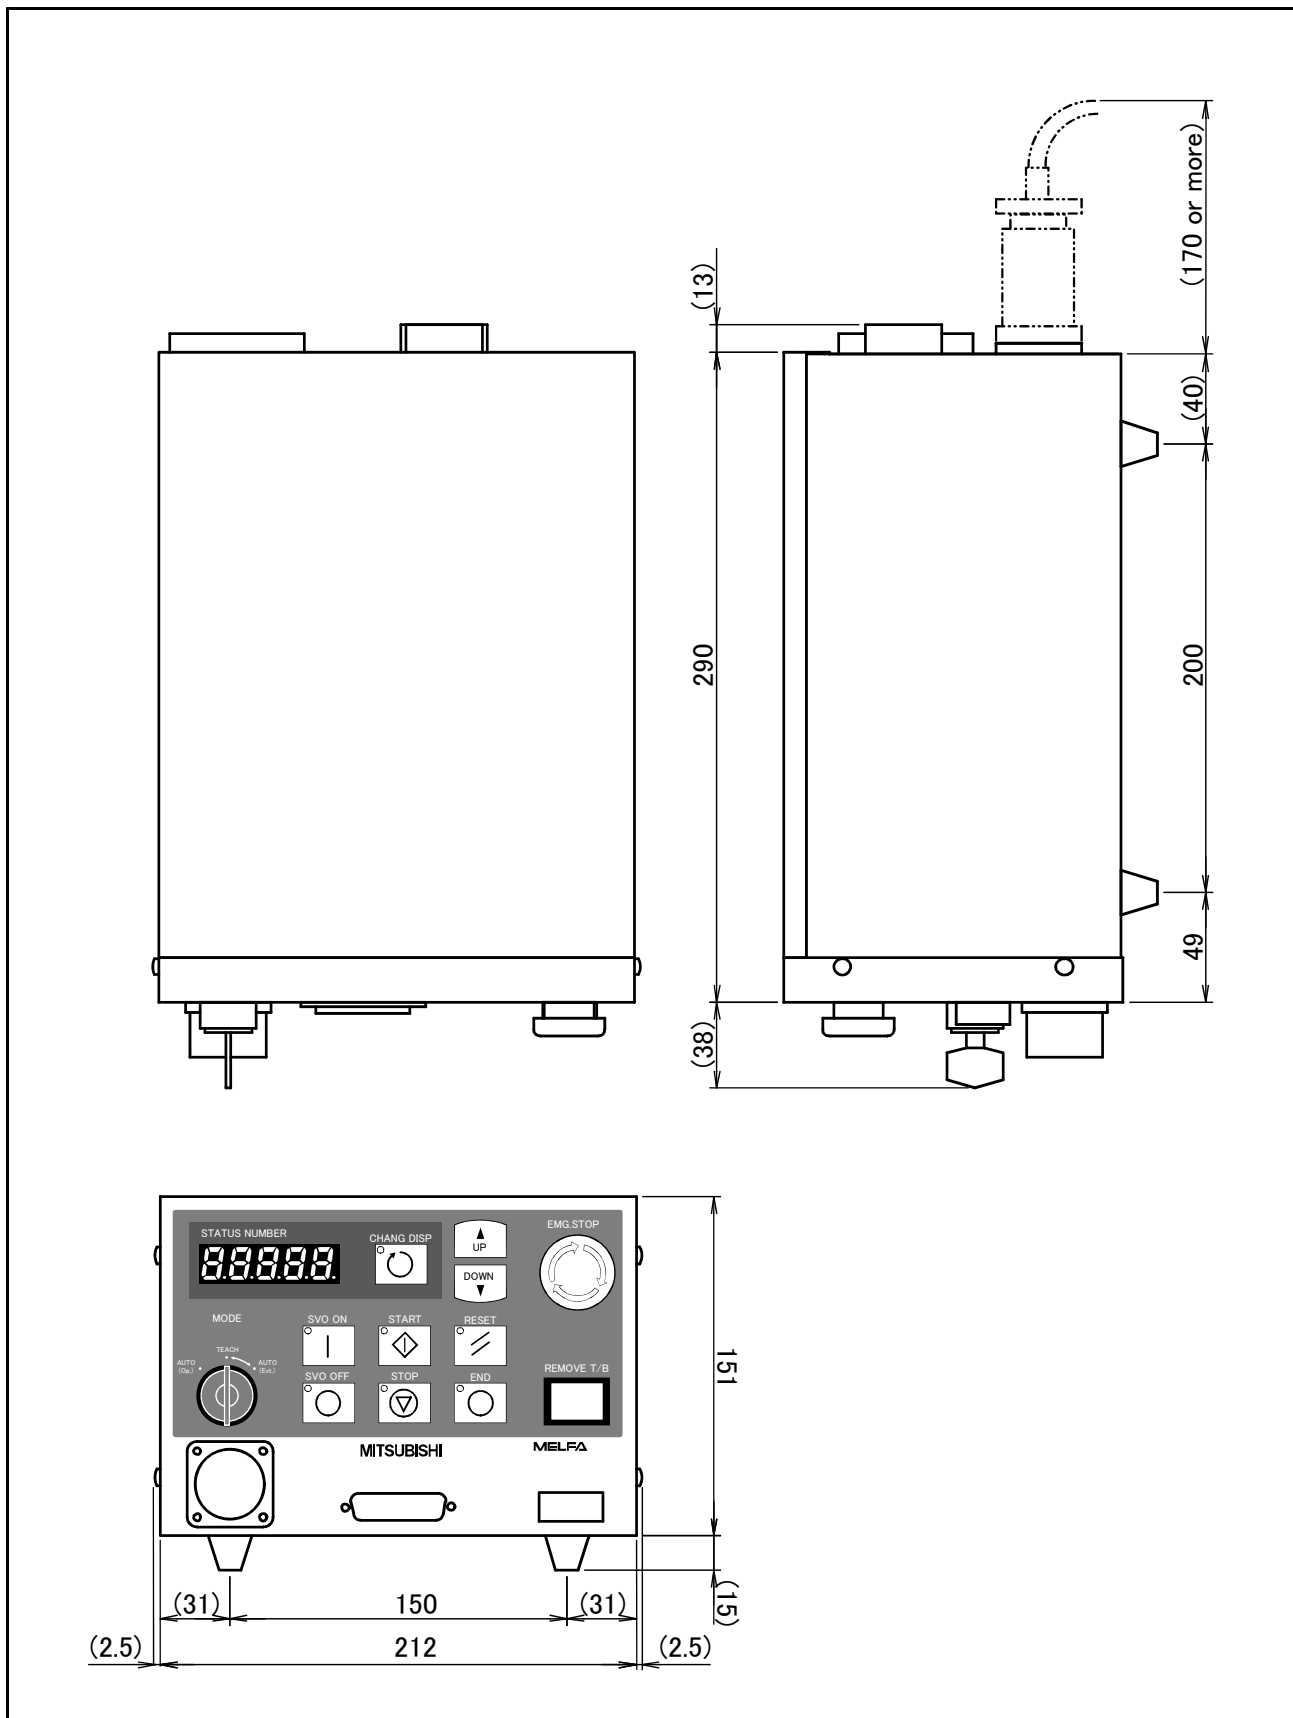


Fig.3-3 : Outside dimensions of controller

3.3.2 Installation dimensions

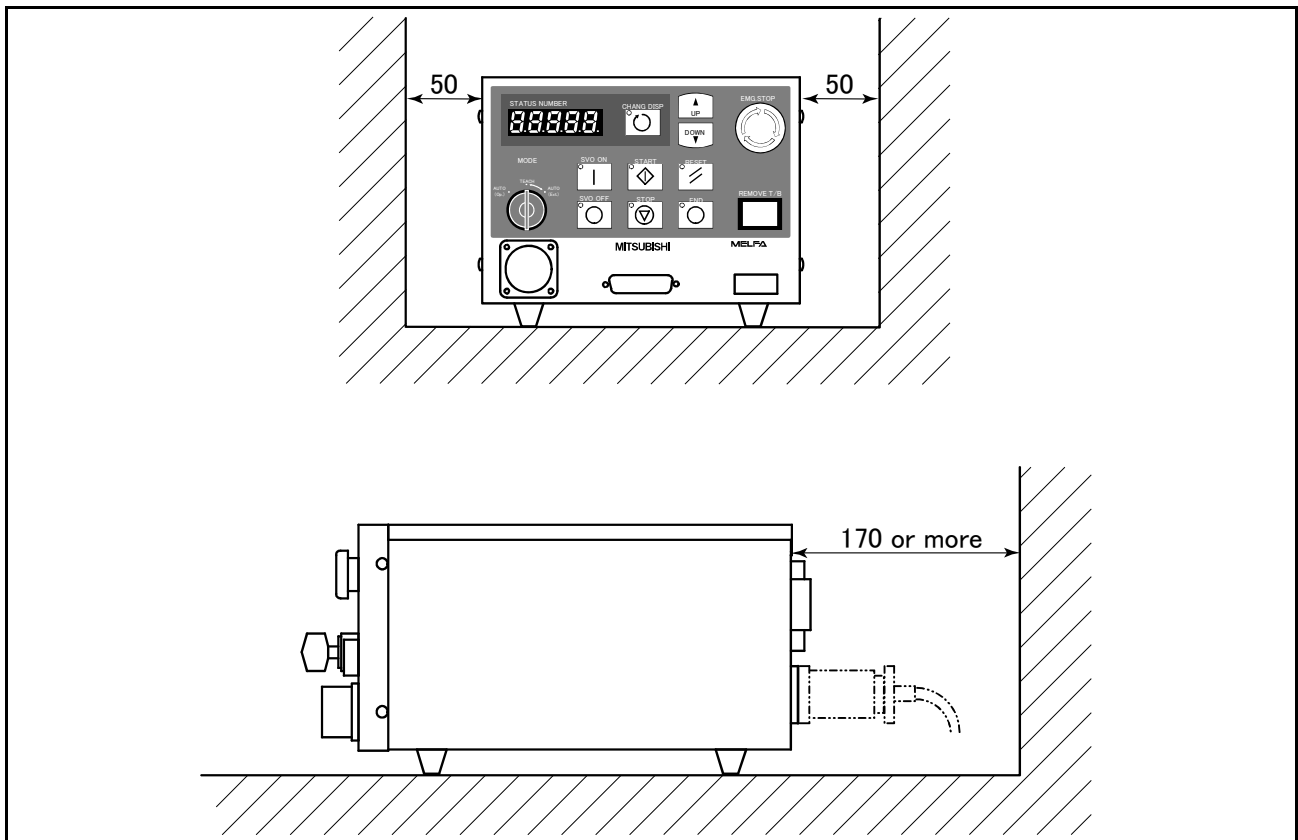


Fig.3-4 : Installation of controller

3.4 External input/output

3.4.1 Types

- (1) Dedicated input/output.....These inputs and outputs carry out the robot remote operation and status display.
- (2) General-purpose input/output.....These are inputs and outputs that the customer can program for peripheral device control. Moreover, it is possible to use parallel input/output units and input/output signals via CC-Link.
- (3) Hand input/output.....These are inputs and outputs related to the hand that the customer can program. (The hand output is an option. The [Page 55, "\(2\) Pneumatic hand interface"](#) is required.)

Class	Name	No. of input/output points		Connection format
		Input	Output	
Standard	Emergency stop	1	1	Connector
Standard	Door switch	1	–	
Standard	Parallel input/output	Occupies 16 general-purpose points/(6) dedicated points in general-purpose	Occupies 16 general-purpose points/(4) dedicated points in general-purpose	

3.4.2 Explanation

The parallel input/output unit uses connector bridging. Purchase the "External I/O cable" for connection with external devices.

The hand output is an option. Refer to [Page 55, "\(2\) Pneumatic hand interface"](#) for details

The parallel input/output unit can be expanded outside of the controller.

The expansion parallel input/output unit is connected with the control unit in the controller using a robot I/O link cable. Parallel input and output units can be expanded as an option to seven maximums. With allows up to input 240 points and output 240 points of maximums can be used including 16 points input and 16 points output of standard.

Refer to [Page 59, "\(4\) Parallel I/O unit"](#) for details on the parallel input/output unit.

3.5 Dedicated input/output

Show the main function of dedicated input/output in the [Table 3-2](#). Refer to attached instruction manual "Detailed explanations of functions and operations" in the product for the other functions. Each parameter indicated with the parameter name is used by designated the signal No., assigned in the order of input signal No. and output signal No. If the number of dedicated inputs and general-purpose input points used exceeds the standard No. of input/output points, install the parallel input /output unit (1st to 7th station: option).

Table 3-2 : Dedicated input/output list

Parameter name	Input Note 1)			Output	
	Name	Function	Level	Name	Function
TEACHMD	None			Teaching mode output signal	Outputs that the teaching mode is entered.
ATOPMD	None			Automatic mode output signal	Outputs that the automatic mode is entered.
ATEXTMD	None			Remote mode output signal	Outputs that the remote mode is entered.
RREADY	None			Controller power ON complete signal	Outputs that external input signals can be received.
AUTOENA	Automatic operation enabled input signal	Allows automatic operation.	L	Automatic operation enabled output signal	Outputs the automatic operation enabled state.
START	Start input signal	Starts all slots.	E	Operating output signal	Outputs that the slot is operating.
STOP	Stop input signal	Stops all slots. The input signal No. is fixed to 0. Note) Use the emergency stop input for stop inputs related to safety.	L	Wait output signal	Outputs that the slot is temporarily stopped.
SLOTINIT	Program reset input signal	Resets the wait state.	E	Program selection enabled output signal	Outputs that the slot is in the program selection enabled state.
ERRRESET	Error reset input signal	Resets the error state.	E	Error occurring output signal	Outputs that an error has occurred.
CYCLE	Cycle stop input signal	Carries out cycle stop.	E	In cycle stop operation output signal	Outputs that the cycle stop is operating.
SRVOFF	Servo ON enabled input signal	Turns the servo OFF for all mechanisms.	L	Servo ON enabled output signal	Outputs servo-on disable status. (Echo back)
SRVON	Servo ON input signal	Turns the servo ON for all mechanisms.	E	In servo ON output signal	Outputs the servo ON state.
IOENA	Operation rights input signal	Requests the operation rights for the external signal control.	L	Operation rights output signal	Outputs the operation rights valid state for the external signal control.
MELOCK	Machine lock input signal	Sets/resets the machine lock state for all mechanisms.	E	In machine lock output signal	Outputs the machine lock state.
SAFEPOS	Evasion point return input signal	Requests the evasion point return operation.	E	In evasion point return output signal	Outputs that the evasion point return is taking place.
OUTRESET	General-purpose output signal reset	Resets the general-purpose output signal.	E	None	
EMGERR	None			Emergency stop output signal	Outputs that an emergency stop has occurred.
S1START : S32START	Start input	Starts each slot.	E	In operation output	Outputs the operating state for each slot.
S1STOP : S32STOP	Stop input	Stops each slot.	L	In wait output	Outputs that each slot is temporarily stopped.
PRGSEL	Program selection input signal	Designates the setting value for the program No. with numeric value input signals.	E	None	
OVRDSEL	Override selection input signal	Designates the setting value for the override with the numeric value input signals.	E	None	

Parameter name	Input Note1)			Output	
	Name	Function	Level	Name	Function
IODATA <i>Note2)</i>	Numeric value input (start No., end No.)	Used to designate the program name, override value., mechanism value.	L	Numeric value output (start No., end No.)	Used to output the program name, override value., mechanism No.
PRGOUT	Program No. output request	Requests output of the program name.	E	Program No. output signal	Outputs that the program name is being output to the numeric value output signal.
LINEOUT	Line No. output request	Requests output of the line No.	E	Line No. output signal	Outputs that the line No. is being output to the numeric value output signal.
OVRDOUT	Override value output request	Requests the override output.	E	Override value output signal	Outputs that the override value is being output to the numeric value output signal.
ERROUT	Error No. output request	Requests the error No. output.	E	Error No. output signal	Outputs that the error No. is being output to the numeric value output signal.
JOGENA	Jog valid input signal	Validates jog operation with the external signals	E	Jog valid output signal	Outputs that the jog operation with external signals is valid.
JOGM	Jog mode input 2-bit	Designates the jog mode.	L	Jog mode output 2-bit	Outputs the current jog mode.
JOG+	Jog feed + side for 8-axes	Requests the + side jog operation.	L	None	
JOG-	Jog feed - side for 8-axes	Requests the - side jog operation.	L	None	
HNDCTL1 : HNDCTL3	None			Mechanism 1 hand output signal status : Mechanism 3 hand output signal status	Mechanism 1: Outputs the status of general-purpose outputs 900 to 907. Mechanism 2: Outputs the status of general-purpose outputs 910 to 917. Mechanism 3: Outputs the status of general-purpose outputs 920 to 927.
HNDSTS1 : HNDSTS3	None			Mechanism 1 hand input signal status : Mechanism 3 hand input signal status	Mechanism 1: Outputs the status of hand inputs 900 to 907. Mechanism 2: Outputs the status of hand inputs 910 to 917. Mechanism 3: Outputs the status of hand inputs 920 to 927.
HNDERR1 : HNDERR3	Mechanism 1 hand error input signal : Mechanism 3 hand error input signal	Requests the hand error occurrence.	L	Mechanism 1 hand error output signal : Mechanism 3 hand error output signal	Outputs that a hand error is occurring.
AIRERR1 : AIRERR3	Pneumatic pressure error 1 input signal : Pneumatic pressure error 3 input signal	Request the pneumatic pressure error occurrence.	L	Pneumatic pressure error 1 output signal. : Pneumatic pressure error 3 output signal.	Outputs that a pneumatic pressure error is occurring.
M1PTEXC : M3PTEXC	None		L	Maintenance parts replacement time warning signal	Outputs that the maintenance parts have reached the replacement time.
USER-AREA ^{<i>Note3)</i>}	None			User-designated area 8-points	Outputs that the robot is in the user-designated area.

Note1) The level indicates the signal level.

L: Level signal → The designated function is validated when the signal is ON, and is invalidated when the signal is OFF.

E: Edge signal → The designated function is validated when the signal changes from the OFF to ON state, and the function maintains the original state even when the signal then turns OFF.

Note2) Four elements are set in the order of input signal start No., end No., output signal start No. and end No.

Note3) Up to eight points can be set successively in order of start output signal No. and end output signal No.

3.6 Emergency stop input/output

This signal is input from the “emergency stop input” terminal in the controller.

Table 3-3 : Dedicated input terminals in controller

Class	Name	Details
Input	Emergency stop	Applies the emergency stop (Single emergency line.)
Input	Door switch	The servo turns OFF.
Output	Emergency stop	This output indicates that the emergency stop input or the door switch input is turned on.

3.6.1 Connection of the external emergency stop

The external emergency stop input and door switch input are short-circuited with a short cable at shipment as shown in Fig. 3-5.

Connect the external emergency stop switch and door switch with the following procedure.

- 1) Prepare the “emergency stop switch” and “door switch”.
- 2) Remove the two short pieces 1 and 2.
- 3) Securely connect the external emergency stop’s contacts across “1)-2), and the door switch’s contacts across 3)-4)” on the terminal block.

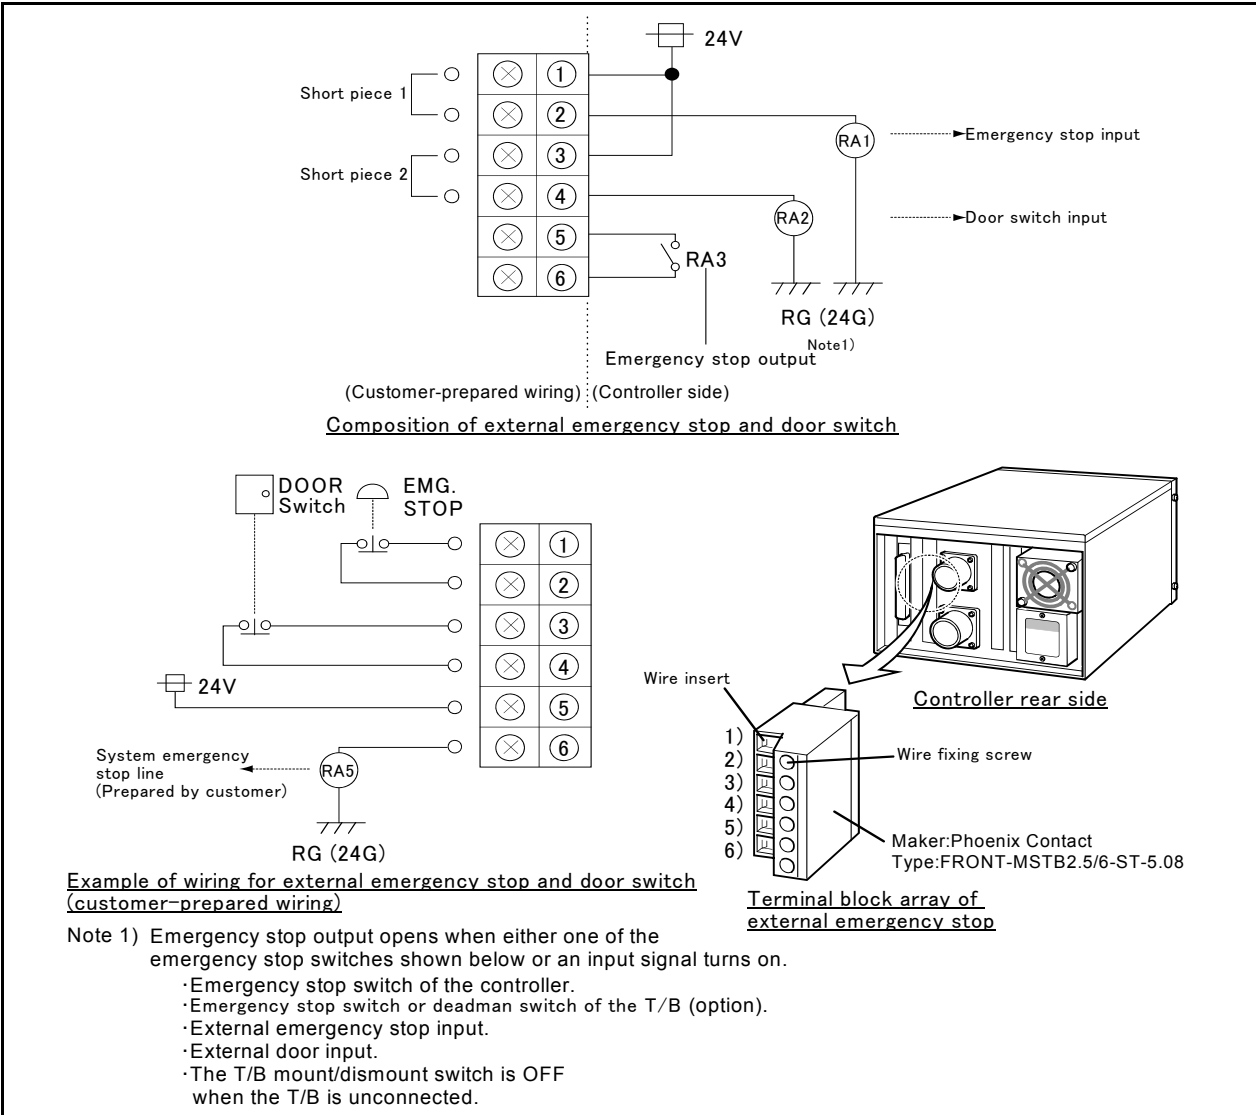


Fig.3-5 : Connection of the external emergency stop

[Note] Refer to Page 95, “5.1.7 Examples of safety measures” together, and carry out wiring to the emergency stop.

3.6.2 Door switch function

This function retrieves the status of the switch installed on the door of the safety fence, etc., and stops the robot when the door is opened. This differs from an emergency stop in that the servo turns OFF when the door is opened and an error does not occur. Follow the wiring example shown in Fig. 3-5, and wire so that the contact closes when the door is closed. Details of this function according to the robot status are shown below.

- During automatic operation When the door is opened, the servo turns OFF and the robot stops. An error occurs.
The process of the restoration : Close the door, reset the alarm, turn on the servo, and restart
- During teaching Even when the door is opened, the servo can be turned ON and the robot moved using the teaching pendant.

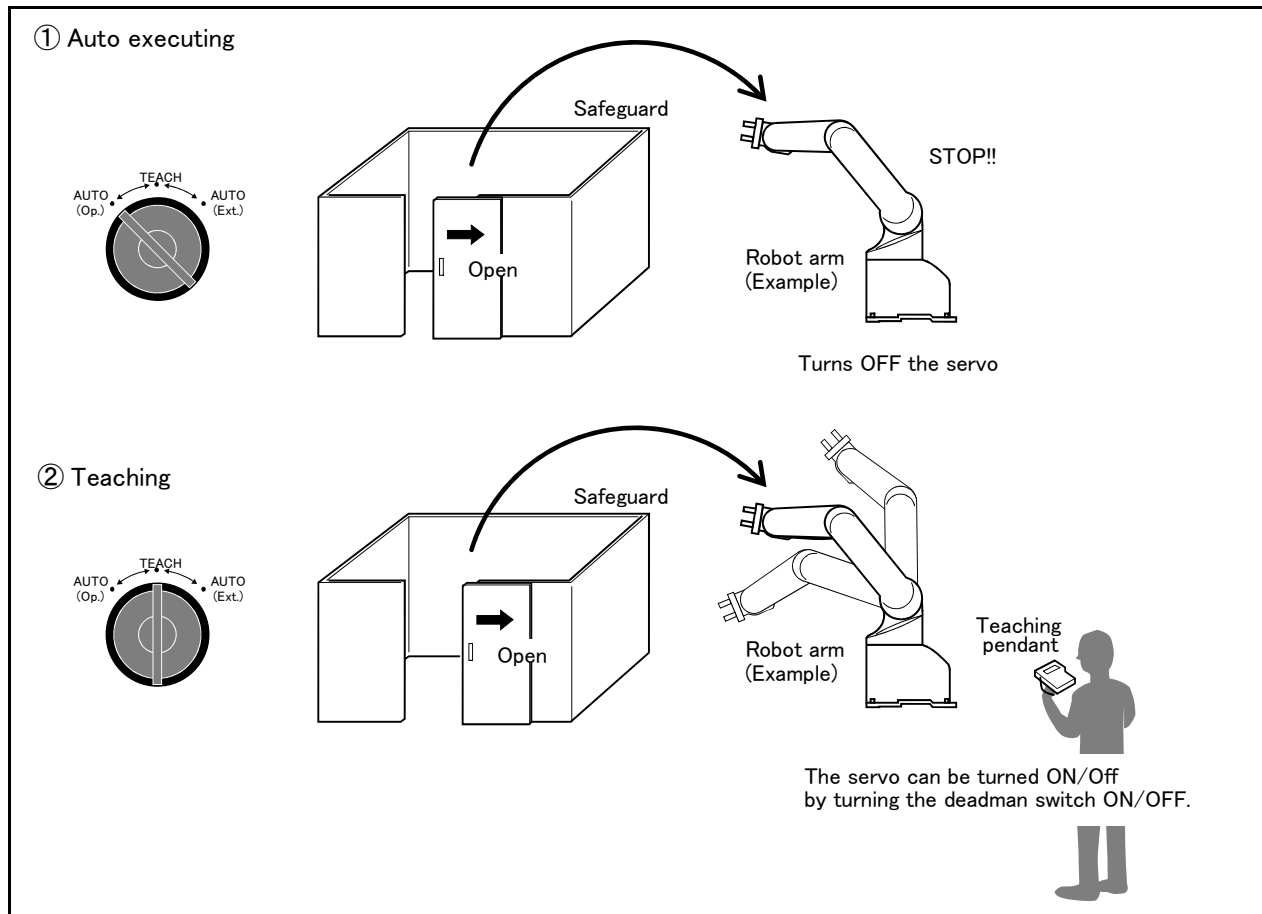


Fig.3-6 : Door switch function

3.7 Parallel input/output unit

- A parallel input/output card is mounted as a standard in the controller's control unit.
- The external input/output circuit specifications are shown in Table 3-4 and Table 3-5.
- The correspondence of the external input/output connector pin No. and the colors of the connected "external input/output cable" wires (separate option) is as shown in Page 49, "Table 3-6" and Table 3-7. Refer to Page 68, "(5) External I/O cable" for details of external I/O cable.
- Pin Nos. described as both general-purpose signal and dedicated signal can be shared.
- The other dedicated input/output signals that are not assigned can be assigned to required general-purpose input/output pins when creating the program.
- If the standard inputs and outputs are insufficient, install the parallel input/output unit connection option outside the controller.

Table 3-4 : Electrical specifications of input circuit

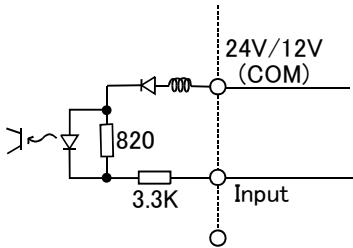
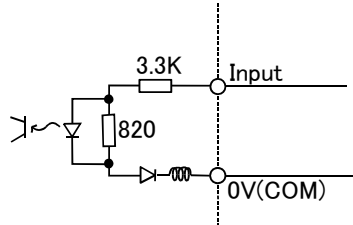
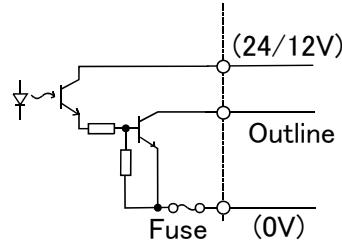
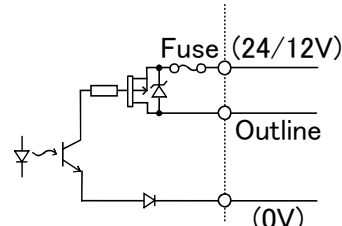
Item		Specifications	Internal circuit
Type		DC input	<div> <p><Sink type></p>  </div> <div> <p><Source type></p>  </div>
No. of input points		16	
Insulation method		Photo-coupler insulation	
Rated input voltage		12VDC/24VDC	
Rated input current		Approx. 3mA/approx. 7mA	
Working voltage range		10.2VDC to 26.4VDC(ripple rate within 5%)	
ON voltage/ON current		8VDC or more/2mA or more	
OFF voltage/OFF current		4VDC or less/1mA or less	
Input resistance		Approx. 3.3kΩ	
Response time	OFF-ON	10ms or less(DC24V)	
	ON-OFF	10ms or less(DC24V)	
Common method		8 points per common	
External wire connection method		Connector	

Table 3-5 : Electrical specifications of output circuit

Item		Specifications	Internal circuit
Type		Transistor output	<div> <p><Sink type></p>  </div> <div> <p><Source type></p>  </div>
No. of output points		16	
Insulation method		Photo-coupler insulation	
Rated load voltage		DC12V/DC24V	
Rated load voltage range		DC10.2 ~ 30V(peak voltage 30VDC)	
Max. load current		0.1A/point (100%)	
Leakage current at OFF		0.1mA or less	
Max. voltage drop at ON		DC0.9V(TYP.)	
Response time	OFF-ON	2ms or less (hardware response time)	
	ON-OFF	2ms or less (Resistance load) (hardware response time)	
Fuse rating		Fuse 3.2A (one per common) Replacement not possible	
Common method		8 points per common (common terminal: 8 points)	
External wire connection method		Connector	
External power supply	Voltage	DC12/24V(DC10.2 ~ 30V)	
	Current	60mA (TYP. 24VDC per common) (base drive current)	

[Caution] When connecting the phototransistor output to the input circuit, be sure to allocate an input current of approximately 7 mA at 24 VDC. Especially when using a photo diode and a phototransistor (sensor) away from each other, it is recommended to verify the current that can be carried in the design stage.

**CAUTION**

The output circuit protective fuses prevent failure in case of load short-circuit and improper connections. Please do not connect loads that cause the current to exceed the maximum rated current. If the maximum rated current is exceeded, the internal transistors may be damaged.

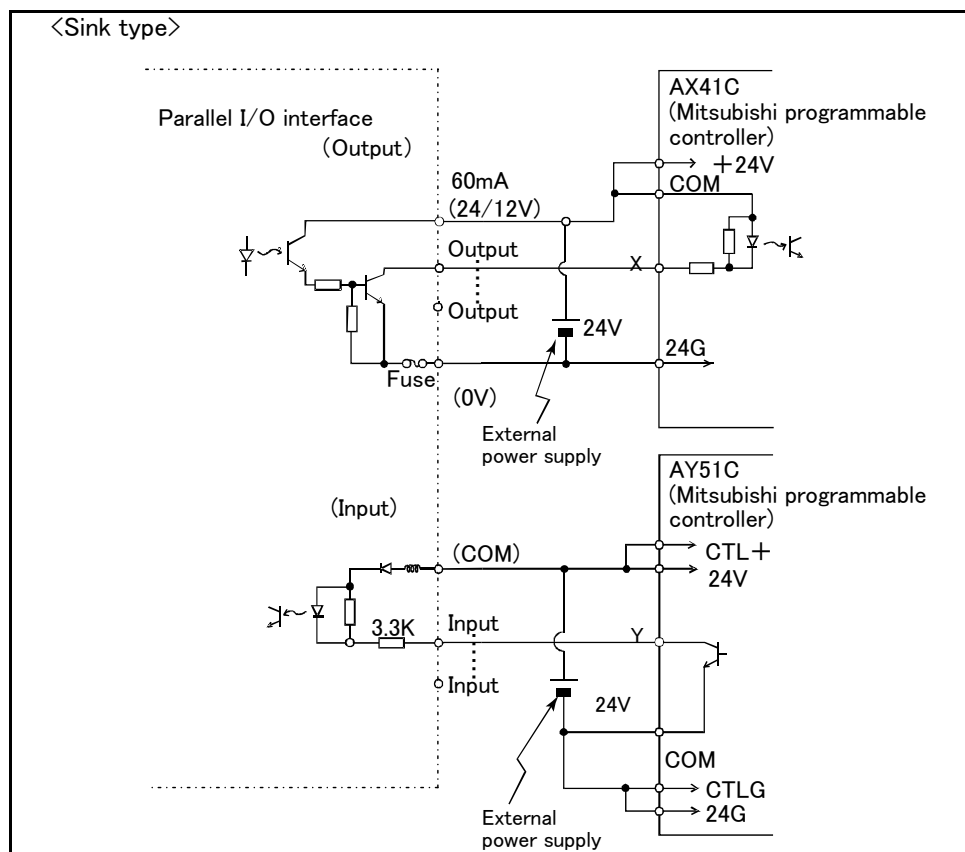


Fig.3-7 : Connection with a Mitsubishi PLC (Example of sink type)

*The input/output circuit external power supply (24 VDC) must be prepared by the customer.

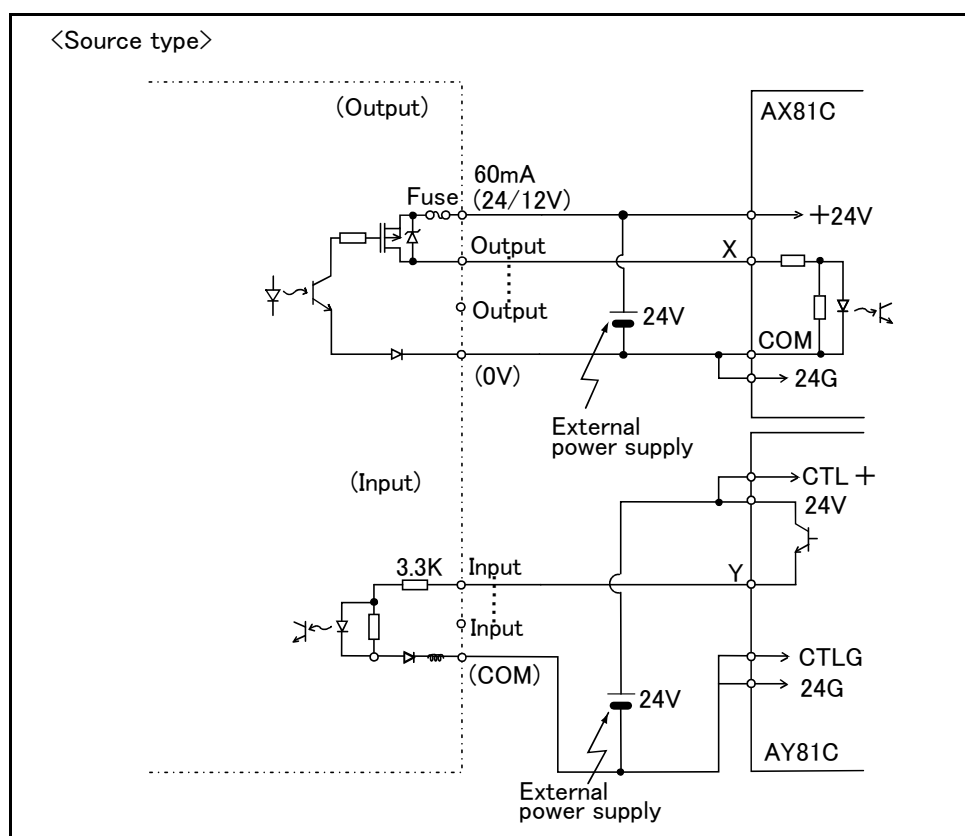


Fig.3-8 : Connection with a Mitsubishi PLC (Example of source type)

*The input/output circuit external power supply (24 VDC) must be prepared by the customer.

Table 3-6 : Standard parallel I/O interface CN100pin No. and signal assignment list <Sink type> (2A-CBL □□)

Table 3-6-1: Standard parameter 1/5: Interface GND/VSOPIN No. and signal assignment for 40-pin type (24V/30V/36V)								
Pin No.	Line color	Function name		Pin No.	Line color	Function name		
		General-purpose	Dedicated/power supply, common			General-purpose	Dedicated/power supply, common	
1	Orange/Red A	General-purpose output 0	FG	26	Orange/Blue A	General-purpose output 4	FG	
2	Gray/Red A		0V:For pins 4-7, 10-13	27	Gray/Blue A		0V:For pins 29-32, 35-38	
3	White/Red A		12V/24V:For pins 4-7	28	White/Blue A		12V/24V:For pins 29-32	
4	Yellow/Red A		Running	29	Yellow/Blue A			
5	Pink/Red A		Servo on	30	Pink/Blue A			
6	Orange/Red B	General-purpose output 2	Error	31	Orange/Blue B	General-purpose output 6	0V:For pins 29-32, 35-38 12V/24V:For pins 35-38	
7	Gray/Red B	General-purpose output 3	Operation rights	32	Gray/Blue B	General-purpose output 7		
8	White/Red B	General-purpose output 8	0V:For pins 4-7, 10-13	33	White/Blue B			
9	Yellow/Red B		12V/24V:For pins 10-13	34	Yellow/Blue B			
10	Pink/Red B			35	Pink/Blue B	General-purpose output 12		
11	Orange/Red C	General-purpose output 9	COM0:For pins 15-22 ^{Note1)} Stop(All slot) ^{Note2)}	36	Orange/Blue C	General-purpose output 13	COM1:For pins 40-47 ^{Note1)}	
12	Gray/Red C	General-purpose output 10		37	Gray/Blue C	General-purpose output 14		
13	White/Red C	General-purpose output 11		38	White/Blue C	General-purpose output 15		
14	Yellow/Red C	General-purpose input 0		39	Yellow/Blue C	General-purpose input 8		
15	Pink/Red C				40			Pink/Blue C
16	Orange/Red D	General-purpose input 1	Servo off	41	Orange/Blue D	General-purpose input 9	Reserved Reserved Reserved	
17	Gray/Red D	General-purpose input 2	Error reset	42	Gray/Blue D	General-purpose input 10		
18	White/Red D	General-purpose input 3	Start	43	White/Blue D	General-purpose input 11		
19	Yellow/Red D	General-purpose input 4	Servo on	44	Yellow/Blue D	General-purpose input 12		
20	Pink/Red D	General-purpose input 5	Operation rights	45	Pink/Blue D	General-purpose input 13		
21	Orange/Red E	General-purpose input 6	Reserved Reserved Reserved	46	Orange/Blue E	General-purpose input 14	Reserved Reserved Reserved	
22	Gray/Red E	General-purpose input 7		47	Gray/Blue E	General-purpose input 15		
23	White/Red E			48	White/Blue E			
24	Yellow/Red E			49	Yellow/Blue E			
25	Pink/Red E			50	Pink/Blue E			

Note1)Sink type:24V/12V(COM), Source type:0V(COM)

Note2)The assignment of the dedicated input signal "STOP" is fixed.

Table 3-7 : Standard parallel I/O interface CN100pin No. and signal assignment list <Source type> (2A-CBL □□)

Pin No. 1 ~ 25 : Standard pin connector / C interface (5V/3.3V/1.8V) and signal assignment list (Source type) (L1A, GND, L1B, L1C, L1D, L1E, L1F, L1G, L1H, L1I, L1J, L1K, L1L, L1M, L1N, L1O, L1P, L1Q, L1R, L1S, L1T, L1U, L1V, L1W, L1X, L1Y, L1Z, L1AA, L1AB, L1AC, L1AD, L1AE, L1AF, L1AG, L1AH, L1AI, L1AJ, L1AK, L1AL, L1AM, L1AN, L1AO, L1AP, L1AQ, L1AR, L1AS, L1AT, L1AU, L1AV, L1AW, L1AX, L1AY, L1AZ, L1BA, L1BB, L1BC, L1BD, L1BE, L1BF, L1BG, L1BH, L1BI, L1BJ, L1BK, L1BL, L1BM, L1BN, L1BO, L1BP, L1BQ, L1BR, L1BS, L1BT, L1BU, L1BV, L1BW, L1BX, L1BY, L1BZ, L1CA, L1CB, L1CC, L1CD, L1CE, L1CF, L1CG, L1CH, L1CI, L1CJ, L1CK, L1CL, L1CM, L1CN, L1CO, L1CP, L1CQ, L1CR, L1CS, L1CT, L1CU, L1CV, L1CW, L1CX, L1CY, L1CZ, L1DA, L1DB, L1DC, L1DD, L1DE, L1DF, L1DG, L1DH, L1DI, L1DJ, L1DK, L1DL, L1DM, L1DN, L1DO, L1DP, L1DQ, L1DR, L1DS, L1DT, L1DU, L1DV, L1DW, L1DX, L1DY, L1DZ, L1EA, L1EB, L1EC, L1ED, L1EE, L1EF, L1EG, L1EH, L1EI, L1EJ, L1EK, L1EL, L1EM, L1EN, L1EO, L1EP, L1EQ, L1ER, L1ES, L1ET, L1EU, L1EV, L1EW, L1EX, L1EY, L1EZ, L1FA, L1FB, L1FC, L1FD, L1FE, L1FF, L1FG, L1FH, L1FI, L1FJ, L1FK, L1FL, L1FM, L1FN, L1FO, L1FP, L1FQ, L1FR, L1FS, L1FT, L1FU, L1FV, L1FW, L1FX, L1FY, L1FZ, L1GA, L1GB, L1GC, L1GD, L1GE, L1GF, L1GG, L1GH, L1GI, L1GJ, L1GK, L1GL, L1GM, L1GN, L1GO, L1GP, L1GQ, L1GR, L1GS, L1GT, L1GU, L1GV, L1GW, L1GX, L1GY, L1GZ, L1HA, L1HB, L1HC, L1HD, L1HE, L1HF, L1HG, L1HH, L1HI, L1HJ, L1HK, L1HL, L1HM, L1HN, L1HO, L1HP, L1HQ, L1HR, L1HS, L1HT, L1HU, L1HV, L1HW, L1HX, L1HY, L1HZ, L1IA, L1IB, L1IC, L1ID, L1IE, L1IF, L1IG, L1IH, L1II, L1IJ, L1IK, L1IL, L1IM, L1IN, L1IO, L1IP, L1IQ, L1IR, L1IS, L1IT, L1IU, L1IV, L1IW, L1IX, L1IY, L1IZ, L1JA, L1JB, L1JC, L1JD, L1JE, L1JF, L1JG, L1JH, L1JI, L1JJ, L1JK, L1JL, L1JM, L1JN, L1JO, L1JP, L1JQ, L1JR, L1JS, L1JT, L1JU, L1JV, L1JW, L1JX, L1JY, L1JZ, L1KA, L1KB, L1KC, L1KD, L1KE, L1KF, L1KG, L1KH, L1KI, L1KJ, L1KK, L1KL, L1KM, L1KN, L1KO, L1KP, L1KQ, L1KR, L1KS, L1KT, L1KU, L1KV, L1KW, L1KX, L1KY, L1KZ, L1LA, L1LB, L1LC, L1LD, L1LE, L1LF, L1LG, L1LH, L1LI, L1LJ, L1LK, L1LL, L1LM, L1LN, L1LO, L1LP, L1LQ, L1LR, L1LS, L1LT, L1LU, L1LV, L1LW, L1LX, L1LY, L1LZ, L1MA, L1MB, L1MC, L1MD, L1ME, L1MF, L1MG, L1MH, L1MI, L1MJ, L1MK, L1ML, L1MN, L1MO, L1MP, L1MQ, L1MR, L1MS, L1MT, L1MU, L1MV, L1MW, L1MX, L1MY, L1MZ, L1NA, L1NB, L1NC, L1ND, L1NE, L1NF, L1NG, L1NH, L1NI, L1NJ, L1NK, L1NL, L1NM, L1NN, L1NO, L1NP, L1NQ, L1NR, L1NS, L1NT, L1NU, L1NV, L1NW, L1NX, L1NY, L1NZ, L1OA, L1OB, L1OC, L1OD, L1OE, L1OF, L1OG, L1OH, L1OI, L1OJ, L1OK, L1OL, L1OM, L1ON, L1OO, L1OP, L1OQ, L1OR, L1OS, L1OT, L1OU, L1OV, L1OW, L1OX, L1OY, L1OZ, L1PA, L1PB, L1PC, L1PD, L1PE, L1PF, L1PG, L1PH, L1PI, L1PJ, L1PK, L1PL, L1PM, L1PN, L1PO, L1PP, L1PQ, L1PR, L1PS, L1PT, L1PU, L1PV, L1PW, L1PX, L1PY, L1PZ, L1QA, L1QB, L1QC, L1QD, L1QE, L1QF, L1QG, L1QH, L1QI, L1QJ, L1QK, L1QL, L1QM, L1QN, L1QO, L1QP, L1QQ, L1QR, L1QS, L1QT, L1QU, L1QV, L1QW, L1QX, L1QY, L1QZ, L1RA, L1RB, L1RC, L1RD, L1RE, L1RF, L1RG, L1RH, L1RI, L1RJ, L1RK, L1RL, L1RM, L1RN, L1RO, L1RP, L1RQ, L1RR, L1RS, L1RT, L1RU, L1RV, L1RW, L1RX, L1RY, L1RZ, L1SA, L1SB, L1SC, L1SD, L1SE, L1SF, L1SG, L1SH, L1SI, L1SJ, L1SK, L1SL, L1SM, L1SN, L1SO, L1SP, L1SQ, L1SR, L1SS, L1ST, L1SU, L1SV, L1SW, L1SX, L1SY, L1SZ, L1TA, L1TB, L1TC, L1TD, L1TE, L1TF, L1TG, L1TH, L1TI, L1TJ, L1TK, L1TL, L1TM, L1TN, L1TO, L1TP, L1TQ, L1TR, L1TS, L1TT, L1TU, L1TV, L1TW, L1TX, L1TY, L1TZ, L1UA, L1UB, L1UC, L1UD, L1UE, L1UF, L1UG, L1UH, L1UI, L1UJ, L1UK, L1UL, L1UM, L1UN, L1UO, L1UP, L1UQ, L1UR, L1US, L1UT, L1UU, L1UV, L1UW, L1UX, L1UY, L1UZ, L1VA, L1VB, L1VC, L1VD, L1VE, L1VF, L1VG, L1VH, L1VI, L1VJ, L1VK, L1VL, L1VM, L1VN, L1VO, L1VP, L1VQ, L1VR, L1VS, L1VT, L1VU, L1VV, L1VW, L1VX, L1VY, L1VZ, L1WA, L1WB, L1WC, L1WD, L1WE, L1WF, L1WG, L1WH, L1WI, L1WJ, L1WK, L1WL, L1WM, L1WN, L1WO, L1WP, L1WQ, L1WR, L1WS, L1WT, L1WU, L1WV, L1WW, L1WX, L1WY, L1WZ, L1XA, L1XB, L1XC, L1XD, L1XE, L1XF, L1XG, L1XH, L1XI, L1XJ, L1XK, L1XL, L1XM, L1XN, L1XO, L1XP, L1XQ, L1XR, L1XS, L1XT, L1XU, L1XV, L1XW, L1XX, L1XY, L1XZ, L1YA, L1YB, L1YC, L1YD, L1YE, L1YF, L1YG, L1YH, L1YI, L1YJ, L1YK, L1YL, L1YM, L1YN, L1YO, L1YP, L1YQ, L1YR, L1YS, L1YT, L1YU, L1YV, L1YW, L1YX, L1YY, L1YZ, L1ZA, L1ZB, L1ZC, L1ZD, L1ZE, L1ZF, L1ZG, L1ZH, L1ZI, L1ZJ, L1ZK, L1ZL, L1ZM, L1ZN, L1ZO, L1ZP, L1ZQ, L1ZR, L1ZS, L1ZT, L1ZU, L1ZV, L1ZW, L1ZX, L1ZY, L1ZZ, L1AA, L1AB, L1AC, L1AD, L1AE, L1AF, L1AG, L1AH, L1AI, L1AJ, L1AK, L1AL, L1AM, L1AN, L1AO, L1AP, L1AQ, L1AR, L1AS, L1AT, L1AU, L1AV, L1AW, L1AX, L1AY, L1AZ, L1BA, L1BB, L1BC, L1BD, L1BE, L1BF, L1BG, L1BH, L1BI, L1BJ, L1BK, L1BL, L1BM, L1BN, L1BO, L1BP, L1BQ, L1BR, L1BS, L1BT, L1BU, L1BV, L1BW, L1BX, L1BY, L1BZ, L1CA, L1CB, L1CC, L1CD, L1CE, L1CF, L1CG, L1CH, L1CI, L1CJ, L1CK, L1CL, L1CM, L1CN, L1CO, L1CP, L1CQ, L1CR, L1CS, L1CT, L1CU, L1CV, L1CW, L1CX, L1CY, L1CZ, L1DA, L1DB, L1DC, L1DD, L1DE, L1DF, L1DG, L1DH, L1DI, L1DJ, L1DK, L1DL, L1DM, L1DN, L1DO, L1DP, L1DQ, L1DR, L1DS, L1DT, L1DU, L1DV, L1DW, L1DX, L1DY, L1DZ, L1EA, L1EB, L1EC, L1ED, L1EE, L1EF, L1EG, L1EH, L1EI, L1EJ, L1EK, L1EL, L1EM, L1EN, L1EO, L1EP, L1EQ, L1ER, L1ES, L1ET, L1EU, L1EV, L1EW, L1EX, L1EY, L1EZ, L1FA, L1FB, L1FC, L1FD, L1FE, L1FF, L1FG, L1FH, L1FI, L1FJ, L1FK, L1FL, L1FM, L1FN, L1FO, L1FP, L1FQ, L1FR, L1FS, L1FT, L1FU, L1FV, L1FW, L1FX, L1FY, L1FZ, L1GA, L1GB, L1GC, L1GD, L1GE, L1GF, L1GG, L1GH, L1GI, L1GJ, L1GK, L1GL, L1GM, L1GN, L1GO, L1GP, L1GQ, L1GR, L1GS, L1GT, L1GU, L1GV, L1GW, L1GX, L1GY, L1GZ, L1HA, L1HB, L1HC, L1HD, L1HE, L1HF, L1HG, L1HH, L1HI, L1HJ, L1HK, L1HL, L1HM, L1HN, L1HO, L1HP, L1HQ, L1HR, L1HS, L1HT, L1HU, L1HV, L1HW, L1HX, L1HY, L1HZ, L1IA, L1IB, L1IC, L1ID, L1IE, L1IF, L1IG, L1IH, L1II, L1IJ, L1IK, L1IL, L1IM, L1IN, L1IO, L1IP, L1IQ, L1IR, L1IS, L1IT, L1IU, L1IV, L1IW, L1IX, L1IY, L1IZ, L1JA, L1JB, L1JC, L1JD, L1JE, L1JF, L1JG, L1JH, L1JI, L1JJ, L1JK, L1JL, L1JM, L1JN, L1JO, L1JP, L1JQ, L1JR, L1JS, L1JT, L1JU, L1JV, L1JW, L1JX, L1JY, L1JZ, L1KA, L1KB, L1KC, L1KD, L1KE, L1KF, L1KG, L1KH, L1KI, L1KJ, L1KK, L1KL, L1KM, L1KN, L1KO, L1KP, L1KQ, L1KR, L1KS, L1KT, L1KU, L1KV, L1KW, L1KX, L1KY, L1KZ, L1LA, L1LB, L1LC, L1LD, L1LE, L1LF, L1LG, L1LH, L1LI, L1LJ, L1LK, L1LL, L1LM, L1LN, L1LO, L1LP, L1LQ, L1LR, L1LS, L1LT, L1LU, L1LV, L1LW, L1LX, L1LY, L1LZ, L1MA, L1MB, L1MC, L1MD, L1ME, L1MF, L1MG, L1MH, L1MI, L1MJ, L1MK, L1ML, L1MN, L1MO, L1MP, L1MQ, L1MR, L1MS, L1MT, L1MU, L1MV, L1MW, L1MX, L1MY, L1MZ, L1NA, L1NB, L1NC, L1ND, L1NE, L1NF, L1NG, L1NH, L1NI, L1NJ, L1NK, L1NL, L1NM, L1NN, L1NO, L1NP, L1NQ, L1NR, L1NS, L1NT, L1NU, L1NV, L1NW, L1NX, L1NY, L1NZ, L1OA, L1OB, L1OC, L1OD, L1OE, L1OF, L1OG, L1OH, L1OI, L1OJ, L1OK, L1OL, L1OM, L1ON, L1OO, L1OP, L1OQ, L1OR, L1OS, L1OT, L1OU, L1OV, L1OW, L1OX, L1OY, L1OZ, L1PA, L1PB, L1PC, L1PD, L1PE, L1PF, L1PG, L1PH, L1PI, L1PJ, L1PK, L1PL, L1PM, L1PN, L1PO, L1PP, L1PQ, L1PR, L1PS, L1PT, L1PU, L1PV, L1PW, L1PX, L1PY, L1PZ, L1QA, L1QB, L1QC, L1QD, L1QE, L1QF, L1QG, L1QH, L1QI, L1QJ, L1QK, L1QL, L1QM, L1QN, L1QO, L1QP, L1QQ, L1QR, L1QS, L1QT, L1QU, L1QV, L1QW, L1QX, L1QY, L1QZ, L1RA, L1RB, L1RC, L1RD, L1RE, L1RF, L1RG, L1RH, L1RI, L1RJ, L1RK, L1RL, L1RM, L1RN, L1RO, L1RP, L1RQ, L1RR, L1RS, L1RT, L1RU, L1RV, L1RW, L1RX, L1RY, L1RZ, L1SA, L1SB, L1SC, L1SD, L1SE, L1SF, L1SG, L1SH, L1SI, L1SJ, L1SK, L1SL, L1SM, L1SN, L1SO, L1SP, L1SQ, L1SR, L1SS, L1ST, L1SU, L1SV, L1SW, L1SX, L1SY, L1SZ, L1TA, L1TB, L1TC, L1TD, L1TE, L1TF, L1TG, L1TH, L1TI, L1TJ, L1TK, L1TL, L1TM, L1TN, L1TO, L1TP, L1TQ, L1TR, L1TS, L1TT, L1TU, L1TV, L1TW, L1TX, L1TY, L1TZ, L1UA, L1UB, L1UC, L1UD, L1UE, L1UF, L1UG, L1UH, L1UI, L1UJ, L1UK, L1UL, L1UM, L1UN, L1UO, L1UP, L1UQ, L1UR, L1US, L1UT, L1UU, L1UV, L1UW, L1UX, L1UY, L1UZ, L1VA, L1VB, L1VC, L1VD, L1VE, L1VF, L1VG, L1VH, L1VI, L1VJ, L1VK, L1VL, L1VM, L1VN, L1VO, L1VP, L1VQ, L1VR, L1VS, L1VT, L1VU, L1VV, L1VW, L1VX, L1VY, L1VZ, L1WA, L1WB, L1WC, L1WD, L1WE, L1WF, L1WG, L1WH, L1WI, L1WJ, L1WK, L1WL, L1WM, L1WN, L1WO, L1WP, L1WQ, L1WR, L1WS, L1WT, L1WU, L1WV, L1WW, L1WX, L1WY, L1WZ, L1XA, L1XB, L1XC, L1XD, L1XE, L1XF, L1XG, L1XH, L1XI, L1XJ, L1XK, L1XL, L1XM, L1XN, L1XO, L1XP, L1XQ, L1XR, L1XS, L1XT, L1XU, L1XV, L1XW, L1XX, L1XY, L1XZ, L1YA, L1YB, L1YC, L1YD, L1YE, L1YF, L1YG, L1YH, L1YI, L1YJ, L1YK, L1YL, L1YM, L1YN, L1YO, L1YP, L1YQ, L1YR, L1YS, L1YT, L1YU, L1YV, L1YW, L1YX, L1YY, L1YZ, L1ZA, L1ZB, L1ZC, L1ZD, L1ZE, L1ZF, L1ZG, L1ZH, L1ZI, L1ZJ, L1ZK, L1ZL, L1ZM, L1ZN, L1ZO, L1ZP, L1ZQ, L1ZR, L1ZS, L1ZT, L1ZU, L1ZV, L1ZW, L1ZX, L1ZY, L1ZZ, L1AA, L1AB, L1AC, L1AD, L1AE, L1AF, L1AG, L1AH, L1AI, L1AJ, L1AK, L1AL, L1AM, L1AN, L1AO, L1AP, L1AQ, L1AR, L1AS, L1AT, L1AU, L1AV, L1AW, L1AX, L1AY, L1AZ, L1BA, L1BB, L1BC, L1BD, L1BE, L1BF, L1BG, L1BH, L1BI, L1BJ, L1BK, L1BL, L1BM, L1BN, L1BO, L1BP, L1BQ, L1BR, L1BS, L1BT, L1BU, L1BV, L1BW, L1BX, L1BY, L1BZ, L1CA, L1CB, L1CC, L1CD, L1CE, L1CF, L1CG, L1CH, L1CI, L1CJ, L1CK, L1CL, L1CM, L1CN, L1CO, L1CP, L1CQ, L1CR, L1CS, L1CT, L1CU, L1CV, L1CW, L1CX, L1CY, L1CZ, L1DA, L1DB, L1DC, L1DD, L1DE, L1DF, L1DG, L1DH, L1DI, L1DJ, L1DK, L1DL, L1DM, L1DN, L1DO, L1DP, L1DQ, L1DR, L1DS, L1DT, L1DU, L1DV, L1DW, L1DX, L1DY, L1DZ, L1EA, L1EB, L1EC, L1ED, L1EE, L1EF, L1EG, L1EH, L1EI, L1EJ, L1EK, L1EL, L1EM, L1EN, L1EO, L1EP, L1EQ, L1ER, L1ES, L1ET, L1EU, L1EV, L1EW, L1EX, L1EY, L1EZ, L1FA, L1FB, L1FC, L1FD, L1FE, L1FF, L1FG, L1FH, L1FI, L1FJ, L1FK, L1FL, L1FM, L1FN, L1FO, L1FP, L1FQ, L1FR, L1FS, L1FT, L1FU, L1FV, L1FW, L1FX, L1FY, L1FZ, L1GA, L1GB, L1GC, L1GD, L1GE, L1GF, L1GG, L1GH, L1GI, L1GJ, L1GK, L1GL, L1GM, L1GN, L1GO, L1GP, L1GQ, L1GR, L1GS, L1GT, L1GU, L1GV, L1GW, L1GX, L1GY, L1GZ, L1HA, L1HB, L1HC, L1HD, L1HE, L1HF, L1HG, L1HH, L1HI, L1HJ, L1HK, L1HL, L1HM, L1HN, L1HO, L1HP, L1HQ, L1HR, L1HS, L1HT, L1HU, L1HV, L1HW, L1HX, L1HY, L1HZ, L1IA, L1IB, L1IC, L1ID, L1IE, L1IF, L1IG, L1IH, L1II, L1IJ, L1IK, L1IL, L1IM, L1IN, L1IO, L1IP, L1IQ, L1IR, L1IS, L1IT, L1IU, L1IV, L1IW, L1IX, L1IY, L1IZ, L1JA, L1JB, L1JC, L1JD, L1JE, L1JF, L1JG, L1JH, L1JI, L1JJ, L1JK, L1JL, L1JM, L1JN, L1JO, L1JP, L1JQ, L1JR, L1JS, L1JT, L1JU, L1JV, L1JW, L1JX, L1JY, L1JZ, L1KA, L1KB, L1KC, L1KD, L1KE, L1KF, L1KG, L1KH, L1KI, L1KJ, L1KK, L1KL, L1KM, L1KN, L1KO, L1KP, L1KQ, L1KR, L1KS, L1KT, L1KU, L1KV, L1KW, L1KX, L1KY, L1KZ, L1LA, L1LB, L1LC, L1LD, L1LE, L1LF, L1LG, L1LH, L1LI, L1LJ, L1LK, L1LL, L1LM, L1LN, L1LO, L1LP, L1LQ, L1LR, L1LS, L1LT, L1LU, L1LV, L1LW, L1LX, L1LY, L1LZ, L1MA, L1MB, L1MC, L1MD, L1ME, L1MF, L1MG, L1MH, L1MI, L1MJ, L1MK, L1ML, L1MN, L1MO, L1MP, L1MQ, L1MR, L1MS, L1MT, L1MU, L1MV, L1MW, L1MX, L1MY, L1MZ, L1NA, L1NB, L1NC, L1ND, L1NE, L1NF, L1NG, L1NH, L1NI, L1NJ, L1NK, L1NL, L1NM, L1NN, L1NO, L1NP, L1NQ, L1NR, L1NS, L1NT, L1NU, L1NV, L1NW, L1NX, L1NY, L1NZ, L1OA, L1OB, L1OC, L1OD, L1OE, L1OF, L1OG, L1OH, L1OI, L1OJ, L1OK, L1OL, L1OM, L1ON, L1OO, L1OP, L1OQ, L1OR, L1OS, L1OT, L1OU, L1OV, L1OW, L1OX, L1OY, L1OZ, L1PA, L1PB, L1PC, L1PD, L1PE, L1PF, L1PG, L1PH, L1PI, L1PJ, L1PK, L1PL, L1PM, L1PN, L1PO, L1PP, L1PQ, L1PR, L1PS, L1PT, L1PU, L1PV, L1PW, L1PX, L1PY, L1PZ, L1QA, L1QB, L1QC, L1QD, L1QE, L1QF, L1QG, L1QH, L1QI, L1QJ, L1QK, L1QL, L1QM, L1QN, L1QO, L1QP, L1QQ, L1QR, L1QS, L1QT, L1QU, L1QV, L1QW, L1QX, L1QY, L1QZ, L1RA, L1RB, L1RC, L1RD, L1RE, L1RF, L1RG, L1RH, L1RI, L1RJ, L1RK, L1RL, L1RM, L1RN, L1RO, L1RP, L1RQ, L1RR, L1RS, L1RT, L1RU, L1RV, L1RW, L1RX, L1RY, L1RZ, L1SA, L1SB, L1SC, L1SD, L1SE, L1SF, L1SG, L1SH, L1SI, L1SJ, L1SK, L1SL, L1SM, L1SN, L1SO, L1SP, L1SQ, L1SR, L1SS, L1ST, L1SU, L1SV, L1SW, L1SX, L1SY, L1SZ, L1TA, L1TB, L1TC, L1TD, L1TE, L1TF, L1TG, L1TH, L1TI, L1TJ, L1TK, L1TL, L1TM, L1TN, L1TO, L1TP, L1TQ, L1TR, L1TS, L1TT, L1TU, L1TV, L1TW, L1TX, L1TY, L1TZ, L1UA, L1UB, L1UC, L1UD, L1UE, L1UF, L1UG, L1UH, L1UI, L1UJ, L1UK, L1UL, L1UM, L1UN, L1UO, L1UP, L1UQ, L1UR, L1US, L1UT, L1UU, L1UV, L1UW, L1UX, L1UY, L1UZ, L1VA, L1VB, L1VC, L1VD, L1VE, L1VF, L1VG, L1VH, L1VI, L1VJ, L1VK, L1VL, L1VM, L1VN, L1VO, L1VP, L1VQ, L1VR, L1VS, L1VT, L1VU, L1VV, L1VW, L1VX, L1VY, L1VZ, L1WA, L1WB, L1WC, L1WD, L1WE, L1WF, L1WG, L1WH, L1WI, L1WJ, L1WK, L1WL, L1WM, L1WN, L1WO, L1WP, L1WQ, L1WR, L1WS, L1WT, L1WU, L1WV, L1WW, L1WX, L1WY, L1WZ, L1XA, L1XB, L1XC, L1XD, L1XE, L1XF, L1XG, L1XH, L1XI, L1XJ, L1XK, L1XL, L1XM, L1XN, L1XO, L1XP, L1XQ, L1XR, L1XS, L1XT, L1XU, L1XV, L1XW, L1XX, L1XY, L1XZ, L1YA, L1YB, L1YC, L1YD, L1YE, L1YF, L1YG, L1YH, L1YI, L1YJ, L1YK, L1YL, L1YM, L1YN, L1YO, L1YP, L1YQ, L1YR, L1YS, L1YT, L1YU, L1YV, L1YW, L1YX, L1YY, L1YZ, L1ZA, L1ZB, L1ZC, L1ZD, L1ZE, L1ZF, L1ZG, L1ZH, L1ZI, L1ZJ, L1ZK, L1ZL, L1ZM, L1ZN, L1ZO, L1ZP, L1ZQ, L1ZR, L1ZS, L1ZT, L1ZU, L1ZV, L1ZW, L1ZX, L1ZY, L1ZZ, L1AA, L1AB, L1AC, L1AD, L1AE, L1AF, L1AG, L1AH, L1AI, L1AJ, L1AK, L1AL, L1AM, L1AN, L1AO, L1AP, L1AQ, L1AR, L1AS, L1AT, L1AU, L1AV, L1AW, L1AX, L1AY, L1AZ, L1BA, L1BB, L1BC, L1BD, L1BE, L1BF, L1BG, L1BH, L1BI, L1BJ, L1BK, L1BL, L1BM, L1BN, L1BO, L1BP, L1BQ, L1BR, L1BS, L1BT, L1BU, L1BV, L1BW, L1BX, L1BY, L1BZ, L1CA, L1CB, L1CC, L1CD, L1CE, L1CF, L1CG, L1CH, L1CI, L1CJ, L1CK, L1CL, L1CM, L1CN, L1CO, L1CP, L1CQ, L1CR, L1CS, L1CT, L1CU, L1CV, L1CW, L1CX, L1CY, L1CZ, L1DA, L1DB, L1DC, L1DD, L1DE, L1DF, L1DG, L1DH, L1DI, L1DJ, L1DK, L1DL, L1DM, L1DN, L1DO, L1DP, L1DQ, L1DR, L1DS, L1DT, L1DU, L1DV, L1DW, L1DX, L1DY, L1DZ, L1EA, L1EB, L1EC, L1ED, L1EE, L1EF, L1EG, L1EH, L1EI, L1EJ, L1EK, L1EL, L1EM, L1EN, L1EO, L1EP, L1EQ, L1ER, L1ES, L1ET, L1EU, L1EV, L1EW, L1EX, L1EY, L1EZ, L1FA, L1FB, L1FC, L1FD, L1FE, L1FF, L1FG, L1FH, L1FI, L1FJ, L1FK, L1FL, L1FM, L1FN, L1FO, L1FP, L1FQ, L1FR, L1FS, L1FT, L1FU, L1FV, L1FW, L1FX, L1FY, L1FZ, L1GA, L1GB, L1GC, L1GD, L1GE, L1GF, L1GG, L1GH, L1GI, L1GJ, L1GK, L1GL, L1GM, L1GN, L1GO, L1GP, L1GQ, L1GR, L1GS, L1GT, L1GU, L1GV, L1GW, L1GX, L1GY, L1GZ, L1HA, L1HB, L1HC, L1HD, L1HE, L1HF, L1HG, L1HH, L1HI, L1HJ, L1HK, L1HL, L1HM, L1HN, L1HO, L1HP, L1HQ, L1HR, L1HS, L1HT, L1HU, L1HV, L1HW, L1HX, L1HY, L1HZ, L1IA, L1IB, L1IC, L1ID, L1IE, L1IF, L1IG, L1IH, L1II, L1IJ, L1IK, L1IL, L1IM, L1IN, L1IO, L1IP, L1IQ, L1IR, L1IS, L1IT, L1IU, L1IV, L1IW, L1IX, L1IY, L1IZ, L1JA, L1JB, L1JC, L1JD, L1JE, L1JF, L1JG, L1JH, L1JI, L1JJ, L1JK, L1JL, L1JM, L1JN, L1JO, L1JP, L1JQ, L1JR, L1JS, L1JT, L1JU, L1JV, L1JW, L1JX, L1JY, L1JZ, L1KA, L1KB, L1KC, L1KD, L1KE, L1KF, L1KG, L1KH, L1KI, L1KJ, L1KK, L1KL, L1KM, L1KN, L1KO, L1KP, L1KQ, L1KR, L1KS, L1KT, L1KU, L1KV, L1KW, L1KX, L1KY, L1KZ, L1LA, L1LB, L1LC, L1LD, L1LE, L1LF, L1LG, L1LH, L1LI, L1LJ, L1LK, L1LL, L1LM, L1LN, L1LO, L1LP, L1LQ, L1LR, L1LS, L1LT, L1LU, L1LV, L1LW, L1LX, L1LY, L1LZ, L1MA, L1MB, L1MC, L1MD, L1ME, L1MF, L1MG, L1MH, L1MI, L1MJ, L1MK, L1ML, L1MN, L1MO, L1MP, L1MQ, L1MR, L1MS, L1MT, L1MU, L1MV, L1MW, L1MX, L1MY, L1MZ, L1NA, L1NB, L1NC, L1ND, L1NE, L1NF, L1NG, L1NH, L1NI, L1NJ, L1NK, L1NL, L1NM, L1NN, L1NO, L1NP, L1NQ, L1NR, L1NS, L1NT, L1NU, L1NV, L1NW, L1NX, L1NY, L1NZ, L1OA, L1OB, L1OC, L1OD, L1OE, L1OF, L1OG, L1OH, L1OI, L1OJ, L1OK, L1OL, L1OM, L1ON, L1OO, L1OP, L1OQ, L1OR, L1OS, L1OT, L1OU, L1OV, L1OW, L1OX, L1OY, L1OZ, L1PA, L1PB, L1PC, L1PD, L1PE, L1PF, L1PG, L1PH, L1PI, L1PJ, L1PK, L1PL, L1PM, L1PN, L1PO, L1PP, L1PQ, L1PR, L1PS, L1PT, L1PU, L1PV, L1PW, L1PX, L1PY, L1PZ, L1QA, L1QB, L1QC, L1QD, L1QE, L1QF, L1QG, L1QH, L1QI, L1QJ, L1QK, L1QL, L1QM, L1QN, L1QO, L1QP, L1QQ, L1QR, L1QS, L1QT, L1QU, L1QV, L1QW, L1QX, L1QY, L1QZ, L1RA, L1RB, L1RC, L1RD, L1RE, L1RF, L1RG, L1RH, L1RI, L1RJ, L1RK, L1RL, L1RM, L1RN, L1RO, L1RP, L1RQ, L1RR, L1RS, L1RT, L1RU, L1RV, L1RW, L1RX, L1RY, L1RZ, L1SA, L1SB, L1SC, L1SD, L1SE, L1SF, L1SG, L1SH, L1SI, L1SJ, L1SK, L1SL, L1SM, L1SN, L1SO, L1SP, L1SQ, L1SR, L1SS, L1ST, L1SU, L1SV, L1SW, L1SX, L1SY, L1SZ, L1TA, L1TB, L1TC, L1TD, L1TE, L1TF, L1TG, L1TH, L1TI, L1TJ, L1TK, L1TL, L1TM, L1TN, L1TO, L1TP, L1TQ, L1TR, L1TS, L1TT, L1TU, L1TV, L1TW, L1TX, L1TY, L1TZ, L1UA, L1UB, L1UC, L1UD, L1UE, L1UF, L1UG, L1UH, L1UI, L1UJ, L1UK, L1UL, L1UM, L1UN, L1UO, L1UP, L1UQ, L1UR, L1US, L1UT, L1UU, L1UV, L1UW, L1UX, L1UY, L1UZ, L1VA, L1VB, L1VC, L1VD, L1VE, L1VF, L1VG, L1VH, L1VI, L1VJ, L1VK, L1VL, L1VM, L1VN, L1VO, L1VP, L1VQ, L1VR, L1VS, L1VT, L1VU, L1VV, L1VW, L1VX, L1VY, L1VZ, L1WA, L1WB, L1WC, L1WD, L1WE, L1WF, L1WG, L1WH, L1WI, L1WJ, L1WK, L1WL, L1WM, L1WN, L1WO, L1WP, L1WQ, L1WR, L1WS, L1WT, L1WU, L1WV, L1WW, L1WX, L1WY, L1WZ, L1XA, L1XB, L1XC, L1XD, L1XE, L1XF, L1XG, L1XH, L1XI, L1XJ, L1XK, L1XL, L1XM, L1XN, L1XO, L1XP, L1XQ, L1XR, L1XS, L1XT, L1XU, L1XV, L1XW, L1XX, L1XY, L1XZ, L1YA, L1YB, L1YC, L1YD, L1YE, L1YF, L1YG, L1YH, L1YI, L1YJ, L1YK, L1YL, L1YM, L1YN, L1YO, L1YP, L1YQ, L1YR, L1YS, L1YT, L1YU, L1YV, L1YW, L1YX, L1YY, L1YZ, L1ZA, L1ZB, L1ZC, L1ZD, L1ZE, L1ZF, L1ZG, L1ZH, L1ZI, L1ZJ, L1ZK, L1ZL, L1ZM, L1ZN, L1ZO, L1ZP, L1ZQ, L1ZR, L1ZS, L1ZT, L1ZU, L1ZV, L1ZW, L1ZX, L1ZY, L1ZZ, L1AA, L1AB, L1AC, L1AD, L1AE, L1AF, L1AG, L1AH, L1AI, L1AJ, L1AK, L1AL, L1AM, L1AN, L1AO, L1AP, L1AQ, L1AR, L1AS, L1AT, L1AU, L1AV, L1AW, L1AX, L1AY, L1AZ, L1BA, L1BB, L1BC, L1BD, L1BE, L1BF, L1BG, L1BH, L1BI, L1BJ, L1BK, L1BL, L1BM, L1BN, L1BO, L1BP, L1BQ, L1BR, L1BS, L1BT, L1BU, L1BV, L1BW, L1BX, L1BY, L1BZ, L1CA, L1CB, L1CC, L1CD, L1CE, L1CF, L1CG, L1CH, L1CI, L1CJ, L1CK, L1CL, L1CM, L1CN, L1CO, L1CP, L1CQ, L1CR, L1CS, L1CT, L1CU, L1CV, L1CW, L1CX, L1CY, L1CZ, L1DA, L1DB, L1DC, L1DD, L1DE, L1DF, L1DG, L1DH, L1DI, L1DJ, L1DK, L1DL, L1DM, L1DN, L1DO, L1DP, L1DQ, L1DR, L1DS, L1DT, L1DU, L1DV, L1DW, L1DX, L1DY, L1DZ, L1EA, L1EB, L1EC, L1ED, L1EE, L1EF, L1EG, L1EH, L1EI, L1EJ, L1EK, L1EL, L1EM, L1EN, L1EO, L1EP, L1EQ, L1ER, L1ES, L1ET, L1EU, L1EV, L1EW, L1EX, L1EY, L1EZ, L1FA, L1FB, L1FC, L1FD, L1FE, L1FF, L1FG, L1FH, L1FI, L1FJ, L1FK, L1FL, L1FM, L1FN, L1FO, L1FP, L1FQ, L1FR, L1FS, L1FT, L1FU, L1FV, L1FW, L1FX, L1FY, L1FZ, L1GA, L1GB, L1GC, L1GD, L1GE, L1GF, L1GG, L1GH, L1GI, L1GJ, L1GK, L1GL, L1GM, L1GN, L1GO, L1GP, L1GQ, L1GR, L1GS, L1GT, L1GU, L1GV, L1GW, L1GX, L1GY, L1GZ, L1HA, L1HB, L1HC, L1HD, L1HE, L1HF, L1HG, L1HH, L1HI, L1HJ, L1HK, L1HL, L1HM, L1HN, L1HO, L1HP, L1HQ, L1HR, L1HS, L1HT, L1HU, L1HV, L1HW, L1HX, L1HY, L1HZ, L1IA, L1IB, L1IC, L1ID, L1IE, L1IF, L1IG, L1IH, L1II, L1IJ, L1IK, L1IL, L1IM, L1IN, L1IO, L1IP, L1IQ, L1IR, L1IS, L1IT, L1IU, L1IV, L1IW, L1IX, L1IY, L1IZ, L1JA, L1JB, L1JC, L1JD, L1			
--	--	--	--

Note1)Sink type:24V/12V(COM), Source type:0V(COM)

Note2)The assignment of the dedicated input signal "STOP" is fixed.

- The signals assigned as dedicated inputs can be used as general-purpose inputs during program execution. Note that for safety proposes, these should not be shared with the general-purpose inputs other than for numeric value inputs. The signals assigned as dedicated outputs cannot be used in the program. An alarm will occur during operation if used.

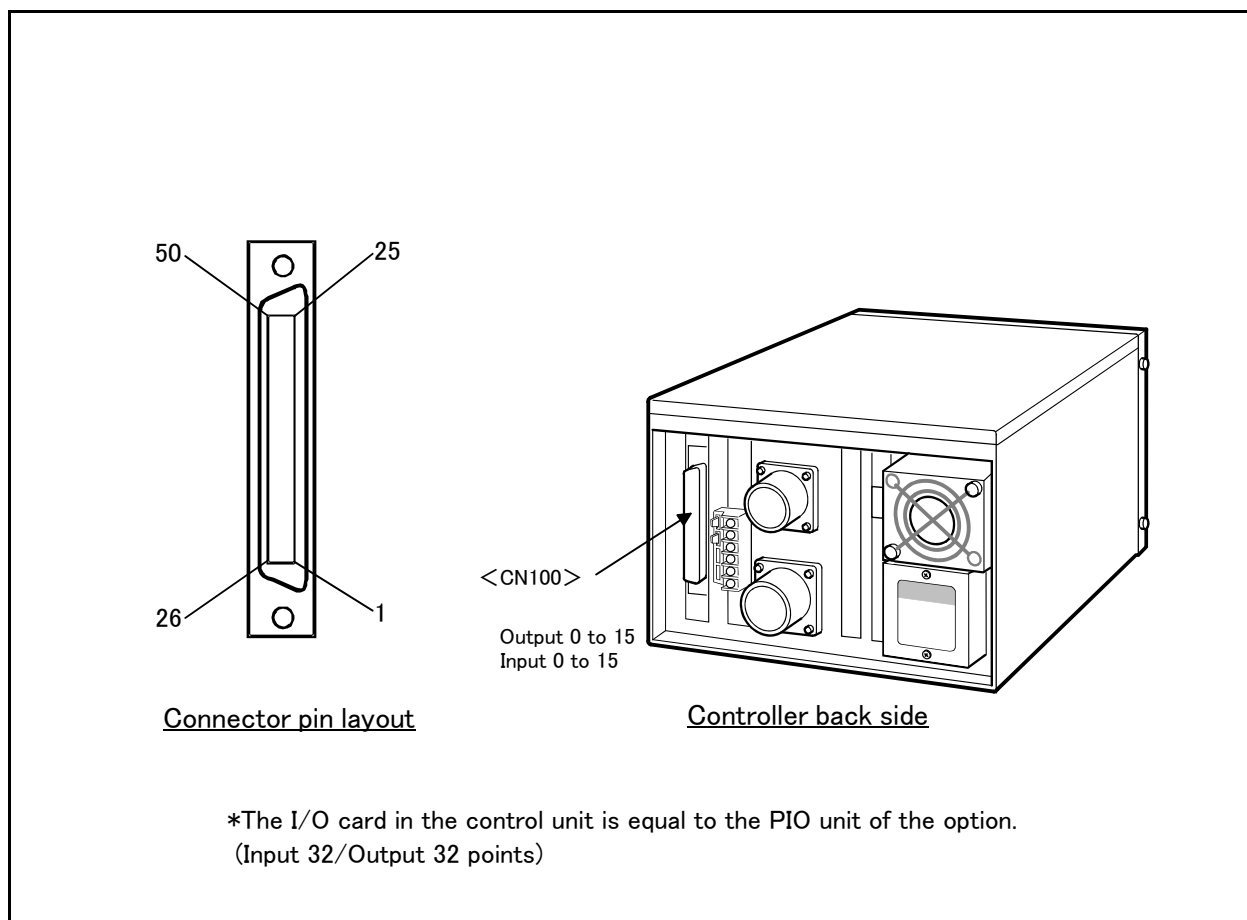


Fig.3-9 : Parallel input/output unit (in the control unit) connection and pin layout

3.8 Options

■ What are options?

There are a variety of options for the robot designed to make the setting up process easier for user needs.

User installation is required for the options.

Options come in two types: "set options" and "single options".

1. Set options.....A combination of single options and parts that together, form a set for serving some purpose.
2. Single options.....That are configured from the fewest number of required units of a part.
Please choose user's purpose additionally.

(1) Teaching pendant (T/B)

- Order type: R28TB :Cable length 7m
 R28TB-15 :Cable length 15m

Note) There is a cable length 15m as special specification. Confirm the delivery date.

■ Outline



This is used to create, edit and control the program, teach the operation position and for jog feed, etc.

For safety proposes, a 3-position deadman switch is mounted.^{Note1)}

If there are several robots, one teaching pendant can be used by connecting it to the respective robot.

■ Configuration

Table 3-8 : Configuration device

Part name	Type	Qty.	Mass(kg)	Remarks
Teaching pendant	R28TB	Either one pc.	2.0	Cable length is 7m. Hand strap is attached.
	R28TB-15		2.3	Cable length is 15m. Hand strap is attached.

■ Specifications

Table 3-9 : Specifications

Items	Specifications	Remarks
Outline dimensions	153(W) x 203(H) x 70(D) (refer to outline drawing)	
Body color	Light gray (reference Munsell color: 0.08GY7.64/0.81)	
Mass	Approx. 0.8kg (only arm, excluding cable)	
Connection method	Connection with controller and round connector (30-pin)	
Interface	RS-422	
Display method	LCD method: 16 characters x 4 lines, LCD illumination: with backlight	
Operation section	28 keys	
Protection specifications	IP65	Note2)

Note2) The manual operation section of the teaching pendant has a protection method that complies with the IEC Standards IP65 (protection type).

[Reference] IPProtection against water infiltration as specified in IP65 indicates a protective structure that is not harmfully affected when $12.5 \pm 5\%$ liters of water is supplied from a test device at a position approx. 3m away in various directions and a water pressure of 30kPa at the nozzle section. The water is filled one minute per 1m^2 of test device surface area for a total of three minutes.

Note1) <3-position deadman switch>

In ISO/10218 (1992) and JIS-B8433 (1993), this is defined as an "enable device". These standards specify that the robot operation using the teaching pendant is enabled only when the "enable device" is at a specified position. With the Mitsubishi Electric industrial robot, the above "enable device" is configured of an "Enable/Disable switch" and "Deadman switch".

The 3-position deadman switch has three statuses. The following modes are entered according to the switch state.

"Not pressed" The robot does not operate. *)

"Pressed lightly" The robot can be operated and teaching is possible.

"Pressed with force" The robot does not operate. *)

*) Operations, such as program editing and status display, other than robot operation are possible.

Safety is secured as the servo power is turned OFF simultaneously with the input of the emergency stop.

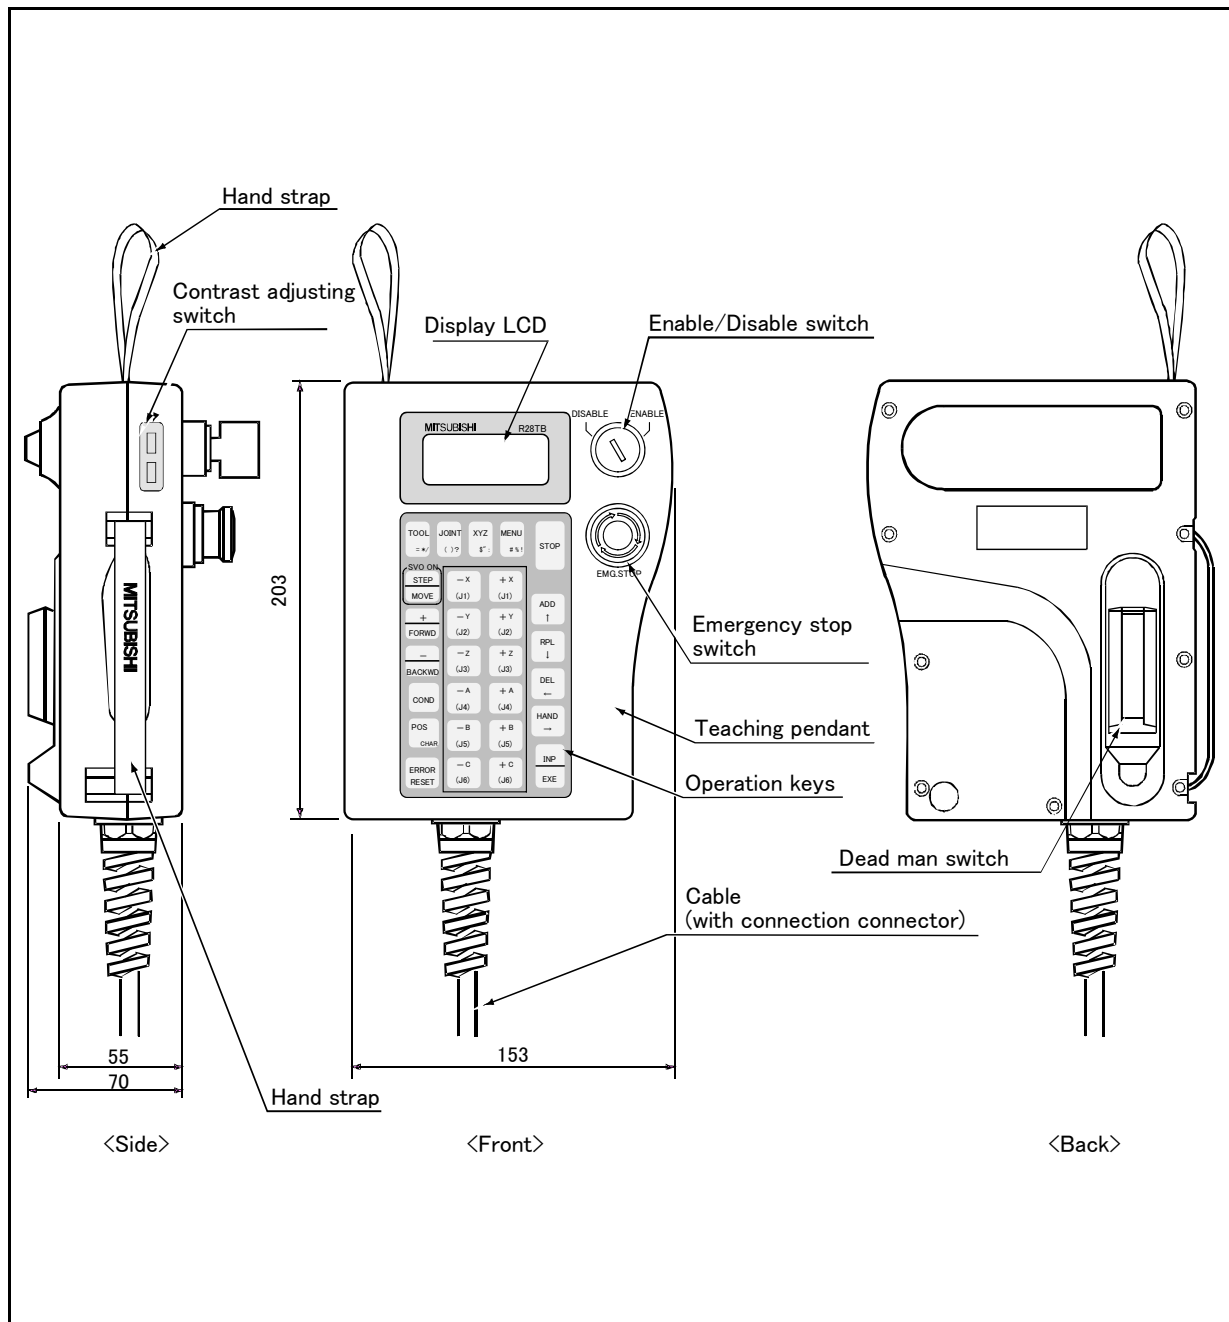


Fig.3-10 : Outside dimensions of teaching pendant

■ Installation method

The teaching pendant is connected to the T/B connector on the front of the controller.

■ Key layout and main functions

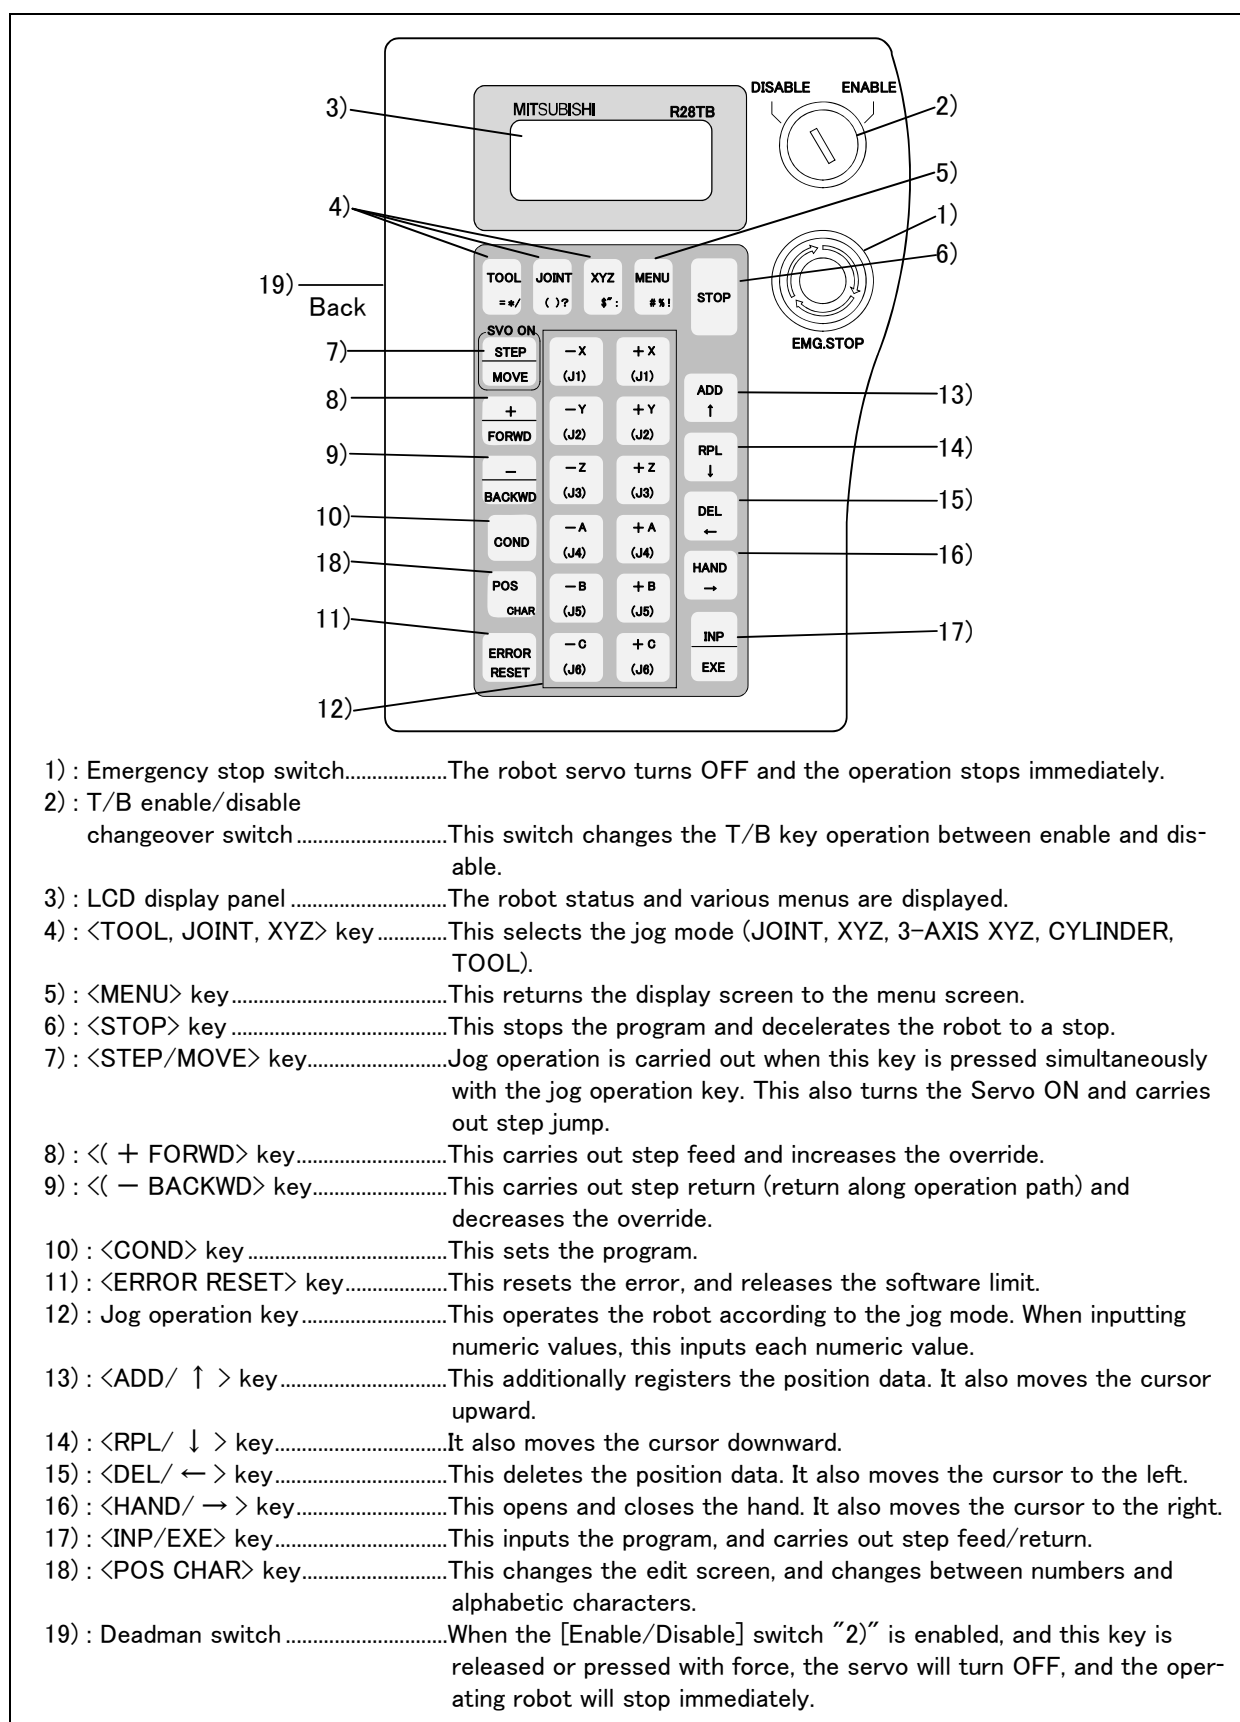


Fig.3-11 : Teaching pendant key layout and main functions

(2) Pneumatic hand interface

- Order type: 2A-RZ365(Sink type)
2A-RZ375(Source type)

■ Outline



This interface is required to use the robot arm's hand output signals. This interface is pre-installed on the controller.

- Up to eight hand output points can be used with this interface.
- The eight hand input points can be used without this interface.
- When using more than eight hand input/output points, install the "Parallel I/O unit". Refer to [Page 59, "Parallel I/O unit"](#) for detail.

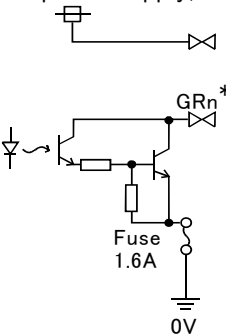
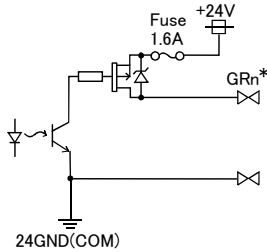
■ Configuration

Table 3-10 : Configuration device

Part name	Type	Qty.	Mass(kg)	Remarks
Pneumatic hand interface	2A-RZ365/ 2A-RZ375	1pc.	0.1	Output 8 points expansion. 2A-RZ365 is the sink type. 2A-RZ375 is the source type.

■ Specifications

Table 3-11 : Specifications

Item		Specification	Internal circuit
Type		Transistor output	<p><Sink type></p> <p>24V</p> <p>(Internal power supply)</p>  <p>GRn*</p> <p>Fuse 1.6A</p> <p>0V</p>
No. of output points		8	
Insulation method		Photo coupler insulation	
Rated load voltage		DC24V	
Rated load voltage range		DC21.6 to 26.4VDC	
Max. current load		0.1A/ 1 point (100%)	
Current leak with power OFF		0.1mA or less	
Maximum voltage drop with power ON		DC0.9V(TYP.)	
Response time	OFF-ON	2ms or less (hardware response time)	
	ON-OFF	2 ms or less (resistance load) (hardware response time)	
Fuse rating		Fuses 1.6A (each one common)	
Common method		8 points, 1 common	
			<p><Source type></p>  <p>Fuse 1.6A</p> <p>+24V</p> <p>GRn*</p> <p>24GND(COM)</p> <p>* GRn = GR1 ~ GR8</p>

■ Installation method

This is mounted on the control unit (RZ386 or RZ387 card) in the controller.

Securely insert the pneumatic hand interface (2A-RZ365/375) into the CNHNDOUT/CNHND connector on the control unit.

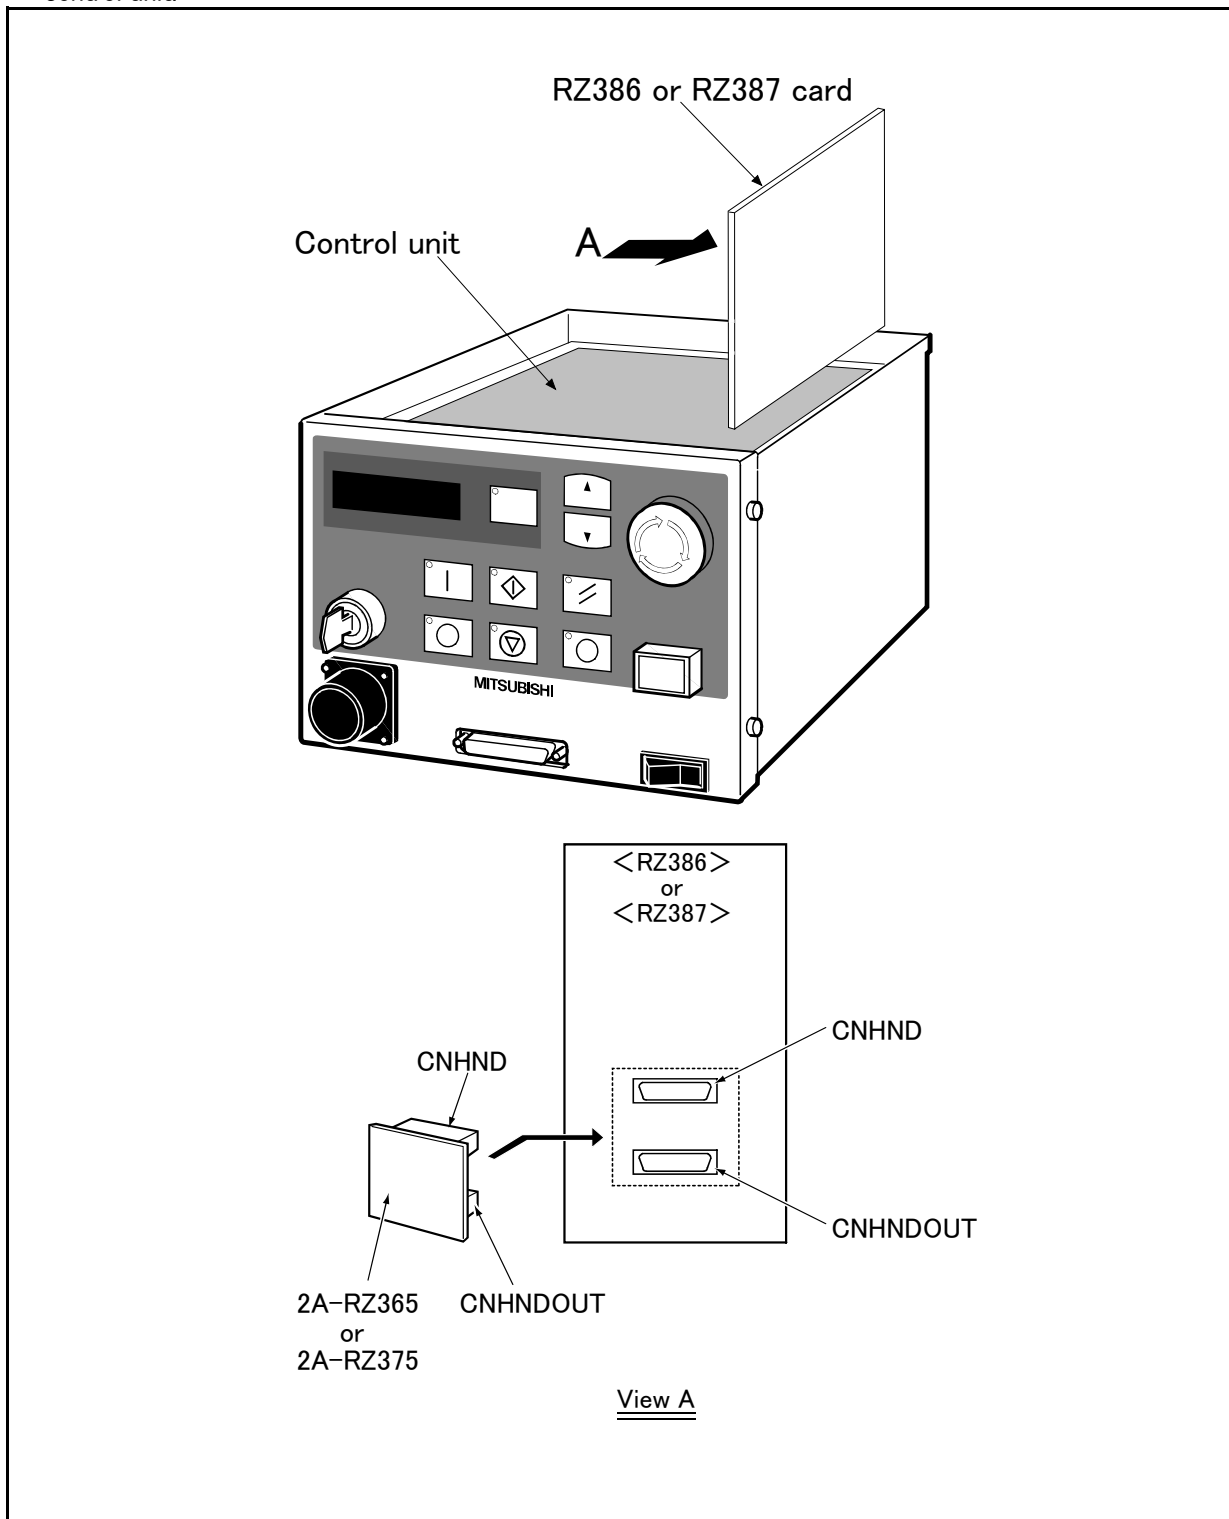


Fig.3-12 : Installation of pneumatic hand interface

Note) The hand output doesn't work correctly in the case of "RZ386" + "RZ365" or "RZ387" + "RZ375" combination.

Choose either of sink type/source type properly, and use it.

(3) Expansion option box

■ Order type : ● CR1-EB3

■ Outline



By installing this expansion option box to the side of the controller, the expansion serial interface, CC-Link interface, Ethernet interface, Additional interface and PROFIBUS interface can be used.
Up to three option cards can be mounted.

■ Configuration

Table 3-12 : Configuration device

Part name	Type	Qty.	Mass(kg) Note1)	Remarks
Expansion option box	CR1-EB3	1	1.7	With rubber foot
Installation screw		4	—	

Note1) Mass indicates one set.

■ Specifications

Table 3-13 : Specifications

Item	Unit	Specifications	Remarks
Number of slot	slot	3	RT-Bus 1, 2, 3
Power supply method		Power supply is supplied from controller by the RT-Bus coupling(+5V/SG)	
Current value	A	Max. 3	Max. 1A/slot
Ambient temperature	deg.	0 to 40	
Ambient humidity	%RH	45 to 85	Without dew drops
Grounding		D class grounding earth	Grounding from external terminal
Structure		Self-contained floor type opened structure	Note1)
Outside dimensions	mm	85(W) x 290(D) x 165(H)	
Mass	kg	Approx. 3	

Note1) Self-contained floor type, under the condition combined with the body.

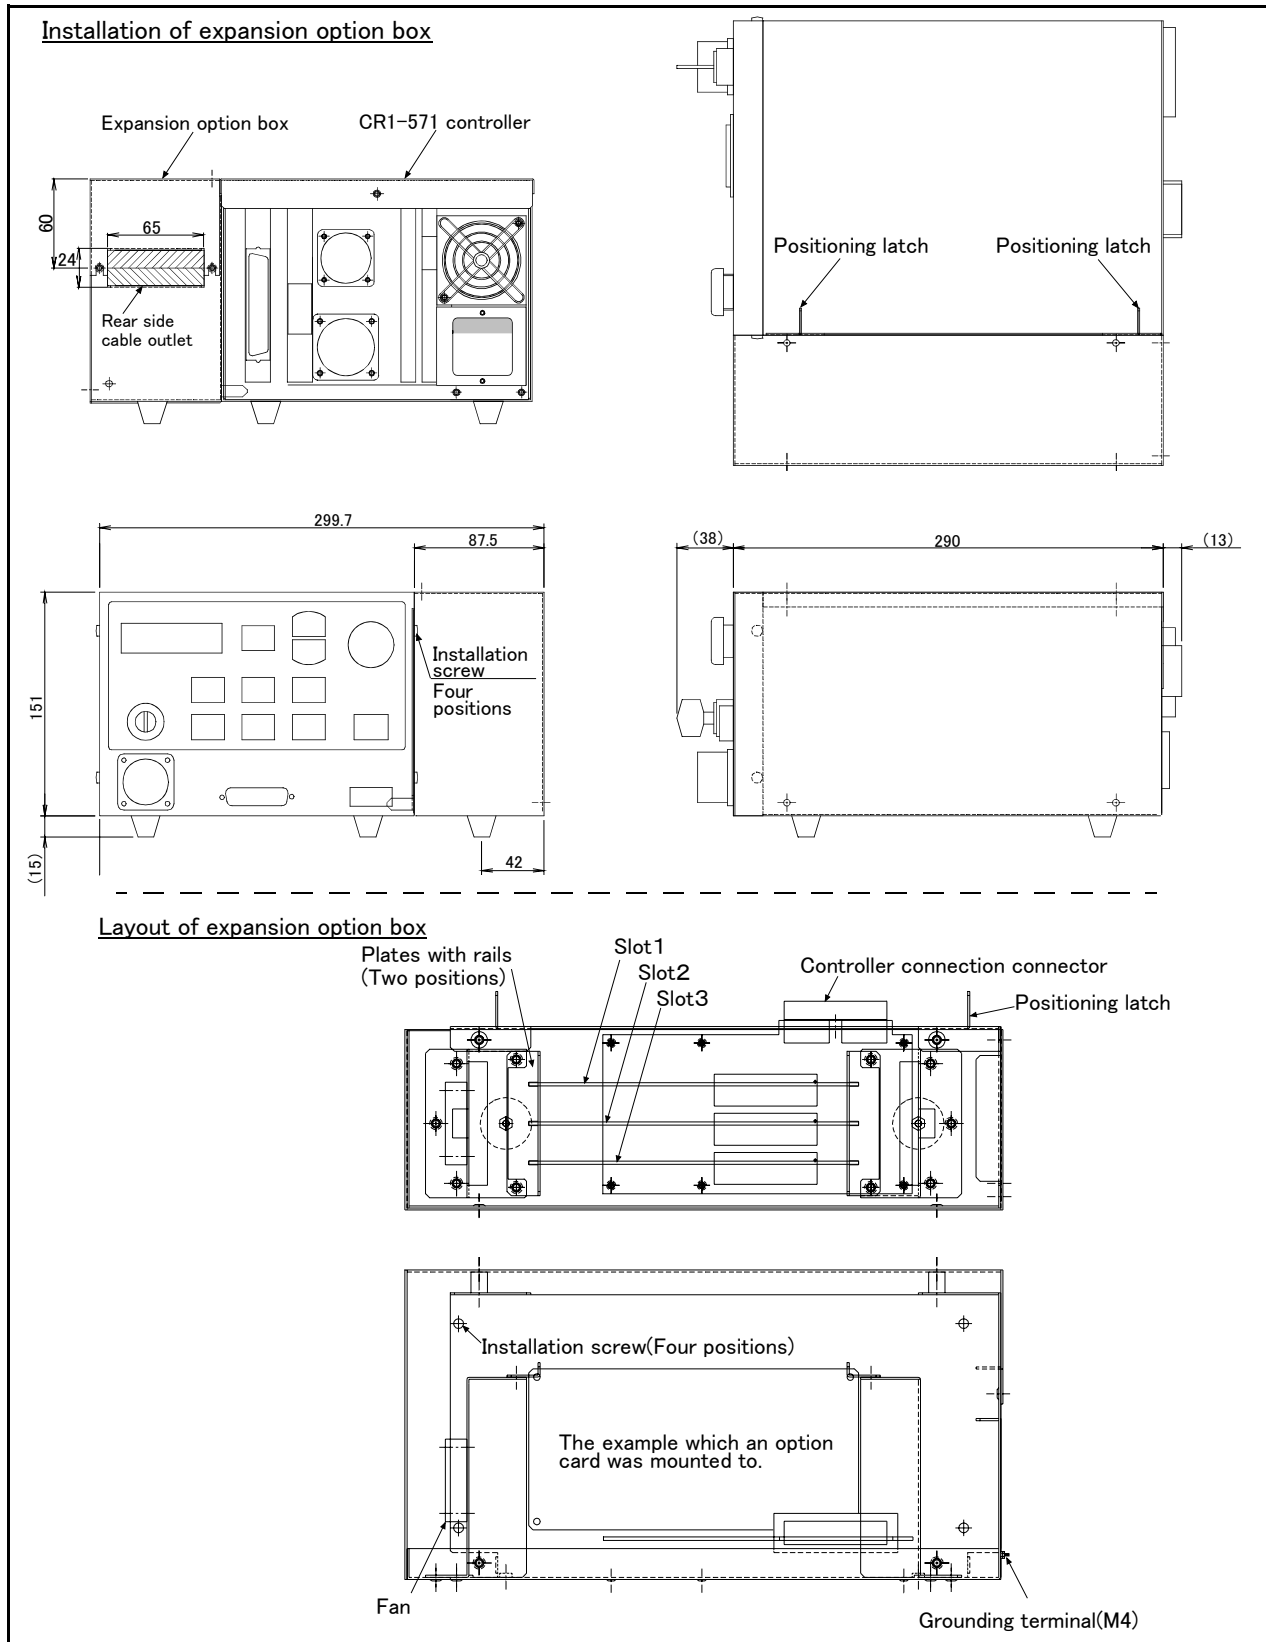


Fig.3-13 : Outside dimensions and layout

■ Installation method

Remove the side plate of the controller, connect the connectors, and fix to the controller with the four fixing screws in the expansion option box.

The option cards mounted in the slot are fixed with the plates with rails.

The cables required for the option card are lead out from the cable outlet on the rear side.

(4) Parallel I/O unit

- Order type: 2A-RZ361(Sink type)
2A-RZ371(Source type)

■ Outline



This is used to expand the external inputs and outputs.

- The connection cable is not included. Prepare the optional external input/output cable (2A-CBL05 or 2A-CBL15).

■ Configuration

Table 3-14 : Configuration device

Part name	Type	Qty.	Mass(kg)	Remarks
Parallel I/O unit	2A-RZ361/ 2A-RZ371	1 pc.	0.7	Input/output 32 points/32 points 2A-RZ361 is the sink type. 2A-RZ371 is the source type.
Robot I/O link connection connector	NETcable-1	2 sets	–	Connector with pins. The cable must be prepared and wired by the customer.
Power connection connector	DCCable-2	1 set	–	Connector with pins. The cable must be prepared and wired by the customer.
Terminator	R-TM	1 pc.	–	100Ω (1/4W)

■ Specifications

- 1) Up to eight stations can be connected to this unit. (One station occupies one unit.)

One unit is built into the controller as a standard, so up to seven units can be installed as expansions.

- 2) The power supply (24V) must be prepared by the customer and connected with the power connection cable (DCCable-2)

A separate 24V power supply is required for the input/output circuit wiring.

The detailed specifications of the input/output circuit are the same as the parallel input/output unit mounted as a standard. Refer to [Page 46](#), "3.7 Parallel input/output unit" for details.

Table 3-15 : Electrical specifications of input circuits

Item		Specification	Internal circuit
Type		DC input	<div> <p><Sink type></p> </div> <div> <p><Source type></p> </div>
Number of input points		32	
Insulation method		Photo coupler insulation	
Rated input voltage		12VDC/24VDC	
Rated input current		Approx 3mA/7mA	
Working voltage range		10.2 to 26.4VDC(Ripple factor should be less than 5%)	
ON voltage/ON current		8VDC or more/ 2mA or more	
OFF voltage/ OFF current		4VDC or less/ 1mA or less	
Input resistance		Approx. 3.3kΩ	
Response time	OFF-ON	10ms or less (24VDC)	
	ON-OFF	10ms or less (24VDC)	
Common method		8 points per common	
External cable connection method		Connector	

Table 3-16 : Electrical specifications for the output circuits

Item		Specification	Internal circuit
Type		Transistor output	<p><Sink type></p> <p><Source type></p>
No. of output points		32	
Insulation method		Photo-coupler insulation	
Rated load voltage		12VDC/24VDC	
Rated load voltage range		10.2 to 30VDC(peak voltage 30VDC)	
Max. load current		0.1A/point (100%)	
Leakage current at OFF		0.1mA or less	
Max. voltage drop at ON		0.9VDC(TYP.)	
Response time	OFF-ON	2ms or less (hardware response time)	
	ON-OFF	2ms or less (Resistance load) (hardware response time)	
Fuse rating		Fuse 3.2A (one per common) Replacement not possible	
Common method		8 points per common (common terminal: 8 points)	
External wire connection method		Connector	
External power supply	Voltage	12VDC/24VDC(10.2 to 30VDC)	
	Current	60mA (TYP. 24VDC per common) (base drive current)	

**CAUTION**

The output circuit protective fuses prevent failure in case of load short-circuit and improper connections. Please do not connect loads that cause the current to exceed the maximum rated current. If the maximum rated current is exceeded, the internal transistors may be damaged.

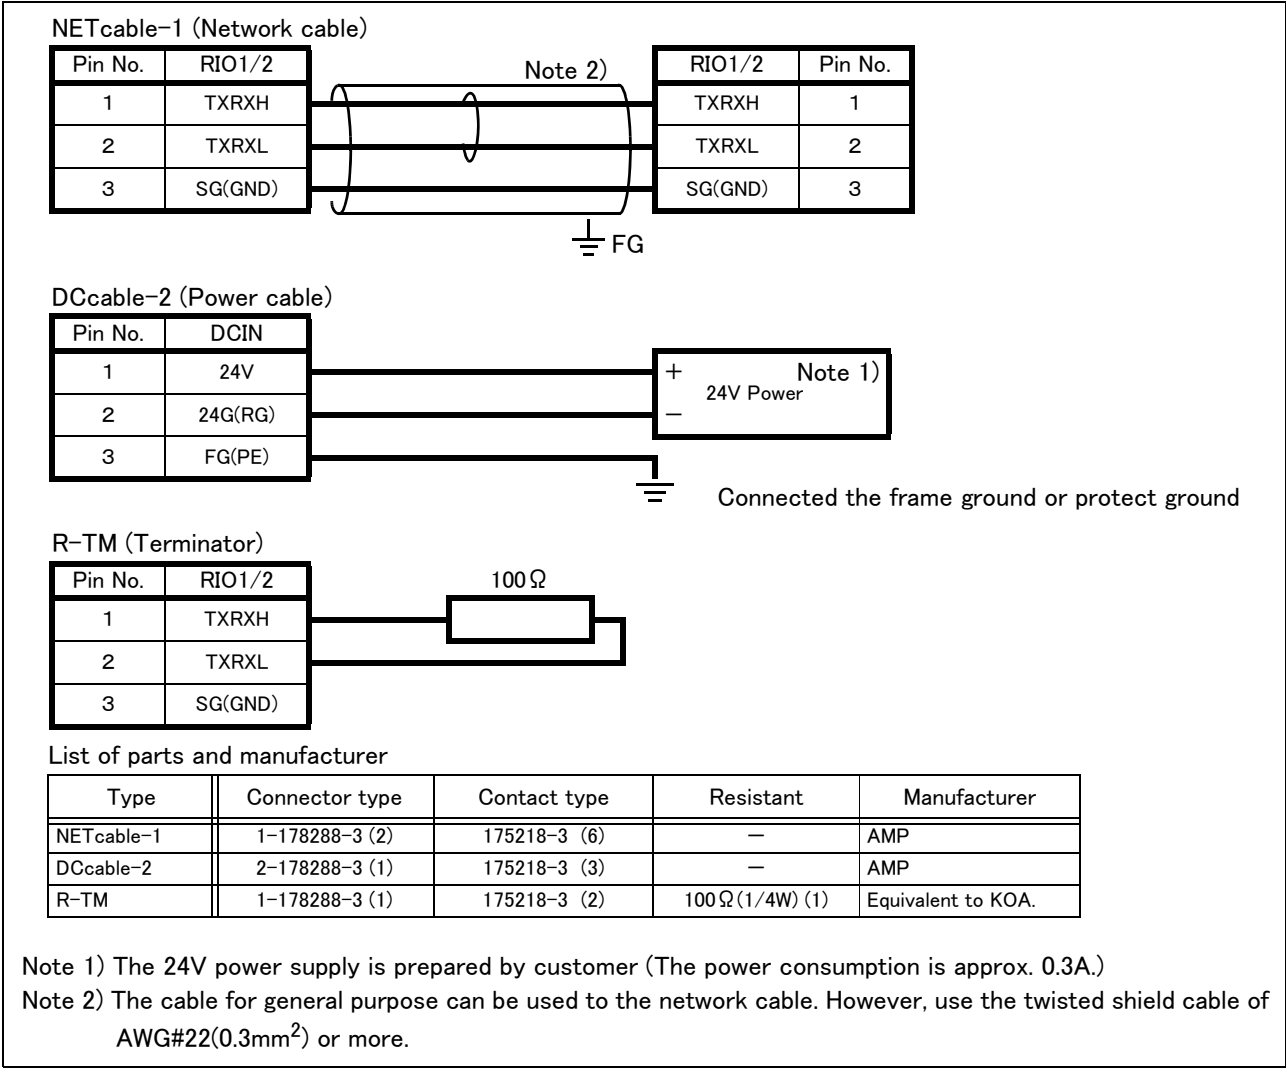


Fig.3-14 : Specifications for the connection cable

■ Installation method

The expansion parallel input/output unit is installed outside of the controller. Connect with the network connection cable (NETcable-1) from the RIO1 connector in the rear of the controller. (Terminator is connected at the time of shipment)

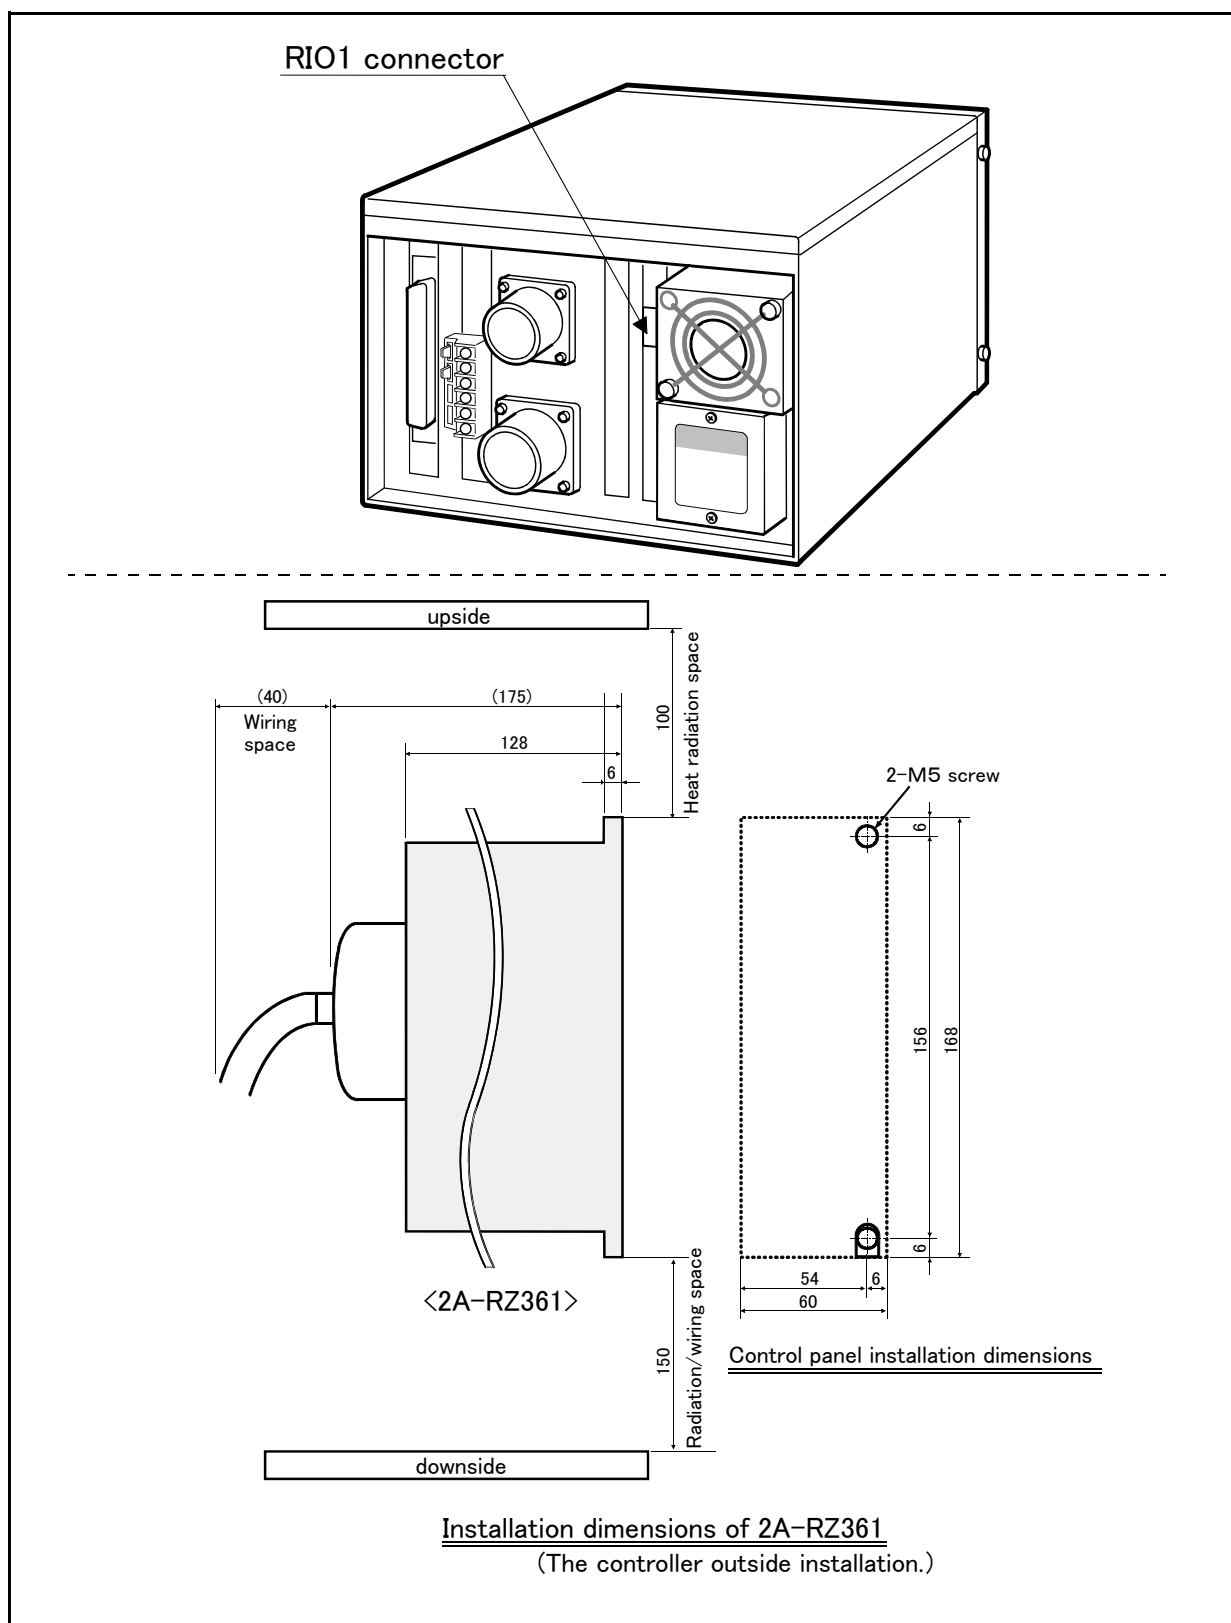


Fig.3-15 : Installing the parallel input/output unit

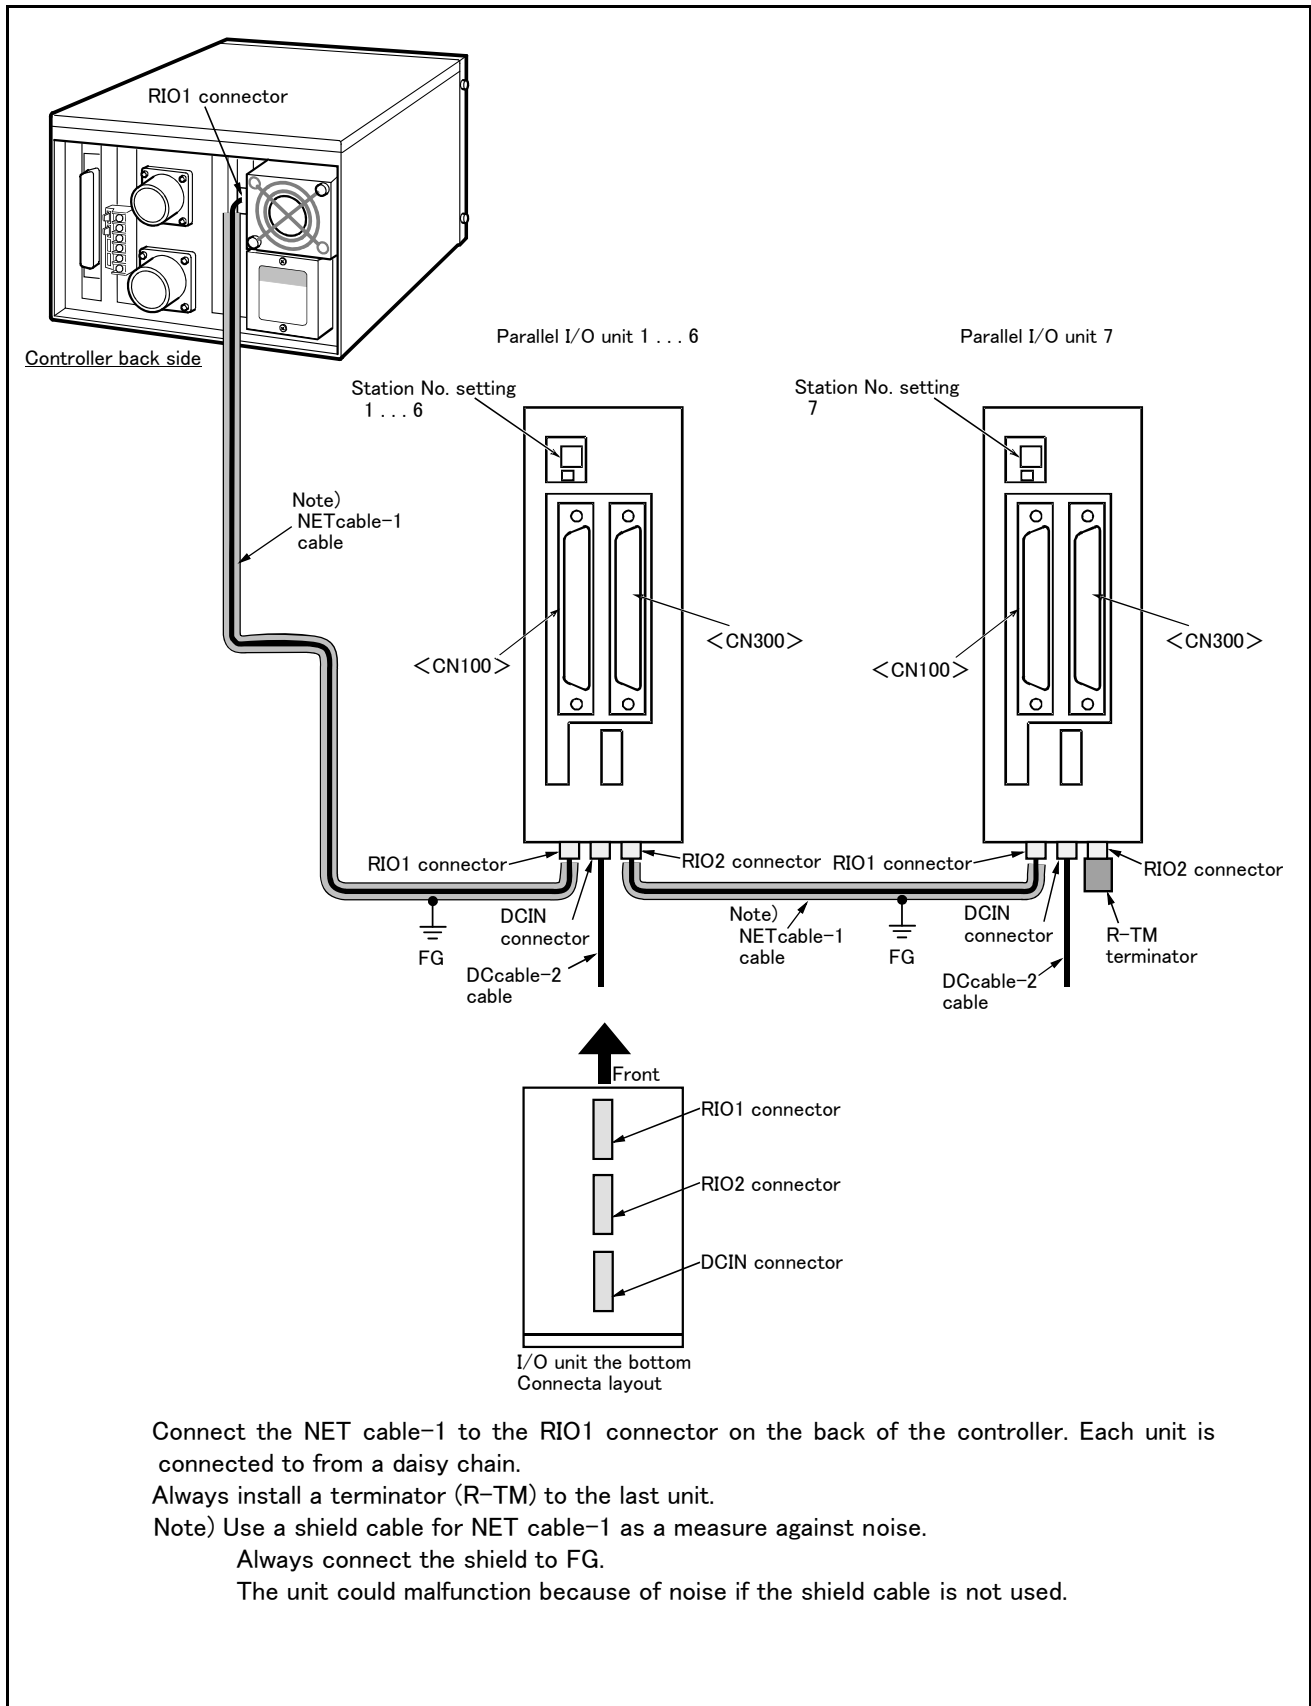


Fig.3-16 : Connection method of expansion parallel input/output unit

■ Parallel I/O interface (First expansion unit)

Table 3-17 : Connector CN100pin No. and signal assignment list (2A-CBL □□)

Pin No.	Line color	Function name		Pin No.	Line color	Function name	
		General-purpose	Dedicated/power supply, common			General-purpose	Dedicated/power supply, common
1	Orange/Red A		FG	26	Orange/Blue A		FG
2	Gray/Red A		0V:For pins 4-7, 10-13	27	Gray/Blue A		0V:For pins 29-32, 35-38
3	White/Red A		12V/24V:For pins 4-7	28	White/Blue A		12V/24V:For pins 29-32
4	Yellow/Red A	General-purpose output 32		29	Yellow/Blue A	General-purpose output 36	
5	Pink/Red A	General-purpose output 33		30	Pink/Blue A	General-purpose output 37	
6	Orange/Red B	General-purpose output 34		31	Orange/Blue B	General-purpose output 38	
7	Gray/Red B	General-purpose output 35		32	Gray/Blue B	General-purpose output 39	
8	White/Red B		0V:For pins 4-7, 10-13	33	White/Blue B		0V:For pins 29-32, 35-38
9	Yellow/Red B		12V/24V:For pins 10-13	34	Yellow/Blue B		12V/24V:For pins 35-38
10	Pink/Red B	General-purpose output 40		35	Pink/Blue B	General-purpose output 44	
11	Orange/Red C	General-purpose output 41		36	Orange/Blue C	General-purpose output 45	
12	Gray/Red C	General-purpose output 42		37	Gray/Blue C	General-purpose output 46	
13	White/Red C	General-purpose output 43		38	White/Blue C	General-purpose output 47	
14	Yellow/Red C		COM0:For pins 15-22 ^{Note1)}	39	Yellow/Blue C		COM1:For pins 40-47 ^{Note1)}
15	Pink/Red C	General-purpose input 32		40	Pink/Blue C	General-purpose input 40	
16	Orange/Red D	General-purpose input 33		41	Orange/Blue D	General-purpose input 41	
17	Gray/Red D	General-purpose input 34		42	Gray/Blue D	General-purpose input 42	
18	White/Red D	General-purpose input 35		43	White/Blue D	General-purpose input 43	
19	Yellow/Red D	General-purpose input 36		44	Yellow/Blue D	General-purpose input 44	
20	Pink/Red D	General-purpose input 37		45	Pink/Blue D	General-purpose input 45	
21	Orange/Red E	General-purpose input 38		46	Orange/Blue E	General-purpose input 46	
22	Gray/Red E	General-purpose input 39		47	Gray/Blue E	General-purpose input 47	
23	White/Red E		Reserved	48	White/Blue E		Reserved
24	Yellow/Red E		Reserved	49	Yellow/Blue E		Reserved
25	Pink/Red E		Reserved	50	Pink/Blue E		Reserved

Note1) Sink type:24V/12V(COM), Source type:0V(COM)

Table 3-18 : Connector CN300pin No. and signal assignment list (2A-CBL □□)

Pin No.	Line color	Function name		Pin No.	Line color	Function name	
		General-purpose	Dedicated/power supply, common			General-purpose	Dedicated/power supply, common
1	Orange/Red A		FG	26	Orange/Blue A		FG
2	Gray/Red A		0V:For pins 4-7, 10-13	27	Gray/Blue A		0V:For pins 29-32, 35-38
3	White/Red A		12V/24V:For pins 4-7	28	White/Blue A		12V/24V:For pins 29-32
4	Yellow/Red A	General-purpose output 48		29	Yellow/Blue A	General-purpose output 52	
5	Pink/Red A	General-purpose output 49		30	Pink/Blue A	General-purpose output 53	
6	Orange/Red B	General-purpose output 50		31	Orange/Blue B	General-purpose output 54	
7	Gray/Red B	General-purpose output 51		32	Gray/Blue B	General-purpose output 55	
8	White/Red B		0V:For pins 4-7, 10-13	33	White/Blue B		0V:For pins 29-32, 35-38
9	Yellow/Red B		12V/24V:For pins 10-13	34	Yellow/Blue B		12V/24V:For pins 35-38
10	Pink/Red B	General-purpose output 56		35	Pink/Blue B	General-purpose output 60	
11	Orange/Red C	General-purpose output 57		36	Orange/Blue C	General-purpose output 61	
12	Gray/Red C	General-purpose output 58		37	Gray/Blue C	General-purpose output 62	
13	White/Red C	General-purpose output 59		38	White/Blue C	General-purpose output 63	
14	Yellow/Red C		COM0:For pins 15-22 ^{Note1)}	39	Yellow/Blue C		COM1:For pins 40-47 ^{Note1)}
15	Pink/Red C	General-purpose input 48		40	Pink/Blue C	General-purpose input 56	
16	Orange/Red D	General-purpose input 49		41	Orange/Blue D	General-purpose input 57	
17	Gray/Red D	General-purpose input 50		42	Gray/Blue D	General-purpose input 58	
18	White/Red D	General-purpose input 51		43	White/Blue D	General-purpose input 59	
19	Yellow/Red D	General-purpose input 52		44	Yellow/Blue D	General-purpose input 60	
20	Pink/Red D	General-purpose input 53		45	Pink/Blue D	General-purpose input 61	
21	Orange/Red E	General-purpose input 54		46	Orange/Blue E	General-purpose input 62	
22	Gray/Red E	General-purpose input 55		47	Gray/Blue E	General-purpose input 63	
23	White/Red E		Reserved	48	White/Blue E		Reserved
24	Yellow/Red E		Reserved	49	Yellow/Blue E		Reserved
25	Pink/Red E		Reserved	50	Pink/Blue E		Reserved

Note1) Sink type:24V/12V(COM), Source type:0V(COM)

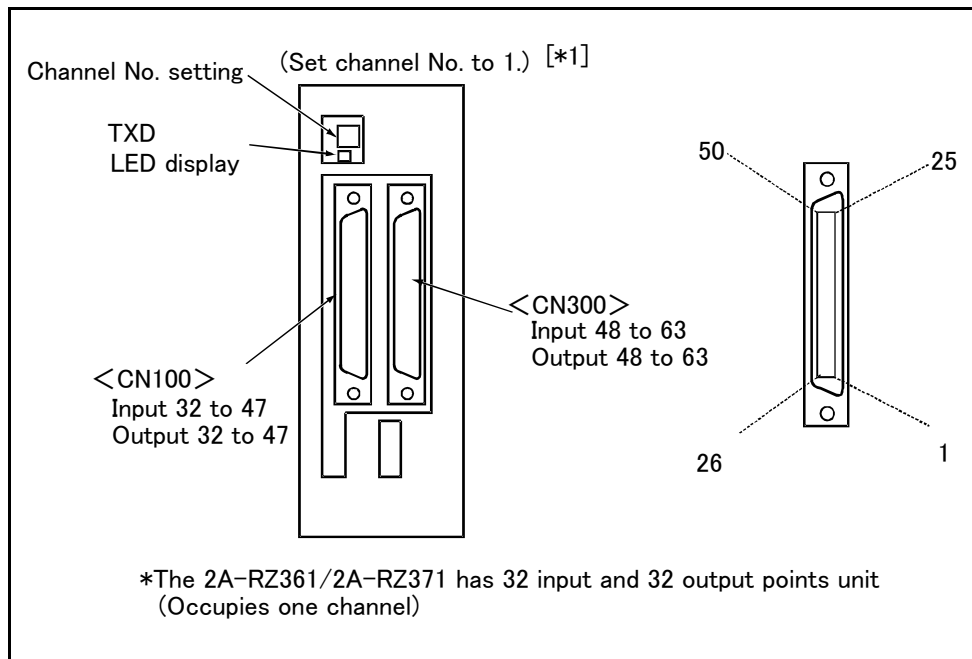


Fig.3-17 : Parallel input/output unit <2A-RZ361/2A-RZ371:First expansion> connection and pin layout

⚠ CAUTION

[*1] For the 1st expansion unit, set the channel No. to "1".

The channel No. of 8 to F is used for the maker test. If any value of 8 to F is set, it may be dangerous since the robot unexpectedly moves. Don't set any value of 8 to F.

■ Parallel I/O interface (Second expansion unit)

Table 3-19 : Connector CN100pin No. and signal assignment list (2A-CBL □□)

Pin No.	Line color	Function name		Pin No.	Line color	Function name	
		General-purpose	Dedicated/power supply, common			General-purpose	Dedicated/power supply, common
1	Orange/Red A	General-purpose output 64	FG	26	Orange/Blue A	General-purpose output 68	FG
2	Gray/Red A		0V:For pins 4-7, 10-13	27	Gray/Blue A		0V:For pins 29-32, 35-38
3	White/Red A		12V/24V:For pins 4-7	28	White/Blue A		12V/24V:For pins 29-32
4	Yellow/Red A			29	Yellow/Blue A		
5	Pink/Red A			30	Pink/Blue A		
6	Orange/Red B	General-purpose output 66	0V:For pins 4-7, 10-13 12V/24V:For pins 10-13	31	Orange/Blue B	General-purpose output 70	0V:For pins 29-32, 35-38 12V/24V:For pins 35-38
7	Gray/Red B	General-purpose output 67		32	Gray/Blue B	General-purpose output 71	
8	White/Red B			33	White/Blue B		
9	Yellow/Red B			34	Yellow/Blue B		
10	Pink/Red B	General-purpose output 72		35	Pink/Blue B	General-purpose output 76	
11	Orange/Red C	General-purpose output 73	COM0:For pins 15-22 ^{Note1)}	36	Orange/Blue C	General-purpose output 77	COM1:For pins 40-47 ^{Note1)}
12	Gray/Red C	General-purpose output 74		37	Gray/Blue C	General-purpose output 78	
13	White/Red C	General-purpose output 75		38	White/Blue C	General-purpose output 79	
14	Yellow/Red C			39	Yellow/Blue C		
15	Pink/Red C	General-purpose input 64		40	Pink/Blue C	General-purpose input 72	
16	Orange/Red D	General-purpose input 65		41	Orange/Blue D	General-purpose input 73	
17	Gray/Red D	General-purpose input 66		42	Gray/Blue D	General-purpose input 74	
18	White/Red D	General-purpose input 67		43	White/Blue D	General-purpose input 75	
19	Yellow/Red D	General-purpose input 68		44	Yellow/Blue D	General-purpose input 76	
20	Pink/Red D	General-purpose input 69		45	Pink/Blue D	General-purpose input 77	
21	Orange/Red E	General-purpose input 70	Reserved Reserved Reserved	46	Orange/Blue E	General-purpose input 78	Reserved Reserved Reserved
22	Gray/Red E	General-purpose input 71		47	Gray/Blue E	General-purpose input 79	
23	White/Red E			48	White/Blue E		
24	Yellow/Red E			49	Yellow/Blue E		
25	Pink/Red E			50	Pink/Blue E		

Note1) Sink type:24V/12V(COM), Source type:0V(COM)

Table 3-20 : Connector CN300pin No. and signal assignment list (2A-CBL □□)

Pin No.	Line color	Function name		Pin No.	Line color	Function name	
		General-purpose	Dedicated/power supply, common			General-purpose	Dedicated/power supply, common
1	Orange/Red A	General-purpose output 80	FG	26	Orange/Blue A	General-purpose output 84	FG
2	Gray/Red A		0V:For pins 4-7, 10-13	27	Gray/Blue A		0V:For pins 29-32, 35-38
3	White/Red A		12V/24V:For pins 4-7	28	White/Blue A		12V/24V:For pins 29-32
4	Yellow/Red A			29	Yellow/Blue A		
5	Pink/Red A			30	Pink/Blue A		
6	Orange/Red B	General-purpose output 82	0V:For pins 4-7, 10-13 12V/24V:For pins 10-13	31	Orange/Blue B	General-purpose output 86	0V:For pins 29-32, 35-38 12V/24V:For pins 35-38
7	Gray/Red B	General-purpose output 83		32	Gray/Blue B	General-purpose output 87	
8	White/Red B			33	White/Blue B		
9	Yellow/Red B			34	Yellow/Blue B		
10	Pink/Red B	General-purpose output 88		35	Pink/Blue B	General-purpose output 92	
11	Orange/Red C	General-purpose output 89	COM0:For pins 15-22 ^{Note1)}	36	Orange/Blue C	General-purpose output 93	COM1:For pins 40-47 ^{Note1)}
12	Gray/Red C	General-purpose output 90		37	Gray/Blue C	General-purpose output 94	
13	White/Red C	General-purpose output 91		38	White/Blue C	General-purpose output 95	
14	Yellow/Red C			39	Yellow/Blue C		
15	Pink/Red C	General-purpose input 80		40	Pink/Blue C	General-purpose input 88	
16	Orange/Red D	General-purpose input 81		41	Orange/Blue D	General-purpose input 89	
17	Gray/Red D	General-purpose input 82		42	Gray/Blue D	General-purpose input 90	
18	White/Red D	General-purpose input 83		43	White/Blue D	General-purpose input 91	
19	Yellow/Red D	General-purpose input 84		44	Yellow/Blue D	General-purpose input 92	
20	Pink/Red D	General-purpose input 85		45	Pink/Blue D	General-purpose input 93	
21	Orange/Red E	General-purpose input 86	Reserved Reserved Reserved	46	Orange/Blue E	General-purpose input 94	Reserved Reserved Reserved
22	Gray/Red E	General-purpose input 87		47	Gray/Blue E	General-purpose input 95	
23	White/Red E			48	White/Blue E		
24	Yellow/Red E			49	Yellow/Blue E		
25	Pink/Red E			50	Pink/Blue E		

Note1) Sink type:24V/12V(COM), Source type:0V(COM)

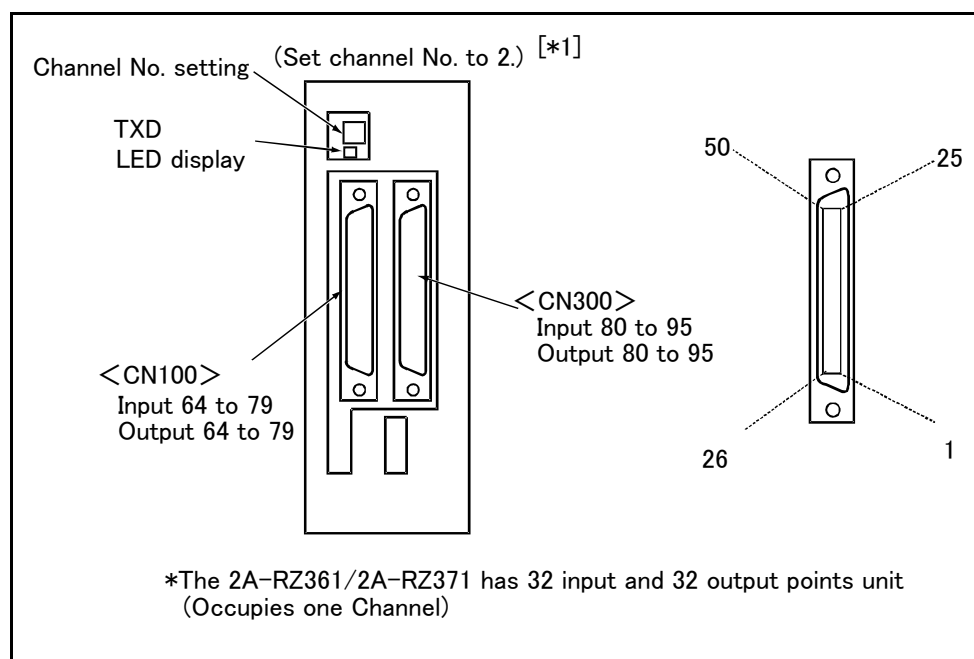


Fig.3-18 : Parallel input/output unit <2A-RZ361/2A-RZ371:Second expansion unit> connection and pin layout

⚠ CAUTION

[*1] For the 2nd expansion unit, set the channel No. to "2".

The channel No. of 8 to F is used for the maker test. If any value of 8 to F is set, it may be dangerous since the robot unexpectedly moves. Don't set any value of 8 to F.

Table 3-21 lists the correspondence between the station numbers to be set and the I/O signal assignment. Refer to this table when the third and subsequent units are used.

Table 3-21 : Station Number Settings and I/O Signal Assignment

Unit No.	Station number setting	CN100	CN300
1st unit	1	Input: 32 ~ 47 Output: 32 ~ 47	Input: 48 ~ 63 Output: 48 ~ 63
2nd unit	2	Input: 64 ~ 79 Output: 64 ~ 79	Input: 80 ~ 95 Output: 80 ~ 95
3rd unit	3	Input: 96 ~ 111 Output: 96 ~ 111	Input: 112 ~ 127 Output: 112 ~ 127
4th unit	4	Input: 128 ~ 143 Output: 128 ~ 143	Input: 144 ~ 159 Output: 144 ~ 159
5th unit	5	Input: 160 ~ 175 Output: 160 ~ 175	Input: 176 ~ 191 Output: 176 ~ 191
6th unit	6	Input: 192 ~ 207 Output: 192 ~ 207	Input: 208 ~ 223 Output: 208 ~ 223
7th unit	7	Input: 224 ~ 239 Output: 224 ~ 239	Input: 240 ~ 255 Output: 240 ~ 255

(5) External I/O cable

■ Order type: 2A-CBL □□ Note) The numbers in the boxes □□ refer to the length. (05: 5m、15: 15m)

■ Outline



This is the dedicated cable used to connect an external peripheral device to the connector on the parallel input/output unit.

One end matches the connector on the parallel input/output unit, and the other end is free. Connect the peripheral device's input/output signal using the free end.

One cable correspond to the input 16 points and output 16 points.

Two cables are needed to connection of (input 32 points and output 32 points) with built-in standard.

■ Configuration

Table 3-22 : Configuration device

Part name	Type	Qty.	Mass(kg) Note1)	Remarks
External I/O cable	2A-CBL □□	1pc.	0.7(5m) 1.84(15m)	5m or 15m

Note1) Mass indicates one set.

■ Specifications

Table 3-23 : Specifications

Items	Specifications
Number of cables x cable size	50 pairs x AWG #28
Total length	5m or 15m

■ Connector pin numbers and cable colors

Table 3-24 : Connector pin numbers and cable colors

Pin no.	Cable colors	Pin no.	Cable colors	Pin no.	Cable colors	Pin no.	Cable colors	Pin no.	Cable colors
1	Orange/Red A	11	Orange/Red C	21	Orange/Red E	31	Orange/Blue B	41	Orange/Blue D
2	Gray/Red A	12	Gray/Red C	22	Gray/Red E	32	Gray/Blue B	42	Gray/Blue D
3	White/Red A	13	White/Red C	23	White/Red E	33	White/Blue B	43	White/Blue D
4	Yellow/Red A	14	Yellow/Red C	24	Yellow/Red E	34	Yellow/Blue B	44	Yellow/Blue D
5	Pink/Red A	15	Pink/Red C	25	Pink/Red E	35	Pink/Blue B	45	Pink/Blue D
6	Orange/Red B	16	Orange/Red D	26	Orange/Blue A	36	Orange/Blue C	46	Orange/Blue E
7	Gray/Red B	17	Gray/Red D	27	Gray/Blue A	37	Gray/Blue C	47	Gray/Blue E
8	White/Red B	18	White/Red D	28	White/Blue A	38	White/Blue C	48	White/Blue E
9	Yellow/Red B	19	Yellow/Red D	29	Yellow/Blue A	39	Yellow/Blue C	49	Yellow/Blue E
10	Pink/Red B	20	Pink/Red D	30	Pink/Blue A	40	Pink/Blue C	50	Pink/Blue E

■ Connections and outside dimensions

The sheath of each signal cable (50 lines) is color indicated and marked with dots. Refer to the cable color specifications in "Table 3-24: Connector pin numbers and cable colors" when making the connections.

(Eg.) Pin number: color indication

1 : Orange / Red / A


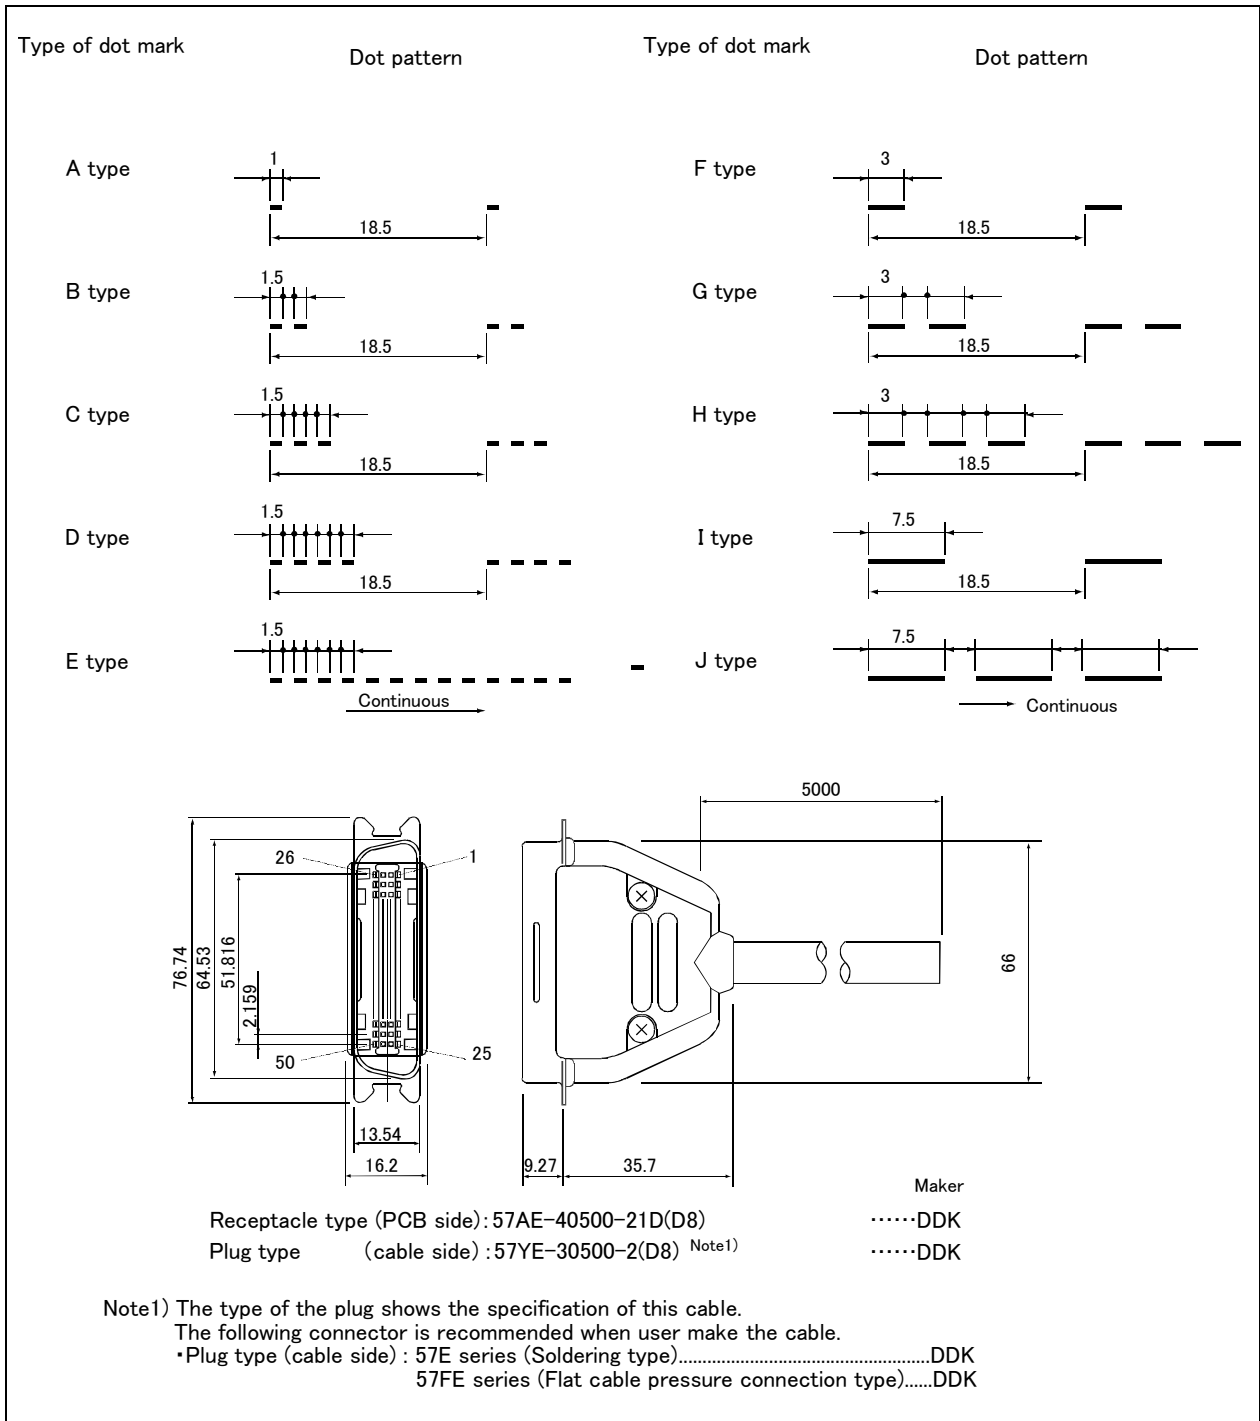


Fig.3-19 : Connections and outside dimensions

(6) Personal computer cable

- Order type: ● For PC/AT : RS-MAXY-CBL
RS-AT-RCBL (For expansion option box(CR1-EB3).)

■ Outline

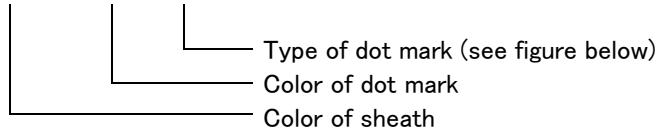

This is the RS-232C interface cable used for connecting the controller with a personal computer. The personal computer on hand may be usable with the above interface cable. Confirm the connection specifications when placing an order.
Personal computer cables for the PC/AT compatible model is available.
The cable for the NEC PC9821 (half-pitch 14-pin) must be manufactured by the customer.
Use "RS-AT-RCBL" when you use expansion serial I/F with the expansion option box.

■ Configuration

Table 3-25 : Configuration device

Part name	Type	Qty.	Mass(kg) Note1)	Remarks
Personal computer cable (for PC/AT)	RS-MAXY-CBL	1pc.	4	3m, D-SUB 9 pin ^{Note2)}
	RS-AT-RCBL	1pc.	4	3m, D-SUB 9 pin For expansion serial I/F at expansion option box(CR1-EB3).

Note1)Mass indicates one set.

Note2)The personal computer cable is the same as that for use with "Movemaster M1/M2/E/EN series".

■ Specifications

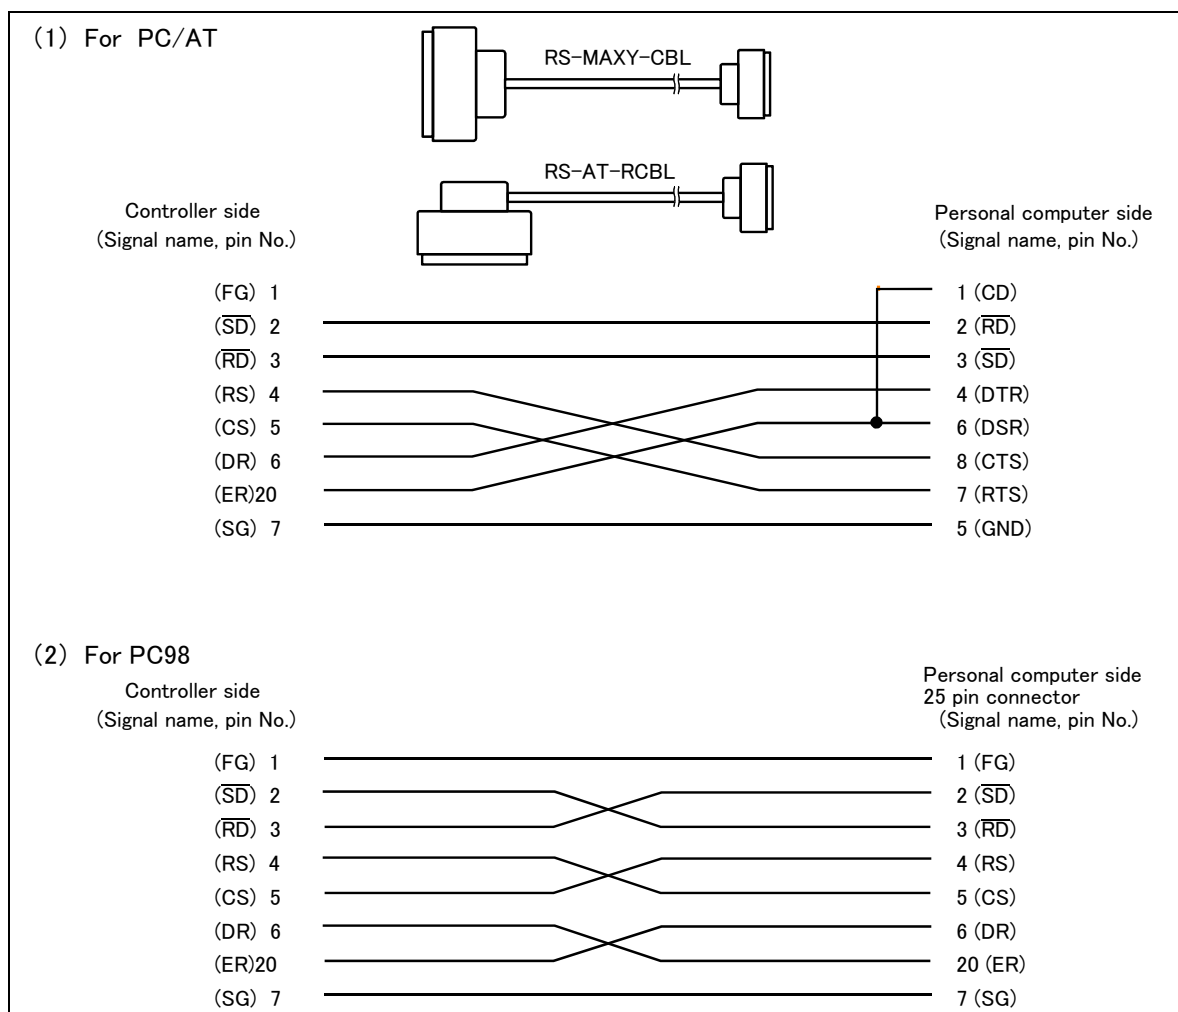


Fig.3-20 : Personal computer cable connection

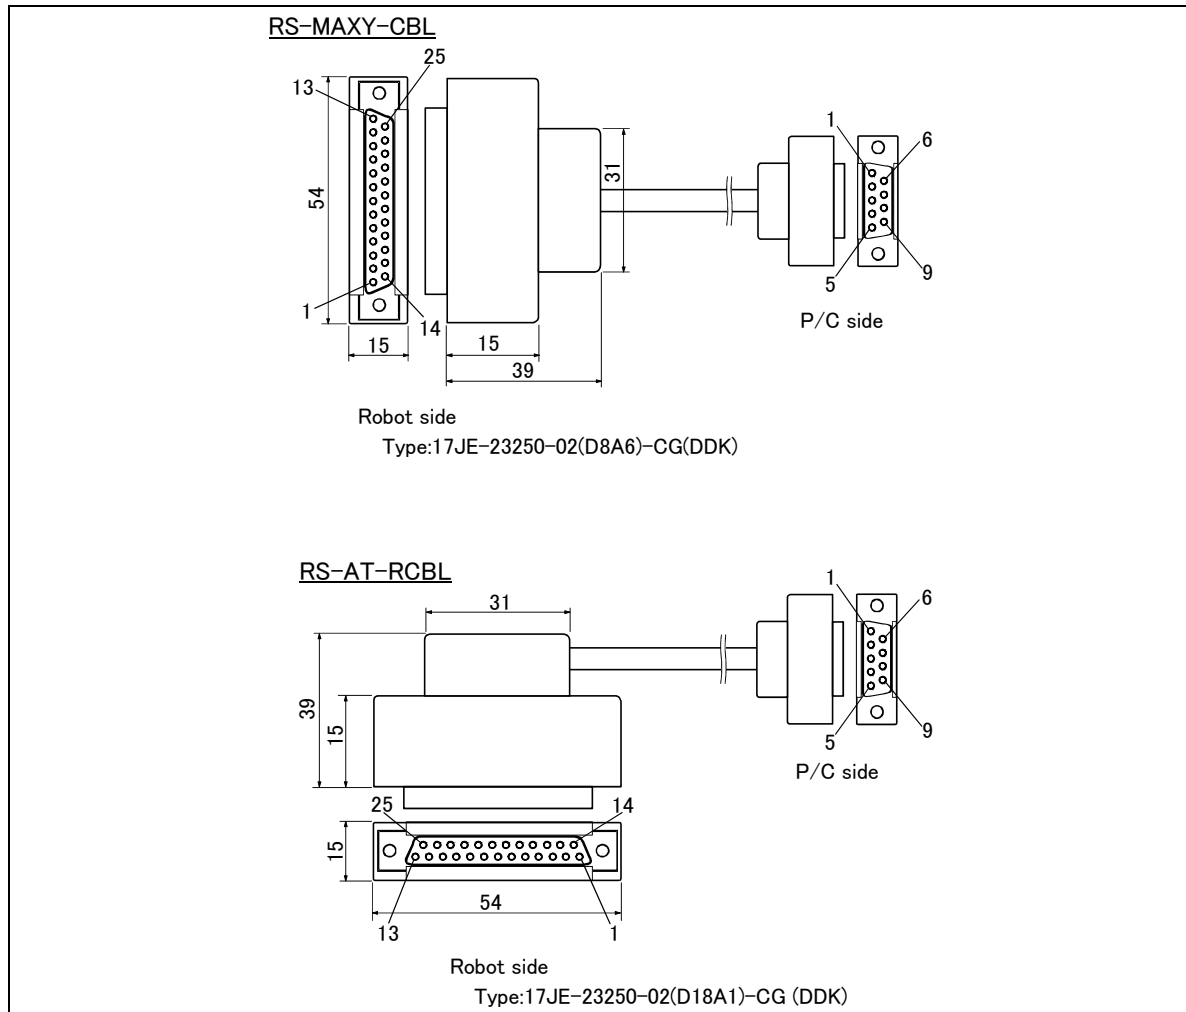


Fig.3-21 : Personal computer cable connector

(7) Extended serial interface

■ Order type: ● 2A-RZ581-E

■ Outline



The extension serial interface is the option to add a serial communication function to the robot controller. One channel of RS-232C interface is provided in the front of the controller. By using the extension serial interface, more channels can be added in order to allow the use of a personal computer, vision sensor and PLC at the same time. Also, in addition to RS-232C communication, RS-422 communication, which is superior in noise resistance, is also supported.

The extended option box (CR1-EB3) is required separately. Refer to [Page 57, "\(3\) Expansion option box"](#) for details.

Caution) This option can only be used with the robot controller's main unit software version E1 or later.

■ Configuration

Table 3-26 : Configuration device

Part name	Type	Qty.	Mass(kg)	Remarks
Extended serial interface	2A-RZ581-E	1	0.32	
Instruction Manual	BFP-A8106	1	–	
Ferrite core	E04SR301334	2	–	Be sure to install this for noise countermeasure.

Table 3-27 : Procured by the customer

Part name	Type	Qty.	Remarks
Personal computer, vision sensor, etc.		From 1 unit.	Two channel per one board.
Communication cable (used when the length of the standard RS-232C cable is too short, or when RS-422 communication is implemented)	RS-232C or RS-422	From 1 cable.	

■ Specifications

Table 3-28 : Specifications

Item	Specifications	Remarks
Mountable optional slots	Slot 1 or 2	
Number of mountable interface cards	Maximum 2	
Number of channels	2	Channel 1: Dedicated to RS-232C Channel 2: Either RS-232C or RS-422
Communication data	ASCII data ^{Note1)}	
Communication baud rate	2400 / 4800 / <u>9600</u> / 19200	This has been set to "9600" at shipment.
Parity	Notiong / Odd/ <u>Even</u>	This has been set to "even" at shipment.
Stop bit	1 / <u>2</u>	This has been set to "2" at shipment.
End code	<u>CR code</u> / CR code + LF code	This has been set to "CR code" at shipment.
Protocol	<u>Nonprocedural</u> / Procedural / Data link ^{Note2)}	This has been set to "nonprocedural" at shipment.
Remarks	Capable of offering the same functions as provided by the standard RS-232C interface in the front of the controller	

Note1) Binary data communication is not supported.

Note2) Nonprocedural: Nonprocedural protocol with the personal computer support software

Procedural: Procedural protocol with the personal computer support software

Data link: Nonprocedural (ASCII data) protocol for data link between robot programs and a personal computer/PLC/vision sensor, etc.

■ Functions

(1) Controller communication function

- This function allows to update and download programs as well as to monitor various statuses.
- The personal computer support software (sold separately) is available as a robot controller programming support tool. Refer to (9), [Page 81](#), “(11) Personal computer support software/Personal computer support software mini” of details.

(2) Data link function

- The data link function allows to link numerical values and position data between robot programs and a personal computer using the MELFA-BASIC IV language (OPEN/PRINT/INPUT instruction).
- Data can be exchanged one to one by specifying the COM number at the communication open destination.

■ Pin assignment

(1) RS-232C pin assignment

Refer to [Page 70](#), “(6) Personal computer cable”.

(2) RS-422 pin assignment




Fig.3-22 : D-SUB25 Pin Female Connector (RZ581 Board Side)

Pin no.	Abbreviated signal name	Signal name	Signal direction 2A-RZ581 ⇔ Device on other end
1	FG	Frame ground	—————
7, 9	SG	Signal ground	—————
13	TXD+(SDA)	Transmission data (+)	————→
25	TXD-(SDB)	Transmission data (-)	————→
11	DTR+(RSA)	Terminal ready (+)	————→
23	DTR-(RSB)	Terminal ready (-)	————→
12	RXD+(RDA)	Reception data (+)	←————
24	RXD-(RDB)	Reception data (-)	←————
10	DSR+(CSA)	Data set ready (+)	←————
22	DSR-(CSB)	Data set ready (-)	←————

(8) CC-Link interface

■ Order type: ● 2A-HR575-E

■ Outline



The CC-Link interface is the option to not only add bit data to the robot controller, but also to add CC-Link field network function that allows cyclic transmission of word data.

The extended option box (CR1-EB3) is required separately. Refer to Page 57, “(3) Expansion option box” for details.

Caution) This option can only be used with the robot controller's main unit software version E1 or later.

■ Configuration

Table 3-29 : Configuration device on

Part name	Type	Qty.	Mass(kg) Note1)	Remarks
CC-Link interface	2A-HR575-E	1	0.32	
Instruction Manual	BFP-A8105	1	–	
Ferrite core	E04SR301334	2	–	Be sure to install this for noise countermeasure.

Note1) Mass indicates one set.

Table 3-30 : Procured by the customer

Part name	Type	Qty.	Remarks
Master station	QJ61BT11(Q series)	1	FX series products are not supported.
	AJ61QBT11(QnA series)		
	A1SJ61QBT11(QnAS series)		
	AJ61BT11(A series)		
	A1SJ61BT11(AnS series)		
	A80BD-J61BT11(personal computer board)		
Communication cable	–	1	Shielded 3-core twisted cable This cable may be manufactured by the customer.
Terminal resistor	–	1	110Ω or 130Ω is recommended.

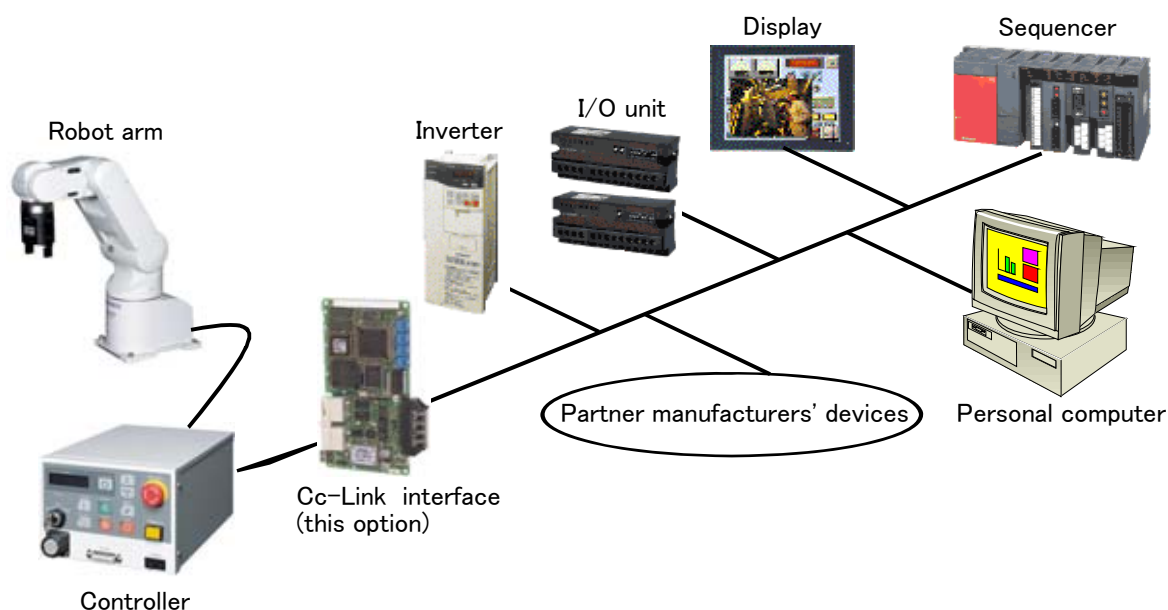


Fig.3-23 : Example of CC-Link Product Configuration

Specifications

Table 3-31 : Specifications

Item			Specifications		Remarks
Communication function			Bit data and word data can be transmitted.		Word data are used by the registers.
Station type			Intelligent device station ^{Note1)}		
Support station			Local station		No master station function
Mountable option slot			Slot 2 only		
Number of mountable CC-Link interface cards			1		Multiple CC-Link interface cards cannot be inserted. ^{Note2)}
Number of stations			1 to 64 stations		When four stations are occupied, continuous station numbers are used. The station numbers are set by a DIP switch.
Transmission speed			10M/5M/2.5M/625K/156K bps		This is set by the rotary SW.
Number of occupied stations			One or four occupied stations can be set.		When four stations are occupied, continuous station numbers are used. The station numbers are set by a DIP switch.
Number of I/O points	Remote I/O	When one station is occupied	Input: 30 points	Output: 30 points	The last two points of 32 points cannot be used.
		When four stations are occupied	Input: 126 points	Output: 126 points	The last two points of 128 points cannot be used.
	Remote registers	When one station is occupied	Input: 4 registers	Output: 4 registers	One register consists of 16 bits.
		When four stations are occupied	Input: 16 registers	Output: 16 registers	

Note1)The CC-Link interface supports neither the transient transmission function nor the FX series.

Note2)This product cannot be used together with a PROFIBUS interface card.

Functions

(1) Communication function

- The number of usable points is 126 points maximum for bit control and 16 points maximum for word control.
- Up to 2,048 points of input bit data can be monitored by a unit being connected. (Input only, output is disabled.)
- Up to 256 points of input word data can be monitored by a unit being connected. (Input only, output is disabled.)

(2) Easy setup

- The CC-Link interface card can be set by a rotary switch or DIP switch.

- No separate space is required to mount the CC-Link interface card as it is embedded in the robot controller (can only be mounted into slot 2).
- Easy wiring since only four terminals need to be connected.
- Dedicated commands have been added to MELFA-BASIC IV (robot programming language); thus, no complex interface programming is required.

(3) High-speed response

- The link scan time when connecting 64 stations is approximately 7.2 ms, achieving superior high-speed response performance.
- A transmission speed can be selected from 10M, 5M, 2.5M, 625K and 156K bps according to the transmission distance.

(9) Ethernet interface

■ Order type: ● 2A-HR533-E

■ Outline



The Ethernet interface is the option to add an Ethernet communication function to the robot controller.

The extended option box (CR1-EB3) is required separately. Refer to Page 57, “(3) Expansion option box” for details.

Caution) This option can only be used with the robot controller's main unit software version E2 or later.

Also, compatible version differs for each function. Refer to “Table 3-36: Software Versions and Functions of the Controller” for details.

■ Configuration

Table 3-32 : Configuration deviceon

Part name	Type	Qty.	Mass(kg) Note1)	Remarks
Ethernet interface	2A-HR533-E	1	0.29	
Instruction Manual	BFP-A8108	1	–	
Ferrite core	E04SR301334	1	–	Be sure to install this for noise countermeasure.

Note1)Mass indicates one set.

Table 3-33 : Procured by the customer

Part name	Type	Qty.	Remarks
Personal computer (A network interface is required.)	Windows 95/98/Me/NT 4.0/2000/XP compatible. Installed with TCP/IP network functions, including Linux OS (However, operation has not be verified.)	From 1 unit.	
Ethernet cable (Select either straight cable or cross cable depending on the connection mode.)	10BASE-T or 10BASE-5	From 1 cable.	

Table 3-34 : Items required as needed

Part name	Type	Qty.	Remarks
Hub (Required for use in LAN environment)	(Commercially sold)	1	
Windows compatible robot controller programming support tool for Mitsubishi CRn-500 series controllers	(Separately sold) Personal computer support software	1	
Windows compatible development tool	(Commercially sold) Microsoft Visual C++, Visual Basic, etc.	1	

■ Specifications

Table 3-35 : Specifications

Item	Specifications	Remarks
Mountable optional slots	Slot 1 only	
Number of mountable interface cards	1	
LAN interface	10BASE-T or 10BASE-5(changeover type)	
Transmission speed	10Mbps	
Connector specification	RJ-45	

A personal computer and the robot controller that communicates with that personal computer must be located on the same network. They cannot communication with each other crossing a firewall (from the Internet) or gateway (from another adjacent network, etc.). If such form of communication must be implemented, consider communicating via a server connected to the same network as that of the robot controller. Be cautious about safety and response performance in this case.

■ Functions

(1) Controller communication function

- This function allows communication with the robot controller via Ethernet.
(Program upload/download, status monitoring, etc.)
The personal computer support software (sold separately) is available as a robot controller programming support tool.
- This function allows communication with a maximum of 16 clients on other end.

(2) Data link function

- The data link function allows to link numerical values and position data between robot programs and a personal computer using the MELFA-BASIC IV language (OPEN/PRINT/INPUT instruction).
- Data can be exchanged one to one by specifying the COM number at the communication open destination.
- This function allows to communicate with up to eight applications of clients on other end by changing COM numbers.
- Either server mode or client mode can be selected as the TCP/IP function.
- The customer needs to write application programs on the personal computer side.

(3) Real-time external control function

- The real-time external control function loads the position command data and performs operation in control cycle units of the robot. The joint, orthogonality and motor pulse can be specified as the position data. Also, this function monitors I/O signals and outputs signals at the same time.
- The data that can be monitored include the encoder feedback values, current command, and current feedback of the position data type mentioned above.
- This function is valid only for the following models:
 - RP-1AH/3AH/5AH series
 - RV-1A series
 - RV-2A/3AJ series
 - RV-4A/5AJ/3AL/4AJL series
 - RH-5AH/10AH/15AH series
 - RV-6S/6SL/12S/12SL series
 - RV-6SD/6SDL/12SD/12SDL series
 - RV-3S/3SJ/3SB/3SJB series
- In order to control the robot, an application program on the personal computer side must be created by the customer. It must communicate one to one.

Table 3-36 : Software Versions and Functions of the Controller

Software version of the robot controller	Controller communication function	Data link function (server)	Data link function (server/client)	Real-time external control function
Versions A*, B*, C*, D* and E1	The Ethernet option is disabled.			
Versions E2 to E4	○	○	×	×
Versions F*, G* and H1 to H6	○	○	×	○
Versions H7 and later	○	○	○	○

○ Can be used.
× Cannot be used.

(10) Additional axis interface

■ Order type: ● 2A-RZ541-E

■ Outline



The additional axis interface is an interface, which uses the general-purpose servo amplifier of Mitsubishi and the corresponding servomotors in order to allow the plural above servomotors to be controlled from the robot controller.

The extended option box (CR1-EB3) is required separately. Refer to Page 57, “(3) Expansion option box” for details.

Caution) Additional axis interface can be used with a robot controller software version of G9 or later.

Servo systems that can be used with the additional axis interface are shown in Table 3-37.

Table 3-37 : Applicable servo systems

Servo amplifier name	Type	Maker name
MELSERVO-J2-Super series ^{Note1)}	MR-J2S- □ B (ABS must be designated.)	Mitsubishi Electric

Note1) The J2-Super Series servo amplifiers, use the servo amplifiers with software version of B0 or later.

■ Configuration

Table 3-38 : Configuration device on

Part name	Type	Qty.	Mass(kg) ^{Note1)}	Remarks
Additional interface	2A-RZ541-E	1	0.29	
Instruction Manual	BFP-A8107	1	–	
Ferrite core	E04SR301334	2	–	Be sure to install this for noise countermeasure.

Note1) Mass indicates one set.

The products necessary in addition to the additional axis interface are listed in Table 3-39. For these main products, refer to “Instruction Manual for Servo Amplifier and Servomotor”.

Table 3-39 : Procured by the customer

Part name	Type	Qty.	Remarks
Servo amplifier, servomotor, option, peripheral device	Refer to “Instruction Manual for Servo Amplifier and Servomotor”.	–	
Battery (for absolute position detection system)	MR-BAT or A6BAT	Amplifier quantity	
Setup software (For setup the parameter of servo amplifier and the graph indication, etc.)	MRZJW3-SETUP131 if the MELSERVO-J2-Super is used. MRZJW3-SETUP41 or later if the MELSERVO-J2-B is used.	1	
Communication cable (Communication cable between personal computer and servo amplifier for setup software)	MR-CPCATCBL3M	1	
Bus cable between controller and amplifier (Exclusive cable for communication between controller and servo amplifier)	MR-J2HBUS □ M (Cable length in : 0.5, 1 and 5 [m]) Note) The MR-J2HBUS □ M-A can't be used, caution.	1	
Terminator	MR-A-TM	1	
Bus cable between amplifier and amplifier (Exclusive cable for communication between servo amplifier and servo amplifier)	MR-J2HBUS □ M (Cable length in : 0.5, 1 and 5 [m])	Amplifier quantity-1	

■ Specifications

Table 3-40 : Specifications

Item	Specifications	Specification of user mechanism
Number of controllable robots (mechanisms)	3	
Number of control axes (total)	8 axes	
Number of control axes (for each mechanism)	2 axes	3 axes
Applicable amplifier	MELSERVO-J2-Super series	
Applicable encoder	ABS method only (absolute value encoder)	
Communication method	SSCNET (differential communication) of Mitsubishi	
Mountable optional slots	Slot 1 or 3	
Number of mountable interface cards	1	
Control function	Synchronous interpolation control	
Path control method	CP control/PTP control	PTP control
Acceleration/deceleration	The trapezoidal method/acceleration/deceleration time pattern can be set.	
Position control	Distance control/angle control can be selected. Actual value control with pitch/deceleration ratio setting	
Minimum command value	0.01mm or 0.001mm (can be changed by a parameter)	
Maximum motion range	Max. .80000.00(0) deg. to +80000.00 (0) deg.	

■ Functions

(1) Additional robot axis function

- The robot controller can control a maximum of 2 axes such the travel axis, etc., as the 7th and 8th axes of the robot arm.
- Additional axes are controlled in such a way that they start moving and stop simultaneously with the standard robot axes.

(2) Multi-mechanism function

- The robot controller can control user-created mechanisms, such as a rotation axis and a linear driving axis, for up to 2 units as multi-mechanisms.
- The robot controller controls multi-mechanisms independent of the standard robot axes (asynchronous control). It can control up to 3 axes of user-created mechanisms per unit.

(3) Programming language

- The additional axes can be programmed with MELFA-BASICIV language method and MOVEMASTER command method.
- User-created mechanisms can only be controlled using the MELFA-BASIC IV language.

(11) Personal computer support software/Personal computer support software mini (MELSOFT RT ToolBox)

- Order type : ● Personal computer support software
 *For windows CD-ROM : 3A-01C-WINE
 ● Personal computer support software mini
 *For windows CD-ROM : 3A-02C-WINE

■ Outline



This is handy software that fully uses the personal computer functions. It can be used in various stages from the robot specifications study (tact study, etc.) to the design support (creation and editing of programs), start up support (execution, control and debugging of program), and maintenance (remote maintenance.)

The "personal computer support software" which supports these function fully, and the "personal computer support software mini" which does not have the simulation function are available. Select according to the required application.

■ Configuration

Table 3-41 : Product configuration

Part name	Type	Medium	Mass(kg) Note1)	Remarks
Personal computer support software	3A-01C-WINE	CD-ROM	0.12	One operation manual included
Personal computer support software mini	3A-02C-WINE	CD-ROM	0.12	One operation manual included

Note1)Mass indicates one set.

■ Features

(1) Simple operation with guidance method and menu method

The Windows standard is used for windows operation, so the controller initialization and startup operations can be carried out easily by following the instructions given on the screen. Even a beginner can easily carry out the series of operations from program creation to execution.

(2) Increased work efficiency with ample support functions

The work efficiency is greatly improved with the multi-window method that carries out multiple steps and displays in parallel. The renumbering function, and copy, search, syntax check and step execution are especially sufficient, and are extremely useful when editing or debugging the program.

With the simulation function support, the program can be debugged and the tact checked before starting the machine at the site. This allows the on-site startup work efficiently to be greatly improved.

(3) Increased maintenance efficiency with remote maintenance function

With remote operations over a telephone line, the robot's operation status can be monitored without going to the site. Losses incurred while moving to the site can be reduced, and the time required to investigate the trouble and determine measures to be taken can be shortened.

Functions

Table 3-42 : Functions

Function		Functional existence ^{Note1)}		Details
Compatible model		○	○	Personal computer running Microsoft Windows98/2000/NT 4.0/Me/XP.
Program editing functions	Editing functions	○	○	<ul style="list-style-type: none"> • MELFA BASIC IV language compatible • Multiple editing screen simultaneously display • Command input, comment writing • Position data editing • File operation (writing to controller, floppy disk, personal computer) • Search and replace function (using characters, line Nos., labels) • Copy, cut, paste, insert (per character, line), undo (per command statement, position conversion) • Line No. automatic generation, renumbering • Batch syntax check • Command template • Position conversion batch editing • Position variable template • Print, print preview
	Control functions	○	○	<ul style="list-style-type: none"> • Program file control (list, copy, movement, delete, content comparison, name change, protect)
	Debugging functions	○	○	<ul style="list-style-type: none"> • Direct editing of program in controller • Confirmation of robot program operation (step execution, direct execution) • Tact time measurement^{Note2)}
Simulation function ^{Note3)}		○	×	<ul style="list-style-type: none"> • Off-line simulation of robot program operation using CG (computer graphics) • Tact time calculation
Monitor functions		○	○	<ul style="list-style-type: none"> • Robot operation monitor (robot operation state, stop signal, error monitor, program monitor (execution program, variables), general-purpose input/output signals (forced output possible), dedicated input/output signals, operation confirmation (operation range, current position, hand, etc.)) • Operation monitor (working time statistics, production information, robot version) • Servo monitor (position, speed, current, load, power)
Maintenance function		○	○	<ul style="list-style-type: none"> • Parameter setting • Batch, divided backup
Remote maintenance function		○	○	<ul style="list-style-type: none"> • Monitoring and maintenance of robot state at remote site using telephone line. (A separate modem is required for this function.)

Personal computer support software mini
(3A-02C-WINE)

Personal computer support software
(3A-01C-WINE)

Note1) The functions included with the personal computer support software and the personal computer support software mini are shown below. ○ : Function provided × : Function not provided

Note2) When using the "personal computer support software mini", connect with the controller and measure.

Note3) A simulation function is available only with "MELFA-BASIC IV".

3.9 Maintenance parts

The consumable parts used in the controller are shown in [Table 3-43](#). Purchase these parts from your dealer when required. Some Mitsubishi-designated parts differ from the maker's standard parts. Thus, confirm the part name, robot arm and controller serial No. and purchase the parts from your dealer.

Table 3-43 : Controller consumable parts list

No.	Part name	Type ^{Note1)}	Qty.	Usage place	Manufacturer
1	Lithium battery	ER6	1	RZ182 card	Mitsubishi Electric System & Service;Co.,Ltd

Note1) Confirm the robot arm serial No., and contact the dealer or service branch of Mitsubishi Electric Co., for the type.

4 Software

4.1 List of commands

The robot language to use can choose "MELFA-BASIC IV" (default setting) or "MOVEMASTER language (MOVEMASTER commands)" by changing the parameter.

Use of "MELFA-BASIC IV" is recommended to effectively use this controller's functions.

The available new functions in MELFA-BASIC IV are given in Table 4-1.

Table 4-1 : The available new functions in MELFA-BASIC IV

Class	Command example	Function
Robot Status Variable	P_TOOL	keep current tool length
	M_SPD	keep current speed (linear/circular interpolation)
Built-in functions	ABS	Produces the absolute value
	VAL	Converts a character string into a numeric value
	ATN	Calculates the arc tangent
	STR\$	Converts the numeric expression value into a decimal character string
	ZONE	Check current position area
Operation function	P1=P1*P2	Relative calculation of position data
	M1=M1*M2	Multiplication of numerical variable
	P1.X=10	Operation of the position element data
Conditional branching	SELECT CASE	More than one condition branch
	ON GOSUB	Condition branch by the value
	WHILE WEND	Repeat with condition
Optimum acceleration/ deceleration control	LOADSET	Load condition setting
	OADL	valid/invalid setting for the optimum acceleration/deceleration
Float control (compliance in the XYZ coordinate system)	CMP POS	Compliance control
	CMPG	Force control
Parallel execution (Multitask)	XRUN, XSTP, XRST, XLOAD, XCLR	Parallel executions of another task, the stops, the resets the clear, and, the loads
Conveyor trucking [Special specification]	TRKON, TRKOFF	Valid/invalid of the trucking
	TRBASE	Setting the base coordinate for the trucking
Impact detection	COLCHK	Set to enable/disable the impact detection.
	COLLVL	Set the detection level of the impact detection.
Singular point passage	MVS P1 TYPE 0,2	Pass a singular point using linear interpolation.

(1) The procedure of robot language selection

Table 4-2 : Robot language parameter

Parameter	Parameter name	No. of arrays No. of characters	Details explanation	Factory setting
Robot language	RLNG	Integer 1	Select the robot language to use 1 : MELFA-BASIC IV 0 : MOVEMASTER COMMAND	1

Note 1) "MELFA-BASIC IV" is default setting.

Note 2) Refer to the separate manual "Explanation of MOVEMASTER COMMANDS" (BFP-A8056) for details of "MOVEMASTER COMMAND" Order to dealer when using the "MOVEMASTER COMMAND".

(2) MELFA-BASIC IV commands

Table 4-3 : List of MELFA-BASIC IV commands

Type	Class	Function	Input format (example)
Position and operation control	Joint interpolation	Moves to the designated position with joint interpolation.	MOV P1
	Linear interpolation	Moves to the designated position with linear interpolation.	MVS P1
	Circular interpolation	Moves along a designated arc (start point → passing point → start point (end point)) with 3-dimensional circular interpolation (360 degrees).	MVC P1,P2,P1
		Moves along a designated arc (start point → passing point → end point) with 3-dimensional circular interpolation.	MVR P1,P2,P3
		Moves along the arc on the opposite side of a designated arc (start point → reference point → end point) with 3-dimensional circular interpolation.	MVR2 P1,P9,P3
		Moves along a set arc (start point → end point) with 3-dimensional circular interpolation.	MVR3 P1,P9,P3
	Speed designation	Designates the speed for various interpolation operations with a percentage (0.1% unit).	OVRD 100
		Designate the speed for joint interpolation operation with a percentage (0.1% unit).	JOVRD 100
		Designates the speed for linear and circular interpolation with a numerical value (mm/s unit).	SPD 123.5
		Designates the acceleration/deceleration time as a percentage in respect to the predetermined maximum acceleration/deceleration. (1% unit)	ACCEL 50,80
		Automatically adjusts the acceleration/deceleration according to the parameter setting value.	OADL ON
		sets the hand and work conditions for automatic adjustment of the acceleration/deceleration.	LOADSET 1,1
	Operation	Adds a process unconditionally to the operation.	WTH
		Adds a process conditionally to the operation.	WTHIF
		Designates smooth operation.	CNT 1,100,200
		Designates the positioning completion conditions with a No. of pulses.	FINE 200
		Turns the servo power ON/OFF for all axes.	SERVO OFF
		Limits the operation of each axis so that the designated torque is not exceeded.	TORQ 4,10
	Position control	Designates the base conversion data.	BASE P1
		Designates the tool conversion data.	TOOL P1
	Pallet	Defines the pallet.	DEF PLT 1,P1,P2,P3,P4,5,3,1
		Operates the pallet grid point position.	PLT 1,M1
Program control	Branching	Branches unconditionally to the designated place.	GOTO 120
		Branches according to the designated conditions.	IF M1=1 THEN GOTO 100 ELSE GOTO 20 END IF
		Repeats until the designated end conditions are satisfied.	FOR M1=1 TO 10 NEXT M1
		Repeats while the designated conditions are satisfied.	WHILE M1<10 WEND
		Branches corresponding to the designated expression value.	ON M1 GOTO 100,200,300
		Executes program block corresponding to the designated expression value..	SELECT CASE 1 BREAK CASE 2 BREAK END SELECT
		Moves the program process to the next line.	SKIP

Type	Class	Function	Input format (example)
Program control	Subroutine	Executes the designated subroutine. (Within program)	GOSUB 200
		Returns from the subroutine.	RETURN
		Executes the designated program.	CALLP "P10",M1,P1
		Defines the program argument executed with the CALLP command.	FPRM M10,P10
		Executes the subroutine corresponding to the designated expression value.	ON M1 GOSUB 100,200,300
	Interrupt	Defines the interrupt conditions and process.	DEF ACT 1, M1=1 GOTO 100
		Enables/disables the interrupt.	ACT 1=1
		Defines the start line of the program to be executed when an interrupt is generated from the communication line.	ON COM(1) GOSUB 100
		Enables the interrupt from the communication line.	COM(1) ON
		Disables the interrupt from the communication line.	COM(1) OFF
	Wait	Designates the wait time, and the output signal pulse output time. (0.01s unit)	DLY 0.5
		Waits until the variable becomes the designated value.	WAIT M_IN(1)=1
	Stop	Stops the program execution.	HLT
		Generates an error. During program execution, continue, stop or servo OFF can be designated.	ERROR 9000
	End	Ends the program execution.	END
Hand	Hand open	Opens the designated hand.	HOPEN 1
	Hand close	Closes the designated hand.	HCLOSE 1
Input/output	Assignment	Defines the input/output variables.	DEF IO PORT1=BIT,0
	Input	Retrieves the general-purpose input signal.	M1=M_IN (1)
	Output	Calls out the general-purpose output signal.	M_OUT(1) =0
Parallel execution	Mechanism designation	Acquires the mechanism with the designated mechanism No.	GETM 1
		Releases the mechanism with the designated mechanism No.	RELM 1
	Selection	Selects the designated program for the designated slot.	XLOAD 2,"P102"
	Start/stop	Carries out parallel execution of the designated program.	XRUN 3,"100",0
		Stops parallel execution of the designated program.	XSTP 3
		Returns the designated program's execution line to the head and enters the program selection enabled state.	XRST 3
Others	Definition	Defines the integer type or real number type variable.	DEF INTE KAISUU
		Defines the character string variable.	DEF CHAR MESSAGE
		Defines the layout variable. (Up to 3-dimensional possible)	DIM PDATA(2,3)
		Defines the joint variable.	DEF JNT TAIHI
		Defines the position variable.	DEF POS TORU
		Defines the function.	DEF FNTASU(A,B)=A+B
	Clear	Clears the general-purpose output signal, variables in program, variables between programs, etc.	CLR 1
	File	Opens a file.	OPEN "COM1:" AS #1
		Closes a file.	CLOSE #1
		Inputs data from a file.	INPUT# 1,M1
		Outputs data to a file.	PRINT# 1,M1
	Comment	Describes a comment.	REM "ABC"
	Label	Indicates the branching destination.	*SUB1

(3) MOVEMASTER commands

Table 4-4 : List of MOVEMASTER command

Type	Class	Function	Input format (example)
Position and operation control	Joint interpolation	Moves to the designated position variable with joint interpolation.	MO 1
		Moves to the designated position with joint interpolation.	MP 100,200,125.3,0,90
		Moves to a position obtained by adding two position variables.	MA 1,2
		Turns the joint by the specified angle from the current position.	MJ 10,20,0,0,0
		Moves the axis by the designated amount from the current position.	DJ 1,15
		Moves by the specified distance from current position.	DW 100,80,0
		Moves to the next position in number from current position.	IP
		Moves to the previous position in number from current position.	DP
		Moves to a position separated by the designated distance (+/- direction) in the Z axis direction of the tool coordinates from the designated position variable's position.	MT 1,-50
		Moves to the origin in the axis order designated in the parameters.	NT
		Moves to the user specified origin position.	OG
	Linear interpolation	Moves to the designated position variable with linear interpolation.	MS 1
		Moves by the specified distance from current position.	DS 10,20,0
		Continuously moves the position variable with linear interpolation between the two designated position variables.	MC 10,20
		Moves to a position separated by the designated distance (+/- direction) in the Z axis direction of the tool coordinates from the designated position variable position.	MTS 1,-50
	Circular interpolation	Moves along a designated arc (start point → transient point → end point) with three-dimensional circular interpolation.	MR 1,2,3
		Moves with circular interpolation with the position data of two MRA commands designated previously or subsequently.	MRA 4
	Speed designation	Establishes program over-ride. (0.1% unit)	OVR 100
		Designate the speed level and acceleration/deceleration rate for various interpolation operations.	SP 25,H
		Designate the speed, time constant, acceleration/deceleration rate and CNT setting validity for linear and circular interpolation.	SD 123.5,50,50,0
	Position control	It establishes die length to hand nose from hand installation.	TL 128
		Designates the tool matrix.	TLM 0,0,128,0,0,0
		Waits for in position till all axis ring inward pulse appointing.	PW 10
		Memorizes current position as the position number.	HE 1
		Memorizes current position as the origin.	HO
		Sets the designated coordinate value (x, y, z, a, b, c) in the designated position variable.	PD 1,100,200,300,0,90,0
		Deletes the position variable between two designated position variables.	PC 1,20
		Changes the pose of the robot at position.	CF 1,R,A,F
	Pallet	Defines the pallet.	PA 1,5,3
		Operates the designated pallet No. grid point position, and substitutes into the corresponding position variable.	PT 1
Program control	Branching	Jump to line number.	GT 120
		Jump to line number if internal register value/strings equals specified value/strings.	EQ 20,120 EQ "OK",120
		Jump to line number if internal register value/strings does not equal specified value/strings.	NE 20,120 NE "NG",120
		Jump to line number if internal register value/strings is greater than specified value/strings.	LG 20,120 LG "NG",120
		Jump to line number if internal register value/strings is smaller than specified value/strings.	SM 20,120 SM "NG",120
		Jump to line number by internal register bit status.	TB +5,100
		Jump to line number by external input signal bit status.	TBD +5,100
		Repeats the loop specified by command NX.	RC 8
		Specifies the range of a loop in a program by command RC.	NX
	Subroutine	Executes the subroutine of the line designated in the designated program.	GS 3,10
		Returns from the subroutine. (The return line No. can be designated.)	RT RT 200

Type	Class	Function	Input format (example)
Program control	Interrupt	Validates the interrupt by the bit designated by the external input terminal, and designated the branching method and branching line at the interrupt.	EA +16,100,1
		Disables interrupt by the bit of external input signal.	DA 16
	Wait	Stops the operation for the designated time. (0.1 sec unit)	TI 50
	Select	Selects the program.	N 1
	Start	Executes the program between the designated line numbers.	RN 10,50
	Stop	Halts the program.	HLT
	End	Ends the program.	ED
Hand	Open	Opens the specified hand.	GO
	Close	Closes the specified hand.	GC
	Setting	Sets the motorized hand's gripping force and open/close time.	GP 40,30,50
		Sets the hand open/close state when the "PD" command is executed.	GF 1
Input/output	Input	Gets signal from external input.	ID
	Output	Outputs data to external output signal.	OD 20
		Outputs the counter value to external output signal.	OC 1
		Sets the output signal bit status.	OB +16
Operation/Substitution	addition	Adds the designated value to the internal register value.	ADD 10
		Adds 1 to the designated number's counter.	IC 5
		Adds the coordinate values of the designated position variable to the coordinate values of the designated position variable.	SF 1,2
	Subtraction	Subtracts the designated value from the designated register value.	SUB 10
		Subtracts one from the designated number's counter.	DC 5
	Multiplication	Multiplies the designated value to the internal register value.	MUL 2
	Division	Divides the internal register value by the designated value.	DIV 10
	AND	Logical AND of the internal register value and specified value.	AN 7
	OR	Logical OR of the internal register value and specified value.	OR 3
	XOR	Logical exclusive OR of the internal register value and specified value.	XO 2
	Substitution	Substitutes the designated value (character string) in the designated counter.	SC 1,10 SC \$1,"OK"
		Substitutes the designated position variable coordinate value in the designated position variable.	PL 1,2
		Substitutes the internal register value (character string) in the designated number's counter.	CL 1
		Sets the designated number's counter value (character string) in the internal register.	CP 1
	Exchange	Exchanges the coordinate values of two designated position variables.	PX 1,2
Other	RS-232C read	Reads the selected program No. or designated program information.	QN 1
		Reads the program of specified line number.	LR 10
		Reads the program of specified step number.	STR 10
		Reads the coordinate value of specified position number.	PR 1
		Reads the value/strings of specified counter number.	CR 1
		Reads the hand input signal, internal register value and the 16-bit width data from the designated external output signal bit.	DR 16
		Reads the current error No. or error history.	ER 10
		Reads the coordinate value of current position.	WH
		Reads the value of current tool length.	WT
		Reads the current tool matrix.	WTM
		Reads the name of system software version.	VR
		Reads the value of specified parameter.	PMR "HANDINIT"
	Clear	Deletes the program between the designated line numbers.	DL 10,90
		Deletes the selected program and position variables.	NW
	File	Opens the file.	OPEN 1,1
		Reads the data from the file.	INP 1,2,0
		Sends the value to the file.	PRN 2
		Sets the contents of the designated parameter.	PMW 1,0,1,0,1,0,1,0
	Reset	Resets the error, or program line number.	RS
	Comment	Describes a comment.	'

4.2 List of parameters

(1) List of parameters

show the main parameter in the [Table 4-5](#).

Table 4-5 : List of parameters

Parameter		Details
Standard tool coordinates.	MEXTL	Set the default value for the tool data. Unit: mm or deg.
Standard base coordinates	MEXBS	Set the relation of the world coordinate system and robot coordinate system. Unit: mm or deg.
XYZ operation range	MEPAR	Designate the overrun limit value for the world coordinate system.
JOINT operation range	MEJAR	Set the overrun limit value for each joint axis.
Free plane limit		This is the overrun limit set with the free plane. Create a plane with the three coordinates x1, y1, z1 to x3, y3, z3, and set the outer side of the plane as the outside operation range (error). The following three types of parameters are used.
	SFC1P : SFC8P	Eight types of free plane limits can be set in SFC1P to SFC8P. There are nine elements, set in the order of x1, y1, z1, x2, y2, z2, x3, y3, z3.
	SFC1ME : SFC8ME	Designate which mechanism to use eight types of set free plane limits. The mechanism No. to use is set with 1 to 8.
	SFC1AT : SFC8AT	Set the validity of the eight types of set free plane limits. (Valid 1/Valid 2/invalid = 1/-1/0)
User-defined area		An area (cube) defined with two XYZ coordinate points can be designated and that area set as the outside operation range. Furthermore, a signal can be output when the axis enters that area. Up to eight types of area can be designated.
	AREA1P1 : AREA8P1	Designated the 1st point of the area. There are eight elements, set in the order of x, y, z, a, b, c, L1, L2. (L1 and L2 are the additional axes.)
	AREA1P2 : AREA8P2	Designated the 2nd point of the area. There are eight elements, set in the order of x, y, z, a, b, c, L1, L2. (L1 and L2 are the additional axes.)
	AREA1ME : AREA8ME	Designate which mechanism to use the eight types of set area. The mechanism No. to use is set with 1 to 8
	AREA1AT : AREA8AT	Designate the area check type. (Invalid/zone/interference = 0/1/2) Zone: The dedicated output signal USRAREA turns ON. Interference: An error occurs..
Automatic return setting	RETPATH	Set to restart the program after returning to the interrupt position when resuming operation after an interruption.
Buzzer ON/OFF	BZR	Designate whether to the turn buzzer ON or OFF.
Jog setting	JOJGJSP	Designate the joint jog and step operation speed. (Set dimension H/L amount, max. override.)
	JOJPSP	Designate the linear jog and step operation speed. (Set dimension H/L amount, max. override.)
Jog speed limit value	JOJSPMX	Limit the operation speed during the teaching mode. Max. 250[mm/s]

Parameter		Details
Hand type	HANDTYPE	Set the hand type of the single/double solenoid, and the signal No. (Single/double = S/D) Set the signal No. after the hand type. Example) D900
Stop input B contact designation	INB	Change the dedicated input (stop) between the A contact and B contact.
User-designated origin	USERORG	Designate the user-designated origin position.
Program selection memory	SLOTON	Select the program selected previously when initializing the slot. The non-selected state will be entered when not set.
Communication setting	CBAU232	Set the baud rate.
	CLEN232	Set the character length.
	CPRTY232	Set the parity.
	CSTOP232	Set the stop bit.
	CTERM232	Set the end code.
Slot table	SLT1 : SLT32	Make settings (program name, operation type, order of priority, etc.) for each slot during slot initialization.
No. of multi-tasks	TASKMAX	Designate the No. of programs to be executed simultaneously. (Max. 32)
Robot language setting	RLNG	Select the robot language ("MELFA-BASIC IV"/"MOVEMASTER COMMAND")
Select the function of singular point adjacent alarm	MESNGLSW	Designate the valid/invalid of the singular point adjacent alarm. (Invalid/Valid = 0/1) When this parameter is set up "VALID", this warning sound is buzzing even if parameter: BZR (buzzer ON/OFF) is set up "OFF".
Display language. ^{Note1)} 表示言語 ^{Note1)}	LNG	Change the language to display on the LCD display of teaching pendant. ティーチングボックスの表示 LCD などに表示する言語を切り替えます。

Note1)The procedure of Language as shown in "(2) Change the display language / 表示言語の切り替え".

注 1) 表示言語切り替え方法の詳細を "(2) Change the display language / 表示言語の切り替え" に示します。

(2) Change the display language / 表示言語の切り替え

The language to display on the LCD display of teaching pendant can be changed by "the display language parameter". (Japanese or English)

Show the details of the parameter in the Table 4-5. Refer to the separate "Instruction Manual/Detailed Explanation of Functions and Operations" for details on changing the parameter.

The parameter is set up based on the order specifications before shipment. Order to dealer when the instruction manual of the other language is necessity.

More, the caution seals that stuck on the robot arm and the controller are made based on the language of the order specification. Use it carefully when selecting the other language.

表示言語設定パラメータによって、ティーチングボックスの表示 LCD などに表示する言語を切り替えることができます。(日本語、または英語) Table 4-5 にそのパラメータの詳細を示します。パラメータの変更方法は、別冊の「取扱説明書／機能と操作の詳細解説」を参照願います。

なお、出荷時はご注文仕様に基づき弊社で設定いたします。別の言語の取扱説明書をご希望の場合はご用命願います。

また、ロボット本体とコントローラに貼り付けてある注意シールは、ご注文仕様に基づいた言語で製作いたします。本パラメータを変更して言語を切り替えてご使用の場合はご注意願います。

Table 4-6 : Display language parameter / 表示言語設定パラメータ

Parameter パラメータ	Parameter name パラメータ名	No. of arrays No. of characters 配列数 文字数	Details explanation 内容説明	Default setting 出荷時 設定
Display lan- guage 表示言語設定	LNG	Character string 1 文字列 1	<p>Set up the display language. "JPN" : Japanese "ENG" : English</p> <p>The following language is changed. (1)The display LCD of teaching pendant. (2) Personal computer support software. *alarm message of the robot. *Parameter explanation list. (3)Alarm message that read from the robot with external communication. (Standard RS232C, Extended serial I/F, Ethernet I/F)</p> <p>表示言語を設定します。 "JPN" : 日本語表示 "ENG" : 英語表示</p> <p>以下に示す表示言語が変更されます。 (1) ティーチングボックスの表示 LCD (2) パソコンサポートソフトウェア ・ ロボットのアラームメッセージ ・ パラメータ説明リスト (3) 外部通信でロボットから読み出したアラームメッセージ (標準 RS232C、増設シリアルインタフェース、イーサネットインタフェース)</p>	1

5 Safety

5.1 Safety

Measures to be taken regarding safety of the industrial robot are specified in the "Labor Safety and Sanitation Rules". Always follow these rules when using the robot to ensure safety.

5.1.1 Self-diagnosis stop functions

This robot has the self-diagnosis stop functions shown in [Table 5-1](#) and the stop functions shown in [Table 5-2](#) for safe use.

Table 5-1 : Self-diagnosis stop functions

No.	Function		Details	Remarks
1	Overload protection function		Activates when the total servo current time exceeds the specified value.	The drive circuit is shut off. The robot stops, and an alarm displays.
2	Overcurrent diagnosis function		Activates when an overcurrent flows to the motor circuit.	The drive circuit is shut off. The robot stops, and an alarm displays.
3	Encoder disconnection diagnosis function		Activates when the encoder cable is disconnected.	The drive circuit is shut off. The robot stops, and an alarm displays.
4	Deflection over diagnosis function		Activates when an error occurs between the command value and actual position, and the error exceeds the specified amount.	The drive circuit is shut off. The robot stops, and an alarm displays.
5	AC power voltage drop diagnosis function		Activates when the AC power voltage drops below the specified value.	The drive circuit is shut off. The robot stops, and an alarm displays.
6	CPU error detection function		Activates when an error occurs in the CPU.	The drive circuit is shut off. The robot stops, and an alarm displays.
7	Overrun prevention function	Software limit detection	This is the limit provided by the software to enable operation only in the operation range.	The drive circuit is shut off. The robot stops, and an alarm displays.
		Mechanical stopper	This is the mechanical stopper provided outside the software.	

Table 5-2 : List of stop functions

Stop function	Operation panel	Teaching pendant	External input	Details
Emergency stop	○	○	○	This is the stop with the highest degree of emergency. The servo power is shut off, and the mechanical brakes (all axes) activate to stop the robot. To recover, reset the alarm, and turn the servo ON with the servo ON command.
Stop	○	○	○	This is a stop operation with a high degree of emergency. The robot immediately decelerates and stops. Note that the servo power is not shut off. Use this when using the collision evasion sensor, etc.

5.1.2 External input/output signals that can be used for safety protection measures

Table 5-3 : External input/output signals that can be used for safety protection measures

	Signal	Command	Functions	Usage method
Input	External emergency stop	(Input signal)	This servo power is shut off, and the robot stops immediately.	Externally installed emergency stop switch. Door switch on safety protection fence. Stopping at high-level error occurrence.
	Stop	STOP	The program execution is stopped, and the robot stops. The servo power is not shut off.	The robot is stopped when a peripheral device fault occurs. The servo power is not shut off.
	Servo OFF	SRVOFF	The servo power can be shut off.	The robot is stopped when a peripheral device fault occurs. The servo power is not shut off.
	Automatic operation enable	AUTOENA	Disables automatic operation when inactive.	Door switch on safety protection fence
Output	In servo ON	SRVON	The servo power ON/OFF state is output.	The servo power ON/OFF state is shown and alerted with the display lamps.
	Waiting	STOP	Outputs that the robot is temporarily stopped.	The temporary stop state is shown and alerted with the display lamps.
	In alarm	ERRRESET	Outputs when an alarm occurs in the robot.	The alarm state is shown and alerted with the display lamps.

[Caution] The external emergency stop input is prepared as a b contact for safety proposes. Thus, if the emergency stop input circuit is opened when the robot is started up, the robot will not operate. Refer to "Fig. 5-1 Example of safety measures" for details.

5.1.3 Precautions for using robot

The safety measures for using the robot are specified in the "Labor Safety and Sanitation Rules". An outline of the rules is given below.

(1) Robot installation

- Secure sufficient work space required to safely perform work such as teaching and maintenance related to the robot.
- Install the controller outside the robot's motion space. (If a safety fence is provided, install outside the fence.)
- Install the controller where the entire robot operation can be viewed.
- Install display lamps, etc., to indicate the robot's operation state.
- Securely fix the robot arm onto the fixing table with the designated bolts.

(2) Prevention of contact with operator

- Install a safety fence or enclosure so that the operator cannot easily enter the robot's motion space.
- Install an interlock function that will stop the robot if the safety fence or enclosure door is opened.

(3) Work procedures

- Create and observe work procedures for the robot teaching, operation, inspection and emergencies.
- Create hand signals to be followed when several operators are working together.
- Create displays such as "Teaching in Progress" and "Inspection in Progress" to be put up when an operator is in the robot's motion space so that other operators will not operate the operation panel (controller, control panel).

(4) Training

- Train the operators about the operations, maintenance and safety required for the robot work.
- Only trained and registered operators must operate the robot.
Participation in the "Special training for industrial robots" sponsored by the Labor Safety and Sanitation Committee, etc., is recommended for safety training.

(5) Daily inspection and periodic inspection

- Always inspect the robot before starting daily operations and confirm that there are no abnormalities.
- Set the periodic inspection standards in view of the robot's ambient environment and operation frequency, and perform periodic inspections.
- Make records when periodic inspections and repairs have been done, and store the records for three or more years.

5.1.4 Safety measures for automatic operation

- (1) Install safety fences so that operators will not enter the operation area during operation and indicate that automatic operation is in progress with lamps, etc.
- (2) Create signals to be given when starting operation, assign a person to give the signal, and make sure that the operator follows the signals.

5.1.5 Safety measures for teaching

Observe the following measures when teaching, etc., in the robot's operation range.

- (1) Specify and follow items such as procedures related to teaching work, etc.
- (2) Take measures so that operation can be stopped immediately in case of trouble, and measures so that operation can be restarted.
- (3) Take measures with the robot start switch, etc., to indicate that teaching work is being done.
- (4) Always inspect that stop functions such as the emergency stop device before starting the work.
- (5) Immediately stop the work when trouble occurs, and correct the trouble.
- (6) Take measures so that the work supervisor can immediately stop the robot operation when trouble occurs.
- (7) The teaching operator must have completed special training regarding safety. (Training regarding industrial robots and work methods, etc.)
- (8) Create signals to be used when several operators are working together.

5.1.6 Safety measures for maintenance and inspections, etc.

Turn the power OFF and take measures to prevent operators other than the relevant operator from pressing the start switch when performing inspections, repairs, adjustments, cleaning or oiling.

If operation is required, take measures to prevent hazards caused by unintentional or mistaken operations.

- (1) Specify and follow items such as procedures related to maintenance work, etc.
- (2) Take measures so that operation can be stopped immediately in case of trouble, and measures so that operation can be restarted.
- (3) Take measures with the robot start switch, etc., to indicate that work is being done.
- (4) Take measures so that the work supervisor can immediately stop the robot operation when trouble occurs.
- (5) The operator must have completed special training regarding safety. (Training regarding industrial robots and work methods, etc.)
- (6) Create signals to be used when several operators are working together.

5.1.7 Examples of safety measures

Emergency stop input circuits are prepared on the user wiring terminal block of the controller. Create a circuit as shown below for safety measures

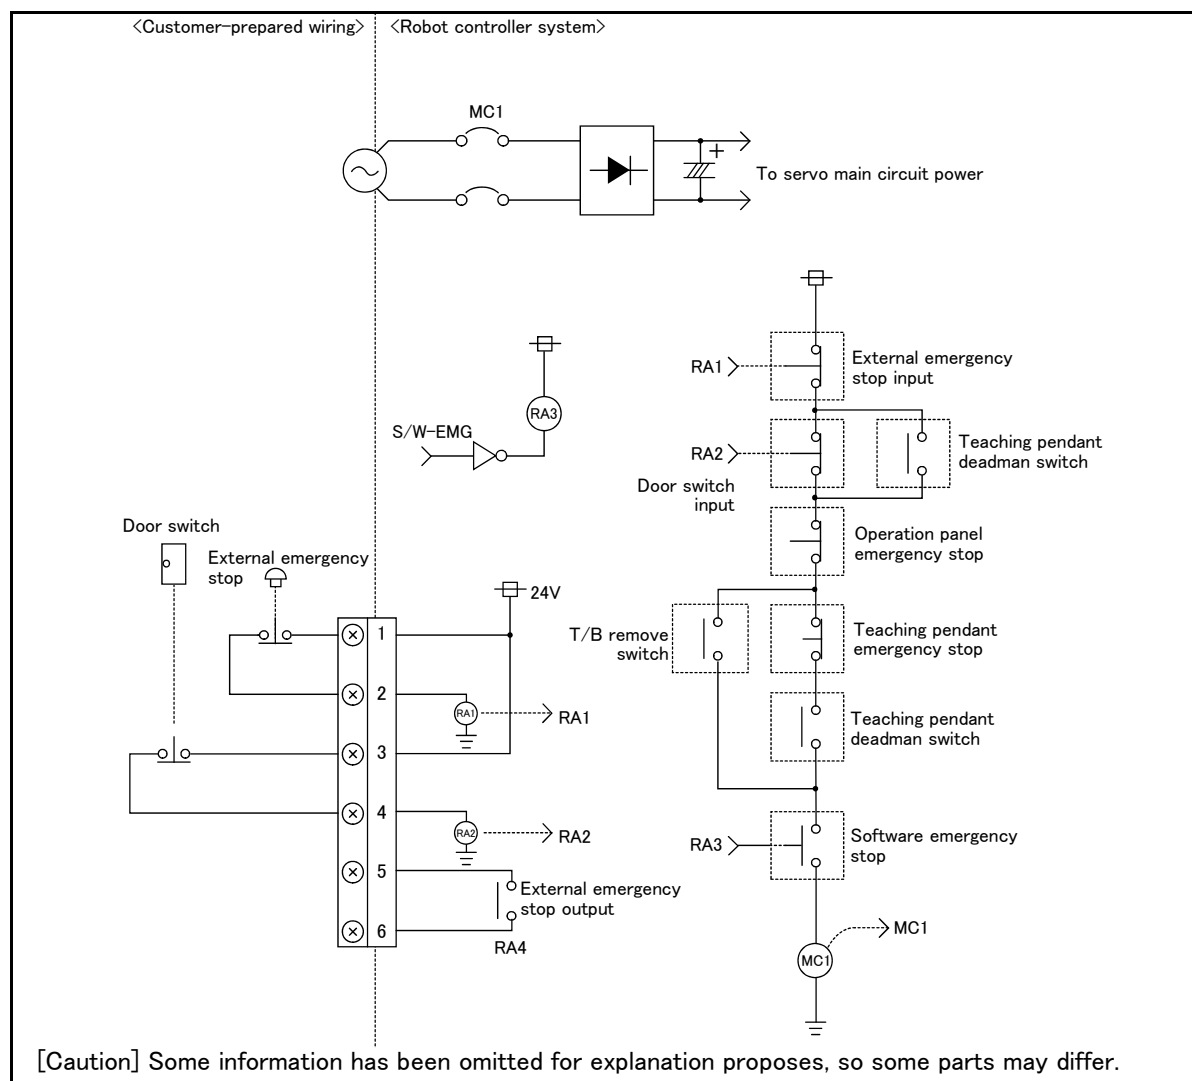


Fig.5-1 : Example of safety measures

- (1) Install a limit switch on the safety fence's door. With a constantly open contact (a contact), wire to the door switch input terminal so that the switch turns ON (is conducted) when the door is closed, and turns OFF (is opened) when the door is open.
- (2) Use a manual-return type b-contact for the emergency stop button.
- (3) Classify the faults into minor faults (faults that are easily restored and that do not have a great effect) and major faults (faults that cause the entire system to stop immediately, and that require care in restoration), and wire accordingly.

[Caution] The emergency stop input (terminal block) on the user wiring in the controller can be used for safety measures as shown in Fig. 5-1. Note that there are limits to the No. of switch contacts, capacity and cable length, so refer to the following and install.

- Switch contact capacity..... Use a contact that operates with a switch contact capacity of approx. 1mA to 100mA/24V.
- Cable length..... The length of the wire between the switch and terminal block must be max. 15m or less.
- Emergency stop output capacity..... Set it within 300 mA/24 VDC.
Connecting an external device outside of the above range will cause a controller failure.

[Reference] The specifications of the RA1 and RA2 coil shown in Fig. 5-1 are as follow.

- Rated voltage..... DC24V $\pm 10\%$
- Rated excitation current..... 12.5mA $\pm 10\%$ (at 25 deg.)

* Note that these specifications are subject to change without prior notice for modification purposes.

5.2 Working environment

Avoid installation in the following places as the equipment's life and operation will be affected by the ambient environment conditions. When using in the following conditions, the customer must pay special attention to the preventive measures.

(1) Power supply

- Where the voltage fluctuation will exceed the input voltage range.
- Where a momentary power failure exceeding 20ms may occur.
- Where the power capacity cannot be sufficiently secured.

CAUTION

Please use the controller with an input power supply voltage fluctuation rate of 10% or less. In the case of 200 VAC input, for example, if the controller is used with 180 VAC during the day and 220 VAC during the night, turn the servo off once and then on again. If this is not performed, an excessive regeneration error may occur.

(2) Noise

- Where a surge voltage exceeding 1000V, 1 μ s may be applied on the primary voltage. Near large inverters, high output frequency oscillator, large contactors and welding machines. Static noise may enter the lines when this product is used near radios or televisions. Keep the robot away from these items.

(3) Temperature and humidity

- Where the atmospheric temperature exceeds 40 degree , lower than 0 degree.
- Where the relative humidity exceeds 85%, lower than 45%, and where dew may condense.
- Where the robot will be subject to direct sunlight or near heat generating sources such as heaters.

(4) Vibration

- Where excessive vibration or impact may be applied. (Use in an environment of 34m/s² or less during transportation and 5m/s² or less during operation.)

(5) Installation environment

- Where strong electric fields or magnetic fields are generated.
- Where the installation surface is rough. (Avoid installing the robot on a bumpy or inclined floor.)

5.3 Precautions for handling

- (1) This robot has brakes on all axes. The precision of the robot may drop, looseness may occur and the reduction gears may be damaged if the robot is moved with force with the brakes applied.
- (2) Avoid moving the robot arm by hand. When unavoidable, gradually move the arm. If moved suddenly, the accuracy may drop due to an excessive backlash, or the backed up data may be destroyed.
- (3) The robot arm is configured of precision parts such as bearings. Grease is used for lubricating these parts. When cold starting at low temperatures or starting operation after long-term stoppage, the position accuracy may drop or servo alarms may occur. If these problems occur, perform a 5 to 10 minute running-in operation at a low speed (about a half of normal operating speed).
- (4) The robot arm and controller must be grounded with Class D grounding to secure the noise resistance and to prevent electric shocks.
- (5) The items described in these specifications are conditions for carrying out the periodic maintenance and inspections described in the instruction manual.
- (6) When using the robot arm on a mobile axis or elevating table, the machine cables enclosed as standard configuration may break due to the fixed installation specifications. In this case, use the machine cable extension (for flexed)" factory shipment special specifications or options.
Only the fixed installation specifications are available for the cable between the robot arm and connector box.
- (7) If this robot interferes with the workpiece or peripheral devices during operation, the position may deviate, etc. Take care to prevent interference with the workpiece or peripheral devices during operation.
- (8) Do not attach a tape or a label to the robot arm and the controller. If a tape or a label with strong adhesive power, such as a packaging tape, is attached to the coated surfaces of the robot arm and controller, the coated surface may be damaged when such tape or label is peeled off.
- (9) The fretting may occur on the axis which moving angle is the 30 degree or less, or moving distance is the 30mm or less, or not moves. The fretting is that the required oil film becomes hard to be formed if the moving angle is small, and wear occurs. The axis which not moved is moving slightly by vibration etc. To prevent the fretting, recommends to move these axes about once every day the 30 degree or more, or the 30mm or more.

6 Appendix

Appendix 1 : Specifications discussion material

■ Customer information

Company name		Name	
Address		Telephone	

■ Purchased model

Type	<input type="checkbox"/> RP-1AH <input type="checkbox"/> RP-3AH <input type="checkbox"/> RP-5AH <input type="checkbox"/> RP-1AHC-SB <input type="checkbox"/> RP-3AHC-SB <input type="checkbox"/> RP-5AHC-SB
------	---

■ Shipping special specifications (Settings can be mode only at time of shipment)

Item		Standard specifications	Special shipping specifications
Robot arm	Protection specifications	IP30	
	Machine cable	<input type="checkbox"/> 5m fixed type	<input type="checkbox"/> 10m fixed type <input type="checkbox"/> 15m fixed type <input type="checkbox"/> 5m flexed type <input type="checkbox"/> 10m flexed type <input type="checkbox"/> 15m flexed type
Controller	Controller structure	<input type="checkbox"/> Floor type	

■ Options (Installable after shipment)

Item			Provision, and specifications when provided
Robot arm	Solenoid valve set	1E-VD04-RP	<input type="checkbox"/> Not provided <input type="checkbox"/> 4 sets.
		1E-VD04E-RP	<input type="checkbox"/> Not provided <input type="checkbox"/> 4 sets.
	Hand output cable	1A-GR200-RP	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
	Hand input cable	1A-HC200-RP	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
Controller	Teaching pendant	R28TB- □□	<input type="checkbox"/> Not provided <input type="checkbox"/> 7m <input type="checkbox"/> 15m
	Pneumatic hand interface	2A-RZ365/2A-RZ375	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
	Parallel I/O interface ^{Note1)}	2A-RZ361/2A-RZ371	<input type="checkbox"/> Not provided <input type="checkbox"/> 1pc. <input type="checkbox"/> 2pcs. <input type="checkbox"/> 3pcs. <input type="checkbox"/> 4pcs. <input type="checkbox"/> 5pcs. <input type="checkbox"/> 6pcs. <input type="checkbox"/> 7pcs.
	External I/O cable	2A-CBL □□	<input type="checkbox"/> Not provided <input type="checkbox"/> 5m-1pc. <input type="checkbox"/> 5m-2pcs. <input type="checkbox"/> 5m-3pcs. <input type="checkbox"/> 15m-1pcs. <input type="checkbox"/> 15m-2pcs. <input type="checkbox"/> 15m-3pcs.
	CC-Link interface	2A-HR575-E	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
	Ethernet interface	2A-HR533-E	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
	Extended serial interface	2A-RZ581-E	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
	Additional axis interface	2A-RZ541-E	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided
	Personal computer cable	RS-MAXY-CBL/ RS-AT-RCBL	<input type="checkbox"/> Not provided <input type="checkbox"/> RS-MAXY-CBL <input type="checkbox"/> RS-AT-RCBL
	Personal computer support software	3A-01C-WINE	<input type="checkbox"/> Not provided <input type="checkbox"/> Windows98/2000/NT4.0/Me/XP CD-ROM
	Personal computer support software mini	3A-02C-WINE	<input type="checkbox"/> Not provided <input type="checkbox"/> Windows98/2000/NT4.0/Me/XP CD-ROM
	Expansion option box	CR1-EB3	<input type="checkbox"/> Not provided <input type="checkbox"/> Provided

Note1) Up to eight units, including the one unit mounted as a standard.

■ Maintenance parts (consumable parts)

Maintenance parts	<input type="checkbox"/> Backup batteries A6BAT ()pcs. <input type="checkbox"/> Backup batteries ER6 ()pcs. <input type="checkbox"/> Grease ()cans
-------------------	---

■ Robot selection check list

Work description	<input type="checkbox"/> Material handling <input type="checkbox"/> Assembly <input type="checkbox"/> Machining L/UL <input type="checkbox"/> Sealing <input type="checkbox"/> Testing and inspection <input type="checkbox"/> Other ()		
Wrkpiece mass ()g	Hand mass ()g	Atmosphere	<input type="checkbox"/> General environment <input type="checkbox"/> Clean <input type="checkbox"/> Water resistant <input type="checkbox"/> Other()
Remarks			

Copy this page and use the copy.



Product Service

EC-Statement of Compliance

No. E6 09 07 25554 017

Holder of Certificate: Mitsubishi Electric CorporationTokyo BILD., 2-7-3 Marunouchi,
Chiyoda-ku
Tokyo
100-8310 JAPAN**Name of Object:** Industrial Robot**Model(s):** RP-1AH series
RP-1AH, RP-1AHC-SB,
RP-1AHW, RP-1AHC-SA,
RP-1AH-Sxx, RP-1AHC-SBxx,
RP-1AHW-Sxx, RP-1AHC-SAxx,
RP-3AH, RP-3AHC-SB,
RP-3AHW, RP-3AHC-SA,
RP-3AH-Sxx, RP-3AHC-SBxx,
RP-3AHW-Sxx, RP-3AHC-SAxx,
RP-5AH, RP-5AHC-SB,
RP-5AHW, RP-5AHC-SA,
RP-5AH-Sxx, RP-5AHC-SBxx,
RP-5AHW-Sxx, RP-5AHC-SAxx
(See Attachment for Nomenclature)**Description of Object:**Rated Voltage: 230 VAC, 1 Phase
Rated Power: 0.6 kW
Protection Class: I**Tested according to:**

EN 61000-6-4:2007; EN 61000-6-2:2005

This EC-Statement of Compliance is issued according to the Directive 2004/108/EC relating to electromagnetic compatibility. It confirms that the listed apparatus complies with such aspects of the essential requirements of the EMC directive as specified by the manufacturer or his authorized representative in the European Community and applies only to the sample and its technical documentation submitted to TÜV SÜD Product Service GmbH for testing and certification. See also notes overleaf.

Technical report no.: TYOEMC23259A**Date,** 2009-07-14

TÜV SÜD Product Service GmbH is Notified Body to the Directive 2004/108/EC of the European Parliament and of the council with the identification number 0123.

Page 1 of 2

Attachment
Statement No.



Product Service

E6 09 07 25554 017

Model name description is shown as follows.

R P - x A H x - x

(1) (2) (3) (4) (5)

(1) P: Parallel Link Robot

(2) Maximum Payload specification:

1 : 1kg

3 : 3kg

5 : 5kg

(3) A : A series robot

(4) C : Clean room model

W : Water Proof model

(5) Dimension and Ambient specification:

[none]: basic model

SA: clean class 10

SB: clean class 100

Sxx: basic model ,and special specification

SAXx: clean class 10, and special specification

SBxx: clean class 100, and special specification

EC Declaration of Conformity

We, the undersigned,

Manufacturer	MITSUBISHI ELECTRIC CORPORATION NAGOYA WORKS
Address, City	1-14,Yada-minami 5-chome, Higashi-ku, Nagoya 461-8670
Country	Japan
Phone number	+81 52 712 2354
Fax number/e-mail	+81 52 722 0384
Authorized representative in Europe	MITSUBISHI Electric Europe B.V
Address, City	40880 Ratingen
Country	Germany

Certify and declare under our sole responsibility that the following apparatus:

Type Name	Industrial Robot
Manufacturer	MITSUBISHI ELECTRIC CORPORATION NAGOYA WORKS
Brand	MELFA
Model No.	RP-1AH series
Restrictive use	For industrial environment only


Conforms with the essential requirements of the **EMC Directive 2004/108/EC** and the **Machinery Directive 2006/42/EC**, based on the following specifications applied:

EU Harmonized Standards		Non-harmonized Standard
EMC (2004/108/EC)	EN61000-6-4:2007 EN61000-6-2:2005	CISPR 11:2003+A2:2006
Machinery (2006/42/EC)	Type A: Fundamental safety standards EN ISO12100-1:2003 EN ISO12100-2:2003 EN 1050:1997 Type B: Group safety standards B1: Safety aspects EN60204-1:2006, EN294:1992, EN349:1993 ISO13849-1:2006 Type C: Machine Safety standard ISO10218-1:2006	N/A

and therefore complies with the essential requirements and provisions of the EMC Directive and the Machinery Directive.

The Technical documentation is kept at the following address:

Company	MITSUBISHI Electric Europe B.V
Address, City	Gothaer St. 8 40880 Ratingen
Country	Germany
Phone number	+49 2102 486 0
Fax number	+49 2102 486 1120

Date	September 4, 2009
Name and position of person binding the manufacturer	 <hr/> Takaaki Nishimura Manager Robot Manufacturing Department MITSUBISHI ELECTRIC CORPORATION NAGOYA WORKS

■ Declaration type of models (March,2002-)

A. RP-1AH Series

Model Name	Language	Robot Arm	Controller	Software Version
RP-1AH	Japanese/	BU220C930G55	TU117C111G01	H3 or Later
	English/German	BU220C930G56	TU117C112G01	
		BU220C930G56	TU117C113G01	
RP-1AHC-SB	Japanese/	BU220C930G65	TU117C111G01	H3 or Later
	English/German	BU220C930G66	TU117C112G01	
		BU220C930G66	TU117C113G01	
RP-1AHW	Japanese/	BU220C930G75	TU117C111G01	H3 or Later
	English/German	BU220C930G76	TU117C112G01	
		BU220C930G76	TU117C113G01	
RP-1AHC-SA	Japanese	BU220C930G85	TU117C111G01	H3 or Later
	English/German	BU220C930G86	TU117C112G01	
		BU220C930G86	TU117C113G01	
RP-1AH-S00	Japanese	BU220C734G51	TU117C201G01	C1 or Later
	English(CE)	BU220C734G52	TU117C203G01	
	German(CE)	BU220C734G53	TU117C204G01	
	English(Not CE)	BU220C734G54	TU117C202G01	
RP-1AHC-SB00	Japanese	BU220C734G61	TU117C201G01	C1 or Later
	English(CE)	BU220C734G62	TU117C203G01	
	German(CE)	BU220C734G63	TU117C204G01	
	English(Not CE)	BU220C734G64	TU117C202G01	
RP-1AHW-S00	Japanese	BU220C734G71	TU117C201G01	C1 or Later
	English(CE)	BU220C734G72	TU117C203G01	
	German(CE)	BU220C734G73	TU117C204G01	
	English(Not CE)	BU220C734G74	TU117C202G01	
RP-1AHC-SA00	Japanese	BU220C734G81	TU117C201G01	C1 or Later
	English(CE)	BU220C734G82	TU117C203G01	
	German(CE)	BU220C734G83	TU117C204G01	
	English(Not CE)	BU220C734G84	TU117C202G01	

B. RP-3AH Series

Model Name	Language	Robot Arm	Controller	Software Version
RP-3AH	Japanese/	BU220C932G11	TU117C111G01	H3 or Later
	English/German	BU220C932G13	TU117C112G01	
		BU220C932G13	TU117C113G01	
RP-3AHC-SB	Japanese/	BU220C932G21	TU117C111G01	H3 or Later
	English/German	BU220C932G23	TU117C112G01	
		BU220C932G23	TU117C113G01	
RP-3AHW	Japanese/	BU220C932G31	TU117C111G01	H3 or Later
	English/German	BU220C932G33	TU117C112G01	
		BU220C932G33	TU117C113G01	
RP-3AHC-SA	Japanese	BU220C932G41	TU117C111G01	H3 or Later
	English/German	BU220C932G43	TU117C112G01	
		BU220C932G43	TU117C113G01	
RP-3AH-S00	Japanese	BU220C813G51	TU117C201G01	C1 or Later
	English(CE)	BU220C813G53	TU117C203G01	
	German(CE)	BU220C813G55	TU117C204G01	
	English(Not CE)	BU220C813G57	TU117C202G01	
RP-3AHC-SB00	Japanese	BU220C813G61	TU117C201G01	C1 or Later
	English(CE)	BU220C813G63	TU117C203G01	
	German(CE)	BU220C813G65	TU117C204G01	
	English(Not CE)	BU220C813G67	TU117C202G01	
RP-3AHW-S00	Japanese	BU220C813G71	TU117C201G01	C1 or Later
	English(CE)	BU220C813G73	TU117C203G01	
	German(CE)	BU220C813G75	TU117C204G01	
	English(Not CE)	BU220C813G77	TU117C202G01	
RP-3AHC-SA00	Japanese	BU220C813G81	TU117C201G01	C1 or Later
	English(CE)	BU220C813G83	TU117C203G01	
	German(CE)	BU220C813G85	TU117C204G01	
	English(Not CE)	BU220C813G87	TU117C202G01	

C. RP-5AH Series

Model Name	Language	Robot Arm	Controller	Software Version
RP-5AH	Japanese/ English/German	BU220C932G12	TU117C111G01	H3 or Later
		BU220C932G14	TU117C112G01	
		BU220C932G14	TU117C113G01	
RP-5AHC-SB	Japanese/ English/German	BU220C932G22	TU117C111G01	H3 or Later
		BU220C932G24	TU117C112G01	
		BU220C932G24	TU117C113G01	
RP-5AHW	Japanese/ English/German	BU220C932G32	TU117C111G01	H3 or Later
		BU220C932G34	TU117C112G01	
		BU220C932G34	TU117C113G01	
RP-5AHC-SA	Japanese English/German	BU220C932G42	TU117C111G01	H3 or Later
		BU220C932G44	TU117C112G01	
		BU220C932G44	TU117C113G01	
RP-5AH-S00	Japanese	BU220C813G52	TU117C201G01	C1 or Later
	English(CE)	BU220C813G54	TU117C203G01	
	German(CE)	BU220C813G56	TU117C204G01	
	English(Not CE)	BU220C813G58	TU117C202G01	
RP-5AHC-SB00	Japanese	BU220C813G62	TU117C201G01	C1 or Later
	English(CE)	BU220C813G64	TU117C203G01	
	German(CE)	BU220C813G66	TU117C204G01	
	English(Not CE)	BU220C813G68	TU117C202G01	
RP-5AHW-S00	Japanese	BU220C813G72	TU117C201G01	C1 or Later
	English(CE)	BU220C813G74	TU117C203G01	
	German(CE)	BU220C813G76	TU117C204G01	
	English(Not CE)	BU220C813G78	TU117C202G01	
RP-5AHC-SA00	Japanese	BU220C813G82	TU117C201G01	C1 or Later
	English(CE)	BU220C813G84	TU117C203G01	
	German(CE)	BU220C813G86	TU117C204G01	
	English(Not CE)	BU220C813G88	TU117C202G01	

■ Revision history

Date	Specifications No.	Details of revisions	Rev.
November 19, 1999		First print	*
June 14, 2000	P1	A1 : "Declaration Type of models" was updated.	A
March 20, 2002	P1	B1 : "prEN50082-2/Aug.1996" was updated by "EN61000-6-2/1999". B2: "Declaration Type of models" was updated.	B
April 6, 2006	P1	Standards Update	C
June 25 , 2009	P1	Standards update(2004/108/EC)	D
September 4, 2009	P1	Standards update(2006/42/EC)	



Authorised representative:

mitsubishi electric europe b.v. germany

Gothaer Str. 8, 40880 Ratingen / P.O. Box 1548, 40835 Ratingen, Germany