



Energy Saving Data Collecting Server
EcoWebServerIII
MODEL

MES3-255C-EN/MES3-255C-DM-EN

User's Manual (Setting)

- Before operating the instrument, you should first read thoroughly this operation manual for safe operation and optimized performance of the product.
Deliver this user's manual to the end user.

Table of Contents

1. Preface	1-1
1.1. General notes	1-1
1.1.1. Warranty	1-1
1.1.2. Trademarks	1-2
1.1.3. Copyright Information	1-2
1.2. Safety precautions.....	1-3
1.2.1. Storage.....	1-3
1.2.2. Other notes.....	1-3
1.3. Precautions for use	1-3
1.4. Main features and specifications	1-5
1.4.1. Main features of the EcoWebServerIII setting software	1-5
1.4.2. System configuration.....	1-5
1.4.3. Specifications	1-7
2. Before use	2-1
2.1. Recommended system environment.....	2-1
2.2. Glossary	2-2
2.3. Installing the software.....	2-4
2.4. Uninstalling the software	2-7
2.5. Upgrading the software	2-9
3. Flow of settings	3-1
3.1. Procedures for initial settings (Common)	3-1
3.2. Setting procedures for starting operation (without demand control function)	3-9
3.3. Setting procedures for starting operation (with demand control function).....	3-10
4. Operating procedures	4-1
4.1. Starting/exiting the setting software	4-3
4.2. Project management	4-5
4.2.1. Registering a new project.....	4-5
4.2.2. Opening a project	4-7
4.2.3. Deleting a project	4-8
4.2.4. Modifying the project information	4-9
4.2.5. Copying a project	4-10
4.2.6. Backing up projects	4-11
4.2.7. Restoring projects	4-14
4.3. Demand control and Control Section Specifications (only with demand control function).....	4-17
4.3.1. Demand measuring function	4-17
4.3.2. Demand control and alarm function	4-27
4.3.3. Demand Control Function	4-35
4.3.4. Seasonal Time Zone Control Function.....	4-55
4.4. Configure the demand control setting	4-56
4.4.1. Normal demand setting (setting of the instrument information)	4-56
4.4.2. Demand alarm and control setting	4-61
4.4.3. Demand calendar setting (Only when carrying out management based on calendar setting)	4-68
4.5. Measuring Data Collection Settings [Normal Settings]	4-76
4.5.1. CC-Link terminal registration.....	4-76
4.5.2. MODBUS terminal registration	4-86
4.5.3. PLC/GOT registration.....	4-95
4.5.4. Measuring point registration.....	4-102
4.5.5. Measuring point group registration.....	4-120
4.6. Measuring data collection setting [Advanced settings]	4-125
4.6.1. Virtual measuring point registration.....	4-125

4.6.2. Specific consumption measuring point registration.....	4-134
4.6.3. Equipment registration	4-142
4.6.4. Equipment group registration	4-150
4.7. Project operation	4-157
4.7.1. Project saving	4-157
4.7.2. Project writing	4-158
4.7.3. Project reading	4-163
4.7.4. Confirmation of project	4-167
4.8. Options	4-171
4.8.1. Time Settings.....	4-172
4.8.2. IP address settings.....	4-176
4.8.3. Auto time settings.....	4-191
4.8.4. Logging date/time settings	4-193
4.8.5. Setting of the login IDs and passwords.....	4-195
4.8.6. Version up of Main Program.....	4-204
4.9. Setting external device coordination	4-207
4.9.1. Data output settings	4-208
4.9.2. Data output settings (demand control) (Only when demand control function is provided)	4-218
4.9.3. Contact output settings.....	4-223
4.9.4. SMTP server settings	4-233
4.9.5. Demand notification (Only with models provided with demand control function).....	4-237
4.9.6. EcoWebServerIII error notification settings.....	4-241
4.9.7. Regular report registration	4-249
4.9.8. Upper and lower limit monitoring notification registration	4-255
4.9.9. Operating status monitoring notification registration	4-262
4.9.10. Specific consumption target value monitoring notification registration	4-269
4.9.11. Energy planning value monitoring notification registration.....	4-276
4.9.12. FTP server setting	4-283
4.9.13. Transfer enable/disable, transfer destination folder setting	4-287
4.9.14. Energy saving level monitor setting (Only for models with demand control function)	4-290
4.9.15. Air-conditioner connection settings (Only for models with demand control function)	4-293
4.9.16. Demand setting (PLC) (Only for models with the demand control function).....	4-296
4.10. Test and Adjustment Function	4-302
4.10.1. Terminal connection check.....	4-304
4.10.2. Contact output operation check	4-308
4.10.3. Demand notification (only models with demand control function).....	4-313
4.10.4. Error, regular notification check.....	4-317
4.10.5. Measuring point data monitoring report check.....	4-321
4.10.6. File automatic transfer check	4-325
4.10.7. Air-controller connection check (only models with demand control function)	4-329
4.10.8. Integrated count value settings (only models with demand control function)	4-331
4.10.9. Data collection	4-335
4.10.10. Deleting data	4-338
4.10.11. EcoWebServerIII reset.....	4-341
5. Appendix	5-1
5.1. List of support terminals(CC-Link terminal).....	5-1
5.2. List of model information (CC-Link terminal).....	5-3
5.2.1. EMU4-BD1A-MB	5-3
5.2.2. EMU4-HD1A-MB	5-3
5.2.3. EMU4-BD1-MB.....	5-4
5.2.4. EMU4-HD1-MB	5-4
5.2.5. EMU4-FD1-MB.....	5-4
5.2.6. EMU4-BM1-MB	5-5

5.2.7. EMU4-HM1-MB	5-5
5.2.8. EMU4-LG1-MB	5-5
5.2.9. EMU4-A2	5-6
5.2.10. EMU4-VA2	5-6
5.2.11. EMU2-BM1-C	5-6
5.2.12. EMU-HM1-C	5-7
5.2.13. EMU2-RD3-C, EMU2-RD5-C, EMU2-RD7-C	5-7
5.2.14. EMU2-RD2-C-4W, EMU2-RD4-C-4W	5-7
5.2.15. EMU3-DP1-C	5-7
5.2.16. MDU(WS)	5-7
5.2.17. MDU(WS-V)	5-8
5.2.18. AE-SW(BIF-CC)	5-8
5.2.19. ME96NSR	5-8
5.2.20. ME96SSHB-MB	5-8
5.2.21. ME96SSRB-MB	5-8
5.2.22. ME96SSHA-MB	5-9
5.2.23. ME96SSRA-MB	5-9
5.2.24. ME96SSH-MB	5-9
5.2.25. ME96SSR-MB	5-9
5.2.26. ME110SSR-C(H)	5-10
5.2.27. ME110NSR-C	5-11
5.2.28. AJ65BT-68TD	5-11
5.3. List of measured items (CC-Link terminal)	5-12
5.3.1. EMU4-BD1A-MB	5-12
5.3.2. EMU4-HD1A-MB	5-13
5.3.3. EMU4-BD1-MB	5-15
5.3.4. EMU4-HD1-MB	5-16
5.3.5. EMU4-FD1-MB	5-18
5.3.6. EMU4-BM1-MB	5-20
5.3.7. EMU4-HM1-MB	5-21
5.3.8. EMU4-LG1-MB	5-22
5.3.9. EMU4-A2	5-23
5.3.10. EMU4-VA2	5-25
5.3.11. EMU4-AX4	5-27
5.3.12. EMU4-PX4	5-27
5.3.13. EMU2-RD3-C, EMU2-RD5-C, EMU2-RD7-B	5-28
5.3.14. EMU2-RD2-C-4W, EMU2-RD4-C-4W	5-29
5.3.15. EMU3-DP1-C	5-30
5.3.16. MDU (WS-V)	5-31
5.3.17. MDU(WS)	5-32
5.3.18. AE-SW(BIF-CC)	5-33
5.3.19. ME96NSR	5-34
5.3.20. ME96SSHB-MB	5-36
5.3.21. ME96SSRB-MB	5-38
5.3.22. ME96SSHA-MB	5-40
5.3.23. ME96SSRA-MB	5-42
5.3.24. ME96SSH-MB (1P2W, 3P3W)	5-44
5.3.25. ME96SSH-MB (1P3W)	5-46
5.3.26. ME96SSH-MB (3P4W)	5-48
5.3.27. ME96SSR-MB (1P2W, 3P3W)	5-50
5.3.28. ME96SSR-MB (1P3W)	5-51
5.3.29. ME96SSR-MB (3P4W)	5-52
5.3.30. ME110SSR-C(H) (1P2W, 1P3W, 3P3W)	5-54

5.3.31. ME110SSR-C(H) (3P4W).....	5-55
5.3.32. ME110NSR-C	5-57
5.3.33. AJ65BT-68TD	5-58
5.3.34. AJ65BT-64RD3	5-58
5.3.35. AJ65BT-64AD	5-59
5.3.36. AJ65SBTB1-8D	5-59
5.3.37. AJ65SBTB1-16D	5-59
5.3.38. AJ65SBTB1-32D	5-60
5.3.39. AJ65SBTB1-16DT	5-60
5.3.40. AJ65SBTB1-32DT	5-60
5.4. List of support terminals (MODBUS® terminal [Support terminal])	5-61
5.5. List of model information (MODBUS® terminal [Support terminal])	5-63
5.5.1. ME96SSHB-MB	5-63
5.5.2. ME96SSRB-MB	5-63
5.5.3. ME96SSEB-MB	5-63
5.5.4. ME96SSHA-MB	5-63
5.5.5. ME96SSRA-MB	5-63
5.5.6. ME96SSEA-MB	5-64
5.5.7. ME96SSH-MB	5-64
5.5.8. ME96SSR-MB	5-64
5.5.9. ME96SSE-MB	5-64
5.5.10. EMU4-BD1A-MB	5-65
5.5.11. EMU4-HD1A-MB	5-65
5.5.12. EMU4-BD1-MB	5-65
5.5.13. EMU4-HD1-MB	5-66
5.5.14. EMU4-FD1-MB	5-66
5.5.15. EMU4-BM1-MB	5-66
5.5.16. EMU4-HM1-MB	5-67
5.5.17. EMU4-LG1-MB	5-67
5.5.18. EMU4-A2	5-67
5.5.19. EMU4-VA2	5-68
5.5.20. MDU_breaker	5-68
5.5.21. AE-SW(BIF-MD)	5-68
5.6. List of measured items (MODBUS® terminal [Support terminal])	5-69
5.6.1. ME96SSHB-MB	5-69
5.6.2. ME96SSRB-MB	5-71
5.6.3. ME96SSEB-MB	5-73
5.6.4. ME96SSHA-MB	5-74
5.6.5. ME96SSRA-MB	5-77
5.6.6. ME96SSEA-MB	5-79
5.6.7. ME96SSH-MB	5-80
5.6.8. ME96SSR-MB	5-82
5.6.9. ME96SSE-MB	5-84
5.6.10. EMU4-BD1A-MB	5-85
5.6.11. EMU4-HD1A-MB	5-86
5.6.12. EMU4-BD1-MB	5-88
5.6.13. EMU4-HD1-MB	5-89
5.6.14. EMU4-FD1-MB	5-91
5.6.15. EMU4-BM1-MB	5-93
5.6.16. EMU4-HM1-MB	5-94
5.6.17. EMU4-LG1-MB	5-95
5.6.18. EMU4-A2	5-96
5.6.19. EMU4-VA2	5-98
5.6.20. EMU4-AX4	5-100

5.6.21. EMU4-PX4	5-100
5.6.22. MDU breaker	5-101
5.6.23. AE-SW(BIF-MD).....	5-102
5.7. List of measured items of devices	5-103
5.7.1. Bit data	5-103
5.7.2. Word data	5-107
5.7.3. Long data	5-110
5.8. PLC Setting	5-113
5.8.1. Communicate with EcoWebServerIII by Ethernet (CH2)	5-113
5.8.2. Communicate with EcoWebServerIII by Ethernet/Serial (CH2).....	5-115
5.9. GOT communication settings	5-116
5.9.1. Settings to connect EcoWebServerIII to GOT with Ethernet	5-116
5.10. Data output to PLC/GOT	5-119
5.10.1. Double word	5-119
5.11. Data output specification to PLC/GOT	5-120
5.11.1. Data output	5-120
5.11.2. Measuring error information	5-121
5.11.3. Updating time information	5-121
5.11.4. Outputting demand information (Only with demand control function).....	5-122
5.12. EcoWebServerIII MC protocol server.....	5-124
5.12.1. Communications parameter	5-124
5.12.2. Local virtual device data output contents (Only with demand control function).....	5-125
5.13. List of FTP commands.....	5-127
5.13.1. List of FTP commands	5-127
5.13.2. Acquisition of data files by FTP command	5-128
5.14. How to check the MAC address	5-132
5.15. List of prohibited characters	5-133
5.16. List of error codes	5-134
5.16.1. Terminal connection check (CC-Link terminal)	5-134
5.16.2. Terminal connection check (MODBUS terminal).....	5-134
5.16.3. Mail sending check.....	5-134
5.16.4. File automatic transfer check	5-135
5.16.5. Air-controller connection check	5-135
5.17. Troubleshooting	5-136

1. Preface

Thank you for purchasing Mitsubishi's Energy Saving Data Collecting Server (hereinafter, EcoWebServerIII). This instruction manual describes how to manage, set up, and operate projects to operate EcoWebServerIII and how to operate the EcoWebServerIII setting software (hereinafter, "setting software") for the maintenance of EcoWebServerIII. This instruction manual assumes that the reader has knowledge of personal computers, networks, and various types of servers and basic knowledge of electric equipment. Please read it carefully, and use the product properly.

Keep this instruction manual in an accessible place for future reference whenever needed.

Make sure it is delivered to the end user.

For more information on the display function of EcoWebServerIII, see "**Instruction Manual – Operating**".

For information on how to handle the main unit of EcoWebServerIII, see "**Instruction Manual – Hardware**".

Related user's manual	Document No.
Instruction Manual – Hardware	IB63652
Instruction Manual – Hardware (with demand control function)	IB63895
Instruction Manual – Operating	IB63918

1.1. General notes

1.1.1. Warranty

- Please contact your nearest Mitsubishi Sales Office or dealer for technical inquiries regarding the product.
- This instruction manual and equipment have undergone strict quality control and product inspections prior to shipment. However, if any problems occur as a result of the manufacturing of this equipment or instruction manual, a replacement will be provided. Please contact your dealer in this case. Note that this does not apply to faults or damage resulting from force majeure or improper usage, etc.
- Mitsubishi shall not be held liable for any trouble in the user or third party's system, legal problems, faults resulting from improper use of equipment, faults occurring during the use of this equipment, or any damage caused by other faults.
- The charge-free warranty period for the product shall be the shorter period either of one year from the date of your purchase or the date when the product is delivered to your specified delivery location or 18 months from the time of the shipment from our factories (counted from the date of manufacture).
However, the charge-free warranty shall not apply to the following cases even during the charge-free warranty period:
 - (1) When the cause is an improper usage
 - (2) When the cause is an improper operationThe charge-free warranty becomes invalid at the expiration of the charge-free warranty period.
- The charge-free warranty term for repaired parts shall not be extended.

1.1.2. Trademarks

- Microsoft, Windows, Microsoft Edge, and Excel are registered trademarks of Microsoft Corporation in the United States and other countries.
-  Java is a registered trademark of Oracle Corporation and its subsidiaries and affiliates in the United States and other countries.
- iOS is a trademark or registered trademark of Cisco in the United States and other countries, and is used under license.
- Android, Chrome are trademarks of Google LLC.
- Safari is a registered trademark of Apple, Inc. in the United States and other countries.
- Ethernet is a trademark of FUJIFILM Business Innovation Corp.
- MODBUS is a trademark of Schneider Electric USA Inc.
- Other company and product names herein are trademarks or registered trademarks of their respective owners
- In the text, trademark symbols such as "TM" and "®" may not be written.

1.1.3. Copyright Information

This product uses ComponentOne.

The copyright of ComponentOne belongs to "GrapeCity inc."

ComponentOne

Copyright (C) 2004 GrapeCity inc.

1.2. Safety precautions

1.2.1. Storage

When storing the CD-ROM, avoid the following places.

Failure to follow the instruction may cause a read error.

- Ambient temperature exceeds the specified temperature range (+5°C to +45°C).
- Relative humidity exceeds 30 to 80% RH or condensation is observed.
- Altitude exceeds 1000 m.
- Dust, corrosive gas, saline, and oil smoke exist.
- Frequent vibration or impact exists.
- Exposed to rain fall, water drop, or direct sunlight or near heaters.
- Metal pieces or conductive materials blow.
- Under strong electromagnetic field or noise.

1.2.2. Other notes

See the instruction manual of EcoWebServerIII–Hardware.

1.3. Precautions for use

Before configuring data, particular attention must be paid to the following points:

- Use the setting software after closing any other applications that are running.
If running in parallel with other applications, the setting software may not operate properly.
- If you have any questions about the installation, setting, and other technical matters of browsers and JavaVM (Java Virtual Machine) on PCs, contact your network administrator (or appropriate divisions).
- If you have any questions about the installation, setting, and other technical matters of various servers, including the SMTP (mail-sending) server and FTP (file) server, contact your network administrator (or appropriate divisions) or the manufacturer.

We don't offer technical support for the above.

- When having changed the display setting of the measuring point names and other settings, be sure to close the currently displayed Web browser and restart it. Otherwise, the change might not be updated due to the cache function of the web browser.
- When needed for keeping system security against illegal access from outside, users should take proper measure. We do not assume responsibility for any trouble arising from illegal access.

We recommend users to note the followings.

- 1) Use LAN for preventing illegal access from outside.
- 2) Take measures like firewall and VPN when connecting internet.
- 3) Before using, change the default account (login ID, password).

Set the account so as not to leak the account information according to the following precautions.

Avoid using simple string like Name, birth date and numbers.

Set the complex logging ID and password at least 8 characters by mixing uppercase or lowercase alphanumeric characters.

- If there is an error in the model information on the terminal registration dialog box, the number of digits after decimal point of the measured data may be incorrect, or a measurement error may occur.

Be sure to **specify the correct model information.**

- The monitoring of the upper and lower limits is performed every 10 seconds; therefore, some abnormalities in the upper and lower limits may not be detected.

Do not use the unit for the monitoring of the measured data of urgency.

Otherwise, an accident may occur. In such cases, we are not responsible for any accidents.

- The monitoring of the operation statuses is performed every 10 seconds; therefore, some statuses may not be detected.

Do not use the unit for the monitoring of alarms of urgency.

Otherwise, an accident may occur. In such cases, we are not responsible for any accidents.

- The monitoring of the target Specific consumptions is performed every 1 hour; therefore, the detection may be delayed.

Do not use the unit for the monitoring of the Specific consumption data of urgency.

Otherwise, an accident may occur. In such cases, we are not responsible for any accidents.

- The monitoring of the energy planned values is performed every 1 day; therefore, the detection may be delayed.

Do not use the unit for the monitoring of the measured data of urgency.

Otherwise, an accident may occur. In such cases, we are not responsible for any accidents.

- As for the mail delivering through the monitoring notification function, the mail reception may be delayed according to environments of your SMTP server, network, and mail client.

Do not use the unit for the notifications of urgency.

Otherwise, an accident may occur. In such cases, we are not responsible for any accidents.

- The contact output of the monitoring statuses is performed every 10 seconds; therefore, the output may be delayed from the satisfaction of the contact output condition.

Do not use the unit for the contact output of the monitoring of urgency.

Otherwise, an accident may occur. In such cases, we are not responsible for any accidents

- **Do not perform the writing of projects concurrently from multiple client PCs** via a LAN.

Otherwise, the writing may not be performed properly, and EcoWebServerIII may not be launched.

- If the demand is not set correctly, a correct measurement may not be possible, the load may be inadvertently cut off, and it may not be able to cut off the load.

Set the demand correctly.

- When an air-conditioning system, etc., is set as the demand control load, if the circuit is configured to directly cut off the outdoor unit's main power or the compressor's main power, a system fault could occur, or the product quality or life may be lost depending on the model.

Consult with the air-conditioner maker for details on compatibility of this product with the air-conditioning system in use.

- Please match the indicated value of the device after replacement.

If there is a difference in the indicated values, the difference will be reflected in the collected data.


Please use the terminal to adjust the indicated value.

1.4. Main features and specifications

1.4.1. Main features of the EcoWebServerIII setting software

- The setting software can manage the EcoWebServerIII projects of up to 50 units from a PC connected to a LAN.
- The setting software can easily configure and modify projects.
- The setting software can perform various maintenance functions, including moving the data files stored in EcoWebServerIII to a PC.

1.4.2. System configuration

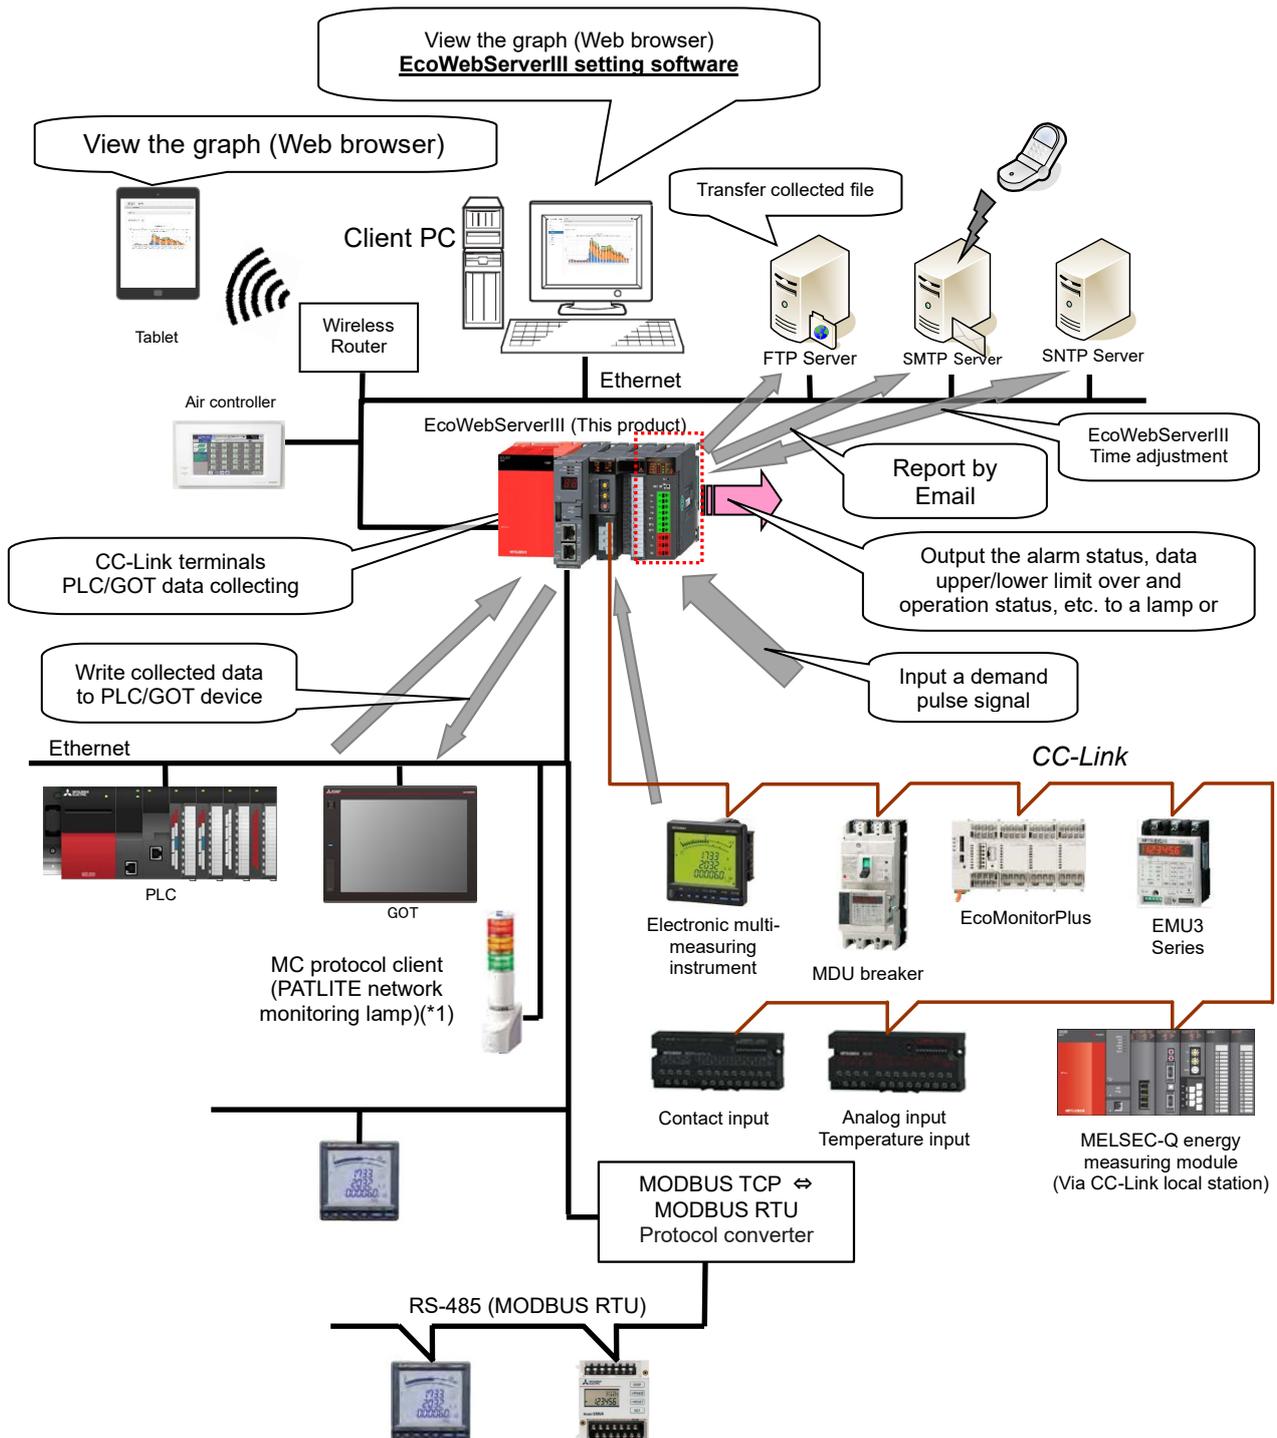



The figure above is a system configuration (CC-Link communication, demand control) example. When using CC-Link communication device without demand control function, note the following points are different from the above figure.

- Demand control unit is not attached to the EcoWebServerIII.
- There is no cooperative function with air conditioning controller.
- There is no cooperative function with patlite (MC protocol).
- Shape of the power supply unit of EcoWebServerIII is different

1.4.3. Specifications

The display names and description of the functions of the setting software are as follows:

Name	Description of functions
Project management	
New registration of project	Create a new project.
Deletion of project	Delete a project.
Change of project	Modify the content of a project.
Copy of project	Copy a project.
Backup of project	Back up project information on an external memory.
Restoration of project	Restore project information from an external memory.
Project settings	
Demand settings	
Normal	Configure settings for demand control.
Alarm and control	Configure basic settings for demand control.
Calendar	Configure the demand alarm and demand control settings.
Calendar	Configure the demand control schedule.
Data collecting settings [Normal settings]	
Configure the settings for collecting measuring data.	
CC-Link Terminal	
CC-Link Terminal	Display a list of registered CC-Link terminals.
CC-Link Terminal	Register the CC-Link terminal.
MODBUS terminal	
Display a list of registered MODBUS terminals	
MODBUS terminal	Register the MODBUS terminal [Support terminal] and general-purpose MODBUS terminal.
PLC / GOT	
Display a list of PLC/GOT connected to the registered Ethernet.	
PLC, GOT	Register the PLC/GOT connected to Ethernet with CH2.
Measuring point	
Set the measuring point group.	
List of measuring point	
Display a list of registered measuring points	
Registration of CC-Link, MODBUS measuring point	
Register the CC-Link terminal or as a measuring point. Register the MODBUS® terminal [Support terminal], general-purpose MODBUS® terminal, or device data as a measuring point.	
Measuring point group set	
Set the measuring point group.	
Data collecting settings [Extended settings]	
Configure the settings for the measuring data collection advanced functions.	
Virtual	
Display a list of virtual measuring points.	
Virtual measuring point	Register the virtual measuring points.
Specific consumption	
Display a list of specific consumption measuring points.	
Specific consumption measuring point	
Register the specific consumption measuring point.	
Selection of the measuring point	
Select the measuring point/virtual measuring point to be used in the specific consumption computation.	
Equipment	
Display a list of equipment.	
Equipment list	
Register a piece of equipment.	
Equipment	
Select a measuring point/virtual measuring point to be used in the computation of equipment overall efficiency.	
Registration of display measuring point	
Register a display measuring point of the equipment.	
Equipment group list	
Display the list of equipment groups.	
Resistration of equipment group	
Register a piece of equipment in an equipment group.	
Project management	
Save, write, read, and confirm a project.	
Save	
Save the settings of a project.	
Write	
Write the settings of a project onto EcoWebServerIII or a memory card.	
Read	
Read the settings of a project from EcoWebServerIII or a memory card.	
confirm	
Compare the settings of a project against EcoWebServerIII or a memory card.	

(Continued on next page)

(Continued from previous page)

Name	Description of functions
Options	Configure the settings of the unit.
Time	Read the time data, and configures the time setting.
IP address	Configure the network settings.
IP address Settings	Configure the settings of the IP address and the DNS server.
Network information reading	Read the network information of EcoWebServerIII main unit.
Auto time adjustment	Configure the automatic time setting using the SNTP server.
Set logging time	Set the measuring point data logging date and time.
Password	Change the login ID and password.
For maintenance	Change the maintenance loginID and password.
For getting data	Change the data acquisition login ID and password.
For system management	Change the system administration login ID and password.
Version up of main program	Upgrade the software of EcoWebServerIII main unit.
Output	Configure the settings related to collaboration with external devices.
Output settings	Display the list of output groups.
Registration of the data output group	Register the output groups.
Data output set(Demand control)	Set the demand control function's data output destination.
Contact output	Display a list of contact output settings, and set the number of contact output points.
Registration of contact output condition	Register the contact output conditions.
Mail notification settings	Configure the mail notification settings.
Set SMTP server	Configure the mail notification SMTP server.
Demand notification	Configure the demand control and notification settings.
Error notification	Configure the unit error notification.
Initial condition 1	Configure the setting of notifications of launch, memory card errors and measurement error.
Initial condition 2	Configure the setting of notifications of launch transfer errors, auto time setting errors, and battery errors.
Initial condition 3	Configure the setting of notifications of launch data output errors.
Regular report	Displays the list of regular report settings.
Registration of regular report	Register the regular report settings.
Upper and lower limit monitoring	Display the list of upper/lower limit monitoring and notification
Upper and lower limit monitoring notification registration	Register an upper and lower limit monitoring and notification.
Operation status monitoring	Display a list of operating status monitoring and notification settings.
Registration of operating status monitoring notification	Register the operating status monitoring notifications.
Specific consumption target value monitoring	Display a list of specific consumption target value monitoring and notification settings.
Registration of specific consumption target value monitoring notification	Register the specific consumption target value.
Energy planning value monitoring	Display a list of energy plan value monitoring and notification settings.
Registration of energy planning value monitoring notification	Register the energy plan value monitoring settings.
File transfer	Configure the settings for file transfer.
Set FTP server	Configure the FTP server for file transfer.
Transmission destination folder set	Configure the transfer enable/disable state and transfer destination folder.
Energy saving cooperation settings	Configure the settings for energy saving collaboration.
Energy saving level monitor setting	Configure the energy saving monitoring and energy saving alarm.
Air-conditioner connection setting	Configure the connection with the air-conditioner controller.
Demand setting (PLC)	Change the demand setting value and time from the PLC/GOT.

(Continued on next page)

(Continued from previous page)

Name	Description of functions
Test	Configure the settings for each test and adjustment.
Confirm terminal connection	Configure the test for checking connection with the CC-Link terminal.
Confirm terminal connection(MODBUS)	Perform the test for checking connection with the MODBUS terminal.
Confirm contact output	Perform a test on all contact outputs.
Confirm mail sending	Perform a test related to mail transmission
Demand notification	Perform a demand control and notification mail send test.
Error, regular notification	Perform a unit error and regular notification mail send test.
Measuring point data monitoring report	Perform a measuring point data monitoring report mail send test.
Confirm file transfer	Perform a file transfer function test.
Confirm air-conditioner connection	Perform an air-controller connection test.
Integration value set	Set the demand count value.
Collect data	Collect the logging data.
Delete data	Delete the logging data.
Reset	Reset the unit.

<EcoWebServerIII and setting software specification>

Item		Specification	Remarks	
Connection device	CC-Link terminal	Number of connection	Up to 42 According to CC-Link terminal specifications *1	
		Model name/type name	EMU4-BD1A-MB, EMU4-HD1A-MB, EMU4-BD1-MB, EMU4-HD1-MB, EMU4-FD1-MB, EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB, EMU4-CNT-MB, EMU4-A2, EMU4-VA2, EMU4-AX4, EMU4-PX4, EMU2-RD3-C, EMU2-RD5-C, EMU2-RD7-C, EMU2-RD2-C-4W, EMU2-RD4-C-4W, EMU3-DP1-C, MDU(WS-V), MDU(WS), AE-SW(BIF-CC), ME96NSR, ME96SSHB-MB, ME96SSRB-MB, ME96SSHA-MB, ME96SSRA-MB, ME96SSH-MB, ME96SSR-MB, ME110SSR-C(H), ME110NSR-C, AJ65BT-68TD, AJ65BT-64RD3, AJ65BT-64AD, AJ65SBTB1-8D, AJ65SBTB1-16D, AJ65SBTB1-32D, AJ65SBTB1-16DT, AJ65SBTB1-32DT, QJ61BT11N, LCPULJ61BT11	
	MODBUS terminal	Number of connection	Up to 255 units	
		Model name/type name	ME96SSHB-MB, ME96SSRB-MB, ME96SSEB-MB, ME96SSHA-MB, ME96SSRA-MB, ME96SSEA-MB, ME96SSH-MB, ME96SSR-MB, ME96SSE-MB, EMU4-BD1A-MB, EMU4-HD1A-MB, EMU4-BD1-MB, EMU4-HD1-MB, EMU4-FD1-MB, EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB, EMU4-CNT-MB, EMU4-A2, EMU4-VA2, EMU4-AX4, EMU4-PX4, MDU breaker, AE-SW(BIF-MD)	
	PLC/GOT	Number of connection	32	Number that can be input and output number. Among them, data output is possible 8 only.
		Model name/type name	MELSEC PLC iQ-R, iQ-F, QCPU/LCPU/QnACPU, ACPU, AnACPU/AnUCPU, FXCPU(FX1x), FXCPU(FX3x) * FXCPU only serial connection GOT2000 series, GOT1000 series GT27/GT25/GT16/GT14/GT15 GT SoftGOT2000	
Measuring target	CC-Link terminal	Current, voltage, electric power, electric energy, etc.(Differs for each model)		
	MODBUS terminal			
	Demand control			Time(Year/month/day/hour/minute/second), Remaining time, Current demand (Whole day, time zone 1 – 10), Integrated value of consumption (Whole day, time zone 1 – 10), Predicted demand, Adjusted electrical power, Permissible power, Power limit
	PLC/GOT	Bit device, word device (16/32 bit)		
Measuring points	All measuring points	Up to 255 points	Include in the number of all measuring point. Not include in the number of all measuring point.	
	measuring points of operation monitoring	Up to 32 points		
	Virtual measuring point	Up to 128 points		
	Specific consumption measuring point	Up to 64 points		
	Equipment	Up to 42 points		
	Demand measuring point	2 points (Demand, Integrated value of consumption)		

*1 The following conditions.

Total number of stations

$$a+b \times 2+c \times 3+d \times 4 \leq 64$$

a: Number of units occupying 1 station

b: Number of units occupying 2 stations

c: Number of units occupying 3 stations

d: Number of units occupying 2 stations

Number of connected units

$$16 \times A+54 \times B+88 \times C \leq 2304$$

A: Number of remote I/O station units ≤ 64

B: Number of remote device station units ≤ 42

C: Number of local station/intelligent device station units ≤ 26

Item		Specification	Remarks	
Contact output functions *2	Output destination	Internal output unit (up to 16 points), CC-Link Remote I/O (up to 32 points)	Up to 32 points if CC-Link remote I/O only	
	Output points	Up to 32 points (Separate from all measuring points)		
	System	Up to 32 points	Include in the number of Output points.	
	Upper/lower limit alarm	Up to 32 points		
	Energy plan value monitoring	Up to 32 points		
	Specific consumption target value monitoring	Up to 32 points		
	Operating status monitoring	Up to 32 points		
	Demand alarm	Up to 5 points		
Demand control	Up to 12 points			
Energy saving collaboration functions	connection destination	Air-conditioner	Send the energy saving level and emergency stop order.	
	Number of connection	Up to 10		
Data output functions (Up to 8 in PLC and GOT)	Output destination	Device of PLC/GOT		
	Output contents and output cycle	Current data (Online measuring point)		Data for up to 8groups (255 points max.) can be outputted. Up to 32 points output per group (2 words device 1 point) Every 60 seconds period.
		Measurement error information		Data for up to 8groups (255 points max.) can be outputted. Up to 32 points output per group (1 word device 16 points) Every 30 second period.
	Demand information	Output the following data with 30 words fixed (every 10 seconds period) •Control device (1 word device) •Healty (1 word device) •Current time (Year/month/day/hour/minute/second: Each 1 word device) •Integrated value of consumption (2 words device) •Current demand (2 words device) •Predicted demand (2 words device) •Adjusted electrical power (2 words device) •Permissible power (2 words device) •Previous demand (2 words device) •Remaining time (1 word device) •Alarm state (1 word device) •Load control state(1 word device) •Demand target value (2 words device) •CVT ratio (2 words device) •Alarm type (1 word device) •Integrated value of consumption: Number of decimal digits (1 word device) •Current demand: Number of decimal digits (1 word device)	Either of PLC and GOT can be output.	
Logging function	Zoom	Collected at 1-minute or 5-minute intervals.		
	Daily	Collected on the hour, the half-hour or 15 minutes.		
	Monthly	Collected on the specified hour (at 00 minutes), once every day		
	Annual	Collected on the specified hour of the specified day (at 00 minutes), once every month		
	Demand(daily)	Collected on the specified demand time limit (15/30/60 minutes)		
	Demand(monthly)	Collected on the specified hour (at 00 minutes), once every day Demand value is Max. of a day		
	Demand(annual)	Collected on the specified hour of the specified day (at 00 minutes), once every month Demand value is Max. of a month		

Item			Specification		Remarks
Calculation function	Daily	Virtual calculation points *3	Computed from the data collected on the hour, the half-hour or 15 minutes	Four arithmetic computations with parentheses can be performed on up to 16 arithmetic elements. A virtual calculation point cannot be registered within another virtual calculation point. (Only normal measuring points can be registered.)	Virtual measuring point can not register to the arithmetic expression of virtual measuring point.
		Specific consumption points *3		Energy amount (measuring point or virtual calculation point) is divided by production amount (measuring point or virtual calculation point).	
		Equipment efficiency		Quality = Number of non-defective products / Number of processed products Performance = (Standard cycle time × Number of processed products) / (Loading time - Downtime) Availability = (Loading time - Downtime) / Loading time Overall equipment efficiency = Availability × Performance × Quality	
	Monthly *3	Virtual measuring point	Computed from the data collected at the logging time once every day	Same as daily	
		Specific consumption measuring point		Same as daily	
	Annual *3	Virtual measuring point	Computed from the data collected at the logging time once every month	Same as daily	
		Specific consumption measuring point		Same as daily	

*2 Contact output is possible up to 32 points by using internal output unit (up to 16 points) , CC-Link remote I/O and MODBUS terminal.

In addition, contact output of the following is possible within 32 points.

(Error information, Upper/lower limit monitoring, Energy plan value monitoring, Specific consumption target value monitoring, Operating status monitoring, Demand alarm, and Demand control.)

Number of output points are up to 32 points even if contact output is CC-Link remote I/O and MODBUS terminal.

*3 Calculation accuracy of the virtual measuring point and the specific consumption measuring point, can be selected from [Integer], [1 digit], [2 digits], [3 digits], [4 digits], and [5 digits] (the number of digits after the decimal point).

Item		Specification	Remarks
Saving function	Zoom (1 minute)	Data for 62 days 1-hour data is saved in one file. (Data at 1-minute intervals from one hour (at 00 minutes) to the next hour (at 00 minutes))	Saved in the memory card.
	Zoom (5 minutes)	Data for 14 days 1-hour data is saved in one file. (Data at 5-minutes intervals from one hour (at 00 minutes) to the next hour (at 00 minutes))	
	Daily	Data for 186 days 1-day data is saved in one file. (Data at 15 minutes, 30-minutes or 1-hour intervals from one day (at 00:00) to the next day (at 00:00))	
	Monthly	Data for 60 months 1-month data is saved in one file. (Data at 1-day intervals from the 1st day of one month to the 1st day of the next month)	
	Annual	Data for 5 years 1-year data is saved in one file. (Data at 1-month intervals from January of one year to January of the next year)	
	Virtual (daily)	Data for 186 days 1-day data is saved in one file. (Data at 15 minutes, 30-minutes or 1-hour intervals from one day (at 00:00) to the next day (at 00:00))	
	Virtual (Monthly)	Data for 60 months 1-month data is saved in one file. (Data at 1-day intervals from the 1st day of one month to the 1st day of the next month)	
	Virtual (Annual)	Data for 5 years 1-year data is saved in one file. (Data at 1-month intervals from January of one year to January of the next year)	
	Specific consumption (daily)	Data for 186 days 1-day data is saved in one file. (Data at 15 minutes, 30-minutes or 1-hour intervals from one day (at 00:00) to the next day (at 00:00))	
	Specific consumption (Monthly)	Data for 60 months 1-month data is saved in one file. (Data at 1-day intervals from the 1st day of one month to the 1st day of the next month)	
	Specific consumption (Annual)	Data for 5 years 1-year data is saved in one file. (Data at 1-month intervals from January of one year to January of the next year)	
	Equipment (daily)	Data for 186 days 1-day data is saved in one file. (Data at 15 minutes, 30-minutes or 1-hour intervals from one day (at 00:00) to the next day (at 00:00))	
	Operation history	Operation monitoring information is saved in operation history data files. (64 KB × 4 × Number of operation monitoring points)	
	System log	System error information is saved in system log files. (256 KB × 8)	
	Demand (daily)	Data for 186 days 1-day data is saved in one file. (Data at 15-minutes, 30-minutes or 1-hour intervals from one day (at 00:00) to the next day (at 00:00))	
Demand (Monthly)	Data for 60 months 1-month data is saved in one file. (Data at 1-day intervals from the 1st day of one month to the 1st day of the next month)		
Demand (Annual)	Data for 5 years 1-year data is saved in one file. (Data at 1-month intervals from January of one year to January of the next year)		
Demand alarm and control history	Record the occurrence/restore of the alarm, ON/OFF of the alarm output, and ON/OFF of the control output to the demand alarm/control history data file. (128KB×62 files)		
Deleting function		Logging data files are deleted when their storage period expires.	

Item		Specification	Remarks
Transfer functions	Zoom (1 minute)	1-hour data is transferred once every hour.	Data is automatically transferred to a designated FTP server. *4
	Zoom (5 minutes)	1-hour data is transferred once every hour.	
	Daily	Data of the day is transferred once every hour.	
	Monthly	Data of the month is transferred at the specified time, once every day.	
	Annual	Data of the year is transferred at the specified time, once every month.	
	Virtual (daily)	Data of the day is transferred once every hour.	
	Virtual (Monthly)	Data of the month is transferred at the specified time, once every day.	
	Virtual (Annual)	Data of the year is transferred at the specified time, once every month.	
	Specific consumption (daily)	Data of the day is transferred once every hour.	
	Specific consumption (Monthly)	Data of the month is transferred at the specified time, once every day.	
	Specific consumption (Annual)	Data of the year is transferred at the specified time, once every month.	
	Equipment (daily)	Data of the day is transferred once every hour.	
	Operation history	Updated operation history files are transferred once every hour.	
	System log	The latest data is transferred once every hour.	
	Demand (daily)	Data of the day is transferred once every hour.	
	Demand (Monthly)	Data of the month is transferred at the specified time, once every day.	
	Demand (Annual)	Data of the year is transferred at the specified time, once every month.	
Demand alarm and control history	The latest data is transferred once every hour.		
Server function	Web server	Communicates with up to 5 clients simultaneously. Web browsers are used to view data.	
	FTP server	Communicates with 2 clients. Transfers files via FTP in response to a command request from a client.	
Client function	FTP client *5	Communicates with one server. Automatically transfers data files to the FTP server. (A path can be specified for each type.)	
	SMTP client *5	Communicates with one SMTP server. Notifies upper and lower limit errors and operation monitoring information by email.	
	SNTP client *5	Communicates with one SNTP server. Acquires and configures the time information periodically.	
	HTTP client	Communication with the air-conditioner of up to 10 Carry out the notification of the emergency stop control and Energy saving level change.	

*4 Because logging data file of the today or the current month will be overwritten, file transfer is unable when the data file in the FTP server is being used in other application S/W. Also, when the data file is set overwrite protection in the FTP server, cannot transfer.

*5 When the FTP server is stopped or LAN communication is abnormal, can not be transferred and retransmission. Also, since any data in the FTP server is not deleted automatically, clean up the server by deleting the data at regular intervals.

Item		Specification	Remarks
Display function	Real-time Monitor	<p>Demand value Monitor</p> <p>Display the following information about the demand control</p> <p><Demand trend (today)> Bar graph: Current demand, Predicted demand, Demand (today)</p> <p><Demand load curves> Line graph: Current demand, Predicted demand, Target demand value, Fixed alarm value</p> <p><Demand information> Value: Current demand, Predicted demand, Adjusted power, Permissible power, Limit alarm value, Target demand value, Fixed/Limit alarm value Alarm status: Level 1/Level 2/Limit(Fixed)/Energy saving level Time information: Time, Remaining time, Time zone Daily pattern Control status: Control type, Priority, ON/OFF Display update interval (automatic update): 10 sec</p>	
	Current value Monitor	<p>•Select the display type from the [Any Point] or the [Group]</p> <p>•Select the view type from the [Accumulated value], [Hourly diff.], [Daily diff.], [Monthly diff.]</p> <p><Analog value> Display the current measuring data</p> <p><Electric energy and pulses> Accumulated value: Present meter indicated value Hourly diff.: Accumulated value from the previous hour to the present hour Daily diff.: Accumulated logging time from the previous month to the present month Monthly diff.: Accumulated logging time from the previous year to the present year</p> <p><Demand measuring point> Current demand(Whole day, Time zone 1 - 10) : Present measuring data Electric energy(Whole day, Time zone 1 - 10) Accumulated value: Current integrated value Hourly diff.: Accumulated value from the previous hour to the present hour Daily diff.: Accumulated logging time from the previous month to the present month Monthly diff.: Accumulated logging time from the previous year to the present year</p> <p>Displays up to 10 measuring points in one screen. Display update interval (automatic update): 10 sec</p>	
	Contact output Monitor	<p>Display the contact output status of internal output unit and CC-Link remote I/O, contact control is possible by password authentication.</p> <p><Contact control> Alarm output: ON -> OFF only Control output: ON/OFF The number of display points: 32 Display update interval (automatic update): 10 sec</p>	

Item		Specification	Remarks
Display function	Graph display	Demand trend Graph	Display the demand trend graph Display interval: Select from Daily/Monthly/Annual
		Daily	Display the demand for each demand time in 1 day. Bar graph: Demand(for each time zone) Line graph: Target demand value, Fixed alarm value
		Monthly (Max demand of day)	Display the max. demand value of a day for 1 month. Bar graph: Max demand of day(for each time zone)
		Annual (Max demand of month)	Display the max. demand value of a month for 13 months. Bar graph: Max demand of month(for each time zone) Line graph: Max List: Demand time limit when max demand of month is occurred(for each time zone)
		Measuring point comparison Graph	<ul style="list-style-type: none"> • Display the multiple measuring points data of the specified display intervals(Zoom/Daily/Monthly/Annual) and display date and time. • Display the measuring point comparison graph of max 12 measuring points in 1 screen.(The number of graph up to 10) (Display the measuring point alongside in the same graph or vertical row) • Display the graph of measuring point that was registered to the display list file.(Up to 32 files) Optionally, can be added(deleted) to(from) the display list. <p>The following measuring point can be selected</p> <ul style="list-style-type: none"> • Electric energy and pulses • Analog value • Analog value(power factor) • Virtual measuring point • Demand measuring point • Electric energy (Whole day, Time zone 1 - 10) • Demand (Whole day, Time zone 1 - 10) <p>Display update interval (automatic update): Zoom(1 min)/Zoom(5 min)/Daily ... 1 min Monthly/Annual ... 1 hour</p>
		Date comparison Graph	<ul style="list-style-type: none"> • Display the measuring point with the date comparison • Display in the specified display intervals (Zoom/Daily/Monthly/Annual) • Display the date comparison graph of max 10 measuring points in 1 screen.(The number of graph up to 10) • Display the graph of measuring point that was registered to the display list file.(Up to 32 files) Optionally, can be added(deleted) to(from) the display list. <p>The following measuring point can be selected</p> <ul style="list-style-type: none"> • Electric energy and pulses • Analog value • Analog value(power factor) • Virtual measuring point • Demand measuring point • Electric energy (Whole day, Time zone 1 - 10) • Demand (Whole day, Time zone 1 - 10) <p>Display update interval (automatic update): Zoom(1 min)/Zoom(5 min)/Daily ... 1 min Monthly/Annual ... 1 hour</p>

Item		Specification	Remarks	
Display functions	Graph display	Specific consumption Graph	Display the specific consumption graph Display interval: Select from Daily/Weekly/Monthly/Annual Display update cycle (Automatic graph update): Daily/Weekly ... 1 minute Monthly/Annual ... 1 hour	
		Daily	Bar graph: Production and energy amount on the hour , the half-hour or 15 minutes Line graph: Accumulated specific consumption and energy amount on the hour , the half-hour or 15 minutes	Displays 1-day data on the hour , the half-hour or 15 minutes. Displays 2 days of data simultaneously.
		Weekly	Bar graph: Production and energy amount on the hour , the half-hour or 15 minutes Line graph: Accumulated specific consumption and energy amount on the hour or on the half-hour	Displays 7-day data on the hour or on the half-hour. Displays 7 days of data starting from the specified date serially.
		Monthly	Bar graph: Production and energy amount on the 1-day intervals Line graph: Accumulated specific consumption and energy amount on the 1-day intervals	Displays 1-month data at 1-day intervals. Displays 2 months of data simultaneously.
		Annual	Bar graph: Production and energy amount on the 1-month intervals Line graph: Accumulated specific consumption and energy amount on the 1-month intervals	Displays 1-year data at 1-month intervals. Displays 2 years of data simultaneously.
		Equipment graph	Display the Equipment graph Display interval: daily (fixed)	
		<Equipment group graph> Bar graph: Daily accumulated number of defective products Line graph: Daily accumulated downtime	Displays data for the number of registered equipment groups simultaneously.	
		<Equipment efficiency graph> Bar graph: Availability/Performance/Quality on the hour , the half-hour or 15 minutes Line graph: Overall equipment efficiency on the hour , the half-hour or 15 minutes	Displays 1-day data on the hour , the half-hour or 15 minutes.	
		<Equipment detail graphs 1 to 10> Bar graph: Usage amount on the hour , the half-hour or 15 minutes Line graph: Accumulated usage amount	A detail equipment graph shows data for the number of points registered in the equipment item details.	

Item		Specification	Remarks	
Display functions	Data file	Demand data	<p>Display the following file</p> <p><Annual(Max demand of each month)> Contains 1-year data logged at 1-month intervals</p> <p><Monthly(Max demand of day)> Contains 1-month data logged on the specified hour every day</p> <p><Daily> Contains 1-day data on the hour or every 30 or 15 minutes</p> <p><Demand alarm and control log> Record the history of the occurrence/restore of Level 1, Level 2, Limit/Fixed</p> <p>Record the history of the demand control ON/OFF 128KB×62files</p>	
		Measuring point data	<p>Display the following file</p> <p><Annual> Contains 1-year data logged at 1-month intervals</p> <p><Monthly> Contains 1-month data logged on the specified hour every day</p> <p><Daily> Contains 1-day data logged on the hour or every 30 or 15 minutes</p> <p><Zoom (5 minutes)> Contains 1-hour data logged at 5-minutes intervals</p> <p><Zoom (1 minute)> Contains 1-hour data logged at 1-minute intervals</p>	
		Virtual calc. point data	<p>Display the following file</p> <p><Annual> Contains 1-year data logged at 1-month intervals</p> <p><Monthly> Contains 1-month data logged on the specified hour every day</p> <p><Daily> Contains 1-day data logged on the hour or every 30 or 15 minutes</p>	
		Sp. Cons. data	<p>Display the following file</p> <p><Annual> Contains 1-year data logged at 1-month intervals</p> <p><Monthly> Contains 1-month data logged on the specified hour every day</p> <p><Daily> Contains 1-day data logged on the hour or every 30 or 15 minutes</p>	
		Equipment data	<p>Contains 1-day data logged on the hour or every 30 or 15 minutes</p>	
		Operation history data	<p>Contains a log of ON/OFF states of operation monitoring points 64 KB × 4</p> <p>Saved in a separate file for each operation monitoring point</p>	
		System log	<p>Contains a log of occurrence and recovery of measurement errors, upper and lower limit errors, etc. 256 KB × 8</p>	

Item		Specification		Remarks	
Display functions	Setting of Measuring point list	Setting of Demand control	Demand setting	Display the following settings •Demand basic setting •Alarm setting •Demand control setting	
			Time zone setting	Display the setting of Time zone name and Daily pattern	
			Calendar setting	Display the following settings •Time zone setting •Daily pattern setting •Calendar setting	
			Energy saving level monitor setting	Display the following settings •Energy saving level monitor setting •Energy saving level alarm setting •Air-controller connection setting	
	Measuring point list		Electric energy and pulses	Displays the settings of measuring points (electric energy and pulses)	
			Analog value	Displays the settings of measuring points (analog values)	
			Virtual	Displays the settings of virtual calculation points	
			Specific consumption	Displays the settings of specific consumption points	
			Operation monitoring	Displays the settings of operation monitoring points	
			Equipment Group	Displays the settings of equipment registered	
			Equipment group	Displays the details of equipment groups registered	
	Setting of Planned value		Energy planned value (Jan. - Dec.)		
			Energy planned value (Apr. - Mar.)		
			Target value of specific consumption		
	Data output list		Data output group list	Displays the data output setting	
			Data output (Demand control)	Displays the data output setting (Demand control)	
	Contact output list		Displays the settings of contact output		
	Email notification list		Displays the settings of e-mail notification		
	File transfer		Displays the settings of file transfer		
	Time adjustment		Displays the settings of automatic time adjustment		
	Demand alarm occurrence display		Displays when the demand alarm occurs		

Item		Specifications	Remarks	
Surveillance functions	System log	Contains a log of occurrence and recovery of measurement errors, upper and lower limit errors, etc. 256 KB × 8		
	Demand control	Level 1 alarm / Level 2 alarm / Limit alarm / Fixed alarm / demand control unit error of the alarm state is monitored at 10-second intervals		
	Email notification *6 *7	Boot notification	Energy Saving Data Collecting Server is booted up.	Sent to the designated address for each event (one address for each event).
		Error notification	Error occurs during reading/writing to memory card.	
			Measurement error occurs the specified number of times consecutively or normal measurement recovers. Monitored at 10-second intervals. Number of times that can be specified: 1 to 18 (depending on the settings)	
			File transfer error occurs. Monitored at 1-hour intervals.	
			Automatic time adjustment error occurs. Monitored at specified intervals (daily/weekly/monthly).	
			Data output error occurs the specified number of times consecutively or normal output recovers. Monitored at 1-minute intervals. Number of times that can be specified: 1 to 3 (depending on the settings)	
			Battery error occurs. Monitored at 1-minute intervals.	
	Upper and lower limit monitoring	Upper and lower limit error occurs on a measuring point. 32 points max. Monitored at 10-second intervals.	Sent to the designated address for each event (one address for each event).	
	Operation monitoring notification	The status of an operation monitoring point changes. 32 points max. Monitored at 10-second intervals.		
	Energy planned value monitoring notification	Energy planned value (accumulated value per day) is exceeded. 255 points max. Monitored at the monthly logging time (at 1-day intervals).		
	Specific consumption planned value monitoring notification	Specific consumption planned value is exceeded. 64 points max. Monitored every hour on the hour or on the half-hour.		
	Regular report	Specified messages. Up to 128 characters in one message. Up to 8 messages.		Each message is sent to its designated address at its designated time (one sending time and receiving address for each message).
		Daily	On the specified hour, once every day	
Weekly		On the specified hour of the specified day, once every week		
Monthly		On the specified hour of the specified day, once every month		
Demand notification	Demand control alarm occurred and restored (Level1alarm / Level 2 alarm / Limit, Fixed alarm / Battery error (demand control unit) / Outside synchronism error / Demand control error) Monitored at 10-second intervals.	Sent to specified destination for each event (One destination for each event)		

*6 Mail notification is only function of sending mail data (destination/message) to mail server (SMTP).
Mail server receives the data, and sends the message (e-mail) to each destination.

*7 Timing to actually receive will depend on the situation of the mail server processing and communication network.

Item		Specifications	Remarks
Control functions	Demand control	Control the circuit that was set the priority order, as the predicted demand does not exceed the target demand. (up to 12 circuits)	
		Demand control type: The following 6 patterns Cyclic - Reclosing Cyclic - Reclosing after Demand time limit Cyclic - Reclosing after Reclosing interval Priority order - Reclosing Priority order - Reclosing after Demand time limit Priority cyclic - Reclosing	
	Manual control	By the password authentication in real-time display screen of contact output monitor, manual control is possible (alarm OFF control, ON/OFF control of demand controlled circuit).	
Calendar setting management function		Demand management is possible by setting the time zone switching calendar (up to 24 months)	
		Time zone: up to 10, Daily pattern: up to 40	
Maintenance functions	Planned value/Target value setting	Specifies monthly planned values and specific consumption planned values for the year (fiscal year).	
	Time setting	Reads and sets the current date and time.	

Item		Specifications		Remarks			
Demand setting functions	Normal	Circuit name	Input the circuit name to monitor				
		VCT ratio	1 - 100000	Default: 600			
		Pulse constant value	1 - 50000(pulse/kWh)	Default: 50000			
		Multiplying factor	Checked/Not checked			Default: Not checked	
			Number of digits	4 - 6		Default: 5	
			Multiplying factor	1 - 100000		Default: 1	
		Demand time limit adjustment type	Initial TS/ External pulse signal	Default:Initial TS			
		Demand time limit	15/30/60(minutes)	Default: 30			
	Alarm and Control	Alarm/Control mask time	0 - n(minutes) n=demand time limit	Default: 6			
		Alarm type	Limit alarm/Fixed alarm	Default: Limit alarm			
		Management based on calendar	Checked/Not checked	Default: Not checked			
		Settings for each Time zone	Set the following to the time zone 1 - 10 Target demand value, Base power, Fixed alarm value				
		Target demand value	0.0 - 999999.9(kW)	Default: 300.0			
		Base power	0.0 - 99999.9(kW)	Default: 0.0			
		Fixed alarm value	0.0 - 999999.9(kW)	Default: 240.0			
		Time zone name	8 characters	Default: Whole day			
		Demand control type	Selected from the following •Cyclic - Reclosing •Cyclic - Reclosing after Demand time limit •Cyclic - Reclosing after Reclosing interval •Priority order - Reclosing •Priority order - Reclosing after Demand time limit •Priority cyclic - Reclosing				
		Number of circuits	Up to 12 circuits				
		Priority order	Invalid, 1 - 12	Default: Invalid			
		Control capacity	0.0 - 99999.9(kW)	Default: 0.0			
		Reclosing interval	1 - n(minutes) n=demand time limit	Default: 5			
		Manual control	Up to 12 circuits			If manual control, requires a password input	
		Calendar	Daily pattern setting	Set the time zone 1-10 to the daily pattern 1-40 with each demand time limit			
			Calendar setting	Set the daily pattern until December 31 of following year from the set year.			

Item		Specifications	Remarks
Data collecting settings functions	CC-Link terminal registration	Set the following contents Registration of terminal to be connected Carry out the normal setting and station No. registration for each terminal	Up to 42 units can be registered
	MODBUS terminal registration	Set the following contents Registration of terminals to be connected Carry out the normal setting, IP address registration and slave address registration for each terminal To communicate with a terminal that uses MODBUS RTU communications protocol, MODBUS TCP <-> MODBUS RTU converter is required. With one convertor, up to 31 units can be communicated.	Up to 255 units can be registered
	PLC/GOT registration	Set the following contents Register the PLC/GOT to be connected Communication method (Ethernet direct, Convert Ethernet / serial) IP address, Port No., and Station No. of the device to be connected	Up to 8 units can be registered
	Measuring point	Set the measuring element to collect If the PLC/GOT Specify the device for each registered equipment, and get the word data or bit data	Up to 255 points can be registered
	Virtual	Set the arithmetic expressions with parentheses	Up to 128 points can be registered
	Specific consumption	Register the specific consumption * Set the display of the specific consumption	Up to 64 points can be registered
	Equipment	Set the following contents Standard cycle time Operating time Quality rate	Required when calculating the equipment efficiency Up to 42 points can be registered
Project management functions	Save	Save the contents that have been registered by the setting software	
	Write	Write the project to the EcoWebServerIII	Login ID and password is required Default Login ID: ecoV Password: ecopass
	Read	Read the project of the EcoWebServerIII	
	Confirm	Confirm the project of EcoWebServerIII and setting software.	

Item		Specifications	Remarks	
Setting functions	Time setting	Read and write clock of EcoWebServerIII		
	IP address setting	Set the following contents or read the contents set in EcoWebServerIII main unit. CH1 IP address Default: 192.168.10.1 Subnet mask Default: 255.255.255.0 Default gateway Default: None DNS setting CH2 IP address Default: 192.168.3.1 Subnet mask Default: 255.255.255.0 Default gateway Default: None		
	Auto time adjustment	Set the following contents IP address registration of SNTP server Time to carry out the auto time adjustment		
	Logging time setting	Set the following contents Daily log Default: half Monthly log Default: 0H Annual log Default: 1D 0H		
	Login ID Password	For maintenance	Setting the password	Default Password: ecopass
		For getting data	Setting the loggin ID and password	Default Loggin ID: guest Password: user
		For system management	Setting the loggin ID and password	Default Loggin ID: ecoV Password: ecopass
Output setting functions	Data output setting (demand control)	Set the demand control data to be output to the PLC/GOT		
	Contact output setting	Set the contact output destination of the alarm output and demand control		
	Mail notification setting	Set the mail notification destination		
	File transfer setting	Set the file transfer destination		
	Energy saving cooperation setting	Set the IP address of the air conditioning controller to be connected		
	Confirming the terminal connection	Confirm the connection status of the registered terminal		
Test/adjustment function	Confirming the contact output	Confirm the operation of contact output		
	Confirming mail send	Confirm the operation of mail send		
	Confirming file transfer	Confirm the operation of file transfer		
	Confirming air-conditioner connection	Confirm the operation of Energy saving level send		
	Integration value setting	Set the metric indication value to EcoWebServerIII		
	Collect data	Collect the csv file of EcoWebServerIII		
	Delete data	Delete the data in the EcoWebServerIII		
Reset	Reset the EcoWebServerIII			

2. Before use

This chapter describes the part names and functions of EcoWebServerIII as well as the recommended system environment, the installation of the Setting software, the uninstallation of the Setting software, the upgrade of the Setting software, and the relevant settings of PCs, which are essential for using the Setting software.

2.1. Recommended system environment

The system environment requirements for this software to properly operate as follows:

[PC]

Item	Description
System environment OS (basic software)	Microsoft Windows 8.1 Pro (32bits, 64 bit) (English version) Microsoft Windows 10 Pro(32bit, 64bit) (English version) Microsoft Windows 11 Pro(64bit) (English version)
CPU	Pentium® processor running at 1 GHz or higher, or compatible microprocessor (DOS/V compatible)
Memory*1	1GB or more
Hard disk*1	When the data collected by EcoWebServerIII save in the PC, requires its capacity.
CD drive	One or more drives (required in the software installation)
Display resolution	1280 x 1024 pixels or more
Display color	65536 colors or more
Input device	A mouse and a keyboard
External interface	A 10BASE-T/100BASE-TX or memory card reader (required when performing the write/read/confirm of projects via a drive)
Web browser	Microsoft Edge Google Chrome
.NET Framework	Microsoft .NET Framework 3.5*2

*1 Note that the required memory and free space of hard disk are varied depending on the system environment.

*2 Depending on the OS, it may be disabled by default.

[Tablet PC*3]

Item	Description	
OS	Android6.0	iOS10
Web browser	Google Chrome	Safari

*3 You can browse the web screen from the tablet but setting software can not be used on the tablet.

2.2. Glossary

This following defines key terms used in this document.

Item	Description
Project	Refers to a set value that is used for the operation of EcoWebServerIII
Terminal	Refers to a CC-Link terminal, CC-Link master/local unit (local station) or MODBUS terminal . A maximum of 64 CC-Link terminals or CC-Link master/local unit can be registered. For MODBUS terminals, up to 255 units can be registered.
PLC	Refers to PLC used by EcoWebServerIII to acquire the computer link communication data using Ethernet communication or an Ethernet/Serial adaptor cable. Up to 32 PLCs or GOTs can be registered.
GOT	Refers to GOT used by EcoWebServerIII to acquire the device data using Ethernet (computer link). Up to 32 PLCs or GOTs can be registered.
Measuring point	Refers to an item collected from a terminal. A maximum of 255 points can be registered.
Group	Refers to a group of measuring points. A maximum of 32 groups can be registered.
Operation monitoring measuring point	Refers to a measuring point for recording the operation status of equipment by monitoring digital input signals. Up to 32 of 255 measuring points can be registered.
Contact output	Refers to output when an event such as an error occurs in EcoWebServerIII. Up to 32 contact output points can be registered.
Virtual measuring point	Refers to a measuring point for which the computation result between measuring points is used as virtual measurement data. A maximum of 128 measuring points (excluding the 255 measuring points) can be registered.
Specific consumption measuring point	Refers to a measuring point for which the result of dividing energy amount by production amount is used as measurement data. A maximum of 64 measuring points (excluding the 255 measuring points) can be registered.
Equipment	Refers to a measuring point for recording an equipment status such as equipment efficiency. A maximum of 42 measuring points can be registered.
Equipment group	Refers to a group of equipment measuring points. A maximum of 42 groups can be registered.
Daily data	Refers to the data of a measuring point collected on the hour , the half-hour or 15 minutes for 1 day.
Weekly data	Refers to the data of a measuring point collected on the hour , the half-hour or 15 minutes for 7 days.
Monthly data	Refers to the data of a measuring point collected at 1-day intervals for 1 month.
Annual data	Refers to the data of a measuring point collected at 1-month intervals for 1 year.
Zoom data	Refers to the data of a measuring point collected at 1-minute or 5-minutes intervals for 1 hour.
Virtual data (daily)	Refers to the data of a virtual measuring point collected on the hour, the half-hour or 15 minutes for 1 day.
Virtual data (monthly)	Refers to the data of a virtual measuring point collected at 1-day intervals for 1 month.
Virtual data (annual)	Refers to the data of a virtual measuring point collected at 1-month intervals for 1 year.
Specific consumption data (daily)	Refers to the data of a specific consumption measuring point collected on the hour , the half-hour or 15 minutes for 1 day.
Specific consumption data (monthly)	Refers to the data of a specific consumption measuring point collected at 1-day intervals for 1 month.
Specific consumption data (annual)	Refers to the data of a specific consumption measuring point collected at 1-month intervals for 1 year.
Operation history data	Refers to the data recorded when the status of an operation monitoring point is changed.
Demand data (daily)	Refers to demand data collected at the set demand timing for 1-day.
Demand data (monthly)	Refers to one month's worth of data recording the demand data collected daily at the designated time and the daily maximum demand.
Demand data (annual)	Refers to one year's worth of data recording the demand data collected monthly at the designated time and the monthly maximum demand.

Item	Description
Demand alarm and control history data	Refers to a record of the demand alarm occurrence/reset and demand control.
System log	Refers to the data of events such as errors that occur in EcoWebServerIII.
Maintenance password	Refers to a password required to reset EcoWebServerIII or to set dates and energy planned values/target Specific consumptions.
Data acquisition login ID and password	Refers to an account required to collect EcoWebServerIII data from FTP clients, and gives read-only permission.
System administration login ID and password	Refers to an account required for the system administration of EcoWebServerIII, and gives read and write permissions for all files.
FTP server	Refers to a server that provides files on the Internet (via LAN). FTP stands for File Transfer Protocol.
SMTP server	Refers to a mail server that performs the transmission process of email to distribute it to other mail servers on the Internet (via LAN). SMTP stands for Simple Mail Transfer Protocol.
SNTP server	Refers to a server that provides time information to clients on the network. SNTP stands for Simple Network Time Protocol.
Domain name	Refers to the identifier of a computer or computer group that is connected to the Internet (via LAN).
DNS server	Refers to a server that converts domain names into IP addresses on the Internet (via LAN). DNS stands for Domain Name System.

2.3. Installing the software

The setting software can be easily set up and launched by using the dedicated installer.

When setting up the EcoWebServerIII setting software for the first time, be sure to read this chapter before performing the set-up.

Taking Microsoft Windows 7 as an example, steps are described below.

To perform the set-up, you must log in with the administrator privileges.

*1 The operations and dialog boxes may be varied depending on the type of OS on your PC or the operating environment.

MES3-255C-DM-EN is used in the following operations, but this also applies MES3-255C-EN.

*2 If an older version of the EcoWebServerIII setting software is already installed, see "2.5 Upgrading the software," and upgrade the setting software.

1 Inserting the CD and launching the installer

(1) Insert the EcoWebServerIII setting software set-up CD-ROM into the CD drive on your PC. The web site below will be displayed. Click the setting software to install.

Energy Saving Data Collecting Server
EcoWebServerIII (CC-Link communication)
Model: MES3-255C-EN
Setting Software and User's Manual CD

Thank you for purchasing Mitsubishi Energy Saving Data Collecting Server.

- Please read the user's manual, and use the product properly.
- Please keep it and put it in a case after use.
- Please deliver this CD surely to the final user.

Click Setting Software.

Item	Contents	
Setting software	Setting software	Install setting software for EcoWebServerIII.
User's manual	User's manual operation	Explain how to display measuring graph, current value, data and etc. in WEB browser.
	User's manual setting	Explain how to operate the setting software for maintenance, such as project management, setting, operation, time setting for EcoWebServer III, IP address setting and so on.
	User's manual hardware	Explain installation and wiring connection of EcoWebServerIII. This manual is the same as the one attached with paper.


* Adobe reader® is required to see (and print) the user's manual. If you don't have one, please download from the website of Adobe.

Trademarks

- EcoWebServer and logo is a trademark of Mitsubishi Electric Corporation.
- Adobe, Adobe Reader and logo is a trademark of Adobe Systems Incorporated.
- Java and logo is a trademark or registered trademark of Oracle Corporation in the United States and other countries.


* If the installer is not automatically launched, open the CD drive with Explorer, and double-click [ReadMe.html] in the root folder to run it.

(2) Security warning screen will appear so click [Execute]. The installation will start. Click the [Cancel] button to cancel the installation.

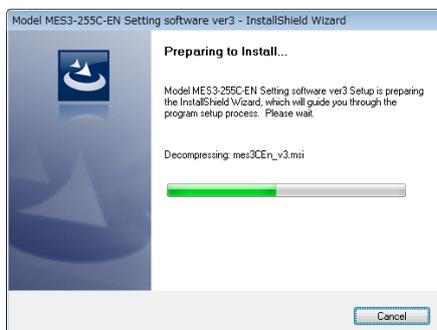


(3) The [Welcome to the InstallShield Wizard for Model MES3-255C-DM-EN Setting software ver3] dialog box is displayed.

Click the [Next] button. Click the [Cancel] button to cancel the installation.

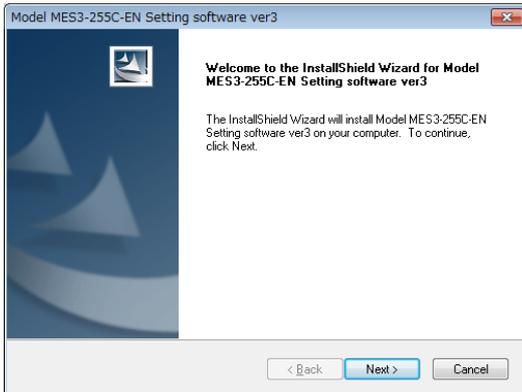

Remarks

If the installer is run when the EcoWebServerIII setting software Ver. 3 is already installed, the [Uninstall the application] confirmation is displayed.

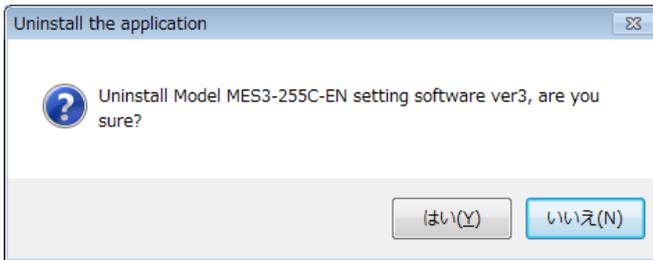


To reinstall, uninstall the software with the following procedure, and then install again.

- Click the [Yes] button to uninstall the EcoWebServerIII setting software Ver. 3. Click the [No] button to cancel the uninstallation.
- When uninstallation is completed, the [Uninstall complete] screen appears.

2 Checking the license agreement

The [License Agreement] dialog box is displayed.

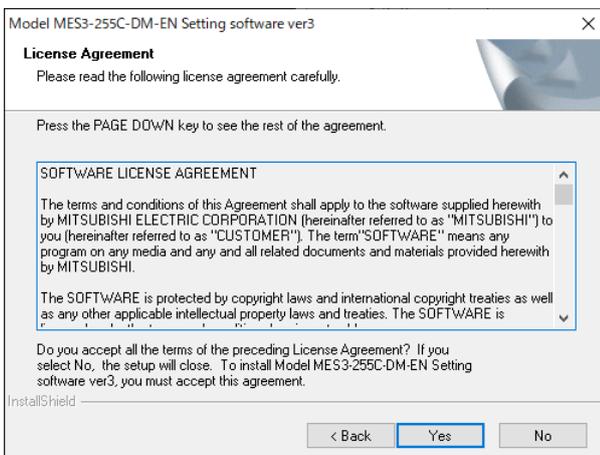


When accepting the license agreement, click [Yes] button.

If you do not accept the license agreement, click the [No] button to cancel the installation.

3 Installing the software

(1) The [Choose Destination Location] dialog box is displayed.

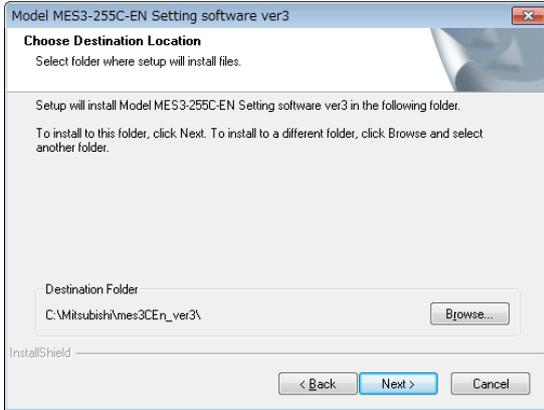

*1 The default installation locations of each product are listed below.

Product model	Installation location
MES3-255C-EN	C:\Mitsubishi\mes3CEn_ver3\
MES3-255C-DM-EN	C:\Mitsubishi\mes3CDmEn_ver3\

*2 The installation location can be changed by clicking the [Browse...] button to specify the desired folder. However, we recommend that you use the default installation location in normal conditions.

- (2) Click the [Next] button to start the installation.
Click the [Cancel] button to cancel the installation.
- (3) When the installation is completed, the [InstallShield Wizard Completed] dialog box is displayed. Click the [Finish] button.
 - * Depending on the operating environment, a message prompting you to restart the computer may be displayed after the installation is completed. In this case, follow the instruction in the displayed message to restart the computer.
- (4) The installation is completed.
You can launch the setting software from the Windows [Start] menu or the icon on the desktop.

2.4. Uninstalling the software

If the setting software is no longer needed, you can easily remove the software from your PC by using the uninstallation function of [Programs and Features].

To perform the uninstallation, you must log in with the administrator privileges.

*1 The operations and dialog boxes may be varied depending on the type of OS on your PC or the operating environment.

MES3-255C-DM-EN is used in the following operations, but this also applies MES3-255C-EN.


*2 Even if the uninstallation is performed, the created projects are not deleted.

*3 Uninstall after you have finished this software.


1 Uninstalling the software

<Procedures in Windows 7>


(1) Open [Control Panel] of Windows.

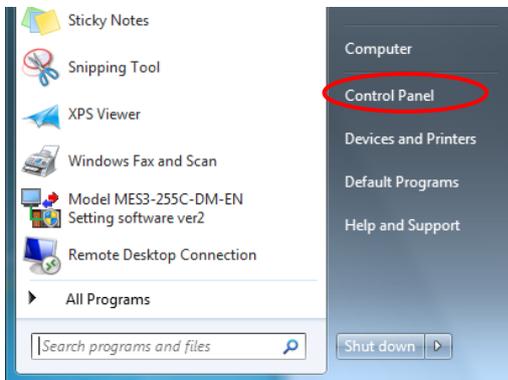

(2) Open [Programs] - [Uninstall a program].

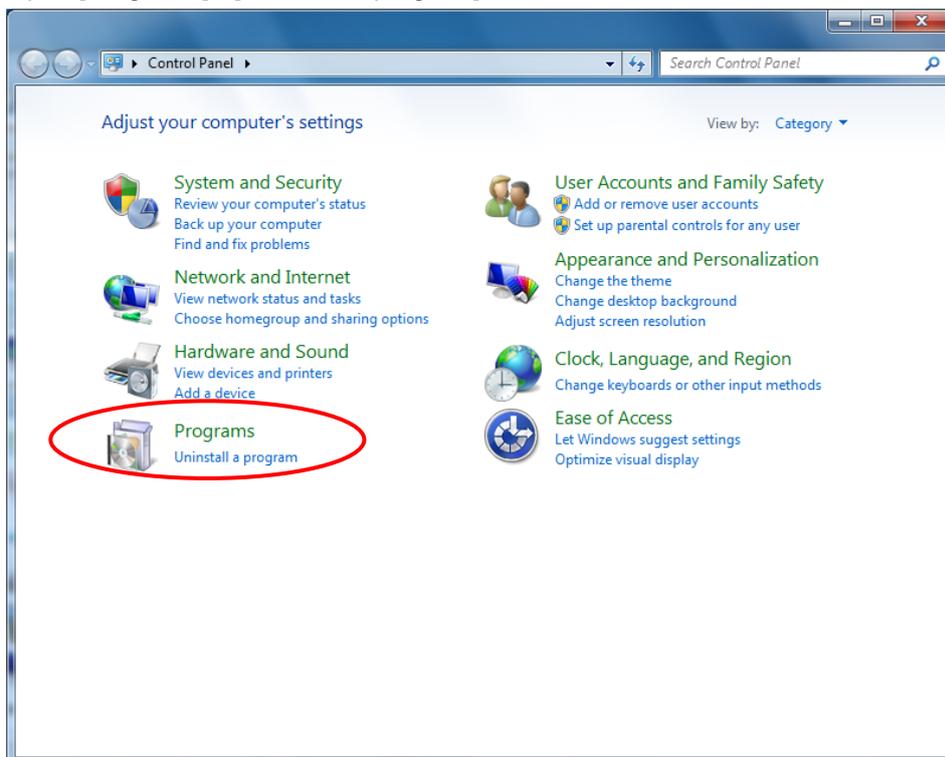


(3) Select the installed setting software, and click [Uninstall].

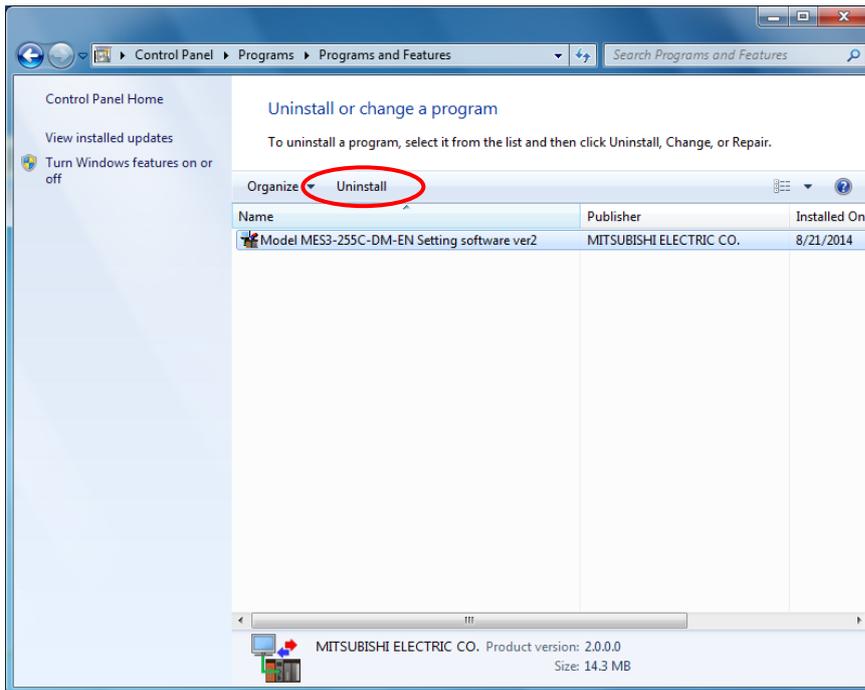

* When the [User Account Control] dialog box is displayed, click [Continue].

(4) The [Uninstall the application] confirmation message is displayed.

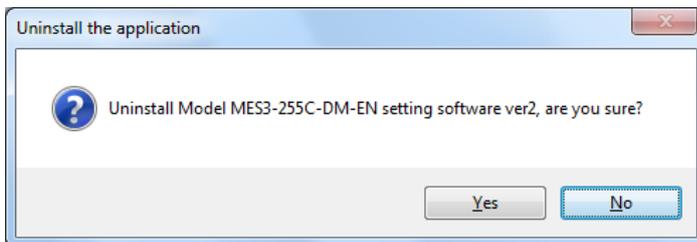

Click the [Yes] button.

Click the [No] button to cancel the uninstallation.

(5) The uninstallation is performed.

When the uninstallation is completed, the [Uninstall Completed] dialog box is displayed.

Click the [Close] button.

2.5. Upgrading the software

The procedure for upgrading EcoServer III setting software and main unit program is described. The procedure varies depending on the presence or absence of setting software. Please follow the instructions below.

Setting value by setting software Ver1 or Ver2

* If there are multiple setting projects, please carry out with this procedure.

1 Backing up the setting project of setting software

Refer to "4.2.6 Backing up projects" and backup the setting project of older version (Ver1 or Ver2). (Refer to "4.1 How to start the setting software · end the remarks" on how to check the version information)

2 Uninstall the old version of the setting software

Refer to "2.4 Uninstalling the software" to uninstall the old version of the setting software.

3 Installing EcoWebServerIII setting software Ver3

Refer to "2.3 Installing the software" and install the EcoWebServerIII setting software Ver2.

4 Restore the project by EcoWebServerIII setting software Ver3

Refer to "4.2.7 Restore project" and restore the configuration project backed up in step 1.

5 Upgrade the main unit program

Refer to "4.8.6 Main body program version up" to upgrade the main unit program.

Setting value of Ver1 or Ver2 does not exist

1 Install EcoWebServerIII setting software

Refer to "2.3 Installing the software" and install the EcoWebServerIII setting software Ver2.

2 Register a new project

Refer to "4.2.1 Register a new project " and register a new project.

* Register the project name according to the project name of the EcoServer III main unit to be upgraded.

3 Read out the project and back it up

Refer to "4.7.3 Reading the project" and read the project.

Refer to "4.2.6 Backing up the project" and back up the read project.

4 Upgrade the main unit program

Refer to "4.8.6 Main body program version up" to upgrade the main unit program.

3. Flow of settings

This chapter describes the flow of setting before operating EcoWebServerIII.

3.1. Procedures for initial settings (Common)

Initial settings for EcoWebServerIII are as following.

1 Performing the installation and wiring of the unit

Please wire the measurement to EcoWebServerIII, see details in manual – Hardware. Connect the measuring equipment and EcoWebServerIII.

When using the EcoWebServerIII with demand control function, connect the electric energy pulse signal from the dedicated CT for pulse detection, pulse detector (pulse converter), or electronic electricity meter.

2 Installation of the EcoWebServerIII setting software

Install the EcoWebServerIII configuration software to set the EcoWebServerIII IP address and time. Refer to section 2.3 "Installing the software" for details on installation.

3 Connecting the personal computer and EcoWebServerIII

- (1) Connect the personal computer and EcoWebServerIII
Connect the personal computer equipped with the setting server and the EcoWebServerIII with a LAN cable. Connect directly with a LAN straight cable or cross cable.
- (2) Change the personal computer's IP address
Change the personal computer's IP address to connect with EcoWebServerIII. The EcoWebServerIII IP address is set to 192.168.10.1 as the default. Set the personal computer's IP address so this IP address can be accessed.

1. Take a note of the IP address set in the PC.

IP Address:

Subnet mask:

Default gateway:

.	.	.
.	.	.
.	.	.

2. Change IP address set in the PC according to the IP address (factory setting: 192.168.10.1) set in the product.

IP address for the product	IP address for the PC
192.168.10.1	IP address: 192.168.10.xx (xx is a value from 2 to 254.) (For example, change to 192.168.10.10, etc.) Subnet address: 255.255.255.0 Default gateway: Blank

4 Setting the EcoWebServerIII IP address

Set the IP address for the EcoWebServerIII with the setting software.

(1) Start the EcoWebServerIII configuration software

As the following sample by Windows 7, displayed content might be different by OSs and installed applications.


■ For CC-Link communication product with demand control function

Open [Start] menu ⇒ [All programs] - [Mitsubishi Energy Management] - [EcoWebServerIII(MES3-255C-DM-EN)ver3] - [Model: MES3-255C-DM-EN Setting software]
Or, double-click the [Model MES3-255C-DM-EN Setting software ver3] icon on the desktop.


■ For CC-Link communication product

Open [Start] menu ⇒ [All programs] - [Mitsubishi Energy Management] - [EcoWebServerIII(MES3-255C-EN)ver3] - [Model: MES3-255C-EN Setting software]
Or, double-click the [Model MES3-255C-EN Setting software ver3] icon on the desktop.


<Example>

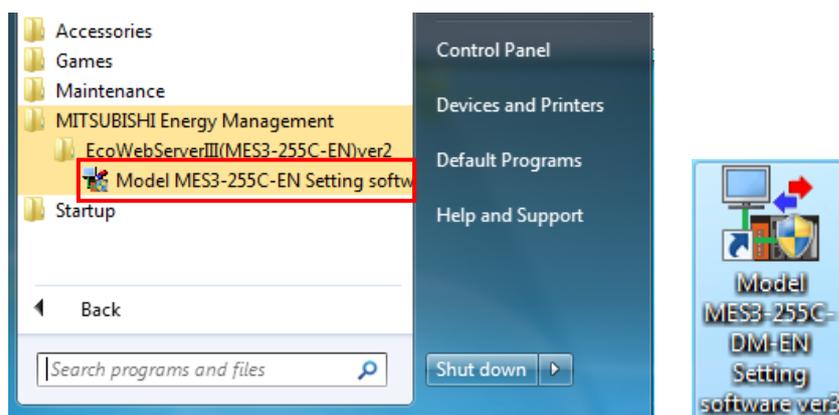


The following splash screen will be displayed at the beginning.

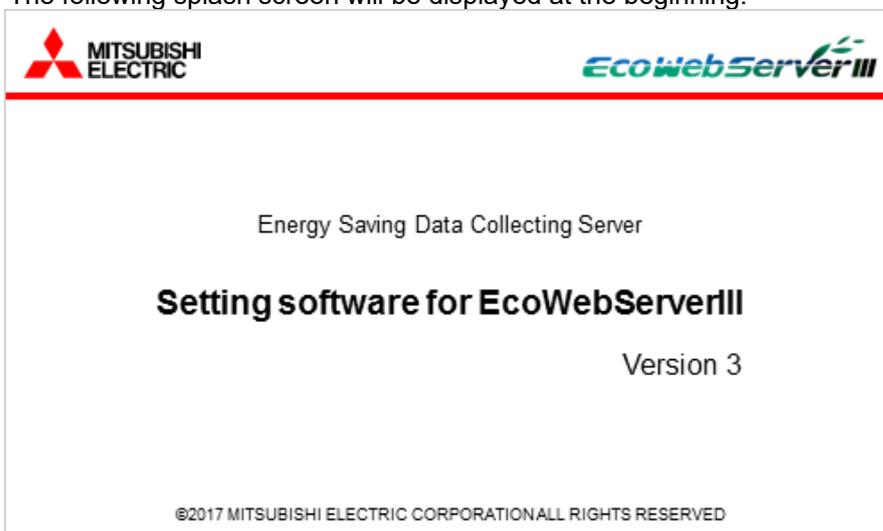

The Project management dialog box is displayed shortly. When the following dialog box is displayed, the launch is completed.

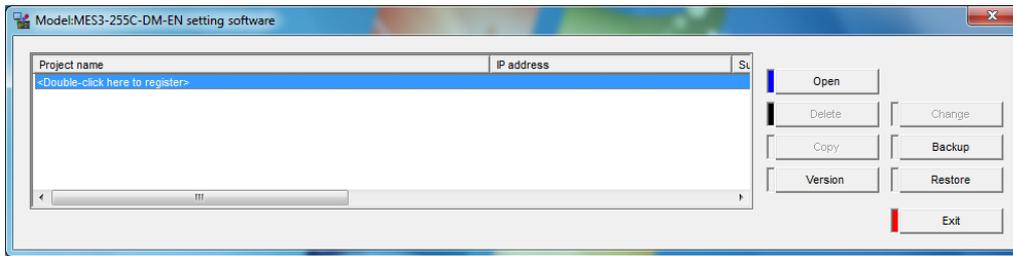


* When the [User Account Control] dialog box is displayed in Windows 7, click [Yes] to launch the software.

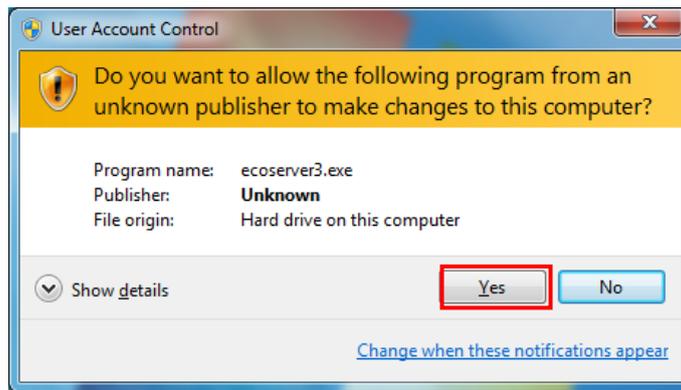

(2) Creating a new project

On the Project Management dialog box:

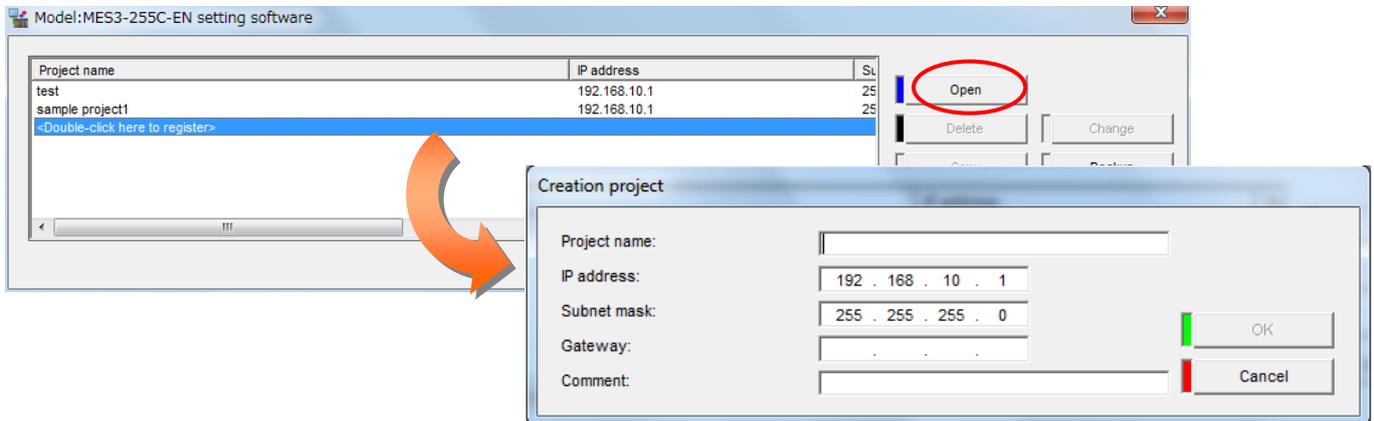

Double-click [<Double-click here to register>]

Or,


Select [<Double-click here to register>], and click the [Open] button.

Set the following information on the Creation project dialog box, and click the [OK] button.

Project name	Any (Set a name for identifying the EcoWebServerIII such as "Factory A" or "Floor B".)
IP address	192.168.10.1 (Set the default IP address.)
Subnet mask	255.255.255.0
Default gateway	Blank
Comment	Any

(3) Changing the EcoWebServerIII IP address

1. Click [Options] on the Project Setting dialog box.

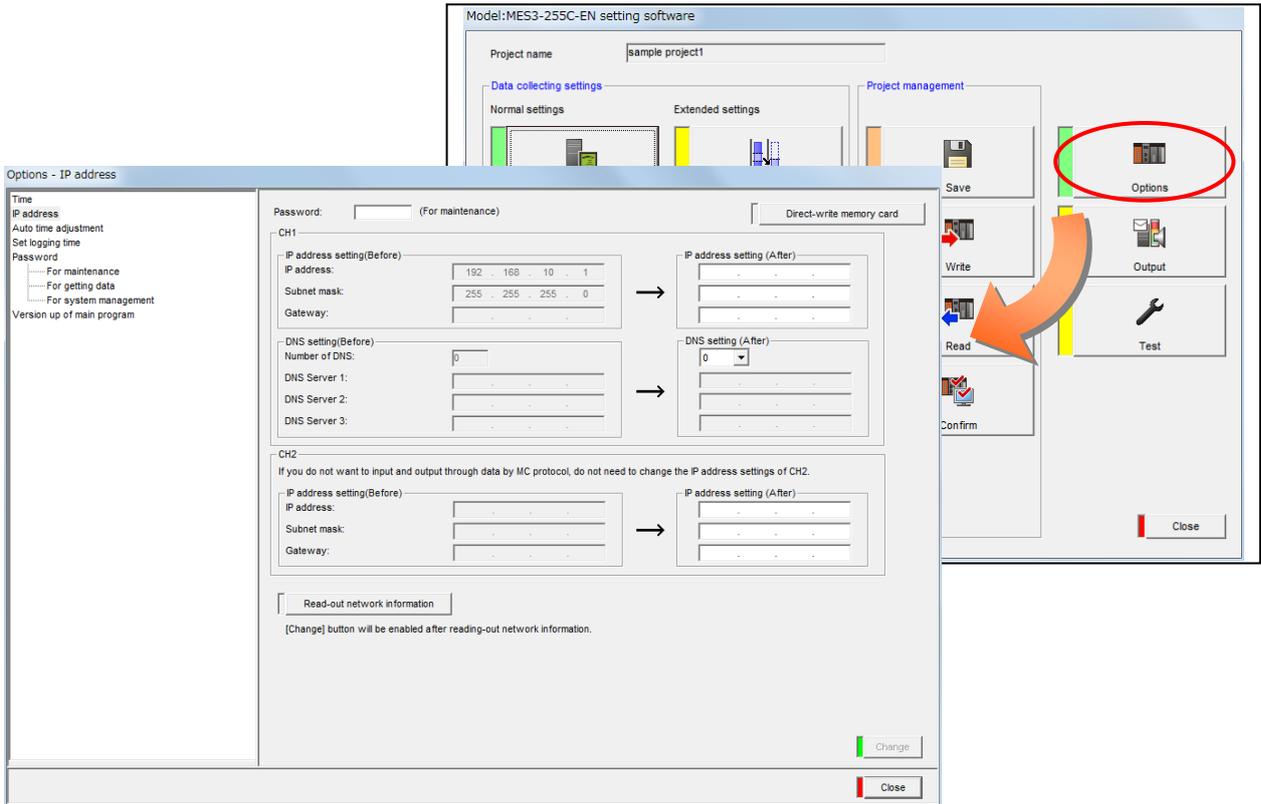


2. Read the network information.
Click **Read the network information**.



*1 If [Read Network information] button is not exist, please refer to [IP address setting] in trouble shooting.

Clicking the button displays the network information read confirmation message.

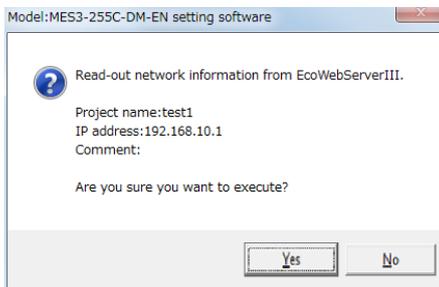


[Yes]: Executes network information reading.

[No]: Cancels network information reading.

After reading is completed, the message below is displayed.

Click **OK**.

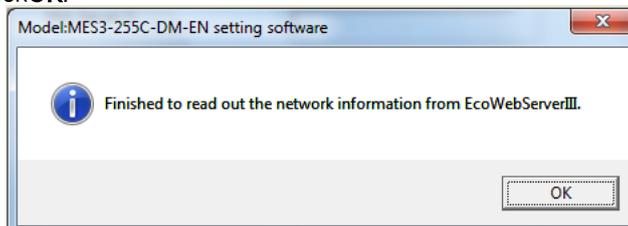

The network information currently set in EcoWebServer III is reflected to the IP address setting (Before) and IP address setting (After) in CH1 and CH2.


3. Change the IP address at IP Address Settings (New)

(An example to change the IP address to 10.123.234.10 is shown below. Enter the IP address, subnet mask and default gateway for operations.)


4. Inputting the maintenance password (The default maintenance password is "ecopass".), and click the [ Change] button.

* The default maintenance password is "ecopass".
Enter the password after change if it was changed.

- A message to confirm the changes appears when the  button is clicked. Click the [Yes] button.

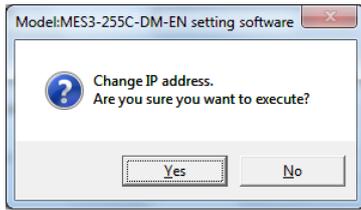

The following message appears when the changes are complete. Click the [OK] button.

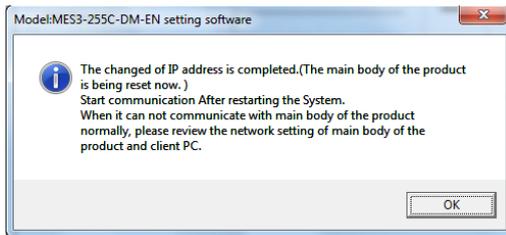


- *1 EcoWebServerIII is automatically reset after the IP address setting is changed. (The changed IP address is validated after resetting is complete.)
- *2 It may take 1 to 8 minutes for the reset to finish. Wait for the [STA.] LED on the EcoWebServerIII unit to change to a steady light before starting communication.
- *3 The [IP address], [Subnet mask] and [Default gateway] in the project information are also automatically updated to the new values.

(4) Checking the IP address set in EcoWebServerIII

- Open the front cover on the server section, and set the MODE switch to the “STOP” position.
- Hold the RESET switch to the “SEL.” position.
- After the “CF CARD” LED turns off, turn the RESET switch to the “RES.” position.
- After all the LEDs except the “POWER” LED on the power supply section turn off, return the RESET/SELECT switch to the central position.
- Wait until the product starts up and the IP address is displayed on the 7-segment LED at the front.

IP address display (Example of display when CH1 is set to 192.168.10.1 and CH2 is set to 192.168.3.1)

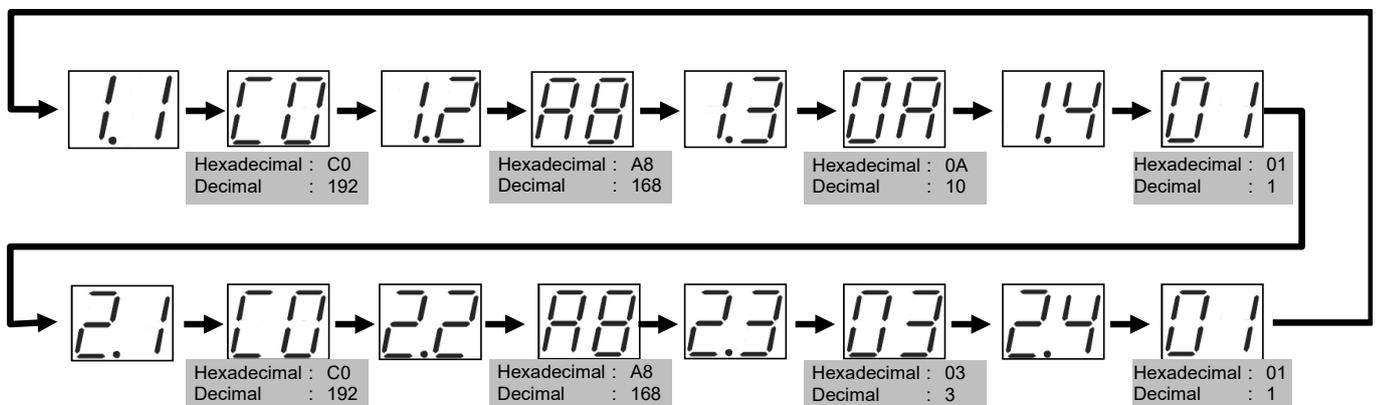


- After you finish checking the IP address, turn the MODE/STOP/RUN switch to the “RUN” position.

5 Setting the EcoWebServerIII time

The EcoWebServerIII time is set to the default state before shipping. Change the time with the following procedure.


(1) Displaying the [Time] screen

1. Select [Time] in the tree menu on the EcoWebServerIII [Options] screen.

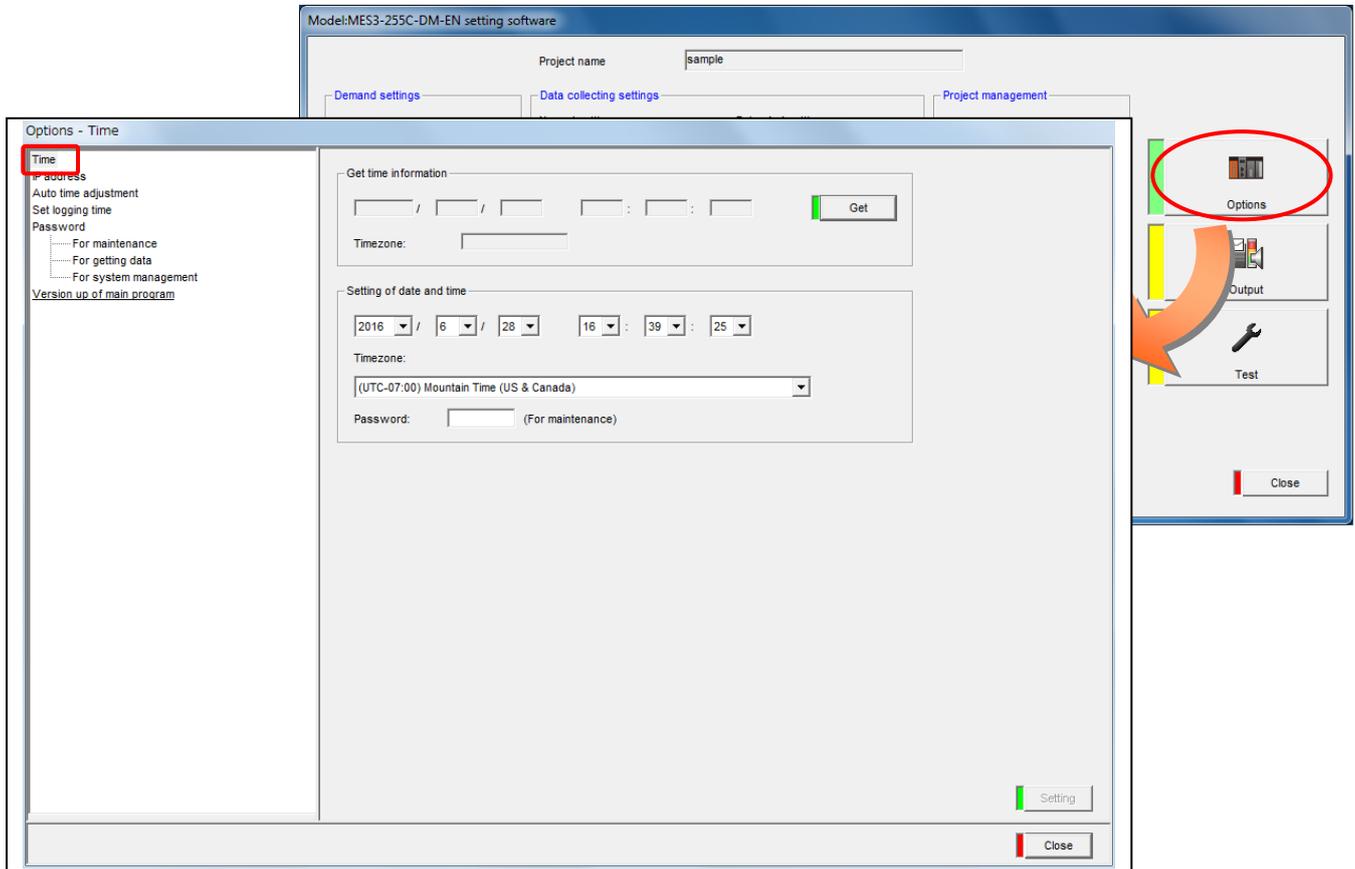

(2) Selecting and inputting [Setting of date and time]

Set the following items.

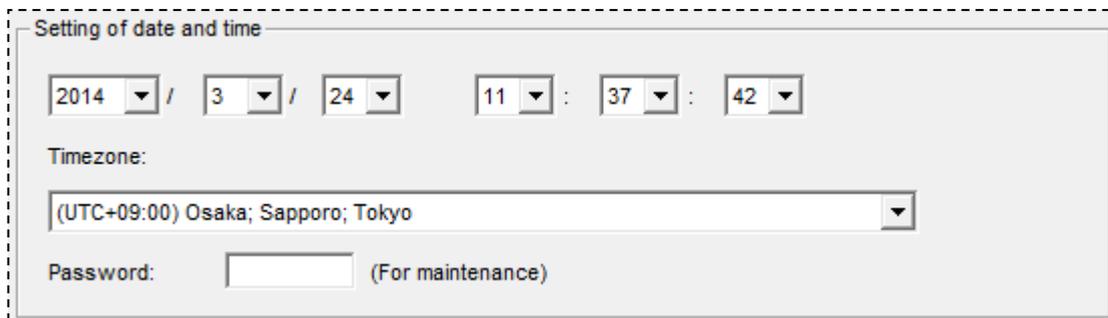

(3) Inputting the maintenance password


Type in the maintenance password (ecopass).

Password: (For maintenance)


* The default maintenance password is "ecopass".
Enter the password after change if it was changed.

(4) Changing

1. A confirmation message appears when the [] button is clicked. Click the [Yes] button.

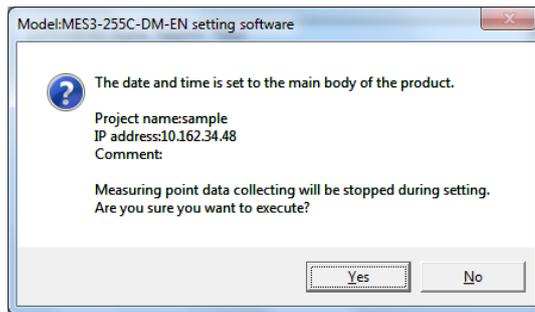

2. When the setting of the date and time are completed, the following message will be displayed.

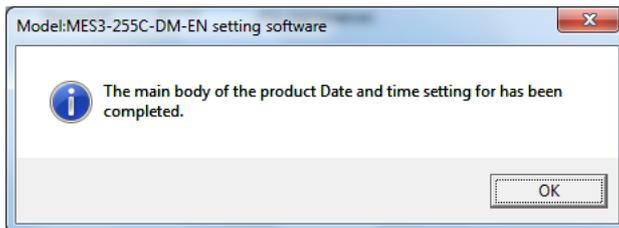

*EcoWebServerIII with demand monitor function

EcoWebServerIII with demand control function is shipped at the state of the battery OFF of the demand control unit, the state of clock of the demand control unit is reset, and error occurs.


Therefore, you need to reset the power of the EcoWebServerIII (4.11.11 EcoWebServerIII reset) after time setting.

Then be timed adjustment (by the TS switch).

3.2. Setting procedures for starting operation (without demand control function)

This section describes flow of settings from starting the EcoWebServerIII unit to starting data collection.


1 Data collecting settings step

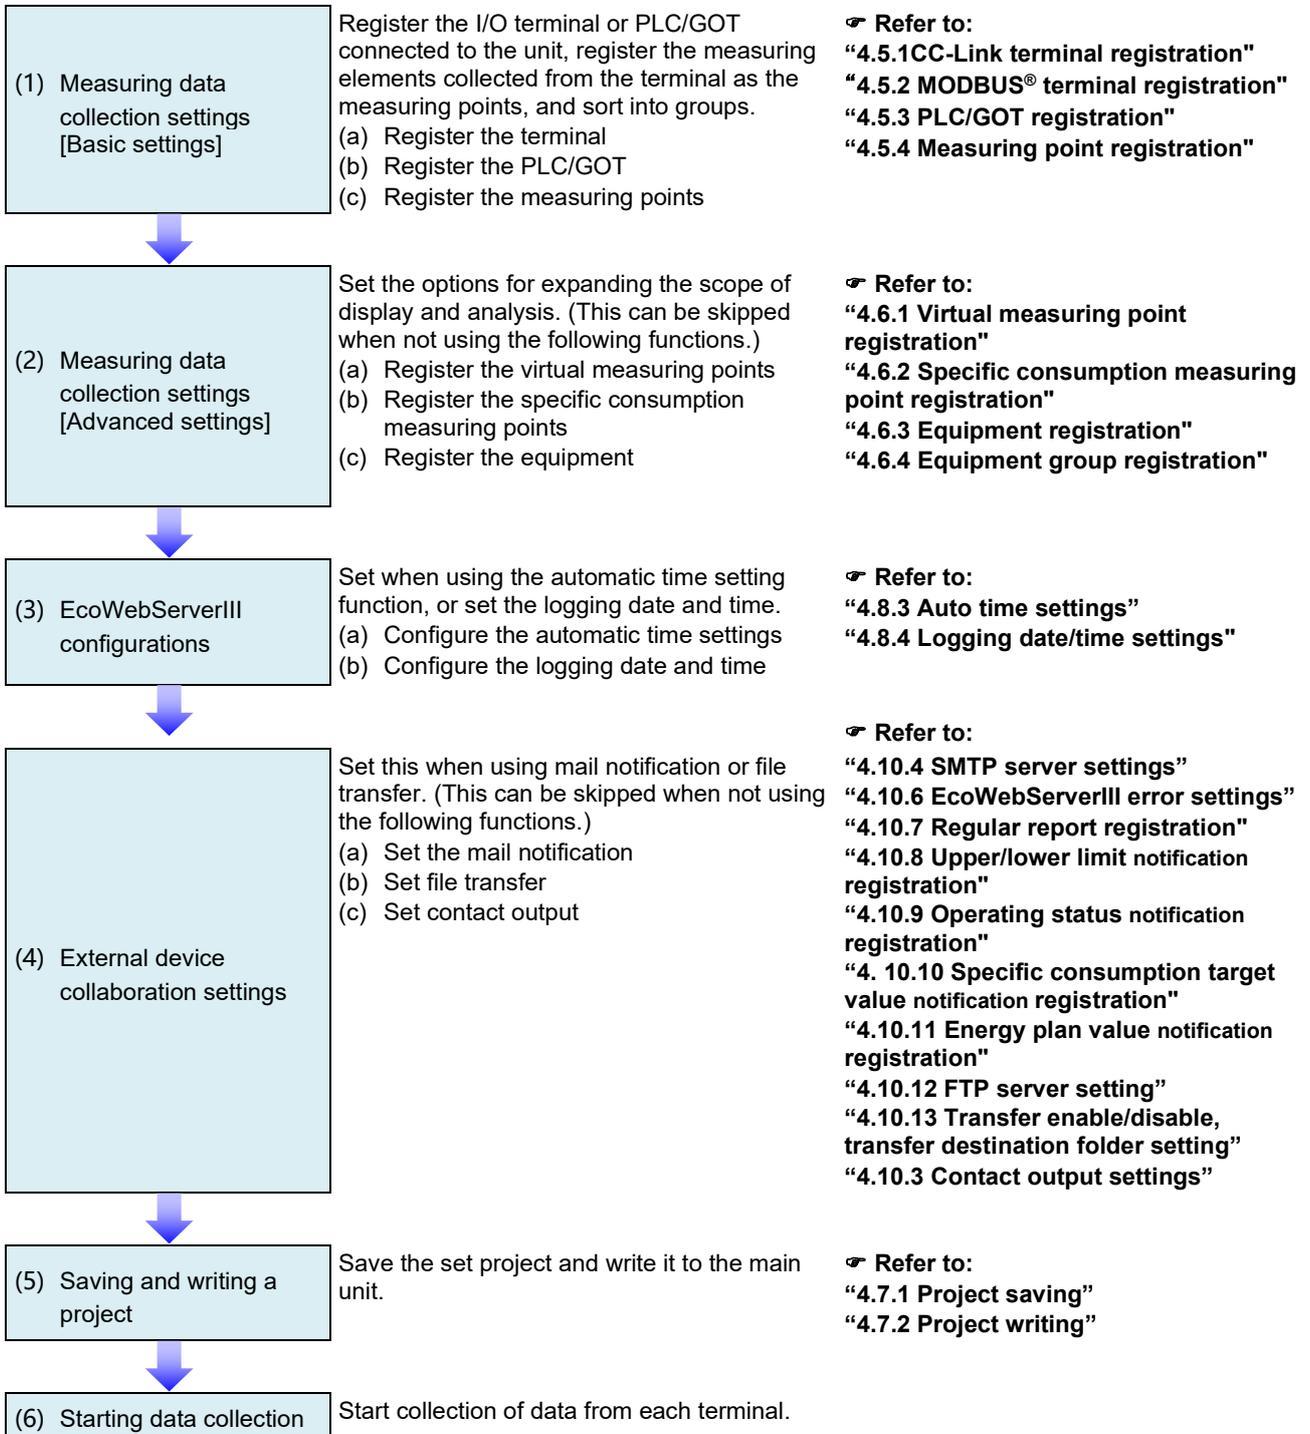


3.3. Setting procedures for starting operation (with demand control function)

This section describes flow of settings from starting the EcoWebServerIII unit with demand control function to starting data collection.

1 Configuring demand control settings and data collection

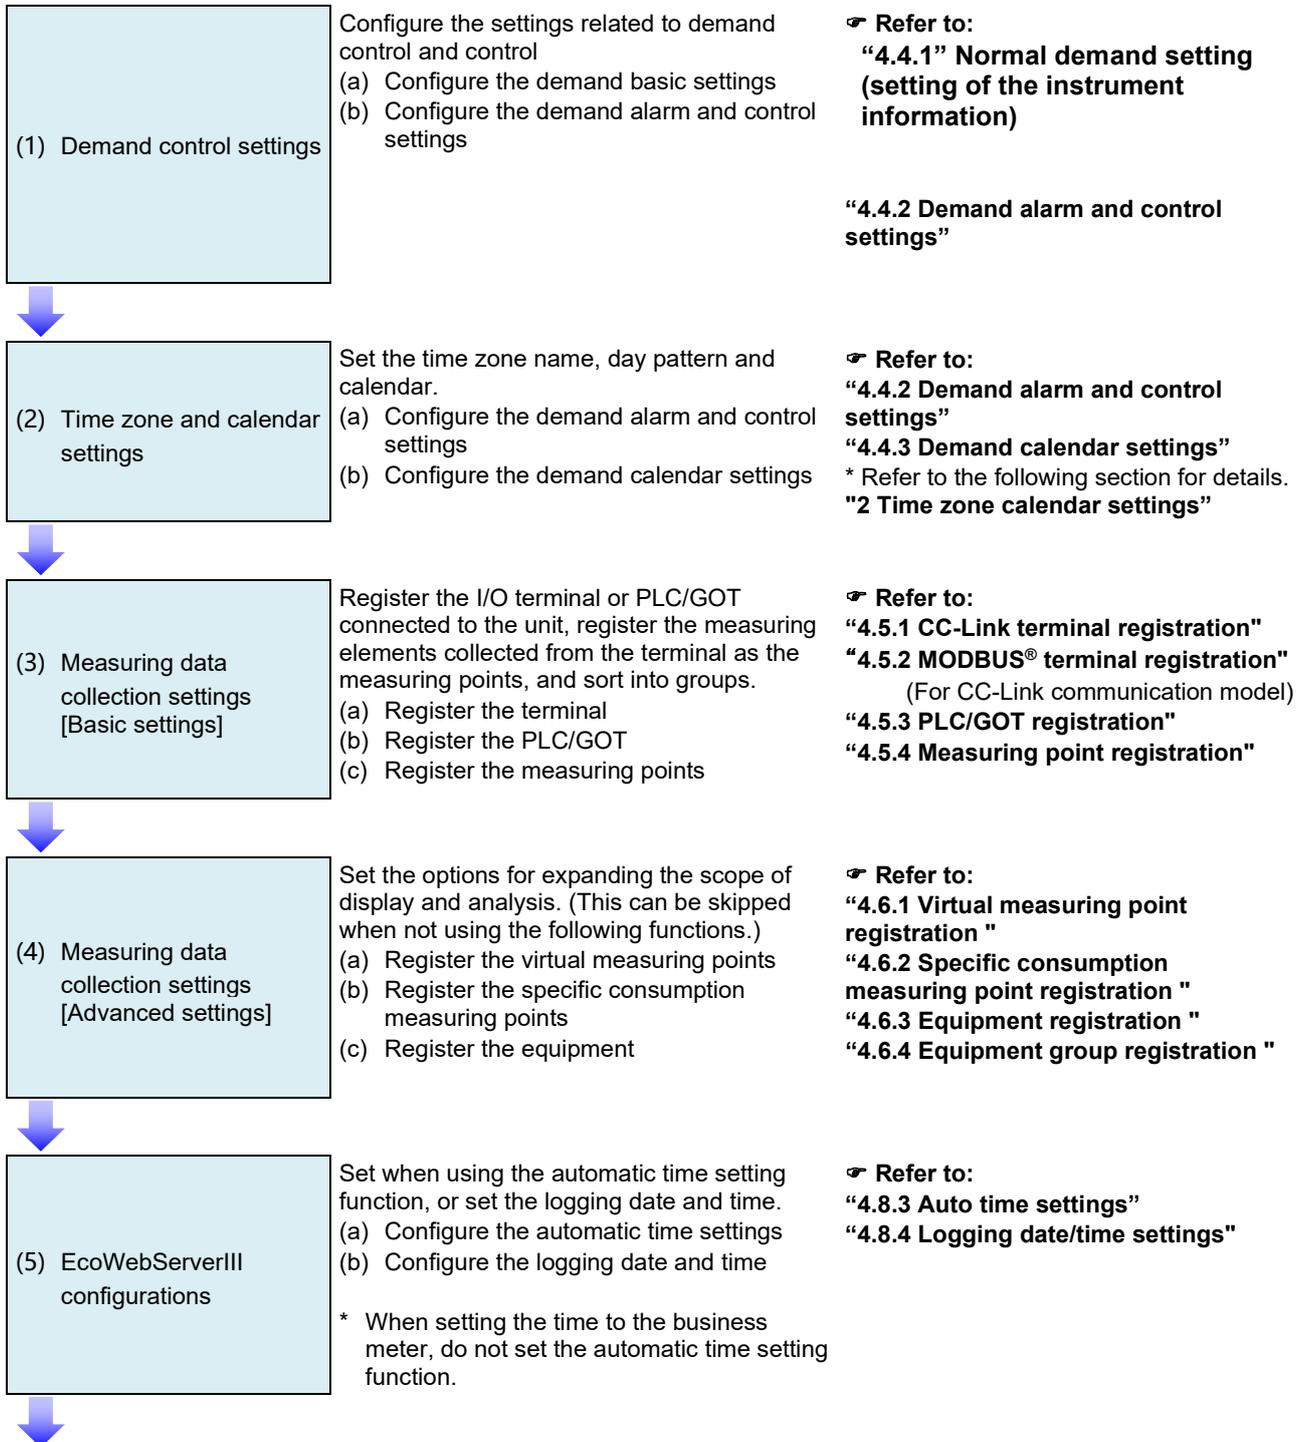

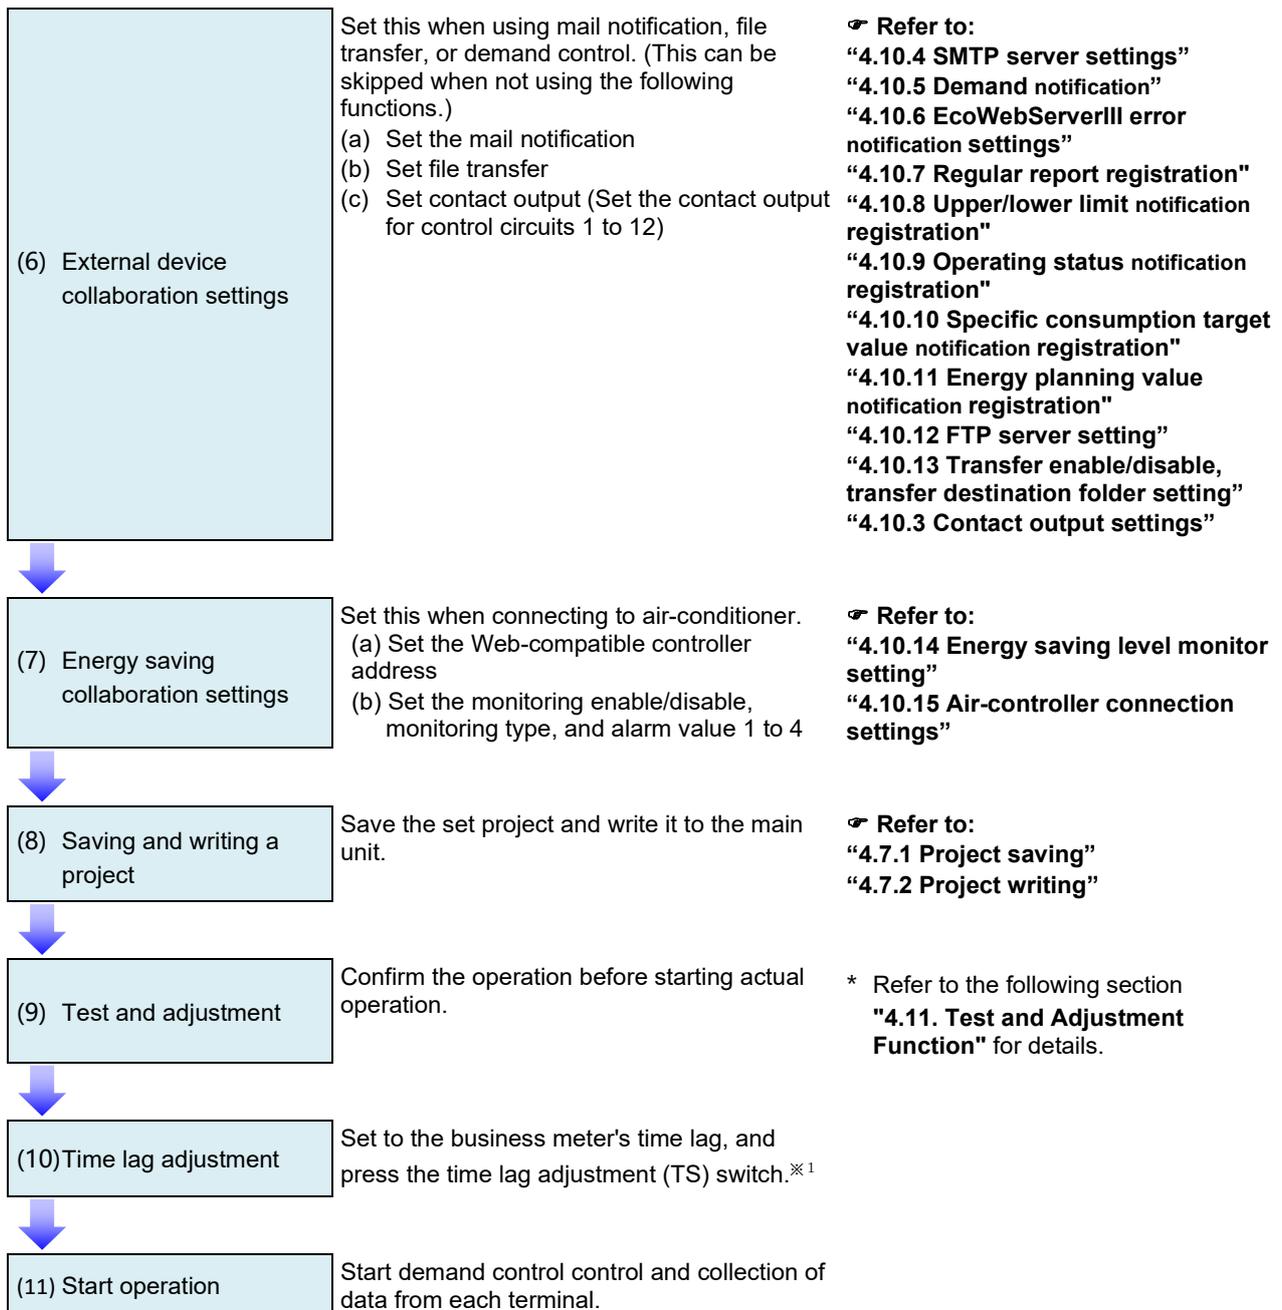

^{※1} The LAN communication will cause a time lag in the time set with the main units setting and setting the time screen.
 After setting the clock, set the time to the time lag display on the business meter, etc., and press the time lag adjustment (TS) switch.


2 Setting the time zone and calendar

This section describes the procedures for setting the time zone calendar.

(1) Time zone name setting	Set (change) the time zone name as needed.	☞ Refer to: "4.4.2 Demand alarm and control setting"
↓		
(2) Day pattern setting	Set the pattern of one day's time zone.	☞ Refer to: "4.4.3 Demand calendar setting"
↓		
(3) Calendar setting	Set the policy changeover month, and each month's daily pattern calendar.	☞ Refer to: "4.4.3 Demand calendar setting"

* The calendar can be set backward from the current date and time to the previous policy changeover month. Up to 24 months can be set. Set the calendar each time the time zone calendar is updated for a contract renewal.


- Policy changeover month: April
- Example when current date is June 2014

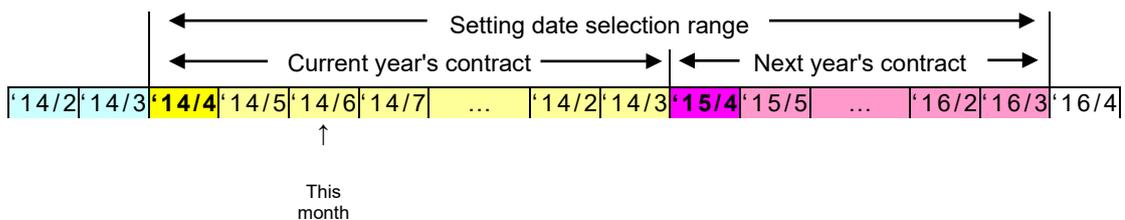

Policy changeover month and calendar setting range

3 Test and adjustment

This section describes the procedures for confirming the operation before starting actual operation, and the procedure for adjusting to the business meter indicator value.

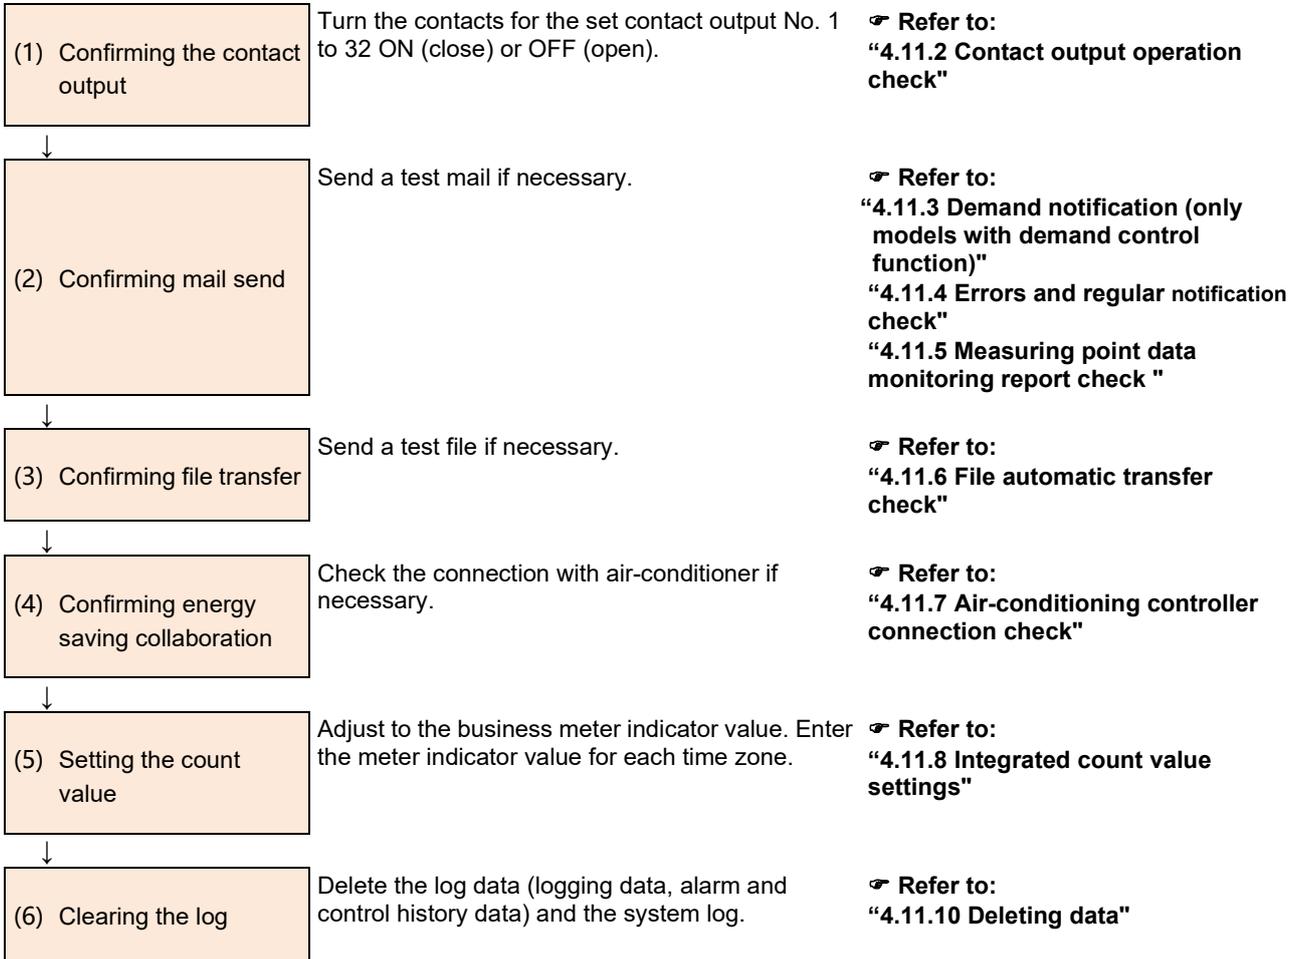

4. Operating procedures

This chapter describes the operating procedures for [Project management dialog box] and [Project settings dialog box].


*1 The operations and screens may differ according to the user's personal computer OS and working environment.

*2 The functions and screens differ according to the products.

This operation manual describes the common specifications using the CC-Link communication model screens and specifications that vary depending on the products using corresponding product screens.

[Project management dialog box]:


Manages the setting data of multiple units of EcoWebServerIII through the project management.

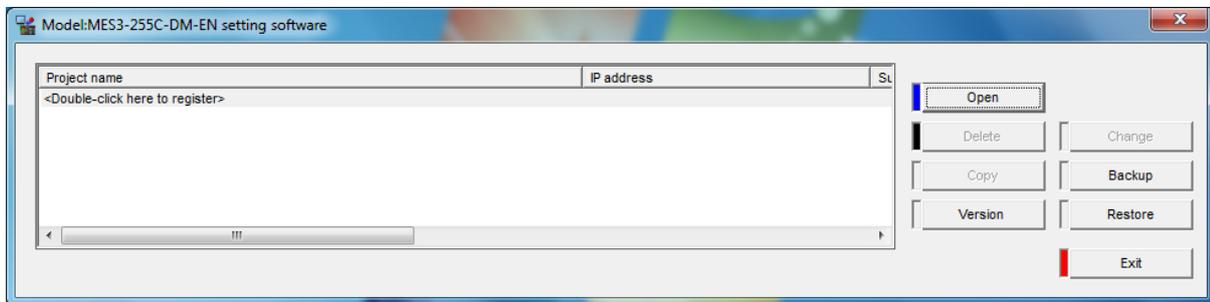


[Project settings dialog box]:

Performs settings and operations of "Demand settings", "Data collecting settings", "Project management", "Options", "Output", and "Test" for the projects that are managed through the project management.

<For CC-Link communication product>

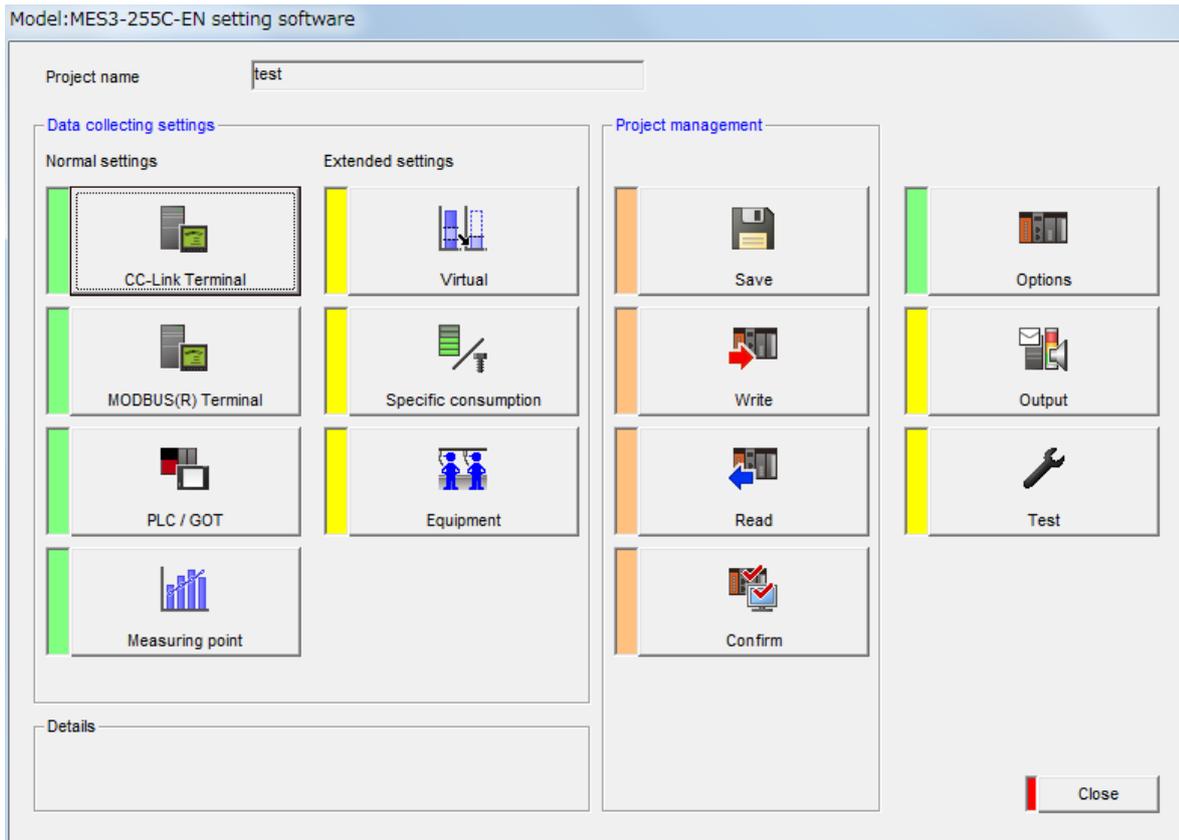

<For CC-Link communication product with demand control function>

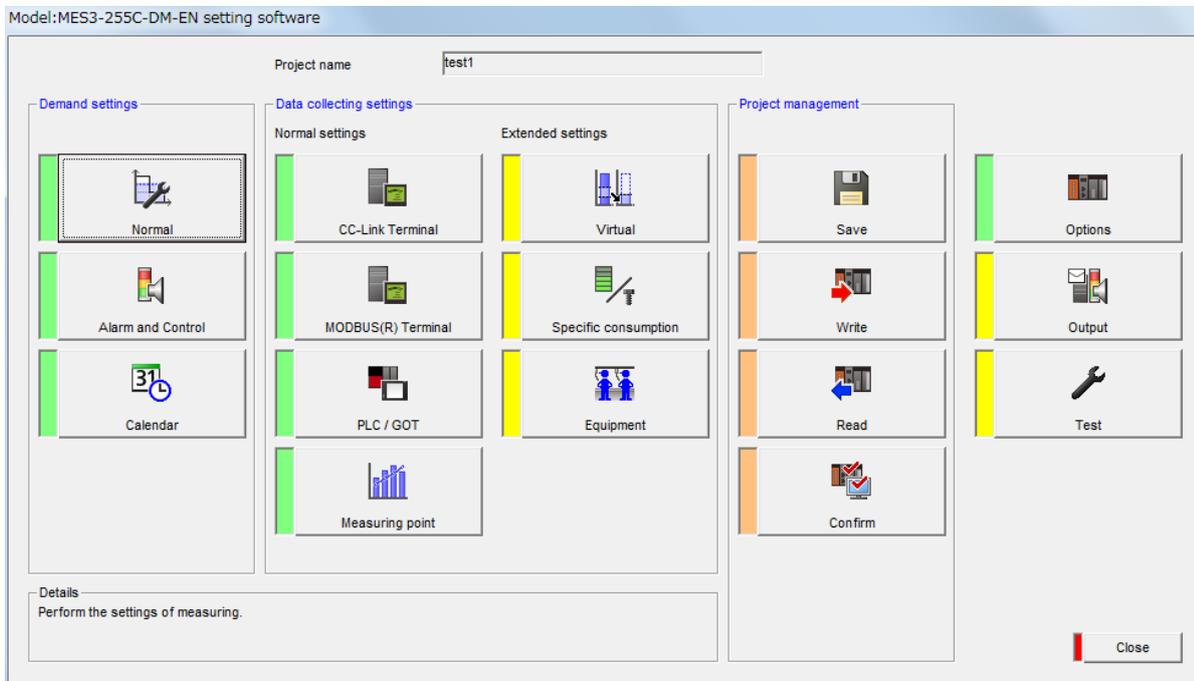

* The demand settings is supported only with EcoWebServerIII with demand control function.

A project refers to the setting data required for operating EcoWebServerIII. A maximum of 50 programs can be registered and managed with this setting software.

4.1. Starting/exiting the setting software

1 Starting the setting software

As the following sample by Windows 7, displayed content might be different by OSs and installed applications.


■ For CC-Link communication product

Open [Start] menu ⇒ [All programs] - [Mitsubishi Energy Management] -
[EcoWebServerIII(MES3-255C-EN) ver3] ⇒Click [Model MES3-255C-EN Setting software ver3]
Or, double-click the [Model MES3-255C-EN Setting software ver3] icon on the desktop.

■ For CC-Link communication product with demand control function


Open [Start] menu ⇒ [All programs] - [Mitsubishi Energy Management] -
[EcoWebServerIII(MES3-255C-DM-EN) ver3] ⇒Click [Model MES3-255C-DM-EN Setting software ver3]
Or, double-click the [Model MES3-255C-DM-EN Setting software ver3] icon on the desktop.

<Example>

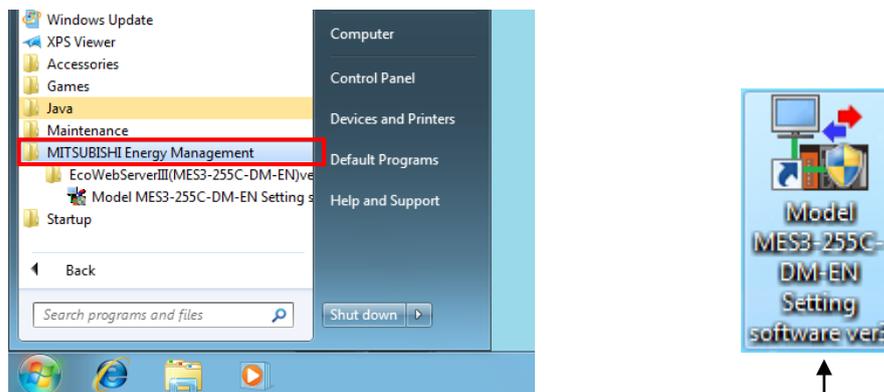


You can also launch the configuration software by double-clicking the **Model: MES3-255C-DM-EN Setting Software ver3** icon on the desktop.

The following splash screen will be displayed at the beginning.

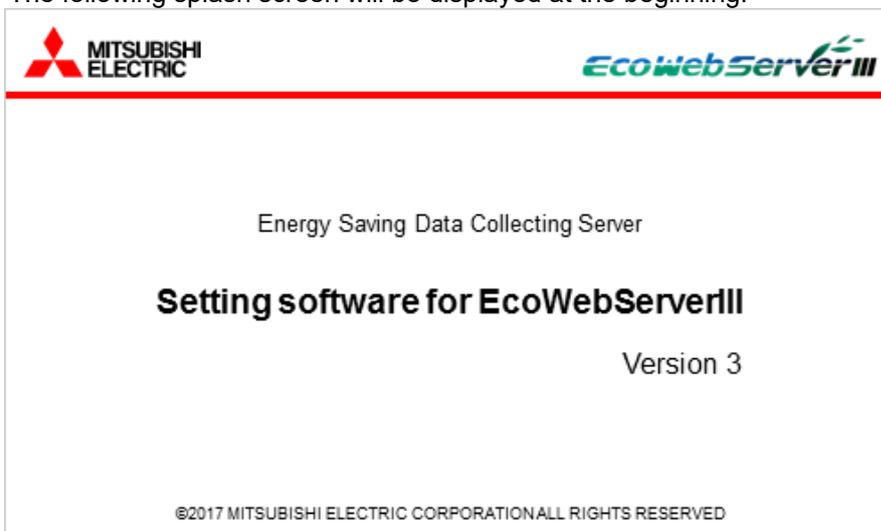


After a short time, the project management dialog box is displayed.

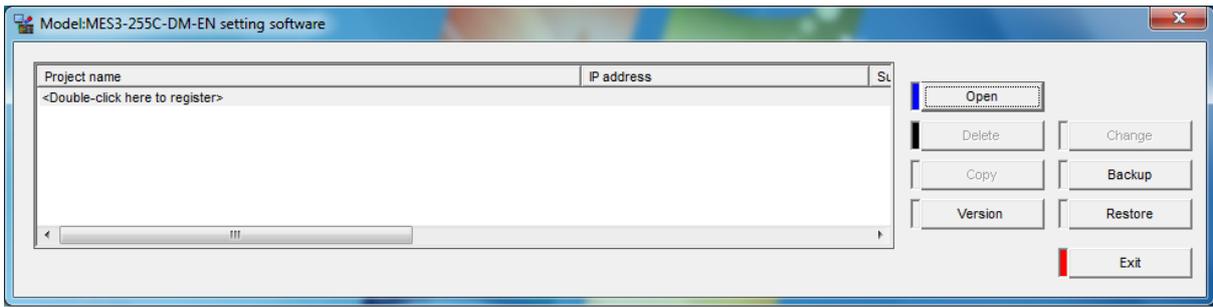

When the above dialog box is displayed, the launch is completed.

- * When the [User Account Control] dialog box is displayed in Windows 7, click [Yes] to launch the software.

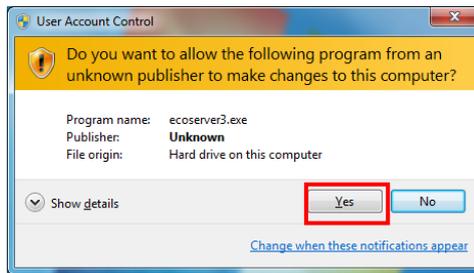


2 Exiting the setting software

Click the [Exit] button or the [] button on the project management dialog box to exit the setting software.

Remarks

- When clicking the [Version] button, you can confirm the version of the setting software.

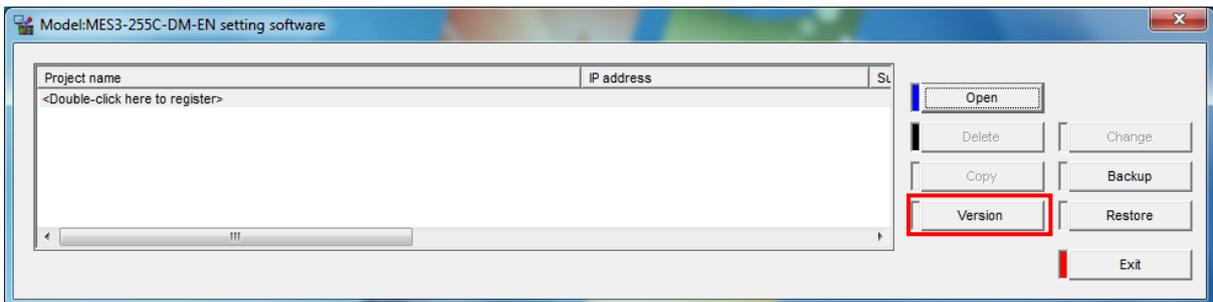

4.2. Project management

This section describes the procedures for operating the project management.

In the project management dialog box, you can register a new project as well as modify, delete, copy, back up, and restore a project.

4.2.1. Registering a new project


The procedures for registering a new project are as follows:

1 Displaying the [Creation project] dialog box

In the list in the project management dialog box, Double-click [<Double-click here to register>].


or

Select [<Double-click here to register>], and click the [Open] button.

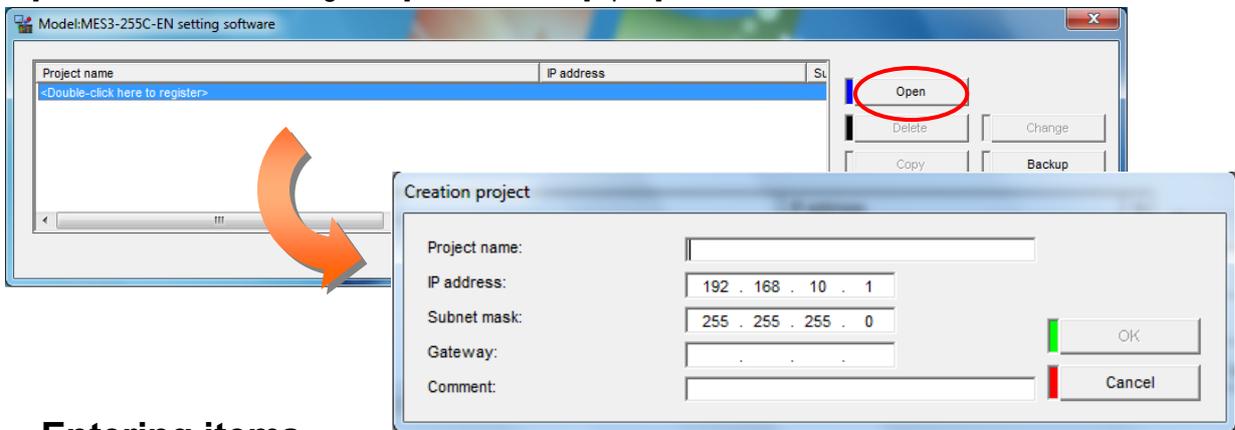

2 Entering items

Enter the following items.
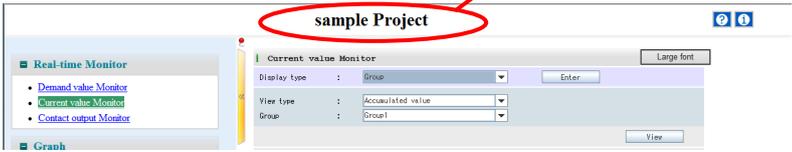
<p>[Project name]</p>	<p>Enter the name of a project that is to be registered in EcoWebServerIII. (The project name specified here is displayed in the EcoWebServerIII menu dialog box.)</p> <p>[EcoWebServerIII menu dialog box]</p> <p style="text-align: right;">Project name</p> 
Characters	Up to 32 characters
Prohibited characters	<p>The following characters cannot be registered # ¥ : , ; * ? " < > </p> <p>A period cannot be used at the beginning or end of the project name.</p>
<p>*1 If you use any disallowed characters, which are listed in "Appendix: Disallowed Character List," the characters may not be displayed properly in the browser display of EcoWebServerIII.</p> <p>*2 A project name that is the same as the existing one cannot be registered. And "XMLTemplate" and "terminalConfig" can not be registered.</p>	

[IP address]	Enter the same value as the IP address that is specified in EcoWebServerIII. (When a new project is being created, the default value "192.168.10.1" is automatically entered.) [Range of configurable IP address]												
	<table border="1"> <thead> <tr> <th>Class</th> <th>Leading IP address bits</th> <th>Range of IP address</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>0</td> <td>1.0.0.0 to 126.255.255.255</td> </tr> <tr> <td>B</td> <td>10</td> <td>128.0.0.0 to 191.255.255.255</td> </tr> <tr> <td>C</td> <td>110</td> <td>192.0.0.0 to 223.255.255.255</td> </tr> </tbody> </table>	Class	Leading IP address bits	Range of IP address	A	0	1.0.0.0 to 126.255.255.255	B	10	128.0.0.0 to 191.255.255.255	C	110	192.0.0.0 to 223.255.255.255
Class	Leading IP address bits	Range of IP address											
A	0	1.0.0.0 to 126.255.255.255											
B	10	128.0.0.0 to 191.255.255.255											
C	110	192.0.0.0 to 223.255.255.255											
	<p>*1 The following IP addresses cannot be configured.</p> <ul style="list-style-type: none"> • "0.0.0.0", "xxx.xxx.xxx.255" (xxx are any values) • The same IP address as that of the client PC <p>*2 The same IP address as the one for other projects can be registered.</p>												
[Subnet mask]	Enter the same value as the subnet mask that is specified in EcoWebServerIII. (When a new project is being created, the default value "255.255.255.0" is automatically entered.)												
[Gateway]	Enter the default gateway of the network to which EcoWebServerIII is connected. *1 The following IP addresses cannot be configured. "0.0.0.0", "xxx.xxx.xxx.255" (xxx are any values) *2 This item is optional. Configure it only when necessary.												
[Comment]	Enter a description of the project. Characters Up to 32 characters Prohibited The following characters cannot be registered: characters # ¥ / : , ; * ? " < > * This item is optional.												

3 Registering the project


Click the button on the [Creation project] dialog box to register the project.



- [OK] button : Registers the project based on the content of the entered items, and returns to the project management dialog box.
* If the project name is not entered, the [OK] button is disabled.
- [Cancel] button : Discards the entered content, and returns to the project management dialog box.

- * If there is an invalid value in the entered content, an error message as in the right figure is displayed according to the invalid content when the [OK] button is clicked.
Reenter the content so that the conditions described in "2 Entering items" will be satisfied.

(Example of display)

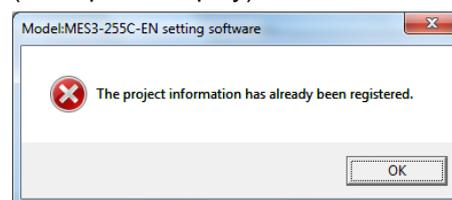

Remarks

- The IP address and subnet mask registered in the project management must be identical with those of EcoWebServerIII.
⇒ Otherwise, the connection to EcoWebServerIII cannot be established, and the writing of the project and other operations cannot be performed.
- When you configure the settings for the first time after unpacking EcoWebServerIII from the shipping carton, register a new project by using the following values.
IP address : **192.168.10.1** (factory default value)
Subnet mask : **255.255.255.0** (factory default value)

4.2.2. Opening a project

The procedures for opening the selected project are as follows:


1 Selecting a project and opening the project settings dialog box

Double-click the line of a desired project in the list in the project management dialog box.


Or

Select the line of a desired project, and click the [Open] button.

Line of a desired project

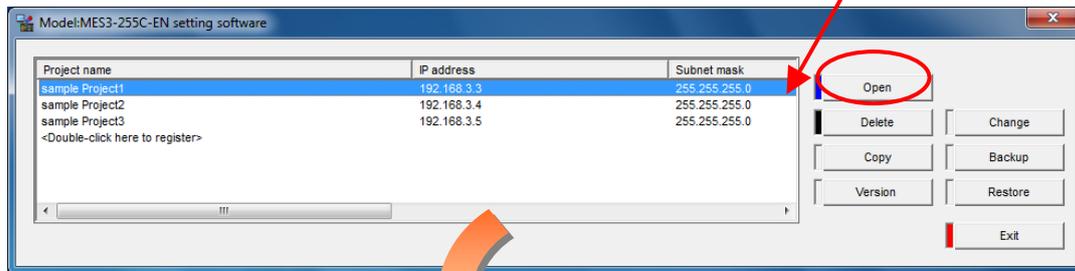

[Project settings dialog box]

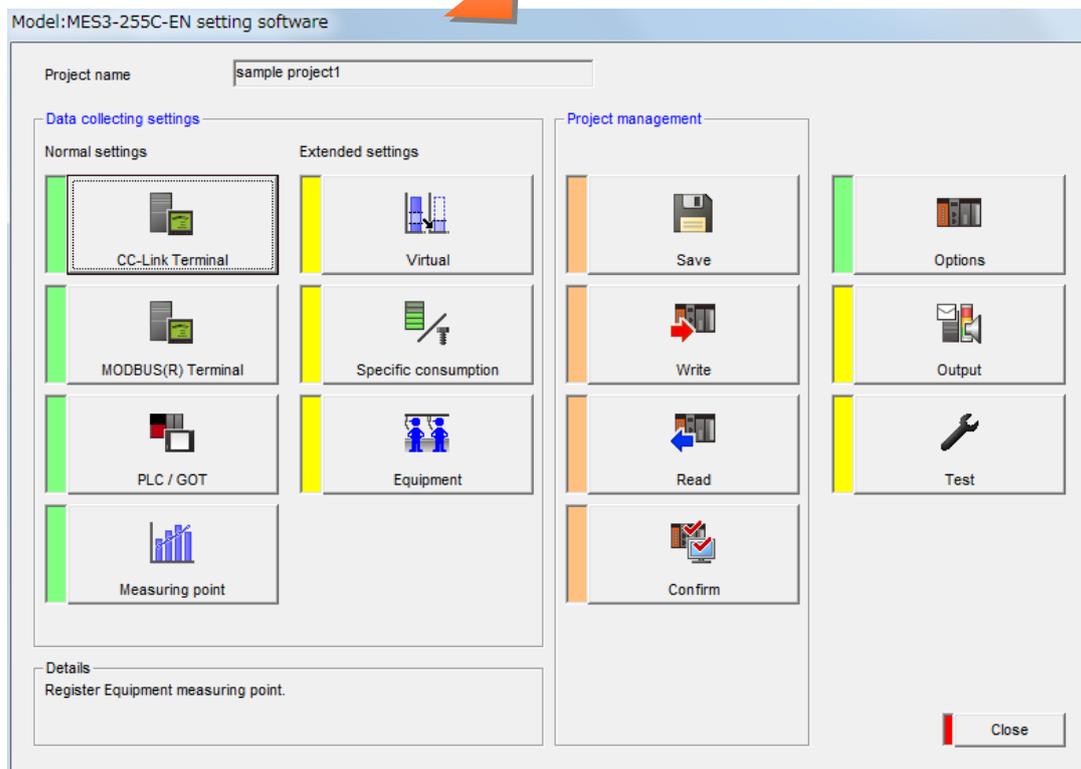

2 Closing the project

Click the [Close] button on the project settings dialog box and return to the project management dialog box.


4.2.3. Deleting a project

The procedures for opening the selected project are as follows:


1 Selecting a project and clicking the [Delete] button

Select the line of a desired project in the list in the project management dialog box, and click the [Delete] button.

Line of a desired project

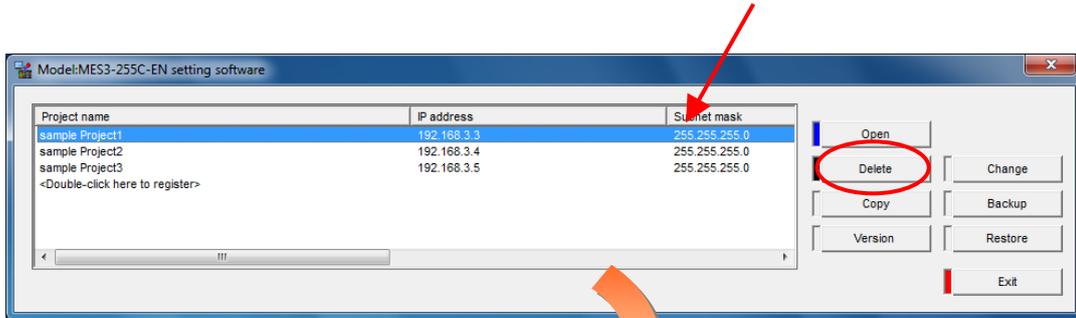

Deletion confirmation dialog box

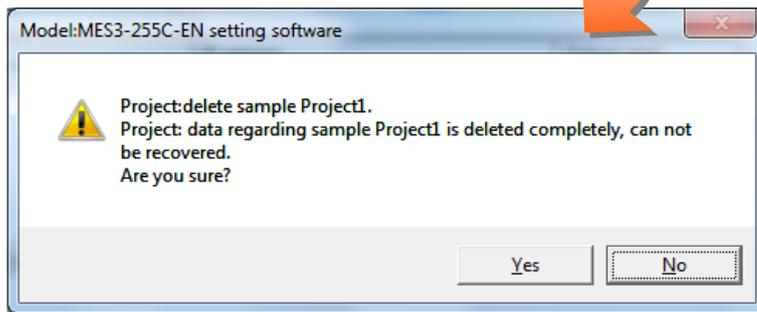

2 Deleting the project

Click the button on the deletion confirmation dialog box to delete the project.



[Yes] button : Deletes the selected project, and returns to the project management dialog box.

[No] button : Cancels the deletion of the project, and returns to the project management dialog box.

Remarks


- When the project is deleted, all the data, including the setting values, is deleted. If you want to save the data, backup the project in advance.
(☞ Refer to 4.2.6 "Backing up projects.")

4.2.4. Modifying the project information

The procedures for modifying the project information (Project name, IP address, Subnet mask, Gateway, and Comment) are as follows:

1 Displaying the [Change project information] dialog box

Select the line of a desired project in the list in the project management dialog box, and click the [Change] button.

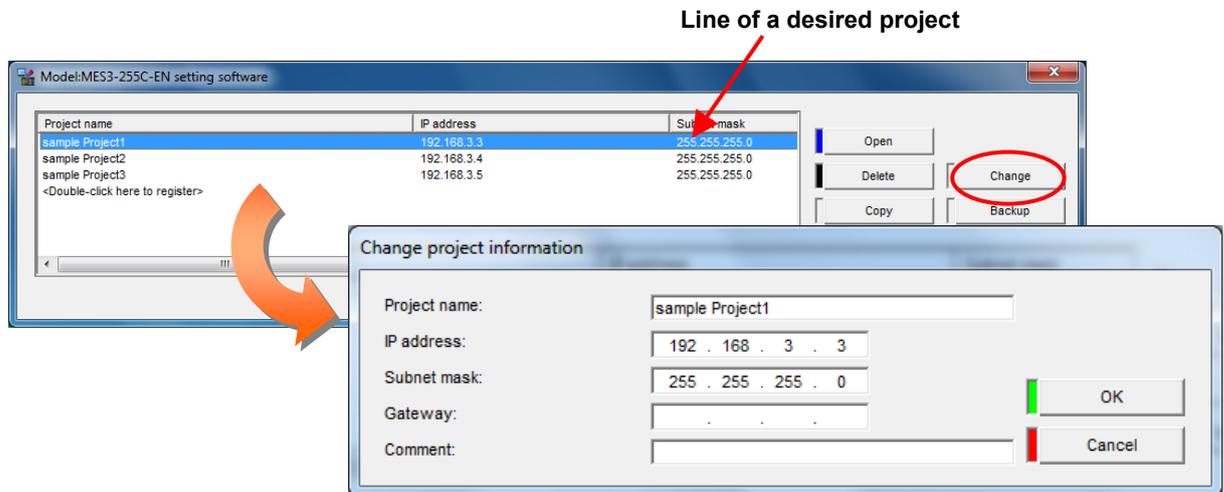

2 Entering the items to be modified

Enter the items to be modified.

* The items and conditions for entry is the same as in the registration of a new project.

(Refer to "4.2.1 Registering a new project.")

3 Registering the modified content

Click the button on the [Change project information] dialog box to register the project.



[OK] button : Registers the project based on the content of the modified items, and returns to the project management dialog box.


* If the project name is not entered, the [OK] button is disabled.

[Cancel] button : Discards the modified content, and returns to the project management dialog box.

* The original content before the modification is restored.

* If there is an invalid value in the entered content, an error message as in the right figure is displayed according to the invalid content when the [OK] button is clicked. Reenter the content so that the conditions for each item will be satisfied.

(Example of display)

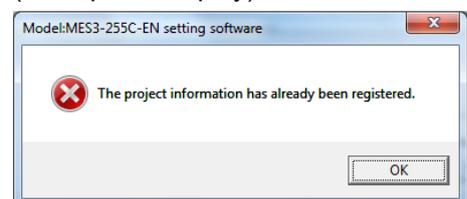

Remarks

- Even if the IP address, subnet mask, and default gateway are modified in the project management, the IP address, subnet mask, and default gateway of EcoWebServerIII are not modified.


How to modify the IP address, subnet mask, and default gateway of the unit?
Refer to "4.8.2 IP address settings."

4.2.5. Copying a project

The procedures for copying a project are as follows:

1 Displaying the [Project information setting at copy destination] dialog box

Select a desired project in the list in the project management dialog box, and click the [Copy] button. Set the project information of the destination in order to copy the contents of the selected projects.

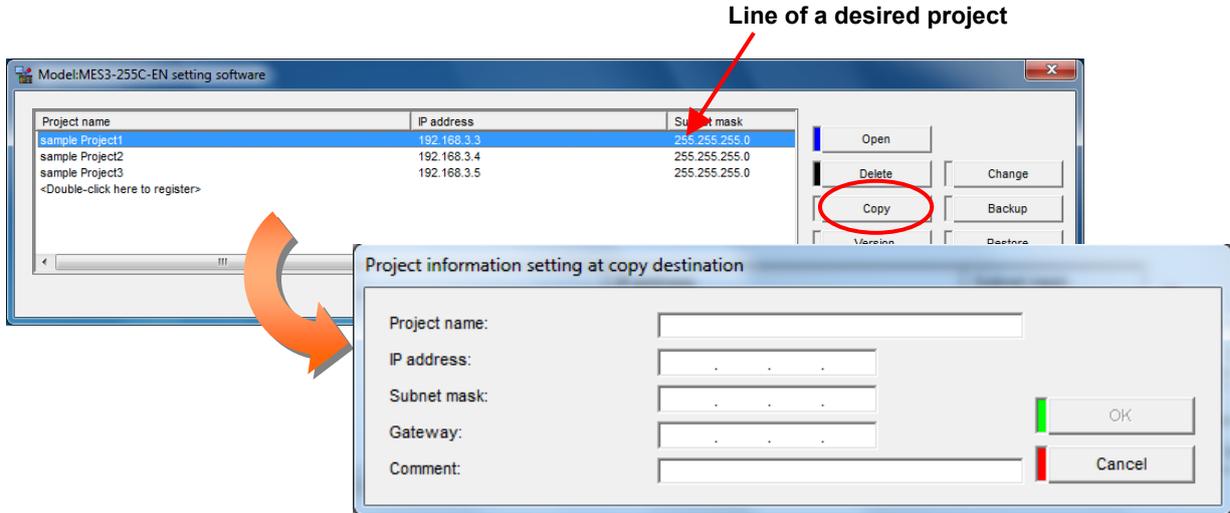


2 Entering the items of the copy destination

Enter the items.

* The items and conditions for entry is the same as in the registration of a new project.
(Refer to "4.2.1 Registering a new project.")


3 Copying and registering the project

Click the button on the [Project information setting at copy destination] dialog box to register the project.

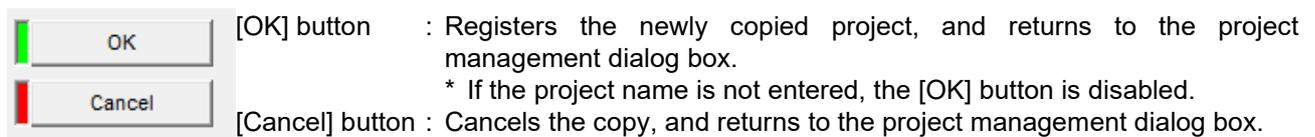

* If there is an invalid value in the entered content, an error message as in the right figure is displayed according to the invalid content when the [OK] button is clicked. Reenter the content so that the conditions for each item will be satisfied.

(Example of display)

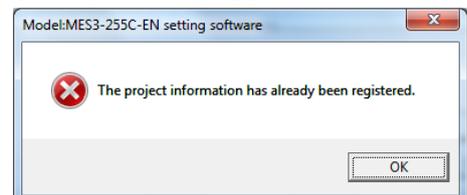

Remarks

- If 50 projects are already registered, no project can be copied.


4.2.6. Backing up projects

The procedures for backing up the projects are as follows.
All the registered projects are to be backed up.

- * We recommend that the projects be backed up on another hard disk or memory so that the projects can be restored even if the projects are deleted by accident.

1 Displaying the [Backup of project] dialog box

Click the [Backup] button on the project management dialog box.

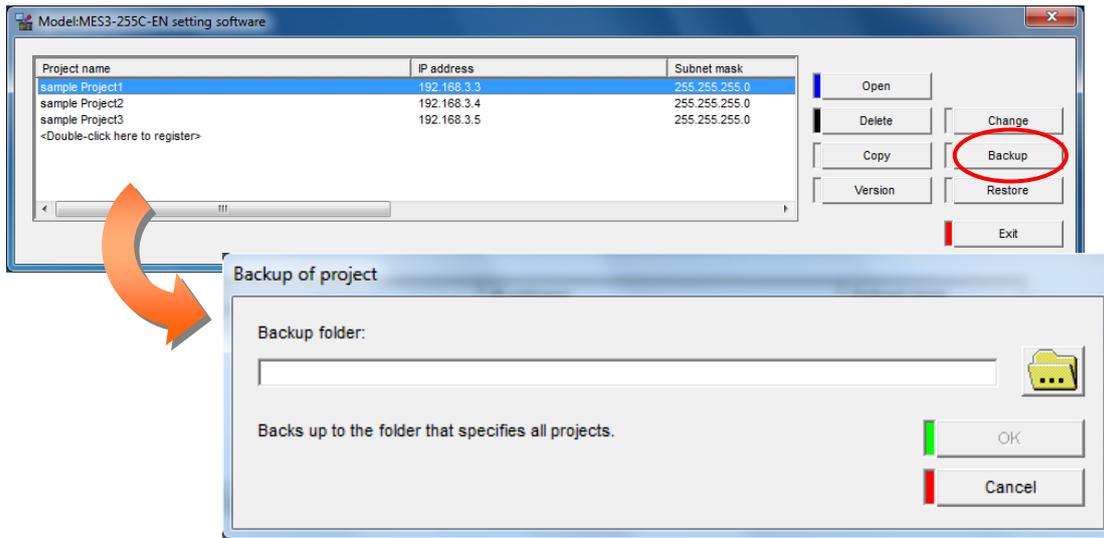

2 Specifying the destination folder

- (1) Enter the folder path of the destination directly.
or

- (2) Click the [] button, and select the desired folder to specify the destination folder.
If you do not have the specified folder (path) when performing the backup of the project, you may not be able to back up normally.

(1) When entering the path directly:

1. Enter the path directly in the [Backup folder] field.


Backup folder:

The entry conditions are as follows:

Backup folder:	Path length	Up to 200 characters.
	Prohibited characters	The following characters cannot be registered: # , ; * ? " < > /
		A period cannot be used at the beginning or end of the project name.
	*1: The drive name and alphabet characters are not case-sensitive.	
*2: If the specified folder does not exist, and error will occur. Prepare the folder beforehand.		

(2) When selecting a desired folder by using the [Browse] button:

1. Click the [] button.
The [Browse For Folder] dialog box is displayed.

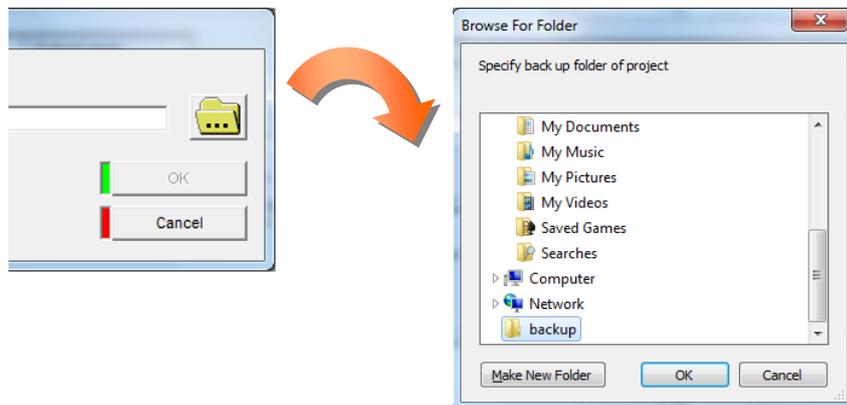

2. Select a destination folder and click a button to determine.

[OK] button : Specifies the selected folder as the destination.
The [Backup of project] dialog box is displayed, and the specified destination path is displayed in the [Backup folder] field.


Backup folder:

[Cancel] button : Cancels the folder selection, and returns to the [Backup of project] dialog box.

[Make New Folder] button : Creates a new folder.


3 Performing the backup

(1) Click the button on the [Backup of project] dialog box.

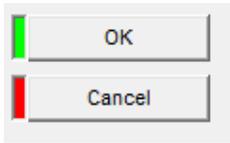


[OK] button : Performs the backup. (The backup confirmation dialog box is displayed.)
* If the destination folder path is not entered, the [OK] button is disabled.
[Cancel] button : Cancels the backup, and returns to the project management dialog box.

* If the device of the specified destination is not ready for use, a message as in the right figure is displayed. Click the [Retry] button after the device is ready, or click the [Cancel] button to change the destination drive.

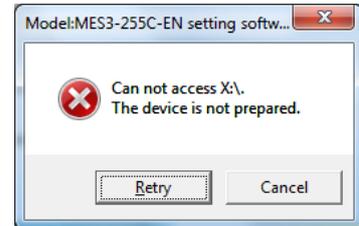

(2) Click the button on the backup confirmation dialog box.

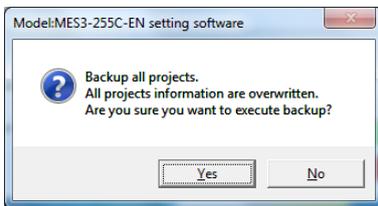

[Yes] button : Performs the backup.
[No] button : Cancels the backup, and returns to the project management dialog box.

(3) When the backup is successfully completed, the following message is displayed. Click the [OK] button to return to the project management dialog box.



Remarks

- Even if the backup is performed, the current project is not deleted. However, if an older project set has already been backed up in the specified destination, it is overwritten and lost by the latest backup.

How to restore the projects that have been backed up?


Refer to "4.2.7 Restoring projects."

4.2.7. Restoring projects

The procedures for restoring the projects are as follows.
All the projects in the restoration source folder are to be restored.

1 Displaying the [Restore of project] dialog box

Click the [Restore] button on the project management dialog box.

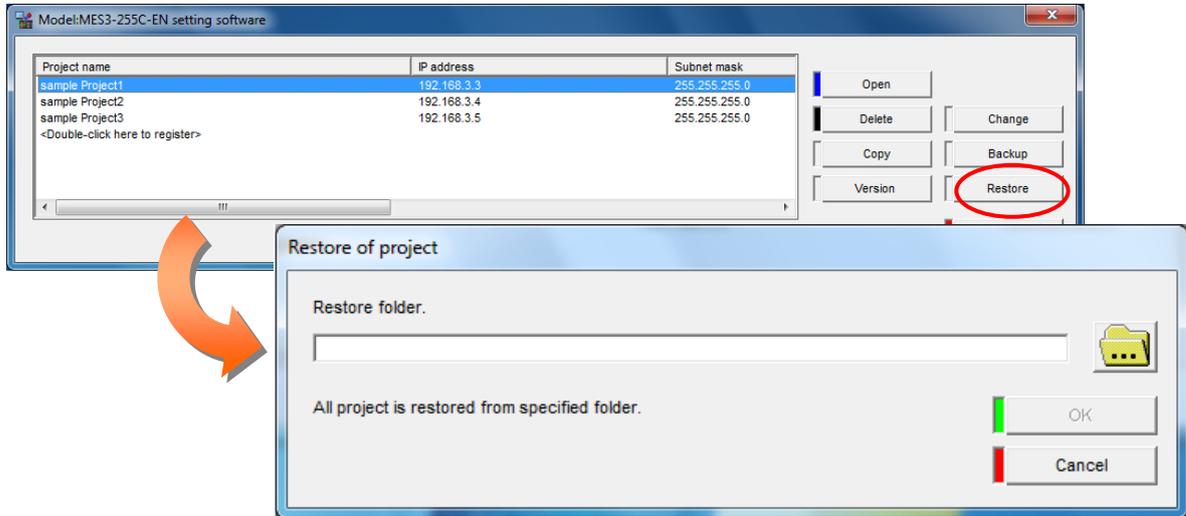

2 Specifying the source folder

- (1) Enter the folder path of the source directly.
Or
- (2) Click the [] button, and select the desired folder to specify the source folder.

(1) When entering the path directly:

1. Enter the path directly in the [Restore folder] field.




The entry conditions are as follows:

Restore folder:	Path length	Up to 200 characters.
	Prohibited characters	The following characters cannot be registered: #, ; * ? " < > /
		A period cannot be used at the beginning or end of the project name.
* The drive name and alphabet characters are not case-sensitive.		

(2) When selecting a desired folder by using the [Browse] button:

1. Click the [Browse] button.
The [Browse For Folder] dialog box is displayed.

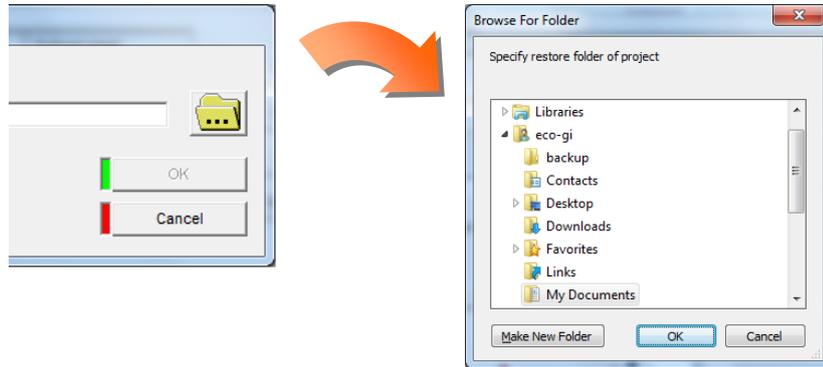

2. Select the source folder, and click the button.

[OK] button : Specifies the selected folder as the source. The [Restore of project] dialog box is displayed, and the specified source path is displayed in the [Restore folder] field.



[Cancel] button : Cancels the folder selection, and returns to the [Restore of project] dialog box.


3 Performing the restoration

- (1) Click the button on the [Restore of project] dialog box.



[OK] button : Performs the restoration.
(The restoration confirmation dialog box is displayed.)
* If the restore folder is not entered, the [OK] button is disabled.
[Cancel] button : Cancels the restoration, and returns to the project management dialog box.


*1 If the project does not exist in the specified restore source, a message as in the right figure is displayed. Click the [OK] button and specify the correct restore source again.

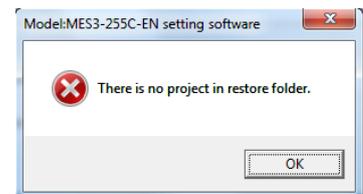


*2 If the folder specified as the source is not ready for use, a message as in the right figure is displayed. Click the [Retry] button after the device is ready, or click the [Cancel] button to change the source drive.



*3 If no project data exists in the specified source folder, a message as in the right figure is displayed. Click the [Cancel] button, and enter the correct source path.

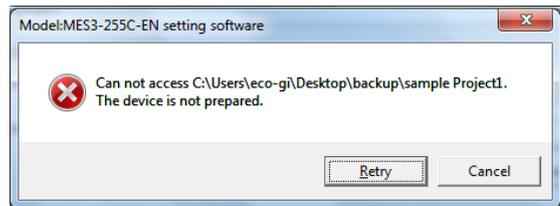


(2) Click the button on the restoration confirmation dialog box.

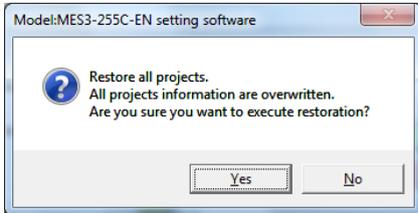

[Yes] button : Performs the restoration.

[No] button : Cancels the restoration, and returns to the project management dialog box.

(3) When the restoration is successfully completed, the following message is displayed. Click the [OK] button to return to the project management dialog box.

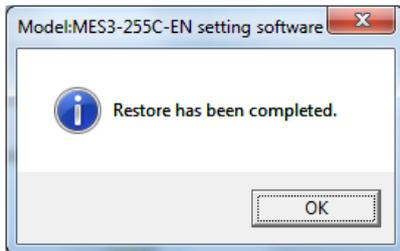

Remarks

- When the backed-up projects are restored, they are added to the current projects. However, the current projects with the same name as those of the backed-up projects are overwritten. Note that the setting details will be overwritten with the contents of the backed up project.
- If the number of projects exceeds 50 after the restoration of projects, the 51st and subsequent projects are not restored.

4.3. Demand control and Control Section Specifications (only with demand control function)

This section describes the demand control control functions.

Always read this section thoroughly before setting demand control, and set the function correctly.

4.3.1. Demand measuring function

The electric energy pulse input to the electric energy pulse signal input terminal is counted to calculate the integral electric energy and current demand.

In addition, the predicted demand, adjusted electrical power, permissible power and power limit are calculated from the current demand and remaining time.

Integrated electric energy

The integrated electric energy from the start of operation is calculated with the VCT ratio, pulse constant setting value and electric energy pulse input.

(1) Setting values related to integrated electric energy

Setting item	Setting range	Explanation
VCT ratio	1 to 100000	Scale for the VCT (meter transformer).
Pulse constant value	1 to 50000	Number of pulses per 1 kWh electric energy input into this device.
Multiplying factor	1 to 100000	Value multiplied with the value displayed on the meter when confirming the electric energy measured with the meter.
Number of digits	4 to 6	Number of digits in the electric energy integer displayed on the meter.

* The meter multiplier and the number of meter digits does not need to be set when the multiplying factor is not set.

* Refer to “4.4.1. Normal demand setting” for details on the setting methods.

Remarks

Setting the multiplying factor

By setting the multiplying factor ([Meter multiplier], [Number of meter digits]), this device will also calculate the integrated electric energy with the same meter rotation value (maximum value of integrated electrical power rate) as the transaction meter.

⇒ When synchronization with integrated electric energy measurement range is not required Demand control is possible with the **simple settings** of just the [VCT ratio] and [Pulse constants]. (Always check the [Set multiplying factor] check box.)

(2) Measuring value

[1] Expression for integrated electric energy

The integrated electric energy is calculated with the following expression based on the preset VCT ratio and pulse constant.

$$\text{Integrated electrical power rate} = \text{No. of pulses from start} \times \frac{\text{VCT ratio}}{\text{Pulse constant}} \text{ [kWh]}$$

[2] Multiplying factor (resolution) and maximum value of integrated electric energy

The integrated electric energy range depends on whether or not the multiplying factor is set.

(☞ Refer to "Reference [Setting the multiplying factor]" on the previous page.)

The maximum integrated electric energy value when setting the multiplying factor is the maximum value of the meter.

<When setting the multiplying factor>

Max. value of integrated electric energy	Multiplying factor of integrated electric energy (10 ⁿ)	Conditions
10 ^{(Number of meter digits) × Meter multiplier – 10^(Multiplying factor)}	-3	Meter multiplier × 10 ^(No. of meter digits-7) <0.01
	-2	0.01 ≤ Meter multiplier × 10 ^(No. of meter digits-7) <0.1
	-1	0.1 ≤ Meter multiplier × 10 ^(No. of meter digits-7) <1
	0	1 ≤ Meter multiplier × 10 ^(No. of meter digits-7)

A quick reference table of the maximum integrated electric energy value and multiplying factor is given below.

		Number of meter digits		
		4	5	6
Meter multiplier	1	9,999.999	99,999.99	999,999.9
	2	19,999.999	199,999.99	1,999,999.9
	:			
	8	79,999.999	799,999.99	7,999,999.9
	9	89,999.999	899,999.99	8,999,999.9
	10	99,999.99	999,999.9	9,999,999
	11	1,099,999.99	1,099,999.9	1,099,999.99
	12	11,999,999.9	1,199,999.9	11,999,999.9
	:			
	98	979,999.99	9,799,999.9	97,999,999
	99	989,999.99	9,899,999.9	98,999,999
	100	999,999.9	9,999,999	99,999,999
	101	1,009,999.9	10,099,999	100,999,999
	102	1,019,999.9	10,199,999	101,999,999
	:			
	998	99,799,999.9	99,799,999	997,999,999
	999	99,899,999.9	99,899,999	998,999,999
	1,000	999,999.999	99,999,999	999,999,999
	1,001	10,009,999	100,099,999	999,999,999
	1,002	10,019,999	100,199,999	999,999,999
:				
9,999	99,999,999	999,999,999	999,999,999	
10,000	99,999,999	999,999,999	999,999,999	
10,001	100,009,999	999,999,999	999,999,999	
:				
99,999	999,999,999	999,999,999	999,999,999	
100,000	999,999,999	999,999,999	999,999,999	

- (Example 1) When No. of meter digits=5, meter multiplier =100
 Meter multiplier × 10^(No. of meter digits-7) = 1, integrated electric energy multiplying factor = 0(10⁰)
 Maximum integrated electric energy value = 10^(No. of meter digits+1) × Meter multiplier – 10^(multiplying factor) = 100,000 × 100 – 1 = 9,999,999,
 Thus, the integrated electrical power rate is 0→1→2→ . . . →9,999,998→9,999,999→0→1
- (Example 2) When No. of meter digits=4, meter multiplier = 240
 Meter multiplier × 10^(No. of meter digits-7) = 0.24 integrated electric energy multiplying factor = -1(10⁻¹)
 Maximum integrated electric energy value = 10^(No. of meter digits+1) × Meter multiplier – 10^(multiplying factor) = 10,000 × 240 – 0.1 = 2,399,999.9.
 Thus, the integrated electrical power rate is 0.0→0.1→0.2→ . . . →2,399,999.8→2,399,999.9→0.0→0.1

<When not setting the multiplying factor>

Max. value of integrated electric energy	Multiplying factor of integrated electric energy (10^n)	Conditions
999.999	-3	VCT ratio = 1
9,999.99	-2	$1 < \text{VCT ratio} \leq 10$
99,999.9	-1	$10 < \text{VCT ratio} \leq 100$
999,999	0	$100 < \text{VCT ratio} \leq 1,000$
9,999,999	1	$1,000 < \text{VCT ratio} \leq 10,000$
99,999,999	2	$10,000 < \text{VCT ratio} \leq 100,000$

(Example 1) When VCT ratio = 100

Maximum integrated electric energy value = 99,999.9

Integrated electric energy multiplying factor is $-1(10^{-1})$

Thus, the integrated electric energy is $0.0 \rightarrow 0.1 \rightarrow 0.2 \rightarrow \dots \rightarrow 99,999.8 \rightarrow 99,999.9 \rightarrow 0.0 \rightarrow 0.1 \dots$

(Example 2) When VCT ratio = 600

Maximum integrated electric energy value = 99,999.9

Integrated electric energy multiplying factor is $0(10^0)$

Thus, the integrated electric energy is $0 \rightarrow 1 \rightarrow 2 \rightarrow \dots \rightarrow 999,998 \rightarrow 999,999 \rightarrow 0 \rightarrow 1 \dots$

Current Demand

The average electric energy (current demand) is calculated from the preset VCT ratio, pulse constant and demand time limit.

An example of the current demand when the demand time limit is 30 minutes is shown below.

(Example 1) When 120 kW electric energy is used for 30 minutes, the current demand after the demand time limit is 120 kW.

(Example 2) When 90 kW is used for 10 minutes and 150 kW is used for 20 minutes, the current demand after the demand time limit is $90 \times 10 / 30 + 150 \times 20 / 30 = 130$ kW.

(1) Setting values related to current demand


Setting item	Setting range	Explanation
Demand time limit	15, 30, 60 (minutes)	Demand time limit for demand control.
VCT ratio	1 to 100000	Scale for the VCT (meter transformer).
Pulse constant value	1 to 50000	Number of pulses per 1 kWh input into this device.
Multiplying factor	1 to 100000	Value multiplied with the value displayed on the meter when confirming the electric energy measured with the meter.
Number of digits	4 to 6	Number of digits in the electric energy integer displayed on the meter.

(2) Measuring value

[1] Expression for current demand

$$\text{Current demand} = \text{No. of pulses from start of time limit} \times \frac{\text{VCT ratio}}{\text{Pulse constant}} \times \frac{60}{\text{Demand time limit}} \text{ [kW]}$$

A graph of the demand value (kW) and demand time limit (minutes) is shown below. The electric energy (No. of pulses from start of time limit x VCT ratio/pulse constant) [kWh] is averaged with the demand time limit [minutes], so even if a single electric energy pulse is not input from the current state to the end of the demand time limit, the current demand will not change.

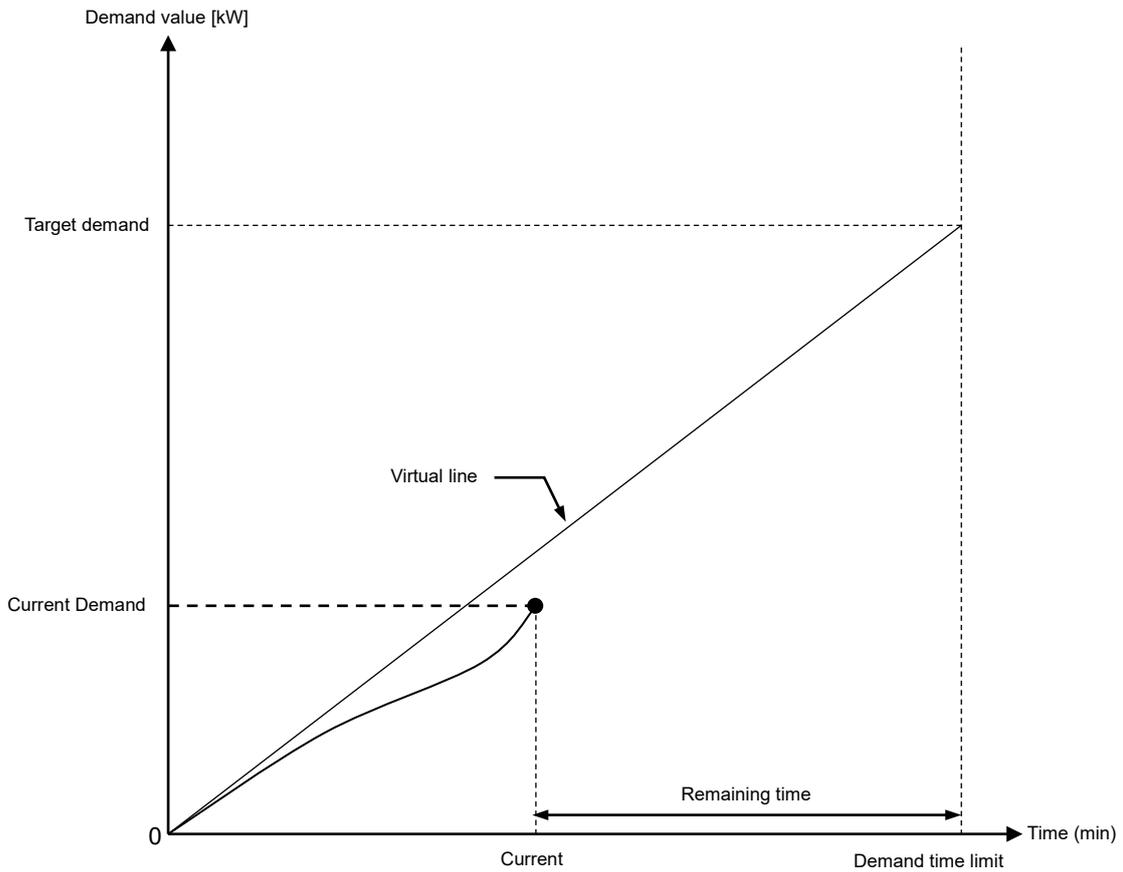

Current Demand

[2] Multiplying factor (resolution) and maximum value of current demand

The current demand range depends on whether or not the multiplying factor is set.

(☞ See "4.3.1 Demand measuring function, integrated electric energy "Remarks [Setting the multiplying factor]" for details.)

<When setting the multiplying factor>

Maximum value of current demand	Multiplying factor of current demand multiplying factor (10 ⁿ)	Conditions
999.9999	n = -4	Meter multiplier × 10 ^(No. of meter digits-7) < 0.01
9,999.999	n = -3	0.01 ≤ Meter multiplier × 10 ^(No. of meter digits-7) < 0.1
99,999.99	n = -2	0.1 ≤ Meter multiplier × 10 ^(No. of meter digits-7) < 1
999,999.9	n = -1	1 ≤ Meter multiplier × 10 ^(No. of meter digits-7)

A quick reference table of the maximum current demand value and multiplying factor (10^n) is given below.

		Number of meter digits		
		4	5	6
Meter multiplier	1	999,999.9	9,999,999	99,999,999
	2	999,999.9	9,999,999	99,999,999
	:	Multiplying factor of current demand = -4	Multiplying factor of current demand = -3	Multiplying factor of current demand = -2
	8	999,999.9	9,999,999	99,999,999
	9	999,999.9	9,999,999	99,999,999
	10	9,999,999	99,999,999	999,999,999
	11	9,999,999	99,999,999	999,999,999
	12	Multiplying factor of current demand = -3	Multiplying factor of current demand = -2	
	:			
	98	9,999,999	99,999,999	999,999,999
	99	9,999,999	99,999,999	999,999,999
	100	99,999,999	999,999,999	999,999,999
	101	99,999,999	999,999,999	999,999,999
	102	Multiplying factor of current demand = -2		
	:			
	998	99,999,999	999,999,999	999,999,999
	999	99,999,999	999,999,999	999,999,999
	1,000	999,999,999	999,999,999	999,999,999
	1,001	999,999,999	999,999,999	999,999,999
	1,002	999,999,999	Multiplying factor of current demand = -1	
:				
9,999	999,999,999	999,999,999	999,999,999	
10,000	999,999,999	999,999,999	999,999,999	
10,001	999,999,999	999,999,999	999,999,999	
:				
99,999	999,999,999	999,999,999	999,999,999	
100,000	999,999,999	999,999,999	999,999,999	

(Example 1) When No. of meter digits = 5, meter multiplier = 100
 Meter multiplier $\times 10^{(\text{No. of meter digits}-7)} = 1$, current demand multiplying factor = $-1(10^{-1})$,
 Maximum current demand value = 999,999.9
 Thus, the current demand is 0.0→0.1→0.2→ . . . →999,999.8→999,999.9.

(Example 2) No. of meter digits = 4, meter multiplier = 240
 Meter multiplier $\times 10^{(\text{No. of meter digits}-7)} = 0.24$, current demand multiplying factor = $-2(10^{-2})$,
 Maximum current demand value = 99,999.99
 Thus, the current demand is 0.00→0.01→0.02→ . . . →99,999.98→99,999.99.

<When not setting the multiplying factor>

Current demand range	Conditions
0.0 to 999,999.9	None (always)

(Example 1) When No. of meter digits = 5, meter multiplier = 100
 Regardless of the No. of meter digits and meter multiplier setting, the current demand range is 0.0 to 999,999.9.
 Thus, the current demand is 0.0→0.1→0.2→ . . . →999,999.8→999,999.9.

Predicted Demand

The demand value (predicted demand) at the end of the demand time limit when the current load state continues is calculated.

(1) Settings related to predicted demand

The settings related to the predicted demand are the same as the current demand.
Refer to "**Current demand**" for details.

(2) Measuring value

[1] Expression for predicted demand


$$\text{Predicted demand} = \text{Current demand} + \frac{\text{Increased demand}}{\text{Pulse integrated time}} \times \text{Remaining time [kW]}$$

*1: The increased demand refers to the increase of current demand within the pulse-integrated time.

*2: The pulse-integrated time is as follows.

When remaining time is longer than 3 minutes: 3 minutes

When remaining time is less than 3 minutes: 1 minute

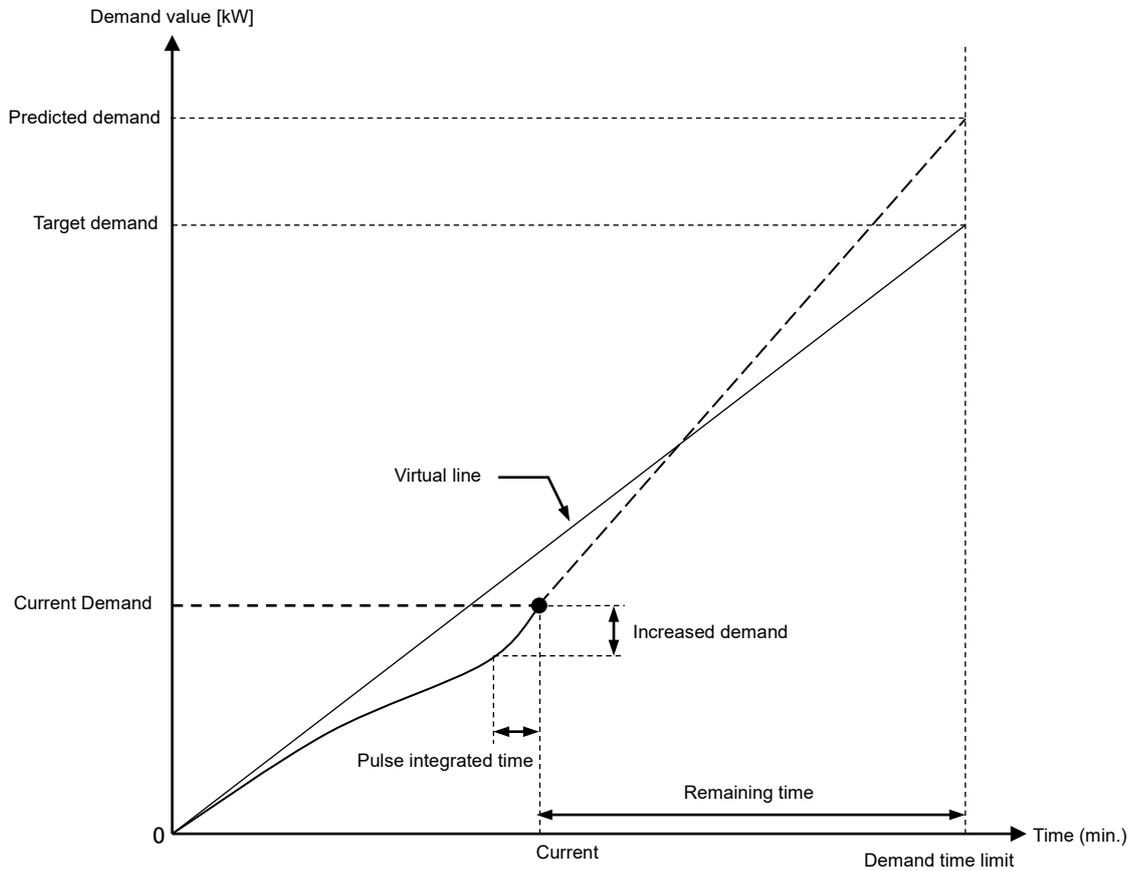

Predicted demand

[2] Resolution and maximum value of predicted demand

The predicted demand range is 0.0 to 999,999.9 [kW].

Adjusted electrical power

To make the demand value the target demand when demand time limit is completed, the electrical power (load value) (adjusted electrical power) that must be adjusted (turned on/off) from the current state must be calculated. If the adjusted electrical power <0, this means "excessive" and is an electrical power than must be shut off.

(1) Setting values related to adjusted electrical power

Setting item		Setting range	Explanation
Demand time limit		15, 30, 60 (minutes)	Demand time limit for demand control.
All day	Target demand	0.0 - 999999.9 kW	Set the demand electric energy used as target for demand time limit.
Time zone 1	Target demand	0.0 - 999999.9 kW	Set the demand electric energy used as target for demand time limit.
⋮	⋮	⋮	⋮
Time zone 10	Target demand	0.0 - 999999.9 kW	Set the demand electric energy used as target for demand time limit.

(2) Measuring value

[1] Expression for adjusted electrical power

$$\text{Adjusted electrical power} = (\text{Target demand} - \text{Predicted demand}) \times \frac{\text{Demand time limit}}{\text{Remaining time}} \text{ [kW]}$$

Since the target demand and predicted demand are the average electric energy within the demand time limit, the electrical power that must be adjusted within the remaining time can be expressed by multiplying the "target demand - predicted demand" by the "demand time delay/remaining time".

(Example 1) When demand time limit 30 minutes (1800 seconds), target demand 300.0 [kW], remaining time 900 seconds, and predicted demand 310.0 [kW]

$$\text{Adjusted electrical power} = (-10.0) \times \frac{1800}{900} = -20.0 \text{ [kW]}$$

When compared with the current load state, if the average 20.0 kW load is not reduced within the remaining time, this means that the demand value will exceed the target demand when the demand time delay finishes.

[2] Resolution and maximum value of adjusted electrical power

The adjusted electrical power range is -999999.9 to 999999.9 [kW].

Permissible Power

The electrical power (permissible power) that can be used in the remaining time is calculated from the current demand so that the demand value reaches the target demand when the demand time limit finishes.

(1) Setting values related to permissible power

Setting item		Setting range	Explanation
Demand time limit		15, 30, 60 (minutes)	Demand time limit for demand control.
All day	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
Time zone 1	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
⋮	⋮	⋮	⋮
Time zone 10	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.

(2) Measuring value

[1] Expression for permissible power

$$\text{Permissible power} = \times \frac{\text{Target demand} - \text{Current demand}}{\text{Remaining time}} \times \text{Demand time limit [kW]}$$

Since the target demand and current demand are the average electric energy within the demand time limit, the electrical power that must be adjusted within the remaining time can be expressed by multiplying the "target demand - current demand" by the "demand time delay/remaining time".

[2] Resolution and maximum value of permissible power

The permissible power range is 0.0 to 999999.9 [kW].

Power limit

The electrical power (power limit) that could exceed the target demand if operation is not performed with only the base power (load that cannot be shut off) is calculated.

This means that if the current demand exceeds the power limit, the target demand will be exceeded even if all loads other than the base power are shut off.


(1) Setting values related to power limit

Setting item		Setting range	Explanation
Demand time limit		15, 30, 60 (minutes)	Demand time limit for demand control.
All day	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
	Base power	0.0 to 99999.9 kW	Set the load capacity that cannot be shut off. This is used to calculate the power limit.
Time zone 1	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
	Base power	0.0 to 99999.9 kW	Set the load capacity that cannot be shut off. This is used to calculate the power limit.
⋮	⋮	⋮	⋮
Time zone 10	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
	Base power	0.0 to 99999.9 kW	Set the load capacity that cannot be shut off. This is used to calculate the power limit.

(2) Measuring value

[1] Expression for power limit

$$\text{Power limit} = \text{Target demand} - \frac{\text{Base power}}{\text{Demand time limit}} \times \text{Remaining time [kW]}$$

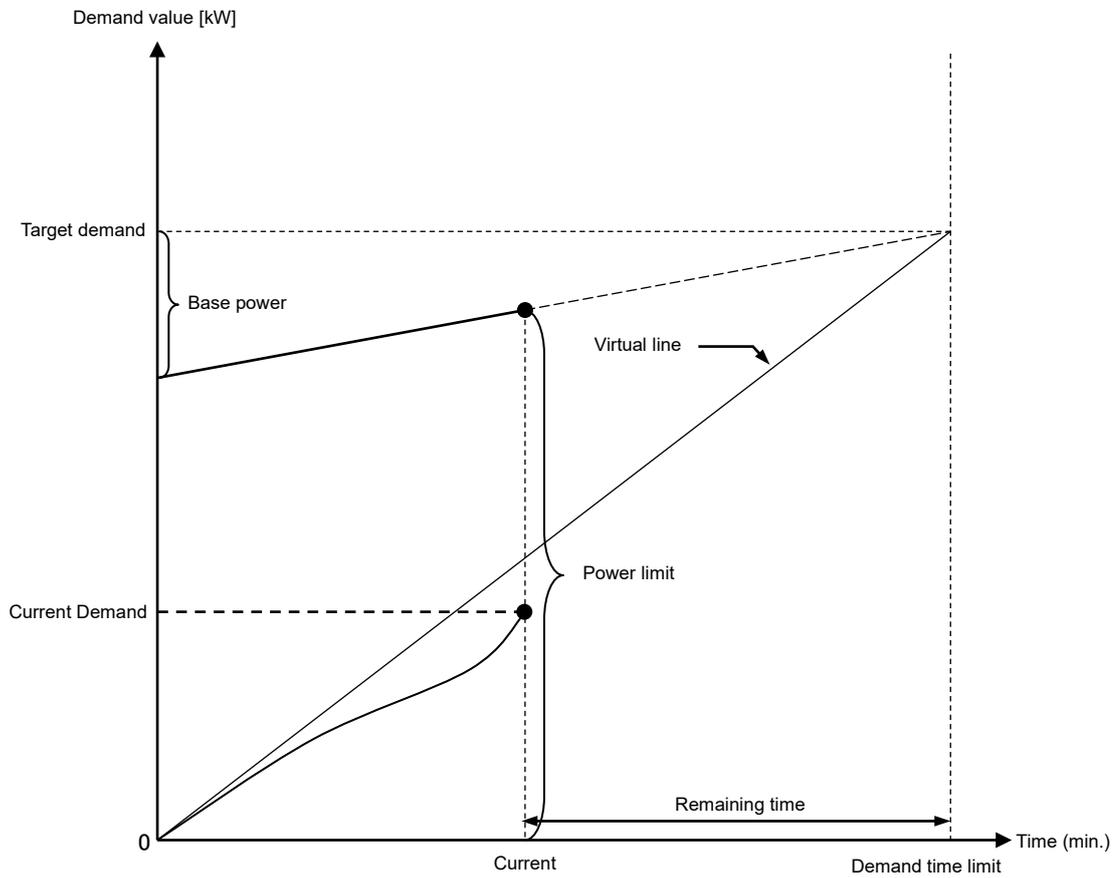

Power limit

[2] Resolution and maximum value of power limit

The power limit range is 0.0 to 999999.9 [kW].

4.3.2. Demand control and alarm function


When the current demand, predicted demand, adjusted electrical power or power limit value satisfies the alarm occurrence conditions, an alarm (Level 1 alarm, Level 2 alarm, limit alarm, fixed alarm) occurs.

Level 1 alarm

This alarm occurs if the predicted demand is larger than the target demand (predicted demand > target demand). Occurrence of the Level 1 alarm means that the target demand will be exceeded if the current load state continues.

(1) Level 1 alarm occurrence/reset conditions

Item	Details
Occurrence conditions	The Level 1 alarm occurs when all of the following conditions are satisfied. - Predicted demand > Target demand - Target demand ≠ 0 - Outside alarm mask time (remaining time < demand time limit - alarm mask time)
Reset conditions	The Level 1 alarm is reset when one of the following is satisfied. - Predicted demand ≤ Target demand - When demand time limit switches
Detection cycle	Detection/reset are carried out at a 10-second interval.

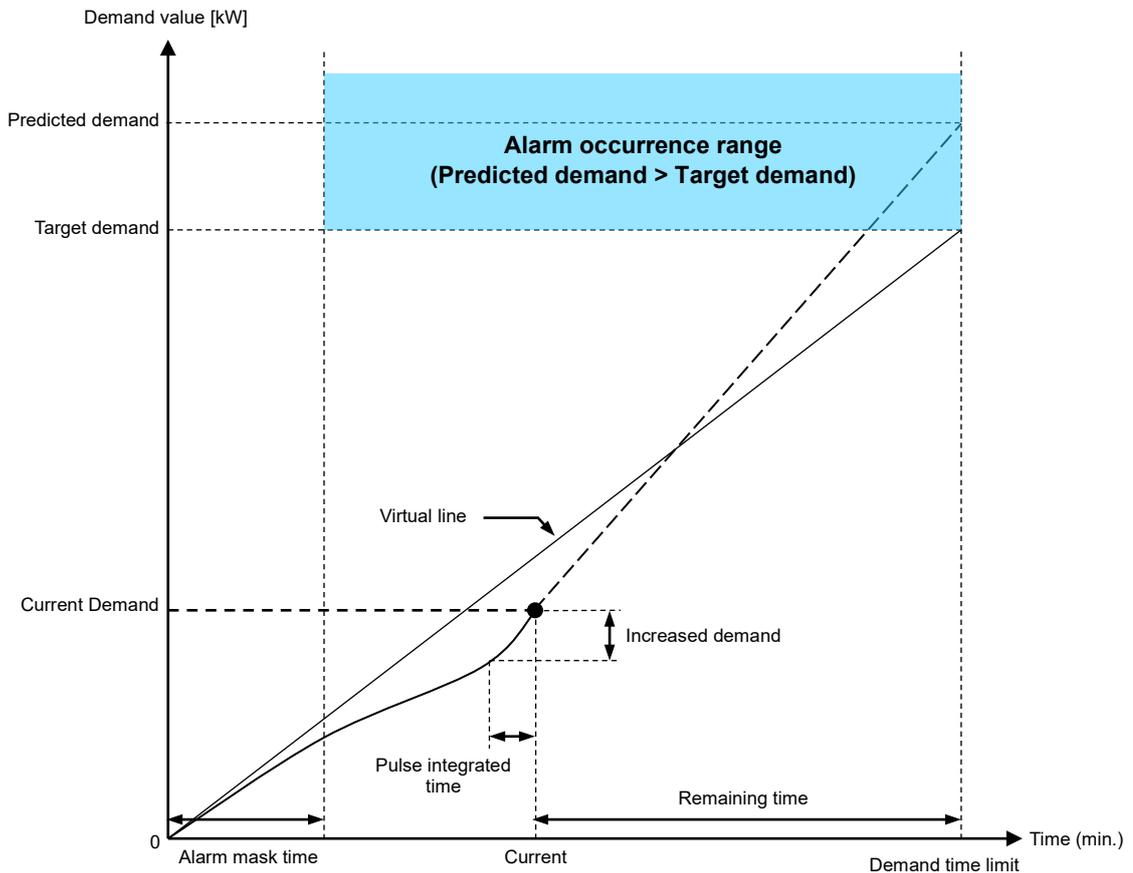

Level 1 alarm

(2) Setting values related to Level 1 alarm

Setting item		Setting range	Explanation
Alarm mask time		For 15-minute time limit 0 to 15 (minutes) For 30-minute time limit 0 to 30 (minutes) For 60-minute time limit 0 to 60 (minutes)	Set the time that each alarm (Level 1 alarm, Level 2 alarm, limit alarm, fixed alarm) is not output after the demand time limit starts.
All day	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
Time zone 1	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
⋮	⋮	⋮	⋮
Time zone 10	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.

Level 2 alarm

This alarm occurs when the adjusted electrical power (excessive amount) is higher than the control load capacity scheduled for shut off ($-(\text{adjusted electrical power}) \geq \text{control load capacity scheduled for shut off}$). The control load capacity can be set in the range of 0.0 to 99999.9 [kW].


When the Level 2 alarm occurs, it means that the adjusted electrical power is excessive (negative value) even if the control No. scheduled for shut off is shut off.

* This function occurs only when demand control function is enabled.

(1) Level 2 alarm occurrence/reset conditions

Item	Details
Occurrence conditions	The Level 2 alarm occurs when all of the following conditions are satisfied. <ul style="list-style-type: none"> - $-(\text{adjusted electrical power}) \geq \text{control load capacity scheduled for shut off}$ (*1) - Order of priority for one or more control output $\neq 0$ - Target demand $\neq 0$ - Outside alarm mask time (remaining time $<$ demand time limit - alarm mask time) - Remaining time > 0
Reset conditions	The Level 2 alarm is reset when one of the following is satisfied. <ul style="list-style-type: none"> - Adjusted electrical power $> -(\text{control load capacity scheduled for shut off})$ - When demand time limit switches
Detection cycle	Detection/reset are carried out at a 10-second interval.

*1: If all control output with a set order of priority have been shut off and there are no more to shut off, the control load capacity scheduled for shut off is handled as 0.

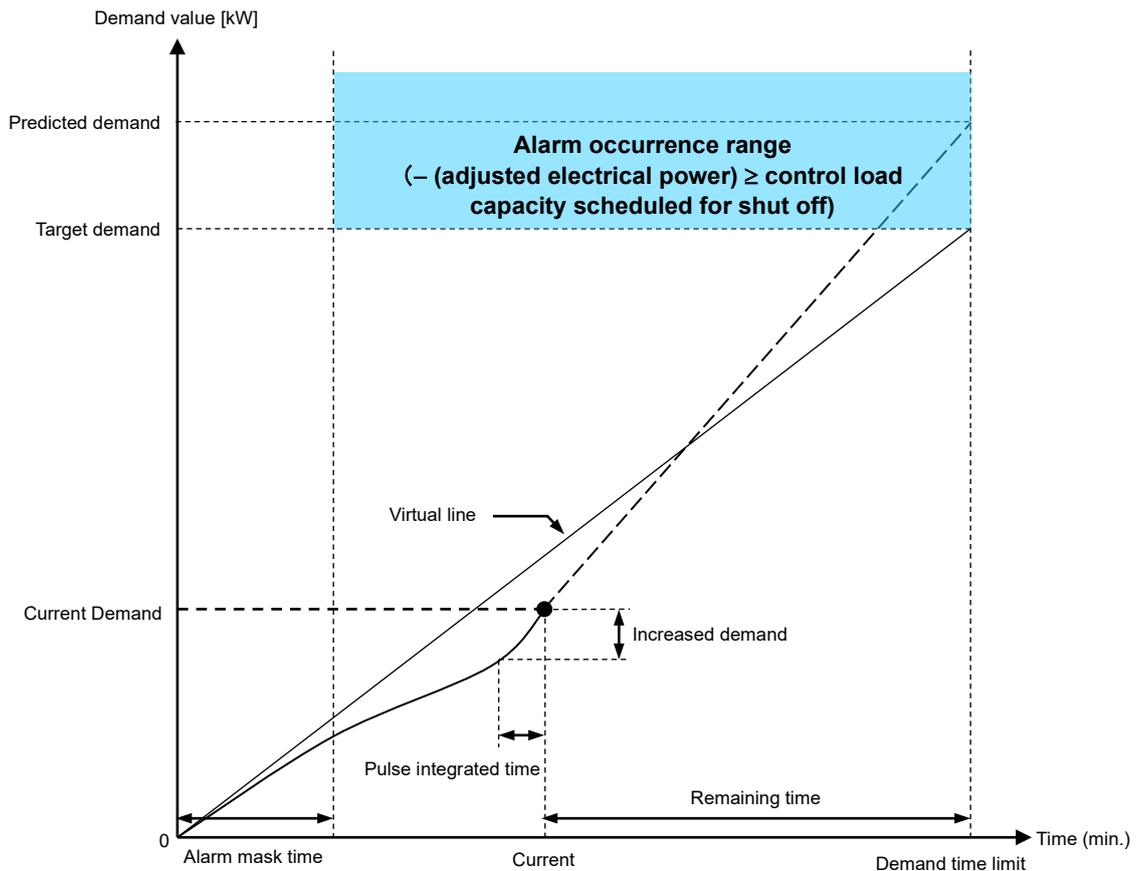

Level 2 alarm

(2) Setting values related to Level 2 alarm

Setting item		Setting range	Explanation
Alarm mask time		For 15-minute time limit 0 to 15 (minutes) For 30-minute time limit 0 to 30 (minutes) For 60-minute time limit 0 to 60 (minutes)	Set the time that each alarm (Level 1 alarm, Level 2 alarm, limit alarm, fixed alarm) is not output after the demand time limit starts.
Control output 1	Order of priority	Invalid, 1 to 12	Set the order of priority for shut off/turn on. The invalid control output is not shut off or turned on with demand control.
	Control load capacity	0.0 to 99999.9 kW	Set the load capacity of the control output to be shut off and turned on.
Control output 2	Order of priority	Invalid, 1 to 12	Set the order of priority for shut off/turn on. The invalid control output is not shut off or turned on with demand control.
	Control load capacity	0.0 to 99999.9 kW	Set the load capacity of the control output to be shut off and turned on.
⋮	⋮	⋮	⋮
Control output 12	Order of priority	Invalid, 1 to 12	Set the order of priority for shut off/turn on. The invalid control output is not shut off or turned on with demand control.
	Control load capacity	0.0 to 999999.9 kW	Set the load capacity of the control output to be shut off and turned on.
All day	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
Time zone 1	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
⋮	⋮	⋮	⋮
Time zone 10	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.


Limit alarm

This alarm occurs if the current demand is larger than the limit power (current demand > limit power), and can occur if alarm type is set to limit alarm.

This alarm means that the target demand will be exceeded even if all loads other than the base power are all shut off.

(1) Limit alarm occurrence/reset conditions

Item	Details
Occurrence conditions	The limit alarm occurs when all of the following conditions are satisfied. <ul style="list-style-type: none"> - Current Demand > Power limit - Alarm type=Limit alarm - Target demand ≠ 0 - Base power ≠ 0 - Outside alarm mask time (remaining time < demand time limit setting value – alarm mask time) - Remaining time > 0
Reset conditions	The limit alarm is restored when one of the following is satisfied. <ul style="list-style-type: none"> - Current Demand ≤ Power limit - When demand time limit switches
Detection cycle	Detection/reset are carried out at a 10-second interval.

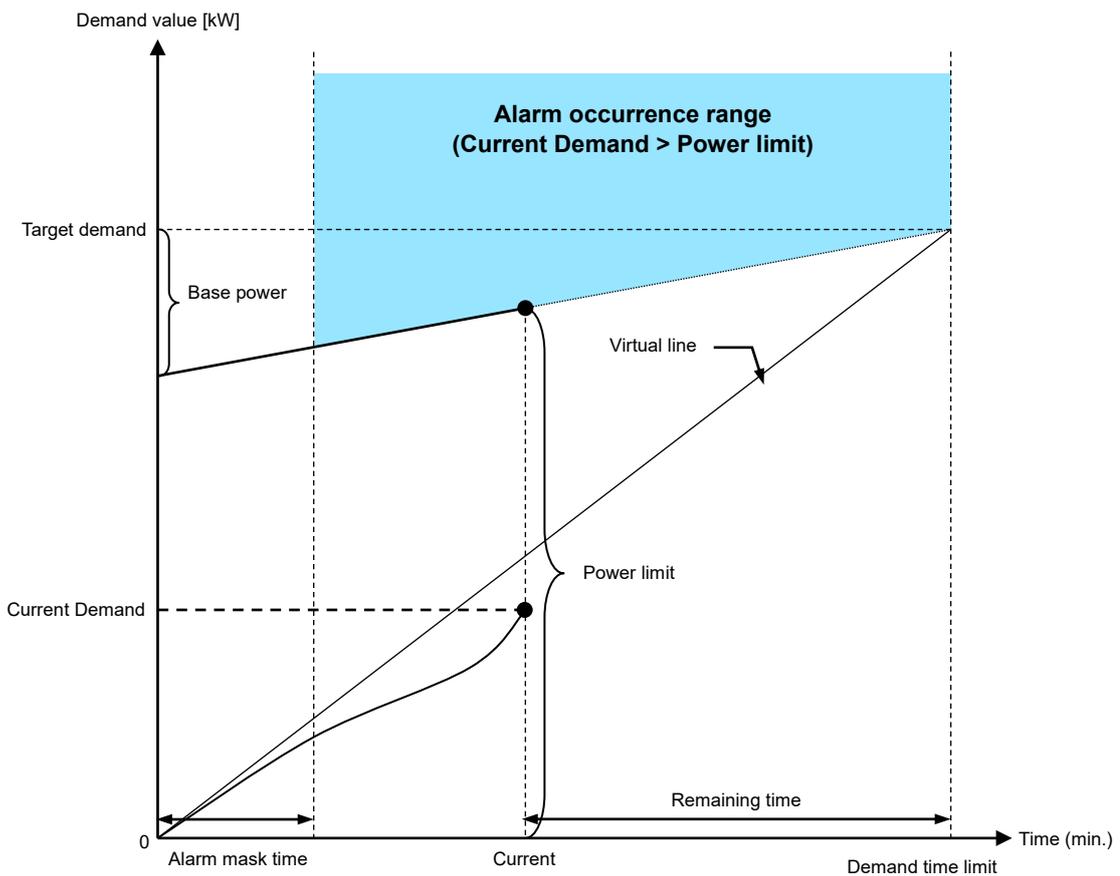

Limit alarm

(2) Settings related to limit alarm

Setting item		Setting range	Explanation
Alarm type		Limit alarm, fixed alarm	Sets whether to detect the limit alarm or fixed alarm.
Alarm mask time		For 15-minute time limit 0 to 15 (minutes) For 30-minute time limit 0 to 30 (minutes) For 60-minute time limit 0 to 60 (minutes)	Set the time that each alarm (Level 1 alarm, Level 2 alarm, limit alarm, fixed alarm) is not output after the demand time limit starts.
All day	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
	Base power	0.0 to 99999.9 kW	Set the load capacity that cannot be shut off. This is used to calculate the power limit.
Time zone 1	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
	Base power	0.0 to 99999.9 kW	Set the load capacity that cannot be shut off. This is used to calculate the power limit.
⋮	⋮	⋮	⋮
Time zone 10	Target demand	0.0 to 999999.9 kW	Set the demand electric energy used as target for demand time limit.
	Base power	0.0 to 99999.9 kW	Set the load capacity that cannot be shut off. This is used to calculate the power limit.


Fixed alarm

This alarm occurs when the current demand is higher than the fixed alarm value (current demand \geq fixed alarm value), and can occur if the alarm type is set to fixed alarm.

The fixed alarm value can be set in the range of 0 to 999,999.9 [kW].

(1) Fixed alarm occurrence/resetting conditions.

Item	Details
Occurrence conditions	The fixed alarm occurs when all of the following conditions are satisfied. <ul style="list-style-type: none"> - Current Demand \geq Fixed alarm value - Alarm type = Fixed alarm - Fixed alarm value \neq 0 - Outside alarm mask time (remaining time < demand time limit setting value - alarm mask time) - Remaining time > 0
Reset conditions	The fixed alarm is reset when the following is satisfied. <ul style="list-style-type: none"> - When demand time litmus ends (start)
Detection cycle	Detection/reset are carried out at a 10-second interval.

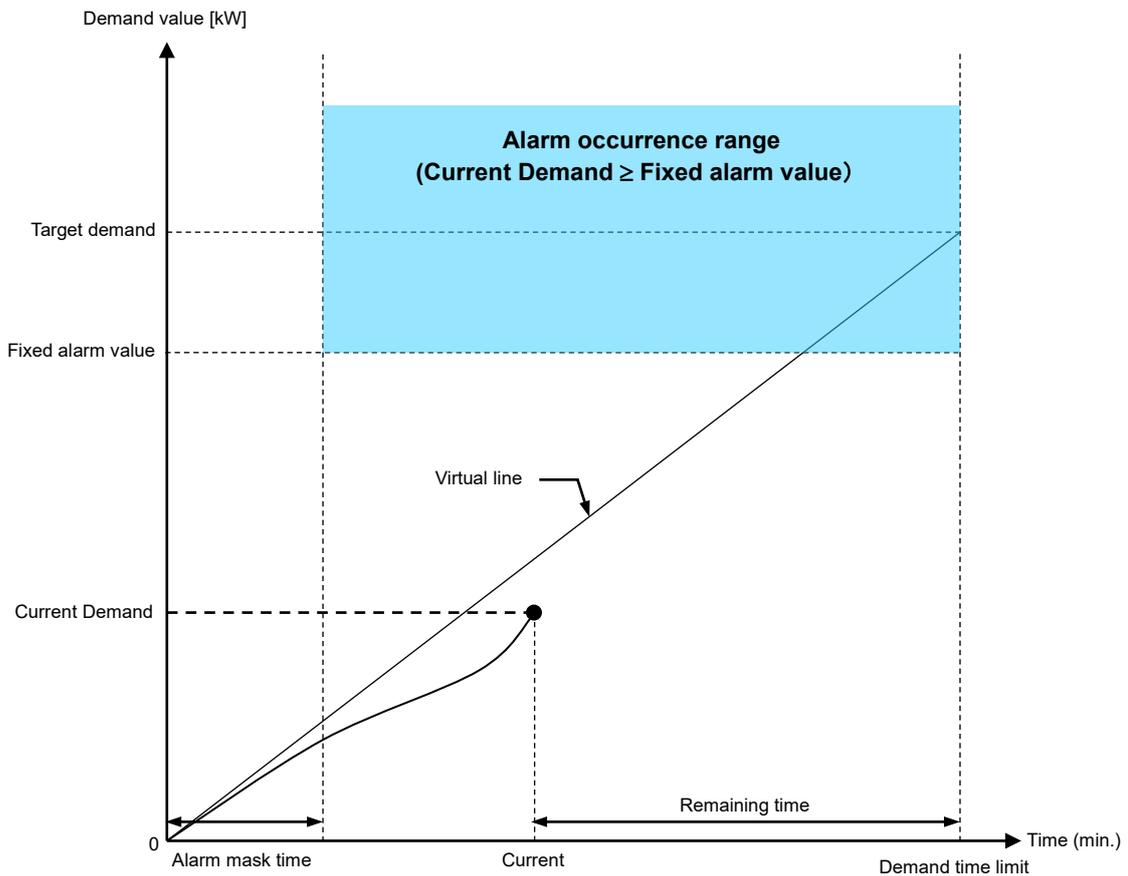

Fixed alarm

(2) Settings related to fixed alarm

Setting item		Setting range	Explanation
Alarm type		Limit alarm, fixed alarm	Sets whether to detect the limit alarm or fixed alarm.
Alarm mask time		For 15-minute time limit 0 to 15 (minutes) For 30-minute time limit 0 to 30 (minutes) For 60-minute time limit 0 to 60 (minutes)	Set the time that each alarm (Level 1 alarm, Level 2 alarm, limit alarm, fixed alarm) is not output after the demand time limit starts.
All day	Fixed alarm value	0.0 to 99999.9 kW	Sets the threshold value for generating the fixed alarm. When alarm type = 2 (fixed alarm), the fixed alarm value occurs if the current demand exceeds the fixed alarm value.
Time zone 1	Fixed alarm value	0.0 to 99999.9 kW	
⋮	⋮	⋮	
Time zone 10	Fixed alarm value	0.0 to 99999.9 kW	

4.3.3. Demand Control Function

The control outputs(loads) are shut off or turned on according to the control method settings. The control output subject to the shut off/turn on control are the control outputs set in the order of priority 1 to 12.

When a Level 2 alarm (or Level 1 alarm) occurs, the corresponding control output is shut off or turned on.

The order for shutting off and turning on, and the conditions for turning on differ according to the control method.

No.	Control method	Outline of operation
1	Cyclic - Reclosing	Each control output is shut off and turned on in order so that only a specific control output is not shut off. At the end of demand time limit, the control output currently shut off will be turned on at 5-second intervals in the order of higher priority.
2	Cyclic - Reclosing after Demand time limit	Each control output is shut off in order so that only a specific control output is not shut off. The shut off control output does not turn on until the end of demand time limit. At the end of demand time limit, the control output currently shut off will be turned on at 5-second intervals in the order of higher priority.
3	Cyclic - Reclosing after Reclosing interval	Each control output is shut off in order so that a specific control output is not shut off. However, control output will be turned on forcibly after a lapse of the reclosing time(has been set). It will be turned on independently of the end of the demand time limit. It will be shut off in the order of higher priority.
4	Priority order - Reclosing	The control outputs are shut off in order of highest priority. It will be shut off in the order of higher priority. It will be turned on in the order of lower priority. At the end of demand time limit, the control output currently shut off will be turned on at 5-second intervals in the order of lower priority.
5	Priority order - Reclosing after Demand time limit	The control outputs are shut off in order of highest priority. The shut off control output does not turn on until the end of demand time limit. It will be shut off in the order of higher priority. At the end of demand time limit, the control output currently shut off will be turned on at 5-second intervals in the order of lower priority.
6	Priority cyclic - Reclosing	The control outputs are shut off in order of highest priority and are turned on from the control output with longest shut off time. It will be shut off in the order of higher priority. It will be turn on in the long order of shut off time. Following, shut off in priority order, and turn on in the long order of shut off time. At the end of demand time limit, the control output currently shut off will be turned on in the long order of shut off time.


The setting values related to demand control are listed below.

Setting item		Setting range	Explanation
Control method		Cyclic - Reclosing Cyclic - Reclosing after Demand time limit Cyclic - Reclosing after Reclosing interval Priority order - Reclosing Priority order - Reclosing after Demand time limit Priority cyclic - Reclosing	Sets the method for turning the control output off and on.
Alarm mask time		For 15-minute time limit 0 to 15 (minutes) For 30-minute time limit 0 to 30 (minutes) For 60-minute time limit 0 to 60 (minutes)	Set the time that each alarm (Level 1 alarm, Level 2 alarm, limit alarm, fixed alarm) is not output after the demand time limit starts.
Reclosing interval		For 15-minute time limit 0 to 15 (minutes) For 30-minute time limit 0 to 30 (minutes) For 60-minute time limit 0 to 60 (minutes)	Cyclic - Reclosing after Reclosing interval control, sets the time before turning the control output off and on after it is shut off with the demand control.
Control output	Order of priority	Invalid, 1 to 12	Set the order of priority for shut off/turn on. The invalid control output is not shut off or turned on with demand control.
	Control load capacity	0.0 to 99999.9 kW	Set the load capacity of the control output to be shut off and turned on.

(1) Shut off control

Regardless of the control method setting, the corresponding control output is shut off with the following conditions. The operation varies according to the remaining time. Judgment of whether the shut off control conditions are satisfied or not is performed at a 10-second interval.

Range	Remaining time	Operation	
		Level 1 alarm occurring	Level 2 alarm occurring
Control mask	Demand time limit setting value (min.) Demand time limit setting value (min.) – Alarm mask time	Shut off prohibited	Shut off prohibited
Normal control	Less than (demand time limit setting value (min.) – Alarm mask time) 5 minutes		1 control output shut off (Shut off interval 30 sec. or longer)
Emergency control	Less than 5 minutes 30 seconds		Multiple control numbers simultaneously shut off (Shut off interval 30 sec. or longer)
	Less than 30 seconds 10 seconds	1 control output shut off (Shut off interval 10 sec. or longer)	Multiple control numbers simultaneously shut off (Shut off interval 10 sec. or longer)
Control prohibit	Less than 10 seconds	Shut off prohibited	Shut off prohibited

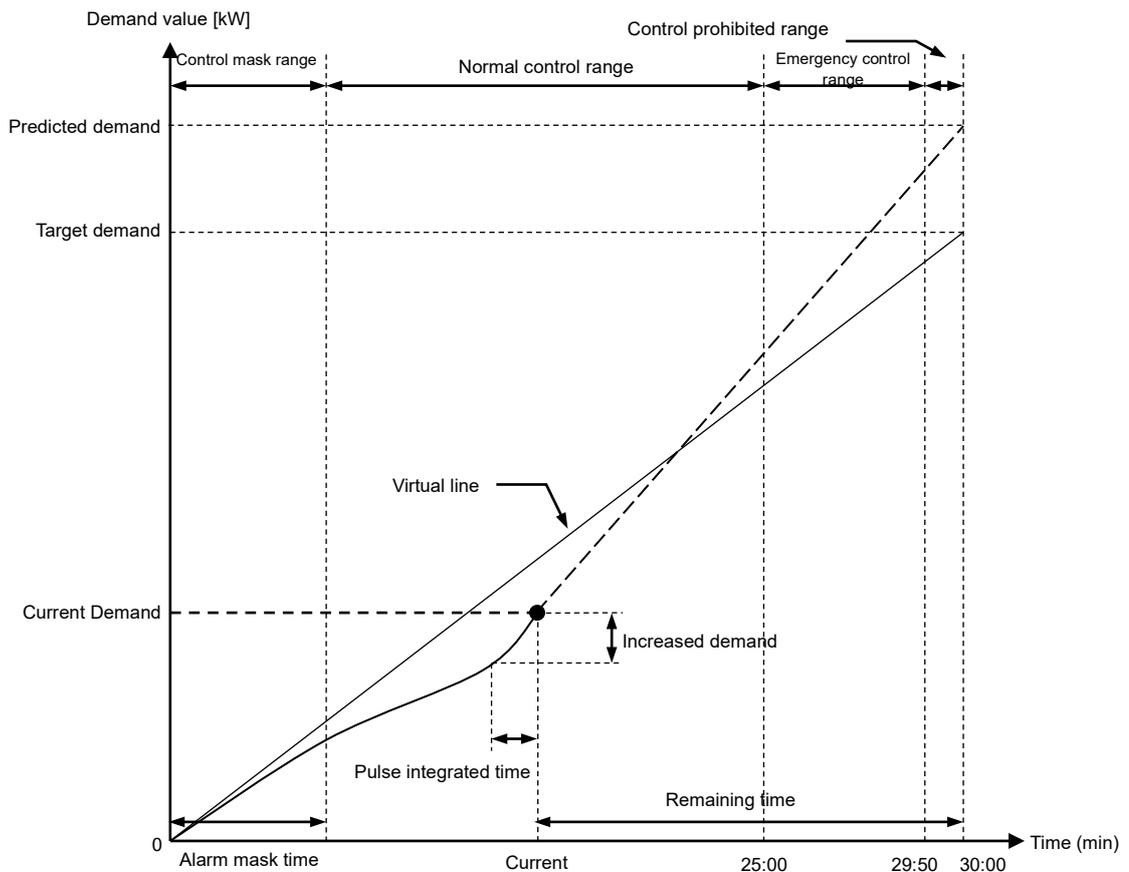

Example of 30-minute demand degree

[1] Control mask range

Within the alarm mask time, the control output is not shut off regardless of whether a Level 1 alarm or Level 2 alarm is occurring.

[2] Normal control range

The control output is shut off when the Level 2 alarm is occurring. One control output is shut off with one shut off control. (Note that control outputs with the same priority are shut off simultaneously.)

When shut off control is carried out in succession, the next shut off control is performed at least 30 seconds after the previous shut off control.

* Even during the normal control range, the shut off control is not performed until the shut off within the on control time limit on range is completed.

[3] Emergency control range

Multiple (one or more) control outputs are simultaneously shut off while the Level 2 alarm is occurring. When shut off control is carried out in succession, the next shut off control is performed at least 30 seconds after the previous shut off control.

When the remaining time is less than 30 seconds, the next shut off control is performed 10 seconds or more after the previous shut off control. Even if the Level 2 alarm is not occurring, shut off control is performed when the Level 1 alarm is occurring. If the control No. is shut off due to a Level 1 alarm occurrence, one control No. is shut off with one shut off control.

When shutting off multiple control outputs, the control outputs for which the "control load capacity scheduled for shut off" is the maximum (total of control load capacities scheduled for shut off is close to adjusted electrical power) are simultaneously shut off within the range that "- (adjusted electrical power) \geq total of control load capacities scheduled for shut off) are simultaneously shut off.

<Example>

Adjusted power= -432 (kW)

Next control output (load 1) scheduled for shut off Load capacity = 150 (kW)

Next control output (load 2) scheduled for shut off Load capacity = 200 (kW)

Next control output (load 3) scheduled for shut off Load capacity = 100 (kW)

At this time, "- (150 + 200 + 100) < -432 < - (150 + 200)" is established, and control output (load 1) and control output (load 2) are shut off simultaneously.

[4] Control prohibited range

Shut off control is not performed when the remaining time is less than 10 seconds.


(2) On control

(a) Reclosing

When the control method is set to "Cyclic - Reclosing", "Priority order - Reclosing" or "Priority cyclic - Reclosing", the corresponding control output is turned on with the following conditions.

Judgment of whether the turn on control conditions are satisfied or not is performed at a 10-second interval in the control range. In the time limit on range, the turn on operation starts unconditionally at the start of the time limit.

Range	Remaining time	Operation
Time limit on	(Demand time limit switch) Until all shut off control outputs are turned on	Conditions: None Operation: All shut off control outputs are turned on (Turn on interval 5 sec.)*
Normal control	Less than (time that all shut off control outputs have completed turn on) 10 seconds	Conditions: Adjusted electrical power \geq Control load capacity scheduled for turn on $\times 2$ Operation: 1 control output on (Turn on interval 30 sec. or more)
Control prohibit	Less than 10 seconds	Conditions: None Operation: Turn on prohibited

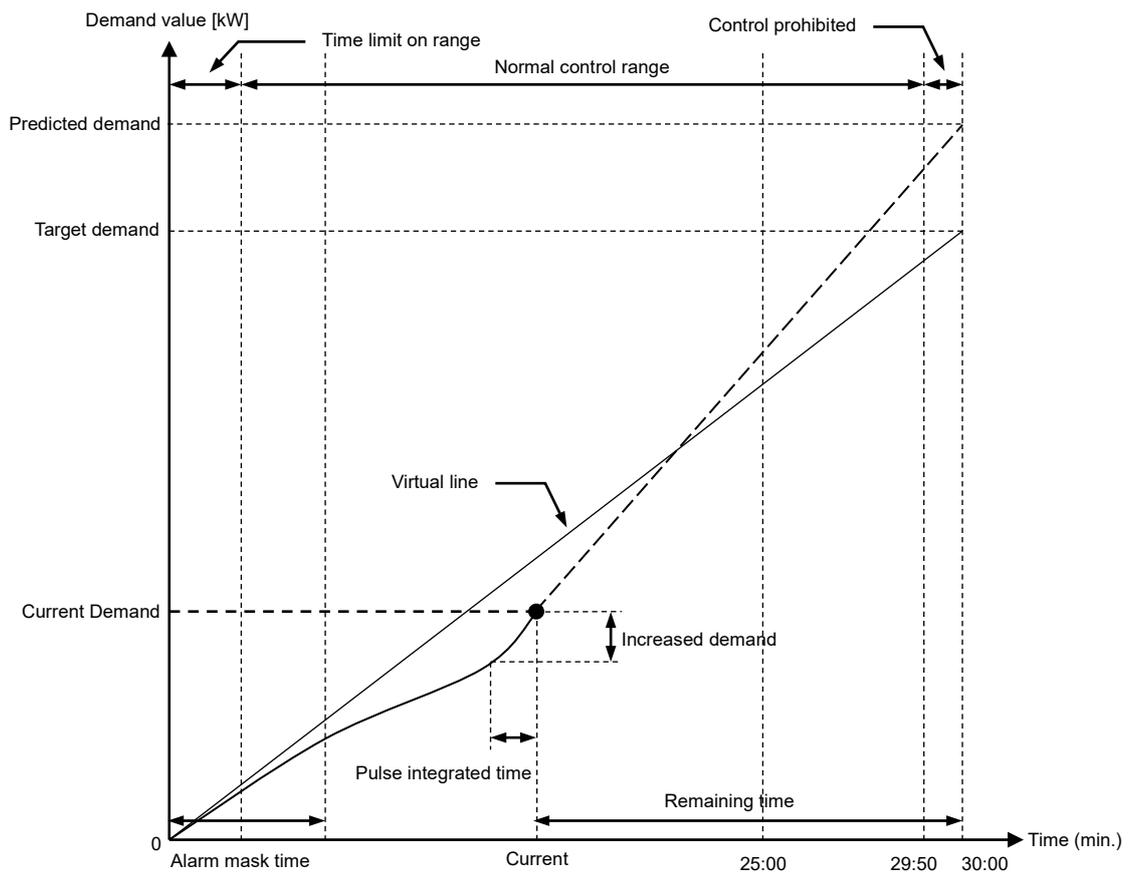

Example of 30-minute demand degree

[1] Time limit on range

The control output shut off at when the demand time limit switches is unconditionally turned on. Turn on is performed at a 5 second interval. The control output turned on first is turned on when the time limit switches.

[2] Normal control range

The control output is turned on when the following expression is satisfied. One control output is turned on with one on control. (Note that control outputs with the same priority are turned on simultaneously.)

Adjusted electrical power \geq control load capacity scheduled for on $\times 2$

When on control is carried out in succession, the next on control is performed at least 30 seconds after the previous on control.


[3] Control prohibited range

On control is not performed when the remaining time is less than 10 seconds.

(b) Reclosing after Demand time limit

When the control method is "Cyclic - Reclosing after Demand time limit" or "Priority order – Reclosing after demand time limit", the corresponding control output is turned on with the following conditions. In the time delay on range, the on operation starts conditionally when the time limit starts.

Range	Remaining time	Operation
Time limit on	(Demand time limit switch) Until all shut off control outputs are turned on	Conditions: None Operation: All shut off control outputs are turned on (Turn on interval 5 sec.)*
Control prohibit	Less than (time that all shut off control outputs have completed turn on)	Conditions: None Operation: Turn on prohibited

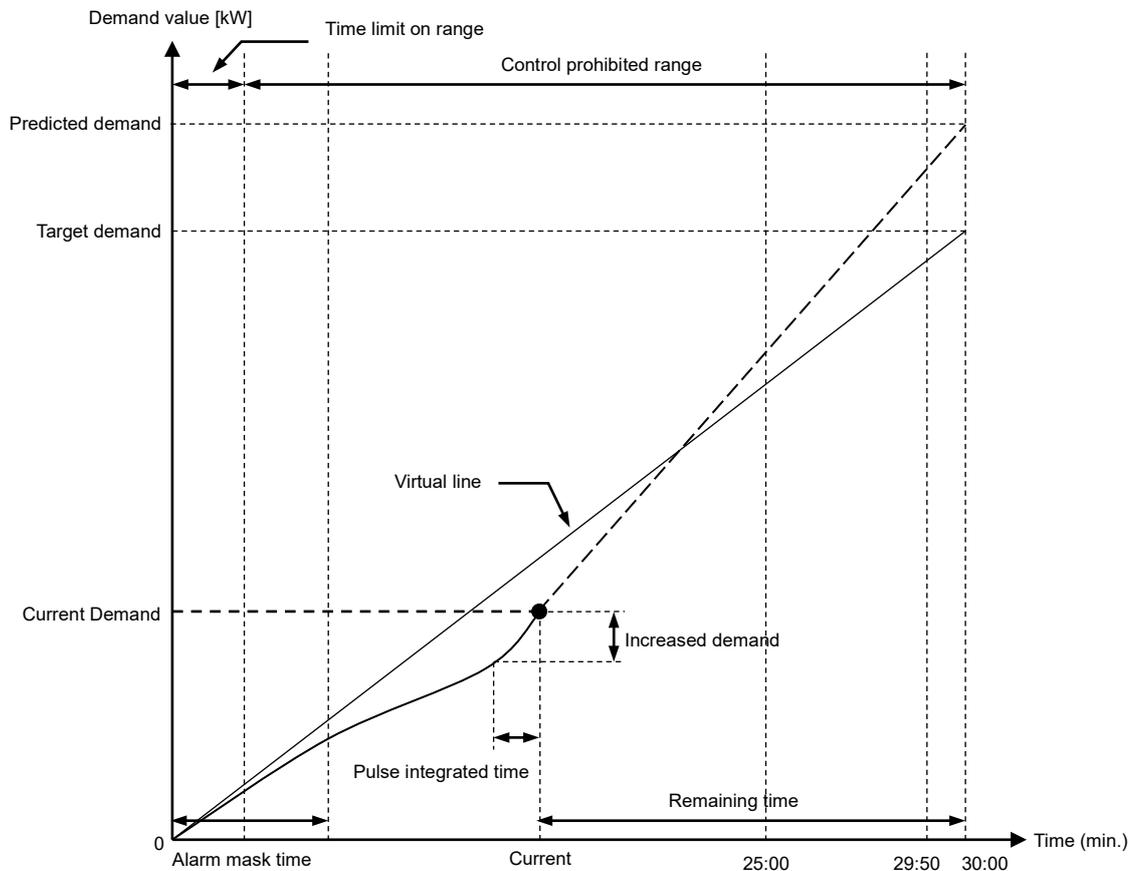

Example of 30-minute demand degree


- [1] Time limit on range
The shut off control output is unconditionally turned on when the demand time limit starts. The control output turned on first turns on when the time limit switches.
- [2] Control prohibited range
On control is not performed after the time limit on is completed.

(c) Reclosing after Reclosing time

When the control method is set to "Cyclic – Reclosing after Reclosing interval", the corresponding control output is turned on with the following conditions.

Range	Remaining time	Operation
Control	– (Turns on at conditions on right regardless of remaining time)	Conditions: Set time has passed after shut off (*) Operation: On (Same interval as shut off)

*: The set time is the same as the "Reclosing interval" setting value.

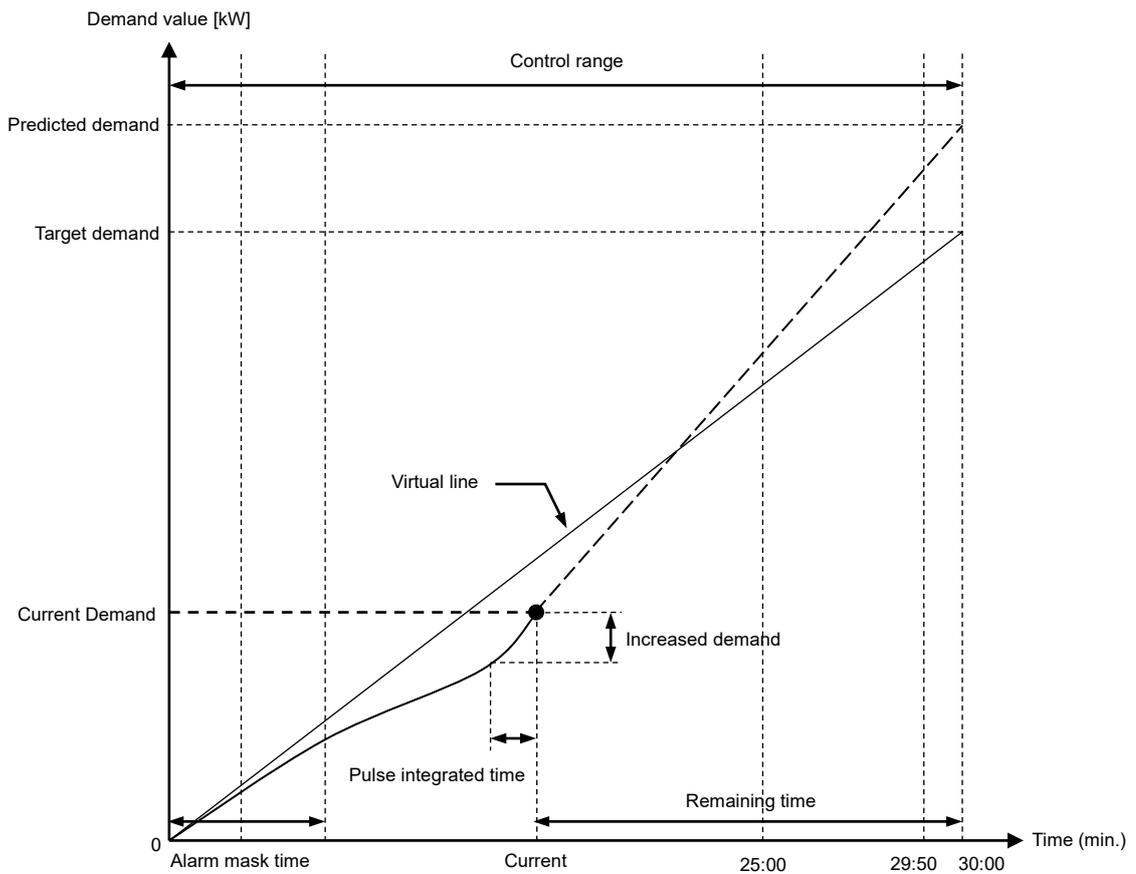

Example of 30-minute demand degree

[1] Control range

The control output is turned on after a set time has passed after shut off. The time between shut off and turn on can be set with the off/on time.

One control output is turned on with one on control (note that control outputs shut off simultaneously are turned on simultaneously).

(3) Details of control methods

(a) Cyclic - Reclosing control

Each control output is shut off and turned on in order so that only a specific control output is not shut off.

A control output that has been manually controlled even once is excluded from the demand control target within that time limit.

Shut off	Current time limit shut off control (Current demand time limit)	The control numbers are shut off in the order of priority. (Shut off in the order of 1→2→3→ . . . →11→12→1→2 . . .) When all control outputs from the oldest order of priority have been shut off, the system returns to the newest order of priority number, and shuts off the control outputs.
	Next time limit shut off control (Next demand time limit)	The next demand time limit is also shut off following the order of priority numbers. (At the next demand time limit, the shut off starts from the control output in the order of priority following the previous time limit.) * If the next order of priority number is manually controlled at the previous demand time limit, the shut off starts from the next control output in the order.
	Shut off control when the order of priority number setting is changed	If the priority setting is changed, shut off starts from the newest order of priority number at the demand time limit following the setting change.
Turned on	Current time limit turn on control (Current demand time limit)	Of the control outputs that are shut off, the control outputs are turned on from the number with the longest shut off time. If the control outputs have the same shut off time, they are turned on in the order of priority. (Turned on in the order of 1→2→3→ . . . →11→12→1→2 . . .)
	Next time limit turn on control (Next demand time limit)	When the next demand time limit starts, the control outputs are all turned on in order of longest shut off time including the control numbers that have been controlled manually. If the control outputs have the same shut off time, they are turned on in the order of priority. The control output shut off at the next demand time limit is turned on simultaneously as the "current time limit on control".
	Turn on control when the order of priority number setting is changed	If the order of priority outputs have been changed from 1-12 to invalid, the changed control numbers are all turned on when the demand time limit switches. If the order of priority numbers have been changed (including when changed from 1-12 to invalid), or when the control method has been changed to off/on - cyclic control, all control outputs are turned on from the newest order of priority number when the demand time limit switches.

[1] Example of normal operation (Values in parentheses indicate the priority level numbers)

The control outputs are shut off in the order of priority number (1→2→3→...→9), and are turned on again in the order of longest shut off time (1→2→3→4). If the control outputs have the same order of priority, they are shut off simultaneously and turned on simultaneously. In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control numbers that are shut off at the end of the demand time limit are turned on in order of the longest shut off time (6→7→8→9). These are turned on at a five-second interval. If the control outputs have the same shut off time, they are turned on in the order of the priority (8→9).

At the next demand time limit, the control numbers are turned off in the order of priority number (10→12) following those shut off at the previous time limit. After control No. 12, the newest control output in the order of priority is returned to and shut off (1→2→...).

Control output	Order of priority	Previous time limit					Current time limit									
		25	20	15	10	5	25	20	15	10	5					
4	1	[Timeline bar]														
3	2	[Timeline bar] OFF														
2	3	[Timeline bar]														
1	4	[Timeline bar]														
5	4	[Timeline bar]														
6	6	ON					OFF					ON				
7	7	[Timeline bar]														
8	8	[Timeline bar]														
11	9	[Timeline bar]														
9	10	[Timeline bar]														
12	Invalid	[Timeline bar]														
10	12	[Timeline bar]														

Example of operation for off/on - cyclic control

[2] Example of operation during manual control (Values in parentheses indicate the priority numbers)

The control outputs are shut off in the order of priority number (1→2→3→...→7). The order of priority number 8 control number is manually controlled, and thus is excluded from the demand control target. The next order of priority number (9) is shut off. With on control, the control outputs are turned on in order of longest shut off time (1→2→3→4).

When the demand time limit ends (the next demand time limit starts), the control numbers, including the manual shut off control number, are turned on in the order of the longest shut off time (8→6→12→7→9). These are turned on at a five-second interval.

At the next demand time limit, the control numbers are turned off in the order of priority number (10→12) following those shut off at the previous time limit. After control No. 12, the newest control number in the order of priority is returned to and shut off (1→2→...).

Control output	Order of priority	Previous time limit					Current time limit									
		25	20	15	10	5	25	20	15	10	5					
4	1	[Timeline bar]														
3	2	[Timeline bar] OFF														
2	3	[Timeline bar]														
1	4	[Timeline bar]														
5	4	[Timeline bar]														
6	6	ON					OFF					ON				
7	7	[Timeline bar]														
8	8	Manual shut off														
11	9	[Timeline bar]														
9	10	[Timeline bar]														
12	Invalid	[Timeline bar]														
10	12	Manual shut off														

Example of operation during manual control

(b) Cyclic – Reclosing after Demand time limit control

Each control output is shut off and turned on in order so that only a specific control output is not shut off.

A control output that has been shut off cannot be turned on again until the demand time limit switches.

A control output that has been manually controlled even once is excluded from the demand control target within that time limit.

Shut off	Current time limit shut off control (Current demand time limit)	The control numbers are shut off in the order of priority. (Shut off in the order of 1→2→3→ . . . →11→12→1→2 . . .) When all control numbers from the oldest order of priority have been shut off, the system returns to the newest order of priority output, and shuts off the control outputs.
	Next time limit shut off control (Next demand time limit)	The next demand time limit is also shut off following the order of priority numbers. (At the next demand time limit, the shut off starts from the control output in the order of priority following the previous time limit.) * If the next order of priority output is manually controlled at the previous demand time limit, the shut off starts from the next control output in the order.
	Shut off control when the order of priority number setting is changed	If the priority setting is changed, shut off starts from the newest order of priority number at the demand time limit following the setting change.
Turned on	Current time limit turn on control (Current demand time limit)	Cannot be turned on until the demand time limit ends.
	Next time limit turn on control (Next demand time limit)	When the next demand time limit starts, the control outputs are all turned on in order of longest shut off time including the control numbers that have been controlled manually. If the control outputs have the same shut off time, they are turned on in the order of priority. The control output shut off at the next demand time limit is turned on simultaneously as the “current time limit on control”.
	Turn on control when the order of priority number setting is changed	If the order of priority numbers have been changed from 1-12 to invalid, the changed control outputs are all turned on when the demand time limit switches. If the order of priority outputs have been changed (including when changed from 1-12 to invalid), or when the control method has been changed to time limit on - cyclic control, all control outputs are turned on from the newest order of priority number when the demand time limit switches.

[1] Example of normal operation (Values in parentheses indicate the priority level numbers)

The control numbers are shut off in the order of priority output (1→2→3→...→9). Control numbers with the same order of priority are shut off simultaneously. These cannot be turned on within the demand time limit in which they were shut off. In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control outputs that are shut off at the end of the demand time limit are turned on in order of the longest shut off time (1→2→3→...→9). These are turned on at a five-second interval. If the control outputs have the same shut off time, they are turned on in order of the priority (8→9).

At the next demand time limit, the control outputs are turned off in the order of priority number (10→12) following those shut off at the previous time limit. After control No. 12, the newest control output in the order of priority is returned to and shut off (1→2→...).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
3	2	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
2	3	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
1	4	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
5	4	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
6	6	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
7	7	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
8	8	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
11	9	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
9	10	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
12	Invalid	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
10	12	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON

Example of operation for time limit on - cyclic control

[2] Example of operation during manual control (Values in parentheses indicate the priority numbers)

The control outputs are shut off in the order of the priority number (1→2→3→...→7). The order of priority number 8 control output is manually controlled, and thus is excluded from the demand control target. The next order of priority number (9) is shut off. This cannot be turned on within the demand time limit in which it was shut off.

When the demand time limit ends (the next demand time limit starts), the control outputs, including the manual shut off control output, are turned on in order of the longest shut off time (1→2→8→...→9). These are turned on at a five-second interval.

At the next demand time limit, the control outputs are turned off in the order of priority number (10→12) following those shut off at the previous time limit. After control No. 12, the newest control output in the order of priority is returned to and shut off (1→2→...).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
3	2	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
2	3	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
1	4	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
5	4	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
6	6	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
7	7	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
8	8	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	Manual shut off
11	9	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
9	10	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
12	Invalid	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
10	12	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	Manual shut off

Example of operation during manual control

(c) Cyclic – Reclosing after Reclosing interval control

Each control output is shut off and turned on in order so that only a specific control output is not shut off.

A control output that has been shut off is forcibly turned on again when the off/on time passes.

A control output that has been manually controlled even once is excluded from the demand control target within that time limit.


Shut off	Current time limit shut off control (Current demand time limit)	The control numbers are shut off after a set time in the order of priority. (Shut off in the order of 1→2→3→ . . . →11→12→1→2 . . .) When all control outputs from the oldest order of priority have been shut off, the system returns to the newest order of priority number, and shuts off the control outputs.
	Next time limit shut off control (Next demand time limit)	The next demand time limit is also shut off after a set time following the order of priority numbers. (At the next demand time limit, the shut off starts from the control output in the order of priority following the previous time limit.) * If the next order of priority number is manually controlled at the previous demand time limit, the shut off starts after a set time from the next control output in the order.
	Shut off control when the order of priority number setting is changed	If the priority setting is changed, shut off starts after a set time from the newest order of priority number at the demand time limit following the setting change.
Turned on	Current time limit turn on control (Current demand time limit)	The control number is forcibly turned on again after the shut off time has surpassed the preset off/on time.
	Next time limit turn on control (Next demand time limit)	Even when the next demand time limit starts, the control output shut off from the previous time limit is turned on after a set time from the shut off. However, for the control output that was manually controlled during the past time limit, all control outputs are turned on again when the next demand time limit starts. Control outputs with the same shut off time are shut off in the order of priority. The control output shut off at the next demand time limit is turned on simultaneously as the "current time limit on control".
	Turn on control when the order of priority number setting is changed	If the order of priority numbers have been changed from 1-12 to invalid, the changed control outputs are all turned on when the demand time limit switches. If the order of priority numbers have been changed (including when changed from 1-12 to invalid), or when the control method has been changed to Turn on after a set time - cyclic control, all control outputs are turned on from the newest order of priority number when the demand time limit switches.

[1] Example of normal operation (Values in parentheses indicate the priority level numbers)

The control outputs are shut off in the order of priority level (1→2→3→...→9). Control outputs with the same priority level are shut off simultaneously. The shut off control output is turned on after a set time (off/on time) has passed after shut off. In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

Even if the demand time limit ends (the next demand time limit starts), the control output that are shut off from the previous time limit is turned on after a set time has passed from the shut off.

At the next demand time limit, the control outputs are turned off in the order of priority number (10→12) following those shut off at the previous time limit. After control No. 12, the newest control output in the order of priority is returned to and shut off (1→2→...).

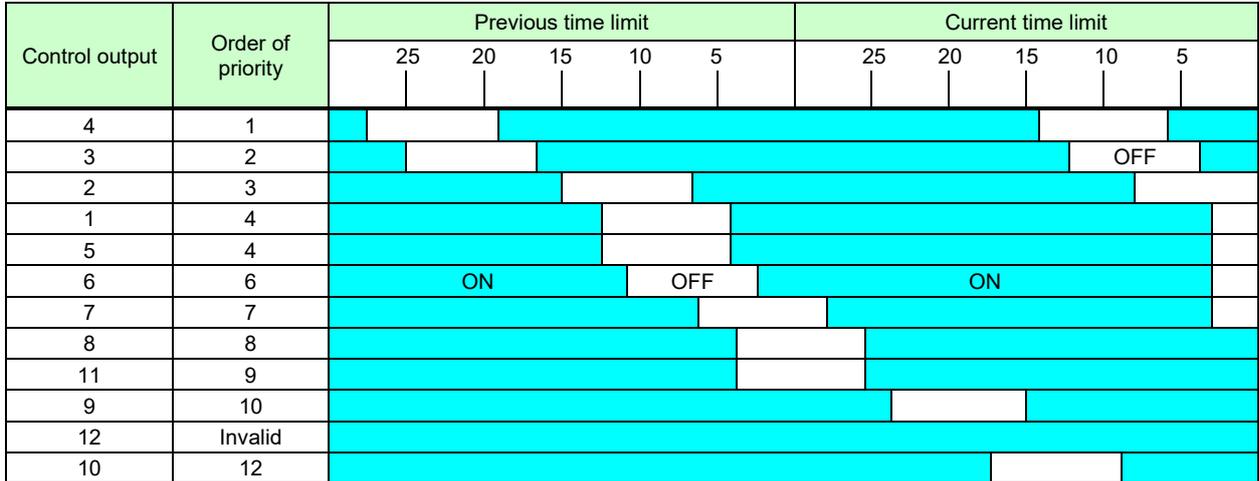


Example of operation for off/on after set time - cyclic control

[2] Example of operation during manual control (Values in parentheses indicate the priority numbers)

The control outputs are shut off in the order of the priority (1→2→3→...→7). The order of priority number 8 control output is manually controlled, and thus is excluded from the demand control target. The next order of priority number (9) is shut off. The shut off control output is turned on after a set time (off/on time) has passed after shut off.

When the next demand time limit ends (the next demand time limit starts), the control outputs manually shut off at the end of the demand time limit are turned on in order of longest shut off time (8→12). These are turned on at a five-second interval.

At the next demand time limit, the control outputs are turned off in the order of priority number (10→12) following those shut off at the previous time limit. After control No. 12, the newest control output in the order of priority is returned to and shut off (1→2→...).

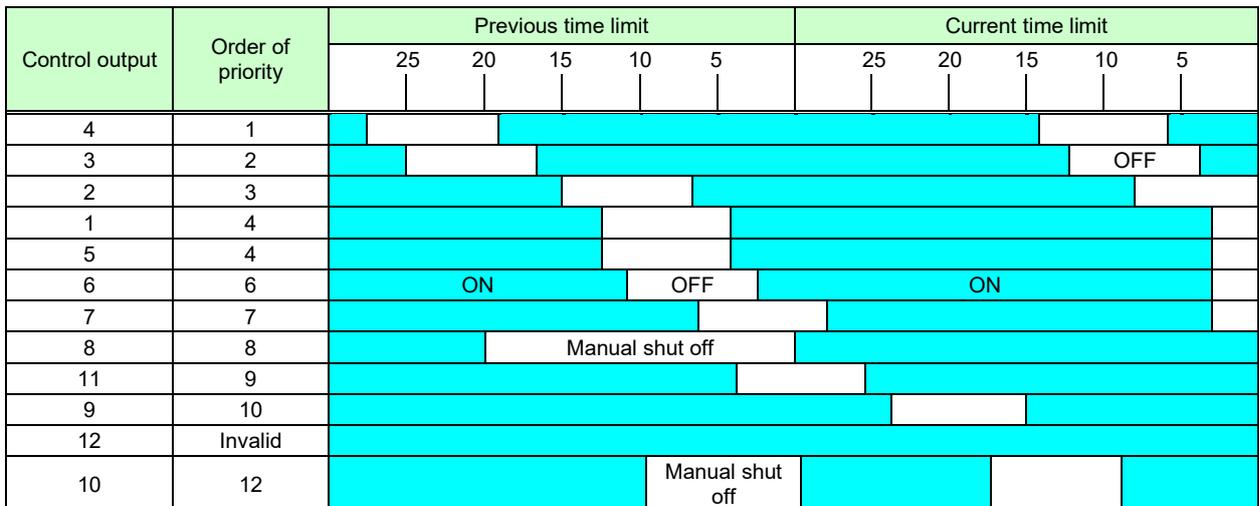

Example of operation during manual control

(d) Priority order - Reclosing control

The control outputs are shut off from the order of highest priority, and are turned on from the control output with the order of lowest priority.

A control No. that has been manually controlled even once is excluded from the demand control target within that time limit.

Shut off	Current time limit shut off control (Current demand time limit)	Shut off starts with the control output having the highest order of priority among those that are on.
	Next time limit shut off control (Next demand time limit)	Even at the next demand time limit, shut off starts with the control output having the highest order of priority among those that are on.
	Shut off control when the order of priority number setting is changed	Even when the order of priority has been changed, at the next demand time limit after the changes, shut off starts with the control output having the highest order of priority among those that are on.
Turned on	Current time limit turn on control (Current demand time limit)	Turning on starts with the control output having the lowest order of priority among those that are shut off.
	Next time limit turn on control (Next demand time limit)	When the next demand time limit starts, all control outputs, including the manually controlled control output, are turned on starting with the control output having the lowest order of priority. The control output shut off at the next demand time limit is turned on simultaneously as the "current time limit on control".
	Turn on control when the order of priority number setting is changed	If the order of priority numbers have been changed from 1-12 to invalid, the changed control outputs are all turned on when the demand time limit switches. If the order of priority has been changed (including 1-12 to invalid), or when the control method has been changed to off/on – order of priority control, all control outputs are turned on from the lowest order of priority number when the demand time limit switches.

[1] Example of normal operation (Values in parentheses indicate the priority level numbers)

The control outputs that are on are turned off in the order of highest priority (1→2→3→...→7). With on control, the control outputs that are off are turned on in the order of lowest priority (7→6→4). If the control outputs have the same order of priority, they are shut off simultaneously and turned on simultaneously. In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control outputs that are shut off at the end of the demand time limit are turned on in the order of lowest priority (12→10→9→8→...→1). These are turned on at a five-second interval. The control outputs with same order of priority are turned on simultaneously.

At the next demand time limit, the control outputs are shut off in the order of highest priority (1→2→3...).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
3	2	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
2	3	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
1	4	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON
5	4	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON
6	6	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON
7	7	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON
8	8	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
11	9	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
9	10	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
12	Invalid	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
10	12	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON

Example of operation for off/on - order of priority control

[2] Example of operation during manual control (Values in parentheses indicate the priority numbers)

The control outputs that are on are turned off in the order of highest priority (1→2→3→4). Control output 5 (order of priority 4) is manually controlled so it is excluded from the demand control target. The next priority (6→7) is shut off. With on control, the control outputs that are shut off are turned on in the order of lowest priority (7→6→4). In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control outputs, including the manual shut off control output, are turned on in the order of lowest priority (12→10→9→...→1). These are turned on at a five-second interval.

At the next demand time limit, the control outputs are shut off in the order of highest priority (1→2→3...).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
3	2	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
2	3	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
1	4	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON
5	4	ON	OFF	OFF	OFF	OFF	Manual shut off	Manual shut off	Manual shut off	Manual shut off	Manual shut off
6	6	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON
7	7	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON
8	8	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
11	9	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
9	10	ON	OFF	OFF	OFF	OFF	Manual shut off	Manual shut off	Manual shut off	Manual shut off	Manual shut off
12	Invalid	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
10	12	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON

Example of operation during manual shut off control

(e) Priority order – Reclosing after Demand time limit control

The control outputs are shut off from the order of highest priority.

A control output that has been shut off cannot be turned on until the demand time limit ends (starts).

A control output that has been manually controlled even once is excluded from the demand control target within that time limit.

Shut off	Current time limit shut off control (Current demand time limit)	Shut off starts with the control output having the highest priority among those that are on.
	Next time limit shut off control (Next demand time limit)	Even at the next demand time limit, shut off starts with the control output having the highest order of priority among those that are on.
	Shut off control when the order of priority number setting is changed	Even when the order of priority has been changed, at the next demand time limit after the changes, shut off starts with the control output having the highest order of priority among those that are on.
Turned on	Current time limit turn on control (Current demand time limit)	Cannot be turned on until the demand time limit ends.
	Next time limit turn on control (Next demand time limit)	When the next demand time limit starts, all control outputs, including the manually controlled control number, are turned on starting with the control output having the lowest order of priority. The control output shut off at the next demand time limit is turned on simultaneously as the “current time limit on control”.
	Turn on control when the order of priority number setting is changed	If the order of priority numbers have been changed from 1-12 to invalid, the changed control outputs are all turned on when the demand time limit switches. If the order of priority has been changed (including 1-12 to invalid), or when the control method has been changed to time limit on - priority control, all control outputs are turned on from the lowest order of priority number when the demand time limit switches.

[1] Example of normal operation (Values in parentheses indicate the priority level numbers)

The control outputs that are on are turned off in the order of highest priority (1→2→3→...→7). If the control outputs have the same order of priority, they are shut off simultaneously. These cannot be turned on within the demand time limit that they were shut off. In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control outputs that are shut off at the end of the demand time limit are turned on in the order of lowest priority (12→10→9→8→...→1). These are turned on at a five-second interval. The control outputs with same order of priority are turned on simultaneously.

At the next demand time limit, the control outputs are shut off in the order of highest priority (1→2→3...).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON					ON				
3	2	ON					ON				OFF
2	3	ON					ON				
1	4	ON					ON				
5	4	ON					ON				
6	6	ON				OFF	ON				
7	7	ON					ON				
8	8	ON					ON				
11	9	ON					ON				
9	10	ON					ON				
12	Invalid	ON					ON				
10	12	ON					ON				

Example of operation for time limit on - order of priority control

[2] Example of operation during manual control (Values in parentheses indicate the priority numbers)

The control outputs that are on are turned off in the order of highest priority (1→2→3→4). Control output 5 (order of priority 4) is manually controlled so it is excluded from the demand control target. The next priority (6→7→8→9→12) is shut off. These cannot be turned on within the demand time limit that they were shut off. In this example, the order of priority 8 and 9 are simultaneously shut off with the multiple control output simultaneous shut off.

When the demand time limit ends (the next demand time limit starts), the control outputs, including the manual shut off control output, are turned on in the order of lowest priority (12→10→9→...→1). These are turned on at a five-second interval.

At the next demand time limit, the control outputs are shut off in the order of highest priority (1→2→3...).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON					ON				
3	2	ON					ON				OFF
2	3	ON					ON				
1	4	ON					ON				
5	4	ON				Manual shut off	ON				
6	6	ON				OFF	ON				
7	7	ON					ON				
8	8	ON					ON				
11	9	ON					ON				
9	10	ON				Manual shut off	ON				
12	Invalid	ON					ON				
10	12	ON					ON				

Example of operation during manual control

(f) Priority cyclic - Reclosing control

The control outputs are shut off from the order of highest priority, and are turned on again from the control output with the longest shut off time.

A control output that has been manually controlled even once is excluded from the demand control target within that time limit.

Shut off	Current time limit shut off control (Current demand time limit)	Shut off starts with the control output having the highest priority among those that are on.
	Next time limit shut off control (Next demand time limit)	Even at the next demand time limit, shut off starts with the control output having the highest order of priority among those that are on.
	Shut off control when the order of priority number setting is changed	Even when the order of priority has been changed, at the next demand time limit after the changes, shut off starts with the control output having the highest order of priority among those that are on.
Turned on	Current time limit turn on control (Current demand time limit)	The control outputs that are shut off are turned on in order from the one with the longest shut off time. Control outputs with the same shut off time are turned on from the one with the highest order of priority.
	Next time limit turn on control (Next demand time limit)	When the next demand time limit starts, the control outputs, including the manually controlled control number, are turned on in order of longest shut off time. Control outputs with the same shut off time are turned on from the one with the highest order of priority. The control output shut off at the next demand time limit is turned on simultaneously as the "current time limit on control".
	Turn on control when the order of priority number setting is changed	If the order of priority numbers have been changed from 1-12 to invalid, the changed control outputs are all turned on when the demand time limit switches. If the order of priority has been changed (including 1-12 to invalid), or when the control method has been changed to off/on - priority cyclic control, all control outputs are turned on from the highest order of priority number when the demand time limit switches.

[1] Example of normal operation (Values in parentheses indicate the priority level numbers)

The control outputs that are on are shut off in the order of highest priority (1→2→3), and are turned on in the order of longest shut off time (1→2). Then, the control outputs that are on are shut off in the order of highest priority (1→2→4→6→7), and are turned on in the order of longest shut off (3→1→2). In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control outputs shut off at the end of the demand time limit are turned on in order of longest shut off time (6→7→1→2→3→8→9→10→12). These are turned on at a five-second interval. The control outputs with the same shut off time are turned on in the order of highest priority (8→9). The control outputs with same order of priority are turned on simultaneously.

At the next demand time limit, the control outputs are shut off in the order of highest priority (1→2→3···).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
3	2	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF
2	3	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
1	4	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
5	4	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
6	6	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
7	7	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
8	8	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
11	9	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
9	10	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
12	Invalid	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
10	12	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON

Example of operation for Off/on - priority cyclic control

[2] Example of operation during manual control (Values in parentheses indicate the priority numbers)

The control outputs that are on are shut off in the order of highest priority (1→2→3) and are turned on in the order of longest shut off time (1→2). Then, the control outputs that are on are shut off in the order of highest priority (1→2→4). Control No. 5 (order of priority 4) is manually controlled so it is excluded from the demand control target. The next priority (6→7) is shut off. In this example, priority 8 and 9 are shut off the multiple control output simultaneously at emergency control region.

When the demand time limit ends (the next demand time limit starts), the control outputs, including the manually shut off control output, are turned on in the order of longest shut off time (4→4→6→···→12). These are turned on at a five-second interval. The control outputs with same order of priority are turned on simultaneously.

At the next demand time limit, the control numbers are shut off in the order of highest priority (1→2→3···).

Control output	Order of priority	Previous time limit					Current time limit				
		25	20	15	10	5	25	20	15	10	5
4	1	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
3	2	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF
2	3	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
1	4	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
5	4	ON	Manual shut off	ON	OFF	ON	ON	ON	ON	ON	ON
6	6	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
7	7	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
8	8	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
11	9	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
9	10	ON	Manual shut off	ON	OFF	ON	ON	ON	ON	ON	ON
12	Invalid	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
10	12	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON

Example of operation for manual shut off control

4.3.4. Seasonal Time Zone Control Function

Time Zone Schedule Function

The current time zone 1 to time zone 10 is judged from the current date and time, and the system is run with the settings (target demand, fixed alarm value, base power) for the corresponding time zone. By setting the time zone setting, daily pattern setting and calendar setting beforehand, demand control that matches the seasons or date/time can be carried out.


<Example>

Time zone schedule for July 28, 2014, 21:00 to 21:30 (30-minute demand time limit)

In the following diagram, daily pattern 3 is set for the July 28, 2014 in the calendar settings. Thus, the system runs with pattern 3 on July 28, 2014.

21:00 to 21:30 is set to time zone 2 in the daily pattern, so the time zone 2 settings (target demand 300.0 kW, fixed alarm value 0.0 kW, base power 40.0 kW) are used during 21:00 to 21:30 on July 28, 2014.

<Image>

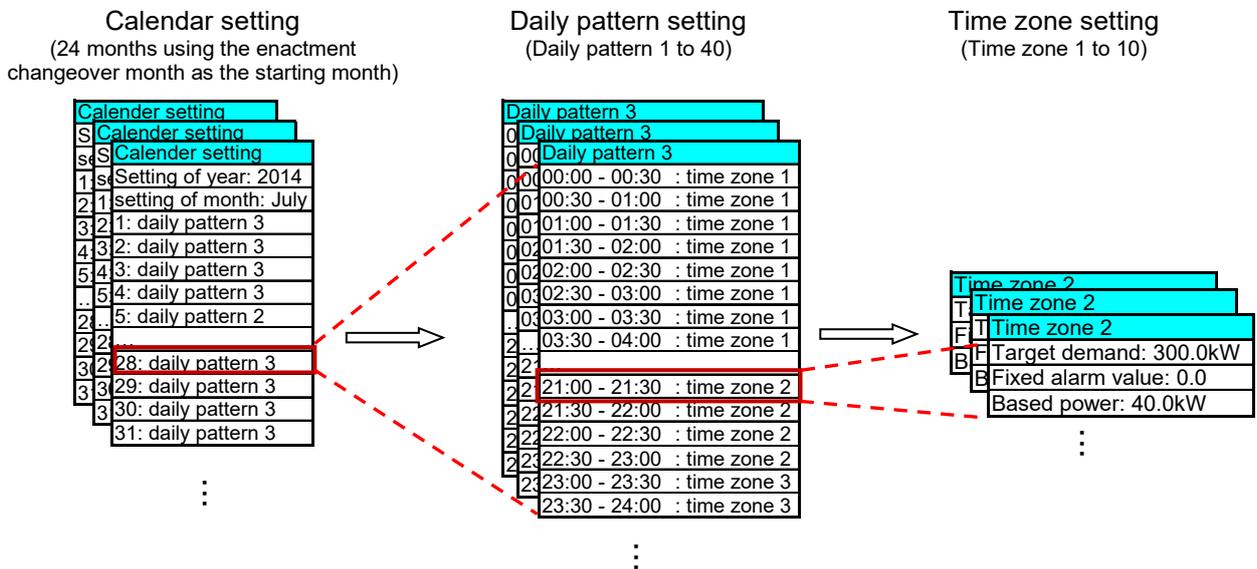

* Refer to "4.4.2 Demand alarm and control setting", and "4.4.3 "Demand calendar setting" for details on setting.

Remarks

- When not using the seasonal time zone control, one value can be set each for target demand, fixed alarm value and base power. The demand control control is carried out based on those setting values.

4.4. Configure the demand control setting

This section describes how to set for demand monitor and control.

4.4.1. Normal demand setting (setting of the instrument information)

This section describes the setting procedures for demand monitor and control.


Always read "4.3 Demand control and Control Section Specifications" thoroughly before setting, and set the function correctly.

Registering normal demand information

The following describes how to set normal demand information.

1 Displaying the [Normal] dialog box

Click the [Normal] button in the dialog box of project setting.

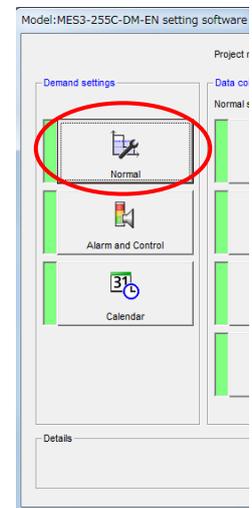

In the initial state, it displays the default value of each item.

Item	Content & Range
[VCT ratio]	Set up VCT ratio. Range 1 to 100000 Calculate by [VT(PT) ratio] x[CT ratio] and set up the VCT ratio. * example for the calculation of VCT ratio <VT(PT) ratio: 6600V/110V; CT ratio: 100/5A> $\text{VCTRatio} = \frac{6600}{110} \times \frac{100}{5} = 60 \times 20 = 1200$
[Pulse constant value]	Set up the energy pulse factor for the secondary side (input pulse) Before the setting, please read the user's manual first. Range 1 to 50000 [pulse/kWh] * If there is a [Pulse CONST], input it to set up the equipment. * If there is a [Pulse unit (kWh/pulse)], use the following calculation to get [Pulse CONST], input it to set up the equipment. <VT Ratio: 6600/110V; CT Ratio: 200/5A; Pulse unit: 1kWh/pulse> $\text{PulseCONST} = \frac{\text{VT Ratio} \times \text{CT Ratio}}{\text{Pulse unit}} = \frac{6600}{110} \times \frac{200}{5} = 60 \times 40 = 2400 \text{ [pulse/kWh]}$
[Multiplying factor]	Number of digits (Integer part) and multiplying factor will be possible to input by checking the checkbox [Multiplying factor] (Reference: NOTE About [Multiplying factor])
[Number of digits (Integer part)]	Set up the number of digits of integer part on the equipment. Range 4 to 6
[Multiplying factor]	Set up the multiplying factor on equipment. (The value is multiplied by multiplying factor and value on the equipment.) Range 1 to 100000
[Demand time limit adjustment Type]	Set up Demand time limit adjustment Type Range Either of [Initial TS], [External pulse signal].

Remarks

- When clicking the [help] button, [Help for demand general settings] dialog box is displayed.

2 Entering the meter information

Inputting the each setting value.

Item	Content & Range	
[VCT ratio]	Set up VCT ratio.	
	Range	1 to 100000 Calculate by [VT(PT) ratio] × [CT ratio] and set up the VCT ratio. * example for the calculation of VCT ratio <VT(PT) ratio: 6600V/110V; CT ratio: 100/5A> $\text{VCT ratio} = \frac{6600}{110} \times \frac{100}{5} = 60 \times 20 = 1200$
[Pulse constant value]	Set up the energy pulse factor for the secondary side (input pulse) Before the setting, please read the user's manual first.	
	Range	1 to 50000 [pulse/kWh] * If there is a [Pulse CONST], input it to set up the equipment. * If there is a [Pulse unit (kWh/pulse)], use the following calculation to get [Pulse CONST], input it to set up the equipment. <VT Ratio: 6600/110V; CT Ratio: 200/5A; Pulse unit: 1kWh/pulse> $\text{Pulse CONST} = \frac{\text{VT Ratio} \times \text{CT Ratio}}{\text{Pulse unit}} = \frac{6600}{110} \times \frac{200}{5} = 60 \times 40 = 2400 \quad [\text{pulse/kWh}]$
[Multiplying factor]	Number of digits (Integer part) and multiplying factor will be possible to input by checking the checkbox [Multiplying factor] (Reference: NOTE About [Multiplying factor])	
[Number of digits (Integer part)]	Set up the number of digits of integer part on the equipment.	
	Range	4 to 6
[Multiplying factor]	Set up the multiplying factor on equipment. (The value is multiplied by multiplying factor and value on the equipment.)	
	Range	1 to 100000
[Demand time limit adjustment Type]	Set up Demand time limit adjustment Type	
	Range	Either of [Initial TS], [External pulse signal].
[Demand time limit]	Set up Demand time limit.	
	Range	One of [15 min], [30 min], [1 hour] * Only [30 min] is possible in [External pulse signal] of [Demand time limit adjustment Type]

NOTE

About [Multiplying factor]

For setting up for [Number of digits (Integer part)] and [Multiplying factor], the equipment value will be the same Integrated value of Consumption as the meter.
And it works as an amount of power meter.

If it is not matter to match the range of Integrated value of Consumption, then Demand monitoring will be able to set up by only [VCT ratio] and [Pulse constant value] (Without [Multiplying factor] settings)


<Example of a case in which electronic multi-measuring instrument ME110SSR-C is used.>

The following is an excerpt of "ME110SSR user's manual: detailed edition".

Calculate and set the [VCT ratio, pulse constant value, number of digit, multiplying factor] by the following procedure.

Set the pulse value of pulse output 1.
Pulse value is selected from the table below, according to total load [kW].

Total load [kW]= $\frac{\alpha \times (\text{VT Primary Voltage}) \times (\text{CT Primary Current})}{1000}$ $\left(\begin{array}{l} \alpha: 1 \text{ 1-phase 2-wire} \\ 2 \text{ 1-phase 3-wire} \\ \sqrt{3} \text{ 3-phase 3-wire} \\ 3 \text{ 3-phase 4-wire} \end{array} \right)$

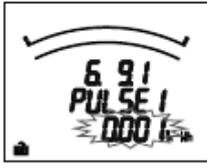

*1: For 1-phase 3-wire setting, the VT primary voltage is calculated using 110V.
*2: For direct voltage setting, the direct voltage is used for calculation instead of the VT primary voltage.
*3: For 3-phase 4-wire setting, the VT primary voltage is calculated using the phase to neutral voltage.

Total load [kW]	Display format		Possible pulse unit settings [kWh/pulse]			
	Digital display	Multiplier				
Less than 10	8888.88	× 1	1	0.1	0.01	0.001
10 or higher but less than 100	88888.8	× 1	10	1	0.1	0.01
100 or higher but less than 1000	88888.8	× 10	100	10	1	0.1
1000 or higher but less than 10000	88888.8	× 100	1000	100	10	1
10000 or higher but less than 100000	88888.8	× 1000	10000	1000	100	10
100000 or higher	88888.8	× 10000	100000	10000	1000	100

Note 1: When [7]Pulse output 1 output item is set to "non," this setting will be skipped.
Note 2: The factory default setting values are minimum values for the pulse unit that can be set.
Note 3: For reactive power, kW in the above table needs to be read as kvar, and kWh needs to be read as kvarh.

■ VCT ratio

<VT(PT) ratio: 6600V/110V; CT ratio: 100/5A>

$$\text{VCT ratio} = \frac{6600}{110} \times \frac{100}{5} = 60 \times 15 = 900$$

■ Pulse constant value

<Pulse unit: 1kWh/pulse>

$$\text{Pulse CONST} = \frac{\text{VT Ratio} \times \text{CT Ratio}}{\text{Pulse unit}} = \frac{6600}{110} \times \frac{75}{5} = 60 \times 15 = 900 \text{ [pulse/kWh]}$$

■ Number of digits (Integer part), Multiplying factor

Calculate the total load by the equation described in the instruction manual of ME110SSR.

VT primary voltage: 6600, CT primary current: 75, Phase wire system: 3-phase 4-wire

$$\text{Total load power} = \frac{6600 \times 75 \times 3}{1000} = 1485$$

Set the following from the display format of the table above.

Number of digits = 5 (Integer part)

Multiplying factor = 100

3 Registering

Click the button on the [Normal] dialog box and register.




[Register] button: Register normal demand information you set.

[Close] button: Back to the [Project setting] dialog box.


After changing the contents of the normal demand information, click the [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

- [Yes] button : To register
- [No] button : Not to register
- [Cancel] button : Back to the [Normal] dialog box

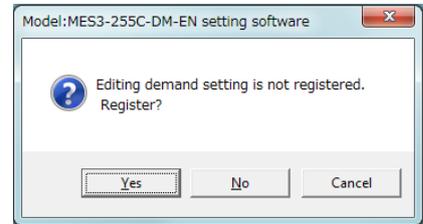


When the contents of [demand time limit] setting has been changed, the message shown on the right is displayed.

- [Yes] button : To register
- [No] button : Not to register

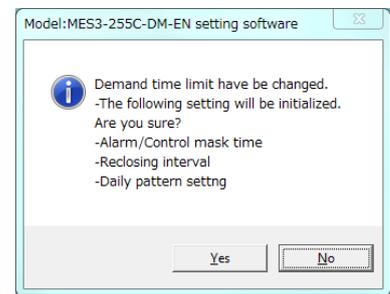

(Example of display)

If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when the [Register] button is clicked. Correct the setting to satisfy the conditions.

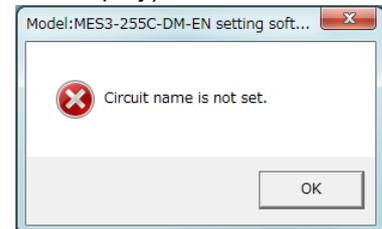


- *1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.
- *2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting. (The electric energy calculation is immediately reflected.)
- *3 Writing the project by 5 minutes before the start (the end) of the demand time limit.

Editing the registered normal demand information

This section describes how to edit the registered normal demand information.

1 Displaying the [Normal] dialog box

Click the [Normal] button in the dialog box of project setting.

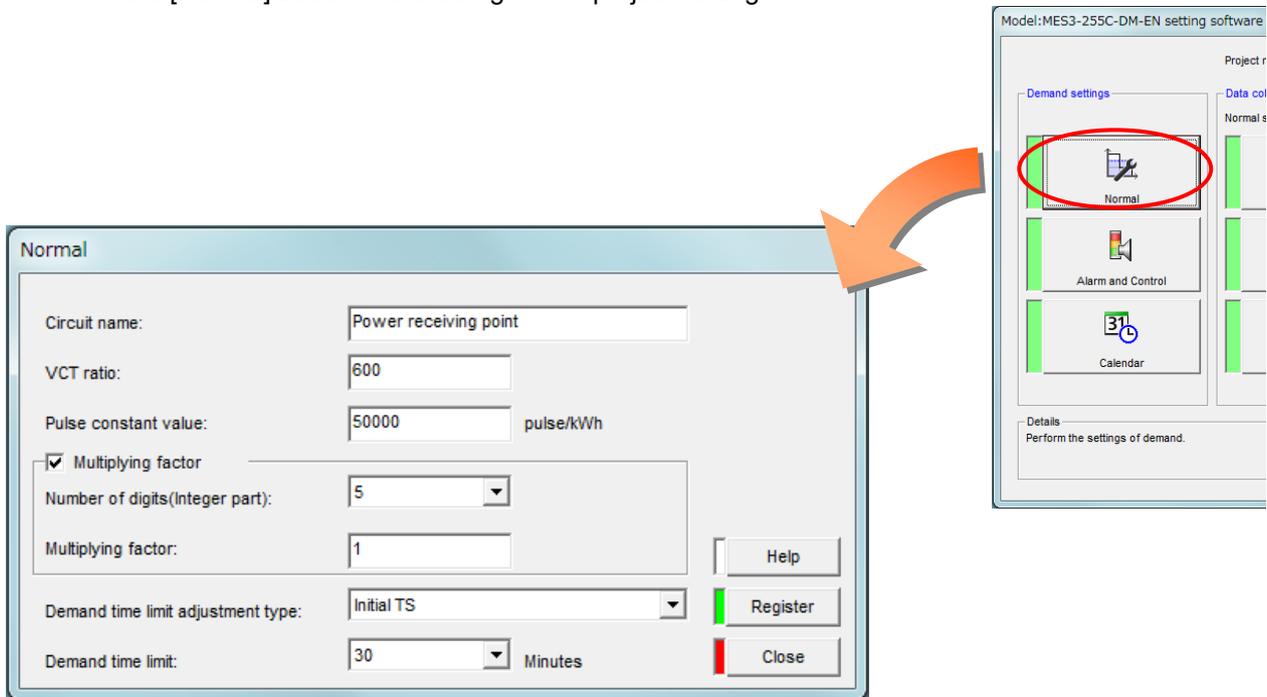

2 Select an item you want to edit, and click the [Edit] button.

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to those registering a new terminal.

*1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.

*2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting.
(The electric energy calculation is immediately reflected.)

*3 Writing the project by 5 minutes before the start (the end) of the demand time limit.

4.4.2. Demand alarm and control setting

This section describes the setting procedures for demand monitor and control. Always read “4.3 Demand control and Control Section Specifications” thoroughly before setting, and set the function correctly.

Registering demand alarm and control

The following describes how to set demand alarm and control.

1 Displaying the [Alarm and Control] dialog box

Click the [Alarm and Control] button in the dialog box of project setting.

Alarm setting

Alarm/Control mask time: Minute(0~30)

Alarm type:

Carry out management based on calendar setting:

Settings for each Time zone:

Time zone	Time zone name	Target demand value	Base power	Fixed alarm value
	Whole day	300.0 kW	0.0 kW	240.0 kW

Alarm output:

Subject	No.
Level 1 alarm	1
Level 2 alarm	2
Limit/Fixed alarm	3

Control setting

Demand control type:

Reclosing interval: Minute(1~30)

Control No.	Load name	Priority order	Control capacity	No.
1	Control output(Load1)	Invalid	0.0 kW	
2	Control output(Load2)	Invalid	0.0 kW	
3	Control output(Load3)	Invalid	0.0 kW	
4	Control output(Load4)	Invalid	0.0 kW	
5	Control output(Load5)	Invalid	0.0 kW	
6	Control output(Load6)	Invalid	0.0 kW	
7	Control output(Load7)	Invalid	0.0 kW	
8	Control output(Load8)	Invalid	0.0 kW	
9	Control output(Load9)	Invalid	0.0 kW	
10	Control output(Load10)	Invalid	0.0 kW	
11	Control output(Load11)	Invalid	0.0 kW	
12	Control output(Load12)	Invalid	0.0 kW	

Buttons: Register, Close

2 Setting demand alarm and control

Input or select the following items.

- (1) Inputting the [Alarm/Control mask time].

Alarm setting	
Alarm/Control mask time:	<input type="text" value="6"/> Minute(0~30)

*1 It does not alarm monitoring and demand control until the alarm/control mask time have passed from the start of the demand time limit.

*2 The following can be input.

Demand time limit = 15 min -> 0 - 15 (min)

Demand time limit = 30 min -> 0 - 30 (min)

Demand time limit = 60 min -> 0 - 60 (min)

The default value is 6 minutes.

*3 If set to 30, the alarm monitoring and demand control can be carried out regardless of the remaining time.

(During the reclosing after demand time limit, demand control(off) is not carried out.)

Set the optimal value to match the actual alarm and control situation.

- (2) Selecting the [Alarm type].

Alarm type:	<input type="text" value="Limit Alarm"/>
Carry out management based on calendar setting:	<input type="text" value="Limit Alarm"/>
Settings for each Time zone:	<input type="text" value="Fixed Alarm"/>
Alarm output:	

- (3) Double-clicking the [Time zone name] and inputting.

Settings for each Time zone:					Alarm output:	
Time zone	Time zone name	Target demand value	Base power	Fixed alarm value	Subject	No.
	Whole day	300.0 kW	0.0 kW	240.0 kW	Level 1 alarm	1
					Level 2 alarm	2
					Limit/Fixed alarm	3

*1 Time zone name can be input up to 16 characters.

*2 The following characters cannot be registered:

¥ / : , ; * ? " < > |

- (4) When carrying out the season and time zone management, checking the [Carry out management based on calendar setting] check box.
As necessary, inputting the [time zone name] of the time zone 1-10.

Carry out management based on calendar setting:

Settings for each Time zone:

Time zone	Time zone name	Target demand value	Base power	Fixed alarm value
1	Time zone 1	300.0 kW	0.0 kW	240.0 kW
2	Time zone 2	300.0 kW	0.0 kW	240.0 kW
3	Time zone 3	300.0 kW	0.0 kW	240.0 kW
4	Time zone 4	300.0 kW	0.0 kW	240.0 kW
5	Time zone 5	300.0 kW	0.0 kW	240.0 kW
6	Time zone 6	300.0 kW	0.0 kW	240.0 kW
7	Time zone 7	300.0 kW	0.0 kW	240.0 kW
8	Time zone 8	300.0 kW	0.0 kW	240.0 kW
9	Time zone 9	300.0 kW	0.0 kW	240.0 kW
10	Time zone 10	300.0 kW	0.0 kW	240.0 kW

*1 Time zone name can be input up to 16 characters.

The default is [Time zone *] (*=1 - 10).

*2 The following characters cannot be registered:

¥ / : , ; * ? " < > |

When selected the [Limit Alarm] in [Alarm Type]

- (5) Inputting the [Base power].

Settings for each Time zone:

Time zone	Time zone name	Target demand value	Base power	Fixed alarm value
1	Time zone 1	300.0 kW	0.0 kW	240.0 kW
2	Time zone 2	300.0 kW	0.0 kW	240.0 kW

*1 Based power is the power of the load that can not be off.

*2 Control the output/non-output of the limit alarm by the limit power, which is determined from the base power and target demand.

*3 0.0 - 99999.9 can be input.

If set to 0.0 it does not control the output / non-output of limit alarm.

*4 When integers or more than 2 decimal places is input, will be displayed with the first decimal place.
(Example: 123.45 -> 123.5, 456 -> 456.0)

*5 When the limit alarm selected to the alarm type, the setting of fixed alarm value can not be changed.
In addition, it is not used even if has been set.

When selected the [Fixed Alarm] in [Alarm Type]

(6) Inputting the [Fixed alarm value].

Settings for each Time zone:					
Time zone	Time zone name	Target demand value	Base power	Fixed alarm value	
1	Time zone 1	300.0 kW	0.0 kW	240.0 kW	
2	Time zone 2	300.0 kW	0.0 kW	240.0 kW	

*1 Monitoring the fixed alarm.

*2 0.0 - 99999.9 can be input.

If set to 0.0 it does not monitor the fixed alarm.

*3 When integers or more than 2 decimal places is input, will be displayed with the first decimal place. (Example: 123.45 -> 123.5, 456 -> 456.0)

*4 When the fixed alarm selected to the alarm type, the setting of base power can not be changed. In addition, it is not used even if has been set.

(7) Inputting the [Target demand value].

Settings for each Time zone:					
Time zone	Time zone name	Target demand value	Base power	Fixed alarm value	
1	Time zone 1	300.0 kW	0.0 kW	240.0 kW	
2	Time zone 2	300.0 kW	0.0 kW	240.0 kW	

*1 0.0 - 99999.9 can be input.

*2 When integers or more than 2 decimal places is input, will be displayed with the first decimal place. (Example: 123.45 -> 123.5, 456 -> 456.0)

(8) Selecting the [Demand control type].

Control setting					
Demand control type:		Cyclic - Reclosing			
Reclosing interval:		Cyclic - Reclosing			
Control No.	Load name	Priority order - Reclosing			Control capacity
1	Control output(Load)	Priority order - Reclosing after Demand time limit			0.0 kW
2	Control output(Load)	Priority Cyclic - Reclosing			0.0 kW

*1 The details of demand control type, refer to "4.3.3 Demand Control Function".

When selected the [Cyclic – Reclosing after Reclosing interval] in [Demand control Type]

(9) Inputting the [Reclosing interval].

*1 The following can be input.

Demand time limit = 15 min -> 0 - 15 (min)

Demand time limit = 30 min -> 0 - 30 (min)

Demand time limit = 60 min -> 0 - 60 (min)

The default value is 5 minutes.

*2 Regardless of the load condition, control output will be turned on after a lapse of the reclosing time(has been set).

*3 When selected the other than [Cyclic – Reclosing after Reclosing interval] to the alarm type, the setting of reclosing interval can not be changed. In addition, it is not used even if has been set.

(10) Inputting the [Load name].

Control No.	Load name	Priority order	Control capacity
1	Control output(Load1)	Invalid	0.0 kW
2	Control output(Load2)	Invalid	0.0 kW

*1 Load name can be input up to 32 characters.

*2 The following characters cannot be registered:

¥ / : , ; * ? “ < > |

(11) Setting the [Priority order].

Control No.	Load name	Priority order	Control capacity
1	Control output(Load1)	Invalid	0.0 kW
2	Control output(Load2)	Invalid	0.0 kW
3	Control output(Load3)	Invalid	0.0 kW
4	Control output(Load4)	Invalid	0.0 kW
5	Control output(Load5)	Invalid	0.0 kW
6	Control output(Load6)	Invalid	0.0 kW
7	Control output(Load7)	Invalid	0.0 kW
8	Control output(Load8)	Invalid	0.0 kW
9	Control output(Load9)	Invalid	0.0 kW
10	Control output(Load10)	Invalid	0.0 kW
11	Control output(Load11)	Invalid	0.0 kW
12	Control output(Load12)	Invalid	0.0 kW

*1 Invalid or 1 - 12 can be selected.

*2 Control circuit that is set to [Invalid], does not demand control.

*3 Control circuit that is set to [Invalid], can be ON/OFF manually.

*4 Control circuit that is set to [1 - 12], can be ON/OFF manually.

(12) When the [Priority order] is 1 – 12, inputting the [Control capacity].

Control No.	Load name	Priority order	Control capacity
1	Control output(Load1)	1	0.0 kW
2	Control output(Load2)	Invalid	0.0 kW

*1 0.0 - 99999.9 can be input.

*2 When integers or more than 2 decimal places is input, will be displayed with the first decimal place.
(Example: 123.45 -> 123.5, 456 -> 456.0)

*3 Set according to the load condition.

3 Registering

Click the button on the [Alarm and control] dialog box to register.



[Register] button : Register the demand alarm and control information you set.


[Close] button : Back to the [Project setting] dialog box.

If you click [Close] button without clicking the [Register] button after changing the demand alarm and control Information, the message shown on the right will be displayed.

[Yes] button : Register

[No] button : Do not register


[Cancel] button : Back to the [Alarm and control] dialog box

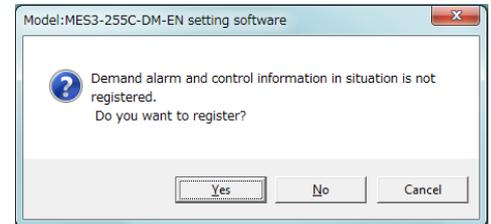

When clicking the [Close] button and if the output destination of the control output is not set, the message shown on the right will be displayed.

[Yes] button : Register the editing content and display the [Contact output] dialog box.


[No] button : Register the editing content and back to the [Project setting] dialog box.

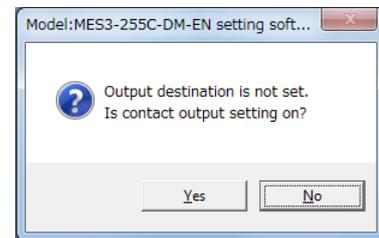

(Example of display)

If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when the [Register] button is clicked.

Correct the setting to satisfy the conditions.

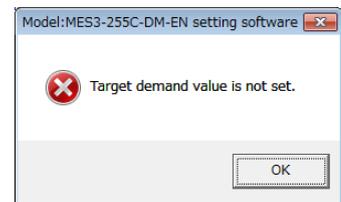

***1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.**

***2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting. (The electric energy calculation is immediately reflected.)**

***3 Writing the project by 5 minutes before the start (the end) of the demand time limit.**

Editing a registered demand alarm and control information

This section described how to edit an information of registered demand alarm and control.

1 Displaying the [Alarm and control] dialog box

Click the [Alarm and Control] button in the dialog box of project setting.

Alarm setting

Alarm/Control mask time: Minute(0~30)

Alarm type:

Carry out management based on calendar setting:

Settings for each Time zone:

Time zone	Time zone name	Target demand value	Base power	Fixed alarm value
	Whole day	300.0 kW	0.0 kW	240.0 kW

Alarm output:

Subject	No.
Level 1 alarm	1
Level 2 alarm	2
Limit/Fixed alarm	3

Control setting

Demand control type:

Reclosing interval: Minute(1~30)

Control No.	Load name	Priority order	Control capacity	No.
1	Control output(Load1)	Invalid	0.0 kW	
2	Control output(Load2)	Invalid	0.0 kW	
3	Control output(Load3)	Invalid	0.0 kW	
4	Control output(Load4)	Invalid	0.0 kW	
5	Control output(Load5)	Invalid	0.0 kW	
6	Control output(Load6)	Invalid	0.0 kW	
7	Control output(Load7)	Invalid	0.0 kW	
8	Control output(Load8)	Invalid	0.0 kW	
9	Control output(Load9)	Invalid	0.0 kW	
10	Control output(Load10)	Invalid	0.0 kW	
11	Control output(Load11)	Invalid	0.0 kW	
12	Control output(Load12)	Invalid	0.0 kW	

Buttons: Register, Close

2 Editing the items to be changed, and registering them

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to the first registration.

*1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.

*2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting. (The electric energy calculation is immediately reflected.)

*3 Writing the project by 5 minutes before the start (the end) of the demand time limit.

4.4.3. Demand calendar setting (Only when carrying out management based on calendar setting)

This section described how to set the demand calendar.

In the demand calendar setting, set the daily pattern definition and the calendar definition (daily pattern allocation).


* When carrying out the season and time zone management, refer to [4.3.6. demand control and setting (4)When carrying out the season and time zone management], check the [Carry out management based on calendar setting], and set the time zone name.

Define the daily pattern

This section described how to set the daily pattern.

1 Displaying the [Demand calendar setting] dialog box

Click the [Calendar] button in the dialog box of project setting.

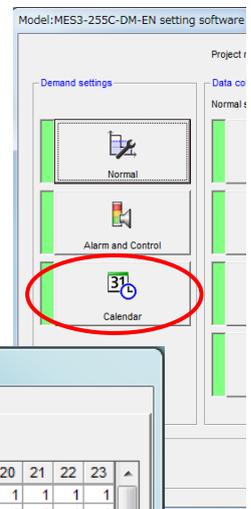

Demand calendar setting

Time zone: 1:Time zone 1

No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
1	Daily pattern 01	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
2	Daily pattern 02	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
3	Daily pattern 03	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
4	Daily pattern 04	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
5	Daily pattern 05	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
6	Daily pattern 06	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
7	Daily pattern 07	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
8	Daily pattern 08	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
9	Daily pattern 09	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
10	Daily pattern 10	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
11	Daily pattern 11	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
12	Daily pattern 12	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
13	Daily pattern 13	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
14	Daily pattern 14	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
15	Daily pattern 15	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
16	Daily pattern 16	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17	Daily pattern 17	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
18	Daily pattern 18	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
19	Daily pattern 19	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
20	Daily pattern 20	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Register Close

Remarks

- Display the following by the demand time limit that is set in the [Normal] dialog box.

[Demand time limit = 15 min]

No.	Daily pattern name	Demand time limit	0	1
1		00~15min	1	1
		15~30min	1	1
		30~45min	1	1
		45~60min	1	1

[Demand time limit = 30 min]


No.	Daily pattern name	Demand time limit	0	1
1		00~30min	1	1
		30~60min	1	1

[Demand time limit = 60 min]

No.	Daily pattern name	Demand time limit	0	1
1		00~60min	1	1

- When the [Carry out management based on calendar setting] is not checked, the following message will be displayed.

Check the [Carry out management based on calendar setting] in the [Alarm and control] dialog box.

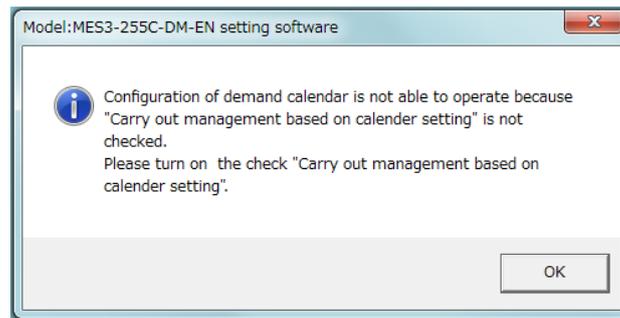

2 Setting the daily pattern

In the [Daily pattern definition], set the daily pattern such as weekdays and holidays.

- (13) Double-click the [Daily pattern name] and inputting the daily pattern name.

Daily pattern definition		Calendar definition(Daily pattern allocation)											
Time zone: 1:Time zone 1													
No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10
1	Summer season	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1
2	Others	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1

*1 Daily pattern name can be input up to 16 characters.

*2 The following characters cannot be registered:

¥ / : ; * ? " < > |

*3 Up to 40 can be set.

- (14) Select the time zone to be set for each demand time limit of the daily pattern.

Daily pattern definition		Calendar definition(Daily pattern allocation)											
Time zone: 1:Time zone 1													
No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10
1	Summer season	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1
2	Others	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1
3	Daily pattern 03	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1

Double-click the cell (demand time limit) to be set

You can set the time zone for each cell (each demand time).

If you double-click the cell, the currently selected time zone number (1-10) is input.

Time zone: 2:Time zone 2													
No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10
1	Summer season	00~30min	1	1	2	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1

- (15) Select a time zone to be set and clicking the right-click menu [Set all in chosen time zone]. For all of the cells that you have selected, the currently selected time zone number is entered.

Time zone: 2:Time zone 2															
No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10	11	12
1	Summer season	00~30min	1	1	2	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1
2	Others	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1
3	Daily pattern 03	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1

Set all in chosen time zone

<Copying daily pattern definition>

The daily pattern definition can be copied row by row. (Multiple lines possible)

Select the [Daily pattern name] or [No.] to copy and press the right-click menu [Copy daily pattern definition] or the short-cut keys Ctrl+C.

No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10
1	Summer season	00~30min	2	2	2	2	2	2	2	2	2	2	2
		30~60min	2	2	2	2	2	2	2	2	2	2	2
2	Others	00~30min	3	3	3	3	3	3	3	3	3	3	3
		30~60min	3	3	3	3	3	3	3	3	3	3	3
3	Daily pattern 03	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1
4	Daily pattern 04	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1

Copy daily pattern definition Ctrl+C

Paste daily pattern definition Ctrl+V

<Pasting daily pattern definition>

The daily pattern definition can be pasted row by row. (Multiple lines possible)

Select the [Daily pattern name] or [No.] to paste and press the right-click menu [Paste daily pattern definition] or the short-cut keys Ctrl+V.

No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10
1	Summer season	00~30min	2	2	2	2	2	2	2	2	2	2	2
		30~60min	2	2	2	2	2	2	2	2	2	2	2
2	Others	00~30min	3	3	3	3	3	3	3	3	3	3	3
		30~60min	3	3	3	3	3	3	3	3	3	3	3
3	Daily pattern 03	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1
4	Daily pattern 04	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1
5	Daily pattern 05	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1

Copy daily pattern definition Ctrl+C

Paste daily pattern definition Ctrl+V



No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10
1	Summer season	00~30min	2	2	2	2	2	2	2	2	2	2	2
		30~60min	2	2	2	2	2	2	2	2	2	2	2
2	Others	00~30min	3	3	3	3	3	3	3	3	3	3	3
		30~60min	3	3	3	3	3	3	3	3	3	3	3
3	Summer season-3	00~30min	2	2	2	2	2	2	2	2	2	2	2
		30~60min	2	2	2	2	2	2	2	2	2	2	2
4	Others-4	00~30min	3	3	3	3	3	3	3	3	3	3	3
		30~60min	3	3	3	3	3	3	3	3	3	3	3
5	Daily pattern 05	00~30min	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1

Remarks

- The “-”+ pasted line No. is automatically added to the end of the pasted daily pattern name.
(Example) When the [Summer season] is pasted to line No.3,
[Summer season-3]

3 Registering the daily pattern

After inputting the daily pattern, daily pattern will be reflected when click the [Register] button.



[Register] button : Register the contents of the set daily pattern.

[Close] button : Back to the [Project setting] dialog box.


In the case of the following, the message shown on the right will be displayed.

- When clicking the [Close] button without clicking the [Register] button after changing the contents of daily pattern.
- When trying to change to the [Calendar definition (daily pattern allocation)] tab.

[Yes] button : Register


[No] button : Do not register

[Cancel] button : Back to the [Demand calendar setting] dialog box

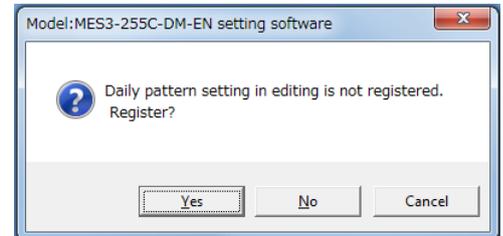

If there is non-input daily pattern, an error message as shown on the right is displayed.

Set the daily pattern name to all of the daily pattern to be registered.

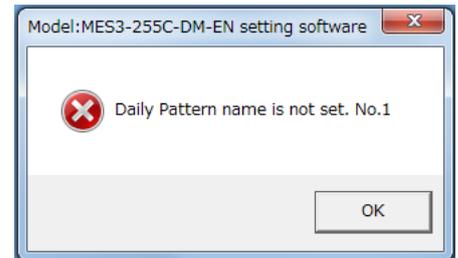

***1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.**

***2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting. (The electric energy calculation is immediately reflected.)**

***3 Writing the project by 5 minutes before the start (the end) of the demand time limit.**

Define the calendar

This section described how to set the calendar.

1 Setting the calendar

Set the [daily pattern] for each day.

- (1) Select the [Calendar definition (Daily pattern allocation)] tab.
- (2) Set the start month of calendar setting from the [beginning month] pull-down menu.

Demand calendar setting

Daily pattern definition: Calendar definition(Daily pattern allocation)

Beginning month: 1


Daily pattern choice: 1: Summer season

No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
1	Summer season	00~30min	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
		30~60min	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	

Calendar grid (rows 1-5, columns 2014/01-2015/12):

	2014/01	2014/02	2014/03	2014/04	2014/05	2014/06	2014/07	2014/08	2014/09	2014/10	2014/11	2014/12	2015/01	2015/02	2015/03	2015/04	2015/05	2015/06	2015/07	2015/08	2015/09	2015/10	2015/11	2015/12
1																								
2																								
3	1																							
4																								
5																								

- *1 Beginning month can be selected from 1 to 12. Set the calendar start month of [management based on calendar setting].
- *2 At the same time as the set of beginning month, display of the calendar setting list is updated.
- *3 If you change the [beginning month], the message shown on the right will be displayed. If you want to cancel the changes, click the "No".

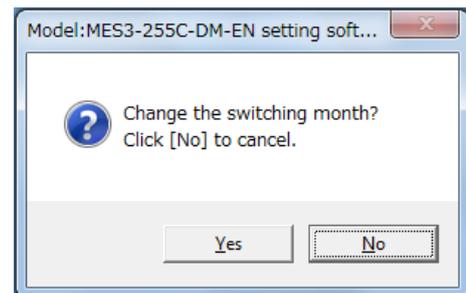

2 Select the daily pattern

Daily pattern registered in [Daily pattern definition] tab are listed in the [Daily pattern choice] pull-down menu.

Select the daily pattern to be set for each date of the calendar.

Demand calendar setting

Daily pattern definition: Calendar definition(Daily pattern allocation)

Beginning month: 1

Daily pattern choice: 1: Summer season

No.	Daily pattern name	Demand time limit	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
1	Summer season		2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	

Calendar grid (rows 1-5, columns 2014/01-2015/12):

	2014/01	2014/02	2014/03	2014/04	2014/05	2014/06	2014/07	2014/08	2014/09	2014/10	2014/11	2014/12	2015/01	2015/02	2015/03	2015/04	2015/05	2015/06	2015/07	2015/08	2015/09	2015/10	2015/11	2015/12
1																								

- *1 Time zone of the daily pattern selected is displayed to daily pattern display area.

3 Setting the calendar

In the calendar setting list, set the daily pattern for each date.

(16) When double-clicking the cell of the date, currently selected number of daily pattern will be input.

Daily pattern choice:		2:Others													
No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10	11	12
2	Others	00~30min	3	3	3	3	3	3	3	3	3	3	3	3	3
		30~60min	3	3	3	3	3	3	3	3	3	3	3	3	3

	2014/01	2014/02	2014/03	2014/04	2014/05	2014/06	2014/07	2014/08	2014/09	2014/10	2014/11	2014/12	2015/01	2015/02	2015/03	2015/04
1																
2																
3																
4																
5																
6																
7																

*1 By clicking the right-click menu [Set all in chosen daily pattern], you can set the daily pattern for all cells currently selected.

4 Registering the calendar

After inputting the daily pattern of calendar, the calendar will be reflected when click the [Register] button.




[Register] button : Register the contents of the set calendar.

[Close] button : Back to the [Project setting] dialog box.

In the case of the following, the message shown on the right will be displayed.

- When clicking the [Close] button without clicking the [Register] button after changing the contents of calendar.
- When trying to change to the [Daily pattern definition] tab.

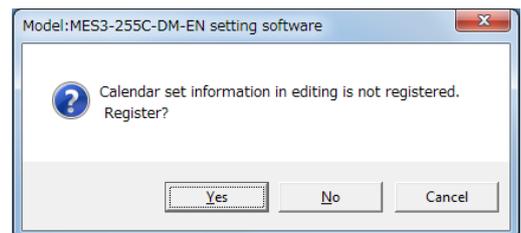

[Yes] button : Register

[No] button : Do not register

[Cancel] button : Back to the [Demand calendar setting] dialog box

*1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.

*2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting. (The electric energy calculation is immediately reflected.)


*3 Writing the project by 5 minutes before the start (the end) of the demand time limit.

Editing a registered calendar setting

This section described how to edit an information of registered calendar.

1 Displaying the [Demand calendar setting] dialog box

Click the [Calendar] button in the dialog box of project setting.

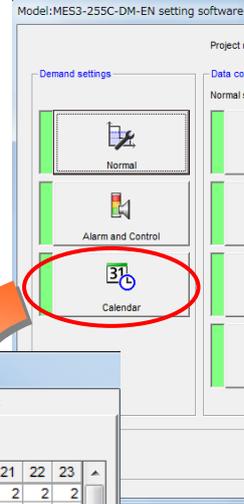

Demand calendar setting

Daily pattern definition | Calendar definition(Daily pattern allocation)

Time zone: 1:Time zone 1

No.	Daily pattern name	Demand time limit	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
1	Summer season	00~30min	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
		30~60min	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
2	Others	00~30min	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
		30~60min	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3
3	Summer season-3	00~30min	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
		30~60min	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
4	Others-4	00~30min	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
		30~60min	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3
5	Daily pattern 05	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
6	Daily pattern 06	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
7	Daily pattern 07	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
8	Daily pattern 08	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
9	Daily pattern 09	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
10	Daily pattern 10	00~30min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
		30~60min	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

2 Editing the items to be changed, and registering them

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to the first registration.

***1 Confirmed the setting and when writing to EcoWebServerIII, save and write of the project.**

***2 Setting is enabled after the start (the end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)). Until then, work with the previous setting. (The electric energy calculation is immediately reflected.)**

***3 Writing the project by 5 minutes before the start (the end) of the demand time limit.**

4.5. Measuring Data Collection Settings [Normal Settings]

This section explains the "Terminal registration", "Measuring point registration" and "Group registration" procedures that are necessary for system operations.

4.5.1. CC-Link terminal registration

This section explains the procedures on the [CC-Link terminal].

A maximum of 64 terminals can be registered.

(* Number of terminals that can be registered varies depending on the settings.)


The error LED of CC-Link communication unit will be always ON without CC-Link connecting.

Checking the list of registered terminals

The following describes how to display and check the list of registered terminals:

1 Displaying the [CC-Link Terminal] dialog box

Click the [CC-Link Terminal] button in the dialog box of project setting.

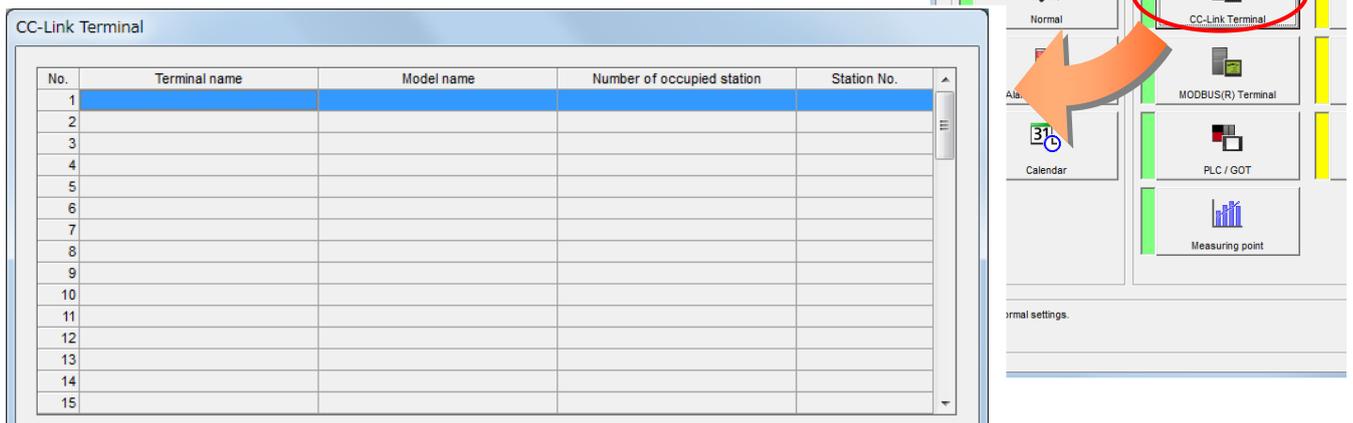

2 Checking the registration information

Check the following information displayed in the [Terminal]

[No.]	: Terminal No. (*1)
[Terminal name]	: Registered terminal name
[Model name]	: Registered model name
[Number of occupied stations]	: No. of stations occupied by registered terminal (*2)
[Station No.]	: Registered station No.

*1 For the multi-circuit product (EMU2-RD3-C, etc.), one circuit is shown per line, and the same terminal No. is shown for each circuit.

(This is because the terminal information such as the rated voltage can be set for each measuring circuit.)

*2 The No. of occupied stations varies depending on the selected model.

Registering a new terminal

This section describes how to register a new terminal.

1 Displaying the [Terminal] dialog box

Click the [Terminal registration] button in the dialog box of project setting.

2 Selecting the line to register, and clicking the [Edit] button

Double-click the line to register in the [Terminal], or select the line to register and click the [Edit] button. The default value for each item is displayed in the terminal information.

CC-Link Terminal

No.	Terminal name	Model name	Number of occupied station	Station No.
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				

No.:

Name:

Station details

Type: Remote device E.S.C.: 1St.

Station No.:

Model:

Model information

No setting item

Click the Edit button to enable changes

3 Entering or selecting each item

Enter or select the following items.

<p>[Name]</p>	<p>Enter the terminal name. (This terminal name is shown in the list of measuring points on the EcoWebServerIII page.)</p>  <p>Terminal name</p> <table border="1"> <tr> <td>Characters</td> <td>Up to 24 characters</td> </tr> <tr> <td>Prohibited characters</td> <td>The following characters cannot be registered: # ¥ / : ; * ? " < > </td> </tr> </table> <p>*1 If you use the characters in the list of the prohibited characters in Appendix, they may not be displayed correctly in the browser view of the EcoWebServerIII. *2 A duplicate terminal name cannot be registered. *3 For a multiple-circuit product, "-X" (X is a circuit number) is automatically appended at the end of the terminal name. (Up to 24 characters with "-X".)</p>	Characters	Up to 24 characters	Prohibited characters	The following characters cannot be registered: # ¥ / : ; * ? " < >
Characters	Up to 24 characters				
Prohibited characters	The following characters cannot be registered: # ¥ / : ; * ? " < >				
<p>[Station No.]</p>	<p>Set the same number as the one set in the terminal.</p> <table border="1"> <tr> <td>Range</td> <td>1 - 64</td> </tr> </table> <p>*1 A duplicate station number cannot be registered. *2 Note that the number of occupied stations varies depending on the models. (Ex.) When the terminal having 4 occupied stations is set to the station number 64, the out-of-range error occurs because the station numbers from 64 to 67 are occupied. *3 Set the station number to satisfy the following condition. $\{(16 \times (A+D)) + (54 \times B) + (88 \times C)\} \leq 2304$ <p>A: Number of terminals in the remote I/O station B: Number of terminals in the remote device station C: Number of terminals in the intelligent device station D: Number of terminals in the reserved station (Station type, Number of occupied stations ☞ Refer to “5.1 List of support terminals (CC-Link terminal)”) </p> <p>*4 Setting range of QJ61BT11N/LCPU/LJ61BT11 is from 1 to 63.</p> </p>	Range	1 - 64		
Range	1 - 64				
<p>[Model:]</p>	<p>Select a model. Available models : (☞ Refer to “5.1 List of support terminals(CC-Link terminal)”) </p>  <p>* When collecting data from the QCPU device via CC-Link, select "QJ61BT11N (CC-Link master/local unit (local station))". * When collecting data from the LCPU device, select "LCPU/LJ61BT11 (CC-Link master/local unit (local station))". * When collecting data by EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB, EMU4-CNT-MB, please select [To EcoMonitorPlus setting] from the list.</p>				
<p>[Model information]</p>	<p>Set the model information. * The setting items will differ according to the model (☞ Refer to “5.2 List of model information(CC-Link terminal)”).</p> 				

Remarks

- [Station type] and [Number of occupied stations are determined by the selected model. (☞ Refer to “5.1 List of support terminals(CC-Link terminal)”).

✓ Additional information:

Reserve station

The unregistered station number between 1 and the max. number is counted as a reserve station.

The number of reserve stations is included in the term of the conditional expression of the terminal number error. Please be careful.

$$\{(16 \times (A + D)) + (54 \times B) + (88 \times C)\} \leq 2304$$

A: Number of terminals in the remote I/O station

B: Number of terminals in the remote device station

C: Number of terminals in the intelligent device station

D: Number of terminals in the reserve station

(Ex.) EMU2-RD1-C (terminal of a remote device station) is registered in the station number 1 to 41 and 64.

⇒ The station number 42 to 63 become the reserve station, and then

$$\{(16 \times (0 + 22)) + (54 \times 41) + (88 \times 0)\} = 2566 > 2304$$

causes an error because the conditional expression is not satisfied.


4 Registering

Click the button on the [CC-Link terminal registration] dialog box to register the terminal.

 [Register] button : Register the terminal with the settings you made.
 The registration information will be reflected to the [Terminals list].

 [Close] button : Back to the [Project setting] dialog box.


- *1 If the EcoMonitorPlus terminal is selected, the following setting is necessary.
 Input Station No., Number of extension, Main unit and Extension unit(1) to unit(3)
 and press the [Register] button.
 [<>]button can be used for swithing extension unit.
 More details refer to [5.1 List of support terminals(CC-Link terminal)]

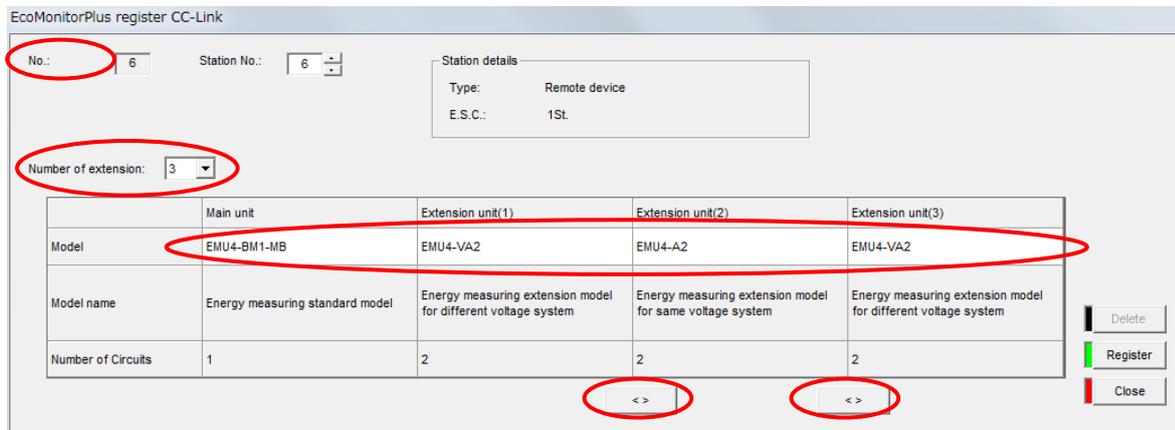

Item	Description
No.	Line number of the terminal registration screen. Automatically displayed.
Station No.	Input the station number set in the terminal. Duplicate registration is prohibited.
Number of extension	Select the number of extension units connected to the terminal.
Model	Select the type name to be registered.
Model name	The model name corresponding to the selected type name is automatically displayed.
Number of circuit	The number of the measurement circuit corresponding to the selected type name is automatically displayed.


- *2 If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when the [Register] button is clicked. Correct the setting to satisfy the conditions.

(Example of display)

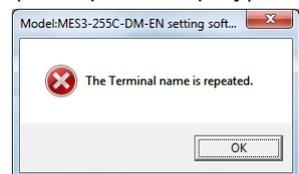

- *3 If you click [Close] button without clicking the [Register] button after changing the entry, the message shown on the right will be displayed.

- [Yes] : Register
- [No] : Do not register
- [Cancel] : Return to [CC-Link Terminal registration] dialog box

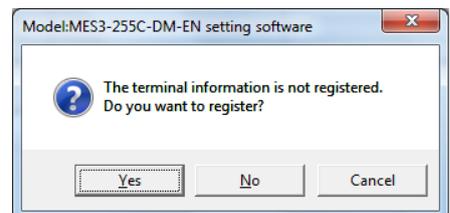

<Copying terminal information>

To copy registered terminal information, select the line to copy and press the right-click menu [Copy terminal unit] or the short-cut keys Ctrl+C.

No.	Terminal name	Model name	Number of occupied station	Station No.
1	Terminal1	EMU4-HD1-MB	1St.	1
2	Terminal2-1	EMU2-RD3-C	1St.	2
2	Terminal2-2	EMU2-RD3-C	1St.	2
2	Terminal2-3	EMU2-RD3-C	1St.	2
3				
4				
5				

Copy terminal unit Ctrl+C

Paste terminal unit Ctrl+V

Delete terminal unit Del

<Pasting terminal information>

To paste the copied terminal information, select the line to paste into, and press the right-click menu [Paste terminal unit] or the short-cut keys Ctrl+V.

No.	Terminal name	Model name	Number of occupied station	Station No.
1	Terminal1	EMU4-HD1-MB	1St.	1
2	Terminal2-1	EMU2-RD3-C	1St.	2
2	Terminal2-2	EMU2-RD3-C	1St.	2
2	Terminal2-3	EMU2-RD3-C	1St.	2
3				
4				
5				
6				
7				
8				
9				

Copy terminal unit Ctrl+C

Paste terminal unit Ctrl+V

Delete terminal unit Del



CC-Link Terminal

No.	Terminal name	Model name	Number of occupied station	Station No.
1	Terminal1	EMU4-HD1-MB	1St.	1
2	Terminal2-1	EMU2-RD3-C	1St.	2
2	Terminal2-2	EMU2-RD3-C	1St.	2
2	Terminal2-3	EMU2-RD3-C	1St.	2
3	Terminal1-3	EMU4-HD1-MB	1St.	3
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				

No.:

Name:

Station details

Type: Remote device E.S.C.: 1St.

Station No.:

Model:  EMU4-HD1-MB
Energy_measuring_unit(1P2W,1P3W,3P3W,3P4W)

Model information

PhaseWire:

RatedVoltage:

RatedCurrent:

Edit
Delete
Register
Close

Remarks

- Multiple lines for terminals other than multi-circuit parts cannot be copied and pasted.
- Terminal information cannot be pasted into a registered line.
- The “-”+ pasted line No. is automatically added to the end of the pasted terminal name.
- The default value is set in the pasted address.
- The pasted terminal information is automatically registered.

Deleting registered terminal


This section describes how to delete a registered terminal.

1 Displaying the [Terminal] dialog box


Click the [Terminal] button in the dialog box of project setting.

2 Selecting a terminal you want to delete, and click the [Delete] button

Select a line of a terminal you want to delete in the terminal list, and then click the [Delete] button.

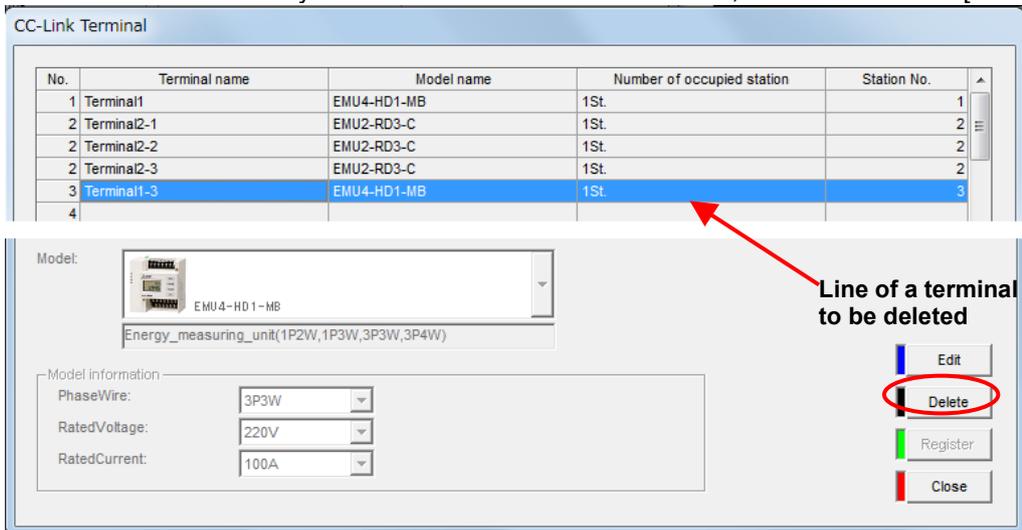


- * If the terminal element of the selected terminal is registered as a measuring point, the message shown on the right will be displayed. Click the [OK] button to delete the measuring point first.

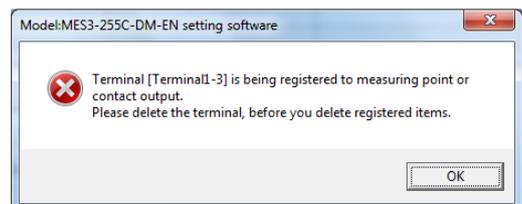

3 Deleting

A delete confirmation message appears. Click the button to delete.

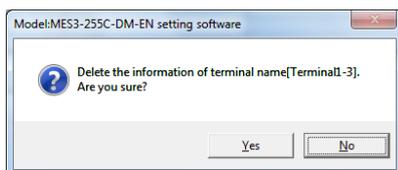

[Yes] button : Delete the terminal and back to the [Terminal] dialog box.
[No] button : Cancel the deletion and back to the [Terminal] dialog box.

After the terminal is deleted, its registration information is removed from the terminal list.

<To delete a multi-circuit product>

To delete a multiple-circuit product (EMU2-RD3-C, etc.), perform the step 1 to 3.

However, if you delete one circuit, the other circuits in the terminal (the terminal in the rows which have the same [No.]) will also be deleted automatically.

(Ex.) The first circuit in the EMU2-RD3-C is deleted.

No.	Terminal name	Model name	Number of occupied station	Station No.
1	Terminal1	EMU4-HD1-MB	1St.	1
2	Terminal2-1	EMU2-RD3-C	1St.	2
2	Terminal2-2	EMU2-RD3-C	1St.	2
2	Terminal2-3	EMU2-RD3-C	1St.	2
3	Terminal3-1	EMU2-RD5-C	1St.	3
3	Terminal3-2	EMU2-RD5-C	1St.	3
3	Terminal3-3	EMU2-RD5-C	1St.	3
3	Terminal3-4	EMU2-RD5-C	1St.	3
3	Terminal3-5	EMU2-RD5-C	1St.	3

Select the terminal 2-1 (1st aacircuit) and click the [Delete] button.




No.	Terminal name	Model name	Number of occupied station	Station No.
1	Terminal1	EMU4-HD1-MB	1St.	1
2				
3	Terminal3-1	EMU2-RD5-C	1St.	3
3	Terminal3-2	EMU2-RD5-C	1St.	3
3	Terminal3-3	EMU2-RD5-C	1St.	3
3	Terminal3-4	EMU2-RD5-C	1St.	3
3	Terminal3-5	EMU2-RD5-C	1St.	3
4				

- The terminal 2-1 to 2-3 (1st to 3rd circuits) are deleted.
- Redisplay [Terminal No. 2] as a blank line

* If the other circuit in the terminal you select is used in the measuring point, the following message will appear.

Click the [OK] button to delete the measuring point first.

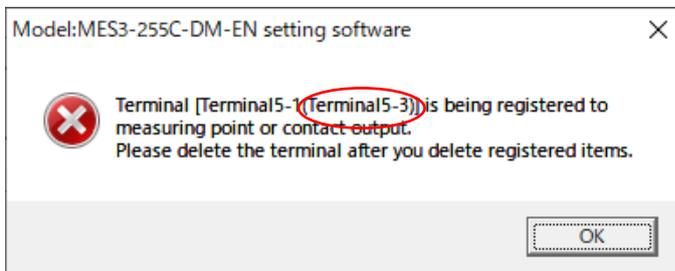

The circuit of the terminal whose name is shown in "()" is registered in the measuring point.

Remarks

- You cannot delete the terminal if it is registered as a measuring point. Delete the measuring point first, and then delete this terminal.
- The terminal can also be deleted by clicking the right-click menu [Delete terminal unit] or pressing the "Delete" key.

Editing registration information of a registered terminal

This section describes how to edit registration information of a terminal.

1 Displaying the [CC-Link Terminal] dialog box

Click the [CC-LinkTerminal] button in the dialog box of project setting.

2 Selecting a terminal you want to edit, and click the [Edit] button

Double-click the line of a terminal you want to edit in the terminal list, or select a line of a terminal you want to edit, and then click the [Edit] button.

The screenshot shows the 'CC-Link Terminal' dialog box. At the top is a table with columns: No., Terminal name, Model name, Number of occupied station, and Station No. The table contains several rows of terminal data. The second row, 'Terminal2-1', is highlighted in blue. A red arrow points to this row with the text 'Line of a terminal to be edited'. Below the table is a form for editing the selected terminal. The form includes fields for 'No.' (value 2), 'Name' (Terminal2-1), 'Station details' (Type: Remote device, E.S.C.: 1St.), 'Station No.' (value 2), 'Model' (EMU2-RD3-C), and 'Model information' (PhaseWire: 3P3W, RatedVoltage: 220V, RatedCurrent: 100A). A red dashed box encloses the form fields. To the right of the form are buttons for 'Edit', 'Delete', 'Register', and 'Close'. The 'Edit' button is circled in red, and a red arrow points to it with a callout box that says 'Click Edit button to enable changes'.

No.	Terminal name	Model name	Number of occupied station	Station No.
1	Terminal1	EMU4-HD1-MB	1St.	1
2	Terminal2-1	EMU2-RD3-C	1St.	2
2	Terminal2-2	EMU2-RD3-C	1St.	2
2	Terminal2-3	EMU2-RD3-C	1St.	2
3	Terminal3-1	EMU2-RD5-C	1St.	3
3	Terminal3-2	EMU2-RD5-C	1St.	3
3	Terminal3-3	EMU2-RD5-C	1St.	3
3	Terminal3-4	EMU2-RD5-C	1St.	3
3	Terminal3-5	EMU2-RD5-C	1St.	3
4				
5				
6				
7				
8				
9				

3 Editing the items to be changed and registering them

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to those registering a new terminal.

Remarks

- You cannot edit the [Model] if it is registered in the measuring point. Delete the measuring point first, and then change the model.
- You cannot edit the [Model] of a multi-circuit product (EMU2-RD-3-C, etc.). To change the model, delete the terminal first, and then perform a new registration.

4.5.2. MODBUS terminal registration

This section explains the procedures on the [MODBUS® terminal registration].

A maximum of 255 terminals can be registered.

(* Number of terminals that can be registered varies depending on the settings.)

Checking the list of registered terminals

The following describes how to display and check the list of registered terminals:

1 Displaying [MODBUS(R) Terminal] screen

Click the [MODBUS(R) Terminal] button in the project setting screen.

Model: MES3-255C-DM-EN setting software

Project name: test1

- Demand settings

Data collecting settings

Normal settings

CC-Link Terminal

MODBUS(R) Terminal

PLC / GOT

Measuring point

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3 -1	Terminal3-1	EMU4-BM1-MB	192.168.10.23	502	3
3 -2	Terminal3-2	EMU4-A2	192.168.10.23	502	3
3 -3	Terminal3-3	EMU4-A2	192.168.10.23	502	3
3 -4	Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3 -5	Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4					
5					
6					
7					
8					
9					
10					
11					

MODBUS(R) Terminal

No.: 4

Name: Terminal4

Point type: MODBUS(R) Terminal[Supported] Generic MODBUS(R) Terminal

MODBUS(R) Terminal[Supported]

Model: ME36SSE-MB
Electronic multi-measuring instrument

Protocol: MODBUS(R) RTU

IP address: Port No.: 502

Slave address: 1

Model information

PhaseWire: 3P4W

PhaseVoltage: 220 V (60 - 750000V)

RatedCurrent: 5.0 A (1.0 - 30000A)

Edit

Delete

Register

Close

2 Checking the registration information

Check the following information displayed in the terminal list

[No.]	: Terminal No. (*1)
[Terminal name]	: Registered terminal name
[Model name]	: Registered model name
[IP address]	: IP address of the registered terminal
[Port number]	: Port number of the registered terminal (*2)
[Slave address]	: Slave address of the registered terminal

*1 For the multi-circuit product (EcoMonitorPlus), one circuit is shown per line, and the same terminal No. is shown for each circuit.

(This is because the terminal information such as the rated voltage can be set for each measuring circuit.)

*2 The No. of occupied stations varies depending on the selected model.

Registering a new terminal

This section describes how to register a new terminal.

1 Displaying [MODBUS(R) Terminal] screen

Click the [MODBUS(R) Terminal] button in the dialog box of project setting.

2 Selecting the line to register, and clicking the [Edit] button

Double-click the line to register in the [Terminal], or select the line to register and click the [Edit] button. The default value for each item is displayed in the terminal information.

MODBUS(R) Terminal

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3 -1	Terminal3-1	EMU4-BM1-MB	192.168.10.23	502	3
3 -2	Terminal3-2	EMU4-A2	192.168.10.23	502	3
3 -3	Terminal3-3	EMU4-A2	192.168.10.23	502	3
3 -4	Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3 -5	Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4					
5					
6					
7					
8					
9					
10					
11					

No.: 2
Name: Terminal2
Point type: MODBUS(R) Terminal[Supported] Generic MODBUS(R) Terminal

MODBUS(R) Terminal[Supported]

Model:  EMU4-HD1-MB
Energy measuring unit(high performance mode)

Protocol: MODBUS(R) RTU

IP address: 192 . 168 . 10 . 22 Port No.: 502

Slave address: 1

Model information


PhaseWire: 3P3W
RatedVoltage: 220V
RatedCurrent: 100A

Click the Edit button to enable changes

Edit
Delete
Register
Close


3 Entering or selecting each item

Enter or select the following items.

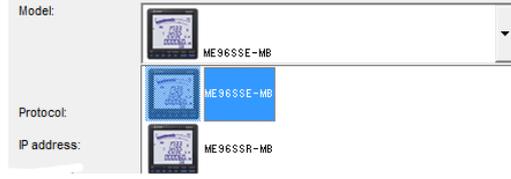[Terminal name]	<p>Enter the terminal name. (This terminal name is shown in the list of measuring points on the EcoWebServerIII page.)</p>		
			
	<table border="1"> <tr> <td>Characters</td> <td>Up to 24 characters</td> </tr> </table>	Characters	Up to 24 characters
Characters	Up to 24 characters		
	<table border="1"> <tr> <td>Prohibited characters</td> <td>The following characters cannot be registered: # ¥ / : , ; * ? " < > </td> </tr> </table>	Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >
Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >		
	<p>*1 If you use the characters in the list of the prohibited characters in Appendix, they may not be displayed correctly in the browser view of the EcoWebServerIII. *2 A duplicate terminal name cannot be registered. *3 For a multiple-circuit product, "-X" (X is a circuit number) is automatically appended at the end of the terminal name. (Up to 24 characters with "-X".)</p>		
[terminal group]	<p>Select the terminal group to be registered. To register our MODBUS support model, select MODBUS(R) Terminal[Supported]. To register a model other than above, select Generic MODBUS(R) Terminal.</p>		
[Model]	<p>Select a model. Available models : (☞ Refer to "5.4 List of supported terminals")</p>  <p>* When the terminal group is Generic MODBUS(R) Terminal, General terminal is set. * When collecting data by EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB, EMU4-CNT-MB, please select [To EcoMonitorPlus setting] from the list.</p>		
[Protocol]	<p>Select the communication protocol from MODBUS(R) TCP/MODBUS(R) RTU. When the terminal group is MODBUS Terminal [Supported], MODBUS(R) RTU is set.</p>		
[IP address]	<p>Set the IP address of the terminal.</p>		
[Port number]	<p>Set the communication port number of the terminal. 502 is automatically set.</p>		
[Slave Address]	<p>Set the slave address. Can be set only when the protocol is MODBUS(R) RTU. Setting range is from 1 to 247.</p>		
[Model information]	<p>Set the model information. * The setting items will differ according to the model (☞ Refer to "5.5 List of model information MODBUS(R) Terminal [Support terminal]").</p> 		

4 Registering

Click the button on the [MODBUS(R) terminal] dialog box to register the terminal.

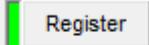	[Register] button : Register the terminal with the settings you made. The registration information will be reflected to the [Terminals list].
	[Close] button : Back to the [Project setting] dialog box.

*1 If the EcoMonitorPlus terminal is selected, the following setting is necessary.
Input IP address, port number, slave address , Number of extension unit and Model and press the [Register] button.


Item	Description
No.	Line number of the terminal registration screen. Automatically displayed.
Protocol	MODBUS(R) RTU is automatically set.
IP address	Set the IP address of the terminal.
Port No.	502 is automatically set.
Slave address	Select the slave address of the terminal.
Number of extension unit	Select the number of extension units connected to the terminal.
Model	Select the type name to be registered.
Model name	The model name corresponding to the selected type name is automatically displayed.
Number of circuit	The number of the measurement circuit corresponding to the selected type name is automatically displayed.

[<>]button can be used for swithing extension unit.

Model of main unit and extension unit vefers to **List of support terminals** for details.

*2 If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when the [Register] button is clicked.
Correct the setting to satisfy the conditions.

(Example of display)

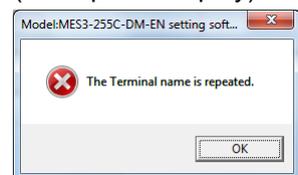


*3 If you click [Close] button without clicking the [Register] button after changing the entry, the message shown on the right will be displayed.

[Yes] : Register

[No] : Do not register

[Cancel]: Return to [MODBUS® terminal registration] dialog box

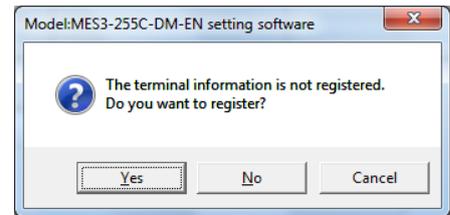

<Copying terminal information>

To copy registered terminal information, select the line to copy and press the right-click menu [Copy terminal unit] or the short-cut keys Ctrl+C.

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2		192.168.10.22	502	1
3 -1	Terminal3-1		192.168.10.23	502	3
3 -2	Terminal3-2		192.168.10.23	502	3
3 -3	Terminal3-3		192.168.10.23	502	3
3 -4	Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3 -5	Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4					

<Pasting terminal information>

To paste the copied terminal information, select the line to paste into, and press the right-click menu [Paste terminal unit] or the short-cut keys Ctrl+V.

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3 -1	Terminal3-1	EMU4-BM1-MB	192.168.10.23	502	3
3 -2	Terminal3-2	EMU4-A2	192.168.10.23	502	3
3 -3	Terminal3-3	EMU4-A2	192.168.10.23	502	3
3 -4	Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3 -5	Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4					
5					
6					
7					
8					



No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3 -1	Terminal3-1	EMU4-BM1-MB	192.168.10.23	502	3
3 -2	Terminal3-2	EMU4-A2	192.168.10.23	502	3
3 -3	Terminal3-3	EMU4-A2	192.168.10.23	502	3
3 -4	Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3 -5	Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4	Terminal1-4	EMU4-BD1-MB	192.168.10.21	502	2
5					

Remarks

- Multiple lines for terminals other than multi-circuit parts cannot be copied and pasted.
- Terminal information cannot be pasted into a registered line.
- The “-”+ pasted line No. is automatically added to the end of the pasted terminal name.
- IP address of the pasted terminal is set to IP address of the copied terminal.
- The default value is set in the pasted address.
- Slave address of the pasted terminal is set to the next number of the copied terminal.
- The pasted terminal information is automatically registered.
- You only register connected terminal.

Deleting registered terminal


This section describes how to delete a registered terminal.

1 Displaying MODBUS® terminal registration dialog box

Click the [MODBUS(R) Terminal] button in the dialog box of project setting.


2 Selecting a terminal you want to delete, and click the [Delete] button

Select a line of a terminal you want to delete in the terminal list, and then click the [Delete] button.

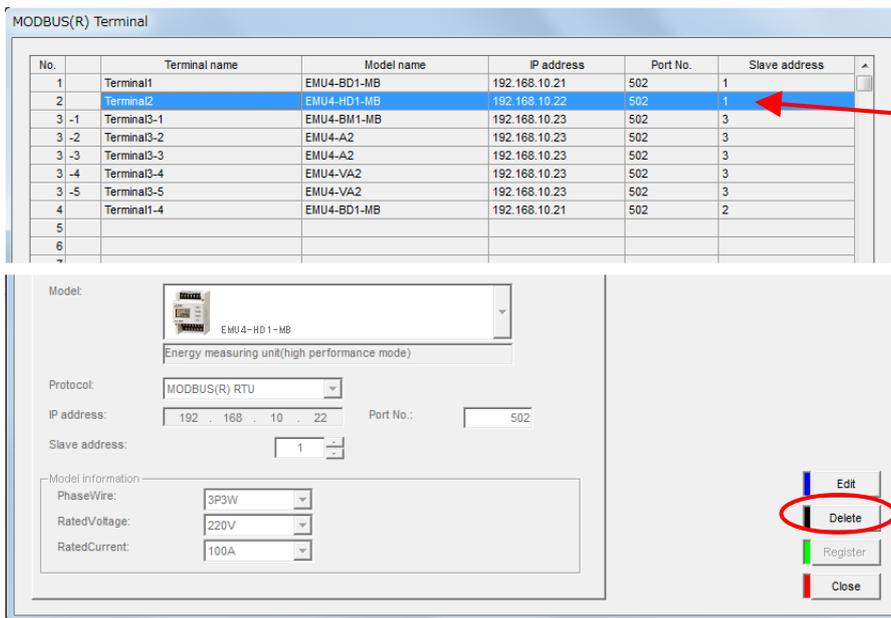


a line of a terminal you want to delete

- * If the terminal element of the selected terminal is registered as a measuring point, the message shown on the right will be displayed. Click the [OK] button to delete the measuring point first.

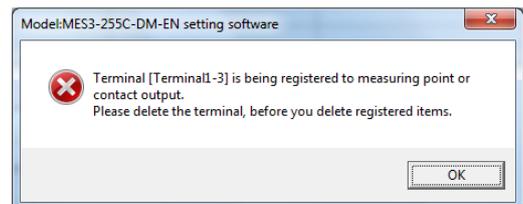

3 Deleting

A delete confirmation message appears. Click the button to delete.

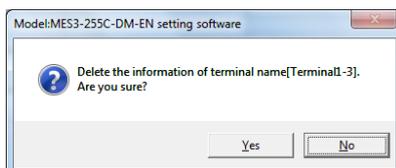

- [Yes] button : Delete the terminal and back to the [MODBUS® terminal registration] dialog box.
- [No] button : Cancel the deletion and back to the [MODBUS® terminal registration] dialog box.

After the terminal is deleted, its registration information is removed from the terminal list.

<To delete a multi-circuit product>

To delete a multiple-circuit product (EcoMonitorPlus), perform the step 1 to 3.

However, if you delete one circuit, the other circuits in the terminal (the terminal in the rows which have the same [No.]) will also be deleted automatically.

(Ex.) The first circuit in the EMU4-BM1-MB is deleted.

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3	Terminal3-1	EMU4-BM1-MB	192.168.10.23	502	3
3	Terminal3-2	EMU4-A2	192.168.10.23	502	3
3	Terminal3-3	EMU4-A2	192.168.10.23	502	3
3	Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3	Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4	Terminal1-4	EMU4-BD1-MB	192.168.10.21	502	2
5					
6					
7					
8					
9					
10					


Select the terminal 3-1 (1st acircuit) and click the [Delete] button.

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3					
4	Terminal1-4	EMU4-BD1-MB	192.168.10.21	502	2
5					
6					
7					

- The terminal 3-1 to 3-5 (1st to 5rd circuits) are deleted.
- Redisplay [Terminal No. 3] as a blank line

* If the other circuit in the terminal you select is used in the measuring point, the following message will appear.

Click the [OK] button to delete the measuring point first.

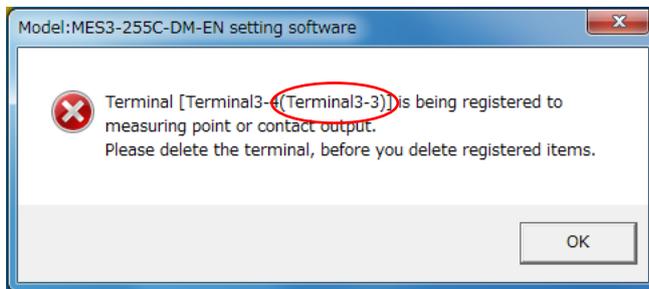

The circuit of the terminal whose name is shown in "()" is registered in the measuring point.

Remarks

- You cannot delete the terminal if it is registered as a measuring point. Delete the measuring point first, and then delete this terminal.
- The terminal can also be deleted by clicking the right-click menu [Delete terminal unit] or pressing the "Delete" key.

Editing registration information of a registered terminal

This section describes how to edit registration information of a terminal.

1 Displaying the [MODBUS(R) Terminal] dialog box

Click the [MODBUS® terminal registration] button in the dialog box of project setting.

2 Selecting a terminal you want to edit, and click the [Edit] button

Double-click the line of a terminal you want to edit in the terminal list, or select a line of a terminal you want to edit, and then click the [Edit] button.

The screenshot shows the 'MODBUS(R) Terminal' dialog box. At the top is a table with columns: No., Terminal name, Model name, IP address, Port No., and Slave address. The second row, 'Terminal2' with model 'EMU4-HD1-MB' and IP '192.168.10.22', is selected. A red arrow points to this row with the text 'a line of a terminal you want to edit'. Below the table is a form for editing the selected terminal. The form includes fields for 'No.' (2), 'Name' (Terminal2), 'Point type' (MODBUS(R) Terminal[Supported]), 'Model' (EMU4-HD1-MB), 'Protocol' (MODBUS(R) RTU), 'IP address' (192.168.10.22), 'Port No.' (502), and 'Slave address' (1). There are also dropdowns for 'PhaseWire' (3P3W), 'RatedVoltage' (220V), and 'RatedCurrent' (100A). At the bottom right of the form are buttons for 'Edit', 'Delete', 'Register', and 'Close'. The 'Edit' button is circled in red. A callout box with a red arrow pointing to the 'Edit' button contains the text: 'When click the [Edit] button, you can edit the line of terminal'.

No.	Terminal name	Model name	IP address	Port No.	Slave address
1	Terminal1	EMU4-BD1-MB	192.168.10.21	502	1
2	Terminal2	EMU4-HD1-MB	192.168.10.22	502	1
3	-1 Terminal3-1	EMU4-BM1-MB	192.168.10.23	502	3
3	-2 Terminal3-2	EMU4-A2	192.168.10.23	502	3
3	-3 Terminal3-3	EMU4-A2	192.168.10.23	502	3
3	-4 Terminal3-4	EMU4-VA2	192.168.10.23	502	3
3	-5 Terminal3-5	EMU4-VA2	192.168.10.23	502	3
4					
5					
6					
7					
8					
9					
10					
11					

3 Editing the items to be changed and registering them

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to those registering a new terminal.

Remarks

- You cannot edit the [Model] if it is registered in the measuring point. Delete the measuring point first, and then change the model.
- You cannot edit the [Model] of a multi-circuit product (EcoMonitorPlus). To change the model, delete the terminal first, and then perform a new registration.

4.5.3. PLC/GOT registration

This section describes the procedure on the [Log in PLC/GOT].

In addition to registering terminals as a measuring point, the EcoWebServerIII can read and write the device data to and from a connected PLC/GOT.

A maximum of 32 PLCs and GOT can be registered for acquiring devices.

Refer to “5.8 PLC settings” for details on the PLC settings.


Refer to “5.9 GOT communication settings” for details on the GOT settings.

Checking a list of registered PLCs/GOT

The following describes how to display and check the list of registered PLCs/GOT.

1 Displaying the [Log in PLC/GOT] dialog box

Click the [PLC/GOT] button in the dialog box of project setting.

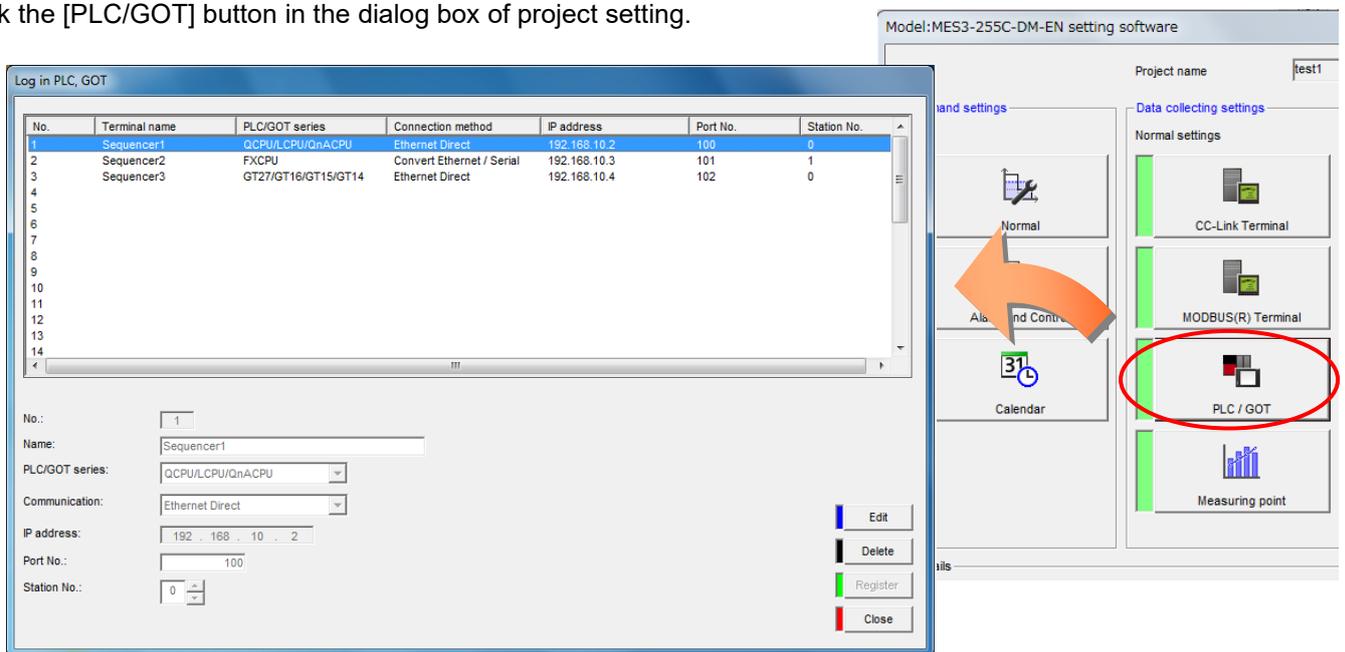

2 Checking the registration information

Check the following information displayed in the terminal list

- [No.] : PLC/GOT No.
- [Terminal name] : Name of PLC/GOT
- [PLC/GOT series] : PLC/GOT series
- [Connection method] : Communication type between PLC/GOT and EcoWebServerIII
- [IP address] : IP address of PLC/GOT
- [Port No.] : Port number for Ethernet of PLC/GOT
- [Station No.] : Station number of PLC serial communication when Ethernet/Serial conversion is selected for exchanging data with EcoWebServerIII.

Registering a new PLC/GOT


This section describes how to register a new PLC/GOT.

1 Displaying the [Log in PLC/GOT] screen

Click the [PLC/GOT] button in the dialog box of project setting.


2 Selecting a line to register, and click the [Edit] dialog box

Double-click a line to register in the terminal list or select a line to register, and click the [Edit] button. The default value is displayed for each item in the PLC/GOT information.

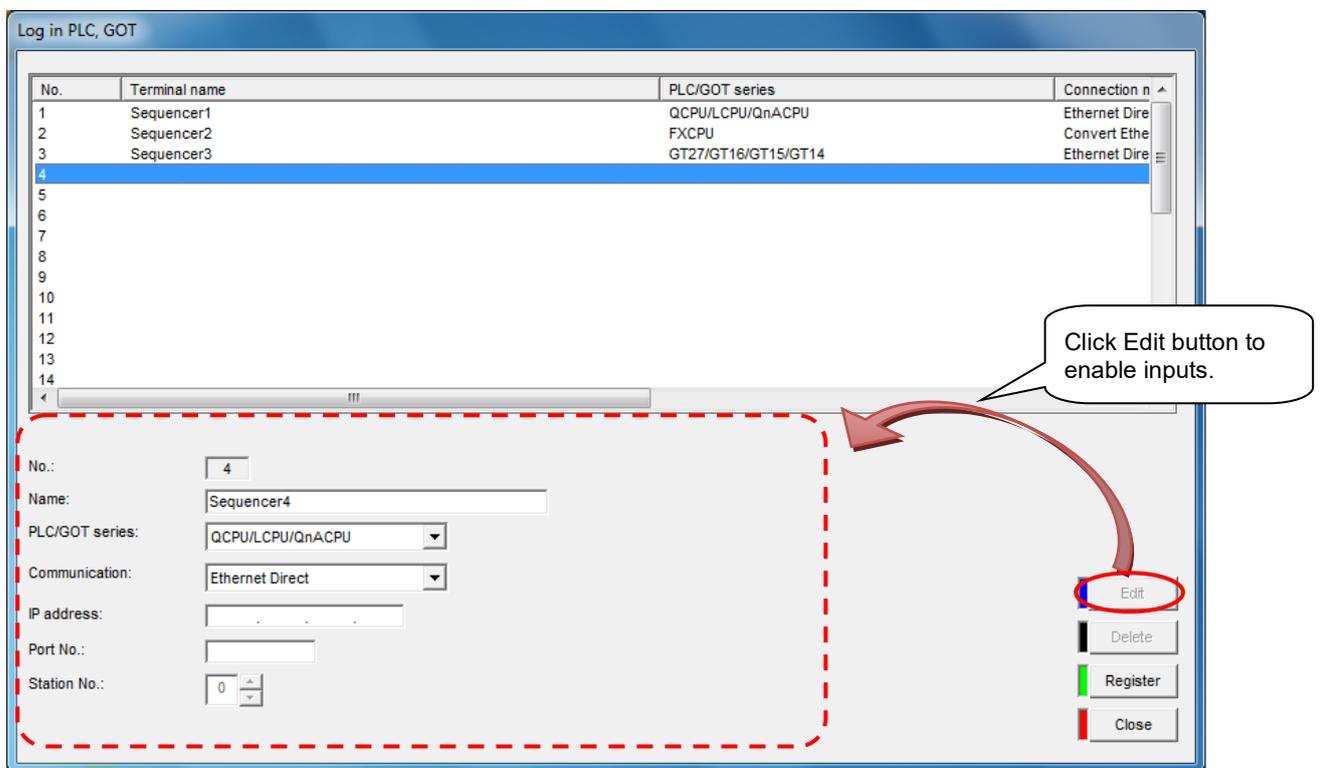


3 Entering or selecting the items

Enter or select the following items.

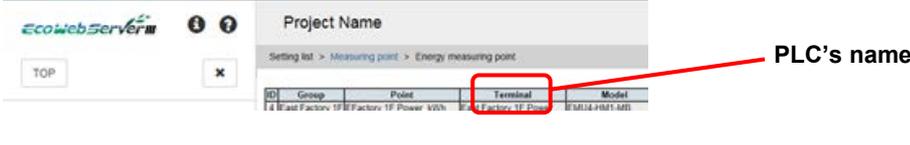[Name]	<p>Enter a name of a PLC/GOT connecting the EcoWebServerIII. (This terminal name is shown in the list of measuring points on the EcoWebServerIII page.)</p>  <p>Characters Up to 24 characters</p> <p>Prohibited characters The following characters cannot be registered: # ¥ / : . ; * ? " < > </p> <p>^{*1} If you use the characters in the list of the prohibited characters in Appendix, they may not be displayed correctly in the browser view of the EcoWebServerIII. ^{*2} A duplicate terminal name cannot be registered.</p>												
[PLC/GOT series]	<p>Select from the PLC/GOT connected to EcoWebServerIII.</p> <ul style="list-style-type: none"> • iQ-R • iQ-F • QCPU/LCPU/QnACPU • ACPU • AnACPU/AnUCPU • FXCPU • GT27/GT16/GT15/GT14 <p>* When using GT25 or GT SoftGOT2000, select "GT27/GT16/GT15/GT14".</p>												
[Connection method]	<p>Communication type between EcoWebServerIII and PLC which select from</p> <ul style="list-style-type: none"> • Ethernet Direct • Convert Ethernet/Serial For GT27/GT25GT16/GT15/GT14, and GT SoftGOT2000: [Ethernet Direct] For ACPU, AnACPU/AnUCPU, FXCPU: [Convert Ethernet/Serial] 												
[IP address]	<p>Type in the same value as the IP address set for the PLC/GOT communicating with the EcoWebServerIII. [Range of configurable IP address]</p> <table border="1" data-bbox="438 1220 1276 1355"> <thead> <tr> <th>Class</th> <th>Host bit of IP address</th> <th>IP address range</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>0</td> <td>1.0.0.0~126.255.255.255</td> </tr> <tr> <td>B</td> <td>10</td> <td>128.0.0.0~191.255.255.255</td> </tr> <tr> <td>C</td> <td>110</td> <td>192.0.0.0~223.255.255.255</td> </tr> </tbody> </table> <p>^{*1} The following IP addresses cannot be registered. - "0.0.0.0", "xxx.xxx.xxx.255" (xxx are any values) - The same IP address as that of the client PC</p>	Class	Host bit of IP address	IP address range	A	0	1.0.0.0~126.255.255.255	B	10	128.0.0.0~191.255.255.255	C	110	192.0.0.0~223.255.255.255
Class	Host bit of IP address	IP address range											
A	0	1.0.0.0~126.255.255.255											
B	10	128.0.0.0~191.255.255.255											
C	110	192.0.0.0~223.255.255.255											
[Port No.]	<p>Ethernet communication port number</p> <table border="1" data-bbox="406 1489 662 1534"> <tr> <td>Range</td> <td>0 to 65535</td> </tr> </table>	Range	0 to 65535										
Range	0 to 65535												
[Station No.]	<p>When Ethernet/Serial conversion is set for exchanging data between the EcoWebServerIII and PLC, set the station number of the connected serial communication module.</p> <table border="1" data-bbox="406 1601 622 1635"> <tr> <td>Range</td> <td>0 to 31</td> </tr> </table>	Range	0 to 31										
Range	0 to 31												

Remarks

- When collecting data, outputting data, outputting data (demand monitoring), and demand setting (PLC) to one PLC, register them as different PLCs with different port numbers.

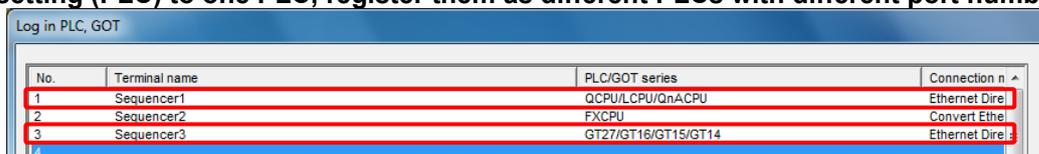

No.	Terminal name	PLC/GOT series	Connection n
1	Sequencer1	QCPU/LCPU/QnACPU	Ethernet Dire
2	Sequencer2	FXCPU	Convert Ethe
3	Sequencer3	GT27/GT16/GT15/GT14	Ethernet Dire

4 Registering


Click the button on the [PLC/GOT] dialog box to register the terminal.



[Register] button : Register the PLC/GOT with the settings you made.
The registration information will be reflected to the dialog box of project setting.


[Close] button : Back to the dialog box of project setting.

- * If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when [Register] button is clicked. Correct the setting to satisfy the conditions. (Example of display)

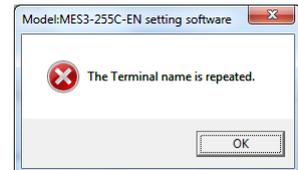

- * If you click [Close] button without clicking the [Register] button after changing the entry, the message shown on the right will be displayed.

[Yes] button : Register
[No] button : Not register
[Cancel] button : Back to the [Log in PLC/GOT] dialog box

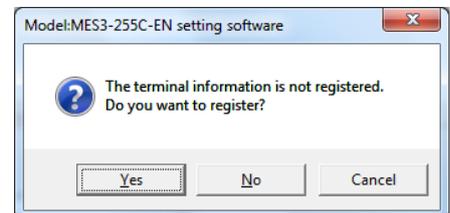

<Copying PLC/GOT information>

To copy registered PLC/GOT information, select the line to copy and press the right-click menu [Copy the PLC, GOT information] or the short-cut keys Ctrl+C.

No.	Terminal name	PLC/GOT series	Connection method	IP address	Port No.
1	Sequencer1	QCPU/LCPU/QnACPU	Ethernet Direct	192.168.10.2	100
2	Sequencer2	FXCPU	Convert Ethernet / Serial	192.168.10.3	101
3	Sequencer3	GT27/GT16/GT15/GT14	Ethernet Direct	192.168.10.4	102
4					
5					
6					
7					

Copy the PLC, GOT information Ctrl+C

Paste of PLC, GOT information Ctrl+V

Delete of PLC, GOT information Del

<Pasting PLC/GOT information>

To paste the copied PLC/GOT information, select the line to paste and press the right-click menu [Paste of PLC, GOT information] or the short-cut keys Ctrl+V.

No.	Terminal name	PLC/GOT series	Connection method	IP address	Port No.
1	Sequencer1	QCPU/LCPU/QnACPU	Ethernet Direct	192.168.10.2	100
2	Sequencer2	FXCPU	Convert Ethernet / Serial	192.168.10.3	101
3	Sequencer3	GT27/GT16/GT15/GT14	Ethernet Direct	192.168.10.4	102
4					
5					
6					
7					
8					
9					

Copy the PLC, GOT information Ctrl+C

Paste of PLC, GOT information Ctrl+V

Delete of PLC, GOT information Del



Log in PLC, GOT

No.	Terminal name	PLC/GOT series	Connection method	IP address	Port No.
1	Sequencer1	QCPU/LCPU/QnACPU	Ethernet Direct	192.168.10.2	100
2	Sequencer2	FXCPU	Convert Ethernet / Serial	192.168.10.3	101
3	Sequencer3	GT27/GT16/GT15/GT14	Ethernet Direct	192.168.10.4	102
4	Sequencer2-4	FXCPU	Convert Ethernet / Serial	192.168.10.1	101
5					

No.:

Name:

PLC/GOT series:

Communication:

IP address:

Port No.:

Station No.:

Edit

Delete

Register

Close

Remarks

- Multiple lines cannot be copied and pasted.
- PLC/GOT information cannot be pasted into a registered line.
- The “-”+ pasted line No. is automatically added to the end of the pasted terminal name.
- The default value is set in the pasted IP address.
- The pasted PLC/GOT information is automatically registered.

Deleting a registered PLC/GOT


This section describes how to delete a registered PLC/GOT.

1 Displaying the [Log in PLC/GOT] dialog box

Click the [PLC/GOT] button in the dialog box of project setting.


2 Selecting a PLC/GOT you want to delete, and clicking the [Delete] button

Select a line of a PLC/GOT you want to delete in the list in the terminal list, and then click the [Delete] button

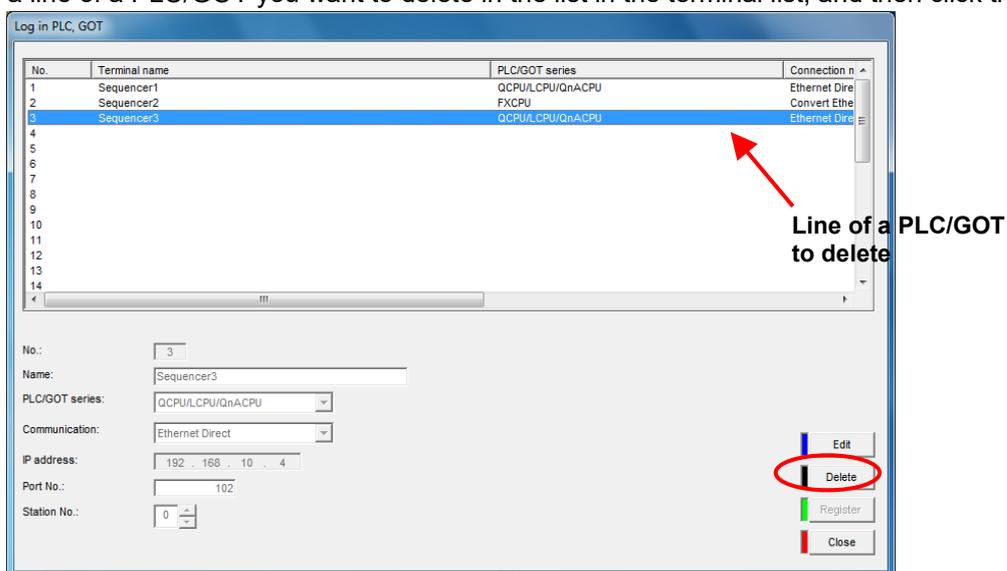


* If the selected PLC/GOT is registered to any of the measurement point, contact output, data output group, data output group (demand monitoring), or demand setting (PLC), an error message as shown on the right is displayed. Click the [OK] button and delete the registered item such as measurement point first.

Display example

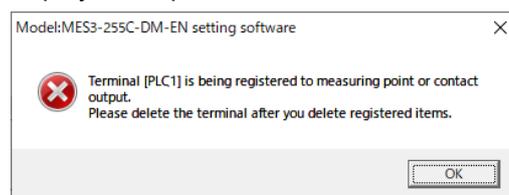

3 Deleting the project

A delete confirmation message appears. Click the button to delete the terminal.

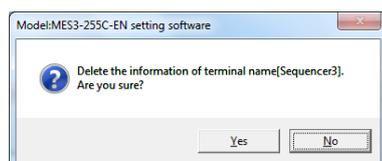

[Yes] button : Delete the PLC/GOT and back to the [Log in PLC/GOT] dialog box.

[No] button : Cancel the deletion and back to the [Log in PLC/GOT] dialog box.

After the terminal is deleted, its registration information is removed from the terminal list.

Remarks

- The terminal can also be deleted by clicking the right-click menu [Delete of PLC, GOT information] or pressing the "Delete" key.

Editing registration information of a registered PLC/GOT


This section describes how to edit registration information of a PLC/GOT.

1 Displaying the [Log in PLC/GOT] dialog box

Click the [PLC/GOT] button in the dialog box of project setting.

2 Selecting a PLC/GOT you want to edit, and click the [Edit] button

Select a line of a PLC/GOT you want to edit, and then click the [Edit] button.

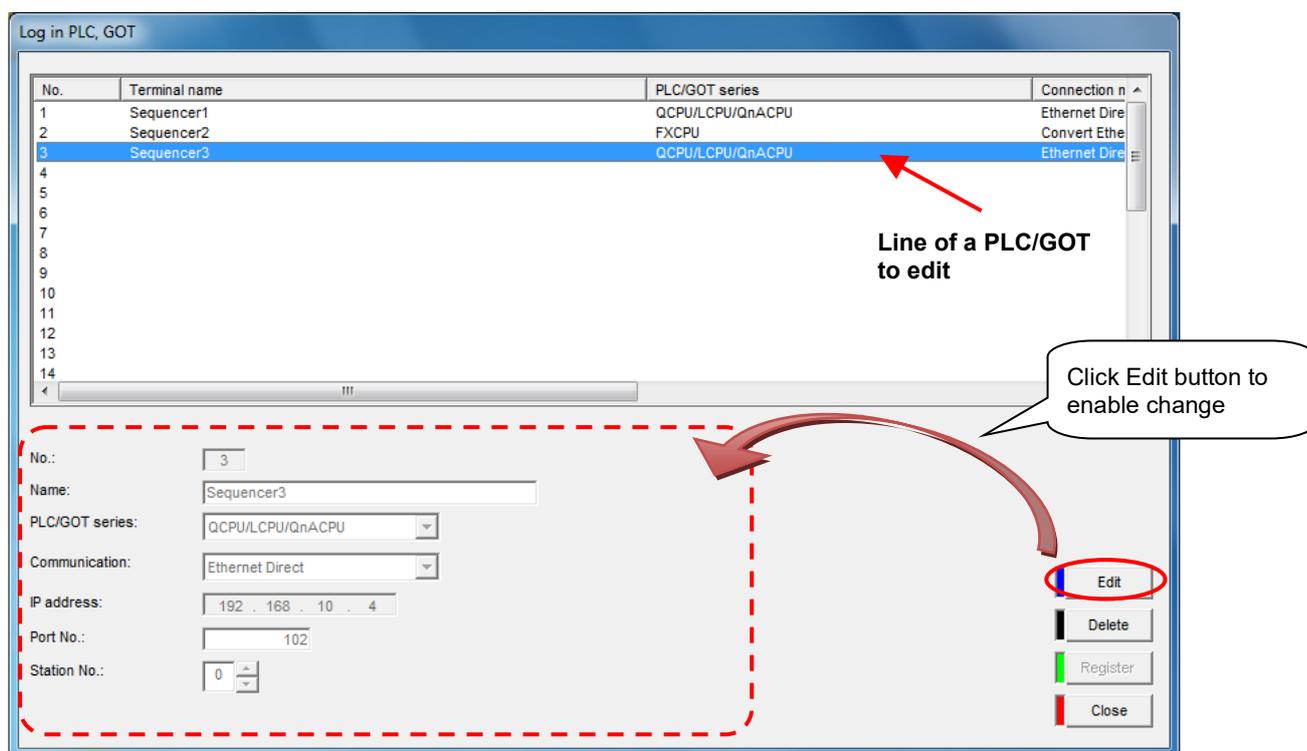

3 Editing the items to be changed and registering them

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to those registering a new PLC/GOT.

Remarks

- You cannot edit the [PLC/GOT Series] if it's measuring point is registered. Delete the measuring point first, and then edit the PLC/GOT series.

4.5.4. Measuring point registration

This section explains the procedure on the [Measuring point].


A measuring point refers to a data item from measuring terminal equipment or a device of PLC/GOT. A maximum of 255 points can be registered.

Checking a list of registered measuring points

The following describes how to display and check the list of measuring points.

1 Displaying the [Measuring point] dialog box

Click the [Measuring point] button in the dialog box of project setting.

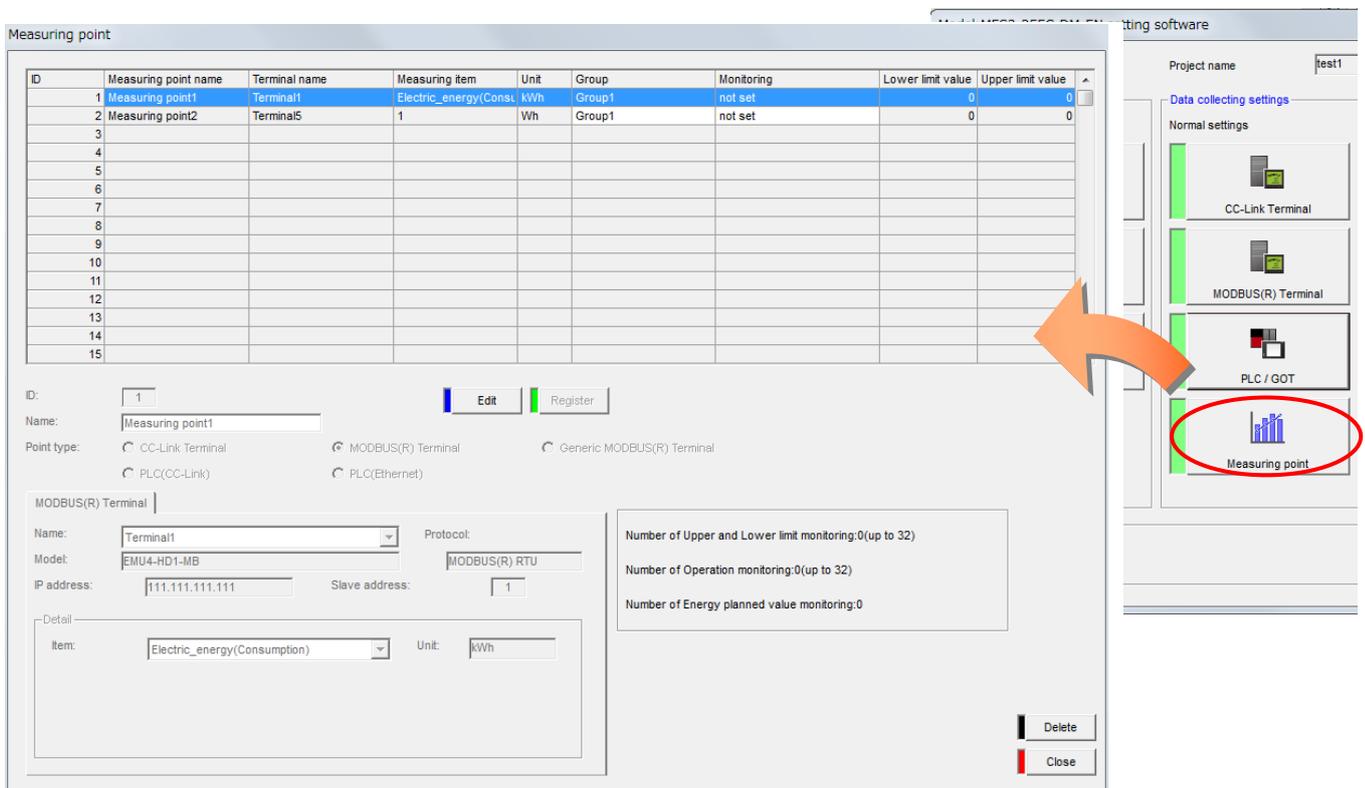

2 Checking the registration information

Check the following information displayed in [Measuring point list].

- [ID] : Measuring point ID
- [Measuring point name], [Measured item], [Unit] : Registered measuring point, registered measuring item, unit
- [Group] : Measuring point group name
- [Monitoring] : Set monitoring type
- [Lower limit value], [Upper limit value] : Lower limit monitoring, upper limit monitoring setting value

Registering a new measuring point

This section describes how to register a new measuring point.

1 Displaying the [Measuring point] dialog box

Click the [Measuring point] button in the dialog box of project setting.

2 Selecting a line to register, and clicking the [Edit] button

Double-click a line to register in the measuring point list, or select a line to register and click the [Edit] button. The default value is displayed for each item in the measuring point information.

ID	Measuring point name	Terminal name	Measuring item	Unit	Group	Monitoring	Lower limit value	Upper limit value
1	Measuring point1	Terminal1	Electric_energy(Consumption)	kWh	Group1	not set	0	0
2	Measuring point2	Terminal5	1	Wh	Group1	not set	0	0
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								
13								
14								
15								

Click the Edit button to enable inputs.

ID: 1

Name: Measuring point1

Point type: CC-Link Terminal MODBUS(R) Terminal Generic MODBUS(R) Terminal
 PLC(CC-Link) PLC(Ethernet)

MODBUS(R) Terminal

Name: Terminal1 Protocol: MODBUS(R) RTU

Model: EMU4-HD1-MB

IP address: 111.111.111.111 Slave address: 1

Detail

Item: Electric_energy(Consumption) Unit: kWh

Number of Upper and Lower limit monitoring: 0 (up to 32)

Number of Operation monitoring: 0 (up to 32)

Number of Energy planned value monitoring: 0

Delete Close

Remarks

- You can select and register any measuring point. (Also, you can create a free ID.)
- You cannot register a measuring point when no terminal is registered.

3 Selecting a type of a terminal

Select the terminal type with the [Point type] radio button.

Type of terminal registered in measuring point		Selected radio button
Measuring device terminal	CC-Link terminal	CC-Link terminal
	MODBUS® terminal [Support terminal]	MODBUS® terminal
PLC/GOT connected to Ethernet CH2 port		PLC[Ethernet]
CC-Link connection PLC registered with CC-Link terminal		PLC[CC-Link]
General MODBUS® terminal registered by MODBUS® terminal		General MODBUS® terminal

4 Entering a measuring point name

Enter a name of a measuring point.
 (This measuring point name is shown in the graphs or the list of measuring points on the EcoWebServerIII page)

Name:



The entry conditions are as follow.

Characters	Up to 24 characters
Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >

*1 If you use the characters in the list of the prohibited characters in Appendix, they may not be displayed correctly in the browser view of the EcoWebServerIII.


*2 A duplicate measuring point name can be registered.

5 - (1) Entering or selecting the items

For a measuring point of Measurement device terminal

Select the [CC-Link Terminal] radio button, and enter or select the following items.

- * For CC-Link communication model, select [CC-Link Terminal] to register a CC-Link terminal, and select [MODBUS(R) Terminal] to register a MODBUS terminal.

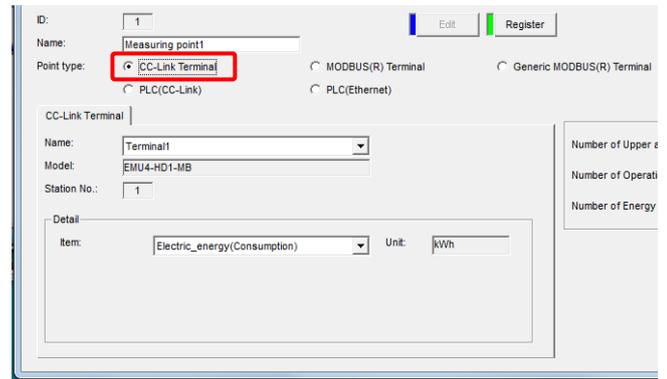

(1) [Name]

Select a terminal.

- *1 The terminal name shown in the pull-down menu is the name registered in the [Terminal].
- *2 For CC-Link, the station number is displayed instead of main address and sub address. For a MODBUS® terminal, protocol, IP address, and slave address are displayed instead of main address and sub address.


(2)-1 [Detail]

• [Item]

Select a measured item from the pull-down menu.

(The [Unit] is entered automatically.)


- * The measured item varies depending on the model.

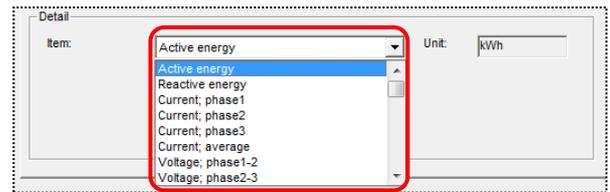

• [PF range]

When the power factor or the power factor demand is selected for the measured item, select a range of the power factor display.

- * The selection range varies depending on the model.

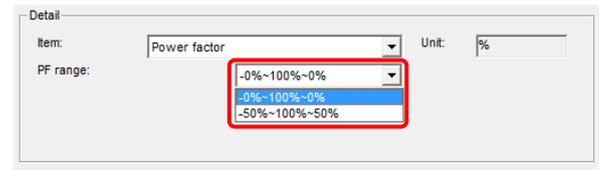


• [Factor]

When a pulse counter value is selected for the measured item, enter a pulse multiplier.

And select or type a unit.

- * The input range varies depending on the model.

(You can enter a unit up to 8 characters.)

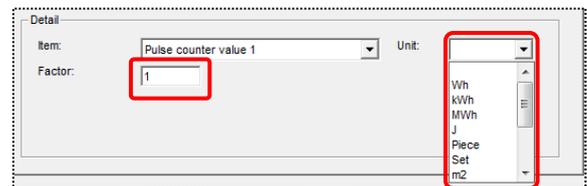

2.-2 [Detail] (Analog (voltage/current) input type)

When an analog input type of a terminal is selected, select the following items.

- * The setting item/range varies depending on the model.

- **[Ch]** : Select a measured ch which data will be collected from.
- **[Unit]** : Select or type a unit. (You can enter a unit up to 8 characters.)
- **[Input scope]** : Select an input range. The input range should be the same setting as the terminal.
- **[Scale]** : Enter a scale range of an actual measurement value for the analog input.
 - * This is disabled when the [PowerFactor(PF)] is selected.
- **[Decimal]** : Select the number of digits after the scale conversion.
- **[Power Factor (PF)]** : Select this check box to convert a scale of a power factor.
- **[PF range]** : Select a display range of a power factor. This is enabled only when the [PowerFactor(PF)] is selected.

2.-3 [Detail] (Analog (temperature) input type)

When a temperature input type of a terminal is selected, select the following items.

- * The setting item/range varies depending on the model.

- **[Item]** : Select an item which data will be collected from.

2.-4 [Detail] (Pulse input type)

When a pulse input type of a terminal is selected, select the following items.

- * The setting item/range varies depending on the model.

- **[Ch]** : Select a measured ch which data will be collected from.
- **[Factor]** : Enter a pulse multiplier.
- **[Unit]** : Select or type a unit. (You can enter a unit up to 8 characters.)

2.-5 [Detail] (Digital input type)

When a digital input type of a terminal is selected, select the following items.


- * The setting item/range varies depending on the model.

- **[Ch]** : Select a monitoring ch. Enter a pulse multiplier.
- **[Unit]** : Type a unit. (You can enter a unit up to 8 characters.)
 - * This entry is optional.
- **[Record the status]** : Select this check box to save an operation history to a file.
 - * Up to 32 operation histories can be recorded.

5 - (2) Entering or selecting the items

For a measuring point of a PLC (Ethernet connection)

Select the [PLC(Ethernet)] radio button, and enter or select each of the following items.

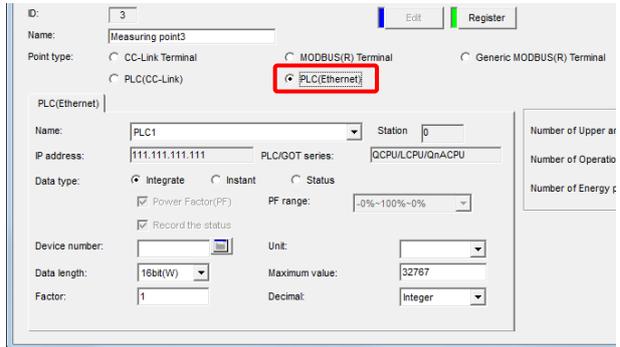

(1) [Name]

Select a PLC/GOT.

- * The name shown in the pull-down menu is the terminal name of the PLC/GOT terminal name registered with [PLC/GOT].
The registered PLC/GOT information is displayed for station number, IP address and CPU series.

(2) [Data type]

Select a data type from [Integrate], [Instant], and [Status].

*1 When [Instant] is selected:

The [Power Factor (PF)] selection check box is enabled.

Select the check box and specify the range in the [PF range] to register the power factor.



*2 When [Status] is selected:

The [Record the state] selection check box is enabled.

Select this check box to save an operation history to a file.

* Up to 32 operation histories can be recorded.



(3) [Device number]


Enter a device number with 7 characters in uppercase (including the device name).



- * For the possible range, refer to "5.7 List of measured items of devices".

The setting range appears when the  button in the input field is clicked.


- * Characters not included in the setting range cannot be registered.

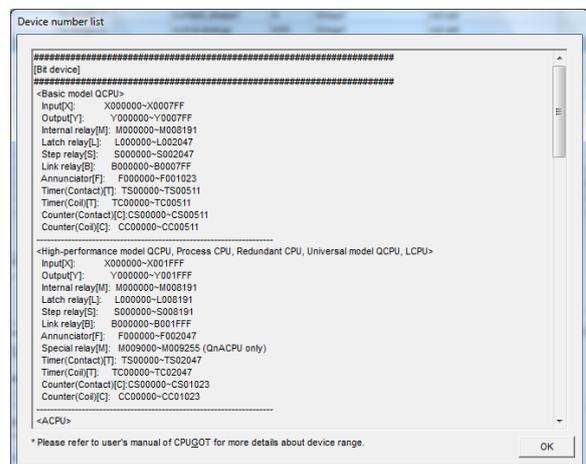

(4) [Unit]

Select or directly type a unit.
When you type it directory, the entry conditions are as follows.

- Characters Up to 8 characters
- Prohibited The following characters cannot be registered.
- characters # ¥ : , ; * ? " < > |

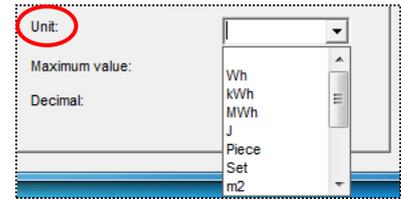

*1 When [Status] is selected, the selection pull-down menu is disabled. (Only direct typing)

*2 When [Status] is selected, this entry is optional.

(5) [Data length]

Select a data length.
[Integrate] or [Instant]: Select from [16bit(W)] and [32bit(L)].
[Status]: Fixed to [1bit(B)]



(6) [Maximum value] (* only when [Integrate] selected)

Enter the max. value of the data range of the integrated count value.

Maximum value:

(Ex.) When the data range is from 0 to 999999, the max. integrated count value is 999999.

* When the value exceeds the data range and returns to 0, the EcoWebServerIII performs one-cycle operation based on the max. integrated count value.

The input range is as follows. Enter the value in decimal.

- Data length 16 bit (W) 1 to 32767
- Data length 32 bit (L) 1 to 2147483647

(7) [Factor] (* only when [Integrate] or [Instant] selected)

Set a multiplier.

Factor:


The input range is as follows. Enter the value in decimal.

Data length 16 bit (W)	0.00001 to 99999 (7 digits (including decimal point), up to 5 digits after the decimal point)
Data length 32 bit (L)	0.00001 to 1 (7 digits (including decimal point), up to 5 digits after the decimal point)

(8) [Decimal] (* only when [Integrate] or [Instant] selected)

Set the number of digits after the decimal point for displaying data.

Select from [Integer], [1 digit], [2 digits], [3 digits], [4 digits], and [5 digits].

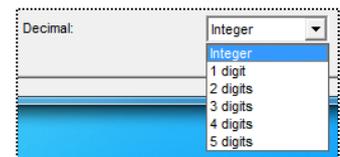

* The possible range of digits after the decimal point is set by the setting of the data length and the multiplier.


【Data length 16bit(W)】	
Factor	Possible digits after the decimal point
0.00001 to 1.00000	Integer, 1 to 5 digits
1.00001 to 10.0000	Integer, 1 to 4 digits
10.0001 to 100.000	Integer, 1 to 3 digits
100.001 to 1000.00	Integer, 1 or 2 digits
1000.01 to 10000.0	Integer, 1 digit
10000.1 to 99999.0	Integer

【Data length 32bit(L)】	
Factor	Possible digits after the decimal point
0.00001	Integer, 1 to 5 digits
0.00002 to 0.00010	Integer, 1 to 4 digits
0.00011 to 0.00100	Integer, 1 to 3 digits
0.00101 to 0.01000	Integer, 1 or 2 digits
0.01001 to 0.10000	Integer, 1 digit
0.10001 to 1	Integer

5 - (3) Entering or selecting the items

For a measuring point of a PLC (CC-Link communication)

Select the [Device] radio button, and enter or select each of the following items.

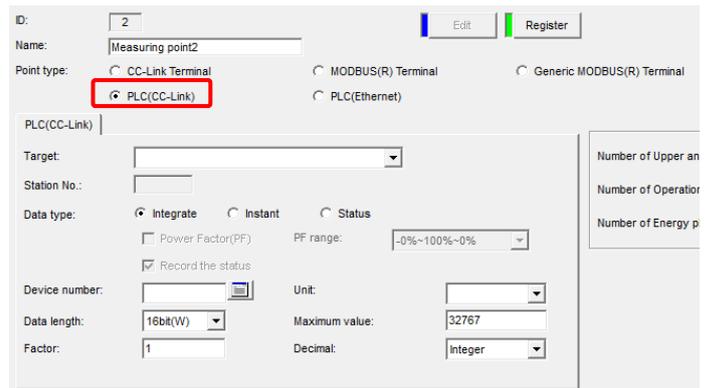

(1) [Target]

Select a terminal of the PLC(CC-Link).

* Targets in the pull-down menu are QJ61BT11N or LCPULJ61BT11 terminals registered in [Terminal].

(2) [Data type]

Select a data type from [Integrate], [Instant], and [Status].

*1 When [Instant] is selected:

The [Power Factor(PF)] selection check box is enabled.

Select the check box and specify the range in the [PF range] to register the power factor.



*2 When [Status] is selected:

The [Record the status] selection check box is enabled.

Select this check box to save an operation history to a file.

* Up to 32 operation histories can be recorded.



(3) [Device number]


Enter a device number with 7 characters in uppercase (including the device name).



* For the possible range, refer to "5.7 List of measured items of devices".

The setting range appears when the [icon] button in the input field is clicked.

* Characters not included in the setting range cannot be registered.

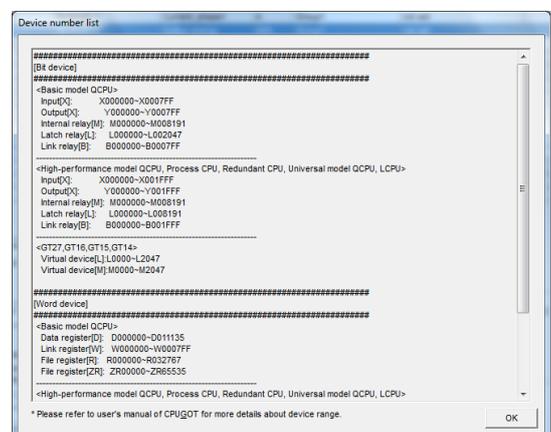


(4) [Unit]

Select or directly type a unit.

When you type it directory, the entry conditions are as follows.

Characters	Up to 8 characters
Prohibited characters	The following characters cannot be registered. # ¥ : , ; * ? " < >

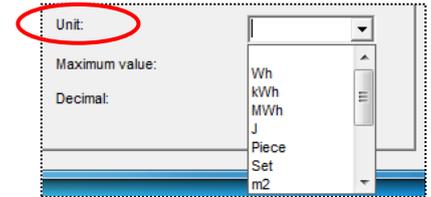

*1 When **Operation monitoring** is selected, the selection pull-down menu is disabled. (Only direct typing)

*2 When **Operation monitoring** is selected, this entry is optional.

(5) [Data length]

Select a data length.

[Integrate] or [Instant]: Select from [16bit(W)] and [32bit(L)].

[Status]: Fixed to [1bit(B)]



(6) [Maximum value] (* only when [Integrate] selected)

Enter the max. value of the data range of the integrated count value.

Maximum value:

(Ex.) When the data range is from 0 to 999999, the max. integrated count value is 999999.

* When the value exceeds the data range and returns to 0, the EcoWebServerIII performs one-cycle operation based on the max. integrated count value.

The input range is as follows. Enter the value in decimal.

Data length 16 bit (W)	1 to 32767
Data length 32 bit (L)	1 to 2147483647

(7) [Factor] (* only when [Integrate] or [Instant] selected)

Enter the max. value of the data range of the integrated count value.

Factor:


The input range is as follows. Enter the value in decimal.

Data length 16bit (W)	0.00001 to 99999 (7 digits (including decimal point), up to 5 digits after the decimal point)
Data length 32bit (L)	0.00001 to 1 (7 digits (including decimal point), up to 5 digits after the decimal point)

(8) [Decimal] (* only when [Integrate] or [Instant] selected)

Set the number of digits after the decimal point for displaying data.

Select from [Integer], [1 digit], [2 digits], [3 digits], [4 digits], and [5 digits].

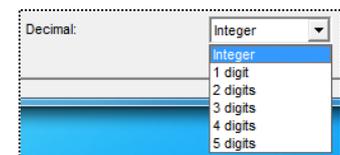

* The possible range of digits after the decimal point is set by the setting of the data length and the multiplier.

[Data length 16 bit (W)]	
Factor	Possible digits after the decimal point
0.00001 to 1.00000	Integer, 1 to 5 digits
1.00001 to 10.0000	Integer, 1 to 4 digits
10.0001 to 100.000	Integer, 1 to 3 digits
100.001 to 1000.00	Integer, 1 or 2 digits
1000.01 to 10000.0	Integer, 1 digit
10000.1 to 99999.0	Integer

[Data length 32 bit (L)]	
Factor	Possible digits after the decimal point
0.00001	Integer, 1 to 5 digits
0.00002 to 0.00010	Integer, 1 to 4 digits
0.00011 to 0.00100	Integer, 1 to 3 digits
0.00101 to 0.01000	Integer, 1 or 2 digits
0.01001 to 0.10000	Integer, 1 digit
0.10001 to 1	Integer

5 - (4) Input and select items

For measurement point of general MODBUS terminal

For the measuring points of general MODBUS terminal, the supported data type is integer only.

- (1) **[Terminal Name]**
Select the terminal.

*1 Terminal names displayed in the pulldown menu are General purpose MODBUS terminals registered in [Terminal registration].

- (2) **[Data type]**
Select a data type from [Integrate], [Instant], and [Status].

*1 When [Instant] is selected:
The [Power Factor(PF)] selection check box is enabled.
Select the check box and specify the range in the [PF range] to register the power factor.

*2 When [Status] is selected:
The [Record the status] selection check box is enabled.
Select this check box to save an operation history to a file.

* Up to 32 operation histories can be recorded.

- (3) **[Function code]**
Select the function code used to read data.

Function code	How to read data
1	Read coil
2	Read input
3	Read restoration register
4	Read input register

Integration value or instantaneous value: Select from 3 or 4

Operation monitoring : Select from 1, 2, 3, and 4.


- (4) **[Data address]**
Enter a data address.
Input range is 0 to 65535

(5) [Unit]

Select or directly type a unit.

When you type it directly, the entry conditions are as follows.

Characters	Up to 8 characters
Prohibited characters	The following characters cannot be registered. # ¥ : , ; * ? " < >

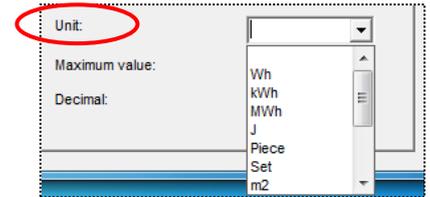


*1 When **Operation monitoring** is selected, the selection pull-down menu is disabled. (Only direct typing)

*2 When **Operation monitoring** is selected, this entry is optional.

(6) [Register Size (word)]

Select Number of registers.

Register Size	Data format
1	Without sign
2	With sign: Higher 16 bits/Lower 16 bits
2 (Word swap)	With sign: Lower 16 bits/Higher 16 bits

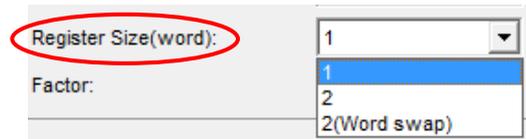

Integration value or instantaneous value	Select from 1, 2, and 2(Word swap)	
Operation monitoring	Function code: 1, 2	1 Fixed
	Function code: 3, 4	No setting

(7) [Maximum value] (* only when [Integrate] selected)

Enter the max. value of the data range of the integrated count value.

Maximum value:

(Ex.) When the data range is from 0 to 999999, the max. integrated count value is 999999.

* When the value exceeds the data range and returns to 0, the EcoWebServerIII performs one-cycle operation based on the max. integrated count value.

The input range is as follows. Enter the value in decimal.

1 Number of registers (word) 1	1 to 32767
Number of registers (word) 2, 2 (Word swap)	1 to 2147483647

(8) [Factor] (* only when [Integrate] or [Instant] selected)

Enter the max. value of the data range of the integrated count value.

Factor:


The input range is as follows. Enter the value in decimal.

Data length 16bit (W)	0.00001 to 99999 (7 digits (including decimal point), up to 5 digits after the decimal point)
-----------------------	---

(9) [Decimal] (* only when [Integrate] or [Instant] selected)

Set the number of digits after the decimal point for displaying data.

Select from [Integer], [1 digit], [2 digits], [3 digits], [4 digits], and [5 digits].

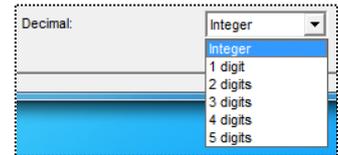

* The possible range of digits after the decimal point is set by the setting of the data length and the multiplier.

[Number of registers (word) 1]	
Factor	Possible digits after the decimal point
0.00001 to 1.00000	Integer, 1 to 5 digits
1.00001 to 10.0000	Integer, 1 to 4 digits
10.0001 to 100.000	Integer, 1 to 3 digits
100.001 to 1000.00	Integer, 1 or 2 digits
1000.01 to 10000.0	Integer, 1 digit
10000.1 to 99999.0	Integer

[Number of registers (word) 2, 2 (Word swap)]	
Factor	Possible digits after the decimal point
0.00001	Integer, 1 to 5 digits
0.00002 to 0.00010	Integer, 1 to 4 digits
0.00011 to 0.00100	Integer, 1 to 3 digits
0.00101 to 0.01000	Integer, 1 or 2 digits
0.01001 to 0.10000	Integer, 1 digit
0.10001 to 99999.0	Integer

6 Registering

Click the button on the [Measuring point] dialog box to register a measuring point.




[Register] button : Register the measuring point information you set.

[Close] button : Back to the [Measuring point list] dialog box.

- * If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when [Register] button is clicked. Correct the setting to satisfy the conditions.

(Example of display)

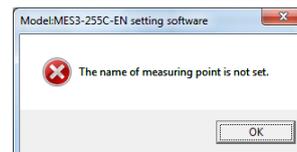


- * If you click [Close] button without clicking the [Register] button after changing the entry, the message shown on the right will appear.

[Yes] : Register

[No] : Do not register.

[Cancel]: Return to [Measuring point] screen

(Example of display)

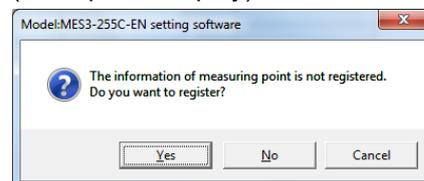

Setting the measuring point group

This section described how to set measuring point group.

1 Setting the measuring point group

Set the measuring point group.

Select the group to set for the measuring point from the [Group] selection pull-down menu.

Measuring item	Unit	Group	Monitoring
Electric energy(Consumption)	kWh	<input checked="" type="checkbox"/> Group1	
Current, phase1	A	<input type="checkbox"/> Group2	
Active energy	kWh	<input type="checkbox"/> Group3	
HV, phase1-2 D.ratio	%	<input type="checkbox"/> < Group setting >	

* To newly register a group, select <Group setting>, and open the "Measuring point group setting screen".

(☞ Refer to 4.5.4 Measuring point group registration)

² The measuring point group is automatically registered when selected from the pull-down menu.

³ When the measuring point is newly registered, it will be automatically registered in the [No.1] as the default.

Measuring point group set

No.	Name
1	Group1
2	Group2
3	Group3
4	(No setting)
5	(No setting)
6	(No setting)
7	(No setting)
8	(No setting)
9	(No setting)
10	(No setting)
11	(No setting)
12	(No setting)
13	(No setting)
14	(No setting)
15	(No setting)
16	(No setting)
17	(No setting)
18	(No setting)
19	(No setting)
20	(No setting)
21	(No setting)
22	(No setting)
23	(No setting)
24	(No setting)
25	(No setting)
26	(No setting)
27	(No setting)
28	(No setting)
29	(No setting)
30	(No setting)
31	(No setting)
32	(No setting)

Delete Register Close

Setting the monitor type and setting value

This section described the setting of the monitoring type and the setting value.

1 Setting the monitoring type and setting value

Set the monitoring type (Energy planned value, Upper limit, Lower limit, Upper or lower limit, Operation(ON), Operation(OFF), Operation(ON/OFF)), and the setting values (Lower limit value, Upper limit value).

***1 The monitoring type and the setting value cannot be changed during [measuring point] editing.**

Change it after pressing the [Resister] button.

(1) [Monitoring]

Select no monitoring or the monitoring type from the [Monitoring] selection pull-down menu.

Monitoring	Lower limit value	Upper limit value
not set	0	0
not set	0	0
Energy planned value	0	0
not set	0	0

The following monitoring types are displayed in the pull-down menu according to the type of measuring item.

Type of measuring item	Monitoring type
Integrat (consumption, etc.)	not set, Energy planned value
Instant (current, voltage, etc.)	not set, Upper limit, Lower limit, Upper or lower limit
Status	Operation(ON), operation(OFF), operation(ON/OFF)
PLC/GOT	Data type: Integrate -> The same as the integrate Data type: Instant -> The same as the instant Data type: Status -> The same as the status

***1 The setting is automatically registered when selected from the pull-down menu.**

(2) [Lower limit value], [Upper limit value]

Double-click the [Lower limit value] or [Upper limit value] field, and enter the values for the lower limit and upper limit.

The entry conditions are as follow.


Monitoring conditions	Active or inactive status			Input range
	Upper limit monitoring	Lower limit monitoring	Upper/lower limit monitoring	
Lower limit setting value		○	○	Up to 11 digits including decimal point and (-) sign; up to 5 decimal digits
Upper limit setting value	○		○	

***1 When monitoring, the values rounded by the number of decimal digits set for the measuring point are compared. Provide some margin to the monitoring values.**

***2 When monitoring the upper and lower limits, make sure that [Lower limit setting value] < [Upper limit setting value] is satisfied.**

***3 Input value is automatically registered when the Enter key is pressed.**

* If the settings are incorrect, a message as shown on the right (Example of display) appears when the Enter key is pressed. Change the setting to satisfy the condition for each item.

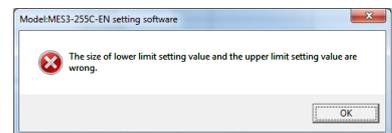

* Up to 32 points can be selected from the measuring points for upper/lower limit monitoring.
Up to 32 points can be set for the operation status monitoring.

Copy and paste the measuring point

<Copying the measuring point information>

To copy registered measuring point information, select the line to copy and press the right-click menu [Copy measuring point information] or the short-cut keys Ctrl+C.

ID	Measuring point name	Terminal name	Measuring item	Unit	Group	Monitoring	Lower limit value	Upper limit value
1	Measuring point1	Terminal1	Electric_energy(Consumption)	kWh	Group1	not set	0	0
2	Measuring point2	Terminal2-1	Power factor	%	Group1	not set	0	0
3	Measuring point3	Terminal2-2	Active energy	kWh	Group3	not set	0	0
4								
5								
6								

<Pasting the measuring point information>

To paste the copied measuring point information, select the line to paste and press the right-click menu [Paste measuring point information] or the short-cut keys Ctrl+V.

ID	Measuring point name	Terminal name	Measuring item	Unit	Group	Monitoring	Lower limit value	Upper limit value
1	Measuring point1	Terminal1	Electric_energy(Consumption)	kWh	Group1	not set	0	0
2	Measuring point2	Terminal2-1	Power factor	%	Group1	not set	0	0
3	Measuring point3	Terminal2-2	Active energy	kWh	Group3	not set	0	0
4								
5								
6								
7								
8								



Measuring point

ID	Measuring point name	Terminal name	Measuring item	Unit	Group	Monitoring	Lower limit value	Upper limit value
1	Measuring point1	Terminal1	Electric_energy(Consumption)	kWh	Group1	not set	0	0
2	Measuring point2	Terminal2-1	Power factor	%	Group1	not set	0	0
3	Measuring point3	Terminal2-2	Active energy	kWh	Group3	not set	0	0
4	Measuring point2-4	Terminal2-1	Power factor	%	Group1	not set	0	0
5								
6								

ID:

Name:

Point type: CC-Link Terminal MODBUS(R) Terminal Generic MODBUS(R) Terminal
 PLC(CC-Link) PLC(Ethernet)

CC-Link Terminal

Name:

Model:

Station No.:

Detail

Item: Unit:

PF range:

Number of Upper and Lower limit monitoring:0(up to 32)

Number of Operation monitoring:0(up to 32)

Number of Energy planned value monitoring:0

Remarks

- Multiple lines cannot be copied and pasted.
- Measuring point information cannot be pasted into a registered line.
- The “-”+ pasted line No. is automatically added to the end of the pasted measuring point name.
- The default value is set in the pasted address.
- The pasted measuring point information is automatically registered.

Delete a registered measuring point


This section describes how to delete a registered measuring point.

1 Displaying the [Measuring point] dialog box


Click the [Measuring point] button in the dialog box of project setting.

2 Selecting a measuring point you want to delete, and clicking the [Delete] button

Select a line of a measuring point you want to delete in the measuring point list, and then click the [Delete] button.

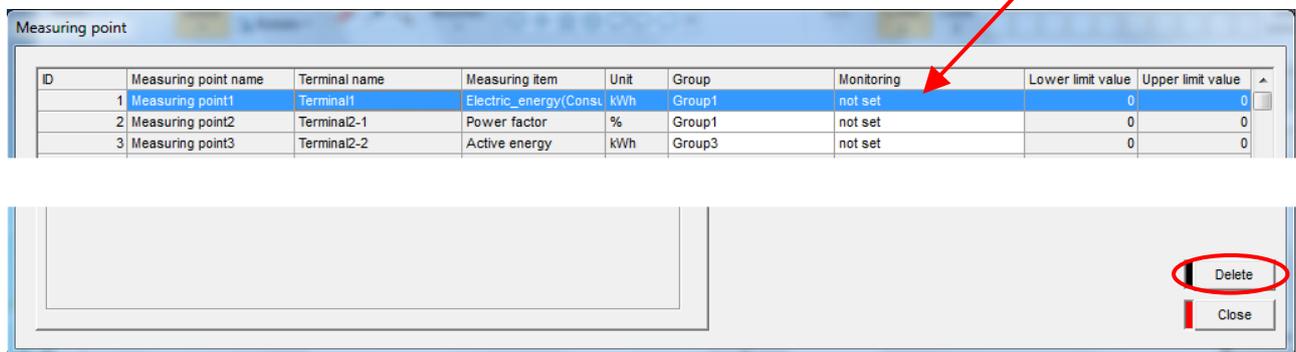


*1 If the terminal you select is registered as any of a virtual measuring point, a Specific consumption measuring point, equipment, or a monitoring notification, the message shown on the right will be displayed. Click the [OK] button to delete the registered item first.

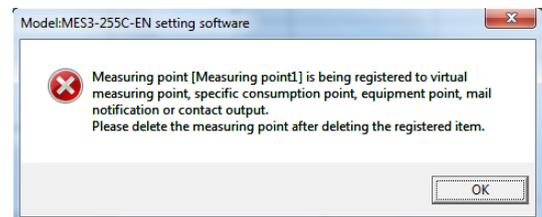

3 Deleting

A delete confirmation message appears. Click the button to delete.

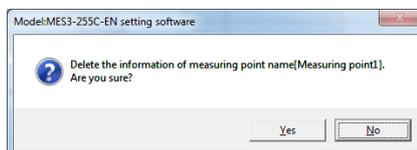

[Yes] button : Delete the measuring point, and back to the [Measuring point registration] dialog box.

[No] button : Cancel the deletion, and back to the [Measuring point registration] dialog box.

After the measuring point is deleted, its registration information is removed from the list in the [Measuring point] list.

Remarks

- The measuring point information can also be deleted by clicking the right-click menu [Delete measuring point information] or by pressing the [Delete] key.

Editing registration information of a registered measuring point

This section described how to edit registration information of a measuring point.

1 Displaying the [Measuring point] dialog box

Click the [Measuring point] button in the dialog box of project setting.

2 Selecting a measuring point you want to edit, and click the [Edit] button

Double-click a line of a measuring point you want to edit in the measuring point list or select a line of a measuring point you want to edit, and then click the [Edit] button.

Line of a measuring point to be edited

The screenshot shows the 'Measuring point' dialog box. At the top is a table with columns: ID, Measuring point name, Terminal name, Measuring item, Unit, Group, Monitoring, Lower limit value, and Upper limit value. Row 3 is highlighted in blue. Below the table is an 'Edit' form. A red dashed box encloses the 'Edit' button and the form fields. A callout bubble points to the 'Edit' button with the text 'Click the Edit button to enable changes.'

ID	Measuring point name	Terminal name	Measuring item	Unit	Group	Monitoring	Lower limit value	Upper limit value
1	Measuring point1	Terminal4	Electric_energy(Consumption)	kWh	Group1	not set	0	0
2	Measuring point2	Terminal5	1	Wh	Group1	not set	0	0
3	Measuring point3	Terminal4	Electric_energy(Consumption)	kWh	Group1	not set	0	0
4								
5								
6								
7								
8								
9								
10								
11								
12								
13								
14								
15								

The 'Edit' form contains the following fields:

- ID: 3
- Name: Measuring point3
- Point type: CC-Link Terminal, MODBUS(R) Terminal, Generic MODBUS(R) Terminal, PLC(Ethernet)
- PLC(Ethernet) section:
 - Name: PLC1, Station: 0
 - IP address: 111.111.111.111, PLC/GOT series: QCPU/LCPU/QnACPU
 - Data type: Integrate, Instant, Status
 - Power Factor(PF), PF range: -0%~100%~0%
 - Record the status
 - Device number: [empty], Unit: [empty]
 - Data length: 16bit(W), Maximum value: 32767
 - Factor: 1, Decimal: Integer
- Monitoring options:
 - Number of Upper and Lower limit monitoring: 0 (up to 32)
 - Number of Operation monitoring: 0 (up to 32)
 - Number of Energy planned value monitoring: 0
- Buttons: Edit, Register, Delete, Close

3 Editing the items to be changed and registering them

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to those at registering a new measuring point.

Remarks

- You cannot edit the items other than the [Name] if it is registered as a virtual measuring point, a Specific consumption measuring point, equipment, or a monitoring notification.

4.5.5. Measuring point group registration

This section explains the procedure on the for [Measuring point group set].

A measuring point group refers to a group of several measuring points. It is listed in the current value view (group) of the EcoWebServerIII for each measuring point group registered here.

A maximum of 32 groups can be registered.

Remarks

- You cannot register one measuring point to more than one measuring point group at the same time.
- You cannot register a virtual measuring point to a measuring point group.

Checking a list of registered measuring point groups


The following describes how to display and check the list of registered measuring point groups.

1 Displaying the [Measuring point] dialog box

Click the [Measuring point] button in the dialog box of project setting.

2 Displaying the [Measuring point group set] dialog box


Select an any measuring point on the measuring point registration screen, and select <Group setting> from the [Group] selection pull-down menu.

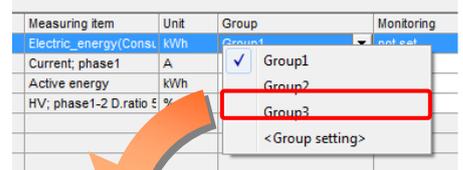

3 Checking the registration information

Check the following information displayed in the screen.

- [No.] : Measuring point group No.
[Name] : Name of registered measuring point group

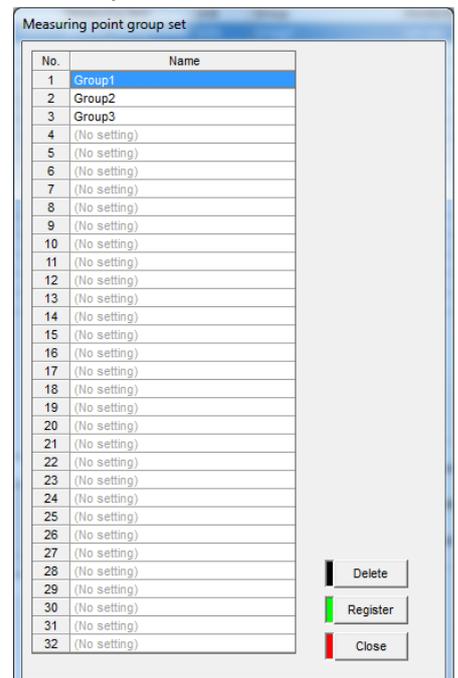

Registration a new measuring point group


This section described how to a new measuring point group.

1 Displaying the [Measuring point] dialog box

Click the [Measuring point registration] button in the dialog box of project setting.

2 Displaying the [Measuring point group set] dialog box

Select an any measuring point on the measuring point registration dialog box, and select <Group setting> from the [Group] selection pull-down menu.

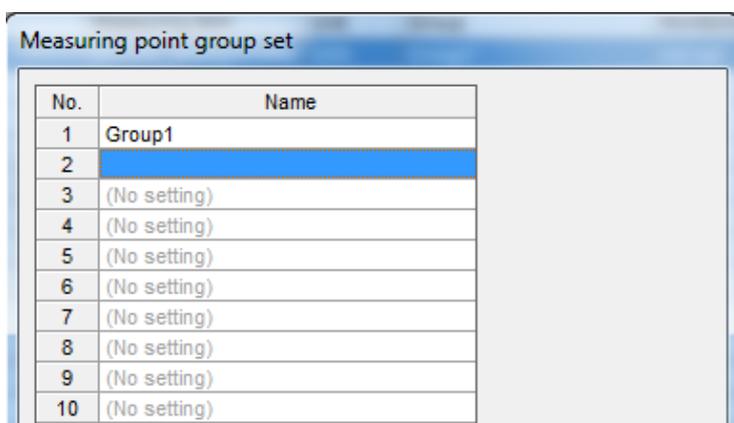

Remarks

- "Group 1" is set in Group No. 1 as the default.

3 Entering the measuring point group name

Double-click a cell with no name set, and enter the measuring point group name.

(This group name is shown in the graphs or the list of measuring points, etc., on the EcoWebServerIII page.)

The entry conditions are as follows.

Characters	Up to 24 characters
Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >



*1 If you use the characters in the list of prohibited characters in Appendix, they may not be displayed correctly in the browser view of EcoWebServerIII.

*2 A duplicate measuring point group name cannot be registered.

4 Registering

Click the button on the [Measuring point group set] dialog box to register.



[Register] button : Register the measuring point group with information you set.
 [Close] button : Back to the [Measuring point] dialog box.

*1 If the setting is incorrect, the error message such as the one on the right will appear according to the invalid setting when [Register] button is clicked. Correct the setting to satisfy the conditions.

(Example of display)




*2 If you click [Close] button without clicking the [Register] button after changing the entry, the message shown on the right will appear.

[Yes] button : Register


[No] button : Not register.

[Cancel] button : Back to the [Measuring point group set] dialog box

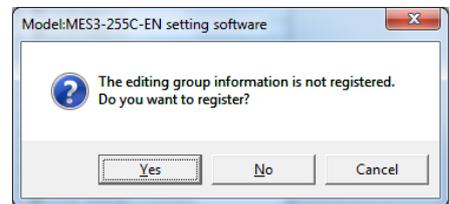


<Copying measuring point group information>

To copy registered measuring point group information, select the line to copy and press the right-click menu [Copy measuring point group information] or the short-cut keys Ctrl+C.

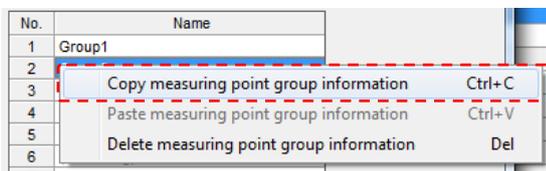

<Pasting measuring point group information>

To paste the copied measuring point group information, select the line to paste and press the right-click menu [Paste measuring point group information] or the short-cut keys Ctrl+V.

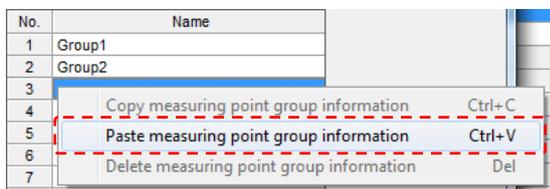

Remarks

- Multiple lines cannot be copied and pasted.
- Measuring point group information cannot be pasted into a registered line.

Deleting a registered measuring point group


This section describes how to delete a registered measuring point group.

1 Displaying the [Measuring point group set] dialog box

Select any measuring point on the measuring point registration screen, and select <Group setting> from the [Group] selection pull-down menu.


2 Selecting the measuring point group you want to delete, and clicking the [Delete] button

Select a line of the measuring point group you want to delete in the list in the [Measuring point group set] dialog box, and then click the [Delete] button.

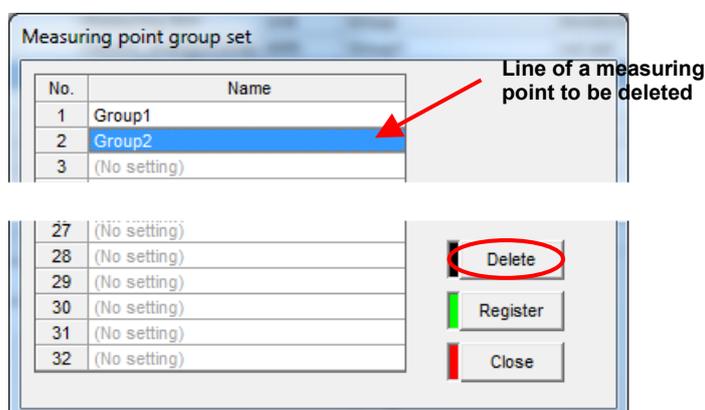

3 Deleting

A delete confirmation message appears. Click the button to delete.

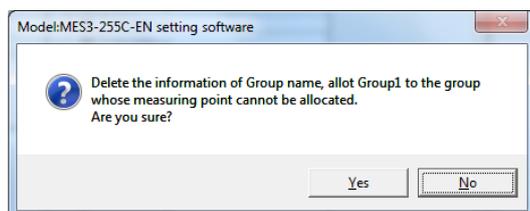

[Yes] button : Delete the measuring point group and back to the [Measuring point group set] dialog box.

[No] button : Cancel the deletion and back to the [Measuring point group set] dialog box.

After the measuring point group is deleted, its registration information is removed from the list in the [Group] list.

* The measuring point that is registered in the deleted group is assigned to the measuring point group 1.

Remarks

- The measuring point group can also be deleted by clicking the right-click menu [Delete measuring point group information] or pressing the [Delete] key.
- Measuring point group No. 1 cannot be deleted

Editing the registration information of a registered measuring point group

This section describes how to registration information of a measuring point group.

1 Displaying the [Measuring point] dialog box


Click the [Measuring point] button in the dialog box of project setting.

2 Displaying the [Measuring point group set] dialog box

Select any measuring point on the measuring point registration dialog box, and select <Group setting> from the [Group] selection pull-down menu.

3 Editing the name of the group you want to change

Double-click the name of the measuring point group to be changed in the list on the [Measuring point group set] dialog box, and change the name.

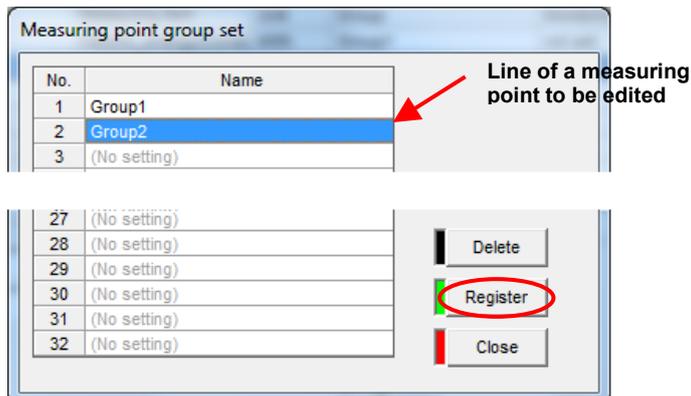

4 Registering

Click the [Register] button after editing items you want to change.

* The entries and conditions for each item are similar to those at registering a new group.

4.6. Measuring data collection setting [Advanced settings]

This section explains setting items that make it easier to use this product: "Virtual measuring point registration", "Specific consumption measuring point registration" and "Equipment registration".

4.6.1. Virtual measuring point registration

This section explains the procedure on the [Virtual measuring point registration].


A virtual measuring point refers to a measuring point for which the computation result between measuring points is used as virtual measurement data. A **maximum of 128** measuring points (excluding the 255 measuring points) can be registered.

Checking the list of registered virtual measuring points

The following describes how to display and check the list of virtual measuring points.

1 Displaying the [Virtual measuring point] dialog box

Click the [Virtual] button in the dialog box of project setting.

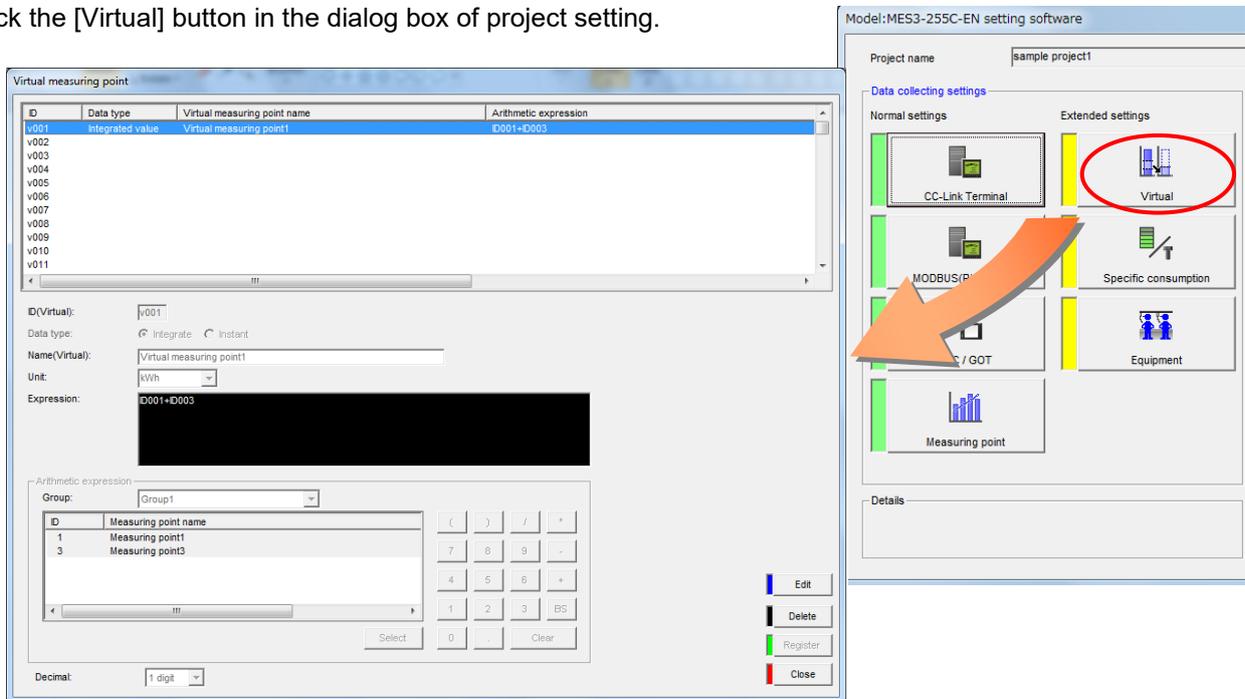

2 Checking the registration information

Check the following information displayed on the [Virtual measuring point] list.

- [ID] : Virtual measuring point ID
- [Data type] : Data type of a registered virtual measuring point (integrated value, momentary value)
- [Virtual measuring point name] : Name of a registered virtual measuring point
- [Arithmetic expression] : Registered arithmetic expression
- [Unit] : Registered unit
- [Decimal] : Registered number of digits after the decimal point

Registering a new virtual measuring point


This section describes how to register a new virtual measuring point.

1 Displaying the [Virtual measuring point] dialog box

Click the [Virtual measuring point registration] button in the dialog box of project setting.

2 Selecting the line to register, and clicking the [Edit] button

Double-click the line to register on the [Virtual measuring point] list, or select the line to register and click the [Edit] button.

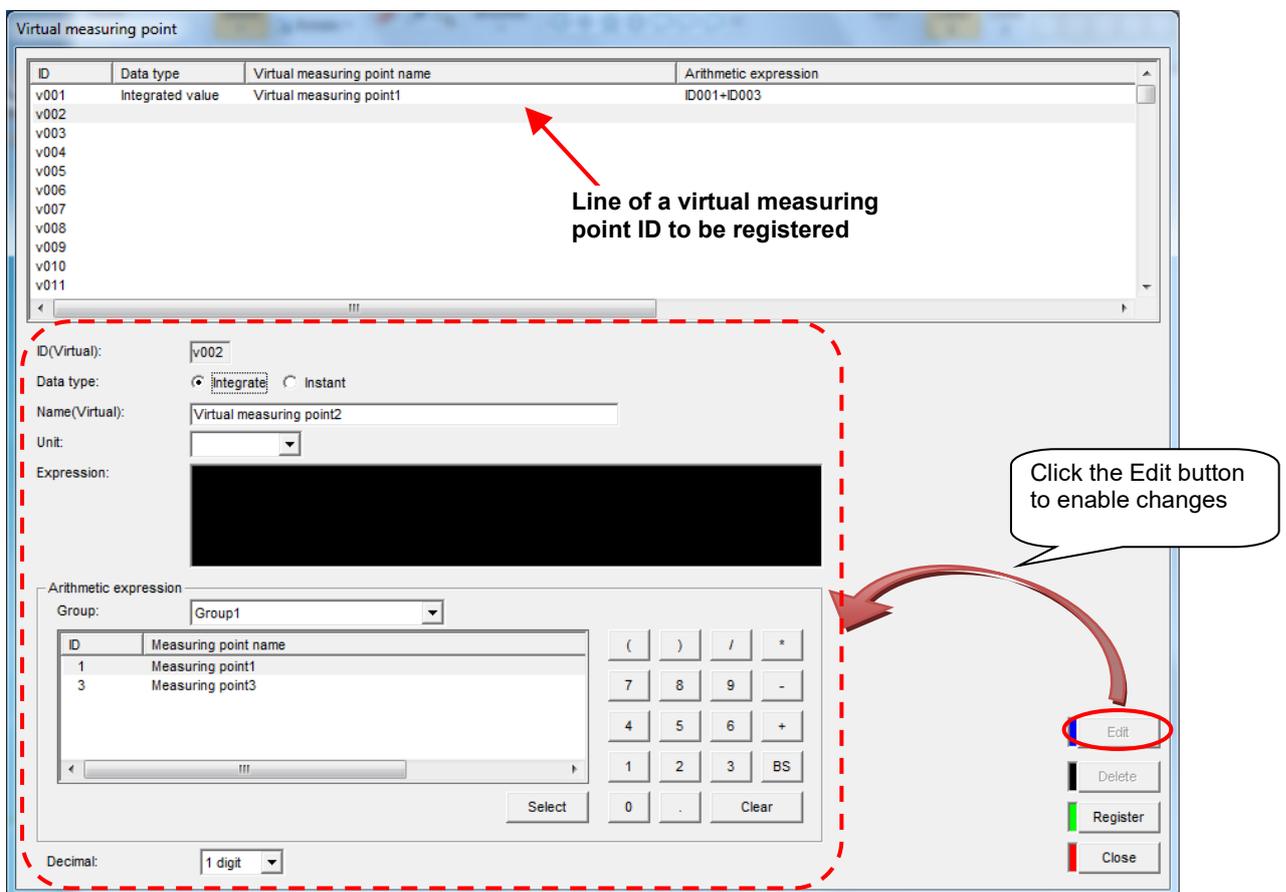

Remarks

- You can select and register any virtual measuring point. (Also, you can create a free ID.)


3 Entering or selecting the items

Enter or select the following items.

[Data type]	Select either of an [Integrate] or a [Instant]. * When the [Integrate] is selected here, only an [Integrate] can be specified as a measuring point in an arithmetic expression. When the [Instant] is selected, only a [Instant] can be specified.				
[Name(Virtual)]	Enter a name of a virtual measuring point. (This virtual measuring point name is shown in the graphs or the list of measuring points on the EcoWebServerIII page)				
	<table border="1"> <tr> <td>Characters</td> <td>Up to 24 characters</td> </tr> <tr> <td>Prohibited characters</td> <td>The following characters cannot be registered: # ¥ / : , ; * ? " < > </td> </tr> </table> <p>^{*1} If you use any disallowed characters, which are listed in "Appendix: Disallowed Character List," the characters may not be displayed properly in the browser display of EcoWebServerIII. ^{*2} A duplicate name of a virtual measuring point cannot be registered.</p>	Characters	Up to 24 characters	Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >
Characters	Up to 24 characters				
Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >				
[Unit]	Select or directly type a unit. When you type it directly, the entry conditions are as follows.				
	<table border="1"> <tr> <td>Characters</td> <td>Up to 8 characters</td> </tr> <tr> <td>Prohibited characters</td> <td>The following characters cannot be registered: # ¥ : , ; * ? " < > </td> </tr> </table> <p>* Units that can be selected from the pull-down menu vary depending on the [Data type].</p>	Characters	Up to 8 characters	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
Characters	Up to 8 characters				
Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >				
[Decimal]	Select a number of digits after the decimal point. A computation result is rounded at the number of digits specified here. (Ex.) "1 digit" is selected -> a computation result is truncated a number to 1 decimal place				

4 Entering an arithmetic expression

Enter an arithmetic expression of a virtual measuring point.
To enter a numeric value and operator, use buttons on the dialog box.
You cannot enter input them by a keyboard

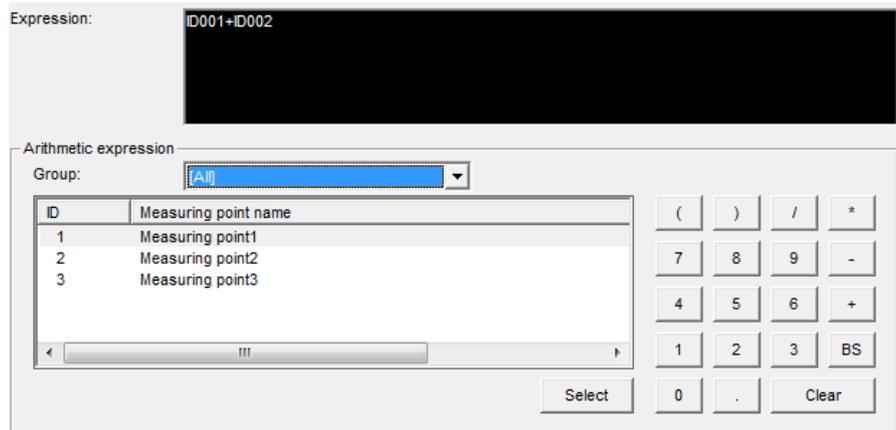

The conditions of the expression you can enter are as follows.

Arithmetic element	Up to 16 elements, including measuring points and constants
Characters in an arithmetic expression	Up to 256 characters
Numerical input range	11 digits including decimal point, up to 5 digits after the decimal point

Expression not allowed	• Value exceeds 11 digits	...Ex. :	123456789012
	• Consecutive operators	...Ex. :	*/
	• Sign after operator	...Ex. :	*-4.2
	• Right bracket after value	...Ex. :	123(
	• Value after right bracket	...Ex. :)123
	• Left bracket after right one	...Ex. :)(
	• Right bracket after left one	...Ex. :	()
	• Operator after left bracket	...Ex. :	(*
	• Right bracket after operator	...Ex. :	0+
	• Operator after 0	...Ex. :	0.000001
	• More than 6 decimal places	...Ex. :	0123
	• Integer started with 0	...Ex. :	.00001
	• Start with a decimal point	...Ex. :)
	• Start with a right bracket	...Ex. :	*
• Start with an operator	...Ex. :	-	
• Start with a sign			

*1 You can specify it with a constant only.


This is used to specify a constant to a production amount in the Specific consumption measuring point registration, and a load time, a downtime, the number of processed products and the number of non-defective products in the Equipment registration. In this case, set an integrated value for the data type.

*2 After an expression is entered, the [Data type] is disabled and you cannot change the data type.

After all expressions are cleared, the [Data type] is enabled and you can change the data type.

<To select a measuring point as an element of an arithmetic expression>


(1) Select [Group]

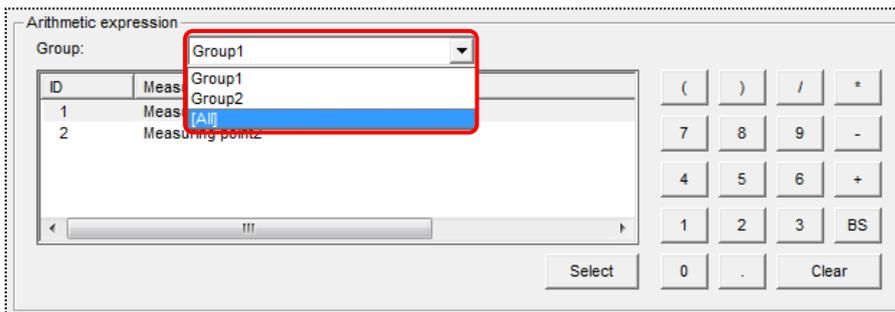

(2) Measuring points included in the group selected in (1) is displayed in the list. Double-click a line of a measuring point name you want to enter an arithmetic expression,

Or

Select a line of a measuring point you want to enter, and then click the [Select] button.

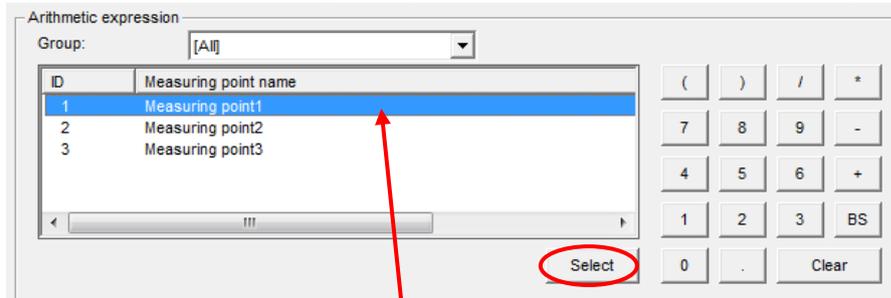

Line of a measuring point to be entered in the expression

(3) The ID number of the measuring point selected is entered in the [Expression]. (ID number is 3 digits or 4 digits)



*1 The "demand measuring point" groups are displayed only on the EcoWebServerIII with demand control function.


*2 If [Integrate] is selected for [Data type], the following measuring points appear as the "demand measuring point" group.

- 1001 Integrated value of Consumption (Whole day)
- 1032 Integrated value of Consumption (Time zone 1)
- 1033 Integrated value of Consumption (Time zone 2)
- 1034 Integrated value of Consumption (Time zone 3)
- 1035 Integrated value of Consumption (Time zone 4)
- 1036 Integrated value of Consumption (Time zone 5)
- 1037 Integrated value of Consumption (Time zone 6)
- 1038 Integrated value of Consumption (Time zone 7)
- 1039 Integrated value of Consumption (Time zone 8)
- 1040 Integrated value of Consumption (Time zone 9)
- 1041 Integrated value of Consumption (Time zone 10)

The integrated value of consumption (Time zone 1) to integrated value of consumption (Time zone 10) are displayed only when [Carry out management based on calendar setting] is checked.)

<To delete an expression>

- If you want to delete one expression, click the [BS] button.
- If you want to clear all expressions, click the [BS] button.
After you clicked the [Clear] button, the following message will appear.

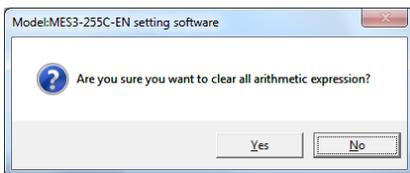


[Yes] button : Clear all expressions and back to the [Virtual measuring point] dialog box.
[No] button : Cancel clearing and back to the [Virtual measuring point] dialog box.

<Copying virtual measuring point information>

To copy registered virtual measuring point information, select the line to copy and press the right-click menu [Copy virtual calculation point information] or the short-cut keys Ctrl+C.

ID	Data type	Virtual measuring point name	Arithmetic ex
v001			ID001+1
v002			
v003			
v004			
v005			
v006			

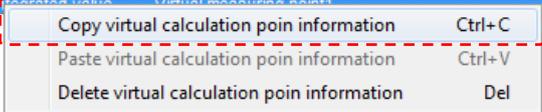


A right-click context menu is shown over the selected row v001. The menu items are: 'Copy virtual calculation poin information' with shortcut 'Ctrl+C', 'Paste virtual calculation poin information' with shortcut 'Ctrl+V', and 'Delete virtual calculation poin information' with shortcut 'Del'. The menu is enclosed in a red dashed border.

<Pasting virtual measuring point information>

To paste the copied virtual measuring point information, select the line to paste and press the right-click menu [Paste virtual calculation point information] or the short-cut keys Ctrl+V.

ID	Data type	Virtual measuring point name	Arithmetic e
v001	Integrated value	Virtual measuring point1	ID001+1
v002			
v003			
v004			
v005			
v006			
v007			

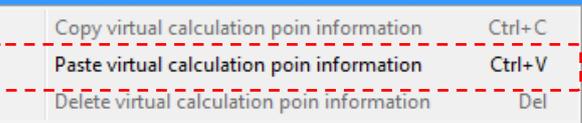


A right-click context menu is shown over the selected row v002. The menu items are: 'Copy virtual calculation poin information' with shortcut 'Ctrl+C', 'Paste virtual calculation poin information' with shortcut 'Ctrl+V', and 'Delete virtual calculation poin information' with shortcut 'Del'. The menu is enclosed in a red dashed border.



ID	Data type	Virtual measuring point name	Arithmetic expression
v001	Integrated value	Virtual measuring point1	ID001+ID002
v002	Integrated value	Virtual measuring point2	ID001+ID002
v003			
v004			
v005			
v006			
v007			
v008			
v009			
v010			
v011			

ID(Virtual):	v002
Data type:	<input checked="" type="radio"/> Integrate <input type="radio"/> Instant
Name(Virtual):	Virtual measuring point2
Unit:	Wh
Expression:	ID001+ID002

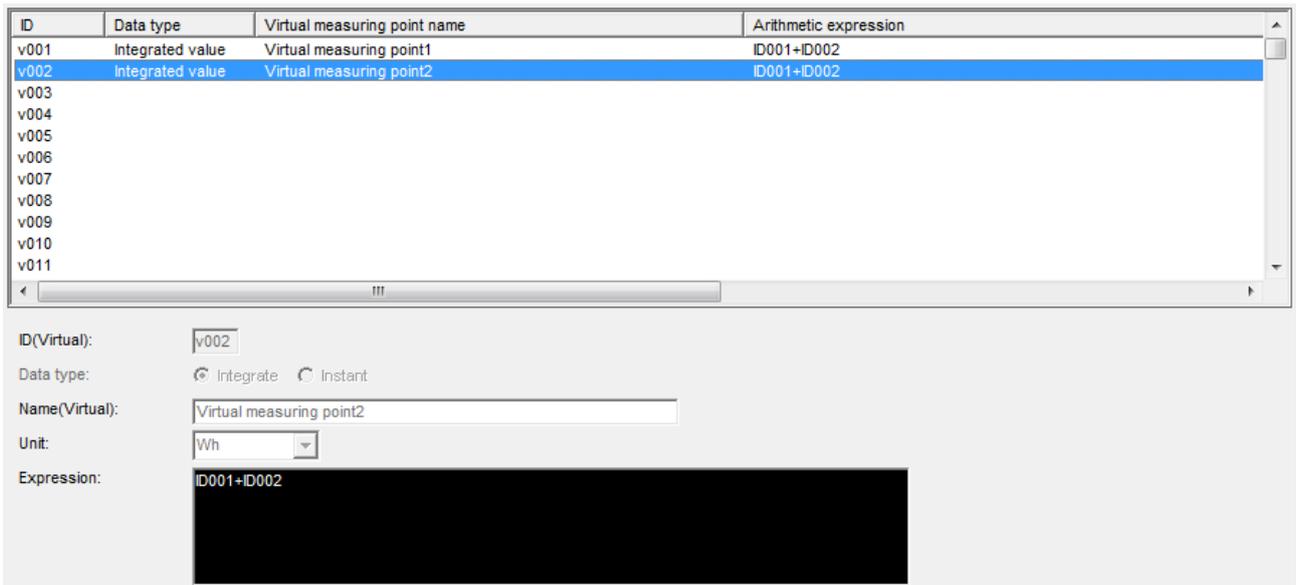

The screenshot shows the virtual measuring point configuration dialog for v002. The 'Data type' is set to 'Integrate', the 'Name' is 'Virtual measuring point2', the 'Unit' is 'Wh', and the 'Expression' is 'ID001+ID002'. The dialog is shown below the table, with a black redaction box covering the bottom part of the 'Expression' field.

Remarks

- Multiple lines cannot be copied and pasted.
- Virtual measuring point information cannot be pasted into a registered line.
- The "-" pasted line No. is automatically added to the end of the pasted virtual measuring point name.
- The pasted virtual measuring point information is automatically registered.

Deleting a registered virtual measuring point


This section describes how to delete a registered virtual measuring point.

1 Displaying the [Virtual measuring point] dialog box


Click the [Virtual] button in the dialog box of project setting.

2 Selecting a virtual measuring point you want to delete, and clicking the [Delete] button

Select a line of a measuring point you want to delete in the list in the [Virtual measuring point] list dialog box, and then click the [Delete] button

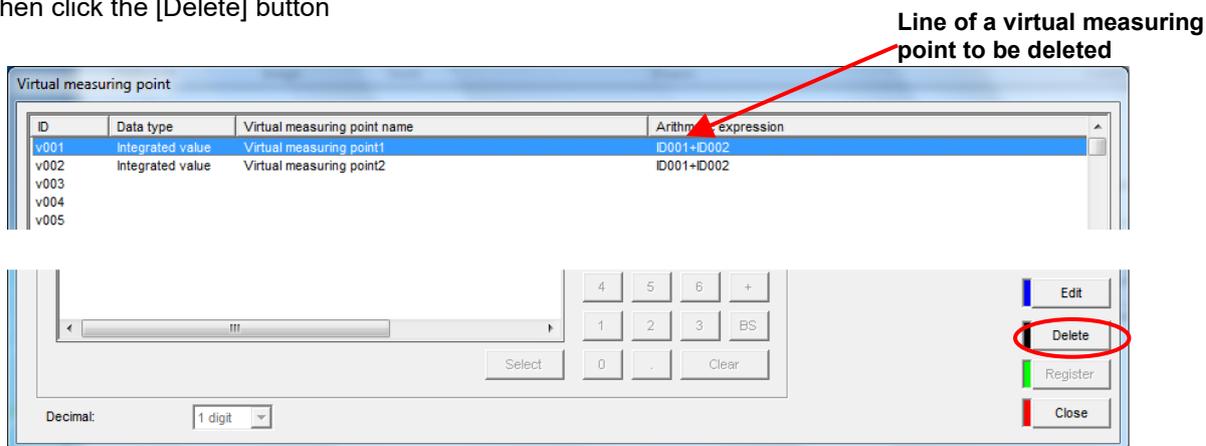


- * If the virtual measuring point you select is registered as a specific consumption measuring point, the message on the right will appear.
Click the [OK] button to delete the registered item first.

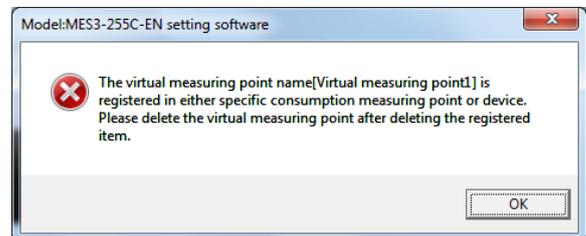

3 Deleting

The message confirming deletion is displayed. Click the button to execute deletion.

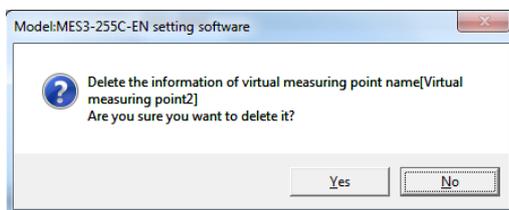

[Yes] button : Delete the virtual measuring point and back to the [Virtual measuring point] dialog box.

[No] button : Cancel the deletion and back to the [Virtual measuring point] dialog box.

After the virtual measuring point is deleted, its registration information is removed from the list in the [Virtual measuring point] list.

Remarks

- You can delete it by clicking the right-click menu [Delete virtual calculation point information], or by pressing the [Delete] key.

Editing the registered information of a registered virtual measuring point


This section describes how to edit registration information of a virtual measuring point.

1 Displaying the [Virtual measuring point] dialog box

Click the [Virtual] button in the dialog box of project setting.

2 Selecting a virtual measuring point you want to edit, and click the [Edit] button

Double-click a line of a virtual measuring point you want to edit on the list in the [Virtual measuring point] list dialog box, or select a line of a virtual measuring point you want to edit, and then click the [Edit] button

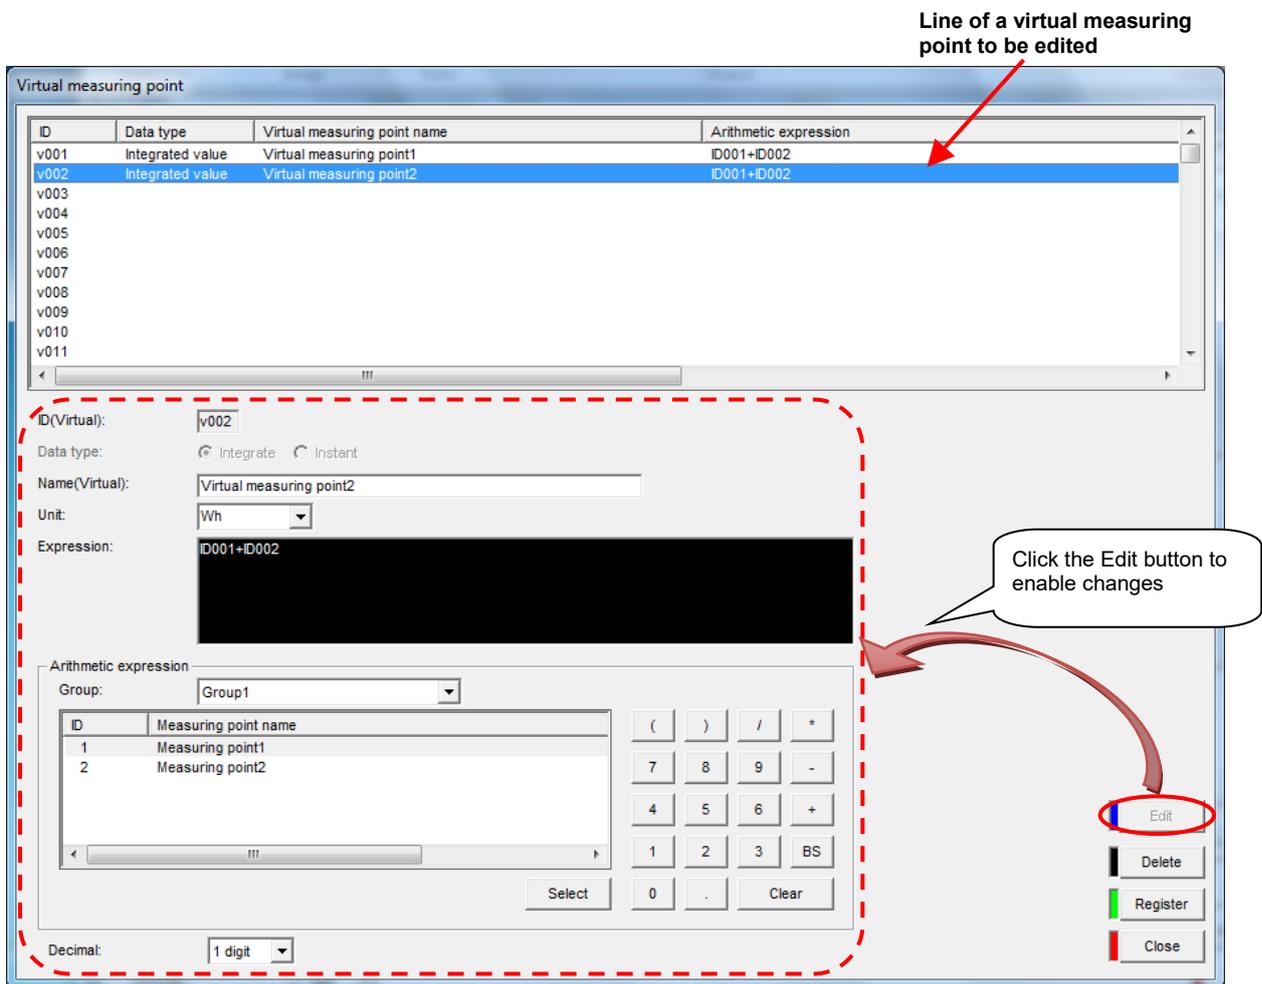

3 Editing the items to be changed and registering them

After editing the items to be changed, click the [Register] button.

* The entries and conditions for each item are similar to those at registering a new virtual measuring point.

Remarks

- You cannot edit the [Expression] if it is registered as a specific consumption measuring point.

4.6.2. Specific consumption measuring point registration

This section explains the procedure on the [Specific consumption measuring point].


A specific consumption measuring point refers to a measuring point for which the result of dividing energy amount by production amount is used as measurement data. A maximum of 64 measuring points (excluding the 255 measuring points and the 128 virtual measuring points) can be registered.

Checking the list of registered specific consumption measuring points

The following describes how to display and check the list of specific consumption measuring points.

1 Displaying the [Specific consumption measuring point] dialog box

Click the [Specific consumption] button in the dialog box of project setting.

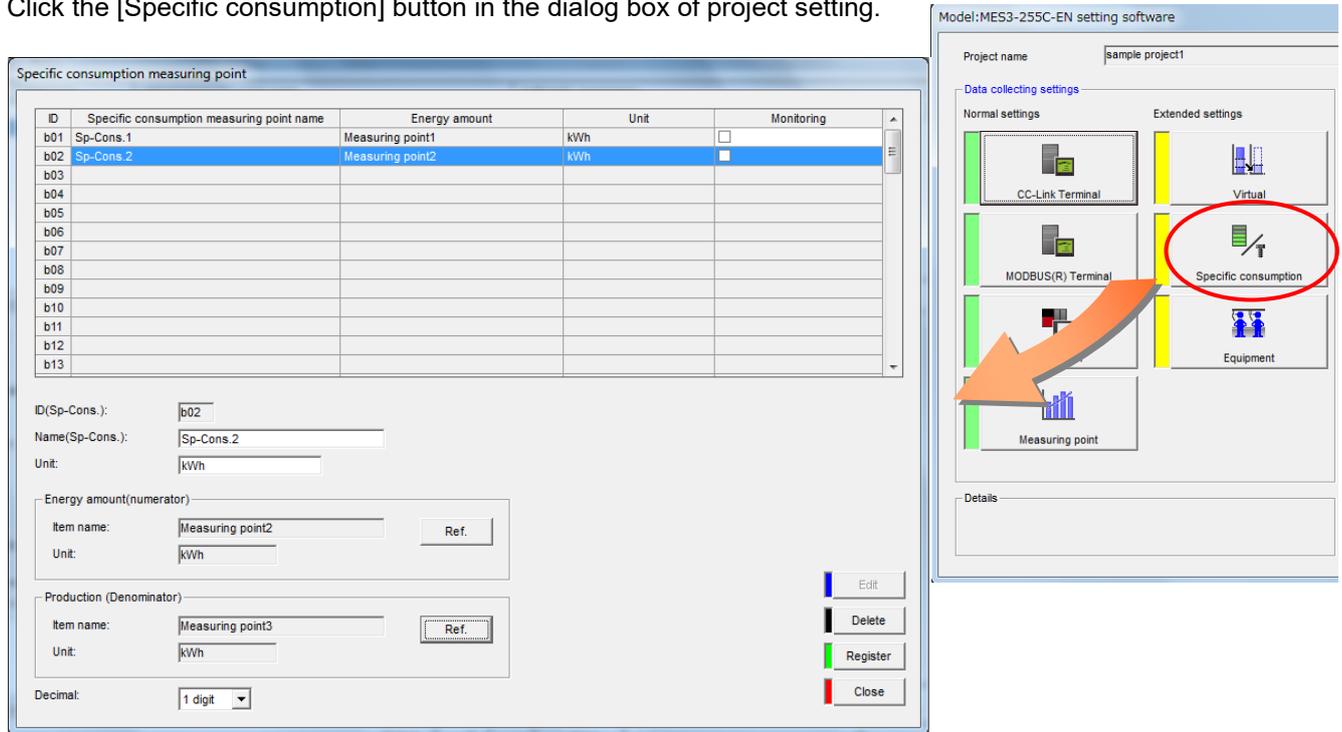

2 Checking the registration information

Check the following information displayed in the [Specific consumption measuring point] list.

- [ID] : Specific consumption measuring point ID
- [Specific consumption measuring point name] : Specific consumption measuring point name
- [Energy amount] : Measuring point name set for energy amount to be the numerator of the specific consumption
- [Unit] : Registered unit
- [Monitoring] : Registered monitoring on/off state

Registering a new specific consumption measuring point

This section describes how to register a new specific consumption measuring point.

1 Displaying the [Specific consumption measuring point] dialog box

Click the [Specific consumption] button in the dialog box of project setting.

2 Selecting the line to register, and clicking the [Edit] button

Double-click a line of an ID you want to register on the list in the [Specific consumption measuring point] list dialog box, or select a line of an ID you want to register, and then click the [Edit] button.

ID	Specific consumption measuring point name	Energy amount	Unit	Monitoring
b01	Sp-Cons.1	Measuring point1	kWh	<input type="checkbox"/>
b02	Sp-Cons.2	Measuring point2	kWh	<input type="checkbox"/>
b03				
b04				
b05				
b06				
b07				
b08				
b09				
b10				
b11				
b12				
b13				

Line of an ID to be registered

Click the Edit button to enable changes.

ID(Sp-Cons.): b03
Name(Sp-Cons.): Sp-Cons.3
Unit:
Energy amount(numerator)
Item name: Ref.
Unit:
Production (Denominator)
Item name: Ref.
Unit:
Decimal: 1 digit

Edit
Delete
Register
Close

Remarks

- You can select and register any specific consumption measuring point. (Also, you can create a free ID.)
- You cannot register a specific consumption measuring point when no measuring point or virtual measuring point for an integrated value is registered. (The [Edit] button is disabled.)

3 Entering or selecting the items


Enter or select the following items.

[Name(Sp-Cons.)]	Enter a name of a Specific consumption measuring point. (This name is shown in the graphs or the list of measuring points on the EcoWebServerIII page)	
	Characters	Up to 24 characters
	Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >
	^{*1} If you use any disallowed characters, which are listed in "Appendix: Disallowed Character List," the characters may not be displayed properly in the browser display of EcoWebServerIII. ^{*2} A duplicate specific consumption measuring point name cannot be registered.	
[Unit]	Type a unit directly. The entry conditions are as follows.	
	Characters	Up to 16 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Decimal]	Select a number of digits after the decimal point. A computation result is rounded at the number of digits specified here. (Ex.) "1 digit" is selected -> a computation result is truncated a number to 1 decimal place	

4 Selecting an energy amount (numerator)


Using the following procedure, select a measuring point for an energy amount to be the numerator of the specific consumption.

- Click the [Ref] button in the [Energy amount (numerator)] area to display the [Selection of the measuring point] dialog box.

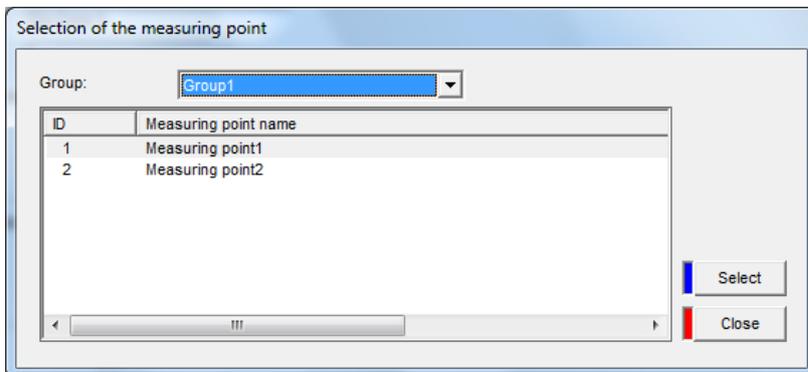

- Select any of registered group, demand measuring point, [Virtual measuring point], and [All] from the [Group] pull-down menu.

- * The [Virtual measuring point] can be selected only when a virtual measuring point for an integrated value is registered.
- * Among measuring points registered with the selected group, only the integrated values are displayed in the list.
- * [Demand measuring point] can be selected only with the EcoWebServerIII with demand control function.

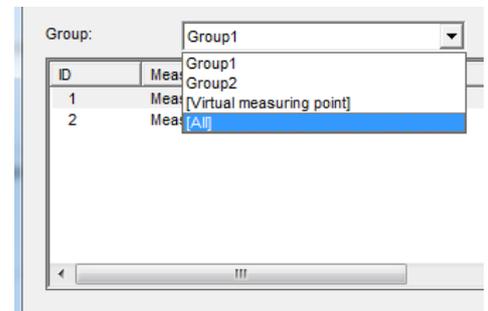

(3) Double-click the measuring point name or the virtual measuring point name,

Or

Select the measuring point name or the virtual measuring point name, and click the [Select] button.

(4) The name and unit of the selected measuring point will be display in the fields in the [Energy amount (numerator)].



Energy amount(numerator)

Item name: Ref.

Unit:

*1 The following measuring points can be selected as the "demand measuring point" groups when using the EcoWebServerIII with demand control function.

- 1001 Integrated value of Consumption (Whole day)
- 1032 Integrated value of Consumption (Time zone 1)
- 1033 Integrated value of Consumption (Time zone 2)
- 1034 Integrated value of Consumption (Time zone 3)
- 1035 Integrated value of Consumption (Time zone 4)
- 1036 Integrated value of Consumption (Time zone 5)
- 1037 Integrated value of Consumption (Time zone 6)
- 1038 Integrated value of Consumption (Time zone 7)
- 1039 Integrated value of Consumption (Time zone 8)
- 1040 Integrated value of Consumption (Time zone 9)
- 1041 Integrated value of Consumption (Time zone 10)

(The integrated value of consumption (Time zone 1) to integrated value of consumption (Time zone 10) can be selected only when [Carry out management based on calendar setting] is checked.)

5 Selecting production amount (denominator)

Select a measuring point for production amount to be the denominator of the specific consumption.
The procedure to select a measuring point is similar to **4 Select an energy amount**.

6 Registering


Click the button on the [Specific consumption measuring point] dialog box to register.



[Register] button : Register the specific consumption measuring point information you set.
[Close] button : Back to the project setting dialog box.

*1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item.

(Example of display)

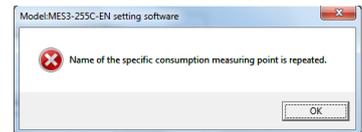

*2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.



[Yes] : To register

[No] : Not to register

[Cancel] : Back to the [Specific consumption measuring point] dialog box.


7 Setting the specific consumption target value monitoring

Set the specific consumption target value monitoring.

Enable or disable the specific consumption target value monitoring with the [Monitoring] check box

“Checked” : Monitoring enabled

“Not checked” : Monitoring disabled

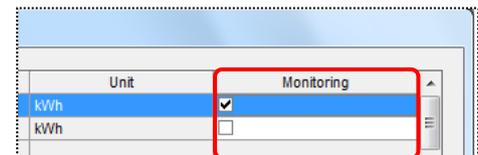

<Copying specific consumption measuring point information>

To copy registered specific consumption measuring point information, select the line to copy and press the right-click menu [Copy Sp-Cons. information] or the short-cut keys Ctrl+C.

ID	Specific consumption measuring point name	Energy amount	Unit	Monitoring
b01	Sp-Cons.1			<input type="checkbox"/>
b02	Sp-Cons.2			<input type="checkbox"/>
b03				
b04				
b05				
b06				

<Pasting specific consumption measuring point information>

To paste the copied specific consumption measuring point information, select the line to paste and press the right-click menu [Paste Sp-Cons. information] or the short-cut keys Ctrl+V.

ID	Specific consumption measuring point name	Energy amount	Unit	Monitoring
b01	Sp-Cons.1	Measuring point2	kWh	<input type="checkbox"/>
b02	Sp-Cons.2	Measuring point3	kWh	<input type="checkbox"/>
b03				
b04				
b05				
b06				
b07				



ID	Specific consumption measuring point name	Energy amount	Unit	Monitoring
b01	Sp-Cons.1	Measuring point1	kWh	<input type="checkbox"/>
b02	Sp-Cons.2	Measuring point2	kWh	<input type="checkbox"/>
b03	Sp-Cons.1-3	Measuring point1	kWh	<input type="checkbox"/>
b04				

Specific consumption measuring point

ID(Sp-Cons.):

Name(Sp-Cons.):

Unit:

Energy amount(enumerator)

Item name: Ref.

Unit:

Production (Denominator)

Item name: Ref.

Unit:

Decimal:

Remarks

- Multiple lines cannot be copied and pasted.
- Specific consumption measuring point information cannot be pasted into a registered line.
- The "-"+ pasted line No. is automatically added to the end of the pasted specific consumption measuring point name.
- The pasted specific consumption measuring point information is automatically registered.

Deleting a registered specific consumption measuring point



This section describes how to delete a registered specific consumption measuring point.

1 Displaying the [Specific consumption measuring point] dialog box


Click the [Specific consumption] button in the dialog box of project setting.

2 Selecting a specific consumption measuring point you want to delete, and clicking the [Delete] button

Select a line of a measuring point you want to delete in the [Specific consumption measuring point] list, and then click the [Delete] button.

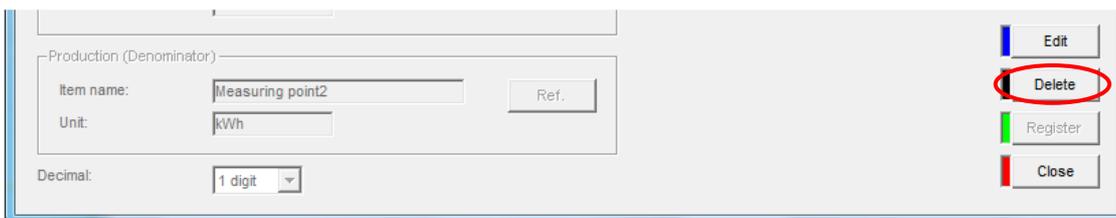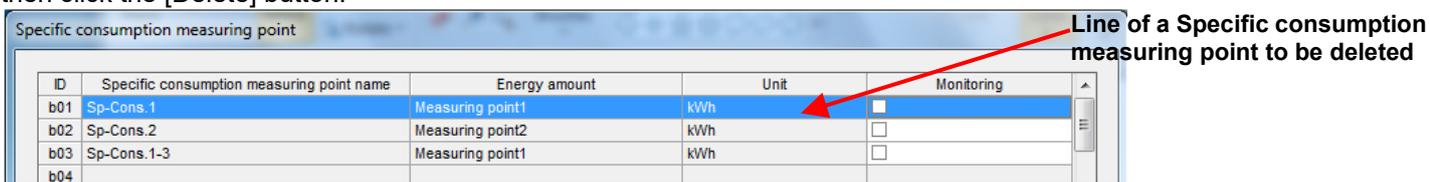


- * If the specific consumption measuring point you select is registered as a monitoring notification, the message on the right will appear. Click the [OK] button to delete the registered item first.

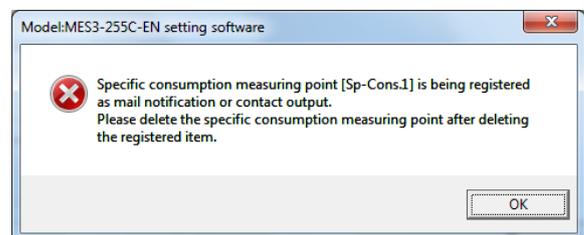

3 Deleting

The message confirming deletion is displayed. Click the button to execute deletion.

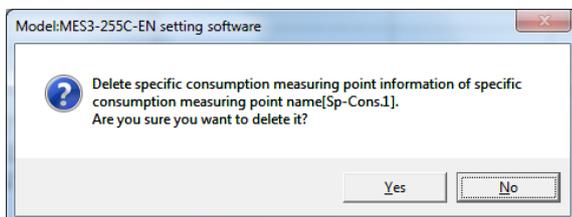

[Yes] button : Delete the specific consumption measuring point and back to the [Specific consumption measuring point] dialog box.

[No] button : Cancel the deletion and back to the [Specific consumption measuring point] dialog box.

After the specific consumption measuring point is deleted, its registration information is removed from the list in the [Specific consumption measuring point] list.

Remarks

- You can delete it by clicking the right-click menu [Delete Sp-Cons. information], or by pressing the [Delete] key.

Editing a registered specific consumption measuring point

This section describes how to edit registration information of a specific consumption measuring point.

1 Displaying the [Specific consumption measuring point] dialog box

Click the [Specific consumption] button in the dialog box of project setting.

2 Selecting a specific consumption measuring point you want to edit, and clicking the [Edit] button

Double-click a line of a specific consumption measuring point you want to edit on the list in the [Specific consumption measuring point] list dialog box, or select a line of a specific consumption measuring point you want to edit, and then click the [Edit] button.

Line of a specific consumption measuring point to be edited

ID	Specific consumption measuring point name	Energy amount	Unit	Monitoring
b01	Sp-Cons.1	Measuring point1	kWh	<input type="checkbox"/>
b02	Sp-Cons.2	Measuring point2	kWh	<input checked="" type="checkbox"/>
b03				
b04				
b05				
b06				
b07				
b08				
b09				
b10				
b11				
b12				
b13				

ID(Sp-Cons.):

Name(Sp-Cons.):

Unit:

Energy amount(numerator)

Item name:

Unit:

Production (Denominator)

Item name:

Unit:

Decimal:

Click the Edit button to enable changes.

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The entries and conditions for each item are similar to those at registering a new specific consumption measuring point.

4.6.3. Equipment registration


This section explains the procedure on the [Equipment].

In the [Equipment], you can set equipment parameters: "Std. cycle", "Time 1", "Time 2", "Quantity 1" and "Quantity 2".

- Std. cycle : Standard cycle time
- Time 1 : The loading time
- Time 2 : The stop time
- Quantity 1 : The process quantity
- Quantity 2 : The qualified product quantity

Based on these parameters, the EcoWebServerIII main unit calculate and display the "Availability", "Performance", "Quality" and "Overall equipment efficiency" that are indexed of equipment efficiency. Also, the graphs of the display measuring point and the equipment efficiency can be displayed side-by-side by registering "display measuring point" for equipment. (A maximum of 10 "display measuring points" can be registered per equipment.)

A maximum of 42 points for equipment can be registered.

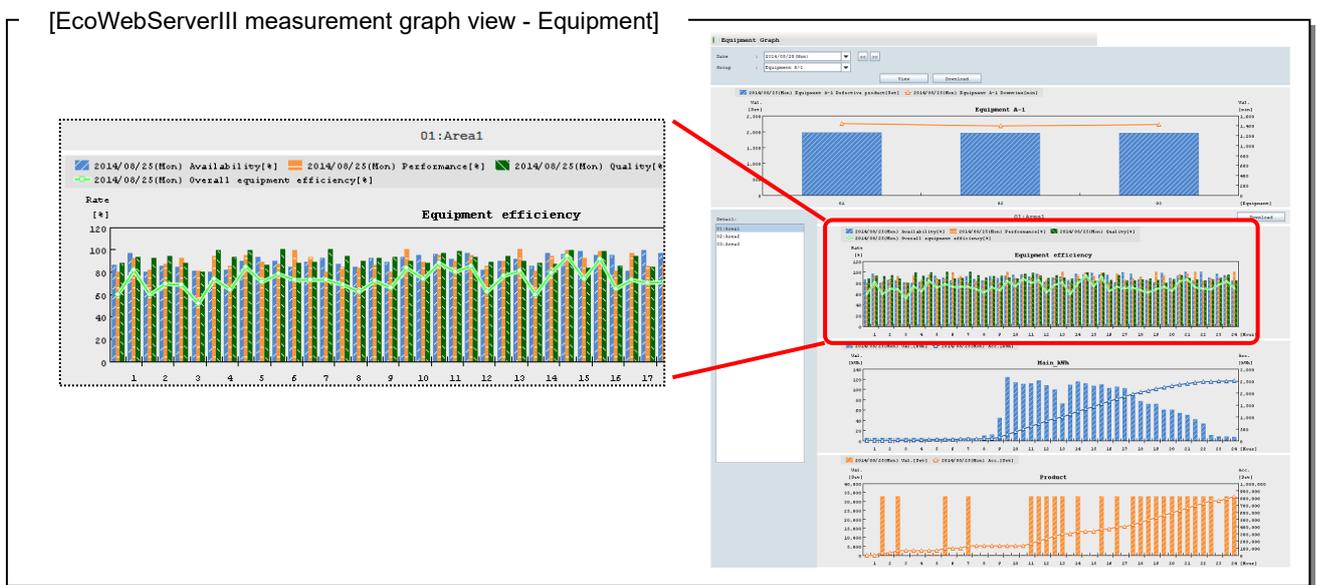


* For details about the measurement graph view, refer to **Instruction Manual – Operation**.

Checking the list of registered equipment

The following describes how to display and check the list of equipment.

1 Displaying the [Equipment list] dialog box

Click the [Equipment] button in the project setting screen.

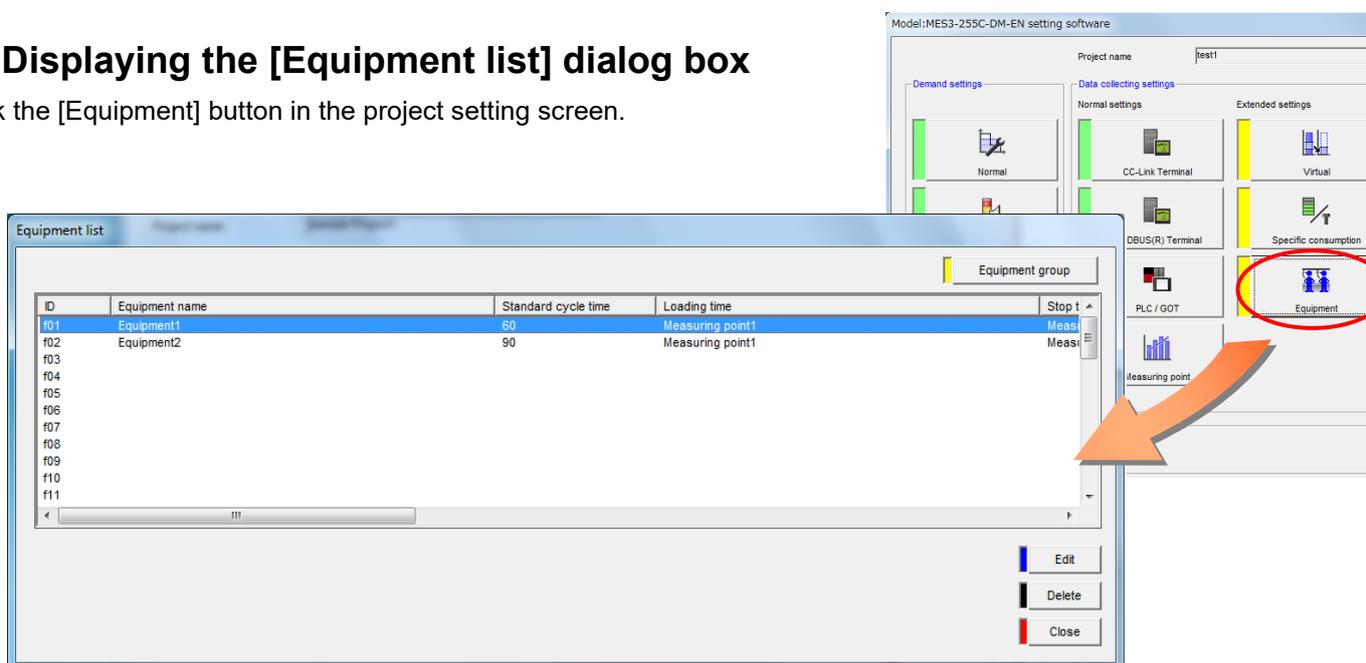

2 Checking the registration information

Check the following information displayed on the list.

- [ID] : Equipment ID
- [Equipment name] : Name of registered equipment
- [Standard cycle time] : Registered reference cycle time
- [Loading time] : Name of a measuring point registered as a loading time
- [Stop time] : Name of a measuring point registered as a stop time
- [Process quantity] : Name of a measuring point registered as a process quantity
- [Qualified product quantity] : Name of a measuring point registered as a qualified product quantity
- [Display measuring point ID] : Measuring point ID or virtual measuring point ID registered as a display measuring point ID (displayed in order of setting)

Registering new equipment


This section describes how to register new equipment.

1 Displaying the [Equipment list] dialog box

Click the [Equipment] button in the dialog box of project setting.

2 Displaying the [Equipment] dialog box

Double-click a line of an equipment ID you want to register on the list in the [Equipment list] dialog box, or select a line of an ID you want to register, and then click the [Edit] button.

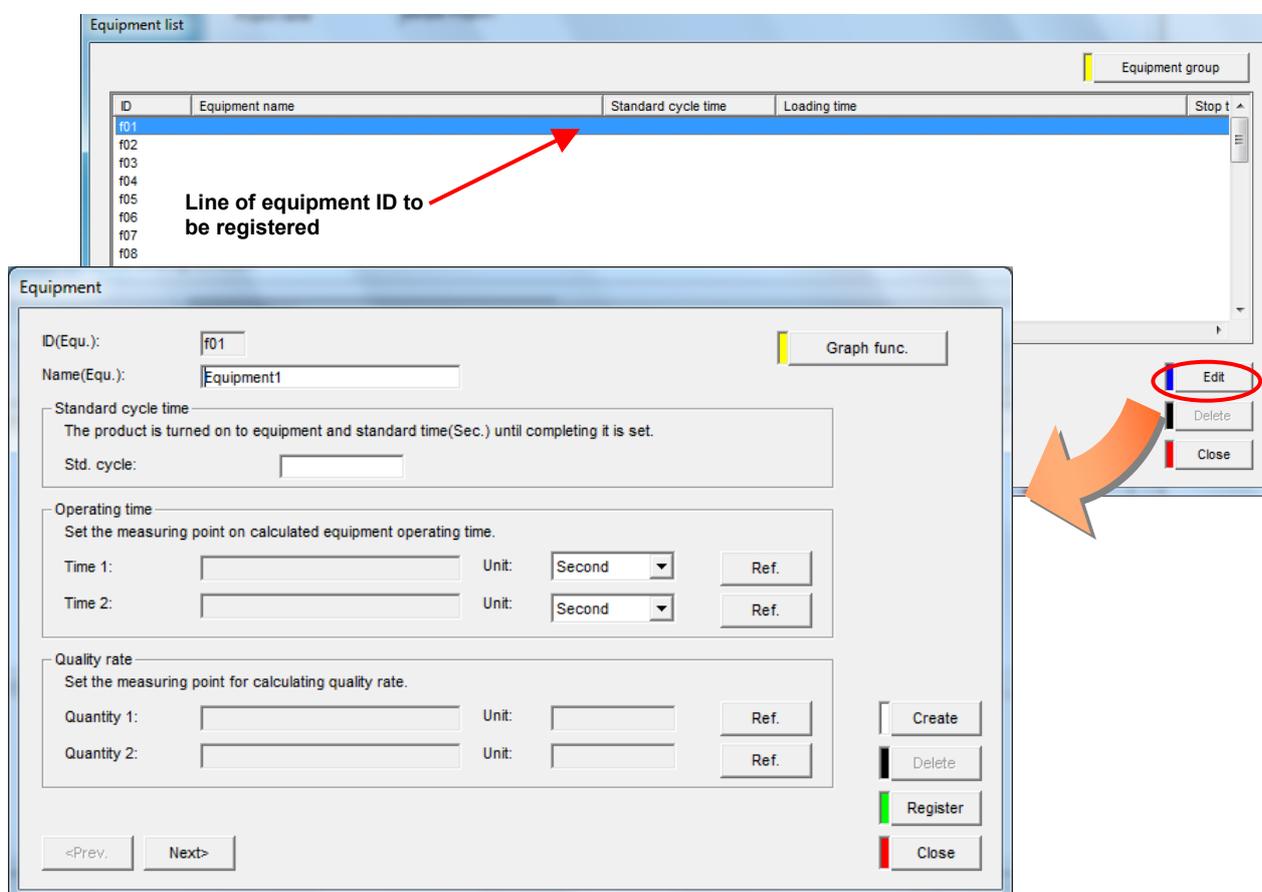

Remarks

- You can select and register any virtual measuring point. (Also, you can create a free ID.)
- You cannot register equipment when no measuring point or virtual measuring point for an integrated value is registered. (The [Edit] button is disabled.)

3 Entering or selecting the items

(1) [Name(Equ.)]

Enter a name of equipment.

(This equipment name is shown on the EcoWebServerIII page.)

Name(Equ.):

The entry conditions are as follows.

Number of characters	Up to 24 characters
Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >

*1 If you use any disallowed characters, which are listed in "Appendix: Disallowed Character List," the characters may not be displayed properly in the browser display of EcoWebServerIII.

*2 A duplicate equipment name can be registered.

(2) [Std. cycle]

Enter a reference time between the introduction of a product into the equipment and the completion.

Standard cycle time
The product is turned on to equipment and standard time(Sec.) until completing it is set.

Std. cycle:

The entry conditions are as follows.

Range	1 to 2678400 [seconds]
-------	------------------------

(3) [Time 1], [Time 2]

Set measuring points to measure the loading time ([Time 1]) and the stop time ([Time 2]) of the equipment.

Operating time
Set the measuring point on calculated equipment operating time.

Time 1: Unit:


Time 2: Unit:

After you clicked the [Ref.] button, the [Selection of the measuring point] dialog box will appear.

Double-click a line of a measuring point you want to set,

Or

Select a line of a measuring point you want to set, and then click the [Select] button.

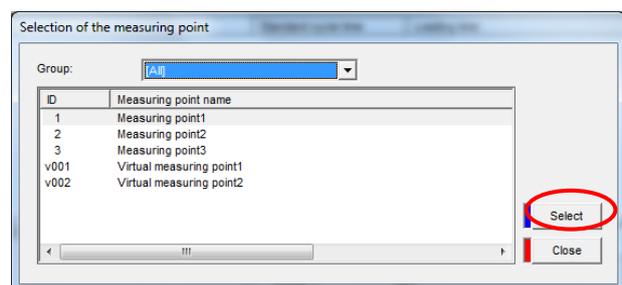

<Unit>

Select a unit from [Second], [Minute], and [Hour].

* **The unit is used at the calculation of "Time availability".**

Match it with the unit registered for the measuring point selected as a loading time and a stop time.

(Ex.) The unit of the measuring point selected is a second => Select the "Second".

The unit of the measuring point selected is a minute => Select the "Minute".

The unit of the measuring point selected is an hour => Select the "Hour".

(4) [Quantity 1], [Quantity 2]

Set the measuring points to measure the process quantity ([Quantity 1]) and qualified product quantity([Quantity 2]).

Quality rate
Set the measuring point for calculating quality rate.

Quantity 1: Unit: Ref.

Quantity 2: Unit: Ref.

After you clicked the [Ref.] button, the [Selection of the measuring point] dialog box will appear.

Double-click a line of a measuring point you want to set,

Or

Select a line of a measuring point you want to set, and then click the [Select] button.

Selection of the measuring point

Group: [All]

ID	Measuring point name
1	Measuring point1
2	Measuring point2
3	Measuring point3
v001	Virtual measuring point1
v002	Virtual measuring point2

Select

Close


4 Setting a display measuring point

Set measuring points to display graphs under the equipment efficiency graph in the measurement graph view of equipment.

(1) Add/delete a display measuring point

After you clicked the [Graph func.] button in the [Equipment] dialog box, the [Registration of display measuring point] dialog box will appear.

[EcoWebServerIII measurement graph view - Equipment]

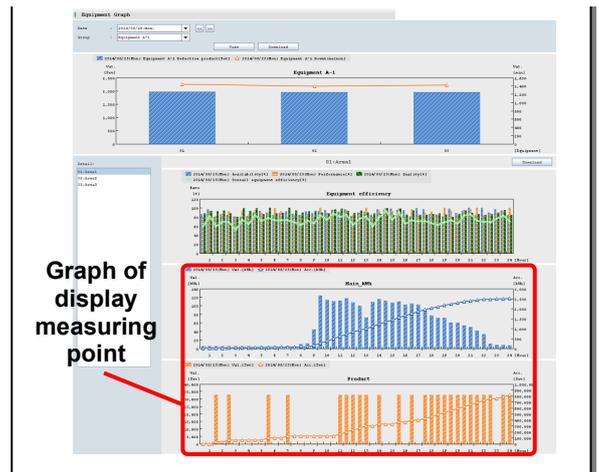

Double-click a line of a measuring point you want to register in the [Unregistered ID], or Select a line of a measuring point you want to register, and then click the [->] button

Registration of display measuring point

D(Equ.): [R01]

The measuring point used for graphic display shall be set (Maximum 10).

Registered ID:

ID	Measuring point name

Unregistered ID:

ID	Measuring point name
1	Measuring point1
2	Measuring point2
3	Measuring point3
v001	Virtual measuring point1
v002	Virtual measuring point2

[->]

Register

Close

Order will be registered in the order in which they appear in the orach.



Registration of display measuring point

D(Equ.): [R01]

The measuring point used for graphic display shall be set (Maximum 10).

Registered ID:

ID	Measuring point name
1	Measuring point1

Unregistered ID:

ID	Measuring point name
2	Measuring point2
3	Measuring point3
v001	Virtual measuring point1
v002	Virtual measuring point2

[->]

Register

Close

Order will be registered in the order in which they appear in the orach.

The measuring point selected is added to the last line in the [Registered ID].

*1 If you want to delete a measuring point from a group, double-click a line of the measuring point you want to delete on the [Registered ID], or select a line of a measuring point you want to delete, and then click the [->] button

(2) Change the order in which the display measuring points are listed

The graphs in the "Graph view - Equipment Graph" of the EcoWebServerIII is displayed in order of measuring points registered in [Registered ID],

To change the registration order of the measuring points in the [Registered ID], select a line of equipment, and click the [↑] button and the [↓] button.

Click [↑] button once to move up one line.

Click [↓] button once to move down one line.

(3) Register a display measuring point

Click the [Register] button on the [Registration of display measuring point] dialog box.

5 Registering

Click the button on the [Equipment] dialog box to register equipment.




[Register] button : Register equipment information you set.

[Close] button : Back to the [Equipment list] dialog box.

* If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details.

Reset the details so as to meet the conditions of each item.

(Example of display)

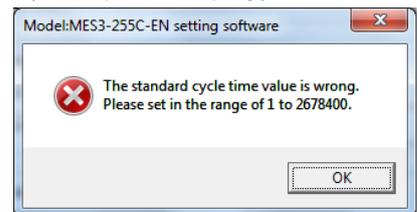


*2 After modification of entry details of each item, click the [Create],[<Prev.], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] : To register

[No] : Not to register.


[Cancel] : Back to the [Equipment] dialog box.

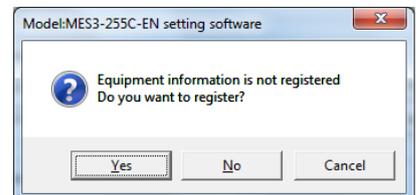

<To register equipment continuously>

To register equipment continuously, click the [Create] button and repeat the step 3 to 5. Click the [<Prev.] button to check, delete, and change the registration information of the previous equipment.

Click the [Next>] button to check, delete, and change the registration information of the next equipment.

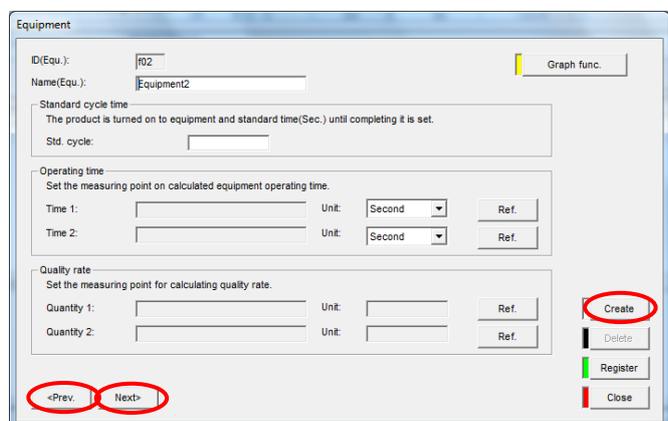The 'Equipment' registration dialog box is shown. It has fields for 'ID(Equ.)' (value: #02) and 'Name(Equ.)' (value: Equipment2). There are sections for 'Standard cycle time', 'Operating time' (with Time 1 and Time 2 fields), and 'Quality rate' (with Quantity 1 and Quantity 2 fields). At the bottom, there are buttons for '<Prev.', 'Next>', 'Create', 'Delete', 'Register', and 'Close'. The 'Create', '<Prev.', and 'Next>' buttons are circled in red.

Deleting registered equipment


This section describes how to delete registered equipment.

1 Displaying the [Equipment list] dialog box

Click the [Equipment] button in the dialog box of project setting.


2 Selecting equipment you want to delete, and clicking the [Delete] button

Select a line of a measuring point you want to delete in the list in the [Equipment list] dialog box, and then click the [Delete] button.

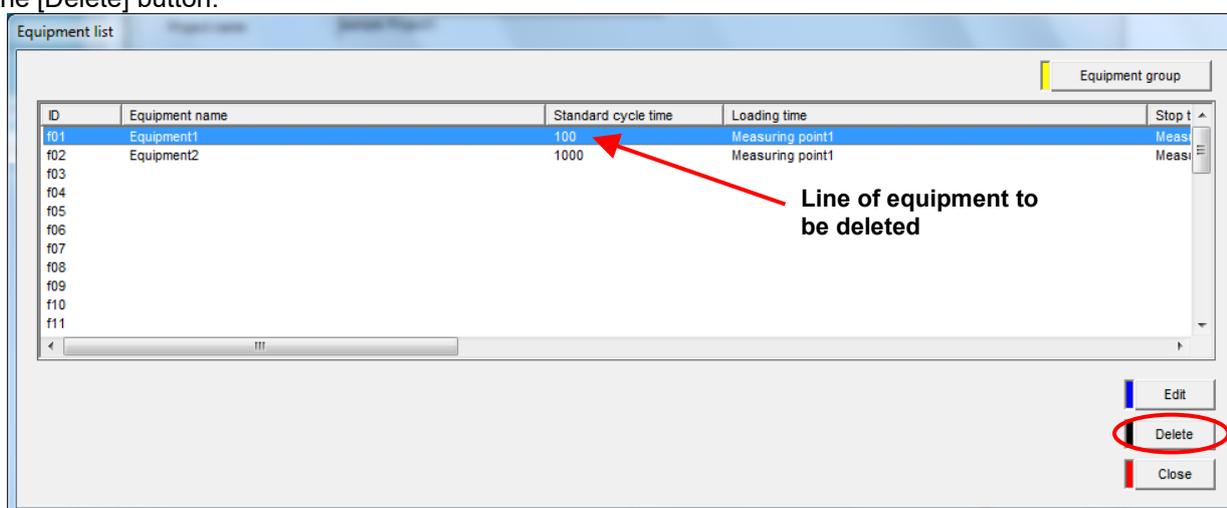

3 Deleting


A delete confirmation message appears. Click the button to delete the terminal.

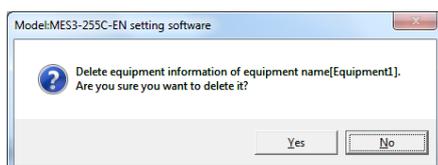

[Yes] button : Delete the equipment and back to the [Equipment list] dialog box.

[No] button : Cancel the deletion and back to the [Equipment list] dialog box.

After the equipment is deleted, its registration information is removed from the list in the [Equipment list].

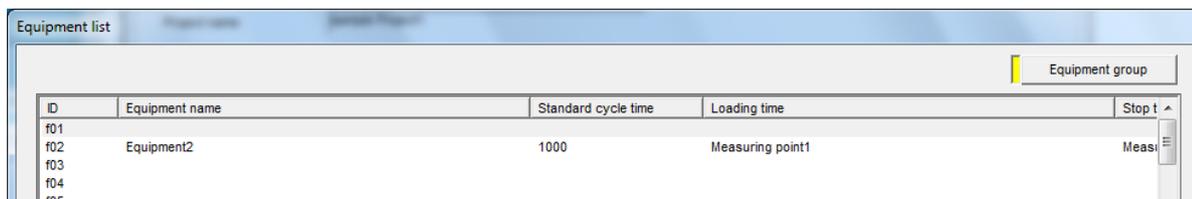

Remarks

- You can delete it using the [Delete] button on the [Equipment] dialog box.

Editing the registered information of registered equipment


This section describes how to edit registration information of equipment.

1 Displaying the [Equipment list] dialog box

Click the [Equipment] button in the dialog box of project setting.

2 Selecting equipment you want to edit, and clicking the [Edit] button

Double-click a line of equipment you want to edit on the list in the [Equipment list] dialog box, or Select a line of equipment you want to edit, and then click the [Edit] button.

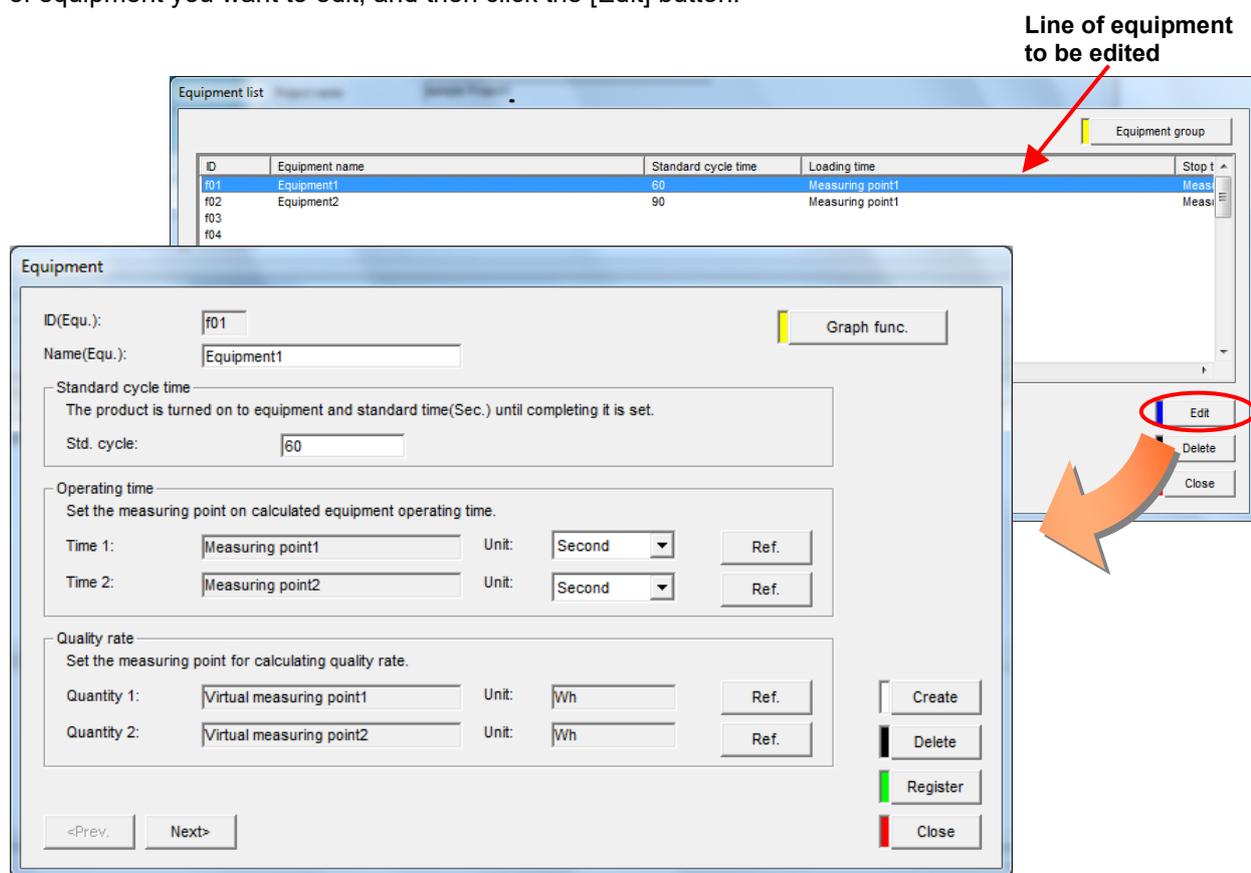

3 Editing the items to be changed and registering them

After editing the items to be changed, click the [Register] button.

* The entries and conditions for each item are similar to those at registering new equipment.

4.6.4. Equipment group registration

This section explains the procedure on the registration of device group. Equipment group refers to a group of equipment. It is listed in the "Measurement graph view - Equipment of the EcoWebServerIII for each equipment group registered here. A maximum of 42 groups can be registered.

[EcoWebServerIII Graph view - Equipment Graph]

Equipment group selection

Graph of equipment group:
With the equipment included in the selected equipment group as the horizontal axis, display the total of defective products and downtime for a day in the graph.

Equipment details list:
List in order of the equipment group registered.

* For details about the measurement graph view, refer to **Instruction Manual – Operation**.

Remarks

- Equipment registered on the [Equipment] must be registered in any of groups. When there is equipment that is not registered in equipment group, a project can be saved but cannot be written into the EcoWebServerIII.
- You can register one equipment to more than one equipment group at the same time.

Checking the list of registered equipment groups


The following describes how to display and check the list of equipment groups.

1 Displaying the [Equipment list] dialog box

Click the [Equipment] button in the dialog box of project setting.

2 Displaying the [Equipment group list] dialog box

Click the [Equipment group] button in the dialog box of Device list.

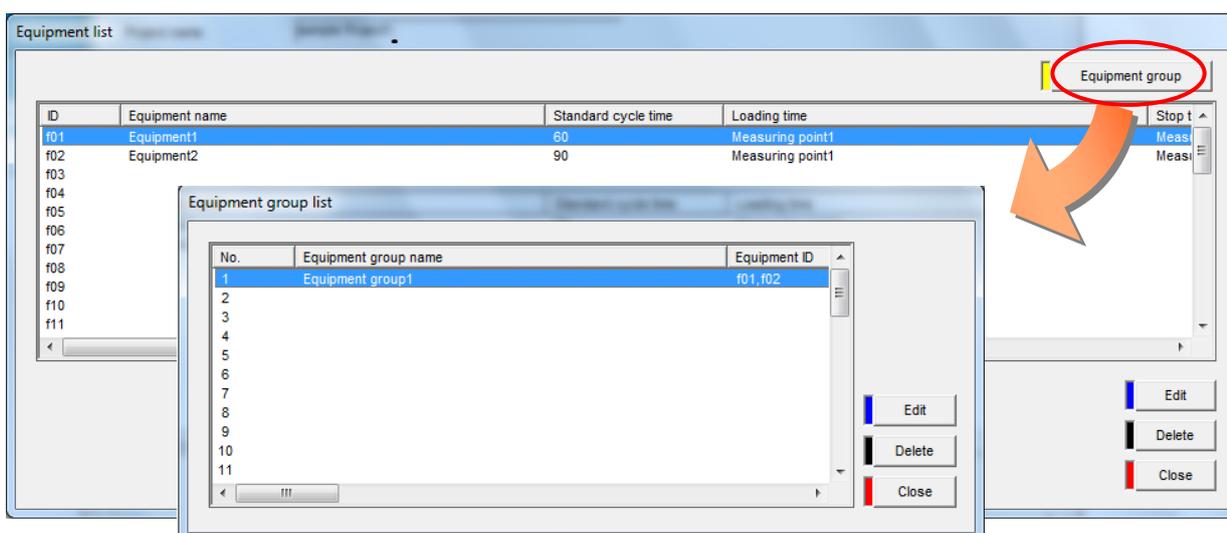

3 Checking the registration information

Check the following information displayed on the list.

- [No.] : Equipment group No.
- [Equipment group name] : Name of registered equipment group
- [Equipment ID] : Measuring point registered to the equipment group

Registering a new equipment group

This section describes how to register a new equipment group.

1 Displaying the [Equipment list] dialog box


Click the [Equipment] button in the dialog box of project setting.

2 Displaying the [Equipment group list] dialog box

Click the [Equipment group] button in the dialog box of device list.

3 Displaying the [Registration of equipment group] dialog box

Double-click a line of the equipment group No. you want to register on the list in the [Equipment group list] dialog box, or select a line of an equipment group No. you want to register, and then click the [Edit] button.

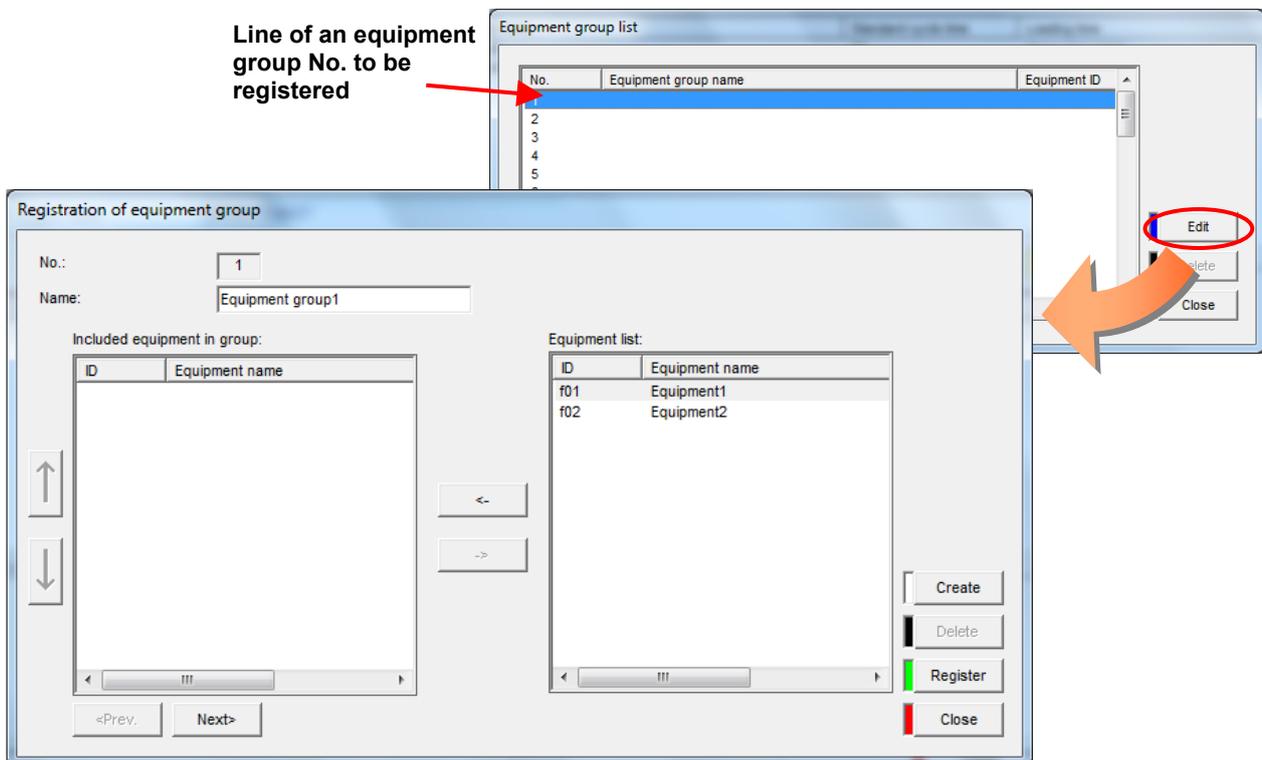

Remarks

- You cannot register an equipment group when no equipment is registered.

4 Entering an equipment group name

Enter a name of equipment group.

(This group name is shown in the "Graph view - Equipment Graph" on the EcoWebServerIII page.)

The entry conditions are as follow:


Number of characters	Up to 24 characters
Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

*1 If you use any disallowed characters, which are listed in "Appendix: Disallowed Character List," the characters may not be displayed properly in the browser display of EcoWebServerIII.

*2 A duplicate equipment group name cannot be registered.

5 Adding equipment to an equipment group

Double-click a line of equipment you want to add to a group on the [Equipment list], or select a line of equipment you want to add to a group, and then click the [->] button.

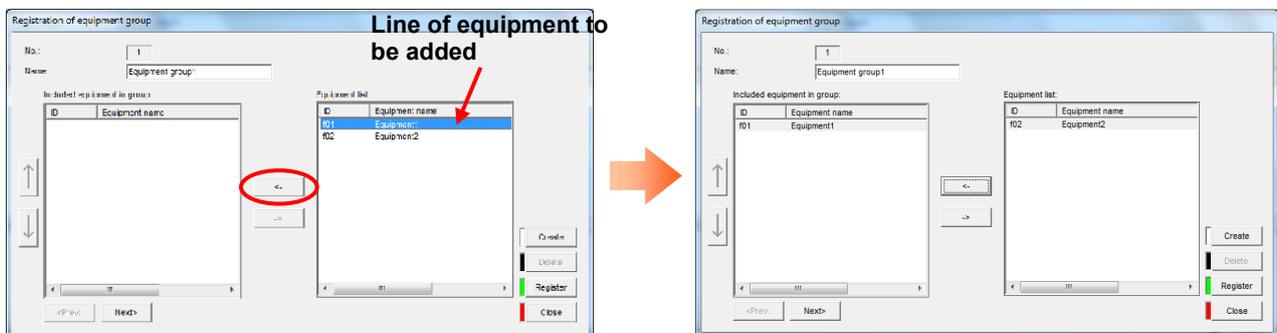

The selected measuring point is added to the last line in the [Included equipment in group].

* If you want to delete equipment from a group, double-click the line of the measuring point you want to delete on the [Included equipment in group], or select a line of equipment you want to delete, and then click the [->] button.

6 Changing the order in which the equipment are listed

The equipment details list in the "Graph view - Equipment Graph" of the EcoWebServerIII is displayed in order of equipment registered in the [Included equipment in group].

To change the registration order of the equipment in the [Included equipment in group] area, select a line of equipment, and click the [↑] button and the [↓] button.

Click [↑] button once to move up one line.

Click [↓] button once to move down one line.


7 Registering

Click the button on the [Registration of equipment group] dialog box to register equipment.




- [Register] button : Register the equipment group with information you set. The registration information will be reflected to the [Equipment group list] dialog box.
- [Close] button : Back to the [Equipment group list] dialog box.

*1 If there is no equipment in the [Included equipment in group], the message on the right will appear at clicking the [register] button. Click the [OK] button to register equipment.

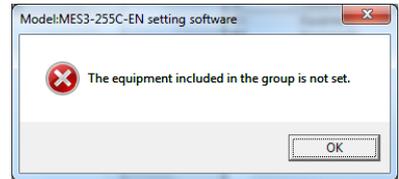


*2 If there is equipment that is not registered in any equipment group, the message on the right will appear at clicking the [Close] button.

- [Yes] button : Close the [Registration of equipment group] dialog box.
- [No] button : Back to the [Registration of equipment group] dialog box.

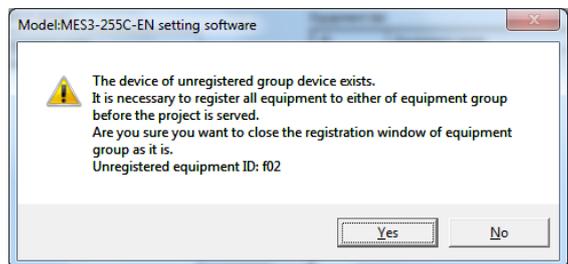


*3 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item.

(Example of display)

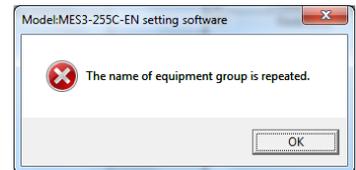


*4 After modification of entry details of each item, click the [Create], [<Prev.], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

- [Yes] button : To register
- [No] button : Not to register
- [Cancel] button : Back to the [Registration of device group] dialog box.

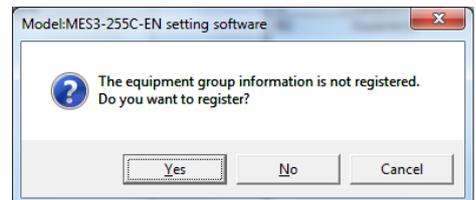

<To register equipment group continuously>

To register equipment groups continuously, click the [Create] button and repeat the step 4 to 7. Click the [< Prev.] button to check, delete, and change the registration information of the previous equipment group. Click the [Next >] button to check, delete, and change the registration information of the next equipment group.

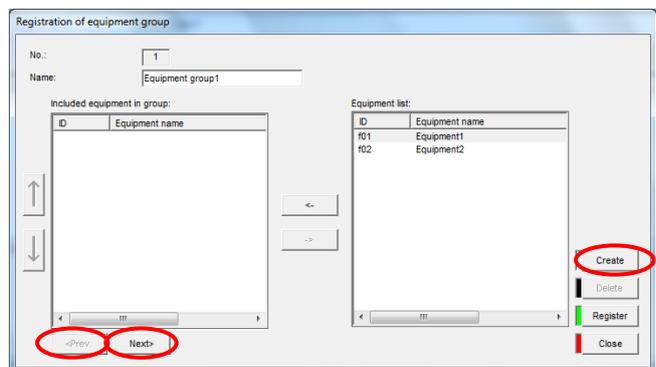

Deleting a registered equipment group


This section describes how to delete a registered equipment group.

1 Displaying the [Equipment group list] dialog box

Click the [Registration of equipment group] button in the dialog box of device list.


2 Selecting an equipment group you want to delete, and clicking the [Delete] button

Select a line of an equipment group you want to delete in the list in the [Equipment group list] dialog box, and then click the [Delete] button.

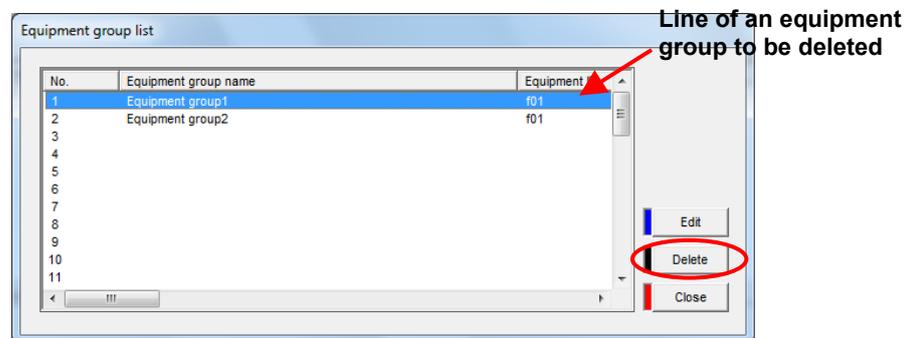

3 Deleting

The message confirming deletion is displayed. Click the button to execute deletion.

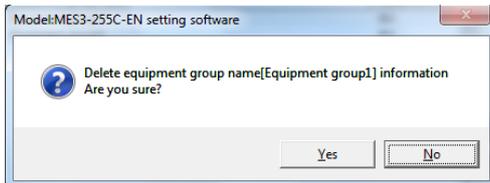

[Yes] button : Delete the equipment group and back to the [Equipment group list] dialog box.

[No] button : Cancel the deletion and back to the [Equipment group list] dialog box.

After the equipment group is deleted, its registration information is removed from the list in the [Equipment group list].



Remarks

- You can delete it using the [Delete] button on the [Registration of equipment group] dialog box.

Editing the registered information of a registered equipment group


This section describes how to edit registration information of an equipment group.

1 Displaying the [Equipment group list] dialog box

Click the [Registration of equipment group] button in the dialog box of device list.

2 Selecting an equipment group you want to edit, and clicking the [Edit] button

Double-click a line of the equipment group you want to edit on the list in the [Equipment group list] dialog box, or Select a line of equipment group you want to edit, and then click the [Edit] button.

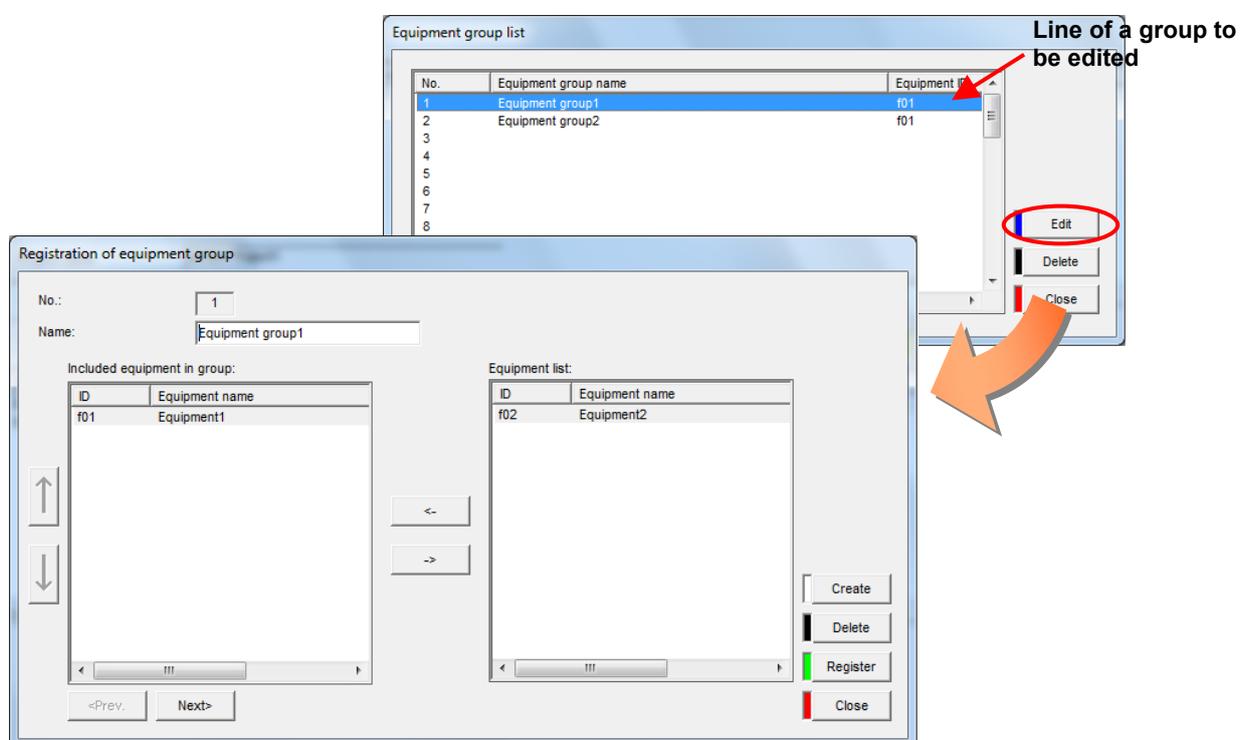

3 Editing the items to be changed and registering them

After editing the items to be changed, click the [Register] button.

* The entries and conditions for each item are similar to those at registering a new equipment group.

4.7. Project operation

This section explains the procedure to save the project created in "Basic settings" and "Advanced settings", and project writing, reading and confirmation on EcoWebServerIII.


4.7.1. Project saving

This section explains the operation procedure in [Save].


Saving the project

1 Saving

(1) Click the [Save] button in the dialog box of Project setting.

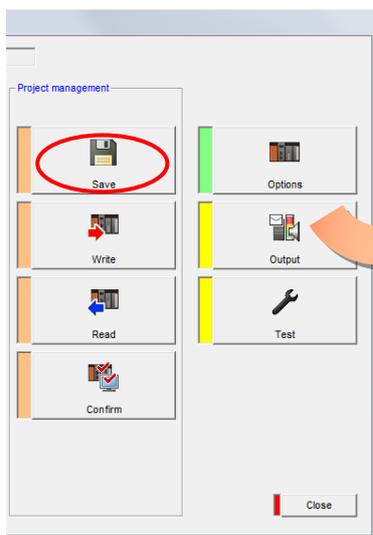


(2) The project saving message is displayed.

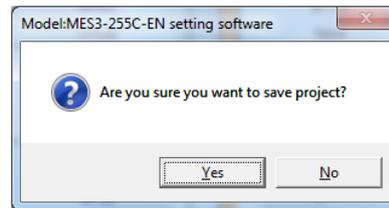


[Yes] button : To save the project
[No] button : To cancel saving

*1 If there remain the equipment not registered in the equipment group, the message shown on the right is displayed. Project saving can be completed, but project writing is disabled. Make sure to register all the equipment in the equipment group.

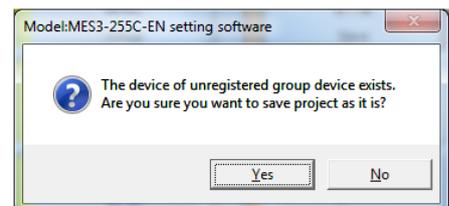

(3) After saving is completed, the following message is displayed.

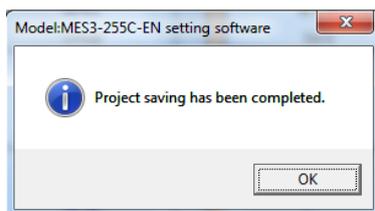

4.7.2. Project writing


This section explains the operation procedure in the dialog box of [Write].

Writing the project via LAN


This section explains the procedure to write the set project in the memory card on EcoWebServerIII via LAN.

1 Displaying the dialog box of [Write]

(1) Click the [Write] button in the dialog box of Project setting.

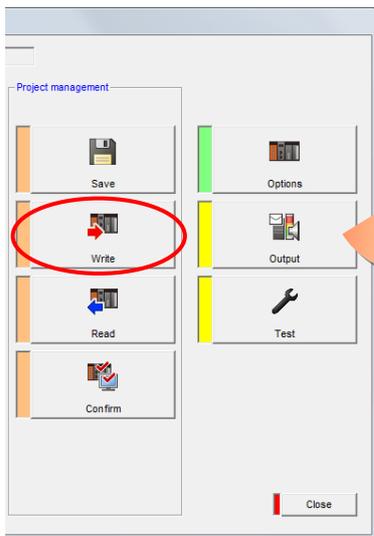


(2) The message confirming project saving is displayed. The project must be saved before writing.

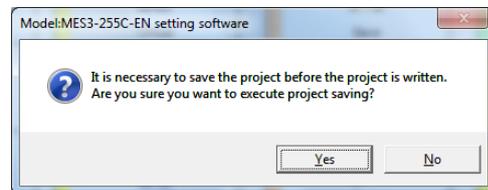


[Yes] button : To save the project and display the project confirmation dialog box.

[No] button : To cancel saving and writing

- * If there remain the equipment not registered in the equipment group, the message shown below is displayed. Project saving can be completed, but project writing is disabled. Make sure to register the equipment in the equipment group. Execute writing after registering the all in each group.

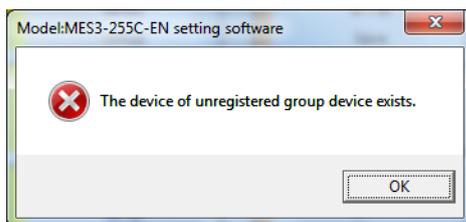


(3) The dialog box of [Write project] is displayed.

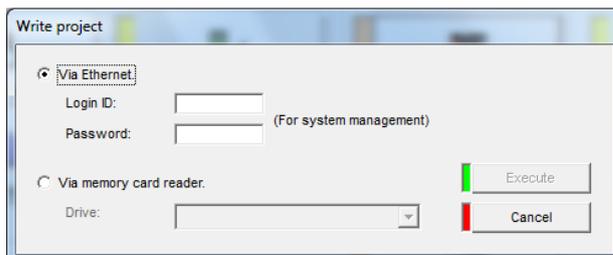

2 Inputting the login ID and password


Select the [Via Ethernet] radio button, and input the login ID and password for system administration in the [Login ID] and [Password] text boxes respectively. (The default login ID and password are "ecoV" and "ecopass".)

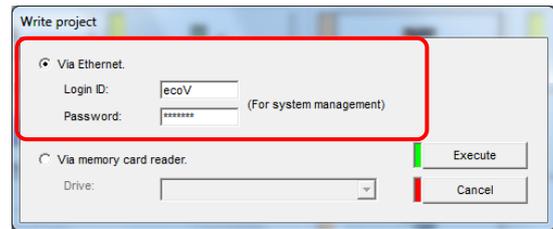

3 Writing the project

- (1) By clicking the [Execute] button in the dialog box of [Write project], the writing confirmation message is displayed.

[Yes] button : To execute project writing
 [No] button : To cancel project writing

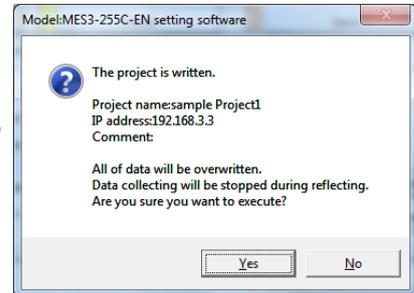

*1 During writing project (during reflecting setting value), collection of the measuring point data will stop.

*2 In the following cases, need to reset the product after writing.

After the factory, when the project writing for the first time

When the station number information of CC-Link terminal is changed etc.

Reset confirmation message appears after writing.


[Yes] button: After writing of the project, run the reset.

[No] button: Stop the writing of the project.


*3 The message of right will be displayed when it was terminated by an error in the previous project writing process.

[No] button : To cancel project writing
 [Yes] button : To execute project writing


When the writing of the project failed again, following message will display.

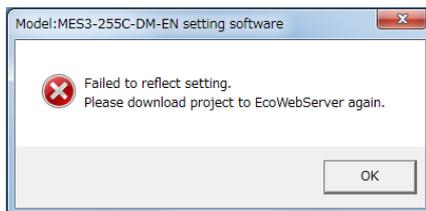

[OK]: To cancel project writing

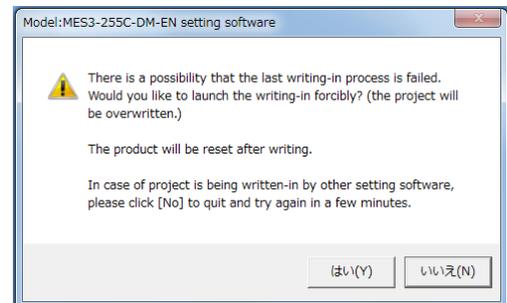

- (2) When writing and reset are completed, the following message is displayed.

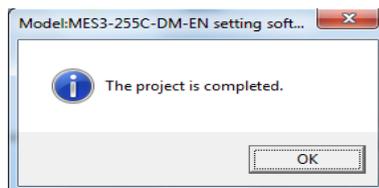


Caution

Do not execute project writing from the multiple client PCs concurrently. Otherwise, the writing may not be performed properly, and EcoWebServerIII may not be launched.

<For error message at the time of project writing >


- *1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed. Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

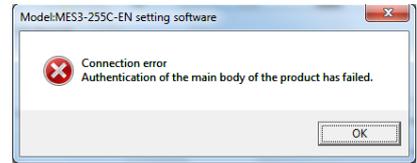

- *2 For a wrong login name or a wrong password, the message shown on the right is displayed.



- *3 When it fails during the writing process of the project, an error message is displayed. Message contents will vary depending on the occurrence factors and processing content. Refer to the table below.

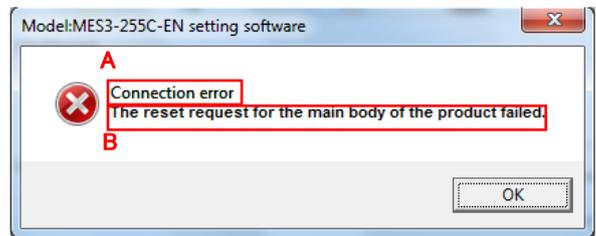

A	To display the error factor	
	Connection error	When there is no response from the EcoWebServerIII.
	Timeout error	When timed out while communicating with the EcoWebServerIII.
	Communication error	When there is error response from the EcoWebServerIII.

B To display the processing contents when error occurs

When many times fail to writing project, reset the product or write again later.

Remarks

- Project writing overwrites the existing project. Remember this.
- After completion of project writing, once close the Web browser and restart it. The changes may not be reflected in the displayed contents depending on the cache function of the browser.


Writing the project via drive

This section explains the procedure to write the project in the CompactFlash card using the CompactFlash reader/writer, etc.


* **Power off EcoWebServerIII before inserting/removing the memory card.**

1 Displaying the dialog box of [Write]

(1) Click the [Write] button in the dialog box of Project setting.

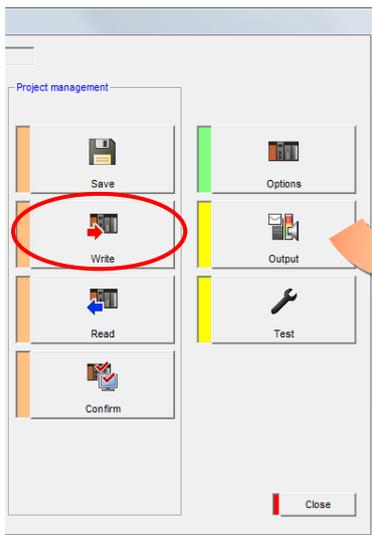


(2) The message confirming project saving is displayed. The project must be saved before writing.

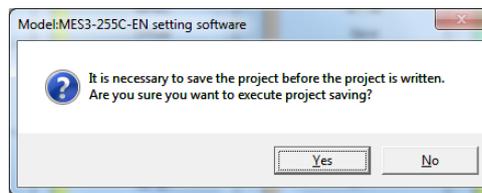


[Yes] button :To save the project and display the project confirmation dialog box.

[No] button :To cancel saving and writing

* If there remain the equipment not registered in the equipment group, the message shown below is displayed. Project saving can be completed, but project writing is disabled. Make sure to register the equipment in the equipment group. Execute writing after registering the all in each group.

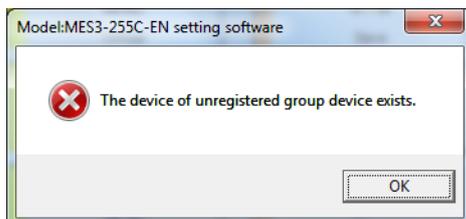


(2) The dialog box of [Write project] is displayed.

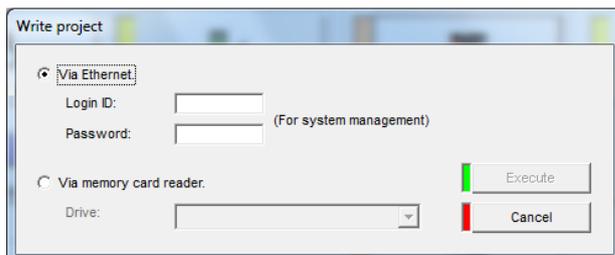

2 Specifying the drive


Select the [Via memory card reader] radio button, and select the drive where the memory card is mounted from the [Drive] pull-down list.

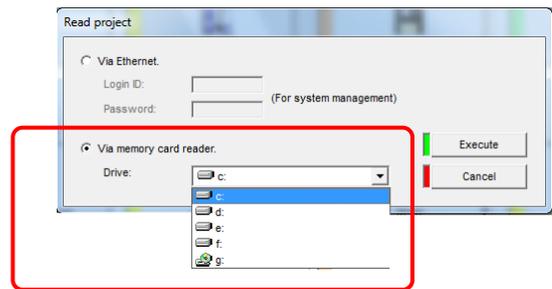


3 Writing the project

- (1) By clicking the [Execute] button in the dialog box of [Write project], the writing confirmation message is displayed.


[Yes] button : To execute project writing
[No] button : To cancel project writing

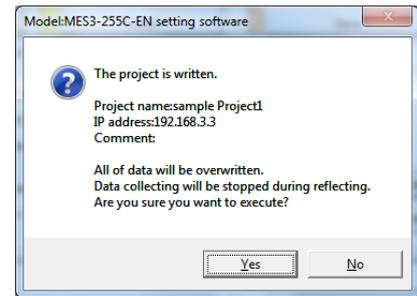

- *1 If the device status is not ready, the message shown on the right is displayed.
Click the [OK] button and confirm the device status.

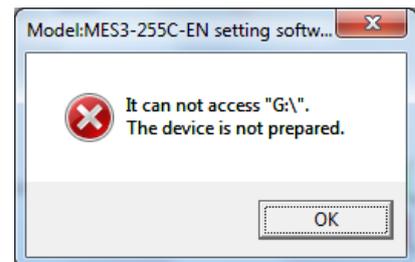

- (2) When writing is completed, the following message is displayed.

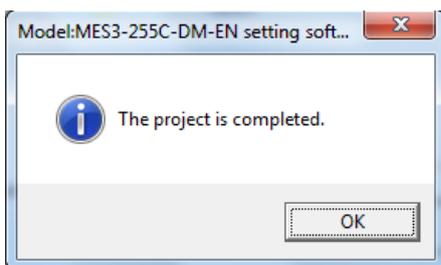

Remarks

- Project writing overwrites the existing project. Remember this.
- First, insert the CF card where the project is written, and then power on EcoWebServerIII.

4.7.3. Project reading


This section explains the operation procedure in the dialog box of [Read].

Reading the project via LAN


This section explains the procedure to read the project from EcoWebServerIII via LAN.

1 Displaying the dialog box of [Read project]

(1) Click the [Read] button in the dialog box of Project setting.

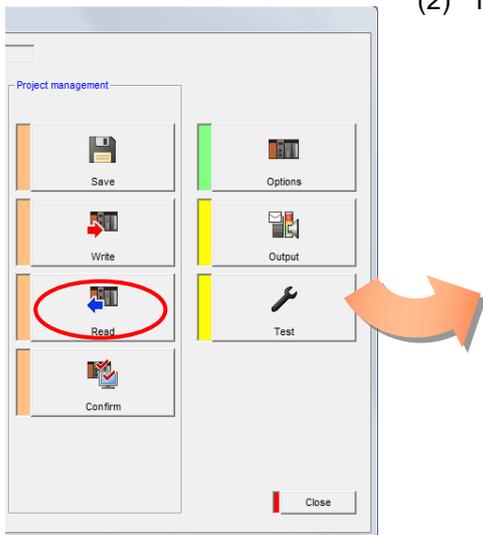


(2) The dialog box of [Read project] is displayed

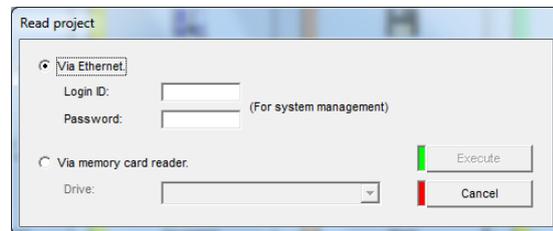

2 Inputting the login ID and password

Select the [Via Ethernet] radio button, and input the login ID and password for system administration in the [Login ID] and [Password] text boxes respectively.

(The default login ID and password are "ecoV" and "ecopass".)

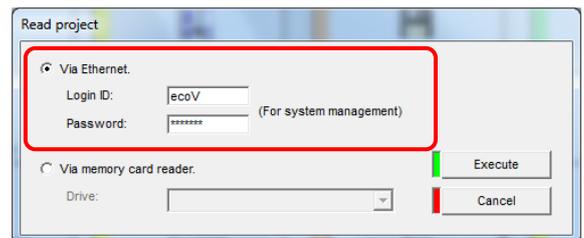


3 Reading the project


(1) By clicking the [Execute] button in the dialog box of [Read project], the reading confirmation message is displayed.

[Yes] button : To execute project reading


[No] button : To cancel project reading

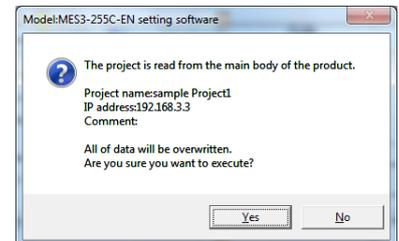

*1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.
Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

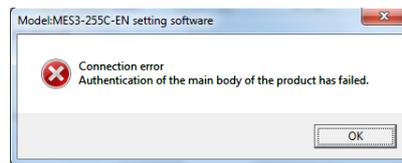

*2 For a wrong login ID or a wrong password, the message shown on the right is displayed.

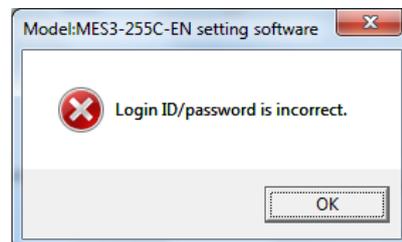

Remarks

- Project reading overwrites the project that is being set now. Remember this.
- To read project continuously, be done after waiting for about 30 seconds.


Reading the project via drive

This section explains the procedure to read the project from the memory card using the memory card reader/writer, etc.



* **Power off EcoWebServerIII before inserting/removing the memory card.**

1 Displaying the dialog box of [Read project]

(1) Click the [Read] button in the dialog box of Project setting.

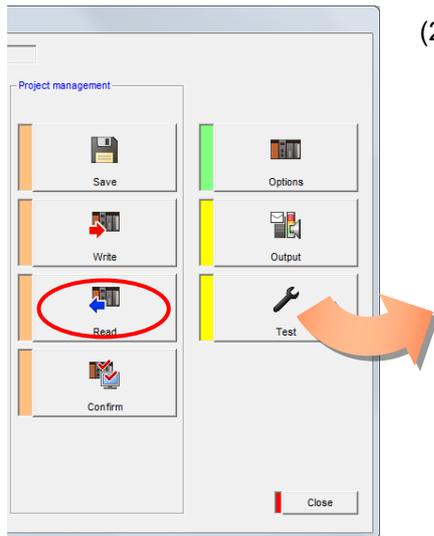

(2) The dialog box of [Read project] is displayed.

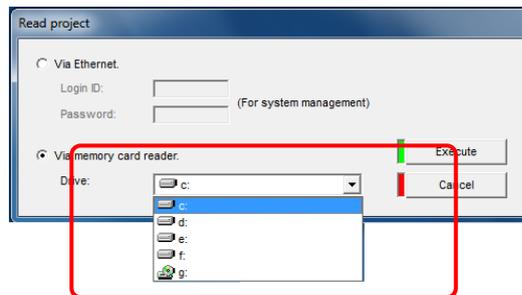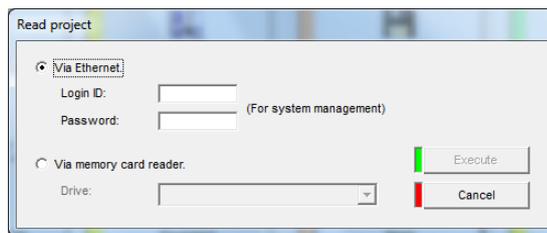

2 Specifying the drive

Select the [Via memory card reader] radio button, and select the drive where the memory card is mounted from the [Drive] pull-down list.


3 Reading the project

(1) By clicking the [Execute] button in the dialog box of [Read project], the reading confirmation message is displayed.


[Yes] button : To execute project reading

[No] button : To cancel project reading

* If the device status is not ready, the message shown on the right is displayed.
Click the [OK] button and confirm the device status.

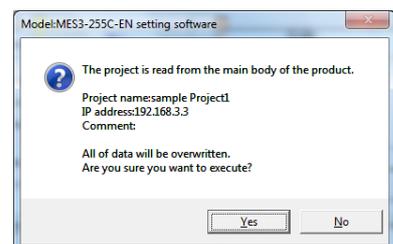

(2) When reading is completed, the following message is displayed.

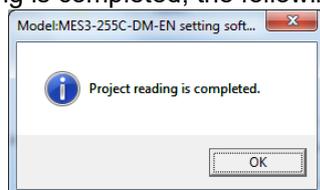

Remarks

- Project reading overwrites the project that is being set now. Please note this.
- Please turn on the EcoWebServerIII after inserting the CF card that wrote the project,

4.7.4. Confirmation of project


This section explains the operation procedure in the dialog box of [Confirm].

Confirm the project via LAN


This section explains the procedure to confirm the project written in EcoWebServerIII and the project saved using this software via LAN.

1 Displaying the dialog box of [Confirm]

(1) Click the [Confirm] button in the dialog box of Project setting.

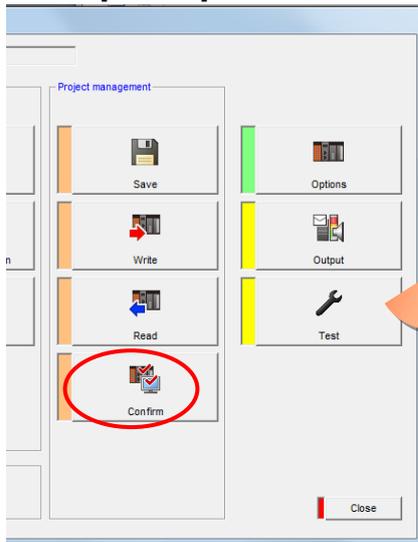

(2) The message is displayed to confirm the project saving.

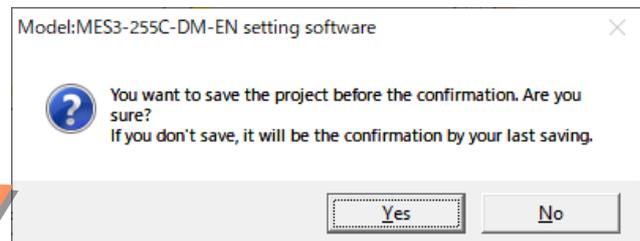


[Yes] : Overwrite the project and displays the project confirmation screen.

[No] : The project confirmation screen is displayed without saving the project.

2 Inputting the login ID and password

Select the [Via Ethernet] radio button, and input the login ID and password for system administration in the [Login ID] and [Password] text boxes respectively. (The default login ID and password are "ecoV" and "ecopass".)

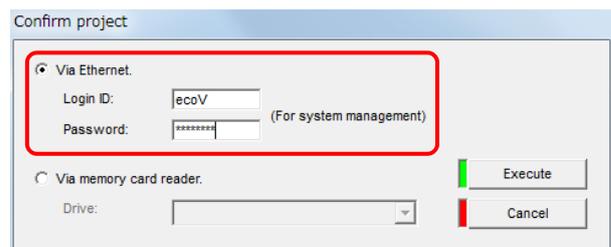


3 Confirm the project


(1) When clicking the [Execute] button of the [Confirm] dialog box, the message is displayed to confirm checking.

[Yes] button : To execute confirmation of project

[No] button : To cancel confirmation of project

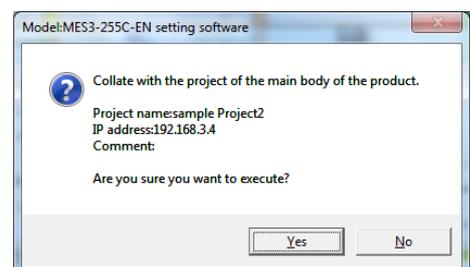

- *1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.
Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

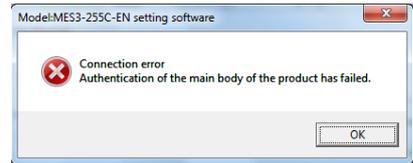


- *2 For a wrong login name or a wrong password, the message shown on the right is displayed.




(2) After completion of confirmation, the confirmation result is displayed.

<If the projects match>

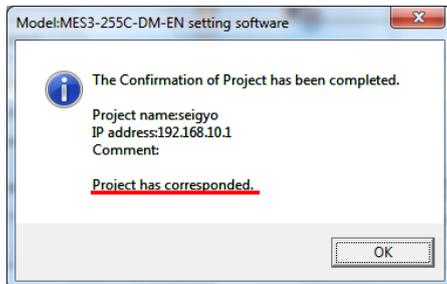

<If the projects do not match>

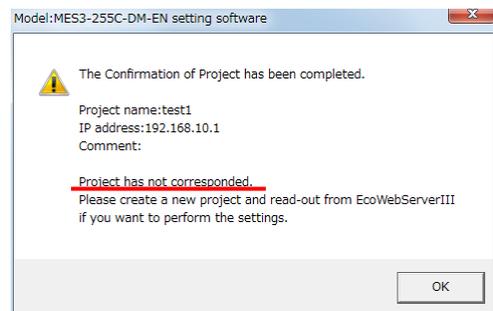

Remarks

- To read confirmation of project continuously, be done after waiting for about 30 seconds.


Confirm the project via drive

This section explains the procedure to confirm a match between the project written in the memory card using the memory card reader/writer and the project saved through this software.


* **Power off EcoWebServerIII before inserting/removing the memory card.**

1 Displaying the dialog box of [Confirm]

(1) Click the [Confirm] button in the dialog box of Project setting.

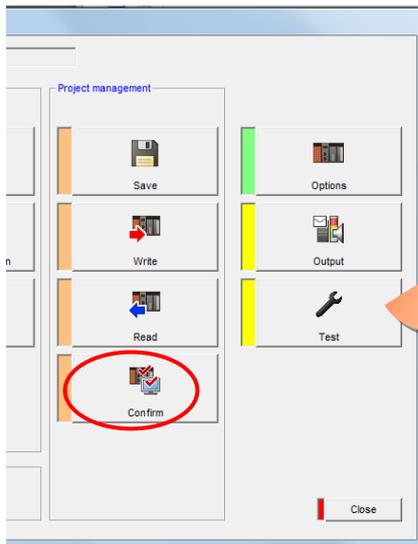

(2) The message is displayed to confirm the project saving.

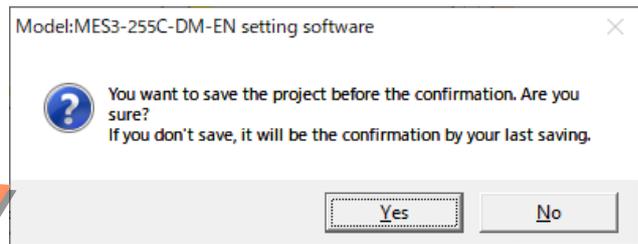


[Yes] : Overwrite the project and displays the project confirmation screen.

[No] : The project confirmation screen is displayed without saving the project.

2 Specifying the drive

Select the [Via memory card reader] radio button, and select the drive where the memory card is mounted from the [Drive] pull-down list.

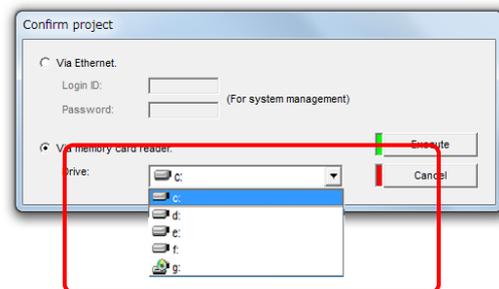


3 Confirm the project

(1) When clicking the [Execute] button of the [Confirm] dialog box, the message is displayed to confirm confirmation .


[Yes] button : To execute confirmation of project

[No] button : To cancel confirmation of project

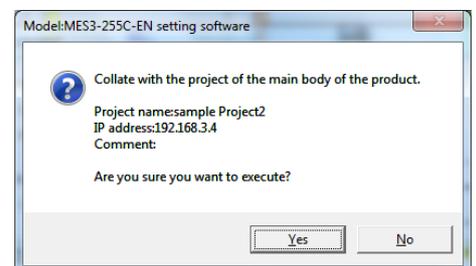


* If the device status is not ready, the message shown on the right is displayed.

Click the [OK] button and confirm the device status.

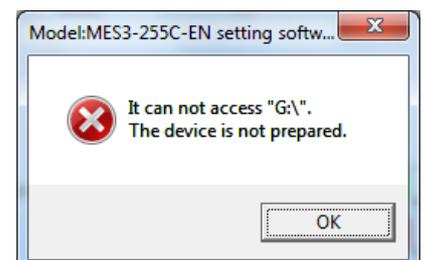


(2) After completion of checking, the checking result is displayed.

<If the projects match>

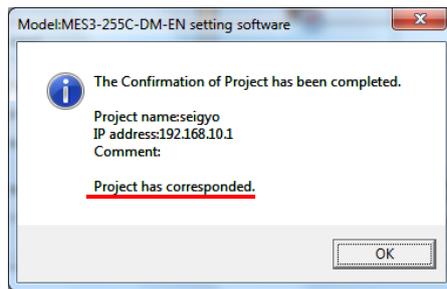

<If the projects do not match>

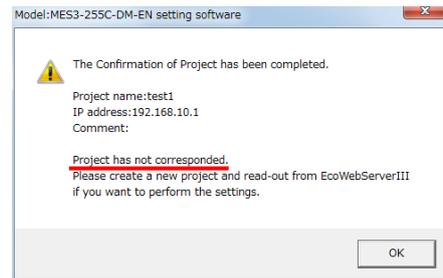


4.8. Options

This section describes the setting related to IP address change, clock setting, password change, etc.

1 Displaying the unit setting screen

Click [Options] on the project setting screen.

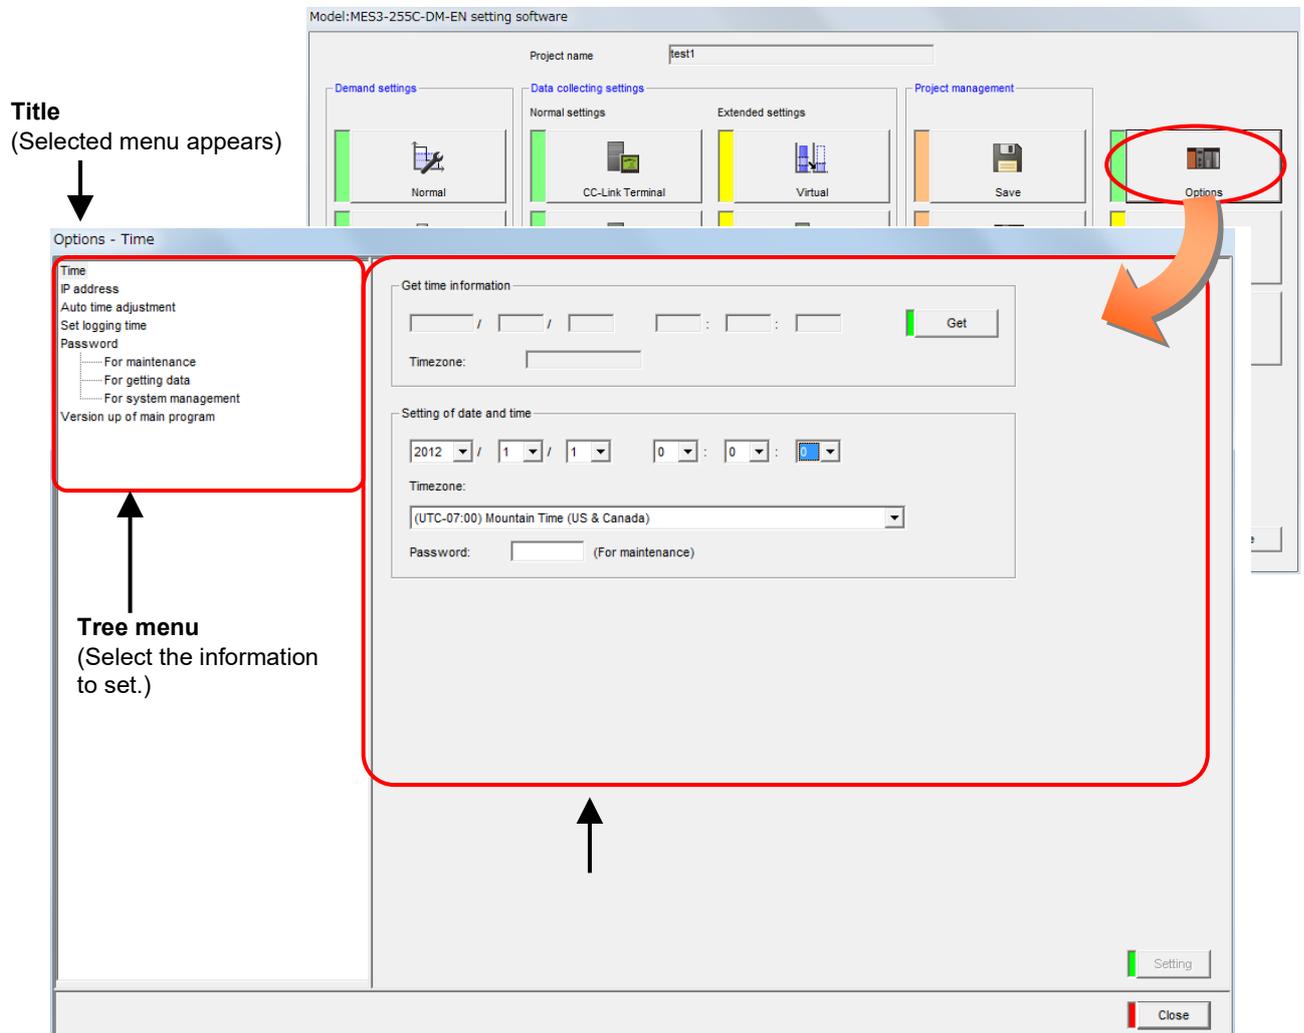


2 Selecting information to set from tree menu

[Time] is selected as the default.

Remarks

- The message shown on the right appears when the settings have been changed. When setting the IP address, click the [Yes] button and save the project.
- The Project setting screen appears when the [Close] button is clicked.

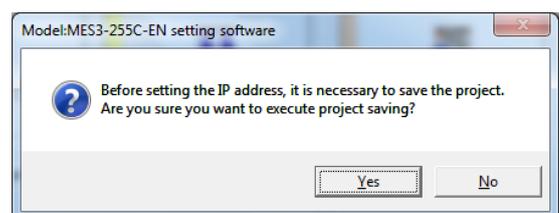

4.8.1. Time Settings


The following describes the steps for operation in [Time].

Reading out the date and time

The following describes the steps for reading out the time that is set to the main unit of EcoWebServerIII.

1 Displaying the [Time] screen

Click [Time] button in the tree menu on the unit setting screen.

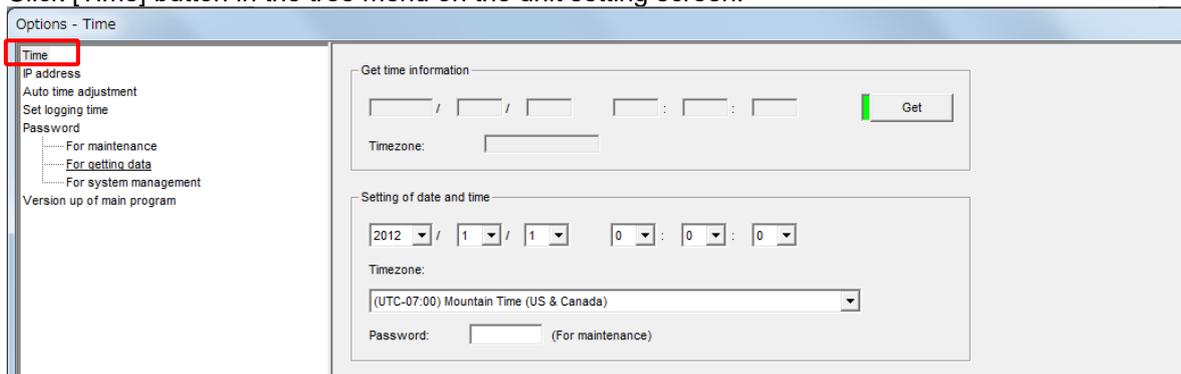


2 Reading out the time from the main unit of EcoWebServerIII


When you click the [Get] button on the [Time] screen, the message for confirming the readout of the time will be displayed.

[Yes] : Executes the readout of the time.

[No] : Cancels the readout of the time.


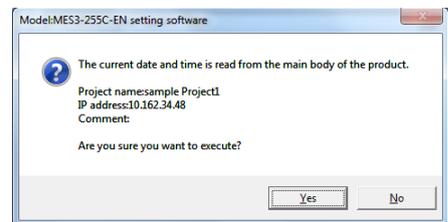


- * If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed. Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

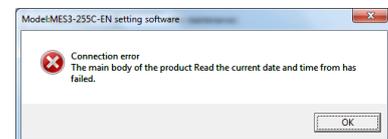

When the readout is completed, the following message will be displayed.

Click the [OK] button to display the read-out time.

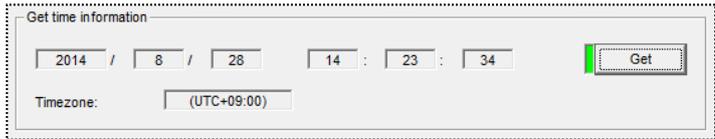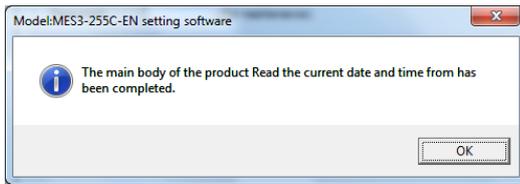


Setting the date and time

The following describes the steps for setting the time to the main unit of EcoWebServerIII.


1 Displaying the [Time] screen

Click [Time] in the tree menu on the unit setting screen.

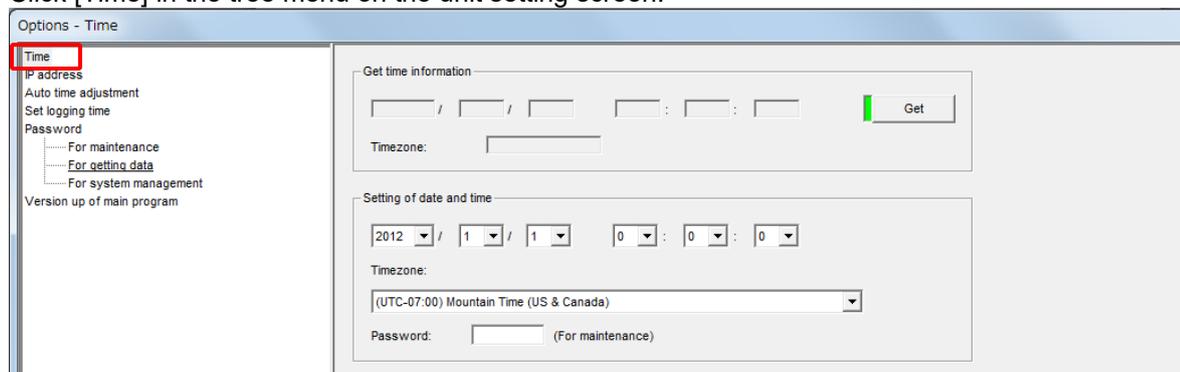

2 Selecting and inputting the date and time settings

Set the following items.

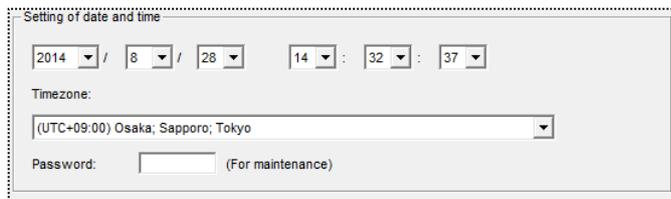

[Setting the date and time]

[Year], [Month], [Day], [Hour], [Minute], [Second]: Use the [▼] buttons to set the date and time.

- Allowable setting range

00:00:00 on January 1, 2012 to 23:59:59 on December 31, 2099

* The default value is the current time of the PC when the [Time] screen was opened.

[Time zone]

When using in Japan, this can be left set to "(UTC+09:00) Osaka, Sapporo, Tokyo". Set according to your time zone.

3 Inputting the maintenance password

Type in the maintenance password.




(The default maintenance password is "ecopass".)

After the entry, the [Setting] button becomes enabled.




4 Changing

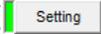- (1) When you click the  button, the confirmation message will be displayed.


[Yes] button : To execute date and time setting

[No] button : To cancel date and time setting

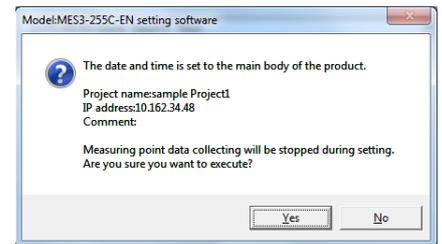

- *1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.


Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

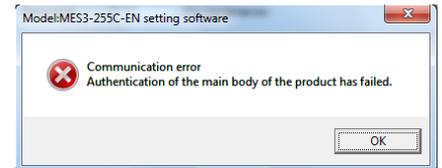

- *2 If the password is incorrect, the message on the right will be displayed.



- (2) When the setting of the date and time is completed, the following message will be displayed.

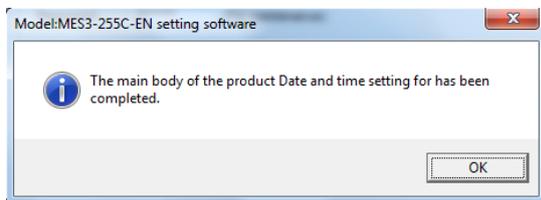

4.8.2. IP address settings

The following describes the steps for operation in [IP address].

Consult with the network administrator (the personnel who plans networks and administers IP addresses) before configuring the IP address.

Configuring the IP address

Configure the IP address of the main unit of EcoWebServerIII.

The following two IP addresses are set for EcoWebServerIII.

CH1: IP address for connecting personal computer and EcoWebServerIII

CH2: IP address for connecting PLC/GOT and EcoWebServerIII

(Setting not required if data will not be exchanged with PLC/GOT)

*1 Connect a PC to which the setting software is installed to the main unit of EcoWebServerIII by using a LAN straight cable or crossover cable on a "1 to 1" basis.

1 Checking the IP address configured on the main unit of EcoWebServerIII

Power on EcoWebServerIII and check the IP address configured on the main unit.

(☞ Refer to "Checking IP address" in **Instruction Manual – Hardware**.)

(At the time of shipment)

	IP address	Subnet mask
CH1	192.168.10.1	255.255.255.0
CH2	192.168.3.1	255.255.255.0

2 Changing the IP address of the PC

To access EcoWebServerIII from the PC, change the IP address of the PC based on the IP address of EcoWebServerIII that was checked in **Step 1**.

* If the network address portion of the IP address of the main unit of EcoWebServerIII (-> xxx.xxx.xxx.xxx) is the same as that of the PC, the IP address of the PC does not need to be changed.

(1) Take a note of the IP address that is configured on the PC.

(Before change) IP address of the PC :

(Before change) Subnet mask of the PC :


(Before change) Default gateway :

* Be sure to take a note in order to restore the IP address setting of the PC after the IP address of the main unit of EcoWebServerIII is changed.


(2) Change the IP address of the PC.

<Procedures in Windows 7>


(1) Open Control Panel.

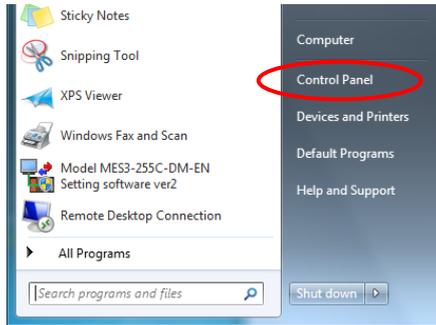


(2) Open [Network and Internet – View network status and tasks].

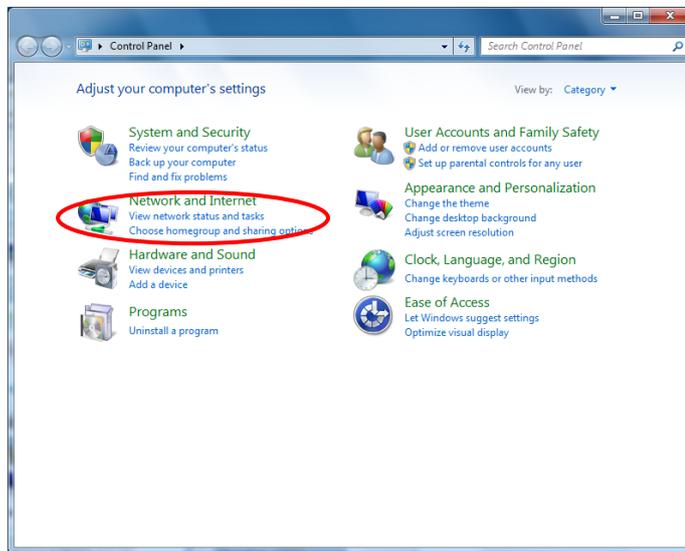

(3) Open [Local Area Connection] and then click [Properties].

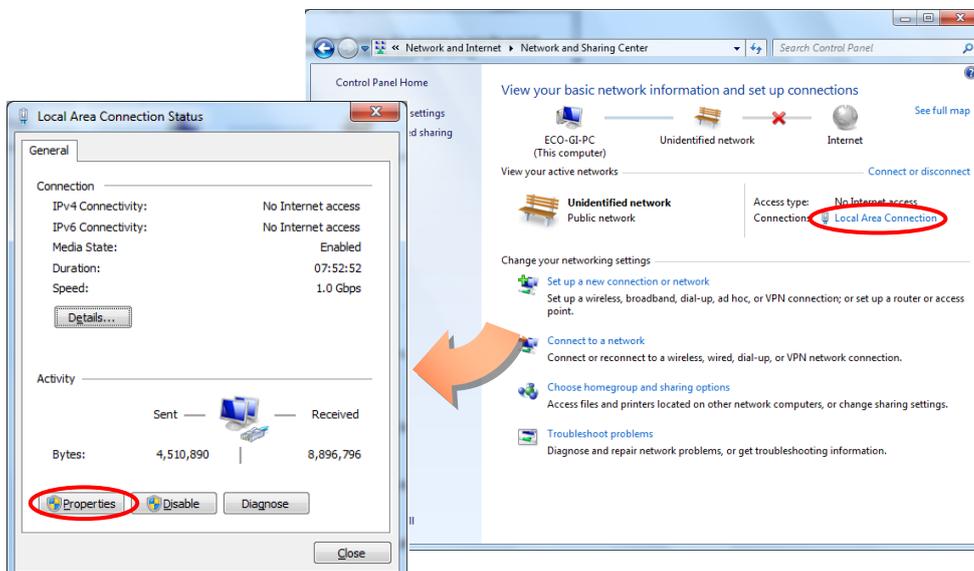


- (4) Select [Internet Protocol Version 4 (TCP/IP)] and then click [Properties].

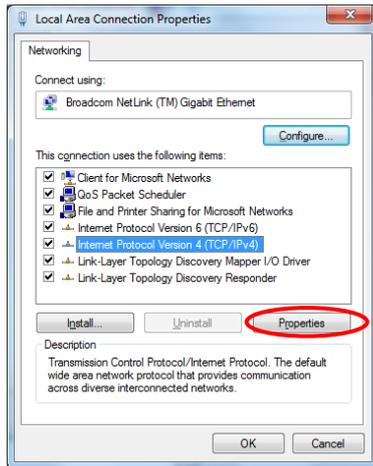

* Add [Internet Protocol (TCP/IP)] if it is not registered.

For information on how to add the setting, refer to the instruction manual etc. included with the OS.

- (5) Select [Use the following IP address] and then type the settings in [IP address] and [Subnet mask].
(Decimal number)

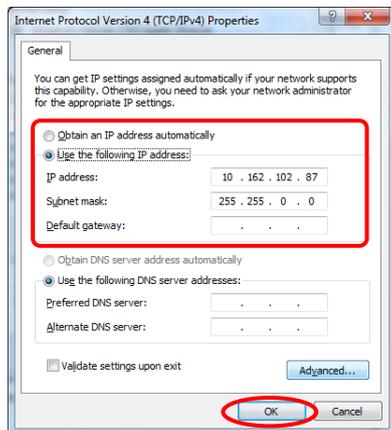

The network portion ^(*) of the IP address must be the same as that of the main unit of EcoWebServerIII.

The host address portion ^(*) of the IP address must be different from that of the main unit of EcoWebServerIII.

Note that [0] and [255] cannot be set.

^{*}1 The network address portion of the IP address is the section that corresponds to the bits 1 in the subnet mask.

The host address portion of the IP address is the section that corresponds to the bits 0 in the subnet mask.

(Example)

	Network address portion			Host address portion
IP address	192.	168.	10.	10
Subnet mask (decimal number)	255.	255.	255.	0
Subnet mask (binary number)	11111111.	11111111.	11111111.	00000000


- (6) When the entry is completed, click the [OK] button.

The network information will be automatically updated. Proceed according to the messages.

When the message for rebooting the PC is displayed, reboot the PC.

3 Opening a project

Start up the setting software, **select a project with the same IP address setting as that of the main unit of EcoWebServerIII**, and click the [Open] button.

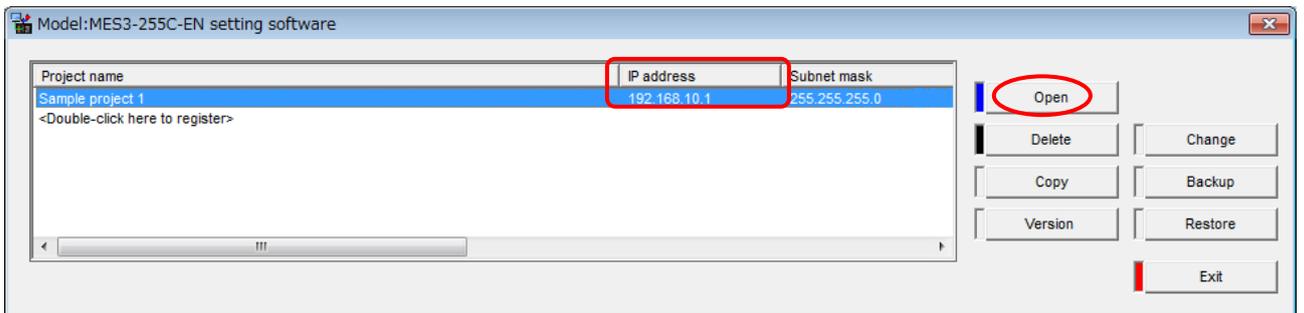

Remarks

- What if the project cannot be found?

Create project with the same IP address setting as that of the main unit of EcoWebServerIII.

(☞ Refer to **4.2.1 Project management, Registering a new project**)


What if the IP address of the registered project is different from that of EcoWebServerIII?

Change the IP address of the project to the same IP address as the one which is configured on the main unit of EcoWebServerIII.

(☞ Refer to **4.2.4 Project management, Modifying the project information**)


4 Displaying the [IP address] screen

Click [Options] on the project setting screen.

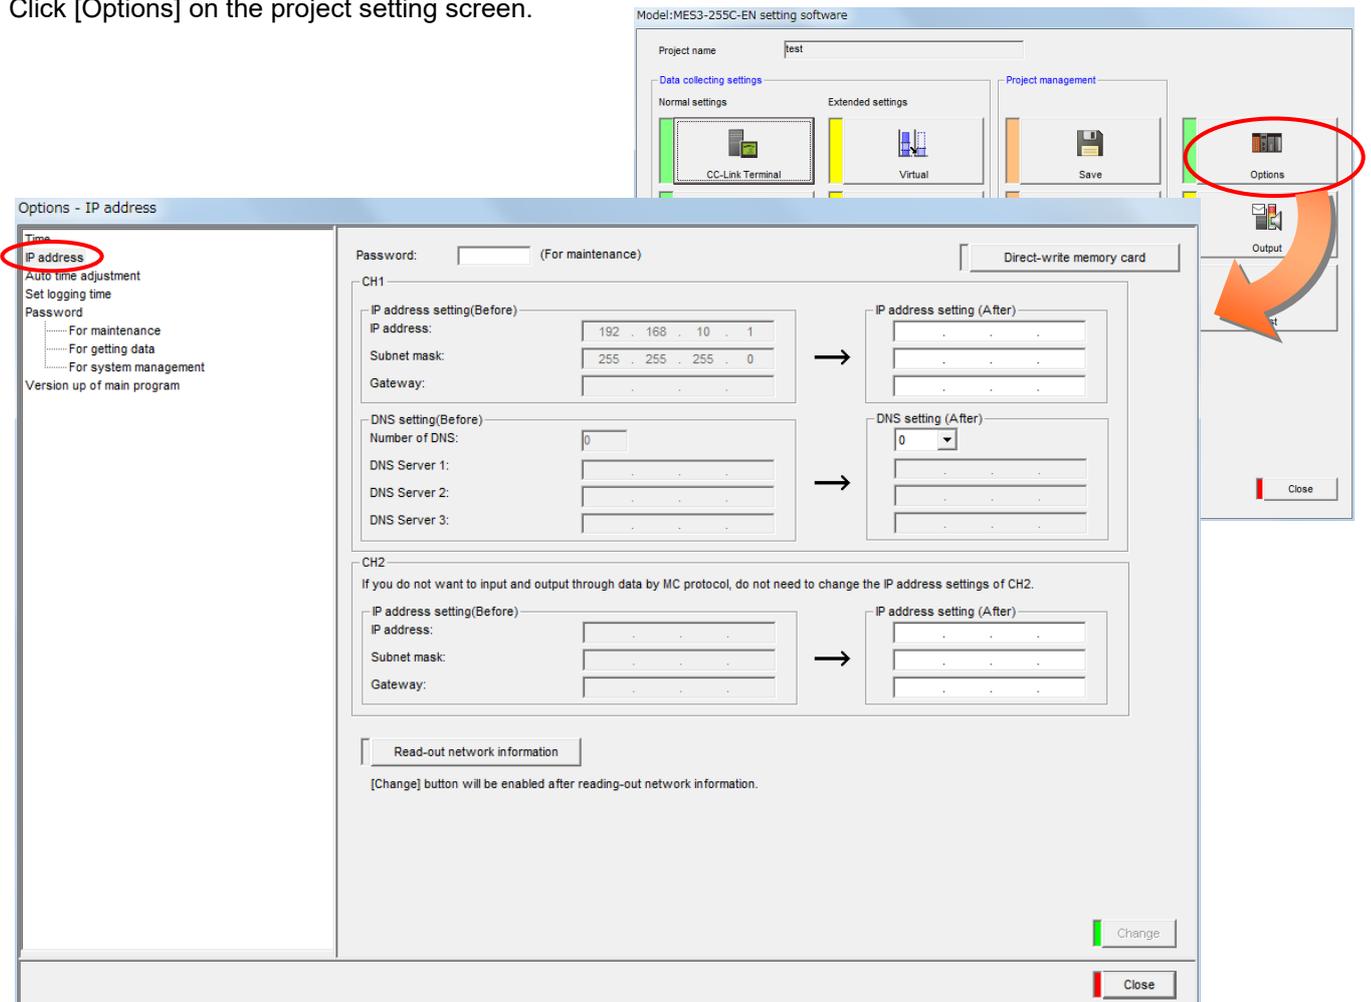


5 Reading the network information

Click the [Read-out network information] button.

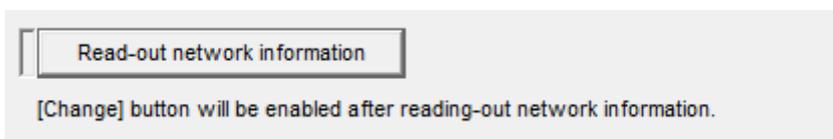


Clicking the button displays the network information read confirmation message

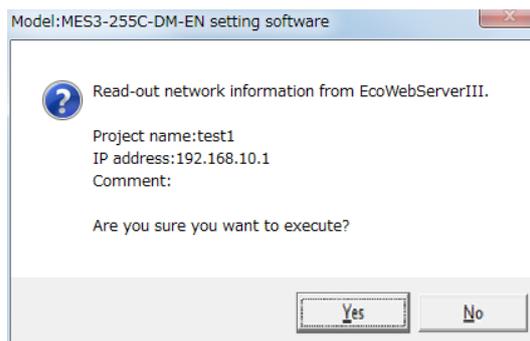


[Yes]: Executes network information reading.
[No]: Cancels network information reading.

When reading is completed, the current setting is displayed in IP address (After), and then the message below is displayed.
 Click the [OK] button.

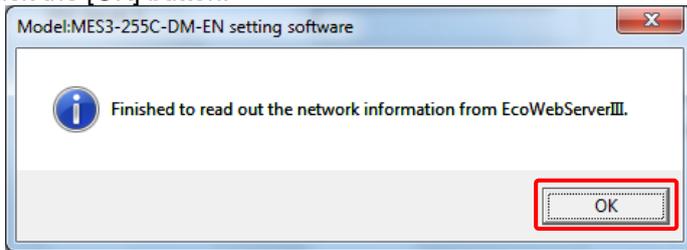

The network information currently set in EcoWebServerIII is reflected to IP address setting (Before) and IP address setting (After) in CH1 and CH2.

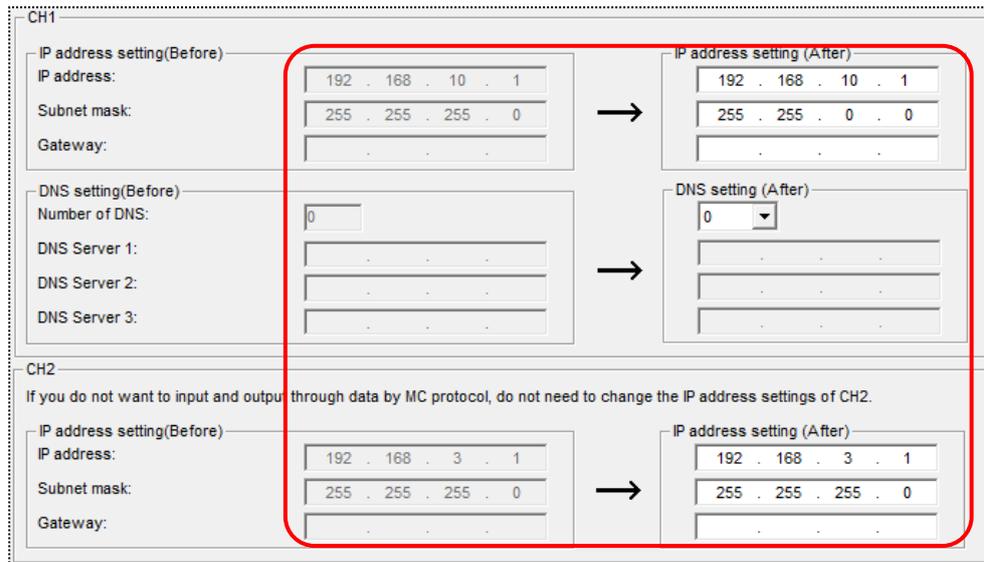

6 Inputting the IP address and subnet mask that you want to configure on EcoWebServerIII

(1) Set the IP address for connecting the PC and EcoWebServerIII.

Type the IP address and subnet mask that you want to set in the CH1 IP address setting (after change) field.

[IP address (after change)]

- [IP address] : Type in a new IP address.
- [Subnet mask] : Type in a new subnet mask.
- [Gateway] : Type in a new gateway address.

After the entry, the [Change] button becomes enabled.

[IP address]	[Range of configurable IP address]	
	1.0.0.0~126.255.255.255	
	128.0.0.0~191.255.255.255	
	192.0.0.0~223.255.255.255	
	^{*1} The following IP addresses cannot be configured. <ul style="list-style-type: none"> • "0.0.0.0", "xxx.xxx.xxx.255" (xxx are any values) • The same IP address as that of the client PC ^{*2} The same IP address as the one for other projects can be registered.	
[Subnet mask]	[Setting conditions]	(Example)
	<ul style="list-style-type: none"> • The value "1" continues from the most significant bit. • No 0 is inserted between the 1s. • The least significant bit is "0." 	255. 255. 0. 0 (11111111. 11111111. 00000000. 00000000 (Binary number))
[Gateway]	^{*1} The following IP addresses cannot be configured. "0.0.0.0", "xxx.xxx.xxx.255" (xxx are any values) ^{*2} This item is optional. Configure it only when necessary.	

^{*3} The DNS server can be configured at the same time. To set the DNS server, enter the setting in [DNS setting (After)]. (Refer to **4.8.2 IP address settings, Configuring DNS servers.**)

(2) Set the IP address for connecting the PLC/GOT and EcoWebServerIII. This setting is not required if data will not be exchanged with the PLC/GOT via the MC protocol.

Type the IP address and subnet mask you want to set in the CH2 IP address setting (After) field.

[IP address setting (After)]

- [IP address] : Type in a new IP address.
- [Subnet mask] : Type in a new subnet mask.
- [Gateway] : Type in a new gateway address.

The input range is the same as CH1.

* A network address section IP address that is the same as CH1 cannot be entered.


7 Inputting the maintenance password


Type in the maintenance password.

Password: (For maintenance)

(The default maintenance password is "ecopass".)

8 Changing

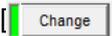
When you click the [] button, the message for confirming the change will be displayed.

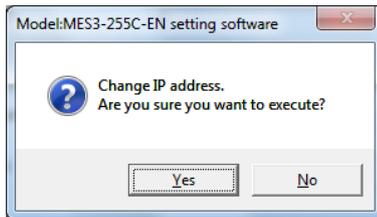


[Yes] button : Executes the IP address setting.

[No] button : Cancels the IP address setting.

When the change is completed, the following message will be displayed. Click the [OK] button.

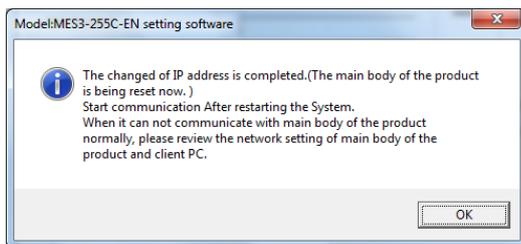


- *1 After the IP address setting is changed, EcoWebServerIII will be automatically reset. (After the reset is completed, the change of the IP address will be effective.)
- *2 A reset takes 1 to 8 minutes. Wait until the reset is completed and the [STA.] LED on the main unit of EcoWebServerIII comes on before executing communication.
- *3 The values of [IP address], [Subnet mask], and [Gateway] in the project information will also be updated automatically to the new values.

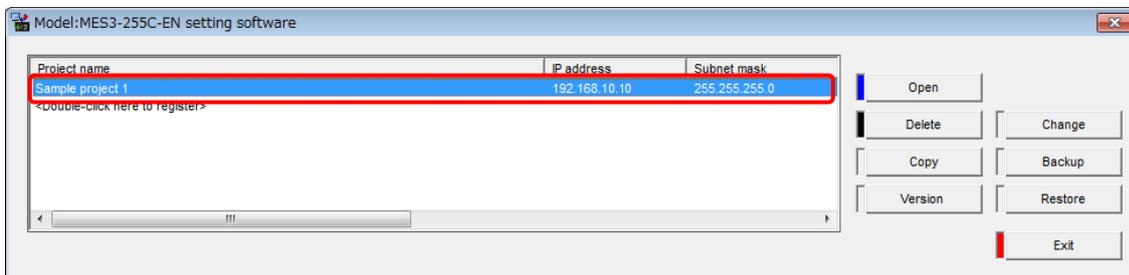

- *4 If the set values of [IP address], [Subnet mask], or [Gateway] are incorrect, a message as shown to the right will be displayed. Review the values.

(Example of display)

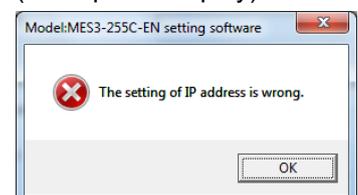

9 Restoring the IP address of PC

If the network address portion of the IP address of the main unit of EcoWebServerIII has been changed, the setting on the PC side needs to be revised. (Because communication requires that the network address portions be the same.)

If the IP address of the PC has been changed to change the IP address of the main unit of EcoWebServerIII, restore the original IP address setting.

Restore the original setting by following the same step as Step 2.

Remarks

How can I check that the IP address has been changed correctly?

Check it in the following ways.

(1) Execute the [Get time information].

⇒ If the IP address is configured correctly, the date and time that are set to the main unit of EcoWebServerIII can be read out.

(Refer to 4.8.1. Time Settings)

(2) Check the configured IP address by using the 7-segment LEDs on the main unit.

(Refer to “Checking IP address” in Instruction Manual – Hardware.)

* If communication cannot be executed even when the IP address of EcoWebServerIII has been changed correctly, review the IP address setting of the client PC again.

Configuring DNS servers

The following describes the steps for configuring DNS servers.

When specifying a SMTP server, FTP server, or SFTP server by "domain name" to configure a monitoring and notification settings, file transfer setting, or automatic time setting, a DNS server needs to be configured.

1 Displaying the [IP address] screen

Click the [IP address] in the tree menu on the [Options] screen.

Options - IP address

Time
IP address
Auto time adjustment
Set logging time
Password
 For maintenance
 For getting data
 For system management
Version up of main program

Direct-write memory card

Password: (For maintenance)

CH1

IP address setting (Before)
IP Address: 192 . 168 . 10 . 1
Subnet mask: 255 . 255 . 255 . 0
Gateway:

IP address setting (After)
. . . .
. . . .
. . . .

DNS setting (Before)
Number of DNS: 0
DNS Server 1:
DNS Server 2:
DNS Server 3:

DNS setting (After)
0
. . . .
. . . .
. . . .

CH2

If you do not want to input and output through data by MC protocol, do not need to change the IP address settings of CH2.

IP address setting (Before)
IP Address:
Subnet mask:
Gateway:

IP address setting (After)
. . . .
. . . .
. . . .

Read-out network information

[Change] button will be enabled after reading-out network information.

Change


Close

2 Read out network information

Click the [Read-out network information] button.




Clicking the button displays the network information read confirmation message.

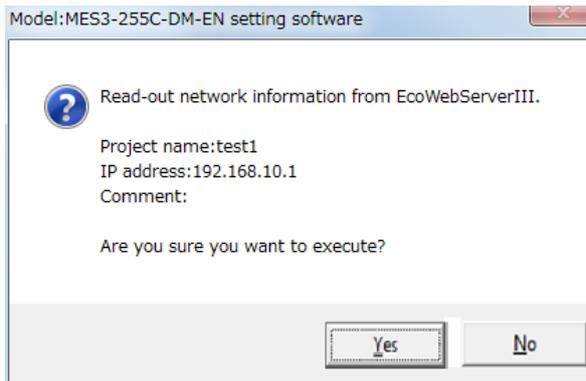


[Yes] : Executes network information reading.
[No] : Cancels network information reading.

When reading is completed, the current setting is displayed in IP address (After), and then the message below is displayed.
Click the [OK] button.

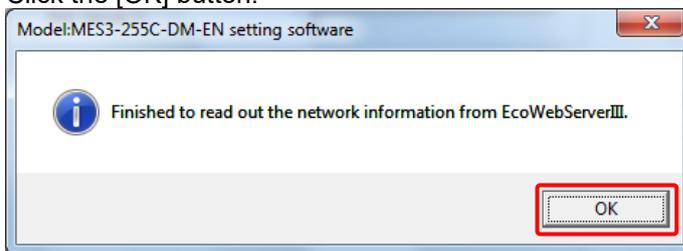


The network information currently set in EcoWebServerIII is reflected to IP address (Before) and IP address (After) in CH1 and CH2.

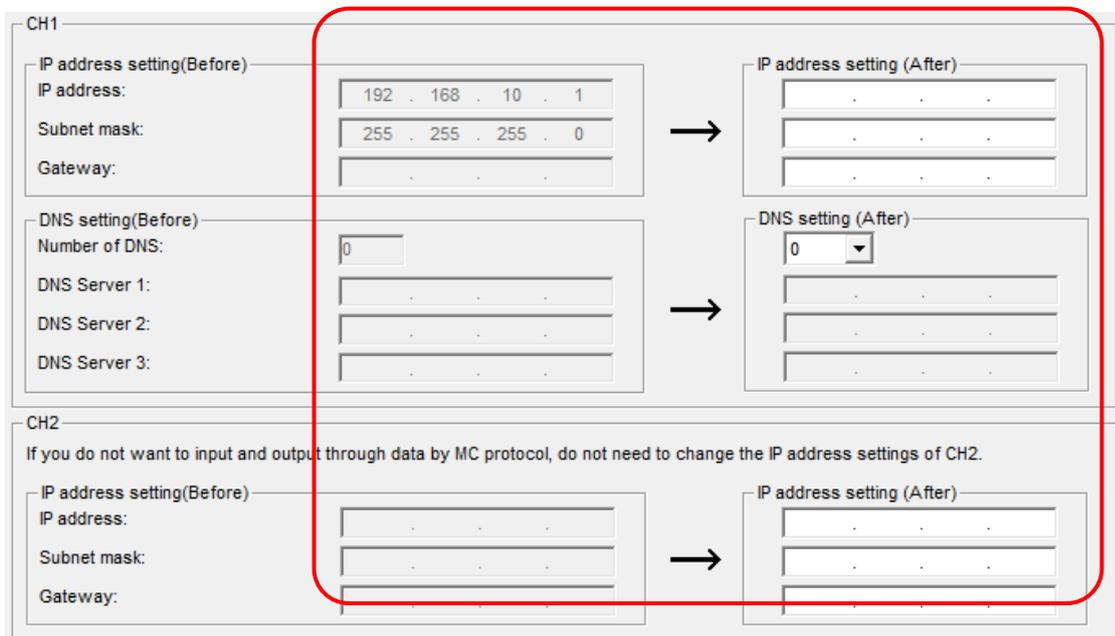

3 Inputting DNS server settings

Select or type in the following items.

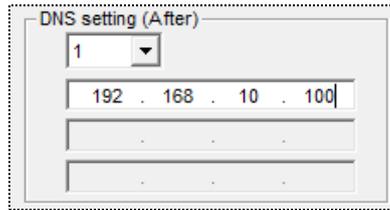

[DNS setting (After)]

[Number of DNS] : Select from [0] to [3].
[DNS server 1] to [DNS server 3] : Type in the IP addresses of the DNS servers. (*1)

After the entry, the [Change] button becomes enabled.


*1 The input conditions for [DNS setting (after)] are as follows.

[DNS server 1] ~ [DNS server 3]	The following IP addresses cannot be configured. "0.0.0.0", "xxx.xxx.xxx.255" (xxx are any values)
---------------------------------------	---

*2 The IP address of the main unit of EcoWebServerIII can also be configured at the same time.
(☞ Refer to **4.8.2 IP address settings**.)

4 Entering password for maintenance


Type in the maintenance password.

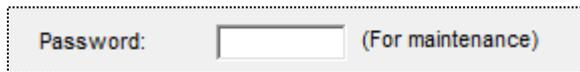

(The default maintenance password is "ecopass".)

5 Changing DNS server settings


When you click the [ Change] button, the message for confirming the change will be displayed.

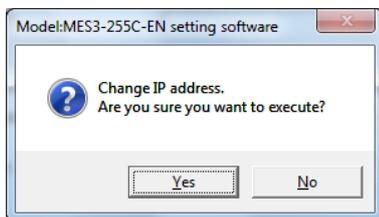

[Yes] button : Executes the IP address setting (DNS server setting).

[No] button : Cancels the IP address setting (DNS server setting).

When the change is completed, the following message will be displayed. Click the [OK] button.

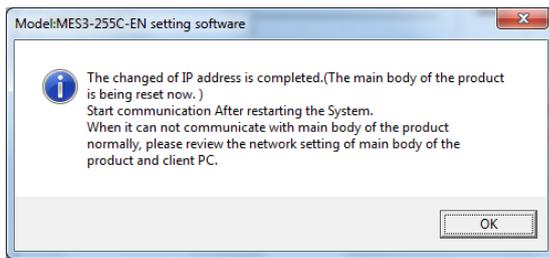

- *1 After the IP address setting (DNS server setting) is changed, EcoWebServerIII will be automatically reset. (After the reset is completed, the change will be effective.)
- *2 **A reset takes 1 to 8 minutes. Wait until the reset is completed and the [STA.] LED on the main unit of EcoWebServerIII comes on before executing communication.**

Writing the IP address settings via drive

This section explains the procedures to write the IP address settings in the memory card using memory card reader/writer.

* **Power off EcoWebServerIII before inserting/removing the memory card.**

1 Displaying the [IP address] screen

Click [IP address] in the tree menu on the unit setting screen.

Options - IP address

IP address

Auto time adjustment
Set logging time
Password
 For maintenance
 For getting data
 For system management
Version up of main program

Password: (For maintenance) Direct-write memory card

CH1

IP address setting (Before)
IP address: 192 . 168 . 10 . 1
Subnet mask: 255 . 255 . 255 . 0
Gateway:

IP address setting (After)
.
.
.

DNS setting (Before)
Number of DNS: 0
DNS Server 1:
DNS Server 2:
DNS Server 3:

DNS setting (After)
0
.
.
.

CH2

If you do not want to input and output through data by MC protocol, do not need to change the IP address settings of CH2.

IP address setting (Before)
IP address:
Subnet mask:
Gateway:

IP address setting (After)
.
.
.

Read-out network information

[Change] button will be enabled after reading-out network information.

Change Close

2 Typing the IP address and subnet mask you want to set in the EcoWebServerIII

Type in the IP address and subnet mask you want to set in the EcoWebServerIII and click the [Direct-write memory card] button.

(Refer to 4.8.2 IP address settings.)


Password: (For maintenance) Direct-write memory card

CH1

IP address setting (Before)
IP address: 192 . 168 . 10 . 1
Subnet mask: 255 . 255 . 255 . 0
Gateway:


IP address setting (After)
192 . 168 . 10 . 1
255 . 255 . 255 . 0
.

* Even when not changing them, enter values in IP address setting (After) of both CH1 and CH2.
If values are not entered, the message below is displayed.

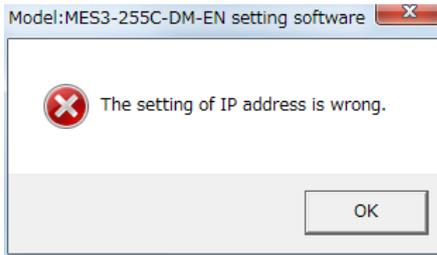

3 Specifying the drive

Select the drive where the memory card is mounted from the [Drive] pull-down list.

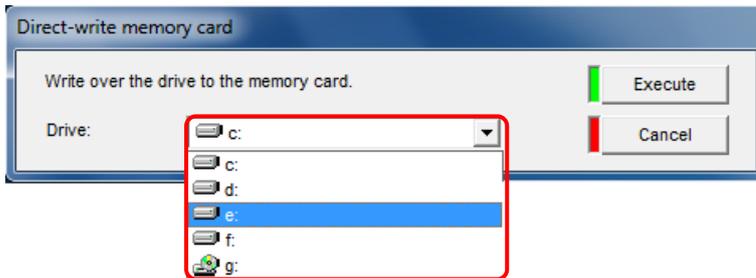


4 Writing the IP address settings

(1) Click the [Execute] button on the [Direct write memory card] screen, and write in the IP address settings.




[Execute] : Write the IP address settings.
[Cancel] : Back to the [IP address]

* If the device status is not ready, the message shown on the right is displayed.
Click the [OK] button and confirm the device status.

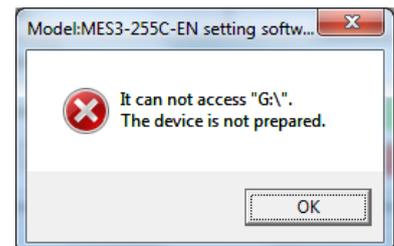

(2) When writing is completed, the following message is displayed.

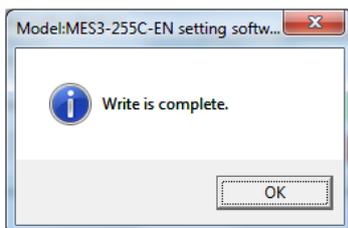

Remarks

- First, insert the memory card where the IP address settings are written, and then power on EcoWebServerIII.

4.8.3. Auto time settings


This section explains the operation procedure in the dialog box of [Auto time adjustment].
Set up the SNTP server that serves synchronization and its synchronization cycle.

- *When setting the time to the business meter, do not set the automatic time setting function.
- * For installing and setting the SNTP (standard time) server and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company).

Configuring auto time settings

1 Displaying the [Auto time adjustment] dialog box

Click the [Auto time adjustment] in the tree menu on the unit setting dialog box.

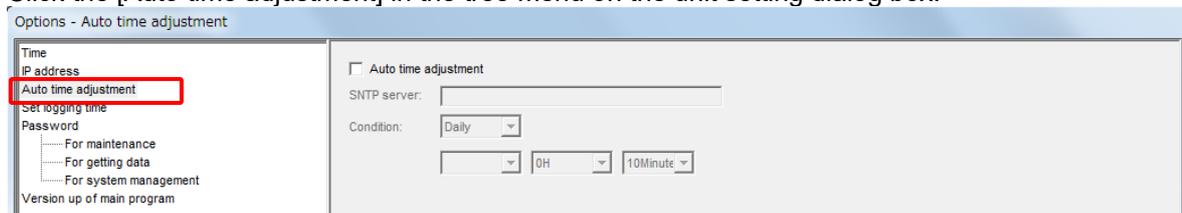

2 Checking the [Auto time adjustment] check box.

If the [Auto time adjustment] check box is checked, the [SNTP server] and [Condition] areas become active.

3 Specifying the SNTP server

Input a domain name or IP address of the SNTP (standard time) server from the keyboard.

- For inputting a domain name

SNTP server: Characters: Up to 50 characters
Prohibited characters: The following characters cannot be registered:
¥ / : ; * ? " < > |

* Setting of the DNS server is required.

- For inputting an IP address

SNTP server: Input range: 0 to 255
Values prohibited to register: Do not input the values as follows.
0.0.0.0, xxx.xxx.xxx.255 (xxx: any numerical value)

Remarks

- When designating the SNTP server by domain name, make sure to set up the DNS server. (Refer to 4.8.2 IP address settings, Configuring DNS servers.)
- * For installing and setting the DNS server (name server) and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company).
- When re-setting the SNTP (standard time) server after auto time setting error occurs, reset the EcoWebServerIII.

4 Configuring auto time setting cycle


Set the cycle to perform auto time set.

- **For daily:** Select the time.

[Time]

Selection range: [0H] to [23H]

Default value: [0H]

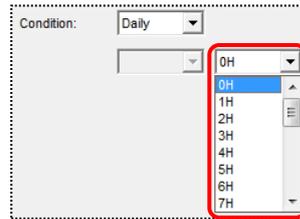

- **For weekly:** Select a day of the week and the time.

[Day of the week]



Selection range: [Sun] to [Sat]

Default value: [Sun]

[Time]

Selection range: [0H] to [23H]

Default value: [0H]

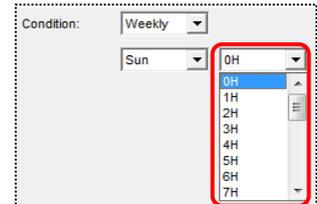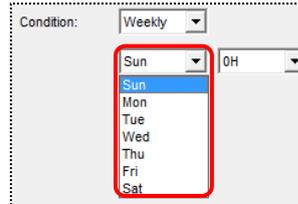

- **For monthly:** Select a date and the time.

[Date]



Selection range: [1D] to [28D]

Default value: [1D]

[Time]

Selection range: [0H] to [23H]

Default value: [0H]

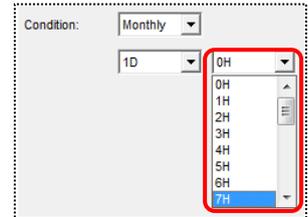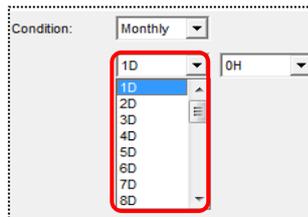

5 Registering

Click the button in the [Auto time adjustment] dialog box to register.




[Register] button : Register the auto time setting as configured.

[Close] button : Back to the Project setting dialog box.

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item.

(Example of display)

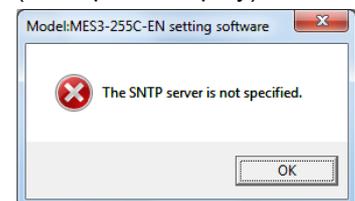


- *2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : To go back to the [Auto time adjustment] dialog box

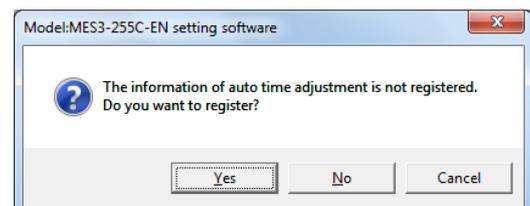


4.8.4. Logging date/time settings

This section describes the procedures for operating the [Set logging time].
The measuring point logging cycle, time and date are set with logging date/time setting.

Setting the logging date/time

1 Displaying the [Set logging time] dialog box

Click the [Set logging time] in the tree menu on the unit setting dialog box.

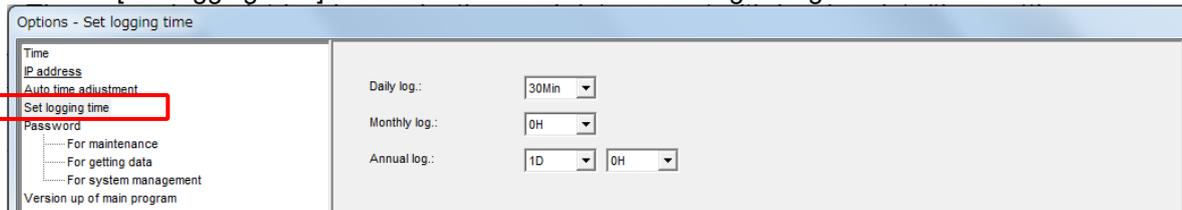

2 Setting the logging information

- (1) Select the daily logging cycle.

Data is collected at the selected cycle, and is saved in the daily data file.



[15 Min] : Collect data at a 15-minutes cycle (collects every hour on the hour, 15, 30 and 45 minutes).


[30 Min] : Collect data at a 30-minutes cycle (collects on the hour and half hour)

[60 Min.] : Collect data at a 60-minutes cycle (collects on the hour)

- (2) Select the monthly logging time.

Data is collected at the selected time, and is saved in the monthly data file.


*If it is set to time other than 0:00 for demand control, this will impact on daily maximum demand. Accordingly, for demand control, set to 0:00.

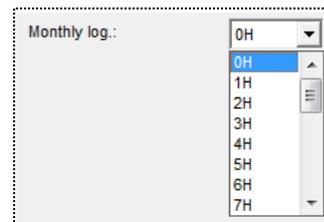

- (3) Select the annual logging time.

Data is collected at the selected date/time, and is saved in the annual data file.

*If it is set to time other than 1st 0:00 for demand control, this will impact on monthly maximum demand. Accordingly, for demand control, set to 1st 0:00.

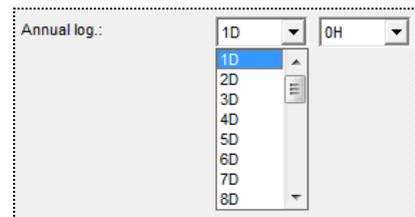

3 Registering

Click the button on the [Set logging time] dialog box, and register the settings.



[Register] button : Register the logging date/time as the set information.


[Close] button : Back to the Project setting dialog box

* After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : To go back to the [Set logging time] dialog box

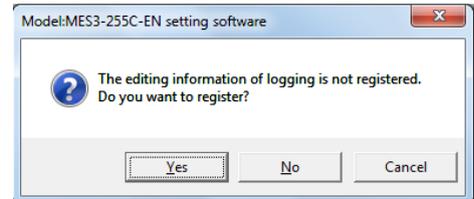


4.8.5. Setting of the login IDs and passwords

The following describes the steps for operation in [Password].

In EcoWebServerIII, three accounts are used: for (1)Getting data, (2) System management, and (3) Maintenance.

When the [About login ID/password] button on the [Password] screen is clicked, the following screen will open. Refer to this for details on using each login ID and password.

- *1 Password setting function is a means for preventing illegal access (destroying programs and data) from external device. Provided that the function cannot completely prevent illegal access.
- *2 Before using, change the default account (login ID, password).
Set the account so as not to leak the account information according to the following precautions.
Avoid using simple string like Name, birth date and numbers.
Set the complex logging ID and password at least 8 characters by mixing uppercase or lowercase alphanumeric characters.
- *3 Accounts (login ID, password) cannot be initialized. Please do not forget it.

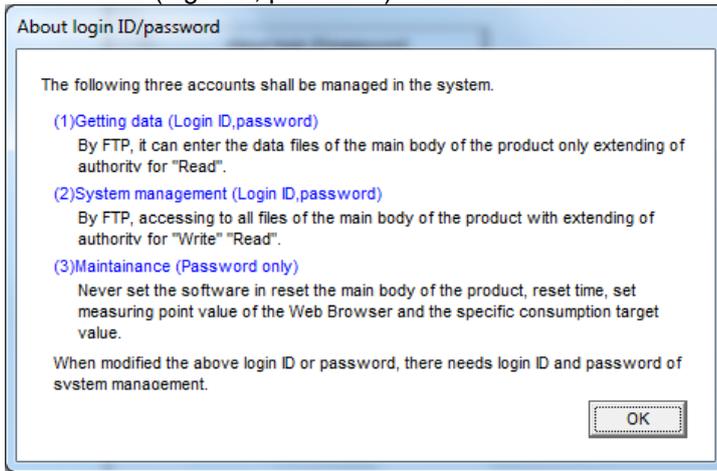


Changing the maintenance password

The following describes the steps for changing the maintenance password.

- * The default maintenance password is "ecopass".


1 Displaying the [Password (For maintenance)] screen

Click the [Password] – [For maintenance] in the tree menu on the unit setting dialog box.

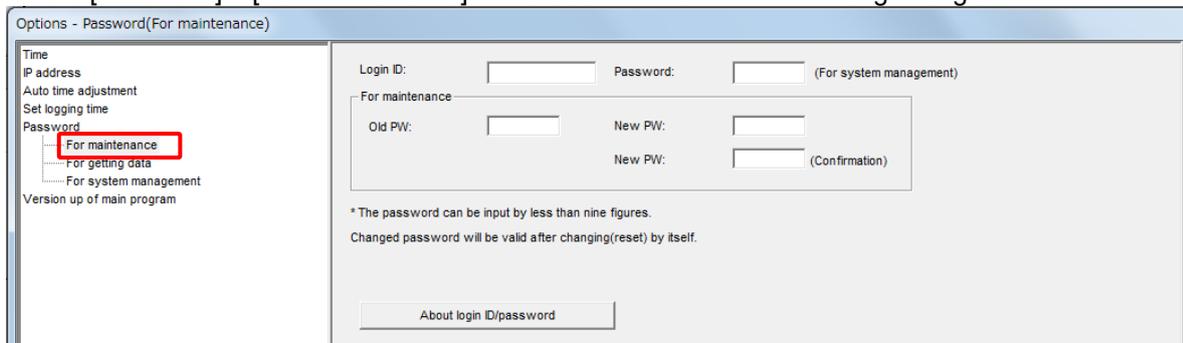

2 Inputting the system administration login ID and password

To verify the permission for change, type in the system administration login ID and password.

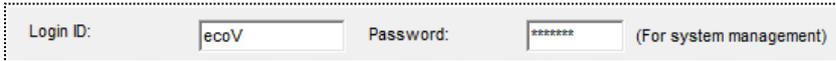

Login ID: Password: (For system management)

(The default system administration login ID and password are “ecoV” and “ecopass”, respectively.)

3 Inputting the maintenance password

Type in the [Old PW] that is used before the change and a [New PW] to be used after the change.



For maintenance
Old PW: New PW:
New PW: (Confirmation)

- (1) Type in the current maintenance password in the [Old PW] field.(Default: “ecopass”)
- (2) Type in a new maintenance password at two sections: the [New PW] and [New PW (confirmation)] fields.
The input conditions are as follows.

Characters: Up to 8 characters


* A typed password will be displayed as asterisk (*).

4 Changing


- (1) When you click the [] button, the confirmation message will be displayed.

[Yes] button : Executes the change of the maintenance password.

[No] button : Cancels the change of the maintenance password.

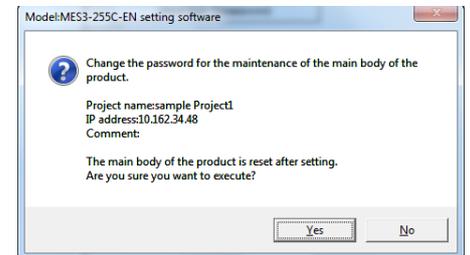


- *1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.
Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

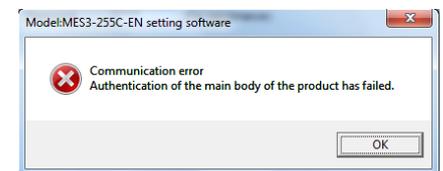


- *2 If the system administration login ID or password is incorrect, the message on the right will be displayed.
Click the [OK] button and then check the login ID and password.




- *3 If the previous maintenance password is incorrect, the message on the right will be displayed.
Click the [OK] button and then check the password.

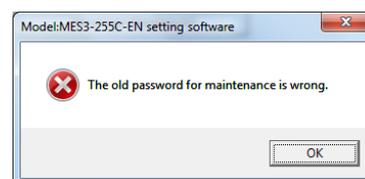

- *4 If the new maintenance password and the new password for confirmation do not match, the message on the right will be displayed.
Click the [OK] button and then check the password.

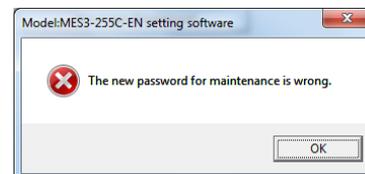


- (2) After the password is changed, EcoWebServerIII will be reset.

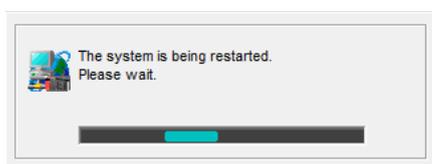

*** It may take up to 10 to 15 minutes to reset..**

- (3) When the password change and reset are completed, the following message will be displayed.

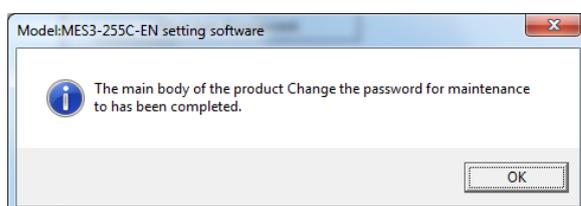


Changing the data acquisition login ID and password

The following describes the steps for changing the data acquisition login ID and password.

* The default data acquisition login ID and password are "guest" and "user", respectively.

1 Displaying the [Password (For getting data)] screen

Click the [Password] – [For getting data] in the tree menu on the unit setting dialog box.

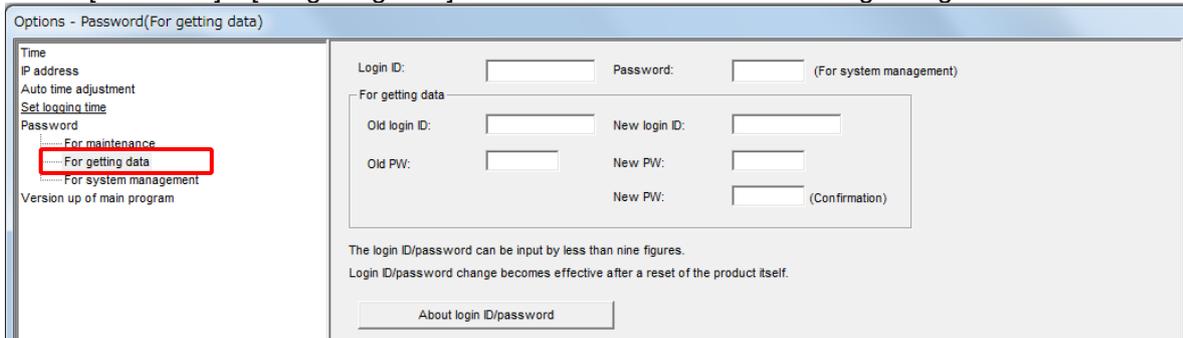

2 Inputting the system administration login ID and password


To verify the permission for change, type in the system administration login ID and password.



(The default system administration login ID and password are "ecoV" and "ecopass", respectively.)

3 Inputting the data acquisition login ID

Type in the [Old login ID] that is used before the change and a [New login ID] to be used after the change.

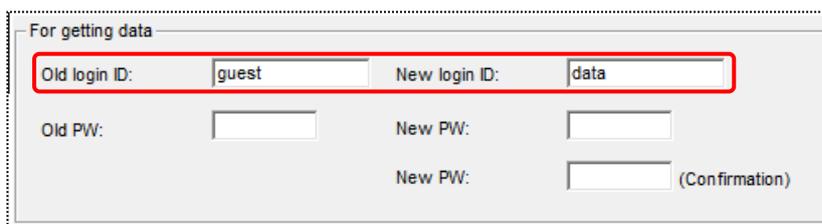

(1) Type in the current data acquisition login ID in the [Old login ID] field. (Default: "guest")

(2) Type in a new data acquisition login ID in the [New login ID] field.

The input conditions are as follows.

Characters: Up to 8 characters

4 Inputting the data acquisition password

Type in the [Old PW] that is used before the change and a [New PW] to be used after the change.

For getting data

Old login ID: New login ID:

Old PW: New PW:

New PW: (Confirmation)

- (1) Type in the current data acquisition password in the [Old PW] field. **(Default: “user”)**
- (2) Type in a new data acquisition password at two sections: the [New PW] and [New PW (confirmation)] fields.

The input conditions are as follows.

Characters: Up to 8 characters


* A typed password will be displayed as asterisk (*).

5 Changing

- (1) When you click the [ Change] button, the confirmation message will be displayed.


[Yes] button : Executes the change of the data acquisition login ID and password.

[No] button : Cancels the change of the data acquisition login ID and password.

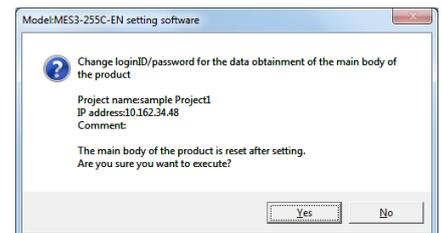

*1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.

Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

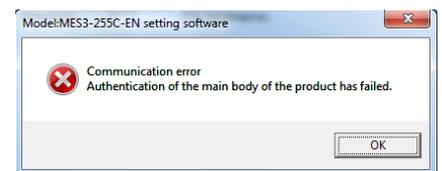


*2 If the system administration login ID or password is incorrect, the message on the right will be displayed.

Click the [OK] button and then check the login ID and password.



*3 If the previous data acquisition login ID is incorrect, the message on the right will be displayed.


Click the [OK] button and then check the password.

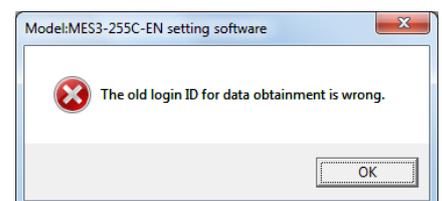


- *4 If the previous data acquisition password is incorrect, the message on the right will be displayed.
Click the [OK] button and then check the password.



- *5 If the new data acquisition password and the new password for confirmation do not match, the message on the right will be displayed.
Click the [OK] button and then check the password.

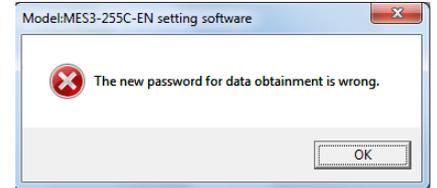


- (2) After the login ID and password are changed, EcoWebServerIII will be reset.

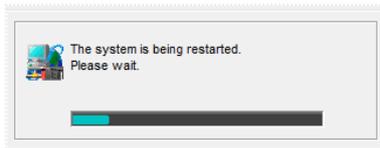

*** It may take up to 10 to 15 minutes to reset..**

- (3) When the change of the login ID and password and reset are completed, the following message will be displayed.

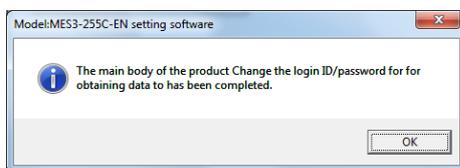


Changing the system administration login ID and password

The following describes the steps for changing the system administration login ID and password.

* The default system administration login ID and password are “ecoV” and “ecopass”, respectively.)

1 Displaying the [Password (For system management)] screen

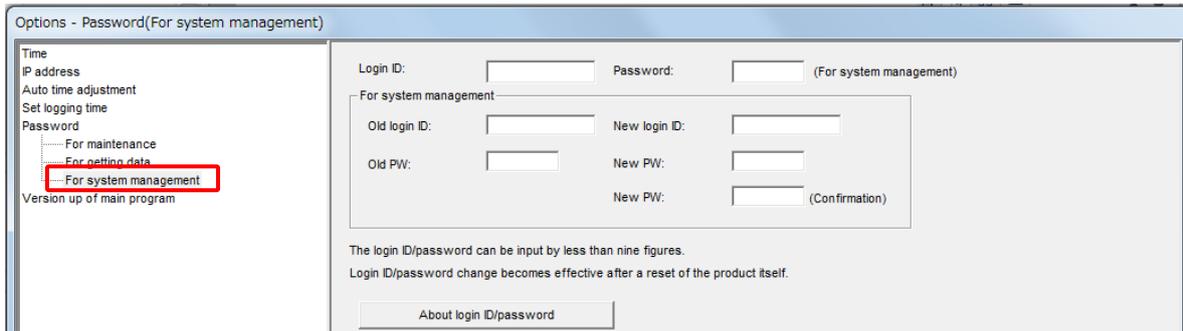

Click the [Password] – [For system management] in the tree menu on the unit setting dialog box.

2 Inputting the system administration login ID and password


To verify the permission for change, type in the system administration login ID and password.



(The default system administration login ID and password are “ecoV” and “ecopass”, respectively.)

3 Inputting the system administration login ID

Type in the [Old login ID] that is used before the change and a [New login ID] to be used after the change.

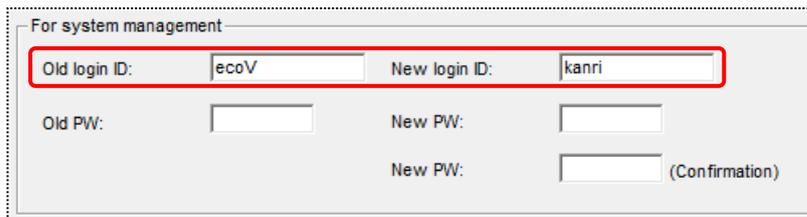

(1) Type in the current data acquisition login ID in the [Old login ID] field. (Default: “ecoV”)


(2) Type in a new data acquisition login ID in the [New login ID] field.

The input conditions are as follows.

Number of characters: Up to 8 characters

4 Inputting the system administration password

Type in the [Old PW] that is used before the change and a [New PW] to be used after the change.

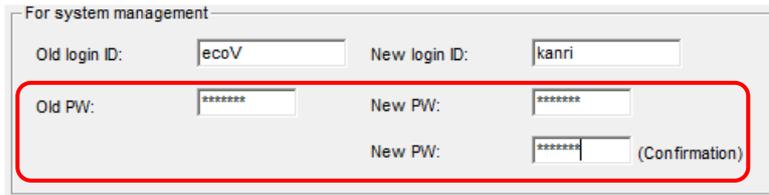

The screenshot shows a web form titled "For system management". It contains four input fields: "Old login ID:" with the value "ecoV", "New login ID:" with the value "kanri", "Old PW:" with asterisks, and "New PW:" with asterisks. Below the "New PW:" field is a "New PW:" field with asterisks and the label "(Confirmation)". A red rectangle highlights the "Old PW:" and "New PW:" fields.

- (1) Type in the current system administration password in the [Old PW] field. **(Default: "ecopass")**
- (2) Type in a new system administration password at two sections: the [New PW] and [New PW (confirmation)] fields.

The input conditions are as follows.

Number of characters: Up to 8 characters


- * A typed password will be displayed as asterisk (*).

5 Changing

- (1) When you click the [] button, the confirmation message will be displayed.


[Yes] button : Executes the change of the system administration login ID and password.

[No] button : Cancels the change of the system administration login ID and password.

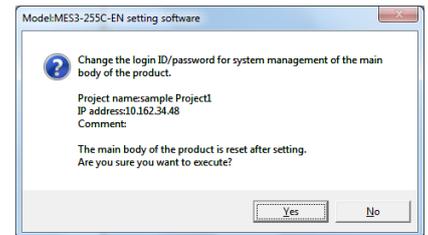


- *1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.

Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

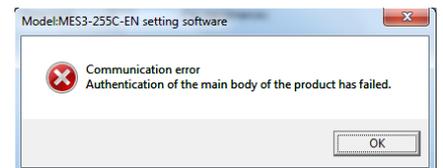


- *2 If the system administration login ID or password is incorrect, the message on the right will be displayed.

Click the [OK] button and then check the login ID and password.

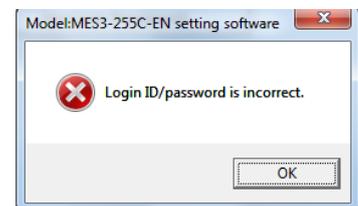

- *3 If the system administration login ID is incorrect, the message on the right will be displayed.


Click the [OK] button and then check the password.

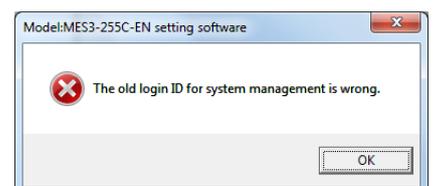


- *4 If the previous system administration password is incorrect, the message on the right will be displayed.
Click the [OK] button and then check the password.



- *5 If the new system administration password and the new password for confirmation do not match, the message on the right will be displayed.
Click the [OK] button and then check the password.

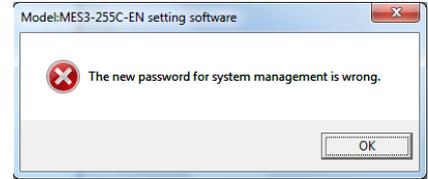


- (2) After the login ID and password are changed, EcoWebServerIII will be reset.

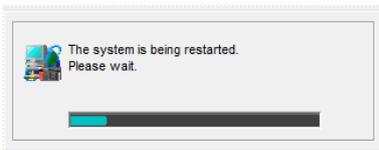

*** It may take up to 10 to 15 minutes to reset.**

- (3) When the change of the login ID and password and reset are completed, the following message will be displayed.

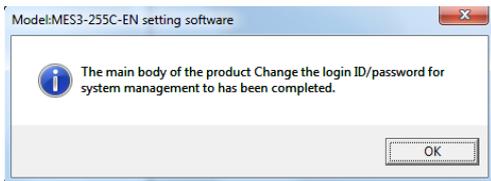

4.8.6. Version up of Main Program

This section describes the procedures in [Version up of Main Program]. Upgrading the main unit software upgrades the software for the EcoWebServerIII main unit to the version that supports user's setting software. It takes about 10 to 15 minutes for the EcoWebServerIII to restart after the upgrading is started. During the upgrading, data is not collected. Execute the upgrading during a time period when data collection is less affected (during less used time period or on a non-operating day).

Check the time of EcoWebServerIII and avoid operation during 45 to 05 minutes past the hour.

* Version up of Main Program requires the installations of ".NET Framework 3.5".

XX XX

Before carrying out the Version up of Main Program from Ver1 and Ver2 to Ver3, please back up the projects.

When executing the main body program version upgrade, the project name opened in the setting software then becomes the project name of the main unit (setting contents are not changed). If you do not want to change the project name of the projector, open the project with the same project name as the projector and upgrade the version.

After carrying out the Version up, check the project. (Refer to Confirming the Setting in Instruction Manual -- Operating.)

If the setting value is running by default(without setting value), please write the appropriate project. (Refer to 4.7.2 Project writing)

Upgrading the main unit software Version up of main program

1 Displaying the [Version up of main program] screen

Click [Version up of main program] in the tree menu on the main unit setting screen.


The screenshot shows a software interface titled "Options - Version up of main program". On the left, there is a tree menu with the following items: "Time", "IP address", "Auto time adjustment", "Set logging time", "Password", "For maintenance", "For getting data", "For system management", and "Version up of main program". The "Version up of main program" item is highlighted with a red rectangular box. The main area of the dialog is divided into several sections. At the top, there is an "IP address:" field with the value "192 . 168 . 10 . 1". Below this is a "Now version:" field which is currently empty. To the right of the "Now version:" field is an "After version:" field containing the text: "ModelName=MES3-255C-DM-EN", "Version=2.3.0", "CtrVersion=1.2.1", and "XmlFileVersion=1.3.0". An arrow points from the "Now version:" field to the "After version:" field. Below the "After version:" field are "Login ID:" and "Password:" fields, with a note "(For system management)" next to the "Login ID:" field. At the bottom right of the main area, there are three buttons: "Execute" (with a green bar on the left) and "Close" (with a red bar on the left).

2 Confirming the current version of the main unit software

Click the [Get] button.

- *1 When reading is failed, the message on the right is displayed.

Click the [OK] button and then check the IP address of EcoWebServerIII, connection of LAN cable, or if power is supplied.

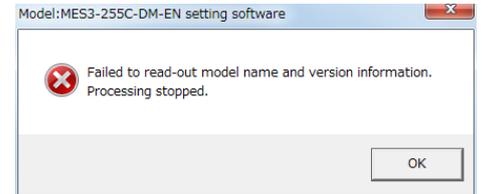

When completed, current version of the main unit software is displayed.


Item	Description
ModelName	Model of the product
Version	Version of the product main unit
CtrlVersion	Version information used for confirmation by the manufacturer
XmlFileVersion	



3 Inputting the system administration login ID and password

Confirm that the current version for the main unit is older than the main unit version after upgrading, input the system administration login ID and password.


(In the default setting, for the system manager, login ID is "ecoV" and password is "ecopass.")

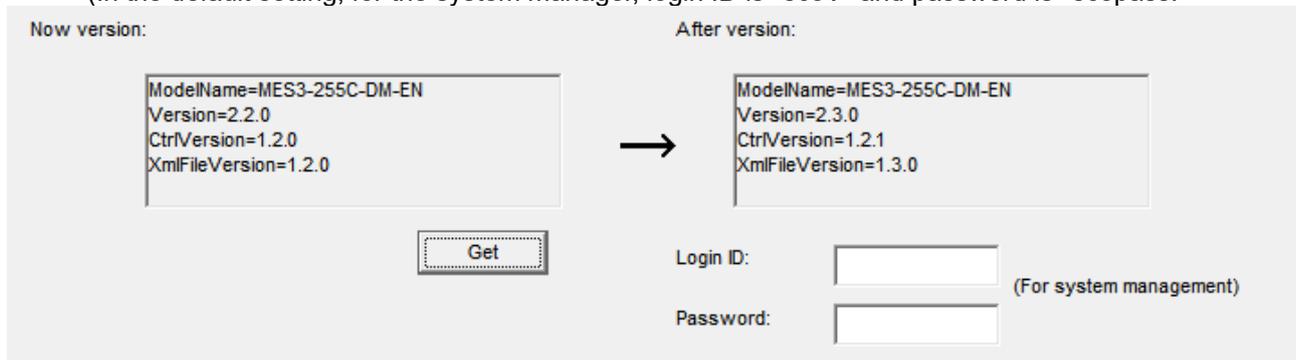

4 Upgrading


(1) Clicking [Execute] displays a confirmation message.

- [Yes] : Executes the upgrading of the main unit software.
- [No] : Cancels the upgrading of the main unit software.

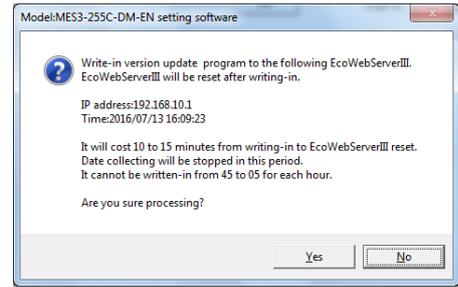


*1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or EcoWebServerIII is not powered on, the message on the right will be displayed.

Click the [OK] button and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

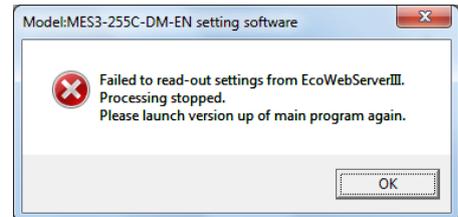


*2 If the login ID or password for system administration is wrong, the message on the right is displayed.

Click the [OK] button to check the login ID and password.

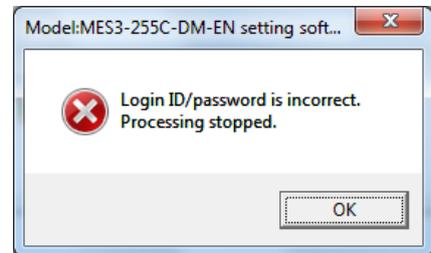


*3 If there is no necessary setting file, the message on the right is displayed.

Click the [Yes] button to update as default.
Click the [No] button to cancel the updating.

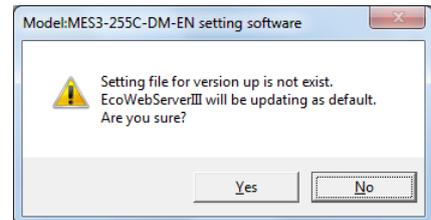


(2) EcoWebServerIII is reset after upgrading.

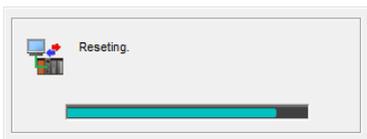

* Resetting may take up to about 8 minutes.

(3) When upgrading and resetting are completed, the message below is displayed.

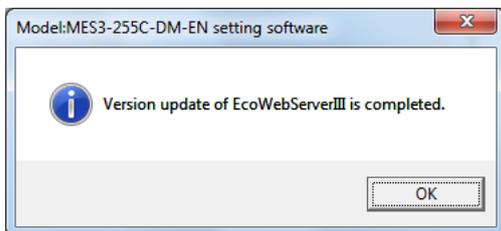

XX

XX

Once the message is displayed, it is Version up of Main Program is completed.

If you operate in a state in which the the message does not appear, **there is a possibility that does not work properly.**


After you always have completed the Version up of Main Program, please execute restarting operation and the other settings.

4.9. Setting external device coordination

This section describes the settings related to the data output settings, contact output settings and mail notification settings, etc.

1 Displaying the external device coordination setting screen

Click the [Output] on the project setting screen.

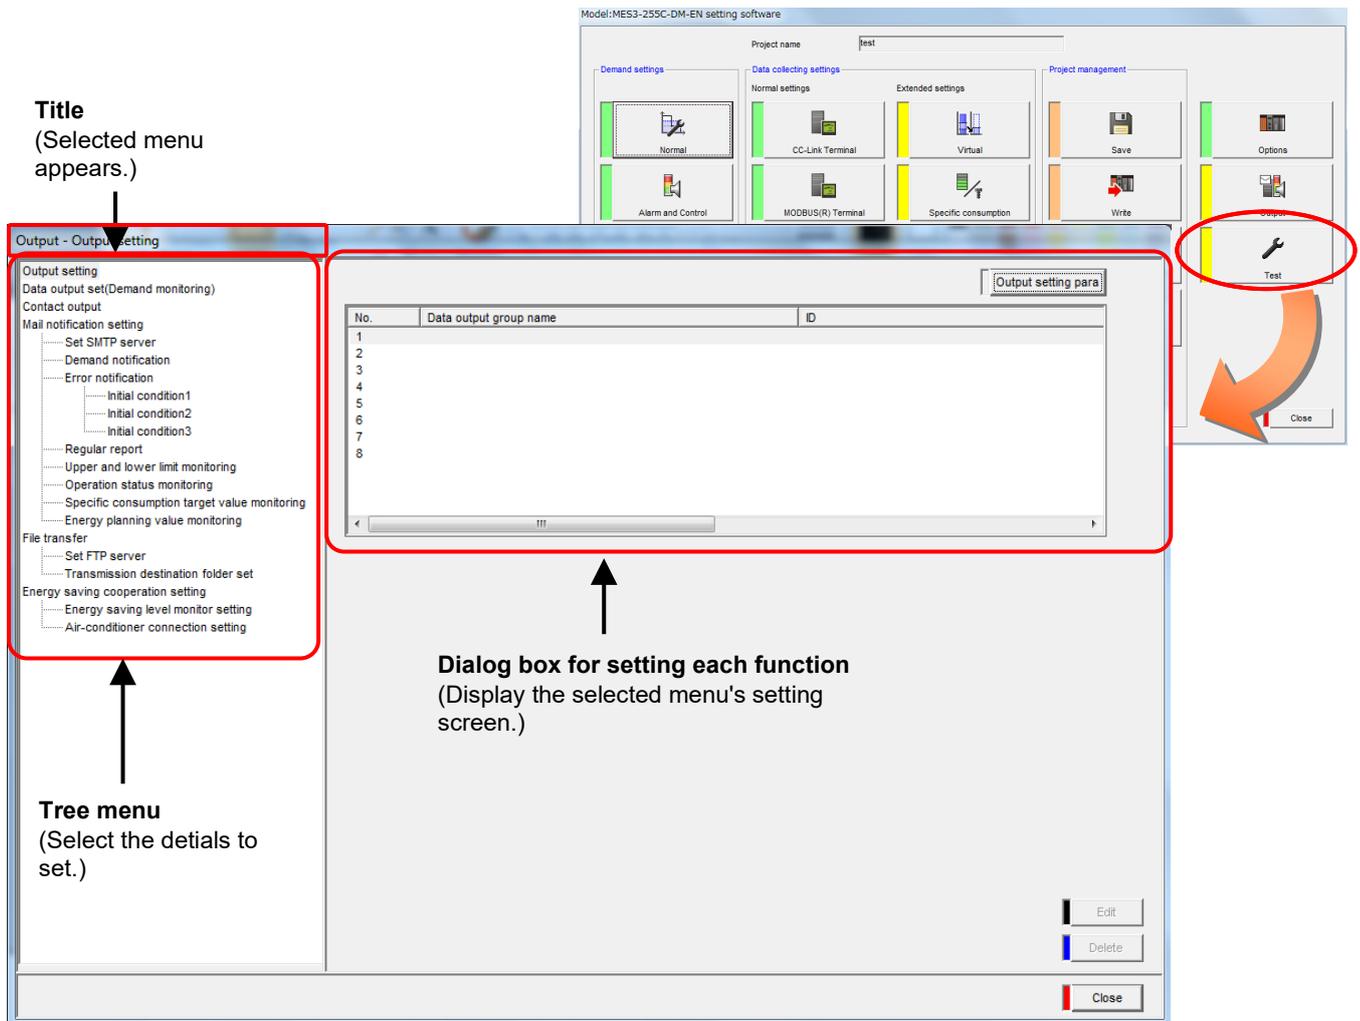

* The data output setting (demand control), demand notification, energy saving level monitor setting and air-controller connection setting functions are supported only with the EcoWebServerIII with demand control function.

2 Selecting the details to set from the tree menu

[Output setting] is selected as the default.

Remarks

- Click the [Close] button to return to the Project setting dialog box.

4.9.1. Data output settings


These settings are made to output the measuring point data (current value) to the MELSEC PLC/GOT using Ethernet communication or Ethernet/Serial adaptor cable.
The settings output to the PLC/GOT are managed as an output group.

Checking a list of data output group

The following describes how to display and confirm the list of data output groups.

1 Displaying the [Output setting] screen

Click the [Output setting] in the tree menu on the external device coordination setting screen.

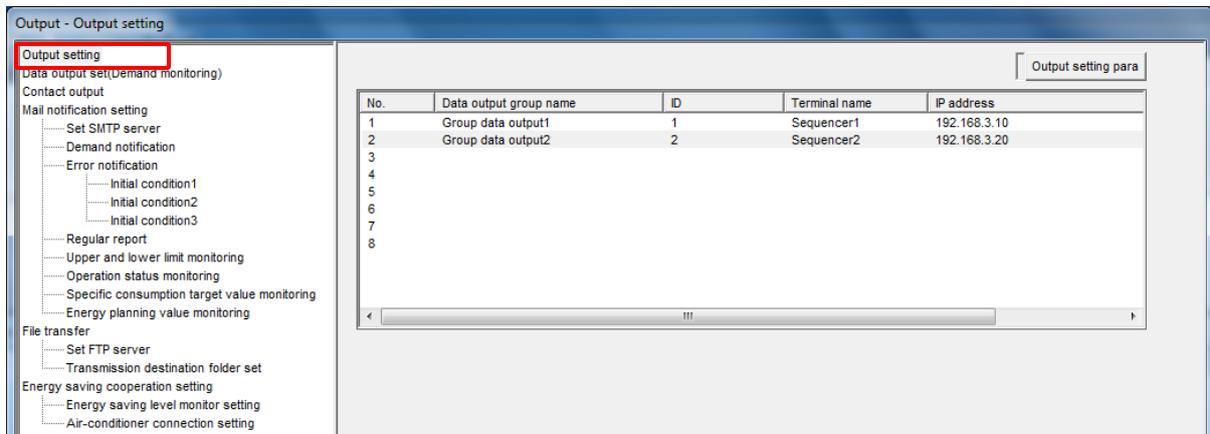

2 Checking the registration information

Check the following information displayed in the data output group list.

- [No.] : Data output group No.
- [Data output group name] : Name of registered data output group
- [ID] : Registered measuring point ID
- [Terminal name] : Name of PLC or GOT terminal that outputs the data
- [IP address] : IP address of PLC or GOT that outputs the data
- [Station No.] : Station No. of PLC serial communication unit when Ethernet/Serial conversion is selected for data communication with EcoWebServerIII

Registering data output group

This section describes how to register the data output group


- *1 Up to 32 measuring points per group and up to 8 groups (maximum 255 measuring points) can be registered in a data output group.
- *2 If a single measuring point is not registered, or if a single PLC or GOT is not registered, the output group cannot be registered.
- *3 One measuring point cannot be registered in duplicate in multiple output groups
- *4 Virtual measuring points cannot be registered in an output group (cannot be output to the PLC or GOT).
- *5 When collecting data, outputting data, outputting data (demand monitoring), and demand setting (PLC) to one PLC/GOT, register them as different PLC/GOT with different port numbers. (Refer to "4.5.3 PLC / GOT Registration".)

1 Displaying the [Output setting] screen

Click the [Output setting] in the tree menu on the external device coordination setting screen.

2 Displaying the [Registration of the data output group] screen

Select a line of a data output group you want to register on the [Output setting] screen, and click the [Edit] button. The [Registration of the data output group] screen opens.

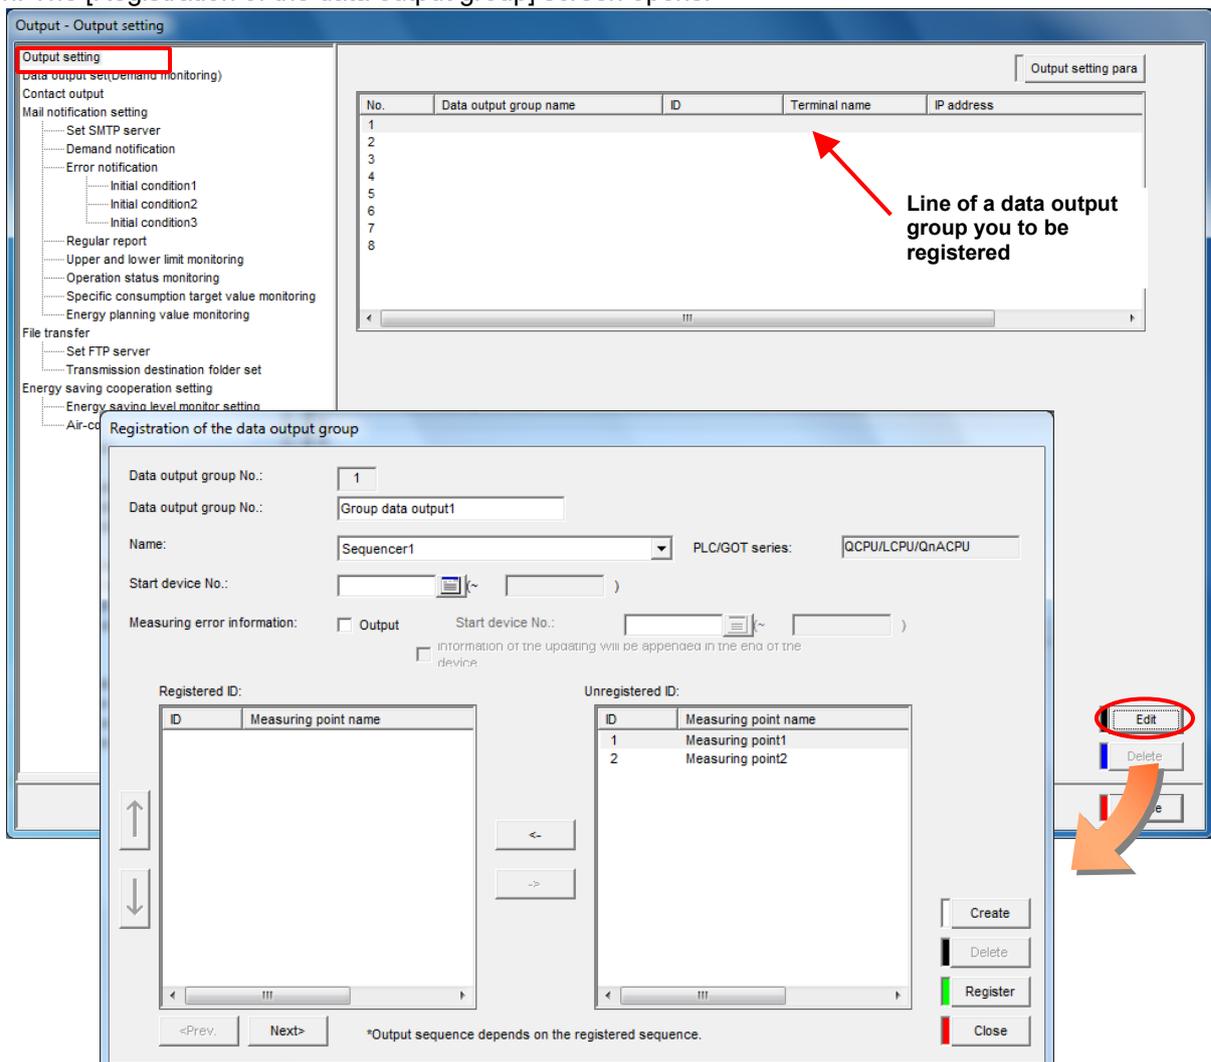


3 Entering or selecting the items

Enter or select the following items.

[Data output group Name]	<p>Enter a name of the output group in the [Data output group name]. * A duplicate name cannot be registered.</p> <p>Data output group No.: <input type="text" value="Group data output1"/></p> <table border="1" data-bbox="434 443 1437 533"> <tr> <td>Characters</td> <td>Up to 24 characters</td> </tr> <tr> <td>Prohibited characters</td> <td>The following characters cannot be registered: # ¥ / : , ; * ? " < > </td> </tr> </table>	Characters	Up to 24 characters	Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >		
Characters	Up to 24 characters						
Prohibited characters	The following characters cannot be registered: # ¥ / : , ; * ? " < >						
[Name]	<p>Select the PLC/GOT to where the data will be output from the pull-down menu. The selected PLC CPU series / GOT series will be displayed.</p> <p>Name: <input type="text" value="Sequencer1"/> PLC/GOT series: <input type="text" value="QCPU/LCPU/QnACPU"/></p>						
[Start device No.]	<p>Input the start device No. for the data output destination. Refer to section "5.10 Data output to PLC/GOT" for the setting range. Depending on the number of measuring points registered in the output group, the last device number will appear automatically. The last device number cannot be set in duplicate with a device registered as a measuring point. Please confirm the device No. is not used in data output (demand monitoring).</p> <p>Start device No.: <input type="text"/>  <input type="text"/>)</p> <p>Click  to display the range of devices that can be set for each CPU series.</p> <table border="1" data-bbox="434 967 1437 1102"> <tr> <td>Device</td> <td>Only D devices</td> </tr> <tr> <td>Characters</td> <td>Up to 5 half-byte alphanumeric characters or 7 characters including device name</td> </tr> <tr> <td>Types of characters</td> <td>Decimal or hexadecimal in device name number section</td> </tr> </table>	Device	Only D devices	Characters	Up to 5 half-byte alphanumeric characters or 7 characters including device name	Types of characters	Decimal or hexadecimal in device name number section
Device	Only D devices						
Characters	Up to 5 half-byte alphanumeric characters or 7 characters including device name						
Types of characters	Decimal or hexadecimal in device name number section						
[Measuring error information]	<p>Check this to enable measuring error outputs</p>						
[Start device No.]	<p>When output of measuring error is enabled, set the start number of the device that is outputting the measuring error information. Refer to section "5.10 Data output to PLC/GOT" for the setting range. Depending on the number of measuring points registered in the output group, the last device number will appear automatically. The last device number cannot be set in duplicate with a device registered as a measuring point.</p> <p>Start device No.: <input type="text"/>  <input type="text"/>)</p> <p>Click  to display the range of devices that can be set for each CPU series.</p> <table border="1" data-bbox="434 1460 1437 1594"> <tr> <td>Device</td> <td>Only D devices</td> </tr> <tr> <td>Characters</td> <td>Up to 5 half-byte alphanumeric characters or 7 characters including device name</td> </tr> <tr> <td>Types of characters</td> <td>Decimal or hexadecimal in device name number section</td> </tr> </table>	Device	Only D devices	Characters	Up to 5 half-byte alphanumeric characters or 7 characters including device name	Types of characters	Decimal or hexadecimal in device name number section
Device	Only D devices						
Characters	Up to 5 half-byte alphanumeric characters or 7 characters including device name						
Types of characters	Decimal or hexadecimal in device name number section						
[Information of the updating will be appended in the end of the device]	<p>Check when adding the update time information (min./sec.) to the measuring error information when output of the measuring errors is enabled.</p>						

4 Adding measuring points to output data

Select the measuring point you want to add from the [Registered ID], and click the [->] button.
The measuring point is added to the [Registered ID].

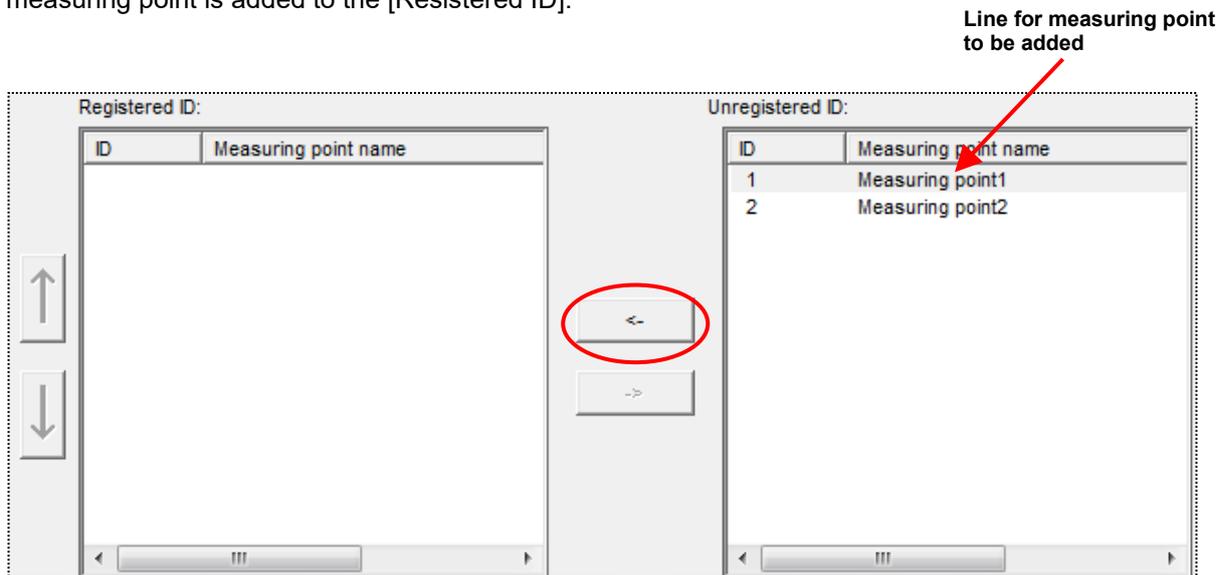


- *1 The data is output to the PLC/GOT in the order that the output groups are registered.
The measuring points in the [Measuring point list (registered)] are sorted in registered order.
- *2 Rearrange order of measuring points in the [Measuring point list (registered)] by selecting the measuring point name and clicking the [↑] or [↓] buttons.
Click [↑] once to move the measuring point up one.
Click [↓] once to move the measuring point down one.

5 Deleting measuring points to output data

Select the measuring point you want to delete from the [Registered ID], and click the [->] button.
The measuring point is deleted from the [Registered ID].

6 Registering

Click the button on the [Registration of the data output group] dialog box to register the data output group.

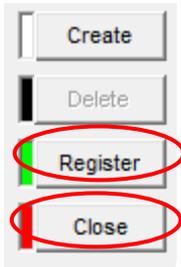

[Register] button : Register the data output group settings you set.

[Close] button : Back to the [Output setting] dialog box.

Click the [Create], [<Prev], [Next>] or [Close] button without clicking the [Register] button, the message shown on the right will be displayed.


Click [Yes] to register. Click [No] to not.

Click [Cancel] to back page to [Registration of the data output group].




If data output group name is not input, the following message will be displayed.

Click [OK] to back to input name.

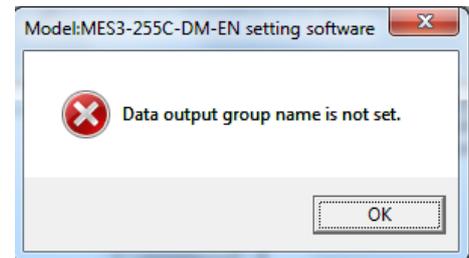


If prohibited characters are used, the following message will be displayed.

Click the [OK] button and change or delete the corresponding character.

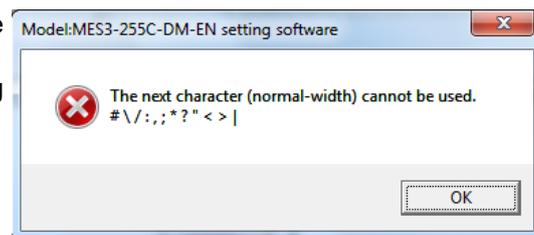


If the group name is duplicated, the following message will be displayed.


Click the [OK] button and change the output group name.

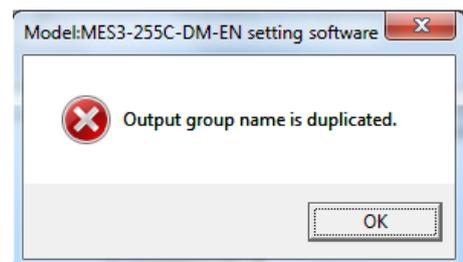


If the device No. is not set, the following message will be displayed.
Click the [OK] button and set the device No.

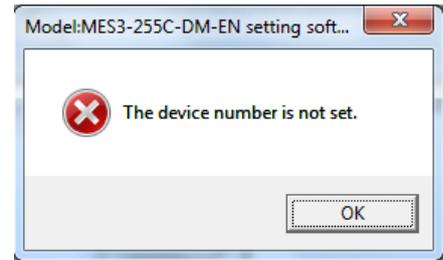

If measuring point is not registered, the following message will be displayed.
Click the [OK] button and register the measuring point.

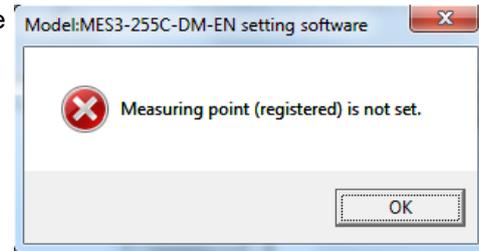

If device No. is duplicated, the following message will be displayed.
Click the [OK] button and change the device No.

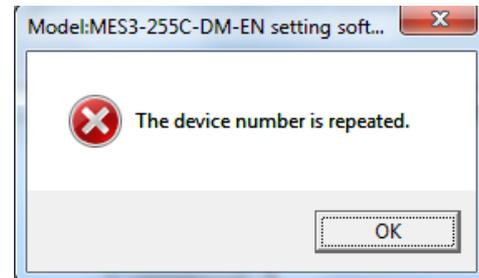

Editing the registered data output group


This section describes how to edit registration information of data output group.

1 Displaying the [Output setting] screen

Click the [Data output setting] in the tree menu on the external device coordination setting screen.

2 Displaying the [Registration of the data output group] screen

Select the line of the data output group you want to edit on the [Output setting] screen, and click the [Edit] button. The [Registration of the data output group] screen displays.

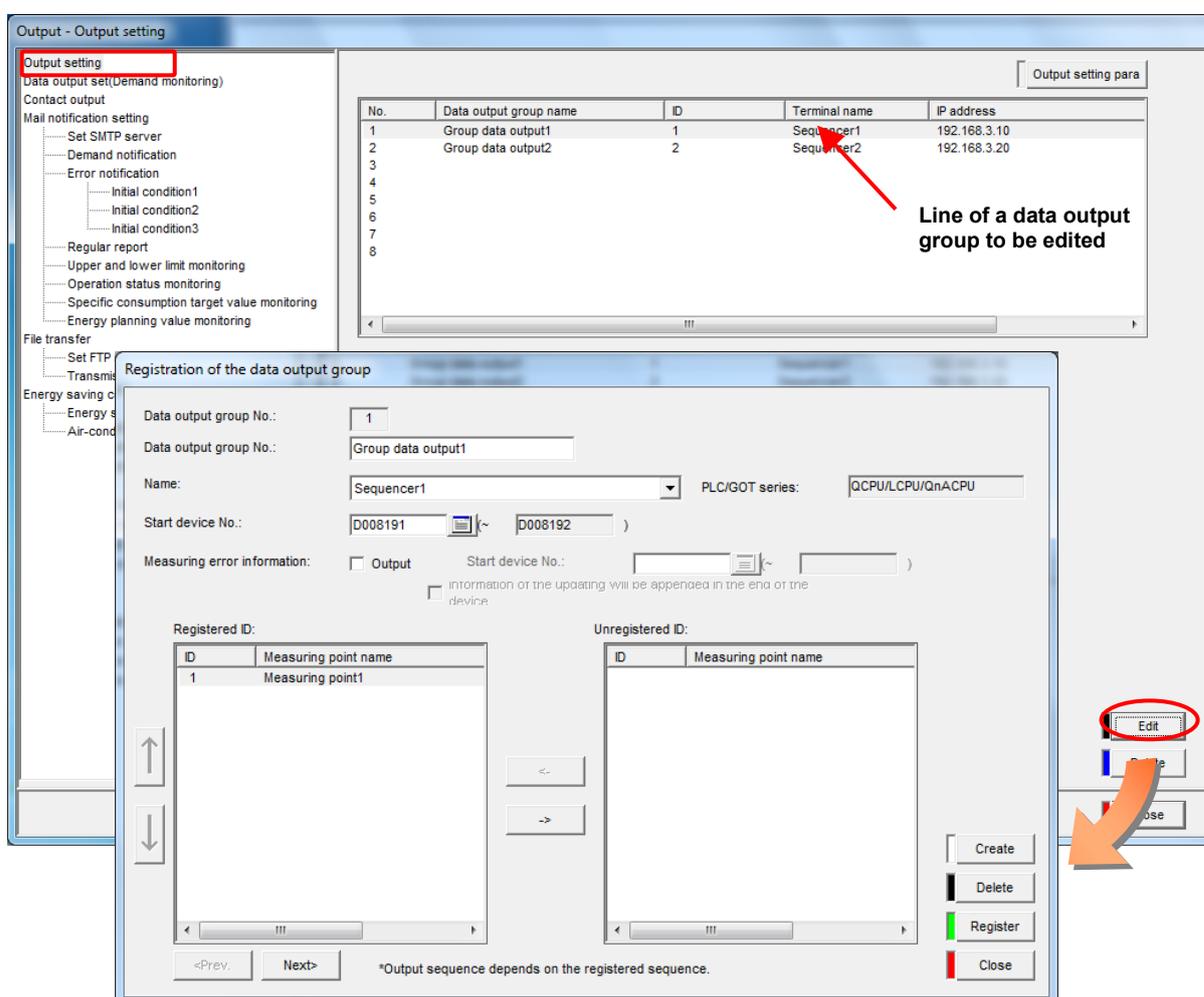

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The entries and input conditions for each item are the same as registering a data output group.

Deleting a registered data output group


This section describes how to delete a registered data output group.

1 Displaying the [Output setting] screen


Click the [Data output setting] in the tree menu on the external device coordination setting screen.

2 Deleting a data output group

Select the line of the data output group to be deleted on the [Output setting] screen, and click the [Delete] button.

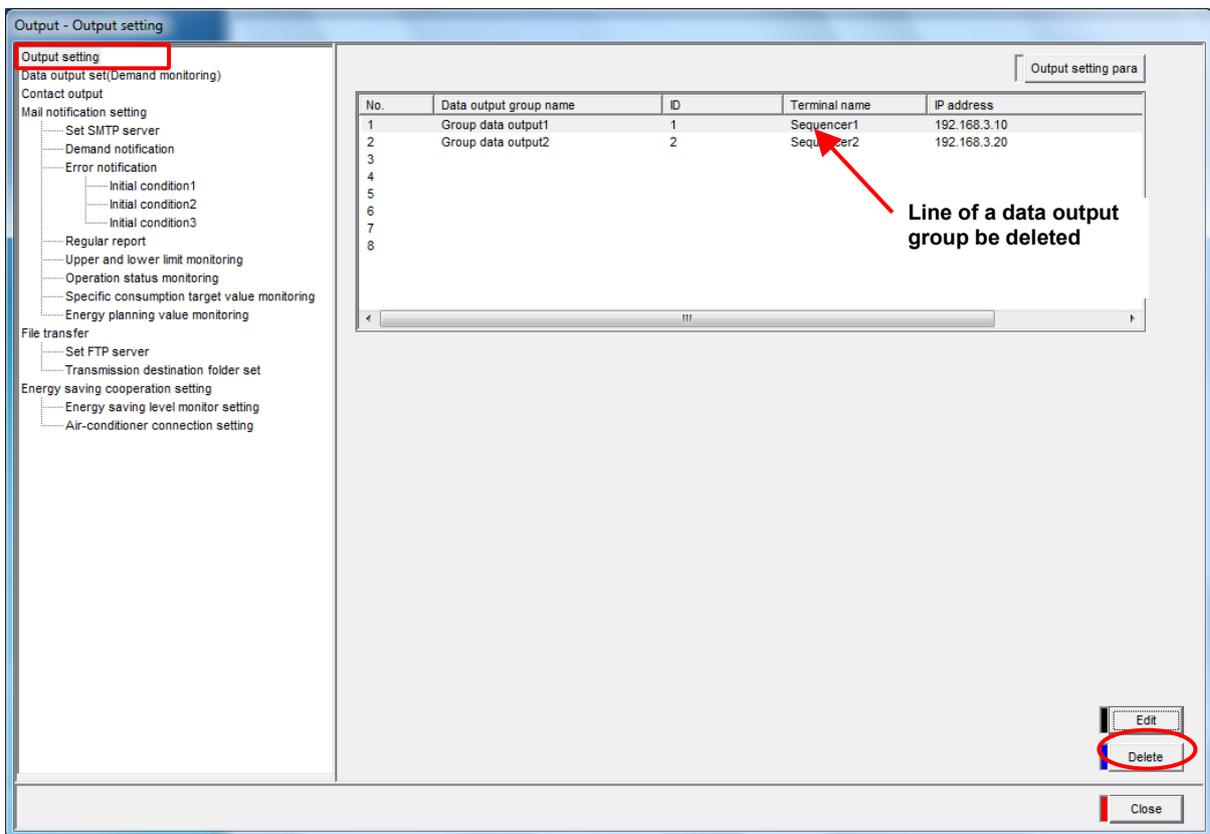

The following message will be displayed. Click the [Yes] button.

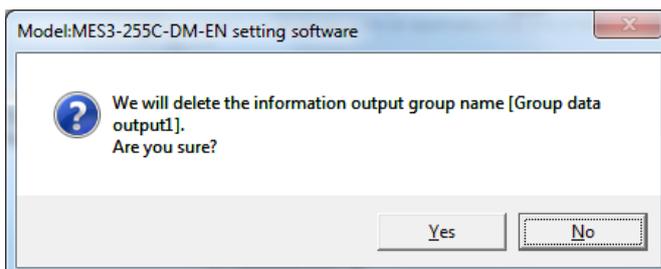

Outputting data output group parameters


This section describes how to output data output group parameters to CSV file.

1 Displaying the [Output setting] screen

Click the [Output setting] in the tree menu on the external device coordination setting screen.

2 Outputting setting parameters

Output the information related to each measuring point data and device No. to be output to a CSV file (data output setting information file). Click the [Output setting para] button to display save dialog.

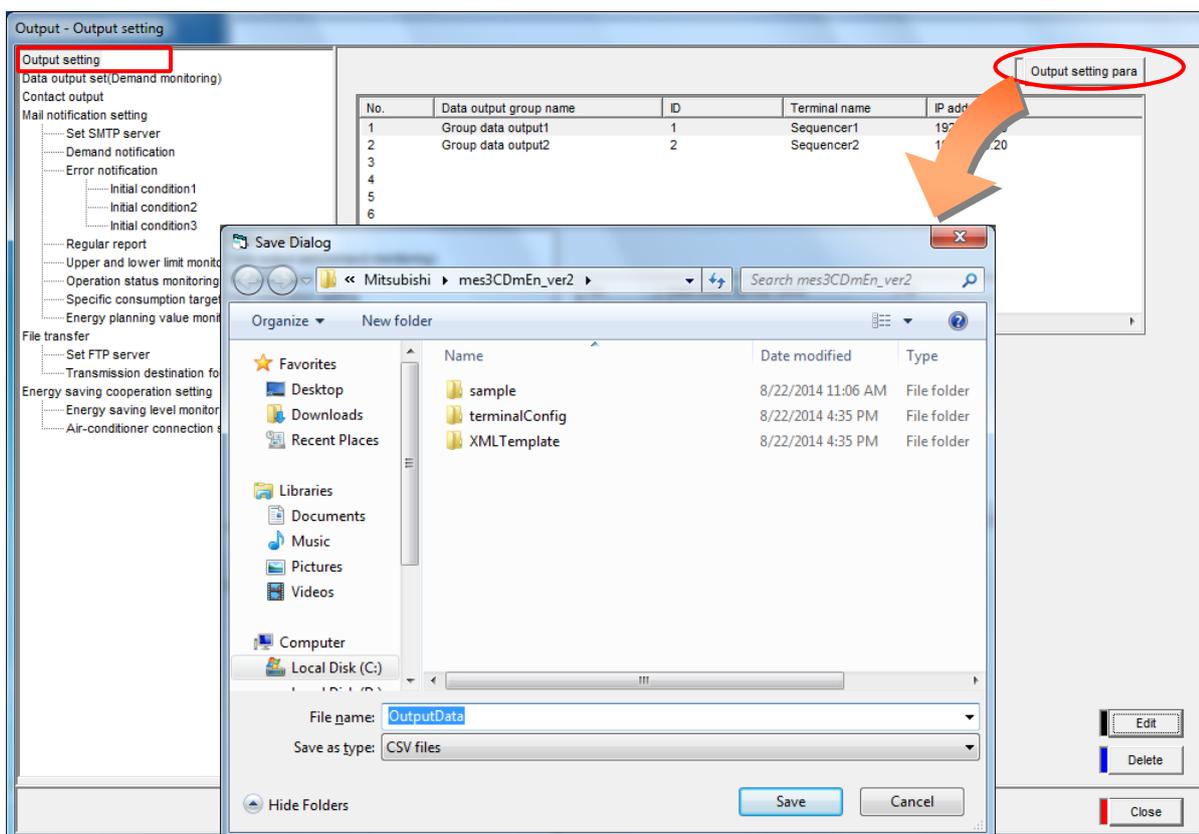

The save dialog appears. Specify any save destination and file name, and click the [Save] button.

The form of data output setting parameters is following.

Item	Contents
File name	'OutputData' + '.csv' * Can be randomly specified at output
Content	Record information for data output
1 st line	<Version>
2 nd line	Version of setting software
3 rd line	<Output condition>
4 th line	Output cycle * Fixed to 60 seconds
5 th line	<Output information>
6 th line	Measuring point ID, Measuring point name, Unit, Measuring item* ¹ , Decimal point* ² , data type* ³ , Channel* ⁴ , Pulse factor* ⁵ , Scale type* ⁶ , power factor type* ⁷ , Data output device No., Measuring error information, error output device No.(bit), output group No.
:	:
:	:
n th line	<Data output group information>
(n+1) th line	Output group No., Output group name, IP address, Port No., PLC/GOT station No., Start device No. of information updating* ⁸

- *1 Measuring item → Measuring item for terminals (Device No. for PLC/GOT)
- *2 Decimal point → Decimal
- *3 Data type → 1. Analog 2. Pulse 3. Digital
- *4 Channel → Channel No. for terminals (Data length for PLC/GOT)
- *5 Pulse factor → 0: 0.01 1:0.1 2:1 (only for MP11A) -1: No corresponding item
- *6 Scale type → 0: 0 to 20 mA 1:4 to 20 mA 2:0 to 5 V 3:1 to 5 V 4:-5 to 5 V
- *7 Power factor type → 0: -0% - 100% - 0% 1: -50% - 100% - 50% -1: No corresponding item
- *8 Start device No. of information updating → Blank for no updating

Example of OutputData.csv
<pre> <Version> 2.0.0 <Output Condition> 60Second <Output Information> 1,"Energy1","kWh","Energy",1,2,63,-1,0,0,"D002000",,,,1 9,"Voltage1","V","Voltage",1,1,89,-1,0,-1,"D002002",,,,1 5,"Current1","A","Current",1,1,57,-1,0,-1,"D002004",,,,1 7,"S-T Voltage1","V","S-T Voltage",1,1,7,-1,0,-1,"D000150","D001000(b0)",2 10,"Power factor1","%","Power factor",1,1,27,-1,0,0,"D000152","D001000(b1)",2 12,"Production line counter1","Pcs.,"D000051",0,2,0,,,,-1,"D000154","D001000(b2)",2 <Output data group information> 1,"Data output group1","10.23.45.6",80,0,"" 2,"Data output group2","10.23.45.6",80,0,"D001001" </pre>

4.9.2. Data output settings (demand control) (Only when demand control function is provided)

These settings are made to output the measuring point data for demand control to the MELSEC PLC/GOT using Ethernet communication or Ethernet/Serial adaptor cable.

Checking the registered information for the data output settings (demand control)

Display the data output setting (demand control) and describe how to check the registered information.

1 Displaying the [Data output set (Demand control)] screen

Click the [Data output set (Demand control)] in the tree menu on the external device coordination setting screen.

Device number	Subject
	Control device
	Healthy
	/
	Present time
	:
	Integration power volume
	Low rank
	High rank
	Present demand
	Low rank
	High rank
	Prospected demand
	Low rank
	High rank
	Adjust power
	Low rank
	High rank
	Permission power
	Low rank
	High rank
	Former demand
	Low rank
	High rank
	Remained time
	Alarm status
	Load control status
	Demand goal value
	Low rank
	High rank
	VCT ratio
	Low rank
	High rank
	Alarm type

2 Checking the registration information

Check the settings for the demand control data output destination displayed on the [Data output set (Demand control)] screen.

Registering the data output settings (demand control)

This section describes the procedures for registering the data output settings (demand control).

- *1 The data output settings (demand control) cannot be registered if a single PLC or GOT is not registered.
- *2 When collecting data, outputting data, outputting data (demand monitoring), and demand setting (PLC) to one PLC/GOT, register them as different PLC/GOT with different port numbers. (Refer to "4.5.3 PLC / GOT Registration".)

1 Displaying the [Data output set (Demand control)] screen

Click the [Data output set (Demand control)] in the tree menu on the external device coordination setting screen.

Output - Data output set(Demand monitoring)

Output setting

Data output set(Demand monitoring)

Contact output

Mail notification setting

- Set SMTP server
- Demand notification
- Error notification
 - Initial condition1
 - Initial condition2
 - Initial condition3
- Regular report
- Upper and lower limit monitoring
- Operation status monitoring
- Specific consumption target value monitoring
- Energy planning value monitoring

File transfer

- Set FTP server
- Transmission destination folder set

Energy saving cooperation setting

- Energy saving level monitor setting
- Air-conditioner connection setting

Data output start

The delay time of output finish notification: 0

Name: PLC/GOT series:

Start device No.:

Device number	Subject	
	Control device	
	Healthy	
		/
	Present time	:
	Integration power volume	Low rank
		High rank
	Present demand	Low rank
		High rank
	Prospected demand	Low rank
		High rank
	Adjust power	Low rank
		High rank
	Permission power	Low rank
		High rank
	Former demand	Low rank
		High rank
	Remained time	
	Alarm status	
	Load control status	
	Demand goal value	Low rank
		High rank
	VCT ratio	Low rank
		High rank
	Alarm type	

Register

Close

2 Entering or selecting the items

(1) [Data output start]

Check [Data output start] to enable output of the demand control measuring point data.

* The following items can be set only when this item is checked.

(2) [The delay time of output finish notification]

Set the time to delay update of the control device to "Write complete" after output of the demand control measuring data is completed.

* The delay time can be set in the range of 0 to 3 seconds.

(3) [Name]

Select the PLC/GOT that outputs the data.

* Information displayed in Terminal pull-down menu:
 PLC/GOT terminal name registered in PLC/GOT registration.
 For the CPU, GOT series, the registered PLC/GOT information is displayed.

(4) [Device number]

Enter the device number with device name using half-byte numerals.

Device number	Subject
	Control device
	Healthy

* Refer to "5.7 List of measured items of devices" for the setting range.

The setting range appears when the [] button at the side of the input field is clicked.

* Characters other than the setting range cannot be registered.

```

Device number list
[Word device]
=====
<I-Q-R>
Timer(Current value)[T]: TN00000-TN00511
Counter(Current value)[C]: CN00000-CN00511
Data register[D]: D000000-D011135
Link register[V]: W000000-W0007FF
File register[R]: R000000-R032767
-----
<I-Q-F>
Timer(Current value)[T]: TN00000-TN00511
Counter(Current value)[C]: CN00000-CN00255
Data register[D]: D000000-D007999
File register[R]: R000000-R009999
-----
<Basic model QCPU>
Timer(Current value)[T]: TN00000-TN00511
Counter(Current value)[C]: CN00000-CN00511
Data register[D]: D000000-D011135
Link register[V]: W000000-W0007FF
File register[R]: R000000-R032767
-----
<High-performance model QCPU, Process CPU, Redundant CPU, Universal model QCPU, LCPU>
Timer(Current value)[T]: TN00000-TN02047
Counter(Current value)[C]: CN00000-CN01023
Data register[D]: D000000-D012287
Link register[V]: W000000-W001FFF
File register[R]: R000000-R032767
Special register[D]: D009000-D009255 (QnACPU only)
=====
* Please refer to user's manual of CPU and GOT for more details about device range.
  
```

3 Registering

Click the button on the [Data output set (Demand control)] dialog box to register.



[Register] button : Register the data output setting (demand control) you set.

[Close] button : Back to the project setting dialog box.


*1 If the device No. is not set, the message shown on the right will be displayed.

Click the [OK] button and set the device No.



*2 If the device No. is duplicated, the message shown on the right will be displayed.

Click the [OK] button and change the device No.

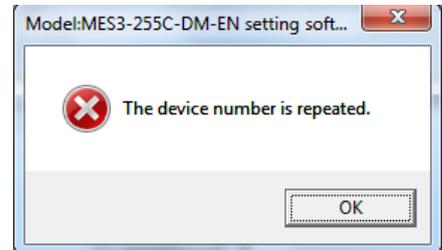


*3 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the [Data output setting (demand control)] screen.

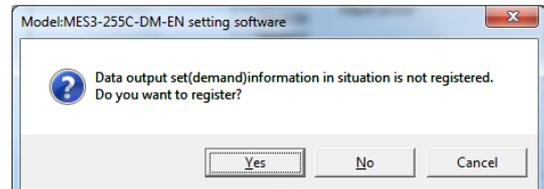

Editing the registered data output settings (demand control)

This section describes how to edit the data output setting (demand control).

1 Displaying the [Data output set (Demand control)] screen

Click the [Data output set (Demand control)] in the tree menu on the output setting screen.

Output - Data output set(Demand monitoring)

Output setting
Data output set(Demand monitoring)
Contact output
Mail notification setting
Set SMTP server
Demand notification
Error notification
Initial condition1
Initial condition2
Initial condition3
Regular report
Upper and lower limit monitoring
Operation status monitoring
Specific consumption target value monitoring
Energy planning value monitoring
File transfer
Set FTP server
Transmission destination folder set
Energy saving cooperation setting
Energy saving level monitor setting
Air-conditioner connection setting

Data output start

The delay time of output finish notification: 0

Name: Sequencer1 PLC/GOT series: QCPU/LCPU/QnACPU

Start device No.: D001000

Device number	Subject	
D001000	Control device	
D001001	Healthy	
D001002		/
D001003		
D001004	Present time	
D001005		
D001006		:
D001007		
D001008	Integration power volume	Low rank
D001009		High rank
D001010	Present demand	Low rank
D001011		High rank
D001012	Prospected demand	Low rank
D001013		High rank
D001014	Adjust power	Low rank
D001015		High rank
D001016	Permission power	Low rank
D001017		High rank
D001018	Former demand	Low rank
D001019		High rank
D001020	Remained time	
D001021	Alarm status	
D001022	Load control status	
D001023	Demand goal value	Low rank
D001024		High rank
D001025	VCT ratio	Low rank
D001026		High rank
D001027	Alarm type	

Register

Close

2 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The entries and input conditions for each item are the same as registering a data output group (demand control).

4.9.3. Contact output settings

This section explains the operation procedure in the dialog box of [Contact output].

This is the setting for contact outputs of product errors and the monitoring information (upper/lower limits, operation status, specific consumption target value and energy plan value), demand control and demand control set through the dialog box of Monitoring and notification settings.

Up to 32 points can be registered for contact outputs.


- * The contact output setting for demand control and demand control are provided only with the EcoWebServerIII with demand control function.
- * Separately, contact output of the following is required monitoring notification registration.
Upper/lower limit monitoring, Operating status monitoring, Specific consumption target value monitoring, and Energy plan value monitoring.

Confirming the registered contact output settings

This section explains the procedures to display and confirm the registered contact output settings.

1 Displaying the [Contact output] screen

Click the [Contact output] in the tree menu on the output setting screen.

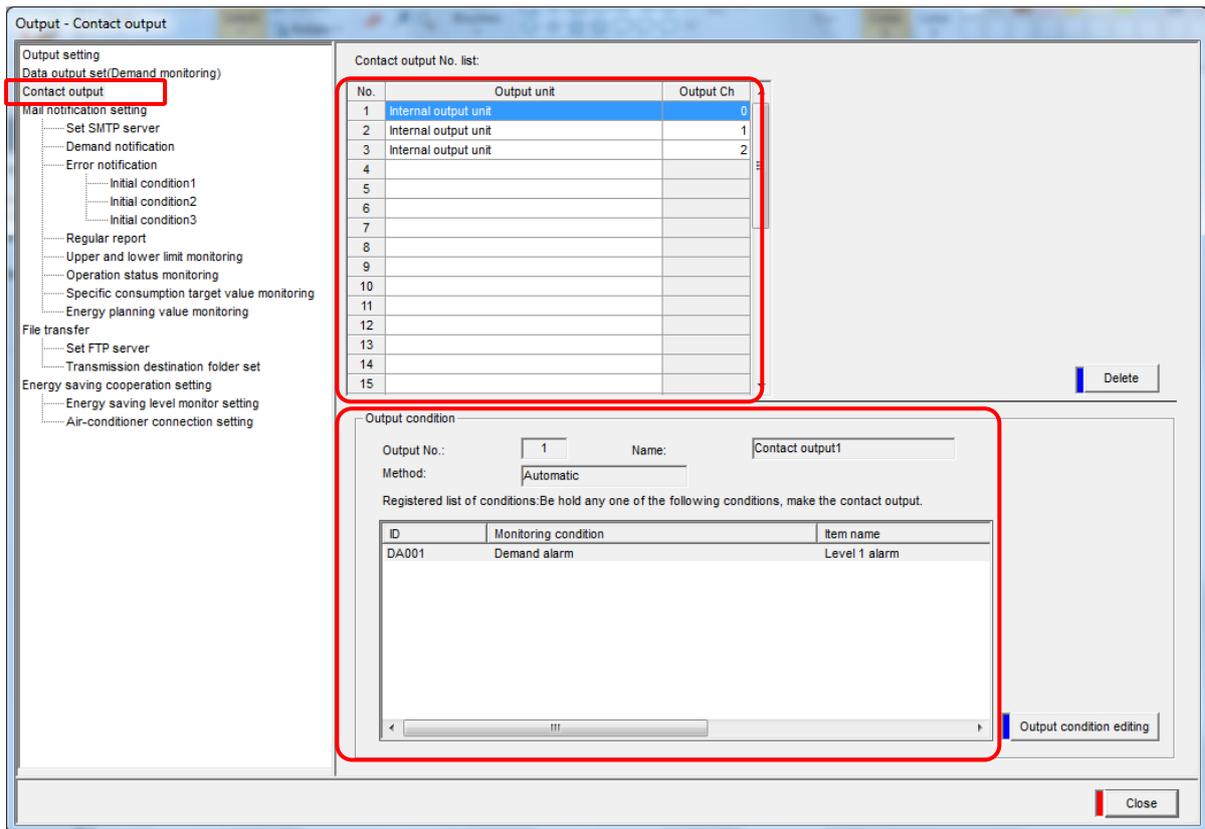

[Contact output No. list] : The list of set contact outputs is displayed.

[Output condition] : Output condition selected in the contact output No. list is displayed.

2 Confirming the output conditions

Click the line of contact output No. to be confirmed in the [Contact output No. list] in the dialog box of [Contact output].

Contact output No. list:

No.	Output unit	Output Ch
1	Internal output unit	0
2	Internal output unit	1
3	Internal output unit	2
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Output condition

Output No.: Name:

Method:

Registered list of conditions: Be hold any one of the following conditions, make the contact output.

ID	Monitoring condition	Item name
DA001	Demand alarm	Level 1 alarm

Output condition editing

- [Output No.] : Contact output No. selected
- [Name] : Contact output name of contact output No. selected
- [Method] : Contact output method (one-shot (10 sec.), output condition interlocking)
- Output condition interlocking : ON when the output condition is established (occurrence), and OFF when it is restored.
- One-shot (10 sec.) : ON for 10 sec. only when the output condition is established (occurrence), and then OFF automatically.
- Also, ON for only 10 sec. when the output condition is not established (restored), and then OFF automatically.
- [Registered list of conditions] : Output conditions registered for contact output No. selected

Registering new contact outputs

Register the output destination and the conditions of contact outputs newly.

* With the EcoWebServerIII with demand control function, contact output No. 1 to 3 are set to as follows as the default.


- Contact output No. 1:
Internal output unit Output Ch: 0, Registered conditions: Level 1 alarm Occurrence
- Contact output No. 2:
Internal output unit Output Ch: 1, Registered conditions: Level 2 alarm Occurrence
- Contact output No. 3:
Internal output unit Output Ch: 2, Registered conditions: Limit/Fixed alarm Occurrence

1 Displaying the [Contact output] screen

Click [Contact output] in the tree menu on the external device coordination setting screen.

2 Setting the output destination of contact outputs

Select the line for the No. to be set from the contact output No. list.

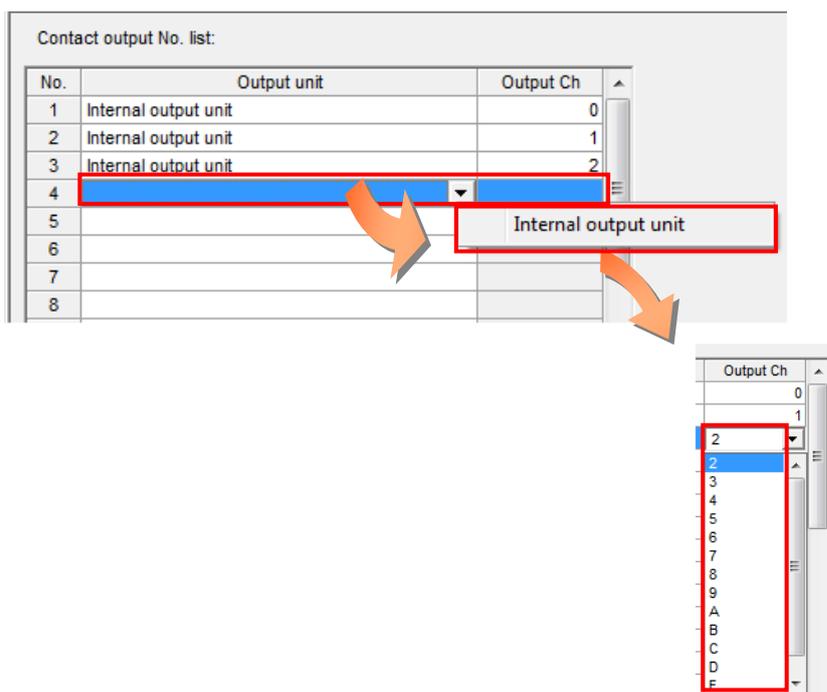

(1) [Output unit]

Select the contact output destination from the pull-down menu.

(2) [Output Ch]

Select the Ch to output the built-in output unit. Select from the 16 channels 0 to F.

When using a digital output terminal, the selective CH will vary according to the terminal.

(Ex.: For B-DX4Y4A, Ch1 to 4 can be selected)

Channels which is already selected will not be displayed in the list.

3 Displaying the [Registration of contact output condition] screen

Select the line of the contact output No. you want to set the output conditions, and click the [Output condition editing] button.

Contact output No. list:

No.	Output unit	Output Ch
1	Internal output unit	0
2	Internal output unit	1
3	Internal output unit	2
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Output condition

Output No.: 3 Name: Contact output3

Method: Automatic

Registered list of conditions: Be hold any one of the following conditions, make the contact output.

ID	Monitoring condition	Item name
----	----------------------	-----------

Output condition editing

Registration of contact output condition

Output No.: 3 Name: Contact output3

Method: Automatic

Output condition linked : Turn ON when output condition is satisfied, and restored back to OFF.
One-shot (10 sec) : Turn ON for when output condition is satisfied, back to OFF after 10 seconds.

(1) Item selection

Error information

Next>

<Back

(2) Detailed

Item: Uncheck

Register

Close

4 Entering or selecting the items for contact output conditions

(1) [Name]

Input the contact output name.
The entry conditions are as follow:

Characters Up to 24 characters
Prohibited characters Prohibit registration of the following characters
¥ / : , ; * ? " < > |

- *1 If the characters are used which are listed in the table of prohibited characters in the appendix, these may not be displayed correctly in the browser of EcoWebServerIII.
- *2 Duplicated registration of the contact output name is prohibited.


(2) [Method]

Select the contact output method from the following two methods.

Automatic: ON when the output condition is established (occurrence), and OFF when it is restored.

One-shot : ON for 10 sec. only when the output condition is established (occurrence), and then OFF automatically.

ON for 10 sec. only when the output condition is not established (restored), and then OFF automatically.

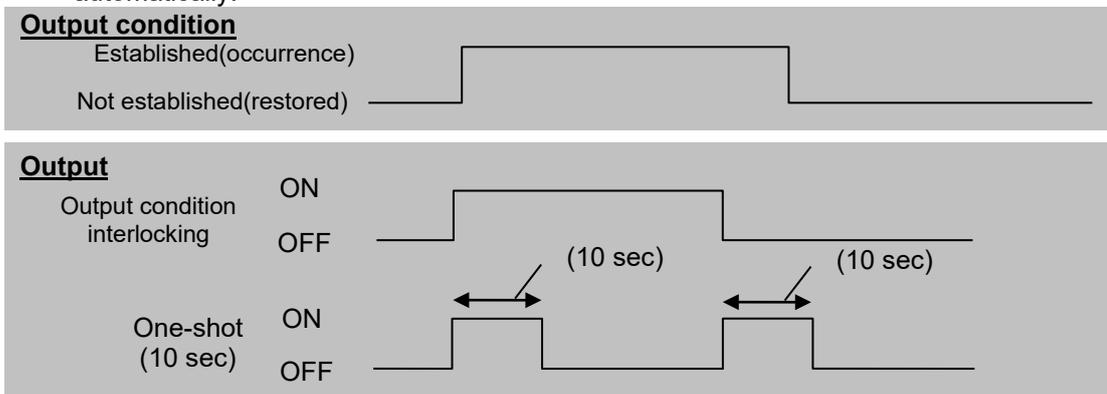


✓ Additional information:

About contact output method

It may take 10 seconds around until the contact output turns ON after the output condition is established (occurrence).

It also may take 10 seconds around until the contact output turns OFF after restoration.

Remember such the delay.

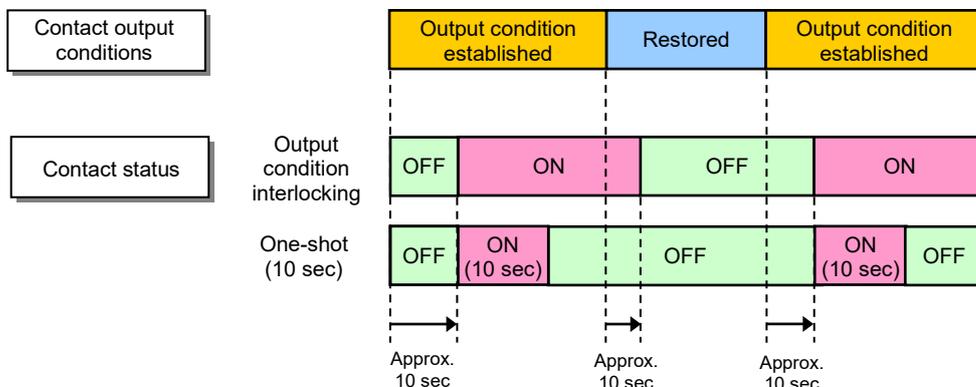

*When occurrence/restored within 10 seconds after contact output of one-shot, contact output is may not ON.

*1 When 'Demand control' is selected in the item selection, the contact output method is fixed to 'Interlocking.'

*2 When 'Demand time start' is selected in the item selection, the contact output method is fixed to 'One-shot.'

5 Selecting the contact output conditions

Select the conditions that can change the contact status to ON.

(1) Selecting the major item

Select the major item (Error information, Monitoring: Limit, Monitoring: Status, Monitoring: Sp-Cons., Monitoring: Energy, Demand alarm, Demand control, Demand time start) in the monitoring settings, and click the [Next>] button.

* The demand alarm, demand control, and demand time start are displayed only for EcoWebServerIII with the demand control function.



(2) Selecting the detail item


The detail item list of the selected large item is displayed. Click the detail item to be registered in the output conditions to put it on the checkmark.

*1 If selecting multiple items, and at least one on them is established from the conditions, the contact output is activated.

*2 10 of the detail items can be registered for a single contact output (demand alarm/control is only 1).


*3 Any detail items belonging to the other large item cannot be registered for a single contact output.

<Error information>

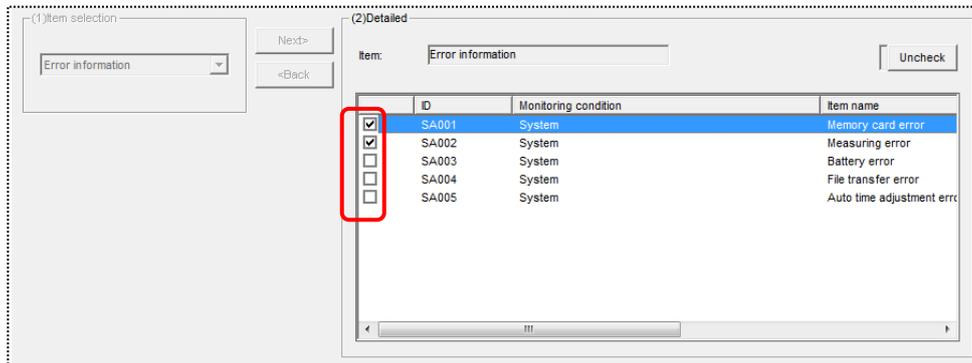

Detail item: memory card error, Measuring error, Battery error, File transfer error and Auto time adjustment error

< Monitoring: Limit, Monitoring: Status, Monitoring: Sp-Cons., Monitoring: Energy >

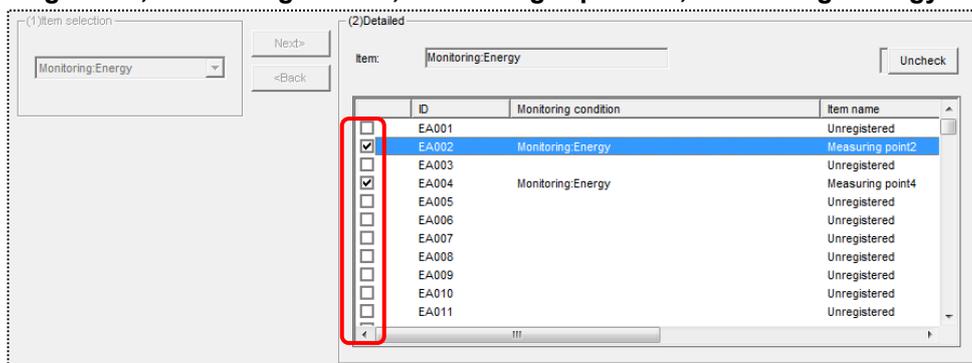


Detail item: Items registered in the dialog box of Monitoring and notification settings

* For the lines that the monitoring and notification settings are not registered, those lines are displayed as Monitoring condition: " " (blank) and Item name: "Not registered".

- * Separately, monitoring registration is required.
 - ☞ (Refer to [4.10.8 Upper/lower limit monitoring registration], [4.10.9 Operating status monitoring registration], [4.10.10 Specific consumption target value monitoring registration], [4.10.11 Energy plan value monitoring registration])


<Demand alarm> (Only for EcoWebServerIII with the demand control function)

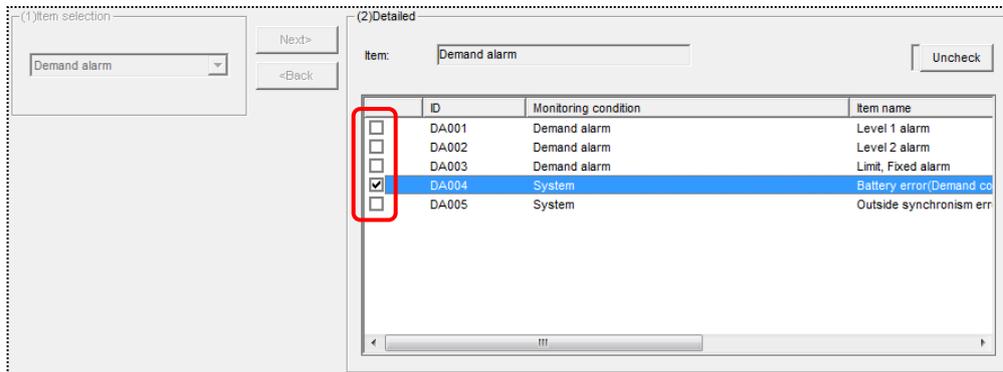

Detail items: Level 1 alarm, Level 2 alarm, limit/fixed alarm, battery error (demand control unit) and error: demand time limit adjustment by external pulse signal

- *Do not select more than one item for demand alarm.
(If multiple items are selected, contact output is not correctly when it is restored.)


<Demand control> (Only on EcoWebServerIII with demand control function)

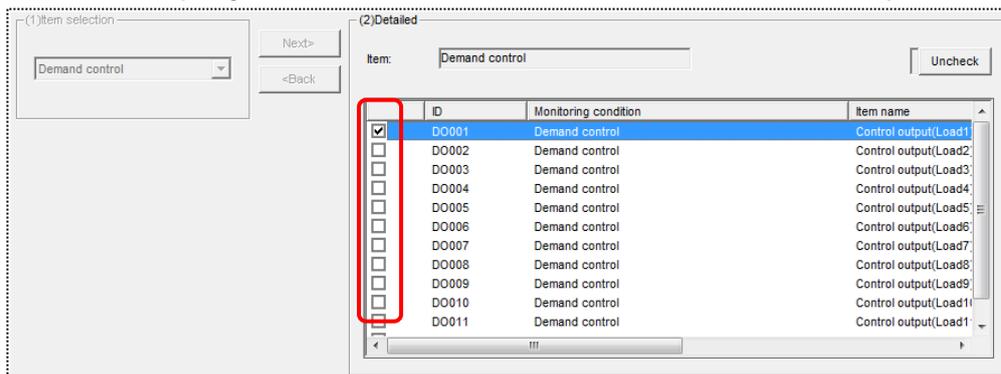

Detail items: (Control output 1 load name) to (Control output 12 load name)

- *Do not select more than one item in demand control.

<Demand time start> (Only for EcoWebServerIII with the demand control function)

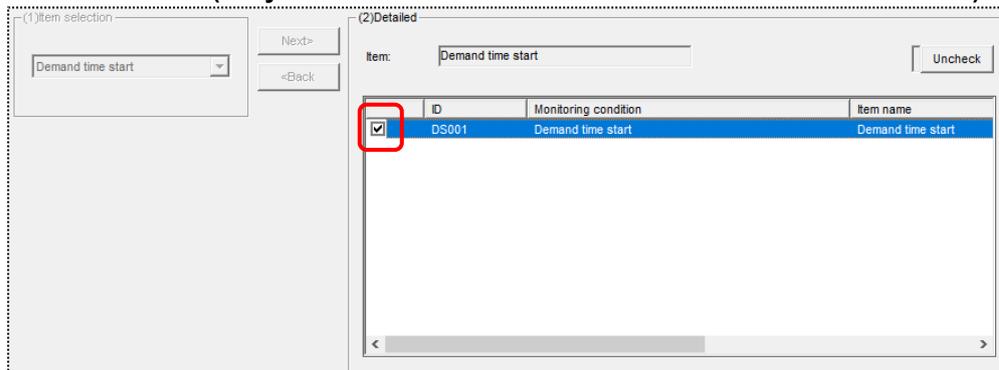

Detail items: Demand time start

To re-select the large item:

Clear all the checkmarks put on the detail items, and then the [<Back] button become active. Click the [<Back] button to back to the large item selection, and then select again.

- * Click the [Uncheck] button to release all the checked detail items.

7 Registering

Click the button in the dialog box of [Registration of contact output condition] to register.




[Register] button : Register the set contact output conditions


[Close] button : Back to the dialog box of [Contact output]

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item.


(Example of display)

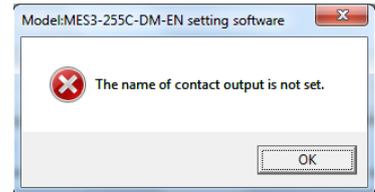

- *2 If more than 10 detail items have been registered in the contact output conditions, the error message shown on the right. Limit the number of selecting detail items to within 10.

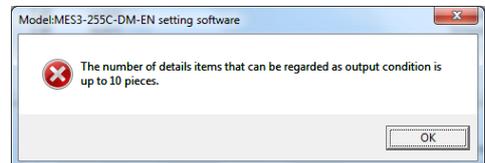

- *3 If clicking the [Register] button while no detail item has been selected, the message shown on the right is displayed. If clicking the [Yes] button, only the contact output name is registered as "No output condition".

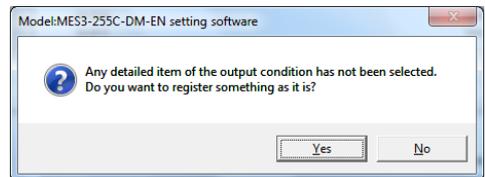

- *4 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the dialog box of [Registration of contact output conditions]



Deleting the registered contact output


This section explains the procedure to delete the registered contact output.

1 Displaying the [Contact output] screen


Click the [Contact output] in the tree menu on the external device coordination setting screen.

2 Selecting the contact output No. to delete

Select the line of contact output No. to be deleted and click the [Delete] button.

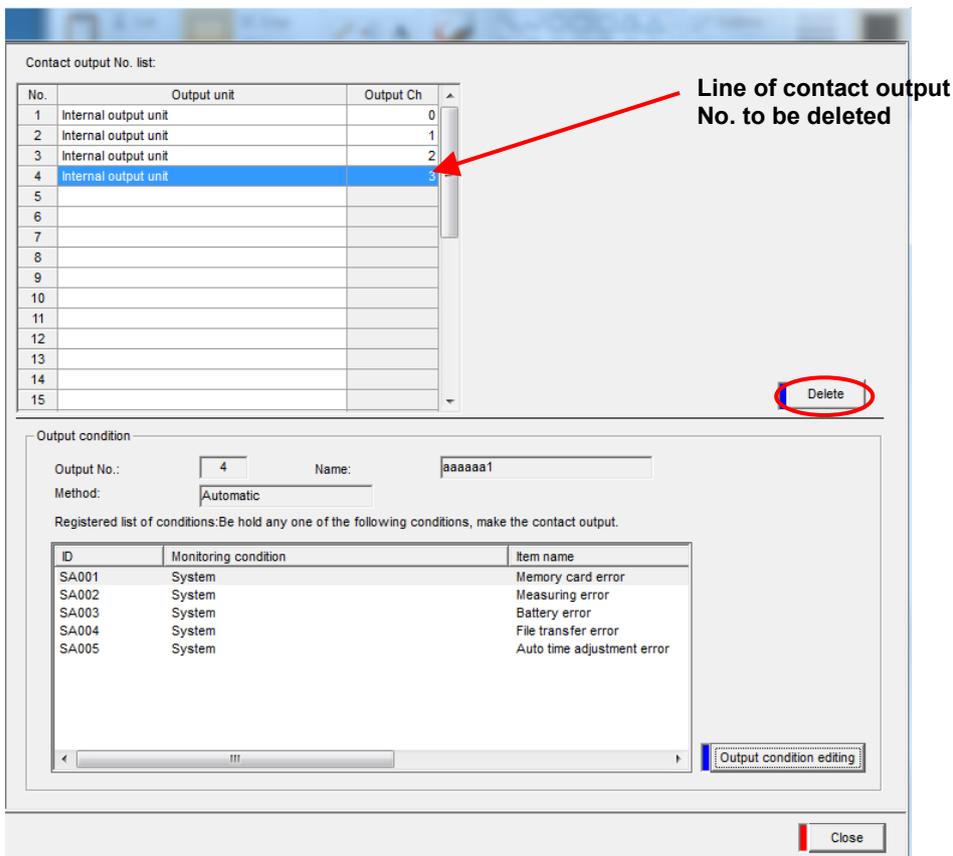

The following message appears. Click the [Yes] button.

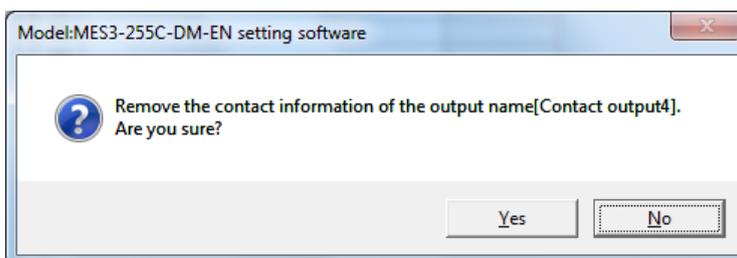

Remarks

- The contact output No. can also be deleted by clicking the right-click menu [Delete] or pressing the [Delete] key.

Editing the registered contact outputs

This section describes the procedures for changing a registered contact output (Output unit, output Ch, Name, Method, Output conditions).

1 Displaying the [Contact output] screen

Click the [Contact output] in the tree menu on the external device coordination setting screen.

2 Selecting the contact output No. to edit

Select the line of the contact output No. to be edited, and click the [Output condition editing] button.

Line of contact output No. to be edited

The screenshot shows two overlapping windows from a software interface. The top window, titled 'Contact output No. list', contains a table with columns 'No.', 'Output unit', and 'Output Ch'. Row 4 is highlighted in blue, and a red arrow points to it from the text 'Line of contact output No. to be edited'. The bottom window, titled 'Registration of contact output condition', is open for 'Output No.: 4' and 'Name: Contact output4'. It has a 'Method' dropdown set to 'Automatic'. Below this, there are two sections: '(1)Item selection' with a dropdown menu showing 'Error information', and '(2)Detailed' with an 'Item:' dropdown also showing 'Error information' and an 'Uncheck' button. A table in the 'Detailed' section lists monitoring conditions with checkboxes and item names. An orange arrow points to a button labeled 'Output condition editing' in the bottom right corner of the dialog box.

No.	Output unit	Output Ch
1	Internal output unit	0
2	Internal output unit	1
3	Internal output unit	2
4	Internal output unit	3
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

ID	Monitoring condition	Item name
<input checked="" type="checkbox"/>	SA001 System	Memory card error
<input checked="" type="checkbox"/>	SA002 System	Measuring error
<input checked="" type="checkbox"/>	SA003 System	Battery error
<input checked="" type="checkbox"/>	SA004 System	File transfer error
<input checked="" type="checkbox"/>	SA005 System	Auto time adjustment error

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The input information and input conditions for each item are identical to those for new registration of the contact output conditions.

Remarks

- Change the output unit and output Ch from the [Contact output No. list] pull-down menu.

4.9.4. SMTP server settings

This section describes the procedures for setting the [Set SMTP server].

* For installing and setting the SMTP (mail) server and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company).


Set the SMTP server

Set the SMTP server.

* This is the required setting item for mail notification.

1 Displaying the [Set SMTP server] screen

Click on [Set SMTP server] in the tree menu on the [Output] screen.

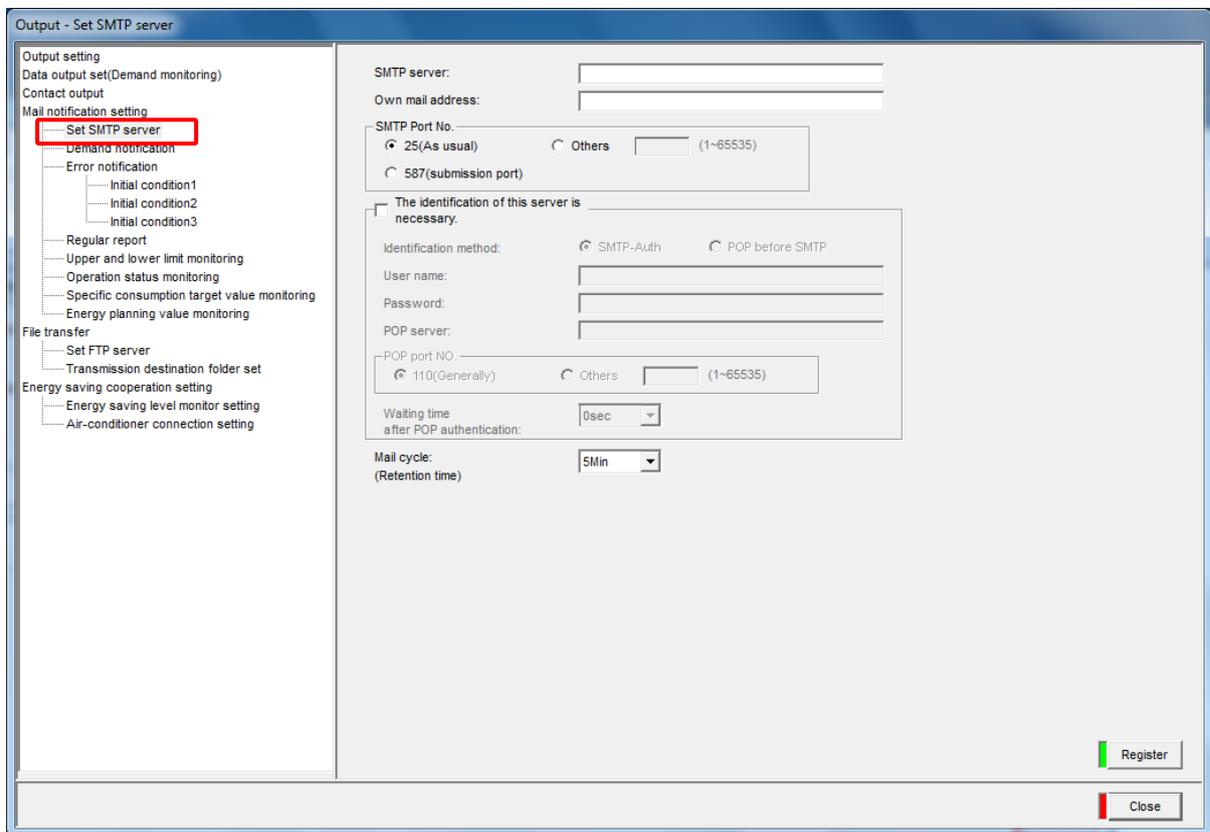

Remarks

- The mail transmission function supports SMTP sever (SMTP-Auth or POP before SMTP) requiring authorization.

2 Specifying the SMTP server

Input a domain name or IP address of the SMTP (mail) server from the keyboard.

- For inputting a domain name



SMTP server: smtp.yama.melco.co.jp

Characters Up to 50 characters
Prohibited characters The following characters cannot be registered:
¥ : , ; * ? " < > |

* Setting of the DNS server is required. (Refer to "4.8.2 Setting IP Address Setting DNS Server")

- For inputting an IP address



SMTP server: 192.168.10.20

Input range 0 to 255
Values prohibited to register 0.0.0.0, xxx.xxx.xxx.255 (xxx: any numerical value)

3 Inputting the own mail address

Input the own mail address (EcoWebServerIII) from the keyboard.

The mail address set here is the mail notification source address.



Own mail address: EcoServer3@yama.melco.co.jp

Characters Up to 50 characters
Prohibited characters The following characters cannot be registered:
¥ : , ; * ? " < > |

4 Specifying the port No.

Specify the port No. for accessing the SMTP (mail) server.



SMTP Port No.
 25(As usual) Others (1~65535)
 587(submission port)

Select from 25, 587 or "Others".

When "Others" is selected, enter the port No. The range is 1 to 65535(DEC).

5 Specifying the authorization method (When authorization method is SMTP-Auth)

Specify the authorization when accessing a SMPT (mail) server set to SMPT-Auth authorization method.



The identification of this server is necessary.

Identification method: SMTP-Auth POP before SMTP

User name:

Password:

POP server:

POP port NO. 110(Generally) Others (1~65535)

Waiting time after POP authentication: 0sec

Check [The identification of this server is necessary].

Select [SMTP-Auth] for authorization method.

Enter "Login ID" for SMTP server.
(Up to 16 characters)

Enter "Password" for SMTP server.
(Up to 16 characters)

6 Specifying the authorization method (When authorization method is POP before SMTP)

Specify the authorization when accessing a SMTP (mail) server set to POP before SMTP authorization method.

Check [The identification of this server is necessary].

Select [POP before SMTP] for authorization method.

Enter "Login ID" for SMTP server.
(Up to 16 characters)

Enter "Password" for SMTP server.
(Up to 16 characters)

Enter "Domain name" or "IP address" for POP server.

Select the port No. for accessing the POP server to 110 or "Others".

When "Others" is selected, enter the port No. The range is 1 to 65535(DEC).

Select the "Waiting time after POP authentication" from 0 to 15 seconds (1 second increments).

7 Selecting the mail transmission cycle (retention time)

Select the mail transmission cycle (retention time).

The notifications that occur during the retention time are held in the EcoWebServerIII until the next transmission cycle comes.

Selection range

[5 Min.], [10 Min.], [15 Min.], [30 Min.], [60 Min.]

Default value


[5 Min.]

- * The setting of mail transmission cycle (retention time) is effective only for the notifications of which check boxes [Suspend] in the [Enter demand notification] dialog box are checked. The notifications of which check boxes [Suspend] in the [Enter demand notification] dialog box are not checked are notified by mail to the SMTP server immediately after the notification conditions are established.

<About mail transmission cycle (retention time)>

The mail transmission timing varies as follows depending on the checked or unchecked status of the [Suspend] check box.

[Example] Set time: 10 min.

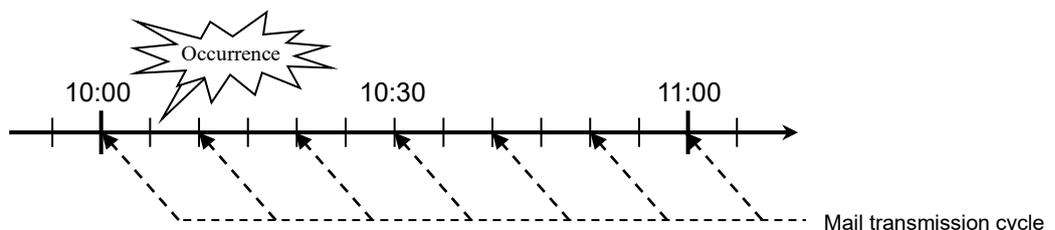


"The monitoring and notification conditions are established (error occurrence) between 10:00 and 10:10."

- * Notification without the checkmark on the [Suspend] check box → It is transmitted by mail immediately.
- * Notification with the checkmark on the [Suspend] check box → Its transmission is held until the next transmission cycle. (It is transmitted at 10:10.)

8 Registering

Click the button on the [Set SMTP server] dialog box to register.

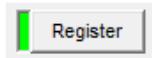


[Register] button : Register the SMTP server setting information as the set details.




[Close] button : Back to the project setting dialog box.

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details.
Reset the details so as to meet the conditions of each item.

(Example of display)

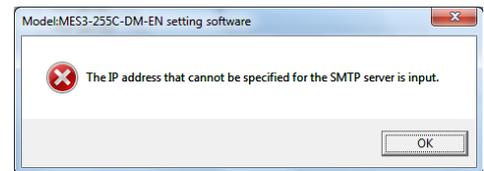

- *2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

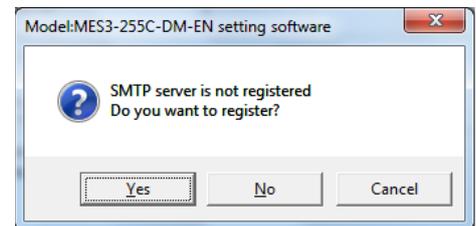

[Yes] button : To register

[No] button : Not to register

[Cancel] button : Back to [Set SMTP server] dialog box.

Remarks

- When designating the SMTP server by domain name, make sure to set up the DNS server.
(☞ Refer to 4.8.2 IP address settings, Configuring the DNS server.)
- * **For installing and setting the DNS server (name server) and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company).**

4.9.5. Demand notification (Only with models provided with demand control function)

This section describes the operations for [Demand notification].

When registered as a demand notification, a mail notice can be sent out when one of the following events occurs.

- Level 1 alarm occurrence, Level 1 alarm recovery
- Level 2 alarm occurrence, Level 2 alarm recovery
- Limit/fixed alarm occurrence, Limit/fixed alarm recovery
- Battery error (demand control unit) occurrence
- Demand time limit adjustment by external pulse occurrence, Demand time limit adjustment by external pulse recovery
- Demand control error occurrence


* The demand notification registration function is available only for the EcoWebServerIII with demand control function.

Checking the list of registered demand notifications

This section explains the procedures for displaying and confirming the list of registered demand notifications.

1 Displaying the [Demand notification] screen

Click the [Demand notification] in the tree menu on the [Output] screen.

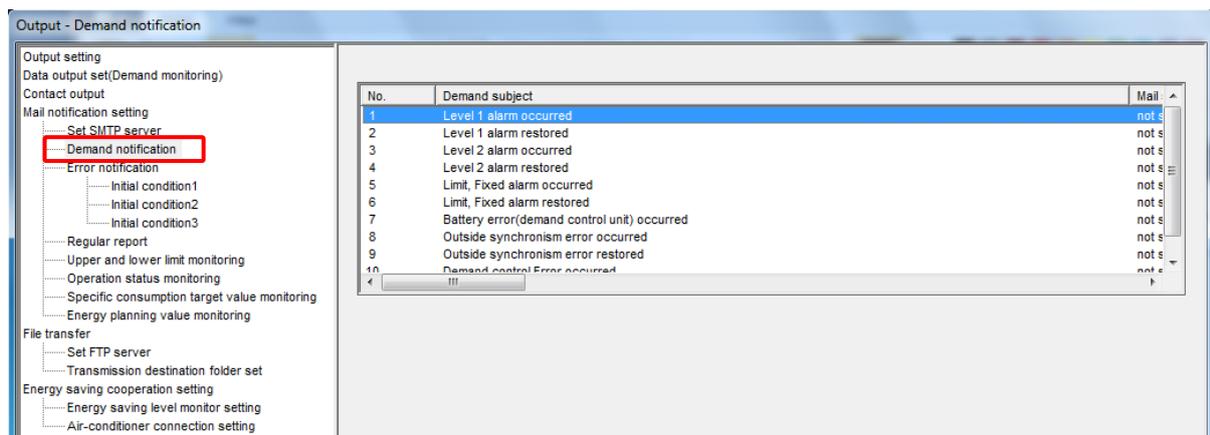

2 Checking the registration information

Check the following information displayed in the list.

- [No.] : Demand notification No.
- [Demand subject] : Name of notification item monitored by demand notification mail
- [Mail sending] : Active or inactive state of demand notification (by mail)
- [Suspend] : Active or inactive state of temporarily holding of mail transmission
- [Send To] : Destination address of demand notification mail
- [Subject] : Subject of demand notification mail
- [Body] : Text of demand notification mail

Registering the demand notification


This section describes the procedures for registering a demand notification (mail transmission).

1 Displaying the [Demand notification] screen

Click the [Demand notification] in the tree menu on the external device coordination setting screen.

2 Displaying the [Enter demand notification] screen

Double-click the line of the demand notification No. to be registered on the [Demand notification] screen or select the line of the demand notification No. to be registered, and click the [Edit] button.

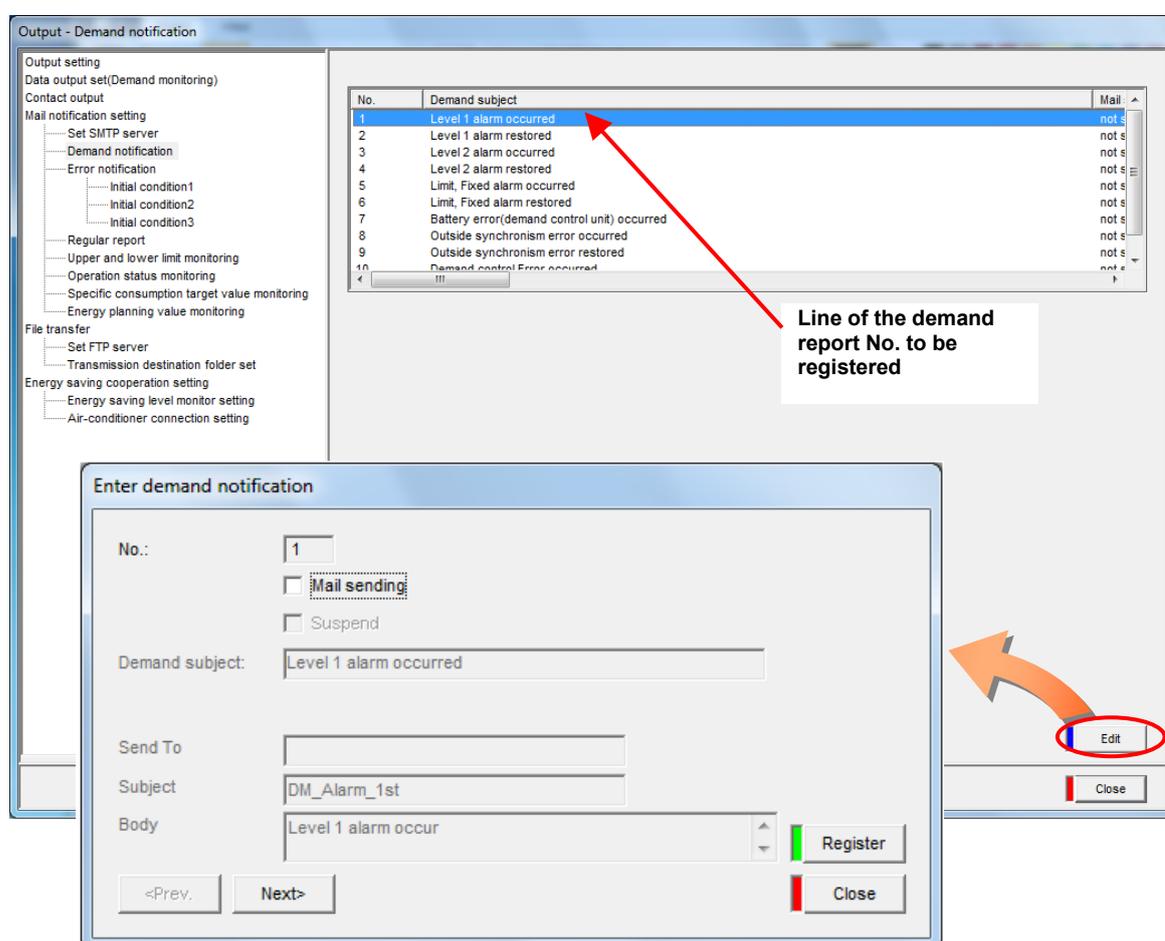

3 Setting the active/inactive status of notification

- (1) To send a demand notification mail, check [Mail sending].
- (2) To temporarily hold the mail, check [Suspend].

4 Setting the destination address, subject and text of the mail notification

Set these items only if checked the [Mail sending] check box. Input conditions are as follows.

[Send to]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	* Follows each notification item
	Characters	Up to 30 characters
[Body]	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
	Characters	Up to 128 characters

5 Registering

Click the button on the [Enter demand notification] dialog box to register.




[Register] button : Register the set demand notification information.

[Close] button : Back to the [Demand notification] dialog box.

*1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item.

(Example of display)

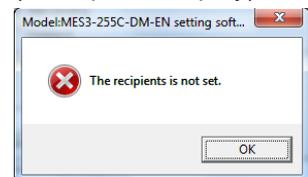


*2 After modification of entry details of each item, click the [< Prev.], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to [Enter demand notification] dialog box

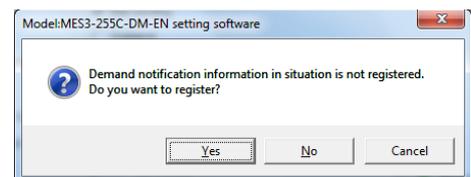


<For continuous registration of demand notification >

For continuous registration of demand notification, click the [< Back] button and [Next>] button and repeat the steps from 3 to 5.

To confirm, delete or change the previous registration of demand notification, click the [<Prev.] button.

To confirm, delete or change the next registration of demand notification, click the [Next>] button.

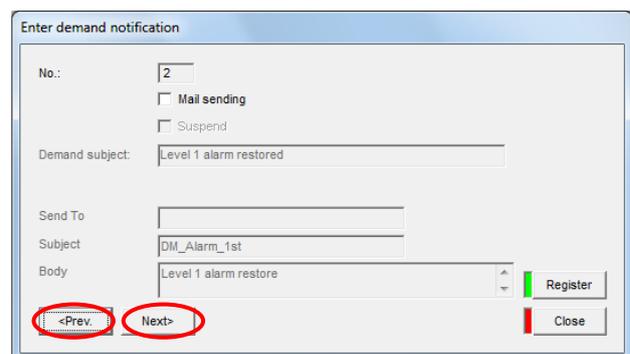

Editing the registered information of a registered demand notification


This section describes the procedures for editing the registered information of a demand notification.

1 Displaying the [Demand notification] screen

Click the [Demand notification] in the tree menu on the [Output] screen.

2 Selecting the demand notification to be edited, and clicking the [Edit] button

Double-click the line of the demand notification to be edited on the [Demand notification] screen or select the line of the demand notification to be edited, and click the [Edit] button.

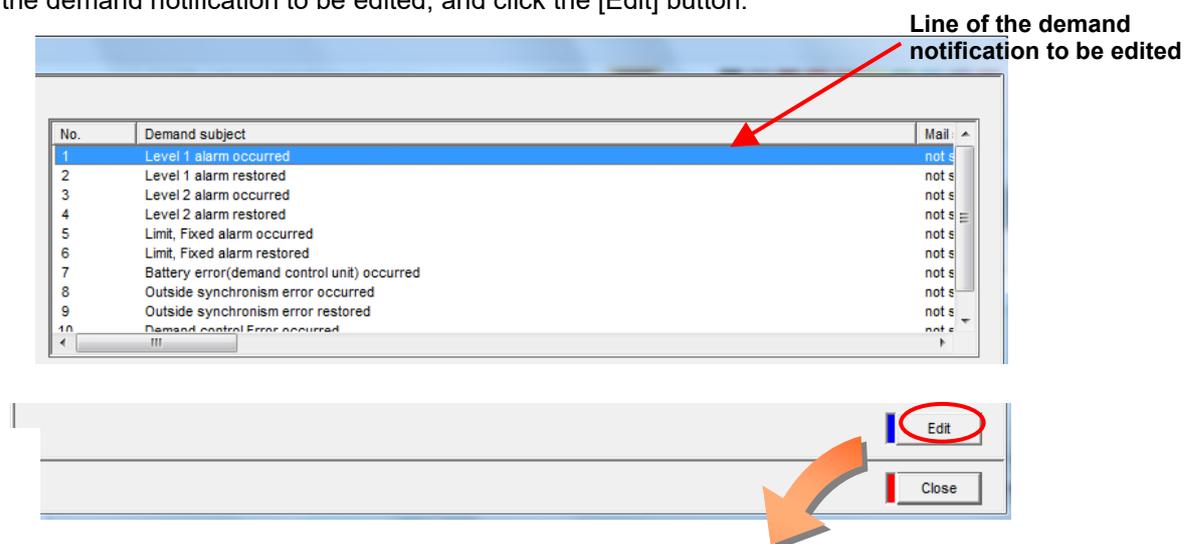

Enter demand notification

No.:

Mail sending
 Suspend

Demand subject:

Send To:

Subject:

Body:

<Prev. Next>

Register Close

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The entries and input conditions for each item are the same as registering a demand notification.

4.9.6. EcoWebServerIII error notification settings

This section describes the procedures for setting [Error notification (initial condition 1, 2, 3)].

Setting EcoWebServerIII error information to mail notification (initial conditions 1 to 3)

Perform the mail notification settings so as to transmit the notification at the startup of EcoWebServerIII and error occurrence.

The following table shows the information (initial conditions 1, 2 and 3) that can be set to the notification able errors.

Monitoring/notification items	Condition for occurrence	Setting for [Monitoring]	Setting for [Notification]
Initial condition 1			
Startup	At startup of EcoWebServerIII	_*	Refer to the procedure 2 (1-1).
Memory card error	When memory card data write failed.	_*	Refer to the procedure 2 (1-2).
Measuring error	When communication with the terminal failed.	Refer to the procedure 2 (3).	Refer to the procedure 2 (1-3).
Initial condition 2			
File transfer error	When file transmission to the FTP server failed.	_*	Refer to the procedure 2 (2-1).
Auto time adjustment error	When automatic time adjustment with the SNTP server failed.	_*	Refer to the procedure 2 (2-2).
Battery error	When the battery capacity of the EcoWebServerIII is lowered.	_*	Refer to the procedure 2 (2-3).
Initial condition 3			
Data output error	When data output to PLC/GOT device failed.	Refer to the procedure 2 (3-1).	Refer to the procedure 2 (3-1).

* **Startup, memory card error, file transfer error, auto time setting error and battery error are set to be monitored as the required monitoring items.**

Remarks

How different between "monitoring" and "notification"?
 Monitoring : Records the error in the system log when it occurs.
 Notification : Records the error in the system log when it occurs and notifications the error as the set details by mail.

Remarks

- Need to reset the EcoWebServerIII, in order to recover from [memory card error] and [auto time adjustment error].

1 Displaying the [Error notification] screen (initial conditions 1, 2, 3)

Click [Initial condition 1], [Initial condition 2] or [Initial condition 3] in the tree menu on the [Output] screen.

Output - Initial condition3

Output setting
Data output set(Demand monitoring)
Contact output
Mail notification setting
Set SMTP server
Demand notification
Error notification
Initial condition1
Initial condition2
Initial condition3
Regular report
Upper and lower limit monitoring
Operation status monitoring
Specific consumption target value monitoring
Energy planning value monitoring
File transfer
Set FTP server

Report mail for data output error

Monitor Mail sending Suspend

To: Subject: data output error

Body(occurring):

Body(recovering):

Frequency of error: Notified When the continual data output error occur over the setting times

Output - Initial condition2

Output setting
Data output set(Demand monitoring)
Contact output
Mail notification setting
Set SMTP server
Demand notification
Error notification
Initial condition1
Initial condition2
Initial condition3
Regular report
Upper and lower limit monitoring
Operation status monitoring
Specific consumption target value monitoring
Energy planning value monitoring
File transfer
Set FTP server
Transmission destination folder set
Energy saving cooperation setting
Energy saving level monitor setting
Air-conditioner connection setting

Report mail for file transfer error

Mail sending Suspend

To: Subject: file transfer error

Body:

Report mail for auto time adjustment error

Mail sending Suspend

To: Subject: auto time set error

Body:

Report mail for battery error

Mail sending Suspend

To: Subject: battery error

Body:

* Configuration file transfer error, the automatic time alignment error, battery error Regardless of the setting of the "presence notification", and (record to the system log) always monitoring.

Output - Initial condition1

Output setting
Data output set(Demand monitoring)
Contact output
Mail notification setting
Set SMTP server
Demand notification
Error notification
Initial condition1
Initial condition2
Initial condition3
Regular report
Upper and lower limit monitoring
Operation status monitoring
Specific consumption target value monitoring
Energy planning value monitoring
File transfer
Set FTP server
Transmission destination folder set
Energy saving cooperation setting
Energy saving level monitor setting
Air-conditioner connection setting

Report mail is started

Mail sending Suspend

To: Subject: start

Body:

Report mail for memory card error

Mail sending Suspend

To: Subject: memory card error

Body:

Report mail for measuring error

Monitor Mail sending Suspend

To: Subject: logging error

Body(occurring):

Body(recovering):

Number of errors: Measurement report when an error occurs continuously over the set

* Start-up and memory card error will always be monitoring and recording in system log.

Register Close

2 Inputting the information of each monitoring and report item

(1) Setting items on initial condition 1 screen

(1-1) Startup

- (1) To transmit the startup report mail, check the [Mail sending] check box of the [Report mail is started] area.
- (2) To hold the mail temporarily, check the [Suspend] check box.
- (3) Input the address, subject and body. Input conditions are as follows:

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	start
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Default	Model: MES3-255C-EN start.
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(1-2) Memory card error

- (1) To transmit the memory card error report mail, check the [Mail sending] check box of the [Report mail for memory card error] area.
- (2) To hold the mail temporarily, check the [Suspend] check box.
- (3) Input the address, subject and body. Input conditions are as follows:

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	memory card error
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Default	Memory card error
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(1-3) Measuring error

(1) Check the [Monitor] check box in the [Report mail for measuring error] area to monitor the measurement error only (i.e., record the system log only), and check the [Mail sending] check box in the [Report mail for measuring error] area to transmit the measurement error report mail.

* **When the [Mail sending] check box is checked, the checkmark is put on the [Monitor] check box automatically.**

(2) To hold the mail temporarily when [Mail sending] is selected, check the [Suspend] check box.

(3) Input the address, subject and body. Input conditions are as follows:

[Address]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	logging error
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body (occurrence)] [Body (recovery)]	Default	Occurrence : occurring measuring error Recovery : recovering measuring error
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(4) Select the number of measuring error occurrence times.
When the measurement errors occurred continuously by more than the set [Number of errors], monitoring and report are performed.

Selection range [1] to [18] times
Default value [6] times

(2) Setting items on initial condition 2 screen

(2-1) File transfer error

Report mail for file transfer error

Mail sending Suspend

To: Subject:

Body:

- (1) To transmit the file transfer error report mail, check the [Mail sending] check box of the [Report mail for file transfer error] area.
- (2) To hold the mail temporarily, check the [Suspend] check box.
- (3) Input the address, subject and body. Input conditions are as follows:

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	file transfer error
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Default	Occurrence of file transfer error
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(2-2) Auto time adjustment error

Report mail for auto time adjustment error

Mail sending Suspend

To: Subject:

Body:

- (1) To transmit the file auto time setting error report mail, check the [Mail sending] check box of the [Report mail for adjustment error of auto time] area.
- (2) To hold the mail temporarily, check the [Suspend] check box.
- (3) Input the address, subject and body. Input conditions are as follows:

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	auto time set error
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Default	Occurrence of auto time checking error
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(2-3) Battery error

Report mail for battery error

Mail sending Suspend

To: Subject:

Body:

- (1) To transmit the battery error report mail, check the [Mail sending] check box of the [Report mail for battery error] area.
- (2) To hold the mail temporarily, check the [Suspend] check box.
- (3) Input the address, subject and body. Input conditions are as follows:

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	battery error
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Default	Occurrence of battery error
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(3) Setting items on initial condition 3 screen

(3-1) Data output error

- (1) Check the [Monitor] check box in the [Report mail for data output error] area to monitor the data output error, and check the [Mail sending] check box in the [Report mail for data output error] area to transmit the data output error report mail.
 - * When the [Mail sending] check box is checked, the checkmark is put on the [Monitor] check box automatically.
- (2) To hold the mail temporarily, check the [Suspend] check box.
- (3) Input the address, subject and body. Input conditions are as follows:

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	data output error
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body (occurring)] [Body (recovering)]	Default	Occurrence: occurring data output error Recovery : recovering data output error
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

- (4) Select the number of data output error occurrence times.
When the data output errors occurred continuously by more than the set [Frequency of error], monitoring and report are performed.

Frequency of error:	3	Selection range	[1] to [3] times
	1	Default value	[3] times
	2		
	3		

3 Registering


Click the button in the dialog box of [Initial condition 1], [Initial condition 2] or [Initial condition 3] to register.



[Register] button : Register the error report settings as the set details.

[Close] button : Back to the project setting dialog box.

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. (Example of display)
Reset the details so as to meet the conditions of each item.

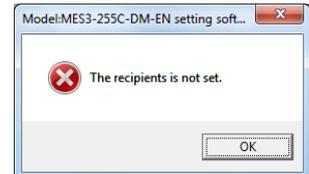


- *2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the setting dialog box

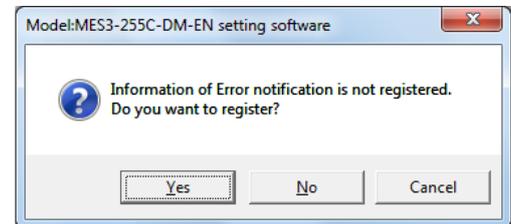

4.9.7. Regular report registration


This section explains the operation procedure in the [Regular report].
After registration of the regular report setting, it becomes possible to issue the mail report from EcoWebServerIII periodically.
Up to 8 points can be registered for regular report.

Confirming the list of registered regular report setting

This section explains the procedure to display the list of registered regular report setting and confirm it.

1 Displaying the [Regular report] dialog box

Click the [Regular report] in the tree menu on the [Output] screen.

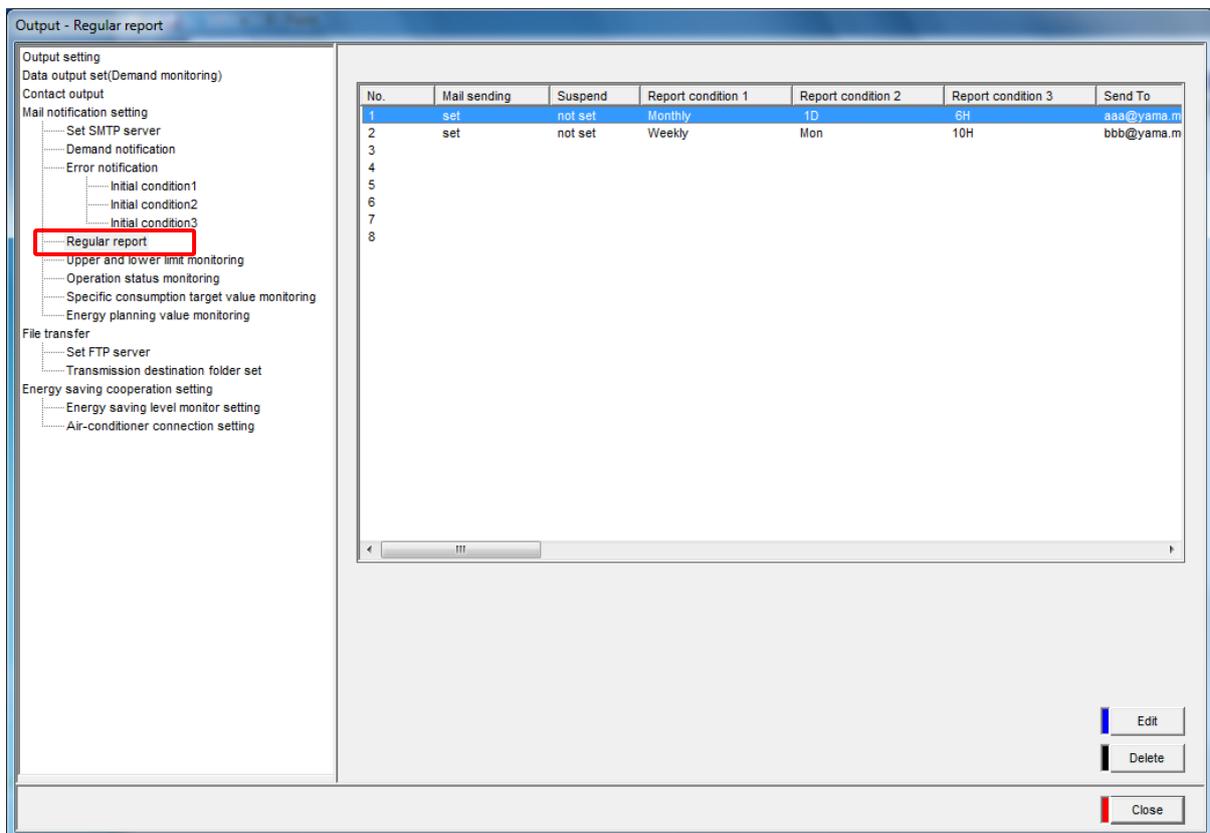

2 Checking the registration information

Check the following information displayed on the list.

[No.]	: Regular report No.
[Mail sending]	: Active or inactive status of regular report (by mail)
[Suspend]	: Active or inactive status of temporarily hold of mail transmission
[Report condition1] to [Report condtion 3]	: Regular report timing (monthly, weekly, daily, etc.)
[Send To]	: Destination address of regular report mail
[Subject]	: Mail subject of regular report mail
[Body]	: Text of regular report mail

Registering the new regular report settings


This section explains the procedure to register the new regular report (by mail) settings.

1 Displaying the [Regular report] screen

Click the [Regular report registration] in the tree menu on the external device coordination setting screen.

2 Displaying the [Registration of regular report] dialog box

Double-click the line of regular report No. to be registered in the dialog box of [Regular report], or select the line of regular report No. to be registered and click the [Edit] button.

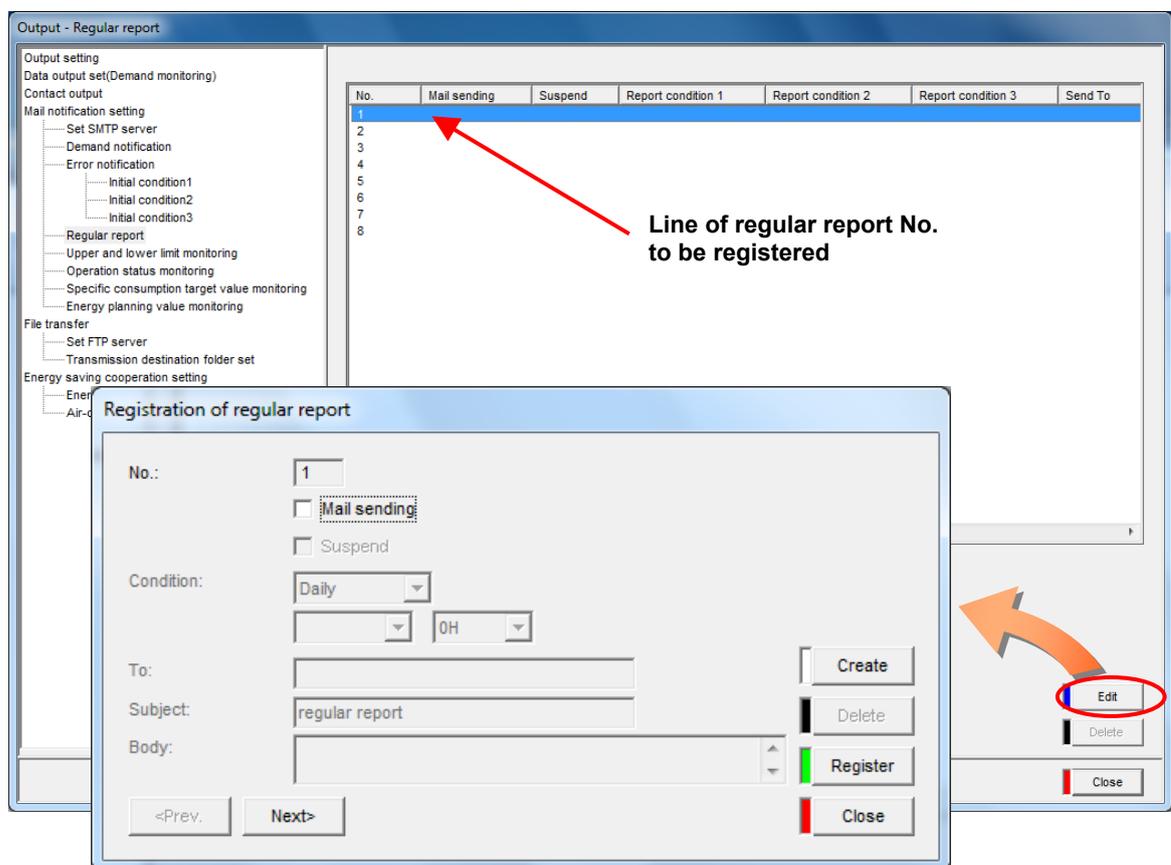

3 Setting the active/inactive status of report

- (1) To set the regular report mail to be active, check the [Mail sending] check box.
- (2) To hold the mail temporarily, check the [Suspend] check box.

4 Configuring report condition

Set the timing (date and time) to perform regular report.

- **For daily:** Select the time.

[Time]

Selection range [0H] to [23H]

Default value [0H]

- **For weekly:** Select a day of the week and the time.

[Day of the week]

Selection range [Sun] to [Sat]

Default value [Sun]

[Time]

Selection range [0H] to [23H]

Default value [0H]

- **For monthly:** Select a date and the time.

[Date]

Selection range [1D] to [28D]

Default value [1D]

[Time]

Selection range [0H] to [23H]

Default value [0H]


5 Setting the destination address, subject and text of the mail report

Set these items only if checked the [Mail sending] check box. Input conditions are as follows.


[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	regular report
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

6 Registering

Click the button in the [Registration of regular report] dialog box to register.

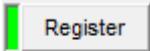


[Register] button : Register the set details of regular report.

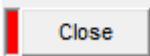

[Close] button : Back to the dialog box of [Regular report registration].

*1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details.
Reset the details so as to meet the conditions of each item.

(Example of display)

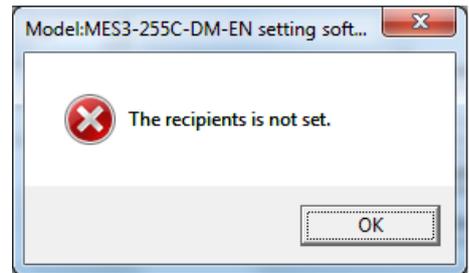

*2 After modification of entry details of each item, click the [Create],[< Prev.], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the [Regular report registration] dialog box




<For continuous registration of regular report settings>

For continuous registration of regular report settings, click the [Create] button and repeat the steps from 3 to 6.

To confirm, delete or change the previous registration of regular report settings, click the [<Back] button.

To confirm, delete or change the next registration of regular report settings, click the [Next>] button.

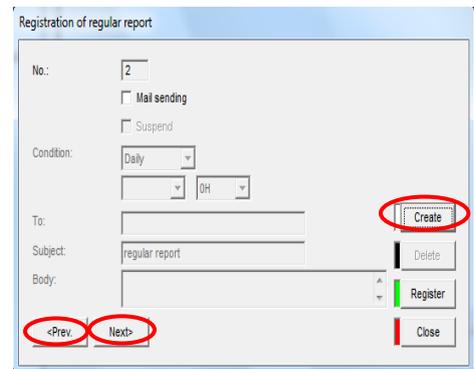

Deleting the registered regular report settings


This section explains the procedure to delete the registered regular report settings.

1 Displaying the [Regular report] screen

Click the [Regular report] in the tree menu on the [Output] screen.


2 Selecting the registered regular report settings to be deleted and clicking the [Delete]

Select the line of regular report to be deleted from the list in the [Regular report] dialog box, click the [Delete] button.

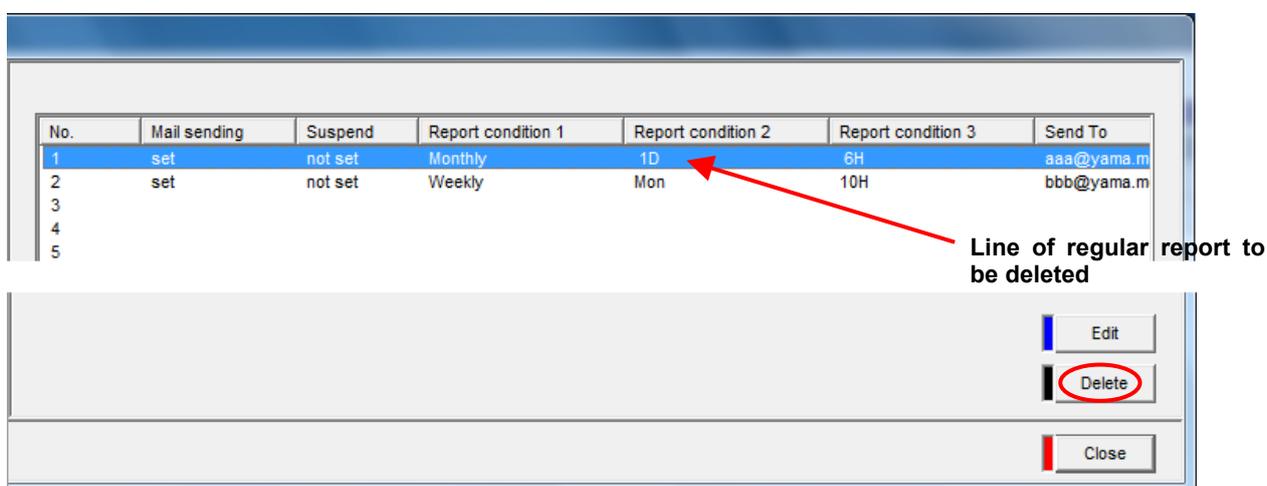

3 Deleting


The message confirming deletion is displayed. Click the [Yes] button to execute deletion.

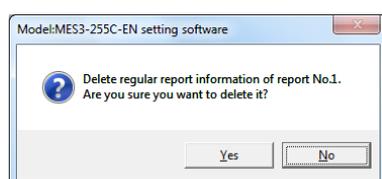

[Yes] button : Delete the regular report settings and back to the dialog box of [Regular report].

[No] button : Cancel deletion and back to the dialog box of [Regular report]

After deletion, the information of the deleted regular report settings is removed from the list in the dialog box of [Regular report].

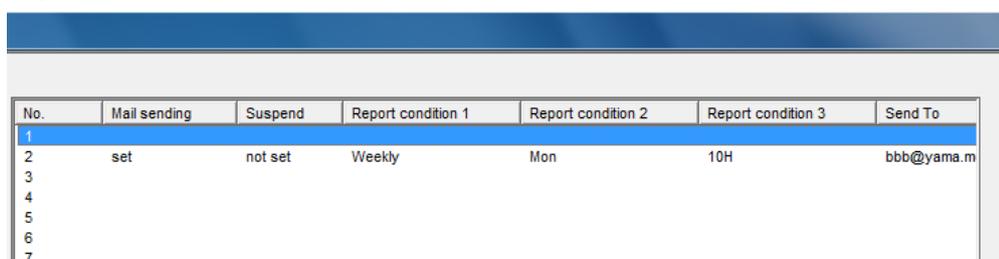

Remarks

- It can be also deleted by clicking the [Delete] button in the dialog box of [Regular report].

Editing the registered regular report settings


This section explains the procedure to edit the registered regular report settings.

1 Displaying the [Regular report] screen

Click the [Regular report] in the tree menu on the [Output] screen.


2 Selecting the regular report settings to be edited and clicking the [Edit] button

Double-click the line of the regular report to be edited on the [Regular report] screen or select the line of the regular report to be edited, and click the [Edit] button.

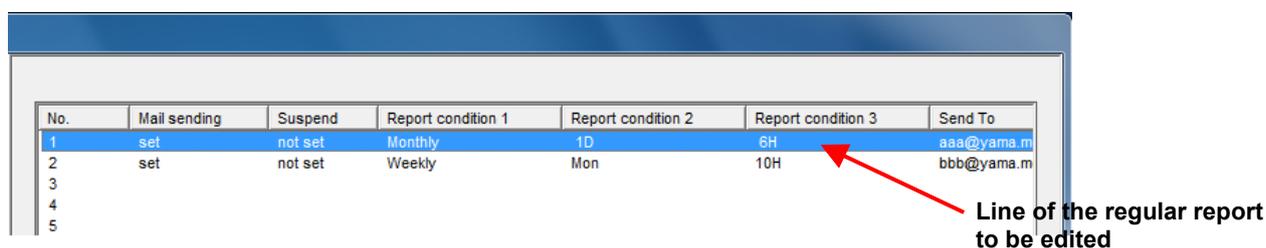

No.	Mail sending	Suspend	Report condition 1	Report condition 2	Report condition 3	Send To
1	set	not set	Monthly	1D	6H	aaa@yama.m
2	set	not set	Weekly	Mon	10H	bbb@yama.m
3						
4						
5						

Line of the regular report to be edited

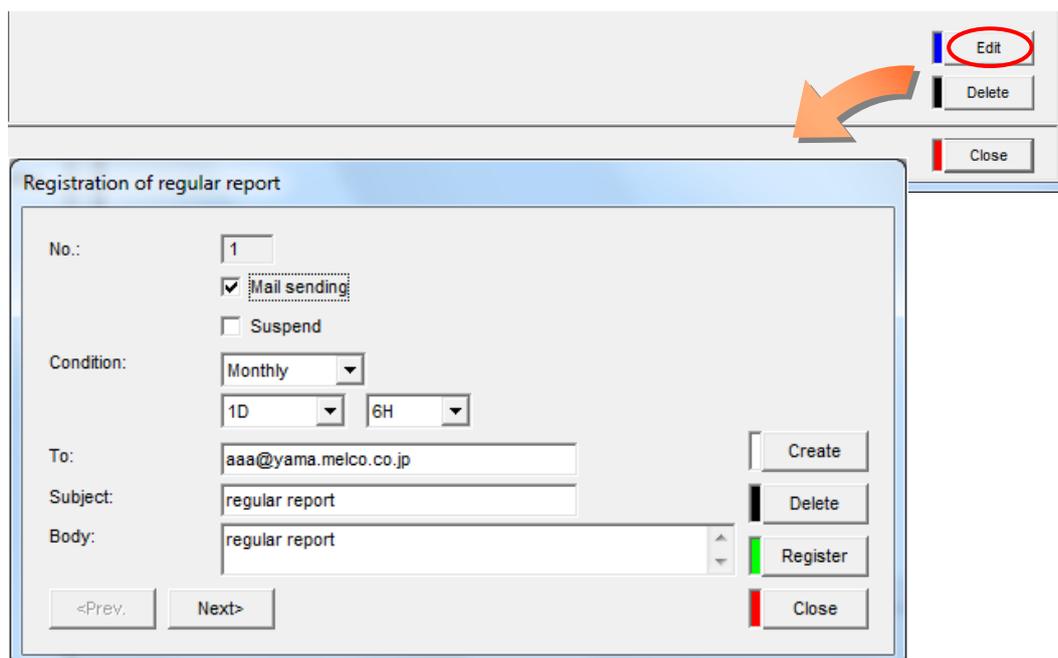

Registration of regular report

No.:

Mail sending

Suspend

Condition:

To:

Subject:

Body:

<Prev. Next>

Create Delete Register Close

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The input information and input conditions for each item are identical to those for new registration of the regular reports.

4.9.8. Upper and lower limit monitoring notification registration

This section explains the operation procedure for setting [Upper and lower limit monitoring]. After registration of the upper/lower limit monitoring notification, it becomes possible to detect an event that the measuring point value exceeds the upper or lower limit and to notification it by mail. Up to 32 points can be registered for upper/lower limit monitoring notification. However, the target notifications are the measuring points for instantaneous value only.

Remarks


- If no measuring point of instantaneous value data type is registered or the measuring point's monitoring type is "upper limit monitoring", "lower limit monitoring" or "upper/lower limit notification", the setting of upper and lower limit monitoring notification cannot be registered.
- The setting of upper and lower limit monitoring notification can be registered only to a single measuring point and multiple registration to a same single measuring point is not allowed. If intending to register multiple setting of upper and lower limit monitoring notification to a single measuring point, register the same measuring point to multiple separate measuring points and register the conditions of upper and lower limit monitoring notification.

Confirming the list of registered upper and lower limit monitoring notifications

This section explains the procedure for displaying and checking the list of registered upper and lower limit monitoring notifications.

1 Displaying the [Upper and lower limit monitoring] screen

Click on [Upper and lower limit monitoring] in the tree menu on the [Output] screen.

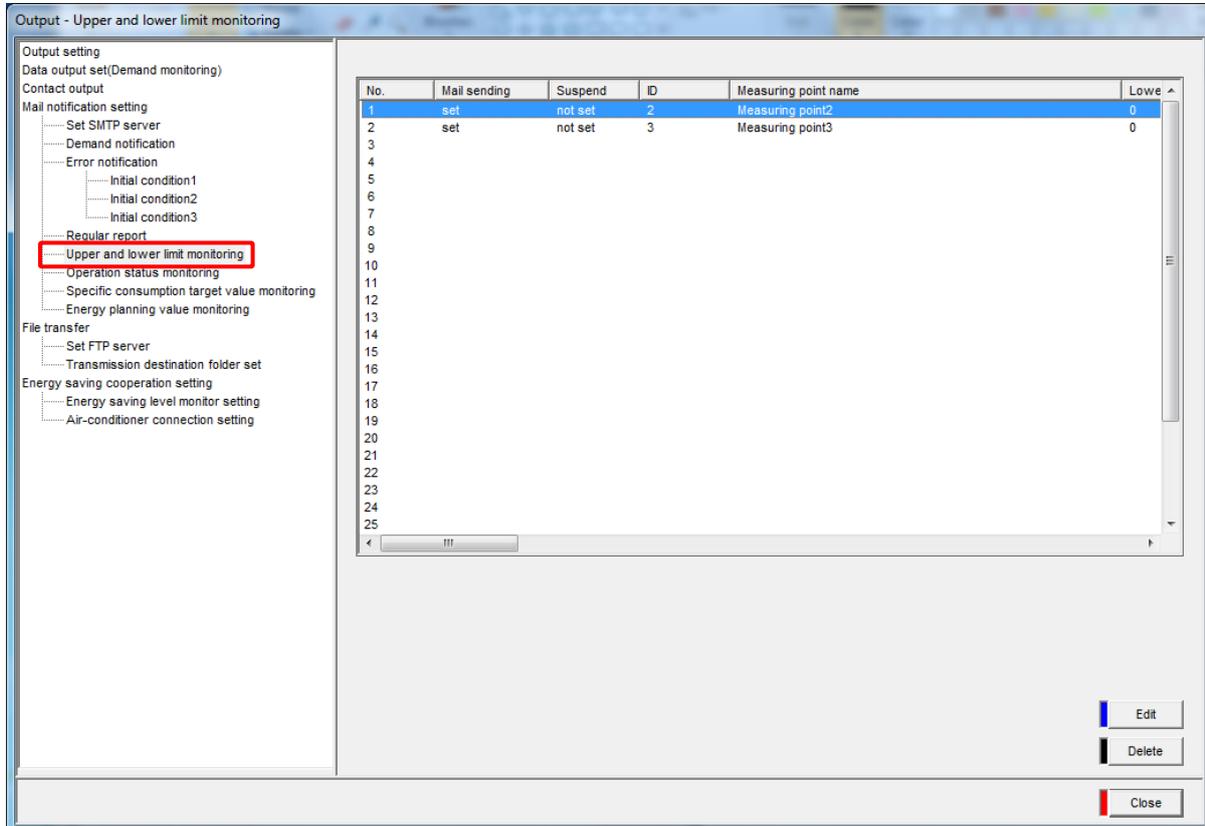

2 Checking the registration information

Check the following information displayed on the list.

[No.]	: Upper and lower limit monitoring notification No.
[Mail sending]	: Active or inactive status of upper and lower limit monitoring notification (by mail)
[Suspend]	: Active or inactive status of temporarily holding of mail transmission
[ID]	: Measuring point ID of upper and lower limit monitoring notification
[Measuring point name]	: Name of measuring point of upper and lower limit monitoring notification
[Lower limit monitoring]	: Target value for lower limit monitoring (* If this value is not set, "-" (hyphen) is displayed.)
[Upper limit monitoring]	: Target value for upper limit monitoring (* If this value is not set, "-" (hyphen) is displayed.)
[Send To]	: Destination address of upper and lower limit monitoring notification mail transmission
[Subject]	: Subject of upper and lower limit monitoring notification mail
[Body]	: Text of upper and lower limit monitoring notification mail

Registering a new upper and lower limit monitoring notification


This sections explains the procedure for registering a new upper and lower limit monitoring notification (mail transmission).

1 Displaying the [Upper and lower limit monitoring] screen

Click the [Upper and lower limit monitoring] in the tree menu on the [Output] screen.

2 Displaying the dialog box of [Upper and lower limit monitoring notification registration]

Double-click the line of upper and lower limit monitoring notification No. to be registered on the [Upper and lower limit monitoring] screen or select the line of the upper and lower limit monitoring notification No. to be registered, and click the [Edit] button.

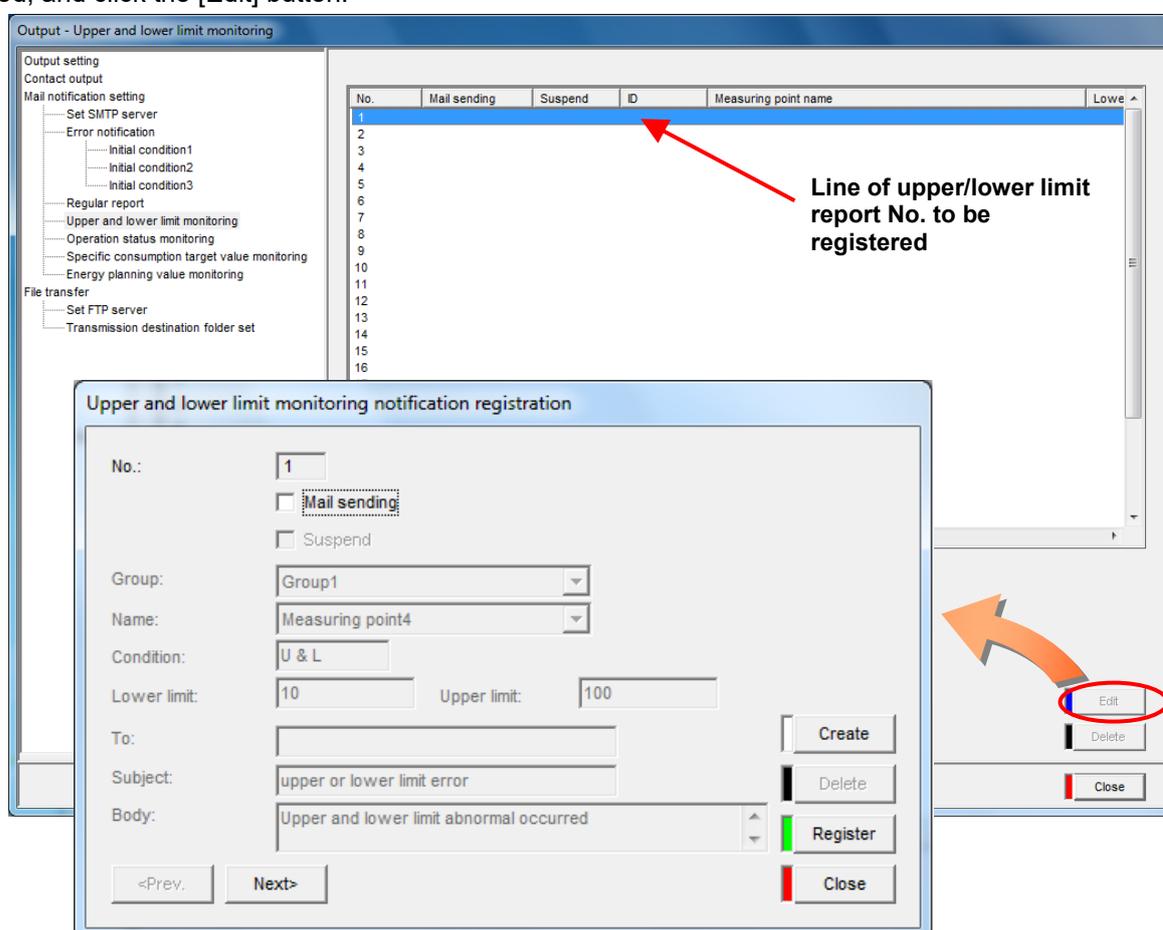

3 Setting the active/inactive status of notification

- (1) To send the upper and lower limit monitoring notification mail, check the [Mail sending].
- (2) To hold the mail temporarily when sending a mail, check the [Suspend] check box.

4 Specifying the measuring point to notification

Select the measuring points for upper and lower limit monitoring notification.

(1) Select [Group].

(2) Select the measuring points for upper and lower limit monitoring notification from the measuring points including in the group selected in (1).

* Only instantaneous value measuring points set to "upper limit monitoring", "lower limit monitoring" or "upper/lower limit monitoring" are displayed in the pull-down menu.

Remarks

- The information set for the selected measuring point is displayed in the monitoring conditions (upper limit monitoring, lower limit monitoring, upper/lower limit monitoring) and setting values (lower limit setting value, upper limit setting value).

5 Setting the destination address, subject and text of the mail notification

Set this information only when [Mail sending] is checked. The entry conditions are listed below.

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	Upper or lower limit error
	Characters	Up to 30 characters
[Body]	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
	Default	Upper or lower limit error occurred.
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

6 Registering

Click the button in the dialog box of [Upper and lower limit monitoring notification registration] to register.




[Register] button : Register the set details of upper and lower limit monitoring notification

[Close] button : Back to the [Upper and lower limit monitoring] screen.

*1 If the setting is not correct, clicking the [Register] button shows an error message according to the incorrect contents as shown on the right. Reset the details so as to meet the conditions of each item.

(Example of display)

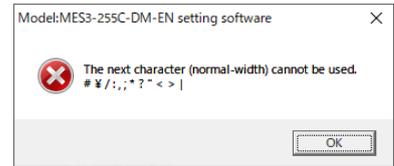


*2 After modification of entry details of each item, click the [Create], [< Back], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register

[Cancel] button : Back to the dialog box of [Registration of upper/lower limit monitoring settings]

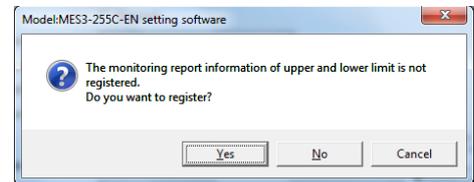


<For continuous registration of upper and lower limit monitoring notification>

For continuous registration of upper and lower limit monitoring notification, click the [Create] button and repeat the steps from 3 to 6.

To confirm, delete or change the previous registration of upper and lower limit monitoring notification, click the [<Prev.] button.

To confirm, delete or change the next registration of upper and lower limit monitoring notification, click the [Next>] button.

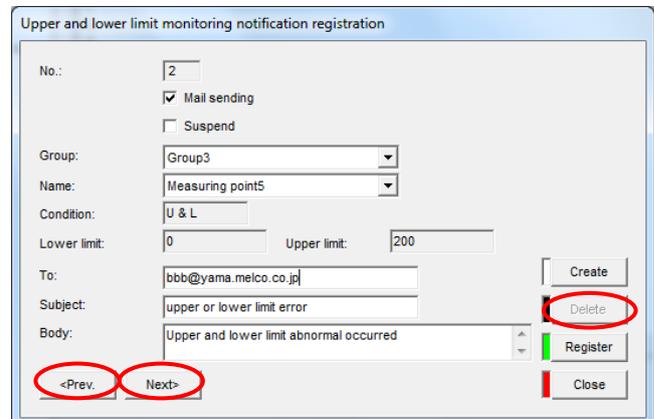

Deleting the registered upper and lower limit monitoring notification


This section explains the procedure for deleting the registered upper and lower limit monitoring notification.

1 Displaying the [Upper and lower limit monitoring] screen

Click the [Upper and lower limit monitoring notification registration] in the tree menu on the [Output] screen.


2 Selecting the upper/lower limit report to be deleted, and clicking the [Delete] button

Select the line of the upper and lower limit monitoring notification to be deleted from the [Upper and lower limit monitoring] screen, and click the [Delete] button.

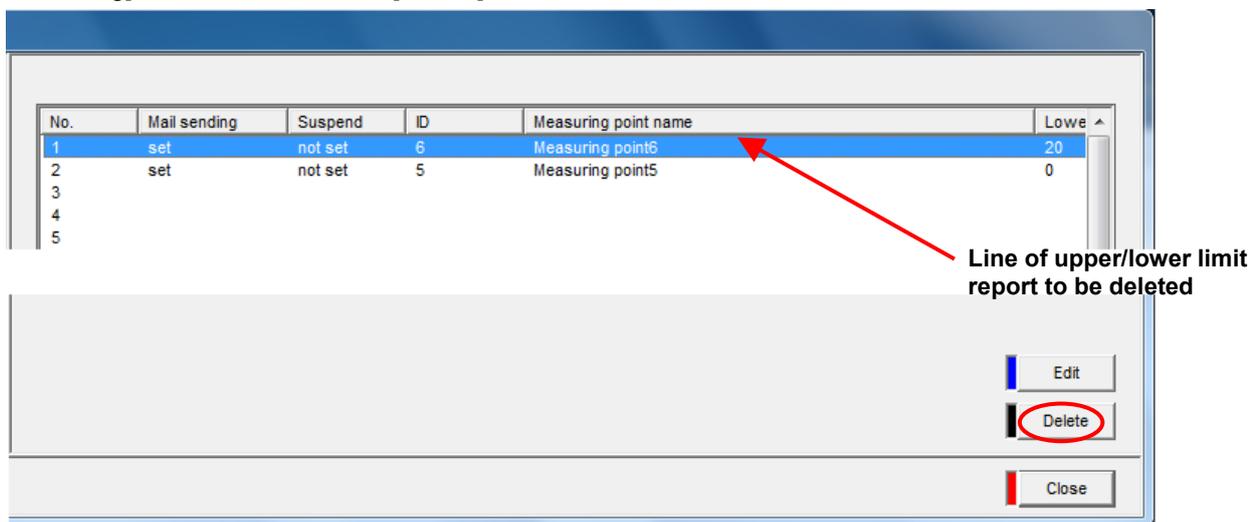

3 Deleting


The message confirming deletion is displayed. Click the button to execute deletion.

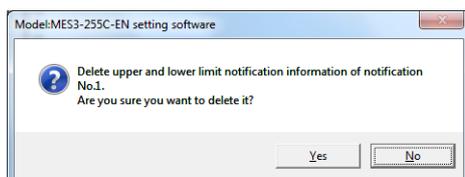

[Yes] button : Delete the upper and lower limit monitoring notification settings and back to the dialog box of [Upper and lower limit monitoring]

[No] button : Cancel the deletion, and back to the dialog box of [Upper and lower limit monitoring] screen

After deletion, the information of the deleted upper and lower limit monitoring notification is removed from the list in the dialog box of [Upper and lower limit monitoring].

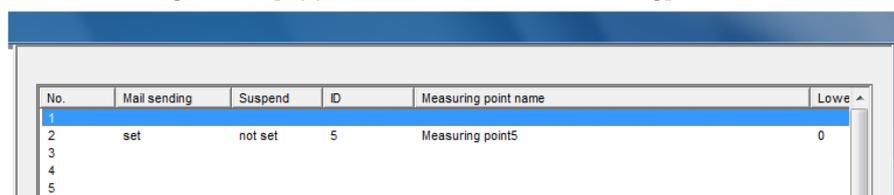

Remarks

- It can be also deleted by clicking the [Delete] button in the dialog box of [Upper and lower limit monitoring notification registration].

Editing the registered upper and lower limit monitoring notification


This section explains the procedure for editing the information registered for an upper and lower limit monitoring notification.

1 Displaying the [Upper and lower limit monitoring] screen

Click the [Upper and lower limit monitoring] in the tree menu on the [Output] screen.

2 Selecting the upper/lower limit notification to edit, and clicking the [Edit] button

Double-click the line of the upper and lower limit monitoring notification to be edited on the [Upper and lower limit monitoring] screen, or select the line of the upper and lower limit monitoring notification to be edited, and click the [Edit] button.

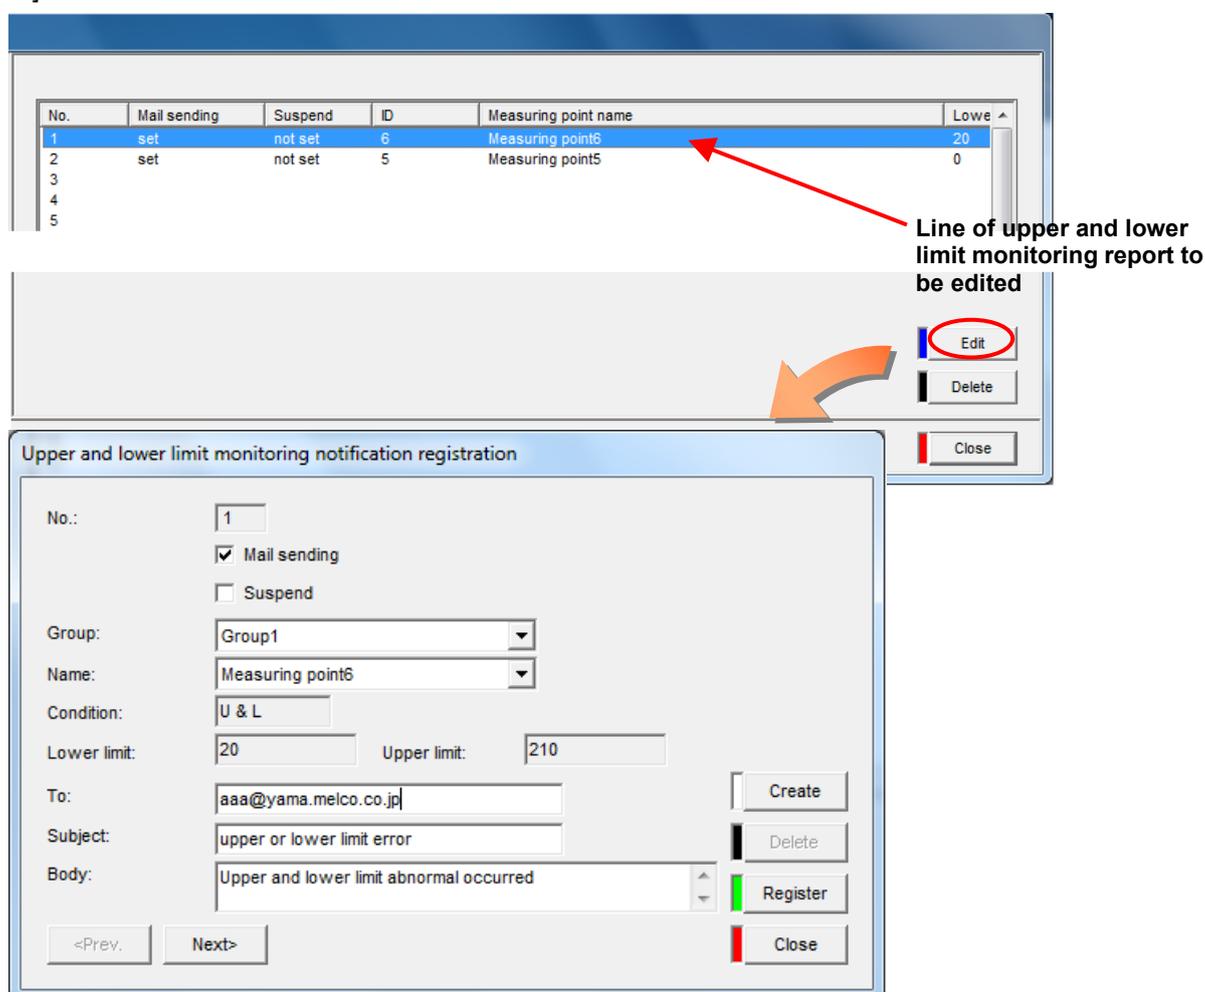

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The input information and input conditions for each item are identical to those for new registration of the upper and lower limit monitoring notification.

4.9.9. Operating status monitoring notification registration

This section explains the operation procedure in the [Operation status monitoring].

After registration of the operating status monitoring notification, it becomes possible to notification the change of operating status by mail.

Up to 32 points can be registered for operating status monitoring notification.

However, the target points are the measuring points for operating status monitoring only.

Remarks

- If no measuring point of operating status monitoring data type is registered, the settings of operating status monitoring notification cannot be registered.
- The settings of operating status monitoring notification can be registered only to a single measuring point and multiple registration to a same single measuring point is not allowed.
If intending to register multiple settings of operating status monitoring notification to a single measuring point, register the same measuring point to multiple separate measuring points and register the conditions of operating status monitoring notification.

Confirming the list of registered operating status monitoring notifications

This section explains the procedure for displaying and confirming the list of registered operating status monitoring notifications.

1 Displaying the [Operation status monitoring] screen

Click the [Operation status monitoring] in the tree menu on the [Output] screen.

No.	Mail sending	Suspend	ID	Measuring point name	Monitor
1	set	not set	12	Measuring point12	ON
2	set	not set	13	Measuring point13	OFF
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					

2 Checking the registration information

Check the following information displayed on the list

[No.]	: Operating status monitoring notification No.
[Mail sending]	: Active or inactive status of operating status monitoring notification (by mail)
[Suspend]	: Active or inactive status of temporarily holding of mail transmission
[ID]	: Measuring point ID of operating status monitoring notification
[Measuring point name]	: Measuring point name of operating status monitoring notification
[Monitoring conditions]	: Operating status monitoring notification conditions (ON, OFF, or ON/OFF)
[Send To]	: Destination address of operating status monitoring notification mail
[Subject]	: Subject of operating status monitoring notification mail
[Body]	: Text of operating status monitoring notification mail

Registering a new operating status monitoring notification


This section explains the procedure for registering a new operating status monitoring notification (by mail).

1 Displaying the [Operation status monitoring] screen

Click the [Operation status monitoring] in the tree menu on the external device coordination setting screen.

2 Displaying the dialog box of [Registration of operating status monitoring notification]

Double-click the line of the operating status monitoring notification No. to be registered on the [Operation status monitoring] screen or select the line of the operating status monitoring notification No. to be registered, and click the [Edit] button.

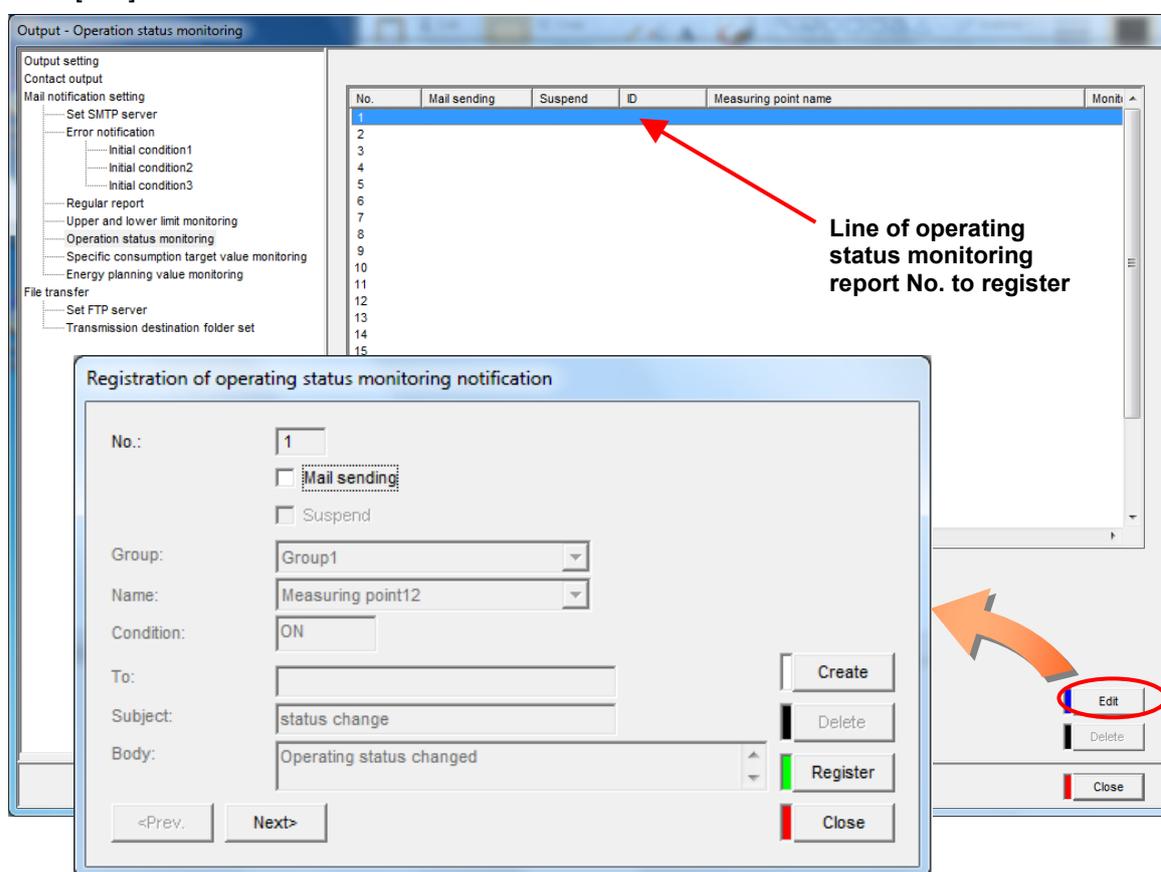

3 Setting the active/inactive status of notification

(1) To send the operating status monitoring notification mail, check the [Mail sending].

* **The operating status monitoring results are not recorded in the system log. If intending to record the monitoring data in the operating status monitoring data file, set it from the dialog box of [Measuring point].**

(☞ Refer to 4.5.4 Measuring point registration, Registering a new measuring point.)

(2) To hold the mail temporarily, check the [Suspend] check box.

4 Specifying the measuring point to notification

Select the measuring points for operating status monitoring notification.

(1) Select [Group].

(2) Select the measuring points for operating status notification from the measuring points including in the group selected in (1).

* Only the measuring points for operating status monitoring are displayed in the pull-down menu.

Remarks

- The conditions set for the selected measuring point are displayed in the monitoring conditions.

ON : Notification is issued when the digital input signal changes from OFF to ON.

OFF : Notification is issued when the digital input signal changes from ON to OFF.

ON/OFF : Notification is issued when the digital input signal changes from OFF to ON and ON to OFF.

5 Setting the destination address, subject and text of the mail notification

Set this information only when [Mail sending] is checked. The entry conditions are listed below.

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	Status change
	Characters	Up to 30 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Body]	Default	Operating status change occurred.
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

6 Registering

Click the button in the dialog box of [Registration of operating status monitoring notification] to register.




[Register] button : Register the set details of operating status monitoring notification

[Close] button : Back to the [Operation status monitoring] screen.

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details.
Reset the details so as to meet the conditions of each item.

(Example of display)

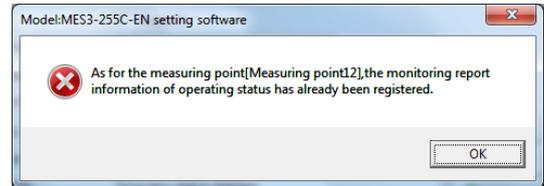

- *2 After modification of entry details of each item, click the [Create] [< Back], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register

[Cancel] button : Back to the dialog box of [Registration of operating status monitoring notification]




<For continuous registration of operating status monitoring notification >

For continuous registration of operating status monitoring notification, click the [Create] button and repeat the steps from 3 to 6.

To confirm, delete or change the previous registration of operating status monitoring notification, click the [<Prev.] button.

To confirm, delete or change the next registration of operating status monitoring notification, click the [Next>] button.

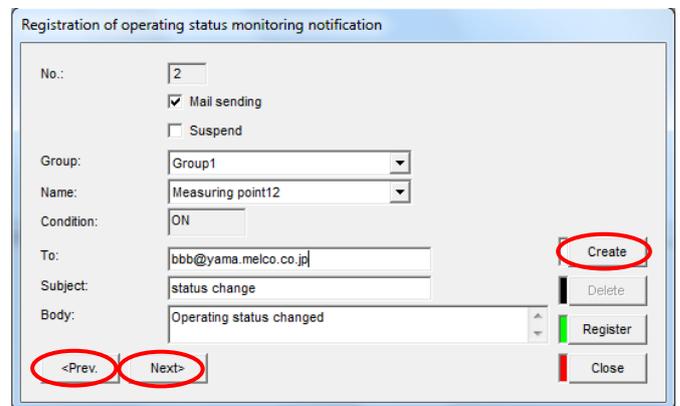

Deleting the registered operating status monitoring notification


This section explains the procedure for deleting a registered operating status monitoring notification.

1 Displaying the [Operation status monitoring] screen

Click the [Operation status monitoring] in the tree menu on the [Output] screen.


2 Selecting the operating status notification to be deleted, and clicking the [Delete] button

Select the line of the operating status monitoring notification to be deleted from the [Operation status monitoring] screen, and click the [Delete] button.

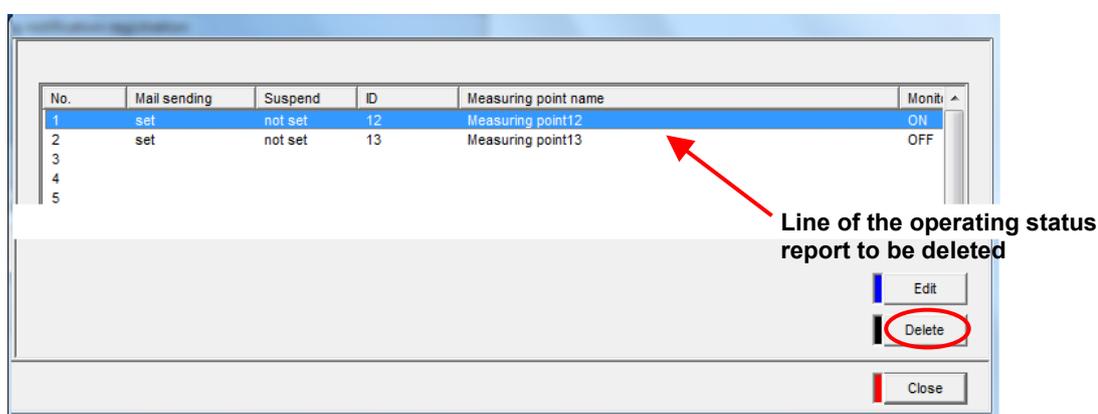

3 Deleting


The message confirming deletion is displayed. Click the button to execute deletion.

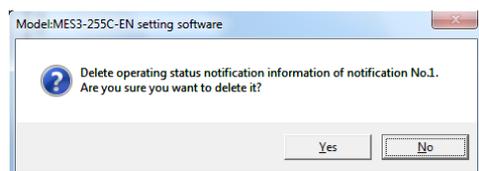

[Yes] button : Delete the operating status monitoring notification and back to the [Operation status monitoring] screen.

[No] button : Cancel the deletion, and back to the [Operation status monitoring] screen

After deletion, the information of the deleted operating status monitoring notification is removed from the list in the dialog box of [Operation status monitoring].

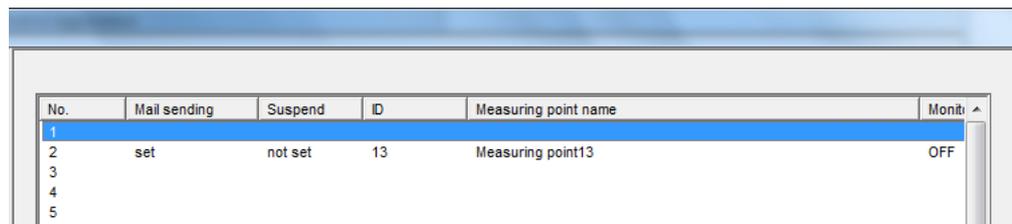

Remarks

- It can be also deleted by clicking the [Delete] button in the dialog box of [Registration of operating status monitoring notification].

Editing the registered operating status monitoring notification


This section explains the procedure for editing the registered operating status monitoring notification.

1 Displaying the [Operation status monitoring] screen

Click the [Operation status monitoring] in the tree menu on the [Output] screen.

2 Selecting the operating status notification to be edited, and clicking the [Edit] button

Double-click the line of the operating status notification to be edited in the list on the [Operation status monitoring] screen, or select the line of the operating status monitoring notification to be edited and click the [Edit] button.

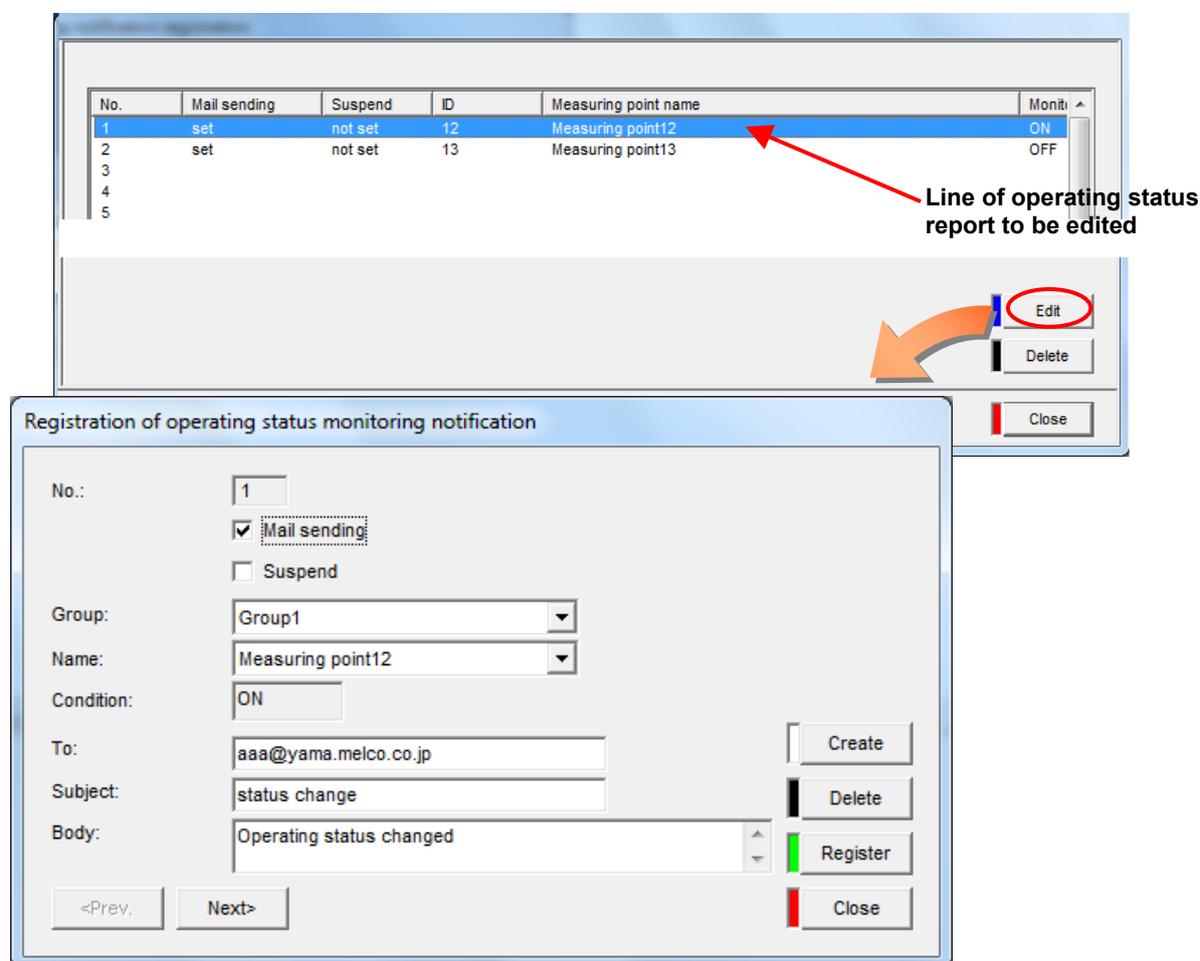

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The input information and input conditions for each item are identical to those for new registration of the operating status monitoring notification.

4.9.10. Specific consumption target value monitoring notification registration

This section explains the operation procedure in the [Specific consumption target value monitoring]. After registration of the specific consumption target value monitoring report, it becomes possible to detect an event that the specific consumption measuring point value exceeds the target value and to report it by mail. Up to 64 points can be registered for specific consumption target value monitoring notification.

Remarks


- The monitoring cycle is one hour.
- If no specific consumption measuring point is registered or if the specific consumption measuring point's is not set for specific consumption target value monitoring, the setting of specific consumption target value monitoring notification cannot be registered.
- The settings of specific consumption target value monitoring notification can be registered only to a single measuring point and multiple registration to a same single measuring point is not allowed.
- **Set the target value from the Web screen of the EcoWebServerIII.**
(☞ Refer to "Setting of Planned/Target values" in Instruction Manual – Operation.)

Confirming the list of registered specific consumption target value notifications

This section explains the procedure for displaying and checking the list of registered specific consumption target value monitoring notifications.

1 Displaying the [Specific consumption target value monitoring] screen

Click the [Specific consumption target value monitoring] in the tree menu on the [Output] screen.

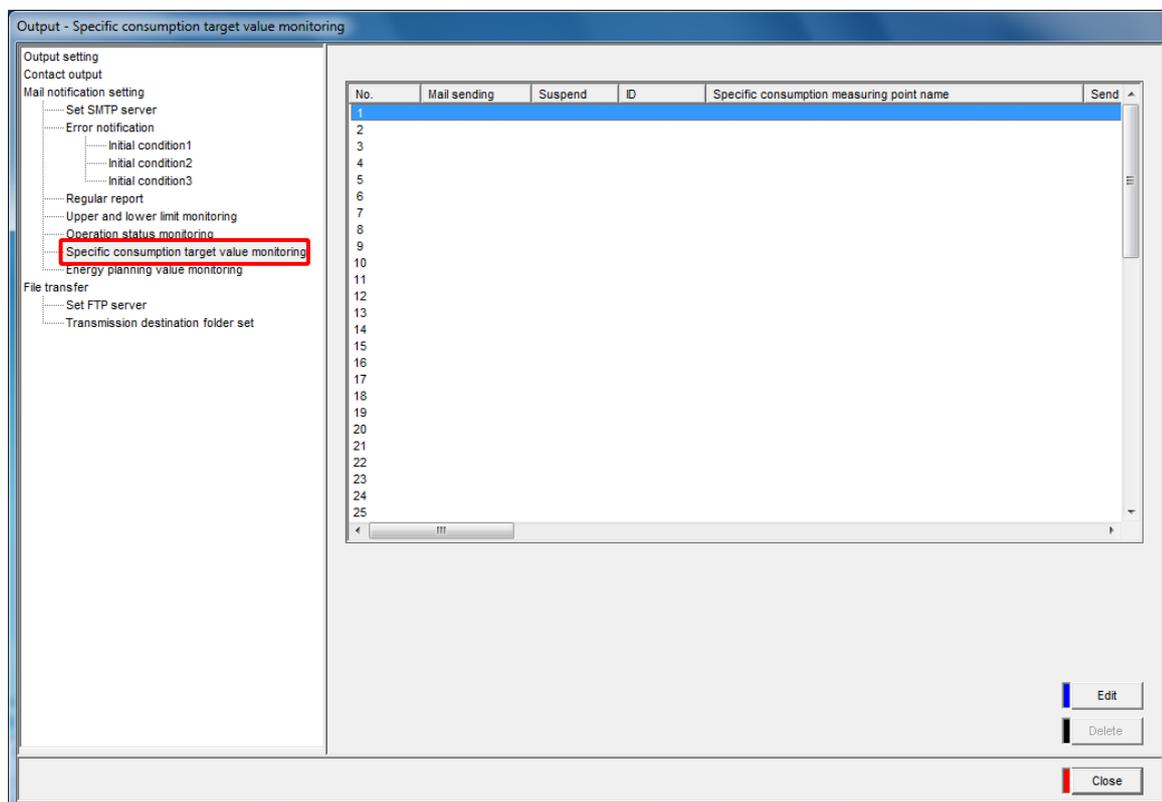

2 Checking the registration information

Check the following information displayed in the [Terminal list].

[No.]	: Specific consumption target value monitoring notification No.
[Mail sending]	: Active or inactive status of specific consumption target value monitoring notification (by mail)
[Suspend]	: Active or inactive status of temporarily holding of mail transmission
[ID]	: Specific consumption measuring point ID of specific consumption target value monitoring notification
[Specific consumption measuring point name]	: Name of specific consumption measuring point of specific consumption target value monitoring notification
[Send To]	: Destination address of specific consumption target value monitoring notification mail
[Subject]	: Subject of specific consumption target value monitoring notification mail
[Body]	: Text of specific consumption target value monitoring notification mail

Registering a new specific consumption target value monitoring notification


This section explains the procedure for registering a new specific consumption target value monitoring notification (by mail).

1 Displaying the [Specific consumption target value monitoring] screen

Click the [Specific consumption target value monitoring] in the tree menu on [Output] screen.

2 Displaying the dialog box of [Registration of specific consumption target value monitoring notification]

Double-click the line of the specific consumption target value monitoring notification No. to be registered on the [Specific consumption target value monitoring] screen or select the line of the specific consumption target value monitoring notification No. to be registered, and click the [Edit] button.

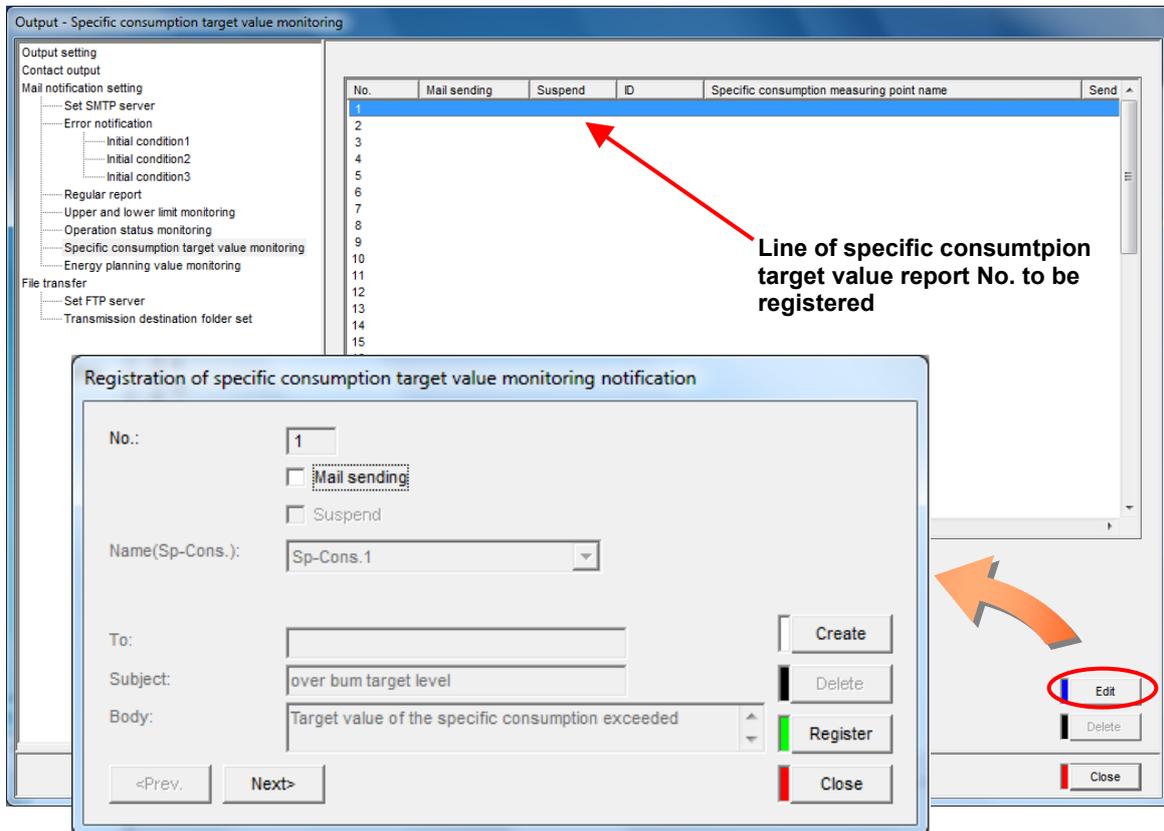


3 Setting the active/inactive status of notification

- (1) To send the specific consumption target value monitoring notification mail, check the [Mail sending].
- (2) To hold the mail temporarily when sending a mail, check the [Suspend] check box.

4 Specifying the specific consumption measuring point to notification

Select the specific consumption measuring point to monitor the specific consumption target value.

- * Only the specific consumption measuring points for specific consumption target value monitoring are displayed in the pull-down menu.

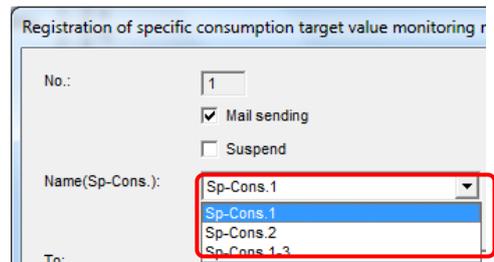

5 Setting the destination address, subject and text of the mail notification

Set this information only when [Mail sending] is checked. The entry conditions are listed below.

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	Over bum target level
	Characters	Up to 30 characters
[Body]	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
	Default	Specific consumption target value is exceeded.
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

6 Registering


Click the button in the dialog box of [Registration of specific consumption target value monitoring notification] to register.



[Register] button : Register the set details of specific consumption target value monitoring notification.

[Close] button : Back to the [Specific consumption target value monitoring] screen.

*1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item. (Example of display)

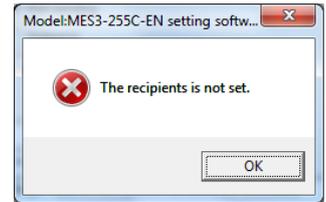


*2 After modification of entry details of each item, click the [Create],[< Prev.], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register


[Cancel] button : Back to the dialog box of [Specific consumption target value monitoring]

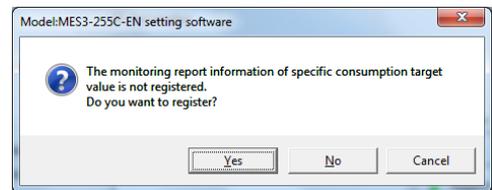

<For continuous registration of specific consumption target value monitoring notification >

For continuous registration of specific consumption target value monitoring notification, click the [Create] button and repeat the steps from 3 to 6.

To confirm, delete or change the previous registration of specific consumption target value monitoring notification, click the [<Prev.] button. To confirm, delete or change the next registration of specific consumption target value notification, click the [Next>] button.

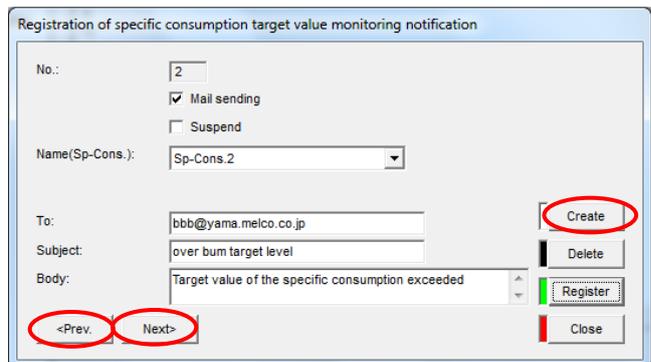

Deleting the registered specific consumption target value monitoring notification


This section explains the procedure to delete the registered specific consumption target value monitoring notification.

1 Displaying the [Specific consumption target value monitoring] screen

Click the [Specific consumption target value monitoring] in the tree menu on the [Output] screen.


2 Selecting the specific consumption target value notification to be deleted, and clicking the [Delete] button

Select the line of the specific consumption target value monitoring notification to be deleted from the list on the [Specific consumption target value monitoring] screen, and click the [Delete] button.

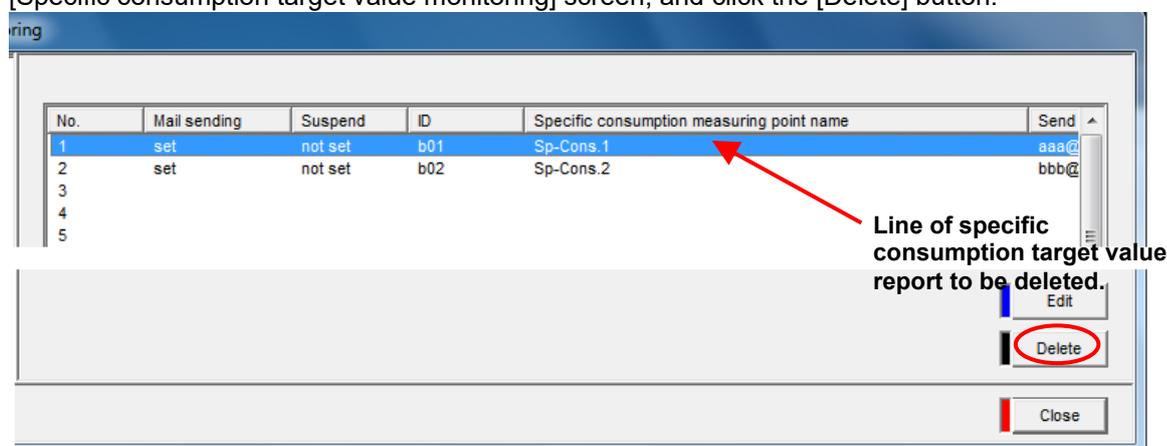

3 Deleting


The message confirming deletion is displayed. Click the button to execute deletion.

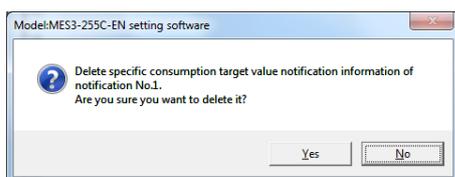

[Yes] button : Delete the specific consumption target value notification and back to the [Specific consumption target value monitoring] screen.

[No] button : Cancel the deletion, and back to the [Specific consumption target value monitoring] screen.

After deletion, the information of the deleted specific consumption target value monitoring notification is removed from the list in the dialog box of [Specific consumption target value monitoring].

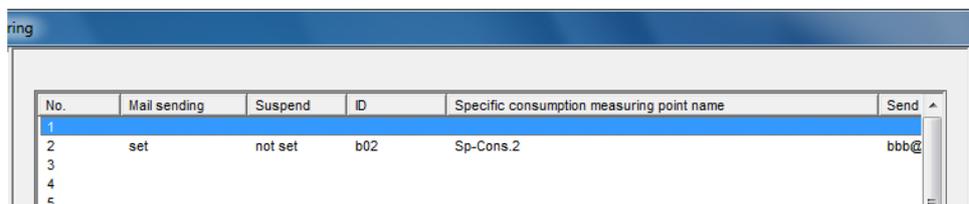

Remarks

- It can be also deleted by clicking the [Delete] button in the dialog box of [Registration of specific consumption target value monitoring notification].

Editing the registered specific consumption target value monitoring notification

This section explains the procedure to edit the registered specific consumption target value monitoring notification.

1 Displaying the [Specific consumption target value monitoring] screen

Click the [Specific consumption target value monitoring] in the tree menu on the external device coordination setting screen.

2 Selecting the specific consumption target value notification to be edited, and clicking the [Edit] button

Double-click the line of the specific consumption target value monitoring notification to be edited in the list on the [Specific consumption target value monitoring] screen, or select the line of the specific consumption target value monitoring notification to be edited, and click the [Edit] button.

No.	Mail sending	Suspend	ID	Specific consumption measuring point name	Send
1	set	not set	b01	Sp-Cons. 1	aaa@
2	set	not set	b02	Sp-Cons. 2	bbb@
3					
4					
5					

Line of specific consumption target value report to be edited

Registration of specific consumption target value monitoring notification

No.: 1

Mail sending

Suspend

Name(Sp-Cons.): Sp-Cons. 1

To: aaa@yama.melco.co.jp

Subject: over bum target level

Body: Target value of the specific consumption exceeded

<Prev. Next>

Create Delete Register Close

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The input information and input conditions for each item are identical to those for new registration of the specific consumption target value monitoring notification.

4.9.11. Energy planning value monitoring notification registration

This section explains the operation procedure in the [Energy planning value monitoring]. After registration of the energy plan value monitoring notification, a mail notice can be sent when the measuring point's monthly integrated value exceeds the daily integrated value of the month's planned value. Up to 255 points can be registered for energy plan value monitoring notification.

However, the target points are the measuring points for integrated value only.

Remarks


- The monitoring cycle is one day.
- If no measuring point of integrated value data type is registered, or if the measuring point's is not set for energy plan value monitoring, the energy plan value monitoring notification cannot be registered.
- Each measuring point can have only one registration of the energy plan value monitoring notification.
- **Set the plan value from the Web screen of the EcoWebServerIII.**
(☞ Refer to "Chapter 8 Setting of Planned/Target values" in Instruction Manual – Operation.)

Confirming the list of registered energy planning value notifications

This section explains the procedure for displaying and checking the list of registered energy plan value monitoring notifications.

1 Displaying the [Energy planning value monitoring] screen

Click the [Energy planning value monitoring] in the tree menu on the [Output] screen.

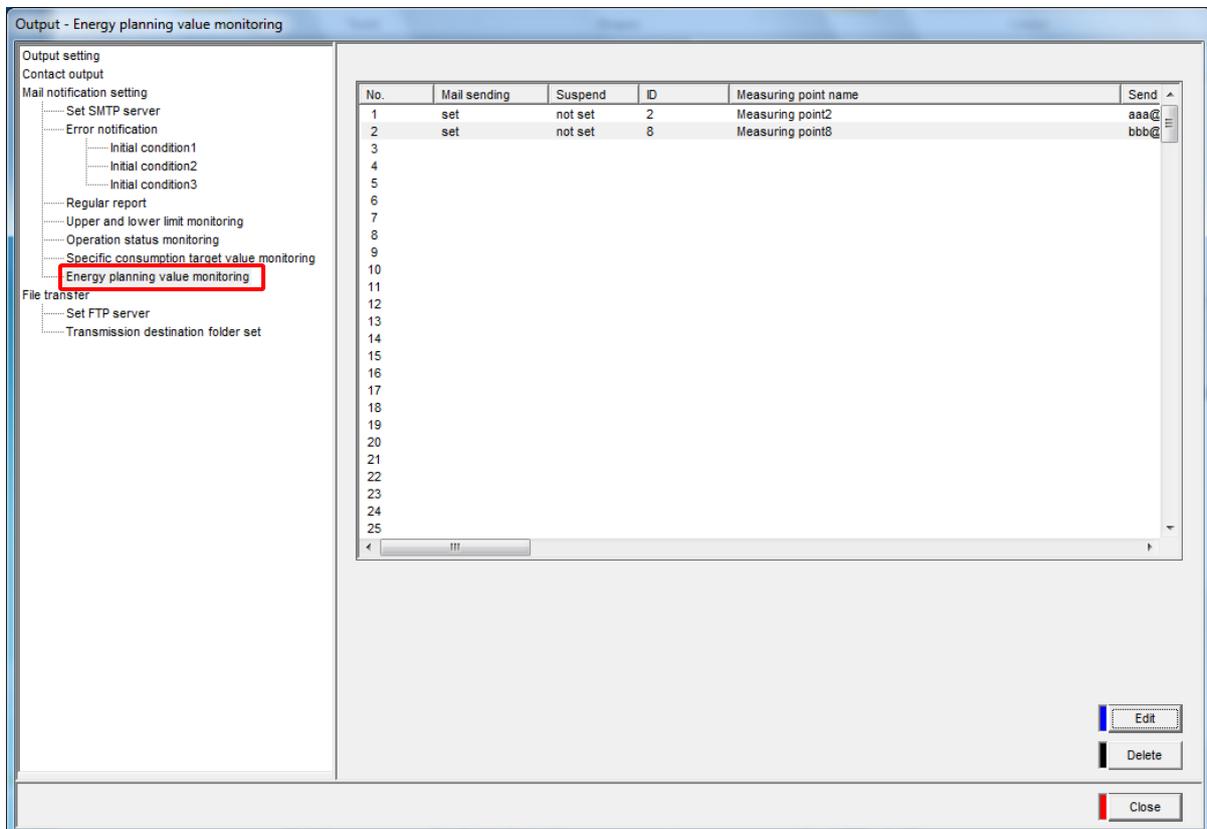

2 Checking the registration information

Check the following information displayed on the list.

[No.]	: Energy plan value monitoring notification No.
[Mail sending]	: Active or inactive status of energy plan value monitoring notification (by mail)
[Suspend]	: Active or inactive status of temporarily holding of mail transmission
[ID]	: Measuring point ID of energy plan value monitoring notification
[Measuring point name]	: Measuring point name of energy plan value monitoring notification
[Send To]	: Destination address of energy plan value monitoring notification mail
[Subject]	: Subject of energy plan value monitoring notification mail
[Body]	: Text of energy plan value monitoring notification mail

Registering a new energy planning value notification


This section explains the procedure for registering a new energy plan value monitoring notification (by mail).

1 Displaying the [Energy planning value monitoring] screen

Click the [Energy planning value monitoring] in the tree menu on the [Output] screen.

2 Displaying the dialog box of [Registration of energy planning value monitoring notification]

Double-click the line of the energy plan value monitoring notification No. to be registered on the [Energy planning value monitoring] screen or select the line of the energy plan value monitoring notification No. to be registered, and click the [Edit] button.

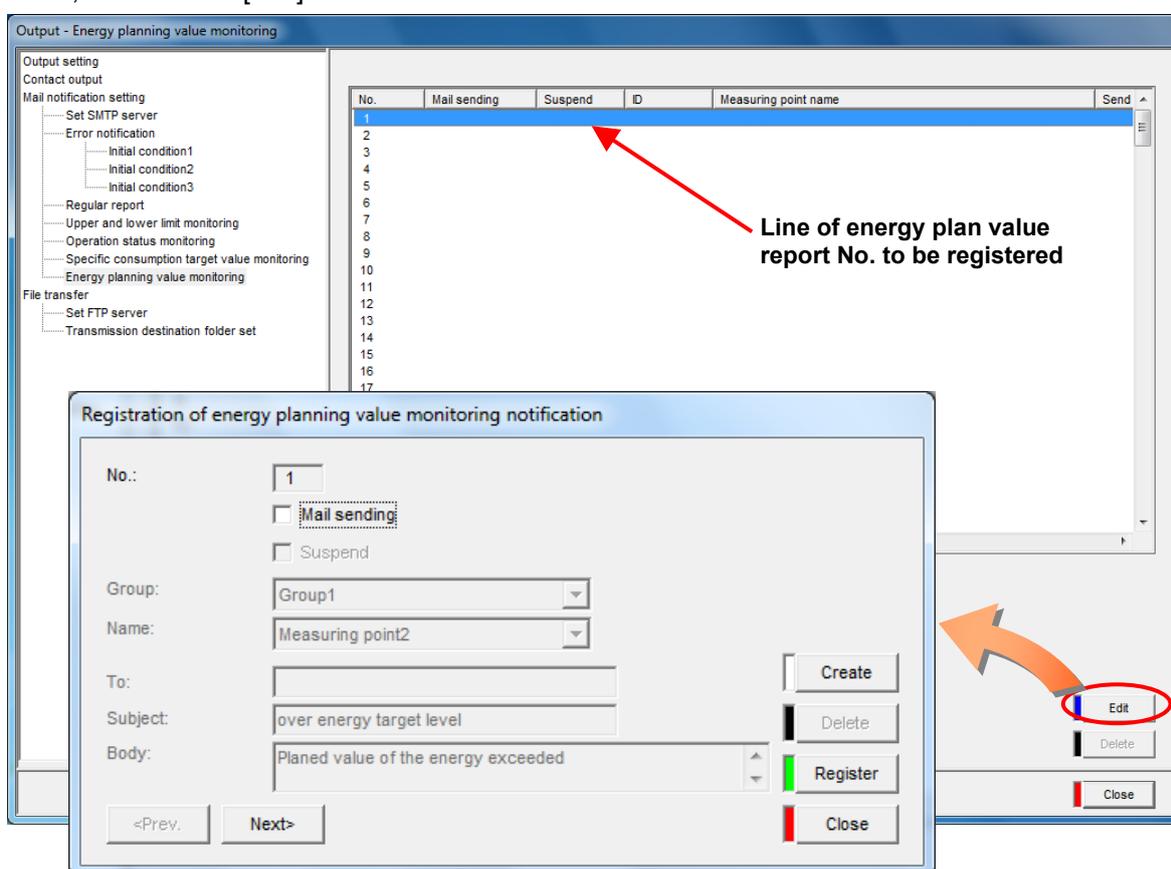

3 Setting the active/inactive status of notification

- (1) To send the energy plan value monitoring notification mail, check the [Mail sending].
- (2) To hold the mail temporarily when sending a mail, check the [Suspend] check box.

4 Specifying the measuring point to notification

Select the measuring points for energy plan value monitoring notification.

(1) Select [Group].

(2) Select the measuring points for energy plan value monitoring notification from the measuring points including in the group selected in (1).

* Only the measuring points for energy plan value notification are displayed in the pull-down menu.

5 Setting the destination address, subject and text of the mail notification

Set this information only when [Mail sending] is checked. The entry conditions are listed below.

[To]	Characters	Up to 50 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
[Subject]	Default	Over energy target level
	Characters	Up to 30 characters
[Body]	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >
	Default	Energy plan value is exceeded.
	Characters	Up to 128 characters
	Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

6 Registering


Click the button in the dialog box of [Registration of energy planning value monitoring notification] to register.



[Register] button : Register the set details of energy plan value monitoring notification

[Close] button : Back to the [Energy planning value monitoring] screen.

* If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item. (Example of display)

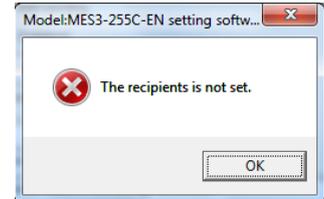

*2 After modification of entry details of each item, click the [Create], [< Prev.], [Next>] or [Close] button instead of clicking the [Register] button, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register

[Cancel] button : Back to the dialog box of [Registration of energy plan value monitoring settings]




<For continuous registration of energy plan value monitoring notification >

For continuous registration of energy plan value monitoring notification, click the [Create] button and repeat the steps from 3 to 6.

To confirm, delete or change the previous registration of energy plan value monitoring notification, click the [<Prev.] button.

To confirm, delete or change the next registration of energy plan value monitoring notification, click the [Next>] button.

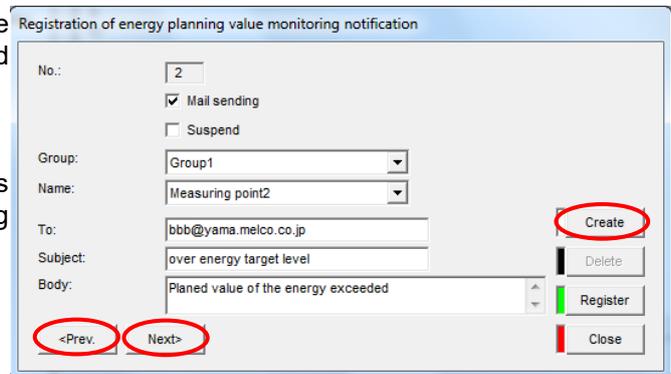

Deleting the registered energy planning value monitoring notification


This section explains the procedures for deleting a registered energy plan value monitoring notification.

1 Displaying the [Energy planning value monitoring] screen

Click the [Energy planning value monitoring] in the tree menu on the [Output] screen.


2 Selecting the energy plan value notification to be deleted, and clicking the [Delete] button

Select the line of the energy plan value notification to be deleted from the [Energy planning value monitoring] screen, and click the [Delete] button.

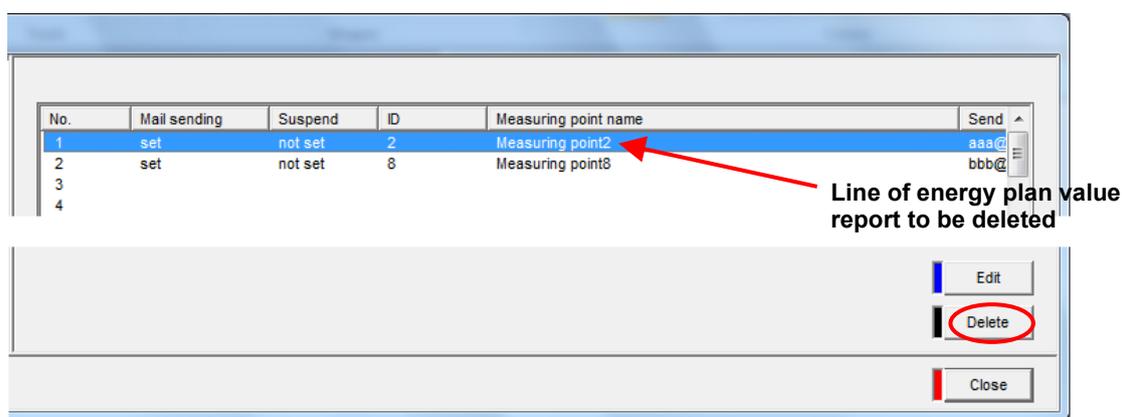

3 Deleting


The message confirming deletion is displayed. Click the button to execute deletion.

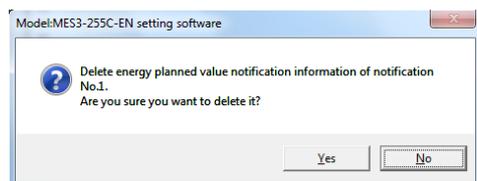

[Yes] button : Delete the energy plan value notification, and back to the [Energy planning value monitoring] screen.

[No] button : Cancel the deletion, and back to the [Energy planning value monitoring] screen.

After deletion, the information of the deleted energy plan value monitoring notification is removed from the list in the dialog box of [Energy planning value monitoring].

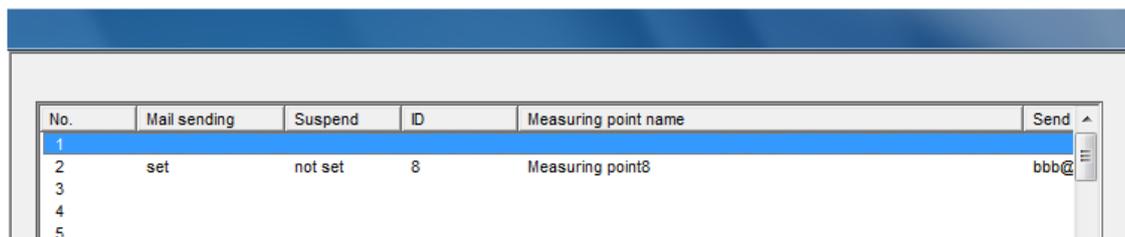

Remarks

- It can be also deleted by clicking the [Delete] button in the dialog box of [Registration of energy planning value monitoring notification].

Editing the registered energy plan value monitoring notification


This section explains the procedure for editing the registered energy plan value monitoring notification.

1 Displaying the [Energy planning value monitoring] screen

Click the [Energy planning value monitoring] in the tree menu on the [Output] screen.

2 Selecting the energy plan value report to be edited, and clicking the [Edit] button

Double-click the line for the energy plan value monitoring notification to be edited in the list on the [Energy planning value monitoring] screen, or select the line for the energy plan value monitoring notification to be edited, and click the [Edit] button.

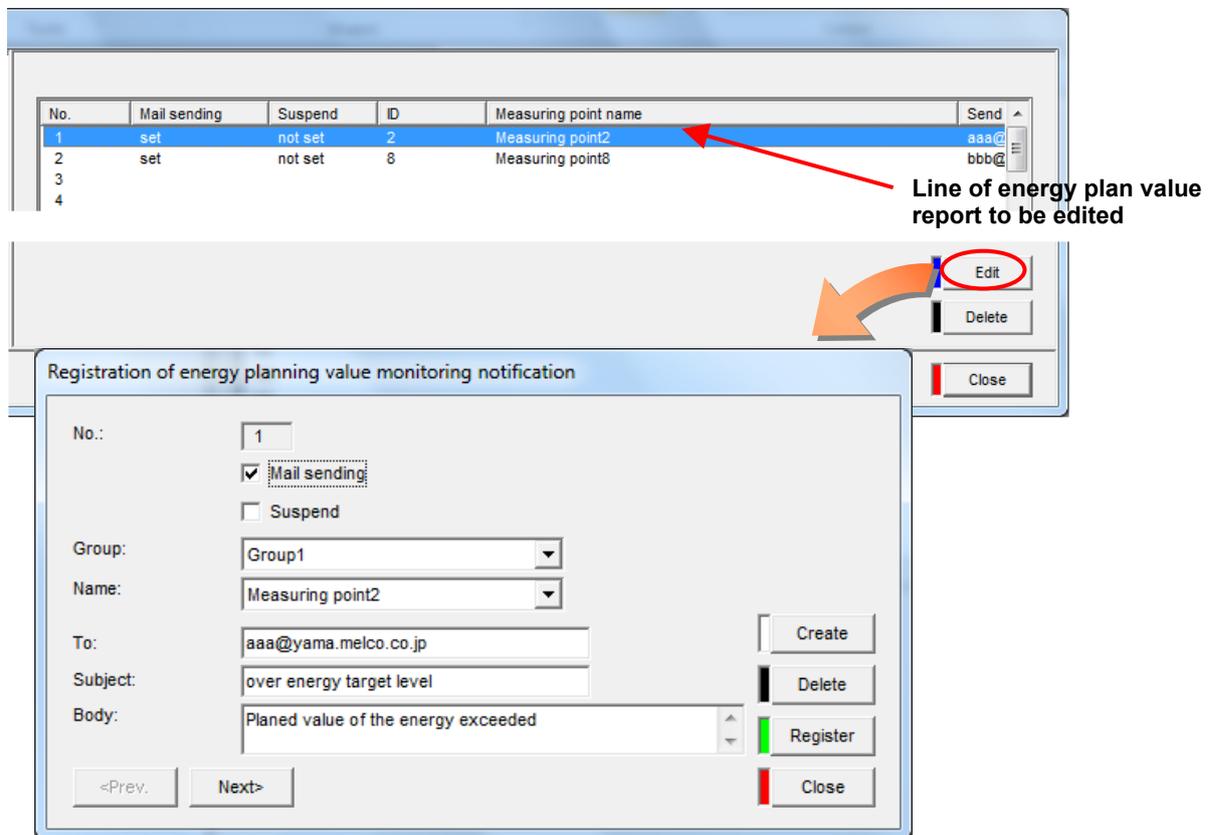

3 Editing the items to be changed and registering them

Edit the item to be changed and then click the [Register] button.

* The input information and input conditions for each item are identical to those for new registration of the energy plan value monitoring notification.

4.9.12. FTP server setting

This section explains the operation procedures for [Set FTP server].

- * For installing and setting the FTP (file) server and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company) or your vendor.
- * The file transfer destination FTP server must support the passive mode.

Setting the FTP server information

1 Displaying the [Set FTP server] screen

Click the [Set FTP server] in the tree menu on the [Output] screen.

The screenshot shows a software window titled "Output - Set FTP server". On the left is a tree menu with the following items: "Output setting", "Contact output", "Mail notification setting" (with sub-items "Set SMTP server" and "Error notification"), "Regular report" (with sub-items "Initial condition1", "Initial condition2", and "Initial condition3"), "Upper and lower limit monitoring", "Operation status monitoring", "Specific consumption target value monitoring", "Energy planning value monitoring", and "File transfer" (with sub-items "Set FTP server" and "Transmission destination folder set"). The "Set FTP server" item is highlighted with a red rectangular box. The main area of the window contains the following fields: "FTP server:" (text input), "Login ID:" (text input), "Password:" (text input), and "FW time:" (dropdown menu showing "10Min"). At the bottom right of the window are two buttons: "Register" and "Close".

2 Inputting the login information

Set the information of the FTP server to which the data is transferred.

(1) [FTP server]

Input a domain name or IP address of the FTP server from the keyboard.

- For inputting a domain name

FTP server:	<input type="text" value="ftp.yama.melco.co.jp"/>	Number of characters	Up to 50 characters
		Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

* Setting of the DNS server is required.

- For inputting an IP address

FTP server:	<input type="text" value="192.168.10.200"/>	Input range	0 to 255
		Values prohibited to register	0.0.0.0, xxx.xxx.xxx.255 (xxx: any numerical value)

(2) [Login ID]

Input the login ID set to the FTP server from the keyboard.

Login ID:	<input type="text" value="ecoserver"/>	Number of characters	Up to 16 characters
		Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(3) [Password]

Input the password set in the FTP server from the keyboard.

Password:	<input type="password" value="*****"/>	Number of characters	Up to 16 characters
		Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

* A typed password will be displayed as asterisk (*).


(4) [FW time]

Select the time to transfer the file.

FW time:	<input type="list" value="10Min"/>	Selection range	[10 min.], [20 min.], [30 min.], [40 min.] or [50 min.]
		Default value	[10 min.]

<About the time to transfer a file>

As the following charts, the file is transferred to the FTP server at the set time of every hour (minutes).

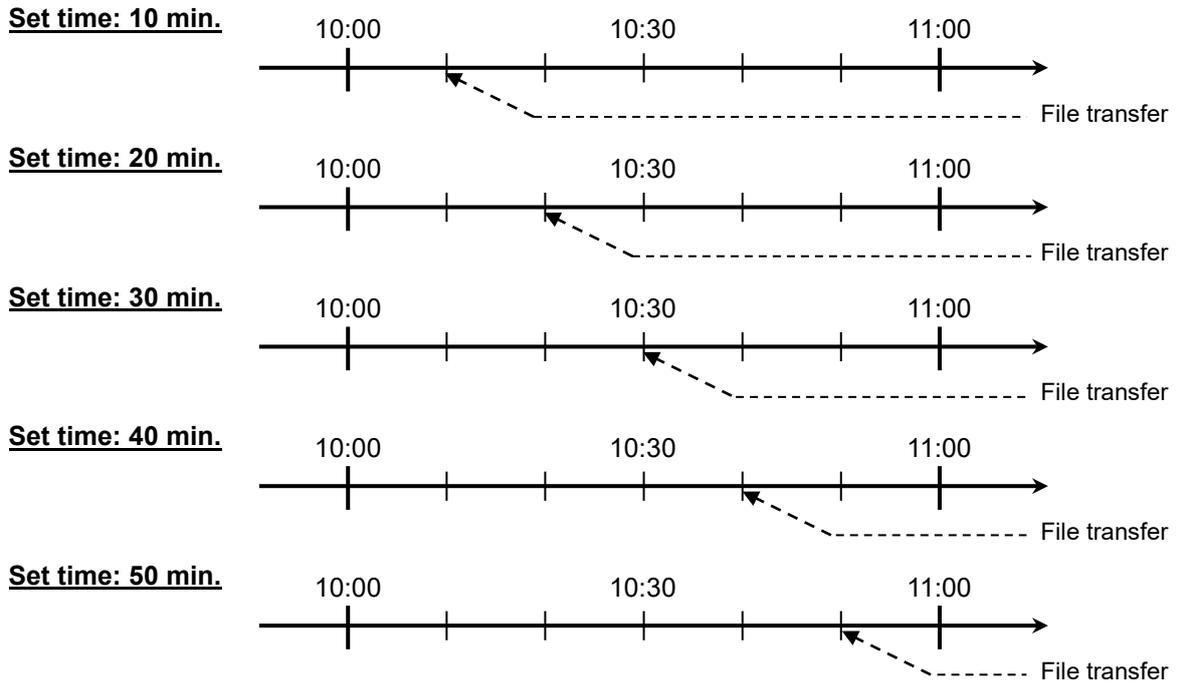

<About the timing of file transfer>

The following table shows the transfer timing for each file.

File	Transfer timing
Daily data	xx minutes of every hour
Monthly data	mm:xx every day
Annual data	yy, yy:xx every month
Zoom (5 min.) data	xx minutes of every hour
Zoom (1 min.) data	xx minutes of every hour
Virtual (daily) data	xx minutes of every hour
Virtual (monthly) data	mm:xx every day
Virtual (annual) data	yy, yy:xx every month
Specific consumption (daily) data	xx minutes of every hour
Specific consumption (monthly) data	mm:xx every day
Specific consumption (annual) data	yy, yy:xx every month
Equipment (daily) data	xx minutes of every hour
Operation history data	xx minutes of every hour (Update file only)
System log	xx minutes of every hour (Update file only)
Demand (daily) data	xx minutes of every hour
Demand (monthly) data	mm:xx every day
Demand (annual) data	yy, yy:xx every month
Demand alarm/control history data	xx minutes of every hour

(xx is the set time to transfer.)
(mm is the monthly logging time.)
(yy is the annual logging time.)

3 Registering

Click the button in the dialog box of [Set FTP server] to register.




[Register] button : Register the file transfer setting as the set details.

[Close] button : Back to the [Project setting] screen.

*1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item.

(Example of display)

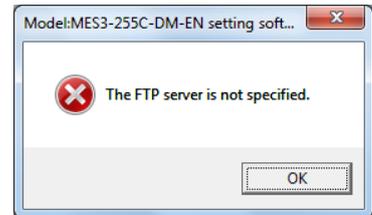


*2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the [FTP server setting] dialog box

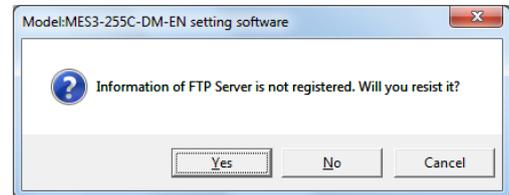

Remarks

- Since any data in the FTP server is not deleted, clean up the server by deleting the data at regular intervals.
- When designating the FTP server by domain name, make sure to set up the DNS server. (☞ Refer to 4.8.2 IP address settings, Setting the DNS server.)

* **For installing and setting the DNS server (name server) and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company).**


4.9.13. Transfer enable/disable, transfer destination folder setting

This section explains the operation procedures for [Transmission destination folder set]
This section explains the setting for transferring the CSV format data files (daily, monthly, annual, zoom, etc.) and the system log to the FTP (file) server.

Setting files transferred and destination addresses

1 Displaying the [Transmission destination folder set] screen

Click the [Transmission destination folder set] in the tree menu on the [Output] screen.

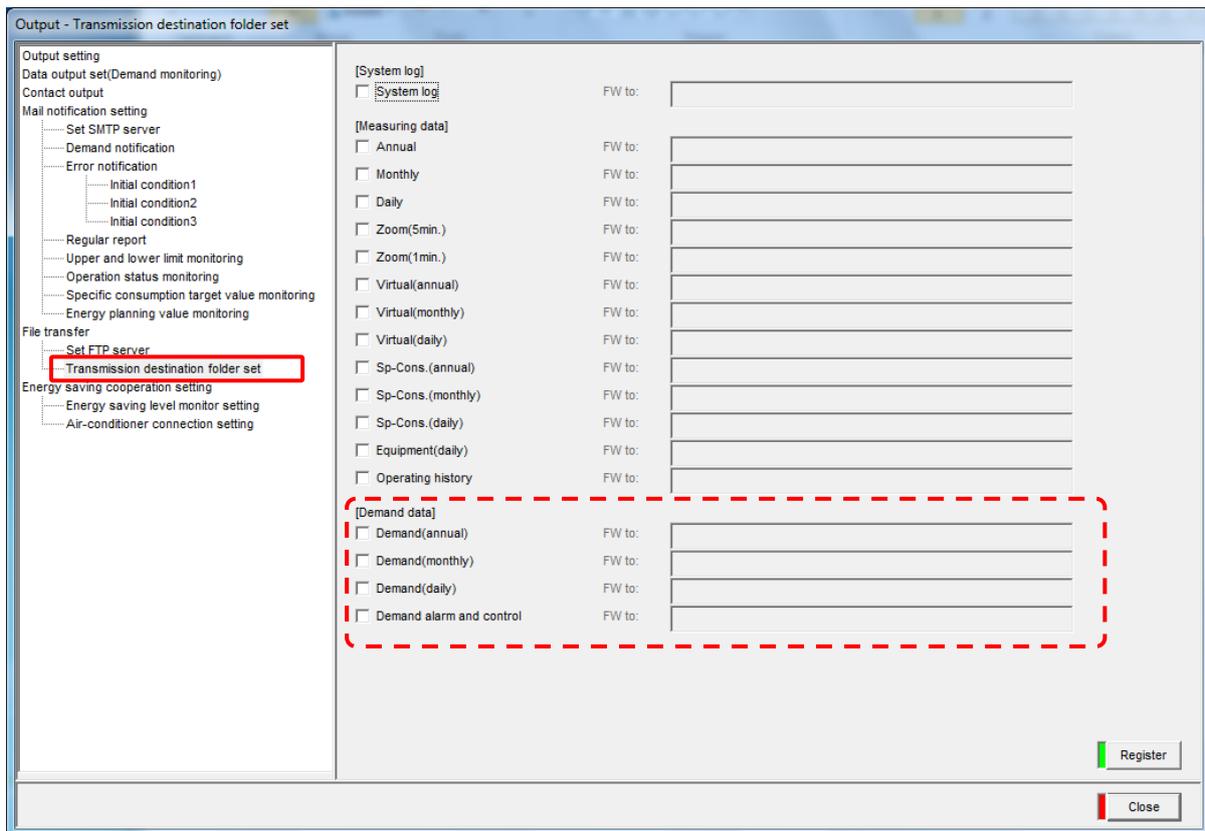

* The demand data appears only on the EcoWebServerIII with demand control function.

2 Inputting the file transfer information

Select the data to transfer and set the transfer destination (path name in FTP server).

(1) Check the check boxes of the files to be transferred

The screenshot shows a configuration window with two sections: '[System log]' and '[Measuring data]'. Under '[System log]', the checkbox for 'System log' is checked. Under '[Measuring data]', the checkboxes for 'Annual', 'Monthly', 'Daily', 'Zoom(5min.)', and 'Zoom(1min.)' are all checked. To the right of each checked item is an empty text field labeled 'FW to:'.

* After checking the check boxes, input of the [FW to] area becomes available.

(2) Input the destination addresses (path names in the FTP server).

The screenshot shows the same configuration window as in step 1, but now the 'FW to:' fields are populated with the following relative addresses: /SystemLog, /DayLog, /MonthLog, /YearLog, /ZoomLogPer5, and /ZoomLogPer1. A red box highlights the entire 'FW to:' input area.

For each destination address (path name in the FTP server), specify a relative address (a folder name viewed from the FTP login folder).

For example, if logging in d://EcoWebServer/data/ and transferring a file to d://EcoWebServer/data/DayLog, specify the file name as /DayLog.


* Since the specification manner varies depending on a FTP server, consult the FTP server instruction manual or consult with your vendor.

The followings are the input conditions for the destination addresses.

Number of characters	Up to 50 characters
Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < > (* Replace the symbol ¥ with / when entering it.)

3 Registering

Click the button in the dialog box of [Transmission destination folder set] to register.

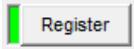


[Register] button : Register the file transfer setting as the set details.



[Close] button : Back to the project setting dialog box.

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item. (Example of display)

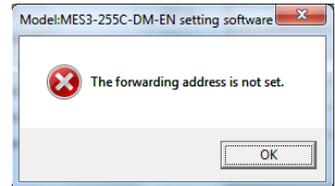


- *2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the dialog box of [Transfer enable/disable, transfer destination folder setting]

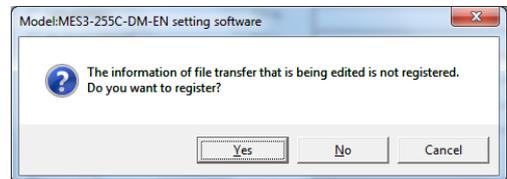

4.9.14. Energy saving level monitor setting (Only for models with demand control function)


This section explains the operation procedure for [Energy saving level monitor setting].

- * The energy saving level monitor setting sets the function used in coordination with the Air-conditioner. These settings are not required when not using functions in coordination with this controller.
- * The energy saving level monitor setting screen and the external transmission must be enabled to use the coordination function.

Setting the energy saving level setting and emergency stop order setting

1 Displaying the [Energy saving level monitor setting] screen

Click the [Energy saving level monitor setting] screen in the tree menu on the [Output] screen.

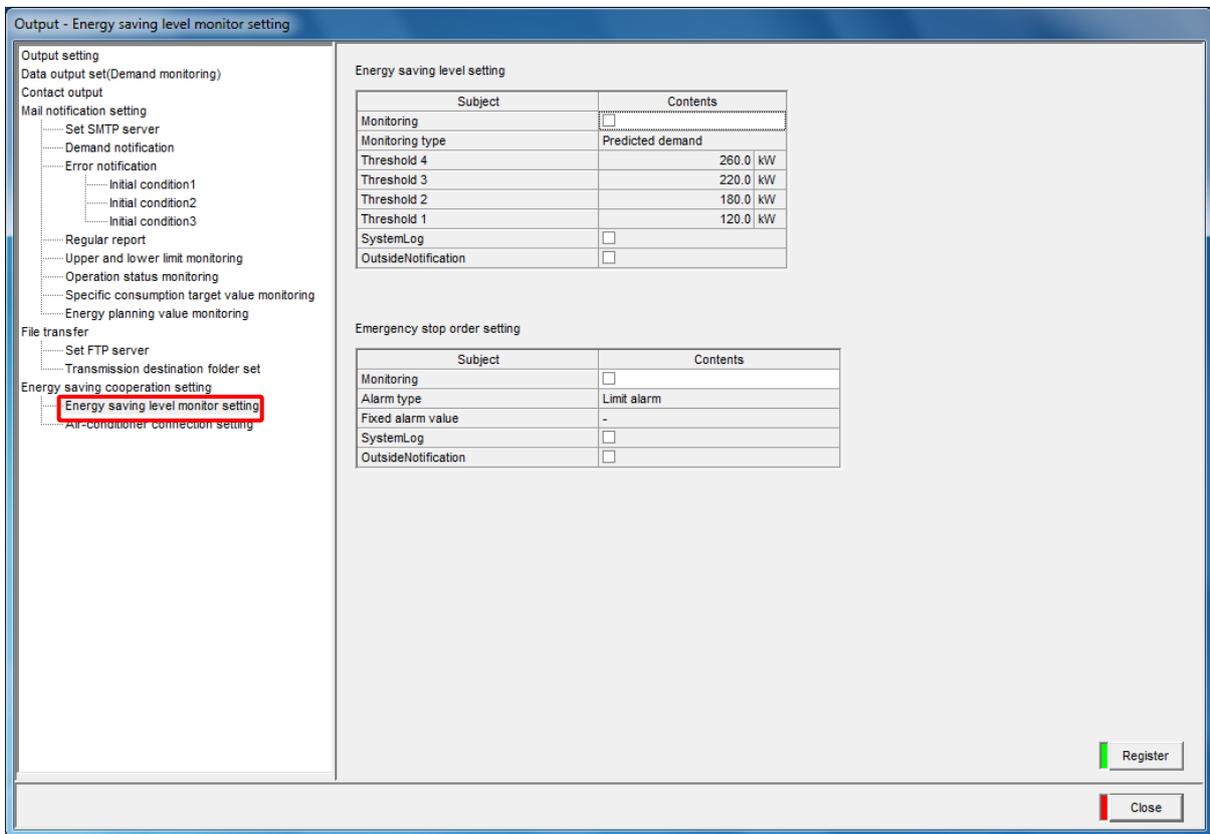

- * If the alarm type is set to "Limit alarm", the emergency stop order setting will appear as follows.

Emergency stop order setting	
Subject	Contents
Monitoring	<input type="checkbox"/>
Alarm type	Limit alarm
Fixed alarm value	-
SystemLog	<input type="checkbox"/>
OutsideNotification	<input type="checkbox"/>

2 Setting the energy saving level monitoring

Set the energy saving level used as the source data for energy saving coordinated operation with the external device (air-conditioner).

Enter or select each of the following items.

- (1) Click [Monitoring]. (The box will be checked.)

Energy saving level setting	
Subject	Contents
Monitoring	<input checked="" type="checkbox"/>

- (2) Select [Monitoring type].

Monitoring type	Predicted demand
Threshold 4	Predicted demand
Threshold 3	Adjusted electrical power

- (3) Enter the threshold for each energy saving level in [Threshold 4], [Threshold 3], [Threshold 2] and [Threshold 1].

Threshold 4	260.0 kW
Threshold 3	220.0 kW
Threshold 2	180.0 kW
Threshold 1	120.0 kW

- (4) Set whether or not to record the energy saving level in [System Log].

SystemLog	<input checked="" type="checkbox"/>
OutsideNotification	<input type="checkbox"/>

- (5) Set whether to not to transmit the energy saving level in [Outside Notification].

SystemLog	<input type="checkbox"/>
OutsideNotification	<input checked="" type="checkbox"/>

***1 All thresholds 1 to 4 must be set.**

***2 If "Predicted demand" is selected for the monitoring type, enter the values so that Threshold 4 > Threshold 3 > Threshold 2 > Threshold 1.**

A value from 0.0 to 999999.9 can be entered.

The corresponding energy saving levels are as follow:

Level 4 \geq Threshold 4 > Level 3 \geq Threshold 3 > Level 2 \geq Threshold value 2 > Level 1 \geq Threshold value 1 > Level 0

***3 If "Adjusted electrical power" is selected for the monitoring type, enter the values so that Threshold 4 < Threshold 3 < Threshold 2 < Threshold 1.**

A value from -999999.9 to 999999.9 can be entered as the threshold.

The corresponding energy saving levels are as follow:

Level 4 \leq Threshold 4 < Level 3 \leq Threshold 3 < Level 2 \leq Threshold value 2 < Level 1 \leq Threshold value 1 < Level 0

***4 The setting will not be not accepted if the threshold 1 to 4 order is reversed.**

3 Setting the emergency stop order monitoring

The emergency stop order is linked with the limit alarm or fixed alarm during demand control. To change the monitoring method or related values (base power, fixed alarm value), the settings must be changed on the Demand alarm and control setting screen. Set the following items.

- (1) Click [Monitoring]. (The box will be checked.)

Energy saving level setting	
Subject	Contents
Monitoring	<input checked="" type="checkbox"/>

- (2) Set whether or not to record the emergency stop order in [System Log].

SystemLog	<input checked="" type="checkbox"/>
OutsideNotification	<input type="checkbox"/>

- (3) Set whether to not to transmit the emergency stop order in [Outside Notification].

SystemLog	<input type="checkbox"/>
OutsideNotification	<input checked="" type="checkbox"/>

4 Registering


Click the button in the dialog box of [Energy saving level monitor setting] to register.



[Register] button : Register the set details of energy saving level monitor setting information.

[Close] button : Back to the project setting dialog box.

- *1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details. Reset the details so as to meet the conditions of each item. (Example of display)

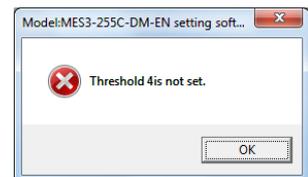


- *2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the dialog box of [Energy saving level monitor setting]

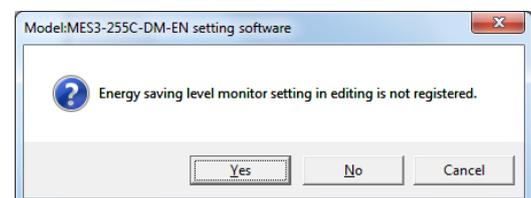

Remarks

- When enabling [Outside Notification] of the [Energy saving level monitoring] or [Emergency stop order monitoring], the outside device connection destination domain must be registered with the [Air-conditioner connection setting].

4.9.15. Air-conditioner connection settings (Only for models with demand control function)


This section explains the operation procedures for [Air-conditioner connection setting].

- * The air-conditioner connection setting is the address setting for the air-conditioner.
This does not need to be set when not using the coordinated function with the controller.

Setting the air- conditioner connection

1 Displaying the [Air-conditioner connection setting] screen

Click the [Air-conditioner connection setting] in the tree menu on the [Output] screen.

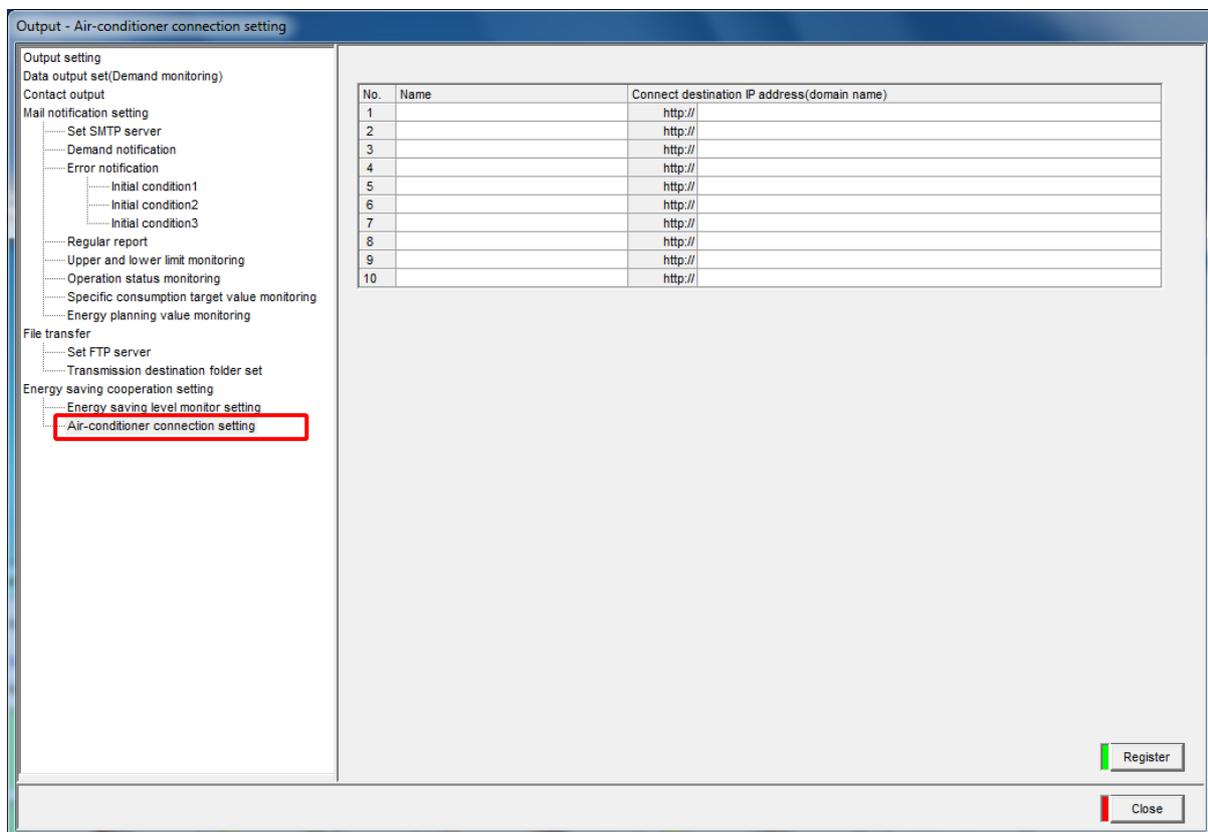

2 Setting the air-conditioner connection destination

Enter the information for the connected air controller.

(1) Enter the air conditioner connection name.

No.	Name	Connect destination IP address(domain name)
1	Connect domain1	http://
2		http://
3		http://

The conditions for entering the name are given below.

Number of characters	Up to 24 characters
Prohibited characters	The following characters cannot be registered: # ¥ : , ; * ? " < >

(2) Enter the IP address or domain name for connecting to the air conditioner.

No.	Name	Connect destination IP address(domain name)
1	Connect domain1	http:// 192.168.0.201
2		http://
3		http://

The conditions for entering the name are given below.


Number of characters	Up to 50 characters
Input conditions	Only the following characters can be used: A-Z, a-z, 0-9, -, ., :, /, _ Or, use a . (dot) at the head or end.

Remarks

- When designating the connection destination with a domain name, make sure to set up the DNS server.
(☞ Refer to 4.8.2 IP address settings, Setting the DNS server.)
- * For installing and setting the DNS server (name server) and inquiring technical questions about it, consult with your network administrator (or an applicable department of your company).

3 Registering

Click the button in the dialog box of [Air-conditioner connection setting] to register.

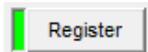

[Register] button : Register the set details of air-conditioner connection setting.




[Close] button : Back to the project setting screen.

*1 If the set details are not proper, an error message as shown on the right is displayed when clicking the [Register] button according to the error details.

Reset the details so as to meet the conditions of each item.

(Example of display)

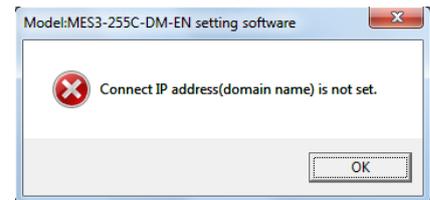


*2 After modification of entry details of each item, click the [Close] button instead of clicking the [Register] button or another tree menu is selected, the message shown on the right is displayed.

[Yes] button : To register

[No] button : Not to register.

[Cancel] button : Back to the dialog box of [Air-controller connection setting]

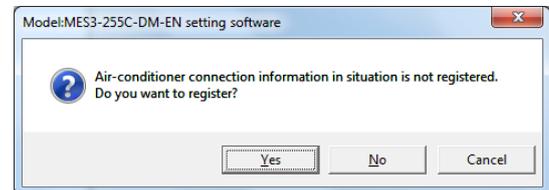

2 Enter the PLC information

Enter the PLC/GOT information for which you want to set the demand setting.

(1) Check [Setting via PLC] to enable.

Setting via PLC:

(2) Select the terminal name of the PLC/GOT for which you want to set the demand setting.

Name:

* You cannot use one PLC/GOT which is used in collecting data, outputting data, or outputting data (demand monitoring).

Please register one PLC with a different port number as another PLC/GOT.

(3) Check the setting items to be set from the PLC/GOT to enable.

Setting item: Demand setting Time


(4) Enter the device number with device name using half-byte numerals.

Start device No.:

* Refer to '5.7List of measured items of devices' for the setting range.


The setting range appears when the  button at the side of the input field is clicked.

*Characters other than the setting range cannot be registered.

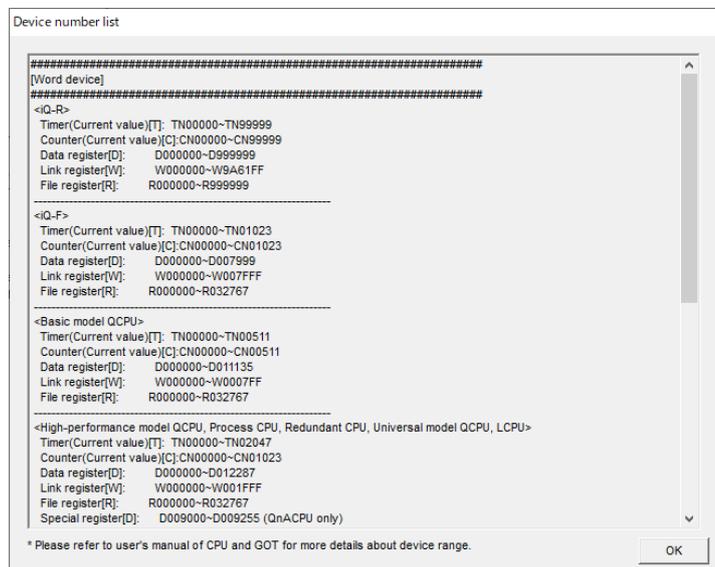

3 Registering

Click the button on the [Demand setting (PLC)] dialog box to register.

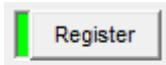

[Register] button : Register the demand setting (PLC) you set.



[Close] button : Return to the project setting dialog box.

*1 If the setting is not correct, clicking the [Register] button shows an error message according to the incorrect contents as shown on the right. Reset the details so as to meet the conditions of each item.




*2 After changing the setting of each item, click the [Close] button instead of clicking the [Register] button or select another tree menu to show the message as the right window.

[Yes] button : Register

[No] button : Not register

[Cancel] button : Return to the [Demand setting (PLC)] screen.

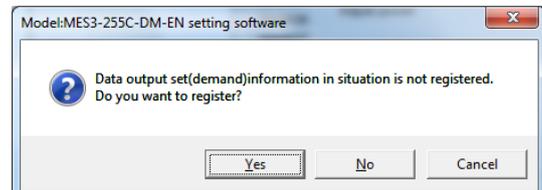

Demand setting (PLC) about settings

The setting contents when the demand setting is performed from the PLC/GOT are shown below.

Device number	Subject		Input data range(decimal)	Block
n	Control device		* Refer to below	-
n+1	VCT ratio	Low rank	1 to 100,000	Demand setting section
n+2		High rank		
n+3	Pulse constant value	Low rank	1 to 50,000	
n+4		High rank		
n+5	Number of digits(Integer part)		4 to 6	
n+6	Multiplying factor	Low rank	0 : Unspecified	
n+7		High rank	1 to 100,000	
n+8	Demand time limit adjustment type		1 : Initial TS 2 : External pulse signal	
n+9	Alarm/Control mask time		0 to 60	
n+10	Alarm type		1 : Limit Alarm 2 : Fixed Alarm	
n+11	Target demand value	Low rank	0 to 9,999,999	Demand monitoring setting section
n+12		High rank		
n+13	Base power	Low rank	0 to 999,999	
n+14		High rank		
n+15	Fived alarm value	Low rank	0 to 9,999,999	
n+16		High rank		

* n = "Start device number" set in Demand setting(PLC)

Control device

It is a device for writing the setting request from the PLC/GOT and writing the setting completion and the setting error existence from EcoWebServerIII.

Bit	Detail	
b0	Demand setting flag	0 : Setting completed, 1 : Setting request
b1	Demand monitoring setting flag	
b2 to b7	(Not used)	
b8	Demand setting error flag	0 : No error, 1 : Error
b9	Demand monitoring setting error flag	
b10 to b15	(Not used)	

In the PLC/GOT, after setting the value to the device of the item you want to set, set 1 (=setting request) to the demand setting flag or the demand monitoring setting flag.

EcoWebServerIII checks the control device once every 10 seconds and performs the setting process if there is a setting request.

When the setting is completed, 0 (=setting completed) is written to the demand setting flag and the demand monitoring setting flag.

If there is a setting error at this time, write 1 (= error) to the demand setting error flag or the demand monitoring setting error flag.

Only blocks for which setting is requested are set.

Set all Fh for items that are not set in the block that requires setting.

(Example) When setting only the demand target value

Set FFFFFFFFh to the base power and fixed alarm value respectively.

In the same way, set the values within the input data range for VCT ratio, Pulse constant value, Number of digits(Integer part), Multiplying factor, Demand time limit adjustment type, Alarm/control mask time, and Alarm type.

For the demand target value, base power, and fixed alarm value, set 10 times the value that is actually set.

(Example) To set 123.4, set 1234.

The setting contents when the time setting is performed from the PLC/GOT are shown below.

Device number	Subject	Input data range(decimal)
n	Control device	* Refer to below
n+1	Setting time	Year 2012 to 2099
n+2		Month 1 to 12
n+3		Day 1 to 31
n+4		Hour 0 to 23
n+5		Minute 0 to 59
n+6		Second 0 to 59
n+7	Setting time	Year 2012 to 2099
n+8		Month 1 to 12
n+9		Day 1 to 31
n+10		Hour 0 to 23
n+11		Minute 0 to 59
n+12		Second 0 to 59

* n = "Start device number" set in Demand setting(PLC)

Control device :

It is a device for writing the setting request from the PLC/GOT and writing the setting completion and the setting error existence from EcoWebServerIII.

bit	Detail	
b0	Time setting flag	0 : Setting completed, 1 : Setting request
b1 to b7	(No used)	
b8	Time setting error flag	0 : No error, 1 : Error
b9 to b15	(No used)	

In the PLC/GOT, after setting the value to the device of the item you want to set, set 1 (=setting request) to the time setting flag.

EcoWebServerIII checks the control device once every 10 seconds and performs the setting process if there is a setting request.

When the setting is completed, 0 (=setting completed) is written to the time setting flag.

If there is a setting error at this time, write 1 (= error) to the time setting error flag.

Setting time

Set the time you want to set in the two setting times(n + 1 to n + 6 device and n + 7 to n + 12 device).

If setting time(n + 1 to n + 6 device) and (n + 7 to n + 12 device) are different, a setting error will occur as invalid data.

4.10. Test and Adjustment Function

This function is for operation check before starting operation.

Carefully read [1.3 Precautions for use], [3 Flow of settings], and [4 Operating procedures] before function check .

1 Displaying the [Test] dialog box

Click [Test] in the dialog box of project setting.

Title
(Displays the selected menu)

Test - Confirm terminal connection

No.	Terminal name	Model name	Number of occupied station	Station No.	Result(Code)
1	Terminal1	EMU4-HD1-MB	1St.	1	Not carry out
2	Terminal2-1	EMU2-RD3-C	1St.	2	Not carry out
2	Terminal2-2	EMU2-RD3-C	1St.	2	Not carry out
2	Terminal2-3	EMU2-RD3-C	1St.	2	Not carry out
3	Terminal3-1	EMU2-RD5-C	1St.	3	Not carry out
3	Terminal3-2	EMU2-RD5-C	1St.	3	Not carry out
3	Terminal3-3	EMU2-RD5-C	1St.	3	Not carry out
3	Terminal3-4	EMU2-RD5-C	1St.	3	Not carry out
3	Terminal3-5	EMU2-RD5-C	1St.	3	Not carry out

Each function operation confirmation screen
(Displays the test results for the selected function)


* The Demand control and notification check, air-controller connection check and integrated count value setting functions are available only for the EcoWebServerIII with demand control function.

2 Selecting the function in the tree menu

[Confirm terminal connection] is selected as the default.

Remarks

- If the setting is changed, the message on the right will appear.
To test and adjust, click the [Yes] button and execute project writing.

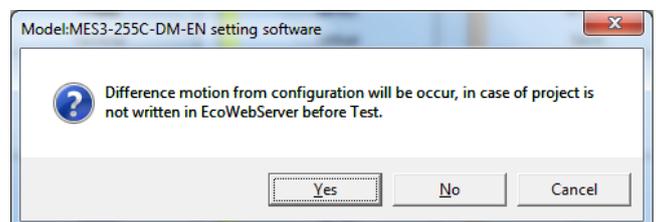

- If you click the [Cancel] button, back to the [Project setting] dialog box.

4.10.1. Terminal connection check


This section explains the operation procedure in the dialog box of [Confirm terminal connection].

Confirming the terminal connection state


This section explains the procedure to confirm the terminal connection state.

1 Displaying the [Confirm terminal connection] dialog box


Click [Confirm terminal connection] in the tree menu on the [Test] dialog box.

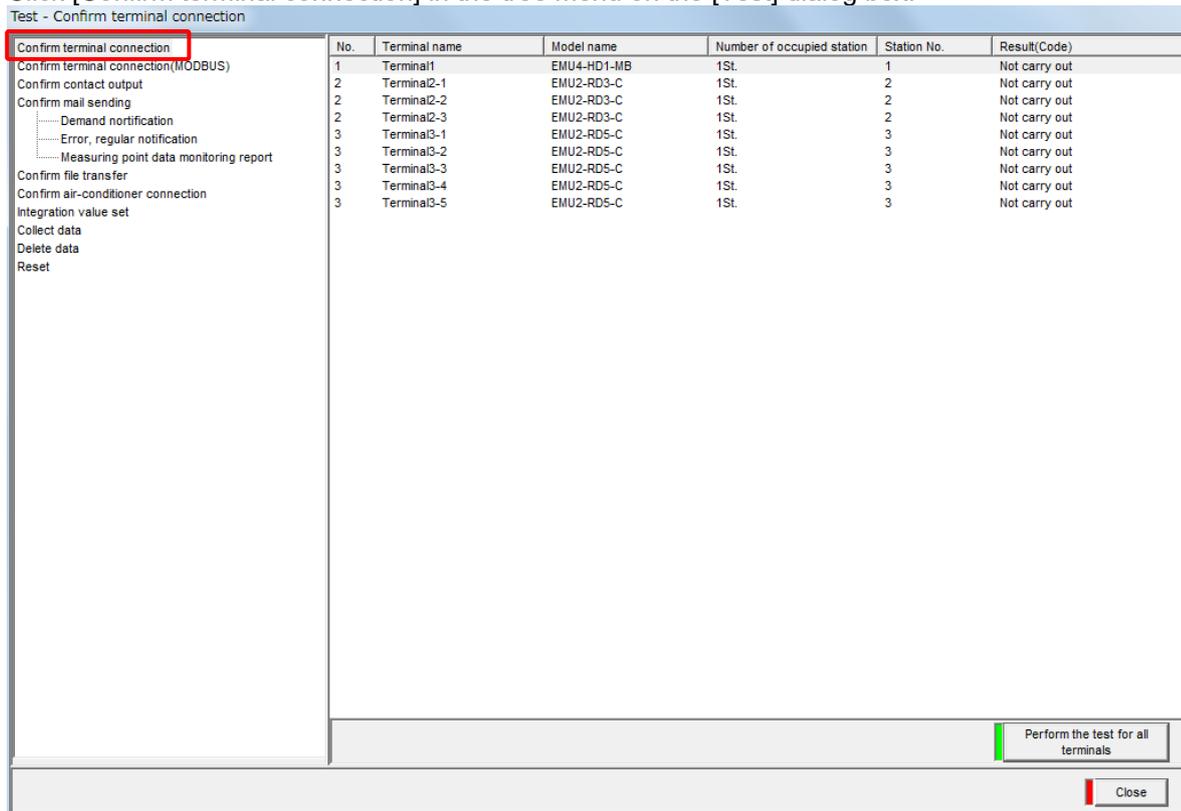

* The following items appear in the list of terminals for CC-Link communication products and CC-Link communication products with demand control function.

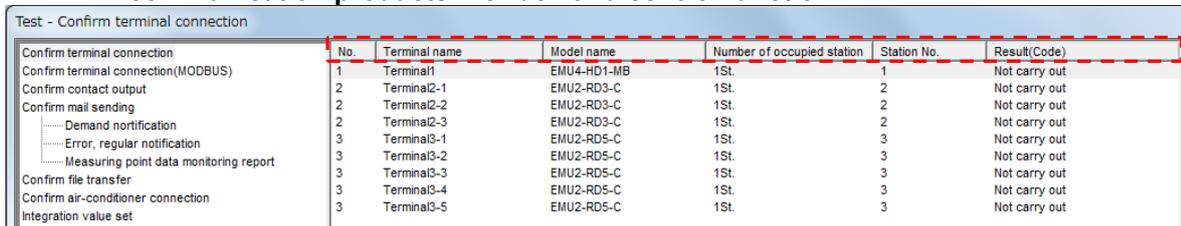


* For MODBUS terminals, select "Confirm terminal connection (MODBUS)" in the tree menu.

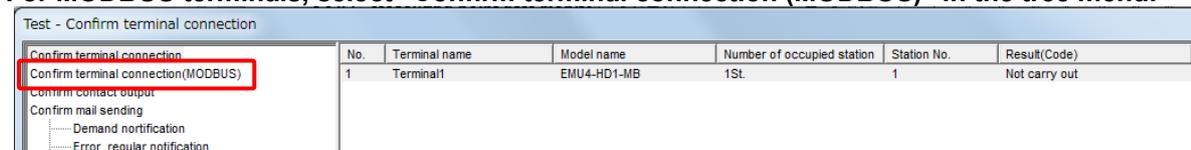


2 Executing the connectivity check of all terminals

(1) Click the [Perform the test for all terminals] button on the [Confirm terminal connection] dialog box.

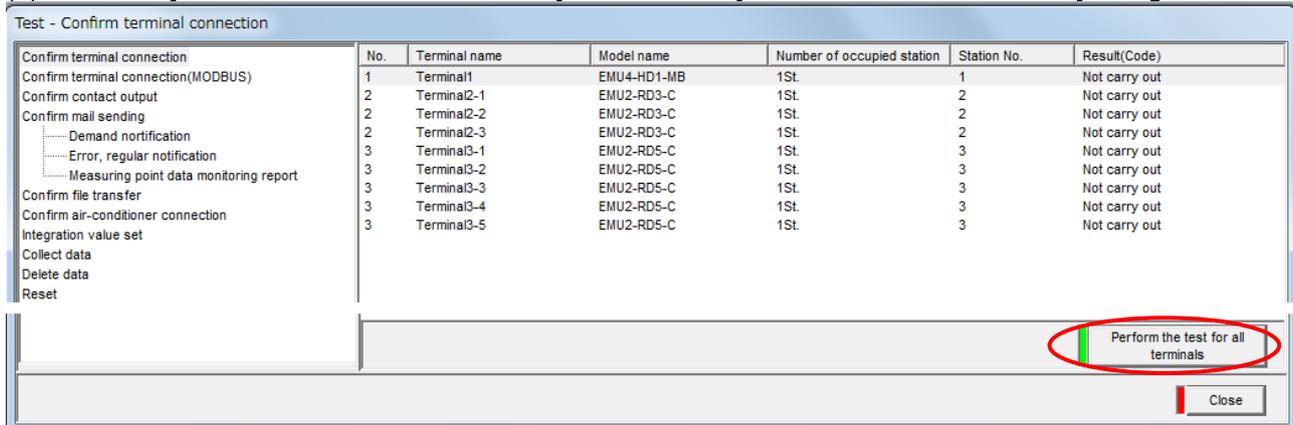


(2) An execution confirmation message appears. Click [Yes] to execute the test.

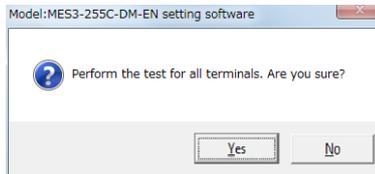


[Yes] button : Executes the connectivity check of the terminal.

[No] button : Cancels the connectivity check of the terminal, and back to the [Confirm terminal connection] dialog box.

(3) A dialog box that indicates the connectivity check is in progress will appear. If you want to cancel it, click the [Abort] button.

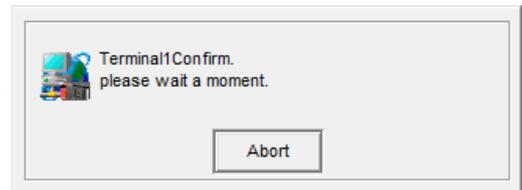

* If the IP address of the EcoWebServerIII main unit is not correct, a LAN cable is not connected, or the EcoWebServerIII is not powered on, the message on the right will appear. Click the [No] button, and then check the IP address of the EcoWebServerIII, the LAN cable connection, etc., and the power.

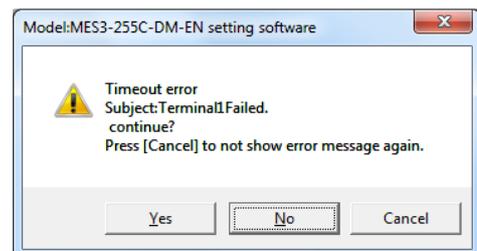


[Yes] button : Executes the connectivity check of the terminal.

[Cancel] button : Executes the connectivity check of the terminal.

However, error message does not appear even if error occurs.

(4) After the connectivity check on every registered terminal is completed, the completion message appears. Click the [OK] button to back to the [Confirm terminal connection] dialog box.

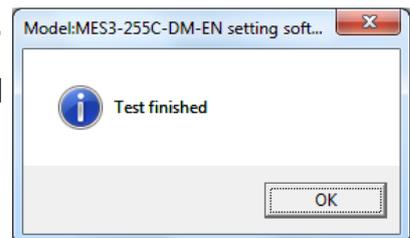


3 Executing the connectivity check of selected terminal

- (1) Select the line of the terminal to confirm, and click the right-click menu of the [Perform the test for the selected row].

No.	Terminal name	Model name	Number of occupied station	Station No.	Result(Code)
1	Terminal1	EMU4-HD1-MB			carry out
2	Terminal2	EMU3-DP1-C			carry out
3	Terminal3-1	EMU2-RD3-C	1St.	3	Not carry out
3	Terminal3-2	EMU2-RD3-C	1St.	3	Not carry out
3	Terminal3-3	EMU2-RD3-C	1St.	3	Not carry out


- (2) An execution confirmation message appears. Click [Yes] to execute the test.

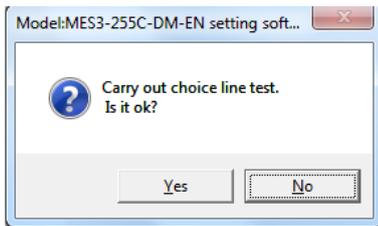

[Yes] button : Executes the connectivity check of the terminal.


[No] button : Cancels the connectivity check of the terminal, and back to the [Confirm terminal connection] dialog box.

- (3) A dialog box that indicates the connectivity check is in progress will appear. If you want to cancel it, click the [Abort] button.

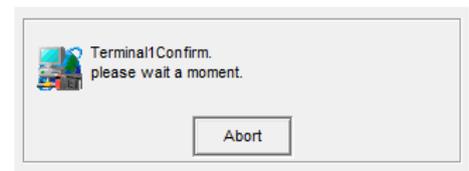

- * If the IP address of the EcoWebServerIII main unit is not correct, a LAN cable is not connected, or the EcoWebServerIII is not powered on, the message on the right will appear.

Click the [No] button, and then check the IP address of the EcoWebServerIII, the LAN cable connection, etc., and the power.

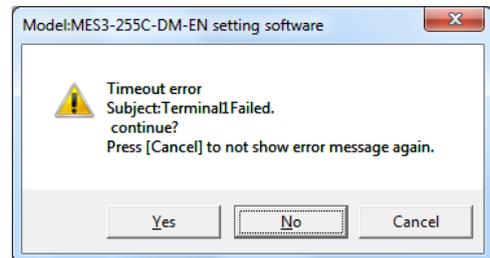


[Yes] button : Executes the connectivity check of the next terminal.

[Cancel] button : Executes the connectivity check of the next terminal.

However, error message does not appear even if error occurs.

- (4) After the connectivity check on all selected terminal is completed, the completion message appears. Click the [OK] button to back to the [Confirm terminal connection] dialog box.

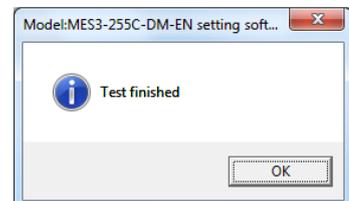

4 Checking the results of the connectivity check

The result of the connectivity check is shown in the [Result (code)] column on the [Confirm terminal connection] dialog box.

No.	Terminal name	Model name	Number of occupied station	Station No.	Result(Code)
1	Terminal1	EMU4-HD1-MB	1St.	1	Timeout error
2	Terminal2	EMU3-DP1-C	1St.	2	Timeout error
3	Terminal3-1	EMU2-RD3-C	1St.	3	Not carry out
3	Terminal3-2	EMU2-RD3-C	1St.	3	Not carry out
3	Terminal3-3	EMU2-RD3-C	1St.	3	Not carry out

CC-Link terminal

- Response received :The terminal with corresponding station No. is connected.
- Terminal transmission error (XXXXX) :The communication error, such as the terminal is not power ON, the connection is not proper, or the setting of the station number is not correct. (XXXXX refers to an error code.)
(☞ Refer to “5.15 List of error codes”.)

MODBUS terminal

- For support terminal
 - OK : Corresponding terminal is connected.
- For General purpose MODBUS terminal
 - Response received : Response from the terminal is received.
- On error
 - Communication error
 - Timeout error
 - Connection error
 } ☞ Refer to "5.16 Troubleshooting."
- MODBUS terminal error (X) : This error occurs if the terminal setting is incorrect.
(X is the error code.) ☞ Refer to "5.16 Troubleshooting."

- * If the terminal error (EXXXX) or terminal error (XXXXX) occurs, investigate the cause based on the error code provided, and then review the registration information of the terminal or check the installation condition of the terminal again.
- * If you are using the following terminals, the execution result will be different by "OK" or "response" when the connection is correct, .

Model name	Result(Code)
ME110SSR(3P4W)	ME110SSR-B(H)
ME110SSR	ME110(N)SR

Remarks

- If the CC-Link terminal or the general purpose MODBUS terminal with the appropriate station number is connected, the result of the connectivity check should be “Response received” even if the "terminal name you set" is different from the "terminal actually connected." Please be careful.
- For the MODBUS® terminal [Support terminal], if a model of support terminal that is different from the set model is connected, "Another model" is displayed, and if a model that is not supported is connected, "Not supported" is displayed.
- Connection confirmation of gernal RTU terminal will be always OK when convertor reply response.

4.10.2. Contact output operation check


This section explains the procedures in the dialog box of [Confirm contact output].

Confirming the contact output operation


This section explains the procedure to confirm the contact output operation.

1 Displaying the [Confirm contact output] dialog box

- (1) Click [Confirm contact output] in the tree menu on the [Test] dialog box.
The following confirmation message appears. Check the connection with the EcoWebServerIII, and then click the [OK] button.

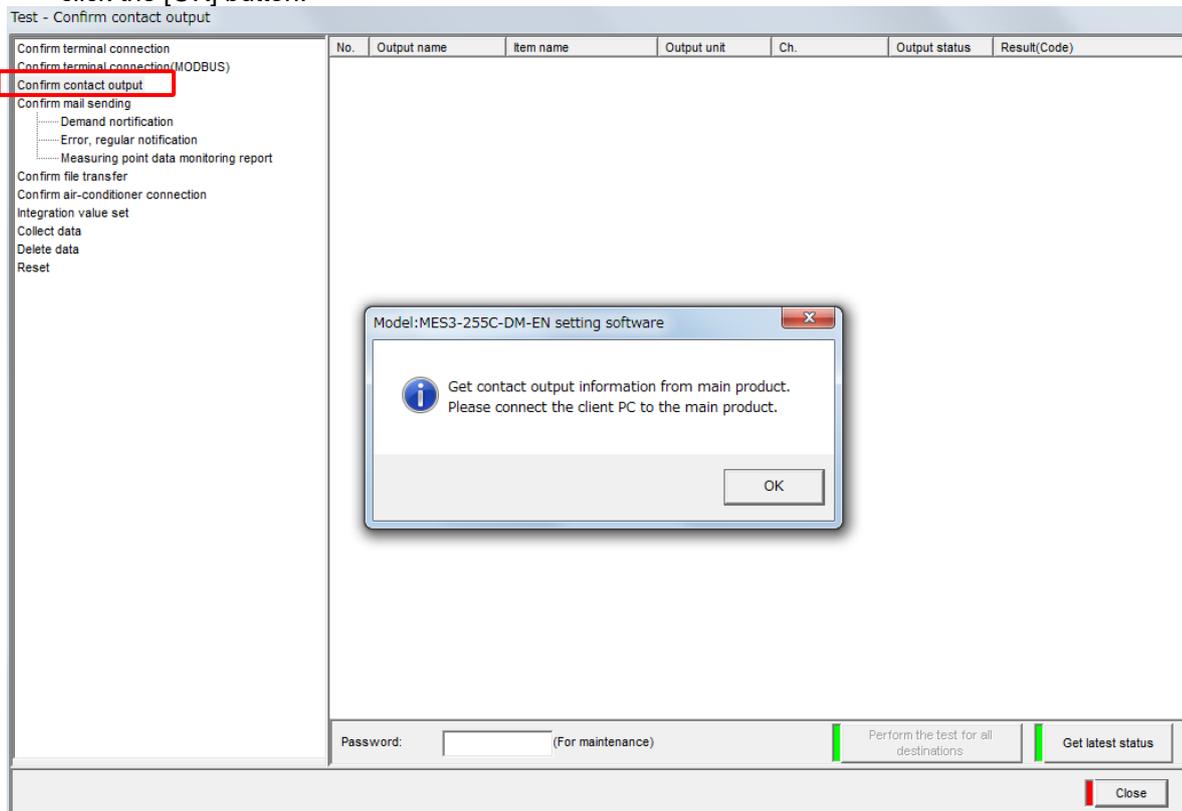

- (2) When the retrieval of the contact output information from the EcoWebServerIII is completed, the completion message appears. Click the [OK] button.

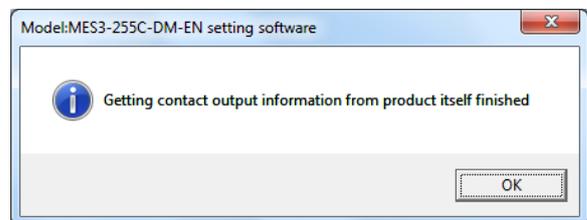


2 Testing all output destinations

- (1) Type in the maintenance password.




(The default maintenance password is “ecopass”.)

- (2) Click the [Perform the test for all destinations] button on the [Confirm contact output] dialog box.

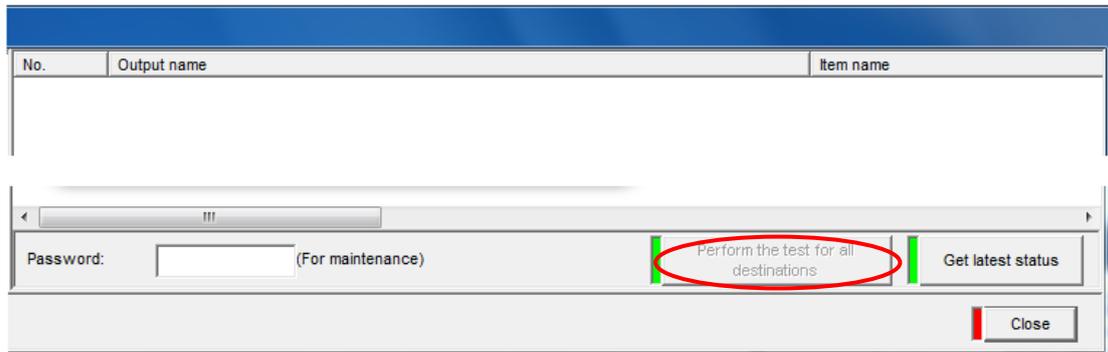


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

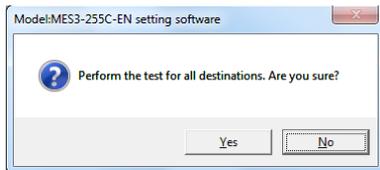

[Yes] button : Executes the contact output operation check.


[No] button : Cancels the contact output operation check, and back to the [Confirm contact output] dialog box.

- (4) A dialog box that indicates the contact output operation check is in progress will appear. If you want to cancel it, click the [Abort] button.

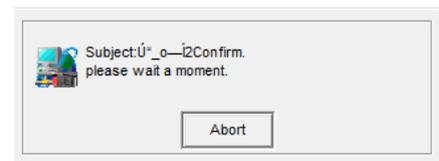

- * If the IP address of the EcoWebServerIII main unit is not correct, a LAN cable is not connected, or the EcoWebServerIII is not powered on, the message on the right will appear.

Click the [No] button, and then check the IP address of the EcoWebServerIII, the LAN cable connection, etc., and the power.

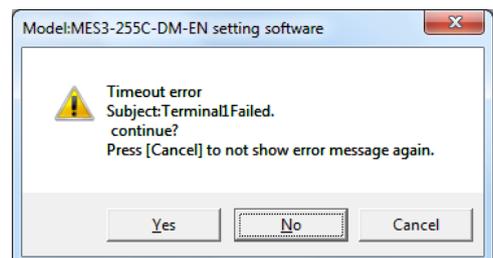


[Yes] button : Executes the operation check of the next output destination.

[Cancel] button : Executes the operation check of the next output destination.

However, error message does not appear even if error occurs.

- (5) After the operation check on every registered output destination is completed, the completion message appears. Click the [OK] button to back to the [Confirm contact output] dialog box.

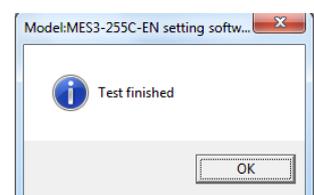

3 Testing a selected destination

- (1) Type in the maintenance password.




(The default maintenance password is “ecopass”.)

- (2) Select the line of the output destination to confirm, and click the right-click menu of the [Perform the test for the selected row].

No.	Output name	Item name	Output unit	Ch.	Output status	Result(Code)
1	Contact output1	System:Memory card error,Syst...	Internal output unit	0	ON	Execution completion
2	Contact output2		Internal output unit	1	OFF	Not carry out
3	Contact output3	Demand alarm:Limit, Fixed alarm	Internal output unit	2	OFF	Not carry out
4	Contact output4	System:Memory card error,Syst...	Internal output unit	3	ON	Not carry out


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

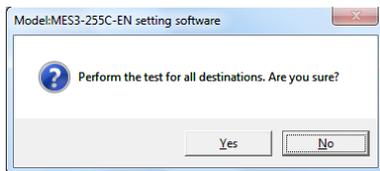

[Yes] button : Executes the contact output operation check.


[No] button : Cancels the contact output operation check, and back to the [Contact output operation check] dialog box.

- (4) A dialog box that indicates the contact output operation check is in progress will appear. If you want to cancel it, click the [Abort] button.

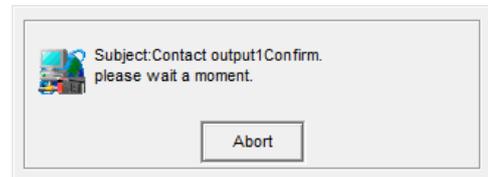

- * If the IP address of the EcoWebServerIII main unit is not correct, a LAN cable is not connected, or the EcoWebServerIII is not powered on, the message on the right will appear.

Click the [No] button, and then check the IP address of the EcoWebServerIII, the LAN cable connection, etc., and the power.

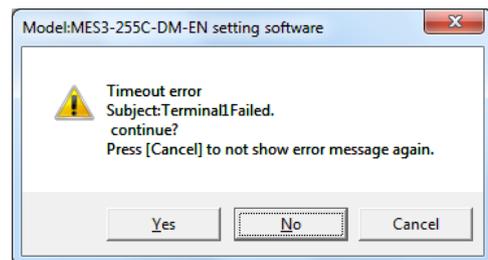


[Yes] button : Executes the operation check of next output destination.

[Cancel] button : Executes the operation check of next output destination.

However, error message does not appear even if error occurs.

- (5) After the operation check on all selected output destination is completed, the completion message appears. Click the [OK] button to back to the [Confirm contact output] dialog box.

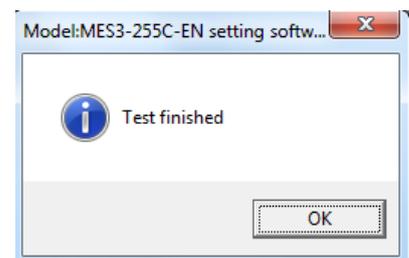

4 Checking the results of execution

The results of the operation confirmation are displayed in the Output status and Result (code) columns on the [Confirm contact output] dialog box.

No.	Output name	Item name	Output unit	Ch.	Output status	Result(Code)

The results of execution are showed as below:

Contact status : Displays OFF and ON.
Results (code) : "Execution completion", "Fail", "Communication error",
"Timeout error", "Connection error"

- * If the execution results are not [Execution completion], investigate the cause based on the error code provided, and then review the registration information of the terminal or check the installation condition of the terminal again.

Remarks

- The contact output operation check execute tests by retrieving the latest contact output status, and changing to OFF if ON, and ON if OFF.
- Contact output of the following have been set in the monitoring notification registration must be checked.

Upper/lower limit monitoring, Operating status monitoring, Specific consumption target value monitoring, and Energy plan value monitoring.


(Refer to [Registering new contact outputs -> Selecting the contact output conditions -> (2)Selecting the detail item <Monitoring:Limit, Monitoring:Status, Monitoring:Sp-Cons., Monitoring:Energy>

Retrieving the latest contact output status


The latest contact output status is retrieved from the EcoWebServerIII and displayed.

1 Retrieving latest contact output status

- (1) Click the [Get latest status] button on the [Confirm contact output] dialog box.

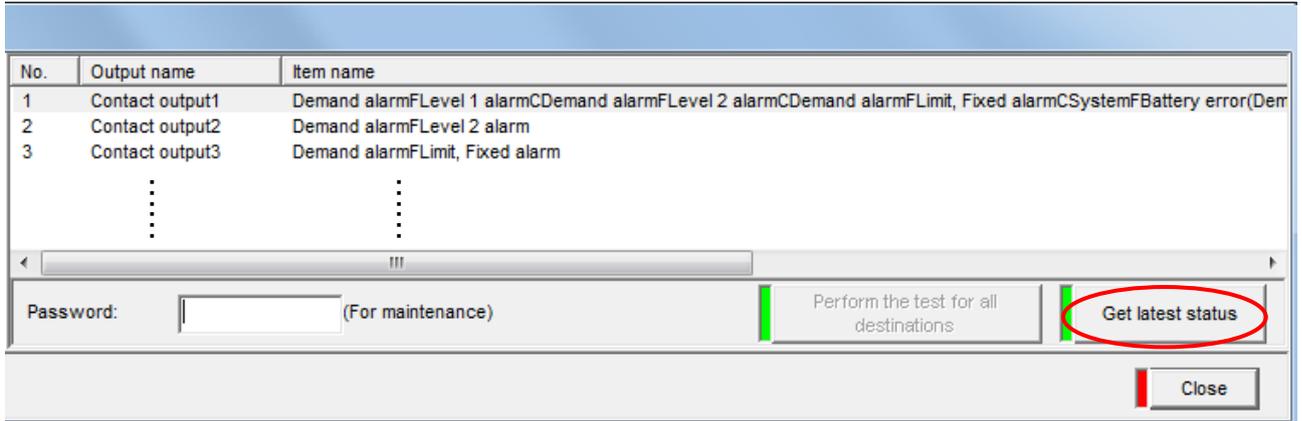


- (2) An execution confirmation message appears. Click [Yes] to execute the retrieval.

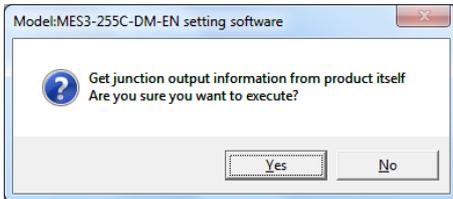


[Yes] button : Executes the contact output status retrieval process.

[No] button : Cancels the contact output status retrieval, and back to the [Contact output operation check] dialog box.

- (3) A dialog box that indicates the contact output status retrieval process is in progress will appear. If you want to cancel it, click the [Abort] button.

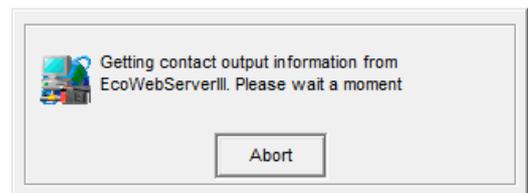

- (4) After the retrieval on all contact output status is completed, the completion message appears. Click the [OK] button to back to the [Confirm contact output] dialog box.

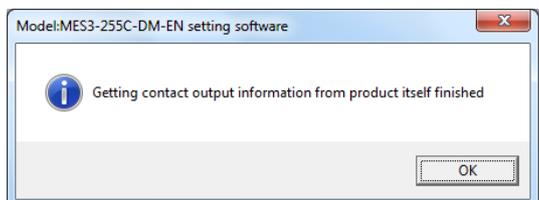

4.10.3. Demand notification (only models with demand control function)

This section explains the operation procedures in the dialog box of [Demand notification].


* The Demand control and notification check is available only for the EcoWebServerIII with demand control function.

Confirming the demand control and notification operation

This section explains the procedure to confirm mail transfer for the demand control and notification.

1 Displaying the [Demand notification] dialog box

Click [Demand notification] in the tree menu on the [Test] dialog box.

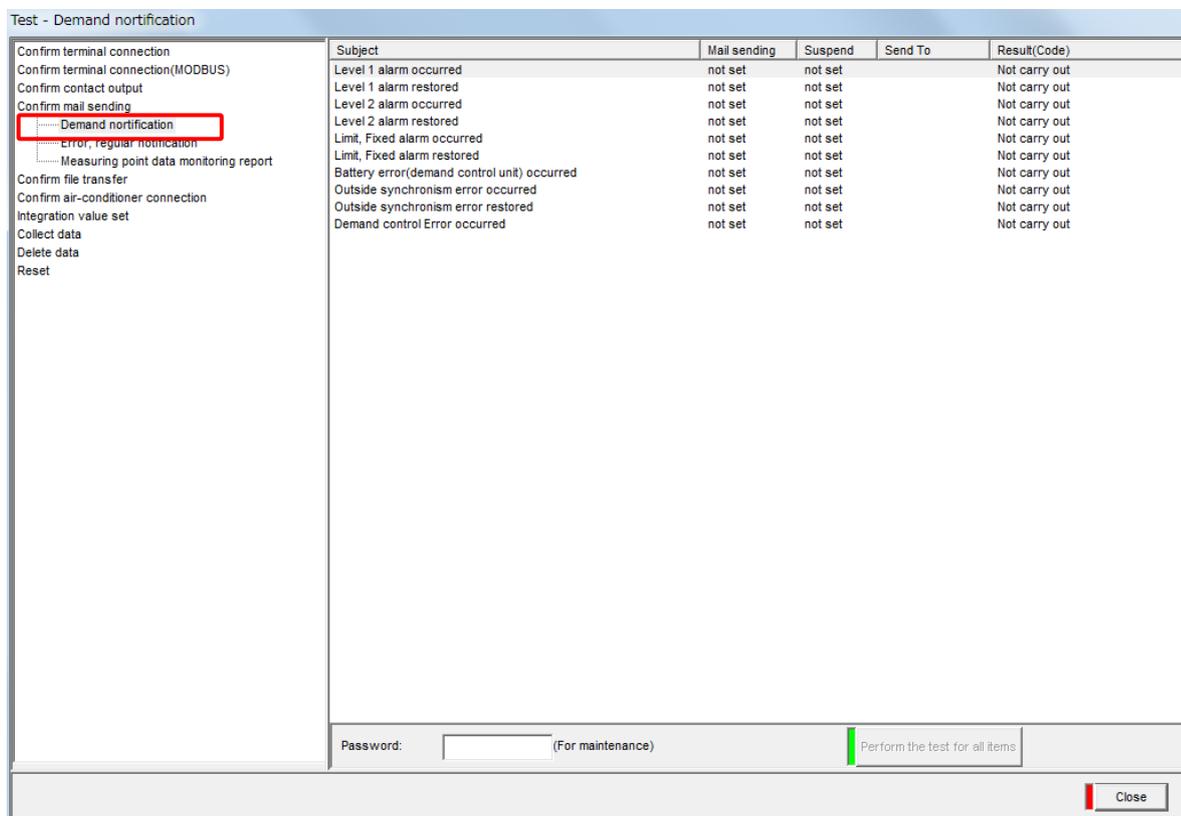


2 Testing all items

- (1) Type in the maintenance password.




(The default maintenance password is “ecopass”.)

- (2) Click [Perform the test all items] button on the [Demand notification] dialog box.

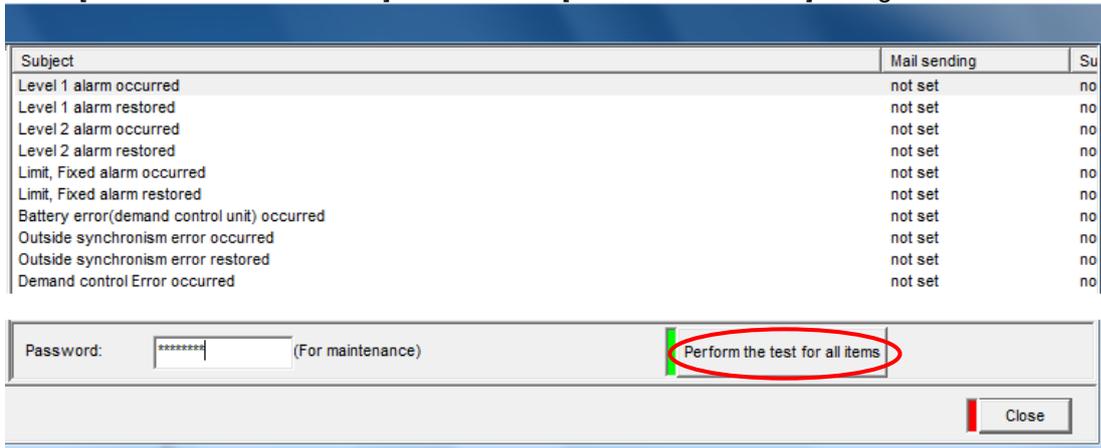

- (3) An execution confirmation message appears. Click [Yes] to execute the test.

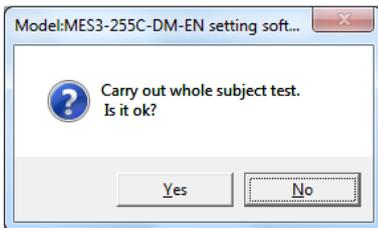

[Yes] button : Executes the demand control and notification check.


[No] button : Cancels the demand control and notification check, and back to the [Demand notification] dialog box.

- (4) A dialog box that indicates the demand control and notification check is in progress will appear. If you want to cancel it, click the [Abort] button.



- * If the demand control and notification check fails, the message on the right will appear.

Click the [No] button and check the SMTP server connection settings, and the LAN cable connection, etc.

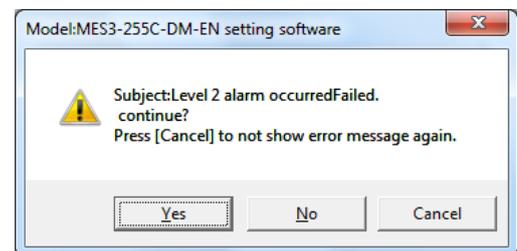


[Yes] button : Executes the notification check of the next item.

[Cancel] button : Executes the notification check of the next item.


However, error message does not appear even if error occurs.

- (5) After the notification check on every registered item is completed, the completion message appears. Click the [OK] button to back to the [Demand notification] dialog box.

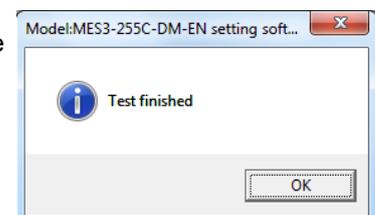

3 Testing a selected item

- (1) Type in the maintenance password.

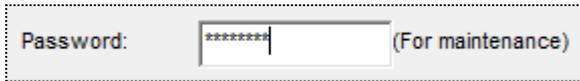


(The default maintenance password is “ecopass”.)

- (2) Select the line of the output destination to confirm, and click the right-click menu of the [Perform the test for the selected row].

Subject	Mail sending	Su
Level 1 alarm occurred	not set	no
Level 1 alarm restored	not set	no
Level 2 alarm occurred	not set	no
Level 2 alarm restored	not set	no
Limit, Fixed alarm occurred	not set	no
Limit, Fixed alarm restored	not set	no
Battery error(demand control unit) occurred	not set	no
Outside synchronism error occurred	not set	no
Outside synchronism error restored	not set	no
Demand control Error occurred	not set	no

- (3) An execution confirmation message appears. Click [Yes] to execute the test.

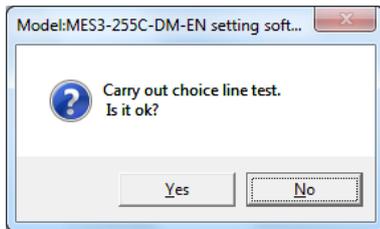


[Yes] button : Executes the demand control and notification check.

[No] button : Cancels the demand control and notification check, and back to the [Demand notification] dialog box.

- (4) A dialog box that indicates the demand control and notification check is in progress will appear. If you want to cancel it, click the [Abort] button.



- * If the Demand control and notification check fails, the message on the right will appear. Click the [No] button and check the SMTP server connection settings, and the LAN cable connection, etc.

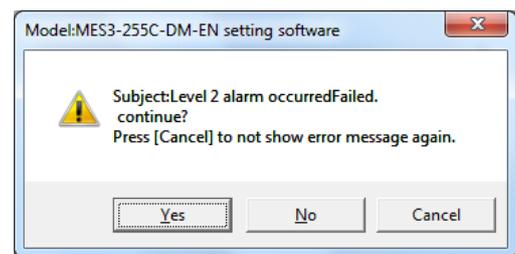


[Yes] button : Executes the notification check of the next item.

[Cancel] button : Executes the notification check of the next item.

However, error message does not appear even if error occurs.

- (5) After the notification check on all selected item is completed, the completion message appears. Click the [OK] button to back to the [Demand notification] dialog box.

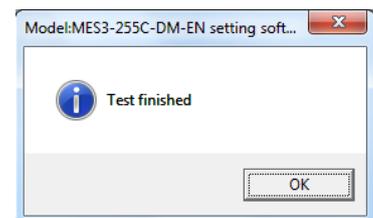

4 Checking the results of execution

The results of the operation confirmation are displayed in the Result (code) column on the [Demand notification] dialog box.

Item	Subject	Mail sending	Suspend	Send To	Result(Code)
Confirm terminal connection	Level 1 alarm occurred	not set	not set		Execution completion
Confirm terminal connection(MODBUS)	Level 1 alarm restored	not set	not set		Execution completion
Confirm contact output	Level 2 alarm occurred	not set	not set		Not carry out
Confirm mail sending	Level 2 alarm restored	not set	not set		Not carry out
Demand notification	Limit, Fixed alarm occurred	not set	not set		Not carry out
Error, regular notification	Limit, Fixed alarm restored	not set	not set		Not carry out
Measuring point data monitoring report	Battery error(demand control unit) occurred	not set	not set		Not carry out
Confirm file transfer	Outside synchronism error occurred	not set	not set		Not carry out
Confirm air-conditioner connection	Outside synchronism error restored	not set	not set		Not carry out
Integration value set	Demand control Error occurred	not set	not set		Not carry out
Collect data					

The results of execution are showed as below:

- When each item's test mail transfer ends normally
Result (code) : Execution completion
- When each item's test mail transfer fails
Result (code) : Fail(error code)

Remarks

- If completed, check the contents of the sent mail. The following information is sent in the test mail.

Item	Contents
From:	Send source address: Own mail address set in "Mail notification setting SMTP server setting"
To:	Send destination address: Send destination address set in "Mail notification setting Demand notification"
Subject:	Mail subject: Subject set in "Mail notification setting Demand notification" "TEST:" is always inserted before the subject to indicate a test mail.
Body:	Mail text: Text set in "Mail notification setting Demand notification"

4.10.4. Error, regular notification check


This section explains the operation procedures in the dialog box of [Error, regular notification].

Confirming the error, regular notification operation

This section describes the procedures for confirming the error, regular report mail transfer.


1 Displaying the [Error, regular notification] dialog box

Click [Error, regular notification] in the tree menu on the Test and Adjustment function dialog box.

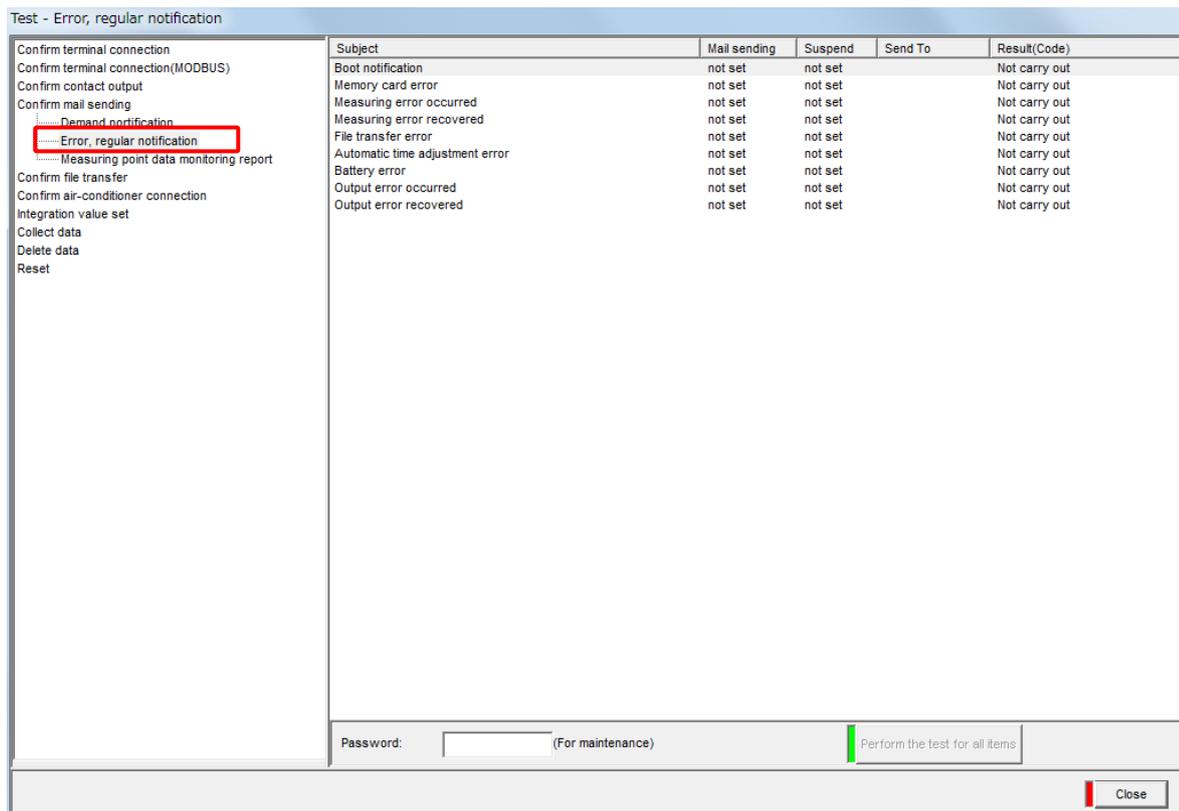


2 Testing all items

- (1) Type in the maintenance password.

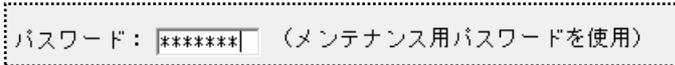


(The default maintenance password is “ecopass”.)

- (2) Click [Perform the test all items] button on the [Error, regular notification] dialog box.

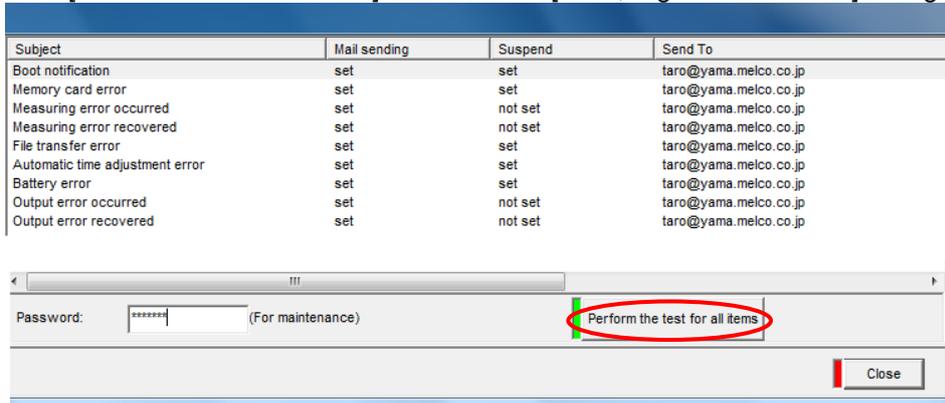


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

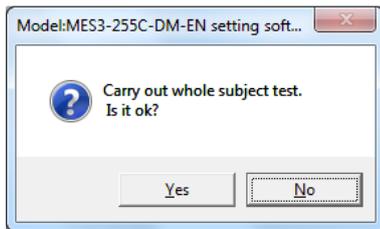

[Yes] button : Executes the error, regular notification check.


[No] button : Cancels the error, regular notification check, and back to the [Error, regular notification] dialog box.

- (4) A dialog box that indicates the error, regular notification check is in progress will appear. If you want to cancel it, click the [Abort] button.

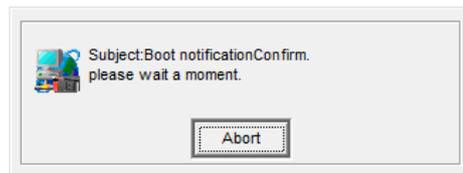

- * If the error, regular notification check fails, the message on the right will appear.

Click the [No] button and check the SMTP server connection settings, and the LAN cable connection, etc.

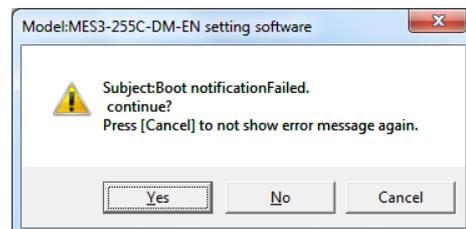


[Yes] button : Executes the notification check of the next item.

[Cancel] button : Executes the notification check of the next item.


However, error message does not appear even if error occurs.

- (5) After the notification check on every registered item is completed, the completion message appears. Click the [OK] button to back to the [Error, regular notification] dialog box.

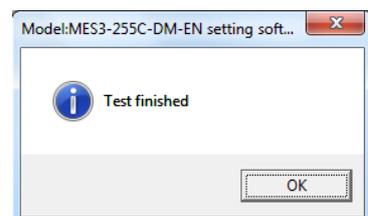

3 Testing a selected item

- (1) Type in the maintenance password.

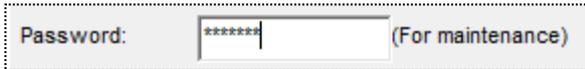


(The default maintenance password is “ecopass”.)

- (2) Select the line of the output destination to confirm, and click the right-click menu of the [Perform the test for the selected row].

Subject	Mail sending	Suspend	Send To
Boot notification	set	not set	aaa@yama.melco.co.jp
Memory card error	set	not set	aaa@yama.melco.co.jp
Measuring error occurred	set	not set	aaa@yama.melco.co.jp
Measuring error recovered			aaa@yama.melco.co.jp
File transfer error			aaa@yama.melco.co.jp
Automatic time adjustment error	set	not set	aaa@yama.melco.co.jp
Battery error	set	not set	aaa@yama.melco.co.jp
Outout error occurred	not set	not set	aaa@vama.melco.co.id


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

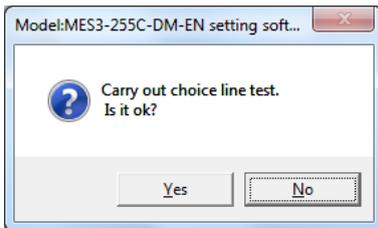

[Yes] button : Executes the error, regular notification check.


[No] button : Cancels the error, regular notification check, and back to the [Error, regular notification] dialog box.

- (4) A dialog box that indicates the error, regular notification check is in progress will appear. If you want to cancel it, click the [Abort] button.

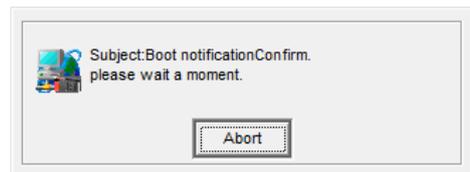

* If the error, regular notification check fails, the message on the right will appear.

Click the [No] button and check the SMTP server connection settings, and the LAN cable connection, etc.

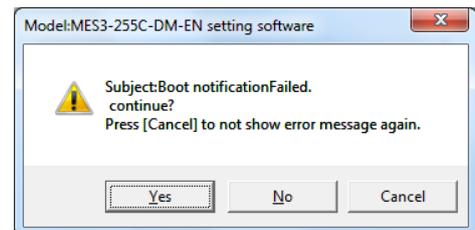


[Yes] button : Executes the notification check of the next item.

[Cancel] button : Executes the notification check of the next item.

However, error message does not appear even if error occurs.

- (5) After the notification check on all selected item is completed, the completion message appears. Click the [OK] button to back to the [Error, regular notification] dialog box.

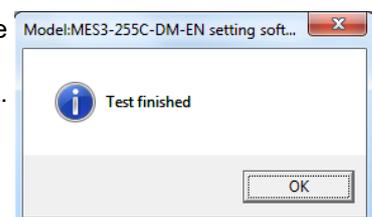

4 Checking the results of execution

The results of the operation confirmation are displayed in the Result (code) column on the [Error, regular notification] dialog box.

Subject	Mail sending	Suspend	Send To	Result(Code)
Boot notification	set	set	taro@yama.melco.co.jp	Abort
Memory card error	set	set	taro@yama.melco.co.jp	Abort
Measuring error occurred	set	not set	taro@yama.melco.co.jp	Abort
Measuring error recovered	set	not set	taro@yama.melco.co.jp	Abort
File transfer error	set	set	taro@yama.melco.co.jp	Not carry out
Automatic time adjustment error	set	set	taro@yama.melco.co.jp	Not carry out
Battery error	set	set	taro@yama.melco.co.jp	Not carry out
Output error occurred	set	not set	taro@yama.melco.co.jp	Not carry out
Output error recovered	set	not set	taro@yama.melco.co.jp	Not carry out

The results of execution are showed as below:

- When each item's test mail transfer ends normally
Result (code) : Execution completion
- When each item's test mail transfer fails
Result (code) : Fail(error code)

Remarks

- If completed, check the contents of the sent mail. The following information is sent in the test mail.

Item	Contents
From:	Send source address: Own mail address set in "Mail notification setting SMTP server setting"
To:	Send destination address: Send destination address set in "Mail notification setting Unit error notification, regular report"
Subject:	Mail subject: Subject set in "Mail notification setting Unit error notification, regular report" "TEST:" is always inserted before the subject to indicate a test mail.
Body:	Mail text: Text set in "Mail notification setting Unit error notification, regular report"

4.10.5. Measuring point data monitoring report check


This section explains the operation procedures in the dialog box of [Measuring point data monitoring report].

Confirming the measuring point data monitoring report operation

This section explains the procedure to confirm mail transfer for the measuring point data monitoring and report.

1 Displaying the [Measuring point data monitoring report] dialog box

Click [Measuring point data monitoring report] in the tree menu on the [Test] dialog box.

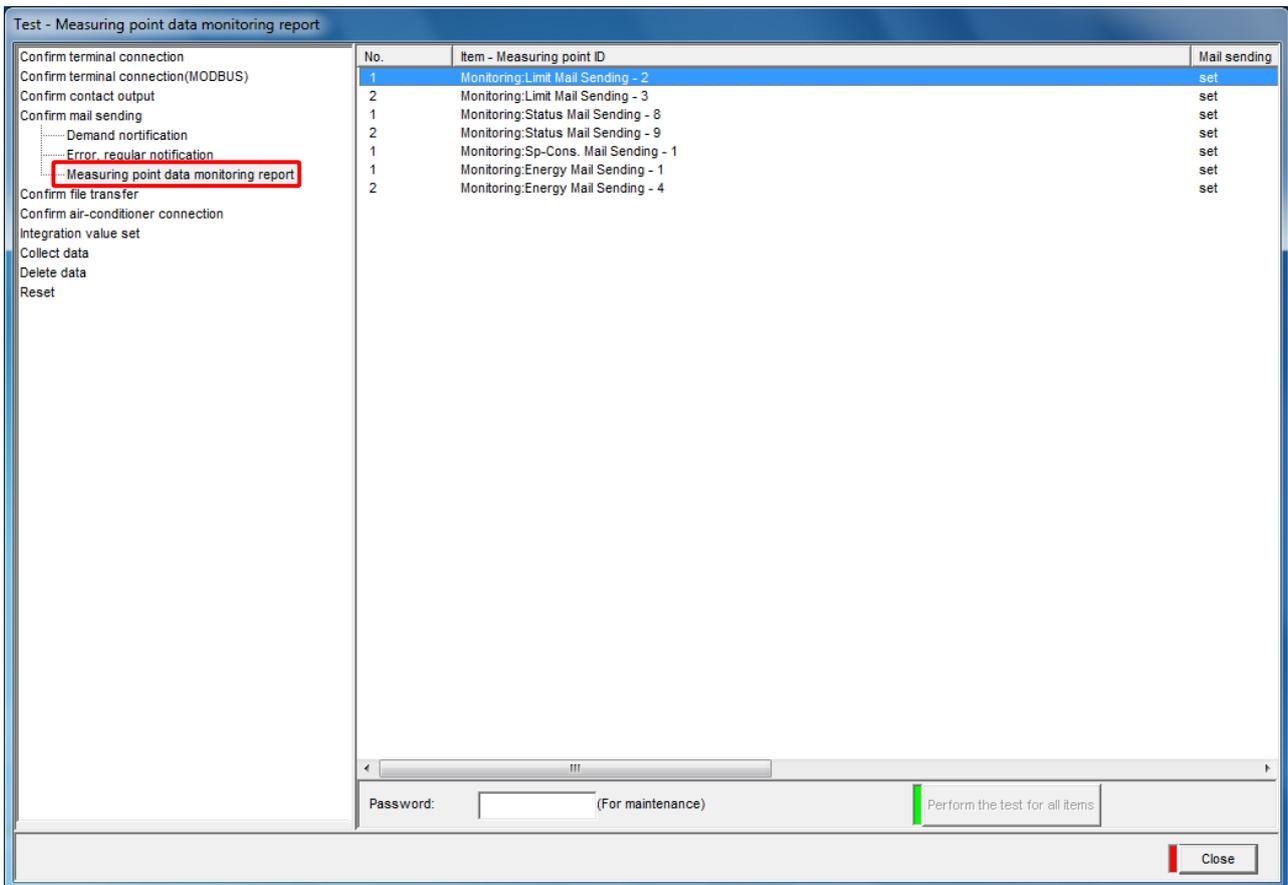


2 Testing all items

- (1) Enter the maintenance password.


パスワード : ***** (メンテナンス用パスワードを使用)

(The default maintenance password is “ecopass”.)

- (2) Click the [Perform the test for all items] button on the [Measuring point data monitoring report] dialog box.

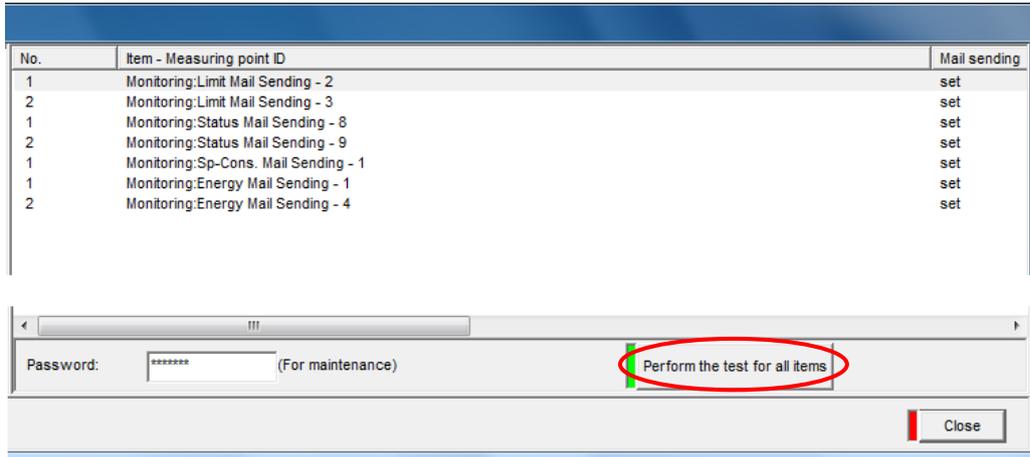


- (3) An execution confirmation message appears. Click [Yes] button to execute the test.

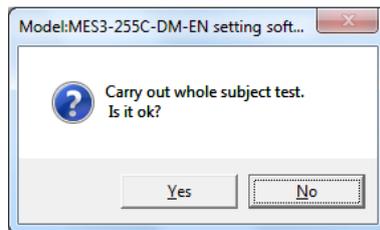


[Yes] button : Executes the measuring point data monitoring and report check.

[No] button : Cancels the measuring point data monitoring and report check, and back to the [Measuring point data monitoring report] dialog box.

- (4) A dialog box that indicates the measuring point data monitoring and report check is in progress will appear. If you want to cancel it, click the [Abort] button.

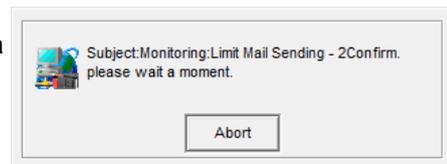

- * If the measuring point data monitoring and report check fails, the message on the right will appear. Click the [No] button and check the SMTP server connection settings, and the LAN cable connection, etc.

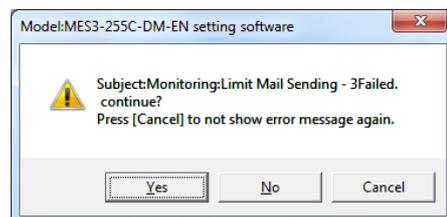

[Yes] button : Executes the report check of the next item.

[Cancel] button : Executes the report check of the next item.


However, error message does not appear even if error occurs.

- (5) After the report check on every registered item is completed, the completion message appears. Click the [OK] button to back to the [Measuring point data monitoring report] dialog box.




3 Testing a selected item

- (1) Enter the maintenance password.

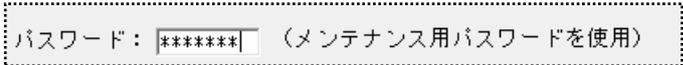


(The default maintenance password is “ecopass”.)

- (2) Select the line of the output destination to confirm, and click the right-click menu of the [Perform the test for the selected row].

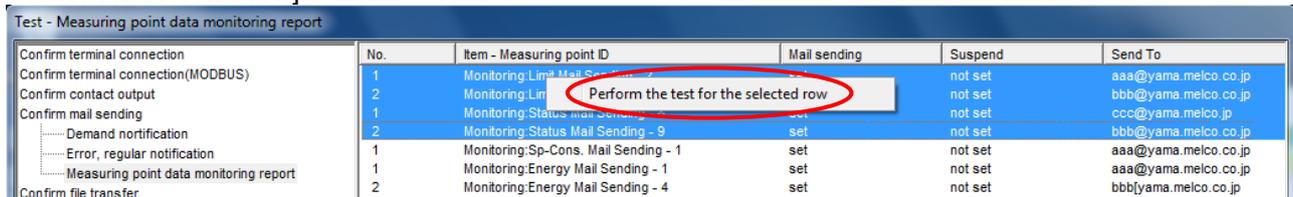


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

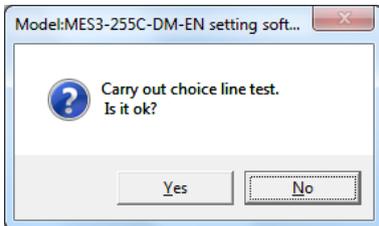


[Yes] button : Executes the measuring point data monitoring and report check.

[No] button : Cancels the measuring point data monitoring and report check, and back to the [Measuring point data monitoring report] dialog box.

- (4) A dialog box that indicates the measuring point data monitoring and report check in progress will appear. If you want to cancel it, click the [Abort] button.

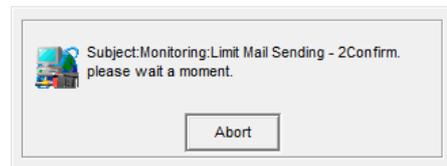

- * If the measuring point data monitoring and report check fails, the message on the right will appear. Click the [No] button and check the SMTP server connection settings, and the LAN cable connection, etc.

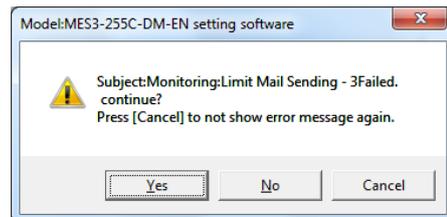


[Yes] button : Executes the report check of the next item.

[Cancel] button : Executes the report check of the next item.

However, error message does not appear even if error occurs.

- (5) After the report check on all selected item is completed, the completion message appears. Click the [OK] button to back to the [Measuring point data monitoring report] dialog box.

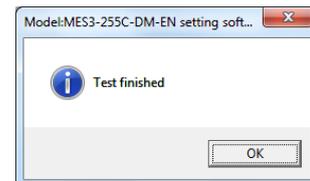

4 Confirming the execution results

The results of the operation confirmation are displayed in the Result (code) column on the [Measuring point data monitoring report] dialog box.

No.	Item - Measuring point ID	Mail sending	Suspend	Send To	Result(Code)
1	Monitoring:Limit Mail Sending - 2	set	not set	aaa@yama.melco.co.jp	Execution completion
2	Monitoring:Limit Mail Sending - 3	set	not set	bbb@yama.melco.co.jp	Fail(-8002)
1	Monitoring:Status Mail Sending - 8	set	not set	ccc@yama.melco.jp	Fail(-8002)
2	Monitoring:Status Mail Sending - 9	set	not set	bbb@yama.melco.co.jp	Fail(-8002)
1	Monitoring Sp-Cons. Mail Sending - 1	set	not set	aaa@yama.melco.co.jp	Not carry out
1	Monitoring Energy Mail Sending - 1	set	not set	aaa@yama.melco.co.jp	Not carry out
2	Monitoring Energy Mail Sending - 4	set	not set	bbb@yama.melco.co.jp	Not carry out

The results of execution are showed as below:

- When each item's test mail transfer ends normally
Result (code) : Execution completion
- When each item's test mail transfer fails
Result (code) : Fail (error code)

Remarks

- If completed, check the contents of the sent mail. The following information is sent in the test mail.

Item	Contents
From:	Send source address: Own mail address set in "Mail report setting SMTP server setting"
To:	Send destination address: Send destination address set in "Mail report setting Upper/lower limit monitoring and report, Operation status monitoring and report, Specific consumption target value monitoring and report, Energy plan value monitoring and report".
Subject:	Mail subject: Subject set in Mail report setting Upper/lower limit monitoring and report, Operation status monitoring and report, Specific consumption target value monitoring and report, Energy plan value monitoring and report". "TEST:" is always inserted before the subject to indicate a test mail.
Body:	Mail text: Text set in Mail report setting "Mail report setting Upper/lower limit monitoring and report, Operation status monitoring and report, Specific consumption target value monitoring and report, Energy plan value monitoring and report".

4.10.6. File automatic transfer check


This section explains the operation procedures in the dialog box of [Confirm file transfer].

Confirming the file automatic transfer operation

This section explains the procedures to confirm the file automatic transfer.

1 Displaying the [Confirm file transfer] dialog box

Click [Confirm file transfer] in the tree menu on the [Test] dialog box.

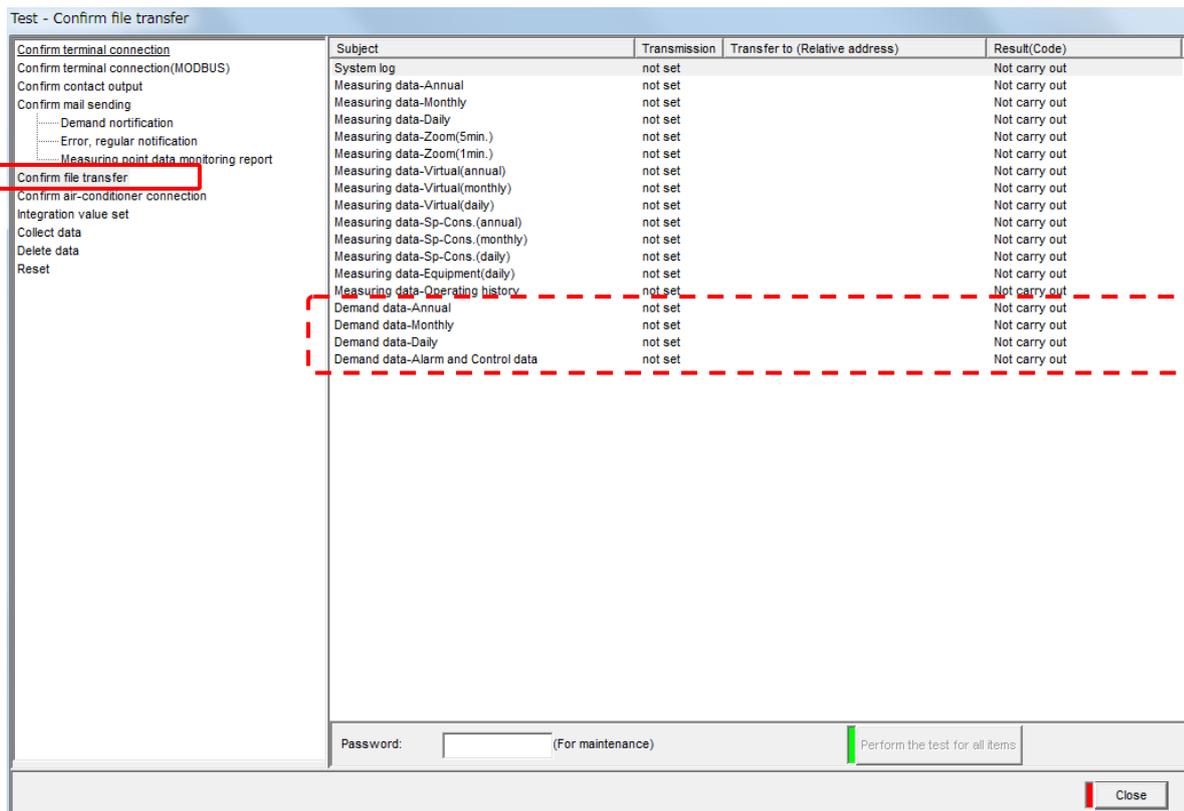

* The demand data is not displayed if the EcoWebServerIII does not have the demand control function.


2 Testing all items

- (1) Type in the maintenance password.




(The default maintenance password is “ecopass”.)

- (2) Click [Perform the test for all items] button on the [Confirm file transfer] dialog box.

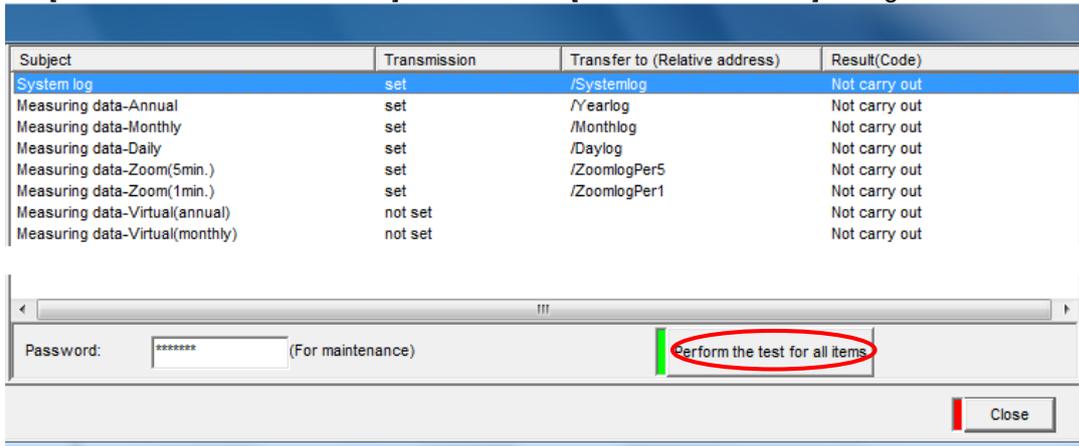


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

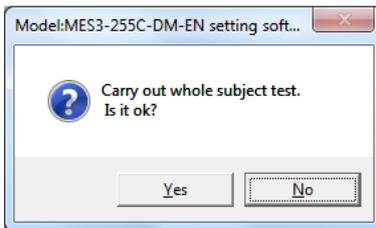

[Yes] button : Executes the file automatic transfer check.


[No] button : Cancels the file automatic transfer check, and back to the [Confirm file transfer] dialog box.

- (4) A dialog box that indicates the file automatic transfer check is in progress will appear. If you want to cancel it, click the [Abort] button.

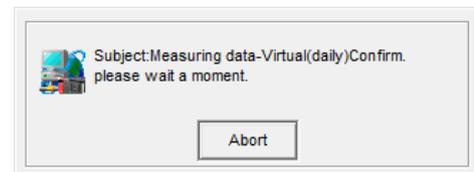

- * If the file automatic transfer check fails, the message on the right will appear.

Click the [No] button and check the FTP server connection settings, and the LAN cable connection, etc.

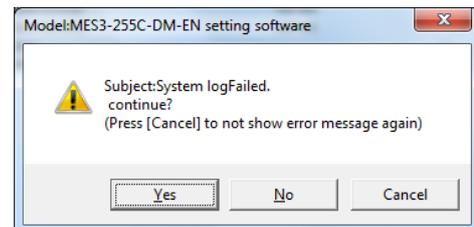

[Yes] button : Executes the transfer check of the next item.

[Cancel] button : Executes the transfer check of the next item.

However, error message does not appear even if error occurs.

- (5) After the automatic transfer check on every registered item is completed, the completion message appears. Click the [OK] button to return to the [Confirm file transfer] dialog box.



3 Testing a selected item

- (1) Type in the maintenance password.


パスワード： (メンテナンス用パスワードを使用)

(The default maintenance password is “ecopass”.)

- (2) Select the line of the output destination to confirm, and click the right-click menu of the [Perform the test for the selected row].

Subject	Transmission	Transfer to (Relative address)	Result(Code)
System log			Not carry out
Measuring data-Annual			Not carry out
Measuring data-Monthly	set	/Monthlog	Not carry out
Measuring data-Daily	set	/Daylog	Not carry out
Measuring data-Zoom(5min.)	set	/ZoomlogPer5	I Not carry out
Measuring data-Zoom(1min.)	set	/ZoomlogPer1	I Not carry out
Measuring data-Virtual(annual)	not set		I Not carry out
Measuring data-Virtual(monthly)	not set		I Not carry out


- (3) An execution confirmation message appears. Click [Yes] to execute the test.

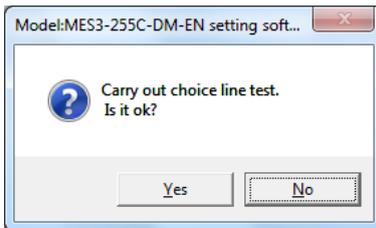


[Yes] button : Executes the file automatic transfer check.

[No] button : Cancels the file automatic transfer check, and back to the [Confirm file transfer] dialog box.

- (4) A dialog box that indicates the file automatic transfer check is in progress will appear. If you want to cancel it, click the [Abort] button.

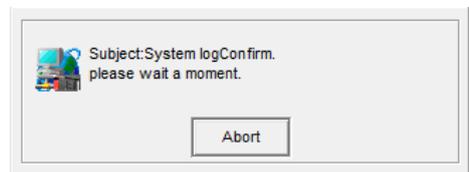

- * If the file automatic transfer check fails, the message on the right will appear. Click the [No] button and check the FTP server connection settings, and the LAN cable connection, etc.

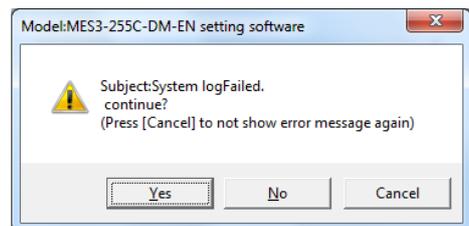


[Yes] button : Executes the transfer check of the next item.

[Cancel] button : Executes the transfer check of the next item.

However, error message does not appear even if error occurs.

- (5) After the automatic transfer check on all selected item is completed, the completion message appears. Click the [OK] button to return to the [Confirm file transfer] dialog box.

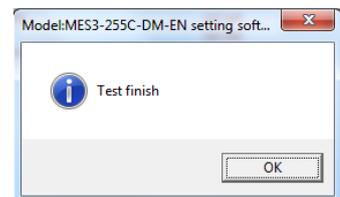

4 Confirming the execution results

The results of the operation confirmation are displayed in the Execution results (code) column on the [Confirm file transfer] dialog box.

	Subject	Transmission	Transfer to (Relative address)	Result(Code)
Confirm terminal connection	System log	set	/Systemlog	Fail(-8003)
Confirm terminal connection(MODBUS)	Measuring data-Annual	set	/Yearlog	Fail(-8003)
Confirm contact output	Measuring data-Monthly	set	/Monthlog	Fail(-8003)
Confirm mail sending	Measuring data-Daily	set	/Daylog	Fail(-8003)
Demand notification	Measuring data-Zoom(5min.)	set	/ZoomlogPer5	Not carry out
Error, regular notification	Measuring data-Zoom(1min.)	set	/ZoomlogPer1	Not carry out
Measuring point data monitoring report	Measuring data-Virtual(annual)	not set		Not carry out
Confirm file transfer				

The results of execution are showed as below:

- When each item's test mail transfer ends normally
Result (code) : Succeed
- When each item's test mail transfer fails
Result (code) : Fail (error code)

Remarks

- If successful, check the FTP server's transfer destination folder. The contents of the transferred file are listed below.

Item	Contents
Annual data	TEST_y.csv
Monthly data	TEST_m.csv
Daily data	TEST_d.csv
Zoom (5-minute) data	TEST_z5.csv
Zoom (1-minute) data	TEST_z1.csv
Virtual data (annual)	TEST_v_y.csv
Virtual data (monthly)	TEST_v_m.csv
Virtual data (daily)	TEST_v_d.csv
Specific consumption data (annual)	TEST_b_y.csv
Specific consumption data (monthly)	TEST_b_m.csv
Specific consumption data (daily)	TEST_b_d.csv
Equipment data (daily)	TEST_f_d.csv
Operation history data	TEST_di.csv
System log	TEST_s.csv
Demand data (annual)	TEST_d_y.csv
Demand data (monthly)	TEST_d_m.csv
Demand data (daily)	TEST_d_d.csv
Demand alarm and control history data	TEST_a.csv

* Do not test at the timing of [file transfer time] (set in [4.8.12 FTP server setting]). There is a possibility that the file transfer is overlap, and not transferred correctly.

4.10.7. Air-controller connection check (only models with demand control function)

This section explains the procedures for making an external transmission to the air-conditioner controller for each energy saving level.


- * The Air-controller connection check is available only for the EcoWebServerIII with demand control function.
- * This does not need to be set when not using the coordinated function with the air-conditioner.

Confirming the connection with air-conditioner controller

This section explains the procedure to confirm the connection with the air-conditioner controller.


1 Displaying the [Confirm air-conditioner connection] dialog box

Click [Confirm air-conditioner connection] in the tree menu on the [Test] dialog box.

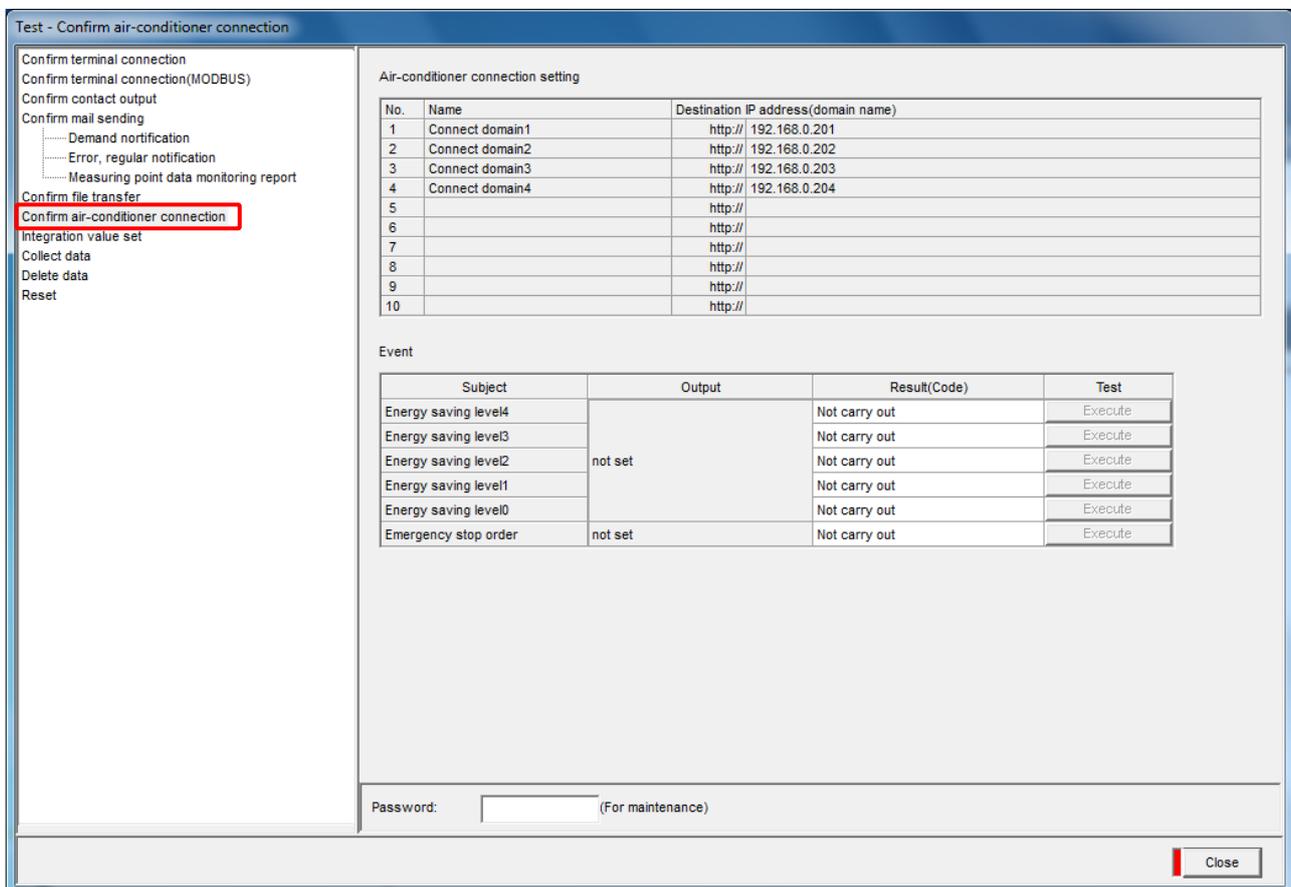

2 Testing the external transmission

- (1) Type in the maintenance password.

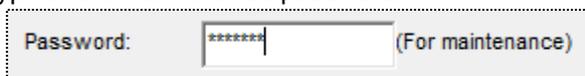


(The default maintenance password is "ecopass".)

(2) Click the [Execute] button for items to send.

Event			
Subject	Output	Result(Code)	Test
Energy saving level4	not set	Not carry out	Execute
Energy saving level3		Not carry out	Execute
Energy saving level2		Not carry out	Execute
Energy saving level1		Not carry out	Execute
Energy saving level0		Not carry out	Execute
Emergency stop order	not set	Not carry out	Execute


The confirmation screen is displayed. Click [Yes].
 [Yes]: Execute the test.
 [No]: Cancel the test.

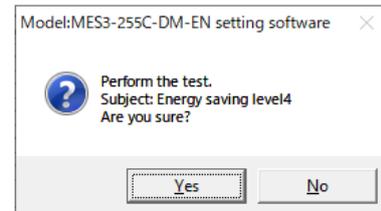

(3) A dialog box that indicates the air-controller connection check is in progress will appear. If you want to cancel it, click the [Abort] button.



* If external transmission fails, the message on the right will appear. Click the [OK] button and check the air-controller connection settings, and the LAN cable connection, etc.

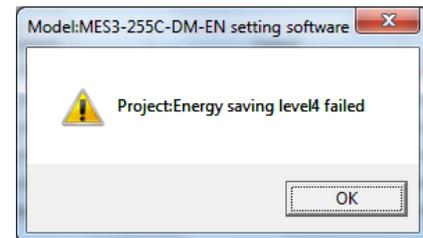

3 Confirming the execution results

The results of the operation confirmation are displayed in the Execution results column on the [Confirm air-conditioner connection] dialog box.

Event			
Subject	Output	Result(Code)	Test
Energy saving level4	not set	Fail(-8005)	Execute
Energy saving level3		Not carry out	Execute
Energy saving level2		Not carry out	Execute
Energy saving level1		Not carry out	Execute
Energy saving level0		Not carry out	Execute
Emergency stop order	not set	Not carry out	Execute

The results of execution are showed as below:

- When external transmission ends normally : Succeed
 - When external transmission fails : Fail(error code)
- * The transmitted file is a test file for confirming the operation.

4.10.8. Integrated count value settings (only models with demand control function)

This section explains the integrated count value settings.


- * The integrated count value setting is available only for the EcoWebServerIII with demand control function.
- * Do not set an integrated value just before or after the hour or half hour). If the integrated value is changed during operation, an abnormally large value may be displayed for the electric energy (30-minute rate, daily rate, monthly rate).

Setting the integrated count value

This section explains the procedures to set the electric energy for each time zone.


1 Displaying the [Integration value set] screen

- (1) Click [Integration value set] in the tree menu on the [Test] dialog box. The following confirmation message will appear. Click [OK] after checking the connection with the EcoWebServerIII.

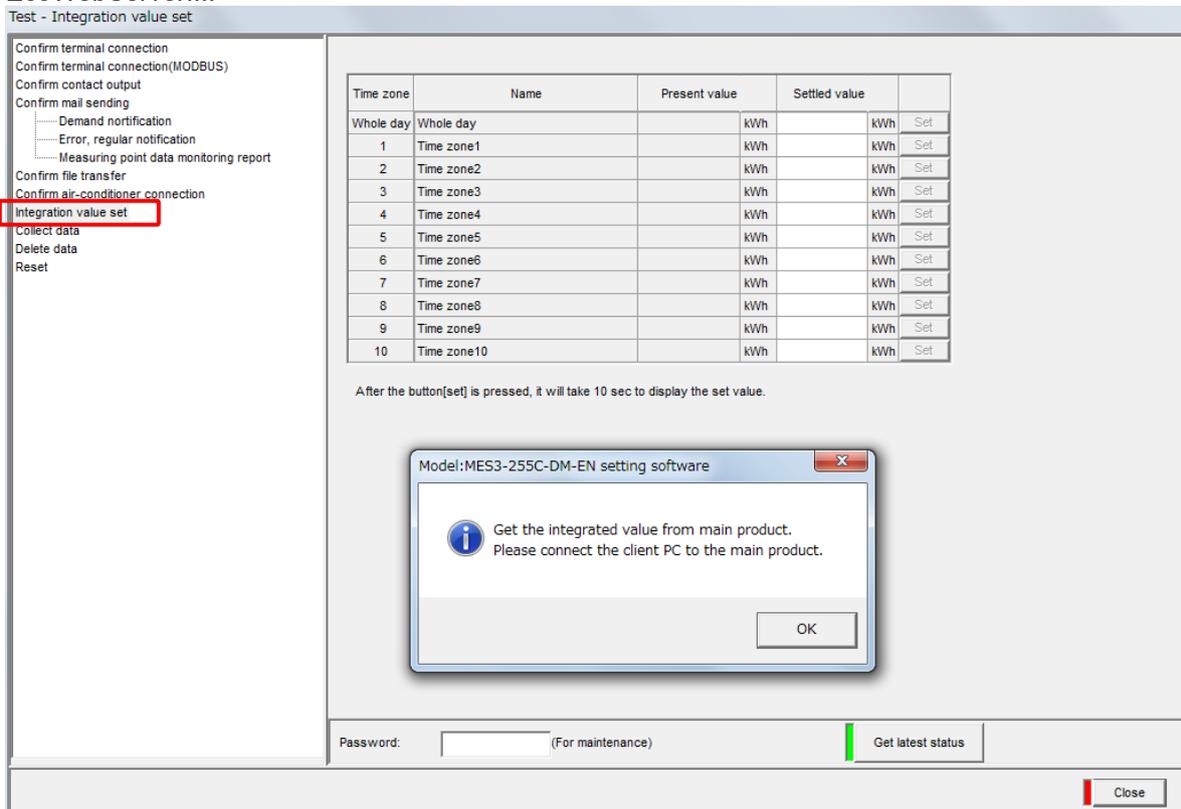

- (2) After the integrated count value information has been retrieved from the EcoWebServerIII, a completion message appears. Click the [OK] button.

The retrieved integrated count value information is displayed in the "Present value" field.

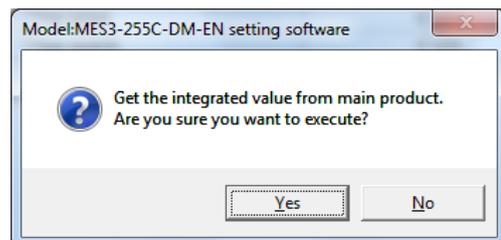

2 Setting the electric energy

- (1) Type in the maintenance password.

Password: (For maintenance)

(The default maintenance password is “ecopass”.)

- (2) Enter the electric energy meter's indication value in the [Indicated value].


Time zone	Name	Present value	Settled value		
			Integrated value	Multiplying factor	
Whole day	Whole day	67 kWh	69.7 *	100	Set
1	Time zone1	0 kWh	*	100	Set
2	Time zone2	0 kWh	*	100	Set
3	Time zone3	0 kWh	*	100	Set
4	Time zone4	0 kWh	*	100	Set
5	Time zone5	0 kWh	*	100	Set

- *1 Enter the current indication on the electric energy meter for each time zone.
- *2 Enter within the following range according to the number of meter digits in the demand setting.
Effective value range = Meter multiplier × Value range of transaction meter (0 to 9999.99 or 99999.9 or 999999) = 0 to meter multiplier × (10 number of instrument digits – 10 (number of instrument digits – 7))
- *3 If a value exceeding the number of valid decimal digits is entered or a decimal digit is not input, the value will be rounded to the valid decimal digits.
<Ex.: If the number of meter digits is 5 digits and 13776.25 is entered for the meter indication, the value will be 13776.2>

- (3) Click [Set] for the items to set.

Time zone	Name	Present value	Settled value		
			Integrated value	Multiplying factor	
Whole day	Whole day	67 kWh	69.7 *	100	Set
1	Time zone1	0 kWh	*	100	Set
2	Time zone2	0 kWh	*	100	Set
3	Time zone3	0 kWh	*	100	Set
4	Time zone4	0 kWh	*	100	Set
5	Time zone5	0 kWh	*	100	Set


- (4) An execution confirmation message appears. Click the [Yes] button and set the integrated count value.

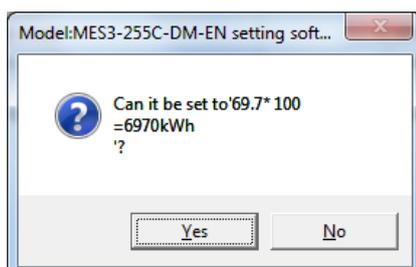

[Yes] button : Executes the integrated count value setting.


[No] button : Cancels the integrated count value setting and back to the [Integration value set] dialog box.

- (5) A dialog box that indicates the integrated count value setting is in progress will appear.
If you want to cancel it, click the [Abort] button.

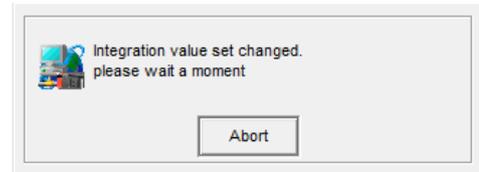


- * If the settings are incorrect, the message as in the right appears according to the illegal data when the [Set] button is clicked.
Revise the settings to the conditions are satisfied.

(Example of display)

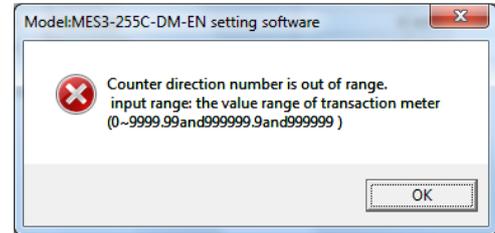

- (6) After the integrated count value has been set, the completion message will appear.
Click the [OK] button to back to the [Integration value set] dialog box.

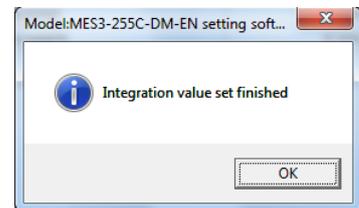

- (7) Check the set details.

Time zone	Name	Present value	Settled value		
			Integrated value	Multiplying factor	
Whole day	Whole day	0 kWh	0 *	100	Set
1	Time zone1	570 kWh	5.73 *	100	Set
2	Time zone2	0 kWh	*	100	Set
3	Time zone3	0 kWh	*	100	Set
4	Time zone4	0 kWh	*	100	Set
5	Time zone5	0 kWh	*	100	Set


- * The latest current value for that time zone appears immediately after setting.

Retrieving the latest integrated count value information


The latest integrated count value information is retrieved from the EcoWebServerIII and displayed.

1 Retrieving latest integrated count value information

- (1) Click the [Get latest status] button on the [Integration value set] dialog box.

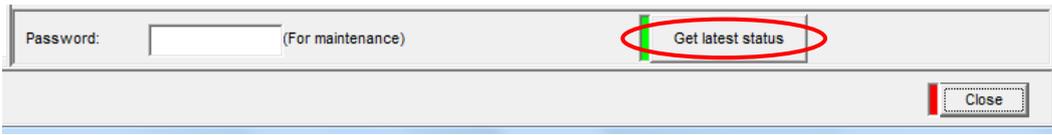


- (2) An execution confirmation message appears. Click [Yes] to execute the retrieval.

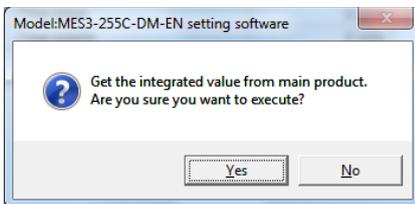


[Yes] button : Executes the integrated count value information retrieval process

[No] button : Cancels the integrated count value information retrieval, and back to [Integration value set] dialog box.

- (3) A dialog box that indicates the integrated count value information retrieval is in progress will appear. If you want to cancel it, click the [Abort] button.

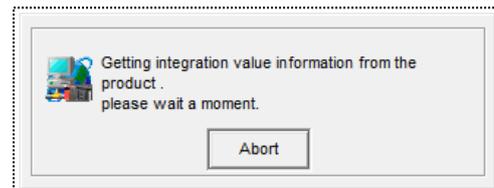

- (4) After the retrieval of the integrated count value information is completed, the completion message will appear. Click the [OK] button to back to the [Integration value set] dialog box.

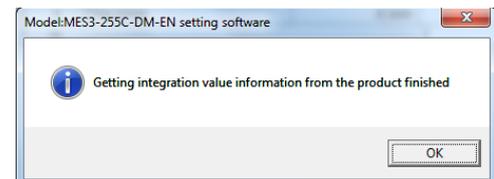

- (5) Check the displayed information.

Time zone	Name	Present value	Settled value		
			Integrated value	Multiplying factor	
Whole day	Whole day	0 kWh	*	100	Set
1	Time zone1	570 kWh	*	100	Set
2	Time zone2	0 kWh	*	100	Set
3	Time zone3	0 kWh	*	100	Set
4	Time zone4	0 kWh	*	100	Set
5	Time zone5	0 kWh	*	100	Set
6	Time zone6	0 kWh	*	100	Set
7	Time zone7	0 kWh	*	100	Set
8	Time zone8	0 kWh	*	100	Set
9	Time zone9	0 kWh	*	100	Set
10	Time zone10	0 kWh	*	100	Set

4.10.9. Data collection


This section explains the operation procedures in the dialog box of [Collect data].

Collecting data

This section explains the procedures to manually collect data stored in EcoWebServerIII.

1 Displaying the [Collect data] dialog box

Click [Collect data] in the tree menu on the [Test] dialog box.

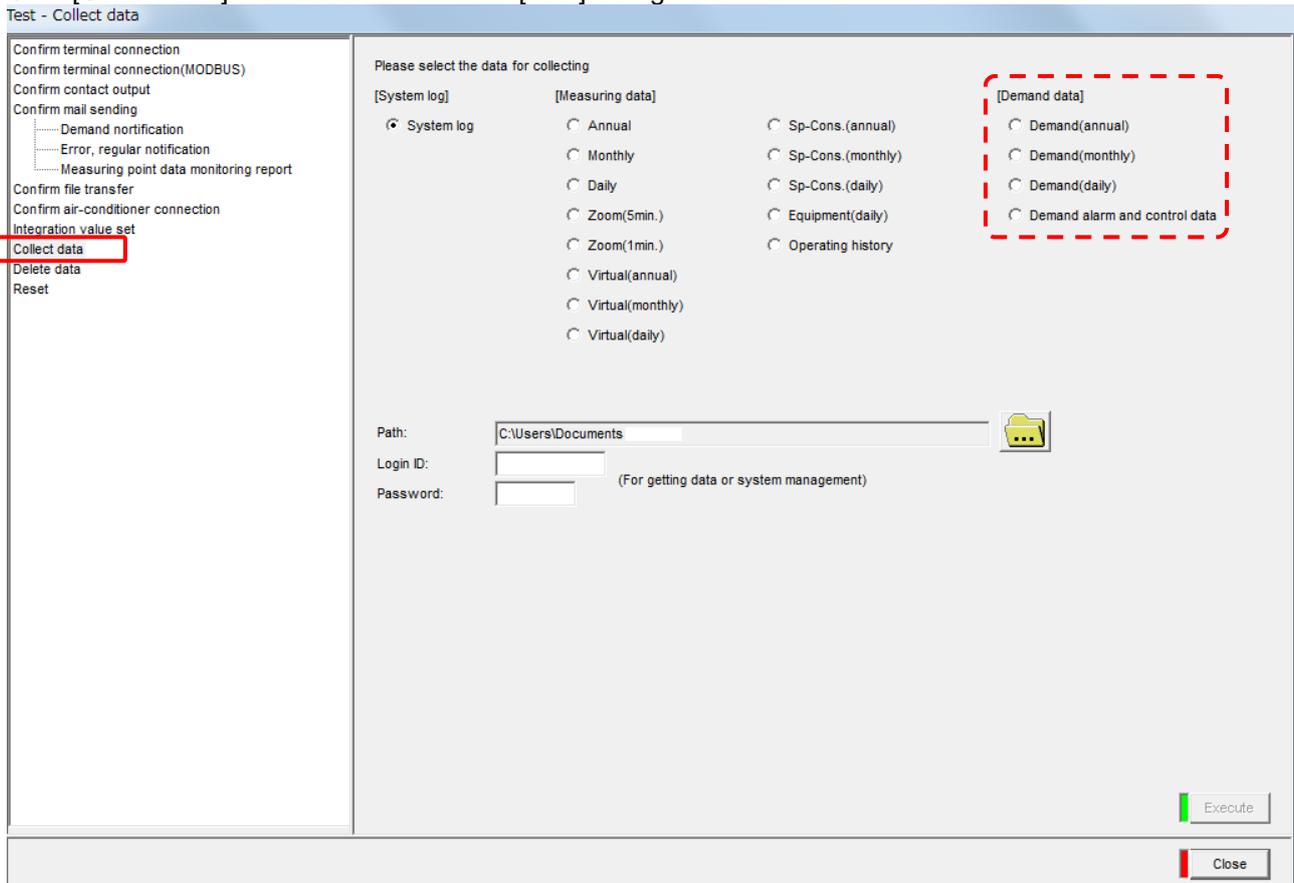

* The demand data is not displayed if the EcoWebServerIII does not have the demand control function.


2 Selecting the data to collect

Select the data to collect by clicking the radio button [●].

<input type="radio"/> Annual	<input type="radio"/> Sp-Cons.(annual)
<input type="radio"/> Monthly	<input type="radio"/> Sp-Cons.(monthly)
<input checked="" type="radio"/> Daily	<input type="radio"/> Sp-Cons.(daily)
<input type="radio"/> Zoom(5min.)	<input type="radio"/> Equipment(daily)
<input type="radio"/> Zoom(1min.)	<input type="radio"/> Operating history
<input type="radio"/> Virtual(annual)	
<input type="radio"/> Virtual(monthly)	
<input type="radio"/> Virtual(daily)	

* Multiple types of data cannot be collected simultaneously.

3 Specifying the destination folder

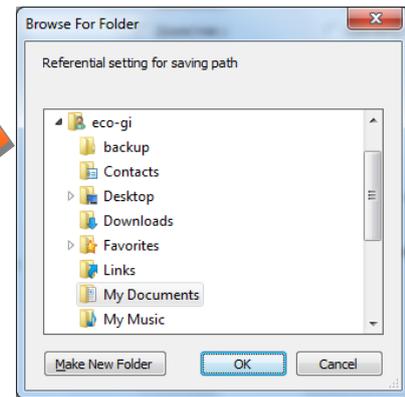


Specify the data for saving the collected data.

- (1) Click the Browse button.

The [Browse For Folder] dialog box is displayed.

- (2) Select the destination folder and click the button to determine.

[OK] button : Specifies the selected file as the destination. The [Collect data] dialog box will be displayed, showing the path of the specified destination location in the [Path] field.

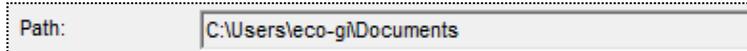

[Cancel] button : Cancels the selection of the folder and back to the [Collect data] dialog box.

[Make New folder] button : Creates a new folder.

4 Inputting the login ID and password

Type in either the data acquisition or system administration login ID and password.



(The default data acquisition login ID and password are "guest" and "user".)


(The default system administration login ID and password are "ecoV" and "ecopass".)

5 Collecting the files

- (1) When you click [Execute] button, the [Selection of data collection] dialog box will be displayed.


*1 If the IP address of EcoWebServerIII is incorrect, the LAN cable is not connected, or the EcoWebServerIII is not powered ON, the message on the right will appear.

Click the [OK] button, and then check the IP address of EcoWebServerIII, the connection of the LAN cable, and whether the power is turned on.

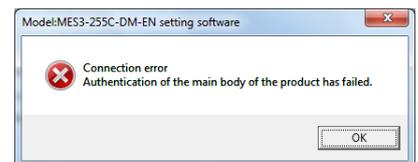

*2 If the login ID or password is incorrect, the message on the right will appear.


Click the [OK] button and then check the login ID and password.

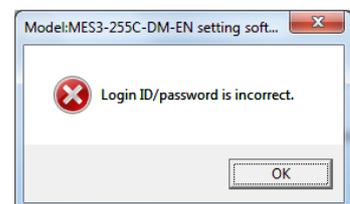

- (2) Check the box for the files you want to collect.
To collect all files, click the [Select all] button.

Uncheck the box to cancel the selection.
To cancel all files, click the [Deselect] button.


- (3) Click the [Execute] button.
To cancel the collection, click the [Cancel] button.

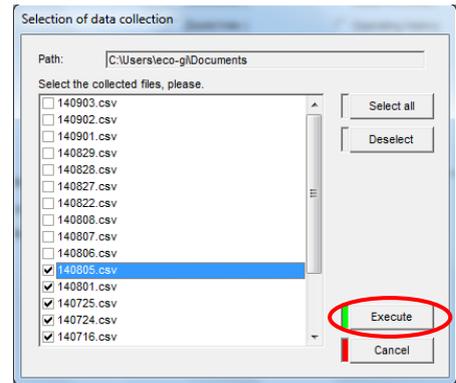

- (4) The screen showing the ongoing data collection will be displayed.
The second line shows the name of the file that is being collected.
To stop the collection, click the [Abort] button.



- (5) After the collection on every registered item is completed, the completion message will appear.

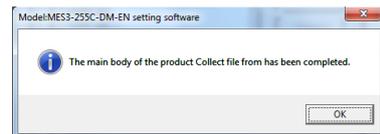

4.10.10. Deleting data


This section explains the operation procedures in the dialog box of [Delete data].

Deleting data

This section explains the procedures to manually delete data stored in EcoWebServerIII.


1 Displaying the [Delete data] dialog box

Click [Delete data] in the tree menu on the [Test] dialog box.

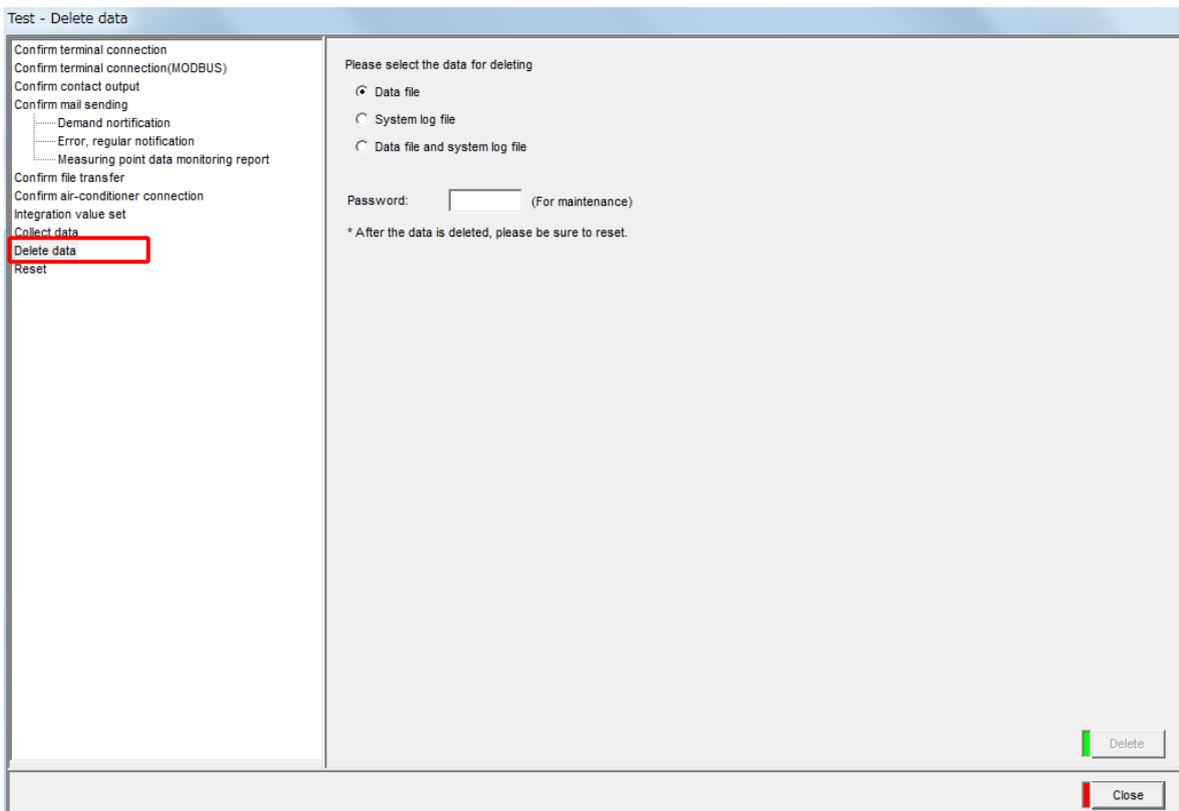

2 Selecting the data to delete

Select the data to delete by clicking the radio button [●].

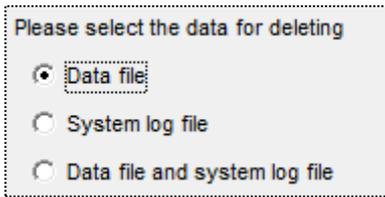

Please select the data for deleting

Data file

System log file

Data file and system log file


The files that can be deleted are as follow.

Data file	Daily data, Monthly data, Annual data, Zoom (5-minute) data, Zoom (1-minute data), Virtual (daily) data, Virtual (monthly) data, Virtual (annual) data, Specific consumption (daily) data, Specific consumption (monthly) data, Specific consumption (annual) data, Equipment (daily) data, Operation history data, Demand (daily) data *, Demand (monthly) data *, Demand (annual) data *, Demand alarm and control history data*
System log file	System log
Data file and system log file	All files listed above

* The demand (daily) data, demand (monthly) data, demand (annual) data, demand alarm and control history data deletion function is available only for the EcoWebServerIII with demand control function.

3 Inputting the maintenance password

Type in the maintenance password.

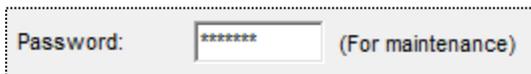

Password: (For maintenance)


(The default maintenance password is “ecopass”.)

4 Deleting the file


(1) When you click the [Delete] button, the confirmation message will appear.

[Yes] button : Executes the deletion of the files.

[No] button : Cancels the deletion of the files.

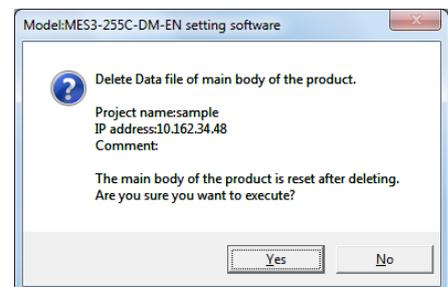

*1 If the IP address of the EcoWebServerIII main unit is not correct, a LAN cable is not connected, or the EcoWebServerIII is not powered on, the message on the right will appear.
Click the [OK] button, and then check the IP address of the EcoWebServerIII, the LAN cable connection, etc., and the power.

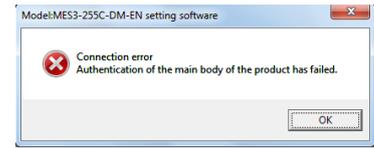

*2 If the password is incorrect, the message on the right will appear.
Click the [OK] button and then check the login ID and password.




*3 If many files are stored, a timeout may occur. In this case, perform the deletion of the data again.

(2) After the files are deleted, EcoWebServerIII will be reset.



* It may take up to 10 to 15 minutes to reset.

(3) When the deletion of the files and reset are completed, the following message will appear.

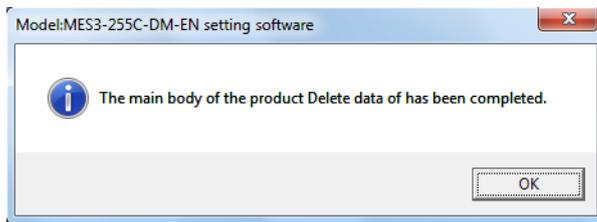

Remarks

- Immediately after restarting the EcoServer, daily data file and demand (daily) data file of today is created.
- After erasing the data, incorrect display of the demand measuring screen because there is no data until the start (end) of the next demand time limit (when the remaining time reaches 30:00 (time limit = 30 min)).

4.10.11. EcoWebServerIII reset


This section explains the operation procedures in the dialog box of [Reset].

Resetting the EcoWebServerIII

This section explains the procedures for resetting (restarting) EcoWebServerIII.


1 Displaying the [Reset] dialog box

Click [Reset] in the tree menu on the [Test] dialog box.

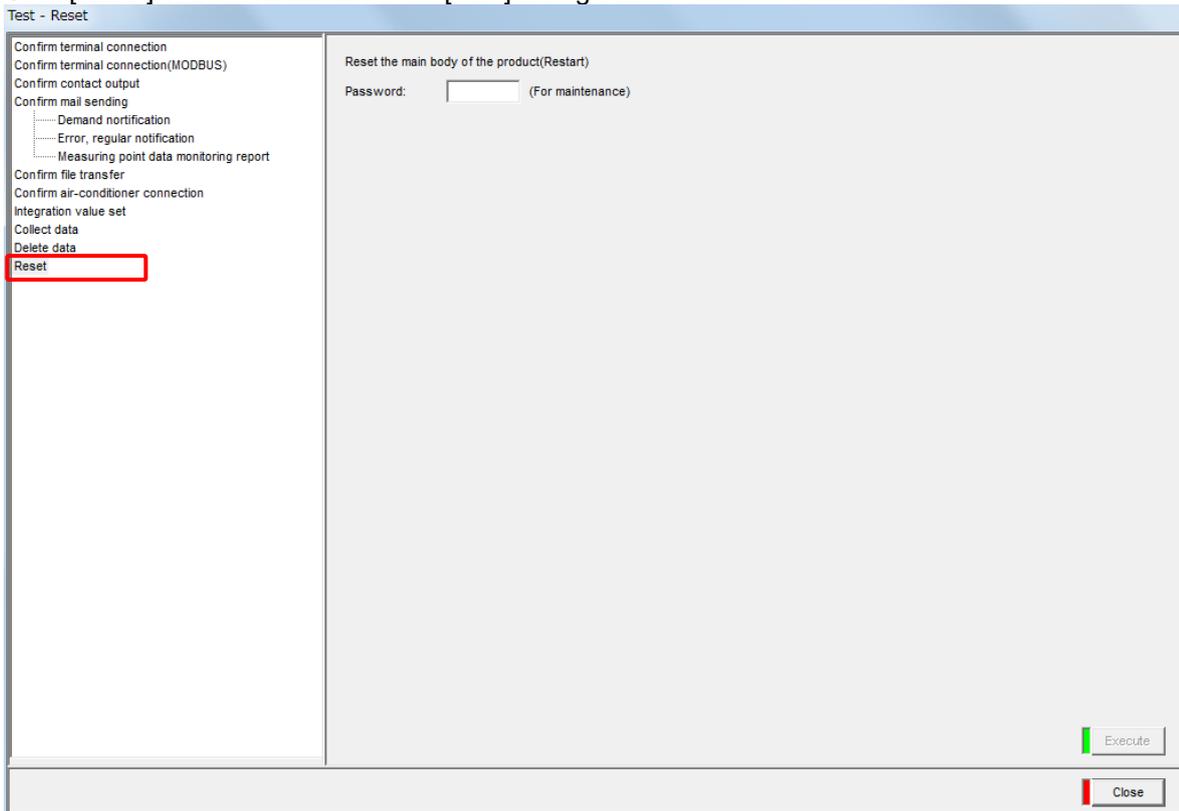

2 Inputting the maintenance password

Type in the maintenance password.

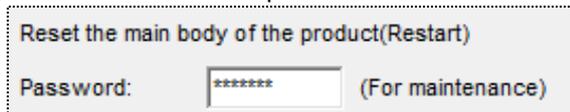


(The default maintenance password is "ecopass".)

3 Resetting (restart)

(1) When you click the [Execute] button, the confirmation message will appear.


[Yes] button : Executes the reset.

[No] button : Cancels the reset.

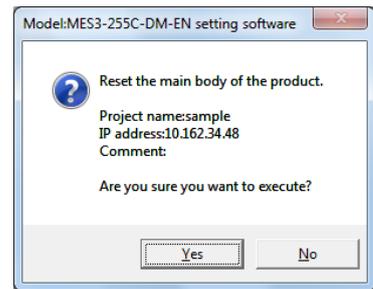

*1 If the IP address of the EcoWebServerIII is not correct, a LAN cable is not connected, or the EcoWebServerIII is not powered on, the message on the right will appear.

Click the [OK] button, and then check the IP address of the EcoWebServerIII, the LAN cable connection, etc., and the power.

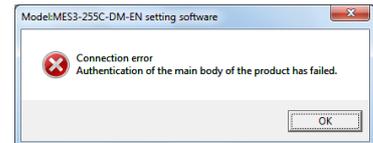


*2 If the password is incorrect, the message on the right will appear.

Click the [OK] button and then check the login ID and password.




(2) EcoWebServerIII is reset.

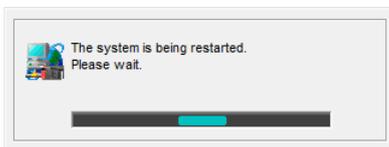

*** It may take up to 10 to 15 minutes to reset.**

(3) When the reset is completed, the following message will appear.

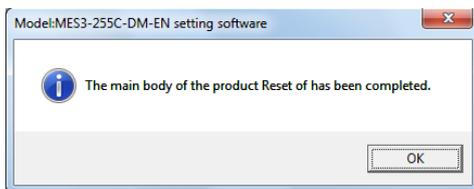

5. Appendix

5.1. List of support terminals(CC-Link terminal)

Product name	Icon/type name		Station type	Number of occupying stations
Energy measuring unit (1P2W, 1P3W, 3P3W)		EMU4-BD1A-MB	Remote device station	1 station occupied
Energy measuring unit (1P2W, 1P3W, 3P3W, 3P4W)		EMU4-HD1A-MB	Remote device station	1 station occupied
Energy measuring unit (1P2W, 1P3W, 3P3W)		EMU4-BD1-MB	Remote device station	1 station occupied
Energy measuring unit (1P2W, 1P3W, 3P3W, 3P4W)		EMU4-HD1-MB	Remote device station	1 station occupied
Energy measuring unit (1P2W, 1P3W, 3P3W, 3P4W)		EMU4-FD1-MB	Remote device station	1 station occupied
Energy measuring standard model*1		EMU4-BM1-MB	Remote device station	1 station occupied
Energy measuring high performance model*1		EMU4-HM1-MB	Remote device station	1 station occupied
Insulation Monitoring model*1		EMU4-LG1-MB	Remote device station	1 station occupied
Control Unit *1		EMU4-CNT-MB	Remote device station	1 station occupied
Energy measuring extension model for same voltage system*2		EMU4-A2	Remote device station	*3
Energy measuring extension model for different voltage system*2		EMU4-VA2	Remote device station	*3
Energy measuring extension model for analog input*2		EMU4-AX4	Remote device station	*3
Energy measuring extension model for pulse/digital input*2		EMU4-PX4	Remote device station	*3
Energy measuring unit (Power reception and distribution monitoring(standard product 3 circuits))		EMU2-RD3-C	Remote device station	1 station occupied
Energy measuring unit (Power reception and distribution monitoring(standard product 5 circuits))		EMU2-RD5-C	Remote device station	1 station occupied
Energy measuring unit (Power reception and distribution monitoring(standard product 7 circuits))		EMU2-RD7-C	Remote device station	1 station occupied
Energy measuring unit (Power reception and distribution monitoring(3P4W 2 circuits))		EMU2-RD2-C-4W	Remote device station	1 station occupied
Energy measuring unit (Power reception and distribution monitoring(3P4W 4 circuits))		EMU2-RD4-C-4W	Remote device station	1 station occupied
Energy measuring unit		EMU3-DP1-C	Remote device station	1 station occupied
MDU breaker (WS-V)		MDU(WS-V) NF400/630/800-SEWMB NF400/630/800-HEWMB NV400/630/800-SEWMB NV400/630/800-HEWMB NF400/630/800-ZEWMB NF250-SEVM/-HEVM NV250-SEVM/-HEVM NF250-ZEVM	Remote device station	1 station occupied
MDU breaker (WS)		MDU(WS) NF400-SEP/HEP with MDU NF600-SEP/HEP with MDU NF800-SEP/HEP with MDU	Remote device station	1 station occupied

Product name	Icon/type name	Station type	Number of occupying stations
AE-SW CC-Link	 AE-SW(BIF-CC)	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96NSR	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96SSHB-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96SSRB-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96SSHA-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96SSRA-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96SSH-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	 ME96SSR-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument with transmission function	 ME110SSR-C(H)	Remote device station	1 station occupied
Electronic multi-measuring instrument with transmission function	 ME110NSR-C	Remote device station	1 station occupied
Thermocouple temperature input unit	 AJ65BT-68TD	Remote device station	4 station occupied
Platinum resistance temperature sensor Pt 100 temperature input unit	 AJ65BT-64RD3	Remote device station	4 station occupied
Analog-digital conversion unit	 AJ65BT-64AD	Remote device station	2 station occupied
Terminal block type 24 VDC input unit (8 points)	 AJ65SBTB1-8D	Remote I/O station	1 station occupied
Terminal block type 24 VDC input unit (16 points)	 AJ65SBTB1-16D	Remote I/O station	1 station occupied
Terminal block type 24 VDC input unit (32 points)	 AJ65SBTB1-32D	Remote I/O station	1 station occupied
Terminal block type DC input transistor output combined unit (Input 8 points, Output 8 points)	 AJ65SBTB1-16DT	Remote I/O station	1 station occupied
Terminal block type DC input transistor output combined unit (Input 16 points, Output 16 points)	 AJ65SBTB1-32DT	Remote I/O station	1 station occupied
CC-Link master/local unit (Local station)	 QJ61BT11N	Intelligent device station	1 station occupied
CC-Link master/local unit (Local station)	 LCPU/LJ61BT11	Intelligent device station	1 station occupied

*1 EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB, EMU4-CNT-MB are main units of EcoMonitorPlus.

*2 EMU4-A2, EMU4-VA2, EMU4-AX4, EMU4-PX4 are extension units of EcoMonitorPlus.

*3 Combination of main unit and extension unit occupied 1 station.

*4 When the main unit of EcoMonitorPlus is EMU4-CNT-MB, the response data of the measurement value of the extension unit is updated every minute, so the response measurement value is up to 1 minute ago.

5.2. List of model information (CC-Link terminal)

The following describes the details of setting and setting ranges for models that require the setting of model information on the terminal registration screen.

5.2.1. EMU4-BD1A-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.2.2. EMU4-HD1A-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating *3P4W is used as phase voltage	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110V, 220V <u>3P4W:</u> 63.5V, 100V, 105V, 110V, 115V, 120V, 127V, 200V, 220V, 230V, 240V, 242V, 250V, 254V, 265V, 277V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.2.3. EMU4-BD1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V <u>1P3W:</u> 110V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A

5.2.4. EMU4-HD1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating *3P4W is used as phase voltage	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V <u>1P3W:</u> 110V <u>3P4W:</u> 63.5V, 100V, 105V, 110V, 115V, 120V, 127V, 200V, 220V, 230V, 240V, 242V, 250V, 254V, 265V, 277V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A

5.2.5. EMU4-FD1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating *3P4W is used as phase voltage	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V <u>1P3W:</u> 110V <u>3P4W:</u> 63.5V, 100V, 105V, 110V, 115V, 120V, 127V, 200V, 220V, 230V, 240V, 242V, 250V, 254V, 265V, 277V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A

5.2.6. EMU4-BM1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.2.7. EMU4-HM1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V, 220/440V <u>3P4W:</u> 63.5/110V, 100/173V, 105/182V, 110/190V, 115/199V, 120/208V, 127/220V, 200/346V, 220/380V, 230/400V, 240/415V, 242/420V, 250/430V, 254/440V, 265/460V, 277/480V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.2.8. EMU4-LG1-MB

Setting item	Setting range
Measuring mode	Low sensitivity mode, High sensitivity mode

5.2.9. EMU4-A2

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V, 220/440V <u>3P4W:</u> 63.5/110V, 100/173V, 105/182V, 110/190V, 115/199V, 120/208V, 127/220V, 200/346V, 220/380V, 230/400V, 240/415V, 242/420V, 250/430V, 254/440V, 265/460V, 277/480V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

***1 It is necessary to fix phase wire method and voltage rating for EMU4-A2.**

5.2.10. EMU4-VA2

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V, 220/440V <u>3P4W:</u> 63.5/110V, 100/173V, 105/182V, 110/190V, 115/199V, 120/208V, 127/220V, 200/346V, 220/380V, 230/400V, 240/415V, 242/420V, 250/430V, 254/440V, 265/460V, 277/480V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.2.11. EMU2-BM1-C

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	110V, 220V, 440V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

***1 For 1P3W, the voltage is fixed at 110V.**

5.2.12. EMU-HM1-C

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	110V, 220V, 440V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

*1 For 1P3W, the voltage is fixed at 110V.

5.2.13. EMU2-RD3-C, EMU2-RD5-C, EMU2-RD7-C

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Line-to-line voltage rating*1, *2	110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V
Current rating*2	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

*1 For 1P3W, the voltage is fixed at 110V.

*2 The range of Line-to-line voltage rating × Current rating > 88,665 (kW) cannot be set.

5.2.14. EMU2-RD2-C-4W, EMU2-RD4-C-4W

Setting item	Setting range
Phase wire method	3P4W
Line-to-line voltage rating	63.5/110V, 110/190V, 120/208V, 220/380V, 240/415V, 254/440V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.2.15. EMU3-DP1-C

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Line-to-line voltage rating*1	110V, 220V, 440V
Current rating	60A, 125A

*1 For 1P3W, the voltage is fixed at 110V.

5.2.16. MDU(WS)

Setting item	Setting range
Ampere frame	225AF or lower, 400AF or higher

5.2.17. MDU(WS-V)

Setting item	Setting range
Ampere frame	250AF or lower, 400AF or higher

5.2.18. AE-SW(BIF-CC)

Setting item	Setting range
CT rating	Lower than 500A, 500A or higher and lower than 1000A, 1000A or higher

5.2.19. ME96NSR

Setting item	Setting range
Phase wire method	3P3W, 3P4W
Rated voltage	60V - 750000V
Rated current	5A - 30000A

5.2.20. ME96SSHB-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Rated voltage	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Rated current	1.0A - 30000A

5.2.21. ME96SSRB-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Rated voltage	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Rated current	1.0A - 30000A

5.2.22. ME96SSHA-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Rated voltage	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Rated current	1.0A - 30000A

5.2.23. ME96SSRA-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Rated voltage	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Rated current	1.0A - 30000A

5.2.24. ME96SSH-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Rated voltage	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110V, 220V
Rated current	1.0A - 30000A

5.2.25. ME96SSR-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Rated voltage	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110V, 220V
Rated current	1.0A - 30000A

5.2.26. ME110SSR-C(H)

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Line-to-line voltage rating* ¹	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1,100V, 2,200V, 3,300V, 6,600V, 11,000V, 13,200V, 13,800V, 15,000V, 16,500V, 22,000V, 24,000V, 33,000V, 66,000V, 77,000V, 110,000V, 132,000V, 154,000V, 187,000V, 220,000V, 275,000V, 380,000V, 500,000V, 550,000V <u>1P3W:</u> 220V <u>3P4W:</u> 63.5/110V, 110/190V, 120/208V, 220/380V, 240/415V, 254/440V
Current rating* ²	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A

*1 The range of Line-to-line voltage rating / 110 × Current rating / 5 ≥ 122,500 cannot be set.

*2 Please change the setting of data resolution to type2.

5.2.27. ME110NSR-C

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Line-to-line voltage rating* ¹	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V, 132000V, 154000V, 187000V, 220000V, 275000V, 380000V, 500000V, 550000V <u>1P3W:</u> 220V <u>3P4W:</u> 63.5/110V, 110/190V, 120/208V, 220/380V, 240/415V, 254/440V
Current rating* ¹	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A

*¹ The range of Line-to-line voltage rating / 110 × Current rating / 5 ≥ 122,500 cannot be set.

5.2.28. AJ65BT-68TD

Setting item	Setting range
Compensate the cold junction with resistance temperature sensor Pt 100?	Yes (Checked) No (Unchecked)

5.3. List of measured items (CC-Link terminal)

The following describes the measured items of the CC-Link terminals supported by EcoWebServerIII.

5.3.1. EMU4-BD1A-MB

Measured items	Unit
Active_energy(import)	kWh
Active_energy(export)	kWh
Active_energy(import)/(CH2)	kWh
Active_energy(export)/(CH2)	kWh
Detailed_active_energy(import)	kWh
Detailed_active_energy(export)	kWh
Detailed_active_energy(import)/(CH2)	kWh
Detailed_active_energy(export)/(CH2)	kWh
Reactive_energy(import_lag)	kvarh
Detailed_reactive_energy(import_lag)	kvarh
Current(1-phase)	A
Current(2-phase)	A
Current(3-phase)/(CH2)	A
Current(average)	A
Voltage(1-2_lines)	V
Voltage(2-3_lines)/(CH2)	V
Voltage(3-1_lines)	V
Voltage(average_line_to_line)	V
Active_power	kW
Active_power(CH2)	kW
Reactive_power	kvar
Reactive_power(CH2)	kvar
Power_factor	%
Power_factor(CH2)	%
Frequency	Hz
Demand_current(1-phase)	A
Demand_current(2-phase)	A
Demand_current(3-phase)/(CH2)	A
Demand_active_power	kW
Demand_active_power(CH2)	kW
Operating_time	<set>^2
Operating_time(CH2)	<set>^2
Alarm_integrated_time	x250ms
Alarm_integrated_time(CH2)	x250ms

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 The unit of operating time can be set in hours, minutes, or seconds.
- *3 Detailed version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *4 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (CH2).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.3.2. EMU4-HD1A-MB

Measured items	Unit	Measured items	Unit
Active energy(import)	kWh	Harmonics 1st RMS current(N-phase)	A
Active energy(export)	kWh	Harmonics 3rd RMS current(N-phase)	A
Active energy(import)/(CH2)	kWh	Harmonics 5th RMS current(N-phase)	A
Active energy(export)/(CH2)	kWh	Harmonics 7th RMS current(N-phase)	A
Detailed active energy(import)	kWh	Harmonics 9th RMS current(N-phase)	A
Detailed active energy(export)	kWh	Harmonics 11th RMS current(N-phase)	A
Detailed active energy(import)/(CH2)	kWh	Harmonics 13th RMS current(N-phase)	A
Detailed active energy(export)/(CH2)	kWh	Total harmonic distortion current(1-phase)	A
Reactive energy(import lag)	kvarh	Total harmonic distortion current(2-phase)	%
Detailed reactive energy(import lag)	kvarh	Total harmonic distortion current(3-phase)/(CH2)	%
Current(1-phase)	A	Total harmonic distortion current(N-phase)	%
Current(2-phase)	A	Total harmonics RMS voltage(1-2 lines)	%
Current(3-phase)/(CH2)	A	Harmonics 1st RMS voltage(1-2 lines)	V
Current(N-phase)	A	Harmonics 3rd RMS voltage(1-2 lines)	V
Current(average)	A	Harmonics 5th RMS voltage(1-2 lines)	V
Voltage(1-2 lines)	V	Harmonics 7th RMS voltage(1-2 lines)	V
Voltage(2-3 lines)/(CH2)	V	Harmonics 9th RMS voltage(1-2 lines)	V
Voltage(3-1 lines)	V	Harmonics 11th RMS voltage(1-2 lines)	V
Voltage(average line to line)	V	Harmonics 13th RMS voltage(1-2 lines)	V
Voltage(1-N phase)	V	Total harmonics RMS voltage(2-3 lines)/(CH2)	V
Voltage(2-N phase)	V	Harmonics 1st RMS voltage(2-3 lines)/(CH2)	V
Voltage(3-N phase)	V	Harmonics 3rd RMS voltage(2-3 lines)/(CH2)	V
Active power	kW	Harmonics 5th RMS voltage(2-3 lines)/(CH2)	V
Active power(CH2)	kW	Harmonics 7th RMS voltage(2-3 lines)/(CH2)	V
Reactive power	kvar	Harmonics 9th RMS voltage(2-3 lines)/(CH2)	V
Reactive power(CH2)	kvar	Harmonics 11th RMS voltage(2-3 lines)/(CH2)	V
Power factor	%	Harmonics 13th RMS voltage(2-3 lines)/(CH2)	V
Power factor(CH2)	%	Total harmonics RMS voltage(1-N phase)	V
Frequency	Hz	Harmonics 1st RMS voltage(1-N phase)	V
Demand current(1-phase)	A	Total harmonics RMS voltage(2-N phase)	V
Demand current(2-phase)	A	Harmonics 1st RMS voltage(2-N phase)	V
Demand current(3-phase)/(CH2)	A	Total harmonics RMS voltage(3-N phase)	V
Demand current(N-phase)	A	Harmonics 1st RMS voltage(3-N phase)	V
Demand active power	kW	Total harmonic distortion voltage(1-2 lines)	V
Demand active power(CH2)	kW	Harmonic 3rd distortion voltage(1-2 lines)	%
Periodic active energy	kWh	Harmonic 5th distortion voltage(1-2 lines)	%
Periodic active energy(CH2)	kWh	Harmonic 7th distortion voltage(1-2 lines)	%
Operating time	<set>*2	Harmonic 9th distortion voltage(1-2 lines)	%
Operating time(CH2)	<set>*2	Harmonic 11th distortion voltage(1-2 lines)	%
Pulse count	<set>*2	Harmonic 13th distortion voltage(1-2 lines)	%
Digital input status	-	Total harmonic distortion voltage(2-3 lines)/(CH2)	%
Alarm integrated time	x250ms	Harmonic 3rd distortion voltage(2-3 lines)/(CH2)	%
Alarm integrated time(CH2)	x250ms	Harmonic 5th distortion voltage(2-3 lines)/(CH2)	%
Total harmonics RMS current(1-phase)	A	Harmonic 7th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 1st RMS current(1-phase)	A	Harmonic 9th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 3rd RMS current(1-phase)	A	Harmonic 11th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 5th RMS current(1-phase)	A	Harmonic 13th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 7th RMS current(1-phase)	A	Total harmonic distortion voltage(1-N phase)	%
Harmonics 9th RMS current(1-phase)	A	Harmonic 3rd distortion voltage(1-N phase)	%
Harmonics 11th RMS current(1-phase)	A	Harmonic 5th distortion voltage(1-N phase)	%
Harmonics 13th RMS current(1-phase)	A	Harmonic 7th distortion voltage(1-N phase)	%
Total harmonics RMS current(2-phase)	A	Harmonic 9th distortion voltage(1-N phase)	%
Harmonics 1st RMS current(2-phase)	A	Harmonic 11th distortion voltage(1-N phase)	%
Harmonics 3rd RMS current(2-phase)	A	Harmonic 13th distortion voltage(1-N phase)	%
Harmonics 5th RMS current(2-phase)	A	Total harmonic distortion voltage(2-N phase)	%
Harmonics 7th RMS current(2-phase)	A	Harmonic 3rd distortion voltage(2-N phase)	%
Harmonics 9th RMS current(2-phase)	A	Harmonic 5th distortion voltage(2-N phase)	%
Harmonics 11th RMS current(2-phase)	A	Harmonic 7th distortion voltage(2-N phase)	%
Harmonics 13th RMS current(2-phase)	A	Harmonic 9th distortion voltage(2-N phase)	%
Total harmonics RMS current(3-phase)/(CH2)	A	Harmonic 11th distortion voltage(2-N phase)	%
Harmonics 1st RMS current(3-phase)/(CH2)	A	Harmonic 13th distortion voltage(2-N phase)	%
Harmonics 3rd RMS current(3-phase)/(CH2)	A	Total harmonic distortion voltage(3-N phase)	%
Harmonics 5th RMS current(3-phase)/(CH2)	A	Harmonic 3rd distortion voltage(3-N phase)	%
Harmonics 7th RMS current(3-phase)/(CH2)	A	Harmonic 5th distortion voltage(3-N phase)	%
Harmonics 9th RMS current(3-phase)/(CH2)	A	Harmonic 7th distortion voltage(3-N phase)	%
Harmonics 11th RMS current(3-phase)/(CH2)	A	Harmonic 9th distortion voltage(3-N phase)	%
Harmonics 13th RMS current(3-phase)/(CH2)	A	Harmonic 11th distortion voltage(3-N phase)	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 The unit of operating time can be set in hours, minutes, or seconds.
Unit of Pulse_count can be set for any character up to 8 words.**
- *3 Detailed version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**
- *4 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (CH2).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system.
(For details, refer to the instruction manual of the terminal)**

5.3.3. EMU4-BD1-MB

Measured items	Unit
Electric_energy(Consumption)	kWh
Electric_energy(Regeneration)	kWh
Electric_energy(Consumption)extended	kWh
Electric_energy(Regeneration)extended	kWh
Reactive_energy(Consumption_lag)	kvarh
Reactive_energy(Consumption_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_Average	A
Voltage_phase12	V
Voltage_phase23	V
Voltage_phase31	V
Voltage_Average_line_voltage	V
Electric_power	kW
Reactive_power	kvar
Power_factor	%
Frequency	Hz
Current_demand_phase1	A
Current_demand_phase2	A
Current_demand_phase3	A
Electric_power_demand	kW
Operating_time	H

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.3.4. EMU4-HD1-MB

Measured items	Unit
Electric energy(Consumption)	kWh
Electric energy(Regeneration)	kWh
Electric energy(Consumption)extended	kWh
Electric energy(Regeneration)extended	kWh
Reactive energy(Consumption lag)	kvarh
Reactive energy(Consumption lag)extended	kvarh
Current phase1	A
Current phase2	A
Current phase3	A
Current phaseN	A
Current Average	A
Voltage phase12	V
Voltage phase23	V
Voltage phase31	V
Voltage Average_line_voltage	V
Voltage phase1N	V
Voltage phase2N	V
Voltage phase3N	V
Electric power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand phase1	A
Current demand phase2	A
Current demand phase3	A
Current demand phaseN	A
Electric power demand	kW
Periodic electric energy	kWh
Operating time	H
Pulse count	<set>*2
HA RMS phase1 total	A
HA RMS phase1 1st	A
HA RMS phase1 3rd	A
HA RMS phase1 5th	A
HA RMS phase1 7th	A
HA RMS phase1 9th	A
HA RMS phase1 11th	A
HA RMS phase1 13th	A
HA RMS phase2 total	A
HA RMS phase2 1st	A
HA RMS phase2 3rd	A
HA RMS phase2 5th	A
HA RMS phase2 7th	A
HA RMS phase2 9th	A
HA RMS phase2 11th	A
HA RMS phase2 13th	A
HA RMS phase3 total	A
HA RMS phase3 1st	A
HA RMS phase3 3rd	A
HA RMS phase3 5th	A
HA RMS phase3 7th	A
HA RMS phase3 9th	A
HA RMS phase3 11th	A
HA RMS phase3 13th	A
HA RMS phaseN total	A
HA RMS phaseN 1st	A
HA RMS phaseN 3rd	A
HA RMS phaseN 5th	A
HA RMS phaseN 7th	A
HA RMS phaseN 9th	A
HA RMS phaseN 11th	A
HA RMS phaseN 13th	A

Measured items	Unit
HA D.ratio phase1 total	%
HA D.ratio phase2 total	%
HA D.ratio phase3 total	%
HA D.ratio phaseN total	%
HV RMS phase12 total	V
HV RMS phase12 1st	V
HV RMS phase12 3rd	V
HV RMS phase12 5th	V
HV RMS phase12 7th	V
HV RMS phase12 9th	V
HV RMS phase12 11th	V
HV RMS phase12 13th	V
HV RMS phase23 total	V
HV RMS phase23 1st	V
HV RMS phase23 3rd	V
HV RMS phase23 5th	V
HV RMS phase23 7th	V
HV RMS phase23 9th	V
HV RMS phase23 11th	V
HV RMS phase23 13th	V
HV RMS phase1N total	V
HV RMS phase1N 1st	V
HV RMS phase2N total	V
HV RMS phase2N 1st	V
HV RMS phase3N total	V
HV RMS phase3N 1st	V
HV D.ratio phase12 total	%
HV D.ratio phase12 3rd	%
HV D.ratio phase12 5th	%
HV D.ratio phase12 7th	%
HV D.ratio phase12 9th	%
HV D.ratio phase12 11th	%
HV D.ratio phase12 13th	%
HV D.ratio phase23 total	%
HV D.ratio phase23 3rd	%
HV D.ratio phase23 5th	%
HV D.ratio phase23 7th	%
HV D.ratio phase23 9th	%
HV D.ratio phase23 11th	%
HV D.ratio phase23 13th	%
HV D.ratio phase1N total	%
HV D.ratio phase1N 3rd	%
HV D.ratio phase1N 5th	%
HV D.ratio phase1N 7th	%
HV D.ratio phase1N 9th	%
HV D.ratio phase1N 11th	%
HV D.ratio phase1N 13th	%
HV D.ratio phase2N total	%
HV D.ratio phase2N 3rd	%
HV D.ratio phase2N 5th	%
HV D.ratio phase2N 7th	%
HV D.ratio phase2N 9th	%
HV D.ratio phase2N 11th	%
HV D.ratio phase2N 13th	%
HV D.ratio phase3N total	%
HV D.ratio phase3N 3rd	%
HV D.ratio phase3N 5th	%
HV D.ratio phase3N 7th	%
HV D.ratio phase3N 9th	%
HV D.ratio phase3N 11th	%
HV D.ratio phase3N 13th	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 Unit can be set for any character up to 8 words.**
- *3 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**

5.3.5. EMU4-FD1-MB

Measured items	Unit
Electric_energy(Consumption)	kWh
Electric_energy(Regeneration)	kWh
Electric_energy(Consumption)extended	kWh
Electric_energy(Regeneration)extended	kWh
Reactive_energy(Consumption_lag)	kvarh
Reactive_energy(Consumption_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phaseN	A
Current_Average	A
Voltage_phase12	V
Voltage_phase23	V
Voltage_phase31	V
Voltage_Average_line_voltage	V
Voltage_phase1N	V
Voltage_phase2N	V
Voltage_phase3N	V
Electric_power	kW
Reactive_power	kvar
Power_factor	%
Frequency	Hz
Current_demand_phase1	A
Current_demand_phase2	A
Current_demand_phase3	A
Current_demand_phaseN	A
Electric_power_demand	kW
Periodic_electric_energy	kWh
Operating_time	h
Pulse_count	<set>*2
HA_RMS_phase1_total	A
HA_RMS_phase1_1st	A
HA_RMS_phase1_3rd	A
HA_RMS_phase1_5th	A
HA_RMS_phase1_7th	A
HA_RMS_phase1_9th	A
HA_RMS_phase1_11th	A
HA_RMS_phase1_13th	A
HA_RMS_phase1_15th	A
HA_RMS_phase2_total	A
HA_RMS_phase2_1st	A
HA_RMS_phase2_3rd	A
HA_RMS_phase2_5th	A
HA_RMS_phase2_7th	A
HA_RMS_phase2_9th	A
HA_RMS_phase2_11th	A
HA_RMS_phase2_13th	A
HA_RMS_phase2_15th	A
HA_RMS_phase3_total	A
HA_RMS_phase3_1st	A
HA_RMS_phase3_3rd	A
HA_RMS_phase3_5th	A
HA_RMS_phase3_7th	A
HA_RMS_phase3_9th	A
HA_RMS_phase3_11th	A
HA_RMS_phase3_13th	A
HA_RMS_phase3_15th	A
HA_RMS_phaseN_total	A
HA_RMS_phaseN_1st	A
HA_RMS_phaseN_3rd	A
HA_RMS_phaseN_5th	A

Measured items	Unit
HA_RMS_phaseN_7th	A
HA_RMS_phaseN_9th	A
HA_RMS_phaseN_11th	A
HA_RMS_phaseN_13th	A
HA_RMS_phaseN_15th	A
Electric_energy(Consumption)	kWh
HA_D.ratio_phase1_total	%
HA_D.ratio_phase1_3rd	%
HA_D.ratio_phase1_5th	%
HA_D.ratio_phase1_7th	%
HA_D.ratio_phase1_9th	%
HA_D.ratio_phase1_11th	%
HA_D.ratio_phase1_13th	%
HA_D.ratio_phase1_15th	%
HA_D.ratio_phase2_total	%
HA_D.ratio_phase2_3rd	%
HA_D.ratio_phase2_5th	%
HA_D.ratio_phase2_7th	%
HA_D.ratio_phase2_9th	%
HA_D.ratio_phase2_11th	%
HA_D.ratio_phase2_13th	%
HA_D.ratio_phase2_15th	%
HA_D.ratio_phase3_total	%
HA_D.ratio_phase3_3rd	%
HA_D.ratio_phase3_5th	%
HA_D.ratio_phase3_7th	%
HA_D.ratio_phase3_9th	%
HA_D.ratio_phase3_11th	%
HA_D.ratio_phase3_13th	%
HA_D.ratio_phase3_15th	%
HA_D.ratio_phaseN_total	%
HA_D.ratio_phaseN_3rd	%
HA_D.ratio_phaseN_5th	%
HA_D.ratio_phaseN_7th	%
HA_D.ratio_phaseN_9th	%
HA_D.ratio_phaseN_11th	%
HA_D.ratio_phaseN_13th	%
HA_D.ratio_phaseN_15th	%
HV_RMS_phase12_total	V
HV_RMS_phase12_1st	V
HV_RMS_phase12_3rd	V
HV_RMS_phase12_5th	V
HV_RMS_phase12_7th	V
HV_RMS_phase12_9th	V
HV_RMS_phase12_11th	V
HV_RMS_phase12_13th	V
HV_RMS_phase12_15th	V
HV_RMS_phase23_total	V
HV_RMS_phase23_1st	V
HV_RMS_phase23_3rd	V
HV_RMS_phase23_5th	V
HV_RMS_phase23_7th	V
HV_RMS_phase23_9th	V
HV_RMS_phase23_11th	V
HV_RMS_phase23_13th	V
HV_RMS_phase23_15th	V
HV_RMS_phase1N_total	V
HV_RMS_phase1N_1st	V
HV_RMS_phase1N_3rd	V
HV_RMS_phase1N_5th	V
HA_D.ratio_phase1_total	%

Measured items	Unit
HV RMS phase1N 7th	V
HV RMS phase1N 9th	V
HV RMS phase1N 11th	V
HV RMS phase1N 13th	V
HV RMS phase1N 15th	V
HV RMS phase2N total	V
HV RMS phase2N 1st	V
HV RMS phase2N 3rd	V
HV RMS phase2N 5th	V
HV RMS phase2N 7th	V
HV RMS phase2N 9th	V
HV RMS phase2N 11th	V
HV RMS phase2N 13th	V
HV RMS phase2N 15th	V
HV RMS phase3N total	V
HV RMS phase3N 1st	V
HV RMS phase3N 3rd	V
HV RMS phase3N 5th	V
HV RMS phase3N 7th	V
HV RMS phase3N 9th	V
HV RMS phase3N 11th	V
HV RMS phase3N 13th	V
HV RMS phase3N 15th	V
HV D.ratio phase12 total	%
HV D.ratio phase12 3rd	%
HV D.ratio phase12 5th	%
HV D.ratio phase12 7th	%
HV D.ratio phase12 9th	%
HV D.ratio phase12 11th	%
HV D.ratio phase12 13th	%
HV D.ratio phase12 15th	%
HV D.ratio phase23 total	%

Measured items	Unit
HV D.ratio phase23 3rd	%
HV D.ratio phase23 5th	%
HV D.ratio phase23 7th	%
HV D.ratio phase23 9th	%
HV D.ratio phase23 11th	%
HV D.ratio phase23 13th	%
HV D.ratio phase23 15th	%
HV D.ratio phase1N total	%
HV D.ratio phase1N 3rd	%
HV D.ratio phase1N 5th	%
HV D.ratio phase1N 7th	%
HV D.ratio phase1N 9th	%
HV D.ratio phase1N 11th	%
HV D.ratio phase1N 13th	%
HV D.ratio phase1N 15th	%
HV D.ratio phase2N total	%
HV D.ratio phase2N 3rd	%
HV D.ratio phase2N 5th	%
HV D.ratio phase2N 7th	%
HV D.ratio phase2N 9th	%
HV D.ratio phase2N 11th	%
HV D.ratio phase2N 13th	%
HV D.ratio phase2N 15th	%
HV D.ratio phase3N total	%
HV D.ratio phase3N 3rd	%
HV D.ratio phase3N 5th	%
HV D.ratio phase3N 7th	%
HV D.ratio phase3N 9th	%
HV D.ratio phase3N 11th	%
HV D.ratio phase3N 13th	%
HV D.ratio phase3N 15th	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Unit can be set for any character up to 8 words.**

***3 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.**

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.3.6. EMU4-BM1-MB

Measured items	Unit
Electric_energy(Import)	kWh
Electric_energy(Export)	kWh
Electric_energy(Import)(1P2W_3)	kWh
Electric_energy(Export)(1P2W_3)	kWh
Electric_energy(Import)extended	kWh
Electric_energy(Export)extended	kWh
Electric_energy(Import)extended(1P2W_3)	kWh
Electric_energy(Export)extended(1P2W_3)	kWh
Reactive_energy(Import_lag)	kvarh
Reactive_energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage_Average_line_voltage	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive_power	kvar
Reactive_power(1P2W_3)	kvar
Power_factor	%
Power_factor(1P2W_1)	%
Power_factor(1P2W_3)	%
Frequency	Hz
Current_demand_phase1	A
Current_demand_phase2	A
Current_demand_phase3	A
Current_demand_phase3(1P2W_3)	A
Electric_power_demand	kW
Electric_power_demand(1P2W_3)	kW
Operating_time	H
Operating_time(1P2W_3)	H

- *1 The measured items differ with the phase wire method.**
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.**
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *3 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).**
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.3.7. EMU4-HM1-MB

Measured items	Unit
Electric energy(Import)	kWh
Electric energy(Export)	kWh
Electric energy(Import)(1P2W_3)	kWh
Electric energy(Export)(1P2W_3)	kWh
Electric energy(Import)extended	kWh
Electric energy(Export)extended	kWh
Electric energy(Import)extended(1P2W_3)	kWh
Electric energy(Export)extended(1P2W_3)	kWh
Reactive energy(Import_lag)	kvarh
Reactive energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_phaseN	A
Current Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage Average line voltage	V
Voltage_phase1N	V
Voltage_phase2N	V
Voltage_phase3N	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive power	kvar
Reactive power(1P2W_3)	kvar
Power factor	%
Power factor(1P2W_1)	%
Power factor(1P2W_3)	%
Frequency	Hz
Current demand_phase1	A
Current demand_phase2	A
Current demand_phase3	A
Current demand_phase3(1P2W_3)	A
Current_demand_phaseN	A
Electric power demand	kW
Electric power demand(1P2W_3)	kW
Periodic electric energy	kWh
Periodic electric energy(1P2W_3)	kWh
Operating time	h
Operating_time(1P2W_3)	h
Pulse count	<set>*2
HA RMS phase1 total	A
HA RMS phase1_1st	A
HA RMS phase1_3rd	A
HA RMS phase1_5th	A
HA RMS phase1_7th	A
HA RMS phase1_9th	A
HA RMS phase1_11th	A
HA RMS phase1_13th	A
HA RMS phase2 total	A
HA RMS phase2_1st	A
HA RMS phase2_3rd	A
HA RMS phase2_5th	A
HA RMS phase2_7th	A
HA RMS phase2_9th	A
HA RMS phase2_11th	A
HA RMS phase2_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st	A
HA RMS phase3_3rd	A
HA RMS phase3_5th	A
HA RMS phase3_7th	A
HA RMS phase3_9th	A
HA RMS phase3_11th	A
HA RMS phase3_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st(1P2W_3)	A

Measured items	Unit
HA RMS phase3_3rd(1P2W_3)	A
HA RMS phase3_5th(1P2W_3)	A
HA RMS phase3_7th(1P2W_3)	A
HA RMS phase3_9th(1P2W_3)	A
HA RMS phase3_11th(1P2W_3)	A
HA RMS phase3_13th(1P2W_3)	A
HA RMS phaseN total	A
HA RMS phaseN_1st	A
HA RMS phaseN_3rd	A
HA RMS phaseN_5th	A
HA RMS phaseN_7th	A
HA RMS phaseN_9th	A
HA RMS phaseN_11th	A
HA RMS phaseN_13th	A
HA D.ratio_phase1_total	%
HA D.ratio_phase2_total	%
HA D.ratio_phase3_total	%
HA D.ratio_phaseN_total	%
HV RMS phase12L total	V
HV RMS phase12L_1st	V
HV RMS phase12L_3rd	V
HV RMS phase12L_5th	V
HV RMS phase12L_7th	V
HV RMS phase12L_9th	V
HV RMS phase12L_11th	V
HV RMS phase12L_13th	V
HV RMS phase23L total	V
HV RMS phase23L_1st	V
HV RMS phase23L_3rd	V
HV RMS phase23L_5th	V
HV RMS phase23L_7th	V
HV RMS phase23L_9th	V
HV RMS phase23L_11th	V
HV RMS phase23L_13th	V
HV RMS phase1N total	V
HV RMS phase1N_1st	V
HV RMS phase2N total	V
HV RMS phase2N_1st	V
HV RMS phase3N total	V
HV RMS phase3N_1st	V
HV D.ratio_phase12L_total	%
HV D.ratio_phase12L_3rd	%
HV D.ratio_phase12L_5th	%
HV D.ratio_phase12L_7th	%
HV D.ratio_phase12L_9th	%
HV D.ratio_phase12L_11th	%
HV D.ratio_phase12L_13th	%
HV D.ratio_phase23L_total	%
HV D.ratio_phase23L_3rd	%
HV D.ratio_phase23L_5th	%
HV D.ratio_phase23L_7th	%
HV D.ratio_phase23L_9th	%
HV D.ratio_phase23L_11th	%
HV D.ratio_phase23L_13th	%
HV D.ratio_phase1N_total	%
HV D.ratio_phase1N_3rd	%
HV D.ratio_phase1N_5th	%
HV D.ratio_phase1N_7th	%
HV D.ratio_phase1N_9th	%
HV D.ratio_phase1N_11th	%
HV D.ratio_phase1N_13th	%
HV D.ratio_phase2N_total	%
HV D.ratio_phase2N_3rd	%
HV D.ratio_phase2N_5th	%
HV D.ratio_phase2N_7th	%
HV D.ratio_phase2N_9th	%
HV D.ratio_phase2N_11th	%
HV D.ratio_phase2N_13th	%
HV D.ratio_phase3N_total	%

Measured items	Unit
HV_D.ratio_phase3N_3rd	%
HV_D.ratio_phase3N_5th	%
HV_D.ratio_phase3N_7th	%
HV_D.ratio_phase3N_9th	%
HV_D.ratio_phase3N_11th	%
HV_D.ratio_phase3N_13th	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Unit can be set for any character up to 8 words.**

***3 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.**

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

***4 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).**

The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.3.8. EMU4-LG1-MB

Measured items	Unit
Leak_current(lo)	mA
Leak_demand_current	mA
Leak_current_for_resistance(lor)	mA
Leak_demand_current_for_resistance	mA
Leak_current_for_resistance_converted	mA
lo_alarm(step1)_occurrence_count	count
lo_alarm(step2)_occurrence_count	count
lor_alarm(step1)_occurrence_count	count
lor_alarm(step2)_occurrence_count	count

5.3.9. EMU4-A2

Measured items	Unit
Electric energy(Import)	kWh
Electric energy(Export)	kWh
Electric energy(Import)(1P2W_3)	kWh
Electric energy(Export)(1P2W_3)	kWh
Electric energy(Import)extended	kWh
Electric energy(Export)extended	kWh
Electric energy(Import)extended(1P2W_3)	kWh
Electric energy(Export)extended(1P2W_3)	kWh
Reactive energy(Import_lag)	kvarh
Reactive energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_phaseN	A
Current Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage Average line voltage	V
Voltage_phase1N	V
Voltage_phase2N	V
Voltage_phase3N	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive power	kvar
Reactive power(1P2W_3)	kvar
Power factor	%
Power factor(1P2W_1)	%
Power factor(1P2W_3)	%
Frequency	Hz
Current demand_phase1	A
Current demand_phase2	A
Current demand_phase3	A
Current demand_phase3(1P2W_3)	A
Current demand_phaseN	A
Electric power demand	kW
Electric power demand(1P2W_3)	kW
Operating time	h
Operating time(1P2W_3)	h
HA RMS phase1 total	A
HA RMS phase1_1st	A
HA RMS phase1_3rd	A
HA RMS phase1_5th	A
HA RMS phase1_7th	A
HA RMS phase1_9th	A
HA RMS phase1_11th	A
HA RMS phase1_13th	A
HA RMS phase2 total	A
HA RMS phase2_1st	A
HA RMS phase2_3rd	A
HA RMS phase2_5th	A
HA RMS phase2_7th	A
HA RMS phase2_9th	A
HA RMS phase2_11th	A
HA RMS phase2_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st	A
HA RMS phase3_3rd	A
HA RMS phase3_5th	A
HA RMS phase3_7th	A
HA RMS phase3_9th	A
HA RMS phase3_11th	A
HA RMS phase3_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st(1P2W_3)	A
HA RMS phase3_3rd(1P2W_3)	A
HA RMS phase3_5th(1P2W_3)	A
HA RMS phase3_7th(1P2W_3)	A

Measured items	Unit
HA RMS phase3_9th(1P2W_3)	A
HA RMS phase3_11th(1P2W_3)	A
HA RMS phase3_13th(1P2W_3)	A
HA RMS phaseN total	A
HA RMS phaseN_1st	A
HA RMS phaseN_3rd	A
HA RMS phaseN_5th	A
HA RMS phaseN_7th	A
HA RMS phaseN_9th	A
HA RMS phaseN_11th	A
HA RMS phaseN_13th	A
HA D.ratio_phase1 total	%
HA D.ratio_phase2 total	%
HA D.ratio_phase3 total	%
HA D.ratio_phaseN total	%
HV RMS phase12L total	V
HV RMS phase12L_1st	V
HV RMS phase12L_3rd	V
HV RMS phase12L_5th	V
HV RMS phase12L_7th	V
HV RMS phase12L_9th	V
HV RMS phase12L_11th	V
HV RMS phase12L_13th	V
HV RMS phase23L total	V
HV RMS phase23L_1st	V
HV RMS phase23L_3rd	V
HV RMS phase23L_5th	V
HV RMS phase23L_7th	V
HV RMS phase23L_9th	V
HV RMS phase23L_11th	V
HV RMS phase23L_13th	V
HV RMS phase1N total	V
HV RMS phase1N_1st	V
HV RMS phase2N total	V
HV RMS phase2N_1st	V
HV RMS phase3N total	V
HV RMS phase3N_1st	V
HV D.ratio_phase12L total	%
HV D.ratio_phase12L_3rd	%
HV D.ratio_phase12L_5th	%
HV D.ratio_phase12L_7th	%
HV D.ratio_phase12L_9th	%
HV D.ratio_phase12L_11th	%
HV D.ratio_phase12L_13th	%
HV D.ratio_phase23L total	%
HV D.ratio_phase23L_3rd	%
HV D.ratio_phase23L_5th	%
HV D.ratio_phase23L_7th	%
HV D.ratio_phase23L_9th	%
HV D.ratio_phase23L_11th	%
HV D.ratio_phase23L_13th	%
HV D.ratio_phase1N total	%
HV D.ratio_phase1N_3rd	%
HV D.ratio_phase1N_5th	%
HV D.ratio_phase1N_7th	%
HV D.ratio_phase1N_9th	%
HV D.ratio_phase1N_11th	%
HV D.ratio_phase1N_13th	%
HV D.ratio_phase2N total	%
HV D.ratio_phase2N_3rd	%
HV D.ratio_phase2N_5th	%
HV D.ratio_phase2N_7th	%
HV D.ratio_phase2N_9th	%
HV D.ratio_phase2N_11th	%
HV D.ratio_phase2N_13th	%
HV D.ratio_phase3N total	%
HV D.ratio_phase3N_3rd	%
HV D.ratio_phase3N_5th	%
HV D.ratio_phase3N_7th	%

Measured items	Unit
HV D.ratio_phase3N_9th	%
HV D.ratio_phase3N_11th	%
HV D.ratio_phase3N_13th	%

- *1 The measured items differ with the phase wire method.**
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.**
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *3 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).**
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.3.10. EMU4-VA2

Measured items	Unit
Electric energy(Import)	kWh
Electric energy(Export)	kWh
Electric energy(Import)(1P2W_3)	kWh
Electric energy(Export)(1P2W_3)	kWh
Electric energy(Import)extended	kWh
Electric energy(Export)extended	kWh
Electric energy(Import)extended(1P2W_3)	kWh
Electric energy(Export)extended(1P2W_3)	kWh
Reactive energy(Import lag)	kvarh
Reactive energy(Import lag)extended	kvarh
Current phase1	A
Current phase2	A
Current phase3	A
Current phase3(1P2W_3)	A
Current phaseN	A
Current Average	A
Voltage phase12L	V
Voltage phase23L	V
Voltage phase31L	V
Voltage Average line voltage	V
Voltage phase1N	V
Voltage phase2N	V
Voltage phase3N	V
Electric power	kW
Electric power(1P2W_3)	kW
Reactive power	kvar
Reactive power(1P2W_3)	kvar
Power factor	%
Power factor(1P2W_1)	%
Power factor(1P2W_3)	%
Frequency	Hz
Current demand phase1	A
Current demand phase2	A
Current demand phase3	A
Current demand phase3(1P2W_3)	A
Current demand phaseN	A
Electric power demand	kW
Electric power demand(1P2W_3)	kW
Operating time	h
Operating time(1P2W_3)	h
HA RMS phase1 total	A
HA RMS phase1 1st	A
HA RMS phase1 3rd	A
HA RMS phase1 5th	A
HA RMS phase1 7th	A
HA RMS phase1 9th	A
HA RMS phase1 11th	A
HA RMS phase1 13th	A
HA RMS phase2 total	A
HA RMS phase2 1st	A
HA RMS phase2 3rd	A
HA RMS phase2 5th	A
HA RMS phase2 7th	A
HA RMS phase2 9th	A
HA RMS phase2 11th	A
HA RMS phase2 13th	A
HA RMS phase3 total	A
HA RMS phase3 1st	A
HA RMS phase3 3rd	A
HA RMS phase3 5th	A
HA RMS phase3 7th	A
HA RMS phase3 9th	A
HA RMS phase3 11th	A
HA RMS phase3 13th	A
HA RMS phase3 total	A
HA RMS phase3 1st(1P2W_3)	A
HA RMS phase3 3rd(1P2W_3)	A
HA RMS phase3 5th(1P2W_3)	A
HA RMS phase3 7th(1P2W_3)	A

Measured items	Unit
HA RMS phase3 9th(1P2W_3)	A
HA RMS phase3 11th(1P2W_3)	A
HA RMS phase3 13th(1P2W_3)	A
HA RMS phaseN total	A
HA RMS phaseN 1st	A
HA RMS phaseN 3rd	A
HA RMS phaseN 5th	A
HA RMS phaseN 7th	A
HA RMS phaseN 9th	A
HA RMS phaseN 11th	A
HA RMS phaseN 13th	A
HA D.ratio phase1 total	%
HA D.ratio phase2 total	%
HA D.ratio phase3 total	%
HA D.ratio phaseN total	%
HV RMS phase12L total	V
HV RMS phase12L 1st	V
HV RMS phase12L 3rd	V
HV RMS phase12L 5th	V
HV RMS phase12L 7th	V
HV RMS phase12L 9th	V
HV RMS phase12L 11th	V
HV RMS phase12L 13th	V
HV RMS phase23L total	V
HV RMS phase23L 1st	V
HV RMS phase23L 3rd	V
HV RMS phase23L 5th	V
HV RMS phase23L 7th	V
HV RMS phase23L 9th	V
HV RMS phase23L 11th	V
HV RMS phase23L 13th	V
HV RMS phase1N total	V
HV RMS phase1N 1st	V
HV RMS phase2N total	V
HV RMS phase2N 1st	V
HV RMS phase3N total	V
HV RMS phase3N 1st	V
HV D.ratio phase12L total	%
HV D.ratio phase12L 3rd	%
HV D.ratio phase12L 5th	%
HV D.ratio phase12L 7th	%
HV D.ratio phase12L 9th	%
HV D.ratio phase12L 11th	%
HV D.ratio phase12L 13th	%
HV D.ratio phase23L total	%
HV D.ratio phase23L 3rd	%
HV D.ratio phase23L 5th	%
HV D.ratio phase23L 7th	%
HV D.ratio phase23L 9th	%
HV D.ratio phase23L 11th	%
HV D.ratio phase23L 13th	%
HV D.ratio phase1N total	%
HV D.ratio phase1N 3rd	%
HV D.ratio phase1N 5th	%
HV D.ratio phase1N 7th	%
HV D.ratio phase1N 9th	%
HV D.ratio phase1N 11th	%
HV D.ratio phase1N 13th	%
HV D.ratio phase2N total	%
HV D.ratio phase2N 3rd	%
HV D.ratio phase2N 5th	%
HV D.ratio phase2N 7th	%
HV D.ratio phase2N 9th	%
HV D.ratio phase2N 11th	%
HV D.ratio phase2N 13th	%
HV D.ratio phase3N total	%
HV D.ratio phase3N 3rd	%
HV D.ratio phase3N 5th	%
HV D.ratio phase3N 7th	%

Measured items	Unit
HV D.ratio_phase3N_9th	%
HV D.ratio_phase3N_11th	%
HV D.ratio_phase3N_13th	%

- *1 The measured items differ with the phase wire method.**
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.**
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *3 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).**
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.3.11. EMU4-AX4

Measured items	Unit
Ch1 analog value	<set> ^{*1}
Ch2 analog value	<set> ^{*1}
Ch3 analog value	<set> ^{*1}
Ch4 analog value	<set> ^{*1}
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count

***1 Unit can be set for any character up to 8 words.**

5.3.12. EMU4-PX4

Measured items	Unit
Ch1 pulse count value	<set> ^{*1}
Ch2 pulse count value	<set> ^{*1}
Ch3 pulse count value	<set> ^{*1}
Ch4 pulse count value	<set> ^{*1}
Ch1 digital input value	<set> ^{*1}
Ch2 digital input value	<set> ^{*1}
Ch3 digital input value	<set> ^{*1}
Ch4 digital input value	<set> ^{*1}
Ch1 operating time	h
Ch2 operating time	h
Ch3 operating time	h
Ch4 operating time	h

***1 Unit can be set for any character up to 8 words.**

5.3.13. EMU2-RD3-C, EMU2-RD5-C, EMU2-RD7-B

Measured items	Unit
Active energy	kWh
Reactive energy	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; average	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; L-N; average	V
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; maximum phase	A
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase3 D.ratio total	%

Measured items	Unit
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HV; phase1-2 RMS total	V
HV; phase1-2 RMS 1st	V
HV; phase1-2 RMS 3rd	V
HV; phase1-2 RMS 5th	V
HV; phase1-2 RMS 7th	V
HV; phase1-2 RMS 9th	V
HV; phase1-2 RMS 11th	V
HV; phase1-2 RMS 13th	V
HV; phase2-3 RMS total	V
HV; phase2-3 RMS 1st	V
HV; phase2-3 RMS 3rd	V
HV; phase2-3 RMS 5th	V
HV; phase2-3 RMS 7th	V
HV; phase2-3 RMS 9th	V
HV; phase2-3 RMS 11th	V
HV; phase2-3 RMS 13th	V
HV; phase1-2 D.ratio total	%
HV; phase1-2 D.ratio 3rd	%
HV; phase1-2 D.ratio 5th	%
HV; phase1-2 D.ratio 7th	%
HV; phase1-2 D.ratio 9th	%
HV; phase1-2 D.ratio 11th	%
HV; phase1-2 D.ratio 13th	%
HV; phase2-3 D.ratio total	%
HV; phase2-3 D.ratio 3rd	%
HV; phase2-3 D.ratio 5th	%
HV; phase2-3 D.ratio 7th	%
HV; phase2-3 D.ratio 9th	%
HV; phase2-3 D.ratio 11th	%
HV; phase2-3 D.ratio 13th	%
Active energy (exp.)	kWh

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

*2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. Because the detailed electric energy has a small number of significant digits, the monthly graph (daily amount) and the yearly graph (monthly amount) may not be displayed correctly. For details on the significant digits of electric energy, refer to the instruction manual or specification sheet of the terminal.

5.3.14. EMU2-RD2-C-4W, EMU2-RD4-C-4W

Measured items	Unit
Active energy	kWh
Reactive energy	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Current; average	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; L-N; average	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Current demand; maximum phase	A
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase2 RMS total	A
HA; phase2 RMS 1st	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase2 D.ratio total	%
HA; phase2 D.ratio 3rd	%
HA; phase2 D.ratio 5th	%
HA; phase2 D.ratio 7th	%
HA; phase2 D.ratio 9th	%

Measured items	Unit
HA; phase2 D.ratio 11th	%
HA; phase2 D.ratio 13th	%
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HV; phase1-N RMS total	V
HV; phase1-N RMS 1st	V
HV; phase1-N RMS 3rd	V
HV; phase1-N RMS 5th	V
HV; phase1-N RMS 7th	V
HV; phase1-N RMS 9th	V
HV; phase1-N RMS 11th	V
HV; phase1-N RMS 13th	V
HV; phase2-N RMS total	V
HV; phase2-N RMS 1st	V
HV; phase2-N RMS 3rd	V
HV; phase2-N RMS 5th	V
HV; phase2-N RMS 7th	V
HV; phase2-N RMS 9th	V
HV; phase2-N RMS 11th	V
HV; phase2-N RMS 13th	V
HV; phase3-N RMS total	V
HV; phase3-N RMS 1st	V
HV; phase3-N RMS 3rd	V
HV; phase3-N RMS 5th	V
HV; phase3-N RMS 7th	V
HV; phase3-N RMS 9th	V
HV; phase3-N RMS 11th	V
HV; phase3-N RMS 13th	V
HV; phase1-N D.ratio total	%
HV; phase1-N D.ratio 3rd	%
HV; phase1-N D.ratio 5th	%
HV; phase1-N D.ratio 7th	%
HV; phase1-N D.ratio 9th	%
HV; phase1-N D.ratio 11th	%
HV; phase1-N D.ratio 13th	%
HV; phase2-N D.ratio total	%
HV; phase2-N D.ratio 3rd	%
HV; phase2-N D.ratio 5th	%
HV; phase2-N D.ratio 7th	%
HV; phase2-N D.ratio 9th	%
HV; phase2-N D.ratio 11th	%
HV; phase2-N D.ratio 13th	%
HV; phase3-N D.ratio total	%
HV; phase3-N D.ratio 3rd	%
HV; phase3-N D.ratio 5th	%
HV; phase3-N D.ratio 7th	%
HV; phase3-N D.ratio 9th	%
HV; phase3-N D.ratio 11th	%
HV; phase3-N D.ratio 13th	%
Active energy (exp.)	kWh

*1 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. Because the detailed electric energy has a small number of significant digits, the monthly graph (daily amount) and the yearly graph (monthly amount) may not be displayed correctly. For details on the significant digits of electric energy, refer to the instruction manual or specification sheet of the terminal.

5.3.15. EMU3-DP1-C

Measured items	Unit
Active energy	kWh
Reactive energy	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; average	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; L-N; average	V
Leakage current	mA
Leakage current; Harmonic	mA
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Leakage current demand	mA
Leakage current demand; Harmonic	mA
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase1 RMS 15th	A
HA; phase1 RMS 17th	A
HA; phase1 RMS 19th	A
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A

Measured items	Unit
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase3 RMS 15th	A
HA; phase3 RMS 17th	A
HA; phase3 RMS 19th	A
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase1 D.ratio 15th	%
HA; phase1 D.ratio 17th	%
HA; phase1 D.ratio 19th	%
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HA; phase3 D.ratio 15th	%
HA; phase3 D.ratio 17th	%
HA; phase3 D.ratio 19th	%
Active energy (exp.)	kWh
Pulse counter value 1	*3
Pulse counter value 2	*3
Operating time 1	Min
Operating time 2	Min
Active energy (Operating:1)	kWh
Active energy (Operating:2)	kWh

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. Because the detailed electric energy has a small number of significant digits, the monthly graph (daily amount) and the yearly graph (monthly amount) may not be displayed correctly. For details on the significant digits of electric energy, refer to the instruction manual or specification sheet of the terminal.
- *3 For the pulse counter values, arbitrary characters (a maximum of 8 characters) can be set as the unit.
- *4 For the pulse counter values, 0.001 to 99999 (5 digits including the decimal point, up to 3 places after the decimal point) can be set as the multiplier.
Make sure that the pulse counter value for 1 month does not exceed the product of 999999 and the multiplier.

5.3.16. MDU (WS-V)

Measured items	Unit
Active energy	kWh
Reactive energy	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Current; average	A
Current; maximum phase	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Voltage; L-N; average	V
Leakage current	mA
Leakage current; Harmonic	mA
Active power	kW
Reactive energy	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Current demand; maximum phase	A
Leakage current demand	mA
Leakage current demand; Harmonic	mA
Electric power demand	kW
Reactive power demand	kvar
HA; phase1 RMS total	A
HA; phase2 RMS total	A
HA; phase3 RMS total	A
HA; phaseN RMS total	A
HA; phase1 RMS fundamental	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A

Measured items	Unit
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase1 RMS 15th	A
HA; phase1 RMS 17th	A
HA; phase1 RMS 19th	A
HA; phase2 RMS fundamental	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase2 RMS 15th	A
HA; phase2 RMS 17th	A
HA; phase2 RMS 19th	A
HA; phase3 RMS fundamental	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase3 RMS 15th	A
HA; phase3 RMS 17th	A
HA; phase3 RMS 19th	A
HA; phaseN RMS fundamental	A
HA; phaseN RMS 3rd	A
HA; phaseN RMS 5th	A
HA; phaseN RMS 7th	A
HA; phaseN RMS 9th	A
HA; phaseN RMS 11th	A
HA; phaseN RMS 13th	A
HA; phaseN RMS 15th	A
HA; phaseN RMS 17th	A
HA; phaseN RMS 19th	A
HA demand; phase1 RMS total	A
HA demand; phase2 RMS total	A
HA demand; phase3 RMS total	A
HA demand; phaseN RMS total	A

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.17. MDU(WS)

Measured items	Unit
Active energy	kWh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Current; average	A
Current; maximum phase	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Voltage; L-N; average	V
Leakage current	mA
Leakage current; Harmonic	mA
Active power	kW
Power factor	%
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Current demand; maximum phase	A
Leakage current demand	mA
Leakage current demand; Harmonic	mA
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase2 RMS total	A
HA; phase3 RMS total	A
HA; phaseN RMS total	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A

Measured items	Unit
HA; phase1 RMS 15th	A
HA; phase1 RMS 17th	A
HA; phase1 RMS 19th	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase2 RMS 15th	A
HA; phase2 RMS 17th	A
HA; phase2 RMS 19th	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase3 RMS 15th	A
HA; phase3 RMS 17th	A
HA; phase3 RMS 19th	A
HA; phaseN RMS 3rd	A
HA; phaseN RMS 5th	A
HA; phaseN RMS 7th	A
HA; phaseN RMS 9th	A
HA; phaseN RMS 11th	A
HA; phaseN RMS 13th	A
HA; phaseN RMS 15th	A
HA; phaseN RMS 17th	A
HA; phaseN RMS 19th	A
HA demand; phase1 RMS total	A
HA demand; phase2 RMS total	A
HA demand; phase3 RMS total	A
HA demand; phaseN RMS total	A

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

5.3.18. AE-SW(BIF-CC)

Measured items	Unit
Active energy	kWh
Reactive energy (Import:lag)	kvarh
Reactive energy (Import:lead)	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Voltage; L-L; maximum	V
Voltage; L-N; maximum	V
Leakage current	A
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Current demand; maximum phase	A
Leakage current demand	A
Electric power demand	kW
Reactive power demand	kvar
HA; phase1 RMS total	A
HA; phase2 RMS total	A
HA; phase3 RMS total	A
HA; phaseN RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase1 RMS 15th	A
HA; phase1 RMS 17th	A
HA; phase1 RMS 19th	A
HA; phase2 RMS 1st	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase2 RMS 15th	A
HA; phase2 RMS 17th	A
HA; phase2 RMS 19th	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A

Measured items	Unit
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase3 RMS 15th	A
HA; phase3 RMS 17th	A
HA; phase3 RMS 19th	A
HA; phaseN RMS 1st	A
HA; phaseN RMS 3rd	A
HA; phaseN RMS 5th	A
HA; phaseN RMS 7th	A
HA; phaseN RMS 9th	A
HA; phaseN RMS 11th	A
HA; phaseN RMS 13th	A
HA; phaseN RMS 15th	A
HA; phaseN RMS 17th	A
HA; phaseN RMS 19th	A
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase1 D.ratio 15th	%
HA; phase1 D.ratio 17th	%
HA; phase1 D.ratio 19th	%
HA; phase2 D.ratio total	%
HA; phase2 D.ratio 3rd	%
HA; phase2 D.ratio 5th	%
HA; phase2 D.ratio 7th	%
HA; phase2 D.ratio 9th	%
HA; phase2 D.ratio 11th	%
HA; phase2 D.ratio 13th	%
HA; phase2 D.ratio 15th	%
HA; phase2 D.ratio 17th	%
HA; phase2 D.ratio 19th	%
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HA; phase3 D.ratio 15th	%
HA; phase3 D.ratio 17th	%
HA; phase3 D.ratio 19th	%
HA; phaseN D.ratio total	%
HA; phaseN D.ratio 3rd	%
HA; phaseN D.ratio 5th	%
HA; phaseN D.ratio 7th	%
HA; phaseN D.ratio 9th	%
HA; phaseN D.ratio 11th	%
HA; phaseN D.ratio 13th	%
HA; phaseN D.ratio 15th	%
HA; phaseN D.ratio 17th	%
HA; phaseN D.ratio 19th	%
VA	kVA
VA demand	kVA

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

5.3.19. ME96NSR

Measured items	Unit
Active energy (Import)	kWh
Active energy (Export)	kWh
Reactive energy (Import:lag)	kvarh
Reactive energy (Export:lag)	kvarh
Reactive energy (Import:lead)	kvarh
Reactive energy (Export:lead)	kvarh
Active energy (Import:exp.)	kWh
Active energy (Export:exp.)	kWh
Reactive energy (Import:lag:exp.)	kvarh
Reactive energy (Export:lag:exp.)	kvarh
Reactive energy (Import:lead:exp.)	kvarh
Reactive energy (Export:lead:exp.)	kvarh
Current; average	A
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Current demand; average	A
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Voltage; L-L; average	V
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; L-N; average	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Active power; total	kW
Reactive power; total	kvar
Active power; phase1	kW
Active power; phase2	kW

Measured items	Unit
Active power; phase3	kW
Reactive power; phase1	kvar
Reactive power; phase2	kvar
Reactive power; phase3	kvar
VA; total	kVA
VA; phase1	kVA
VA; phase2	kVA
VA; phase3	kVA
Power factor	%
Power factor; phase1	%
Power factor; phase2	%
Power factor; phase3	%
Frequency	Hz
HV; phase1-2 RMS total	V
HV; phase1-2 RMS 1st	V
HV; phase1-2 RMS 3rd	V
HV; phase1-2 RMS 5th	V
HV; phase1-2 RMS 7th	V
HV; phase1-2 RMS 9th	V
HV; phase1-2 RMS 11th	V
HV; phase1-2 RMS 13th	V
HV; phase1-2 D.ratio total	%
HV; phase1-2 D.ratio 3rd	%
HV; phase1-2 D.ratio 5th	%
HV; phase1-2 D.ratio 7th	%
HV; phase1-2 D.ratio 9th	%
HV; phase1-2 D.ratio 11th	%
HV; phase1-2 D.ratio 13th	%
HV; phase2-3 RMS total	V
HV; phase2-3 RMS 1st	V
HV; phase2-3 RMS 3rd	V
HV; phase2-3 RMS 5th	V
HV; phase2-3 RMS 7th	V
HV; phase2-3 RMS 9th	V

Measured items	Unit
HV; phase2-3 RMS 11th	V
HV; phase2-3 RMS 13th	V
HV; phase2-3 D.ratio total	%
HV; phase2-3 D.ratio 3rd	%
HV; phase2-3 D.ratio 5th	%
HV; phase2-3 D.ratio 7th	%
HV; phase2-3 D.ratio 9th	%
HV; phase2-3 D.ratio 11th	%
HV; phase2-3 D.ratio 13th	%
HV; phase1-N RMS total	V
HV; phase1-N RMS 1st	V
HV; phase1-N RMS 3rd	V
HV; phase1-N RMS 5th	V
HV; phase1-N RMS 7th	V
HV; phase1-N RMS 9th	V
HV; phase1-N RMS 11th	V
HV; phase1-N RMS 13th	V
HV; phase1-N D.ratio total	%
HV; phase1-N D.ratio 3rd	%
HV; phase1-N D.ratio 5th	%
HV; phase1-N D.ratio 7th	%
HV; phase1-N D.ratio 9th	%
HV; phase1-N D.ratio 11th	%
HV; phase1-N D.ratio 13th	%
HV; phase2-N RMS total	V
HV; phase2-N RMS 1st	V
HV; phase2-N RMS 3rd	V
HV; phase2-N RMS 5th	V
HV; phase2-N RMS 7th	V
HV; phase2-N RMS 9th	V
HV; phase2-N RMS 11th	V
HV; phase2-N RMS 13th	V
HV; phase2-N D.ratio total	%
HV; phase2-N D.ratio 3rd	%
HV; phase2-N D.ratio 5th	%
HV; phase2-N D.ratio 7th	%
HV; phase2-N D.ratio 9th	%
HV; phase2-N D.ratio 11th	%
HV; phase2-N D.ratio 13th	%
HV; phase3-N RMS total	V
HV; phase3-N RMS 1st	V
HV; phase3-N RMS 3rd	V
HV; phase3-N RMS 5th	V
HV; phase3-N RMS 7th	V
HV; phase3-N RMS 9th	V
HV; phase3-N RMS 11th	V
HV; phase3-N RMS 13th	V
HV; phase3-N D.ratio total	%
HV; phase3-N D.ratio 3rd	%
HV; phase3-N D.ratio 5th	%
HV; phase3-N D.ratio 7th	%
HV; phase3-N D.ratio 9th	%
HV; phase3-N D.ratio 11th	%
HV; phase3-N D.ratio 13th	%
HV; L-L D.ratio total	%
HV; L-L 1st	V
HV; L-L D.ratio 3rd	%
HV; L-L D.ratio 5th	%
HV; L-L D.ratio 7th	%
HV; L-L D.ratio 9th	%
HV; L-L D.ratio 11th	%
HV; L-L D.ratio 13th	%

Measured items	Unit
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase2 RMS total	A
HA; phase2 RMS 1st	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase2 D.ratio total	%
HA; phase2 D.ratio 3rd	%
HA; phase2 D.ratio 5th	%
HA; phase2 D.ratio 7th	%
HA; phase2 D.ratio 9th	%
HA; phase2 D.ratio 11th	%
HA; phase2 D.ratio 13th	%
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HA; phaseN RMS total	A
HA; phaseN RMS 1st	A
HA; phaseN RMS 3rd	A
HA; phaseN RMS 5th	A
HA; phaseN RMS 7th	A
HA; phaseN RMS 9th	A
HA; phaseN RMS 11th	A
HA; phaseN RMS 13th	A
HA; phaseN D.ratio total	%
HA; phaseN D.ratio 3rd	%
HA; phaseN D.ratio 5th	%
HA; phaseN D.ratio 7th	%
HA; phaseN D.ratio 9th	%
HA; phaseN D.ratio 11th	%
HA; phaseN D.ratio 13th	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

*2 Expanded version of power amount and reactive power amount can be displayed up to 3 digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.

The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.3.20. ME96SSHB-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Periodic active energy 3	kWh
Operating time1	h
Operating time2	h
CO2 equivalent	kg
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand kW Last	kW
Total rolling demand kW Present	kW
Total rolling demand kW Predict	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total rolling demand kvar Last	kvar
Total rolling demand kvar Present	kvar
Total rolling demand kvar Predict	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA

Measured items	Unit
Total rolling demand kVA Last	kVA
Total rolling demand kVA Present	kVA
Total rolling demand kVA Predict	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
Current unbalance rate	%
Voltage unbalance rate	%
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
1-2 voltage HD 21st	%
1-2 voltage HD 23rd	%
1-2 voltage HD 25th	%
1-2 voltage HD 27th	%
1-2 voltage HD 29th	%
1-2 voltage HD 31st	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
2-3 voltage HD 21st	%
2-3 voltage HD 23rd	%
2-3 voltage HD 25th	%
2-3 voltage HD 27th	%
2-3 voltage HD 29th	%
2-3 voltage HD 31st	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%

Measured items	Unit
1-N voltage HD 21st	%
1-N voltage HD 23rd	%
1-N voltage HD 25th	%
1-N voltage HD 27th	%
1-N voltage HD 29th	%
1-N voltage HD 31st	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%
2-N voltage HD 21st	%
2-N voltage HD 23rd	%
2-N voltage HD 25th	%
2-N voltage HD 27th	%
2-N voltage HD 29th	%
2-N voltage HD 31st	%
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
3-N voltage HD 21st	%
3-N voltage HD 23rd	%
3-N voltage HD 25th	%
3-N voltage HD 27th	%
3-N voltage HD 29th	%
3-N voltage HD 31st	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 H current 21st	A
1 H current 23rd	A
1 H current 25th	A
1 H current 27th	A
1 H current 29th	A
1 H current 31st	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A

Measured items	Unit
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A
2 H current 21st	A
2 H current 23rd	A
2 H current 25th	A
2 H current 27th	A
2 H current 29th	A
2 H current 31st	A
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 21st	A
3 H current 23rd	A
3 H current 25th	A
3 H current 27th	A
3 H current 29th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N H current 21st	A
N H current 23rd	A
N H current 25th	A
N H current 27th	A
N H current 29th	A
N H current 31st	A
N current THD	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

*2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.3.21. ME96SSRB-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Periodic active energy 3	kWh
Operating time1	h
Operating time2	h
CO2 equivalent	kg
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand kW Last	kW
Total rolling demand kW Present	kW
Total rolling demand kW Predict	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total rolling demand kvar Last	kvar
Total rolling demand kvar Present	kvar
Total rolling demand kvar Predict	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA

Measured items	Unit
Total rolling demand kVA Last	kVA
Total rolling demand kVA Present	kVA
Total rolling demand kVA Predict	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
Current unbalance rate	%
Voltage unbalance rate	%
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%

Measured items	Unit
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A

Measured items	Unit
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N current THD	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits. Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**

5.3.22. ME96SSHA-MB

Measured items	Unit
Active_energy_Import	kWh
Active_energy_Export	kWh
Reactive_energy_Import_lag	kvarh
Reactive_energy_Export_lag	kvarh
Reactive_energy_Import_lead	kvarh
Reactive_energy_Export_lead	kvarh
Active_energy_Import_extended	kWh
Active_energy_Export_extended	kWh
Reactive_energy_Import_lag_extended	kvarh
Reactive_energy_Export_lag_extended	kvarh
Reactive_energy_Import_lead_extended	kvarh
Reactive_energy_Export_lead_extended	kvarh
Apparent_energy	kVAh
Periodic_active_energy_1	kWh
Periodic_active_energy_2	kWh
Operating_time1	h
Operating_time2	h
Average_current	A
Phase1_current	A
Phase2_current	A
Phase3_current	A
PhaseN_current	A
Average_current_demand	A
Phase1_current_demand	A
Phase2_current_demand	A
Phase3_current_demand	A
PhaseN_current_demand	A
Average_L-L_voltage	V
1-2_voltage	V
2-3_voltage	V
3-1_voltage	V
Average_L-L_voltage(3P4W)	V
1-2_voltage(3P4W)	V
2-3_voltage(3P4W)	V
3-1_voltage(3P4W)	V
Average_L-N_voltage	V
1-N_voltage	V
2-N_voltage	V
3-N_voltage	V
Total_active_power	kW
Phase1_active_power	kW
Phase2_active_power	kW
Phase3_active_power	kW
Total_rolling_demand	kW
Total_reactive_power	kvar
Phase1_reactive_power	kvar
Phase2_reactive_power	kvar
Phase3_reactive_power	kvar
Total_rolling_demand_reactive_power	kvar
Total_apparent_power	kVA
Phase1_apparent_power	kVA
Phase2_apparent_power	kVA
Phase3_apparent_power	kVA
Total_rolling_demand_apparent_power	kVA
Total_power_factor	%

Measured items	Unit
Phase1_power_factor	%
Phase2_power_factor	%
Phase3_power_factor	%
Frequency	Hz
1-2_H_voltage_Total	V
1-2_H_voltage_1st	V
1-2_voltage_THD	%
1-2_voltage_HD_3rd	%
1-2_voltage_HD_5th	%
1-2_voltage_HD_7th	%
1-2_voltage_HD_9th	%
1-2_voltage_HD_11th	%
1-2_voltage_HD_13th	%
1-2_voltage_HD_15th	%
1-2_voltage_HD_17th	%
1-2_voltage_HD_19th	%
1-2_voltage_HD_21st	%
1-2_voltage_HD_23rd	%
1-2_voltage_HD_25th	%
1-2_voltage_HD_27th	%
1-2_voltage_HD_29th	%
1-2_voltage_HD_31st	%
2-3_H_voltage_Total	V
2-3_H_voltage_1st	V
2-3_voltage_THD	%
2-3_voltage_HD_3rd	%
2-3_voltage_HD_5th	%
2-3_voltage_HD_7th	%
2-3_voltage_HD_9th	%
2-3_voltage_HD_11th	%
2-3_voltage_HD_13th	%
2-3_voltage_HD_15th	%
2-3_voltage_HD_17th	%
2-3_voltage_HD_19th	%
2-3_voltage_HD_21st	%
2-3_voltage_HD_23rd	%
2-3_voltage_HD_25th	%
2-3_voltage_HD_27th	%
2-3_voltage_HD_29th	%
2-3_voltage_HD_31st	%
1-N_H_voltage_Total	V
1-N_H_voltage_1st	V
1-N_voltage_THD	%
1-N_voltage_HD_3rd	%
1-N_voltage_HD_5th	%
1-N_voltage_HD_7th	%
1-N_voltage_HD_9th	%
1-N_voltage_HD_11th	%
1-N_voltage_HD_13th	%
1-N_voltage_HD_15th	%
1-N_voltage_HD_17th	%
1-N_voltage_HD_19th	%

Measured items	Unit
1-N voltage HD 21st	%
1-N voltage HD 23rd	%
1-N voltage HD 25th	%
1-N voltage HD 27th	%
1-N voltage HD 29th	%
1-N voltage HD 31st	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%
2-N voltage HD 21st	%
2-N voltage HD 23rd	%
2-N voltage HD 25th	%
2-N voltage HD 27th	%
2-N voltage HD 29th	%
2-N voltage HD 31st	%
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
3-N voltage HD 21st	%
3-N voltage HD 23rd	%
3-N voltage HD 25th	%
3-N voltage HD 27th	%
3-N voltage HD 29th	%
3-N voltage HD 31st	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 H current 21st	A
1 H current 23rd	A
1 H current 25th	A
1 H current 27th	A
1 H current 29th	A
1 H current 31st	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A

Measured items	Unit
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A
2 H current 21st	A
2 H current 23rd	A
2 H current 25th	A
2 H current 27th	A
2 H current 29th	A
2 H current 31st	A
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 21st	A
3 H current 23rd	A
3 H current 25th	A
3 H current 27th	A
3 H current 29th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N H current 21st	A
N H current 23rd	A
N H current 25th	A
N H current 27th	A
N H current 29th	A
N H current 31st	A
N current THD	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

*2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.3.23. ME96SSRA-MB

Measured items	Unit
Active_energy_Import	kWh
Active_energy_Export	kWh
Reactive_energy_Import_lag	kvarh
Reactive_energy_Export_lag	kvarh
Reactive_energy_Import_lead	kvarh
Reactive_energy_Export_lead	kvarh
Active_energy_Import_extended	kWh
Active_energy_Export_extended	kWh
Reactive_energy_Import_lag_extended	kvarh
Reactive_energy_Export_lag_extended	kvarh
Reactive_energy_Import_lead_extended	kvarh
Reactive_energy_Export_lead_extended	kvarh
Apparent_energy	kVAh
Periodic_active_energy_1	kWh
Periodic_active_energy_2	kWh
Operating_time1	h
Operating_time2	h
Average_current	A
Phase1_current	A
Phase2_current	A
Phase3_current	A
PhaseN_current	A
Average_current_demand	A
Phase1_current_demand	A
Phase2_current_demand	A
Phase3_current_demand	A
PhaseN_current_demand	A
Average_L-L_voltage	V
1-2_voltage	V
2-3_voltage	V
3-1_voltage	V
Average_L-L_voltage(3P4W)	V
1-2_voltage(3P4W)	V
2-3_voltage(3P4W)	V
3-1_voltage(3P4W)	V
Average_L-N_voltage	V
1-N_voltage	V
2-N_voltage	V
3-N_voltage	V
Total_active_power	kW
Phase1_active_power	kW
Phase2_active_power	kW
Phase3_active_power	kW
Total_rolling_demand	kW
Total_reactive_power	kvar
Phase1_reactive_power	kvar
Phase2_reactive_power	kvar
Phase3_reactive_power	kvar
Total_rolling_demand_reactive_power	kvar
Total_apparent_power	kVA
Phase1_apparent_power	kVA
Phase2_apparent_power	kVA
Phase3_apparent_power	kVA
Total_rolling_demand_apparent_power	kVA
Total_power_factor	%

Measured items	Unit
Phase1_power_factor	%
Phase2_power_factor	%
Phase3_power_factor	%
Frequency	Hz
1-2_H_voltage_Total	V
1-2_H_voltage_1st	V
1-2_voltage_THD	%
1-2_voltage_HD_3rd	%
1-2_voltage_HD_5th	%
1-2_voltage_HD_7th	%
1-2_voltage_HD_9th	%
1-2_voltage_HD_11th	%
1-2_voltage_HD_13th	%
1-2_voltage_HD_15th	%
1-2_voltage_HD_17th	%
1-2_voltage_HD_19th	%
2-3_H_voltage_Total	V
2-3_H_voltage_1st	V
2-3_voltage_THD	%
2-3_voltage_HD_3rd	%
2-3_voltage_HD_5th	%
2-3_voltage_HD_7th	%
2-3_voltage_HD_9th	%
2-3_voltage_HD_11th	%
2-3_voltage_HD_13th	%
2-3_voltage_HD_15th	%
2-3_voltage_HD_17th	%
2-3_voltage_HD_19th	%
1-N_H_voltage_Total	V
1-N_H_voltage_1st	V
1-N_voltage_THD	%
1-N_voltage_HD_3rd	%
1-N_voltage_HD_5th	%
1-N_voltage_HD_7th	%
1-N_voltage_HD_9th	%
1-N_voltage_HD_11th	%
1-N_voltage_HD_13th	%
1-N_voltage_HD_15th	%
1-N_voltage_HD_17th	%
1-N_voltage_HD_19th	%
2-N_H_voltage_Total	V
2-N_H_voltage_1st	V
2-N_voltage_THD	%
2-N_voltage_HD_3rd	%
2-N_voltage_HD_5th	%
2-N_voltage_HD_7th	%
2-N_voltage_HD_9th	%
2-N_voltage_HD_11th	%
2-N_voltage_HD_13th	%
2-N_voltage_HD_15th	%
2-N_voltage_HD_17th	%
2-N_voltage_HD_19th	%

Measured items	Unit
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A

Measured items	Unit
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N current THD	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.**

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.3.24. ME96SSH-MB (1P2W, 3P3W)

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
Average current max	A
Phase1 current max	A
Phase2 current max	A
Phase3 current max	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
Average current demand max	A
Phase1 current demand max	A
Phase2 current demand max	A
Phase3 current demand max	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage max	V
1-2 voltage max	V
2-3 voltage max	V
3-1 voltage max	V
Average L-L voltage min	V
1-2 voltage min	V
2-3 voltage min	V
3-1 voltage min	V
Total active power	kW
Total active power max	kW
Total active power min	kW
Total rolling demand	kW
Total rolling demand max	kW
Total reactive power	kvar
Total reactive power max	kvar
Total reactive power min	kvar
Total power factor	%
Total power factor max	%
Total power factor min	%
Frequency	Hz
Frequency max	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
1-2 voltage HD 21st	%
1-2 voltage HD 23rd	%
1-2 voltage HD 25th	%
1-2 voltage HD 27th	%
1-2 voltage HD 29th	%
1-2 voltage HD 31st	%

Measured items	Unit
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
2-3 voltage HD 21st	%
2-3 voltage HD 23rd	%
2-3 voltage HD 25th	%
2-3 voltage HD 27th	%
2-3 voltage HD 29th	%
2-3 voltage HD 31st	%
1-H current Total	A
1-H current 1st	A
1-H current 3rd	A
1-H current 5th	A
1-H current 7th	A
1-H current 9th	A
1-H current 11th	A
1-H current 13th	A
1-H current 15th	A
1-H current 17th	A
1-H current 19th	A
1-H current 21st	A
1-H current 23rd	A
1-H current 25th	A
1-H current 27th	A
1-H current 29th	A
1-H current 31th	A
1 current THD	%
2-H current Total	A
2-H current 1st	A
2-H current 3rd	A
2-H current 5th	A
2-H current 7th	A
2-H current 9th	A
2-H current 11th	A
2-H current 13th	A
2-H current 15th	A
2-H current 17th	A
2-H current 19th	A
2-H current 21st	A
2-H current 23rd	A
2-H current 25th	A
2-H current 27th	A
2-H current 29th	A
2-H current 31th	A
2 current THD	%
3-H current Total	A
3-H current 1st	A
3-H current 3rd	A
3-H current 5th	A
3-H current 7th	A
3-H current 9th	A
3-H current 11th	A
3-H current 13th	A
3-H current 15th	A
3-H current 17th	A
3-H current 19th	A
3-H current 21st	A
3-H current 23rd	A
3-H current 25th	A
3-H current 27th	A
3-H current 29th	A
3-H current 31th	A
3 current THD	%

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.25. ME96SSH-MB (1P3W)

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
Average current max	A
Phase1 current max	A
Phase2 current max	A
Phase3 current max	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
Average current demand max	A
Phase1 current demand max	A
Phase2 current demand max	A
Phase3 current demand max	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage max	V
1-2 voltage max	V
2-3 voltage max	V
3-1 voltage max	V
Average L-L voltage min	V
1-2 voltage min	V
2-3 voltage min	V
3-1 voltage min	V
Total active power	kW
Total active power max	kW
Total active power min	kW
Total rolling demand	kW
Total rolling demand max	kW
Total reactive power	kvar
Total reactive power max	kvar
Total reactive power min	kvar
Total power factor	%
Total power factor max	%
Total power factor min	%
Frequency	Hz
Frequency max	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3 rd	%
1-2 voltage HD 5 th	%
1-2 voltage HD 7 th	%
1-2 voltage HD 9 th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
1-2 voltage HD 21st	%
1-2 voltage HD 23rd	%
1-2 voltage HD 25th	%
1-2 voltage HD 27th	%
1-2 voltage HD 29th	%
1-2 voltage HD 31st	%

Measured items	Unit
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
2-3 voltage HD 21st	%
2-3 voltage HD 23rd	%
2-3 voltage HD 25th	%
2-3 voltage HD 27th	%
2-3 voltage HD 29th	%
2-3 voltage HD 31st	%
1-H current Total	A
1-H current 1st	A
1-H current 3rd	A
1-H current 5th	A
1-H current 7th	A
1-H current 9th	A
1-H current 11th	A
1-H current 13th	A
1-H current 15th	A
1-H current 17th	A
1-H current 19th	A
1-H current 21st	A
1-H current 23rd	A
1-H current 25th	A
1-H current 27th	A
1-H current 29th	A
1-H current 31th	A
1 current THD	%
2-H current Total	A
2-H current 1st	A
2-H current 3rd	A
2-H current 5th	A
2-H current 7th	A
2-H current 9th	A
2-H current 11th	A
2-H current 13th	A
2-H current 15th	A
2-H current 17th	A
2-H current 19th	A
2-H current 21st	A
2-H current 23rd	A
2-H current 25th	A
2-H current 27th	A
2-H current 29th	A
2-H current 31th	A
2 current THD	%
3-H current Total	A
3-H current 1st	A
3-H current 3rd	A
3-H current 5th	A
3-H current 7th	A
3-H current 9th	A
3-H current 11th	A
3-H current 13th	A
3-H current 15th	A
3-H current 17th	A
3-H current 19th	A
3-H current 21st	A
3-H current 23rd	A
3-H current 25th	A
3-H current 27th	A
3-H current 29th	A
3-H current 31th	A
3 current THD	%

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.26. ME96SSH-MB (3P4W)

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current max	A
Phase1 current max	A
Phase2 current max	A
Phase3 current max	A
PhaseN current max	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average current demand max	A
Phase1 current demand max	A
Phase2 current demand max	A
Phase3 current demand max	A
PhaseN current demand max	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage max	V
1-2 voltage max	V
2-3 voltage max	V
3-1 voltage max	V
Average L-L voltage min	V
1-2 voltage min	V
2-3 voltage min	V
3-1 voltage min	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Average L-N voltage max	V
1-N voltage max	V
2-N voltage max	V
3-N voltage max	V
Average L-N voltage min	V
1-N voltage min	V
2-N voltage min	V
3-N voltage min	V

Measured items	Unit
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total active power max	kW
Phase1 active power max	kW
Phase2 active power max	kW
Phase3 active power max	kW
Total active power min	kW
Phase1 active power min	kW
Phase2 active power min	kW
Phase3 active power min	kW
Total rolling demand	kW
Total rolling demand max	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total reactive power max	kvar
Phase1 reactive power max	kvar
Phase2 reactive power max	kvar
Phase3 reactive power max	kvar
Total reactive power min	kvar
Phase1 reactive power min	kvar
Phase2 reactive power min	kvar
Phase3 reactive power min	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total apparent power max	kVA
Phase1 apparent power max	kVA
Phase2 apparent power max	kVA
Phase3 apparent power max	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Total power factor max	%
Phase1 power factor max	%
Phase2 power factor max	%
Phase3 power factor max	%
Total power factor min	%
Phase1 power factor min	%
Phase2 power factor min	%
Phase3 power factor min	%
Frequency	Hz
Frequency max	Hz

Measured items	Unit
1-N_H_voltage_Total	V
1-N_H_voltage_1st	V
1-N_voltage_THD	%
1-N_voltage_HD_3rd	%
1-N_voltage_HD_5th	%
1-N_voltage_HD_7th	%
1-N_voltage_HD_9th	%
1-N_voltage_HD_11th	%
1-N_voltage_HD_13th	%
1-N_voltage_HD_15th	%
1-N_voltage_HD_17th	%
1-N_voltage_HD_19th	%
1-N_voltage_HD_21st	%
1-N_voltage_HD_23rd	%
1-N_voltage_HD_25th	%
1-N_voltage_HD_27th	%
1-N_voltage_HD_29th	%
1-N_voltage_HD_31st	%
2-N_H_voltage_Total	V
2-N_H_voltage_1st	V
2-N_voltage_THD	%
2-N_voltage_HD_3rd	%
2-N_voltage_HD_5th	%
2-N_voltage_HD_7th	%
2-N_voltage_HD_9th	%
2-N_voltage_HD_11th	%
2-N_voltage_HD_13th	%
2-N_voltage_HD_15th	%
2-N_voltage_HD_17th	%
2-N_voltage_HD_19th	%
2-N_voltage_HD_21st	%
2-N_voltage_HD_23rd	%
2-N_voltage_HD_25th	%
2-N_voltage_HD_27th	%
2-N_voltage_HD_29th	%
2-N_voltage_HD_31st	%
3-N_H_voltage_Total	V
3-N_H_voltage_1st	V
3-N_voltage_THD	%
3-N_voltage_HD_3rd	%
3-N_voltage_HD_5th	%
3-N_voltage_HD_7th	%
3-N_voltage_HD_9th	%
3-N_voltage_HD_11th	%
3-N_voltage_HD_13th	%
3-N_voltage_HD_15th	%
3-N_voltage_HD_17th	%
3-N_voltage_HD_19th	%
3-N_voltage_HD_21st	%
3-N_voltage_HD_23rd	%
3-N_voltage_HD_25th	%
3-N_voltage_HD_27th	%
3-N_voltage_HD_29th	%
3-N_voltage_HD_31st	%
1-H_current_Total	A
1-H_current_1st	A
1-H_current_3rd	A
1-H_current_5th	A
1-H_current_7th	A
1-H_current_9th	A
1-H_current_11th	A
1-H_current_13th	A
1-H_current_15th	A

Measured items	Unit
1-H_current_17th	A
1-H_current_19th	A
1-H_current_21st	A
1-H_current_23rd	A
1-H_current_25th	A
1-H_current_27th	A
1-H_current_29th	A
1-H_current_31th	A
1 current_THD	%
2-H_current_Total	A
2-H_current_1st	A
2-H_current_3rd	A
2-H_current_5th	A
2-H_current_7th	A
2-H_current_9th	A
2-H_current_11th	A
2-H_current_13th	A
2-H_current_15th	A
2-H_current_17th	A
2-H_current_19th	A
2-H_current_21st	A
2-H_current_23rd	A
2-H_current_25th	A
2-H_current_27th	A
2-H_current_29th	A
2-H_current_31th	A
2 current_THD	%
3-H_current_Total	A
3-H_current_1st	A
3-H_current_3rd	A
3-H_current_5th	A
3-H_current_7th	A
3-H_current_9th	A
3-H_current_11th	A
3-H_current_13th	A
3-H_current_15th	A
3-H_current_17th	A
3-H_current_19th	A
3-H_current_21st	A
3-H_current_23rd	A
3-H_current_25th	A
3-H_current_27th	A
3-H_current_29th	A
3-H_current_31th	A
3 current_THD	%
N-H_current_Total	A
N-H_current_1st	A
N-H_current_3rd	A
N-H_current_5th	A
N-H_current_7th	A
N-H_current_9th	A
N-H_current_11th	A
N-H_current_13th	A
N-H_current_15th	A
N-H_current_17th	A
N-H_current_19th	A
N-H_current_21st	A
N-H_current_23rd	A
N-H_current_25th	A
N-H_current_27th	A
N-H_current_29th	A
N-H_current_31th	A

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.27. ME96SSR-MB (1P2W, 3P3W)

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
Average current max	A
Phase1 current max	A
Phase2 current max	A
Phase3 current max	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
Average current demand max	A
Phase1 current demand max	A
Phase2 current demand max	A
Phase3 current demand max	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage max	V
1-2 voltage max	V
2-3 voltage max	V
3-1 voltage max	V
Average L-L voltage min	V
1-2 voltage min	V
2-3 voltage min	V
3-1 voltage min	V
Total active power	kW
Total active power max	kW
Total active power min	kW
Total rolling demand	kW
Total rolling demand max	kW
Total reactive power	kvar
Total reactive power max	kvar
Total reactive power min	kvar
Total power factor	%
Total power factor max	%
Total power factor min	%
Frequency	Hz
Frequency_max	Hz

Measured items	Unit
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
1-H current Total	A
1-H current 1st	A
1-H current 3rd	A
1-H current 5th	A
1-H current 7th	A
1-H current 9th	A
1-H current 11th	A
1-H current 13th	A
1 current THD	%
2-H current Total	A
2-H current 1st	A
2-H current 3rd	A
2-H current 5th	A
2-H current 7th	A
2-H current 9th	A
2-H current 11th	A
2-H current 13th	A
2 current THD	%
3-H current Total	A
3-H current 1st	A
3-H current 3rd	A
3-H current 5th	A
3-H current 7th	A
3-H current 9th	A
3-H current 11th	A
3-H current 13th	A
3 current THD	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

5.3.28. ME96SSR-MB (1P3W)

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
Average current max	A
Phase1 current max	A
Phase2 current max	A
Phase3 current max	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
Average current demand max	A
Phase1 current demand max	A
Phase2 current demand max	A
Phase3 current demand max	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage max	V
1-2 voltage max	V
2-3 voltage max	V
3-1 voltage max	V
Average L-L voltage min	V
1-2 voltage min	V
2-3 voltage min	V
3-1 voltage min	V
Total active power	kW
Total active power max	kW
Total active power min	kW
Total rolling demand	kW
Total rolling demand max	kW
Total reactive power	kvar
Total reactive power max	kvar
Total reactive power min	kvar

Measured items	Unit
Total power factor	%
Total power factor max	%
Total power factor min	%
Frequency	Hz
Frequency max	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
1-H current Total	A
1-H current 1st	A
1-H current 3rd	A
1-H current 5th	A
1-H current 7th	A
1-H current 9th	A
1-H current 11th	A
1-H current 13th	A
1 current THD	%
3-H current Total	A
3-H current 1st	A
3-H current 3rd	A
3-H current 5th	A
3-H current 7th	A
3-H current 9th	A
3-H current 11th	A
3-H current 13th	A
3 current THD	%

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.29. ME96SSR-MB (3P4W)

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current max	A
Phase1 current max	A
Phase2 current max	A
Phase3 current max	A
PhaseN current max	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average current demand max	A
Phase1 current demand max	A
Phase2 current demand max	A
Phase3 current demand max	A
PhaseN current demand max	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage max	V
1-2 voltage max	V
2-3 voltage max	V
3-1 voltage max	V
Average L-L voltage min	V
1-2 voltage min	V
2-3 voltage min	V
3-1 voltage min	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Average L-N voltage max	V
1-N voltage max	V
2-N voltage max	V
3-N voltage max	V
Average L-N voltage min	V
1-N voltage min	V
2-N voltage min	V
3-N voltage min	V

Measured items	Unit
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total active power max	kW
Phase1 active power max	kW
Phase2 active power max	kW
Phase3 active power max	kW
Total active power min	kW
Phase1 active power min	kW
Phase2 active power min	kW
Phase3 active power min	kW
Total rolling demand	kW
Total rolling demand max	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total reactive power max	kvar
Phase1 reactive power max	kvar
Phase2 reactive power max	kvar
Phase3 reactive power max	kvar
Total reactive power min	kvar
Phase1 reactive power min	kvar
Phase2 reactive power min	kvar
Phase3 reactive power min	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total apparent power max	kVA
Phase1 apparent power max	kVA
Phase2 apparent power max	kVA
Phase3 apparent power max	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Total power factor max	%
Phase1 power factor max	%
Phase2 power factor max	%
Phase3 power factor max	%
Total power factor min	%
Phase1 power factor min	%
Phase2 power factor min	%
Phase3 power factor min	%
Frequency	Hz
Frequency max	Hz

Measured items	Unit
1-N_H_voltage_Total	V
1-N_H_voltage_1st	V
1-N_voltage_THD	%
1-N_voltage_HD_3rd	%
1-N_voltage_HD_5th	%
1-N_voltage_HD_7th	%
1-N_voltage_HD_9th	%
1-N_voltage_HD_11th	%
1-N_voltage_HD_13th	%
2-N_H_voltage_Total	V
2-N_H_voltage_1st	V
2-N_voltage_THD	%
2-N_voltage_HD_3rd	%
2-N_voltage_HD_5th	%
2-N_voltage_HD_7th	%
2-N_voltage_HD_9th	%
2-N_voltage_HD_11th	%
2-N_voltage_HD_13th	%
3-N_H_voltage_Total	V
3-N_H_voltage_1st	V
3-N_voltage_THD	%
3-N_voltage_HD_3rd	%
3-N_voltage_HD_5th	%
3-N_voltage_HD_7th	%
3-N_voltage_HD_9th	%
3-N_voltage_HD_11th	%
3-N_voltage_HD_13th	%
1-H_current_Total	A
1-H_current_1st	A
1-H_current_3rd	A
1-H_current_5th	A
1-H_current_7th	A
1-H_current_9th	A
1-H_current_11th	A
1-H_current_13th	A
1_current_THD	%

Measured items	Unit
2-H_current_Total	A
2-H_current_1st	A
2-H_current_3rd	A
2-H_current_5th	A
2-H_current_7th	A
2-H_current_9th	A
2-H_current_11th	A
2-H_current_13th	A
2 current_THD	%
3-H_current_Total	A
3-H_current_1st	A
3-H_current_3rd	A
3-H_current_5th	A
3-H_current_7th	A
3-H_current_9th	A
3-H_current_11th	A
3-H_current_13th	A
3 current_THD	%
N-H_current_Total	A
N-H_current_1st	A
N-H_current_3rd	A
N-H_current_5th	A
N-H_current_7th	A
N-H_current_9th	A
N-H_current_11th	A
N-H_current_13th	A

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.30. ME110SSR-C(H) (1P2W, 1P3W, 3P3W)

Measured items	Unit
Active energy (Import)	kWh
Active energy (Export)	kWh
Reactive energy (Import:lag)	kvarh
Reactive energy (Export:lag)	kvarh
Reactive energy (Import:lead)	kvarh
Reactive energy (Export:lead)	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%

Measured items	Unit
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HV; phase1-2 RMS total	V
HV; phase1-2 RMS 1st	V
HV; phase1-2 RMS 3rd	V
HV; phase1-2 RMS 5th	V
HV; phase1-2 RMS 7th	V
HV; phase1-2 RMS 9th	V
HV; phase1-2 RMS 11th	V
HV; phase1-2 RMS 13th	V
HV; phase2-3 RMS total	V
HV; phase2-3 RMS 1st	V
HV; phase2-3 RMS 3rd	V
HV; phase2-3 RMS 5th	V
HV; phase2-3 RMS 7th	V
HV; phase2-3 RMS 9th	V
HV; phase2-3 RMS 11th	V
HV; phase2-3 RMS 13th	V
HV; phase1-2 D.ratio total	%
HV; phase1-2 D.ratio 3rd	%
HV; phase1-2 D.ratio 5th	%
HV; phase1-2 D.ratio 7th	%
HV; phase1-2 D.ratio 9th	%
HV; phase1-2 D.ratio 11th	%
HV; phase1-2 D.ratio 13th	%
HV; phase2-3 D.ratio total	%
HV; phase2-3 D.ratio 3rd	%
HV; phase2-3 D.ratio 5th	%
HV; phase2-3 D.ratio 7th	%
HV; phase2-3 D.ratio 9th	%
HV; phase2-3 D.ratio 11th	%
HV; phase2-3 D.ratio 13th	%

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.31. ME110SSR-C(H) (3P4W)

Measured items	Unit
Active energy (Import)	kWh
Active energy (Export)	kWh
Reactive energy (Import:lag)	kvarh
Reactive energy (Export:lag)	kvarh
Reactive energy (Import:lead)	kvarh
Reactive energy (Export:lead)	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Current; average	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; L-L; average	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Voltage; L-N; average	V
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Current demand; average	A
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase2 RMS total	A
HA; phase2 RMS 1st	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phaseN RMS total	A
HA; phaseN RMS 1st	A
HA; phaseN RMS 3rd	A
HA; phaseN RMS 5th	A
HA; phaseN RMS 7th	A
HA; phaseN RMS 9th	A
HA; phaseN RMS 11th	A
HA; phaseN RMS 13th	A

Measured items	Unit
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase2 D.ratio total	%
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HA; phaseN D.ratio total	%
HV; phase1-2 RMS total	V
HV; phase1-2 RMS 1st	V
HV; phase1-2 RMS 3rd	V
HV; phase1-2 RMS 5th	V
HV; phase1-2 RMS 7th	V
HV; phase1-2 RMS 9th	V
HV; phase1-2 RMS 11th	V
HV; phase1-2 RMS 13th	V
HV; phase2-3 RMS total	V
HV; phase2-3 RMS 1st	V
HV; phase2-3 RMS 3rd	V
HV; phase2-3 RMS 5th	V
HV; phase2-3 RMS 7th	V
HV; phase2-3 RMS 9th	V
HV; phase2-3 RMS 11th	V
HV; phase2-3 RMS 13th	V
HV; phase1-2 D.ratio total	%
HV; phase1-2 D.ratio 3rd	%
HV; phase1-2 D.ratio 5th	%
HV; phase1-2 D.ratio 7th	%
HV; phase1-2 D.ratio 9th	%
HV; phase1-2 D.ratio 11th	%
HV; phase1-2 D.ratio 13th	%
HV; phase2-3 D.ratio total	%
HV; phase2-3 D.ratio 3rd	%
HV; phase2-3 D.ratio 5th	%
HV; phase2-3 D.ratio 7th	%
HV; phase2-3 D.ratio 9th	%
HV; phase2-3 D.ratio 11th	%
HV; phase2-3 D.ratio 13th	%
HV; phase1-N RMS total	V
HV; phase1-N RMS 1st	V
HV; phase2-N RMS total	V
HV; phase2-N RMS 1st	V
HV; phase3-N RMS total	V
HV; phase3-N RMS 1st	V
HV; phase1-N D.ratio total	%
HV; phase1-N D.ratio 3rd	%
HV; phase1-N D.ratio 5th	%
HV; phase1-N D.ratio 7th	%
HV; phase1-N D.ratio 9th	%
HV; phase1-N D.ratio 11th	%
HV; phase1-N D.ratio 13th	%
HV; phase2-N D.ratio total	%
HV; phase2-N D.ratio 3rd	%

Measured items	Unit
HV; phase2-N D.ratio 5th	%
HV; phase2-N D.ratio 7th	%
HV; phase2-N D.ratio 9th	%
HV; phase2-N D.ratio 11th	%
HV; phase2-N D.ratio 13th	%
HV; phase3-N D.ratio total	%
HV; phase3-N D.ratio 3rd	%

Measured items	Unit
HV; phase3-N D.ratio 5th	%
HV; phase3-N D.ratio 7th	%
HV; phase3-N D.ratio 9th	%
HV; phase3-N D.ratio 11th	%
HV; phase3-N D.ratio 13th	%

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.32. ME110NSR-C

Measured items	Unit
Active energy (Import)	kWh
Active energy (Export)	kWh
Reactive energy (Import:lag)	kvarh
Reactive energy (Export:lag)	kvarh
Reactive energy (Import:lead)	kvarh
Reactive energy (Export:lead)	kvarh
Current; phase1	A
Current; phase2	A
Current; phase3	A
Current; phaseN	A
Current; average	A
Voltage; phase1-2	V
Voltage; phase2-3	V
Voltage; phase3-1	V
Voltage; L-L; average	V
Voltage; phase1-N	V
Voltage; phase2-N	V
Voltage; phase3-N	V
Voltage; L-N; average	V
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand; phase1	A
Current demand; phase2	A
Current demand; phase3	A
Current demand; phaseN	A
Current demand; average	A
Electric power demand	kW
HA; phase1 RMS total	A
HA; phase1 RMS 1st	A
HA; phase1 RMS 3rd	A
HA; phase1 RMS 5th	A
HA; phase1 RMS 7th	A
HA; phase1 RMS 9th	A
HA; phase1 RMS 11th	A
HA; phase1 RMS 13th	A
HA; phase2 RMS total	A
HA; phase2 RMS 1st	A
HA; phase2 RMS 3rd	A
HA; phase2 RMS 5th	A
HA; phase2 RMS 7th	A
HA; phase2 RMS 9th	A
HA; phase2 RMS 11th	A
HA; phase2 RMS 13th	A
HA; phase3 RMS total	A
HA; phase3 RMS 1st	A
HA; phase3 RMS 3rd	A
HA; phase3 RMS 5th	A
HA; phase3 RMS 7th	A
HA; phase3 RMS 9th	A
HA; phase3 RMS 11th	A
HA; phase3 RMS 13th	A
HA; phaseN RMS total	A
HA; phaseN RMS 1st	A
HA; phaseN RMS 3rd	A
HA; phaseN RMS 5th	A
HA; phaseN RMS 7th	A
HA; phaseN RMS 9th	A
HA; phaseN RMS 11th	A
HA; phaseN RMS 13th	A

Measured items	Unit
HA; phase1 D.ratio total	%
HA; phase1 D.ratio 3rd	%
HA; phase1 D.ratio 5th	%
HA; phase1 D.ratio 7th	%
HA; phase1 D.ratio 9th	%
HA; phase1 D.ratio 11th	%
HA; phase1 D.ratio 13th	%
HA; phase2 D.ratio total	%
HA; phase3 D.ratio total	%
HA; phase3 D.ratio 3rd	%
HA; phase3 D.ratio 5th	%
HA; phase3 D.ratio 7th	%
HA; phase3 D.ratio 9th	%
HA; phase3 D.ratio 11th	%
HA; phase3 D.ratio 13th	%
HA; phaseN D.ratio total	%
HV; phase1-2 RMS total	V
HV; phase1-2 RMS 1st	V
HV; phase1-2 RMS 3rd	V
HV; phase1-2 RMS 5th	V
HV; phase1-2 RMS 7th	V
HV; phase1-2 RMS 9th	V
HV; phase1-2 RMS 11th	V
HV; phase1-2 RMS 13th	V
HV; phase2-3 RMS total	V
HV; phase2-3 RMS 1st	V
HV; phase2-3 RMS 3rd	V
HV; phase2-3 RMS 5th	V
HV; phase2-3 RMS 7th	V
HV; phase2-3 RMS 9th	V
HV; phase2-3 RMS 11th	V
HV; phase2-3 RMS 13th	V
HV; phase1-2 D.ratio total	%
HV; phase1-2 D.ratio 3rd	%
HV; phase1-2 D.ratio 5th	%
HV; phase1-2 D.ratio 7th	%
HV; phase1-2 D.ratio 9th	%
HV; phase1-2 D.ratio 11th	%
HV; phase1-2 D.ratio 13th	%
HV; phase2-3 D.ratio total	%
HV; phase2-3 D.ratio 3rd	%
HV; phase2-3 D.ratio 5th	%
HV; phase2-3 D.ratio 7th	%
HV; phase2-3 D.ratio 9th	%
HV; phase2-3 D.ratio 11th	%
HV; phase2-3 D.ratio 13th	%
HV; phase1-N RMS total	V
HV; phase1-N RMS 1st	V
HV; phase2-N RMS total	V
HV; phase2-N RMS 1st	V
HV; phase3-N RMS total	V
HV; phase3-N RMS 1st	V
HV; phase1-N D.ratio total	%
HV; phase1-N D.ratio 3rd	%
HV; phase1-N D.ratio 5th	%
HV; phase1-N D.ratio 7th	%
HV; phase1-N D.ratio 9th	%
HV; phase1-N D.ratio 11th	%
HV; phase1-N D.ratio 13th	%
HV; phase2-N D.ratio total	%
HV; phase2-N D.ratio 3rd	%

Measured items	Unit
HV; phase2-N D.ratio 5th	%
HV; phase2-N D.ratio 7th	%
HV; phase2-N D.ratio 9th	%
HV; phase2-N D.ratio 11th	%
HV; phase2-N D.ratio 13th	%
HV; phase3-N D.ratio total	%
HV; phase3-N D.ratio 3rd	%

Measured items	Unit
HV; phase3-N D.ratio 5th	%
HV; phase3-N D.ratio 7th	%
HV; phase3-N D.ratio 9th	%
HV; phase3-N D.ratio 11th	%
HV; phase3-N D.ratio 13th	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.3.33. AJ65BT-68TD

Measured items	Unit
Ch1 temperature	°C
Ch2 temperature	°C
Ch3 temperature	°C
Ch4 temperature	°C

Measured items	Unit
Ch5 temperature	°C
Ch6 temperature	°C
Ch7 temperature	°C
Ch8 temperature	°C

- *1 The number of digits after the decimal point is fixed at 1.
*2 The type of thermocouple is selected from "K", "E", "J", "T", "B", "R", and "S".**

5.3.34. AJ65BT-64RD3

Measured items	Unit
Ch1 temperature	°C
Ch2 temperature	°C
Ch3 temperature	°C
Ch4 temperature	°C

- *1 The number of digits after the decimal point is selected from "integer", "1 digit", "2 digits", and "3 digits".**

5.3.35. AJ65BT-64AD

Measured items	Unit
Ch1 analog value	<Setting>*1
Ch2 analog value	<Setting>*1
Ch3 analog value	<Setting>*1
Ch4 analog value	<Setting>*1

- *1 Arbitrary characters (a maximum of 8 characters) can be set as the unit.
- *2 The range of input is selected from "0 to 20mA", "4 to 20mA", "0 to 5V", "1 to 5V", "-5 to 5V", "-10 to 10V", and "-20 to 20mV".
- *3 For the scale, -99999 to 999999 (6 digits including signs and the decimal point, up to 3 places after the decimal point) can be set.
- *4 When power factor is selected, the power factor indication is selected from "-0% to 100% to 0%" and "-50% to 100% to 50%".
- *5 The number of digits after the decimal point is selected from "integer", "1 digit", "2 digits", and "3 digits".

5.3.36. AJ65SBTB1-8D

Measured items	Unit
Ch1 digital input value	<Setting>*1
Ch2 digital input value	<Setting>*1
Ch3 digital input value	<Setting>*1
Ch4 digital input value	<Setting>*1

Measured items	Unit
Ch5 digital input value	<Setting>*1
Ch6 digital input value	<Setting>*1
Ch7 digital input value	<Setting>*1
Ch8 digital input value	<Setting>*1

- *1 The unit setting is arbitrary.
When the unit is set, arbitrary characters (a maximum of 8 characters) can be set.
- *2 This terminal is used for a measuring point of operation monitoring.

5.3.37. AJ65SBTB1-16D

Measured items	Unit
Ch1 digital input value	<Setting>*1
Ch2 digital input value	<Setting>*1
Ch3 digital input value	<Setting>*1
Ch4 digital input value	<Setting>*1
Ch5 digital input value	<Setting>*1
Ch6 digital input value	<Setting>*1
Ch7 digital input value	<Setting>*1
Ch8 digital input value	<Setting>*1

Measured items	Unit
Ch9 digital input value	<Setting>*1
Ch10 digital input value	<Setting>*1
Ch11 digital input value	<Setting>*1
Ch12 digital input value	<Setting>*1
Ch13 digital input value	<Setting>*1
Ch14 digital input value	<Setting>*1
Ch15 digital input value	<Setting>*1
Ch16 digital input value	<Setting>*1

- *1 The unit setting is arbitrary.
When the unit is set, arbitrary characters (a maximum of 8 characters) can be set.
- *2 This terminal is used for a measuring point of operation monitoring.

5.3.38. AJ65SBTB1-32D

Measured items	Unit
Ch1 digital input value	<Setting>*1
Ch2 digital input value	<Setting>*1
Ch3 digital input value	<Setting>*1
Ch4 digital input value	<Setting>*1
Ch5 digital input value	<Setting>*1
Ch6 digital input value	<Setting>*1
Ch7 digital input value	<Setting>*1
Ch8 digital input value	<Setting>*1
Ch9 digital input value	<Setting>*1
Ch10 digital input value	<Setting>*1
Ch11 digital input value	<Setting>*1
Ch12 digital input value	<Setting>*1
Ch13 digital input value	<Setting>*1
Ch14 digital input value	<Setting>*1
Ch15 digital input value	<Setting>*1
Ch16 digital input value	<Setting>*1

Measured items	Unit
Ch17 digital input value	<Setting>*1
Ch18 digital input value	<Setting>*1
Ch19 digital input value	<Setting>*1
Ch20 digital input value	<Setting>*1
Ch21 digital input value	<Setting>*1
Ch22 digital input value	<Setting>*1
Ch23 digital input value	<Setting>*1
Ch24 digital input value	<Setting>*1
Ch25 digital input value	<Setting>*1
Ch26 digital input value	<Setting>*1
Ch27 digital input value	<Setting>*1
Ch28 digital input value	<Setting>*1
Ch29 digital input value	<Setting>*1
Ch30 digital input value	<Setting>*1
Ch31 digital input value	<Setting>*1
Ch32 digital input value	<Setting>*1

*1 The unit setting is arbitrary.

When the unit is set, arbitrary characters (a maximum of 8 characters) can be set.

*2 This terminal is used for a measuring point of operation monitoring.

5.3.39. AJ65SBTB1-16DT

Measured items	Unit
Ch1 digital input value	<Setting>*1
Ch2 digital input value	<Setting>*1
Ch3 digital input value	<Setting>*1
Ch4 digital input value	<Setting>*1

Measured items	Unit
Ch5 digital input value	<Setting>*1
Ch6 digital input value	<Setting>*1
Ch7 digital input value	<Setting>*1
Ch8 digital input value	<Setting>*1

*1 The unit setting is arbitrary.

When the unit is set, arbitrary characters (a maximum of 8 characters) can be set.

*2 Output cannot be used.

*3 This terminal is used for a measuring point of operation monitoring.

5.3.40. AJ65SBTB1-32DT

Measured items	Unit
Ch1 digital input value	<Setting>*1
Ch2 digital input value	<Setting>*1
Ch3 digital input value	<Setting>*1
Ch4 digital input value	<Setting>*1
Ch5 digital input value	<Setting>*1
Ch6 digital input value	<Setting>*1
Ch7 digital input value	<Setting>*1
Ch8 digital input value	<Setting>*1

Measured items	Unit
Ch9 digital input value	<Setting>*1
Ch10 digital input value	<Setting>*1
Ch11 digital input value	<Setting>*1
Ch12 digital input value	<Setting>*1
Ch13 digital input value	<Setting>*1
Ch14 digital input value	<Setting>*1
Ch15 digital input value	<Setting>*1
Ch16 digital input value	<Setting>*1

*1 The unit setting is arbitrary.

When the unit is set, arbitrary characters (a maximum of 8 characters) can be set.

*2 Output cannot be used.

*3 This terminal is used for a measuring point of operation monitoring.

5.4. List of support terminals (MODBUS® terminal [Support terminal])

Product name	Icon/type name
Electronic multi-measuring instrument	 ME96SSHB-MB
Electronic multi-measuring instrument	 ME96SSRB-MB
Electronic multi-measuring instrument	 ME96SSEB-MB
Electronic multi-measuring instrument	 ME96SSHA-MB
Electronic multi-measuring instrument	 ME96SSRA-MB
Electronic multi-measuring instrument	 ME96SSEA-MB
Electronic multi-measuring instrument	 ME96SSH-MB
Electronic multi-measuring instrument	 ME96SSR-MB
Electronic multi-measuring instrument	 ME96SSE-MB
Energy measuring unit (1P2W, 1P3W, 3P3W)	 EMU4-BD1A-MB
Energy measuring unit (1P2W, 1P3W, 3P3W, 3P4W)	 EMU4-HD1A-MB
Energy measuring unit (1P2W, 1P3W, 3P3W)	 EMU4-BD1-MB
Energy measuring unit (1P2W, 1P3W, 3P3W, 3P4W)	 EMU4-HD1-MB
Energy measuring unit (1P2W, 1P3W, 3P3W, 3P4W)	 EMU4-FD1-MB
Energy measuring standard model*1	 EMU4-BM1-MB
Energy measuring high performance model*1	 EMU4-HM1-MB
Insulation Monitoring model*1	 EMU4-LG1-MB
Control Unit *1	 EMU4-CNT-MB
Energy measuring extension model for same voltage system*2	 EMU4-A2
Energy measuring extension model for different voltage system*2	 EMU4-VA2
Energy measuring extension model for analog input*2	 EMU4-AX4
Energy measuring extension model for pulse/digital input*2	 EMU4-PX4
MDU breaker	 MDU_breaker
AE-SW MODBUS	 AE-SW(BIF-MD)

*1 EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB, EMU4-CNT-MB are main units of EcoMonitorPlus.

*2 EMU4-A2, EMU4-VA2, EMU4-AX4, EMU4-PX4 are extension units of EcoMonitorPlus.

*3 When the main unit of EcoMonitorPlus is EMU4-CNT-MB, the response data of the measurement value of the extension unit is updated every minute, so the response measurement value is up to 1 minute ago.

5.5. List of model information (MODBUS® terminal [Support terminal])

The following describes the details of settings and setting ranges for models that require the settings of model information on the terminal registration screen.

NOTE: Voltage rating is set as a special voltage in EcoWebServerIII. Please change the terminal setting to special voltage when the deviation of the decimal point has occurred.

5.5.1. ME96SSHB-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0A - 30000A

5.5.2. ME96SSRB-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0A - 30000A

5.5.3. ME96SSEB-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0A - 30000A

5.5.4. ME96SSHA-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0 - 30000A

5.5.5. ME96SSRA-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 - 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0 - 30000A

5.5.6. ME96SSEA-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 – 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0 - 30000A

5.5.7. ME96SSH-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 – 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0 - 30000A

5.5.8. ME96SSR-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 – 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0 - 30000A

5.5.9. ME96SSE-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W, 3P4W:</u> 60 – 750000V <u>1P3W:</u> 110/220V, 220/440V
Current rating	1.0 - 30000A

5.5.10. EMU4-BD1A-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.5.11. EMU4-HD1A-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110V, 220V <u>3P4W:</u> 63.5V, 100V, 105V, 110V, 115V, 120V, 127V, 200V, 220V, 230V, 240V, 242V, 250V, 254V, 265V, 277V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.5.12. EMU4-BD1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V <u>1P3W:</u> 110V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A

5.5.13. EMU4-HD1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating *3P4W is used as phase voltage	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V <u>1P3W:</u> 110V <u>3P4W:</u> 63.5V, 100V, 105V, 110V, 115V, 120V, 127V, 200V, 220V, 230V, 240V, 242V, 250V, 254V, 265V, 277V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A

5.5.14. EMU4-FD1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V <u>1P3W:</u> 110V <u>3P4W:</u> 63.5V, 100V, 105V, 110V, 115V, 120V, 127V, 200V, 220V, 230V, 240V, 242V, 250V, 254V, 265V, 277V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A

5.5.15. EMU4-BM1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.5.16. EMU4-HM1-MB

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V, 220/440V <u>3P4W:</u> 63.5/110V, 100/173V, 105/182V, 110/190V, 115/199V, 120/208V, 127/220V, 200/346V, 220/380V, 230/400V, 240/415V, 242/420V, 250/430V, 254/440V, 265/460V, 277/480V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.5.17. EMU4-LG1-MB

Setting item	Setting range
Measuring mode	Low sensitivity mode, High sensitivity mode

5.5.18. EMU4-A2

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V, 220/440V <u>3P4W:</u> 63.5/110V, 100/173V, 105/182V, 110/190V, 115/199V, 120/208V, 127/220V, 200/346V, 220/380V, 230/400V, 240/415V, 242/420V, 250/430V, 254/440V, 265/460V, 277/480V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

*1 It is necessary to fix phase wire method and voltage rating for EMU4-A2.

5.5.19. EMU4-VA2

Setting item	Setting range
Phase wire method	1P2W, 1P3W, 3P3W, 3P4W
Voltage rating	<u>1P2W, 3P3W:</u> 110V, 220V, 440V, 690V, 1100V, 2200V, 3300V, 6600V, 11000V, 13200V, 13800V, 15000V, 16500V, 22000V, 24000V, 33000V, 66000V, 77000V, 110000V <u>1P3W:</u> 110/220V, 220/440V <u>3P4W:</u> 63.5/110V, 100/173V, 105/182V, 110/190V, 115/199V, 120/208V, 127/220V, 200/346V, 220/380V, 230/400V, 240/415V, 242/420V, 250/430V, 254/440V, 265/460V, 277/480V
Current rating	5A, 6A, 7.5A, 8A, 10A, 12A, 15A, 20A, 25A, 30A, 40A, 50A, 60A, 75A, 80A, 100A, 120A, 150A, 200A, 250A, 300A, 400A, 500A, 600A, 750A, 800A, 1000A, 1200A, 1250A, 1500A, 1600A, 2000A, 2500A, 3000A, 4000A, 5000A, 6000A, 7500A, 8000A, 10000A, 12000A, 20000A, 25000A, 30000A

5.5.20. MDU_breaker

Setting item	Setting range
Ampere frame	250A, 400A, 800A

5.5.21. AE-SW(BIF-MD)

Setting item	Setting range
CT rating	250A, 315A, 500A, 600A, 630A, 1000A, 6300A

5.6. List of measured items (MODBUS® terminal [Support terminal])

The following describes the measured items of the MODBUS® terminals [Support terminal] supported by EcoServerIII.

5.6.1. ME96SSHB-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Periodic active energy 3	kWh
Operating time1	h
Operating time2	h
CO2 equivalent	kg
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand kW Last	kW
Total rolling demand kW Present	kW
Total rolling demand kW Predict	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total rolling demand kvar Last	kvar
Total rolling demand kvar Present	kvar
Total rolling demand kvar Predict	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA

Measured items	Unit
Total rolling demand kVA Last	kVA
Total rolling demand kVA Present	kVA
Total rolling demand kVA Predict	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
Current unbalance rate	%
Voltage unbalance rate	%
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
1-2 voltage HD 21st	%
1-2 voltage HD 23rd	%
1-2 voltage HD 25th	%
1-2 voltage HD 27th	%
1-2 voltage HD 29th	%
1-2 voltage HD 31st	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
2-3 voltage HD 21st	%
2-3 voltage HD 23rd	%
2-3 voltage HD 25th	%
2-3 voltage HD 27th	%
2-3 voltage HD 29th	%
2-3 voltage HD 31st	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%

Measured items	Unit
1-N voltage HD 21st	%
1-N voltage HD 23rd	%
1-N voltage HD 25th	%
1-N voltage HD 27th	%
1-N voltage HD 29th	%
1-N voltage HD 31st	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%
2-N voltage HD 21st	%
2-N voltage HD 23rd	%
2-N voltage HD 25th	%
2-N voltage HD 27th	%
2-N voltage HD 29th	%
2-N voltage HD 31st	%
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
3-N voltage HD 21st	%
3-N voltage HD 23rd	%
3-N voltage HD 25th	%
3-N voltage HD 27th	%
3-N voltage HD 29th	%
3-N voltage HD 31st	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 H current 21st	A
1 H current 23rd	A
1 H current 25th	A
1 H current 27th	A
1 H current 29th	A
1 H current 31st	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A

Measured items	Unit
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A
2 H current 21st	A
2 H current 23rd	A
2 H current 25th	A
2 H current 27th	A
2 H current 29th	A
2 H current 31st	A
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 21st	A
3 H current 23rd	A
3 H current 25th	A
3 H current 27th	A
3 H current 29th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N H current 21st	A
N H current 23rd	A
N H current 25th	A
N H current 27th	A
N H current 29th	A
N H current 31st	A
N current THD	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

*2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.6.2. ME96SSRB-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Periodic active energy 3	kWh
Operating time1	h
Operating time2	h
CO2 equivalent	kg
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand kW Last	kW
Total rolling demand kW Present	kW
Total rolling demand kW Predict	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total rolling demand kvar Last	kvar
Total rolling demand kvar Present	kvar
Total rolling demand kvar Predict	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA

Measured items	Unit
Total rolling demand kVA Last	kVA
Total rolling demand kVA Present	kVA
Total rolling demand kVA Predict	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
Current unbalance rate	%
Voltage unbalance rate	%
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%

Measured items	Unit
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A

Measured items	Unit
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N current THD	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits. Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**

5.6.3. ME96SSEB-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V

Measured items	Unit
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
1-2 H voltage Total	V
1-2 voltage THD	%
2-3 H voltage Total	V
2-3 voltage THD	%
1-N H voltage Total	V
1-N voltage THD	%
2-N H voltage Total	V
2-N voltage THD	%
3-N H voltage Total	V
3-N voltage THD	%
1 H current Total	A
1 current THD	%
2 H current Total	A
2 current THD	%
3 H current Total	A
3 current THD	%
N H current Total	A
N current THD	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

*2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.6.4. ME96SSHA-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total rolling demand reactive power	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total rolling demand apparent power	kVA
Total power factor	%

Measured items	Unit
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
1-2 voltage HD 21st	%
1-2 voltage HD 23rd	%
1-2 voltage HD 25th	%
1-2 voltage HD 27th	%
1-2 voltage HD 29th	%
1-2 voltage HD 31st	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
2-3 voltage HD 21st	%
2-3 voltage HD 23rd	%
2-3 voltage HD 25th	%
2-3 voltage HD 27th	%
2-3 voltage HD 29th	%
2-3 voltage HD 31st	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%

Measured items	Unit
1-N voltage HD 21st	%
1-N voltage HD 23rd	%
1-N voltage HD 25th	%
1-N voltage HD 27th	%
1-N voltage HD 29th	%
1-N voltage HD 31st	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%
2-N voltage HD 21st	%
2-N voltage HD 23rd	%
2-N voltage HD 25th	%
2-N voltage HD 27th	%
2-N voltage HD 29th	%
2-N voltage HD 31st	%
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
3-N voltage HD 21st	%
3-N voltage HD 23rd	%
3-N voltage HD 25th	%
3-N voltage HD 27th	%
3-N voltage HD 29th	%
3-N voltage HD 31st	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 H current 21st	A
1 H current 23rd	A
1 H current 25th	A
1 H current 27th	A
1 H current 29th	A
1 H current 31st	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A

Measured items	Unit
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A
2 H current 21st	A
2 H current 23rd	A
2 H current 25th	A
2 H current 27th	A
2 H current 29th	A
2 H current 31st	A
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 21st	A
3 H current 23rd	A
3 H current 25th	A
3 H current 27th	A
3 H current 29th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N H current 21st	A
N H current 23rd	A
N H current 25th	A
N H current 27th	A
N H current 29th	A
N H current 31st	A
N current THD	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**

5.6.5. ME96SSRA-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total rolling demand reactive power	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total rolling demand apparent power	kVA
Total power factor	%

Measured items	Unit
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%

Measured items	Unit
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A

Measured items	Unit
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N current THD	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.**

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.6.6. ME96SSEA-MB

Measured items	Unit
Active_energy_Import	kWh
Active_energy_Import_extended	kWh
Operating_time1	h
Operating_time2	h
Average_current	A
Phase1_current	A
Phase2_current	A
Phase3_current	A
PhaseN_current	A
Average_current_demand	A
Phase1_current_demand	A
Phase2_current_demand	A
Phase3_current_demand	A
PhaseN_current_demand	A
Average_L-L_voltage	V
1-2_voltage	V
2-3_voltage	V
3-1_voltage	V
Average_L-L_voltage(3P4W)	V
1-2_voltage(3P4W)	V
2-3_voltage(3P4W)	V
3-1_voltage(3P4W)	V
Average_L-N_voltage	V
1-N_voltage	V
2-N_voltage	V
3-N_voltage	V
Total_active_power	kW
Phase1_active_power	kW
Phase2_active_power	kW
Phase3_active_power	kW
Total_power_factor	%
Phase1_power_factor	%
Phase2_power_factor	%
Phase3_power_factor	%
Frequency	Hz
1-2_H_voltage_Total	V
1-2_voltage_THD	%
2-3_H_voltage_Total	V
2-3_voltage_THD	%
1-N_H_voltage_Total	V
1-N_voltage_THD	%
2-N_H_voltage_Total	V
2-N_voltage_THD	%
3-N_H_voltage_Total	V
3-N_voltage_THD	%
1_H_current_Total	A
1_current_THD	%
2_H_current_Total	A
2_current_THD	%
3_H_current_Total	A
3_current_THD	%
N_H_current_Total	A
N_current_THD	%

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

5.6.7. ME96SSH-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Apparent energy	kVAh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total rolling demand	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%

Measured items	Unit
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
1-2 voltage HD 15th	%
1-2 voltage HD 17th	%
1-2 voltage HD 19th	%
1-2 voltage HD 21st	%
1-2 voltage HD 23rd	%
1-2 voltage HD 25th	%
1-2 voltage HD 27th	%
1-2 voltage HD 29th	%
1-2 voltage HD 31st	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
2-3 voltage HD 15th	%
2-3 voltage HD 17th	%
2-3 voltage HD 19th	%
2-3 voltage HD 21st	%
2-3 voltage HD 23rd	%
2-3 voltage HD 25th	%
2-3 voltage HD 27th	%
2-3 voltage HD 29th	%
2-3 voltage HD 31st	%
1-N H voltage Total	V
1-N H voltage 1st	V
1-N voltage THD	%
1-N voltage HD 3rd	%
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
1-N voltage HD 15th	%
1-N voltage HD 17th	%
1-N voltage HD 19th	%
1-N voltage HD 21st	%
1-N voltage HD 23rd	%
1-N voltage HD 25th	%
1-N voltage HD 27th	%
1-N voltage HD 29th	%
1-N voltage HD 31st	%
2-N H voltage Total	V
2-N H voltage 1st	V
2-N voltage THD	%
2-N voltage HD 3rd	%
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
2-N voltage HD 15th	%
2-N voltage HD 17th	%
2-N voltage HD 19th	%
2-N voltage HD 21st	%
2-N voltage HD 23rd	%
2-N voltage HD 25th	%
2-N voltage HD 27th	%
2-N voltage HD 29th	%

Measured items	Unit
2-N voltage HD 31st	%
3-N H voltage Total	V
3-N H voltage 1st	V
3-N voltage THD	%
3-N voltage HD 3rd	%
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
3-N voltage HD 15th	%
3-N voltage HD 17th	%
3-N voltage HD 19th	%
3-N voltage HD 21st	%
3-N voltage HD 23rd	%
3-N voltage HD 25th	%
3-N voltage HD 27th	%
3-N voltage HD 29th	%
3-N voltage HD 31st	%
1 H current Total	A
1 H current 1st	A
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 H current 15th	A
1 H current 17th	A
1 H current 19th	A
1 H current 21st	A
1 H current 23rd	A
1 H current 25th	A
1 H current 27th	A
1 H current 29th	A
1 H current 31st	A
1 current THD	%
2 H current Total	A
2 H current 1st	A
2 H current 3rd	A
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A

Measured items	Unit
2 H current 15th	A
2 H current 17th	A
2 H current 19th	A
2 H current 21st	A
2 H current 23rd	A
2 H current 25th	A
2 H current 27th	A
2 H current 29th	A
2 H current 31st	A
2 current THD	%
3 H current Total	A
3 H current 1st	A
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 H current 15th	A
3 H current 17th	A
3 H current 19th	A
3 H current 21st	A
3 H current 23rd	A
3 H current 25th	A
3 H current 27th	A
3 H current 29th	A
3 H current 31st	A
3 current THD	%
N H current Total	A
N H current 1st	A
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N H current 15th	A
N H current 17th	A
N H current 19th	A
N H current 21st	A
N H current 23rd	A
N H current 25th	A
N H current 27th	A
N H current 29th	A
N H current 31st	A
N current THD	%

***1 The measured items differ with the phase wire method.**

For details, refer to the instruction manual or specification sheet of the terminal.

***2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.**

Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.6.8. ME96SSR-MB

Measured items	Unit
Active energy Import	kWh
Active energy Export	kWh
Reactive energy Import lag	kvarh
Reactive energy Export lag	kvarh
Reactive energy Import lead	kvarh
Reactive energy Export lead	kvarh
Active energy Import extended	kWh
Active energy Export extended	kWh
Reactive energy Import lag extended	kvarh
Reactive energy Export lag extended	kvarh
Reactive energy Import lead extended	kvarh
Reactive energy Export lead extended	kvarh
Periodic active energy 1	kWh
Periodic active energy 2	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average current demand	A
Phase1 current demand	A
Phase2 current demand	A
Phase3 current demand	A
PhaseN current demand	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total reactive power	kvar
Phase1 reactive power	kvar
Phase2 reactive power	kvar
Phase3 reactive power	kvar
Total apparent power	kVA
Phase1 apparent power	kVA
Phase2 apparent power	kVA
Phase3 apparent power	kVA
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz
1-2 H voltage Total	V
1-2 H voltage 1st	V
1-2 voltage THD	%
1-2 voltage HD 3rd	%
1-2 voltage HD 5th	%
1-2 voltage HD 7th	%
1-2 voltage HD 9th	%
1-2 voltage HD 11th	%
1-2 voltage HD 13th	%
2-3 H voltage Total	V
2-3 H voltage 1st	V
2-3 voltage THD	%
2-3 voltage HD 3rd	%
2-3 voltage HD 5th	%

Measured items	Unit
2-3 voltage HD 7th	%
2-3 voltage HD 9th	%
2-3 voltage HD 11th	%
2-3 voltage HD 13th	%
1-N H voltage Total	%
1-N H voltage 1st	%
1-N voltage THD	V
1-N voltage HD 3rd	V
1-N voltage HD 5th	%
1-N voltage HD 7th	%
1-N voltage HD 9th	%
1-N voltage HD 11th	%
1-N voltage HD 13th	%
2-N H voltage Total	%
2-N H voltage 1st	%
2-N voltage THD	V
2-N voltage HD 3rd	V
2-N voltage HD 5th	%
2-N voltage HD 7th	%
2-N voltage HD 9th	%
2-N voltage HD 11th	%
2-N voltage HD 13th	%
3-N H voltage Total	%
3-N H voltage 1st	%
3-N voltage THD	V
3-N voltage HD 3rd	V
3-N voltage HD 5th	%
3-N voltage HD 7th	%
3-N voltage HD 9th	%
3-N voltage HD 11th	%
3-N voltage HD 13th	%
1 H current Total	%
1 H current 1st	%
1 H current 3rd	A
1 H current 5th	A
1 H current 7th	A
1 H current 9th	A
1 H current 11th	A
1 H current 13th	A
1 current THD	A
2 H current Total	A
2 H current 1st	%
2 H current 3rd	A
2 H current 5th	A
2 H current 7th	A
2 H current 9th	A
2 H current 11th	A
2 H current 13th	A
2 current THD	A
3 H current Total	A
3 H current 1st	%
3 H current 3rd	A
3 H current 5th	A
3 H current 7th	A
3 H current 9th	A
3 H current 11th	A
3 H current 13th	A
3 current THD	A
N H current Total	A
N H current 1st	%
N H current 3rd	A
N H current 5th	A
N H current 7th	A
N H current 9th	A
N H current 11th	A
N H current 13th	A
N current THD	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**

5.6.9. ME96SSE-MB

Measured items	Unit
Active energy Import	kWh
Active energy Import extended	kWh
Operating time1	h
Operating time2	h
Average current	A
Phase1 current	A
Phase2 current	A
Phase3 current	A
PhaseN current	A
Average L-L voltage	V
1-2 voltage	V
2-3 voltage	V
3-1 voltage	V
Average L-L voltage(3P4W)	V
1-2 voltage(3P4W)	V
2-3 voltage(3P4W)	V
3-1 voltage(3P4W)	V
Average L-N voltage	V
1-N voltage	V
2-N voltage	V
3-N voltage	V
Total active power	kW
Phase1 active power	kW
Phase2 active power	kW
Phase3 active power	kW
Total power factor	%
Phase1 power factor	%
Phase2 power factor	%
Phase3 power factor	%
Frequency	Hz

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.6.10. EMU4-BD1A-MB

Measured items	Unit
Active energy(import)	kWh
Active energy(export)	kWh
Active energy(import)/(CH2)	kWh
Active energy(export)/(CH2)	kWh
Detailed active energy(import)	kWh
Detailed active energy(export)	kWh
Detailed active energy(import)/(CH2)	kWh
Detailed active energy(export)/(CH2)	kWh
Reactive energy(import lag)	kvarh
Detailed reactive energy(import lag)	kvarh
Current(1-phase)	A
Current(2-phase)	A
Current(3-phase)/(CH2)	A
Current(average)	A
Voltage(1-2 lines)	V
Voltage(2-3 lines)/(CH2)	V
Voltage(3-1 lines)	V
Voltage(average line to line)	V
Active power	kW
Active power(CH2)	kW
Reactive power	kvar
Reactive power(CH2)	kvar
Power_factor	%
Power_factor(CH2)	%
Frequency	Hz
Demand_current(1-phase)	A
Demand_current(2-phase)	A
Demand_current(3-phase)/(CH2)	A
Demand_active_power	kW
Demand_active_power(CH2)	kW
Operating_time	<set>*2
Operating_time(CH2)	<set>*2
Alarm_integrated_time	x250ms
Alarm_integrated_time(CH2)	x250ms

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 The unit of operating time can be set in hours, minutes, or seconds.
- *3 Detailed version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *4 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (CH2).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.6.11. EMU4-HD1A-MB

Measured items	Unit	Measured items	Unit
Active energy(import)	kWh	Harmonics 1st RMS current(N-phase)	A
Active energy(export)	kWh	Harmonics 3rd RMS current(N-phase)	A
Active energy(import)/(CH2)	kWh	Harmonics 5th RMS current(N-phase)	A
Active energy(export)/(CH2)	kWh	Harmonics 7th RMS current(N-phase)	A
Detailed active energy(import)	kWh	Harmonics 9th RMS current(N-phase)	A
Detailed active energy(export)	kWh	Harmonics 11th RMS current(N-phase)	A
Detailed active energy(import)/(CH2)	kWh	Harmonics 13th RMS current(N-phase)	A
Detailed active energy(export)/(CH2)	kWh	Total harmonic distortion current(1-phase)	A
Reactive energy(import lag)	kvarh	Total harmonic distortion current(2-phase)	%
Detailed reactive energy(import lag)	kvarh	Total harmonic distortion current(3-phase)/(CH2)	%
Current(1-phase)	A	Total harmonic distortion current(N-phase)	%
Current(2-phase)	A	Total harmonics RMS voltage(1-2 lines)	%
Current(3-phase)/(CH2)	A	Harmonics 1st RMS voltage(1-2 lines)	V
Current(N-phase)	A	Harmonics 3rd RMS voltage(1-2 lines)	V
Current(average)	A	Harmonics 5th RMS voltage(1-2 lines)	V
Voltage(1-2 lines)	V	Harmonics 7th RMS voltage(1-2 lines)	V
Voltage(2-3 lines)/(CH2)	V	Harmonics 9th RMS voltage(1-2 lines)	V
Voltage(3-1 lines)	V	Harmonics 11th RMS voltage(1-2 lines)	V
Voltage(average line to line)	V	Harmonics 13th RMS voltage(1-2 lines)	V
Voltage(1-N phase)	V	Total harmonics RMS voltage(2-3 lines)/(CH2)	V
Voltage(2-N phase)	V	Harmonics 1st RMS voltage(2-3 lines)/(CH2)	V
Voltage(3-N phase)	V	Harmonics 3rd RMS voltage(2-3 lines)/(CH2)	V
Active power	kW	Harmonics 5th RMS voltage(2-3 lines)/(CH2)	V
Active power(CH2)	kW	Harmonics 7th RMS voltage(2-3 lines)/(CH2)	V
Reactive power	kvar	Harmonics 9th RMS voltage(2-3 lines)/(CH2)	V
Reactive power(CH2)	kvar	Harmonics 11th RMS voltage(2-3 lines)/(CH2)	V
Power factor	%	Harmonics 13th RMS voltage(2-3 lines)/(CH2)	V
Power factor(CH2)	%	Total harmonics RMS voltage(1-N phase)	V
Frequency	Hz	Harmonics 1st RMS voltage(1-N phase)	V
Demand current(1-phase)	A	Total harmonics RMS voltage(2-N phase)	V
Demand current(2-phase)	A	Harmonics 1st RMS voltage(2-N phase)	V
Demand current(3-phase)/(CH2)	A	Total harmonics RMS voltage(3-N phase)	V
Demand current(N-phase)	A	Harmonics 1st RMS voltage(3-N phase)	V
Demand active power	kW	Total harmonic distortion voltage(1-2 lines)	V
Demand active power(CH2)	kW	Harmonic 3rd distortion voltage(1-2 lines)	%
Periodic active energy	kWh	Harmonic 5th distortion voltage(1-2 lines)	%
Periodic active energy(CH2)	kWh	Harmonic 7th distortion voltage(1-2 lines)	%
Operating time	<set>*2	Harmonic 9th distortion voltage(1-2 lines)	%
Operating time(CH2)	<set>*2	Harmonic 11th distortion voltage(1-2 lines)	%
Pulse count	<set>*2	Harmonic 13th distortion voltage(1-2 lines)	%
Digital input status	-	Total harmonic distortion voltage(2-3 lines)/(CH2)	%
Alarm integrated time	x250ms	Harmonic 3rd distortion voltage(2-3 lines)/(CH2)	%
Alarm integrated time(CH2)	x250ms	Harmonic 5th distortion voltage(2-3 lines)/(CH2)	%
Total harmonics RMS current(1-phase)	A	Harmonic 7th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 1st RMS current(1-phase)	A	Harmonic 9th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 3rd RMS current(1-phase)	A	Harmonic 11th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 5th RMS current(1-phase)	A	Harmonic 13th distortion voltage(2-3 lines)/(CH2)	%
Harmonics 7th RMS current(1-phase)	A	Total harmonic distortion voltage(1-N phase)	%
Harmonics 9th RMS current(1-phase)	A	Harmonic 3rd distortion voltage(1-N phase)	%
Harmonics 11th RMS current(1-phase)	A	Harmonic 5th distortion voltage(1-N phase)	%
Harmonics 13th RMS current(1-phase)	A	Harmonic 7th distortion voltage(1-N phase)	%
Total harmonics RMS current(2-phase)	A	Harmonic 9th distortion voltage(1-N phase)	%
Harmonics 1st RMS current(2-phase)	A	Harmonic 11th distortion voltage(1-N phase)	%
Harmonics 3rd RMS current(2-phase)	A	Harmonic 13th distortion voltage(1-N phase)	%
Harmonics 5th RMS current(2-phase)	A	Total harmonic distortion voltage(2-N phase)	%
Harmonics 7th RMS current(2-phase)	A	Harmonic 3rd distortion voltage(2-N phase)	%
Harmonics 9th RMS current(2-phase)	A	Harmonic 5th distortion voltage(2-N phase)	%
Harmonics 11th RMS current(2-phase)	A	Harmonic 7th distortion voltage(2-N phase)	%
Harmonics 13th RMS current(2-phase)	A	Harmonic 9th distortion voltage(2-N phase)	%
Total harmonics RMS current(3-phase)/(CH2)	A	Harmonic 11th distortion voltage(2-N phase)	%
Harmonics 1st RMS current(3-phase)/(CH2)	A	Harmonic 13th distortion voltage(2-N phase)	%
Harmonics 3rd RMS current(3-phase)/(CH2)	A	Total harmonic distortion voltage(3-N phase)	%
Harmonics 5th RMS current(3-phase)/(CH2)	A	Harmonic 3rd distortion voltage(3-N phase)	%
Harmonics 7th RMS current(3-phase)/(CH2)	A	Harmonic 5th distortion voltage(3-N phase)	%
Harmonics 9th RMS current(3-phase)/(CH2)	A	Harmonic 7th distortion voltage(3-N phase)	%
Harmonics 11th RMS current(3-phase)/(CH2)	A	Harmonic 9th distortion voltage(3-N phase)	%
Harmonics 13th RMS current(3-phase)/(CH2)	A	Harmonic 11th distortion voltage(3-N phase)	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 The unit of operating time can be set in hours, minutes, or seconds.
Unit of Pulse_count can be set for any character up to 8 words.**
- *3 Detailed version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**
- *4 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (CH2).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system.
(For details, refer to the instruction manual of the terminal)**

5.6.12. EMU4-BD1-MB

Measured items	Unit
Electric_energy(Consumption)	kWh
Electric_energy(Regeneration)	kWh
Electric_energy(Consumption)extended	kWh
Electric_energy(Regeneration)extended	kWh
Reactive_energy(Consumption_lag)	kvarh
Reactive_energy(Consumption_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_Average	A
Voltage_phase12	V
Voltage_phase23	V
Voltage_phase31	V
Voltage_Average_line_voltage	V
Electric_power	kW
Reactive_power	kvar
Power_factor	%
Frequency	Hz
Current_demand_phase1	A
Current_demand_phase2	A
Current_demand_phase3	A
Electric_power_demand	kW
Operating_time	H

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.6.13. EMU4-HD1-MB

Measured items	Unit
Electric energy(Consumption)	kWh
Electric energy(Regeneration)	kWh
Electric energy(Consumption)extended	kWh
Electric energy(Regeneration)extended	kWh
Reactive energy(Consumption lag)	kvarh
Reactive energy(Consumption lag)extended	kvarh
Current phase1	A
Current phase2	A
Current phase3	A
Current phaseN	A
Current Average	A
Voltage phase12	V
Voltage phase23	V
Voltage phase31	V
Voltage Average line voltage	V
Voltage phase1N	V
Voltage phase2N	V
Voltage phase3N	V
Electric power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand phase1	A
Current demand phase2	A
Current demand phase3	A
Current demand phaseN	A
Electric power demand	kW
Periodic electric energy	kWh
Operating time	H
Pulse count	<set>*2
HA RMS phase1 total	A
HA RMS phase1 1st	A
HA RMS phase1 3rd	A
HA RMS phase1 5th	A
HA RMS phase1 7th	A
HA RMS phase1 9th	A
HA RMS phase1 11th	A
HA RMS phase1 13th	A
HA RMS phase2 total	A
HA RMS phase2 1st	A
HA RMS phase2 3rd	A
HA RMS phase2 5th	A
HA RMS phase2 7th	A
HA RMS phase2 9th	A
HA RMS phase2 11th	A
HA RMS phase2 13th	A
HA RMS phase3 total	A
HA RMS phase3 1st	A
HA RMS phase3 3rd	A
HA RMS phase3 5th	A
HA RMS phase3 7th	A
HA RMS phase3 9th	A
HA RMS phase3 11th	A
HA RMS phase3 13th	A
HA RMS phaseN total	A
HA RMS phaseN 1st	A
HA RMS phaseN 3rd	A
HA RMS phaseN 5th	A
HA RMS phaseN 7th	A
HA RMS phaseN 9th	A
HA RMS phaseN 11th	A
HA RMS phaseN 13th	A

Measured items	Unit
HA D.ratio phase1 total	%
HA D.ratio phase2 total	%
HA D.ratio phase3 total	%
HA D.ratio phaseN total	%
HV RMS phase12 total	V
HV RMS phase12 1st	V
HV RMS phase12 3rd	V
HV RMS phase12 5th	V
HV RMS phase12 7th	V
HV RMS phase12 9th	V
HV RMS phase12 11th	V
HV RMS phase12 13th	V
HV RMS phase23 total	V
HV RMS phase23 1st	V
HV RMS phase23 3rd	V
HV RMS phase23 5th	V
HV RMS phase23 7th	V
HV RMS phase23 9th	V
HV RMS phase23 11th	V
HV RMS phase23 13th	V
HV RMS phase1N total	V
HV RMS phase1N 1st	V
HV RMS phase2N total	V
HV RMS phase2N 1st	V
HV RMS phase3N total	V
HV RMS phase3N 1st	V
HV D.ratio phase12 total	%
HV D.ratio phase12 3rd	%
HV D.ratio phase12 5th	%
HV D.ratio phase12 7th	%
HV D.ratio phase12 9th	%
HV D.ratio phase12 11th	%
HV D.ratio phase12 13th	%
HV D.ratio phase23 total	%
HV D.ratio phase23 3rd	%
HV D.ratio phase23 5th	%
HV D.ratio phase23 7th	%
HV D.ratio phase23 9th	%
HV D.ratio phase23 11th	%
HV D.ratio phase23 13th	%
HV D.ratio phase1N total	%
HV D.ratio phase1N 3rd	%
HV D.ratio phase1N 5th	%
HV D.ratio phase1N 7th	%
HV D.ratio phase1N 9th	%
HV D.ratio phase1N 11th	%
HV D.ratio phase1N 13th	%
HV D.ratio phase2N total	%
HV D.ratio phase2N 3rd	%
HV D.ratio phase2N 5th	%
HV D.ratio phase2N 7th	%
HV D.ratio phase2N 9th	%
HV D.ratio phase2N 11th	%
HV D.ratio phase2N 13th	%
HV D.ratio phase3N total	%
HV D.ratio phase3N 3rd	%
HV D.ratio phase3N 5th	%
HV D.ratio phase3N 7th	%
HV D.ratio phase3N 9th	%
HV D.ratio phase3N 11th	%
HV D.ratio phase3N 13th	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 Unit can be set for any character up to 8 words.**
- *3 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**

5.6.14. EMU4-FD1-MB

Measured items	Unit
Electric energy(Consumption)	kWh
Electric energy(Regeneration)	kWh
Electric energy(Consumption)extended	kWh
Electric energy(Regeneration)extended	kWh
Reactive energy(Consumption lag)	kvarh
Reactive energy(Consumption_lag) extended	kvarh
Current phase1	A
Current phase2	A
Current phase3	A
Current phaseN	A
Current Average	A
Voltage phase12	V
Voltage phase23	V
Voltage phase31	V
Voltage Average line voltage	V
Voltage phase1N	V
Voltage phase2N	V
Voltage phase3N	V
Electric power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand phase1	A
Current demand phase2	A
Current demand phase3	A
Current demand phaseN	A
Electric power demand	kW
Periodic electric energy	kWh
Operating time	h
Pulse count	<set> ^{*2}
HA RMS phase1 total	A
HA RMS phase1 1st	A
HA RMS phase1 3rd	A
HA RMS phase1 5th	A
HA RMS phase1 7th	A
HA RMS phase1 9th	A
HA RMS phase1 11th	A
HA RMS phase1 13th	A
HA RMS phase1 15th	A
HA RMS phase2 total	A
HA RMS phase2 1st	A
HA RMS phase2 3rd	A
HA RMS phase2 5th	A
HA RMS phase2 7th	A
HA RMS phase2 9th	A
HA RMS phase2 11th	A
HA RMS phase2 13th	A
HA RMS phase2 15th	A
HA RMS phase3 total	A
HA RMS phase3 1st	A
HA RMS phase3 3rd	A
HA RMS phase3 5th	A
HA RMS phase3 7th	A
HA RMS phase3 9th	A
HA RMS phase3 11th	A
HA RMS phase3 13th	A
HA RMS phase3 15th	A
HA RMS phaseN total	A
HA RMS phaseN 1st	A
HA RMS phaseN 3rd	A
HA RMS phaseN 5th	A

Measured items	Unit
HA RMS phaseN 7th	A
HA RMS phaseN 9th	A
HA RMS phaseN 11th	A
HA RMS phaseN 13th	A
HA RMS phaseN 15th	A
Electric energy(Consumption)	kWh
HA D.ratio phase1 total	%
HA D.ratio phase1 3rd	%
HA D.ratio phase1 5th	%
HA D.ratio phase1 7th	%
HA D.ratio phase1 9th	%
HA D.ratio phase1 11th	%
HA D.ratio phase1 13th	%
HA D.ratio phase1 15th	%
HA D.ratio phase2 total	%
HA D.ratio phase2 3rd	%
HA D.ratio phase2 5th	%
HA D.ratio phase2 7th	%
HA D.ratio phase2 9th	%
HA D.ratio phase2 11th	%
HA D.ratio phase2 13th	%
HA D.ratio phase2 15th	%
HA D.ratio phase3 total	%
HA D.ratio phase3 3rd	%
HA D.ratio phase3 5th	%
HA D.ratio phase3 7th	%
HA D.ratio phase3 9th	%
HA D.ratio phase3 11th	%
HA D.ratio phase3 13th	%
HA D.ratio phase3 15th	%
HA D.ratio phaseN total	%
HA D.ratio phaseN 3rd	%
HA D.ratio phaseN 5th	%
HA D.ratio phaseN 7th	%
HA D.ratio phaseN 9th	%
HA D.ratio phaseN 11th	%
HA D.ratio phaseN 13th	%
HA D.ratio phaseN 15th	%
HV RMS phase12 total	V
HV RMS phase12 1st	V
HV RMS phase12 3rd	V
HV RMS phase12 5th	V
HV RMS phase12 7th	V
HV RMS phase12 9th	V
HV RMS phase12 11th	V
HV RMS phase12 13th	V
HV RMS phase12 15th	V
HV RMS phase23 total	V
HV RMS phase23 1st	V
HV RMS phase23 3rd	V
HV RMS phase23 5th	V
HV RMS phase23 7th	V
HV RMS phase23 9th	V
HV RMS phase23 11th	V
HV RMS phase23 13th	V
HV RMS phase23 15th	V
HV RMS phase1N total	V
HV RMS phase1N 1st	V
HV RMS phase1N 3rd	V
HV RMS phase1N 5th	V
HA D.ratio phase1 total	%

Measured items	Unit
HV RMS phase1N 7th	V
HV RMS phase1N 9th	V
HV RMS phase1N 11th	V
HV RMS phase1N 13th	V
HV RMS phase1N 15th	V
HV RMS phase2N total	V
HV RMS phase2N 1st	V
HV RMS phase2N 3rd	V
HV RMS phase2N 5th	V
HV RMS phase2N 7th	V
HV RMS phase2N 9th	V
HV RMS phase2N 11th	V
HV RMS phase2N 13th	V
HV RMS phase2N 15th	V
HV RMS phase3N total	V
HV RMS phase3N 1st	V
HV RMS phase3N 3rd	V
HV RMS phase3N 5th	V
HV RMS phase3N 7th	V
HV RMS phase3N 9th	V
HV RMS phase3N 11th	V
HV RMS phase3N 13th	V
HV RMS phase3N 15th	V
HV D.ratio phase12 total	%
HV D.ratio phase12 3rd	%
HV D.ratio phase12 5th	%
HV D.ratio phase12 7th	%
HV D.ratio phase12 9th	%
HV D.ratio phase12 11th	%
HV D.ratio phase12 13th	%
HV D.ratio phase12 15th	%
HV D.ratio phase23 total	%

Measured items	Unit
HV D.ratio phase23 3rd	%
HV D.ratio phase23 5th	%
HV D.ratio phase23 7th	%
HV D.ratio phase23 9th	%
HV D.ratio phase23 11th	%
HV D.ratio phase23 13th	%
HV D.ratio phase23 15th	%
HV D.ratio phase1N total	%
HV D.ratio phase1N 3rd	%
HV D.ratio phase1N 5th	%
HV D.ratio phase1N 7th	%
HV D.ratio phase1N 9th	%
HV D.ratio phase1N 11th	%
HV D.ratio phase1N 13th	%
HV D.ratio phase1N 15th	%
HV D.ratio phase2N total	%
HV D.ratio phase2N 3rd	%
HV D.ratio phase2N 5th	%
HV D.ratio phase2N 7th	%
HV D.ratio phase2N 9th	%
HV D.ratio phase2N 11th	%
HV D.ratio phase2N 13th	%
HV D.ratio phase2N 15th	%
HV D.ratio phase3N total	%
HV D.ratio phase3N 3rd	%
HV D.ratio phase3N 5th	%
HV D.ratio phase3N 7th	%
HV D.ratio phase3N 9th	%
HV D.ratio phase3N 11th	%
HV D.ratio phase3N 13th	%
HV D.ratio phase3N 15th	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Unit can be set for any character up to 8 words.
- *3 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.

5.6.15. EMU4-BM1-MB

Measured items	Unit
Electric_energy(Import)	kWh
Electric_energy(Export)	kWh
Electric_energy(Import)(1P2W_3)	kWh
Electric_energy(Export)(1P2W_3)	kWh
Electric_energy(Import)extended	kWh
Electric_energy(Export)extended	kWh
Electric_energy(Import)extended(1P2W_3)	kWh
Electric_energy(Export)extended(1P2W_3)	kWh
Reactive_energy(Import_lag)	kvarh
Reactive_energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage_Average_line_voltage	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive_power	kvar
Reactive_power(1P2W_3)	kvar
Power_factor	%
Power_factor(1P2W_1)	%
Power_factor(1P2W_3)	%
Frequency	Hz
Current_demand_phase1	A
Current_demand_phase2	A
Current_demand_phase3	A
Current_demand_phase3(1P2W_3)	A
Electric_power_demand	kW
Electric_power_demand(1P2W_3)	kW
Operating_time	H
Operating_time(1P2W_3)	H

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *3 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.6.16. EMU4-HM1-MB

Measured items	Unit
Electric energy(Import)	kWh
Electric energy(Export)	kWh
Electric energy(Import)(1P2W_3)	kWh
Electric energy(Export)(1P2W_3)	kWh
Electric energy(Import)extended	kWh
Electric energy(Export)extended	kWh
Electric energy(Import)extended(1P2W_3)	kWh
Electric energy(Export)extended(1P2W_3)	kWh
Reactive energy(Import_lag)	kvarh
Reactive energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_phaseN	A
Current Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage Average line voltage	V
Voltage_phase1N	V
Voltage_phase2N	V
Voltage_phase3N	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive power	kvar
Reactive power(1P2W_3)	kvar
Power factor	%
Power factor(1P2W_1)	%
Power factor(1P2W_3)	%
Frequency	Hz
Current demand_phase1	A
Current demand_phase2	A
Current demand_phase3	A
Current demand_phase3(1P2W_3)	A
Current_demand_phaseN	A
Electric power demand	kW
Electric power demand(1P2W_3)	kW
Periodic electric energy	kWh
Periodic electric energy(1P2W_3)	kWh
Operating time	h
Operating_time(1P2W_3)	h
Pulse count	<set> ²
HA RMS phase1 total	A
HA RMS phase1_1st	A
HA RMS phase1_3rd	A
HA RMS phase1_5th	A
HA RMS phase1_7th	A
HA RMS phase1_9th	A
HA RMS phase1_11th	A
HA RMS phase1_13th	A
HA RMS phase2 total	A
HA RMS phase2_1st	A
HA RMS phase2_3rd	A
HA RMS phase2_5th	A
HA RMS phase2_7th	A
HA RMS phase2_9th	A
HA RMS phase2_11th	A
HA RMS phase2_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st	A
HA RMS phase3_3rd	A
HA RMS phase3_5th	A
HA RMS phase3_7th	A
HA RMS phase3_9th	A
HA RMS phase3_11th	A
HA RMS phase3_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st(1P2W_3)	A

Measured items	Unit
HA RMS phase3_3rd(1P2W_3)	A
HA RMS phase3_5th(1P2W_3)	A
HA RMS phase3_7th(1P2W_3)	A
HA RMS phase3_9th(1P2W_3)	A
HA RMS phase3_11th(1P2W_3)	A
HA RMS phase3_13th(1P2W_3)	A
HA RMS phaseN total	A
HA RMS phaseN_1st	A
HA RMS phaseN_3rd	A
HA RMS phaseN_5th	A
HA RMS phaseN_7th	A
HA RMS phaseN_9th	A
HA RMS phaseN_11th	A
HA RMS phaseN_13th	A
HA D.ratio_phase1_total	%
HA D.ratio_phase2_total	%
HA D.ratio_phase3_total	%
HA D.ratio_phaseN_total	%
HV RMS phase12L total	V
HV RMS phase12L_1st	V
HV RMS phase12L_3rd	V
HV RMS phase12L_5th	V
HV RMS phase12L_7th	V
HV RMS phase12L_9th	V
HV RMS phase12L_11th	V
HV RMS phase12L_13th	V
HV RMS phase23L total	V
HV RMS phase23L_1st	V
HV RMS phase23L_3rd	V
HV RMS phase23L_5th	V
HV RMS phase23L_7th	V
HV RMS phase23L_9th	V
HV RMS phase23L_11th	V
HV RMS phase23L_13th	V
HV RMS phase1N total	V
HV RMS phase1N_1st	V
HV RMS phase2N total	V
HV RMS phase2N_1st	V
HV RMS phase3N total	V
HV RMS phase3N_1st	V
HV D.ratio_phase12L_total	%
HV D.ratio_phase12L_3rd	%
HV D.ratio_phase12L_5th	%
HV D.ratio_phase12L_7th	%
HV D.ratio_phase12L_9th	%
HV D.ratio_phase12L_11th	%
HV D.ratio_phase12L_13th	%
HV D.ratio_phase23L_total	%
HV D.ratio_phase23L_3rd	%
HV D.ratio_phase23L_5th	%
HV D.ratio_phase23L_7th	%
HV D.ratio_phase23L_9th	%
HV D.ratio_phase23L_11th	%
HV D.ratio_phase23L_13th	%
HV D.ratio_phase1N_total	%
HV D.ratio_phase1N_3rd	%
HV D.ratio_phase1N_5th	%
HV D.ratio_phase1N_7th	%
HV D.ratio_phase1N_9th	%
HV D.ratio_phase1N_11th	%
HV D.ratio_phase1N_13th	%
HV D.ratio_phase2N_total	%
HV D.ratio_phase2N_3rd	%
HV D.ratio_phase2N_5th	%
HV D.ratio_phase2N_7th	%
HV D.ratio_phase2N_9th	%
HV D.ratio_phase2N_11th	%
HV D.ratio_phase2N_13th	%
HV D.ratio_phase3N_total	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Unit can be set for any character up to 8 words.
- *3 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *4 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.6.17. EMU4-LG1-MB

Measured items	Unit
Leak_current(lo)	mA
Leak_demand_current	mA
Leak_current_for_resistance(lor)	mA
Leak_demand_current_for_resistance	mA
Leak_current_for_resistance_converted	mA
lo_alarm(step1)_occurrence_count	count
lo_alarm(step2)_occurrence_count	count
lor_alarm(step1)_occurrence_count	count
lor_alarm(step2)_occurrence_count	count

- *1 The demand refers to moving average.

5.6.18. EMU4-A2

Measured items	Unit
Electric energy(Import)	kWh
Electric energy(Export)	kWh
Electric energy(Import)(1P2W_3)	kWh
Electric energy(Export)(1P2W_3)	kWh
Electric energy(Import)extended	kWh
Electric energy(Export)extended	kWh
Electric energy(Import)extended(1P2W_3)	kWh
Electric energy(Export)extended(1P2W_3)	kWh
Reactive energy(Import_lag)	kvarh
Reactive energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_phaseN	A
Current Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage Average line voltage	V
Voltage_phase1N	V
Voltage_phase2N	V
Voltage_phase3N	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive power	kvar
Reactive power(1P2W_3)	kvar
Power factor	%
Power factor(1P2W_1)	%
Power factor(1P2W_3)	%
Frequency	Hz
Current demand_phase1	A
Current demand_phase2	A
Current demand_phase3	A
Current demand_phase3(1P2W_3)	A
Current demand_phaseN	A
Electric power demand	kW
Electric power demand(1P2W_3)	kW
Operating time	h
Operating time(1P2W_3)	h
HA RMS phase1 total	A
HA RMS phase1_1st	A
HA RMS phase1_3rd	A
HA RMS phase1_5th	A
HA RMS phase1_7th	A
HA RMS phase1_9th	A
HA RMS phase1_11th	A
HA RMS phase1_13th	A
HA RMS phase2 total	A
HA RMS phase2_1st	A
HA RMS phase2_3rd	A
HA RMS phase2_5th	A
HA RMS phase2_7th	A
HA RMS phase2_9th	A
HA RMS phase2_11th	A
HA RMS phase2_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st	A
HA RMS phase3_3rd	A
HA RMS phase3_5th	A
HA RMS phase3_7th	A
HA RMS phase3_9th	A
HA RMS phase3_11th	A
HA RMS phase3_13th	A
HA RMS phase3 total	A
HA RMS phase3_1st(1P2W_3)	A
HA RMS phase3_3rd(1P2W_3)	A
HA RMS phase3_5th(1P2W_3)	A
HA RMS phase3_7th(1P2W_3)	A

Measured items	Unit
HA RMS phase3_9th(1P2W_3)	A
HA RMS phase3_11th(1P2W_3)	A
HA RMS phase3_13th(1P2W_3)	A
HA RMS phaseN total	A
HA RMS phaseN_1st	A
HA RMS phaseN_3rd	A
HA RMS phaseN_5th	A
HA RMS phaseN_7th	A
HA RMS phaseN_9th	A
HA RMS phaseN_11th	A
HA RMS phaseN_13th	A
HA D.ratio_phase1_total	%
HA D.ratio_phase2_total	%
HA D.ratio_phase3_total	%
HA D.ratio_phaseN_total	%
HV RMS phase12L_total	V
HV RMS phase12L_1st	V
HV RMS phase12L_3rd	V
HV RMS phase12L_5th	V
HV RMS phase12L_7th	V
HV RMS phase12L_9th	V
HV RMS phase12L_11th	V
HV RMS phase12L_13th	V
HV RMS phase23L_total	V
HV RMS phase23L_1st	V
HV RMS phase23L_3rd	V
HV RMS phase23L_5th	V
HV RMS phase23L_7th	V
HV RMS phase23L_9th	V
HV RMS phase23L_11th	V
HV RMS phase23L_13th	V
HV RMS phase1N_total	V
HV RMS phase1N_1st	V
HV RMS phase2N_total	V
HV RMS phase2N_1st	V
HV RMS phase3N_total	V
HV RMS phase3N_1st	V
HV D.ratio_phase12L_total	%
HV D.ratio_phase12L_3rd	%
HV D.ratio_phase12L_5th	%
HV D.ratio_phase12L_7th	%
HV D.ratio_phase12L_9th	%
HV D.ratio_phase12L_11th	%
HV D.ratio_phase12L_13th	%
HV D.ratio_phase23L_total	%
HV D.ratio_phase23L_3rd	%
HV D.ratio_phase23L_5th	%
HV D.ratio_phase23L_7th	%
HV D.ratio_phase23L_9th	%
HV D.ratio_phase23L_11th	%
HV D.ratio_phase23L_13th	%
HV D.ratio_phase1N_total	%
HV D.ratio_phase1N_3rd	%
HV D.ratio_phase1N_5th	%
HV D.ratio_phase1N_7th	%
HV D.ratio_phase1N_9th	%
HV D.ratio_phase1N_11th	%
HV D.ratio_phase1N_13th	%
HV D.ratio_phase2N_total	%
HV D.ratio_phase2N_3rd	%
HV D.ratio_phase2N_5th	%
HV D.ratio_phase2N_7th	%
HV D.ratio_phase2N_9th	%
HV D.ratio_phase2N_11th	%
HV D.ratio_phase2N_13th	%
HV D.ratio_phase3N_total	%
HV D.ratio_phase3N_3rd	%
HV D.ratio_phase3N_5th	%
HV D.ratio_phase3N_7th	%

Measured items	Unit
HV D.ratio_phase3N_9th	%
HV D.ratio_phase3N_11th	%
HV D.ratio_phase3N_13th	%

- *1 The measured items differ with the phase wire method.**
For details, refer to the instruction manual or specification sheet of the terminal.
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power.**
The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.
- *3 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).**
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)

5.6.19. EMU4-VA2

Measured items	Unit
Electric_energy(Import)	kWh
Electric_energy(Export)	kWh
Electric_energy(Import)(1P2W_3)	kWh
Electric_energy(Export)(1P2W_3)	kWh
Electric_energy(Import)extended	kWh
Electric_energy(Export)extended	kWh
Electric_energy(Import)extended(1P2W_3)	kWh
Electric_energy(Export)extended(1P2W_3)	kWh
Reactive_energy(Import_lag)	kvarh
Reactive_energy(Import_lag)extended	kvarh
Current_phase1	A
Current_phase2	A
Current_phase3	A
Current_phase3(1P2W_3)	A
Current_phaseN	A
Current_Average	A
Voltage_phase12L	V
Voltage_phase23L	V
Voltage_phase31L	V
Voltage_Average_line_voltage	V
Voltage_phase1N	V
Voltage_phase2N	V
Voltage_phase3N	V
Electric_power	kW
Electric_power(1P2W_3)	kW
Reactive_power	kvar
Reactive_power(1P2W_3)	kvar
Power_factor	%
Power_factor(1P2W_1)	%
Power_factor(1P2W_3)	%
Frequency	Hz
Current_demand_phase1	A
Current_demand_phase2	A
Current_demand_phase3	A
Current_demand_phase3(1P2W_3)	A
Current_demand_phaseN	A
Electric_power_demand	kW
Electric_power_demand(1P2W_3)	kW
Operating_time	h
Operating_time(1P2W_3)	h
HA_RMS_phase1_total	A
HA_RMS_phase1_1st	A
HA_RMS_phase1_3rd	A
HA_RMS_phase1_5th	A
HA_RMS_phase1_7th	A
HA_RMS_phase1_9th	A
HA_RMS_phase1_11th	A
HA_RMS_phase1_13th	A
HA_RMS_phase2_total	A
HA_RMS_phase2_1st	A
HA_RMS_phase2_3rd	A
HA_RMS_phase2_5th	A
HA_RMS_phase2_7th	A
HA_RMS_phase2_9th	A
HA_RMS_phase2_11th	A
HA_RMS_phase2_13th	A
HA_RMS_phase3_total	A
HA_RMS_phase3_1st	A
HA_RMS_phase3_3rd	A
HA_RMS_phase3_5th	A
HA_RMS_phase3_7th	A
HA_RMS_phase3_9th	A
HA_RMS_phase3_11th	A
HA_RMS_phase3_13th	A
HA_RMS_phase3_total	A
HA_RMS_phase3_1st(1P2W_3)	A
HA_RMS_phase3_3rd(1P2W_3)	A
HA_RMS_phase3_5th(1P2W_3)	A
HA_RMS_phase3_7th(1P2W_3)	A

Measured items	Unit
HA_RMS_phase3_9th(1P2W_3)	A
HA_RMS_phase3_11th(1P2W_3)	A
HA_RMS_phase3_13th(1P2W_3)	A
HA_RMS_phaseN_total	A
HA_RMS_phaseN_1st	A
HA_RMS_phaseN_3rd	A
HA_RMS_phaseN_5th	A
HA_RMS_phaseN_7th	A
HA_RMS_phaseN_9th	A
HA_RMS_phaseN_11th	A
HA_RMS_phaseN_13th	A
HA_D.ratio_phase1_total	%
HA_D.ratio_phase2_total	%
HA_D.ratio_phase3_total	%
HA_D.ratio_phaseN_total	%
HV_RMS_phase12L_total	V
HV_RMS_phase12L_1st	V
HV_RMS_phase12L_3rd	V
HV_RMS_phase12L_5th	V
HV_RMS_phase12L_7th	V
HV_RMS_phase12L_9th	V
HV_RMS_phase12L_11th	V
HV_RMS_phase12L_13th	V
HV_RMS_phase23L_total	V
HV_RMS_phase23L_1st	V
HV_RMS_phase23L_3rd	V
HV_RMS_phase23L_5th	V
HV_RMS_phase23L_7th	V
HV_RMS_phase23L_9th	V
HV_RMS_phase23L_11th	V
HV_RMS_phase23L_13th	V
HV_RMS_phase1N_total	V
HV_RMS_phase1N_1st	V
HV_RMS_phase2N_total	V
HV_RMS_phase2N_1st	V
HV_RMS_phase3N_total	V
HV_RMS_phase3N_1st	V
HV_D.ratio_phase12L_total	%
HV_D.ratio_phase12L_3rd	%
HV_D.ratio_phase12L_5th	%
HV_D.ratio_phase12L_7th	%
HV_D.ratio_phase12L_9th	%
HV_D.ratio_phase12L_11th	%
HV_D.ratio_phase12L_13th	%
HV_D.ratio_phase23L_total	%
HV_D.ratio_phase23L_3rd	%
HV_D.ratio_phase23L_5th	%
HV_D.ratio_phase23L_7th	%
HV_D.ratio_phase23L_9th	%
HV_D.ratio_phase23L_11th	%
HV_D.ratio_phase23L_13th	%
HV_D.ratio_phase1N_total	%
HV_D.ratio_phase1N_3rd	%
HV_D.ratio_phase1N_5th	%
HV_D.ratio_phase1N_7th	%
HV_D.ratio_phase1N_9th	%
HV_D.ratio_phase1N_11th	%
HV_D.ratio_phase1N_13th	%
HV_D.ratio_phase2N_total	%
HV_D.ratio_phase2N_3rd	%
HV_D.ratio_phase2N_5th	%
HV_D.ratio_phase2N_7th	%
HV_D.ratio_phase2N_9th	%
HV_D.ratio_phase2N_11th	%
HV_D.ratio_phase2N_13th	%
HV_D.ratio_phase3N_total	%
HV_D.ratio_phase3N_3rd	%
HV_D.ratio_phase3N_5th	%
HV_D.ratio_phase3N_7th	%

- *1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**
- *2 Expanded version of power amount and reactive power amount can be displayed up to 3 digit digits (maximum 5 digits after the decimal point) from the amount of power and reactive power. The monthly graph (daily amount) and annual graph (monthly amount) may not be displayed correctly because of the small number of significant digits.
Please refer to the instruction manual or specifications of the terminal for details on the number of significant digits of electric energy.**
- *3 When the 2-circuit measurement function is enabled, the data of the 2nd circuit can be measured from (1P2W_3).
The 2-circuit measurement function can measure 2 circuits by using a 1P2W system. (For details, refer to the instruction manual of the terminal)**

5.6.20. EMU4-AX4

Measured items	Unit
Ch1 analog value	<set> ^{*1}
Ch2 analog value	<set> ^{*1}
Ch3 analog value	<set> ^{*1}
Ch4 analog value	<set> ^{*1}
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count
Ch1 number of over limit level A	count
Ch1 number of over limit level B	count
Ch1 number of over limit level C	count
Ch1 number of over limit level D	count

***1 Unit can be set for any character up to 8 words.**

5.6.21. EMU4-PX4

Measured items	Unit
Ch1 pulse count value	<set> ^{*1}
Ch2 pulse count value	<set> ^{*1}
Ch3 pulse count value	<set> ^{*1}
Ch4 pulse count value	<set> ^{*1}
Ch1 digital input value	<set> ^{*1}
Ch2 digital input value	<set> ^{*1}
Ch3 digital input value	<set> ^{*1}
Ch4 digital input value	<set> ^{*1}
Ch1 operating time	h
Ch2 operating time	h
Ch3 operating time	h
Ch4 operating time	h

***1 Unit can be set for any character up to 8 words.**

5.6.22. MDU breaker

Measured items	Unit
Active energy	kWh
Reactive energy	kvarh
Current phase1	A
Current phase2	A
Current phase3	A
Current phaseN	A
Current average	A
Current maximum phase	A
Voltage phase1-2	V
Voltage phase2-3	V
Voltage phase3-1	V
Voltage phase1-N	V
Voltage phase2-N	V
Voltage phase3-N	V
Voltage L-N average	V
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand phase1	A
Current demand phase2	A
Current demand phase3	A
Current demand phaseN	A
Current demand maximum phase	A
Active power demand	kW
Reactive power demand	kvar
HA phase1 RMS total	A
HA phase2 RMS total	A
HA phase3 RMS total	A
HA phaseN RMS total	A
HA phase1 RMS 1st	A
HA phase1 RMS 3rd	A
HA phase1 RMS 5th	A
HA phase1 RMS 7th	A
HA phase1 RMS 9th	A
HA phase1 RMS 11th	A
HA phase1 RMS 13th	A
HA phase1 RMS 15th	A
HA phase1 RMS 17th	A

Measured items	Unit
HA phase1 RMS 19th	A
HA phase2 RMS 1st	A
HA phase2 RMS 3rd	A
HA phase2 RMS 5th	A
HA phase2 RMS 7th	A
HA phase2 RMS 9th	A
HA phase2 RMS 11th	A
HA phase2 RMS 13th	A
HA phase2 RMS 15th	A
HA phase2 RMS 17th	A
HA phase2 RMS 19th	A
HA phase3 RMS 1st	A
HA phase3 RMS 3rd	A
HA phase3 RMS 5th	A
HA phase3 RMS 7th	A
HA phase3 RMS 9th	A
HA phase3 RMS 11th	A
HA phase3 RMS 13th	A
HA phase3 RMS 15th	A
HA phase3 RMS 17th	A
HA phase3 RMS 19th	A
HA phaseN RMS 1st	A
HA phaseN RMS 3rd	A
HA phaseN RMS 5th	A
HA phaseN RMS 7th	A
HA phaseN RMS 9th	A
HA phaseN RMS 11th	A
HA phaseN RMS 13th	A
HA phaseN RMS 15th	A
HA phaseN RMS 17th	A
HA phaseN RMS 19th	A
HA demand phase1 RMS total	A
HA demand phase2 RMS total	A
HA demand phase3 RMS total	A
HA demand phaseN RMS total	A

***1 The measured items differ with the phase wire method.
For details, refer to the instruction manual or specification sheet of the terminal.**

5.6.23. AE-SW(BIF-MD)

Measured items	Unit
Active energy	kWh
Reactive energy Import lag	kvarh
Reactive energy Import lead	kvarh
Current phase1	A
Current phase2	A
Current phase3	A
Current phaseN	A
Voltage phase1-2	V
Voltage phase2-3	V
Voltage phase3-1	V
Voltage phase1-N	V
Voltage phase2-N	V
Voltage phase3-N	V
Voltage L-L maximum	V
Voltage L-N maximum	V
Leakage current	A
Active power	kW
Reactive power	kvar
Power factor	%
Frequency	Hz
Current demand phase1	A
Current demand phase2	A
Current demand phase3	A
Current demand phaseN	A
Current demand maximum phase	A
Leakage current demand	A
Active power demand	kW
Reactive power demand	kvar
HA phase1 RMS total	A
HA phase2 RMS total	A
HA phase3 RMS total	A
HA phaseN RMS total	A
HA phase1 RMS 1st	A
HA phase1 RMS 3rd	A
HA phase1 RMS 5th	A
HA phase1 RMS 7th	A
HA phase1 RMS 9th	A
HA phase1 RMS 11th	A
HA phase1 RMS 13th	A
HA phase1 RMS 15th	A
HA phase1 RMS 17th	A
HA phase1 RMS 19th	A
HA phase2 RMS 1st	A
HA phase2 RMS 3rd	A
HA phase2 RMS 5th	A
HA phase2 RMS 7th	A
HA phase2 RMS 9th	A
HA phase2 RMS 11th	A
HA phase2 RMS 13th	A
HA phase2 RMS 15th	A
HA phase2 RMS 17th	A
HA phase2 RMS 19th	A
HA phase3 RMS 1st	A
HA phase3 RMS 3rd	A
HA phase3 RMS 5th	A
HA phase3 RMS 7th	A
HA phase3 RMS 9th	A

Measured items	Unit
HA phase3 RMS 11th	A
HA phase3 RMS 13th	A
HA phase3 RMS 15th	A
HA phase3 RMS 17th	A
HA phase3 RMS 19th	A
HA phaseN RMS 1st	A
HA phaseN RMS 3rd	A
HA phaseN RMS 5th	A
HA phaseN RMS 7th	A
HA phaseN RMS 9th	A
HA phaseN RMS 11th	A
HA phaseN RMS 13th	A
HA phaseN RMS 15th	A
HA phaseN RMS 17th	A
HA phaseN RMS 19th	A
HA phase1 D ratio total	%
HA phase1 D ratio 3rd	%
HA phase1 D ratio 5th	%
HA phase1 D ratio 7th	%
HA phase1 D ratio 9th	%
HA phase1 D ratio 11th	%
HA phase1 D ratio 13th	%
HA phase1 D ratio 15th	%
HA phase1 D ratio 17th	%
HA phase1 D ratio 19th	%
HA phase2 D ratio total	%
HA phase2 D ratio 3rd	%
HA phase2 D ratio 5th	%
HA phase2 D ratio 7th	%
HA phase2 D ratio 9th	%
HA phase2 D ratio 11th	%
HA phase2 D ratio 13th	%
HA phase2 D ratio 15th	%
HA phase2 D ratio 17th	%
HA phase2 D ratio 19th	%
HA phase3 D ratio total	%
HA phase3 D ratio 3rd	%
HA phase3 D ratio 5th	%
HA phase3 D ratio 7th	%
HA phase3 D ratio 9th	%
HA phase3 D ratio 11th	%
HA phase3 D ratio 13th	%
HA phase3 D ratio 15th	%
HA phase3 D ratio 17th	%
HA phase3 D ratio 19th	%
HA phaseN D ratio total	%
HA phaseN D ratio 3rd	%
HA phaseN D ratio 5th	%
HA phaseN D ratio 7th	%
HA phaseN D ratio 9th	%
HA phaseN D ratio 11th	%
HA phaseN D ratio 13th	%
HA phaseN D ratio 15th	%
HA phaseN D ratio 17th	%
HA phaseN D ratio 19th	%
VA	kVA
VA demand	kVA

*1 The measured items differ with the phase wire method.

For details, refer to the instruction manual or specification sheet of the terminal.

5.7. List of measured items of devices

The following describes the measured items QCPU devices and GOT supported by EcoWebServerIII.

5.7.1. Bit data

(a) Range of accessible devices for commands common to iQ-R

Measured items		Device No.
Input	X	X000000~X0007FF
Output	Y	Y000000~Y0007FF
Internal relay	M	M000000~M008191
Latch relay	L	L000000~L002047
Step relay	S	S000000~S002047
Link relay	B	B000000~B0007FF
Annunciator	F	F000000~F001023
Special relay	-	-
Timer (Contact)	T	TS00000~TS00511
Timer (Coil)	T	TC00000~TC00511
Counter (Contact)	C	CS00000~CS00511
Counter (Coil)	C	CC00000~CC00511

(b) Range of accessible devices for commands common to iQ-F

Measured items		Device No.
Input	X	X000000~X000377
Output	Y	Y000000~Y000377
Internal relay	M	M000000~M007679
Latch relay	-	-
Step relay	S	S000000~S004095
Link relay	-	-
Annunciator	-	-
Special relay	-	-
Timer (Contact)	T	TS00000~TS00511
Timer (Coil)	-	-
Counter (Contact)	C	CS00000~CS00255
Counter (Coil)	C	CC00000~CC01023

- (c) Range of accessible devices for commands common to high-performance model QCPU, process CPU, dual CPU, universal model QCPU, and LCPU

Measured items		Device No.
Input	X	X000000 to X001FFF
Output	Y	Y000000 to Y001FFF
Internal relay	M	M000000 to M008191
Latch relay	L	L000000 to L008191
Step relay	S	S000000 to S008191
Link relay	B	B000000 to B001FFF
Annunciator	F	F000000 to F002047
Special relay	-	-
Timer(Contact)	T	TS00000 to TS02047
Timer(Coil)	T	TC00000 to TC02047
Counter(Contact)	C	CS00000 to CS01023
Counter(Coil)	C	CC00000 to CC01023

- (d) Range of accessible devices for commands common to basic model QCPU

Measured items		Device No.
Input	X	X000000 to X0007FF
Output	Y	Y000000 to Y0007FF
Internal relay	M	M000000 to M008191
Latch relay	L	L000000 to L002047
Step relay	S	S000000 to S002047
Link relay	B	B000000 to B0007FF
Annunciator	F	F000000 to F001023
Special relay	-	-
Timer(Contact)	T	TS00000 to TS00511
Timer(Coil)	T	TC00000 to TC00511
Counter(Contact)	C	CS00000 to CS00511
Counter(Coil)	C	CC00000 to CC00511

(e) Range of accessible devices for commands common to QnACPU

Measured items		Device No.
Input	X	X000000 to X001FFF
Output	Y	Y000000 to Y001FFF
Internal relay	M	M000000 to M008191
Latch relay	L	L000000 to L008191
Step relay	S	S000000 to S008191
Link relay	B	B000000 to B001FFF
Annunciator	F	F000000 to F002047
Special relay	M	M009000 to M009255
Timer(Contact)	T	TS00000 to TS02047
Timer(Coil)	T	TC00000 to TC02047
Counter(Contact)	C	CS00000 to CS01023
Counter(Coil)	C	CC00000 to CC01023

***1 This terminal is used for a measuring point of operation monitoring.**

(f) Range of accessible devices for commands common to ACPU

Measured items		Device No.
Input	X	X0000 to X07FF
Output	Y	Y0000 to Y07FF
Internal relay	M	M0000 to M2047
Latch relay	L	L0000 to L2047
Step relay	S	S0000 to S2047
Link relay	B	B0000 to B07FF
Annunciator	F	F0000 to F0255
Special relay	M	M9000 to M9255
Timer(Contact)	T	TS000 to TS255
Timer(Coil)	T	TC000 to TC255
Counter(Contact)	C	CS000 to CS255
Counter(Coil)	C	CC000 to CC255

(g) Range of accessible devices for commands common to AnA/AnUCPU

Measured items		Device No.
Input	X	X000000 to X001FFF
Output	Y	Y000000 to Y001FFF
Internal relay	M	M000000 to M008191
Latch relay	L	L000000 to L008191
Step relay	S	S000000 to S008191
Link relay	B	B000000 to B001FFF
Annunciator	F	F000000 to F002047
Special relay	M	M009000 to M009255
Timer(Contact)	T	TS00000 to TS02047
Timer(Coil)	T	TC00000 to TC02047
Counter(Contact)	C	CS00000 to CS01023
Counter(Coil)	C	CC00000 to CC01023

(h) Range of accessible devices for commands common to FXCPU

Measured items		Device No.
Input	X	X0000 to X0377
Output	Y	Y0000 to Y0377
Internal relay	M	M0000 to M7679
Step relay	S	S0000 to S4095
Special relay	M	M8000 to M8511
Timer(Contact)	T	TS000 to TS511
Counter(Contact)	C	CS000 to CS255

(i) Range of accessible devices for commands common to GT27, GT25, GT16, GT15, GT14, GT SoftGOT2000

Measured items		Device No.
Virtual device	L	L0000 to L2047
Virtual device	M	M0000 to M2047

5.7.2. Word data

(a) Range of accessible devices for commands common to iQ-R

Measured items		Device No.
Timer (Current value)	T	TN00000~TN00511
Counter (Current value)	C	CN00000~CN00511
Data register	D	D000000~D011135
Link register	W	W000000~W0007FF
File register	R	R000000~R032767
Special register	-	-

(b) Range of accessible devices for commands common to iQ-F

Measured items		Device No.
Timer (Current value)	T	TN00000~TN00511
Counter (Current value)	C	CN00000~CN00255
Data register	D	D000000~D007999
Link register	-	-
File register	R	R000000~R009999
Special register	-	-

(c) Range of accessible devices for commands common to high-performance model QCPU, process CPU, dual CPU, universal model QCPU and LCPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN02047
Counter(Current value)	C	CN00000 to CN01023
Data register	D	D000000 to D008191
Link register	W	W000000 to W001FFF
File register	R	R000000 to R008191
Special register	-	-

(d) Range of accessible devices for commands common to basic model QCPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN00511
Counter(Current value)	C	CN00000 to CN00511
Data register	D	D000000 to D008191
Link register	W	W000000 to W0007FF
File register	R	R000000 to R008191
Special register	-	-

(e) Range of accessible devices for commands common to QnACPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN02047
Counter(Current value)	C	CN00000 to CN01023
Data register	D	D000000 to D008191
Link register	W	W000000 to W001FFF
File register	R	R000000 to R008191
Special register	D	D009000 to D009255

(f) Range of accessible devices for commands common to ACPU

Measured items		Device No.
Timer(Current value)	T	TN000 to TN255
Counter(Current value)	C	CN000 to CN255
Data register	D	D0000 to D1023
Link register	W	W0000 to W03FF
File register	R	R0000 to R8191
Special register	D	D9000 to D9255

(g) Range of accessible devices for commands common to AnA/AnUCPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN02047
Counter(Current value)	C	CN00000 to CN01023
Data register	D	D000000 to D008191
Link register	W	W000000 to W001FFF
File register	R	R000000 to R008191
Special register	D	D009000 to D009255

(h) Range of accessible devices for commands common to FXCPU

Measured items		Device No.
Timer(Current value)	T	TN000 to TN511
Counter(Current value)	C	CN000 to CN255
Data register	D	D0000 to D7999
Expanded register	R	R0000 to R9999
Special register	D	D8000 to D8511

(i) Range of accessible devices for commands common to GT27, GT25 GT16, GT15, GT14, GT SoftGOT2000

Measured items		Device No.
Virtual device	D	D0000 to D4095
Virtual device	R	R0000 to R4095

***1 The device number varies with the PLC CPU/GOT.**

For details, refer to the instruction manual or specification sheet of the PLC/GOT or the CC-Link master/local unit.

***2 The MSB is a sign bit, and thus two's complement notation is used.**

***3 Arbitrary characters (a maximum of 8 characters) can be set as the unit.**

***4 For the multiplier, 0.001 to 99999 can be set.**

***5 Resister value * multiplying factor is do not exceed the 9999999999 (11digits).**

***6 Max intergration in 1 month is $9...99(10^n-1)$.**

***7 Select from [16bit(W)] and [32bit(L)] about the data length of PLC/GOT.**

Since the unsigned data type of PLC/GOT does not support, please use the signed data type of PLC/GOT.

5.7.3. Long data

(a) Range of accessible devices for commands common to iQ-R

Measured items		Device No.
Timer (Current value)	T	TN00000~TN00511
Counter (Current value)	C	CN00000~CN00511
Data register	D	D000000~D011135
Link register	W	W000000~W0007FF
File register	R	R000000~R032767
Special register	-	-

(b) Range of accessible devices for commands common to iQ-F

Measured items		Device No.
Timer (Current value)	T	TN00000~TN00511
Counter (Current value)	C	CN00000~CN00255
Data register	D	D000000~D007999
Link register	-	-
File register	R	R000000~R009999
Special register	-	-

(c) Range of accessible devices for commands common to high-performance model QCPU, process CPU, dual CPU, universal model QCPU and LCPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN02047
Counter(Current value)	C	CN00000 to CN01023
Data register	D	D000000 to D008191
Link register	W	W000000 to W001FFF
File register	R	R000000 to R008191
Special register	-	-

(d) Range of accessible devices for commands common to basic model QCPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN00511
Counter(Current value)	C	CN00000 to CN00511
Data register	D	D000000 to D008191
Link register	W	W000000 to W0007FF
File register	R	R000000 to R008191
Special register	-	-

(e) Range of accessible devices for commands common to QnACPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN02047
Counter(Current value)	C	CN00000 to CN01023
Data register	D	D000000 to D008191
Link register	W	W000000 to W001FFF
File register	R	R000000 to R008191
Special register	D	D009000 to D009255

(f) Range of accessible devices for commands common to ACPU

Measured items		Device No.
Timer(Current value)	T	TN000 to TN255
Counter(Current value)	C	CN000 to CN0255
Data register	D	D0000 to D1023
Link register	W	W0000 to W03FF
File register	R	R0000 to R8191
Special register	D	D9000 to D9255

(g) Range of accessible devices for commands common to AnA/AnUCPU

Measured items		Device No.
Timer(Current value)	T	TN00000 to TN02047
Counter(Current value)	C	CN00000 to CN01023
Data register	D	D000000 to D008191
Link register	W	W000000 to W001FFF
File register	R	R000000 to R008191
Special register	D	D009000 to D009255

(h) Range of accessible devices for commands common to FXCPU

Measured items		Device No.
Timer(Current value)	T	TN000 to TN511
Counter(Current value)	C	CN000 to CN255
Data register	D	D0000 to D7999
Expanded register	R	R0000 to R9999
Special register	D	D8000 to D8511

(i) Range of accessible devices for commands common to GT27, GT25, GT16, GT15, GT14, GT SoftGOT2000

Measured items		Device No.
Virtual device	D	D0000 to D4095
Virtual device	R	R0000 to R4095

- *1 The device number varies with the PLC CPU/GOT.
For details, refer to the instruction manual or specification sheet of the PLC/GOT or the CC-Link master/local unit.
- *2 Data of double word (2 device No. for 1 data).
Last device No. is first device No. +1.
Specify so that the lowest word and highest word are within the accessible device range.
- *3 First word is being used as symbol (a multiple of 2).
- *4 Arbitrary characters (a maximum of 8 characters) can be set as the unit.
- *5 For the multiplier, 0.00001 to 1 (Up to 5 decimal places) can be set.
- *6 Resister value * multiplying factor is do not exceed the 9999999999 (11digits).
- *7 Max intergration in 1 month is $9...99(10^n-1)$.
- *8 Select from [16bit(W)] and [32bit(L)] about the data length of PLC/GOT.
Since the unsigned data type of PLC/GOT does not support, please use the signed data type of PLC/GOT.

5.8. PLC Setting

The following describes PLC settings to communicate with by Ethernet (CH2).
For details, refer to the user's manual of the PLC to be used.

***1 EcoWebServerIII supports the following PLC series.**

iQ-R series

iQ-F series

QCPU/LCPU/QnACPU series

ACPU series

An ACPUCPU/ An UCPUCPU series

FXCPU series

***FXCPU series PLC is only supported for serial communication by using Ethernet/Serial transfer.**

***2 The supported communication frames supported by EcoWebServerIII are ASCII of A-compatible 1C frames (Format 4) or QnA-compatible 3E frames**

5.8.1. Communicate with EcoWebServerIII by Ethernet (CH2)

(a) For Ethernet interface unit (GX Works2/GX Developer)
GX Works2/GX Developer settings for Ethernet interface unit.

Item	Contents
Operation settings	
Communication code	ASCII
Default settings	Always OPEN wait (possible to communicate by STOP)
IP address	Access by EcoWebServerIII
Write in when Run	Allow
Frame setting	Ethernet(V2.0)
TCP alive setting	KeepAlive
Open setting	
Line1	
Protocol	TCP
Open mode	Unpassive
Fixed buffer	Receive
Fixed buffer step	Have
Pair open	Pair
Alive confirm	No
Local port	Any port (Register this value as the port No. in PLC by EcoWebServerIII setting software)
Target IP address	- (no set)
Target port No.	- (no set)
Line2	
Protocol	Same as Line1
Open mode	Same as Line1
Fixed buffer	Send
Fixed buffer step	Same as Line1
Pair open	Same as Line1
Alive confirm	Same as Line1
Local port	Same as Line1
Target IP address	- (no set)
Target port No.	- (no set)

(b)For internal Ethernet interface (GX Works2/GX Developer)
 GX Works2/GX Developer settings for internal Ethernet interface.

Item	Contents
IP address setting	
IP setting	Access by EcoWebServerIII
Subnet	(ex) 255.255.0.0 <u>Setting condition</u> -Start at 1 -Cannot add 0 amount 1 -Last at 0
Gateway	IP address of default gateway
Communication code	ASCII
Write in when Run	Allow
MELSOFT direct	No inhibit
No answer to CPU from network	Answer
Open setting	
Protocol	TCP
Open mode	Unpassive
Open type	MC protocol
Local port	Any port (Register this value as the port No. in PLC by EcoWebServerIII setting software)
Target IP address	- (no set)

(c)For PLC Ethernet unit or PLC CPU built-in Ethernet port (GX Works3)
 GX Works3 settings for PLC Ethernet unit or PLC CPU built-in Ethernet port.

Item	Contents
IP address setting	
IP setting	Access by EcoWebServerIII
Subnet	(ex) 255.255.0.0 <u>Setting condition</u> -Start at 1 -Cannot add 0 amount 1 -Last at 0
Gateway	IP address of default gateway
Write setting during RUN (Enable/Disable)	All allow (SLMP)
Communication code	ASCII
Destination device connection configuration setting	
Connect terminal	Ethernet device(general): SLMP connect
Protocol	TCP
PLC: Port No.	Any port (Register this value as the port No. in PLC by EcoWebServerIII setting software)

5.8.2. Communicate with EcoWebServerIII by Ethernet/Serial (CH2)

GX Works2/GX Developer settings for Ethernet/Serial interface.

Item	Content
Transfer setting	
Operation setting	Independent
Data bits	7
Parity bits	Yes
Parity	Even
Stop bits	1
Sum check code	Yes
Write in when Run	Allow
Change setting	Allow
Communication speed	19200bps
Protocol setting	MC protocol (type 4)
Station No. setting	1 to 31(0 for EcoWebServerIII)

5.9. GOT communication settings

This section explains how to set the GOT when connecting the EcoWebServerIII and GOT with the LAN CH2 port in the EcoWebServerIII's server.

For details, refer to the user's manual of the GOT to be used.

*1 **The EcoWebServerIII reads/writes data to the GOT's virtual device using the microcomputer connection (Ethernet).**

Microcomputer connection (Serial) is not supported.

*2 **The following GOT Series are supported.**

GOT2000 Series (GT27/GT25)

GOT1000 Series (GT16/GT15/GT14)

GT SoftGOT2000

(Note that support is limited to microcomputer connection (Ethernet) compatible GOTs.)

5.9.1. Settings to connect EcoWebServerIII to GOT with Ethernet

(1) For GOT1000 Series (GT16/GT14/GT15)

Set the connection device with the GOT screen creation software GT Designer 3.

Item	Contents
Maker	Others
Model	Microcomputer connection
I/F	Standard I/F (Ethernet): Multi-connection compatible * For GT15, select extended I/F
Driver	Ethernet (microcomputer)
Details settings	
GOT Net No.	1 (any number)
GOT station No.	1 (any number)
GOT IP address	Access by EcoWebServerIII
Subnet mask	(ex) 255.255.0.0 <u>Setting conditions</u> * Start at 1 * Cannot add 0 amount 1 * Last at 0
Default gateway	Set when using default gateway
Ethernet download port No.	Any number
GOT device communication port No.	Any (Register this value as the port No. in GOT by EcoWebServerIII setting software)
Startup time (sec.)	3
Send delay time (x10 ms)	0
32-bit storage order	LH order
Protocol	TCP/IP
Type	8
Interrupt data length	1
Special interrupt code output	None
Alive confirm	Disabled
Alive confirm cycle (sec.)	20

* Refer to example of setting with GT Designer 3 on next page.

(2) For GOT2000 Series (GT27/GT25)

Set the connection device with the GOT screen creation software GT Designer 3.

Item	Contents
Maker	Others
Model	Microcomputer connection
I/F	Standard I/F (Ethernet): Multi-connection compatible
Driver	Ethernet (microcomputer)
Details settings	
GOT Net No.	1 (any number)
GOT station No.	1 (any number)
GOT IP address	Access by EcoWebServerIII
Subnet mask	255.255.0.0, etc. <u>Setting conditions</u> * 1 must condition from uppermost bit * Cannot add 0 amount 1 * Last at 0
Default gateway	Set when using default gateway
Peripheral S/W communication port No. No.	Any number
GOT device communication port No.	Any (Register this value as the port No. in GOT by EcoWebServerIII setting software)
Startup time (sec.)	3
Send delay time (x10 ms)	0
32-bit storage order	LH order
Protocol	TCP/IP
Type	8
Interrupt data length	1
Special interrupt code output	None
Alive confirm	Disabled
Alive confirm cycle (sec.)	20

* Refer to example of setting with GT Designer 3 on next page.

(3) For GOT2000 Series (GT27/GT25)

Please use GT Designer3 and GT SoftGOT2000 to do the settings.

(1) GT Designer3: Connected device settings

Item	Contents
Maker	Others
Model	Microcomputer connection

(2) GT SoftGOT2000: Connection settings

Item	Contents
Connection method	Ethernet
Model	Micro
Option	
32-bit storage order	LH order
Protocol	TCP/IP
format	8
Interrupt data length	1 byte
Special interrupt code output	None
Health check	None
Health check cycle(seconds)	20
Request destination unit I/O No.	0
Ethernet	
NET No.	1(optional)
PC No.	1(optional)
Port No.	Any (Register this value as the port No. in GT SoftGOT2000 by EcoWebServerIII setting software)
Transmisson wait(ms)	0

5.10. Data output to PLC/GOT

The following describes the range of data output to PLC/GOT.
For output items of demand information, refer to [5.7.3 Long data].

5.10.1. Double word

- (1) Range of accessible devices for commands common to iQ-R

Item		Device No.	Data type
Data register	D	D000000~D011135	Decimal.

- (2) Range of accessible devices for commands common to iQ-F

Item		Device No.	Data type
Data register	D	D000000~D007999	Decimal.

- (3) Range of accessible devices for commands common to high-performance model QCPU, process CPU, dual CPU, universal model QCPU, QnACPU and LCPU.

Item		Device No.	Data type
Data register	D	D000000 to D12287	Decimal.

- (4) Range of accessible devices for commands common to basic model QCPU

Item		Device No.	Data type
Data register	D	D000000 to D011135	Decimal.

- (5) Range of accessible devices for commands common to AnA/AnUCPU

Item		Device No.	Data type
Data register	D	D000000 to D008191	Decimal.

- (6) Range of accessible devices for commands common to ACPU

Item		Device No.	Data type
Data register	D	D0000 to D1023	Decimal.

- (7) Range of accessible devices for commands common to FXCPU

Item		Device No.	Data type
Data register	D	D0000 to D7999	Decimal.

- (8) Range of accessible devices for commands common to GT27, GT25, GT16, GT15 and GT14, GT SoftGOT2000

Item		Device No.	Data type
Virtual device	D	D0020 to D2031, D2036 to D4095	Decimal.

*1 The details of the device No. refer to the manual of PLC CPU/GOT.

*2 Data of double word (2 device No. for 1 data).

Last device No. is first device No.+1.

Specify so that the lowest word and highest word are within the accessible device range.

*3 First word is being used as symbol (a multiple of 2).

*4 Please set up the unit and magnification in the upper end (management).

*5 Range of the register value is -2147483648 to 2147483647 (Decimal).

*6 Cumulative value of one cycle can be changed by measuring value and magnification, please confirm in the upper end (management).

*7 Refer to **Appendix 5.11 Data output specification to PLC / GOT** for details on each output data type.

5.11. Data output specification to PLC/GOT


The following describes the specification of data output to the PLC/GOT. In addition to output the measuring value, measuring error and updating time can be output to the selected device.

The demand information can also be output to a specified device when using the EcoWebServerIII with demand control function.

5.11.1. Data output

Data output for each measuring item occupy 2 device No.

Device of data output target is registered as [First device No.] in [4.8.1 Data output settings].

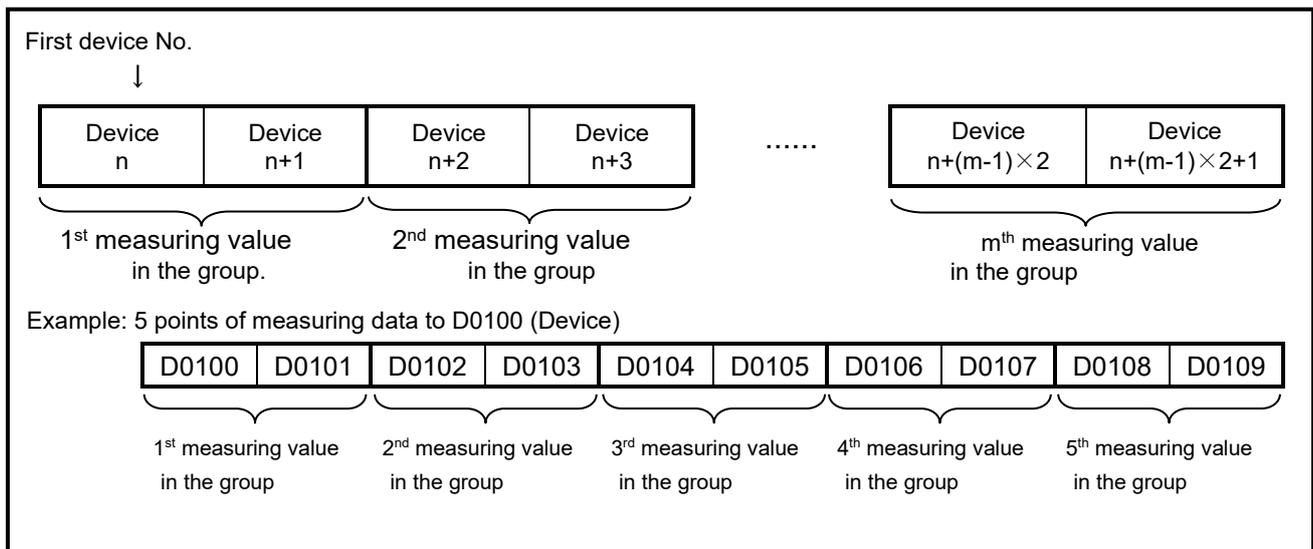

*1 Range of the data output value is -2147483648 to 2147483647 (Decimal).

Exceeds the upper limit: 7FFFFFFF, below the lower limit: FFFFFFFF

*2 Data with a decimal point will be output as an integer. Please add a decimal in the upper end.

For the decimal point position, refer to the programming manual of each terminal.

Example

123.456	→	123456 (1E240h)	Upper end÷1000
1234.56	→	123456 (1E240h)	Upper end÷100
12345.6	→	123456 (1E240h)	Upper end÷10
123456	→	123456 (1E240h)	Upper end do not need calculus
1234560	→	1234560 (12D680h)	Upper end do not need calculus

*3 Operation monitoring The data of measurement points are as follows.

ON 1(00000001h)


OFF 0(00000000h)

5.11.2. Measuring error information

When [Output measuring error information] is selected in the [4.8.1 Data output settings], output measuring error information (0: normal or 1: abnormal).

*1 [Monitor] in Report mail for measuring error must be selected in External device coordination setting.


Measuring error information or 1 measuring point is used as a bit. (16 measuring points for 1 device, 32 measuring points for 2 devices).

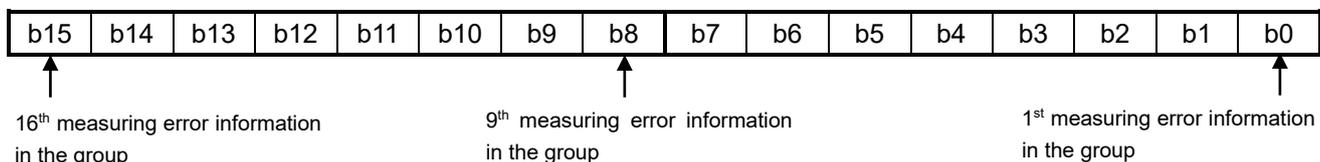

*2 Not use 0: normal output.

5.11.3. Updating time information

[Information of the updating will be appended in the end of the device] is selected in the [4.8.1 Data output settings], updating time information will be appended in the next device of measuring error information.

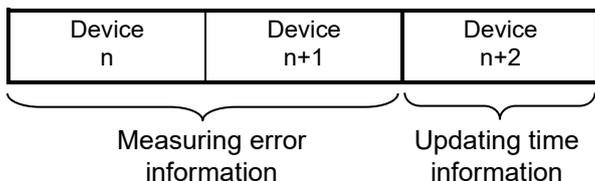

Updating time is output as Hexadecimal. Range is 00:00(0000h) to 59:59(3B3Bh). This can be used to determine whether the information is output correctly from EcoWebServerIII.

5.11.4. Outputting demand information (Only with demand control function)

Each time the demand is updated, the following demand information is output to the specified output destination.

The output destination devices are shown below.

* Can be output PLC/GOT is only 1.

n: [First device No.] in [4.8.2 Data output settings (demand control)]

Device No.	Item		Output data range	
			(Decimal)	(Hexadecimal)
n	Control device for monitoring		0=Writing / writing incomplete 1= Writing complete	0000h, 0001h
n+1	Healthy		0,1 (Reversed with each write)	0000h, 0001h
n+2	Current time	Year	2012 to 2099	07DCh to 0833h
n+3		Mon.	1 to 12	0001h to 000Ch
n+4		Day(s)	1 to 31	0001h to 001Fh
n+5		Hour(s)	0 to 23	0000h to 0017h
n+6		Minute	0 to 59	0000h to 003Bh
n+7		Sec.	0 to 59	0000h to 003Bh
n+8	Integrated value of consumption	Down	0 to 999,999,999	00000000h to 3B9AC9FFh
n+9		Top		
n+10	Current demand	Down	0 to 9,999,999	00000000h to 0098967Fh
n+11		Top		
n+12	Predicted demand	Down	0 to 9,999,999	00000000h to 0098967Fh
n+13		Top		
n+14	Adjusted electrical power	Down	-9,999,999 to 9,999,999	FF676981h to 0098967Fh
n+15		Top		
n+16	Permissible power	Down	0 to 9,999,999	00000000h to 0098967Fh
n+17		Top		
n+18	Previous demand	Down	0 to 9,999,999	00000000h to 0098967Fh
n+19		Top		
n+20	Remaining time		3600 to 10	0E10h to 000Ah
n+21	Alarm		Refer to next page ^{*1}	
n+22	Control status		Refer to next page ^{*2}	
n+23	Target demand value	Down	0 to 9,999,999	00000000h to 000F423Fh
n+24		Top		
n+25	VCT ratio	Down	1 to 100,000	00000001h to 000186A0h
n+26		Top		
n+27	Alarm type		1=Limit alarm 2=Fixed alarm	0001h, 0002h
n+28	Integrated value of consumption: Number of decimal digits		0 to 3	0000h to 0003h
n+29	Current demand: Number of decimal digits		1 to 4	0001h to 0004h

*1 Alarm

The alarm data output uses one device.

(1=Occurred, 0=Recovered)

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
-----	-----	-----	-----	-----	-----	----	----	----	----	----	----	----	----	----	----

b15 to b7	Not used (0 fixed)
b6	Frequency synchronization error
b5	Error: Demand time limit adjustment by external pulse signal
b4	Battery error
b3	System error
b2	Limit / Fixed
b1	Level 2
b0	Level 1

*2 Control status

The control status data output uses one device.

1=ON (Close) ... Closed,

0=OFF (Open) ... Open

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
-----	-----	-----	-----	-----	-----	----	----	----	----	----	----	----	----	----	----

b15	Not used (0 fixed)
b14	Not used (0 fixed)
b13	Not used (0 fixed)
b12	Not used (0 fixed)
b11	Control status (control 12)
b10	Control status (control 11)
b9	Control status (control 10)
b8	Control status (control 9)
b7	Control status (control 8)
b6	Control status (control 7)
b5	Control status (control 6)
b4	Control status (control 5)
b3	Control status (control 4)
b2	Control status (control 3)
b1	Control status (control 2)
b0	Control status (control 1)

5.12. EcoWebServerIII MC protocol server

This section describes EcoWebServerIII MC protocol server.

When using the EcoWebServerIII with demand control function, can read the demand information using the MC protocol communication.

5.12.1. Communications parameter

Communication parameters of EcoWebServerIII MC protocol server is shown in the table below.

Item	Contents
Communication protocol	MCprotocol 3E, 4E frame
	TCP/IP
Updated data code	Binary
Port No.	50001
Receive timeout *2	5 [s]
First device No.	D1000
Data update cycle	10 [s]

*1 Each parameter is fixed and can not be changed.

Please set according to the above parameters by the client side.

*2 The timeout monitoring time of complete reception from the order message reception start.

5.12.2. Local virtual device data output contents (Only with demand control function)

Every demand update, the following demand information is output to the local virtual device specified. The output destination device is shown in the table below.

Device No.	Item		Output data range	
			(Decimal)	(Hexadecimal)
D1000	Control device for monitoring		0=Writing / writing incomplete 1=Writing complete	0000h, 0001h
D1001	Healthy		0, 1 (Reserved with each write)	0000h, 0001h
D1002	Current time	Year	2012 to 2099	07DCh to 0833h
D1003		Mon.	1 to 12	0001h to 000Ch
D1004		Day(s)	1 to 31	0001h to 001Fh
D1005		Hour(s)	0 to 23	0000h to 0017h
D1006		Minute	0 to 59	0000h to 003Bh
D1007		Sec.	0 to 59	0000h to 003Bh
D1008		Integrated value of consumption	Down	0~999,999,999
D1009	Top			
D1010	Current demand	Down	0~9,999,999	00000000h to 0098967Fh
D1011		Top		
D1012	Predicted demand	Down	0~9,999,999	00000000h to 0098967Fh
D1013		Top		
D1014	Adjusted electrical power	Down	-9,999,999~9,999,999	FF676981h to 0098967Fh
D1015		Top		
D1016	Permissible power	Down	0 to 9,999,999	00000000h to 0098967Fh
D1017		Top		
D1018	Previous demand	Down	0 to 9,999,999	00000000h to 0098967Fh
D1019		Top		
D1020	Remaining time		3600 to 10	0E10h to 000Ah
D1021	Alarm		Refer to next page *1	
D1022	Control status		Refer to next page *2	
D1023	Target demand	Down	0 to 9, 999, 999	00000000h to 0098967Fh
D1024		Top		
D1025	VCT ratio	Down	1 to 100, 000	00000001h to 000186A0h
D1026		Top		
D1027	Alarm type		1=Limit alarm 2=Fixed alarm	0001h, 0002h
D1028	Integrated value of consumption: Number of decimal digits		0 to 3	0000h to 0003h
D1029	Current demand: Number of decimal digits		1 to 4	0001h to 0004h

[Alarm state format]

bit	contents	
b0	Level 1 alarm	0: Restored 1: Occurrence
b1	Level 2 alarm	
b2	Limit/Fixed alarm	
b3	System error (demand control unit)	
b4 to b15	(Not used)	

[Load control state format]

bit	contents	
b0	Control status (control 1)	0: Restored 1: Occurrence
b1	Control status (control 2)	
b2	Control status (control 3)	
b3	Control status (control 4)	
b4	Control status (control 5)	
b5	Control status (control 6)	
b6	Control status (control 7)	
b7	Control status (control 8)	
b8	Control status (control 9)	
b9	Control status (control 10)	
b10	Control status (control 11)	
b11	Control status (control 12)	
b12 to b15	(Not used)	

5.13. List of FTP commands

The following describes FTP (file transfer protocol) commands that are supported by EcoWebServerIII. The descriptions of the following FTP commands are for data acquisition in EcoWebServerIII from a higher-level device.

(The setting for periodic data transfer from EcoWebServerIII to an FTP server is described in "4.8.12 FTP server setting".)

5.13.1. List of FTP commands

The following FTP commands are supported.

Available commands differ with the login ID.

- *1 The default data acquisition login ID and password are "guest" and "user", respectively, and the default system administration login ID and password are "ecoV" and "ecopass", respectively.
- *2 Normally, do not use the system administration login ID and password. A change or deletion of a file or folder in the main unit of EcoWebServerIII can cause malfunction.

Command	Command of FTP client on Windows	Description	Support	
			For file acquisition	For system administration
OPEN	open	FTP connection	○	○
USER	user	(Login ID)	○	○
PASS	—	(Password)	○	○
CWD/XCWD	cd	Change the current directory	○	○
CDUP/XCUP	cd ..	Move to the parent directory	○	○
QUIT	bye close	End FTP connection	○	○
PORT	—	Set a port	○	○
PASV	—	Open the specified port to listen for connection	○	○
TYPE	binary (TYPE I) ascii (TYPE A)	Set a file type	○	○
RETR	get mget	Read out a file Read out files by batch	○	○
STOR	put mput	Write a file Write files by batch	—	○
DELE	del mdelete	Delete a file Delete files by batch	—	○
PWD/XPWD	pwd	Display the current directory	○	○
LIST	dir	Display a list of files	○	○
NLST	ls	Display a list of names	○	○
MKD/XMKD	mkd mkdir	Create the specified directory	—	○
RMD/XRMD	rmd rmdir	Delete the specified directory	—	○

5.13.2. Acquisition of data files by FTP command

- (1) Start up the Command Prompt of Windows.

Click [Start] - [Programs] - [Accessories] - [Command Prompt].

```
C:\Documents and Settings\%User>
```

- (2) Move the file to the destination directory (create a folder with Explorer etc.).

Type cd [directory name].

For example, to save a file in [C:\EcoWebServer\Data], type as follows to move the file to the appropriate directory.

```
C:\Documents and Settings\%User>cd c:\EcoWebServer\Data
```

- (3) Make sure that the prompt shows the appropriate directory name.

```
C:\EcoWebServer\Data>
```

- (4) Start up the FTP client.

Type ftp and then press the [Enter] key.

```
C:\EcoWebServer\Data>ftp  
ftp>
```

- (5) Connect to EcoWebServerIII.

Type open [IP address of EcoWebServerIII] and then press the [Enter] key.

```
ftp> open 192.168.10.1
```

- (6) When the communication is established successfully, EcoWebServerIII gives a response.

Type the data acquisition login ID and then press the [Enter] key.

***1 Do not use the system administration login ID.**

```
ftp> open 192.168.10.1  
Connected 192.168.10.1.  
220 FTP server ready  
User (192.168.10.1:(none)): guest
```

- (7) Type the data acquisition password and then press the [Enter] key.

```
User (192.168.10.1:(none)): guest  
331 Password.  
Password:
```

(8) Display the directory. Type dir and then press the [Enter] key.

```
Password:
230 User guest logged in.
ftp> dir
200 PORT command successful.
150 ASCII data.
11-03-01 04:00PM <DIR> ZoomLog
11-03-01 04:00PM <DIR> DayLog
11-03-01 04:00PM <DIR> DayBak
11-03-01 04:00PM <DIR> MonthLog
11-03-01 04:00PM <DIR> MonthBak
11-03-01 04:00PM <DIR> YearLog
11-03-01 04:00PM <DIR> YearBak
11-03-01 04:00PM <DIR> VDayLog
11-03-01 04:00PM <DIR> VDayBak
11-03-01 04:00PM <DIR> VMonthLog
11-03-01 04:00PM <DIR> VMonthBak
11-03-01 04:00PM <DIR> BDayLog
11-03-01 04:00PM <DIR> BDayBak
11-03-01 04:00PM <DIR> SystemLog
11-03-01 04:00PM <DIR> SystemBak
11-03-01 04:00PM <DIR> DILog
11-03-01 04:00PM <DIR> DIBak
226 transfer complete.
ftp: 916 bytes received in 0.11Seconds 8.40Kbytes/sec
ftp>
```

* Display of the above is an example. Refer to the table on the next page for more information.

***1 Each directory stores the following data files.**

***2 The Bak directory stores backup data that is used for restoring a corrupted file.**

Normally, use the Log directory.

Directory name	Stored file	Remarks
ZoomLog	Zoom data file	
DayLog	Daily data file	
DayBak		For backup
MonthLog	Monthly data file	
MonthBak		For backup
YearLog	Yearly data file	
YearBak		For backup
VDayLog	Virtual (daily) data file	
VDayBak		For backup
VMonthLog	Virtual (monthly) data file	
VMonthBak		For backup
BDayLog	Specific consumption (daily) data file	
BDayBak		For backup
FDayLog	Equipment (daily) data file	
FDayBak		For backup
SystemLog	System log file	
SystemBak		For backup
DILog	Operation history data file	
DIBak		For backup
DmLog	Demand alarm and control history data file*	
DmBak		For backup
DmDayLog	Demand data (daily) file*	
DmDayBak		For backup
DmMonthLog	Demand data (Monthly) file*	
DmMonthBak		For backup
DmYearLog	Demand data (Annual) file*	
DmYearBak		For backup

***Demand data is a file that only models with demand control function creates.**

(9) Move to the directory.

Type `cd [directory name]` (case-sensitive) and then press the [Enter] key.

(Below is an example of `cd MonthLog`.)

```
ftp> cd MonthLog
250 CWD command successful.
ftp>
```

(10) Display the directory.

Type `dir` and then press the [Enter] key.

A list of data files in the [directory name] will be displayed.

```
ftp> dir
200 PORT command successful.
150 ASCII data.
11-03-04 00:00AM          3 WrStart
11-03-04 00:00AM          3 WrEnd
11-04-01 00:00AM      12943 1103.csv
:
11-12-01 00:00AM      14826 1111.csv
12-01-01 00:00AM      12502 1112.csv
12-04-01 00:00AM      16976 1201.csv
226 transfer complete.
ftp: 1025 bytes received in 0.25Seconds 4.10Kbytes/sec
ftp>
```

(11) Acquire a data file.

Type `get [file name]` and then press the [Enter] key.

To acquire another data file in the same directory, repeat the same operation.

```
ftp> get 1103.csv
200 PORT command successful.
150 ASCII data connection.
226 transfer complete.
ftp: 12502 bytes received in 0.17Seconds 14.69Kbytes/sec
ftp>
```

(12) To acquire a file in another directory, return to the original directory (state of Step (8)).

Type `cd ..` and then press the [Enter] key.

```
ftp> cd ..
250 CWD command successful.
ftp>
```

By following the same steps as Steps (8) to (11), acquire data files in other directories.

(13) When necessary processes are completed, type `bye` and then press the [Enter] key.

```
ftp> bye
221 GOOD BYE.

C:\EcoWebServer\Data>
```

(14) Type `exit` and then press the [Enter] key. Windows Command Prompt will be closed.

```
C:\EcoWebServer\Data> exit
```

5.14. How to check the MAC address

If you need to check the MAC address of EcoServer III, follow the procedure below.

(a) Connect the EcoServer III and the PC one to one with a LAN cable.

(b) Start the Windows command prompt.

Click [Start] - [Programs] - [Accessories] - [Command Prompt].

```
C:\Documents and Settings\User>
```

(c) Type [ping ***.***.***.***] and press the [Enter] key.

(***.***.***.*** is the IP address of EcoServer III, the following is the case when the IP address is 192.168.10.1.)

```
C:\Documents and Settings\User>ping 192.168.10.1

Pinging 192.168.10.1 with 32 bytes of data:
Reply from 192.168.10.1: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.10.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Documents and Settings\User>
```

(d) Type [arp -a] and press the [Enter] key. The MAC address is displayed in [Physical Address].

```
C:\Documents and Settings\User>arp -a

Interface: 192.168.10.100 --- 0xb
Internet Address      Physical Address      Type
192.168.10.1         00-2E-34-12-73-2E    dynamic
```

 MAC address

5.15. List of prohibited characters

Prohibited characters on EcoWebServerIII are shown below. The following characters may not be displayed correctly on the browser of EcoWebServerIII.

~ // - ¢ £ ①②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱⑲⑳ I II IIIIV V VIVII VIII IX X m m c m k m m g k g c c m ¢ ¢ ¢ No K K.
TEL \$ ∑ ⊂ ∆ i ii iii iv v vi vii viii ix x ！ ’ ” i ii iii iv v vi vii viii ix x I II IIIIV V VIVII VIII IX X ！ ’ ” No TEL

5.16. List of error codes

5.16.1. Terminal connection check (CC-Link terminal)

Error code	Description of error	Factor for occurrence of error (details)	Action
45828 (B304)	Abnormal station detected in circuit test	No terminal of the applicable station number is connected.	Check for proper connection of the terminal and disconnection or short-circuit of the transmission line.
45831 (B307)	Abnormal data link of all stations	No terminal of the applicable station number is connected.	
45837 (B30D)	Initial status	No terminal of the applicable station number is connected (at the first connection check).	

5.16.2. Terminal connection check (MODBUS terminal)

Error code	Description of error	Factor for occurrence of error (details)	Action
1	To use unsupported function code	To use unsupported function code.	Choose the MODBUS terminal of supported function code.
2	Out of range data address	Data address is out of range setting.	To setting data address in the 1 to 65535 range.
3	Out of range data or mismatch between number of registers and data discrepancy	Number of registers is out of range setting.	Choose the MODBUS terminal to match the number of registers.
4	Connection error of MODBUS RTU terminal-to-terminal or hardware error	To have a problem with connection between MODBUS TCP <-> MODBUS RTU converter and MODBUS terminal.	Check operation of the terminal and connection between MODBUS TCP <-> MODBUS RTU converter and MODBUS terminal.

5.16.3. Mail sending check

Error code	Description of error	Factor for occurrence of error (details)	Action
-8001	Mail server not set error	SMTP server has not been registered in the setting project	Check the contents of the setting project. And check if the project has been written.
-8002	Mail not set error	Mail notification has not been registered in the setting project	

5.16.4. File automatic transfer check

Error code	Description of error	Factor for occurrence of error (details)	Action
-121	FTP server name incorrect error (connection error)	FTP server name is incorrect	Set the correct FTP server name.
-122	Login error	Login name is wrong	Set the correct login name.
-130	FTP server connection error	It is not possible to connect to the FTP server	Check starting of FTP server and the connection of the cable.
-370	File transfer error	File transfer is not able	Check the FTP server address and the cable.
Others	FTP response code Example) 452: There is not enough storage capacity in the system	There is not enough space on the FTP server	Check the used capacity of the FTP server and ensure the free space.

5.16.5. Air-controller connection check

Error code	Description of error	Factor for occurrence of error (details)	Action
-8005	External device unset error	Air-controller has not been registered in the setting project	Check the contents of setting project and check if written the project.

5.17. Troubleshooting

The following describes what to do when some abnormality or trouble occurs during the use of this software. If an error occurs or a message appears during operation of the OS or an application program, refer to the instruction manual of the OS or application program.

Item	Error details/problems	Check items
CC-Link terminal registration	When the station number of AJ65BT-68TD, AJ65BT-64RD3, or AJ65BT-64AD is set to, for example, 2, no terminal can be registered to station number 3.	Note that the number of occupying stations of AJ65BT-68TD and AJ65BT-64RD3 is 4, and that of AJ65BT-64AD is 2; each terminal successively uses station numbers for the number of its occupying stations. ☞ Refer to “ 5.1 List of support terminals (CC-Link communication products) ”.
	AJ65BT-68TD, AJ65BT-64RD3, or AJ65BT-64AD cannot be registered to station number 64.	The number of occupying stations of AJ65BT-68TD and AJ65BT-64RD3 is 4, and that of AJ65BT-64AD is 2; each terminal successively uses station numbers for the number of its occupying stations. Hence, the station number exceeds 64, preventing the registration. ☞ Refer to “ 5.1 List of support terminals (CC-Link communication products) ”.
	QJ61BT11N cannot be registered to station number 64. Its number of occupying stations is 1. Why?	Note that the range of station numbers that can be set to QJ61BT11N is 1 to 63.
	Is any setting required for model information?	Use the same setting as that of the terminal. Incorrect setting prevents the collection of measurement data.
CC-Link deletion of terminal	A terminal cannot be deleted. The message "Delete the measuring point before deleting the terminal" appears.	A terminal that is already registered to a measuring point cannot be deleted. Delete the registered appropriate measuring point before deleting the terminal.
CC-Link change of terminal	The model name of a terminal cannot be changed.	The model name of a terminal that is already registered to a measuring point cannot be changed. Delete the registered appropriate measuring point before changing the model name.
	The model name of a terminal cannot be changed even though no measuring point is registered.	The model name cannot be changed for multiple-circuit products (EMU2-RD3-C, EMU2-RD5-C, EMU2-RD7-C, EMU2-RD2-C-4W, EMU2-RD4-C-4W, EMU-C7P4-6-A). Delete the registered terminal and then register the terminal anew.
	The EMU-C7P4-6-A phase wire method cannot be changed.	A registered terminal cannot be changed. Delete the terminal once. Register the terminal again and select the phase wire method.
	If the rated line voltage of the EMU-C7P4-6-A is changed, the rated voltage of the other circuits in the same terminals also changed.	The EMU-C7P4-6-A rated line voltage is common for all circuits.
CC-Link change of terminal	When the line-to-line voltage rating of EMU2-RD2-C-4 or EMU2-RD4-C-4W is changed, the line-to-line voltage rating of other circuits of the same terminal is also changed.	For EMU2-RD2-C-4W and EMU2-RD4-C-4W, the line-to-line voltage rating is common for every two circuits. The line-to-line voltage rating is common between Circuit 1 and Circuit 2 and between Circuit 3 and Circuit 4.
Registration of measuring point	No measuring point can be registered.	No terminal is registered. Register at least one terminal.
	Even when the phase wire method is 1P2W, S-phase current can be selected. Is measurement (data collection) possible?	The measured items that can be actually measured differ with the phase wire method. (The measured items that cannot be measured due to the phase wire method are also displayed on the pull-down menu.) For the phase wire method and measured items, refer to the instruction manual of each terminal.
Deletion of measuring point	A measuring point cannot be deleted. The message "The measuring point is registered to a virtual measuring point, Specific consumption measuring point, equipment, or monitoring and notification settings. Delete the registered items before deleting the measuring point." appears.	A measuring point cannot be registered if it is already registered to a virtual measuring point, Specific consumption measuring point, equipment, or monitoring and notification settings. Delete the registered appropriate virtual measuring point, Specific consumption measuring point, equipment, or monitoring and notification settings.
	A measuring point that is occupied as a contact output cannot be deleted.	It cannot be deleted from the measuring point list screen. On the contact output setting list screen, delete the same number of settings as that of contact output points.

Item	Error details/problems	Check items
Change of measuring point	The terminal name, measured item, scale, the number of digits after the decimal point, device number, data length, or factor of a measuring point cannot be changed.	For a measuring point which is registered to a virtual measuring point, Specific consumption measuring point, equipment, or monitoring and notification settings, the terminal name, measured item, scale, the number of digits after the decimal point, device number, and data length cannot be changed. Delete the registered appropriate virtual measuring point, Specific consumption measuring point, equipment, or monitoring and notification settings.
Registration of group	No group can be registered.	No measuring point is registered. Register at least one measuring point.
	Can a virtual measuring point or a Specific consumption measuring point be registered to a group?	No virtual measuring point or Specific consumption measuring point can be registered to a group.
	Can the same measuring point be registered to different groups?	The same measuring point cannot be registered to multiple groups.
Deletion of group	If a group is deleted, will the registered measuring points be deleted as well?	Even when a group is deleted, the measuring points that are registered to the group will not be deleted. Register the measuring points to a group again.
Virtual measuring point registration	No measuring point can be registered. No measuring point is displayed on the screen for registering an operational expression.	No measuring point is registered of the same type as that of the integrated value or instantaneous value that is selected in the data type of the virtual measuring point. Register a measuring point of the same type.
	Can measuring points of an integrated value and an instantaneous value registered together?	They cannot be registered together to the same virtual measuring point.
	What kind of operational expressions cannot be set?	Settings where the operation results of the constants exceed 11 digits or where the number of characters in the operational expression exceeds 256 are not permitted. ☞ Refer to "4.6.1 Virtual measuring point registration".
Deletion of virtual measuring point	A virtual measuring point cannot be deleted. The message "The measuring point is registered to either a Specific consumption measuring point or equipment. Delete the registered items before deleting the virtual measuring point." appears.	A virtual measuring point cannot be registered if it is already registered to a Specific consumption measuring point or equipment. Delete the registered Specific consumption measuring point or equipment.
Specific consumption measuring point registration	No Specific consumption measuring point can be registered. No measuring point (virtual measuring point) can be specified for energy amount or production amount.	No measuring point (virtual measuring point) is registered for the integrated value. The measuring point (virtual measuring point) of an instantaneous value cannot be registered to a Specific consumption measuring point.
	Can a constant value such as area be specified for production amount?	Register a constant value for virtual measuring point to specify for production amount.
Deletion of Specific consumption measuring point	A Specific consumption measuring point cannot be deleted. The message "The measuring point is registered to a monitoring and notification settings. Delete the registered items before deleting the Specific consumption measuring point." appears.	A Specific consumption measuring point that is already registered to a monitoring and notification settings cannot be deleted. Delete the registered appropriate monitoring and notification settings.
Registration of equipment group	No equipment group can be registered.	No equipment is registered. Register at least one measuring point.
	Can the same equipment be registered to different groups?	The same equipment can be registered to multiple groups at the same time.
	What changes if the order of registration of equipment to an equipment group is changed?	The order of display will be the order of display of the list of equipment details on "Measurement graph display screen - Equipment on EcoWebServerIII.
Mail notification	When you paste to copy the subject line and destination, the right-click menu "Paste" can not be used.	Paste by shortcut-keys "Ctrl + V" is enabled.
	Each notification (Upper/lower limit monitoring, Operating status monitoring, Specific consumption target value monitoring, and Energy plan value monitoring) settings window does not open. (Edit button is not enabled.)	Must be set to "set" of [Monitoring] in the [measuring point] setting display.
Registration of upper/lower limit monitoring and notification settings	No upper/lower limit monitoring and notification settings can be registered.	No measuring point of the instantaneous value is registered. Upper/lower limit cannot be monitored for the measuring point of an integrated value. Register a measuring point of an instantaneous value, and setting to "set" of [Monitoring] in the [measuring point] setting display.

Item	Error details/problems	Check items
	Can upper/lower limit be monitored for a measuring point of power factor?	Upper/lower limit can be monitored for power factor because it is a measuring point of an instantaneous value.
	Can upper/lower limit monitoring and notification settings be registered for a virtual measuring point?	Upper/lower limit cannot be monitored for a virtual measuring point.
Registration of operation status monitoring and notification settings	No operation status monitor or notification can be registered.	No operation monitoring point is registered. Register an operation monitoring point (a measuring point of a digital input (input/output) unit) and setting to "set" of [Monitoring] in the [measuring point] setting display.
Registration of Specific consumption target value monitoring and notification settings	No Specific consumption target value monitor or notification can be registered.	No Specific consumption measuring point is registered. Register the specific consumption measuring point, and setting to "set" of [Monitoring] in the [Specific consumption measuring point] setting display.
Registration of energy planned value monitoring and notification settings	No energy plan value monitor or notification it can be registered.	No measuring point of an integrated value is registered. Register the measuring point of an integrated value, and setting to "set" of [Monitoring] in the [measuring point] setting display.
	Can an energy plan value be monitored for a virtual measuring point?	An energy plan value cannot be monitored for a virtual measuring point.
EcoWebServerIII error notification	After the time adjustment error occurs, re-set the SNTP server and came to be time adjustment, but does not recover from the error.	In order to recover from the auto time adjustment error, need to reset the EcoWebServerIII.
Contact output setting	Can an "Unregistered" monitoring item be selected or registered as a contact output condition?	It is possible. However, please note that an "Unregistered" item cannot establish a monitoring condition. After an "Unregistered" monitoring ID is registered as a contact output condition, the contact output condition will be updated when monitoring registration settings are made to that monitoring ID.
	Did the contact output setting, but contact is not output.	There is a possibility that the [monitoring notification register] has not been. Separately, contact output of the following is required monitoring notification registration (When mail notification is not required, register as no notification.) Upper/lower limit monitoring, Operating status monitoring, Specific consumption target value monitoring, and Energy plan value monitoring. ☞ (Refer to [4.10.8 Upper/lower limit monitoring notification registration], [4.10.9 Operating status monitoring notification registration], [4.10.10 Specific consumption target value monitoring notification registration], [4.10.11 Energy plan value notification registration])
	Contact output setting was changed and written to the project, but the contact remains ON (not OFF).	State of the contact ON is continued, when change the setting about the contact and write the project. Turned OFF the contact manually in the test adjustment function before the project is written. Reset the EcoWebServerIII or the remote I/O unit, when the project is changed and written in the state of contact ON.
IP address setting	"IP address illegal" appears when the EcoWebServerIII IP address setting is input.	Confirm that the client PC's IP address is not duplicated with the IP address set in CH2.
	After the IP address of EcoWebServerIII is changed, communication from a client PC is disabled.	Check the IP address and subnet mask setting of the client PC. (The network portion of the IP address must be the same as that of the main unit of EcoWebServerIII. The host address portion of the IP address must be different from that of the main unit of EcoWebServerIII.) ☞ Refer to "4.8.2 IP address settings".
	[Read Network information] button is not exist	Please update your setting software. Including to the setting software, EcoWebServer software should be updated too. More details refers to [4.8.6 Main program Version update]

Item	Error details/problems	Check items
Connection check	"Not supported" appears when the EMU-B7P4-6-A is connected and the connection is checked.	The EMU-B7P4-6-A input type may be set to "Contact input". Change the setting to "Sensor input" or "Pulse input" on the EMU-B7P4-6-A side.
	Checking the connection of the MODBUS terminal displays "Communication error" and "Connection error."	<ul style="list-style-type: none"> Check that the terminal is powered and check for proper connection between the terminal and EcoWebServerIII Check if the settings of the IP address and the slave address of the terminal are correct.
	Checking the connection of the MODBUS terminal displays "Timeout error."	Check for proper connection between the terminal and EcoWebServerIII.
	When EMU4-CNT-MB is connected and the connection is checked, "OK" is displayed for EMU4-CNT-MB, and error is displayed for the connected extension unit.	Terminal processing is in progress between EMU4-CNT-MB and the extension unit. Please check the connection again after a while.
Connection check, write, readout, and confirm of project, various maintenance	A connection error is displayed.	Check the following points: <ul style="list-style-type: none"> The IP address of EcoWebServerIII may be incorrect. The network may not be connected or configured properly. The version of setting software does not match that of the program itself.
Time setting	Time goes back to default.	The EcoWebServerIII battery is spent. Please exchange the battery.(model Q6BAT)
Installation	The message "This OS is not supported" appears when installing the setting software and the installation is not completed.	The English version setting software can be installed only in the English version OS. If a tool such as Microsoft AppLocale Utility, which changes the language judgment operation, is installed, the problem on the left might occur. Uninstall the tool in this case.
Project saving	The created project cannot be saved.	Check Whether '.NET Framework 3.5' is enabled.
Setting change Write to project	The setting was changed and written to the project, but the display was not updated.	After changing the setting, close the browser once and reset.
Demand setting	The demand setting was changed and written to the project, but the display was not updated.	The setting is not applied until the current demand time limit ends.
Test and adjustment Mail transfer confirmation	Mail was not sent.	<ul style="list-style-type: none"> Check that the SMTP server name is correct, and the LAN is correctly connected between the SMTP server and EcoWebServerIII. Check that the send source address is registered in the SMTP server. Check that the send source address is correct, and that it can be sent from the SMTP server. When using a SMTP server that requires authorization when sending, such as SMPT-Auth or POPbeforeSMTP, check that the settings are correct.
Test and adjustment File automatic transfer confirmation test	The file is not transferred.	<ul style="list-style-type: none"> Check that the FTP server name is correct, and that the LAN is correctly connected between the FTP server and EcoWebServerIII. Check that the user name and password for logging into the FTP server are correct. Check that the transfer destination folder path is correct, and that writing is possible with the user name set in the EcoWebServerIII.
Test/Adjustment Data collection	Failed to collect ****. (**** is the file name)	FTP communication is in passive mode. Make sure that communication is not blocked by a firewall or antivirus software.
Energy-saving coordination setting	Coordination with external devices is not possible. (The external device operation does not change even when the demand value is large.)	<ul style="list-style-type: none"> Check that the connection destination and external device address are correct, and that the LAN is correctly connected between the external device and EcoWebServerIII. Confirm that the energy saving monitoring setting (alarm value 1 to 4) is correctly set. Check that the demand settings (VCT ratio, pulse constant, alarm type, fixed alarm value, etc.) are correct. Check that the energy-saving operation on the external device side is correctly set.

Item	Error details/problems	Check items
Upgrading the main unit software	Reading the version of the main unit software displays a message "This product is not supported by this setting software. Process is aborted" and the version cannot be read.	Check if your setting software supports the model of EcoWebServerIII to be upgraded.
	Trying to upgrade the software displays a message "Writing in the product main unit cannot be executed. Try again between 05 and 45 minutes past the hour"	<ul style="list-style-type: none"> • Upgrading cannot be executed if the time of the clock of the EcoWebServerIII is between 45 to 05 minutes past the hour. • Check if the time of the clock of the EcoWebServerIII is between 05 and 45 minutes.

Mitsubishi Energy Saving Data Collecting Server EcoWebServerIII

Please refer to our website for service network.

Our website address: <https://www.mitsubishielectric.com/fa/>

mitsubishi electric corporation
HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN