



Side A JAPANESE
Side B ENGLISH
Side C CHINESE

MELSEC iQ-F FX5-16ET/EO-H

Hardware Manual



Manual Number	JY997D64401
Revision	C
Date	April 2018

This manual describes the part names, dimensions, and specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions. And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

Registration:
The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective April 2018
Specifications are subject to change without notice.
© 2016 MITSUBISHI ELECTRIC CORPORATION

Safety Precautions (Read these precautions before use.)

This manual classifies the safety precautions into two categories:

WARNING and **CAUTION**

WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Depending on the circumstances, procedures indicated by **CAUTION** may also cause severe injury. It is important to follow all precautions for personal safety.

Associated Manuals

Manual name	Manual No.	Description
MELSEC iQ-F FX5U User's Manual (Hardware)	JY997D55301	Explains FX5U CPU module specification details for I/O, wiring, installation, and maintenance.
MELSEC iQ-F FX5UC User's Manual (Hardware)	JY997D61401	Explains FX5UC CPU module specification details for I/O, wiring, installation, and maintenance.
MELSEC iQ-F FX5 User's Manual (Application)	JY997D55401	Explains basic knowledge required for program design, functions of the CPU module, devices/labels, and parameters.
MELSEC iQ-F FX5 User's Manual (Positioning Control - CPU module built-in, High-speed pulse input/output module)	JY997D56301	Describes the positioning function of the CPU module built-in and the high-speed pulse input/output module.

How to obtain manuals
For the necessary product manuals or documents, consult with your local Mitsubishi Electric representative.

Applicable standards

FX5-16ET/ES-H, FX5-16ET/ESS-H comply with the EC Directive (EMC Directive) and UL standards (UL, cUL). Further information can be found in the following manual.

→ MELSEC iQ-F FX5U User's Manual (Hardware)
→ MELSEC iQ-F FX5UC User's Manual (Hardware)

Regarding the standards that relate to the CPU module, please refer to either the product catalog or consult with your nearest Mitsubishi product provider.

Attention

This product is designed for use in industrial applications.

1. Outline

FX5-16ET/EO-H high-speed pulse input/output module (hereinafter called high-speed pulse input/output module) connects to the FX5 CPU module to expand the high-speed input/output function. High-speed input/output module can be used as general input/output.

For details including installation, wiring, and system configuration, refer to the following manuals.

→ MELSEC iQ-F FX5U User's Manual (Hardware)
→ MELSEC iQ-F FX5UC User's Manual (Hardware)

1.1 Incorporated Items


Model	Included Items	
FX5-16ET/ES-H FX5-16ET/ESS-H	Product	1 module
	Dust proof protection sheet	1 sheet
	Hardware manual (This manual)	1 manual

1.2 Function

1) High-speed counter function, pulse width measurement function, input interrupt function, PWM output function
For function details, parameter settings, and program examples, refer to the following manual.
→ MELSEC iQ-F FX5 User's Manual (Application)


2) Positioning function
For function details, wiring example, parameter settings, and program examples, refer to the following manual.
→ MELSEC iQ-F FX5 User's Manual (Positioning Control - CPU module built-in, High-speed pulse input/output module)

1.3 External Dimensions and Part Names

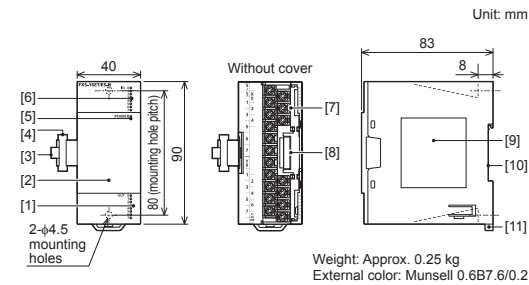

- [1] Output display LED (green)
- [2] Top cover
- [3] Pullout tab
- [4] Extension cable
- [5] POWER LED (green)
- [6] Input display LED (green)
- [7] Terminal block (M3 screw)
- [8] Extension connector
- [9] Name plate
- [10] DIN rail mounting groove (DIN rail: DIN46277, 35 mm wide)
- [11] DIN rail mounting hooks

1.4 Terminal Layout

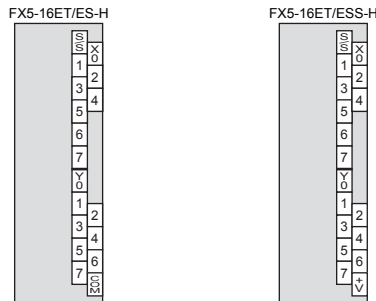

2. Specifications

STARTUP AND MAINTENANCE PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions. For repair, contact your local Mitsubishi Electric representative. Do not drop the product or exert strong impact to it. Doing so may cause damage. 	

DISPOSAL PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device. 	

TRANSPORTATION PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> The product is a precision instrument. During transportation, avoid impacts larger than those specified in the general specifications by using dedicated packaging boxes and shock-absorbing pallets. Failure to do so may cause failures in the product. After transportation, verify operation of the product and check for damage of the mounting part, etc. 	

2.1 Applicable CPU module

Model name	Applicability
FX5U CPU module	Ver. 1.030 or later
FX5UC CPU module*1	Ver. 1.030 or later

*1 FX5-CNV-IFC or FX5-C1PS-5V is necessary to connect FX5-16ET/EO-H with the FX5UC CPU module.

2.2 General Specifications

The general specifications are same with the CPU module specifications to be connected.
For general specifications, refer to the following manuals.
→ MELSEC iQ-F FX5U User's Manual (Hardware)
→ MELSEC iQ-F FX5UC User's Manual (Hardware)

2.3 Power Supply Specification

Item	Specification
Rated voltage	5 V DC (internal power) 24 V DC (24 V DC service power supply or external power supply)
Current consumption	100 mA/5 V DC 125 mA/24 V DC (The current of the input circuit is included.)

2.4 Input Specification

Item	Specification
No. of input points	8 points
Connection type	Terminal block (M3 screw)
Input type	Sink/source
Input signal voltage	24 V DC +20%, -15%
Input signal current	5.3 mA/24 V DC
Input impedance	4.3 kΩ
ON input sensitivity current	3.5 mA or more
OFF input sensitivity current	1.5 mA or less

Input response frequency	X0 to X0+5*1	200 kHz
	X0+6, X0+7*1	10 kHz

Pulse waveform	Waveform	Timing diagram	
		T1 (pulse width)	T2 (rise/fall time)
	X0 to X0+5*1	2.5 μs or more	1.25 μs or less
X0+6, X0+7*1	50 μs or more	25 μs or less	

Item	Specification	
Input response time (H/W filter delay)	X0 to X0+5*1	ON: 2.5 μs or less OFF: 2.5 μs or less
	X0+6, X0+7*1	ON: 30 μs or less OFF: 50 μs or less
Input response time (Digital filter setting value)	None, 10 μs, 50 μs, 0.1 ms, 0.2 ms, 0.4 ms, 0.6 ms, 1 ms, 5 ms, 10 ms (initial values), 20 ms, 70 ms When using this product in an environment with much noise, set the digital filter.	
Input signal format	No-voltage contact input Sink: NPN open collector transistor Source: PNP open collector transistor	
Input circuit insulation	Photo-coupler insulation	
Indication of input operation	LED is lit when input is on	

*1 □: Head input number of each high-speed pulse input/output module.

2.5 Output Specification

Item	Specification	
No. of output points	8 points	
Connection type	Terminal block (M3 screw)	
Output type	FX5-16ET/ES-H	Transistor/sink output
	FX5-16ET/ESS-H	Transistor/source output
Maximum frequency	200 kpps	
External power supply	5 to 30 V DC	
Max. load	1.6 A/8 points common	
Open circuit leakage current	0.1 mA or less/30 V DC	
Voltage drop when ON	Y0, Y0+1, Y0+4, Y0+5*1	1.0 V or less
	Y0+2, Y0+3, Y0+6, Y0+7*1	1.5 V or less
Response time	Y0, Y0+1, Y0+4, Y0+5*1	2.5 μs or less/10 mA or more (5 to 24 V DC)
	Y0+2, Y0+3, Y0+6, Y0+7*1	0.2 ms or less/200 mA or more (24 V DC)
Output circuit insulation	Photo-coupler insulation	
Indication of output operation	LED is lit when output is on	

*1 □: Head output number of each high-speed pulse input/output module.

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty

Exclusion of loss in opportunity and secondary loss from warranty liability
Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:
(1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
(2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
(3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
(4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

⚠ For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.