



Programmable Controller FX3UC-32MT-LT-2 PROGRAMMABLE CONTROLLERS HARDWARE MANUAL

Manual Number	JY997D31601
Revision	L
Date	May 2024

This manual describes the part names, dimensions, mounting, cabling and specifications for the product. This manual is extracted from FX3UC Series User's Manual - Hardware Edition. Refer to FX3UC Series User's Manual - Hardware Edition details. Before use, read this manual and manuals of relevant products fully to acquire proficiency in the handling and operating the product. Make sure to learn all the product information, safety information, and precautions. Store this manual in a safe place so that it can be taken out and read whenever necessary. Always forward it to the end user.

Registration
The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective May 2024
Specifications are subject to change without notice.
© 2008 Mitsubishi Electric Corporation

Safety Precautions (Read these precautions before use.)

If this product is used in a manner not specified by Mitsubishi Electric, the protection provided by the product may be impaired. This manual classifies the safety precautions into two categories:

WARNING and **CAUTION**.

WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on the circumstances, procedures indicated by **CAUTION** may also cause severe injury.

STARTUP AND MAINTENANCE PRECAUTIONS **WARNING**

- Do not touch any terminal while the PLC's power is on. Doing so may cause electric shock or malfunctions.
- Before cleaning or reightening terminals, cut off all phases of the power supply externally.
- Failure to do so may cause electric shock.

STARTUP AND MAINTENANCE PRECAUTIONS **WARNING**

- Before modifying or disrupting the program in operation or running the PLC, carefully read through this manual and the associated manuals and ensure the safety of the operation.
- An operation error may damage the machinery or cause accidents.
- Use the battery for memory backup correctly in FX3UC Series User's Manual - Hardware Edition.
- Use the battery only for the specified purpose.
- Connect the battery correctly.
- Do not charge, disassemble, heat, put in fire, short-circuit, connect reversely, weld, swallow or burn the battery, or apply excessive forces (vibration, impact, drop, etc.) to the battery.
- Do not store or use the battery at high temperatures or expose to direct sunlight.
- Do not expose to water, bring near fire or touch liquid leakage or other contents directly.
- Incorrect handling of the battery may cause heat excessive generation, bursting, ignition, liquid leakage or deformation, and lead to injury, fire or failures and malfunctions of facilities and other equipment.

STARTUP AND MAINTENANCE PRECAUTIONS **CAUTION**

- Turn off the power to the PLC before attaching or detaching the memory cassette. If the memory cassette is attached or detached while the PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.
- Do not disassemble or modify the PLC.
- Doing so may cause fire, equipment failures, or malfunctions. For repair, contact your local Mitsubishi Electric representative.
- Turn off the power to the PLC before connecting or disconnecting any extension cable.
- Failure to do so may cause equipment failures or malfunctions.
- Turn off the power to the PLC before attaching or detaching the following devices.
- Failure to do so may cause equipment failures or malfunctions.
- Peripheral devices, display module, expansion boards.
- Extension units/blocks, connector conversion adapter, extension power supply units, special adapters, and FX Series terminal blocks.
- Battery and memory cassettes

DISPOSAL PRECAUTIONS **CAUTION**

- Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device. When disposing of batteries, separate them from other waste according to local regulations.

TRANSPORTATION AND STORAGE PRECAUTIONS **CAUTION**

- Before transporting the PLC, turn on the power to the PLC to check that the BAT LED is off, and check the battery life. If the PLC is transported with the BAT LED on or the battery exhausted, the battery-backed data may be unstable during transportation.
- The PLC is a precision instrument. During transportation, avoid impacts larger than those specified in Section 2.1 by using dedicated packaging boxes and shock-absorbing palletes. Failure to do so may cause failures in the PLC.
- After transportation, verify operation of the PLC and check for damage of the mounting part, etc.
- When transporting lithium batteries, follow required transportation regulations. (For details of the regulated products, refer to FX3UC Series User's Manual - Hardware Edition.)

Certification of UL, cUL standards

The FX3U(C) series and FX2NC/FX2N series input/output extension blocks supporting UL, cUL standards are as follows:
(For other products that correspond with the UL, cUL standards please refer to the FX3UC Series User's Manual - Hardware Edition or catalog.)

UL, cUL file number: E92538

Models : MELSEC FX3U(C) series manufactured

FX3UC-32MT-LT-2 ^{*1}	FX3U-485ADP(-MB)
FX3UC-232ADP(-MB)	FX3U-ENET-ADP
FX3UC-CF-ADP	FX3U-4DA-ADP
FX3UC-3A-ADP	FX3U-4AD-PT-ADP
FX3UC-4AD-PTW-ADP	FX3UC-4AD-PNK-ADP
FX3UC-4AD-TC-ADP	
FX3UC-1PS-5V	

- To make the module comply with UL, cUL standards, use an external power supply that meets SELV (Safety Extra Low Voltage) and either of LIM (Limited Energy Circuit) or UL 1310 Class 2.

Models : MELSEC FX2NC series manufactured

FX2NC-16EX	FX2NC-32EX
FX2NC-16EY	FX2NC-32EY
FX2NC-16EX-T	FX2NC-16EYR-T

Models : MELSEC FX2N series manufactured

FX2N-8EYR-S-ES/UL	FX2N-8EX-UA1/UL
FX2N-16EYS	

Compliance with EU Directive(CE Marking)

This document does not guarantee that a mechanical system including this product will comply with the following standards.
Compliance to EMC directive and LVD directive of the entire mechanical system should be checked by the user / manufacturer. For more details please contact the local Mitsubishi Electric sales site.
(For other products that correspond with the EC directive please refer to the FX3UC Series User's Manual - Hardware Edition or catalog.)

Requirement for Compliance with EMC directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Electromagnetic Compatibility (2014/30/EU) when used as directed by the appropriate documentation.

Attention

This product is designed for use in industrial applications.

Type : Programmable Controller (Open Type Equipment) Models : MELSEC FX3U(C) series and FX2NC series manufactured

from May 1st, 2005	FX3U-FLROM-16	FX3U-FLROM-64L
from June 1st, 2005	FX3U-232ADP	FX3U-485ADP
	FX3U-4AD-ADP	FX3U-4DA-ADP
	FX3U-4AD-PT-ADP	FX3U-4AD-TC-ADP
	FX3U-232-BD	FX3U-422-BD
	FX3U-485-BD	FX3U-CNV-BD
	FX3U-USB-BD	
	FX3U-FLROM-64	
	FX3U-232ADP-MB	FX3U-485ADP-MB
	FX3UC-1PS-5V	

FX2NC- [*] EX	FX2NC- [*] EYT
Where [*] indicates:16,32	FX2NC-16EX-T

from April 1st, 2007	FX3U-4AD-PTW-ADP	FX3U-CF-ADP
from October 1st, 2007	FX3U-4AD-PNK-ADP	

from December 1st, 2007	FX3UC-32MT-LT-2 [*]	
	FX3U-3A-ADP	FX3U-CF-ADP

from June 1st, 2008	FX3U-8AV-BD	
from September 1st, 2010	FX3U-FLROM-1M	
from May 1st, 2011	FX3U-ENET-ADP	
from February 1st, 2012	FX3U-ENET-ADP	

- For the FX3UC-32MT-LT-2, those manufactured before July 31st, 2010 are compliant with EN61131-2:2003, those after August 1st, 2010 are compliant with EN61131-2:2007

Standard	Remark
EN61131-2:2007 Programmable controllers - Equipment requirements and tests	Compliance with all relevant aspects of the standard. EMI • Radiated Emission • Conducted Emission EMS • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • High-energy surge • Voltage drops and interruptions • Conducted RF • Power frequency magnetic field

Models : MELSEC FX2NC series manufactured

from October 1st, 2007	FX2NC- [*] EX	FX2NC- [*] EYT
	FX2NC-16EX-T	FX2NC-16EYR-T

Standard	Remark
EN61000-6-4:2007 Generic emission standard Industrial environment EN50081-2:1993 Electromagnetic compatibility	Compliance with all relevant aspects of the standard. • Emission-Enclosure port • Emission-Low voltage AC mains port • Emission-Telecommunications/ network port

Requirement for Compliance with EMC directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Electromagnetic Compatibility (2014/30/EU) when used as directed by the appropriate documentation.

EN61000-6-2:2005 Generic immunity standard Industrial environment	Compliance with all relevant aspects of the standard. • Radio-frequency electromagnetic field. Amplitude modulated • Fast transients • Electrostatic discharge • Surges • Voltage dips • Voltage interruptions • Radio-frequency common mode • Power-frequency magnetic field
--	--

Models : MELSEC FX2N series manufactured from September 1st, 2010 FX2N-8EYR-S-ES/UL

Standard	Remark
EN61131-2:2007 Programmable controllers - Equipment requirements and tests	Compliance with all relevant aspects of the standard. EMI • Radiated Emission • Conducted Emission EMS • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • High-energy surge • Voltage drops and interruptions • Conducted RF • Power frequency magnetic field

Requirement for Compliance with LVD directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Low Voltage (2014/35/EU) when used as directed by the appropriate documentation.

Type : Programmable Controller (Open Type Equipment) Models : MELSEC FX2NC series manufactured from October 1st, 2007 FX2NC-16EYR-T

Standard	Remark
IEC1010-1:1990 [A1:1992] BSEN1010-1:1993 [*] Safety requirements for electrical equipment for measurement, control, and laboratory use - General requirements	The equipment has been assessed as a component for fitting in a suitable enclosure which meets the requirements of IEC 1010-1:1990+A1:1992

^{*}Compliance to BSEN61010-1 is claimed through virtue of direct compliance to IEC1010-1 and Amendment 1.

Models : MELSEC FX2N series manufactured from September 1st, 2010 FX2N-8EYR-S-ES/UL

Standard	Remark
EN61131-2:2007 Programmable controllers - Equipment requirements and tests	The equipment has been assessed as a component for fitting in a suitable enclosure which meets the requirements of EN61131-2:2007

Caution for compliance with EU Directive

Installation in Enclosure

2.1 Generic specifications [Main unit]

Item	Specification			
Ambient temperature	0 to 55°C (32 to 131°F) when operating and -25 to temperature 75°C (-13 to 167°F) when stored			
Ambient humidity	5 to 95%RH (no condensation) when operating			
Vibration ^{*1} resistance	When installed on DIN rail	Fre-quency (Hz) 10 to 57 57 to 150	Acceler-ation (m/s ²) - 4.9	Half ampli-tude (mm) 0.035 80 min. in each direction
Shock ^{*1} resistance	147m/s ² Acceleration, Action time: 11ms, 3 times by half-sine pulse in each direction X, Y, and Z			
Noise resistance	By noise simulator at noise voltage of 1,000Vp-p, noise width of 1μs, rise time of 1ns and period of 30 to 100Hz			
Dielectric withstand voltage	500V AC for one minute			
Insulation resistance	5 MΩ or higher by 500 V DC insulation resistance tester			
Grounding	Class D grounding (grounding resistance: 100Ω or less) [*] Common grounding with a heavy electrical system is not allowed. ^{>2}			
Working atmosphere	Free from corrosive or flammable gas and excessive conductive dusts			
Working altitude	<2000m ³			

^{*1} The criterion is shown in IEC61131-2.


^{*2} For common grounding, refer to section 3.1.3.

^{*3} The PLC cannot be used at a pressure higher than the atmospheric pressure to avoid damage.

2.2 Installation location

Install the PLC in an environment conforming to the generic specifications (section 2.1), installation precautions and notes. For more details, refer to FX3UC Series User's Manual - Hardware Edition.

Installation location in enclosure

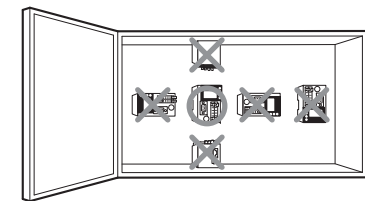


Notes

- When a dust proof sheet is supplied with an extension unit/ block, keep the sheet applied to the ventilation slits during installation and wiring work.
- To prevent temperature rise, do not install the PLC on a floor, a ceiling or a vertical surface.
- Install it horizontally on a wall as shown in section 2.2.
- Keep a space of 50mm (1.97") or more between the unit main body and another device or structure (section 2.2 part A). Install the unit as far away as possible from high-voltage lines, high-voltage devices and power equipment.

1. Outline

1.1 Part names

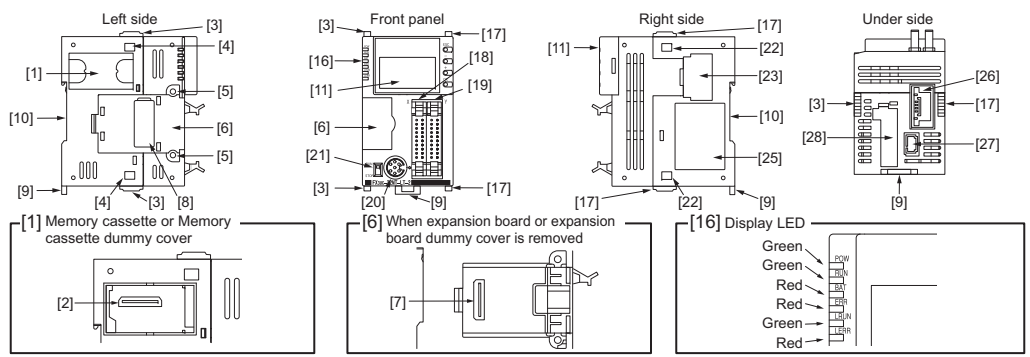

No.	Name
[1]	Memory cassette dummy cover
[2]	Memory cassette connecting connector
[3]	Special adapter connecting hooks
[4]	Special adapter connecting holes
[5]	Expansion board fixing holes
[6]	Expansion board dummy cover
[7]	Expansion board connecting connector
[8]	Special adapter connector cover
[9]	Connectors are not provided when expansion board is not used.
[10]	DIN rail mounting hooks
[11]	DIN rail mounting groove [DIN rail:DIN46277(35mm(1.38")wide)]
[12]	Display Module
[13]	"ESC" button
[14]	"*" button
[15]	"OK" button


No.	Name
[16]	POW LED On while power to the PLC is on.
[17]	RUN LED On while the PLC is running.
[18]	BAT LED Lights when the battery voltage drops.
[19]	ERR LED Flashing when a program error occurs.
[20]	L RUN LED On while data link being executed (CC-link/LT built-in master).
[21]	L ERR LED On while data link being error (CC-link/LT built-in master).
[22]	FX3UC, FX2NC Extension block connecting holes
[23]	Input connector
[24]	Output connector
[25]	Peripheral device connector (RS-422)
[26]	RUN/STOP switch
[27]	FX3UC, FX2NC Extension block connecting holes
[28]	FX3UC, FX2NC Extension block connector cover
[29]	FX3UC, FX2NC Extension block connector
[30]	Nameplate ¹
[31]	CC-Link/LT interface connector
[32]	Power connector for main unit
[33]	Battery cover, FX3UC-32BL type battery (supplied)

^{*1} The **△** mark indicates the following:


- Refer to the FX3UC SERIES USER'S MANUAL - Hardware Edition for more detailed product information. Download the manual from the following URL:
www.mitsubishielectric.com/fa/ref/ref.html?kisyu=plc&manua=manual_gi
- When replacing a battery, use the battery specified in the FX3UC SERIES USER'S MANUAL - Hardware Edition (Section 11.5).

1.2 External dimensions/weight


Main unit

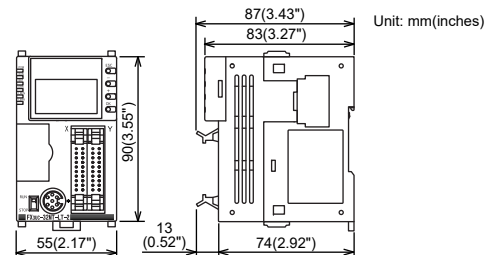

FX2NC input/output extension blocks (Connector type)

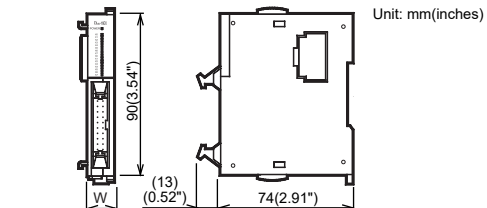

FX2NC input/output extension blocks (Terminal block type)

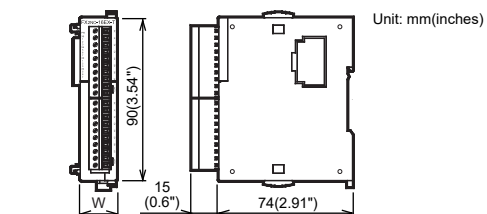







Type	Model name	W:mm (inches)	MASS (Weight): kg (lbs)
Main unit	FX3UC-32MT-LT-2	55.0 (2.17)	Approx. 0.25 (0.55)
	FX2NC-16EX	14.6 (0.57)	Approx. 0.15 (0.33)
Input/output extension blocks (Connector type)	FX2NC-32EX	26.2 (1.03)	Approx. 0.20 (0.44)
	FX2NC-16EYT	14.6 (0.57)	Approx. 0.15 (0.33)
	FX2NC-32EYT	26.2 (1.03)	Approx. 0.20 (0.44)
Input/output extension blocks (Terminal block type)	FX2NC-16EX-T	20.2 (0.57)	Approx. 0.15 (0.33)
	FX2NC-16EYR-T	24.2 (0.95)	Approx. 0.20 (0.44)

1.3 Difference with FX3uc-32MT-LT

The FX3UC-32MT-LT-2 differs from the FX3UC-32MT-LT regarding the following point.

2.3 Procedures for installing to and detaching from DIN rail

The main unit can be installed on a DIN46277 rail [35mm (1.38") wide]. (It cannot be installed directly with screws.)



2.3.1 Installing methods

- Turn the power supply OFF.
- Push the DIN rail mounting hooks (①) of all connected units/blocks as shown in the figure on the right ②.
- Turn the power supply OFF.
- Gently place the tip of a flat head screwdriver to the Display module fixing holes (fig. ①).
- Tilt the flat head screwdriver at the two Display module fixing hooks to lift the display module from the main unit by about 1 mm (0.04") (right fig. ②). Carefully perform the above trying not to bend or break the Display module fixing hooks.



Manual name	Manual No.	Description
FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition	JY997D16701 MODEL CODE: 09R619	Describes specifications for analog control and programming methods for the FX3S/FX3G/FX3GC/FX3U/FX3UC Series PLC.
FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Positioning Control Edition	JY997D16801 MODEL CODE: 09R620	Explains the positioning control specifications of the FX3S/FX3G/FX3GC/FX3U/FX3UC Series and programming procedures

For the necessary product manuals or documents, consult your local Mitsubishi Electric representative. Or, access the following URL and download the data.
www.mitsubishielectric.com/fa/ref/ref.html?kisyu=plc&manua=manual_gi

Incorporated Items

Verify that the following product and items are included in the package.

		Included Items
Main units		
FX3UC-32MT-LT-2	Product	1 unit
	FX2NC-100MPCB [1m (3' 3"), three wire]	1 cable
	FX2NC-100BPCB [1m (3' 3"), two wire]	1 cable
	Manuals [Japanese version, English version]	1 manual each
Input / output extension blocks		
FX2NC-□□□EX FX2NC-16EX-T	Product	1 unit
	FX2NC-10BPCB1 [0.1m (3.93"), double-ended]	1 cable
FX2NC-□□□EY FX2NC-16EYR-T	Product	1 unit


Power Cable types "A" and "B" are supplied with the main unit, while type "C" is supplied with the FX2NC-□□EX(-T) and FX2NC/FX3UC Series special function blocks.

Type	Application	Model	Length	Cable supplied with
A	Power cable for main unit	FX2NC-100MPCB	1m (3' 3")	Main unit
B	Input power cable for the FX2NC-□□EX(-T) and FX2NC/FX3UC series special function blocks	FX2NC-100BPCB	1m (3' 3")	
C	Input power crossover cable for the FX2NC-□□EX(-T) and FX2NC/FX3UC series special function blocks	FX2NC-10BPCB1	0.1m (3.93")	

The crossover cable (type "C") can skip up to 4 16-point output blocks to connect units.
If more blocks should be skipped to supply power to an extension block, use cable type "B".

2.6 Connection to input/output connector

The input/output connectors of the Main units conform to MIL-C-83503. Refer to Chapter 4 for the I/O connector pin arrangement.
(For CC-Link/LT interface connector, refer to FX3UC Series User's Manual - Hardware Edition.)

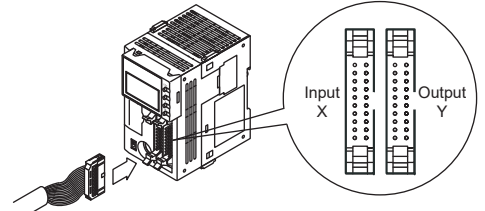

- Compliant connectors (commercially available connectors)**
Use a 20-pin (1-key) socket connector conforming to MIL-C-83503.
Confirm in advance that the connectors do not interfere with other parts including connector covers.

- Input/output cables (available from Mitsubishi)**

Input/output cables with attached connectors are available.

Model names	Length	Description	Shape
FX-16E-500CAB-S	5m (16'4")	General-purpose input/output cable	<ul style="list-style-type: none"> Single wire (Wire color: red) PLC side: A 20-pin connector
FX-16E-150CAB	1.5m (4'11")		
FX-16E-300CAB	3m (9'10")	Cables for connecting the FX Series terminal block with input/output connectors.	<ul style="list-style-type: none"> Flat cables (with tube) A 20-pin connector at both ends
FX-16E-500CAB	5m (16'4")	For terminal block connection, refer to FX3UC Series User's Manual - Hardware Edition.	
FX-16E-150CAB-R	1.5m (4'11")		<ul style="list-style-type: none"> Round multicore cables A 20-pin connector at both ends
FX-16E-300CAB-R	3m (9'10")		
FX-16E-500CAB-R	5m (16'4")		

3.3.2 Handling of transistor output circuit

Output terminal:


The main unit and FX2NC input/output extension block have 16 transistor output points per common.
Two COM* terminals connected to each other inside the PLC are provided for outputs.
Connect two COM* terminals outside the PLC so that the load applied to each COM* terminal is smaller.
Where * indicates: 1 or 2

Output current

The ON voltage of the output transistor is approx. 1.5V. When driving a semiconductor element, carefully check the input voltage characteristics of the applied element.


3.3.3 Example of transistor output wiring

1. Examples of sink output wiring

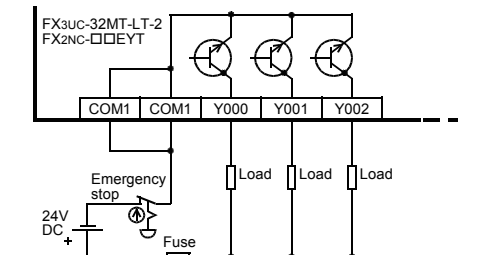

3.3.4 Relay output specifications

Item	Output specification (Relay)
Number of output points	FX2NC-16EYR-T 16 points
Output connecting type	Terminal block
External power supply	30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards)
Max. load	<p>Resistance load 2A/point</p> <p>When using one COM□ terminal, make sure that the total load current of 8 resistance load points is 4A or less.</p> <p>When connecting two COM□ terminals outside the PLC, make sure that the total load current of 8 resistance load points is 8A or less.</p> <p>Inductive load 80VA</p> <p>For the product life of relay contacts, refer to the FX3UC Series User's Manual - Hardware Edition.</p>
Open circuit leakage current	-
Minimum load	5V DC, 2mA (reference value)
Response time	OFF→ON Approx. 10ms ON→OFF Approx. 10ms

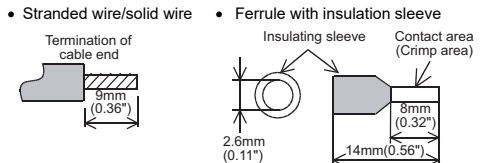

When using a ferrule with insulation sleeve, choose a wire with proper cable sheath referring to the above outside dimensions, otherwise the wire cannot be inserted easily.

2.7.2 Tightening Torque

Tighten the terminals to a torque of 0.22 to 0.25N·m.
Do not tighten terminal screws with a torque outside the above-mentioned range.
Failure to do so may cause equipment failures or malfunctions.

Tool

To tighten terminals, use a purchased small-sized screwdriver whose head is straight and is not figured as shown in the right figure.

Note:

If the diameter of screwdriver grip is too small, tightening torque will not be able to be achieved. To achieve the appropriate tightening torque shown in the table above, use the following screwdriver or an appropriate replacement (grip diameter approximately 25mm (0.98")).

<Reference>

Manufacturer	Model
Phoenix Contact	SZS 0.4×2.5

3. Power supply/input/output specifications and examples of external wiring

For details of power supply and I/O wiring, or CC-Link/LT wiring, refer to the FX3UC Series User's Manual - Hardware Edition.

DESIGN PRECAUTIONS WARNING

- Make sure to have the following safety circuits outside of the PLC to ensure safe system operation even during external power supply problems or PLC failure. Otherwise, malfunctions may cause serious accidents.
 - Most importantly, have the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - Note that when the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - Note that when an error occurs in a relay, triac or transistor output device, the error could be held either on or off. For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.


Item	Output specification (Relay)
Circuit insulation	Mechanical insulation
Display of output operation	LED on panel lights when power is applied to relay coil.

3.3.5 Handling of relay output circuit

Output terminal:

The FX2NC-16EYR-T has 8 relay output points per common.
Two COM* terminals connected to each other inside the PLC are provided for outputs.
Connect two COM* terminals outside the PLC so that the load applied to each COM* terminal is smaller.
Where * indicates: 1 or 2

3.3.6 Example of relay output wiring

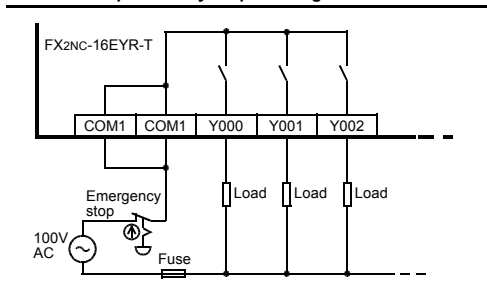

3.4 Cautions on input/output wiring

Notes
<ul style="list-style-type: none"> The derating curve below shows the simultaneous ON ratio of available PLC inputs or outputs with respect to the ambient temperature. Use the PLC within the simultaneous input or output ON ratio range shown in the figure. The simultaneous ON ratio indicates the ratio at which the inputs and outputs of each model can be turned on simultaneously. When the FX3UC-32MT-LT-2 is used with the simultaneous ON ratio of 60%, 60% or less of the 16 input points (9 points) and the 16 output points (9 points) each can be turned on simultaneously. <p>Derating curve</p> <p>*1 To make the module comply with UL, cUL standards, use extension devices with the simultaneous ON ratio of 60% or less.</p>

3.1 Power supply specifications and example of external wiring

For more details, refer to FX3UC Series User's Manual - Hardware Edition.

3.1.1 Power supply specifications

The specifications for the power supply of the main unit are shown in the following table.

Item	Specification
Supply voltage	24V DC +20% -15%*1 Ripple Voltage (p-p)5% or less
Allowable instantaneous power failure time	Operation can be continued upon occurrence of an instantaneous power failure for 5ms or less.
Power fuse	CPU, I/O operations power supply circuit 125V 3.15A CC-Link/LT built-in power supply circuit 125V 0.8A
Rush current	30A max. 0.5ms/24V DC
Power consumption*2	9W
5V DC built-in power supply*3	5V DC, 350mA
Built-in power supply for CC-Link/LT networks	24V DC, 350mA

- *1 When the built-in CC-Link/LT master function is used, refer to the FX3UC Series User's Manual - Hardware Edition.

- *2 Input/output extension blocks, special function units/blocks and CC-Link/LT network are not contained in power consumption. For power consumption of the FX2NC input/output extension blocks, refer to the following table. Refer to the FX3UC Series User's Manual - Hardware Edition. For the power consumed by the special function units/blocks, refer to the appropriate manuals. The power consumption of the entire system is 41W when the system is configured with the maximum load.

Model names	Power consumption
FX2NC-16EX-T	2.2W
FX2NC-16EX	2.2W
FX2NC-32EX	4.2W
FX2NC-16EYR-T	2.2W
FX2NC-16EYT	0.35W
FX2NC-32EYT	0.7W

- *3 Cannot be used to supply power to an external destination. This power is supplied to input/output extension blocks, special extension blocks, special adapters and expansion boards only.

DESIGN PRECAUTIONS WARNING

- Note that when an error occurs in a remote I/O unit, the output could be held either on or off.
For output signals that may lead to serious accidents, external circuits for monitoring should be provided.

DESIGN PRECAUTIONS CAUTION

- Do not bundle the control line and CC-Link/LT connection cables together with or lay them close to the main circuit or power line. As a guideline, lay the control line and CC-Link/LT connection cables at least 100 mm (3.94") or more away from the main circuit or power line. Noise may cause malfunctions.
- Install the product so that excessive force will not be applied to peripheral device connectors, power connectors, input/output connectors, CC-Link/LT interface connectors or CC-Link/LT connection cables. Failure to do so may result in wire damage/breakage or PLC failure.

Notes

- Simultaneously turn on and off the power supplies of the main unit and extension devices.
- Even if the power supply causes an instantaneous power failure for 5ms or less, the PLC can continue to operate.
- If a long-time power failure or an abnormal voltage drop occurs, the PLC stops, and output is turned off. When the power supply is restored, it will automatically restart (when the RUN input is on).

WIRING PRECAUTIONS WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.

WIRING PRECAUTIONS CAUTION

- Connect the DC power supply wiring to the dedicated connectors specified in this manual. If an AC power supply is connected to a DC input/output terminal (connector) or DC power supply terminal (connector), the PLC will burn out.
- Do not wire vacant terminals externally. Doing so may damage the product.
- Perform class D grounding (grounding resistance: 100Ω or less) to the grounding terminal on the main unit. Do not use common grounding with heavy electrical systems (refer to subsection 3.1.3).
- When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits.
- Failure to do so may cause fire, equipment failures or malfunctions.

Notes

- Input/output wiring 50 to 100m (164'1" to 328'1") long will cause almost no problems of noise, but, generally, the wiring length should be less than 20m (65'7") to ensure the safety.
- Extension cables are easily affected by noise. Lay the cables at a distance of at least 30 to 50mm (1.19" to 1.97") away from the PLC output and other power lines.


Item	Input specification (24V DC)
Input impedance	FX2NC-□□EX(-T) 4.3kΩ
Input signal current	FX3UC-32MT-LT-2 X000 to X005 6mA/24V DC X006, X007 7mA/24V DC X010 to X017 5mA/24V DC FX2NC-□□EX(-T) 5mA/24V DC
ON input sensitivity current	FX3UC-32MT-LT-2 X000 to X005 3.5mA or more X006, X007 4.5mA or more X010 to X017 3.5mA or more FX2NC-□□EX(-T) 3.5mA or more
Input OFF current	FX3UC-32MT-LT-2 FX2NC-□□EX(-T) 1.5mA or less
Input response time	Approx. 10ms ¹
Input signal form	No-voltage contact input NPN open collector transistor
Circuit insulation	Photocoupler insulation
Operation display	FX3UC-32MT-LT-2 Monitor by the display module FX2NC-□□EX(-T) LED on panel turns ON when photocoupler is driven.

- *1 X000 to X017 use adjustable digital filter values. For details, refer to FX3UC Series User's Manual - Hardware Edition.

3.2.2 HANDLING OF 24V DC INPUT

Inputs turn ON when the input terminal and COM terminal are electrically connected with a no-voltage contact or NPN open collector transistor

3.2.3 Example of input wiring

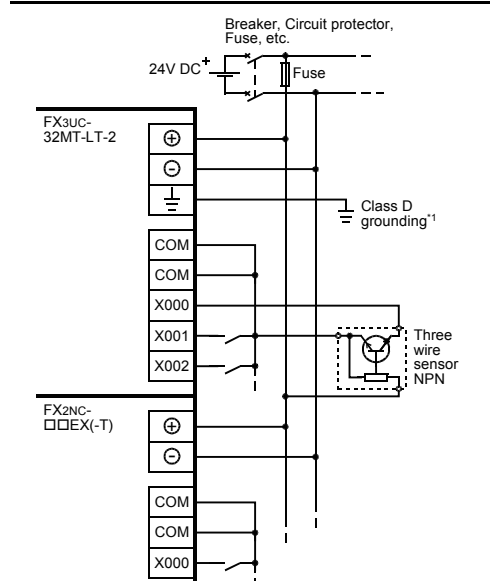

- *1 The grounding resistance should be 100Ω or less.

4. Terminal Layout

4.1 Main units

4.1.1 FX3UC-32MT-LT-2

FX3UC-32MT-LT-2			
IN		OUT	
X0	X10	Y0	Y10
X1	X11	Y1	Y11
X2	X12	Y2	Y12
X3	X13	Y3	Y13
X4	X14	Y4	Y14
X5	X15	Y5	Y15
X6	X16	Y6	Y16
X7	X17	Y7	Y17
COM	COM	COM1	COM1
•	•	•	•

4.2 FX2NC input/output extension blocks

4.2.1 FX2NC-□□EX

FX2NC-16EX

Lower	IN		Upper
	X0	X1	
	X1	X1	
	X2	X2	
	X3	X3	
	X4	X4	
	X5	X5	
	X6	X6	
	X7	X7	
COM COM			
• •			

FX2NC-32EX

Lower	IN		IN		Upper
	X0	X0	X0	X0	
	X1	X1	X1	X1	
	X2	X2	X2	X2	
	X3	X3	X3	X3	
	X4	X4	X4	X4	
	X5	X5	X5	X5	
	X6	X6	X6	X6	
	X7	X7	X7	X7	
	COM	COM	COM	COM	
	•	•	•	•	

4.2.2 FX2NC-□□EYT

FX2NC-16EYT

OUT			
Y0	Y10	Y1	Y11
Y2	Y12	Y2	Y12
Y3	Y13	Y3	Y13
Y4	Y14	Y4	Y14
Y5	Y15	Y5	Y15
Y6	Y16	Y6	Y16
Y7	Y17	Y7	Y17
COM1	COM1	COM1	COM1
•	•	•	•


FX2NC-32EYT

OUT			
Y0	Y10	Y1	Y11
Y2	Y12	Y2	Y12
Y3	Y13	Y3	Y13
Y4	Y14	Y4	Y14
Y5	Y15	Y5	Y15
Y6	Y16	Y6	Y16
Y7	Y17	Y7	Y17
COM1	COM1	COM2	COM2
•	•	•	•

3.1.2 Example of external wiring (power type)

Supply 24V DC power to the main unit and FX2NC-□□EX(-T) using the dedicated connector. For the details of wiring work, refer to Section 2.5. For the power supply wiring of the FX2NC input extension blocks, refer to the Subsection 3.2.3

Use a 24V DC +20% -15%*1 DC power supply whose ripple (p-p) is within 5%. The allowable range of the 24V DC power supply may be narrower when special function units/blocks are connected. For more details, refer to the FX3UC Series User's Manual - Hardware Edition

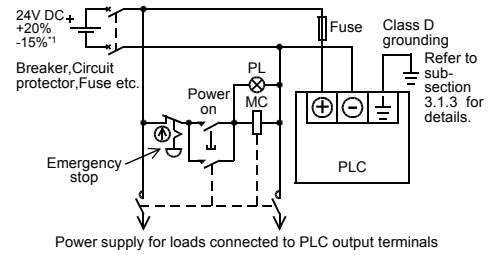


- *1 When the built-in CC-Link/LT master function is used, refer to the FX3UC Series User's Manual - Hardware Edition.

3.1.3 Grounding

Ground the PLC as stated below.

- Perform class D grounding. (Grounding resistance: 100Ω or less)
- Ground the PLC independently if possible. If it cannot be grounded independently, ground it jointly as shown below.

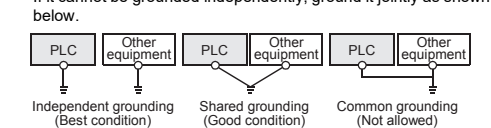

- Position the grounding point as close to the PLC as possible to decrease the length of the ground wire.

3.2 Input specifications and external wiring

For more details, refer to the FX3UC Series User's Manual - Hardware Edition

3.2.1 Input specifications

Item	Input specification (24V DC)
Number of input points	FX3UC-32MT-LT-2 16 points FX2NC-16EX 16 points FX2NC-32EX 32 points FX2NC-16EX-T 16 points FX2NC-16EYR-T 16 points
Input connecting type	FX3UC-32MT-LT-2 FX2NC-□□EX connector FX2NC-16EX-T Terminal block
Input form	Sink
Input signal voltage	24V DC +20% -15% Ripple Voltage (p-p)5% or less
Input impedance	FX3UC-32MT-LT-2 X000 to X005 3.9kΩ X006, X007 3.3kΩ X010 to X017 4.3kΩ

「电器电子产品有害物质限制使用标识要求」的表示方式

- *15 Note: This symbol mark is for China only.
- 含有害6物质的名称, 含有量, 含有部品
本产品所含有的有害6物质的名称, 含有量, 含有部品如下表所示。

部件名称		有害物质					
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
可编程控制器	外壳	○	○	○	○	○	○
	印刷基板	×	○	○	○	○	○

本表依据SJ/T 11364的规定编制。

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

基于中国标准的参考规格: GB/T15969.2

5. Handling of Batteries and/or Devices with Built-in Batteries in EU Member States

- (1) The symbol (1) indicates that batteries need to be disposed of separately from other wastes.
- (2) This symbol to the left is specified as below:
(1): EU Battery Directive (2006/66/EC) (to be repealed on 18 August 2025)
(1)(2): EU Battery Regulation (EU 2023/1542)

- The symbol (1) indicates that batteries need to be disposed of separately from other wastes.
- EU Battery Directive (2006/66/EC) and EU Battery Regulation (EU 2023/1542) requires the following marking or exporting batteries and/or devices with built-in batteries to EU member states.
 - To print the symbol on batteries, where that is not possible, on their manuals and their packaging.
 - To explain the symbol in the manuals of the products.
- If the chemical symbol is printed beneath the symbol (1) shown overleaf, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows:
Hg: mercury (0.0005%), Cd: cadmium (0.0002%), Pb: lead (0.004%)

Included modules and batteries

Series name/product name	Used battery name	Battery type
FX3UC Series main unit	FX3U-32BL	Lithium Manganese Dioxide Battery

Batteries to be built in modules (spare parts and optional parts)

Product name	Battery type
FX3U-32BL	Lithium Manganese Dioxide Battery

3.3 Output specifications and example of external wiring

For more details, refer to the FX3UC Series User's Manual - Hardware Edition