



Programmable Controller MELSEC iQ-F

Side A JAPANESE Side B ENGLISH

MELSEC iQ-F FX5-4LC

Hardware Manual



Table with Manual Number, Revision, and Date.

This manual describes the part names, dimensions, installation, and specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product.

Effective April 2022. Specifications are subject to change without notice. © 2017 MITSUBISHI ELECTRIC CORPORATION

Safety Precautions (Read these precautions before use.)

Warning and Caution icons with text explaining incorrect handling hazards.

Depending on the circumstances, procedures indicated by CAUTION may also cause severe injury. It is important to follow all precautions for personal safety.

Associated Manual

Table listing associated manuals like MELSEC iQ-F FX5 User's Manual (Temperature Control) and MELSEC iQ-F FX5S/FX5UJ/FX5UC User's Manual (Hardware).

How to obtain manuals: For the necessary product manuals or documents, consult with your local Mitsubishi Electric representative.

Applicable standards: FX5-4LC complies with the EC Directive (EMC Directive), UL standards (UL, cUL) and UKCA marking. Further information can be found in the following manual.

Attention: This product is designed for use in industrial applications.

1. Outline


FX5-4LC temperature control module (hereinafter called FX5-4LC) equipped with 4 channel input (thermocouples, resistance thermometer and micro voltage input), 4 points output (open collector transistor) and 4 points current sensor input can perform temperature control.

1.1 Incorporated Items


Check that the following product and items are included in the package:

Table listing product (FX5-4LC temperature control module) and included items like power cable, dust proof protection sheet, and hardware manual.

1.2 External Dimensions, Part Names

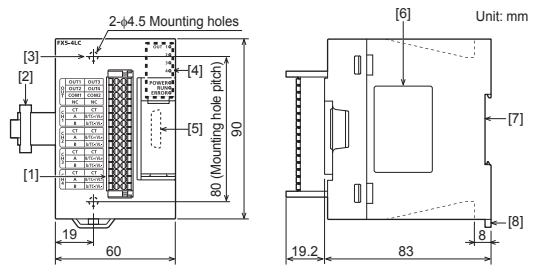


MASS (Weight): Approx. 0.3 kg. Outer painting color: Munsell 0.6B7.6/0.2

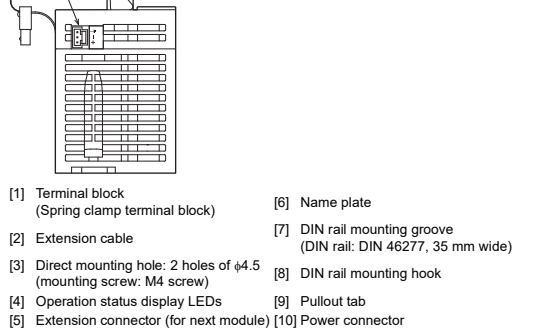

1.3 Indications of LEDs

LED display status table with columns for LED display, LED color, Status, and Indication (POWER, RUN, ERROR, OUT1 to OUT4).

1.4 Terminal Layout

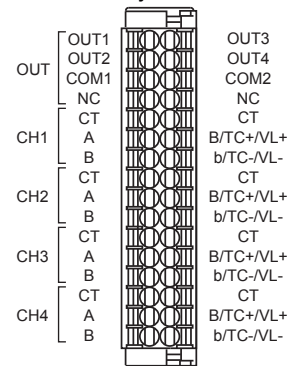

For further information on terminal, refer to the following manual. → MELSEC iQ-F FX5 User's Manual (Temperature Control)

2. Installation

INSTALLATION PRECAUTIONS WARNING: Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.

INSTALLATION PRECAUTIONS CAUTION: Do not touch the conductive parts of the product directly. Do not use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas, or high temperature, condensation, or rain and wind.

For further information on mounting, refer to the following manual. → MELSEC iQ-F FX5S/FX5UJ/FX5UC User's Manual (Hardware)

3. Wiring

WIRING PRECAUTIONS WARNING: Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.


WIRING PRECAUTIONS CAUTION: Make sure to observe the following precautions in order to prevent any damage to the machinery or accidents due to malfunction of the PLC caused by abnormal data written to the PLC due to the effects of noise.

3.1 Applicable Cable

3.1.1 Spring clamp terminal block

Table showing wire size and temperature rating for spring clamp terminal block.

Wire end treatment: Strip the cable about 10 mm from the tip to connect a wire ferrule at the striped area. Failure to do so may result in electric shock or short circuit between adjacent terminals.

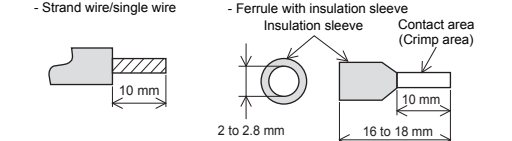

The following table shows wire ferrules and tools for wire ferrules compatible with the terminal block. Use of items other than these may result in not being able to remove the wire ferrule, so carefully check that the wire ferrule can be unplugged.


Table listing manufacturer, model, wire size, and crimp tool for wire ferrules.

3) Connecting a cable: When ferrules with insulation sleeve are used, insert a wire with the ferrule with insulation sleeve into the wire insertion opening and push the wire. When stranded wires and solid wires are used, push the open/close button of the terminal block with a flathead screwdriver.

Table showing manufacturer (PHOENIX CONTACT GmbH & Co. KG) and model (SZS 0.4x2.5 VDE).


4) Disconnecting a cable: Push the open/close button of the wire to be disconnected with a flathead screwdriver. Pull out the wire with the open/close button pushed.

3.2 Example of Input/output Wiring

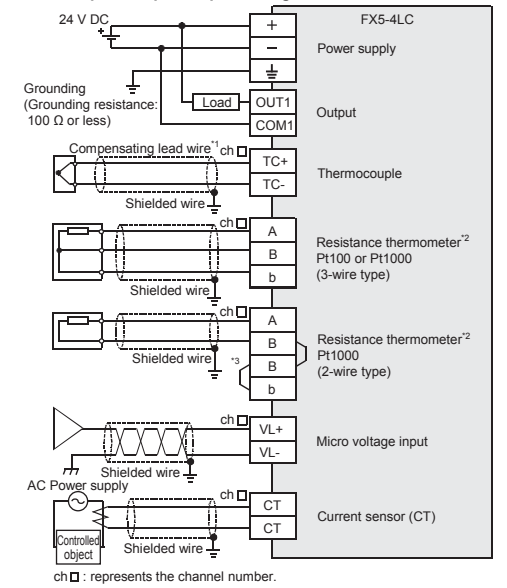

*1 When using a thermocouple, use specified compensating lead wires. *2 When you use a resistance thermometer, the resistance of the lead wire is low, use a wire without a resistance difference between the lead wire. *3 Make sure to short-circuit the [B] and [b] terminals when a 2-wire resistance thermometer is input.

3.2.1 Power Connector: For further information on the power supply wiring and power cable, refer to the following manual. → MELSEC iQ-F FX5 User's Manual (Temperature Control)

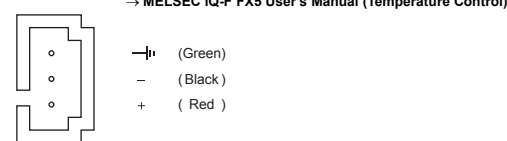

3.3 Grounding

Ground the PLC as stated below. Perform class D grounding. (Grounding resistance: 100 Ω or less). Ground the PLC independently if possible. If the PLC cannot be grounded independently, perform the "Shared grounding" shown below.

4. Specification

DESIGN PRECAUTIONS WARNING: Make sure to set up the following safety circuits outside the PLC to ensure safe system operation even during external power supply problems or PLC failure.

DESIGN PRECAUTIONS CAUTION: Simultaneously turn on and off the power supplies of the CPU module and extension modules.

STARTUP AND MAINTENANCE PRECAUTIONS CAUTION: Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions.

DISPOSAL PRECAUTIONS CAUTION: Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device.

TRANSPORTATION PRECAUTIONS CAUTION: The product is a precision instrument. During transportation, avoid impacts larger than those specified in the general specifications by using dedicated packaging boxes and shock-absorbing pallets.

Table listing applicable CPU module models (FX5UJ, FX5UC) and their applicability.

*1 FX5-CNV-IFC or FX5-C1P5-5V is necessary to connect FX5-4LC to the FX5UC CPU module.

4.2 General Specifications: The items other than the following are equivalent to those of the CPU module. For the general specification, refer to the following manual. → MELSEC iQ-F FX5S/FX5UJ/FX5UC User's Manual (Hardware)

Table listing general specifications like dielectric withstand voltage (500 V AC for 1 minute) and insulation resistance (10 MΩ or higher).

4.3 Power Supply Specifications

Table listing power supply specifications for external and internal power supply.

4.4 Performance Specifications

Table listing performance specifications like control method (Two-position control, PID control), control operation period (250 ms/4ch), and heater disconnection detection.

4.5 Input Specifications

Table listing input specifications like number of input points (4 points), input type (Thermocouple, Resistance thermometer, Micro voltage input), and measurement precision.

*1 A different input can be selected for each channel. *2 To stabilize the measurement precision, warm-up (supply power) the system for 30 minutes or more after power-on.

4.6 Current Sensor (CT) Input Specifications

Table listing current sensor input specifications like number of input points (4 points) and current sensor specifications.

Table listing items and specifications for heater current measured value and measurement precision.

4.7 Measured Temperature Range

Table listing input type and measurement precision for measured temperature range.

4.8 Output Specifications

Table listing items and specifications for output specifications like number of output points (4 points) and output method (NPN open collector transistor output).

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty: Exclusion of loss in opportunity and secondary loss from warranty liability. Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

For safe use: This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.