

Programmable Controller

MELSEC iQ-R
series

MELSEC iQ-R Safety Function Block Reference

SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using MELSEC iQ-R series programmable controllers, please read the manuals for the product and the relevant manuals introduced in those manuals carefully, and pay full attention to safety to handle the product correctly.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

CONDITIONS OF USE FOR THE PRODUCT

- (1) Although MELCO has obtained the certification for Product's compliance to the international safety standards IEC61508, EN954-1/ISO13849-1 from TUV Rheinland, this fact does not guarantee that Product will be free from any malfunction or failure. The user of this Product shall comply with any and all applicable safety standard, regulation or law and take appropriate safety measures for the system in which the Product is installed or used and shall take the second or third safety measures other than the Product. MELCO is not liable for damages that could have been prevented by compliance with any applicable safety standard, regulation or law.
- (2) MELCO prohibits the use of Products with or in any application involving, and MELCO shall not be liable for a default, a liability for defect warranty, a quality assurance, negligence or other tort and a product liability in these applications.
 - (a) power plants,
 - (b) trains, railway systems, airplanes, airline operations, other transportation systems,
 - (c) hospitals, medical care, dialysis and life support facilities or equipment,
 - (d) amusement equipments,
 - (e) incineration and fuel devices,
 - (f) handling of nuclear or hazardous materials or chemicals,
 - (g) mining and drilling,
 - (h) and other applications where the level of risk to human life, health or property are elevated.

INTRODUCTION

Thank you for purchasing the Mitsubishi Electric MELSEC iQ-R series programmable controllers.

This manual describes the programming using the safety FBs.

Before using this product, please read this manual and the relevant manuals carefully and develop familiarity with the functions and performance of the MELSEC iQ-R series programmable controller to handle the product correctly.

When applying the program examples provided in this manual to an actual system, ensure the applicability and confirm that it will not cause system control problems.

Please make sure that the end users read this manual.

MEMO

CONTENTS

SAFETY PRECAUTIONS	1
CONDITIONS OF USE FOR THE PRODUCT	1
INTRODUCTION	1
RELEVANT MANUALS	4
TERMS	5
CHAPTER 1 OVERVIEW	6
CHAPTER 2 GENERAL SPECIFICATIONS	8
2.1 List of Safety FBs	8
2.2 Common Specifications	9
2.3 General Functions	11
2.4 Generic State Diagram	12
2.5 How to Register the Safety FB Library to a Project	12
2.6 Copying and Pasting a Ladder containing a Safety FB	12
CHAPTER 3 PRECAUTIONS	13
3.1 Precautions for System Design	13
3.2 Precautions for Management	13
CHAPTER 4 SAFETY FB SPECIFICATIONS	15
4.1 M+SF_2HAND2_R	15
4.2 M+SF_2HAND3_R	19
4.3 M+SF_EDM_R	23
4.4 M+SF_ENBLSW_R	29
4.5 M+SF_ESPE_R	34
4.6 M+SF_ESTOP_R	38
4.7 M+SF_GLOCK_R	42
4.8 M+SF_GMON_R	48
4.9 M+SF_MODSEL_R	54
4.10 M+SF_MUTE2_R	60
4.11 M+SF_MUTEP_R	67
4.12 M+SF_MUTES_R	79
4.13 M+SF_OUTC_R	87
4.14 M+SF_TSEN_R	93
4.15 M+SF_EQUI_R	102
4.16 M+SF_ANTI_R	107
APPENDICES	112
Appendix 1 Approximate Number of Steps	112
INDEX	115
INSTRUCTION INDEX	116
REVISIONS	117
WARRANTY	118
TRADEMARKS	120

RELEVANT MANUALS

Manual name [manual number]	Description	Available form
MELSEC iQ-R Safety Function Block Reference [BCN-P5999-0815] (this manual)	Specifications of the safety FBs	e-Manual PDF
GX Works3 Operating Manual [SH-081215ENG]	System configuration, parameter settings, and online operations of GX Works3	e-Manual PDF



e-Manual refers to the Mitsubishi Electric FA electronic book manuals that can be browsed using a dedicated tool.

e-Manual has the following features:

- Required information can be cross-searched in multiple manuals.
- Other manuals can be accessed from the links in the manual.
- The hardware specifications of each part can be found from the product figures.
- Pages that users often browse can be bookmarked.
- Sample programs can be copied to an engineering tool.

TERMS

Unless otherwise specified, this manual uses the following terms.

Term	Description
GX Works3	Product name of the MELSEC programmable controller software package.
NC	Abbreviation for normal close contact which is normally closed, but opened when a switch or other function is operated.
NO	Abbreviation for normal open contact which is normally opened, but closed when a switch or other function is operated.
Performance Level (PL)	Safety level which is standardized in ISO13849-1:2015. (The safety level is classified into five levels of a to e.)
Risk	Degree of hazards, which is the combination of the occurrence probability and degree of an injury and a health problem.
Safety application	Generic term for the applications that are operated using the safety programmable controller for realizing the safety functions.
Safety communications	Communication service to process the transmission at the safety layer defined in the safety communication protocol.
Safety control	Safety programs are executed and safety communications are performed to control machinery. Machinery is stopped safely when an abnormality occurs.
Safety CPU	Generic term for the R08SF CPU, R16SF CPU, R32SF CPU, and R120SF CPU This module is used with a safety function module as a pair, and performs both standard control and safety control.
Safety data	Data which is transmitted through safety communications.
Safety device	Device that can be used in safety programs.
Safety function module	Another term for the R6SFM This module is used with the Safety CPU as a pair and performs safety control. The module can only be paired with the Safety CPU.
Safety functions	Functions to be realized to protect a human from machinery hazards.
Safety input	Generic term for the signals that are input to the safety programmable controller for realizing the safety functions.
Safety output	Generic term for the signals that are output from the safety programmable controller for realizing the safety functions.
Safety programmable controller	Generic term for the MELSEC iQ-R series modules that perform safety control (such as a Safety CPU, safety function module, CC-Link IE Field Network remote I/O module (with safety functions))
Safety related system	System executing the safety functions to be required.
Safety remote I/O module	Abbreviation for the NZ2GFSS2-32D and NZ2EXSS2-8TE CC-Link IE Field Network remote I/O module (with safety functions).
Safety station	Generic term for the station to perform safety communications and general communications.
SIL	Safety level which is standardized in IEC61508: 2010. (The safety level is classified into four levels of SIL1 to SIL4.)

1 OVERVIEW

Safety FBs are the manufacturer offer function blocks that received the certification of ISO13849-1:2015 PLe, IEC62061:2012 SIL3, and IEC61508:2010 SIL3. The safety FBs can be used with the MELSEC iQ-R series safety CPUs.

Improving the productivity and the maintainability of a safety program

The major functions used in programming safety applications are provided as the safety FB library. A safety program becomes simple by using the safety FBs, and the productivity and maintainability of the safety program are improved. Moreover, efficiency of debug and verification for a safety program is also improved.

The high safe level application using the safety certified FB

Since the safety FB received the safety certification, a user can build a safety application which is in compliance with ISO13849-1:2006 PLe, IEC62061:2012 SIL3, and IEC61508:2010 SIL3. A user can develop an advanced safety application using the safety FBs, and it becomes easy to get the safety certification of user's safety application from an inspector.

Improving the reliability of the safety program

Since users cannot read the inside logic of the safety FBs, the users cannot customize or modify them. Therefore, the safety FBs cannot be intentionally modified by an intentional or mistaken operation and the reliability of a safety feature of a program will improve. Also, a safety FB used is whether the certified one or not can be identified by its name because the safety FBs and their name cannot be created and changed by a user.

Displaying a diagnostic code

The diagnostic code includes error codes and status codes. When a safety FB detects an internal error (including out of range of parameters and invalid static Reset), it displays an error code. When no error is detected, a safety FB displays a status code. Diagnostic codes are useful in knowing the operating status of the safety FBs and debugging.

Combination with a ladder

Safety FBs can be used within a ladder diagram. By combining a popular ladder and the certified safety functions, a user can make a safe and highly flexible safety program.

2 GENERAL SPECIFICATIONS

2.1 List of Safety FBs

The following lists the safety FBs provided.

Name ^{*1}	Function	Description	Reference
M+SF_2HAND2_R_01A	Two-hand switch Type II	This FB provides the two-hand control functionality.	Page 15 M+SF_2HAND2_R
M+SF_2HAND3_R_01A	Two-hand switch Type III	This FB provides the two-hand control functionality (Fixed specified time difference is 500ms).	Page 19 M+SF_2HAND3_R
M+SF_EDM_R_01A	External device monitor	This FB controls a safety output and monitors controlled actuators, e.g. subsequent contactors.	Page 23 M+SF_EDM_R
M+SF_ENBLSW_R_01A	Enable switch	This FB evaluates the signals of an enable switch with three positions.	Page 29 M+SF_ENBLSW_R
M+SF_ESPE_R_01A	Light curtain (ESPE)	This FB is a safety-related FB for monitoring electro-sensitive protective equipment (ESPE).	Page 34 M+SF_ESPE_R
M+SF_ESTOP_R_01A	Emergency stop	This FB is a safety-related FB for monitoring an emergency stop button. This FB can be used for emergency switch off functionality (stop category 0).	Page 38 M+SF_ESTOP_R
M+SF_GLOCK_R_01A	Guard lock and interlocking	This FB controls an entrance to a hazardous area via an interlocking guard with guard locking ("four state interlocking").	Page 42 M+SF_GLOCK_R
M+SF_GMON_R_01A	Guard monitoring	This FB monitors the relevant safety guard. There are two independent input parameters for two switches at the safety guard coupled with a time difference (i_dMonitoringTime) for closing the guard.	Page 48 M+SF_GMON_R
M+SF_MODSEL_R_01A	Mode selector	This FB selects the system operation mode, such as manual, automatic, semi-automatic.	Page 54 M+SF_MODSEL_R
M+SF_MUTE2_R_01A	Muting with 2 sensors	Muting is the intended suppression of the safety function. (e.g., light barriers) In this FB, parallel muting with two muting sensors is specified.	Page 60 M+SF_MUTE2_R
M+SF_MUTEP_R_01A	Parallel muting	In this FB, parallel muting with four muting sensors is specified.	Page 67 M+SF_MUTEP_R
M+SF_MUTES_R_01A	Sequential muting	In this FB, sequential muting with four muting sensors is specified.	Page 79 M+SF_MUTES_R
M+SF_OUTC_R_01A	Output control	Control of a safety output with a signal from the functional application and a safety signal with optional startup inhibits.	Page 87 M+SF_OUTC_R
M+SF_TSEN_R_01A	Testable safety sensor	This FB detects, for example, the loss of the sensing unit detection capability, the response time exceeding that specified, and static ON signal in single-channel sensor systems. It can be used for external testable safety sensors.	Page 93 M+SF_TSEN_R
M+SF_EQUI_R_01A	Dual input (NC+NC or NO+NO)	This FB converts two equivalent bit inputs (both NO or NC) to one bit with discrepancy time monitoring. This FB output shows the result of the evaluation of both channels.	Page 102 M+SF_EQUI_R
M+SF_ANTI_R_01A	Dual input (NO+NC)	This FB converts two antivalent bit inputs (NO/NC pair) to one bit output with discrepancy time monitoring. This FB output shows the result of the evaluation of both channels.	Page 107 M+SF_ANTI_R

*1 FB version information such as "_01A", which is displayed at the end of an FB name, is omitted hereinafter.



For the safety FB library, please consult your local Mitsubishi representative.

For how to register the FB library, see the following.

GX Works3 Operating Manual

2.2 Common Specifications

This section describes the common specifications to each safety FB. The following table lists the general input/output specifications of the safety FBs. Variables other than i_bS_In and o_bS_Out are all used under the same names, data types, default values, specifications, and functions for the safety FB use. For details on each name, data type, default value, specification, and function of the safety input-output variables other than those described in the figure below, see the description of individual safety FB.







WARNING




Use safety data for connecting the variable whose data type is "bit*" to input-output circuits.

Labels

■ Input labels

No.	Name	Data type	Default value	Description and variable value
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. Default value is OFF. OFF: All output variables are set to the default values. ON: The safety FB is active. For details, see the following.  Page 11 Whether safety FBs are active or not
(2)	i_bS_In	—	—	Safety input signals to the safety FB. For details on each name, data type, default value, specification, and function, see the individual safety FB.
(3)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. OFF (= default value): Manual reset when the safety FB is activated. ON: Automatic reset when the safety FB is activated. For details on the function, see the following.  Page 11 Reset selection
(4)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for an input signal (i_bS_In) reset to ON. OFF (= default value): Manual reset when an emergency stop button is released. ON: Automatic reset when an emergency stop button is released. For details on the function, see the following.  Page 11 Reset selection
(5)	i_bReset	Bit	OFF	Reset input. (This function is only active on a signal change from OFF to ON. This input can be used for different purposes.) • Reset of the error that occurred in the safety FB. • Manual reset in setting i_bS_StartReset and i_bS_AutoReset to OFF. • Additional safety FB-specific reset functions. For details on the function, see the following.  Page 11 Securing of input signal Reset

Output labels

No.	Name	Data type	Default value	Description and variable value
(6)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. OFF: The safety FB is not activated. ON: The safety FB is activated. For details on the function, see the following.  Page 11 Whether safety FBs are active or not
(7)	o_bS_Out	—	—	Safety output signals from the safety FB. For details on each name, data type, default value, specification, and function, see the individual safety FB.
(8)	o_bError	Bit	OFF	Error flag. OFF: Indicates that an error has not occurred and the safety FB is in another state. ON: Indicates that an error has occurred and the safety FB is in an error state. For details on the function, see the following.  Page 11 Safety FB status check
(9)	o_wDiagCode	Word [signed]	0	Diagnostic code. (An error code or status code is indicated in hexadecimal.) When an error occurs (o_bError=ON): Indicates an error code. When no error occurs (o_bError=OFF): Indicates an status code. For details on the function, see the following.  Page 11 Safety FB status check

2.3 General Functions

Whether safety FBs are active or not

Input signal, `i_bActivate`, sets whether to activate a safety FB or not. In addition, whether the safety FB is active or not can be checked with output signal, `o_bReady`. If `i_bActivate` is OFF, all values of the output signals are set to the default values. Inputting the signal of the safety refresh communication status for CC-Link IE Field Network inactivates the safety FB when an error occurs in the safety station and then prevents unnecessary signals from outputting.

Reset selection

A reset method of safety FBs can be selected from `i_bS_StartReset` (after safety FBs are activated) and `i_bS_AutoReset` (after safety inputs are restored).

■ Manual reset

In this method, a safety output signal is not set to ON immediately even though safety input signals are correctly set. By changing `i_bReset` safety input signal from OFF to ON while the safety input signals are correctly set, the safety output signal is set to ON.

■ Automatic reset

In this method, a safety output signal is immediately set to ON when safety input signals are correctly set.



WARNING

The automatic reset can only be activated if it is ensured that no hazard can occur when a safety FB is activated (with `i_bS_StartReset` input) or a safety input is set (with `i_bS_AutoReset` input). (Also, the manual reset switched from the automatic reset or the automatic reset switched from the manual reset can be activated.)

Therefore, the use of automatic reset requires implementation of other systems or application measures to ensure that unexpected (or unintended) startup does not occur.

Securing of input signal Reset

To prevent a machine startup in the event of switch failures (contact welding, damaged springs), the safety FB can only be activated when Reset input signal is set to ON. If Reset remains ON without detecting that it is set to ON, the safety FB detects an error.

Safety FB status check

The current status of safety FBs can be checked with output signal, `o_wDiagCode` (hexadecimal number). If an error occurs in the safety FB, `o_bError` output signal is set to ON and an error code is output to `o_wDiagCode`. If more than one error occurs, only the error code corresponding to the error detected at first is output. If an error does not occur in the safety FB, `o_bError` output signal is OFF and a status code is output to `o_wDiagCode`.




WARNING

Take action against error messages and perform reset operations properly.


2.4 Generic State Diagram

The safety FB state transitions according to the state diagram described in the safety FB specifications. However, a program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, the state transition does not occur. The following shows how to read the state diagram.

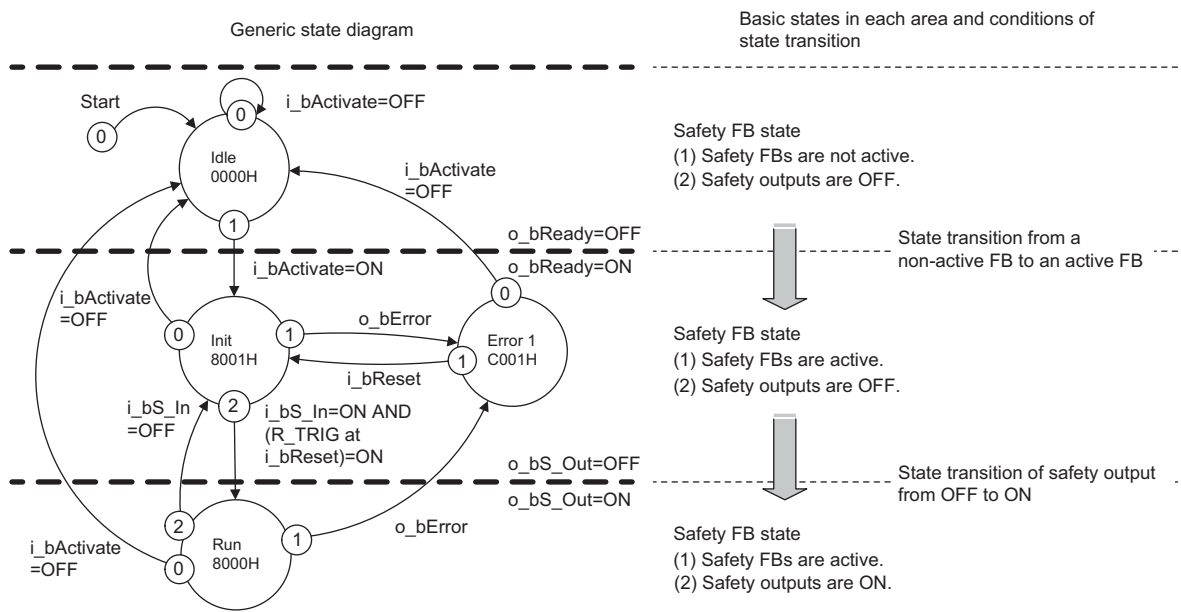


Basic way to read the state diagram

- The state name and diagnostic code are indicated in the circle.



The state name is "Idle", and the diagnosis code is "0000H".

- The arrows connecting two circles indicate the direction of the state transition. Also, the transition conditions are described near the arrows. When there are multiple transition destination states, the circled numbers indicate the transition priority when multiple transition conditions are satisfied simultaneously. (0 is the highest priority.)



There are three transition destination states from the Run state depending on the condition. The transition priority is in the following order: 8000H → 0000H, 8000H → C001H, and 8000H → 8001H.

- If i_bActivate input signal is set to OFF, any state transitions to the Idle state.
- Meaning of transition state symbols
 - AND, OR, XOR, and NOT: Logical operators
 - R_TRIG at signal: The signal is changed from OFF to ON
 - F_TRIG at signal: The signal is changed from ON to OFF
- Variable name with no ON/OFF specification on the state diagram indicates that the variable is ON.

2.5 How to Register the Safety FB Library to a Project

For details, refer to the following.

GX Works3 Operating Manual

2.6 Copying and Pasting a Ladder containing a Safety FB

A program containing a safety FB cannot be selected to copy/paste on the navigation window. Select a ladder block and copy/paste it.

3 PRECAUTIONS

3.1 Precautions for System Design

Validation for the overall system

Please note that you must carry out a validation every time you make a safety-related modification to your overall system. Check the following;

- The safety devices are connected to the correct safety sensors and actuators in your safety application.
- The safety remote I/O modules and safety input/output devices have been parameterized correctly.
- The variables have been linked to the safety sensors and actuators correctly (single channel or dual channel).
- Line control (short-circuit and cable break monitoring) is implemented in your application if it is required in your application.
- Variables of the safety FB are connected to proper data.

Error and DiagCode

The safety FB has an internal state, which transitions depending on a change in the input signal. The value for this state is output as a DiagCode (o_wDiagCode). When an error is detected in the safety FB, the error flag (o_bError) is set to ON. If error information for the safety FB is required for your application, use these values for programming.

3.2 Precautions for Management

Project data management

Manage and operate the project data properly. A system manager has to back up the project and save the backup data so that the data restoration is always possible.

4 SAFETY FB SPECIFICATIONS


4.1 M+SF_2HAND2_R

Overview




Item	Description
Function name	Two-hand switch Type II
Functional overview	This FB provides the two-hand control functionality (see ISO13851, Type II).
Symbol	<div><div>M+SF_2HAND2_R</div><div><div>(1) — B: i_bActivate</div><div>(2) — B: i_bS_Button1</div><div>(3) — B: i_bS_Button2</div><div>o_bReady: B — (4)</div><div>o_bS_TwoHand_Out: B — (5)</div><div>o_bError: B — (6)</div><div>o_wDiagCode: W — (7)</div></div></div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_Button1	Bit*	OFF	Input of button 1 (for category 3 or 4: two antivalent contacts) OFF: Button 1 released. ON: Button 1 actuated.
(3)	i_bS_Button2	Bit*	OFF	Input of button 2 (for category 3 or 4: two antivalent contacts) OFF: Button 2 released. ON: Button 2 actuated.

■ Output labels

No.	Variable name	Data type	Default value	Description
(4)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(5)	o_bS_TwoHand_Out	Bit*	OFF	Safety output signal. OFF: No correct two-hand operation. ON: i_bS_Button1 and i_bS_Button2 inputs are ON and no error occurred. Correct two-hand operation.
(6)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(7)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions

WARNING


Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.

FB details

This FB provides the two-hand control functionality according to ISO13851, Section 4 Type II. If i_bS_Button1 and i_bS_Button2 are set to ON in correct sequence, then o_bS_TwoHand_Out output will also be set to ON. The FB also controls the release of both buttons before setting output o_bS_TwoHand_Out again to ON.

State diagram


State transition of M+SF_2HAND2_R

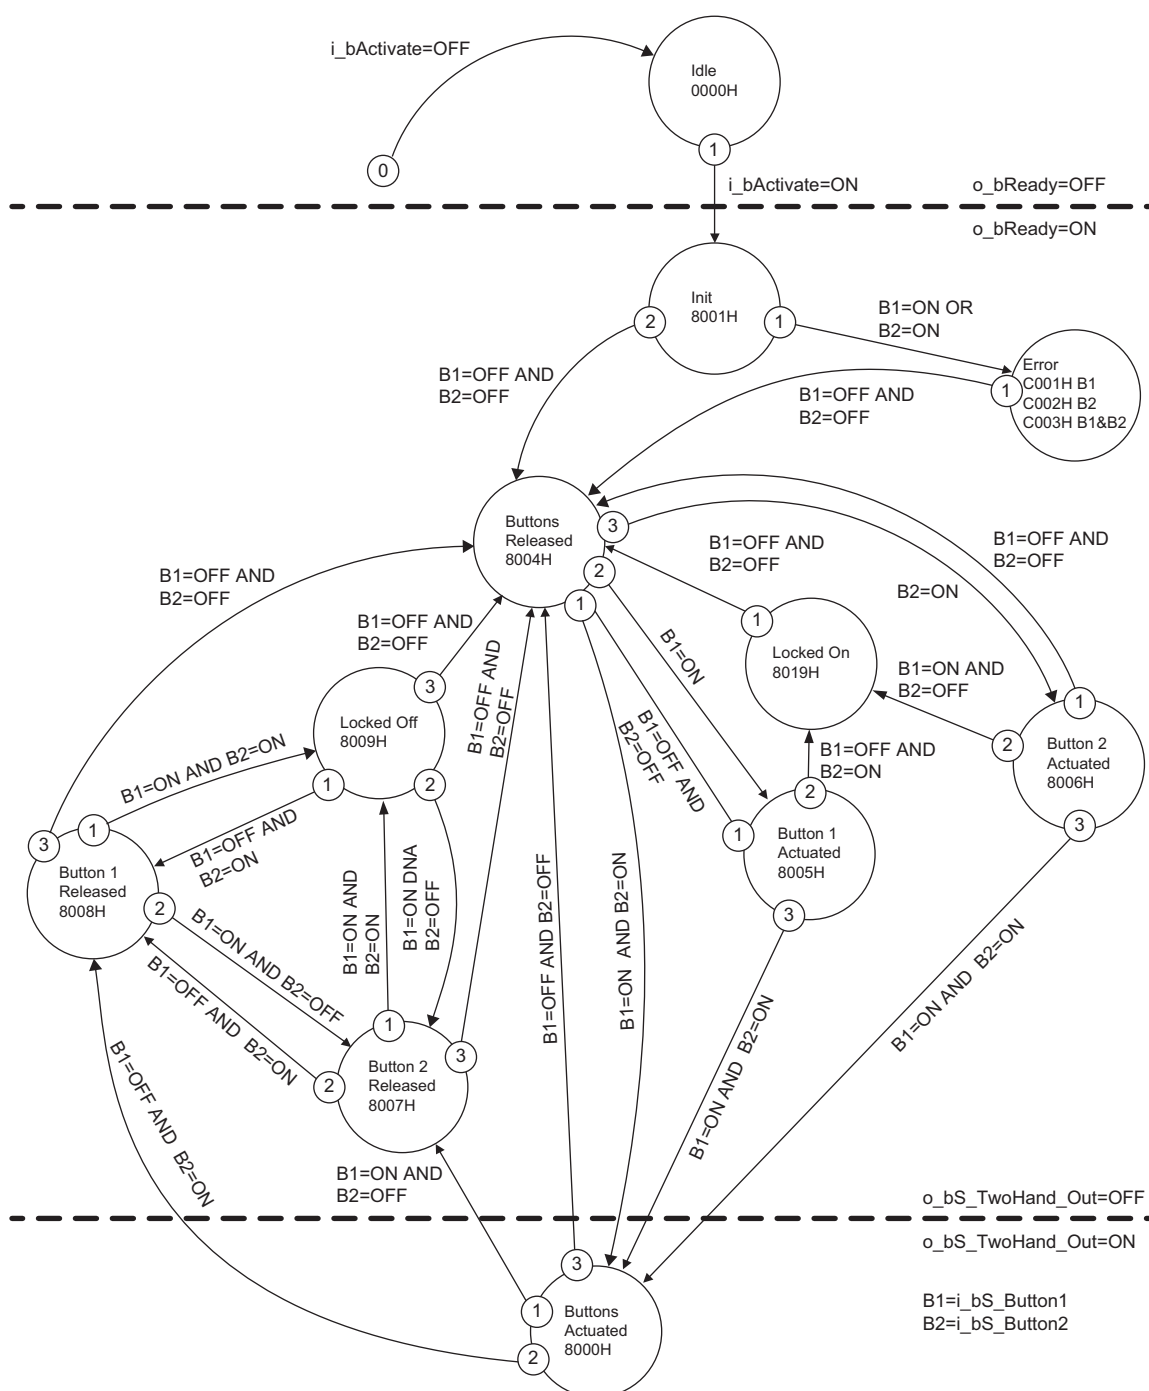

Note: The transition from any state to the Idle state due to $i_bActivate=OFF$ is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_2HAND2_R

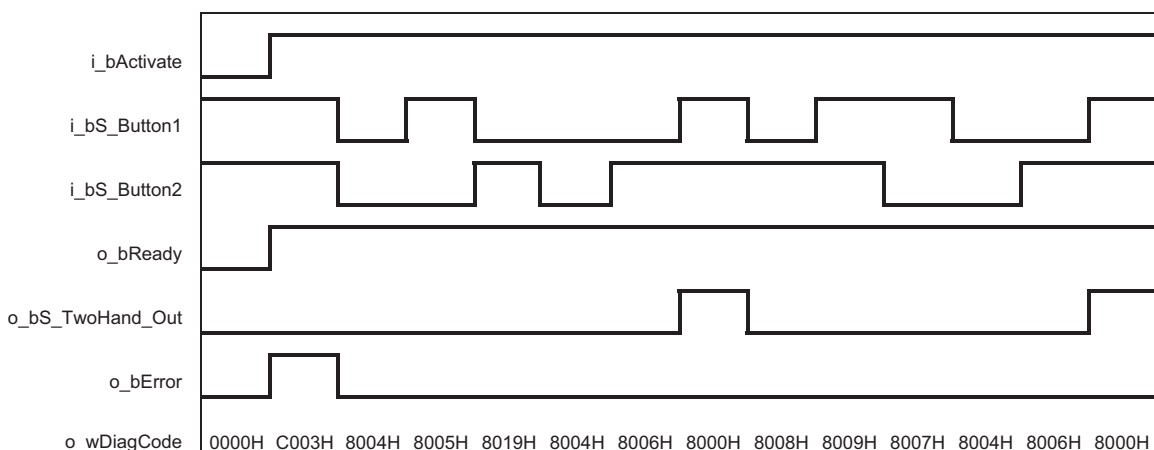

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_TwoHand_Out	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 17 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Error 1 B1	i_bS_Button1 was ON on FB activation.	Release i_bS_Button1 and i_bS_Button2.
C002H	Error 1 B2	i_bS_Button2 was ON on FB activation.	
C003H	Error 1 B1&B2	The signals at i_bS_Button1 and i_bS_Button2 were ON on FB activation.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_TwoHand_Out: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8000H	Buttons Actuated	The both buttons actuated correctly. The safety output is enabled. • o_bReady: ON • o_bS_TwoHand_Out: ON • o_bError: OFF	None.
8001H	Init	The FB is active, but in the Init state. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Actuate i_bS_Button1 or i_bS_Button2.
8004H	Buttons Released	No button is actuated. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Actuate i_bS_Button1 or i_bS_Button2.

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
8005H	Button 1 Actuated	Only Button 1 is actuated. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button1, or actuate i_bS_Button2.
8006H	Button 2 Actuated	Only Button 2 is actuated. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button2, or actuate i_bS_Button1.
8007H	Button 2 Released	The safety output was enabled and is disabled again. i_bS_Button1 is ON and i_bS_Button2 is OFF after disabling the safety output. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button1.
8008H	Button 1 Released	The safety output was enabled and is disabled again. i_bS_Button1 is OFF and i_bS_Button2 is ON after disabling the safety output. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button2.
8009H	Locked Off	The safety output was enabled and is disabled again. i_bS_Button1 is ON and i_bS_Button2 is also ON after disabling the safety output. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button1 and i_bS_Button2.
8019H	Locked On	Incorrect actuation of the buttons. Waiting for release of both buttons. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	



WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables


4.2 M+SF_2HAND3_R

Overview




Item	Description
Function name	Two-hand switch Type III
Functional overview	This FB provides the two-hand control functionality (see ISO13851, Type III. Fixed specified time difference is 500ms).
Symbol	<div><div>M+SF_2HAND3_R</div><div><div>(1) — B: i_bActivate</div><div>(2) — B: i_bS_Button1</div><div>(3) — B: i_bS_Button2</div><div>o_bReady: B — (4)</div><div>o_bS_TwoHand_Out: B — (5)</div><div>o_bError: B — (6)</div><div>o_wDiagCode: W — (7)</div></div></div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_Button1	Bit*	OFF	Input of button 1 (for category 3 or 4: two antivalent contacts) OFF: Button 1 released. ON: Button 1 actuated.
(3)	i_bS_Button2	Bit*	OFF	Input of button 2 (for category 3 or 4: two antivalent contacts) OFF: Button 2 released. ON: Button 2 actuated.

■ Output labels

No.	Variable name	Data type	Default value	Description
(4)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(5)	o_bS_TwoHand_Out	Bit*	OFF	Safety output signal. OFF: No correct two-hand operation. ON: i_bS_Button1 and i_bS_Button2 inputs are ON and no error occurred. Correct two-hand operation.
(6)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(7)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions


WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details


This FB provides the two-hand control functionality according to ISO13851, Section 4 Type III. If i_bS_Button1 and i_bS_Button2 are set to ON in correct sequence, then o_bS_TwoHand_Out output will also be set to ON. The FB also controls the release of both buttons before setting output o_bS_TwoHand_Out again to ON.

State transition of M+SF_2HAND3_R



Typical timing diagram

■ For M+SF_2HAND3_R

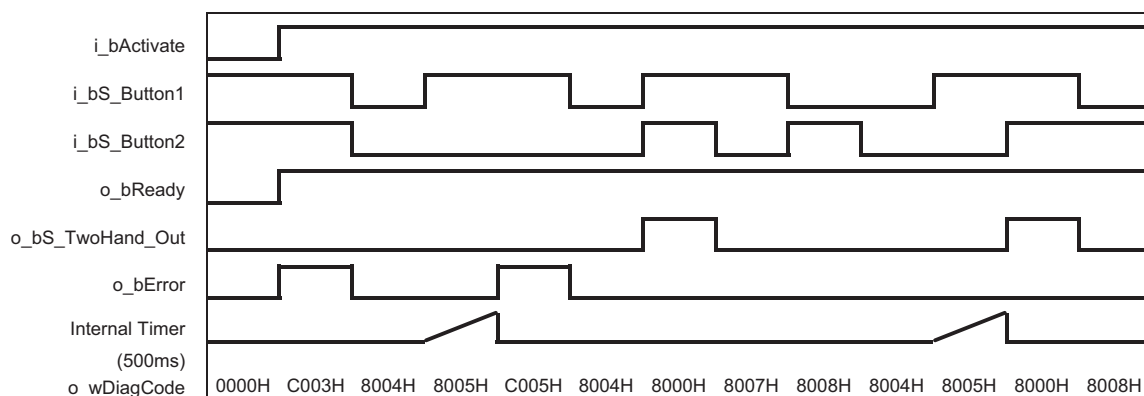

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the InternalTimer elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_TwoHand_Out	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 21 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Error 1 B1	i_bS_Button1 was ON on FB activation.	Release i_bS_Button1 and i_bS_Button2.
C002H	Error 1 B2	i_bS_Button2 was ON on FB activation.	
C003H	Error 1 B1&B2	The signals at i_bS_Button1 and i_bS_Button2 were ON on FB activation.	
C004H	Error 2 B2	i_bS_Button1 was OFF and i_bS_Button2 was ON after 500ms in state 8005H or 8006H.	Release i_bS_Button1 and i_bS_Button2.
C005H	Error 2 B1	i_bS_Button1 was ON and i_bS_Button2 was also ON after 500ms in state 8005H or 8006H. This state is only possible when the states of the inputs (S_Button1 and S_Button2) change from divergent to convergent (both ON) simultaneously when the timer elapses (500ms) at the same cycle.	If the safety cycle time is long, the safety input refresh is delayed and an error may occur. Set the shorter value to the safety cycle time.
C006H	Error 2 B1&B2	i_bS_Button1 was ON and i_bS_Button2 was also ON after 500ms in state 8005H or 8006H. This state is only possible when the states of the inputs (S_Button1 and S_Button2) change from divergent to convergent (both ON) simultaneously when the timer elapses (500ms) at the same cycle.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_TwoHand_Out: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8000H	Buttons Actuated	The both buttons actuated correctly. The safety output is enabled. • o_bReady: ON • o_bS_TwoHand_Out: ON • o_bError: OFF	None.
8001H	Init	The FB is active, but in the Init state. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Actuate i_bS_Button1 or i_bS_Button2.
8004H	Buttons Released	No button is actuated. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Actuate i_bS_Button1 or i_bS_Button2.
8005H	Button 1 Actuated	Only Button 1 is actuated. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button1, or actuate i_bS_Button2.
8006H	Button 2 Actuated	Only Button 2 is actuated. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button2, or actuate i_bS_Button1.
8007H	Button 2 Released	The safety output was enabled and is disabled again. i_bS_Button1 is ON and i_bS_Button2 is OFF after disabling the safety output. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button1.
8008H	Button 1 Released	The safety output was enabled and is disabled again. i_bS_Button1 is OFF and i_bS_Button2 is ON after disabling the safety output. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button2.
8009H	Locked Off	The safety output was enabled and is disabled again. i_bS_Button1 is ON and i_bS_Button2 is also ON after disabling the safety output. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	Release i_bS_Button1 and i_bS_Button2.
8019H	Locked On	Incorrect actuation of the buttons. Waiting for release of both buttons. • o_bReady: ON • o_bS_TwoHand_Out: OFF • o_bError: OFF	

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables




4.3 M+SF_EDM_R

Overview




Item	Description
Function name	External device monitor
Functional overview	This FB monitors connected actuators such as safety contactors and safety relays (contactors and relays with force-guided contacts) and controls outputs.
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> (1) — B: i_bActivate (2) — B: i_bS_OutControl (3) — B: i_bS_EDM1 (4) — B: i_bS_EDM2 (5) — D: i_dMonitoringTime (6) — B: i_bS_StartReset (7) — B: i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center;"> M+SF_EDM_R </div> <div style="margin-left: 20px;"> o_bReady: B — (8) o_bS_EDM_Out: B — (9) o_bError: B — (10) o_wDiagCode: W — (11) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_OutControl	Bit*	OFF	Control signal from the preceding safety FBs. Typical function block signals from the library (e.g., M+SF_ESTOP_R, M+SF_ESPE_R, and/or others). OFF: Disable safety output (o_bS_EDM_Out). ON: Enable safety output (o_bS_EDM_Out).
(3)	i_bS_EDM1	Bit*	OFF	Feedback signal of the first connected actuator. (NC contact) OFF: Feedback signals are set to OFF. ON: Feedback signals are set to ON.
(4)	i_bS_EDM2	Bit*	OFF	Feedback signal of the second connected actuator. (NC contact) OFF: Feedback signals are set to OFF. ON: Feedback signals are set to ON.
(5)	i_dMonitoringTime	Double word [signed]	0	Maximum permissible time (in increments of 10ms) from the status of whether o_bS_EDM_Out is ON or OFF until when i_bS_EDM1 and i_bS_EDM2 are set to ON or OFF correctly. Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)
(6)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(7)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(8)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(9)	o_bS_EDM_Out	Bit*	OFF	Controls the actuator. The result is monitored by feedback signals i_bS_EDM1 and i_bS_EDM2. OFF: Disable connected actuators. ON: Enable connected actuators.
(10)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(11)	o_wDiagCode	Word [signed]	0	D diagnostic code. For details, see the following.  Page 11 General Functions



WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details

Whether the i_bS_EDM1, i_bS_EDM2, and o_bS_EDM_Out are set to ON or OFF properly depends on the following conditions in the table below.

Variable name	Initial state (connected actuators not activated)	Connected actuators activated.
i_bS_EDM1, i_bS_EDM2	ON	OFF
o_bS_EDM_Out	OFF	ON

Set i_bS_EDM1 and i_bS_EDM2 to ON in the initial state. The connected actuator will be activated (o_bS_EDM_Out=ON) if i_bS_EDM1 and i_bS_EDM2 are set to ON when i_bS_OutControl is set to ON. (The connected actuator is changed to the error status if i_bS_EDM1 or i_bS_EDM2 is set to OFF.)

After the connected actuator is activated (o_bS_EDM_Out=ON), i_dMonitoringTime monitors that i_bS_EDM1 and i_bS_EDM2 are set to OFF. If i_bS_EDM1 and i_bS_EDM2 are not set to OFF after the i_dMonitoringTime period, the connected actuator will not be activated (o_bS_EDM_Out=OFF) and be changed to the error status.

After the connected actuator is not activated (o_bS_EDM_Out=OFF), i_dMonitoringTime monitors that i_bS_EDM1 and i_bS_EDM2 are set to ON. If i_bS_EDM1 and i_bS_EDM2 are not set to ON after the i_dMonitoringTime period, the connected actuator will be changed to the error status.




WARNING

- The actuators used in the safety function should be selected from the safety level specified in the risk analysis.
- For i_dMonitoringTime, select a proper value and verify it depending on the application of the user.

State diagram

State transition of M+SF_EDM_R

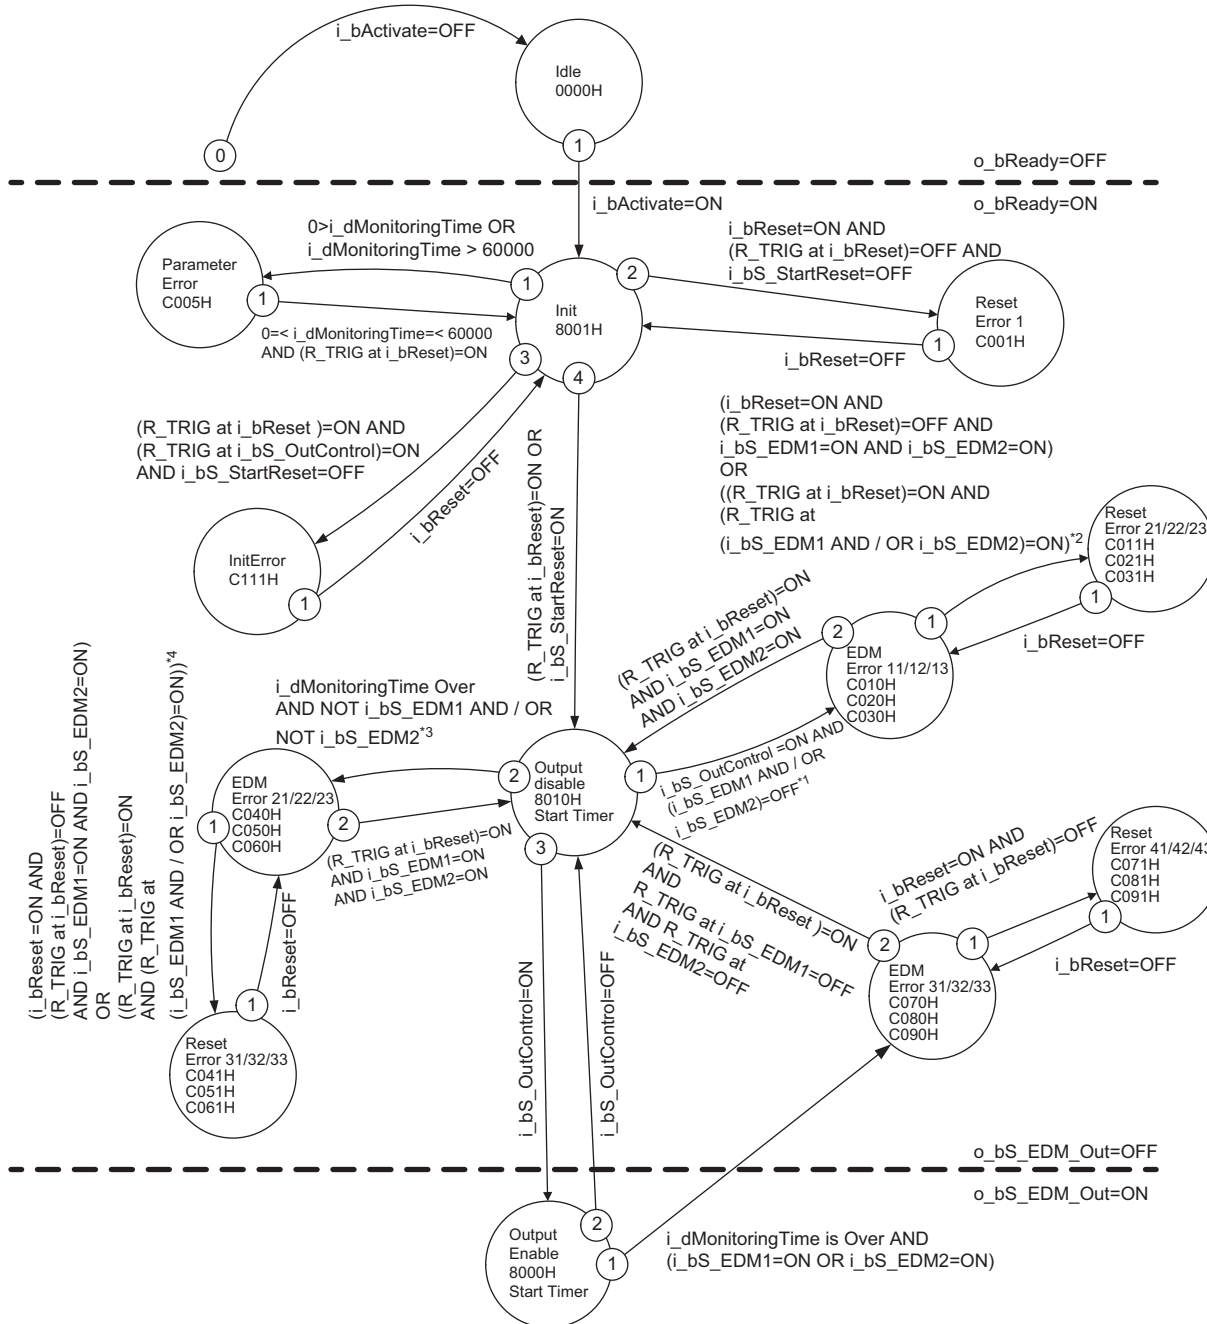

Note: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

*1 The following table lists the condition details on the transition from 8010H to C010H, C020H, or C030H.

State transition	Condition of transition
8010H → C010H	i_bS_OutControl=ON AND i_bS_EDM1=OFF
8010H → C020H	i_bS_OutControl=ON AND i_bS_EDM2=OFF
8010H → C030H	i_bS_OutControl=ON AND S_EDM2=OFF AND i_bS_EDM1=OFF

*2 The following table lists the condition details on the transition from C010H, C020H, C030H to C011H, C021H, or C031H.

State transition	Condition of transition
C010H → C011H	(i_bReset=ON AND (R_TRIG at i_bReset)=OFF AND i_bS_EDM1=ON AND i_bS_EDM2=ON) OR R_TRIG at i_bReset=ON AND R_TRIG at i_bS_EDM1=ON
C020H → C021H	(i_bReset=ON AND (R_TRIG at i_bReset)=OFF AND i_bS_EDM1=ON AND i_bS_EDM2=ON) OR R_TRIG at i_bReset=ON AND R_TRIG at i_bS_EDM2=ON
C030H → C031H	(i_bReset=ON AND (R_TRIG at i_bReset)=OFF AND i_bS_EDM1=ON AND i_bS_EDM2=ON) OR R_TRIG at i_bReset=ON AND R_TRIG at i_bS_EDM1=ON AND R_TRIG at i_bS_EDM2=ON

*3 The following table lists the condition details on the transition from 8010H to C040H, C050H, or C060H.


State transition	Condition of transition
8010H → C040H	i_dMonitoringTime Over AND i_bS_EDM1=OFF
8010H → C050H	i_dMonitoringTime Over AND i_bS_EDM2=OFF
8010H → C060H	i_dMonitoringTime Over AND i_bS_EDM2=OFF AND i_bS_EDM1=OFF

*4 The following table lists the condition details on the transition from C040H, C050H, or C060H to C041H, C051H, or C061H

State transition	Condition of transition
C040H → C041H	(i_bReset=ON AND (R_TRIG at i_bReset)=OFF AND i_bS_EDM1=ON AND i_bS_EDM2=ON) OR R_TRIG at i_bReset=ON AND R_TRIG at i_bS_EDM1=ON
C050H → C051H	(i_bReset=ON AND (R_TRIG at i_bReset)=OFF AND i_bS_EDM1=ON AND i_bS_EDM2=ON) OR R TRIG at i_bReset=ON AND R TRIG at i bS EDM2=ON
C060H → C061H	(i_bReset=ON AND (R_TRIG at i_bReset)=OFF AND i_bS_EDM1=ON AND i_bS_EDM2=ON) OR R_TRIG at i_bReset=ON AND R_TRIG at i_bS_EDM1=ON AND R_TRIG at i_bS_EDM2=ON

Typical timing diagram

■ For M+SF_EDM_R (i_bS_StartReset=OFF)

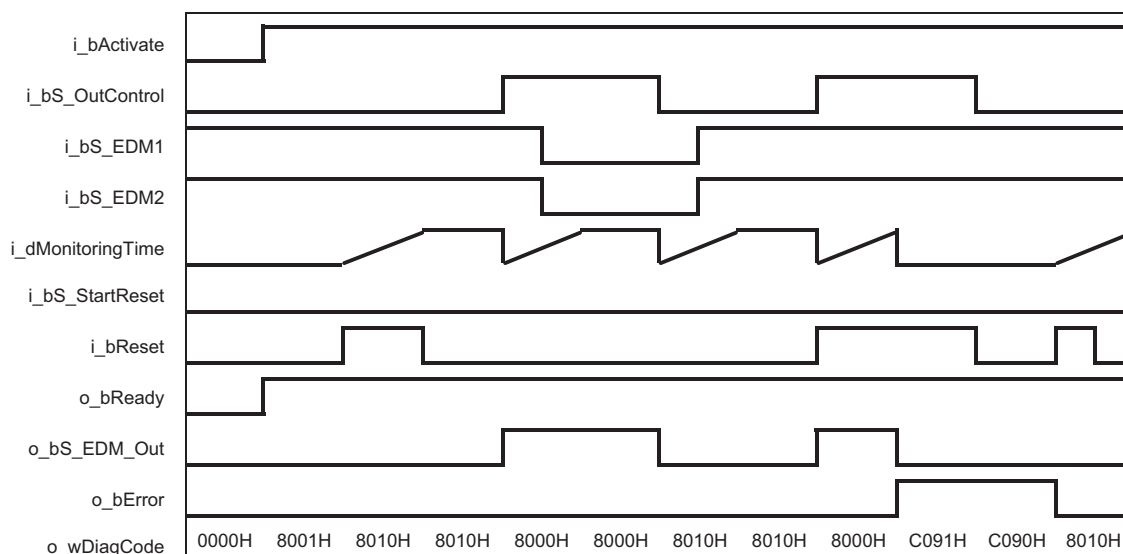

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dMonitoringTimer elapsed time is stopped. The measurement of the i_dMonitoringTimer elapsed time continues until the time configured in safety FB input signal "i_dMonitoringTime", even after i_bS_EDM1 and i_bS_EDM2 are set to ON or OFF properly according to the status of whether o_bS_EDM_Out is ON or OFF.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_EDM_Out	OFF
o_bError	ON

For the corrective actions, see the following.

☞ Page 27 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset signal in state 8001H.	Set i_bReset to OFF.
C005H	Parameter Error	The value of i_dMonitoringTime is out of range.	Set the value of i_dMonitoringTime within the range.
C011H	Reset Error 21/22/23	Static i_bReset signal or rising trigger at i_bS_EDM and i_bReset at the same time in state C010H/C020H/C030H.	Set i_bReset to OFF. Check the wiring of i_bReset and i_bS_EDM.
C021H			
C031H			
C041H	Reset Error 31/32/33	Static i_bReset signal or rising trigger at i_bS_EDM and i_bReset at the same time in state C040H/C050H/C060H.	
C051H			
C061H			
C071H	Reset Error 41/42/43	Static i_bReset signal in state C070H/C080H/C090H.	Set i_bReset to OFF.
C081H			
C091H			
C010H	EDM Error 11	The signal at i_bS_EDM1 is not valid in the initial actuator state. In state 8010H, i_bS_EDM1 signal is OFF when enabling i_bS_OutControl.	Set i_bS_EDM to ON (default value), and set i_bReset to ON.
C020H	EDM Error 12	The signal at i_bS_EDM2 is not valid in the initial actuator state. In state 8010H, i_bS_EDM2 signal is OFF when enabling i_bS_OutControl.	
C030H	EDM Error 13	The signals at i_bS_EDM1 and i_bS_EDM2 are not valid in the initial actuator states. In state 8010H, i_bS_EDM1 and i_bS_EDM2 signals are OFF when enabling i_bS_OutControl.	
C040H	EDM Error 21	The signal at i_bS_EDM1 is not valid in the initial actuator state. In state 8010H, i_bS_EDM1 signal is OFF and the monitoring time has elapsed.	
C050H	EDM Error 22	The signal at i_bS_EDM2 is not valid in the initial actuator state. In state 8010H, i_bS_EDM2 signal is OFF and the monitoring time has elapsed.	
C060H	EDM Error 23	The signals at i_bS_EDM1 and i_bS_EDM2 are not valid in the initial actuator states. In state 8010H, i_bS_EDM1 and i_bS_EDM2 signals are OFF and the monitoring time has elapsed.	
C070H	EDM Error 31	The signal at i_bS_EDM1 is not valid in the actuator switching state. In state 8000H, i_bS_EDM1 signal is ON and the monitoring time has elapsed.	Check a failure and the behavior of the actuator, the wiring, and the status of the safety remote I/O module. After the check, set i_bReset to ON.
C080H	EDM Error 32	The signal at i_bS_EDM2 is not valid in the actuator switching state. In state 8000H, i_bS_EDM2 signal is ON and the monitoring time has elapsed.	
C090H	EDM Error 33	The signals at i_bS_EDM1 and i_bS_EDM2 are not valid in the actuator switching state. In state 8000H, i_bS_EDM1 and i_bS_EDM2 signals are ON and the monitoring time has elapsed.	
C111H	Init Error	Similar signals at i_bS_OutControl and i_bReset (R_TRIG at same cycle) detected (maybe a programming error).	Check the wiring, and after the check, set i_bReset to ON.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_EDM_Out: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	The FB activation startup inhibit is active. (i_bS_Starti_bReset=OFF) • o_bReady: ON • o_bS_EDM_Out: OFF • o_bError: OFF	Set i_bReset to ON.
8010H	Output Disable	EDM control is not active. Timer starts when state is entered. • o_bReady: ON • o_bS_EDM_Out: OFF • o_bError: OFF	Set i_bS_OutControl to ON.
8000H	Output Enable	EDM control is active. Timer starts when state is entered. • o_bReady: ON • o_bS_EDM_Out: OFF • o_bError: OFF	None.



WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset

4.4 M+SF_ENBLSW_R

Overview

Item	Description
Function name	Enable switch
Functional overview	This FB evaluates the signals of an enable switch with three positions.
Symbol	<div><div>M+SF_ENBLSW_R</div><div><div>(1) — B: i_bActivate</div><div>(2) — B: i_bS_SafetyActive</div><div>(3) — B: i_bS_EnableSwCh1</div><div>(4) — B: i_bS_EnableSwCh2</div><div>(5) — B: i_bS_AutoReset</div><div>(6) — B: i_bReset</div><div>o_bReady: B — (7)</div><div>o_bS_EnableSw_Out: B — (8)</div><div>o_bError: B — (9)</div><div>o_wDiagCode: W — (10)</div></div></div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following. ☞ Page 11 General Functions
(2)	i_bS_SafetyActive	Bit*	OFF	Confirmation of the safe mode (limitation of the speed or the power of motion, limitation of the range of motion). OFF: Safe mode is not active. ON: Safe mode is active.
(3)	i_bS_EnableSwCh1	Bit*	OFF	Signal of contacts E1 and E2 of the connected enable switch. (☞ Page 30 FB details) OFF: Contacts E1 and E2 signals are set to OFF. ON: Contacts E1 and E2 signals are set to ON.
(4)	i_bS_EnableSwCh2	Bit*	OFF	Signal of contacts E3 and E4 of the connected enable switch. (☞ Page 30 FB details) OFF: Contacts E3 and E4 signals are set to OFF. ON: Contacts E3 and E4 signals are set to ON.
(5)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal reset to ON. For details, see the following. ☞ Page 11 General Functions
(6)	i_bReset	Bit	OFF	Reset input. For details, see the following. ☞ Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(7)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following. ☞ Page 11 General Functions
(8)	o_bS_EnableSw_Out	Bit*	OFF	Safety output. OFF: Disables manual operation using enable switches. ON: Enables manual operation using enable switches.
(9)	o_bError	Bit	OFF	Error flag. For details, see the following. ☞ Page 11 General Functions
(10)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following. ☞ Page 11 General Functions



WARNING

Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.

FB details

This FB supports the function that enables manual operations by selecting the operating mode (*i_bS_SafetyActive* is set to ON) and using enable switches with three positions. The operating mode must be selected outside this FB. The status of enable switch contacts (The contact E1+E2 must be connected to *i_bS_EnableSwCh1*. The contact E3+E4 must be connected to *i_bS_EnableSwCh2*.) is monitored and position change and the current position of enable switches are detected. The manual operation can be enabled by this FB whose *o_bS_EnableSw_Out* is set to ON, after a move from position 1 to position 2. With other switching directions or positions, the manual operation is not enabled when *o_bS_EnableSw_Out* is OFF.

Status of enable switch contacts	Position 1 (Not pressed)	Position 2 (Mid position)	Position 3 (Past mid position)
Contacts E1+E2 status	OFF	ON	OFF
Contacts E3+E4 status	ON	ON	OFF

When returning from position 3 to position 1, the enabling function is not activated. The status of the contacts E1+E2 set to ON and contacts E3+E4 set to OFF does not exist as a contact status for the enable switch with three positions. If the status is detected, the status refers to position 3.




WARNING

In order to meet the requirements of IEC 60204 Section 9.2.4, the user shall use a suitable switching device. In addition, the user must ensure that the relevant operating mode (IEC 60204 Section 9.2.3) is selected in the application. (Automatic operation must be disabled in this operating mode using appropriate measures).

State diagram


State transition of M+SF_ENBLSW_R

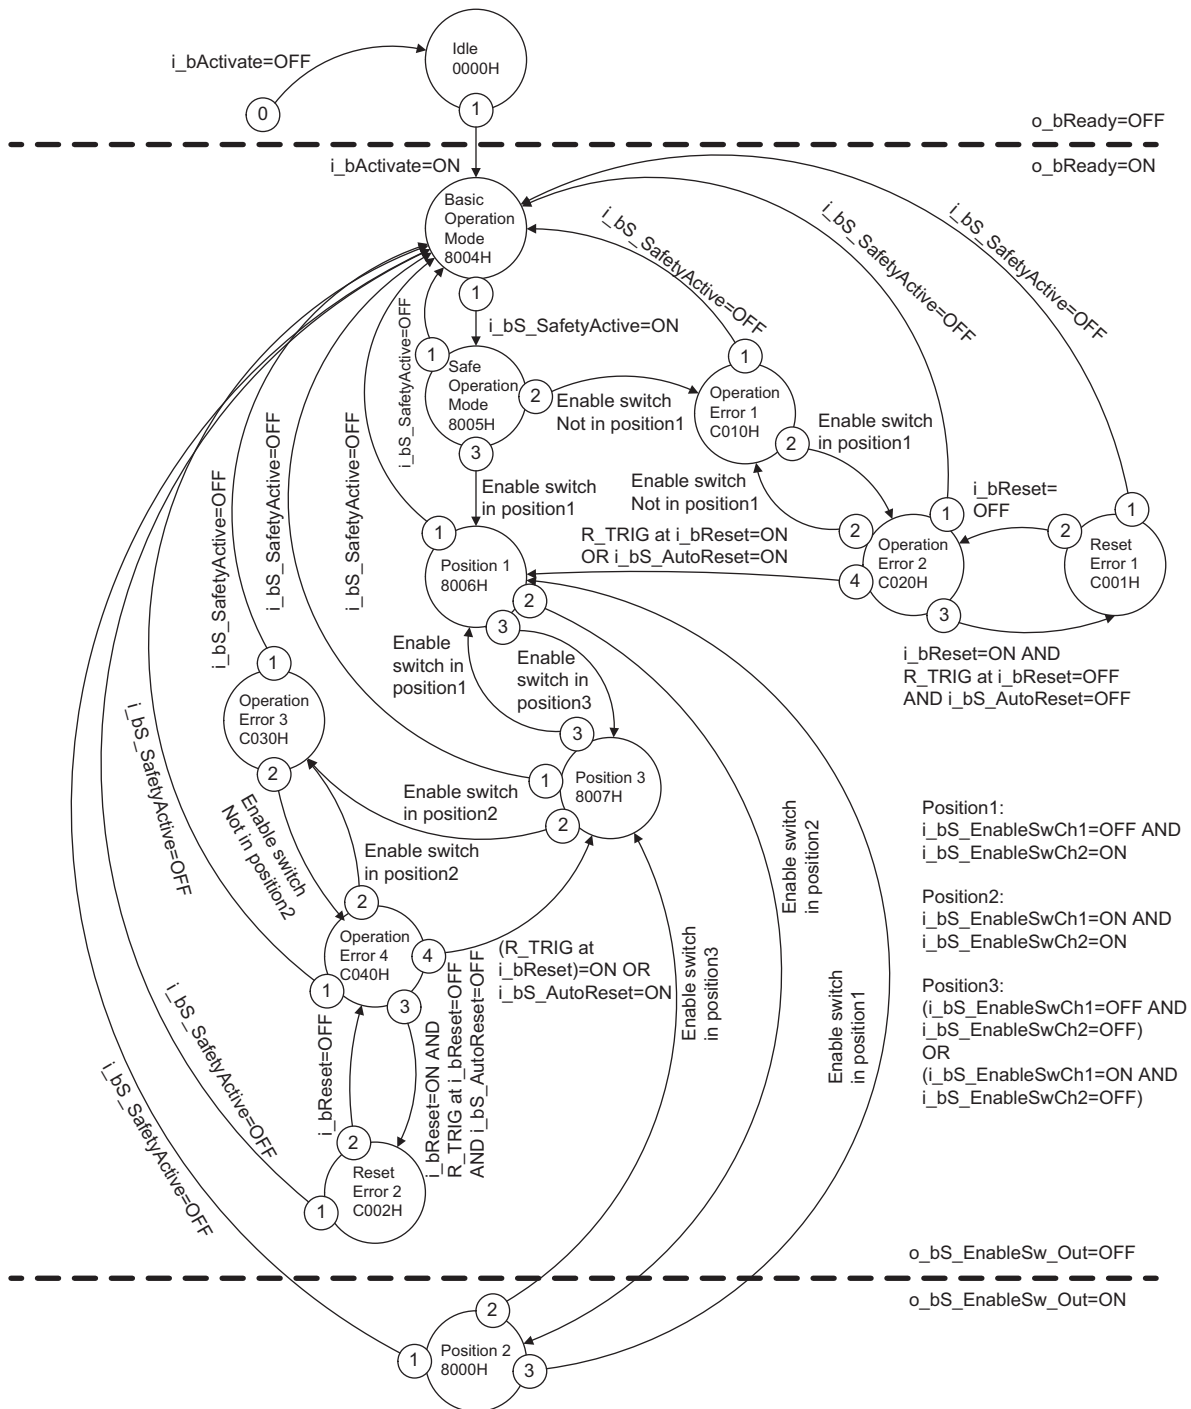


Note: The transition from any state to the Idle state due to `i_bActivate=OFF` is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_ENBLSW_R (i_bS_AutoReset=OFF)

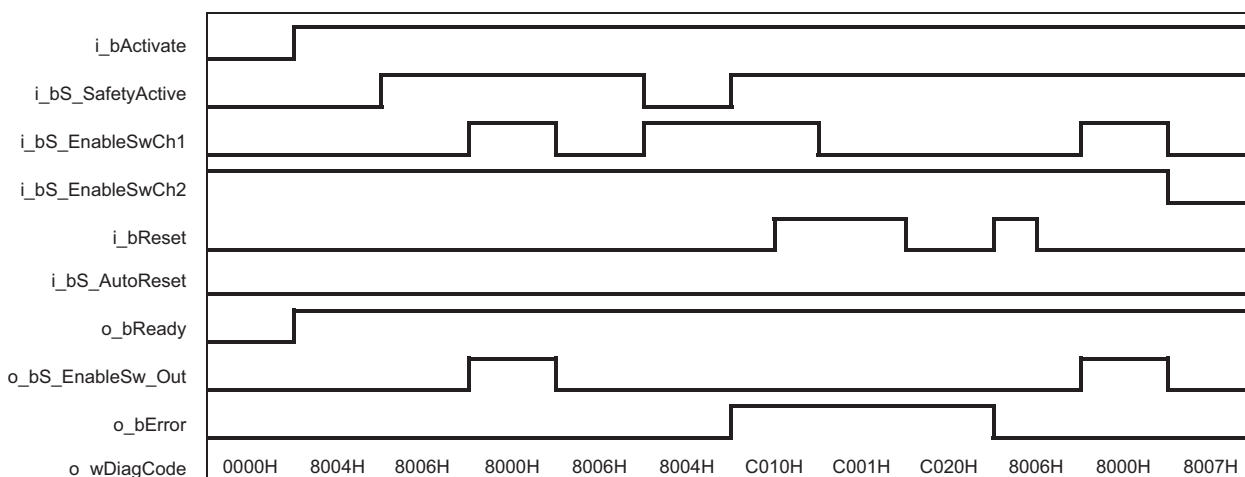

■ For M+SF_ENBLSW_R (i_bS_AutoReset=ON)

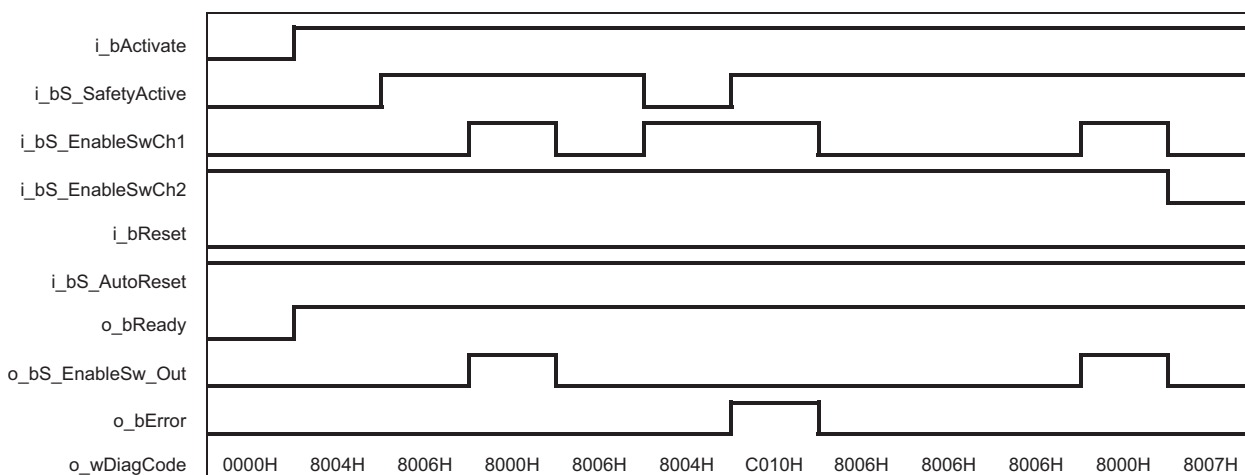

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_EnableSw_Out	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 33 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset signal detected in state C020H.	Set i_bReset to OFF.
C002H	Reset Error 2	Static i_bReset signal detected in state C040H.	Check the wiring and devices related to i_bReset signal. Set i_bS_SafetyActive to OFF.
C010H	Operation Error 1	Enable switch not in position 1 during activation of i_bS_SafetyActive.	Set the switch to position 1, and set i_bS_SafetyActive to OFF.
C020H	Operation Error 2	Enable switch in position 1 after C010H.	Set the switch to position 1, and set i_bS_SafetyActive to OFF or set i_bReset to ON.
C030H	Operation Error 3	Enable switch in position 2 after position 3.	
C040H	Operation Error 4	Enable switch not in position 2 after C030H.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_EnableSw_Out: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8004H	Basic Operation Mode	Safe operation mode is not active. • o_bReady: ON • o_bS_EnableSw_Out: OFF • o_bError: OFF	Activate the safe operation mode by setting i_bS_SafetyActive to ON.
8005H	Safe Operation Mode	Safe operation mode is active. • o_bReady: ON • o_bS_EnableSw_Out: OFF • o_bError: OFF	Set the switch to position 1. Check a failure of the enable switch, wiring, and state of the safety remote I/O module.
8006H	Position 1	Safe operation mode is active and the enable switch is in position 1. • o_bReady: ON • o_bS_EnableSw_Out: OFF • o_bError: OFF	Set the switch to position 2.
8007H	Position 3	Safe operation mode is active and the enable switch is in position 3. • o_bReady: ON • o_bS_EnableSw_Out: OFF • o_bError: OFF	Set the switch to position 1, or i_bS_SafetyActive to OFF.
8000H	Position 2	Safe operation mode is active and the enable switch is in position 2. • o_bReady: ON • o_bS_EnableSw_Out: ON • o_bError: OFF	None.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_AutoReset

4.5 M+SF_ESPE_R

Overview

Item	Description
Function name	Light curtain (ESPE)
Functional overview	This FB is a safety-related FB for monitoring electro-sensitive protective equipment (ESPE). This FB can be used for emergency switch off functionality (stop category 0).
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> (1) — B: i_bActivate (2) — B: i_bS_ESPE_In (3) — B: i_bS_StartReset (5) — B: i_bS_AutoReset (5) — B: i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center; flex-grow: 1;"> M+SF_ESPE_R </div> <div style="margin-left: 20px;"> o_bReady: B — (6) o_bS_ESPE_Out: B — (7) o_bError: B — (8) o_wDiagCode: W — (9) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following. Page 11 General Functions
(2)	i_bS_ESPE_In	Bit*	OFF	The input signal from ESPE. OFF: The input signal from i_bS_ESPE_In is set to OFF. (Example: Light shielding of light curtain) ON: The input signal from i_bS_ESPE_In is set to ON. (Example: Light passing through light curtain)
(3)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following. Page 11 General Functions
(4)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal (i_bS_ESPE_In) reset to ON. For details, see the following. Page 11 General Functions
(5)	i_bReset	Bit	OFF	Reset input. For details, see the following. Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(6)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following. Page 11 General Functions
(7)	o_bS_ESPE_Out	Bit*	OFF	Safety output OFF: Safety output disabled. ON: Safety output enabled.
(8)	o_bError	Bit	OFF	Error flag. For details, see the following. Page 11 General Functions
(9)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following. Page 11 General Functions



WARNING

Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.

FB details


This FB is a safety-related FB for monitoring ESPE. The function is identical to S+ESTOP. o_bS_ESPE_Out output signal is set to OFF as soon as i_bS_ESPE_In input is set to OFF. o_bS_ESPE_Out output signal is set to ON only if i_bS_ESPE_In input is set to ON and a reset occurs. If the automatic reset is selected for i_bS_StartReset and i_bS_AutoReset, reset is not required.

WARNING

- The enable signal (o_bS_ESPE_Out) may only control the process directly if this does not adversely affect the safety function. In this regard, validate the entire path of the safety function, including the startup behavior of the process to be controlled.
- The ESPE must be selected in respect of the product standards IEC 61496-1, -2 and -3 and ISO13849-1.

State diagram


State transition of M+SF_ESPE_R

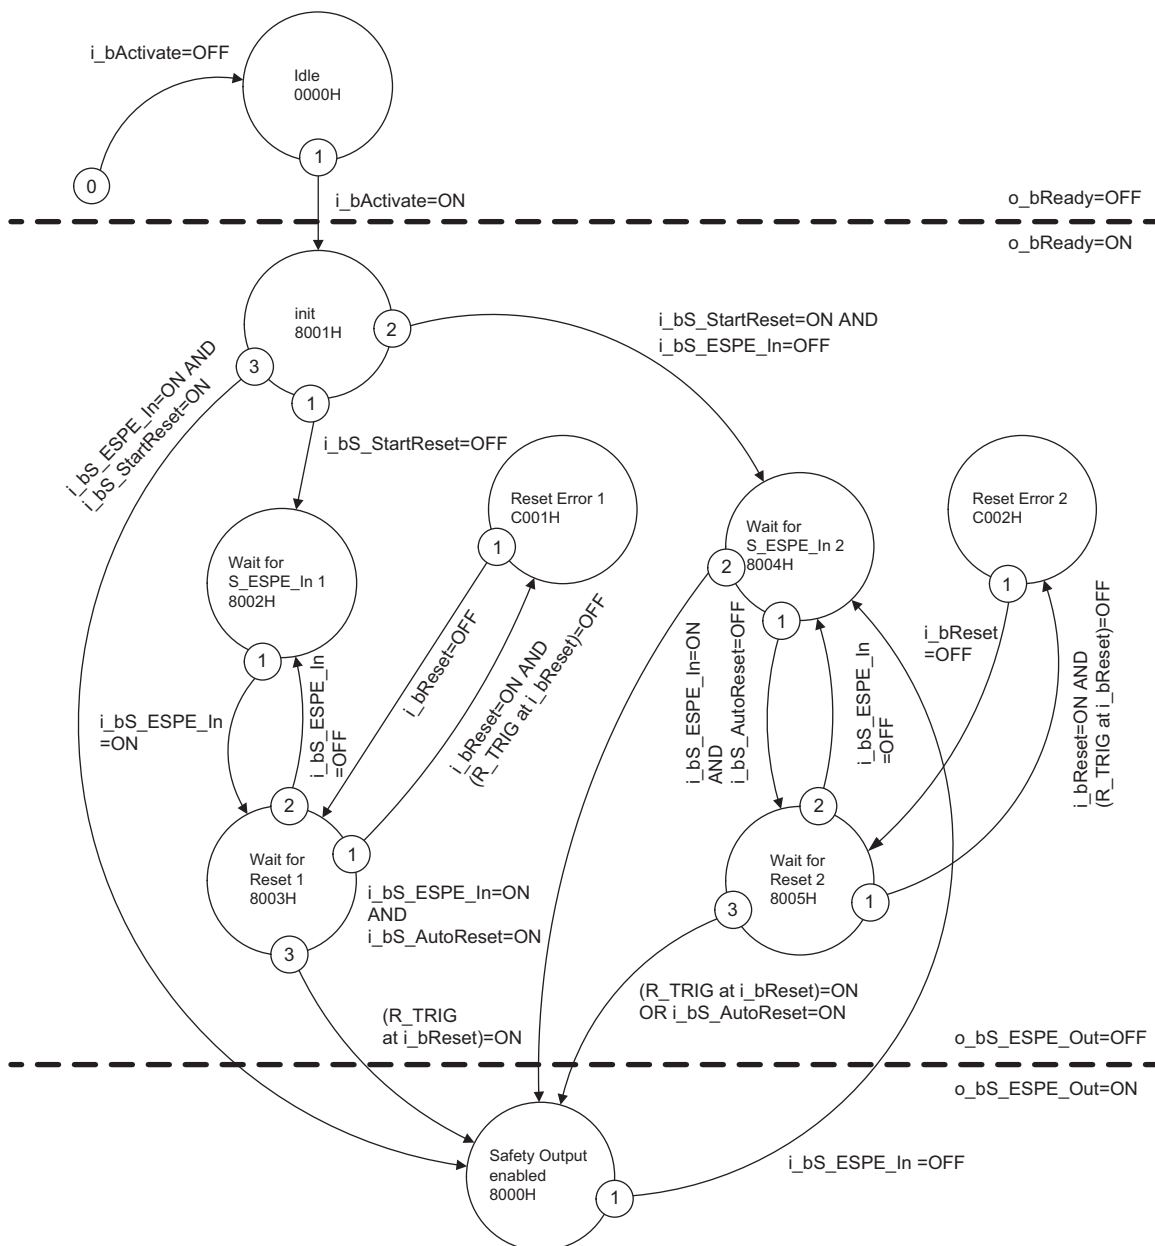

Note: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_ESPE_R (i_bS_StartReset=OFF, i_bS_AutoReset=OFF)

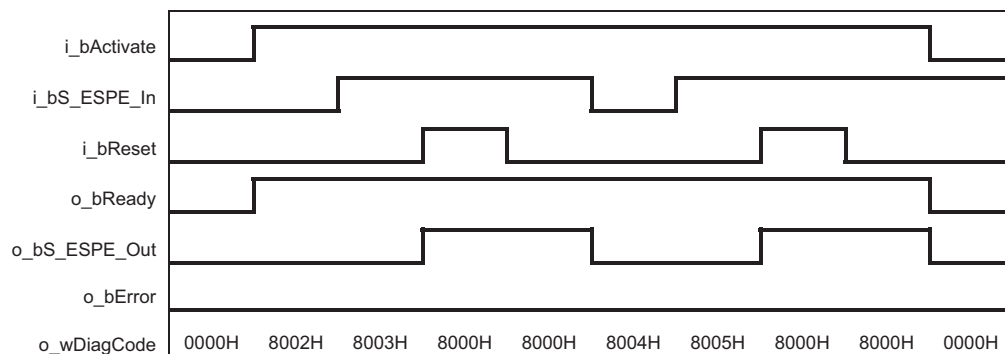

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_ESPE_Out	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 36 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	i_bReset is ON while waiting for i_bS_ESPE_In=ON.	Set i_bReset to OFF.
C002H	Reset Error 2	i_bReset is ON while waiting for i_bS_ESPE_In=ON.	Check the devices and wiring related to i_bReset.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) All outputs are set to OFF. Set o_wDiagCode to 0. • o_bReady: OFF • o_bS_ESPE_Out: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	Activation is ON. The FB was enabled. • o_bReady: ON • o_bS_ESPE_Out: OFF • o_bError: OFF	Wait for i_bS_ESPE_In=ON.
8002H	Wait for S_ESPE_In 1	The safety function is active. (i_bS_StartReset=OFF) • o_bReady: ON • o_bS_ESPE_Out: OFF • o_bError: OFF	
8003H	Wait for Reset 1	Activation is ON. i_bS_ESPE_In=ON (i_bS_StartReset=OFF) • o_bReady: ON • o_bS_ESPE_Out: OFF • o_bError: OFF	Wait for a rising trigger of i_bReset.
8004H	Wait for S_ESPE_In 2	The safety function is active. (i_bS_StartReset=ON) • o_bReady: ON • o_bS_ESPE_Out: OFF • o_bError: OFF	Wait for i_bS_ESPE_In=ON.
8005H	Wait for Reset 2	The safety function is active. i_bS_ESPE_In=ON • o_bReady: ON • o_bS_ESPE_Out: OFF • o_bError: OFF	Wait for a rising trigger of i_bReset.
8000H	Safety Output Enabled	The safety function is not active. The safety input and the safety output is ON. • o_bReady: ON • o_bS_ESPE_Out: ON • o_bError: OFF	None.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset and i_bS_AutoReset





4.6 M+SF_ESTOP_R

Overview




Item	Description
Function name	Emergency stop
Functional overview	This FB is a safety-related FB for monitoring an emergency stop button. This FB can be used for emergency switch off functionality (stop category 0).
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> (1) — B: i_bActivate (2) — B: i_bS_EStopIn (3) — B: i_bS_StartReset (4) — B: i_bS_AutoReset (5) — B: i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center; flex-grow: 1;"> M+SF_ESTOP_R </div> <div style="margin-left: 10px;"> o_bReady: B — (6) o_bS_EStop_Out: B — (7) o_bError: B — (8) o_wDiagCode: W — (9) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_EStopIn	Bit*	OFF	The input signal from an emergency stop button. OFF: The input signal from an emergency stop button is set to OFF. (An emergency stop button is engaged.) ON: The input signal from an emergency stop button is set to ON. (An emergency stop button is not engaged.)
(3)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(4)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal reset to ON. For details, see the following.  Page 11 General Functions
(5)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(6)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(7)	o_bS_EStop_Out	Bit*	OFF	Safety output. OFF: Safety output disabled. ON: Safety output enabled.
(8)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(9)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions

WARNING

Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.

FB details


o_bS_EStop_Out output signal is set to OFF as soon as i_bS_EStopIn input is set to OFF. o_bS_EStop_Out output signal is set to ON only if i_bS_EStopIn input is set to ON and a reset occurs. If the automatic reset is selected for i_bS_StartReset and i_bS_AutoReset, reset is not required.

WARNING

The signal (o_bS_EStop_Out) may only control the process directly if this does not adversely affect the safety function. In this regard, validate the entire path of the safety function, including the startup behavior of the process to be controlled.

State diagram


State transition of M+SF_ESTOP_R

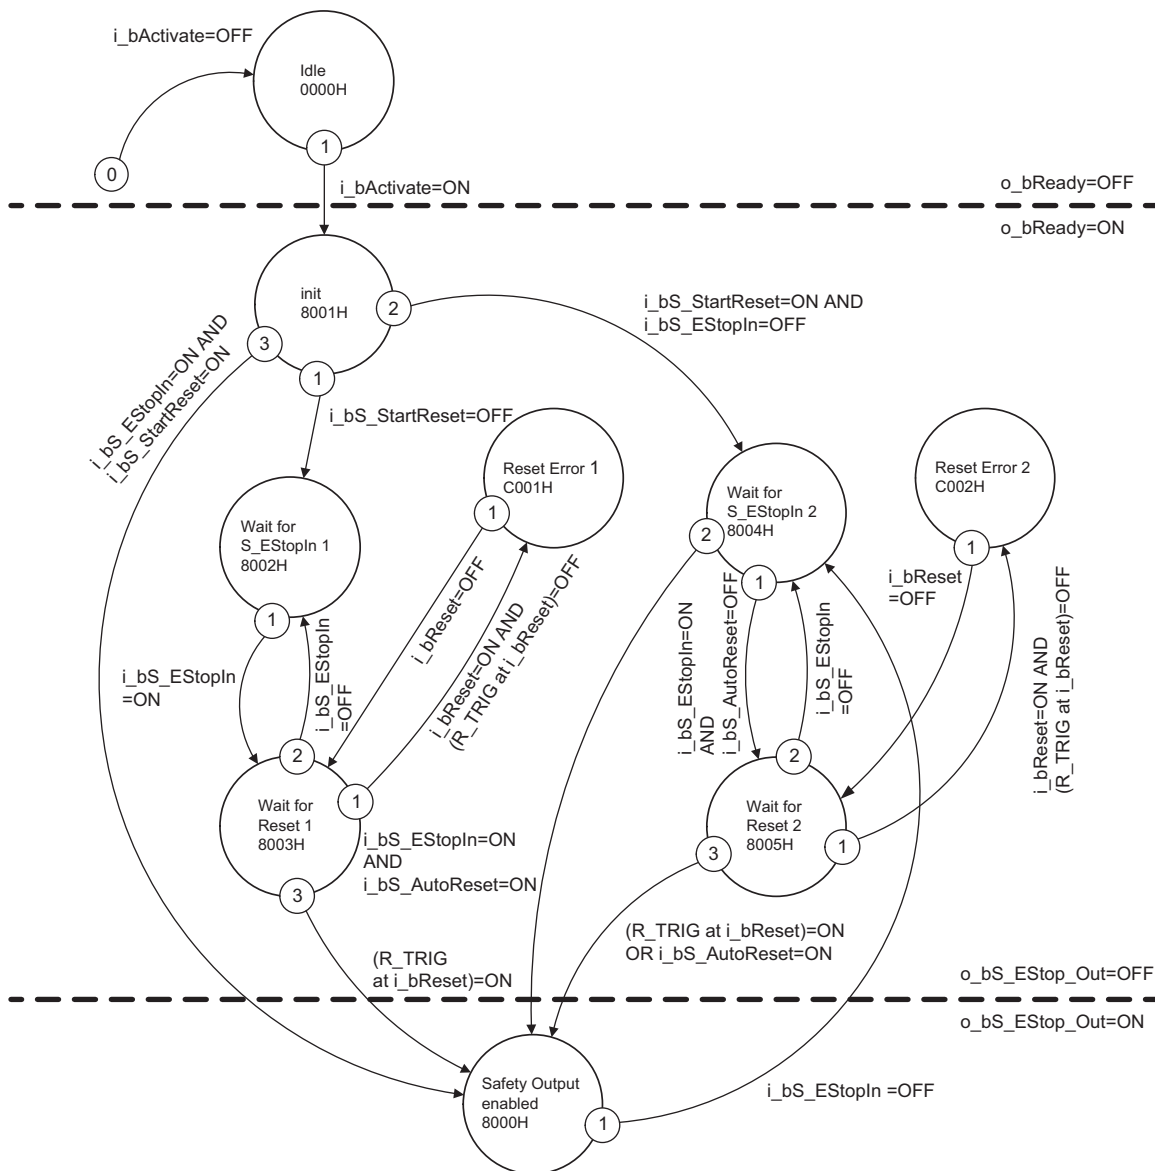


Note: The transition from any state to the Idle state due to *i_bActivate=OFF* is not shown. However these transitions have the highest priority (0).

Typical timing diagram


■ For M+SF_ESTOP_R (i_bS_StartReset=OFF, i_bS_AutoReset=OFF)

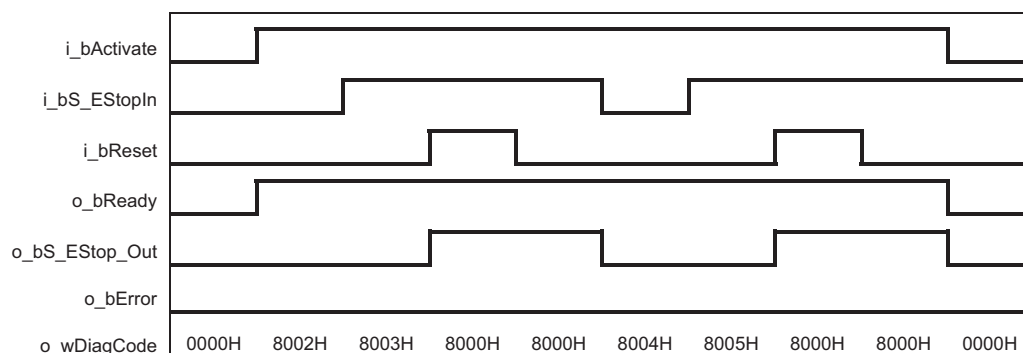

■ For M+SF_ESTOP_R (i_bS_StartReset=ON, i_bS_AutoReset=OFF)

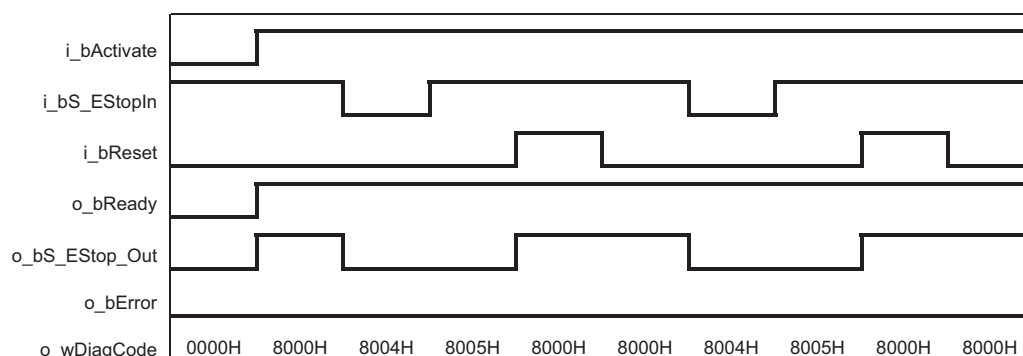

■ For M+SF_ESTOP_R (i_bS_StartReset=OFF, i_bS_AutoReset=ON)

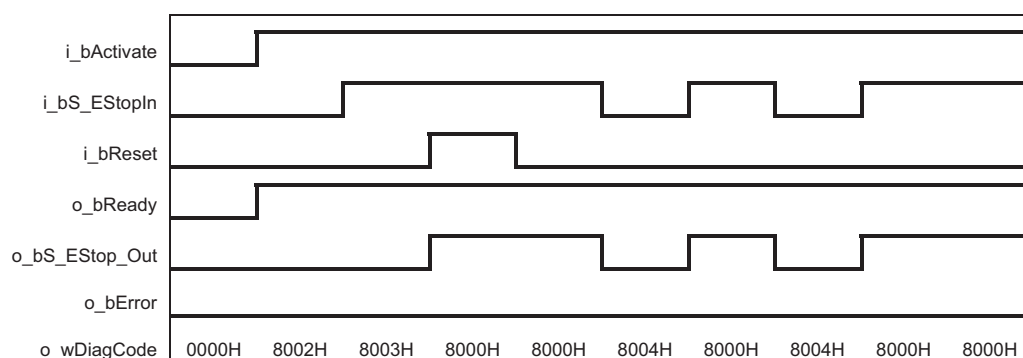

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_EStop_Out	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 41 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	i_bReset is ON while waiting for i_bS_EStopIn=ON.	Set i_bReset to OFF. Check the devices and wiring related to i_bReset.
C002H	Reset Error 2	i_bReset is ON while waiting for i_bS_EStopIn=ON.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) All outputs are set to OFF. Set o_wDiagCode to 0. • o_bReady: OFF • o_bS_EStop_Out: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	Activation is ON. The FB was enabled. • o_bReady: ON • o_bS_EStop_Out: OFF • o_bError: OFF	Wait for i_bS_EStopIn=ON.
8002H	Wait for S_EStopIn 1	The safety function is active. (i_bS_StartReset=OFF) • o_bReady: ON • o_bS_EStop_Out: OFF • o_bError: OFF	
8003H	Wait for Reset 1	The safety function is active. i_bS_EStopIn=ON (i_bS_StartReset=OFF) • o_bReady: ON • o_bS_EStop_Out: OFF • o_bError: OFF	Wait for a rising trigger of i_bReset.
8004H	Wait for S_EStopIn 2	The safety function is active. (i_bS_StartReset=ON) • o_bReady: ON • o_bS_EStop_Out: OFF • o_bError: OFF	Wait for i_bS_EStopIn=ON.
8005H	Wait for Reset 2	The safety function is active. • o_bReady: ON • o_bS_EStop_Out: OFF • o_bError: OFF	Wait for a rising trigger of i_bReset.
8000H	Safety Output Enabled	The safety function is not active. The safety input and the safety output is ON. • o_bReady: ON • o_bS_EStop_Out: ON • o_bError: OFF	None.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset and i_bS_AutoReset





4.7 M+SF_GLOCK_R

Overview




Item	Description
Function name	Guard lock and interlocking
Functional overview	This FB controls an entrance to a hazardous area via an interlocking guard with guard locking ("four state interlocking").
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> (1) — B: i_bActivate (2) — B: i_bS_GuardMon (3) — B: i_bS_SafetyActive (4) — B: i_bS_GuardLock (5) — B: i_bUnlockRequest (6) — B: i_bS_StartReset (7) — B: i_bS_AutoReset (8) — B: i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center; flex-grow: 1;"> M+SF_GLOCK_R </div> <div style="margin-left: 20px;"> o_bReady: B — (9) o_bS_GuardLocked: B — (10) o_bS_UnlockGuard: B — (11) o_bError: B — (12) o_wDiagCode: W — (13) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_GuardMon	Bit*	OFF	Monitors the guard interlocking. OFF: Guard open. ON: Guard closed.
(3)	i_bS_SafetyActive	Bit*	OFF	Status of the hazardous area, e.g., based on speed monitoring or safe time off delay. OFF: Machine in "non-safe" state. ON: Machine in safe state.
(4)	i_bS_GuardLock	Bit*	OFF	Status of the mechanical guard locking OFF: Guard is not locked. ON: Guard is locked.
(5)	i_bUnlockRequest	Bit	OFF	Operator intervention - request to unlock the guard. OFF: No request. ON: Request made.
(6)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(7)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal reset to ON. For details, see the following.  Page 11 General Functions
(8)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions Also used to request the guard to be locked again. The quality of the signal must conform to a manual reset device.

■ Output labels

No.	Variable name	Data type	Default value	Description
(9)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(10)	o_bS_GuardLocked	Bit*	OFF	Interface to hazardous area which must be stopped. OFF: No safe state. ON: Safe state. (The guard is closed and locked, so that the machine can be operated.)
(11)	o_bS_UnlockGuard	Bit*	OFF	Signal to unlock the guard. OFF: Close guard. ON: Unlock guard.
(12)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(13)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions



WARNING

Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.


FB details

This FB controls the guard lock and monitors the position of the guard and the lock. This FB can be used with a mechanical locked switch. The operator requests to get access to the hazardous area. The guard can only be unlocked when the hazardous area is in a safe state. The guard can be locked if the guard is closed. The machine can be started when the guard is closed and the guard is locked. An open guard or unlocked guard will be detected in the event of a safety-critical situation.

Ex.


Operation sequence for guardlock

No.	I/O	Operation
Sequence 1	—	Request to get the hazardous area to a safe state - not part of this FB
Sequence 2	In	Feedback from applicable hazardous area that it is in a safe state (via i_bS_SafetyActive)
Sequence 3	In	Operator request to unlock the guard (i_bUnlockRequest input=ON)
Sequence 4	Out	Output the signal unlocking the guard to the switch (by setting o_bS_UnlockGuard to ON).
Sequence 5	In	The signal that enables the guard to be unlocked is input from the switch (by setting i_bS_GuardLock input to OFF), which enables the guard to be opened. (o_bS_GuardLocked is set to OFF)
Sequence —	—	Operator opens the guard.
Sequence 6	In	Check if the guard is closed again. (by setting i_bS_GuardMon to ON)
Sequence 7	In	Feedback from operator to restart the hazardous area (i_bUnlockRequest)
Sequence 8	Out	Lock the guard. (o_bS_UnlockGuard)
Sequence 9	In	Check if guard is locked. (i_bS_GuardLock)
Sequence 10	Out	Hazardous area can operate again. (o_bS_GuardLocked=ON) (If i_bS_AutoReset is OFF, reset is required with i_bReset input.)
Sequence 11	—	Restart the operation in the hazardous area.

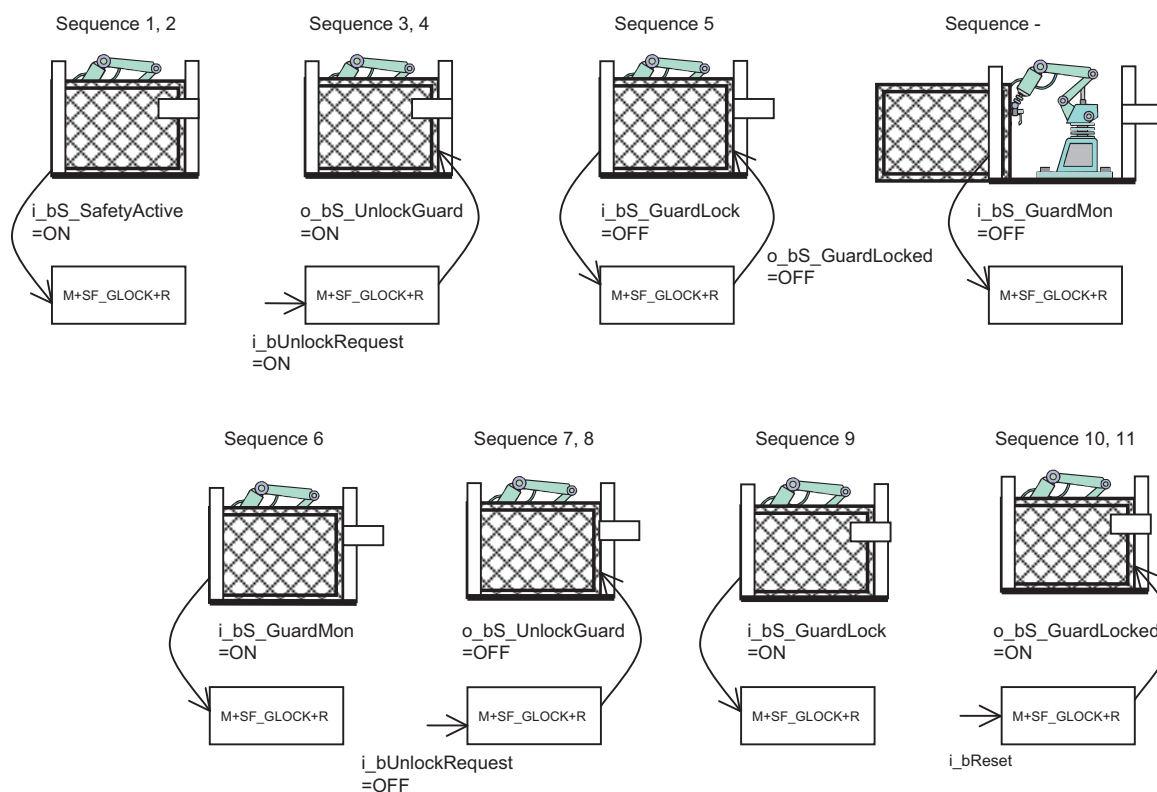

State diagram


State transition of M+SF_GLOCK_R

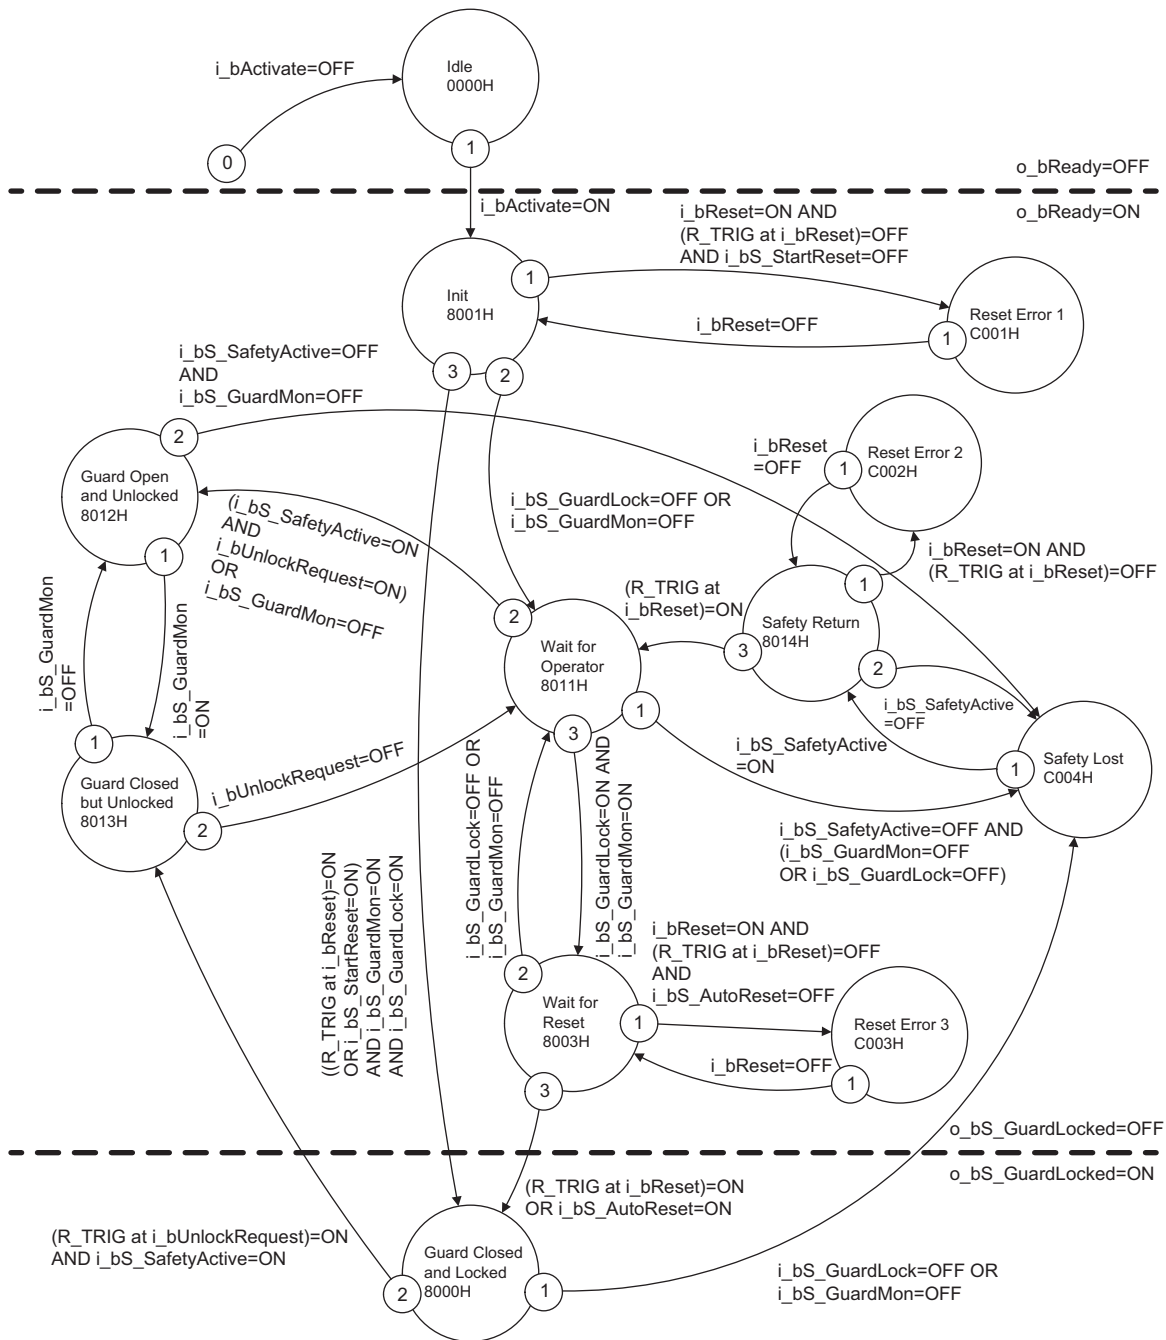

Note: The transition from any state to the Idle state due to $i_bActivate=OFF$ is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_GLOCK_R

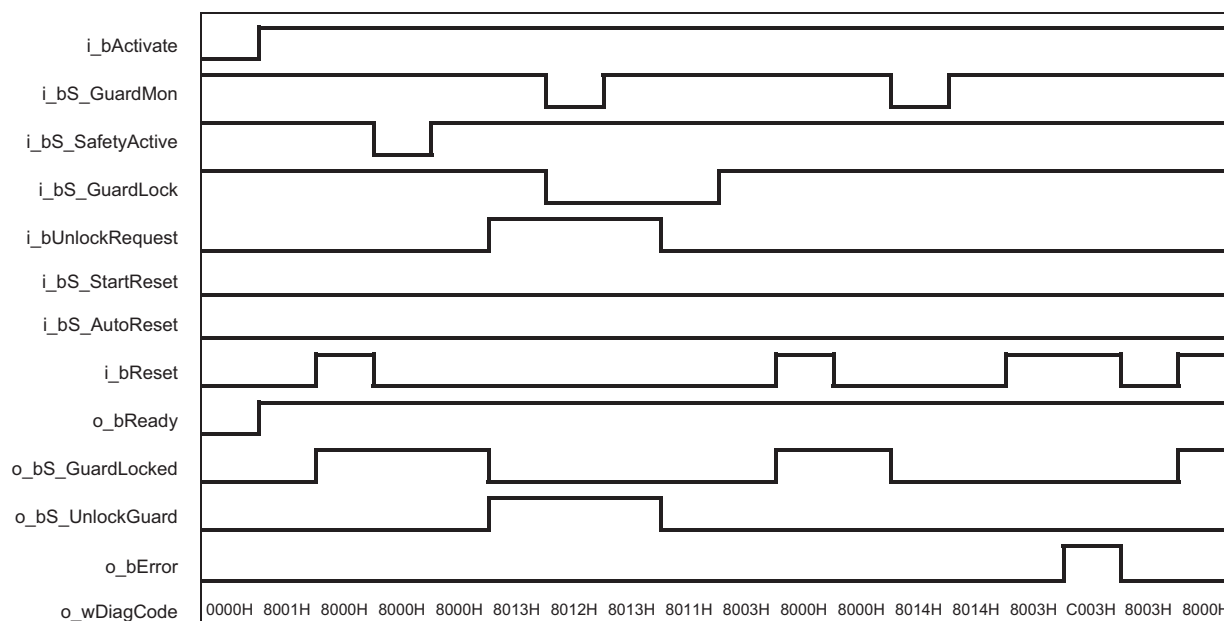

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_GuardLocked	OFF
o_bS_UnlockGuard	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 46 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset detected in state 8001H. (i_bS_StartReset=OFF)	Set i_bReset to OFF. Check the devices and wiring of i_bReset.
C002H	Reset Error 2	Static i_bReset detected in state 8014H.	
C003H	Reset Error 3	Static i_bReset detected in state 8003H.	
C004H	Safety Lost	Safety lost, guard opened or guard unlocked.	Set i_bS_SafetyActive to ON and set i_bReset to ON. Check the hazardous area is in a safe state.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (initial state) • o_bReady: OFF • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8000H	Guard Closed and Locked	Guard is locked. The safety function is not requested for the machine in a safe area. The machine can be operated normally in the safe area. • o_bReady: ON • o_bS_GuardLocked: ON • o_bS_UnlockGuard: OFF • o_bError: OFF	None.
8001H	Init	The FB was activated and initiated. • o_bReady: ON • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: OFF • o_bError: OFF	Close and lock the guard, and set i_bReset to ON.
8003H	Wait for Reset	Door is closed and locked, now waiting for operator reset. • o_bReady: ON • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: OFF • o_bError: OFF	Set i_bReset to ON.
8011H	Wait for Operator	Waiting for operator to either unlock request or reset. • o_bReady: ON • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: OFF • o_bError: OFF	Close and lock the guard, and set i_bReset to ON. Or, release the lock.
8012H	Guard Open and Unlocked	Lock is released and guard is open. • o_bReady: ON • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: ON • o_bError: OFF	Close the guard.
8013H	Guard Closed but Unlocked	Lock is released but guard is closed. • o_bReady: ON • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: ON • o_bError: OFF	Lock the guard.
8014H	Safety Return	Return of i_bS_SafetyActive signal, now waiting for operator acknowledge. • o_bReady: ON • o_bS_GuardLocked: OFF • o_bS_UnlockGuard: OFF • o_bError: OFF	Set i_bReset to ON.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset and i_bS_AutoReset





4.8 M+SF_GMON_R

Overview




Item	Description
Function name	Guard monitoring
Functional overview	This FB monitors the relevant safety guard. There are two independent input parameters for two switches at the safety guard coupled with a time difference (i_dMonitoringTime) for closing the guard.
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> (1) — B :i_bActivate (2) — B :i_bS_GuardSwitch1 (3) — B :i_bS_GuardSwitch2 (4) — D :i_dDiscrepancyTime (5) — B :i_bS_StartReset (6) — B :i_bS_AutoReset (7) — B :i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center;"> M+SF_GMON_R </div> <div style="margin-left: 20px;"> o_bReady: B — (8) o_bS_GuardMon: B — (9) o_bError: B — (10) o_wDiagCode: W — (11) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_GuardSwitch1	Bit*	OFF	Guard switch1 input. OFF: Guard is open. ON: Guard is closed.
(3)	i_bS_GuardSwitch2	Bit*	OFF	Guard switch2 input. OFF: Guard is open. ON: Guard is closed.
(4)	i_dDiscrepancyTime	Double word [signed]	0	Configures the monitored discrepancy time between i_bS_GuardSwitch1 and i_bS_GuardSwitch2 (in increments of 10ms) for closing the guard. Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)
(5)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(6)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal reset to ON. For details, see the following.  Page 11 General Functions
(7)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(8)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(9)	o_bS_GuardMon	Bit*	OFF	Output indicating the status of the guard. OFF: Guard is not active. ON: Both i_bS_GuardSwitches are ON, no error and acknowledgment. Guard is active.
(10)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(11)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions

WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
 - A safety program is executed as a fixed scan execution type program.
 - A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.
-

FB details

The FB requires two inputs indicating the guard position for safety guards with two switches (according to ISO14119), i_dDiscrepancyTime input and i_bReset input. If the safety guard has only one switch, i_bS_GuardSwitch1 and i_bS_GuardSwitch2 inputs must be the same signal. The monitoring time (i_dDiscrepancyTime) is the maximum time required for both switches to respond when closing the safety guard.


When opening the safety guard, both i_bS_GuardSwitch1 and i_bS_GuardSwitch2 inputs should switch to OFF. o_bS_GuardMon output switches to OFF as soon as one of the switches is set to OFF. When closing the safety guard, both i_bS_GuardSwitch1 and i_bS_GuardSwitch2 inputs should switch to ON. This FB monitors the symmetry of the switching behavior of both switches. o_bS_GuardMon output remains OFF if only one of the contacts has completed an open/close process. The behavior of o_bS_GuardMon output depends on the time difference between the switching inputs. The discrepancy time is monitored as soon as the values of both i_bS_GuardSwitch1/i_bS_GuardSwitch2 inputs differ. If i_dDiscrepancyTime has elapsed, but the inputs still differ, o_bS_GuardMon output remains OFF. If the second corresponding i_bS_GuardSwitch1/i_bS_GuardSwitch2 input switches to ON within the value specified for i_dDiscrepancyTime input, o_bS_GuardMon output is set to ON following acknowledgment. i_bS_StartReset and i_bS_AutoReset inputs shall only be activated if it is ensured that no hazardous situation can occur when a safety programmable controller is started.

WARNING

- Connect the two signals/switches of a safeguard to i_bS_GuardSwitch1 and i_bS_GuardSwitch2 independently in your application. If you have a single signal/switch, connect the same signal to both FB variables.
 - The time value for the i_dDiscrepancyTime parameter should be determined and validated according to your application and its risk analysis. This variable should be connected to the 0ms constant if both signal inputs (i_bS_GuardSwitch1 and i_bS_GuardSwitch2) are connected to the same signal in your application.
-

State diagram


State transition of M+SF_GMON_R

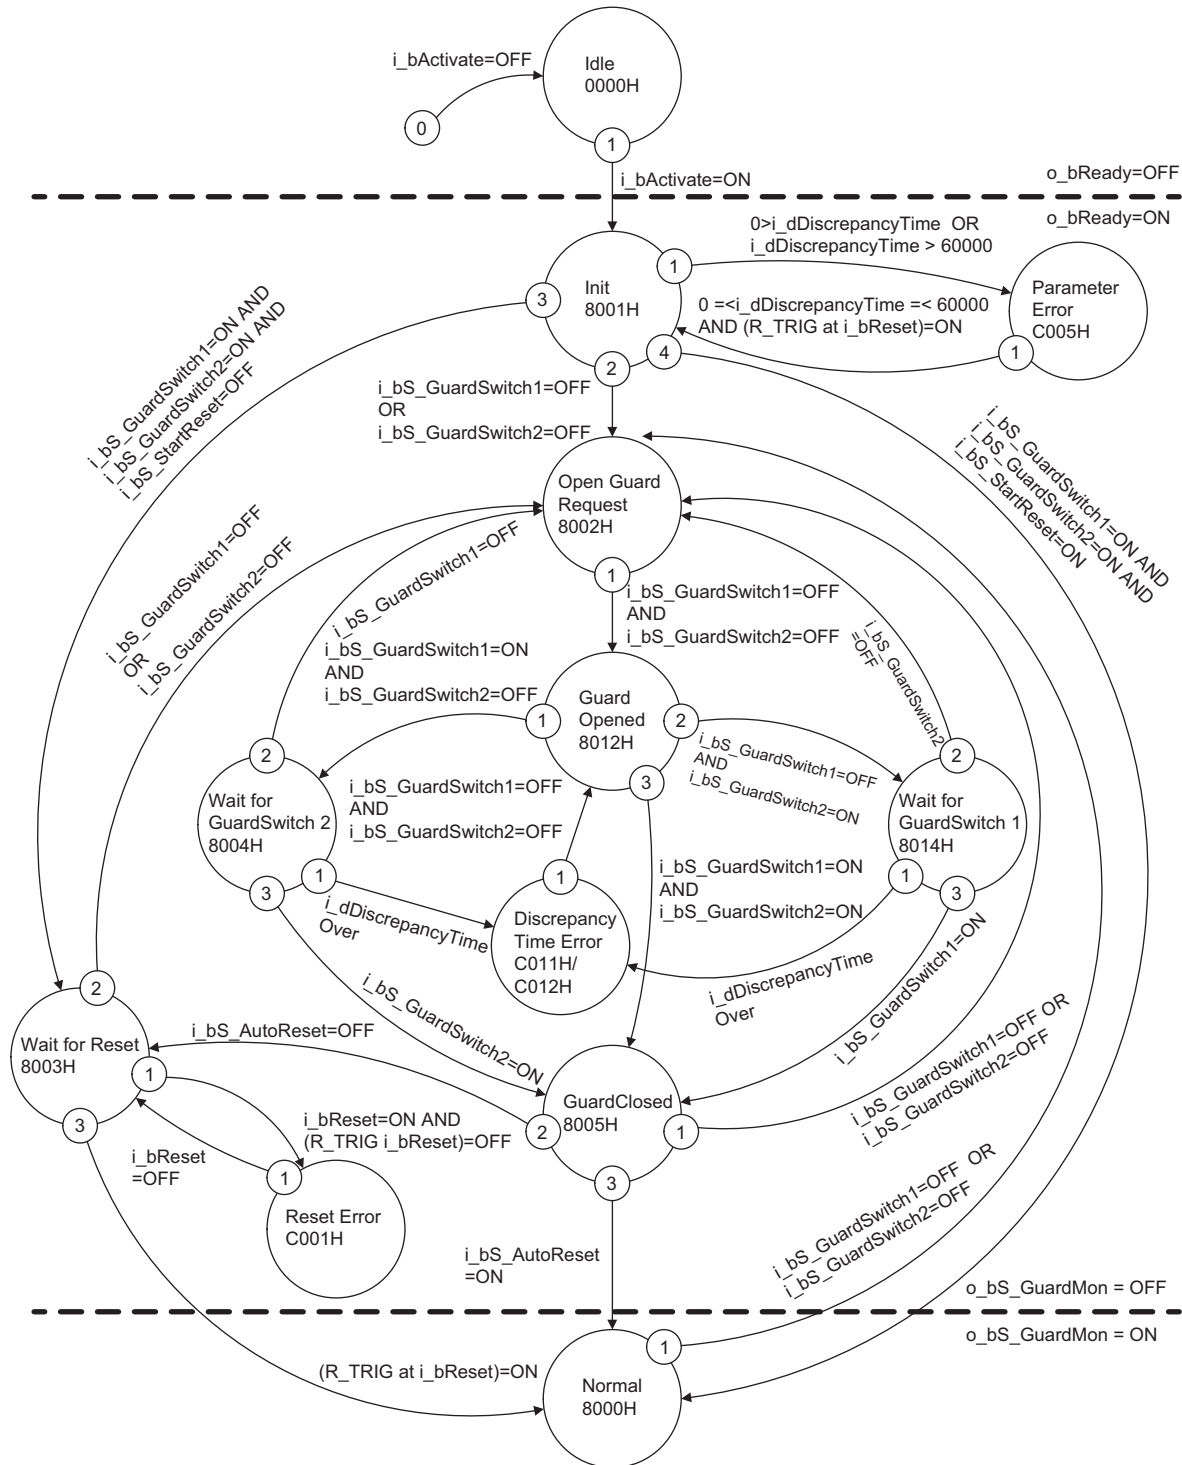

Note: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).


Typical timing diagram

■ For M+SF_GMON_R

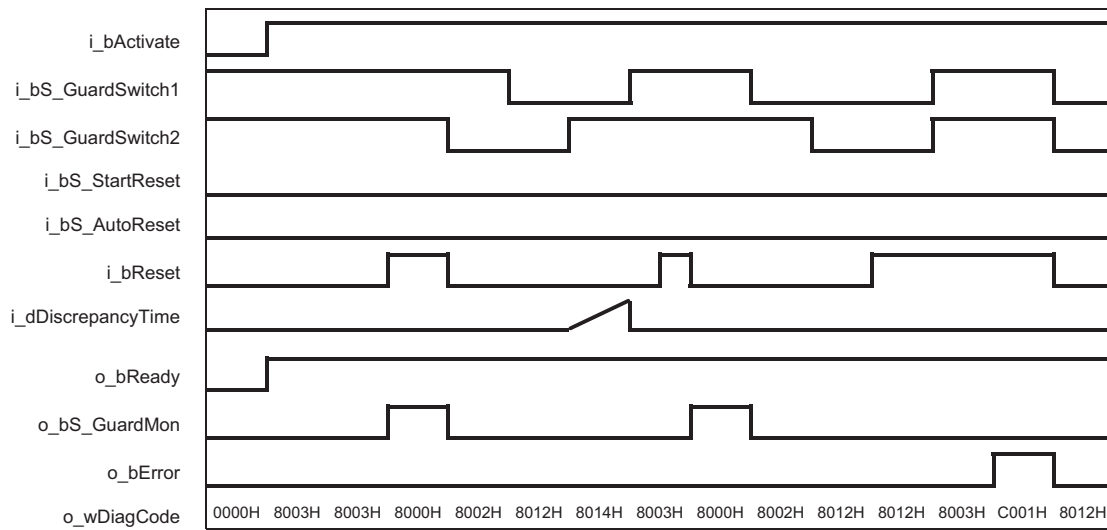

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the *i_dDiscrepancyTime* elapsed time is stopped.

■ For M+SF_GMON_R

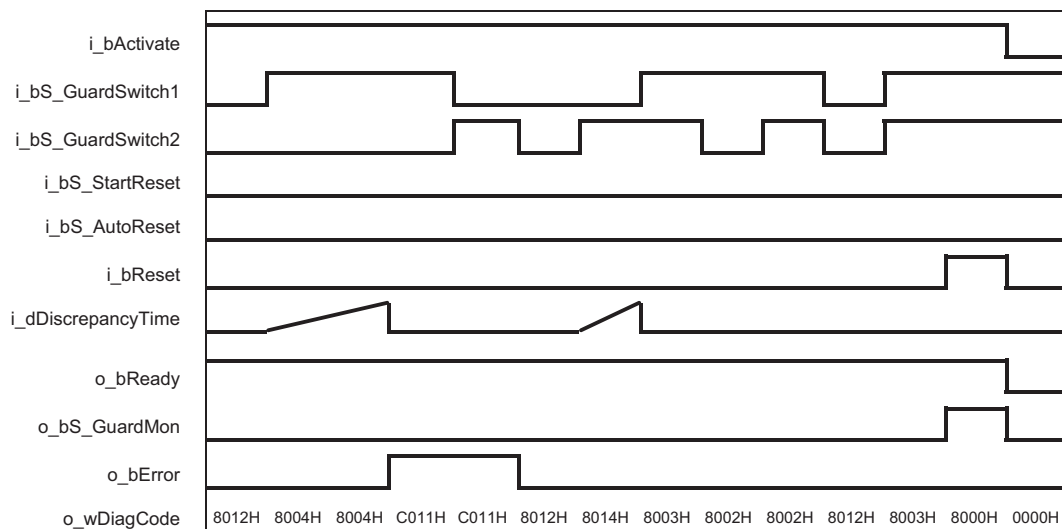

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the *i_dDiscrepancyTime* elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_GuardMon	OFF
o_bError	ON

For the corrective actions, see the following.

☞ Page 52 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error	Static i_bReset detected in state 8003H.	Set i_bReset to OFF. Check the devices and wiring of i_bReset.
C005H	Parameter Error	i_dDiscrepancyTime is out of range.	Set i_dDiscrepancyTime within the range.
C011H	DiscrepancyTime Error 1	i_dDiscrepancyTime elapsed in state 8004H. (i_bS_GuardSwitch1=ON, i_bS_GuardSwitch2=OFF)	Set i_bS_GuardSwitch1 and i_bS_GuardSwitch2 to OFF.
C012H	DiscrepancyTime Error 2	i_dDiscrepancyTime elapsed in state 8014H. (i_bS_GuardSwitch1=OFF, i_bS_GuardSwitch2=ON)	<ul style="list-style-type: none"> • Check a failure of the switches of the guard. • When the guard is closed with no failure, check the state, parameter and wiring of the safety remote I/O module. • Check the i_dDiscrepancyTime.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (initial state) All output signals are set to OFF. <ul style="list-style-type: none"> • o_bReady: OFF • o_bS_GuardMon: OFF • o_bError: OFF 	Initialize the FB by setting i_bActivate to ON.
8000H	Normal	Safety guard closed and Safe state acknowledged. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: ON • o_bError: OFF 	None.
8001H	Init	The FB has been activated. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	Close the guard.
8002H	Open Guard Request	Complete switching sequence required. At least one switch was OFF. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	Open the guard completely. When the guard is open completely, check the switch, wiring and the safety remote I/O module.
8003H	Wait for Reset	Waiting for rising trigger at Reset. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	Set i_bReset to ON.
8012H	Guard Opened	Guard completely opened. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	Close the guard.
8004H	Wait for GuardSwitch 2	Guard not completely closed. i_bS_GuardSwitch1 has been switched to ON - waiting for i_bS_GuardSwitch2; discrepancy timer started. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	Close the guard completely.
8014H	Wait for GuardSwitch 1	Guard not completely closed. i_bS_GuardSwitch2 has been switched to ON - waiting for i_bS_GuardSwitch1; discrepancy timer started. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	
8005H	Guard Closed	Guard closed. Waiting for i_bReset, if i_bS_AutoReset=OFF. <ul style="list-style-type: none"> • o_bReady: ON • o_bS_GuardMon: OFF • o_bError: OFF 	Set i_bReset to ON.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
 - Wiring and status of a safety remote I/O module and a safety programmable controller
 - Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
 - Setting of i_bS_StartReset and i_bS_AutoReset
-


4.9 M+SF_MODSEL_R


Overview

Item	Description
Function name	Mode selector
Functional overview	This FB selects the system operation mode, such as manual, automatic, and semi-automatic.
Symbol	<div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>(1) — B: i_bActivate</p> <p>(2) — B: i_bS_Mode0</p> <p>(3) — B: i_bS_Mode1</p> <p>(4) — B: i_bS_Mode2</p> <p>(5) — B: i_bS_Mode3</p> <p>(6) — B: i_bS_Mode4</p> <p>(7) — B: i_bS_Mode5</p> <p>(8) — B: i_bS_Mode6</p> <p>(9) — B: i_bS_Mode7</p> <p>(10) — B: i_bS_Unlock</p> <p>(11) — B: i_bS_SetMode</p> <p>(12) — B: i_bAutoSetMode</p> <p>(13) — D: i_dModeMonitorTime</p> <p>(14) — B: i_bReset</p> </div> <div style="flex: 2; border: 1px solid black; padding: 10px; text-align: center;"> <p>M+SF_MODSEL_R</p> </div> <div style="flex: 1;"> <p>o_bReady: B — (15)</p> <p>o_bS_Mode0Sel: B — (16)</p> <p>o_bS_Mode1Sel: B — (17)</p> <p>o_bS_Mode2Sel: B — (18)</p> <p>o_bS_Mode3Sel: B — (19)</p> <p>o_bS_Mode4Sel: B — (20)</p> <p>o_bS_Mode5Sel: B — (21)</p> <p>o_bS_Mode6Sel: B — (22)</p> <p>o_bS_Mode7Sel: B — (23)</p> <p>o_bS_AnyModeSel: B — (24)</p> <p>o_bError: B — (25)</p> <p>o_wDiagCode: W — (26)</p> </div> </div>




Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_Mode0	Bit*	OFF	Input 0 from mode selector switch. OFF: Mode 0 is not requested by operator. ON: Mode 0 is requested by operator.
(3)	i_bS_Mode1	Bit*	OFF	Input 1 from mode selector switch
(4)	i_bS_Mode2	Bit*	OFF	Input 2 from mode selector switch
(5)	i_bS_Mode3	Bit*	OFF	Input 3 from mode selector switch
(6)	i_bS_Mode4	Bit*	OFF	Input 4 from mode selector switch
(7)	i_bS_Mode5	Bit*	OFF	Input 5 from mode selector switch
(8)	i_bS_Mode6	Bit*	OFF	Input 6 from mode selector switch
(9)	i_bS_Mode7	Bit*	OFF	Input 7 from mode selector switch
(10)	i_bS_Unlock	Bit*	OFF	Locks the selected mode. OFF: The actual o_bS_ModeXSel output is locked. (A change of any i_bS_ModeX input does not lead to a change in o_bS_ModeXSel output even in the event of a rising edge of i_bS_SetMode.) ON: The selected o_bS_ModeXSel output is not locked. (A mode selection change is possible.)
(11)	i_bS_SetMode	Bit*	OFF	Sets the selected mode. • i_bAutoSetMode=OFF OFF: Any change to new i_bS_ModeX=ON is not confirmed. ON (Activated only when i_bS_SetMode is set to ON): A change to new i_bS_ModeX is confirmed. • i_bAutoSetMode=ON Constant OFF (i_bS_SetMode is not required.)
(12)	i_bAutoSetMode	Bit	OFF	Parameterizes the acknowledgment mode. OFF: A change in mode must be acknowledged by the operator via i_bS_SetMode. ON: A valid change of i_bS_ModeX input to another i_bS_ModeX automatically leads to a change in o_bS_ModeXSel without operator acknowledgment via i_bS_SetMode (as long as this is not locked by i_bS_Unlock).
(13)	i_dModeMonitorTime	Double word [signed]	0	Maximum permissible time for changing the selection input (in increments of 10ms). Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)

No.	Variable name	Data type	Default value	Description
(14)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(15)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(16)	o_bS_Mode0Sel	Bit*	OFF	Indicates that mode 0 is selected and acknowledged. OFF: Mode 0 is not selected or not active. ON: Mode 0 is selected and active.
(17)	o_bS_Mode1Sel	Bit*	OFF	Indicates that mode 1 is selected and acknowledged.
(18)	o_bS_Mode2Sel	Bit*	OFF	Indicates that mode 2 is selected and acknowledged.
(19)	o_bS_Mode3Sel	Bit*	OFF	Indicates that mode 3 is selected and acknowledged.
(20)	o_bS_Mode4Sel	Bit*	OFF	Indicates that mode 4 is selected and acknowledged.
(21)	o_bS_Mode5Sel	Bit*	OFF	Indicates that mode 5 is selected and acknowledged.
(22)	o_bS_Mode6Sel	Bit*	OFF	Indicates that mode 6 is selected and acknowledged.
(23)	o_bS_Mode7Sel	Bit*	OFF	Indicates that mode 7 is selected and acknowledged.
(24)	o_bS_AnyModeSel	Bit*	OFF	Indicates that any of the 8 modes is selected and acknowledged. OFF: No i_bS_ModeX is selected. ON: One of the 8 i_bS_ModeX is selected and active.
(25)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(26)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions

WARNING

Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.

FB details

This FB selects the system operation mode, such as manual, automatic, and semi-automatic. The default state is changed to the ModeChanged state (8005H), where all o_bS_ModeXSel and o_bS_AnyModeSel are OFF, after the activation of the FB. For the transition from the ModeChanged to ModeSelected state, the following conditions are required.

- i_bAutoSetMode=OFF

When i_bS_SetMode is set to ON, the new i_bS_ModeX input leads to an o_bS_ModeXSel output.

- i_bAutoSetMode=ON

The new i_bS_ModeX input automatically leads to a new o_bS_ModeXSel output.


The transition from the ModeChanged to ModeSelected state is only valid, if one i_bS_ModeX is ON. In addition, the transition from one i_bS_ModeX input (only one i_bS_ModeX from i_bS_Mode0 to i_bS_Mode7 is ON) to ModeSelected state (8000H) is not monitored by a timer.

If the FB is in the ModeSelected state, the simultaneously occurrence of a new i_bS_ModeX input (higher priority) and the OFF i_bS_Unlock signal (lower priority) leads to the ModeChanged state.

The i_bS_ModeX input parameters, which are not used for mode selection, should be called with the default value OFF to simplify program verification. i_bAutoSetMode input shall only be activated if it is ensured that no hazardous situation can occur when the safety programmable controller is started.

State diagram

State transition of M+SF_MODSEL_R

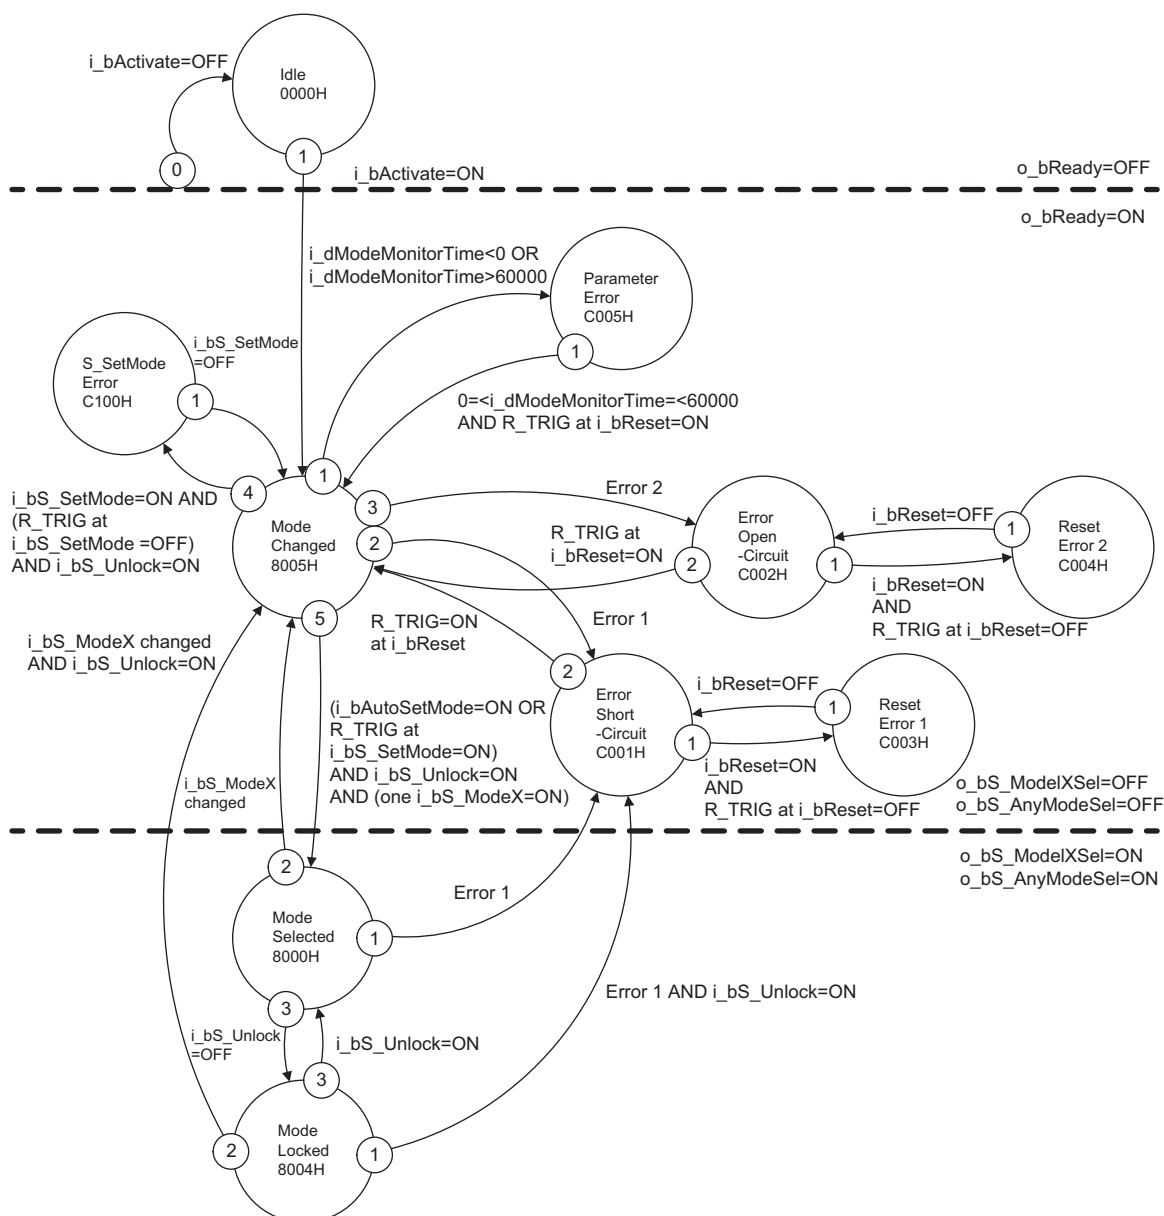


Note 1: Error 1: More than one $i_bS_ModeX=ON$ is selected at the same time.

Error 2: The $i_bS_ModeX=OFF$ state remains for longer than $i_dModeMonitorTime$.

Note 2: The transition from any state to the Idle state due to $i_bActivate=OFF$ is not shown. However these transitions have the highest priority (0).


Typical timing diagram

■ For M+SF_MODSEL_R (i_bAutoSetMode=OFF) Valid change in Mode input with acknowledgment

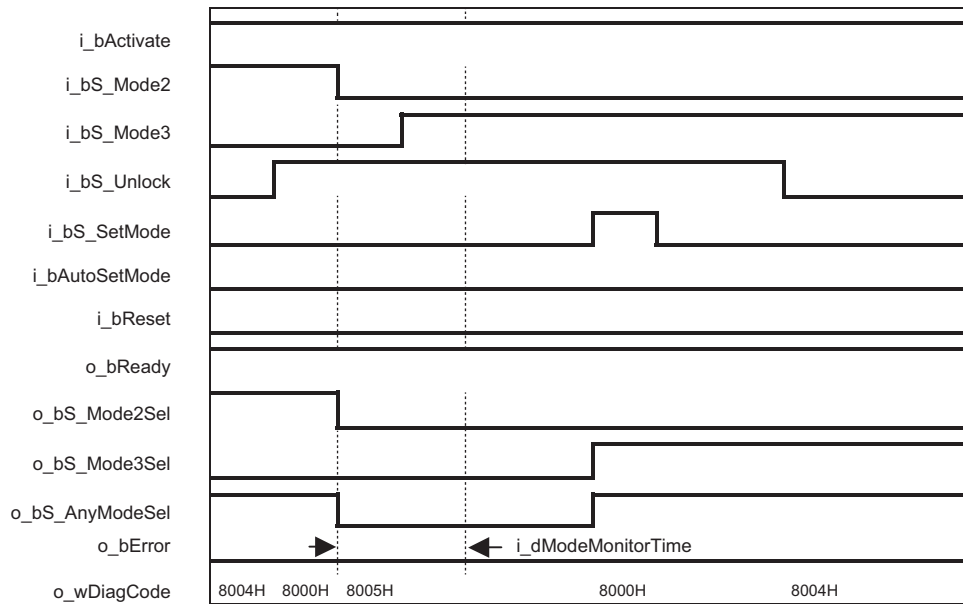

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dModeMonitorTime elapsed time is stopped.

■ For M+SF_MODSEL_R (i_bAutoSetMode=OFF) Error condition 2 at Mode inputs (All i_bS_ModeX=OFF after i_dModeMonitorTime).

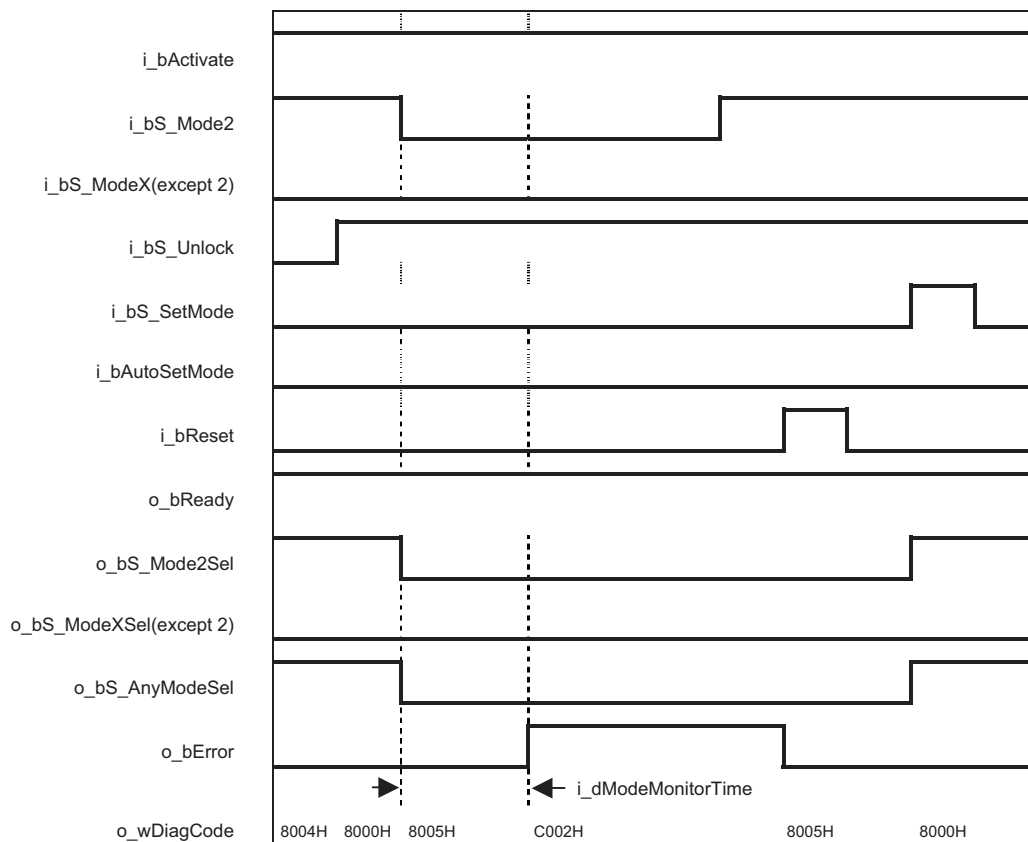

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dModeMonitorTime elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_Mode0Sel to o_bS_Mode7Sel	OFF
o_bS_AnyModeSel	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 58 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Error Short-circuit	The FB detected that two or more i_bS_ModeX=ON.	Set only one i_bS_ModeX to ON and set i_bReset to ON. Check the connection and wiring related to i_bReset.
C002H	Error Open-circuit	The FB detected that all i_bS_ModeX=OFF: The period following a falling i_bS_ModeX trigger exceeds i_dModeMonitorTime.	Set only one i_bS_ModeX to ON and set i_bReset to ON. Check the connection and wiring related to i_bReset. Check the value of i_dModeMonitorTime.
C003H	Reset Error 1	Static i_bReset signal detected in state C001H.	Set i_bReset to OFF.
C004H	Reset Error 2	Static i_bReset signal detected in state C002H.	Check the devices and wiring related to i_bReset.
C005H	Parameter Error	The value of i_dModeMonitorTime is out of range (0 to 60000).	Set a proper value to i_dModeMonitorTime. Set i_bReset to ON.
C100H	S_SetMode Error	Static i_bS_SetMode signal detected with i_bS_Unlock=ON in state 8005H.	Set i_bS_SetMode to OFF. Check the devices and wiring related to i_bReset.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (initial state) <ul style="list-style-type: none"> o_bReady: OFF o_bS_Mode0Sel to o_bS_Mode7Sel: OFF o_bS_AnyModeSel: OFF o_bError: OFF 	Initialize the FB by setting i_bActivate to ON.
8005H	ModeChanged	State after activation or when i_bS_ModeX has changed (unless locked) or after Reset of an error state. <ul style="list-style-type: none"> o_bReady: ON o_bS_Mode0Sel to o_bS_Mode7Sel: OFF o_bS_AnyModeSel: OFF o_bError: OFF 	Select a mode after setting i_bS_Unlock to ON, and set i_bS_SetMode to ON.
8000H	ModeSelected	Valid mode selection, but not yet locked. <ul style="list-style-type: none"> o_bReady: ON o_bS_Mode0Sel to o_bS_Mode7Sel: *1 o_bS_AnyModeSel: ON o_bError: OFF 	Lock the selected mode by setting i_bS_Unlock to OFF.
8004H	ModeLocked	Valid mode selection is locked. <ul style="list-style-type: none"> o_bReady: ON o_bS_Mode0Sel to o_bS_Mode7Sel: *1 o_bS_AnyModeSel: ON o_bError: OFF 	To change the mode, set i_bS_Unlock to ON.

*1 Set only one signal to ON.



WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bAutoSetMode




4.10 M+SF_MUTE2_R

Overview

Item	Description
Function name	Muting with 2 sensors
Functional overview	Muting is the intended suppression of the safety function. In this FB, parallel muting with two muting sensors is specified.
Symbol	<div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>(1) — B: i_bActivate</p> <p>(2) — B: i_bS_AOPD_In</p> <p>(3) — B: i_bS_MutingSw_11</p> <p>(4) — B: i_bS_MutingSw_12</p> <p>(5) — B: i_bS_MutingLamp</p> <p>(6) — D: i_dDiscTimeEntry</p> <p>(7) — D: i_dMaxMutingTime</p> <p>(8) — B: i_bMutingEnable</p> <p>(9) — B: i_bS_StartReset</p> <p>(10) — B: i_bReset</p> </div> <div style="flex: 1; border: 1px solid black; padding: 10px; text-align: center;"> <p>M+SF_MUTE2_R</p> </div> <div style="flex: 1;"> <p>o_bReady: B — (11)</p> <p>o_bS_AOPD_Out: B — (12)</p> <p>o_bS_MutingActive: B — (13)</p> <p>o_bError: B — (14)</p> <p>o_wDiagCode: W — (15)</p> </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_AOPD_In	Bit*	OFF	OSSD (safety output) signal from AOPD (Active opto-electronic protective devices). OFF: Protection field interrupted ON: Protection field not interrupted
(3)	i_bS_MutingSw_11	Bit*	OFF	Status of muting sensor 11. OFF: Muting sensor 11 is not actuated. ON: Workpiece actuates muting sensor 11.
(4)	i_bS_MutingSw_12	Bit*	OFF	Status of muting sensor 12. OFF: Muting sensor 12 is not actuated. ON: Workpiece actuates muting sensor 12.
(5)	i_bS_MutingLamp	Bit*	OFF	Indicates operation of the muting lamp. OFF: Muting lamp failure ON: Muting lamp no failure
(6)	i_dDiscTimeEntry	Double word [signed]	0	Max. discrepancy time for i_bS_MutingSw_11 and i_bS_MutingSw_12 entering muting gate. Increments of 10ms. Range: Fixed values from 0 to 400 (0 to 4000ms = 4sec)
(7)	i_dMaxMutingTime	Double word [signed]	0	Maximum time to complete muting sequence, timer started when first muting sensor is actuated. Increments of 10ms. Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)
(8)	i_bMutingEnable	Bit	OFF	Command by the control system that enables the start of the muting function when needed by the machine cycle. After the start of the muting function, this signal can be switched OFF. OFF: Muting not enabled ON: Start of Muting function enabled
(9)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(10)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(11)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following. ☞ Page 11 General Functions
(12)	o_bs_AOPD_Out	Bit*	OFF	Safety output, indicates status of the muted guard. OFF: AOPD protection field interrupted and muting not active. ON: AOPD protection field not interrupted or muting active.
(13)	o_bs_MutingActive	Bit*	OFF	Indicates status of muting process. OFF: Muting not active ON: Muting active
(14)	o_bError	Bit	OFF	Error flag. For details, see the following. ☞ Page 11 General Functions
(15)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following. ☞ Page 11 General Functions

! WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details


Muting is the intended suppression of the safety function. This is required, e.g., when transporting a workpiece into the danger zone without causing the machine to stop. Muting is triggered by muting sensors. The use of two muting sensors and correct integration into the production sequence must ensure that no persons enter the danger zone while the light curtain is muted. Muting sensors can be push buttons, proximity switches, photoelectric barriers, limit switches, etc. which do not have to be failsafe. Active muting mode must be indicated by indicator lights (the muting lamp).

There are sequential and parallel muting procedures. In this FB, parallel muting with two muting sensors is used. The positioning of the sensors must conform to IEC 62046 as shown in the figure. The FB can be used in both directions, forward and backward. However, the actual direction cannot be identified. The muting should be enabled with the i_bMutingEnable signal by the process control when there is no manipulation in the danger zone.

The FB input parameters include the signals of the two muting sensors (i_bs_MutingSw_11 and i_bs_MutingSw_12), the OSSD signal (i_bs_AOPD_In) from the "active opto-electronic protective device", as well as two parameterizable times (i_dDiscTimeEntry and i_dMaxMutingTime).


While both of the two muting sensors are on, muting is active and o_bs_AOPD_Out is set to ON, although i_bs_AOPD_In is OFF.

■ Example for M+SF_MUTE2_R with two reflecting light barriers

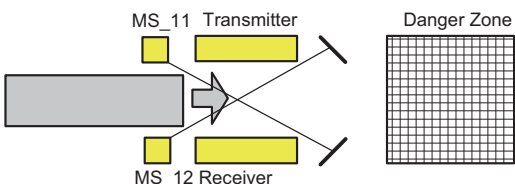Figure	Description
 <p>The diagram illustrates the setup for two reflecting light barriers. On the left, a grey rectangular block represents the machine. Two yellow rectangular blocks, labeled 'MS_11 Transmitter' and 'MS_12 Receiver', are positioned diagonally relative to each other. A line connects the transmitter and receiver, forming a 'V' shape that points towards a 'Danger Zone' represented by a grid. The danger zone is located to the right of the machine and the light barriers.</p>	<p>If reflection light barriers are used as muting sensors, they are generally arranged diagonally. In general, this arrangement of reflection light barriers as muting sensors requires only two light barriers, and only i_bs_MutingSw_11 (MS_11) and i_bs_MutingSw_12 (MS_12) are allocated.</p>

State diagram

State transition of M+SF_MUTE2_R

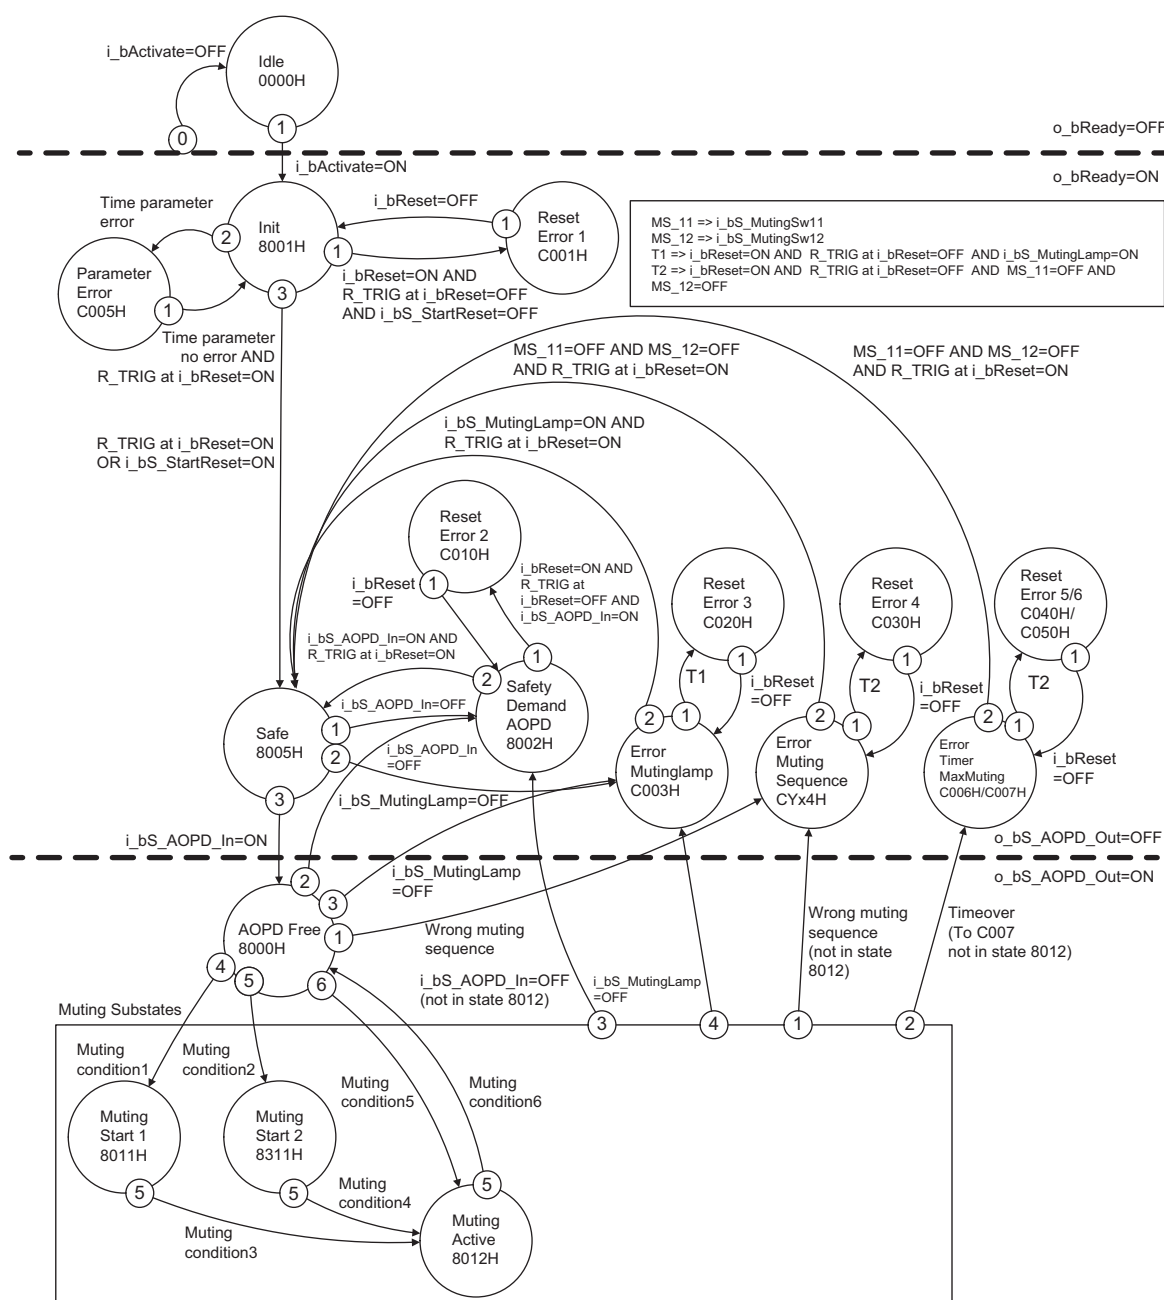

Note 1: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

Note 2: Within muting substates, transitions due to Error Muting sequence (priority 1), Error Timer (priority 2), Safety demand AOPD (priority 3) or Error Muting lamp (priority 4) have higher priority than transitions to Muting substates (priority 5). If the FB is in the timing error state, the simultaneous occurrence of C006H and C007H lead to the C006H state.

Note 3: Muting condition 1-6 and wrong muting sequences are shown in the following.

- Muting conditions: Page 63 Muting conditions
- Wrong muting sequences: Page 63 Wrong muting sequences

Note 4: Time parameter error (condition of transition from 8001H to C005H) is detected in either of the following two cases.

- 1) i_dDiscTimeEntry has been set to a value less than 0ms or greater than 4 seconds. ($0 > i_dDiscTimeEntry$ OR $i_dDiscTimeEntry > 400$)
- 2) i_dMaxMutingTime has been set to a value less than 0ms or greater than 10min. ($0 > i_dMaxMutingTime$ OR $i_dMaxMutingTime > 60000$)

Muting conditions


No.	State transition	Condition/action
1	8000H→8011H	MS_11 is the first entry switch actuated: Start timer i_dDiscTimeEntry and i_dMaxMutingTime. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=OFF
2	8000H→8311H	MS_12 is the first entry switch actuated: Start timer i_dDiscTimeEntry and i_dMaxMutingTime. i_bMutingEnable=ON AND MS_11=OFF AND MS_12=OFF→ON
3	8011H→8012H	MS_12 is the second entry switch actuated: Stop timer i_dDiscTimeEntry. i_bMutingEnable=ON AND MS_11=ON AND MS_12=OFF→ON
4	8311H→8012H	MS_11 is the second entry switch actuated: Stop timer i_dDiscTimeEntry. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=ON
5	8000H→8012H	Both entry switches actuated in same cycle: Start timer i_dMaxMutingTime. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=OFF→ON
6	8012H→8000H	Both switches released in same cycle or MS_11 and MS_12 released consecutively: Stop timer i_dMaxMutingTime. MS_11=OFF OR MS_12=OFF

Wrong muting sequences

Status	Wrong muting sequences
8000H	MS_11=OFF→ON AND MS_12=ON AND MS_12=OFF→ON not yet
	MS_12=OFF→ON AND MS_11=ON AND MS_11=OFF→ON not yet
	(MS_11=ON AND MS_11=OFF→ON not yet) AND (MS_12=ON AND MS_12=OFF→ON not yet)
	i_bMutingEnable=OFF AND MS_11=OFF→ON
	i_bMutingEnable=OFF AND MS_12=OFF→ON
8011H	i_bMutingEnable=OFF OR MS_11=OFF
8311H	i_bMutingEnable=OFF OR MS_12=OFF
8012H	None.

Typical timing diagram

■ For M+SF_MUTE2_R (i_bS_StartReset=OFF)

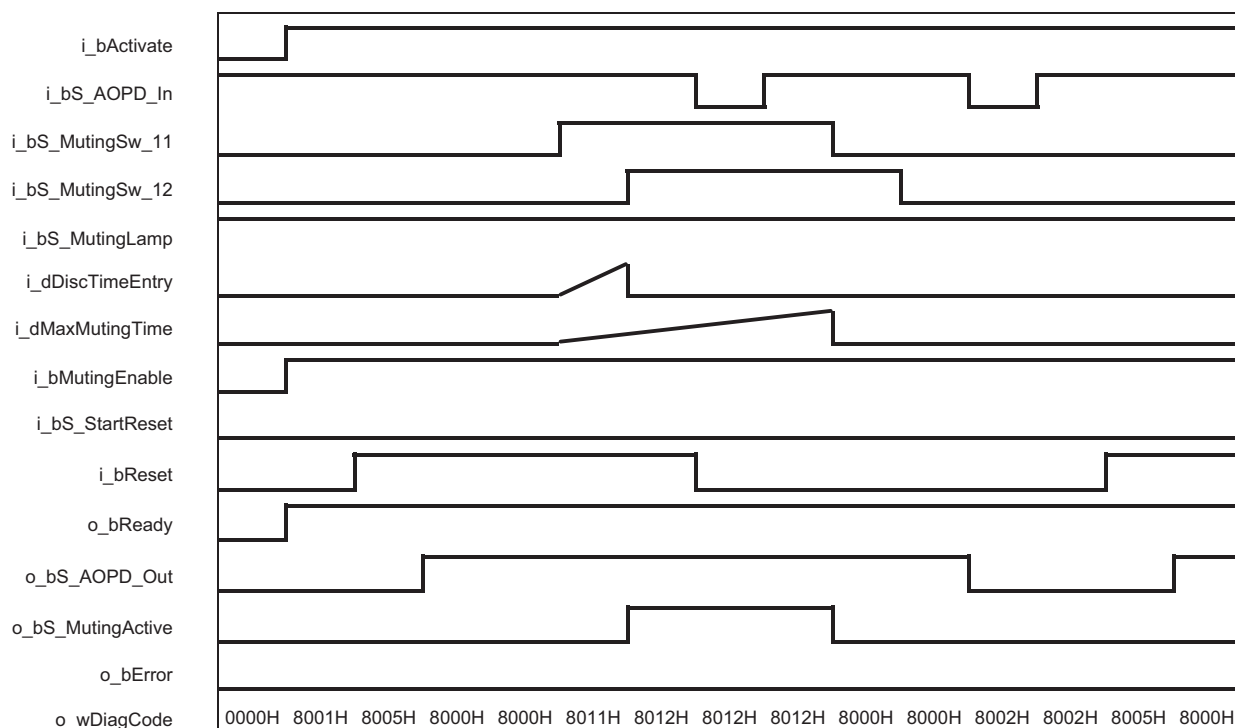

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dDiscTimeEntry and i_dMaxMutingTime elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_AOPD_Out	OFF
o_bS_MutingActive	OFF
o_bError	ON

For the corrective actions, see the following.

☞ Page 65 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset condition detected after FB activation in state 8001H.	Set i_bReset to OFF. Check the devices and wiring related to i_bReset.
C003H	Error Muting Lamp	Error detected in muting lamp.	Set i_bReset to ON. Check the devices and wiring related to i_bReset.
CYx4H C004H to CF34H	Error Muting Sequence	Error detected in muting sequence in state 8000H, 8011H, or 8311H. (Page 63 Wrong muting sequences) Y = Status in the sequence C0x4H = Error occurred in state 8000H C1x4H = Error occurred in state 8011H C2x4H = Error occurred in state 8311H CFx4H = i_bMutingEnable=OFF The states of wrong muting sequences including i_bMutingEnable=OFF are always changed to CFx4H when i_bMutingEnable is set to OFF. (Never changed to other states.) x = Status of the sensors when error occurred CY04H: Both SW=OFF CY14H: i_bS_MutingSw_11=ON CY24H: i_bS_MutingSw_12=ON CY34H: Both SW=ON	Set both muting switches to OFF and set i_bReset to ON. Check the devices and wiring related to i_bReset.
C005H	Parameter Error	i_dDiscTimeEntry or i_dMaxMutingTime value out of range.	Set a proper value to the parameter and set i_bReset to ON.
C006H	Error Timer MaxMuting	Timing error. Active muting time exceeds i_dMaxMutingTime.	Set both muting switches to OFF and set i_bReset to ON.
C007H	Error Timer MS11_12	Timing error. Discrepancy time for switching i_bS_MutingSw_11 and i_bS_MutingSw_12 > i_dDiscTimeEntry.	Check the actual muting status.
C010H	Reset Error 2	Static i_bReset condition detected in state 8002H.	Set i_bReset to OFF. Check the devices and wiring related to i_bReset.
C020H	Reset Error 3	Static i_bReset condition detected in state C003H.	
C030H	Reset Error 4	Static i_bReset condition detected in state CYx4H.	
C040H	Reset Error 5	Static i_bReset condition detected in state C006H.	
C050H	Reset Error 6	Static i_bReset condition detected in state C007H.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) <ul style="list-style-type: none"> o_bReady: OFF o_bS_AOPD_Out: OFF o_bS_MutingActive: OFF o_bError: OFF 	Initialize the FB by setting i_bActivate to ON.
8000H	AOPD Free	Muting not active and no safety demand from AOPD. If timers from subsequent muting are still running, they are stopped. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: ON o_bS_MutingActive: OFF o_bError: OFF 	None. (Starting muting is possible.)
8001H	Init	The FB was activated. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: OFF o_bS_MutingActive: OFF o_bError: OFF 	Set i_bReset to ON.
8002H	Safety Demand AOPD	Safety demand detected by AOPD and muting not active. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: OFF o_bS_MutingActive: OFF o_bError: OFF 	Set i_bReset to ON after the completion of safety demand.
8005H	Safe	The safety function is active. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: OFF o_bS_MutingActive: OFF o_bError: OFF 	Wait the completion of safety demand.
8011H	Muting Start 1	Muting sequence is in the starting phase after rising trigger of i_bS_MutingSw_11. Monitoring of i_dDiscTimeEntry is activated. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: ON o_bS_MutingActive: OFF o_bError: OFF 	Set both muting sensors to ON within i_dDiscTimeEntry.
8311H	Muting Start 2	Muting sequence is in the starting phase after rising trigger of i_bS_MutingSw_12. Monitoring of i_dDiscTimeEntry is activated. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: ON o_bS_MutingActive: OFF o_bError: OFF 	
8012H	Muting Active	Muting sequence is active in either of the following cases: <ul style="list-style-type: none"> When both i_bS_MutingSw_11/12 have been actuated in serial. When both i_bS_MutingSw_11/12 have been actuated in the same cycle. Monitoring of i_dDiscTimeEntry is stopped. <ul style="list-style-type: none"> o_bReady: ON o_bS_AOPD_Out: ON o_bS_MutingActive: ON o_bError: OFF 	Complete muting within i_dMaxMutingTime.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.




- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset

4.11 M+SF_MUTEP_R




Overview	
Item	Description
Function name	Parallel muting
Functional overview	Muting is the intended suppression of the safety function. In this FB, parallel muting with four muting sensors is specified.
Symbol	<div><div>M+SF_MUTEP_R</div><div><div>(1) — B: i_bActivate</div><div>(2) — B: i_bS_AOPD_In</div><div>(3) — B: i_bMutingSw_11</div><div>(4) — B: i_bMutingSw_12</div><div>(5) — B: i_bMutingSw_21</div><div>(6) — B: i_bMutingSw_22</div><div>(7) — B: i_bS_MutingLamp</div><div>(8) — D: i_dDiscTime11_12</div><div>(9) — D: i_dDiscTime21_22</div><div>(10) — D: i_dMaxMutingTime</div><div>(11) — B: i_bMutingEnable</div><div>(12) — B: i_bS_StartReset</div><div>(13) — B: i_bReset</div><div><div>o_bReady: B</div><div>o_bS_AOPD_Out: B</div><div>o_bS_MutingActive: B</div><div>o_bError: B</div><div>o_wDiagCode: W</div></div><div><div>(14)</div><div>(15)</div><div>(16)</div><div>(17)</div><div>(18)</div></div></div></div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_AOPD_In	Bit*	OFF	OSSD (safety output) signal from AOPD (Active opto-electronic protective devices). OFF: Protection field interrupted ON: Protection field not interrupted
(3)	i_bMutingSw_11	Bit	OFF	Status of muting sensor 11. OFF: Muting sensor 11 is not actuated. ON: Workpiece actuates muting sensor 11.
(4)	i_bMutingSw_12	Bit	OFF	Status of muting sensor 12. OFF: Muting sensor 12 is not actuated. ON: Workpiece actuates muting sensor 12.
(5)	i_bMutingSw_21	Bit	OFF	Status of muting sensor 21. OFF: Muting sensor 21 is not actuated. ON: Workpiece actuates muting sensor 21.
(6)	i_bMutingSw_22	Bit	OFF	Status of muting sensor 22. OFF: Muting sensor 22 is not actuated. ON: Workpiece actuates muting sensor 22.
(7)	i_bS_MutingLamp	Bit*	OFF	Indicates operation of the muting lamp. OFF: Muting lamp failure ON: Muting lamp no failure
(8)	i_dDiscTime11_12	Double word [signed]	0	Max. discrepancy time for i_bMutingSw_11 and i_bMutingSw_12 entering muting gate. Increments of 10ms. Range: Fixed values from 0 to 400 (0 to 4000ms = 4sec)
(9)	i_dDiscTime21_22	Double word [signed]	0	Max. discrepancy time for i_bMutingSw_21 and i_bMutingSw_22 entering muting gate. Increments of 10ms. Range: Fixed values from 0 to 400 (0 to 4000ms = 4sec)
(10)	i_dMaxMutingTime	Double word [signed]	0	Maximum time to complete muting sequence, timer started when first muting sensor is actuated. Increments of 10ms. Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)
(11)	i_bMutingEnable	Bit	OFF	Command by the control system that enables the start of the muting function when needed by the machine cycle. After the start of the muting function, this signal can be switched OFF. OFF: Muting not enabled ON: Start of Muting function enabled.
(12)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(13)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(14)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(15)	o_bS_AOPD_Out	Bit*	OFF	Safety output, indicates status of the muted guard. OFF: AOPD protection field interrupted and muting not active. ON: AOPD protection field not interrupted or muting active.
(16)	o_bS_MutingActive	Bit*	OFF	Indicates status of muting process. OFF: Muting not active ON: Muting active
(17)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(18)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions

! WARNING

- Use safety data for connecting the variable whose data type is "Bit" to input-output circuits.
- Safe input must be connected to i_bMutingSw_11/12/21/22 depending on the safety requirements. Input appropriate signals depending on the safety requirements of the application.
- A short circuit in the muting sensor signals or a functional application error to supply these signals are not detected by this FB but interpreted as incorrect muting sequence. However, this condition should not lead to unwanted muting. The user should take care to include this in his risk analysis.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.





FB details

Muting is the intended suppression of the safety function. This is required, e.g., when transporting a workpiece into the danger zone without causing the machine to stop. Muting is triggered by muting sensors. The use of two or four muting sensors and correct integration into the production sequence must ensure that no persons enter the danger zone while the light curtain is muted. Muting sensors can be proximity switches, photoelectric barriers, limit switches, etc. which do not have to be failsafe. Active muting mode must be indicated by indicator lights (the muting lamp).

There are sequential and parallel muting procedures. In this FB, parallel muting with four muting sensors is used. The FB can be used in both directions, forward and backward. The muting should be enabled with the i_bMutingEnable signal by the process control when there is no manipulation in the danger zone.


The FB input parameters include the signals of the four muting sensors (i_bMutingSw_11 to i_bMutingSw_22), the OSSD signal (i_bs_AOPD_In) from the "active opto-electronic protective device", as well as three parameterizable times (i_dDiscTime11_12, i_dDiscTime21_22, and i_dMaxMutingTime). For forward direction, from the time when both i_bMutingSw_11/12 are set to ON until when both i_bMutingSw_21/22 are set to ON and one of them turns OFF, muting is active and o_bs_AOPD_Out is set to ON, although i_bs_AOPD_In is OFF. For backward direction, muting is active from the time when both i_bMutingSw_21/22 are set to ON until when both i_bMutingSw_11/12 are set to ON and one of them turns OFF.

■ Example for M+SF_MUTEP_R in forward direction with four sensors

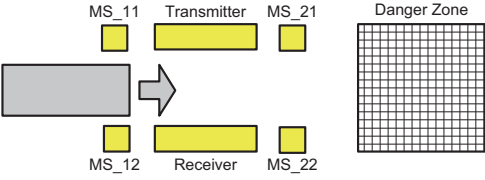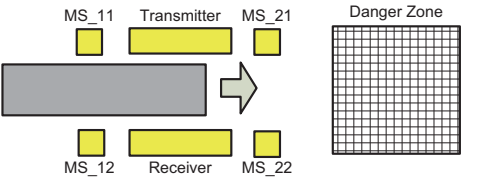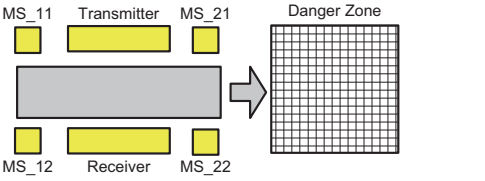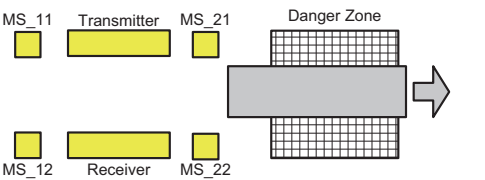Figure	Description
	<p>If the muting sensors i_bMutingSw_11(MS_11) and i_bMutingSw_12(MS_12) are activated by passage of a workpiece within the time set in i_dDiscTime11_12, muting mode is activated. (o_bs_MutingActive=ON)</p>
	<p>Muting mode remains active as long as MS_11 and MS_12 are activated by a workpiece. The workpiece may pass through the light curtain without causing a machine stop.</p>
	<p>Before muting sensors MS_11 and MS_12 are disabled, muting sensors i_bMutingSw_21(MS_21) and i_bMutingSw_22(MS_22) must be activated. This ensures that muting mode remains active. The time discrepancy between switching of MS_21 and MS_22 is monitored by the time i_dDiscTime21_22.</p>
	<p>Muting mode is terminated if either muting sensor MS_21 or MS_22 is disabled by the workpiece. The maximum time for muting mode to be active is the i_dMaxMutingTime.</p>

State diagram

State transition of M+SF_MUTEP_R

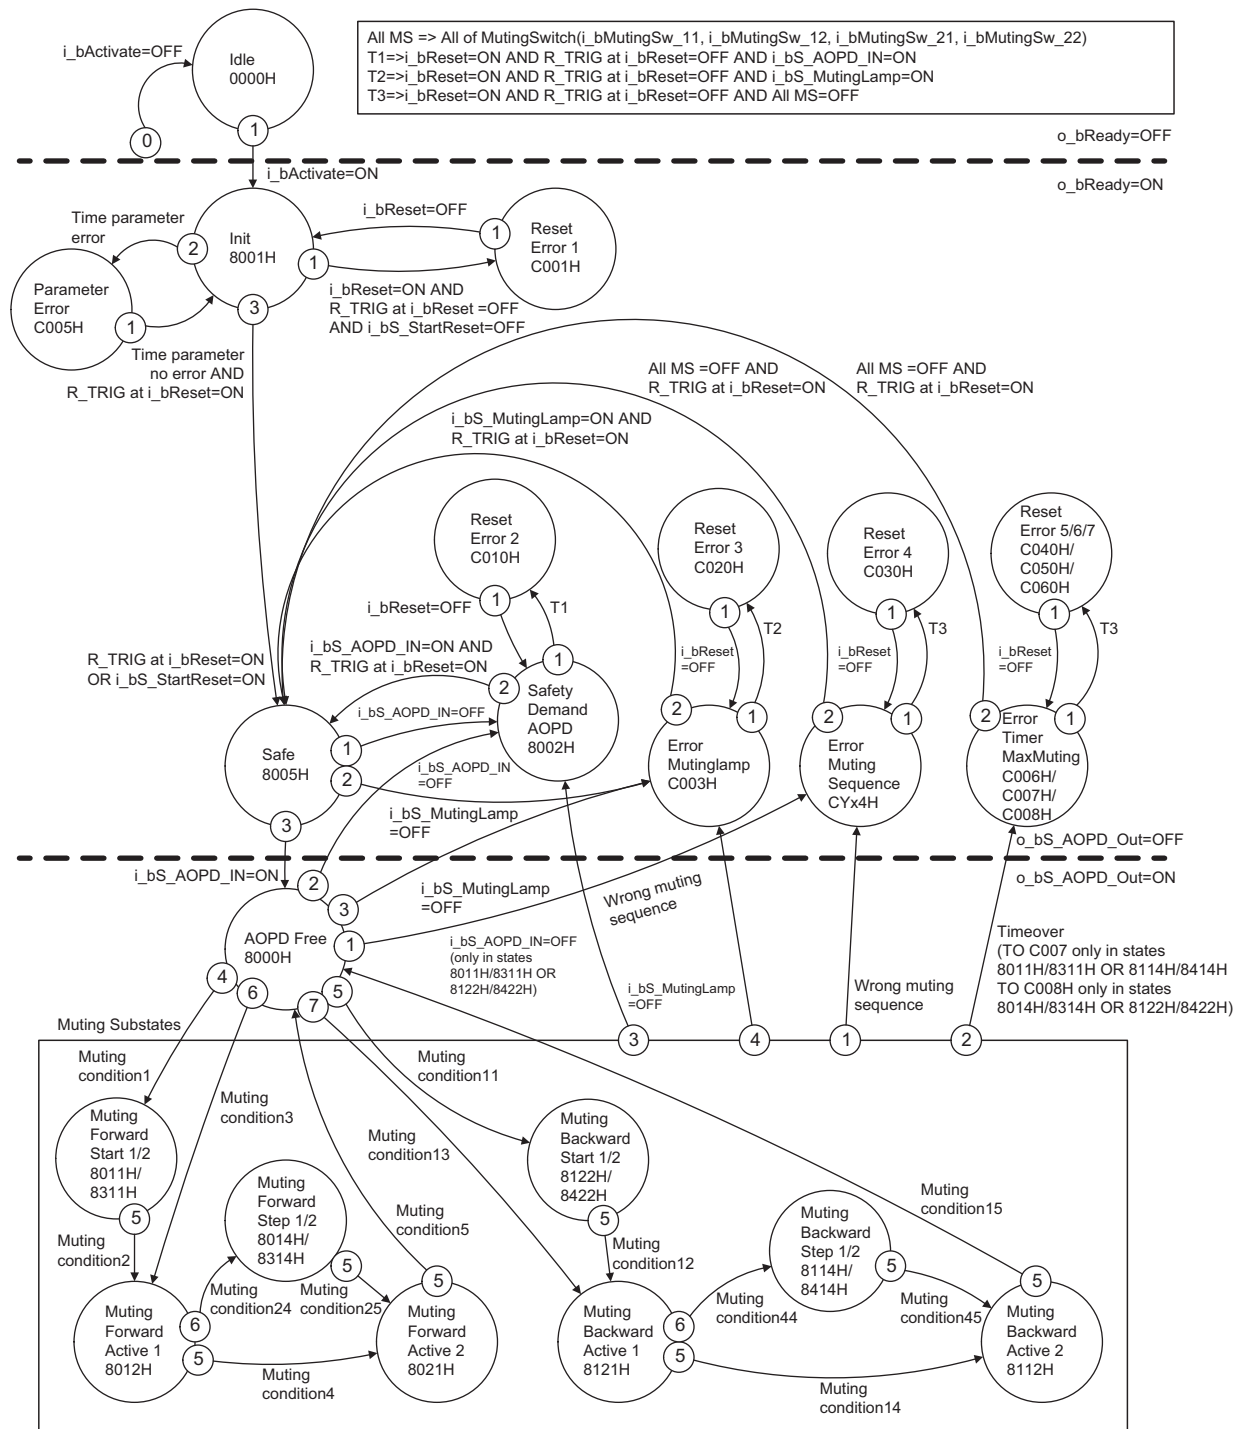

Note 1: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

Note 2: Within muting substates, transitions due to Error Muting sequence (priority 1), Error Timer (priority 2), Safety demand AOPD (priority 3), or Error Muting lamp (priority 4) have higher priority than transitions to Muting substates (priority 5 or 6).

If the FB is in the timing error state, the simultaneous occurrence of C006H and C007H or C006H and C008H leads to C006H.

Note 3: Muting condition 1-6 and wrong muting sequences are shown in the following.

- Muting conditions: Page 71 Muting conditions (forward direction), Page 72 Muting conditions (backward direction)
- Wrong muting sequences: Page 73 Wrong muting sequences

Note 4: Time parameter error (condition of transition from 8001H to C005H) is detected in one of the following three cases.

- 1) i_dDiscTime11_12 has been set to a value less than 0ms or greater than 4 seconds. (0 > i_dDiscTime11_12 OR i_dDiscTime11_12 > 400)
- 2) i_dDiscTime21_22 has been set to a value less than 0ms or greater than 4 seconds. (0 > i_dDiscTime21_22 OR i_dDiscTime21_22 > 400)
- 3) i_dMaxMutingTime has been set to a value less than 0ms or greater than 10min. (0 > i_dMaxMutingTime OR i_dMaxMutingTime > 60000)

Muting conditions (forward direction)

No.	State transition	Condition/action
1	8000H→8011H	MS_11 is the first entry switch actuated: Start timers i_dMaxMutingTime and i_dDiscTime11_12. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=OFF AND MS_21=OFF AND MS_22=OFF
	8000H→8311H	MS_12 is the first entry switch actuated: Start timers i_dMaxMutingTime and i_dDiscTime11_12. i_bMutingEnable=ON AND MS_11=OFF AND MS_12=OFF→ON AND MS_21=OFF AND MS_22=OFF
2	8011H→8012H	MS_12 is the second entry switch actuated: Stop timer i_dDiscTime11_12. i_bMutingEnable=ON AND MS_11=ON AND MS_12=OFF→ON AND MS_21=OFF AND MS_22=OFF
	8311H→8012H	MS_11 is the second entry switch actuated: Stop timer i_dDiscTime11_12. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=ON AND MS_21=OFF AND MS_22=OFF
3	8000H→8012H	Both entry switches actuated in the same cycle: Start timer i_dMaxMutingTime. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=OFF→ON AND MS_21=OFF AND MS_22=OFF
4	8012H→8021H	All switches actuated: MS_11=ON AND MS_12=ON AND MS_21=ON AND MS_22=ON
24	8012H→8014H	MS_21 is the first exit switch actuated: Start timer i_dDiscTime21_22. MS_11=ON AND MS_12=ON AND MS_21=OFF→ON AND MS_22=OFF
	8012H→8314H	MS_22 is the first exit switch actuated: Start timer i_dDiscTime21_22. MS_11=ON AND MS_12=ON AND MS_21=OFF AND MS_22=OFF→ON
25	8014H→8021H	MS_22 is the second exit switch actuated: Stop timer i_dDiscTime21_22. MS_11=ON AND MS_12=ON AND MS_21=ON AND MS_22=OFF→ON
	8314H→8021H	MS_21 is the second exit switch actuated: Stop timer i_dDiscTime21_22. MS_11=ON AND MS_12=ON AND MS_21=OFF→ON AND MS_22=ON
5	8021H→8000H	One of the exit switches released: Stop timer i_dMaxMutingTime. MS_11=OFF AND MS_12=OFF AND (MS_21=ON→OFF OR MS_22=ON→OFF)

Muting conditions (backward direction)


No.	State transition	Condition/action
11	8000H→8122H	MS_21 is the first entry switch actuated: Start timers i_dMaxMutingTime and i_dDiscTime21_22. i_bMutingEnable=ON AND MS_21=OFF→ON AND MS_22=OFF AND MS_11=OFF AND MS_12=OFF
	8000H→8422H	MS_22 is the first entry switch actuated: Start timers i_dMaxMutingTime and i_dDiscTime21_22. i_bMutingEnable=ON AND MS_21=OFF AND MS_22=OFF→ON AND MS_11=OFF AND MS_12=OFF
12	8122H→8121H	MS_22 is the second entry switch actuated: Stop timer i_dDiscTime21_22. i_bMutingEnable=ON AND MS_21=ON AND MS_22=OFF→ON AND MS_11=OFF AND MS_12=OFF
	8422H→8121H	MS_21 is the second entry switch actuated: Stop timer i_dDiscTime21_22. i_bMutingEnable=ON AND MS_21=OFF→ON AND MS_22=ON AND MS_11=OFF AND MS_12=OFF
13	8000H→8121H	Both entry switches actuated in the same cycle: Start timer i_dMaxMutingTime. i_bMutingEnable=ON AND MS_21=OFF→ON AND MS_22=OFF→ON AND MS_11=OFF AND MS_12=OFF
14	8121H→8112H	All switches actuated: MS_21=ON AND MS_22=ON AND MS_11=ON AND MS_12=ON
44	8121H→8114H	MS_11 is the first exit switch actuated: Start timer i_dDiscTime11_12. MS_21=ON AND MS_22=ON AND MS_11=OFF→ON AND MS_12=OFF
	8121H→8414H	MS_12 is the first exit switch actuated: Start timer i_dDiscTime11_12. MS_21=ON AND MS_22=ON AND MS_11=OFF AND MS_12=OFF→ON
45	8114H→8112H	MS_12 is the second exit switch actuated: Stop timer i_dDiscTime11_12. MS_21=ON AND MS_22=ON AND MS_11=ON AND MS_12=OFF→ON
	8414H→8112H	MS_11 is the second exit switch actuated: Stop timer i_dDiscTime11_12. MS_21=ON AND MS_22=ON AND MS_11=OFF→ON AND MS_12=ON
15	8112H→8000H	One of the exit switches released: Stop timer i_dMaxMutingTime. MS_21=OFF AND MS_22=OFF AND (MS_11=ON→OFF OR MS_12=ON→OFF)

Wrong muting sequences

Status	Wrong muting sequences
8000H	When muting sequence starts, i_bMutingEnable=OFF (MS_11=ON OR MS_12=ON) AND (MS_21=ON OR MS_22=ON) MS_11=OFF→ON AND MS_12=ON AND undetected MS_12=OFF→ON MS_12=OFF→ON AND MS_11=ON AND undetected MS_11=OFF→ON MS_21=OFF→ON AND MS_22=ON AND undetected MS_22=OFF→ON MS_22=OFF→ON AND MS_21=ON AND undetected MS_21=OFF→ON (MS_11=ON AND undetected MS_11=OFF→ON) AND (MS_12=ON AND undetected MS_12=OFF→ON) (MS_21=ON AND undetected MS_21=OFF→ON) AND (MS_22=ON AND undetected MS_22=OFF→ON)
8011H	i_bMutingEnable=OFF OR MS_11=OFF OR MS_21=ON OR MS_22=ON
8311H	i_bMutingEnable=OFF OR MS_12=OFF OR MS_21=ON OR MS_22=ON
8012H	MS_11=OFF OR MS_12=OFF
8021H	MS_11=OFF→ON OR MS_12=OFF→ON (MS_11=ON OR MS_12=ON) AND (MS_21=ON→OFF OR MS_22=ON→OFF) (MS_11=ON→OFF OR MS_12=ON→OFF) AND (MS_21=ON→OFF OR MS_22=ON→OFF)
8014H	MS_11=OFF OR MS_12=OFF OR MS_21=OFF
8314H	MS_11=OFF OR MS_12=OFF OR MS_22=OFF
8122H	i_bMutingEnable=OFF OR MS_11=ON OR MS_12=ON OR MS_21=OFF
8422H	i_bMutingEnable=OFF OR MS_11=ON OR MS_12=ON OR MS_22=OFF
8121H	MS_21=OFF OR MS_22=OFF
8112H	MS_21=OFF→ON OR MS_22=OFF→ON (MS_21=ON OR MS_22=ON) AND (MS_11=ON→OFF OR MS_12=ON→OFF) (MS_11=ON→OFF OR MS_12=ON→OFF) AND (MS_21=ON→OFF OR MS_22=ON→OFF)
8114H	MS_21=OFF OR MS_22=OFF OR MS_11=OFF
8414H	MS_21=OFF OR MS_22=OFF OR MS_12=OFF

Typical timing diagram

■ For M+SF_MUTE_P_R (i_bS_StartReset=OFF, forward direction)

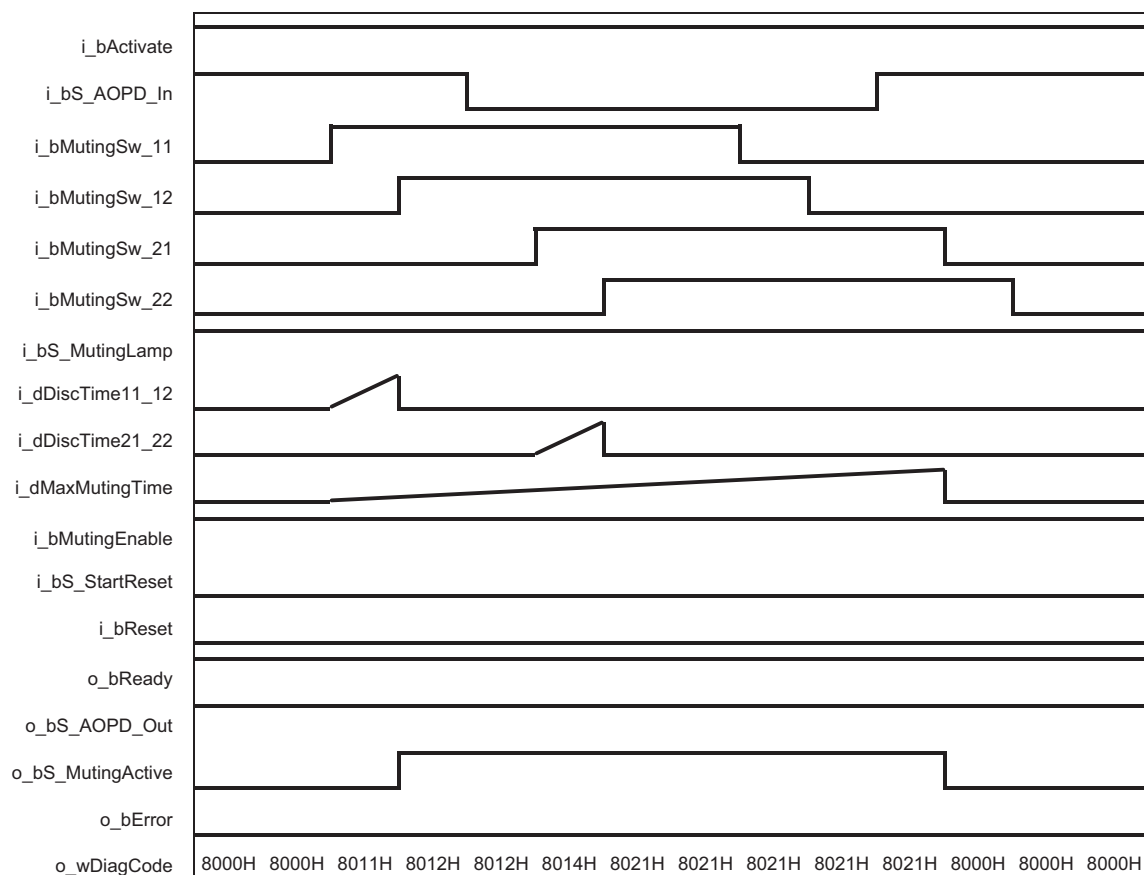

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dDiscTime11_12, i_dDiscTime21_22, and i_dMaxMutingTime elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_AOPD_Out	OFF
o_bS_MutingActive	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 75 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset condition detected after FB activation in state 8001H.	Set i_bReset to OFF. Check the devices and wiring related to i_bReset.
C003H	Error Muting Lamp	Error detected in muting lamp.	Set i_bReset to ON. Check the devices and wiring related to i_bReset.
CYx4H C004H to CFF4H	Error Muting Sequence	<p>Error detected in muting sequence in state 8000H, 8011H, 8311H, 8012H, 8021H, 8014H, 8314H, 8122H, 8422H, 8121H, 8112H, 8114H, or 8414H.</p> <p>Y = Status in the sequence (6 states for forward and 6 states for backward direction).</p> <p>C0x4H = Error occurred in state 8000H C1x4H = Error occurred in state Forward 8011H C2x4H = Error occurred in state Forward 8311H C3x4H = Error occurred in state Forward 8012H C4x4H = Error occurred in state Forward 8014H C5x4H = Error occurred in state Forward 8314H C6x4H = Error occurred in state Forward 8021H C7x4H = Error occurred in state Backward 8122H C8x4H = Error occurred in state Backward 8422H C9x4H = Error occurred in state Backward 8121H Cax4H = Error occurred in state Backward 8114H Cbx4H = Error occurred in state Backward 8414H Ccx4H = Error occurred in state Backward 8112H CFx4H = i_bMutingEnable=OFF</p> <p>The states of wrong muting sequences (👉 Page 73 Wrong muting sequences) including i_bMutingEnable=OFF are always changed to CFx4H when i_bMutingEnable is set to OFF. (Never changed to other states.)</p> <p>x = Status of the sensors when error occurred (MS_11, MS_12, MS_21, MS_22 in order)</p> <p>CY04H=OFF, OFF, OFF, OFF CY14H=ON, OFF, OFF, OFF CY24H=OFF, ON, OFF, OFF CY34H=ON, ON, OFF, OFF CY44H=OFF, OFF, ON, OFF CY54H=ON, OFF, ON, OFF CY64H=OFF, ON, ON, OFF CY74H=ON, ON, ON, OFF CY84H=OFF, OFF, OFF, ON CY94H=ON, OFF, OFF, ON CYA4H=OFF, ON, OFF, ON CYB4H=ON, ON, OFF, ON CYC4H=OFF, OFF, ON, ON CYD4H=ON, OFF, ON, ON CYE4H=OFF, ON, ON, ON CYF4H=ON, ON, ON, ON</p>	Set all muting switches to OFF and set i_bReset to ON. Check the devices and wiring related to i_bReset.
C005H	Parameter Error	i_dDiscTime11_12, i_dDiscTime21_22 or i_dMaxMutingTime value out of range.	Set all values of i_dDiscTime11_12, i_dDiscTime21_22, and i_dMaxMutingTime within the setting range, and set i_bReset to ON.
C006H	Error Timer MaxMuting	Timing error. Active muting time exceeds i_dMaxMutingTime.	Set all muting switches to OFF and set i_bReset to ON. Check the muting situation in the process.
C007H	Error Timer MS11_12	Timing error. Discrepancy time for switching i_bMutingSw_11 and i_bMutingSw_12 > i_dDiscTime11_12.	
C008H	Error Timer MS21_22	Timing error. Discrepancy time for switching i_bMutingSw_21 and i_bMutingSw_22 > i_dDiscTime21_22.	

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C010H	Reset Error 2	Static i_bReset condition detected after FB activation in state 8002H.	Set i_bReset to OFF. Check the devices and wiring related to i_bReset.
C020H	Reset Error 3	Static i_bReset condition detected after FB activation in state C003H.	
C030H	Reset Error 4	Static i_bReset condition detected after FB activation in state CYx4H.	
C040H	Reset Error 5	Static i_bReset condition detected after FB activation in state C006H.	
C050H	Reset Error 6	Static i_bReset condition detected after FB activation in state C007H.	
C060H	Reset Error 7	Static i_bReset condition detected after FB activation in state C008H.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8000H	AOPD Free	Muting not active and no safety demand from AOPD. If timers from subsequent muting are still running, they are stopped. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	None. (Starting muting is possible.)
8001H	Init	The FB was activated. • o_bReady: ON • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Set i_bReset to ON.
8002H	Safety Demand AOPD	Safety demand detected by AOPD and muting not active. • o_bReady: ON • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Set i_bReset to ON after the completion of safety demand.
8005H	Safe	The safety function is active. • o_bReady: ON • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Wait the completion of safety demand.
8011H	Muting Forward Start 1	Muting forward sequence is in starting phase after rising trigger of i_bMutingSw_11. Monitoring of i_dDiscTime11_12 is activated. Monitoring of i_dMaxMutingTime is activated. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	Set both muting switches (i_bMutingSw_11 and i_bMutingSw_12) to ON. Complete muting within i_dMaxMutingTime.
8311H	Muting Forward Start 2	Muting forward sequence is in starting phase after rising trigger of i_bMutingSw_12. Monitoring of i_dDiscTime11_12 is activated. Monitoring of i_dMaxMutingTime is activated. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
8012H	Muting Forward Active 1	Muting forward sequence is active when both i_bMutingSw_11 and i_bMutingSw_12 have been actuated in the same cycle or in serial. Monitoring of i_dDiscTime11_12 is stopped. Monitoring of i_dMaxMutingTime is activated, when transition came directly from state 8000H. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	Complete muting within i_dMaxMutingTime.
8014H	Muting Forward Step 1	Muting forward sequence is active. i_bMutingSw_21 is the first exit switch actuated. Monitoring of i_dDiscTime21_22 is started. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	Set both muting switches (i_bMutingSw_21 and i_bMutingSw_22) to ON. Complete muting within i_dMaxMutingTime.
8314H	Muting Forward Step 2	Muting forward sequence is active. i_bMutingSw_22 is the first exit switch actuated. Monitoring of i_dDiscTime21_22 is started. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	
8021H	Muting Forward Active 2	Muting forward sequence is still active. Both i_bMutingSw_21 and i_bMutingSw_22 are actuated and the monitoring of i_dDiscTime21_22 is stopped. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	
8122H	Muting Backward Start 1	Muting backward sequence is in starting phase after rising trigger of i_bMutingSw_21. Monitoring of i_dDiscTime21_22 is activated. Monitoring of i_dMaxMutingTime is activated. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	Set both muting switches (i_bMutingSw_21 and i_bMutingSw_22) to ON. Complete muting within i_dMaxMutingTime.
8422H	Muting Backward Start 2	Muting backward sequence is in starting phase after rising trigger of i_bMutingSw_22. Monitoring of i_dDiscTime21_22 is activated. Monitoring of i_dMaxMutingTime is activated. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	
8121H	Muting Backward Active 1	Muting backward sequence is active when both i_bMutingSw_21 and i_bMutingSw_22 have been actuated in the same cycle or in serial. Monitoring of i_dDiscTime21_22 is stopped. Monitoring of i_dMaxMutingTime is activated, when transition came directly from state 8000H. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	Complete muting within i_dMaxMutingTime.
8114H	Muting Backward Step 1	Muting backward sequence is active. i_bMutingSw_11 is the first exit switch actuated. Monitoring of i_dDiscTime11_12 is started. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	Set both muting switches (i_bMutingSw_11 and i_bMutingSw_12) to ON. Complete muting within i_dMaxMutingTime.
8414H	Muting Backward Step 2	Muting backward sequence is active. i_bMutingSw_12 is the first exit switch actuated. Monitoring of i_dDiscTime11_12 is started. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
8112H	Muting Backward Active 2	<p>Muting backward sequence is still active. Both exit switches i_bMutingSw_11 and i_bMutingSw_12 are actuated and the monitoring of i_dDiscTime11_12 is stopped.</p> <ul style="list-style-type: none"> • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF 	Complete muting within i_dMaxMutingTime.



WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset




4.12 M+SF_MUTES_R

Overview




Item	Description
Function name	Sequential muting
Functional overview	Muting is the intended suppression of the safety function (e.g., light barriers). In this FB, sequential muting with four muting sensors is specified.
Symbol	<div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>(1) — B: i_bActivate</p> <p>(2) — B: i_bS_AOPD_In</p> <p>(3) — B: i_bMutingSw_11</p> <p>(4) — B: i_bMutingSw_12</p> <p>(5) — B: i_bMutingSw_21</p> <p>(6) — B: i_bMutingSw_22</p> <p>(7) — B: i_bS_MutingLamp</p> <p>(8) — D: i_dMaxMutingTime</p> <p>(9) — B: i_bMutingEnable</p> <p>(10) — B: i_bS_StartReset</p> <p>(11) — B: i_bReset</p> </div> <div style="flex: 1; border: 1px solid black; padding: 10px; text-align: center;"> <p>M+SF_MUTES_R</p> </div> <div style="flex: 1;"> <p>o_bReady: B — (12)</p> <p>o_bs_AOPD_Out: B — (13)</p> <p>o_bS_MutingActive: B — (14)</p> <p>o_bError: B — (15)</p> <p>o_wDiagCode: W — (16)</p> </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_AOPD_In	Bit*	OFF	OSSD (safety output) signal from AOPD (Active opto-electronic protective devices). OFF: Protection field interrupted ON: Protection field not interrupted
(3)	i_bMutingSw_11	Bit	OFF	Status of muting sensor 11. OFF: Muting sensor 11 is not actuated. ON: Workpiece actuates muting sensor 11.
(4)	i_bMutingSw_12	Bit	OFF	Status of muting sensor 12. OFF: Muting sensor 12 is not actuated. ON: Workpiece actuates muting sensor 12.
(5)	i_bMutingSw_21	Bit	OFF	Status of muting sensor 21. OFF: Muting sensor 21 is not actuated. ON: Workpiece actuates muting sensor 21.
(6)	i_bMutingSw_22	Bit	OFF	Status of muting sensor 22. OFF: Muting sensor 22 is not actuated. ON: Workpiece actuates muting sensor 22.
(7)	i_bS_MutingLamp	Bit*	OFF	Indicates operation of the muting lamp. OFF: Muting lamp failure ON: Muting lamp no failure
(8)	i_dMaxMutingTime	Double word [signed]	0	Maximum time to complete muting sequence, timer started when first muting sensor is actuated. Increments of 10ms. Range: Fixed values from 0 to 60000 (0 to 60000ms = 10min)
(9)	i_bMutingEnable	Bit	OFF	Command by the control system that enables the start of the muting function when needed by the machine cycle. After the start of the muting function, this signal can be switched OFF. OFF: Muting not enabled ON: Start of Muting function enabled
(10)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(11)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(12)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(13)	o_bS_AOPD_Out	Bit*	OFF	Safety output, indicates status of the muted guard. OFF: AOPD protection field interrupted and muting not active. ON: AOPD protection field not interrupted or muting active.
(14)	o_bS_MutingActive	Bit*	OFF	Indicates status of muting process. OFF: Muting not active ON: Muting active
(15)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(16)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions



WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- Safe input must be connected to i_bMutingSw_11/12/21/22 depending on the safety requirements. Input appropriate signals depending on the safety requirements of the application.
- A short circuit in the muting sensor signals or a functional application error to supply these signals are not detected by this FB but interpreted as incorrect muting sequence. However, this condition should not lead to unwanted muting. The user should take care to include this in his risk analysis.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details

Muting is the intended suppression of the safety function. This is required, e.g., when transporting a workpiece into the danger zone without causing the machine to stop. Muting is triggered by muting sensors. The use of two or four muting sensors and correct integration into the production sequence must ensure that no persons enter the danger zone while the light curtain is muted. Muting sensors can be proximity switches, photoelectric barriers, limit switches, etc. which do not have to be failsafe. Active muting mode must be indicated by indicator lights (the muting lamp).

There are sequential and parallel muting procedures. In this FB, sequential muting with four muting sensors is used. An explanation for transporting of workpieces in forward direction is provided in the table below. The FB can be used in both directions, forward and backward. The muting should be enabled with the i_bMutingEnable signal by the process control when there is no manipulation in the danger zone.


The FB input parameters include the signals of the four muting sensors (i_bMutingSw_11 to i_bMutingSw_22) as well as the OSSD signal (i_bS_AOPD_In) from the "active opto-electronic protective device". For forward direction, from the time when i_bMutingSw_11/12 are sequentially set to ON and then i_bMutingSw_21/22 are sequentially set to ON until when only i_bMutingSw_22 is set to ON, muting is active and o_bS_AOPD_Out is set to ON, although i_bS_AOPD_In is OFF. For backward direction, muting is active from the time when both i_bMutingSw_21/22 are set to ON until when both i_bMutingSw_11/12 are set to ON and then only i_bS_Muting_11 is set to ON.

■ Example for M+SF_MUTES_R in forward direction with four sensors

Figure	Description
	If the muting sensor i_bMutingSw_11 (MS_11) and then i_bMutingSw_12 (MS_12) are activated by passage of a workpiece, the muting mode is activated.
	Muting mode remains active as long as MS_11 and MS_12 are activated by a workpiece. The workpiece may pass through the light curtain without causing a machine stop.
	Before muting sensors MS_11 and MS_12 are disabled, muting sensors i_bMutingSw_21 (MS_21) and i_bMutingSw_22 (MS_22) must be activated. This ensures that muting mode remains active.
	Muting mode is terminated if only muting sensor MS_22 is activated by a workpiece.

State diagram

State transition of M+SF_MUTES_R

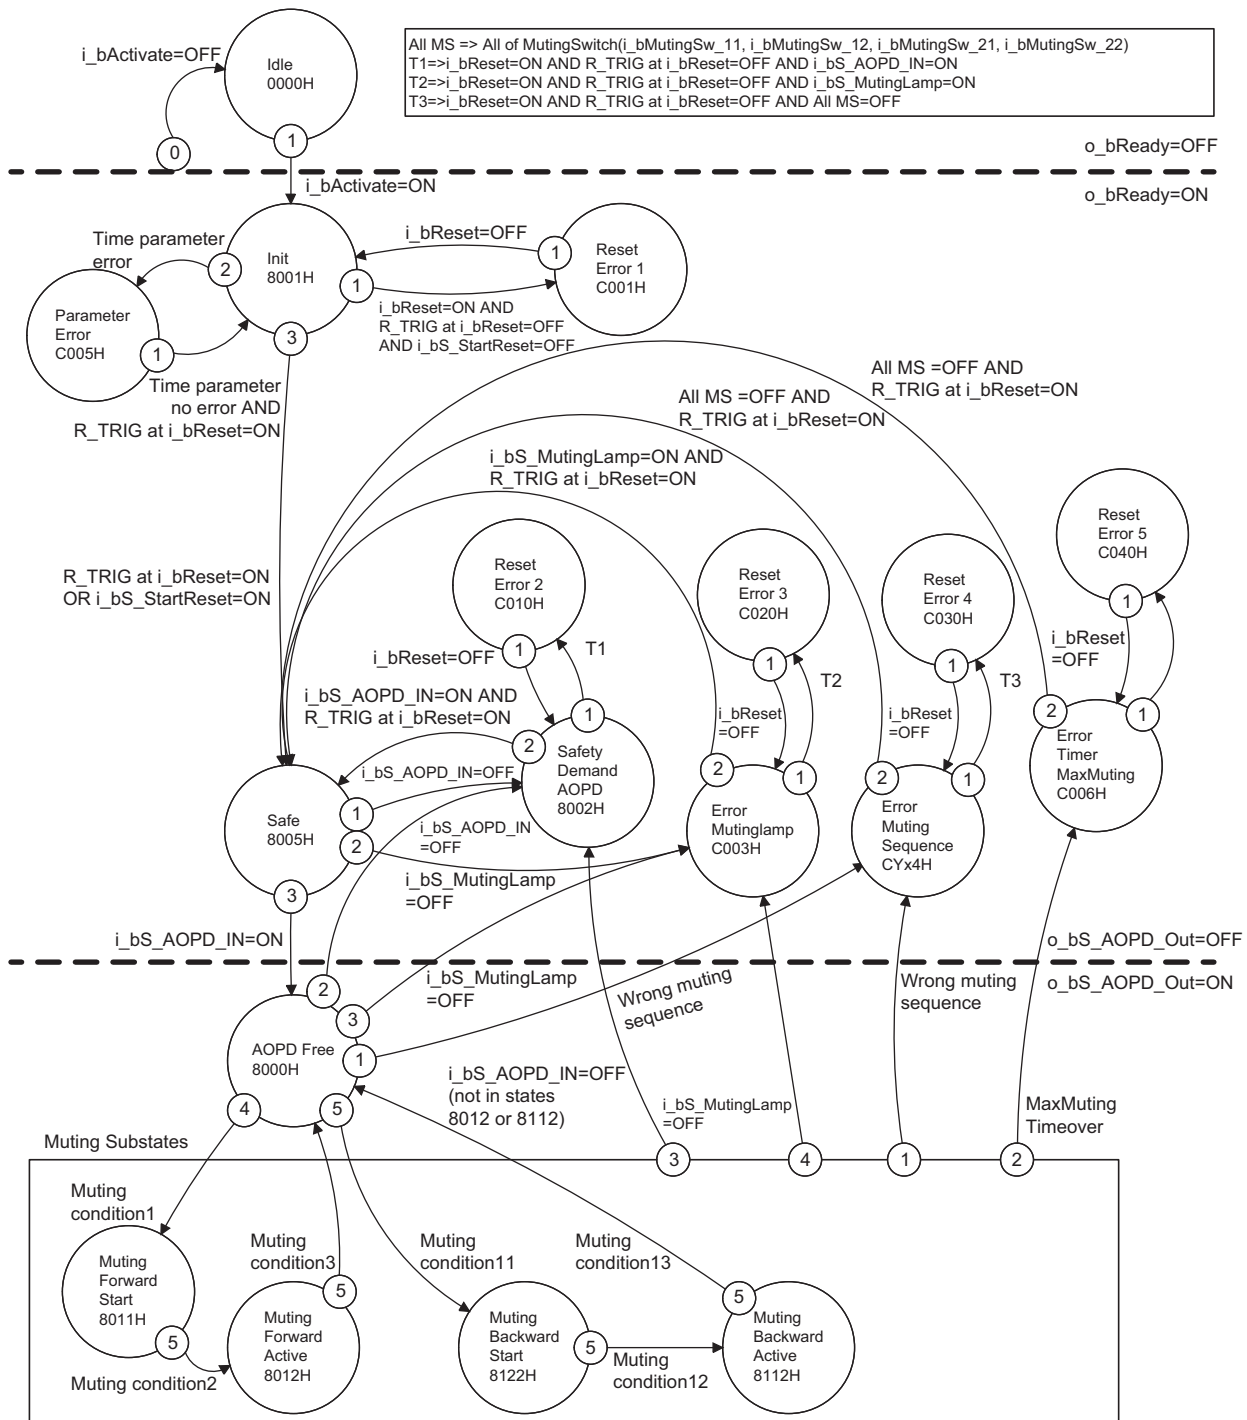

Note 1: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

Note 2: Within muting substates, transitions due to Error Muting sequence (priority 1), Error Timer (priority 2), Safety demand AOPD (priority 3) or Error Muting lamp (priority 4) have higher priority than transitions to Muting substates (priority 5).

Note 3: Muting condition 1-3/11-13 and Wrong muting sequences are shown in the following.

- Muting conditions 1-3 (Page 83 Muting conditions (forward direction))
- Muting conditions 11-13 (Page 83 Muting conditions (backward direction))
- Wrong muting sequences (Page 83 Wrong muting sequences)

Note 4: Time parameter error (condition of transition from 8001H to C005H) is detected in the following case.

- 1) i_dMaxMutingTime has been set to a value less than 0ms or greater than 10min. (0 > i_dMaxMutingTime OR i_dMaxMutingTime > 60000)

Muting conditions (forward direction)

No.	State transition	Condition/action
1	8000H→8011H	MS_11 is the first entry switch actuated: Start timer i_dMaxMutingTime. i_bMutingEnable=ON AND MS_11=OFF→ON AND MS_12=OFF AND MS_21=OFF AND MS_22=OFF
2	8011H→8012H	MS_12 is the second entry switch actuated: i_bMutingEnable=ON AND MS_11=ON AND MS_12=OFF→ON AND MS_21=OFF AND MS_22=OFF
3	8012H→8000H	MS_21 is the first exit switch released: Stop timer i_dMaxMutingTime. MS_11=OFF AND MS_12=OFF AND MS_21=ON→OFF AND MS_22=ON

Muting conditions (backward direction)


No.	State transition	Condition/action
11	8000H→8122H	MS_22 is the first entry switch actuated: Start timer i_dMaxMutingTime. i_bMutingEnable=ON AND MS_11=OFF AND MS_12=OFF AND MS_21=OFF AND MS_22=OFF→ON
12	8122H→8112H	MS_21 is the second entry switch actuated: i_bMutingEnable=ON AND MS_11=OFF AND MS_12=OFF AND MS_21=OFF→ON AND MS_22=ON
13	8112H→8000H	MS_12 is the first exit switch actuated: Stop timer i_dMaxMutingTime. MS_11=ON AND MS_12=ON→OFF AND MS_21=OFF AND MS_22=OFF

Wrong muting sequences

Status	Wrong muting sequences
8000H	i_bMutingEnable=OFF AND MS_11=OFF→ON
	i_bMutingEnable=OFF AND MS_22=OFF→ON
	MS_12=ON OR MS_21=ON
	MS_11=ON AND MS_22=ON
8011H	i_bMutingEnable=OFF OR MS_11=OFF OR MS_21=ON OR MS_22=ON
8012H	MS_11=OFF→ON OR MS_12=OFF→ON OR MS_22=ON→OFF
	MS_11=ON AND MS_12=ON→OFF
	(MS_11=ON OR MS_12=ON) AND MS_21=ON→OFF
	(MS_11=OFF OR MS_12=OFF) AND MS_21=ON AND MS_22=OFF
	(MS_11=OFF OR MS_12=OFF OR MS_21=OFF) AND MS_22=OFF→ON
	MS_11=OFF AND MS_12=OFF AND MS_21=OFF AND MS_22=OFF
	MS_11=ON AND (MS_12=OFF OR MS_21=OFF) AND MS_22=ON
	MS_11=OFF AND MS_12=ON AND MS_21=OFF AND MS_22=ON
	MS_21=OFF→ON AND MS_22=OFF→ON
	MS_11=ON→OFF AND MS_12=ON→OFF
	MS_12=ON→OFF AND MS_21=ON→OFF
	MS_11=OFF AND MS_12=ON AND MS_21=OFF
	MS_11=ON→OFF OR MS_21=OFF→ON OR MS_22=OFF→ON
	MS_21=ON→OFF AND MS_22=ON
8112H	MS_12=ON→OFF AND (MS_21=ON OR MS_22=ON)
	MS_11=OFF AND MS_12=ON AND (MS_21=OFF OR MS_22=OFF)
	MS_11=OFF→ON AND (MS_12=OFF OR MS_21=OFF OR MS_22=OFF)
	MS_11=OFF AND MS_12=OFF AND MS_21=OFF AND MS_22=OFF
	MS_11=ON AND (MS_12=OFF OR MS_21=OFF) AND MS_22=ON
	MS_11=ON AND MS_12=OFF AND MS_21=ON AND MS_22=OFF
	MS_11=OFF→ON AND MS_12=OFF→ON
	MS_21=ON→OFF AND MS_22=ON→OFF
	MS_12=ON→OFF AND MS_21=ON→OFF
	MS_12=OFF AND MS_21=ON AND MS_22=OFF
	i_bMutingEnable=OFF OR MS_11=ON OR MS_12=ON OR MS_22=OFF
8122H	i_bMutingEnable=OFF OR MS_11=ON OR MS_12=ON OR MS_22=OFF

Typical timing diagram

■ For M+SF_MUTES_R (forward direction)

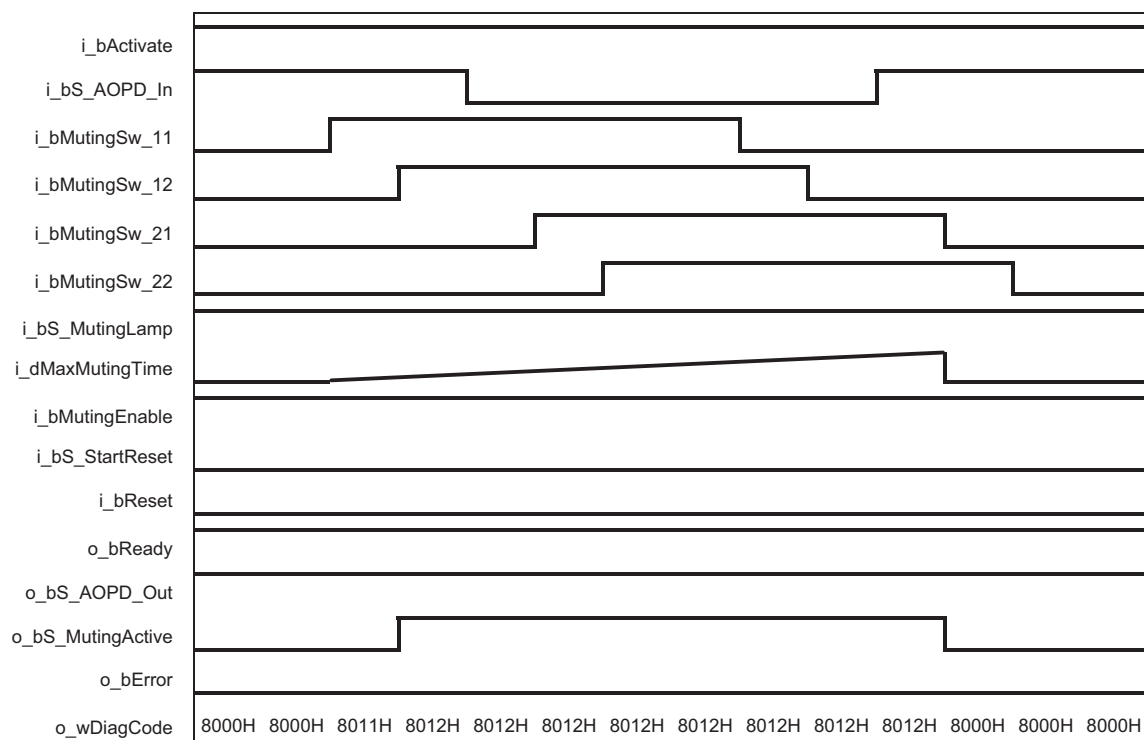

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the **i_dMaxMutingTime** elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_AOPD_Out	OFF
o_bS_MutingActive	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 85 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset condition detected after FB activation.	Set i_bReset to OFF. Check the devices and wiring related to i_bReset.
C003H	Error Muting Lamp	Error detected in muting lamp.	Set i_bReset to ON. Check the devices and wiring related to i_bReset.
C005H	Parameter Error	i_dMaxMutingTime value out of range.	Set a proper value to the parameter and set i_bReset to ON.
C006H	Error Timer MaxMuting	Timing error. Active muting time exceeds i_dMaxMutingTime.	Set all muting switches to OFF and set i_bReset to ON. Check the muting situation in the process.
C010H	Reset Error 2	Static i_bReset condition detected at 8002H.	Set i_bReset to OFF.
C020H	Reset Error 3	Static i_bReset condition detected at C003H.	Check the devices and wiring related to i_bReset.
C030H	Reset Error 4	Static i_bReset condition detected at CYx4H.	
C040H	Reset Error 5	Static i_bReset condition detected at C006H.	
CYx4H C004H to CFF4H	Error Muting Sequence	<p>Error detected in muting sequence in state 8000H, 8011H, 8012H, 8112H, or 8122H.</p> <p>Y = Status in the sequence (2 states for forward and 2 states for backward direction).</p> <p>C0x4H = Error occurred in state 8000H</p> <p>C1x4H = Error occurred in state Forward 8011H</p> <p>C2x4H = Error occurred in state Forward 8012H</p> <p>C3x4H = Error occurred in state Backward 8122H</p> <p>C4x4H = Error occurred in state Backward 8112H</p> <p>CFx4H = i_bMutingEnable=OFF</p> <p>The states of wrong muting sequences (🔍 Page 83 Wrong muting sequences) including i_bMutingEnable=OFF are always changed to CFx4H when i_bMutingEnable is set to OFF. (Never changed to other states.)</p> <p>x = Status of the sensors when error occurred (MS_11, MS_12, MS_21, MS_22)</p> <p>CY04H=OFF, OFF, OFF, OFF</p> <p>CY14H=ON, OFF, OFF, OFF</p> <p>CY24H=OFF, ON, OFF, OFF</p> <p>CY34H=ON, ON, OFF, OFF</p> <p>CY44H=OFF, OFF, ON, OFF</p> <p>CY54H=ON, OFF, ON, OFF</p> <p>CY64H=OFF, ON, ON, OFF</p> <p>CY74H=ON, ON, ON, OFF</p> <p>CY84H=OFF, OFF, OFF, ON</p> <p>CY94H=ON, OFF, OFF, ON</p> <p>CYA4H=OFF, ON, OFF, ON</p> <p>CYB4H=ON, ON, OFF, ON</p> <p>CYC4H=OFF, OFF, ON, ON</p> <p>CYD4H=ON, OFF, ON, ON</p> <p>CYE4H=OFF, ON, ON, ON</p> <p>CYF4H=ON, ON, ON, ON</p>	Set all muting switches to OFF and set i_bReset to ON. Check the devices and wiring related to i_bReset.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8000H	AOPD Free	Muting not active and no safety demand from AOPD. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	None. (Starting muting is possible.)
8001H	Init	The FB has been activated. • o_bReady: ON • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Set i_bReset to ON.
8002H	Safety Demand AOPD	Safety demand detected by AOPD and muting not active. • o_bReady: ON • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Set i_bReset to ON after the completion of safety demand.
8005H	Safe	The safety function is active. • o_bReady: ON • o_bS_AOPD_Out: OFF • o_bS_MutingActive: OFF • o_bError: OFF	Wait the completion of safety demand.
8011H	Muting Forward Start	Muting forward sequence is in the starting phase and no safety demand. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	• Set both muting switches (i_bMutingSw_11 and i_bMutingSw_12) to ON. • Complete muting within i_dMaxMutingTime.
8012H	Muting Forward Active	Muting forward sequence is active. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	Complete muting within i_dMaxMutingTime.
8112H	Muting Backward Active	Muting backward sequence is active. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: ON • o_bError: OFF	
8122H	Muting Backward Start	Muting backward sequence is in starting phase and no safety demand. • o_bReady: ON • o_bS_AOPD_Out: ON • o_bS_MutingActive: OFF • o_bError: OFF	• Set both muting switches (i_bMutingSw_21 and i_bMutingSw_22) to ON. • Complete muting within i_dMaxMutingTime.

WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset

4.13 M+SF_OUTC_R

Overview

Item	Description
Function name	Output control
Functional overview	Control of a safety output with a signal from the standard application and a safety signal with optional startup inhibits.
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> (1) — B: i_bActivate (2) — B: i_bS_SafeControl (3) — B: i_bProcessControl (4) — B: i_bStaticControl (5) — B: i_bS_StartReset (6) — B: i_bS_AutoReset (7) — B: i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center;"> M+SF_OUTC_R </div> <div style="margin-left: 20px;"> o_bReady: B — (8) o_bS_OutControl: B — (9) o_bError: B — (10) o_wDiagCode: W — (11) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following. Page 11 General Functions
(2)	i_bS_SafeControl	Bit*	OFF	Safety output signals from other FB libraries. OFF: Safety output signals from other FB libraries are OFF. ON: Safety output signals from other FB libraries are ON.
(3)	i_bProcessControl	Bit	OFF	Control signal from the standard application. OFF: Request to set i_bS_OutControl to OFF. ON: Request to set i_bS_OutControl to ON.
(4)	i_bStaticControl	Bit	OFF	Optional conditions for process control. (Constant) OFF: Dynamic change at i_bProcessControl (OFF to ON) required after FB activation or triggered safety function. ON: No dynamic change at i_bProcessControl (OFF to ON) required after FB activation or triggered safety function. If i_bProcessControl is set to ON, safety output is set to ON.
(5)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following. Page 11 General Functions
(6)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal reset to ON. For details, see the following. Page 11 General Functions
(7)	i_bReset	Bit	OFF	Reset input. For details, see the following. Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(8)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following. Page 11 General Functions
(9)	o_bS_OutControl	Bit*	OFF	Controls connected actuators. OFF: Disable connected actuators. ON: Enable connected actuators.
(10)	o_bError	Bit	OFF	Error flag. For details, see the following. Page 11 General Functions
(11)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following. Page 11 General Functions

WARNING

Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.

FB details

This FB is an output driver for a safety output. The safety output is controlled via M+SF_OUTC_R using a signal from the standard application (i_bProcessControl) and a signal from the safety application (i_bS_SafeControl).

■ Optional conditions for process control (i_bProcessControl).

i_bStaticControl is able to set the option of an additional function start (i_bProcessControl OFF to ON) following the FB activation or feedback of the safe signal.


- i_bStaticControl=OFF: An additional function start (i_bProcessControl OFF to ON) is required following FB activation or feedback of the safe signal (i_bS_SafeControl). A static ON signal at i_bProcessControl does not set i_bS_OutControl to ON.
- i_bStaticControl=ON: An additional function start (i_bProcessControl OFF to ON) is not required following FB activation or feedback of the safe signal (i_bS_SafeControl). The static ON signal at i_bProcessControl sets i_bS_OutControl to ON if the other conditions have been met.

WARNING

Safe data (e.g. emergency stop demand) must not connect to i_bProcessControl. You are responsible for planning the behavior of the stop functions according to the result of your risk analysis for the safety function.

State diagram


State transition of M+SF_OUTC_R

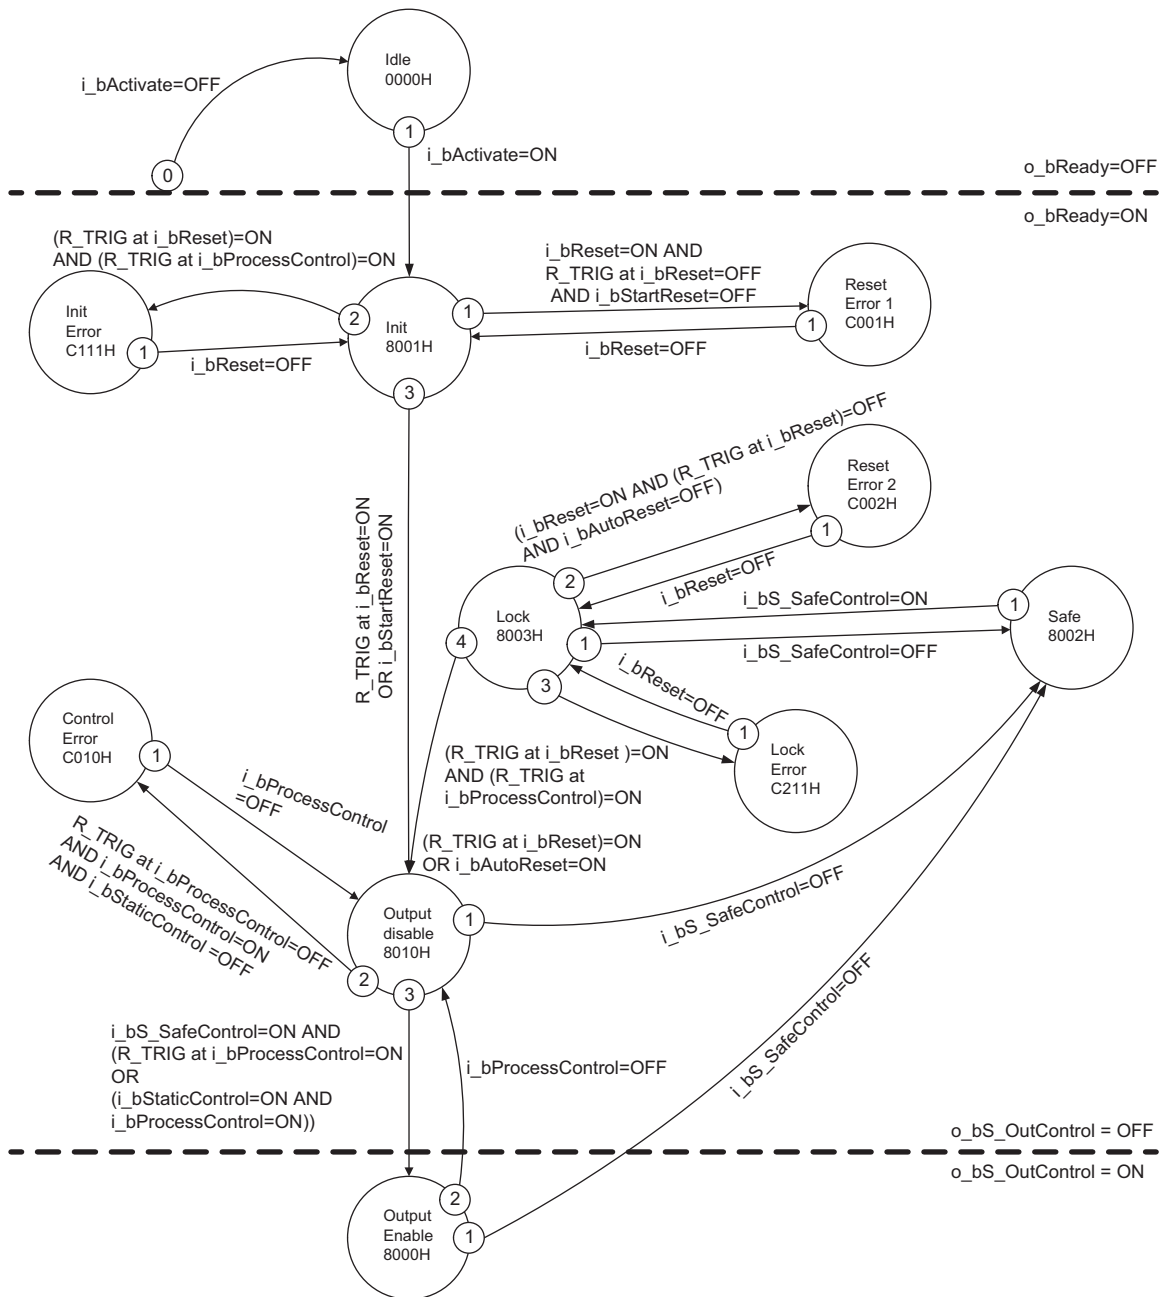


Note: The transition from any state to the Idle state due to $i_bActivate=OFF$ is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_OUTC_R (i_bS_StartReset=OFF and i_bS_AutoReset=OFF)

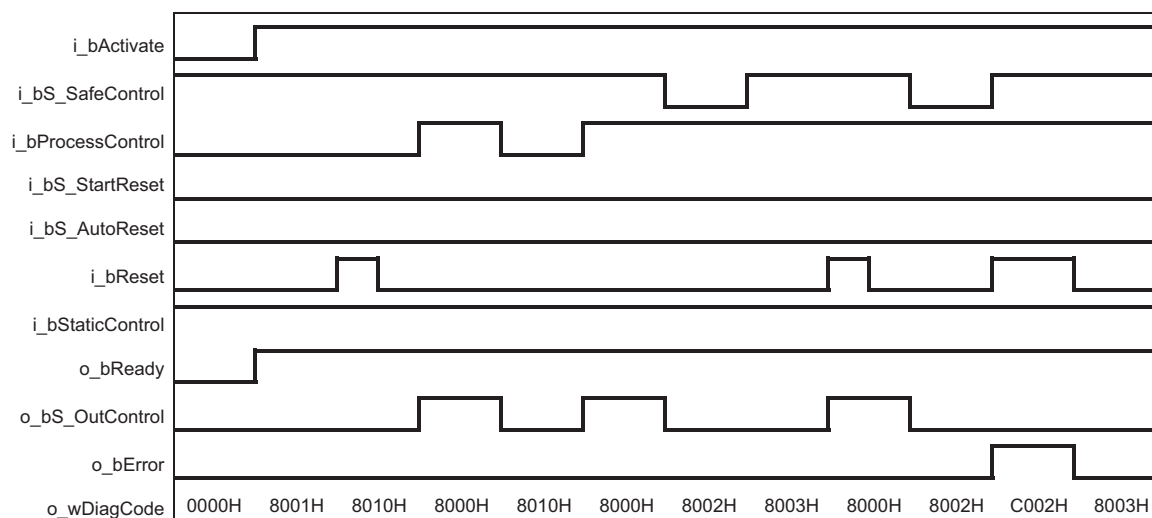

■ For M+SF_OUTC_R (i_bS_StartReset=ON and i_bS_AutoReset=OFF)

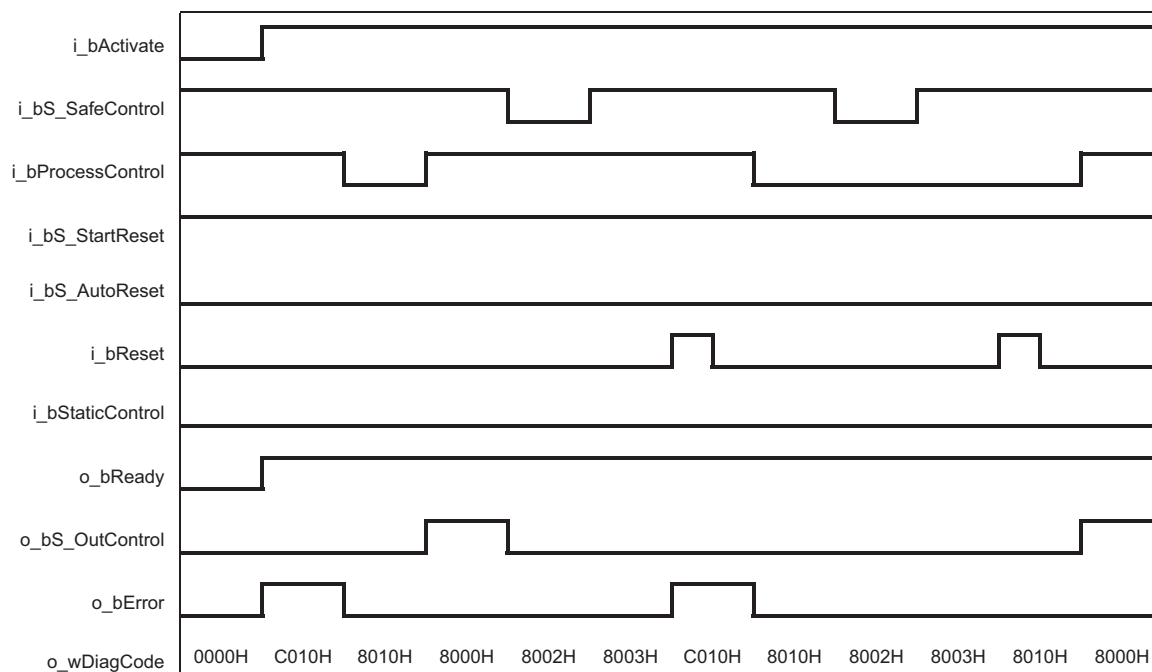

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_OutControl	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 91 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Reset Error 1	Static i_bReset signal in state 8001H.	Set i_bReset to OFF.
C002H	Reset Error 2	Static i_bReset signal in state 8003H.	Check the devices and wiring of i_bReset.
C010H	Control Error	Static signal at i_bProcessControl in state 8010H.	Set i_bProcessControl to OFF. Check the setting of i_bStaticControl.
C111H	Init Error	Simultaneous rising trigger at i_bReset and i_bProcessControl in state 8001H.	Set i_bReset to OFF. Check the independence between i_bProcessControl and i_bReset.
C211H	Lock Error	Simultaneous rising trigger at i_bReset and i_bProcessControl in state 8003H.	

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (initial state) All outputs are set to OFF. • o_bReady: OFF • o_bS_OutControl: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	The FB activation startup inhibit is active. • o_bReady: ON • o_bS_OutControl: OFF • o_bError: OFF	i_bReset required.
8002H	Safe	Triggered safety FB. Safety outputs are disabled. i_bS_SafeControl=OFF • o_bReady: ON • o_bS_OutControl: OFF • o_bError: OFF	i_bS_SafeControl required.
8003H	Lock	Safety function startup inhibit is active. • o_bReady: ON • o_bS_OutControl: OFF • o_bError: OFF	i_bReset required.
8010H	Output Disable	Process control is not active and safety is disabled. • o_bReady: ON • o_bS_OutControl: OFF • o_bError: OFF	i_bProcessControl required.
8000H	Output Enable	Process control is active and safety is enabled. • o_bReady: ON • o_bS_OutControl: ON • o_bError: OFF	None.




WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset and i_bS_AutoReset

Application example

An application example of M+SF_OUTC_R is shown below.

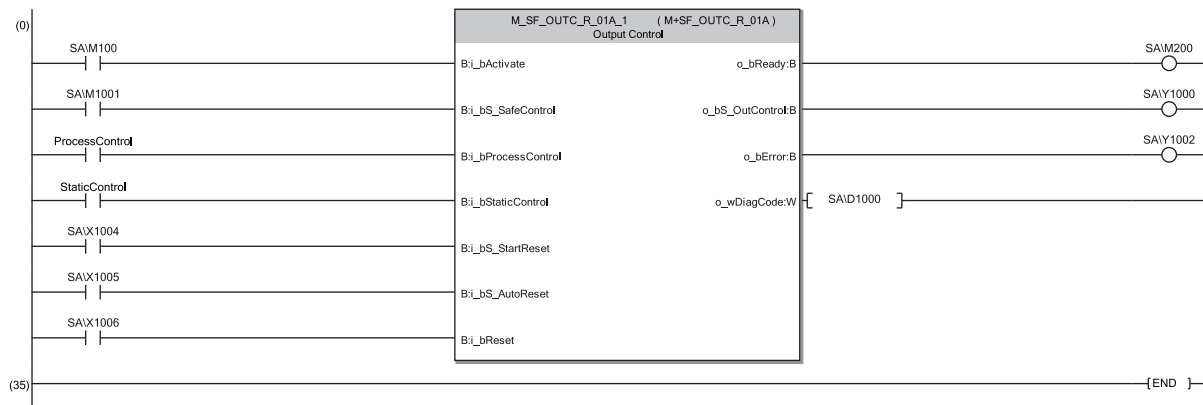

■ Labels

• Input labels

Variable name	Allocated device/label	Description
i_bActivate	SAIM100	Activation of the safety FB
i_bS_SafeControl	SAIM1001	Safety status (status of the emergency stop button and ESPE)
i_bProcessControl	ProcessControl (standard/safety shared label)	Functional restart input from standard programmable controller (via a standard input)
i_bStaticControl	StaticControl (standard/safety shared label)	Optional conditions for process control
i_bS_StartReset	SAIX1004	Reset method for the activated safety FB
i_bS_AutoReset	SAIX1005	Reset method for the input signal reset to ON
i_bReset	SAIX1006	Reset switch

• Output labels

Variable name	Allocated device/label	Description
o_bReady	SAIM200	Status of whether the safety FB is activated or not.
o_bS_OutControl	SAIY1000	Control of actuator
o_bError	SAIY1002	Error flag
o_wDiagCode	SAID1000	Diagnostic code





4.14 M+SF_TSSSEN_R

Overview




Item	Description
Function name	Testable safety sensor
Functional overview	This FB can be used for external testable safety sensors (ESPE: electro-sensitive protective equipment, such as a light beam).
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> (1) — B: i_bActivate (2) — B: i_bS_OSSD_In (3) — B: i_bStartTest (4) — D: i_dTestTime (5) — B: i_bNoExternalTest (6) — B: i_bS_StartReset (7) — B: i_bS_AutoReset (8) — B: i_bReset </div> <div style="border: 1px solid black; padding: 10px; text-align: center; flex-grow: 1;"> M+SF_TSSSEN_R </div> <div style="margin-left: 20px;"> o_bReady: B — (9) o_bS_OSSD_Out: B — (10) o_bS_TestOut: B — (11) o_bTestPossible: B — (12) o_bTestExecuted: B — (13) o_bError: B — (14) o_wDiagCode: W — (15) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_OSSD_In	Bit*	OFF	Status of sensor output, e.g., light curtain. OFF: Safety sensor in test state or demand for safety-related response. ON: Sensor in the state for normal operating conditions.
(3)	i_bStartTest	Bit	OFF	Input to start sensor test. Set o_bS_TestOut and start the internal time monitoring function in the FB. OFF: No test requested ON: Test requested
(4)	i_dTestTime	Double word [signed]	0	Test time of safety sensor. (Increments of 10ms) Range: Fixed values from 0 to 15 (0 to 150ms)
(5)	i_bNoExternalTest	Bit	OFF	Indicates if external manual sensor test is supported. OFF: The external manual sensor test is supported. Only after a complete manual sensor switching sequence, an automatic test is possible again after a faulty automatic sensor test. ON: The external manual sensor test is not supported. An automatic test is possible again without a manual sensor switching sequence after faulty automatic sensor test.
(6)	i_bS_StartReset	Bit*	OFF	Selection of a reset method for the activated (first time) safety FB. For details, see the following.  Page 11 General Functions
(7)	i_bS_AutoReset	Bit*	OFF	Selection of a reset method for the input signal reset to ON. For details, see the following.  Page 11 General Functions
(8)	i_bReset	Bit	OFF	Reset input. For details, see the following.  Page 11 General Functions

■ Output labels

No.	Variable name	Data type	Default value	Description
(9)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(10)	o_bS_OSSD_Out	Bit*	OFF	Safety output indicating the status of the ESPE. OFF: The sensor has a safety-related action request or test error. ON: The sensor has no safety-related action request and no test error.
(11)	o_bS_TestOut	Bit*	ON	Coupled with the test input of the sensor. OFF: Test request issued ON: No test request
(12)	o_bTestPossible	Bit	OFF	Feedback signal to the process. OFF: An automatic sensor test is not possible. ON: An automatic sensor test is possible.
(13)	o_bTestExecuted	Bit	OFF	A positive signal edge indicates the successful execution of the automatic sensor test. OFF: An automatic sensor test was not executed yet, an automatic sensor test is active, or an automatic sensor test was faulty. ON: A sensor test was executed successfully.
(14)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(15)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions

WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details

Type 2 ESPE shall have a means of periodic testing to detect a hazardous fault (e.g., loss of sensing unit detection capability, response time exceeding that specified).

The test shall verify that each light beam operates in the manner specified by the supplier. The test signal shall simulate the actuation of the sensing device and the duration of the periodic test shall not exceed 150ms. The upper limit of test time is set by the i_dTestTime parameter, and the FB monitors the test time and detects an error.


WARNING

- The ESPE must be selected in respect of the product standards IEC 61496-1, -2 and -3 and ISO13849-1.
- In order to use this FB, the ESPE shall be provided with suitable input facilities (e.g., terminals) and the test functions.
- Perform the sensor test at appropriate intervals on applications.

Automatic test sequence


1. i_bStartTest=ON: o_bS_TestOut=OFF. Start monitoring time.
2. o_bS_TestOut signal stops the light of sensors. (Monitoring of i_dTestTime started for the first time)
3. i_bS_OSSD_In changes from ON to OFF. (Monitoring of i_dTestTime started for the second time)
4. o_bS_TestOut changes from OFF to ON.
5. Restart the light of sensors.
6. i_bS_OSSD_In changes from OFF to ON.
7. Stop monitoring time
8. o_bS_OSSD_Out is set to ON during testing.

State transition of M+SF_TSSSEN_R



Typical timing diagram

■ For M+SF_TSEN_R

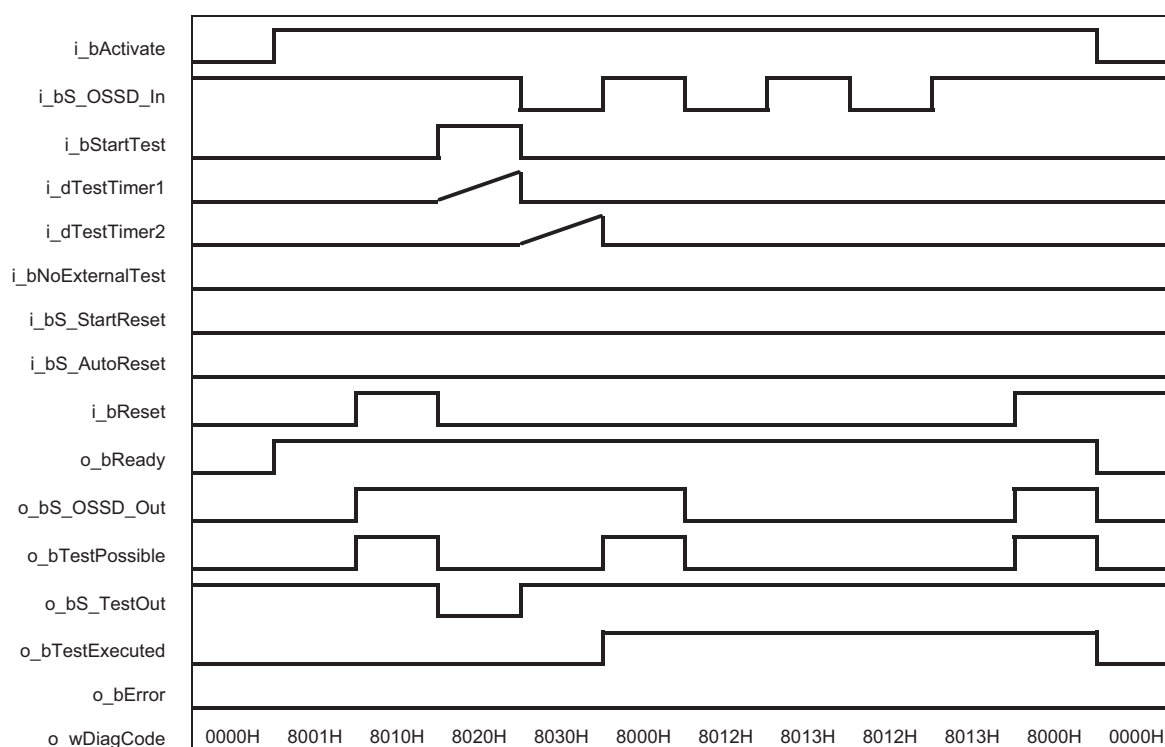

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dTestTimer1 and i_dTestTimer2 elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_OSSD_Out	OFF
o_bS_TestOut	ON
o_bTestPossible	OFF
o_bTestExecuted	OFF
o_bError	ON

The C007H output signal is excluded from the signals in the list. For the output signal status and corrective actions of C007H, see the following.

📖 Page 98 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C000H	Parameter Error	Invalid value at the i_dTestTime parameter. Values between 0ms to 150ms are possible.	Set a proper value for i_dTestTime.
C001H	Reset Error 1	Static i_bReset condition detected after FB activation.	Set i_bReset to OFF. Check the wiring and devices related to i_bReset signal.
C002H	Reset Error 2	Static i_bReset condition detected in state 8003H.	
C003H	Reset Error 3	Static i_bReset condition detected in state C010H.	
C004H	Reset Error 4	Static i_bReset condition detected in state C020H.	
C005H	Reset Error 5	Static i_bReset condition detected in state 8006H.	
C006H	Reset Error 6	Static i_bReset condition detected in state C000H.	
C007H	Reset Error 7	Static i_bReset condition detected in state 8013H. • o_bReady: ON • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: ON • o_bError: ON	
C010H	Test Error 1	i_bS_OSSD_In is not set to OFF during the testing time. (State 8020H)	Check the connected sensors. Remove the error and set i_bReset to ON.
C020H	Test Error 2	i_bS_OSSD_In is not set to ON during the testing time. (State 8030H)	Note: Repeat the automatic test and re-evaluate the result of this repeat test.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	Activation has been detected by the FB. • o_bReady: ON • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: OFF • o_bError: OFF	Set i_bS_OSSD_In and i_bReset to ON.
8002H	ESPE Interrupted 1	The FB has detected a safety demand. The switch has not been automatically tested yet. • o_bReady: ON • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: OFF • o_bError: OFF	Reset the safety demand for the connected safeguard by resetting the interruption of the sensors. Check a failure or an error of the sensor.
8003H	Wait for Reset 1	Wait for rising trigger of i_bReset after state 8002H. • o_bReady: ON • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: OFF • o_bError: OFF	Set i_bReset to ON.

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
8004H	External Function Test	The automatic sensor test was faulty. An external manual sensor test is necessary. (i_bNoExternalTest is OFF.) A negative signal (i_bS_OSSD_In) edge at the sensor is required. <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: OFF o_bS_TestOut: ON o_bTestPossible: OFF o_bTestExecuted: OFF o_bError: OFF 	Generate a safety demand (e.g. across the beam of the sensor).
8005H	ESPE Interrupted External Test	The automatic sensor test was faulty. An external manual sensor test is necessary. (i_bNoExternalTest is OFF.) An ON feedback signal (i_bS_OSSD_In) from the sensor is required. <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: OFF o_bS_TestOut: ON o_bTestPossible: OFF o_bTestExecuted: OFF o_bError: OFF 	Remove the safety demand from the sensor.
8006H	End External Test	The external manual test is complete. <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: OFF o_bS_TestOut: ON o_bTestPossible: OFF o_bTestExecuted: OFF o_bError: OFF 	Set i_bReset to ON.
8010H	ESPE Free No Test	The FB has not detected a safety demand. (The sensor has not been tested automatically.) <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: ON o_bS_TestOut: ON o_bTestPossible: ON o_bTestExecuted: OFF o_bError: OFF 	Execute the automatic test by setting i_bStartReset to ON.
8020H	Test Request	The automatic sensor test is active. The light of sensors is stopped (o_bS_TestOut is set to OFF), and the testing time to wait for the OFF OSSD signal of sensors (i_bS_OSSD_In is set to OFF) is monitored (first time). <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: ON o_bS_TestOut: OFF o_bTestPossible: OFF o_bTestExecuted: OFF o_bError: OFF 	None.
8030H	Test Active	The automatic sensor test is active. The light of sensors is restarted (o_bS_TestOut is set to ON), and the testing time to wait for the ON OSSD signal of sensors (i_bS_OSSD_In is set to ON.) is monitored (second time). <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: ON o_bS_TestOut: ON o_bTestPossible: OFF o_bTestExecuted: OFF o_bError: OFF 	None.
8000H	ESPE Free Test OK	The FB has not detected a safety demand. (The sensor was automatically tested.) <ul style="list-style-type: none"> o_bReady: ON o_bS_OSSD_Out: ON o_bS_TestOut: ON o_bTestPossible: ON o_bTestExecuted: ON o_bError: OFF 	In order to carry out the automatic sensor test again, change i_bStartTest from OFF to ON.

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
8012	ESPE Interrupted 2	<p>The FB has detected a safety demand from the sensor at the status 8000H or 8013H. The switch was automatically tested.</p> <ul style="list-style-type: none"> • o_bReady: ON • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: ON • o_bError: OFF 	Reset the safety demand for the connected safeguard by resetting the interruption of the sensors. Check a failure or an error of the sensor.
8013	Wait for Reset 2	<p>Wait for rising trigger of i_bReset after state 8012H.</p> <ul style="list-style-type: none"> • o_bReady: ON • o_bS_OSSD_Out: OFF • o_bS_TestOut: ON • o_bTestPossible: OFF • o_bTestExecuted: ON • o_bError: OFF 	Set i_bReset to ON.




WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables
- Setting of i_bS_StartReset and i_bS_AutoReset

Application example

An application example of M+SF_TSEN_R is shown below.

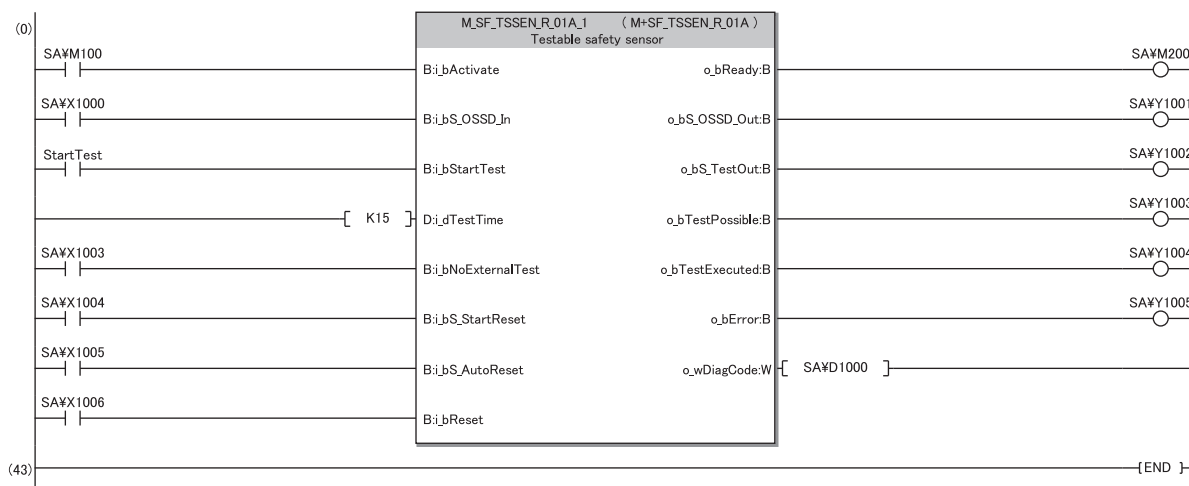

Labels

• Input labels

Variable name	Allocated device/label	Description
i_bActivate	SAIM100	Activation of the safety FB
i_bS_OSSD_In	SAIX1000	Light curtain output signal
i_bStartTest	StartTest (standard/safety shared label)	Start test switch (standard control input)
i_dTestTime	K15	Test time of safety sensor
i_bNoExternalTest	SAIX1003	Manual sensor test status
i_bS_StartReset	SAIX1004	Reset method for the activated safety FB
i_bS_AutoReset	SAIX1005	Reset method for the input signal reset to ON
i_bReset	SAIX1006	Reset switch

• Output labels

Variable name	Allocated device/label	Description
o_bReady	SAIM200	Status of whether the safety FB is activated or not.
o_bS_OSSD_Out	SAIX1001	Light curtain safety demand considering the test
o_bS_TestOut	SAIX1002	Automatic sensor test request
o_bTestPossible	SAIX1003	Possibility of an automatic test
o_bTestExecuted	SAIX1004	Result of an automatic test
o_bError	SAIX1005	Error flag
o_wDiagCode	SAID1000	Diagnostic code

4.15 M+SF_EQUI_R

Overview

Item	Description
Function name	Dual input (NC+NC or NO+NO)
Functional overview	This FB converts two equivalent bit inputs (both NO or NC) to one bit with discrepancy time monitoring. This FB output shows the result of the evaluation of both channels.
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> (1) — B: i_bActivate (2) — B: i_bS_ChannelA (3) — B: i_bS_ChannelB (4) — D: i_dDiscrepancyTime </div> <div style="border: 1px solid black; padding: 5px; text-align: center; flex-grow: 1;"> M+SF_EQUI_R </div> <div style="margin-left: 10px;"> o_bReady: B — (5) o_bS_EquivalentOut: B — (6) o_bError: B — (7) o_wDiagCode: W — (8) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following. Page 11 General Functions
(2)	i_bS_ChannelA	Bit*	OFF	Safety input signal A OFF: Contact A OFF ON: Contact A ON
(3)	i_bS_ChannelB	Bit*	OFF	Safety input signal B OFF: Contact B OFF ON: Contact B ON
(4)	i_dDiscrepancyTime	Double word [signed]	0	Configures the monitoring time for discrepancy status of i_bS_ChannelA and i_bS_ChannelB (in increments of 10ms). Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)

■ Output labels

No.	Variable name	Data type	Default value	Description
(5)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following. Page 11 General Functions
(6)	o_bS_EquivalentOut	Bit*	OFF	Safety output signal. OFF: Either i_bS_ChannelA or i_bS_ChannelB, or both of them are set to OFF. Or, both i_bS_ChannelA and i_bS_ChannelB are set to ON, but the time is out of the monitoring time of i_dDiscrepancyTime. ON: Both i_bS_ChannelA and i_bS_ChannelB have been set to ON within the monitoring time of i_dDiscrepancyTime.
(7)	o_bError	Bit	OFF	Error flag. For details, see the following. Page 11 General Functions
(8)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following. Page 11 General Functions



WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details


o_bs_EquivalentOut is set to ON or OFF as below depending on the status of i_bs_ChannelA and i_bs_ChannelB.

No.	i_bs_ChannelA status	i_bs_ChannelB status	o_bs_EquivalentOut output value
1	OFF	OFF	OFF
2	OFF	ON	OFF
3	ON	OFF	OFF
4	ON	ON	ON

If the status of numbers 2 and 3 listed in the table above continues beyond i_dDiscrepancyTime, the safety FB detects an error and the status becomes error.

State diagram


State transition of M+SF_EQUI_R

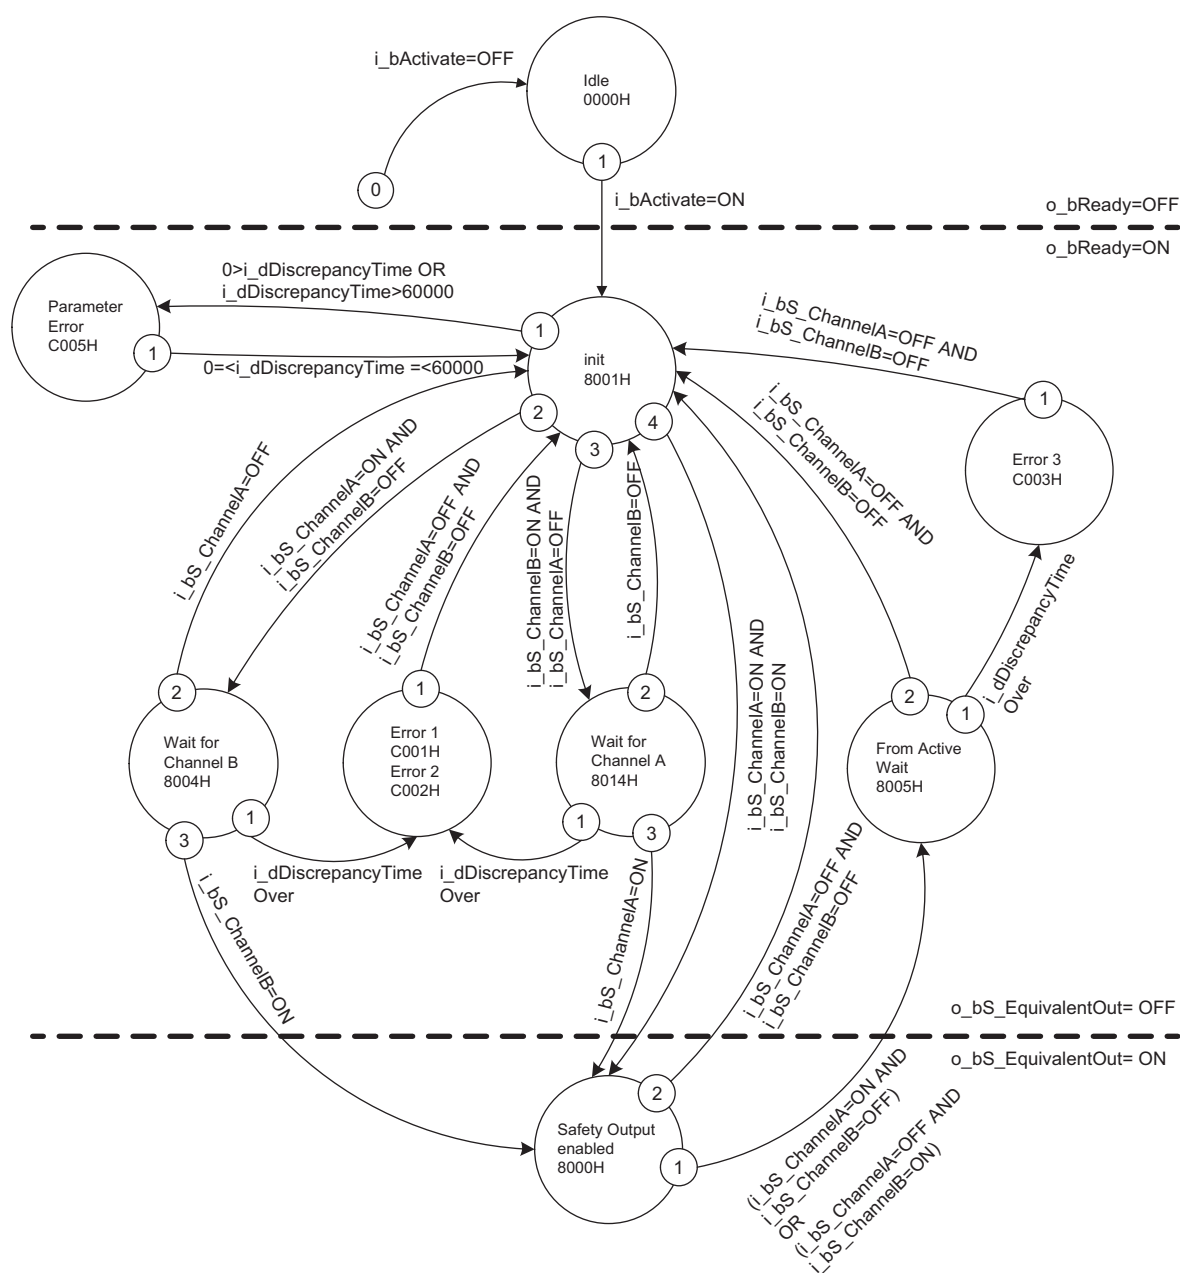

Note 1: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_EQUI_R

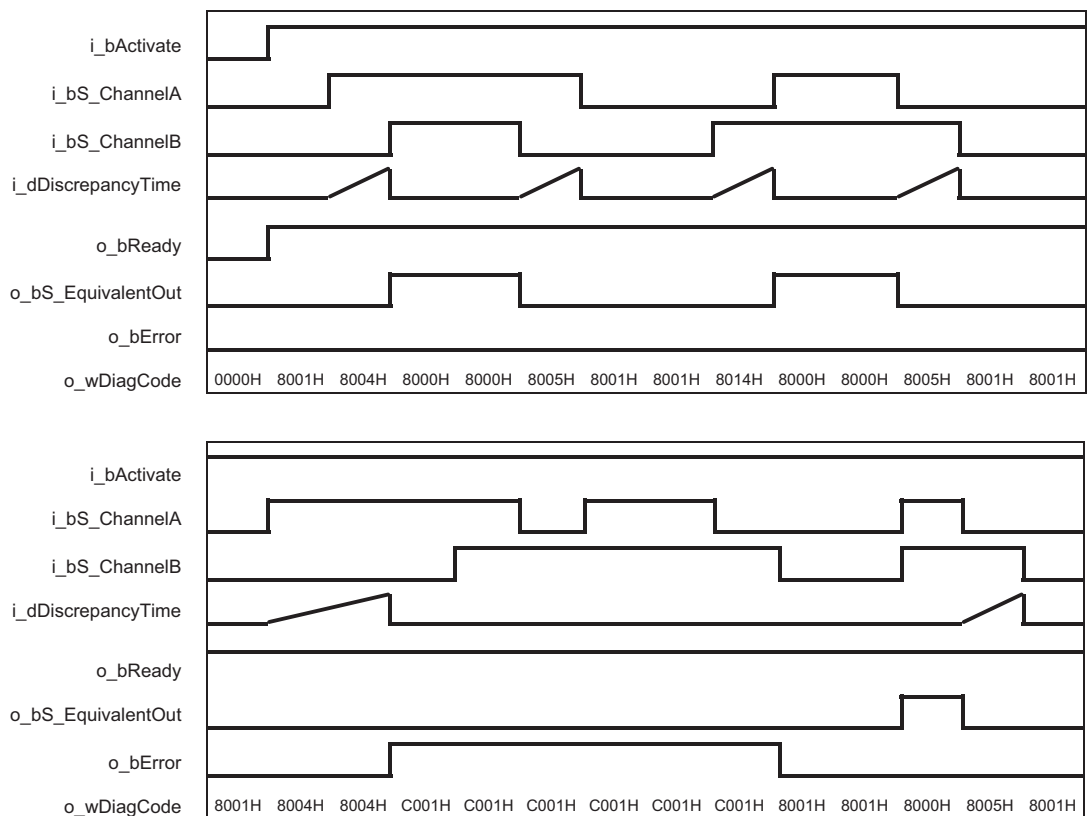

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dDiscrepancyTime elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_EquivalentOut	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 105 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Error 1	i_bS_ChannelA has been switched to ON. Switching i_bS_ChannelB to ON has been waited for, but it has not been switched within the setting value of i_dDiscrepancyTime.	Review the i_dDiscrepancyTime setting value. Set both i_bS_ChannelA and i_bS_ChannelB to OFF.
C002H	Error 2	i_bS_ChannelB has been switched to ON. Switching i_bS_ChannelA to ON has been waited for, but it has not been switched within the setting value of i_dDiscrepancyTime.	
C003H	Error 3	Both i_bS_ChannelA and i_bS_ChannelB are ON and then either one of both has been switched to OFF. Switching the other one to OFF has been waited for, but it has not been switched within the setting value of i_dDiscrepancyTime.	
C005H	Parameter Error	The i_dDiscrepancyTime value is out of the setting range.	Configure the i_dDiscrepancyTime value within the setting range.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_EquivalentOut: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	The FB is active. Activation is ON. • o_bReady: ON • o_bS_EquivalentOut: OFF • o_bError: OFF	Wait for i_bS_ChannelA and i_bS_ChannelB to be set to ON.
8000H	Safety Output Enabled	The safety output is ON. • o_bReady: ON • o_bS_EquivalentOut: ON • o_bError: OFF	None.
8004H	Wait for Channel B	i_bS_ChannelA is ON and i_bS_ChannelB is OFF. State change of i_bS_ChannelB to ON is being waited for. • o_bReady: ON • o_bS_EquivalentOut: OFF • o_bError: OFF	Set i_bS_ChannelB to ON.
8014H	Wait for Channel A	i_bS_ChannelA is OFF and i_bS_ChannelB is ON. State change of i_bS_ChannelA to ON is being waited for. • o_bReady: ON • o_bS_EquivalentOut: OFF • o_bError: OFF	Set i_bS_ChannelA to ON.
8005H	From Active Wait	Both i_bS_ChannelA and i_bS_ChannelB are ON and then either one of both has been switched to OFF. • o_bReady: ON • o_bS_EquivalentOut: OFF • o_bError: OFF	Set both i_bS_ChannelA and i_bS_ChannelB to OFF.




WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables

Application example

An application example of M+SF_EQUI_R is shown below.

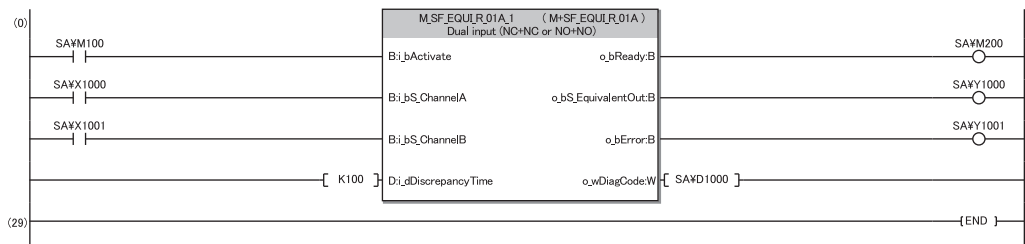

Labels

- Input labels

Variable name	Allocated device/label	Description
i_bActivate	SAIM100	Activation of the safety FB
i_bS_ChannelA	SAIY1000	Safety input signal A
i_bS_ChannelB	SAIY1001	Safety input signal B
i_dDiscrepancyTime	K100	Max. discrepancy time for i_bS_ChannelA and i_bS_ChannelB

- Output labels

Variable name	Allocated device/label	Description
o_bReady	SAIM200	Status of whether the safety FB is activated or not.
o_bS_EquivalentOut	SAIY1000	Safety output signal
o_bError	SAIY1001	Error flag
o_wDiagCode	SAID1000	Diagnostic code


4.16 M+SF_ANTI_R

Overview




Item	Description
Function name	Dual input (NO+NC)
Functional overview	This FB converts two antivalent bit inputs (NO/NC pair) to one bit output with discrepancy time monitoring. The FB output shows the result of the evaluation of both channels.
Symbol	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> (1) — B: i_bActivate (2) — B: i_bS_ChannelINC (3) — B: i_bS_ChannelINO (4) — D: i_dDiscrepancyTime </div> <div style="border: 1px solid black; padding: 5px; text-align: center; flex-grow: 1;"> M+SF_ANTI_R </div> <div style="margin-left: 10px;"> o_bReady: B — (5) o_bS_AntivalentOut: B — (6) o_bError: B — (7) o_wDiagCode: W — (8) </div> </div>

Labels

■ Input labels

No.	Variable name	Data type	Default value	Description
(1)	i_bActivate	Bit	OFF	Activation of the safety FB. For details, see the following.  Page 11 General Functions
(2)	i_bS_ChannelINC	Bit*	OFF	Safety input signal (NC contact) OFF: NC contact open ON: NC contact closed
(3)	i_bS_ChannelINO	Bit*	OFF	Safety input signal (NO contact) OFF: NO contact open ON: NO contact closed
(4)	i_dDiscrepancyTime	Double word [signed]	0	Configures the monitoring time for consistent status of i_bS_ChannelINC and i_bS_ChannelINO (increments of 10ms). Range: Fixed values from 0 to 60000 (0 to 600000ms = 10min)

■ Output labels

No.	Variable name	Data type	Default value	Description
(5)	o_bReady	Bit	OFF	Status of whether the safety FB is activated or not. For details, see the following.  Page 11 General Functions
(6)	o_bS_AntivalentOut	Bit*	OFF	Safety output signal. OFF: Status other than i_bS_ChannelINC=ON or i_bS_ChannelINO=OFF. Or, i_bS_ChannelINC has been set to ON and i_bS_ChannelINO has been set to OFF, but the time is out of the monitoring time of i_dDiscrepancyTime. ON: i_bS_ChannelINC has been set to ON and i_bS_ChannelINO has been set to OFF within the monitoring time of i_dDiscrepancyTime.
(7)	o_bError	Bit	OFF	Error flag. For details, see the following.  Page 11 General Functions
(8)	o_wDiagCode	Word [signed]	0	Diagnostic code. For details, see the following.  Page 11 General Functions



WARNING

- Use safety data for connecting the variable whose data type is "Bit*" to input-output circuits.
- A safety program is executed as a fixed scan execution type program.
- A safety program is executed at a fixed cycle according to a set safety cycle time. The safety FB that monitors the time must meet the following requirements.
 - The timeout processing may be delayed by the safety cycle time by executing the safety program. Set the safety cycle time so the delay by the safety cycle time does not pose a hazard.
 - If the program is executed exceeding the safety cycle processing time, the timeout may be delayed. Ensure that an abnormality does not occur during operation.

FB details


o_bS_AntivalentOut is set to ON or OFF as below depending on the status of i_bS_ChannelINC and i_bS_ChannelNO.

No.	i_bS_ChannelINC status	i_bS_ChannelNO status	o_bS_AntivalentOut output value
1	OFF	OFF	OFF
2	OFF	ON	OFF
3	ON	OFF	ON
4	ON	ON	OFF

If the status of numbers 1 and 4 listed in the table above continues beyond i_dDiscrepancyTime, the safety FB detects an error and the status becomes error.

State diagram


State transition of M+SF_ANTI_R

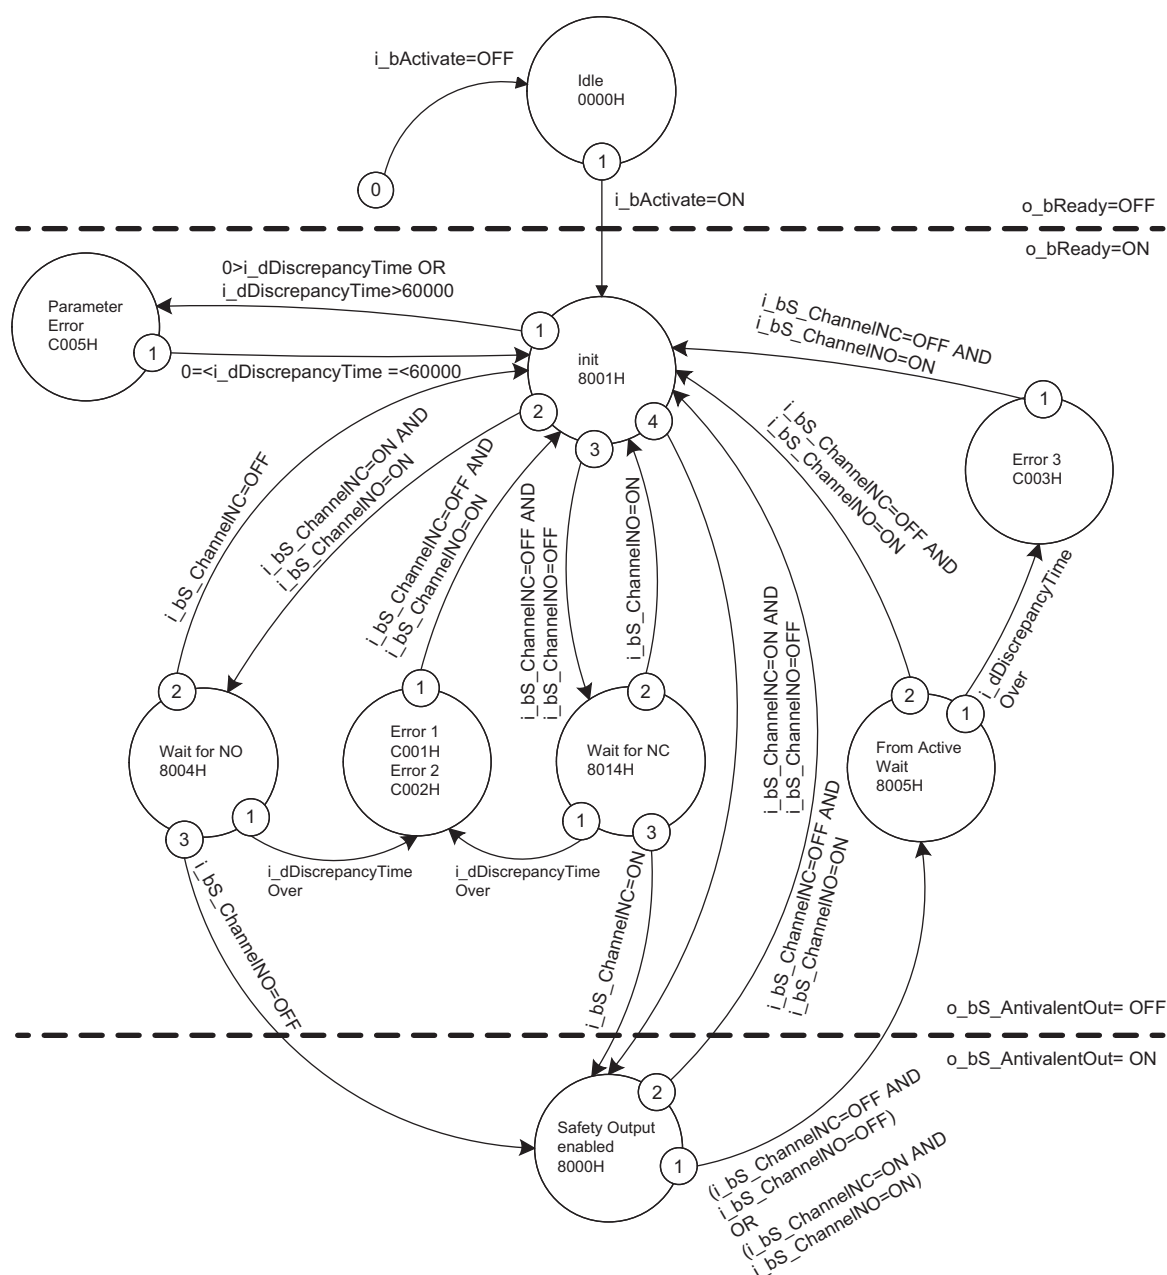

Note 1: The transition from any state to the Idle state due to i_bActivate=OFF is not shown. However these transitions have the highest priority (0).

Typical timing diagram

■ For M+SF_ANTI_R

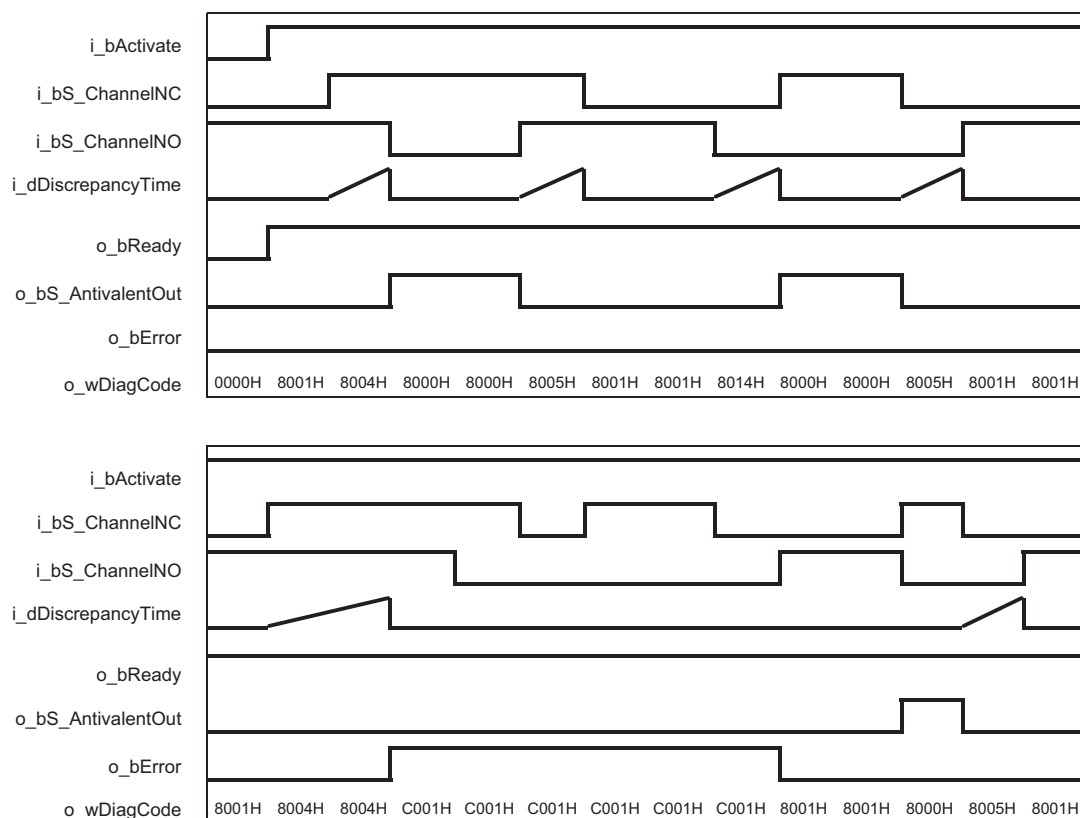

A program operation is suspended while the operation status of the CPU module is in STOP or PAUSE. Consequently, measurement of the i_dDiscrepancyTime elapsed time is stopped.

Error behavior

In the event of an error, the output signals behave as listed below.

Output signal	Status
o_bReady	ON
o_bS_AntivalentOut	OFF
o_bError	ON

For the corrective actions, see the following.

📖 Page 110 List of error codes

List of error codes

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
C001H	Error 1	i_bS_ChannelINC has been switched to ON. Switching i_bS_ChannelINO to OFF has been waited for, but it has not been switched within the setting value of i_dDiscrepancyTime.	Review the i_dDiscrepancyTime setting value. Set i_bS_ChannelINC to OFF and i_bS_ChannelINO to ON.
C002H	Error 2	i_bS_ChannelINO has been switched to OFF. Switching i_bS_ChannelINC to ON has been waited for, but it has not been switched within the setting value of i_dDiscrepancyTime.	
C003H	Error 3	A state where i_bS_ChannelINC=ON and i_bS_ChannelINO=OFF has been switched to the state where both are ON or OFF. Switching the state to the one where i_bS_ChannelINC=OFF and i_bS_ChannelINO=ON has been waited for, but it has not been changed within the setting value of i_dDiscrepancy Time.	
C005H	Parameter Error	The i_dDiscrepancyTime value is out of the setting range.	Configure the i_dDiscrepancyTime value within the setting range.

List of status codes (no error)

o_wDiagCode (Hexadecimal)	State name	Description, output setting	Action
0000H	Idle	The FB is not active. (Initial state) • o_bReady: OFF • o_bS_AntivalentOut: OFF • o_bError: OFF	Initialize the FB by setting i_bActivate to ON.
8001H	Init	The FB is active. Activation is ON. • o_bReady: ON • o_bS_AntivalentOut: OFF • o_bError: OFF	Wait for i_bS_ChannelINC to be set to ON and i_bS_ChannelINO to be set to OFF.
8000H	Safety Output Enabled	The safety output is ON. • o_bReady: ON • o_bS_AntivalentOut: ON • o_bError: OFF	None.
8004H	Wait for NO	i_bS_ChannelINC is ON and i_bS_ChannelINO is also ON. State change of i_bS_ChannelINO to OFF is being waited for. • o_bReady: ON • o_bS_AntivalentOut: OFF • o_bError: OFF	Set i_bS_ChannelINO to OFF.
8014H	Wait for NC	i_bS_ChannelINC is OFF and i_bS_ChannelINO is also OFF. State change of i_bS_ChannelINC to ON is being waited for. • o_bReady: ON • o_bS_AntivalentOut: OFF • o_bError: OFF	Set i_bS_ChannelINC to ON.
8005H	From Active Wait	A state where i_bS_ChannelINC=ON and i_bS_ChannelINO=OFF has been switched to the state where both are ON or OFF. • o_bReady: ON • o_bS_AntivalentOut: OFF • o_bError: OFF	Set i_bS_ChannelINC to OFF and i_bS_ChannelINO to ON.




WARNING

Please do the above actions when the FB detects an error or is in an unexpected state. However, when the situation is still not corrected, please check the following.

- A failure in safety devices and emergency stop devices
- Wiring and status of a safety remote I/O module and a safety programmable controller
- Programming logic, the memory allocation of safety devices, and the connections of safety FB variables

Application example

An application example of M+SF_ANTI_R is shown below.

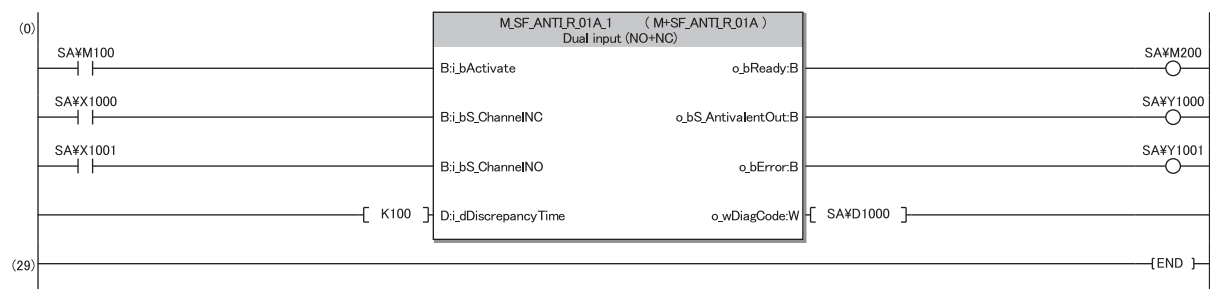

Labels

• Input labels

Variable name	Allocated device/label	Description
i_bActivate	SAIM100	Activation of the safety FB
i_bS_ChannelINC	SAIX1000	Safety input signal (NC contact)
i_bS_ChannelNO	SAIX1001	Safety input signal (NO contact)
i_dDiscrepancyTime	K100	Max. consistent time for i_bS_ChannelINC and i_bS_ChannelNO

• Output labels

Variable name	Allocated device/label	Description
o_bReady	SAIM200	Status of whether the safety FB is activated or not.
o_bS_AntivalentOut	SAIY1000	Safety output signal
o_bError	SAIY1001	Error flag
o_wDiagCode	SAID1000	Diagnostic code

APPENDICES


Appendix 1 Approximate Number of Steps

This section lists the approximate number of steps of safety FBs.

Name	Approximate number of steps*1
M+SF_2HAND2_R	202
M+SF_2HAND3_R	298
M+SF_EDM_R	426
M+SF_ENBLSW_R	206
M+SF_ESPE_R	130
M+SF_ESTOP_R	130
M+SF_GLOCK_R	195
M+SF_GMON_R	257
M+SF_MODSEL_R	325
M+SF_MUTE2_R	470
M+SF_MUTEP_R	896
M+SF_MUTES_R	570
M+SF_OUTC_R	152
M+SF_TSEN_R	397
M+SF_EQUI_R	226
M+SF_ANTI_R	226

*1 The number of steps of a safety FB included in a program varies depending on the CPU module used, I/O definition, and GX Works3 option settings ("Optimize the Number of Steps").

For the options setting of GX Works3, refer to the following.

 GX Works3 Operating Manual

MEMO

A

MEMO

INDEX

D

DiagCode	13
Diagnostic code	6
Dual input (NC+NC or NO+NO)	102
Dual input (NO+NC)	107

E

Emergency stop	38
Enable switch	29
Error code	11
Error flag	13
External device monitor	23

G

Guard lock and interlocking	42
Guard monitoring	48
GX Works3.	5

L

Light	34
Light curtain (ESPE)	34

M

Mode selector	54
Muting with 2 sensors	60

N

NC	5
NO	5

O

Output control	87
--------------------------	----

P

Parallel muting	67
Performance Level (PL).	5

R

Risk.	5
---------------	---

S

Safety application	5
Safety communications	5
Safety control	5
Safety CPU	5
Safety data	5
Safety device	5
Safety FB	6
Safety function module	5
Safety functions	5
Safety input	5
Safety output	5

Safety program.	6
Safety programmable controller	5
Safety related system	5
Safety remote I/O module	5
Safety station	5
Sequential muting.	79
SIL	5
Status code	11

T

Testable safety sensor	93
Two-hand switch Type II	15
Two-hand switch Type III.	19

INSTRUCTION INDEX

M

M+SF_2HAND2_R	15
M+SF_2HAND3_R	19
M+SF_ANTI_R	107
M+SF_EDM_R	23
M+SF_ENBLSW_R	29
M+SF_EQUI_R	102
M+SF_ESPE_R	34
M+SF_ESTOP_R	38
M+SF_GLOCK_R	42
M+SF_GMON_R	48
M+SF_MODSEL_R	54
M+SF_MUTE2_R	60
M+SF_MUTEP_R	67
M+SF_MUTES_R	79
M+SF_OUTC_R	87
M+SF_TSSSEN_R	93

REVISIONS

*The manual number is given on the bottom left of the back cover.

Revision date	*Manual number	Description
March, 2017	BCN-P5999-0815-A	First edition
July 2017	BCN-P5999-0815-B	■Added or modified parts Section 4.10, 4.11, 4.12, 4.14, 4.15, 4.16

Japanese manual number: BCN-P5999-0814-B

This manual confers no industrial property rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2017 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Limited Warranty and Product Support.

- a. Mitsubishi Electric Company ("MELCO") warrants that for a period of eighteen (18) months after date of delivery from the point of manufacture or one year from date of Customer's purchase, whichever is less, Mitsubishi MELSEC Safety programmable logic controllers (the "Products") will be free from defects in material and workmanship.
- b. At MELCO's option, for those Products MELCO determines are not as warranted, MELCO shall either repair or replace them or issue a credit or return the purchase price paid for them.
- c. For this warranty to apply:
 - (1) Customer shall give MELCO (i) notice of a warranty claim to MELCO and the authorized dealer or distributor from whom the Products were purchased, (ii) the notice shall describe in reasonable details the warranty problem, (iii) the notice shall be provided promptly and in no event later than thirty (30) days after the Customer knows or has reason to believe that Products are not as warranted, and (iv) in any event, the notice must be given within the warranty period;
 - (2) Customer shall cooperate with MELCO and MELCO's representatives in MELCO's investigation of the warranty claim, including preserving evidence of the claim and its causes, meaningfully responding to MELCO's questions and investigation of the problem, grant MELCO access to witnesses, personnel, documents, physical evidence and records concerning the warranty problem, and allow MELCO to examine and test the Products in question offsite or at the premises where they are installed or used; and
 - (3) If MELCO requests, Customer shall remove Products it claims are defective and ship them to MELCO or MELCO's authorized representative for examination and, if found defective, for repair or replacement. The costs of removal, shipment to and from MELCO's designated examination point, and reinstallation of repaired or replaced Products shall be at Customer's expense.
 - (4) If Customer requests and MELCO agrees to effect repairs onsite at any domestic or overseas location, the Customer will pay for the costs of sending repair personnel and shipping parts. MELCO is not responsible for any re-commissioning, maintenance, or testing on-site that involves repairs or replacing of the Products.
- d. Repairs of Products located outside of Japan are accepted by MELCO's local authorized service facility centers ("FA Centers"). Terms and conditions on which each FA Center offers repair services for Products that are out of warranty or not covered by MELCO's limited warranty may vary.
- e. Subject to availability of spare parts, MELCO will offer Product repair services for (7) years after each Product model or line is discontinued, at MELCO's or its FA Centers' rates and charges and standard terms in effect at the time of repair. MELCO usually produces and retains sufficient spare parts for repairs of its Products for a period of seven (7) years after production is discontinued.
- f. MELCO generally announces discontinuation of Products through MELCO's Technical Bulletins. Products discontinued and repair parts for them may not be available after their production is discontinued.

2. Limits of Warranties.

- a. MELCO does not warrant or guarantee the design, specify, manufacture, construction or installation of the materials, construction criteria, functionality, use, properties or other characteristics of the equipment, systems, or production lines into which the Products may be incorporated, including any safety, fail-safe and shut down systems using the Products.
- b. MELCO is not responsible for determining the suitability of the Products for their intended purpose and use, including determining if the Products provide appropriate safety margins and redundancies for the applications, equipment or systems into which they are incorporated.
- c. Customer acknowledges that qualified and experienced personnel are required to determine the suitability, application, design, construction and proper installation and integration of the Products. MELCO does not supply such personnel.
- d. MELCO is not responsible for designing and conducting tests to determine that the Product functions appropriately and meets application standards and requirements as installed or incorporated into the end-user's equipment, production lines or systems.
- e. MELCO does not warrant any Product:
 - (1) repaired or altered by persons other than MELCO or its authorized engineers or FA Centers;
 - (2) subjected to negligence, carelessness, accident, misuse, or damage;
 - (3) improperly stored, handled, installed or maintained;
 - (4) integrated or used in connection with improperly designed, incompatible or defective hardware or software;
 - (5) that fails because consumable parts such as batteries, backlights, or fuses were not tested, serviced or replaced;
 - (6) operated or used with equipment, production lines or systems that do not meet applicable and commensurate legal, safety and industry-accepted standards;
 - (7) operated or used in abnormal applications;
 - (8) installed, operated or used in contravention of instructions, precautions or warnings contained in MELCO's user, instruction and/or safety manuals, technical bulletins and guidelines for the Products;
 - (9) used with obsolete technologies or technologies not fully tested and widely accepted and in use at the time of the Product's manufacture;
 - (10) subjected to excessive heat or moisture, abnormal voltages, shock, excessive vibration, physical damage or other improper environment; or
 - (11) damaged or malfunctioning due to Acts of God, fires, acts of vandals, criminals or terrorists, communication or power failures, or any other cause or failure that results from circumstances beyond MELCO's control.
- f. All Product information and specifications contained on MELCO's website and in catalogs, manuals, or technical information materials provided by MELCO are subject to change without prior notice.

- g. The Product information and statements contained on MELCO's website and in catalogs, manuals, technical bulletins or other materials provided by MELCO are provided as a guide for Customer's use. They do not constitute warranties and are not incorporated in the contract of sale for the Products.
- h. These terms and conditions constitute the entire agreement between Customer and MELCO with respect to warranties, remedies and damages and supersede any other understandings, whether written or oral, between the parties. Customer expressly acknowledges that any representations or statements made by MELCO or others concerning the Products outside these terms are not part of the basis of the bargain between the parties and are not factored into the pricing of the Products.
- i. THE WARRANTIES AND REMEDIES SET FORTH IN THESE TERMS ARE THE EXCLUSIVE AND ONLY WARRANTIES AND REMEDIES THAT APPLY TO THE PRODUCTS.
- j. MELCO DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

3. Limits on Damages.

- a. MELCO'S MAXIMUM CUMULATIVE LIABILITY BASED ON ANY CLAIMS FOR BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE, STRICT TORT LIABILITY OR OTHER THEORIES OF RECOVERY REGARDING THE SALE, REPAIR, REPLACEMENT, DELIVERY, PERFORMANCE, CONDITION, SUITABILITY, COMPLIANCE, OR OTHER ASPECTS OF THE PRODUCTS OR THEIR SALE, INSTALLATION OR USE SHALL BE LIMITED TO THE PRICE PAID FOR PRODUCTS NOT AS WARRANTED.
- b. Although MELCO has obtained the certification for Product's compliance to the international safety standards IEC61508 and EN954-1/ISO13849-1 from TUV Rheinland, this fact does not guarantee that Product will be free from any malfunction or failure. The user of this Product shall comply with any and all applicable safety standard, regulation or law and take appropriate safety measures for the system in which the Product is installed or used and shall take the second or third safety measures other than the Product. MELCO is not liable for damages that could have been prevented by compliance with any applicable safety standard, regulation or law.
- c. MELCO prohibits the use of Products with or in any application involving power plants, trains, railway systems, airplanes, airline operations, other transportation systems, amusement equipments, hospitals, medical care, dialysis and life support facilities or equipment, incineration and fuel devices, handling of nuclear or hazardous materials or chemicals, mining and drilling, and other applications where the level of risk to human life, health or property are elevated.
- d. MELCO SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR PUNITIVE DAMAGES, FOR LOSS OF PROFITS, SALES, OR REVENUE, FOR INCREASED LABOR OR OVERHEAD COSTS, FOR DOWNTIME OR LOSS OF PRODUCTION, FOR COST OVERRUNS, OR FOR ENVIRONMENTAL OR POLLUTION DAMAGES OR CLEAN-UP COSTS, WHETHER THE LOSS IS BASED ON CLAIMS FOR BREACH OF CONTRACT OR WARRANTY, VIOLATION OF STATUTE, NEGLIGENCE OR OTHER TORT, STRICT LIABILITY OR OTHERWISE.
- e. In the event that any damages which are asserted against MELCO arising out of or relating to the Products or defects in them, consist of personal injury, wrongful death and/or physical property damages as well as damages of a pecuniary nature, the disclaimers and limitations contained in these terms shall apply to all three types of damages to the fullest extent permitted by law. If, however, the personal injury, wrongful death and/or physical property damages cannot be disclaimed or limited by law or public policy to the extent provided by these terms, then in any such event the disclaimer of and limitations on pecuniary or economic consequential and incidental damages shall nevertheless be enforceable to the fullest extent allowed by law.
- f. In no event shall any cause of action arising out of breach of warranty or otherwise concerning the Products be brought by Customer more than one year after the cause of action accrues.
- g. Each of the limitations on remedies and damages set forth in these terms is separate and independently enforceable, notwithstanding the unenforceability or failure of essential purpose of any warranty, undertaking, damage limitation, other provision of these terms or other terms comprising the contract of sale between Customer and MELCO.

4. Delivery/Force Majeure.

- a. Any delivery date for the Products acknowledged by MELCO is an estimated and not a promised date. MELCO will make all reasonable efforts to meet the delivery schedule set forth in Customer's order or the purchase contract but shall not be liable for failure to do so.
- b. Products stored at the request of Customer or because Customer refuses or delays shipment shall be at the risk and expense of Customer.
- c. MELCO shall not be liable for any damage to or loss of the Products or any delay in or failure to deliver, service, repair or replace the Products arising from shortage of raw materials, failure of suppliers to make timely delivery, labor difficulties of any kind, earthquake, fire, windstorm, flood, theft, criminal or terrorist acts, war, embargoes, governmental acts or rulings, loss or damage or delays in carriage, acts of God, vandals or any other circumstances reasonably beyond MELCO's control.

5. Choice of Law/Jurisdiction.

These terms and any agreement or contract between Customer and MELCO shall be governed by the laws of the State of New York without regard to conflicts of laws. To the extent any action or dispute is not arbitrated, the parties consent to the exclusive jurisdiction and venue of the federal and state courts located in the Southern District of the State of New York. Any judgment there obtained may be enforced in any court of competent jurisdiction.

6. Arbitration.

Any controversy or claim arising out of, or relating to or in connection with the Products, their sale or use or these terms, shall be settled by arbitration conducted in accordance with the Center for Public Resources (CPR) Rules for Non-Administered Arbitration of International Disputes, by a sole arbitrator chosen from the CPR's panels of distinguished neutrals. Judgment upon the award rendered by the Arbitrator shall be final and binding and may be entered by any court having jurisdiction thereof. The place of the arbitration shall be New York City, New York. The language of the arbitration shall be English. The neutral organization designated to perform the functions specified in Rule 6 and Rules 7.7(b), 7.8 and 7.9 shall be the CPR.

TRADEMARKS

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as "™" or "®" are not specified in this manual.

BCN-P5999-0815-B(1707)

MODEL: R-SAFETY-FBR-E

mitsubishi electric corporation

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14 , YADA-MINAMI 5-CHOME , HIGASHI-KU, NAGOYA , JAPAN

When exported from Japan, this manual does not require application to the
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.