


3.3 External Dimensions

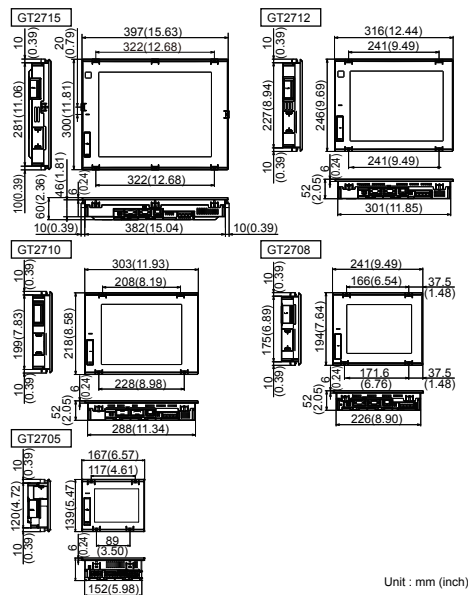

Unit : mm (inch)

4. EMC AND LOW VOLTAGE DIRECTIVE

For the products sold in European countries, the conformance to the EMC Directive, which is one of the European Directives, has been a legal obligation since 1996. Also, conformance to the Low Voltage Directive, another European Directive, has been a legal obligation since 1997.

Manufacturers who recognize their products must conform to the EMC and Low Voltage Directive are required to declare that their products conform to these Directives and put a "CE mark" on their products.

- Authorized representative in Europe
- Authorized representative in Europe is shown below.
- Name : Mitsubishi Electric Europe BV
- Address : Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany

4.1 Requirements to Meet EMC Directive

EMC Directives are those which require "any strong electromagnetic force is not output to the external. Emission (electromagnetic interference)" and "it is not influenced by the electromagnetic wave from the external. Immunity (electromagnetic sensitivity)". Items 4.1.1 through 4.1.3 summarize the precautions to use GOT and configure the mechanical unit in order to match the EMC directives. Though the data described herein are produced with our best on the basis of the requirement items and standards of the restrictions gathered by Mitsubishi, they do not completely guaranteed that all mechanical unit manufactured according to the data do not always match the above.

4.1.1 EMC directive

The standards of the EMC Directive are shown below.

Applied standard	Test standard	Test details	Standard value
EN61131-2 : 2007	CISPR16-2-3 Radiated noise ^{*1}	Electromagnetic emissions from the product are measured.	30M-230MHz QP: 30dB μ V/m (30m in measurement range) ^{*2, *3} 230M-1000MHz QP: 37dB μ V/m (30m in measurement range) ^{*2, *3}
	CISPR16-2-1 Conducted noise ^{*1}	Electromagnetic emissions from the product to the power line is measured.	150K-500kHz QP: 79dB, Mean: 66dB ^{*2} 500K-30MHz QP: 73dB, Mean: 60dB ^{*2}
	IEC61000-4-2 Electrostatic immunity ^{*1}	Immunity test in which static electricity is applied to the cabinet of the equipment.	± 4kV Contact discharge ± 8kV Aerial discharge
	IEC61000-4-3 Radiated electromagnetic field AM modulation	Immunity test in which field is irradiated to the product.	80-1000MHz: 10V/m 1.4-2GHz: 3V/m 2.0-2.7GHz: 1V/m 80%AM modulation @ 1kHz

Applied standard	Test standard	Test details	Standard value
EN61131-2 : 2007	IEC61000-4-4 Fast transient burst noise ^{*1}	Immunity test in which burst noise is applied to the power line and signal lines.	Power line: 2kV Digital I/O: 1kV Analog I/O: 1kV Signal lines: 1kV
	IEC61000-4-5 Surge immunity ^{*1}	Immunity test in which lightning surge is applied to the product.	AC power type Power line (between line and ground): ±2kV Power line (between lines): ±1kV Data communication port: ±1kV DC power type Power line (between line and ground): ±0.5kV Power line (between lines): ±0.5kV Data communication port: ±1kV
	IEC61000-4-6 Conducted RF immunity ^{*1}	Immunity test in which a noise induced on the power and signal lines is applied.	Power line: 10V Data communication port: 10V
	IEC61000-4-8 Power supply frequency magnetic field immunity	Test for checking normal operations under the circumstance exposed to the ferromagnetic field noise of the power supply frequency (50/60Hz).	30 A/m
EN61131-2 : 2007	IEC61000-4-11 Instantaneous power failure and voltage dips immunity	Test for checking normal operations at instantaneous power failure.	AC power type 0.5 cycle 0% (interval 1 to 10s) 250/300 cycle 0% 10/12 cycle 40% 25/30 cycle 70%

*1: The GOT is an open type device (device installed to another device) and must be installed in a conductive control panel.

The above test items are conducted in the condition where the GOT is installed on the conductive control panel and combined with the Mitsubishi PLC.

*2: QP (Quasi-Peak): Quasi-peak value, Mean: Average value

*3: The above test items are conducted in the following conditions.
30M-230MHz QP: 40dB μ V/m (10m in measurement range)
230M-1000MHz QP: 47dB μ V/m (10m in measurement range)

4.1.2 Control panel

The GOT is an open type device (device installed to another device) and must be installed in a conductive control panel. It not only assure the safety but also has a large effect to shut down the noise generated from GOT, on the control panel.

(1) Control Panel

- The control panel must be conductive.
- When fixing a top or bottom plate of the control panel with bolts, do not coat the plate and bolt surfaces so that they will come into contact.

And connect the door and box using a thick grounding cable in order to ensure the low impedance under high frequency.

- When using an inner plate to ensure electric conductivity with the control panel, do not coat the fixing bolt area of the inner plate and control panel to ensure conductivity in the largest area as possible.

- Ground the control panel using a thick grounding cable in order to ensure the low impedance under high frequency.
- The diameter of cable holes in the control panel must be 10cm (3.94in.). In order to reduce the chance of radio waves leaking out, ensure that the space between the control panel and its door is small as possible.

Paste the EMI gasket directly on the painted surface to seal the space so that the leak of electric wave can be suppressed. Our test has been carried out on a panel having the damping characteristics of 37dB max. and 30dB mean (measured by 3m method with 30 to 300MHz).

- Connection of power and ground wires
Ground and power supply wires for the GOT must be connected as described below.

- Provide a grounding point near the GOT. Short-circuit the LG and FG terminals of the GOT (LG: line ground, FG: frame ground) and ground them with the thickest and shortest wire possible (The wire length must be 30cm (11.81in.) or shorter.)
The LG and FG terminals function is to pass the noise generated in the PC system to the ground, so an impedance that is as low as possible must be ensured. As the wires are used to relieve the noise, the wire itself carries a large noise content and thus short wiring means that the wire is prevented from acting as an antenna.

Note) A long conductor will become a more efficient antenna at high frequency.

- The earth wire led from the earthing point must be twisted with the power supply wires.
By twisting with the earthing wire, noise flowing from the power supply wires can be relieved to the earthing. However, if a filter is installed on the power supply wires, the wires and the earthing wire may not need to be twisted.


4.1.3 Noise filter (power supply line filter)

The noise filter (power supply line filter) is a device effective to reduce conducted noise. Except some models, installation of a noise filter onto the power supply lines is not necessary. However conducted noise can be reduced if it is installed. (The noise filter is generally effective for reducing conducted noise in the band of 10MHz or less.) Usage of the following filters is recommended.

Model name	FN343-3/05	FN660-6/06	RSHN-2003
Manufacturer	SCHAFFNER	SCHAFFNER	TDK
Rated current	3A	6A	3A
Rated voltage		250V	

The precautions required when installing a noise filter are described below.

- Do not install the input and output cables of the noise filter together to prevent the output side noise will be inducted into the input side cable where noise has been eliminated by the noise filter.

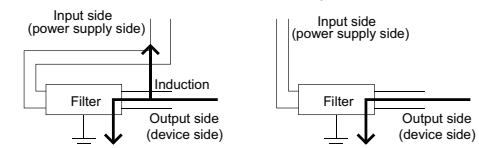

- Install the input and output cables together will cause noise induction.
- Separate the input cable from the output cable.

- Connect the noise filter's ground terminal to the control panel with the shortest cable as possible (approx. 10cm (3.94 in.) or less).

4.2 Requirements for Compliance with the Low Voltage Directive

The Low Voltage Directive requires each device which operates with power supply ranging from 50VAC to 1000V and 75VDC to 1500V to satisfy necessary safety items.

In the Sections from 4.2.1 to 4.2.5, cautions on installation and wiring of the GOT to conform to the Low Voltage Directive requires are described. We have put the maximum effort to develop this material based on the requirements and standards of the Directive that we have collected. However, compatibility of the devices which are fabricated according to the contents of this manual to the above Directive is not guaranteed. Each manufacturer who fabricates such device should make the final judgement about the application method of the Low Voltage Directive and the product compatibility.


4.2.1 Standard subject to GOT

Standard applied to GOT : EN61131-2 Programmable controllers - Equipment requirements and tests
EN60950-1 Safety of Information Technology Equipment

4.2.2 Power supply


The insulation specification of the GOT was designed assuming installation category II. Be sure to use the installation category II power supply to the GOT.

The installation category indicates the durability level against surge voltage generated by lightning strike. Category I has the lowest durability, category IV has the highest durability.

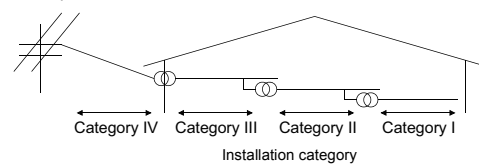

Category II indicates a power supply whose voltage has been reduced by two or more levels of isolating transformers from the public power distribution.

5.2 Panel Cutting Dimensions

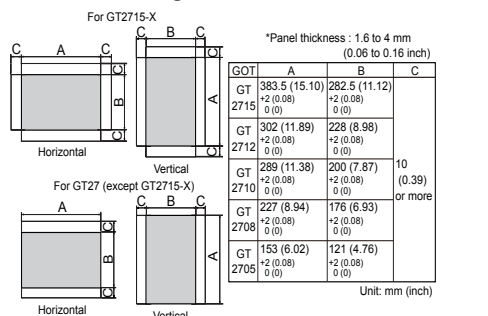


5.3 Mounting Position

When mounting the GOT, the following clearances must be maintained from other structures and devices. Some cables may need to be longer than the specified dimensions when connecting to the GOT.

Therefore, consider the connector dimensions and bending radius of the cable as well for installation.

For the lead-in allowance for cables at the bottom of the GOT, refer to the GOT2000 Series User's Manual (Hardware).

For the vertical installation, install the GOT so that the vertical installation arrow printed on the GOT rear face points upward.

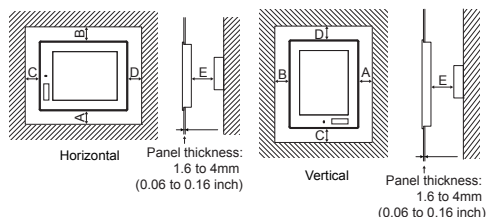

According to the dimensions in the following table, leave clearances between the GOT and the other devices. The values enclosed in square brackets apply to the case where no other equipment generating radiated noise (such as a contactor) or heat is installed near the GOT. However, keep the ambient temperature of the GOT to 55°C or lower.

Item	GT2715	GT2712	GT2710	GT2708	GT2705
GOT only	48(1.89) or more [29(1.14) or more]	48(1.89) or more [29(1.14) or more]	48(1.89) or more [29(1.14) or more]	48(1.89) or more [29(1.14) or more]	59(2.32) or more
Ethernet communication unit is fitted	48(1.89) or more [18(0.71) or more]				
Bus connection unit is fitted	48(1.89) or more [18(0.71) or more]				
Serial connection unit is fitted	48(1.89) or more [18(0.71) or more]				
CC-Link IE communication unit (GT15-J61B113) fitted	48(1.89) or more [18(0.71) or more]				
MELSECNET/H communication unit (coaxial) fitted ^{*1}	48(1.89) or more [18(0.71) or more]	48(1.89) or more [38(1.50) or more]	48(1.89) or more [45(1.77) or more]	67(2.64) or more	81(3.19) or more
MELSECNET/H communication unit (optical) fitted ^{*2}	48(1.89) or more [18(0.71) or more]				
CC-Link IE Controller Network communication unit fitted	48(1.89) or more [18(0.71) or more]				
CC-Link IE Field Network communication unit fitted	48(1.89) or more [18(0.71) or more]				
Video input unit fitted ^{*1}	48(1.89) or more [18(0.71) or more]	48(1.89) or more [38(1.50) or more]	48(1.89) or more [45(1.77) or more]	67(2.64) or more	-
RGB input unit fitted ^{*3}	48(1.89) or more [18(0.71) or more]				
Video/RGB input unit fitted ^{*1,3}	48(1.89) or more [18(0.71) or more]	48(1.89) or more [38(1.50) or more]	48(1.89) or more [45(1.77) or more]	67(2.64) or more	-
RGB output unit fitted ^{*4}	48(1.89) or more [18(0.71) or more]				

Item	GT2715	GT2712	GT2710	GT2708	GT2705
Multimedia unit fitted ^{*1}	48(1.89) or more [18(0.71) or more]	48(1.89) or more [38(1.50) or more]	48(1.89) or more [45(1.77) or more]	67(2.64) or more	-
Printer unit fitted	48(1.89) or more [18(0.71) or more]				
External I/O unit fitted	48(1.89) or more [18(0.71) or more]				
Sound output unit fitted	48(1.89) or more [18(0.71) or more]				
When the SD card is used	50(1.97) or more [20(0.79) or more]				
When the SD card is not used	50(1.97) or more [20(0.79) or more]				
D	Horizontal: 50(1.97) or more [20(0.79) or more] Vertical: 80(3.15) or more [20(0.79) or more]				
E*	100(3.94) or more [20(0.79) or more]				


*1: This value is for use of the coaxial cable 3C-2V (JIS C 3501).
For specifications of the cable, refer to the GOT2000 Series Connection Manual for a controller used.
*2: This value differs depending on the cable used.
*3: This value differs depending on the cable used.
If the bending radius of the cable used is greater than the value specified above, apply the value of the cable used.
*4: When opening or closing the battery cover: 72(2.83) or more

5.4 Control Panel Inside Temperature and Installation Angle

When installing the GOT to a panel, set the display section as shown below. Using the GOT with the installation angle other than the following deteriorates the GOT earlier.

Installing the GOT horizontally
When installing the GOT with the installation angle between 60 to 105°, the temperature inside the control panel must be within 55°C. When installing the GOT with the installation angle other than between 60 to 105°, the temperature inside the control panel must be within 40°C.

Installing the GOT vertically
When the GOT is installed a 90° angle, the control panel inside temperature must be within 55°C. When the GOT is installed at any angle other than 90°, the control panel inside temperature must be within 40°C.

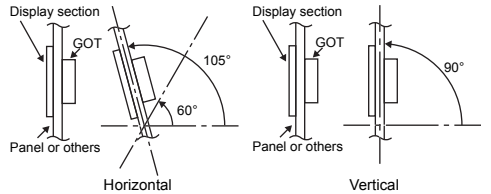


5. INSTALLATION

5.1 Dimensions intérieures du tableau de commande pour le montage du GOT

Installez le GOT sur le tableau de commande en laissant de l'espace pour le dispositif à l'intérieur du tableau de commande. N'installez pas le GOT et le module dans des zones où l'installation est interdite.

Point	GT2715	GT2712	GT2710	GT2708	GT2705
Cable applicable	Certains câbles peuvent être plus longs que les dimensions spécifiées lors de la connexion au GOT. Par conséquent, prenez également en compte les dimensions du connecteur et le rayon de courbure du câble pour l'installation.				


5.2 Cotes de découpe du panneau

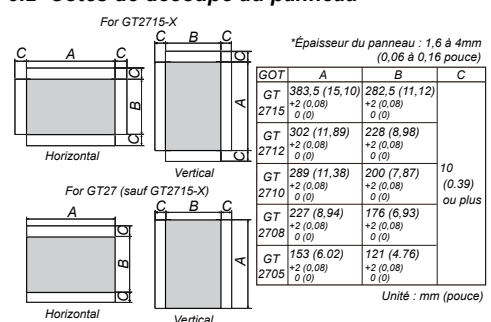

5.3 Position de montage

Lors du montage du GOT, laissez les espaces suivants pour les autres structures et dispositifs. Certains câbles peuvent être plus longs que les dimensions spécifiées lors de la connexion au GOT.

Par conséquent, prenez également en compte les dimensions du connecteur et le rayon de courbure du câble pour l'installation. Pour connaître l'espace à laisser pour les câbles sous le GOT, référez-vous au manuel GOT2000 Series User's Manual (Hardware). Pour l'installation à la verticale, installez le GOT de sorte que la flèche d'installation à la verticale imprimée sur la face arrière du GOT pointe vers le haut.

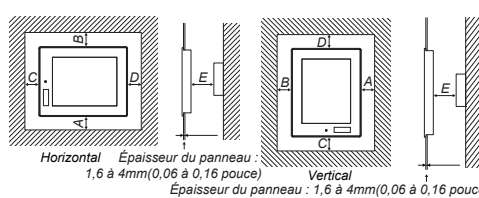

Laissez les espaces entre le GOT et les autres dispositifs en fonction des dimensions contenues dans le tableau suivant. Les valeurs entre parenthèses s'appliquent au cas où aucun dispositif générant des émissions sonores (comme un contacteur) ou de la chaleur n'est installé près du GOT. Toutefois, maintenez la température ambiante du GOT à 55°C ou moins.

Article	GT2715	GT2712	GT2710	GT2708	GT2705
GOT uniquement	48(1.89) or plus [18(0.71) or plus]	48(1.89) or plus [18(0.71) or plus]	48(1.89) or plus [18(0.71) or plus]	48(1.89) or plus [18(0.71) or plus]	59(2.32) or more
Unité de communication Ethernet encastrée	48(1.89) or plus [18(0.71) or plus]				
Unité de connexion de bus encastrée	48(1.89) or plus [18(0.71) or plus]				
Unité de connexion série encastrée	48(1.89) or plus [18(0.71) or plus]				
Module de communication CC-Link (GT15-J61B113) encastré	48(1.89) or plus [18(0.71) or plus]				
Module de communication MELSECNET/H (coaxial) encastré ^{*1}	48(1.89) or more [18(0.71) or more]	48(1.89) or plus [38(1.50) or plus]	48(1.89) or plus [45(1.77) or plus]	67(2.64) or plus	81(3.19) or more
Module de communication MELSECNET/H (optique) encastré ^{*2}	48(1.89) or plus [18(0.71) or plus]				
Module de communication réseau de contrôle CC-Link IE encastré	48(1.89) or plus [18(0.71) or plus]				
Module de communication réseau de champ CC-Link IE encastré	48(1.89) or plus [18(0.71) or plus]				
Module d'entrée vidéo encastré ^{*1}	48(1.89) or more [18(0.71) or more]	48(1.89) or plus [38(1.50) or plus]	48(1.89) or plus [45(1.77) or plus]	67(2.64) or plus	-
Module d'entrée RGB encastré ^{*3}	48(1.89) or plus [18(0.71) or plus]				
Module d'entrée vidéo/RGB encastré ^{*1,3}	48(1.89) or more [18(0.71) or more]	48(1.89) or plus [38(1.50) or plus]	48(1.89) or plus [45(1.77) or plus]	67(2.64) or plus	-
Module de sortie RGB encastré ^{*4}	48(1.89) or plus [18(0.71) or plus]				
Module multimédia encastré ^{*1}	48(1.89) or more [18(0.71) or more]	48(1.89) or plus [38(1.50) or plus]	48(1.89) or plus [45(1.77) or plus]	67(2.64) or plus	-
Imprimante encastrée	48(1.89) or plus [18(0.71) or plus]				
Module d'E/S externe encastré	48(1.89) or plus [18(0.71) or plus]				
Module de sortie acoustique encastré	48(1.89) or plus [18(0.71) or plus]				
Quand la carte SD est utilisée	50(1.97) or plus [20(0.79) or plus]				
Quand la carte SD n'est pas utilisée	50(1.97) or plus [20(0.79) or plus]				
D	Horizontal: 50(1.97) or plus [20(0.79) or plus] Vertical: 80(3.15) or plus [20(0.79) or plus]				
E*	100(3.94) or plus [20(0.79) or plus]				

*1 : Cette valeur est utilisée pour le câble coaxial 3C-2V (JIS C 3501).
Pour connaître les spécifications du câble, référez-vous au manuel GOT2000 Series Connection Manual for a controller used.
*2 : Cette valeur diffère selon le câble utilisé.
*3 : Cette valeur diffère selon le câble utilisé.
*4 : Pour ouvrir ou fermer le couvercle de la batterie : 72 (2,83) ou plus

4.2.3 Control panel

Because the GOT is open type equipment (device designed to be stored within another device), be sure to use it only when installed in a control panel.

- Shock Protection
In order to prevent those who are unfamiliar with power facility, e.g., an operator, from getting a shock, make sure to take the following measures on the control panel.
(a) Store the GOT within the control panel locked, and allow only those who are familiar with power facility to unlock the panel.
(b) Build the structure in order that the power supply will be shut off when the control panel is opened.
- Dustproof and waterproof features
The control panel also provides protection from dust, water and other substances. Insufficient ingress protection may lower the insulation withstand voltage, resulting in insulation destruction. The insulation in the GOT is designed to cope with the pollution level 2, so use in an environment with pollution level 2 or better.

- Pollution level 1: An environment where the air is dry and conductive dust does not exist.
- Pollution level 2: An environment where conductive dust does not usually exist, but occasional temporary conductivity occurs due to the accumulated dust. Generally, this is the level for inside the control panel equivalent a control room or on the floor of a typical factory.
- Pollution level 3: An environment where conductive dust exists and conductivity may be generated due to the accumulated dust. An environment for a typical factory floor.
- Pollution level 4: Continuous conductivity may occur due to rain, snow, etc. An outdoor environment.

4.2.4 Grounding

The following are applicable ground terminals. Use them in the grounded state. Be sure to ground the GOT for ensuring the safety and complying with the EMC Directive.

Functional grounding \perp : Improves the noise resistance.

4.2.5 External wiring

- External devices
When a device with a hazardous voltage circuit is externally connected to the GOT, select a model which complies with the Low Voltage Directive's requirements for isolation between the primary and secondary circuits.
- Insulation requirements
Dielectric withstand voltages are shown in the following table.
Reinforced Insulation Withstand Voltage (Installation Category II, source : IEC6064)

Rated voltage of hazardous voltage area	Surge withstand voltage (1.2/50 μ s)
150 VAC or below	2500V
300 VAC or below	4000V

5. INSTALLATION

5.1 Control Panel Inside Dimensions for Mounting GOT

Install the GOT on the control panel out of the way for the equipment inside the control panel. Do not install the GOT and the unit in prohibited areas for the installation.

Point	GT2715	GT2712	GT2710	GT2708	GT2705
Applicable cable	Some cables may need to be longer than the specified dimensions when connecting to the GOT. Therefore, consider the connector dimensions and bending radius of the cable as well for installation.				

6. MAINTENANCE AND INSPECTION

Refer to the GOT2000 Series User's Manual (Hardware) for maintenance and inspection for the GOT.

Warranty

Mitsubishi Electric will not be held liable for damage caused by factors found not to be the cause of Mitsubishi Electric; machine damage or lost profits caused by faults in the Mitsubishi Electric products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi Electric; damages to products other than Mitsubishi Electric products; and to other duties.

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.