

Note that the \Lambda CAUTION level may lead to a serious accident according to the Always follow the precautions of both levels because they are important to

nersonal safety Please save this manual to make it accessible when required and always forward it to the end use

#### **IDESIGN PRECAUTIONS1**

Do not bundle the control and communication cables with main-circuit, power or othe Run the above cables separately from such wiring and keep them a minimum of 100mm apart. Not doing so noise can cause a malfunction.

## IMOUNTING PRECAUTIONS

| [MOUNTING PRECAUTIONS]  |  |  |  |  |  |  |  |
|---|--|--|--|--|--|--|--|
| <b>∆</b> WARNING  |  |  |  |  |  |  |  |
| <ul> <li>Be sure to shut off all phases of the external power supply used by t<br/>mounting or removing this unit to/from the GOT.<br/>Not doing so can cause a unit failure or malfunction.</li> <li>Before connecting the Bus connection cable to this unit, always shu<br/>and PLC CPU power externally in all phases.<br/>Not doing so can cause a malfunction.</li> </ul>  |  |  |  |  |  |  |  |
|   |  |  |  |  |  |  |  |
| Use this unit in the environment that satisfies the general specification that User's Manual for the GOT used. Not doing so can cause an electric shock, fire, malfunction or product deterioration.     Do not drop the unit or subject it to string shock. A unit damage may result.     When installing this unit to the GOT, fit it to the connection interface tighten the mounting screwal in the specified torque range (0.68h m a Phillips-head screwdriver No. 2. Undertightening can cause a drop, failure or malfunction. Overtightening can cause a drop, failure or malfunction due to screw or the specified to the screw or the screw or method. | ct damage or<br>of the GOT and<br>to 0.48N⋅m) with |  |  |  |  |  |  |
| [WIRING PRECAUTIONS]  |  |  |  |  |  |  |  |
| <b>∆WARNING</b>   |  |  |  |  |  |  |  |
| <ul> <li>Be sure to shut off all phases of the external power supply used by t<br/>wiring.</li> <li>Failure to do so may result in an electric shock, product damage or in</li> </ul>   | ,  |  |  |  |  |  |  |
|   |  |  |  |  |  |  |  |
| <ul> <li>Exercise care to avoid foreign matter such as chips and wire offcuts<br/>Not doing so can cause a fire, failure or malfunction.</li> <li>Make sure to securely connect the cable to the connector of unit.<br/>Incorrect connection may cause malfunctions.</li> </ul>   | entering the unit.                                 |  |  |  |  |  |  |
| STARTUP AND MAINTENANCE PRECAUTION  | DNS]   |  |  |  |  |  |  |
| <b>A</b> WARNING  |  |  |  |  |  |  |  |
| <ul> <li>Before starting cleaning or mounting screw retightening, always shu<br/>externally in all phases.</li> <li>Not doing so can cause a unit failure or malfunction.</li> <li>Tighten the mounting screws in the specified torque range (0.36N·m<br/>a Philips-head screwdriver No. 2.</li> <li>Undertightening can cause the GOT to drop, short circuit or malfunct<br/>Overtightening can cause a drop, short circuit or malfunction due to t<br/>screws or unit.</li> </ul>   | to 0.48N·m) with<br>tion.                          |  |  |  |  |  |  |
| <u>∧</u> CAUTION  |  |  |  |  |  |  |  |
| Do not disassemble or modify the unit.     Doing so can cause a failure, maffunction, injury or fire.     Do not touch the conductive and electronic parts of this unit directly.     Doing so can cause a unit maffunction or failure.     The cables connected to the unit must be run in ducts or clamped.     Not doing so can cause the unit or cable to be damaged due to the -     or accidentalpulling of the cables or can cause a maffunction fault.     When unplugging the cable connected to the unit, do not hold and p     portion.     Doing so can cause the unit or cable to be damaged or can cause a  | a cable  |  |  |  |  |  |  |
| to a cableconnection fault.   |  |  |  |  |  |  |  |

- Do not drop the module or subject it to strong shock. A module damage may result.

Before touching the unit, always touch grounded metals, etc. to discharge static electricity from human body, etc. Not doing so can cause the unit to failure or malfunction.

## [PRECAUTIONS WHEN THE DATA STORAGE IS IN USE]

- When installing a CF card into this unit, insert it into the card slot of this unit until the CF card eject button pops out. Failure to do so may cause a malfunction due to poor contact.
  - Before inserting or removing a CF card into/from this unit, turn the CF card
- access switch off. Failure to do so may corrupt data on the CF card.
- When removing a CF card from the GOT, support it by hand, as it may pop
- Failure to do so may cause the CF card to drop from the unit, resulting in a damage or failure

[DISPOSAL PRECAUTIONS]

When disposing of this product, treat it as industrial waste

## **ITRANSPORTATION PRECAUTIONS1**

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual for the GOT used, as they are precision devices. Failure to do so may cause the unit to fail
- Check if the unit operates correctly after transportation When furning parts that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products Please take necessary precautions to ensure that remaining materials from furnigant do not enter our products, or treat packaging with methods other than furningtion (heat method). than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing product

#### Manual

The following shows manuals relevant to this product

| Manual number<br>(Model code) |
|-------------------------------|
| SH-081194ENG<br>(1D7MJ5)      |
| SH-081200ENG                  |
|                               |

The latest manuals are also available from MITSUBISHI ELECTRIC FA Globa Website (www.MitsubishiElectric.com/fa).

#### Compliance with the EMC and Low Voltage Directives

To configure a system meeting the requirements of the EMC and Low Voltage Directives when incorporating the Mitsubishi GOT (EMC and Low Voltage Directives compliant) into other machinery or equipment, refer to "EMC AND LOW VOLTAGE DIRECTIVES" of the General Description included with the GOT used. The CE mark, indicating compliance with the EMC and Low Voltage Directives, is printed on the rating plate of the GOT.

Compliance with the new China RoHS directive GOT 相关的基于" 电器电子产品有害物质限制使用管理办法" 要求的表示方法



Note: This symbol mark is for China only.

含有有害 6 物质的名称、含有量、含有部件 本产品中所含有的有害 6 物质的名称、含有量、含有部件如下表所示。 产品中有害物质的名称及含量

|                        | 有害物质 |      |      |          |       |        |
|------------------------|------|------|------|----------|-------|--------|
| 部件名称                   | 铅    | 汞    | 镉    | 六价铬      | 多溴联苯  | 多溴二苯醚  |
|                        | (Pb) | (Hg) | (Cd) | (Cr(VI)) | (PBB) | (PBDE) |
| 电路板组件                  | ×    | 0    | 0    | 0        | 0     | 0      |
| 树脂壳体、电缆、膜材             | 0    | 0    | 0    | 0        | 0     | 0      |
| 钣金部件、螺丝等金属部件           | ×    | 0    | 0    | 0        | 0     | 0      |
| 本表格依据 SJ/T11364 的规定编制。 |      |      |      |          |       |        |

〇:表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定的限量要 ※以下。 ※:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限

量要求

## Referenced Standard: GB/T15969.2 (Requirement of Chinese standardized law)


Packing List

| Model      | Product  | Quantity |
|------------|--|----------|
|            | Multimedia unit GT16M-MMR-Z  | 1        |
|            | Video Interface Converter Unit GT27-IF1000   | 1        |
|            | Mounting screw set for Multimedia unit (4<br>screws (40mm), 4 stickers)                | 1        |
| GT27-MMR-Z | Mounting screw set for Video Interface<br>Converter Unit (2 screws (26mm), 2 stickers) | 2        |
|            | Cable clamp (for sound I/O)  | 1        |
|            | GOT2000 Series Multimedia Unit User's<br>Manual (This manual)                          | 1        |

## 1. OVERVIEW

This user's manual describes the GOT2000 Series Multimedia unit (hereinafter referred to as the Multimedia unit). The Multimedia unit is configured with the GT16 Multimedia unit and the Video Interface Converter Unit. ng functions are available by mounting the Multimedia unit on the GT27.

- The GOT displays a video image taken by a video camera, or the GOT Stores the video image as a video file in a CF card and plays the file. When an error occurs, a video image taken 120 seconds before and after the error (up to 240 seconds) can be stored as a video file in a CF card. With the Ethernet connection, the GOT sends a video file to the personal computer using the FTP server function.

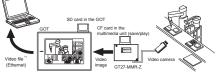

- \*1: To store video files in the personal computer, the FTP server function of the GOT and the multimedia interaction tool are required.
  \*2: Power on the GOT simultaneously with the video camera.
  \*3: Depending on the video camera type, noise from the power supply cable of the video camera may cause malfunction of the GOT or a programmable controller. In this case, attach the following line filter to the power supply line of the video camera.

camera. Recommended line filter: TDK-Lambda RSHN-2003 (or equivalent products) To use the Multimedia unit, set the controller settings. For the settings and system configurations, refer to GOT2000 Series Connection Manual (Microcomputer, MODBUS Products, Peripherals) for GT Works3 Version

For the details of the multimedia function, refer to GT Designer3 (GOT2000) Help

#### 2. SPECIFICATIONS

The following shows the performance specifications of the Multimedia unit. The general specifications of the Multimedia unit are the same as those of the GOT.

For the general specifications of the GOT, refer to the GOT2000 Series User's Manual (Hardware).

| Manual (Hardware). |     |                |
|--------------------|-----|----------------|
| Item               |     | Specifications |
|                    | 0.1 |                |

|                                     | Input                                | Color        | NTSC format, PAL format (interlaced format) |  |
|-------------------------------------|--------------------------------------|--------------|---|--|
| Video input<br>section              | format                               | Monochrome   | EIA format, CCIR format (interlaced format) |  |
|                                     | Number of                            | channels     | 1 channel                                   |  |
|                                     | Video inpu                           | t signal     | IVp-p, 75 Ω, composite signal               |  |
|                                     | Display siz                          | e (dot)      | 640x480<br>768x576 <sup>*1</sup>            |  |
|                                     | Connector                            | for external | BNC connector                               |  |
|                                     | Number of                            | channels     | 1 channel                                   |  |
| Sound input                         | Sound input                          | ut signal    | 1 Vrms                                      |  |
| section                             | Connector                            | for external | $\phi$ 3.5 stereo mini jack, straight type  |  |
|                                     | Number of                            | channels     | 1 channel                                   |  |
| Sound output                        | Sound out                            | out signal   | 1 Vrms (Rated load 10k Ω)                   |  |
| section                             | Connector for external<br>connection |              | $\phi$ 3.5 stereo mini jack, straight type  |  |
| CF Card I/F                         | Slot<br>Mode                         |              | Compact flash Slot (TYPE1) 1 channel        |  |
| section                             |                                      |              | True-IDE mode                               |  |
|                                     | Number of channels                   |              | 1 channel                                   |  |
| Ethernet I/F<br>section             | Connector for external<br>connection |              | RJ-45 (modular jack)                        |  |
|                                     | Data transf                          | fer method   | 100BASE-TX/10BASE-T                         |  |
|                                     | File format                          |              | 3GP, MP4                                    |  |
| Video file                          | format                               | ng/decoding  | MPEG-4 Part.2 SP@LV4                        |  |
|                                     | Resolution<br>frame rate             |              | VGA/15fps, QVGA/30fps                       |  |
| Internal current consumption 3.3VDC |                                      |              | 0.51A                                       |  |
| 5.0VDC                              |                                      |              | 0.49A accompanied with the GT27-IF1000      |  |
| Weight                              |                                      |              | 0.41kg accompanied with the GT27-IF1000     |  |

\*1:Compatible with PAL and CCIR formats only.

# **3. PART NAMES AND EXTERNAL** DIMENSIONS


3.1 Multimedia Unit

5)

CF card access switch

6) CF card access LED

7) CF card interface

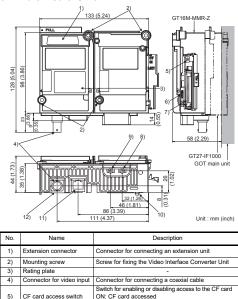

## 4. INSTALLATION AND REMOVAL PROCEDURE


## 4.1 Cable Connection

 Connect the cables of the sound I/O devices to the Multimedia unit.
 Attach the cable clamp to the Multimedia unit. Position the cable clamp band outside, and insert the cable clamp to section A

shown in the following figure until it clicks.

For the band inserting direction, refer to the arrow. (The cable clamp is the SKB-132PWD of SK KOHKI CO., LTD. or corresponding


3) Pull up the two hooks in the extension unit cover (two covers) of the GOT to e the cover toward the opposite side of the cover as a fulcrur

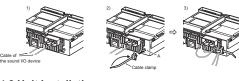


4.2 Unit Installation

The installation procedure for the Multimedia unit is explained using the GT2712.

Turn off the GOT.
 Pull up the two hooks in the extension unit cover (two covers) of the GOT to remove the cover toward the opposite side of the hoots of the cover as a fulcrum.

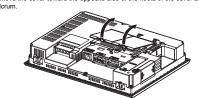

3) Connect the Video Interface Converter Unit to the auxiliary extension interface and the extension interface on the GOT nectina it. tiahten rews (26mm) with a torque o

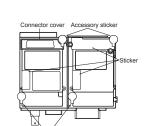


## 4.3 Unit Removal

sticke For removing the Multimedia unit, reverse the procedure of the installation

## Point

- Precautions for connecting sound I/O devices

  Do not connect or disconnect the cables of the sound I/O sections during sound input or output.
- Do not connect devices other than sound I/O devices to the sound I/O sections of the Multimedia unit. Cable clamp
- Cable clamp (1) Removing cable clamp band The cable clamp band can be removed after the cables are fixed. Press the tab of the cable clamp upward using a screwdriver and others,
- and pull out the band.
- (2) Removing cables from the Multimedia unit The cables of the sound I/O devices can be removed from the unit even if the cables are fixed with the cable clamp. Remove the cables by pressing the cable clamp from both directions
- (arrow A).

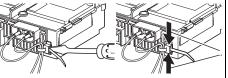

#### Warranty

Mitsubishi Electric will not be held liable for damage caused by factors found not to be the cause of Mitsubishi Electric; machine damage or lost profits caused by faults in the Mitsubishi Electric products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi Electric; damages to products other than Mitsubishi Electric products; and to other duties.

#### ▲ For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life
- human life. Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric. This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

#### Sales office/Tel Cou

Italy

Czech

Korea

USA

- Mitsubishi Electric Automation, Inc. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A. Tel: +1-847-478-2100 Mitsubishi Electric do Brasil Comercio e Servicos Ltda. Avenida Adelino Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazi Tel: +55-11-4689-3000 Brazil
- 16t: 150-11-4089-3000 Misubihi Electric Automation, Inc. Mexico Branch Boulevard Miguel de Carvantes Saavedra 301, Torre Norte Piso 5, Ampli Miguel Hidalgo, Cudada de Mexico, Mexico, C.P. 11520 Tei: 452-563-5067-71520 Misubihi-Electric-Pilat J, 40802 Ratingen, Germany Tei: 449-2102-486-0 Mexic

- Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, UK-Hatfield, Hertfordshire, AL10 8XB, U.K. Tel: +44-1707-28-8780 Mitsubishi Electric -
- Mitsubishi Electric Europe B.V. Italian Branch Centro Direzionale Colleoni Palazzo Sirio, Viale Colleoni 7, 2064 Agrate Brianza (MB), Italy Tel: +39-039-60531
- Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi, 76-80-Apdo. 420, E-08190 Sant Cugat del Valles (Barcelona), Spain Tel: +34-935-65-3131 Mtsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvets, 92741 Nanterre Cedex, France Tel: +33-1-55-68-55-68 France


| 8)  | Sound input terminal  | Terminal for connecting the cable of the sound input device        |
|-----|-----------------------|--|
| 9)  | Sound output terminal | Terminal for connecting the cable of the sound output device       |
| 10) | Video connector       | Video connector connected to the Video Interface<br>Converter Unit |
| 11) | Ethernet interface    | Connector for Ethernet communication                               |
| 12) | Interface connector   | Connector connected to the Video Interface Converter<br>Unit       |

ON: CF card accessed OFF: CF card not accessed

Interface for inserting a CF card


LED lamp lit when the CF card is acces

#### 3.2 Video Interface Converter Unit

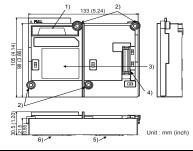


| No. | Name                             | Description  |
|-----|----------------------------------|--|
| 1)  | Extension connector              | Connector for connecting the Multimedia unit       |
| 2)  | Mounting screw                   | Screw for fixing the RGB output unit               |
| 3)  | Rating plate                     | -  |
| 4)  | Video connector                  | Video connector for connecting the Multimedia unit |
| 5)  | Auxiliary extension<br>connector | Auxiliary extension connector connected to the GOT |
| 6)  | Interface connector              | Connector connected to the GOT                     |



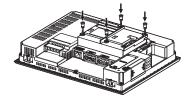

4) Fit the Multimedia unit in the Video Interface Converter Unit case Tighten four mounting screws (40mm) of Multimedia unit with a torque of 0.36N·m to 0.48N·m to fix the unit.

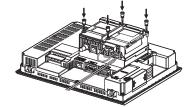


6) For mounting any extension unit on Multimedia unit, remove the connector cover and the stickers

For mounting no extension unit on the Multimedia unit, cover over four mounting screws with the accessory stickers to the Multimedia unit or the Video Interface Converter Unit to avoid static electricity. Keep the connector cover fixed. Keep all the stickers fixed.

## 5. CF CARD INSTALLATION/REMOVAL PROCEDURE

## 5.1 Installation

1) Open the CF card cover, and turn off the CF card access switch of the unit

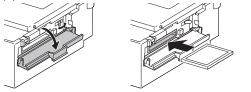


2) Insert a CF card into the CF card interface with the front side facing up on the CF card ac switch

## 5.2 Removal

1) Open the CF card cover. Turn off the CF card access switch, and check that the CF card access LED

turns off. (When the CF card access LED is off, the CF card can be removed even while the GOT power is on

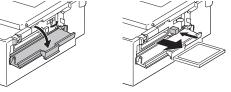

2) Press the CF card eject button to pop out the CF card, and remove the card.

Mitsubishi Electric Europe B.V. Czech Branch Pekarska 621/7, 155 00 Praha 5, Czech Republic Tel: +420-255 719 200

- Tel: +420-255 719 200 Mitsubishi Electric Turkey A.S. Umraniye Branch Serifali Mahallesi Nutuk Sokak No:5, TR-34775 Umraniye / Istanbul, Turkey Tel: +90-216-526-3990 Mitsubishi Electric Europe B.V. Polish Branch ul: Krakowska 48, 32-083 Balice, Poland Tel: +48-123-47-65-00 Turkey
- Poland
- Mitsubishi Electric (Russia) LLC St. Petersburg Branch Piskarevsky pr. 2, bld 2, lit "Sch", BC "Benua", office 720; 195027 St. Petersburg, Russia Tel: +7-812-633-3497
- Adroit Technologies 20 Waterford Office Park, 189 Witkoppen Road, Fourways, South Africa Tel: +27-11-658-8100
- Misubishi Electric Automation (China) Ltd. Mitsubishi Electric Automation Center, No.1386 Hongqiao Road, Shanghai, China Tei: +86-21-4322-3030
- SETSUYO ENTERPRISE CO., LTD. 6F. No 105, Wugong 3tr Road, Wugu District, New Taipei City 24889, Taiwan Tel: +882-2299-2499
- Mitsubishi Electric Automation Korea Co., Ltd. 7F to 9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea Tel: +822-3060-3659
- Mitsubishi Electric Asia Pte. Ltd. 307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943 Tel: +65-6473-2308 Singapore
- 181: 105-04 / 3-2300 Mitsubishi Electric Factory Automation (Thailand) Co., Ltd. 12th Floor, SV.City Building, Office Tower 1, No. 896/19 and 20 Rama 3 Road, Kwaeng Bangpongpang, Khet Yannawa, Bangkok 10120, Thailand Thailand Kwaeng Bangpongpang, Tel: +66-2682-6522 to 31
- PT. Mitsubishi Electric Indonesia Gedung Jaya 8th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia Tel: +62-21 3192-6461
- 1et: +0-227 3192-2461 Mitsubiki Electric Vietnam Company Limited 11th & 12th Floor, Vietell Tower B, 285 Cach Mang Thang & Street, Ward 12, District 10, Ho Chi Mhnh CRy, Vietnam. Tel: +84-28-3910-5945 Mitsubiki Electric India PvL Ld. Pune Branch Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune 411026, Maharashtra, India Tel: +91-20-210-0200 Vietnam
- India
- MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD. 348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia 761 + 61, 2,9684, 777 Australia

## MITSUBISHI ELECTRIC CORPORATION

: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-831( JRKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA,

When exported from Japan, this manual does not require application to the Ministry omy, Trade and Industry for service transaction permission of Econ

Specifications subject to change without notice. Printed in Japan, February 2021.